



NetScaler 14.1

Contents

NetScaler release notes	64
Getting started with NetScaler	65
Where does a NetScaler appliance fit in the network?	69
How a NetScaler appliance communicates with clients and servers	71
Introduction to the NetScaler product line	78
Install the hardware	80
Access a NetScaler appliance	81
Configure the ADC for the first time	85
Secure your NetScaler deployment	85
Configure high availability	86
Change an RPC node password	90
Configure a FIPS appliance for the first time	92
Common network topologies	95
System management settings	100
System settings	100
Packet forwarding modes	102
Network interfaces	109
Clock synchronization	110
DNS configuration	111
SNMP configuration	112
Verify configuration	117
Load balance traffic on a NetScaler appliance	120
Load balancing	122

Persistence settings	125
Configure features to protect the load balancing configuration	131
A typical load balancing scenario	134
Use case: How to force Secure and HttpOnly cookie options for websites using the NetScaler appliance	137
Accelerate load balanced traffic by using compression	139
Secure load balanced traffic by using SSL	145
Features at a glance	162
Application switching and traffic management features	163
Application acceleration features	168
Application security and firewall features	168
Application visibility feature	171
NetScaler Solutions	173
Setting up NetScaler for Citrix Virtual Apps and Desktops	173
Global Server Load Balancing (GSLB) Powered Zone Preference	175
Anycast support in NetScaler	176
Deploy digital advertising platform on AWS with NetScaler	179
Enhancing Clickstream analytics in AWS using NetScaler	183
NetScaler cloud native solution for microservices based on Kubernetes	193
Kubernetes Ingress solution	197
Service mesh	203
Solutions for observability	204
API gateway for Kubernetes	207
Use NetScaler Console to troubleshoot NetScaler cloud native networking	209

Deploy a NetScaler VPX instance	234
NetScaler VPX support matrix	235
Optimize NetScaler VPX performance on VMware ESX, Linux KVM, and Citrix Hypervisors	242
Support for increasing NetScaler VPX disk space	259
Apply NetScaler VPX configurations at the first boot of the NetScaler appliance in cloud	261
Improve SSL-TPS performance on public cloud platforms	296
Configure simultaneous multithreading for NetScaler VPX on public clouds	297
NetScaler sanity checker tool	301
Install a NetScaler VPX instance on a bare metal server	302
Install a NetScaler VPX instance on Citrix Hypervisor	303
Configure VPX instances to use single root I/O virtualization (SR-IOV) network interfaces	307
Install a NetScaler VPX instance on VMware ESX	312
Configure a NetScaler VPX instance to use VMXNET3 network interface	317
Configure a NetScaler VPX instance to use SR-IOV network interface	329
Configure a NetScaler VPX on ESX hypervisor to use Intel QAT for SSL acceleration in SR-IOV mode	347
Migrating the NetScaler VPX from E1000 to SR-IOV or VMXNET3 Network Interfaces	351
Configure a NetScaler VPX instance to use PCI passthrough network interface	351
Apply NetScaler VPX configurations at the first boot of the NetScaler appliance on VMware ESX hypervisor	356
Install a NetScaler VPX instance on VMware cloud on AWS	364
Install a NetScaler VPX instance on Microsoft Hyper-V server	367
Install a NetScaler VPX instance on Linux-KVM platform	372
Prerequisites for installing a NetScaler VPX instance on Linux-KVM platform	373
Provision the NetScaler VPX instance by using OpenStack	377

Provision the NetScaler VPX instance by using the Virtual Machine Manager	386
Configure a NetScaler VPX instance to use SR-IOV network interfaces	400
Configure a NetScaler VPX on the KVM hypervisor to use Intel QAT for SSL acceleration in SR-IOV mode	411
Configure a NetScaler VPX instance to use PCI passthrough network interfaces	416
Provision the NetScaler VPX instance by using the virsh program	420
Manage the NetScaler VPX guest VMs	423
Provision the NetScaler VPX instance with SR-IOV, on OpenStack	426
Configure a NetScaler VPX instance on KVM to use OVS DPDK-based host interfaces	433
Apply NetScaler VPX configurations at the first boot of the NetScaler appliance on the KVM hypervisor	443
NetScaler VPX on AWS	445
AWS terminology	448
AWS-VPX support matrix	450
Limitations and usage guidelines	454
Prerequisites	456
Configure AWS IAM roles on NetScaler VPX instance	458
How a NetScaler VPX instance on AWS works	469
Deploy a NetScaler VPX standalone instance on AWS	471
Scenario: standalone instance	476
Download a NetScaler VPX license	485
Load balancing servers in different availability zones	491
How high availability on AWS works	491
Deploy a VPX HA pair in the same AWS availability zone	494
High availability across different AWS availability zones	505

Deploy a VPX high-availability pair with elastic IP addresses across different AWS zones	506
Deploy a VPX high-availability pair with private IP addresses across different AWS zones	511
Deploy a NetScaler VPX instance on AWS Outposts	523
Protect AWS API Gateway using the NetScaler Web App Firewall	526
Add back-end AWS Autoscaling service	530
Deploy NetScaler GSLB on AWS	534
Deploy NetScaler Web App Firewall on AWS	549
Configure a NetScaler VPX instance to use SR-IOV network interface	571
Configure a NetScaler VPX instance to use Enhanced Networking with AWS ENA	574
Upgrade a NetScaler VPX instance on AWS	574
Troubleshoot a VPX instance on AWS	579
AWS FAQs	580
Deploy a NetScaler VPX instance on Microsoft Azure	583
Azure terminology	588
Network architecture for NetScaler VPX instances on Microsoft Azure	592
Configure a NetScaler VPX standalone instance	595
Configure multiple IP addresses for a NetScaler VPX standalone instance	610
Configure a high-availability setup with multiple IP addresses and NICs	616
Configure a high-availability setup with multiple IP addresses and NICs by using Power-Shell commands	626
Deploy a NetScaler high-availability pair on Azure with ALB in the floating IP-disabled mode	638
Deploy a NetScaler for Azure DNS private zone	659
Configure a NetScaler VPX instance to use Azure accelerated networking	678
Configure HA-INC nodes by using the NetScaler high availability template with Azure ILB	693

Configure HA-INC nodes by using the NetScaler high availability template for internet-facing applications	706
Configure a high-availability setup with Azure external and internal load balancers simultaneously	717
Install a NetScaler VPX instance on Azure VMware Solution	721
Configure a NetScaler VPX standalone instance on Azure VMware solution	738
Configure a NetScaler VPX high availability setup on Azure VMware solution	740
Configure Azure route server with NetScaler VPX HA pair	742
Add back-end Azure Autoscaling service	746
Azure tags for NetScaler VPX deployment	753
Configure GSLB on NetScaler VPX instances	759
Configure GSLB on an active-standby high-availability setup	768
Deploy NetScaler GSLB on Azure	772
Deploy NetScaler Web App Firewall on Azure	787
Configure address pools intranet IP for a NetScaler Gateway appliance	811
Configure multiple IP addresses for a NetScaler VPX standalone instance by using PowerShell commands	813
Additional PowerShell scripts for Azure deployment	820
Create a support ticket for the VPX instance on Azure	836
Azure FAQs	838
Deploy a NetScaler VPX instance on the Google Cloud Platform	838
Deploy a VPX high-availability pair on Google Cloud Platform	854
Deploy a VPX high-availability pair with external static IP address on the Google Cloud Platform	855
Deploy a single NIC VPX high-availability pair with private IP address on Google Cloud Platform	865

Deploy a VPX high-availability pair with private IP address on Google Cloud Platform	874
Install a NetScaler VPX instance on Google Cloud VMware Engine	883
Add back-end GCP Autoscaling service	902
VIP scaling support for NetScaler VPX instance on GCP	907
Troubleshoot a VPX instance on GCP	914
Jumbo frames on NetScaler VPX instances	915
Automate deployment and configurations of NetScaler	916
FAQs	920
Licensing overview	932
Allocate and apply a license	938
Data governance	950
Introduction to Console Advisory Connect for NetScaler appliances	954
Upgrade and downgrade a NetScaler appliance	958
Before you begin	958
Upgrade considerations for configurations with classic policies	961
Upgrade considerations for customized configuration files in the /etc directory	963
Upgrade considerations - SNMP configuration	967
Download a NetScaler release package	969
Upgrade a NetScaler standalone appliance	969
Downgrade a NetScaler standalone appliance	974
Upgrade a high availability pair	976
In Service Software Upgrade support for high availability for performing zero downtime upgrade	982
Downgrade a high availability pair	988

Troubleshooting issues related to the installation, upgrade, and downgrade processes	989
FAQs	994
New and deprecated commands, parameters, and SNMP OIDs	994
Solutions for Telecom Service Providers	1000
Large Scale NAT	1001
Points to Consider before Configuring LSN	1006
Configuration Steps for LSN	1008
Sample LSN Configurations	1026
Configuring Static LSN Maps	1035
Configuring Application Layer Gateways	1038
Application Layer Gateway for FTP, ICMP, and TFTP Protocols	1038
Application Layer Gateway for PPTP Protocol	1040
Application Layer Gateway for SIP Protocol	1042
Application Layer Gateway for RTSP Protocol	1056
Application Layer Gateway for IPSec Protocol	1059
Logging and Monitoring LSN	1063
TCP SYN Idle Timeout	1087
Overriding LSN configuration with Load Balancing Configuration	1088
Clearing LSN Sessions	1089
Load Balancing SYSLOG Servers	1091
Port Control Protocol	1093
LSN44 in a cluster setup	1096
Dual-Stack Lite	1097
Points to Consider before Configuring DS-Lite	1102

Configuring DS-Lite	1102
Configuring DS-Lite Static Maps	1112
Configuring Deterministic NAT Allocation for DS-Lite	1113
Configuring Application Layer Gateways for DS-Lite	1116
Application Layer Gateway for FTP, ICMP, and TFTP Protocols	1117
Application Layer Gateway for SIP Protocol	1117
Application Layer Gateway for RTSP Protocol	1119
Logging and Monitoring DS-Lite	1122
Port Control Protocol for DS-Lite	1130
Large Scale NAT64	1132
Points to Consider for Configuring Large Scale NAT64	1137
Configuring DNS64	1138
Configuring Large Scaler NAT64	1140
Configuring Application Layer Gateways for Large Scale NAT64	1145
Application Layer Gateway for FTP, ICMP, and TFTP Protocols	1145
Application Layer Gateway for SIP Protocol	1146
Application Layer Gateway for RTSP Protocol	1148
Configuring Static Large Scale NAT64 Maps	1150
Logging and Monitoring Large Scale NAT64	1152
Port Control Protocol for Large Scale NAT64	1165
LSN64 in a cluster setup	1167
Mapping Address and Port using Translation	1168
Telco subscriber management	1171
Subscriber aware traffic steering	1193

Subscriber aware service chaining	1199
Subscriber aware traffic steering with TCP optimization	1205
Policy based TCP profile selection	1209
Load Balance Control-Plane Traffic that is based on Diameter, SIP, and SMPP Protocols	1211
Provide DNS Infrastructure/Traffic Services, such as, Load Balancing, Caching, and Logging for Telecom Service Providers	1212
Provide Subscriber Load Distribution Using GSLB Across Core-Networks of a Telecom Service Provider	1213
Bandwidth Utilization Using Cache Redirection Functionality	1214
NetScaler TCP Optimization	1214
Getting Started	1215
Management Network	1217
Licensing	1218
High Availability	1219
Gi-LAN Integration	1220
TCP optimization configuration	1225
Analytics and Reporting	1231
Real-time Statistics	1231
SNMP	1233
Technical Recipes	1236
Scalability	1238
Optimizing TCP Performance using TCP Nile	1245
Troubleshooting Guidelines	1254
Frequently Asked Questions	1256
NetScaler Video Optimization	1260

Getting Started	1261
Licensing	1265
Configuring Video Optimization over TCP	1266
Configuring Video Optimization over UDP	1276
NetScaler URL Filtering	1282
URL List	1283
URL Categorization	1292
FAQs	1306
Authentication, Authorization, and Auditing	1306
Admin Partition	1307
AppFlow	1310
Call Home	1312
Clustering	1314
Connection Management	1314
Content Switching	1319
Debugging	1323
Hardware	1324
High Availability	1324
Integrated Caching	1324
Install, upgrade, and downgrade	1333
Load Balancing	1343
GUI	1345
SSL	1346
Authentication, authorization, and auditing application traffic	1346

How authentication, authorization, and auditing works	1349
Basic components of authentication, authorization, and auditing configuration	1351
Authentication virtual server	1352
Authorization policies	1359
Authentication profiles	1362
Authentication policies	1363
Users and groups	1373
Authentication methods	1377
nFactor authentication	1379
nFactor concepts, entities, and terminology	1381
Configuring nFactor authentication	1385
NFactor configuration using the latest visualizer	1411
nFactor visualizer for simplified configuration	1421
nFactor Extensibility	1430
Set a cookie using nFactor	1445
Sample deployments using nFactor authentication	1447
How to articles	1448
SAML authentication	1449
NetScaler as a SAML SP	1451
NetScaler as a SAML IdP	1459
Configure SAML single sign-on	1466
Configure Microsoft Entra ID as SAML IdP and NetScaler as SAML SP	1470
More features supported for SAML	1476
OAuth authentication	1483

NetScaler as an OAuth SP	1487
NetScaler as an OAuth IdP	1492
API authentication with the NetScaler appliance	1498
LDAP authentication	1502
Configure LDAP authentication on the NetScaler appliance for management purposes	1516
Configure LDAP after offloading SSL to a load balancing virtual server	1522
RADIUS authentication	1526
RADIUS authentication using TCP or TLS	1531
TACACS authentication	1533
Client certificate authentication	1535
Negotiate authentication	1541
Web authentication	1544
Configure SMS OTP for Web authentication	1546
Forms based authentication	1550
401 based authentication	1552
re-Captcha configuration for nFactor authentication	1553
Native OTP support for authentication	1560
Store OTP secret data in an encrypted format	1574
OTP encryption tool	1576
Recommended native OTP configurations for device registration	1584
Push notification for OTP	1600
Email OTP authentication	1611
re-Captcha configuration for nFactor authentication	1620
Authentication, authorization, and auditing configuration for commonly used protocols	1626

Handling authentication, authorization and auditing with Kerberos/NTLM	1627
How NetScaler implements Kerberos for client authentication	1628
Configuring kerberos authentication on the NetScaler appliance	1631
Configure kerberos authentication on a client	1635
Offload Kerberos authentication from physical servers	1635
Single sign-on types	1639
NetScaler kerberos single sign-on	1639
An overview of NetScaler kerberos SSO	1640
Set up NetScaler SSO	1642
Configure single sign-on	1646
Generate the KCD keytab script	1657
SSO for Basic, Digest, and NTLM authentication	1658
Rewrite for NetScaler Gateway and authentication server generated responses	1662
Content Security Policy response header support for NetScaler Gateway and authentication virtual server-generated responses	1664
Self-service password reset	1667
Web App Firewall protection for VPN virtual servers and authentication virtual servers	1689
Polling during authentication	1698
Session and traffic management	1703
Rate Limiting for NetScaler Gateway	1720
Client source IP address tracking	1726
Authorizing user access to application resources	1727
Audit authenticated sessions	1728
NetScaler as an Active Directory Federation Services proxy	1730

Web Services Federation protocol	1734
Active Directory Federation Service Proxy Integration Protocol compliance	1739
Use an on-premises NetScaler Gateway as the identity provider for Citrix Cloud	1748
Support for active-active GSLB deployments on NetScaler Gateway	1754
Configuration support for SameSite cookie attribute	1755
Authentication, authorization, and auditing configuration for commonly used protocols	1757
Handling authentication, authorization and auditing with Kerberos/NTLM	1758
How NetScaler implements Kerberos for client authentication	1759
Configuring kerberos authentication on the NetScaler appliance	1762
Configure kerberos authentication on a client	1766
Offload Kerberos authentication from physical servers	1766
Troubleshoot authentication and authorization-related issues	1770
Admin partition	1770
NetScaler configurations support in admin partition	1777
Configure admin partitions	1782
VLAN configuration for admin partitions	1792
VXLAN support for admin partitions	1801
SNMP support for admin partitions	1803
Audit log support for admin partitions	1806
Display configured PMAC addresses for shared VLAN configuration	1808
AppExpert	1809
Action analytics	1810
Configure a selector	1811
Configure a stream identifier	1813

View statistics	1815
Group records on attribute values	1818
Clear a stream session	1821
Configure policy for optimizing traffic	1822
How to limit bandwidth consumption per user or client device	1823
AppExpert applications	1826
How AppExpert application works	1828
Customize AppExpert configuration	1829
Configure public endpoints	1829
Configure services and service groups for an application unit	1830
Create application units	1831
Configure application unit rules	1832
Configure policies for application units	1832
Configure application units	1838
Configure public endpoints for an application	1839
Specify the order of evaluation of application units	1840
Configure persistency groups for application units	1840
View AppExpert applications and configure entities by using the application visualizer	1841
Configure user authentication, authorization, and auditing	1842
Monitor a NetScaler application	1843
Delete an AppExpert application	1844
Configure application authentication, authorization, and auditing	1844
Set up a custom NetScaler application	1847
NetScaler Gateway applications	1851

Add intranet subnets	1853
Add other resources	1854
Configure authorization policies	1855
Configure traffic policies	1855
Configure clientless access policies	1856
Configure TCP compression policies	1857
Configure bookmarks	1858
AppQoE	1858
Enable AppQoE	1859
AppQoE actions	1860
AppQoE parameters	1865
AppQoE policies	1866
Entity templates	1868
HTTP callouts	1876
How an HTTP callout works	1876
Notes on the format of HTTP requests and responses	1877
Configure an HTTP callout	1879
Verify the configuration	1887
Invoke an HTTP callout	1888
Avoid HTTP callout recursion	1890
Cache HTTP callout responses	1891
Use Case: Filter clients by using an IP blacklist	1892
Use Case: ESI support for fetching and updating content dynamically	1895
Use Case: Access control and authentication	1897

Use Case: OWA-based spam filtering	1901
Use Case: Dynamiccontent switching	1904
Pattern sets and data sets	1905
How string matching works with pattern sets and data sets	1906
Configure a pattern set	1908
Configure a data set	1914
Use pattern sets and data sets	1920
Sample usage	1920
Variables	1922
Configure and use variables	1923
Use case for caching user privileges	1927
Use case for limiting the number of sessions	1928
Policies and expressions	1930
Introduction to policies and expressions	1931
Advanced policy infrastructure	1932
Advanced policy expressions	1939
Convert policy expressions using the NSPEPI tool	1941
NSPEPI tool unsupported features	1954
Preconfiguration check tool	1957
Classic policy deprecation FAQs	1962
Before you proceed	1963
Configure advanced policy infrastructure	1964
Rules for names in identifiers used in policies	1964
Create or modify a policy	1965

Policy configuration examples	1967
Configure and bind policies with the policy manager	1967
Unbind a policy	1970
Create policy labels	1973
Invoke or remove a policy label or virtual server policy bank	1977
Configure a policy label or virtual server policy bank	1981
Policy tracing	1987
Configure advanced policy expression: Getting started	1990
Basic elements of an advanced policy expression	1991
Compound advanced policy expressions	1996
Specify the character set in expressions	2005
Configure advanced policy expressions in a policy	2008
Configure named advanced policy expressions	2011
Configure advanced policy expressions outside the context of a policy	2013
Advanced policy expressions: Evaluating text	2015
About text expressions	2015
Expression prefixes for text in HTTP requests and responses	2018
Expression prefixes for VPNs and clientless VPNs	2019
Basic operations on text	2019
Complex operations on text	2024
Advanced policy expressions: Working with dates, times, and numbers	2038
Format of dates and times in an expression	2038
Expressions for the NetScaler system time	2039
Expressions for SSL certificate dates	2043

Expressions for HTTP request and response dates	2051
Generate the day of the week, as a string, in short and long formats	2052
Expression prefixes for numeric data other than date and time	2053
Convert numbers to text	2054
Virtual server based expressions	2055
Advanced policy expressions: Parsing HTTP, TCP, and UDP data	2057
About evaluating HTTP and TCP payload	2057
Expressions for identifying the protocol in an incoming IP packet	2058
Expressions for HTTP and cache-control headers	2060
Expressions for extracting segments of URLs	2063
Expressions for HTTP status codes and numeric HTTP payload data other than dates	2065
SIP expressions	2065
Operations for HTTP, HTML, and XML encoding and “safe” characters	2076
Expressions for TCP, UDP, and VLAN data	2079
Expressions for evaluating a DNS message and identifying its carrier protocol	2083
XPath and HTML, XML, or JSON expressions	2086
Encrypt and decrypt XML payloads	2090
Advanced policy expressions: Parsing SSL certificates	2092
Advanced policy expressions: IP and MAC addresses, throughput, VLAN IDs	2098
Advanced policy expressions: Stream analytics functions	2104
Advanced policy expressions: DataStream	2105
Typecasting data	2117
Regular expressions	2118
Basic characteristics of regular expressions	2119

Operations for regular expressions	2120
Summary examples of advanced policy expressions and policies	2121
Tutorial examples of advanced policies for rewrite	2129
Rewrite and responder policy examples	2135
Rate limiting	2138
Configure a stream selector	2139
Configure a traffic rate limit identifier	2140
Configure and bind a traffic rate policy	2142
View the traffic rate	2143
Testing a rate-based policy	2144
Examples of rate-based policies	2145
Sample use cases for rate-based policies	2147
Rate limiting for traffic domains	2149
Configure rate limit at packet level	2151
Responder	2153
Enable the responder feature	2155
Configure a responder action	2156
Configure a responder policy	2163
Bind a responder policy	2165
Set the default action for a responder policy	2168
Responder action and policy examples	2170
Diameter support for responder	2172
RADIUS support for responder	2174
DNS support for the responder feature	2177

MQTT support for responder	2179
How to redirect HTTP request to HTTPS using responder	2182
Troubleshooting	2185
Rewrite	2187
Content-length header behavior in a streaming rewrite action	2219
Rewrite action and policy examples	2222
Example 1: Delete Old X-Forwarded-For and client-IP headers	2223
Example 2: Add a local client-IP header	2225
Example 3: Tag secure and insecure connections	2226
Example 4: Mask the HTTP server type	2227
Example 5: Redirect an external URL to an internal URL	2227
Example 6: Migrate Apache rewrite module rules	2229
Example 7: Marketing keyword redirection	2230
Example 8: Redirect queries to the queried server	2231
Example 9: Home Page Redirection	2232
Example 10: Policy-based RSA encryption	2234
Example 11: Policy-based RSA encryption with no padding operation	2237
Example 12: Configure rewrite to change the host name and URL in client request on NetScaler appliance	2239
URL transformation	2240
Configure URL transformation profiles	2241
Configure URL transformation policies	2244
Globally binding URL transformation policies	2248
RADIUS support for the rewrite feature	2250

Diameter support for rewrite	2255
DNS support for rewrite	2257
MQTT support for rewrite	2259
String maps	2263
URL sets	2267
Getting started	2267
Advanced policy expressions for URL evaluation	2268
Configure URL set	2269
URL pattern semantics	2274
URL Categories	2275
AppFlow	2281
Configuring the AppFlow feature	2286
Exporting performance data of webpages to AppFlow collector	2295
Session reliability on NetScaler high availability pair	2297
API security	2300
Import API Specification	2300
API specification validation	2304
Advanced policy expressions using API specification	2308
API traffic visibility using API specification validation	2312
NetScaler Web App Firewall	2314
FAQs and Deployment Guide	2317
Introduction to NetScaler Web App Firewall	2326
Configuring the Web App Firewall	2340
Enable NetScaler Web App Firewall	2343

The Web App Firewall wizard	2344
Manual configuration	2350
Manual configuration by using the NetScaler GUI	2351
Manual configuration By using the command line interface	2363
Signatures	2365
Manually configuring the signatures feature	2369
Adding or removing a signature object	2369
Configuring or modifying a signatures object	2372
Protecting JSON applications using signatures	2377
Updating a signature object	2384
Signature auto update	2388
Snort rule integration	2394
Exporting a signatures object to a file	2397
Edit signatures to add or modify rules	2397
Add a signature rule category	2399
Add signature rule patterns	2400
Import and merge rules	2404
Signature updates in high availability deployment and build upgrades	2405
Overview of security checks	2406
Top level protections	2409
HTML cross-site scripting check	2410
HTML SQL injection check	2422
SQL grammar-based protection for HTML and JSON payload	2436
Command injection grammar-based protection for HTML payload	2441

Relaxation and deny rules for handling HTML SQL injection attacks	2444
HTML command injection protection check	2447
Custom keyword support for HTML payload	2455
XML external entities (XXE) Attack Protection	2458
Buffer overflow check	2460
Web App Firewall support for Google web toolkit	2466
Cookie Protection	2471
Cookie consistency check	2471
Cookie hijacking protection	2474
SameSite cookie attribute	2484
Data leak prevention checks	2486
Credit card check	2487
Safe object check	2494
Advanced form protection checks	2498
Field formats check	2498
Form field consistency check	2511
CSRF form tagging check	2514
Managing CSRF form tagging check relaxations	2517
URL protection checks	2518
Start URL check	2518
Deny URL check	2522
XML protection checks	2525
XML format check	2525
XML Denial-of-Service check	2526

XML cross-site scripting check	2528
XML SQL injection check	2535
XML attachment check	2545
Web services interoperability check	2546
XML message validation check	2549
XML SOAP fault filtering check	2551
JSON Protection Checks	2551
JSON Denial-of-Service protection check	2552
JSON SQL Injection protection check	2561
JSON Cross-Site Scripting protection check	2566
JSON command injection protection check	2571
Managing content types	2582
Profiles	2587
Creating Web App Firewall profiles	2589
Enforce HTTP RFC compliance	2594
Configuring Web App Firewall profiles	2597
Web Application Firewall profile settings	2601
Changing an Web App Firewall profile type	2606
Exporting and importing an Web App Firewall profile	2607
Ease of troubleshooting with Web Application Firewall logs	2612
File upload protection	2615
Configuring and using the Learning feature	2618
Dynamic profiling	2625
Supplemental Information about profiles	2631

Custom error status and message for HTML, XML, and JSON error object	2637
Policy labels	2639
Policies	2641
Web App Firewall Policies	2641
Creating and configuring Web App Firewall policies	2643
Binding Web App Firewall policies	2648
Viewing a policy bindings	2652
Supplemental information about Web App Firewall policies	2652
Auditing policies	2653
Imports	2656
Import and export files	2659
Global configuration	2662
Engine settings	2663
Confidential fields	2666
Field types	2670
XML content types	2673
JSON content types	2674
Statistics and reports	2676
Web App Firewall logs	2679
Appendices	2692
PCRE character encoding format	2692
Whitehat WASC signature types for WAF use	2695
Streaming support for request processing	2696
Trace HTML requests with security logs	2700

Web App Firewall support for cluster configurations	2702
Debugging and troubleshooting	2704
High CPU	2704
Memory	2706
Large file upload failures	2708
Learning	2708
Signatures	2710
Trace Log	2711
Miscellaneous	2712
References	2713
Use case - Binding Web App Firewall policy to a VPN virtual server	2713
Signature alert Articles	2715
Signature update version 143	2716
Signature update version 142	2718
Signature update version 141	2720
Signature update version 140	2722
Signature update version 139	2725
Signature update version 138	2727
Signature update version 137	2728
Signature update version 136	2730
Signature update version 135	2732
Signature update version 134	2734
Signature update version 133	2735
Signature update version 132	2736

Signature update version 131	2738
Signature update version 130	2739
Signature update version 129	2740
Signature update version 128	2741
Signature update version 127	2744
Signature update version 126	2745
Signature update version 125	2747
Signature update version 124	2749
Signature update version 123	2750
Signature update version 122	2752
Signature update version 121	2752
Signature update version 120	2753
Signature update version 119	2756
Signature update version 118	2758
Signature update version 117	2760
Signature update version 116	2760
Signature update version 115	2761
Signature update version 114	2762
Signature update version 113	2764
Signature update version 112	2767
Signature update version 111	2769
Signature update version 110	2770
Signature update version 109	2775
Signature update version 108	2776

Signature update version 107	2777
Signature update version 106	2778
Bot Management	2782
Bot Detection	2785
Configure bot profile setting	2800
Configure bot signature setting	2815
Bot signature auto update	2822
Bot Management	2824
Bot Management	2824
Bot signature alert Articles	2825
Bot signature update for November 2020	2826
Bot signature update for January 2021	2827
Bot signature update for March 2021	2837
Bot signature update for August 2021	2838
Bot signature update for September 2021	2853
Bot signature update for October 2021	2885
Bot signature update for November 2021	2892
Bot signature update for March 2022	2927
Bot signature update for August 2022	2933
Bot signature update for April 2023	2941
Bot signature update for May 2023	2951
Bot signature update for March 2024	2962
Bot signature update for June 2024	2962
Bot signature update for July 2024	2963

Bot signature update for September 2024	2963
Cache Redirection	2965
Cache redirection policies	2966
Built-in cache redirection policies	2966
Configure a cache redirection policy	2969
Cache redirection configurations	2971
Configure transparent redirection	2972
Enable cache redirection and load balancing	2973
Configure edge mode	2974
Configure a cache redirection virtual server	2975
Bind policies to the cache redirection virtual server	2976
Unbind a policy from a cache redirection virtual server	2977
Create a load balancing virtual server	2978
Configure an HTTP service	2980
Bind/unbind a service to/from a load balancing virtual server	2981
Disable the use the proxy port setting for transparent caching	2983
Assign a port range to the NetScaler appliance	2983
Enable load balancing virtual servers to redirect requests to cache	2984
Configure forward proxy redirection	2985
Create a DNS service	2986
Create a DNS load balancing virtual server	2988
Bind the DNS service to the virtual server	2989
Configure a client web browser to use a forward proxy	2990
Configure reverse proxy redirection	2990

Selective cache redirection	2994
Enable content switching	2995
Configure a load balancing virtual server for the cache	2996
Configure policies for content switching	2997
Configure precedence for policy evaluation	3001
Administer a cache redirection virtual server	3002
View cache redirection virtual server statistics	3003
Enable or disable a cache redirection virtual server	3004
Direct policy requests to cache instead of origin web server	3005
Back up a cache redirection virtual server	3007
Manage client connections for a virtual server	3008
Enable external health check for UDP and non-HTTP TCP virtual servers	3013
N-Tier cache redirection	3014
Configure the upper-tier NetScaler appliances	3020
Configure the lower-tier NetScaler appliances	3022
Translate destination IP address of a request to origin IP address	3023
Clustering	3026
Supportability matrix for NetScaler cluster	3026
Prerequisites	3034
Cluster overview	3035
Synchronization across cluster nodes	3036
Striped, partially striped, and spotted configurations	3038
Communication in a cluster setup	3042
Traffic distribution in a cluster setup	3045

Cluster node groups	3047
Cluster and node states	3048
Routing in a cluster	3048
IP addressing for a cluster	3053
Configuring layer 3 clustering	3055
Setting up a NetScaler cluster	3065
Setting up inter-node communication	3066
Creating a NetScaler cluster	3070
Add a node to the cluster	3075
Viewing the details of a cluster	3079
Distributing traffic across cluster nodes	3081
Using the Equal Cost Multiple Path (ECMP)	3082
Use Case: ECMP with BGP routing	3087
Configuration of cluster ECMP by using Cisco Nexus 7000 switch with routing Protocol	3088
Using cluster link aggregation	3093
Static cluster link aggregation	3097
Dynamic cluster link aggregation	3098
Link redundancy in a cluster with LACP	3100
Using USIP mode in cluster	3101
Managing the NetScaler cluster	3104
Configuring linksets	3105
Node groups for spotted and partially striped configurations	3109
Behavior of node groups	3110
Configuring node groups for spotted and partially striped configurations	3111

Configuring redundancy for node groups	3114
Disabling steering on the cluster backplane	3116
Synchronizing cluster configurations	3117
Synchronizing time across cluster nodes	3119
Synchronizing cluster files	3119
Viewing the statistics of a cluster	3121
Discovering NetScaler appliances	3122
Disabling a cluster node	3123
Removing a cluster node	3124
Removing a node from a cluster deployed using cluster link aggregation	3125
Detecting jumbo probe on a cluster	3126
Route monitoring for dynamic routes in cluster	3127
Monitoring cluster setup using SNMP MIB with SNMP link	3128
Monitoring command propagation failures in a cluster deployment	3130
Graceful shutdown of nodes	3130
Graceful shutdown of services	3134
IPv6 ready logo support for clusters	3137
Managing cluster heartbeat messages	3142
Configure secure heartbeats	3143
Configuring owner node response status	3145
Monitor static route (MSR) support for inactive nodes in a spotted cluster configuration	3146
VRRP interface binding in a single node active cluster	3146
Cluster setup and usage scenarios	3147
Creating a two-node cluster	3147

Migrating an HA setup to a cluster setup	3148
Transitioning between a L2 and L3 Cluster	3153
Setting up GSLB in a cluster	3154
Using cache redirection in a cluster	3159
Using L2 mode in a cluster setup	3159
Using cluster LA channel with linksets	3160
Backplane on LA channel	3161
Common interfaces for client and server and dedicated interfaces for backplane	3162
Common switch for client, server, and backplane	3164
Common switch for client and server and dedicated switch for backplane	3167
Different switch for every node	3170
Sample cluster configurations	3171
Using VRRP in a cluster setup	3175
Monitoring services in a cluster using path monitoring	3179
Backup and restore of cluster setup	3183
Upgrading or downgrading the NetScaler cluster	3187
Operations supported on individual cluster nodes	3190
Support for heterogeneous cluster	3192
FAQs	3193
Troubleshooting the NetScaler cluster	3202
Tracing the packets of a NetScaler cluster	3202
Troubleshooting common issues	3207
Content Switching	3211
Configure basic content switching	3213

Customizing the basic content switching configuration	3230
Content Switching for Diameter Protocol	3234
Protecting the content switching setup against failure	3235
Managing a content switching setup	3242
Managing client connections	3245
Persistence support for content switching virtual server	3249
Troubleshooting	3255
DataStream	3257
Configure database users	3259
Configure a database profile	3261
Configure load balancing for DataStream	3262
Configure content switching for DataStream	3263
Configure monitors for DataStream	3265
Use Case 1: Configure DataStream for a primary/secondary database architecture	3266
Use Case 2: Configure the token method of load balancing for DataStream	3269
Use Case 3: Log MSSQL transactions in transparent mode	3271
Use Case 4: Database specific load balancing	3274
DataStream reference	3284
Domain Name System	3288
Configure DNS resource records	3293
Create SRV records for a service	3294
Create AAAA records for a domain name	3296
Create address records for a domain name	3297
Create MX records for a mail exchange server	3298

Create NS Records for an authoritative server	3299
Create CNAME records for a subdomain	3300
Create NAPTR records for telecommunications domain	3301
Create PTR records for IPv4 and IPv6 addresses	3302
Create SOA records for authoritative information	3303
Create TXT records for holding descriptive text	3304
Create CAA records for a domain name	3306
View DNS statistics	3307
Configure a DNS zone	3308
Configure the NetScaler as an ADNS server	3310
Configure the NetScaler appliance as a DNS proxy server	3315
Configure the NetScaler as an end resolver	3322
Configure the NetScaler appliance as a forwarder	3327
Configure NetScaler as a non-validating security aware stub-resolver	3331
Jumbo frames support for DNS to handle responses of large sizes	3331
Configure DNS logging	3333
Configuring DNS suffixes	3346
DNS ANY query	3347
Configure negative caching of DNS records	3348
Cache EDNS0 client subnet data when the NetScaler appliance is in proxy mode	3351
Domain name system security extensions	3353
Configure DNSSEC	3354
Configure DNSSEC when the NetScaler is authoritative for a zone	3366
Configure DNSSEC for a zone for which the NetScaler is a DNS proxy server	3366

Configure DNSSEC for global server load balancing (GSLB) domain names	3368
Zone maintenance	3369
Offload DNSSEC operations to the NetScaler	3375
Admin partition support for DNSSEC	3376
Supporting wildcard DNS domains	3377
Mitigate DNS DDoS attacks	3378
Use case: Configure the automatic DNSSEC key management feature	3383
Use case: Configure the automatic DNSSEC key management on GSLB deployment	3385
Use case: How to revoke a compromised active key	3388
Federal Information Processing Standards	3389
MPX 14000 FIPS appliances	3390
SDX 14000 FIPS appliances	3406
Limitations	3407
Terminology	3407
Initialize the HSM	3408
Create partitions	3410
Provision a new instance or modify an existing instance and assign a partition	3411
Configure the HSM for an instance on an SDX 14030/14060/14080 FIPS appliance	3412
Create a FIPS key for an instance on an SDX 14030/14060/14080 FIPS appliance	3414
Upgrade the FIPS HSM firmware on a VPX instance	3417
Support for Thales Luna Network hardware security module	3418
Prerequisites	3419
Configure a Thales Luna client on the ADC	3419
Configure Thales Luna HSMs in a high availability setup on the ADC	3422

Other ADC configuration	3425
NetScaler appliances in a high availability setup	3427
Limitations	3427
Appendix	3428
FAQ	3430
Support for Azure Key Vault	3431
NetScaler FIPS FAQ	3446
Firewall Load Balancing	3456
Sandwich Environment	3457
Enterprise Environment	3472
Multiple-Firewall Environment	3483
Global Server Load Balancing	3493
GSLB deployment types	3495
Active-active site deployment	3495
Active-passive site deployment	3497
Parent-child topology deployment using the MEP protocol	3499
GSLB configuration entities	3506
GSLB methods	3508
GSLB algorithms	3510
Static proximity	3511
Dynamic round trip time method	3511
API method	3514
Configure static proximity	3517
Add a location file to create a static proximity database	3517

Add custom entries to a static proximity database	3523
Set location qualifiers	3525
Specify proximity method	3530
Synchronize GSLB static proximity database	3531
Configure site-to-site communication	3532
Configure metrics exchange protocol	3535
Configure GSLB by using a wizard	3541
Configure active-active site	3541
Configure active-passive site	3544
Configure parent-child topology	3548
Configure GSLB entities individually	3551
Configure an authoritative DNS service	3552
Configure a basic GSLB site	3554
Configure a GSLB service	3556
Configure a GSLB service group	3558
Configure a GSLB virtual server	3566
Bind GSLB services to a GSLB virtual server	3571
Bind a domain to a GSLB virtual server	3572
Example of a GSLB setup and configuration	3575
Synchronize the configuration in a GSLB setup	3577
Manual synchronization between sites participating in GSLB	3581
Real-time synchronization between sites participating in GSLB	3584
View GSLB synchronization status and summary	3591
SNMP traps for GSLB configuration synchronization	3594

GSLB dashboard	3596
Monitor GSLB services	3596
How domain name system supports GSLB	3600
Priority order for GSLB services	3607
Upgrade recommendations for GSLB deployment	3615
Use case: Deployment of domain name based autoscale service group	3617
Use case: Deployment of IP address based GSLB service group	3618
How-to articles	3620
Customize your GSLB configuration	3620
How to configure persistence in GSLB	3625
Manage client connections	3630
Configure GSLB for proximity	3639
Protect the GSLB setup against failure	3640
Configure GSLB for disaster recovery	3646
Override static proximity behavior by configuring preferred locations	3651
Configure GSLB service selection using content switching	3653
Configure GSLB for DNS queries with NAPTR records	3656
Configure GSLB for wildcard domain	3659
Use the EDNS0 client subnet option for Global Server Load Balancing	3661
Example of a complete parent-child configuration using the metrics exchange protocol	3665
Link load balancing	3670
Configuring a Basic LLB Setup	3670
Configure RNAT with LLB	3679
Configure a backup route	3682

Resilient LLB deployment scenario	3684
Monitor an LLB setup	3686
Load Balancing	3688
How load balancing works	3689
Set up basic load balancing	3697
Load balance virtual server and service states	3709
Support for load balancing profile	3712
Load balancing algorithms	3716
Least connection method	3719
Round robin method	3724
Least response time method	3726
LRTM method	3731
Hashing methods	3737
Least bandwidth method	3746
Least packets method	3750
Custom load method	3754
Static proximity method	3759
Token method	3760
Least requests method	3763
Configure a load balancing method that does not include a policy	3767
Persistence and persistent connections	3768
About Persistence	3768
Source IP address persistence	3771
HTTP cookie persistence	3772

SSL session ID persistence	3774
Diameter AVP number persistence	3775
Custom server ID persistence	3775
IP address persistence	3777
SIP Call ID persistence	3778
RTSP session ID persistence	3778
Configure URL passive persistence	3779
Configure persistence based on user-defined rules	3780
Configure persistence types that do not require a rule	3782
Configure backup persistence	3784
Configure persistence groups	3785
Share persistent sessions between virtual servers	3787
Configure RADIUS load balancing with persistence	3790
View persistence sessions	3795
Clear persistence sessions	3796
Override persistence settings for overloaded services	3797
Troubleshooting	3799
Insert cookie attributes to ADC generated cookies	3801
Customize a load balancing configuration	3813
Customize the hash algorithm for persistence across virtual servers	3813
Configure the redirection mode	3816
Configure per-VLAN wildcarded virtual servers	3818
Assign weights to services	3818
Configure the MySQL and Microsoft SQL server version setting	3820

Multi-IP virtual servers	3822
Limit the number of concurrent requests on a client connection	3825
Configure diameter load balancing	3826
Configure FIX load balancing	3831
MQTT load balancing	3837
Protect a load balancing configuration against failure	3841
Redirect client requests to an alternate URL	3841
Configure a backup load balancing virtual server	3843
Configure spillover	3845
Connection failover	3851
Flush the surge queue	3856
Manage a load balancing setup	3858
Manage server objects	3859
Manage services	3860
Manage a load balancing virtual server	3861
Load balancing visualizer	3864
Manage client traffic	3866
Configure sessionless load balancing virtual servers	3867
Redirect HTTP requests to a cache	3870
Enable cleanup of virtual server connections	3870
Rewrite ports and protocols for HTTP redirection	3873
Insert IP address and port of a virtual server in the request header	3877
Use a specified source IP for back-end communication	3878
Set a time-out value for idle client connections	3885

Manage RTSP connections	3886
Manage client traffic based on traffic rate	3887
Identify a connection with layer 2 parameters	3887
Configure the Prefer Direct Route option	3888
Use a source port from a specified port range for back-end communication	3889
Configure source IP persistency for back-end communication	3890
Use IPv6 link local addresses on the server side of a load balancing setup	3892
Advanced load balancing settings	3892
Gradually step up the load on a new service with virtual server-level slow start	3893
The no-monitor option for services	3899
Protect applications on protected servers against traffic surges	3901
Enable cleanup of virtual server and service connections	3902
Graceful shutdown of services	3904
Enable or disable persistence session on TROFS services	3908
Direct requests to a custom webpage	3909
Enable access to services when down	3910
Enable TCP buffering of responses	3911
Enable compression	3911
Enable external health check for UDP and non-HTTP virtual servers	3912
Maintain client connection for multiple client requests	3913
Insert the IP address of the client in the request header	3914
Retrieve location details from user IP address using geolocation database	3915
Use the source IP address of the client when connecting to the server	3920

Use client source IP address for back end communication in a v4-v6 load balancing configuration	3921
Configure the source port for server-side connections	3922
Set a limit on the number of client connections	3924
Set a limit on the number of requests per connection to the server	3925
Set a threshold value for the monitors bound to a service	3926
Set a timeout value for idle client connections	3927
Set a timeout value for idle server connections	3927
Set a limit on the bandwidth usage by clients	3928
Redirect client requests to a cache	3929
Retain the VLAN identifier for VLAN transparency	3929
Configure automatic state transition based on percentage health of bound services	3930
Static proximity based on NetScaler location	3931
Built-in monitors	3932
TCP-based application monitoring	3932
SSL service monitoring	3935
HTTP/2 service monitoring	3937
Proxy protocol service monitoring	3938
FTP service monitoring	3941
Secure monitoring of servers by using SFTP	3942
Set SSL parameters on a secure monitor	3943
SIP service monitoring	3944
RADIUS service monitoring	3945
Monitor accounting information delivery from a RADIUS server	3946

DNS and DNS-TCP service monitoring	3947
LDAP service monitoring	3949
MySQL service monitoring	3950
SNMP service monitoring	3951
NNTP service monitoring	3951
POP3 service monitoring	3952
SMTP service monitoring	3953
RTSP service monitoring	3953
ARP request monitoring	3959
Citrix Virtual Desktops Delivery Controller service monitoring	3959
Citrix StoreFront stores monitoring	3961
Oracle ECV service monitoring	3966
Custom monitors	3967
Configure HTTP-inline monitors	3968
Understand user monitors	3969
How to use a user monitor to check websites	3975
Understand the internal dispatcher	3976
Configure user monitor	3978
Understand load monitors	3980
Configure load monitors	3982
Unbind metrics from a metrics table	3983
Configure reverse monitoring for a service	3983
Configure monitors in a load balancing setup	3985
Create monitors	3987

Configure monitor parameters to determine the service health	3989
Bind monitors to services	3990
Modify monitors	3991
Enable and disable monitors	3992
Unbind monitors	3992
Remove monitors	3993
View monitors	3994
Close monitor connections	3995
Ignore the upper limit on client connections for monitor probes	3996
Manage a large scale deployment	3997
Ranges of virtual servers and services	3998
Configure service groups	4000
Manage service groups	4003
Configure a desired set of service group members for a service group in one NITRO API call	4010
Configure automatic domain based service group scaling	4015
Service discovery using DNS SRV records	4021
Translate the IP address of a domain-based server	4027
Mask a virtual server IP address	4028
Configure load balancing for commonly used protocols	4030
Load balance a group of FTP servers	4031
Load balance DNS servers	4033
Load balance domain-name based services	4036
Load balance a group of SIP servers	4039
Load balance RTSP servers	4048

Priority order for load balancing services	4051
Use case 1: SMPP load balancing	4058
Use case 2: Configure rule based persistence based on a name-value pair in a TCP byte stream	4068
Use case 3: Configure load balancing in direct server return mode	4070
Use case 4: Configure LINUX servers in DSR mode	4074
Use case 5: Configure DSR mode when using TOS	4074
Use case 6: Configure load balancing in DSR mode for IPv6 networks by using the TOS field	4080
Use case 7: Configure load balancing in DSR mode by using IP Over IP	4083
Use case 8: Configure load balancing in one-arm mode	4090
Use case 9: Configure load balancing in the inline mode	4092
Use case 10: Load balancing of intrusion detection system servers	4092
Use case 11: Isolating network traffic using listen policies	4096
Use case 12: Configure Citrix Virtual Desktops for load balancing	4102
Use case 13: Configure Citrix Virtual Apps for load balancing	4104
Use case 14: ShareFile wizard for load balancing Citrix ShareFile	4107
Use case 15: Configure layer 4 load balancing on the NetScaler appliance	4113
Troubleshooting	4115
Load balancing FAQs	4120
Networking	4122
IP Addressing	4123
Configuring NetScaler-owned IP addresses	4123
Configuring the NSIP address	4124
Configuring and Managing Virtual IP (VIP) Addresses	4126

Configuring ARP response Suppression for Virtual IP addresses (VIPs)	4131
Configuring Subnet IP Addresses (SNIPs)	4134
Configuring GSLB Site IP Addresses (GSLBIP)	4140
Removing a NetScaler-owned IP address	4140
Configuring Application Access Controls	4141
How the NetScaler Proxies Connections	4144
Enable Use Source IP Mode	4146
Configuring Network Address Translation	4149
Inbound Network Address Translation	4149
Coexistence of INAT and Virtual Servers	4152
Stateless NAT46	4153
DNS64	4158
Stateful NAT64 Translation	4163
RNAT	4167
Configuring Prefix-Based IPv6-IPv4 Translation	4179
IP Prefix NAT	4180
Static ARP	4182
Set the Timeout for Dynamic ARP Entries	4183
Neighbor Discovery	4184
IP Tunnels	4186
Class E IPv4 packets	4193
Monitor the free ports available on a NetScaler appliance for a new back-end connection	4195
Interfaces	4198
Configuring MAC-Based Forwarding	4199

Configure network interfaces	4203
Configuring Forwarding Session Rules	4208
Understanding VLANs	4213
Configuring a VLAN	4215
Configuring VLANs on a Single Subnet	4218
Configuring VLANs on Multiple Subnets	4219
Configuring Multiple Untagged VLANs across Multiple Subnets	4220
Configuring Multiple VLANs with 802.1q Tagging	4221
Associate an IP Subnet with a NetScaler Interface by Using VLANs	4222
NetScaler appliance networking and VLAN best practices	4226
Configuring NSVLAN	4229
Configuring Allowed VLAN List	4231
Configuring Bridge Groups	4233
Configuring virtual MACs	4234
Configuring Link Aggregation	4235
Redundant Interface Set	4243
Binding an SNIP address to an Interface	4248
Monitor the Bridge Table and Changing the Aging time	4252
NetScaler Appliances in Active-Active Mode Using VRRP	4253
Configuring Active-Active Mode	4256
Configuring Send to Master	4259
Configuring VRRP Communication Intervals	4261
Configuring Health Tracking based on Interface State	4268
Delaying Preemption	4271

Keeping a VIP Address in the Backup State	4275
Network Visualizer	4275
Configuring Link Layer Discovery Protocol	4276
Jumbo Frames	4280
Configuring Jumbo Frames Support on a NetScaler Appliance	4280
Use Case 1 –Jumbo to Jumbo Setup	4282
Use Case 2 –Non-Jumbo to Jumbo Setup	4286
Use Case 3 –Coexistence of Jumbo and Non-Jumbo flows on the Same Set of Interfaces	4290
NetScaler Support for Microsoft Direct Access Deployment	4293
Access Control Lists	4295
Simple ACLs and Simple ACL6s	4297
Extended ACLs and Extended ACL6s	4302
MAC Address Wildcard Mask for ACLs	4317
Blocking Traffic on Internal Ports	4318
IP Routing	4319
Configuring Dynamic Routes	4319
Configuring RIP	4322
Configuring OSPF	4325
Configuring BGP	4329
Configuring IPv6 RIP	4343
Configuring IPv6 OSPF	4345
Configuring ISIS	4350
Install Routes to the NetScaler Routing Table	4354
Advertisement of SNIP and VIP Routes to Selective Areas	4355

Configuring Bidirectional Forwarding Detection	4357
Configuring Static Routes	4367
Route Health Injection Based on Virtual Server Settings	4373
Configuring Policy-Based Routes	4375
Policy-Based Routes (PBR) for IPv4 Traffic	4376
Policy-Based Routes (PBR6) for IPv6 Traffic	4383
MAC Address Wildcard Mask for PBRs	4385
Using NULL Policy Based Routes to Drop Outgoing Packets	4387
Traffic distribution in multiple routes based on five tuples information	4388
Troubleshooting Routing Issues	4389
Generic Routing FAQs	4390
Troubleshooting OSPF-Specific Issues	4391
Internet Protocol version 6 (IPv6)	4393
Traffic Domains	4400
Inter Traffic Domain Entity Bindings	4407
virtual MAC Based Traffic Domains	4408
VXLAN	4413
Geneve tunnels	4424
Best practices for network configurations	4426
Configure NetScaler to source FreeBSD data traffic from a SNIP address	4432
Observability	4435
Metrics	4437
Logs	4471
Processed insights	4487

Integration with Prometheus	4495
Monitor NetScaler, applications, and application security using Prometheus	4496
Integration with Splunk	4508
Export metrics directly from NetScaler to Splunk	4509
Export transaction logs directly from NetScaler to Splunk	4511
Export management logs directly from NetScaler to Splunk	4522
Export audit logs and events directly from NetScaler to Splunk	4528
Integration with Elasticsearch	4531
Export transaction logs directly from NetScaler to Elasticsearch	4532
NetScaler advanced analytics	4543
Sample dashboards for endpoints	4551
Sample dashboards on Grafana	4556
Sample dashboards on Splunk	4557
NetScaler metrics reference	4565
Priority Load Balancing	4598
NetScaler Extensions	4601
NetScaler extensions - language overview	4601
Simple types	4602
Variables	4604
Expressions	4605
Assignment	4608
Tables	4608
Control structures	4611
Functions	4614

NetScaler extensions - library reference	4618
NetScaler extensions API reference	4626
Protocol extensions	4633
Protocol extensions - architecture	4634
Protocol extensions - traffic pipeline for user defined TCP client and server behaviors	4636
Protocol extensions - use cases	4638
Tutorial –Add MQTT protocol to the NetScaler appliance by using protocol extensions	4648
Code listing for mqtt.lua	4649
Configure MQTT by using protocol extensions	4653
Configuring SSL offloading for MQTT	4654
Configuring SSL offloading with end-to-end encryption for MQTT	4655
Tutorial - load balancing syslog messages by using protocol extensions	4656
Configuring syslog protocol by using protocol extensions	4659
Protocol extensions command reference	4659
Troubleshooting protocol extensions	4665
Policy extensions	4665
Configuring policy extensions	4667
Policy extensions - use cases	4670
Troubleshooting policy extensions	4677
Optimization	4680
Client keep-alive	4681
HTTP compression	4683
Integrated caching	4692
Configure selectors and basic content groups	4708

Configure policies for caching and invalidation	4719
Cache support for database protocols	4731
Configure expressions for caching policies and selectors	4733
Display cached objects and cache statistics	4751
Improve cache performance	4764
Configure cookies, headers, and polling	4768
Configure integrated cache as a forward proxy	4778
Default settings for the integrated cache	4779
Troubleshooting	4782
Front end optimization	4783
Media classification	4789
Reputation	4793
IP Reputation	4793
SSL offload and acceleration	4802
SSL offloading configuration	4803
Support for TLS 1.3 protocol	4843
How-to articles	4852
SSL certificates	4853
Create a certificate	4854
Install, link, and update certificates	4864
Generate a server test certificate	4896
Import and convert SSL files	4897
Bind an SSL certificate to a virtual server on the NetScaler appliance	4904
Zero-touch certificate management	4906

SSL profiles	4913
SSL profile infrastructure	4914
Secure front-end profile	4939
Appendix A: Sample migration of the SSL configuration after upgrade	4942
Appendix B: Default front-end and back-end SSL profile settings	4943
Legacy SSL profile	4944
Migrate the SSL configuration to the enhanced SSL profile	4948
Certificate revocation lists	4950
Monitor certificate status with OCSP	4957
OCSP stapling	4961
Ciphers available on the NetScaler appliances	4968
ECDHE ciphers	4978
Diffie-Hellman parameters generation and achieving PFS with DHE	4986
Cipher redirection	4988
Use hardware and software to improve ECDHE and ECDSA cipher performance	4990
ECDSA cipher suites support	4992
Configure user-defined cipher groups on the ADC appliance	4996
Server certificate support matrix on the ADC appliance	5000
Client authentication or Mutual TLS (mTLS)	5002
Server authentication	5008
SSL actions and policies	5012
SSL policies	5012
SSL built-in actions and user-defined actions	5014
SSL policy binding	5023

SSL policy labels	5026
Selective SSL logging	5028
Support for DTLS protocol	5034
Support for Intel Coletto and Intel Lewisburg SSL chip-based platforms	5054
Troubleshooting	5066
SSL FAQs	5067
Content inspection	5087
ICAP for remote content inspection	5088
Inline device integration with NetScaler	5097
Integration with IPS or NGFW as inline devices using SSL forward proxy	5111
Integrating NetScaler with passive security devices (Intrusion Detection System)	5126
Integrating NetScaler layer 3 with passive security devices (Intrusion Detection System)	5135
Content inspection statistics for ICAP, IPS, and IDS	5146
SSL forward proxy	5147
Getting started with the SSL forward proxy feature	5148
Proxy modes	5151
SSL interception	5155
User identity management	5172
URL filtering	5177
URL list	5179
URL pattern semantics	5186
Mapping URL categories	5186
Use case: URL filtering by using custom URL set	5186
URL categorization	5189

URL reputation score	5200
Analytics	5202
Use case: Making an enterprise network secure by using ICAP for remote malware inspection	5203
How-to articles	5212
Security	5212
Surge protection	5213
Disable and reenable surge protection	5215
Set thresholds for surge protection	5216
Flush the surge queue	5219
DNS security options	5221
Binary signing and verification for enhanced system security	5226
System	5227
System base operations	5228
Unified configuration file for the NetScaler appliance	5253
System user authentication and authorization	5255
User, user groups, and command policies	5256
User account and password management	5270
How to reset root administrator (nsroot) password	5281
External user authentication	5283
SSH key-based authentication for local system users	5298
Two factor authentication for system users and external users	5301
Restricted system user authentication to NetScaler management interfaces	5317
TCP Configurations	5318
HTTP configurations	5344

HTTP/2 configuration	5352
HTTP/2 DoS mitigation	5362
HTTP3 over QUIC protocol	5364
HTTP/3 configuration and Stat summary	5367
Policy configuration for HTTP/3 traffic	5382
HTTP/3 service discovery	5400
gRPC	5402
gRPC end-to-end configuration	5403
gRPC bridging	5407
gRPC reverse bridging	5414
gRPC call termination	5418
gRPC with rewrite policy	5418
gRPC with the responder policy	5420
gRPC health check monitor	5424
QUIC	5425
QUIC bridge configuration	5426
Proxy protocol	5432
Client IP address in TCP option	5443
SNMP	5448
Configuring the NetScaler to generate SNMP traps	5449
Custom SNMP traps	5454
Custom SNMP OIDs	5457
Configuring NetScaler for SNMP v1 and v2 queries	5459
Configuring NetScaler for SNMPv3 queries	5462

Configuring SNMP Alarms for rate limiting	5466
Configuring SNMP in FIPS mode	5469
Audit logging	5470
Configuring NetScaler appliance for audit logging	5473
Installing and configuring the NSLOG server	5479
Running the NSLOG server	5486
Customizing logging on the NSLOG server	5486
SYSLOG Over TCP	5489
Export syslog securely over SSL	5493
Load balancing SYSLOG servers	5496
Default settings for the log properties	5498
Sample configuration file (audit.conf)	5499
Web server logging	5500
Configuring the NetScaler for web server logging	5500
Installing the NetScaler web logging (NSWL) client	5502
Configure NSWL client	5509
Customize logging on the NSWL client system	5512
Call Home	5530
Reporting tool	5539
CloudBridge Connector	5552
Monitoring CloudBridge Connector tunnels	5554
Configuring a CloudBridge Connector tunnel between two datacenters	5556
Configuring CloudBridge Connector between datacenter and AWS cloud	5563

Configuring a CloudBridge Connector tunnel between a NetScaler appliance and virtual private gateway on AWS	5571
Configuring a CloudBridge Connector tunnel between a datacenter and Azure cloud	5583
Configuring CloudBridge Connector tunnel between datacenter and softlayer enterprise cloud	5595
Configuring a CloudBridge Connector tunnel between a NetScaler appliance and Cisco IOS device	5596
Configuring a CloudBridge Connector tunnel between a NetScaler appliance and fortinet fortiGate appliance	5605
CloudBridge Connector tunnel diagnostics and troubleshooting	5613
CloudBridge Connector interoperability –StrongSwan	5615
CloudBridge Connector interoperability –F5 BIG-IP	5622
CloudBridge Connector interoperability –Cisco ASA	5628
High Availability	5637
Points to consider for a high availability setup	5638
Configuring high availability	5640
Configuring the communication intervals	5642
Configuring synchronization	5643
Synchronizing configuration files in a high availability setup	5645
Configuring command propagation	5646
Restricting high availability synchronization traffic to a VLAN	5647
Configuring fail-safe mode	5649
Configuring Virtual MAC Addresses	5651
Configuring high availability nodes in different subnets	5654
Configuring route monitors	5658

Limiting failovers caused by route monitors in non-INC mode	5661
Configuring failover interface set	5664
Understanding the causes of failover	5665
Forcing a node to fail over	5666
Forcing the secondary node to stay secondary	5668
Forcing the primary node to stay primary	5669
High Availability FAQs	5669
Troubleshooting high availability issues	5672
Managing high availability heartbeat messages on a NetScaler appliance	5675
Remove and Replace a NetScaler in a High Availability Setup	5676
Request retry	5680
Request retry if back-end server resets TCP connection	5681
Request retry if back-end server resets TCP connection during connection establishment	5685
Request retry if back-end server response times out	5687
TCP optimization	5690
Troubleshooting solutions for NetScaler	5703
How to record a packet trace on NetScaler	5703
How to free space on the /var directory	5708
How to download core or crashed files from NetScaler appliance	5710
How to collect performance statistics and event logs	5711
How to configure log file rotation	5716
How to free space on a /flash directory in a NetScaler appliance	5719
Reference Material	5720

NetScaler release notes

December 18, 2024

Release notes describe how the software has changed in a particular build, and the issues known to exist in the build.

The release notes document includes all or some of the following sections:

- **What's New:** The enhancements and other changes released in the build.
- **Fixed Issues:** The issues that are fixed in the build.
- **Known Issues:** The issues that exist in the build.
- **Points to Note:** The important aspects to keep in mind while using the build.
- **Limitations:** The limitations that exist in the build.

Note

- The [# XXXXXX] labels under the issue descriptions are internal tracking IDs used by the NetScaler team.
- These release notes do not document security related fixes. For a list of security related fixes and advisories, see the security bulletin.

To view the release notes document for a specific build of release 14.1, click the corresponding link in the following table. When the release notes are updated for a build, the version number of the release notes and the publish date are also updated. The release notes publish date might not be the same as the build GA date.

Release notes for NetScaler

software version 14.1	Publish date	Version
Build 14.1-38.53	Dec 18, 2024	1.0
Build 14.1-34.42	Dec 03, 2024	2.0
Build 14.1-29.72	Nov 12, 2024	1.0
Build 14.1-25.56	Aug 28, 2024	2.0
Build 14.1-21.57	Apr 23, 2024	1.0
Build 14.1-17.38	Mar 05, 2024	3.0
Build 14.1-12.35	Mar 05, 2024	2.0
Build 14.1-8.50	Mar 05, 2024	4.0
Build 14.1-4.42	Mar 05, 2024	3.0

Getting started with NetScaler

July 18, 2023

This topic describes the basic features and configuration details of a NetScaler appliance. System and network administrators who install and configure network equipment can refer to the content.

Understanding NetScaler

The NetScaler appliance is an application switch which performs application-specific traffic analysis to intelligently distribute, optimize, and secure Layer 4-Layer 7 (L4–L7) network traffic for web applications. For example, a NetScaler appliance load balances decisions on individual HTTP requests instead of long-lived TCP connections. The load balancing feature helps slowing down the failure of a server with less disruption to clients. The ADC features can be broadly classified as:

1. Data switching
2. Firewall security
3. Optimization
4. Policy infrastructure
5. Packet flow

Data switching

When deployed in front of application servers, a NetScaler ensures optimal distribution of traffic by how it directs client requests. Administrators can segment application traffic according to information in the body of an HTTP or TCP request, and based on L4–L7 header information such as URL, application data type, or cookie. Numerous load balancing algorithms and extensive server health checks improve application availability by ensuring that client requests are directed to the appropriate servers.

Firewall security

The NetScaler security and protection protect web applications from Application Layer attacks. An ADC appliance allows legitimate client requests and can block malicious requests. It provides built-in defenses against denial-of-service (DoS) attacks and supports features that protect against legitimate surges in application traffic that would otherwise overwhelm the servers. An available built-in firewall protects web applications from Application Layer attacks, including buffer overflow exploits, SQL injection attempts, cross-site scripting attacks, and more. In addition, the firewall provides identity theft protection by securing confidential corporate information and sensitive customer data.

Optimization

Optimization offloads resource-intensive operations, such as Secure Sockets Layer (SSL) processing, data compression, client keep-alive, TCP buffering, and the caching of static and dynamic content from servers. This improves the performance of the servers in the server farm and therefore speeds up applications. An ADC appliance supports several transparent TCP optimizations which mitigate problems caused by high latency and congested network links. Thereby accelerating the delivery of applications while requiring no configuration changes to clients or servers.

Policy infrastructure

A policy defines specific details of traffic filtering and management on a NetScaler. It consists of two parts: the expression and the action. The expression defines the types of requests that the policy matches. The action tells the ADC appliance what to do when a request matches the expression. For example, the expression might be to match a specific URL pattern for a security attack with the configured to drop or reset the connection. Each policy has a priority, and the priorities determine the order in which the policies are evaluated.


When an ADC appliance receives traffic, the appropriate policy list determines how to process the traffic. Each policy on the list contains one or more expressions, which together define the criteria that a connection must meet to match the policy.

For all policy types except rewrite, the appliance implements only the first policy that has a request match. For Rewrite policies, the ADC appliance evaluates the policies in order and performs the associated actions in the same order. Policy priority is important for getting the results you want.


Packet flow

Depending on requirements, you can choose to configure multiple features. For example, you might choose to configure both compression and SSL offload. As a result, an outgoing packet might be compressed and then encrypted before being sent to the client.

The following figure shows the HTTP2 packet flow in the NetScaler appliance.

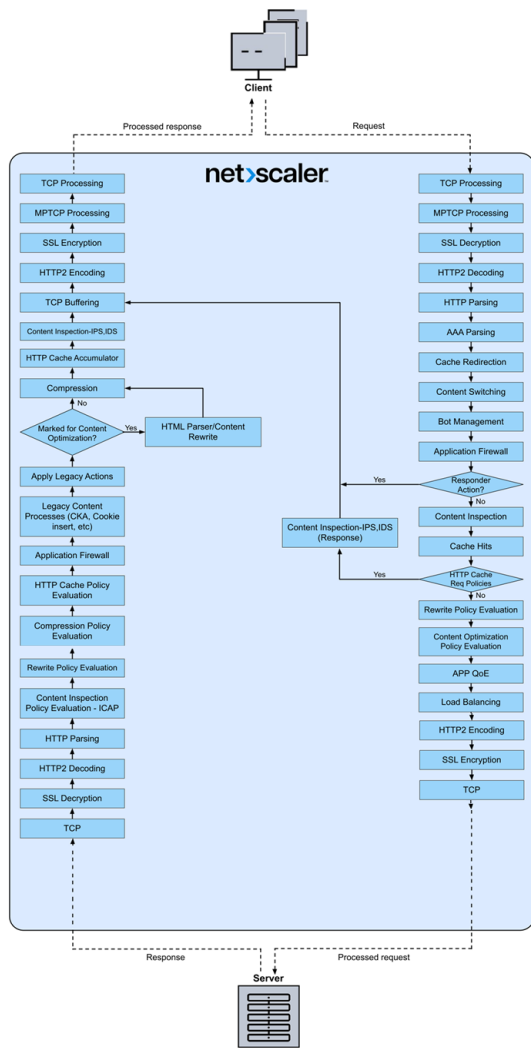

The following figure shows the data stream query processing flow in the NetScaler appliance. DataStream is supported for MySQL and MS SQL databases. For information about the DataStream feature, see DataStream.

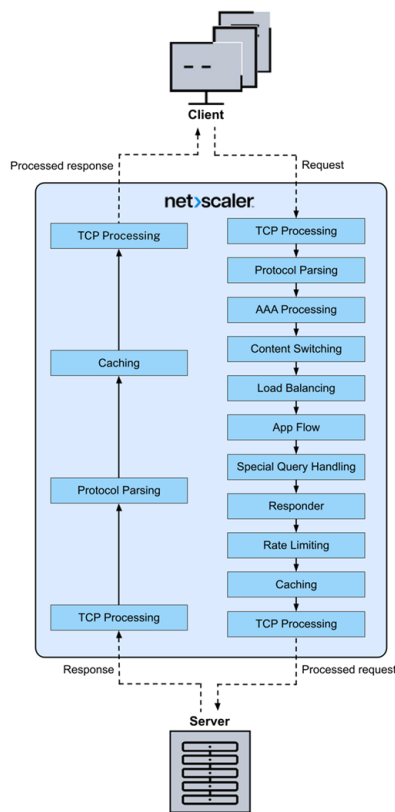

Note: If the traffic is for a content switching virtual server, the appliance evaluates policies in the following order:

1. bound to global override.
2. bound to load balancing virtual server.
3. bound to content switching virtual server.
4. bound to global default.

This way, if a policy rule is true and gotpriorityexpression is END, we stop further policy evaluation.

In content switching, if no load balancing virtual server is selected or bound to the content switching virtual server, then we evaluate responder policies bound only to the content switching virtual server.

System limitation

There are system limitations for each NetScaler feature when you install NetScaler software 9.2 or later. For more information, see Citrix article, [CTX118716](#).

Where does a NetScaler appliance fit in the network?

August 29, 2023

NetScaler resides between the clients and servers in the network. It plays the role of an intermediary, processing the traffic flowing between the client and server. For the traffic coming from the clients, NetScaler acts as a server and receives the requests. After receiving the client request, NetScaler sends a new request on behalf of the client to the server. In sending the request to the server, NetScaler acts as a client.

The following are a few common network deployments where the NetScaler fits:


- **Gateway** - You can use NetScaler as a gateway at the perimeter of your organization's internal network (or intranet) to provide a secure single point of access to the servers, applications, and other network resources that reside in the internal network.
- **Application firewall** - You can use NetScaler as an application firewall to prevent security breaches, data loss, and possible unauthorized modifications to websites that access sensitive business or customer information. It does so by filtering both requests and responses, examining them for evidence of malicious activity, and blocking requests that exhibit such activity.
- **Load balancer** - You can use the NetScaler to operate as a load balancer where it distributes client requests across multiple servers to optimize resource utilization. In a real-world scenario with a limited number of servers providing service to many clients, a server can become overloaded and degrade the performance of the server farm. A NetScaler appliance uses load balancing criteria to prevent bottlenecks by forwarding each client request to the server best suited to handle the request when it arrives.
- **Global server load balancer** - You can configure NetScaler as a global server load balancer (GSLB) to provide disaster recovery and ensure continuous availability of applications against points of failure in a WAN. GSLB balances the load across data centers by directing client requests to the closest or best performing data center, or to surviving data centers if there is an outage.
- **Packet forwarder** - You can use NetScaler as a packet forwarder to forward packets to an IP not owned by it. NetScaler behaves like a router, looking at the routes it has learned or that has been configured to forward packets.

Physical deployment modes


A NetScaler appliance logically residing between clients and servers can be deployed in either of two physical modes:

- Inline or Two-arm mode
- One-arm mode

In inline mode, the appliance uses multiple network interfaces to connect to different Ethernet segments, positioning itself between clients and servers. It can connect to the server network with one or more redundant interfaces, and both the appliance and servers can be on separate subnets. It is possible for the servers to be in a public network and the clients to directly access the servers through the appliance, with the appliance transparently applying the L4-L7 features. Usually, virtual servers (described later) are configured to provide an abstraction of the real servers. The following figure shows a typical inline deployment.

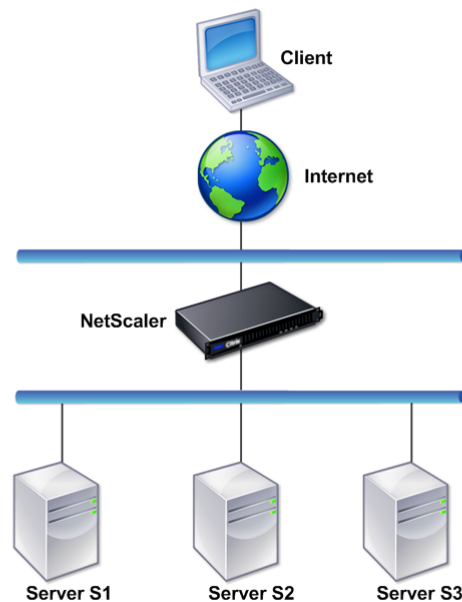

In one-arm mode, only one network interface of the appliance is connected to an Ethernet segment. The appliance in this case does not isolate the client and server sides of the network, but provides access to applications through configured virtual servers. One-arm mode can simplify network changes needed for NetScaler installation in some environments.

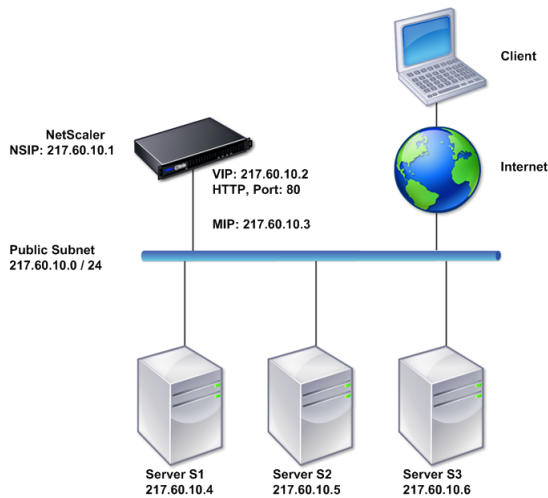

For examples of inline (two-arm) and one-arm deployment, see [Understanding Common Network Topologies](#).

How a NetScaler appliance communicates with clients and servers

August 4, 2023

A NetScaler appliance is usually deployed in front of a server farm and functions as a transparent TCP proxy between clients and servers, without requiring any client-side configuration. This basic mode of operation is called Request Switching technology and is the core of NetScaler functionality. Request Switching enables an appliance to multiplex and offload the TCP connections, maintain persistent connections, and manage traffic at the request (application layer) level. This is possible because the appliance can separate the HTTP request from the TCP connection on which the request is delivered.

Depending on the configuration, an appliance might process the traffic before forwarding the request to a server. For example, if the client attempts to access a secure application on the server, the appliance might perform the necessary SSL processing before sending traffic to the server.

To facilitate efficient and secure access to server resources, an appliance uses a set of IP addresses collectively known as NetScaler-owned IP addresses. To manage your network traffic, you assign NetScaler-owned IP addresses to virtual entities that become the building blocks of your configuration. For example, to configure load balancing, you create virtual servers to receive client requests and distribute them to services, which are entities representing the applications on your servers.

Understanding NetScaler-owned IP addresses

To function as a proxy, a NetScaler appliance uses a variety of IP addresses. The key NetScaler-owned IP addresses are:

- NetScaler IP (NSIP) address

The NSIP address is the IP address for management and general system access to the appliance itself, and for communication between appliances in a high availability configuration.

- Virtual server IP (VIP) address

A VIP address is the IP address associated with a virtual server. It is the public IP address to which clients connect. An appliance managing a wide range of traffic may have many VIPs configured.

- Subnet IP (SNIP) address

A SNIP address is used in connection management and server monitoring. You can specify multiple SNIP addresses for each subnet. SNIP addresses can be bound to a VLAN.

- IP Set

An IP set is a set of IP addresses, which are configured on the appliance as SNIP. An IP set is identified with a meaningful name that helps in identifying the usage of the IP addresses contained in it.


- Net Profile

A net profile (or network profile) contains an IP address or an IP set. A net profile can be bound to load balancing or content switching virtual servers, services, service groups, or monitors. During communication with physical servers or peers, the appliance uses the addresses specified in the profile as source IP addresses.

How Traffic flows are managed

Because a NetScaler appliance functions as a TCP proxy, it translates IP addresses before sending packets to a server. When you configure a virtual server, clients connect to a VIP address on the NetScaler appliance instead of directly connecting to a server. As determined by the settings on the virtual server, the appliance selects an appropriate server and sends the client's request to that server. By default, the appliance uses a SNIP address to establish connections with the server, as shown in the following figure.

Figure 1. Virtual Server Based Connections

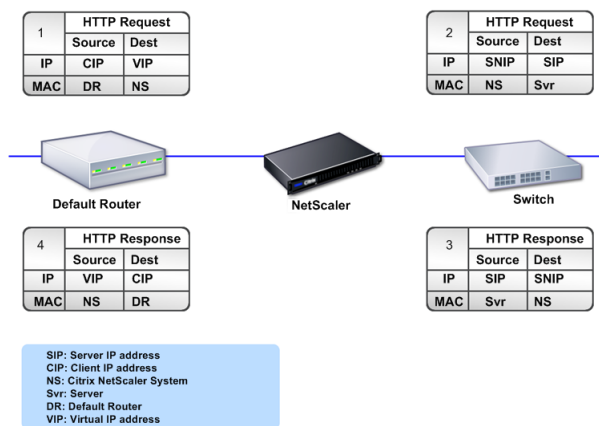

In the absence of a virtual server, when an appliance receives a request, it transparently forwards the request to the server. This is called the transparent mode of operation. When operating in transparent mode, an appliance translates the source IP addresses of incoming client requests to the SNIP address but does not change the destination IP address. For this mode to work, L2 or L3 mode has to be configured appropriately.

For cases in which the servers need the actual client IP address, the appliance can be configured to modify the HTTP header by inserting the client IP address as an additional field, or configured to use the client IP address instead of a SNIP address for connections to the servers.


Traffic management building blocks

The configuration of a NetScaler appliance is typically built up with a series of virtual entities that serve as building blocks for traffic management. The building block approach helps separate traffic flows. Virtual entities are abstractions, typically representing IP addresses, ports, and protocol handlers for processing traffic. Clients access applications and resources through these virtual entities. The most commonly used entities are virtual servers and services. Virtual servers represent groups of servers in a server farm or remote network, and services represent specific applications on each server.

Most features and traffic settings are enabled through virtual entities. For example, you can configure an appliance to compress all server responses to a client that is connected to the server farm through a particular virtual server. To configure the appliance for a particular environment, you need to identify the appropriate features and then choose the right mix of virtual entities to deliver them. Most features are delivered through a cascade of virtual entities that are bound to each other. In this case, the virtual entities are like blocks being assembled into the final structure of a delivered application.

You can add, remove, modify, bind, enable, and disable the virtual entities to configure the features. The following figure shows the concepts covered in this section.

Figure 2. How traffic management building blocks work

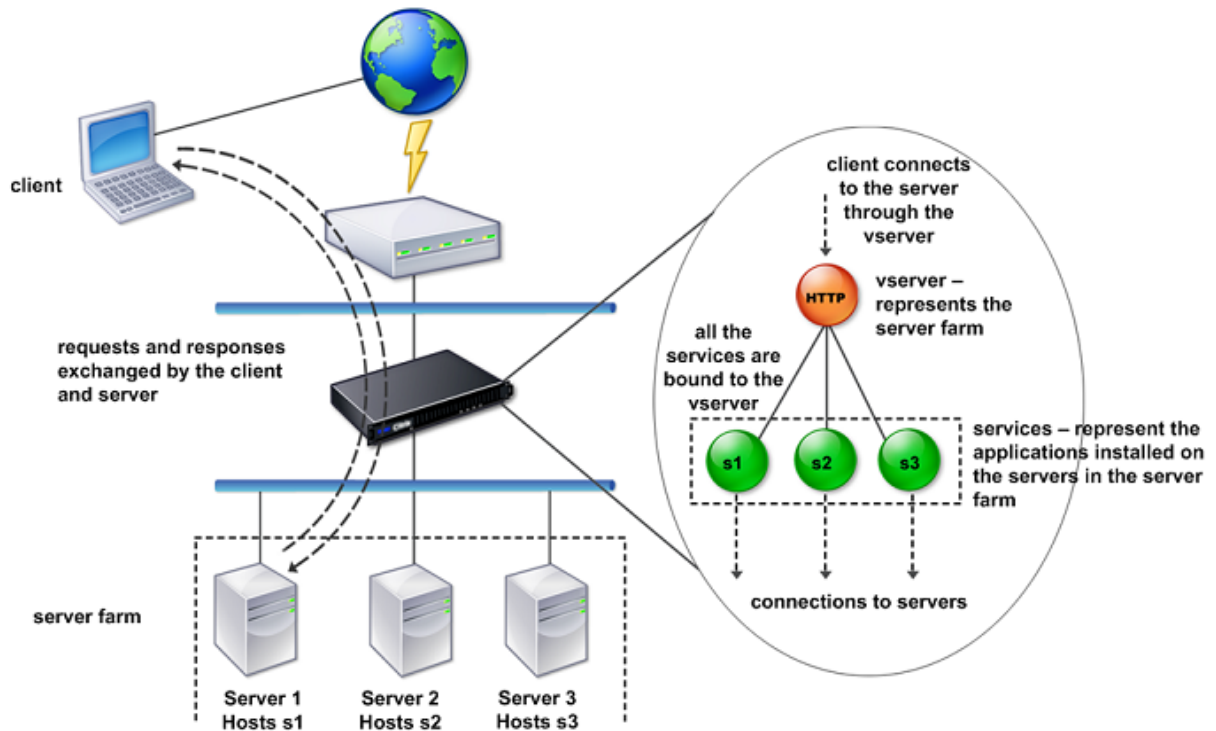


A simple load balancing configuration

In the example shown in the following figure, the NetScaler appliance is configured to function as a load balancer. For this configuration, you need to configure virtual entities specific to load balancing and bind them in a specific order. As a load balancer, an appliance distributes client requests across several servers and thus optimizes the utilization of resources.

The basic building blocks of a typical load balancing configuration are services and load balancing virtual servers. The services represent the applications on the servers. The virtual servers abstract the servers by providing a single IP address to which the clients connect. To ensure that client requests are sent to a server, you need to bind each service to a virtual server. That is, you must create services for every server and bind the services to a virtual server. Clients use the VIP address to connect to a NetScaler appliance. When the appliance receives client requests sent to the VIP address, it sends them to a server determined by the load balancing algorithm. Load balancing uses a virtual entity called a monitor to track whether a specific configured service (server plus application) is available to receive requests.

Figure 3. Load balancing virtual server, services, and monitors

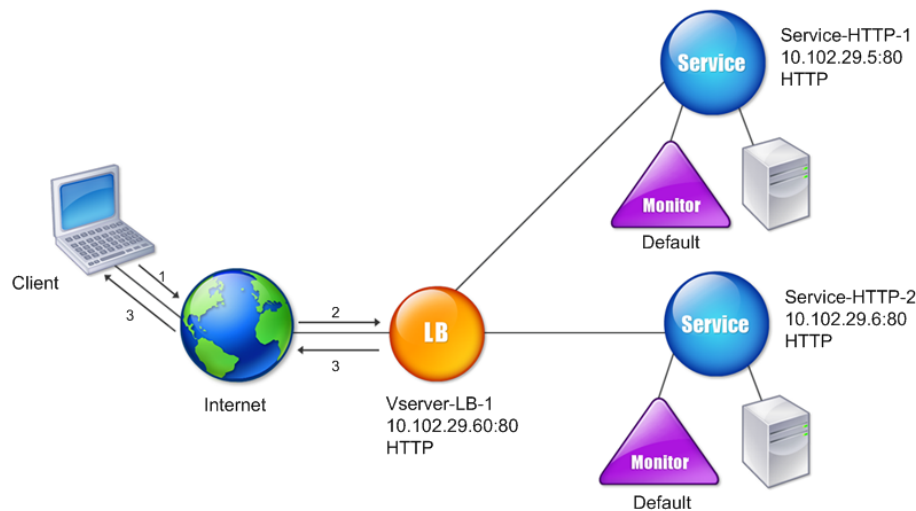

In addition to configuring the load balancing algorithm, you can configure several parameters that affect the behavior and performance of the load balancing configuration. For example, you can configure the virtual server to maintain persistence based on source IP address. The appliance then directs all requests from any specific IP address to the same server.

Understanding virtual servers


A virtual server is a named NetScaler entity that external clients can use to access applications hosted on the servers. It is represented by an alphanumeric name, virtual IP (VIP) address, port, and protocol. The name of the virtual server is of only local significance and is designed to make the virtual server easier to identify. When a client attempts to access applications on a server, it sends a request to the VIP instead of the IP address of the physical server. When the appliance receives a request at the VIP address, it terminates the connection at the virtual server and uses its own connection with the server on behalf of the client. The port and protocol settings of the virtual server determine the applications that the virtual server represents. For example, a web server can be represented by a virtual server and a service whose port and protocol are set to 80 and HTTP, respectively. Multiple virtual servers can use the same VIP address but different protocols and ports.

Virtual servers are points for delivering features. Most features, like compression, caching, and SSL

offload, are normally enabled on a virtual server. When the appliance receives a request at a VIP address, it chooses the appropriate virtual server by the port on which the request was received and its protocol. The appliance then processes the request as appropriate for the features configured on the virtual server.

In most cases, virtual servers work in tandem with services. You can bind multiple services to a virtual server. These services represent the applications running on physical servers in a server farm. After the appliance processes requests received at a VIP address, it forwards them to the servers as determined by the load balancing algorithm configured on the virtual server. The following figure illustrates these concepts.

Figure 4. Multiple Virtual Servers with a Single VIP Address

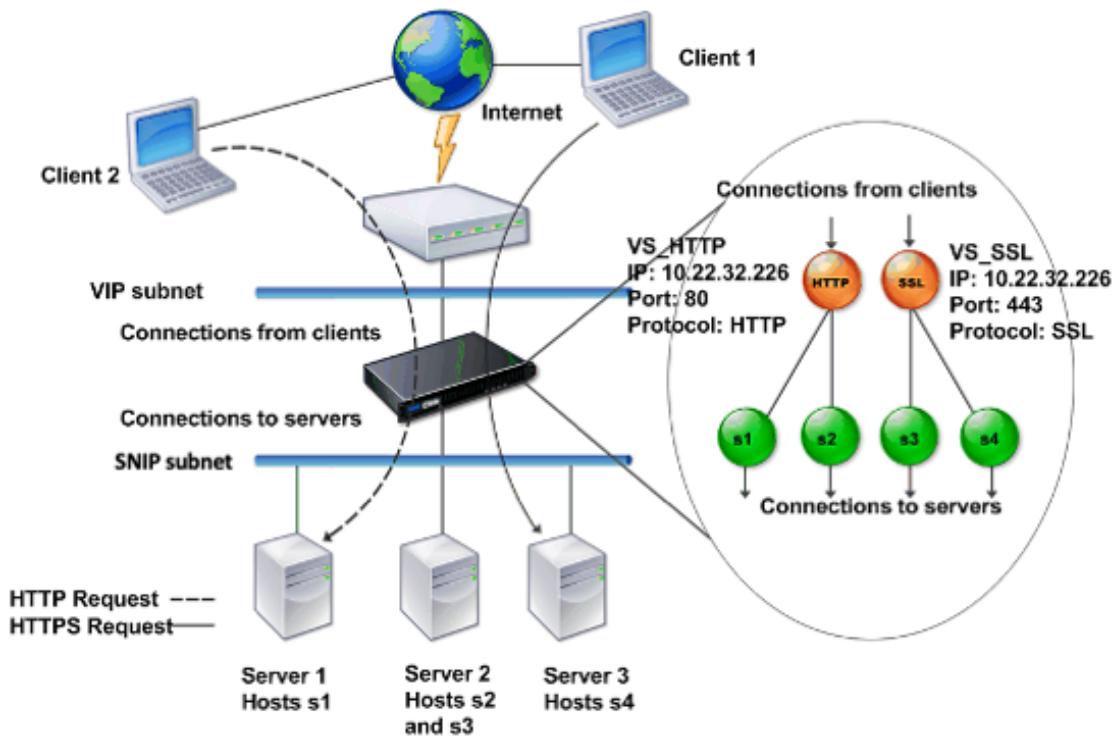

The preceding figure shows a configuration consisting of two virtual servers with a common VIP address but different ports and protocols. Each of the virtual servers has two services bound to it. The services s1 and s2 are bound to VS_HTTP and represent the HTTP applications on Server 1 and Server 2. The services s3 and s4 are bound to VS_SSL and represent the SSL applications on Server 2 and Server 3 (Server 2 provides both HTTP and SSL applications). When the appliance receives an HTTP request at the VIP address, it processes the request as specified by the settings of VS_HTTP and sends it to either Server 1 or Server 2. Similarly, when the appliance receives an HTTPS request at the VIP address, it processes it as specified by the settings of VS_SSL and it sends it to either Server 2 or Server 3.

Virtual servers are not always represented by specific IP addresses, port numbers, or protocols. They can be represented by wildcards, in which case they are known as wildcard virtual servers. For example, when you configure a virtual server with a wildcard instead of a VIP, but with a specific port number, the appliance intercepts and processes all traffic conforming to that protocol and destined for the predefined port. For virtual servers with wildcards instead of VIPs and port numbers, the appliance intercepts and processes all traffic conforming to the protocol.

Virtual servers can be grouped into the following categories:

- Load balancing virtual server

Receives and redirects requests to an appropriate server. Choice of the appropriate server is based on which of the various load balancing methods the user configures.

- Cache redirection virtual server

Redirects client requests for dynamic content to origin servers, and requests for static content to cache servers. Cache redirection virtual servers often work in conjunction with load balancing virtual servers.

- Content switching virtual server

Directs traffic to a server on the basis of the content that the client has requested. For example, you can create a content switching virtual server that directs all client requests for images to a server that serves images only. Content switching virtual servers often work in conjunction with load balancing virtual servers.

- Virtual private network (VPN) virtual server

Decrypts tunneled traffic and sends it to intranet applications.

- SSL virtual server

Receives and decrypts SSL traffic, and then redirects to an appropriate server. Choosing the appropriate server is similar to choosing a load balancing virtual server.

Understanding services

Services represent applications on a server. While services are normally combined with virtual servers, in the absence of a virtual server, a service can still manage application-specific traffic. For example, you can create an HTTP service on a NetScaler appliance to represent a web server application. When the client attempts to access a web site hosted on the web server, the appliance intercepts the HTTP requests and creates a transparent connection with the web server.

In service-only mode, an appliance functions as a proxy. It terminates client connections, uses a SNIP address to establish a connection to the server, and translates the source IP addresses of incoming client requests to a SNIP address. Although the clients send requests directly to the IP address of

the server, the server sees them as coming from the SNIP address. The appliance translates the IP addresses, port numbers, and sequence numbers.

A service is also a point for applying features. Consider the example of SSL acceleration. To use this feature, you must create an SSL service and bind an SSL certificate to the service. When the appliance receives an HTTPS request, it decrypts the traffic and sends it, in clear text, to the server. Only a limited set of features can be configured in the service-only case.

Services use entities called monitors to track the health of applications. Every service has a default monitor, which is based on the service type, bound to it. As specified by the settings configured on the monitor, the appliance sends probes to the application at regular intervals to determine its state. If the probes fail, the appliance marks the service as down. In such cases, the appliance responds to client requests with an appropriate error message or re-routes the request as determined by the configured load balancing policies.

For more information about configuring load balancing virtual servers, services, and monitors, see [NetScaler Load balancing](#).

Introduction to the NetScaler product line

August 11, 2023

The NetScaler product line optimizes delivery of applications over the internet and private networks, combining application-level security, optimization, and traffic management into a single, integrated appliance. You can install a NetScaler appliance in your server room and route all connections to your managed servers through it. The NetScaler features that you enable and the policies you set are then applied to incoming and outgoing traffic.

A NetScaler appliance can be integrated into any network as a complement to existing load balancers, servers, caches, and firewalls. It requires no additional client or server side software, and can be configured using the NetScaler web-based GUI and CLI configuration utilities.

This topic includes the following sections:

- NetScaler Hardware Platforms
- NetScaler Editions
- Supported Releases on ADC Hardware
- Supported Browsers

NetScaler Hardware Platforms

NetScaler hardware is available in a variety of platforms that have a range of hardware specifications:

[NetScaler MPX hardware platform](#)

[NetScaler SDX hardware platform](#)

NetScaler Editions

The NetScaler operating system is available in two editions:

- Advanced
- Premium

Features are enabled based on the license.

For more information about NetScaler software editions, see the [NetScaler Editions data sheet](#).

Supported releases on NetScaler hardware

See the following compatibility matrix tables for all NetScaler hardware platforms and the software releases supported on these platforms:

[NetScaler MPX Hardware-Software Compatibility Matrix](#)

[NetScaler SDX Hardware-Software Compatibility Matrix](#)

Compatible browsers

To access the NetScaler GUI, your workstation must have a compatible web browser.

The following table lists the compatible browsers for NetScaler GUI version 12.0, 12.1, and 13.0:

Operating System	Browser	Versions
Windows 7 and later	Internet Explorer	11, Edge, and later
Windows 7 and later	Mozilla Firefox	45 and later
Windows 7 and later	Chrome	60 and later
MAC	Mozilla Firefox	45 and later
MAC	Safari	10.1.1 and later

The compatible browser versions for NetScaler 11.1 are as follows:

Operating System	Browser	Versions
Windows 7 and later	Internet Explorer	8, 9, 10, 11, Edge
Windows 7 and later	Mozilla Firefox	45 and later
Windows 7 and later	Chrome	60 and later
MAC	Mozilla Firefox	45 and later
MAC	Safari	10.1.1 and later

Install the hardware

May 2, 2023

Before installing a NetScaler appliance, review the pre-installation checklist.

To use the SDX appliance, you must complete the following tasks by following the instructions given in the resources provided in table. Complete the tasks in the sequence given.

Task

Description

1. Read safety, cautions, warnings, and other information

Read the caution and danger information you need to know, before installing the product.

2. Prepare for installation

Unpack your appliance and ensure all parts were delivered, prepare the site and rack, and follow basic electrical safety precautions before you install your new appliance.

3. Install the hardware

Rack mount the appliance, install transceivers (if available), and connect the appliance to the network and a power source.

4. Configure the appliance.

Configure the initial settings of the NetScaler appliance by using the GUI or the serial console.

Follow the steps given in the following documentations to complete these tasks:

- [NetScaler MPX hardware documentation](#)
- [NetScaler SDX hardware documentation](#)

Access a NetScaler appliance

May 2, 2023

A NetScaler appliance has both a command line interface (CLI) and a GUI. The GUI includes a configuration utility for configuring the appliance and a statistical utility, called Dashboard. For initial access, all appliances ship with the default NetScaler IP address (NSIP) of 192.168.100.1 and the default subnet mask of 255.255.0.0. You can assign a new NSIP and an associated subnet mask during initial configuration.

If you encounter an IP address conflict when deploying multiple NetScaler units, check for the following possible causes:

- Did you select an NSIP that is an IP address already assigned to another device on your network?
- Did you assign the same NSIP to multiple NetScaler appliances?
- The NSIP is reachable on all physical ports. The ports on a NetScaler are host ports, not switch ports.

The following table summarizes the available access methods.

Access Method	Port	Default IP Address Required? (Y/N)
CLI	Console	N
CLI and GUI	Ethernet	Y

Command line interface

Access the CLI locally by connecting a workstation to the console port, or remotely by connecting through the secure shell (SSH) from any workstation on the same network.

Log on to the Command Line Interface through the Console Port

The appliance has a console port for connecting to a computer workstation. To log on to the appliance, you need a serial crossover cable and a workstation with a terminal emulation program.

To log on to the CLI through the console port, follow these steps:

1. Connect the console port to a serial port on the workstation. For more information, see [Connect the console cable](#).

2. On the workstation, start HyperTerminal or any other terminal emulation program. If the logon prompt does not appear, you might have to press ENTER one or more times to display it.
3. In User Name, type `nsroot`. In Password, type `nsroot` and if that password does not work, try typing the serial number of the appliance. The serial number bar code is available at the back of the appliance.

Log on to the Command Line Interface by using SSH

The SSH protocol is the preferred remote access method for accessing an appliance remotely from any workstation on the same network. You can use either SSH version 1 (SSH1) or SSH version 2 (SSH2.)

If you do not have a working SSH client, you can download and install any of the following SSH client programs:

- PuTTY

Open Source software supported on multiple platforms. Available at:

<http://www.chiark.greenend.org.uk/~sgtatham/putty/>

- Vandyke Software SecureCRT

Commercial software supported on the Windows platform. Available at:

<http://www.vandyke.com/products/securecrt/>

These programs are tested by the NetScaler team, who have verified that they work correctly with a NetScaler appliance. Other programs might also work correctly, but have not been tested.

To verify that the SSH client is installed properly, use it to connect to any device on your network that accepts SSH connections.

To log on to a NetScaler appliance by using an SSH client, follow these steps:

1. On your workstation, start the SSH client.
2. For initial configuration, use the default IP address (NSIP), which is 192.168.100.1. For subsequent access, use the NSIP that was assigned during initial configuration. Select either SSH1 or SSH2 as the protocol.
3. In User Name, type `nsroot`. In Password, type `nsroot` and if that password does not work, try typing the serial number of the appliance. The serial number bar code is available at the back of the appliance. For example.

```
1 login as: nsroot
2
3
4 Using keyboard-interactive authentication.
5
6
```

```
7 Password:
8
9
10 Last login: Tue Jun 16 10:37:28 2009 from 10.102.29.9
11
12
13
14
15
16 Done
17
18
19 >
```

NetScaler GUI

Important:

A certificate-key pair is required for HTTPS access to the Citrix ADC GUI. On the ADC, a certificate-key pair is automatically bound to the internal services. On an MPX or SDX appliance, the default key size is 1024 bytes, and on a VPX instance, the default key size is 512 bytes. However, most browsers today do not accept a key that is less than 1024 bytes. As a result, HTTPS access to the VPX configuration utility is blocked.

Also, if a license is not present on an MPX appliance when it starts, and you add a license later and restart the appliance, you might lose the certificate binding.

Citrix recommends that you install a certificate-key pair of at least 1024 bytes on the appliance for HTTPS access to the GUI. Also, install an appropriate license before starting the appliance.

The GUI includes a configuration utility and a statistical utility, called Dashboard, either of which you access through a workstation connected to an Ethernet port on the appliance.

The system requirements for the workstation running the GUI are as follows:

- For Windows-based workstations, a Pentium 166 MHz or faster processor.
- For Linux-based workstations, a Pentium platform running Linux kernel v2.2.12 or above, and `glibc` version 2.12–11 or later. A minimum of 32 MB RAM is required, and 48 MB RAM is recommended. The workstation must support 16-bit color mode, KDE, and KWM window managers used in conjunction, with displays set to local hosts.
- For Solaris-based workstations, a Sun running either Solaris 2.6, Solaris 7, or Solaris 8.

Your workstation must have a supported web browser to access the configuration utility and Dashboard.

The following table lists the compatible browsers for NetScaler GUI version 12.1, 13.0, and 13.1:

Operating System	Browser	Versions
Windows 10 and later	Edge	110.1587.63 and later
Windows 10 and later	Mozilla Firefox	102 and later
Windows 10 and later	Chrome	108 and later
MAC	Mozilla Firefox	110.0.1 and later
MAC	Safari	15.5 and later

Use the NetScaler GUI

Once you log on to the configuration utility, you can configure the appliance through a graphical interface that includes context-sensitive help.

To log on to the GUI, follow these steps:

1. Open your web browser and enter the NetScaler IP (NSIP) as an HTTP address. If you have not yet set up the initial configuration, enter the default NSIP (<http://192.168.100.1>). The NetScaler logon page appears.

Note: If you have two NetScaler appliances in a high availability setup, do not access the GUI by entering the IP address of the secondary NetScaler appliance. If you do so and use the GUI to configure the secondary appliance, your configuration changes are not applied to the primary NetScaler appliance.

2. In the User Name text box, type `nsroot`.
3. In the Password text box, type the administrative password you assigned to the `nsroot` account during initial configuration and click **Login**. If that password does not work, try typing the serial number of the appliance. The serial number bar code is available at the back of the appliance.

To access the online help, select Help from the Help menu at the top right corner.

Use the Statistical Utility

Dashboard, the statistical utility, is a browser-based application that displays charts and tables on which you can monitor the performance of a NetScaler appliance.

To log on to Dashboard, follow these steps:

1. Open your web browser and enter the NSIP as an HTTP address. The NetScaler logon page appears.

2. In the User Name text box, type `nsroot`.
3. In the Password text box, type the administrative password you assigned to the `nsroot` account during initial configuration. If that password does not work, try typing the serial number of the appliance. The serial number bar code is available at the back of the appliance.

Configure the ADC for the first time

May 22, 2023

For initial configuration of a NetScaler MPX appliance, see [Initial Configuration of a NetScaler MPX appliance](#).

For initial configuration of a NetScaler SDX appliance, see [Initial Configuration of a NetScaler SDX appliance](#).

NITRO API

You can use the NITRO API to configure the NetScaler appliance. NITRO exposes its functionality through Representational State Transfer (REST) interfaces. Therefore, NITRO applications can be developed in any programming language. Additionally, for applications that must be developed in Java or .NET or Python, NITRO APIs are exposed through relevant libraries that are packaged as separate Software Development Kits (SDKs). For more information, see [NITRO API](#).

Secure your NetScaler deployment

May 2, 2023

To maintain security through the deployment life cycle of NetScaler appliance, Citrix recommends you to consider the following security aspects:

- Physical Security
- Appliance Security
- Network Security
- Administration and Management

Different deployments might require different security considerations. The NetScaler secure deployment guidelines provide general security guidance to help you decide on an appropriate secure deployment based on your specific security requirements.

For more information on guidelines for securely deploying the NetScaler appliance, see [NetScaler secure deployment guidelines](#).

Configure high availability

May 2, 2023

You can deploy two NetScaler appliances in a high availability configuration, where one unit actively accepts connections and manages servers while the secondary unit monitors the first. The NetScaler appliance that is actively accepting connections and managing the servers is called a primary unit and the other one is called a secondary unit in a high availability configuration. If there is a failure in the primary unit, the secondary unit becomes the primary and begins actively accepting connections.

Each NetScaler appliance in a high availability pair monitors the other by sending periodic messages, called heartbeat messages or health checks, to determine the health or state of the peer node. If a health check for a primary unit fails, the secondary unit retries the connection for a specific time period. For more information about high availability, see [High Availability](#). If a retry does not succeed by the end of the specified time period, the secondary unit takes over for the primary unit in a process called failover. The following figure shows two high availability configurations, one in one-arm mode and the other in two-arm mode.

Figure 1. High availability in one-arm mode


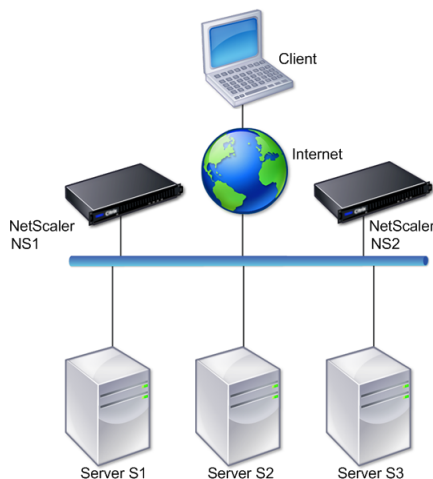


Figure 2. High availability in two-arm mode

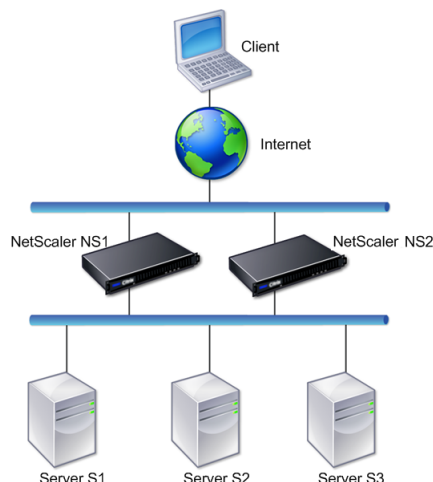

In one-arm configuration, both NS1 and NS2 and servers S1, S2, and S3 are connected to the switch.

In two-arm configuration, both NS1 and NS2 are connected to two switches. The servers S1, S2, and S3 are connected to the second switch. The traffic between client and the servers passes through either NS1 or NS2.

To set up a high availability environment, configure one ADC appliance as primary and another as secondary. Perform the following tasks on each of the ADC appliances:

- Add a node.
- Disable high availability monitoring for unused interfaces.

Add a Node

A node is a logical representation of a peer NetScaler appliance. It identifies the peer unit by ID and NSIP. An appliance uses these parameters to communicate with the peer and track its state. When you add a node, the primary and secondary units exchange heartbeat messages asynchronously. The node ID is an integer that must not be greater than 64.

Through CLI

To add a node by using the command line interface, follow these steps:

At the command prompt, type the following commands to add a node and verify that the node has been added:

- add HA node <id> <IPAddress>

- show HA node <id>

Example

```
1  add HA node 0 10.102.29.170
2  Done
3  > show HA node 0
4  1) Node ID: 0
5     IP: 10.102.29.200 (NS200)
6     Node State: UP
7     Master State: Primary
8     SSL Card Status: UP
9     Hello Interval: 200 msec
10    Dead Interval: 3 sec
11    Node in this Master State for: 1:0:41:50 (days:hrs:min:
      sec)
```

Through GUI

To add a node by using the GUI, follow these steps:

1. Navigate to **System > High Availability**.
2. Click **Add** on the **Nodes** tab.
3. On the **Create HA Node** page, in the **Remote Node IP Address** text box, type the NSIP Address (for example, 10.102.29.170) of the remote node.
4. Ensure that the **Configure remote system to participate in High Availability setup** check box is selected. Provide the login credentials of the remote node in the text boxes under **Remote System Login Credentials**.
5. Select the **Turn off HA monitor on interfaces/channels that are down** check box to disable the HA monitor on interfaces that are down.

Verify that the node you added appears in the list of nodes in the Nodes tab.

Disable high availability monitoring for unused interfaces

The high availability monitor is a virtual entity that monitors an interface. You must disable the monitor for interfaces that are not connected or being used for traffic. When the monitor is enabled on an interface whose status is DOWN, the state of the node becomes NOT UP. In a high availability configuration, a primary node entering a NOT UP state might cause a high availability failover. An interface is marked DOWN under the following conditions:

- The interface is not connected
- The interface is not working properly
- The cable connecting the interface is not working properly

Through CLI

To disable the high availability monitor for an unused interface by using the command line interface, follow these steps:

At the command prompt, type the following commands to disable the high availability monitor for an unused interface and verify that it is disabled:

- set interface <id> -haMonitor OFF
- show interface <id>

Example

```
1 > set interface 1/8 -haMonitor OFF
2 Done
3 > show interface 1/8
4 Interface 1/8 (Gig Ethernet 10/100/1000 MBits) #2
5 flags=0x4000 <ENABLED, DOWN, down, autoneg, 802.1q>
6 MTU=1514, native vlan=1, MAC=00:d0:68:15:fd:3d, downtime
7 238h55m44s
8 Requested: media AUTO, speed AUTO, duplex AUTO, fctl OFF,
9 throughput 0
10 RX: Pkts(0) Bytes(0) Errs(0) Drops(0) Stalls(0)
11 TX: Pkts(0) Bytes(0) Errs(0) Drops(0) Stalls(0)
12 NIC: InDisc(0) OutDisc(0) Fctls(0) Stalls(0) Hangs(0)
13 Muted(0)
14 Bandwidth thresholds are not set.
```

When the high availability monitor is disabled for an unused interface, the output of the show interface command for that interface does not include “HAMON.”

Through GUI

To disable the high availability monitor for unused interfaces by using the GUI, follow these steps:

1. Navigate to System > Network > Interfaces.
2. Select the interface for which the monitor must be disabled.
3. Click Open. The Modify Interface dialog box appears.
4. In HA Monitoring, select the OFF option.
5. Click OK.
6. Verify that, when the interface is selected, “HA Monitoring: OFF” appears in the details at the bottom of the page.

Change an RPC node password

September 6, 2023

To communicate with other NetScaler appliances, each appliance requires knowledge of the other appliances, including how to authenticate on NetScaler appliance. RPC nodes are internal system entities used for system-to-system communication of configuration and session information. One RPC node exists on each NetScaler appliance and stores information, such as the IP addresses of the other NetScaler appliance and the passwords used for authentication. The NetScaler appliance that contacts the other NetScaler appliance checks the password within the RPC node.

Note:

After you upgrade a NetScaler appliance to release 13.1 build 33.x or later from one of the following builds, the `secure` option for the RPC node is enabled or disabled on the basis of the TLS 1.2 setting (enabled or disabled) present for the internal RPCS and KRPCS services.

- Release 13.0 build 64.35 or earlier
- Release 12.1 build 61.18 or earlier

The RPC communication is encrypted between the NetScaler nodes of the following setups if the `secure` option is enabled:

- High availability
- Cluster
- GSLB

The `secure` option uses secure protocol TLS1.2 and port numbers 3008 and 3009 for the RPC connection between the NetScaler nodes.

For ensuring secure RPC communication, Citrix recommends performing the following operations before upgrading these setups:

- TLS 1.2 must be enabled for the internal RPCS and KRPCS services:
 - `nsrpcs-127.0.0.1-3008`
 - `nskrpcs-127.0.0.1-3009`
 - `nsrpcs-:::11-3008`
- 3008 and 3009 must be unblocked in firewalls between the NetScaler nodes.

You can enable or disable the `secure` option using the NetScaler CLI or the GUI.

To change an RPC node password by using the GUI

1. Navigate to **System > Network > RPC**.
2. In the **RPC** pane, select the node and then click **Edit**.
3. In **Configure RPC Node**, type the new password.
4. In **Source IP Address**, type the existing node's IP address to be used to communicate with the peer system node.

← Configure RPC Node

5. Select **Secure** and then click **OK**.

Note

For enhanced security, Citrix recommends you to enable the **Secure** option on RPC nodes. When you enable the **Secure** option, the appliance encrypts all the RPC communication sent from one ADC node to other ADC nodes thus securing the RPC communication. This secure communication uses the port number 3008. If the firewall between the ADC nodes blocks the port number 3008, unblock it and proceed. Otherwise, configuration synchronization and configuration propagation might fail.

To change an RPC node password by using the CLI

At the command line, type the following commands:

```
1 set ns rpcNode <IPAddress> {
2   -password }
3   [-secure ( YES | NO )]
4 show ns rpcNode
```

Example:

```
1 > set ns rpcNode 192.0.2.4 -password mypassword -secure YES
2 Done
3 > show rpcNode
4 .
```

```
5 .
6 .
7 IPAddress: 192.0.2.4 Password: d336004164d4352ce39e
8 SrcIP: * Secure: ON
9 Done
10 >
```

Configure a FIPS appliance for the first time

May 2, 2023

Note

- FIPS FAQ can be found here: [FIPS FAQ](#).

A certificate-key pair is required for HTTPS access to the configuration utility and for secure remote procedure calls. RPC nodes are internal system entities used for system-to-system communication of configuration and session information. One RPC node exists on each appliance. This node stores the password, which is checked against the one provided by the contacting appliance. To communicate with other NetScaler appliances, each appliance requires knowledge of the other appliances, including how to authenticate on the other appliance. RPC nodes maintain this information, which includes the IP addresses of the other NetScaler appliances and the passwords used to authenticate on each.

On a NetScaler MPX appliance virtual appliance, a certificate-key pair is automatically bound to the internal services. On a FIPS appliance, a certificate-key pair must be imported into the hardware security module (HSM) of a FIPS card. To do so, you must configure the FIPS card, create a certificate-key pair, and bind it to the internal services.

Configure secure HTTPS by using the CLI

To configure secure HTTPS by using the CLI, follow these steps

1. Initialize the hardware security module (HSM) on the FIPS card of the appliance. For information about initializing the HSM, see one of the following links:
 - For MPX: [Configure the HSM](#).
 - For SDX: [Configure the HSM for an instance on an SDX 14030/14060/14080 FIPS appliance](#).
2. If the appliance is part of a high availability setup, enable the SIM. For information about enabling the SIM on the primary and secondary appliances, see [Configure FIPS appliances in a high availability setup](#).

3. Import the FIPS key into the HSM of the FIPS card of the appliance. At the command prompt, type:

```
import ssl fipskey serverkey -key ns-server.key -inform PEM
```

4. Add a certificate-key pair. At the command prompt, type:

```
add certkey server -cert ns-server.cert -fipskey serverkey
```

5. Bind the certificate-key created in the previous step to the following internal services. At the command prompt, type:

```
bind ssl service nshttps-127.0.0.1-443 -certkeyname server
```

```
bind ssl service nshttps-:::11-443 -certkeyname server
```

Configure secure HTTPS by using the GUI

To configure secure HTTPS by using the GUI, follow these steps:

1. Initialize the hardware security module (HSM) on the FIPS card of the appliance. For information about initializing the HSM, see one of the following links:
 - For MPX: [Configure the HSM](#).
 - For SDX: [Configure the HSM for an instance on an SDX 14030/14060/14080 FIPS appliance](#).
2. If the appliance is part of a high availability setup, enable the secure information system (SIM). For information about enabling the SIM on the primary and secondary appliances, see [Configure FIPS appliances in a high availability setup](#).
3. Import the FIPS key into the HSM of the FIPS card of the appliance. For more information about importing a FIPS key, see the [Import an existing FIPS key](#) section.
4. Navigate to **Traffic Management > SSL > Certificates**.
5. In the details pane, click Install.
6. In the Install Certificate dialog box, type the certificate details.
7. Click Create, and then click Close.
8. Navigate to **Traffic Management > Load Balancing > Services**.
9. In the details pane, on the Action tab, click Internal Services.
10. Select `nshttps-127.0.0.1-443` from the list, and then click Open.
11. On the SSL Settings tab, in the Available pane, select the certificate created in step 7, click Add, and then click OK.
12. Select `nshttps-:::11-443` from the list, and then click Open.
13. On the SSL Settings tab, in the Available pane, select the certificate created in step 7, click Add, and then click OK.
14. Click OK.

Configure secure RPC by using the CLI

To configure secure RPC by using the CLI, follow these steps:

1. Initialize the hardware security module (HSM) on the FIPS card of the appliance. For information about initializing the HSM, see one of the following links:
 - For MPX: [Configure the HSM](#).
 - For SDX: [Configure the HSM for an instance on an SDX 14030/14060/14080 FIPS appliance](#).

2. Enable the secure information system (SIM). For information about enabling the SIM on the primary and secondary appliances, see [Configure FIPS appliances in a high availability setup](#).

3. Import the FIPS key into the HSM of the FIPS card of the appliance. At the command prompt, type:

```
import ssl fipskey serverkey -key ns-server.key -inform PEM
```

4. Add a certificate-key pair. At the command prompt, type:

```
add certkey server -cert ns-server.cert -fipskey serverkey
```

5. Bind the certificate-key pair to the following internal services. At the command prompt, type:

```
bind ssl service nsrpcs-127.0.0.1-3008 -certkeyname server  
bind ssl service nskrpcs-127.0.0.1-3009 -certkeyname server  
bind ssl service nsrpcs-::1-3008 -certkeyname server
```

6. Enable secure RPC mode. At the command prompt, type:

```
set ns rpcnode \<IP address\> -secure YES
```

For more information about changing an RPC node password, see [Change an RPC node password](#).

Configure secure RPC by using the GUI

To configure secure RPC by using the GUI, follow these steps:

1. Initialize the hardware security module (HSM) on the FIPS card of the appliance. For information about initializing the HSM, see one of the following links:
 - For MPX: [Configure the HSM](#).
 - For SDX: [Configure the HSM for an instance on an SDX 14030/14060/14080 FIPS appliance](#).
2. Enable the secure information system (SIM). For information about enabling the SIM on the primary and secondary appliances, [Configure FIPS appliances in a high availability setup](#).

3. Import the FIPS key into the HSM of the FIPS card of the appliance. For more information about importing a FIPS key, the [Import an existing FIPS key](#) section.
4. Navigate to **Traffic Management > SSL > Certificates**.
5. In the details pane, click Install.
6. In the Install Certificate dialog box, type the certificate details.
7. Click Create, and then click Close.
8. Navigate to **Traffic Management > Load Balancing > Services**.
9. In the details pane, on the Action tab, click Internal Services.
10. Select nsrpcs-127.0.0.1-3008 from the list, and then click Open.
11. On the SSL Settings tab, in the Available pane, select the certificate created in step 7, click Add, and then click OK.
12. Select nskrpcs-127.0.0.1-3009 from the list, and then click Open.
13. On the SSL Settings tab, in the Available pane, select the certificate created in step 7, click Add, and then click OK.
14. Select nsrpcs- : : 11-3008 from the list, and then click Open.
15. On the SSL Settings tab, in the Available pane, select the certificate created in step 7, click Add, and then click OK.
16. Click OK.
17. Navigate to **System > Network > RPC**.
18. In the details pane, select the IP address, and click Open.
19. In the Configure RPC Node dialog box, select Secure.
20. Click OK.

Common network topologies

May 2, 2023

As described in the “Physical deployment mode” section in [Where does a NetScaler appliance fit in the network?](#), you can deploy the NetScaler appliance either inline between the clients and servers or in one-arm mode. Inline mode uses a two-arm topology, which is the most common type of deployment.

Set up a common two-arm topology

In a two-arm topology, one network interface is connected to the client network and another network interface is connected to the server network, ensuring that all traffic flows through the appliance. This topology might require you to reconnect your hardware and also might result in a momentary downtime. The basic variations of two-arm topology are multiple subnets, typically with the appliance on

a public subnet and the servers on a private subnet, and transparent mode, with both the appliance and the servers on the public network.


Set up a simple two-arm multiple subnet topology

One of the most commonly used topologies has the NetScaler appliance inline between the clients and the servers, with a virtual server configured to handle the client requests. This configuration is used when the clients and servers reside on different subnets. In most cases, the clients and servers reside on public and private subnets, respectively.

For example, consider an appliance deployed in two-arm mode for managing servers S1, S2, and S3, with a virtual server of type HTTP configured on the appliance, and with HTTP services running on the servers. The servers are on a private subnet and a SNIP is configured on the appliance to communicate with the servers. The Use SNIP (USNIP) option must be enabled on the appliance so that it uses the SNIP instead of the MIP.

As shown in the following figure, the VIP is on public subnet 217.60.10.0, and the NSIP, the servers, and the SNIP are on private subnet 192.168.100.0/24.

Figure 1. Topology Diagram for Two-Arm Mode, Multiple Subnets

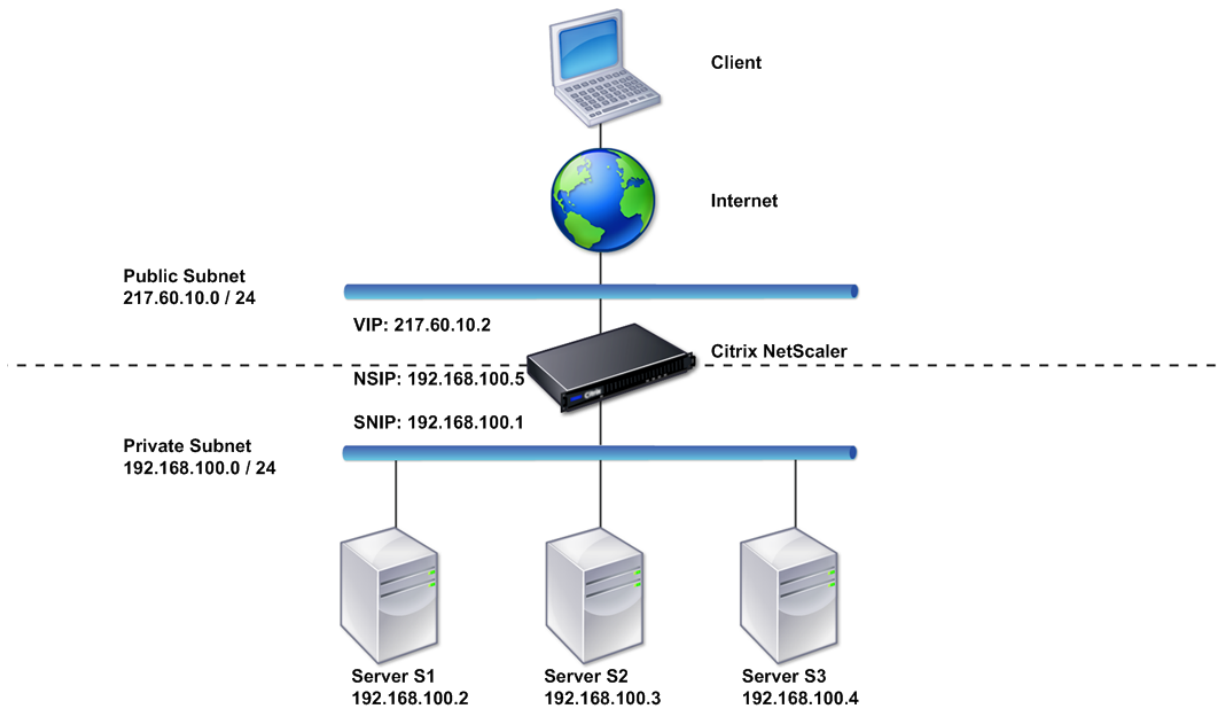


To deploy a NetScaler appliance in two-arm mode with multiple subnets, follow these steps:

1. Configure the NSIP and default gateway, as described in [Configuring the NetScaler IP Address \(NSIP\)](#).
2. Configure the SNIP, as described in [Configuring Subnet IP Addresses](#).
3. Enable the USNIP option, as described in [To enable or disable USNIP mode](#) section.
4. Configure the virtual server and the services, as described in [Creating a Virtual Server](#) section and [Configuring Services](#) section.
5. Connect one of the network interfaces to a private subnet and the other interface to a public subnet.

Set up a simple two-arm transparent topology

Use transparent mode if the clients need to access the servers directly, with no intervening virtual server. The server IP addresses must be public because the clients need to be able to access them. In the example shown in the following figure, a NetScaler appliance is placed between the client and the server, so the traffic must pass through the appliance. You must enable L2 mode for bridging the packets. The NSIP and MIP are on the same public subnet, 217.60.10.0/24.

Figure 2. Topology Diagram for Two-Arm, Transparent Mode

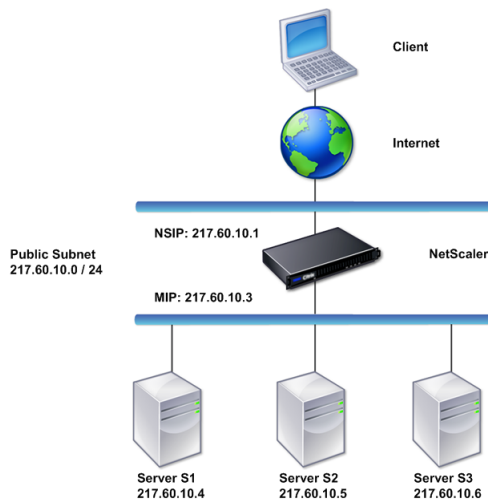

To deploy a NetScaler appliance in two-arm, transparent mode, follow these steps

1. Configure the NSIP and default gateway, as described in [Configuring the NetScaler IP Address \(NSIP\)](#).
2. Enable L2 mode, as described in [Enabling and Disabling Layer 2 Mode](#).
3. Configure the default gateway of the managed servers as the MIP.

4. Connect the network interfaces to the appropriate ports on the switch.


Set up common one-arm topologies

The two basic variations of one-arm topology are with a single subnet and with multiple subnets.

Set up a simple one-arm single subnet topology

You can use a one-arm topology with a single subnet when the clients and servers reside on the same subnet. For example, consider a NetScaler appliance deployed in one-arm mode for managing servers S1, S2, and S3. A virtual server of type HTTP is configured on an ADC appliance, and HTTP services are running on the servers. As shown in the following figure, the NetScaler IP address (NSIP), the Mapped IP address (MIP), and the server IP addresses are on the same public subnet, 217.60.10.0/24.

Figure 3. Topology Diagram for One-Arm Mode, Single Subnet

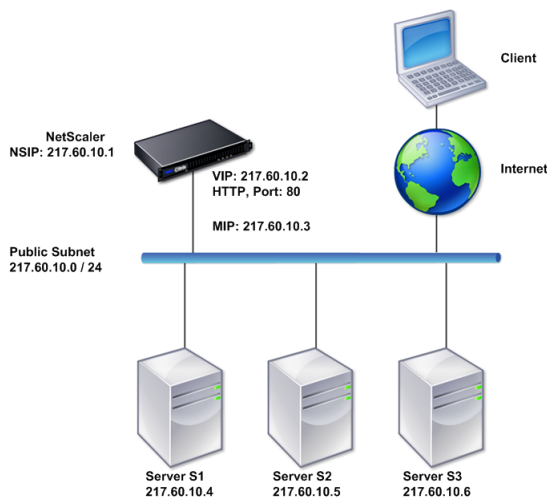


To deploy a NetScaler appliance in one-arm mode with a single subnet, follow these steps:

1. Configure the NSIP and the default gateway, as described in, as described in [Configuring the NetScaler IP Address \(NSIP\)](#).
2. Configure the virtual server and the services, as described in [Creating a Virtual Server](#) section and [Configuring Services](#) section.
3. Connect one of the network interfaces to the switch.

Set up a simple one-arm multiple subnet topology

You can use a one-arm topology with multiple subnets when the clients and servers reside on the different subnets. For example, consider a NetScaler appliance deployed in one-arm mode for managing servers S1, S2, and S3, with the servers connected to switch SW1 on the network. A virtual server of type HTTP is configured on the appliance, and HTTP services are running on the servers. These three servers are on the private subnet, so a subnet IP address (SNIP) is configured to communicate with them. The Use Subnet IP address (USNIP) option must be enabled so that the appliance uses the SNIP instead of a MIP. As shown in the following figure, the virtual IP address (VIP) is on public subnet 217.60.10.0/24; the NSIP, SNIP, and the server IP addresses are on private subnet 192.168.100.0/24.

Figure 4. Topology Diagram for One-Arm Mode, Multiple Subnets

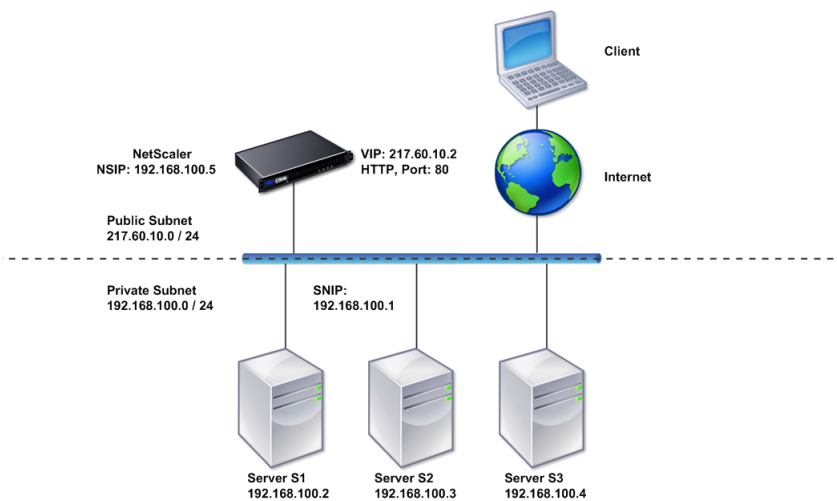

To deploy a NetScaler appliance in one-arm mode with multiple subnets, follow these steps:

1. Configure the NSIP and the default gateway, as described in [Configuring the NetScaler IP Address \(NSIP\)](#).
2. Configure the SNIP and enable the USNIP option, as described in [Configuring Subnet IP Addresses](#).
3. Configure the virtual server and the services, as described in [Creating a Virtual Server](#) section and [Configuring Services](#) section.
4. Connect one of the network interfaces to the switch.

System management settings

May 2, 2023

Once your initial configuration is in place, you can configure settings to define the behavior of the NetScaler appliance and facilitate connection management. You have a number of options for handling HTTP requests and responses. Routing, bridging, and MAC based forwarding modes are available for handling packets not addressed to the NetScaler appliance. You can define the characteristics of your network interfaces and can aggregate the interfaces. To prevent timing problems, you can synchronize the Citrix clock with a Network Time Protocol (NTP) server. The NetScaler appliance can operate in various DNS modes, including as an authoritative domain name server (ADNS). You can set up SNMP for system management and customize syslog logging of system events. Before deployment, verify that your configuration is complete and correct.

System settings

May 2, 2023

Configuration of system settings includes basic tasks such as configuring HTTP ports to enable connection keep-alive and server offload, setting the maximum number of connections for each server, and setting the maximum number of requests per connection. You can enable client IP address insertion for situations in which a proxy IP address is not suitable, and you can change the HTTP cookie version.

You can also configure a NetScaler appliance to open FTP connections on a controlled range of ports instead of ephemeral ports for data connections. This improves security, because opening all ports on the firewall is insecure. You can set the range anywhere from 1,024 to 64,000.

Before deployment, go through the verification checklists to verify your configuration. To configure HTTP parameters and the FTP port range, use the NetScaler GUI.

You can modify the types of HTTP parameters described in the following table.

Parameter Type: HTTP Port Information

Specifies: The web server HTTP ports used by your managed servers. If you specify the ports, the appliance performs request switching for any client request that has a destination port matching a specified port.

Note: If an incoming client request is not destined for a service or a virtual server that is specifically configured on the appliance, the destination port in the request must match one of the

globally configured HTTP ports. This allows the appliance to perform connection keep-alive and server off-load.

Parameter Type: Limits

Specifies: The maximum number of connections to each managed server, and the maximum number of requests sent over each connection. For example, if you set Max Connections to 500, and the appliance is managing three servers, it can open a maximum of 500 connections to each of the three servers. By default, the appliance can create an unlimited number of connections to any of the servers it manages. To specify an unlimited number of requests per connection, set Max Requests to 0.

Note: If you are using the Apache HTTP server, you must set Max Connections equal to the value of the MaxClients parameter in the Apache httpd.conf file. Setting this parameter is optional for other web servers.

Parameter Type: Client IP Insertion

Specifies: Enable/disable insertion of the client's IP address into the HTTP request header. You can specify a name for the header field in the adjacent text box. When a web server managed by an appliance receives a subnet IP address, the server identifies it as the client's IP address. Some applications need the client's IP address for logging purposes or to dynamically determine the content to be served by the web server.

You can enable insertion of the actual client IP address into the HTTP header request sent from the client to one, some, or all servers managed by the appliance. You can then access the inserted address through a minor modification to the server (using an Apache module, ISAPI interface, or NSAPI interface).

Parameter Type: Cookie Version

Specifies: The HTTP cookie version to use when COOKIEINSERT persistence is configured on a virtual server. The default, version 0, is the most common type on the Internet. Alternatively, you can specify version 1.

Parameter Type: Requests/Responses

Specifies: Options for handling certain types of requests, and enable/disable logging of HTTP error responses.

Parameter Type: Server Header Insertion

Specifies: Insert a server header in NetScaler-generated HTTP responses.

To configure HTTP parameters by using the GUI, follow these steps:

1. In the navigation pane, expand **System**, and then click **Settings**.
2. In the details pane, under **Settings**, click **Change HTTP parameters**.

3. In the **Configure HTTP parameters** dialog box, specify values for some or all of the parameters that appear under the headings listed in the table above.
4. Click **OK**.

To set the FTP port range by using the GUI, follow these steps:


1. In the navigation pane, expand **System**, and then click **Settings**
2. In the details pane, under **Settings**, click **Change global system settings**.
3. Under **FTP Port Range**, in the **Start Port** and **End Port** text boxes, type the lowest and highest port numbers, respectively, for the range you want to specify (for example, 5000 and 6000).
4. Click **OK**.

Packet forwarding modes

May 2, 2023

The NetScaler appliance can either route or bridge packets that are not destined for an IP address owned by the appliance (that is, the IP address is not the NSIP, a MIP, a SNIP, a configured service, or a configured virtual server). By default, L3 mode (routing) is enabled and L2 mode (bridging) is disabled, but you can change the configuration. The following flow chart shows how the appliance evaluates packets and either processes, routes, bridges, or drops them.

Figure 1. Interaction between Layer 2 and Layer 3 Modes

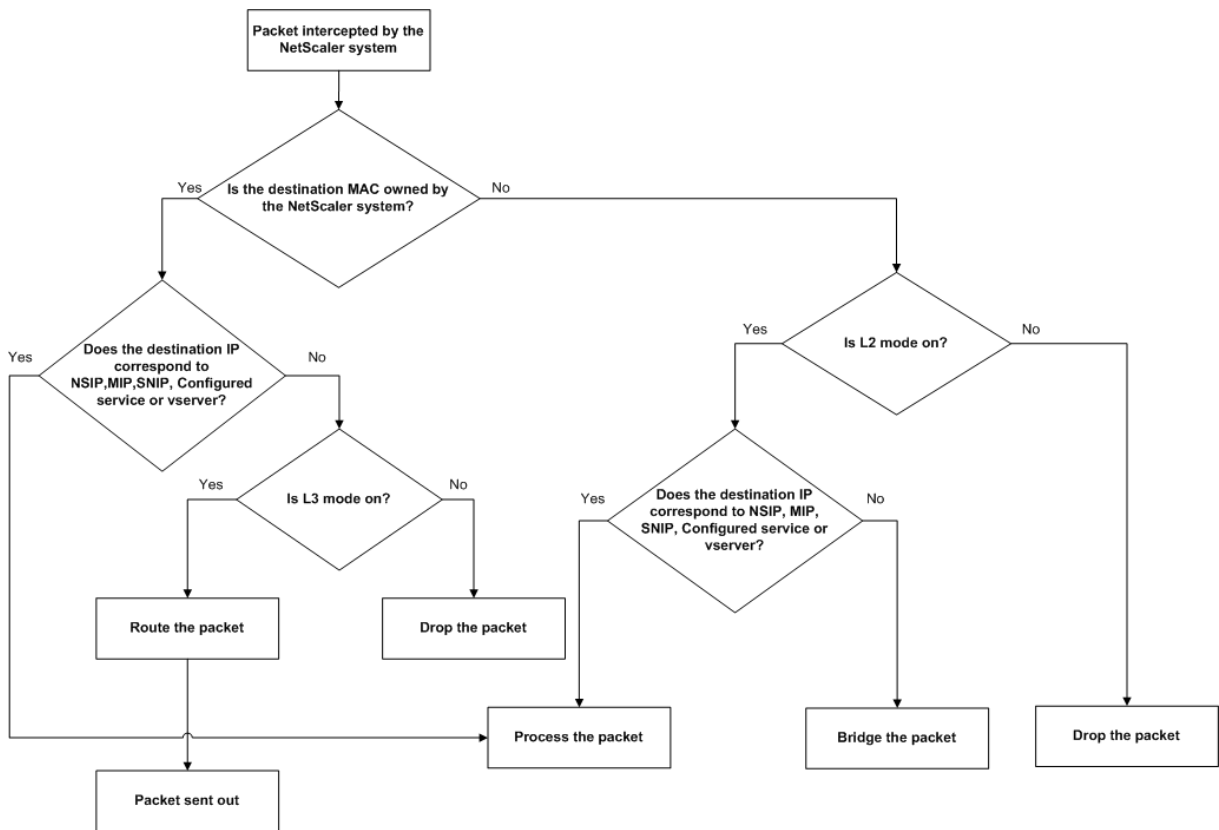

An appliance can use the following modes to forward the packets it receives:

- Layer 2 (L2) Mode
- Layer 3 (L3) Mode
- MAC-Based Forwarding Mode

Enable and disable layer 2 mode

Layer 2 mode controls the Layer 2 forwarding (bridging) function. You can use this mode to configure a NetScaler appliance to behave as a Layer 2 device and bridge the packets that are not destined for it. When this mode is enabled, packets are not forwarded to any of the MAC addresses, because the packets can arrive on any interface of the appliance and each interface has its own MAC address.

With Layer 2 mode disabled (which is the default), the appliance drops packets that are not destined for one of its MAC address. If another Layer 2 device is installed in parallel with the appliance, Layer 2 mode must be disabled to prevent bridging (Layer 2) loops. You can use the configuration utility or the command line to enable Layer 2 mode.

Note: The appliance does not support the Spanning Tree Protocol. To avoid loops, if you enable L2 mode, do not connect two interfaces on the appliance to the same broadcast domain.

To enable or disable Layer 2 mode by using the CLI

At the command prompt, type the following commands to enable/disable Layer 2 mode and verify that it has been enabled/disabled:

- enable ns mode <Mode>
- disable ns mode <Mode>
- show ns mode

Examples

```
1 > enable ns mode l2
2 Done
3 > show ns mode
4
5 Mode Acronym Status
6 -----
7 1) Fast Ramp FR ON
8 2) Layer 2 mode L2 ON
9 .
10 .
11 .
12 Done
13 >
14
15 > disable ns mode l2
16 Done
17 > show ns mode
18
19 Mode Acronym Status
20 -----
21 1) Fast Ramp FR ON
22 2) Layer 2 mode L2 OFF
23 .
24 .
25 .
26 Done
27 >
```

To enable or disable Layer 2 mode by using the GUI

1. In the navigation pane, expand **System**, and then click **Settings**.
2. In the details pane, under **Modes** and **Features**, click **Configure modes**.
3. In the **Configure Modes** dialog box, to enable Layer 2 mode, select the **Layer 2 Mode** check box. To disable Layer 2 mode, clear the check box.
4. Click **OK**. The **Enable/Disable Mode(s)?** message appears in the details pane.
5. Click **Yes**.

Enable and disable layer 3 mode

Layer 3 mode controls the Layer 3 forwarding function. You can use this mode to configure a NetScaler appliance to look at its routing table and forward packets that are not destined for it. With Layer 3 mode enabled (which is the default), the appliance performs route table lookups and forwards all packets that are not destined for any appliance-owned IP address. If you disable Layer 3 mode, the appliance drops these packets.

Enable or disable Layer 3 mode by using the CLI

At the command prompt, type the following commands to enable/disable Layer 3 mode and verify that it has been enabled/disabled:

- enable ns mode <Mode>
- disable ns mode <Mode>
- show ns mode

Examples

```
1 > enable ns mode l3
2 Done
3 > show ns mode
4
5 Mode Acronym Status
6 -----
7 1) Fast Ramp FR ON
8 2) Layer 2 mode L2 OFF
9 .
10 .
11 .
12 9) Layer 3 mode (ip forwarding) L3 ON
13 .
14 .
15 .
16 Done
17 >
18
19 > disable ns mode l3
20 Done
21 > show ns mode
22
23 Mode Acronym Status
24 -----
25 1) Fast Ramp FR ON
26 2) Layer 2 mode L2 OFF
27 .
28 .
29 .
```



```
30      9) Layer 3 mode (ip forwarding) L3 OFF
31      .
32      .
33      .
34      Done
35      >
```

Enable or disable Layer 3 mode by using the GUI

1. In the navigation pane, expand **System**, and then click **Settings**.
2. In the details pane, under **Modes and Features**, click **Configure Modes**.
3. In the **Configure Modes** dialog box, to enable Layer 3 mode, select the **Layer 3 Mode (IP Forwarding)** check box. To disable Layer 3 mode, clear the check box.
4. Click **OK**. The **Enable/Disable Mode(s)?** message appears in the details pane.
5. Click **Yes**.


Enable and disable MAC-based forwarding mode

You can use MAC-based forwarding to process traffic more efficiently and avoid multiple-route or ARP lookups when forwarding packets, because the NetScaler appliance remembers the MAC address of the source. To avoid multiple lookups, the appliance caches the source MAC address of every connection for which it performs an ARP lookup, and it returns the data to the same MAC address.

MAC-based forwarding is useful when you use VPN devices because the appliance ensures that all traffic flowing through a particular VPN passes through the same VPN device.

The following figure shows the process of MAC-based forwarding.

Figure 2. MAC-based Forwarding Process

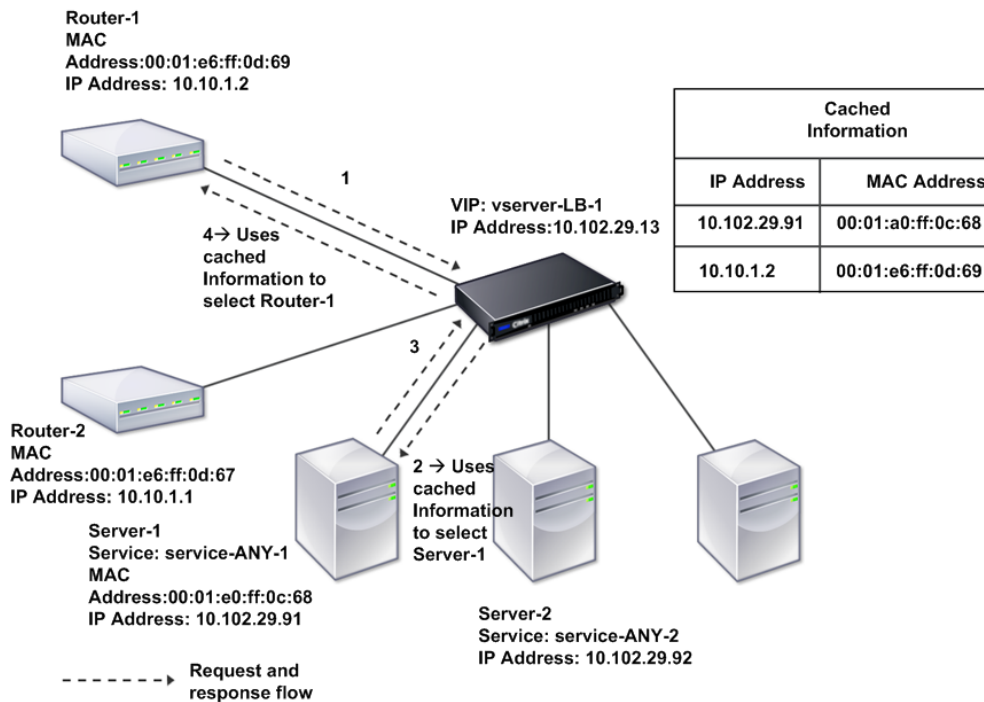

When MAC-based forwarding is enabled, the appliance caches the MAC address of:

- The source (a transmitting device such as router, firewall, or VPN device) of the inbound connection.
- The server that responds to the requests.

When a server responds through an appliance, the appliance sets the destination MAC address of the response packet to the cached address, ensuring that the traffic flows in a symmetric manner, and then forwards the response to the client. The process bypasses the route table lookup and ARP lookup functions. However, when an appliance initiates a connection, it uses the route and ARP tables for the lookup function. To enable MAC-based forwarding, use the configuration utility or the command line.

Some deployments require the incoming and outgoing paths to flow through different routers. In these situations, MAC-based forwarding breaks the topology design. For a global server load balancing (GSLB) site that requires the incoming and outgoing paths to flow through different routers, you must disable MAC-based forwarding and use the appliance’s default router as the outgoing router.

With MAC-based forwarding disabled and Layer 2 or Layer 3 connectivity enabled, a route table can specify separate routers for outgoing and incoming connections. To disable MAC-based forwarding, use the configuration utility or the command line.

Enable or disable MAC-based forwarding by using the CLI

At the command prompt, type the following commands to enable/disable MAC-based forwarding mode and verify that it has been enabled/disabled:

- <enable ns mode <Mode>
- <disable ns mode <Mode>
- <show ns mode

Example

““ pre codeblock

```
enable ns mode mbf
Done
show ns mode
```

1	Mode	Acronym	Status	1)	Fast
2	-----	-----	-----	2)	Layer 2
	Ramp mode	FR	ON	.	.
	MAC-based forwarding	L2	OFF	.	6)
	Done >	MBF	ON	.	.

```
disable ns mode mbf
Done
show ns mode
```

1	Mode	Acronym	Status	1)	Fast
2	-----	-----	-----	2)	Layer 2
	Ramp mode	FR	ON	.	.
	MAC-based forwarding	L2	OFF	.	6)
	Done >	MBF	OFF	.	.

To enable or disable MAC-based forwarding by using the GUI

1. In the navigation pane, expand **System**, and then click **Settings**.
2. In the details pane, under **Modes and Features** group, click **Configure modes**.
3. In the **Configure Modes** dialog box, to enable MAC-based forwarding mode, select the **MAC Based Forwarding** check box. To disable MAC-based forwarding mode, clear the check box.
4. Click **OK**. The **Enable/Disable Mode(s)?** message appears in the details pane.
5. Click **Yes**.

Network interfaces

May 2, 2023

The NetScaler interfaces are numbered in slot/port notation. In addition to modifying the characteristics of individual interfaces, you can configure virtual LANs to restrict traffic to specific groups of hosts. You can also aggregate links into high-speed channels.

Virtual LANs

The NetScaler appliance supports (Layer 2) port and IEEE802.1Q tagged virtual LANs (VLANs). VLAN configurations are useful when you need to restrict traffic to certain groups of stations. You can configure a network interface to belong to multiple VLANs by using IEEE 802.1q tagging.

You can bind your configured VLANs to IP subnets. The ADC appliance (if it is configured as the default router for the hosts on the subnets) then performs IP forwarding between these VLANs.

The NetScaler appliance supports the following types of VLANs.

- Default VLAN

By default, the network interfaces on a NetScaler appliance are included in a single, port-based VLAN as untagged network interfaces. This default VLAN has a VID of 1 and exists permanently. It cannot be deleted, and its VID cannot be changed.

- Port-Based VLANs

A set of network interfaces that share a common, exclusive, Layer 2 broadcast domain define the membership of a port-based VLAN. You can configure multiple port-based VLANs. When you add an interface to a new VLAN as an untagged member, it is automatically removed from the default VLAN.

- Tagged VLAN

A network interface can be a tagged or untagged member of a VLAN. Each network interface is an untagged member of only one VLAN (its native VLAN). The untagged network interface forwards the frames for the native VLAN as untagged frames. A tagged network interface can be a part of more than one VLAN. When you configure tagging, be sure that both ends of the link have matching VLAN settings. You can use the configuration utility to define a tagged VLAN (nsvlan) that can have any ports bound as tagged members of the VLAN. Configuring this VLAN requires a reboot of the ADC appliance and therefore must be done during initial network configuration.

Link aggregate channels

Link aggregation combines incoming data from multiple ports into a single high speed link. Configuring the link aggregate channel increases the capacity and availability of the communication channel between a NetScaler appliance and other connected devices. An aggregated link is also referred to as a channel.

When a network interface is bound to a channel, the channel parameters have precedence over the network interface parameters. A network interface can be bound to only one channel. Binding a network interface to a link aggregate channel changes the VLAN configuration. That is, binding network interfaces to a channel removes them from the VLANs that they originally belonged to and adds them to the default VLAN. However, you can bind the channel back to the old VLAN, or to a new one. For example, if you have bound network interfaces 1/2 and 1/3 to a VLAN with ID 2, and then you bind them to link aggregate channel LA/1, the network interfaces are moved to the default VLAN, but you can bind them to VLAN 2.

Note: You can also use Link Aggregation Control Protocol (LACP) to configure link aggregation. For more information, see [Configuring Link Aggregation by Using the Link Aggregation Control Protocol](#).

Clock synchronization

May 2, 2023

You can configure your NetScaler appliance to synchronize its local clock with a Network Time Protocol (NTP) server. This ensures that its clock has the same date and time settings as the other servers on your network. NTP uses User Datagram Protocol (UDP) port 123 as its transport layer. Add NTP servers in the NTP configuration file so that the appliance periodically gets updates from these servers.

If you do not have a local NTP server, you can find a list of public, open access, NTP servers at the official NTP site at <http://www.ntp.org>.

To configure clock synchronization on your appliance, follow these steps:

1. Log on to the command line and enter the shell command.
2. At the shell prompt, copy the `ntp.conf` file from the `/etc` directory to the `/nsconfig` directory. If the file already exists in the `/nsconfig` directory, make sure that you remove the following entries from the `ntp.conf` file:

```
restrict localhost
restrict 127.0.0.2
```

These entries are required only if you want to run the device as a time server. However, this feature is not supported on the NetScaler appliance.

3. Edit `/nsconfig/ntp.conf` by typing the IP address for the desired NTP server under the file's server and restrict entries.
4. Create a file named `rc.netscaler` in the `/nsconfig` directory, if the file does not already exist in the directory.
5. Edit `/nsconfig/rc.netscaler` by adding the following entry: `/bin/sh /etc/ntpctl full_start`.

This entry starts the `ntpd` service, and checks the `ntp.conf` file.

If you do not want to forcibly sync the time when there is a large difference, you can set the date manually and then start `ntpd` again. You can check the time difference between the appliance and the time server, by running the following command in the shell:

```
1 ntpdate -q <IP address or domain name of the NTP server>
```

6. Reboot the appliance to enable clock synchronization.

Note: If you want to start time synchronization without restarting the appliance, enter one of the following commands at the shell prompt:

```
1 /usr/sbin/ntpd -c /nsconfig/ntp.conf -g -p /var/run/ntpd.pid -l /
  var/log/ntpd.log &
2
3 or
4
5 /bin/sh /etc/ntpctl full_start
```

DNS configuration

May 2, 2023

You can configure a NetScaler appliance to function as an Authoritative Domain Name Server (ADNS), DNS proxy server, End Resolver, or Forwarder. You can add DNS resource records such as SRV Records, AAAA Records, A Records, MX Records, NS Records, CNAME Records, PTR Records, and SOA Records. Also, the appliance can balance the load on external DNS servers.

A common practice is to configure an appliance as a forwarder. For this configuration, you need to add external name servers. After you have added the external servers, you should verify that your configuration is correct.

You can add, remove, enable, and disable external name servers. You can create a name server by specifying its IP address, or you can configure an existing virtual server as the name server.

When adding name servers, you can specify IP addresses or virtual IP addresses (VIPs). If you use IP addresses, the appliance load balances requests to the configured name servers in a round robin manner. If you use VIPs, you can specify any load balancing method.

Add a name server by using the CLI

At the command prompt, type the following commands to add a name server and verify the configuration:

- `<add dns nameServer \<IP\>`
- `<show dns nameServer \<IP\>`

Example

```
1 > add dns nameServer 10.102.29.10
2 Done
3 > show dns nameServer 10.102.29.10
4 1)      10.102.29.10 - State: DOWN
5 Done
```

Add a name server by using the GUI

1. Navigate to **Traffic Management > DNS > Name Servers**.
2. In the details pane, click **Add**.
3. In the **Create Name Server** dialog box, select **IP Address**.
4. In the **IP Address** text box, type the IP address of the name server (for example, 10.102.29.10).
If you are adding an external name server, clear the **Local** check box.
5. Click **Create**, and then click **Close**.
6. Verify that the name server you added appears in the **Name Servers** pane.


SNMP configuration

May 2, 2023

The Simple Network Management Protocol (SNMP) network management application, running on an external computer, queries the SNMP agent on the NetScaler appliance. The agent searches the management information base (MIB) for data requested by the network management application and sends the data to the application.

SNMP monitoring uses traps messages and alarms. SNMP traps messages are asynchronous events that the agent generates to signal abnormal conditions, which are indicated by alarms. For example, if you want to be informed when CPU utilization is above 90 percent, you can set up an alarm for that condition. The following figure shows a network with a NetScaler appliance that has SNMP enabled and configured.

Figure 1. SNMP on the NetScaler appliance

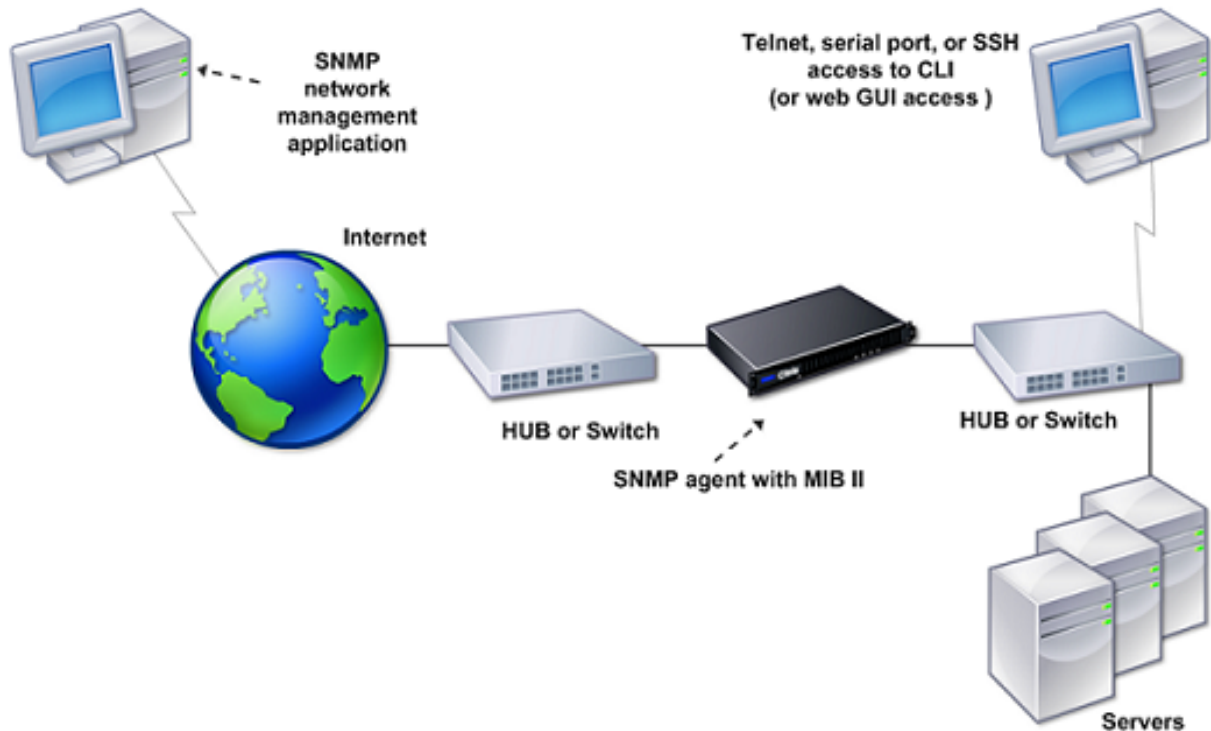

The SNMP agent on a NetScaler appliance supports SNMP version 1 (SNMPv1), SNMP version 2 (SNMPv2), and SNMP version 3 (SNMPv3). Because it operates in bilingual mode, the agent can handle SNMPv2 queries, such as Get-Bulk, and SNMPv1 queries. The SNMP agent also sends traps compliant with SNMPv2 and supports SNMPv2 data types, such as counter64. SNMPv1 managers (programs on other servers that request SNMP information from the ADC appliance) use the NS-MIB-smiv1.mib file when processing SNMP queries. SNMPv2 managers use the NS-MIB-smiv2.mib file.

The NetScaler appliance supports the following enterprise-specific MIBs:

- A subset of standard MIB-2 groups. Provides MIB-2 groups SYSTEM, IF, ICMP, UDP, and SNMP.
- A system enterprise MIB. Provides system-specific configuration and statistics.

To configure SNMP, you specify which managers can query the SNMP agent, add SNMP trap listeners that will receive the SNMP trap messages, and configure SNMP Alarms.

Add SNMP managers

You can configure a workstation running a management application that complies with SNMP version 1, 2, or 3 to access an appliance. Such a workstation is called an SNMP manager. If you do not specify an SNMP manager on the appliance, the appliance accepts and responds to SNMP queries from all IP addresses on the network. If you configure one or more SNMP managers, the appliance accepts and responds to SNMP queries from only those specific IP addresses. When specifying the IP address of an SNMP manager, you can use the netmask parameter to grant access from entire subnets. You can add a maximum of 100 SNMP managers or networks. To add an SNMP manager by using the CLI

At the command prompt, type the following commands to add an SNMP manager and verify the configuration:

```
add snmp manager <IPAddress> ... [-netmask <netmask>]  
show snmp manager <IPAddress>
```

Example:

```
1 add snmp manager 10.102.29.5 -netmask 255.255.255.255  
2 Done  
3 show snmp manager 10.102.29.5  
4 10.102.29.5 255.255.255.255  
5 Done
```

To add an SNMP manager by using the GUI:

1. In the navigation pane, expand **System**, expand **SNMP**, and then click **Managers**.
2. In the details pane, click **Add**.
3. In the **Add SNMP Manager** dialog box, in the **IP Address** text box, type the IP address of the workstation running the management application (for example, 10.102.29.5).
4. Click **Create**, and then click **Close**.
5. Verify that the SNMP manager you added appears in the **Details** section at the bottom of the pane.

Add SNMP traps listeners

After configuring the alarms, you need to specify the trap listener to which the appliance will send the trap messages. Apart from specifying parameters like IP address and the destination port of the trap listener, you can specify the type of trap (either generic or specific) and the SNMP version.

You can configure a maximum of 20 trap listeners for receiving either generic or specific traps.

To add an SNMP trap listener by using the CLI

At the command prompt, type the following command to add an SNMP trap and verify that it has been added:

- `add snmp trap specific <IP>`
- `show snmp trap`

Example:

```
1 Trap type: SPECIFIC
2 Destination IP: 10.102.29.3
3 TD: 0
4 Destination Port: 162
5 Source IP: NetScaler IP
6 Version: V2
7 Min-Severity: -
8 AllPartition: DISABLED
9 Community: public
```

To add an SNMP trap listener by using the GUI

1. In the navigation pane, expand System, expand **SNMP**, and then click **Traps**.
2. In the details pane, click **Add**.
3. In the **Create SNMP Trap Destination** dialog box, in the **Destination IP Address** text box, type the IP address (for example, 10.102.29.3).
4. Click **Create** and then click **Close**.
5. Verify that the SNMP trap you added appears in the **Details** section at the bottom of the pane.

Configure SNMP alarms

You configure alarms so that the appliance generates a trap message when an event corresponding to one of the alarms occurs. Configuring an alarm consists of enabling the alarm and setting the severity level at which a trap is generated. There are five severity levels: Critical, Major, Minor, Warning, and Informational. A trap is sent only when the severity of the alarm matches the severity specified for the trap.

Some alarms are enabled by default. If you disable an SNMP alarm, the appliance will not generate trap messages when corresponding events occur. For example, if you disable the Login-Failure SNMP alarm, the appliance will not generate a trap message when a login failure occurs.

To enable or disable an alarm by using the CLI

At the command prompt, type the following commands to enable or disable an alarm and verify that it has been enabled or disabled:

```
set snmp alarm [-state ENABLED                DISABLED ]
```

-
- show snmp alarm <trapName>

Example

```
1 set snmp alarm LOGIN-FAILURE -state ENABLED
2 Done
3 show snmp alarm LOGIN-FAILURE
4 Alarm Alarm Threshold Normal Threshold Time State Severity Logging
5 \-----
6 LOGIN-FAILURE N/A N/A N/A ENABLED - ENABLED
7 Done
```

To set the severity of the alarm by using the CLI

At the command prompt, type the following commands to set the severity of the alarm and verify that the severity has been set correctly:

- set snmp alarm <trapName> [-severity <severity>]
- show snmp alarm <trapName>

Example:

```
1 set snmp alarm LOGIN-FAILURE -severity Major
2 Done
3 show snmp alarm LOGIN-FAILURE
4 Alarm Alarm Threshold Normal Threshold Time State Severity Logging
5 \-----
6 LOGIN-FAILURE N/A N/A N/A ENABLED Major ENABLED
7 Done
```

To configure alarms by using the GUI

1. In the navigation pane, expand **System**, expand SNMP, and then click **Alarms**.
2. In the details pane, select an alarm (for example, LOGIN-FAILURE), and then click **Open**.

3. In the **Configure SNMP Alarm** dialog box, to enable the alarm, select Enabled in the **State** drop-down list. To disable the alarm, select Disabled.
4. In the **Severity** drop-down list, select a severity option (for example, Major).
5. Click **OK**, and then click **Close**.
6. Verify that the parameters for the SNMP alarm you configured are correctly configured by viewing the **Details** section at the bottom of the pane.

Verify configuration

May 2, 2023

After you've finished configuring your system, complete the following checklists to verify your configuration.

Configuration checklist

- The build running is:
- There are no incompatibility issues. (Incompatibility issues are documented in the build's release notes.)
- The port settings (speed, duplex, flow control, monitoring) are the same as the switch's port.
- Enough SNIP IP addresses have been configured to support all server-side connections during peak times.
 - The number of configured SNIP IP addresses is:_____
 - The expected number of simultaneous server connections is:
[] 62,000 [] 124,000 [] Other_____

Topology configuration checklist

The routes have been used to resolve servers on other subnets.

The routes entered are:

- If the NetScaler appliance is in a public-private topology, reverse NAT has been configured.
 - The failover (high availability) settings configured on the ADC appliance resolve in a one arm or two-arm configuration. All unused network interfaces have been disabled:
-

- If the ADC appliance is placed behind an external load balancer, then the load balancing policy on the external load balancer is not “least connection”.

The load balancing policy configured on the external load balancer is:

- If the ADC appliance is placed in front of a firewall, the session time-out on the firewall is set to a value greater than or equal to 300 seconds.

Note: The TCP idle connection timeout on a NetScaler appliance is 360 seconds. If the timeout on the firewall is also set to 300 seconds or more, then the appliance can perform TCP connection multiplexing effectively because connections will not be closed earlier.

The value configured for the session time-out is: _____

Server configuration checklist

- “Keep-alive” has been enabled on all the servers.

The value configured for the keep-alive time-out is: _____

- The default gateway has been set to the correct value. (The default gateway should either be a NetScaler appliance or upstream router.) The default gateway is:

- The server port settings (speed, duplex, flow control, monitoring) are the same as the switch port settings.

- If the Microsoft® Internet Information Server is used, buffering is enabled on the server.
- If an Apache Server is used, the MaxConn (maximum number of connections) parameter is configured on the server and on the NetScaler appliance.

The MaxConn (maximum number of connections) value that has been set is:

- If a Netscape Enterprise Server is used, the maximum requests per connection parameter is set on the NetScaler appliance. The maximum requests per connection value that has been set is:

Software features configuration checklist

- Does the Layer 2 mode feature need to be disabled? (Disable if another Layer 2 device is working in parallel with a NetScaler appliance.)

Reason for enabling or disabling:

- Does the MAC-based forwarding feature need to be disabled? (If the MAC address used by return traffic is different, it should be disabled.)

Reason for enabling or disabling:

- Does host-based reuse need to be disabled? (Is there virtual hosting on the servers?)

Reason for enabling or disabling:

- Do the default settings of the surge protection feature need to be changed?

Reason for changing or not changing:

Access checklist

- The system IPs can be pinged from the client-side network.
- The system IPs can be pinged from the server-side network.
- The managed server(s) can be pinged through the NetScaler.
- Internet hosts can be pinged from the managed servers.
- The managed server(s) can be accessed through the browser.
- The Internet can be accessed from managed server(s) using the browser.
- The system can be accessed using SSH.
- Admin access to all managed server(s) is working.

Note: When you are using the ping utility, ensure that the pinged server has ICMP ECHO enabled, or your ping will not succeed.

Firewall checklist

The following firewall requirements have been met:

- UDP 161 (SNMP)
- UDP 162 (SNMP trap)
- TCP/UDP 3010 (GUI)
- HTTP 80 (GUI)
- TCP 22 (SSH)

Load balance traffic on a NetScaler appliance

May 2, 2023

The load balancing feature distributes client requests across multiple servers to optimize resource utilization. In a real-world scenario with a limited number of servers providing service to a large number of clients, a server can become overloaded and degrade the performance of the server farm. A NetScaler appliance uses load balancing criteria to prevent bottlenecks by forwarding each client request to the server best suited to handle the request when it arrives.


To configure load balancing, you define a virtual server to proxy multiple servers in a server farm and balance the load among them.

When a client initiates a connection to the server, a virtual server terminates the client connection and initiates a new connection with the selected server, or reuses an existing connection with the server, to perform load balancing. The load balancing feature provides traffic management from Layer 4 (TCP and UDP) through Layer 7 (FTP, HTTP, and HTTPS).

The NetScaler appliance uses a number of algorithms, called load balancing methods, to determine how to distribute the load among the servers. The default load balancing method is the Least Connections method.

A typical load balancing deployment consists of the entities described in the following figure.

Figure 1. Load Balancing Architecture

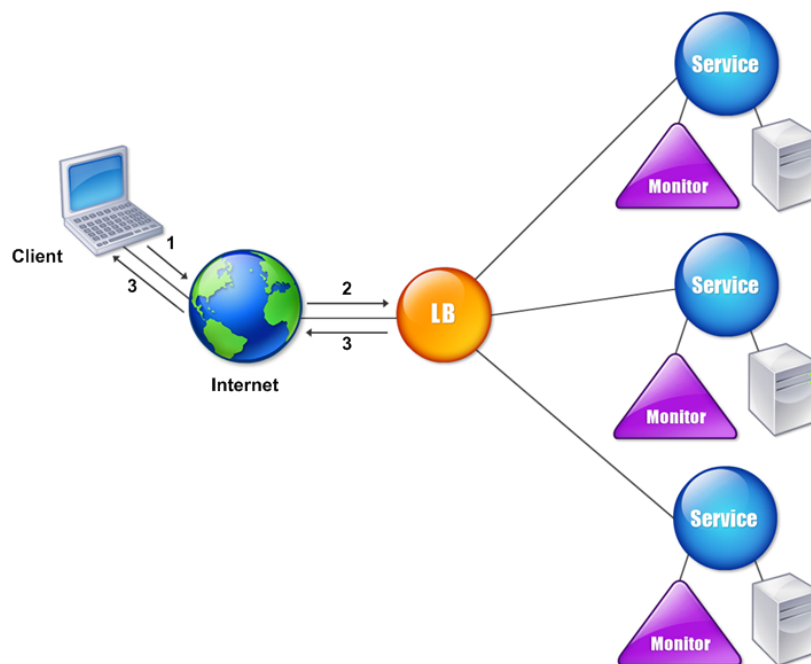

The entities function as follows:

- **Virtual server.** An entity that is represented by an IP address, a port, and a protocol. The virtual server IP address (VIP) is usually a public IP address. The client sends connection requests to this IP address. The virtual server represents a bank of servers.
- **Service.** A logical representation of a server or an application running on a server. Identifies the server's IP address, a port, and a protocol. The services are bound to the virtual servers.
- **Server object.** An entity that is represented by an IP address. The server object is created when you create a service. The IP address of the service is taken as the name of the server object. You can also create a server object and then create services by using the server object.
- **Monitor.** An entity that tracks the health of the services. The appliance periodically probes the servers using the monitor bound to each service. If a server does not respond within a specified response timeout, and the specified number of probes fails, the service is marked DOWN. The appliance then performs load balancing among the remaining services.

Load balancing

March 22, 2024


To configure load balancing, you must first create services. Then, you create virtual servers and bind the services to the virtual servers. By default, the NetScaler appliance binds a monitor to each service. After binding the services, verify your configuration by making sure that all of the settings are correct.

Note: After you deploy the configuration, you can display statistics that show how the entities in the configuration are performing. Use the statistical utility or the `stat lb vserver <vserverName>` command.

Optionally, you can assign weights to a service. The load balancing method then uses the assigned weight to select a service. For getting started, however, you can limit optional tasks to configuring some basic persistence settings, for sessions that must maintain a connection to a particular server, and some basic configuration-protection settings.

The following flow chart illustrates the sequence of the configuration tasks.

Figure 1. Sequence of Tasks to Configure Load Balancing

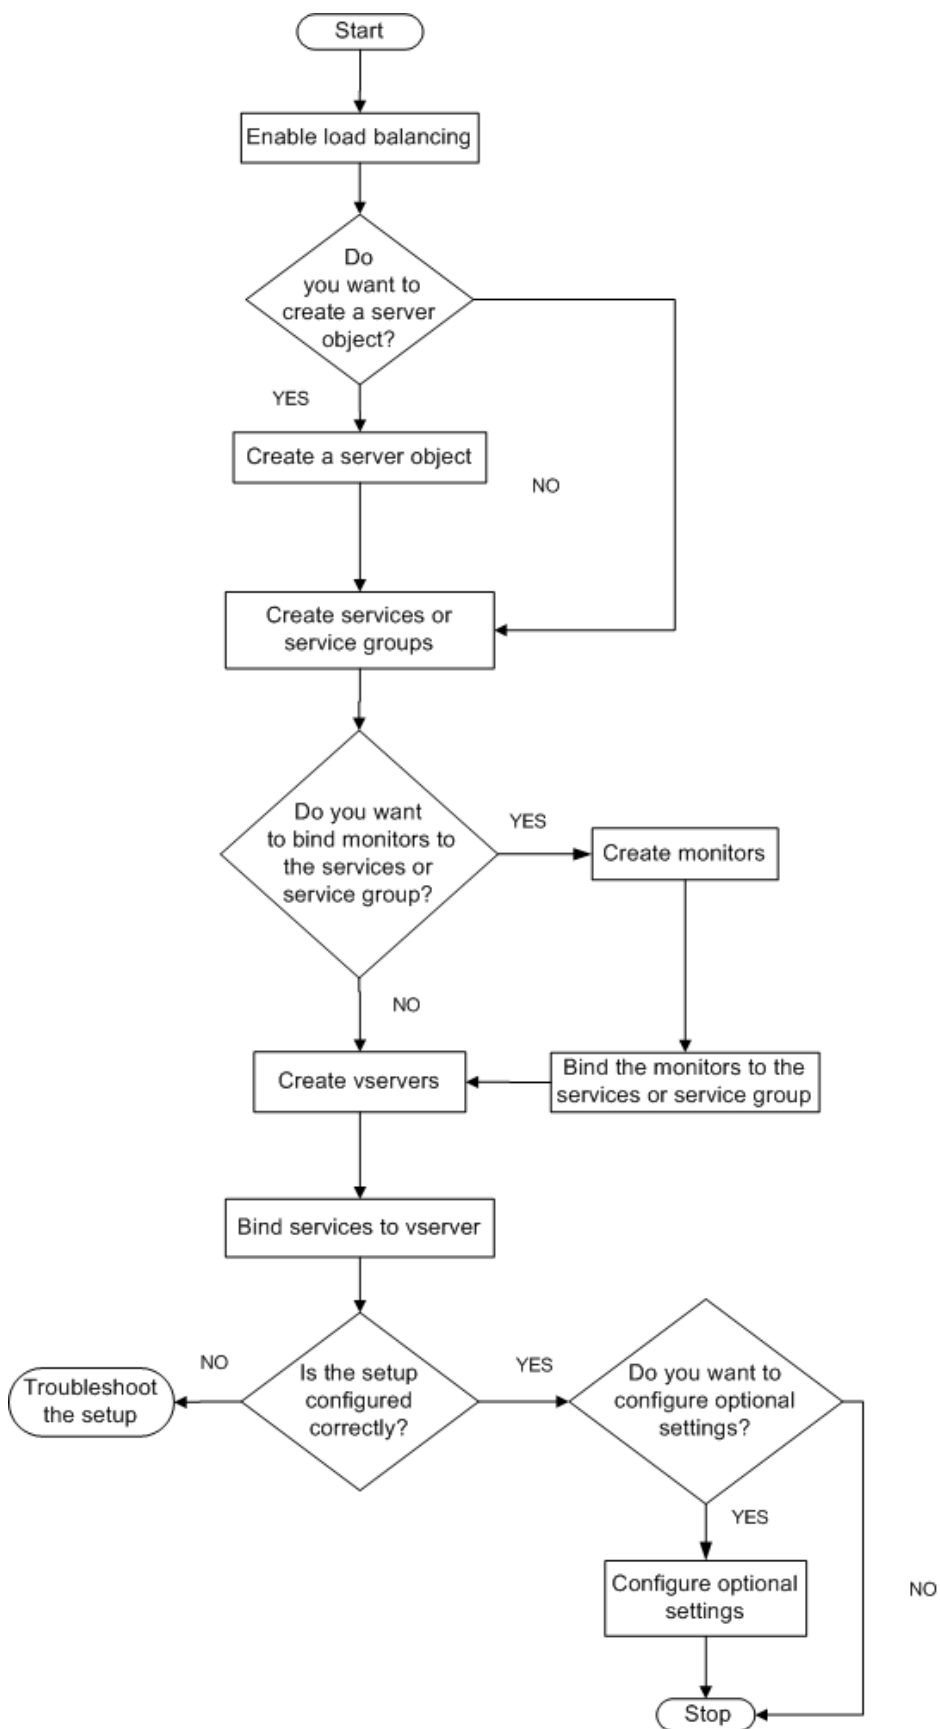

Enable load balancing

Before configuring load balancing, make sure that the load balancing feature is enabled.

To enable load balancing by using the CLI

At the command prompt, type the following commands to enable load balancing and verify that it is enabled:

- enable feature lb
- show feature

Example

```
1 > enable feature lb
2 Done
3 > show feature
4
5     Feature                Acronym        Status
6     -----                -
7 1) Web Logging            WL             OFF
8 2) Surge Protection       SP             OFF
9 3) Load Balancing        LB             ON
10 .
11 .
12 .
13 9) SSL Offloading        SSL            ON
14 .
15 .
16 .
17 Done
```

To enable load balancing by using the GUI

1. In the navigation pane, expand System, and then click Settings.
2. In the details pane, under Modes and Features, click Change basic features.
3. In the Configure Basic Features dialog box, select the Load Balancing check box, and then click OK.
4. In the Enable/Disable Feature(s)? message, click Yes.

Configure services and a virtual server

When you have identified the services you want to load balance, you can implement your initial load balancing configuration by creating the service objects, creating a load balancing virtual server, and binding the service objects to the virtual server.

To implement the initial load balancing configuration by using the CLI

At the command prompt, type the following commands to implement and verify the initial configuration:

- `<add service <name> <IPAddress> <serviceType> <port>`
- `<add lb vserver <vServerName> <serviceType> [<IPAddress> <port>]`
- `<bind lb vserver <name> <serviceName>`
- `<show service bindings <serviceName>`

Example

```
1 > add service service-HTTP-1 10.102.29.5 HTTP 80
2 Done
3 > add lb vserver vserver-LB-1 HTTP 10.102.29.60 80
4 Done
5 > bind lb vserver vserver-LB-1 service-HTTP-1
6 Done
7 > show service bindings service-HTTP-1
8     service-HTTP-1 (10.102.29.5:80) - State : DOWN
9
10     1)         vserver-LB-1 (10.102.29.60:80) - State : DOWN
11 Done
```

To implement the initial load balancing configuration by using the GUI

1. Navigate to Traffic Management > Load Balancing.
2. In the details pane, under Getting Started, click Load Balancing wizard, and follow the instructions to create a basic load balancing setup.
3. Return to the navigation pane, expand Load Balancing, and then click Virtual Servers.
4. Select the virtual server that you configured and verify that the parameters displayed at the bottom of the page are correctly configured.
5. Click Open.
6. Verify that each service is bound to the virtual server by confirming that the Active check box is selected for each service on the Services tab.

Persistence settings

May 2, 2023

You must configure persistence on a virtual server if you want to maintain the states of connections on the servers represented by that virtual server (for example, connections used in e-commerce). The appliance then uses the configured load balancing method for the initial selection of a server, but forwards to that same server all subsequent requests from the same client.

If persistence is configured, it overrides the load balancing methods once the server has been selected. If the configured persistence applies to a service that is down, the appliance uses the load balancing methods to select a new service, and the new service becomes persistent for subsequent requests from the client. If the selected service is in an Out Of Service state, it continues to serve the outstanding requests but does not accept new requests or connections. After the shutdown period elapses, the existing connections are closed. The following table lists the types of persistence that you can configure.

Persistence Type	Persistent Connections
Source IP, SSL Session ID, Rule, DESTIP, SRCIPDESTIP	250K*
CookieInsert, URL passive, Custom Server ID	Memory limit. In case of CookieInsert, if time out is not 0, any number of connections is allowed until limited by memory.

The * in the preceding table refers to the following:

250K sessions per core is the default per packet engine. To configure 1 million session entries per packet engine, run the following command:

```
set lb parameter -sessionsthreshold <1000000*number of PE>
```

For a 3 PE system, run the following command:

```
set lb parameter -sessionsthreshold 3000000
```

Table 1. Limitations on Number of Simultaneous Persistent Connections

If the configured persistence cannot be maintained because of a lack of resources on an appliance, the load balancing methods are used for server selection. Persistence is maintained for a configured period of time, depending on the persistence type. Some persistence types are specific to certain virtual servers. The following table shows the relationship.

Persistence TypeHeader	HTTP	HTTPS	TCP	UDP/IP	SSL_Bridge
1					
Source IP	YES	YES	YES	YES	YES

Persistence					
TypeHeader	HTTP	HTTPS	TCP	UDP/IP	SSL_Bridge
1					
CookieInsert	YES	YES	NO	NO	NO
SSL Session ID	NO	YES	NO	NO	YES
URL Passive	YES	YES	NO	NO	NO
Custom	YES	YES	NO	NO	NO
Server ID					
Rule	YES	YES	NO	NO	NO
SRCIPDESTIP	N/A	N/A	YES	YES	N/A
DESTIP	N/A	N/A	YES	YES	N/A

Table 2. Persistence Types Available for Each Type of Virtual Server

You can also specify persistence for a group of virtual servers. When you enable persistence on the group, the client requests are directed to the same selected server regardless of which virtual server in the group receives the client request. When the configured time for persistence elapses, any virtual server in the group can be selected for incoming client requests.

Two commonly used persistence types are persistence based on cookies and persistence based on server IDs in URLs.

Configure persistence based on cookies

When you enable persistence based on cookies, the NetScaler appliance adds an HTTP cookie into the **Set-Cookie header** field of the HTTP response. The cookie contains information about the service to which the HTTP requests must be sent. The client stores the cookie and includes it in all subsequent requests, and the ADC uses it to select the service for those requests. You can use this type of persistence on virtual servers of type HTTP or HTTPS.

The NetScaler appliance inserts the cookie `<NSC_XXXX>= <ServiceIP> <ServicePort>`

where:

- `<NSC_XXXX>` is the virtual server ID that is derived from the virtual server name.
- `<ServiceIP>` is the hexadecimal value of the IP address of the service.
- `<ServicePort>` is the hexadecimal value of the port of the service.

If the `useEncryptedPersistenceCookie` option is enabled, the ADC encrypts `ServiceIP` and `ServicePort` using the SHA2 hash algorithm when it inserts a cookie and decrypts when it receives a cookie.

Note: If the client is not allowed to store the HTTP cookie, the subsequent requests do not have the HTTP cookie, and persistence is not honored.

By default, the ADC appliance sends HTTP cookie version 0, in compliance with the Netscape specification. It can also send version 1, in compliance with RFC 2109.

You can configure a timeout value for persistence that is based on HTTP cookies. Note the following:

- If HTTP cookie version 0 is used, the NetScaler appliance inserts the absolute Coordinated Universal Time (GMT) of the cookie's expiration (the expires attribute of the HTTP cookie), calculated as the sum of the current GMT time on an ADC appliance, and the timeout value.
- If an HTTP cookie version 1 is used, the ADC appliance inserts a relative expiration time (Max-Age attribute of the HTTP cookie). In this case, the client software calculates the actual expiration time.

Note: Most client software currently installed (Microsoft Internet Explorer and Netscape browsers) understand HTTP cookie version 0; however, some HTTP proxies understand HTTP cookie version 1.

If you set the timeout value to 0, the ADC appliance does not specify the expiration time, regardless of the HTTP cookie version used. The expiration time then depends on the client software, and such cookies are not valid if that software is shut down. This persistence type does not consume any system resources. Therefore, it can accommodate an unlimited number of persistent clients.

An administrator can change the HTTP cookie version.

To change the HTTP cookie version by using the CLI

At the command prompt, type;

```
1 set ns param [-cookieversion ( 0 | 1 )]
```

Example:

```
1 set ns param -cookieversion 1
```

To change the HTTP cookie version by using the GUI

1. Navigate to **System > Settings**.
2. In the details pane, click Change HTTP Parameters.
3. In the Configure HTTP Parameters dialog box, under Cookie, select Version 0 or Version 1.

Note: For information about the parameters, see Configure persistence based on cookies.

To configure persistence based on cookies by using the CLI

At the command prompt, type the following commands to configure persistence based on cookies and verify the configuration:

```
1 set lb vserver <name> -persistenceType COOKIEINSERT
2
3 show lb vserver <name>
```

Example:

```
1 set lb vserver vserver-LB-1 -persistenceType COOKIEINSERT
2 Done
3 show lb vserver vserver-LB-1
4     vserver-LB-1 (10.102.29.60:80) - HTTP    Type: ADDRESS
5     .
6     .
7     .
8     Persistence: COOKIEINSERT (version 0)
9     Persistence Timeout: 2 min
10    .
11    .
12    .
13 Done
```

To configure persistence based on cookies by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, select the virtual server for which you want to configure persistence (for example, vserver-LB-1), and then click Open.
3. In the Configure Virtual Server (Load Balancing) dialog box, on the Method and Persistence tab, in the Persistence list, select COOKIEINSERT.
4. In the Time-out (min) text box, type the time-out value (for example, 2).
5. Click OK.
6. Verify that the virtual server for which you configured persistence is correctly configured by selecting the virtual server and viewing the Details section at the bottom of the pane.

Configure persistence based on server IDs in URLs

The NetScaler appliance can maintain persistence based on the server IDs in the URLs. In a technique called URL passive persistence, the ADC extracts the server ID from the server response and embeds it in the URL query of the client request. The server ID is an IP address and the port specified as a hexadecimal number. The ADC extracts the server ID from subsequent client requests and uses it to select the server.

URL passive persistence requires configuring either a payload expression or a policy infrastructure expression specifying the location of the server ID in the client requests. For more information about expressions, see [Policy Configuration and Reference](#).

Note: If the server ID cannot be extracted from the client requests, server selection is based on the load balancing method.

Example: Payload Expression

The expression, URLQUERY contains sid= configures the system to extract the server ID from the URL query of a client request, after matching the token sid=. Thus, a request with the URL <http://www.citrix.com/index.asp?\\&sid;=c0a864100050> is directed to the server with the IP address 10.102.29.10 and port 80.

The timeout value does not affect this type of persistence, which is maintained as long as the server ID can be extracted from the client requests. This persistence type does not consume any system resources, so it can accommodate an unlimited number of persistent clients.

Note: For information about the parameters, see [Load Balancing](#).

To configure persistence based on server IDs in URLs by using the CLI

At the command prompt, type the following commands to configure persistence based on server IDs in URLs and verify the configuration:

```
1 set lb vservers <name> -persistenceType URLPASSIVE
2
3 <show lb vservers <name>
```

Example:

```
1 set lb vservers vservers-LB-1 -persistenceType URLPASSIVE
2 Done
3 show lb vservers vservers-LB-1
4 vservers-LB-1 (10.102.29.60:80) - HTTP Type: ADDRESS
5 .
6 .
7 .
8 Persistence: URLPASSIVE
9 Persistence Timeout: 2 min
10 .
11 .
12 .
13 Done
```

To configure persistence based on server IDs in URLs by using the GUI

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.

2. In the details pane, select the virtual server for which you want to configure persistence (for example, vserver-LB-1), and then click Open.
3. In the Configure Virtual Server (Load Balancing) dialog box, on the Method and Persistence tab, in the Persistence list, select URLPASSIVE.
4. In the Time-out (min) text box, type the time-out value (for example, 2).
5. In the Rule text box, enter a valid expression. Alternatively, click Configure next to the Rule text box and use the Create Expression dialog box to create an expression.
6. Click OK.
7. Verify that the virtual server for which you configured persistence is correctly configured by selecting the virtual server and viewing the Details section at the bottom of the pane.

Configure features to protect the load balancing configuration

September 21, 2020

You can configure URL redirection to provide notifications of virtual server malfunctions, and you can configure backup virtual servers to take over if a primary virtual server becomes unavailable.

Configure URL redirection

You can configure a redirect URL to communicate the status of the appliance in the event that a virtual server of type HTTP or HTTPS is down or disabled. This URL can be a local or remote link. The appliance uses HTTP 302 redirect.

Redirects can be absolute URLs or relative URLs. If the configured redirect URL contains an absolute URL, the HTTP redirect is sent to the configured location, regardless of the URL specified in the incoming HTTP request. If the configured redirect URL contains only the domain name (relative URL), the HTTP redirect is sent to a location after appending the incoming URL to the domain configured in the redirect URL.

Note: If a load balancing virtual server is configured with both a backup virtual server and a redirect URL, the backup virtual server takes precedence over the redirect URL. In this case, a redirect is used when both the primary and backup virtual servers are down.

To configure a virtual server to redirect client requests to a URL by using the CLI

At the command prompt, type the following commands to configure a virtual server to redirect client requests to a URL and verify the configuration:

```
1 set lb vserver <name> -redirectURL <URL>
2
3 show lb vserver <name>
```

Example:

```
1 > set lb vserver vserver-LB-1 -redirectURL <http://www.newdomain.
   com/mysite/maintenance>
2 Done
3 > show lb vserver vserver-LB-1
4 vserver-LB-1 (10.102.29.60:80) - HTTP Type: ADDRESS
5 State: DOWN
6 Last state change was at Wed Jun 17 08:56:34 2009 (+666 ms)
7 .
8 .
9 .
10 Redirect URL: <http://www.newdomain.com/mysite/maintenance>
11 .
12 .
13 .
14 Done
15 >
```

To configure a virtual server to redirect client requests to a URL by using the GUI

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure URL redirection (for example, vserver-LB-1), and then click Open.
3. In the Configure Virtual Server (Load Balancing) dialog box, on the Advanced tab, in the Redirect URL text box, type the URL (for example, <http://www.newdomain.com/mysite/maintenance>), and then click OK.
4. Verify that the redirect URL you configured for the server appears in the Details section at the bottom of the pane.

Configure backup virtual servers

If the primary virtual server is down or disabled, the appliance can direct the connections or client requests to a backup virtual server that forwards the client traffic to the services. The appliance can also send a notification message to the client regarding the site outage or maintenance. The backup virtual server is a proxy and is transparent to the client.

You can configure a backup virtual server when you create a virtual server or when you change the optional parameters of an existing virtual server. You can also configure a backup virtual server for an existing backup virtual server, thus creating a cascaded backup virtual server. The maximum depth

of cascading backup virtual servers is 10. The appliance searches for a backup virtual server that is up and accesses that virtual server to deliver the content.

You can configure URL redirection on the primary for use when the primary and the backup virtual servers are down or have reached their thresholds for handling requests.

Note: If no backup virtual server exists, an error message appears, unless the virtual server is configured with a redirect URL. If both a backup virtual server and a redirect URL are configured, the backup virtual server takes precedence.

To configure a backup virtual server by using the CLI

At the command prompt, type the following commands to configure a backup server and verify the configuration:

```
1 set lb vserver <name> [-backupVserver <string>]
2
3 show lb vserver <name>
```

Example:

```
1 > set lb vserver vserver-LB-1 -backupVserver vserver-LB-2
2 Done
3 > show lb vserver vserver-LB-1
4 vserver-LB-1 (10.102.29.60:80) - HTTP Type: ADDRESS
5 State: DOWN
6 Last state change was at Wed Jun 17 08:56:34 2009 (+661 ms)
7 .
8 .
9 .
10 Backup: vserver-LB-2
11 .
12 .
13 .
14 Done
15 >
```

To set up a backup virtual server by using the GUI

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure the backup virtual server (for example, vserver-LB-1), and then click Open.
3. In the Configure Virtual Server (Load Balancing) dialog box, on the Advanced tab, in the Backup Virtual Server list, select the backup virtual server (for example, vserver-LB-2), and then click OK.

- Verify that the backup virtual server you configured appears in the Details section at the bottom of the pane.

Note: If the primary server goes down and then comes back up, and you want the backup virtual server to function as the primary server until you explicitly reestablish the primary virtual server, select the Disable Primary When Down check box.


A typical load balancing scenario

May 2, 2023

In a load balancing setup, the NetScaler appliances are logically located between the client and the server farm, and they manage traffic flow to the servers.

The following figure shows the topology of a basic load balancing configuration.

Figure 1. Basic Load Balancing Topology

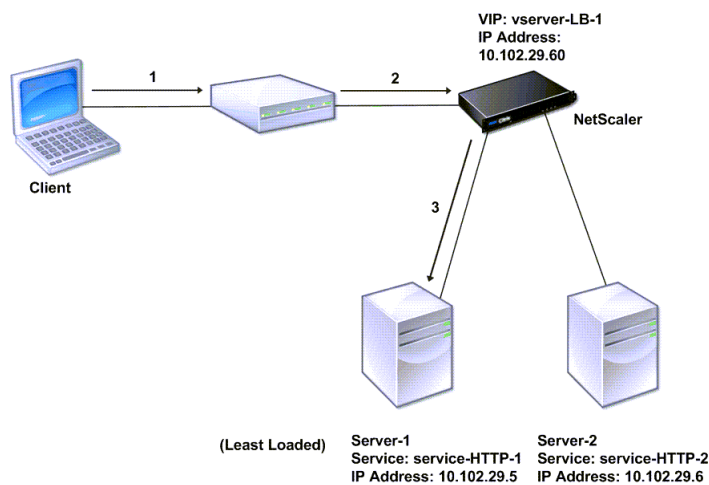


The virtual server selects the service and assigns it to serve client requests. Consider the scenario in the preceding figure, where the services service-HTTP-1 and service-HTTP-2 are created and bound to the virtual server named virtual server-LB-1. Virtual server-LB-1 forwards the client request to either service-HTTP-1 or service-HTTP-2. The system selects the service for each request by using the Least Connections load balancing method. The following table lists the names and values of the basic entities that must be configured on the system.

Table 1. LB Configuration Parameter Values

The following figure shows the load balancing sample values and required parameters that are described in the preceding table.

Figure 2. Load Balancing Entity Model

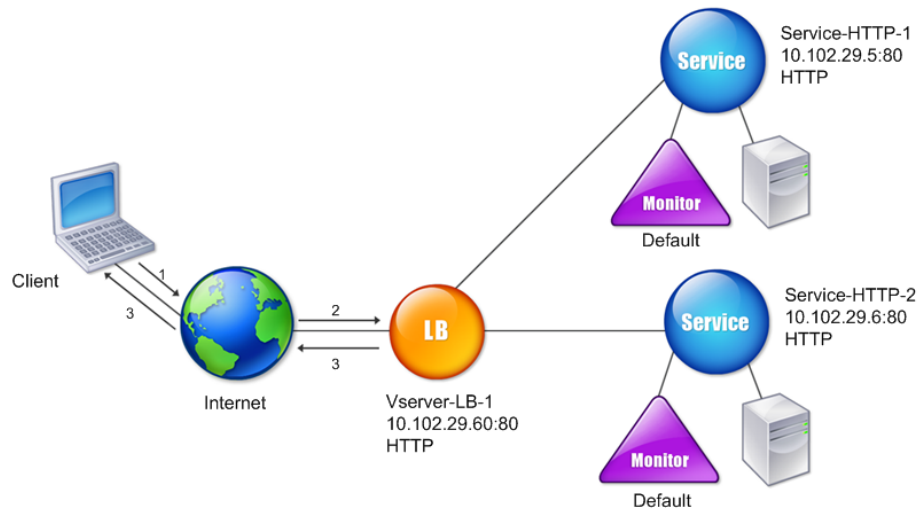

The following tables list the commands used to configure this load balancing setup by using the command line interface.

Task	Command
To enable load balancing	<code>enable feature lb</code>
To create a service named service-HTTP-1	<code>add service service-HTTP-1 10.102.29.5 HTTP 80</code>
To create a service named service-HTTP-2	<code>add service service-HTTP-2 10.102.29.6 HTTP 80</code>
To create a virtual server named vserver-LB-1	<code>add lb vserver vserver-LB-1 HTTP 10.102.29.60 80</code>
To bind a service named service-HTTP-1 to a virtual server named vserver-LB-1	<code>bind lb vserver vserver-LB-1 service-HTTP-1</code>
To bind a service named service-HTTP-2 to a virtual server named vserver-LB-1	<code>bind lb vserver vserver-LB-1 service-HTTP-2</code>

Table 2. Initial Configuration Tasks

For more information about the initial configuration tasks, see [Setting Up Basic Load Balancing](#).

Task	Command
To view the properties of a virtual server named vserver-LB-1	<code>show lb vserver vserver-LB-1</code>
To view the statistics of a virtual server named vserver-LB-1	<code>stat lb vserver vserver-LB-1</code>
To view the properties of a service named service-HTTP-1	<code>show service service-HTTP-1</code>
To view the statistics of a service named service-HTTP-1	<code>stat service service-HTTP-1</code>
To view the bindings of a service named service-HTTP-1	<code>show service bindings service-HTTP-1</code>

Table 3. Verification Tasks

Task	Command
To configure persistence on a virtual server named vserver-LB-1	<code>set lb vserver vserver-LB-1 -persistenceType SOURCEIP -persistenceMask 255.255.255.255 -timeout 2</code>
To configure COOKIEINSERT persistence on a virtual server named vserver-LB-1	<code>set lb vserver vserver-LB-1 -persistenceType COOKIEINSERT</code>
To configure URLPassive persistence on a virtual server named vserver-LB-1	<code>set lb vserver vserver-LB-1 -persistenceType URLPASSIVE</code>
To configure a virtual server to redirect the client request to a URL on a virtual server named vserver-LB-1	<code>set lb vserver vserver-LB-1 -redirectURL http://www.newdomain.com/mysite/maintenance</code>
To set a backup virtual server on a virtual server named vserver-LB-1	<code>set lb vserver vserver-LB-1 -backupVserver vserver-LB-2</code>

Table 4. Customization Tasks

For more information about configuring persistence, see [Choosing and Configuring Persistence Settings](#). For information about configuring a virtual server to redirect a client request to a URL and setting up a backup virtual server, see [Configuring Features to Protect the Load Balancing Configuration](#).

Use case: How to force Secure and HttpOnly cookie options for websites using the NetScaler appliance

May 2, 2023

The web administrators may force the Secure, or HttpOnly, or both the flags on the Session ID and the authentication cookies that are generated by the web applications. You can modify the Set-cookie headers to include these two options by using an HTTP load balancing virtual server and rewrite policies on a NetScaler appliance.

- **HttpOnly** - This option on a cookie causes the web browsers to return the cookie using the HTTP or HTTPS protocol only. The non-HTTP methods such as JavaScript document.cookie references cannot access the cookie. This option helps in preventing cookie theft due to cross-site scripting.

NOTE

You cannot use the HttpOnly option when a web application requires access to Cookie contents by using a client-side script, such as JavaScript or a client-side Java Applet. You can use the method mentioned in this document to rewrite only the server-generated cookies and not the cookies generated by NetScaler appliance. For example, AppFirewall, persistence, VPN session cookies and so on.

- **Secure** - This option on a cookie causes the web browsers to return only the cookie value when the transmission is encrypted by SSL. This option can be used to prevent cookie theft through connection eavesdropping.

NOTE

The following procedure is not applicable for VPN virtual servers.

To configure the NetScaler appliance to force the Secure and HttpOnly flags for an existing HTTP virtual server by using CLI

1. Create a rewrite action.

This example is configured to set both Secure and HttpOnly flags. If either one is missing, modify it as necessary for other combinations.

```
1 add rewrite action act_cookie_Secure replace_all http.RES.  
   full_Header "\"Secure; HttpOnly; path=/" -search "regex(re!(  
   path=\\/; Secure; HttpOnly)|(path=\\/; Secure)|(path=\\/;  
   HttpOnly)|(path=/)!"
```


2. Navigate to **AppExpert > Rewrite > Policies**, and click **Add** to add a new rewrite policy.

← Create Rewrite Policy

Name*
rw_force_secure_cookie ⓘ

Action*
act_cookie_Secure ⓘ

Configure Assignments

Configure Rewrite Actions

Log Action
Add Edit

Undefined-Result Action*
-Global-undefined-result-action ⓘ

Expression*
Select Select Select
http.RES.HEADER("Set-Cookie").EXISTS ⓘ

Comments

Create Close

3. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and then bind the rewrite (response) policy to the corresponding SSL virtual server.

Load Balancing Virtual Server Rewrite Policy Binding

Add Binding Unbind Regenerate Priorities Bind NPOLICY-REWRITE No action

Click here to search or you can enter

PRIORITY	POLICY NAME	EXPRESSION	ACTION	GOTO EXPRESSION	INVOKE
100	rw_force_secure_cookie	http.RES.HEADER("Set-Cookie").EXISTS	act_cookie_Secure	END	

Close

Accelerate load balanced traffic by using compression

May 2, 2023

Compression is a popular means of optimizing bandwidth usage, and most web browsers support compressed data. If you enable the compression feature, the NetScaler appliance intercepts requests from clients and determines whether the client can accept compressed content. After receiving the HTTP response from the server, the appliance examines the content to determine whether it is compressible. If the content is compressible, the appliance compresses it, modifies the response header to indicate the type of compression performed, and forwards the compressed content to the client.

NetScaler compression is a policy-based feature. A policy filters requests and responses to identify responses to be compressed, and specifies the type of compression to apply to each response. The appliance provides several built-in policies to compress common MIME types such as text/html, text/plain, text/xml, text/css, text/rtf, application/msword, application/vnd.ms-excel, and application/vnd.ms-powerpoint. You can also create custom policies. The appliance does not compress compressed MIME types such as application/octet-stream, binary, bytes, and compressed image formats such as GIF and JPEG.


To configure compression, you must enable it globally and on each service that will provide responses that you want compressed. If you have configured virtual servers for load balancing or content switch-

ing, you should bind the policies to the virtual servers. Otherwise, the policies apply to all traffic that passes through the appliance.

Compression configuration task sequence

The following flow chart shows the sequence of tasks for configuring basic compression in a load balancing setup.

Figure 1. Sequence of Tasks to Configure Compression

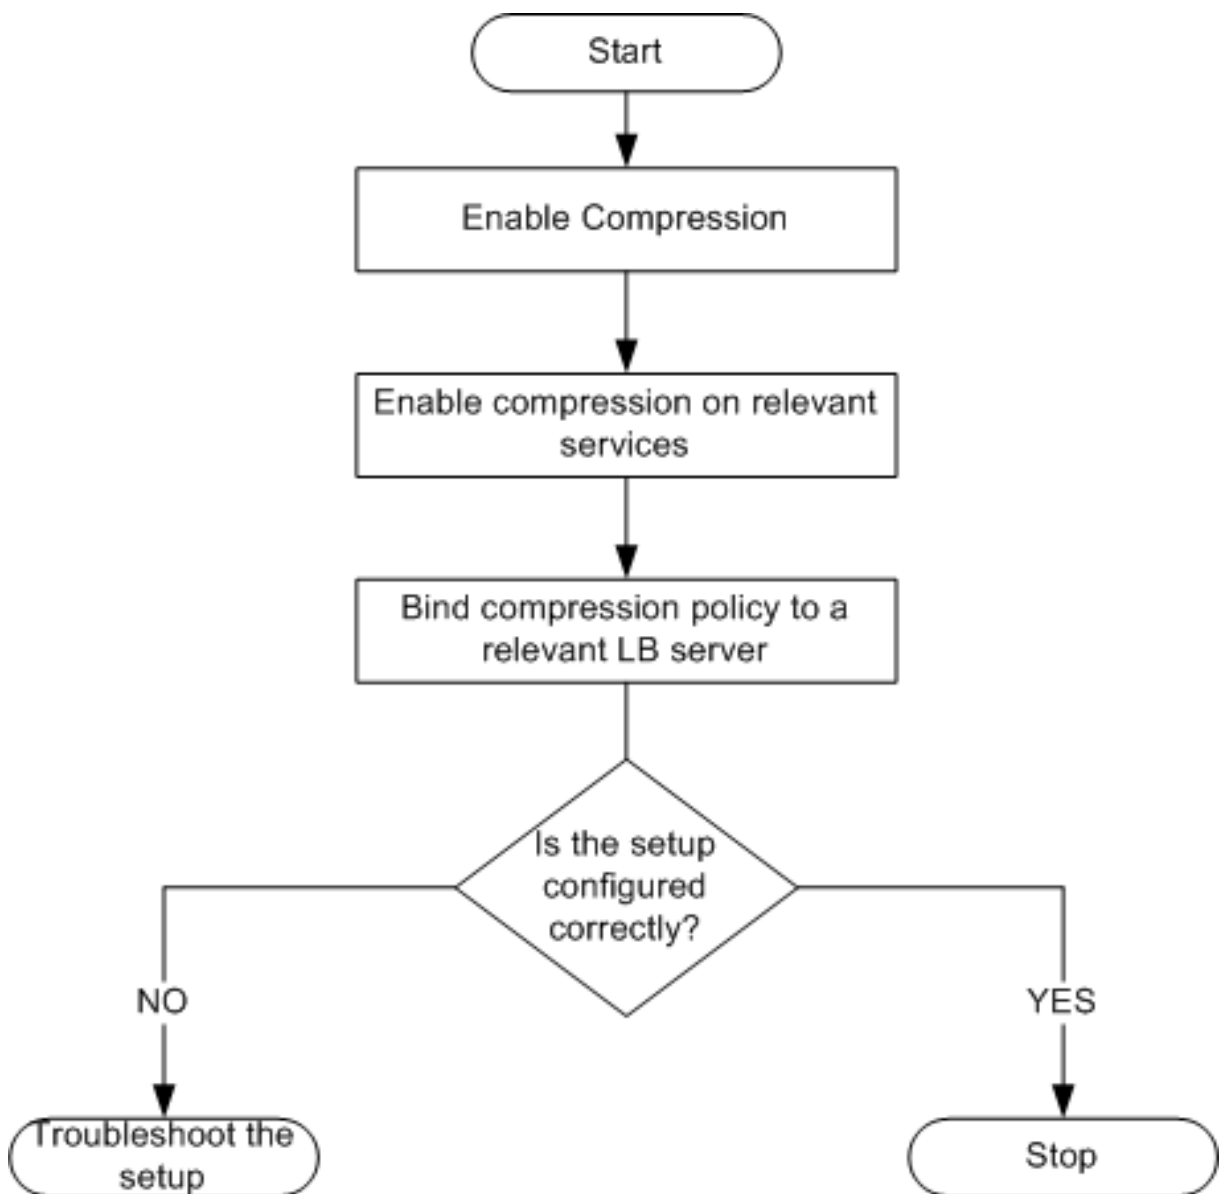

Note: The steps in the above figure assume that load balancing has already been configured.

Enable compression

By default, compression is not enabled. You must enable the compression feature to allow compression of HTTP responses that are sent to the client.

To enable compression by using the CLI

At the command prompt, type the following commands to enable compression and verify the configuration:

- enable ns feature CMP
- show ns feature

```
1 > enable ns feature CMP
2
3
4
5
6 Done
7
8
9 > show ns feature
10
11
12
13
14
15 Feature Acronym Status
16
17 -----
18
19
20
21 1) Web Logging WL ON
22
23
24 2) Surge Protection SP OFF
25
26
27 .
28
29
30 7) Compression Control CMP ON
31
32 .
33
34
35 Done
```

To enable compression by using the GUI

1. In the navigation pane, expand System, and then click Settings.
2. In the details pane, under Modes and Features, click Change basic features.
3. In the Configure Basic Features dialog box, select the Compression check box, and then click OK.
4. In the Enable/Disable Feature(s)? dialog box, click Yes.

Configure services to compress data

In addition to enabling compression globally, you must enable it on each service that will deliver files to be compressed.

To enable compression on a service by using the CLI

At the command prompt, type the following commands to enable compression on a service and verify the configuration:

- `set service <name> -CMP YES`
- `show service <name>`

```
1 > show service SVC_HTTP1
2
3
4 SVC_HTTP1 (10.102.29.18:80) - HTTP
5
6
7 State: UP
8
9
10 Last state change was at Tue Jun 16 06:19:14 2009 (+737 ms)
11
12
13 Time since last state change: 0 days, 03:03:37.200
14
15
16 Server Name: 10.102.29.18
17
18
19 Server ID : 0   Monitor Threshold : 0
20
21
22 Max Conn: 0   Max Req: 0   Max Bandwidth: 0 kbits
23
24
25 Use Source IP: NO
26
```

```
27
28 Client Keepalive(CKA): NO
29
30
31 Access Down Service: NO
32
33
34 TCP Buffering(TCPB): NO
35
36
37 HTTP Compression(CMP): YES
38
39
40 Idle timeout: Client: 180 sec   Server: 360 sec
41
42
43 Client IP: DISABLED
44
45
46 Cacheable: NO
47
48
49 SC: OFF
50
51
52 SP: OFF
53
54
55 Down state flush: ENABLED
56
57 1)      Monitor Name: tcp-default
58
59
60 State: DOWN      Weight: 1
61
62
63 Probes: 1095      Failed [Total: 1095 Current: 1095]
64
65
66 Last response: Failure - TCP syn sent, reset received.
67
68
69 Response Time: N/A
70
71
72 Done
```

To enable compression on a service by using the GUI

1. Navigate to Traffic Management > Load Balancing > Services.
2. In the details pane, select the service for which you want to configure compression (for example,

service-HTTP-1), and then click Open.

3. On the Advanced tab, under Settings, select the Compression check box, and then click OK.
4. Verify that, when the service is selected, HTTP Compression(CMP): ON appears in the **Details** section at the bottom of the pane.

Bind a compression policy to a virtual server

If you bind a policy to a virtual server, the policy is evaluated only by the services associated with that virtual server. You can bind compression policies to a virtual server either from the Configure Virtual Server (Load Balancing) dialog box or from the Compression Policy Manager dialog box. This topic includes instructions to bind compression policies to a load balancing virtual server by using the Configure Virtual Server (Load Balancing) dialog box.

To bind or unbind a compression policy to a virtual server by using the command line

At the command prompt, type the following commands to bind or unbind a compression policy to a load balancing virtual server and verify the configuration:

```
(bind)                               unbind) lb vserver -policyName
```

-
- show lb vserver <name>

Example:

```
1 > bind lb vserver lbvip -policyName ns_cmp_msapp
2 Done
3 > showlbvserverlbvip
4
5 lbvip(8.7.6.6:80)-HTTPType:ADDRESS
6 State:UP
7 LaststatechangewasatThuMay2805:37:212009(+685ms)
8 Timesincelaststatechange:19days,04:26:50.470
9 EffectiveState:UP
10 ClientIdleTimeout:180sec
11 Downstateflush:ENABLED
12 DisablePrimaryVserverOnDown:DISABLED
13 PortRewrite:DISABLED
14 No.ofBoundServices:1(Total)1(Active)
15 ConfiguredMethod:LEASTCONNECTION
16 CurrentMethod:RoundRobin,Reason:Boundservice'sstatechangedtoUP
17 Mode:IP
18 Persistence:NONE
19 VserverIPandPortinsertion:OFF
```

```
20 Push:DISABLEDPushVServer:
21 PushMultiClients:NO
22 PushLabelRule:
23
24 BoundServiceGroups:
25 1)GroupName:Service-Group-1
26
27 1)Service-Group-1(10.102.29.252:80)-HTTPState:UPWeight:1
28
29 1)Policy:ns_cmp_msappPriority:0
30
31 Done
```

To bind or unbind a compression policy to a load balancing virtual server by using the GUI

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, select the virtual server to which you want to bind or unbind a compression policy (for example, Vserver-LB-1), and then click Open.
3. In the Configure Virtual Server (Load Balancing) dialog box, on the Policies tab, click Compression.
4. Do one of the following:
 - To bind a compression policy, click Insert Policy, and then select the policy you want to bind to the virtual server.
 - To unbind a compression policy, click the name of the policy you want to unbind from the virtual server, and then click Unbind Policy.
5. Click OK.

Secure load balanced traffic by using SSL

May 2, 2023

The NetScaler SSL offload feature transparently improves the performance of websites that conduct SSL transactions. By offloading CPU-intensive SSL encryption and decryption tasks from the local web server to the appliance, SSL offloading ensures secure delivery of web applications without the performance penalty incurred when the server processes the SSL data. Once the SSL traffic is decrypted, it can be processed by all standard services. The SSL protocol works seamlessly with various types of HTTP and TCP data and provides a secure channel for transactions using such data.

To configure SSL, you must first enable it. Then, you configure HTTP or TCP services and an SSL virtual server on the appliance, and bind the services to the virtual server. You must also add a certificate-key pair and bind it to the SSL virtual server. If you use Outlook Web Access servers, you must create

an action to enable SSL support and a policy to apply the action. An SSL virtual server intercepts incoming encrypted traffic and decrypts it by using a negotiated algorithm. The SSL virtual server then forwards the decrypted data to the other entities on the appliance for appropriate processing.

For detailed information about SSL offloading, see [SSL offload and acceleration](#).


SSL configuration task sequence

To configure SSL, you must first enable it. Then, you must create an SSL virtual server and HTTP or TCP services on the NetScaler appliance. Finally, you must bind a valid SSL certificate and the configured services to the SSL virtual server.

An SSL virtual server intercepts incoming encrypted traffic and decrypts it using a negotiated algorithm. The SSL virtual server then forwards the decrypted data to the other entities on the NetScaler appliance for appropriate processing.

The following flow chart shows the sequence of tasks for configuring a basic SSL offload setup.

Figure 1. Sequence of Tasks to Configure SSL Offloading

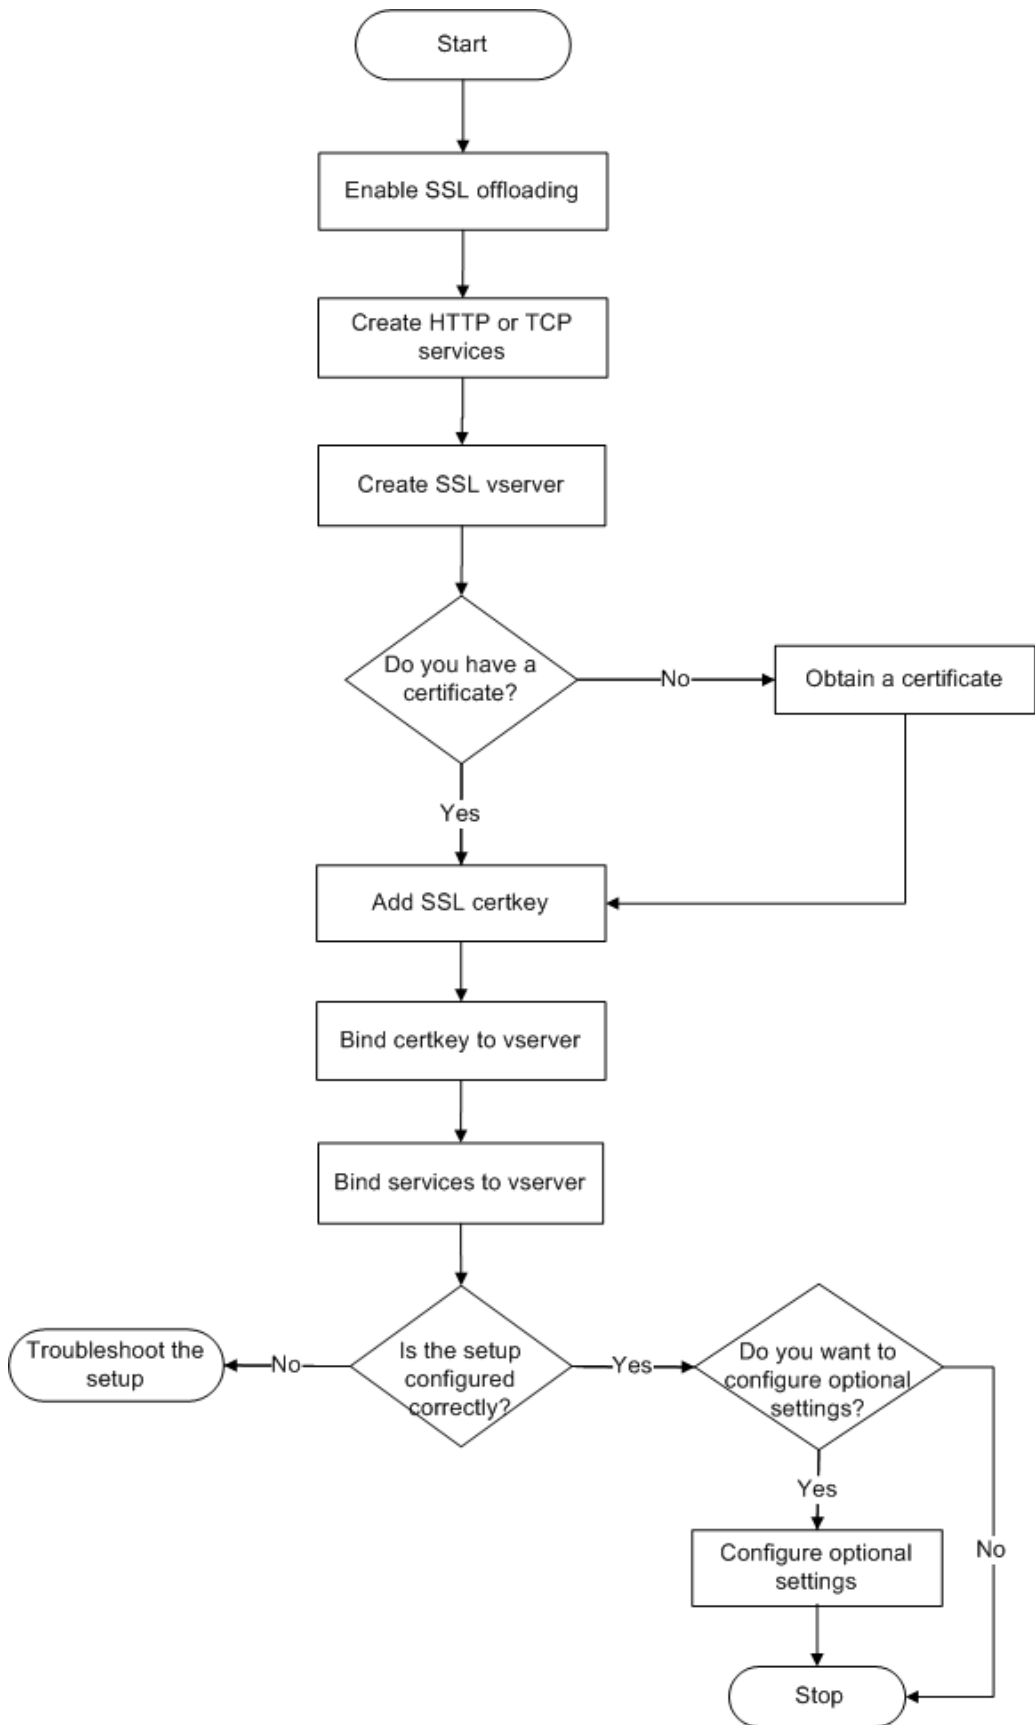

Enable SSL offload

First enable the SSL feature. You can configure SSL-based entities on the appliance without enabling the SSL feature, but they will not work until you enable SSL.

Enable SSL by using the CLI

At the command prompt, type the following commands to enable SSL Offload and verify the configuration:

```
1 - enable ns feature SSL
2 - show ns feature
```

Example:

```
1 > enable ns feature ssl
2
3 Done
4
5
6 > show ns feature
7
8
9 Feature Acronym Status
10
11
12 -----
13
14
15 1) Web Logging WL ON
16
17
18 2) SurgeProtection SP OFF
19
20
21 3) Load Balancing LB ON . . .
22
23
24 9) SSL Offloading SSL ON
25
26
27 10) Global Server Load Balancing GSLB ON . .
28
29
30 Done >
```

Enable SSL by using the GUI

Follow these steps:

1. In the navigation pane, expand **System**, and then click **Settings**.
2. In the details pane, under **Modes and Features**, click **Change basic features**.
3. Select the **SSL Offloading** check box, and then click **OK**.
4. In the **Enable/Disable Feature(s)?** message box, click **Yes**.

Create HTTP services

A service on the appliance represents an application on a server. Once configured, services are in the disabled state until the appliance can reach the server on the network and monitor its status. This topic covers the steps to create an HTTP service.

Note: For TCP traffic, perform the following procedures, but create TCP services instead of HTTP services.

Add an HTTP service by using the CLI

At the command prompt, type the following commands to add an HTTP service and verify the configuration:

```
1 - add service <name> (<IP> | <serverName>) <serviceType> <port>
2 - show service <name>
```

Example:

```
1 > add service SVC_HTTP1 10.102.29.18 HTTP 80
2
3
4 Done
5
6
7 > show service SVC_HTTP1
8
9
10 SVC_HTTP1 (10.102.29.18:80) - HTTP
11
12
13 State: UP
14
15
16 Last state change was at Wed Jul 15 06:13:05 2009
17
18
19 Time since last state change: 0 days, 00:00:15.350
20
21
22 Server Name: 10.102.29.18
23
24
```

```
25      Server ID : 0      Monitor Threshold : 0
26
27
28      Max Conn: 0      Max Req: 0      Max Bandwidth: 0 kbits
29
30
31      Use Source IP: NO
32
33
34      Client Keepalive(CKA): NO
35
36
37      Access Down Service: NO
38
39
40      TCP Buffering(TCPB): NO
41
42
43      HTTP Compression(CMP): YES
44
45
46      Idle timeout: Client: 180 sec      Server: 360 sec
47
48
49      Client IP: DISABLED
50
51
52      Cacheable: NO
53
54
55      SC: OFF
56
57
58      SP: OFF
59
60
61      Down state flush: ENABLED
62
63
64
65
66
67 1)      Monitor Name: tcp-default
68
69
70              State: UP      Weight: 1
71
72
73              Probes: 4      Failed [Total: 0 Current: 0]
74
75
76              Last response: Success - TCP syn+ack received.
77
```

```
78
79           Response Time: N/A
80
81
82 Done
```

Add an HTTP service by using the GUI

Follow these steps:

1. Navigate to **Traffic Management > SSL Offload > Services**.
2. In the details pane, click **Add**.
3. In the **Create Service** dialog box, type the name of the service, IP address, and port (for example, SVC_HTTP1, 10.102.29.18, and 80).
4. In the **Protocol** list, select the type of the service (for example, HTTP).
5. Click **Create**, and then click **Close**. The HTTP service you configured appears in the Services page.
6. Verify that the parameters you configured are correctly configured by selecting the service and viewing the Details section at the bottom of the pane.

Add an SSL based virtual server

In a basic SSL offloading setup, the SSL virtual server intercepts encrypted traffic, decrypts it, and sends the clear text messages to the services that are bound to the virtual server. Offloading CPU-intensive SSL processing to the appliance allows the back-end servers to process a greater number of requests.

Add an SSL-based virtual server by using the CLI

At the command prompt, type the following commands to create an SSL-based virtual server and verify the configuration:

```
1 - add lb vserver <name> <serviceType> [<IPAddress> <port>]
2 - show lb vserver <name>
```

Caution: To ensure secure connections, you must bind a valid SSL certificate to the SSL-based virtual server before you enable it.

Example:

```
1 > add lb vserver vserver-SSL-1 SSL 10.102.29.50 443
2 Done
```

```
3
4
5 > show lb vserver vserver-SSL-1
6
7
8 vserver-SSL-1 (10.102.29.50:443) - SSL Type: ADDRESS
9
10
11 State: DOWN[Certkey not bound] Last state change was at Tue Jun 16
    06:33:08 2009 (+176 ms)
12
13
14 Time since last state change: 0 days, 00:03:44.120
15
16
17 Effective State: DOWN Client Idle Timeout: 180 sec
18
19
20 Down state flush: ENABLED
21
22
23 Disable Primary Vserver On Down : DISABLED
24
25
26 No. of Bound Services : 0 (Total) 0 (Active)
27
28
29 Configured Method: LEASTCONNECTION Mode: IP
30
31
32 Persistence: NONE
33
34
35 Vserver IP and Port insertion: OFF
36
37
38 Push: DISABLED Push VServer: Push Multi Clients: NO Push Label Rule:
    Done
```

Add an SSL-based virtual server by using the GUI

Follow these steps:

1. Navigate to **Traffic Management > SSL Offload > Virtual Servers**.
2. In the details pane, click **Add**.
3. In the **Create Virtual Server (SSL Offload)** dialog box, type the name of the virtual server, IP address, and port.
4. In the **Protocol** list, select the type of the virtual server, for example, SSL.
5. Click **Create**, and then click **Close**.

6. Verify that the parameters you configured are correctly configured by selecting the virtual server and viewing the Details section at the bottom of the pane. The virtual server is marked as DOWN because a certificate-key pair and services have not been bound to it.

Caution: To ensure secure connections, you must bind a valid SSL certificate to the SSL-based virtual server before you enable it.

Bind services to the SSL virtual server

After decrypting the incoming data, the SSL virtual server forwards the data to the services that you have bound to the virtual server.

Data transfer between the appliance and the servers can be encrypted or in clear text. If the data transfer between the appliance and the servers is encrypted, the entire transaction is secure from end to end. For more information about configuring the system for end-to-end security, see [SSL offload and acceleration](#).

Bind a service to a virtual server by using the CLI

At the command prompt, type the following commands to bind a service to the SSL virtual server and verify the configuration:

```
1 - bind lb vserver <name> <serviceName>
2 - show lb vserver <name>
```

Example:

```
1 > bind lb vserver vserver-SSL-1 SVC_HTTP1
2
3
4
5
6 Done
7
8
9 > show lb vserver vserver-SSL-1 vserver-SSL-1 (10.102.29.50:443) -
  SSL Type:
10
11
12 ADDRESS State: DOWN[Certkey not bound]
13
14
15 Last state change was at Tue Jun 16 06:33:08 2009 (+174 ms)
16
17
18 Time since last state change: 0 days, 00:31:53.70
19
```



```
20
21   Effective State: DOWN Client Idle
22
23
24   Timeout: 180 sec
25
26
27   Down state flush: ENABLED Disable Primary Vserver On Down :
28
29
30   DISABLED No. of Bound Services : 1 (Total) 0 (Active)
31
32
33   Configured Method: LEASTCONNECTION Mode: IP Persistence: NONE Vserver
      IP and
34
35
36   Port insertion: OFF Push: DISABLED Push VServer: Push Multi Clients:
      NO Push Label Rule:
37
38
39
40
41
42   1) SVC_HTTP1 (10.102.29.18: 80) - HTTP
43
44
45   State: DOWN Weight: 1
46
47
48   Done
```

Bind a service to a virtual server by using the GUI

1. Navigate to **Traffic Management > SSL Offload > Virtual Servers**.
2. In the details pane, select a virtual server, and then click **Open**.
3. On the **Services** tab, in the **Active** column, select the check boxes next to the services that you want to bind to the selected virtual server.
4. Click **OK**.
5. Verify that the Number of Bound Services counter in the Details section at the bottom of the pane is incremented by the number of services that you bound to the virtual server.

Add a certificate-key pair

An SSL certificate is an integral element of the SSL Key-Exchange and encryption/decryption process. The certificate is used during an SSL handshake to establish the identity of the SSL server. You can

use a valid, existing SSL certificate that you have on the NetScaler appliance, or you can create your own SSL certificate. The appliance supports RSA certificates of up to 4096 bits.

ECDSA certificates with only the following curves are supported:

- prime256v1 (P_256 on the ADC)
- secp384r1 (P_384 on the ADC)
- secp521r1 (P_521 on the ADC; supported on VPX only)
- secp224r1 (P_224 on the ADC; supported on VPX only)

Note: Citrix recommends that you use a valid SSL certificate that has been issued by a trusted certificate authority. Invalid certificates and self-created certificates are not compatible with all SSL clients.

Before a certificate can be used for SSL processing, you must pair it with its corresponding key. The certificate key pair is then bound to the virtual server and used for SSL processing.

Add a certificate key pair by using the CLI

Note: For information about creating an ECDSA certificate-key pair, see [Create an ECDSA certificate-key pair](#).

At the command prompt, type the following commands to create a certificate key pair and verify the configuration:

```
1 - add ssl certKey <certkeyName> -cert <string> [-key <string>]
2 - show sslcertkey <name>
```

Example:

```
1 > add ssl certKey CertKey-SSL-1 -cert ns-root.cert -key ns-root.key
2
3 Done
4
5
6 > show sslcertkey CertKey-SSL-1
7
8
9 Name: CertKey-SSL-1 Status: Valid,
10
11
12 Days to expiration:4811 Version: 3
13
14
15 Serial Number: 00 Signature Algorithm: md5WithRSAEncryption Issuer:
    C=US,ST=California,L=San
16
17
```

```
18   Jose,O=Citrix ANG,OU=NS Internal,CN=de fault
19
20
21   Validity Not Before: Oct 6 06:52:07 2006 GMT Not After : Aug 17
    21:26:47 2022 GMT
22
23
24   Subject: C=US,ST=California,L=San Jose,O=Citrix ANG,OU=NS Internal,
    CN=d efault Public Key
25
26
27   Algorithm: rsaEncryption Public Key
28
29
30   size: 1024
31
32
33   Done
```

Add a certificate key pair by using the GUI

Follow these steps:

1. Navigate to **Traffic Management > SSL > Certificates**.
2. In the details pane, click **Add**.
3. In the **Install Certificate** dialog box, in the Certificate-Key Pair Name text box, type a name for the certificate key pair you want to add, for example, Certkey-SSL-1.
4. Under **Details**, in Certificate File Name, click **Browse (Appliance)** to locate the certificate. Both the certificate and the key are stored in the /nsconfig/ssl/ folder on the appliance. To use a certificate present on the local system, select Local.
5. Select the certificate you want to use, and then click **Select**.
6. In Private Key File Name, click **Browse (Appliance)** to locate the private key file. To use a private key present on the local system, select Local.
7. Select the key you want to use and click **Select**. To encrypt the key used in the certificate key pair, type the password to be used for encryption in the Password text box.
8. Click **Install**.
9. Double-click the certificate key pair and, in the Certificate Details window, verify that the parameters have been configured correctly and saved.

Bind an SSL certificate key pair to the virtual server

After you pairing an SSL certificate with its corresponding key, bind the certificate-key pair to the SSL virtual server so that it can be used for SSL processing. Secure sessions require establishing a connection between the client computer and an SSL-based virtual server on the appliance. SSL processing

is then carried out on the incoming traffic at the virtual server. Therefore, before enabling the SSL virtual server on the appliance, you need to bind a valid SSL certificate to the SSL virtual server.

Bind an SSL certificate key pair to a virtual server by using the CLI

At the command prompt, type the following commands to bind an SSL certificate key pair to a virtual server and verify the configuration:

```
1 - bind ssl vserver <vServerName> -certkeyName <string>
2 - show ssl vserver <name>
```

Example:

```
1 > bind ssl vserver Vserver-SSL-1 -certkeyName CertKey-SSL-1
2
3 Done
4
5
6 > show ssl vserver Vserver-SSL-1
7
8
9
10
11
12     Advanced SSL configuration for VServer Vserver-SSL-1:
13
14
15     DH: DISABLED
16
17
18     Ephemeral RSA: ENABLED Refresh Count: 0
19
20
21     Session Reuse: ENABLED Timeout: 120 seconds
22
23
24     Cipher Redirect: ENABLED
25
26
27     SSLv2 Redirect: ENABLED
28
29
30     ClearText Port: 0
31
32
33     Client Auth: DISABLED
34
35
36     SSL Redirect: DISABLED
37
38
```

```
39      Non FIPS Ciphers: DISABLED
40
41
42      SSLv2: DISABLED SSLv3: ENABLED TLSv1: ENABLED
43
44
45
46
47
48 1) CertKey Name: CertKey-SSL-1 Server Certificate
49
50
51 1) Cipher Name: DEFAULT
52
53
54      Description: Predefined Cipher Alias
55
56
57 Done
```

Bind an SSL certificate key pair to a virtual server by using the GUI

Follow these steps:

1. Navigate to **Traffic Management > SSL Offload > Virtual Servers**.
2. Select the virtual server to which you want to bind the certificate key pair, for example, Vserver-SSL-1, and click Open.
3. In the **Configure Virtual Server (SSL Offload)** dialog box, on the **SSL Settings** tab, under **Available**, select the certificate key pair that you want to bind to the virtual server. Then click **Add**.
4. Click **OK**.
5. Verify that the certificate key pair that you selected appears in the Configured area.

Configure support for Outlook web access

If you use Outlook Web Access (OWA) servers on your NetScaler appliance, you must configure the appliance to insert a special header field, FRONT-END-HTTPS: ON, in HTTP requests directed to the OWA servers, so that the servers generate URL links as `https://` instead of `http://`.

Note: You can enable OWA support for HTTP-based SSL virtual servers and services only. You cannot apply it for TCP-based SSL virtual servers and services.

To configure OWA support, do the following:

- Create an SSL action to enable OWA support.
- Create an SSL policy.
- Bind the policy to the SSL virtual server.

Create an SSL action to enable OWA support

Before you can enable Outlook Web Access (OWA) support, you must create an SSL action. SSL actions are bound to SSL policies and triggered when incoming data matches the rule specified by the policy.

Create an SSL action to enable OWA support by using the CLI

At the command prompt, type the following commands to create an SSL action to enable OWA support and verify the configuration:

```
1 - add ssl action <name> -OWASupport ENABLED
2 - show SSL action <name>
```

Example:

```
1 > add ssl action Action-SSL-OWA -OWASupport enabled
2
3
4
5
6 Done
7
8
9 > show SSL action Action-SSL-OWA
10
11
12 Name: Action-SSL-OWA
13
14
15 Data Insertion Action: OWA
16
17
18 Support: ENABLED
19
20
21 Done
```

Create an SSL action to enable OWA support by using the GUI

Follow these steps:

1. Navigate to **Traffic Management > SSL > Policies**.
2. In the details pane, on the **Actions** tab, click **Add**.
3. In the **Create SSL Action** dialog box, in the Name text box, type Action-SSL-OWA.
4. Under Outlook Web Access, select **Enabled**.
5. Click **Create**, and then click **Close**.

6. Verify that Action-SSL-OWA appears in the **SSL Actions** page.

Create SSL policies

SSL policies are created by using the policy infrastructure. Each SSL policy has an SSL action bound to it, and the action is carried out when incoming traffic matches the rule that has been configured in the policy.

Create an SSL policy by using the CLI

At the command prompt, type the following commands to configure an SSL policy and verify the configuration:

```
1 - add ssl policy <name> -rule <expression> -reqAction <string>
2 - show ssl policy <name>
```

Example:

```
1 > add ssl policy-SSL-1 -rule ns_true -reqaction Action-SSL-OWA
2
3 Done
4
5 > show ssl policy-SSL-1
6
7 Name: Policy-SSL-1 Rule: ns_true
8
9 Action: Action-SSL-OWA Hits: 0
10
11 Policy is bound to following entities
12
13 1) PRIORITY : 0
14
15 Done
```

Create an SSL policy by using the GUI

Follow these steps:

1. Navigate to **Traffic Management > SSL > Policies**.
2. In the details pane, click **Add**.
3. In the **Create SSL Policy** dialog box, in the Name text box, type the name of the SSL Policy (for example, Policy-SSL-1).
4. In **Request** Action, select the configured SSL action that you want to associate with this policy (for example, Action-SSL-OWA). The ns_true general expression applies the policy to all successful SSL handshake traffic. However, to filter specific responses, you can create policies with a

higher level of detail. For more information about configuring granular policy expressions, see [SSL actions and policies](#).

5. In **Named Expressions**, choose the built-in general expression `ns_true` and click **Add Expression**. The expression `ns_true` now appears in the Expression text box.
6. Click **Create**, and then click **Close**.
7. Verify that the policy is correctly configured by selecting the policy and viewing the Details section at the bottom of the pane.

Bind the SSL policy to the SSL virtual server

After you configure an SSL policy for Outlook Web Access, bind the policy to a virtual server that will intercept incoming Outlook traffic. If the incoming data matches any of the rules configured in the SSL policy, the policy is triggered and the action associated with it is carried out.

Bind an SSL policy to an SSL virtual server by using the CLI

At the command prompt, type the following commands to bind an SSL policy to an SSL virtual server and verify the configuration:

```
1 - bind ssl vserver <vServerName> -policyName <string>
2 - show ssl vserver <name>
```

Example:

```
1 > bind ssl vserver Vserver-SSL-1 -policyName Policy-SSL-1
2
3 Done
4
5 > show ssl vserver Vserver-SSL-1
6
7 Advanced SSL configuration for VServer Vserver-SSL-1:
8
9 DH: DISABLED
10
11 Ephemeral RSA: ENABLED
12
13 Refresh Count: 0
14
15 Session Reuse: ENABLED
16
17 Timeout: 120 seconds
18
19 Cipher Redirect: ENABLED
20
21 SSLv2 Redirect: ENABLED
22
23 ClearText Port: 0
```



```
24
25 Client Auth: DISABLED
26
27 SSL Redirect: DISABLED
28
29 Non FIPS Ciphers: DISABLED
30
31 SSLv2: DISABLED SSLv3: ENABLED TLSv1: ENABLED
32
33 1) CertKey Name: CertKey-SSL-1 Server Certificate
34
35 1) Policy Name: Policy-SSL-1 Priority: 0
36
37 1) Cipher Name: DEFAULT Description: Predefined Cipher Alias
38
39 Done
```

Bind an SSL policy to an SSL virtual server by using the GUI

Follow these steps:

1. Navigate to **Traffic Management > SSL Offload > Virtual Servers**.
2. In the details pane, select the virtual server (for example, Vserver-SSL-1), and then click **Open**.
3. In the **Configure Virtual Server (SSL Offload)** dialog box, click **Insert Policy**, and then select the policy that you want to bind to the SSL virtual server. Optionally, you can double-click the Priority field and type a new priority level.
4. Click **OK**.

Features at a glance

May 2, 2023

NetScaler features can be configured independently or in combinations to address specific needs. Although some features fit more than one category, the numerous NetScaler features can generally be categorized as application switching and traffic management features, application acceleration features, and application security and firewall features, and an application visibility feature.

To understand the order in which the features perform their processing, see [Processing Order of Features](#) section.

Application switching and traffic management features

May 2, 2023

Below are the application switching and traffic management features.

SSL Offloading

Transparently offloads SSL encryption and decryption from web servers, freeing server resources to service content requests. SSL places a heavy burden on an application's performance and can render many optimization measures ineffective. SSL offload and acceleration allow all the benefits of Citrix Request Switching technology to be applied to SSL traffic, ensuring secure delivery of web applications without degrading end-user performance.

For more information, see [SSL offload and acceleration](#).

Access Control Lists

Compares incoming packets to Access Control Lists (ACLs). If a packet matches an ACL rule, the action specified in the rule is applied to the packet. Otherwise, the default action (ALLOW) is applied and the packet is processed normally. For the appliance to compare incoming packets to the ACLs, you have to apply the ACLs. All ACLs are enabled by default, but you have to apply them in order for the NetScaler appliance to compare incoming packets against them. If an ACL is not required to be a part of the lookup table, but still needs to be retained in the configuration, it should be disabled before the ACLs are applied. An ADC appliance does not compare incoming packets to disabled ACLs.

For more information, see [Access Control List](#).

Load Balancing

Load balancing decisions are based on a variety of algorithms, including round robin, least connections, weighted least bandwidth, weighted least packets, minimum response time, and hashing based on URL, domain source IP, or destination IP. Both the TCP and UDP protocols are supported, so the NetScaler appliance can load balance all traffic that uses those protocols as the underlying carrier (for example, HTTP, HTTPS, UDP, DNS, NNTP, and general firewall traffic). In addition, the ADC appliance can maintain session persistence based on source IP, cookie, server, group, or SSL session. It allows users to apply custom Extended Content Verification (ECV) to servers, caches, firewalls and other infrastructure devices to ensure that these systems are functioning properly and are providing the right content to users. It can also perform health checks using ping, TCP, or HTTP URL, and the user can create monitors based on Perl scripts.

To provide high-scale WAN optimization, the CloudBridge appliances deployed at data centers can be load balanced through NetScaler appliances. The bandwidth and number of concurrent sessions can be improved significantly.

For more information, see [Load Balancing](#).

Traffic Domains

Traffic domains provide a way to create logical ADC partitions within a single NetScaler appliance. They enable you to segment network traffic for different applications. You can use traffic domains to create multiple isolated environments whose resources do not interact with each other. An application belonging to a specific traffic domain communicates only with entities, and processes traffic, within that domain. Traffic belonging to one traffic domain cannot cross the boundary of another traffic domain. Therefore, you can use duplicate IP addresses on the appliance as long as an address is not duplicated within the same domain.

For more information, see [Traffic Domains](#).

Network Address Translation

Network address translation (NAT) involves modification of the source and/or destination IP addresses, and/or the TCP/UDP port numbers, of IP packets that pass through the NetScaler appliance. Enabling NAT on the appliance enhances the security of your private network, and protects it from a public network such as the Internet, by modifying your network's source IP addresses when data passes through the NetScaler appliance.

The NetScaler appliance supports the following types of network address translation:

INAT: In Inbound NAT (INAT), an IP address (usually public) configured on the NetScaler appliance listens to connection requests on behalf of a server. For a request packet received by the appliance on a public IP address, the ADC replaces the destination IP address with the private IP address of the server. In other words, the appliance acts as a proxy between clients and the server. INAT configuration involves INAT rules, which define a 1:1 relationship between the IP address on the NetScaler appliance and the IP address of the server.

RNAT: In Reverse Network Address Translation (RNAT), for a session initiated by a server, the NetScaler appliance replaces the source IP address in the packets generated by the server with an IP address (type SNIP) configured on the appliance. The appliance thereby prevents exposure of the server's IP address in any of the packets generated by the server. An RNAT configuration involves an RNAT rule, which specifies a condition. The appliance performs RNAT processing on those packets that match the condition.

Stateless NAT46 Translation: Stateless NAT46 enables communication between IPv4 and IPv6 networks, by way of IPv4 to IPv6 packet translation and vice versa, without maintaining any session information on the NetScaler appliance. A stateless NAT46 configuration involves an IPv4-IPv6 INAT rule and an NAT46 IPv6 prefix.

Stateful NAT64 Translation: The stateful NAT64 feature enables communication between IPv4 clients and IPv6 servers through IPv6 to IPv4 packet translation, and vice versa, while maintaining session information on the NetScaler appliance. A stateful NAT64 configuration involves an NAT64 rule and an NAT64 IPv6 prefix.

For more information, see [Configuring Network Address Translation](#).

Multipath TCP Support

NetScaler appliances support Multipath TCP (MPTCP). MPTCP is a TCP/IP protocol extension that identifies and uses multiple paths available between hosts to maintain the TCP session. You must enable MPTCP on a TCP profile and bind it to a virtual server. When MPTCP is enabled, the virtual server functions as an MPTCP gateway and converts MPTCP connections with the clients to TCP connections that it maintains with the servers.

For more information, see [MPTCP \(Multi-Path TCP\)](#).

Content Switching

Determines the server to which to send the request on the basis of configured content switching policies. Policy rules can be based on the IP address, URL, and HTTP headers. This allows switching decisions to be based on user and device characteristics such as who the user is, what type of agent is being used, and what content the user requested.

For more information, see [Content Switching](#).

Global Server Load Balancing (GSLB)

Extends the traffic management capabilities of a NetScaler to include distributed Internet sites and global enterprises. Whether installations are spread across multiple network locations or multiple clusters in a single location, the NetScaler maintains availability and distributes traffic across them. It makes intelligent DNS decisions to prevent users from being sent to a site that is down or overloaded. When the proximity-based GSLB method is enabled, the NetScaler can make load balancing decisions based on the proximity of the client's local DNS server (LDNS) in relation to different sites. The main benefit of the proximity-based GSLB method is faster response time resulting from the selection of the closest available site.

For more information, see [Global Server Load Balancing](#).

Dynamic Routing

Enables routers to obtain topology information, routes, and IP addresses from neighboring routers automatically. When dynamic routing is enabled, the corresponding routing process listens to route updates and advertises routes. The routing processes can also be placed in passive mode. Routing protocols enable an upstream router to load balance traffic to identical virtual servers hosted on two standalone NetScaler units using the Equal Cost Multipath technique.

For more information, see [Configuring Dynamic Routes](#).

Link Load Balancing

Load balances multiple WAN links and provides link failover, further optimizing network performance and ensuring business continuity. Ensures that network connections remain highly available, by applying intelligent traffic control and health checks to distribute traffic efficiently across upstream routers. Identifies the best WAN link to route both incoming and outbound traffic based on policies and network conditions, and protects applications against WAN or Internet link failure by providing rapid fault detection and failover.

For more information, see [Link Load Balancing](#).

TCP Optimization

You can use TCP profiles to optimize TCP traffic. TCP profiles define the way that NetScaler virtual servers process TCP traffic. Administrators can use the built-in TCP profiles or configure custom profiles. After defining a TCP profile, you can bind it to a single virtual server or to multiple virtual servers.

Some of the key optimization features that can be enabled by TCP profiles are:

- TCP keep-alive—Checks the operational status of the peers at specified time intervals to prevent the link from being broken.
- Selective Acknowledgment (SACK)—Improves the performance of data transmission, especially in long fat networks (LFNs).
- TCP window scaling—Allows efficient transfer of data over long fat networks (LFNs).

For more information on TCP Profiles, see [Configuring TCP Profiles](#).

CloudBridge Connector

The NetScaler CloudBridge Connector feature, a fundamental part of the Citrix OpenCloud framework, is a tool used to build a cloud-extended data center. The OpenCloud Bridge enables you to connect

one or more NetScaler appliances or NetScaler virtual appliances on the cloud-to-your network without reconfiguring your network. Cloud hosted applications appear as though they are running on one contiguous enterprise network. The primary purpose of the OpenCloud Bridge is to enable companies to move their applications to the cloud while reducing costs and the risk of application failure. In addition, the OpenCloud Bridge increases network security in cloud environments. An OpenCloud Bridge is a Layer-2 network bridge that connects a NetScaler appliance or NetScaler virtual appliance on a cloud instance to a NetScaler appliance or NetScaler virtual appliance on your LAN. The connection is made through a tunnel that uses the Generic Routing Encapsulation (GRE) protocol. The GRE protocol provides a mechanism for encapsulating packets from a wide variety of network protocols to be forwarded over another protocol. Then Internet Protocol security (IPsec) protocol suite is used to secure the communication between the peers in the OpenCloud Bridge.

For more information, see [CloudBridge](#).

DataStream

The NetScaler DataStream feature provides an intelligent mechanism for request switching at the database layer by distributing requests on the basis of the SQL query being sent.

When deployed in front of database servers, a NetScaler ensures optimal distribution of traffic from the application servers and Web servers. Administrators can segment traffic according to information in the SQL query and on the basis of database names, user names, character sets, and packet size.

You can configure load balancing to switch requests according to load balancing algorithms, or you can elaborate the switching criteria by configuring content switching to make a decision based on SQL query parameters, such as user name, database names, and command parameters. You can further configure monitors to track the states of database servers.

The advanced policy infrastructure on the NetScaler appliance includes expressions that you can use to evaluate and process the requests. The advanced expressions evaluate traffic associated with MySQL database servers. You can use request-based expressions (expressions that begin with `MYSQL.CLIENT` and `MYSQL.REQ`) in advanced policies to make request switching decisions at the content switching virtual server bind point and response-based expressions (expressions that begin with `MYSQL.RES`) to evaluate server responses to user-configured health monitors.

Note: DataStream is supported for MySQL and MS SQL databases.

For more information, see [DataStream](#).

Application acceleration features

May 2, 2023

- AppCompress

Uses the gzip compression protocol to provide transparent compression for HTML and text files. The typical 4:1 compression ratio yields up to 50% reduction in bandwidth requirements out of the data center. It also results in significantly improved end-user response time, because it reduces the amount of data that must be delivered to the user's browser.

- Cache Redirection

Manages the flow of traffic to a reverse proxy, transparent proxy, or forward proxy cache farm. Inspects all requests, and identifies non-cacheable requests and sends them directly to the origin servers over persistent connections. By intelligently redirecting non-cacheable requests back to the origin web servers, the NetScaler appliance frees cache resources and increases cache hit rates while reducing overall bandwidth consumption and response delays for these requests.

For more information, see [Cache Redirection](#).

- AppCache

Helps optimize web content and application data delivery by providing a fast in-memory HTTP/1.1 and HTTP/1.0 compliant web caching for both static and dynamic content. This on-board cache stores the results of incoming application requests even when an incoming request is secured or the data compressed, and then reuses the data to fulfill subsequent requests for the same information. By serving data directly from the on-board cache, the appliance can reduce page regeneration times by eliminating the need to funnel static and dynamic content requests to the server.

For more information, see [Integrated Caching](#).

- TCP Buffering

Buffers the server's response and delivers it to the client at the client's speed, thus offloading the server faster and thereby improving the performance of web sites.

Application security and firewall features

January 6, 2025

The following are the security and firewall features.

Denial of service (DoS) attack defense

Detects and stops malicious distributed denial-of-service (DDoS) attacks and other types of malicious attacks before they reach your servers, preventing them from affecting network and application performance. The NetScaler appliance identifies legitimate clients and elevates their priority, leaving suspect clients unable to consume a disproportionate percentage of resources and cripple your site. The appliance provides application-level protection from the following types of malicious attacks:

- SYN flood attacks
- Pipeline attacks
- Teardrop attacks
- Land attacks
- Fraggle attacks
- Zombie connection attacks

The appliance aggressively defends against these types of attacks by preventing the allocation of server resources for these connections. This insulates servers from the overwhelming flood of packets associated with these events.

The appliance also protects network resources from ICMP based attacks by using ICMP rate limiting and aggressive ICMP packet inspection. It performs strong IP reassembly, drops a variety of suspicious and malformed packets, and applies Access Control Lists (ACLs) to site traffic for further protection.

For more information, see [AppQoS](#).

Content Filtering

Provides protection from malicious attacks for websites at the Layer 7 level. The appliance inspects each incoming request according to user-configured rules based on HTTP headers, and performs the action the user configured. Actions can include resetting the connection, dropping the request, or sending an error message to the user's browser. This allows the appliance to screen unwanted requests and reduces your servers' exposure to attacks.

This feature can also analyze HTTP GET and POST requests and filter out known bad signatures, allowing it to defend your servers against HTTP-based attacks.

For more information, see [Content Filtering](#).

Responder

Functions like an advanced filter and can be used to generate responses from the appliance to the client. Some common uses of this feature are generation of redirect responses, user-defined responses, and resets.

For more information, see [Responder](#).

Rewrite

Modifies HTTP headers and body text. You can use the rewrite feature to add HTTP headers to an HTTP request or response, modify individual HTTP headers, or delete HTTP headers. It also enables you to modify the HTTP body in requests and responses.

When the appliance receives a request or sends a response, it checks for rewrite rules, and if applicable rules exist, it applies them to the request or response before passing it on to the web server or client computer.

For more information, see [Rewrite](#).

Surge Protection

Regulates the flow of user requests to servers and controls the number of users that can simultaneously access the resources on the servers, queuing any additional requests once your servers have reached their capacity. By controlling the rate at which connections can be established, the appliance blocks surges in requests from being passed on to your servers, thus preventing site overload.

For more information, see [Surge Protection](#).

NetScaler Gateway

NetScaler Gateway is a secure application access solution that provides administrators granular application-level policy and action controls to secure access to applications and data while allowing users to work from anywhere. It gives IT administrators a single point of control and tools to help ensure compliance with regulations and the highest levels of information security across and outside the enterprise. At the same time, it empowers users with a single point of access—optimized for roles, devices, and networks—to the enterprise applications and data they need. This unique combination of capabilities helps maximize the productivity of today's mobile workforce.

For more information, see [NetScaler Gateway](#).

Application Firewall

Protects applications from misuse by hackers and malware, such as cross site scripting attacks, buffer overflow attacks, SQL injection attacks, and forceful browsing, by filtering traffic between each protected web server and users that connect to any website on that web server. The application firewall

examines all traffic for evidence of attacks on web server security or misuse of web server resources, and takes the appropriate action to prevent these attacks from succeeding.

For more information, see [Application Firewall](#).

IP reputation

IP reputation is an essential tool for identifying IP addresses that generate unwanted requests. By using an IP reputation list, you can effectively reject requests from addresses known to have a negative reputation. This approach not only enhances the performance of the Web Application Firewall by streamlining the filtering process but also ensures that only genuine requests are processed. Also, it is possible to reset or drop unwanted requests or implement a responder policy to take specific actions based on the identified reputation of the requesting IP address.

For more information, see [IP Reputation](#).

Application visibility feature

May 2, 2023

- NetScaler Application Delivery Management

NetScaler Application Delivery Management (ADM) is a high performance collector that provides end-to-end user experience visibility across Web and HDX (ICA) traffic. It collects HTTP and ICA AppFlow records generated by NetScaler appliances and populates analytical reports covering Layer 3 to Layer 7 statistics. NetScaler Console provides in-depth analysis for the last five minutes of real-time data, and for historical data collected for the last one hour, one day, one week, and one month.

HDX (ICA) analytic dashboard enables you to drill down from HDX Users, Applications, Desktops, and even from gateway-level information. Similarly, HTTP analytics provide a bird's eye view of Web Applications, URLs Accessed, Client IP Addresses and Server IP Addresses, and other dashboards. The administrator can drill down and identify the pain points from any of these dashboards, as appropriate for the use case.

- Enhanced Application Visibility Using AppFlow

The NetScaler appliance is a central point of control for all application traffic in the data center. It collects flow and user-session level information valuable for application performance monitoring, analytics, and business intelligence applications. AppFlow transmits this information by using the Internet Protocol Flow Information eXport (IPFIX) format, which is an open Internet Engineering Task Force (IETF) standard defined in RFC 5101. IPFIX (the standardized version

of Cisco's NetFlow) is widely used to monitor network flow information. AppFlow defines new Information Elements to represent application-level information.

Using UDP as the transport protocol, AppFlow transmits the collected data, called *flow records*, to one or more IPv4 collectors. The collectors aggregate the flow records and generate real-time or historical reports.

AppFlow provides visibility at the transaction level for HTTP, SSL, TCP, and SSL_TCP flows. You can sample and filter the flow types that you want to monitor.

To limit the types of flows to monitor, by sampling and filtering the application traffic, you can enable AppFlow for a virtual server. AppFlow can also provide statistics for the virtual server.

You can also enable AppFlow for a specific service, representing an application server, and monitor the traffic to that application server.

For more information, see [AppFlow](#).

- Stream Analytics

The performance of your website or application depends on how well you optimize the delivery of the most frequently requested content. Techniques such as caching and compression help accelerate the delivery of services to clients, but you must be able to identify the resources that are requested most frequently, and then cache or compress those resources. You can identify the most frequently used resources by aggregating real-time statistics about website or application traffic. Statistics such as how frequently a resource is accessed relative to other resources and how much bandwidth is consumed by those resources help you determine whether those resources must be cached or compressed to improve server performance and network utilization. Statistics such as response times and the number of concurrent connections to the application help you determine whether you must enhance server-side resources.

If the website or application does not change frequently, you can use products that collect statistical data, and then manually analyze the statistics and optimize the delivery of content. However, if you do not want to perform manual optimizations, or if your website or application is dynamic in nature, you need infrastructure that can not only collect statistical data but can also automatically optimize the delivery of resources based on the statistics. On the NetScaler appliance, this functionality is provided by the Stream Analytics feature. The feature operates on a single NetScaler appliance and collects run-time statistics based on the criteria that you define. When used with NetScaler policies, the feature also provides you with the infrastructure that you need for automatic, real-time traffic optimization.

For more information, see [Action Analytics](#).

NetScaler Solutions

June 18, 2024

NetScaler solutions simplify the task of setting up frequently deployed configurations. Check this space from time to time for additional solutions.

This section includes the following solutions.

- [Setting up NetScaler for Citrix Virtual Apps and Desktops](#)
- [Global Server Load Balancing \(GSLB\) Powered Zone Preference](#)
- [Anycast support in NetScaler](#)
- [Deploy digital advertising platform on AWS with NetScaler](#)
- [Enhancing Clickstream analytics in AWS using NetScaler](#)


Setting up NetScaler for Citrix Virtual Apps and Desktops

May 2, 2023

A NetScaler appliance can provide load balanced, secure remote access to your Citrix Virtual Apps and Desktops applications. You can use the NetScaler load balancing feature to distribute traffic across the Citrix Virtual Apps and Desktops server. You can use the NetScaler Gateway feature to provide secure remote access to the servers.

NetScaler can also accelerate and optimize the traffic flow and offer visibility features that are useful for Citrix Virtual Apps and Desktops deployments.

Figure 1. NetScaler appliance in Citrix Virtual Apps and Desktops setup

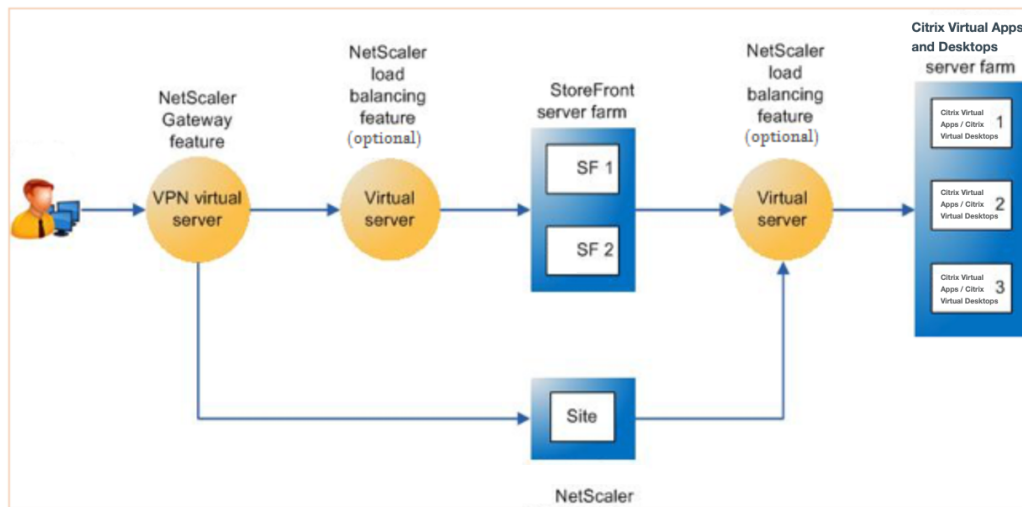

The preceding figure shows the components involved in this deployment:

- **NetScaler Gateway.** Provides the URL for user access, and provides security by authenticating the users.
- **NetScaler load balancing virtual server.** Load balances the traffic for the StoreFront servers. You can also deploy a load balancing virtual server in front of the Citrix Virtual Apps and Desktop servers to load balance key components such as XML Broker and Desktop Delivery Controller (DDC) server.
- **Citrix Virtual Apps and Desktops.** Provides the applications that your users want to access.

To set up the NetScaler for Citrix Virtual Apps and Desktops by using the NetScaler GUI

Prerequisites

- Citrix Virtual Apps and Desktop servers are configured and available.
- You have a working knowledge of NetScaler Gateway, NetScaler, Citrix Virtual Apps and Desktops, and StoreFront
- Make sure that you have configured a virtual server and a service and bound the service to the virtual server. For more information, see:
 - [Load balance Citrix Virtual Apps and Desktops](#)
 - [Load balance Citrix Virtual Apps and Desktops](#)

Procedure:

1. Log on to the NetScaler appliance and on the **Configuration** tab click **XenApp and XenDesktop**.
2. On the **Details** pane, click **Get Started**. If the setup exists on the NetScaler, click the **Edit** link corresponding to each of the section that you want to modify.
3. Select the product (StoreFront) that in your deployment provides the interface for access to the Citrix Virtual Apps and Desktops applications.
4. Set up secure remote access.
 - a) In the **NetScaler Gateway Settings** section, specify the details for the VPN virtual server and click **Continue**.
 - b) In the **Server Certificate** section, choose an existing certificate or install a new certificate and click **Continue**.
 - c) In the **Authentication** section, configure the primary authentication mechanism to be used and specify the server details or use an existing server and click **Continue**.
 - d) In the **StoreFront** section, specify the details of the server that provides the interface for accessing the applications and click **Continue**.
 - e) You can use LB virtual server pointing to multiple SF servers as your StoreFront server.
5. Click **Done** to complete the configuration.

Global Server Load Balancing (GSLB) Powered Zone Preference

May 2, 2023

GSLB powered zone preference is a feature that integrates Citrix Virtual Apps and Desktops, StoreFront, and NetScaler to provide clients access to the most optimized data center based on the client location.

In a distributed Citrix Virtual Apps and Desktops deployment, StoreFront might not select an optimal data center when multiple equivalent resources are available from multiple data centers. In such cases, StoreFront randomly selects a data center. It can send the request to any of the Citrix Virtual Apps and Desktops servers in any data center, regardless of proximity to the client making the request.

The client IP address is examined when an HTTP request arrives at the NetScaler Gateway appliance. The real client IP address is used to create the data center preference list that is forwarded to StoreFront. If the NetScaler appliance is configured to insert the zone preference header, StoreFront 3.5 or later can use the information provided by the appliance to reorder the list of delivery controllers and connect to an optimal delivery controller in the same zone as the client. StoreFront selects the optimal gateway VPN virtual server for the selected data center zone, adds this information to the ICA

file with appropriate IP addresses, and sends it to the client. StoreFront then tries to launch applications hosted on the preferred data center's delivery controllers before trying to contact equivalent controllers in other data centers.

For more information about configuring this solution, click [here](#).


Anycast support in NetScaler

May 2, 2023

Anycast is a type of network where a set of servers shares an IP address. The client request is directed to the topographically closest server based on their routing tables. This routing reduces latency issues, ensures high availability, and minimizes downtime.

NetScaler supports anycast network with Global Server Load Balancing (GSLB) and DNS features.

The following diagram illustrates a topology diagram of Anycast in NetScaler.

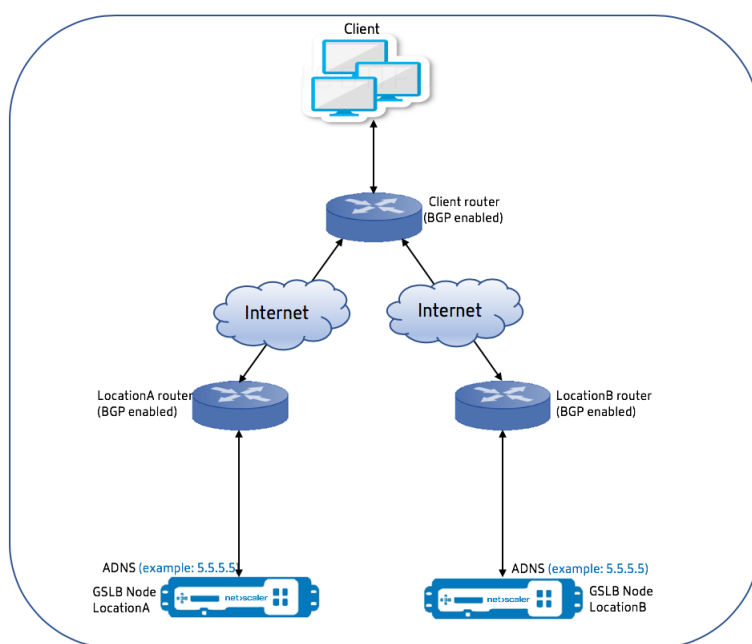

Anycast GSLB

The NetScaler GSLB feature provides load balancing across globally distributed sites along with disaster recovery and ensures continuous availability of applications.

During an outage, GSLB provides immediate disaster recovery by routing traffic to the closest or the best performing data center. However, GSLB cannot control the following:

- How the DNS traffic is routed to GSLB nodes in different geographical locations.
- How much latency is getting added while DNS queries get routed to GSLB nodes.

In a typical GSLB setup, each data center has a GSLB node configured with the site-specific Authoritative Domain Name Server (ADNS) to receive DNS queries. Each site's ADNS is configured as the nameserver in the DNS resolver. As the number of GSLB nodes increases, the number of nameserver records also increase. In such cases, if there is a failure of a data center, LDNS has to retry resolution with a different nameserver. This retry adds to the latency in DNS resolution.

Also, every time a GSLB node is added, the nameserver records must be updated.

To overcome these drawbacks, you can use Anycast ADNS. In Anycast ADNS, a single ADNS IP address is used for all GSLB nodes and the DNS traffic is routed to GSLB nodes using dynamic routing.

For example, if a GSLB site is DOWN, the routing table is updated and route to this site is removed. As a result, The DNS queries are not sent to the sites that are DOWN. As a result, there are no retries.

If a new GSLB node is added, the new node is assigned the same ADNS IP address. The dynamic routing automatically updates the routing tables with routes to new sites based on the routing algorithms. Hence, you do not have to update the DNS name server records. The rollout of new GSLB sites is made simpler and faster with Anycast.

How to configure an ADNS IP address in an anycast mode

Enable host routing on the ADNS IP in a NetScaler appliance, and set the appropriate Route Health Injection (RHI) level. Mostly, there would not be any virtual servers on the ADNS IP and therefore RHI level must be selected as NONE. Enabling host route on the ADNS IP makes it a kernel route. You can then enable the dynamic routing of choice and configure the routing protocol to redistribute the kernel routes.

ADNS IP configuration –Example

At the command prompt, type;

```
1 add service adns_public 5.5.5.5 ADNS 53
2
3 set ip 5.5.5.5 -hostRoute ENABLED -vserverRHILevel ALL_VSERVERS
```

BGP configuration in GSLB site –Example

```
1 Site1#sh run
2 !
3 hostname Site1
4 !
5 log syslog
6 log record-priority
```



```

7 !
8 ns route-install bgp
9 !
10 interface lo0
11 ip address 127.0.0.1/8
12 ipv6 address fe80::1/64
13 ipv6 address ::1/128
14 !
15 interface vlan0
16 ip address 10.102.148.94/25
17 ipv6 address fe80::e84c:f4ff:fe74:4588/64
18 !
19 interface vlan2
20 ip address 172.18.30.15/24
21 !
22 router bgp 5
23 redistribute kernel -----> redistributing the kernel routes
24 neighbor 172.18.30.30 remote-as 4
25 neighbor 172.18.30.30 advertisement-interval 1
26 neighbor 172.18.30.30 timers 4 16
27 !
28 End
29
30 Site1#

```

GSLB site routing table - Example

```

1 Site1#sh ip route
2 Codes: K - kernel, C - connected, S - static, R - RIP, B - BGP
3         O - OSPF, IA - OSPF inter area
4         N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
5         E1 - OSPF external type 1, E2 - OSPF external type 2
6         i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2
7         ia - IS-IS inter area, I - Intranet
8         * - candidate default
9
10 K      5.5.5.5/32 via 0.0.0.0 ----->
        Kernel Route for ADNS
11 C      10.102.148.0/25 is directly connected, vlan0
12 C      127.0.0.0/8 is directly connected, lo0
13 B      172.18.10.0/24 [20/0] via 172.18.30.30, vlan2, 01w5d22h
14 B      172.18.20.0/24 [20/0] via 172.18.30.30, vlan2, 01w5d22h
15 C      172.18.30.0/24 is directly connected, vlan2
16 B      192.168.3.0/24 [20/0] via 172.18.30.30, vlan2, 01w5d22h
17 B      192.168.5.0/24 [20/0] via 172.18.30.30, vlan2, 01w5d22h
18 B      192.168.10.0/24 [20/0] via 172.18.30.30, vlan2, 01w5d22h
19
20 Gateway of last resort is not set
21 Site1#

```

Anycast DNS

You can use Anycast DNS for DNS proxy virtual servers on NetScaler. When there are multiple DNS name servers configured, the DNS resolver responds based on round robin method. For example, if the resolver does not receive any response from the first server, it switches to the second server after the configured timeout value expires. The switching from first server to second server adds to the latency in DNS resolution. If the DNS resolvers are configured with Anycast, then this latency can be eliminated.

DNS configuration –Example

At the command prompt, type;

```
1 add lb vserver dns DNS 5.5.5.50 53
2
3 set ip 5.5.5.50 -hostRoute ENABLED -vserverRHILevel ALL_VSERVERS
```

Deploy digital advertising platform on AWS with NetScaler

May 2, 2023

With the evolving nature of digital platforms, a wide range of advertising applications are available. For example, social media, direct mail, videos, banners, pops, interstitials, rich media and so on. Advertisers are embracing video advertising networks at a fast pace, constituting nearly 40% of the advertisement traffic. But with more usage of mobiles by the modern users, running video ads on the mobile platform has seen considerable surge.

The digital advertising platforms face several challenges. Some of the challenges are:

- Security threats
- High operational costs
- Wide range of devices are available to send traffic over the internet. The different protocols for real-time communication pose the following challenges:
 - webRTC
 - Adaptive streaming
 - UDP for video, where WebRTC uses UDP over HTTP

To deal with the complex behavior of advertising platforms, NetScaler solution with its whole suite of capabilities and features well integrated with AWS, provides an instant, secure, and reliable access to digital advertisement inventory, anywhere and anytime. NetScaler plays a critical role in delivering the SaaS and web apps for digital platforms.

Digital advertising platform integration with NetScaler

Digital advertising platform overview

The digital advertising platform consists of the following key components:


- Ad exchange
- Ad network
- Demand side platform (DSP)
- Supply side platform (SSP)
- Real time bidding (RTB) systems

An overview of the process followed in an advertising system is as follows.

- The first transaction happens when the user visits the website.
- This triggers a bid/advertisement request (including user's demographic information) that is sent to the ad server or publisher contacting an ad exchange.
- The Ad publishers send the advertisement request to an Ad exchange through SSPs.
- The Ad exchange submits this request and the accompanying data to DSP telling there is an impression or advertisement request available. Therefore, multiple advertisers can automatically submit bids in real time to place their advertisements.
- Meanwhile, the advertisers must set up their campaigns in DSP. Use the information about the user from Data Management Platform (DMP) to assess the amount they are willing to pay for delivering an advertisement to the user.
- DSPs submit these real-time bids on each advertisement impression because it is served to the advertisement exchange.
- Whichever bidder bids the most within a time period set by the Ad exchange or SSPs, gets an advertisement slot by the publishers to serve their advertisements. Otherwise, they lose the opportunity to get the right advertisement for their key demographic.

How digital advertising platform is integrated with NetScaler

The following diagram illustrates how the different components of advertising platform communicate with NetScaler and NetScaler Application Delivery Management (ADM) to serve online advertisements.

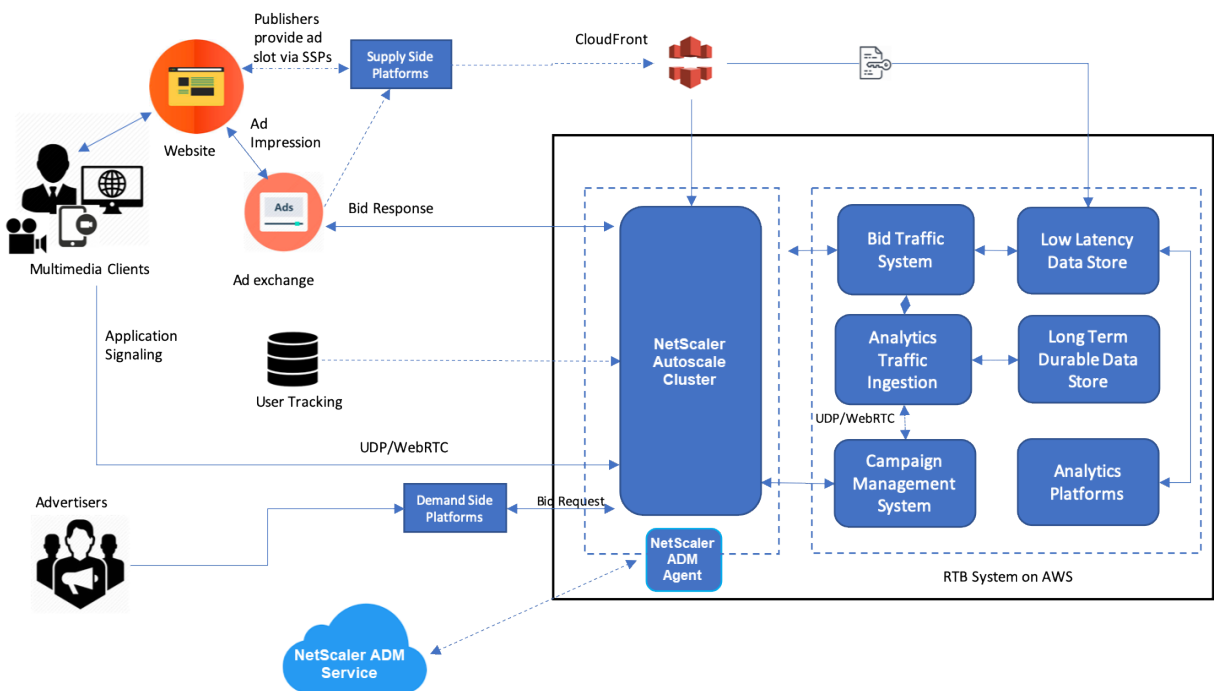

How NetScaler contributes In the advertisement publishing process, NetScaler solution helps in handling and processing the inconsistent influx of bid traffic. It acts as an entry point for all traffic to ensure scalability and availability across the availability zones. To cater to the elastic nature of advertising traffic, it is deployed in an autoscaling group in front of web applications and database servers.

The advertising platform on AWS with NetScaler solution allows you to get the real-time performance, high scalability, and high availability across the globe. You can buy and sell rich media, video, mobile, and native advertisements in real time. It reduces the overall operational cost and latency involved in running an Advertising platform. It is the best performing proxy with the rich capabilities of gracefully removing the back-end servers during Autoscale, connection multiplexing, and ensuring that the end-user traffic never gets impacted. NetScaler supports load balancing the HTTP, UDP, WebRTC, and RTSP protocols that are used in the advertising platforms.

NetScaler fits coherently into the AWS environment with the following key attributes:

- Content switching –Switch to the right platform based on host name.
- Security protection –Use web application firewall (WAF) functionality, rate limiting (through Client IP), and protection against DDoS attacks.
- Autoscaling of both front-end and back-end traffic.
- End-to-end visibility, and anomaly detection across ADC appliances by utilizing ADM.
- Low latency.

How NetScaler Console contributes NetScaler utilizes NetScaler Console to overcome the following challenges faced by the digital advertising platforms:

- Identify the trend deviations from expected performance
- Real-time application performance analysis
- Capacity monitoring

Advantages of advertising platform integration with NetScaler and ADM

The NetScaler solution offers the following capabilities and benefits to a digital advertising platform vendor.

Low cost

- Integrated with AWS Autoscaling service, the NetScaler VPX instance can scale up or down your front-end and back-end resources automatically. This provides a zero-touch configuration catering to the elasticity of advertising platforms.
- Consolidation of delivering all types of traffic from a single point.

For more information on AWS autoscaling, see [Add back-end AWS Autoscaling service](#).

High availability

- If one Availability Zone becomes unavailable, NetScaler applies its fault tolerance ability to autodetect the servers in another availability zone, without any traffic interruption.
- Also, It gracefully terminates servers avoiding the loss of client connections.

For more information, see [How high availability on AWS works](#).

Application performance analytics NetScaler Console intelligent analytics and application performance analytics ensures to:

- Gain visibility into the issues (server response anomalies, 5XX errors, and so on) plaguing the end user experience.
- Alert the administrator to take corrective actions immediately.

For more information, see [Performance indicators for application analytics](#).

Rich firewall security Most common security vulnerabilities occur in web applications rather in networks. It is vital to protect your web applications from unauthorized access such as bots, data thefts, and application layer attacks.

NetScaler provides comprehensive and integrated Layer 4 to Layer 7 security that includes:

- Web App Firewall (WAF) to protect your web applications, identify, and mitigate malicious bots with regularly updated bot signatures and behaviour-based detection.
- Rate limiting to prevent an advertising platform from being overwhelmed.

For more information, see [NetScaler Web App Firewall](#).

Select the right AWS instance type for advertising platform

Choose the right AWS instance type for ADC depending on the following two factors:

- Number of users simultaneously accessing the advertising platform.
- Average number of users on the platform.

The NetScaler can be deployed in various EC2 instances, which include c5, c5n, m5, and so on. For advertising platforms, use the following AWS instance types:

- c5 or c5n is appropriate for handling SSL heavy traffic.
- c5.large can handle up to 1000 SSL TPS.

For more information, see [VPX-AWS support matrix](#).

Enhancing Clickstream analytics in AWS using NetScaler

May 2, 2023

Customers are increasingly accessing the company products through various applications such as Mobile apps, SaaS apps and so on. Therefore, applications can become a landmine of customer experience data. To track customer behavior online, customer-centric companies form data-driven profiles for each of their customers using this customer behavior data.

A clickstream is a sequence or stream of events that represent user actions (clicks) on a website or a mobile application. However, the scope of clickstream extends beyond clicks. It includes product searches, impressions, purchases, and any such events that might be of relevance to the business. Mere collecting and storing the customer experience data is not of much value. There is a need to distribute the highly complex data seamlessly to the right vendors at the right time. Businesses can derive value from the data and quickly take conscious decisions to improve upon their strategies. Therefore companies increasingly use clickstream analytics to glean insights into the customer experience journey of the apps.

This document provides you a good understanding on why Clickstream data is of utmost importance, how it is collected, stored, distributed, and transformed into meaningful and actionable analytics.

NetScaler integrates with NetScaler Console, and adds value to AWS services such as Amazon Kinesis Data Firehose to equip businesses with the best-in-class analytics solution that revolves around user's Clickstreams.

This NetScaler solution helps you to solve complex business issues efficiently and with extreme simplicity. NetScaler and AWS Kinesis help to capture the issues with the poorly designed workflow. NetScaler Console helps to capture web app and network performance related issues by applying relevant filters. Conjunction of NetScaler with NetScaler Console and AWS Kinesis helps you to manage and analyze the huge influx of clickstream data in each phase. This solution is highly available, scalable, robust, and ensures the delivery is continuous and secure. Thus, you can derive actionable insights.

Why businesses opt for Clickstream analytics?

Businesses opt for clickstream primarily to understand how users interact with the application, and to get insights on improving the goals of the application. Clickstream Analytics is an information retrieval use case that tracks your user's behavior, navigation habits, and so on. Clickstream analytics gives you information on:

- Which link your customers are clicking more often and at what point in time.
- Where was the visitor before reaching my website?
- How much time did the visitor spend on each page?
- When and where did the visitor click the “back” button on the web browser?
- What items did the visitor add to (or remove from) their shopping cart?
- From which page did the visitor exit my website?

Analytics service to manage Clickstream data using Amazon Kinesis

You can use [Amazon Kinesis](#) to perform clickstream analytics. Amazon Kinesis enables clickstream analytics with the following services:

- [Amazon Kinesis Data Firehose](#)
- [Amazon Kinesis Data Analytics](#)
- [Amazon Kinesis Data Streams](#)

With Amazon Kinesis, you can collect and analyze your huge data sets at any scale. AWS Kinesis can handle data from various sources, such as:


- Mobile and web applications (for example, Gaming, ecommerce)
- IoT devices
- Social networking applications
- Financial trading services

- Geospatial services

How NetScaler enables Clickstream analytics

The NetScaler solution collates and delivers information securely on the activities of users, such as, websites visited, the bandwidth spent, navigation flow. Companies analyze this high throughput and continuous clickstream data to corroborate the effectiveness of the following:

- Site layout
- Marketing campaigns
- New application features

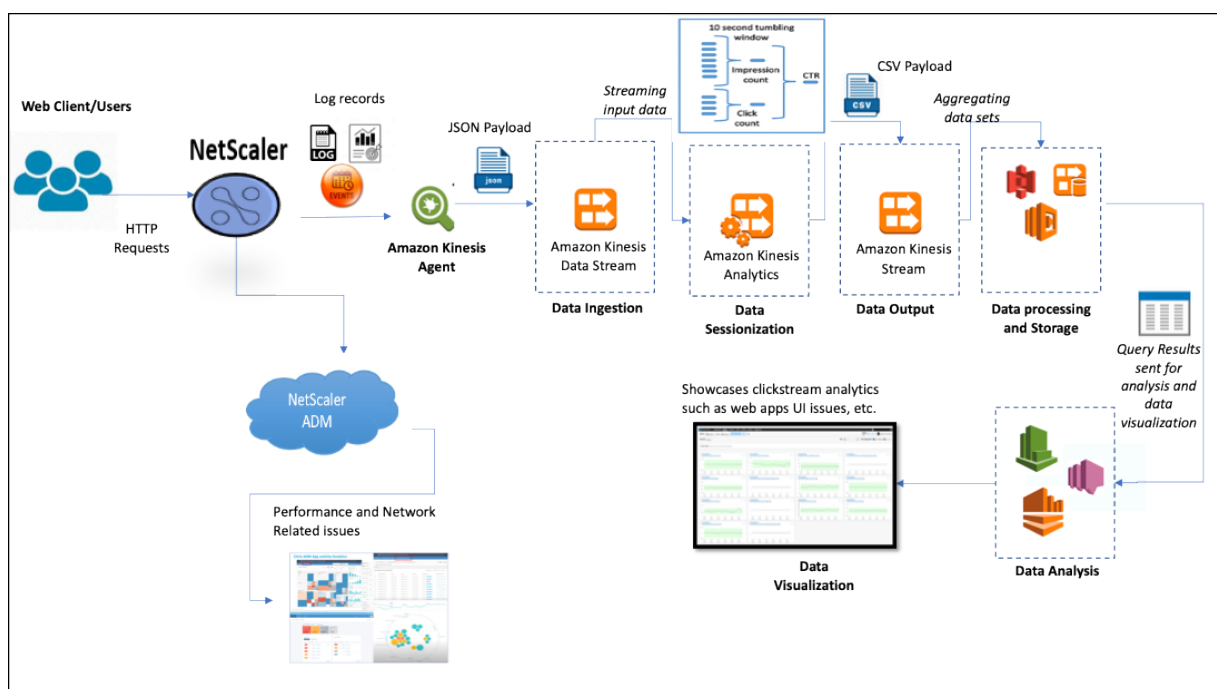

With the NetScaler’s ability to provide a resilient network protection for enterprise environments, the server cost is reduced manifold by offloading computationally intensive tasks, and running sessions on this data. Thereby helping companies to identify events in real-time with high availability, security, and low latency always.


For configuration information, see [Configure the NetScaler solution for clickstream analytics](#).

How NetScaler and NetScaler Console complement the AWS environment

The following diagram illustrates the end-to-end user workflow to perform Clickstream analytics in AWS infrastructure. This diagram helps you understand the following processes:

- How user interacts with NetScaler

- How NetScaler captures user’s actions and generates clickstream data
- How the clickstream data is delivered to AWS services (Amazon Kinesis)
- How Amazon Kinesis processes the data logs and stores them to produce meaningful click-stream analytics

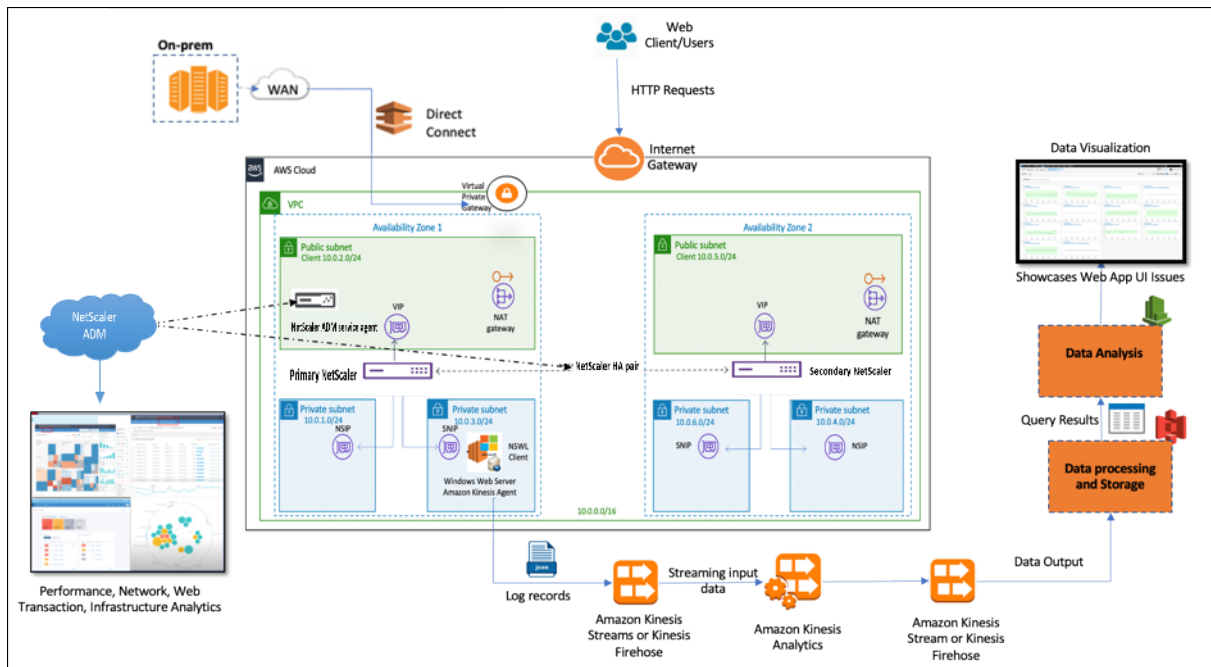

The NetScaler seamlessly integrates into the AWS environment and NetScaler Console that helps businesses to be compatible with variable volume and diverse nature of the clickstream data. It provides services to load and analyze streaming knowledge with simplicity. You can also create custom streaming knowledge applications for specialized desires.

Amazon Kinesis


The AWS environment has different services that perform analytics on the user events, logs, and metrics captured by NetScaler. The data can be website clickstreams, financial transactions, social media feeds, IT logs, and location-tracking events.

- Amazon Kinesis Data Streams perform analytics in scenarios that involve scalable and durable real-time data streaming that can continuously capture GB of data per second from several sources.
- Amazon Kinesis Data Analytics can be used for scenarios with lower latency between the session generation because it takes less time to aggregate various data sets.
- Amazon Kinesis Agent for Microsoft Windows collects, parses, filters, and streams input data to Kinesis data streams.
- Once the data is up in the cloud, you can implement the exact data pipeline to get the results you

want. For example, you can use this information in Amazon Quick Sight, which is a visualization tool that is used to build dashboards.

The AWS Kinesis dashboard provides the following offerings:

- Showcases web apps UI issues
- Near real-time visualizations of web usage metrics such as events per hour, visitor count, and referrers.
- Session-wise analysis

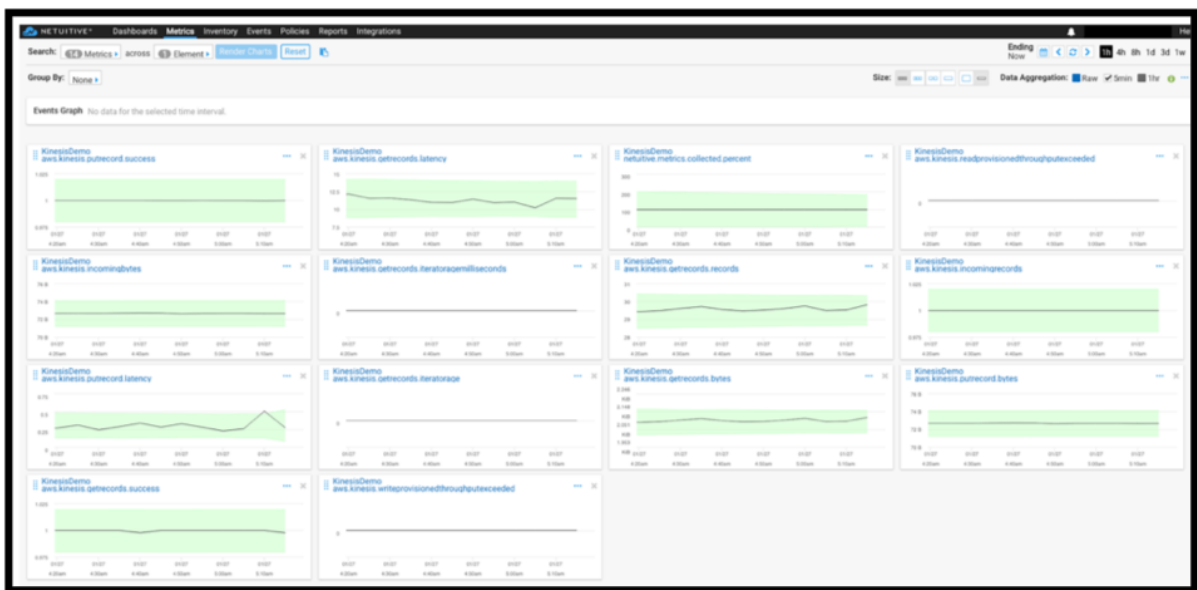

NetScaler Console Analytics

By utilizing NetScaler Console with NetScaler, you can get a single-pane-of-glass view across all the business environments. NetScaler captured logs are fed into NetScaler Console, that treats your individual applications as a single entity. You can gain valuable insights and effectively troubleshoot issues with the following ADM capabilities:

- Intelligent analytics
- Web transaction analytics
- Anomaly detection
- Performance and network-related issues

The following ADM service dashboard helps you gain valuable insights to effectively troubleshoot the issues.



How NetScaler Console correlates with Clickstream analytics

Clickstream analytics data can be correlated with ADM analytics to describe, predict, and improve application's performance.

For more information on NetScaler Console, see [NetScaler Console](#)

For example, an organization while analyzing their logs notice that most of the users are abandoning their sites. But to find the root cause behind this user behavior, they need to find out which part of their application is performing bad. With clickstream analytics data and ADM analytics, you can derive the following insights to analyze the reason behind users abandoning a site:

- Is the user abandoning due to latency, 5xx errors?
- Are there any SSL Handshake errors?
- Is there some part of the application that has performance or network related issues?
- Is there a 404 error, or the page loading time takes forever to respond, and so on.
- Are customers facing server response anomalies?

NetScaler Console service provides Web Insights that allow IT administrators to speed up solving issues with the following features:

- Provides integrated and real-time monitoring of all web applications that served by the NetScaler.
- Get a holistic view on the application performance w.r.t. time, latency, and the usual user's behavior through observability tools (such as global service graph).
- Perform intelligent analytics to understand server response anomalies.
- SSL insights contribute towards resolving 5xx and 4xx errors.
- To maintain records of all web sessions that include:
 - Detailed logs of every web transaction
 - Search capability to find relevant logs
 - Ability to isolate an ADC-to-end user vs. ADC-to-server problem

Types of data exported by ADC for Clickstream analytics

NetScaler captures the different sources that generate varied forms of data, which are as follows:

- Web server logs

Web server logging feature sends logs of HTTP and HTTPS requests to a client system for storage and retrieval. These logs contain huge amount of data, which is difficult to comprehend and make sense out of it. Analytical tools help in understanding and bring value from it. For configuration details, see the **Web logging configuration section** in this document.

- Syslogs

The primary use of syslogs is for systems management. Proactive syslog monitoring pays off because it significantly reduces downtime of servers and other devices in your infrastructure. Syslog identifies critical network issues and reports them proactively.

- Access logs

The access logs store information about events that occurred on your web server. For instance, when someone visits your website, a log is recorded and stored to provide the web server administrator with information such as the IP address of the visitor, what pages they were viewing, status codes, browser used. To access logs might be overwhelming, if there is lack of appropriate knowledge to understand them.

You can program your system to integrate with:

- NetScaler for seamless delivery
- Kinesis for actionable insights that is useful for businesses

- Audit logs

The Audit Logging feature enables you to log the NetScaler states and status information collected by various modules in the kernel and in the user-level daemons.

- Error logs

The error logs file is an aid for administrators to provide more information regarding a specific error that has occurred on the web server.

Configure the NetScaler solution for clickstream analytics

The Web server logging feature enables you to send logs of HTTP and HTTPS requests to a client system for storage and retrieval.

To configure the NetScaler for web server logging you must:

- Enable web logging feature
- Configure the size of the buffer to temporarily store the log entries because the Web log server runs on the NetScaler.

To configure web server logging by using CLI:

1. Enable the web server logging feature.

```
1 enable ns feature WL
```

2. [Optional] Modify/Configure the buffer size for storing the logged information.

```
1 set ns weblogparam -bufferSizeMB 60
```

3. Install the NetScaler web logging (NSWL) client. For more information, see [Installing the NetScaler web logging \(NSWL\) client](#)

4. Install the NSWL client on Windows by performing the following operations on the system where you downloaded the package.

- a) Extract and copy the `nswl_win-< release number >-< build number >.zip` file from the package to a Windows system on which you want to install the NSWL client.
- b) On the Windows system, unzip the file in a directory (referred as `< NSWL-HOME >`). `Bin`, `samples`, and other directories are extracted.
- c) At the command prompt, run the following command from the `< NSWL-HOME >\bin` directory:

```
1 nswl -install -f < path of the log.conf file >\log.conf
```

Note:

To uninstall the NSWL client, at the command prompt, run the following command from the `< NSWL-HOME >\bin` directory:

```
1 nswl -remove
```

5. After you install the NSWL client, configure the NSWL client using the NSWL executable. These configurations are stored in the NSWL client configuration file (log.conf).

Run the following commands from the directory in which the NSWL executable is located:

```
1 \ns\bin
```

6. In the NSWL client configuration file (log.conf), add the NetScaler IP address (NSIP) from which the NSWL client collects logs by running the following in the client system command prompt:

```
1 nswl -addns -f < Path to the configuration(log.conf) file >\log.conf
```

7. Input the NetScaler appliance's NSIP (IP address), user name as `nsroot` and password as "the instance id/your set password" so that:
 - NSWL client connects to the ADC after you add the NetScaler IP address (NSIP) to the NSWL configuration file
 - ADC buffers the HTTP and HTTPS request log entries before sending them to the client.
 - The client can filter the entries (by modifying log.conf file) before storing them.

Note

Change the default password for NetScaler and then proceed with the configuration. Type the following command to change the password:

```
1 set system user nsroot -password <your password>
```

Configuring the Amazon Kinesis agent

Perform the following steps in the AWS web console to configure the Amazon Kinesis agent:

1. Create a configuration file (appsettings.json) and deploy it. Configuration files define sets of sources, sinks, and pipes that connect sources to sinks, along with optional transformations.

The following example is a complete `appsettings.json` configuration file that configures Kinesis Agent to stream Windows application log events to Kinesis Data Firehose.

```
1 {
2
3   "Sources": [
4     {
5
6       "Id": "NSWLog",
7       "SourceType": "DirectorySource",
```

```

 8     "Directory": "C:\\Users\\Administrator\\Downloads\\
        nswl_win-13.0-52.24\\bin",
 9     "FileNameFilter": "*.log"
10     "RecordParser": "TimeStamp",
11     "TimestampFormat": "yyyy-MM-dddd HH:mm:ss.ffff", //
        Optional parameter required only by the timestamp
        record parser
12     "TimeZoneKind": "UTC", //Local or UTC
13     "SkipLines": 0 //Skip a number of lines at the beginning
        of each file
14     }
15
16 ],
17 "Sinks": [
18     {
19
20         "Id": "ApplicationLogKinesisFirehoseSink",
21         "SinkType": "KinesisFirehose",
22         "StreamName": "Delivery-ik-logs",
23         "AccessKey": "Your Access Key",
24         "SecretKey": "YourSecretKey",
25         "Region": "ap-south-1"
26     }
27
28 ],
29 "Pipes": [
30     {
31
32         "Id": "ApplicationLogSourceToApplicationLogKinesisFirehoseSink",
33         "SourceRef": "ApplicationLogSource",
34         "SinkRef": "ApplicationLogKinesisFirehoseSink"
35     }
36
37 ],
38 "Telemetry":
39     {
40
41         "off": "true"
42     }
43
44 }

```

2. Set up a Kinesis Agent on data sources to collect data and send it continuously to Amazon Kinesis Firehose/Kinesis Data Analytics. For more information, see [Getting Started with Amazon Kinesis Agent for Microsoft Windows](#).
3. Create an end-to-end data delivery stream using [Amazon Kinesis Firehose](#). The delivery stream transmits your data from the agent to the destination. The destination includes Amazon Kinesis Analytics, Amazon Redshift, Amazon Elasticsearch service, and Amazon S3. For the Source, choose **Direct PUT or other sources** to create a Kinesis Data Firehose delivery stream.

4. Process the incoming log data using SQL queries in Amazon Kinesis Analytics.
5. Load processed data from Kinesis Analytics to Amazon Elasticsearch Service to index the data.
6. Analyze and visualize the processed data using Visualization tools, such as Kibana and AWS QuickInsight Services.

References

- [View and Export syslog messages](#)
- [Citrix Networking for Hybrid Multi Cloud](#)
- [Writing to AWK Kinesis Data Streams using Kinesis Agent](#)

NetScaler cloud native solution for microservices based on Kubernetes

August 2, 2024

As companies transform to innovate faster and get closer to customers, they are rearchitecting their internal process and breaking down boundaries within their organization. They are removing silos to pull together the right skill sets in the same team. One of the goals is to create and deliver software applications with speed, agility, and efficiency. In this regard, modern application architectures based on microservices are being adopted by a growing number of enterprises.

Using a microservices architecture, you can create applications as sets of loosely coupled services which can be deployed, updated, and scaled independently.

Cloud native is an approach that relies on the microservices architecture for building and deploying applications with the following key attributes:

- Deploys applications as loosely coupled microservices or containers
- Involves a very high degree of automation
- Implements agile DevOps processes and continuous delivery workflows
- Centers around APIs for interaction and collaboration

How does Kubernetes help in the cloud native journey?

To provide the desired levels of agility and stability, cloud native applications require high levels of infrastructure automation, security, networking, and monitoring. You need a container orchestration system that can efficiently manage containers at a large scale. [Kubernetes](#) has emerged as the most popular platform for container deployment and orchestration. Kubernetes abstracts the complex task of running, deploying, and managing containers from developers and operators and automatically

schedules containers among a cluster of nodes. Kubernetes and the cloud native computing foundation (CNCF) ecosystem helps you to build a platform for cloud native solutions.

Some of the key benefits of using Kubernetes:

- Simplifies application deployment be it on-premises, hybrid, or public cloud infrastructure
- Accelerates application development and deployment
- Increases agility, flexibility, and scalability of applications

What is NetScaler cloud native solution?

To maximize the benefits of using Kubernetes in production, you need to integrate Kubernetes with several tools, vendor-sourced, and open-source components. Ensuring production grade reliability and security for their cloud native application is a challenge faced by many organizations. NetScaler offers a NetScaler cloud native solution to address the challenges in a Kubernetes production environment.


NetScaler cloud native solution leverages the advanced traffic management, observability, and comprehensive security features of NetScaler to ensure enterprise grade reliability and security. It can provide complete visibility to application traffic in your Kubernetes environment, render immediate feedback, and help gain meaningful insights about the application performance.

The following table lists the key requirements of different stakeholders while implementing an Ingress solution.

Stakeholders	Job function	Needs
Platform administrators	Ensure availability of Kubernetes clusters	Simpler ways to manage applications deployed across multiple clusters, operation, and platform life cycle management
DevOps	Accelerate the deployment of applications to production	Integration with CI/CD pipeline, support for deployment techniques like Canary and blue-green for faster deployment
Developers	Develop and test microservices	Ways to bring traffic into the Kubernetes cluster, tracing and debugging, rate limiting for applications, and authentication for applications

Stakeholders	Job function	Needs
SREs	Ensure availability of applications to meet service level agreements	Advanced telemetry for applications and infrastructure
SecOps	Ensure security compliance	Secure Ingress traffic, API protection, service mesh for secure communication between microservices inside the Kubernetes cluster

The following diagram explains the NetScaler cloud native solution and how it addresses the various challenges faced by stakeholders in their cloud native journey.

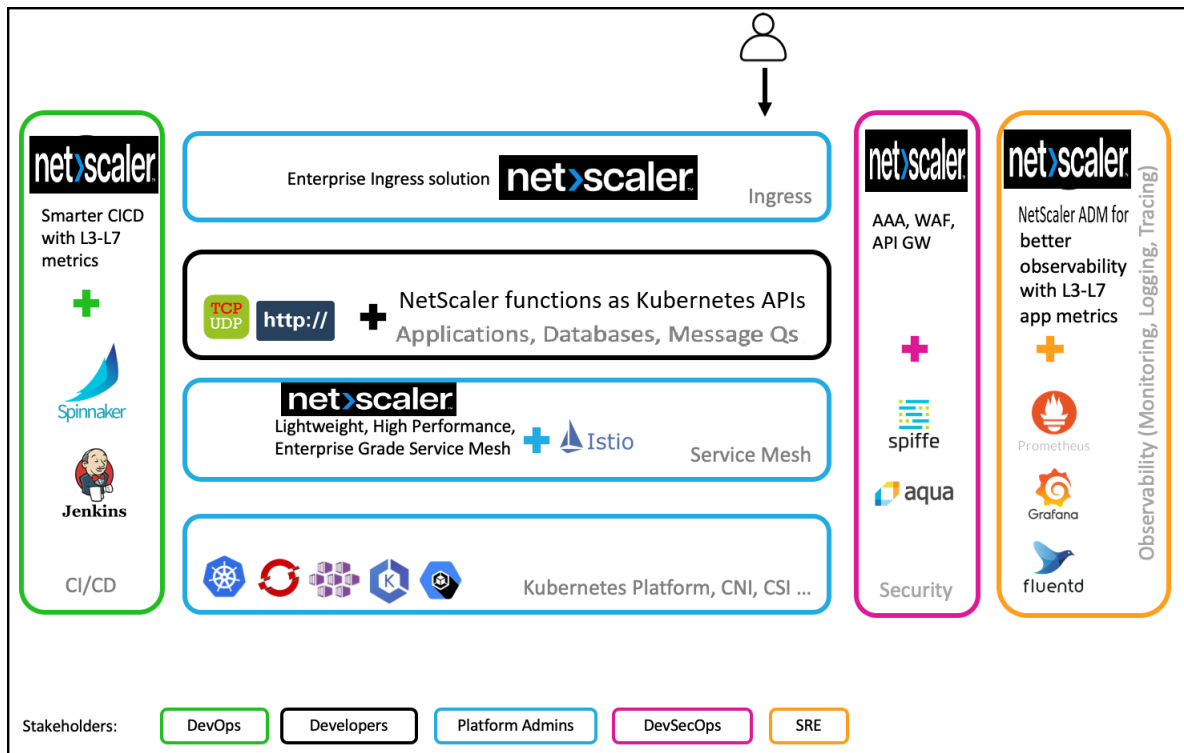

NetScaler cloud native solution provides the following key benefits:

- Provides an advanced Kubernetes Ingress solution that caters to the needs of developers, SREs, devOps, and network or cluster administrators.
- Eliminates the need to rewrite legacy applications based on TCP or UDP traffic while moving them into a Kubernetes environment.
- Secures applications with NetScaler policies exposed as Kubernetes APIs.
- Helps to deploy high performing microservices for North-South traffic and East-West traffic.

- Provides an all-in-one view of all microservices using NetScaler Console service graph.
- Enables faster troubleshooting of microservices across different kinds of traffic including TCP, UDP, HTTP, HTTPS, and SSL.
- Secures APIs.
- Automates CI/CD pipeline for Canary deployments.
- Provides out of the box integrations with CNCF open-source tools.

For more information on the various cloud native solutions offered by NetScaler, see the following links:

- [Kubernetes Ingress solution](#)
- [Service mesh](#)
- [Solutions for observability](#)
- [API gateway for Kubernetes](#)

Components of NetScaler cloud native solution

The following table explains the major components of NetScaler cloud native solution:

Component	Description
NetScaler Ingress Controller	This container is an implementation of the Kubernetes Ingress Controller to manage and route traffic into your Kubernetes cluster using NetScaler ADCs (NetScaler CPX, BLX, VPX, or MPX). Using NetScaler Ingress Controller, you can configure NetScaler CPX, BLX, VPX, or MPX according to the Ingress rules and integrate your NetScaler ADCs with the Kubernetes environment.
NetScaler Observability Exporter	NetScaler Observability Exporter is a container which collects metrics and transactions from NetScaler ADCs and transforms them to suitable formats (such as JSON, AVRO) for supported endpoints. You can export the data collected by NetScaler Observability Exporter to the desired endpoint. By analyzing the data exported to the endpoint, you can get valuable insights at a microservices level for applications proxied by NetScaler ADCs.

Component	Description
NetScaler xDS adapter	NetScaler xDS adapter is a container for integrating NetScaler with service mesh control plane implementations based on xDS APIs (Istio, Consul, and so on). It communicates with the service mesh control plane and listens for updates by acting as a gRPC client to the control plane API server. Based on the updates from the control plane, the NetScaler xDS-Adaptor generates the equivalent NetScaler configuration.
NetScaler CPX	NetScaler CPX is a container-based application delivery controller that can be provisioned on a Docker host. NetScaler CPX enables customers to leverage Docker engine capabilities and use NetScaler load balancing and traffic management features for container-based applications. You can deploy one or more NetScaler CPX instances as standalone instances on a Docker host.

Kubernetes Ingress solution


August 2, 2024

This topic provides an overview of the Kubernetes Ingress solution provided by NetScaler and explains the benefits.

What is Kubernetes Ingress?

When you are running an application inside a Kubernetes cluster, you need to provide a way for external users to access the applications from outside the Kubernetes cluster. Kubernetes provides an object called Ingress that provides the most effective way to expose multiple services using a stable IP address. A Kubernetes ingress object is always associated with one or more services and acts as a single-entry point for external users to access services running inside the cluster.

The following diagram explains how Kubernetes Ingress works.

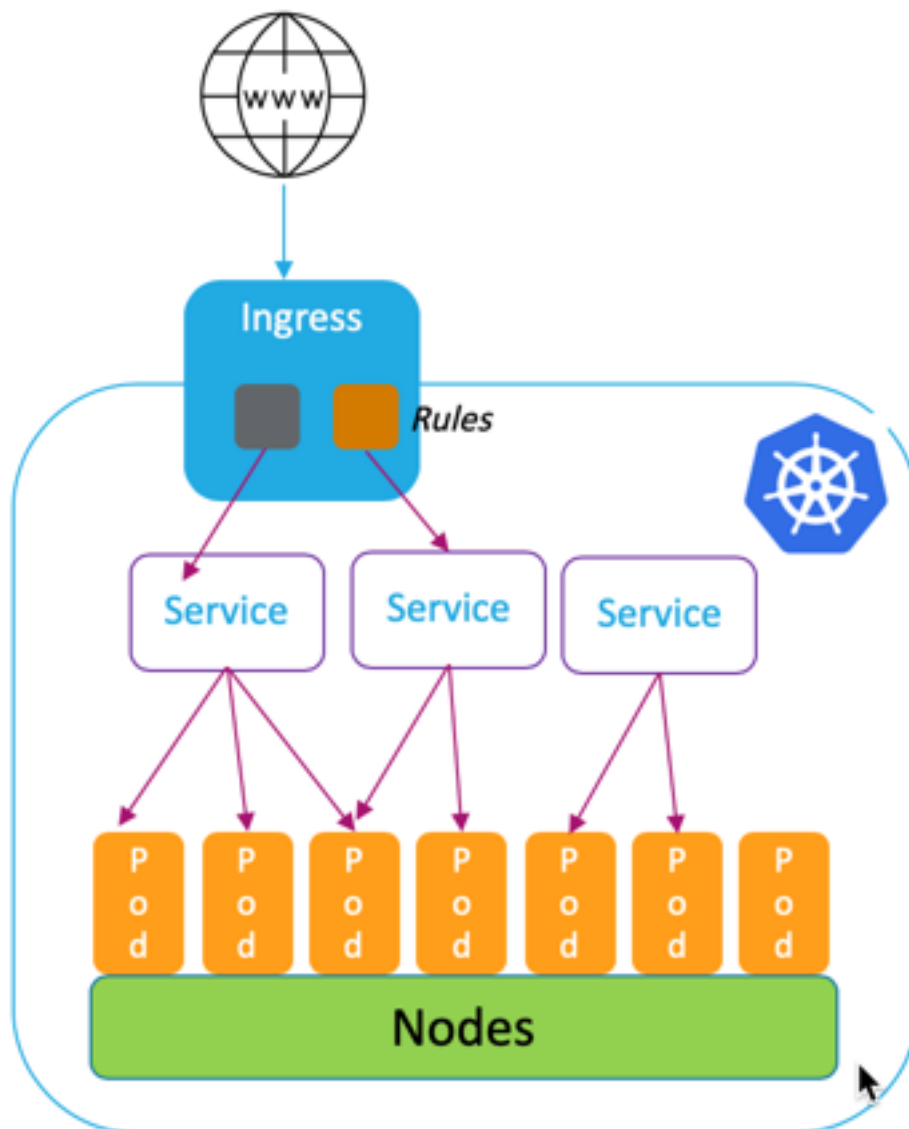

Kubernetes Ingress implementation consists of the following components:

- **Ingress resource.** An Ingress resource allows you to define rules for accessing the applications from outside of the cluster.
- **Ingress controller.** An Ingress controller is an application deployed inside the cluster that interprets rules defined in the Ingress. Ingress controller converts the Ingress rules into configuration instructions for a load balancing application integrated with the cluster. The load balancer can be a software application running inside your Kubernetes cluster or a hardware appliance running outside the cluster.

- **Ingress device.** An Ingress device is a load balancing application like NetScaler CPX, VPX, or MPX which performs load balancing according to the configuration instructions provided by the Ingress controller.

What is the Kubernetes Ingress solution from NetScaler?

In this solution, NetScaler provides an implementation of Kubernetes Ingress controller to manage and route traffic into your Kubernetes cluster using NetScaler ADCs (NetScaler CPX, VPX, or MPX). The [NetScaler Ingress Controller](#) integrates NetScaler ADCs with your Kubernetes environment and configures NetScaler CPX, VPX, or MPX according to the Ingress rules.

Standard Kubernetes Ingress solutions provide load balancing only at layer 7 (HTTP or HTTPS traffic). Some times, you need to expose many legacy applications which rely on TCP or UDP or applications and need a way to load balance those applications. NetScaler Ingress Controller solution provides TCP, TCP-SSL, and UDP traffic support apart from the standard HTTP or HTTPS Ingress. Also, it works seamlessly across multiple clouds or on-premises data centers.

NetScaler provides enterprise-grade traffic management policies like rewrite and responder policies for efficiently load balancing traffic at layer 7. However, Kubernetes Ingress lacks such enterprise-grade traffic management policies. With the Kubernetes Ingress solution from NetScaler, you can apply rewrite and responder policies for application traffic in a Kubernetes environment using CRDs provided by NetScaler.

The Kubernetes Ingress solution from NetScaler also supports automated canary deployment for your CI/CD application pipeline. In this solution, NetScaler is integrated with the Spinnaker platform and acts as a source for providing accurate metrics for analyzing Canary deployment using Kayenta. After analyzing the metrics, Kayenta generates an aggregate score for the canary and decides to promote or fail the Canary version. You can also regulate traffic distribution to the Canary version using the NetScaler policy infrastructure.

The following table summarizes the benefits offered by the Ingress solution from NetScaler over Kubernetes Ingress.

Features	Kubernetes Ingress	Ingress Solution from NetScaler
HTTP and HTTPs support	Yes	Yes
URL routing	Yes	Yes
TLS	Yes	Yes
Load balancing	Yes	Yes
TCP, TCP-SSL	No	Yes

Features	Kubernetes Ingress	Ingress Solution from NetScaler
UDP	No	Yes
HTTP/2	Yes	Yes
Automated canary deployment support with CI/CD tools	No	Yes
Support for applying NetScaler rewrite and responder policies	No	Yes
Authentication (Open Authorization (OAuth), mutual TLS (mTLS))	No	Yes
Support for applying NetScaler Rate Limiting policies	No	Yes


Deployment options for Kubernetes Ingress solution

Kubernetes Ingress solution from NetScaler provides you flexible architecture depending on how you want to manage your NetScaler ADCs and Kubernetes environment.

Unified Ingress (single-tier)

In a unified Ingress (single-tier) architecture, a NetScaler MPX or VPX device deployed outside the Kubernetes cluster is integrated with the Kubernetes environment using the NetScaler Ingress Controller. The NetScaler Ingress Controller is deployed as a pod in the Kubernetes cluster and automates the configuration of NetScaler ADCs based on changes to the microservices or the Ingress resources. The NetScaler device performs functions like load balancing, TLS termination, and HTTP or TCP protocol optimizations on inbound traffic and then routes the traffic to the correct microservice within a Kubernetes cluster. This architecture suits best in scenarios where the same team manages the Kubernetes platform and other networking infrastructure including application delivery controllers (ADCs).

The following diagram shows a deployment using the unified Ingress architecture.

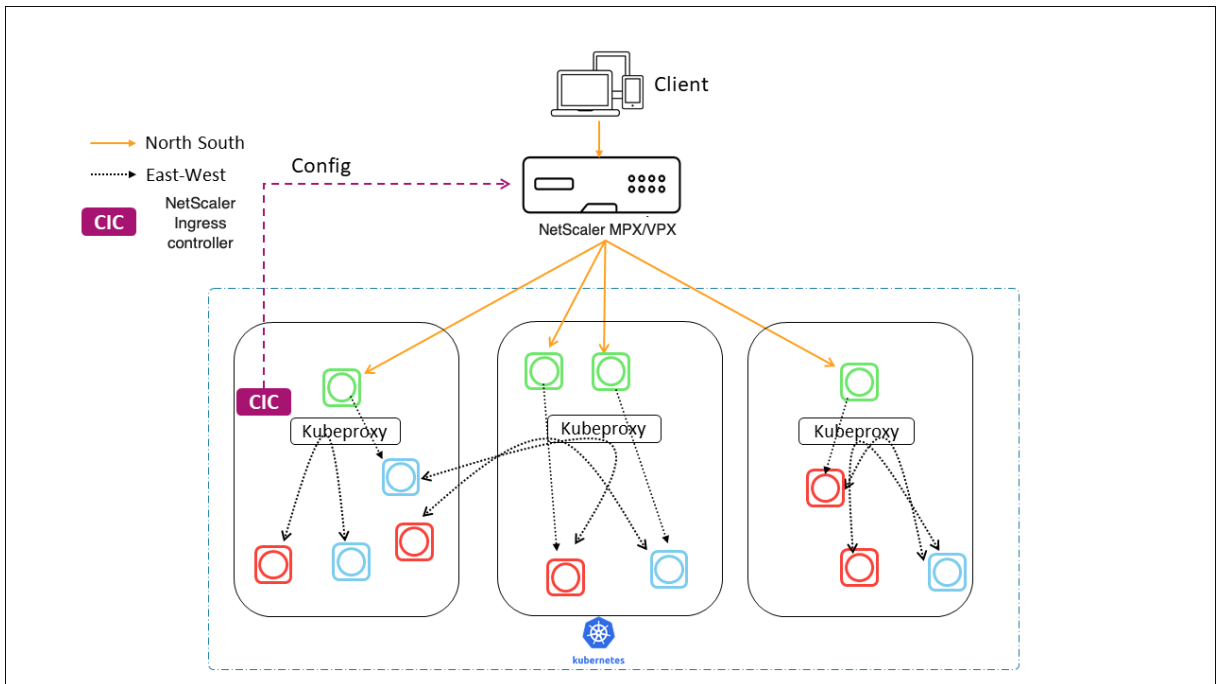

A unified Ingress solution provides the following key benefits:

- Provides a way to extend the capabilities of your existing NetScaler infrastructure to the Kubernetes environment
- Enables you to apply traffic management policies for inbound traffic
- Provides a simplified architecture suitable for network-savvy DevOps teams
- Supports multitenancy


Dual-tier Ingress

In a dual-tier architecture, NetScaler (MPX or VPX) deployed outside the Kubernetes cluster acts at tier 1 and load balances North-South traffic to NetScaler CPXs running inside the cluster. NetScaler CPX acts at tier 2 and performs load balancing for microservices inside the Kubernetes cluster.

In scenarios where separate teams manage the Kubernetes platform and the network infrastructure, the dual-tier architecture is most suitable.

Networking teams use tier 1 NetScaler for use cases such as GSLB, TLS termination on the hardware platform, and TCP load balancing. Kubernetes platform teams can use tier 2 NetScaler (CPX) for Layer 7 (HTTP/HTTPS) load balancing, mutual TLS, and observability or monitoring of microservices. The tier 2 NetScaler (CPX) can have a different software release version than the tier 1 NetScaler to accommodate newly available capabilities.

The following diagram shows a deployment with dual-tier architecture.

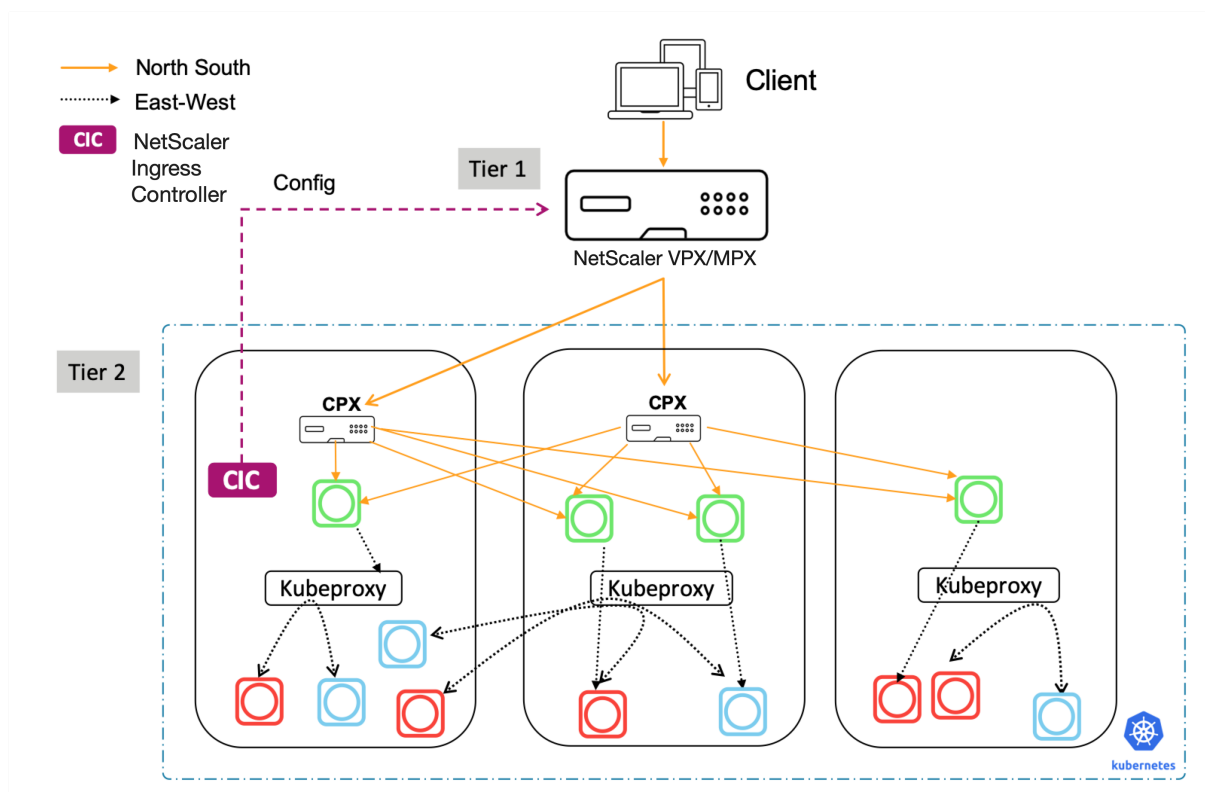

A dual-tier Ingress provides the following key benefits:

- Ensures high velocity of application development for developers or platform teams
- Enables applying developer driven traffic management policies for microservices inside the Kubernetes cluster
- Enables cloud scale and multitenancy

For more information, see the [NetScaler Ingress Controller documentation](#).

Getting started

To get started with the Kubernetes Ingress solution from NetScaler, you can try out the following examples:

- [Load balance Ingress traffic with NetScaler CPX in Minikube](#)
- [Load balance North-South Ingress traffic using NetScaler CPX proxy](#)
- [Load balance East-West microservice traffic using NetScaler CPX proxy](#)

Service mesh

May 2, 2023


A service mesh is an infrastructure layer for handling service-to-service communication for cloud-native applications using APIs. It provides a way to connect, secure, and monitor your microservices. NetScaler provides two solutions to meet your service mesh requirements:

- Service mesh lite
- Service mesh (NetScaler integration with Istio)

Service mesh lite

A full-fledged service-mesh implementation is complex and requires a steep learning curve. If you are looking for a simplified implementation of a service mesh with similar benefits, NetScaler offers a solution called service mesh lite with lesser complexity. In this solution, a NetScaler CPX runs as a centralized load balancer in the Kubernetes cluster and load balances East-West traffic among microservices. NetScaler CPX enforces policies for inbound and inter-container traffic.

The following diagram shows a service mesh lite architecture.

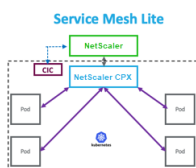

For information, see the [service mesh lite documentation](#).

Service mesh (NetScaler integration with Istio)


NetScaler provides a service mesh solution by integrating NetScaler with Istio. Istio, an open source and platform-independent service mesh, is one of the most popular service mesh implementations. By integrating NetScaler with Istio, you can take advantage of the NetScaler features to secure and optimize the traffic for applications in the service mesh.

NetScaler can be integrated with Istio in the following ways:

- NetScaler MPX, VPX, or CPX as an Istio Ingress Gateway to the service mesh to expose traffic to the Kubernetes cluster.
- NetScaler CPX as a sidecar proxy with application containers in the service mesh to control communication between applications.

You can use either integration independently or you can combine both ways to have a unified data plane solution.

The following diagram shows a service mesh architecture.

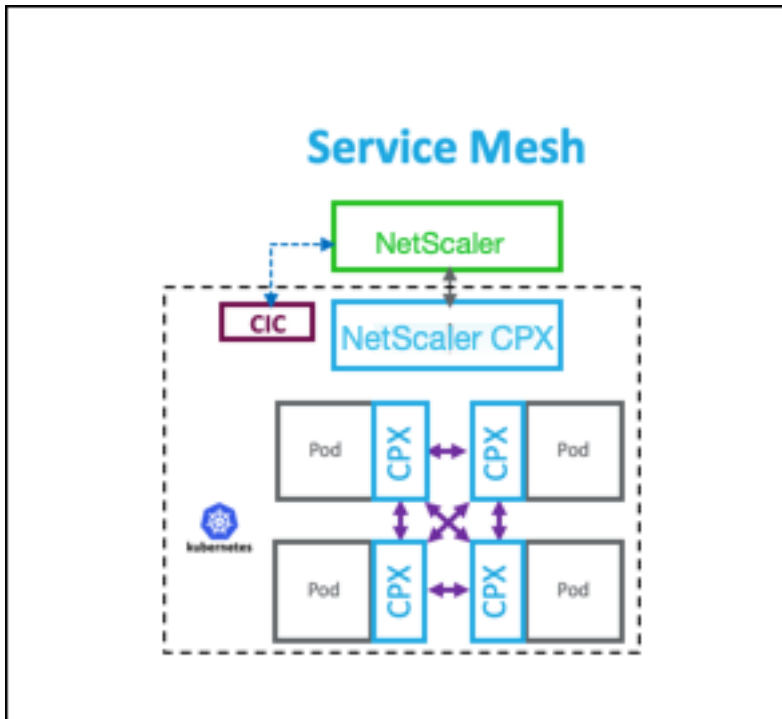

Service mesh is ideal for highly secure applications and also offers the following benefits.

- Offers fine-grained (modularized) traffic management per container
- Ensures richer observability, analytics, and security (Mutual TLS) due to sidecar implementation
- Enables automated canary deployment for each container with embedded NetScaler CPX
- Supports cloud portability
- Allows offloading of some of the functions performed by applications to the sidecar
- Provides lower sidecar latency
- Provides integrations with open-source tools
- Offers scalability

For more information, see the [NetScaler integration with Istio documentation](#).

Solutions for observability

May 2, 2023

In a microservices based architecture, visibility into service to service communications is critical to build an efficient and resilient architecture. Traditional ways for logging and monitoring is not capa-

ble of addressing the challenges of a microservices architecture. Observability solutions from Citrix provide you the ability to see what is happening when your services interact with each other and get meaningful insights about your system.

NetScaler provides the following solutions to address the observability needs of your microservices architecture:

- NetScaler Console service graph and analytics
- NetScaler Observability Exporter

NetScaler Console service graph and analytics

[NetScaler Application Delivery Management \(ADM\)](#) is a centralized management solution that provides enterprise-wide visibility and automation for management jobs that need to be run across multiple instances.

In a microservice architecture, troubleshooting is challenging because a single end-user request may span across multiple microservices.


NetScaler Console service graph and analytics provides visibility into interactions between microservices and helps to identify and fix issues based on various metrics such as latency and HTTP errors.

NetScaler Console also provides advanced analytics based on metrics and transaction logs collected from NetScaler.

NetScaler Console solution provides the following benefits:

- Provides a single pane of glass for applications across containers, on-premises, or cloud
- Provides better observability and faster troubleshooting for microservices
- Supports Canary deployment

The following diagram shows a sample service graph for an application which contains multiple microservices.

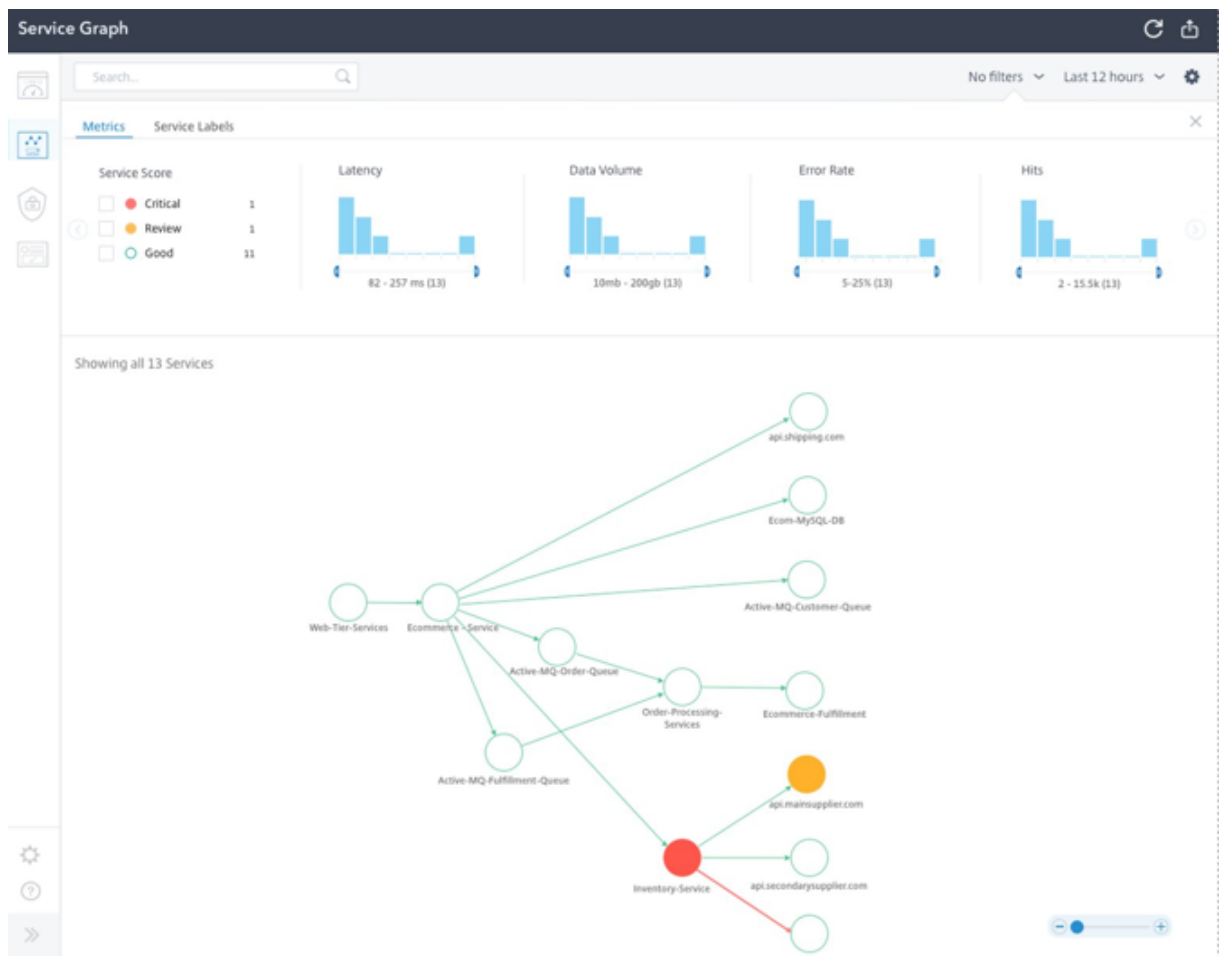

For more information on how to set up NetScaler Console service graph and analytics, see the [Service graph](#) documentation.

NetScaler Observability Exporter

NetScaler Observability Exporter is a container which collects metrics and transactions from NetScalers and transforms them to suitable formats (such as JSON, AVRO) for supported endpoints. You can export the data collected by NetScaler Observability Exporter to the desired endpoint. By analyzing the data, you can get valuable insights at a microservices level for applications proxied by NetScalers.

Distributed tracing support

Distributed tracers allow you to visualize the data flow between your microservices and helps to identify the bottlenecks in your microservices architecture. [OpenTracing](#) is a specification and standard set of APIs for designing and implementing distributed tracing.

NetScaler Observability Exporter implements distributed tracing for NetScaler and currently supports Zipkin as the distributed tracer.

You can enhance the trace analysis by using [Elasticsearch](#) and [Kibana](#) with Zipkin. Elasticsearch provides long-term retention of the trace data. Kibana allows you to get much deeper insight into the data by providing a tool to explore, and visualize log messages.

Transaction collection and streaming support

NetScaler Observability Exporter supports collecting transactions and streaming them to endpoints. Currently, NetScaler Observability Exporter supports Elasticsearch and Kafka as transaction endpoints.

For more information, see the [NetScaler Observability Exporter documentation](#).

Enable analytics using annotations in the NetScaler Ingress Controller YAML file

You can enable analytics using the analytics profile which is defined as a smart annotation in Ingress or service of type LoadBalancer configuration. You can define the specific parameters you need to monitor by specifying them in the Ingress or service configuration of the application. For more information about enabling analytics using annotations, see [Analytics using annotations](#).

API gateway for Kubernetes


May 2, 2023

An API gateway acts as the single entry point for your APIs and ensures secure and reliable access to multiple APIs and microservices in your system.

NetScaler provides an enterprise grade API gateway for North-South API traffic into the Kubernetes cluster. The

API gateway integrates with Kubernetes through the NetScaler Ingress Controller and the NetScaler (NetScaler MPX, VPX, or CPX) deployed as the Ingress Gateway for on-premises or cloud deployments.

The following diagram shows a dual-tier topology for the API gateway.

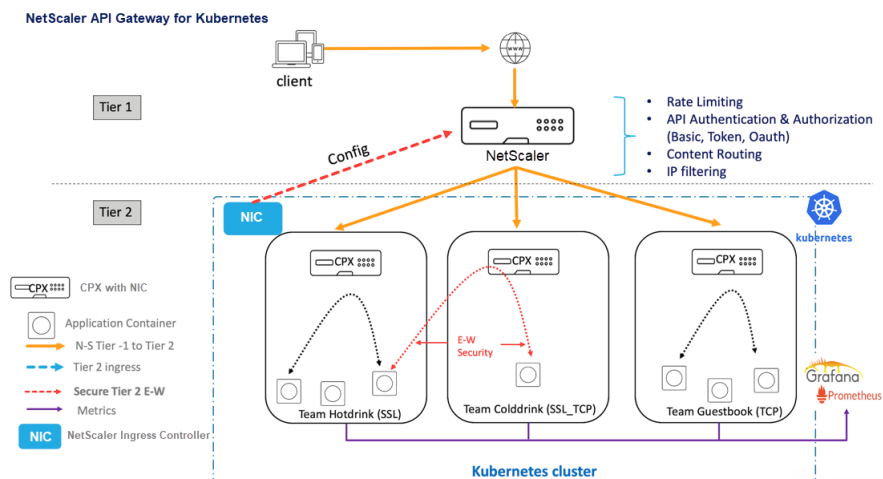

Using the API gateway offered by Citrix, you can perform the following functionalities:

- Enforce authentication policies
- Rate limit access to services
- Advanced content routing
- Flexible and comprehensive transformation of HTTP transactions using the rewrite and responder policies
- Enforce web application firewall policies

How does the API gateway work

The API gateway is built on top of the NetScaler Ingress Gateway and uses Kubernetes API extensions such as custom resource definitions (CRDs). Using CRDs, you can automatically configure the NetScaler and API gateway in the same instance.

NetScaler provides the following CRDs for the API gateway:

- [Auth CRD](#)
- [Rate limit CRD](#)
- [Content routing CRD](#)
- [Rewrite and responder CRD](#)
- [WAF CRD](#)

Key benefits of using the API gateway

Following are the key benefits of the API gateway offered by Citrix:

- Uses the advanced traffic management and comprehensive security features of NetScaler.
- Optimizes your deployments by consolidating multiple network functions into a single component of the NetScaler Ingress Gateway.

- Reduces the operational complexity and cost involved in deploying multiple components.
- Ensures better performance for your application traffic by reducing multiple hops of TCP or TLS decryption while using separate components.
- Simplifies deploy and integrate in your Kubernetes environments either by directly using YAMLS or helm charts.

Deploying the API gateway

For more information on how to configure the API gateway features using CRDs, see the NetScaler Ingress Controller documentation:

- [Authentication](#)
- [Rate limiting](#)
- [Advanced content routing](#)
- [Rewrite and responder policies](#)
- [Web application firewall policies](#)

Use NetScaler Console to troubleshoot NetScaler cloud native networking

May 2, 2023

Overview

This document provides information about how you can use NetScaler Console to deliver and monitor Kubernetes microservice applications. You also dive into using the CLI, service graphs, and tracing to allow the platform and SRE teams to troubleshoot.

Application performance and latency overview

TLS encryption

TLS is an encryption protocol designed to secure Internet communications. A TLS handshake is the process that begins a communication session that uses TLS encryption. During a TLS handshake, the two communicating sides exchange messages to acknowledge each other, verify each other, establish the encryption algorithms they use, and agree on session keys. TLS handshakes are a foundational part of how HTTPS works.

TLS vs SSL handshakes

SSL (Secure Sockets Layer), was the original encryption protocol developed for HTTP. TLS (Transport Layer Security) replaced SSL some time ago. SSL handshakes are now called TLS handshakes, although the “SSL” name is still in wide use.

When does a TLS handshake occur?

A TLS handshake takes place whenever a user navigates to a website over HTTPS and the browser first begins to query the website’s origin server. A TLS handshake also happens whenever any other communications use HTTPS, including API calls and DNS over HTTPS queries.

TLS handshakes occur after a TCP connection has been opened via a TCP handshake.

What happens during a TLS handshake?

- During a TLS handshake, the client and server together do the following:
 - Specify which version of TLS (TLS 1.0, 1.2, 1.3, and so forth) they use.
 - Decide on which cipher suites (see the following section) they use.
 - Authenticate the identity of the server via the server’s public key and the SSL certificate authority’s digital signature.
 - Generate session keys to use symmetric encryption after the handshake is complete.

What are the steps of a TLS handshake?

- TLS handshakes are a series of datagrams, or messages, exchanged by a client and a server. A TLS handshake involves multiple steps, as the client and server exchange the information necessary for completing the handshake and making further conversation possible.

The exact steps within a TLS handshake vary depending upon the kind of key exchange algorithm used and the cipher suites supported by both sides. The RSA key exchange algorithm is used most often. It goes as follows:

1. The ‘client hello’ message: The client initiates the handshake by sending a “hello” message to the server. The message includes which TLS version the client supports, the cipher suites supported, and a string of random bytes known as the “client random.”
2. The ‘server hello’ message: In reply to the client hello message, the server sends a message containing the server’s SSL certificate, the server’s chosen cipher suite, and the “server random,” another random string of bytes that’s generated by the server.
3. Authentication: The client verifies the server’s SSL certificate with the certificate authority that issued it. This confirms that the server is who it says it is, and that the client is interacting with the actual owner of the domain.
4. The premaster secret: The client sends one more random string of bytes, the “premaster secret.” The premaster secret is encrypted with the public key and can only be decrypted with the private key by the server. (The client gets the public key from the server’s SSL certificate.)

5. Private key used: The server decrypts the premaster secret.
6. Session keys created: Both client and server generate session keys from the client random, the server random, and the premaster secret. They should arrive at the same results.
7. Client is ready: The client sends a “finished” message that is encrypted with a session key.
8. Server is ready: The server sends a “finished” message encrypted with a session key.
9. Secure symmetric encryption achieved: The handshake is completed, and communication continues using the session keys.

All TLS handshakes use asymmetric encryption (the public and private key), but not all use the private key in the process of generating session keys. For instance, an ephemeral Diffie-Hellman handshake proceeds as follows:

1. Client hello: The client sends a client hello message with the protocol version, the client random, and a list of cipher suites.
2. Server hello: The server replies with its SSL certificate, its selected cipher suite, and the server random. In contrast to the RSA handshake described in the previous section, in this message the server also includes the following (step 3).
3. Server’s digital signature: The server uses its private key to encrypt the client random, the server random, and its DH parameter*. This encrypted data functions as the server’s digital signature, establishing that the server has the private key that matches with the public key from the SSL certificate.
4. Digital signature confirmed: The client decrypts the server’s digital signature with the public key, verifying that the server controls the private key and is who it says it is. Client DH parameter: The client sends its DH parameter to the server.
5. Client and server calculate the premaster secret: Instead of the client generating the premaster secret and sending it to the server, as in an RSA handshake, the client and the server use the DH parameters they exchanged to calculate a matching premaster secret separately.
6. Session keys created: Now, the client and server calculate session keys from the premaster secret, client random, and server random, just like in an RSA handshake.
 - Client is ready:
Same as an RSA handshake
 - Server is ready
 - Secure symmetric encryption achieved

*DH parameter: DH stands for Diffie-Hellman. The Diffie-Hellman algorithm uses exponential calculations to arrive at the same premaster secret. The server and client each provide a parameter for the calculation, and when combined they result in a different calculation on each side, with results that are equal.

To read more about the contrast between ephemeral Diffie-Hellman handshakes and other kinds of handshakes, and how they achieve forward secrecy, see this [TLS Protocol Documentation](#).

What is a cipher suite?

- A cipher suite is a set of encryption algorithms for use in establishing a secure communications connection. (An encryption algorithm is a set of mathematical operations performed on data for making the data appear random.) There are various cipher suites in wide use, and an essential part of the TLS handshake is agreeing upon which cipher suite is used for that handshake.

To get started, see Reference: [TLS Protocol Documentation](#).

NetScaler Application Delivery Management SSL dashboard

NetScaler Application Delivery Management (ADM) now streamlines every aspect of certificate management for you. Through a single console, you can establish automated policies to ensure the right issuer, key strength, and correct algorithms, while keeping close tabs on certificates that are unused or soon to expire. To begin using NetScaler Console SSL dashboard and its functionalities, you must understand what an SSL certificate is and how you can use NetScaler Console to track your SSL certificates.

A Secure Socket Layer (SSL) certificate, which is a part of any SSL transaction, is a digital data form (X509) that identifies a company (domain) or an individual. The certificate has a public key component that is visible to any client that wants to initiate a secure transaction with the server. The corresponding private key, which resides securely on the Citrix Application Delivery Controller (ADC) appliance, is used to complete asymmetric key (or public key) encryption and decryption.


You can obtain an SSL certificate and key in either of the following ways:

- From an authorized certificate authority (CA)
- By generating a new SSL certificate and key on the NetScaler appliance

NetScaler Console provides a centralized view of SSL certificates installed across all managed NetScaler instances. On the SSL Dashboard, you can view graphs that help you track certificate issuers, key strengths, signature algorithms, expired or unused certificates and so on. You can also see the distribution of SSL protocols that are running on your virtual servers and the keys that are enabled on them.

You can also set up notifications to inform you when certificates are about to expire and include information about which NetScaler instances use those certificates.

You can link a NetScaler instance's certificates to a CA certificate. However, make sure that the certificates that you link to the same CA certificate have the same source and the same issuer. After you have linked the certificates to a CA certificate, you can unlink them.

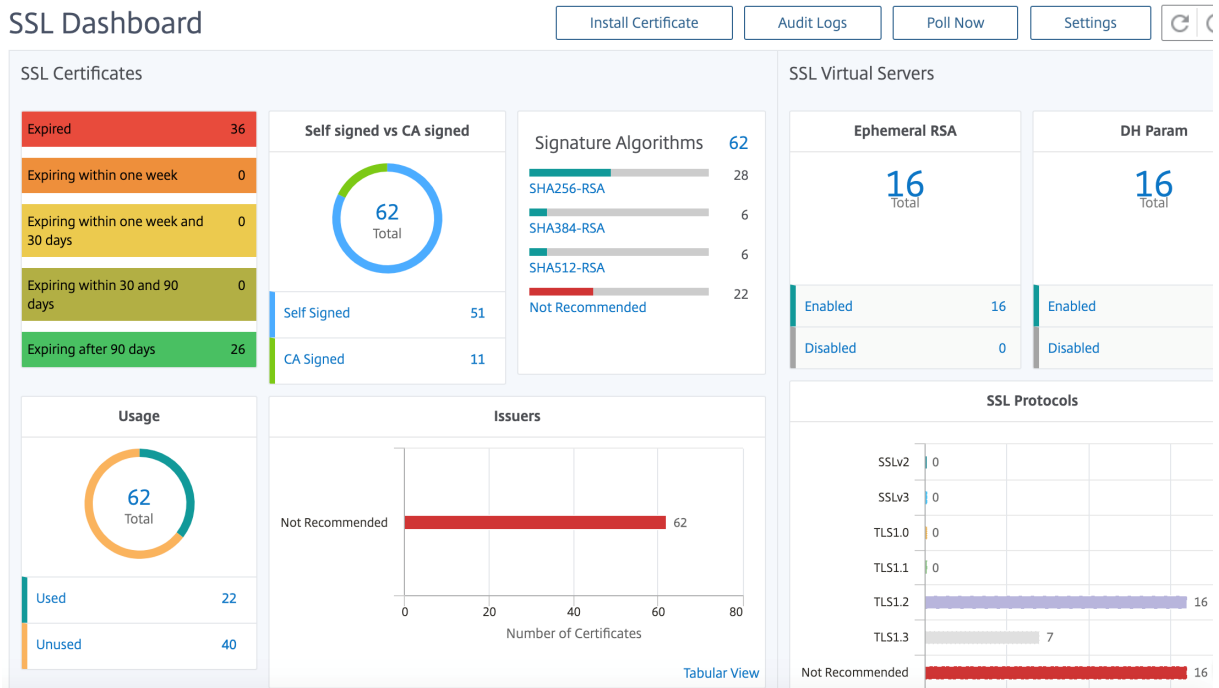

To get started, see the [SSL Dashboard Documentation](#).

Third party integrations


Application latency is measured in milliseconds, and it can indicate one of two things depending on the metric used. The more common way of measuring latency is called “round-trip time”(or RTT). RTT calculates the time it takes for a data packet to travel from one point to another on the network, and for a response to be sent back to the source. The other measurement is called “time to first byte”(or TTFB), which records the time it takes from the moment a packet departs a point on the network to the moment it arrives at its destination. RTT is more commonly used to measure latency because it can be run from a single point on the network and does not require data collection software to be installed on the destination point (as TTFB does).

By monitoring your Application bandwidth usage and performance in real time, the ADM service makes it easy to identify issues and to preemptively address potential problems before they manifest and affect users on your network. This flow-based solution tracks usage by interface, application, and conversation, giving you detailed information about activity across your network.

Using Splunk tools

Infrastructure and application performance are interdependent. To see the full picture, SignalFx provides seamless correlation between cloud infrastructure and the microservices running on top of it. If your application acts out because of memory leakage, a noisy neighbor container or any other

infrastructure-related issue, SignalFx lets you know. To complete the picture, in-context access to Splunk logs and events enable deeper troubleshooting and root cause analysis.

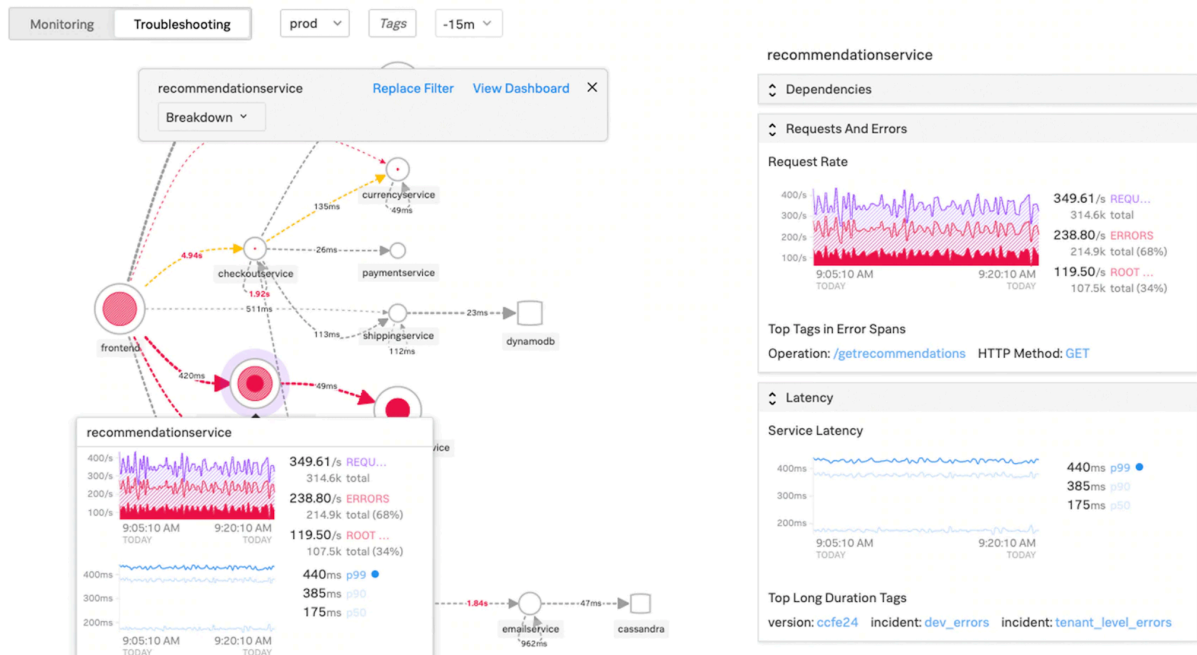

For more information on SignalFx Microservices APM and troubleshooting with Splunk, view [Splunk for DevOps](#) information.

MongoDB support

MongoDB stores data in flexible, JSON-like documents. Meaning fields can vary from document to document and data structure can be changed over time.

The document model maps to the objects in your application code, making data easy to work with.

On-demand queries, indexing, and real time aggregation provide powerful ways to access and analyze your data.

MongoDB is a distributed database at its core, so high availability, horizontal scaling, and geographic distribution are built in and easy to use.

MongoDB is designed to meet the demands of modern apps with a technology foundation that enables you through:

- The document data model –presenting you the best way to work with data.
- A distributed systems design –allowing you to intelligently put data where you want it.
- A unified experience that gives you the freedom to run anywhere –allowing you to future-proof your work and eliminate vendor lock-in.

With these capabilities, you can build an Intelligent Operational Data Platform, underpinned by MongoDB. For more information, see [MongoDB Documentation](#).

How to load balance Ingress traffic to TCP or UDP based application

In a Kubernetes environment, an Ingress is an object that allows access to the Kubernetes services from outside the Kubernetes cluster. Standard Kubernetes Ingress resources assume that all the traffic is HTTP-based and does not cater to non-HTTP based protocols such as, TCP, TCP-SSL, and UDP. Hence, critical applications based on L7 protocols such as DNS, FTP, LDAP, cannot be exposed using standard Kubernetes Ingress.

The standard Kubernetes solution is to create a service of type LoadBalancer. See [Service Type Load-Balancer in NetScaler](#) for more information.

The second option is to annotate the ingress object. NetScaler Ingress Controller enables you to load balance TCP or UDP based Ingress traffic. It provides the following [annotations](#) that you can use in your Kubernetes Ingress resource definition to load balance the TCP or UDP based Ingress traffic:

- `ingress.citrix.com/insecure-service-type`: The annotation enables L4 load balancing with TCP, UDP, or ANY as protocol for NetScaler.
- `ingress.citrix.com/insecure-port`: The annotation configures the TCP port. The annotation is helpful when micro service access is required on a non-standard port. By default, port 80 is configured.

For more information, see [How to load balance Ingress traffic to TCP or UDP based application](#).

Monitor and improve the performance of your TCP or UDP based applications

Application developers can closely monitor the health of TCP or UDP based applications through rich monitors (such as TCP-ECV, UDP-ECV) in NetScaler. The ECV (extended content validation) monitors help in checking whether the application is returning expected content or not.

Also, the application performance can be improved by using persistence methods such as source IP. You can use these NetScaler features through [Smart Annotations](#) in Kubernetes. The following is one such example:

```
1 apiVersion: extensions/v1beta1
2 kind: Ingress
3 metadata:
4   name: mongodb
5   annotations:
6     ingress.citrix.com/insecure-port: " 80 "
7     ingress.citrix.com/frontend-ip: " 192.168.1.1 "
8     ingress.citrix.com/csverver: ' {
9   "l2conn" : " on " }
```

```
10  '
11      ingress.citrix.com/lbvserver: '{
12  "mongodb-svc" :{
13  "lbmethod" : "SRCIPDESTIPHASH" }
14  }
15  '
16      ingress.citrix.com/monitor: '{
17  "mongodbsvc" :{
18  "type" : "tcp-ecv" }
19  }
20  '
21  Spec:
22      rules:
23      - host: mongodb.beverages.com
24        http:
25          paths:
26          - path: /
27            backend:
28              serviceName: mongodb-svc
29              servicePort: 80
```

NetScaler Application Delivery Management (ADM) Service

NetScaler Console Service provides the following benefits:

- **Agile** –Easy to operate, update, and consume. The service model of NetScaler Console Service is available over the cloud, making it is easy to operate, update, and use the features provided. The frequency of updates, combined with the automated update feature, quickly enhances your NetScaler deployment.
- **Faster time to value** –Quicker business goals achievement. Unlike the traditional on-premises deployment, you can use your NetScaler Console Service with a few clicks. You not only save on installation and configuration time, but also avoid wasting time and resources on potential errors.
- **Multi-Site Management** –Single Pane of Glass for instances across Multi-Site data centers. With the NetScaler Console Service, you can manage and monitor NetScalers that are in various types of deployments. You have one-stop management for NetScalers deployed on-premises and in the cloud.
- **Operational Efficiency** –Optimized and automated way to achieve higher operational productivity. With the NetScaler Console Service, your operational costs are reduced by saving your time, money, and resources on maintaining and upgrading the traditional hardware deployments.

Service graph for Kubernetes applications

Using the service graph for the cloud-native application feature in NetScaler Console, you can:

- Ensure end-to-end application overall performance
- Identify bottlenecks created by the interdependency of different components of your applications
- Gather insights into the dependencies of different components of your applications
- Monitor services within the Kubernetes cluster
- Monitor which service has issues
- Check the factors contributing to performance issues
- View detailed visibility of service HTTP transactions
- Analyze the HTTP, TCP, and SSL metrics

By visualizing these metrics in NetScaler Console, you can analyze the root cause of issues and take necessary troubleshooting actions faster. Service graph displays your applications in various component services. These services running inside the Kubernetes cluster can communicate with various components within and outside the application.

To get started, see [Setting up service graph](#).

Service graph for 3-tier web applications

Using the service graph feature from the application dashboard, you can view:


- Details on how the application is configured (with content switching virtual server and load balancing virtual server)
 - For GSLB applications, you can view data center, ADC instance, CS, and LB virtual servers
- End-to-end transactions from client to service
- The location from where the client is accessing the application
- The data center name where the client requests are processed and the associated data center NetScaler metrics (only for GSLB applications)
- Metrics details for client, service, and virtual servers
- If the errors are from the client or from the service
- The service status such as **Critical**, **Review**, and **Good**. NetScaler Console displays the service status based on service response time and error count.
 - **Critical (red)** - Indicates when average service response time > 200 ms AND error count > 0
 - **Review (orange)** - Indicates when average service response time > 200 ms OR error count > 0
 - **Good (green)** - Indicates no error and average service response time < 200 ms
- The client status such as **Critical**, **Review**, and **Good**. NetScaler Console displays the client status based on client network latency and error count.

- **Critical (red)**- Indicates when average client network latency > 200 ms AND error count > 0
 - **Review (orange)** - Indicates when average client network latency > 200 ms OR error count > 0
 - **Good (green)** - Indicates no error and average client network latency < 200 ms
- The virtual server status such as **Critical**, **Review**, and **Good**. NetScaler Console displays the virtual server status based on the app score.
 - **Critical (red)** - Indicates when app score < 40
 - **Review (orange)** - Indicates when app score is between 40 and 75
 - **Good (green)** - Indicates when app score is > 75

Points to note:

- Only Load Balancing, Content Switching, and GSLB virtual servers are displayed in the service graph.
- If no virtual server is bound to a custom application, the details are not visible in the service graph for the application.
- You can view metrics for clients and services in the service graph only if active transactions occur between virtual servers and web application.
- If no active transactions are available between virtual servers and web application, you can only view details in the service graph based on the configuration data such as load balancing, content switching, GSLB virtual servers, and services.
- Updates in the application configuration might take 10 minutes to reflect in the service graph.

For more information, see [Service graph for applications](#).

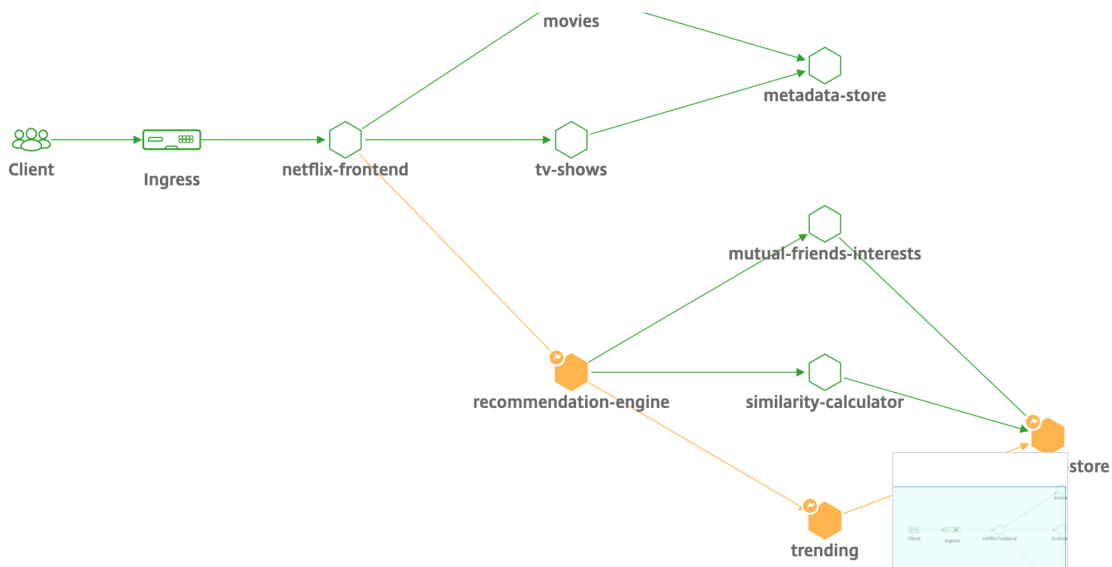

To get started, see [Service Graph Documentation](#).

Troubleshooting for NetScaler teams

Let's discuss some of the most common attributes for troubleshooting the NetScaler platform and how these troubleshooting techniques apply to the Tier-1 deployments for microservices topologies.

The NetScaler has a command line interface (CLI) that shows commands in real-time and is useful for determining runtime configurations, statics, and policy configuration. This is facilitated via the “SHOW” command.

SHOW - perform ADC CLI operations:

```

1 >Show running config (-summary -fullValues)
2
3 Ability to search (grep command)
4 > “sh running config | -i grep vserver ”
5
6 Check the version.
7 >Show license
8 “ sh license”
    
```

Show SSL Statistics

```

1 >Sh ssl
2 System
3 Frontend
4 Backend
5 Encryption
    
```

```

NATSession: Op/s(Tcp[0] Udp[0] Icmp[0] Other[0])
Session: AiO F:0 IUse:0 SEa: SIP:0 C:0 SSL:0 Svr:0 UserID:0 SIPDIP:0 DIP:0 SO:0
SFP: Conn [Svr: 0 CInt 1] U:0
CR: Conn [Svr: 0 CInt 1] Sessions PCB 0 NATPCB 0
L(SIP[0], C[0], SSL[0] Server[0] SIPDIP[0] DIP[0] SO[0])
Main: Problem: 400015, Failed: 20650
VIP(127.0.0.2:53:DOWN:WEIGHTEDPR): Hits(0, 0/sec) Mbps(0.00) Pers(OFF) Err(0) SO(0) LConn_Best [Idx:SubIdx] 1024:1
Pkt(0/sec, 0 bytes) actSvc(0) DefPol(NONE) override[0] newlyUP[0]
Conn: Clt(0, 0/sec, OE[0]) Svr(0) SQ(Total: 0 OnVserver: 0 OnServices: 0)
slimit_SO: (Sothreshold: 0 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0 TotActiveConn: 0] Available: 0
VIP(127.0.0.2:53:DOWN:WEIGHTEDPR): Hits(0, 0/sec) Mbps(0.00) Pers(OFF) Err(0) SO(0) LConn_Best [Idx:SubIdx] 1024:1
Pkt(0/sec, 0 bytes) actSvc(0) DefPol(NONE) override[0] newlyUP[0]
Conn: Clt(0, 0/sec, OE[0]) Svr(0) SQ(Total: 0 OnVserver: 0 OnServices: 0)
slimit_SO: (Sothreshold: 0 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0 TotActiveConn: 0] Available: 0
VIP(127.0.0.2:53:DOWN:LEASTCONN): Hits(0, 0/sec) Mbps(0.00) Pers(OFF) Err(0) SO(101) LConn_Best [Idx:SubIdx] 1024:1
Pkt(0/sec, 0 bytes) actSvc(0) DefPol(NONE) override[0] newlyUP[0]
Conn: Clt(0, 0/sec, OE[0]) Svr(0) SQ(Total: 0 OnVserver: 0 OnServices: 0)
slimit_SO: (Sothreshold: 0 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0 TotActiveConn: 0] Available: 0
VIP(127.0.0.2:443:UP:LEASTCONN): Hits(8544, 0/sec) Mbps(0.00) Pers(OFF) Err(0) SO(0) LConn_Best [Idx:SubIdx] 0:0
Pkt(0/sec, 0 bytes) actSvc(1) DefPol(NONE) override[0] newlyUP[0]
Conn: Clt(0, 0/sec, OE[0]) Svr(0) SQ(Total: 0 OnVserver: 0 OnServices: 0)
slimit_SO: (Sothreshold: 0 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0 TotActiveConn: 0] Available: 0
S(127.0.0.1:80:UP) Hits(8544, 0/sec, P[0, 0/sec]) AT[0:0] Mbps(0.00) BWin[0 Kbits] RepTime(0.00 sec) Load(0) LConn_Idx: [C:0, V:0, I:1, B:0, X:0, SI:0)
Other: Pkt(1/sec, 0 bytes) Wt(1) Wt(Reverse Polarity)(10000)
Conn: CSvr(0, 0/sec) MSvr(0) OE[0] E[0] RP[0] SQ[0]
slimit_maxClients: [MaxClt: 0 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0 TotActiveConn: 0] Available: 0]
newlyUP_mode: NO, Pending: 0, update: 0x0, incr_time: 0x0, incr_count: 0
VIP(127.0.0.2:80:DOWN:LEASTCONN): Hits(0, 0/sec) Mbps(0.00) Pers(OFF) Err(0) SO(104) LConn_Best [Idx:SubIdx] 1024:1
Pkt(0/sec, 0 bytes) actSvc(0) DefPol(NONE) override[0] newlyUP[0]
Conn: Clt(0, 0/sec, OE[0]) Svr(0) SQ(Total: 0 OnVserver: 0 OnServices: 0)
slimit_SO: (Sothreshold: 0 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0 TotActiveConn: 0] Available: 0
VIP(D.0.0.0:0:UP:LEASTCONN): Hits(275, 0/sec) Mbps(0.00) Pers(OFF) Err(0) SO(0) LConn_Best [Idx:SubIdx] 0:0
Pkt(0/sec, 0 bytes) actSvc(1) DefPol(NONE) override[0] newlyUP[0]
Conn: Clt(0, 0/sec, OE[0]) Svr(0) SQ(Total: 0 OnVserver: 0 OnServices: 0)
slimit_SO: (Sothreshold: 0 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0 TotActiveConn: 0] Available: 0
S(127.0.0.1:80:UP) Hits(262, 0/sec, P[0, 0/sec]) AT[0:0] Mbps(0.00) BWin[0 Kbits] RepTime(0.00 sec) Load(0) LConn_Idx: [C:0, V:0, I:1, B:0, X:0, SI:0)
Other: Pkt(0/sec, 0 bytes) Wt(1) Wt(Reverse Polarity)(10000)
Conn: CSvr(0, 0/sec) MSvr(0) OE[0] E[0] RP[0] SQ[0]
slimit_maxClients: [MaxClt: 0 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0 TotActiveConn: 0] Available: 0]
newlyUP_mode: NO, Pending: 0, update: 0x0, incr_time: 0x0, incr_count: 0
-----
CPU:1.7% MEM:175267197 UP:106.07129:31 since:Fri Apr 17 05:45:15 2015
    
```

The NetScaler has a command for enumerating statistics for all objects based on a seven (7) second

counter interval. This is facilitated via the “**STAT**” command.

Highly granular L3-L7 telemetry by NetScaler

- System Level: CPU and memory utilization of ADC.
- HTTP Protocol: #Requests/Responses, GET/POST split, HTTP errors for N-S and E-W (for service mesh lite only, sidecar soon).
- SSL: #Sessions and #Handshakes for N-S and E-W traffic for service mesh lite only.
- IP Protocol: #Packets received/sent, #Bytes received/sent, #Truncated packets, and #IP address lookup.
- NetScaler AAA: #Active Sessions
- Interface: #Total multicast packets, #Total transferred bytes, and #Jumbo packets received/sent.
- Load balancing virtual server and content switching virtual server: #Packets, #Hits, and #Bytes received/sent.

STAT - perform ADC CLI operations:

```
1 >Statistics
2 “ stat ssl ”
```

```

> stat ns

System overview

Up since          Thu Apr 16 19:45:15 2015
Packet CPU usage (%)      1.60
Management CPU usage (%)  0.80
Memory usage (MB)        165
InUse Memory (%)         17.03
Last Transition time Th...015
System state           UP
Master state           Primary
# SSL cards UP         0
# SSL cards present    0

System Disks           Used (%) Available
/flash Used (%)        17    1168
/var Used (%)          13    11246

Throughput Statistics           Rate (/s)           Total
Megabits received               2           288237
Megabits transmitted            3           345685

TCP Connections           Client   Server
All client connections     158     272
Established client connections 158     145

HTTP           Rate (/s)           Total
Total requests           0           191529
Total responses          0           263011
Request bytes received   7007        1178810535
Response bytes received  164477     12348432171

SSL           Rate (/s)           Total

```


The NetScaler has a log archive structure that allows for the searching of statistics and counters when troubleshooting specific errors via the “**NSCONMSG**” command.

NSCONMSG - main log file (ns data format)

```

1    Cd/var/nslog
2
3    “ Mac Moves ”
4    nsconmsg -d current -g nic_err

```

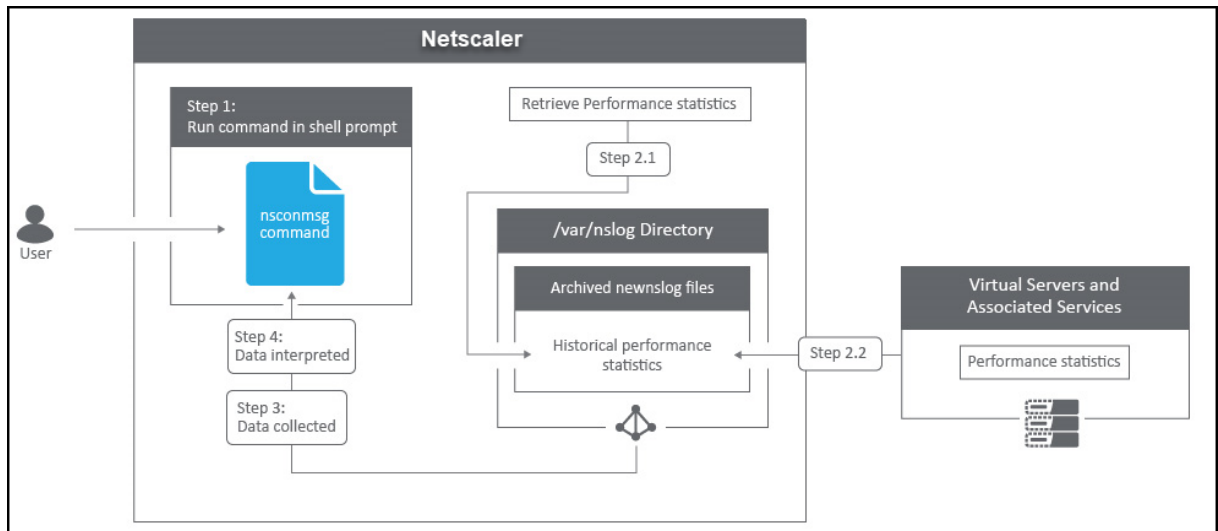

Nstcpdump

You can use `nstcpdump` for low-level troubleshooting. `nstcpdump` collects less detailed information than `nstrace`. Open the ADC CLI and type `shell`. You can use filters with `nstcpdump` but cannot use filters specific to ADC resources. The dump output can be viewed directly within the CLI screen.

CTRL + C – Press these keys simultaneously to stop an `nstcpdump`.

`nstcpdump .sh dst host x.x.x.x` – Shows traffic sent to the destination host.

`nstcpdump .sh -n src host x.x.x.x` – Shows traffic from specified host and don't convert IP addresses to names (-n).

`nstcpdump .sh host x.x.x.x` – Shows traffic to and from specified host IP.

```


root@Netscaler1# nstcpdump.sh -c 10 dst host 192.168.0.242
reading from file -, link-type EN10MB (Ethernet)
21:45:45.834700 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[S], seq 1702255264, win 8192, options [mss 1460,nop,wscale 8,nop,nop,sackOK],
length 0
21:45:45.836702 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[.], ack 748367253, win 64240, length 0
21:45:45.837202 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[P.], ack 1, win 64240, length 232
21:45:45.839203 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[.], ack 1544, win 64240, length 0
21:45:45.840244 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[P.], ack 1544, win 64240, length 342
21:45:45.847709 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[P.], ack 1619, win 64165, length 469
21:45:45.994744 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[P.], ack 2712, win 63072, length 581
21:45:46.002746 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[.], ack 7092, win 64240, length 0
21:45:46.003250 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[.], ack 15853, win 64240, length 0
21:45:46.009748 IP 192.168.0.11.62477 > citrixstore.citrixpro.co.uk.https: Flags
[.], ack 30455, win 64240, length 0
    
```

NSTRACE - packet trace file

NSTRACE is a low-level packet debugging tool for troubleshooting networks. It allows you to store capture files that you can analyze further using the analyzer tools. Two common tools are Network Analyzer and Wireshark.

NSTRACE

Packet capture tool, analyzed with WireShark

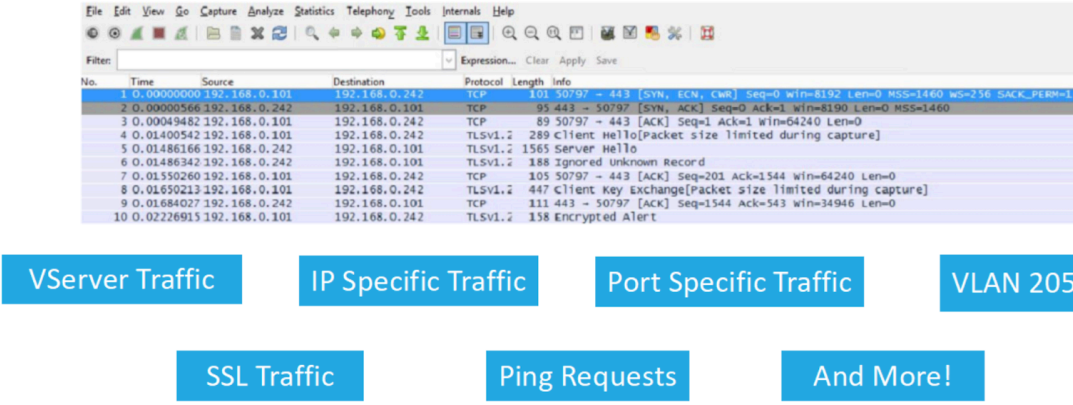

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000000	192.168.0.101	192.168.0.242	TCP	101	50797 -> 443 [SYN, ECN, CWB] Seq=0 win=8192 Len=0 MSS=1460 WS=256 SACK_PERM=1
2	0.0000566	192.168.0.242	192.168.0.101	TCP	95	443 -> 50797 [SYN, ACK] Seq=0 Ack=1 win=8190 Len=0 MSS=1460
3	0.00049482	192.168.0.101	192.168.0.242	TCP	89	50797 -> 443 [ACK] Seq=1 Ack=1 win=64240 Len=0
4	0.01400542	192.168.0.101	192.168.0.242	TLSv1.2	289	client Hello[Packet size limited during capture]
5	0.01486166	192.168.0.242	192.168.0.101	TLSv1.2	1565	Server Hello
6	0.01486342	192.168.0.242	192.168.0.101	TLSv1.2	188	Ignored Unknown Record
7	0.01550260	192.168.0.101	192.168.0.242	TCP	105	50797 -> 443 [ACK] Seq=201 Ack=1544 win=64240 Len=0
8	0.01650213	192.168.0.101	192.168.0.242	TLSv1.2	447	client Key Exchange[Packet size limited during capture]
9	0.01684027	192.168.0.242	192.168.0.101	TCP	111	443 -> 50797 [ACK] Seq=1544 Ack=543 win=34946 Len=0
10	0.02226915	192.168.0.101	192.168.0.242	TLSv1.2	158	Encrypted Alert

VServer Traffic

IP Specific Traffic

Port Specific Traffic

VLAN 205 Traffic

SSL Traffic

Ping Requests

And More!

```
> start nstrace -size 0
Done
> stop nstrace
Done
```

Once the NSTRACE capture file is created in /var/nstrace on the ADC, you can import the capture file into Wireshark for packet capture and network analysis.

SYSCTL - Detailed ADC info: Description, Model, Platform, CPUs, and so on

```
1 sysctl -a grep hw.physmem
2
3 hw.physmem: 862306304
4 netScaler.hw_physmem_mb: 822
```

aaad.debug - Open Pipe for authentication debug info

```
process_radius Got RADIUS event
process_radius Received BAD_ACCESS_REJECT for: <username>
process_radius Sending reject.
send_reject_with_code Rejecting with error code 4001.
```

For more information on how to troubleshoot authentication issues through ADC or ADC Gateway with the aaad.debug module, see [aaad.debug Support Article](#).

There is also the ability to obtain performance statistics and event logs directly for the ADC. For more information on this, see [ADC Support Document](#).

Troubleshooting for SRE and platforms teams

Kubernetes traffic flows

North/South:

- North/south traffic is traffic flowing from the user into the cluster, through the ingress.

East/West:


- East/west traffic is traffic flowing around the Kubernetes cluster: service-to-service or service-to-datastore.

How NetScaler CPX load balances east-west traffic flow in a Kubernetes environment

After you have deployed the Kubernetes cluster, you must integrate the cluster with ADM by providing the details of the Kubernetes environment in ADM. ADM monitors the changes in Kubernetes resources, such as services, endpoints, and Ingress rules.

When you deploy an NetScaler CPX instance in the Kubernetes cluster, it automatically registers with ADM. As part of the registration process, ADM learns about the CPX instance IP address and the port on which it can reach the instance to configure it by using NITRO REST APIs.

The following figure shows how NetScaler CPX load balances east-west traffic flow in a Kubernetes cluster.

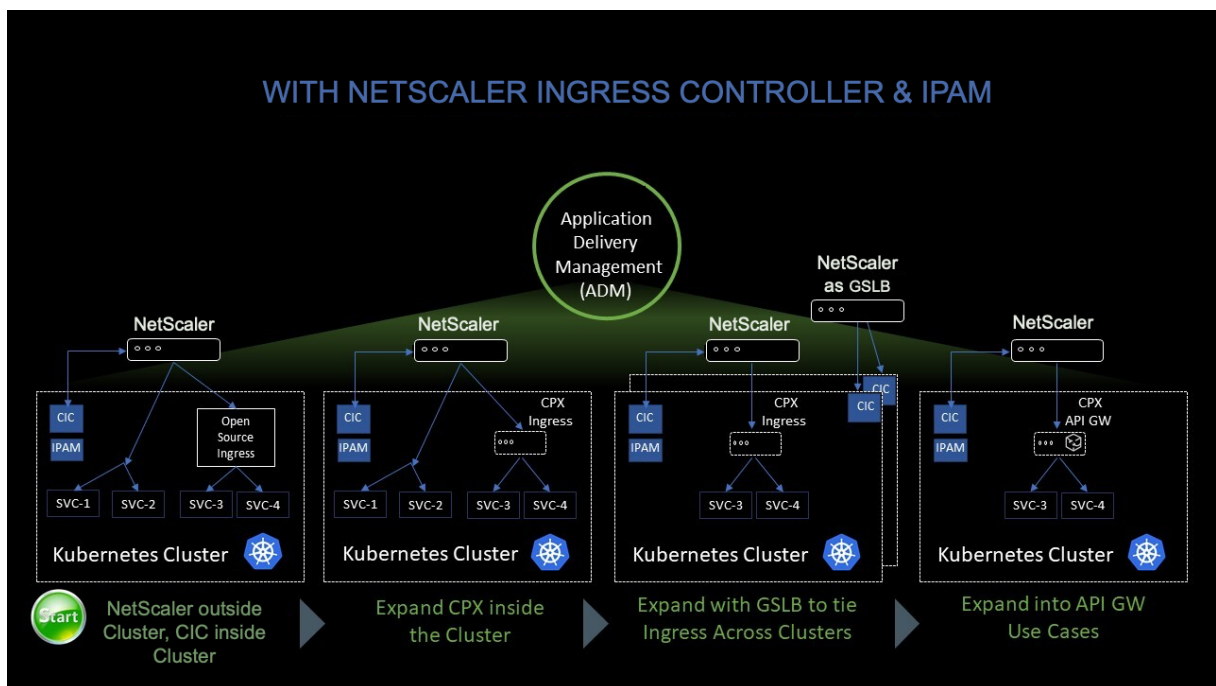

In this example,

Node 1 and Node 2 of the Kubernetes clusters contains instances of a front-end service and a back-end service. When the NetScaler CPX instances are deployed in Node 1 and Node 2, the NetScaler CPX instances are automatically registered with ADM. You must manually integrate the Kubernetes cluster with ADM by configuring the Kubernetes cluster details in ADM.

When a client requests the front-end service, the ingress resource load balances the request between the instances of the front-end service on the two nodes. When an instance of the front-end service needs information from the back-end services in the cluster, it directs the requests to the NetScaler CPX instance in its node. That NetScaler CPX instance load balances the requests between the back-end services in the cluster, providing east-west traffic flow.

ADM service graph for applications

The service graph feature in NetScaler Console enables you to monitor all services in a graphical representation. This feature also provides a detailed analysis and useful metrics. You can view service graphs for:

- [Applications configured across all NetScaler instances](#)
- [Kubernetes applications](#)
- [3-tier Web applications](#)

To get started, see the [details in service graph](#).


View microservice applications counters

The service graph also displays all microservice applications that belong to the Kubernetes clusters. However, the mouse pointer on a service to view the metrics details.

You can view:

- The service name
- The protocol used by the service such as SSL, HTTP, TCP, SSL over HTTP
- **Hits** –The total number of hits received by the service
- **Service Response Time** –The average response time taken from the service.
(Response time = Client RTT + request last byte –request first byte)
- **Errors** –The total errors such as 4xx, 5xx, and so on
- **Data Volume** –The total volume of data processed by the service
- **Namespace** –The namespace of the service
- **Cluster Name** –The cluster name where the service is hosted
- **SSL Server Errors** –The total SSL errors from the service

Usecase: Troubleshooting slow application

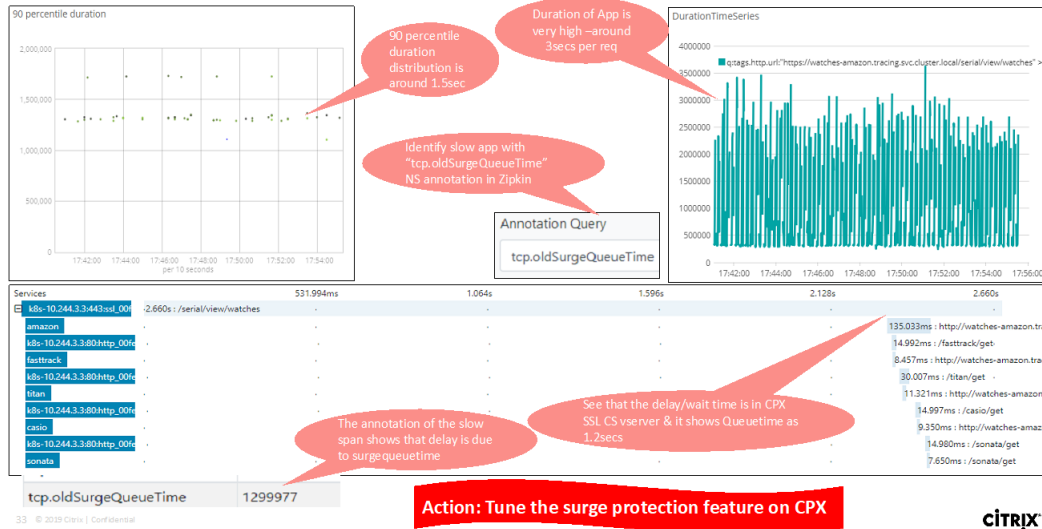

These specific counters and transaction logs can be extracted through the NetScaler Observability Exporter (COE) using a range of supported endpoints. For more information on COE, see the following sections.

Exporter for NetScaler stats

This is a simple server that scrapes NetScaler stats and exports them via HTTP to Prometheus. Prometheus can then be added as a data source to Grafana to view the NetScaler stats graphically.

To monitor the stats and counters of NetScaler instances, `citrix-adc-metric-exporter` can be run as a container or script. The exporter collects NetScaler stats such as total hits to a virtual server, HTTP request rate, SSL encryption-decryption rate, and so on from the NetScaler instances and holds them until the Prometheus server pulls the stats and stores them with a timestamp. Grafana can then be pointed to the Prometheus server to fetch the stats, plot them, set alarms, create heat maps, generate tables, and so forth as needed to analyze the NetScaler stats.

Details about setting up the exporter to work in an environment as given in the figure is provided in the following sections. A note on which NetScaler entities/metrics the exporter scrapes by default and how to modify it is also explained.

For more information on Exporter for NetScaler, see the [Metrics Exporter GitHub](#).

ADM service distributed tracing

In the service graph, you can use the distributed tracing view to:

- Analyze the overall service performance.

- Visualize the communication flow between the selected service and its inter-dependent services.
- Identify which service indicates errors and troubleshoot the erroneous service
- View transaction details between the selected service and each interdependent service.

ADM distributed tracing prerequisites

To view the trace information for the service, you must:


- Ensure that an application maintains the following trace headers, while sending any east-west traffic:
 - `x-request-id`
 - `x-b3-traceid`
 - `x-b3-spanid`
 - `x-b3-parentspanid`
 - `x-b3-sampled`
 - `x-b3-flags`
 - `x-ot-span-context`
- Update the CPX YAML file with `NS_DISTRIBUTED_TRACING` and the value as YES.
To get started, see [Distributed Tracing](#).

NetScaler Observability Exporter (COE) parsing


NetScaler Observability Exporter is a container which collects metrics and transactions from NetScalers and transforms them to suitable formats (such as JSON, AVRO) for supported endpoints. You can export the data collected by the NetScaler Observability Exporter to the desired endpoint. By analyzing the data exported to the endpoint, you can get valuable insights at a microservices level for applications proxied by NetScalers.

For more information on COE, see the [COE GitHub](#).

COE with Elasticsearch as the transaction endpoint

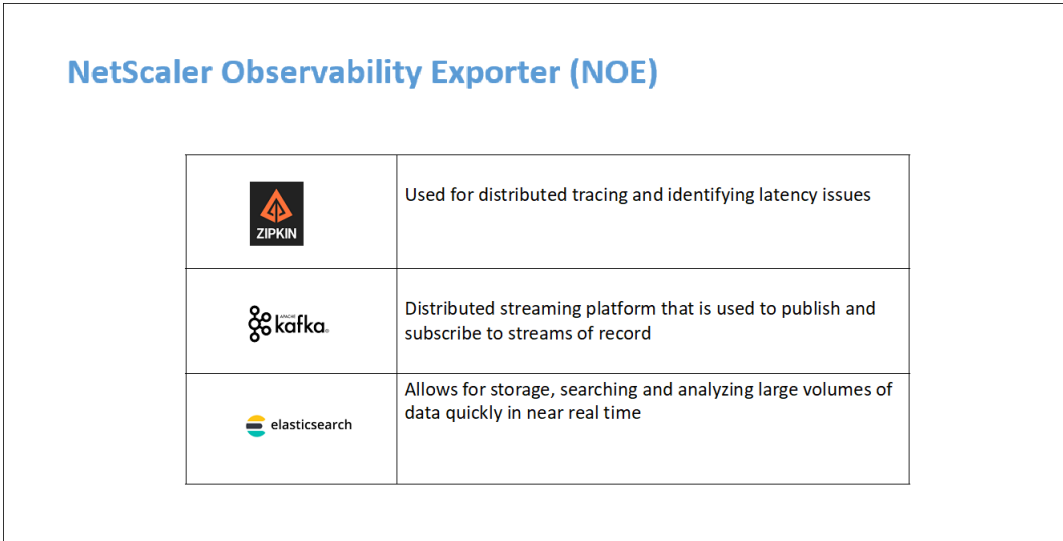

When Elasticsearch is specified as the transaction endpoint, NetScaler Observability Exporter converts the data to JSON format. On the Elasticsearch server, NetScaler Observability Exporter creates Elasticsearch indexes for each ADC on an hourly basis. These indexes are based on data, hour, UUID of the ADC, and the type of HTTP data (http_event or http_error). Then, the NetScaler Observability Exporter uploads the data in JSON format under Elastic search indexes for each ADC. All regular transactions are placed into the http_event index and any anomalies are placed into the http_error index.

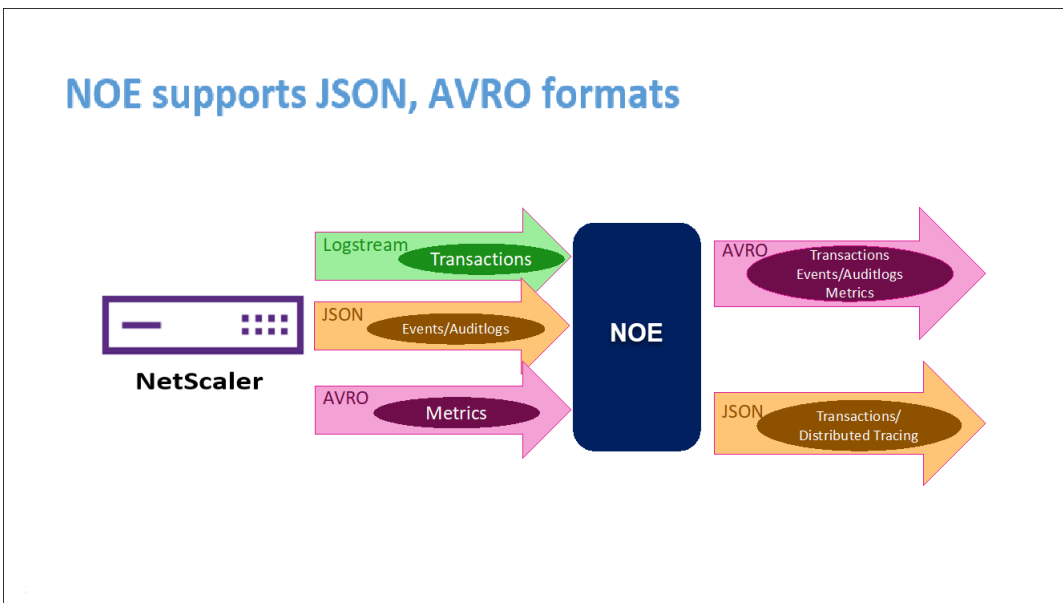

Distributed tracing support with Zipkin

In a microservice architecture, a single end-user request may span across multiple microservices making tracking a transaction and fixing sources of errors challenging. In such cases, traditional ways for performance monitoring cannot accurately pinpoint where failures occur and what is the reason behind poor performance. You need a way to capture data points specific to each microservice handling a request and analyze them to get meaningful insights.


Distributed tracing addresses this challenge by providing a way to track a transaction end-to-end and understand how it is being handled across multiple microservices.

[OpenTracing](#) is a specification and standard set of APIs for designing and implementing distributed tracing. Distributed tracers allow you to visualize the data flow between your microservices and helps to identify the bottlenecks in your microservices architecture.

NetScaler Observability Exporter implements distributed tracing for NetScaler and currently supports [Zipkin](#) as the distributed tracer.

Currently, you can monitor performance at the application level using NetScaler. Using NetScaler Observability Exporter with NetScaler, you can get tracing data for microservices of each application proxied by your NetScaler CPX, MPX, or VPX.

To get started, see the [GitHub Observability Exporter](#).

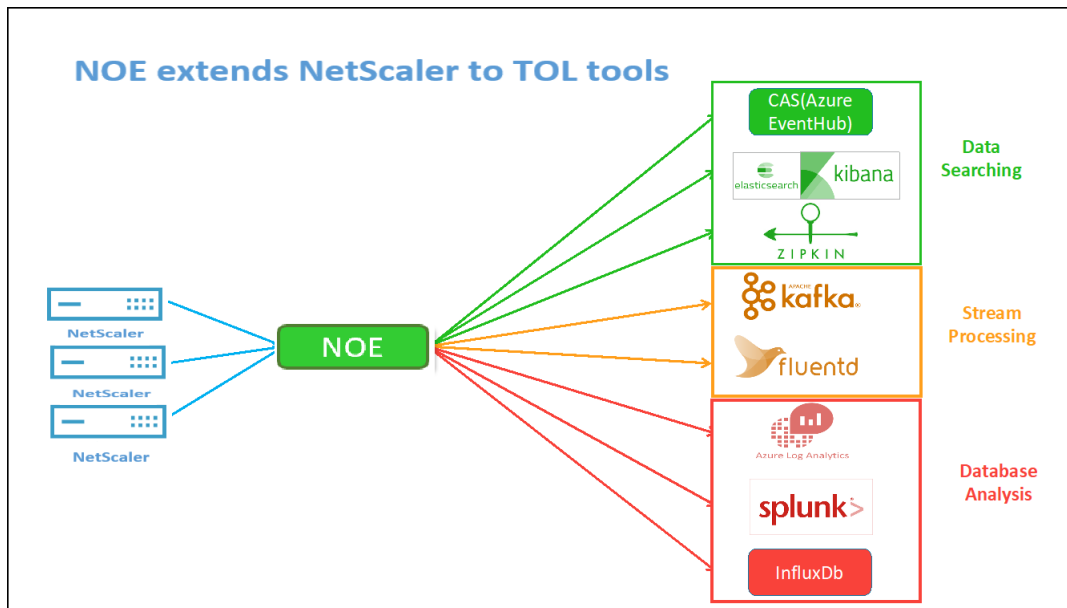


Zipkin for application debugging

Zipkin is an [open source](#) distributed tracing system based on [Dapper’s paper from Google](#). Dapper is Google’s system for its system distributed tracing in production. Google explains this in their paper -

“We built Dapper to provide Google’s developers with more information about the behavior of complex distributed systems”. Observing the system from different angles is critical when troubleshooting, especially when a system is complex and distributed.

The following Zipkin trace data identifies a total of 5 spans and 5 services related to the Watches sample application. The trace data shows the specific span data across the 5 microservices.

To get started, see [Zipkin](#).

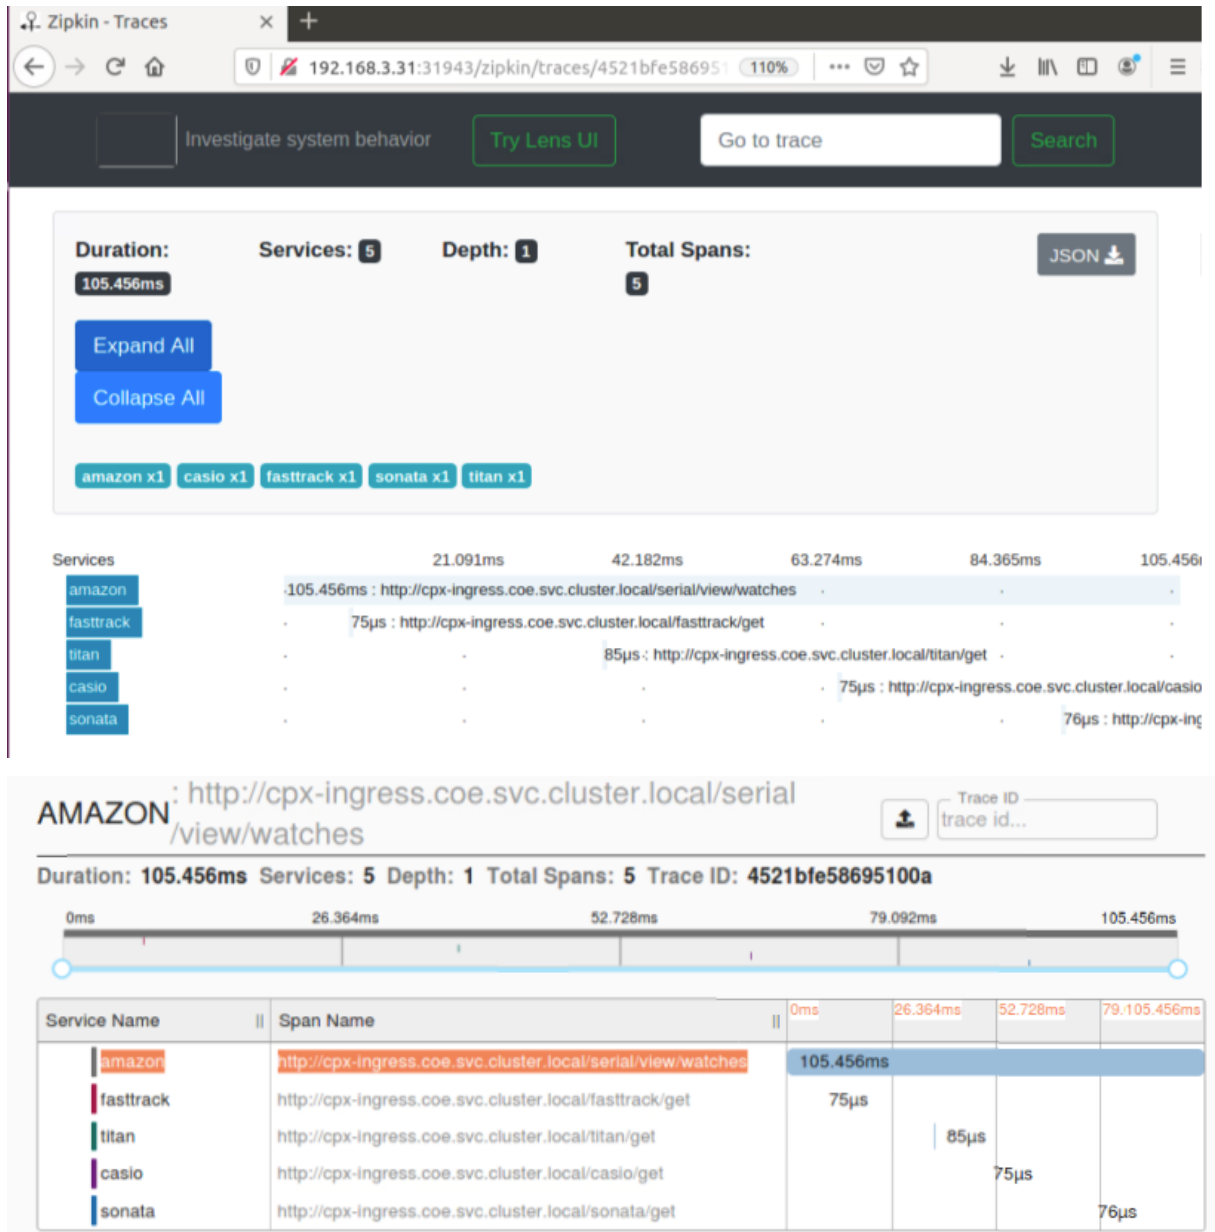

Sample Zipkin span showing application latency for initial page load request:

Services: amazon			
Date Time	Relative Time	Annotation	Address
7/15/2020, 2:14:24 PM		Server Start	10.10.235.179:1719 (amazon)
7/15/2020, 2:14:24 PM	105.456ms	Server Finish	10.10.235.179:1719 (amazon)

Key	Value
component	py_zipkin
http.host	amazon:1719
http.method	GET
http.path	/serial/view/watches
http.url	http://cpx-ingress.coe.svc.cluster.local/serial/view/watches
Local Component	amazon
peer.address	10.10.235.190

Kibana for viewing data

Kibana is an open user interface that lets you visualize your Elasticsearch data and navigate the Elastic Stack. Do anything from tracking query load to understanding the way requests flow through your apps.

Whether you're an analyst or an admin, Kibana makes your data actionable by providing the following three key functions:

- **An open-source analytics and visualization platform.** Use Kibana to explore your Elasticsearch data, and then build beautiful visualizations and dashboards.
- **A UI for managing the Elastic Stack.** Manage your security settings, assign user roles, take snapshots, roll up your data, and more—all from the convenience of a Kibana UI.

- **A centralized hub for Elastic's solutions.** From log analytics to document discovery to SIEM, Kibana is the portal for accessing these and other capabilities.

Kibana is designed to use Elasticsearch as a data source. Think of Elasticsearch as the engine that stores and processes the data, with Kibana sitting on top.

From the home page, Kibana provides these options for adding data:

- Import data using the [File Data visualizer](#).
- Set up a data flow to Elasticsearch using our built-in tutorials. If a tutorial doesn't exist for your data, go to the [Beats Overview](#) to learn about other data shippers in the Beats family.
- [Add a sample data set](#) and take Kibana for a test drive without loading data yourself.
- Index your data into Elasticsearch with [REST APIs](#) or [Client Libraries](#).

Kibana uses an [index pattern](#) to tell it which Elasticsearch indices to explore. If you upload a file, run a built-in tutorial, or add sample data you get an index pattern for free and are good to start exploring. If you load your own data you can create an index pattern in [Stack Management](#).

Step 1: Configure Index Pattern for Logstash

Step 2: Select the index and generate traffic to populate.


Step 3: generate application from the unstructured data from log feeds.

Step 4: Kibana formats the Logstash input to create reports and dashboards.

- Time Range
- Tabular View
- Hit counts based on the application.
 - Time IP, Agent, Machine.OS, Response Code (200), URL
 - Filter on values

Step 5: Visualize the data in a report of aggregations.

- Result Aggregation in a chart report (pie, graph, and so forth)

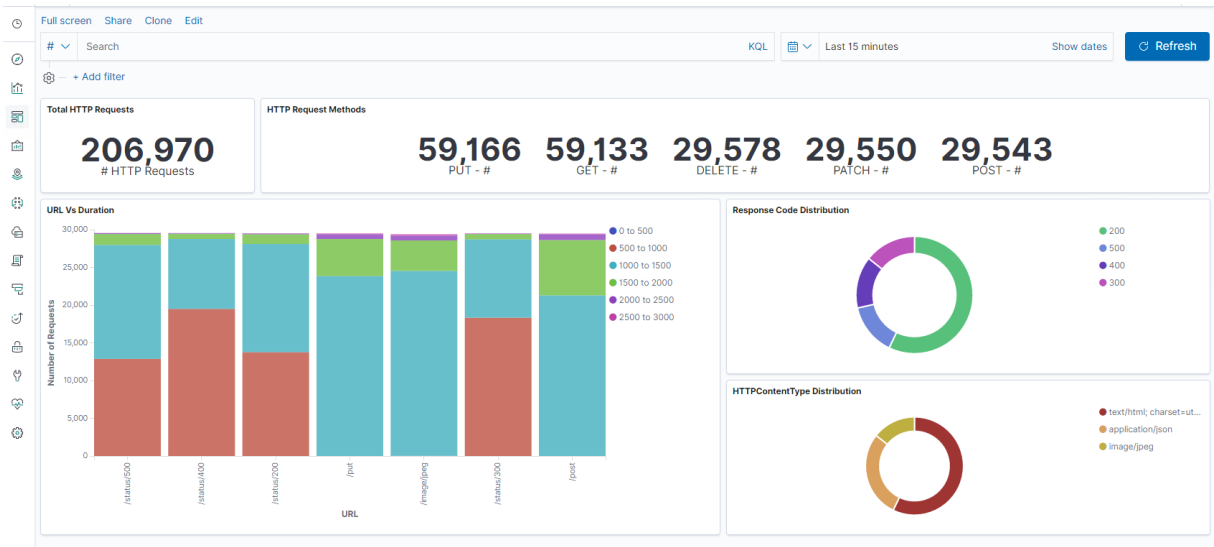

Discover

New Save Open Share Inspect

Search KQL Refresh

http 206,970 hits

Source	TransInfo	ReqTimestamp	ReqURL	ReqMethod	ReqUserAgent	FlowFlagsRx	IngressInterfaceClient
...	0,947 httpReqHost: 10.106.76.201:31203	1,597,127,495,192,198	/status/500	PUT	curl/7.47.0	67,250,627	1
...	0,963 httpReqHost: 10.106.76.201:31203	1,597,127,495,307,194	/status/500	PUT	curl/7.47.0	67,250,627	1
...	0,977 httpReqHost: 10.106.76.201:31203	1,597,127,495,415,190	/status/500	PUT	curl/7.47.0	67,250,627	1
...	0,991 httpReqHost: 10.106.76.201:31203	1,597,127,495,521,218	/status/500	PUT	curl/7.47.0	67,250,627	1

Selected fields
 ? _source

Available fields
 # Duration
 t _id
 t _index
 # _score
 t _type
 t appName
 t appNameVserverLs
 t backendSvrDstIpv4Address
 t backendSvrIpv4Address
 # clientMss
 # clnFastRetxCount
 # clnTcpJitter
 # clnTcpPacketsRetransmitted
 # clnTcpRtoCount

Deploy a NetScaler VPX instance

February 22, 2024

Note

Console Advisory Connect is enabled by default, after you install or upgrade NetScaler or NetScaler Gateway to release 13.0 build 61.xx and above. For more information see, [Data governance](#) and [Console Advisory Connect](#).

The NetScaler VPX product is a virtual appliance that can be hosted on a wide variety of virtualization and cloud platforms:

- [Citrix Hypervisor](#)
- [VMware ESX](#)
- [Microsoft Hyper-V](#)
- [Linux KVM](#)
- [Amazon Web Services](#)
- [Microsoft Azure](#)
- [Google Cloud Platform](#)

For more information, see the [NetScaler VPX data sheet](#).

For more information about provisioning a NetScaler VPX instance on an SDX appliance, see [Provisioning NetScaler instances](#).

NetScaler Application Delivery Management for NetScaler VPX

NetScaler Application Delivery Management software is a centralized management solution that simplifies operations by providing administrators with enterprise-wide visibility and automating management jobs that need to be run across multiple instances.

You can manage and monitor NetScaler VPX instances in addition to other NetScaler products such as NetScaler Gateway, NetScaler SDX, NetScaler CPX, and Citrix SD-WAN. You can use the Application Delivery Management software to manage, monitor, and troubleshoot the entire global application delivery infrastructure from a single, unified console.

For more information, see [NetScaler Application Delivery Management documentation](#).

NetScaler VPX support matrix

October 29, 2024

This document lists the different hypervisors and features supported on a NetScaler VPX instance. The document also describes their usage guidelines and known limitations.

VPX instance on VMware ESX hypervisor

NetScaler 14.1

ESXi version	ESXi release date (YYYY/MM/DD)	ESXi build number	NetScaler VPX version	Performance range
ESXi 8.0 update 3b	2024/09/17	24280767	14.1-21.x and higher builds	10 Mbps to 100 Gbps
ESXi 8.0 update 3	2024/06/25	24022510	14.1-21.x and higher builds	
ESXi 8.0 update 2c	2024/05/21	23825572	14.1-21.x and higher builds	
ESXi 8.0 update 2b	2024/02/29	23305546	14.1-17.x and higher builds	
ESXi 8.0 update 2	2023/09/21	22380479	14.1-17.x and higher builds	
ESXi 8.0 update 1	2023/04/18	21495797	14.1-4.x and higher builds	
ESXi 8.0c	2023/03/30	21493926	14.1-4.x and higher builds	
ESXi 8.0	2022/10/11	20513097	14.1-4.x and higher builds	
ESXi 7.0 update 3q	2024/05/21	23794027	14.1-21.x and higher builds	
ESXi 7.0 update 3p	2024/04/11	23307199	14.1-17.x and higher builds	
ESXi 7.0 update 3o	2023/09/28	22348816	14.1-12.x and higher builds	
ESXi 7.0 update 3n	2023/07/06	21930508	14.1-8.x and higher builds	
ESXi 7.0 update 3m	2023/05/03	21686933	14.1-4.x and higher builds	

Note:

Each ESXi patch support is validated on the NetScaler VPX version specified in the preceding table and is applicable for all the higher builds of NetScaler VPX 14.1 version.

For more information on usage guidelines, see [Usage guidelines for VMware ESXi hypervisor](#).

VPX instance on XenServer or Citrix Hypervisor

NetScaler 14.1

XenServer or Citrix Hypervisor

version	SysID	Performance range
8.4, supported from NetScaler VPX version 14.1 build 17.x onwards	450000	10 Mbps to 40 Gbps
8.2, supported from NetScaler VPX version 13.0 build 64.x onwards		
8.0, 7.6, 7.1		

VPX instance on Microsoft Hyper-V

Hyper-V version	SysID	Performance range
2016, 2019	450020	10 Mbps to 3 Gbps

VPX instance on Nutanix AHV

NetScaler VPX is supported on Nutanix AHV through the [Citrix Ready partnership](#). Citrix Ready is a technology partner program that helps software and hardware vendors develop and integrate their products with NetScaler technology for digital workspace, networking, and analytics.

For more information on a step-by-step method to deploy a NetScaler VPX instance on Nutanix AHV, see [Deploying a NetScaler VPX on Nutanix AHV](#).

Third-party support:

If you experience any issues with a particular third-party (Nutanix AHV) integration on a NetScaler environment, open a support incident directly with the third-party partner (Nutanix).

If the partner determines that the issue appears to be with NetScaler, the partner can approach NetScaler support for further assistance. A dedicated technical resource from partners works with the NetScaler support team until the issue is resolved.

For more information, see the [Citrix Ready Partner Program FAQs](#).

VPX instance on generic KVM

Generic KVM version	SysID	Performance range
RHEL 7.6, RHEL 8.0, RHEL 9.3	450070	10 Mbps to 100 Gbps
Ubuntu 16.04, Ubuntu 18.04, Ubuntu 22.04		

Points to note:

Consider the following points while using KVM hypervisors.

- The VPX instance is qualified for hypervisor release versions mentioned in table 1–4, and not for patch releases within a version. However, the VPX instance is expected to work seamlessly with patch releases of a supported version. If it does not, log a support case for troubleshooting and debugging.
- Before using RHEL 7.6, complete the following steps on the KVM host:
 1. Edit `/etc/default/grub` and append `"kvm_intel.preemption_timer=0"` to `GRUB_CMDLINE_LINUX` variable.
 2. Regenerate `grub.cfg` with the command `"# grub2-mkconfig -o /boot/grub2/grub.cfg"`.
 3. Restart the host machine.
- Before using Ubuntu 18.04, complete the following steps on the KVM host:
 1. Edit `/etc/default/grub` and append `"kvm_intel.preemption_timer=0"` to `GRUB_CMDLINE_LINUX` variable.
 2. Regenerate `grub.cfg` with the command `"# grub-mkconfig -o /boot/grub/grub.cfg"`.
 3. Restart the host machine.

VPX instance on public clouds

Public cloud	SysID	Performance range
AWS	450040	10 Mbps to 30 Gbps
Azure	450020	10 Mbps to 10 Gbps
GCP	450070	10 Mbps to 10 Gbps

VPX features supported on hypervisors

Hypervisor	VPX on VMware ESX					VPX on Microsoft	VPX on generic KVM			
→ XenServer						Hyper-V				
Features	BV	SR-IOV	PV	SR-IOV	Emulated PCI	PCI Passthrough	PV	SR-IOV	PCI Passthrough	
Multi-PE Support	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Clustering Support	Yes	Yes ¹	Yes	Yes ¹	Yes	Yes	Yes	Yes	Yes ¹	
VLAN Tagging	Yes	Yes	Yes	Yes	Yes	Yes	Yes (only on 2012R2)	Yes	Yes	
Detecting Link Events/HA-Mon	No ²	Yes ³	No ²	Yes ³	No ²	Yes ³	No ²	No ²	Yes ³	
Interface Parameter Configuration	No	No	No	No	No	Yes	No	No	No	
Static LA	Yes ²	Yes ³	Yes ²	No	Yes ²	Yes ³	Yes ²	Yes ²	Yes ³	
LACP Static CLAG	No	Yes ³	Yes ²	No	Yes ²	Yes ³	No	Yes ²	Yes ³	
LACP CLAG	No	No	No	No	No	No	No	No	No	
Hot-plug	No	No	Yes ²	No	Yes ²	Yes ³	No	Yes ²	Yes ³	
Hot-plug	No	No	No	No	No	No	No	No	No	

VPX features supported on public clouds

Public clouds → Features ↓	VPX on AWS	VPX on Azure	VPX on GCP
Multi-PE Support	Yes	Yes	Yes
Clustering Support	No	No	No
VLAN Tagging	No	No	No
Detecting Link Events/HAMon	No ²	No ²	No ²
Interface Parameter Configuration	No	No	No
Static LA	No	No	No
LACP	No	No	No
Static CLAG	No	No	No
LACP CLAG	No	No	No
Hot-plug	Yes	No	No

The superscript numbers (1, 2, 3) used in the two preceding tables refers to the following points with respective numbering:

1. Clustering support is available on SRIOV for client-facing and server-facing interfaces, and not for the backplane.
2. Interface DOWN events are not recorded in NetScaler VPX instances.
3. For Static LA, traffic might still be sent on the interface whose physical status is DOWN.

The following points apply to the respective features captured in the two preceding tables:

- For LACP, the peer device knows the interface DOWN event based on the LACP timeout mechanism.
 - Short timeout: 3 seconds
 - Long timeout: 90 seconds
- For LACP, do not share interfaces across VMs.
- For Dynamic routing, convergence time depends on the Routing Protocol since link events aren't detected.

- Monitored static Route functionality fails if you do not bind monitors to static routes because the Route state depends on the VLAN status. The VLAN status depends on the link status.
- Partial failure detection does not happen in high availability if there's link failure. High availability-split brain condition might happen if there's link failure.
 - When any link event (disable/enable, reset) is generated from a VPX instance, the physical status of the link does not change. For static LA, any traffic initiated by the peer gets dropped on the instance.
 - For the VLAN tagging feature to work, do the following:

On the VMware ESX, set the port group's VLAN ID to 1–4095 on the vSwitch of the VMware ESX server. For more information about setting a VLAN ID on the vSwitch of the VMware ESX server, see [VMware ESX Server 3 802.1Q VLAN Solutions](#).
- Hot-plug is not supported on VPX instances with ENA interfaces, and the behavior of the instances can be unpredictable if hot-plugging is attempted. Hot adding is supported only for PV and SRIOV interfaces with NetScaler on AWS.
- Hot removing either through the AWS Web console or AWS CLI interface is not supported with the PV, SRIOV, and ENA interfaces for NetScaler. The behavior of the instances can be unpredictable if hot-removal is attempted.

Supported browsers

Operating system	Browser and versions
Windows 7	Internet Explorer- 8, 9, 10, and 11; Mozilla Firefox 3.6.25 and above; Google Chrome- 15 and above
Windows 64 bit	Internet Explorer - 8, 9; Google Chrome - 15 and above
MAC	Mozilla Firefox - 12 and above; Safari - 5.1.3; Google Chrome - 15 and above

AMD processor support for VPX instances

From NetScaler release 13.1, the VPX instance supports both the Intel and AMD processors. VPX virtual appliances can be deployed on any instance type that has two or more virtualized cores and more than 2 GB memory. For more information on system requirements, see [NetScaler VPX data sheet](#).

VPX platform vs. NIC matrix table

The following table lists the NICs supported on a VPX platform or cloud.

NICs → Platforms ↓	Mellanox CX-3	Mellanox CX-4	Mellanox CX-5	Intel 82599 SRIOV VF	Intel X710/X722/XL710/ SRIOV VF	Intel X710/XL710/XXV710 PCI-
VPX (ESXi)	No	Yes	No	Yes	No	Passthrough Yes
VPX (Citrix Hypervisor)	NA	NA	NA	Yes	Yes	No
VPX (KVM)	No	Yes	Yes	Yes	Yes	No
VPX (Hyper-V)	NA	NA	NA	No	No	No
VPX (AWS)	NA	NA	NA	Yes	NA	NA
VPX (Azure)	Yes	Yes	Yes	NA	NA	NA
VPX (GCP)	NA	NA	NA	NA	NA	NA

Other References

- For Citrix Ready products, visit [Citrix Ready Marketplace](#).
- For Citrix Ready product support, see the [FAQ page](#).
- For VMware ESX hardware versions, see [Upgrading VMware Tools](#).

Optimize NetScaler VPX performance on VMware ESX, Linux KVM, and Citrix Hypervisors

July 31, 2024

The NetScaler VPX performance greatly varies depending on the hypervisor, allocated system resources, and the host configurations. To achieve the desired performance, first follow the recommendations in the VPX data sheet, and then further optimize it using the best practices provided in this document.

NetScaler VPX instance on VMware ESX hypervisors

This section contains details of configurable options and settings, and other suggestions that help you achieve optimal performance of NetScaler VPX instance on VMware ESX hypervisors.

- [Recommended configuration on ESX hosts](#)
- [NetScaler VPX with E1000 network interfaces](#)
- [NetScaler VPX with VMXNET3 network interfaces](#)
- [NetScaler VPX with SR-IOV and PCI passthrough network interfaces](#)

Recommended configuration on ESX hosts

To achieve high performance for VPX with E1000, VMXNET3, SR-IOV, and PCI passthrough network interfaces, follow these recommendations:

- The total number of virtual CPUs (vCPUs) provisioned on the ESX host must be less than or equal to the total number of physical CPUs (pCPUs) on the ESX host.
- Non-uniform Memory Access (NUMA) affinity and CPU affinity must be set for the ESX host to achieve good results.

–To find the NUMA affinity of a Vmnic, log in to the host locally or remotely, and type:

```
1 #vsish -e get /net/pNics/vmnic7/properties | grep NUMA
2 Device NUMA Node: 0
```

- To set NUMA and vCPU affinity for a VM, see [VMware documentation](#).

NetScaler VPX with E1000 network interfaces

Perform the following settings on the VMware ESX host:

- On the VMware ESX host, create two vNICs from one pNIC vSwitch. Multiple vNICs create multiple Receive (Rx) threads in the ESX host. This increases the Rx throughput of the pNIC interface.
- Enable VLANs on the vSwitch port group level for each vNIC that you have created.
- To increase vNIC transmit (Tx) throughput, use a separate Tx thread in the ESX host per vNIC. Use the following ESX command:

- For ESX version 5.5:

```
1 esxcli system settings advanced set -o /Net/NetTxWorldlet -
i
```

- For ESX version 6.0 onwards:

```
1 esxcli system settings advanced set -o /Net/NetVMTxType -i 1
```

- To further increase the vNIC Tx throughput, use a separate Tx completion thread and Rx threads per device (NIC) queue. Use the following ESX command:


```
1 esxcli system settings advanced set -o /Net/NetNetqRxQueueFeatPairEnable -i 0
```

Note:

Make sure that you reboot the VMware ESX host to apply the updated settings.

Two vNICs per pNIC deployment

The following is a sample topology and configuration commands for the **Two vNICs per pNIC** model of deployment that delivers better network performance.

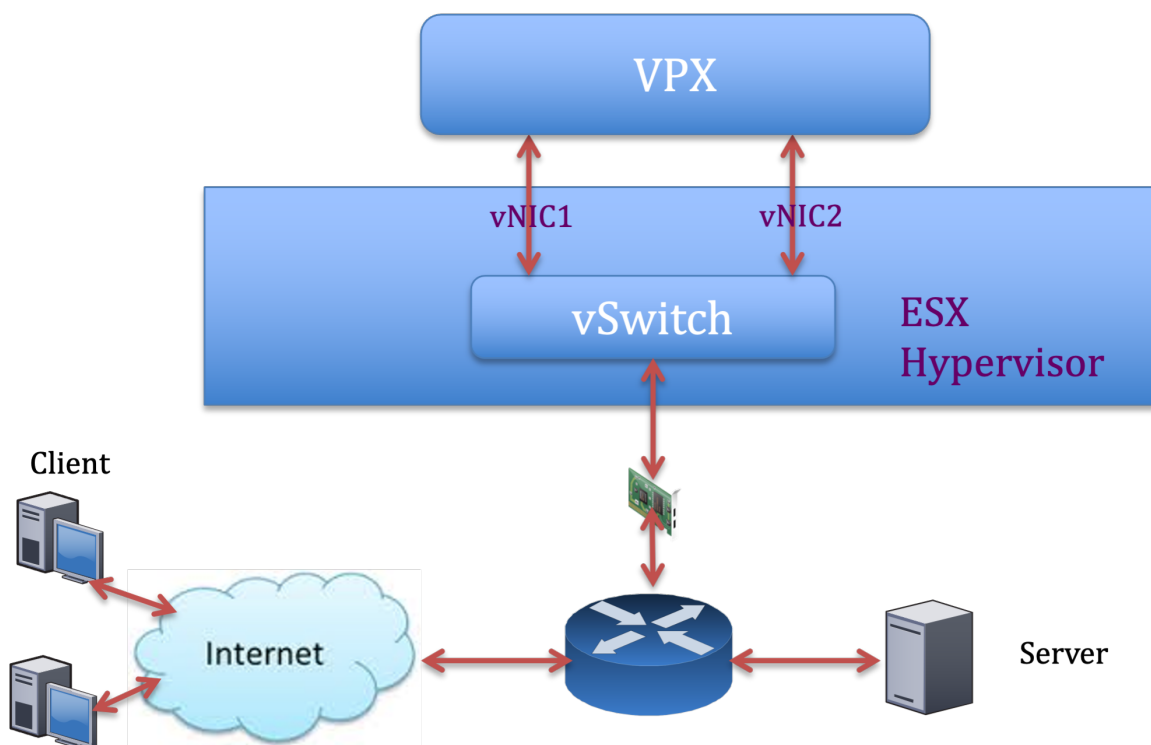

NetScaler VPX sample configuration:

To achieve the deployment shown in the preceding sample topology, perform the following configuration on the NetScaler VPX instance:

- On the client side, bind the SNIP (1.1.1.2) to network interface 1/1 and enable the VLAN tag mode.

```
1 bind vlan 2 -ifnum 1/1 -tagged
2 bind vlan 2 -IPAddress 1.1.1.2 255.255.255.0
```

- On the server side, bind the SNIP (2.2.2.2) to network interface 1/1 and enable the VLAN tag mode.

```
1 bind vlan 3 -ifnum 1/2 -tagged
2 bind vlan 3 -IPAddress 2.2.2.2 255.255.255.0
```

- Add an HTTP virtual server (1.1.1.100) and bind it to a service (2.2.2.100).

```
1 add lb vserver v1 HTTP 1.1.1.100 80 -persistenceType NONE -
  Listenpolicy None -cltTimeout 180
2 add service s1 2.2.2.100 HTTP 80 -gslb NONE -maxClient 0 -maxReq
  0 -cip DISABLED -usip NO -useproxyport YES -sp ON -cltTimeout
  180 -svrTimeout 360 -CKA NO -TCPB NO -CMP NO
3 bind lb vserver v1 s1
```

Note:

Make sure that you include the following two entries in the route table:

- 1.1.1.0/24 subnet with gateway pointing to SNIP 1.1.1.2
- 2.2.2.0/24 subnet with gateway pointing to SNIP 2.2.2.2

NetScaler VPX with VMXNET3 network interfaces

To achieve high performance for VPX with VMXNET3 network interfaces, do the following settings on the VMware ESX host:

- Create two vNICs from one pNIC vSwitch. Multiple vNICs create multiple Rx threads in the ESX host. This increases the Rx throughput of the pNIC interface.
- Enable VLANs on the vSwitch port group level for each vNIC that you have created.
- To increase vNIC transmit (Tx) throughput, use a separate Tx thread in the ESX host per vNIC. Use the following ESX commands:

- For ESX version 5.5:

```
1 esxcli system settings advanced set -o /Net/NetTxWorldlet -i
```

- For ESX version 6.0 onwards:

```
1 esxcli system settings advanced set -o /Net/NetVMTxType -i 1
```

On the VMware ESX host, perform the following configuration:

- On the VMware ESX host, create two vNICs from 1 pNIC vSwitch. Multiple vNICs create multiple Tx and Rx threads in the ESX host. This increases the Tx and Rx throughput of the pNIC interface.
- Enable VLANs on the vSwitch port group level for each vNIC that you have created.
- To increase Tx throughput of a vNIC, use a separate Tx completion thread and Rx threads per device (NIC) queue. Use the following command:

```
1 esxcli system settings advanced set -o /Net/  
NetNetqRxQueueFeatPairEnable -i 0
```

- Configure a VM to use one transmit thread per vNIC, by adding the following setting to the VM's configuration:

```
1 ethernetX.ctxPerDev = "1"
```

- Configure a VM to use up to 8 transmit thread per vNIC, by adding the following setting to the VM's configuration:

```
1 ethernetX.ctxPerDev = "3"
```

Note:

Increasing the transmit threads per vNIC requires more CPU resources (up to 8) on the ESX host. Ensure that sufficient CPU resources are available before making the preceding settings.

For more information, see [Best Practices for Performance Tuning of Telco and NFV Workloads in vSphere](#)

Note:

Make sure that you reboot the VMware ESX host to apply the updated settings.

You can configure VMXNET3 as a **Two vNICs per pNIC** deployment. For more information, see [Two vNICs per pNIC deployment](#).

Configure multi-queue and RSS support on VMware ESX for VMXNET3 devices By default, the VMXNET3 device supports only 8 Rx and Tx queues. When the number of vCPUs on the VPX goes beyond 8, the number of Rx and Tx queues configured for a VMXNET3 interface switches to 1 by default. You can configure up to 19 Rx and Tx queues for VMXNET3 devices by changing certain configurations on ESX. This option increases the performance and uniform distribution of packets across the vCPUs of the VPX instance.

Note:

Starting from NetScaler release 13.1 build 48.x, the NetScaler VPX supports up to 19 Rx and Tx queues on ESX for VMXNET3 devices.

Prerequisites:

To configure up to 19 Rx and Tx queues on ESX for VMXNET3 devices, make sure that the following prerequisites are met:

- NetScaler VPX version is 13.1 build 48.X and later.
- NetScaler VPX is configured with a virtual machine of hardware version 17 and later, which is supported by VMware ESX 7.0 and later.

Configure VMXNET3 interfaces to support more than 8 Rx and Tx queues:

1. Open the virtual machine configuration file (.vmx) file.
2. Specify the number of Rx and TX queues by configuring the `ethernetX.maxTxQueues` and `ethernetX.maxRxQueues` values (where X is the number of the virtual NICs to configure). The maximum number of queues configured must not be greater than the number of vCPUs in the virtual machine.

Note:

Increasing the number of queues also increases the processor overhead on the ESX host. Therefore, ensure that sufficient CPU resources are available in the ESX host before increasing the queues. You can increase the maximum number of queues supported, in scenarios, where the number of queues are identified as a bottleneck for performance. In these situations, we recommend increasing the number of queues gradually. For example, from 8 to 12, then to 16, then to 20, and so on. Evaluate the performance at each setting, rather than increasing directly to the maximum limit.

NetScaler VPX with SR-IOV and PCI passthrough network interfaces

To achieve high performance for VPX with SR-IOV and PCI passthrough network interfaces, see [Recommended configuration on ESX hosts](#).

Usage guidelines for VMware ESXi hypervisor

- We recommend you deploy a VPX instance on local disks of the server or SAN-based storage volumes.

See the **VMware ESXi CPU Considerations** section in the [Performance Best Practices for VMware vSphere 6.5](#) document. Here's an extract:

- It isn't recommended to deploy virtual machines with high CPU or memory demand on a over-committed host or cluster.
- In most environments, ESXi allows significant levels of CPU overcommitment without impacting virtual machine performance. On a host, you can run more vCPUs than the total number of physical processor cores in that host.
- If an ESXi host becomes CPU saturated, that is, the virtual machines and other loads on the host demand all the CPU resources the host has, latency-sensitive workloads might not perform well. In this case, reduce the CPU load for example, by powering off some virtual machines or migrating them to a different host (or allowing DRS to migrate them automatically).
- NetScaler recommends using the latest hardware compatibility version to avail the latest feature sets of the ESXi hypervisor for the virtual machine. For more information about the hardware and ESXi version compatibility, see the [VMware documentation](#).
- The NetScaler VPX is a latency-sensitive, high-performance virtual appliance. To deliver its expected performance, the appliance requires vCPU reservation, memory reservation, and vCPU pinning on the host. Also, hyper threading must be disabled on the host. If the host does not meet these requirements, the following issues might occur:
 - High-availability failover
 - CPU spike within the VPX instance
 - Sluggishness in accessing the VPX CLI
 - Pit boss daemon crash
 - Packet drops
 - Low throughput
- A hypervisor is considered over-provisioned if one of the following two conditions is met:
 - The total number of virtual cores (vCPU) provisioned on the host is greater than the total number of physical cores (pCPUs).
 - The total number of provisioned VMs consume more vCPUs than the total number of pCPUs.

If an instance is over-provisioned, the hypervisor might not guarantee the resources reserved (such as CPU, memory, and others) for the instance due to hypervisor scheduling over-heads, bugs, or limitations with the hypervisor. This behavior can cause lack of CPU resources for NetScaler and might lead to the issues mentioned in the first point under **Usage guidelines**. We recommend that the administrators reduce the host's tenancy so that the total number of vCPUs provisioned on the host is lesser or equal to the total number of pCPUs.

Example:

For ESX hypervisor, if the %RDY% parameter of a VPX vCPU is greater than 0 in the `esx top` command output, the ESX host is said to have scheduling overheads, which can cause latency related issues for the VPX instance.

In such a situation, reduce the tenancy on the host so that %RDY% returns to 0 always. Alternatively, contact the hypervisor vendor to triage the reason for not honoring the resource reservation.

Commands to control the packet engine CPU usage

You can use two commands (`set ns vpxparam` and `show ns vpxparam`) to control the packet engine (non-management) CPU usage behavior of VPX instances in hypervisor and cloud environments:

- `set ns vpxparam [-cpuyield (YES | NO | DEFAULT)] [-masterclockcpu1 (YES | NO)]`

Allow each VM to use the CPU resources allocated to another VM but are not being used.

Set `ns vpxparam` parameters:

-cpuyield: Release or do not release of allocated but unused CPU resources.

- **YES:** Allow allocated but unused CPU resources to be used by another VM.
- **NO:** Reserve all CPU resources for the VM to which they've been allocated. This option shows a higher percentage in hypervisor and cloud environments for VPX CPU usage.
- **DEFAULT:** No.

Note:

On all the NetScaler VPX platforms, the vCPU usage on the host system is 100 percent. Use the `set ns vpxparam -cpuyield YES` command to override this usage.

If you want to set the cluster nodes to “yield”, you must perform the following extra configurations on CCO:

- If a cluster is formed, all the nodes are set to “yield=DEFAULT”.
- If a cluster is formed using the nodes that are already set to “yield=YES”, then the nodes are added to cluster using the “DEFAULT” yield.

Note:

If you want to set the cluster nodes to “yield=YES”, you can configure only after forming the cluster but not before the cluster is formed.

-masterclockcpu1: You can move the main clock source from CPU0 (management CPU) to CPU1. This parameter has the following options:

- **YES:** Allow the VM to move the main clock source from CPU0 to CPU1.
 - **NO:** VM uses CPU0 for the main clock source. By default, CPU0 is the main clock source.
- [show ns vpxparam](#)

This command displays the current `vpxparam` settings.

NetScaler VPX instance on Linux-KVM platform

This section contains details of configurable options and settings, and other suggestions that help you achieve optimal performance of NetScaler VPX instance on Linux-KVM platform.

- [Performance settings for KVM](#)
- [NetScaler VPX with PV network interfaces](#)
- [NetScaler VPX with SR-IOV and Fortville PCIe passthrough network interfaces](#)

Performance settings for KVM

Perform the following settings on the KVM host:

Find the NUMA domain of the NIC using the `ls topo` command:

Make sure that memory for the VPX and the CPU is pinned to the same location.

In the following output, the 10G NIC “ens2” is tied to NUMA domain #1.

```
[root@localhost ~]# lstopo-no-graphics
Machine (128GB)
  NUMANode L#0 (P#0 64GB)
    Socket L#0 + L3 L#0 (20MB)
      L2 L#0 (256KB) + L1d L#0 (32KB) + L1i L#0 (32KB) + Core L#0 + PU L#0 (P#0)
      L2 L#1 (256KB) + L1d L#1 (32KB) + L1i L#1 (32KB) + Core L#1 + PU L#1 (P#1)
      L2 L#2 (256KB) + L1d L#2 (32KB) + L1i L#2 (32KB) + Core L#2 + PU L#2 (P#2)
      L2 L#3 (256KB) + L1d L#3 (32KB) + L1i L#3 (32KB) + Core L#3 + PU L#3 (P#3)
      L2 L#4 (256KB) + L1d L#4 (32KB) + L1i L#4 (32KB) + Core L#4 + PU L#4 (P#4)
      L2 L#5 (256KB) + L1d L#5 (32KB) + L1i L#5 (32KB) + Core L#5 + PU L#5 (P#5)
      L2 L#6 (256KB) + L1d L#6 (32KB) + L1i L#6 (32KB) + Core L#6 + PU L#6 (P#6)
      L2 L#7 (256KB) + L1d L#7 (32KB) + L1i L#7 (32KB) + Core L#7 + PU L#7 (P#7)
    HostBridge L#0
      PCI 8086:1521
        Net L#0 "eno1"
      PCI 8086:1521
        Net L#1 "eno2"
      PCI 8086:1584
        Net L#2 "ens3"
      PCI 8086:1584
        Net L#3 "ens4"
      PCI 8086:8d52
        Block L#4 "sda"
        Block L#5 "sdb"
      PCI 8086:8d52
        GPU L#6 "card0"
        GPU L#7 "controlD64"
      PCI 8086:8d82
      NUMANode L#1 (P#1 64GB)
        Socket L#1 + L3 L#1 (20MB)
          L2 L#8 (256KB) + L1d L#8 (32KB) + L1i L#8 (32KB) + Core L#8 + PU L#8 (P#8)
          L2 L#9 (256KB) + L1d L#9 (32KB) + L1i L#9 (32KB) + Core L#9 + PU L#9 (P#9)
          L2 L#10 (256KB) + L1d L#10 (32KB) + L1i L#10 (32KB) + Core L#10 + PU L#10 (P#10)
          L2 L#11 (256KB) + L1d L#11 (32KB) + L1i L#11 (32KB) + Core L#11 + PU L#11 (P#11)
          L2 L#12 (256KB) + L1d L#12 (32KB) + L1i L#12 (32KB) + Core L#12 + PU L#12 (P#12)
          L2 L#13 (256KB) + L1d L#13 (32KB) + L1i L#13 (32KB) + Core L#13 + PU L#13 (P#13)
          L2 L#14 (256KB) + L1d L#14 (32KB) + L1i L#14 (32KB) + Core L#14 + PU L#14 (P#14)
          L2 L#15 (256KB) + L1d L#15 (32KB) + L1i L#15 (32KB) + Core L#15 + PU L#15 (P#15)
        HostBridge L#6
          PCI 8086:1584
            Net L#8 "ens2"
          PCI 8086:10fb
            Net L#9 "ens1f0"
          PCI 8086:10fb
            Net L#10 "ens1f1"
          PCI ffff:ffff
            Net L#11 "enp131s16"
    [root@localhost ~]# modprobe kvm-intel acpienv=N
```

Allocate the VPX memory from the NUMA domain.

The `numactl` command indicates the NUMA domain from which the memory is allocated. In the following output, around 10 GB RAM is allocated from NUMA node #0.

```
[root@localhost ~]# numactl --hardware
available: 2 nodes (0-1)
node 0 cpus: 0 1 2 3 4 5 6 7
node 0 size: 65429 MB
node 0 free: 55854 MB
node 1 cpus: 8 9 10 11 12 13 14 15
node 1 size: 65536 MB
node 1 free: 52388 MB
node distances:
node  0  1
  0:  10 21
  1:  21 10
[root@localhost ~]#
```

To change the NUMA node mapping, follow these steps.

1. Edit the .xml of the VPX on the host.

```
1 /etc/libvirt/qemu/<VPX_name>.xml
```

2. Add the following tag:

```

1 <numatune>
2 <memory mode="strict" nodeset="1"/>   ☒ This is the NUMA domain
   name
3 </numatune>

```

3. Shut down the VPX.
4. Run the following command:

```
1 virsh define /etc/libvirt/qemu/<VPX_name>.xml
```

This command updates the configuration information for the VM with the NUMA node mappings.

5. Power on the VPX. Then check the `numactl --hardware` command output on the host to see the updated memory allocations for the VPX.

```

[root@localhost ~]# numactl --hardware
available: 2 nodes (0-1)
node 0 cpus: 0 1 2 3 4 5 6 7
node 0 size: 65429 MB
node 0 free: 65429 MB
node 1 cpus: 8 9 10 11 12 13 14 15
node 1 size: 65536 MB
node 1 free: 55854 MB
node distances:
node  0  1
  0:  10  21
  1:  21  10
[root@localhost ~]#

```

Pin vCPUs of VPX to physical cores.

- To view the vCPU to pCPU mappings of a VPX, type the following command

```
1 virsh vcpupin <VPX name>
```

```

root@localhost qemu]# virsh vcpupin NS-VPX-DVR
CPU: CPU Affinity
-----
 0: 8
 1: 9
 2: 10
 3: 11

```

The vCPUs 0–4 are mapped to physical cores 8–11.

- To view the current pCPU usage, type the following command:

```
1 mpstat -P ALL 5
```

```
[root@localhost qemu]# mpstat -P ALL 5
Linux 3.10.0-123.el7.x86_64 (localhost.localdomain) 05/17/2016 _x86_64_ (16 CPU)

02:26:20 PM CPU      %usr   %nice    %sys %iowait    %irq   %soft  %steal  %guest  %gnice   %idle
02:26:25 PM all      0.24    0.00    1.67    0.00    0.00    0.00    0.00    17.32    0.00   80.78
02:26:25 PM 0        0.20    0.00    1.00    0.00    0.00    0.00    0.00    0.00    0.00   98.80
02:26:25 PM 1        0.20    0.00    0.20    0.00    0.00    0.00    0.00    0.00    0.00   99.60
02:26:25 PM 2        0.20    0.00    0.40    0.00    0.00    0.00    0.00    0.00    0.00   99.40
02:26:25 PM 3        0.00    0.00    0.20    0.00    0.00    0.00    0.00    0.00    0.00   99.80
02:26:25 PM 4        0.20    0.00    0.20    0.00    0.00    0.00    0.00    0.00    0.00   99.60
02:26:25 PM 5        0.60    0.00    0.20    0.00    0.00    0.00    0.00    0.00    0.00   99.20
02:26:25 PM 6        0.40    0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00   99.60
02:26:25 PM 7        1.62    0.00    1.42    0.00    0.00    0.00    0.00    0.00    0.00   96.96
02:26:25 PM 8        0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00  100.00
02:26:25 PM 9        0.00    0.00    7.60    0.00    0.00    0.00    0.00    92.40    0.00    0.00
02:26:25 PM 10       0.20    0.00    7.00    0.00    0.00    0.00    0.00    92.80    0.00    0.00
02:26:25 PM 11       0.00    0.00    8.60    0.00    0.00    0.00    0.00    91.40    0.00    0.00
02:26:25 PM 12       0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00  100.00
02:26:25 PM 13       0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00  100.00
02:26:25 PM 14       0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00  100.00
02:26:25 PM 15       0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00    0.00  100.00
```

In this output, 8 is management CPU, and 9–11 are packet engines.

- To change the vCPU to pCPU pinning, there are two options.
 - Change it at runtime after the VPX boots up using the following command:

```
1 virsh vcpupin <VPX name> <vCPU id> <pCPU number>
2 virsh vcpupin NetScaler-VPX-XML 0 8
3 virsh vcpupin NetScaler-VPX-XML 1 9
4 virsh vcpupin NetScaler-VPX-XML 2 10
5 virsh vcpupin NetScaler-VPX-XML 3 11
```

- To make static changes to the VPX, edit the `.xml` file as before with the following tags:

1. Edit the `.xml` file of the VPX on the host

```
1 /etc/libvirt/qemu/<VPX_name>.xml
```

2. Add the following tag:

```
1 <vcpu placement='static' cpuset='8-11'>4</vcpu>
2   <cputune>
3     <vcpupin vcpu='0' cpuset='8' />
4     <vcpupin vcpu='1' cpuset='9' />
5     <vcpupin vcpu='2' cpuset='10' />
6     <vcpupin vcpu='3' cpuset='11' />
7   </cputune>
```

3. Shut down the VPX.
4. Update the configuration information for the VM with the NUMA node mappings using the following command:

```
1 virsh define /etc/libvirt/qemu/ <VPX_name>.xml
```

5. Power on the VPX. Then check the `virsh vcpupin <VPX name>` command output on the host to see the updated CPU pinning.

Eliminate host interrupt overhead.

- Detect VM_EXITS using the `kvm_stat` command.

At the hypervisor level, host interrupts are mapped to the same pCPUs on which the vCPUs of the VPX are pinned. This might cause vCPUs on the VPX to get kicked out periodically.

To find the VM exits done by VMs running the host, use the `kvm_stat` command.

```
1 [root@localhost ~]# kvm_stat -1 | grep EXTERNAL
2 kvm_exit(EXTERNAL_INTERRUPT) 1728349 27738
3 [root@localhost ~]#
```

A higher value in the order of 1+M indicates an issue.

If a single VM is present, the expected value is 30–100 K. Anything more than that can indicate that there are one or more host interrupt vectors mapped to the same pCPU.

- Detect host interrupts and migrate host interrupts.

When you run the `concatenate` command for the “/proc/interrupts” file, it displays all the host interrupt mappings. If one or more active IRQs map to the same pCPU, its corresponding counter increments.

Move any interrupts that overlap with your NetScaler VPX’s pCPUs to unused pCPUs:

```
1 echo 0000000f > /proc/irq/55/smp_affinity
2 0000000f - - > it is a bitmap, LSBs indicates that IRQ 55 can
   only be scheduled on pCPUs 0 - 3
```

- Disable IRQ balance.

Disable IRQ balance daemon, so that no rescheduling happens on the fly.

```
1 service irqbalance stop
2 service irqbalance show - To check the status
3 service irqbalance start - Enable if needed
```

Make sure you run the `kvm_stat` command to ensure that there are not many counters.

NetScaler VPX with PV network interfaces

You can configure para-virtualization (PV), SR-IOV, and PCIe passthrough network interfaces as a **Two vNICs per pNIC** deployment. For more information, see [Two vNICs per pNIC deployment](#).


For optimal performance of PV (virtio) interfaces, follow these steps:

- Identify the NUMA domain to which the PCIe slot/NIC belongs.

- The memory and vCPU for the VPX must be pinned to the same NUMA domain.
- Vhost thread must be bound to the CPUs in the same NUMA domain.

Bind the virtual host threads to the corresponding CPUs:

1. Once the traffic is started, run the `top` command on the host.

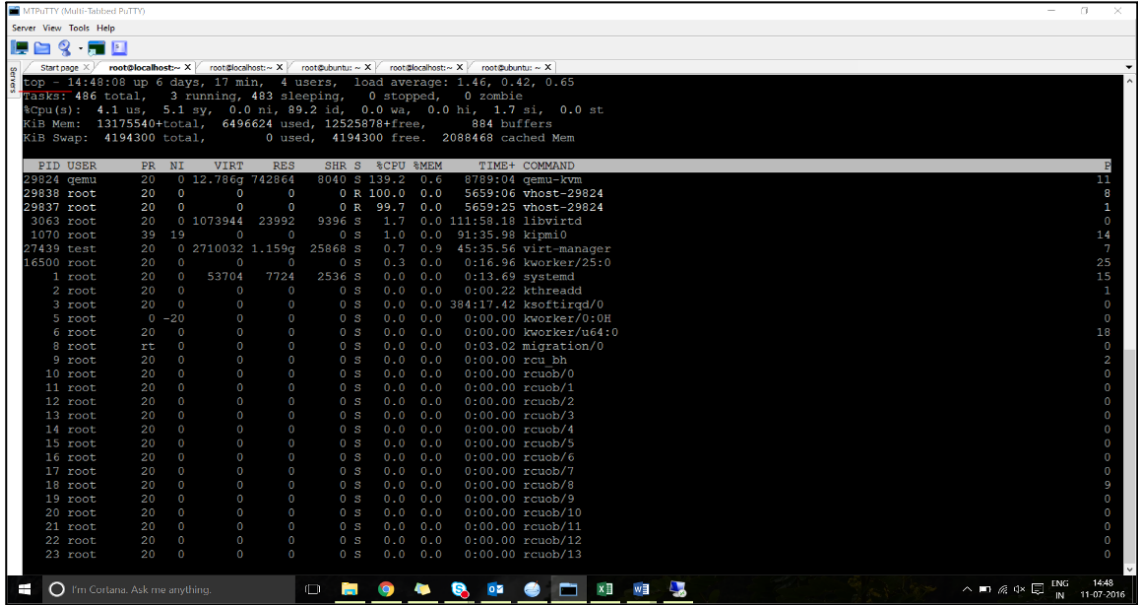

2. Identify the virtual host process (named as `vhost-<pid-of-qemu>`) affinity.
3. Bind the vHost processes to the physical cores in the NUMA domain identified earlier using the following command:

```
1 taskset -pc <core-id> <process-id>
```

Example:

```
1 taskset -pc 12 29838
```

4. The processor cores corresponding to the NUMA domain can be identified with the following command:

```
1 [root@localhost ~]# virsh capabilities | grep cpu
2 <cpu>
3 </cpu>
4 <cpus num='8'>
5 <cpu id='0' socket_id='0' core_id='0' siblings='0' />
6 <cpu id='1' socket_id='0' core_id='1' siblings='1' />
7 <cpu id='2' socket_id='0' core_id='2' siblings='2' />
8 <cpu id='3' socket_id='0' core_id='3' siblings='3' />
9 <cpu id='4' socket_id='0' core_id='4' siblings='4' />
10 <cpu id='5' socket_id='0' core_id='5' siblings='5' />
11 <cpu id='6' socket_id='0' core_id='6' siblings='6' />
12 <cpu id='7' socket_id='0' core_id='7' siblings='7' />
```

```

13     </cpus>
14
15     <cpus num='8'>
16     <cpu id='8' socket_id='1' core_id='0' siblings='8'/>
17     <cpu id='9' socket_id='1' core_id='1' siblings='9'/>
18     <cpu id='10' socket_id='1' core_id='2' siblings='10'/>
19     <cpu id='11' socket_id='1' core_id='3' siblings='11'/>
20     <cpu id='12' socket_id='1' core_id='4' siblings='12'/>
21     <cpu id='13' socket_id='1' core_id='5' siblings='13'/>
22     <cpu id='14' socket_id='1' core_id='6' siblings='14'/>
23     <cpu id='15' socket_id='1' core_id='7' siblings='15'/>
24     </cpus>
25
26     <cpuselection/>
27     <cpuselection/>

```

Bind the QEMU process to the corresponding physical core:

1. Identify the physical cores on which the QEMU process is running. For more information, see the preceding output.
2. Bind the QEMU process to the same physical cores to which you bind the vCPUs, using the following command:

```
1 taskset -pc 8-11 29824
```

NetScaler VPX with SR-IOV and Fortville PCIe passthrough network interfaces

For optimal performance of the SR-IOV and Fortville PCIe passthrough network interfaces, follow these steps:

- Identify the NUMA domain to which the PCIe slot/NIC belongs.
- The Memory and vCPU for the VPX must be pinned to the same NUMA domain.

Sample VPX XML file for vCPU and memory pinning for Linux KVM:

```

1     <domain type='kvm'>
2     <name>NetScaler-VPX</name>
3     <uuid>138f7782-1cd3-484b-8b6d-7604f35b14f4</uuid>
4     <memory unit='KiB'>8097152</memory>
5     <currentMemory unit='KiB'>8097152</currentMemory>
6     <vcpu placement='static'>4</vcpu>
7
8     <cputune>
9     <vcupin vcpu='0' cpuset='8'/>
10    <vcupin vcpu='1' cpuset='9'/>
11    <vcupin vcpu='2' cpuset='10'/>
12    <vcupin vcpu='3' cpuset='11'/>
13    </cputune>
14

```

```
15     <numatune>
16     <memory mode='strict' nodeset='1' />
17     </numatune>
18
19     </domain>
```

NetScaler VPX instance on Citrix Hypervisors

This section contains details of configurable options and settings, and other suggestions that help you achieve optimal performance of NetScaler VPX instance on Citrix Hypervisors.

- [Performance settings for Citrix Hypervisors](#)
- [NetScaler VPX with SR-IOV network interfaces](#)
- [NetScaler VPX with para-virtualized interfaces](#)

Performance settings for Citrix Hypervisors

Find the NUMA domain of the NIC using the “xl” command:

```
1 xl info -n
```

Pin vCPUs of VPX to physical cores.

```
1 xl vcpu-pin <Netsclaer VM Name> <vCPU id> <physical CPU id>
```

Check binding of vCPUs.

```
1 xl vcpu-list
```

Allocate more than 8 vCPUs to NetScaler VMs.

For configuring more than 8 vCPUs, run the following commands from the Citrix Hypervisor console:

```
1 xe vm-param-set uuid=your_vms_uuid VCPUs-max=16
2 xe vm-param-set uuid=your_vms_uuid VCPUs-at-startup=16
```

NetScaler VPX with SR-IOV network interfaces

For optimal performance of the SR-IOV network interfaces, follow these steps:

- Identify the NUMA domain to which the PCIe slot or NIC is tied to.
- Pin the Memory and vCPU for the VPX to the same NUMA domain.
- Bind the Domain-0 vCPU to the remaining CPU.

NetScaler VPX with para-virtualized interfaces

For optimal performance, two vNICs per pNIC and one vNIC per pNIC configurations are advised, as in other PV environments.

To achieve optimal performance of para-virtualized (netfront) interfaces, follow these steps:

- Identify the NUMA domain to which the PCIe slot or NIC belongs.
- Pin the memory and vCPU for the VPX to the same NUMA domain.
- Bind the Domain-0 vCPU to the remaining CPU of the same NUMA domain.
- Pin host Rx/Tx threads of vNIC to Domain-0 vCPUs.

Pin host threads to Domain-0 vCPUs:

1. Find Xen-ID of the VPX by using the `xl list` command on the Citrix Hypervisor host shell.
2. Identify host threads by using the following command:

```
1 ps -ax | grep vif <Xen-ID>
```

In the following example, these values indicate:

- **vif5.0** - The threads for the first interface allocated to VPX in XenCenter (management interface).
- **vif5.1** - The threads for the second interface assigned to VPX and so on.

```
[root@xenserver-uuffyqlx ~]# xl list
Name                               ID    Mem VCPUs    State    Time(s)
Domain-0                           0    4092    8    r----- 633321.0
Sai_VPX                             5    8192    4    r----- 1529471.0
[root@xenserver-uuffyqlx ~]#
[root@xenserver-uuffyqlx ~]#
[root@xenserver-uuffyqlx ~]# ps -ax | grep "vif5"
Warning: bad syntax, perhaps a bogus '-'? See /usr/share/doc/procps-3.2.7/FAQ
20447 pts/6    S+      0:00  grep vif5
29187 ?          S        1:09  [vif5.0-guest-rx]
29188 ?          S        0:00  [vif5.0-dealloc]
29189 ?          S       201:33  [vif5.1-guest-rx]
29190 ?          S       80:51  [vif5.1-dealloc]
29191 ?          S        0:20  [vif5.2-guest-rx]
29192 ?          S        0:00  [vif5.2-dealloc]
[root@xenserver-uuffyqlx ~]#
```

3. Pin the threads to Domain-0 vCPUs using the following command:

```
1 taskset -pc <core-id> <process-id>
```

Example:

```
1 taskset -pc 1 29189
```

Support for increasing NetScaler VPX disk space

October 28, 2024

NetScaler VPX supports a default disk space of 20 GB. If you encounter disk size constraints for various reasons, the following options are available to increase VPX disk space:

- Manually increase the primary disk size
- Dynamically increase the primary disk size
- Add a secondary disk

Note:

Increasing the NetScaler VPX disk space features are supported for both VPX on-premises and VPX cloud.

Manually increase the primary disk size on NetScaler VPX

Steps to manually increase the VPX primary disk size from Hypervisor or Cloud.

1. Shutdown the VM.
2. Extend the default disk size of 20 GB to a higher value. For example, 20 GB to 30 GB or 40 GB. For Azure, extend the default disk size of 32 GB to 64 GB.
3. Power on the VM and enter the boot prompt.
4. Log into single user mode using the “boot -s” command.
5. Verify the disk space. You can check the newly allocated disk space using “gpart show” command.
6. Note the partition name. For example, the VM partition is da0.
7. Resize the disk partition using the “gpart resize” command.

Example:

Let's resize the da0 MBR partition to include 10 GB free space by running the following command.

```
gpart resize -i 1 da0
```

8. Merge the free space to the last partition.

Example:

```
gpart resize -i 5 da0s1
```

9. Extend the filesystem to include newly allocated free space using the “growfs” command.

Example:

```
growfs /dev/da0s1e
```

10. Reboot the VM and verify the increased disk space using the “df -h” command on shell prompt.

Dynamically increase the primary disk size on NetScaler VPX

Starting from NetScaler release 14.1 build 21.x, admins can dynamically increase the primary disk size on NetScaler VPX from 20 GB up to 1 TB at once. And the subsequent time, you can again increase up to 1 TB. Shut down the VM every time you increase the primary disk size. This ensures that the system properly recognizes the new disk size, updates the partition table, and maintains system stability. To increase the disk space, extend the primary disk size to a minimum of 1 GB in the respective cloud or hypervisor UI.

Note:

You can only increase the size of the disks. Once the new size is allocated, you cannot decrease it later. Therefore, increase the disk size only if it is essential.

Add a secondary disk

Starting from NetScaler release 13.1 build 21.x, you can increase disk space on the NetScaler VPX instance by adding a second disk. When you attach the second disk, the “/var/crash” directory is automatically mounted on to this disk. The second disk is used for storing core files and logging. Existing directories that are used to store core files and log files continue to work as earlier.

Note:

Take external backup on downgrade of the NetScaler appliance to avoid loss of data.

For information on how to attach a new hard disk drive (HDD) to a NetScaler VPX instance on a cloud, see the following:

- [Azure documentation](#)

Note:

To attach a secondary disk on VPX instances deployed on Azure, ensure that the Azure VM sizes have a local temporary disk. For more information, see [Azure VM sizes with no local temporary disk](#).

- [AWS documentation](#)
- [GCP documentation](#)

Warning:

After you add a new HDD to VPX, some of the scripts that work on files, which are moved to the new HDD might fail under the following conditions:

If you use the “link” shell command to create hard links to the files, which were moved to a new HDD.

Replace all such commands with “ln -s” to use a symbolic link. Also, modify the failing scripts accordingly.

Apply NetScaler VPX configurations at the first boot of the NetScaler appliance in cloud

June 12, 2023

You can apply the NetScaler VPX configurations during the first boot of the NetScaler appliance in a cloud environment. This stage is addressed as the **preboot** stage in this document. Therefore in certain cases like ADC pooled licensing, a specific VPX instance is brought up in much lesser time. This feature is available in Microsoft Azure, Google Cloud platform, and AWS clouds.

What is user data

When you provision a VPX instance in a cloud environment, you have the option of passing user data to the instance. The user data allows you to perform common automated configuration tasks, customize the startup behaviors of instances, and run scripts after the instance starts. At the first boot, the NetScaler VPX instance performs the following tasks:

- Reads the user data.
- Interprets the configuration provided in user data.
- Applies the newly added configuration as it boots up.

How to provide preboot user data in cloud instance

You can provide preboot user data to the cloud instance in XML format. Different clouds have different interfaces for providing user data.

Provide preboot user data using the AWS console

When you provision a NetScaler VPX instance using the AWS console, navigate to **Configure Instance Details > Advanced Details**, and provide the preboot user data configuration in the **User data** field.

For detailed instructions on each of the steps, see [Deploy a NetScaler VPX instance on AWS by using the AWS web console](#).

For more information, see AWS documentation on [Launching an instance](#).

The screenshot shows the AWS console interface for configuring an EC2 instance. The 'Step 3: Configure Instance Details' page is displayed, with the 'Advanced Details' section expanded. The 'User data' field is highlighted with a yellow box, indicating where to enter preboot user data. The 'User data' field is set to 'As text' and contains '(Optional)'. Other fields in the 'Advanced Details' section include 'Metadata accessible' (Enabled), 'Metadata version' (V1 and V2 (token optional)), and 'Metadata token response hop limit' (1).

Note:

AWS IMDSv2 only mode for the preboot user data feature is supported from NetScaler VPX release 13.1.48.x and later releases.

Provide preboot user data using AWS CLI

Type the following command in the AWS CLI:

```
1 aws ec2 run-instances \
2   --image-id ami-0abcdef1234567890 \
```

```
3 --instance-type t2.micro \  
4 --count 1 \  
5 --subnet-id subnet-08fc749671b2d077c \  
6 --key-name MyKeyPair \  
7 --security-group-ids sg-0b0384b66d7d692f9 \  
8 --user-data file://my_script.txt
```

For more information, see AWS documentation on [Running instances](#).

For more information, see AWS documentation on [Using instance user data](#)

Provide preboot user data using the Azure console

When you provision a NetScaler VPX instance using Azure console, navigate to **Create a virtual machine > Advanced** tab. In the **Custom data** field, provide preboot user data configuration.

[Home](#) > [Virtual machines](#) >

Create a virtual machine

Basics Disks Networking Management **Advanced** Tags Review + create

Add additional configuration, agents, scripts or applications via virtual machine extensions or cloud-init.

Extensions

Extensions provide post-deployment configuration and automation.

Extensions ⓘ

[Select an extension to install](#)

Custom data

Pass a script, configuration file, or other data into the virtual machine while it is being provisioned. The data will be saved on the VM in a known location. [Learn more about custom data for VMs](#) ⓘ

Custom data

i Custom data on the selected image will be processed by cloud-init. [Learn more about custom data and cloud init](#) ⓘ

Host

Azure Dedicated Hosts allow you to provision and manage a physical server within our data centers that are dedicated to your Azure subscription. A dedicated host gives you assurance that only VMs from your subscription are on the host, flexibility to choose VMs from your subscription that will be provisioned on the host, and the control of platform maintenance at the level of the host. [Learn more](#)

Host group ⓘ

No host group found

Provide preboot user data using the Azure CLI

Type the following command in the Azure CLI:

```
1 az vm create \  
2   --resource-group myResourceGroup \  
3   --name MyVm \  
4   --image debian \  
5   --custom-data MyCloudInitScript.txt \  

```

Example:

```
1 az vm create --resource-group MyResourceGroup -name MyVm --image debian  
  --custom-data MyCloudInitScript.txt
```

You can pass your custom data or preboot configuration as a file to “--custom-data”parameter. In this example, the file name is **MyCloudInitScript.txt**.

For more information, see [Azure CLI documentation](#).

Provide preboot user data using the GCP console

When you provision a NetScaler VPX instance using GCP console, fill in the properties of instance. Expand **Management, security, disks, networking, sole tenancy**. Navigate to the **Management** tab. In the **Automation** section, provide preboot user data configuration in the **Startup Script** field.

For detailed information on creating the VPX instance using GCP, see [Deploy a NetScaler VPX instance on Google Cloud Platform](#).

Management Security Disks Networking Sole Tenancy

Description (Optional)

Deletion protection

Enable deletion protection
When deletion protection is enabled, instance cannot be deleted. [Learn more](#)

Reservations

Use an existing reservation when creating this VM instance

Automatically use created reservation

Automation

Startup script (Optional)
You can choose to specify a startup script that will run when your instance boots up or restarts. Startup scripts can be used to install software and updates, and to ensure that services are running within the virtual machine. [Learn more](#)

Metadata (Optional)
You can set custom metadata for an instance or project outside of the server-defined metadata. This is useful for passing in arbitrary values to your project or instance that can be queried by your code on the instance. [Learn more](#)

Key Value

+ Add item

Provide preboot user data using the gcloud CLI

Type the following command in the GCP CLI:

```
1 gcloud compute instances create INSTANCE_NAMES --metadata-from-file=
  startup-script=LOCAL_FILE_PATH
```

metadata-from-file - Reads the value or user data from a file stored at the .

For more information, see [gcloud CLI documentation](#)

Preboot user data format

The preboot user data must be provided to the cloud instance in XML format. The NetScaler preboot user data that you provide through the cloud infrastructure during boot can comprise the following four sections:

- NetScaler configuration represented with the <NS-CONFIG> tag.
- Custom bootstrapping the NetScaler represented with the <NS-BOOTSTRAP> tag.

- Storing user-scripts in NetScaler represented with the `<NS-SCRIPTS>` tag.
- Pooled licensing configuration represented with the `<NS-LICENSE-CONFIG>` tag.

You can provide the preceding four sections in any order within the ADC preboot configuration. Ensure to strictly follow the formatting shown in the following sections while providing the preboot user data.

Note:

The entire preboot user data configuration must be enclosed in the `<NS-PRE-BOOT-CONFIG>` tag as shown in the following examples.

Example 1:

```
1 <NS-PRE-BOOT-CONFIG>
2     <NS-CONFIG>           </NS-CONFIG>
3     <NS-BOOTSTRAP>       </NS-BOOTSTRAP>
4     <NS-SCRIPTS>         </NS-SCRIPTS>
5     <NS-LICENSE-CONFIG> </NS-LICENSE-CONFIG>
6 </NS-PRE-BOOT-CONFIG>
```

Example 2:

```
1 <NS-PRE-BOOT-CONFIG>
2     <NS-LICENSE-CONFIG> </NS-LICENSE-CONFIG>
3     <NS-SCRIPTS>       </NS-SCRIPTS>
4     <NS-BOOTSTRAP>     </NS-BOOTSTRAP>
5     <NS-CONFIG>        </NS-CONFIG>
6 </NS-PRE-BOOT-CONFIG>
```

Use the `<NS-CONFIG>` tag to provide the specific NetScaler VPX configurations that needs to be applied to the VPX instance at the preboot stage.

NOTE:

The `<NS-CONFIG>` section must have valid ADC CLI commands. The CLIs are not verified for the syntactic errors or format.

NetScaler configurations

Use the `<NS-CONFIG>` tag to provide the specific NetScaler VPX configurations that needs to be applied to the VPX instance at the preboot stage.

NOTE:

The `<NS-CONFIG>` section must have valid ADC CLI commands. The CLIs are not verified for the syntactic errors or format.

Example:

In the following example, the <NS-CONFIG> section has the details of the configurations. A VLAN of ID '5' is configured and bound to the SNIP (5.0.0.1). A load balancing virtual server (4.0.0.101) is also configured.

```

<NS-PRE-BOOT-CONFIG>

  <NS-CONFIG>
    add vlan 5
    add ns ip 5.0.0.1 255.255.255.0

    bind vlan 5 -IPAddress 5.0.0.1 255.255.255.0
    enable ns feature WL SP LB RESPONDER
    add server 5.0.0.201 5.0.0.201
    add service preboot_s5_201 5.0.0.201 HTTP 80 -gslb NONE -maxClient 0 -maxReq 0 -cip
DISABLED -usip
NO -useproxyport YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -TCPB NO -CMP NO
    add lb vserver preboot_v4_101 HTTP 4.0.0.101 80 -persistenceType NONE -cltTimeout 180
  </NS-CONFIG>
</NS-PRE-BOOT-CONFIG>

```

You can copy the configuration shown in the preceding screenshot from here:

```

1 <NS-PRE-BOOT-CONFIG>
2   <NS-CONFIG>
3     add vlan 5
4     add ns ip 5.0.0.1 255.255.255.0
5     bind vlan 5 -IPAddress 5.0.0.1 255.255.255.0
6     enable ns feature WL SP LB RESPONDER
7     add server 5.0.0.201 5.0.0.201
8     add service preboot_s5_201 5.0.0.201 HTTP 80 -gslb NONE -
9     maxClient 0 -maxReq 0 -cip DISABLED -usip
10    NO -useproxyport YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -
11    TCPB NO -CMP NO
12    add lb vserver preboot_v4_101 HTTP 4.0.0.101 80 -
13    persistenceType NONE -cltTimeout 180
14  </NS-CONFIG>
15 </NS-PRE-BOOT-CONFIG>

```

The NetScaler VPX instance comes up with the configuration applied in the <NS-CONFIG> section as shown in the following illustrations.

NetScaler 14.1

```

> sh ns ip
  Ipaddress      Traffic Domain  Type           Mode   Arp   Icmp   Vserver  State
  -----
1) 10.160.0.72    0               NetScaler IP   Active Enabled Enabled NA      Enabled
2) 5.0.0.1        0               SNIP           Active Enabled Enabled NA      Enabled
3) 4.0.0.101     0               VIP            Active Enabled Enabled Enabled Enabled
Done
> sh vlan
1) VLAN ID: 1
   Link-local IPv6 addr: fe80::4001:aff:fea0:48/64
   Interfaces : 1/1 1/2 LO/1
2) VLAN ID: 5      VLAN Alias Name:
   IPs :
     5.0.0.1      Mask: 255.255.255.0
3) VLAN ID: 10     VLAN Alias Name:
   Interfaces : 0/1
   IPs :
     10.160.0.72   Mask: 255.255.240.0
Done

```

```

> sh server
1) Name: 5.0.0.201      State:ENABLED
   IPAddress: 5.0.0.201
2) Name: 169.254.169.254 State:ENABLED
   IPAddress: 169.254.169.254
Done
> stat service

Service(s) Summary
      IP port      Type      State      Req/s
preb...5_201 5.0.0.201 80      HTTP      DOWN      0/s
gcpl...vice0 169.254.169.254 53      DNS       UP        0/s
Done
> sh service preboot_s5_201
preboot_s5_201 (5.0.0.201:80) - HTTP
State: DOWN
Last state change was at Tue Dec 29 07:18:28 2020
Time since last state change: 0 days, 00:05:02.820
Server Name: 5.0.0.201
Server ID : None      Monitor Threshold : 0
Max Conn: 0      Max Req: 0      Max Bandwidth: 0 kbits
Use Source IP: NO
Client Keepalive(CKA): NO
Monitoring Owner: 0
Access Down Service: NO
TCP Buffering(TCPB): NO
HTTP Compression(CMP): NO
Idle timeout: Client: 180 sec      Server: 360 sec
Client IP: DISABLED
Cacheable: NO
SC: OFF
SP: OFF
Down state flush: ENABLED
Monitor Connection Close : NONE
Appflow logging: ENABLED
Process Local: DISABLED

```

User scripts

Use the `<NS-SCRIPTS>` tag to provide any script that must be stored and ran in NetScaler VPX instance.

You can include many scripts within the `<NS-SCRIPTS>` tag. Each script must be included within the `<SCRIPT>` tag.

Each `<SCRIPT>` section corresponds to one script and contains all the details of the script using the following sub tags.

- **<SCRIPT-NAME>**: Indicates the name of the script file that must be stored.
- **<SCRIPT-CONTENT>**: Indicates the content of the file that must be stored.
- **<SCRIPT-TARGET-LOCATION>**: Indicates the designated target location where this file must be stored. If the target location is not provided, by default, the file, or script is saved in the “/nsconfig” directory.
- **<SCRIPT-NS-BOOTUP>**: Specify the commands that you use to run the script.
 - If you use the `<SCRIPT-NS-BOOTUP>` section, the commands provided in the section are stored in “/nsconfig/nsafter.sh”, and the commands are run after the packet engine boots up as part of “nsafter.sh” execution.
 - If you do not use the `<SCRIPT-NS-BOOTUP>` section, the script file is stored in the target location that you specify.

Example 1:

In this example, the `<NS-SCRIPTS>` tag contains details of only one script: script-1.sh. The “script-1.sh” script is saved at the “/var” directory. The script is populated with the specified contents, and is run with the “sh /var/script-1.sh” command after packet engine boots up.

```

<NS-PRE-BOOT-CONFIG>
  <NS-SCRIPTS>
    <SCRIPT>
      <SCRIPT-CONTENT>
        #Shell script
        echo "Running script 1" > /var/script-1.output
        date >> /var/script-1.output
      </SCRIPT-CONTENT>
      <SCRIPT-NAME> script-1.sh </SCRIPT-NAME>
      <SCRIPT-TARGET-LOCATION> /var/ </SCRIPT-TARGET-LOCATION>
      <SCRIPT-NS-BOOTUP>sh /var/script-1.sh</SCRIPT-NS-BOOTUP>
    </SCRIPT>
  </NS-SCRIPTS>
</NS-PRE-BOOT-CONFIG>

```

You can copy the configuration shown in the preceding screenshot from here:

```

1 <NS-PRE-BOOT-CONFIG>
2   <NS-SCRIPTS>
3     <SCRIPT>
4       <SCRIPT-CONTENT>
5         #Shell script
6         echo "Running script 1" > /var/script-1.output
7         date >> /var/script-1.output
8       </SCRIPT-CONTENT>
9
10      <SCRIPT-NAME> script-1.sh </SCRIPT-NAME>
11      <SCRIPT-TARGET-LOCATION> /var/ </SCRIPT-TARGET-LOCATION>
12      <SCRIPT-NS-BOOTUP>sh /var/script-1.sh</SCRIPT-NS-BOOTUP>
13    </SCRIPT>
14  </NS-SCRIPTS>
15 </NS-PRE-BOOT-CONFIG>

```

In the following snapshot, you can verify that “script-1.sh” script is saved in the “/var/” directory. The “Script-1.sh” script is run, and the output file is created appropriately.

```

root@ns#
root@ns# ls /var/
.monit.id          core               gui                nsinstall         pubkey
.monit.state      crash             install           nslog             python
.snap             cron              krb               nsproflog        run
AAA               db                learnt_data       nssynclog        safenet
app_catalog       dev              log               nstemplates     script-1.output
cloudhadaemon     download         mastools         nstmp            script-1.sh
cloudhadaemon.tgz empty            netscaler        nstrace          tmp
clusterd          file-2.txt       ns_gui           opt              vpn
configdb          gcf1            ns_sys_backup   osr_compliance  vpns
root@ns#
root@ns# cat /var/script-1.sh
#Shell script
echo "Running script 1" > /var/script-1.output
date >> /var/script-1.output
root@ns#
root@ns# cat /var/script-1.output
Running script 1
Wed Jan  6 05:25:33 UTC 2021
root@ns#
root@ns#

```

Example 2:

In the following example, the <NS-SCRIPTS> tag contains details of two scripts.

- The first script is saved as “script-1.sh” at the “/var” directory. The script is populated with the specified contents, and is run with command “sh /var/script-1.sh” after packet engine boots up.
- The second script is saved as “file-2.txt” at the “/var” directory. This file is populated with the specified contents. But it is not run because the bootup execution command <SCRIPT-NS-BOOTUP> is not provided.

```

<NS-PRE-BOOT-CONFIG>
  <NS-SCRIPTS>
    <SCRIPT>
      <SCRIPT-CONTENT>
      #Shell script
      echo "Running script 1" > /var/script-1.output
      date >> /var/script-1.output
      </SCRIPT-CONTENT>
      <SCRIPT-NAME> script-1.sh </SCRIPT-NAME>
      <SCRIPT-TARGET-LOCATION> /var/ </SCRIPT-TARGET-LOCATION>
      <SCRIPT-NS-BOOTUP>sh /var/script-1.sh</SCRIPT-NS-BOOTUP>
    </SCRIPT>
    <SCRIPT>
      <SCRIPT-CONTENT>
      This script has no execution point. It will just be saved at the target location. NS Consumer module should consume this
      script/file.
      </SCRIPT-CONTENT>
      <SCRIPT-NAME>file-2.txt</SCRIPT-NAME>
      <SCRIPT-TARGET-LOCATION>/var/</SCRIPT-TARGET-LOCATION>
    </SCRIPT>
  </NS-SCRIPTS>
</NS-PRE-BOOT-CONFIG>

```

You can copy the configuration shown in the preceding screenshot from here:

```

1 <NS-PRE-BOOT-CONFIG>
2   <NS-SCRIPTS>
3     <SCRIPT>
4       <SCRIPT-CONTENT>
5         #Shell script
6         echo "Running script 1" > /var/script-1.output
7         date >> /var/script-1.output
8       </SCRIPT-CONTENT>
9
10      <SCRIPT-NAME> script-1.sh </SCRIPT-NAME>
11      <SCRIPT-TARGET-LOCATION> /var/ </SCRIPT-TARGET-LOCATION>
12      <SCRIPT-NS-BOOTUP>sh /var/script-1.sh</SCRIPT-NS-BOOTUP>
13    </SCRIPT>
14
15    <SCRIPT>
16      <SCRIPT-CONTENT>
17        This script has no execution point.
18        It will just be saved at the target location
19        NS Consumer module should consume this script/file
20      </SCRIPT-CONTENT>
21      <SCRIPT-NAME>file-2.txt</SCRIPT-NAME>
22      <SCRIPT-TARGET-LOCATION>/var/</SCRIPT-TARGET-LOCATION>
23    </SCRIPT>
24  </NS-SCRIPTS>
25 </NS-PRE-BOOT-CONFIG>

```

In the following snapshot, you can verify that script-1.sh and file-2.txt are created in the “/var/” directory. The Script-1.sh is run, and the output file is created appropriately.

```

root@ns# ls /var/
.monit.id          core              gui               nsinstall        pubkey
.monit.state      crash            install          nslog            python
.snap            cron             krb              nsproflog        run
AAA              db              learnt_data      nssynclog        safenet
app_catalog      dev             log              nstemplates     script-1.output
cloudhadaemon    download        mastools         nstmp            script-1.sh
cloudhadaemon.tgz empty           netScaler       nstrace          tmp
clusterd        file-2.txt      ns_gui          opt              vpn
configdb        gcfl           ns_sys_backup  osr_compliance  vpns
root@ns#
root@ns# cat /var/script-1.sh
#Shell script
echo "Running script 1" > /var/script-1.output
date >> /var/script-1.output
root@ns#
root@ns# cat /var/script-1.output
Running script 1
Wed Jan  6 05:08:56 UTC 2021
root@ns#
root@ns# cat /var/file-2.txt
This script has no execution point.
It will just be saved at the target location
NS Consumer module should consume this script/file
root@ns#
root@ns#

```

Licensing

Use the `<NS-LICENSE-CONFIG>` tag to apply NetScaler pooled licensing while booting up the VPX instance. Use the `<LICENSE-COMMANDS>` tag within `<NS-LICENSE-CONFIG>` section to provide the pooled license commands. These commands must be syntactically valid.

You can specify the pooled licensing details such as, license type, capacity, and license server in the `<LICENSE-COMMANDS>` section using the standard pooled licensing commands. For more information, see [Configure NetScaler pooled capacity licensing](#).

After applying the `<NS-LICENSE-CONFIG>`, the VPX comes up with the requested edition upon boot, and VPX tries to check out the configured licenses from the license server.

- If the license checkout is successful, the configured bandwidth is applied to VPX.
- If the license checkout fails, the license is not retrieved from license server within 10–12 minutes approximately. As a result, the system reboots and enters an unlicensed state.

Example:

In the following example, after applying the `<NS-LICENSE-CONFIG>`, the VPX comes up with the Premium edition upon boot, and VPX tries to check out the configured licenses from the license server (10.102.38.214).

```
<NS-PRE-BOOT-CONFIG>
<NS-LICENSE-CONFIG>
  <LICENSE-COMMANDS>

  add ns licenseserver 10.102.38.214 -port 2800
  set ns capacity -unit gbps -bandwidth 3 edition platinum

</LICENSE-COMMANDS>
</NS-LICENSE-CONFIG>
</NS-PRE-BOOT-CONFIG>
```

You can copy the configuration shown in the preceding screenshot from here:

```
1 <NS-PRE-BOOT-CONFIG>
2   <NS-LICENSE-CONFIG>
3     <LICENSE-COMMANDS>
4       add ns licenseserver 10.102.38.214 -port 2800
5       set ns capacity -unit gbps -bandwidth 3 edition platinum
6     </LICENSE-COMMANDS>
7   </NS-LICENSE-CONFIG>
8 </NS-PRE-BOOT-CONFIG>
```

As shown in the following illustration, you can run the “show license server” command, and verify that the license server (10.102.38.214) is added to the VPX.

```
Done
> sh licenseserver
    License Server: 10.102.38.214      Port: 2800      Status:
Done
>
>
```

Bootstrapping

Use the `<NS-BOOTSTRAP>` tag to provide the custom bootstrapping information. You can use the `<SKIP-DEFAULT-BOOTSTRAP>` and `<NEW-BOOTSTRAP-SEQUENCE>` tags within the `<NS-BOOTSTRAP>` section. This section informs NetScaler appliance whether to avoid the default bootstrap or not. If the default bootstrapping is avoided, this section provides you an option to provide a new bootstrapping sequence.

Default bootstrap configuration

The default bootstrap configuration in NetScaler appliance follows these interface assignments:

- **Eth0** - Management interface with a certain NSIP address.
- **Eth1** - Client-facing interface with a certain VIP address.
- **Eth2** - Server-facing interface with a certain SNIP address.

Customize bootstrap configuration

You can skip the default bootstrap sequence and provide a new bootstrap sequence for the NetScaler VPX instance. Use the `<NS-BOOTSTRAP>` tag to provide the custom bootstrapping information. For example, you can change the default bootstrapping, where the Management interface (NSIP), Client-facing interface (VIP), and server-facing interface (SNIP) are always provided in certain order.

The following table indicates the bootstrapping behavior with the different values that are allowed for `<SKIP-DEFAULT-BOOTSTRAP>` and `<NEW-BOOTSTRAP-SEQUENCE>` tags.

<code>SKIP-DEFAULT-BOOTSTRAP</code>	<code>NEW-BOOTSTRAP-SEQUENCE</code>	Bootstrap behavior
YES	YES	The default bootstrapping behavior is skipped, and a new custom bootstrap sequence provided in the <code><NS-BOOTSTRAP></code> section is run.
YES	NO	The default bootstrapping behavior is skipped. The bootstrap commands provided in the <code><NS-CONFIG></code> section is run.

You can customize the bootstrap configuration by the following three methods:

- Provide only the interface details
- Provide the interface details along with IP addresses and subnet mask
- Provide bootstrap related commands in the `<NS-CONFIG>` section

Method 1: Custom bootstrap by specifying only the interface details

You specify the management, client-facing and server-facing interfaces but not their IP addresses and subnet masks. The IP addresses and subnet masks are populated by querying the cloud infrastructure.

Custom bootstrap example for AWS

You provide the custom bootstrap sequence as shown in the following example. For more information, see [How to provide preboot user data in cloud instance](#). Eth1 interface is assigned as the management

interface (NSIP), Eth0 interface as the client interface (VIP), and Eth2 interface as the server interface (SNIP). The `<NS-BOOTSTRAP>` section contains only the interface details and not the details of IP addresses and subnet masks.

```

<NS-PRE-BOOT-CONFIG>
  <NS-BOOTSTRAP>
    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE>YES</NEW-BOOTSTRAP-SEQUENCE>

    <MGMT-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth1</INTERFACE-NUM>
    </MGMT-INTERFACE-CONFIG>

    <CLIENT-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth0</INTERFACE-NUM>
    </CLIENT-INTERFACE-CONFIG>

    <SERVER-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth2</INTERFACE-NUM>
    </SERVER-INTERFACE-CONFIG>



  </NS-BOOT STRAP>
</NS-PRE-BOOT-CONFIG>
  
```

After the VM instance is created, in the AWS portal, you can verify the network interface properties as follows:

1. Navigate to the **AWS Portal > EC2 instances**, and select the instance that you have created by providing the custom bootstrap information.
2. In the **Description** tab, you can verify the properties of each network interface as shown in the following illustrations.

Network Interface eth1	
Interface ID	eni-021961099be6815eb
VPC ID	vpc-6b258c02
Attachment Owner	566658252593
Attachment Status	attached
Attachment Time	Fri Jan 01 11:11:23 GMT+530 2021
Delete on Terminate	false
Private IP Address	172.31.52.88
Private DNS Name	ip-172-31-52-88.ap-south-1.compute.internal

Network Interface eth0	
Interface ID	eni-039e5f3329cd879e9
VPC ID	vpc-6b258c02
Attachment Owner	566658252593
Attachment Status	attached
Attachment Time	Fri Jan 01 10:58:28 GMT+530 2021
Delete on Terminate	true
Private IP Address	172.31.5.155
Private DNS Name	ip-172-31-5-155.ap-south-1.compute.internal

Network Interface eth2	
Interface ID	eni-09e55a6cfb791e68d
VPC ID	vpc-6b258c02
Attachment Owner	566658252593
Attachment Status	attached
Attachment Time	Fri Jan 01 11:11:33 GMT+530 2021
Delete on Terminate	false
Private IP Address	172.31.76.177 
Private DNS Name	ip-172-31-76-177.ap-south-1.compute.internal 

You can run the `show ns ip` command in **ADC CLI**, and verify the network interfaces applied to the NetScaler VPX instance during the first boot of the ADC appliance.

```

> sh ns ip
-----
Ipaddress      Traffic Domain  Type           Mode   Arp   Icmp   Vserver  State
-----
1) 172.31.52.88  0              NetScaler IP  Active Enabled Enabled NA      Enabled
2) 172.31.76.177 0              SNIP         Active Enabled Enabled NA      Enabled
3) 172.31.5.155  0              VIP          Active Enabled Enabled Enabled Enabled
Done
> sh vlan
-----
1) VLAN ID: 1
   Link-local IPv6 addr: fe80::839:e2ff:feaf:4a9e/64
   Interfaces : 1/1 1/3 LO/1

2) VLAN ID: 10   VLAN Alias Name:
   Interfaces : 1/2
   IPs :
      172.31.52.88      Mask: 255.255.240.0
Done
> sh route
-----
Network      Netmask      Gateway/OwnedIP  VLAN  State  Traffic Domain  Type
-----
1) 0.0.0.0    0.0.0.0      172.31.48.1     0     UP     0               STATIC
2) 127.0.0.0  255.0.0.0    127.0.0.1      0     UP     0               PERMANENT
3) 172.31.0.0 255.255.240.0 172.31.5.155   0     UP     0               DIRECT
4) 172.31.48.0 255.255.240.0 172.31.52.88  0     UP     0               DIRECT
5) 172.31.64.0 255.255.240.0 172.31.76.177  0     UP     0               DIRECT
6) 172.31.0.2 255.255.255.255 172.31.48.1   0     UP     0               STATIC
Done

```

Custom bootstrap example for Azure

You provide the custom bootstrap sequence as shown in the following example. For more information, see [How to provide preboot user data in cloud instance](#). Eth2 interface is assigned as the management interface (NSIP), Eth1 interface as the client interface (VIP), and Eth0 interface as the server interface (SNIP). The `<NS-BOOTSTRAP>` section contains only the interface details and not the details of IP addresses and subnet masks.

```


<NS-PRE-BOOT-CONFIG>
  <NS-BOOTSTRAP>
    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE>YES</NEW-BOOTSTRAP-SEQUENCE>

    <MGMT-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth2</INTERFACE-NUM>
    </MGMT-INTERFACE-CONFIG>

    <CLIENT-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth1</INTERFACE-NUM>
    </CLIENT-INTERFACE-CONFIG>

    <SERVER-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth0</INTERFACE-NUM>
    </SERVER-INTERFACE-CONFIG>
  </NS-BOOTSTRAP>
</NS-PRE-BOOT-CONFIG>
  
```

You can see that the NetScaler VPX instance is created with three network interfaces. Navigate to the **Azure portal > VM instance > Networking**, and verify the networking properties of the three NICs as shown in the following illustrations.

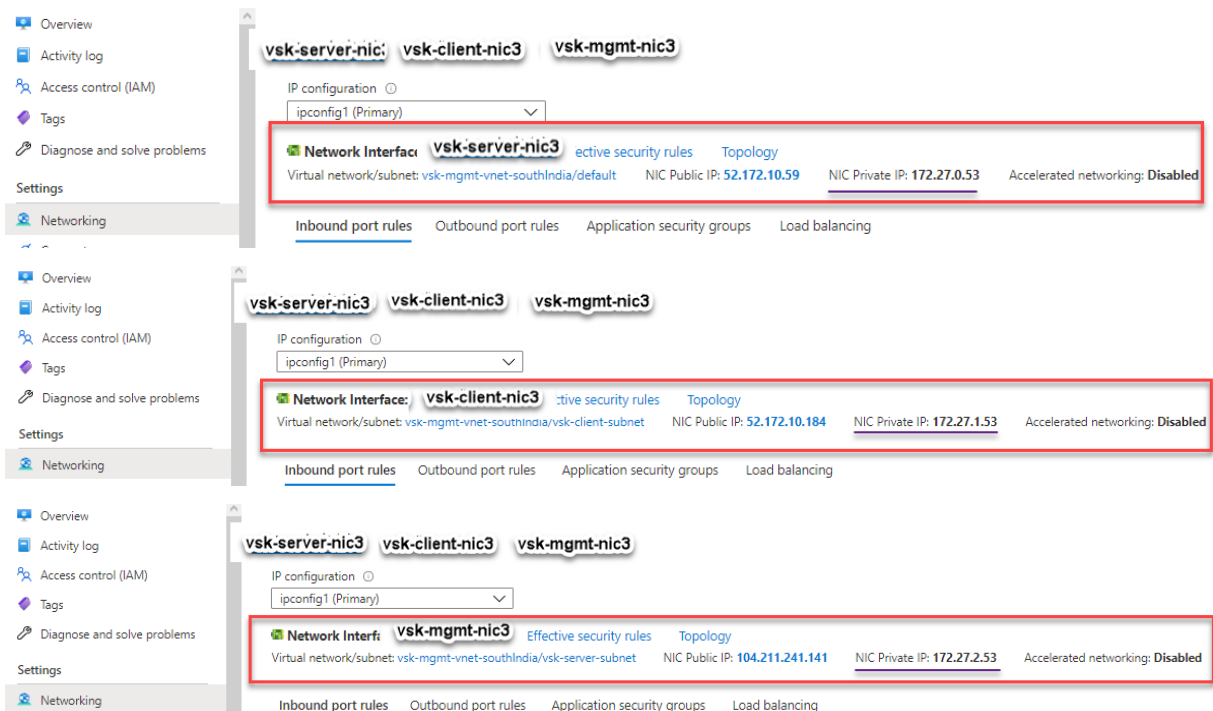

You can run the “show nsip” command in the ADC CLI, and verify that the new bootstrap sequence

specified in the <NS-BOOTSTRAP> section is applied. You can run the “show route” command to verify the subnet mask.

```
> sh ns ip
  Ippaddress      Traffic Domain  Type                Mode  Arp  Icmp  Vserver  State
  -----
1) 172.27.2.53     0               NetScaler IP       Active Enabled Enabled NA      Enabled
2) 172.27.0.53     0               SNIP                Active Enabled Enabled NA      Enabled
3) 172.27.1.53     0               VIP                  Active Enabled Enabled Enabled Enabled
Done
> sh vlan
1)  VLAN ID: 1
   Link-local IPv6 addr: fe80::20d:3aff:fec9:c26c/64
   Interfaces : 0/1 1/1 LO/1
2)  VLAN ID: 10   VLAN Alias Name:
   Interfaces : 1/2
   IPs :
      172.27.2.53      Mask: 255.255.255.0
Done
> sh route
  Network      Netmask      Gateway/OwnedIP  VLAN  State  Traffic Domain  Type
  -----
1) 0.0.0.0      0.0.0.0      172.27.2.1       0      UP     0               STATIC
2) 127.0.0.0    255.0.0.0    127.0.0.1        0      UP     0               PERMANENT
3) 172.27.0.0   255.255.255.0 172.27.0.53      0      UP     0               DIRECT
4) 172.27.1.0   255.255.255.0 172.27.1.53      0      UP     0               DIRECT
5) 172.27.2.0   255.255.255.0 172.27.2.53      0      UP     0               DIRECT
6) 169.254.0.0   255.255.0.0   172.27.0.1        0      UP     0               STATIC
7) 168.63.129.16 255.255.255.255 172.27.0.1        0      UP     0               STATIC
8) 169.254.169.254 255.255.255.255 172.27.0.1        0      UP     0               STATIC
Done
>
```

Custom bootstrap examples for GCP

You provide the custom bootstrap sequence as shown in the following example. For more information, see [How to provide preboot user data in cloud instance](#). Eth1 interface is assigned as the management interface (NSIP), Eth0 interface as the client interface (VIP), and Eth2 interface as the server interface (SNIP). The <NS-BOOTSTRAP> section contains only the interface details and not the details of IP addresses and subnet masks.

```

<NS-PRE-BOOT-CONFIG>
  <NS-BOOTSTRAP>
    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE>YES</NEW-BOOTSTRAP-SEQUENCE>

    <MGMT-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth1</INTERFACE-NUM>
    </MGMT-INTERFACE-CONFIG>

    <CLIENT-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth0</INTERFACE-NUM>
    </CLIENT-INTERFACE-CONFIG>

    <SERVER-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth2</INTERFACE-NUM>
    </SERVER-INTERFACE-CONFIG>

  </NS-BOOT STRAP>
</NS-PRE-BOOT-CONFIG>

```

After the VM instance is created in the GCP portal, you can verify the network interface properties as follows:

1. Select the instance that you have created by providing the custom bootstrap information.
2. Navigate to the Network interface properties and verify the NIC details as follows:

Network interfaces									
Name	Network	Subnetwork	Primary internal IP	Alias IP ranges	External IP	Network Tier	IP forwarding	Network details	
nic0	default	default	10.160.0.71	–	35.244.56.180 (ephemeral)	Premium	Off	View details	
nic1	vsk-vpc-network-1	asia-south1-subnet-1	10.128.0.40	–	35.244.40.113 (ephemeral)	Premium		View details	
nic2	vsk-vpc-network-2	asia-south1-subnet-5	10.128.4.27	–	34.93.241.147 (ephemeral)	Premium		View details	
Public DNS PTR Record									
None									

You can run the `show nsip` command in **ADC CLI**, and verify the network interfaces applied to the NetScaler VPX instance during the first boot of the ADC appliance.

```

> sh ns ip
      Ippaddress      Traffic Domain  Type
      -----
1)    10.128.4.27      0              NetScaler IP
2)    10.160.0.71      0              SNIP
3)    10.128.0.40      0              VIP
Done
> sh vlan
1)    VLAN ID: 1
      Link-local IPv6 addr: fe80::4001:aff:fea0:47/64
      Interfaces : 0/1 1/1 LO/1
2)    VLAN ID: 10     VLAN Alias Name:
      Interfaces : 1/2
      IPs :
          10.128.4.27      Mask: 255.255.255.0
Done
> sh route
      Network      Netmask      Gateway/OwnedIP  VLAN  State  Traffic Domain  Type
      -----
1)    0.0.0.0       0.0.0.0      10.128.4.1       0      UP     0              STATIC
2)    127.0.0.0     255.0.0.0    127.0.0.1        0      UP     0              PERMANENT
3)    10.128.0.0    255.255.255.0 10.128.0.40      0      UP     0              DIRECT
4)    10.128.4.0    255.255.255.0 10.128.4.27      0      UP     0              DIRECT
5)    10.160.0.0    255.255.240.0 10.160.0.71      0      UP     0              DIRECT
Done
> █

```

Method 2: Custom bootstrap by specifying the interfaces, IP addresses, and subnet masks

You specify the management, client-facing and server-facing interfaces along with their IP addresses and subnet mask.

Custom bootstrap examples for AWS

In the following example, you skip the default bootstrap and run a new bootstrap sequence for the NetScaler appliance. For the new bootstrap sequence, you specify the following details:

- **Management interface:** Interface - Eth1, NSIP - 172.31.52.88, and subnet mask - 255.255.240.0
- **Client facing interface:** Interface - Eth0, VIP - 172.31.5.155, and subnet mask - 255.255.240.0.
- **Server facing interface:** Interface - Eth2, SNIP - 172.31.76.177, and subnet mask - 255.255.240.0.


```
<NS-PRE-BOOT-CONFIG>
  <NS-BOOTSTRAP>
    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE>YES</NEW-BOOTSTRAP-SEQUENCE>
    <MGMT-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth1 </INTERFACE-NUM>
      <IP>172.31.52.88 </IP>
      <SUBNET-MASK>255.255.240.0 </SUBNET-MASK>
    </MGMT-INTERFACE-CONFIG>
    <CLIENT-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth0 </INTERFACE-NUM>
      <IP>172.31.5.155 </IP>
      <SUBNET-MASK>255.255.240.0 </SUBNET-MASK>
    </CLIENT-INTERFACE-CONFIG>
    <SERVER-INTERFACE-CONFIG>
      <INTERFACE-NUM>eth2 </INTERFACE-NUM>
      <IP>172.31.76.177 </IP>
      <SUBNET-MASK>255.255.240.0 </SUBNET-MASK>
    </SERVER-INTERFACE-CONFIG>
  </NS-BOOTSTRAP>
</NS-PRE-BOOT-CONFIG>
```

You can run the `show ns ip` command in the ADC CLI, and verify that the new bootstrap sequence specified in the `<NS-BOOTSTRAP>` section is applied. You can run the “show route” command to verify the subnet mask.

```

> sh ns ip
-----
Ipaddress      Traffic Domain  Type           Mode   Arp   Icmp   Vserver  State
-----
1) 172.31.52.88  0              NetScaler IP   Active Enabled Enabled NA      Enabled
2) 172.31.76.177 0              SNIP          Passive Enabled Enabled NA      Enabled
3) 172.31.5.155  0              VIP           Passive Enabled Enabled Enabled Enabled
Done
> sh vlan
1)  VLAN ID: 1
   Link-local IPv6 addr: fe80::839:e2ff:feaf:4a9e/64
   Interfaces : 1/1 1/3 LO/1
2)  VLAN ID: 10   VLAN Alias Name:
   Interfaces : 1/2
   IPs :
       172.31.52.88      Mask: 255.255.240.0
Done
> sh route
-----
Network        Netmask        Gateway/OwnedIP  VLAN  State  Traffic Domain  Type
-----
1) 0.0.0.0      0.0.0.0       172.31.48.1     0     UP     0              STATIC
2) 127.0.0.0   255.0.0.0     127.0.0.1       0     UP     0              PERMANENT
3) 172.31.0.0  255.255.240.0 172.31.5.155    0     UP     0              DIRECT
4) 172.31.48.0 255.255.240.0 172.31.52.88    0     UP     0              DIRECT
5) 172.31.64.0 255.255.240.0 172.31.76.177   0     UP     0              DIRECT
6) 172.31.0.2  255.255.255.255 172.31.48.1     0     UP     0              STATIC
Done

```

Custom bootstrap example for Azure

In the following example, a new bootstrap sequence for ADC is mentioned and default bootstrap is skipped. You provide the interface details along with the IP addresses and subnet masks as follows:

- Management interface (eth2), NSIP (172.27.2.53), and subnet mask (255.255.255.0)
- Client facing interface (eth1), VIP (172.27.1.53), and subnet mask (255.255.255.0)
- Server facing interface (eth0), SNIP (172.27.0.53), and subnet mask (255.255.255.0)

```

<NS-PRE-BOOT-CONFIG>

  <NS-BOOTSTRAP>
    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE>YES</NEW-BOOTSTRAP-SEQUENCE>

    <MGMT-INTERFACE-CONFIG>
      <INTERFACE-NUM> eth2 </INTERFACE-NUM>
      <IP> 172.27.2.53 </IP>
      <SUBNET-MASK> 255.255.255.0 </SUBNET-MASK>
    </MGMT-INTERFACE-CONFIG>


    <CLIENT-INTERFACE-CONFIG>
      <INTERFACE-NUM> eth1 </INTERFACE-NUM>
      <IP> 172.27.1.53 </IP>
      <SUBNET-MASK> 255.255.255.0 </SUBNET-MASK>
    </CLIENT-INTERFACE-CONFIG>


    <SERVER-INTERFACE-CONFIG>
      <INTERFACE-NUM> eth0 </INTERFACE-NUM>
      <IP> 172.27.0.53 </IP>
      <SUBNET-MASK> 255.255.255.0 </SUBNET-MASK>
    </SERVER-INTERFACE-CONFIG>

  </NS-BOOTSTRAP>
</NS-PRE-BOOT-CONFIG>

```

You can see that the NetScaler VPX instance is created with three network interfaces. Navigate to the **Azure portal > VM instance > Networking**, and verify the networking properties of the three NICs as shown in the following illustrations.

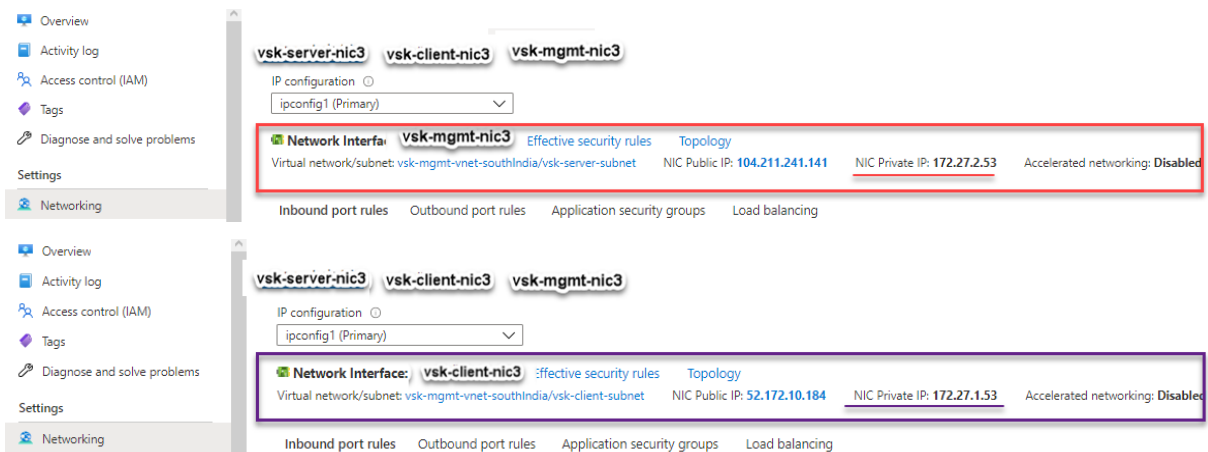

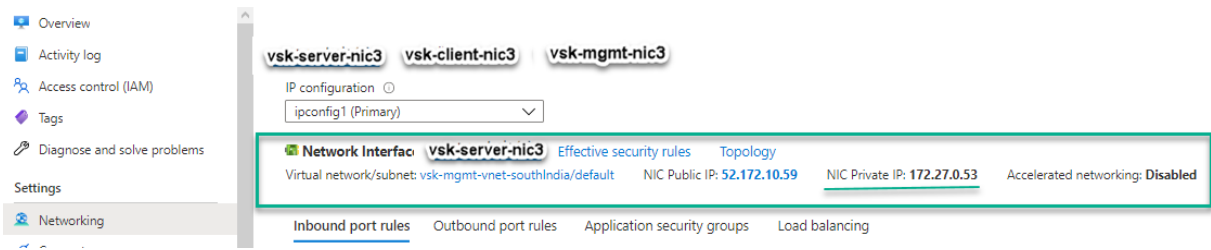

You can run the `show ns ip` command in the ADC CLI, and verify that the new bootstrap sequence specified in the `<NS-BOOTSTRAP>` section is applied. You can run the “show route” command to verify the subnet mask.

```
> sh ns ip
-----
Ipaddress      Traffic Domain  Type           Mode   Arp   Icmp   Vserver  State
-----
1) 172.27.2.53   0               NetScaler IP  Active Enabled Enabled NA      Enabled
2) 172.27.0.53   0               SNIP         Active Enabled Enabled NA      Enabled
3) 172.27.1.53   0               VIP          Active Enabled Enabled Enabled Enabled
Done
> sh vlan
1) VLAN ID: 1
   Link-local IPv6 addr: fe80::20d:3aff:fec9:c26c/64
   Interfaces : 0/1 1/1 LO/1
2) VLAN ID: 10   VLAN Alias Name:
   Interfaces : 1/2
   IPs :
      172.27.2.53      Mask: 255.255.255.0
Done
> sh route
-----
Network      Netmask      Gateway/OwnedIP  VLAN  State  Traffic Domain  Type
-----
1) 0.0.0.0    0.0.0.0      172.27.2.1      0     UP     0               STATIC
2) 127.0.0.0  255.0.0.0    127.0.0.1      0     UP     0               PERMANENT
3) 172.27.0.0 255.255.255.0 172.27.0.53    0     UP     0               DIRECT
4) 172.27.1.0 255.255.255.0 172.27.1.53    0     UP     0               DIRECT
5) 172.27.2.0 255.255.255.0 172.27.2.53    0     UP     0               DIRECT
6) 169.254.0.0 255.255.0.0  172.27.0.1     0     UP     0               STATIC
7) 168.63.129.16 255.255.255.255 172.27.0.1    0     UP     0               STATIC
8) 169.254.169.254 255.255.255.255 172.27.0.1    0     UP     0               STATIC
Done
```

Custom bootstrap example for GCP

In the following example, a new bootstrap sequence for ADC is mentioned and default bootstrap is skipped. You provide the interface details along with the IP addresses and subnet masks as follows:

- Management interface (eth2), NSIP (10.128.4.31), and subnet mask (255.255.255.0)
- Client facing interface (eth1), VIP (10.128.0.43), and subnet mask (255.255.255.0)
- Server facing interface (eth0), SNIP (10.160.0.75), and subnet mask (255.255.255.0)

```

<NS-PRE-BOOT-CONFIG>
  <NS-BOOTSTRAP>
    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE>YES</NEW-BOOTSTRAP-SEQUENCE>

    <MGMT-INTERFACE-CONFIG>
      <INTERFACE-NUM> eth2 </INTERFACE-NUM>
      <IP> 10.128.4.31 </IP>
      <SUBNET-MASK> 255.255.255.0 </SUBNET-MASK>
    </MGMT-INTERFACE-CONFIG>

    <CLIENT-INTERFACE-CONFIG>
      <INTERFACE-NUM> eth1 </INTERFACE-NUM>
      <IP> 10.128.0.43 </IP>
      <SUBNET-MASK> 255.255.255.0 </SUBNET-MASK>
    </CLIENT-INTERFACE-CONFIG>

    <SERVER-INTERFACE-CONFIG>
      <INTERFACE-NUM> eth0 </INTERFACE-NUM>
      <IP> 10.160.0.75 </IP>
      <SUBNET-MASK> 255.255.255.0 </SUBNET-MASK>
    </SERVER-INTERFACE-CONFIG>

  </NS-BOOTSTRAP>
</NS-PRE-BOOT-CONFIG>

```

After the VM instance is created in the GCP portal with the custom bootstrap, you can verify the network interface properties as follows:

1. Select the instance that you have created by providing the custom bootstrap information.
2. Navigate to the Network interface properties and verify the NIC details as follows.

Network interfaces								
Name	Network	Subnetwork	Primary internal IP	Alias IP ranges	External IP	Network Tier	IP forwarding	Network details
nic0	default	default	vsk-defnw-st-ip1 (10.160.0.75)	–	34.93.216.90 (ephemeral)	Premium	Off	View details
nic1	vsk-vpc-network-1	asia-south1-subnet-1	vsk-vpc-nw1-st-ip1 (10.128.0.43)	–	35.244.40.113 (ephemeral)	Premium		View details
nic2	vsk-vpc-network-2	asia-south1-subnet-5	vsk-nw2-st-ip-1 (10.128.4.31)	–	34.93.202.214 (ephemeral)	Premium		View details

You can run the `show nsip` command in the ADC CLI, and verify that the new bootstrap sequence specified in the `<NS-BOOTSTRAP>` section is applied. You can run the “show route” command to verify the subnet mask.

```

> sh ns ip
-----
Ipaddress      Traffic Domain  Type           Mode   Arp   Icmp   Vserver  State
-----
1) 10.128.4.31   0              NetScaler IP   Active Enabled Enabled NA      Enabled
2) 10.160.0.75   0              SNIP          Passive Enabled Enabled NA      Enabled
3) 10.128.0.43   0              VIP           Passive Enabled Enabled Enabled Enabled
Done
> sh vlan
1)  VLAN ID: 1
   Link-local IPv6 addr: fe80::4001:aff:fea0:4b/64
   Interfaces : 0/1 1/1 LO/1
2)  VLAN ID: 10   VLAN Alias Name:
   Interfaces : 1/2
   IPs :
      10.128.4.31      Mask: 255.255.255.0
Done
> sh route
-----
Network      Netmask      Gateway/OwnedIP  VLAN  State  Traffic Domain  Type
-----
1) 0.0.0.0    0.0.0.0      10.128.4.1      0     UP     0               STATIC
2) 127.0.0.0  255.0.0.0    127.0.0.1      0     UP     0               PERMANENT
3) 10.128.0.0 255.255.255.0 10.128.0.43     0     UP     0               DIRECT
4) 10.128.4.0 255.255.255.0 10.128.4.31     0     UP     0               DIRECT
5) 10.160.0.0 255.255.255.0 10.160.0.75     0     UP     0               DIRECT
Done
>

```

Method 3: Custom bootstrap by providing bootstrap related commands in the <NS-CONFIG> section

You can provide the bootstrap related commands in the <NS-CONFIG> section. In the <NS-BOOTSTRAP> section, you must specify the <NEW-BOOTSTRAP-SEQUENCE> as “No” to run the bootstrapping commands in the <NS-CONFIG> section. You must also provide the commands to assign NSIP, default route, and NSVLAN. In addition, provide the commands relevant for the cloud that you use.

Before providing a custom bootstrap, ensure that your cloud infrastructure supports a particular interface configuration.

Custom bootstrap example for AWS

In this example, bootstrap related commands are provided in the <NS-CONFIG> section. The <NS-BOOTSTRAP> section indicates that the default bootstrapping is skipped, and the custom bootstrap information provided in the <NS-CONFIG> section is run. You must also provide the commands to create NSIP, add default route, and add NSVLAN.

```

<NS-PRE-BOOT-CONFIG>
  <NS-CONFIG>
    set ns config -IPAddress 172.31.52.88 -netmask 255.255.240.0
    add route 0.0.0.0 0.0.0.0 172.31.48.1
    set ns config -nsvlan 10 -ifnum 1/2 -tagged NO
    add route 172.31.0.2 255.255.255.255 172.31.48.1

    enable ns feature WL SP LB RESPONDER
    add server 5.0.0.201 5.0.0.201
    add service preboot_s5_201 5.0.0.201 HTTP 80 -gslb NONE -maxClient 0 -maxReq 0 -cip DISABLED -usip NO -
useproxyport YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -TCPB NO -CMP NO
    add lb vserver preboot_v4_101 HTTP 4.0.0.101 80 -persistenceType NONE -cltTimeout 180

  </NS-CONFIG>

  <NS-BOOTSTRAP>
    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE> NO </NEW-BOOTSTRAP-SEQUENCE>
  </NS-BOOTSTRAP>

</NS-PRE-BOOT-CONFIG>

```

Bootstrap related commands

route to DNS server is added through default gateway

You can copy the configuration shown in the preceding screenshot from here:

```

1 <NS-PRE-BOOT-CONFIG>
2   <NS-CONFIG>
3
4     set ns config -IPAddress 172.31.52.88 -netmask 255.255.240.0
5     add route 0.0.0.0 0.0.0.0 172.31.48.1
6     set ns config -nsvlan 10 -ifnum 1/2 -tagged NO
7     add route 172.31.0.2 255.255.255.255 172.31.48.1
8
9     enable ns feature WL SP LB RESPONDER
10    add server 5.0.0.201 5.0.0.201
11    add service preboot_s5_201 5.0.0.201 HTTP 80 -gslb NONE -
maxClient 0 -maxReq 0 -cip DISABLED -usip NO - useproxyport
YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -TCPB NO
-CMP NO
12    add lb vserver preboot_v4_101 HTTP 4.0.0.101 80 -
persistenceType NONE -cltTimeout 180
13
14  </NS-CONFIG>
15
16  <NS-BOOTSTRAP>
17    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
18    <NEW-BOOTSTRAP-SEQUENCE> NO </NEW-BOOTSTRAP-SEQUENCE>
19  </NS-BOOTSTRAP>
20
21
22 </NS-PRE-BOOT-CONFIG>


```

After the VM instance is created, in the AWS portal, you can verify the network interface properties as follows:


1. Navigate to the **AWS Portal > EC2 instances**, and select the instance that you have created by providing the custom bootstrap information.
2. In the **Description** tab, you can verify the properties of each network interface as shown in the following illustrations.

Network Interface eth1	
Interface ID	eni-021961099be6815eb
VPC ID	vpc-6b258c02
Attachment Owner	566658252593
Attachment Status	attached
Attachment Time	Fri Jan 01 11:11:23 GMT+530 2021
Delete on Terminate	false
Private IP Address	172.31.52.88
Private DNS Name	ip-172-31-52-88.ap-south-1.compute.internal

Network Interface eth0	
Interface ID	eni-039e5f3329cd879e9
VPC ID	vpc-6b258c02
Attachment Owner	566658252593
Attachment Status	attached
Attachment Time	Fri Jan 01 10:58:28 GMT+530 2021
Delete on Terminate	true
Private IP Address	172.31.5.155
Private DNS Name	ip-172-31-5-155.ap-south-1.compute.internal

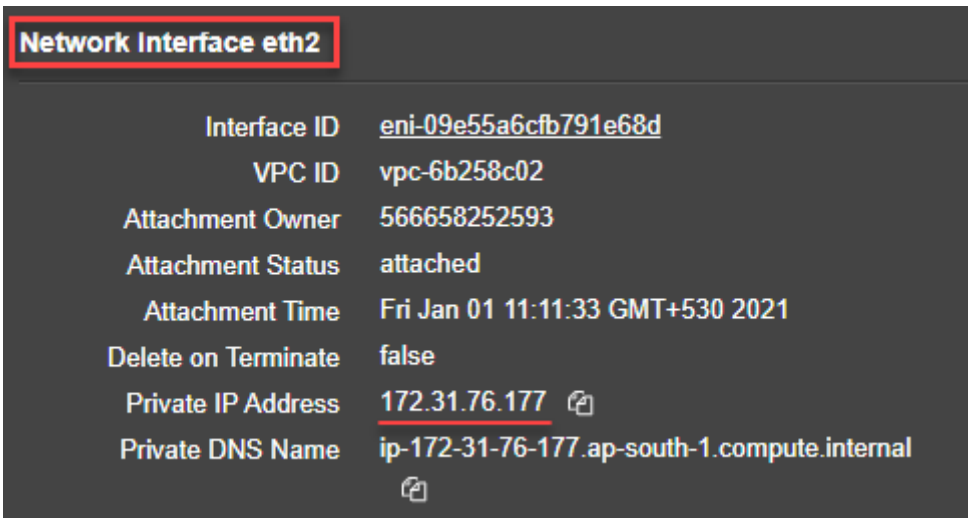

You can run the `show ns ip` command in **ADC CLI**, and verify the network interfaces applied to the NetScaler VPX instance during the first boot of the ADC appliance.

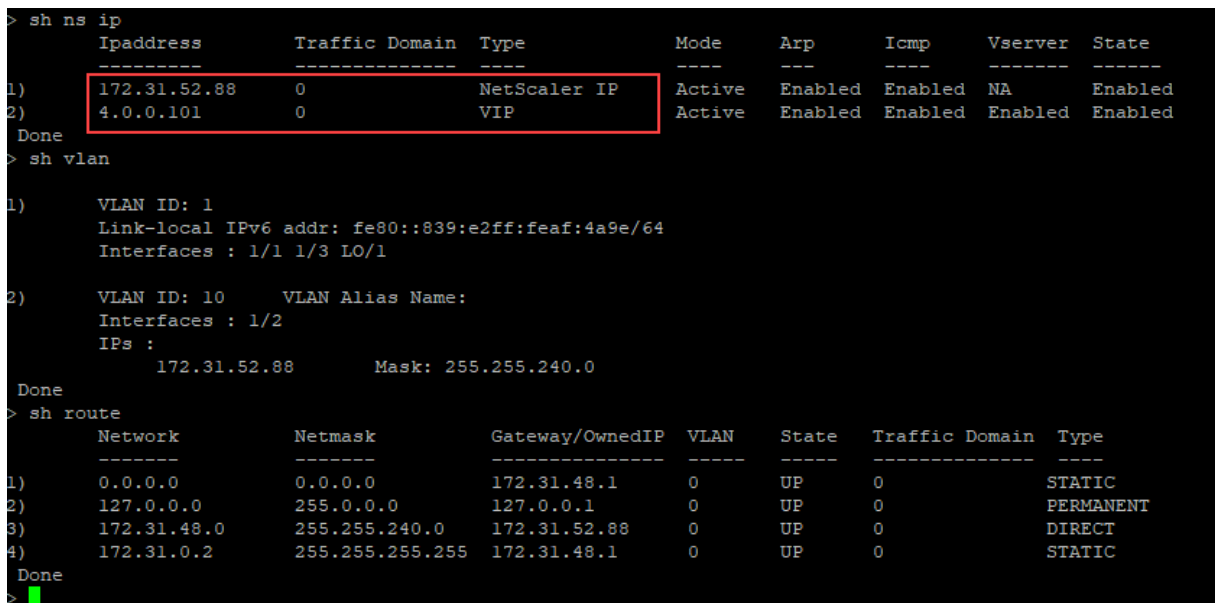

Custom bootstrap example for Azure

In this example, bootstrap related commands are provided in the `<NS-CONFIG>` section. The `<NS-BOOTSTRAP>` section indicates that the default bootstrapping is skipped, and the custom bootstrap information provided in the `<NS-CONFIG>` section is run.

Note:

For Azure cloud, Instance Metadata Server (IMDS) and DNS servers are accessible only through primary interface (Eth0). Therefore, if Eth0 interface is not used as management interface (NSIP),

Eth0 interface must at least be configured as SNIP for IMDS or DNS access to work. The route to IMDS endpoint (169.254.169.254) and DNS endpoint (168.63.129.16) through Eth0's gateway must also be added.

```

<NS-PRE-BOOT-CONFIG>

  <NS-CONFIG>

    set ns config -IPAddress 172.27.2.61 -netmask 255.255.255.0
    add route 0.0.0.0 0.0.0.0 172.27.2.1
    set ns config -nsvlan 10 -ifnum 1/2 -tagged NO
    add ns ip 172.27.0.61 255.255.255.0 -type SNIP
    add route 169.254.169.254 255.255.255.255 172.27.0.1
    add route 168.63.129.16 255.255.255.255 172.27.0.1

    add vlan 5
    bind vlan 5 -IPAddress 5.0.0.1 255.255.255.0
    enable ns feature WL SP LB RESPONDER
    add server 5.0.0.201 5.0.0.201
    add service preboot_s5_201 5.0.0.201 HTTP 80 -gslb NONE -maxClient 0 -maxReq 0 -cip DISABLED -usip
    NO -useproxyport YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -TCPB NO -CMP NO
    add lb vserver preboot_v4_101 HTTP 4.0.0.101 80 -persistenceType NONE -cltTimeout 180

  </NS-CONFIG>

  <NS-BOOTSTRAP>

    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE> NO </NEW-BOOTSTRAP-SEQUENCE>

  </NS-BOOTSTRAP>

```

```

1 <NS-PRE-BOOT-CONFIG>
2
3 <NS-CONFIG>
4
5 set ns config -IPAddress 172.27.2.61 -netmask 255.255.255.0
6 add route 0.0.0.0 0.0.0.0 172.27.2.1
7 set ns config -nsvlan 10 -ifnum 1/2 -tagged NO
8 add ns ip 172.27.0.61 255.255.255.0 -type SNIP
9 add route 169.254.169.254 255.255.255.255 172.27.0.1
10 add route 168.63.129.16 255.255.255.255 172.27.0.1
11
12 add vlan 5
13 bind vlan 5 -IPAddress 5.0.0.1 255.255.255.0
14 enable ns feature WL SP LB RESPONDER
15 add server 5.0.0.201 5.0.0.201
16 add service preboot_s5_201 5.0.0.201 HTTP 80 -gslb NONE -
    maxClient 0 -maxReq 0 -cip DISABLED -usip NO -useproxyport
    YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -TCPB NO


```

```

17         -CMP NO
18         add lb vserver preboot_v4_101 HTTP 4.0.0.101 80 -
19             persistenceType NONE -cltTimeout 180
20
21     </NS-CONFIG>
22
23     <NS-BOOTSTRAP>
24         <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
25         <NEW-BOOTSTRAP-SEQUENCE> NO </NEW-BOOTSTRAP-SEQUENCE>
26     </NS-BOOTSTRAP>
27
28 </NS-PRE-BOOT-CONFIG>

```

You can see that the NetScaler VPX instance is created with three network interfaces. Navigate to the **Azure portal > VM instance > Networking**, and verify the networking properties of the three NICs as shown in the following illustrations.

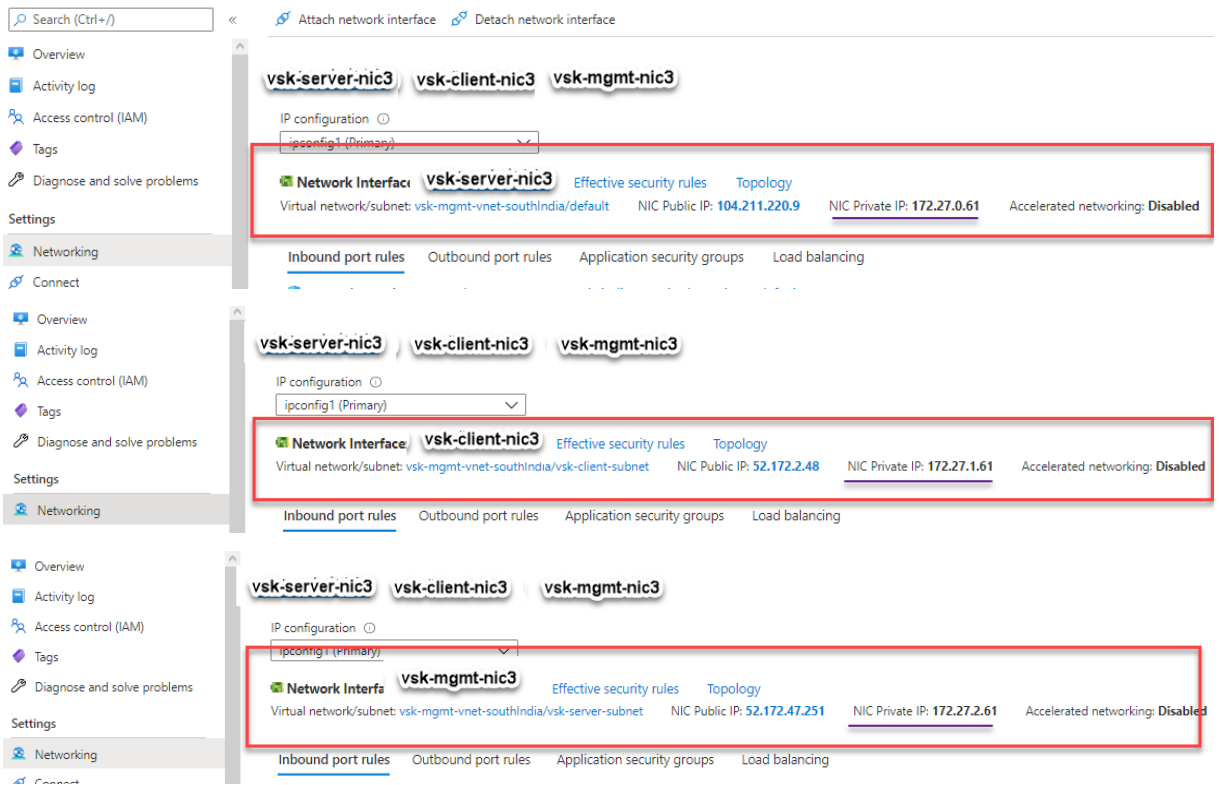

You can run the `show ns ip` command in the ADC CLI, and verify that the new bootstrap sequence specified in the `<NS-BOOTSTRAP>` section is applied. You can run the “show route” command to verify the subnet mask.

```

> sh ns ip
-----
Ipaddress      Traffic Domain  Type      Mode      Arp      Icmp      Vserver    State
-----
1) 172.27.2.61   0              NetScaler IP Active     Enabled  Enabled   NA         Enabled
2) 172.27.0.61   0              SNIP      Active     Enabled  Enabled   NA         Enabled
3) 4.0.0.101     0              VIP       Active     Enabled  Enabled   Enabled    Enabled
Done
> sh vlan
1) VLAN ID: 1
   Link-local IPv6 addr: fe80::20d:3aff:fec9:9076/64
   Interfaces : 0/1 1/1 LO/1
2) VLAN ID: 5      VLAN Alias Name:
3) VLAN ID: 10    VLAN Alias Name:
   Interfaces : 1/2
   IPs :
     172.27.2.61      Mask: 255.255.255.0
Done
> sh route
-----
Network      Netmask      Gateway/OwnedIP  VLAN  State  Traffic Domain  Type
-----
1) 0.0.0.0     0.0.0.0      172.27.2.1      0     UP     0              STATIC
2) 127.0.0.0   255.0.0.0    127.0.0.1       0     UP     0              PERMANENT
3) 172.27.0.0 255.255.255.0 172.27.0.61     0     UP     0              DIRECT
4) 172.27.2.0 255.255.255.0 172.27.2.61     0     UP     0              DIRECT
5) 169.254.0.0 255.255.0.0  172.27.0.1      0     UP     0              STATIC
6) 168.63.129.16 255.255.255.255 172.27.0.1     0     UP     0              STATIC
7) 169.254.169.254 255.255.255.255 172.27.0.1     0     UP     0              STATIC
Done

```

Custom bootstrap example for GCP

In this example, bootstrap related commands are provided in the <NS-CONFIG> section. The <NS-BOOTSTRAP> section indicates that the default bootstrapping is skipped, and the custom bootstrap information provided in the <NS-CONFIG> section is applied.

```

<NS-PRE-BOOT-CONFIG>

  <NS-CONFIG>
    set ns config -IPAddress 10.128.0.2 -netmask 255.255.255.0
    add route 0.0.0.0 0.0.0.0 10.128.0.1
    set ns config -nsvlan 10 -ifnum 1/1 -tagged NO

    enable ns feature WL SP LB RESPONDER
    add server 5.0.0.201 5.0.0.201
    add service preboot_s5_201 5.0.0.201 HTTP 80 -gslb NONE -maxClient 0 -maxReq 0 -cip
    DISABLED -usip NO -useproxyport YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -TCPB NO -CMP NO
    add lb vserver preboot_v4_101 HTTP 4.0.0.101 80 -persistenceType NONE -cltTimeout 180

  </NS-CONFIG>

  <NS-BOOTSTRAP>
    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE> NO </NEW-BOOTSTRAP-SEQUENCE>
  </NS-BOOTSTRAP>

</NS-PRE-BOOT-CONFIG>

```

You can copy the configuration shown in the preceding screenshot from here:

```

1 <NS-PRE-BOOT-CONFIG>
2
3   <NS-CONFIG>
4
5     set ns config -IPAddress 10.128.0.2 -netmask 255.255.255.0
6     add route 0.0.0.0 0.0.0.0 10.128.0.1
7     set ns config -nsvlan 10 -ifnum 1/1 -tagged NO
8
9     enable ns feature WL SP LB RESPONDER
10    add server 5.0.0.201 5.0.0.201
11    add service preboot_s5_201 5.0.0.201 HTTP 80 -gslb NONE -
12      maxClient 0 -maxReq 0 -cip DISABLED -usip NO -useproxyport
13      YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -TCPB NO
14      -CMP NO
15    add lb vserver preboot_v4_101 HTTP 4.0.0.101 80 -
16      persistenceType NONE -cltTimeout 180
17
18   </NS-CONFIG>
19
20   <NS-BOOTSTRAP>
21     <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
22     <NEW-BOOTSTRAP-SEQUENCE> NO </NEW-BOOTSTRAP-SEQUENCE>
23   </NS-BOOTSTRAP>
24
25 </NS-PRE-BOOT-CONFIG>

```

After the VM instance is created in the GCP portal with the custom bootstrap, you can verify the network interface properties as follows:

1. Select the instance that you have created by providing the custom bootstrap information.
2. Navigate to the Network interface properties and verify the NIC details as shown in the illustration.

Network interfaces					
Name	Network	Subnetwork	Primary internal IP	Alias IP ranges	External IP
nic0	default	default	10.160.0.74	–	34.93.9.79 (ephemeral)
nic1	vsk-vpc-network-1	asia-south1-subnet-1	asia-south1-subnet1-10-128-0-2 (10.128.0.2)	–	34.93.245.110 (ephemeral)
nic2	vsk-vpc-network-2	asia-south1-subnet-5	10.128.4.30	–	34.93.146.248 (ephemeral)

You can run the `show ns ip` command in **ADC CLI**, and verify that the configurations provided in the preceding `<NS-CONFIG>` section are applied at the first boot of the ADC appliance.

```
> sh ns ip
  Ipaddress      Traffic Domain  Type                Mode  Arp    Icmp    Vserver  State
  -----
1) 10.128.0.2      0               NetScaler IP        Active Enabled Enabled  NA       Enabled
2) 4.0.0.101      0               VIP                  Active Enabled Enabled  Enabled Enabled
Done
> sh vlan
1)  VLAN ID: 1
   Link-local IPv6 addr: fe80::4001:aff:fea0:4a/64
   Interfaces : 0/1 1/2 LO/1
2)  VLAN ID: 10   VLAN Alias Name:
   Interfaces : 1/1
   IPs :
      10.128.0.2      Mask: 255.255.255.0
Done
> sh route
  Network      Netmask      Gateway/OwnedIP  VLAN  State  Traffic Domain  Type
  -----
1) 0.0.0.0      0.0.0.0      10.128.0.1       0      UP     0                STATIC
2) 127.0.0.0    255.0.0.0    127.0.0.1        0      UP     0                PERMANENT
3) 10.128.0.0   255.255.255.0 10.128.0.2       0      UP     0                DIRECT
Done
```

Impact of attaching and detaching NICs in AWS and Azure

AWS and Azure provide the option to attach a network interface to an instance, and detach a network interface from an instance. Attaching or detaching interfaces might alter interface positions. Hence, Citrix recommends you to refrain from detaching interfaces from the NetScaler VPX instance. If you detach or attach an interface when custom bootstrapping is configured, NetScaler VPX instance reassigns the primary IP of the newly available interface in the management interface’s position as NSIP. If no further interfaces are available after the one you detached, then the first interface is made the management interface for the NetScaler VPX instance.

For example, a NetScaler VPX instance is brought up with 3 interfaces: Eth0 (SNIP), Eth1 (NSIP), and Eth2 (VIP). If you detach Eth1 interface from the instance, which is a management interface, ADC con-

figures the next available interface (Eth2) as the management interface. Thereby, the NetScaler VPX instance is still accessed through the primary IP of Eth2 interface. If Eth2 is also not available, then the remaining interface (Eth0) is made the management interface. Therefore, the access to NetScaler VPX instance continues to exist.

Let's consider a different assignment of interfaces as follows: Eth0 (SNIP), Eth1 (VIP), and Eth2 (NSIP). If you detach Eth2 (NSIP), because no new interface is available after Eth2, the first interface (Eth0) is made the management interface.

Improve SSL-TPS performance on public cloud platforms

May 2, 2023

You can get better SSL-TPS performance on AWS and GCP clouds by distributing the packet engine (PE) weights equally. Enabling this feature might result in a slight drop in HTTP throughput by around 10–12 %.

On AWS and GCP clouds, the NetScaler VPX instances with 10–16 vCPUs do not show any performance improvement because the PE weights are equally distributed by default.

Note:

In the Azure cloud, the PE weights are equally distributed by default. This feature does not improve any performance for the Azure instances.

Configure PE mode by using the NetScaler CLI

After setting the PE mode, you must reboot the system for the configuration changes to take effect.

At the command prompt, type:

```
1 set cpuparam pemode [CPUBOUND | Default]
```

When the PE mode is set to CPUBOUND, the PE weights are equally distributed.

When the PE mode is set to DEFAULT, the PE weights are set to default values.

Note:

This command is node specific. In a high availability or a cluster setup, you must run the command on each node. If you run the command on CLIP, the following error occurs:

```
Operation not permitted on CLIP
```

To show the state of the PE mode that is configured, run the following command:

```
1 show cpuparam
```

Example:

```
1 > show cpuparam
2     Pemode:  CPUBOUND
3     Done
```

Apply PE mode configuration at the first boot of the NetScaler appliance in the cloud

To apply the PE mode configuration at the first boot of the NetScaler appliance in the cloud, you must create a `/nsconfig/.cpubound.conf` file using the custom script. For more information, see [Apply NetScaler VPX configurations at the first boot of the NetScaler appliance in cloud](#).


Configure simultaneous multithreading for NetScaler VPX on public clouds

January 25, 2024

NetScaler uses different dedicated cores for its management and its data plane functions. One core is typically assigned to management plane functions. The rest of the available cores are assigned to data plane functions.

The following image shows a simplified illustration of a 4 core NetScaler VPX.

Figure 1. NetScaler management and data plane workload on a 4 core system

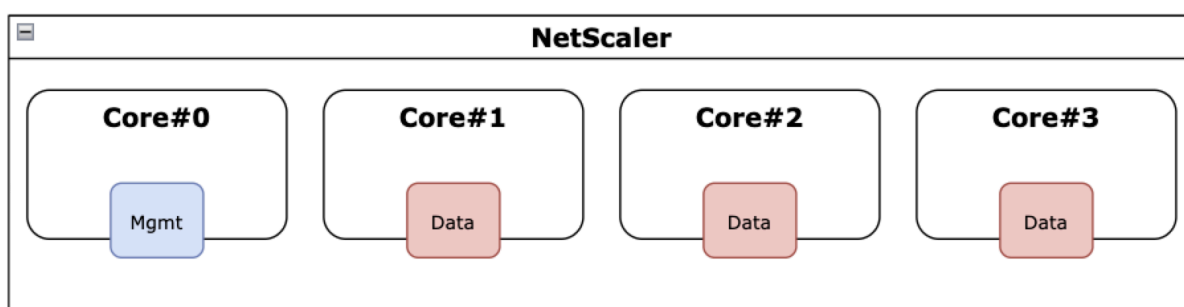


While the preceding image shows the distribution of NetScaler functions across available cores, it's not necessarily an accurate depiction of the underlying hardware. Most modern x86 CPUs provide two logical cores per physical core, through features commercially known as Intel Hyperthreading (HT) or AMD simultaneous multithreading (SMT).

The following image shows NetScaler VPX running on a modern CPU with SMT disabled. Each CPU core is split into two or more logical CPUs, commonly referred to as threads. Each thread has its own


set of replicated resources, a portion of partitioned resources, and competes for shared resources with its sibling threads.

Figure 2. NetScaler management and data plane workload on a 4 core/8 thread system with SMT disabled

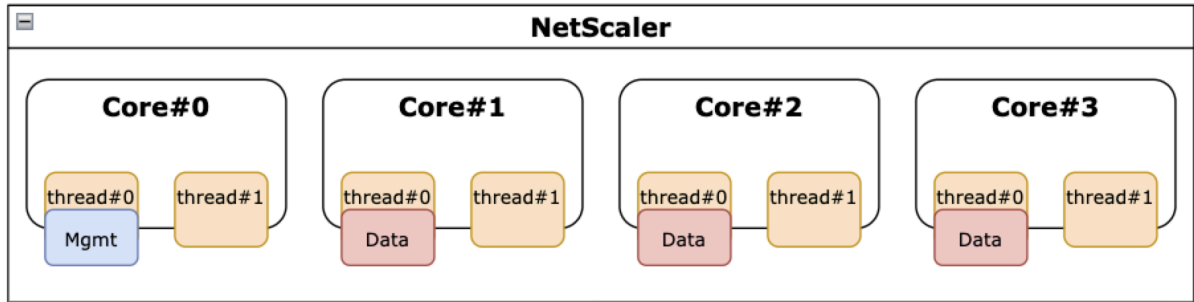

The following image shows NetScaler VPX running on a modern CPU with SMT enabled.

Figure 3. NetScaler management and data plane workload on a 4 core system with SMT enabled

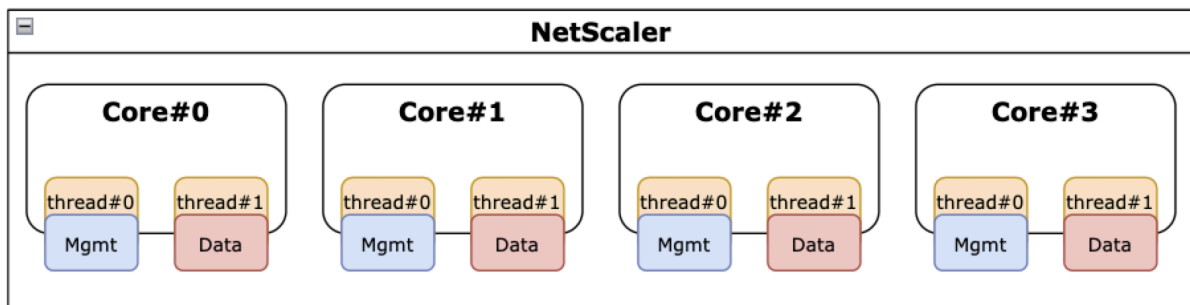

Enabling SMT improves NetScaler performance by:

- Running data plane functions on all physical cores.
- Moving the management plane functions to the sibling thread.
- Introducing a flexible resource limit mechanism to prevent management plane functions from compromising the performance of data plane functions.

SMT support matrix

The VPX platforms, cloud instance types, and NetScaler versions that support SMT are listed in the following table.

VPX platform	Instance types	NetScaler VPX version
AWS	M5, m5n, c5, c5n	14.1-12.x and later

VPX platform	Instance types	NetScaler VPX version
Azure	Any instance family with hyperthreading, for example, Ds_v4	14.1-12.x and later
GCP	e2-instances	14.1-12.x and later

Note:

By enabling the SMT feature, NetScaler VPX performance is boosted on the supported types.

Limitations

The SMT feature effectively doubles the vCPUs available to a NetScaler appliance. The licensing limits must be considered to allow NetScaler appliance to use them.

For example, consider NetScaler VPX illustrated in Figure 3. If a throughput-based licensing is used, a 10 Gbps or above license is required with the SMT feature to enable 8 vCPUs. Previously, a 1 Gbps license was sufficient for enabling 4 vCPUs. If a vCPU licensing is used, NetScaler VPX must be configured to check out licenses for double the count of vCPUs for proper operation. Contact NetScaler technical support for further guidance on this topic.

Configure SMT

Before enabling the SMT feature, ensure that your platform supports this feature. See the support matrix table in the previous section.

To enable the SMT feature, follow these steps:

1. Create an empty file named `.smt_handling` under the “/nsconfig” directory.
2. Save the current configuration.
3. Reboot NetScaler VPX instance.

```

1 nscli> shell touch /nsconfig/.smt_handling
2   Done
3 nscli> reboot
4 Are you sure you want to restart NetScaler (Y/N)? [N]:Y
5   Done

```

4. After rebooting, NetScaler indicates that the feature is both available and enabled.

```

1 smt_handling and smt_handling_active are set to " 1 "
2

```

```
3 > shell sysctl -a | grep smt_handling
4 netscaler.smt_handling_platform: 1
5 netscaler.smt_handling: 1
6 netscaler.smt_handling_active: 1
```

To disable the SMT feature, follow these steps:

1. Remove the `.smt_handling` file.
2. Reboot NetScaler VPX instance.

```
1 shell rm -f /nsconfig/.smt_handling
2 Done
3
4 reboot
5
6 Are you sure you want to restart NetScaler (Y/N)? [N]:Y
7 Done
```

3. After rebooting, NetScaler indicates that the feature is available but disabled.

```
1 > shell sysctl -a | grep smt_handling
2 netscaler.smt_handling_platform: 1
3 netscaler.smt_handling: 0
4 netscaler.smt_handling_active: 0
```

Troubleshooting

Run the `sysctl` shell command to verify the status of the SMT feature.

```
1 ```
2 > shell sysctl -a | grep smt_handling
3 >
4 ```
```

The command can return any of the following outputs.

- The SMT feature is missing.

The `sysctl` command returns no output.

- The SMT feature is not supported.

The SMT feature isn't supported for any of the following reasons:

- Your NetScaler VPX is older than 13.1-48.x or 14.1-12.x.
- Your cloud does not support SMT.
- Your VM instance type doesn't support SMT, for example, the vCPU count is more than 8.

```

1 > shell sysctl -a | grep smt_handling
2 netcaler.smt_handling_platform: 0(indicates not supported)
3 netcaler.smt_handling: 0 (indicates not enabled)
4 netcaler.smt_handling_active: 0 (indicates not active)

```

- The SMT feature is supported but not enabled.

```

1 > shell sysctl -a | grep smt_handling
2 netcaler.smt_handling_platform: 1 (available)
3 netcaler.smt_handling: 0 (not enabled)
4 netcaler.smt_handling_active: 0 (not active)

```

NetScaler sanity checker tool

June 14, 2024

The sanity checker tool assesses the health and performance of NetScaler, and also identifies the common configuration issues.

Note:

Currently, the NetScaler sanity checker tool is supported only for AWS cloud.

The NetScaler sanity checker tool also performs the following activities:

- Validates HA topology, networking, licensing, and permissions.
- Streamlines troubleshooting process.
- Enables quick resolution of issues observed in public clouds.
- Generates results in multiple formats such as plain-text logs, JSON, and HTML.

NetScaler sanity checker tool for AWS

The NetScaler sanity checker tool covers the following validations based on the deployment type.

Standalone and same zone HA deployments	Multizone HA deployment using elastic IP addresses	Multizone HA deployment using private IP addresses
<ul style="list-style-type: none"> • IAM permissions validation • License check • Storage check • Metadata route check • DNS resolution check • EC2 endpoint check 	<ul style="list-style-type: none"> • IAM permissions validation • Interfaces check • EIPs check • INC Mode check • IPSet check 	<ul style="list-style-type: none"> • IAM permissions validation • Interfaces check • Routes check • Device index check • Src/Dst check

- Default gateway check
- VLAN config check
- ARP check
- SysID check

Standalone and same zone HA deployments	Multizone HA deployment using elastic IP addresses	Multizone HA deployment using private IP addresses
---	--	--

Run the sanity checker tool using NetScaler CLI

At the command prompt type:

```
1 > Shell
2 > root@ns# sanitychecker -c [standalone | multizone]
```

After running the sanity checker tool, the following files are generated in JSON and HTML formats.

- /var/cloudsanitychecker/results.json
- /var/cloudsanitychecker/standalone.html

These files contain the detailed results of the checks performed, which can be used to identify and analyze potential issues.

Install a NetScaler VPX instance on a bare metal server

May 2, 2023

A bare metal is a fully dedicated physical server that delivers physical isolation, fully integrated into the cloud environment. It is also known as a single-tenant server. Single tenancy allows you to avoid the noisy neighbor effect. With bare metal, you do not witness the noisy neighbor effect because you are the sole user.

A bare metal server installed with a hypervisor provides you a management suite to create virtual machines on the server. The hypervisor does not run applications natively. Its purpose is to virtualize your workloads into separate virtual machines to gain the flexibility and reliability of virtualization.

Prerequisites for installing NetScaler VPX instance on bare metal servers

A bare metal server must be obtained from a cloud vendor that meets all the system requirements for the respective hypervisor.

Install the NetScaler VPX instance on bare metal servers

To install NetScaler VPX instances on a bare metal server, you must first obtain a bare metal server with adequate system resources from a cloud vendor. On that bare metal server, any of the supported hypervisors such as Linux KVM, VMware ESX, Citrix Hypervisor, or Microsoft Hyper-V must be installed and configured before deploying the NetScaler VPX instance.

For more information on the list of different hypervisors and features supported on a NetScaler VPX instance, see [Support matrix and usage guidelines](#).

For more information on installing NetScaler VPX instances on different hypervisors, see the respective documentation.

- **Citrix Hypervisor:** See [Install a NetScaler VPX instance on Citrix Hypervisor](#).
- **VMware ESX:** See [Install a NetScaler VPX instance on VMware ESX](#).
- **Microsoft Hyper-V:** See [Install a NetScaler VPX instance on Microsoft Hyper-V server](#).
- **Linux KVM platform:** See [Install a NetScaler VPX instance on Linux-KVM platform](#).

Install a NetScaler VPX instance on Citrix Hypervisor


May 2, 2023

To install VPX instances on the Citrix Hypervisor, you must first install the Hypervisor on a machine with adequate system resources. To perform the NetScaler VPX instance installation, you use Citrix XenCenter, which must be installed on a remote machine that can connect to the Hypervisor host through the network.

For more information about Hypervisor, see [Citrix Hypervisor documentation](#).

The following figure shows the bare-metal solution architecture of NetScaler VPX instance on Hypervisor.

Figure. A NetScaler VPX instance on Citrix Hypervisor

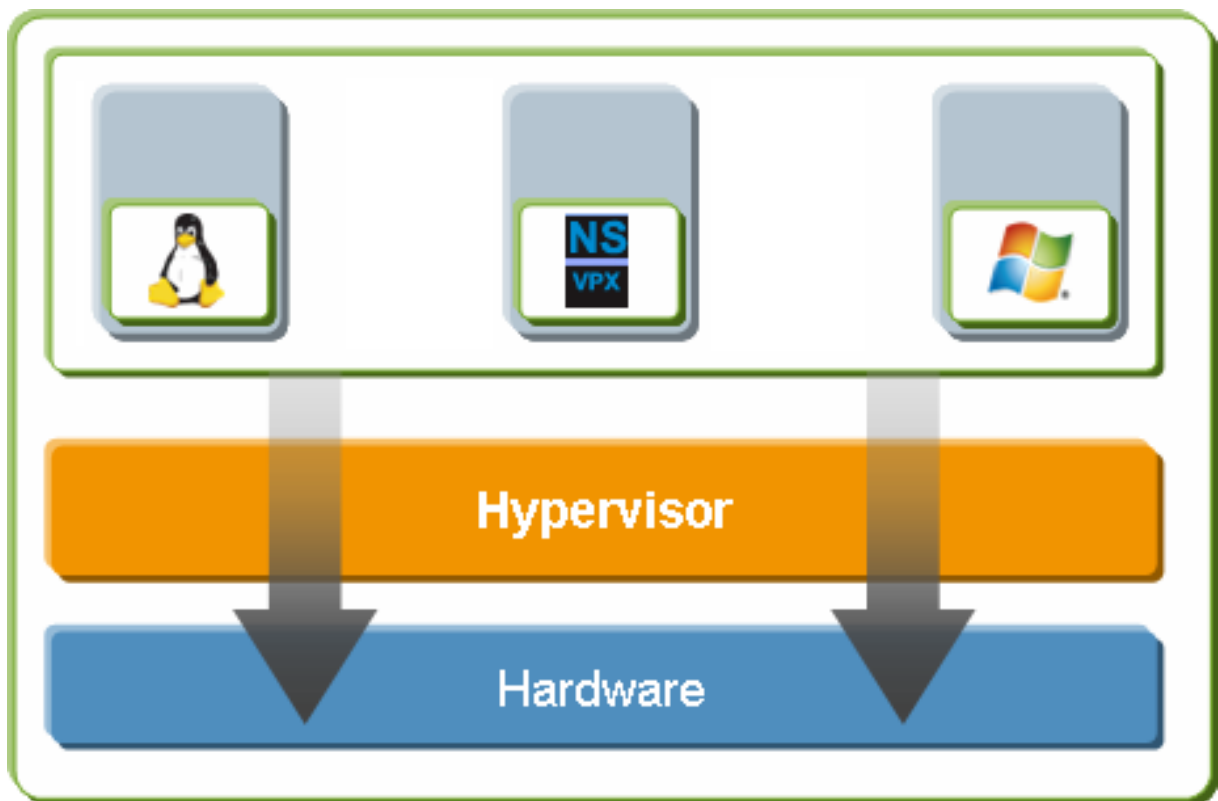

Prerequisites for installing a NetScaler VPX instance on Hypervisor

Before you begin installing a virtual appliance, do the following:

- Install Hypervisor version 6.0 or later on hardware that meets the minimum requirements.
- Install XenCenter on a management workstation that meets the minimum system requirements.
- Obtain virtual appliance license files. For more information about virtual appliance licenses, see the [NetScaler Licensing Guide](#).

Hypervisor hardware requirements

The following table describes the minimum hardware requirements for a Hypervisor platform running a NetScaler VPX instance.

Table 1. Minimum system requirements for Hypervisor running a nCore VPX instance

Component	Requirement
CPU	2 or more 64-bit x86 CPUs with virtualization assist (Intel-VT) enabled. To run the NetScaler VPX instance, hardware support for virtualization must be enabled on the Hypervisor host. Make sure that the BIOS option for virtualization support is not disabled. For more details, see BIOS documentation.
RAM	3 GB
Disk space	Locally attached storage (PATA, SATA, SCSI) with 40 GB of disk space. Note: Hypervisor installation creates a 4 GB partition for the Hypervisor host control domain. The remaining space is available for NetScaler VPX instance and other virtual machines.
NIC	One 1-Gbps NIC; recommended: two 1-Gbps NICs

For information about installing Hypervisor, see the Hypervisor documentation at <http://support.citrix.com/product/xens/>.

The following table lists the virtual computing resources that Hypervisor must provide for each nCore VPX virtual appliance.

Table 2. Minimum virtual computing resources required for running a nCore VPX instance

Component	Requirement
Memory	2 GB
Virtual CPU (vCPU)	2
Virtual network interfaces	2

Note:

For production use of NetScaler VPX instance, Citrix recommends that CPU priority (in virtual machine properties) must be set to the highest level, to improve scheduling behavior and network latency.

XenCenter system requirements

XenCenter is a Windows client application. It cannot run on the same machine as the Hypervisor host. For more information about minimum system requirements and installing XenCenter, see the following Hypervisor documents:

- [System requirements](#)
- [Install](#)

Install NetScaler VPX instances on Hypervisor by using XenCenter

After you have installed and configured Hypervisor and XenCenter, you can use XenCenter to install virtual appliances on Hypervisor. The number of virtual appliances that you can install depends on the amount of memory available on the hardware that is running Hypervisor.

To install NetScaler VPX instances on Hypervisor by using XenCenter, follow these steps:

1. Start **XenCenter** on your workstation.
2. On the **Server** menu, click **Add**.
3. In the **Add New Server** dialog box, in the host name text box, type the IP address or DNS name of the Hypervisor that you want to connect to.
4. In the **User Name** and **Password** text boxes, type the administrator credentials, and then click **Connect**. The Hypervisor name appears in the navigation pane with a green circle, which indicates that the Hypervisor is connected.
5. In the navigation pane, click the name of the Hypervisor on which you want to install the NetScaler VPX instance.
6. On the **VM** menu, click **Import**.
7. In the **Import** dialog box, in the Import file name, browse to the location at which you saved the NetScaler VPX instance `.xva` image file. Make sure that the Exported VM option is selected, and then click **Next**.
8. Select the Hypervisor on which you want to install the virtual appliance, and then click **Next**.
9. Select the local storage repository in which to store the virtual appliance, and then click Import to begin the import process.
10. You can add, modify, or delete the virtual network interfaces as required. When finished, click Next.
11. Click **Finish** to complete the import process.

Note: To view the status of the import process, click the **Log** tab.

12. If you want to install another virtual appliance, repeat steps 5 through 11.

Note:

After the initial configuration of the VPX instance, if you want to upgrade the appliance to the latest software release, see [Upgrading or Downgrading the System Software](#).

Configure VPX instances to use single root I/O virtualization (SR-IOV) network interfaces

May 2, 2023

After you have installed and configured a NetScaler VPX instance on Citrix Hypervisor, you can configure the virtual appliance to use SR-IOV network interfaces.

The following NICs are supported:

- Intel 82599 10G
- Intel X710 10G
- Intel XL710 40G

Limitations

Citrix Hypervisor does not support some features on SR-IOV interfaces. The limitations with Intel 82599, Intel X710, and Intel XL710 NICs are listed in the following sections.

Limitations for Intel 82599 NIC

Intel 82599 NIC does not support the following features:

- L2 mode switching
- Clustering
- Admin partitioning [Shared VLAN mode]
- High Availability [Active - Active mode]
- Jumbo frames
- IPv6 protocol in Cluster environment

Limitations for Intel X710 10G and Intel XL710 40G NICs

Intel X710 10G and Intel XL710 40G NICs have the following limitations:

- L2 mode switching is not supported.
- Admin partitioning (shared VLAN mode) is not supported.
- In a cluster, Jumbo frames are not supported when the XL710 NIC is used as a data interface.
- Interface list reorders when interfaces are disconnected and reconnected.
- Interface parameter configurations such as speed, duplex, and auto negotiations are not supported.
- For both Intel X710 10G and Intel XL710 40G NICs, the interface comes up as 40/x interface.
- Up to only 16 Intel X710/XL710 SR-IOV interfaces can be supported on a VPX instance.

Note:

For Intel X710 10G and Intel XL710 40G NICs to support IPv6, enable trust mode on the Virtual Functions (VFs) by typing the following command on the Citrix Hypervisor host:

```
# ip link set <PNIC> <VF> trust on
```

Example:

```
# ip link set ens785f1 vf 0 trust on
```

Prerequisites for Intel 82599 NIC

On the Citrix Hypervisor host, ensure that you:

- Add the Intel 82599 NIC (NIC) to the host.
- Block list the `ixgbevf` driver by adding the following entry to the `/etc/modprobe.d/blacklist.conf` file:
blacklist ixgbevf
- Enable SR-IOV Virtual Functions (VFs) by adding the following entry to the `/etc/modprobe.d/ixgbe` file:
options ixgbe max_vfs=<number_of_VFs>
where `<number_VFs>` is the number of SR-IOV VFs that you want to create.
- Verify that SR-IOV is enabled in BIOS.

Note:

IXGBE driver version 3.22.3 is recommended.

Assign Intel 82599 SR-IOV VFs to the NetScaler VPX instance by using the Citrix Hypervisor host

To assign an Intel 82599 SR-IOV VFs to NetScaler VPX instance, follow these steps:

1. On the Citrix Hypervisor host, use the following command to assign the SR-IOV VFs to the NetScaler VPX instance:

```
xe host-call-plugin plugin=iovirt host-uuid=<Xen host UUID> fn=assign_free_vf args:uuid=<NetScaler VM UUID> args:ethdev=<interface name> args:mac=<Mac addr>
```

Where:

- <Xen host UUID> is the UUID of the Citrix Hypervisor host.
- <NetScaler VM UUID> is the UUID of the NetScaler VPX instance.
- <interface name> is the interface for the SR-IOV VFs.
- <MAC address > is the MAC address of the SR-IOV VF.

Note

Specify the MAC address that you want use in the args:Mac= parameter, if not specified, the `iovirt` script randomly generates and assigns a MAC address. Also, if you want to use the SR-IOV VFs in Link Aggregation mode, make sure that you specify the MAC address as 00:00:00:00:00:00.

2. Boot the NetScaler VPX instance.

Unassign Intel 82599 SR-IOV VFs to the NetScaler VPX instance by using the Citrix Hypervisor host

If you have assigned an incorrect SR-IOV VFs or if you want to modify an assigned SR-IOV VFs, you need to unassign and reassign the SR-IOV VFs to the NetScaler VPX instance.

To unassign SR-IOV network interface assigned to a NetScaler VPX instance, follow these steps:

1. On the Citrix Hypervisor host, use the following command to assign the SR-IOV VFs to the NetScaler VPX instance and reboot the NetScaler VPX instance:

```
xe host-call-plugin plugin=iovirt host-uuid=<Xen_host_UUID> fn=unassign_all args:uuid=<Netscaler_VM_UUID>
```

Where:

- <Xen_host_UUID> - The UUID of the Citrix Hypervisor host.
- <Netscaler_VM_UUID> - The UUID of the NetScaler VPX instance

2. Boot the NetScaler VPX instance.

Assign Intel X710/XL710 SR-IOV VFs to the NetScaler VPX instance by using the Citrix Hypervisor host

To assign an Intel X710/XL710 SR-IOV VF to the NetScaler VPX instance, follow these steps:

1. Run the following command on the Citrix Hypervisor host to create a network.

```
1 xe network-create name=label=<network-name>
```

Example:

```
1 xe network-create name=label=SR-IOV-NIC-18 8ee59b73-7319-6998-cd69-
  -b9fa3e8d7503
```

2. Determine the PIF Universal Unique Identifier (UUID) of the NIC on which the SR-IOV network is to be configured.

```
1 xe pif-list
2
3         uuid ( RO) : e2874343-f1de-1fa7-8fef-98547c348783
4         device ( RO): eth18
5 currently-attached ( RO): true
6         VLAN ( RO): -1
7         network-uuid ( RO): f865bd85-44dd-b865-ab65-dcd6ae28c16e
```

3. Configure the network as an SR-IOV network. The following command also returns the UUID of the newly created SR-IOV network:

```
1 xe network-sriov-create network-uuid=<network-uuid> pif-uuid=<
  physical-pif-uuid>
```

Example:

```
1 xe network-sriov-create network-uuid=8ee59b73-7319-6998-cd69-
  b9fa3e8d7503 pif-uuid=e2874343-f1de-1fa7-8fef-98547
  c3487831629b44f-832a-084e-d67d-5d6d314d5e0f
```

To get more information on the SR-IOV network parameters, run the following command:

```
1 [root@citrix-XS82-TOP0 ~]# xe network-sriov-param-list uuid=1629
  b44f-832a-084e-d67d-5d6d314d5e0f
2
3         uuid ( RO): 1629b44f-832a-084e-d67d-5d6d314d5e0f
4         physical-PIF ( RO): e2874343-f1de-1fa7-8fef-98547c348783
5         logical-PIF ( RO): 85d52771-5814-c62d-45fa-f37b536144ff
6         requires-reboot ( RO): false
7         remaining-capacity ( RO): 32
```

4. Create a virtual interface (VIF) and attach it to the target VM.

```
1 xe vif-create device=0 mac=b2:61:fc:ae:00:1d network-uuid=8ee59b73
  -7319-6998-cd69-b9fa3e8d7503 vm-uuid=b507e8a6-f5ca-18eb-561d
  -308218a9dd68
2 3e1e2e58-b2ad-6dc0-61d4-1d149c9c6466
```

NOTE: The NIC index number of the VM must start with 0.

Use the following command to find the VM UUID:

```
1 [root@citrix-XS82-TOP0 ~]# xe vm-list
2 uuid ( RO): b507e8a6-f5ca-18eb-561d-308218a9dd68
3 name-label ( RW): sai-vpx-1
4 power-state ( RO): halted
```

Remove Intel X710/XL710 SR-IOV VFs from the NetScaler instance by using the Citrix Hypervisor host

To remove an Intel X710/XL710 SR-IOV VF from a NetScaler VPX instance, follow these steps:

1. Copy the UUID for the VIF that you want to destroy.
2. Run the following command on the Citrix Hypervisor host to destroy the VIF.

```
1 xe vif-destroy uuid=<vif-uuid>
```

Example:

```
1 [root@citrix-XS82-TOP0 ~]# xe vif-destroy uuid=3e1e2e58-b2ad-6dc0
  -61d4-1d149c9c6466
```

Configure link aggregation on the SR-IOV interface

To use the SR-IOV virtual functions (VFs) in link aggregation mode, you need to disable spoof checking for virtual functions that you have created.

On the Citrix Hypervisor host, use the following command to disable spoof checking:

```
ip link set <interface_name> vf <VF_id> spoofchk off
```

Where:

- <interface_name> is the interface name.
- <VF_id> is the virtual function ID.

After disabling spoof checking for all the virtual function that you have created, restart the NetScaler VPX instance, and configure link aggregation. For instructions, see [Configure link aggregation](#).

Important

While you are assigning the SR-IOV VFs to the NetScaler VPX instance, make sure that you specify MAC address 00:00:00:00:00:00 for the VFs.

Configure VLAN on the SR-IOV interface

You can configure VLAN on the SR-IOV virtual functions. For instructions, see [Configuring a VLAN](#).

Important

Make sure that the Citrix Hypervisor host does not contain VLAN settings for the VF interface.

Install a NetScaler VPX instance on VMware ESX

October 1, 2024

Before installing NetScaler VPX instances on VMware ESX, make sure the VMware ESX Server is installed on a machine with adequate system resources. To install a NetScaler VPX instance on VMware ESXi, you use the VMware vSphere client. The client or tool must be installed on a remote machine that can connect to VMware ESX through the network.

This section includes the following topics:

- Prerequisites
- Installing a NetScaler VPX instance on VMware ESX

Important:

You can't install standard VMware Tools or upgrade the VMware Tools version available on a NetScaler VPX instance. VMware Tools for a NetScaler VPX instance are delivered as part of the NetScaler software release.

Prerequisites

Before you begin installing a virtual appliance, do the following:

- Install VMware ESX on hardware that meets the minimum requirements.
- Install VMware Client on a management workstation that meets the minimum system requirements.
- Download the NetScaler VPX appliance setup files.

- Create a virtual switch and attach the physical NIC to the virtual switch.
- Add port group and attach to the virtual switch.
- Attach the port group to the VM.
- Obtain VPX license files. For more information about NetScaler VPX instance licenses, see [Licensing overview](#).

VMware ESX hardware requirements

The following table describes the minimum system requirements for VMware ESX servers running NetScaler VPX nCore virtual appliance.

Table 1. Minimum system requirements for a VMware ESX server running a NetScaler VPX instance

Component	Requirement
CPU	2 or more 64-bit x86 CPUs with virtualization assist (Intel-VT) enabled. To run a NetScaler VPX instance, hardware support for virtualization must be enabled on the VMware ESX host. Make sure that the BIOS option for virtualization support isn't disabled. For more information, see your BIOS documentation. From the NetScaler 13.1 release onwards, the NetScaler VPX instance on VMware ESXi hypervisor supports AMD processors.
RAM	2 GB VPX. For critical deployments, we do not recommend 2 GB RAM for VPX because the system operates in a memory-constrained environment. This might lead to scale, performance, or stability related issues. Recommended is 4 GB RAM or 8 GB RAM.
Disk space	20 GB more than the minimum server requirements from VMware for setting up ESXi. See VMware documentation for minimum server requirements.
Network	One 1-Gbps NIC (NIC); Two 1-Gbps NICs recommended

For information about installing VMware ESX, see [VMware documentation](#).

For the SR-IOV network interface or PCI passthrough support, ensure that the following processors and settings are enabled:

- Intel processors supporting Intel-VT
- AMD processors supporting AMD-V
- I/O Memory Management Unit (IOMMU) or SR-IOV is enabled in BIOS

The following NICs are supported in SR-IOV mode:

- Mellanox ConnectX-4 NIC, starting from NetScaler release 13.1-42.x onwards
- Intel 82599 NIC

The following table lists the virtual computing resources that the VMware ESX server must provide for each VPX nCore virtual appliance.

Table 2. Minimum virtual computing resources required for running a NetScaler VPX instance

Component	Requirement
Memory	4 GB
Virtual CPU (vCPU)	2
Virtual network interfaces	In ESX, you can install a maximum of 10 virtual network interfaces if the VPX hardware is upgraded to version 7 or higher.
Disk space	20 GB

Note:

This is in addition to any disk requirements for the hypervisor.

For production use of VPX virtual appliance, the full memory allocation must be reserved. CPU cycles (in MHz) equal to at least the speed of one CPU core of the ESX must be reserved.

VMware vSphere client system requirements

VMware vSphere is a client application that can run on Windows and Linux operating systems. It can't run on the same machine as the VMware ESX server. The following table describes the minimum system requirements.

Table 3. Minimum system requirements for VMware vSphere client installation

Component	Requirement
Operating system	See VMware documentation for detailed requirements.
CPU	750 MHz; 1 gigahertz (GHz) or faster recommended
RAM	1 GB. 2 GB recommended
NIC (NIC)	100 Mbps or faster NIC

OVF Tool 1.0 system requirements

OVF Tool is a client application that can run on Windows and Linux systems. It can't run on the same machine as the VMware ESX server. The following table describes the minimum system requirements.

Table 4. Minimum system requirements for OVF tool installation

Component	Requirement
Operating system	See VMware documentation for detailed information on OVF Tools.
CPU	750 MHz minimum, 1 GHz or faster recommended
RAM	1 GB Minimum, 2 GB recommended
NIC (NIC)	100 Mbps or faster NIC

For details on installing OVF, search for the “OVF Tool User’s Guide” PDF available at [VMware documentation](#).

Downloading the NetScaler VPX setup files

The NetScaler VPX instance setup package for VMware ESX follows the Open Virtual Machine (OVF) format standard. You can download the files from the Citrix website. You need a Citrix account to log on. If you do not have a Citrix account, access the home page at <http://www.citrix.com>, click the **New Users link**, and follow the instructions to create a Citrix account.

Once logged on, navigate the following path from the Citrix home page:

Citrix.com > **Downloads > NetScaler > Virtual Appliances.**

Copy the following files to a workstation on the same network as the ESX server. Copy all three files into the same folder.

- NSVPX-ESX-<release number>-<build number>-disk1.vmdk (for example, NSVPX-ESX-13.0-71.44_nc_64-disk1.vmdk)
- NSVPX-ESX-<release number>-<build number>.ovf (for example, NSVPX-ESX-13.0-71.44_nc_64.ovf)
- NSVPX-ESX-<release number>-<build number>.mf (for example, NSVPX-ESX-13.0-71.44_nc_64.mf)

Install a NetScaler VPX instance on VMware ESX

After you have installed and configured VMware ESX, you can use the VMware vSphere client to install virtual appliances on the VMware ESX server. The number of virtual appliances that you can install depends on the amount of memory available on the hardware that is running VMware ESX.

To install NetScaler VPX instances on VMware ESX by using VMware vSphere Client, follow these steps:

1. Start the VMware vSphere client on your workstation.
2. In the **IP address / Name** text box, type the IP address of the VMware ESX server that you want to connect to.
3. In the **User Name** and **Password** text boxes, type the administrator credentials, and then click **Login**.
4. On the **File** menu, click **Deploy OVF Template**.
5. In the **Deploy OVF Template** dialog box, in **Deploy from file**, browse to the location at which you saved the NetScaler VPX instance setup files, select the .ovf file, and click **Next**.
6. Map the networks shown in the virtual appliance OVF template to the networks that you configured on the ESX host. Click **Next** to start installing a virtual appliance on VMware ESX. When installation is complete, a pop-up window informs you of the successful installation.
7. You are now ready to start the NetScaler VPX instance. In the navigation pane, select the NetScaler VPX instance that you have installed, and from the right-click menu, select **Power On**.
8. After the VM is booted, from the console, configure the NetScaler IP, Netmask, and Gateway addresses. When you complete the configuration, select the **Save and Quit** option in the console.
9. To install another virtual appliance, repeat from Step 6 through Step 8.

Note:

By default, the NetScaler VPX instance uses E1000 network interfaces.

After the installation, you can use the vSphere client or vSphere Web Client to manage virtual appliances on VMware ESX.

For the VLAN tagging feature to work, on the VMware ESX, set the port group's VLAN ID to All

(4095) on the vSwitch of VMware ESX server.

Migrate a NetScaler VPX instance by using VMware vMotion

You can migrate a NetScaler VPX instance by using VMware vSphere vMotion.

Follow these usage guidelines:

- VMware does not support the vMotion feature on virtual machines configured with PCI Passthrough and SR-IOV interfaces.
- Supported interfaces are E1000 and VMXNET3. To use vMotion on your VPX instance, ensure that the instance is configured with a supported interface.
- For more information about how to migrate an instance by using VMware vMotion, see the VMware documentation.


Configure a NetScaler VPX instance to use VMXNET3 network interface

June 27, 2024


After you have installed and configured the NetScaler VPX instance on the VMware ESX, you can use the VMware vSphere web client to configure the virtual appliance to use VMXNET3 network interfaces.

To configure NetScaler VPX instances to use VMXNET3 network interfaces by using the VMware vSphere Web Client:

1. In the vSphere Web Client, select Hosts and Clusters.
2. Upgrade the Compatibility setting of the NetScaler VPX instance to ESX, as follows:
 - a. Power off the NetScaler VPX instance.
 - b. Right-click the NetScaler VPX instance and select Compatibility > Upgrade VM Compatibility.
 - c. In the Configure VM Compatibility dialog box, select ESXi 5.5 and later from the Compatible with drop-down list and click OK.
3. Right-click on the NetScaler VPX instance and click Edit Settings.

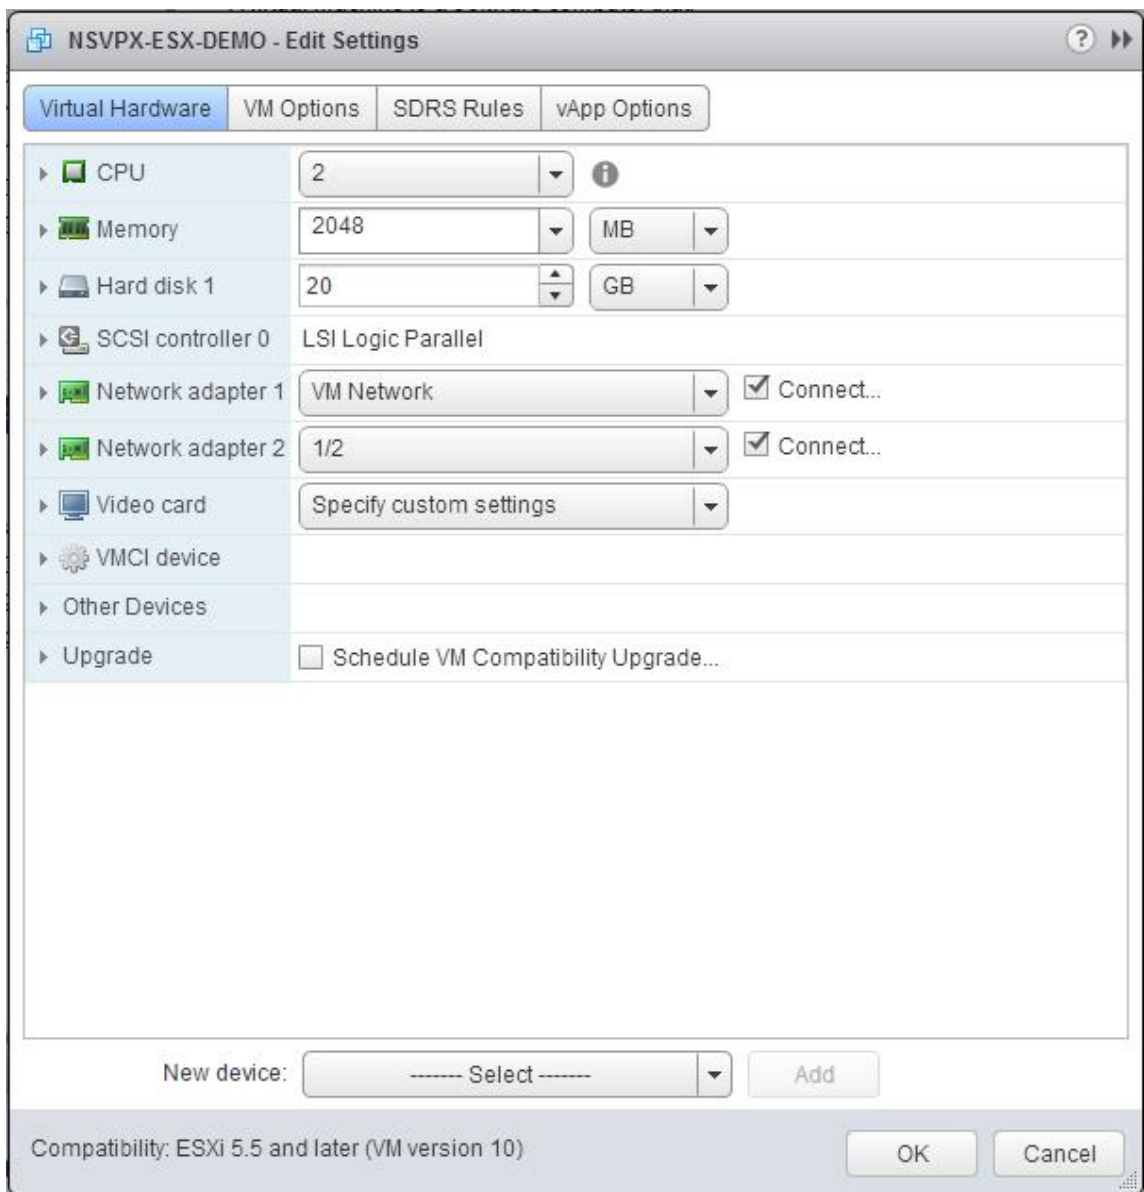

4. In the <virtual_appliance> - Edit Settings dialog box, click the CPU section.

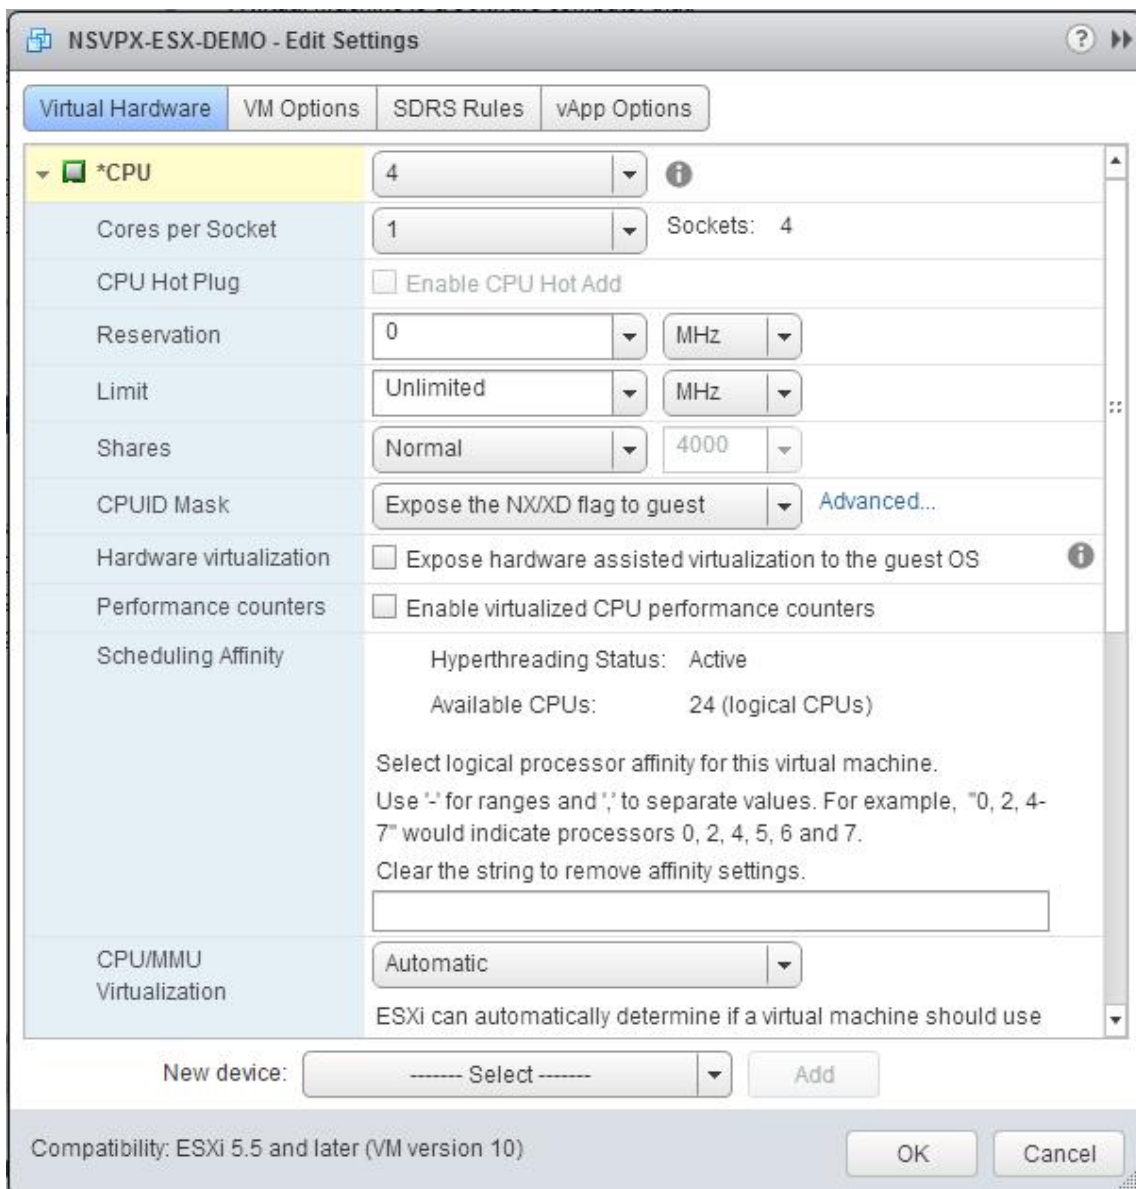

5. In the CPU section, update the following:


- Number of CPUs
- Number of Sockets
- Reservations
- Limit
- Shares

Set the values as follows:


- In the CPU drop-down list, select the number of CPUs to assign to the virtual appliance.
- In the Cores per Socket drop-down list, select the number of sockets.
- (Optional) In the CPU Hot Plug field, select or unselect the Enable CPU Hot Add check box.

Note: Citrix recommends accepting the default (disabled).


d. In the Reservation drop-down list, select the number that is shown as the maximum value.

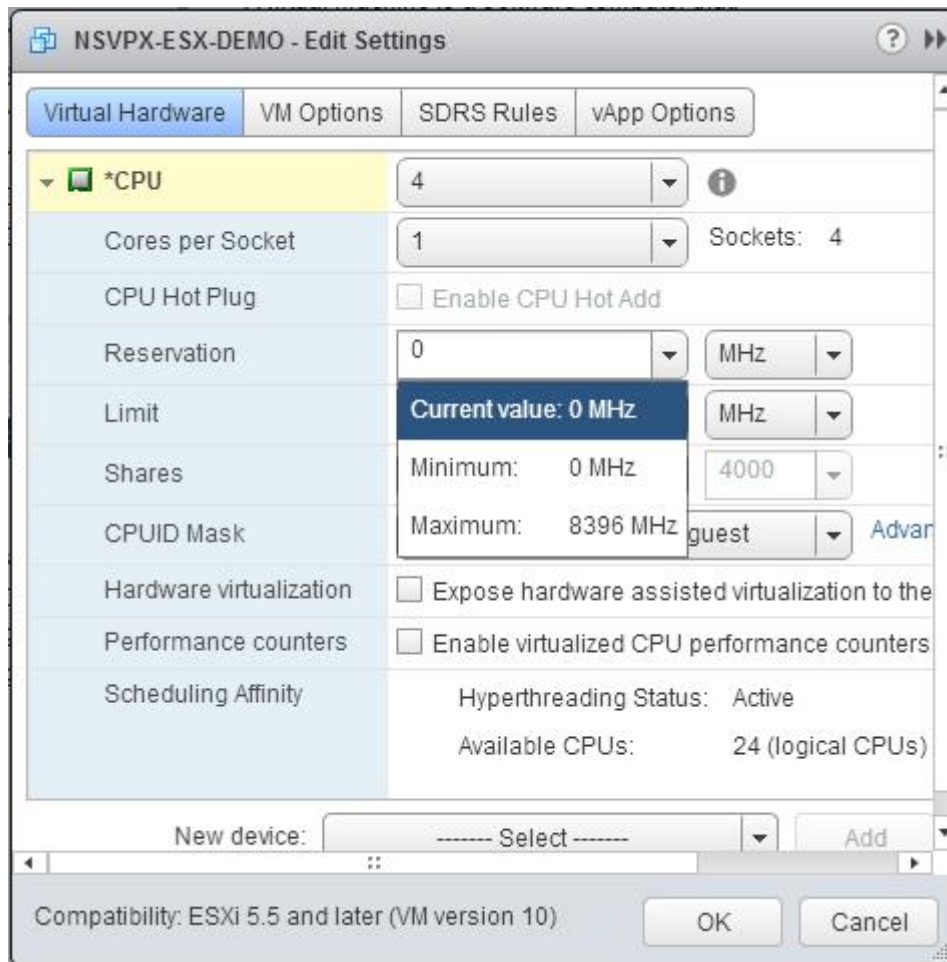

e. In the Limit drop-down list, select the number that is shown as the maximum value.

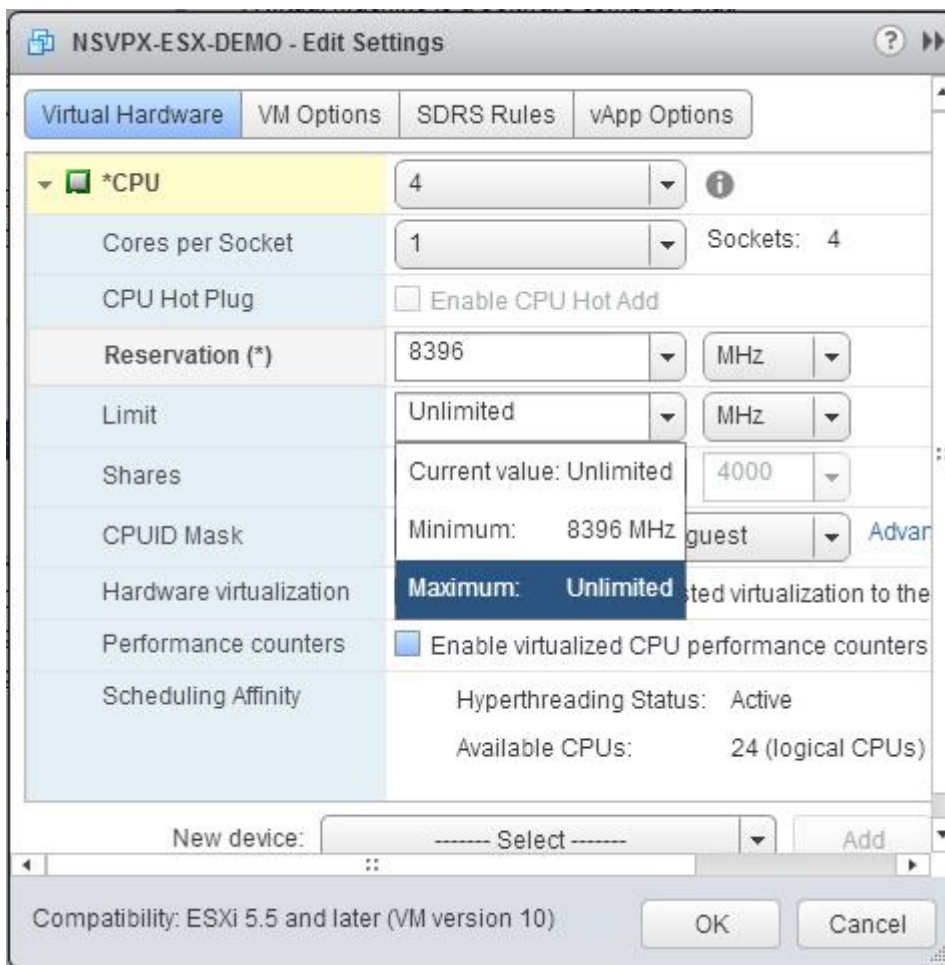

f. In the Shares drop-down lists, select Custom and the number that is shown as the maximum value.

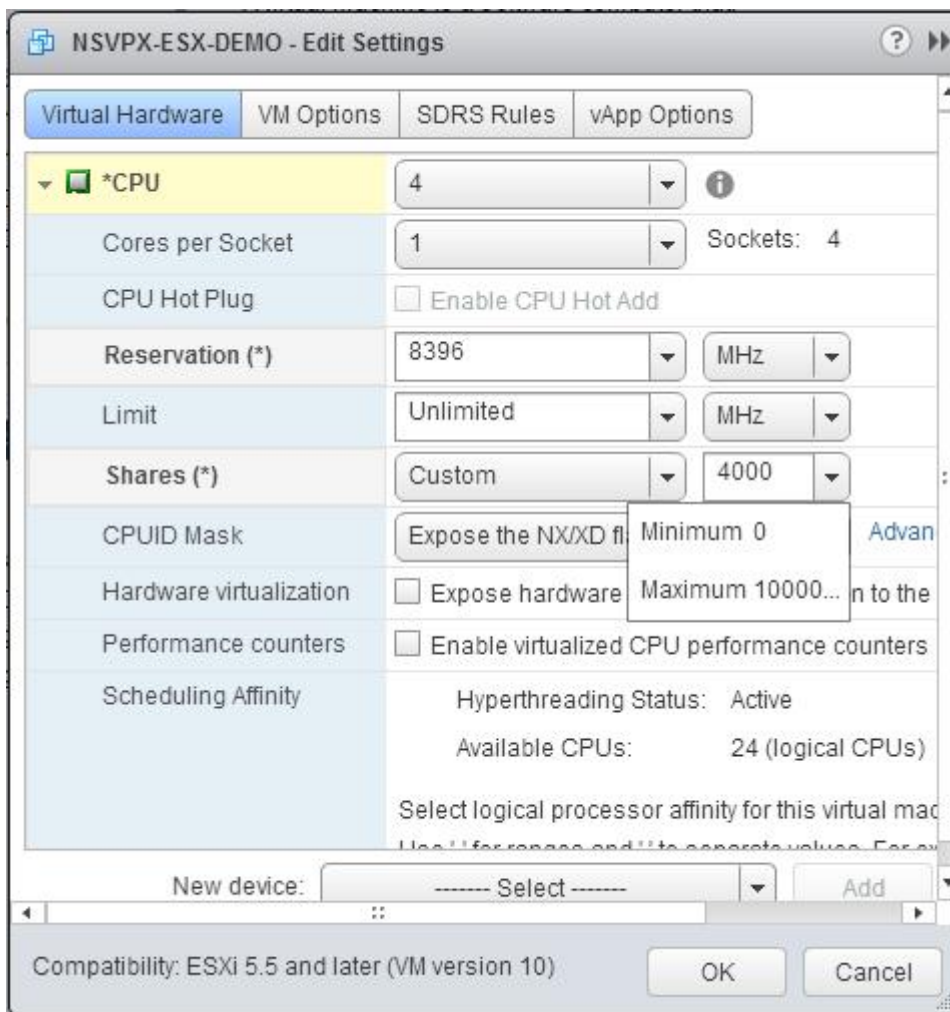


6. In the Memory section, update the following:

- Size of RAM
- Reservations
- Limit
- Shares

Set the values as follows:


a. In the RAM drop-down list, select the size of the RAM. It must be the number of vCPUs x 2 GB. For example, if the number of vCPUs is 4, the RAM must be 4 x 2 GB = 8 GB.

Note: For an Advanced or Premium edition of the NetScaler VPX appliance, make sure that you allocate 4 GB of RAM to each vCPU. For example, if the number of vCPU is 4 then RAM = 4 x 4 GB = 16 GB.

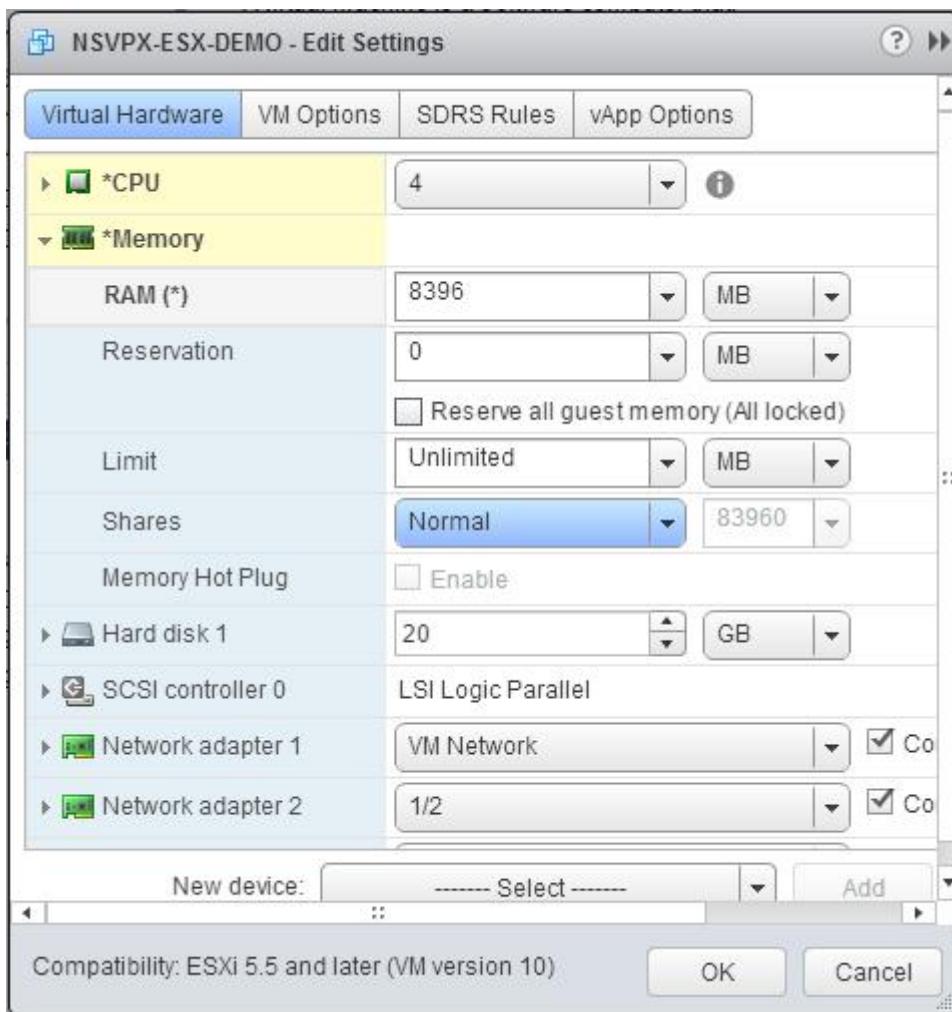


b. In the Reservation drop-down list, enter the value for the memory reservation, and select the Reserve all guest memory (All locked) check box. The memory reservation must be the number of vCPUs x 2 GB. For example, if the number of vCPUs is 4, the memory reservation must be 4 x 2 GB = 8 GB.


Note: For an Advanced or Premium edition of the NetScaler VPX appliance, make sure that you allocate 4 GB of RAM to each vCPU. For example, if the number of vCPU is 4 then RAM = 4 x 4 GB = 16 GB.

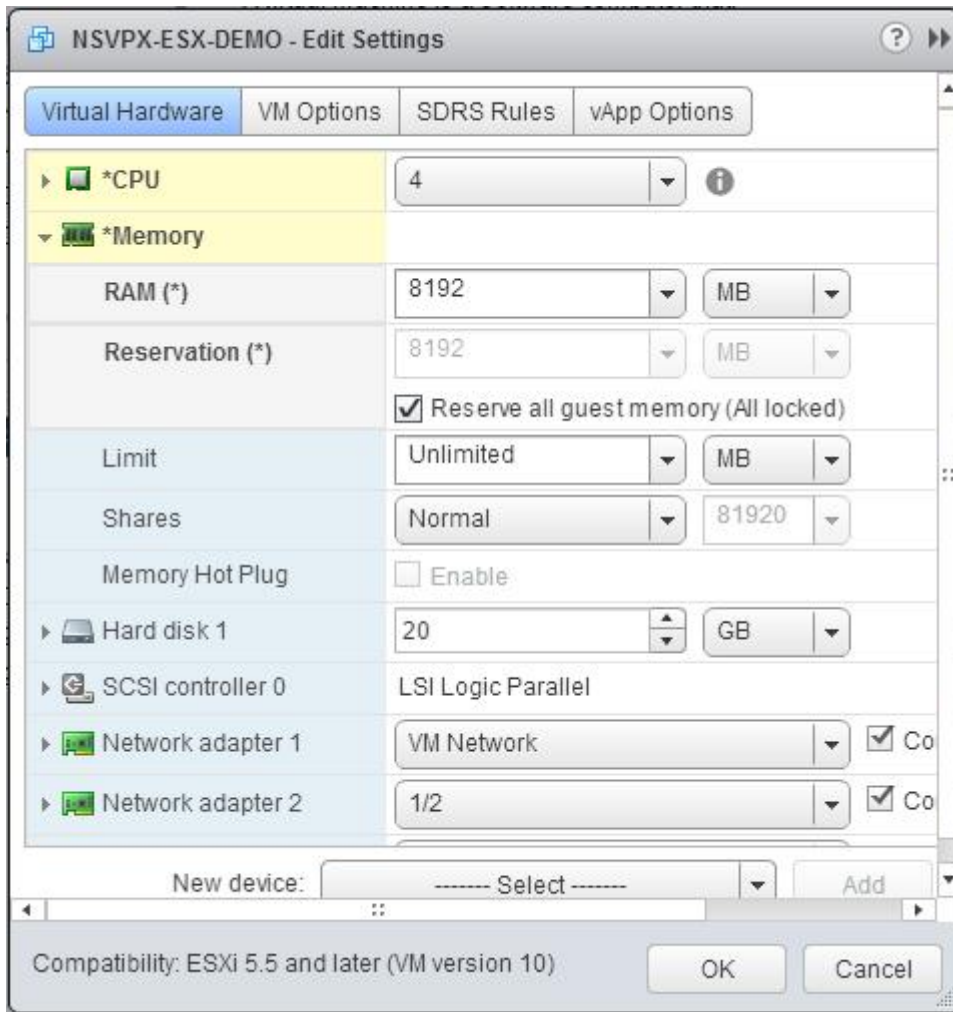


c. In the Limit drop-down list, select the number that is shown as the maximum value.

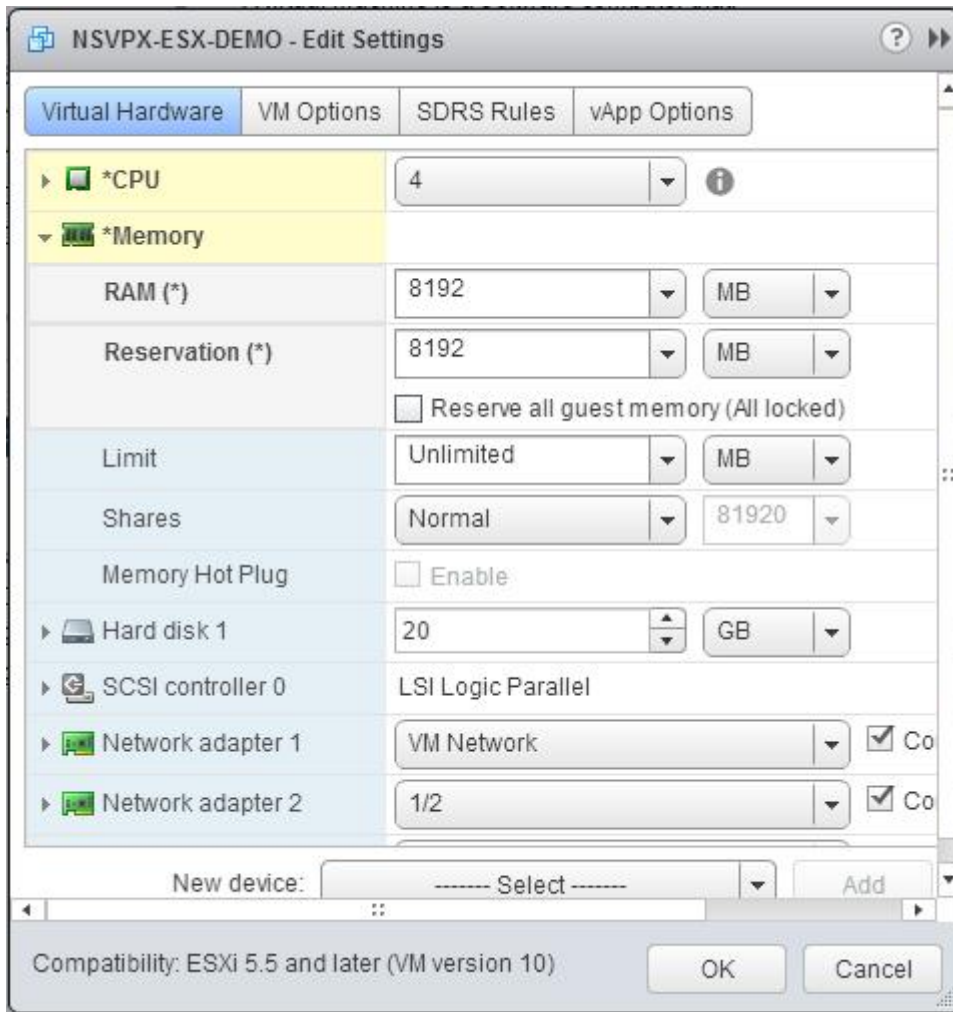

d. In the Shares drop-down lists, select Custom and the number that is shown as the maximum value.

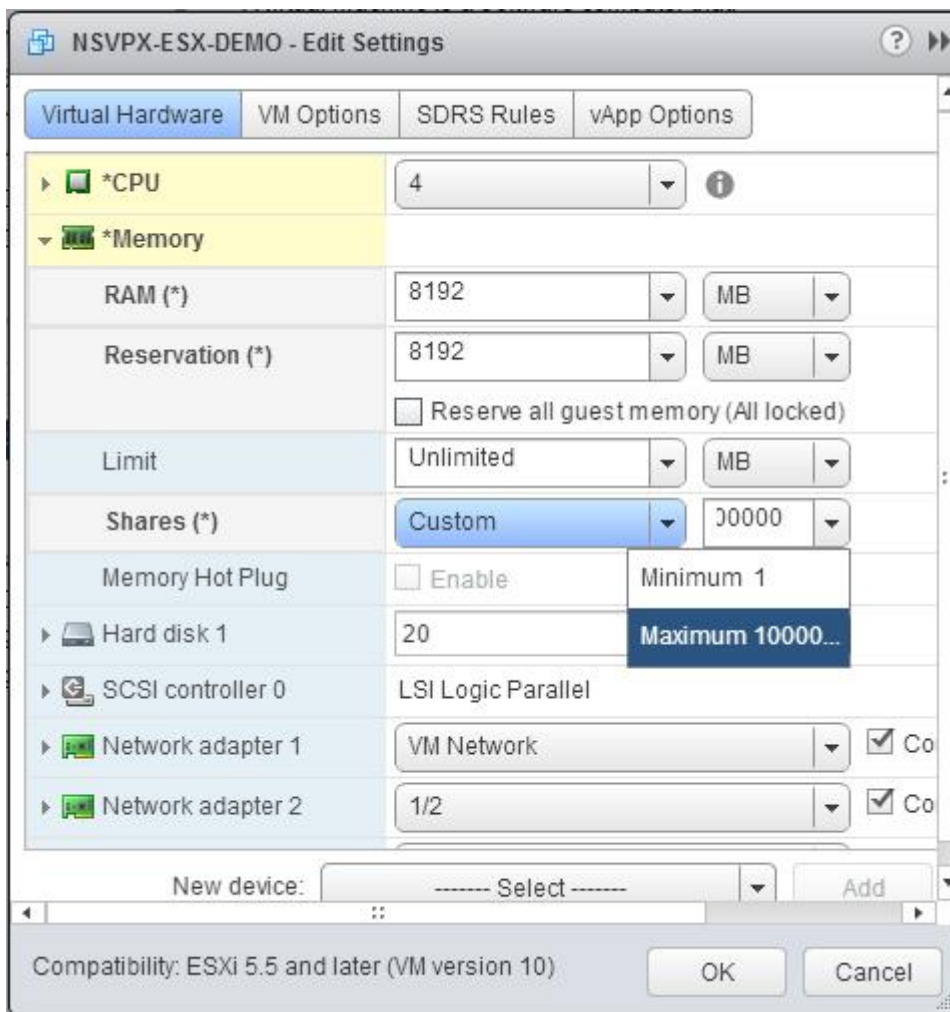

7. Add a VMXNET3 network interface. From the New device drop-down list, select Network and click Add.

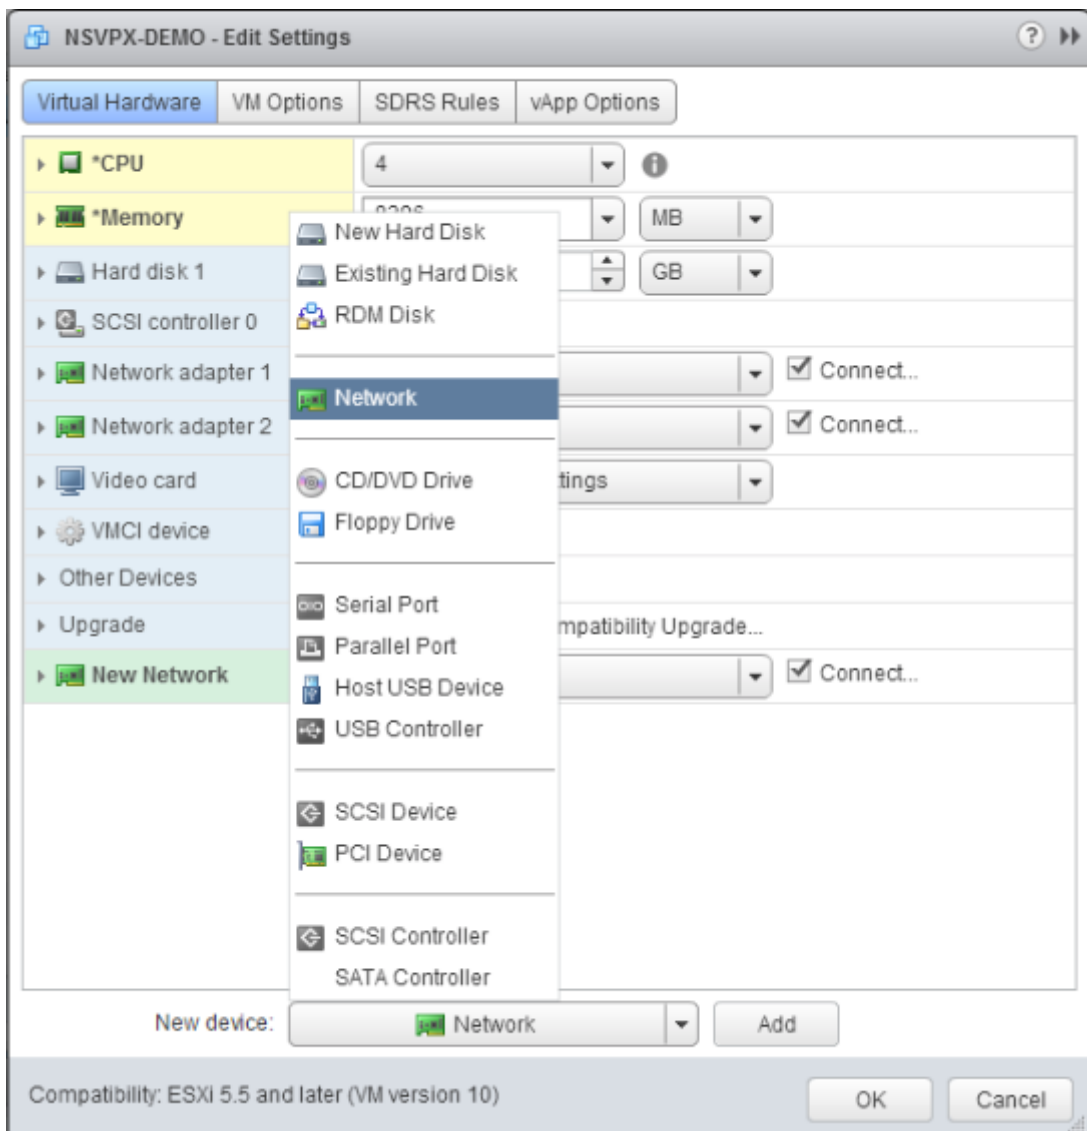


8. In the New Network section, from the drop-down list, select the network interface, and do the following:

a. In the Adapter Type drop-down list, select VMXNET3.

Important

The default E1000 network interface and VMXNET3 cannot coexist, make sure that you remove the E1000 network interface and use VMXNET3 (0/1) as the management interface.

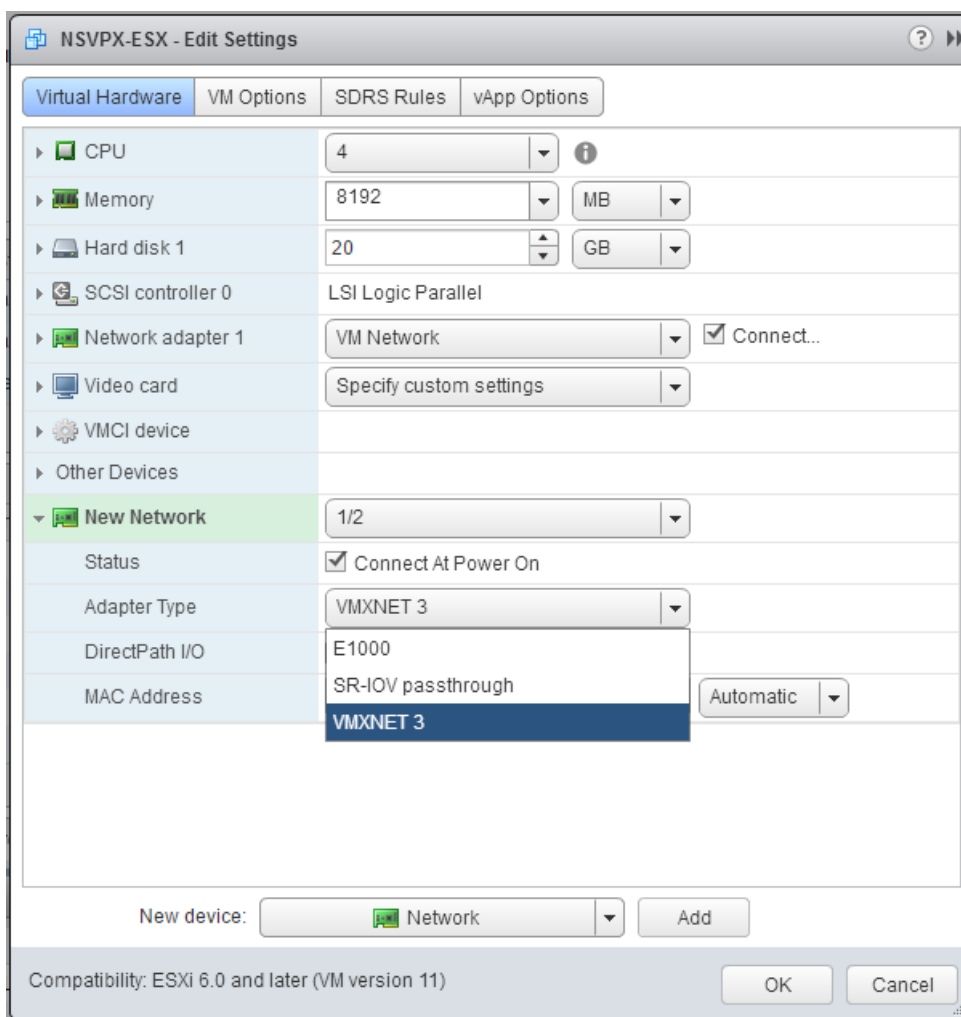

9. Click OK.
10. Power on the NetScaler VPX instance.
11. Once the NetScaler VPX instance powers on, you can use the following command to verify the configuration:

```
show interface summary
```

The output must show all the interfaces that you configured:

```

1 > show interface summary
2 -----
3           Interface  MTU      MAC                               Suffix
4 -----
5 1      0/1          1500    00:0c:29:89:1d:0e                NetScaler Vir...rface,
6 2      1/1          9000    00:0c:29:89:1d:18                NetScaler Vir...rface,
           VMXNET3
           VMXNET3
    
```

7	3	1/2 VMXNET3	9000	00:0c:29:89:1d:22	NetScaler Vir...rface,
8	4	LO/1 interface	9000	00:0c:29:89:1d:0e	Netscaler Loopback

Note:

After you add a VMXNET3 interface and restart the NetScaler VPX appliance, the VMware ESX hypervisor might change the order in which the NIC is presented to the VPX appliance. So, network adapter 1 might not always remain 0/1, resulting in loss of management connectivity to the VPX appliance. To avoid this issue, change the virtual network of the network adapter accordingly.

This is a VMware ESX hypervisor limitation.

Set receive ring size for the VMXNET3 network interface

You can increase the receive ring size for VMXNET3 network interfaces on VMware ESX. A higher ring size reduces the packet drops when a sudden burst in traffic occurs.

Note:

This feature is available in release 14.1 build 14.x and later.

To set the ring size on a VMXNET3 network interface

At the command prompt, type:

```
set interface id [-ringsize positive_integer]
```

The maximum ring size that you can set on a VMXNET3 interface is 2048. Only the fixed ring type is supported. You must save the configuration and reboot the NetScaler VPX instance for the settings to take effect.

Configure a NetScaler VPX instance to use SR-IOV network interface

May 2, 2023

After you have installed and configured the NetScaler VPX instance on VMware ESX, you can use the VMware vSphere web client to configure the virtual appliance to use single root I/O virtualization (SR-IOV) network interfaces.

Limitations

A NetScaler VPX configured with SR-IOV network interface has the following limitations:


- The following features are not supported on SR-IOV interfaces using the Intel 82599 10G NIC on ESX VPX:
 - L2 mode switching
 - Static Link Aggregation and LACP
 - Clustering
 - Admin partitioning [Shared VLAN mode]
 - High Availability [Active - Active mode]
 - Jumbo frames
 - IPv6
- The following features are not supported on the SR-IOV interface with an Intel 82599 10G NIC on KVM VPX:
 - Static Link Aggregation and LACP
 - L2 mode switching
 - Clustering
 - Admin partitioning [Shared VLAN mode]
 - High Availability [Active –Active mode]
 - Jumbo frames
 - IPv6
 - VLAN configuration on Hypervisor for SR-IOV VF interface through `ip link` command is not supported

Prerequisite


- Make sure that you add any of the following NICs to the ESX host:
 - Intel 82599 NIC, IXGBE driver version 3.7.13.7.14iov or later is recommended.
 - Mellanox ConnectX-4 NIC
- Enable SR-IOV on the host physical adapter.

Follow this procedure to enable SR-IOV on the host physical adapter:


1. In the vSphere Web Client, navigate to the Host.
2. On the **Manage > Networking** tab, select **Physical adapters**. The SR-IOV Status field shows whether a physical adapter supports SR-IOV.

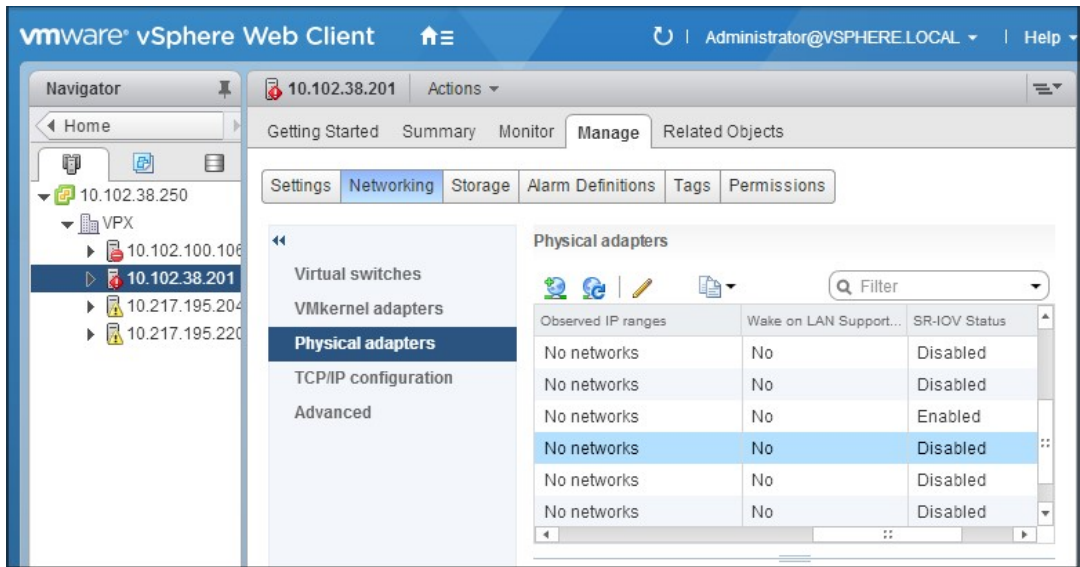


3. Select the physical adapter, and then click the pencil icon to open the **Edit Settings** dialog box.

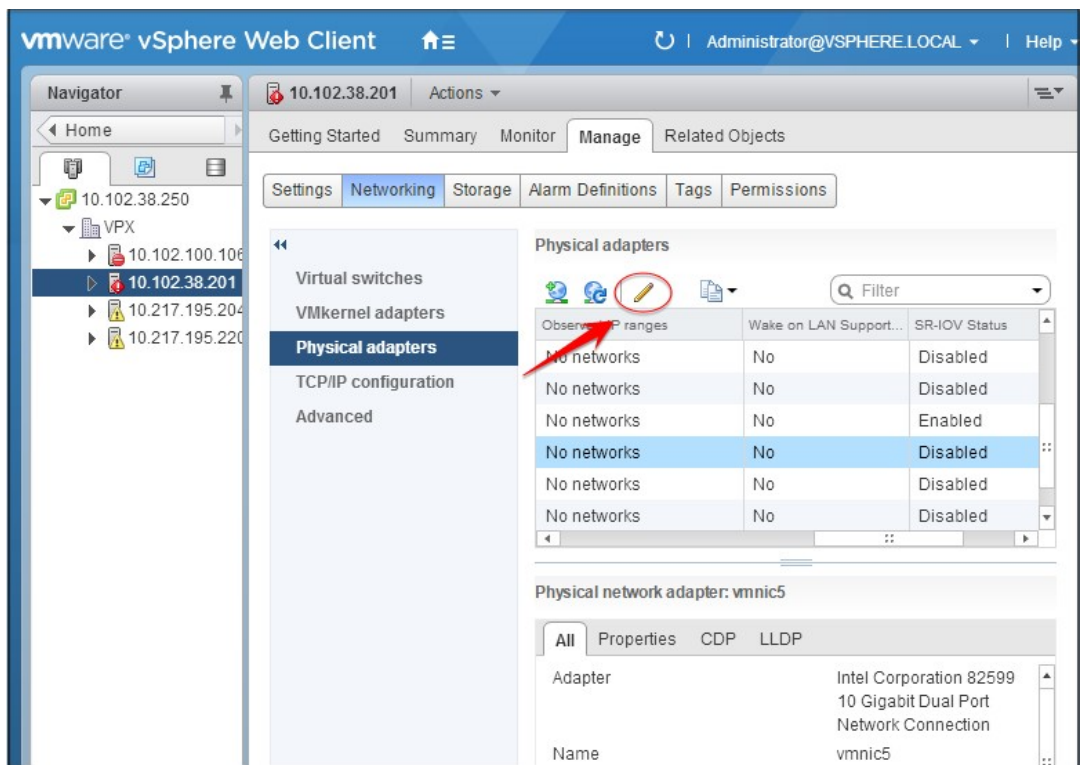

4. Under SR-IOV, select **Enabled** from the **Status** drop-down list.

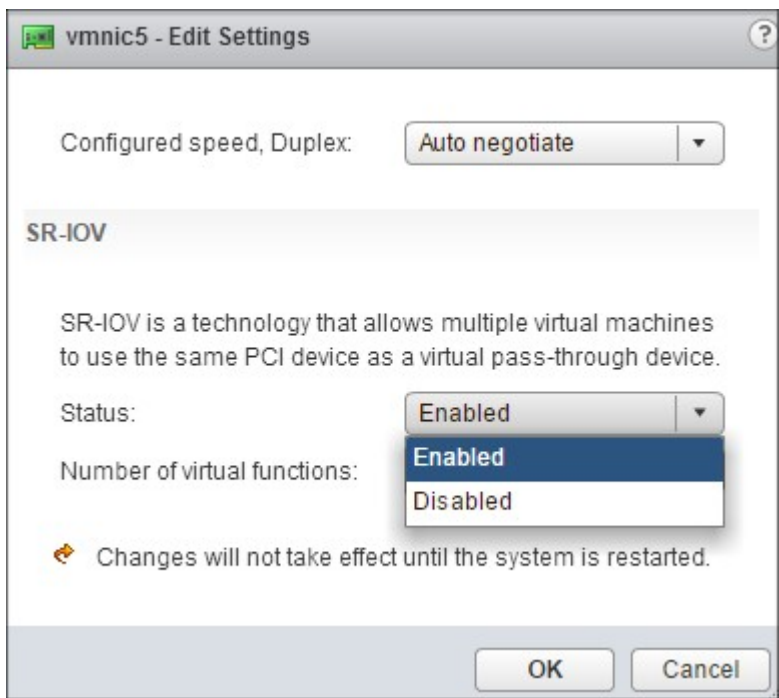

5. In the **Number of virtual functions** field, enter the number of virtual functions that you want to configure for the adapter.

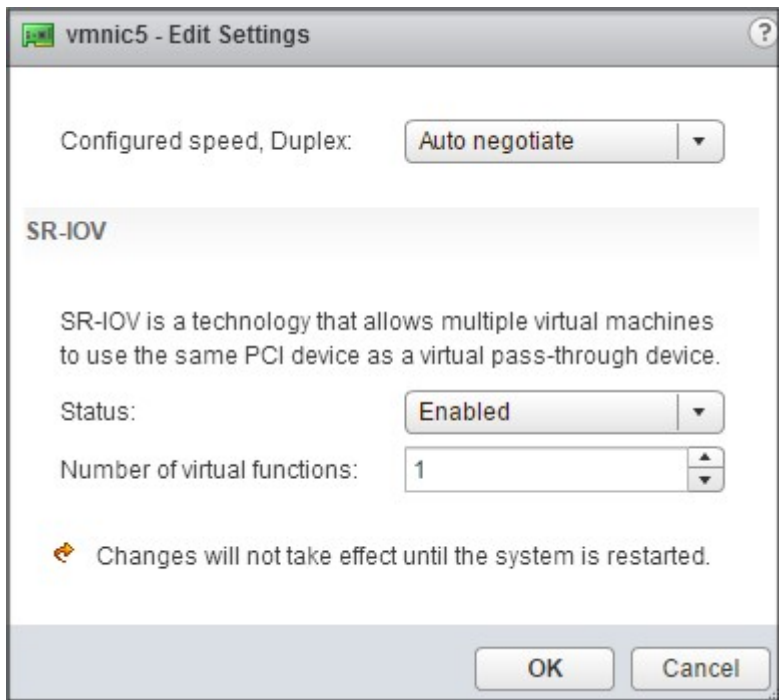

6. Click **OK**.
 7. Restart the host.
- Create a Distributed Virtual Switch (DVS) and [Portgroups](#). For instructions, see the VMware


Documentation.

Note


Citrix has qualified the SR-IOV configuration on DVS and [Portgroups](#) only.

To configure NetScaler VPX instances to use SR-IOV network interface by using VMware vSphere Web Client:


1. In the vSphere Web Client, select **Hosts and Clusters**.
2. Upgrade the Compatibility setting of the NetScaler VPX instance to ESX 5.5 or later, as follows:
 - a. Power off the NetScaler VPX instance.
 - b. Right-click the NetScaler VPX instance and select **Compatibility > Upgrade VM Compatibility**.
 - c. In the **Configure VM Compatibility** dialog box, select **ESXi 5.5 and later** from the **Compatible with** drop-down list and click **OK**.

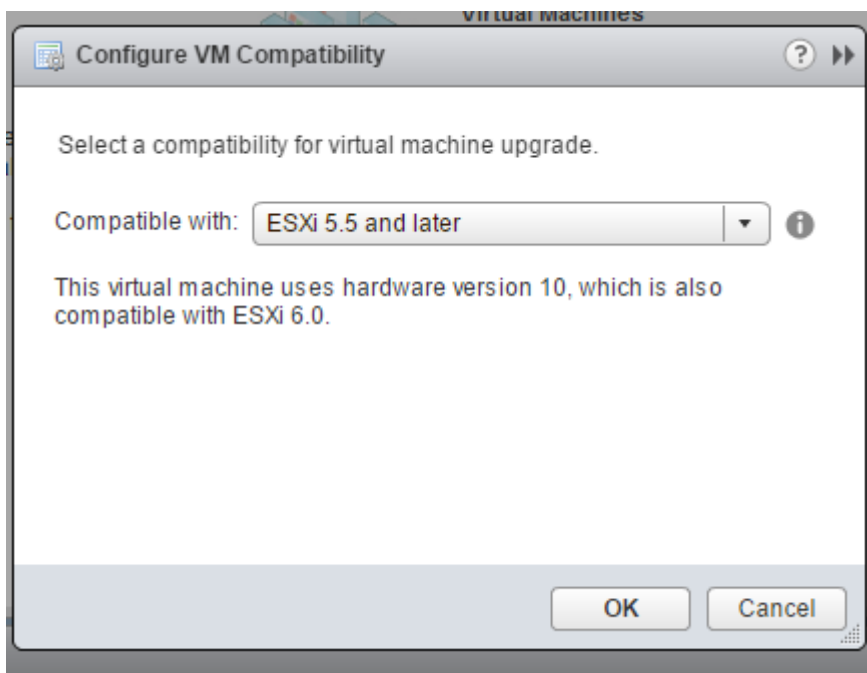

3. Right-click on the NetScaler VPX instance and click **Edit Settings**.

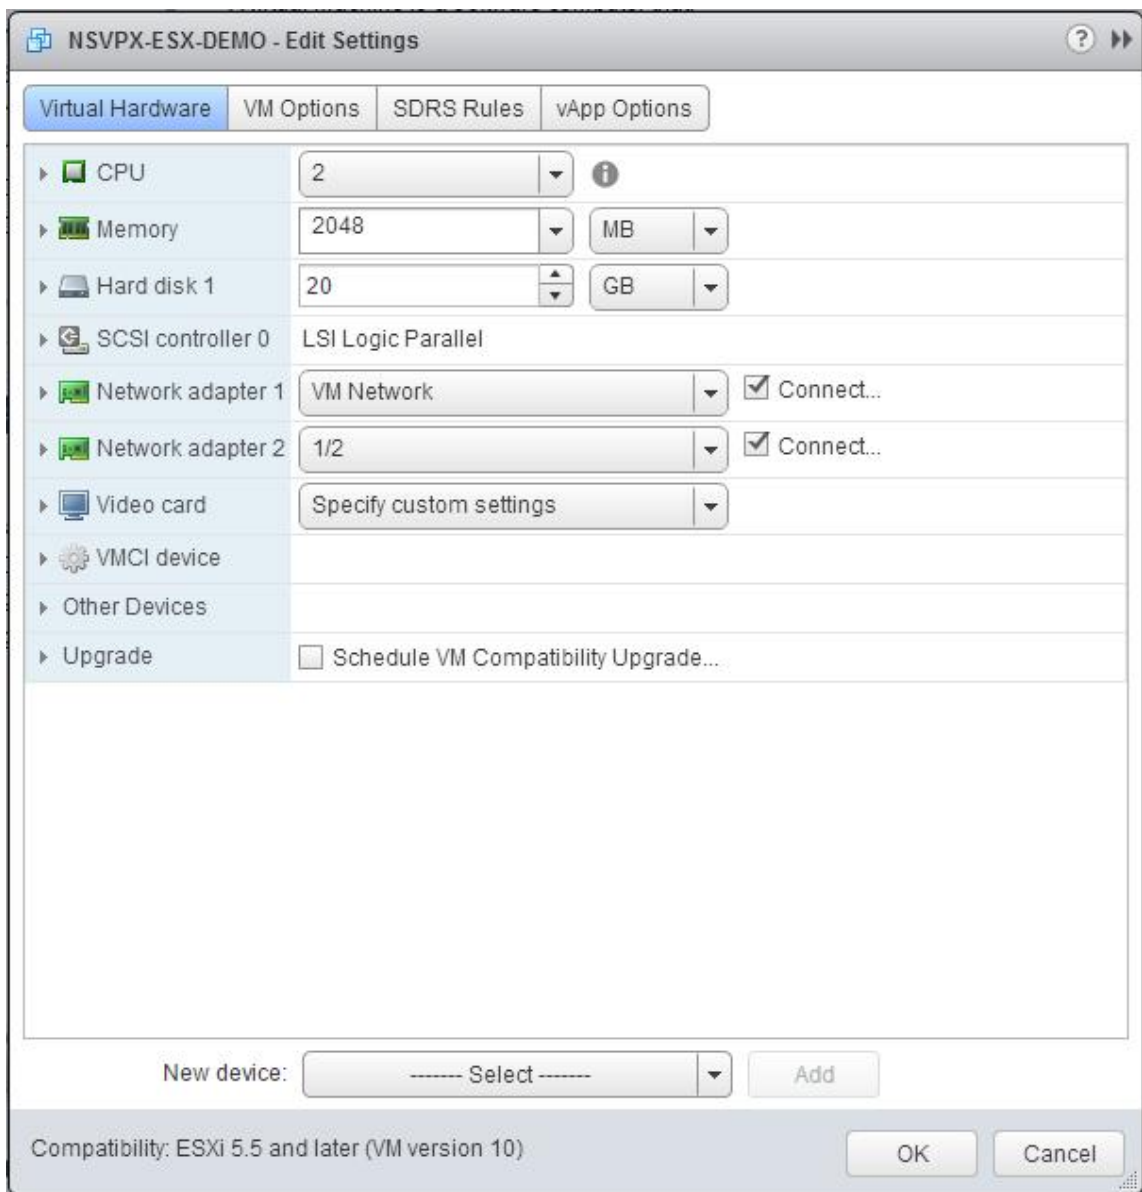

4. In the **<virtual_appliance> - Edit Settings** dialog box, click the **CPU** section.

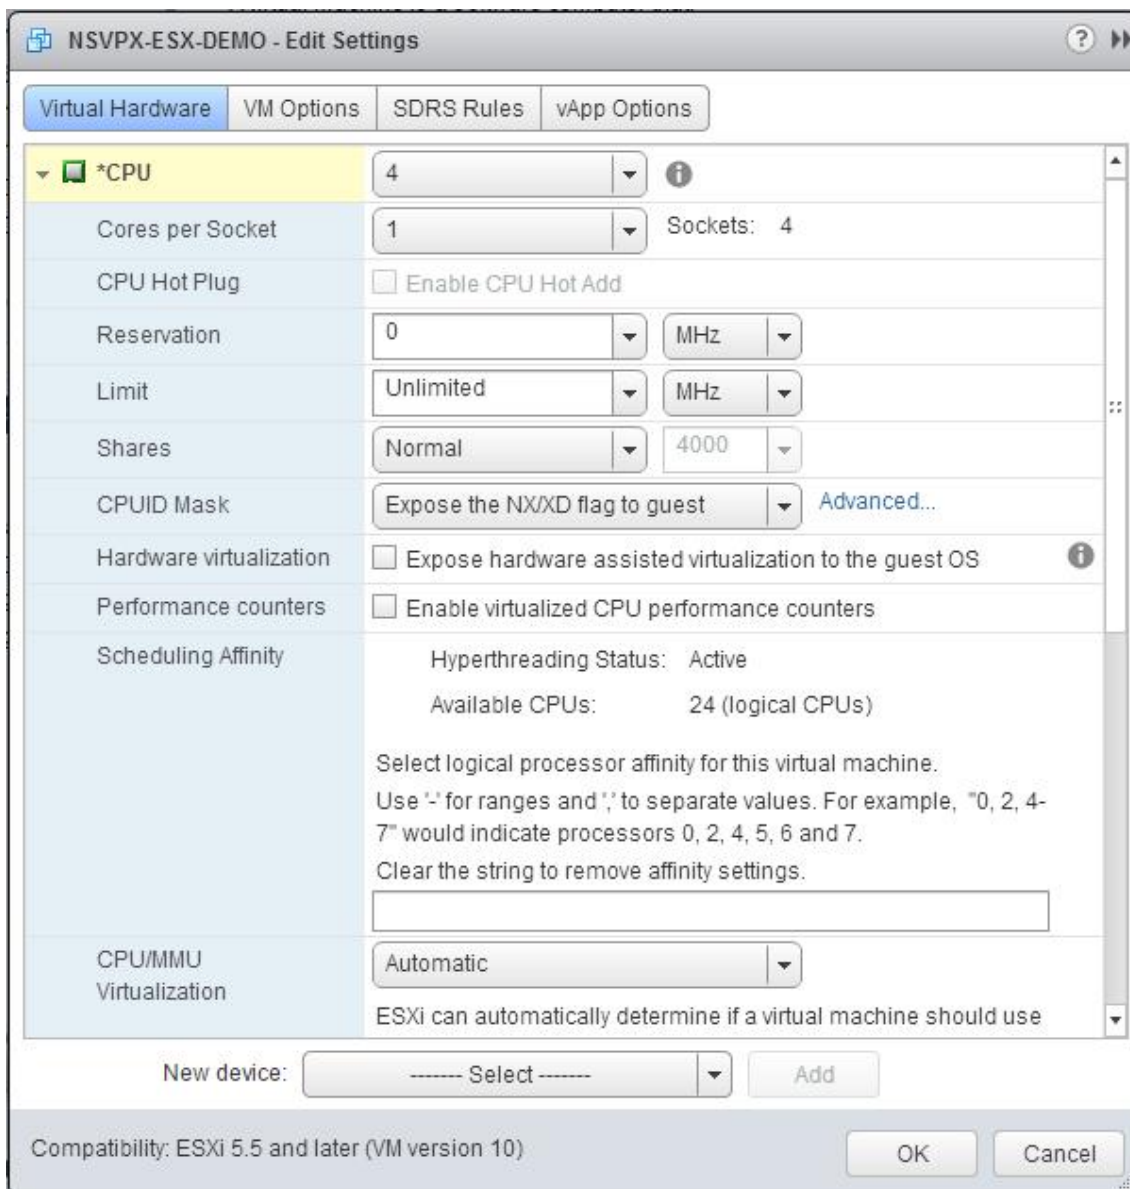

5. In the **CPU** section, update the following settings:


- Number of CPUs
- Number of Sockets
- Reservations
- Limit
- Shares

Set the values as follows:


- In the **CPU** drop-down list, select the number of CPUs to assign to the virtual appliance.
- In the **Cores per Socket** drop-down list, select the number of sockets.
- (Optional) In the **CPU Hot Plug** field, select or clear the **Enable CPU Hot Add** check box.

Note: Citrix recommends accepting the default (disabled).


d. In the **Reservation** drop-down list, select the number that is shown as the maximum value.

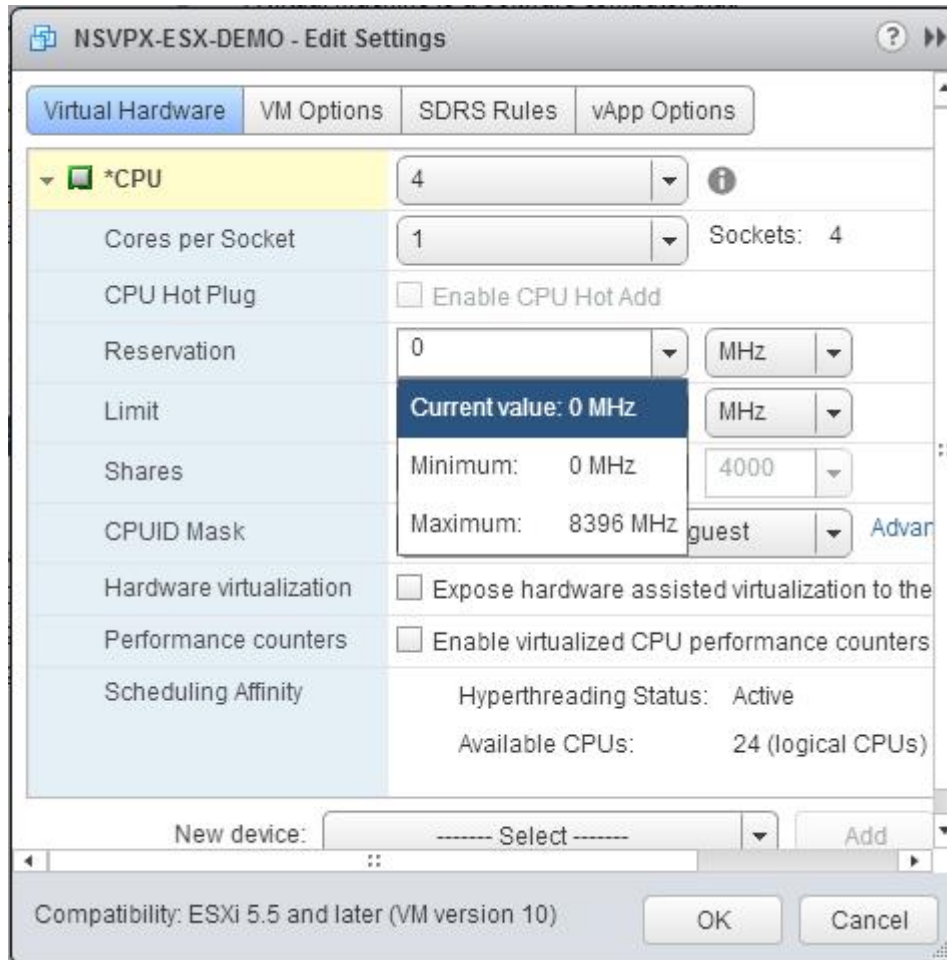

e. In the **Limit** drop-down list, select the number that is shown as the maximum value.

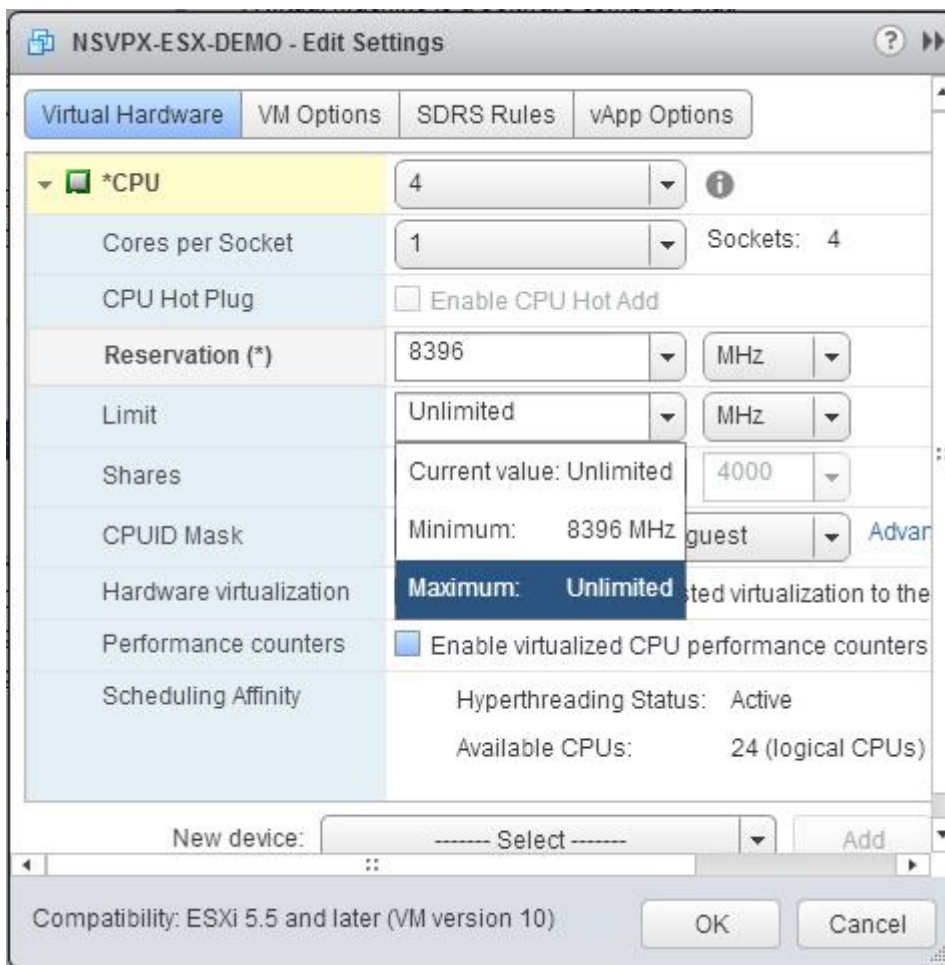

f. In the **Shares** drop-down lists, select **Custom** and the number that is shown as the maximum value.

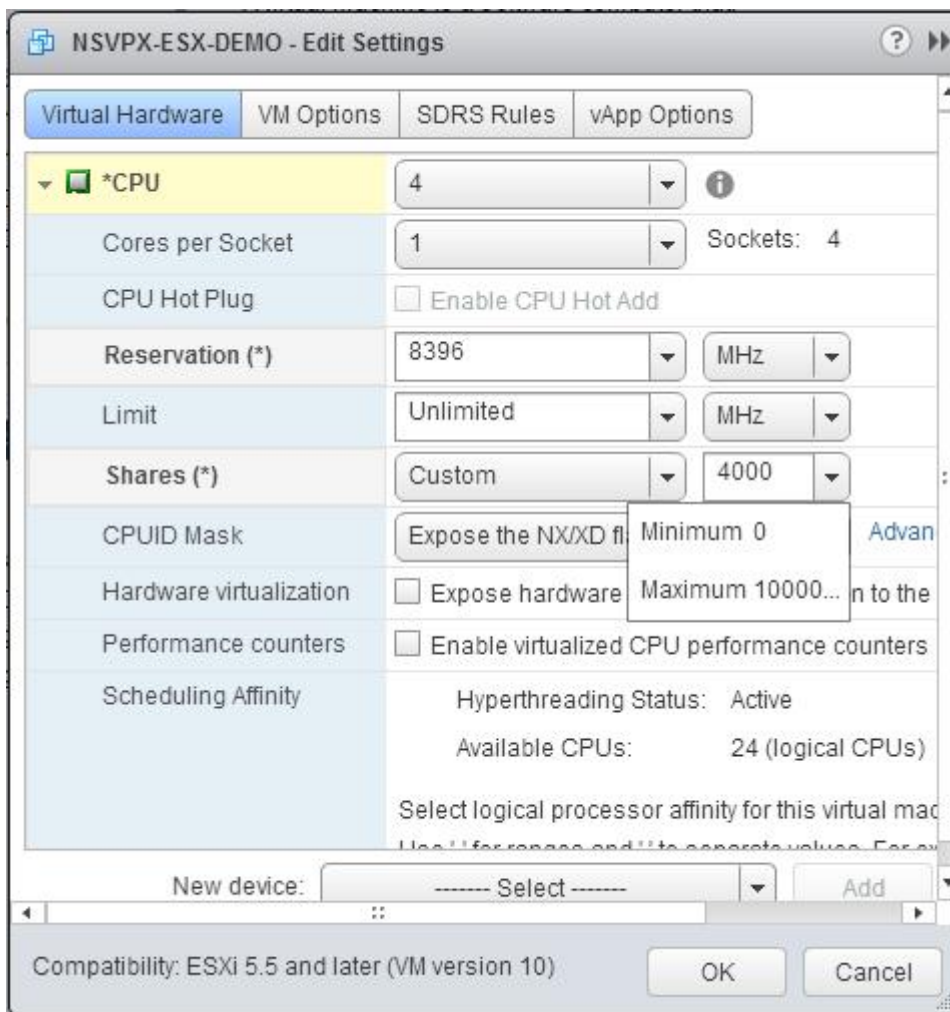


6. In the **Memory** section, update the following settings:

- Size of RAM
- Reservations
- Limit
- Shares

Set the values as follows:


a. In the **RAM** drop-down list, select the size of the RAM. It must be the number of vCPUs x 2 GB. For example, if the number of vCPU is 4 then RAM = 4 x 2 GB = 8 GB.

Note: For Advanced or Premium edition of the NetScaler VPX appliance, make sure that you allocate 4 GB of RAM to each vCPU. For example, if the number of vCPU is 4 then RAM = 4 x 4 GB = 16 GB.

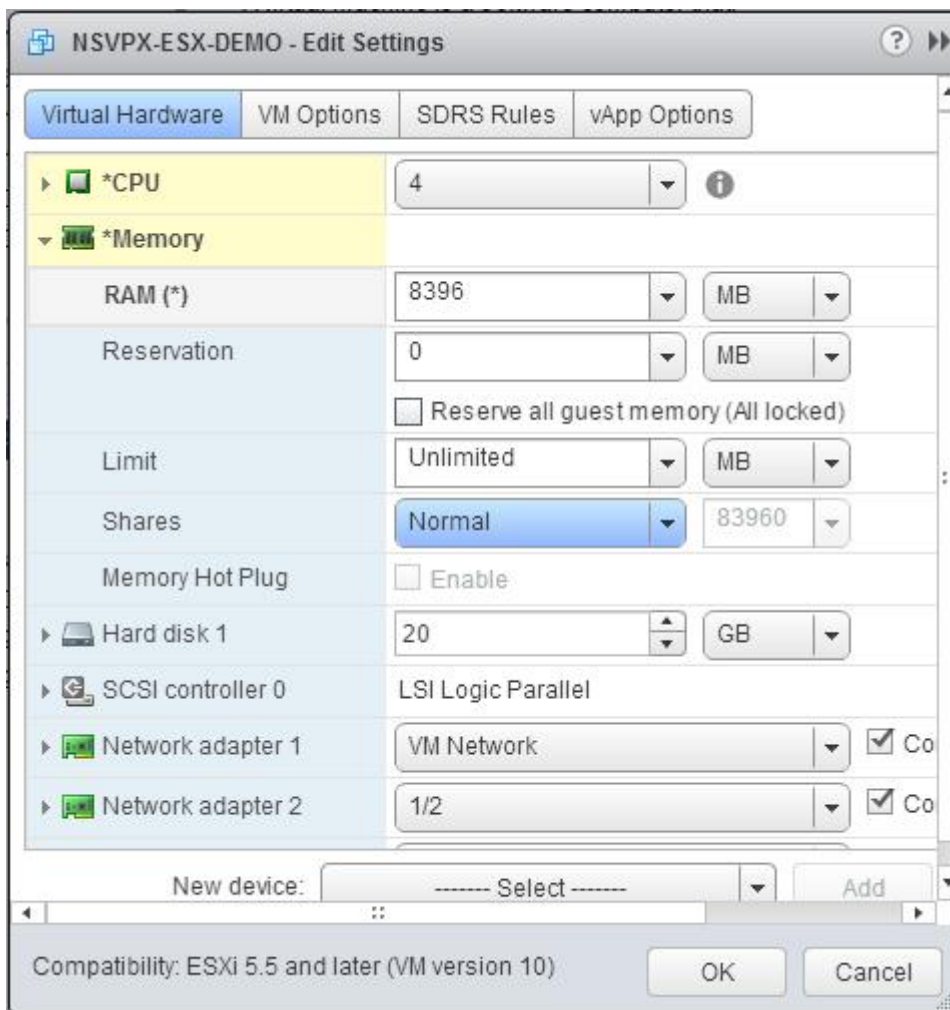


b. In the **Reservation** drop-down list, enter the value for the memory reservation, and select the **Reserve all guest memory (All locked)** check box. The memory reservation must be number of vCPUs x 2 GB. For example, if the number of vCPUs is 4, the memory reservation must be 4 x 2 GB = 8 GB.


Note: For Advanced or Premium edition of the NetScaler VPX appliance, make sure that you allocate 4 GB of RAM to each vCPU. For example, if the number of vCPU is 4 then RAM = 4 x 4 GB = 16 GB.

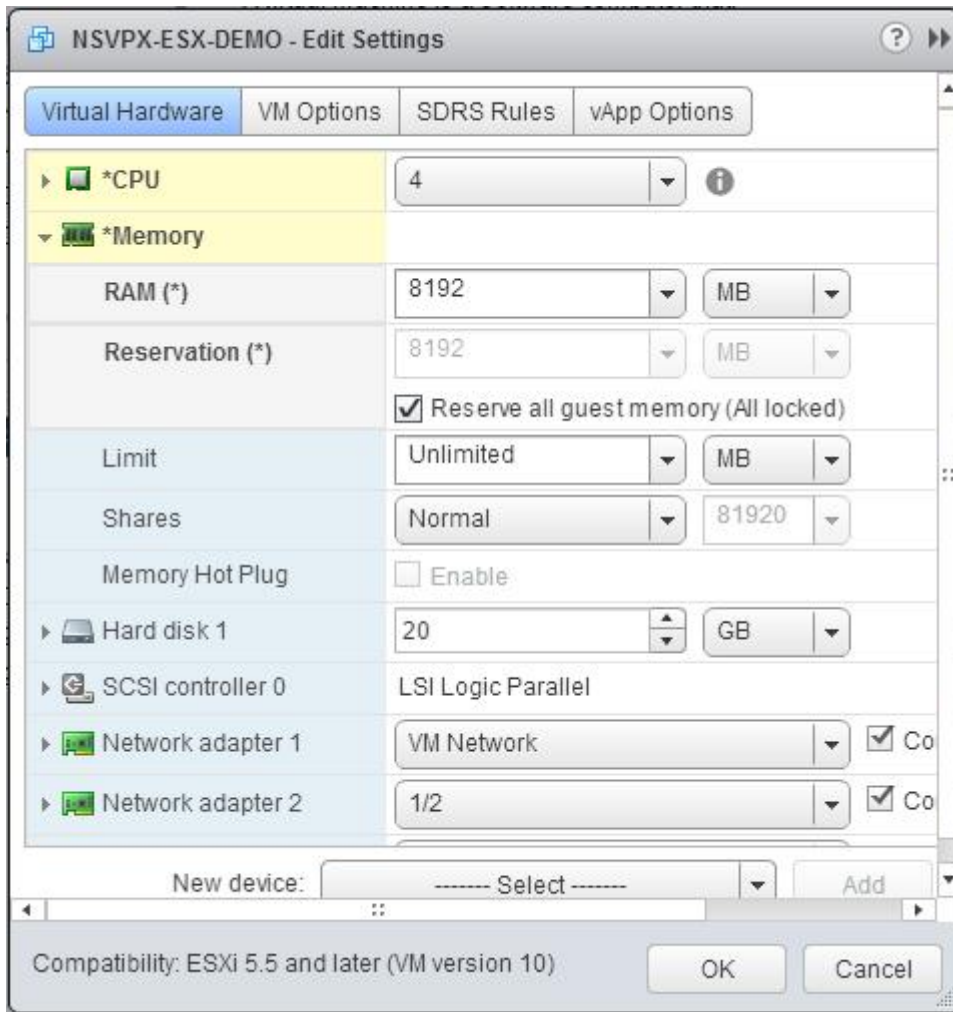


c. In the **Limit** drop-down list, select the number that is shown as the maximum value.

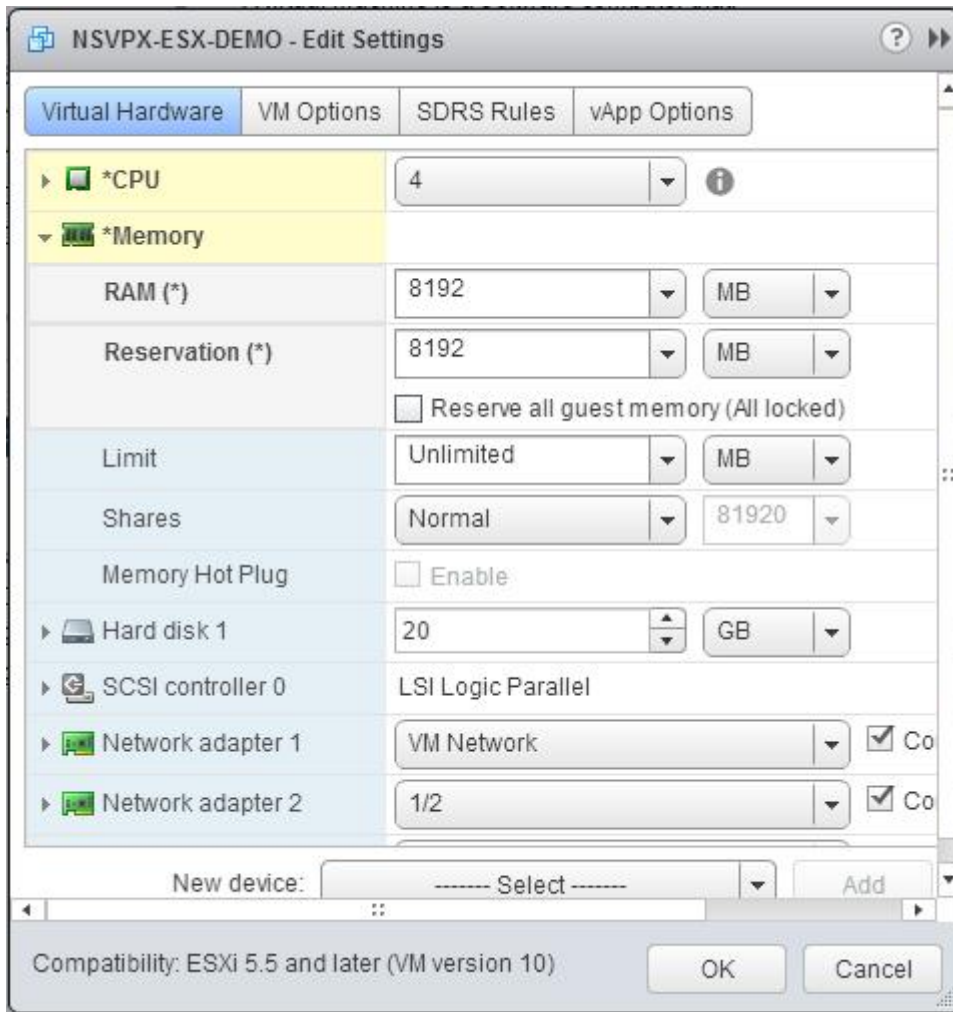


d. In the **Shares** drop-down lists, select **Custom**, and select the number that is shown as the maximum value.

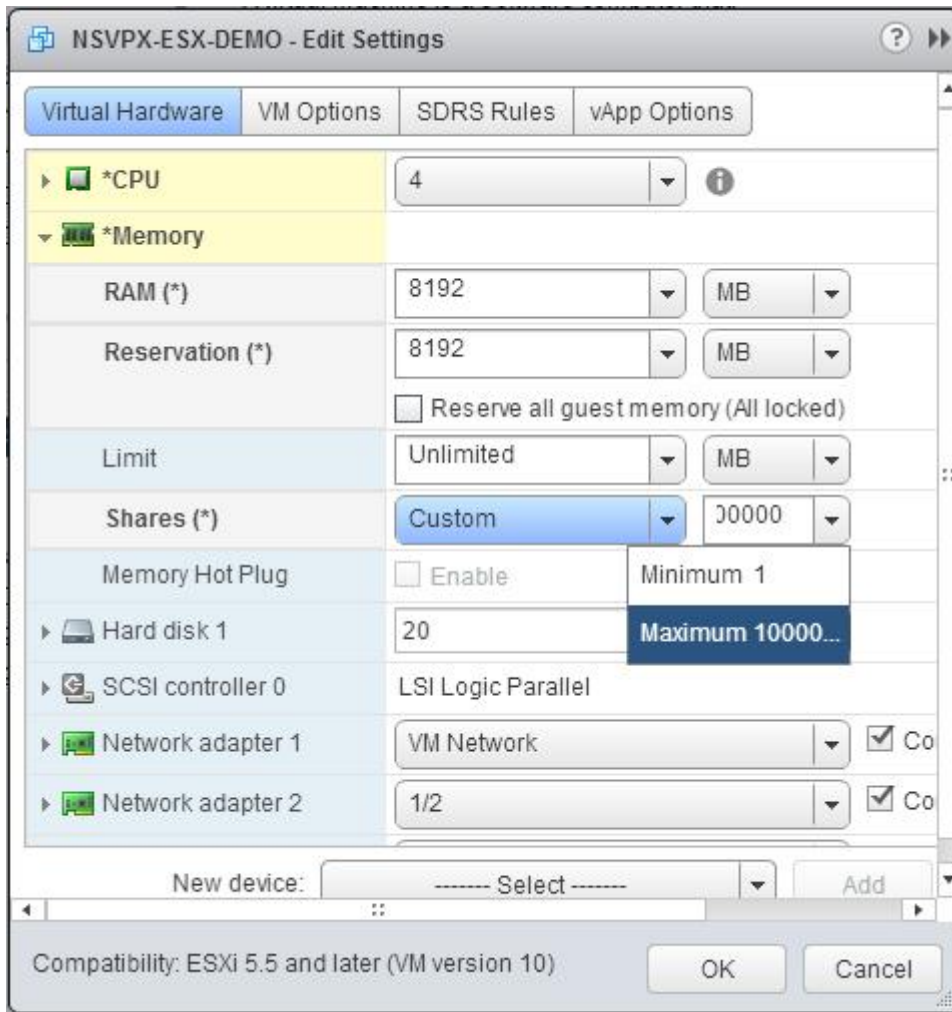


7. Add an SR-IOV network interface. From the **New device** drop-down list, select **Network** and click **Add**.

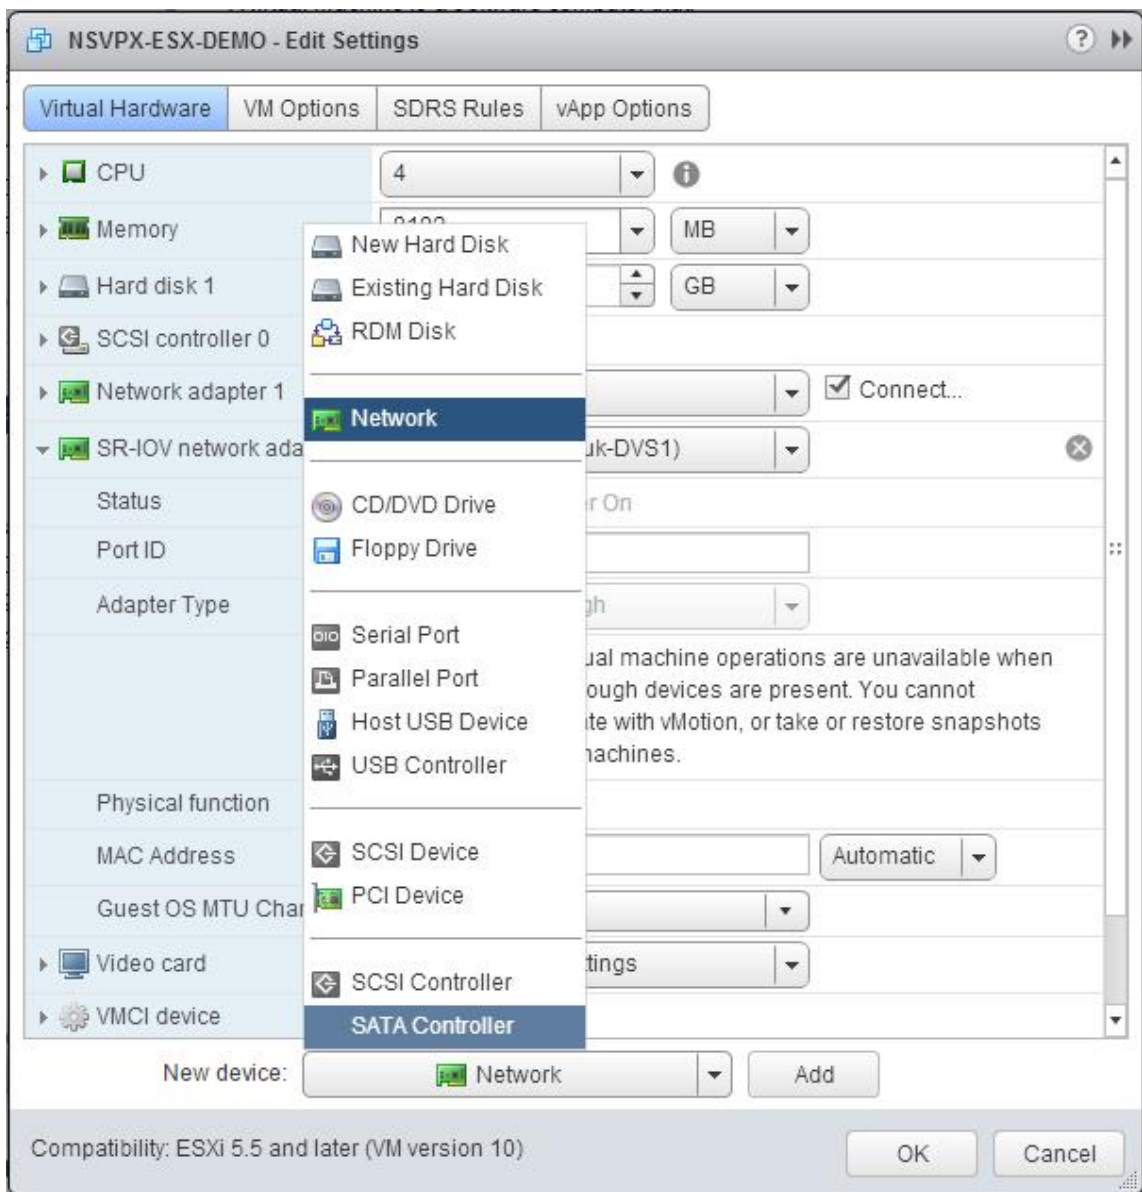


8. In the **New Network** section. From the drop-down list, select the **Portgroup** that you created, and do the following:
 - a. In the **Adapter Type** drop-down list, select **SR-IOV passthrough**.

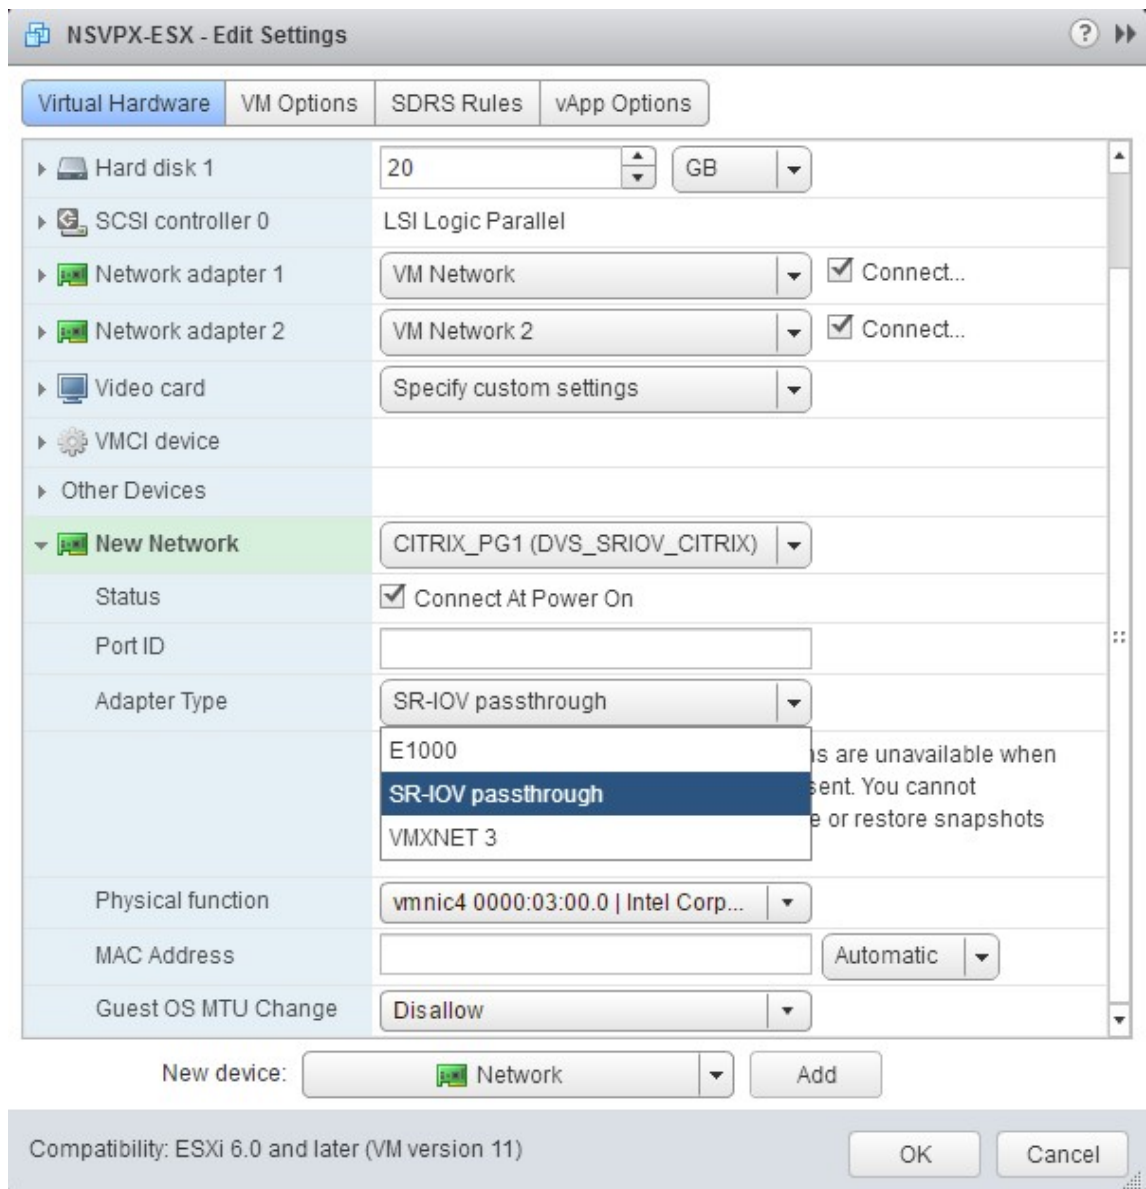

- b. In the **Physical function** drop-down list, select the physical adapter mapped with the Portgroup.

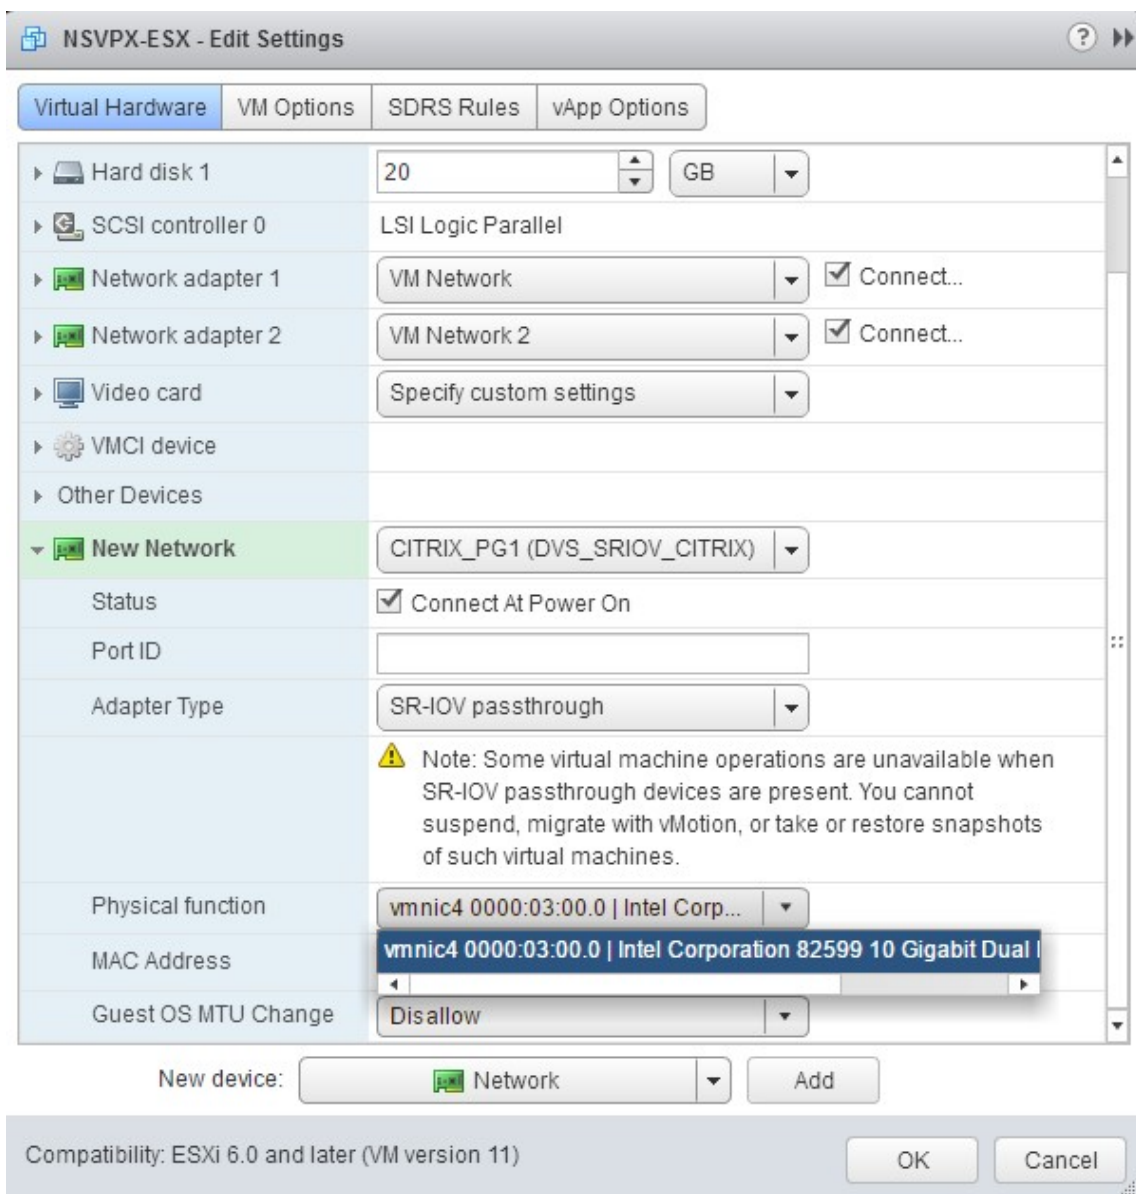

- c. In the **Guest OS MTU Change** drop-down list, select **Disallow**.
9. In the **<virtual_appliance> - Edit Settings** dialog box, click the **VM Options** tab.
10. On the **VM Options** tab, select the **Advanced** section. From the **Latency Sensitivity** drop-down list, select **High**.

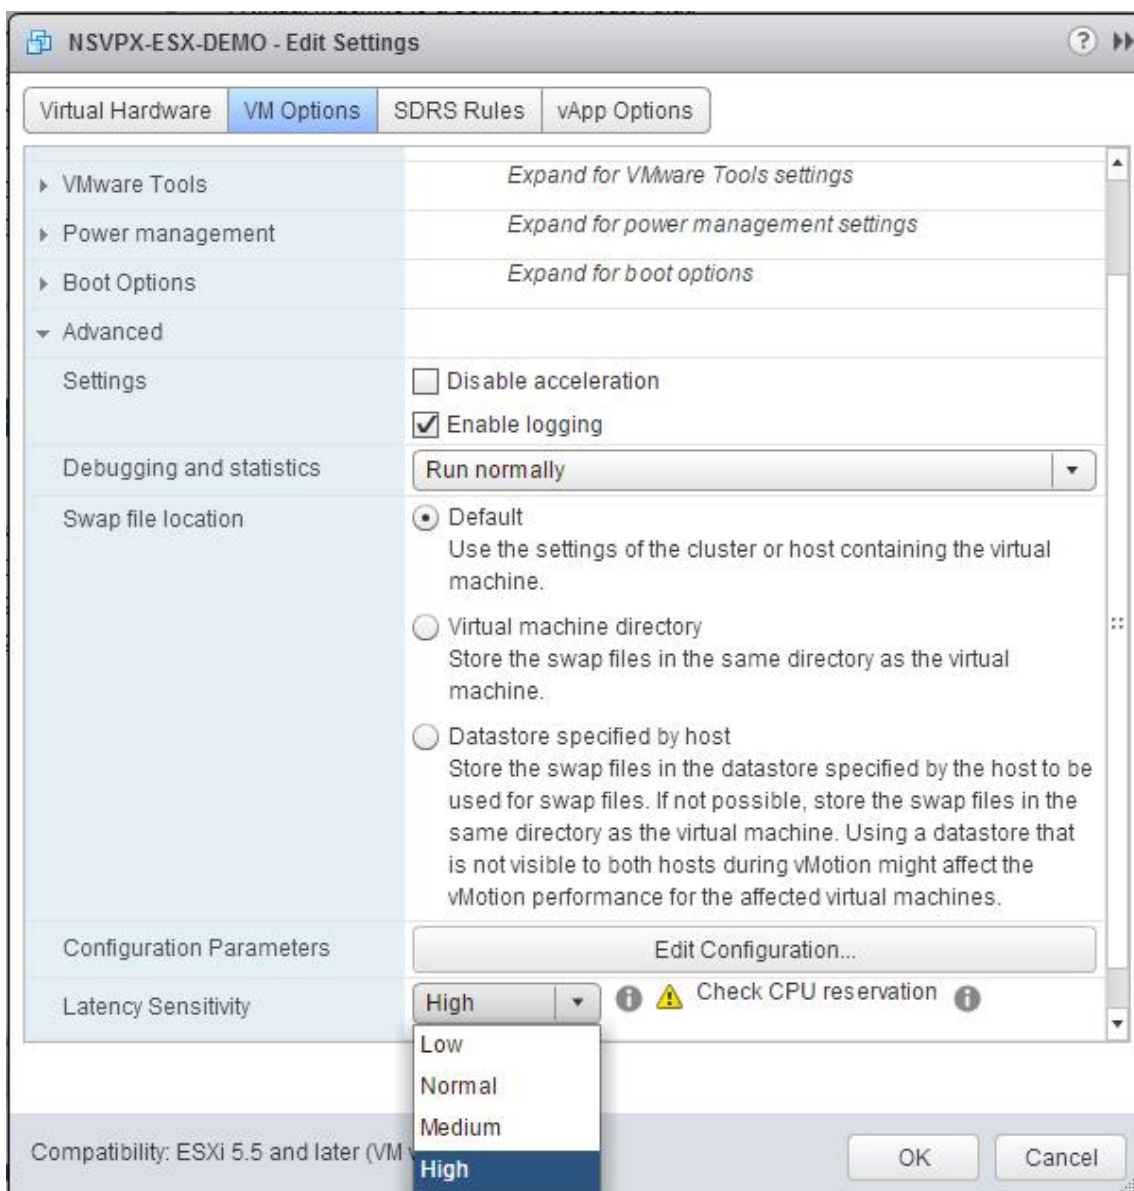

11. Click **OK**.
12. Power on the NetScaler VPX instance.
13. Once the NetScaler VPX instance powers on, you can use the following command to verify the configuration:

```
show interface summary
```

The output must show all the interfaces that you configured:

```

1 > show interface summary
2 -----
3      Interface  MTU      MAC      Suffix

```

```

4 -----
5 1      0/1      1500      00:0c:29:1b:81:0b      NetScaler Virtual
   Interface
6 2      10/1     1500      00:50:56:9f:0c:6f      Intel 82599 10G VF
   Interface
7 3      10/2     1500      00:50:56:9f:5c:1e      Intel 82599 10G VF
   Interface
8 4      10/3     1500      00:50:56:9f:02:1b      Intel 82599 10G VF
   Interface
9 5      10/4     1500      00:50:56:9f:5a:1d      Intel 82599 10G VF
   Interface
10 6     10/5     1500      00:50:56:9f:4e:0b      Intel 82599 10G VF
   Interface
11 7     L0/1     1500      00:0c:29:1b:81:0b      Netscaler Loopback
   interface
12 Done
13 > show inter 10/1
14 1)      Interface 10/1 (Intel 82599 10G VF Interface) #1
15      flags=0xe460 <ENABLED, UP, UP, HAMON, 802.1q>
16      MTU=1500, native vlan=55, MAC=00:50:56:9f:0c:6f, uptime 0
      h21m53s
17      Actual: media FIBER, speed 10000, duplex FULL, fctl NONE,
      throughput 10000
18      LLDP Mode: NONE,                LR Priority: 1024
19
20      RX: Pkts(838020742) Bytes(860888485431) Errs(0) Drops(2527)
      Stalls(0)
21      TX: Pkts(838149954) Bytes(860895860507) Errs(0) Drops(0) Stalls
      (0)
22      NIC: InDisc(0) OutDisc(0) Fctls(0) Stalls(0) Hangs(0) Muted(0)
23      Bandwidth thresholds are not set.
24 Done

```

Configure a NetScaler VPX on ESX hypervisor to use Intel QAT for SSL acceleration in SR-IOV mode

February 14, 2024

The NetScaler VPX instance on the VMware ESX hypervisor can use the Intel QuickAssist Technology (QAT) to accelerate the NetScaler SSL performance. Using Intel QAT, all heavy-latency crypto processing can be offloaded to the chip thus freeing up one or more host CPUs to do other tasks.

Previously, all NetScaler data path crypto processing was done in the software using host vCPUs.

Note:

Currently, NetScaler VPX supports only the C62x chip model under Intel QAT family. This feature is supported starting from NetScaler release 14.1 build 8.50.

Prerequisites

- The ESX host is provisioned with one or more Intel C62x (QAT) chips.
- NetScaler VPX meets the VMware ESX hardware requirements. For more information, see [Install a NetScaler VPX instance on VMware ESX](#).

Limitations

There's no provision to reserve crypto units or bandwidth for individual VMs. All the available crypto units of any Intel QAT hardware are shared across all VMs using the QAT hardware.

Set up the host environment for using Intel QAT

1. Download and install the Intel-provided VMware driver for the C62x series (QAT) chip model in the VMware host. For more information on the Intel package downloads and installation instructions, see [Intel QuickAssist Technology Driver for VMware](#).
2. Enable SR-IOV on the ESX host.
3. Create virtual machines. When creating a VM, assign the appropriate number of PCI devices to meet the performance requirements.

Note:

Each C62x (QAT) chip can have up to three separate PCI endpoints. Each endpoint is a logical collection of VFs, and shares the bandwidth equally with other PCI endpoints of the chip. Each endpoint can have up to 16 VFs that show up as 16 PCI devices. You can add these devices to the VM to do the crypto acceleration using the QAT chip.

Points to note


- If the VM crypto requirement is to use more than one QAT PCI endpoint/chip, it's recommended to pick the corresponding PCI devices/VFs in a round-robin fashion to have a symmetric distribution.
- It's recommended that the number of PCI devices picked is equal to the number of licensed vCPUs (without including the management vCPU count). Adding more PCI devices than the available number of vCPUs does not necessarily improve the performance.

Example:


Consider an ESX host with one Intel C62x chip that has 3 endpoints. While provisioning a VM with 6 vCPUs, pick 2 VFs from each endpoint, and assign them to the VM. This kind of assignment ensures an effective and equal distribution of crypto units for the VM. From the total available vCPUs, by default, one vCPU is reserved for the management plane, and the rest of the vCPUs are available for the data plane PEs.

Assign QAT VFs to VPX using the vSphere web client


1. In the vSphere web client, navigate to the ESX host where the virtual machine is located and click **Power off**.

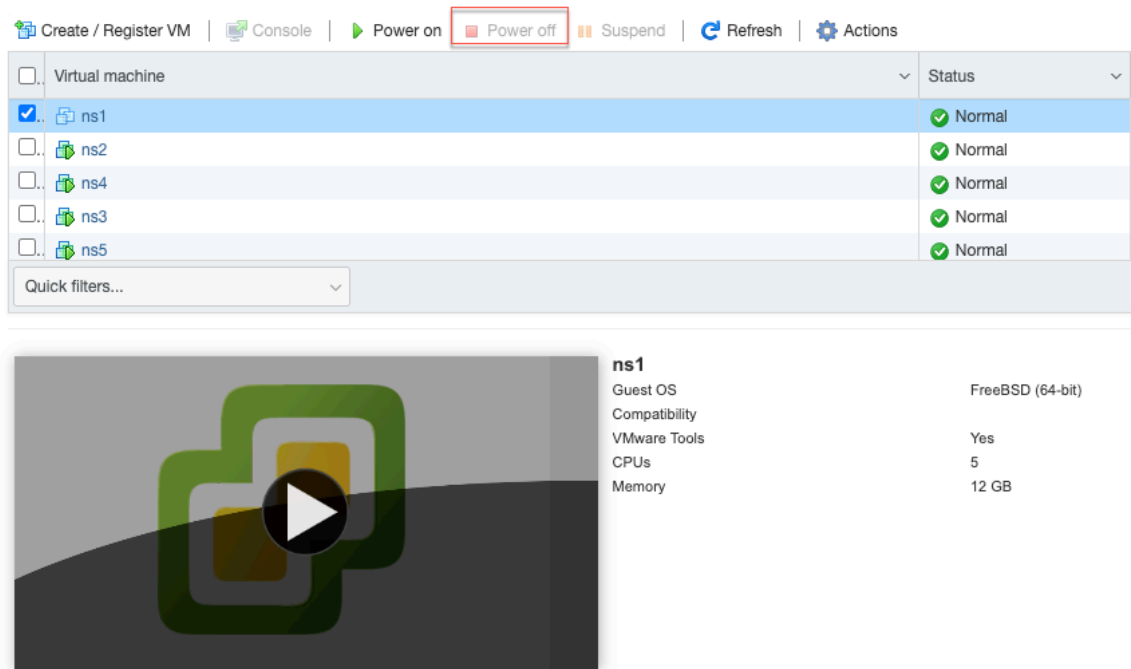

2. Navigate to **Actions > Edit settings > Add other device**, and select PCI device.

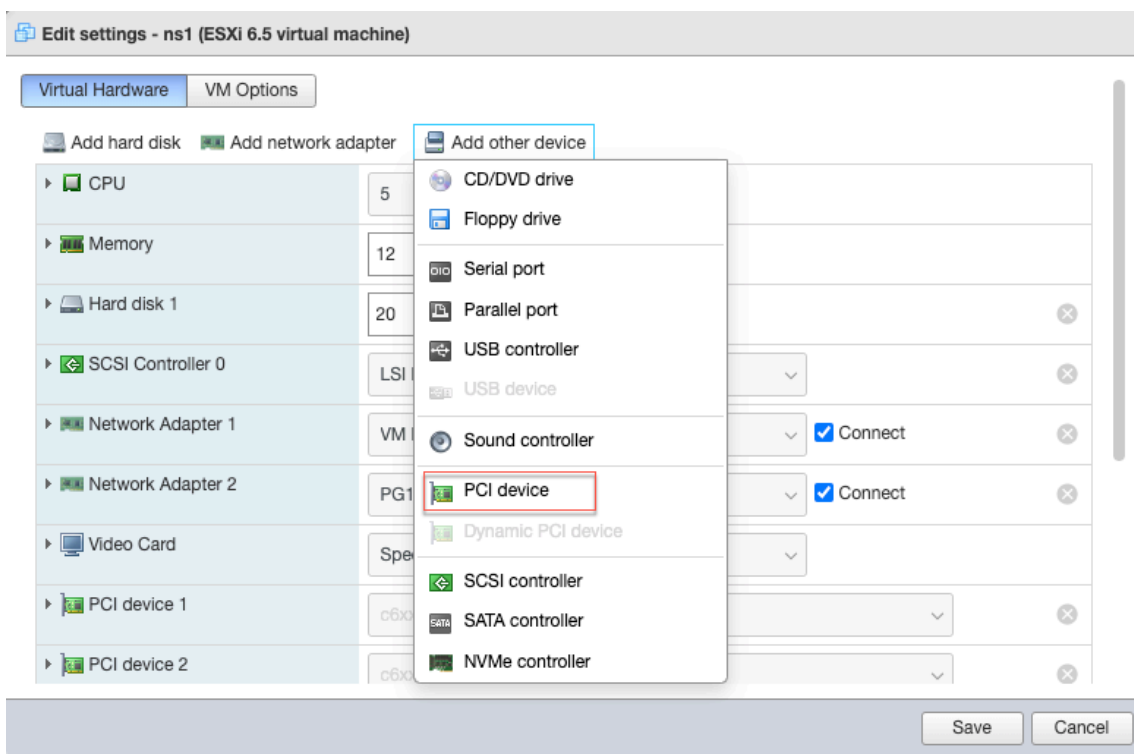

3. For the newly added PCI device, assign the c6xx QAT VF, and save the configuration.

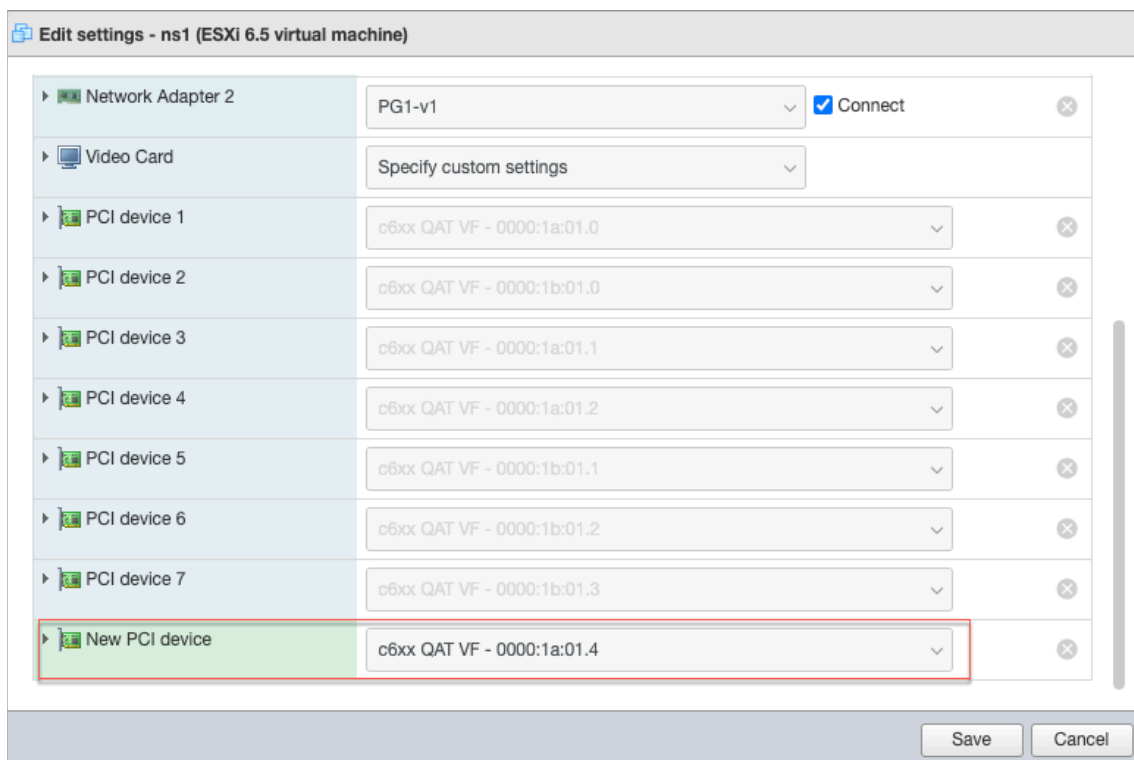

4. Power on the VM again.

5. Run the `stat ssl` command in the NetScaler CLI to display the SSL summary, and verify the

SSL cards after assigning QAT VFs to VPX.

```
> stat ssl

SSL Summary

# SSL cards present           1
# SSL cards UP                1
SSL engine status            1
```

About the deployment

This deployment was tested with the following component specifications:

- **NetScaler VPX version and build:** 14.1–8.50
- **VMware ESXi version:** 7.0.3 (build 20036589)
- **Intel C62x QAT driver version for VMware:** 1.5.1.54

Migrating the NetScaler VPX from E1000 to SR-IOV or VMXNET3 Network Interfaces

May 2, 2023

May 24, 2018

You can configure your existing NetScaler VPX instances that use E1000 network interfaces to use SR-IOV or VMXNET3 network interfaces.

To configure an existing NetScaler VPX instance to use SR-IOV network interfaces, see [Configure a NetScaler VPX instance to use SR-IOV network interface](#).

To configure an existing NetScaler VPX instance to use VMXNET3 network interfaces, see [Configure a NetScaler VPX instance to use VMXNET3 network interface](#).

Configure a NetScaler VPX instance to use PCI passthrough network interface

August 19, 2024

Overview

After you have installed and configured a NetScaler VPX instance on VMware ESX Server, you can use the vSphere Web Client to configure the virtual appliance to use PCI passthrough network interfaces.

The PCI passthrough feature allows a guest virtual machine to directly access physical PCI and PCIe devices connected to a host.


Prerequisites

- The firmware version of the Intel XL710 NIC on the host is 5.04.
- A PCI passthrough device connected to and configured on the host
- Supported NICs:
 - Intel X710 10G NIC
 - Intel XL710 dual-port 40G NIC
 - Intel XL710 single-port 40G NIC
 - Intel XXV710 dual-port 25G NIC

Configure passthrough devices on a host

Before configuring a passthrough PCI device on a virtual machine, you must configure it on the host machine. Follow these steps to configure passthrough devices on a host.

1. Select the host from the Navigator panel of the vSphere Web Client.
2. Click **Manage > Settings > PCI Devices**. All available passthrough devices are displayed.
3. Right-click the device that you want to configure and click **Edit**.
4. The **Edit PCI Device Availability** window appears.
5. Select the devices to be used for passthrough and click **OK**.

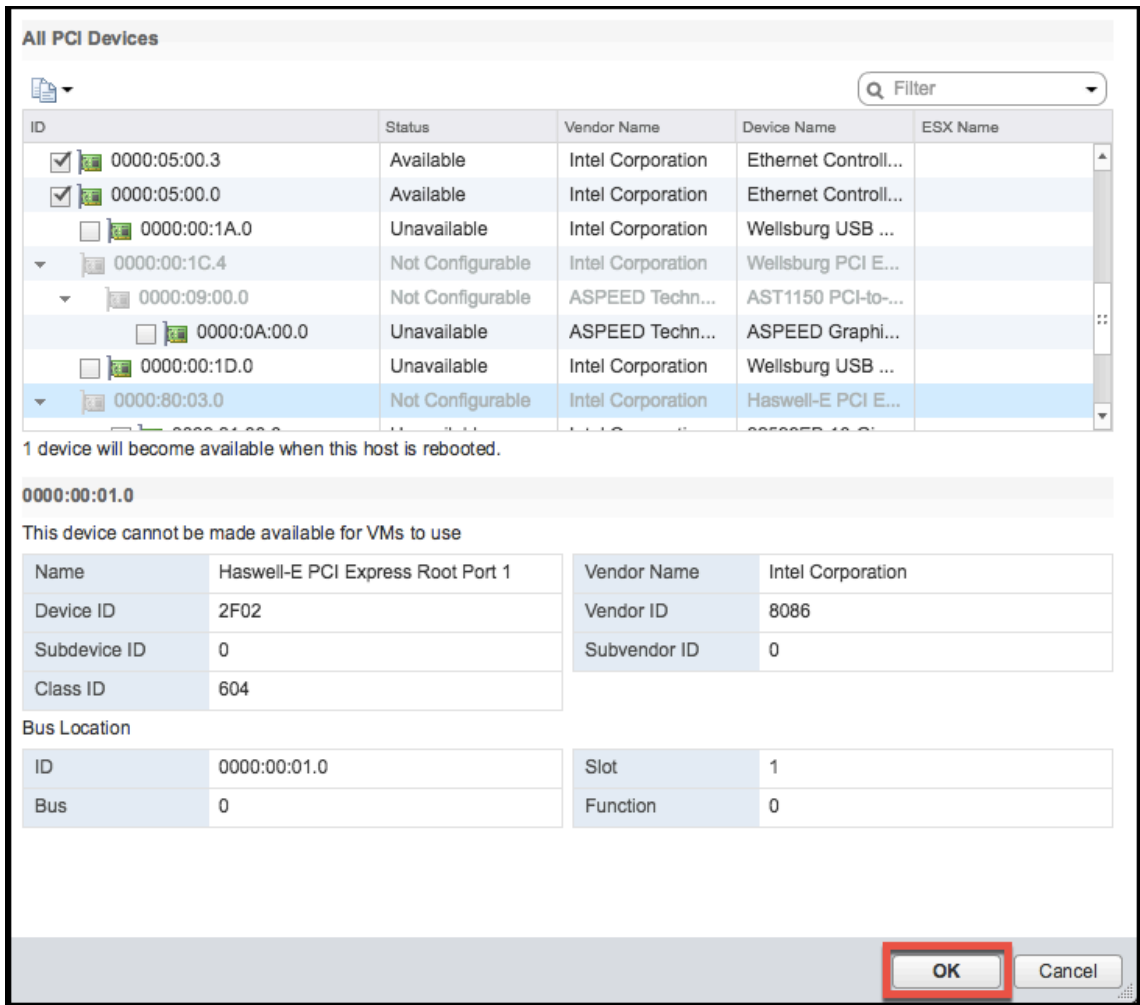


6. Restart the host machine.

Configure passthrough devices on a NetScaler VPX instance

Follow these steps to configure a passthrough PCI device on a NetScaler VPX instance.


1. Power off the virtual machine.
2. Right-click the virtual machine and select **Edit Settings**.
3. On the **Virtual Hardware** tab, select **PCI Device** from the **New Device** drop-down menu, and click **Add**.

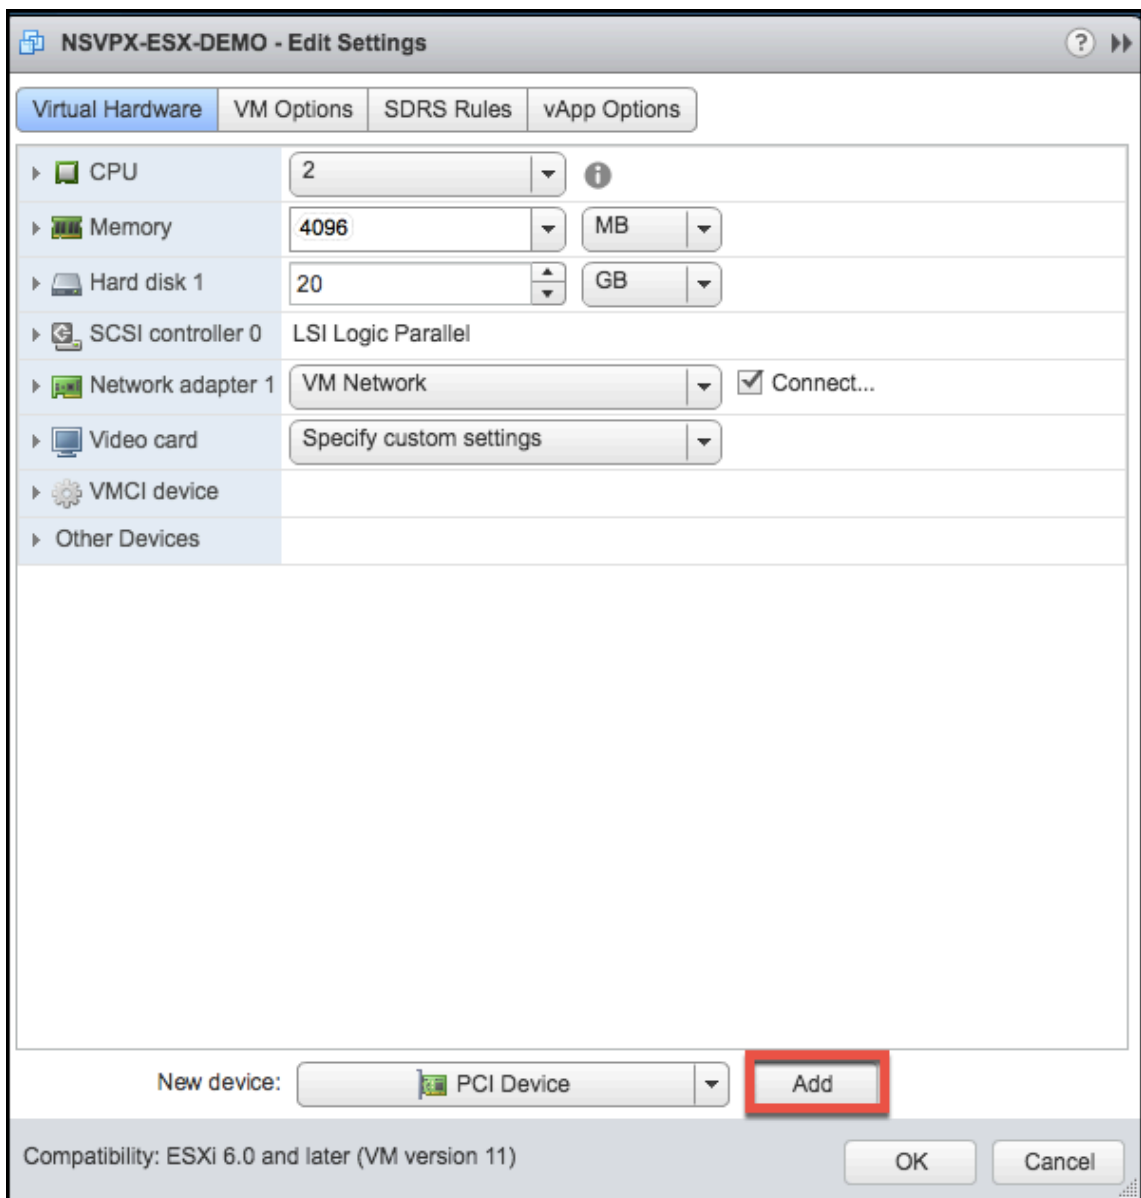

4. Expand **New PCI device** and select the passthrough device to connect to the virtual machine from the drop-down list and click **OK**.

Note

VMXNET3 network interface and PCI Passthrough Network Interface cannot coexist.

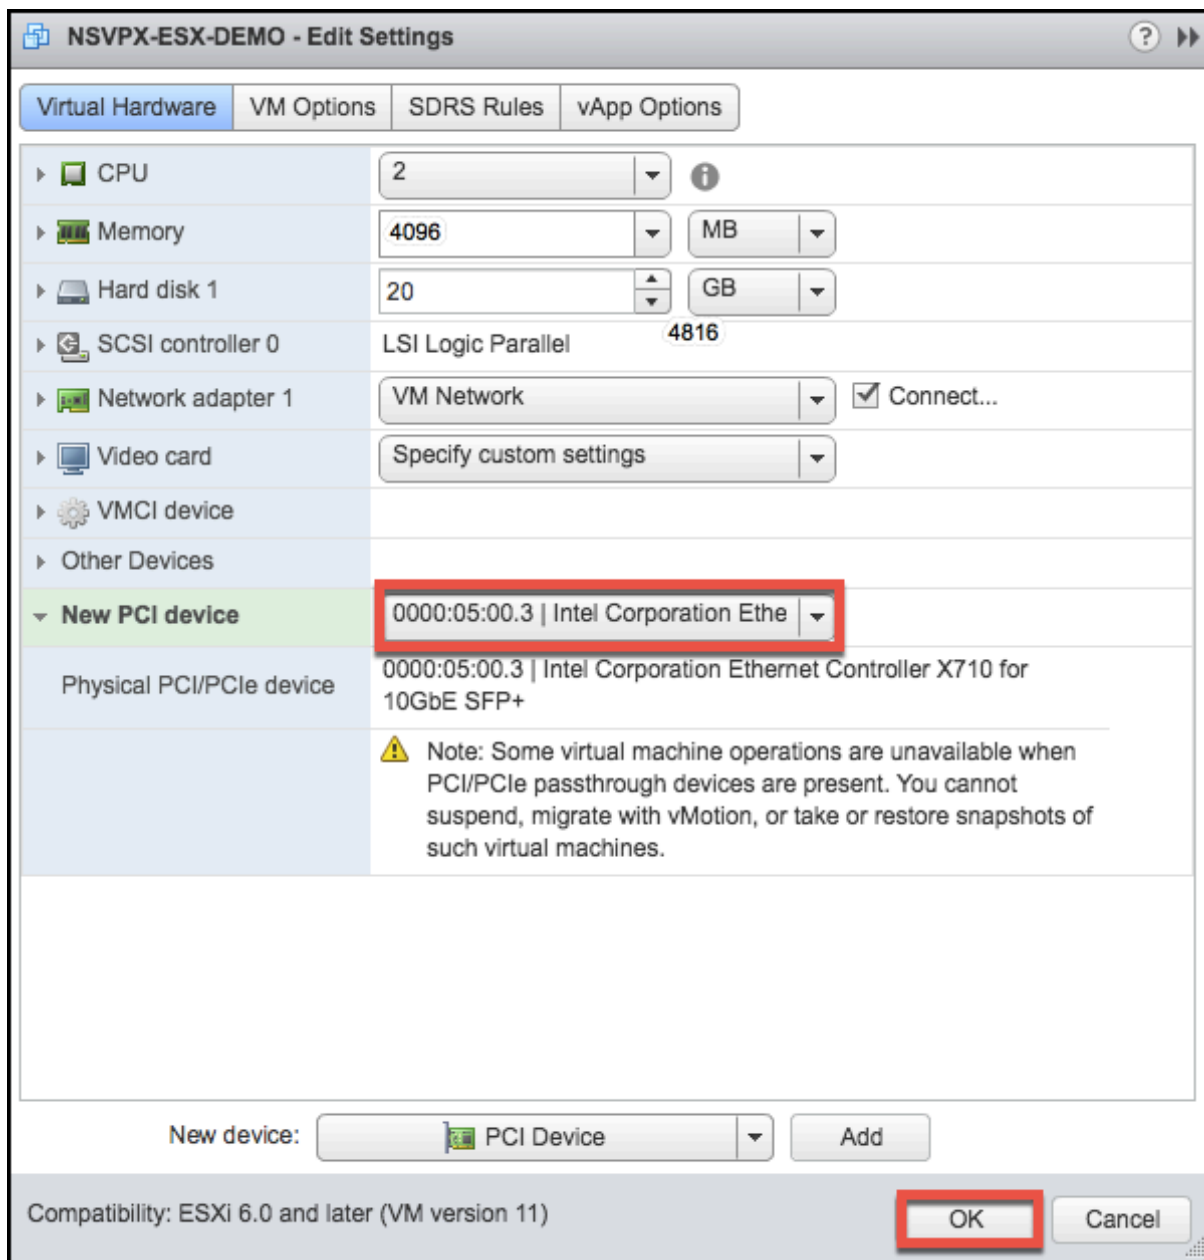

1. Power on the guest virtual machine.

You have completed the steps to configuring NetScaler VPX to use PCI passthrough network interfaces.

Apply NetScaler VPX configurations at the first boot of the NetScaler appliance on VMware ESX hypervisor

May 2, 2023

You can apply the NetScaler VPX configurations during the first boot of the NetScaler appliance on the VMware ESX hypervisor. Therefore in certain cases, a specific setup or VPX instance is brought up in much lesser time.

For more information on Preboot user data and its format, see [Apply NetScaler VPX configurations at the first boot of the NetScaler appliance in cloud](#).

Note:

To bootstrap using preboot user data in ESX, default gateway config must be passed in `<NS-CONFIG>` section. For more information on the content of the `<NS-CONFIG>` tag, see [Sample-`<NS-CONFIG>`-section](#).

Sample `<NS-CONFIG>` section:

```
1 <NS-PRE-BOOT-CONFIG>
2
3   <NS-CONFIG>
4     add route 0.0.0.0 0.0.0.0 10.102.38.1
5   </NS-CONFIG>
6
7   <NS-BOOTSTRAP>
8     <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
9     <NEW-BOOTSTRAP-SEQUENCE>YES</NEW-BOOTSTRAP-SEQUENCE>
10
11     <MGMT-INTERFACE-CONFIG>
12       <INTERFACE-NUM> eth0 </INTERFACE-NUM>
13       <IP> 10.102.38.216 </IP>
14       <SUBNET-MASK> 255.255.255.0 </SUBNET-MASK>
15     </MGMT-INTERFACE-CONFIG>
16   </NS-BOOTSTRAP>
17
18 </NS-PRE-BOOT-CONFIG>
```

How to provide preboot user data on ESX hypervisor

You can provide preboot user data on ESX hypervisor from web client or vSphere client in the following two ways:

- Using CD/DVD ISO
- Using OVF Property

Provide user data using CD/DVD ISO

You can use the VMware vSphere client to inject user data into the VM as an ISO image using the CD/DVD drive.

Follow these steps to provide user data using the CD/DVD ISO:

1. Create a file with file name `userdata` that has the preboot user data content. For more information on the content of the `<NS-CONFIG>` tag, see Sample `<NS-CONFIG>` section.

Note: File name must be strictly used as `userdata`.

2. Store the `userdata` file in a folder, and build an ISO image using the folder.

You can build an ISO image with `userdata` file by the following two methods:

- Using any image processing tool such as PowerISO.
- Using `mkisofs` command in Linux.

The following sample configuration shows how to generate an ISO image using the `mkisofs` command in Linux.


```

1 root@ubuntu:~/sai/14jul2021# ls -l total 4
2 drwxr-xr-x 2 root root 4096 Jul 14 12:32 esx_preboot_userdata
3 root@ubuntu:~/sai/14jul2021#
4 root@ubuntu:~/sai/14jul2021# ls -l esx_preboot_userdata/total 4
5 -rw-r--r-- 1 root root 3016 Jul 14 12:32 userdata
6 root@ubuntu:~/sai/14jul2021# mkisofs -o esx_preboot_userdata.iso
  ./esx_preboot_userdata
7 I: -input-charset not specified, using utf-8 (detected in locale
  settings)
8 Total translation table size: 0
9 Total rockridge attributes bytes: 0
10 Total directory bytes: 112
11 Path table size(bytes): 10
12 Max brk space used 0
13 176 extents written (0 MB)
14 root@ubuntu:~/sai/14jul2021# ls -lh
15 total 356K
16 drwxr-xr-x 2 root root 4.0K Jul 14 12:32 esx_preboot_userdata
17 -rw-r--r-- 1 root root 352K Jul 14 12:34 esx_preboot_userdata.iso
18
19 root@ubuntu:~/sai# ls preboot_userdata_155_193 userdata
20 root@ubuntu:~/sai# mkisofs -o preboot_userdata_155_193.iso ./
  preboot_userdata_155_193
21 I: -input-charset not specified, using utf-8 (detected in locale
  settings)
22 Total translation table size: 0
23 Total rockridge attributes bytes: 0
24 Total directory bytes: 112
25 Path table size(bytes): 10


```

```
26 Max brk space used 0
27 176 extents written (0 MB)
```


3. Provision the NetScaler VPX instance using standard deployment process to create the VM. But do not power on the VM automatically.

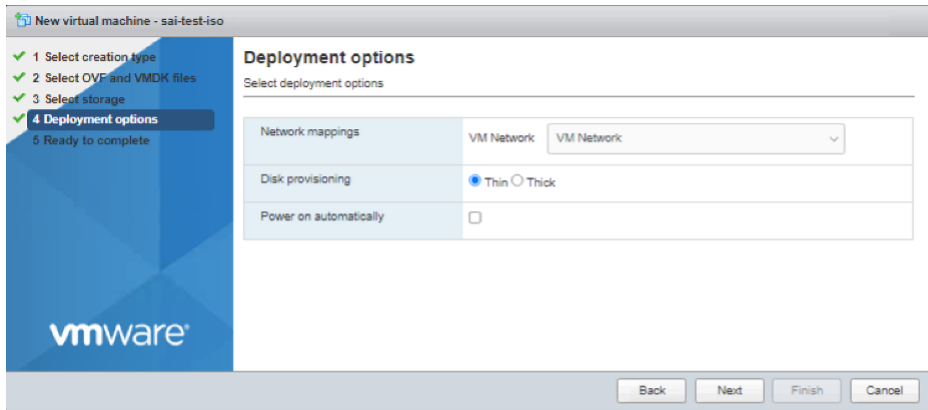


4. After the VM is successfully created, attach the ISO file as CD/DVD drive to the VM.

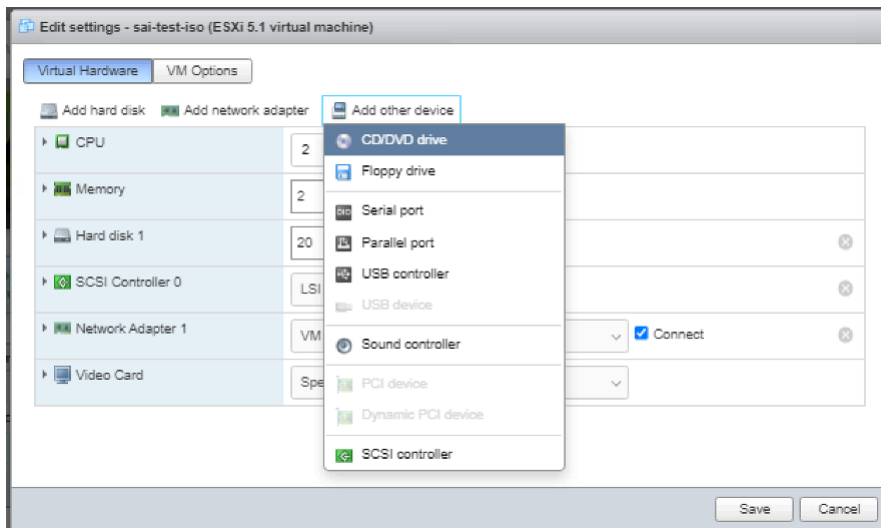

5. Navigate to **New CD/DVD Drive** and choose **Datastore ISO file** from the drop-down menu.

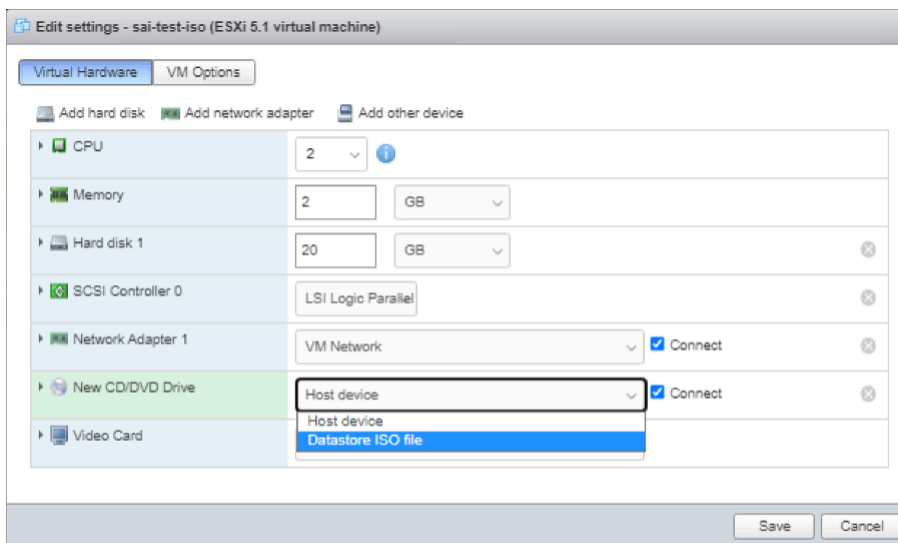

6. Select a Datastore in the vSphere Client.

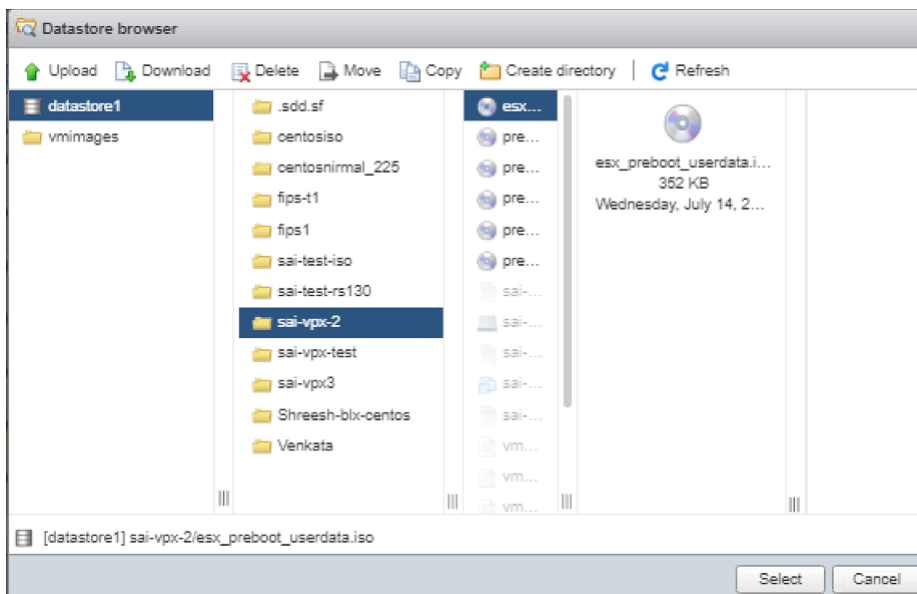

7. Power on the VM.

Provide user data using OVF property from ESX web client

Follow these steps to provide user data using OVF property.

1. Create a file with user data content.


```

9   <Property ovf:key="guestinfo.userdata" ovf:type="string" ovf:
    userConfigurable="true" ovf:value="">
10
11   <Label>Userdata</Label>
12   <Description> Userdata for ESX VPX </Description>
13   </Property>
14
15 </ProductSection>

```

4. Provide the base64 encoded user data as the `ovf:value` for `guestinfo.userdata` property in the Product section.

```

1 <ProductSection>
2
3 <Info>Information about the installed software</Info>
4 <Product>NSVPX-VSK Template</Product>
5 <Vendor>Citrix</Vendor>
6 <VendorUrl>www.citrix.com</VendorUrl>
7 <Category> Preboot Userdata </Category>
8 <Property ovf:key="guestinfo.userdata" ovf:type="string" ovf:
  userConfigurable="true"
9   ovf:value="PE5TLVBSRS1CT09ULUNPTkZJRz4KICAgIDx0Uy1DT05GSUc+
  Cg1hZGQgcm91dGUgMC4wLjAuMCAw
10  LjAuMCAwIDEwLjEwMi4zOC4xCiAgICA8L05TLUNPTkZJRz4KICAgICA8TlMtQk9PVFNuUkFQ
11  ICAgICAgICAgICAgICA8U0tJUC1ERUZBVUxULUJPT1RTVFJBUD5ZRVM8L1NLSVA+REVGVVMVC1C
12  U1RSQVA+
  CiAgICAgICAgICAgICAgIDx0RVctQk9PVFNuUkFQLVNFUUVFTkNFP1lFUzZwTkVXLUJPT1RT
13  VFJBUC1TRVFRU5DRT4KICAgICAgICAgPE1HTVQtSU5URVJGQUNFLUNPTkZJRz4KICAgICAg
14  ICAgICAgIDxJTlRFUkZBQ0UtTlVNPiBlbGgwIDwvSU5URVJGQUNFLU5VTT4KICAgICAgICAg
15  ICAgIDxJUD4gICAgMTAuMTAyLjM4LjIxOSA8L0lQPgogICAgICAgICAgICAgICAgPFNVQk5F
16  QVNLPiAyNTUuMjU1LjI1NS4wIDwvU1VCTkVULU1BU0s+
  CiAgICAgICAgPC9NR01ULU1OVEVSRkFD
17  RS1DT05GSUc+
  CiAgICA8L05TLUJPT1RTVFJBUD4KPC90Uy1QUkUtQk9PVC1DT05GSUc+Cg
  ==">
18
19   <Label>Userdata</Label>
20   <Description> Userdata for ESX VPX </Description>
21   </Property>
22
23 </ProductSection>

```

5. Use the modified OVF template with Product section for the VM deployment.


```

Please change the default NSROOT password.
Enter new password:
Please re-enter your password:
Done
> sh ns ver
NetScaler NS13.0: Build 83.9005.nc, Date: Jul 13 2021, 02:56:05 (64-bit)
Done
> sh ns ip
state      Ipaddress      Traffic Domain  Type           Mode           Arp           Icmp           Vserver      S
-----      -
1)         10.102.38.219  0               NetScaler IP   Active         Enabled       Enabled       NA           E
nabled
Done
> sh route
Network      Netmask          Gateway/OwnedIP  VLAN           State          Traffic Domain  Type
-----      -
1)          0.0.0.0         0.0.0.0         10.102.38.1    0             UP             0              STATI
C
2)          127.0.0.0       255.0.0.0       127.0.0.1     0             UP             0              PERMA
NENT
3)          10.102.38.0    255.255.255.0  10.102.38.219 0             UP             0              DIREC
T
Done

```

Provide user data using OVF property from ESX vSphere client

Follow these steps to provide user data using OVF property from ESX vSphere client.

1. Create a file with user data content.

```

root@ubuntu:~/sai/14jul2021# cat esx_userdata.xml
<NS-PRE-BOOT-CONFIG>
  <NS-CONFIG>
    add route 0.0.0.0 0.0.0.0 10.102.38.1
  </NS-CONFIG>

  <NS-BOOTSTRAP>
    <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
    <NEW-BOOTSTRAP-SEQUENCE>YES</NEW-BOOTSTRAP-SEQUENCE>

    <MGMT-INTERFACE-CONFIG>
      <INTERFACE-NUM> eth0 </INTERFACE-NUM>
      <IP> 10.102.38.219 </IP>
      <SUBNET-MASK> 255.255.255.0 </SUBNET-MASK>
    </MGMT-INTERFACE-CONFIG>
  </NS-BOOTSTRAP>
</NS-PRE-BOOT-CONFIG>

```

2. Encode the user data content with Base64 encoding. You can perform the Base64 encoding using the following two methods:

- In Linux, use the following command:

```
1 base64 <userdata-filename> > <output-file>
```

Example:

```
1 base64 esx_userdata.xml > esx_userdata_b64
```

```

root@ubuntu:~/sai/14jul2021# base64 esx_userdata.xml > esx_userdata_b64
root@ubuntu:~/sai/14jul2021#
root@ubuntu:~/sai/14jul2021# cat esx_userdata_b64
PE5TLVBSRS1CT09ULUNPTkZJRz4KICAgIDx0Uy1DT05GSUc+CglhZGQgcm91dGUgMC4wLjAuMCAw
LjAuMCAwIDEwLjEwMi4zOC4xCiAgICA8L05TLUNPTkZJRz4KICAgICA8TlMtQk9PVFNuUkFQpGog
ICAgICAgICAgICAgICA8U0tJUC1ERUZBVUxULUJPT1RTVFJBUD5ZRVM8L1NLSVA+REVGVVVMVC1CT09U
U1RSQVA+CiAgICAgICAgICAgIDxORVctQk9PVFNuUkFQLVNFUUVVFTkNFPl1FUzwwTkVXLUJPT1RT
VFJBUC1TRVFRU5DRt4KICAgICAgICAgPE1HTVQtSU5URVJGQUFLUNPTkZJRz4KICAgICAgICAg
ICAgICAgIDxJTlRFUkZBQ0UtTlVNPiBlcGwIDwvSU5URVJGQUFLU5VTT4KICAgICAgICAgICAg
ICAgIDxJUD4gICAgMTAuMTAyLjM4LjIxOSA8L01QPgogICAgICAgICAgICAgICAgPFNVQk5FVC1N
QVNLPlAyNTUuMjU1LjI1NS4wIDwvU1VCTkVULU1BU0s+CiAgICAgICAgPC9NR01ULU1OVEVSRkFD
RS1DT05GSUc+CiAgICA8L05TLUJPT1RTVFJBUD4KPC90Uy1QUkUtQk9PVC1DT05GSUc+Cg==

```

- Use online tools to encode user data content, for example, Base64 Encode and Decode.

3. Include a **Product** section in the OVF template of a NetScaler VPX instance on ESX hypervisor.

Sample Product section:

```

1 <ProductSection>
2
3 <Info>Information about the installed software</Info>
4 <Product>NSVPX-VSK Template</Product>
5 <Vendor>Citrix</Vendor>
6 <VendorUrl>www.citrix.com</VendorUrl>
7 <Category> Preboot Userdata </Category>
8
9 <Property ovf:key="guestinfo.userdata" ovf:type="string" ovf:
   userConfigurable="true" ovf:value="">
10
11 <Label>Userdata</Label>
12 <Description> Userdata for ESX VPX </Description>
13 </Property>
14
15 </ProductSection>

```

4. Provide the base64 encoded user data as the `ovf:value` for `guestinfo.userdata` property in the Product section.

```

1 <ProductSection>
2
3 <Info>Information about the installed software</Info>
4 <Product>NSVPX-VSK Template</Product>
5 <Vendor>Citrix</Vendor>
6 <VendorUrl>www.Citrix.com</VendorUrl>
7 <Category> Preboot Userdata </Category>
8 <Property ovf:key="guestinfo.userdata" ovf:type="string" ovf:
   userConfigurable="true"
9   ovf:value="PE5TLVBSRS1CT09ULUNPTkZJRz4KICAgIDx0Uy1DT05GSUc+
   CglhZGQgcm91dGUgMC4wLjAuMCAw
10   LjAuMCAwIDEwLjEwMi4zOC4xCiAgICA8L05TLUNPTkZJRz4KICAgICA8TlMtQk9PVFNuUkFQ
11   ICAgICAgICAgICAgICA8U0tJUC1ERUZBVUxULUJPT1RTVFJBUD5ZRVM8L1NLSVA+REVGVVVMVC1C
12   U1RSQVA+
   CiAgICAgICAgICAgIDxORVctQk9PVFNuUkFQLVNFUUVVFTkNFPl1FUzwwTkVXLUJPT1RT

```


ments. VMC provides a user interface same as on-prem vCenter. It functions identical to the ESX-based NetScaler VPX deployments.

Prerequisites

Before you begin installing a virtual appliance, do the following:

- One VMware SDDC must be present with at least one host.
- Download the NetScaler VPX appliance setup files.
- Create appropriate network segments on VMware SDDC to which the virtual machines connect.
- Obtain VPX license files. For more information about NetScaler VPX instance licenses, see the *NetScaler VPX Licensing Guide* at <http://support.citrix.com/article/ctx131110>.

VMware cloud hardware requirements

The following table lists the virtual computing resources that the VMware SDDC must provide for each VPX nCore virtual appliance.

Table 1. Minimum virtual computing resources required for running a NetScaler VPX instance

Component	Requirement
Memory	2 GB
Virtual CPU (vCPU)	2
Virtual network interfaces	In VMware SDDC, you can install a maximum of 10 virtual network interfaces if the VPX hardware is upgraded to version 7 or higher.
Disk space	20 GB

Note

This is in addition to any disk requirements for the hypervisor.

For production use of the VPX virtual appliance, the full memory allocation must be reserved.

OVF Tool 1.0 system requirements

OVF Tool is a client application that can run on Windows and Linux systems. The following table describes the minimum system requirements.

Table 2. Minimum system requirements for OVF tool installation

Component	Requirement
Operating system	For detailed requirements from VMware, search for the “OVF Tool User Guide” PDF file at http://kb.vmware.com/ .
CPU	750 MHz minimum, 1 GHz or faster recommended
RAM	1 GB Minimum, 2 GB recommended
NIC	100 Mbps or faster NIC

For information about installing OVF, search for the “OVF Tool User Guide” PDF file at <http://kb.vmware.com/>.

Downloading the NetScaler VPX setup files

The NetScaler VPX instance setup package for VMware ESX follows the Open Virtual Machine (OVF) format standard. You can download the files from the Citrix website. You need a Citrix account to log on. If you do not have a Citrix account, access the home page at <http://www.citrix.com>. Click the **New Users link**, and follow the instructions to create a new Citrix account.

Once logged on, navigate the following path from the Citrix home page:

Citrix.com > **Downloads** > **NetScaler** > **Virtual Appliances**.

Copy the following files to a workstation on the same network as the ESX server. Copy all three files into the same folder.

- NSVPX-ESX-<release number>-<build number>-disk1.vmdk (for example, NSVPX-ESX-13.0-79.64-disk1.vmdk)
- NSVPX-ESX-<release number>-<build number>.ovf (for example, NSVPX-ESX-13.0-79.64.ovf)
- NSVPX-ESX-<release number>-<build number>.mf (for example, NSVPX-ESX-13.0-79.64.mf)

Install a NetScaler VPX instance on VMware cloud

After you have installed and configured VMware SDDC, you can use the SDDC to install virtual appliances on the VMware cloud. The number of virtual appliances that you can install depends on the amount of memory available on the SDDC.

To install NetScaler VPX instances on VMware cloud, follow these steps:

1. Open VMware SDDC on your workstation.
2. In the **User Name** and **Password** text boxes, type the administrator credentials, and then click Login.
3. On the **File** menu, click **Deploy OVF Template**.
4. In the **Deploy OVF Template** dialog box, in **Deploy from file**, browse to the location at which you saved the NetScaler VPX instance setup files, select the .ovf file, and click **Next**.

Note: By default, the NetScaler VPX instance uses E1000 network interfaces. To deploy ADC with the VMXNET3 interface, modify the OVF to use VMXNET3 interface instead of E1000.

5. Map the networks shown in the virtual appliance OVF template to the networks that you configured on the VMware SDDC. Click **Next** to start installing a virtual appliance on VMware SDDC.
6. You are now ready to start the NetScaler VPX instance. In the navigation pane, select the NetScaler VPX instance that you have installed and, from the right-click menu, select **Power On**. Click the **Console** tab to emulate a console port.
7. If you want to install another virtual appliance, repeat from Step 6.
8. Specify the management IP address from the same segment that is selected to be the management network. The same subnet is used for the Gateway.
9. The VMware SDDC requires that NAT and firewall rules are created explicitly for all private IP addresses belonging to network segments.

Install a NetScaler VPX instance on Microsoft Hyper-V server

May 2, 2023

To install NetScaler VPX instances on Microsoft Windows Server, you must first install Windows Server with the Hyper-V role enabled, on a machine with adequate system resources. While installing the Hyper-V role, be sure to specify the NICs on the server that Hyper-V uses to create the virtual networks. You can reserve some NICs for the host. Use Hyper-V Manager to perform the NetScaler VPX instance installation.

The NetScaler VPX instance for Hyper-V is delivered in virtual hard disk (VHD) format. It includes the default configuration for elements such as CPU, network interfaces, and hard-disk size and format. After you install NetScaler VPX instance, you can configure the network adapters on a virtual appliance, add virtual NICs, and then assign the NetScaler IP address, subnet mask, and gateway, and complete the basic configuration of the virtual appliance.

After the initial configuration of the VPX instance, if you want to upgrade the appliance to the latest software release, see [Upgrade a NetScaler VPX standalone appliance](#)

Note

Intermediate System-to-Intermediate System (ISIS) protocol is not supported on the NetScaler VPX virtual appliance hosted on the HyperV-2012 platform.

Prerequisites for installing NetScaler VPX instance on Microsoft servers

Before you begin installing a virtual appliance, do the following:

- Enable the Hyper-V role on Windows Servers. For more information, see [http://technet.microsoft.com/en-us/library/ee344837\(WS.10\).aspx](http://technet.microsoft.com/en-us/library/ee344837(WS.10).aspx).
- Download the virtual appliance setup files.
- Get NetScaler VPX instance license files. For more information about NetScaler VPX instance licenses, see the *NetScaler VPX Licensing Guide* at <http://support.citrix.com/article/ctx131110>.

Microsoft server hardware requirements

The following table describes the minimum system requirements for Microsoft servers.

Table 1. Minimum system requirements for Microsoft servers

Component	Requirement
CPU	1.4 GHz 64-bit processor
RAM	8 GB
Disk Space	32 GB or greater

The following table lists the virtual computing resources for each NetScaler VPX instance.

Table 2. Minimum virtual computing resources required for running a NetScaler VPX instance

Component	Requirement
RAM	4 GB
Virtual CPU	2
Disk Space	20 GB

Component	Requirement
Virtual Network Interfaces	1

Download the NetScaler VPX setup files

The NetScaler VPX instance for Hyper-V is delivered in virtual hard disk (VHD) format. You can download the files from the Citrix website. You need a Citrix account to log in. If you do not have a Citrix account, access the home page at <http://www.citrix.com>, click **Sign In > My account > Create Citrix Account**, and follow the instructions to create a Citrix account.

To download the NetScaler VPX instance setup files, follow these steps:

1. In a web browser, go to <http://www.citrix.com/>.
2. Sign in with your user name and password.
3. Click **Downloads**.
4. In **Select a Product** drop-down menu, select **NetScaler (NetScaler ADC)**.
5. Under **NetScaler Release X.X > Virtual Appliances**, click **NetScaler VPX Release X.X**
6. Download the compressed file to your server.

Install the NetScaler VPX instance on Microsoft servers

After you have enabled the Hyper-V role on Microsoft Server and extracted the virtual appliance files, you can use Hyper-V Manager to install NetScaler VPX instance. After you import the virtual machine, you need to configure the virtual NICs by associating them to the virtual networks created by Hyper-V.

You can configure a maximum of eight virtual NICs. Even if the physical NIC is DOWN, the virtual appliance assumes that the virtual NIC is UP, because it can still communicate with the other virtual appliances on the same host (server).

Note

You cannot change any settings while the virtual appliance is running. Shut down the virtual appliance and then make changes.

To install NetScaler VPX instance on Microsoft Server by using Hyper-V Manager:

1. To start Hyper-V Manager, click **Start**, point to **Administrative Tools**, and then click **Hyper-V Manager**.

2. In the navigation pane, under **Hyper-V Manager**, select the server on which you want to install NetScaler VPX instance.
3. On the **Action** menu, click **Import Virtual Machine**.
4. In the **Import Virtual Machine** dialog box, in **Location**, specify the path of the folder that contains the NetScaler VPX instance software files, and then select **Copy the virtual machine (create a new unique ID)**. This folder is the parent folder that contains the Snapshots, Virtual Hard Disks, and Virtual Machines folders.
5. Note: If you received a compressed file, make sure that you extract the files into a folder before you specify the path to the folder.
6. Click **Import**.
7. Verify that the virtual appliance that you imported is listed under **Virtual Machines**.
8. To install another virtual appliance, repeat steps **2** through **6**.

Important

Make sure that you extract the files to a different folder in step **4**.

Auto-provision a NetScaler VPX instance on Hyper-V

Auto-provisioning of NetScaler VPX instance is optional. If auto-provisioning is not done, the virtual appliance provides an option to configure the IP address and so on.

To auto-provision NetScaler VPX instance on Hyper-V, follow these steps.

1. Create an ISO9660 compliant ISO image using the xml file as depicted in the example. Make sure that the name of the xml file is **userdata**.

You can create an ISO file from XML file using:

- Any image processing tool such as PowerISO.
- `mkisofs` command in Linux.

```
1 <?xml version="1.0" encoding="UTF-8" standalone="no"?>
2
3 <Environment xmlns:oe="http://schemas.dmtf.org/ovf/environment/1"
4
5 xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
6
7 oe:id=""
8
9 xmlns="http://schemas.dmtf.org/ovf/environment/1">
10
11 <PlatformSection>
12
13 <Kind>HYPER-V</Kind>
14
```

```
15 <Version>2013.1</Version>
16
17 <Vendor>CITRIX</Vendor>
18
19 <Locale>en</Locale>
20
21 </PlatformSection>
22
23 <PropertySection>
24
25 <Property oe:key="com.citrix.netscaler.ovf.version" oe:value="1.0"
   />
26
27 <Property oe:key="com.citrix.netscaler.platform" oe:value="NS1000V
   "/>
28
29 <Property oe:key="com.citrix.netscaler.orch\_env" oe:value="cisco-
   orch-env"/>
30
31 <Property oe:key="com.citrix.netscaler.mgmt.ip" oe:value="
   10.102.100.122"/>
32
33 <Property oe:key="com.citrix.netscaler.mgmt.netmask" oe:value="
   255.255.255.128"/>
34
35 <Property oe:key="com.citrix.netscaler.mgmt.gateway" oe:value="
   10.102.100.67"/></PropertySection>
36
37 </Environment>
```

2. Copy the ISO image to hyper-v server.
3. Select the virtual appliance that you imported, and then on the **Action** menu, select **Settings**. You can also select the virtual appliance and then right click and select **Settings**. The **Settings** window for the selected virtual appliance is displayed.
4. In the **Settings** window, under the hardware section, click **IDE Controller**.
5. In the right window pane, select **DVD Drive** and click **Add**. The DVD Drive is added under the **IDE Controller** section in the left window pane.
6. Select the **DVD Drive** added in step 5. In the right window pane, select the **Image file radio** button and click **Browse** and select the ISO image that you copied on Hyper-V server, in step 2.
7. Click **Apply**.

Note

The virtual appliance instance comes up in the default IP address, when:

- The DVD drive is attached and the ISO file is not provided.
- The ISO file does not include the user data file.

- The user data file name or format is not correct.

To configure virtual NICs on the NetScaler VPX instance, follow these steps:

1. Select the virtual appliance that you imported, and then on the **Action** menu, select **Settings**.
2. In the **Settings for <virtual appliance name>** dialog box, click **Add Hardware** in the left pane.
3. In the right pane, from the list of devices, select **Network Adapter**.
4. Click **Add**.
5. Verify that **Network Adapter (not connected)** appears in the left pane.
6. Select the network adapter in the left pane.
7. In the right pane, from the **Network** menu, select the virtual network to connect the adapter to.
8. To select the virtual network for other network adapters that you want to use, repeat steps **6** and **7**.
9. Click **Apply**, and then click **OK**.

To configure the NetScaler VPX instance:

1. Right-click the virtual appliance that you previously installed, and then select **Start**.
2. Access the console by double-clicking the virtual appliance.
3. Type the NetScaler IP address, subnet mask, and gateway for your virtual appliance.

You have completed the basic configuration of your virtual appliance. Type the IP address in a Web browser to access the virtual appliance.

Note

You can also use virtual machine (VM) template to provision NetScaler VPX instance using SCVMM.

If you use Microsoft Hyper-V NIC teaming solution with NetScaler VPX instances, see article [CTX224494](#) for more information.

Install a NetScaler VPX instance on Linux-KVM platform

May 2, 2023

To set up a NetScaler VPX for the Linux-KVM platform, you can use the graphical Virtual Machine Manager (Virtual Manager) application. If you prefer the Linux-KVM command line, you can use the `virsh` program.

The host Linux operating system must be installed on suitable hardware by using virtualization tools such as KVM Module and QEMU. The number of virtual machines (VMs) that can be deployed on the hypervisor depends on the application requirement and the chosen hardware.

After you provision a NetScaler VPX instance, you can add more interfaces.

Limitations and usage guidelines

General recommendations

To avoid unpredictable behavior, apply the following recommendations:

- Do not change the MTU of the VNet interface associated with the VPX VM. Shut down the VPX VM before modifying any configuration parameters, such as Interface modes or CPU.
- Do not force a shutdown of the VPX VM. That is, do not use the **Force off** command.
- Any configurations done on the host Linux might or might not be persistent, depending on your Linux distribution settings. You can choose to make these configurations persistent to ensure consistent behavior across reboots of host Linux operating system.
- The NetScaler package has to be unique for each of the NetScaler VPX instance provisioned.

Limitations

- Live migration of a VPX instance that runs on KVM is not supported.

Prerequisites for installing a NetScaler VPX instance on Linux-KVM platform

May 2, 2023

Check the minimum system requirements for a Linux-KVM server running on a NetScaler VPX instance.

CPU requirement:

- 64-bit x86 processors with the hardware virtualization feature included in Intel VT-X processors.

To test whether your CPU supports the Linux host, enter the following command at the host Linux shell prompt:

```
1 *.egrep '^flags.*(vmx|svm)' /proc/cpuinfo*
```

If the **BIOS** settings for the preceding extension are disabled, you must enable them in the BIOS.

- Provide at least 2 CPU cores to Host Linux.
- There is no specific recommendation for processor speed, but higher the speed, the better the performance of the VM application.

Memory (RAM) requirement:

Minimum 4 GB for the host Linux kernel. Add more memory as required by the VMs.

Hard disk requirement:

Calculate the space for Host Linux kernel and VM requirements. A single NetScaler VPX VM requires 20 GB of disk space.

Software requirements

The Host kernel used must be a 64-bit Linux kernel, release 2.6.20 or later, with all virtualization tools. Citrix recommends newer kernels, such as 3.6.11-4 and later.

Many Linux distributions such as Red Hat, CentOS, and Fedora, have tested kernel versions and associated virtualization tools.

Guest VM hardware requirements

NetScaler VPX supports IDE and virtIO hard disk type. The Hard Disk Type has been configured in the XML file, which is a part of the NetScaler package.

Networking requirements

NetScaler VPX supports virtIO para-virtualized, SR-IOV, and PCI Passthrough network interfaces.

For more information about the supported network interfaces, see:

- [Provision the NetScaler VPX instance by using the Virtual Machine Manager](#)
- [Configure a NetScaler VPX instance to use SR-IOV network interfaces](#)
- [Configure a NetScaler VPX instance to use PCI passthrough network interfaces](#)

Source Interface and Modes

The source device type can be either Bridge or MacVTap. In MacVTap, four modes are possible - VEPA, Bridge, Private, and Pass-through. Check the types of interfaces that you can use and the supported traffic types, as per the following:

Bridge:

- Linux Bridge.
- `Ebtables` and `iptables` settings on host Linux might filter the traffic on the bridge if you do not choose the correct setting or disable `IPtable` services.

MacVTap (VEPA mode):

- Better performance than a bridge.
- Interfaces from the same lower device can be shared across the VMs.
- Inter-VM communication using the same lower device is possible only if the upstream or downstream switch supports VEPA mode.

MacVTap (private mode):

- Better performance than a bridge.
- Interfaces from the same lower device can be shared across the VMs.
- Inter-VM communication using the same lower device is not possible.

MacVTap (bridge mode):

- Better as compared to bridge.
- Interfaces out of the same lower device can be shared across the VMs.
- Inter-VM communication using the same lower device is possible, if the lower device link is UP.

MacVTap (Pass-through mode):

- Better as compared to bridge.
- Interfaces out of the same lower device cannot be shared across the VMs.
- Only one VM can use the lower device.

Note: For best performance by the VPX instance, ensure that the `gro` and `lro` capabilities are switched off on the source interfaces.

Properties of source interfaces

Make sure that you switch off the generic-receive-offload (`gro`) and large-receive-offload (`lro`) capabilities of the source interfaces. To switch off the `gro` and `lro` capabilities, run the following commands at the host Linux shell prompt.

```
ethtool -K eth6 gro off
ethool -K eth6 lro off
```

Example:

```
1 [root@localhost ~]# ethtool -K eth6
2
3           Offload parameters for eth6:
4
5           rx-checksumming: on
6
7           tx-checksumming: on
8
```

```
9          scatter-gather: on
10
11         tcp-segmentation-offload: on
12
13         udp-fragmentation-offload: off
14
15         generic-segmentation-offload: on
16
17         generic-receive-offload: off
18
19         large-receive-offload: off
20
21         rx-vlan-offload: on
22
23         tx-vlan-offload: on
24
25         ntuple-filters: off
26
27         receive-hashing: on
28
29 [root@localhost ~]#
```

Example:

If the host Linux bridge is used as a source device, as in the following example, and `lro` capabilities must be switched off on the VNet interfaces, which are the virtual interfaces connecting the host to the guest VMs.

```
1 [root@localhost ~]# brctl show eth6_br
2
3 bridge name      bridge id          STP enabled  interfaces
4
5 eth6_br          8000.00e0ed1861ae  no          eth6
6
7                                     vnet0
8
9                                     vnet2
10
11 [root@localhost ~]#
```

In the preceding example, the two virtual interfaces are derived from the `eth6_br` and are represented as `vnet0` and `vnet2`. Run the following commands to switch off `gro` and `lro` capabilities on these interfaces.

```
1 ethtool -K vnet0 gro off
2 ethtool -K vnet2 gro off
3 ethtool -K vnet0 lro off
4 ethtool -K vnet2 lro off
```

Promiscuous mode

The promiscuous mode must be enabled for the following features to work:

- L2 mode
- Multicast traffic processing
- Broadcast
- IPV6 traffic
- virtual MAC
- Dynamic routing

Use the following command to enable the promiscuous mode.

```
1 [root@localhost ~]# ifconfig eth6 promisc
2 [root@localhost ~]# ifconfig eth6
3 eth6          Link encap:Ethernet  HWaddr 78:2b:cb:51:54:a3
4              inet6 addr: fe80::7a2b:cbff:fe51:54a3/64 Scope:Link
5              UP BROADCAST RUNNING PROMISC MULTICAST  MTU:9000  Metric:1
6              RX packets:142961 errors:0 dropped:0 overruns:0 frame:0
7              TX packets:2895843 errors:0 dropped:0 overruns:0 carrier:0
8              collisions:0 txqueuelen:1000
9              RX bytes:14330008 (14.3 MB)  TX bytes:1019416071 (1.0 GB)
10
11 [root@localhost ~]#
```

Module required

For better network performance, make sure the `vhost_net` module is present in the Linux host. To check the existence of `vhost_net` module, run the following command on the Linux host:

```
1 lsmod | grep "vhost\_net"
```

If `vhost_net` is not yet running, enter the following command to run it:

```
1 modprobe vhost\_net
```

Provision the NetScaler VPX instance by using OpenStack

May 2, 2023

You can provision a NetScaler VPX instance in an OpenStack environment either by using the **Nova boot** command (OpenStack CLI) or Horizon (OpenStack dashboard) .

Provisioning a VPX instance, optionally involves using data from the config drive. Config drive is a special configuration drive that attaches to the instance as a CD-ROM device when it boots. This configuration drive can be used to pass networking configuration such as management IP address, network mask, default gateway, and to inject customer scripts.

In a NetScaler appliance, the default authentication mechanism is password based. Now, the SSH key-pair authentication mechanism is supported for NetScaler VPX instances on the OpenStack environment.

The key-pair (public key and private key) is generated before using the Public Key Cryptography mechanism. You can use different mechanisms, such as Horizon, Puttygen.exe for Windows, and `ssh-keygen` for the Linux environment, to generate the key pair. Refer to online documentation of respective mechanisms for more information about generating key pair.

Once a key pair is available, copy the private key to a secure location to which authorized persons have access. In OpenStack, public key can be deployed on a VPX instance by using the Horizon or Nova boot command. When a VPX instance is provisioned by using OpenStack, it first detects that the instance is booting in an OpenStack environment by reading a specific BIOS string. This string is “OpenStack Foundation” and for Red Hat Linux distributions it is stored in `/etc/nova/release`. This is a standard mechanism that is available in all OpenStack implementations based on the KVM hypervisor platform. The drive must have a specific OpenStack label.

If the config drive is detected, the instance attempts to read the network configuration, custom scripts, and SSH key pair if provided.

User data file

The NetScaler VPX instance uses a customized OVF file, also known as the user data file, to inject network configuration, custom scripts. This file is provided as part of config drive. Here is an example of a customized OVF file.

```
1  `` `
2  <?xml version="1.0" encoding="UTF-8" standalone="no"?>
3  <Environment xmlns:oe="http://schemas.dmtf.org/ovf/environment/1"
4  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
5  oe:id=""
6  xmlns="http://schemas.dmtf.org/ovf/environment/1"
7  xmlns:cs="http://schemas.citrix.com/openstack">
8  <PlatformSection>
9  <Kind></Kind>
10 <Version>2016.1</Version>
11 <Vendor>VPX</Vendor>
12 <Locale>en</Locale>
13 </PlatformSection>
14 <PropertySection>
15 <Property oe:key="com.citrix.netscaler.ovf.version" oe:value="1.0"/>
```

```

16 <Property oe:key="com.citrix.netscaler.platform" oe:value="NSVPX"/>
17 <Property oe:key="com.citrix.netscaler.orch_env" oe:value="openstack-
    orch-env"/>
18 <Property oe:key="com.citrix.netscaler.mgmt.ip" oe:value="10.1.2.22"/>
19 <Property oe:key="com.citrix.netscaler.mgmt.netmask" oe:value="
    255.255.255.0"/>
20 <Property oe:key="com.citrix.netscaler.mgmt.gateway" oe:value="10.1.2.1
    "/>
21 </PropertySection>
22 <cs:ScriptSection>
23   <cs:Version>1.0</cs:Version>
24   <ScriptSettingSection xmlns="http://schemas.citrix.com/openstack"
    xmlns:i="http://www.w3.org/2001/XMLSchema-instance">
25     <Scripts>
26       <Script>
27         <Type>shell</Type>
28         <Parameter>X Y</Parameter>
29         <Parameter>Z</Parameter>
30         <BootScript>before</BootScript>
31         <Text>
32           #!/bin/bash
33           echo "Hi, how are you" $1 $2 >> /var/sample.txt
34         </Text>
35       </Script>
36       <Script>
37         <Type>python</Type>
38         <BootScript>after</BootScript>
39         <Text>
40           #!/bin/python
41           print("Hello");
42         </Text>
43       </Script>
44       <Script>
45         <Type>perl</Type>
46         <BootScript>before</BootScript>
47         <Text>
48           !/usr/bin/perl
49           my $name = "VPX";
50           print "Hello, World $name !\n" ;
51         </Text>
52       </Script>
53       <Script>
54         <Type>nscli</Type>
55         <BootScript>after</BootScript>
56         <Text>
57           add vlan 33
58           bind vlan 33 -ifnum 1/2
59         </Text>
60       </Script>
61     </Scripts>
62   </ScriptSettingSection>
63 </cs:ScriptSection>
64 </Environment>

```

In the OVF file preceding “PropertySection” is used for NetScaler networking configuration while `<cs:ScriptSection>` is used to enclose all scripts. `<Scripts>` tags are used to bundle all scripts together. Each script is defined in between `<Script>` `</Script>` tags. Each script tag has following fields/tags:

- a) `<Type>`: Specifies value for script type. Possible values: Shell/Perl/Python/NSLCI (for NetScaler CLI scripts)
- b) `<Parameter>`: Provides parameters to the script. Each script can have multiple `<Parameter>` tags.
- c) `<BootScript>`: Specifies script execution point. Possible values for this tag: before/after. “before” specifies script is run before PE comes up. “after” specifies that the script will be run after PE comes up.
- d) `<Text>`: Pastes content of a script.

Note

Currently the VPX instance does not take care of sanitization of scripts. As an administrator, you must check the validity of the script.

Not all sections need to be present. Use an empty “PropertySection” to only define scripts to run on first boot or an empty `<cs:ScriptSection>` to only define networking configuration.

After the required sections of the OVF file (user data file) are populated, use that file to provision the VPX instance.

Network configuration

As part of the network configuration, the VPX instance reads:

- Management IP address
- Network mask
- Default gateway

After the parameters are successfully read, they are populated in the NetScaler configuration, to allow managing the instance remotely. If the parameters are not read successfully or the config drive is not available, the instance transitions to the default behavior, which is:

- The instance attempts to retrieve the IP address information from DHCP.
- If DHCP fails or times-out, the instance comes up with the default network configuration (192.168.100.1/16).

Customer script

The VPX instance allows to run a custom script during initial provisioning. The appliance supports script of type Shell, Perl, Python, and NetScaler CLI commands.

SSH key pair authentication

The VPX instance copies public key, available within the configuration drive as part of instance meta data, into its “authorized_keys”file. This allows the user to access the instance with private key.

Note

When an SSH key is provided, the default credentials (nsroot/nsroot) no longer work, if password-based access is needed, log on with the respective SSH private key and manually set a password.

Before you begin

Before you provision a VPX instance on OpenStack environment, extract the `.qcow2` file from the `.tgz` file and build

An OpenStack image from the qcow2 image. Follow these steps:

1. Extract the `.qcow2` file from the `.tgz` file by typing the following command

```
1 tar xvzf <TAR file>
2 tar xvzf <NSVPX-KVM-12.0-26.2_nc.tgz>
3 NSVPX-KVM.xml
4 NSVPX-KVM-12.0-26.2_nc.qcow2
```

2. Build an OpenStack image using the `.qcow2` file extracted in step 1 by typing the following command.

```
1 openstack image create --container-format bare --property
  hw_disk_bus=ide --disk-format qcow2 --file <path to qcow2 file>
  --public <name of the OpenStack image>
2
3 glance image-create --name="NS-VPX-12-0-26-2" --property
  hw_disk_bus=ide --ispublic=
4 true --container-format=bare --disk-format=qcow2 < NSVPX-KVM
  -12.0-26.2_nc.qcow2
```

Figure 1: The following illustration provides a sample output for the `glance image-create` command.

Field	Value
checksum	154ade3fc7dca7d1706b1d03d7d97552
container_format	bare
created_at	2017-03-13T08:52:31Z
disk_format	qcow2
file	/v2/images/322c1e0f-cce8-4b7b-b53e-bd8152c388ed/file
id	322c1e0f-cce8-4b7b-b53e-bd8152c388ed
min_disk	0
min_ram	0
name	VPX-KVM-12.0-26.2
owner	58d17d81df5d4406afbb4fdab3a58d79
properties	hw_disk_bus='ide'
protected	False
schema	/v2/schemas/image
size	784338944
status	active
updated_at	2017-03-13T08:52:43Z
virtual_size	None
visibility	public

Provisioning the VPX instance


You can provision a VPX instance in two ways by using one of the options:

- Horizon (OpenStack dashboard)
- Nova boot command (OpenStack CLI)

Provision a VPX instance by using the OpenStack dashboard

Follow these steps to provision the VPX instance by using Horizon:

1. Log on to the OpenStack dashboard.
2. In the Project panel on the left hand side of the dashboard, select **Instances**.
3. In the Instances panel, click **Launch Instance** to open the Instance Launching wizard.

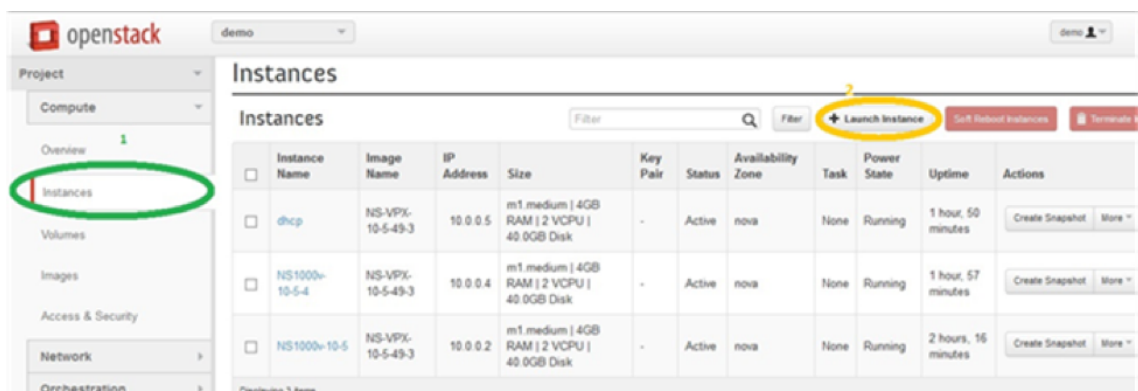

4. In the Launch Instance wizard, fill in the details, like:

- a) Instance Name
- b) Instance Flavor
- c) Instance Count
- d) Instance Boot Source
- e) Image Name

Launch Instance ✕

Details *
Access & Security *
Networking *
Post-Creation
Advanced Options

Availability Zone:

nova ▼

Instance Name: *

NSVPX_10_1

Flavor: *

m1.medium ▼

Instance Count: *

1

Instance Boot Source: *

Boot from image ▼

Image Name:

NS-VPX-10-1-130-11 (20.0 GB) ▼

Specify the details for launching an instance.

The chart below shows the resources used by this project in relation to the project's quotas.

Flavor Details

Name	m1.medium
VCPUs	2
Root Disk	40 GB
Ephemeral Disk	0 GB
Total Disk	40 GB
RAM	4,096 MB

Project Limits

Number of Instances 6 of 10 Used

Number of VCPUs 12 of 20 Used

Total RAM 24,576 of 51,200 MB Used

Cancel
Launch

5. Deploy a new key pair or an existing key pair through Horizon by completing the following steps:

- a) If you don't have an existing key pair, create the key by using any existing mechanisms. If you've an existing key, skip this step.
- b) Copy the content of public key.
- c) Go to **Horizon > Instances > Create New Instances**.
- d) Click **Access & Security**.

e) Click the + sign next to the **Key Pair** drop-down menu and provide values for shown parameters.

f) Paste public key content in *Public key* box, give a name to the key and click **Import Key Pair**.

Import Key Pair

Key Pair Name *

NewKey

Public Key *

```
ssh-rsa
AAAAB3NzaC1yc2EAAAADAQABAAQACjZjh
mFducHd8elrm/6RXOfvVuaQPOM92dyNOw74J7
Q3te1FrwL38iGXbilByc2+oBV7ZIFRiYQEtk2UIM+
EtJJlcx92m4aln1RlgFvukXECHIXGqfQXVI06pyim
KRWIqXhl+h+tvPGS4iltJ3uWKwfh1PDGYkmgAik
osA955L+W9ngVloVyaK40OuAqYCTwfQNBKVuZ
GBOAH9eJejim0LoBw5uA58/Jbjl8gNCzQYw5S2w
EcvsxOvhdb3LW9YADAVnihVK4NLeBc4HlsFeHl
5UY0iYyGk7aW/2SXjzkwRqZ8cX1Oba0XoDICYN
apRVOT6FB//ykrwu+BSVF4v0og3
```

Description:

Key Pairs are how you login to your instance after it is launched.

Choose a key pair name you will recognise and paste your SSH public key into the space provided.

SSH key pairs can be generated with the ssh-keygen command:

```
ssh-keygen -t rsa -f cloud.key
```

This generates a pair of keys: a key you keep private (cloud.key) and a public key (cloud.key.pub). Paste the contents of the public key file here.

After launching an instance, you login using the private key (the username might be different depending on the image you launched):

```
ssh -i cloud.key <username>@<instance_ip>
```

Cancel Import Key Pair

6. Click the **Post Creation** tab in the wizard. In Customization Script, add the content of the user data file. The user data file contains the IP address, Netmask and Gateway details, and customer scripts of the VPX instance.

7. After a key pair is selected or imported, check config-drive option and click **Launch**.

Launch Instance

Details * Access & Security Networking * Post-Creation **Advanced Options**

Disk Partition ⓘ

Automatic

Configuration Drive ⓘ

Specify advanced options to use when launching an instance.

Cancel Launch

Provision the VPX instance by using OpenStack CLI

Follow these steps to provision a VPX instance by using OpenStack CLI.

1. To create an image from qcow2, type the following command:

```
openstack image create --container-format bare --property hw_disk_bus=ide --diskformat qcow2 --file NSVPX-OpenStack.qcow2 --public VPX-ToT-Image
```

2. To select an image for creating an instance, type the following command:

```
openstack image list | more
```

3. To create an instance of a particular flavor, type the following command to choose a flavor ID/Name of from a list:

```
openstack flavor list
```

4. To attach a NIC to a particular network, type the following command to choose a network ID from a network list:

```
openstack network list
```

5. To create an instance, type the following command:

```
1 openstack server create --flavor FLAVOR_ID --image IMAGE_ID --key-name KEY_NAME
2 --user-data USER_DATA_FILE_PATH --config-drive True --nic net-id=net-uuid
3 INSTANCE_NAME
4 openstack server create --image VPX-ToT-Image --flavor m1.medium
  --user-data
5 ovf.xml --config-drive True --nic net-id=2734911b-ee2b-48d0-a1b6-3
  efd44b761b9
6 VPX-ToT
```

Figure 2: The following illustration provides a sample output.

Field	Value
OS-DCF:diskConfig	MANUAL
OS-EXT-AZ:availability_zone	
OS-EXT-SRV-ATTR:host	None
OS-EXT-SRV-ATTR:hypervisor_hostname	None
OS-EXT-SRV-ATTR:instance_name	instance-000001c2
OS-EXT-STS:power_state	0
OS-EXT-STS:task_state	scheduling
OS-EXT-STS:vm_state	building
OS-SRV-USG:launched_at	None
OS-SRV-USG:terminated_at	None
accessIPv4	
accessIPv6	
addresses	
adminPass	pFVvMtq7N8Z6
config_drive	True
created	2017-03-13T10:32:59Z
flavor	m1.medium (3)
hostId	
id	a1fe991e-3604-43a0-9dd6-59fa0f3749df
image	VPX-ToT-Image (f0c2f9d1-08f2-4b2e-9943-2ee6bc2edbc7)
key_name	None
name	VPX-ToT
os-extended-volumes:volumes_attached	[]
progress	0
project_id	58d17d81df5d4406afbb4fdab3a58d79
properties	
security_groups	[{'u'name': u'default'}]
status	BUILD
updated	2017-03-13T10:33:00Z
user_id	a6347b33916b4eb1b1f76360a9c8f935

Provision the NetScaler VPX instance by using the Virtual Machine Manager

May 2, 2023

The Virtual Machine Manager is a desktop tool for managing VM guests. It enables you to create new VM guests and various types of storage, and manage virtual networks. You can access the graphical console of VM guests with the built-in VNC viewer and view performance statistics, either locally or remotely.

After installing your preferred Linux distribution, with KVM virtualization enabled, you can proceed with provisioning virtual machines.

While using the Virtual Machine Manager to provision a NetScaler VPX instance, you have two options:

- Enter the IP address, gateway, and netmask manually
- Assign the IP address, gateway, and netmask automatically (auto-provisioning)

You can use two kinds of images to provision a NetScaler VPX instance:

- RAW
- QCOW2

You can convert a NetScaler VPX RAW image to a QCOW2 image and provision the NetScaler VPX instance. To convert the RAW image to a QCOW2 image, type the following command:

```
qemu-img convert -O qcow2 original-image.raw image-converted.qcow
```

For example:

```
qemu-img convert -O qcow2 NSVPX-KVM-11.1-12.5_nc.raw NSVPX-KVM-11.1-12.5_nc.qcow
```

A typical NetScaler VPX deployment on KVM includes the following steps:

- Checking prerequisites for Auto-Provisioning a NetScaler VPX Instance
- Provisioning the NetScaler VPX Instance by Using a RAW Image
- Provisioning the NetScaler VPX Instance by Using a QCOW2 Image
- Adding Additional Interfaces to a VPX Instance by using Virtual Machine Manager

Check prerequisites for auto-provisioning a NetScaler VPX instance

Auto-provisioning is an optional feature, and it involves using data from the CDROM drive. If this feature is enabled, you need not enter the management IP address, network mask, and default gateway of the NetScaler VPX instance during initial setup.

You need to complete the following tasks before you can auto-provision a VPX instance:

1. Create a customized Open Virtualization Format (OVF) XML file or user data file.
2. Convert the OVF file into an ISO image by using an online application (for example PowerISO).
3. Mount the ISO image on the KVM host by using any secure copy (SCP)-based tools.

Sample OVF XML file:

Here's is an example of the contents an OVF XML file, which you can use as a sample to create your file.

```
1 <?xml version="1.0" encoding="UTF-8" standalone="no"?>
2
3 <Environment xmlns:oe="`http://schemas.dmtf.org/ovf/environment/1"`
4
5 xmlns:xsi="`http://www.w3.org/2001/XMLSchema-instance"`
6
7 oe:id=""
8
9 xmlns="`http://schemas.dmtf.org/ovf/environment/1"`
10
11 xmlns:cs="`http://schemas.citrix.com/openstack">`
12
13 <PlatformSection>
14
15 <Kind></Kind>
```

```
16
17 <Version>2016.1</Version>
18
19 <Vendor>VPX</Vendor>
20
21 <Locale>en</Locale>
22
23 </PlatformSection>
24
25 <PropertySection>
26
27 <Property oe:key="com.citrix.netscaler.ovf.version" oe:value="1.0"/>
28
29 <Property oe:key="com.citrix.netscaler.platform" oe:value="NSVPX"/>
30
31 <Property oe:key="com.citrix.netscaler.orch\_env" oe:value="KVM"/>
32
33 <Property oe:key="com.citrix.netscaler.mgmt.ip" oe:value="10.1.2.22"/>
34
35 <Property oe:key="com.citrix.netscaler.mgmt.netmask" oe:value="
    255.255.255.0"/>
36
37 <Property oe:key="com.citrix.netscaler.mgmt.gateway" oe:value="10.1.2.1
    "/>
38
39 </PropertySection>
40
41 </Environment>
```

In the OVF XML file preceding, “PropertySection” is used for NetScaler networking configuration. When you create the file, specify values for the parameters that are highlighted at the end of the example:

- Management IP address
- Netmask
- Gateway

Important

If the OVF file is not properly XML formatted, the VPX instance is assigned the default network configuration, not the values specified in the file.


Provision the NetScaler VPX instance by using a RAW image

The Virtual Machine Manager enables you to provision a NetScaler VPX instance by using a RAW image.


To provision a NetScaler VPX instance by using the Virtual Machine Manager, follow these steps:

1. Open the Virtual Machine Manager (**Application > System Tools > Virtual Machine Manager**) and enter the logon credentials in the **Authenticate** window.


2. Click the  icon or right-click **localhost (QEMU)** to create a new NetScaler VPX instance.

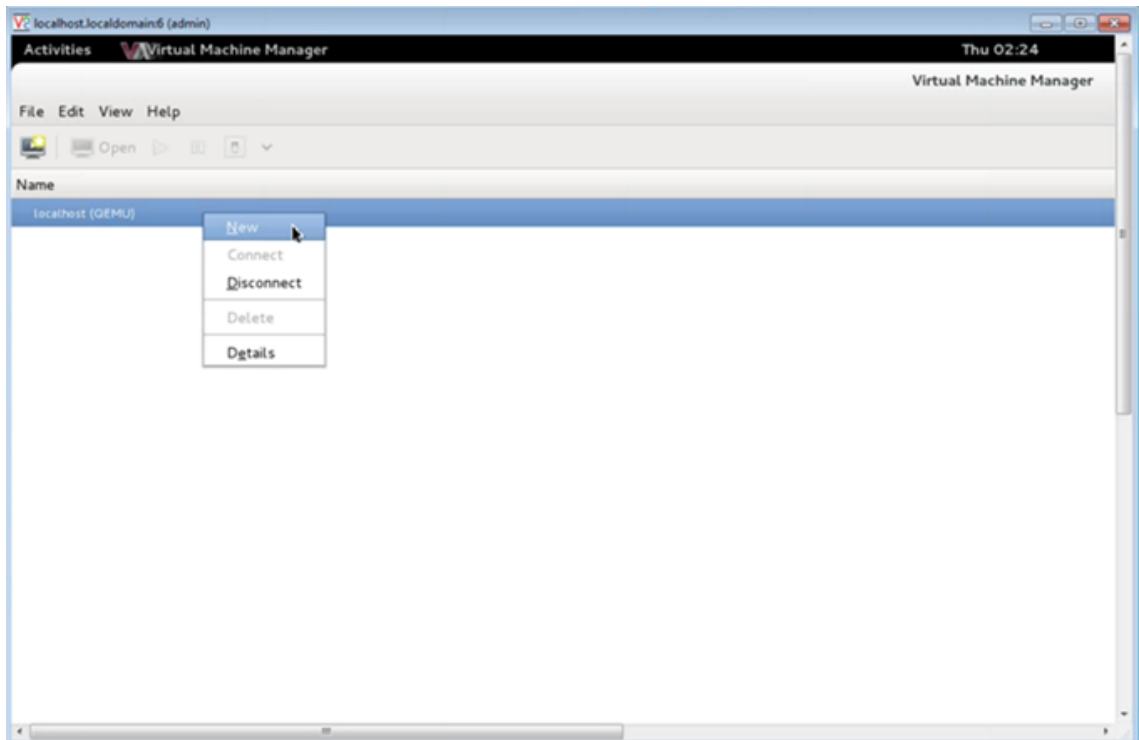


3. In the **Name** text box, enter a name for the new VM (for example, NetScaler-VPX).
4. In the **New VM** window, under “Choose how you would like to install the operating system,” select **Import existing disk image**, and then and click **Forward**.

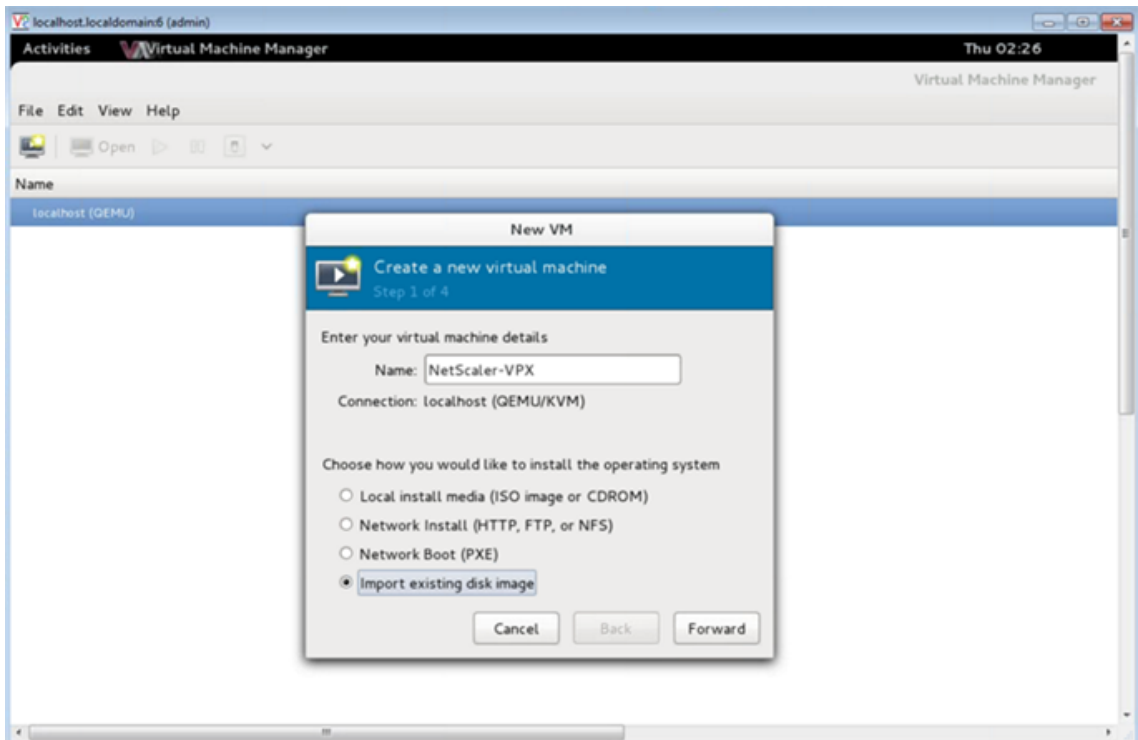


5. In the **Provide the existing storage path** field, navigate the path to the image. Choose the OS type as UNIX and Version as FreeBSD 6.x. Then, click **Forward**.

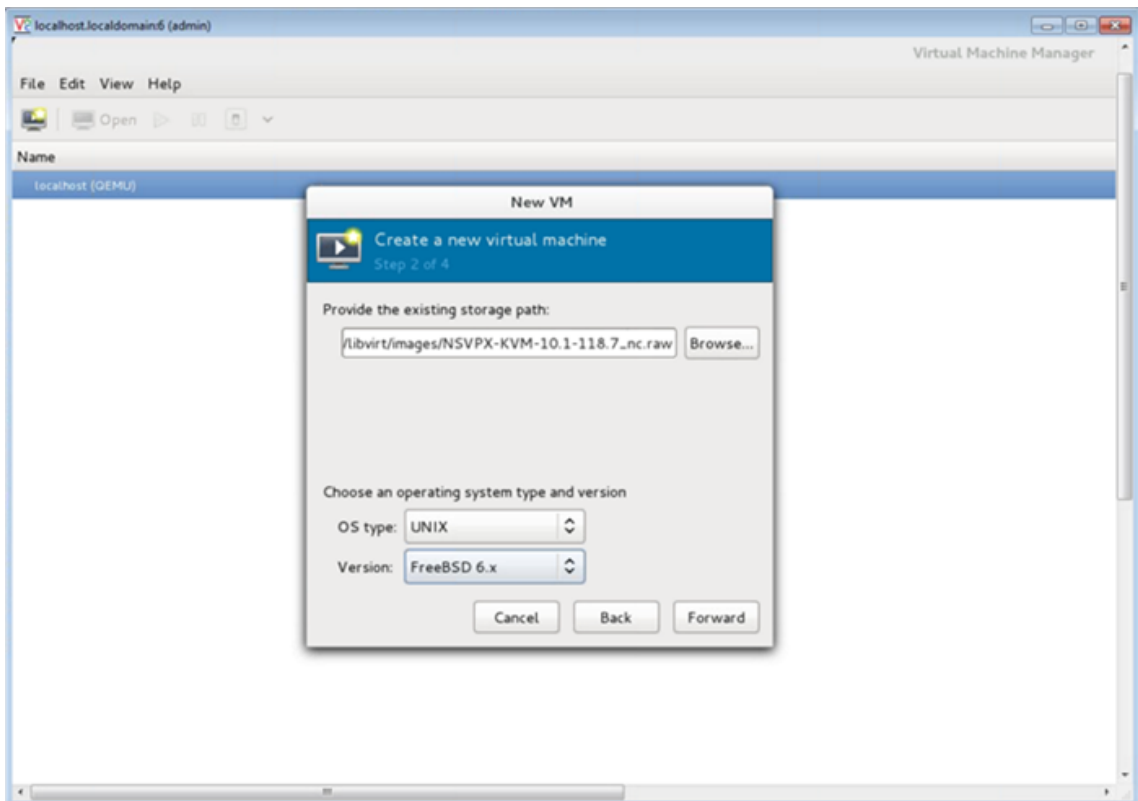


6. Under **Choose Memory and CPU** settings select the following settings, and then click **Forward**:
- Memory (RAM)—2048 MB
 - CPUs—2

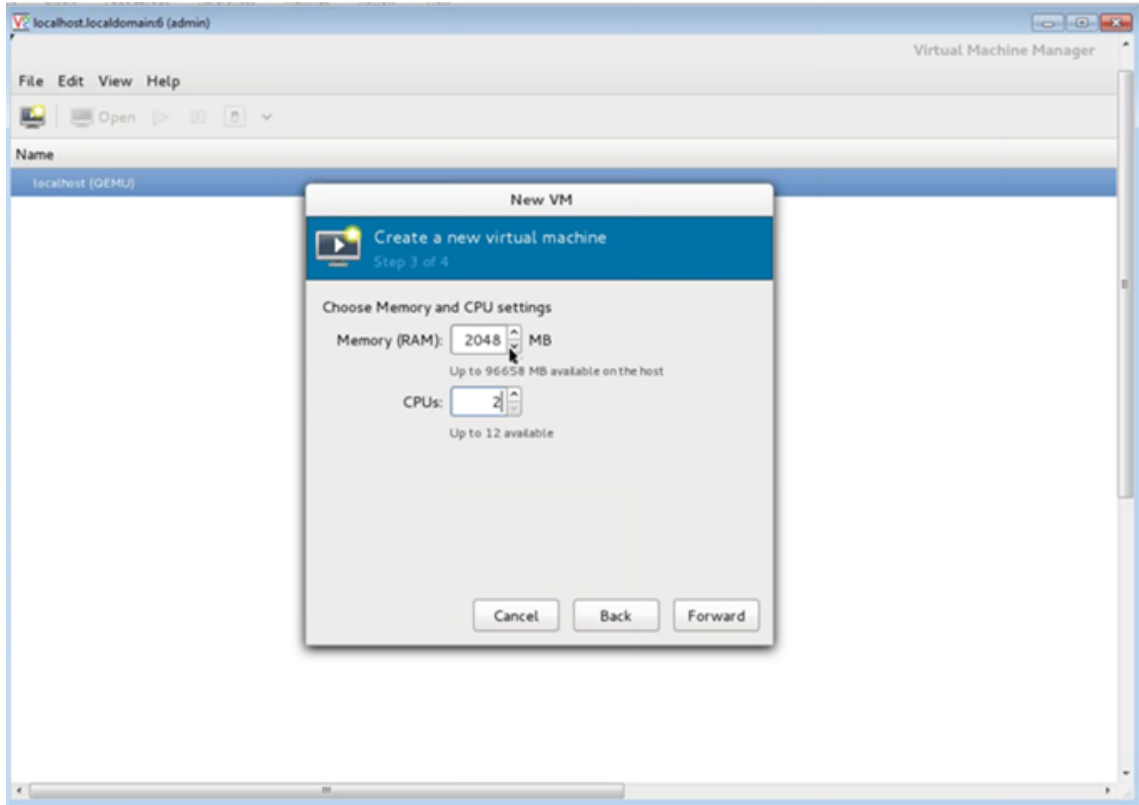

7. Select the **Customize configuration before install** check box. Optionally, under **Advanced options** you can customize the MAC address. Make sure the **Virt Type** selected is KVM and the Architecture selected is x86_64. Click **Finish**.

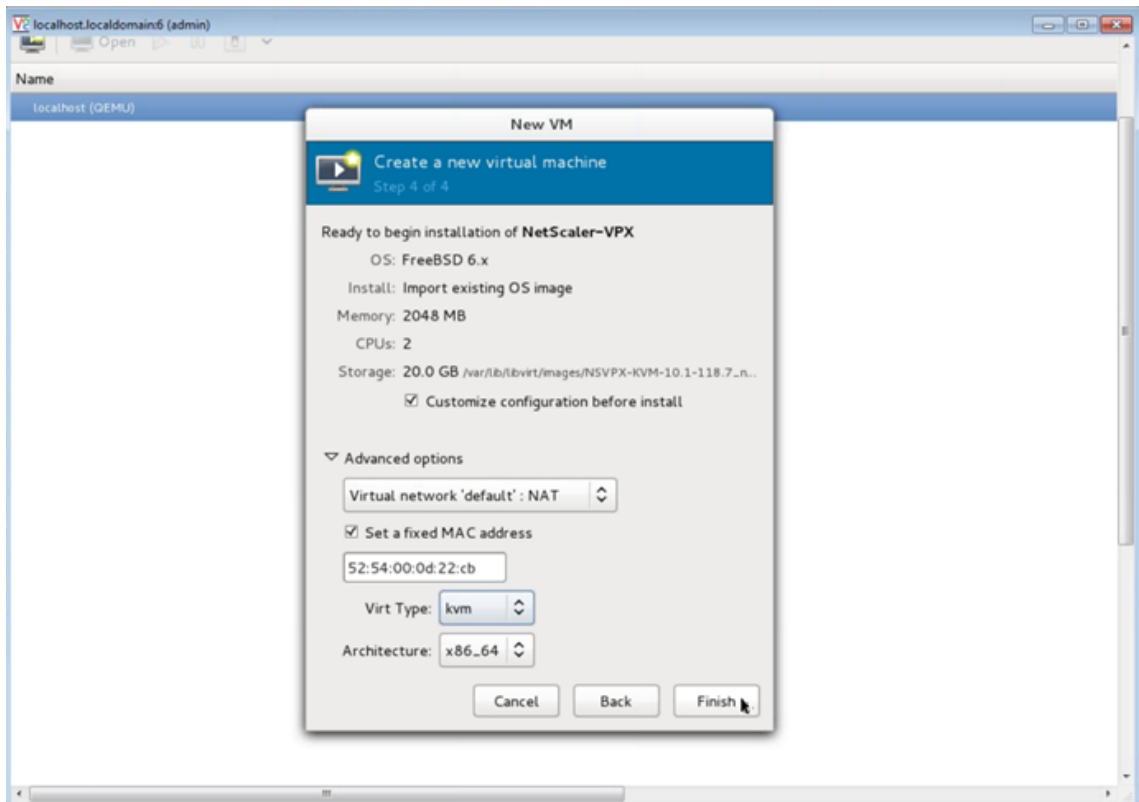

8. Select a NIC and provide the following configuration:
- Source device—ethX macvtap or Bridge
 - Device model—virtio
 - Source mode—Bridge

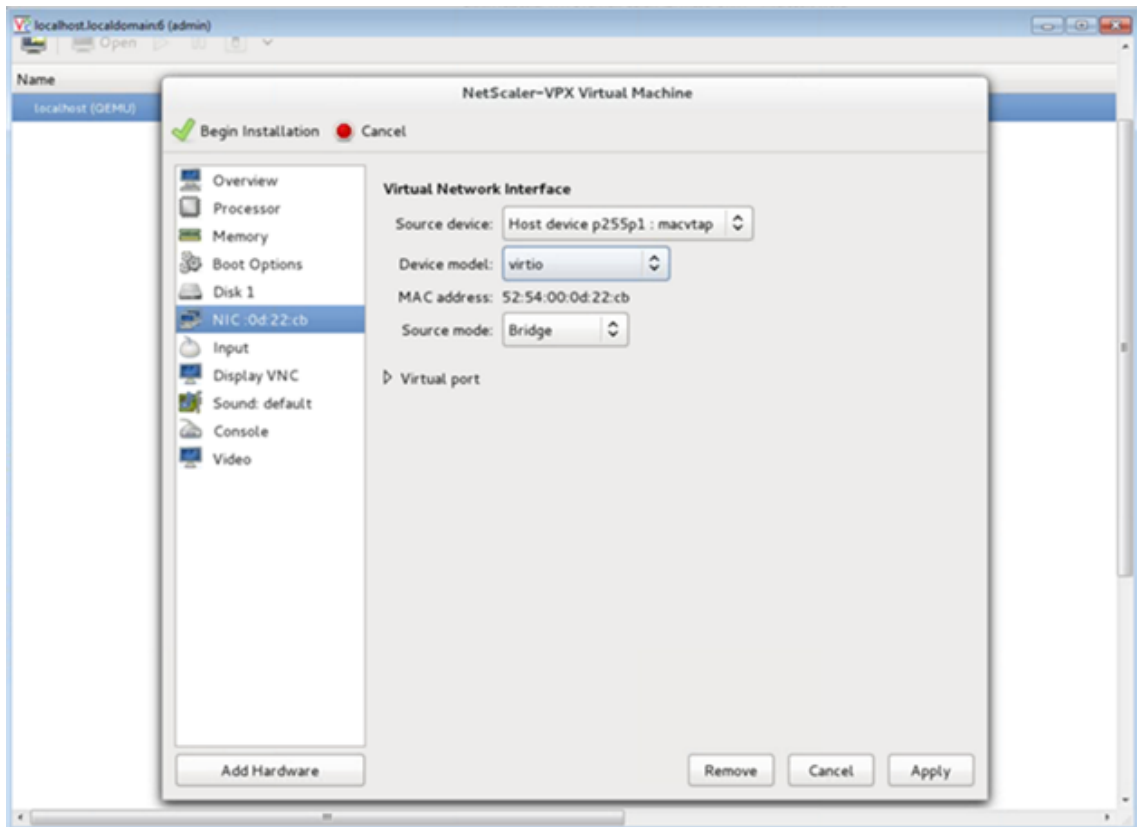


9. Click **Apply**.
10. If you want to auto-provision the VPX instance, see the section **Enabling Auto-Provisioning by Attaching a CDROM Drive** in this document. Otherwise, click **Begin Installation**. After you have provisioned the NetScaler VPX on KVM, you can add more interfaces.

Provision the NetScaler VPX instance by using a QCOW2 image

Using the Virtual Machine Manager, you can provision the NetScaler VPX instance by using a QCOW2 image.

To provision a NetScaler VPX instance by using a QCOW2 image, follow these steps:


1. Follow **step 1 to step 8** in [Provision the NetScaler VPX instance by using a RAW image](#).
 - Note:** Ensure that you select **qcow2** image in **step 5**.
2. Select **Disk 1** and click **Advanced options**.
3. Select **qcow2** from the Storage format drop-down list.

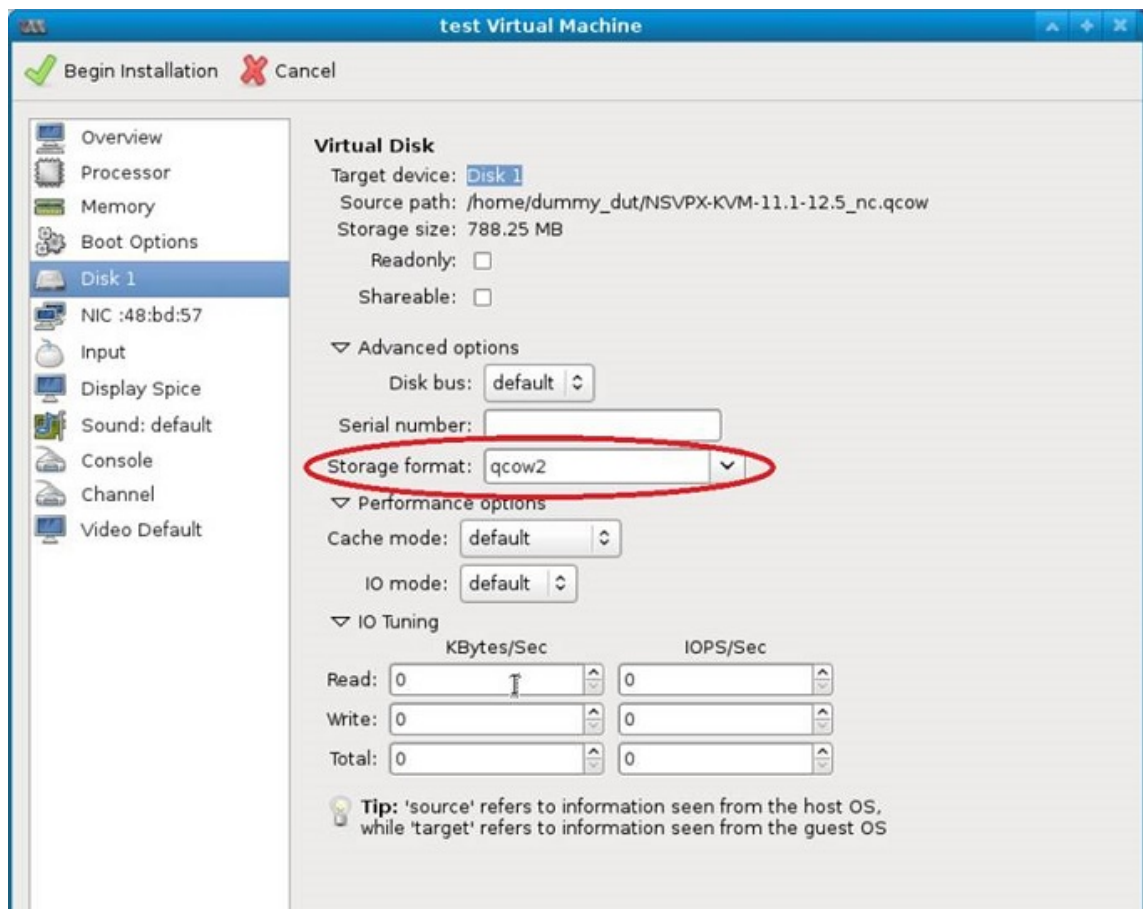

4. Click **Apply**, and then click **Begin Installation**. After you have provisioned the NetScaler VPX on KVM, you can add more interfaces.

Enable auto-provisioning by attaching a CDROM drive

1. Click Add **Hardware** > **Storage** > **Device type** > **CDROM device**.
2. Click **Manage** and select the correct ISO file that you mounted in the “Prerequisites for Auto-Provisioning a NetScaler VPX Instance” section, and click **Finish**. A new CDROM under Resources on your NetScaler VPX instance is created.

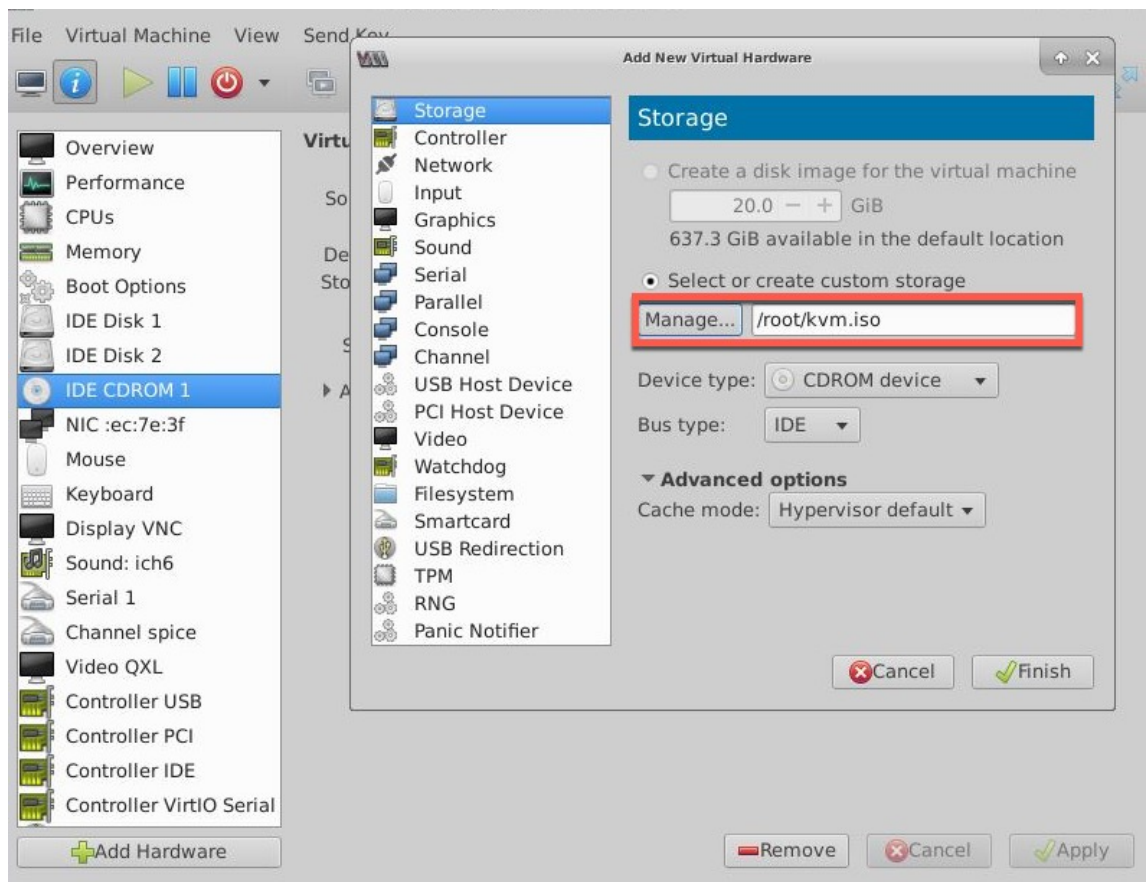

3. Power on the VPX instance, and it auto-provisions with the network configuration provided in the OVF file, as shown in the example screen capture.

```

File Virtual Machine View Send Key
Aug 11 10:14:55 <local0.alert> ns restart[25781]: Restart: /netscaler/nsstart.sh
exited normally. Exit code (0)
Aug 11 10:14:55 <local0.alert> ns restart[25781]: Successfully deregistered with
h Pitboss ...

login: nsroot
Password:
Aug 11 10:15:04 <auth.notice> ns login: ROOT LOGIN (nsroot) ON ttyv0
Copyright (c) 1992-2013 The FreeBSD Project.
Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994
The Regents of the University of California. All rights reserved.

Done
> sh ip
      Ippaddress      Traffic Domain  Type      Mode      Arp      Icmp
      Userver  State
      -----
1)    10.1.2.22      0              NetScaler IP  Active    Enabled   Enab
led NA      Enabled
Done
> Aug 11 10:15:13 <local0.alert> ns restart[25781]: Nsshutdown lock released !

```

4. If auto-provision fails, the instance comes up with the default IP address (192.168.100.1). In that case, you must complete the initial configuration manually. For more information, see [Configure the ADC for the first time](#).


Add more interfaces to the NetScaler VPX instance by using the Virtual Machine Manager


After you have provisioned the NetScaler VPX instance on KVM, you can add additional interfaces.

To add more interfaces, follow these steps.

1. Shut down the NetScaler VPX instance running on the KVM.
2. Right-click the VPX instance and choose **Open** from the pop-up menu.



3. Click the  icon in the header to view the virtual hardware details.
4. Click **Add Hardware**. In the **Add New Virtual Hardware window**, select **Network** from the navigation menu.

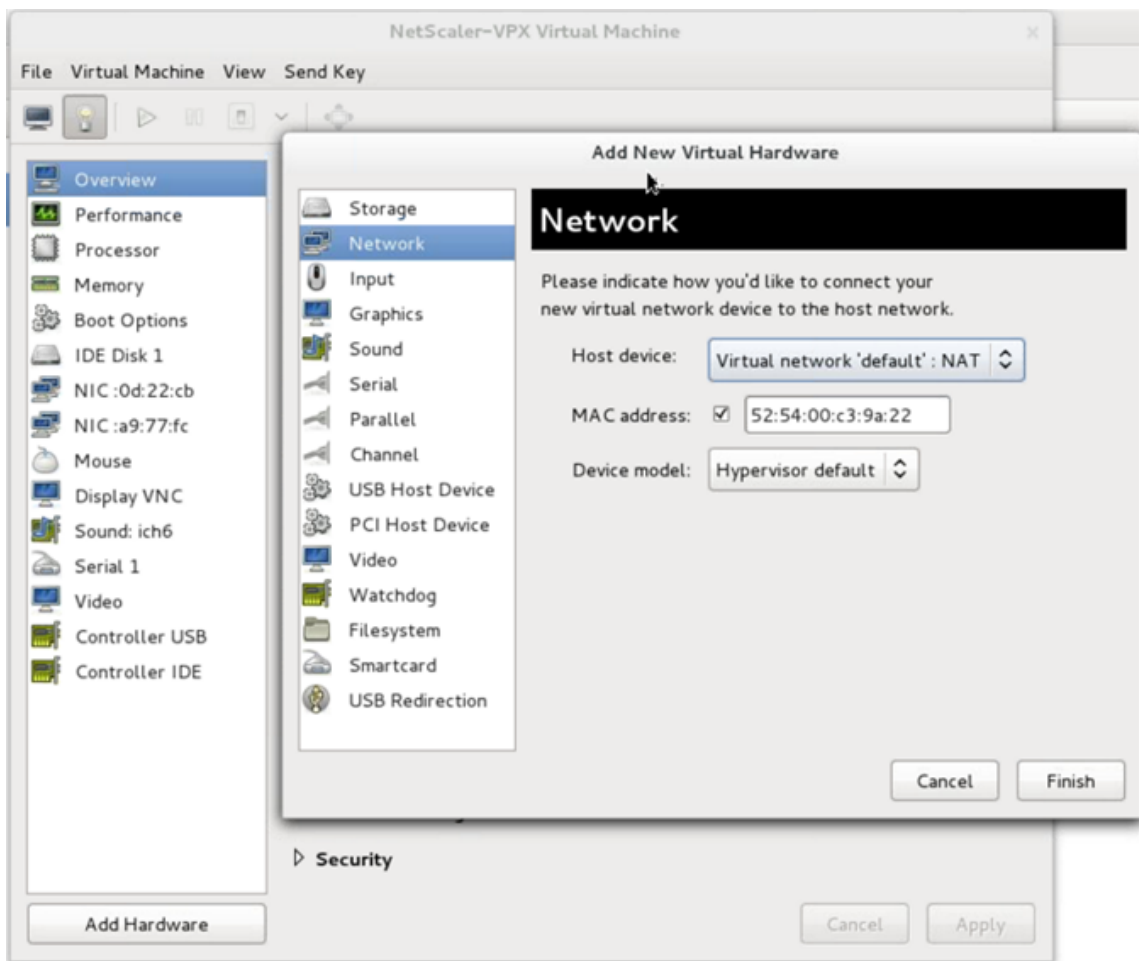


5. In **Host Device** field, select the physical interface type. The host device type can be either Bridge or MacVTap. In case of MacVTap, four modes possible are VEPA, Bridge, Private, and Pass-through.


a) For Bridge

- i. Host device—Select the “Specify shared device name” option.
- ii. Provide the Bridge name that is configured in the KVM host.


Note: Make sure that you have configured a Linux bridge in the KVM host, bound the physical interface to the bridge, and put the bridge in the UP state.

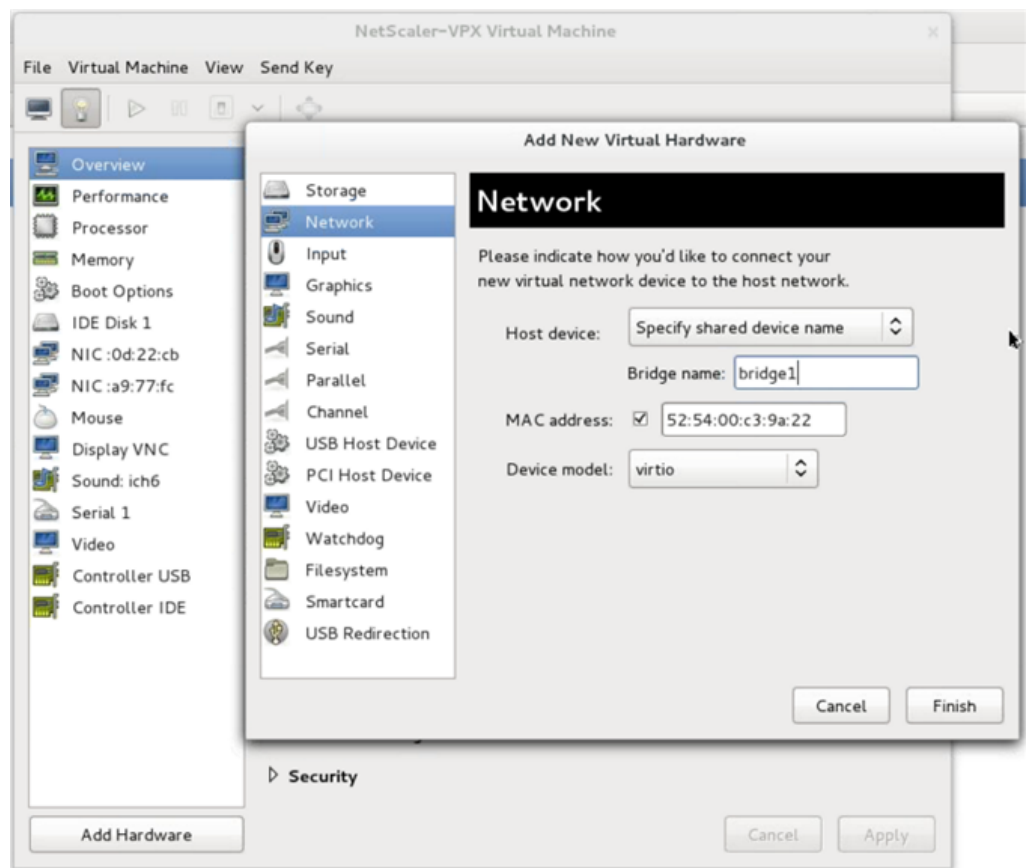

- iii. Device model—`virtio`.
 - iv. Click Finish.
- b) For MacVTap
- i. Host device—Select the physical interface from the menu.
 - ii. Device model—`virtio`.

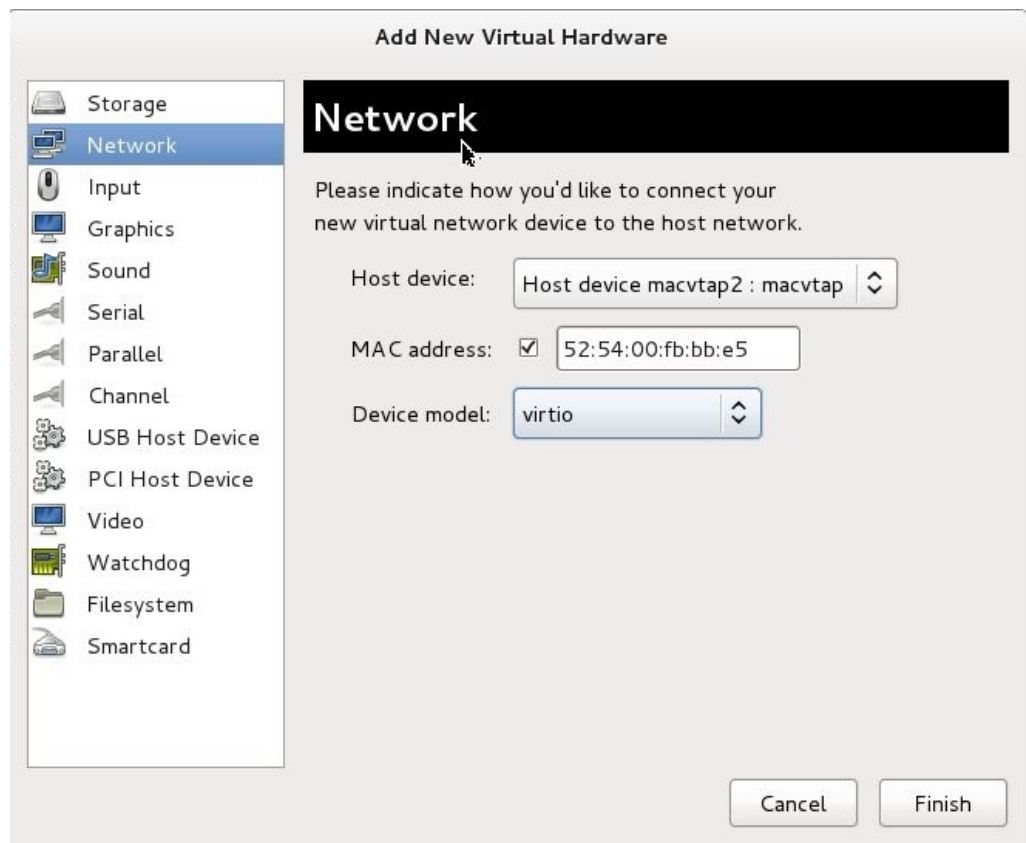

iii. Click Finish. You can view the newly added NIC in the navigation pane.

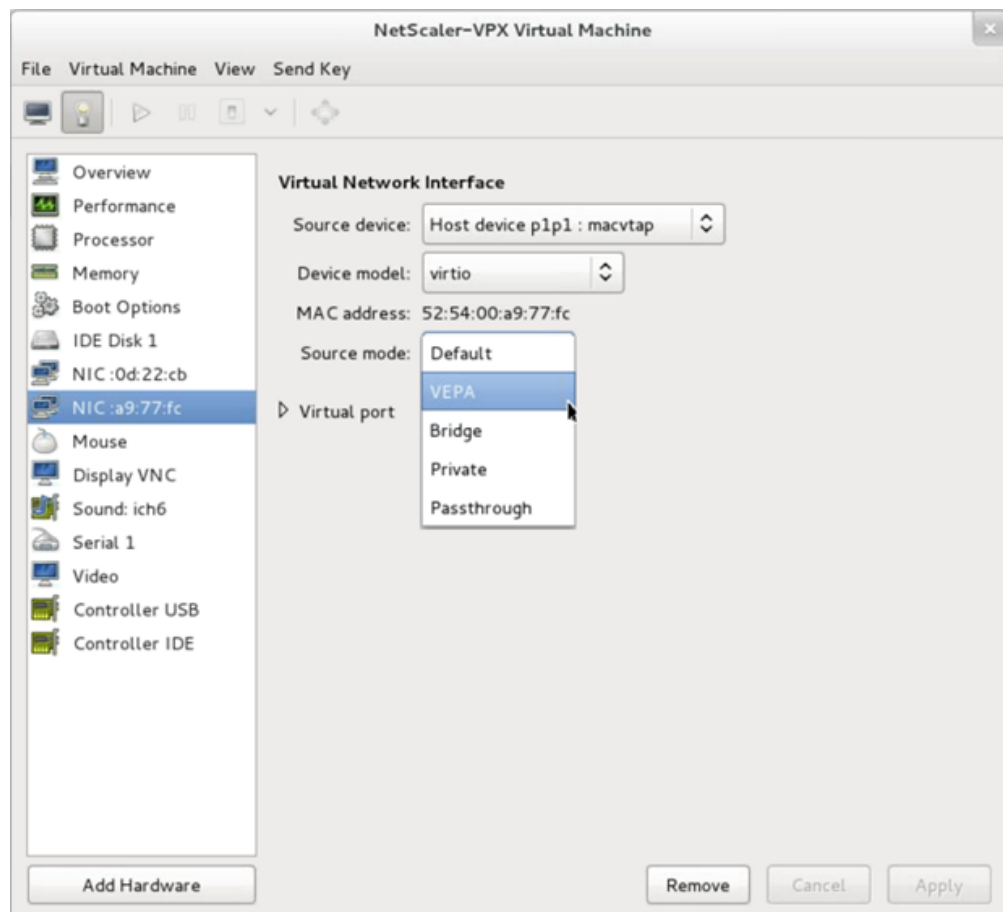

- iv. Select the newly added NIC and select the Source mode for this NIC. The available modes are VEPA, Bridge, Private, and Passthrough. For more details on the interface and modes, see Source Interface and Modes.
 - v. Click Apply.
6. If you want to auto-provision the VPX instance, see the section “Adding a Config Drive to Enable Auto-Provisioning” in this document. Otherwise, power on the VPX instance to complete the initial configuration manually.

Important

Interface parameter configurations such as speed, duplex, and autonegotiation are not supported.

Configure a NetScaler VPX instance to use SR-IOV network interfaces

May 2, 2023

You can configure a NetScaler VPX instance running on Linux-KVM platform using single root I/O virtualization (SR-IOV) with the following NICs:

- Intel 82599 10G
- Intel X710 10G
- Intel XL710 40G
- Intel X722 10G

This section describes how to:

- Configure a NetScaler VPX Instance to Use SR-IOV Network Interface
- Configure Static LA/LACP on the SR-IOV Interface
- Configure VLAN on the SR-IOV Interface

Limitations

Keep the limitations in mind while using Intel 82599, X710, XL710, and X722 NICs. The following features not supported.

Limitations for Intel 82599 NIC:

- L2 mode switching.
- Admin partitioning (shared VLAN mode).
- High availability (active-active mode).
- Jumbo frames.
- IPv6: You can configure only up to 30 unique IPv6 addresses in a VPX instance if you've at least one SR-IOV interface.
- VLAN configuration on Hypervisor for SRIOV VF interface through `ip link` command is not supported.
- Interface parameter configurations such as speed, duplex, and autonegotiations are not supported.

Limitations for Intel X710 10G, Intel XL710 40G, and Intel X722 10G NICs:

- L2 mode switching.
- Admin partitioning (shared VLAN mode).
- In a cluster, Jumbo frames are not supported when the XL710 NIC is used as a data interface.
- Interface list reorders when interfaces are disconnected and reconnected.
- Interface parameter configurations such as speed, duplex, and auto negotiations are not supported.
- Interface name is 40/X for Intel X710 10G, Intel XL710 40G, and Intel X722 10G NICs
- Up to 16 Intel XL710/X710/X722 SRIOV or PCI passthrough interfaces can be supported on a VPX instance.

Note: For Intel X710 10G, Intel XL710 40G, and Intel X722 10G NICs to support IPv6, you need to enable trust mode on the Virtual Functions (VFs) by typing the following command on the KVM host:

```
# ip link set <PNIC> <VF> trust on
```

Example:

```
# ip link set ens785f1 vf 0 trust on
```

Prerequisites

Before you configure a NetScaler VPX instance to use SR-IOV network interfaces, complete the following prerequisite tasks. See the NIC column for details about how to complete the corresponding tasks.

Task	Intel 82599 NIC	Intel X710, XL710, and X722 NICs
1. Add the NIC to the KVM host.	-	-
1. Download and install the latest Intel driver.	IXGBE driver	I40E driver
1. Block list the driver on the KVM host.	Add the following entry in the /etc/modprobe.d/blacklist.conf file: <code>blacklist ixgbevf</code> . Use IXGBE driver version 4.3.15 (recommended).	Add the following entry in the /etc/modprobe.d/blacklist.conf file: <code>blacklist i40evf</code> . Use i40e driver version 2.0.26 (recommended).

Task	Intel 82599 NIC	Intel X710, XL710, and X722 NICs
<p>4.Enable SR-IOV Virtual Functions (VFs) on the KVM host. In both the commands in the next two columns: <code>number_of_VFs</code> = the number of Virtual VFs that you want to create. <code>device_name</code> = the interface name.</p> <p>1. Make the VFs persistent by adding the commands that you used to create VFs, to the rc.local file.</p>	<p>If you are using earlier version of kernel 3.8, then add the following entry to the <code>/etc/modprobe.d/ixgbe</code> file and restart the KVM host:</p> <pre>options ixgbe max_vfs =<number_of_VFs>.</pre> <p>If you are using kernel 3.8 version or later, create VFs using the following command:</p> <pre>echo <number_of_VFs> > /sys/class/net/<device_name>/device/sriov_numvfs.</pre> <p>See example in figure 1.</p> <p>See example in figure 3.</p>	<p>If you are using earlier version of kernel 3.8, then add the following entry to the <code>/etc/modprobe.d/i40e.conf</code> file and restart the KVM host:</p> <pre>options i40e max_vfs =<number_of_VFs>.</pre> <p>If you are using kernel 3.8 version or later, create VFs using the following command:</p> <pre>echo<number_of_VFs> > /sys/class/net/<device_name>/device/sriov_numvfs.</pre> <p>See example in figure 2.</p> <p>See example in figure 3.</p>

Important

When you create the SR-IOV VFs, ensure that you do not assign MAC addresses to the VFs.

Figure 1: Enable SR-IOV VFs on the KVM host for Intel 82599 10G NIC.

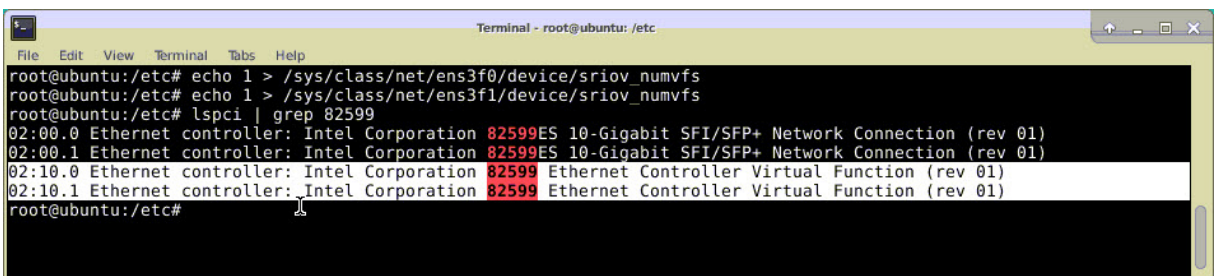


Figure 2: Enable SR-IOV VFs on the KVM host for Intel X710 10G and XL710 40G NICs.

```

root@ubuntu:~# lspci | grep 710
03:00.0 Ethernet controller: Intel Corporation Ethernet Controller X710 for 10GbE SFP+ (rev 01)
03:00.1 Ethernet controller: Intel Corporation Ethernet Controller X710 for 10GbE SFP+ (rev 01)
03:00.2 Ethernet controller: Intel Corporation Ethernet Controller X710 for 10GbE SFP+ (rev 01)
03:00.3 Ethernet controller: Intel Corporation Ethernet Controller X710 for 10GbE SFP+ (rev 01)
03:06.0 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
03:06.1 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
03:0a.0 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
03:0a.1 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
03:0a.2 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
03:0a.3 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
03:0e.0 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
03:0e.1 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
03:0e.2 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
03:0e.3 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 01)
81:00.0 Ethernet controller: Intel Corporation Ethernet Controller XL710 for 40GbE QSFP+ (rev 01)
82:00.0 Ethernet controller: Intel Corporation Ethernet Controller XL710 for 40GbE QSFP+ (rev 02)
82:00.1 Ethernet controller: Intel Corporation Ethernet Controller XL710 for 40GbE QSFP+ (rev 02)
82:02.0 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 02)
82:02.1 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 02)
82:0a.0 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 02)
82:0a.1 Ethernet controller: Intel Corporation XL710/X710 Virtual Function (rev 02)
root@ubuntu:~#

```

Figure 3: Enable SR-IOV VFs on the KVM host for Intel X722 10G NIC.

```

root@ubuntu:~# lspci | grep "37cd"
84:02.0 Ethernet controller: Intel Corporation Device 37cd (rev 04)
84:0a.0 Ethernet controller: Intel Corporation Device 37cd (rev 04)

```

Figure 4: Make the VFs persistent.

```


Terminal - root@ubuntu: /etc
File Edit View Terminal Tabs Help
root@ubuntu:/etc# cat /etc/rc.local
#!/bin/sh -e
#
# rc.local
#
# This script is executed at the end of each multiuser runlevel.
# Make sure that the script will "exit 0" on success or any other
# value on error.
#
# In order to enable or disable this script just change the execution
# bits.
#
# By default this script does nothing.
echo 1 > /sys/class/net/ens3f0/device/sriov_numvfs
echo 1 > /sys/class/net/ens3f1/device/sriov_numvfs
exit 0
root@ubuntu:/etc#

```


Configure a NetScaler VPX instance to use SR-IOV network interface

To configure the NetScaler VPX instance to use SR-IOV network interface by using Virtual Machine Manager, complete these steps:


1. Power off the NetScaler VPX instance.
2. Select the NetScaler VPX instance and then select Open.

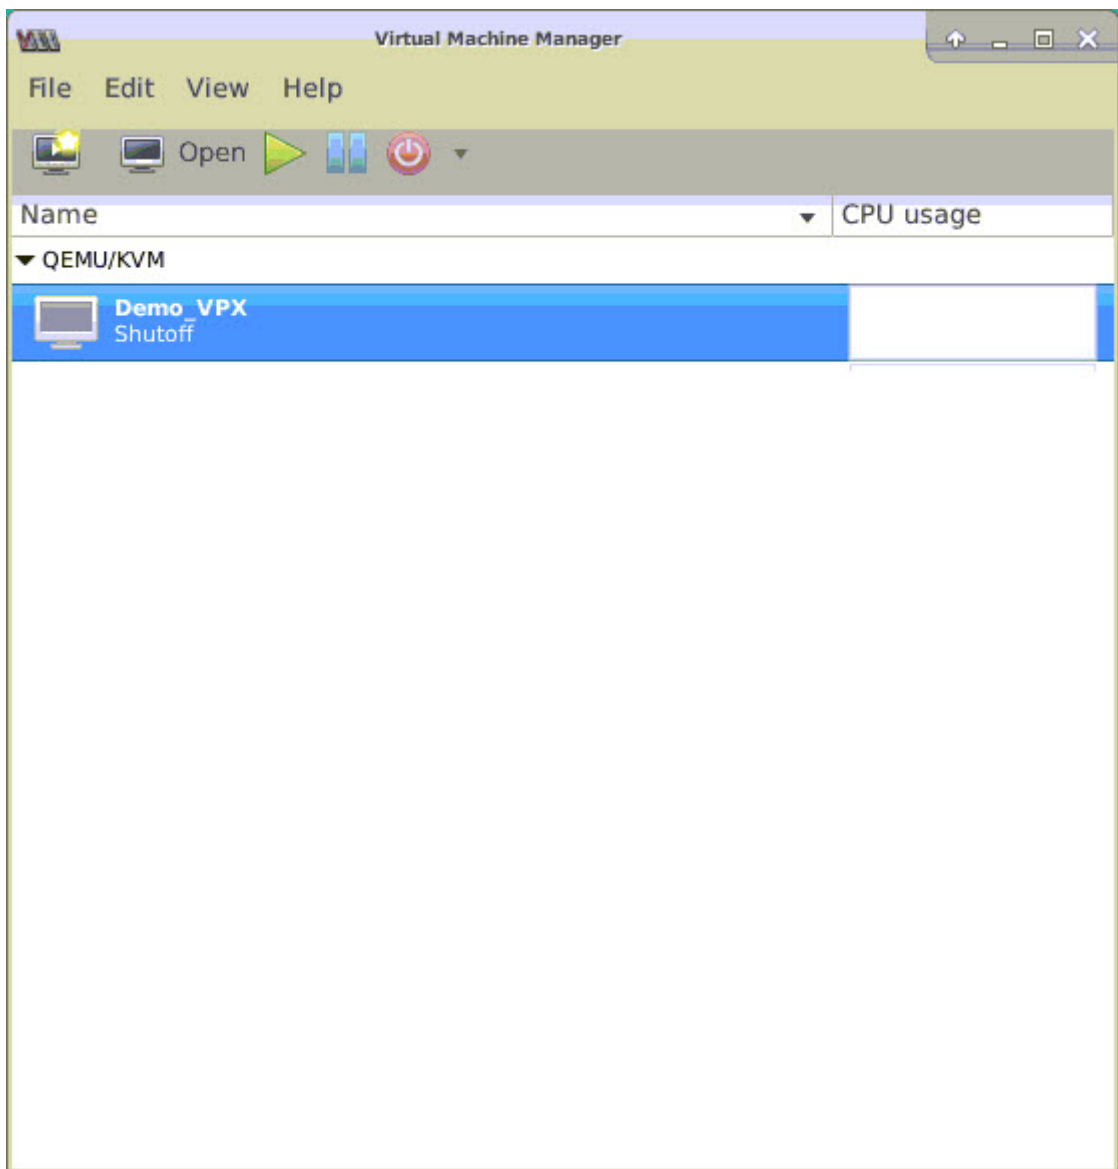

3. In the <virtual machine on KVM> window, select the **i** icon.

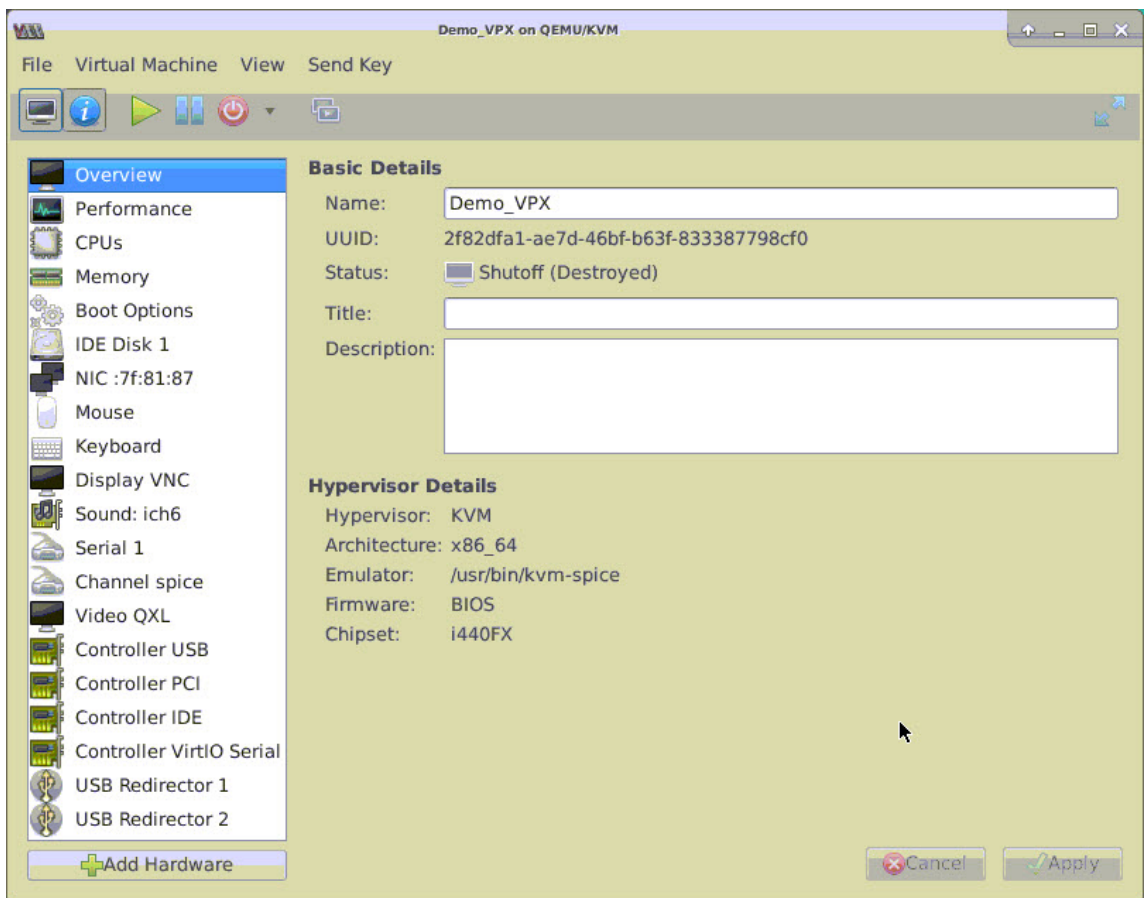

4. Select **Add Hardware**.

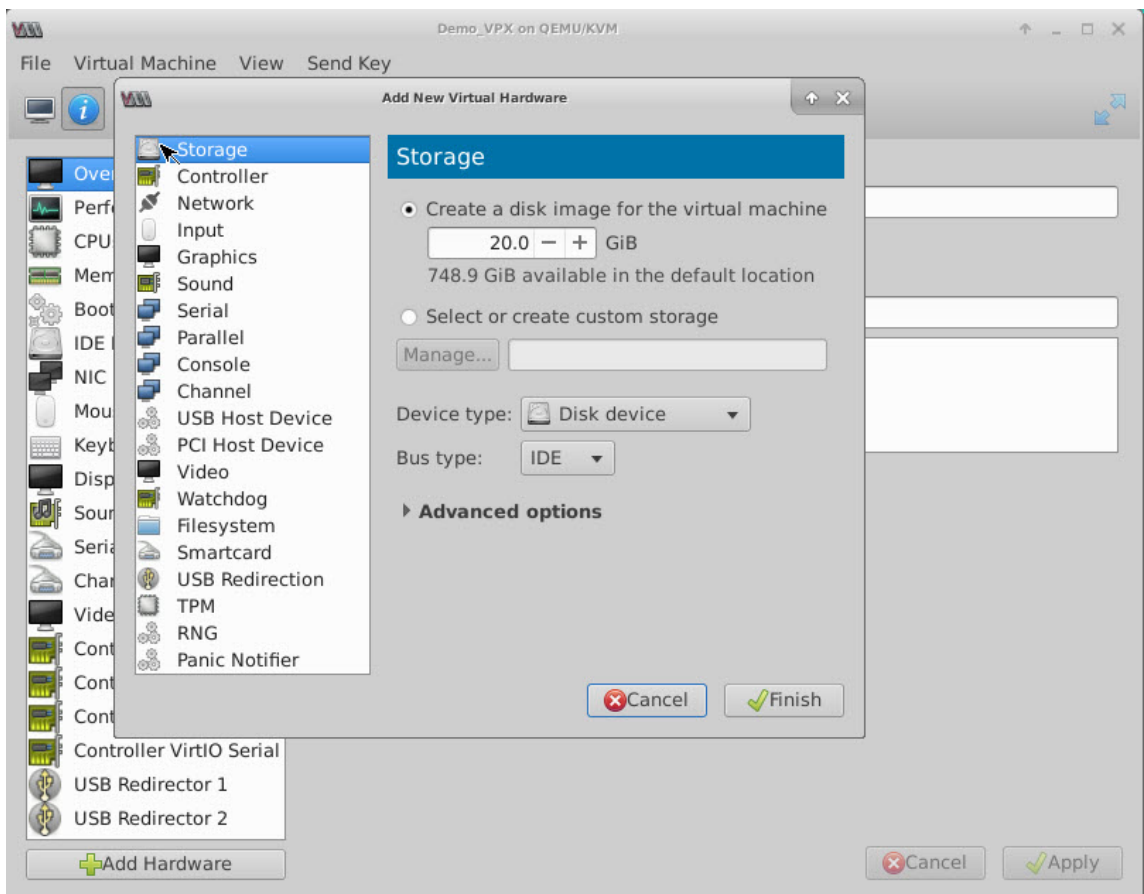

5. In the **Add New Virtual Hardware** dialog box, do the following:
 - a) Select PCI Host Device.
 - b) In the Host Device section, select the VF you have created and click Finish.

Figure 4: VF for Intel 82599 10G NIC

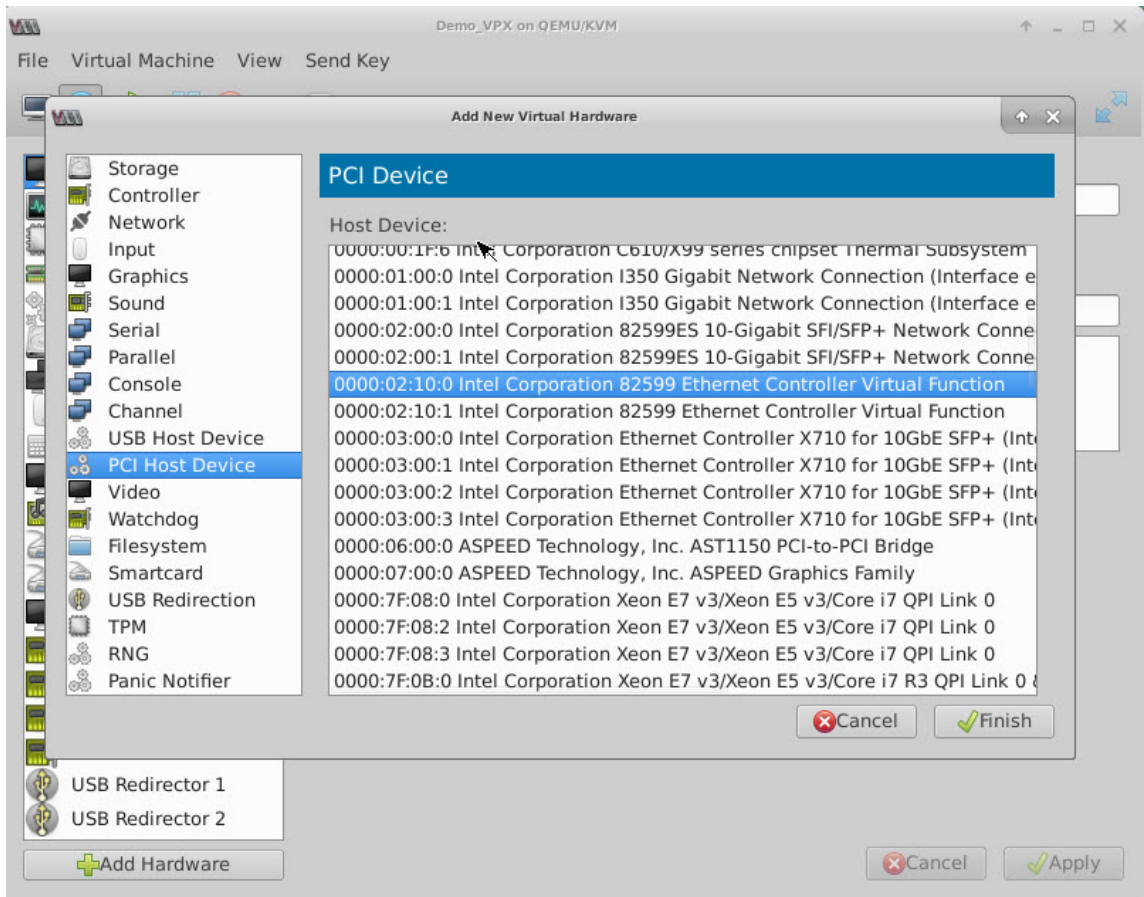


Figure 5: VF for Intel XL710 40G NIC


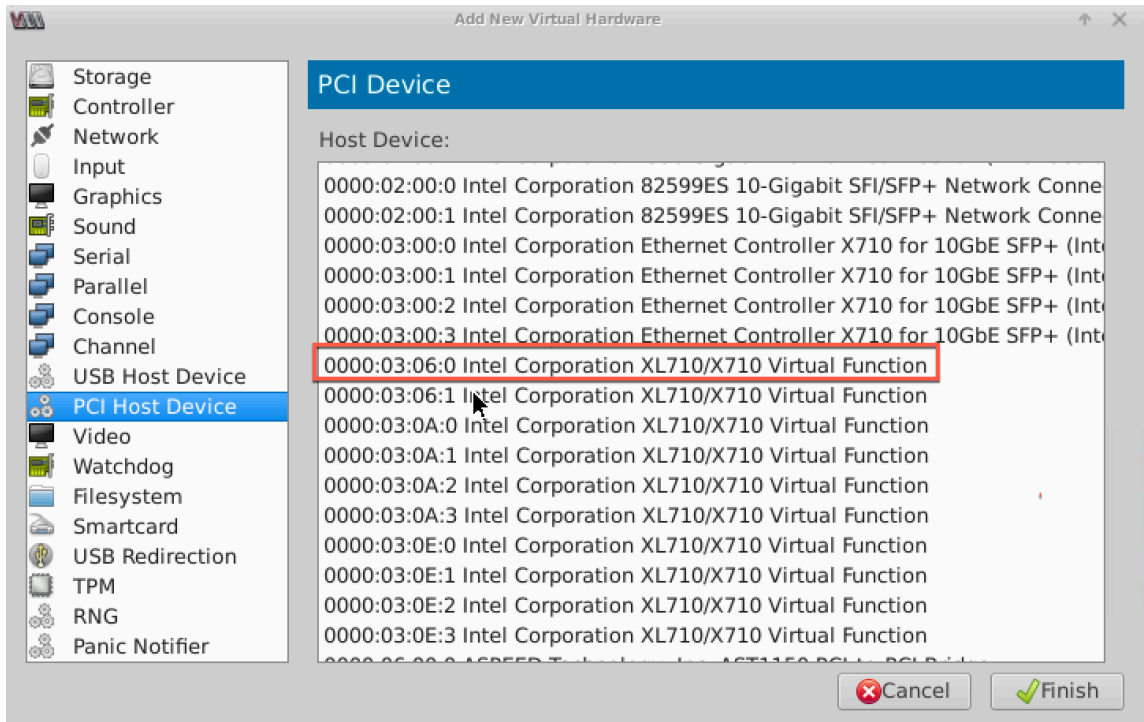


Figure 6: VF for Intel X722 10G NIC

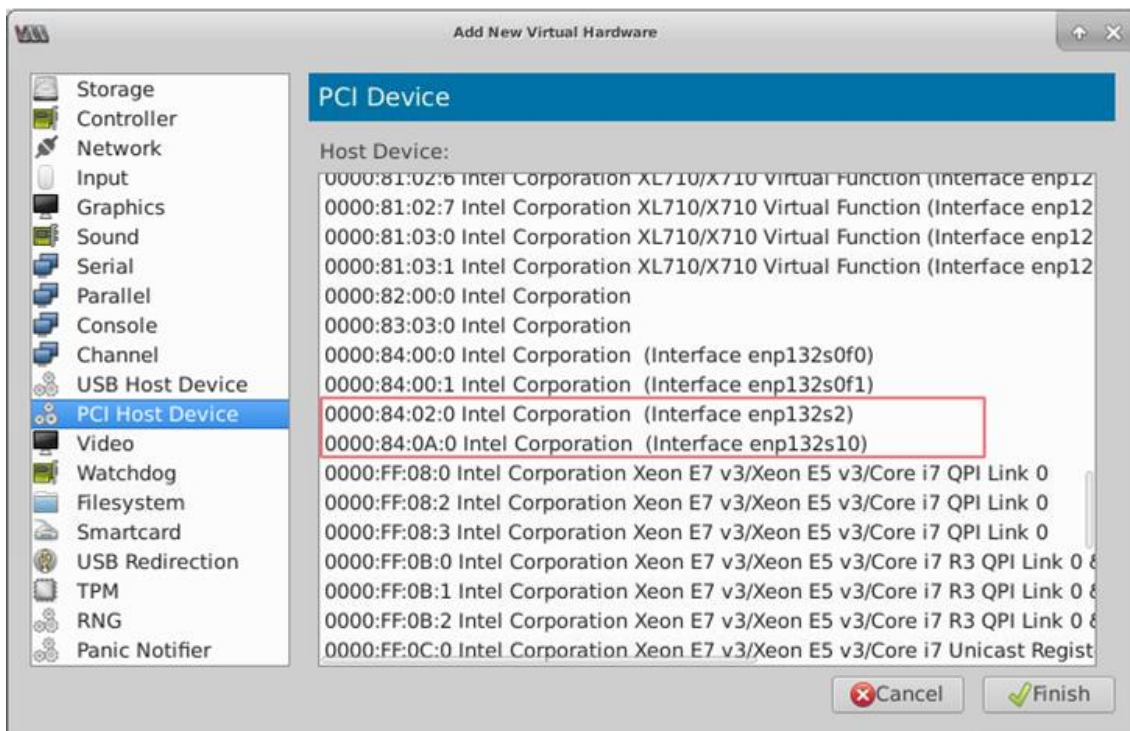

6. Repeat Step 4 and 5 to add the VFs that you have created.
7. Power on the NetScaler VPX instance.
8. After the NetScaler VPX instance powers on, use the following command to verify the configuration:

```
1 show interface summary
```

The output shows all the interfaces that you configured.

Figure 6: output summary for Intel 82599 NIC.


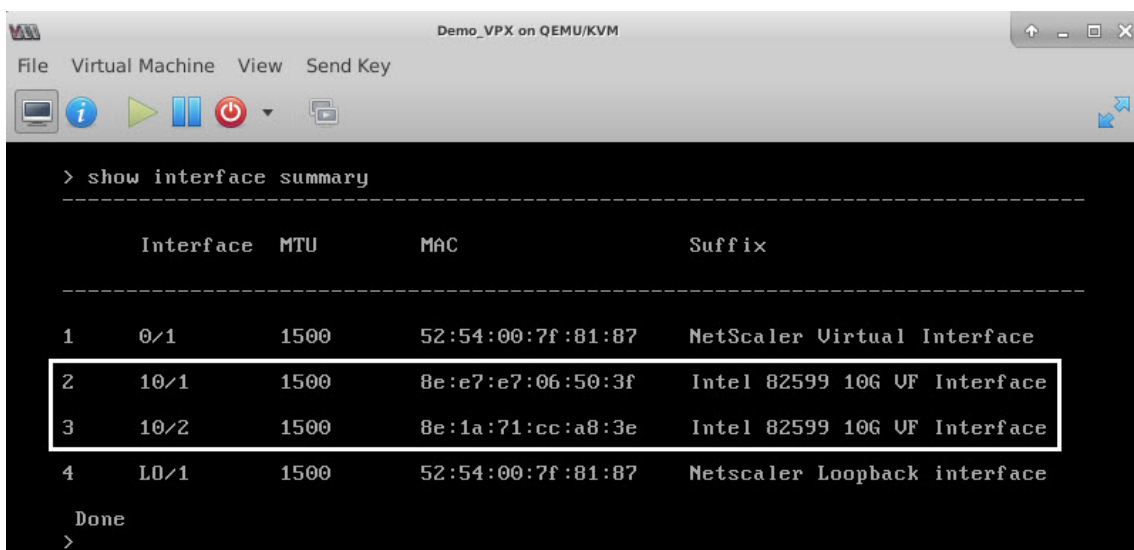


Figure 7. Output summary for Intel X710 and XL710 NICs.

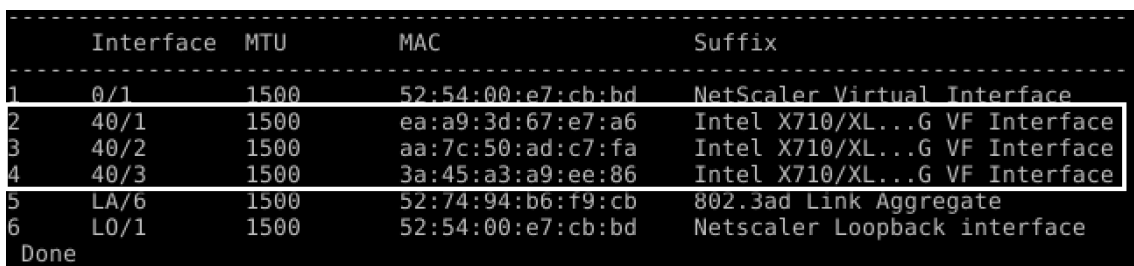

Configure static LA/LACP on the SR-IOV interface

Important

When you are creating the SR-IOV VFs, ensure that you do not assign MAC addresses to the VFs.

To use the SR-IOV VFs in link aggregation mode, disable spoof checking for VFs that you have created. On the KVM host, use the following command to disable spoof checking:

```
*ip link set \<interface\_name\> vf \<VF\_id\> spoofchk off*
```

Where:

- Interface_name –is the interface name.
- VF_id –is the Virtual Function id.

Example:

```
Terminal - root@ubuntu: /etc
File Edit View Terminal Tabs Help
root@ubuntu:/etc# ip link show ens3f0
6: ens3f0: <BROADCAST,MULTICAST,UP,LOWER UP> mtu 1500 qdisc mq state UP mode DEFAULT group default qlen 1000
    link/ether 0c:c4:7a:bd:50:7e brd ff:ff:ff:ff:ff:ff
    vf 0 MAC 8e:e7:e7:06:50:3f, spoof checking on, link-state auto
root@ubuntu:/etc#
root@ubuntu:/etc#
root@ubuntu:/etc# ip link show ens3f1
7: ens3f1: <BROADCAST,MULTICAST,UP,LOWER UP> mtu 1500 qdisc mq state UP mode DEFAULT group default qlen 1000
    link/ether 0c:c4:7a:bd:50:7f brd ff:ff:ff:ff:ff:ff
    vf 0 MAC 8e:1a:71:cc:a8:3e, spoof checking on, link-state auto
root@ubuntu:/etc#
root@ubuntu:/etc# ip link set ens3f0 vf 0 spoofchk off
root@ubuntu:/etc# ip link show ens3f0
6: ens3f0: <BROADCAST,MULTICAST,UP,LOWER UP> mtu 1500 qdisc mq state UP mode DEFAULT group default qlen 1000
    link/ether 0c:c4:7a:bd:50:7e brd ff:ff:ff:ff:ff:ff
    vf 0 MAC 8e:e7:e7:06:50:3f, spoof checking off, link-state auto
root@ubuntu:/etc# ip link set ens3f1 vf 0 spoofchk off
root@ubuntu:/etc# ip link show ens3f1
7: ens3f1: <BROADCAST,MULTICAST,UP,LOWER UP> mtu 1500 qdisc mq state UP mode DEFAULT group default qlen 1000
    link/ether 0c:c4:7a:bd:50:7f brd ff:ff:ff:ff:ff:ff
    vf 0 MAC 8e:1a:71:cc:a8:3e, spoof checking off, link-state auto
root@ubuntu:/etc#
```

After you disable spoof checking for all the VFs that you have created. Restart the NetScaler VPX instance and configure link aggregation. For detailed instructions, see [Configuring Link Aggregation](#).

Configuring VLAN on the SR-IOV Interface

You can configure VLAN on SR-IOV VFs. For detailed instructions, see [Configuring a VLAN](#).

Important

Ensure that the KVM host does not contain VLAN settings for the VF interface.

Configure a NetScaler VPX on the KVM hypervisor to use Intel QAT for SSL acceleration in SR-IOV mode

August 23, 2024

The NetScaler VPX instance on the Linux KVM hypervisor can use the Intel QuickAssist Technology (QAT) to accelerate the NetScaler SSL performance. Using Intel QAT, all heavy-latency crypto processing can be offloaded to the chip thus freeing up one or more host CPUs to do other tasks.

Previously, all NetScaler data path crypto processing was done in the software using host vCPUs.

Note:

Currently, NetScaler VPX supports only the C62x chip model under Intel QAT family. This feature is supported starting from NetScaler release 14.1 build 8.50.

Prerequisites

- The Linux host is equipped with an Intel QAT C62x chip, either integrated directly into the motherboard or added on an external PCI card.

Intel QAT C62x series models: C625, C626, C627, C628. Only these C62x models include Public Key Encryption (PKE) capability. Other C62x variants do not support PKE.

- The NetScaler VPX meets the VMware ESX hardware requirements. For more information, see [Install a NetScaler VPX instance on Linux KVM platform](#).

Limitations

There's no provision to reserve crypto units or bandwidth for individual VMs. All the available crypto units of any Intel QAT hardware are shared across all VMs using the QAT hardware.

Set up the host environment for using Intel QAT

1. Download and install the Intel-provided driver for the C62x series (QAT) chip model in the Linux host. For more information on the Intel package downloads and installation instructions, see [Intel QuickAssist Technology Driver for Linux](#).

A readme file is available as part of the download package. This file provides instructions about compiling and installing the package in the host.

After you download and install the driver, perform the following sanity checks:

- Note the number of C62x chips. Each C62x chip has up to 3 PCIe endpoints.
- Make sure that all the endpoints are UP. Run the `adf_ctl status` command to display the status of all the PF endpoints (up to 3).

```
1 root@Super-Server:~# adf_ctl status
2
3 Checking status of all devices.
4 There is 51 QAT acceleration device(s) in the system
5 qat_dev0 - type: c6xx, inst_id: 0, node_id: 0, bsf: 0000:1
   a:00.0, #accel: 5 #engines: 10 state: up
6 qat_dev1 - type: c6xx, inst_id: 1, node_id: 0, bsf: 0000:1
   b:00.0, #accel: 5 #engines: 10 state: up
7 qat_dev2 - type: c6xx, inst_id: 2, node_id: 0, bsf: 0000:1
   c:00.0, #accel: 5 #engines: 10 state: up
```

- Enable SRIOV (VF support) for all QAT endpoints.

```
1 root@Super-Server:~# echo 1 > /sys/bus/pci/devices/0000\:1a
  \:00.0/sriov_numvfs
```

```

2 root@Super-Server:~# echo 1 > /sys/bus/pci/devices/0000\:1b
  \:00.0/sriov_numvfs
3 root@Super-Server:~# echo 1 > /sys/bus/pci/devices/0000\:1c
  \:00.0/sriov_numvfs

```

- Make sure that all VFs are displayed (16 VFs per endpoint, totaling to 48 VFs).
- Run the `adf_ctl status` command to verify that all the PF endpoints (up to 3) and the VFs of each Intel QAT chip are UP. In this example, the system has only one C62x chip. So, it has 51 endpoints (3 + 48 VFs) in total.

```

root@venkat-Super-Server:~# adf_ctl status
Checking status of all devices.
There is 47 QAT acceleration device(s) in the system:
qat_dev0 - type: c6xx, inst_id: 0, node_id: 0, bsf: 0000:1a:00.0, #accel: 5 #engines: 10 state: up
qat_dev1 - type: c6xx, inst_id: 1, node_id: 0, bsf: 0000:1b:00.0, #accel: 5 #engines: 10 state: up
qat_dev2 - type: c6xx, inst_id: 2, node_id: 0, bsf: 0000:1c:00.0, #accel: 5 #engines: 10 state: up
qat_dev3 - type: c6xxvf, inst_id: 0, node_id: 0, bsf: 0000:1a:01.0, #accel: 1 #engines: 1 state: up
qat_dev4 - type: c6xxvf, inst_id: 1, node_id: 0, bsf: 0000:1a:01.7, #accel: 1 #engines: 1 state: up
qat_dev5 - type: c6xxvf, inst_id: 2, node_id: 0, bsf: 0000:1a:01.1, #accel: 1 #engines: 1 state: up
qat_dev6 - type: c6xxvf, inst_id: 3, node_id: 0, bsf: 0000:1a:02.0, #accel: 1 #engines: 1 state: up
qat_dev7 - type: c6xxvf, inst_id: 4, node_id: 0, bsf: 0000:1a:01.2, #accel: 1 #engines: 1 state: up
qat_dev8 - type: c6xxvf, inst_id: 5, node_id: 0, bsf: 0000:1a:01.3, #accel: 1 #engines: 1 state: up
qat_dev9 - type: c6xxvf, inst_id: 6, node_id: 0, bsf: 0000:1a:02.1, #accel: 1 #engines: 1 state: up
qat_dev10 - type: c6xxvf, inst_id: 7, node_id: 0, bsf: 0000:1a:01.4, #accel: 1 #engines: 1 state: up
qat_dev11 - type: c6xxvf, inst_id: 8, node_id: 0, bsf: 0000:1a:01.5, #accel: 1 #engines: 1 state: up
qat_dev12 - type: c6xxvf, inst_id: 9, node_id: 0, bsf: 0000:1a:02.2, #accel: 1 #engines: 1 state: up
qat_dev13 - type: c6xxvf, inst_id: 10, node_id: 0, bsf: 0000:1a:01.6, #accel: 1 #engines: 1 state: up
qat_dev14 - type: c6xxvf, inst_id: 11, node_id: 0, bsf: 0000:1a:02.3, #accel: 1 #engines: 1 state: up
qat_dev15 - type: c6xxvf, inst_id: 12, node_id: 0, bsf: 0000:1a:02.4, #accel: 1 #engines: 1 state: up
qat_dev16 - type: c6xxvf, inst_id: 13, node_id: 0, bsf: 0000:1a:02.5, #accel: 1 #engines: 1 state: up
qat_dev17 - type: c6xxvf, inst_id: 14, node_id: 0, bsf: 0000:1a:02.6, #accel: 1 #engines: 1 state: up
qat_dev18 - type: c6xxvf, inst_id: 15, node_id: 0, bsf: 0000:1a:02.7, #accel: 1 #engines: 1 state: up
qat_dev19 - type: c6xxvf, inst_id: 16, node_id: 0, bsf: 0000:1b:01.0, #accel: 1 #engines: 1 state: up
qat_dev20 - type: c6xxvf, inst_id: 17, node_id: 0, bsf: 0000:1b:01.1, #accel: 1 #engines: 1 state: up
qat_dev21 - type: c6xxvf, inst_id: 18, node_id: 0, bsf: 0000:1b:01.2, #accel: 1 #engines: 1 state: up
qat_dev22 - type: c6xxvf, inst_id: 19, node_id: 0, bsf: 0000:1b:01.3, #accel: 1 #engines: 1 state: up
qat_dev23 - type: c6xxvf, inst_id: 20, node_id: 0, bsf: 0000:1b:01.4, #accel: 1 #engines: 1 state: up
qat_dev24 - type: c6xxvf, inst_id: 21, node_id: 0, bsf: 0000:1b:01.5, #accel: 1 #engines: 1 state: up
qat_dev25 - type: c6xxvf, inst_id: 22, node_id: 0, bsf: 0000:1b:01.6, #accel: 1 #engines: 1 state: up
qat_dev26 - type: c6xxvf, inst_id: 23, node_id: 0, bsf: 0000:1b:01.7, #accel: 1 #engines: 1 state: up
qat_dev27 - type: c6xxvf, inst_id: 24, node_id: 0, bsf: 0000:1b:02.0, #accel: 1 #engines: 1 state: up
qat_dev28 - type: c6xxvf, inst_id: 25, node_id: 0, bsf: 0000:1b:02.1, #accel: 1 #engines: 1 state: up
qat_dev29 - type: c6xxvf, inst_id: 26, node_id: 0, bsf: 0000:1b:02.2, #accel: 1 #engines: 1 state: up
qat_dev30 - type: c6xxvf, inst_id: 27, node_id: 0, bsf: 0000:1b:02.3, #accel: 1 #engines: 1 state: up
qat_dev31 - type: c6xxvf, inst_id: 28, node_id: 0, bsf: 0000:1b:02.4, #accel: 1 #engines: 1 state: up
qat_dev32 - type: c6xxvf, inst_id: 29, node_id: 0, bsf: 0000:1b:02.5, #accel: 1 #engines: 1 state: up
qat_dev33 - type: c6xxvf, inst_id: 30, node_id: 0, bsf: 0000:1b:02.6, #accel: 1 #engines: 1 state: up
qat_dev34 - type: c6xxvf, inst_id: 31, node_id: 0, bsf: 0000:1b:02.7, #accel: 1 #engines: 1 state: up
qat_dev39 - type: c6xxvf, inst_id: 32, node_id: 0, bsf: 0000:1c:01.4, #accel: 1 #engines: 1 state: up
qat_dev40 - type: c6xxvf, inst_id: 33, node_id: 0, bsf: 0000:1c:01.5, #accel: 1 #engines: 1 state: up
qat_dev41 - type: c6xxvf, inst_id: 34, node_id: 0, bsf: 0000:1c:01.6, #accel: 1 #engines: 1 state: up
qat_dev42 - type: c6xxvf, inst_id: 35, node_id: 0, bsf: 0000:1c:01.7, #accel: 1 #engines: 1 state: up
qat_dev43 - type: c6xxvf, inst_id: 36, node_id: 0, bsf: 0000:1c:02.0, #accel: 1 #engines: 1 state: up
qat_dev44 - type: c6xxvf, inst_id: 37, node_id: 0, bsf: 0000:1c:02.1, #accel: 1 #engines: 1 state: up
qat_dev45 - type: c6xxvf, inst_id: 38, node_id: 0, bsf: 0000:1c:02.2, #accel: 1 #engines: 1 state: up
qat_dev46 - type: c6xxvf, inst_id: 39, node_id: 0, bsf: 0000:1c:02.3, #accel: 1 #engines: 1 state: up
qat_dev47 - type: c6xxvf, inst_id: 40, node_id: 0, bsf: 0000:1c:02.4, #accel: 1 #engines: 1 state: up
qat_dev48 - type: c6xxvf, inst_id: 41, node_id: 0, bsf: 0000:1c:02.5, #accel: 1 #engines: 1 state: up
qat_dev49 - type: c6xxvf, inst_id: 42, node_id: 0, bsf: 0000:1c:02.6, #accel: 1 #engines: 1 state: up
qat_dev50 - type: c6xxvf, inst_id: 43, node_id: 0, bsf: 0000:1c:02.7, #accel: 1 #engines: 1 state: up
root@venkat-Super-Server:~#

```

2. Enable SR-IOV on the Linux host.
3. Create virtual machines. When creating a VM, assign the appropriate number of PCI devices to meet the performance requirements.

Note:

Each C62x (QAT) chip can have up to three separate PCI endpoints. Each endpoint is a logical collection of VFs, and shares the bandwidth equally with other PCI endpoints of the chip. Each endpoint can have up to 16 VFs that show up as 16 PCI devices. Add these devices to the VM to do the crypto acceleration using the QAT chip.

Points to note


- If the VM crypto requirement is to use more than one QAT PCI endpoint/chip, we recommend that you pick the corresponding PCI devices/VFs in a round-robin fashion to have a symmetric distribution.
- We recommend that the number of PCI devices selected is equal to the number of licensed vCPUs (without including the management vCPU count). Adding more PCI devices than the available number of vCPUs does not necessarily improve the performance.

Example:

Consider a Linux host with one Intel C62x chip that has 3 endpoints. While provisioning a VM with 6 vCPUs, pick 2 VFs from each endpoint, and assign them to the VM. This assignment ensures an effective and equal distribution of crypto units for the VM. From the total available vCPUs, by default, one vCPU is reserved for the management plane, and the rest of the vCPUs are available for the data plane PEs.

Assign QAT VFs to NetScaler VPX deployed on Linux KVM hypervisor

1. In the Linux KVM virtual machine manager, make sure the VM (NetScaler VPX) is powered off.
2. Navigate to **Add hardware > PCI Host Device**.
3. Assign Intel QAT VF to the PCI device.

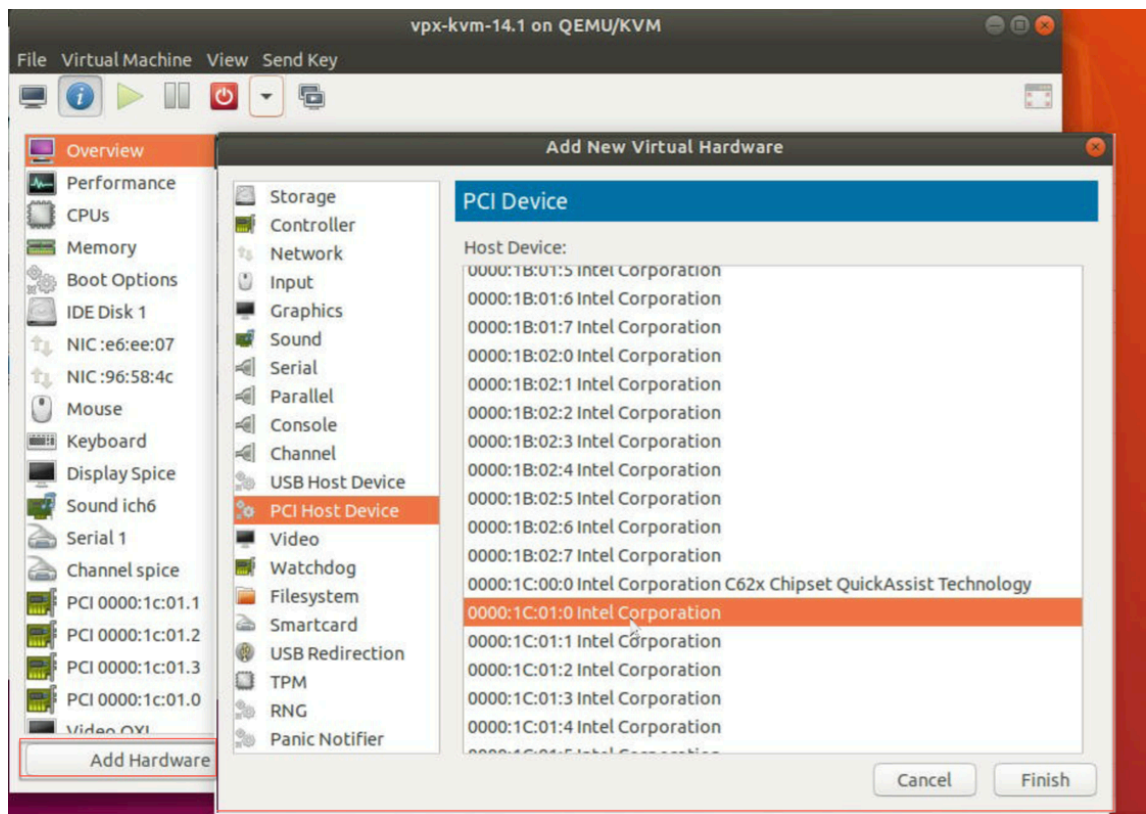


4. Click **Finish**.
5. Repeat the preceding steps to assign one or more Intel QAT VFs to the NetScaler VPX instance up to the limit of one less than the total number of vCPUs. Because One vCPU is reserved for the management process.

$$\text{Number of QAT VFs per VM} = \text{Number of vCPUs} - 1$$

6. Power on the VM.
7. Run the `stat ssl` command in the NetScaler CLI to display the SSL summary, and verify the SSL cards after assigning QAT VFs to NetScaler VPX.

In this example, we have used 5 vCPUs, which implies 4 packet engines (PEs).

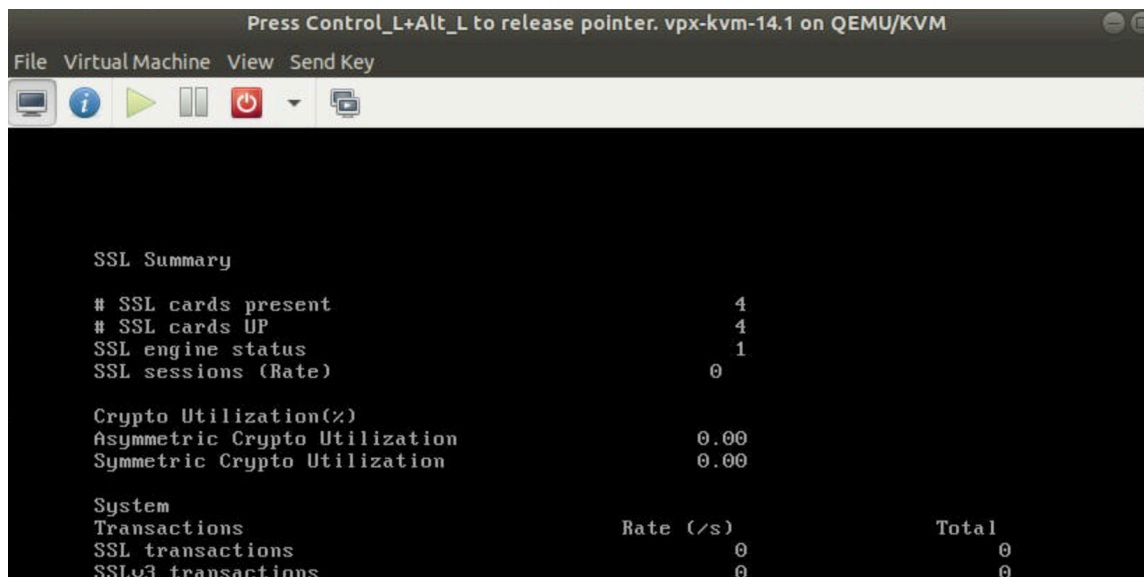

```
Press Control_L+Alt_L to release pointer. vpx-kvm-14.1 on QEMU/KVM
File Virtual Machine View Send Key
SSL Summary
# SSL cards present          4
# SSL cards UP              4
SSL engine status           1
SSL sessions (Rate)         0

Crypto Utilization(%)
Asymmetric Crypto Utilization 0.00
Symmetric Crypto Utilization  0.00

System
Transactions                Rate (/s)      Total
SSL transactions             0              0
SSLv3 transactions           0              0
```

About the deployment

This deployment was tested with the following component specifications:

- **NetScaler VPX Version and Build:** 14.1–8.50
- **Ubuntu Version:** 18.04, Kernel 5.4.0-146
- **Intel C62x QAT driver version for Linux:** L.4.21.0-00001

Configure a NetScaler VPX instance to use PCI passthrough network interfaces

May 2, 2023

After you have installed and configured a NetScaler VPX instance on the Linux-KVM platform, you can use the Virtual Machine Manager to configure the virtual appliance to use PCI passthrough network interfaces.


Prerequisites

- The firmware version of the Intel XL710 NIC (NIC) on the KVM Host is 5.04.
- The KVM Host supports input–output memory management unit (IOMMU) and Intel VT-d, and they are enabled in the BIOS of the KVM Host. On the KVM Host, to enable IOMMU, add the following entry to the `/boot/grub2/grub.cfg` file: **intel_iommu=1**


- Run the following command and reboot the KVM Host: **Grub2-mkconfig -o /boot/grub2/grub.cfg**

To configure NetScaler VPX instances to use PCI passthrough network interfaces by using the Virtual Machine Manager:


1. Power off the NetScaler VPX instance.
2. Select the NetScaler VPX instance and click **Open**.

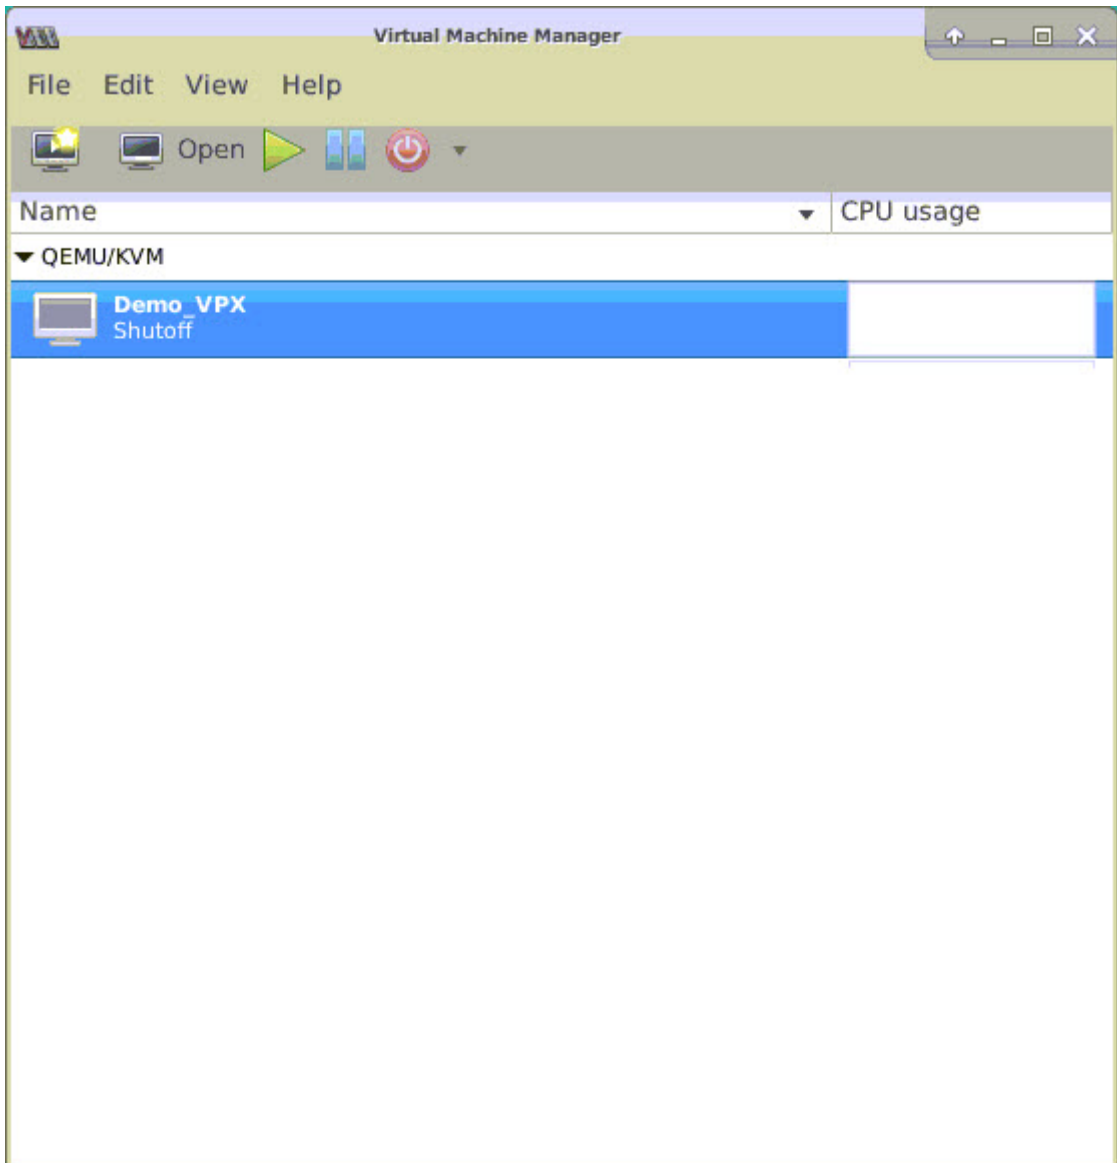

3. In the **virtual_machine on KVM>** window, click the **i** icon.

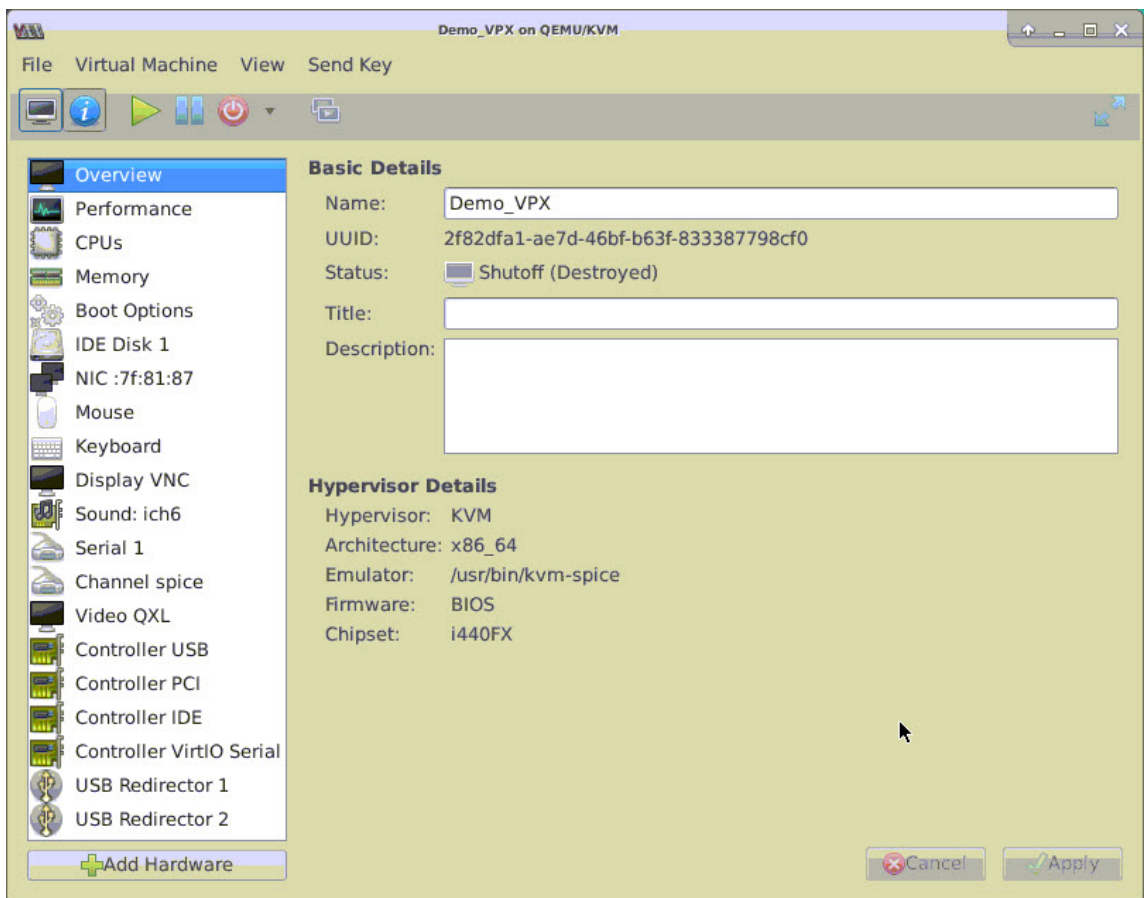

4. Click **Add Hardware**.
5. In the **Add New Virtual Hardware** dialog box, do the following:
 - a. Select **PCI Host Device**.
 - b. In the **Host Device** section, select the Intel XL710 physical function.
 - c. Click **Finish**.

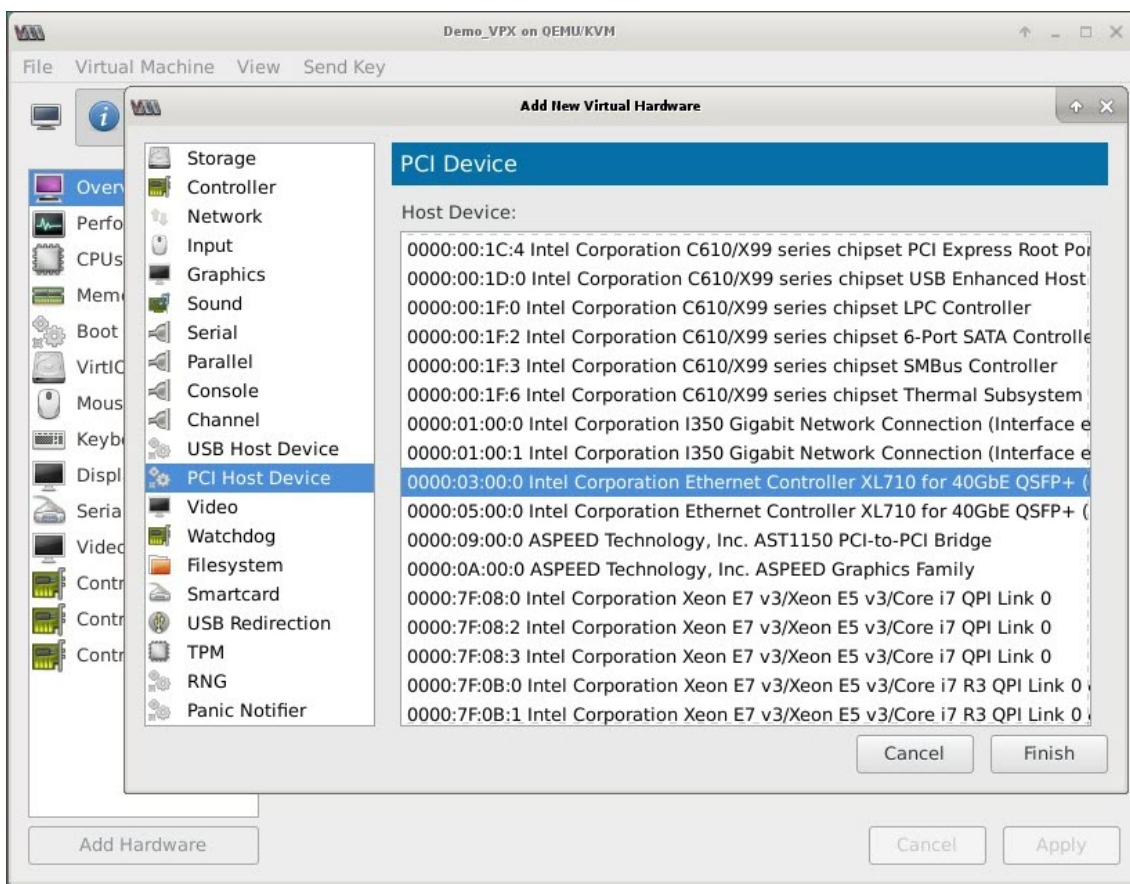


6. Repeat steps 4 and 5 to add any additional Intel XL710 physical functions.
7. Power on the NetScaler VPX instance.
8. Once the NetScaler VPX instance powers on, you can use the following command to verify the configuration:

```

COMMAND
> show interface summary
    
```

The output must show all the interfaces that you configured:

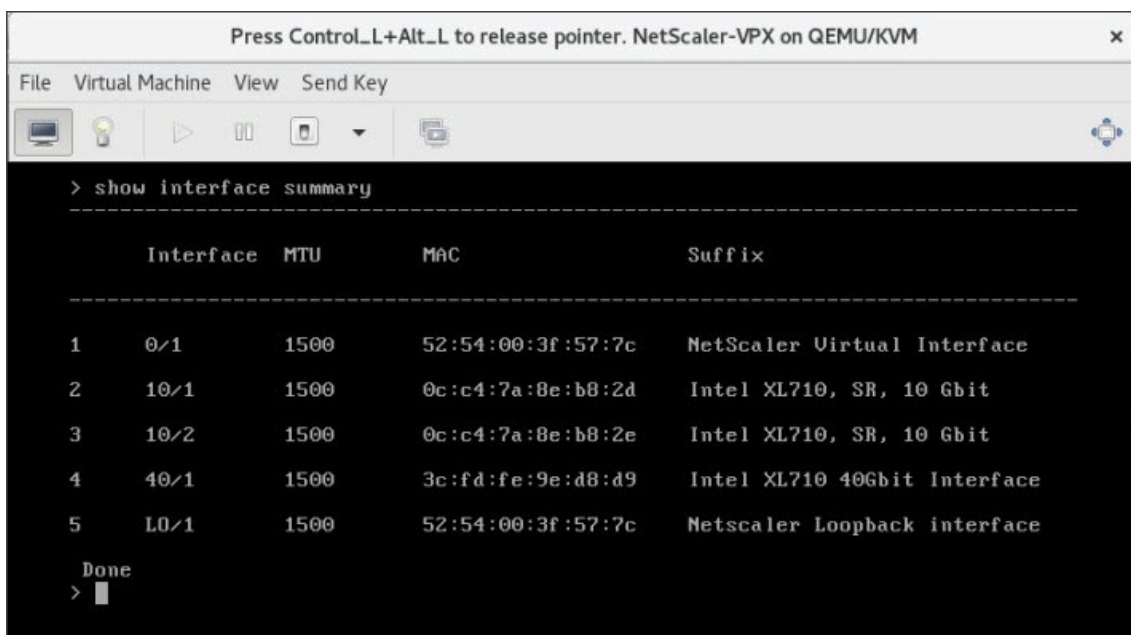

```

> show interface summary
-----
      Interface  MTU      MAC                               Suffix
-----
1      0/1         1500    52:54:00:3f:57:7c    NetScaler Virtual Interface
2      10/1         1500    0c:c4:7a:8e:b8:2d    Intel XL710, SR, 10 Gbit
3      10/2         1500    0c:c4:7a:8e:b8:2e    Intel XL710, SR, 10 Gbit
4      40/1         1500    3c:fd:fe:9e:d8:d9    Intel XL710 40Gbit Interface
5      L0/1         1500    52:54:00:3f:57:7c    Netscaler Loopback interface

Done
> █

```

Provision the NetScaler VPX instance by using the virsh program

May 2, 2023

The `virsh` program is a command line tool for managing VM Guests. Its functionality is similar to that of Virtual Machine Manager. It enables you to change a VM Guest's status (start, stop, pause, and so on), to set up new Guests and devices, and to edit existing configurations. The `virsh` program is also useful for scripting VM Guest management operations.

To provision NetScaler VPX by using the `virsh` program, follow these steps:

1. Use the `tar` command to untar the NetScaler VPX package. The `NSVPX-KVM-*_nc.tgz` package contains the following components:
 - The Domain XML file specifying VPX attributes [`NSVPX-KVM-*_nc.xml`]
 - Check sum of NS-VM Disk Image [`Checksum.txt`]
 - NS-VM Disk Image [`NSVPX-KVM-*_nc.raw`]

Example:

```

1 tar -xvzf NSVPX-KVM-10.1-117_nc.tgz
2 NSVPX-KVM-10.1-117_nc.xml
3 NSVPX-KVM-10.1-117_nc.raw
4 checksum.txt

```

2. Copy the `NSVPX-KVM-*_nc.xml` XML file to a file named `<DomainName>-NSVPX-KVM-*_nc.xml`. The `<DomainName>` is also the name of the virtual machine. Example:

```
1 cp NSVPX-KVM-10.1-117_nc.xml NetScaler-VPX-NSVPX-KVM-10.1-117_nc.xml
```

3. Edit the <DomainName>-NSVPX-KVM-*_nc.xml file to specify the following parameters:

- name—Specify the name.
- Mac—Specify the MAC address.
Note: The domain name and the MAC address have to be unique.
- source file—Specify the absolute disk-image source path. The file path has to be absolute. You can specify the path of the RAW image file or a QCOW2 image file.

If you want to specify a RAW image file, specify the disk image source path as shown in the following example:

Example:

```
1 <name>NetScaler-VPX</name>
2 <mac address='52:54:00:29:74:b3' />
3 <source file='/root/NSVPX-KVM-10.1-117_nc.raw' />
```

Specify the absolute QCOW2 disk-image source path and define the driver type as **qcow2**, as shown in the following example:

Example:

```
1 <name>NetScaler-VPX</name>
2 <mac address='52:54:00:29:74:b3' />
3 <driver name='qemu' type='qcow2' />
4 <source file='/root/NSVPX-KVM-10.1-117_nc.qcow' />*
```

4. Edit the <DomainName>-NSVPX-KVM-*_nc.xml file to configure the networking details:

- source dev—specify the interface.
- mode—specify the mode. The default interface is **Macvtap Bridge**.

Example: Mode: MacVTap Bridge Set target interface as **ethx** and mode as bridge Model type as **virtio**

```
1 <interface type='direct'>
2   <mac address='52:54:00:29:74:b3' />
3   <source dev='eth0' mode='bridge' />
4   <target dev='macvtap0' />
5   <model type='virtio' />
6   <alias name='net0' />
7   <address type='pci' domain='0x0000' bus='0x00' slot='0x03'
   function='0x0' />
8 </interface>
```

Here, eth0 is the physical interface attached to the VM.

5. Define the VM attributes in the <DomainName>-NSVPX-KVM-*_nc.xml file by using the following command: `virsh` define <DomainName>-NSVPX-KVM-*_nc.xml Example:

```
1 virsh define NS-VPX-NSVPX-KVM-10.1-117_nc.xml
```

Start the VM by entering the following command:

] Example

`virsh` start [

```
1 virsh start NetScaler-VPX
```

Connect the Guest VM through
the console `virsh` console [

] Example

```
1 virsh console NetScaler-VPX
```

Add more interfaces to NetScaler VPX instance using `virsh` program

After you have provisioned the NetScaler VPX on KVM, you can add additional interfaces.

To add more interfaces, follow these steps:

1. Shut down the NetScaler VPX instance running on the KVM.
-

Edit the -NSVPX-KVM-*_nc.xml file using the []
command: `virsh` edit [

2.

3. In the <DomainName>-NSVPX-KVM-*_nc.xml file, append the following parameters:

a) **For MacVTap**

- Interface type—Specify the interface type as ‘direct’.
- MAC address—Specify the MAC address and make sure the MAC address is unique across the interfaces.
- source dev—Specify the interface name.
- mode—Specify the mode. The modes supported are - Bridge, VEPA, Private, and Pass-through
- model type—Specify the model type as `virtio`

Example:

Mode: MacVTap Pass-through

Set target interface as

`ethx`, Mode as

bridge, and model type as

`virtio`

```
1 <interface type='direct'>
2     <mac address='52:54:00:29:74:b3' />
3     <source dev='eth1' mode='passthrough' />
4     <model type='virtio' />
5 </interface>
```

Here `eth1` is the physical interface attached to the VM.

b) For Bridge Mode

Note: Make sure that you have configured a Linux bridge in the KVM host, bound the physical interface to the bridge, and put the bridge in the UP state.

- Interface type—Specify the interface type as ‘bridge’.
- MAC address—Specify the MAC address and make sure the MAC address is unique across the interfaces.
- source bridge—Specify the bridge name.
- model type—Specify the model type as `virtio`

Example: Bridge Mode

```
1 <interface type='bridge'>
2     <mac address='52:54:00:2d:43:a4' />
3     <source bridge='br0' />
4     <model type='virtio' />
5 </interface>
```

Manage the NetScaler VPX guest VMs

May 2, 2023

You can use the Virtual Machine Manager and the `virsh` program to perform management tasks such as starting or stopping a VM Guest, setting up new guests and devices, editing existing configurations, and connecting to the graphical console through Virtual Network Computing (VNC).

Manage the VPX guest VMs by using Virtual Machine Manager

- List the VM guests


The main Window of the Virtual Machine Manager displays a list of all the VM Guests for each VM host server it is connected to. Each VM Guest entry contains the virtual machine's name, along with its status (Running, Paused, or Shutoff) displayed as in the icon.

- Open a graphical console

Opening a Graphical Console to a VM Guest enables you to interact with the machine like you would with a physical host through a VNC connection. To open the graphical console in the Virtual Machine Manager, right-click the VM Guest entry and select the Open option from the pop-up menu.

- Start and shut down a guest

You can start or stop a VM Guest from the Virtual Machine Manager. To change the state of the VM, right-click the VM Guest entry and select Run or one of the Shut Down options from the pop-up menu.

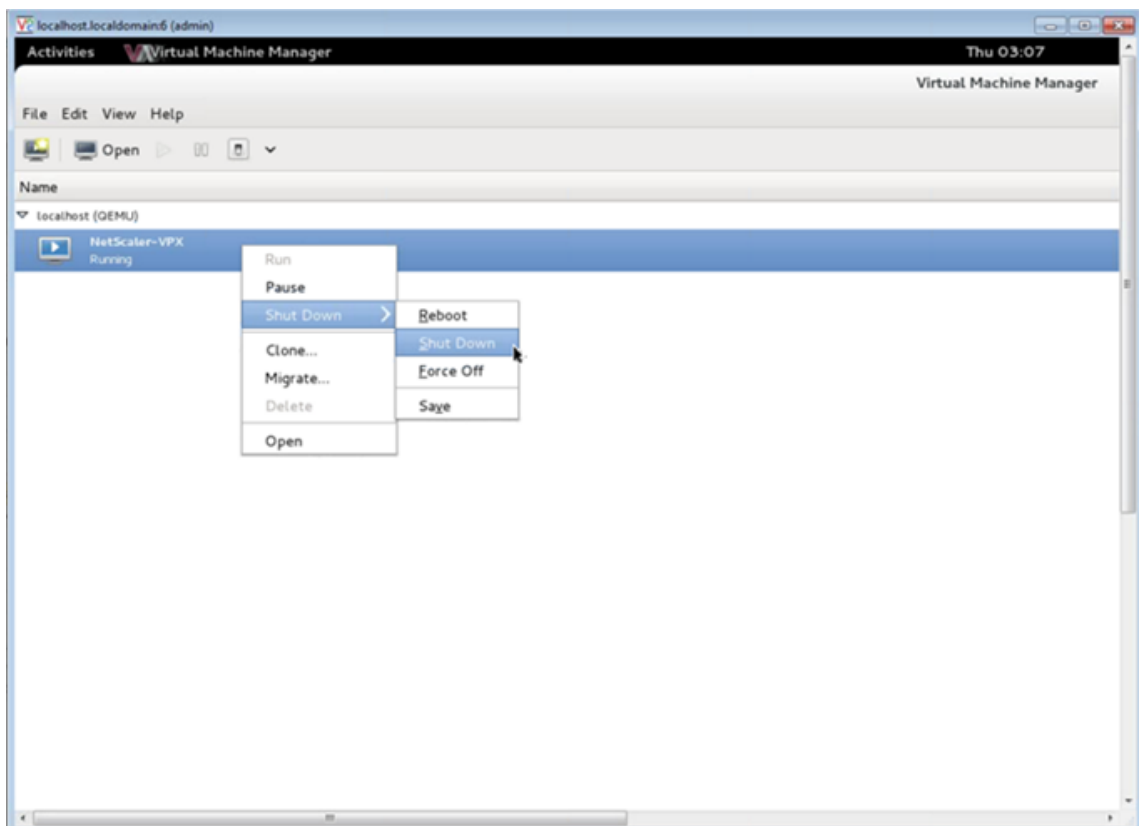

- Reboot a guest

You can reboot a VM Guest from the Virtual Machine Manager. To reboot the VM, right-click the VM Guest entry, and then select Shut Down > Reboot from the pop-up menu.

- Delete a guest

Deleting a VM Guest removes its XML configuration by default. You can also delete a guest's storage files. Doing so completely erases the guest.

1. In the Virtual Machine Manager, right-click the VM Guest entry.
2. Select Delete from the pop-up menu. A confirmation window opens.
Note: The Delete option is enabled only when the VM Guest is shut down.
3. Click Delete.
4. To completely erase the guest, delete the associated .raw file by selecting the Delete Associated Storage Files check box.

Manage the NetScaler VPX guest VMs using the `virsh` program

- List the VM Guests and their current states.

To use `virsh` to display information about the Guests

```
virsh list --all
```

The command output displays all domains with their states. Example output:

1	Id	Name	State
2	-----		
3	0	Domain-0	running
4	1	Domain-1	paused
5	2	Domain-2	inactive
6	3	Domain-3	crashed

- Open a `virsh` console.

Connect the Guest VM through the console

```
virsh console [<DomainID> | <DomainName> | <DomainUUID>]
```

Example:

```
virsh console NetScaler-VPX
```

- Start and shut down a guest.

Guests can be started using the DomainName or Domain-UUID.

```
virsh start [<DomainName> | <DomainUUID>]
```

Example:

```
virsh start NetScaler-VPX
```

To shut down a guest:

```
virsh shutdown [<DomainID> | <DomainName> | <DomainUUID>]
```


Example:

```
virsh shutdown NetScaler-VPX
```

- Reboot a guest

```
virsh reboot [<DomainID> | <DomainName> | <DomainUUID>]
```

Example:

```
virsh reboot NetScaler-VPX
```

Delete a guest

To delete a Guest VM you must shut down the Guest and undefine the <DomainName>-NSVPX-KVM-*_nc.xml before you run the delete command.

```
1 virsh shutdown [<DomainID> | <DomainName> | <DomainUUID>]
2 virsh undefine [<DomainName> | <DomainUUID>]
```

Example:

```
1 virsh shutdown NetScaler-VPX
2 virsh undefine NetScaler-VPX
```

Note: The delete command doesn't remove disk image file which must be removed manually.

Provision the NetScaler VPX instance with SR-IOV, on OpenStack

May 2, 2023

You can deploy high-performance NetScaler VPX instances that use single-root I/O virtualization (SR-IOV) technology, on OpenStack.

You can deploy a NetScaler VPX instance that uses SR-IOV technology, on OpenStack, in three steps:

- Enable SR-IOV Virtual Functions (VFs) on the host.
- Configure and make the VFs available to OpenStack.
- Provision the NetScaler VPX on OpenStack.

Prerequisites

Ensure that you:

- Add the Intel 82599 NIC (NIC) to the host.

- Download and Install the latest IXGBE driver from Intel.
- Block list the IXGBEVF driver on the host. Add the following entry in the `/etc/modprobe.d/blacklist.conf` file: Block list `ixgbevf`

Note

The `ixgbe` driver version must be minimum 5.0.4.

Enable SR-IOV VFs on the host

Do one of the following steps to enable SR-IOV VFs:

- If you are using a kernel version earlier than 3.8, add the following entry to the `/etc/modprobe.d/ixgbe` file and restart the host: `options ixgbe max_vfs=<number_of_VFs>`
- If you are using kernel 3.8 version or later, create VFs by using the following command:

```
1 echo <number_of_VFs> > /sys/class/net/<device_name>/device/sriov_numvfs
```


Where:

- `number_of_VFs` is the number of Virtual Functions that you want to create.
- `device_name` is the interface name.

Important


While you are creating the SR-IOV VFs, make sure that you do not assign MAC addresses to the VFs.

Here is an example of four VFs being created.

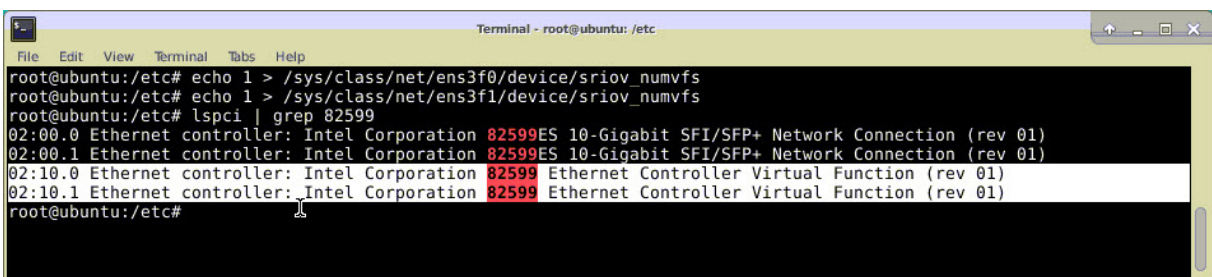

```
Terminal - root@ubuntu: /etc
File Edit View Terminal Tabs Help
root@ubuntu:/etc# echo 4 > /sys/class/net/ens3f0/device/sriov_numvfs
root@ubuntu:/etc# echo 4 > /sys/class/net/ens3f1/device/sriov_numvfs
root@ubuntu:/etc# lspci | grep 82599
02:00.0 Ethernet controller: Intel Corporation 82599ES 10-Gigabit SFI/SFP+ Network Connection (rev 01)
02:00.1 Ethernet controller: Intel Corporation 82599ES 10-Gigabit SFI/SFP+ Network Connection (rev 01)
02:10.0 Ethernet controller: Intel Corporation 82599 Ethernet Controller Virtual Function (rev 01)
02:10.1 Ethernet controller: Intel Corporation 82599 Ethernet Controller Virtual Function (rev 01)
root@ubuntu:/etc#
```

Make the VFs persistent, add the commands that you used to create VFs to the `rc.local` file. Here is an example showing content of `rc.local` file.

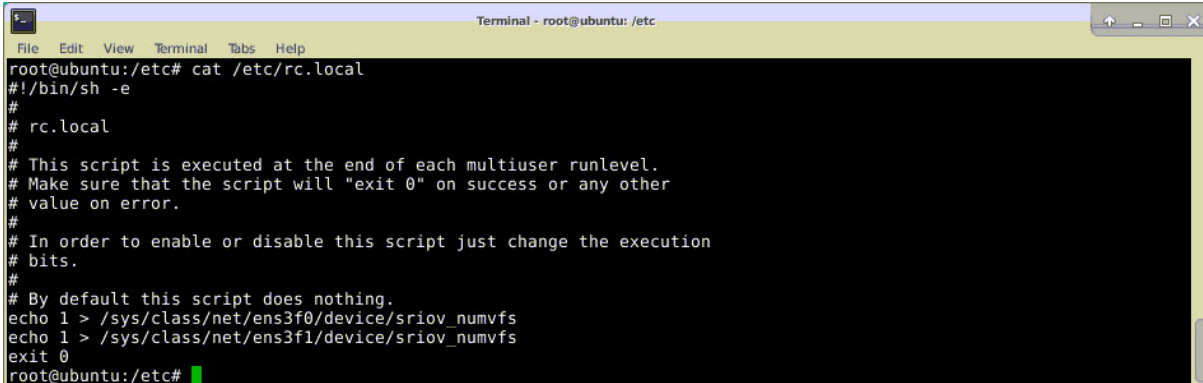A terminal window titled "Terminal - root@ubuntu: /etc" showing the output of the command "cat /etc/rc.local". The output is a shell script for rc.local with several comments and two echo commands. The script is executed at the end of each multiuser runlevel and is intended to be used to enable or disable the script by changing execution bits. The script currently does nothing, but it has two echo commands that output "1" to the files /sys/class/net/ens3f0/device/sriov_numvfs and /sys/class/net/ens3f1/device/sriov_numvfs, followed by an "exit 0" command.

```
root@ubuntu:/etc# cat /etc/rc.local
#!/bin/sh -e
#
# rc.local
#
# This script is executed at the end of each multiuser runlevel.
# Make sure that the script will "exit 0" on success or any other
# value on error.
#
# In order to enable or disable this script just change the execution
# bits.
#
# By default this script does nothing.
echo 1 > /sys/class/net/ens3f0/device/sriov_numvfs
echo 1 > /sys/class/net/ens3f1/device/sriov_numvfs
exit 0
root@ubuntu:/etc#
```

For more information, see this [Intel SR-IOV Configuration Guide](#).

Configure and make the VFs available to OpenStack

Follow the steps given at the link below to configure SR-IOV on OpenStack: <https://wiki.openstack.org/wiki/SR-IOV-Passthrough-For-Networking>.

Provision the NetScaler VPX instance on OpenStack

You can provision a NetScaler VPX instance in an OpenStack environment by using the OpenStack CLI.

Provisioning a VPX instance, optionally involves using data from the config drive. The config drive is a special configuration drive that attaches to the instance when it boots. This configuration drive can be used to pass networking configuration information such as management IP address, network mask, and default gateway and so on to the instance before you configure the network settings for the instance.

When OpenStack provisions a VPX instance, it first detects that the instance is booting in an OpenStack environment, by reading a specific BIOS string (OpenStack Foundation) that indicates OpenStack. For Red Hat Linux distributions, the string is stored in /etc/nova/release. This is a standard mechanism that is available in all OpenStack implementations based on KVM hyper-visor platform. The drive must have a specific OpenStack label. If the config drive is detected, the instance attempts to read the following information from the file name specified in the `nova` boot command. In the procedures below, the file is called “userdata.txt.”

- Management IP address
- Network mask
- Default gateway

Once the parameters are successfully read, they are populated in the NetScaler stack. This helps in managing the instance remotely. If the parameters are not read successfully or the config drive is not

available, the instance transitions to the default behavior, which is:

- The instance attempts to retrieve the IP address information from DHCP.
- If DHCP fails or times-out, the instance comes up with default network configuration (192.168.100.1/16).

Provision the NetScaler VPX instance on OpenStack through CLI

You can provision a VPX instance in an OpenStack environment by using the OpenStack CLI. Here's the summary of the steps to provision a NetScaler VPX instance on OpenStack:

1. Extracting the `.qcow2` file from the `.tgz` file
2. Building an OpenStack image from the `qcow2` image
3. Provisioning a VPX instance

To provision a VPX instance in an OpenStack environment, do the following steps.

1. Extract the `qcow2` file from the `.tgz` file by typing the command:

```
1 tar xvzf <TAR file>
2 tar xvzf NSVPX-KVM-12.0-26.2_nc.tgz
3 NSVPX-KVM.xml
4 NSVPX-KVM-12.0-26.2_nc.qcow2
```

2. Build an OpenStack image using the `qcow2` file extracted in step 1 by typing the following command:

```
1 glance image-create --name="<name of the OpenStack image>" --
  property hw_disk_bus=ide --is-public=true --container-format=
  bare --disk-format=qcow2< <name of the qcow2 file>
2
3 glance image-create --name="NS-VPX-12-0-26-2" --property
  hw_disk_bus=ide --is-public= true --container-format=bare --
  disk-format=qcow2< NSVPX-KVM-12.0-26.2_nc.qcow2
```

The following illustration provides a sample output for the `glance image-create` command.

Property	Value
checksum	735dae4ea6e46e39ed3f0acfba02e755
container_format	bare
created_at	2017-02-16T10:03:29Z
disk_format	qcow2
hw_disk_bus	ide
id	aeea13e9-b49b-411c-ab54-c61820a8e2f3
min_disk	0
min_ram	0
name	NSVPX-KVM-12.0-26.2
owner	06c41a73b32f4b48af55359fd7d3502c
protected	False
size	717946880
status	active
tags	[]
updated_at	2017-02-16T10:03:38Z
virtual_size	None
visibility	private

3. After an OpenStack image is created, provision the NetScaler VPX instance.

```

1 nova boot --image NSVPX-KVM-12.0-26.2 --config-drive=true --
  userdata
2 ./userdata.txt --flavor m1.medium --nic net-id=3b258725-eaae-
3 455e-a5de-371d6d1f349f --nic port-id=218ba819-9f55-4991-adb6-
4 02086a6bdee2 NSVPX-10

```

In the preceding command, `userdata.txt` is the file which contains the details like, IP address, netmask, and default gateway for the VPX instance. The user data file is a user customizable file. `NSVPX-KVM-12.0-26.2` is the name of the virtual appliance that you want to provision. `--nic port-id=218ba819-9f55-4991-adb6-02086a6bdee2` is the OpenStack VF.

The following illustration gives a sample output of the `nova boot` command.

Property	Value
OS-DCF:diskConfig	MANUAL
OS-EXT-AZ:availability_zone	
OS-EXT-SRV-ATTR:host	-
OS-EXT-SRV-ATTR:hypervisor_hostname	-
OS-EXT-SRV-ATTR:instance_name	instance-0000003c
OS-EXT-STS:power_state	0
OS-EXT-STS:task_state	scheduling
OS-EXT-STS:vm_state	building
OS-SRV-USG:launched_at	-
OS-SRV-USG:terminated_at	-
accessIPv4	
accessIPv6	
adminPass	43EjPdM5shLz
config_drive	True
created	2017-02-20T11:53:37Z
flavor	m1.medium (3)
hostId	
id	6b9f6968-aab9-463c-b619-d58c73db3187
image	NSVPX-KVM-12.0-26.2 (a5478b8a-8435-48d1-b4a0-1494e2c8f8b1)
key_name	-
metadata	{}
name	NSVPX-10
os-extended-volumes:volumes_attached	[]
progress	0
security_groups	default
status	BUILD
tenant_id	06c41a73b32f4b48af55359fd7d3502c
updated	2017-02-20T11:53:38Z
user_id	418524f7101b4f0389ecbb36da9916b5

The following illustration shows a sample of the userdata.txt file. The values within the <PropertySection></PropertySection> tags are the values which are user configurable and holds the information like, IP address, netmask, and default gateway.

```

1 <?xml version="1.0" encoding="UTF-8" standalone="no"?>
2 <Environment xmlns:oe="http://schemas.dmtf.org/ovf/environment/1"
3 xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
4 oe:id=""
5 xmlns="http://schemas.dmtf.org/ovf/environment/1">
6 <PlatformSection>
7 <Kind>NOVA</Kind>
8 <Version>2013.1</Version>
9 <Vendor>Openstack</Vendor>
10 <Locale>en</Locale>
11 </PlatformSection>
12 <PropertySection>
13 <Property oe:key="com.citrix.netscaler.ovf.version" oe:value="1.0"
14 />
15 <Property oe:key="com.citrix.netscaler.platform" oe:value="vpx"/>
16 citrix.com 4
17 <Property oe:key="com.citrix.netscaler.orch_env"
18 oe:value="openstack-orch-env"/>
19 <Property oe:key="com.citrix.netscaler.mgmt.ip"
20 oe:value="10.1.0.100"/>
21 <Property oe:key="com.citrix.netscaler.mgmt.netmask"
22 oe:value="255.255.0.0"/>
23 <Property oe:key="com.citrix.netscaler.mgmt.gateway"

```

```

23 oe:value="10.1.0.1"/>
24 </PropertySection>
25 </Environment>

```

Additional supported Configurations: Creating and Deleting VLANs on SR-IOV VFs from the Host

Type the following command to create a VLAN on the SR-IOV VF:

```
ip link show enp8s0f0 vf 6 vlan 10
```

In the preceding command “enp8s0f0” is the name of the physical function.

Example: VLAN 10, created on vf 6

```

4: enp8s0f0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc mq state UP mode DEFAULT qlen 1000
   link/ether 00:1b:21:7b:d7:88 brd ff:ff:ff:ff:ff:ff
   vf 0 MAC 00:00:00:00:00:00, spoof checking on, link-state auto, trust off
   vf 1 MAC 00:00:00:00:00:00, spoof checking on, link-state auto, trust off
   vf 2 MAC 00:00:00:00:00:00, spoof checking on, link-state auto, trust off
   vf 3 MAC fa:16:3e:1e:0b:ee, spoof checking on, link-state auto, trust off
   vf 4 MAC fa:16:3e:0d:05:62, spoof checking on, link-state auto, trust off
   vf 5 MAC 5e:46:0d:79:de:f8, spoof checking on, link-state auto, trust off
   vf 6 MAC fa:16:3e:db:ea:b3, vlan 10, spoof checking on, link-state auto, trust off
   vf 7 MAC 00:00:00:00:00:00, spoof checking on, link-state auto, trust off

```

Type the following command to delete a VLAN on the SR-IOV VF:

```
ip link show enp8s0f0 vf 6 vlan 0
```

Example: VLAN 10, removed from vf 6

```

[root@localhost ~]# ip link show enp8s0f0
4: enp8s0f0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc mq state UP mode DEFAULT qlen 1000
   link/ether 00:1b:21:7b:d7:88 brd ff:ff:ff:ff:ff:ff
   vf 0 MAC 00:00:00:00:00:00, spoof checking on, link-state auto, trust off
   vf 1 MAC 00:00:00:00:00:00, spoof checking on, link-state auto, trust off
   vf 2 MAC 00:00:00:00:00:00, spoof checking on, link-state auto, trust off
   vf 3 MAC fa:16:3e:1e:0b:ee, spoof checking on, link-state auto, trust off
   vf 4 MAC fa:16:3e:0d:05:62, spoof checking on, link-state auto, trust off
   vf 5 MAC 5e:46:0d:79:de:f8, spoof checking on, link-state auto, trust off
   vf 6 MAC fa:16:3e:db:ea:b3, spoof checking on, link-state auto, trust off
   vf 7 MAC 00:00:00:00:00:00, spoof checking on, link-state auto, trust off

```

These steps complete the procedure for deploying a NetScaler VPX instance that uses SRIOV technology, on OpenStack.

Configure a NetScaler VPX instance on KVM to use OVS DPDK-based host interfaces

May 2, 2023

You can configure a NetScaler VPX instance running on KVM (Fedora and RHOS) to use Open vSwitch (OVS) with Data Plane Development Kit (DPDK) for better network performance. This document describes how to configure the NetScaler VPX instance to operate on the `vhost-user` ports exposed by OVS-DPDK on the KVM host.

[OVS](#) is a multilayer virtual switch licensed under the open-source Apache 2.0 license. [DPDK](#) is a set of libraries and drivers for fast packet processing.

The following Fedora, RHOS, OVS, and DPDK versions are qualified for configuring a NetScaler VPX instance:

Fedora	RHOS
Fedora 25	RHOS 7.4
OVS 2.7.0	OVS 2.6.1
DPDK 16.11.12	DPDK 16.11.12

Prerequisites

Before you install DPDK, make sure the host has 1 GB huge pages.

For more information, see this [DPDK system requirements documentation](#). Here is a summary of the steps required to configure a NetScaler VPX instance on KVM to use OVS DPDK-based host interfaces:

- Install DPDK.
- Build and Install OVS.
- Create an OVS bridge.
- Attach a physical interface to the OVS bridge.
- Attach `vhost-user` ports to the OVS data path.
- Provision a KVM-VPX with OVS-DPDK based `vhost-user` ports.

Install DPDK

To install DPDK, follow the instruction given at this [Open vSwitch with DPDK](#) document.

Build and install OVS

Download OVS from the OVS [download page](#). Next, build, and install OVS by using a DPDK datapath. Follow the instructions given in the [Installing Open vSwitch](#) document.

For more detailed information, [DPDK Getting Started Guide for Linux](#).

Create an OVS bridge

Depending on your need, type the Fedora or RHOS command to create an OVS bridge:

Fedora command:

```
1 > $OVS_DIR/utilities/ovs-vsctl add-br ovs-br0 -- set bridge ovs-br0
   datapath_type=netdev
```

RHOS command:

```
1 ovs-vsctl add-br ovs-br0 -- set bridge ovs-br0 datapath_type=netdev
```

Attach the physical interface to the OVS bridge

Bind the ports to DPDK and then attach them to the OVS bridge by typing the following Fedora or RHOS commands:

Fedora command:

```
1 > $OVS_DIR/utilities/ovs-vsctl add-port ovs-br0 dpdk0 -- set Interface
   dpdk0 type=dpdk options:dpdk-devargs=0000:03:00.0
2
3 > $OVS_DIR/utilities/ovs-vsctl add-port ovs-br0 dpdk1 -- set Interface
   dpdk1 type=dpdk options:dpdk-devargs=0000:03:00.1
```

RHOS command:

```
1 ovs-vsctl add-port ovs-br0 dpdk0 -- set Interface dpdk0 type=dpdk
   options:dpdk-devargs=0000:03:00.0
2
3
4 ovs-vsctl add-port ovs-br0 dpdk1 -- set Interface dpdk1 type=dpdk
   options:dpdk-devargs=0000:03:00.1
```

The `dpdk-devargs` shown as part of the options specifies the PCI BDF of the respective physical NIC.

Attach vhost-user ports to the OVS data path

Type the following Fedora or RHOS commands to attach `vhost-user` ports to the OVS data path:

Fedora command:

```
1 > $OVS_DIR/utilities/ovs-vsctl add-port ovs-br0 vhost-user1 -- set
   Interface vhost-user1 type=dpdkvhostuser -- set Interface vhost-
   user1 mtu_request=9000
2
3 > $OVS_DIR/utilities/ovs-vsctl add-port ovs-br0 vhost-user2 -- set
   Interface vhost-user2 type=dpdkvhostuser -- set Interface vhost-
   user2 mtu_request=9000
4
5 chmod g+w /usr/local/var/run/openvswitch/vhost*
```

RHOS command:

```
1 ovs-vsctl add-port ovs-br0 vhost-user1 -- set Interface vhost-user1
   type=dpdkvhostuser -- set Interface vhost-user1 mtu_request=9000
2
3 ovs-vsctl add-port ovs-br0 vhost-user2 -- set Interface vhost-user2
   type=dpdkvhostuser -- set Interface vhost-user2 mtu_request=9000
4
5 chmod g+w /var/run/openvswitch/vhost*
```

Provision a KVM-VPX with OVS-DPDK-based vhost-user ports

You can provision a VPX instance on Fedora KVM with OVS-DPDK-based `vhost-user` ports only from the CLI by using the following QEMU commands:

Fedora command:

```
1 qemu-system-x86_64 -name KVM-VPX -cpu host -enable-kvm -m 4096M \
2
3 -object memory-backend-file,id=mem,size=4096M,mem-path=/dev/hugepages,
   share=on -numa node,memdev=mem \
4
5 -mem-prealloc -smp sockets=1,cores=2 -drive file=<absolute-path-to-disc
   -image-file>,if=none,id=drive-ide0-0-0,format=<disc-image-format> \
6
7 -device ide-drive,bus=ide.0,unit=0,drive=drive-ide0-0-0,id=ide0-0-0,
   bootindex=1 \
8
9 -netdev type=tap,id=hostnet0,script=no,downscript=no,vhost=on \
10
11 -device virtio-net-pci,netdev=hostnet0,id=net0,mac=52:54:00:3c:d1:ae,
   bus=pci.0,addr=0x3 \
12
13 -chardev socket,id=char0,path=</usr/local/var/run/openvswitch/vhost-
   user1> \
```

```
14
15 -netdev type=vhost-user,id=mynet1,chardev=char0,vhostforce -device
    virtio-net-pci,mac=00:00:00:00:00:01,netdev=mynet1,mrg_rxbuf=on \
16
17 -chardev socket,id=char1,path=</usr/local/var/run/openvswitch/vhost-
    user2> \
18
19 -netdev type=vhost-user,id=mynet2,chardev=char1,vhostforce -device
    virtio-net
20
21 pci,mac=00:00:00:00:00:02,netdev=mynet2,mrg_rxbuf=on \
22
23 --nographic
```

For RHOS, use the following sample XML file to provision the NetScaler VPX instance, by using `virsh`

```
1 <domain type='kvm'>
2
3   <name>dppk-vpx1</name>
4
5   <uuid>aedb844b-f6bc-48e6-a4c6-36577f2d68d6</uuid>
6
7   <memory unit='KiB'>16777216</memory>
8
9   <currentMemory unit='KiB'>16777216</currentMemory>
10
11  <memoryBacking>
12
13    <hugepages>
14
15      <page size='1048576' unit='KiB' />
16
17    </hugepages>
18
19  </memoryBacking>
20
21  <vcpu placement='static'>6</vcpu>
22
23  <cputune>
24
25    <shares>4096</shares>
26
27    <vcpupin vcpu='0' cpuset='0' />
28
29    <vcpupin vcpu='1' cpuset='2' />
30
31    <vcpupin vcpu='2' cpuset='4' />
32
33    <vcpupin vcpu='3' cpuset='6' />
34
35    <emulatorpin cpuset='0,2,4,6' />
36
```

```
37 </cputune>
38
39 <numatune>
40   <memory mode='strict' nodeset='0' />
41
42
43 </numatune>
44
45 <resource>
46   <partition>/machine</partition>
47
48
49 </resource>
50
51 <os>
52   <type arch='x86\_64' machine='pc-i440fx-rhel7.0.0'>hvm</type>
53
54   <boot dev='hd' />
55
56
57 </os>
58
59 <features>
60   <acpi />
61
62   <apic />
63
64
65 </features>
66
67 <cpu mode='custom' match='minimum' check='full'>
68   <model fallback='allow'>Haswell-noTSX</model>
69
70   <vendor>Intel</vendor>
71
72   <topology sockets='1' cores='6' threads='1' />
73
74   <feature policy='require' name='ss' />
75
76   <feature policy='require' name='pcid' />
77
78   <feature policy='require' name='hypervisor' />
79
80   <feature policy='require' name='arat' />
81
82
83 <domain type='kvm'>
84   <name>dppk-vpx1</name>
85
86   <uuid>aedb844b-f6bc-48e6-a4c6-36577f2d68d6</uuid>
87
88   <memory unit='KiB'>16777216</memory>
89
```

```
90
91 <currentMemory unit='KiB'>16777216</currentMemory>
92
93 <memoryBacking>
94   <hugepages>
95     <page size='1048576' unit='KiB' />
96   </hugepages>
97 </memoryBacking>
98
99 <vcpu placement='static'>6</vcpu>
100
101 <cputune>
102   <shares>4096</shares>
103   <vcupin vcpu='0' cpuset='0' />
104   <vcupin vcpu='1' cpuset='2' />
105   <vcupin vcpu='2' cpuset='4' />
106   <vcupin vcpu='3' cpuset='6' />
107   <emulatorpin cpuset='0,2,4,6' />
108 </cputune>
109
110 <numatune>
111   <memory mode='strict' nodeset='0' />
112 </numatune>
113
114 <resource>
115   <partition>/machine</partition>
116 </resource>
117
118 <os>
119   <type arch='x86_64' machine='pc-i440fx-rhel7.0.0'>hvm</type>
120   <boot dev='hd' />
121 </os>
122
123 <features>
124
```

```
143     <acpi/>
144
145     <apic/>
146
147 </features>
148
149 <cpu mode='custom' match='minimum' check='full'>
150
151     <model fallback='allow'>Haswell-noTSX</model>
152
153     <vendor>Intel</vendor>
154
155     <topology sockets='1' cores='6' threads='1'/>
156
157     <feature policy='require' name='ss'/>
158
159     <feature policy='require' name='pcid'/>
160
161     <feature policy='require' name='hypervisor'/>
162
163     <feature policy='require' name='arat'/>
164
165     <feature policy='require' name='tsc\_adjust'/>
166
167     <feature policy='require' name='xsaveopt'/>
168
169     <feature policy='require' name='pdpe1gb'/>
170
171     <numa>
172
173         <cell id='0' cpus='0-5' memory='16777216' unit='KiB' memAccess='
174             shared'/>
175
176     </numa>
177 </cpu>
178
179 <clock offset='utc'/>
180
181 <on\_poweroff>destroy</on\_poweroff>
182
183 <on\_reboot>restart</on\_reboot>
184
185 <on\_crash>destroy</on\_crash>
186
187 <devices>
188
189     <emulator>/usr/libexec/qemu-kvm</emulator>
190
191     <disk type='file' device='disk'>
192
193         <driver name='qemu' type='qcow2' cache='none'/>
194
```

```
195     <source file='/home/NSVPX-KVM-12.0-52.18\_nc.qcow2' />
196
197     <target dev='vda' bus='virtio' />
198
199     <address type='pci' domain='0x0000' bus='0x00' slot='0x07'
200         function='0x0' />
201 </disk>
202
203 <controller type='ide' index='0'>
204
205     <address type='pci' domain='0x0000' bus='0x00' slot='0x01'
206         function='0x1' />
207 </controller>
208
209 <controller type='usb' index='0' model='piix3-uhci'>
210
211     <address type='pci' domain='0x0000' bus='0x00' slot='0x01'
212         function='0x2' />
213 </controller>
214
215 <controller type='pci' index='0' model='pci-root' />
216
217 <interface type='direct'>
218
219     <mac address='52:54:00:bb:ac:05' />
220
221     <source dev='enp129s0f0' mode='bridge' />
222
223     <model type='virtio' />
224
225     <address type='pci' domain='0x0000' bus='0x00' slot='0x03'
226         function='0x0' />
227 </interface>
228
229 <interface type='vhostuser'>
230
231     <mac address='52:54:00:55:55:56' />
232
233     <source type='unix' path='/var/run/openvswitch/vhost-user1' mode=
234         'client' />
235
236     <model type='virtio' />
237
238     <address type='pci' domain='0x0000' bus='0x00' slot='0x04'
239         function='0x0' />
240 </interface>
241 <interface type='vhostuser'>
```

```
242
243     <mac address='52:54:00:2a:32:64' />
244
245     <source type='unix' path='/var/run/openvswitch/vhost-user2' mode=
      'client' />
246
247     <model type='virtio' />
248
249     <address type='pci' domain='0x0000' bus='0x00' slot='0x05'
      function='0x0' />
250
251 </interface>
252
253 <interface type='vhostuser'>
254
255     <mac address='52:54:00:2a:32:74' />
256
257     <source type='unix' path='/var/run/openvswitch/vhost-user3' mode=
      'client' />
258
259     <model type='virtio' />
260
261     <address type='pci' domain='0x0000' bus='0x00' slot='0x06'
      function='0x0' />
262
263 </interface>
264
265 <interface type='vhostuser'>
266
267     <mac address='52:54:00:2a:32:84' />
268
269     <source type='unix' path='/var/run/openvswitch/vhost-user4' mode=
      'client' />
270
271     <model type='virtio' />
272
273     <address type='pci' domain='0x0000' bus='0x00' slot='0x09'
      function='0x0' />
274
275 </interface>
276
277 <serial type='pty'>
278     <target port='0' />
279
280 </serial>
281
282 <console type='pty'>
283     <target type='serial' port='0' />
284
285 </console>
286
287
288
```



```
289     <input type='mouse' bus='ps2' />
290
291     <input type='keyboard' bus='ps2' />
292
293     <graphics type='vnc' port='-1' autoport='yes'>
294         <listen type='address' />
295     </graphics>
296
297     <video>
298         <model type='cirrus' vram='16384' heads='1' primary='yes' />
299         <address type='pci' domain='0x0000' bus='0x00' slot='0x02'
300             function='0x0' />
301     </video>
302
303     <memballoon model='virtio'>
304         <address type='pci' domain='0x0000' bus='0x00' slot='0x08'
305             function='0x0' />
306     </memballoon>
307
308 </devices>
309
310 </domain
```

Points to note

In the XML file, the `hugepage` size must be 1 GB, as shown in the sample file.

```
1 <memoryBacking>
2
3     <hugepages>
4         <page size='1048576' unit='KiB' />
5     </hugepages>
```

Also, in the sample file `vhost-user1` is the `vhost` user port bound to `ovs-br0`.

```
1 <interface type='vhostuser'>
2
3     <mac address='52:54:00:55:55:56' />
4
5     <source type='unix' path='/var/run/openvswitch/vhost-user1' mode=
6         'client' />
```

```
7     <model type='virtio' />
8
9     <address type='pci' domain='0x0000' bus='0x00' slot='0x04'
      function='0x0' />
10
11    </interface>
```

To bring up the NetScaler VPX instance, start using the `virsh` command.

Apply NetScaler VPX configurations at the first boot of the NetScaler appliance on the KVM hypervisor

May 2, 2023

You can apply the NetScaler VPX configurations on the KVM hypervisor during the first boot of the NetScaler appliance. Therefore, a customer setup on a VPX instance can be configured in much lesser time.

For more information about Preboot user data and its format, see [Apply NetScaler VPX configurations at the first boot of the NetScaler appliance in cloud](#).

Note:

To bootstrap using preboot user data in KVM hypervisor, the default gateway configuration must be passed in `<NS-CONFIG>` section. For more information on the content of the `<NS-CONFIG>` tag, see the following Sample `<NS-CONFIG>` section.

Sample `<NS-CONFIG>` section:

```
1 <NS-PRE-BOOT-CONFIG>
2
3   <NS-CONFIG>
4     add route 0.0.0.0 0.0.0.0 10.102.38.1
5   </NS-CONFIG>
6
7   <NS-BOOTSTRAP>
8     <SKIP-DEFAULT-BOOTSTRAP>YES</SKIP-DEFAULT-BOOTSTRAP>
9     <NEW-BOOTSTRAP-SEQUENCE>YES</NEW-BOOTSTRAP-SEQUENCE>
10
11   <MGMT-INTERFACE-CONFIG>
12     <INTERFACE-NUM> eth0 </INTERFACE-NUM>
13     <IP> 10.102.38.216 </IP>
14     <SUBNET-MASK> 255.255.255.0 </SUBNET-MASK>
15   </MGMT-INTERFACE-CONFIG>
16 </NS-BOOTSTRAP>
17
18 </NS-PRE-BOOT-CONFIG>
```

How to provide preboot user data on KVM hypervisor

You can provide preboot user data on KVM hypervisor through an ISO file, which is attached using a CDROM device.

Provide user data using CDROM ISO file

You can use Virtual Machine Manager (VMM) to inject user data into the Virtual Machine (VM) as an ISO image using the CDROM device. KVM supports CD-ROMs in VM Guest either by directly accessing a physical drive on the VM host server or by accessing ISO images.

The following steps enable you to provide user data using the CDROM ISO file:

1. Create a file with file name `userdata` that contains the preboot user data content.

Note: File name must be strictly used as `userdata`.

2. Store the `userdata` file in a folder, and build an ISO image using the folder.

You can build an ISO image with `userdata` file by the following two methods:

- Using any image processing tool such as PowerISO.
- Using `mkisofs` command in Linux.

The following sample configuration shows how to generate an ISO image using the `mkisofs` command in Linux.

```
1 root@ubuntu:~/sai/19oct# ls -lh
2 total 4.0K
3 -rw-r--r-- 1 root root 1.1K Oct 19 16:25 userdata
4 root@ubuntu:~/sai/19oct#
5 root@ubuntu:~/sai/19oct# mkisofs -o kvm-userdata.iso userdata
6 I: -input-charset not specified, using utf-8 (detected in locale
  settings)
7 Total translation table size: 0
8 Total rockridge attributes bytes: 0
9 Total directory bytes: 0
10 Path table size(bytes): 10
11 Max brk space used 0
12 175 extents written (0 MB)
13 root@ubuntu:~/sai/19oct#
14 root@ubuntu:~/sai/19oct# ls -lh
15 total 356K
16 -rw-r--r-- 1 root root 350K Oct 19 16:25 kvm-userdata.iso
17 -rw-r--r-- 1 root root 1.1K Oct 19 16:25 userdata
```

3. Provision the NetScaler VPX instance using the standard deployment process to create the VM. But do not power on the VM automatically.

4. Add a CD-ROM device with Virtual Machine Manager using the following steps:
 - a) Double-click a VM Guest entry in the Virtual Machine Manager to open its console, and switch to the Details view with **View > Details**.
 - b) Click **Add Hardware > Storage > Device type > CDROM device**.
 - c) Click **Manage** and select the correct ISO file, and click **Finish**. A new CDROM under **Resources** on your NetScaler VPX instance is created.
5. Power on the VM.

NetScaler VPX on AWS

October 28, 2024

You can launch a NetScaler VPX instance on Amazon Web Services (AWS). The NetScaler VPX appliance is available as an Amazon Machine Image (AMI) in AWS marketplace. A NetScaler VPX instance on AWS enables you to use AWS cloud computing capabilities and use NetScaler load balancing and traffic management features for their business needs. The VPX instance supports all the traffic management features of a physical NetScaler appliance, and it can be deployed as standalone instances or in HA pairs. For more information on VPX features, see the [VPX data sheet](#).

Getting started

Before you get started with your VPX deployment, you must be familiar with the following information:

- [AWS terminology](#)
- [AWS-VPX support matrix](#)
- [Limitations and usage guidelines](#)
- [Prerequisites](#)
- [How a NetScaler VPX instance on AWS works](#)

Deploy a NetScaler VPX instance on AWS

In AWS, the following deployment types are supported for VPX instances:

- [Standalone](#)
- [High availability \(Active-Passive\)](#)
 - [High availability within same zone](#)

- [High availability across different zones using Elastic IP](#)
- [High availability across different zones using Private IP](#)
- [Active-Active GSLB](#)
- [Autoscaling \(Active-Active\) using ADM](#)

Hybrid Deployments

- [Deploy NetScaler in AWS Outpost](#)
- [Deploy NetScaler in VMC in AWS](#)

Licensing

A NetScaler VPX instance on AWS requires a license. The following licensing options are available for NetScaler VPX instances running on AWS:

- [Free \(unlimited\)](#)
- [Hourly](#)
- [Annual](#)
- [BYOL](#)
- [Free Trial \(all NetScaler VPX-AWS subscription offerings for 21 days free in AWS marketplace.\)](#)

Automation

- [NetScaler Console: Smart Deployment](#)
- [AWS Quick Starts: NetScaler VPX for Web Applications on AWS](#)
- [GitHub CFTs: NetScaler templates and scripts for AWS deployment](#)
- [GitHub Ansible: NetScaler templates and scripts for AWS deployment](#)
- [GitHub Terraform: NetScaler templates and scripts for AWS deployment](#)
- [AWS Pattern Library \(PL\): NetScaler VPX](#)

Blogs

- [How NetScaler on AWS Helps Customers Deliver Applications Securely](#)
- [Application delivery in hybrid cloud with NetScaler and AWS](#)
- [Citrix is an AWS Networking Competency Partner](#)

- [NetScaler: Always ready for public clouds](#)
- [Scale out or scale in with ease in public clouds through NetScaler](#)
- [Citrix expands ADC deployment choice with AWS Outposts](#)
- [Using NetScaler with Amazon VPC ingress routing](#)
- [Citrix delivers choice, performance, and simplified deployment in AWS](#)
- [The security of NetScaler Web App Firewall –now on the AWS Marketplace](#)
- [How Aria Systems uses NetScaler Web App Firewall on AWS](#)

Videos

- [Simplifying public cloud NetScaler deployments through ADM](#)
- [Provisioning and configuring NetScaler VPX in AWS using ready-to-use terraform scripts](#)
- [Deploy NetScaler HA in AWS using CloudFormation Template](#)
- [Deploy NetScaler HA across Availability Zones using AWS QuickStart](#)
- [NetScaler Autoscale using ADM](#)

Customer case studies

- [Technology Solution - Xenit AB](#)
- [A better way to do business with Citrix and AWS cloud –Aria](#)
- [Discover the NetScaler and AWS advantage](#)
- [Rain for Rent - Customer story](#)

Solutions

- [Deploy digital advertising platform on AWS with NetScaler](#)
- [Enhancing Clickstream analytics in AWS using NetScaler](#)

Support

- [Open a Support case](#)
- For NetScaler subscription offering, see [Troubleshoot a VPX instance on AWS](#). To file a support case, find your AWS account number and support PIN code, and call NetScaler support.

- For NetScaler Customer Licensed offering or BYOL, ensure that you have the valid support and maintenance agreement. If you do not have an agreement, contact your NetScaler representative.

Additional References

- [AWS On-Demand Webinar - NetScaler on AWS](#)
- [NetScaler on AWS](#)
- [NetScaler VPX data sheet](#)
- [NetScaler in AWS Marketplace](#)
- [NetScaler is part of AWS networking partner solutions \(load balancers\)](#)
- [AWS FAQs](#)

AWS terminology

February 24, 2021

This section describes the list of commonly used AWS terms and phrases. For more information, see [AWS Glossary](#).

Term	Definition
Amazon Machine Image (AMI)	A machine image, which provides the information required to launch an instance, which is a virtual server in the cloud.
Elastic Block Store	Provides persistent block storage volumes for use with Amazon EC2 instances in the AWS Cloud.
Simple Storage Service (S3)	Storage for the Internet. It is designed to make web-scale computing easier for developers.
Elastic Compute Cloud (EC2)	A web service that provides secure, resizable compute capacity in the cloud. It is designed to make web-scale cloud computing easier for developers.

Term	Definition
Elastic Load Balancing (ELB)	Distributes incoming application traffic across multiple EC2 instances, in multiple Availability Zones. This increases the fault tolerance of your applications.
Elastic network interface (ENI)	A virtual network interface that you can attach to an instance in a Virtual Private Cloud (VPC).
Elastic IP (EIP) address	A static, public IPv4 address that you have allocated in Amazon EC2 or Amazon VPC and then attached to an instance. Elastic IP addresses are associated with your account, not a specific instance. They are elastic because you can easily allocate, attach, detach, and free them as your needs change.
Instance type	Amazon EC2 provides a wide selection of instance types optimized to fit different use cases. Instance types comprise varying combinations of CPU, memory, storage, and networking capacity and give you the flexibility to choose the appropriate mix of resources for your applications.
Identity and Access Management (IAM)	An AWS identity with permission policies that determine what the identity can and cannot do in AWS. You can use an IAM role to enable applications running on an EC2 instance to securely access your AWS resources. IAM role is required for deploying VPX instances in a high-availability setup.
Internet Gateway	Connects a network to the Internet. You can route traffic for IP addresses outside your VPC to the Internet gateway.
Key pair	A set of security credentials that you use to prove your identity electronically. A key pair consists of a private key and a public key.

Term	Definition
Route tables	A set of routing rules that controls the traffic leaving any subnet that is associated with the route table. You can associate multiple subnets with a single route table, but a subnet can be associated with only one route table at a time.
Security groups	A named set of allowed inbound network connections for an instance.
Subnets	A segment of the IP address range of a VPC that EC2 instances can be attached to. You can create subnets to group instances according to security and operational needs.
Virtual Private Cloud (VPC)	A web service for provisioning a logically isolated section of the AWS cloud where you can launch AWS resources in a virtual network that you define.
Auto Scaling	A web service to launch or terminate Amazon EC2 instances automatically based on user-defined policies, schedules, and health checks.
CloudFormation	A service for writing or changing templates that create and delete related AWS resources together as a unit.

AWS-VPX support matrix

October 24, 2024

The following tables list the supported VPX model and AWS regions, instance types, and services.

Table 1: Supported VPX models on AWS

Supported VPX model

NetScaler VPX Advanced - 200 Mbps

NetScaler VPX Premium - 1 Gbps

NetScaler 14.1

Supported VPX model

NetScaler VPX Premium - 5 Gbps

NetScaler VPX Express - 20 Mbps

NetScaler VPX - Customer Licensed

NetScaler VPX FIPS - Customer Licensed

NetScaler VPX FIPS ENA - Customer Licensed

Table 2: Supported AWS regions

Supported AWS regions

US West (Oregon)

US West (N. California)

US East (Ohio)

US East (N. Virginia)

Asia Pacific (Mumbai)

Asia Pacific (Seoul)

Asia Pacific (Singapore)

Asia Pacific (Sydney)

Asia Pacific (Tokyo)

Asia Pacific (Hong Kong)

Asia Pacific (Osaka)

Asia Pacific (Jakarta)

Asia Pacific (Hyderabad)

Canada (Central)

EU (Frankfurt)

EU (Ireland)

EU (London)

EU (Paris)

EU (Milan)

South America (São Paulo)

Supported AWS regions

AWS GovCloud (US-East)

AWS GovCloud (US-West)

AWS Top Secret (C2S)

Middle East (Bahrain)

Africa (Cape Town)

C2S

Note:

For AWS Hong Kong region, NetScaler VPX support is available only with BYOL licenses.

Table 3: Supported AWS instance types

Supported AWS instance types

c4.large, c4.xlarge, c4.2xlarge, c4.4xlarge, c4.8xlarge

c5.large, c5.xlarge, c5.2xlarge, c5.4xlarge, c5.9xlarge, c5.18xlarge, c5.24xlarge

c5n.large, c5n.xlarge, c5n.2xlarge, c5n.4xlarge, c5n.9xlarge, c5n.18xlarge

d2.xlarge, d2.2xlarge, d2.4xlarge, d2.8xlarge

m3.large, m3.xlarge, m3.2xlarge

m4.large, m4.xlarge, m4.2xlarge, m4.4xlarge, m4.10xlarge, m4.16xlarge

m5.large, m5.xlarge, m5.2xlarge, m5.4xlarge, m5.8xlarge, m5.12xlarge, m5.16xlarge, m5.24xlarge

m5a.large, m5a.xlarge, m5a.2xlarge, m5a.4xlarge, m5a.8xlarge, m5a.12xlarge, m5a.16xlarge, m5a.24xlarge

m5n.large, m5n.xlarge, m5n.2xlarge, m5n.4xlarge, m5n.8xlarge, m5n.12xlarge, m5n.16xlarge, m5n.24xlarge

m6i.large, m6i.xlarge, m6i.2xlarge, m6i.4xlarge, m6i.8xlarge, m6i.12xlarge, m6i.16xlarge, m6i.24xlarge, m6i.32xlarge

r7iz.large, r7iz.xlarge, r7iz.2xlarge, r7iz.4xlarge, r7iz.8xlarge, r7iz.12xlarge, r7iz.16xlarge, r7iz.32xlarge

t2.medium, t2.large, t2.xlarge, t2.2xlarge

t3a.medium, t3a.large, t3a.xlarge, t3a.2xlarge

Table 4: Supported AWS Services

Supported AWS services

EC2: Launches ADC instances.

Lambda: Invokes NetScaler VPX NITRO APIs during provisioning of NetScaler VPX instances from CFT.

VPC and VPC ingress routing: VPC creates isolated networks in which ADC can be launched. VPC ingress routing

Route53: Distributes traffic across all the NetScaler VPX nodes in the NetScaler Autoscale solution.

ELB: Distributes traffic across all the NetScaler VPX nodes in the NetScaler Autoscale solution.

Cloudwatch: Monitors performance and system parameters for NetScaler VPX instance.

AWS Autoscaling: Used for back-end server autoscaling.

Cloud formation: CloudFormation templates are used to deploy NetScaler VPX instances.

Simple Queue Service (SQS): Monitors scale up and scale down events in back-end autoscaling.

Simple Notification Service (SNS): Monitors scale up and scale down events in back-end autoscaling.

Identity and Access Management (IAM): Provides access to AWS services and resources.

AWS Outposts: Provisions NetScaler VPX instances in AWS Outposts.

NetScaler recommends the following AWS instance types:

- M5 and C5n series for marketplace editions or bandwidth-based pool licensing.
- C5n series for vCPU-based pool licensing.

VPX offering in AWS marketplace	AWS instance recommendation
VPX Express 20, VPX 200	M5.xLarge
VPX 1G, VPX 5G	M5.2xLarge

NetScaler recommends the following AWS instance types based on throughput.

VPX with Pooled licensing (Bandwidth licenses)	AWS instance recommendation
VPX 8G	C5n.4xLarge
VPX 10G, VPX 15G, VPX 25G	C5n.9xLarge

Note:

The VPX 25G offering doesn't give the desired 25G throughput in AWS but can give a higher SSL transactions rate.

To achieve throughput more than 5G, do the following:

- Choose **NetScaler VPX - Customer Licensed (BYOL)** offering in the AWS marketplace.
- Select **Pooled Licensing (Bandwidth licenses)** in NetScaler GUI or CLI.

To determine your instance based on different metrics such as packets per second, SSL transactions rate, reach out to your NetScaler contact for guidance. For vCPU based Pool licensing and sizing guidance, reach out to NetScaler support.

Limitations and usage guidelines

March 28, 2024

The following limitations and usage guidelines apply when deploying a NetScaler VPX instance on AWS:

- Before you start, read the AWS terminology section in [Deploy a NetScaler VPX instance on AWS](#).
- The clustering feature is not supported for VPX.
- For the high availability setup to work effectively, associate a dedicated NAT device to management Interface or associate EIP to NSIP. For more information on NAT, in the AWS documentation, see [NAT Instances](#).
- Data traffic and management traffic must be segregated with ENIs belonging to different subnets.
- Only the NSIP address must be present on the management ENI.
- If a NAT instance is used for security instead of assigning an EIP to the NSIP, appropriate VPC level routing changes are required. For instructions on making VPC level routing changes, in the AWS documentation, see [Scenario 2: VPC with Public and Private Subnets](#).
- A VPX instance can be moved from one EC2 instance type to another (for example, from m3.large to an m3.xlarge).
- For storage options for VPX on AWS, Citrix recommends EBS, because it is durable and the data is available even after it is detached from the instance.

- Dynamic addition of ENIs to VPX is not supported. Restart the VPX instance to apply the update. Citrix recommends you to stop the standalone or HA instance, attach the new ENI, and then restart the instance.
- You can assign multiple IP addresses to an ENI. The maximum number of IP addresses per ENI is determined by the EC2 instance type, see the section “IP Addresses Per Network Interface Per Instance Type” in [Elastic Network Interfaces](#). You must allocate the IP addresses in AWS before you assign them to ENIs. For more information, see [Elastic Network Interfaces](#).
- Citrix recommends that you avoid using the enable and disable interface commands on NetScaler VPX interfaces.
- The NetScaler `set ha node \<NODE_ID\> -haStatus STAYPRIMARY` and `set ha node \<NODE_ID\> -haStatus STAYSECONDARY` commands are disabled by default.
- IPv6 is not supported for VPX.
- Due to AWS limitations, these features are not supported:
 - Gratuitous ARP (GARP)
 - L2 mode
 - Tagged VLAN
 - Dynamic Routing
 - virtual MAC
- For RNAT to work, ensure **Source/Destination Check** is disabled. For more information, see “Changing the Source/Destination Checking” in [Elastic Network Interfaces](#).
- In a NetScaler VPX deployment on AWS, in some AWS regions, the AWS infrastructure might not be able to resolve AWS API calls. This happens if the API calls are issued through a nonmanagement interface on the NetScaler VPX instance.
As a workaround, restrict the API calls to the management interface only. To do that, create an NSVLAN on the VPX instance and bind the management interface to the NSVLAN by using the appropriate command.
For example:

```
set ns config -nsvlan <vlan id> -ifnum 1/1 -tagged NO
save config
```

Restart the VPX instance at the prompt. For more information about configuring `nsvlan`, see [Configuring NSVLAN](#).
- In the AWS console, the vCPU usage shown for a VPX instance under the **Monitoring** tab might be high (up to 100 percent), even when the actual usage is much lower. To see the actual vCPU usage, navigate to **View all CloudWatch metrics**. For more information, see [Monitor your instances using Amazon CloudWatch](#).

- Hot adding is supported only for PV and SRIOV interfaces with NetScaler on AWS. VPX instances with ENA interfaces do not support hot-plug, and the behavior of the instances can be unpredictable if hot-plugging is attempted.
- Hot removing either through the AWS Web console or AWS CLI interface is not supported with the PV, SRIOV, and ENA interfaces for NetScaler. The behavior of the instances can be unpredictable if hot-removal is attempted.

Prerequisites

August 11, 2023

Before attempting to create a VPX instance in AWS, ensure you have the following:

- **An AWS account:** to launch a NetScaler VPX AMI in an AWS Virtual Private Cloud (VPC). You can create an AWS account for free at www.aws.amazon.com.
- **An AWS Identity and Access Management (IAM) user account:** to securely control access to AWS services and resources for your users. For more information about how to create an IAM user account, see [Creating IAM Users \(Console\)](#). An IAM role is mandatory for both standalone and high availability deployments.

The IAM role associated with your AWS account must have the following IAM permissions for various scenarios.

HA pair with IPv4 addresses in the same AWS zone:

```
1 "ec2:DescribeInstances",
2 "ec2:AssignPrivateIpAddresses",
3 "iam:SimulatePrincipalPolicy",
4 "iam:GetRole",
5 "ec2:CreateTags"
```

HA pair with IPv6 addresses in the same AWS zone:

```
1 "ec2:DescribeInstances",
2 "ec2:AssignIpv6Addresses",
3 "ec2:UnassignIpv6Addresses",
4 "iam:SimulatePrincipalPolicy",
5 "iam:GetRole",
6 "ec2:CreateTags"
```

HA pair with both IPv4 and IPv6 addresses in the same AWS zone:

```
1 "ec2:DescribeInstances",
2 "ec2:AssignPrivateIpAddresses",
3 "ec2:AssignIpv6Addresses",
```

```
4 "ec2:UnassignIpv6Addresses",
5 "iam:SimulatePrincipalPolicy",
6 "iam:GetRole",
7 "ec2:CreateTags"
```

HA pair with elastic IP addresses across different AWS zones:

```
1 "ec2:DescribeInstances",
2 "ec2:DescribeAddresses",
3 "ec2:AssociateAddress",
4 "ec2:DisassociateAddress",
5 "iam:SimulatePrincipalPolicy",
6 "iam:GetRole",
7 "ec2:CreateTags"
```

HA pair with private IP addresses across different AWS zones:

```
1 "ec2:DescribeInstances",
2 "ec2:DescribeRouteTables",
3 "ec2:DeleteRoute",
4 "ec2:CreateRoute",
5 "ec2:ModifyNetworkInterfaceAttribute",
6 "iam:SimulatePrincipalPolicy",
7 "iam:GetRole",
8 "ec2:CreateTags"
```

HA pair with both private IP and elastic IP addresses across different AWS zones:

```
1 "ec2:DescribeInstances",
2 "ec2:DescribeAddresses",
3 "ec2:AssociateAddress",
4 "ec2:DisassociateAddress",
5 "ec2:DescribeRouteTables",
6 "ec2:DeleteRoute",
7 "ec2:CreateRoute",
8 "ec2:ModifyNetworkInterfaceAttribute",
9 "iam:SimulatePrincipalPolicy",
10 "iam:GetRole",
11 "ec2:CreateTags"
```

AWS backend autoscaling:

```
1 "ec2:DescribeInstances",
2 "autoscaling:*",
3 "sns:CreateTopic",
4 "sns:DeleteTopic",
5 "sns:ListTopics",
6 "sns:Subscribe",
7 "sqs:CreateQueue",
8 "sqs:ListQueues",
9 "sqs:DeleteMessage",
10 "sqs:GetQueueAttributes",
11 "sqs:SetQueueAttributes",
```



```
12 "iam:SimulatePrincipalPolicy",  
13 "iam:GetRole",  
14 "ec2:CreateTags"
```

Note:

- If you use any combination of the preceding features, use the combination of IAM permissions for each of the features.
 - If you use the Citrix CloudFormation template, the IAM role is automatically created. The template does not allow selecting an already created IAM role.
 - When you log on to the VPX instance through the GUI, a prompt to configure the required privileges for the IAM role appears. Ignore the prompt if you've already configured the privileges.
- **AWS CLI:** To use all the functionality provided by the AWS Management Console from your terminal program. For more information, see the [AWS CLI user guide](#). You also need the AWS CLI to change the network interface type to SR-IOV.
 - **Elastic Network Adapter (ENA):** For ENA driver-enabled instance type, for example M5, C5 instances, the firmware version must be 13.0 and above.
 - You must configure Instance Metadata Service (IMDS) on the EC2 instance for NetScaler VPX. IMDSv1 and IMDSv2 are two modes available for accessing instance metadata from a running AWS EC2 instance. IMDSv2 is more secure than IMDSv1. You can configure the instance either to use both methods (the default option) or only the IMDSv2 mode (by disabling IMDSv1). Citrix ADC VPX supports IMDSv2 only mode from NetScaler VPX release 13.1.48.x onwards.

Configure AWS IAM roles on NetScaler VPX instance

May 2, 2023

Applications that run on an Amazon EC2 instance must include AWS credentials in the AWS API requests. You can store AWS credentials directly within the Amazon EC2 instance and allow applications in that instance to use those credentials. But you then have to manage the credentials and ensure that they securely pass the credentials to each instance and update each Amazon EC2 instance when it's time to rotate the credentials. That's a lot of additional work.

Instead, you can and must use an Identity and Access Management (IAM) role to manage temporary credentials for applications that run on an Amazon EC2 instance. When you use a role, you don't have to distribute long-term credentials (such as a user name and password or access keys) to an Amazon EC2 instance. Instead, the role provides temporary permissions that applications can use when they make calls to other AWS resources. When you launch an Amazon EC2 instance, you specify an IAM role

to associate with the instance. Applications that run on the instance can then use the role-supplied temporary credentials to sign API requests.

The IAM role associated with your AWS account must have the following IAM permissions for various scenarios.

HA pair with IPv4 addresses in the same AWS zone:

```
1 "ec2:DescribeInstances",
2 "ec2:AssignPrivateIpAddresses",
3 "iam:SimulatePrincipalPolicy",
4 "iam:GetRole"
```

HA pair with IPv6 addresses in the same AWS zone:

```
1 "ec2:DescribeInstances",
2 "ec2:AssignIpv6Addresses",
3 "ec2:UnassignIpv6Addresses",
4 "iam:SimulatePrincipalPolicy",
5 "iam:GetRole"
```

HA pair with both IPv4 and IPv6 addresses in the same AWS zone:

```
1 "ec2:DescribeInstances",
2 "ec2:AssignPrivateIpAddresses",
3 "ec2:AssignIpv6Addresses",
4 "ec2:UnassignIpv6Addresses",
5 "iam:SimulatePrincipalPolicy",
6 "iam:GetRole"
```

HA pair with elastic IP addresses across different AWS zones:

```
1 "ec2:DescribeInstances",
2 "ec2:DescribeAddresses",
3 "ec2:AssociateAddress",
4 "ec2:DisassociateAddress",
5 "iam:SimulatePrincipalPolicy",
6 "iam:GetRole"
```

HA pair with private IP addresses across different AWS zones:

```
1 "ec2:DescribeInstances",
2 "ec2:DescribeRouteTables",
3 "ec2>DeleteRoute",
4 "ec2>CreateRoute",
5 "ec2:ModifyNetworkInterfaceAttribute",
6 "iam:SimulatePrincipalPolicy",
7 "iam:GetRole"
```

HA pair with both private IP and elastic IP addresses across different AWS zones:

```
1 "ec2:DescribeInstances",
2 "ec2:DescribeAddresses",
```

```
3 "ec2:AssociateAddress",
4 "ec2:DisassociateAddress",
5 "ec2:DescribeRouteTables",
6 "ec2>DeleteRoute",
7 "ec2:CreateRoute",
8 "ec2:ModifyNetworkInterfaceAttribute",
9 "iam:SimulatePrincipalPolicy",
10 "iam:GetRole"
```

AWS backend autoscaling:

```
1 "ec2:DescribeInstances",
2 "autoscaling:*",
3 "sns:CreateTopic",
4 "sns>DeleteTopic",
5 "sns:ListTopics",
6 "sns:Subscribe",
7 "sqs:CreateQueue",
8 "sqs:ListQueues",
9 "sqs>DeleteMessage",
10 "sqs:GetQueueAttributes",
11 "sqs:SetQueueAttributes",
12 "iam:SimulatePrincipalPolicy",
13 "iam:GetRole"
```

Points to note:

- If you use any combination of the preceding features, use the combination of IAM permissions for each of the features.
- If you use the Citrix CloudFormation template, the IAM role is automatically created. The template does not allow selecting an already created IAM role.
- When you log on to the VPX instance through the GUI, a prompt to configure the required privileges for the IAM role appears. Ignore the prompt if you've already configured the privileges.
- An IAM role is mandatory for both standalone and high availability deployments.


Create an IAM role

This procedure describes how to create an IAM role for the AWS back-end autoscaling feature.


Note:

You can follow the same procedure to create any IAM roles corresponding to other features.

1. Log on to the AWS Management Console for EC2.
2. Go to EC2 instance page, and select your ADC instance.

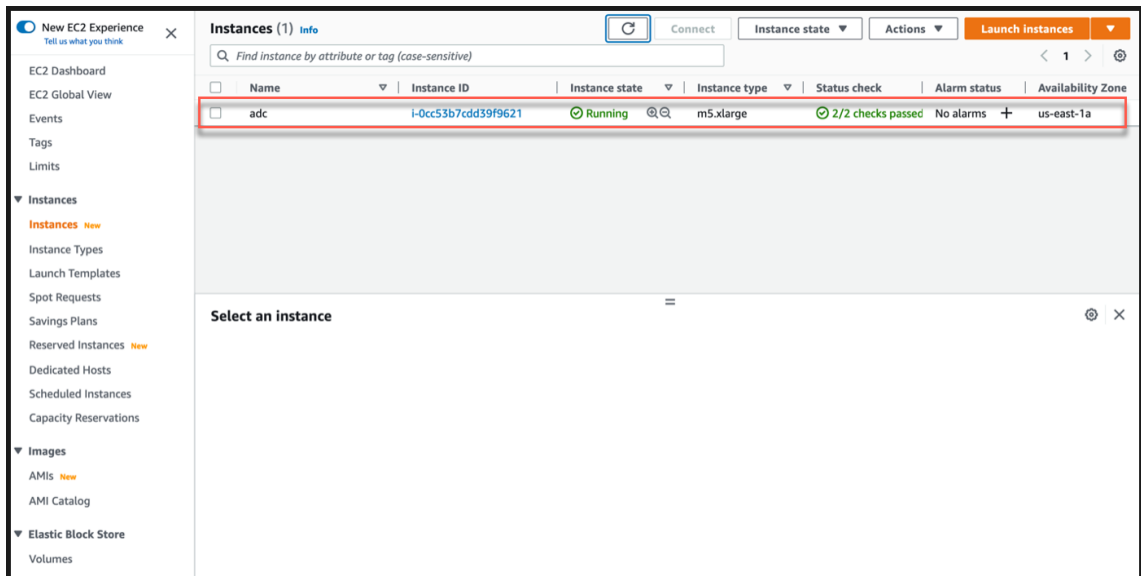


3. Navigate to **Actions > Security > Modify IAM role**.

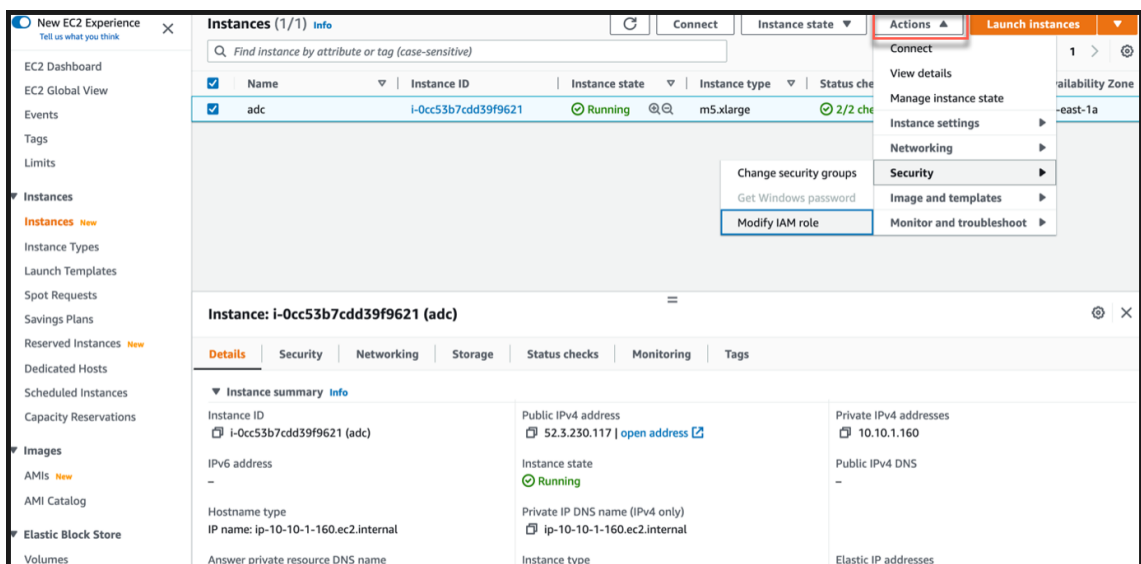


4. In the **Modify IAM role** page, you can either choose an existing IAM role or create a IAM role.

5. To create a IAM role, follow these steps:


a) In the **Modify IAM role** page, click **Create new IAM role**.

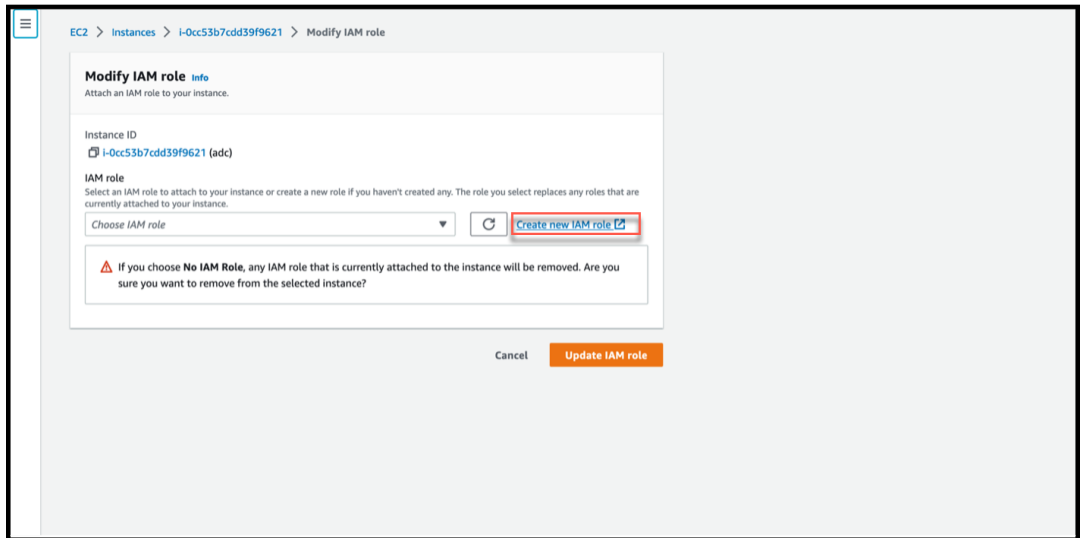


b) In the **Roles** page, click **Create role**.

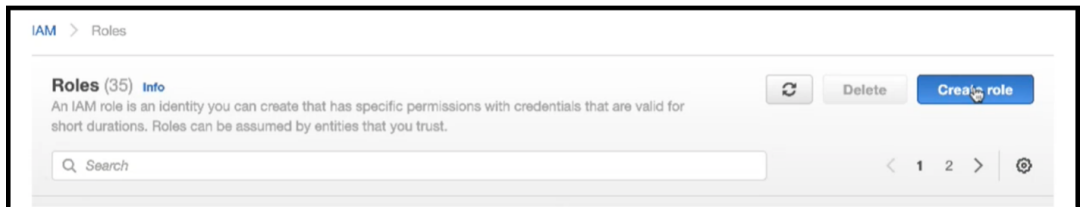

c) Select **AWS service** under **Trusted entity type** and **EC2** under **Common use cases** and then click **Next**.

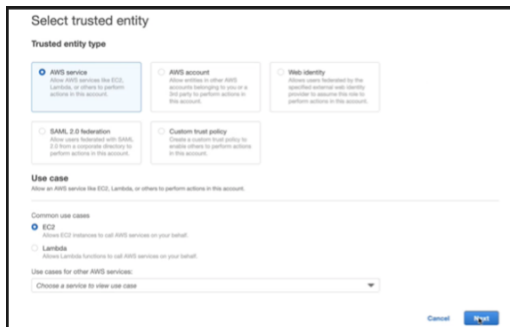

d) In the **Add permissions** page, click **Create policy**.

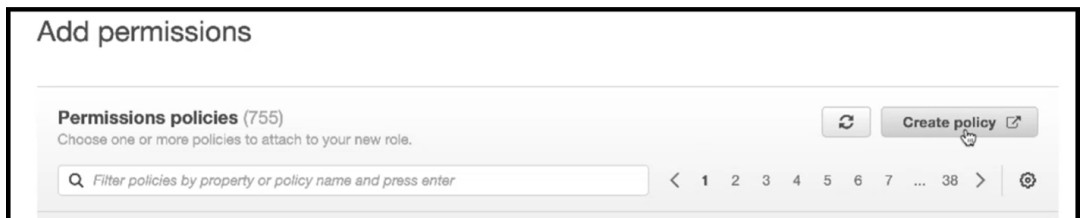

e) Click the **JSON** tab to open the JSON editor.



- f) In the JSON editor, delete everything and paste the IAM permissions for the feature that you want to use.

For example, paste the following IAM permissions for the AWS back-end autoscaling feature:

```


1  {
2
3      "Version": "2012-10-17",
4      "Statement": [
5          {
6
7              "Sid": "VisualEditor0",
8              "Effect": "Allow",
9              "Action": [
10                 "ec2:DescribeInstances",
11                 "autoscaling:*",
12                 "sns:CreateTopic",
13                 "sns:DeleteTopic",
14                 "sns:ListTopics",
15                 "sns:Subscribe",
16                 "sqs:CreateQueue",
17                 "sqs:ListQueues",
18                 "sqs:DeleteMessage",
19                 "sqs:GetQueueAttributes",
20                 "sqs:SetQueueAttributes",
21                 "iam:SimulatePrincipalPolicy",
22                 "iam:GetRole"
23             ],
24             "Resource": "*"
25         }
26     ]
27 }

```


Ensure that the “Version” key-value pair that you provide is the same as the one automati-

cally generated by AWS.


g) Click **Next: Review**.

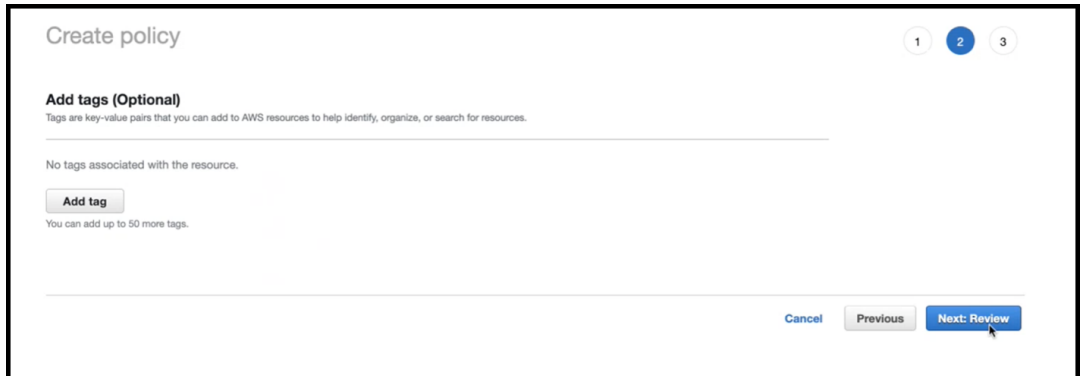


h) In the **Review policy** tab, give a valid name to the policy, and click **Create Policy**.

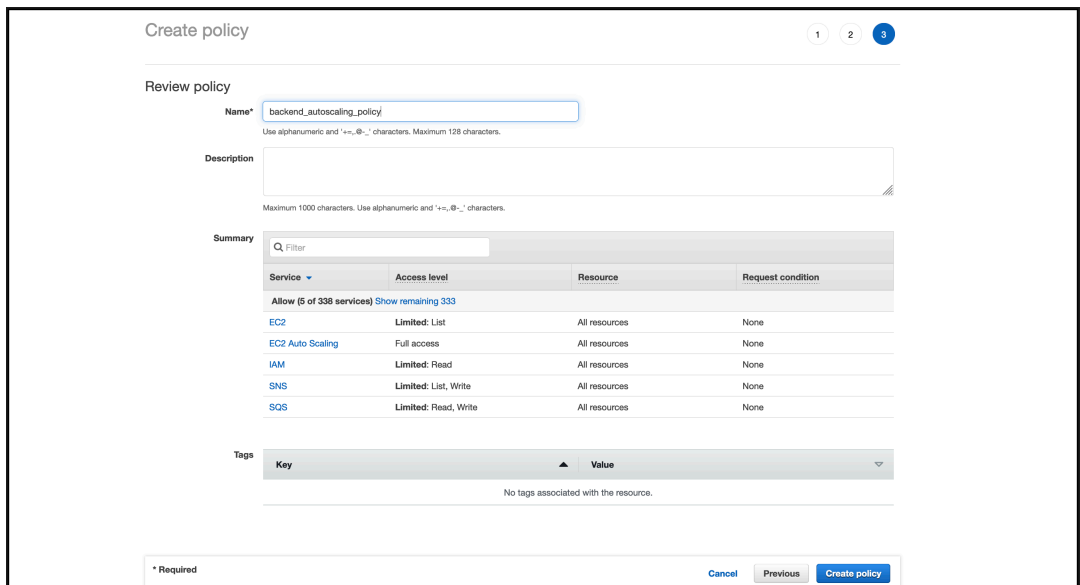


i) In the **Identity Access Management** page, click the policy name that you created. Expand the policy to check the entire JSON, and click **Next**.

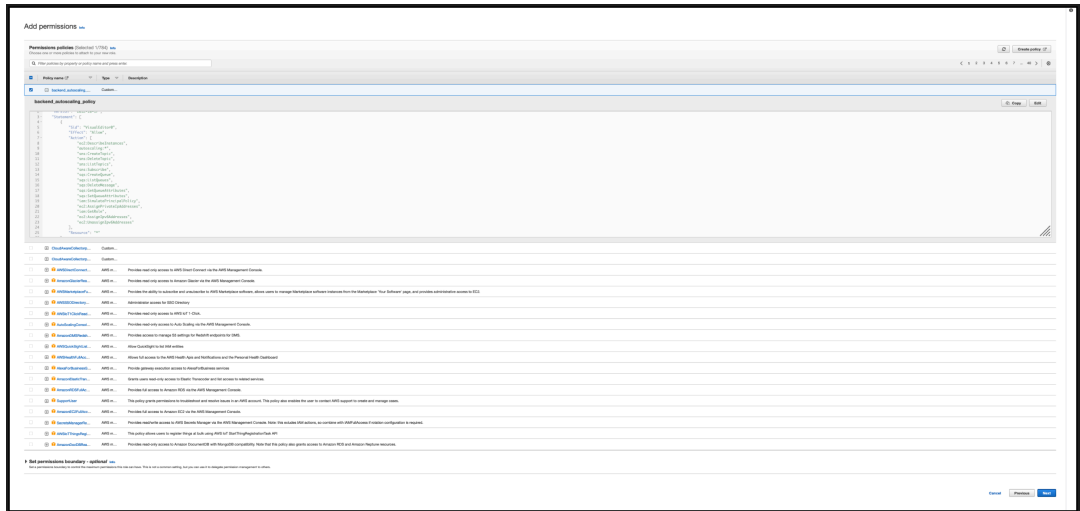


j) In the **Name, review, and create** page, give a valid name to the role.

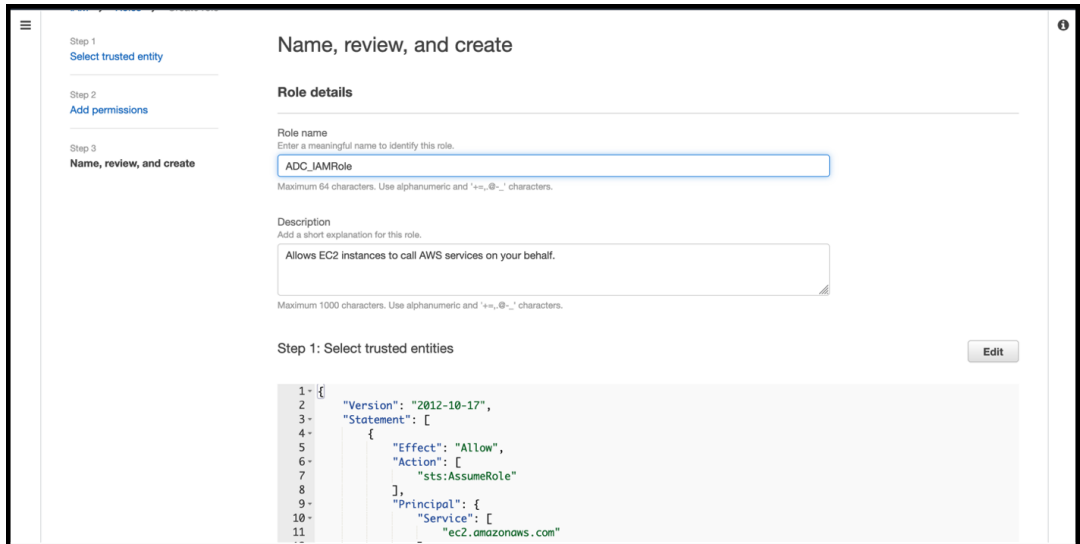


k) Click **Create role**.

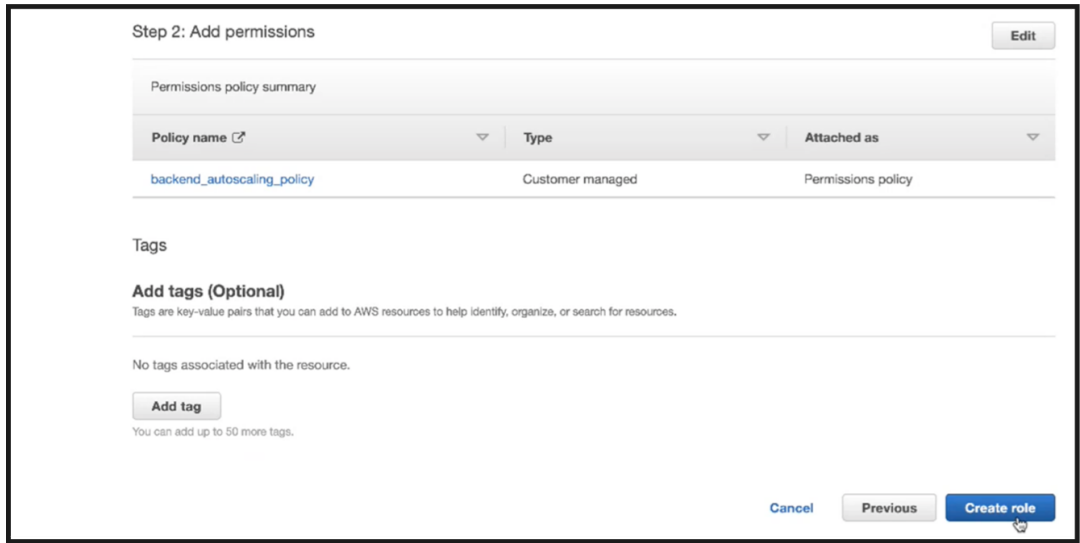

- Repeat steps: 1, 2 and 3. Select the **Refresh** button and select the drop-down menu to see the role that you created.

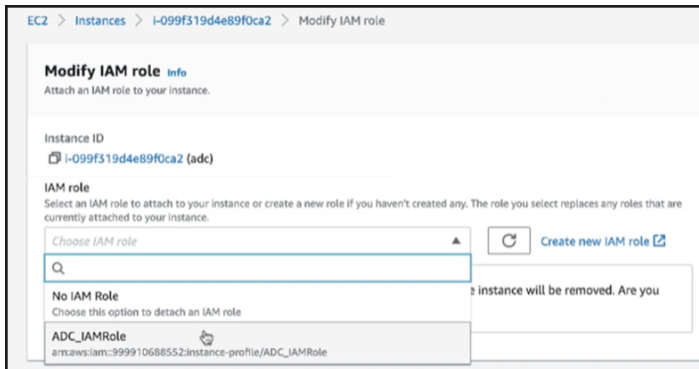


- Click **Update IAM role**.

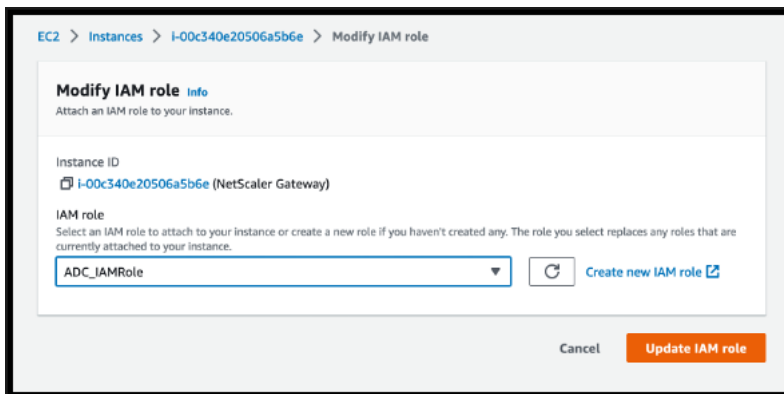


Test IAM policies with the IAM policy simulator

The IAM policy simulator is a tool that enables you to test the effects of IAM access control policies before committing them into production. It is easier to verify and troubleshoot permissions.


1. In the **IAM** page, select the IAM role that you want to test, and click **Simulate**. In the following example, “ADC_IAMRole” is the IAM role.

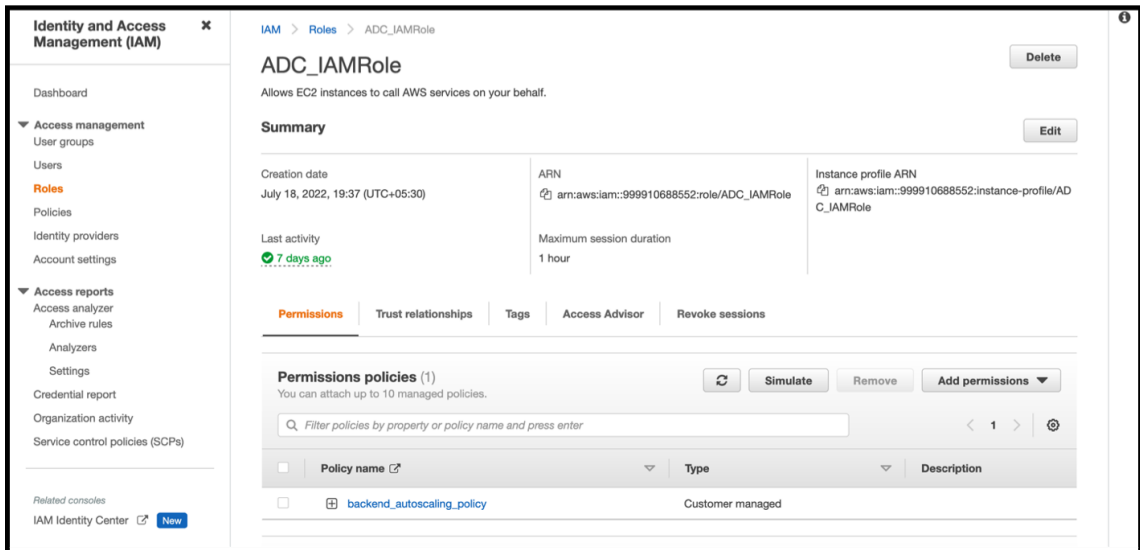


2. In the **IAM policy simulator** console, select **Existing Policies** as the **Mode**.

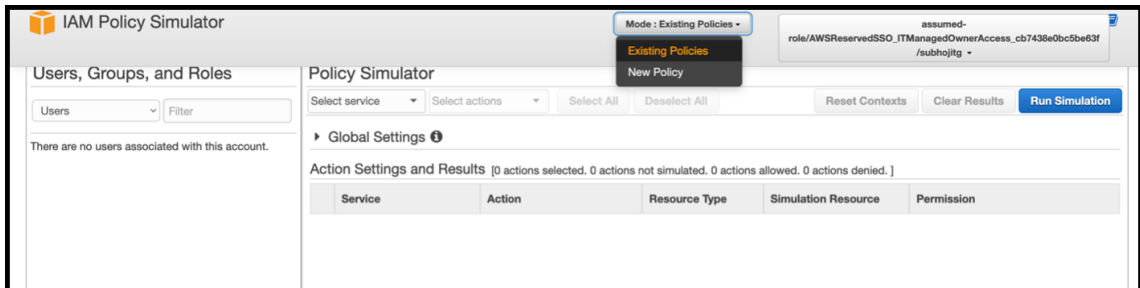


3. In the **Users, Groups and Roles** tab, select **Roles** from the drop-down menu and choose an existing role.

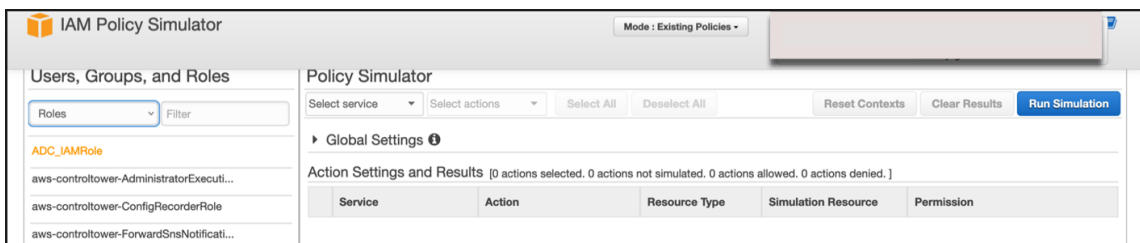

4. After selecting the existing role, select the existing policy under it.

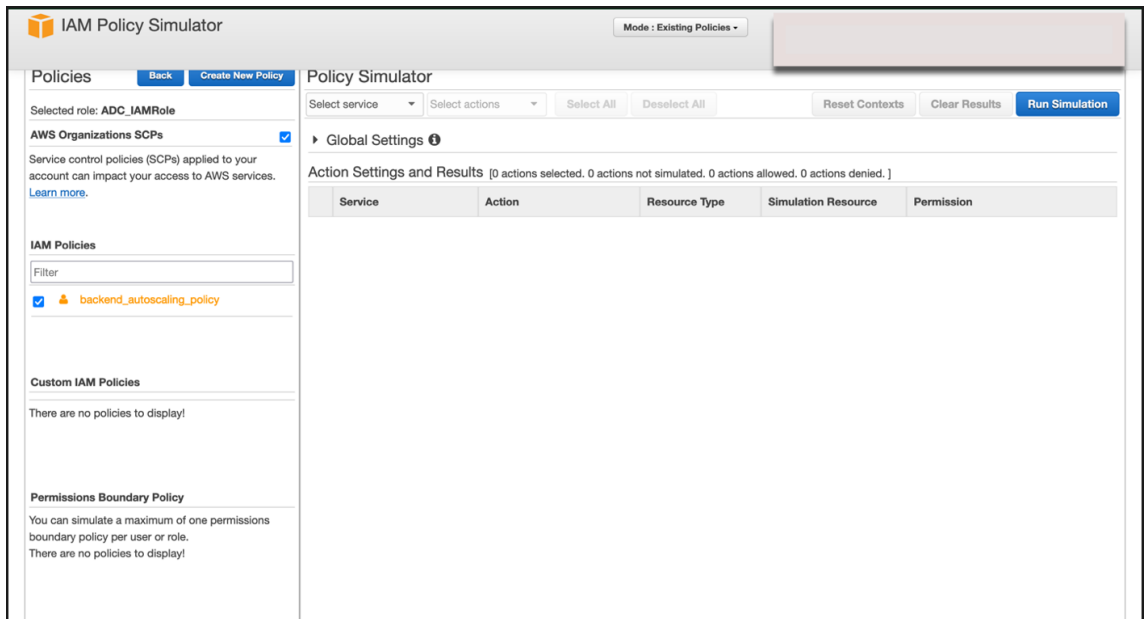

5. After you select the policy, you can see the exact JSON on the left-hand side of the screen. Select the desired actions in the **Select actions** drop-down menu.

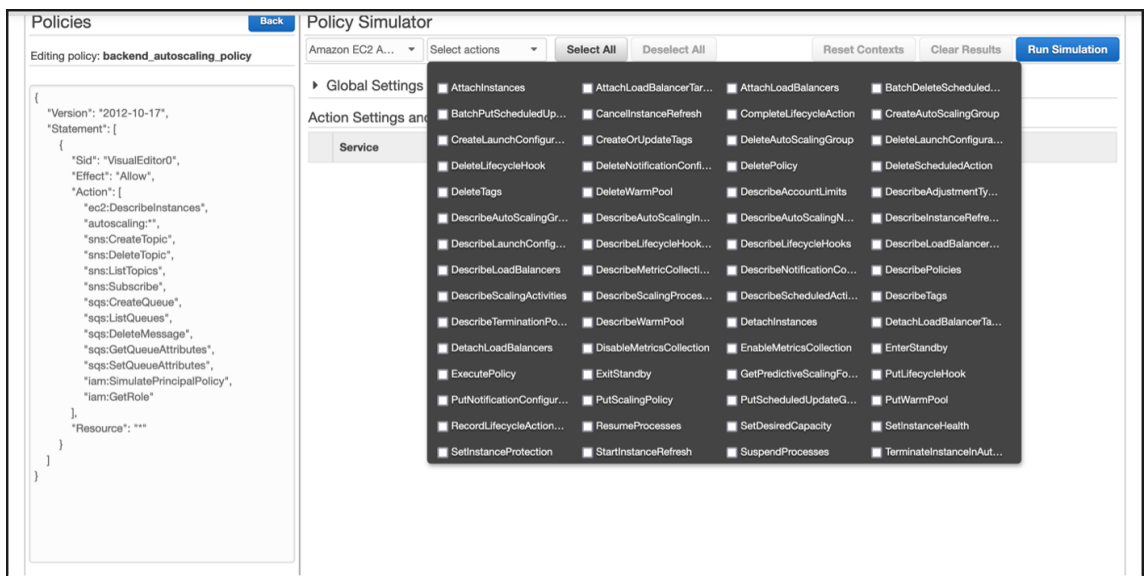

6. Click **Run simulation**.

The screenshot displays the NetScaler Policy Simulator interface. On the left, the policy definition for 'backend_autoscaling_policy' is shown in a code editor. On the right, the 'Policy Simulator' section shows the selected policy and a table of simulation results. The table has columns for Service, Action, Resource Type, Simulation Resource, and Permission. All listed actions are marked as 'allowed' with '1 matching statements'.

Service	Action	Resource Type	Simulation Resource	Permission
Amazon EC2 Auto Scaling	AttachInstances	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	AttachLoadBalancerTargetGr...	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	AttachLoadBalancers	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	BatchDeleteScheduledAction	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	BatchPutScheduledUpdateG...	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	CancelInstanceRefresh	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	CompleteLifecycleAction	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	CreateAutoScalingGroup	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	CreateLaunchConfiguration	launchConfiguration	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	CreateOrUpdateTags	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	DeleteAutoScalingGroup	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	DeleteLaunchConfiguration	launchConfiguration	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	DeleteLifecycleHook	autoScalingGroup	*	allowed 1 matching statements.
Amazon EC2 Auto Scaling	DeleteNotificationConfiguration	autoScalingGroup	*	allowed 1 matching statements.

For detailed information, see [AWS IAM documentation](#).

Other references

[Using an IAM role to grant permissions to applications running on Amazon EC2 instances](#)

How a NetScaler VPX instance on AWS works

May 2, 2023

The NetScaler VPX instance is available as an AMI in AWS marketplace, and it can be launched as an EC2 instance within an AWS VPC. The NetScaler VPX AMI instance requires a minimum of 2 virtual CPUs and 2 GB of memory. An EC2 instance launched within an AWS VPC can also provide the multiple interfaces, multiple IP addresses per interface, and public and private IP addresses needed for VPX configuration. Each VPX instance requires at least three IP subnets:

- A management subnet
- A client-facing subnet (VIP)
- A back-end facing subnet (SNIP, MIP, and so on)

Citrix recommends three network interfaces for a standard VPX instance on AWS installation.

AWS currently makes multi-IP functionality available only to instances running within an AWS VPC. A VPX instance in a VPC can be used to load balance servers running in EC2 instances. An Amazon VPC allows you to create and control a virtual networking environment, including your own IP address range, subnets, route tables, and network gateways.

Note: By default, you can create up to 5 VPC instances per AWS region for each AWS account. You can request higher VPC limits by submitting Amazon’s request form <http://aws.amazon.com/contact-us/vpc-request>.

Figure 1. A Sample NetScaler VPX Instance Deployment on AWS Architecture

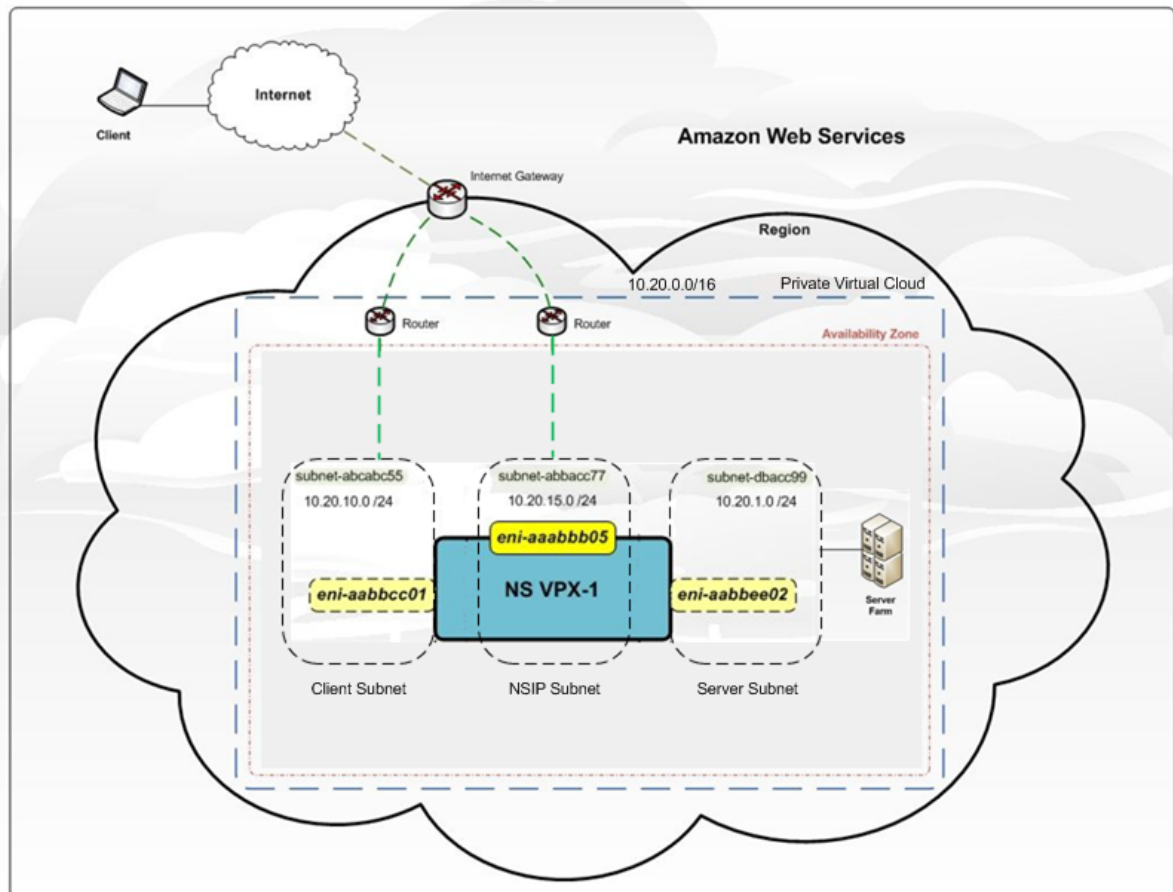


Figure 1 shows a simple topology of an AWS VPC with a NetScaler VPX deployment. The AWS VPC has:

1. A single Internet gateway to route traffic in and out of the VPC.
2. Network connectivity between the Internet gateway and the Internet.
3. Three subnets, one each for management, client, and server.
4. Network connectivity between the Internet gateway and the two subnets (management and client).
5. A standalone NetScaler VPX instance deployed within the VPC. The VPX instance has three ENIs, one attached to each subnet.

Deploy a NetScaler VPX standalone instance on AWS

May 2, 2023

You can deploy a NetScaler VPX standalone instance on AWS by using the following options:

- AWS web console
- Citrix-authored CloudFormation template
- AWS CLI

This topic describes the procedure for deploying a NetScaler VPX instance on AWS.

Before you start your deployment, read the following topics:

- [Prerequisites](#)
- [Limitation and usage guidelines](#)

Deploy a NetScaler VPX instance on AWS by using the AWS web console

You can deploy a NetScaler VPX instance on AWS through the AWS web console. The deployment process includes the following steps:

1. Create a Key Pair
2. Create a Virtual Private Cloud (VPC)
3. Add more subnets
4. Create security groups and security rules
5. Add route tables
6. Create an internet gateway
7. Create a NetScaler VPX instance
8. Create and attach more network interfaces
9. Attach elastic IPs to the management NIC
10. Connect to the VPX instance

Step 1: Create a key pair.

Amazon EC2 uses a key pair to encrypt and decrypt logon information. To log on to your instance, you must create a key pair, specify the name of the key pair when you launch the instance, and provide the private key when you connect to the instance.

When you review and launch an instance by using the AWS Launch Instance wizard, you are prompted to use an existing key pair or create a new key pair. More information about how to create a key pair, see [Amazon EC2 Key Pairs](#).

Step 2: Create a VPC.

A NetScaler VPC instance is deployed inside an AWS VPC. A VPC allows you to define the virtual network dedicated to your AWS account. For more information about AWS VPC, see [Getting Started With Amazon VPC](#).

While creating a VPC for your NetScaler VPX instance, keep the following points in mind.

- Use the VPC with a Single Public Subnet Only option to create an AWS VPC in an AWS availability zone.
- Citrix recommends that you create at least **three subnets**, of the following types:
 - One subnet for management traffic. You place the management IP(NSIP) on this subnet. By default elastic network interface (ENI) eth0 is used for management IP.
 - One or more subnets for client-access (user-to-NetScaler VPX) traffic, through which clients connect to one or more virtual IP (VIP) addresses assigned to NetScaler load balancing virtual servers.
 - One or more subnets for the server-access (VPX-to-server) traffic, through which your servers connect to VPX-owned subnet IP (SNIP) addresses. For more information about NetScaler load balancing and virtual servers, virtual IP addresses (VIPs), and subnet IP addresses (SNIPs), see:
 - All subnets must be in the same availability zone.

Step 3: Add subnets.

When you used the VPC wizard, only one subnet was created. Depending on your requirement, you might want to create more subnets. For more information about how to create more subnets, see [Adding a Subnet to Your VPC](#).

Step 4: Create security groups and security rules.

To control inbound and outbound traffic, create security groups and add rules to the groups. For more information how to create groups and add rules, see [Security Groups for Your VPC](#).

For NetScaler VPX instances, the EC2 wizard gives default security groups, which are generated by AWS Marketplace and is based on recommended settings by Citrix. However, you can create more security groups based on your requirements.

Note

Port 22, 80, 443 to be opened on the Security group for SSH, HTTP, and HTTPS access respectively.

Step 5: Add route tables.

Route table contains a set of rules, called routes, that are used to determine where network traffic is directed. Each subnet in your VPC must be associated with a route table. For more information about how to create a route table, see [Route Tables](#).

Step 6: Create an internet gateway.

An internet gateway serves two purposes: to provide a target in your VPC route tables for internet-routable traffic, and to perform network address translation (NAT) for instances that have been assigned public IPv4 addresses.

Create an internet gateway for internet traffic. For more information about how to create an Internet Gateway, see the section [Attaching an Internet Gateway](#).

Step 7: Create a NetScaler VPX instance by using the AWS EC2 service.

To create a NetScaler VPX instance by using the AWS EC2 service, complete the following steps.

1. From the AWS dashboard, go to **Compute > EC2 > Launch Instance > AWS Marketplace**.


Before you click **Launch Instance**, ensure your region is correct by checking the note that appears under **Launch Instance**.



2. In the Search AWS Marketplace bar, search with the keyword NetScaler VPX.
3. Select the version you want to deploy and then click **Select**. For the NetScaler VPX version, you have the following options:
 - A licensed version
 - NetScaler VPX Express appliance (This is a free virtual appliance, which is available from NetScaler 12.0 56.20.)
 - Bring your own device

The Launch Instance wizard starts. Follow the wizard to create an instance. The wizard prompts you to:

- Choose Instance Type
- Configure Instance
- Add Storage
- Add Tags
- Configure Security Group
- Review

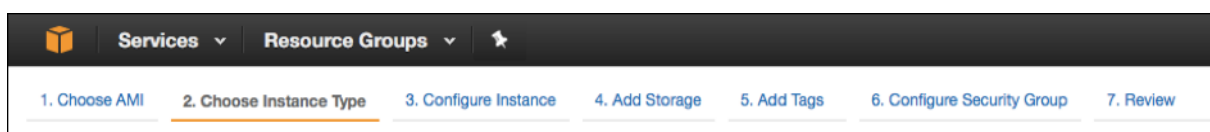

Step 8: Create and attach more network interfaces.

Create two more network interfaces for VIP and SNIP. For more information about how to create more network interfaces, see the [Creating a Network Interface](#) section.

After you've created the network interfaces, you must attach them to the VPX instance. Before attaching the interface, shut down the VPX instance, attach the interface, and power on the instance. For more information about how to attach network interfaces, see the [Attaching a Network Interface When Launching an Instance](#) section.

Step 9: Allocate and associate elastic IPs.

If you assign a public IP address to an EC2 instance, it remains assigned only until the instance is stopped. After that, the address is released back to the pool. When you restart the instance, a new public IP address is assigned.

In contrast, an elastic IP (EIP) address remains assigned until the address is disassociated from an instance.

Allocate and associate an elastic IP for the management NIC. For more information about how to allocate and associate elastic IP addresses, see these topics:

- [Allocating an Elastic IP Address](#)
- [Associating an Elastic IP Address with a Running Instance](#)

These steps complete the procedure to create a NetScaler VPX instance on AWS. It can take a few minutes for the instance to be ready. Check that your instance has passed its status checks. You can view this information in the **Status Checks** column on the Instances page.

Step 10: Connect to the VPX instance.

After you've created the VPX instance, you connect the instance by using the GUI and an SSH client.

- GUI

The following are the default administrator credentials to access a NetScaler VPX instance

User name: `nsroot`

Password: The default password for the ns root account is set to the AWS instance-ID of the NetScaler VPX instance. On your first logon, you are prompted to change the password for security reasons. After changing the password, you must save the configuration. If the configuration is not saved and the instance restarts, you must log on with the default password. Change the password again at the prompt.

- SSH client

From the AWS management console, select the NetScaler VPX instance and click **Connect**. Follow the instructions given on the **Connect to Your Instance** page.

For more information about how to deploy a NetScaler VPX standalone instance on AWS by using the AWS web console, see:

- [Scenario: standalone instance](#)
- [How to configure a NetScaler VPX instance on AWS by using Citrix CloudFormation template](#)

Configure a NetScaler VPX instance by using the Citrix CloudFormation template

You can use the Citrix-provided CloudFormation template to automate VPX instance launch. The template provides functionality to launch a single NetScaler VPX instance, or to create a high availability environment with a pair of NetScaler VPX instances.

You can launch the template from AWS Marketplace or GitHub.

The CloudFormation template requires an existing VPC environment, and it launches a VPX instance with three elastic network interfaces (ENIs). Before you start the CloudFormation template, ensure that you complete the following requirements:

- An AWS virtual private cloud (VPC)
- Three subnets within the VPC: one for management, one for client traffic, and one for back-end servers
- An EC2 key pair to enable SSH access to the instance
- A security group with UDP 3003, TCP 3009–3010, HTTP, SSH ports open

See the “Deploy a NetScaler VPX Instance on AWS by Using the AWS Web Console” section or AWS documentation for more information about how to complete the prerequisites.

Watch this [video](#) to learn about how to configure and launch a NetScaler VPX standalone instance by using the Citrix CloudFormation template available in the AWS Marketplace.

Further, you configure and launch a NetScaler VPX Express standalone instance by using the Citrix CloudFormation template available in GitHub:

<https://github.com/citrix/citrix-adc-aws-cloudformation/tree/master/templates/standalone/>

An IAM role is not mandatory for a standalone deployment. However, Citrix recommends that you create and attach an IAM role with the required privileges to the instance, for future need. The IAM role ensures that the standalone instance is easily converted to a high availability node with SR-IOV, when required.

For more information about the required privileges, see [Configuring NetScaler VPX instances to Use SR-IOV Network Interface](#).

Note

If you deploy a NetScaler VPX instance on AWS by using the AWS web console, the CloudWatch service is enabled by default. If you deploy a NetScaler VPX instance by using the Citrix Cloud-

Formation template, the default option is “Yes.” If you want to disable the CloudWatch service, select “No.” For more information, see [Monitor your instances using Amazon CloudWatch](#)

Configure a NetScaler VPX instance by using the AWS CLI


You can use the AWS CLI to launch instances. For more information, see the [AWS Command Line Interface Documentation](#).

Scenario: standalone instance

May 2, 2023

This scenario illustrates how to deploy a NetScaler VPX standalone EC2 instance in AWS by using the AWS GUI. Create a standalone VPX instance with three NICs. The instance, which is configured as a load balancing virtual server, communicates with back-end servers (the server farm). For this configuration, set up the required communication routes between the instance and the back-end servers, and between the instance and the external hosts on the public internet.

For more details about the procedure for deploying a VPX instance, see [Deploy a NetScaler VPX standalone instance on AWS](#).

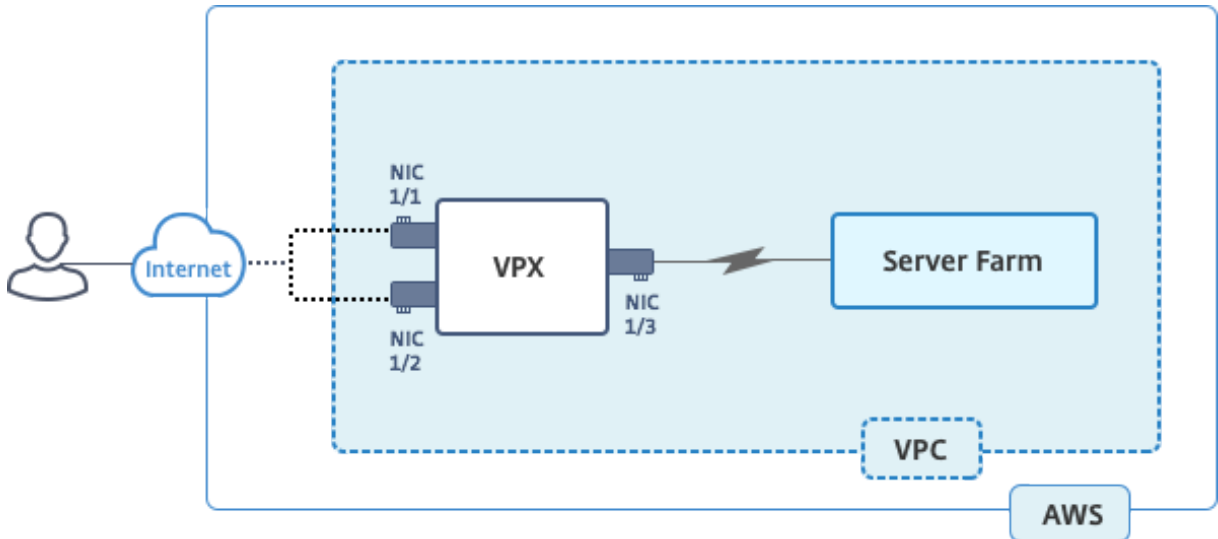

Create three NICs. Each NIC can be configured with a pair of IP addresses (public and private). The NICs serve the following purposes.

NIC	Purpose	Associated with
eth0	Serves management traffic (NSIP)	A public IP address and a private IP address
eth1	Serves client-side traffic (VIP)	A public IP address and a private IP address
eth2	Communicates with back-end servers (SNIP)	A public IP address (Private IP address not mandatory)

Step 1: Create a VPC.

1. Log on to the AWS web console and navigate to **Networking & Content Delivery > VPC**. Click **Start VPC Wizard**.
2. Select **VPC with a Single Public Subnet** and click **Select**.
3. Set the IP CIDR Block to 10.0.0.0/16, for this scenario.
4. Give a name for the VPC.
5. Set the public subnet to 10.0.0.0/24. (This is the management network).
6. Select an availability zone.
7. Give a name for the subnet.
8. Click Create **VPC**.

The screenshot shows the AWS VPC console configuration for a VPC with a single public subnet. The configuration includes:

- IPv4 CIDR block:** 10.0.0.0/16 (65531 IP addresses available)
- IPv6 CIDR block:** No IPv6 CIDR Block, Amazon provided IPv6 CIDR block
- VPC name:** NSDoc
- Public subnet's IPv4 CIDR:** 10.0.0.0/24 (251 IP addresses available)
- Availability Zone:** ap-south-1a
- Subnet name:** NSDoc-MGMT
- Service endpoints:** Add Endpoint button
- Enable DNS hostnames:** Yes, No
- Hardware tenancy:** Default

Buttons at the bottom right: Cancel and Exit, Back, Create VPC.

Step 2: Create extra subnets.

1. Open the Amazon VPC console at <https://console.aws.amazon.com/vpc/>.
2. In the navigation pane, choose Subnets, Create Subnet after you enter the following details.
 - Name tag: Provide a name for your subnet.

- VPC: Choose the VPC for which you’re creating the subnet.
- Availability Zone: Choose the availability zone in which you created the VPC in step 1.
- IPv4 CIDR block: Specify an IPv4 CIDR block for your subnet. For this scenario, choose 10.0.1.0/24.

Create Subnet ✕

Use the CIDR format to specify your subnet's IP address block (e.g., 10.0.0.0/24). Note that block sizes must be between a /16 netmask and /28 netmask. Also, note that a subnet can be the same size as your VPC. An IPv6 CIDR block must be a /64 CIDR block.

Name tag ⓘ

VPC ⓘ

VPC CIDRs	CIDR	Status	Status Reason
	10.0.0.0/16	associated	

Availability Zone ⓘ

IPv4 CIDR block ⓘ

Cancel
Yes, Create

3. Repeat the steps to create one more subnet for back-end servers.

Create Subnet ✕

Use the CIDR format to specify your subnet's IP address block (e.g., 10.0.0.0/24). Note that block sizes must be between a /16 netmask and /28 netmask. Also, note that a subnet can be the same size as your VPC. An IPv6 CIDR block must be a /64 CIDR block.

Name tag ⓘ

VPC ⓘ

VPC CIDRs	CIDR	Status	Status Reason
	10.0.0.0/16	associated	

Availability Zone ⓘ

IPv4 CIDR block ⓘ

Cancel
Yes, Create

Step 3: Create a route table.

1. Open the Amazon VPC console at <https://console.aws.amazon.com/vpc/>.
2. In the navigation pane, choose **Route Tables > Create Route Table**.


- In the Create Route Table window, add a name and select the VPC that you created in step 1.
- Click **Yes, Create**.

The route table is assigned to all the subnets that you created for this VPC, so that routing of traffic from an instance in one subnet can reach an instance in another subnet.

- Click Subnet Associations, and then click Edit.
- Click the management and client subnet and click Save. This creates a route table for internet traffic only.

Associate	Subnet	IPv4 CIDR	IPv6 CIDR	Current Route Table
<input checked="" type="checkbox"/>	subnet-c4ce9aad NSDoc-MGMT	10.0.0.0/24	-	rtb-735a7b1a
<input checked="" type="checkbox"/>	subnet-31ce9a58 NSDoc-client	10.0.1.0/24	-	Main
<input type="checkbox"/>	subnet-d0cd99b9 NSDoc-server	10.0.2.0/24	-	Main


- Click **Routes > Edit > Add another route**.
- In the Destination field add 0.0.0.0/0, and click the Target field to select igw-**<xxxx>** the Internet Gateway that the VPC Wizard created automatically.
- Click Save.

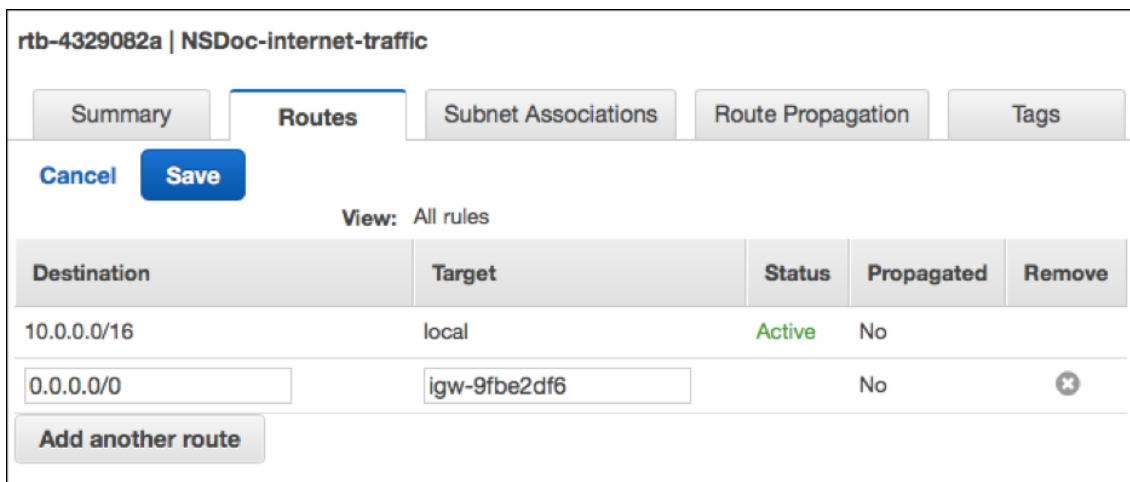

10. Follow the steps to create a route table for server-side traffic.

Step 4: Create a NetScaler VPX instance.

1. Log on the AWS management console and click **EC2** under **Compute**.
2. Click AWS Marketplace. In the Search AWS Marketplace bar, type NetScaler VPX and press Enter. The available NetScaler VPX editions are displayed.
3. Click **Select** to choose the desired NetScaler VPX edition. The EC2 instance wizard starts.
4. In the **Choose Instance Type** page, select **m4. Xlarge** (recommended) and click **Next: Configure Instance Details**.
5. In the Configure Instance Details page, select the following, and then click Next: Add Storage.
 - Number of instances: 1
 - Network: the VPC that created in Step 1
 - Subnet: the management subnet
 - Auto-assign Public IP: Enable

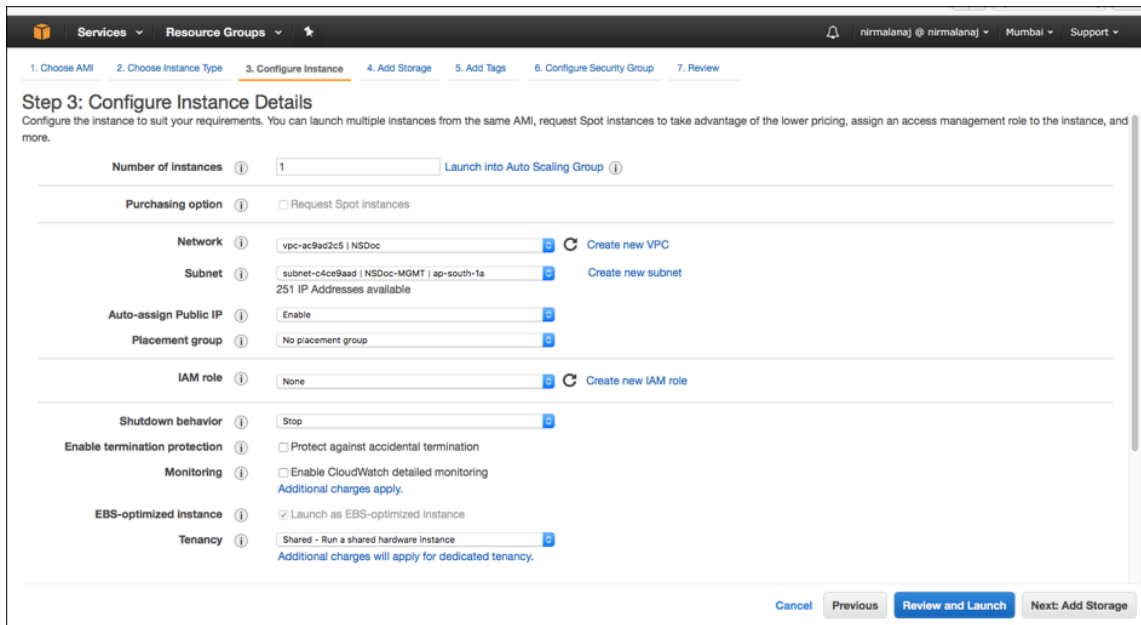

6. In the Add Storage page, select the default option, and click Next: Add Tags.
7. In the Add Tags page, add a name for the instance, and click Next: Configure Security Group.
8. In the Configure Security Group page, select the default option (which is generated by AWS Marketplace and is based on recommended settings by Citrix Systems) and then click **Review and Launch > Launch**.
9. You are prompted to select an existing key pair or create a new key pair. From the Select a key pair drop-down list, select the key pair that you created as a prerequisite (See the Prerequisite section.)
10. Check the box to acknowledge the key pair and click Launch Instances.

Select an existing key pair or create a new key pair ✕

A key pair consists of a **public key** that AWS stores, and a **private key file** that you store. Together, they allow you to connect to your instance securely. For Windows AMIs, the private key file is required to obtain the password used to log into your instance. For Linux AMIs, the private key file allows you to securely SSH into your instance.

Note: The selected key pair will be added to the set of keys authorized for this instance. Learn more about [removing existing key pairs from a public AMI](#).

Choose an existing key pair ⌵

Select a key pair

NSDOCKeypair ⌵

I acknowledge that I have access to the selected private key file (NSDOCKeypair.pem), and that without this file, I won't be able to log into my instance.

Cancel Launch Instances


Launch Instance Wizard displays the Launch Status, and the instance appears in the list of instances when it is fully launched.

The check instance, go the AWS console click EC2 > Running Instances. Select the instance and add a name. Make sure the Instance State is running and Status Checks is complete.

Step 5: Create and attach more network interfaces.

When you created the VPC, only one network interface associated with it. Now add two more network interfaces to the VPC, for the VIP and SNIP.


1. Open the Amazon EC2 console at <https://console.aws.amazon.com/ec2/>.
2. In the navigation pane, choose Network Interfaces.
3. Choose Create Network Interface.
4. For Description, enter a descriptive name.
5. For Subnet, select the subnet that you created previously for the VIP.
6. For Private IP, leave the default option.
7. For Security groups, select the group.
8. Click **Yes, Create**.

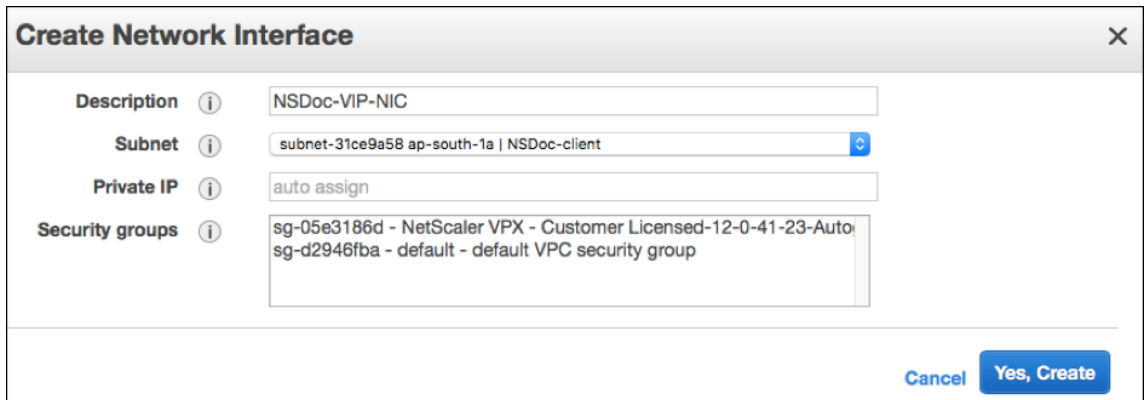

9. After the network interface is created, add a name to the interface.
10. Repeat the steps to create a network interface for server-side traffic.

Attach the network interfaces:


1. In the navigation pane, choose Network Interfaces.
2. Select the network interface and choose Attach.
3. In the Attach Network Interface dialog box, select the instance and choose Attach.

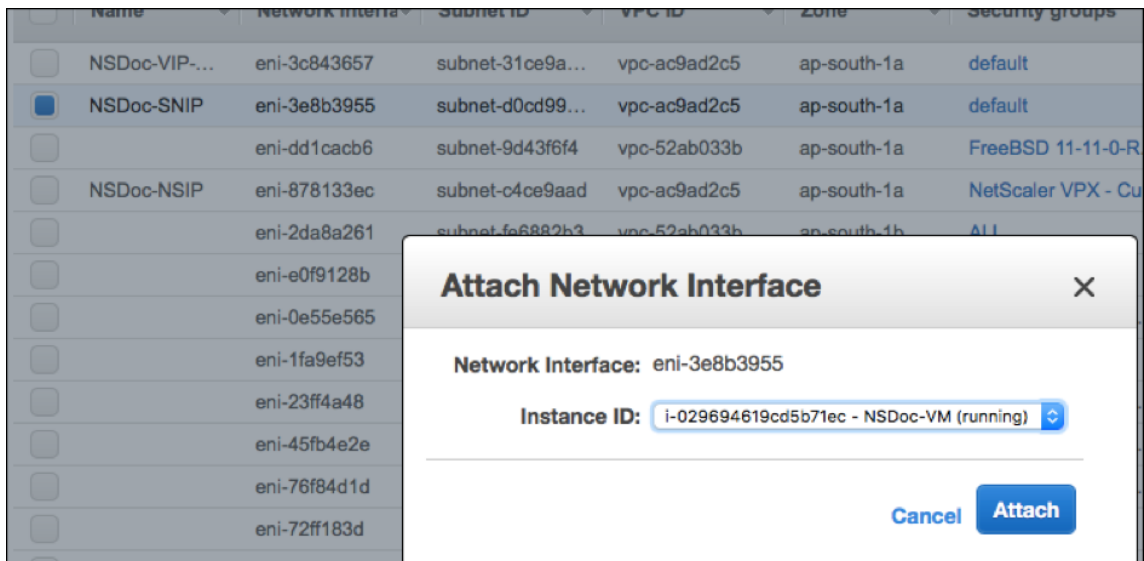

Step 6: Attach an elastic IP to the NSIP.

1. From the AWS management console, go to **NETWORK & SECURITY > Elastic IPs**.
2. Check for available free EIP to attach. If none, click **Allocate new address**.
3. Select the newly allocated IP address and choose **Actions > Associate address**.
4. Click the **Network interface** radio button.
5. From the Network interface drop-down list, select the management NIC.

6. From the **Private IP** drop-down menu, select the AWS-generated IP address.
7. Select the **Reassociation** check box.
8. Click **Associate**.

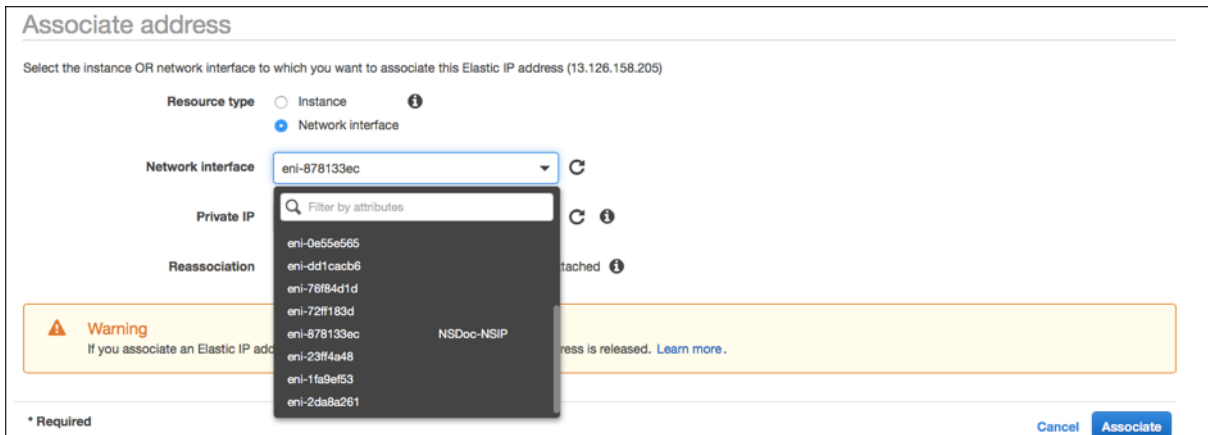

Access the VPX instance:

After you’ve configured a standalone NetScaler VPX instance with three NICs, log on to the VPX instance to complete the NetScaler-side configuration. Use of the following options:

- GUI: Type the public IP of the management NIC in the browser. Log on by using `ns root` as the user name and the instance ID (`i-0c1ffe1d987817522`) as the password.

Note

On your first logon, you are prompted to change the password for security reasons. After changing the password, you must save the configuration. If the configuration is not saved and the instance restarts, you must log on with the default password. Change the password again at the prompt and save the configuration.

- SSH: Open an SSH client and type:

```
ssh -i \<location of your private key\> ns root@\<public DNS of the instance\>
```

To find the public DNS, click the instance, and click **Connect**.

Related information:

- To configure the NetScaler-owned IP addresses (NSIP, VIP, and SNIP), see [Configuring NetScaler-Owned IP Addresses](#).
- You’ve configured a BYOL version of the NetScaler VPX appliance, for more information see the VPX Licensing Guide at <http://support.citrix.com/article/CTX122426>

Download a NetScaler VPX license

May 2, 2023

After the launch of NetScaler VPX-customer licensed instance from the AWS marketplace, a license is required. For more information on VPX licensing, see [Licensing overview](#).

You have to:

1. Use the licensing portal within the Citrix website to generate a valid license.
2. Upload the license to the instance.

If this is a **paid** marketplace instance, then you do not need to install a license. The correct feature set and performance activate automatically.

If you use a NetScaler VPX instance with a model number higher than VPX 5000, the network throughput might not be the same as specified by the instance's license. However, other features, such as SSL throughput and SSL transactions per second, might improve.

5 Gbps network bandwidth is observed in the `c4.8xlarge` instance type.

How to migrate the AWS subscription to BYOL

This section describes the procedure to migrate from AWS subscription to Bring your own license (BYOL), and conversely.

Do the following steps to migrate an AWS subscription to BYOL:

Note

The **Step 2** and **Step 3** are done on the NetScaler VPX instance, and all other steps are done on the AWS portal.

1. Create a BYOL EC2 instance using [NetScaler VPX - Customer Licensed](#) in the same availability zone as the old EC2 instance that has the same security group, IAM role, and subnet. The new EC2 instance must have only one ENI interface.
2. To back up the data on the old EC2 instance using the NetScaler GUI, follow these steps.
 - a) Navigate to **System > Backup and Restore**.
 - b) In the **Welcome** page, click **Backup/Import** to start the process.

Welcome to
Backup and Restore

The backup and restore functionality of the Citrix ADC appliance allows you to create a backup file of the Citrix ADC configurations. This file can later be used to restore the Citrix ADC configurations to the previous state.
To create a backup, click the "Backup..." link shown below. When required, select one of the backups and restore the appliance.

[Backup/Import](#)

c) In the **Backup/Import** page, fill in the following details:

- **Name** –Name of the backup file.
- **Level** –Select the backup level as **Full**.
- **Comment** –Provide a brief description of the backup.

Backup/Import

Create Import

Citrix ADC Version
NS13.1: Build 50.19.nc, Date: Sep 25 2023, 21:28:29 (64-bit)


File Name
 ⓘ

Level*
 ⓘ

Comment

[Backup](#) [Cancel](#)


- d) Click **Backup**. Once the backup is complete, you can select the file and download it to your local machine.

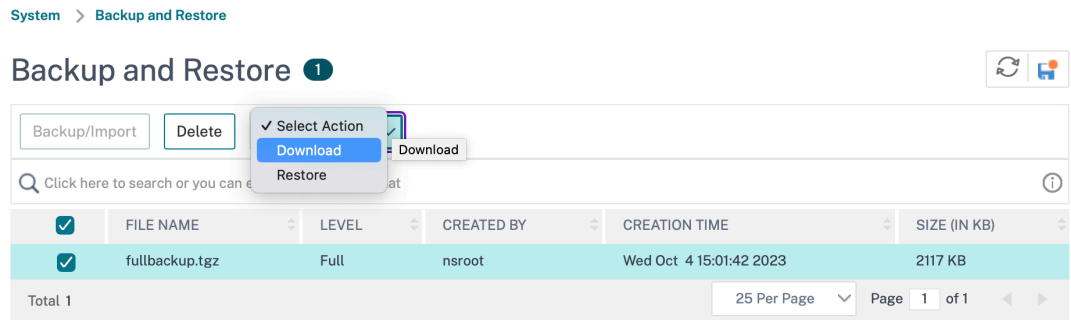


3. To restore the data on the new EC2 instance using the NetScaler GUI, follow these steps:

- a) Navigate to **System > Backup and Restore**.
- b) Click **Backup/Import** to start the process.
- c) Select the **Import** option and upload the backup file.

[System](#) > [Backup and Restore](#) > [Backup/Import](#)

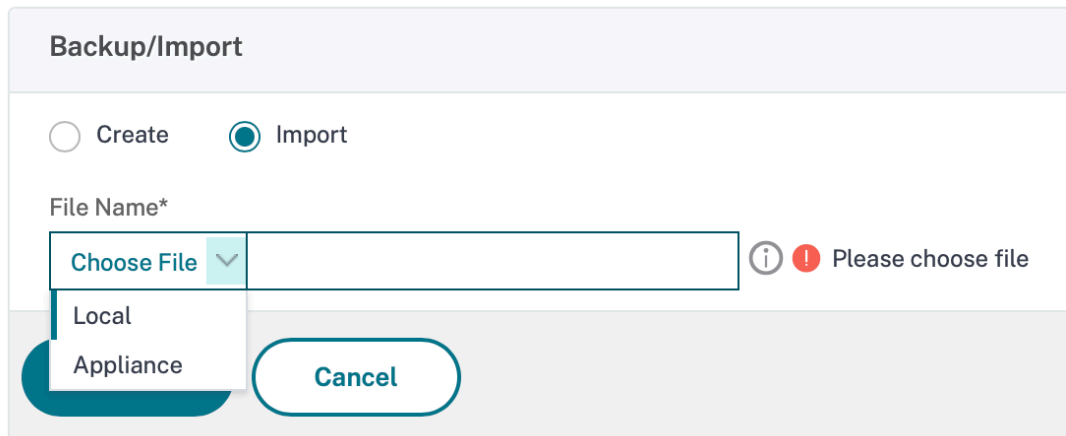

- d) Select the file.
- e) From the **Select Action** drop-down menu, select **Restore**.

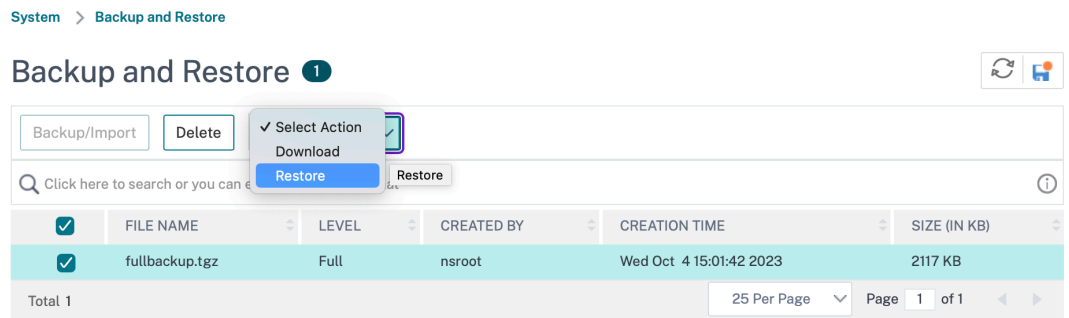

- f) On the **Restore** page, verify the file details, and click **Restore**.

← Restore


File Name	fullbackup.tgz
Level	Full
Citrix ADC Version	NS13.1-50.19
IP Address	10.102.126.34
Size (in KB)	2117
Created By	nsroot
Creation Time	Wed Oct 4 15:01:42 2023
Comment	None
	<input type="checkbox"/> Skip Backup ⓘ

Restore **Close**


- g) After the restore, reboot the EC2 instance.

4. Move all interfaces (except the management interface to which the NSIP address is bound) from the old EC2 instance to the new EC2 instance. To move a network interface from one EC2 instance to another, follow these steps:

- a) In the **AWS Portal**, stop both the old and new EC2 instances.
- b) Navigate to **Network Interfaces**, and select the network interface attached to the old EC2 instance.
- c) Detach the EC2 instance by clicking **Actions > Detach**.

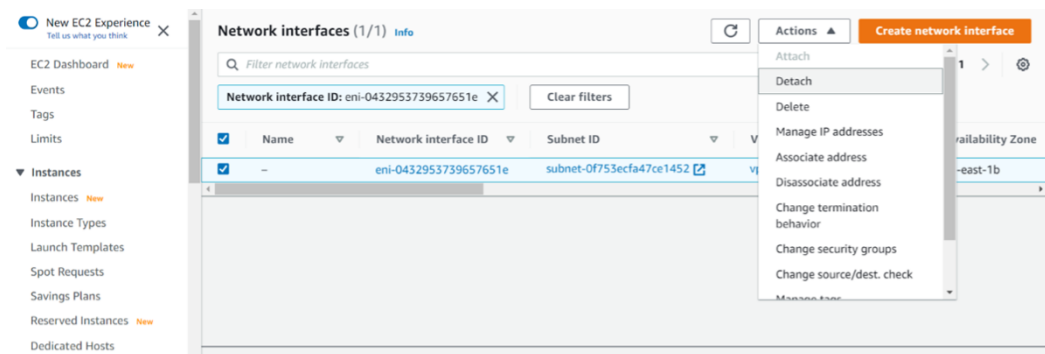

d) Attach the network interface to the new EC2 instance by clicking **Actions > Attach**. Enter the EC2 instance name to which the network interface must be attached.

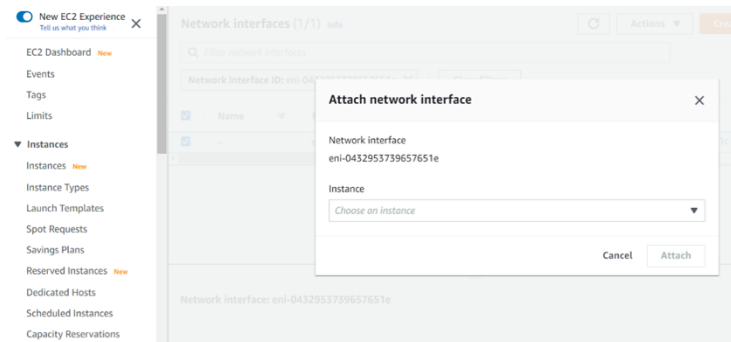


e) Do the **Step 1 to Step 4** for all other interfaces that are attached. Make sure to follow the sequence and maintain the interface order. That is, first detach interface 2 and attach it, and then detach interface 3 and attach it, and so on.

5. You can't detach the management interface from an old EC2 instance. So, move all the secondary IP addresses (if any) on the management interface (primary network interface) of the old EC2 instance to the new EC2 instance. To move an IP address from one interface to another, follow these steps:

- a) In the **AWS Portal**, make sure that both the old and new EC2 instances are in **Stop** state.
- b) Navigate to **Network Interfaces**, and select the management network interface attached to the old EC2 instance.

- c) Click **Actions > Manage IP Address**, and make note of all the secondary IP addresses assigned (if any).
- d) Navigate to the management network interface or primary interface of the new EC2 instance.
- e) Click **Actions > Manage IP Addresses**.
- f) Under **IPv4 Addresses**, click **Assign new IP address**.
- g) Enter the IP addresses, which are noted in the **Step 3**.
- h) Select **Allow secondary private IP addresses to be reassigned** check box.
- i) Click **Save**.

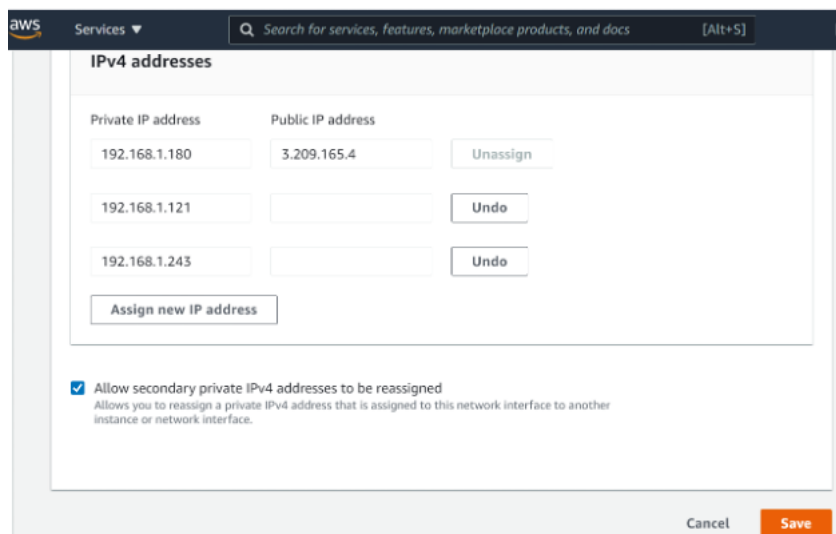

6. Start the new EC2 instance and verify the configuration. After all the configuration is moved, you can delete or keep the old EC2 instance as per your requirement.
7. If any EIP address is attached to the NSIP address of the old EC2 instance, move the old instance NSIP address to the new instance NSIP address.
8. If you want to revert to the old instance, then follow the same steps in the opposite way between the old and new instance.
9. After you move from subscription instance to BYOL instance, a license is required. To install a license follow these steps:
 - Use the licensing portal in the Citrix website to generate a valid license.
 - Upload the license to the instance. For more information, see [VPX ADC - Install a new license](#).

Note

When you move BYOL instance to subscription instance (paid marketplace instance), you need not install the license. The correct feature set and performance is automatically activated.

Limitations

The management interface can't be moved to the new EC2 instance. So Citrix recommends you manually configure the management interface. For more information, see **Step 5** in the preceding procedure. A new EC2 instance is created with the exact replica of the old EC2 instance but only the NSIP address has a new IP address.

Load balancing servers in different availability zones

May 2, 2023

A VPX instance can be used to load balance servers running in the same availability zone, or in:

- A different availability zone (AZ) in the same AWS VPC
- A different AWS region
- AWS EC2 in a VPC

To enable a VPX instance to load balance servers running outside the AWS VPC that the VPX instance is in, configure the instance to use EIPs to route traffic through the Internet gateway, as follows:

1. Configure a SNIP on the NetScaler VPX instance by using the NetScaler CLI or the GUI.
2. Enable traffic to be routed out of the AZ, by creating a public facing subnet for the server-side traffic.
3. Add an Internet gateway route to the routing table, using the AWS GUI console.
4. Associate the routing table you updated with the server-side subnet.
5. Associate an EIP with the server-side private IP address that is mapped to a NetScaler SNIP address.

How high availability on AWS works

May 2, 2023

You can configure two NetScaler VPX instances on AWS as a high availability (HA) active-passive pair. When you configure one instance as the primary node and the other as the secondary node, the primary node accepts connections and manages servers. The secondary node monitors the primary. If for any reason, the primary node is unable to accept connections, the secondary node takes over.

In AWS, the following deployment types are supported for VPX instances:

- High availability within same zone
- High availability across different zones

Note

For high availability to work, ensure that both the NetScaler VPX instances are attached with IAM roles and assigned with the Elastic IP (EIP) address to the NSIP. You need not assign an EIP on NSIP if the NSIP can reach internet through the NAT instance.

High availability within the same zones

In a high-availability deployment within the same zones, both VPX instances must have similar networking configurations.

Follow these two rules:

Rule 1. Any NIC on one VPX instance must be in the same subnet as the corresponding NIC in the other VPX. Both instances must have:

- Management interface on the same subnet (referred as management subnet)
- Client interface on the same subnet (referred as client subnet)
- Server interface on the same subnet (referred as server subnet)

Rule 2. Sequence of mgmt NIC, client NIC, and server NIC on both instances must be the same. For example, the following scenario is not supported.

VPX instance 1

NIC 0: management

NIC 1: client

NIC 2: Server

VPX instance 2

NIC 0: management

NIC 1: server

NIC 2: client

In this scenario, NIC 1 of instance 1 is in client subnet while NIC 1 of instance 2 is in server subnet. For HA to work, NIC 1 of both the instances must be either in the client subnet or in the server subnet.

From 13.0 41.xx, high availability can be achieved by migrating secondary private IP addresses attached to the NICs (client and server-side NICs) of the primary HA node to the secondary HA node after failover. In this deployment:

- Both the VPX instances have the same number of NICs and subnet mapping according to NIC enumeration.
- Each VPX NIC has one extra private IP address, except the first NIC - which corresponds to the management IP address. The extra private IP address appears as the primary private IP address in the AWS web console. In our document, we refer to this extra IP address as the dummy IP address).
- The dummy IP addresses must be not configured on the NetScaler instance as VIP and SNIP.
- Other secondary private IP addresses must be created, as required, and configured as VIP and SNIP.
- On failover, the new primary node looks for configured SNIPs and VIPs and moves them from NICs attached to the previous primary to corresponding NICs on the new primary.
- NetScaler instances require IAM permissions for HA to work. Add the following IAM privileges to the IAM policy added to each instance.

```
"iam:GetRole"  
"ec2:DescribeInstances"  
"ec2:DescribeNetworkInterfaces"  
"ec2:AssignPrivateIpAddresses"
```

Note: `unassignPrivateIpAddress` is not required.

This method is faster than the legacy method. In the older method, HA depends on the migration of AWS elastic network interfaces of the primary node to the secondary node.

For a legacy method, the following policies are required:

```
"iam:GetRole"  
"ec2:DescribeInstances"  
"ec2:DescribeAddresses"  
"ec2:AssociateAddress"  
"ec2:DisassociateAddress"
```

For more information, see [Deploy a high availability pair on AWS](#).

High availability across different zones

You can configure two NetScaler VPX instances on two different subnets or two different AWS availability zones, as a high availability active-passive pair in Independent Network Configuration (INC) mode.

Upon failover, the EIP (Elastic IP) of the VIP of the primary instance migrates to the secondary, which takes over as the new primary. In the failover process, the AWS API:

- Checks the virtual servers that have [IPSets](#) attached to them.
- Finds the IP address that has an associated public IP, from the two IP addresses the virtual server is listening on. One that is directly attached to the virtual server, and one that is attached through the IP set.
- Reassociates the public IP (EIP) to the private IP belonging to the new primary VIP.

For HA across different zones, the following policies are required:

```
"iam:GetRole"  
"ec2:DescribeInstances"  
"ec2:DescribeAddresses"  
"ec2:AssociateAddress"  
"ec2:DisassociateAddress"
```

For more information, see [High availability across AWS availability zones](#).

Before you start your deployment

Before you start any HA deployment on AWS, read the following document:

- [Prerequisites](#)
- [Limitations and usage guidelines](#)
- [Deploy a NetScaler VPX instance on AWS](#)
- [High Availability](#)

Troubleshooting

To troubleshoot any failure during a HA failover of NetScaler VPX instance on AWS cloud, check the `cloud-ha-daemon.log` file stored in the `/var/log/` location.

Deploy a VPX HA pair in the same AWS availability zone

March 8, 2024

Note:


From NetScaler release 13.1 build 27.x onwards, the VPX HA pair in the same AWS availability zone supports IPv6 addresses.

You can configure two NetScaler VPX instances on AWS as a HA pair, in the same AWS zone where both VPX instances are on the same subnet. HA is achieved by migrating secondary private IP addresses attached to the NICs (client and server-side NICs) of the primary HA node to the secondary HA node after failover. All the Elastic IP addresses associated with the secondary private IP addresses are also migrated.

The NetScaler VPX HA pair supports both IPv4 and IPv6 addresses in the same AWS availability zone.

The following illustration depicts an HA failover scenario by migrating secondary private IP addresses.

Figure 1. A NetScaler VPX HA Pair on AWS, using private IP migration

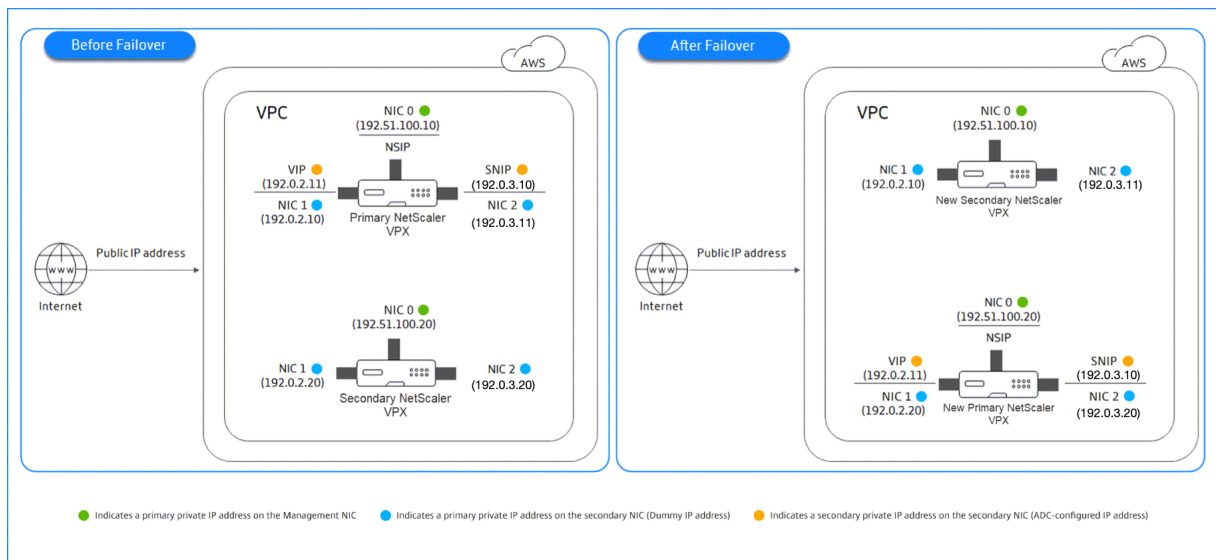

Before you start your document, read the following docs:

- [Prerequisites](#)
- [Limitations and usage guidelines](#)
- [Deploy a NetScaler VPX instance on AWS](#)
- [High Availability](#)

How to deploy a VPX HA pair in the same zone

Here is the summary of the steps to deploy a VPX HA pair in the same zone:

1. Create two VPX instances on AWS, each with three NICs.
2. Assign AWS secondary private IP address to VIP and SNIP of primary node.
3. Configure VIP and SNIP on primary node using AWS secondary private IP addresses.

4. Configure HA on both nodes.

Step 1. Create two VPX instances (primary and secondary nodes) by using the same VPC, each with three NICs (Ethernet 0, Ethernet 1, Ethernet 2)

Follow the steps given in [Deploy a NetScaler VPX instance on AWS by using the AWS web console](#).

Step 2. On the primary node, assign private IP addresses for Ethernet 1 (client IP or VIP) and Ethernet 2 (back-end server IP or SNIP)

The AWS console automatically assigns primary private IP addresses to the configured NICs. Assign more private IP addresses to VIP and SNIP, known as secondary private IP addresses.

To assign a private IP address to a network interface, follow these steps:

1. Open the Amazon EC2 console at <https://console.aws.amazon.com/ec2/>.
2. In the navigation pane, choose **Network Interfaces** and then select the network interface attached to the instance.
3. Choose **Actions > Manage IP Addresses**.
4. Select **IPv4 Addresses** or **IPv6 Addresses** based on your requirement.
5. For IPv4 Addresses:
 - a) Choose **Assign new IP**.
 - b) Enter a specific IPv4 address that's within the subnet range for the instance, or leave the field blank to let Amazon select an IP address for you.
 - c) (Optional) Choose **Allow reassignment** to allow the secondary private IP address to be reassigned if it is already assigned to another network interface.
6. For IPv6 Addresses:
 - a) Choose **Assign new IP**.
 - b) Enter a specific IPv6 address that's within the subnet range for the instance, or leave the field blank to let Amazon select an IP address for you.
 - c) (Optional) Choose **Allow reassignment** to allow the primary or secondary private IP address to be reassigned if it is already assigned to another network interface.
7. Choose **Yes > Update**.

Under the **Instance description**, the assigned private IP addresses appear.

Note:

In an IPv4 HA pair deployment, you can assign only the secondary IPv4 addresses on the interface and use them as VIP and SNIP addresses. But in an IPv6 HA pair deployment, you can assign

either the primary IPv6 or secondary IPv6 addresses on the interface and use them as VIP and SNIP addresses.

Step 3. Configure VIP and SNIP on the primary node, using secondary private IP addresses

Access the primary node using SSH. Open an ssh client and type:

```
1 ssh -i <location of your private key> nsroot@<public DNS of the instance>
```

Next, configure VIP and SNIP.

For VIP, type:

```
1 add ns ip <IPAddress> <netmask> -type <type>
```

For SNIP, type:

```
1 add ns ip <IPAddress> <netmask> -type SNIP
```

Type `save config` to save.

To see the configured IP addresses, type the following command:

```
1 show ns ip
```

For more information, see the following topics:

- [Configuring and Managing Virtual IP \(VIP\) Addresses](#)
- [Configuring the NSIP address](#)

Step 4: Configure HA on both instances

On the primary node, open a Shell client and type the following command:

```
1 add ha node <id> <private IP address of the management NIC of the secondary node>
```

On the secondary node, type the following command:

```
1 add ha node <id> <private IP address of the management NIC of the primary node>
```

Type `save config` to save the configuration.

To see the configured HA nodes, type `show ha node`.

Upon failover, the secondary private IP addresses configured as VIP and SNIP on the previous primary node are migrated to the new primary node.

To force a failover on a node, type `force HAfailover`.

Migrate a legacy HA pair to a new HA pair based on secondary private IP migration

Note:

The legacy method for deploying VPX HA pair that works based on ENI migration is deprecated. Therefore, we recommend you to use the HA pair deployment based on the secondary private IP migration.

To enable seamless migration from legacy HA pair to a new HA pair based on secondary private IP migration, ensure the following:

1. Both the primary and secondary nodes must have the same number of interfaces, and these interfaces must be in the same subnets.
2. The VIP and SNIP configured as primary private IP address in the legacy method, must be migrated to a secondary private IP address in the new method.
3. IAM permissions required for the new HA deployment must be added to the primary and secondary NetScaler instances.
4. Reboot both the primary and secondary NetScaler instances.

For more information, see [High availability within the same zones](#).

Deploy a high availability pair by using the Citrix CloudFormation template

Before starting the CloudFormation template, ensure that you complete the following requirements:

- A VPC
- Three subnets within the VPC
- A security group with UDP 3003, TCP 3009–3010, HTTP, SSH ports open
- A key pair
- Create an internet gateway
- Edit route tables for client and management networks to point to the internet gateway


Note:

The Citrix CloudFormation template automatically creates an IAM Role. Existing IAM Roles do not appear in the template.


To launch the Citrix CloudFormation template:

1. Log on to the [AWS marketplace](#) by using your AWS credentials.

2. In the search field, type **NetScaler VPX** to search for the NetScaler AMI, and click **Go**.
3. On the search result page, click the desired NetScaler VPX offering.
4. Click the **Pricing** tab, to go to **Pricing Information**.
5. Select the region and **Fulfillment Option** as **NetScaler VPX –Customer Licensed**.
6. Click **Continue to Subscribe**.
7. Check the details in the **Subscribe** page and click **Continue to Configuration**.
8. Select **Delivery Method** as **CloudFormation Template**.
9. Select the required CloudFormation template.
10. Select **Software Version** and **Region**, and click **Continue to Launch**.

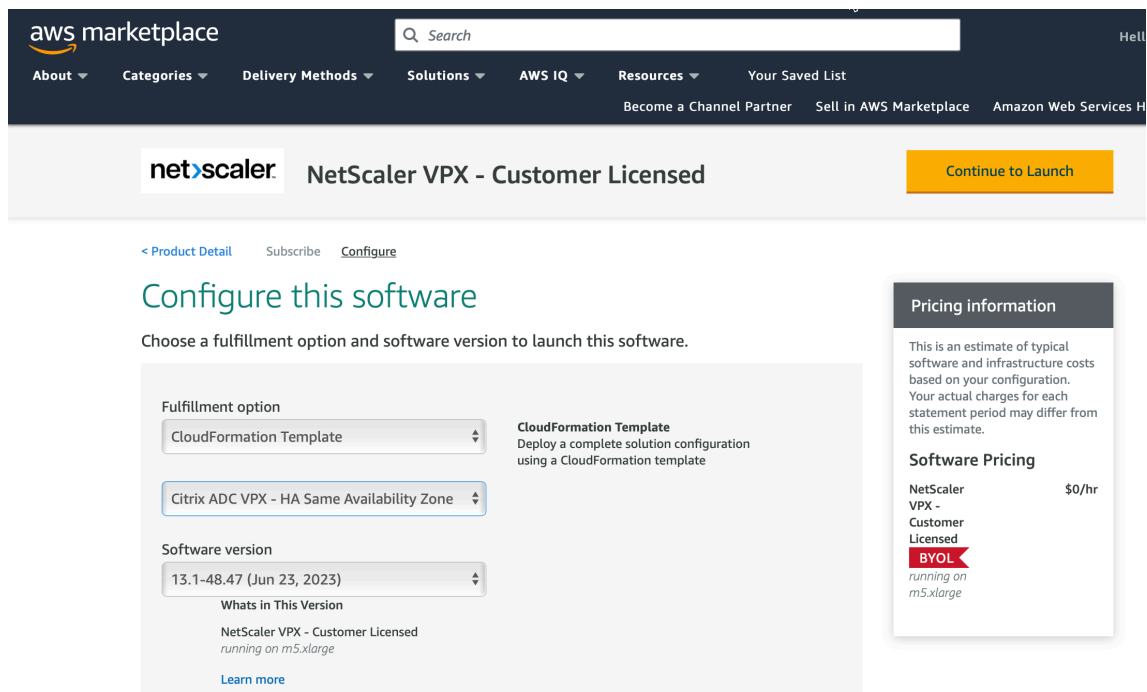


11. Under **Choose Action**, select **Launch CloudFormation**, and click **Launch**.
The **Create stack** page appears.
12. Click **Next**.

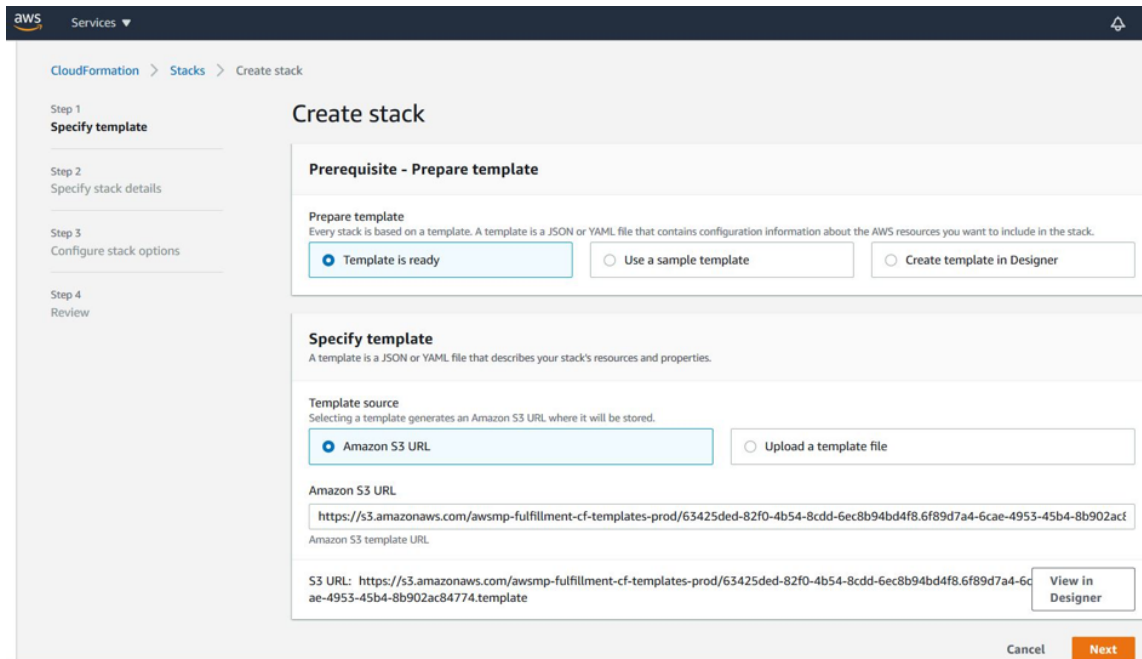


13. The **Specify stack details** page appears. Enter the following details.

- Type a **Stack name**. The name must be within 25 characters.
- Under **Network Configuration**, perform the following:
 - Select **Management Subnetwork**, **Client Subnetwork**, and **Server Subnetwork**. Ensure that you select the correct subnetworks you created within the VPC that you selected under VPC ID.
 - Add **Primary Management IP**, **Secondary Management IP**, **Client IP**, and **Server IP**. The IP addresses must belong to the same subnets of the respective subnetworks. Alternatively, you can let the template assign the IP addresses automatically.
 - Select **default** for **VPCTenancy**.
- Under **NetScaler Configuration**, perform the following:
 - Select **m5.xlarge** for **Instance type**.
 - Select the key pair that you've already created from the menu for **Key Pair**.
 - By default, the **Publish custom metrics to CloudWatch?** option is set to **Yes**. If you want to disable this option, select **No**.
For more information about CloudWatch metrics, see Monitor your instances using Amazon CloudWatch.
- Under **Optional Configuration**, do the following:
 - By default, the **Should publicIP(EIP) be assigned to management interfaces?** option is set to **No**.
 - By default, the **Should publicIP(EIP) be assigned to client interface?** option is set to **No**.

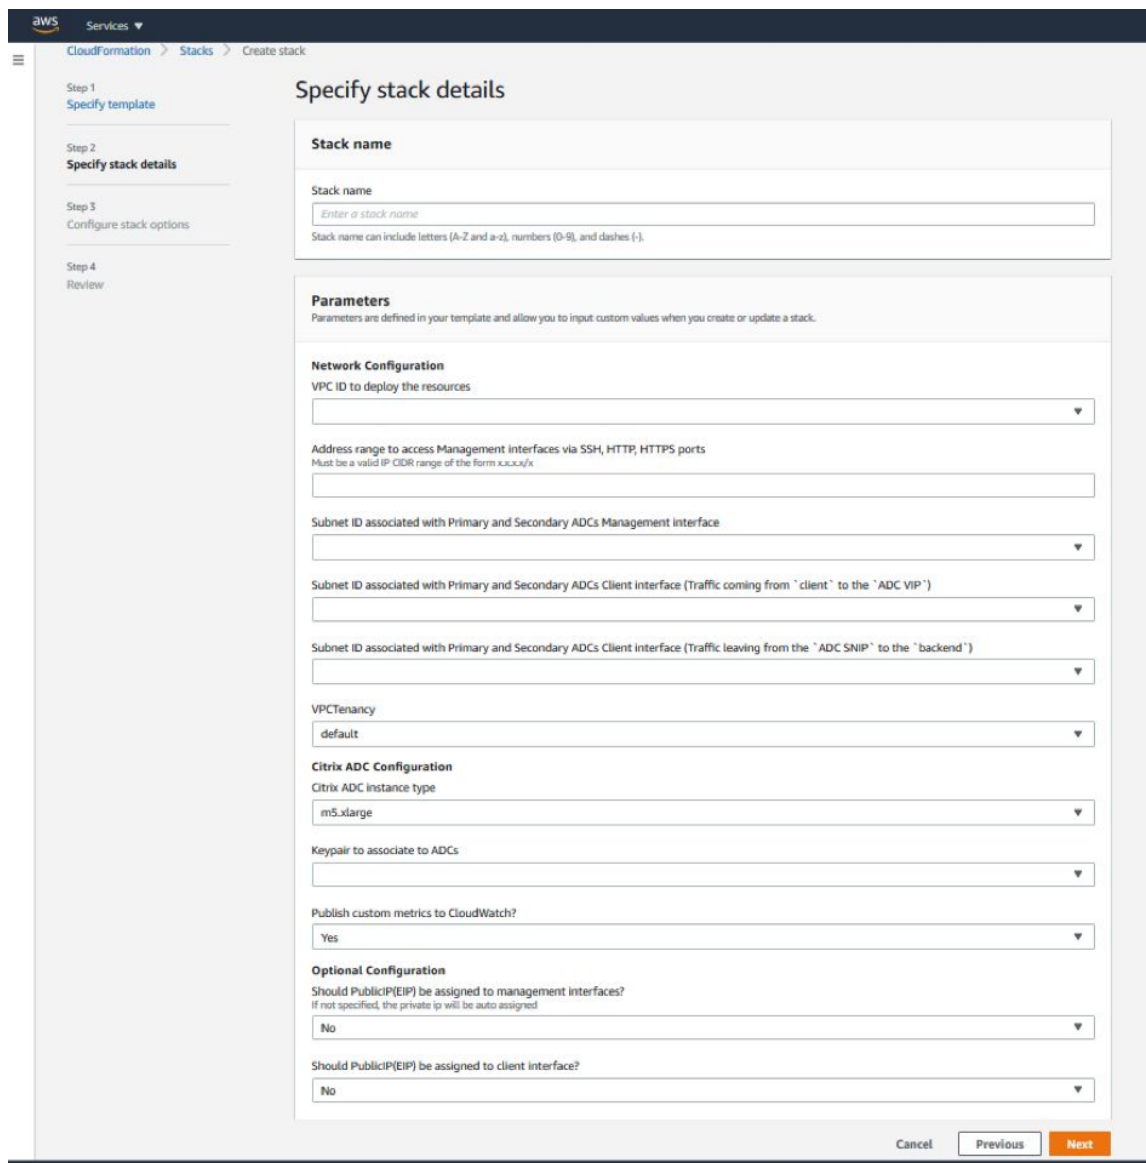


14. Click **Next**.


15. The **Configure stack options** page appears. This is an optional page.

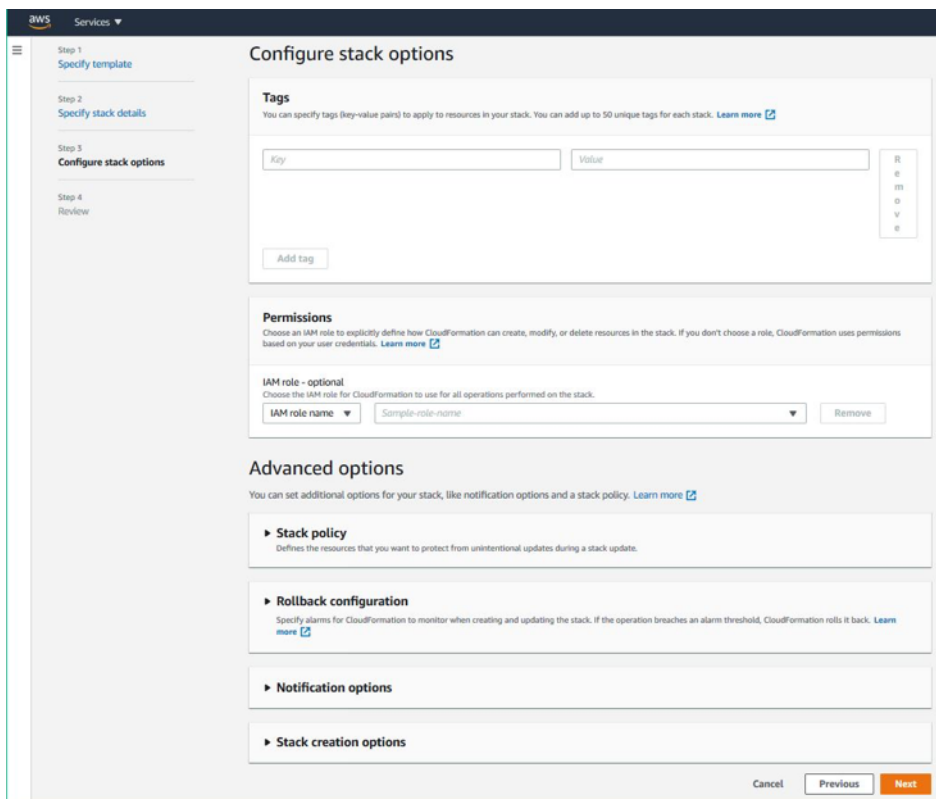

16. Click **Next**.
17. The **Options** page appears. (This is an optional page.). Click **Next**.
18. The **Review** page appears. Take a moment to review the settings and make any changes, if necessary.
19. Select the **I acknowledge that AWS CloudFormation might create IAM resources.** check box, and then click **Create stack**.
20. The **CREATE-IN-PROGRESS** status appears. Wait until the status is **CREATE-COMplete**. If the status does not change to **COMPLETE**, check the **Events** tab for the reason of failure, and recreate the instance with proper configurations.

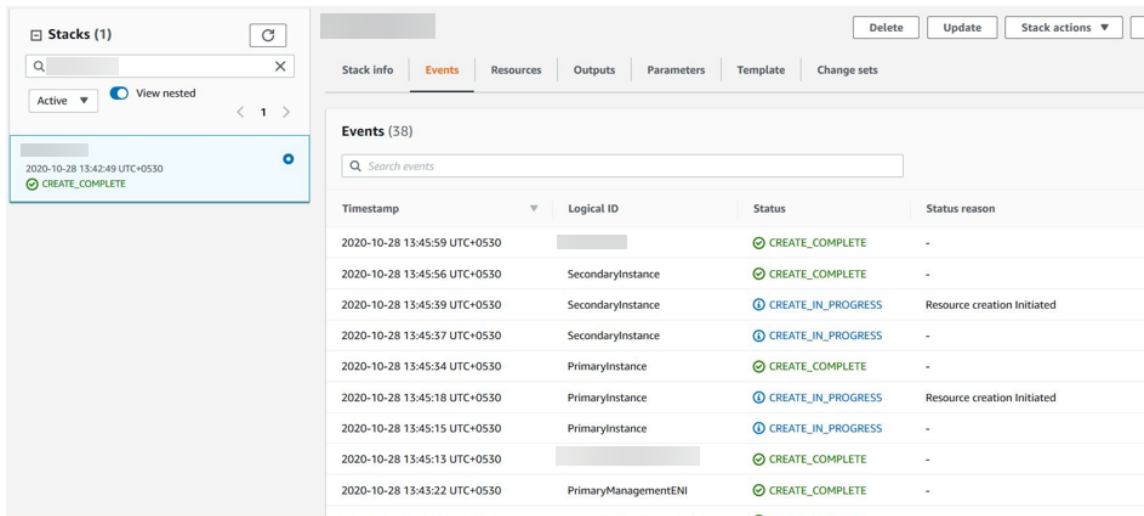

21. After an IAM resource is created, navigate to **EC2 Management Console > Instances**. You find two VPX instances created with IAM role. The primary and secondary nodes are created each with three private IP addresses and three network interfaces.
22. Log on to the primary node with user name `nsroot` and the instance ID as the password. From the GUI, navigate to **System > High Availability > Nodes**. The NetScaler VPX is already configured in HA pair by the CloudFormation template.
23. The NetScaler VPX HA pair appears.

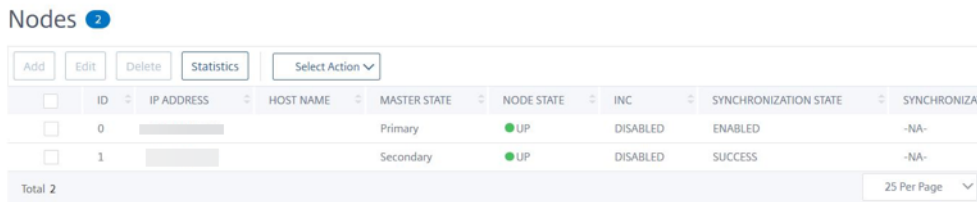

Monitor your instances using Amazon CloudWatch

You can use the Amazon CloudWatch service to monitor a set of NetScaler VPX metrics such as CPU and memory utilization, and throughput. CloudWatch monitors resources and applications that run on AWS, in real time. You can access the Amazon CloudWatch dashboard by using the AWS Management console. For more information, see [Amazon CloudWatch](#).

Points to note


- If you deploy a NetScaler VPX instance on AWS by using the AWS web console, the CloudWatch service is enabled by default.

- If you deploy a NetScaler VPX instance by using the Citrix CloudFormation template, the default option is “Yes.” If you want to disable the CloudWatch service, select “No.”
- Metrics are available for CPU (management and packet CPU usage), memory, and throughput (inbound and outbound).


How to view CloudWatch metrics

To view CloudWatch metrics for your instance, follow these steps:

1. Log on to **AWS Management console > EC2 > Instances**.
2. Select the instance.
3. Click **Monitoring**.
4. Click **View all CloudWatch metrics**.

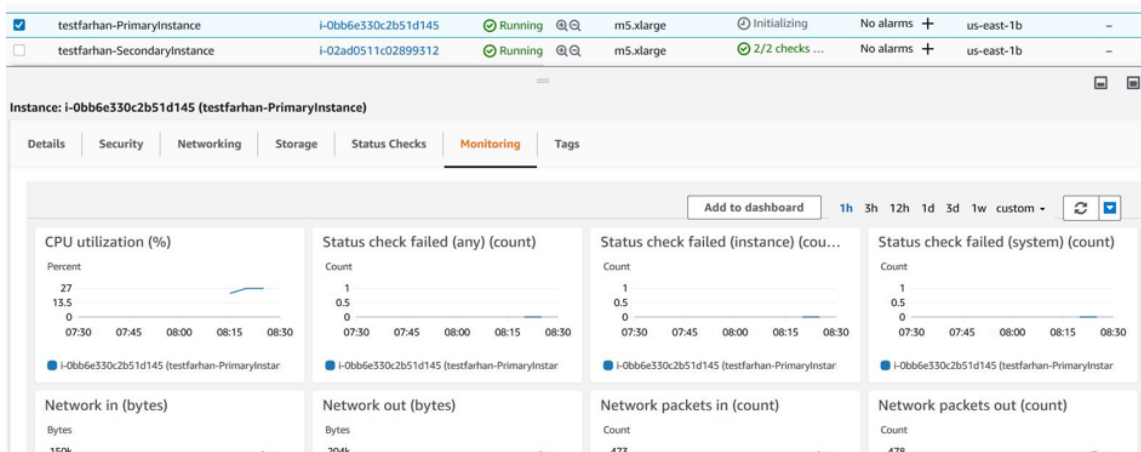


5. Under All metrics, click your instance ID.

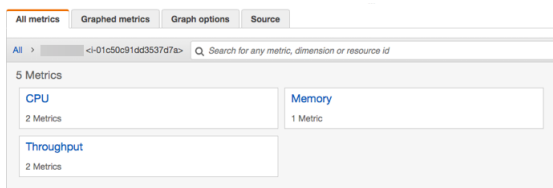

6. Click the metrics that you want to view, set the duration (by minutes, hours, days, weeks, months).
7. Click **Graphed metrics** to view the statistics of usage. Use the **Graph options** to customize your graph.

Figure. Graphed metrics for CPU usage

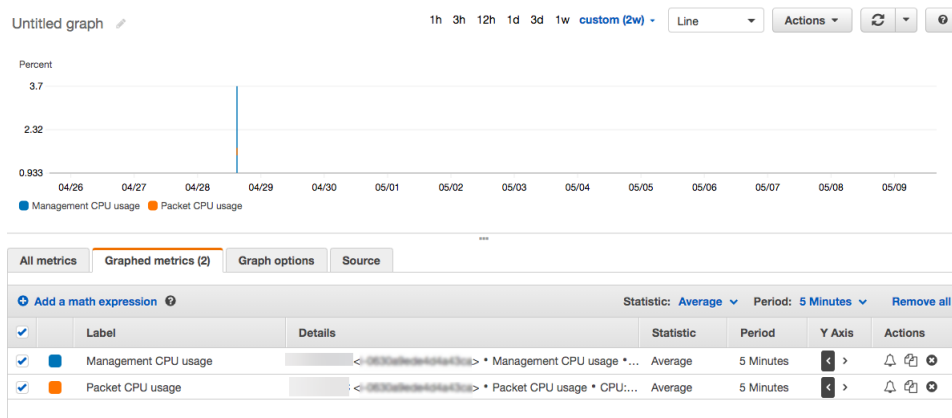

Configuring SR-IOV on a high availability setup

Support for SR-IOV interfaces in a high availability setup is available from NetScaler release 12.0 57.19 onwards. For more information about how to configure SR-IOV, see [Configuring NetScaler VPX instances to Use SR-IOV Network Interface](#).

Related resources

[How high availability on AWS works](#)

High availability across different AWS availability zones

May 2, 2023

You can configure two NetScaler VPX instances on two different subnets or two different AWS availability zones, as a high availability active-passive pair in Independent Network Configuration (INC) mode. If for any reason, the primary node is unable to accept connections, the secondary node takes over.

For more information about high availability, see [High availability](#). For more information about INC, see [Configuring high availability nodes in different subnets](#).

Points to note

- Read the following documents before you start your deployment:
 - [AWS terminology](#)
 - [Prerequisites](#)
 - [Limitations and usage guidelines](#)

- The VPX high availability pair can either reside in the same availability zone in a different subnet or in two different AWS availability zones.
- Citrix recommends that you use different subnets for management (NSIP), client traffic (VIP), and back-end server (SNIP).
- High availability must be set in Independent Network Configuration (INC) mode for a failover to work.
- The two instances must have port 3003 open for UDP traffic as that is used for heartbeats.
- The management subnets of both the nodes must have access to internet or to AWS API server through internal NAT so that the rest APIs are functional.
- IAM role must have E2 permission for the public IP or elastic IP (EIP) migration and EC2 Route Table permissions for the private IP migration.

You can deploy high availability across AWS availability zones in the following ways:

- [Using elastic IP addresses](#)
- [Using private IP addresses](#)

Additional References

For more information on NetScaler Application Delivery Management (ADM) for AWS, see [Install the NetScaler Console agent on AWS](#).

Deploy a VPX high-availability pair with elastic IP addresses across different AWS zones

May 2, 2023

You can configure two NetScaler VPX instances on two different subnets or two different AWS availability zones using elastic IP (EIP) addresses in the INC mode.

For more information about high availability, see [High availability](#). For more information about INC, see [Configuring high availability nodes in different subnets](#).

How HA with EIP addresses across different AWS zones works

Upon failover, the EIP of the VIP of the primary instance migrates to the secondary, which takes over as the new primary. In the failover process, AWS API:

1. Checks the virtual servers that have [IPSets](#) attached to them.

2. Finds the IP address that has an associated public IP, from the two IP addresses the virtual server is listening on. One that is directly attached to the virtual server, and the one that is attached through the IP set.
3. Reassociates the public IP (EIP) to the private IP belonging to the new primary VIP.

Note

To protect your network from attacks such as denial-of-service (DoS), when using an EIP, you can create security groups in AWS to restrict the IP access. For high availability, you can switch from EIP to a private IP movement solution as per your deployments.

How to deploy a VPX high-availability pair with elastic IP addresses across different AWS zones

The following is the summary of steps for deploying a VPX pair on two different subnets or two different AWS availability zones.

1. Create an Amazon virtual private cloud.
2. Deploy two VPX instances in two different availability zones or in the same zone but in different subnets.
3. Configure high availability
 - a) Set up high availability in INC mode in both the instances.
 - b) Add an [IP set](#) in both the instances.
 - c) Bind the IP set in both the instances to the VIP.
 - d) Add a virtual server in the primary instance.

For steps 1 and 2, use the AWS console. For steps 3, use the NetScaler VPX GUI or the CLI.

Step 1. Create an Amazon virtual private cloud (VPC).

Step 2. Deploy two VPX instance in two different availability zones or in the same zone but in different subnets. Attach an EIP to the VIP of the primary VPX.

For more information about how to create a VPC and deploy a VPX instance on AWS, see [Deploy a NetScaler VPX standalone instance on AWS](#) and [Scenario: standalone instance](#)

Step 3. Configure high availability. You can use the NetScaler VPX CLI or the GUI to set up high availability.

Configure high availability by using the CLI

1. Set up high availability in INC mode in both the instances.

On the primary node:

```
add ha node 1 <sec_ip> -inc ENABLED
```

On the secondary node:

```
add ha node 1 <prim_ip> -inc ENABLED
```

<sec_ip> refers to the private IP address of the management NIC of the secondary node

<prim_ip> refers to the private IP address of the management NIC of the primary node

2. Add the IP set in both the instances.

Type the following command on both the instances.

```
add ipset <ipsetname>
```

3. Bind the IP set to the VIP set on both the instances.

Type the following command on both the instances:

```
add ns ip <secondary vip> <subnet> -type VIP
```

```
bind ipset <ipsetname> <secondary VIP>
```

Note

You can bind the IP set to the primary VIP or to the secondary VIP. However, if you bind the IP set to the primary VIP, use the secondary VIP to add to the virtual server, and conversely.

4. Add a virtual server on the primary instance.

Type the following command:

```
add <server_type> vserver <vserver_name> <protocol> <primary_vip>  
<port> -ipset \<ipset_name>
```

Configure high availability by using the GUI

1. Set up high availability in INC mode on both the instances
2. Log on to the primary node with user name `nsroot` and instance ID as password.
3. From the GUI, go to **Configuration > System > High Availability**. Click **Add**.
4. At the **Remote Node IP address** field, add the private IP address of the management NIC of the secondary node.
5. Select **Turn on NIC (Independent Network Configuration)** mode on self-node.
6. Under **Remote System Login Credential**, add the user name and password for the secondary node and click **Create**.
7. Repeat the steps in the secondary node.

8. Add IP set and bind IP set to the VIP set on both the instances.
9. From the GUI, navigate to **System > Network > IPs > Add**.
10. Add the required values for IP Address, Netmask, IP Type (virtual IP) and click **Create**.
11. Navigate to **System > Network > IP Sets > Add**. Add an IP set name and click **Insert**.
12. From the IPv4s page, select the virtual IP and click **Insert**. Click **Create** to create the IP set.
13. Add a virtual server in the primary instance

From the GUI, go to **Configuration > Traffic Management > Virtual Servers > Add**.


Load Balancing Virtual Server | [Export as a Template](#)

Basic Settings	
Name	vserver1
Protocol	HTTP
State	● DOWN
IP Address	192.168.2.129
Port	80
Traffic Domain	0
Listen Priority	-
Listen Policy Expression	NONE
Redirection Mode	IP
Range	1
IPset	ipset123
RHI State	PASSIVE
AppFlow Logging	ENABLED
Retain Connections on Cluster	NO

Scenario

In this scenario, a single VPC is created. In that VPC, two VPX instances are created in two availability zones. Each instance has three subnets - one for management, one for client, and one for back-end server. An EIP is attached to the VIP of the primary node.

Diagram: This diagram illustrates the NetScaler VPX high availability setup in INC mode, on AWS

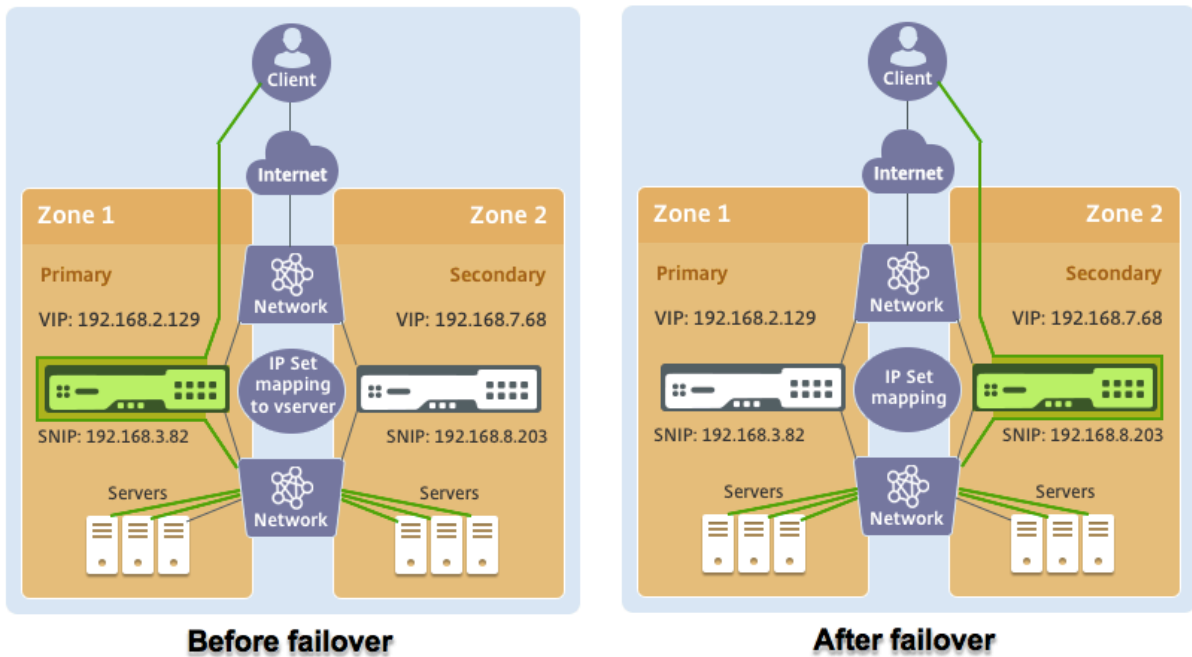

For this scenario, use CLI to configure high availability.

1. Set up high availability in INC mode on both the instances.

Type the following commands on the primary and the secondary nodes.

On primary:

```
add ha node 1 192.168.6.82 -inc enabled
```

Here, 192.168.6.82 refers to the private IP address of the management NIC of the secondary node.

On secondary:

```
add ha node 1 192.168.1.108 -inc enabled
```

Here, 192.168.1.108 refers to the private IP address of the management NIC of the primary node.

2. Add an IP set and bind the IP set to the VIP on both the instances

On primary:

```
add ipset ipset123
add ns ip 192.168.7.68 255.255.255.0 -type VIP
bindipset ipset123 192.168.7.68
```

On secondary:

```
add ipset ipset123
add ns ip 192.168.7.68 255.255.255.0 -type VIP
```

```
bind ipset ipset123 192.168.7.68
```

3. Add a virtual server on the primary instance.

The following command:

```
add lbvserver vserver1 http 192.168.2.129 80 -ipset ipset123
```

4. Save the configuration.

	ID	IP Address	Host Name	Master State	Node State	INC	Synchronization State
<input type="checkbox"/>	0	192.168.1.108		Primary	● UP	ENABLED	ENABLED
<input type="checkbox"/>	1	192.168.6.82		Secondary	● UP	ENABLED	SUCCESS

5. After a forced failover, the secondary becomes the new primary.

	ID	IP Address	Host Name	Master State	Node State	INC	Synchronization State
<input type="checkbox"/>	0	192.168.1.108		Secondary	● UP	ENABLED	SUCCESS
<input type="checkbox"/>	1	192.168.6.82		Primary	● UP	ENABLED	ENABLED

Deploy a VPX high-availability pair with private IP addresses across different AWS zones

September 21, 2023

You can configure two NetScaler VPX instances on two different subnets or two different AWS availability zones using private IP addresses in the INC mode. This solution can be easily integrated with the existing multizone [VPX high-availability pair with elastic IP addresses](#). Therefore, you can use both the solutions together.

For more information about high availability, see [High availability](#). For more information about INC, see [Configuring high availability nodes in different subnets](#).

Note:

This deployment is supported from NetScaler release 13.0 build 67.39 onwards. This deployment is compatible with AWS Transit Gateway.

High availability pair with private IP addresses using AWS non-shared VPC

Prerequisites

Ensure that the IAM role associated with your AWS account has the following IAM permissions:

```
1 {
2
3     "Version": "2012-10-17",
4     "Statement": [
5         {
6
7             "Action": [
8                 "ec2:DescribeInstances",
9                 "ec2:DescribeAddresses",
10                "ec2:AssociateAddress",
11                "ec2:DisassociateAddress",
12                "ec2:DescribeRouteTables",
13                "ec2>DeleteRoute",
14                "ec2:CreateRoute",
15                "ec2:ModifyNetworkInterfaceAttribute",
16                "iam:SimulatePrincipalPolicy",
17                "iam:GetRole"
18            ],
19            "Resource": "*",
20            "Effect": "Allow"
21        }
22    ]
23 }
24 }
```

Deploy a VPX HA pair with private IP addresses using AWS non-shared VPC

The following is the summary of steps for deploying a VPX pair on two different subnets or two different AWS availability zones using private IP addresses.

1. Create an Amazon virtual private cloud.
2. Deploy two VPX instances in two different availability zones.
3. Configure high availability
 - a) Set up high availability in INC mode in both the instances.
 - b) Add the respective route tables in the VPC that points to the client interface.
 - c) Add a virtual server in the primary instance.

For steps 1, 2, and 3b, use the AWS console. For steps 3a and 3c, use the NetScaler VPX GUI or the CLI.

Step 1. Create an Amazon virtual private cloud (VPC).

Step 2. Deploy two VPX instance in two different availability zones with the same number of ENI (Network Interface).

For more information about how to create a VPC and deploy a VPX instance on AWS, see [Deploy a NetScaler VPX standalone instance on AWS](#) and [Scenario: standalone instance](#)

Step 3. Configure the ADC VIP addresses by choosing a subnet that does not overlap with the Amazon VPC subnets. If your VPC is 192.168.0.0/16, then to configure ADC VIP addresses, you can choose any subnet from these IP address ranges:

- 0.0.0.0 - 192.167.0.0
- 192.169.0.0 - 254.255.255.0

In this example, the chosen 10.10.10.0/24 subnet and created VIPs in this subnet. You can choose any subnet other than the VPC subnet (192.168.0.0/16).

Step 4. Add a route that points to the client interface (VIP) of the primary node from the VPC route table.

From the AWS CLI, type the following command:

```
1 aws ec2 create-route --route-table-id rtb-2272532 --destination-cidr-block 10.10.10.0/24 --gateway-id <eni-client-primary>
```

From the AWS GUI, perform the following steps to add a route:

1. Open the [Amazon EC2 console](#).
2. In the navigation pane, choose **Route Tables**, and select the route table.
3. Choose **Actions**, and click **Edit routes**.
4. To add a route, choose **Add route**. For **Destination**, enter the destination CIDR block, a single IP address, or the ID of a prefix list. For gateway ID, select the ENI of a client interface of the primary node.


Destination	Target
192.168.0.0/16	local
0.0.0.0/0	igw-0b6da15e72de5729e
10.10.10.0/24	eni-09ad18f01f854b8ab
5.5.0.0/16	eni-09ad18f01f854b8ab

Note:

You must disable **Source/Dest Check** on the client ENI of the primary instance.

To disable the source/destination checking for a network interface using the console, perform the following steps:

1. Open the [Amazon EC2 console](#).
2. In the navigation pane, choose **Network Interfaces**.
3. Select the network interface of a primary client interface, and choose **Actions**, and click **Change Source/Dest. Check**.
4. In the dialog box, choose **Disabled**, click **Save**.

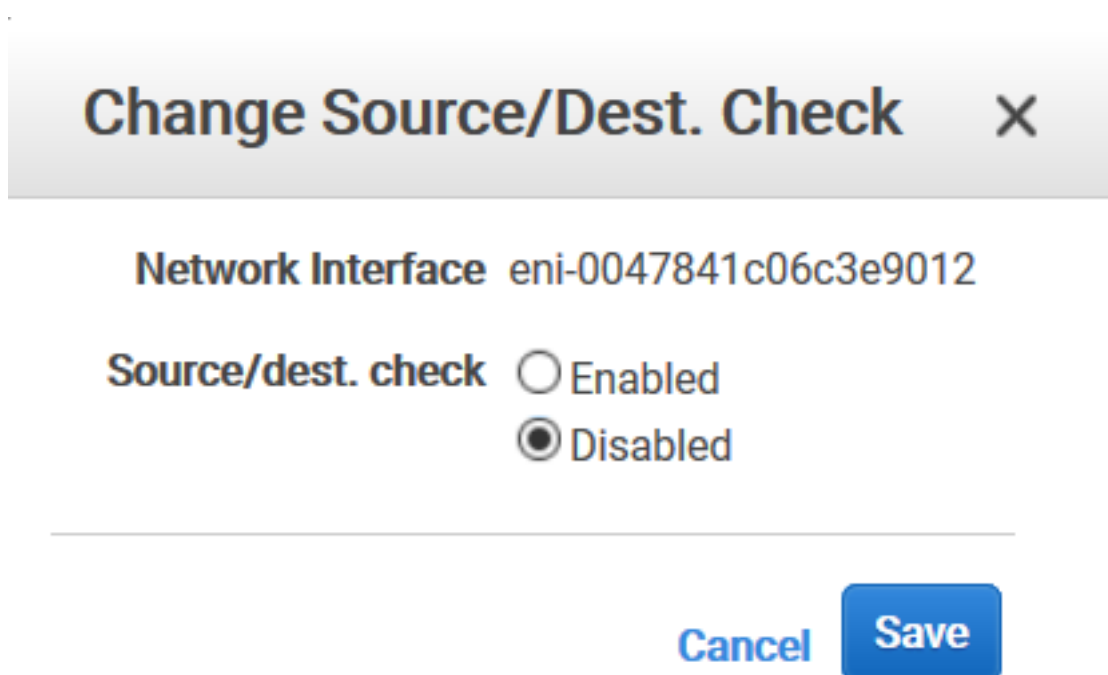

Step 5. Configure high availability. You can use the NetScaler VPX CLI or the GUI to set up high availability.

Configure high availability by using the CLI

1. Set up high availability in INC mode in both the instances.

On the primary node:

```
1 add ha node 1 \<sec\_ip\> -inc ENABLED
```

On the secondary node:

```
1 add ha node 1 \<prim\_ip\> -inc ENABLED
```

<sec_ip> refers to the private IP address of the management NIC of the secondary node.

<prim_ip> refers to the private IP address of the management NIC of the primary node.

2. Add a virtual server on the primary instance. You must add it from the chosen subnet, for example, 10.10.10.0/24.

Type the following command:

```
1 add \<server\_type\> vserver \<vserver\_name\> \<protocol\> \<primary\_vip\> \<port\>
```

Configure high availability by using the GUI

1. Set up high availability in INC mode on both the instances
2. Log on to the primary node with user name `nsroot` and instance ID as password.
3. Navigate to **Configuration > System > High Availability**, and click **Add**.
4. At the **Remote Node IP address** field, add the private IP address of the management NIC of the secondary node.
5. Select **Turn on NIC (Independent Network Configuration)** mode on self-node.
6. Under **Remote System Login Credential**, add the user name and password for the secondary node and click **Create**.
7. Repeat the steps in the secondary node.
8. Add a virtual server in the primary instance

Navigate to **Configuration > Traffic Management > Virtual Servers > Add**.

← Load Balancing Virtual Server

Load Balancing Virtual Server | [Export as a Template](#)

Basic Settings	
Name	My LB
Protocol	HTTP
State	● UP
IP Address	10.10.10.10
Port	80
Traffic Domain	0
Listen Priority	-
Listen Policy Expression	NONE
Redirection Mode	IP
Range	1
IPSet	-
RHI State	PASSIVE
AppFlow Logging	ENABLED
Retain Connections on Cluster	NO
TCP Probe Port	-

Services and Service Groups

- 1 Load Balancing Virtual Server Service Binding

Deploy a VPX HA pair with private IP addresses using AWS shared VPC

In an AWS shared VPC model, the account that owns the VPC (owner) shares one or more subnets with other accounts (participants). Therefore, you have a VPC owner account and a participant account. After a subnet is shared, the participants can view, create, modify, and delete their application resources in the subnets shared with them. Participants cannot view, modify, or delete resources that belong to other participants or the VPC owner.

For information on AWS shared VPC, see the [AWS documentation](#).

Note:

The configuration steps for deploying a VPX HA pair with private IP addresses using AWS shared VPC is the same as the Deploy a VPX HA pair with private IP addresses using AWS non-shared VPC with the following exception:

- The route tables in the VPC that points to the client interface must be added from the *VPC owner account*.

Prerequisites

- Ensure that the IAM role associated with NetScaler VPX instance in the AWS participant account has the following IAM permissions:

```

1  "Version": "2012-10-17",
2    "Statement": [
3      {
4
5          "Sid": "VisualEditor0",
6          "Effect": "Allow",
7          "Action": [
8              "ec2:DisassociateAddress",
9              "iam:GetRole",
10             "iam:SimulatePrincipalPolicy",
11             "ec2:DescribeInstances",
12             "ec2:DescribeAddresses",
13             "ec2:ModifyNetworkInterfaceAttribute",
14             "ec2:AssociateAddress",
15             "sts:AssumeRole"
16         ],
17         "Resource": "*"
18     }
19 ]
20 }
21 }
```

Note:

The **AssumeRole** allows NetScaler VPX instance to assume the cross-account IAM role, which is created by the VPC owner account.

- Ensure that the VPC owner account provides the following IAM permissions to the participant account using cross-account IAM role:

```


1  {
2
3      "Version": "2012-10-17",
4      "Statement": [
5          {
6
7              "Sid": "VisualEditor0",
8              "Effect": "Allow",
9              "Action": [
10                 "ec2:CreateRoute",
11                 "ec2:DeleteRoute",
12                 "ec2:DescribeRouteTables"
13             ],
14             "Resource": "*"
15         }
16     ]
17 }
18 }
```

Create cross-account IAM role


1. Log in to the AWS web console.
2. In the **IAM** tab, navigate to **Roles** and then choose **Create Role**.
3. Choose **Another AWS account**.

Create role


Select type of trusted entity



AWS service
EC2, Lambda and others



Another AWS account
Belonging to you or 3rd party



Web identity
Cognito or any OpenID provider

Allows entities in other accounts to perform actions in this account. [Learn more](#)

Specify accounts that can use this role

Account ID*

4. Enter the 12-digit account ID number of the participant account that you want to grant administrator access to.


Set cross-account IAM role by using the NetScaler CLI

The following command enables NetScaler VPX instance to assume the cross-account IAM role that exists in the VPC owner account.

```
1 set cloud awsParam -roleARN <string>
```

Set cross-account IAM role by using the NetScaler GUI

1. Sign into NetScaler appliance and navigate to **Configuration > AWS > Change cloud parameters**.

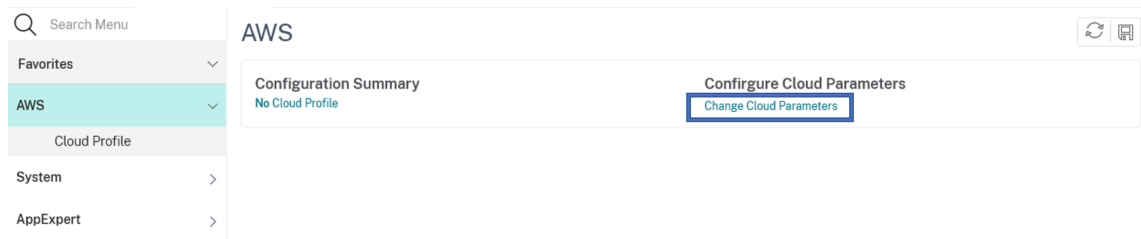

2. In the **Configure AWS Cloud Parameters** page, enter the value for the **RoleARN** field.


← Configure AWS Cloud Parameters


neo.rolearn

Scenario

In this scenario, a single VPC is created. In that VPC, two VPX instances are created in two availability zones. Each instance has three subnets - one for management, one for client, and one for back-end server.

The following diagrams illustrate the NetScaler VPX high availability setup in INC mode, on AWS. The custom subnet 10.10.10.10, which is not part of the VPC is used as VIP. Therefore, the 10.10.10.10 subnet can be used across availability zones.

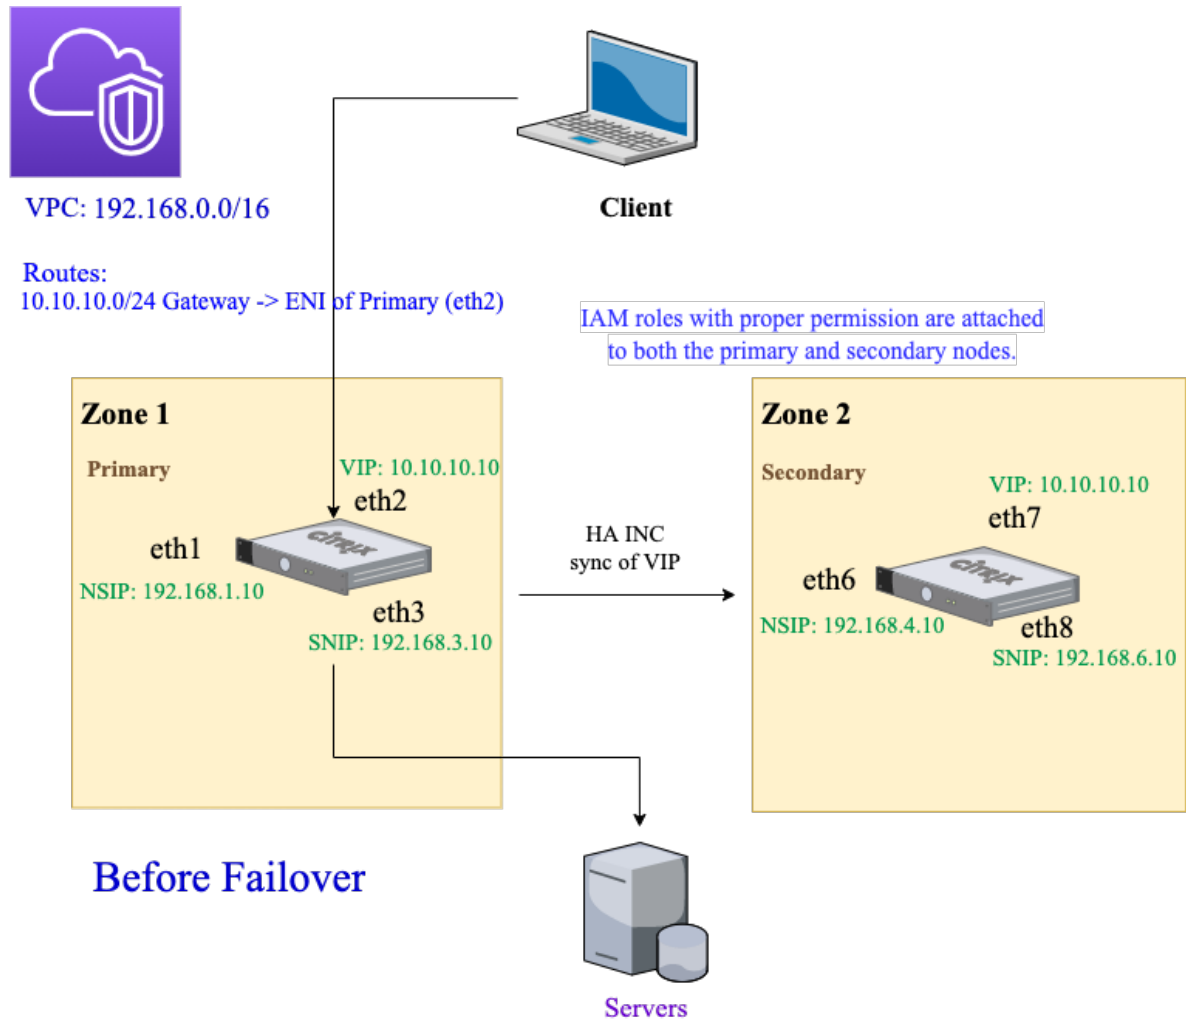

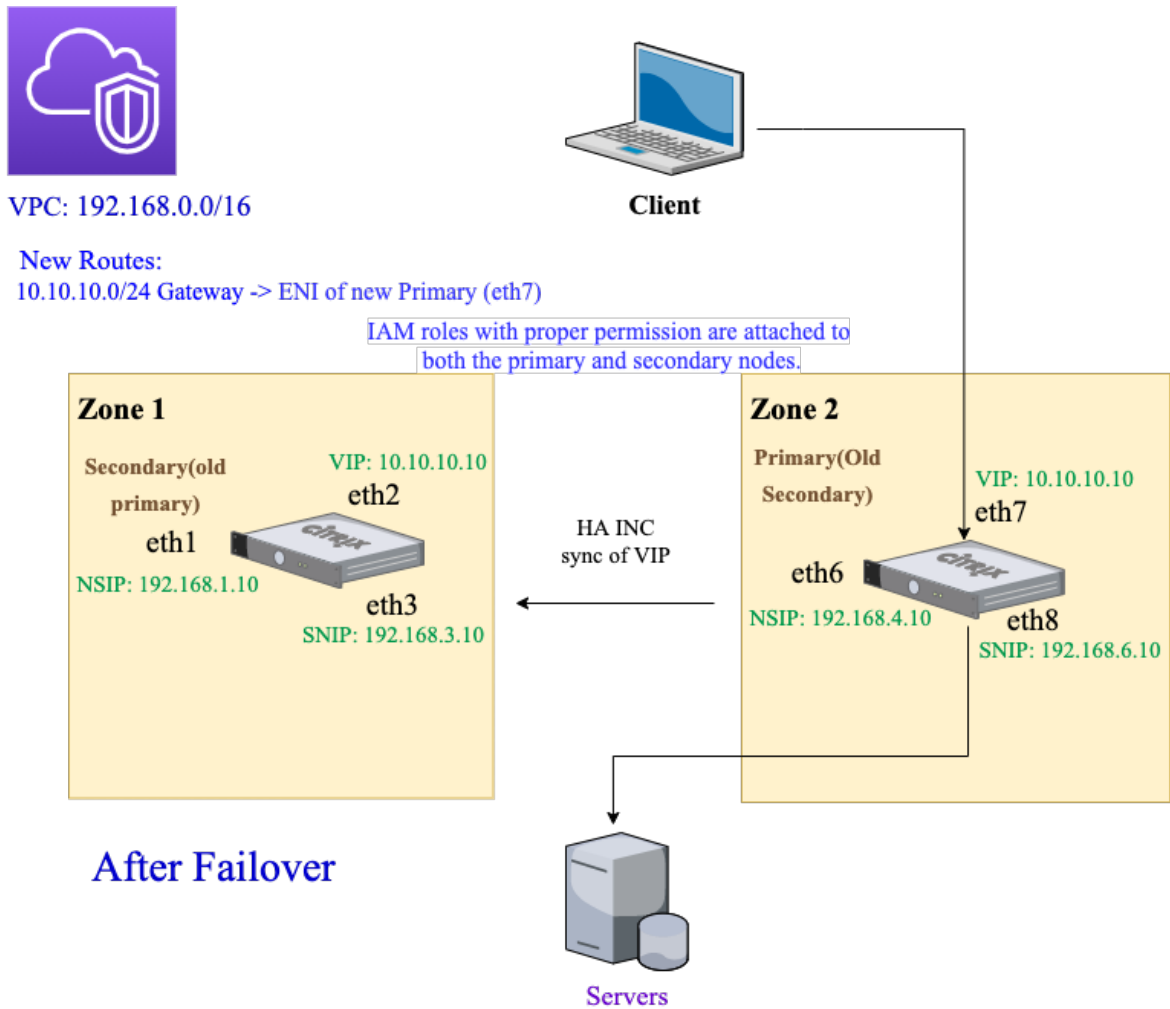

For this scenario, use CLI to configure high availability.

1. Set up high availability in INC mode on both the instances.

Type the following commands on the primary and the secondary nodes.

On the primary node:

```
1 add ha node 1 192.168.4.10 -inc enabled
```

Here, 192.168.4.10 refers to the private IP address of the management NIC of the secondary node.

On the secondary node:

```
1 add ha node 1 192.168.1.10 -inc enabled
```

Here, 192.168.1.10 refers to the private IP address of the management NIC of the primary node.

2. Add a virtual server on the primary instance.


Type the following command:

```
1 add lbvserver vserver1 http 10.10.10.10 80
```

3. Save the configuration.
4. After a forced failover:
 - The secondary instance becomes the new primary instance.
 - The VPC route pointing to the primary ENI migrates to the secondary client ENI.
 - Client traffic resumes to the new primary instance.


AWS Transit Gateway configuration for HA private IP solution

You need AWS Transit Gateway to make the private VIP subnet routable within the internal network, across AWS VPCs, regions, and On-premises networks. The VPC must connect to AWS Transit Gateway. A static route for the VIP subnet or IP pool inside the AWS Transit Gateway route table is created and pointed towards the VPC.

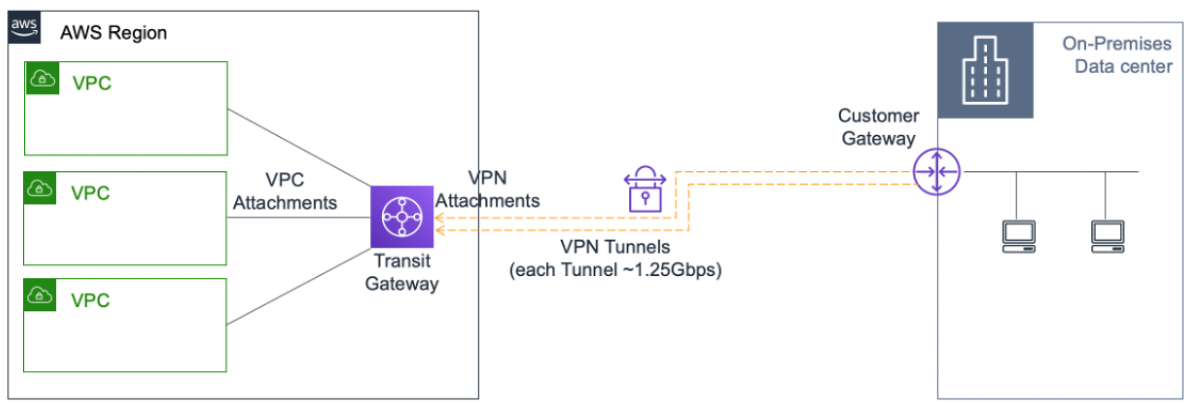

To configure AWS Transit Gateway, follow these steps:

1. Open the [Amazon VPC console](#).
2. On the navigation pane, choose **Transit Gateway Route Tables**.
3. Choose the **Routes** tab, and click **Create static route**.

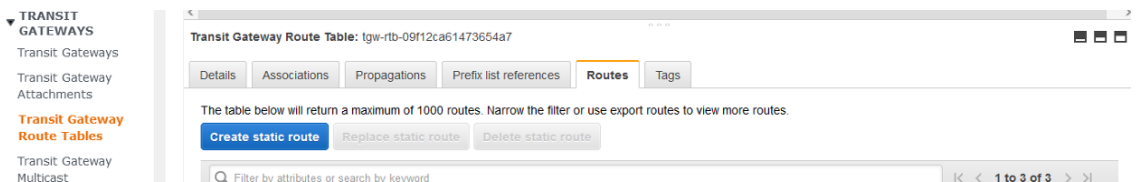

4. Create a static route where CIDR points to your private VIPS subnet and attachment points to the VPC having NetScaler VPX.

Transit Gateway Route Tables > Create static route

Create static route

Add a static route to your Transit Gateway route table.

Transit Gateway ID `tgw-0b3e99191e03c16ed`

Transit Gateway route table ID `tgw-rtb-09f12ca61473654a7`

CIDR*

Blackhole

Choose attachment

* Required

Cancel [Create static route](#)

5. Click **Create static route**, then choose **Close**.

Troubleshooting

If you face any issues while configuring HA private IP solution across multizone HA, check the following key points for troubleshooting:

- Both primary and secondary nodes have the same set of IAM permissions.
- INC mode is enabled on both the primary and secondary nodes.
- Both primary and secondary nodes have the same number of interfaces.
- While creating an instance, follow the same sequence of attaching interfaces on both primary and secondary nodes based on the device index number. Let's say on a primary node, the client interface is attached first and the server interface is attached second. Follow the same sequence on the secondary node as well. If there is any mismatch, detach and reattach the interfaces in the correct order.
- You can verify the sequence of interfaces by following this navigation path: **AWS console > Network & Security > ENI > Device Index number**.

By default, the following device index numbers are assigned to these interfaces:

- Management interface -0
 - Client interface -1
 - Server interface -2
- If the sequence of device index numbers on primary ENI is: 0, 1, 2. The secondary ENI must also follow the same sequence of device index numbers: 0, 1, 2.

If there is a mismatch in the device index number sequence, all the mismatched routes are transferred to index 0, the management interface, to avoid any loss of routes. But you must still detach the interfaces and attach them again in the correct sequence to avoid the movement of routes to the Management interface because it can cause traffic congestion.

- If traffic does not flow, make sure the “Source/dest. Check” is disabled on the client interface of the primary node for the first time.
- Make sure the `cloudhadaemon` command (`ps -aux | grep cloudha`) is running in Shell.
- Make sure that the NetScaler firmware version is 13.0 build 70.x or later.
- For issues with the failover process, check the log file available at: `/var/log/cloud-ha-daemon.log`

Deploy a NetScaler VPX instance on AWS Outposts

May 2, 2023

AWS Outposts is a pool of AWS compute and storage capacity deployed at your site. Outposts provides AWS infrastructure and services in your on-premises location. AWS operates, monitors, and manages this capacity as part of an AWS Region. You can use the same NetScaler VPX instances, AWS APIs, tools, and infrastructure across on-premises and the AWS cloud for a consistent hybrid experience.

You can create subnets on your Outposts and specify them when you create AWS resources such as EC2 instances, EBS volumes, ECS clusters, and RDS instances. Instances in the Outposts subnets communicate with other instances in the AWS Region using private IP addresses, all within the same Amazon Virtual Private Cloud (VPC).

For more information, see the [AWS Outposts user guide](#).

How AWS Outposts works

AWS Outposts is designed to operate with a constant and consistent connection between your Outposts and an AWS Region. To achieve this connection to the Region, and to the local workloads in your on-premises environment, you must connect your Outpost to your on-premises network. Your on-premises network must provide WAN access back to the Region and to the internet. The internet must also provide LAN or WAN access to the local network where your on-premises workloads or applications reside.

Prerequisite


- You must install an AWS Outposts at your site.
- The AWS Outposts’ compute and storage capacity must be available for use.

For more information on how to place an order for AWS Outposts, see the following AWS documentation:

<https://aws.amazon.com/blogs/aws/aws-outposts-now-available-order-your-racks-today/>

Deploy a NetScaler VPX instance on AWS Outposts by using the AWS web console

The following figure depicts a simple deployment of NetScaler VPX instances on the Outposts. The NetScaler AMI present in the AWS Marketplace is also deployed in the Outposts.

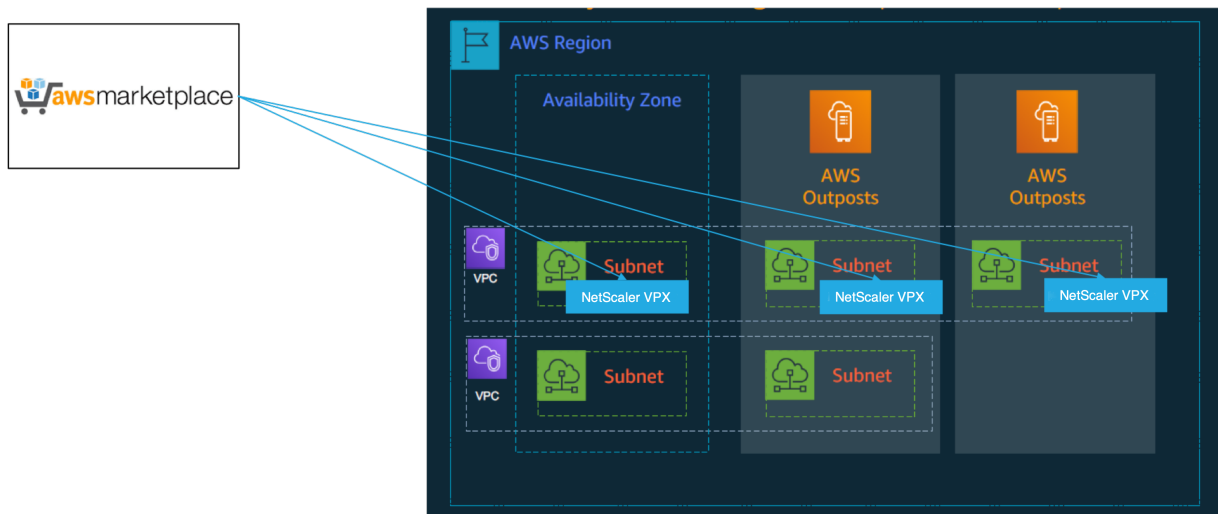

Log in to the AWS web console and complete the following steps to deploy NetScaler VPX EC2 instances on your AWS Outposts.

1. Create a key pair.
2. Create a Virtual Private Cloud (VPC).
3. Add more subnets.
4. Create security groups and security rules.
5. Add route tables.
6. Create an internet gateway.
7. Create a NetScaler VPX instance by using the AWS EC2 service.

From the AWS dashboard, navigate to **Compute > EC2 > Launch Instance > AWS Marketplace**.

8. Create and attach more network interfaces.
9. Attach elastic IPs to the management NIC.
10. Connect to the VPX instance.

For detailed instructions on each of the steps, see [Deploy a NetScaler VPX instance on AWS by using the AWS web console](#).


For high availability within same availability zone deployment, see [Deploy a high availability pair on AWS](#).

Deploy a NetScaler VPX instance on hybrid cloud with AWS Outposts

You can deploy a NetScaler VPX instance on hybrid cloud in an AWS environment that contains AWS outposts. You can simplify the app delivery mechanism using the NetScaler global server load balancing (GSLB) solution. The GSLB solution distributes application traffic across multiple data centers in hybrid clouds that are built using AWS regions and AWS Outposts infrastructure.

NetScaler GSLB supports both the active-active and active-passive deployment types to address different use cases. Along with these flexible deployment options and application delivery mechanisms, NetScaler secures the entire network and application portfolio, irrespective of whether applications are deployed natively on AWS Cloud or AWS Outposts.

The following diagram illustrates an application delivery with NetScaler appliance in hybrid cloud with AWS.

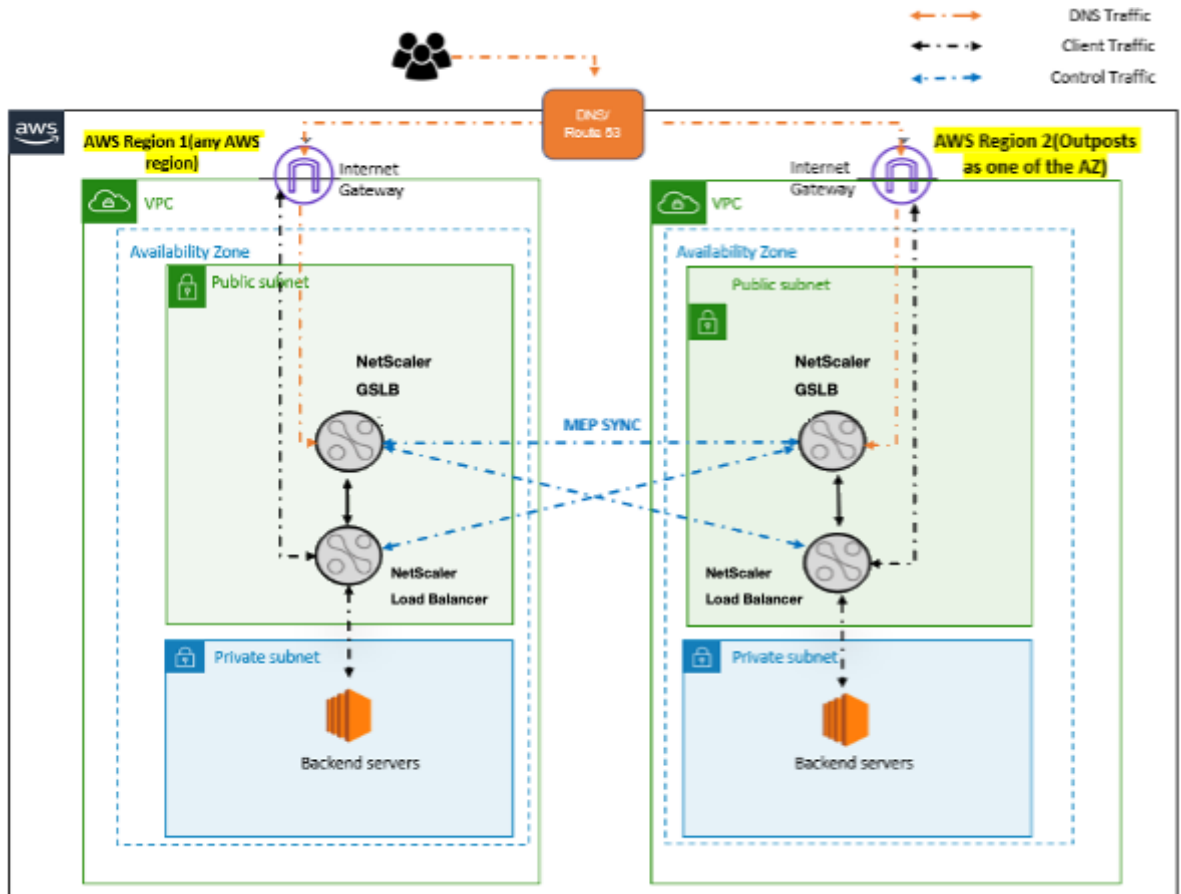

In an active-active deployment, the NetScaler steers the traffic globally across a distributed environment. All the sites in the environment exchange metrics about their availability and health of resources through the Metrics Exchange Protocol (MEP). The NetScaler appliance uses this information to load balance traffic across sites, and sends client requests to the most appropriate GSLB site as determined by the defined method (round robin, least connection, and static proximity) specified in the GSLB configuration.

You can use the active-active GSLB deployment to:

- Optimize the resource utilization with all nodes being active.
- Enhance the user experience by steering requests to the site closest to each individual user.
- Migrate applications to the cloud at a user-defined pace.

You can use the active-passive GSLB deployment for:

- Disaster recovery
- Cloud burst

References

- [Deploy a NetScaler VPX instance on AWS](#)
- [Deploy a NetScaler VPX instance on AWS Outposts by using the AWS web console](#)
- [Configure GSLB on NetScaler VPX instances](#)

Protect AWS API Gateway using the NetScaler Web App Firewall

May 2, 2023

You can deploy a NetScaler appliance in front of your AWS API Gateway and secure the API gateway from external threats. NetScaler Web App Firewall (WAF) can defend your API against OWASP top 10 threats and zero-day attacks. NetScaler Web App Firewall uses a single code base across all ADC form factors. Hence, you can consistently apply and enforce security policies across any environment. NetScaler Web App Firewall is easy to deploy and is available as a single license. The NetScaler Web App Firewall provides you the following features:


- Simplified configuration
- Bot management
- Holistic visibility
- Collate data from multiple sources and display the data in a unified screen

In addition to API gateway protection, you can also use the other NetScaler features. For more information, see [NetScaler documentation](#). Besides to avoid data center failovers and minimizing shutdown time, you can place ADC in high availability within or across availability zones. You can also use or configure clustering with Autoscale feature.

Earlier, AWS API Gateway did not support the protections needed to secure the applications behind it. Without the Web Application Firewall (WAF) protections, APIs were prone to security threats.

Deploy NetScaler appliance in front of AWS API gateway

In the following example, a NetScaler appliance is deployed in front of the AWS API gateway.

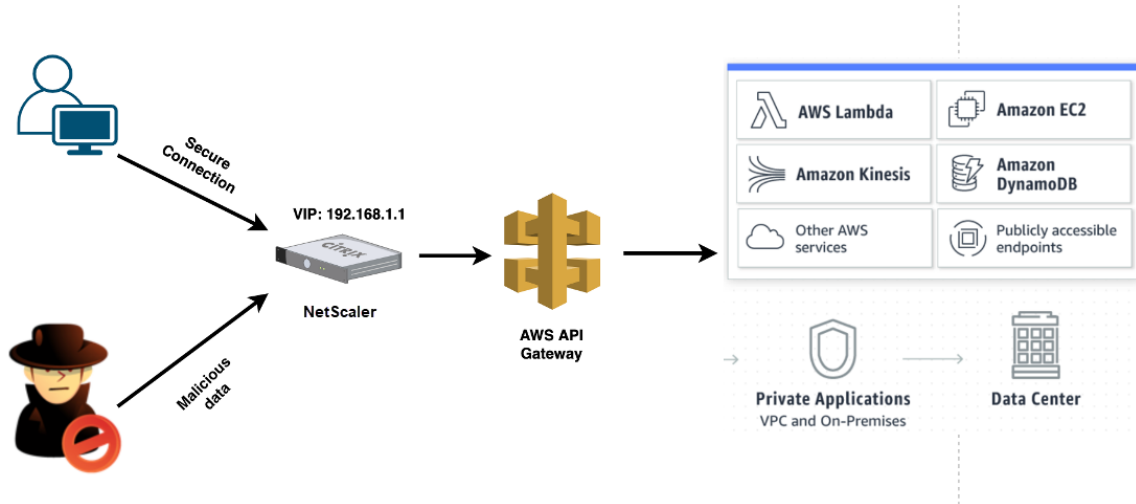

Let's assume there's a genuine API request for AWS Lambda service. This request can be for any of the API services as mentioned in [Amazon API Gateway documentation](#). As shown in the preceding diagram, the traffic flow is as follows:

1. Client sends a request to the AWS Lambda Function (XYZ). This client request is sent to the NetScaler virtual server (192.168.1.1).
2. The virtual server inspects the packet and checks for any malicious content.
3. The NetScaler appliance triggers a Rewrite policy to change the host name and URL in a client request. For example, you want to change `https://restapi.citrix.com/default/LambdaFunctionXYZ` to `https://citrix.execute-api.<region>.amazonaws.com/default/LambdaFunctionXYZ`.
4. The NetScaler appliance forwards this request to the AWS API gateway.
5. The AWS API Gateway further sends the request to the Lambda service and calls the Lambda function "XYZ".
6. At the same time, if an attacker sends an API request with malicious content, the malicious request lands on the NetScaler appliance.
7. The NetScaler appliance inspects the packets and drops the packets based on the configured action.

Configure NetScaler appliance with WAF enabled

To enable WAF on a NetScaler appliance, do the following steps:

1. Add a content switching or a load balancing virtual server. Let's say the IP address of the virtual server is 192.168.1.1, which resolves to a domain name (restapi.citrix.com).

2. Enable WAF policy on NetScaler virtual server. For more information, see [Configuring the Web App Firewall](#).
3. Enable Rewrite policy to change the domain name. Let's say, you want to change the incoming request to load balancer at "restapi.citrix.com" domain name to be rewritten to the back-end AWS API Gateway at "citrix.execute-api.<region>.amazonaws" domain name.
4. Enable L3 mode on the NetScaler appliance to make it act as a proxy. Use the following command:

```
1 enable ns mode L3
```

In Step 3 of the preceding example, let's say the website administrator wants the NetScaler appliance to replace the "restapi.citrix.com" domain name with "citrix.execute-api.<region>.amazonaws.com" and the URL with "default/lambda/XYZ".

The following procedure describes how to change the host name and URL in a client request using rewrite feature:

1. Log on to the NetScaler appliance using SSH.
2. Add rewrite actions.

```
1 add rewrite action rewrite_host_hdr_act replace "HTTP.REQ.HEADER
  ("Host\)" "\"citrix.execute-api.<region>.amazonaws.com\""
```

```
2
```

```
3 add rewrite action rewrite_url_act replace HTTP.REQ.URL.
  PATH_AND_QUERY "\"/default/lambda/XYZ\""
```

3. Add rewrite policies for the rewrite actions.

```
1 add rewrite policy rewrite_host_hdr_pol "HTTP.REQ.HEADER(\"Host\")
  .CONTAINS(\"restapi.citrix.com\") "rewrite_host_hdr_act
```

```
2
```

```
3 add rewrite policy rewrite_url_pol "HTTP.REQ.HEADER(\"Host\").
  CONTAINS(\"restapi.citrix.com\") "rewrite_url_act
```

4. Bind the rewrite policies to a virtual server.

```
1 bind lb vserver LB_API_Gateway -policyName rewrite_host_hdr_pol -
  priority 10 -gotoPriorityExpression 20 -type REQUEST
```

```
2
```

```
3 bind lb vserver LB_API_Gateway -policyName rewrite_url_pol -
  priority 20 -gotoPriorityExpression END -type REQUEST
```

For more information, see [Configure rewrite to change the host name and URL in client request on NetScaler appliance](#).

NetScaler features and capabilities

The NetScaler appliance besides securing the deployment can also enhance the request based on the user requirement. The NetScaler appliance provides the following key features.

- **Load balance the API gateway:** If you have more than one API gateway, you can load balance multiple API gateways using the NetScaler appliance and define the behavior of the API request.
 - Different load balancing methods are available. For example, the Least connection method avoids overloading of API Gateway limit, the Custom load method maintains a specific load on a particular API gateway, and so on. For more information, see [Load balancing algorithms](#).
 - SSL offloading is configured without interrupting the traffic.
 - Use Source IP (USIP) mode is enabled to preserve the client IP address.
 - User-defined SSL settings: You can have your own SSL virtual server with your own-signed certificates and algorithms.
 - Backup virtual server: If the API gateway is not reachable, you can send the request to a backup virtual server for further actions.
 - Many other load balancing features are available. For more information, see [Load balance traffic on a NetScaler appliance](#).
- **Authentication, Authorization and Auditing:** You can define your own authentication methods like LDAP, SAML, RADIUS, and authorize and audit the API requests.
- **Responder:** You can redirect API requests to some other API Gateway during the shutdown time.
- **Rate limiting:** You can configure the rate limiting feature to avoid overloading of an API gateway.
- **Better Availability:** You can configure a NetScaler appliance in a high availability setup or a cluster setup to give better availability to your AWS API traffics.
- **REST API:** Supports the REST API, which can be used for automating the work in cloud production environments.
- **Monitor data:** Monitors and logs the data for reference.

The NetScaler appliance provides a lot more features, which can be integrated with the AWS API gateway. For more information, see [NetScaler documentation](#).

Add back-end AWS Autoscaling service

December 4, 2023


Efficient hosting of applications in a cloud involves easy and cost-effective management of resources depending on the application demand. To meet increasing demand, you have to scale network resources upward. When the demand subsides, you need to scale down to avoid the unnecessary cost of idle resources. You can minimize the cost of running the applications by deploying only as many instances as are necessary during any given time. To achieve this, you constantly have to monitor traffic, memory and CPU use, and so on. However, monitoring traffic manually is cumbersome. For the application environment to scale up or down dynamically, you must automate the processes of monitoring traffic and scaling resources up and down whenever necessary.

Integrated with the AWS Auto Scaling service, the NetScaler VPX instance provides the following advantages:

- **Load balance and management:** Auto configures servers to scale up and scale down, depending on demand. The VPX instance auto-detects Autoscale groups in the back-end subnet and allows a user to select the Autoscale groups to balance the load. All of this is done by auto configuring the virtual and subnet IP addresses on the VPX instance.
- **High availability:** Detects Autoscale groups that span multiple availability zones and load-balance servers.
- **Better network availability:** The VPX instance supports:
 - Back-end servers on different VPCs, by using VPC peering
 - Back-end servers on the same placement groups
 - Back-end servers on different availability zones
- **Graceful connection termination:** Removes Autoscale servers gracefully, avoiding loss of client connections when scale-down activity occurs, by using the Graceful Timeout feature.
- **Connection draining for standby servers:** Prevents sending any new client connections to the server in the Standby state. However, the Standby servers are still part of the Autoscaling group and they continue to handle the existing client connections until they are closed. When the server changes back to the InService state, the server resumes handling new connections. You can use the Standby state to update, modify, or troubleshoot servers, or to scale down based on the requirement.

For more information, see the [AWS documentation](#).

Diagram: AWS Autoscaling service with a NetScaler VPX Instance

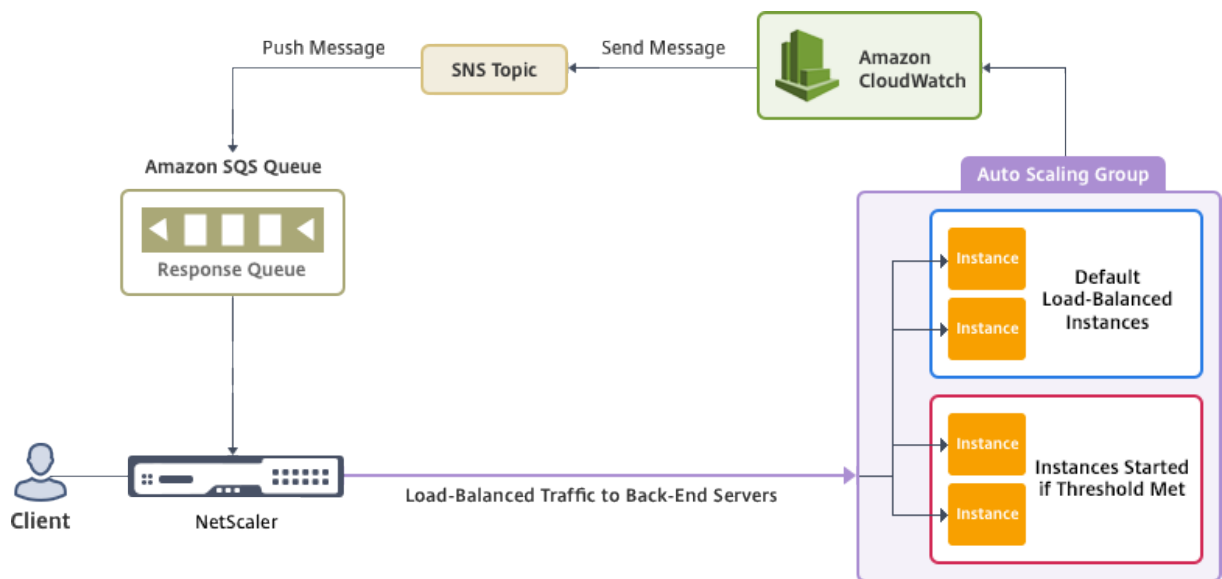

This diagram illustrates how the AWS Autoscaling service is compatible with a NetScaler VPX instance (load balancing virtual server). For more information, see the following AWS topics.

- [Autoscaling groups](#)
- [CloudWatch](#)
- [Simple Notification Service \(SNS\)](#)
- [Simple Queue Service \(Amazon SQS\)](#)

Before you begin

Before you start using Autoscaling with your NetScaler VPX instance, you must complete the following tasks.

- Read the following topics:
 - [Prerequisites](#)
 - [Limitation and usage guidelines](#)
- Create a NetScaler VPX instance on AWS according to your requirement.
 - For more information about how to create a NetScaler VPX standalone instance, see [Deploy a NetScaler VPX standalone instance on AWS](#) and [Scenario: standalone instance](#)
 - For more information about how to deploy VPX instances in HA mode, see [Deploy a high availability pair on AWS](#).

Note:

We recommend the following:

- Use the CloudFormation template for creating NetScaler VPX instances on AWS.
- Create three separate interfaces: one for management (NSIP), one for client-facing LB virtual server (VIP), and one for subnet IP (NSIP).

- Create an AWS Autoscale group. If you don't have an existing Autoscaling configuration, you must:

1. Create a Launch Configuration
2. Create an Autoscaling Group
3. Verify the Autoscaling Group

For more information, see <http://docs.aws.amazon.com/autoscaling/latest/userguide/GettingStartedTutorial.html>.

- Starting from NetScaler release 14.1-12.x, in an AWS Autoscale group, you must specify a scale-down policy only if you have enabled the Graceful option. In NetScaler releases prior to 14.1-12.x, you had to specify at least one scale-down policy irrespective of whether the Graceful option is enabled or not.

The NetScaler VPX instance supports only the step scaling policy. The simple scaling policy and target tracking scaling policy are not supported for the Autoscale group.

- Make sure that your AWS account has the following IAM permissions:

```

1  {
2
3      "Version": "2012-10-17",
4      "Statement": \[
5          {
6
7              "Action": \[
8                  "ec2:DescribeInstances",
9                  "ec2:DescribeNetworkInterfaces",
10                 "ec2:DetachNetworkInterface",
11                 "ec2:AttachNetworkInterface",
12                 "ec2:StartInstances",
13                 "ec2:StopInstances",
14                 "ec2:RebootInstances",
15                 "autoscaling:*",
16                 "sns:*",
17                 "sqs:*"
18
19                 "iam: SimulatePrincipalPolicy "
20                 "iam: GetRole "
21             \],
22             "Resource": "\*",
23             "Effect": "Allow"
24         }
25     \]
26

```

```
27 }
```

Add the AWS Autoscaling service to a NetScaler VPX instance

Complete the following steps to add the Autoscaling service to a VPX instance:

1. Log on to the VPX instance by using your credentials for `nsroot`.
2. Navigate to **System > AWS > Cloud Profile** and click **Add**.

The **Create Cloud Profile** configuration page appears.

← Create Cloud Profile

Name
test-cloudprofile

Virtual Server IP Address*
[Redacted]

Load Balancing Server Protocol
HTTP

Load Balancing Server Port
80

Auto Scale Group
test-script

Auto Scale Group Protocol
HTTP

Auto Scale Group Port
80

Select this option to drain the connections gracefully. Else the connections will be dropped in the event of scale down.
 Graceful

Delay (Seconds)
60

Create
Close


Points to note while creating a cloud profile:

- The virtual server IP address is auto populated from the free IP address available to the VPX instance. For more information, see [Manage Multiple IP address](#).
- Type the exact name of the Autoscale group that you configured on your AWS account. For more information, see [AWS Auto Scaling groups](#).
- While selecting the Autoscaling group protocol and port, ensure that your servers listen on those protocols and ports, and you bind the correct monitor in the service group. By default, the TCP monitor is used.
- For SSL Protocol type Autoscaling, after you create the cloud profile, the load balancing virtual server or service group appears to be down because of a missing certificate. You can bind the certificate to the virtual server or service group manually.

- Select **Graceful** and specify a timeout value in the **Delay** field to remove the Autoscale servers gracefully. This option initiates a scale-down event. The VPX instance does not remove the server immediately but marks one of the servers for graceful deletion. During this period, the VPX instance does not allow new connections to this server. Existing connections are served until the timeout occurs. After the timeout, the VPX instance removes the server.

If you do not select the **Graceful** option, the server in the Autoscale group is removed immediately after the load goes down. This might cause service interruption for the existing connected clients.

After you create the cloud profile, a NetScaler load balancing virtual server and a service group with members as the servers of the Autoscaling group is created. Your back-end servers must be reachable through the SNIP configured on the VPX instance.

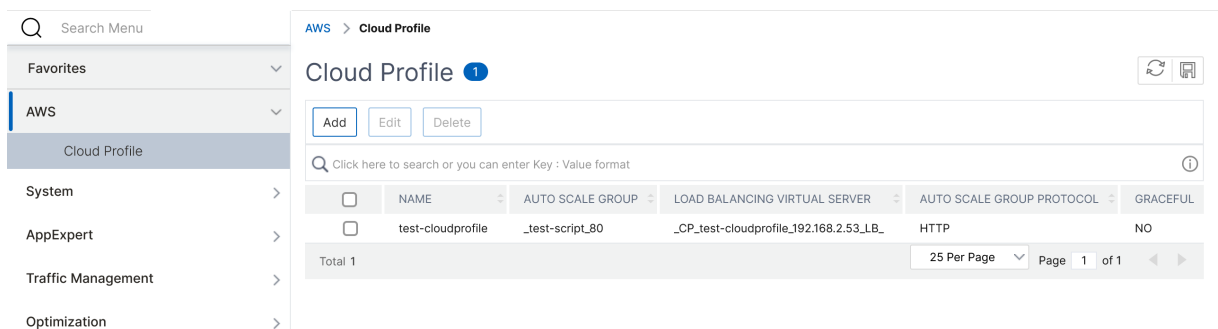

Notes:

- To view Autoscale-related information in the AWS console, go to **EC2 > Dashboard > Auto Scaling > Auto Scaling Group**.
- You can create different cloud profiles for different services (using different ports) with the same Autoscaling Group (ASG) in AWS. Thus, the NetScaler VPX instance supports multiple services with the same Autoscaling group in the public cloud.

Deploy NetScaler GSLB on AWS

July 26, 2024

Setting up GSLB for NetScaler on AWS basically consists of configuring NetScaler to load balance traffic to servers located outside the VPC that NetScaler belongs to, such as within another VPC in a different Availability Region or an on-premises data center.

DBS overview

NetScaler GSLB support using Domain-name Based Services (DBS) for Cloud load balancers allows for the automatic discovery of dynamic cloud services using a cloud load balancer solution. This configuration allows NetScaler to implement Global Server load balancing Domain-Name Based Services (GSLB DBS) in an Active-Active environment. DBS allows the scaling of back-end resources in AWS environments from DNS discovery.

This section covers integrations between NetScaler in AWS AutoScaling environments. The final section of the document details the ability to set up a HA pair of NetScaler ADCs that span two different Availability Zones (AZs) specific to an AWS region.

DBS with ELB

GSLB DBS utilizes the FQDN of the user Elastic Load Balancer (ELB) to dynamically update the GSLB Service Groups to include the back-end servers that are being created and deleted within AWS. The back-end servers or instances in AWS can be configured to scale based on network demand or CPU utilization. To configure this feature, point NetScaler to the ELB to dynamically route to different servers in AWS without having to manually update NetScaler every time an instance is created and deleted within AWS. NetScaler DBS feature for GSLB Service Groups uses DNS aware service discovery to determine the member service resources of the DBS namespace identified in the AutoScale group.

NetScaler GSLB DBS autoScale components with Cloud Load Balancers:

Configure AWS components

Security groups

Note:

We recommend you to create different security groups for ELB, NetScaler GSLB Instance, and Linux instance, as the set of rules required for each of these entities is different. This example has a consolidated Security Group configuration for brevity.

To ensure the proper configuration of the virtual firewall, see [Security Groups for Your VPC](#).

1. Log in to the user **AWS resource group** and navigate to **EC2 > NETWORK & SECURITY > Security Groups**.
2. Click **Create Security Group** and provide a name and description. This security group encompasses NetScaler and Linux back-end web servers.
3. Add the inbound port rules from the following screenshot.

Note:

Limiting Source IP access is recommended for granular hardening. For more information, see [Web Server Rules](#).

4. Amazon Linux Back-end Web Services

- a) Log in to the user **AWS resource group** and navigate to **EC2 > Instances**.
- b) Click **Launch Instance** using the details that follow to configure the **Amazon Linux** instance.

Enter the details about setting up a Web Server or back-end service on this instance.

5. NetScaler Configuration

- a) Log in to the user **AWS resource group** and navigate to **EC2 > Instances**.
- b) Click **Launch Instance** and use the following details to configure the **Amazon AMI** instance.

6. Elastic IP Configuration

Note:

NetScaler can also be made to run with a single elastic IP if necessary to reduce cost, by not having a public IP for the NSIP. Instead, attach an elastic IP to the SNIP which can cover for management access to the box, in addition to the GSLB site IP and ADNS IP.

- a) Log in to the user **AWS resource group** and navigate to **EC2 > NETWORK & SECURITY > Elastic IPs**.
- b) Click **Allocate new address** to create a Elastic IP address.
- c) Configure the Elastic IP to point to the user running NetScaler instance within AWS.
- d) Configure a second Elastic IP and again point it to the user running NetScaler instance.

7. Elastic Load Balancer

- a) Log in to the user **AWS resource group** and navigate to **EC2 > LOAD BALANCING > Load Balancers**.
- b) Click **Create Load Balancer** to configure a classic load balancer.

The user Elastic Load Balancers allow users to load balance their back-end Amazon Linux instances while also being able to Load Balance other instances that are spun up based on demand.

Configuring global server load balancing domain-name based services

For traffic management configurations, see [Configure NetScaler GSLB domain-based service](#).

Deployment types

Three-NIC deployment

- Typical deployments
 - GSLB StyleBook
 - With ADM
 - With GSLB (Route53 w/domain registration)
 - Licensing - Pooled/Marketplace
- Use Cases
 - Three-NIC deployments are used to achieve real isolation of data and management traffic.
 - Three-NIC deployments also improve the scale and performance of the ADC.
 - Three-NIC deployments are used in network applications where throughput is typically 1 Gbps or higher and a Three-NIC deployment is recommended.

CFT deployment

Customers would deploy using CloudFormation Templates if they are customizing their deployments or they are automating their deployments.

Deployment steps

The following are the deployment steps:

1. Three-NIC deployment for GSLB
2. Licensing
3. deployment options

Three-NIC deployment for GSLB NetScaler VPX instance is available as an Amazon Machine Image (AMI) in the AWS marketplace, and it can be launched as an Elastic Compute Cloud (EC2) instance within an AWS VPC. The minimum EC2 instance type allowed as a supported AMI on NetScaler VPX is m4.large. NetScaler VPX AMI instance requires a minimum of 2 virtual CPUs and 2 GB of memory.

An EC2 instance launched within an AWS VPC can also provide the multiple interfaces, multiple IP addresses per interface, and public and private IP addresses needed for VPX configuration. Each VPX instance requires at least three IP subnets:

- A management subnet
- A client-facing subnet (VIP)
- A back-end facing subnet (SNIP)

NetScaler recommends three network interfaces for a standard VPX instance on AWS installation.

AWS currently makes multi-IP functionality available only to instances running within an AWS VPC. A VPX instance in a VPC can be used to load balance servers running in EC2 instances. An Amazon VPC allows users to create and control a virtual networking environment, including their own IP address range, subnets, route tables, and network gateways.

Note:

By default, users can create up to 5 VPC instances per AWS region for each AWS account. Users can request higher VPC limits by submitting Amazon's request form here: [Amazon VPC Request](#).

Licensing A NetScaler VPX instance on AWS requires a license. The following licensing options are available for NetScaler VPX instances running on AWS:

- Free (unlimited)
- Hourly
- Annual
- Bring your own license
- Free Trial (all NetScaler VPX-AWS subscription offerings for 21 days free in AWS marketplace).

Deployment options Users can deploy a NetScaler VPX standalone instance on AWS.

For more information, see [Deploy a NetScaler VPX standalone instance on AWS](#)

NetScaler global server load balancing for hybrid and multi-cloud deployments

NetScaler hybrid and multi-cloud global server load balancing (GSLB) solution enables users to distribute application traffic across multiple data centers in hybrid clouds, multiple clouds, and on-premises deployments. NetScaler hybrid and multi-cloud GSLB solution helps users to manage their load balancing setup in hybrid or multi-cloud environments without altering the existing setup. Also, if users have an on-premises setup, they can test some of their services in the cloud by using NetScaler hybrid and multi-cloud GSLB solution before completely migrating to the cloud. For example, users can route only a small percentage of their traffic to the cloud, and handle most of the

traffic on-premises. NetScaler hybrid and multi-cloud GSLB solution also enables users to manage and monitor NetScaler instances across geographic locations from a single, unified console.

A hybrid and multi-cloud architecture can also improve overall enterprise performance by avoiding “vendor lock-in” and using different infrastructure to meet the needs of user partners and customers. With multiple cloud architecture, users can manage their infrastructure costs better as they now have to pay only for what they use. Users can also scale their applications better as they now use the infrastructure on demand. It also provides the ability to quickly switch from one cloud to another to take advantage of the best offerings of each provider.

The following diagram illustrates the architecture of NetScaler hybrid and multi-cloud GSLB feature.

NetScaler GSLB nodes handle the DNS name resolution. Any of these GSLB nodes can receive DNS requests from any client location. The GSLB node that receives the DNS request returns the load balancer virtual server IP address as selected by the configured load balancing method. Metrics (site, network, and persistence metrics) are exchanged between the GSLB nodes using the metrics exchange protocol (MEP), which is a proprietary NetScaler protocol. For more information on the MEP protocol, see [Configure Metrics Exchange Protocol](#).

The monitor configured in the GSLB node monitors the health status of the load balancing virtual server in the same data center. In a parent-child topology, metrics between the GSLB and NetScaler nodes are exchanged by using MEP. However, configuring monitor probes between a GSLB and NetScaler LB node is optional in a parent-child topology.

The NetScaler agent enables communication between the NetScaler Console and the managed instances in the user data center. For more information on NetScaler agents and how to install them, see [Getting Started](#).

Note:

This document makes the following assumptions:

- If users have an existing load balancing setup, it is up and running.
- A SNIP address or a GSLB site IP address is configured on each of NetScaler GSLB nodes. This IP address is used as the data center source IP address when exchanging metrics with other data centers.
- An ADNS or ADNS-TCP service is configured on each of NetScaler GSLB instances to receive the DNS traffic.
- The required firewall and security groups are configured in the cloud service providers.

Security groups configuration

Users must set up the required firewall/security groups configuration in the cloud service providers. For more information about AWS security features, see [AWS/Documentation/Amazon VPC/User Guide/Security](#).

Also, on the GSLB node, users must open port 53 for ADNS service/DNS server IP address and port 3009 for GSLB site IP address for MEP traffic exchange. On the load balancing node, users must open the appropriate ports to receive the application traffic. For example, users must open port 80 for receiving HTTP traffic and open port 443 for receiving HTTPS traffic. Open port 443 for NITRO communication between the NetScaler agent and NetScaler Console.

For the dynamic round trip time GSLB method, users must open port 53 to allow UDP and TCP probes depending on the configured LDNS probe type. The UDP or the TCP probes are initiated using one of the SNIPs and therefore this setting must be done for security groups bound to the server-side subnet.

Capabilities of NetScaler hybrid and multi-cloud GSLB solution

Some of the capabilities of NetScaler hybrid and multi-cloud GSLB solution are described in this section.

Compatibility with other load balancing solutions

NetScaler hybrid and multi-cloud GSLB solution supports various load balancing solutions such as NetScaler load balancer, NGINX, HAProxy, and other third-party load balancers.

Note:

Load balancing solutions other than NetScaler are supported only if proximity-based and non-metric based GSLB methods are used and if parent-child topology is not configured.

GSLB methods

NetScaler hybrid and multi-cloud GSLB solution supports the following GSLB methods.

- Metric-based GSLB methods. Metric-based GSLB methods collect metrics from the other NetScaler nodes through the metrics exchange protocol.
 - Least Connection: The client request is routed to the load balancer that has the fewest active connections.

- Least Bandwidth: The client request is routed to the load balancer that is currently serving the least amount of traffic.
- Least Packets: The client request is routed to the load balancer that has received the fewest packets in the last 14 seconds.
- Non-metric based GSLB methods
 - Round Robin: The client request is routed to the IP address of the load balancer that is at the top of the list of load balancers. That load balancer then moves to the bottom of the list.
 - Source IP Hash: This method uses the hashed value of the client IP address to select a load balancer.
- Proximity-based GSLB methods
 - Static Proximity: The client request is routed to the load balancer that is closest to the client IP address.
 - Round-Trip Time (RTT): This method uses the RTT value (the time delay in the connection between the client's local DNS server and the data center) to select the IP address of the best performing load balancer.

For more information on the load balancing methods, see [load balancingAlgorithms](#).

GSLB topologies

NetScaler hybrid and multi-cloud GSLB solution supports the active-passive topology and parent-child topology.

- Active-passive topology - Provides disaster recovery and ensures continuous availability of applications by protecting against points of failure. If the primary data center goes down, the passive data center becomes operational. For more information about GSLB active-passive topology, see [Configure GSLB for Disaster Recovery](#).
- Parent-child topology –Can be used if customers are using the metric-based GSLB methods to configure GSLB and load balancing nodes and if the load balancing nodes are deployed on a different NetScaler instance. In a parent-child topology, the LB node (child site) must be a NetScaler appliance because the exchange of metrics between the parent and child site is through the metrics exchange protocol (MEP).

For more information about parent-child topology, see [Parent-Child Topology deployment using the MEP Protocol](#).

IPv6 support

NetScaler hybrid and multi-cloud GSLB solution also supports IPv6.

Monitoring

NetScaler hybrid and multi-cloud GSLB solution supports built-in monitors with an option to enable the secure connection. However, if LB and GSLB configurations are on the same NetScaler instance or if parent-child topology is used, configuring monitors is optional.

Persistence

NetScaler hybrid and multi-cloud GSLB solution supports the following:

- Source IP based persistence sessions, so that multiple requests from the same client are directed to the same service if they arrive within the configured time-out window. If the time-out value expires before the client sends another request, the session is discarded, and the configured load balancing algorithm is used to select a new server for the client's next request.
- Spillover persistence so that the backup virtual server continues to process the requests it receives, even after the load on the primary falls below the threshold. For more information, see [Configure Spillover](#).
- Site persistence so that the GSLB node selects a data center to process a client request and forwards the IP address of the selected data center for all subsequent DNS requests. If the configured persistence applies to a site that is DOWN, the GSLB node uses a GSLB method to select a new site, and the new site becomes persistent for subsequent requests from the client.

Configuration by using NetScaler Console styleBooks

Customers can use the default multi-cloud GSLB StyleBook on NetScaler Console to configure NetScaler instances with hybrid and multi-cloud GSLB configurations.

Customers can use the default multi-cloud GSLB StyleBook for the load balancing Node StyleBook to configure NetScaler load balancing nodes which are the child sites in a parent-child topology that handle the application traffic. Use this StyleBook only if users want to configure load balancing nodes in a parent-child topology. However, each LB node must be configured separately using this StyleBook.

Workflow of NetScaler hybrid and multi-cloud GSLB solution configuration

Customers can use the shipped multi-cloud GSLB StyleBook on NetScaler Console to configure NetScaler instances with hybrid and multi-cloud GSLB configurations.

The following diagram shows the workflow for configuring a NetScaler hybrid and multi-cloud GSLB solution. The steps in the workflow diagram are explained in more detail after the diagram.

Perform the following tasks as a cloud administrator:

1. Sign up for a NetScaler Cloud account.

To start using NetScaler Console, create a NetScaler Cloud company account or join an existing one that has been created by someone in your company.

2. After users log on to NetScaler Cloud, click **Manage** on the **NetScaler Application Delivery Management** tile to set up the ADM service for the first time.

3. Download and install multiple NetScaler Console service agents.

Users must install and configure the NetScaler Console service agent in their network environment to enable communication between the NetScaler Console and the managed instances in their data center or cloud. Install an agent in each region, so that they can configure LB and GSLB configurations on the managed instances. The LB and GSLB configurations can share a single agent. For more information on the above three tasks, see [Getting Started](#).

4. Deploy load balancers on Microsoft AWS cloud/on-premises data centers.

Depending on the type of load balancers that users are deploying on cloud and on-premises, provision them accordingly. For example, users can provision NetScaler VPX instances in an Amazon Web Services (AWS) virtual private cloud and in on-premises data centers. Configure NetScaler instances to function as LB or GSLB nodes in standalone mode, by creating the virtual machines and configuring other resources. For more information on how to deploy NetScaler VPX instances, see the following documents:

- [NetScaler VPX on AWS](#).
- [Configure a NetScaler VPX Standalone Instance](#).

5. Perform security configurations.

Configure network security groups and network ACLs in ARM and in AWS to control inbound and outbound traffic for user instances and subnets.

6. Add NetScaler instances in NetScaler Console.

NetScaler instances are network appliances or virtual appliances that users want to discover, manage, and monitor from NetScaler Console. To manage and monitor these instances, users must add the instances to the service and register both LB (if users are using NetScaler for LB) and GSLB instances. For more information on how to add NetScaler instances in the NetScaler Console, see [Getting Started](#)

7. Implement the GSLB and LB configurations using default NetScaler Console StyleBooks.

- Use multi-cloud GSLB StyleBook to execute the GSLB configuration on the selected GSLB NetScaler instances.
 - Implement the load balancing configuration. (Users can skip this step if they already have LB configurations on the managed instances.) Users can configure load balancers on NetScaler instances in one of two ways:
 - Manually configure the instances for load balancing the applications. For more information on how to manually configure the instances, see [Set up basic load balancing](#).
 - Use StyleBooks. Users can use one of the NetScaler Console StyleBooks (HTTP/SSL load balancing StyleBook or HTTP/SSL load balancing (with Monitors) StyleBook) to create the load balancer configuration on the selected NetScaler instance. Users can also create their own StyleBooks. For more information on StyleBooks, see [StyleBooks](#).
8. Use multi-cloud GSLB StyleBook for LB Node to configure GSLB parent-child topology in any of the following cases:
- If users are using the metric-based GSLB algorithms (Least Packets, Least Connections, Least Bandwidth) to configure GSLB and load balancing nodes and if the load balancing nodes are deployed on a different NetScaler instance.
 - If site persistence is required.

Using styleBooks to configure GSLB on NetScaler load balancing nodes

Customers can use the **Multi-cloud GSLB StyleBook for LB Node** if they are using the metric-based GSLB algorithms (Least Packets, Least Connections, Least Bandwidth) to configure GSLB and load balancing nodes and if the load balancing nodes are deployed on a different NetScaler instance.

Users can also use this StyleBook to configure more child sites for an existing parent site. This StyleBook configures one child site at a time. So, create as many configurations (config packs) from this StyleBook as there are child sites. The StyleBook applies the GSLB configuration on the child sites. Users can configure a maximum of 1024 child sites.

Note:

Use multi-cloud GSLB stylebook to configure the parent sites.

This StyleBook makes the following assumptions:

- A SNIP address or a GSLB site IP address is configured.
- The required firewall and security groups are configured in the cloud service providers.

Configuring a child site in a parent-child topology by using multi-cloud GSLB styleBook for LB node

1. Navigate to **Applications > Configuration > Create New**.
2. Navigate to **Applications > Configuration**, and click **Create New**.

The StyleBook appears as a user interface page on which users can enter the values for all the parameters defined in this StyleBook.

Note:

The terms data center and sites are used interchangeably in this document.

3. Set the following parameters:
 - **Application Name.** Enter the name of the GSLB application deployed on the GSLB sites for which you want to create child sites.
 - **Protocol.** Select the application protocol of the deployed application from the drop-down list box.
 - **LB Health Check** (Optional)
 - **Health Check Type.** From the drop-down list box, select the type of probe used for checking the health of the load balancer VIP address that represents the application on a site.
 - **Secure Mode.** (Optional) Select **Yes** to enable this parameter if SSL based health checks are required.
 - **HTTP Request.** (Optional) If users selected HTTP as the health-check type, enter the full HTTP request used to probe the VIP address.
 - **List of HTTP Status Response Codes.** (Optional) If users selected HTTP as the health check type, enter the list of HTTP status codes expected in responses to HTTP requests when the VIP is healthy.
4. Configuring parent site.
 - Provide the details of the parent site (GSLB node) under which you want to create the child site (LB node).
 - **Site Name.** Enter the name of the parent site.
 - **Site IP Address.** Enter the IP address that the parent site uses as its source IP address when exchanging metrics with other sites. This IP address is assumed to be already configured on the GSLB node in each site.
 - **Site Public IP Address.** (Optional) Enter the Public IP address of the parent site that is used to exchange metrics, if that site's IP address is NAT'ed.

5. Configuring child site.

- Provide the details of the child site.
 - **Site name.** Enter the name of the site.
 - **Site IP Address.** Enter the IP address of the child site. Here, use the private IP address or SNIP of NetScaler node that is being configured as a child site.
 - **Site Public IP Address.** (Optional) Enter the Public IP address of the child site that is used to exchange metrics, if that site's IP address is NAT'ed.

6. Configuring active GSLB services (optional)

- Configure active GSLB services only if the LB virtual server IP address is not a public IP address. This section allows users to configure the list of local GSLB services on the sites where the application is deployed.
 - **Service IP.** Enter the IP address of the load balancing virtual server on this site.
 - **Service Public IP Address.** If the virtual IP address is private and has a public IP address NAT'ed to it, specify the public IP address.
 - **Service Port.** Enter the port of the GSLB service on this site.
 - **Site Name.** Enter the name of the site on which the GSLB service is located.
7. Click **Target Instances** and select NetScaler instances configured as GSLB instances on each site on which to deploy the GSLB configuration.
8. Click **Create** to create the LB configuration on the selected NetScaler instance (LB node). Users can also click **Dry Run** to check the objects that would be created in the target instances. The StyleBook configuration that users have created appears in the list of configurations on the Configurations page. Users can examine, update, or remove this configuration by using the NetScaler Console GUI.

CloudFormation template deployment

NetScaler VPX is available as Amazon Machine Images (AMI) in the AWS Marketplace. Before using a CloudFormation template to provision a NetScaler VPX in AWS, the AWS user has to accept the terms and subscribe to the AWS Marketplace product. Each edition of NetScaler VPX in the Marketplace requires this step.

Each template in the CloudFormation repository has collocated documentation describing the usage and architecture of the template. The templates attempt to codify recommended deployment architecture of NetScaler VPX, or to introduce the user to NetScaler or to demonstrate a particular feature,

edition, or option. Users can reuse, modify, or enhance the templates to suit their particular production and testing needs. Most templates require full EC2 permissions in addition to permissions to create IAM roles.

The CloudFormation templates contain AMI IDs that are specific to a particular release of NetScaler VPX (for example, release 12.0-56.20) and edition (for example, NetScaler VPX Platinum Edition - 10 Mbps) OR NetScaler BYOL. To use a different version / edition of NetScaler VPX with a CloudFormation template requires the user to edit the template and replace the AMI IDs.

The latest NetScaler AWS-AMI-IDs are located here: [NetScaler AWS CloudFormation Master](#).

CFT three-NIC deployment

This template deploys a VPC, with 3 subnets (Management, client, server) for 2 Availability Zones. It deploys an Internet Gateway, with a default route on the public subnets. This template also creates a HA pair across Availability Zones with two instances of NetScaler: 3 ENIs associated to 3 VPC subnets (Management, Client, Server) on primary and 3 ENIs associated to 3 VPC subnets (Management, Client, Server) on secondary. All the resource names created by this CFT are prefixed with a tagName of the stack name.

The output of the CloudFormation template includes:

- PrimaryCitrixADCManagementURL - HTTPS URL to the Management GUI of the Primary VPX (uses self-signed cert)
- PrimaryCitrixADCManagementURL2 - HTTP URL to the Management GUI of the Primary VPX
- PrimaryCitrixADCInstanceID - Instance Id of the newly created Primary VPX instance
- PrimaryCitrixADCPublicVIP - Elastic IP address of the Primary VPX instance associated with the VIP
- PrimaryCitrixADCPrivateNSIP - Private IP (NS IP) used for management of the Primary VPX
- PrimaryCitrixADCPublicNSIP - Public IP (NS IP) used for management of the Primary VPX
- PrimaryCitrixADCPrivateVIP - Private IP address of the Primary VPX instance associated with the VIP
- PrimaryCitrixADCSNIP - Private IP address of the Primary VPX instance associated with the SNIP
- SecondaryCitrixADCManagementURL - HTTPS URL to the Management GUI of the Secondary VPX (uses self-signed cert)
- SecondaryCitrixADCManagementURL2 - HTTP URL to the Management GUI of the Secondary VPX
- SecondaryCitrixADCInstanceID - Instance Id of the newly created Secondary VPX instance

- SecondaryCitrixADCPrivateNSIP - Private IP (NS IP) used for management of the Secondary VPX
- SecondaryCitrixADCPublicNSIP - Public IP (NS IP) used for management of the Secondary VPX
- SecondaryCitrixADCPrivateVIP - Private IP address of the Secondary VPX instance associated with the VIP
- SecondaryCitrixADCSNIP - Private IP address of the Secondary VPX instance associated with the SNIP
- SecurityGroup - Security group id that the VPX belongs to

When providing input to the CFT, the * against any parameter in the CFT implies that it is a mandatory field. For example, `VPC ID*` is a mandatory field.

The following prerequisites must be met. The CloudFormation template requires sufficient permissions to create IAM roles, beyond normal EC2 full privileges. The user of this template also needs to accept the terms and subscribe to the AWS Marketplace product before using this CloudFormation template.

The following should also be present:

- Key Pair
- 3 unallocated EIPs
- Primary Management
- Client VIP
- Secondary Management

For more information on provisioning NetScaler VPX instances on AWS, users can visit: [Provisioning NetScaler VPX instances on AWS](#).

For information on how to configure GSLB using stylebooks visit [Using stylebooks to configure GSLB](#)

Disaster Recovery (DR)

Disaster is a sudden disruption of business functions caused by natural calamities or human caused events. Disasters affect data center operations, after which resources and the data lost at the disaster site must be fully rebuilt and restored. The loss of data or downtime in the data center is critical and collapses the business continuity.

One of the challenges that customers face today is deciding where to put their DR site. Businesses are looking for consistency and performance regardless of any underlying infrastructure or network faults.

To deploy GSLB for disaster recovery, see [Deploy a NetScaler VPX standalone instance on AWS](#)

Other resources

[NetScaler Console GSLB for hybrid and multi-cloud deployments.](#)

Deploy NetScaler Web App Firewall on AWS


April 23, 2024

The NetScaler Web App Firewall can be installed as either a Layer 3 network device or a Layer 2 network bridge between customer servers and customer users, usually behind the customer company's router or firewall. NetScaler Web App Firewall must be installed in a location where it can intercept traffic between the web servers and the hub or switch through which users access those web servers. Users then configure the network to send requests to the Web Application Firewall instead of directly to their web servers, and responses to the Web Application Firewall instead of directly to their users. The Web Application Firewall filters that traffic before forwarding it to its final destination, using both its internal rule set and the user additions and modifications. It blocks or renders harmless any activity that it detects as harmful, and then forwards the remaining traffic to the web server. The preceding image provides an overview of the filtering process.

For more information, see [How NetScaler Web App Firewall works.](#)

Architecture for NetScaler Web App Firewall on AWS for production deployment

The image shows a virtual private cloud (VPC) with **default parameters** that builds a NetScaler Web App Firewall environment in the AWS Cloud.

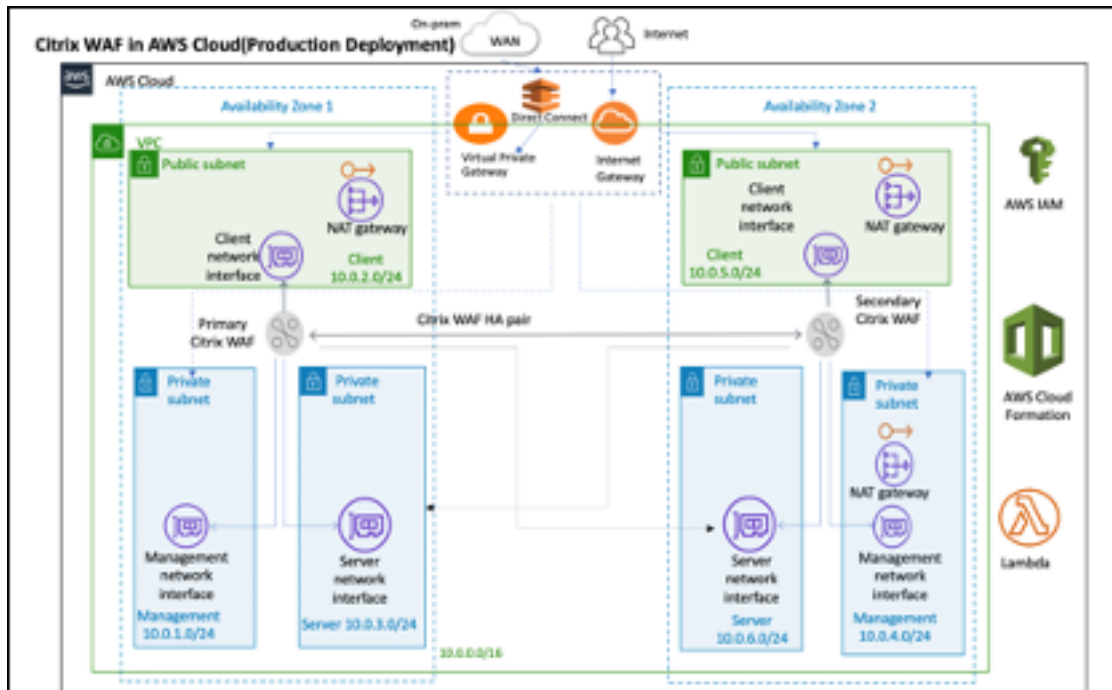

In a production deployment, the following parameters are set up for the NetScaler Web App Firewall environment:

- This architecture assumes the use of an AWS CloudFormation Template and an AWS Quick Start Guide, which can be found here: [GitHub/AWS-Quickstart/Quickstart-Citrix-ADC-VPX](https://github.com/CloudSoftwareGroup/AWS-Quickstart-Quickstart-Citrix-ADC-VPX).
- A VPC that spans two Availability Zones, configured with two public and four private subnets, according to AWS best practices, to provide you with your own virtual network on AWS with a /16 Classless Inter-Domain Routing (CIDR) block (a network with 65,536 private IP addresses).
- Two instances of NetScaler Web App Firewall (Primary and Secondary), one in each Availability Zone.
- **Three security groups**, one for each network interface (Management, Client, Server), that acts as virtual firewalls to control the traffic for their associated instances.
- **Three subnets**, for each instance- one for management, one for client, and one for back-end server.
- An **internet gateway** attached to the VPC, and a Public Subnets route table which is associated with public subnets so as to allow access to the internet. This gateway is used by the Web App Firewall host to send and receive traffic. For more information on Internet Gateways, see: [Internet Gateways](#).
- **5 Route tables**-one public route table associated with client subnets of both primary and secondary Web App Firewall. The remaining 4 route tables link to each of the 4 private subnets (management and server-side subnets of primary and secondary Web App Firewall).

- AWS Lambda in Web App Firewall takes care of the following:
 - Configuring two Web App Firewall in each availability zone of HA mode
 - Creating a sample Web App Firewall Profile and thus pushing this configuration with respect to Web App Firewall
- AWS Identity and Access Management (IAM) to securely control access to AWS services and resources for your users. By default, the CloudFormation Template (CFT) creates the required IAM role. However, users can provide their own IAM role for NetScaler ADC instances.
- In the public subnets, two managed Network Address Translation (NAT) gateways to allow out-bound internet access for resources in public subnets.

Note:

The CFT Web App Firewall template that deploys the NetScaler Web App Firewall into an existing VPC skips the components marked by asterisks and prompts users for their existing VPC configuration.

Backend servers are not deployed by the CFT.

Cost and licensing

Users are responsible for the cost of the AWS services used while running AWS deployments. The AWS CloudFormation templates that can be used for this deployment include configuration parameters that users can customize as necessary. Some of those settings, such as instance type, affect the cost of deployment. For cost estimates, users should refer to the pricing pages for each AWS service they are using. Prices are subject to change.

A NetScaler Web App Firewall on AWS requires a license. To license NetScaler Web App Firewall, users must place the license key in an S3 bucket and specify its location when they launch the deployment.

Note:

When users elect the Bring your own license (BYOL) licensing model, they should ensure that they have an AppFlow feature enabled. For more information on BYOL licensing, see: [AWS Marketplace/Citrix VPX - Customer Licensed](#).

The following licensing options are available for Citrix ADC Web App Firewall running on AWS. Users can choose an AMI (Amazon Machine Image) based on a single factor such as throughput.

- **License model:** Pay as You Go (PAYG, for the production licenses) or Bring Your Own License (BYOL, for the Customer Licensed AMI - Citrix ADC Pooled Capacity). For more information on Citrix ADC Pooled Capacity, see: [Citrix ADC Pooled Capacity](#).

- For BYOL, there are 3 licensing modes:
 - * Configure NetScaler Pooled Capacity: [Configure Citrix ADC Pooled Capacity](#)
 - * NetScaler VPX Check-in and Check-out Licensing (CICO): [Citrix ADC VPX Check-in and Check-out Licensing](#)

Tip:

If users elect CICO Licensing with VPX-200, VPX-1000, VPX-3000, VPX-5000, or VPX-8000 application platform type, they should ensure that they have the same throughput license present in their NetScaler Console licensing server.

- * NetScaler virtual CPU Licensing: [NetScaler virtual CPU Licensing](#)

Note:

If users want to dynamically modify the bandwidth of a VPX instance, they should elect a BYOL option, for example **NetScaler pooled capacity** where they can allocate the licenses from NetScaler Console, or they can check out the licenses from NetScaler according to the minimum and maximum capacity of the instance on demand and without a restart. A restart is required only if users want to change the license edition.

- **Throughput:** 200 Mbps or 1 Gbps
- **Bundle:** Premium

Deployment options

This deployment guide provides two deployment options:

- The first option is to deploy using a Quick Start Guide format and the following options:
 - **Deploy NetScaler Web App Firewall into a new VPC (end-to-end deployment).** This option builds a new AWS environment consisting of the VPC, subnets, security groups, and other infrastructure components, and then deploys NetScaler Web App Firewall into this new VPC.
 - **Deploy NetScaler Web App Firewall into an existing VPC.** This option provisions NetScaler Web App Firewall in the user existing AWS infrastructure.
- The second option is to deploy using Web App Firewall StyleBooks using NetScaler Console

AWS Quick Start

Step 1: Sign in to the user AWS account

- Sign in to the user account at AWS: [AWS](#) with an IAM (Identity and Access Management) user role that has the necessary permissions to create an Amazon Account (if necessary) or sign in to an Amazon Account.
- Use the region selector in the navigation bar to choose the AWS Region where users want to deploy High Availability across AWS Availability Zones.
- Ensure that the user AWS account is configured correctly, refer to the Technical Requirements section of this document for more information.

Step 2: Subscribe to the NetScaler Web App Firewall AMI

- This deployment requires a subscription to the AMI for NetScaler Web App Firewall in the AWS Marketplace.
- Sign in to the user AWS account.
- Open the page for the NetScaler Web App Firewall offering by choosing one of the links in the following table.
 - When users launch the Quick Start Guide in to deploy NetScaler Web App Firewall in Step 3 below, they use the **NetScaler Web App Firewall Image** parameter to select the bundle and throughput option that matches their AMI subscription. The following list shows the AMI options and corresponding parameter settings. The VPX AMI instance requires a minimum of 2 virtual CPUs and 2 GB of memory.


Note:

To retrieve the AMI ID, refer to the NetScaler Products on AWS Marketplace page on GitHub: [Citrix Products on AWS Marketplace](#).

- AWS Marketplace AMI
 - NetScaler Web Application Firewall (Web App Firewall) - 200 Mbps: [Citrix Web App Firewall \(Web App Firewall\) - 200 Mbps](#)
 - NetScaler Web Application Firewall (Web App Firewall) - 1000 Mbps: [Citrix Web App Firewall \(Web App Firewall\) - 1000 Mbps](#)
- On the AMI page, choose **Continue to Subscribe**.



- Review the terms and conditions for software usage, and then choose **Accept Terms**.

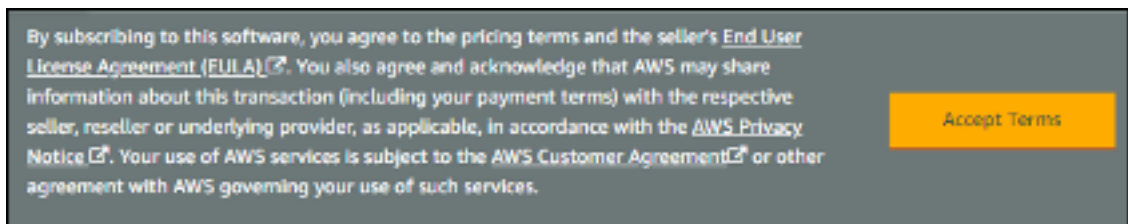

Note:

Users receive a confirmation page, and an email confirmation is sent to the account owner. For detailed subscription instructions, see Getting Started in the AWS Marketplace Documentation: [Getting Started](#).

- When the subscription process is complete, exit out of AWS Marketplace without further action. Do not provision the software from AWS Marketplace—users will deploy the AMI with the Quick Start Guide.

Step 3: Launch the AWS Quick Start

- Sign in to the user AWS account, and choose one of the following options to launch the AWS CloudFormation template. For help with choosing an option, see deployment options earlier in this guide.

- Deploy NetScaler VPX into a new VPC on AWS using one of the AWS CloudFormation Templates located here:
 - * [Citrix/Citrix-ADC-AWS-CloudFormation/Templates/High-Availability/Across-Availability-Zone](#)
 - * [Citrix/Citrix-ADC-AWS-CloudFormation/Templates/High-Availability/Same-Availability-Zone](#)
- Deploy NetScaler Web App Firewall into a new or existing VPC on AWS using the AWS Quickstart template located here: [AWS-Quickstart/Quickstart-Citrix-ADC- Web App Firewall](#)

Important:

If users are deploying NetScaler Web App Firewall into an existing VPC, they must ensure that their VPC spans across two Availability Zones, with one public and two private subnets in each Availability Zone for the workload instances, and that the subnets are not shared. This deployment guide does not support shared subnets, see Working with Shared VPCs: [Working with Shared VPCs](#). These subnets require NAT Gateways in their route tables to allow the instances to download packages and software without exposing them to the internet. For more information about NAT Gateways, see: [NAT Gateways](#). Configure the subnets so there is no overlapping of subnets.

Also, users should ensure that the domain name option in the DHCP options is configured as explained in the Amazon VPC documentation found here: DHCP Options Sets: [DHCP Options Sets](#). Users are prompted for their VPC settings when they launch the Quick Start Guide.

- Each deployment takes about 15 minutes to complete.
- Check the AWS Region that is displayed in the upper-right corner of the navigation bar, and change it if necessary. This is where the network infrastructure for Citrix Web App Firewall will be built. The template is launched in the US East (Ohio) Region by default.

Note:

This deployment includes NetScaler Web App Firewall, which isn't currently supported in all AWS Regions. For a current list of supported Regions, see the AWS Service Endpoints: [AWS Service Endpoints](#).

- On the **Select Template** page, keep the default setting for the template URL, and then choose Next.
- On the **Specify Details** page, specify the stack name as per user convenience. Review the parameters for the template. Provide values for the parameters that require input. For all other parameters, review the default settings and customize them as necessary.

- In the following table, parameters are listed by category and described separately for the deployment option:
- Parameters to deploy NetScaler Web App Firewall into a new or existing VPC (Deployment Option 1)
- When users finish reviewing and customizing the parameters, they should choose Next.

Parameters to deploy NetScaler Web App Firewall into a new VPC

VPC network configuration For reference information on this deployment refer to the CFT template here: [AWS-Quickstart/Quickstart-Citrix-ADC-Web App Firewall/Templates](#).

Parameter label (name)	Default	Description
Primary Availability Zone (PrimaryAvailabilityZone)	Requires input	The Availability Zone for Primary NetScaler Web App Firewall deployment
Secondary Availability Zone (SecondaryAvailabilityZone)	Requires input	The Availability Zone for Secondary NetScaler Web App Firewall deployment
VPC CIDR (VPCCIDR)	10.0.0.0/16	The CIDR block for the VPC. Must be a valid IP CIDR range of the form x.x.x.x/x.
Remote SSH CIDR IP(Management) (RestrictedSSHCIDR)	Requires input	The IP address range that can SSH to the EC2 instance (port: 22).
Remote HTTP CIDR IP(Client) (RestrictedWebAppCIDR)	0.0.0.0/0	The IP address range that can HTTP to the EC2 instance (port: 80)
Remote HTTP CIDR IP(Client) (RestrictedWebAppCIDR)	0.0.0.0/0	The IP address range that can HTTP to the EC2 instance (port: 80)
Primary Management Private Subnet CIDR (PrimaryManagementPrivateSubnetCIDR)	10.0.1.0/24	The CIDR block for Primary Management Subnet located in Availability Zone 1.

Parameter label (name)	Default	Description
Primary Management Private IP (PrimaryManagementPrivateIP)	—	Private IP assigned to the Primary Management ENI (last octet has to be between 5 and 254) from the Primary Management Subnet CIDR.
Primary Client Public Subnet CIDR (PrimaryClientPublicSubnetCIDR)	10.0.2.0/24	The CIDR block for Primary Client Subnet located in Availability Zone 1.
Primary Client Private IP (PrimaryClientPrivateIP)	—	Private IP assigned to the Primary Client ENI (last octet has to be between 5 and 254) from Primary Client IP from the Primary Client Subnet CIDR.
Primary Server Private Subnet CIDR (PrimaryServerPrivateSubnetCIDR)	10.0.3.0/24	The CIDR block for Primary Server located in Availability Zone 1.
Primary Server Private IP (PrimaryServerPrivateIP)	—	Private IP assigned to the Primary Server ENI (last octet has to be between 5 and 254) from the Primary Server Subnet CIDR.
Secondary Management Private Subnet CIDR (SecondaryManagementPrivateSubnetCIDR)	10.0.4.0/24	The CIDR block for Secondary Management Subnet located in Availability Zone 2.
Secondary Management Private IP (SecondaryManagementPrivateIP)	—	Private IP assigned to the Secondary Management ENI (last octet has to be between 5 and 254). It would allocate Secondary Management IP from the Secondary Management Subnet CIDR.
Secondary Client Public Subnet CIDR (SecondaryClientPublicSubnetCIDR)	10.0.5.0/24	The CIDR block for Secondary Client Subnet located in Availability Zone 2.

Parameter label (name)	Default	Description
Secondary Client Private IP (SecondaryClientPrivateIP)	—	Private IP assigned to the Secondary Client ENI (last octet has to be between 5 and 254). It would allocate Secondary Client IP from the Secondary Client Subnet CIDR.
Secondary Server Private Subnet CIDR (Secondary-ServerPrivateSubnetCIDR)	10.0.6.0/24	The CIDR block for Secondary Server Subnet located in Availability Zone 2.
Secondary Server Private IP (SecondaryServerPrivateIP)	—	Private IP assigned to the Secondary Server ENI (last octet has to be between 5 and 254). It would allocate Secondary Server IP from the Secondary Server Subnet CIDR.
VPC Tenancy attribute (VPCTenancy)	default	The allowed tenancy of instances launched into the VPC. Choose Dedicated tenancy to launch EC2 instances dedicated to a single customer.

Bastion host configuration

Parameter label (name)	Default	Description
Bastion Host required (LinuxBastionHostEIP)	No	By default, no bastion host will be configured. But if users want to opt for sandbox deployment select yes from the menu which would deploy a Linux Bastion Host in the public subnet with an EIP that would give users access to the components in the private and public subnet.

NetScaler Web App Firewall Configuration

Parameter label (name)	Default	Description
Key pair name (KeyPairName)	Requires input	A public/private key pair, which allows users to connect securely to the user instance after it launches. This is the key pair users created in their preferred AWS Region; see the Technical Requirements section.
NetScaler Instance Type (CitrixADCInstanceType)	m4.xlarge	The EC2 instance type to use for the ADC instances. Ensure that the instance type opted for aligns with the instance types available in the AWS marketplace or else the CFT might fail.
NetScaler ADC AMI ID (CitrixADCImageID)	—	The AWS Marketplace AMI to be used for NetScaler Web App Firewall deployment. This must match the AMI users subscribed to in step 2.
NetScaler ADC VPX IAM role (iam:GetRole)	—	This Template: AWS-Quickstart/Quickstart-Citrix-ADC-VPX/Templates creates the IAM role and the Instance Profile required for NetScaler VPX. If left empty, CFT creates the required IAM role.
Client PublicIP(EIP) (ClientPublicEIP)	No	Select “Yes” if users want to assign a public EIP to the user Client Network interface. Otherwise, even after the deployment, users still have the option of assigning it later if necessary.

Pooled Licensing configuration

Parameter label (name)	Default	Description
NetScaler Console Pooled Licensing	No	If choosing the BYOL option for licensing, select yes from the list. This allows users to upload their already purchased licenses. Before users begin, they should Configure NetScaler ADC Pooled Capacity to ensure NetScaler Console pooled licensing is available, see Configure NetScalerPooled Capacity
Reachable NetScaler Console / NetScaler Console Agent IP	Requires input	For the Customer Licensed option, whether users deploy NetScaler Console on-prem or an agent in the cloud, make sure to have a reachable NetScaler Console IP which would then be used as an input parameter.
Licensing Mode	Optional	Users can choose from the 3 licensing modes: Configure NetScaler Pooled Capacity. For more information, see Configure Citrix ADC Pooled Capacity
License Bandwidth in Mbps	0 Mbps	Only if the licensing mode is NetScaler VPX Check-in and Pooled-Licensing, then this Check-out Licensing (CICO) field comes into the picture. It allocates an initial bandwidth of the license in Mbps to be allocated after BYOL ADCs are NetScaler virtual CPU Licensing created. It should be a multiple of 10 Mbps. For more information, see Citrix ADC VPX Check-in and Check-out Licensing
License Edition	Premium	Citrix ADC virtual CPU Licensing License Edition for Pooled Capacity Licensing Mode is Premium .

Parameter label (name)	Default	Description
Appliance Platform Type	Optional	Choose the required Appliance Platform Type, only if users opt for CICO licensing mode. Users get the options listed: VPX-200, VPX-1000, VPX-3000, VPX-5000, VPX-8000.
License Edition	Premium	License Edition for vCPU based Licensing is Premium .

AWS Quick Start configuration


Note:

We recommend that users keep the default settings for the following two parameters, unless they are customizing the Quick Start Guide templates for their own deployment projects. Changing the settings of these parameters will automatically update code references to point to a new Quick Start Guide location. For more details, see the AWS Quick Start Guide Contributor's Guide located here: [AWS Quick Starts/Option 1 - Adopt a Quick Start](#).

Parameter label (name)	Default	Description
Quick Start Guide S3 bucket name (QSS3BucketName)	<code>aws-quickstart</code>	The S3 bucket users created for their copy of Quick Start Guide assets, if users decide to customize or extend the Quick Start Guide for their own use. The bucket name can include numbers, lowercase letters, uppercase letters, and hyphens, but should not start or end with a hyphen.

Parameter label (name)	Default	Description
Quick Start Guide S3 key prefix (QSS3KeyPrefix)	quickstart-citrix-adc-vpx/	The S3 key name prefix, from the Object Key and Metadata: Object Key and Metadata , is used to simulate a folder for the user copy of Quick Start Guide assets, if users decide to customize or extend the Quick Start Guide for their own use. This prefix can include numbers, lowercase letters, uppercase letters, hyphens, and forward slashes.

- On the **Options** page, users can specify a Resource Tag or key-value pair for resources in your stack and set advanced options. For more information on Resource Tags, see: [Resource Tag](#). For more information on setting AWS CloudFormation Stack Options, see: [Setting AWS CloudFormation Stack Options](#). When users are done, they should choose **Next**.
- On the **Review** page, review and confirm the template settings. Under **Capabilities**, select the two check boxes to acknowledge that the template creates IAM resources and that it might require the capability to auto-expand macros.
- Choose **Create** to deploy the stack.
- Monitor the status of the stack. When the status is **CREATE_COMPLETE**, the NetScaler Web App Firewall instance is ready.
- Use the URLs displayed in the **Outputs** tab for the stack to view the resources that were created.

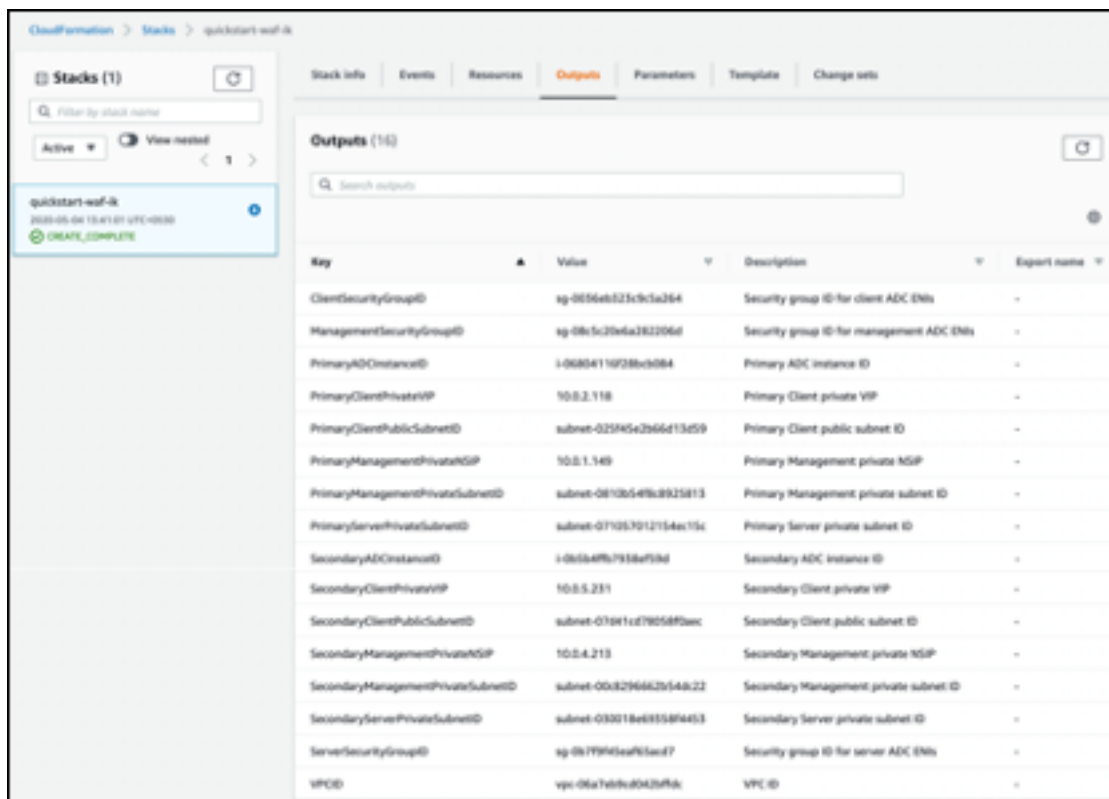

Step 4: Test the deployment

We refer to the instances in this deployment as **primary** and **secondary**. Each instance has different IP addresses associated with it. When the Quick Start has been deployed successfully, traffic goes through the primary NetScaler Web App Firewall instance configured in Availability Zone 1. During failover conditions, when the primary instance does not respond to client requests, the secondary Web App Firewall instance takes over.

The Elastic IP address of the virtual IP address of the primary instance migrates to the secondary instance, which takes over as the new primary instance.

In the failover process, NetScaler Web App Firewall does the following:

- NetScaler Web App Firewall checks the virtual servers that have IP sets attached to them.
- NetScaler Web App Firewall finds the IP address that has an associated public IP address from the two IP addresses that the virtual server is listening on. One that is directly attached to the virtual server, and one that is attached through the IP set.
- NetScaler Web App Firewall reassociates the public Elastic IP address to the private IP address that belongs to the new primary virtual IP address.

To validate the deployment, perform the following:

- Connect to the primary instance

For example, with a proxy server, jump host (a Linux/Windows/FW instance running in AWS, or the bastion host), or another device reachable to that VPC or a Direct Connect if dealing with on-prem connectivity.

- Perform a trigger action to force failover and check whether the secondary instance takes over.

Tip:

To further validate the configuration with respect to NetScaler Web App Firewall, run the following command after connecting to the **Primary NetScaler Web App Firewall instance**:

```
Sh appfw profile QS-Profile
```

Connect to NetScaler Web App Firewall HA pair using bastion host


If users are opting for Sandbox deployment (for example, as part of CFT, users opt for configuring a Bastion Host), a Linux bastion host deployed in a public subnet will be configured to access the Web App Firewall interfaces.

In the AWS CloudFormation console, which is accessed by signing in here: [Sign in](#), choose the master stack, and on the **Outputs** tab, find the value of **LinuxBastionHostEIP1**.

Key	Value	Description
InstanceProfileName	tCaT-tag-citrix-adc-master-10599539-WorkLoadStack-GZX61DAOP4J-IAMRoleStack-36J5FNFG022N-CitrixNodesProfile-7R84KI62FPA3	Instance Profile for ADCs
LinuxBastionHostEIP1	3.124.177.42	Elastic IP 1 for Bastion
PrimaryADCInstanceID	I-09956d309fe8f4752	Primary ADC Instance ID
PrimaryClientPrivateVIP	10.0.2.203	Primary Client Private VIP
PrimaryClientPublicEIP	18.195.151.157	Primary Client Public EIP
PrimaryClientPublicSubnetID	subnet-04c7c93c8f0e12d5e	Primary Client Public Subnet ID
PrimaryManagementPrivateNSIP	10.0.1.91	Primary Management Private NSIP

- **PrivateManagementPrivateNSIP** and **PrimaryADCInstanceID** key’s value to be used in the later steps to SSH into the ADC.
- Choose **Services**.

- On the **Compute** tab, select **EC2**.
 - Under **Resources**, choose **Running Instances**.
 - On the **Description** tab of the primary Web App Firewall instance, note the **IPv4 public IP** address. Users need that IP address to construct the SSH command.

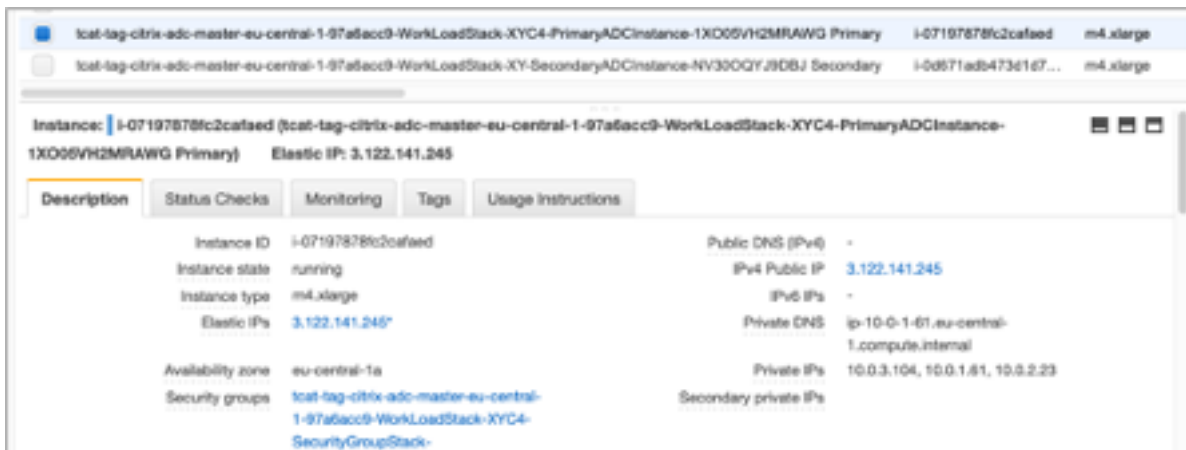

- To store the key in the user keychain, run the command `ssh-add -K [your-key-pair].pem`

On Linux, users might need to omit the -K flag.


- Log in to the bastion host using the following command, using the value for **LinuxBastionHostEIP1** that users noted in step 1.

```
ssh -A ubuntu@[LinuxBastionHostEIP1]
```

- From the bastion host, users can connect to the primary Web App Firewall instance by using SSH.

```
ssh nsroot@[Primary Management Private NSIP]
```

Password: [Primary ADC Instance ID]

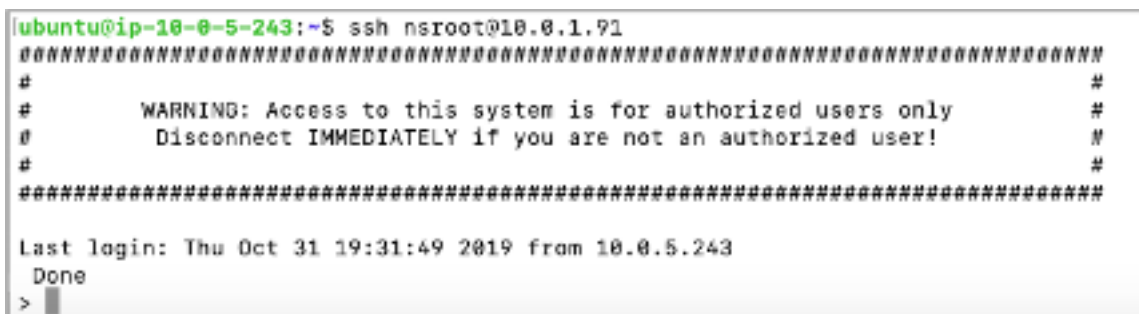

Now users are connected to the primary NetScaler Web App Firewall instance. To see the available commands, users can run the help command. To view the current HA configuration, users can run the show HA node command.

NetScaler Console

NetScaler Application Delivery Management Service provides an easy and scalable solution to manage NetScaler deployments that include NetScaler MPX, NetScaler VPX, NetScaler Gateway, NetScaler Secure Web Gateway, NetScaler SDX, NetScaler ADC CPX, and NetScaler SD-WAN appliances that are deployed on-premises or on the cloud.

The NetScaler Console Service documentation includes information about how to get started with the service, a list of features supported on the service, and configuration specific to this service solution.

For more information, see [NetScaler Console Overview](#).

Deploying NetScaler VPX instances on AWS using NetScaler Console

When customers move their applications to the cloud, the components that are part of their application increase, become more distributed, and need to be dynamically managed.

For more information, see [Provisioning NetScaler VPX Instances on AWS](#).

NetScaler Web App Firewall and OWASP Top 10 –2017

The Open Web Application Security Project: [OWASP](#) released the OWASP Top 10 for 2017 for web application security. This list documents the most common web application vulnerabilities and is a great starting point to evaluate web security. Here we detail how to configure the NetScaler Web App Firewall (Web App Firewall) to mitigate these flaws. Web App Firewall is available as an integrated module in the NetScaler (Premium Edition) as well as a complete range of appliances.

For more information, see [NetScaler Web App Firewall and OWASP top ten–2021](#).

The full OWASP Top 10 document is available at [OWASP Top Ten](#).

Signatures provide the following deployment options to help users to optimize the protection of user applications:

- **Negative Security Model:** With the negative security model, users employ a rich set of pre-configured signature rules to apply the power of pattern matching to detect attacks and protect against application vulnerabilities. Users block only what they don't want and allow the rest. Users can add their own signature rules, based on the specific security needs of user applications, to design their own customized security solutions.
- **Hybrid security Model:** In addition to using signatures, users can use positive security checks to create a configuration ideally suited for user applications. Use signatures to block what users don't want, and use positive security checks to enforce what is allowed.

To protect user applications by using signatures, users must configure one or more profiles to use their signatures object. In a hybrid security configuration, the SQL injection and cross-site scripting patterns, and the SQL transformation rules, in the user signatures object are used not only by the signature rules, but also by the positive security checks configured in the Web Application Firewall profile that is using the signatures object.

The Web Application Firewall examines the traffic to user protected websites and web services to detect traffic that matches a signature. A match is triggered only when every pattern in the rule matches the traffic. When a match occurs, the specified actions for the rule are invoked. Users can display an error page or error object when a request is blocked. Log messages can help users to identify attacks being launched against user applications. If users enable statistics, the Web Application Firewall maintains data about requests that match a Web Application Firewall signature or security check.

If the traffic matches both a signature and a positive security check, the more restrictive of the two actions are enforced. For example, if a request matches a signature rule for which the block action is disabled, but the request also matches an SQL Injection positive security check for which the action is block, the request is blocked. In this case, the signature violation might be logged as [not blocked], although the request is blocked by the SQL injection check.

Customization: If necessary, users can add their own rules to a signatures object. Users can also customize the SQL/XSS patterns. The option to add their own signature rules, based on the specific security needs of user applications, gives users the flexibility to design their own customized security solutions. Users block only what they don't want and allow the rest. A specific fast-match pattern in a specified location can significantly reduce processing overhead to optimize performance. Users can add, modify, or remove SQL injection and cross-site scripting patterns. Built-in RegEx and expression editors help users configure user patterns and verify their accuracy.

NetScaler Web App Firewall

Web App Firewall is an enterprise grade solution offering state of the art protections for modern applications. NetScaler Web App Firewall mitigates threats against public-facing assets, including websites, web applications, and APIs. NetScaler Web App Firewall includes IP reputation-based filtering, Bot mitigation, OWASP Top 10 application threats protections, Layer 7 DDoS protection and more. Also included are options to enforce authentication, strong SSL/TLS ciphers, TLS 1.3, rate limiting and rewrite policies. Using both basic and advanced Web App Firewall protections, NetScaler Web App Firewall provides comprehensive protection for your applications with unparalleled ease of use. Getting up and running is a matter of minutes. Further, using an automated learning model, called dynamic profiling, NetScaler Web App Firewall saves users precious time. By automatically learning how a protected application works, Web App Firewall adapts to the application even as developers deploy and alter the applications. NetScaler Web App Firewall helps with compliance for all major regulatory standards and bodies, including PCI-DSS, HIPAA, and more. With our CloudFormation templates, it

has never been easier to get up and running quickly. With auto scaling, users can rest assured that their applications remain protected even as their traffic scales up.

Web App Firewall deployment strategy

The first step to deploying the web application firewall is to evaluate which applications or specific data need maximum security protection, which ones are less vulnerable, and the ones for which security inspection can safely be bypassed. This helps users in coming up with an optimal configuration, and in designing appropriate policies and bind points to segregate the traffic. For example, users might want to configure a policy to bypass security inspection of requests for static web content, such as images, MP3 files, and movies, and configure another policy to apply advanced security checks to requests for dynamic content. Users can use multiple policies and profiles to protect different contents of the same application.

The next step is to baseline the deployment. Start by creating a virtual server and run test traffic through it to get an idea of the rate and amount of traffic flowing through the user system.

Then, deploy the Web App Firewall. Use NetScaler console and the Web App Firewall StyleBook to configure the Web App Firewall. See the StyleBook section below in this guide for details.

After the Web App Firewall is deployed and configured with the Web App Firewall StyleBook, a useful next step would be to implement the NetScaler ADC Web App Firewall and OWASP Top 10.

Finally, three of the Web App Firewall protections are especially effective against common types of Web attacks, and are therefore more commonly used than any of the others. Thus, they should be implemented in the initial deployment.

For more information, see [Deploy NetScaler Web App Firewall on Azure](#).

NetScaler Console

NetScaler console provides a scalable solution to manage NetScaler ADC deployments that include NetScaler ADC MPX, NetScaler ADC VPX, NetScaler Gateway, NetScaler Secure Web Gateway, NetScaler ADC SDX, NetScaler ADC CPX, and NetScaler SD-WAN appliances that are deployed on-premises or on the cloud.

NetScaler console application analytics and management features

The features that are supported on the NetScaler console are key to the NetScaler Console role in App Security.

For more information on features, see [Features and solutions](#).

Prerequisites

Before attempting to create a VPX instance in AWS, users should ensure that prerequisites are met. For more information, see [Prerequisites](#):

Limitations and usage guidelines

The limitations and usage guidelines that are available at [Limitations and usage guidelines](#) apply when deploying a Citrix ADC VPX instance on AWS.

Technical requirements

Before users launch the Quick Start Guide to begin a deployment, the user account must be configured as specified in the following resource table. Otherwise, the deployment might fail.

Resources

If necessary, sign in to the user amazon account and request service limit increases for the following resources here: [AWS/Sign in](#). You might need to do this if you already have an existing deployment that uses these resources, and you think you might exceed the default limits with this deployment. For default limits, see the AWS Service Quotas in the AWS documentation: [AWS Service Quotas](#).

The AWS Trusted Advisor, found here: [AWS/Sign in](#), offers a service limits check that displays usage and limits for some aspects of some services.

Resource	This deployment uses
VPCs	1
Elastic IP addresses	0/1(for Bastion host)
IAM security groups	3
IAM roles	1
Subnets	6(3/Availability zone)
Internet Gateway	1
Route Tables	5
Web App Firewall VPX instances	2
Bastion host	0/1
NAT gateway	2

Regions

NetScaler Web App Firewall on AWS isn't currently supported in all AWS Regions. For a current list of supported Regions, see AWS Service Endpoints in the AWS documentation: [AWS Service Endpoints](#).

For more information on AWS regions and why cloud infrastructure matters, see: [Global Infrastructure](#).

Key Pair

Make sure that at least one Amazon EC2 key pair exists in the user AWS account in the Region where users are planning to deploy using the Quick Start Guide. Make note of the key pair name. Users are prompted for this information during deployment. To create a key pair, follow the instructions for Amazon EC2 Key Pairs and Linux Instances in the AWS documentation: [Amazon EC2 Key Pairs and Linux Instances](#).

If users are deploying the Quick Start Guide for testing or proof-of-concept purposes, we recommend that they create a new key pair instead of specifying a key pair that's already being used by a production instance.

References

- [HTML SQL Injection Check](#)
- [XML SQL Injection Check](#)
- [Using the Command Line to Configure the HTML Cross-Site Scripting Check](#)
- [XML Cross-Site Scripting Check](#)
- [Using the Command Line to Configure the Buffer Overflow Security Check](#)
- [Adding or Removing a Signature Object](#)
- [Configuring or Modifying a Signatures Object](#)
- [Updating a Signature Object](#)
- [Snort Rule Integration](#)
- [Bot Detection](#)
- [Deploy a NetScaler VPX instance on Microsoft Azure](#)

Configure a NetScaler VPX instance to use SR-IOV network interface

May 2, 2023

Note

Support for SR-IOV interfaces in a high availability setup is available from NetScaler release 12.0 57.19 onwards.

After you have created a NetScaler VPX instance on AWS, you can configure the virtual appliance to use SR-IOV network interfaces, by using the AWS CLI.

In all NetScaler VPX models, except NetScaler VPX AWS Marketplace Editions of 3G and 5G, SR-IOV is not enabled in the default configuration of a network interface.

Before you start the configuration, read the following topics:

- [Prerequisites](#)
- [Limitations and Usage Guidelines](#)

This section includes the following topics:

- [Change the Interface Type to SR-IOV](#)
- [Configure SR-IOV on a High Availability Setup](#)

Change the interface type to SR-IOV

You can run the show interface summary command to check the default configuration of a network interface.

Example 1: The following CLI screen capture shows the configuration of a network interface where SR-IOV is enabled by default on NetScaler VPX AWS Marketplace Editions of 3G and 5G.

```
> show interface summary
-----
Interface  MTU      MAC          Suffix
-----
1  1/1      1500        0a:1e:2e:17:a2:37  Intel 82599 10G VF Interface
2  L0/1     1500        0a:1e:2e:17:a2:37  Netscaler Loopback interface
Done
```

Example 2: The following CLI screen capture shows the default configuration of a network interface where SR-IOV is not enabled.

```

Done
[> sh int s
-----
Interface  MTU      MAC              Suffix
-----
1  1/1      1500             12:fc:04:c5:d0:12  NetScaler Virtual Interface
2  L0/1     1500             12:fc:04:c5:d0:12  Netscaler Loopback interface
Done
>

```

For more information about changing the interface type to SR-IOV, see <http://docs.aws.amazon.com/AWSEC2/latest/UserGuide/sriov-networking.html>

To change the interface type to SR-IOV

1. Shut down the NetScaler VPX instance running on AWS.
2. To enable SR-IOV on the network interface, type the following command in the AWS CLI.


```
$ aws ec2 modify-instance-attribute --instance-id <instance\_id> --sriov-net-support simple
```
3. To check if SR-IOV has been enabled, type the following command in the AWS CLI.


```
$ aws ec2 describe-instance-attribute --instance-id <instance\_id> --attribute sriovNetSupport
```

Example 3: Network interface type changed to SR-IOV, by using the AWS CLI.

```

aws ec2 modify-instance-attribute --instance-id i-008c1230aaf303bee --sriov-net-support simple
aws ec2 describe-instance-attribute --instance-id i-008c1230aaf303bee --attribute sriovNetSupport
{
  "InstanceId": "i-008c1230aaf303bee",
  "SriovNetSupport": {
    "Value": "simple"
  }
}

```

If SR-IOV is not enabled, value for SriovNetSupport is absent.

Example 4: In the following example, SR-IOV support is not enabled.

```

{
  "InstanceId": "i-0c3e84cfa65b04cc8",
  "SriovNetSupport": {}
}

```

4. Power on the VPX instance. To see the changed status of the network interface, type “show interface summary”in the CLI.

Example 5: The following screen capture shows the network interfaces with SR-IOV enabled. The interfaces 10/1, 10/2, 10/3 are SR-IOV enabled.

```
> show interface summary
-----
Interface  MTU      MAC              Suffix
-----
1    10/1      1500            0a:1e:2e:17:a2:37  Intel 82599 10G VF Interface
2    10/2      1500            0a:df:17:0a:fe:83  Intel 82599 10G VF Interface
3    10/3      1500            0a:de:5d:31:bf:c3  Intel 82599 10G VF Interface
4    L0/1      1500            0a:1e:2e:17:a2:37  Netscaler Loopback interface
Done
```

These steps complete the procedure to configure VPX instances to use SR-IOV network interfaces.

Configure SR-IOV on a high availability setup

High availability is supported with SR-IOV interfaces from NetScaler release 12.0 build 57.19 onwards.

If the high availability setup was deployed manually or by using the Citrix CloudFormation template for NetScaler version 12.0 56.20 and lower, the IAM role attached to the high availability setup must have the following privileges:

- ec2:DescribeInstances
- ec2:DescribeNetworkInterfaces
- ec2:DetachNetworkInterface
- ec2:AttachNetworkInterface
- ec2:StartInstances
- ec2:StopInstances
- ec2:RebootInstances
- autoscaling:*
- sns:*
- sqs:*
- IAM:SimulatePrincipalPolicy
- IAM:GetRole

By default, the Citrix CloudFormation template for NetScaler version 12.0 57.19 automatically adds the required privileges to the IAM role.

Note

A high availability setup with SR-IOV Interfaces takes around 100 seconds of downtime.

Related resources:

For more information about IAM roles, see [AWS documentation](#).

Configure a NetScaler VPX instance to use Enhanced Networking with AWS ENA

May 2, 2023

After you have created a NetScaler VPX instance on AWS, you can configure the virtual appliance to use [Enhanced Networking](#) with [AWS Elastic Network Adapter \(ENA\)](#), by using AWS CLI.

Coupled with AWS ENA, enhanced networking provides higher bandwidth, higher packet-per-second (PPS) performance, and consistently lower inter-instance latencies.

Before you start the configuration, read the following topics:

- [Prerequisites](#)
- [Limitations and Usage Guidelines](#)

The following HA configurations are supported for ENA-enabled instances:

- Private IP addresses can be moved within the same availability zone.
- Elastic IP addresses can be moved across availability zones.

Upgrade a NetScaler VPX instance on AWS

May 2, 2023

You can upgrade the EC2 instance type, throughput, software edition, and the system software of a NetScaler VPX running on AWS. For certain types of upgrades, Citrix recommends using the High Availability Configuration method to minimize downtime.

Note:

- NetScaler software release 10.1.e-124.1308.e or later for a NetScaler VPX AMI (including both utility license and customer license) does not support the M1 and M2 instance families.
- Because of changes in VPX instance support, downgrading from 10.1.e-124 or a later release to 10.1.123.x or an earlier release is not supported.
- Most of the upgrades do not require the launch of a new AMI, and the upgrade can be done on the current NetScaler AMI instance. If you do want to upgrade to a new NetScaler AMI instance, use the high availability configuration method.

Change the EC2 instance type of a NetScaler VPX instance on AWS

If your NetScaler VPX instances are running release 10.1.e-124.1308.e or later, you can change the EC2 instance type from the AWS console as follows:

1. Stop the VPX instance.
2. Change the EC2 instance type from the AWS console.
3. Start the instance.

You can also use the above procedure to change the EC2 instance type for a release, earlier than 10.1.e-124.1308.e, unless you want to change the instance type to M3. In that case, you must first follow the standard NetScaler upgrade procedure, at, to upgrade the NetScaler software to 10.1.e-124 or a later release, and then follow the above steps.

Upgrade the throughput or software edition of a NetScaler VPX instance on AWS

To upgrade the software edition (for example, to upgrade from Standard to Premium edition) or throughput (for example, to upgrade from 200 Mbps to 1000mbps), the method depends on the instance's license.

Using a customer license (Bring-Your-Own-License)

If you are using a customer license, you can purchase and download the new license from the Citrix website, and then install the license on the VPX instance. For more information about downloading and installing a license from the Citrix website, see the VPX Licensing Guide.

Using a utility license (Utility license with hourly fee)

AWS does not support direct upgrades for fee-based instances. To upgrade the software edition or throughput of a fee based NetScaler VPX instance, launch a new AMI with the desired license and capacity and migrate the older instance configuration to the new instance. This can be achieved by using a NetScaler high availability configuration as described in Upgrade to a new NetScaler AMI instance by using a NetScaler high availability configuration subsection in this page.

Upgrade the system software of a NetScaler VPX instance on AWS

If you need to upgrade a VPX instance running 10.1.e-124.1308.e or a later release, follow the standard NetScaler upgrade procedure at [Upgrade and downgrade a NetScaler appliance](#).

If you need to upgrade a VPX instance running a release older than 10.1.e-124.1308.e to 10.1.e-124.1308.e or a later release, first upgrade the system software, and then change the instance type to M3 as follows:

1. Stop the VPX instance.
2. Change the EC2 instance type from the AWS console.
3. Start the instance.

Upgrade to a new NetScaler AMI instance by using a NetScaler high availability configuration

To use the high availability method of upgrading to a new NetScaler AMI instance, perform the following tasks:

- Create a new instance with the desired EC2 instance type, software edition, throughput, or software release from the AWS marketplace.
- Configure high availability between the old instance (to be upgraded) and the new instance. After high availability is configured between the old and the new instance, configuration from the old instance is synchronized to the new instance.
- Force an HA failover from the old instance to the new instance. As a result, the new instance becomes primary and starts receiving traffic.
- Stop, and reconfigure or remove the old instance from AWS.

Prerequisites and points to consider

- Ensure you understand how high availability works between two NetScaler VPX instances on AWS. For more information about high availability configuration between two NetScaler VPX instances on AWS, see [Deploy a high availability pair on AWS](#).
- You must create the new instance in the same availability zone as the old instance, having the exact same security group and subnet.
- High availability setup requires access and secret keys associated with the user's AWS Identity and Access Management (IAM) account for both instances. If the correct key information is not used when creating VPX instances, the HA setup fails. For more information about creating an IAM account for a VPX instance, see [Prerequisites](#).
 - You must use the EC2 console to create the new instance. You cannot use the AWS 1-click launch, because it does not accept the access and secret keys as the input.
 - The new instance must have only one ENI interface.

To upgrade a NetScaler VPX Instance by using a high availability configuration, follow these steps:

1. Configure high availability between the old and the new instance. To configure high availability between two NetScaler VPX instances, at the command prompt of each instance, type:

- `add ha node <nodeID> <IPaddress of the node to be added>`
- `save config`

Example:

At the command prompt of the old instance, type:

```
1 add ha node 30 192.0.2.30
2 Done
```

At the command prompt of the new instance, type:

```
1 add ha node 10 192.0.2.10
2 Done
```

Note the following:

- In the HA setup, the old instance is the primary node and the new instance is the secondary node.
- The NSIP IP address is not copied from the old instance to the new instance. Therefore, after the upgrade, your new instance has a different management IP address from the previous one.
- The `nsroot` account password of the new instance is set to that of the old instance after HA synchronization.

For more information about high availability configuration between two NetScaler VPX instances on AWS, see [Deploy a high availability pair on AWS](#).

2. Force an HA failover. To force a failover in a high availability configuration, at the command prompt of either of the instances, type:

```
1 force HA failover
```

As the result of forcing a failover, the ENIs of the old instance are migrated to the new instance and traffic flows through the new instance (the new primary node). The old instance (the new secondary node) restarts.

If the following warning message appears, type N to abort the operation:

```
1 [WARNING]:Force Failover may cause configuration loss, peer health
   not optimum. Reason(s):
2 HA version mismatch
3 HA heartbeats not seen on some interfaces
4 Please confirm whether you want force-failover (Y/N)?
```


The warning message appears because the system software of the two VPX instances is not HA compatible. As a result, the configuration of the old instance cannot be automatically synced to the new instance during a forced failover.

Following is the workaround for this issue:

- a) At the NetScaler shell prompt of the old instance, type the following command to create a backup of the configuration file (ns.conf):

```
copy /nsconfig/ns.conf to /nsconfig/ns.conf.bkp
```

- b) Remove the following line from the backup configuration file (ns.conf.bkp):

- `set ns config -IPAddress <IP> -netmask <MASK>`

Forexample, `set ns config -IPAddress 192.0.2.10 -netmask 255.255.255.0`

- c) Copy the old instance's backup configuration file (ns.conf.bkp) to the /nsconfig directory of the new instance.

- d) At the NetScaler shell prompt of the new instance, type the following command to load the old instance's configuration file (ns.conf.bkp) on the new instance:

- `batch -f /nsconfig/ns.conf.bkp`

- e) Save the configuration on the new instance.

- `save conifg`

- f) At the command prompt of either of the nodes, type the following command to force a failover, and then type Y for the warning message to confirm the force failover operation:

- `force ha failover`

Example:

```
1         > force ha failover
2
3  [WARNING]:Force Failover may cause configuration loss, peer health
4             not optimum.
5             Reason(s):
6             HA version mismatch
7             HA heartbeats not seen on some interfaces
8             Please confirm whether you want force-failover (Y/N)? Y
```

3. Remove the HA configuration, so that the two instances are no longer in an HA configuration. First remove the HA configuration from the secondary node and then remove the HA configuration from the primary node.

To remove an HA configuration between two NetScaler VPX instances, at the command prompt of each instance, type:

```
1 > remove ha node \<nodeID\>
2 > save config
```

For more information about high availability configuration between two VPX instances on AWS, see [Deploy a high availability pair on AWS](#).

Example:

At the command prompt of the old instance (new secondary node), type:

```
1 > remove ha node 30
2 Done
3 > save config
4 Done
```

At the command prompt of the new instance (new primary node), type:

```
1 > remove ha node 10
2 Done
3 > save config
4 Done
```


Troubleshoot a VPX instance on AWS

May 2, 2023

Amazon does not provide console access to a NetScaler VPX instance. To troubleshoot, you have to use the AWS GUI to view the activity log. You can debug only if the network is connected. To view an instance's System Log, right-click the instance and select System Log.

NetScaler provides support for AWS Marketplace-licensed NetScaler VPX instances (utility license with hourly fee) on AWS. To file a support case, find your AWS account number and support PIN code, and call NetScaler support. You will also be asked for your name and email address. To find the support PIN, log on to the VPX GUI and navigate to the System page.

Here is an example of a system page showing the support PIN.

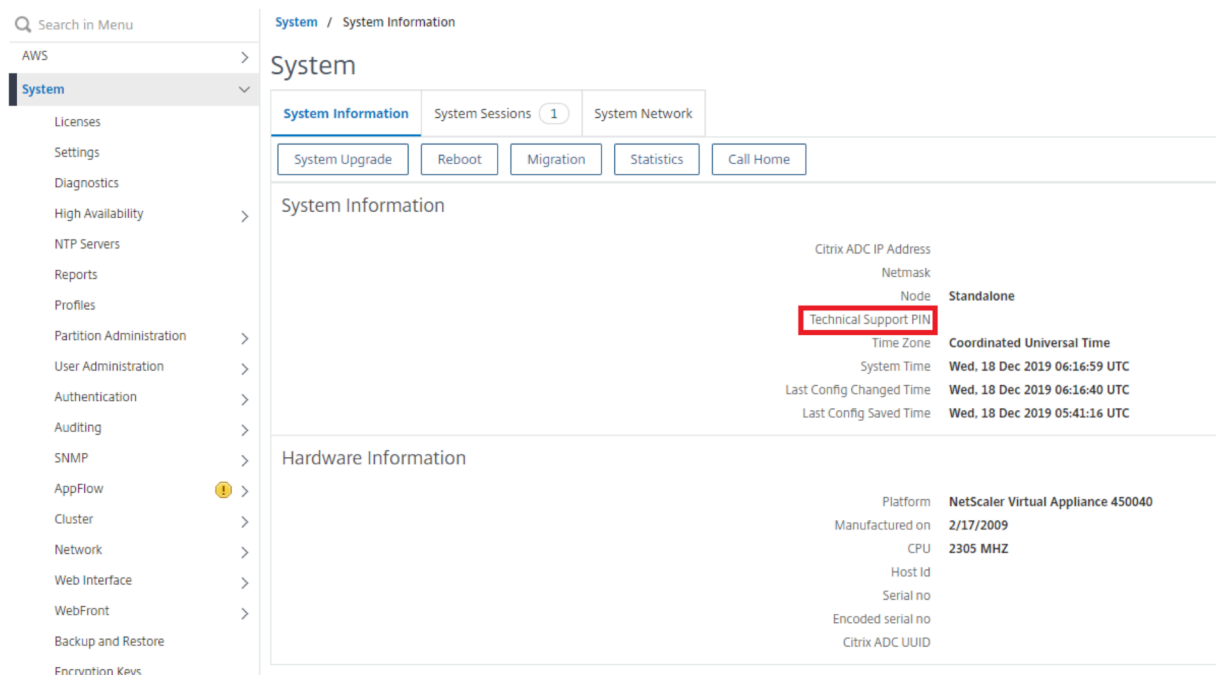

AWS FAQs

July 31, 2024

- **Does a NetScaler VPX instance support the encrypted volumes in AWS?**

Encryption and decryption happen at the hypervisor level, and hence it works seamlessly with any instance. For more information about the encrypted volumes see the following AWS document:

<https://docs.aws.amazon.com/kms/latest/developerguide/services-efs.html>

- **What is the best way to provision NetScaler VPX instance on AWS?**

You can provision a NetScaler VPX instance on AWS by any of the following ways:

- AWS CloudFormation Template (CFT) in AWS marketplace
- NetScaler Console
- AWS Quick Starts
- Citrix AWS CFTs in GitHub
- Citrix Terraform Scripts in GitHub
- Citrix Ansible Playbooks in GitHub
- AWS EC2 launch workflow

You can choose any of the listed options based on the automation tool that you use.

For more details about the options, see [NetScaler VPX on AWS](#).

- **How to upgrade NetScaler VPX instance in AWS?**

To upgrade the NetScaler VPX instance in AWS, you can upgrade the system software or upgrade to a new NetScaler VPX Amazon Machine Image (AMI) by following the procedure at [Upgrade a NetScaler VPX instance on AWS](#).

The recommended way to upgrade a NetScaler VPX instance is using the ADM service by following the procedure at [Use jobs to upgrade NetScaler instances](#).

- **What is the HA failover time for NetScaler VPX in AWS?**

- HA failover of NetScaler VPX within the AWS availability zone takes around 3 seconds.
- HA failover of NetScaler VPX across AWS availability zones takes around 5 seconds.

- **What level of support is provided for NetScaler VPX marketplace subscription customers who provide the technical support PIN?**

By default, the “Select for Software” service is provided to customers who provide the technical support PIN.

- **In High availability across different zones using Elastic IP deployment, do we need to create Multiple IP Sets for each application?**

Yes. If there are multiple applications with multiple VIPs mapped to multiple EIPs then multiple IP Sets are required. Therefore during HA failover, all the primary VIP mappings of EIPs are changed to secondary (new primary) VIPs.

- **Why is INC mode enabled in high availability across different zone deployments?**

HA pairs across availability zones are in different networks. For HA synchronization, network configuration must not be synchronized. This is achieved by enabling INC mode on HA pair.

- **Can HA node in one availability zone communicate with back-end servers in another availability zone, provided those availability zones are in same VPC?**

Yes, subnets in different availability zones of the same VPC are reachable by adding an extra route pointing to the backend-server subnet via SNIP. For example, if the SNIP subnet of ADC in AZ1 is 192.168.3.0/24 and the backend-server subnet in AZ2 is 192.168.6.0/24, then a route must be added in the NetScaler appliance present in AZ1 as 192.168.6.0 255.255.255.0 192.168.3.1.

- **Can High availability across different zones using Elastic IP and High availability across different zones using Private IP deployments work together?**

Yes, both the configurations can be applied on the same HA Pair.

- **In High availability across different zones using Private IP deployment, if there are multiple subnets with multiple route tables in a VPC, how does a secondary node in HA pair know about the route table to be checked during HA failover?**

Secondary node is aware of the primary NICs and searches across all the route tables in a VPC.

- **What is the size of the `/var` partition when using the default image for VPX on AWS? How to increase the disk space?**

The size of the root disk is limited to 20 GB to keep the disk image small.

If you want to increase the `/var/core/` or the `/var/crash/` directory space, attach an extra disk. To increase the `/var` size, currently, you must attach an extra disk and create a symbolic link to `/var`, after copying the critical contents to the new disk.

- **How many packet engines are activated and allocated to vCPUs?**

The packet engines (PEs) are limited by the number of licensed vCPUs. The NetScaler daemons are not pinned to any particular vCPU and might run on any of the non-PE vCPUs. According to AWS, the C5.9xlarge is a 36vCPU instance with 72 GB memory. With pooled licensing, the NetScaler VPX instance deploys with the maximum number of PEs. In this case, 19 PEs run on cores 1–19. However, ADC management processes run from CPUs 20–31.

- **How to decide the right AWS instance for ADC?**

1. Understand your use case and requirements like throughput, PPS, SSL requirement, and average packet size.
2. Choose the right ADC offering and licensing that meets your requirements, such as VPX bandwidth offerings or vCPU based licensing.
3. Based on the chosen offering, decide on the AWS instance.

Example:

A 5 Gbps license enables 5 data packet engines. Hence, the vCPU requirement is 6 (5+1 for management). But 6 vCPU instance is not available. So an 8 vCPU is good enough to reach that throughput provided you choose a network that supports 5 Gbps bandwidth. For example, you must choose m5.2xlarge for a 5 Gbps bandwidth license to enable max PE allocation for 5 Gbps license. But if you use vCPU license that is not limited by throughput, you might get 5 Gbps throughput using the m5.xlarge instance itself.

Instance Size	vCPU	Memory (GiB)	Instance Storage (GiB)	Network Bandwidth (Gbps)	EBS Bandwidth (Mbps)
m5.large	2	8	EBS-Only	Up to 10	Up to 4,750
m5.xlarge	4	16	EBS-Only	Up to 10	Up to 4,750
m5.2xlarge	8	32	EBS-Only	Up to 10	Up to 4,750
m5.4xlarge	16	64	EBS-Only	Up to 10	4,750

- **Is three NICs-three subnets deployment mandatory for ADC in AWS?**

Three NICs-three subnets is the recommended deployment, where each one for management, client and server network. This deployment gives better traffic isolation and VPX performance. Two NICs-two subnets, and one NIC-one subnet are the other available options. It is not recommended to have multiple NICs sharing a subnet in AWS, such as a two NICs—one subnet deployment. This scenario can cause networking issues like asymmetric routing. For more information, see [Best practices for configuring network interfaces in AWS](#).

- **Why does an ENA driver on AWS always indicate a 1Gbps (1/1) link speed, irrespective of the instance's network capabilities?**

The reported speed of an AWS Elastic Network Adapter (ENA) is often displayed as 1Gbps (1/1) regardless of the selected instance type. This is because the indicated speed does not directly reflect the actual network performance. Unlike traditional network interfaces, ENA speeds can dynamically scale based on the instance's requirements and workload. The true network performance is primarily determined by the instance type and size. Therefore, the actual network throughput can vary significantly depending on the specific instance type and the current network load.

Deploy a NetScaler VPX instance on Microsoft Azure

November 5, 2024

When you deploy a NetScaler VPX instance on Microsoft Azure Resource Manager (ARM), you can use both of the following feature sets to achieve your business needs:

- Azure cloud computing capabilities
- NetScaler load balancing and traffic management features

You can deploy NetScaler VPX instances on ARM either as standalone instances or as high availability pairs in active-standby modes.

You can deploy a NetScaler VPX instance on the Microsoft Azure in two ways:

- Through Azure Marketplace. The NetScaler VPX virtual appliance is available as an image in the Microsoft Azure Marketplace.
- Using the NetScaler Azure Resource Manager (ARM) json template available on GitHub. For more information, see the [GitHub repository for NetScaler solution templates](#).

The Microsoft Azure stack is an integrated platform of hardware and software that delivers the Microsoft Azure public cloud services in a local data center to let organizations construct hybrid clouds. You can now deploy the NetScaler VPX instances on the Microsoft Azure stack.

Note:

Azure restricts access to traffic originating from outside Azure and blocks them. To provide access, enable the service or port by adding an inbound rule in the network security group attached to the NIC of the VM to which a public IP address is attached. For more information, see Azure documentation about [Inbound NAT rules](#).

Prerequisite

You need some prerequisite knowledge before deploying a NetScaler VPX instance on Azure.

- Familiarity with Azure terminology and network details. For information, see [Azure terminology](#).
- Knowledge of a NetScaler appliance. For detailed information the NetScaler appliance, see [NetScaler](#)
- Knowledge of NetScaler networking. See the [Networking](#) topic.

How a NetScaler VPX instance works on Azure

In an on-premises deployment, a NetScaler VPX instance requires at least three IP addresses:

- Management IP address, called NSIP address
- Subnet IP (SNIP) address for communicating with the server farm
- Virtual server IP (VIP) address for accepting client requests

For more information, see [Network architecture for NetScaler VPX instances on Microsoft Azure](#).

Note:

NetScaler VPX instance supports both the Intel and AMD processors. VPX virtual appliances can be deployed on any instance type that has two or more virtualized cores and more than 2 GB memory. For more information on system requirements, see [NetScaler VPX data sheet](#).

In an Azure deployment, you can provision a NetScaler VPX instance on Azure in three ways:

- Multi-NIC multi-IP architecture
- Single NIC multi-IP architecture
- Single NIC single IP

Depending on your needs, you can use any of these supported architecture types.

Multi-NIC multi-IP architecture

In this deployment type, you can have more than one network interfaces (NICs) attached to a VPX instance. Any NIC can have one or more IP configurations - static or dynamic public and private IP addresses assigned to it.

For more information, see the following use cases:

- [Configure a high-availability setup with multiple IP addresses and NICs](#)
- [Configure a high-availability setup with multiple IP addresses and NICs by using PowerShell commands](#)

Note:

To avoid MAC moves and interface mutes on Azure environments, Citrix recommends you to create a VLAN per data interface (without tag) of NetScaler VPX instance and bind the primary IP of NIC in Azure. For more information, see [CTX224626](#) article.

Single NIC multi-IP architecture

In this deployment type, one network interfaces (NIC) associated with multiple IP configurations - static or dynamic public and private IP addresses assigned to it.

For more information, see the following use cases:

- [Configure multiple IP addresses for a NetScaler VPX standalone instance](#)
- [Configure multiple IP addresses for a NetScaler VPX standalone instance by using PowerShell commands](#)

Single NIC single IP

In this deployment type, one network interfaces (NIC) associated with a single IP address, which is used to perform the functions of NSIP, SNIP, and VIP.

For more information, see [Configure a NetScaler VPX standalone instance](#).

Note:

The single IP mode is available only in Azure deployments. This mode isn't available for a NetScaler VPX instance on your premises, on AWS, or in other types of deployment.

NetScaler VPX licensing

A NetScaler VPX instance on Azure requires a license. The following licensing options are available for NetScaler VPX instances running on Azure.

- **Bring your own license (BYOL):** If you bring your own license (BYOL), see the VPX Licensing Guide at <http://support.citrix.com/article/CTX122426>. You have to:
 - Use the licensing portal within the NetScaler website to generate a valid license.
 - Upload the license to the instance.

Note

In an Azure stack environment, **BYOL** is the only available licensing option.

- **NetScaler VPX Check-In/Check-Out licensing:** For more information, see [NetScaler VPX Check-In/Check-Out Licensing](#).

Starting with NetScaler release 12.0 56.20, NetScaler VPX Express for on-premises and cloud deployments does not require a license file. For more information on NetScaler VPX Express, see the “NetScaler VPX Express license” section in [NetScaler licensing overview](#).

VPX performance and Recommended Azure instance types

For the desired VPX performance, the following Azure instance types are recommended.

VPX performance	Azure instance types		
	VPX 1 NIC/2 NIC	VPX 3 NIC	VPX up to 8 NIC
Up to 200 Mbps	Standard_D2s_v4	Standard_DS3_v2	Standard_DS4_v2
Up to 1 Gbps	Standard_D4s_v4	Standard_DS3_v2	Standard_DS4_v2
Up to 5 Gbps	Standard_D8ds_v5	Standard_D8ds_v5	Standard_DS4_v2
Up to 10 Gbps	Standard_D2_v5	Standard_D8_v5	Standard_D16_v5

Points to note

- To achieve optimal performance on NetScaler VPX instances with 1 Gbps and 5 Gbps throughput, you must enable Azure accelerated networking.
For more information on configuring Accelerated networking, see [Configure a NetScaler VPX instance to use Azure accelerated networking](#).
- Regardless of the subscription-based hourly license bought from Azure Marketplace, in rare cases, the NetScaler VPX instance deployed on Azure might come up with a default NetScaler license. This happens due to issues with the Azure Instance Metadata Service (IMDS).
- Do a warm restart, before making any configuration change on the NetScaler VPX instance, to enable the correct NetScaler VPX license.

IPv6 support for NetScaler VPX instance in Azure

From release 13.1-21.x onwards, NetScaler VPX standalone instance supports IPv6 addresses in Azure. You can configure the IPv6 addresses as VIP and SNIP addresses on NetScaler VPX standalone instance in Azure cloud.

For information on how to enable IPv6 on Azure, see the following Azure documentation:

- [What is IPv6 for Azure Virtual Network?](#)
- [Add IPv6 to an IPv4 application in Azure virtual network - Azure CLI](#)
- [Address types](#)

For information on how the NetScaler appliance supports IPv6, see [Internet Protocol version 6](#).

IPv6 Limitations:

- IPv6 deployments in NetScaler currently do not support Azure backend autoscaling.
- IPv6 is not supported for NetScaler VPX HA deployment.

Limitations

Running the NetScaler VPX load-balancing solution on ARM imposes the following limitations:

- The Azure architecture does not accommodate support for the following NetScaler features:
 - Gratuitous ARP (GARP)
 - L2 Mode
 - Tagged VLAN
 - Dynamic Routing
 - virtual MAC
 - USIP
 - Clustering

Note:

With the NetScaler Application Delivery Management (ADM) Autoscale feature (cloud deployment), the ADC instances support clustering on all licenses. For information, see [Autoscaling of NetScaler VPX in Microsoft Azure using NetScaler Console](#).

- If you expect that you might have to shut down and temporarily deallocate the NetScaler VPX virtual machine at any time, assign a static Internal IP address while creating the virtual machine. If you do not assign a static internal IP address, Azure might assign the virtual machine a different IP address each time it restarts, and the virtual machine might become inaccessible.

- Azure supports VPX throughput up to 10 Gbps. For more information, see the [NetScaler VPX Data Sheet](#).
- When using a NetScaler VPX instance with a throughput exceeding 3 Gbps, the actual network throughput may not align with the throughput specified in the instance's license. However, other features such as SSL throughput and SSL transactions per second might improve.
- The deployment ID that is generated by Azure during virtual machine provisioning isn't visible to the user in ARM. You can't use the deployment ID to deploy NetScaler VPX appliance on ARM.
- The NetScaler VPX instance supports 20 Mbps throughput and standard edition features when it's initialized.
- The NetScaler VPX instances on Azure with accelerated networking enabled, provides better performance. Azure accelerated networking is supported on NetScaler VPX instances from release 13.0 build 76.x onwards. To enable accelerated networking on NetScaler VPX, Citrix recommends you to use an Azure instance type which supports accelerated networking.
- For Citrix Virtual Apps and Desktops deployment, a VPN virtual server on a VPX instance can be configured in the following modes:
 - Basic mode, where the [ICAOnly](#) VPN virtual server parameter is set to ON. The Basic mode works fully on an unlicensed NetScaler VPX instance.
 - SmartAccess mode, where the [ICAOnly](#) VPN virtual server parameter is set to OFF. The SmartAccess mode works for only five NetScaler AAA session users on an unlicensed NetScaler VPX instance.

Note:

To configure the SmartControl feature, you must apply a Premium license to the NetScaler VPX instance.

Azure terminology

May 2, 2023


Some of the Azure terms that are used in the NetScaler VPX Azure documentation are listed below.

1. Azure Load Balancer –Azure load balancer is a resource that distributes incoming traffic among computers in a network. Traffic is distributed among virtual machines defined in a load-balancer set. A load balancer can be external or internet-facing, or it can be internal.
2. Azure Resource Manager (ARM) –ARM is the new management framework for services in Azure. Azure Load Balancer is managed using ARM-based APIs and tools.

3. Back-End Address Pool –These are IP addresses associated with the virtual machine NIC (NIC) to which load will be distributed.
4. BLOB - Binary Large Object –Any binary object like a file or an image that can be stored in Azure storage.
5. Front-End IP Configuration –An Azure Load balancer can include one or more front-end IP addresses, also known as a virtual IPs (VIPs). These IP addresses serve as ingress for the traffic.
6. Instance Level Public IP (ILPIP) –An ILPIP is a public IP address that you can assign directly to your virtual machine or role instance, rather than to the cloud service that your virtual machine or role instance resides in. This does not take the place of the VIP (virtual IP) that is assigned to your cloud service. Rather, it's an extra IP address that you can use to connect directly to your virtual machine or role instance.

Note: In the past, an ILPIP was referred to as a PIP, which stands for public IP.


7. Inbound NAT Rules –This contains rules mapping a public port on the load balancer to a port for a specific virtual machine in the back end address pool.
8. IP-Config - It can be defined as an IP address pair (public IP and private IP) associated with an individual NIC. In an IP-Config, the public IP address can be NULL. Each NIC can have multiple IP-Config associated with it, which can be up to 255.
9. Load Balancing Rules –A rule property that maps a given front-end IP and port combination to a set of back-end IP addresses and port combination. With a single definition of a load balancer resource, you can define multiple load balancing rules, each rule reflecting a combination of a front end IP and port and back end IP and port associated with virtual machines.

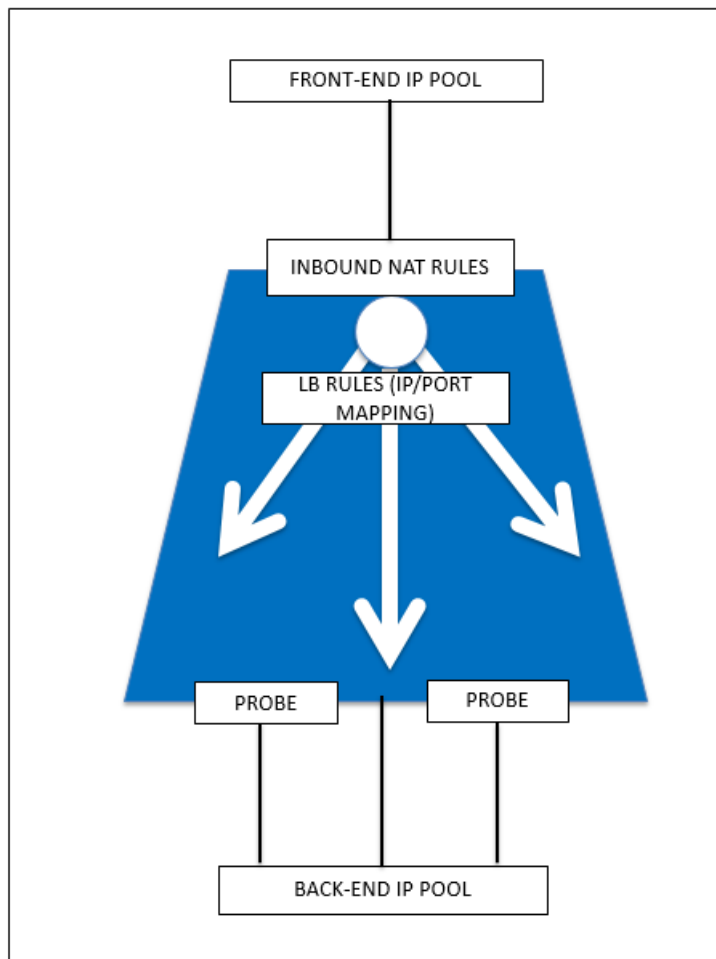

10. Network security group –Contains a list of Access Control List (ACL) rules that allow or deny network traffic to your virtual machine instances in a virtual network. NSGs can be associated with either subnets or individual virtual machine instances within that subnet. When a network security group is associated with a subnet, the ACL rules apply to all the virtual machine instances in that subnet. In addition, traffic to an individual virtual machine can be restricted further by associating a network security group directly to that virtual machine.
11. Private IP addresses –Used for communication within an Azure virtual network, and your on-premises network when you use a VPN gateway to extend your network to Azure. Private IP addresses allow Azure resources to communicate with other resources in a virtual network or an on-premises network through a VPN gateway or ExpressRoute circuit, without using an Internet-reachable IP address. In the Azure Resource Manager deployment model, a private IP address is associated with the following types of Azure resources –virtual machines, internal load balancers (ILBs), and application gateways.
12. Probes –This contains health probes used to check availability of virtual machines instances in the back end address pool. If a particular virtual machine does not respond to health probes for some time, then it is taken out of traffic serving. Probes enable you to keep track of the

health of virtual instances. If a health probe fails, the virtual instance will be taken out of rotation automatically.

13. Public IP Addresses (PIP) –PIP is used for communication with the Internet, including Azure public-facing services and is associated with virtual machines, Internet-facing load balancers, VPN gateways, and application gateways.
14. Region - An area within a geography that does not cross national borders and that contains one or more data centers. Pricing, regional services, and offer types are exposed at the region level. A region is typically paired with another region, which can be up to several hundred miles away, to form a regional pair. Regional pairs can be used as a mechanism for disaster recovery and high availability scenarios. Also referred to generally as location.
15. Resource Group - A container in Resource Manager holds related resources for an application. The resource group can include all of the resources for an application, or only those resources that are logically grouped together
16. Storage Account –An Azure storage account gives you access to the Azure blob, queue, table, and file services in Azure Storage. Your storage account provides the unique namespace for your Azure storage data objects.
17. Virtual Machine –The software implementation of a physical computer that runs an operating system. Multiple virtual machines can run simultaneously on the same hardware. In Azure, virtual machines are available in a variety of sizes.
18. Virtual Network - An Azure virtual network is a representation of your own network in the cloud. It is a logical isolation of the Azure cloud dedicated to your subscription. You can fully control the IP address blocks, DNS settings, security policies, and route tables within this network. You can also further segment your VNet into subnets and launch Azure IaaS virtual machines and cloud services (PaaS role instances). Additionally, you can connect the virtual network to your on-premises network using one of the connectivity options available in Azure. In essence, you can expand your network to Azure, with complete control on IP address blocks with the benefit of enterprise scale Azure provides.

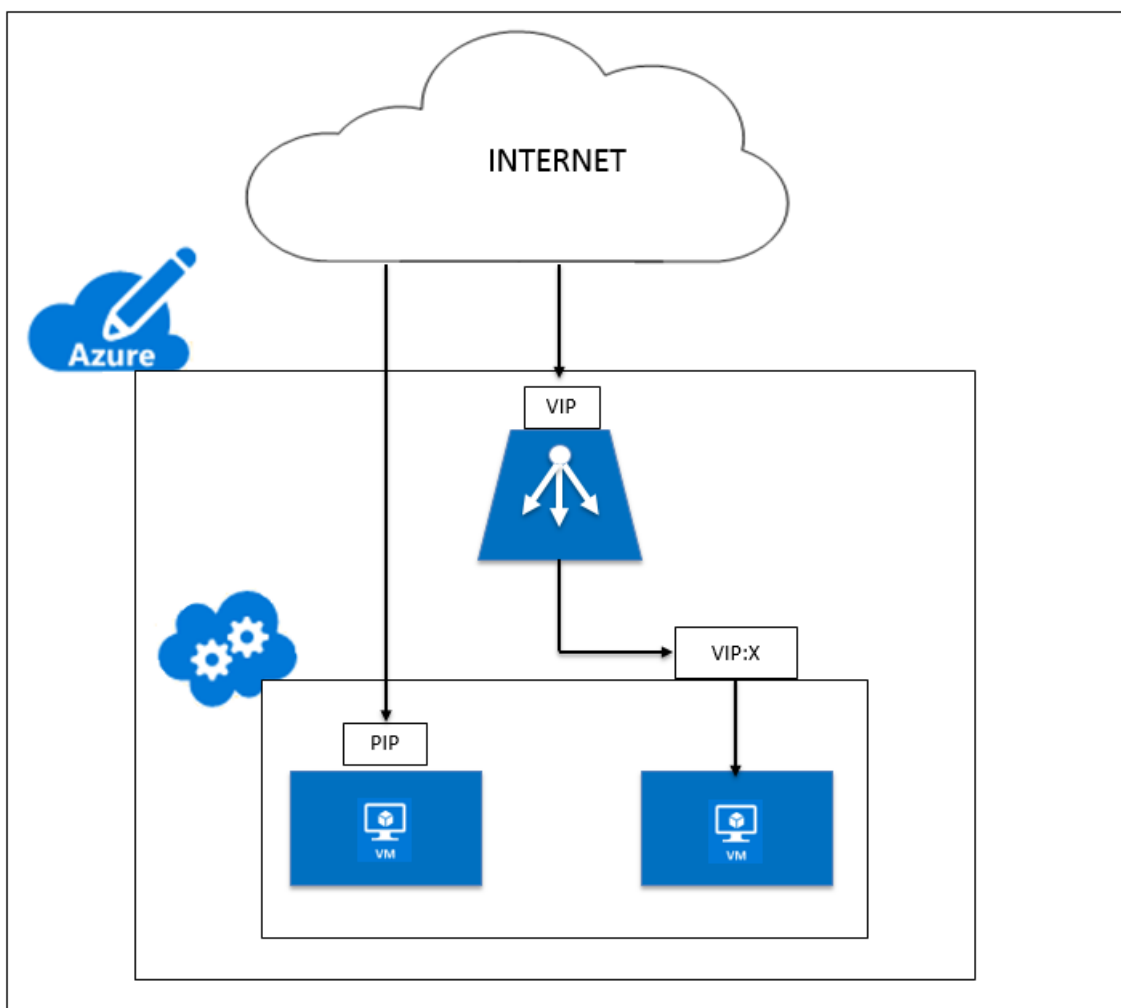

Network architecture for NetScaler VPX instances on Microsoft Azure

May 2, 2023

In Azure Resource Manager (ARM), a NetScaler VPX virtual machine (VM) resides in a virtual network. A single network interface can be created in a given subnet of the Virtual Network and can be attached to the VPX instance. You can filter network traffic to and from a VPX instance in an Azure virtual network with a network security group. A network security group contains security rules that allow or deny inbound network traffic to or outbound network traffic from a VPX instance. For more information, see [Security groups](#).

Network security group filters the requests to the NetScaler VPX instance, and the VPX instance sends them to the servers. The response from a server follows the same path in reverse. The Network security group can be configured to filter a single VPX VM, or, with subnets and virtual networks, can filter


traffic in deployment of multiple VPX instances.

The NIC contains network configuration details such as the virtual network, subnets, internal IP address, and Public IP address.

While on ARM, it is good to know the following IP addresses that are used to access the VMs deployed with a single NIC and a single IP address:

- Public IP (PIP) address is the internet-facing IP address configured directly on the virtual NIC of the NetScaler VM. This allows you to directly access a VM from the external network.
- NetScaler IP (also known as NSIP) address is the internal IP address configured on the VM. It is non-routable.
- Virtual IP address (VIP) is configured by using the NSIP and a port number. Clients access NetScaler services through the PIP address, and when the request reaches the NIC of the NetScaler VPX VM or the Azure load balancer, the VIP gets translated to internal IP (NSIP) and internal port number.
- Internal IP address is the private internal IP address of the VM from the virtual network's address space pool. This IP address cannot be reached from the external network. This IP address is by default dynamic unless you set it to static. Traffic from the internet is routed to this address according to the rules created on the network security group. The network security group integrates with the NIC to selectively send the right type of traffic to the right port on the NIC, which depends on the services configured on the VM.


The following figure shows how traffic flows from a client to a server through a NetScaler VPX instance provisioned in ARM.

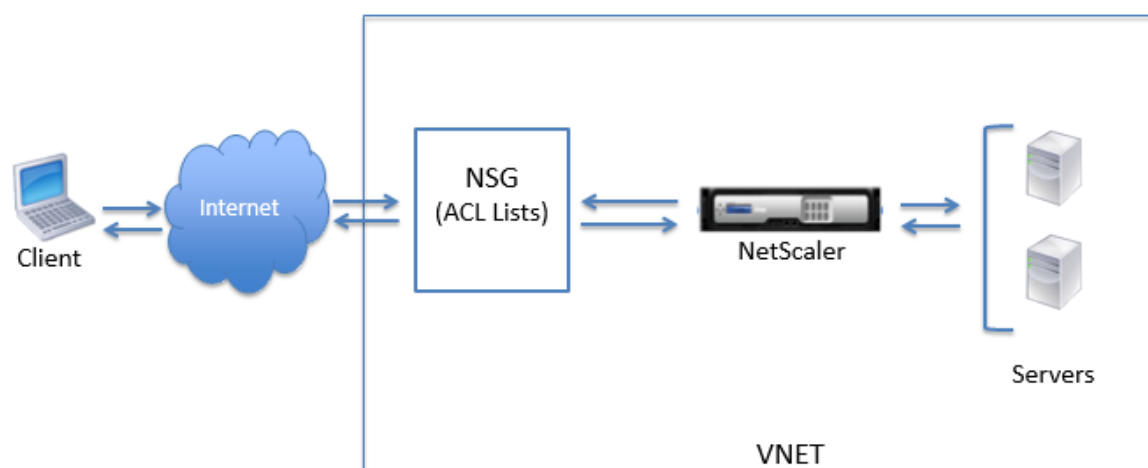

Traffic flow through network address translation

You can also request a public IP (PIP) address for your NetScaler VPX instance (instance level). If you use this direct PIP at the VM level, you need not define inbound and outbound rules to intercept the network traffic. The incoming request from the Internet is received on the VM directly. Azure performs network address translation (NAT) and forwards the traffic to the internal IP address of the VPX instance.

The following figure shows how Azure performs network address translation to map the NetScaler internal IP address.

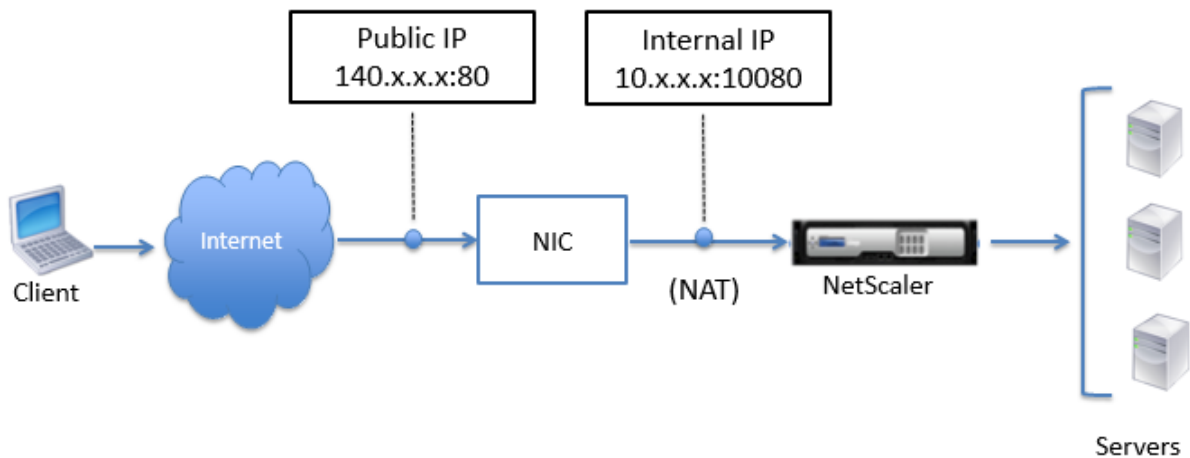

In this example, the Public IP assigned to the network security group is 140.x.x.x and the internal IP address is 10.x.x.x. When the inbound and outbound rules are defined, public HTTP port 80 is defined as the port on which the client requests are received, and a corresponding private port, 10080, is defined as the port on which the NetScaler VPX instance listens. The client request is received on the Public IP address (140.x.x.x). Azure performs network address translation to map the PIP to the internal IP address 10.x.x.x on port 10080, and forwards the client request.

Note

NetScaler VPX VMs in high availability are controlled by external or internal load balancers that have inbound rules defined on them to control the load balancing traffic. The external traffic is first intercepted by these load balancers and the traffic is diverted according to the load balancing rules configured, which has back-end pools, NAT rules, and health probes defined on the load balancers.

Port usage guidelines

You can configure more inbound and outbound rules in network security group while creating the NetScaler VPX instance or after the virtual machine is provisioned. Each inbound and outbound rule

is associated with a public port and a private port.

Before configuring network security group rules, note the following guidelines regarding the port numbers you can use:

1. The NetScaler VPX instance reserves the following ports. You cannot define these as private ports when using the Public IP address for requests from the internet.

Ports 21, 22, 80, 443, 8080, 67, 161, 179, 500, 520, 3003, 3008, 3009, 3010, 3011, 4001, 5061, 9000, 7000.

However, if you want internet-facing services such as the VIP to use a standard port (for example, port 443) you have to create port mapping by using the network security group. The standard port is then mapped to a different port that is configured on the NetScaler for this VIP service.

For example, a VIP service might be running on port 8443 on the VPX instance but be mapped to public port 443. So, when the user accesses port 443 through the Public IP, the request is directed to private port 8443.

2. Public IP address does not support protocols in which port mapping is opened dynamically, such as passive FTP or ALG.
3. High availability does not work for traffic that uses a public IP address (PIP) associated with a VPX instance, instead of a PIP configured on the Azure load balancer.

Note

In Azure Resource Manager, a NetScaler VPX instance is associated with two IP addresses - a public IP address (PIP) and an internal IP address. While the external traffic connects to the PIP, the internal IP address or the NSIP is non-routable. To configure VIP in VPX, use the internal IP address and any of the free ports available. Do not use the PIP to configure VIP.

Configure a NetScaler VPX standalone instance

May 2, 2023

You can provision a single NetScaler VPX instance in Azure Resource Manager (ARM) portal in a standalone mode by creating the virtual machine and configuring other resources.

Before you begin

Ensure that you have the following:

- A Microsoft Azure user account
- Access to Microsoft Azure Resource Manager
- Microsoft Azure SDK
- Microsoft Azure PowerShell

On the [Microsoft Azure Portal](#) page, log on to the Azure Resource Manager portal by providing your user name and password.

Note

In ARM portal, clicking an option in one pane opens a new pane to the right. Navigate from one pane to another to configure your device.


Summary of configuration steps

1. Configure a resource group
2. Configure a network security group
3. Configure virtual network and its subnets
4. Configure a storage account
5. Configure an availability set
6. Configure a NetScaler VPX instance.

Configure a resource group

Create a new resource group that is a container for all your resources. Use the resource group to deploy, manage, and monitor your resources as a group.

1. Click **New > Management > Resource group**.
2. In the **Resource group** pane, enter the following details:
 - Resource group name
 - Resource group location
3. Click **Create**.

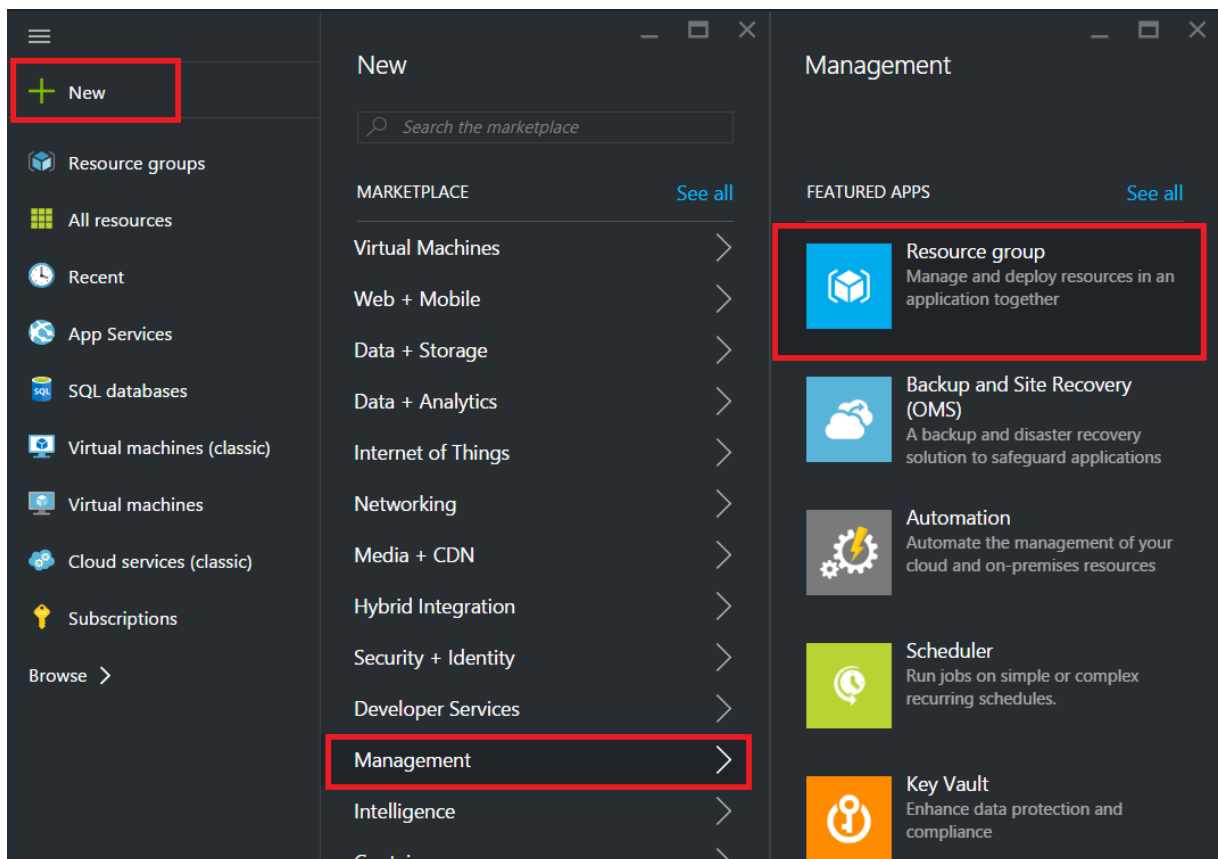


Configure a network security group

Create a network security group to assign inbound and outbound rules to control the incoming and outgoing traffic within the virtual network. Network security group allows you to define security rules for a single virtual machine and also to define security rules for a virtual network subnet.

1. Click **New > Networking > Network security group**.
2. In the **Create network security group** pane, enter the following details, and then click **Create**.
 - Name - type a name for the security group
 - Resource group - select the resource group from the drop-down list

Note

Ensure that you have selected the correct location. The list of resources that appear in the drop-down list is different for different locations.

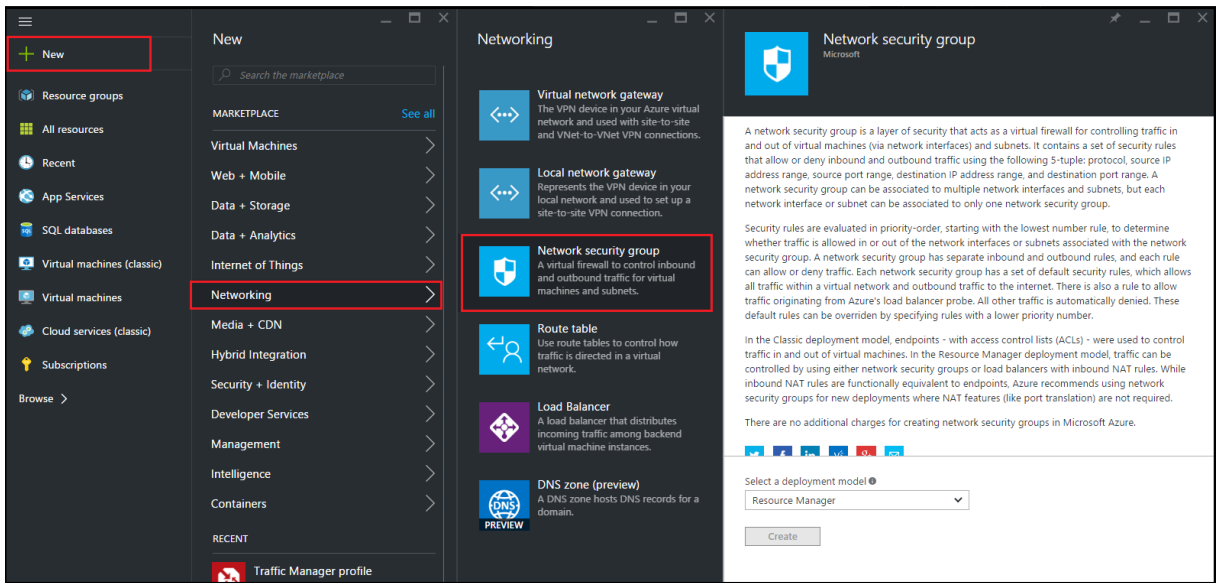


Configure a virtual network and subnets

Virtual networks in ARM provide a layer of security and isolation to your services. VMs and services that are part of the same virtual network can access each other.

For these steps to create a virtual network and subnets.

1. Click **New > Networking > Virtual Network**.
2. In the **Virtual Network** pane, ensure the deployment mode is **Resource Manager** and click **Create**.

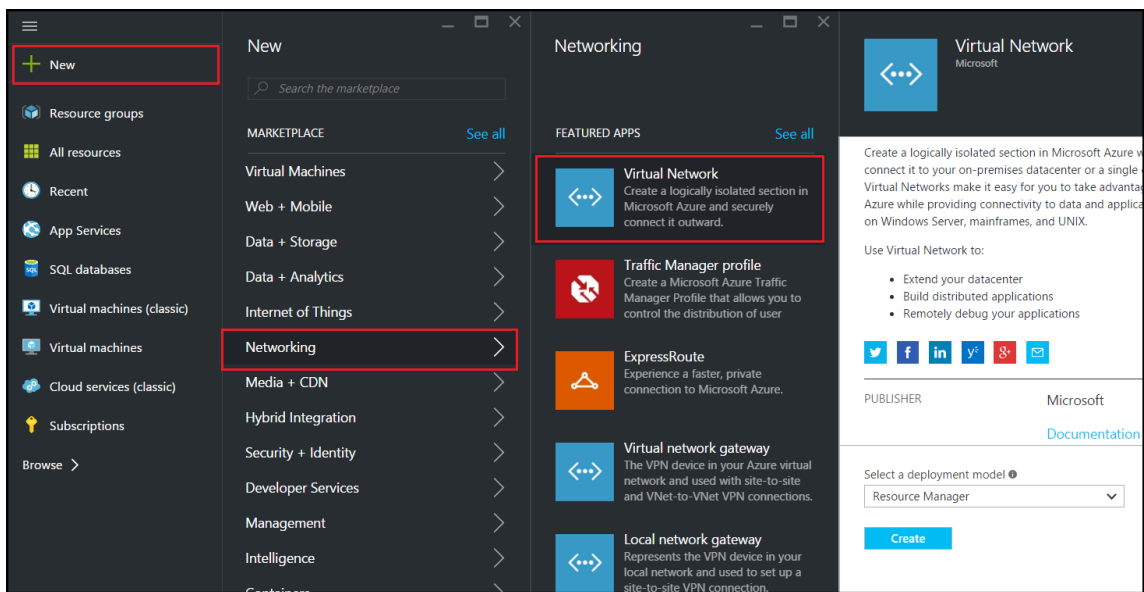

3. In the **Create virtual network** pane, enter the following values, and then click **Create**.

- Name of the virtual network
- Address space - type the reserved IP address block for the virtual network
- Subnet - type the name of the first subnet (you create the second subnet later in this step)
- Subnet address range - type the reserved IP address block of the subnet
- Resource group - select the resource group created earlier from the drop-down list

Create virtual network

* Name
NetScalerVNet ✓

* Address space ⓘ
22.22.0.0/16 ✓
22.22.0.0 - 22.22.255.255 (65536 addresses)

* Subnet name
NSFrontEnd ✓

* Subnet address range ⓘ
22.22.1.0/24 ✓
22.22.1.0 - 22.22.1.255 (256 addresses)

* Subscription
Microsoft Azure Enterprise ▼

* Resource group ⓘ
 Create new Use existing
NSDocs ▼


* Location
Southeast Asia ▼

Pin to dashboard

Create [Automation options](#)

Configure the second subnet

1. Select the newly created virtual network from **All resources** pane and in the **Settings** pane, click **Subnets**.

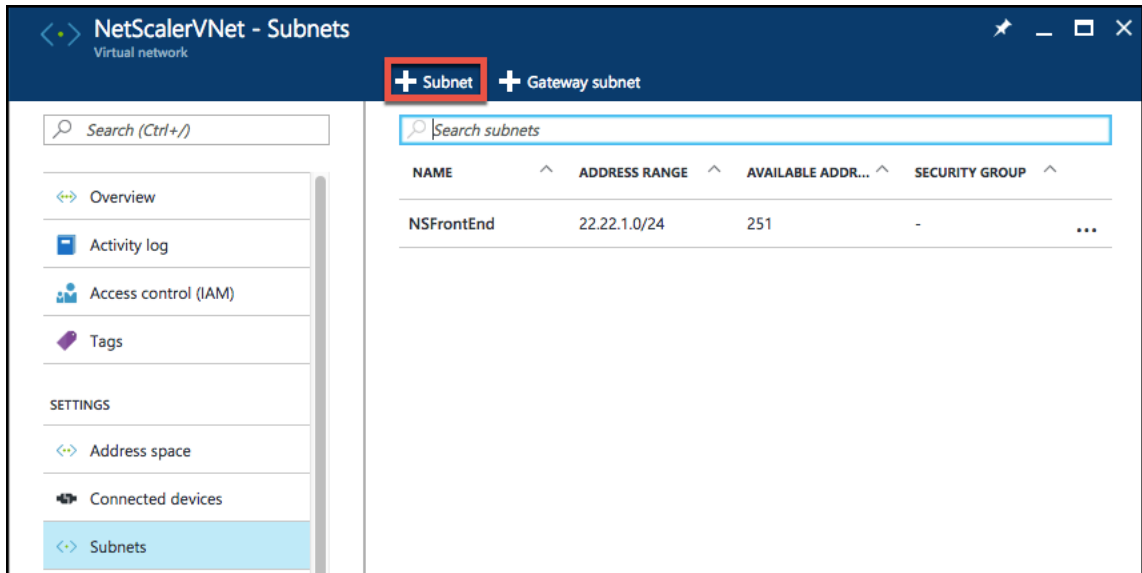

2. Click **+Subnet** and create the second subnet by entering the following details.
 - Name of the second subnet
 - Address range - type the reserved IP address block of the second subnet
 - Network security group - select the network security group from the drop-down list
3. Click **Create**.

Add subnet NetScalerVNet

* Name
NSBackEnd ✓

* Address range (CIDR block) ⓘ
22.22.2.0/24 ✓
22.22.2.0 - 22.22.2.255 (256 addresses)

Network security group
None >

Route table
None >


OK

Configure a storage account

The ARM IaaS infrastructure storage includes all services where we can store data in the form of blobs, tables, queues, and files. You can also create applications using these forms of storage data in ARM.

Create a storage account to store all your data.

1. Click **+New > Data + Storage > Storage account**.
2. In the **Create storage account** pane, enter the following details:
 - Name of the account
 - Deployment mode - make sure to select **Resource Manager**
 - Account kind - select **General purpose** from the drop-down list
 - Replication - select **Locally redundant storage** from the drop-down list
 - Resource group - select the newly created resource group from the drop-down list
3. Click **Create**.

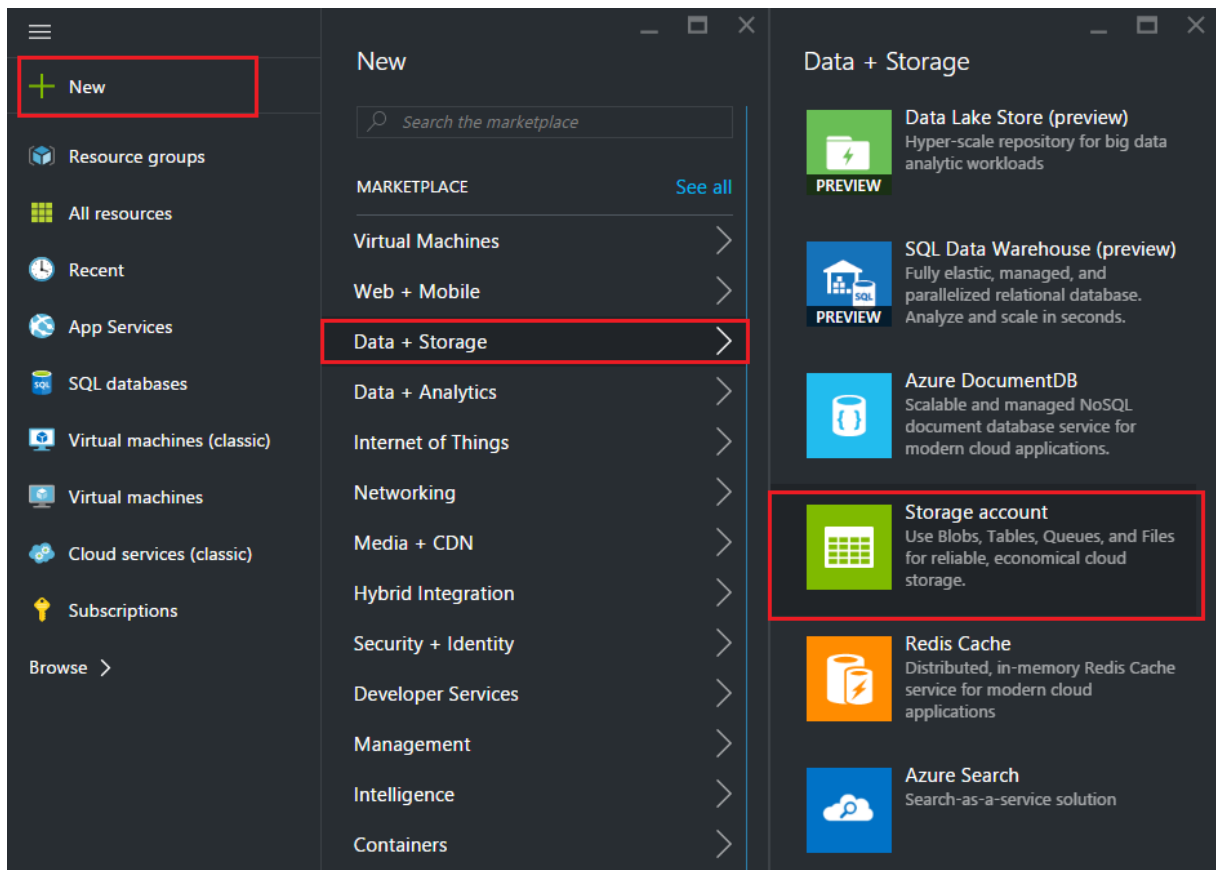


Configure an availability set

An availability set guarantee that at least one VM is kept up and running in case of planned or unplanned maintenance. Two or more VMs under the same 'availability set' are placed on different fault

domains to achieve redundant services.

1. Click **+New**.
2. Click **See all** in the MARKETPLACE pane and click **Virtual Machines**.
3. Search for availability set, and then select **Availability set** entity from the list displayed.

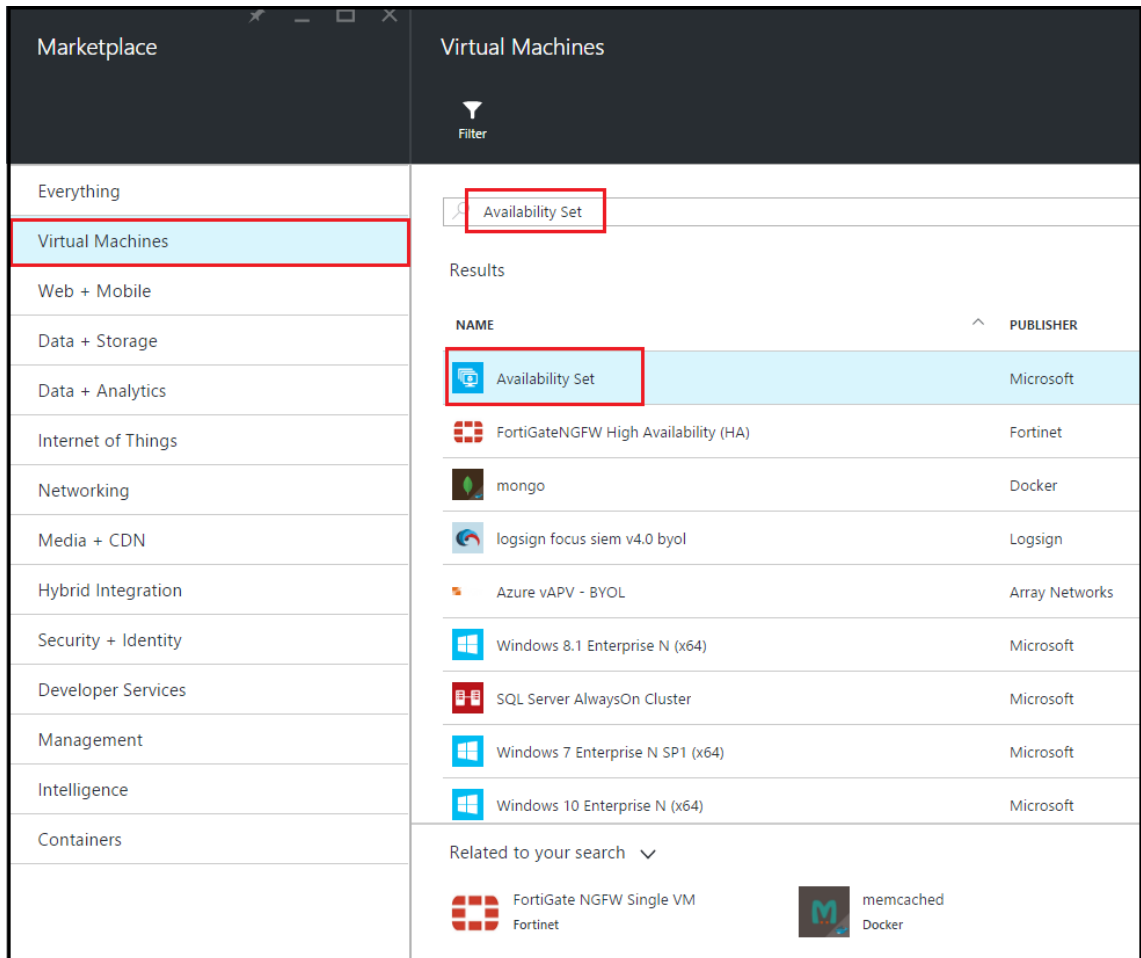

4. Click **Create**, and in the **Create availability set** pane, enter the following details:
 - Name of the set
 - Resource group - select the newly created resource group from the drop-down list
5. Click **Create**.

The screenshot shows a 'Create availability set' form with the following fields and values:

- Name:** AvSet (with a green checkmark)
- Fault domains:** 3 (represented by a slider and a text box)
- Update domains:** 5 (represented by a slider and a text box)
- Subscription:** Microsoft Azure Enterprise (dropdown menu)
- Resource group:** ResGroup (dropdown menu, with radio buttons for 'Create new' and 'Use existing', where 'Use existing' is selected)
- Location:** Southeast Asia (dropdown menu)

A blue 'Create' button is located at the bottom of the form.

Configure a NetScaler VPX instance

Create an instance of NetScaler VPX in the virtual network. Obtain the NetScaler VPX image from the Azure Marketplace, and then use the Azure Resource Manager portal to create a NetScaler VPX instance.

Before you begin creating the NetScaler VPX instance, make sure that you have created a virtual network with required subnets in which the instance resides. You can create virtual networks during VM

provisioning, but without the flexibility to create different subnets. For information about creating virtual networks, see <http://azure.microsoft.com/en-us/documentation/articles/create-virtual-network/>.


Optionally, configure DNS server and VPN connectivity that allows a virtual machine to access internet resources.

Note

Citrix recommends that you create resource group, network security group, virtual network, and other entities before you provision the NetScaler VPX VM, so that the network information is available during provisioning.

1. Click **+New > Networking**.
2. Click **See All** and in the Networking pane, click **NetScaler 13.0**.
3. Select **NetScaler 13.0 VPX Bring Your Own License** from the list of software plans.


As a quick way to find any entity on ARM portal, you can also type the name of the entity in the Azure Marketplace search box and press <Enter>. Type NetScaler in the search box to find the NetScaler images.

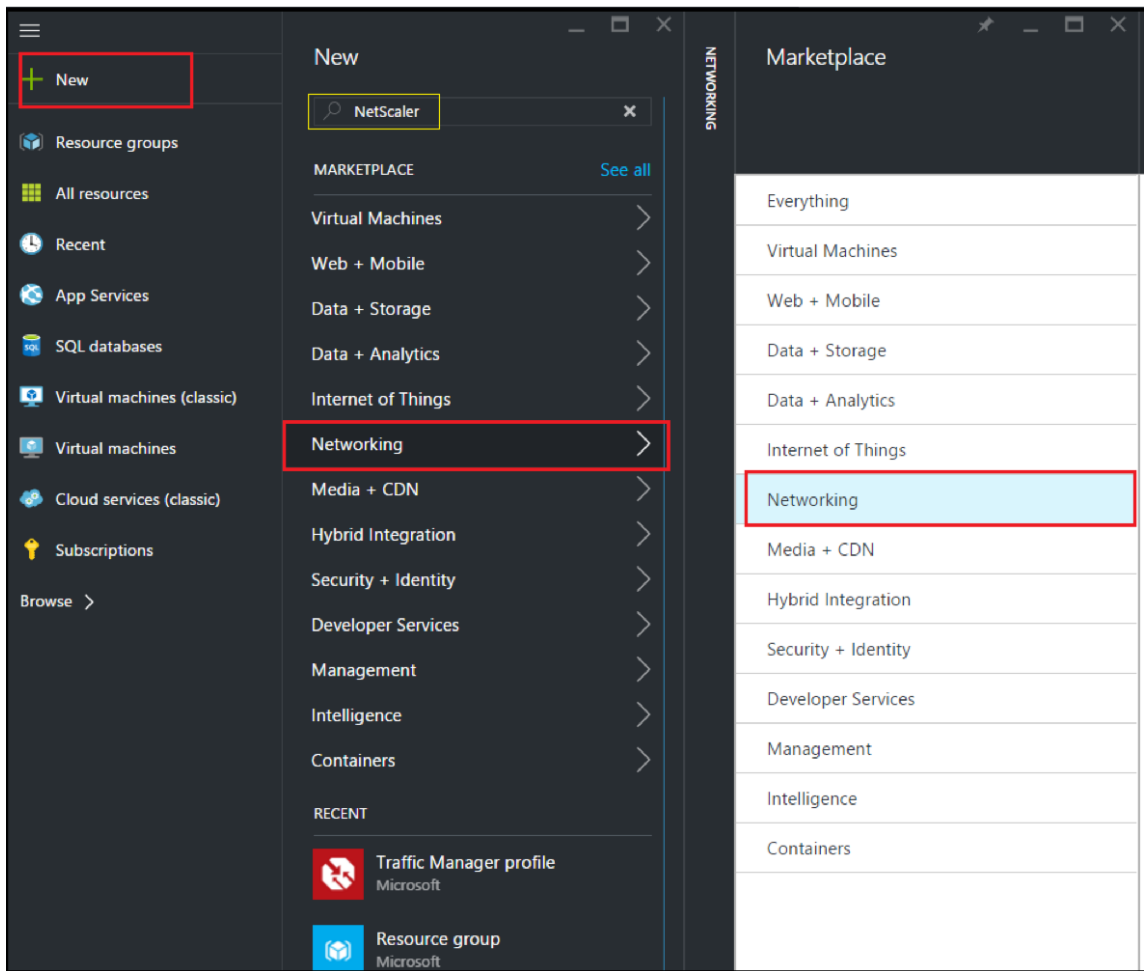

Note

Ensure to select the latest image. Your NetScaler image might have the release number in the name.

4. On the **NetScaler VPX Bring Your Own License** page, from the drop-down list, select **Resource Manager** and click **Create**.

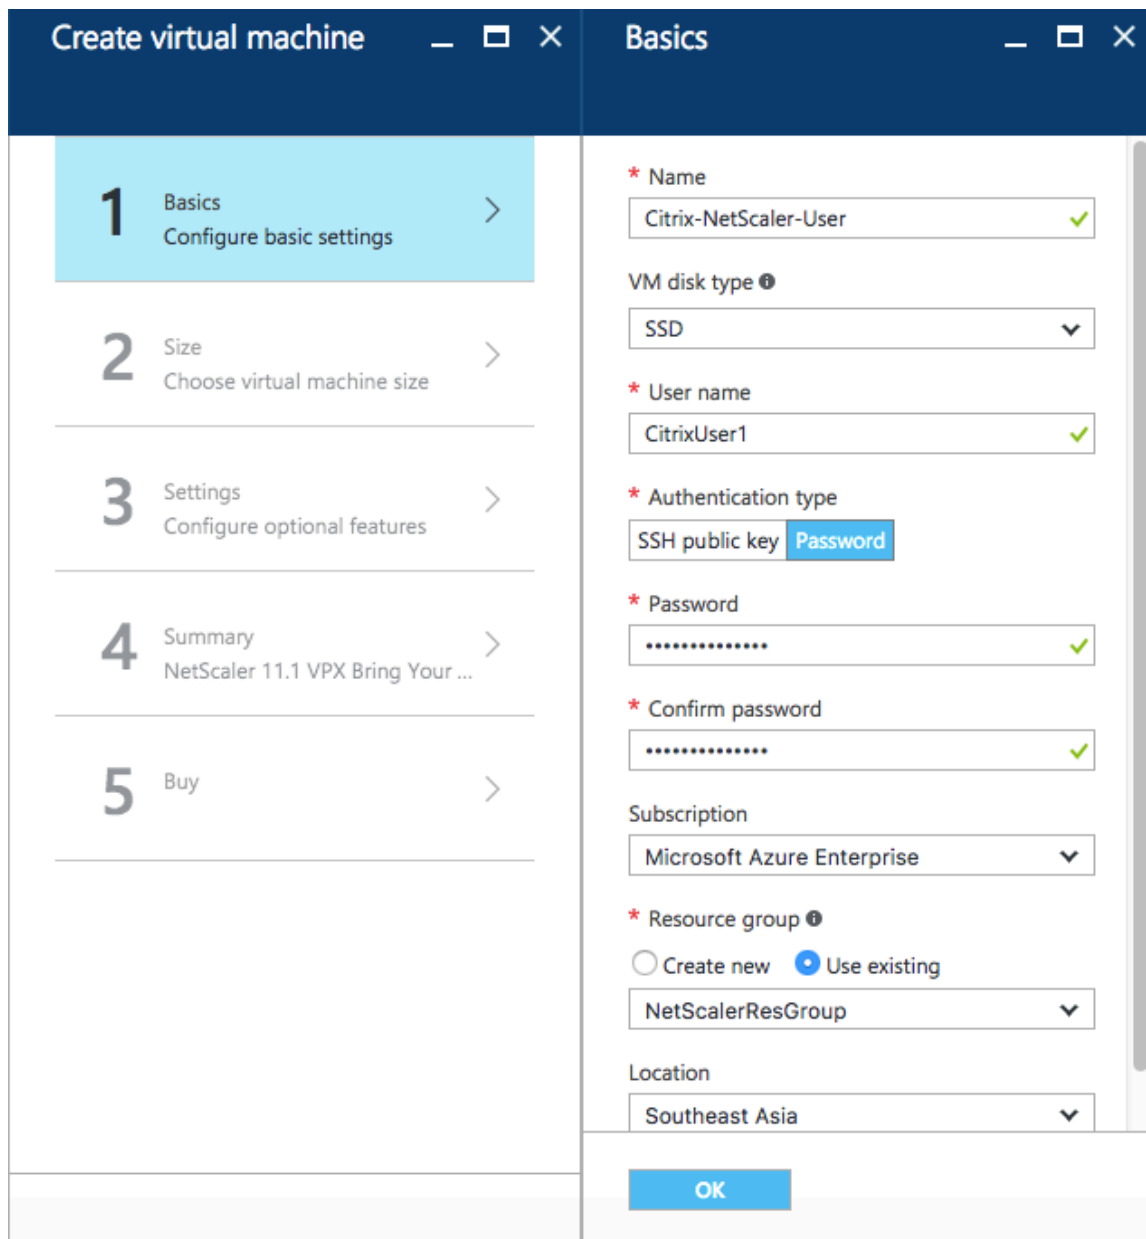

5. In the **Create virtual machine** pane, specify the required values in each section to create a virtual machine. Click **OK** in each section to save your configuration.

Basic:

- Name - specify a name for the NetScaler VPX instance
- VM disk type - select SSD (default value) or HDD from the drop-down menu
- User name and Password - specify a user name and password to access the resources in the resource group that you have created
- Authentication Type - select SSH Public Key or Password
- Resource group - select the resource group you have created from the drop-down list

You can create a resource group here, but Citrix recommends that you create a resource group from Resource groups in Azure Resource Manager and then select the group from the drop-down list.

Note

In an Azure stack environment, in addition to the basic parameters, specify the following parameters:

- Azure stack domain
- Azure stack tenant (Optional)
- Azure client (Optional)
- Azure client secret (Optional)

Size:

Depending on the VM disk type, SDD, or HDD, you selected in Basic settings, the disk sizes are displayed.

- Select a disk size according to your requirement and click **Select**.

Settings:

- Select the default (Standard) disk type
- Storage account - select the storage account
- Virtual network - select the virtual network
- Subnet - set the subnet address
- Public IP address - select the type of IP address assignment
- Network security group - select the security group that you have created. Ensure that inbound and outbound rules are configured in the security group.
- Availability Set - select the availability set from the drop-down menu box

Summary:

The configuration settings are validated and the Summary page displays the result of the validation. If the validation fails, the Summary page displays the reason of the failure. Go back to the particular section and make changes as required. If the validation passes, click **OK**.

Buy:

Review the offer details and legal terms on the Purchase page and click **Purchase**.

For high availability deployment, create two independent instances of NetScaler VPX in the same availability set and in the same resource group to deploy them in active-standby configuration.

Configure multiple IP addresses for a NetScaler VPX standalone instance

May 2, 2023

This section explains how to configure a standalone NetScaler VPX instance with multiple IP addresses, in Azure Resource Manager (ARM). The VPX instance can have one or more NIC attached to it, and each NIC can have one or more static or dynamic public and private IP addresses assigned to it. You can assign multiple IP addresses as NSIP, VIP, SNIP, and so on.

For more information, see the Azure documentation [Assign multiple IP addresses to virtual machines using the Azure portal](#).

If you want to use PowerShell commands, see [Configuring multiple IP addresses for a NetScaler VPX instance in standalone mode by using PowerShell commands](#).

Use case

In this use case, a standalone NetScaler VPX appliance is configured with a single NIC that is connected to a virtual network (VNET). The NIC is associated with three IP configurations (ipconfig), each server a different purpose - as shown in the table.


IP config	Associated with	Purpose
ipconfig1	Static public IP address; static private IP address	Serves management traffic
ipconfig2	Static public IP address; static private address	Serves client-side traffic
ipconfig3	Static private IP address	Communicates with back-end servers

Note

IPConfig-3 is not associated with any public IP address.

Diagram: Topology

Here is the visual representation of the use case.

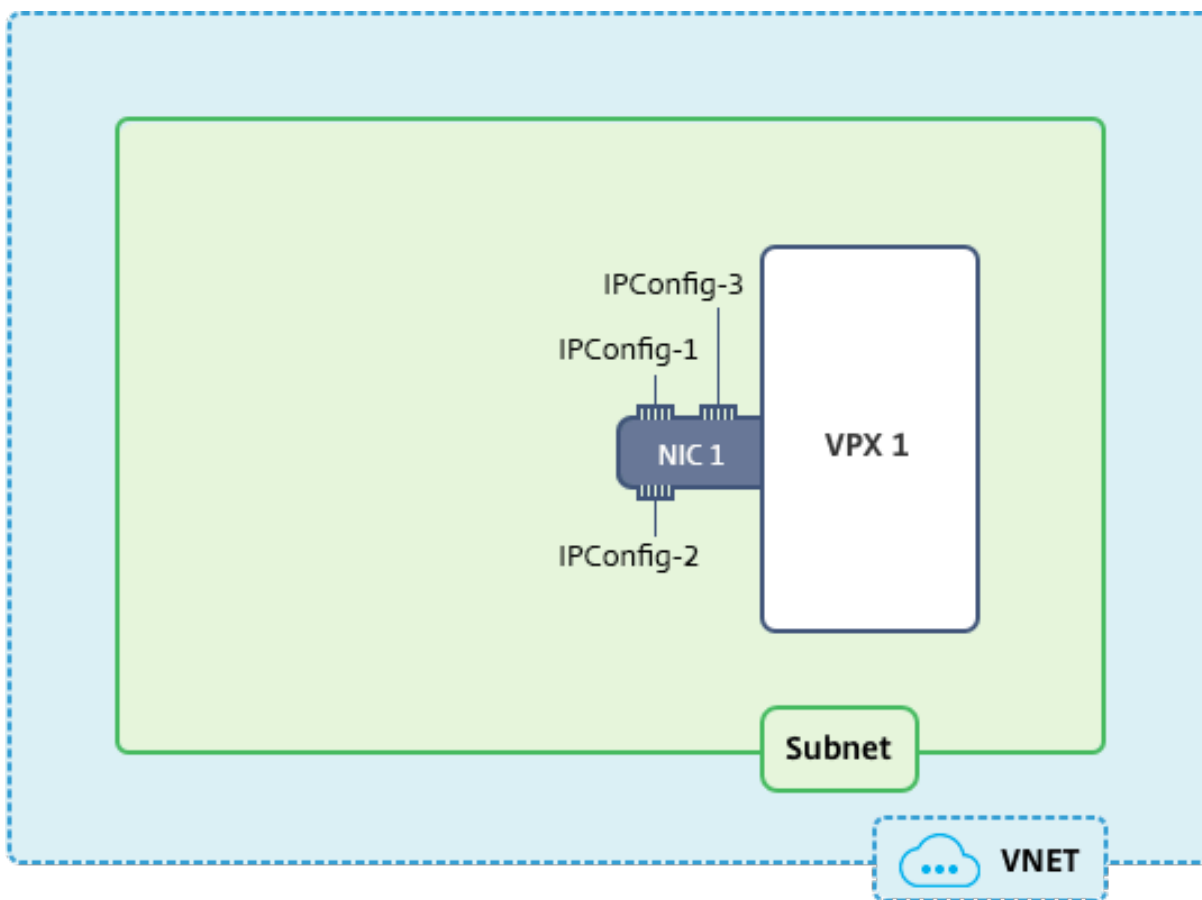

Note

In a multi-NIC, multi-IP Azure NetScaler VPX deployment, the private IP associated with the primary (first) `IPConfig` of the primary (first) NIC is automatically added as the management NSIP of the appliance. The remaining private IP addresses associated with `IPConfigs` need to be added in the VPX instance as a VIP or SNIP by using the `add ns ip` command, according to your requirement.

Before you begin

Before you begin, create a VPX instance by following the steps given at this link:

[Configure a NetScaler VPX standalone instance](#)

For this use case, the NSDoc0330VM VPX instance is created.

Procedure to configure multiple IP addresses for a NetScaler VPX instance in standalone mode.


For configuring multiple IP addresses for a NetScaler VPX appliance in standalone mode:

1. Add IP addresses to the VM

2. Configure NetScaler -owned IP addresses


Step 1: Add IP addresses to the VM

1. In the portal, click **More services > type virtual machines** in the filter box, and then click **Virtual machines**.
2. In the **Virtual machines** blade, click the VM you want to add IP addresses to. Click **Network interfaces** in the virtual machine blade that appears, and then select the network interface.

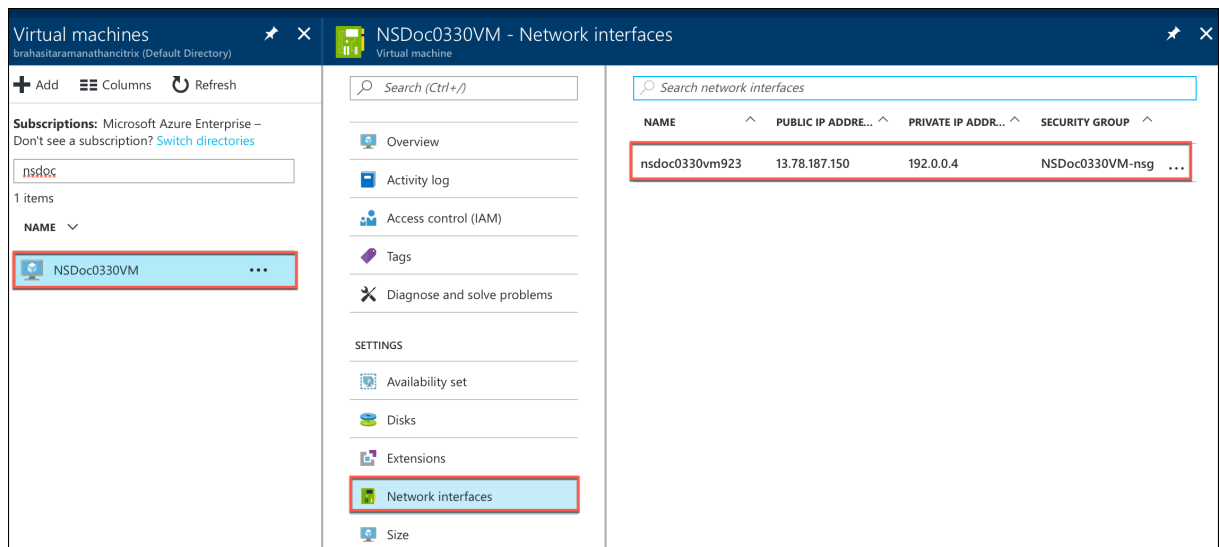

In the blade that appears for the NIC you selected, click **IP configurations**. The existing IP configuration that was assigned when you created the VM, **ipconfig1**, is displayed. For this use case, make sure the IP addresses associated with ipconfig1 are static. Next, create two more IP configurations: ipconfig2 (VIP) and ipconfig3 (SNIP).

To create more **ipconfigs**, create **Add**.

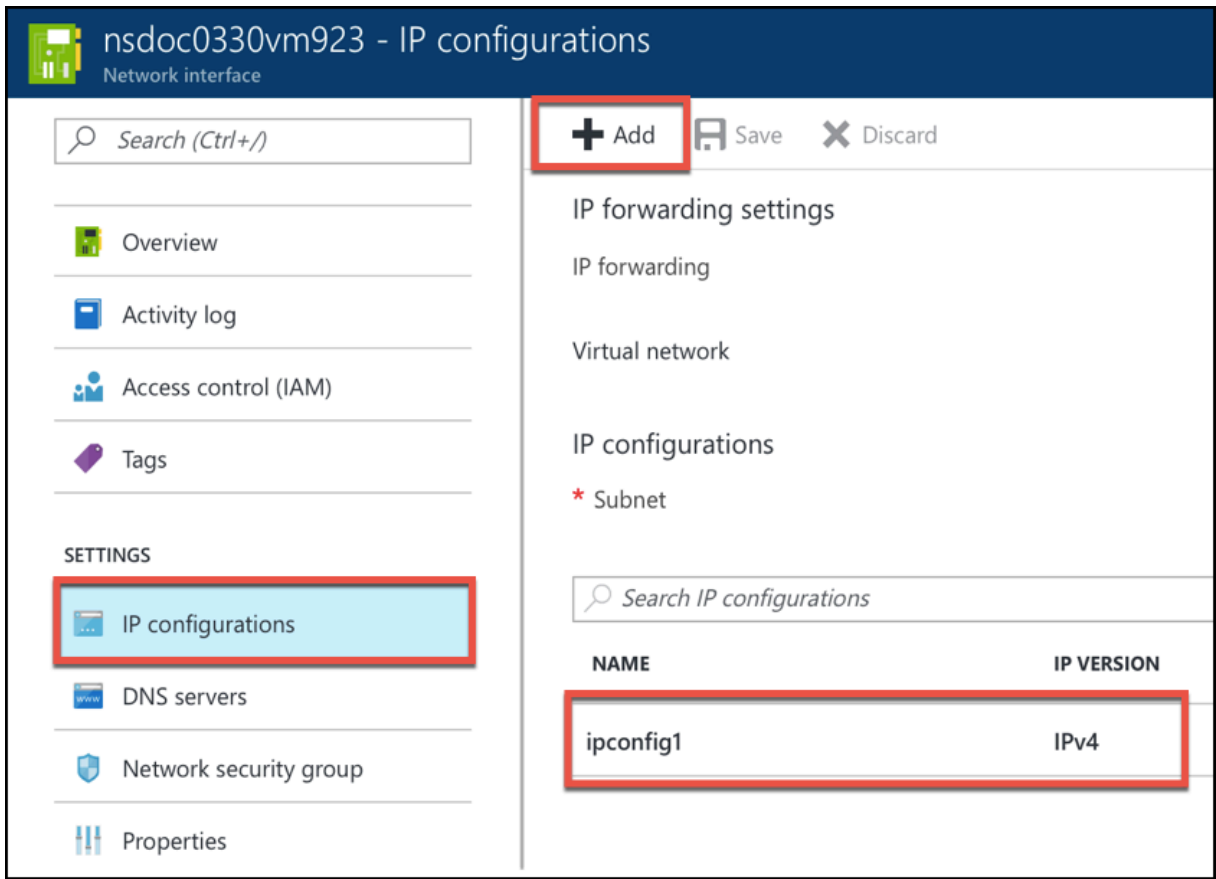

In the **Add IP configuration** window, enter a **Name**, specify allocation method as **Static**, enter an IP address (192.0.0.5 for this use case), and enable **Public IP address**.

Note

Before adding a static private IP address, check for IP address availability and make sure the IP address belongs to the same subnet to which the NIC is attached.

The screenshot shows the 'Add IP configuration' window for a NetScaler device (nsdoc0330vm923). The configuration is for a secondary IP address named 'ipconfig2'. The IP address is set to 192.0.0.5. The allocation is set to 'Static'. A message states 'Primary IP configuration already exists'. At the bottom, there is a button labeled 'Configure required settings'.

Next, click **Configure required settings** to create a static public IP address for ipconfig2.

By default, public IPs are dynamic. To make sure that the VM always uses the same public IP address, create a static Public IP.

In the Create public IP address blade, add a Name, under Assignment click **Static**. And then click **OK**.

Create public IP address

* Name
 ✓

Assignment
 Dynamic Static

Note

Even when you set the allocation method to static, you cannot specify the actual IP address assigned to the public IP resource. Instead, it gets allocated from a pool of available IP addresses in the Azure location the resource is created in.

Follow the steps to add one more IP configuration for ipconfig3. Public IP is not mandatory.

Search IP configurations					
NAME	IP VERSION	TYPE	PRIVATE IP ADDRESS	PUBLIC IP ADDRESS	
ipconfig1	IPv4	Primary	192.0.0.4 (Static)	13.78.187.150 (NSDoc0330VM-ip)	
ipconfig2	IPv4	Secondary	192.0.0.5 (Static)	13.78.183.123 (ipconfig2_PIP2)	
ipconfig3	IPv4	Secondary	192.0.0.6 (Static)	-	

Step 2: Configure NetScaler-owned IP addresses

Configure the NetScaler-owned IP addresses by using the GUI or the command `add ns ip`. For more information, see [Configuring NetScaler-Owned IP Addresses](#).

Configure a high-availability setup with multiple IP addresses and NICs

July 24, 2024

In a Microsoft Azure deployment, a high-availability configuration of two NetScaler VPX instances is achieved by using the Azure Load Balancer (ALB). This is achieved by configuring a health probe on ALB, which monitors each VPX instance by sending a health probe at every 5 seconds to both primary and secondary instances.

In this setup, only the primary node responds to health probes and the secondary does not. Once the primary sends the response to the health probe, the ALB starts sending the data traffic to the instance. If the primary instance misses two consecutive health probes, ALB does not redirect traffic to that instance. On failover, the new primary starts responding to health probes and the ALB redirects traffic to it. The standard VPX high availability failover time is three seconds. The total failover time that might take for traffic switching can be a maximum of 13 seconds.

You can deploy a pair of NetScaler VPX instances with multiple NICs in an active-passive high availability (HA) setup on Azure. Each NIC can contain multiple IP addresses.

The following options are available for a multi-NIC high availability deployment:

- High availability using Azure availability set
- High availability using Azure availability zones

For more information about Azure Availability Set and Availability Zones, see the Azure documentation [Manage the availability of Linux virtual machines](#).

High availability using availability set

A high availability setup using a availability set must meet the following requirements:


- An HA Independent Network Configuration (INC) configuration
- The Azure Load Balancer (ALB) in Direct Server Return (DSR) mode

All traffic goes through the primary node. The secondary node remains in standby mode until the primary node fails.

Note

For a NetScaler VPX high availability deployment on the Azure cloud to work, you need a floating public IP (PIP) that can be moved between the two VPX nodes. The Azure Load Balancer (ALB) provides that floating PIP, which is moved to the second node automatically in the event of a failover.

Diagram: Example of a high availability deployment architecture, using Azure Availability Set

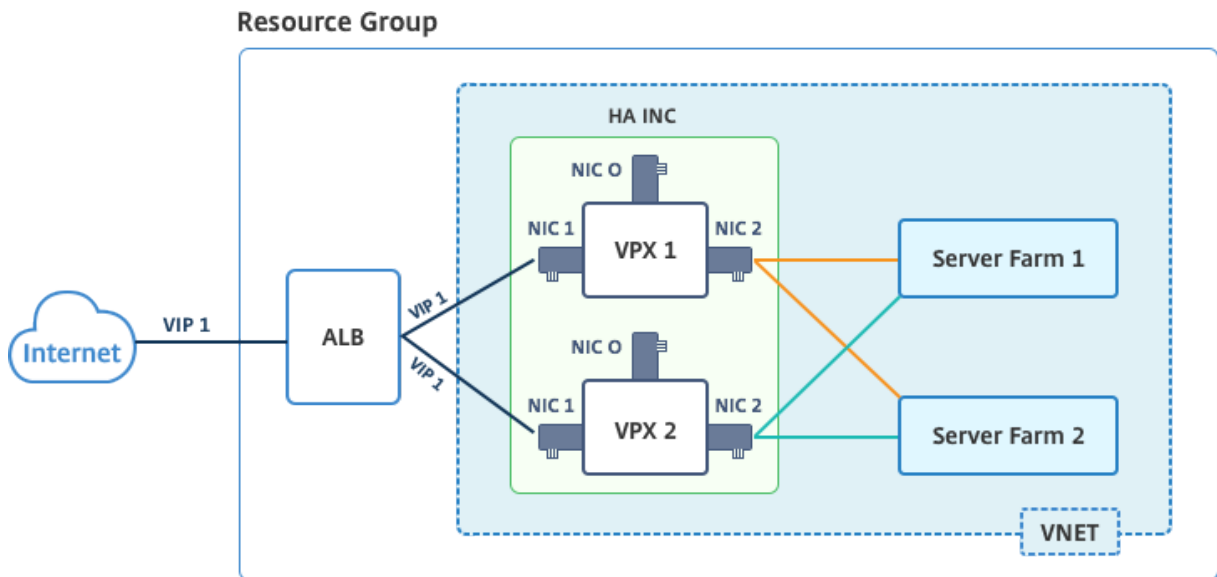

In an active-passive deployment, the ALB front end public IP (PIP) addresses are added as the VIP addresses in each VPX node. In HA-INC configuration, the VIP addresses are floating and SNIP addresses are instance specific.

You can deploy a VPX pair in active-passive high availability mode in two ways by using:

- **NetScaler VPX standard high availability template:** use this option to configure an HA pair with the default option of three subnets and six NICs.
- **Windows PowerShell commands:** use this option to configure an HA pair according to your subnet and NIC requirements.

This topic describes how to deploy a VPX pair in active-passive HA setup by using the Citrix template. If you want to use PowerShell commands, see [Configuring an HA Setup with Multiple IP Addresses and NICs by Using PowerShell Commands](#).


Configure HA-INC nodes by using the NetScaler high availability template

You can quickly and efficiently deploy a pair of VPX instances in HA-INC mode by using the standard template. The template creates two nodes, with three subnets and six NICs. The subnets are for management, client, and server-side traffic, and each subnet has two NICs for both the VPX instances.

You can get the NetScaler HA Pair template at the [Azure Marketplace](#).


Complete the following steps to launch the template and deploy a high availability VPX pair, by using Azure availability sets.

1. From Azure Marketplace, search **NetScaler**.

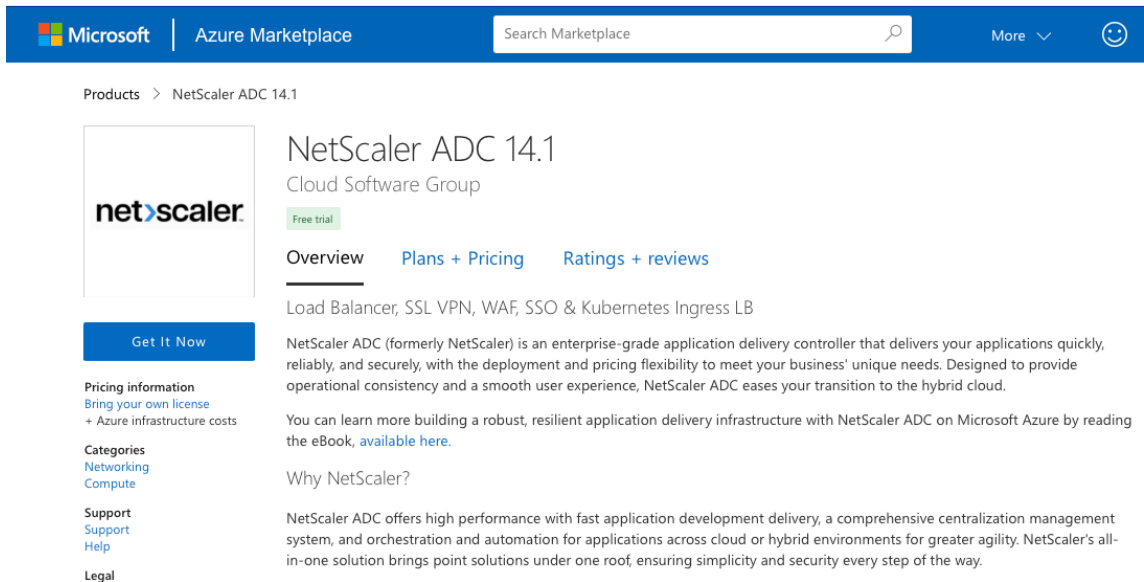


2. Click **GET IT NOW**.


3. Select the required HA deployment along with license, and click **Continue**.

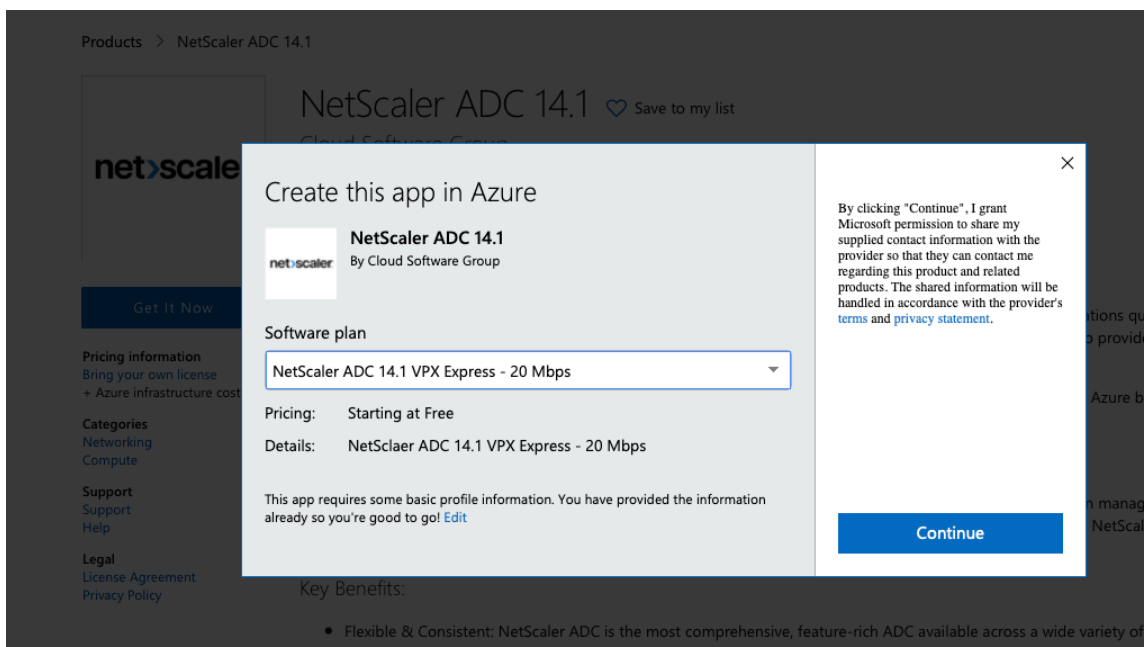

4. The **Basics** page appears. Create a Resource Group and select **OK**.

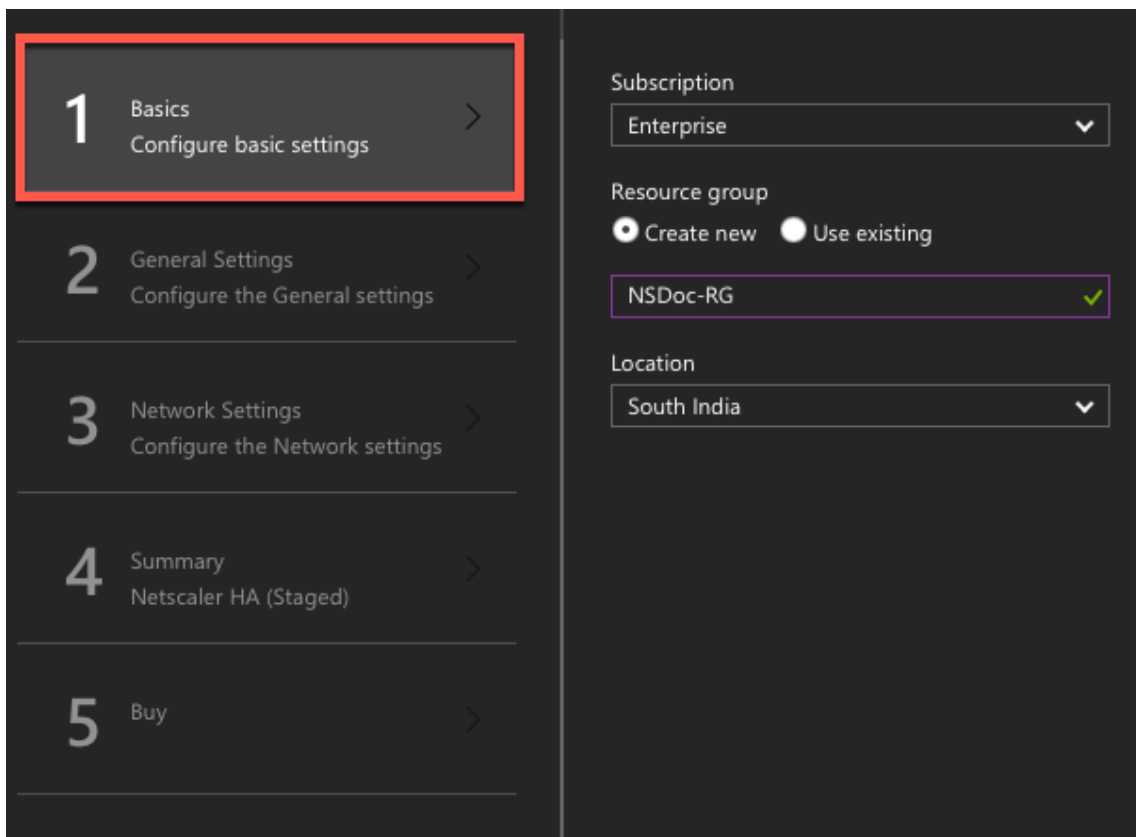

5. The **General Settings** page appears. Type the details and select **OK**.

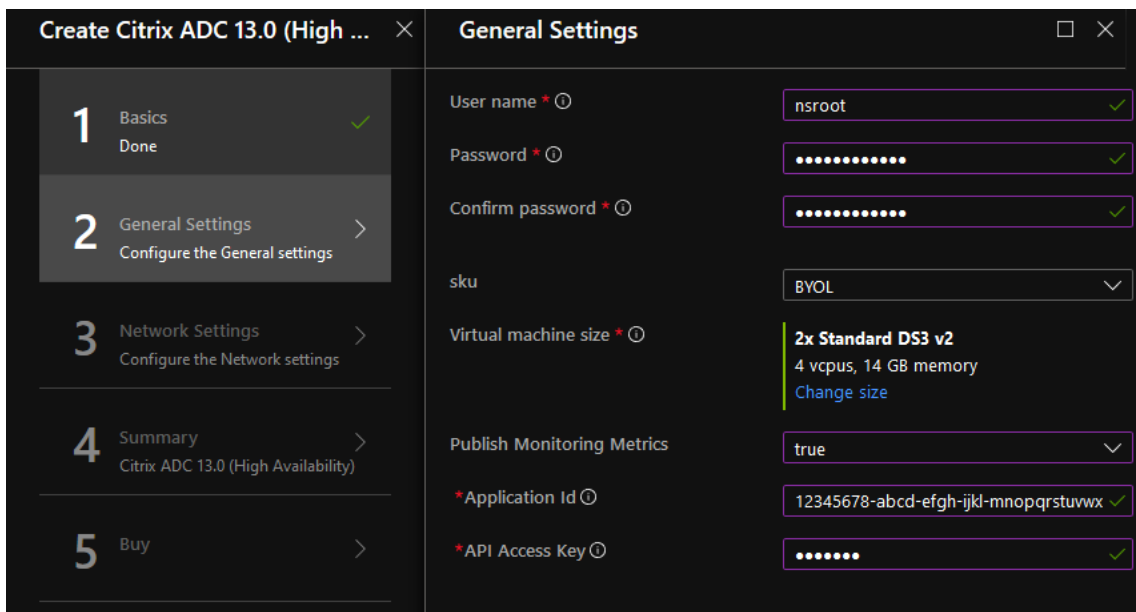


Note:

By default, the **Publishing Monitoring Metrics** option is set to **false**. If you want to enable this option, select **true**.

Create an Azure Active Directory (ADD) application and service principal that can access resources. Assign contributor role to the newly created AAD application. For more information, see [Use portal to create an Azure Active Directory application and service principal that can access resources](#).

- The **Network Settings** page appears. Check the VNet and subnet configurations, edit the required settings, and select **OK**.

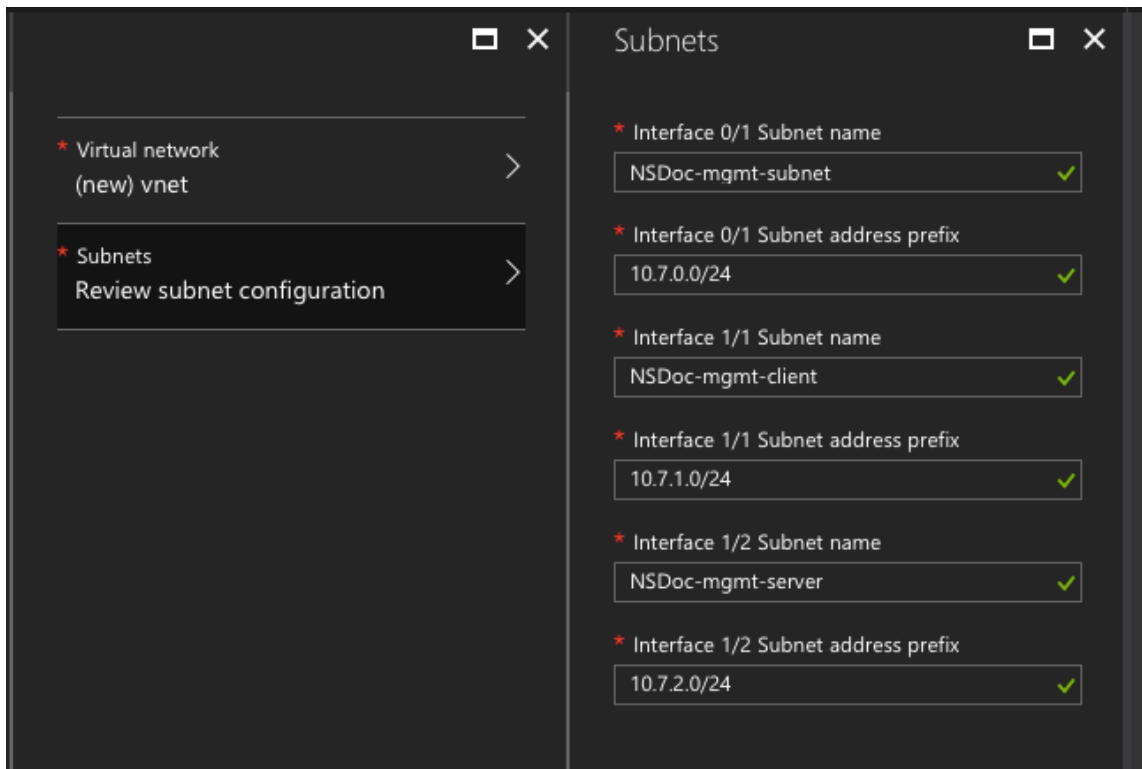
























- The **Summary** page appears. Review the configuration and edit accordingly. Select **OK** to confirm.
- The **Buy** page appears. Select **Purchase** to complete the deployment.


It might take a moment for the Azure Resource Group to be created with the required configurations. After completion, select the **Resource Group** in the Azure portal to see the configuration details, such as LB rules, back-end pools, health probes. The high availability pair appears as ns-vpx0 and ns-vpx1.

If further modifications are required for your HA setup, such as creating more security rules and ports, you can do that from the Azure portal.

23 items Show hidden types ⓘ

<input type="checkbox"/>	NAME ↑↓	TYPE ↑↓
<input type="checkbox"/>	 alb	Load balancer
<input type="checkbox"/>	 alb-publicip	Public IP address
<input type="checkbox"/>	 avl-set	Availability set
<input type="checkbox"/>	 ns-vpx0	Disk
<input type="checkbox"/>	 ns-vpx0	Virtual machine
<input type="checkbox"/>	 ns-vpx0-mgmt-publicip	Public IP address
<input type="checkbox"/>	 ns-vpx1	Disk
<input type="checkbox"/>	 ns-vpx1	Virtual machine
<input type="checkbox"/>	 ns-vpx1-mgmt-publicip	Public IP address
<input type="checkbox"/>	 ns-vpx-nic0-01	Network interface
<input type="checkbox"/>	 ns-vpx-nic0-11	Network interface
<input type="checkbox"/>	 ns-vpx-nic0-12	Network interface
<input type="checkbox"/>	 ns-vpx-nic1-01	Network interface
<input type="checkbox"/>	 ns-vpx-nic1-11	Network interface
<input type="checkbox"/>	 ns-vpx-nic1-12	Network interface
<input type="checkbox"/>	 ns-vpx-nic-nsg0-01	Network security group
<input type="checkbox"/>	 ns-vpx-nic-nsg0-11	Network security group
<input type="checkbox"/>	 ns-vpx-nic-nsg0-12	Network security group
<input type="checkbox"/>	 ns-vpx-nic-nsg1-01	Network security group
<input type="checkbox"/>	 ns-vpx-nic-nsg1-11	Network security group
<input type="checkbox"/>	 ns-vpx-nic-nsg1-12	Network security group
<input type="checkbox"/>	 vnet01	Virtual network
<input type="checkbox"/>	 vpxhamd7fi3wouvrk	Storage account

Next, you need to configure the load-balancing virtual server with the **ALB's Frontend public IP (PIP) address**, on primary node. To find the ALB PIP, select ALB > **Frontend IP configuration**.

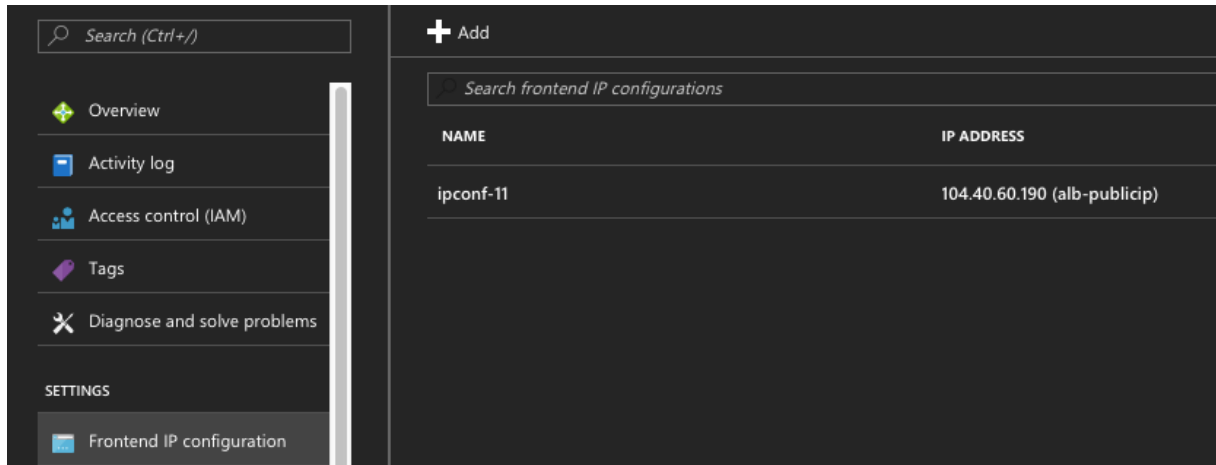

See the **Resources** section for more information about how to configure the load-balancing virtual server.

Resources:

The following links provide additional information related to HA deployment and virtual server configuration:

- [Configuring high availability nodes in different subnets](#)
- [Set up basic load balancing](#)


Related resources:

- [Configure a high-availability setup with multiple IP addresses and NICs by using PowerShell commands](#)
- [Configuring GSLB on Active-Standby HA Deployment on Azure](#)

High availability using availability zones

Azure Availability Zones are fault-isolated locations within an Azure region, providing redundant power, cooling, and networking and increasing resiliency. Only specific Azure regions support Availability Zones. For more information about regions that support Availability Zones, see Azure documentation [What are Availability Zones in Azure?](#).

Diagram: Example of a high availability deployment architecture, using Azure Availability Zones

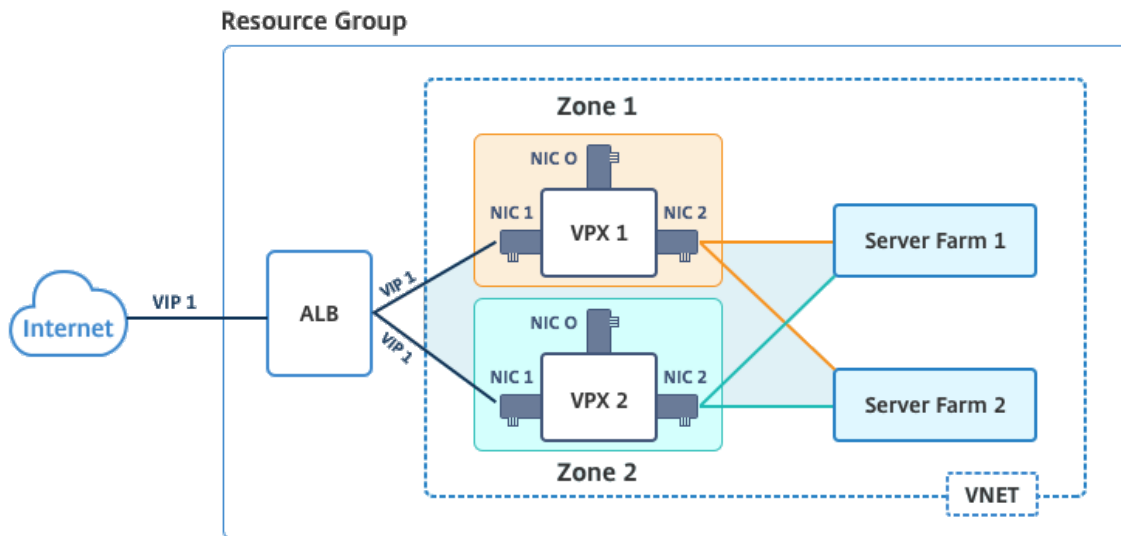

You can deploy a VPX pair in high availability mode by using the template called “NetScaler 13.0 HA using Availability Zones,” available in Azure Marketplace.


Complete the following steps to launch the template and deploy a high availability VPX pair, by using Azure Availability Zones.

1. From Azure Marketplace, select and initiate the Citrix solution template.



2. Ensure deployment type is Resource Manager and select **Create**.
3. The **Basics** page appears. Enter the details and click **OK**.

Note: Ensure that you select an Azure region that supports Availability Zones. For more information about regions that support Availability Zones, see Azure documentation [What are Availability Zones in Azure?](#)

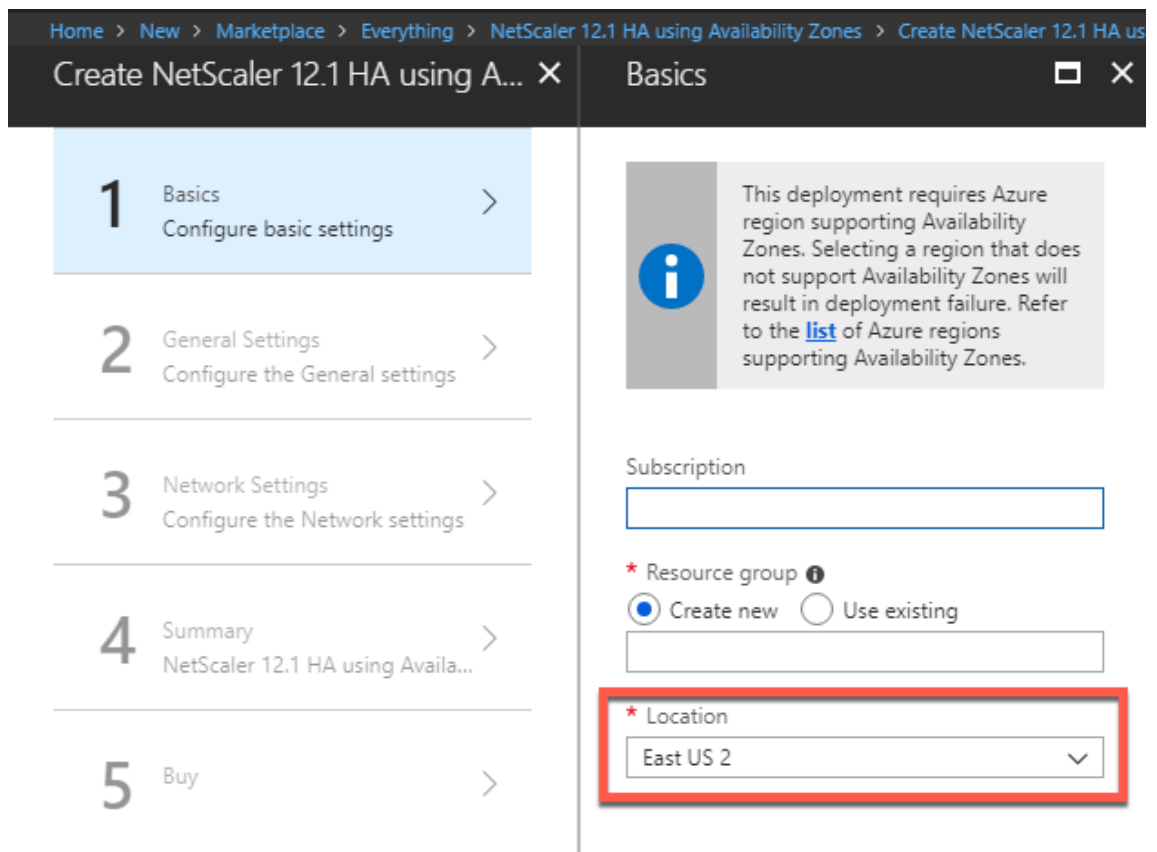

4. The **General Settings** page appears. Type the details and select **OK**.
5. The **Network Setting** page appears. Check the VNet and subnet configurations, edit the required settings, and select **OK**.
6. The **Summary** page appears. Review the configuration and edit accordingly. Select **OK** to confirm.
7. The **Buy** page appears. Select **Purchase** to complete the deployment.

It might take a moment for the Azure Resource Group to be created with the required configurations. After completion, select the **Resource Group** to see the configuration details, such as LB rules, back-end pools, health probes, and so on, in the Azure portal. The high availability pair appears as ns-vpx0 and ns-vpx1. Also, you can see the location under the **Location** column.

Filter by name... All types All locations No grouping

22 items Show hidden types

NAME	TYPE	LOCATION
alb	Load balancer	East US 2
alb-publicip	Public IP address	East US 2
ns-vpx0	Virtual machine	East US 2
ns-vpx0_OsDisk_1_d7b757b8aa804bf1991a083f319e553a	Disk	East US 2
ns-vpx0-mgmt-publicip	Public IP address	East US 2
ns-vpx1	Virtual machine	East US 2
ns-vpx1_OsDisk_1_0c2364d43e2b47fa896bf14b02090ee0	Disk	East US 2
ns-vpx1-mgmt-publicip	Public IP address	East US 2
ns-vpx-nic0-01	Network interface	East US 2
ns-vpx-nic0-11	Network interface	East US 2
ns-vpx-nic0-12	Network interface	East US 2
ns-vpx-nic1-01	Network interface	East US 2
ns-vpx-nic1-11	Network interface	East US 2
ns-vpx-nic1-12	Network interface	East US 2
ns-vpx-nic-nsg0-01	Network security group	East US 2
ns-vpx-nic-nsg0-11	Network security group	East US 2
ns-vpx-nic-nsg0-12	Network security group	East US 2
ns-vpx-nic-nsg1-01	Network security group	East US 2
ns-vpx-nic-nsg1-11	Network security group	East US 2
ns-vpx-nic-nsg1-12	Network security group	East US 2
test1	Virtual network	East US 2
vpxhavadosvod3v5jeu	Storage account	East US 2

If further modifications are required for your HA setup, such as creating more security rules and ports, you can do that from the Azure portal.

Monitor your instances using metrics in Azure monitor

You can use metrics in the Azure monitor data platform to monitor a set of NetScaler VPX resources such as CPU, memory utilization, and throughput. Metrics service monitors NetScaler VPX resources that run on Azure, in real time. You can use **Metrics Explorer** to access the collected data. For more information, see [Azure Monitor Metrics overview](#).


Points to note

- If you deploy a NetScaler VPX instance on Azure by using the Azure Marketplace offer, Metrics service is disabled by default.
- The Metrics service is not supported in Azure CLI.
- Metrics are available for CPU (management and packet CPU usage), memory, and throughput (inbound and outbound).

How to view metrics in Azure monitor

To view metrics in the Azure monitor for your instance, perform these steps:

1. Log on to **Azure Portal > Virtual Machines**.
2. Select the virtual machine that is the Primary Node.
3. In the **Monitoring** section, click **Metrics**.
4. From the **Metric Namespace** drop-down menu, click **NetScaler**.
5. Under **All metrics** in **Metrics** drop-down menu, click the metrics you want to view.
6. Click **Add metric** to view another metric on the same chart. Use the Chart options to customize your chart.

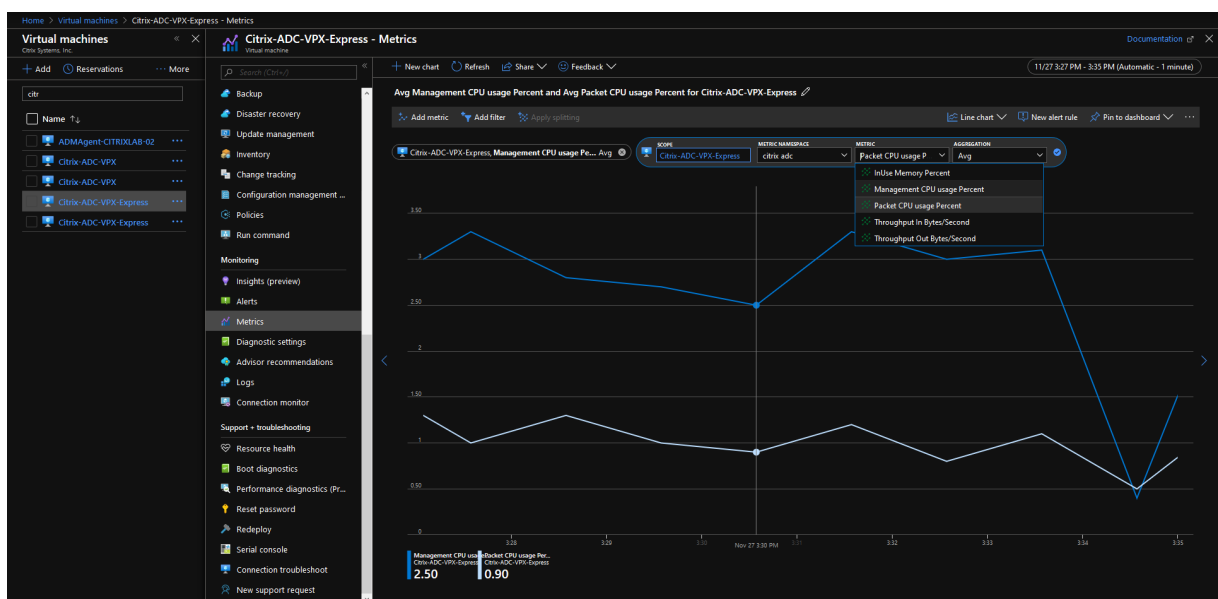

Configure a high-availability setup with multiple IP addresses and NICs by using PowerShell commands

May 2, 2023

You can deploy a pair of NetScaler VPX instances with multiple NICs in an active-passive high availability (HA) setup on Azure. Each NIC can contain multiple IP addresses.

An active-passive deployment requires:


- An HA Independent Network Configuration (INC) configuration
- The Azure Load Balancer (ALB) in Direct Server Return (DSR) mode

All traffic goes through the primary node. The secondary node remains in standby mode until the primary node fails.

Note

For a NetScaler VPX high availability deployment on an Azure cloud to work, you need a floating public IP (PIP) that can be moved between the two high-availability nodes. The Azure Load Balancer (ALB) provides that floating PIP, which is moved to the second node automatically in the event of a failover.

Diagram: Example of an active-passive deployment architecture

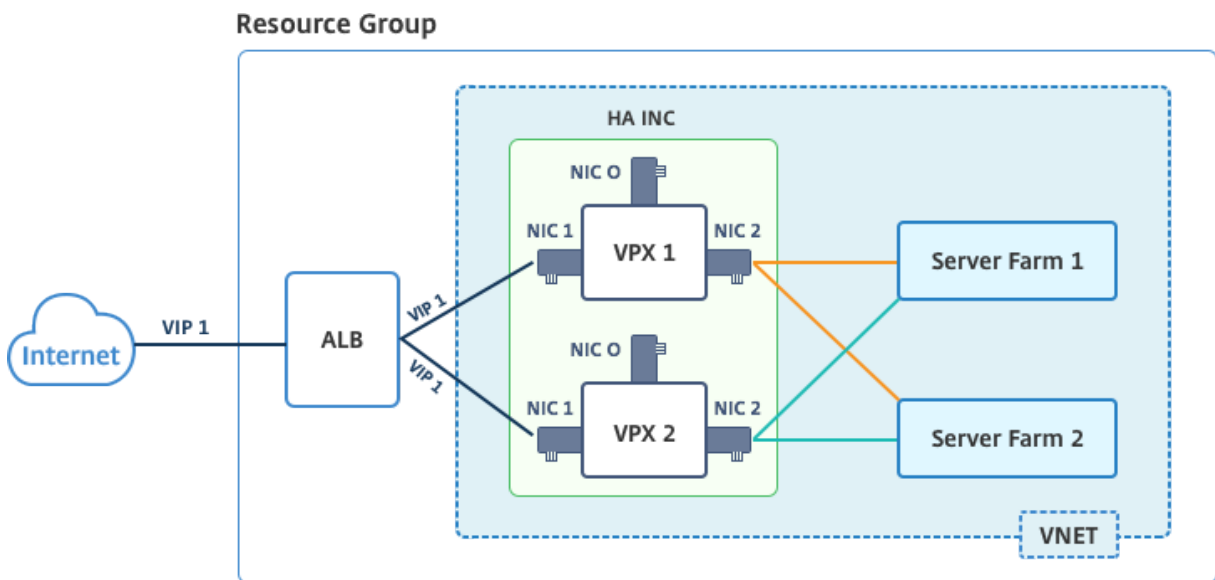

In an active-passive deployment, the ALB floating public IP (PIP) addresses are added as the VIP addresses in each VPX node. In HA-INC configuration, the VIP addresses are floating and SNIP addresses are instance specific.

ALB monitors each VPX instance by sending health probe at every 5 seconds and redirects traffic to that instance only that sends health probes response on regular interval. So in an HA setup, the primary node responds to health probes and secondary does not. If the primary instances miss two consecutive health probes, ALB does not redirect traffic to that instance. On failover, the new primary starts responding to health probes and the ALB redirects traffic to it. The standard VPX high availability failover time is three seconds. The total failover time that might take for traffic switching can be maximum of 13 seconds.

You can deploy a VPX pair in active-passive HA setup in two ways by using:

- **NetScaler VPX Standard high availability template:** use this option to configure an HA pair with the default option of three subnets and six NICs.
- **Windows PowerShell commands:** use this option to configure an HA pair according to your subnet and NIC requirements.

This topic describes how to deploy a VPX pair in active-passive HA setup by using PowerShell commands. If you want to use the NetScaler VPX Standard HA template, see [Configuring an HA Setup with Multiple IP Addresses and NICs](#).

Configure HA-INC nodes by using PowerShell Commands

Scenario: HA-INC PowerShell deployment

In this scenario, you deploy a NetScaler VPX pair by using the topology given in the table. Each VPX instance contains three NICs, with each NIC is deployed in a different subnet. Each NIC is assigned an IP configuration.

ALB	VPX1	VPX2
ALB is associated with public IP 3 (pip3)	Management IP is configured with IPConfig1, which includes one public IP (pip1) and one private IP (12.5.2.24); nic1; Mgmtsubnet=12.5.2.0/24	Management IP is configured with IPConfig5, which includes one public IP (pip3) and one private IP (12.5.2.26);nic4;Mgmtsubnet=12.5.2.0/24
LB rules and port configured are HTTP (80),SSL (443), health probe (9000)	Client-side IP is configured with IPConfig3, which includes one private IP(12.5.1.27);nic2; FrontEndsubnet=12.5.1.0/24	Client-side IP is configured with IPConfig7, which includes one private IP (12.5.1.28);nic5;FrontEndsubnet=12.5.1.0/24
-	Server-side IP is configured with IPConfig4, which includes one private IP(12.5.3.24); nic3;BackendSubnet=12.5.3.0/24	Server-side IP is configured with IPConfig8, which includes one private IP(12.5.3.28);nic6;BackendSubnet=12.5.3.0/24
-	Rules and ports for NSG are SSH (22),HTTP (80),HTTPS (443)	-

Parameter settings

The following parameter settings are used in this scenario.

\$locName= "South east Asia"

\$rgName = "MulitIP-MultiNIC-RG"

\$nicName1= "VM1-NIC1"

\$nicName2 = "VM1-NIC2"

```
$nicName3= "VM1-NIC3"  
$nicName4 = "VM2-NIC1"  
$nicName5= "VM2-NIC2"  
$nicName6 = "VM2-NIC3"  
$vNetName = "Azure-MultiIP-ALB-vnet"  
$vNetAddressRange= "12.5.0.0/16"  
$frontEndSubnetName= "frontEndSubnet"  
$frontEndSubnetRange= "12.5.1.0/24"  
$mgmtSubnetName= "mgmtSubnet"  
$mgmtSubnetRange= "12.5.2.0/24"  
$backEndSubnetName = "backEndSubnet"  
$backEndSubnetRange = "12.5.3.0/24"  
$prmStorageAccountName = "multiipmultinicbstorage"  
$avSetName = "multiple-avSet"  
$vmSize= "Standard_DS4_V2"  
$publisher = "Citrix"  
$offer = "netscalervpx-120"  
$sku = "netscalerbyol"  
$version="latest"  
$pubIPName1="VPX1MGMT"  
$pubIPName2="VPX2MGMT"  
$pubIPName3="ALBPIP"  
$domName1="vpx1dns"  
$domName2="vpx2dns"  
$domName3="vpxalbdns"  
$vmNamePrefix="VPXMultiIPALB"  
$osDiskSuffix1="osmultiipalbdiskdb1"  
$osDiskSuffix2="osmultiipalbdiskdb2"  
$lbName= "MultiIPALB"
```

```
$frontEndConfigName1= "FrontEndIP"
$backendPoolName1= "BackendPoolHttp"
$lbRuleName1= "LBRuleHttp"
$healthProbeName= "HealthProbe"
$nsgName="NSG-MultiIP-ALB"
$rule1Name="Inbound-HTTP"
$rule2Name="Inbound-HTTPS"
$rule3Name="Inbound-SSH"
```

To complete the deployment, complete the following steps by using PowerShell commands:

1. Create a resource group, storage account, and availability set
2. Create a network security group and add rules
3. Create a virtual network and three subnets
4. Create public IP addresses
5. Create IP configurations for VPX1
6. Create IP configurations for VPX2
7. Create NICs for VPX1
8. Create NICs for VPX2
9. Create VPX1
10. Create VPX2
11. Create ALB

Create a resource group, storage account, and availability set.

```
1 New-AzureRmResourceGroup -Name $rgName -Location $locName
2
3
4 $prmStorageAccount=New-AzureRMStorageAccount -Name
   $prmStorageAccountName -ResourceGroupName $rgName -Type Standard_LRS
   -Location $locName
5
6
7 $avSet=New-AzureRMAvailabilitySet -Name $avSetName -ResourceGroupName
   $rgName -Location $locName
```

Create a network security group and add rules.

```
1 $rule1 = New-AzureRmNetworkSecurityRuleConfig -Name $rule1Name -
   Description "Allow HTTP" -Access Allow -Protocol Tcp -Direction
   Inbound -Priority 101
2
3
```

```
4 -SourceAddressPrefix Internet -SourcePortRange * -
   DestinationAddressPrefix * -DestinationPortRange 80
5
6
7 $rule2 = New-AzureRmNetworkSecurityRuleConfig -Name $rule2Name -
   Description "Allow HTTPS" -Access Allow -Protocol Tcp -Direction
   Inbound -Priority 110
8
9
10 -SourceAddressPrefix Internet -SourcePortRange * -
    DestinationAddressPrefix * -DestinationPortRange 443
11
12
13 $rule3 = New-AzureRmNetworkSecurityRuleConfig -Name $rule3Name -
   Description "Allow SSH" -Access Allow -Protocol Tcp -Direction
   Inbound -Priority 120
14
15
16 -SourceAddressPrefix Internet -SourcePortRange * -
    DestinationAddressPrefix * -DestinationPortRange 22
17
18
19 $nsg = New-AzureRmNetworkSecurityGroup -ResourceGroupName $rgName -
    Location $locName -Name $nsgName -SecurityRules $rule1,$rule2,$rule3
```

Create a virtual network and three subnets.

```
1 $frontendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
   $frontEndSubnetName -AddressPrefix $frontEndSubnetRange (this
   parameter value should be as per your requirement)
2
3
4 $mgmtSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name $mgmtSubnetName
   -AddressPrefix $mgmtSubnetRange
5
6
7 $backendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
   $backEndSubnetName -AddressPrefix $backEndSubnetRange
8
9
10 $vnet =New-AzureRmVirtualNetwork -Name $vNetName -ResourceGroupName
   $rgName -Location $locName -AddressPrefix $vNetAddressRange -Subnet
   $frontendSubnet,$backendSubnet, $mgmtSubnet
11
12
13 $subnetName ="frontEndSubnet"
14
15
16 \($subnet1=\$vnet.Subnets|?{
17   \$\_.Name -eq $subnetName }
18
19
20
```

```
21 $subnetName="backEndSubnet"
22
23
24 \($subnet2=\$vnet.Subnets|?{
25   \$_Name -eq \$subnetName }
26
27
28
29 $subnetName="mgmtSubnet"
30
31
32 \($subnet3=\$vnet.Subnets|?{
33   \$_Name -eq \$subnetName }
```

Create public IP addresses.

```
1 $pip1=New-AzureRmPublicIpAddress -Name $pubIPName1 -ResourceGroupName
   $rgName -DomainNameLabel $domName1 -Location $locName -
   AllocationMethod Dynamic
2
3 $pip2=New-AzureRmPublicIpAddress -Name $pubIPName2 -ResourceGroupName
   $rgName -DomainNameLabel $domName2 -Location $locName -
   AllocationMethod Dynamic
4
5 $pip3=New-AzureRmPublicIpAddress -Name $pubIPName3 -ResourceGroupName
   $rgName -DomainNameLabel $domName3 -Location $locName -
   AllocationMethod Dynamic
```

Create IP configurations for VPX1.

```
1 $IPConfigName1 = "IPConfig1"
2
3
4 $IPAddress = "12.5.2.24"
5
6
7 $IPConfig1=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName1 -
   Subnet $subnet3 -PrivateIpAddress $IPAddress -PublicIpAddress $pip1
   -Primary
8
9
10 $IPConfigName3="IPConfig-3"
11
12
13 $IPAddress="12.5.1.27"
14
15
16 $IPConfig3=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName3 -
   Subnet $subnet1 -PrivateIpAddress $IPAddress -Primary
17
18
19 $IPConfigName4 = "IPConfig-4"
20
```

```
21
22 $IPAddress = "12.5.3.24"
23
24
25 $IPConfig4 = New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName4 -
    Subnet $subnet2 -PrivateIpAddress $IPAddress -Primary
```

Create IP configurations for VPX2.

```
1 $IpConfigName5 = "IPConfig5"
2
3
4 $IPAddress="12.5.2.26"
5
6
7 $IPConfig5=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName5 -
    Subnet $subnet3 -PrivateIpAddress $IPAddress -PublicIpAddress $pip2
    -Primary
8
9
10 $IPConfigName7="IPConfig-7"
11
12
13 $IPAddress="12.5.1.28"
14
15
16 $IPConfig7=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName7 -
    Subnet $subnet1 -PrivateIpAddress $IPAddress -Primary
17
18
19 $IPConfigName8="IPConfig-8"
20
21
22 $IPAddress="12.5.3.28"
23
24
25 $IPConfig8=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName8 -
    Subnet $subnet2 -PrivateIpAddress $IPAddress -Primary
```

Create NICs for VPX1.

```
1 $nic1=New-AzureRmNetworkInterface -Name $nicName1 -ResourceGroupName
    $rgName -Location $locName -IpConfiguration $IpConfig1 -
    NetworkSecurityGroupId $nsg.Id
2
3
4 $nic2=New-AzureRmNetworkInterface -Name $nicName2 -ResourceGroupName
    $rgName -Location $locName -IpConfiguration $IpConfig3 -
    NetworkSecurityGroupId $nsg.Id
5
6
7 $nic3=New-AzureRmNetworkInterface -Name $nicName3 -ResourceGroupName
    $rgName -Location $locName -IpConfiguration $IpConfig4 -
```



```
NetworkSecurityGroupId $nsg.Id
```

Create NICs for VPX2.

```
1 $nic4=New-AzureRmNetworkInterface -Name $nicName4 -ResourceGroupName
   $rgName -Location $locName -IpConfiguration $IpConfig5 -
   NetworkSecurityGroupId $nsg.Id
2
3
4 $nic5=New-AzureRmNetworkInterface -Name $nicName5 -ResourceGroupName
   $rgName -Location $locName -IpConfiguration $IpConfig7 -
   NetworkSecurityGroupId $nsg.Id
5
6
7 $nic6=New-AzureRmNetworkInterface -Name $nicName6 -ResourceGroupName
   $rgName -Location $locName -IpConfiguration $IpConfig8 -
   NetworkSecurityGroupId $nsg.Id
```

Create VPX1.

This step includes the following substeps:

- Create VM config object
- Set credentials, OS, and image
- Add NICs
- Specify OS disk and create VM

```
1 $suffixNumber = 1
2
3 $vmName=$vmNamePrefix + $suffixNumber
4
5 $vmConfig=New-AzureRMVMConfig -VMName $vmName -VMSize $vmSize -
   AvailabilitySetId $avSet.Id
6
7 $cred=Get-Credential -Message "Type the name and password for VPX
   login."
8
9 $vmConfig=Set-AzureRMVMOperatingSystem -VM $vmConfig -Linux -
   ComputerName $vmName -Credential $cred
10
11 $vmConfig=Set-AzureRMVMSourceImage -VM $vmConfig -PublisherName
   $publisher -Offer $offer -Skus $sku -Version $version
12
13 $vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic1.
   Id -Primary
14
15 $vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic2.
   Id
16
17 $vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic3.
   Id
```

```
18
19 $osDiskName=$vmName + "-" + $osDiskSuffix1
20
21 $osVhdUri=$prmStorageAccount.PrimaryEndpoints.Blob.ToString() + "
    vhd/" + $osDiskName + ".vhd"
22
23 $vmConfig=Set-AzureRMVMOsdisk -VM $vmConfig -Name $osDiskName -
    VhdUri $osVhdUri -CreateOption fromImage
24
25 Set-AzureRmVMPlan -VM $vmConfig -Publisher $publisher -Product
    $offer -Name $sku
26
27 New-AzureRMVM -VM $vmConfig -ResourceGroupName $rgName -Location
    $locName
```

Create VPX2.

```
1 ``
2 $suffixNumber=2
3
4
5 $vmName=$vmNamePrefix + $suffixNumber
6
7
8 $vmConfig=New-AzureRMVMConfig -VMName $vmName -VMSize $vmSize -
    AvailabilitySetId $avSet.Id
9
10
11 $cred=Get-Credential -Message "Type the name and password for VPX login
    ."
12
13
14 $vmConfig=Set-AzureRMVMOperatingSystem -VM $vmConfig -Linux -
    ComputerName $vmName -Credential $cred
15
16
17 $vmConfig=Set-AzureRMVMSourceImage -VM $vmConfig -PublisherName
    $publisher -Offer $offer -Skus $sku -Version $version
18
19
20 $vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic4.Id -
    Primary
21
22
23 $vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic5.Id
24
25
26 $vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic6.Id
27
28
29 $osDiskName=$vmName + "-" + $osDiskSuffix2
30
31
```

```

32 $osVhdUri=$prmStorageAccount.PrimaryEndpoints.Blob.ToString() + "vhds/"
    + $osDiskName + ".vhd"
33
34
35 $vmConfig=Set-AzureRMVMOSDisk -VM $vmConfig -Name $osDiskName -VhdUri
    $osVhdUri -CreateOption fromImage
36
37
38 Set-AzureRmVMPlan -VM $vmConfig -Publisher $publisher -Product $offer -
    Name $sku
39
40
41 New-AzureRMVM -VM $vmConfig -ResourceGroupName $rgName -Location
    $locName
42 ```

```

To view private and public IP addresses assigned to the NICs, type the following commands:

```

1 ```
2 $nic1.IPConfig
3
4
5 $nic2.IPConfig
6
7
8 $nic3.IPConfig
9
10
11 $nic4.IPConfig
12
13
14 $nic5.IPConfig
15
16
17 $nic6.IPConfig
18 ```

```

Create Azure load balance (ALB).

This step includes the following substeps:

- Create front end IP config
- Create health probe
- Create back end address pool
- Create load-balancing rules (HTTP and SSL)
- Create ALB with front end IP config, back end address pool, and LB rule
- Associate IP config with back end pools

```
$frontEndIP1=New-AzureRmLoadBalancerFrontendIpConfig -Name
$frontEndConfigName1 -PublicIpAddress $pip3

$healthProbe=New-AzureRmLoadBalancerProbeConfig -Name $healthProbeName
-Protocol Tcp -Port 9000 -IntervalInSeconds 5 -ProbeCount 2

$beAddressPool1=New-AzureRmLoadBalancerBackendAddressPoolConfig -
Name $backendPoolName1

$lbRule1=New-AzureRmLoadBalancerRuleConfig -Name $lbRuleName1
-FrontendIpConfiguration $frontEndIP1 -BackendAddressPool
$beAddressPool1 -Probe $healthProbe -Protocol Tcp -FrontendPort
80 -BackendPort 80 -EnableFloatingIP

$lb=New-AzureRmLoadBalancer -ResourceGroupName $rgName -Name
$lbName -Location $locName -FrontendIpConfiguration $frontEndIP1
-LoadBalancingRule $lbRule1 -BackendAddressPool $beAddressPool1 -
Probe $healthProbe

$nic2.IpConfigurations[0].LoadBalancerBackendAddressPools.Add($lb
.BackendAddressPools[0])

$nic5.IpConfigurations[0].LoadBalancerBackendAddressPools.Add($lb
.BackendAddressPools[0])

$lb=$lb | Set-AzureRmLoadBalancer

$nic2=$nic2 | Set-AzureRmNetworkInterface

$nic5=$nic5 | Set-AzureRmNetworkInterface
```

After you've successfully deployed the NetScaler VPX pair, log on to each VPX instance to configure HA-INC, and SNIP and VIP addresses.

1. Type the following command to add HA nodes.

```
add ha node 1 PeerNodeNSIP -inc Enabled
```

2. Add private IP addresses of client-side NICs as SNIPs for VPX1 (NIC2) and VPX2 (NIC5)

```
add nsip privateIPofNIC2 255.255.255.0 -type SNIP
add nsip privateIPofNIC5 255.255.255.0 -type SNIP
```

3. Add load-balancing virtual server on the primary node with front-end IP address (public IP) of ALB.

```
add lb virtual server v1 HTTP FrontEndIPofALB 80
```

Related resources:

[Configuring GSLB on Active-Standby HA Deployment on Azure](#)

Deploy a NetScaler high-availability pair on Azure with ALB in the floating IP-disabled mode

October 9, 2023

You can deploy a pair of NetScaler VPX instances with multiple NICs in an active-passive high availability (HA) setup on Azure. Each NIC can contain many IP addresses.

An active-passive deployment requires:

- An HA Independent Network Configuration (INC) configuration
- The Azure Load Balancer (ALB) with:
 - Floating IP-enabled mode or Direct Server Return (DSR) mode
 - Floating IP-disabled mode


For more information about ALB floating IP options, refer to the [Azure documentation](#).

If you want to deploy a VPX pair in active-passive HA setup on Azure with ALB floating IP enabled, see [Configure a high-availability setup with multiple IP addresses and NICs by using PowerShell commands](#).

HA deployment architecture with ALB in the floating IP-disabled mode

In an active-passive deployment, the private IP addresses of the client interface of each instance are added as VIP addresses in each VPX instance. Configure in the HA-INC mode with VIP addresses being shared using IPSet and SNIP addresses being instance specific. All traffic goes through the primary instance. The secondary instance is in standby mode until the primary instance fails.

Diagram: Example of an active-passive deployment architecture

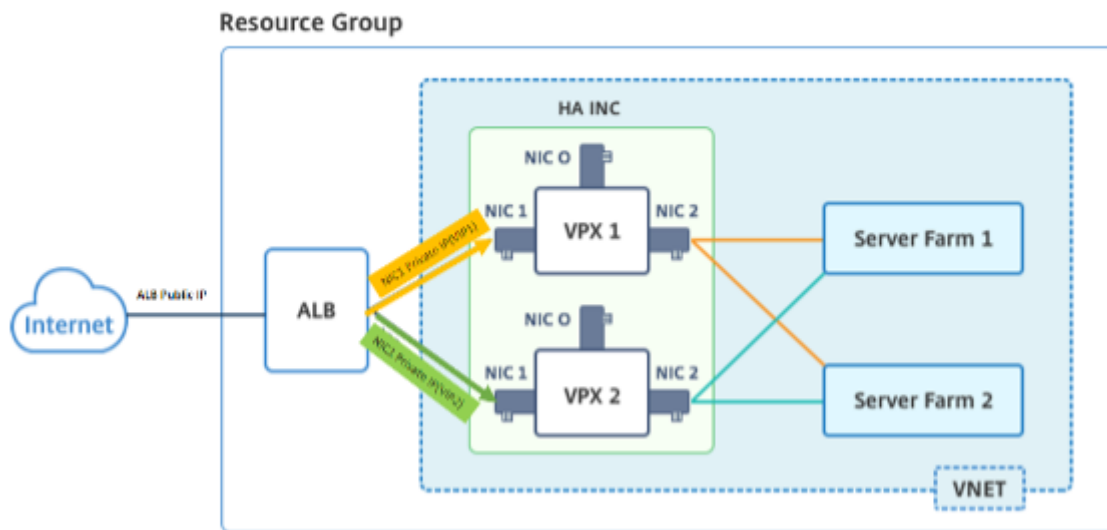

Prerequisites

You must be familiar with the following information before deploying a NetScaler VPX instance on Azure.

- Azure terminology and network details. For more information, see [Azure terminology](#).
- Working of a NetScaler appliance. For more information, see [NetScaler documentation](#).
- NetScaler networking. For more information, see the [ADC Networking](#).
- Azure load balancer and load-balancing rule configuration. For more information, see the [Azure ALB documentation](#).

How to deploy a VPX HA pair on Azure with ALB floating IP disabled

Here's a summary of the HA and ALB deployment steps:

1. Deploy two VPX instances (primary and secondary instances) on Azure.
2. Add client and server NIC on both the instances.
3. Deploy an ALB with load balancing rule whose floating IP mode is disabled.
4. Configure HA settings on both instances by using the NetScaler GUI.

Step 1. Deploy two VPX instances on Azure.

Create two VPX instances by following these steps:

1. Select the NetScaler version from Azure Marketplace (in this example, NetScaler release 13.1 is used).

The screenshot shows the Microsoft Azure Marketplace interface. At the top, there is a blue header with the Microsoft Azure logo and a search bar containing the text "Search resources, services, and docs (G+/)". Below the header, the breadcrumb "Home > Create a resource >" is visible. The main heading is "Marketplace". On the left side, there is a navigation menu with sections: "Get Started" (containing "Service Providers"), "Management" (containing "Private Marketplace" and "Private Offer Management"), "My Marketplace" (containing "Favorites", "My solutions", "Recently created", and "Private plans"), and "Categories" (containing "Compute (1)"). The main content area shows a search bar with "NetScaler ADC 14.1" entered. Below the search bar, there are two checkboxes: "Azure benefit eligible only" and "Azure services only". To the right of the search bar, there are filters for "Pricing : All" and "Publisher nam". Below the search bar, it says "Showing 1 to 1 of 1 results for 'NetScaler ADC 14.1'. [Clear search](#)". The search result is a card for "NetScaler ADC 14.1" by "net:scaler". The card includes the following information: "NetScaler ADC 14.1", "Cloud Software Group", "Virtual Machine", "Load Balancer, SSL VPN, WAF, SSO & Kubernetes Ingress LB", "Starts at \$ 0.26/3 years", and a "Create" button with a dropdown arrow and a heart icon.

2. Select the required ADC licensing mode, and click **Create**.

NetScaler ADC 14.1 🔖 ⋮
Cloud Software Group

NetScaler ADC 14.1 ♥ [Add to Favorites](#)
Cloud Software Group | Virtual Machine

Free trial

Plan
NetScaler ADC 14.1 VPX Standard Edi... ▼ Create Start with a pre-set configuration Purchase a reservation

Filter

NetScaler ADC 14.1 VPX Standard Edition - 5000 Mbps

Overview

NetScaler ADC 14.1 VPX Bring Your Own License

NetScaler ADC 14.1 VPX Express - 20 Mbps

NetScaler ADC 14.1 VPX Standard Edition - 10 Mbps

NetScaler ADC 14.1 VPX Premium Edition - 10 Mbps

NetScaler ADC 14.1 VPX Advanced Edition - 10 Mbps

NetScaler ADC 14.1 VPX Standard Edition - 200 Mbps

NetScaler ADC 14.1 VPX Advanced Edition - 200 Mbps

NetScaler ADC 14.1 VPX Premium Edition - 200 Mbps

NetScaler ADC 14.1 VPX Standard Edition - 1000 Mbps

NetScaler ADC 14.1 VPX Advanced Edition - 1000 Mbps

NetScaler ADC 14.1 VPX Premium Edition - 1000 Mbps

Key Benefits:

- Flexibl
capaci
- Best U

atings + Reviews

every controller that delivers your applications quickly, reliably, and securely, with
provide operational consistency and a smooth user experience, NetScaler ADC e

icture with NetScaler ADC on Microsoft Azure by reading the eBook, [available](#)

delivery, a comprehensive centralization management system, and orchestratio
tScaler's all-in-one solution brings point solutions under one roof, ensuring sin

ature-rich ADC available across a wide variety of deployment options with the
gent, global load-balancing service that uses real-time Internet traffic and data

The **Create a virtual machine** page opens.

3. Complete the required details in each tab: Basics, Disks, Networking, Management, Monitoring, Advanced, and Tags, for a successful deployment.

Create a virtual machine ...

[Basics](#) [Disks](#) [Networking](#) [Management](#) [Monitoring](#) [Advanced](#) [Tags](#) [Review + create](#)

Create a virtual machine that runs Linux or Windows. Select an image from Azure marketplace or use your own customized image. Complete the Basics tab then Review + create to provision a virtual machine with default parameters or review each tab for full customization. [Learn more](#)

Project details

Select the subscription to manage deployed resources and costs. Use resource groups like folders to organize and manage all your resources.

Subscription * ⓘ

Resource group * ⓘ [Create new](#)

Instance details

Virtual machine name * ⓘ ✓

Region * ⓘ ▼

Availability options ⓘ ▼

Availability zone * ⓘ ▼

[Review + create](#)

< Previous

Next : Disks >

In the **Networking** tab, create a new Virtual network with 3 subnets, one each for: management, client, and server NICs. Otherwise, you can also use an existing Virtual network. Management NIC is created during the VM deployment. Client and server NICs are created and attached after the VM is created. For the NIC network security group, you can do one of the following:

- Select **Advanced** and use an existing network security group that suits your requirements.
- Select **Basic** and select the required ports.

Note:

You can also change the network security group settings after the VM deployment is completed.

Create a virtual machine ...

Basics Disks **Networking** Management Monitoring Advanced Tags Review + create

Define network connectivity for your virtual machine by configuring network interface card (NIC) settings. You can control ports, inbound and outbound connectivity with security group rules, or place behind an existing load balancing solution. [Learn more](#)

Network interface

When creating a virtual machine, a network interface will be created for you.

Virtual network * ⓘ	<input type="text" value="(new) vm1-demo-vnet"/> ▼ Create new
Subnet * ⓘ	<input type="text" value="(new) default (10.2.0.0/24)"/> ▼
Public IP ⓘ	<input type="text" value="(new) vm1-demo-ip"/> ▼ Create new
NIC network security group ⓘ	<input type="radio"/> None <input checked="" type="radio"/> Basic <input type="radio"/> Advanced
Public inbound ports * ⓘ	<input type="radio"/> None <input checked="" type="radio"/> Allow selected ports
Select inbound ports *	<input type="text" value="SSH (22)"/> ▼

⚠ This will allow all IP addresses to access your virtual machine. This is only recommended for testing. Use the Advanced controls in the Networking tab to create rules to limit inbound traffic to known IP addresses.

Delete public IP and NIC when VM is deleted ⓘ

Enable accelerated networking ⓘ

Load balancing

You can place this virtual machine in the backend pool of an existing Azure load balancing solution. [Learn more](#)

Load balancing options ⓘ

- None
- Azure load balancer
Supports all TCP/UDP network traffic, port-forwarding, and outbound flows.
- Application gateway
Web traffic load balancer for HTTP/HTTPS with URL-based routing, SSL termination, session persistence, and web application firewall.

[Review + create](#) [< Previous](#) [Next : Management >](#)

4. Click Next: **Review + create >**.

After the validation is successful, review the basic settings, VM configurations, network and additional settings, and click **Create**.

Create a virtual machine ...

✓ Validation passed

Basics Disks Networking Management Monitoring Advanced Tags Review + create

ⓘ Cost given below is an estimate and not the final price. Please use [Pricing calculator](#) for all your pricing needs.

Price

NetScaler ADC 14.1
by Cloud Software Group
[Terms of use](#) | [Privacy policy](#)

Not covered by credits ⓘ

2.3000 USD/hr

1 X Standard DS2 v2
by Microsoft
[Terms of use](#) | [Privacy policy](#)

Subscription credits apply ⓘ

0.0880 USD/hr

[Pricing for other VM sizes](#)

TERMS

By clicking "Create", I (a) agree to the legal terms and privacy statement(s) associated with the Marketplace offering(s) listed above; (b) authorize Microsoft to bill my current payment method for the fees associated with the offering(s), with the same billing frequency as my Azure subscription; and (c) agree that Microsoft may share my contact, usage and transactional information with the provider(s) of the offering(s) for support, billing and other transactional activities. Microsoft does not provide rights for third-party offerings. See the [Azure Marketplace Terms](#) for additional details.

Name	<input type="text"/>
Preferred e-mail address	<input type="text"/>
Preferred phone number	<input type="text" value="-"/>

⚠ **You have set SSH port(s) open to the internet.** This is only recommended for testing. If you want to change this setting, go back to Basics tab.


Create

< Previous

Next >

[Download a template for automation](#)

5. After the deployment is completed, Click **Go to Resource** to see the configuration details.

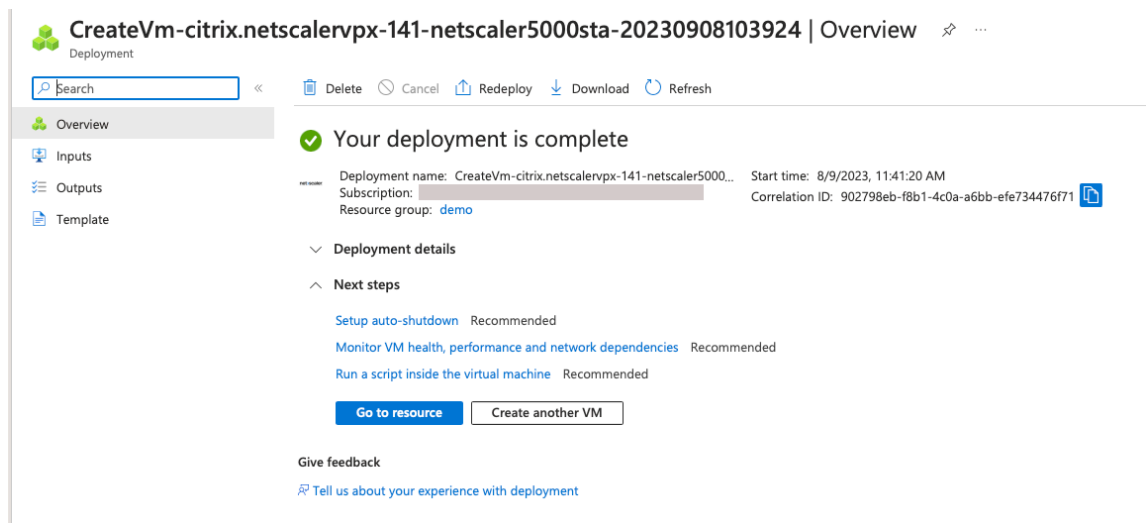

Similarly, deploy a second NetScaler VPX instance.

Step 2. Add client and server NICs on both instances.

Note:

To attach more NICs, you must first stop the VM. In the Azure portal, select the VM that you want to stop. In the **Overview** tab, click **Stop**. Wait for Status to show as **Stopped**.

To add a client NIC on the primary instance, follow these steps:

1. Navigate to **Networking > Attach Network Interface**.
You can select an existing NIC or create and attach a new interface.
2. For the NIC Network Security Group, you can use an existing network security group by selecting **Advanced** or create one by selecting **Basic**.

[Home](#) > [vm1-demo | Networking](#) >

Create network interface ...

Project details

Subscription ⓘ

NSDev Platform CA anoop.agarwal@citrix.com

Resource group * ⓘ

demo

[Create new](#)

Location ⓘ

(US) East US

Network interface

Name *

vm1-demo-nic

Virtual network ⓘ

vm1-demo-vnet

Subnet * ⓘ

client (10.2.1.0/24)

NIC network security group ⓘ

None

Basic

Advanced

Public inbound ports * ⓘ

None

Allow selected ports

Select inbound ports

Select one or more ports

i All traffic from the internet will be blocked by default. You will be able to change inbound port rules in the VM > Networking page.

Private IP address assignment

Dynamic Static

Private IP address (IPv6)

Accelerated networking ⓘ

Disabled Enabled

Create

To add a server NIC, follow the same steps as for adding a client NIC.

The NetScaler VPX instance has all three NICs (management NIC, client NIC, and server NIC) attached.

Repeat the preceding steps for adding NICs on the secondary instance.

After you create and attach NICs on both the instances, restart both the instances by going to **Overview > Start**.

Note:

You must allow traffic through the port in client NIC inbound rule, which is used later to create a load balancing virtual server while configuring the NetScaler VPX instance.

Step 3. Deploy an ALB with load balancing rule whose floating IP mode is disabled.

To start the configuration of ALB, follow these steps:

1. Go to the **Load balancers** page and click **Create**.
2. In the **Create load balancer** page, provide the details as required.

In the following example, we deploy a regional public load balancer of Standard SKU.

Create load balancer

Project details

Subscription *

Resource group * [Create new](#)

Instance details

Name * ✓

Region *

SKU * ⓘ Standard
 Gateway
 Basic

Type * ⓘ Public
 Internal

Tier * Regional
 Global

Review + create
< Previous
Next : Frontend IP configuration >
[Download a template for automation](#)

Note:

All public IPs attached to the NetScaler VMs must have the same SKU as that of ALB. For more information about ALB SKUs, see the [Azure Load Balancer SKUs' documentation](#).

3. In the **Frontend IP configuration** tab, either create an IP address or use an existing IP address.

Create load balancer ...

Basics **Frontend IP configuration** Backend pools Inbound rules Outbound rules Tags Review + create

A frontend IP configuration is an IP address used for inbound and/or outbound communication as defined within load balancing, inbound NAT, and outbound rules.

+ Add a frontend IP configuration

Name ↑↓	IP address ↑↓
Add a frontend IP to get started	

Add frontend IP configuration ✕

Name *

alb-frontend ✓

IP version

IPv4 IPv6

IP type

IP address IP prefix

Public IP address *

(New) alb-public-ip ∨

[Create new](#)

Gateway Load balancer ⓘ

None ∨

Add

- In the **Backend pools** tab, select NIC-based backend pool configuration, and add the client NICs of both the NetScaler VMs.

Create load balancer ...

Basics Frontend IP configuration **Backend pools** Inbound rules Outbound rules Tags Review + create

A backend pool is a collection of resources to which your load balancer can send traffic. A backend pool can contain virtual machines, virtual machine s

+ Add a backend pool

Name	Virtual network	Resource Name	Network interface	IP address
▼ alb-backend-pool				
alb-backend-pool	vm1-demo-vnet	vm1-demo	vm1-demo324_z1	10.2.0.4
alb-backend-pool	vm1-demo-vnet	vm1-demo	client-nic	10.2.1.4

- In **Inbound rules** tab, click **Add a Load balancing rule**, and provide the frontend IP address and backend pool created in the previous steps. Select the protocol and port based on your requirement. Create or use an existing health probe. Clear the **Enable Floating IP** checkbox.

Add load balancing rule



alb1

A load balancing rule distributes incoming traffic that is sent to a selected IP address and port combination across a group of backend pool instances. Only backend instances that the health probe considers healthy receive new traffic.

Name *	<input type="text" value="lb-rule1"/>
IP Version *	<input checked="" type="radio"/> IPv4 <input type="radio"/> IPv6
Frontend IP address * ⓘ	<input type="text" value="alb-frontend (To be created)"/>
Backend pool * ⓘ	<input type="text" value="alb-backend-pool"/>
Protocol	<input checked="" type="radio"/> TCP <input type="radio"/> UDP
Port *	<input type="text" value="80"/>
Backend port * ⓘ	<input type="text" value="10"/>
Health probe * ⓘ	<input type="text" value="(new) health-probe1 (TCP:80)"/> Create new
Session persistence ⓘ	<input type="text" value="None"/>
Idle timeout (minutes) * ⓘ	<input type="text" value="4"/>
Enable TCP Reset	<input type="checkbox"/>
Enable Floating IP ⓘ	<input type="checkbox"/>
Outbound source network address translation (SNAT) ⓘ	<input checked="" type="radio"/> (Recommended) Use outbound rules to provide backend pool members access to the internet. Learn more. <input type="radio"/> Use default outbound access. This is not recommended because it can cause SNAT port exhaustion. Learn more.

Save

Cancel

Give feedback

6. Click **Review + Create**. After the validation is passed, click **Create**.

Create load balancer ...

✔ Validation passed

Basics
Frontend IP configuration
Backend pools
Inbound rules
Outbound rules
Tags
Review + create

Basics

Subscription	
Resource group	demo
Name	alb1
Region	Southeast Asia
SKU	Standard
Tier	Regional
Type	Public

Frontend IP configuration

Frontend IP configuration name	alb-frontend
Frontend IP configuration IP address	To be created

Backend pools

Backend pool name	alb-backend-pool
-------------------	------------------

Inbound rules

Load balancing rule name	lb-rule1
Health probe name	health-probe1

Outbound rules

None

Tags

None

Create

< Previous

Next >

[Download a template for automation](#) [Give feedback](#)

Step 4. Configure HA settings on both NetScaler VPX instances by using the NetScaler GUI.

After you have created the NetScaler VPX instances on Azure, you can configure HA by using the NetScaler GUI.

Step 1. Set up high availability in INC mode on both the instances.

On the primary instance, do the following steps:

1. Log on to the instance with user name `nsroot` and password provided while deploying the instance.
2. Navigate to **Configuration > System > High Availability > Nodes**, and click **Add**.
3. In the **Remote Node IP address** field, enter the private IP address of the management NIC of the secondary instance, for example: 10.4.1.5.
4. Select the **Turn on INC (Independent Network Configuration) mode on self node** checkbox.
5. Click **Create**.

← Create HA Node

Remote Node IP Address*

10 . 4 . 1 . 5 ⓘ

Configure remote system to participate High Availability setup

Turn Off HA Monitor interface/channels that are down

Turn on INC (Independent Network Configuration) mode on self node ⓘ

Remote System Login Credential

User Name

Password

Secure Access

On the secondary instance, do the following steps:

1. Log on to the instance with user name `nsroot` and password provided while deploying the instance.
2. Navigate to **Configuration > System > High Availability > Nodes**, and click **Add**.
3. In the **Remote Node IP address** field, enter the private IP address of the management NIC of the primary instance, for example: 10.4.1.4.
4. Select the **Turn on INC (Independent Network Configuration) mode on self node** checkbox.
5. Click **Create**.

← Create HA Node

Remote Node IP Address*

ⓘ

Configure remote system to participate High Availability setup

Turn Off HA Monitor interface/channels that are down

Turn on INC(Independent Network Configuration) mode on self node

RPC Node Password

ⓘ

Remote System Login Credential

User Name

Password

Secure Access

Create **Close**

Before you proceed further, ensure that the **Synchronization state** of the secondary instance is shown as **SUCCESS** in the **Nodes** page.

Note:

Now the secondary instance has the same log-on credentials as the primary instance.

System > High Availability > Nodes

Nodes 2

Add Edit Delete Statistics Select Action

	ID	IP ADDRESS	HOST NAME	MASTER STATE	NODE STATE	INC	SYNCHRONIZATION STATE	SYNCHRONIZATION FAILURE REASON
<input type="checkbox"/>	0	10.4.1.4	citrix-adc-1	Primary	UP	FNARI FD	FNARI FD	-NA-
<input type="checkbox"/>	1	10.4.1.5		Secondary	UP	ENABLED	SUCCESS	-NA-

Total 2

25 Per Page Page 1 of 1

Step 2. Add virtual IP address and subnet IP address on both the instances.

On the primary instance, perform the following steps:

1. Navigate to **System > Network > IPs > IPv4s**, and click **Add**.
2. Add a primary VIP address by following these steps:
 - a) Enter the private IP address of the client NIC of the primary instance and the netmask configured for the client subnet in the VM instance.
 - b) In the **IP Type** field, select **Virtual IP** from the drop-down menu.
 - c) Click **Create**.
3. Add a primary SNIP address by following these steps:
 - a) Enter the internal IP address of the server NIC of the primary instance, and the netmask configured for the server subnet in the primary instance.
 - b) In the **IP Type** field, select **Subnet IP** from the drop-down menu.
 - c) Click **Create**.
4. Add a secondary VIP address by following these steps:
 - a) Enter the internal IP address of the client NIC of the secondary instance, and the netmask configured for the client subnet in the VM instance.
 - b) In the **IP Type** field, select **Virtual IP** from the drop-down menu.
 - c) Click **Create**.

System > Network > IPs > IPv4s

IPs

IPv4s 4 IPv6s 1 Port Allocation

Add Edit Delete Statistics Select Action

Click here to search or you can enter Key: Value format


	IP ADDRESS	STATE	TYPE	MODE	ARP	ICMP	VIRTUAL SERVER	TRAFFIC DOMAIN
<input checked="" type="checkbox"/>	10.4.3.4	FNARI FD	Subnet IP	Active	FNARI FD	FNARI FD	-N/A-	0
<input type="checkbox"/>	10.4.2.5	ENABLED	Virtual IP	Active	ENABLED	ENABLED	ENABLED	0
<input type="checkbox"/>	10.4.2.4	ENABLED	Virtual IP	Active	ENABLED	ENABLED	ENABLED	0
<input type="checkbox"/>	10.4.1.4	FNARI FD	NetScaler IP	Active	FNARI FD	FNARI FD	-N/A-	0

Total 4

25 Per Page Page 1 of 1

On the secondary instance, perform the following steps:


1. Navigate to **System > Network > IPs > IPv4s**, and click **Add**.
2. Add a secondary VIP address by following these steps:
 - a) Enter the internal IP address of the client NIC of the secondary instance, and the netmask configured for the client subnet in the VM instance.
 - b) In the **IP Type** field, select **Virtual IP** from the drop-down menu.
3. Add a secondary SNIP address by following these steps:
 - a) Enter the internal IP address of the server NIC of the secondary instance, and the netmask configured for the server subnet in the secondary instance.
 - b) In the **IP Type** field, select **Subnet IP** from the drop-down menu.
 - c) Click **Create**.

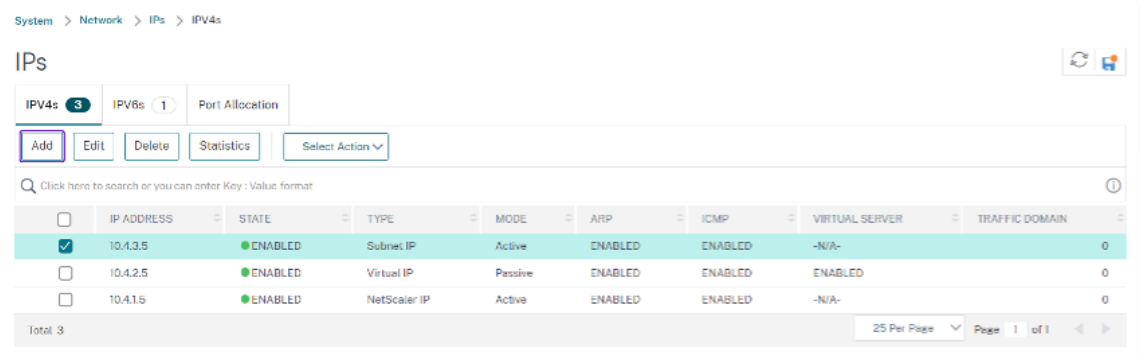

Step 3. Add IP set and bind IP set to the secondary VIP on both the instances.


On the primary instance, do the following steps:

1. Navigate to **System > Network > IP Sets > Add**.
2. Add an IP set name and click **Insert**.
3. From the **IPv4s** page, select the virtual IP (secondary VIP) and click **Insert**.
4. Click **Create** to create the IP set.

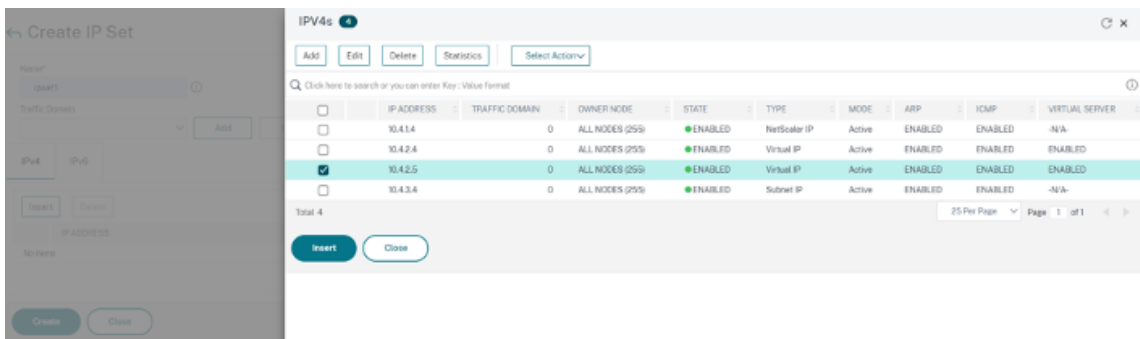

On the secondary instance, do the following steps:

1. Navigate to **System > Network > IP Sets > Add**.
2. Add an IP set name and click **Insert**.
3. From the **IPv4s** page, select the virtual IP (secondary VIP) and click **Insert**.
4. Click **Create** to create the IP set.

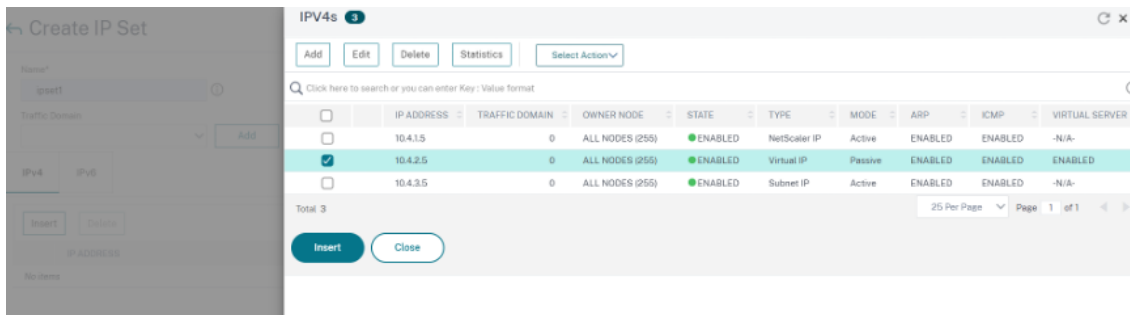

Note:

The IP set name must be the same on both the primary and secondary instances.

Step 4. Add a load balancing virtual server on the primary instance.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers > Add**.
2. Add the required values for Name, Protocol, IP Address Type (IP Address), IP address (primary VIP), and Port.
3. Click **More**. Navigate to **IP Range IP Set Settings**, select **IPset** from the drop-down menu, and provide the IPset created in **Step 3**.
4. Click **OK** to create the load balancing virtual server.

← Load Balancing Virtual Server

Basic Settings

Create a virtual server by specifying a name, an IP address, a port, and a protocol type. If an application is accessible from the internet, the virtual server IP (VIP) address is a public IP address. If the application is accessible only from the local area network (LAN) or wide area network (WAN), the VIP is usually a private (RFC1918 non-routable) IP address. You can configure multiple virtual servers to receive client requests, thereby increasing the availability of resources to process client requests.

Name*
v1 ⓘ

Protocol*
HTTP

IP Address type*
IP Address

IP Address*
10 . 4 . 2 . 4 ⓘ

Port*
80 ⓘ

Traffic Domain
Add Edit

IP Range IP Set settings
IPSet
IPSet
Add Edit ⓘ

Redirection Mode*
IP Based

Listen Priority

Virtual Server State
 Full State
 AppFlow Logging
 Retain Connections on Cluster

Step 5. Add a service or service group on the primary instance.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Services > Add**.
2. Add the required values for Service Name, IP Address, Protocol and Port, and click **OK**.

Step 6. Bind the service or service group to the load balancing virtual server on the primary instance.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers**.
2. Select the load balancing virtual server configured in **Step 4**, and click **Edit**.
3. In the **Service and Service Groups** tab, click **No Load Balancing Virtual Server Service Binding**.
4. Select the service configured in the **Step 5**, and click **Bind**.

Service Binding > Service

Service 3

Select Add Edit

Click here to search or you can enter Key: Value format ⓘ

<input type="checkbox"/>	NAME	STATE	IP ADDRESS/DOMAIN NAME	TRAFFIC DOMAIN	PORT	PROTOCOL	MAX CLIENTS	MAX REQ
<input type="checkbox"/>	azurelbcdservice0	● LP	168.63.125.16	0	53	DNS	0	
<input checked="" type="checkbox"/>	v1	● LP	10.4.3.6	0	80	HTTP	0	
<input checked="" type="checkbox"/>	v2	● LP	10.4.3.7	0	80	HTTP	0	

Total 3

25 Per Page Page 1 of 1

Load Balancing Virtual Server

Load Balancing Virtual Server Export as a Template

Basic Settings

Name v1
 Protocol HTTP
 State DOWN
 IP Address 10.3.2.4
 Port 80
 Traffic Domain 0
 Traffic Order ASCENDING
 Order Threshold 0

Services and Service Groups

No Load Balancing Virtual Server Service Binding
 No Load Balancing Virtual Server ServiceGroup Binding

Close

Step 7. Save the configuration.


Otherwise, all the configuration is lost after a reboot or if there is an instant restart.

Step 8. Verify the configuration.

Make sure that the ALB frontend IP address is reachable after a failover.

1. Copy the ALB frontend IP address.
2. Paste the IP address on the browser and make sure that the back-end servers are reachable.
3. On the primary instance, perform failover:

From NetScaler GUI, navigate to **Configuration > System > High Availability > Action > Force Failover.**

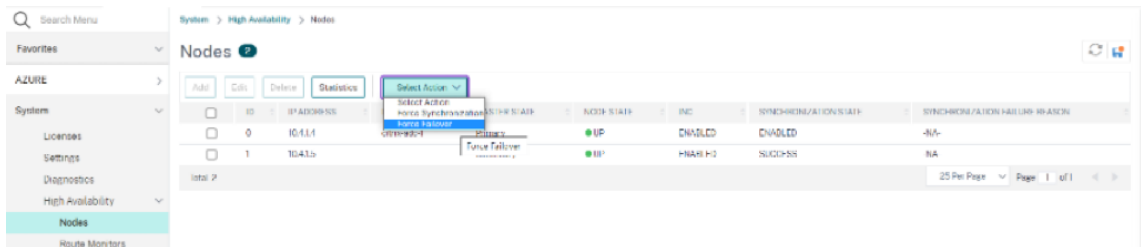

4. Make sure that back-end servers are reachable after failover through ALB frontend IP used earlier.

Deploy a NetScaler for Azure DNS private zone

August 17, 2023

Azure DNS is a service on the Microsoft Azure infrastructure for hosting DNS domains and providing name resolution.

Azure DNS private zones are a service focused on resolving domain names in a private network. With private zones, customers can use their own custom domain names rather than the Azure-provided names available today.

NetScaler, the leading application delivery solution, is best suited to provide load balancing and GSLB capabilities for an Azure DNS private zone. By subscribing to Azure DNS private zone, the business can rely on NetScaler Global Server Load Balancing’s (GSLB) power and intelligence to distribute intranet traffic across workloads in multiple geographies and across data centers, connected via secure VPN tunnels. This collaboration guarantees businesses seamless access to part of their workload that they want to move to Azure public cloud.

Overview of Azure DNS

The Domain Name System (DNS) is responsible for translating or resolving a service name to its IP address. A hosting service for DNS domains, Azure DNS provides name resolution by using the Microsoft Azure infrastructure. In addition to supporting internet-facing DNS domains, Azure DNS now also supports private DNS domains.

Azure DNS provides a reliable, secure DNS service to manage and resolve domain names in a virtual network without needing a custom DNS solution. By using private DNS zones, you can use your own custom domain names rather than the Azure-provided names. Using custom domain names helps you to tailor your virtual network architecture to best suit your organization's needs. It provides name resolution for virtual machines (VMs) within a virtual network and between virtual networks. Also, customers can configure zone names with a split-horizon view, which allows a private and a public DNS zone to share a name.

Why NetScaler GSLB for Azure DNS private zone?

In today's world, businesses want to transition their workloads from On-premises to Azure cloud. The transition to cloud allows them to apply time to market, capital expenses/price, ease of deployment and security. Azure DNS private zone service provides a unique proposition for the businesses that are transitioning part of their workloads to the Azure Cloud. These businesses can create their private DNS Name, which they had for years in On-premises deployments, when they use the private zone service. With this hybrid model of intranet application servers being in On-premises and Azure cloud connected via secure VPN tunnels, the one challenge is to have a seamless access to these intranet applications. NetScaler solves this unique use case with its global load balancing feature, which routes the application traffic to the most optimal distributed workloads/servers either On-premises or on Azure cloud, and provides application server health status.

Use case

Users in an On-prem network and in different Azure VNets are able to connect to the most optimal servers in an internal network for accessing the required content. This ensures that the application is always available, cost is optimized and user experience is good. Azure private traffic management (PTM) is the primary requirement here. Azure PTM ensures that users' DNS queries resolve to an appropriate private IP address of the application server.

Use case solution

NetScaler includes the global server load balancing (GSLB) feature to meet the Azure PTM requirement. GSLB acts like a DNS server, which gets the DNS requests and resolves the DNS request into an

appropriate IP address to provide:


- Seamless DNS-based failover.
- Phased migration from On-premises to cloud.
- A/B testing a new feature.

Among the many load balancing methods supported, following methods can be useful in this solution:

1. Round Robin
2. Static proximity (Location based server selection). It can be deployed in two ways:
 - a) EDNS Client Subnet (ECS) based GSLB on NetScaler.
 - b) Deploy a DNS forwarder for every virtual network.

Topology

The following figure depicts the NetScaler GSLB deployment for an Azure private DNS zone.

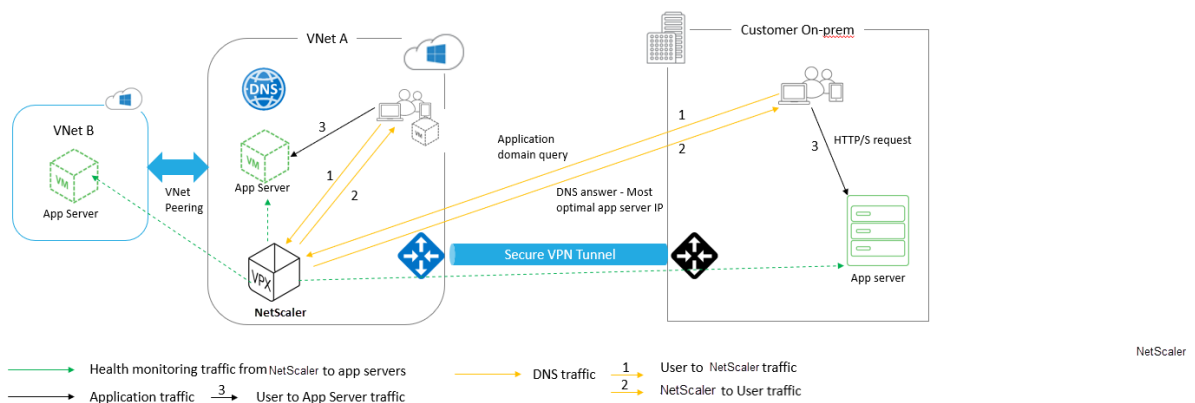

A user can access any application server either on Azure or On-prem based on the NetScaler GSLB method in an Azure private DNS zone. All traffic between On-prem and Azure virtual network is through a secure VPN tunnel only. Application traffic, DNS traffic, and monitoring traffic are shown in the preceding topology. Depending on the required redundancy, NetScaler and DNS forwarder can be deployed in the virtual networks and data centers. For simplicity purpose, only one NetScaler is shown here but we recommend at least one set of NetScaler and DNS forwarder for the Azure region. All user DNS queries first go to the DNS forwarder that has rules defined for forwarding the queries to an appropriate DNS server.

Configuring NetScaler for Azure DNS private zone

Products and Versions tested:

Product	Version
Azure	Cloud Subscription
NetScaler VPX	BYOL (Bring your own license)

Note:

The deployment is tested and remains the same with NetScaler version 12.0 and above.

Prerequisites

The following are general prerequisites.

- Microsoft Azure portal account with a valid subscription.
- Ensure connectivity (Secure VPN Tunnel) between On-prem and Azure cloud. To set up a secure VPN tunnel in Azure, see [Step-By-Step: Configuring a site-to-site VPN Gateway between Azure and on-premises](#).

Solution description

If you want to host one application Azure DNS private zone (rr.ptm.mysite.net) which runs on HTTPs and is deployed across Azure and On-premises with intranet access based on the round robin GSLB load balancing method. To achieve this deployment enable GSLB for the Azure private DNS zone with NetScaler that consists of the following configurations:

1. Configure Azure and On-premises Setup.
2. NetScaler appliance on Azure virtual network.

Configure Azure and On-premises Setup


As shown in the topology, set up Azure virtual network (VNet A, VNet B in this case) and On-premises setup.

1. Create an Azure private DNS zone with domain name (mysite.net).
2. Create two virtual networks (VNet A, VNet B) in a Hub and Spoke model in an Azure region.
3. Deploy App Server, DNS forwarder, Windows 10 Pro client, NetScaler in VNet A.
4. Deploy an App Server and deploy a DNS forwarder if any clients are in VNet B.
5. Deploy an App server, DNS forwarder, and Windows 10 pro client on On-premises.

Azure private DNS zone

Create an Azure private DNS zone with domain name.


1. Log in to the Azure portal and select or create a dashboard.
2. Click **create a resource** and search for DNS zone to create (mysite.net in this case) Azure private DNS zone with domain name (mysite.net).

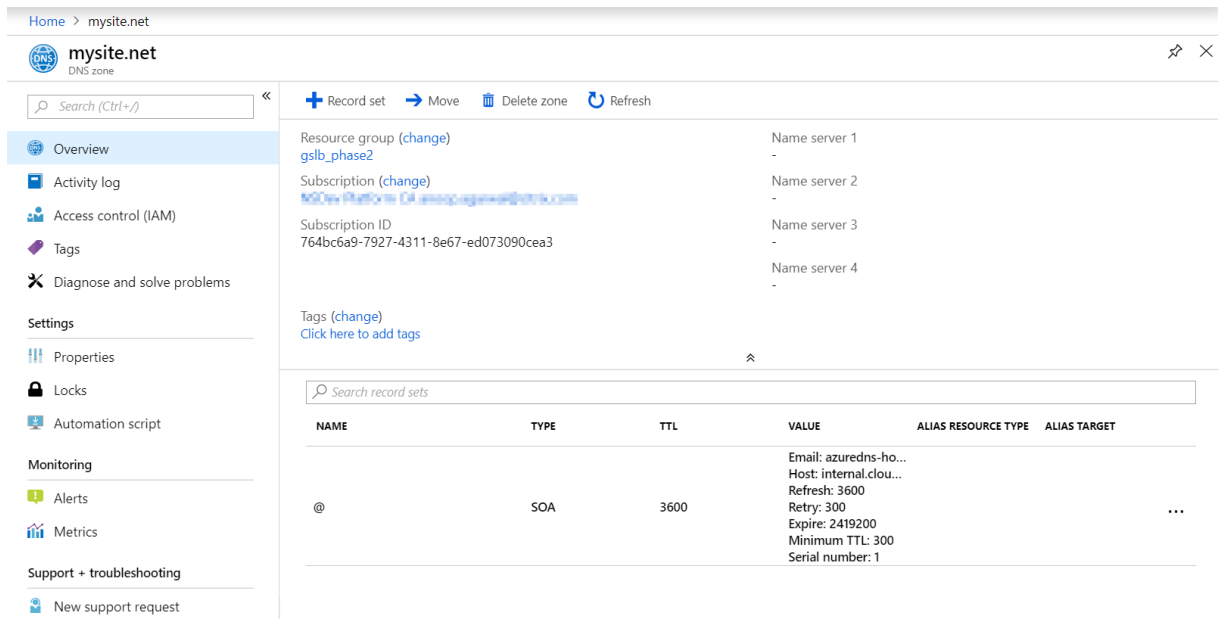

Azure virtual networks (VNet A, VNet B) in Hub and spoke model

Create two virtual networks (VNet A, VNet B) in a Hub and Spoke model in an Azure region.

1. Create two virtual networks.
2. Select the same dashboard and click **create a resource** and search for virtual networks to create two virtual networks namely VNet A, VNet B in the same region and peer them to form a Hub and Spoke model as shown in the following image.
For more information on how to set up a hub and spoke topology, See [Implement a hub-spoke network topology in Azure](#).

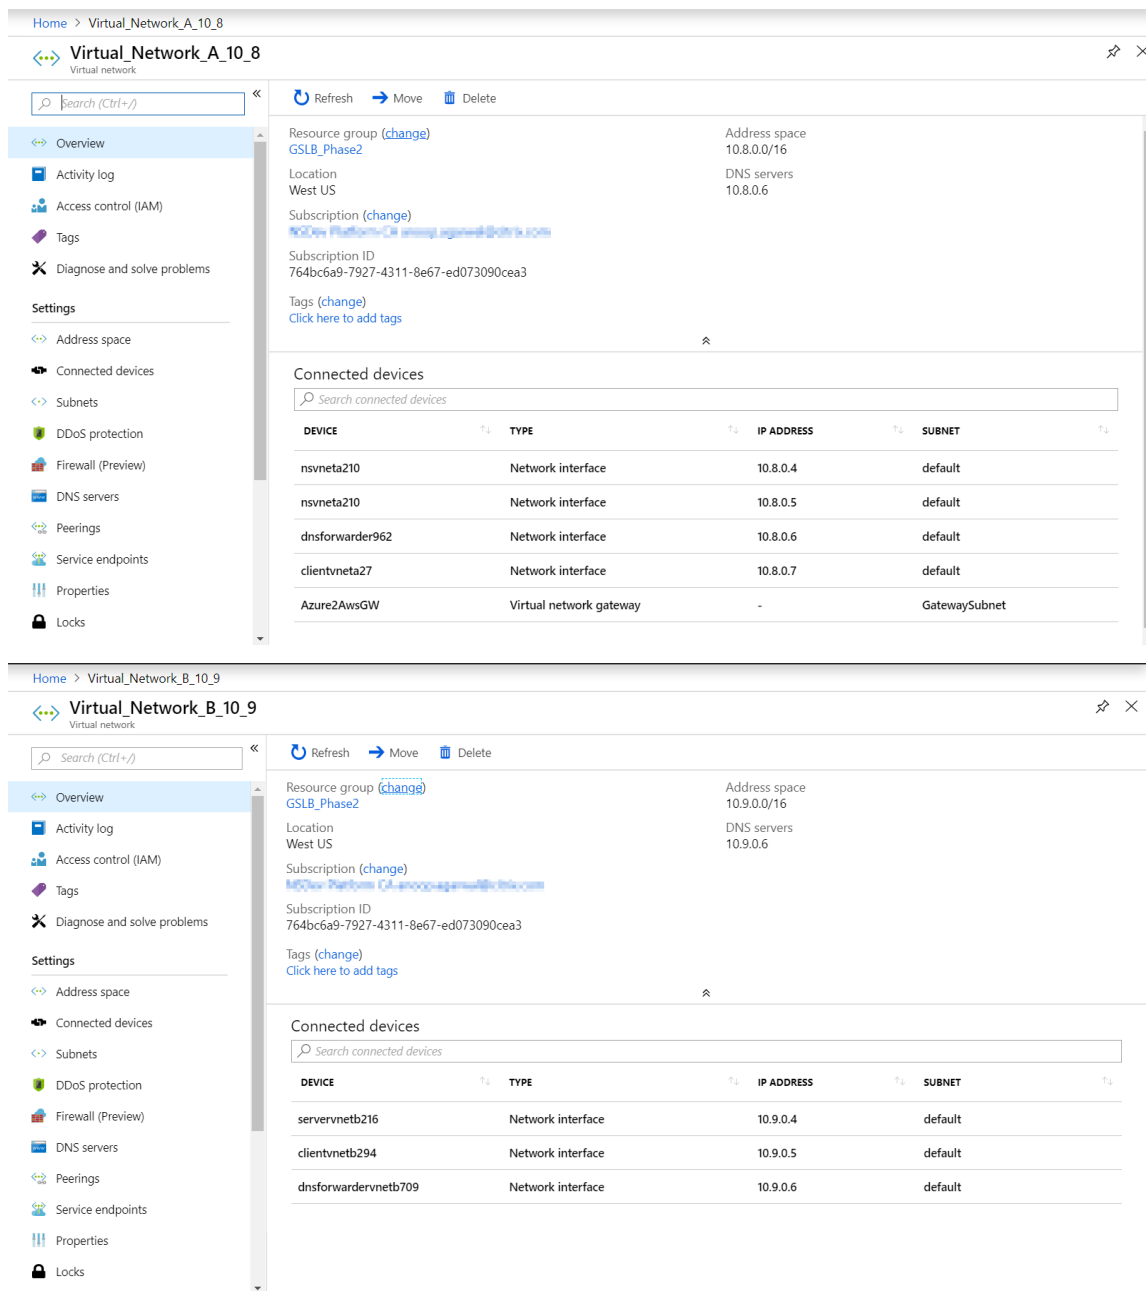

VNet A to VNet B peering

To peer VNet A and VNet B:

1. Click **Peerings** from the **Settings** menu of VNet A and peer VNet B.
2. Enable **Allow forwarded traffic** and **Allow gateway transit** as shown in the following image.

Home > Virtual_Network_A_10_8 - Peerings > Vnet_A_to_B

Vnet_A_to_B

Virtual_Network_A_10_8

Save Discard Delete

Name
Vnet_A_to_B

Peering status
Connected

Provisioning state
Succeeded

Peer details

Address space
10.9.0.0/16

Virtual network
Virtual_Network_B_10_9

Configuration

Allow virtual network access ⓘ
 Disabled Enabled

Allow forwarded traffic ⓘ

Allow gateway transit ⓘ

Use remote gateways ⓘ

The following image depicts the successful peering of VNet A to VNet B.

Home > Virtual_Network_A_10_8 - Peerings

Virtual_Network_A_10_8 - Peerings

Virtual network

Search (Ctrl+)

+ Add

Search peerings

NAME	PEERING STATUS	PEER	GATEWAY 1
Vnet_A_to_B	Connected	Virtual_Network_B_10_9	Enabled

- Overview
- Activity log
- Access control (IAM)
- Tags
- Diagnose and solve problems


VNet B to VNet A peering

To peer VNet B and VNet A:

1. Click **Peerings** from the **Settings** menu of VNet B and peer VNet A.
2. Enable **Allow forwarded traffic** and use remote gateways as shown in the following image.

```
1 ! [VNet B to A] (/en-us/citrix-adc/media/image-07.png)
```

The following image depicts the successful peering of VNet B to VNet A.

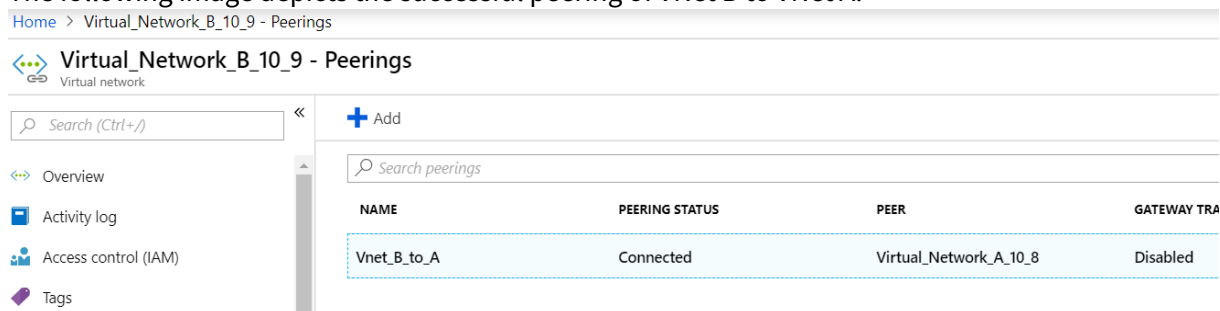

Deploy App server, DNS forwarder, Windows 10 Pro client, NetScaler in VNet A

We discuss briefly about App server, DNS forwarder, Windows 10 pro client, and NetScaler on VNet A.

1. Select the same dashboard, click **Create a resource**.
2. Search for the respective instances and assign an IP from VNet A subnet.

App server App server is nothing but the web server (HTTP server) where an Ubuntu server 16.04 is deployed as an instance on the Azure or On-premises VM. To make it as a web server, at the command prompt, type:

```
sudo apt install apache2
```

Windows 10 Pro Client Launch Windows 10 pro instance as client machine on VNet A and On-premises.

NetScaler NetScaler compliments the Azure DNA private zone by health check and Analytics from NetScaler MAS. Launch a NetScaler from Azure Marketplace based on your requirement, here we have used NetScaler (BYOL) for this deployment.

For the detailed steps on how to deploy NetScaler on Microsoft Azure. See [Deploy a NetScaler VPX Instance on Microsoft Azure](#).

After deployment, use NetScaler IP to configure NetScaler GSLB.

DNS forwarder It is used to forward the client requests of hosted domains bound to NetScaler GSLB (ADNS IP). Launch an Ubuntu server 16.04 as Linux instance (Ubuntu server 16.04) and refer below URL on how to set up it as a DNS forwarder.

Note:

For Round Robin GSLB load balancing method one DNS forwarder for Azure Region is sufficient but for Static proximity we need one DNS forwarder per virtual network.

1. After deploying forwarder, change the DNS server settings of virtual network A from default to custom with VNet A DNS forwarder IP as shown in the following image.
2. Modify the `named.conf.options` file in VNet A DNS forwarder to add forwarding rules for domain (`mysite.net`) and subdomain (`ptm.mysite.net`) to the ADNS IP of NetScaler GSLB.
3. Restart the DNS forwarder to reflect the changes made in the file `named.conf.options`.

VNet A DNS forwarder settings

```
1     zone "mysite.net" {
2
3         type forward;
4     forwarders {
5     168.63.129.16; }
6     ;
7     }
8     ;
9     zone "ptm.mysite.net" {
10
11         type forward;
12     forwarders {
13     10.8.0.5; }
14     ;
15     }
16     ;
```

Note:

For the domain (“mysite.net”) zone IP address, use the DNS IP address of your Azure region. For the subdomain (“ptm.mysite.net”) zone IP address, use all ADNS IP addresses of your GSLB instances.

Deploy App server and a DNS forwarder if any clients are in VNet B


1. For virtual network B, select the same dashboard, click **create a resource**.
2. Search for the respective instances, and assign an IP from VNet B subnet.

3. Launch App server and DNS forwarder if there is static proximity GSLB load balancing similar to VNet A.
4. Edit the VNet B DNS forwarder settings in `named.conf.options` as shown in the following setting:

VNet B DNS forwarder settings:

```
1     zone "ptm.mysite.net" {
2
3         type forward;
4         forwarders {
5     10.8.0.5; }
6     ;
7     }
8     ;
```

The following image depicts the VNet B DNS forwarder settings:

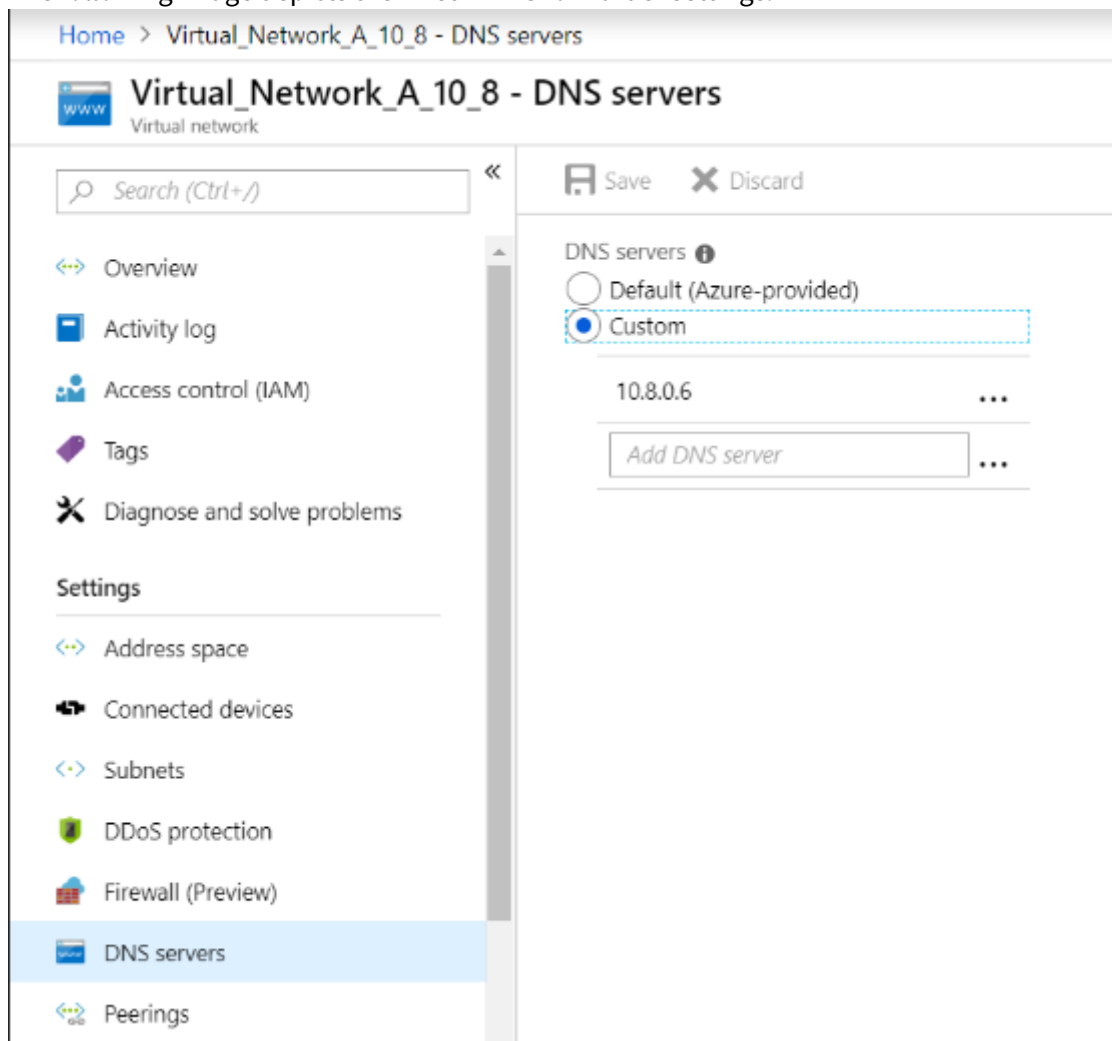

Deploy app server, DNS forwarder, and Windows 10 pro client on On-premises

1. For On-premises, launch the VMs on bare metal and bring the App server, DNS forwarder and Windows 10 pro client similar to VNet A.
2. Edit the On-premises DNS forwarder settings in the `named.conf.options` as shown in the following example.

On-Premises DNS forwarder settings

```
1     zone "mysite.net" {
2
3         type forward;
4         forwarders {
5     10.8.0.6; }
6     ;
7     }
8     ;
9     zone "ptm.mysite.net" {
10
11         type forward;
12         forwarders {
13     10.8.0.5; }
14     ;
15     }
16     ;
```

For `mysite.net`, we have given DNS forwarder IP of VNet A instead of Azure private DNS zone server IP because it is a special IP address that is not reachable from On-premises. Hence this change is required in the DNS forwarder setting of On-premises.

Configure the NetScaler on Azure virtual network

As shown in the topology, deploy the NetScaler on the Azure virtual network (VNet A in this case) and access it through the NetScaler GUI.

Configuring NetScaler GSLB

1. Create ADNS Service.
2. Create local and remote sites.
3. Create services for the local virtual servers.
4. Create virtual servers for the GSLB services.

Add ADNS service

1. Log in to the NetScaler GUI.

2. In the **Configuration** tab, navigate to **Traffic Management > Load Balancing > Services**.
3. Add a service.

We recommended you to configure the ADNS service both in TCP and UDP as shown in the following image:

← Load Balancing Service

Basic Settings

Service Name*

 ?

New Server Existing Server

Server*

 ▼

Protocol*

 ▼

Port*

▶ More

← Load Balancing Service

Basic Settings

Service Name*

 ?

New Server Existing Server

IP Address*

 ?

Protocol*

 ▾ ?

Port*

▶ More

Search in Menu

- System >
- AppExpert >
- Traffic Management** >
- Load Balancing >
- Virtual Servers >
- Services
- Service Groups
- Monitors
- Metric Tables

Traffic Management / Load Balancing / Services / Services

Services ↻ 📄

Services (2) Auto Detected Services (0) Internal Services (7)

Add Edit Delete Statistics No action ▾
Search ▾

☐	Name	State	IP Address/Domain Name	Port	Protocol	Max Clients	Max Requests	Cache Type	Traffic Dom
☐	azurelbndnservice0	● DOWN	168.63.129.16	53	DNS	0	0	SERVER	
☐	s_adns	● UP	10.8.0.5	53	ADNS	0	0	SERVER	

Add GSLB sites

1. Add local and remote sites between which GSLB will be configured.
2. On the **Configuration** tab, navigate to **Traffic Management > GSLB > GSLB Sites**.
Add a site as shown in the following example and repeat the same procedure for other sites.

← Create GSLB Site

Name*
 ?

Type

Site IP Address*

Public IP Address

Parent Site Backup Parent Sites

Parent Site Name

Trigger Monitors*

Cluster IP


Public Cluster IP

NAPTR Replacement Suffix
 ?

Metric Exchange

Network Metric Exchange

Persistence Session Entry Exchange

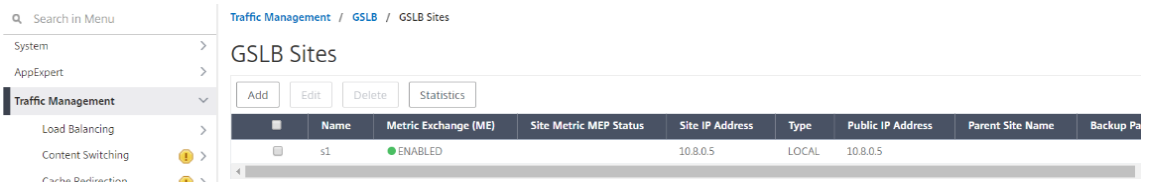

Add GSLB services

1. Add GSLB services for the local and remote virtual servers which load balances App servers.
2. On the **Configuration** tab, navigate to **Traffic Management > GSLB > GSLB Services**.
3. Add the services as shown in the following examples.
4. Bind HTTP monitor to check server status.

← GSLB Service

Basic Settings

Service Name*

Site Name*
 +

Site Type

Type*

Service Type*

Port*

Existing Servers
 New Server
 Virtual Servers

Server Name*

10.8.0.6

Server IP*

10 . 8 . 0 . 6

Public IP

10 . 8 . 0 . 6

Public Port

80

Enable after Creating

Enable Health Monitoring

AppFlow Logging


Comments

- After creating the service, go to the **Advanced settings** tab inside the GSLB service.
- Click **Add Monitor** to bind the GSLB service with an HTTP monitor to bring up the state of service.

GSLB Service Load Balancing Monitor Binding ×

Monitor Name	Weight	State	Current State	Last Response
http	1	true	● UP	Success - HTTP response code 200 received.

- Once you bind with the HTTP monitor, the state of the services is marked as UP as shown in the following image:

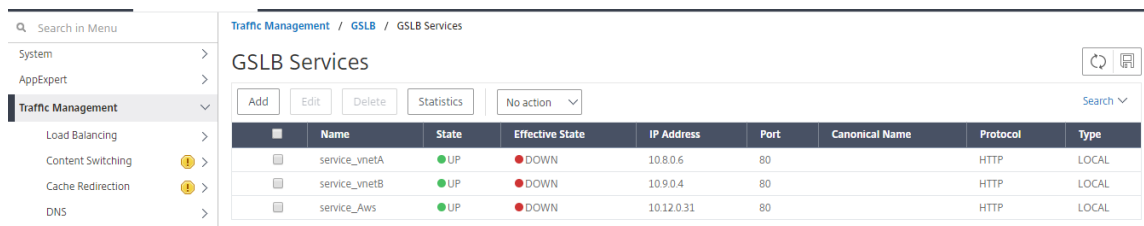

Add GSLB virtual server

Add GSLB virtual server through which App servers' alias GSLB services are accessible.

1. On the **Configuration** tab, navigate to **Traffic Management > GSLB > GSLB Virtual Servers**.
2. Add the virtual servers as shown in the following example.
3. Bind GSLB services and domain name to it.

← GSLB Virtual Server

Basic Settings

Name* ?

DNS Record Type* A ▼

Service Type* HTTP ▼

Enable after Creating

AppFlow Logging

When this Virtual Server is DOWN

Do not send any service's IP address in response (EDR)

When this Virtual Server is UP

Send all "active" service IPs' in response (MIR)

EDNS Client Subnet

Respond with ECS option in the response for a DNS query with ECS

Validate ECS address is a private or unroutable address

Comments

- After creating the GSLB virtual server and selecting the appropriate load balancing method (Round Robin in this case), bind GSLB services and domains to complete the step.

GSLB Virtual Server Domain Binding

GSLB Virtual Server Domain Binding ×

Add Binding
Edit Binding
Unbind
Show Bindings

■	FQDN	TTL (secs)	Backup IP	Cookie Domain	Cookie Time-out (mins)	Site Domain TTL (secs)
☐	rr.ptm.mysite.net	5			0	3600

Close

5. Go to the **Advanced settings** tab inside the virtual server and click **Add Domains** tab to bind a domain.
6. Go to **Advanced > Services** and click the arrow to bind a GSLB service and bind all three services (VNet A, VNet B, On-premises) to virtual server.

GSLB Services and GSLB Servicegroup Binding									
	Service Name	IP Address	Port	Protocol	Canonical Name	State	Effective State	Weight	Dynamic Weight
<input type="checkbox"/>	service_vnetA	10.8.0.6	80	HTTP		UP	DOWN	1	0
<input type="checkbox"/>	service_vnetB	10.9.0.4	80	HTTP		UP	DOWN	1	0
<input type="checkbox"/>	service_Aws	10.12.0.31	80	HTTP		UP	DOWN	1	0

After binding GSLB services and domain to the virtual server it appears as shown in the following image:

← GSLB Virtual Server

Basic Settings

Name: vserver_rr DNS Record Type: A Service Type: HTTP State: UP	AppFlow Logging: ENABLED EDR: DISABLED MIR: DISABLED ECS: DISABLED ECS Address Validation: DISABLED
---	---

GSLB Services and GSLB Servicegroup Binding

- 3 GSLB Virtual Server to GSLBService Bindings >
- No GSLB Virtual Server ServiceGroup Binding >

GSLB Virtual Server Domain Binding

- 1 GSLB Virtual Server Domain Binding >

ADNS Service

- 1 Service >

Method

Choose Method: ROUNDROBIN Tolerance (ms): 0 IPv4 Netmask: 255.255.255.255	Backup Method: NONE IPv6 Mask Length: 128 Dynamic Weight: DISABLED
---	--

Done

Check if GSLB virtual server is up and 100% healthy. When the monitor shows that the server is up and healthy, it means that sites are in sync and back end services are available.

Search in Menu

- System >
- AppExpert >
- Traffic Management** >
- Load Balancing >
- Content Switching ⚠ >
- Cache Redirection ⚠ >

Traffic Management / GSLB / GSLB Virtual Servers

GSLB Virtual Servers

Add Edit Delete Statistics No action

	Name	State	Protocol	% Health
<input type="checkbox"/>	vserver_rr	UP	HTTP	100.00% 3 UP/0 DOWN
<input type="checkbox"/>	vserver_sp	UP	HTTP	100.00% 3 UP/0 DOWN

To test the deployment, access the domain URL `rr.ptm.mysite.net` from either cloud client machine or On-premises client machine. If you access it from cloud windows client machine ensure that the on-premises App server is accessed in a private DNS zone without any need for third party or custom DNS solutions.

Configure a NetScaler VPX instance to use Azure accelerated networking

August 30, 2023

Accelerated networking enables the single root I/O virtualization (SR-IOV) virtual function (VF) NIC to a virtual machine, which improves the networking performance. You can use this feature with heavy workloads that need to send or receive data at higher throughput with reliable streaming and lower CPU utilization.

When a NIC is enabled with accelerated networking, Azure bundles the NIC's existing para virtualized (PV) interface with an SR-IOV VF interface. The support of SR-IOV VF interface enables and enhances the throughput of the NetScaler VPX instance.

Accelerated networking provides the following benefits:

- Lower latency
- Higher packets per second (pps) performance
- Enhanced throughput
- Reduced jitter
- Decreased CPU utilization

Note

Azure accelerated networking is supported on NetScaler VPX instances from release 13.0 build 76.29 onwards.

Prerequisites

- Ensure that your VM size matches the requirements for Azure accelerated networking.
- Stop VMs (individual or in an availability set) before enabling accelerated networking on any NIC.

Limitations

Accelerated networking can be enabled only on some instance types. For more information, see [Supported instance types](#).

NICs supported for accelerated networking

Azure provides Mellanox ConnectX3, ConnectX4, and ConnectX5 NICs in the SR-IOV mode for accelerated networking.

When accelerated networking is enabled on a NetScaler VPX interface, Azure bundles either ConnectX3, ConnectX4, or ConnectX5 interface with the existing PV interface of a NetScaler VPX appliance.

For more information about enabling accelerated networking before attaching an interface to a VM, see [Create a network interface with accelerated networking](#).


For more information about enabling accelerated networking on an existing interface on a VM, see [Enable existing interfaces on a VM](#).

How to enable accelerated networking on a NetScaler VPX instance using the Azure console


You can enable accelerated networking on a specific interface using the Azure console or the Azure PowerShell.

Do the following steps to enable accelerated networking by using Azure availability sets or availability zones.


1. Log in to [Azure portal](#), and navigate to **Azure Marketplace**.

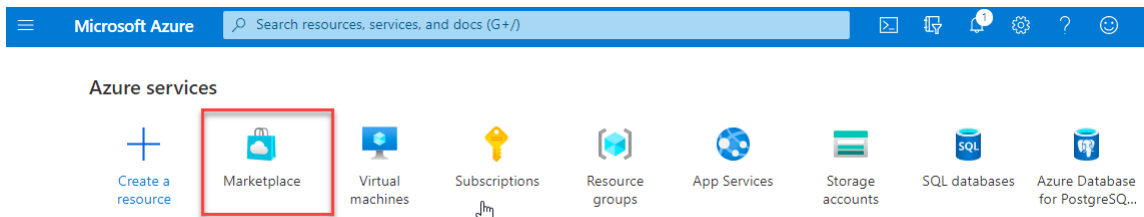

2. From the **Azure Marketplace**, search **NetScaler**.

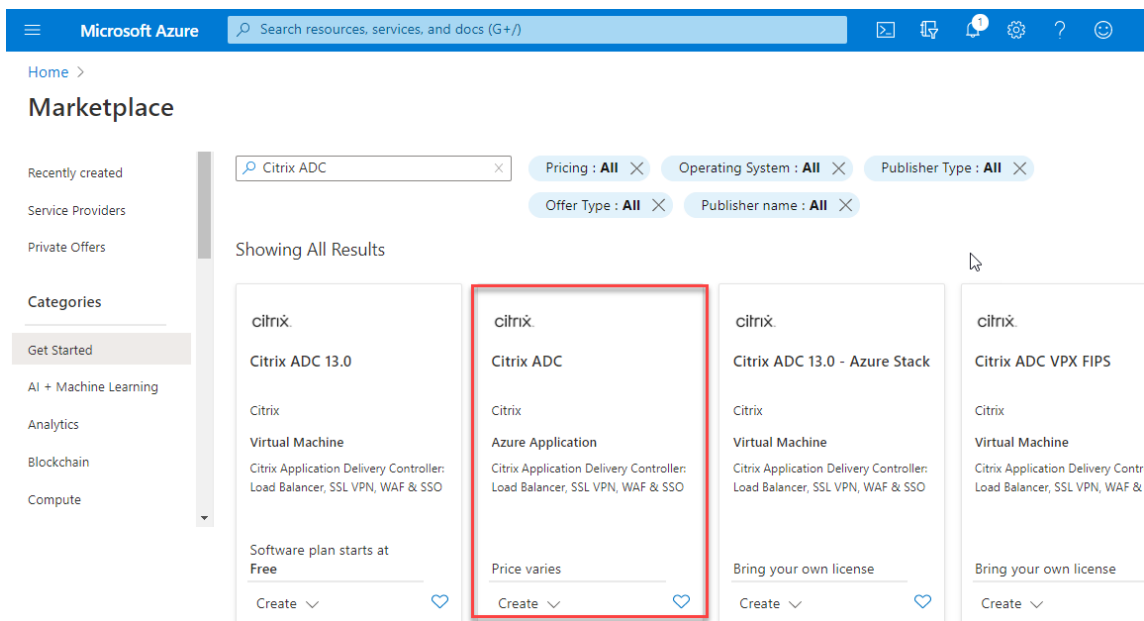

3. Select a non-FIPS NetScaler plan along with license, and click **Create**.

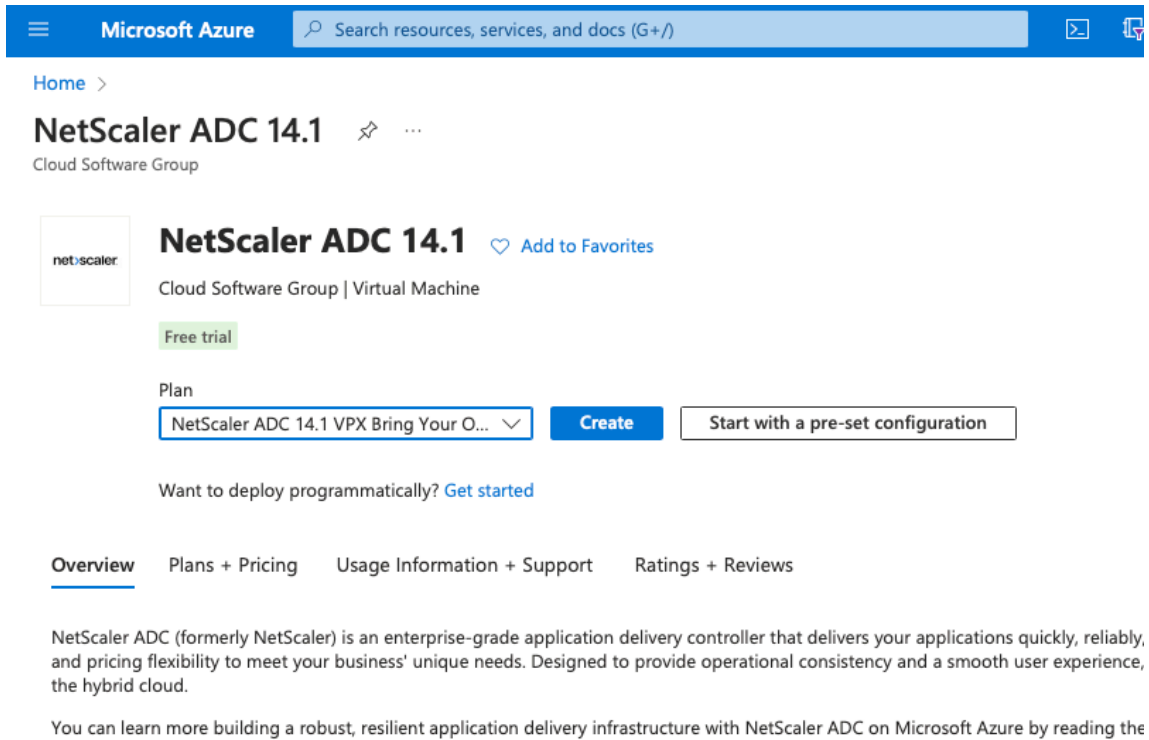

The **Create NetScaler** page appears.

4. In the **Basics** tab, create a Resource Group. Under the **Parameters** tab, enter details for the Region, Admin user name, Admin Password, license type (VM SKU), and other fields.

Create a virtual machine ...

Instance details

Virtual machine name * ⓘ ✓

Region * ⓘ ▼

Availability options ⓘ ▼

Availability zone * ⓘ ▼

🔗 You can now select multiple zones. Selecting multiple zones will create one VM per zone. [Learn more](#) ↗

Security type ⓘ ▼

Image * ⓘ ▼

[See all images](#) | [Configure VM generation](#)

VM architecture ⓘ Arm64
 x64

📘 Arm64 is not supported with the selected image.

Run with Azure Spot discount ⓘ

Size * ⓘ ▼

[See all sizes](#)

Administrator account

Authentication type ⓘ SSH public key
 Password

Username * ⓘ ✓

Password * ⓘ ✓

Confirm password * ⓘ ✓

Inbound port rules

Select which virtual machine network ports are accessible from the public internet. You can specify more limited or granular network access on the Networking tab.

Public inbound ports * ⓘ None
 Allow selected ports

Select inbound ports * ▼

📘 All traffic from the internet will be blocked by default. You will be able to change inbound port rules in the VM > Networking page.

[Review + create](#)


[< Previous](#)

[Next : Disks >](#)

5. Click **Next : VM Configurations >**.

On the **VM Configurations** page, perform the following:

- a) Configure a public IP domain name suffix.
- b) Enable or disable **Azure Monitoring Metrics**.
- c) Enable or disable **Backend Autoscale**.

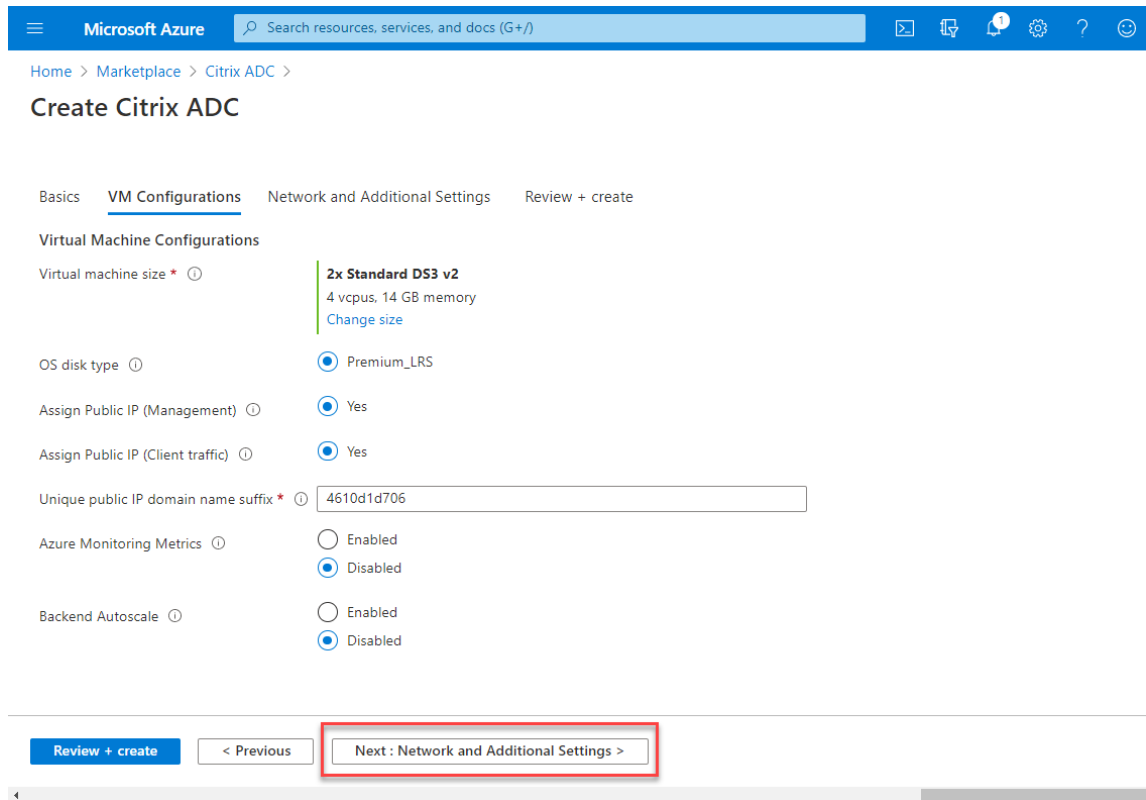

6. Click **Next: Network and Additional settings >**.

On the **Network and Additional Settings** page, create a Boot diagnostics account and configure the network settings.

Under the **Accelerated Networking** section, you have the option to enable or disable the accelerated networking separately for the Management interface, Client interface, and Server interface.

Create a virtual machine ...

Basics Disks **Networking** Management Monitoring Advanced Tags Review + create

Define network connectivity for your virtual machine by configuring network interface card (NIC) settings. You can control ports, inbound and outbound connectivity with security group rules, or place behind an existing load balancing solution. [Learn more](#)

Network interface

When creating a virtual machine, a network interface will be created for you.

Virtual network *	<input type="text" value="(new) vpx-aan-vnet"/> ⓘ
	Create new
Subnet *	<input type="text" value="(new) default (10.6.0.0/24)"/> ⓘ
Public IP	<input type="text" value="(new) vpx-aan-ip"/> ⓘ
	Create new
NIC network security group	<input type="radio"/> None <input checked="" type="radio"/> Basic <input type="radio"/> Advanced
Public inbound ports *	<input type="radio"/> None <input checked="" type="radio"/> Allow selected ports
Select inbound ports *	<input type="text" value="SSH (22)"/> ⓘ

⚠ This will allow all IP addresses to access your virtual machine. This is only recommended for testing. Use the Advanced controls in the Networking tab to create rules to limit inbound traffic to known IP addresses.

Delete public IP and NIC when VM is deleted	<input type="checkbox"/> ⓘ
Enable accelerated networking	<input checked="" type="checkbox"/> ⓘ

Load balancing

You can place this virtual machine in the backend pool of an existing Azure load balancing solution. [Learn more](#)

Load balancing options	<input checked="" type="radio"/> None <input type="radio"/> Azure load balancer Supports all TCP/UDP network traffic, port-forwarding, and outbound flows. <input type="radio"/> Application gateway Web traffic load balancer for HTTP/HTTPS with URL-based routing, SSL termination, session persistence, and web application firewall.
------------------------	---

7. Click **Next: Review + create >**.

After the validation is successful, review the basic settings, VM configurations, network and additional settings, and click **Create**. It might take some time for the Azure Resource Group to be created with the required configurations.

Microsoft Azure Search resources, services, and docs (G+)

Home > Marketplace > Citrix ADC >

Create Citrix ADC

Validation Passed

Basics VM Configurations Network and Additional Settings **Review + create**

PRODUCT DETAILS

Citrix ADC
by Citrix
[Terms of use](#) | [Privacy policy](#)

TERMS

By clicking "Create", I (a) agree to the legal terms and privacy statement(s) associated with the Marketplace offering(s) listed above; (b) authorize Microsoft to bill my current payment method for the fees associated with the offering(s), with the same billing frequency as my Azure subscription; and (c) agree that Microsoft may share my contact, usage and transactional information with the provider(s) of the offering(s) for support, billing and other transactional activities. Microsoft does not provide rights for third-party offerings. See the [Azure Marketplace Terms](#) for additional details.

Basics


Subscription	NSDev Platform CA
Resource group	test-aan
Region	South Central US
Citrix ADC Release Version	13.0
License Subscription	Bring Your Own License
Virtual Machine name prefix	citrix-adc-vpx
Username	
Password	*****
Azure Monitoring Metrics	Disabled
Backend Autoscale	Disabled

Network and Additional Settings


Diagnostic storage account	citrixadcvpdx4610d1d706
Virtual network	citrix-adc-vpx-virtual-network
Management Subnet	01-management-subnet
Address prefix (Management Subnet)	172.17.40.0/24
Client Subnet	11-client-subnet
Address prefix (Client Subnet)	172.17.41.0/24
Server Subnet	12-server-subnet
Address prefix (Server Subnet)	172.17.42.0/24
Accelerated Networking (Management I...	On
Accelerated Networking (Client Interface)	On
Accelerated Networking (Server Interface)	On
Public IP address	citrix-adc-vpx-nsip-0
Domain name label	citrix-adc-vpx-nsip-0-4610d1d706
Public IP address	citrix-adc-vpx-nsip-1
Domain name label	citrix-adc-vpx-nsip-1-4610d1d706
Public IP address	citrix-adc-vpx-vip
Domain name label	citrix-adc-vpx-vip-4610d1d706
Ports open for Management public IP	ssh (22)

Create < Previous Next Download a template for automation

8. After the deployment is completed, select the **Resource Group** to see the configuration details.

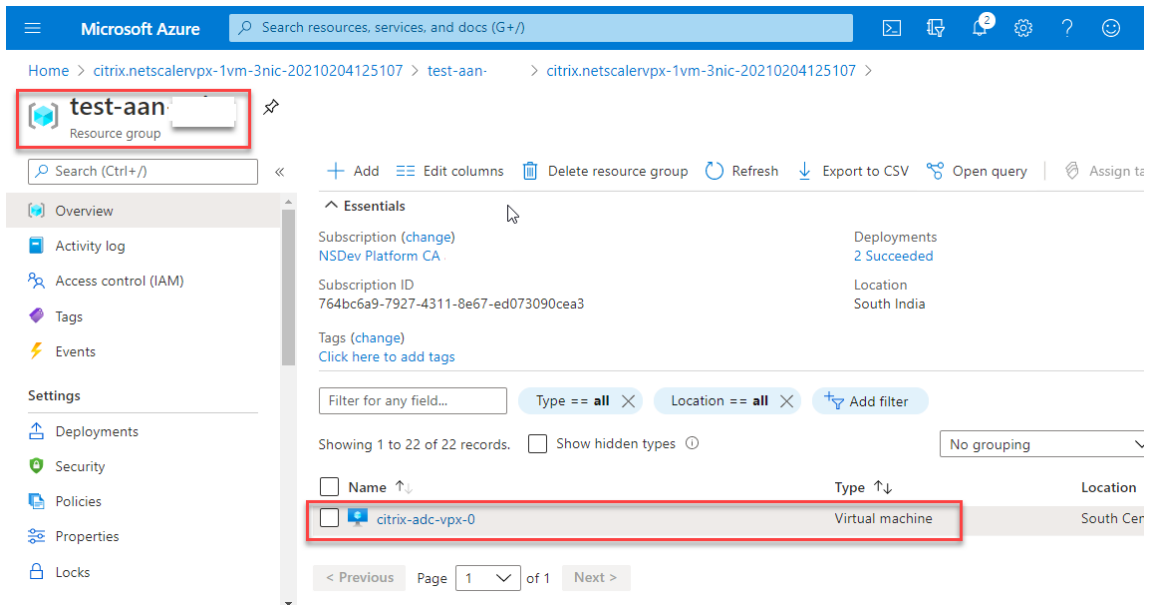

- To verify the Accelerated Networking configurations, select **Virtual machine > Networking**. The Accelerated Networking status is displayed as **Enabled** or **Disabled** for each NIC.

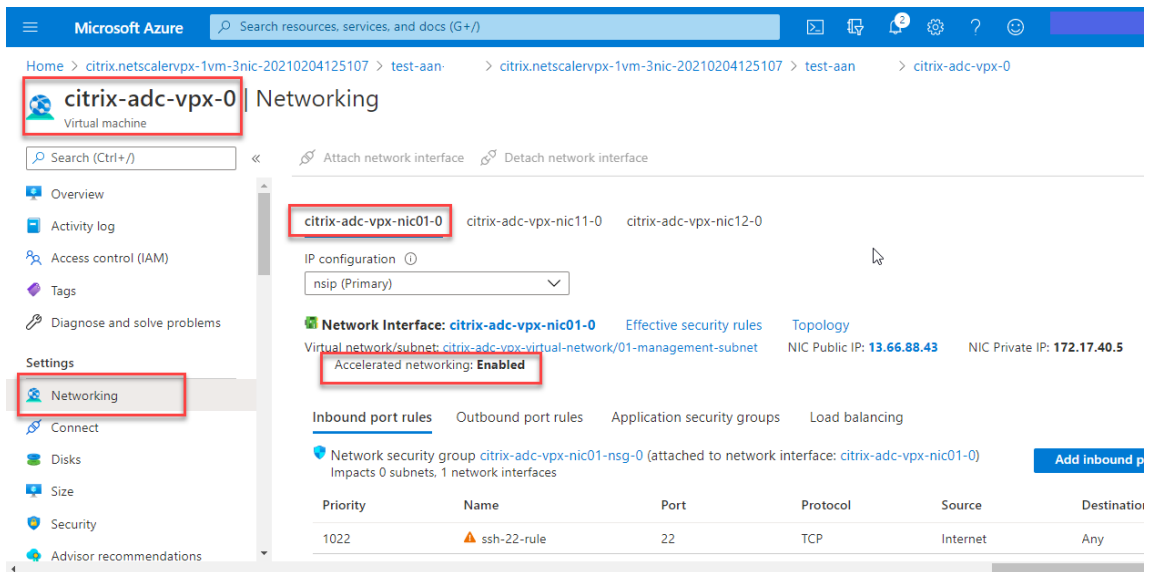

Enable accelerated networking using Azure PowerShell

If you need to enable accelerated networking after the VM creation, you can do so using Azure PowerShell.

Note:


Ensure to stop the VM before you enable Accelerated Networking using Azure PowerShell.

Perform the following steps to enable accelerated networking by using Azure PowerShell.

1. Navigate to **Azure portal**, click the **PowerShell** icon on the right-hand top corner.

Note:

If you are in the Bash mode, change to the PowerShell mode.

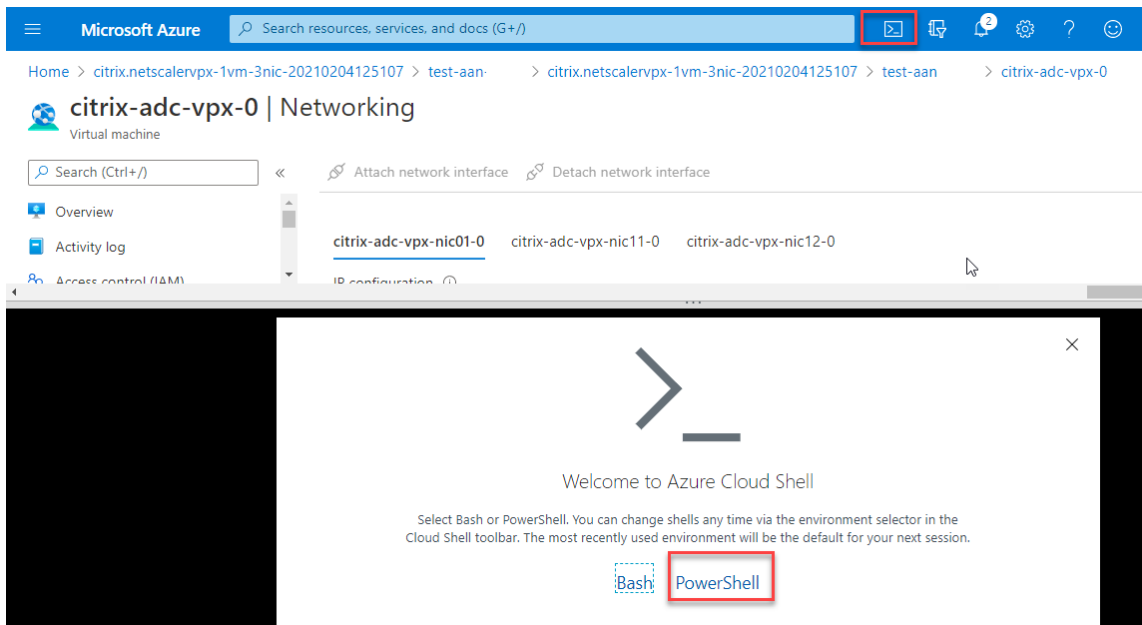

2. At the command prompt, run the following command:

```
1 az network nic update --name <nic-name> --accelerated-networking [
  true | false] --resource-group <resourcegroup-name>
```

The accelerated networking parameter accepts either of the following values:

- **True:** Enables accelerated networking on the specified NIC.
- **False:** Disables accelerated networking on the specified NIC.

To enable accelerated networking on a specific NIC:


```
1 az network nic update --name citrix-adc-vpx-nic01-0 --accelerated-
networking true --resource-group rsgp1-aan
```

To disable accelerated networking on a specific NIC:


```
1 az network nic update --name citrix-adc-vpx-nic01-0 --accelerated-
networking false --resource-group rsgp1-aan
```

3. To verify that the Accelerated Networking status after the deployment is completed, Navigate to **VM > Networking**.

In the following example, you can see that Accelerated Networking is **Enabled**.

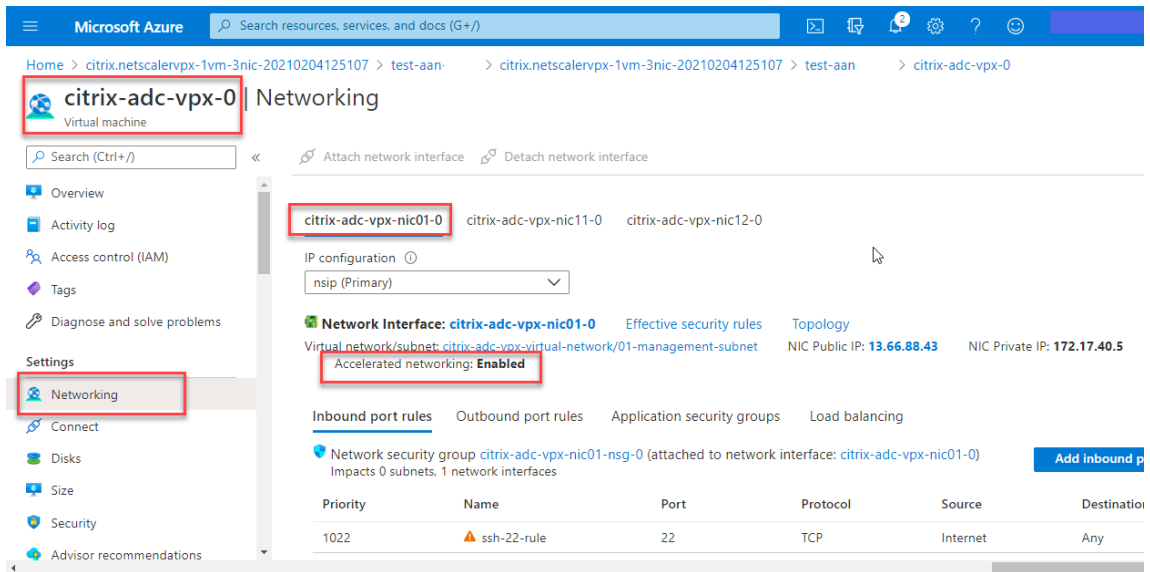

In the following example, you can see that Accelerated Networking is **Disabled**.

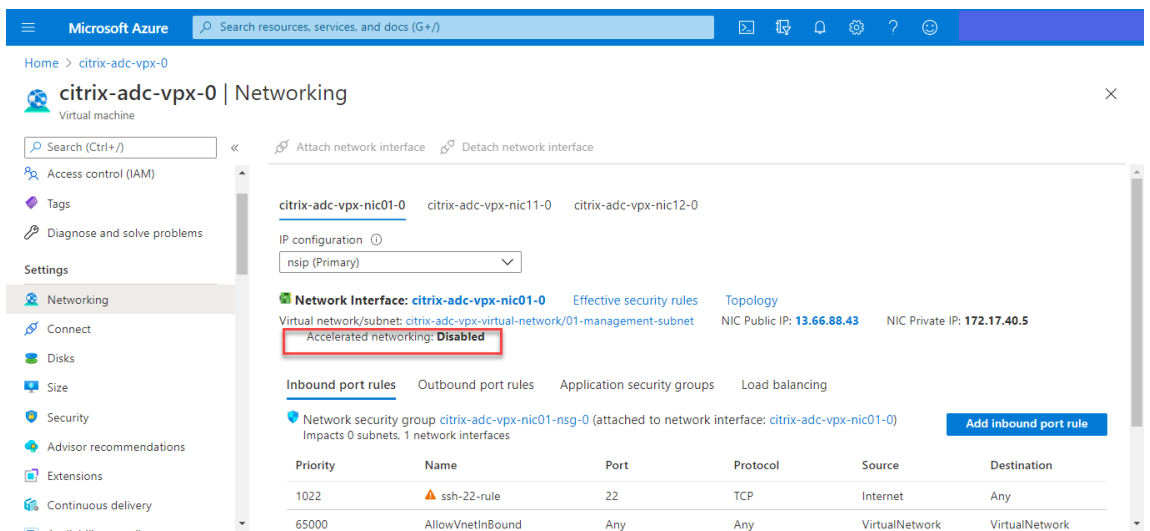

To verify accelerated networking on an interface by using FreeBSD Shell of NetScaler

You can log in to the FreeBSD shell of NetScaler, and run the following commands to verify the accelerated networking status.

Example for ConnectX3 NIC:

The following example shows the “ifconfig” command output of the Mellanox ConnectX3 NIC. The “50/n” indicates the VF interfaces of the Mellanox ConnectX3 NICs. 0/1 and 1/1 indicates the PV interfaces of the NetScaler VPX instance. You can observe that both PV interface (1/1) and CX3 VF interface (50/1) have the same MAC addresses (00:22:48:1c:99:3e). This indicates that the two interfaces are bundled together.

```

root@nvr-us-cx3# ifconfig
lo0: flags=8049<UP,LOOPBACK,RUNNING,MULTICAST> metric 0 mtu 1500
    options=3<RXCSUM,TXCSUM>
    inet 127.0.0.1 netmask 0xff000000
    inet6 ::1 prefixlen 128
    inet6 fe80::1%lo0 prefixlen 64 scopeid 0x1
    nd6 options=3<PERFORMNUD,ACCEPT_RTADV>
0/1: flags=8843<UP,BROADCAST,RUNNING,SIMPLEX,MULTICAST> metric 0 mtu 1500
    options=80019<RXCSUM,VLAN_MTU,VLAN_HWTAGGING,LINKSTATE>
    ether 00:0d:3a:98:71:be
    inet 172.16.27.11 netmask 0xfffff00 broadcast 172.16.27.255
    inet6 fe80::20d:3aff:fe98:71be%0/1 prefixlen 64 autoconf scopeid 0x2
    nd6 options=3<PERFORMNUD,ACCEPT_RTADV>
    media: Ethernet autoselect (10Gbase-T <full-duplex>)
    status: active
1/1: flags=8802<BROADCAST,SIMPLEX,MULTICAST> metric 0 mtu 1500
    options=80019<RXCSUM,VLAN_MTU,VLAN_HWTAGGING,LINKSTATE>
    ether 00:22:48:1c:99:3e
    media: Ethernet autoselect (10Gbase-T <full-duplex>)
    status: active
50/1: flags=8842<BROADCAST,RUNNING,SIMPLEX,MULTICAST> metric 0 mtu 1500
    options=900b8<VLAN_MTU,VLAN_HWTAGGING,JUMBO_MTU,VLAN_HWCSUM,VLAN_HWFILTER,LINKSTATE>
    ether 00:22:48:1c:99:3e
    media: Ethernet autoselect (<unknown subtype>)
    status: active

```

Example for ConnectX4 NIC:

The following example shows the “ifconfig” command output of the Mellanox ConnectX4 NIC. The “100/n” indicates the VF interfaces of the Mellanox ConnectX4 NICs. 0/1, 1/1, and 1/2 indicates the PV interfaces of NetScaler VPX instance.

You can observe that both PV interface (1/1) and CX4 VF interface (100/1) have the same MAC addresses (00:0d:3a:9b:f2:1d). This indicates that the two interfaces are bundled together. Similarly, the PV interface (1/2) and CX4 VF interface (100/2) have the same MAC addresses (00:0d:3a:1e:d2:23).


```

root@SmartNIC-CX4-NS-DUT-NEW1# ifconfig
lo0: flags=8049<UP,LOOPBACK,RUNNING,MULTICAST> metric 0 mtu 1500
options=3<RXCSUM,TXCSUM>
inet 127.0.0.1 netmask 0xff000000
inet6 ::1 prefixlen 128
inet6 fe80::1%lo0 prefixlen 64 scopeid 0x1
nd6 options=3<PERFORMNUD,ACCEPT_RTADV>
1/1: flags=8843<UP,BROADCAST,RUNNING,SIMPLEX,MULTICAST> metric 0 mtu 1500
options=80019<RXCSUM,VLAN_MTU,VLAN_HWTAGGING,LINKSTATE>
ether 00:0d:3a:9b:f2:1d
inet 10.0.1.29 netmask 0xfffff00 broadcast 10.0.1.255
inet6 fe80::20d:3aff:fe9b:f21d%0/1 prefixlen 64 scopeid 0x2
nd6 options=3<PERFORMNUD,ACCEPT_RTADV>
media: Ethernet autoselect (10Gbase-T <full-duplex>)
status: active

1/2: flags=8802<BROADCAST,SIMPLEX,MULTICAST> metric 0 mtu 1500
options=80019<RXCSUM,VLAN_MTU,VLAN_HWTAGGING,LINKSTATE>
ether 00:0d:3a:1e:d2:23
media: Ethernet autoselect (10Gbase-T <full-duplex>)
status: active

100/1: flags=8a03<UP,BROADCAST,ALLMULTI,SIMPLEX,MULTICAST> metric 0 mtu 1500
ether 00:0d:3a:9b:f2:1d
media: Ethernet autoselect <full-duplex rxpause txpause> (autoselect
<full-duplex rxpause>)
status: active

100/2: flags=8a03<UP,BROADCAST,ALLMULTI,SIMPLEX,MULTICAST> metric 0 mtu 1500
ether 00:0d:3a:1e:d2:23
media: Ethernet autoselect <full-duplex rxpause txpause> (autoselect
<full-duplex rxpause>)
status: active

```

To verify accelerated networking on an interface by using ADC CLI

Example for ConnectX3 NIC:

The following show interface command output indicates that the PV interface 1/1 is bundled with virtual function 50/1, which is an SR-IOV VF NIC. The MAC addresses of both 1/1 and 50/1 NICs are the same. After accelerated networking is enabled, the data of the 1/1 interface is sent through datapath of the 50/1 interface, which is a ConnectX3 interface. You can see that the “show interface” output of the PV interface (1/1) points to the VF (50/1). Similarly, the “show interface” output of VF interface (50/1) points to the PV interface (1/1).

```
> show interface 1/1

Interface 1/1 (NetScaler Virtual Interface, SmartNIC, VF 50/1 Datapath 50/1) #1
Flags=0xe060 <ENABLED, UP, UP, HEARTBEAT, 802.1q>
MTU=1500, native vlan=1, MAC=00:22:48:1c:99:3e, uptime 0h00m07s
LLDP Mode: NONE, LR Priority: 1024

RX: Pkts(0) Bytes(0) Errs(0) Drops(0) Stalls(0)
TX: Pkts(0) Bytes(0) Errs(0) Drops(0) Stalls(0)
NIC: InDisc(0) OutDisc(0) FcTls(0) Stalls(0) Hangs(0) Muted(0)
Bandwidth thresholds are not set.

Done

> show interface 50/1

Interface 50/1 (CX3 VF Interface, SmartNIC, PV 1/1) #2
Flags=0xe400 <ENABLED, UP, UP, 802.1q>
MTU=1500, native vlan=1, MAC=00:22:48:1c:99:3e, uptime 0h00m08s
Actual: media NONE, speed 50000, duplex FULL, FcTl NONE, throughput 50000
LLDP Mode: NONE, LR Priority: 1024

RX: Pkts(0) Bytes(0) Errs(0) Drops(0) Stalls(0)
TX: Pkts(0) Bytes(0) Errs(0) Drops(0) Stalls(0)
NIC: InDisc(0) OutDisc(0) FcTls(0) Stalls(0) Hangs(0) Muted(0)
Bandwidth thresholds are not set.
```

Example for ConnectX4 NIC:

The following show interface command output indicates that the PV interface 1/1 is bundled with virtual function 100/1, which is an SR-IOV VF NIC. The MAC addresses of both 1/1 and 100/1 NICs are the same. After accelerated networking is enabled, the data of 1/1 interface is sent through the data path of 100/1 interface, which is a ConnectX4 interface. You can see that the “show interface” output of PV interface (1/1) points to the VF (100/1). Similarly, the “show interface” output of VF interface (100/1) points to the PV interface (1/1).

```

> show interface 1/1
1) Interface 1/1 (NetScaler Virtual Interface, SmartNIC, VF 100/1, Datapath 100/1) #0
   flags=0xe060 <ENABLED, UP, UP, HEARTBEAT, 802.1q>
   MTU=1500, native vlan=10, MAC=00:0d:3a:9b:f2:1d, uptime 10h49m10s
   LLDP Mode: NONE, LR Priority: 1024

   RX: Pkts(310366) Bytes(98476082) Errs(0) Drops(0) Stalls(0)
   TX: Pkts(44) Bytes(6368) Errs(0) Drops(0) Stalls(0)
   NIC: InDisc(0) OutDisc(0) FcTls(0) Stalls(0) Hangs(0) Muted(0)
   Bandwidth thresholds are not set.

Done
> show interface 100/1
1) Interface 100/1 (CX4 VF Interface, SmartNIC, PV 1/1) #3
   flags=0xe460 <ENABLED, UP, UP, 802.1q>
   MTU=1500, native vlan=10, MAC=00:0d:3a:9b:f2:1d, uptime 10h49m11s
   Actual: media FIBER, speed NONE, duplex FULL, fctl NONE, throughput
0
   LLDP Mode: NONE, LR Priority: 1024

   RX: Pkts(1135870) Bytes(1487381079) Errs(0) Drops(0) Stalls(0)
   TX: Pkts(1143020) Bytes(143165922) Errs(0) Drops(0) Stalls(0)
   NIC: InDisc(0) OutDisc(0) FcTls(0) Stalls(0) Hangs(0) Muted(0)
   Bandwidth thresholds are not set.

Done
>

```

Points to note in NetScaler

- PV interface is considered as the primary or main interface for all the necessary operations. Configurations must be performed on PV interfaces only.
- All the 'set' operations on a VF interface are blocked except the following:
 - enable interface
 - disable interface
 - reset interface
 - clear stats

Note:

Citrix recommends that you do not perform any operations on the VF interface.

- You can verify the binding of PV interface with VF interface using the `show interface` command.
- From NetScaler release 13.1-33.x, a NetScaler VPX instance can seamlessly handle dynamic NIC removals and reattachment of the removed NICs in Azure accelerated networking. Azure can remove SR-IOV VF NIC of accelerated networking for their host maintenance activities. Whenever a NIC is removed from Azure VM, the NetScaler VPX instance shows the interface status as

“Link Down” and the traffic goes through the virtual interface only. After the removed NIC is reattached, the VPX instances use the reattached SR-IOV VF NIC. This process happens seamlessly and does not require any configuration.

Configure a VLAN to a PV interface

When a PV interface is bound to a VLAN, the associated accelerated VF interface is also bound to the same VLAN as the PV interface. In this example, the PV interface (1/1) is bound to VLAN (20). The VF interface (100/1) that is bundled with the PV interface (1/1) is also bound to VLAN 20.

Example:

1. Create a VLAN.

```
1 add vlan 20
```

2. Bind a VLAN to the PV interface.

```
1 bind vlan 20 -ifnum 1/1
2
3 show vlan
4
5 1) VLAN ID: 1
6   Link-local IPv6 addr: fe80::20d:3aff:fe9b:f21d/64
7   Interfaces : L0/1
8
9 2) VLAN ID: 10      VLAN Alias Name:
10  Interfaces : 0/1 100/1
11  IPs : 10.0.1.29  Mask: 255.255.255.0
12
13 3) VLAN ID: 20      VLAN Alias Name:
14  Interfaces : 1/1 100/2
```

Note

VLAN binding operation is not permitted on an accelerated VF interface.


```
1 bind vlan 1 -ifnum 100/1
2 ERROR: Operation not permitted
```

Configure HA-INC nodes by using the NetScaler high availability template with Azure ILB

May 2, 2023


You can quickly and efficiently deploy a pair of VPX instances in HA-INC mode by using the standard template for intranet applications. The Azure internal load balancer (ILB) uses an internal or private IP address for the front end as shown in Figure 1. The template creates two nodes, with three subnets and six NICs. The subnets are for management, client, and server-side traffic with each subnet belonging to a different NIC on each device.

Figure 1: NetScaler HA pair for clients in an internal network

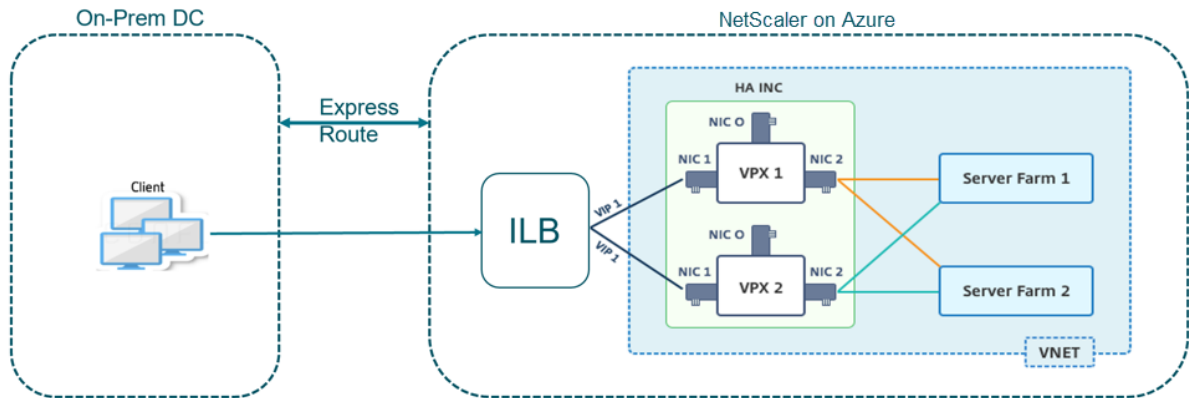

You can also use this deployment when the NetScaler HA pair is behind a firewall as shown in Figure 2. The public IP address belongs to the firewall and is NAT'd to the front-end IP address of the ILB.

Figure 2: NetScaler HA pair with firewall having public IP address

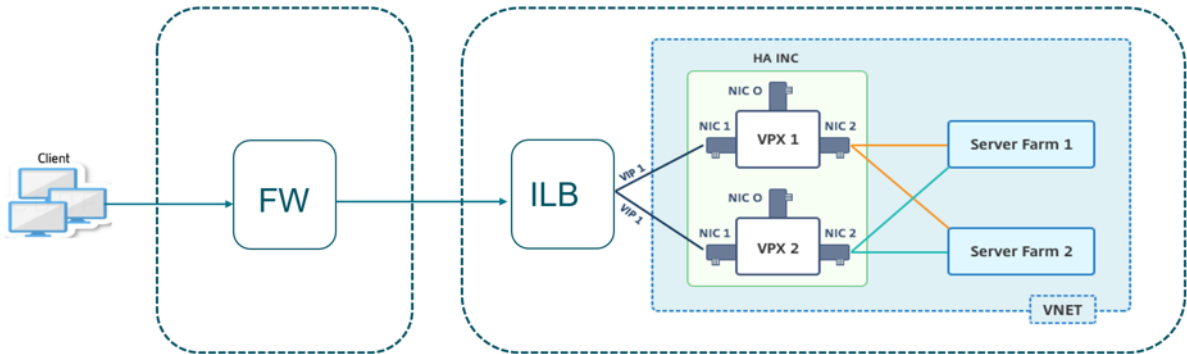

You can get the NetScaler HA pair template for intranet applications at the [Azure portal](#)

Complete the following steps to launch the template and deploy a high availability VPX pair by using Azure Availability Sets.

1. From the Azure portal, navigate to the **Custom deployment** page.
2. The **Basics** page appears. Create a Resource Group. Under the **Parameters** tab, enter details for the Region, Admin user name, Admin Password, license type (`VM sku`), and other fields.

Custom deployment
Deploy from a custom template

12 resources

[Edit template](#) [Edit parameters](#)

Deployment scope
Select the subscription to manage deployed resources and costs. Use resource groups like folders to organize and manage all your resources.

Subscription * ⓘ

Resource group * ⓘ [Create new](#)

Parameters

Region * ⓘ

Admin Username ⓘ

Admin Password * ⓘ

Vm Size ⓘ

Vm Sku ⓘ

Vnet Name ⓘ

Vnet Resource Group ⓘ

Vnet New Or Existing

Subnet Name-01 ⓘ

Subnet Name-11 ⓘ

Subnet Name-12 ⓘ

Subnet Address Prefix-01 ⓘ

Subnet Address Prefix-11 ⓘ

[Review + create](#) [< Previous](#) **[Next : Review + create >](#)**

3. Click **Next : Review + create >**.

It might take a moment for the Azure Resource Group to be created with the required configurations. After completion, select the Resource Group in the Azure portal to see the configuration details, such as LB rules, back-end pools, health probes. The high availability pair appears as ADC-VPX-0 and ADC-VPX-1.

If further modifications are required for your HA setup, such as creating more security rules and ports, you can do that from the Azure portal.

Once the required configuration is complete, the following resources are created.

The screenshot shows the Azure portal interface for a resource group named 'HA-ILB'. The Essentials section includes the following information:

- Subscription (change): NSDev Platform (8.ams@psg.gionna@ibm.com)
- Subscription ID: 7846c069-7827-4111-8e67-e6873090ca31
- Tags (change): Click here to add tags

Below the Essentials section, there is a filter bar with the following filters applied:

- Filter by name...
- Type == (all)
- Location == (all)
- Add filter

The main content area displays a table of resources:

Name	Type	Location
ADC-Availability-Set	Availability set	West US 2
ADC-Azure-Load-Balancer	Load balancer	West US 2
ADC-VPX-0	Virtual machine	West US 2
ADC-VPX-0-management-public-ip	Public IP address	West US 2
ADC-VPX-1	Virtual machine	West US 2
ADC-VPX-1-management-public-ip	Public IP address	West US 2
ADC-VPX-NIC-0-01	Network interface	West US 2
ADC-VPX-NIC-0-11	Network interface	West US 2
ADC-VPX-NIC-0-12	Network interface	West US 2
ADC-VPX-NIC-1-01	Network interface	West US 2
ADC-VPX-NIC-1-11	Network interface	West US 2
ADC-VPX-NIC-1-12	Network interface	West US 2
ADC-VPX-NSG-0-01	Network security group	West US 2
ADC-VPX-NSG-0-11	Network security group	West US 2
ADC-VPX-NSG-0-12	Network security group	West US 2
ADC-VPX-NSG-1-01	Network security group	West US 2

4. Log on to **ADC-VPX-0** and **ADC-VPX-1** nodes to validate the following configuration:

- NSIP addresses for both nodes must be in the management subnet.
- On the primary (ADC-VPX-0) and secondary (ADC-VPX-1) nodes, you must see two SNIP addresses. One SNIP (client subnet) is used for responding to ILB probes and the other SNIP (server subnet) is used for back-end server communication.

Note

In the HA-INC mode, the SNIP address of the ADC-VPX-0 and ADC-VPX-1 VMs are different

while in the same subnet, unlike with the classic on-premises ADC HA deployment where both are the same.

To support deployments when the VPX pair SNIP is in different subnets, or anytime the VIP is not in the same subnet as a SNIP, you must either enable Mac-Based Forwarding (MBF), or add a static host route for each VIP to each VPX node.

On the primary node (ADC-VPX-0)

```
> sh ip
-----
1) 10.11.0.5 0 NetScaler IP Active Enabled Enabled NA Enabled
2) 10.11.1.5 0 SNIP Active Enabled Enabled NA Enabled
3) 10.11.3.4 0 SNIP Active Enabled Enabled NA Enabled
Done
>
```

```
> sh ha node
1) Node ID: 0
   IP: 10.11.0.5 (ADC-VPX-0)
   Node State: UP
   Master State: Primary
   Fail-Safe Mode: OFF
   INC State: ENABLED
   Sync State: ENABLED
   Propagation: ENABLED
   Enabled Interfaces : 0/1 1/1 1/2
   Disabled Interfaces : None
   HA MON ON Interfaces : None
   HA HEARTBEAT OFF Interfaces : None
   Interfaces on which heartbeats are not seen : 1/1 1/2
   Interfaces causing Partial Failure: None
   SSL Card Status: NOT PRESENT
   Sync Status Strict Mode: DISABLED
   Hello Interval: 200 msec
   Dead Interval: 3 secs
   Node in this Master State for: 0:0:20:26 (days:hrs:min:sec)
2) Node ID: 1
   IP: 10.11.0.4
   Node State: UP
   Master State: Secondary
   Fail-Safe Mode: OFF
   INC State: ENABLED
   Sync State: SUCCESS
   Propagation: ENABLED
   Enabled Interfaces : 0/1 1/1 1/2
   Disabled Interfaces : None
   HA MON ON Interfaces : None
   HA HEARTBEAT OFF Interfaces : None
   Interfaces on which heartbeats are not seen : 1/1 1/2
   Interfaces causing Partial Failure: None
   SSL Card Status: NOT PRESENT
Done
>
```

On the secondary node (ADC-VPX-1)


```

> sh ip
-----
Ipaddress      Traffic Domain  Type           Mode   Arp   Icmp   Vserver  State
-----
1)  10.11.0.4      0              NetScaler IP   Active Enabled Enabled NA      Enabled
2)  10.11.1.6      0              SNIP          Active Enabled Enabled NA      Enabled
3)  10.11.3.5      0              SNIP          Active Enabled Enabled NA      Enabled
Done
>


```

```


> sh ha node
1)  Node ID:      0
    IP:          10.11.0.4 (ADC-VPX-1)
    Node State:  UP
    Master State: Secondary
    Fail-Safe Mode: OFF
    INC State:   ENABLED
    Sync State:  SUCCESS
    Propagation: ENABLED
    Enabled Interfaces : 0/1 1/1 1/2
    Disabled Interfaces : None
    HA MON ON Interfaces : None
    HA HEARTBEAT OFF Interfaces : None
    Interfaces on which heartbeats are not seen : 1/1 1/2
    Interfaces causing Partial Failure: None
    SSL Card Status: NOT PRESENT
    Sync Status Strict Mode: DISABLED
    Hello Interval: 200 msec
    Dead Interval: 3 secs
    Node in this Master State for: 0:0:24:18 (days:hrs:min:sec)
2)  Node ID:      1
    IP:          10.11.0.5
    Node State:  UP
    Master State: Primary
    Fail-Safe Mode: OFF
    INC State:   ENABLED
    Sync State:  ENABLED
    Propagation: ENABLED
    Enabled Interfaces : 0/1 1/1 1/2
    Disabled Interfaces : None
    HA MON ON Interfaces : None
    HA HEARTBEAT OFF Interfaces : None
    Interfaces on which heartbeats are not seen : 1/1 1/2
    Interfaces causing Partial Failure: None
    SSL Card Status: NOT PRESENT
Done
>

```

5. After the primary and secondary nodes are UP and the Synchronization status is **SUCCESS**, you must configure the load balancing virtual server or the gateway virtual server on the primary node (ADC-VPX-0) with the private floating IP (FIP) address of the ADC Azure load balancer. For more information, see the [Sample configuration](#) section.
6. To find the private IP address of ADC Azure load balancer, navigate to **Azure portal > ADC Azure Load Balancer > Frontend IP configuration**.

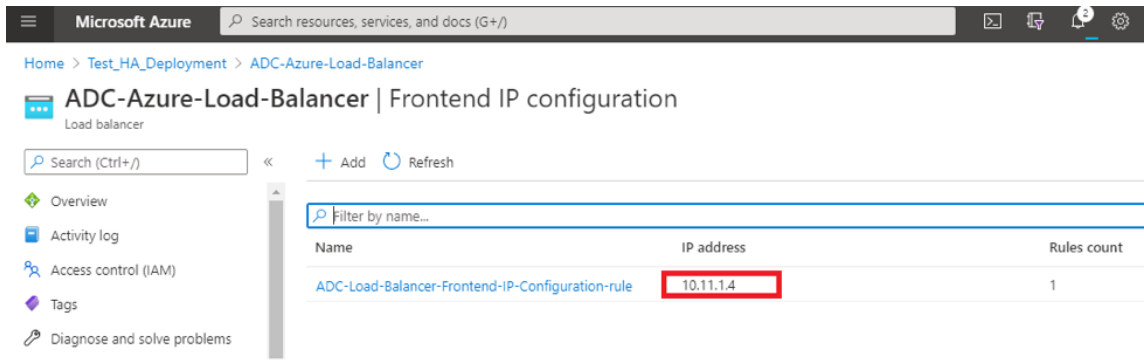

7. In the **Azure Load Balancer** configuration page, the ARM template deployment helps create the LB rule, back-end pools, and health probes.

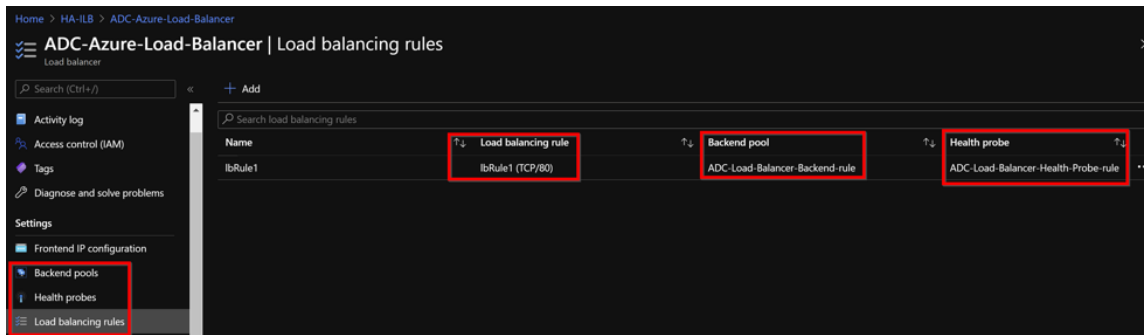

- The LB Rule (LbRule1) uses port 80, by default.

lbRule1
ADC-Azure-Load-Balancer

Save Discard Delete

i A load balancing rule distributes incoming traffic that is sent to a selected IP address and port combination across a group of backend pool instances. Only backend instances that the health probe considers healthy receive new traffic.

Name *
lbRule1

IP Version *
 IPv4 IPv6

Frontend IP address * ⓘ
10.11.1.4 (ADC-Load-Balancer-Frontend-IP-Configuration-rule) ✓

Protocol
 TCP UDP

Port *
80

Backend port * ⓘ
80

- Edit the rule to use port 443, and save the changes.

Note

For enhanced security, Citrix recommends you to use SSL port 443 for LB virtual server or Gateway virtual server.

lbRule1

ADC-Azure-Load-Balancer

Save
 Discard
 Delete

i A load balancing rule distributes incoming traffic that is sent to a selected IP address and port combination across a group of backend pool instances. Only backend instances that the health probe considers healthy receive new traffic.

Name *

IP Version *
 IPv4 IPv6

Frontend IP address * ⓘ

Protocol
 TCP UDP

Port *

Backend port * ⓘ

Backend pool ⓘ

Health probe ⓘ


Session persistence ⓘ

Idle timeout (minutes) ⓘ
 4


Floating IP ⓘ
Enabled

To add more VIP addresses on the ADC, perform the following steps:


1. Navigate to **Azure Load Balancer > Frontend IP configuration**, and click **Add** to create a new internal load balancer IP address.

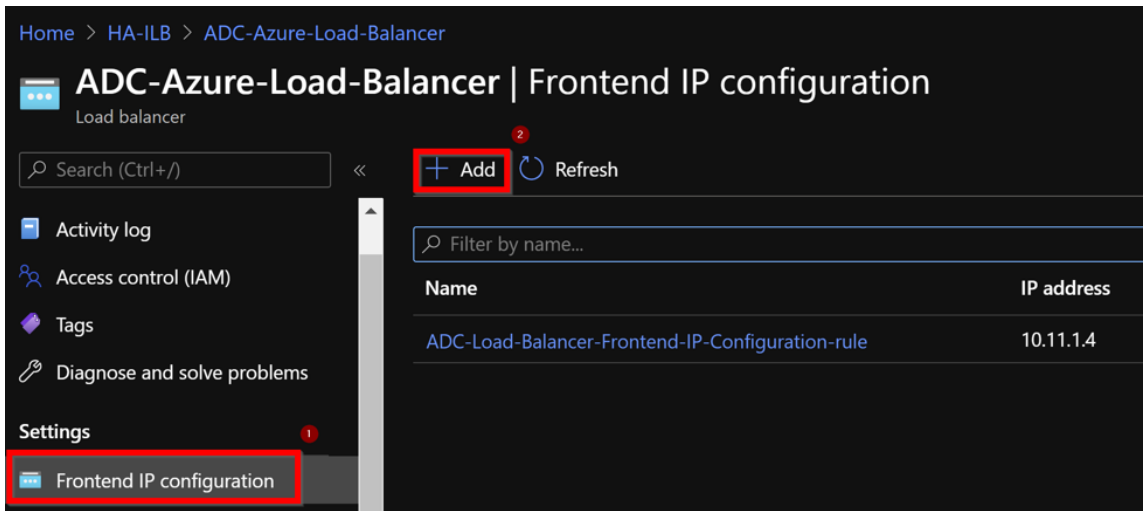


2. In the **Add frontend IP address** page, enter a name, choose the client subnet, assign either dynamic or static IP address, and click **Add**.

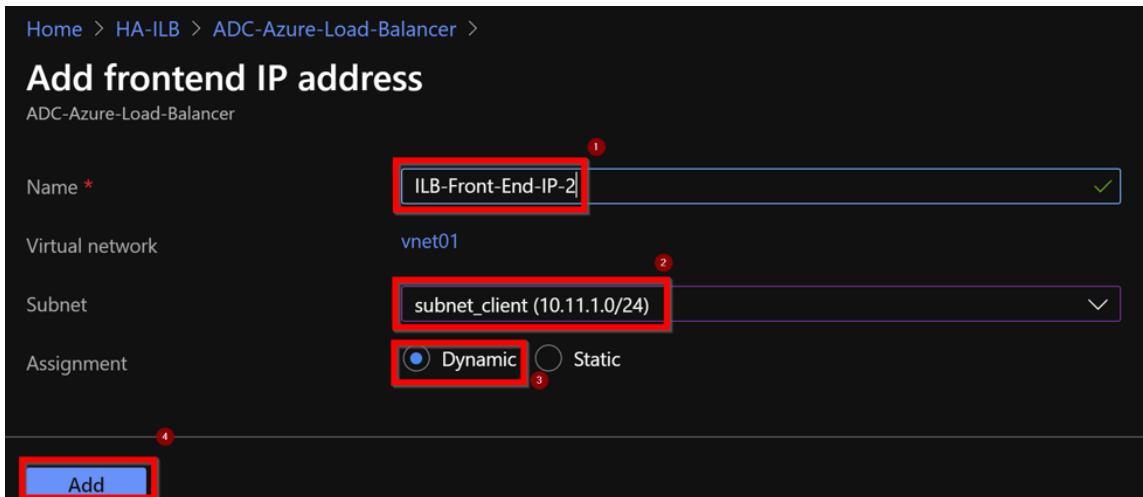

3. The front-end IP address is created but an LB Rule is not associated. Create a new load balancing rule, and associate it with the front-end IP address.

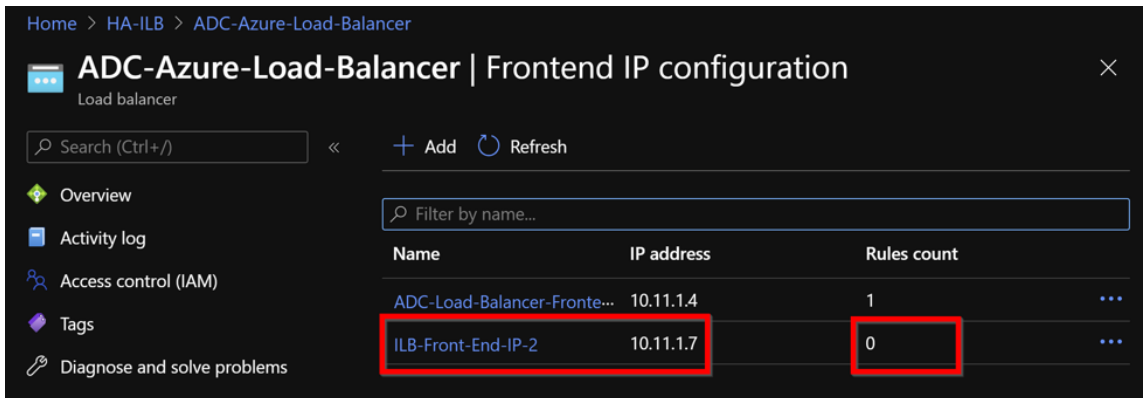

4. In the **Azure Load Balancer** page, select **Load balancing rules**, and then click **Add**.

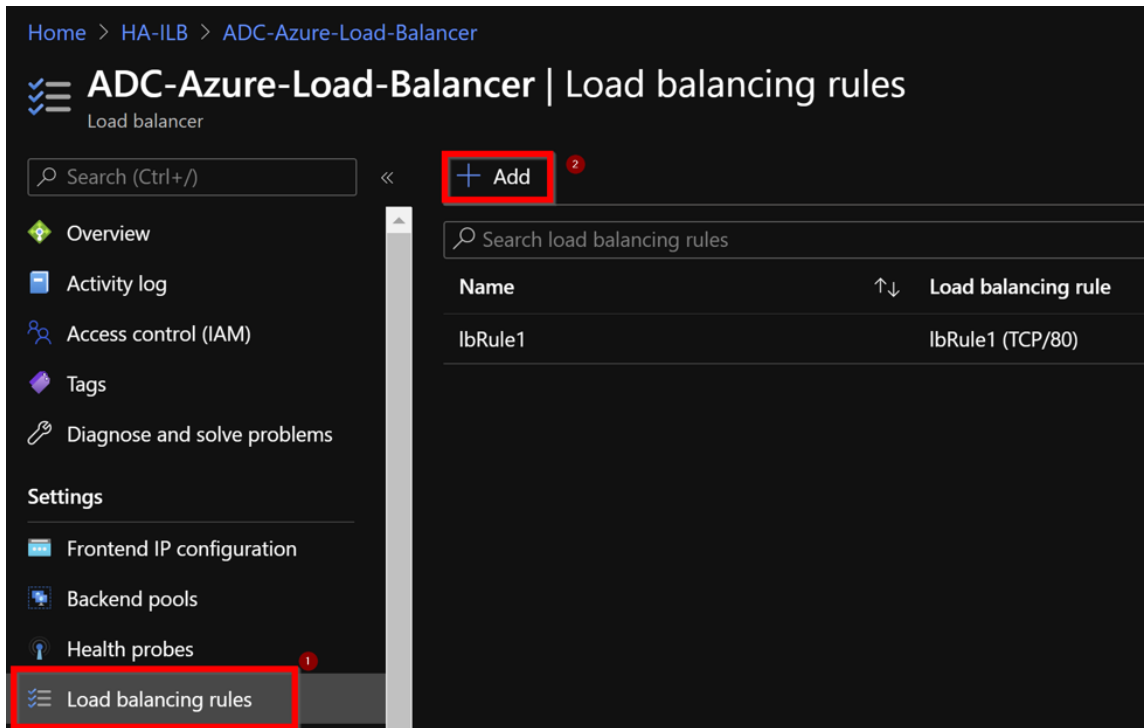

5. Create a new LB Rule by choosing the new front-end IP address and the port. **Floating IP** field must be set to **Enabled**.

Home > HA-ILB > ADC-Azure-Load-Balancer >

Add load balancing rule

ADC-Azure-Load-Balancer

i A load balancing rule distributes incoming traffic that is sent to a selected IP address and port combination across a group of backend pool instances. Only backend instances that the health probe considers healthy receive new traffic.

1 Name *
lbrule2 ✓

IP Version *
 IPv4 IPv6

2 Frontend IP address * ⓘ
10.11.1.7 (ILB-Front-End-IP-2) ✓

Protocol
 TCP UDP

3 Port *
443 ✓

4 Backend port * ⓘ
443 ✓

5 Backend pool ⓘ
ADC-Load-Balancer-Backend-rule (2 virtual machines) ✓

Health probe ⓘ
ADC-Load-Balancer-Health-Probe-rule (TCP:9000) ✓

Session persistence ⓘ
None ✓

Idle timeout (minutes) ⓘ
0 4

6 Floating IP ⓘ
Disabled Enabled

7 OK

6. Now the **Frontend IP configuration** shows the LB rule that is applied.

Name	IP address	Rules count
ADC-Load-Balancer-Frontend-IP-Configurati...	10.11.1.4	1
ILB-Front-End-IP-2	10.11.1.7	1

Sample configuration

To configure a gateway VPN virtual server and load balancing virtual server, run the following commands on the primary node (ADC-VPX-0). The configuration auto synchronizes to the secondary node (ADC-VPX-1).

Gateway sample configuration

```
1 enable feature aaa LB SSL SSLVPN
2 enable ns mode MBF
3 add vpn vserver vpn_ssl SSL 10.11.1.4 443
4 add ssl certKey ckp -cert wild-cgwsanity.cer -key wild-cgwsanity.key
5 bind ssl vserver vpn_ssl -certkeyName ckp
```

Load balancing sample configuration

```
1 enable feature LB SSL
2 enable ns mode MBF
3 add lb vserver lb_vs1 SSL 10.11.1.7 443
4 bind ssl vserver lb_vs1 -certkeyName ckp
```

You can now access the load balancing or VPN virtual server using the fully qualified domain name (FQDN) associated with the internal IP address of ILB.

See the **Resources** section for more information about how to configure the load-balancing virtual server.

Resources:

The following links provide additional information related to HA deployment and virtual server configuration:

- [Configuring high availability nodes in different subnets](#)
- [Set up basic load balancing](#)

Related resources:

- [Configure a high-availability setup with multiple IP addresses and NICs by using PowerShell commands](#)
- [Configuring GSLB on Active-Standby HA Deployment on Azure](#)

Configure HA-INC nodes by using the NetScaler high availability template for internet-facing applications

May 2, 2023

You can quickly and efficiently deploy a pair of VPX instances in HA-INC mode by using the standard template for internet-facing applications. The Azure load balancer (ALB) uses a public IP address for the front end. The template creates two nodes, with three subnets and six NICs. The subnets are for management, client, and server-side traffic. Each subnet has two NICs for both the VPX instances.


You can get the NetScaler HA pair template for internet-facing applications at the [Azure Marketplace](#).

Complete the following steps to launch the template and deploy a high availability VPX pair by using Azure availability sets or availability zone.

1. From the Azure Marketplace, search **NetScaler**.
2. Click **GET IT NOW**.

The screenshot shows the Azure Marketplace page for NetScaler ADC 14.1. The header includes the Microsoft logo, 'Azure Marketplace', a search bar, and a 'More' dropdown. The breadcrumb trail is 'Products > NetScaler ADC 14.1'. The main content area features the NetScaler logo, the product name 'NetScaler ADC 14.1', and the provider 'Cloud Software Group'. A 'Free trial' badge is visible. Below the product name are tabs for 'Overview', 'Plans + Pricing', and 'Ratings + reviews'. The 'Overview' tab is selected, showing a description: 'Load Balancer, SSL VPN, WAF, SSO & Kubernetes Ingress LB'. The text describes NetScaler ADC as an enterprise-grade application delivery controller. A 'Get It Now' button is prominently displayed. On the left side, there are links for 'Pricing information', 'Bring your own license', 'Categories' (Networking, Compute), 'Support' (Support, Help), and 'Legal'.

3. Select the required HA deployment along with license, and click **Continue**.

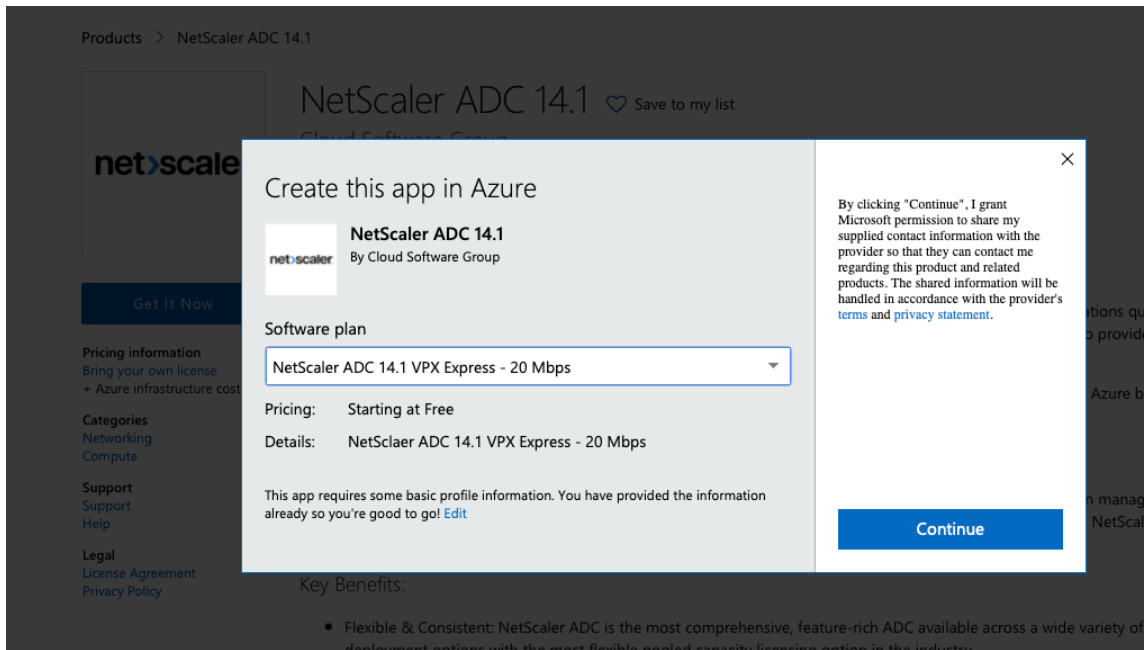

4. The **Basics** page appears. Create a Resource Group. Under the **Parameters** tab, enter details for the Region, Admin user name, Admin Password, license type (VM SKU), and other fields.

[Basics](#) [VM Configurations](#) [Network and Additional Settings](#) [Review + create](#)

Project details
Select the subscription to manage deployed resources and costs. Use resource groups like folders to organize and manage all your resources.

Subscription * ⓘ

Resource group * ⓘ
[Create new](#)

Instance details

Region * ⓘ

Citrix ADC Release Version * ⓘ 12.1 13.0

License Subscription ⓘ Bring Your Own License

Virtual Machine name * ⓘ

Administrator account

Username * ⓘ ✓

Authentication type * ⓘ Password SSH Public Key

Password * ⓘ ✓

Confirm password * ⓘ ✓ ✓ Password

[Review + create](#) [< Previous](#) [Next : VM Configurations >](#)

5. Click **Next : VM Configurations >**.

[Basics](#)
[VM Configurations](#)
[Network and Additional Settings](#)
[Review + create](#)

Project details

Select the subscription to manage deployed resources and costs. Use resource groups like folders to organize and manage all your resources.

Subscription * ⓘ ✓
 Resource group * ⓘ ✓
[Create new](#)

Instance details

Region * ⓘ ✓
 Citrix ADC Release Version * ⓘ 12.1 13.0
 License Subscription ⓘ Bring Your Own License
 Virtual Machine name * ⓘ

Administrator account

Username * ⓘ ✓
 Authentication type * ⓘ Password SSH Public Key
 Password * ⓘ ✓
 Confirm password * ✓ ✔ Password

6. On the **VM Configurations** page, perform the following:

- Configure public IP domain name suffix
- Enable or disable **Azure Monitoring Metrics**
- Enable or disable **Backend Autoscale**

7. Click **Next: Network and Additional settings >**

Virtual machine size * ⓘ	1x Standard DS3 v2 4 vcpus, 14 GB memory Change size
OS disk type ⓘ	<input checked="" type="radio"/> Premium_LRS
Assign Public IP (Management) ⓘ	<input checked="" type="radio"/> Yes
Assign Public IP (Client traffic) ⓘ	<input checked="" type="radio"/> Yes
Unique public IP domain name suffix * ⓘ	<input type="text" value="d7a2c4d49e"/>
Azure Monitoring Metrics ⓘ	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Backend Autoscale ⓘ	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled

[Review + create](#) [< Previous](#) [Next : Network and Additional Settings >](#)

8. On **Network and Additional Settings** page, create Boot diagnostics account and configure the network settings.

Basics VM Configurations **Network and Additional Settings** Review + create

Boot diagnostics

Diagnostics storage account * ⓘ (new) citrixadcvpdx7a2c4d49e [Create New](#)

Network Settings

Configure virtual networks

Virtual network * ⓘ (new) citrix-adc-vpx-virtual-network [Create new](#)

Management Subnet * ⓘ (new) 01-management-subnet (10.17.4.0/24)

Client Subnet * ⓘ (new) 11-client-subnet (10.17.5.0/24)

Server Subnet * ⓘ (new) 12-server-subnet (10.17.6.0/24)

Public IP (Management)

Management Public IP (NSIP) * ⓘ (new) citrix-adc-vpx-nsip [Create new](#)

Management Domain Name ⓘ citrix-adc-vpx-nsip-d7a2c4d49e [.southindia.cloudapp.azure.com](#)

Public IP (Clientside)

Clientside Public IP (VIP) * ⓘ (new) citrix-adc-vpx-vip [Create new](#)

Clientside Domain Name ⓘ citrix-adc-vpx-vip-d7a2c4d49e [.southindia.cloudapp.azure.com](#)

Public Inbound Ports (Management only)

Ports open for Management public IP ⓘ None ssh (22) ssh (22), http (80), https (443)

[Review + create](#) [< Previous](#) [Next : Review + create >](#)


9. Click **Next: Review + create >**.

10. Review the basic settings, VM configuration, network and additional settings, and click **Create**.

It might take a moment for the Azure Resource Group to be created with the required configurations. After completion, select the Resource Group in the Azure portal to see the configuration details, such as LB rules, back-end pools, and health probes. The high availability pair appears as **citrix-adc-vpx-0** and **citrix-adc-vpx-1**.

If further modifications are required for your HA setup, such as creating more security rules and ports, you can do that from the Azure portal.

Once the required configuration is complete, the following resources are created.

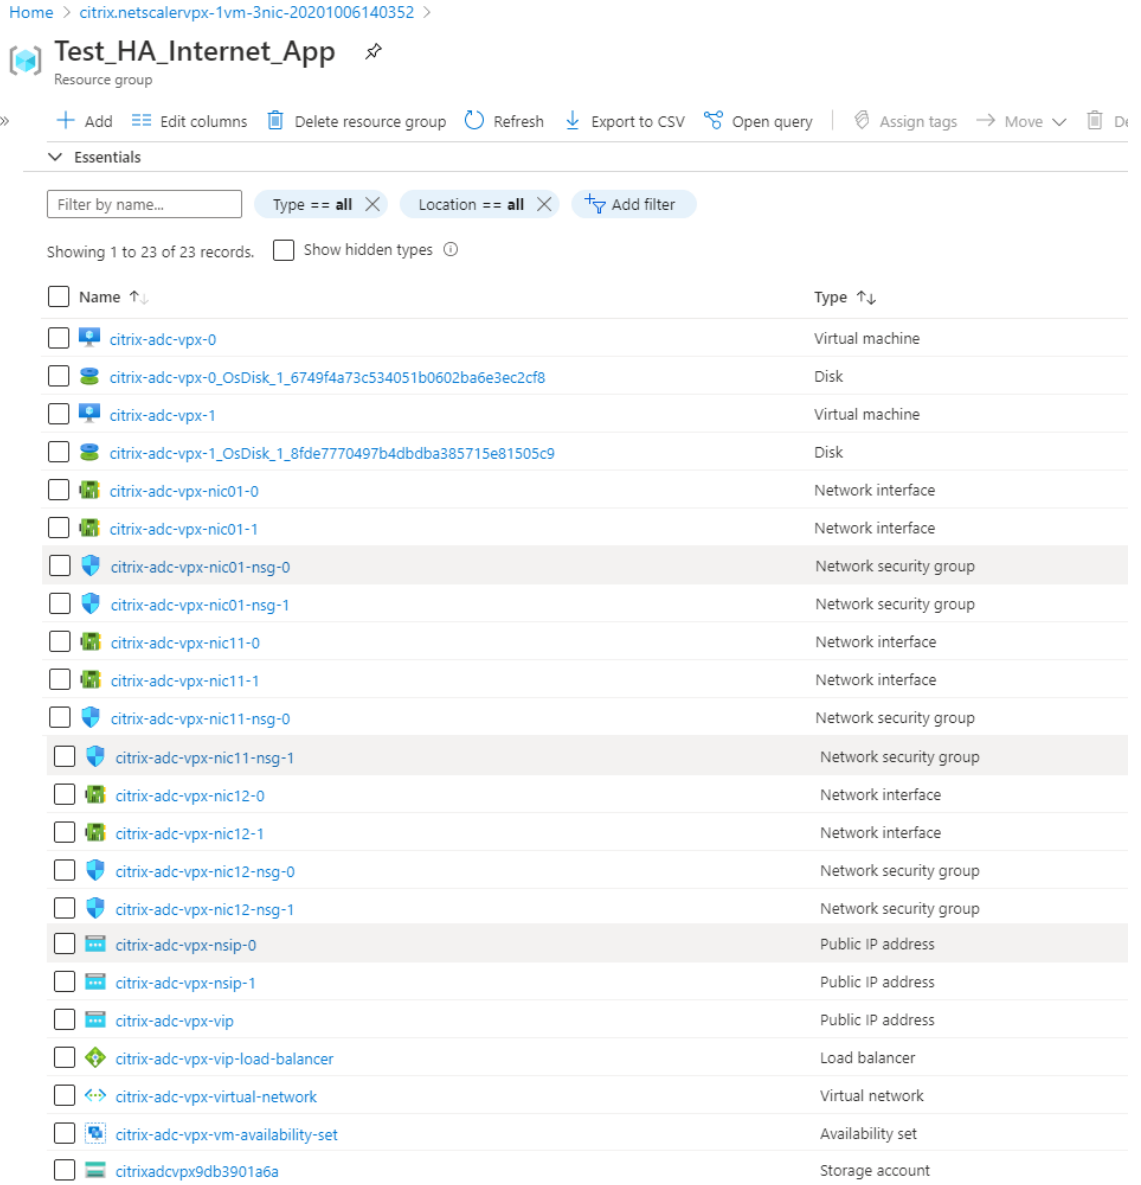

11. You must log on to **citrix-adc-vpx-0** and **citrix-adc-vpx-1** nodes to validate the following configuration:

- NSIP addresses for both nodes must be in the management subnet.
- On the primary (citrix-adc-vpx-0) and secondary (citrix-adc-vpx-1) nodes, you must see two SNIP addresses. One SNIP (client subnet) is used for responding to the ALB probes and the other SNIP (server subnet) is used for back-end server communication.

Note

In the HA-INC mode, the SNIP addresses of the citrix-adc-vpx-0 and citrix-adc-vpx-1 VMs are different, unlike with the classic on-premises ADC high availability deployment where both are the same.

On the primary node (citrix-adc-vpx-0)

```
> sh ip
-----
1) 10.18.0.4      0      NetScaler IP      Active  Enabled  Enabled  NA      Enabled
2) 10.18.1.5      0      SNIP              Active  Enabled  Enabled  NA      Enabled
3) 10.18.2.4      0      SNIP              Active  Enabled  Enabled  NA      Enabled
Done
```

```
> sh ha node
1) Node ID:      0
   IP:          10.18.0.4 (ns-vpx0)
   Node State:  UP
   Master State: Primary
   Fail-Safe Mode: OFF
   INC State:   ENABLED
   Sync State:  ENABLED
   Propagation: ENABLED
   Enabled Interfaces : 0/1 1/1 1/2
   Disabled Interfaces : None
   HA MON ON Interfaces : None
   HA HEARTBEAT OFF Interfaces : None
   Interfaces on which heartbeats are not seen : 1/1 1/2
   Interfaces causing Partial Failure: None
   SSL Card Status: NOT PRESENT
   Sync Status Strict Mode: DISABLED
   Hello Interval: 200 msec
   Dead Interval: 3 sec
   Node in this Master State for: 0:3:34:21 (days:hrs:min:sec)
2) Node ID:      1
   IP:          10.18.0.5
   Node State:  UP
   Master State: Secondary
   Fail-Safe Mode: OFF
   INC State:   ENABLED
   Sync State:  SUCCESS
   Propagation: ENABLED
   Enabled Interfaces : 0/1 1/1 1/2
   Disabled Interfaces : None
   HA MON ON Interfaces : None
   HA HEARTBEAT OFF Interfaces : None
   Interfaces on which heartbeats are not seen : 1/1 1/2
   Interfaces causing Partial Failure: None
   SSL Card Status: NOT PRESENT
Done
```

On the secondary node (citrix-adc-vpx-1)

```
> show ip
-----
1) 10.18.0.5      0      NetScaler IP      Active  Enabled  Enabled  NA      Enabled
2) 10.18.1.4      0      SNIP              Active  Enabled  Enabled  NA      Enabled
3) 10.18.2.5      0      SNIP              Active  Enabled  Enabled  NA      Enabled
Done
>
```



```


> sh ha node
1) Node ID: 0
   IP: 10.18.0.5 (ns-vpx1)
   Node State: UP
   Master State: Secondary
   Fail-Safe Mode: OFF
   INC State: ENABLED
   Sync State: SUCCESS
   Propagation: ENABLED
   Enabled Interfaces : 0/1 1/1 1/2
   Disabled Interfaces : None
   HA MON ON Interfaces : None
   HA HEARTBEAT OFF Interfaces : None
   Interfaces on which heartbeats are not seen : 1/1 1/2
   Interfaces causing Partial Failure: None
   SSL Card Status: NOT PRESENT
   Sync Status Strict Mode: DISABLED
   Hello Interval: 200 msec
   Dead Interval: 3 secs
   Node in this Master State for: 0:3:23:51 (days:hrs:min:sec)
2) Node ID: 1
   IP: 10.18.0.4
   Node State: UP
   Master State: Primary
   Fail-Safe Mode: OFF
   INC State: ENABLED
   Sync State: ENABLED
   Propagation: ENABLED
   Enabled Interfaces : 0/1 1/1 1/2
   Disabled Interfaces : None
   HA MON ON Interfaces : None
   HA HEARTBEAT OFF Interfaces : None
   Interfaces on which heartbeats are not seen : 1/1 1/2
   Interfaces causing Partial Failure: None
   SSL Card Status: NOT PRESENT
Done
>

```

12. After the primary and secondary nodes are UP and the Synchronization status is **SUCCESS**, you must configure the load balancing virtual server or the gateway virtual server on the primary node (citrix-adc-vpx-0) with the public IP address of the ALB virtual server. For more information, see the [Sample configuration](#) section.
13. To find the public IP address of ALB virtual server, navigate to **Azure portal > Azure Load Balancer > Frontend IP configuration**.



14. Add the inbound security rule for virtual server port 443 on the network security group of both the client interfaces.

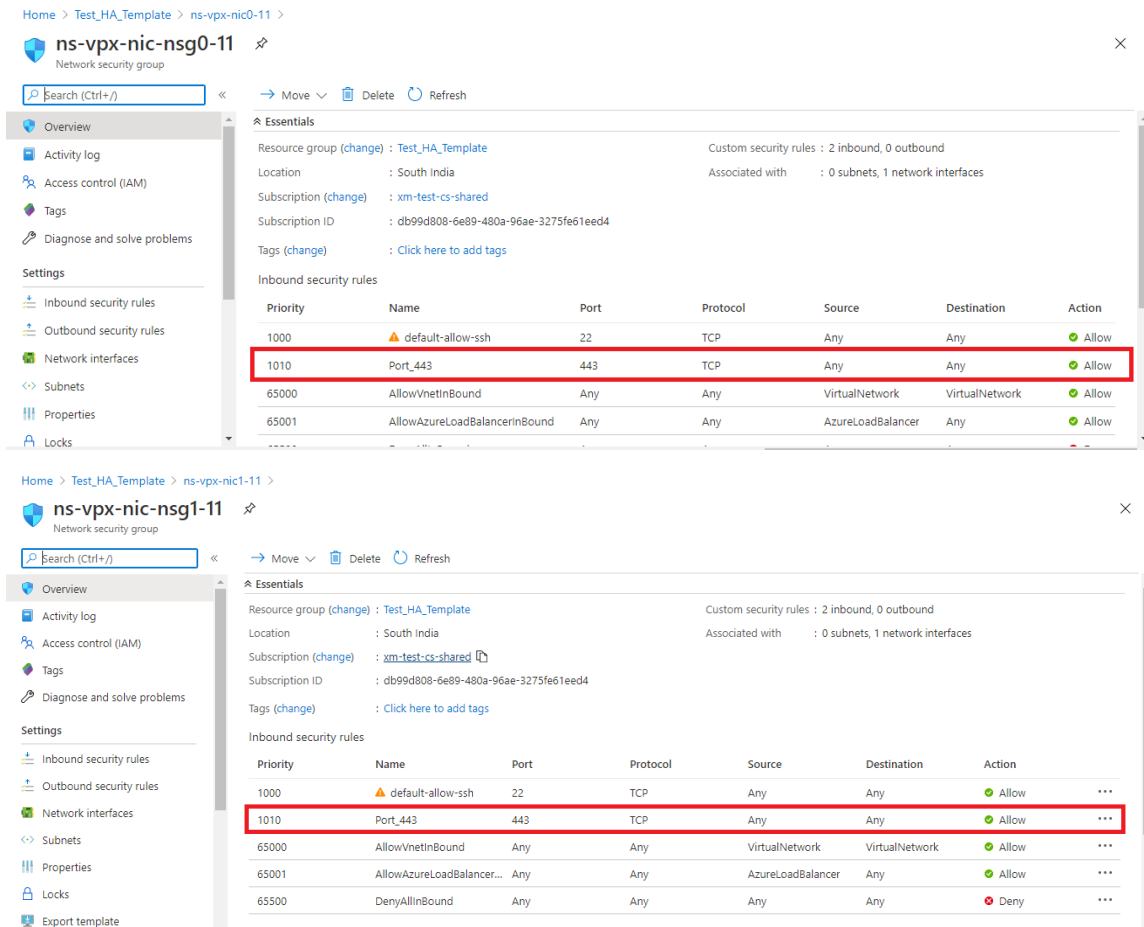

- Configure the ALB port that you want to access, and create inbound security rule for the specified port. The Backend port is your load balancing virtual server port or the VPN virtual server port.

Microsoft Azure

Home > Test_HA_Template > alb >

lbRule1

alb

Save Discard Delete

Version

IPv4 IPv6

Frontend IP address * ⓘ
52.172.55.197 (jipconf-11) ▼

Protocol
 TCP UDP

Port *
443

Backend port * ⓘ
443

Backend pool ⓘ
bepool-11 (2 virtual machines) ▼


Health probe ⓘ
probe-11 (TCP:9000) ▼

Session persistence ⓘ
None ▼

Idle timeout (minutes) ⓘ
4

Floating IP (direct server return) ⓘ
Enabled

16. Now, you can access the load balancing virtual server or the VPN virtual server using the fully qualified domain name (FQDN) associated with the ALB public IP address.

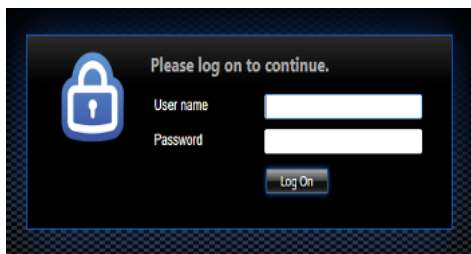

Sample configuration

To configure a gateway VPN virtual server and load balancing virtual server, run the following commands on the primary node (ADC-VPX-0). The configuration auto synchronizes to the secondary node (ADC-VPX-1).

Gateway sample configuration

```
1 enable feature aaa LB SSL SSLVPN
2 add ip 52.172.55.197 255.255.255.0 -type VIP
3 add vpn vserver vpn_ssl SSL 52.172.55.197 443
4 add ssl certKey ckp -cert cgwsanity.cer -key cgwsanity.key
5 bind ssl vserver vpn_ssl -certkeyName ckp
```

Load balancing sample configuration

```
1 enable feature LB SSL
2 enable ns mode MBF
3 add lb vserver lb_vs1 SSL 52.172.55.197 443
4 bind ssl vserver lb_vs1 -certkeyName ckp
```

You can now access the load balancing or VPN virtual server using the FQDN associated with the public IP address of ALB.

See the **Resources** section for more information about how to configure the load balancing virtual server.

Resources:

The following links provide additional information related to HA deployment and virtual server configuration:

- [Create virtual servers](#)
- [Set up basic load balancing](#)

Configure a high-availability setup with Azure external and internal load balancers simultaneously

May 2, 2023

The high availability pair on Azure supports both external and internal load balancers simultaneously.

You have the following two options to configure a high availability pair using both Azure external and internal load balancers:

- Using two LB virtual servers on the NetScaler appliance.
- Using one LB virtual server and an IP set. The single LB virtual server serves traffic to multiple IPs, which are defined by the IPset.

Perform the following steps to configure a high availability pair on Azure using both the external and internal load balancers simultaneously:

For Steps 1 and 2, use the Azure portal. For Steps 3 and 4, use the NetScaler VPX GUI or the CLI.

Step 1. Configure an Azure load balancer, either an external load balancer or an internal load balancer.

For more information on configuring high-availability setup with Azure external load balancers, see [Configure a high-availability setup with multiple IP addresses and NIC](#).

For more information on configuring high-availability setup with Azure internal load balancers, see [Configure HA-INC nodes by using the NetScaler high availability template with Azure ILB](#).

Step 2. Create an extra load balancer (ILB) in your resource group. In Step 1, if you have created an external load balancer, you now create an internal load balancer and conversely.

- To create an internal load balancer, choose the load balancer type as **Internal**. For the **Subnet** field, you must choose your NetScaler client subnet. You can choose to provide a static IP address in that subnet, provided there are no conflicts. Otherwise, choose the dynamic IP address.

[Home](#) > [ansible_rg_ganeshb_1611818039](#) > [New](#) > [Load Balancer](#) >

Create load balancer

Project details

Subscription *

Resource group * [Create new](#)

Instance details

Name * ✓

Region *

Type * ⓘ Internal Public

SKU * ⓘ Basic Standard

Configure virtual network.

Virtual network * ⓘ

Subnet * [Manage subnet configuration](#)

IP address assignment * Static Dynamic

[Review + create](#)

[< Previous](#)

[Next : Tags >](#)

[Download a template for automation](#)

- To create an external load balancer, choose the load balancer type as **Public** and create the public IP address here.

Microsoft Azure Search resources, services, and docs (G+/)

Home > Load balancing - help me choose (Preview) >

Create load balancer ...

Type * ⓘ Internal Public

SKU * ⓘ Standard Basic

i Microsoft recommends Standard SKU load balancer for production workloads. [Learn more about pricing differences between Standard and Basic SKU](#)

Tier * Regional Global

Public IP address

Public IP address * ⓘ Create new Use existing

Public IP address name *

Public IP address SKU Standard

IP address assignment Dynamic Static

Availability zone *

Add a public IPv6 address ⓘ No Yes

Routing preference ⓘ Microsoft network Internet

[Review + create](#) [< Previous](#) [Next : Tags >](#) [Download a template for automation](#)

1. After you have created the Azure Load Balancer, navigate to **Frontend IP configuration** and note down the IP address shown here. You must use this IP address while creating the ADC load balancing virtual server as in Step 3.



2. In the **Azure Load Balancer configuration** page, the ARM template deployment helps create the LB rule, back-end pools, and health probes.
3. Add the high availability pair client NICs to the backend pool for the ILB.
4. Create a health probe (TCP, 9000 port)
5. Create two load balancing rules:
 - One LB rule for HTTP traffic (webapp use case) on port 80. The rule must also use the backend port 80. Select the created backend pool and the health probe. Floating IP must be enabled.
 - Another LB rule for HTTPS or CVAD traffic on port 443. The process is the same as the HTTP traffic.

Step 3. On the primary node of NetScaler appliance, create a load balancing virtual server for ILB.

1. Add a load balancing virtual server.

```
1 add lb vsrver <name> <serviceType> [<ILB Frontend IP address>] [<port>]
```

Example:

```
1 add lb vsrver vsrver_name HTTP 52.172.96.71 80
```

Note:

Use the load balancer frontend IP address, which is associated with the additional Load balancer that you create in Step 2.

2. Bind a service to a load balancing virtual server.

```
1 bind lb vservice <name> <serviceName>
```

Example:

```
1 bind lb vservice Vserver-LB-1 Service-HTTP-1
```

For more information, see [Set up basic load balancing](#)

Step 4: As an alternative to Step 3, you can create a load balancing virtual server for ILB using IPsets.

1. Add an IP address of type virtual server IP (VIP).

```
1 add nsip <ILB Frontend IP address> -type <type>
```

Example:

```
1 add nsip 52.172.96.71 -type vip
```

2. Add an IPset on both primary and secondary nodes.

```
1 add ipset <name>
```

Example:

```
1 add ipset ipset1
```

3. Bind IP addresses to the IP set.

```
1 bind ipset <name> <ILB Frontend IP address>
```

Example:

```
1 bind ipset ipset1 52.172.96.71
```

4. Set the existing LB virtual server to use the IPset.

```
1 set lb vservice <vserver name> -ipset <ipset name>
```

Example:

```
1 set lb vservice vserver_name -ipset ipset1
```

For more information, see [Configure a multi-IP virtual server](#).

Install a NetScaler VPX instance on Azure VMware Solution


October 26, 2023

Azure VMware Solution (AVS) provides you with private clouds that contain vSphere clusters, built from dedicated bare-metal Azure infrastructure. The minimum initial deployment is three hosts, but additional hosts can be added one at a time, up to a maximum of 16 hosts per cluster. All provisioned private clouds have vCenter Server, vSAN, vSphere, and NSX-T.

The VMware Cloud (VMC) on Azure enables you to create cloud software-defined data centers (SDDC) on Azure with the number of ESX hosts that you want. The VMC on Azure supports NetScaler VPX deployments. VMC provides a user interface same as on-prem vCenter. It functions similar to the ESX-based NetScaler VPX deployments.

The following diagram shows the Azure VMware solution on the Azure public cloud that an administrator or a client can access over the internet. An administrator can create, manage, and configure workload or server VMs using Azure VMware solution. The admin can access the AVS’s web-based vCenter and NSX-T Manager from a Windows Jumpbox. You can create the NetScaler VPX instances (stand-alone or high availability pair) and server VMs within Azure VMware Solution using vCenter, and manage the corresponding networking using NSX-T manager. The NetScaler VPX instance on AVS works similar to the on-prem VMware cluster of hosts. AVS is managed from a Windows Jumpbox that is created in the same virtual network.

A client can only access the AVS service by connecting to the VIP of ADC. Another NetScaler VPX instance outside Azure VMware Solution but in the same Azure virtual network helps add the VIP of the NetScaler VPX instance within Azure VMware Solution as a service. As per requirement, you can configure the NetScaler VPX instance to provide service over the internet.

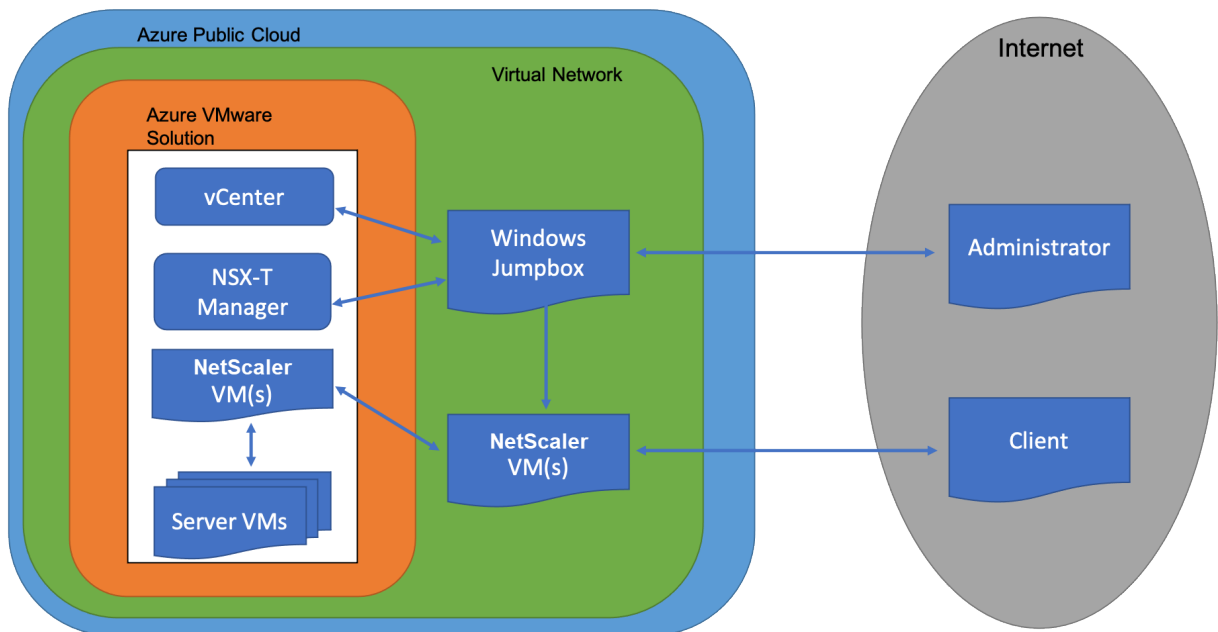

Prerequisites

Before you begin installing a virtual appliance, do the following:

- For more information on Azure VMware solution and its prerequisites, see [Azure VMware Solution documentation](#).
- For more information on deploying Azure VMware solution, see [Deploy an Azure VMware Solution private cloud](#).
- For more information on creating a Windows Jump box VM to access and manage Azure VMware Solution, see [Access an Azure VMware Solution private cloud](#)
- In Windows Jump box VM, download the NetScaler VPX appliance setup files.
- Create appropriate NSX-T network segments on VMware SDDC to which the virtual machines connect. For more information, see [Add a network segment in Azure VMware Solution](#)
- Obtain VPX license files.
- Virtual machines (VMs) created or migrated to the Azure VMware Solution private cloud must be attached to a network segment.

VMware cloud hardware requirements

The following table lists the virtual computing resources that the VMware SDDC must provide for each VPX nCore virtual appliance.

Table 1. Minimum virtual computing resources required for running a NetScaler VPX instance

Component	Requirement
Memory	2 GB
Virtual CPU (vCPU)	2
Virtual network interfaces	In VMware SDDC, you can install a maximum of 10 virtual network interfaces if the VPX hardware is upgraded to version 7 or higher.
Disk space	20 GB

Note

This is in addition to any disk requirements for the hypervisor.

For production use of the VPX virtual appliance, the full memory allocation must be reserved.

OVF Tool 1.0 system requirements

OVF Tool is a client application that can run on Windows and Linux systems. The following table describes the system requirements for installing OVF tool.

Table 2. System requirements for OVF tool installation

Component	Requirement
Operating system	For detailed requirements from VMware, search for the “OVF Tool User Guide” PDF file at http://kb.vmware.com/ .
CPU	750 MHz minimum, 1 GHz or faster recommended
RAM	1 GB Minimum, 2 GB recommended
NIC	100 Mbps or faster NIC

For information about installing OVF, search for the “OVF Tool User Guide” PDF file at <http://kb.vmware.com/>.

Downloading the NetScaler VPX setup files

The NetScaler VPX instance setup package for VMware ESX follows the Open Virtual Machine (OVF) format standard. You can download the files from the Citrix website. You need a Citrix account to log on. If you do not have a Citrix account, access the home page at <http://www.citrix.com>. Click the **New Users link**, and follow the instructions to create a new Citrix account.

Once logged on, navigate the following path from the Citrix home page:

Citrix.com > **Downloads** > **NetScaler** > **Virtual Appliances**.


Copy the following files to a workstation on the same network as the ESX server. Copy all three files into the same folder.

- NSVPX-ESX-<release number>-<build number>-disk1.vmdk (for example, NSVPX-ESX-13.0-79.64-disk1.vmdk)
- NSVPX-ESX-<release number>-<build number>.ovf (for example, NSVPX-ESX-13.0-79.64.ovf)
- NSVPX-ESX-<release number>-<build number>.mf (for example, NSVPX-ESX-13.0-79.64.mf)

Deploy Azure VMware solution

1. Log in to your [Microsoft Azure portal](#), and navigate to **Azure Marketplace**.

2. From the **Azure Marketplace**, search **Azure VMware Solution** and click **Create**.

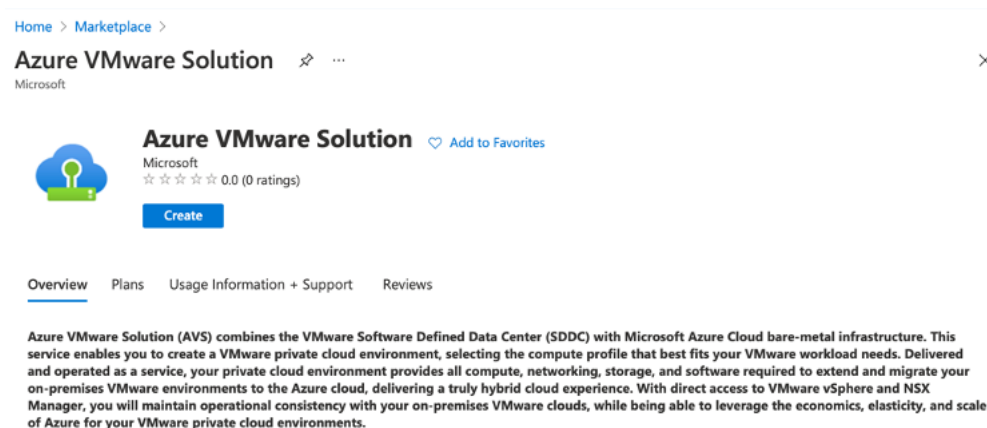

3. In the **Create a private cloud** page, enter the following details:

- Select a minimum of 3 ESXi hosts to create the default cluster of your private cloud.
- For the **Address block** field, use **/22** address space.
- For the **Virtual Network**, make sure that the CIDR range doesn't overlap with any of your on-premises or other Azure subnets (virtual networks) or with the gateway subnet.
- Gateway subnet is used to express route the connection with private cloud.

[Home](#) >

Create a private cloud

Azure settings

Subscription * ⓘ

Resource group * ⓘ
[Create new](#)

Location * ⓘ

General

Resource name * ⓘ

SKU * ⓘ

ESXi hosts * ⓘ


\$11,929.68
estimated monthly total

Address block * ⓘ


Virtual Network
[Create new](#)
Only Virtual Networks with a valid subnet with the name "GatewaySubnet" are available for selection. For details about adding subnet in a virtual network, refer to details [here](#)

[Review + create](#) [Previous](#) [Next : Tags >](#)


4. Click **Review + Create**.
5. Review the settings. If you must change any settings, click **Previous**.

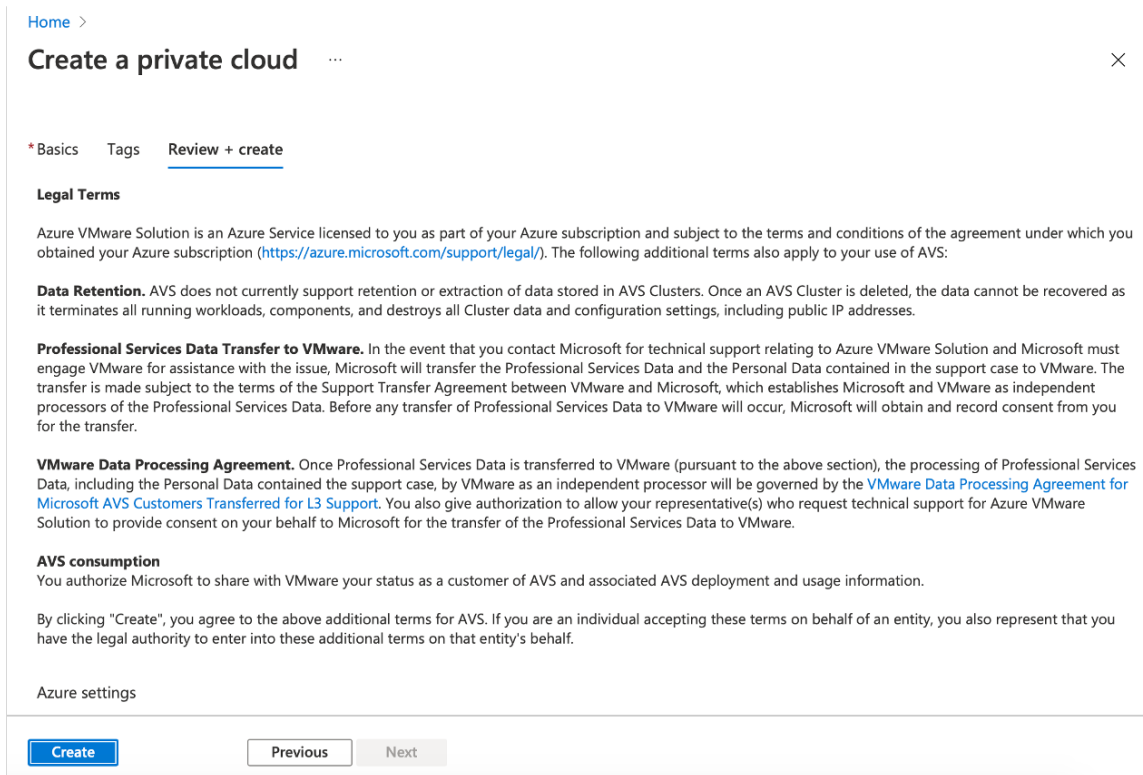

6. Click **Create**. Private cloud provisioning process starts. It can take up to two hours for the private cloud to be provisioned.

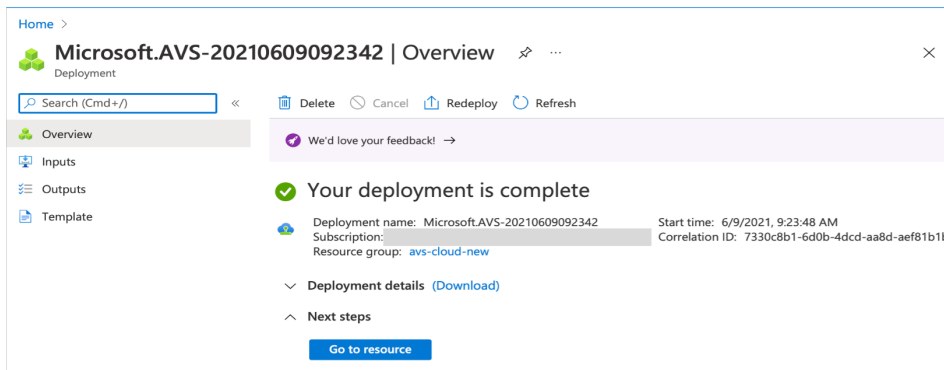

7. Click **Go to resource**, to verify the private cloud that is created.

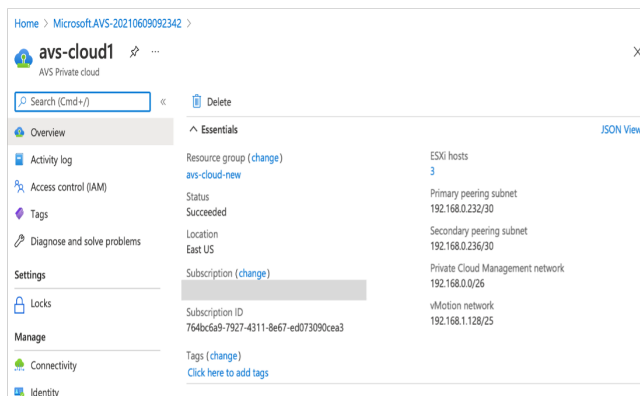

Note


To access this resource, you need a VM in Windows that acts as a Jump box.

Connect to an Azure virtual machine running Windows


This procedure shows you how to use the Azure portal to deploy a virtual machine (VM) in Azure that runs Windows Server 2019. To see your VM in action, you then RDP to the VM and install the IIS web server.

To access the private cloud that you have created, you need to create a Windows Jump box within the same virtual network.

1. Go to the **Azure portal**, and click **Create a Resource**.

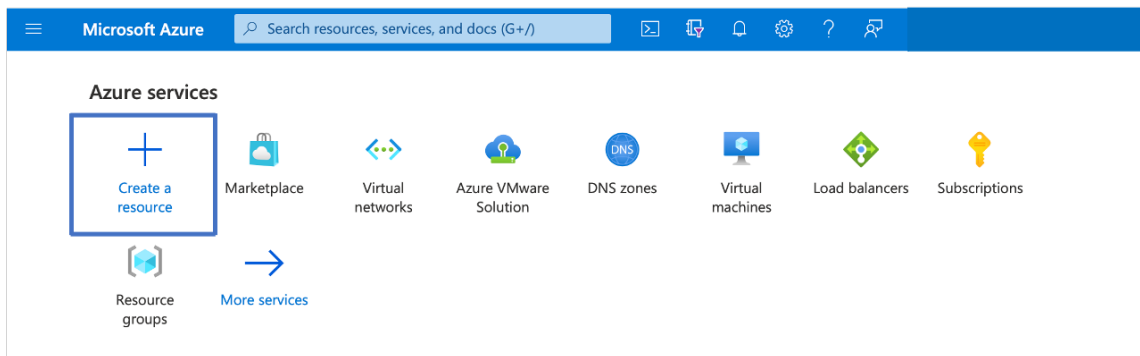

2. Search for **Microsoft Windows 10**, and click **Create**.

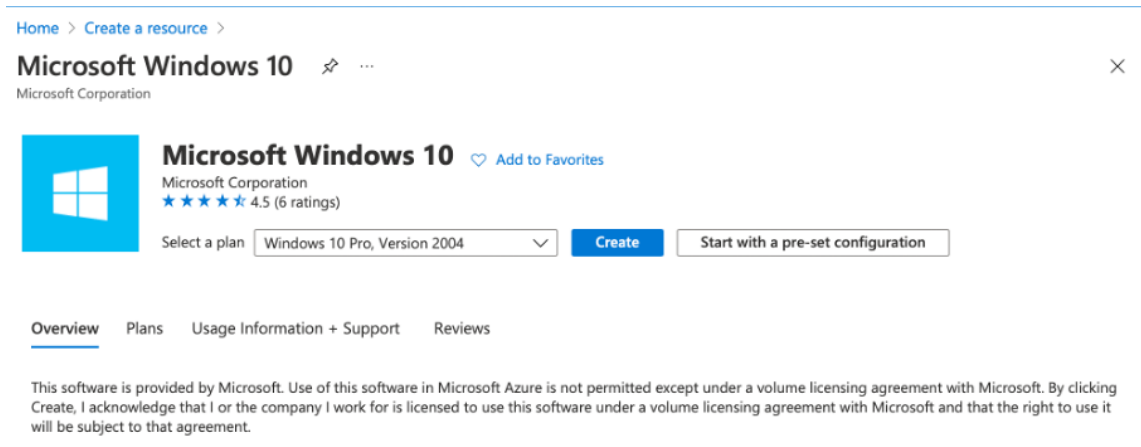

3. Create a virtual machine (VM) that runs Windows Server 2019. The **Create a virtual machine** page appears. Enter all the details in **Basics** tab, and select the **Licensing** check box. Leave the remaining defaults and then select the **Review + create** button at the bottom of the page.

Home > Create a resource > Microsoft Windows 10 >

Create a virtual machine

Basics Disks Networking Management Advanced Tags Review + create

Create a virtual machine that runs Linux or Windows. Select an image from Azure marketplace or use your own customized image. Complete the Basics tab then Review + create to provision a virtual machine with default parameters or review each tab for full customization. [Learn more](#)

Project details

Select the subscription to manage deployed resources and costs. Use resource groups like folders to organize and manage all your resources.

Subscription *

Resource group * [Create new](#)

Instance details

Virtual machine name *

Region *

Availability options

Image * [See all images](#)

Azure Spot instance

Size * [See all sizes](#)

Administrator account

Username *

Password *

Confirm password *

Inbound port rules

Select which virtual machine network ports are accessible from the public internet. You can specify more limited or granular network access on the Networking tab.

Public inbound ports * None Allow selected ports

Select inbound ports *

⚠ This will allow all IP addresses to access your virtual machine. This is only recommended for testing. Use the Advanced controls in the Networking tab to create rules to limit inbound traffic to known IP addresses.

Licensing

I confirm I have an eligible Windows 10 license with multi-tenant hosting rights. [Review multi-tenant hosting rights for Windows 10 compliance](#)

[Review + create](#) < Previous Next: Disks >

4. After validation runs, select the **Create** button at the bottom of the page.
5. After the deployment is complete, select **Go to resource**.
6. Go to the Windows VM that you have created. Use the public IP address of the Windows VM and connect using RDP.


Use the **Connect** button in the Azure portal to start a Remote Desktop (RDP) session from a Windows desktop. First you connect to the virtual machine, and then you sign on.

To connect to a Windows VM from a Mac, you must install an RDP client for Mac such as Microsoft


Remote Desktop. For more information, see [How to connect and sign on to an Azure virtual machine running Windows](#).

Access your Private Cloud vCenter portal


1. In your Azure VMware Solution private cloud, under **Manage**, select **Identity**. Make note of the vCenter credentials.

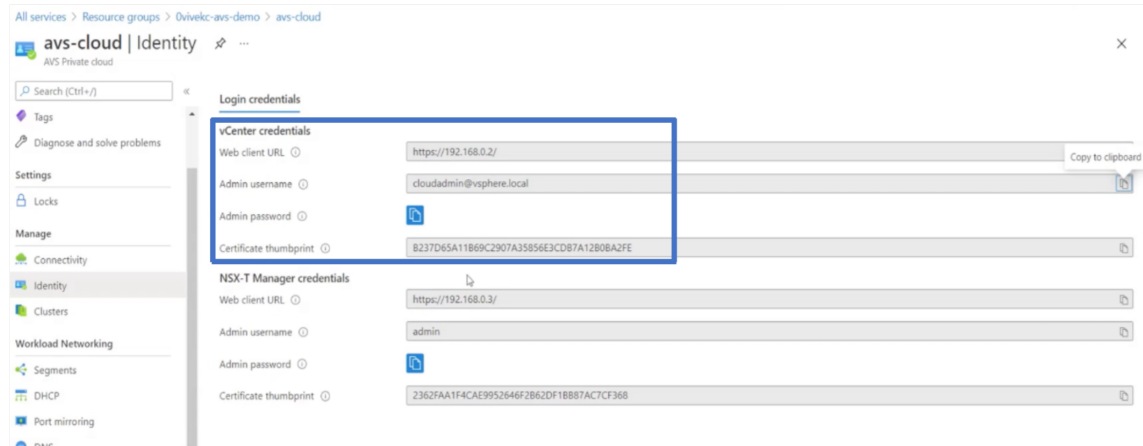


2. Launch the vSphere client by typing the vCenter web client URL.

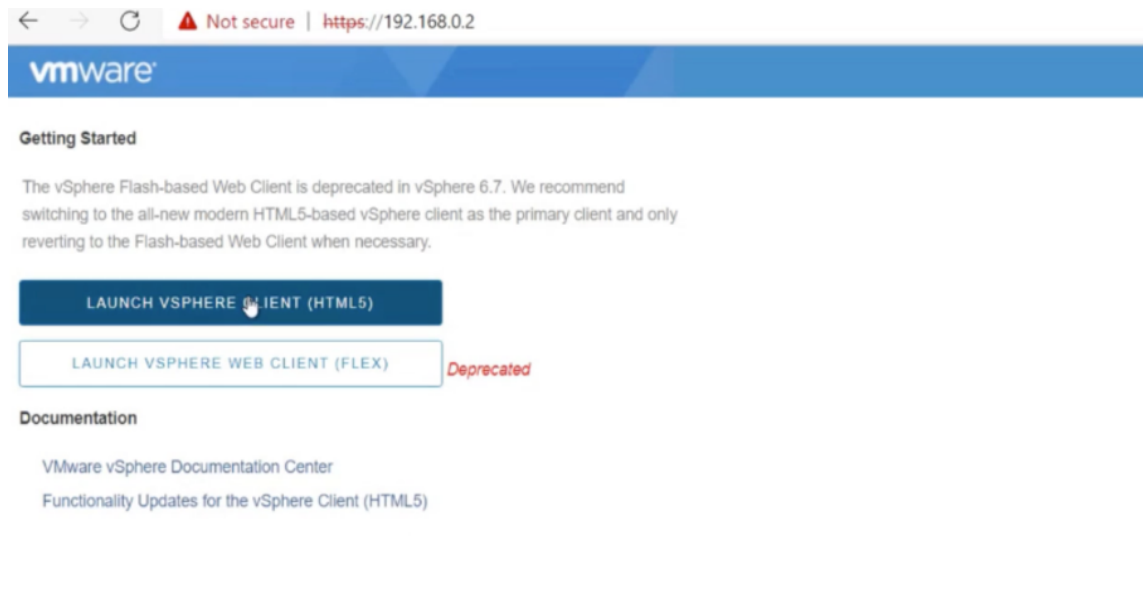

3. Log in to VMware vSphere using the vCenter credentials of your Azure VMware Solution private cloud.

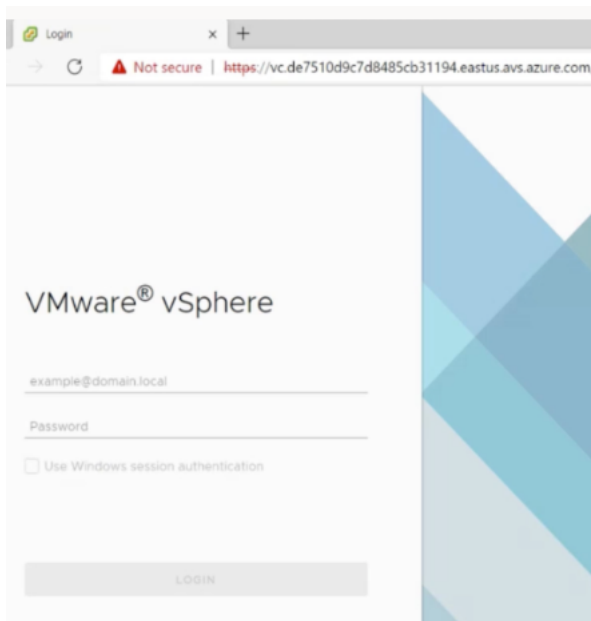

4. In the vSphere client, you can verify the ESXi hosts that you created in Azure portal.

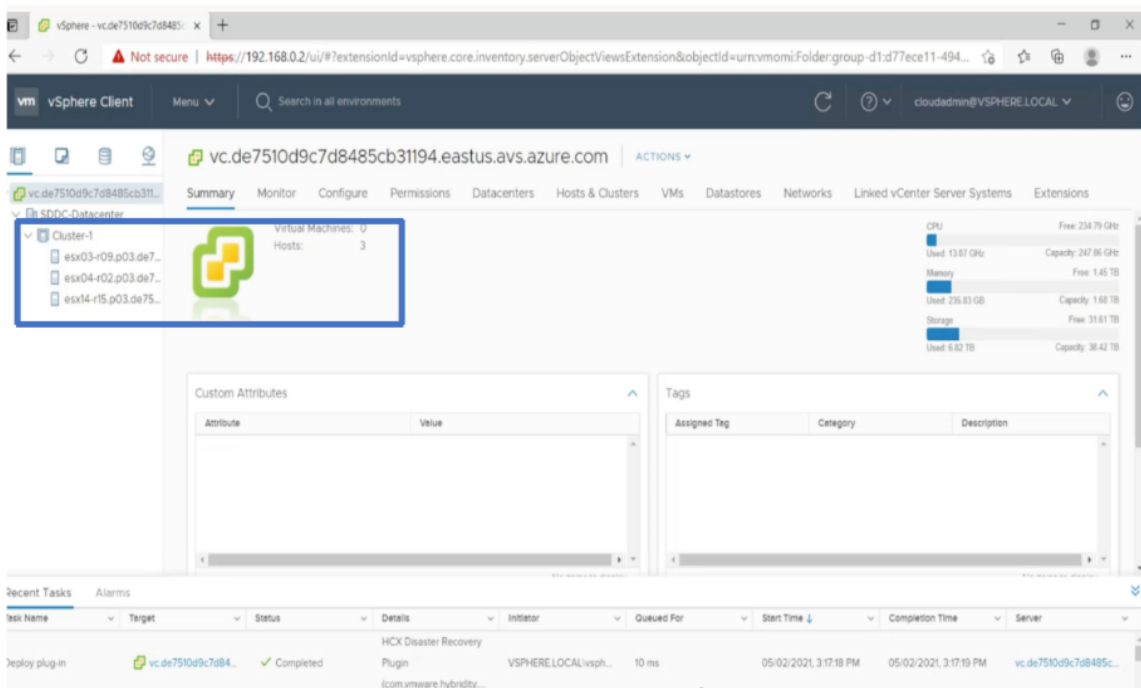


For more information, see [Access your Private Cloud vCenter portal.](#)

Create an NSX-T segment in the Azure portal


You can create and configure an NSX-T segment from the Azure VMware Solution console in the Azure portal. These segments are connected to the default Tier-1 gateway, and the workloads on these seg-

ments get East-West and North-South connectivity. Once you create the segment, it displays in NSX-T Manager and vCenter.


1. In your Azure VMware Solution private cloud, under **Workload Networking**, select **Segments > Add**. Provide the details for the new logical segment and select **OK**. You can create three separate segments for Client, Management, and Server interfaces.

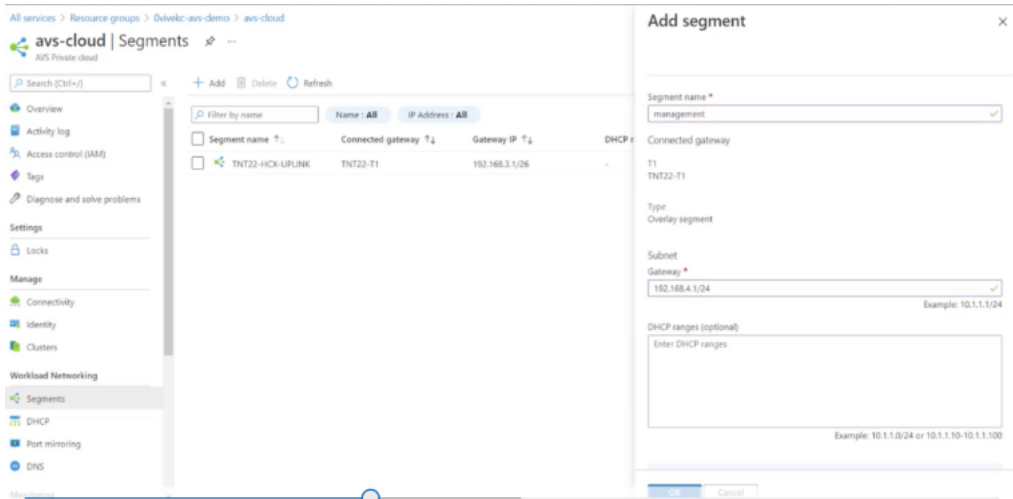


2. In your Azure VMware Solution private cloud, under **Manage**, select **Identity**. Make note of the NSX-T Manager credentials.

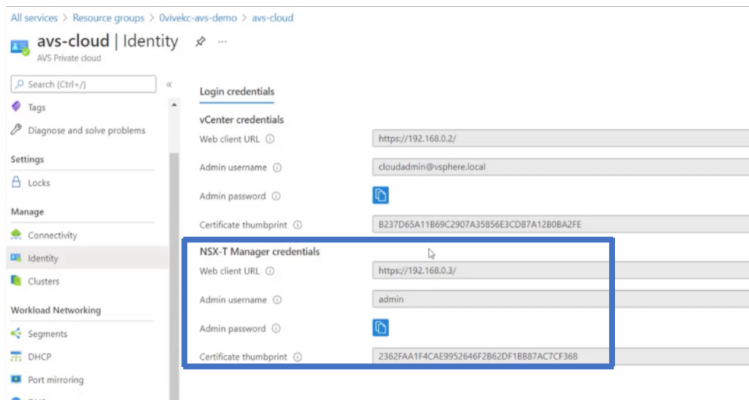

3. Launch the VMware NSX-T Manager by typing the NSX-T web client URL.

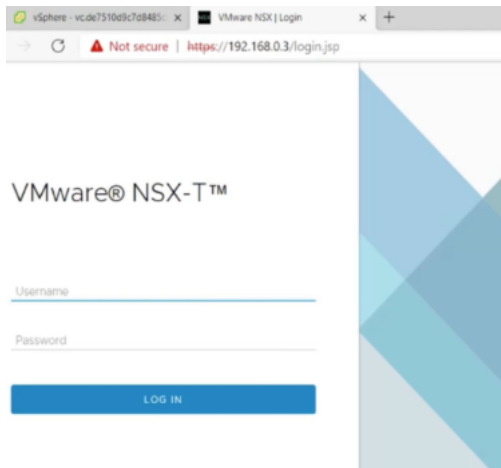

4. In the NSX-T manager, under **Networking > Segments**, you can see all the segments that you have created. You can also verify the subnets.

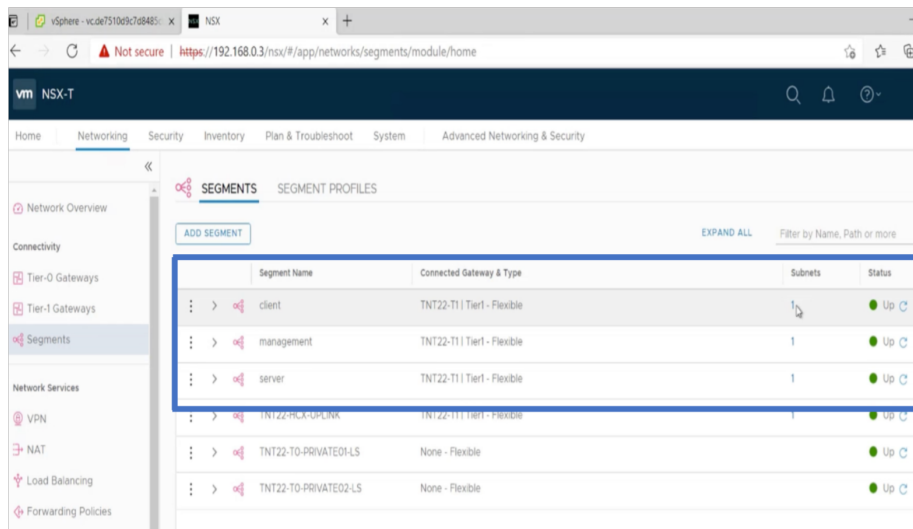

For more information, see [Create an NSX-T segment in the Azure portal](#).

Install a NetScaler VPX instance on VMware cloud

After you have installed and configured VMware Software-Defined Data Center (SDDC), you can use the SDDC to install virtual appliances on the VMware cloud. The number of virtual appliances that you can install depends on the amount of memory available on the SDDC.

To install NetScaler VPX instances on VMware cloud, perform these steps in Windows Jumpbox VM:


1. Download the NetScaler VPX instance setup files for ESXi host from the NetScaler downloads site.
2. Open VMware SDDC in the Windows Jumpbox.

3. In the **User Name** and **Password** fields, type the administrator credentials, and then click **Login**.
4. On the **File** menu, click **Deploy OVF Template**.
5. In the **Deploy OVF Template** dialog box, in **Deploy from file** field, browse to the location at which you saved the NetScaler VPX instance setup files, select the .ovf file, and click **Next**.


Note:

By default, the NetScaler VPX instance uses E1000 network interfaces. To deploy ADC with the VMXNET3 interface, modify the OVF to use VMXNET3 interface instead of E1000. Availability of VMXNET3 interface is limited by Azure infrastructure and might not be available in Azure VMware Solution.


6. Map the networks shown in the virtual appliance OVF template to the networks that you configured on the VMware SDDC. Click **OK**.

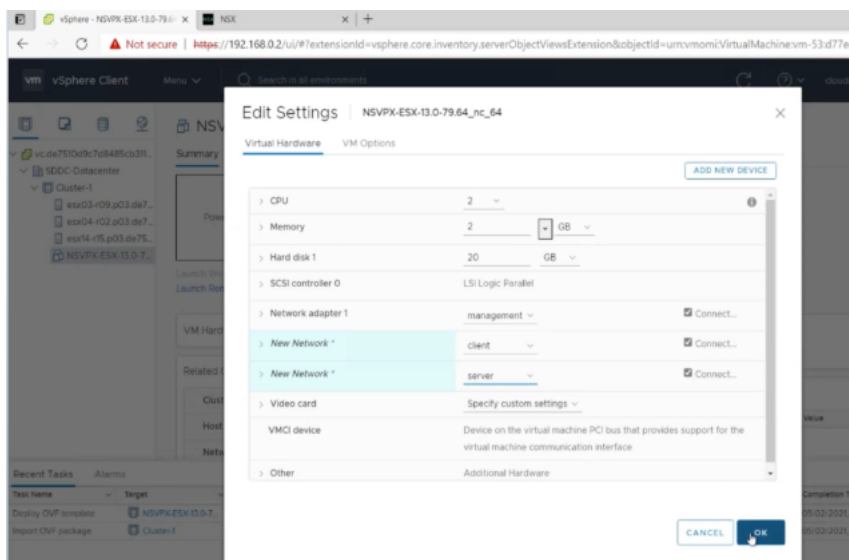


7. Click **Finish** to start installing a virtual appliance on VMware SDDC.

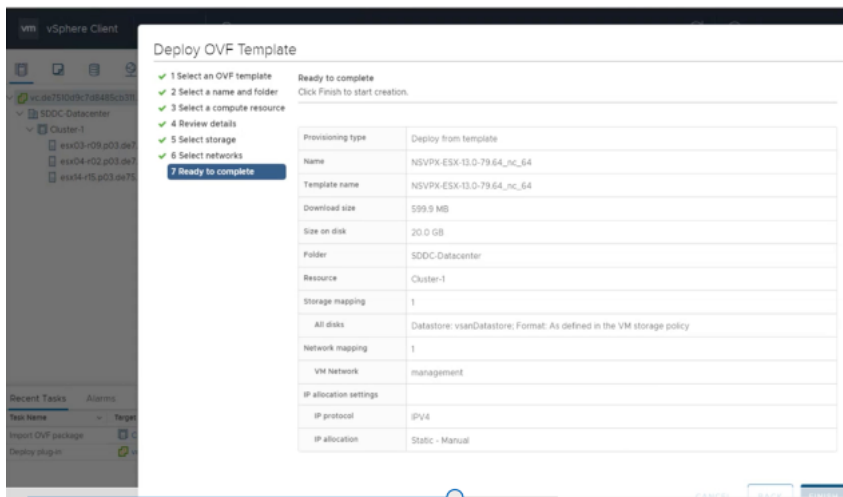

8. You are now ready to start the NetScaler VPX instance. In the navigation pane, select the NetScaler VPX instance that you have installed and, from the right-click menu, select **Power On**. Click the **Console** tab to emulate a console port.

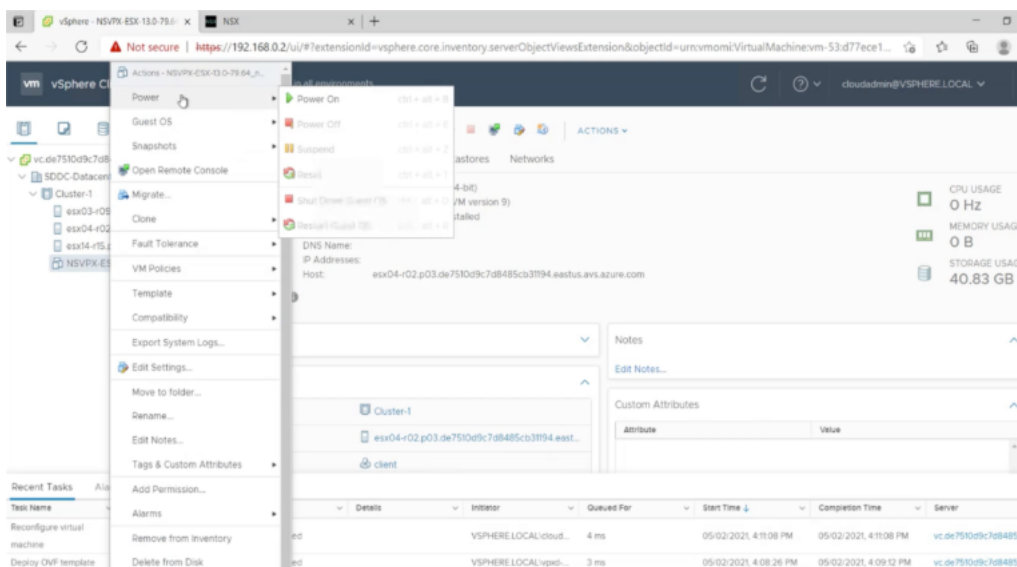

9. You are now connected to the NetScaler VM from the vSphere client.

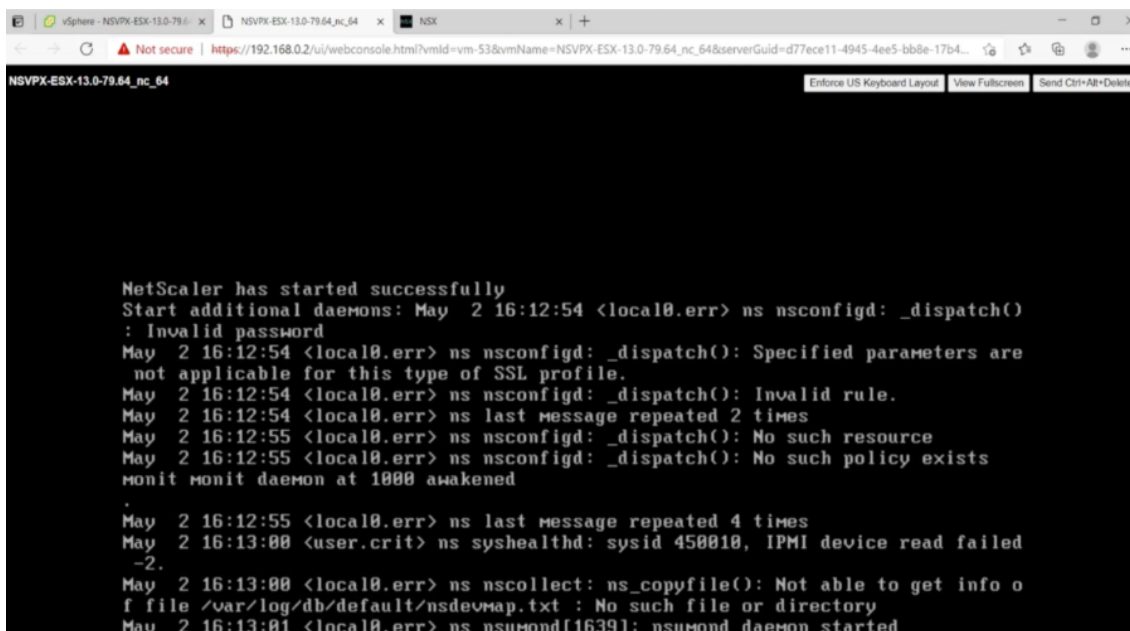


10. To access the NetScaler appliance by using the SSH keys, type the following command in the CLI:

```
1 ssh nsroot@<management IP address>
```

Example:

```
1 ssh nsroot@192.168.4.5
```

11. You can verify the ADC configuration by using the `show ns ip` command.

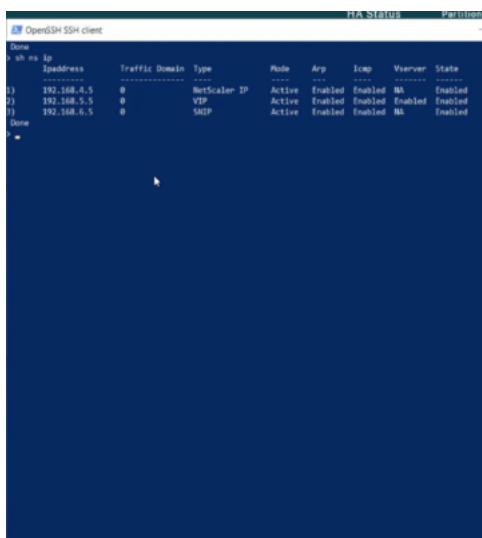


Configure a NetScaler VPX standalone instance on Azure VMware solution

May 2, 2023

You can configure a NetScaler VPX standalone instance on Azure VMware solution (AVS) for internet facing applications.

The following diagram shows the NetScaler VPX standalone instance on Azure VMware Solution. A client can access the AVS service by connecting to the virtual IP (VIP) address of NetScaler inside the AVS. You can achieve this by provisioning a NetScaler load balancer or the Azure load balancer instance outside AVS but in the same Azure virtual network. Configure the load balancer to access the VIP of the NetScaler VPX instance within AVS service.

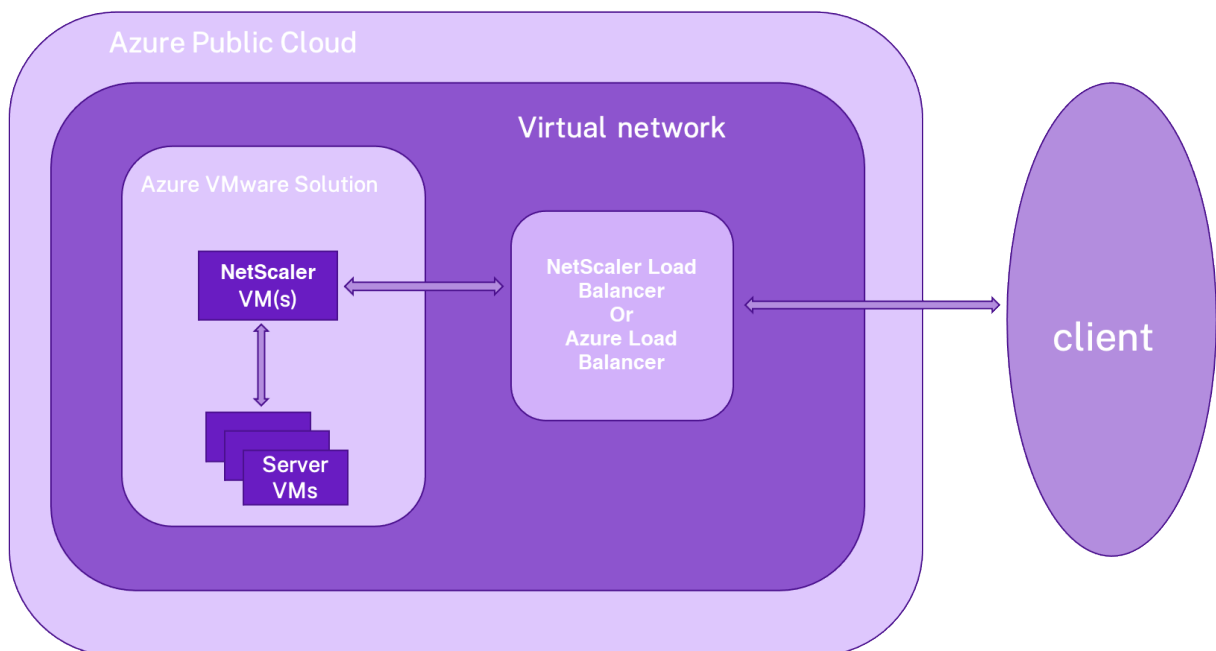

Prerequisites

Before you begin installing a virtual appliance, read the following Azure prerequisites:

- For more information on Azure VMware solution and its prerequisites, see [Azure VMware Solution documentation](#).
- For more information on deploying Azure VMware solution, see [Deploy an Azure VMware Solution private cloud](#).
- For more information on creating a Windows Jump box VM to access and manage Azure VMware Solution, see [Access an Azure VMware Solution private cloud](#).

- In Windows Jump box VM, download the NetScaler VPX appliance setup files.
- Create appropriate NSX-T network segments on VMware SDDC to which the virtual machines connect. For more information, see [Add a network segment in Azure VMware Solution](#)
- For more information on how to install a NetScaler VPX instance on VMware cloud, see [Install a NetScaler VPX instance on VMware cloud](#).

Configure a NetScaler VPX standalone instance on AVS using the NetScaler load balancer

Follow these steps to configure the NetScaler VPX standalone instance on AVS for internet facing applications using the NetScaler load balancer.

1. Deploy a NetScaler VPX instance on the Azure cloud. For more information, see [Configure a NetScaler VPX standalone instance](#).

Note:

Ensure that it is deployed on the same virtual network as the Azure VMware Cloud.

2. Configure the NetScaler VPX instance to access the VIP address of NetScaler VPX deployed on AVS.

- a) Add a load balancing virtual server.

```
1 add lb vserver <name> <serviceType> [<vip>] [<port>]
```

Example:

```
1 add lb vserver lb1 HTTPS 172.31.0.6 443
```

- b) Add a service that connects to the VIP of NetScaler VPX deployed on AVS.

```
1 add service <name> <ip> <serviceType> <port>
```

Example:

```
1 add service webserver1 192.168.4.10 HTTP 80
```

- c) Bind a service to the load balancing virtual server.

```
1 bind lb vserver <name> <serviceName>
```

Example:

```
1 bind lb vserver lb1 webserver1
```

Configure NetScaler VPX standalone instance on AVS using the Azure load balancer

Follow these steps to configure the NetScaler VPX standalone instance on AVS for internet facing applications using the Azure load balancer.

1. Configure an Azure Load Balancer instance on Azure cloud. For more information, see [Azure documentation on creating load balancer](#).
2. Add the VIP address of the NetScaler VPX instance that is deployed on AVS to the back-end pool.

The following Azure command adds one back-end IP address into the load balance back-end address pool.

```
1 az network lb address-pool address add
2                               --resource-group <Azure VMC
3                               Resource Group>
4                               --lb-name <LB Name>
5                               --pool-name <Backend pool name
6                               >
7                               --vnet <Azure VMC Vnet>
8                               --name <IP Address name>
9                               --ip-address <VIP of ADC in
10                              VMC>
```

Note:


Ensure that the Azure load balancer is deployed in the same virtual network as the Azure VMware cloud.

Configure a NetScaler VPX high availability setup on Azure VMware solution

May 2, 2023

You can configure a NetScaler VPX HA setup on Azure VMware solution (AVS) for internet facing applications.

The following diagram shows the NetScaler VPX HA pair on AVS. A client can access the AVS service by connecting to the VIP of the primary ADC node inside the AVS. You can achieve this by provisioning a NetScaler load balancer or the Azure load balancer instance outside AVS but in the same Azure virtual network. Configure the load balancer to access the VIP of primary ADC node within AVS service.

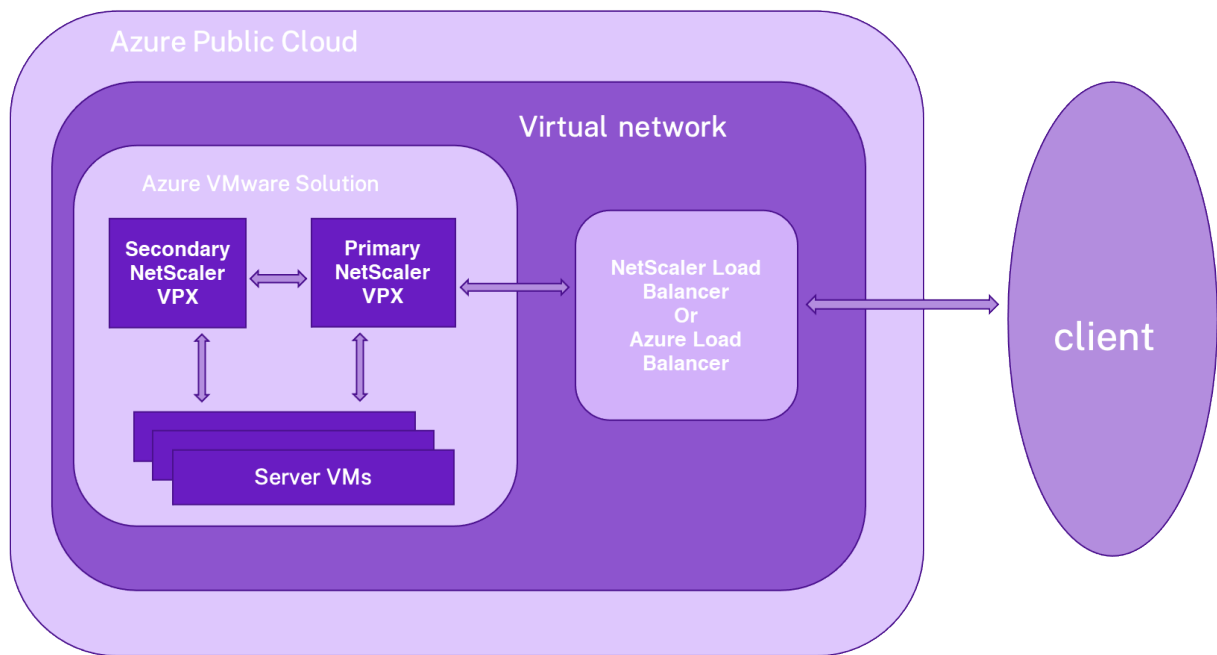

Prerequisites

Before you begin installing a virtual appliance, read the following Azure prerequisites:

- For more information on Azure VMware solution and its prerequisites, see [Azure VMware Solution documentation](#).
- For more information on deploying Azure VMware solution, see [Deploy an Azure VMware Solution private cloud](#).
- For more information on creating a Windows Jump box VM to access and manage Azure VMware Solution, see [Access an Azure VMware Solution private cloud](#).
- In Windows Jump box VM, download the NetScaler VPX appliance setup files.
- Create appropriate NSX-T network segments on VMware SDDC to which the virtual machines connect. For more information, see [Add a network segment in Azure VMware Solution](#).

Configuration steps

Follow these steps to configure the NetScaler VPX high availability setup in AVS for internet facing applications.

1. Create two NetScaler VPX instances on VMware cloud. For more information, see [Install a NetScaler VPX instance on VMware cloud](#).
2. Configure the NetScaler HA setup. For more information, see [Configuring high availability](#).
3. Configure the NetScaler HA setup to be accessible for internet facing applications.


- To configure the NetScaler VPX instance using the NetScaler load balancer, see [Configure a NetScaler VPX standalone instance on AVS using the NetScaler load balancer](#).
- To configure the NetScaler VPX instance using the Azure load balancer, see [Configure NetScaler VPX standalone instance on AVS using the Azure load balancer](#).

Configure Azure route server with NetScaler VPX HA pair

May 2, 2023

You can configure Azure route server with NetScaler VPX instance to exchange the VIP routes configured with virtual network using the BGP protocol. The NetScaler can be deployed in standalone or in HA-INC mode, and then configured with BGP. This deployment doesn't require an Azure load balancer (ALB) in front of the ADC HA pair.

The following diagram depicts how a VPX HA topology is integrated with the Azure route server. Each of the ADC instances has 3 interfaces: one for management, one for client traffic, and one for server traffic.

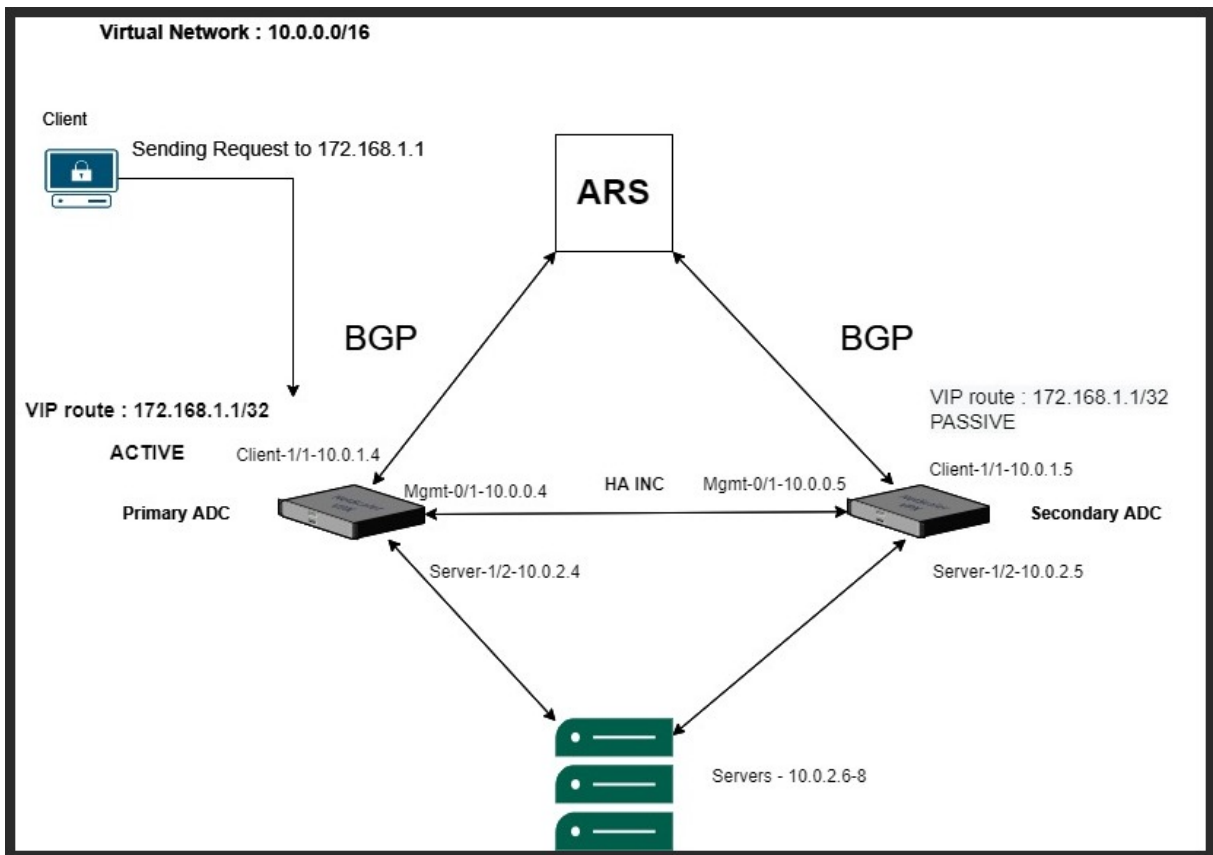

The topology diagram uses the following IP addresses.

Sample IP configuration for primary ADC instance:

```
1 NSIP: 10.0.0.4/24
2 SNIP on 1/1: 10.0.1.4/24
3 SNIP on 1/2: 10.0.2.4/24
4 VIP: 172.168.1.1/32
```

Sample IP configuration for secondary ADC instance:

```
1 NSIP: 10.0.0.5/24
2 SNIP on 1/1: 10.0.1.5/24
3 SNIP on 1/2: 10.0.2.5/24
4 VIP: 172.168.1.1/32
```

Prerequisites


You must be familiar with the following information before deploying a NetScaler VPX instance on Azure.

- Azure terminology and network details. For more information, see [Azure terminology](#).
- Overview of Azure Route Server. For more information, see [What is Azure Route Server?](#).
- Working of a NetScaler appliance. For more information, see [NetScaler documentation](#).
- NetScaler networking. For more information, see the [ADC Networking](#).

How to configure an Azure route server with NetScaler VPX HA pair


1. Create a route server in the Azure portal. For more information, see [Create and configure a Route Server using the Azure portal](#).

In the following example, subnet 10.0.3.0/24 is used for deploying Azure server. Once the route server is created, get the route server IP addresses, for example: 10.0.3.4, 10.0.3.5.

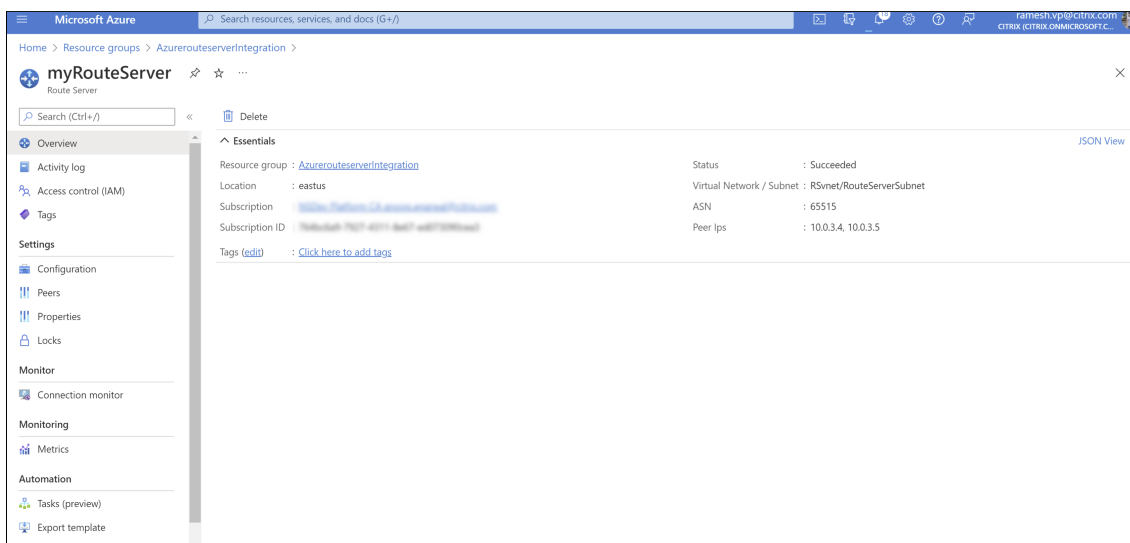

2. Set up peering with network virtual appliance (NVA) in the Azure portal. Add your NetScaler VPX instance as the NVA. For more information, see [Set up peering with NVA](#).

In the following example, the ADC SNIP on 1/1 interfaces: 10.0.1.4 and 10.0.1.5, and the ASN: 400 and 500, are used while adding the peer.

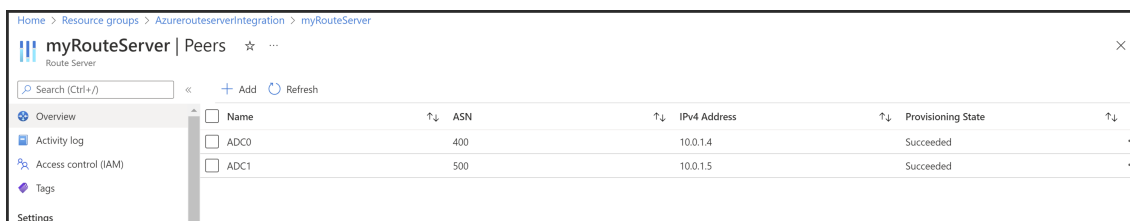

3. Add two NetScaler VPX instances for the HA configuration.

Complete the following steps:

- a) Deploy two VPX instances (primary and secondary instances) on Azure.
 - b) Add client and server NIC on both the instances.
 - c) Configure HA settings on both instances by using the NetScaler GUI.
4. Configure dynamic routing in the primary ADC instance.

Sample configuration:

```

1 enable ns mode L3 MBF USNIP SRADV DRADV PMTUD
2 enable ns feature LB BGP
3 add ns ip 10.0.1.4 255.255.255.0 -vServer DISABLED -dynamicRouting
  ENABLED
4 VTYSH
5 configure terminal
6 router BGP 400
7 timers bgp 1 3
8 neighbor 10.0.3.4 remote-as 65515
  
```

```
9 neighbor 10.0.3.4 advertisement-interval 3
10 neighbor 10.0.3.4 fall-over bfd
11 neighbor 10.0.3.5 remote-as 65515
12 neighbor 10.0.3.5 advertisement-interval 3
13 neighbor 10.0.3.5 fall-over bfd
14 address-family ipv4
15 redistribute kernel
16 redistribute static
```

5. Configure dynamic routing in the secondary ADC instance.

Sample configuration:

```
1 enable ns mode L3 MBF USNIP SRADV DRADV PMTUD
2 enable ns feature LB BGP
3 add ns ip 10.0.1.5 255.255.255.0 -vServer DISABLED -dynamicRouting
  ENABLED
4 VTYSH
5 configure terminal
6 router BGP 500
7 timers bgp 1 3
8 neighbor 10.0.3.4 remote-as 65515
9 neighbor 10.0.3.4 advertisement-interval 3
10 neighbor 10.0.3.4 fall-over bfd
11 neighbor 10.0.3.5 remote-as 65515
12 neighbor 10.0.3.5 advertisement-interval 3
13 neighbor 10.0.3.5 fall-over bfd
14 address-family ipv4
15 redistribute kernel
16 redistribute static
```

6. Verify the BGP peers established using the BGP commands in the VTY shell interface. For more information, see [Verifying the BGP Configuration](#).

```
1 show ip bgp neighbors
```

7. Configure LB virtual server in the primary ADC instance.

Sample configuration:

```
1 add ns ip 172.16.1.1 255.255.255.255 -type VIP -hostRoute ENABLED
2 add lbvserver v1 HTTP 172.16.1.1 80
3 add service s1 10.0.2.6 HTTP 80
4 bind lbvserver v1 s1
5 enable ns feature lb
```

A client in the same virtual network as of the NetScaler VPX instance can now access the LB virtual server. In this case, the NetScaler VPX instance advertises the VIP route to the Azure route server.

Add back-end Azure Autoscaling service


November 24, 2023

Efficient hosting of applications in a cloud involves easy and cost-effective management of resources depending on the application demand. To meet increasing demand, you have to scale up network resources. Whether demand subsides, you must scale down to avoid the unnecessary cost of idle resources. To minimize the cost of running the application, you have to constantly monitor traffic, memory and CPU use, and so on. However, monitoring traffic manually is cumbersome. For the application environment to scale up or down dynamically, you must automate the processes of monitoring traffic and scaling resources up and down whenever necessary.

You can use Autoscale with Azure virtual machine scale sets (VMSS) for VPX multi-IP standalone and high availability deployment on Azure.

Integrated with the Azure VMSS and Autoscale feature, the NetScaler VPX instance provides the following advantages:

- **Load balance and management:** Auto configures servers to scale up and scale down, depending on demand. The NetScaler VPX instance auto detects the VMSS Autoscale setting in the same virtual network where the VPX instance is deployed, or the peered virtual networks that are in the same Azure subscription. You can select the VMSS Autoscale setting to balance the load. This is done by auto configuring NetScaler virtual IP address and subnet IP address on the VPX instance.
- **High availability:** Detects Autoscale groups and load balances servers.
- **Better network availability:** The VPX instance supports back-end servers on different virtual networks (VNets).

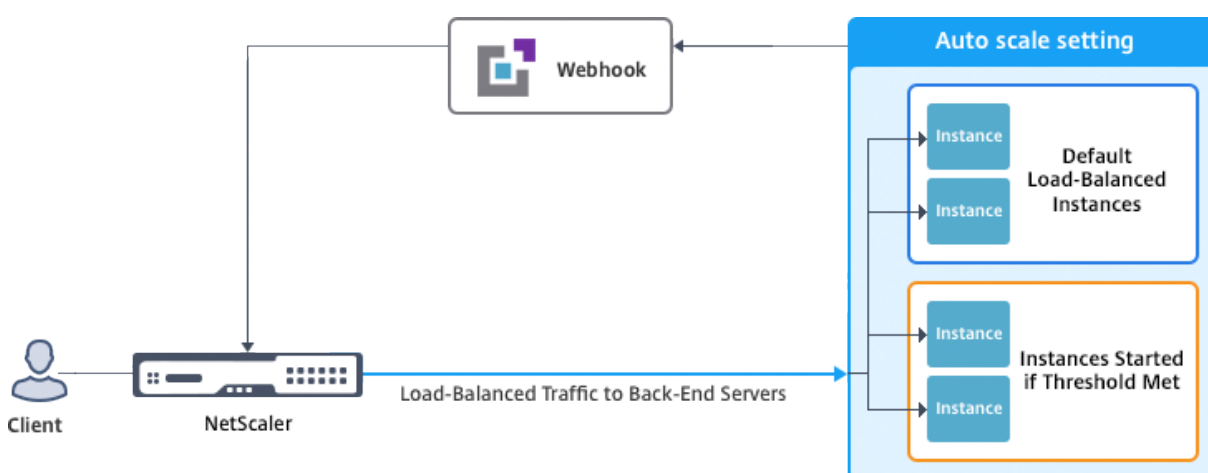

For more information, see the following Azure topic

- [Virtual Machine Scale Sets Documentation](#)

- [Overview of Autoscale in Microsoft Azure Virtual Machines, Cloud Services, and Web Apps](#)

Before you begin

- Read Azure-related usage guidelines. For more information, see [Deploy a NetScaler VPX instance on Microsoft Azure](#).
- Create one or more NetScaler VPX instances with three network interfaces on Azure according to your requirement (standalone or high availability deployment).
- Open the TCP 9001 port on the network security group of the 0/1 interface of the VPX instance. The VPX instance uses this port to receive the scale-out and scale-in notification.
- Create an Azure VMSS in the same virtual network, where the NetScaler VPX instance is deployed. If the VMSS and NetScaler VPX instance are deployed in different Azure virtual networks, the following conditions have to be met:
 - Both the virtual networks must be in the same Azure subscription.
 - The two virtual networks must be connected using the virtual network peering feature of Azure.

If you don't have an existing VMSS configuration, complete the following tasks:

- a) Create a VMSS
- b) Enable Autoscale on VMSS
- c) Create scale-in and scale-out policies in VMSS Autoscale setting

For more information, see [Overview of Autoscale with Azure virtual machine scale sets](#).


- NetScaler VPX supports VMSS with Uniform orchestration only. VMSS with Flexible orchestration is not supported. For more information, see [Orchestration modes for Virtual Machine Scale Sets in Azure](#).
- Starting from NetScaler release 14.1-12.x, NetScaler VPX supports managed identity in the Azure cloud. Managed identities link a Service Principal to an Azure resource like a virtual machine. With managed identity, you don't need to manage the cloud credentials (Application ID, Application secret, and Tenant ID) thus avoiding security risks. Currently, NetScaler VPX supports only the system-assigned and a single-user assigned managed identity. Multiple-user assigned managed identity is not supported.

For NetScaler releases prior to 14.1-12.x, you must manually manage the cloud credentials in NetScaler VPX through Azure Active Directory (AAD). Assign a contributor role to the newly created AAD application. The cloud credentials must be recreated periodically after it expires. For more information, see [Create an Azure Active Directory application and service principal](#).

When you configure managed identity on Azure console and cloud credentials in NetScaler, managed identity takes precedence over cloud credentials.


Configure a managed identity on a virtual machine

1. Sign in to the Azure portal.
2. Navigate to your virtual machine and select **Identity**.
3. Choose either **System assigned** or **User assigned** based on your requirements.
4. Under **Status**, select **On** and then click **Save**.

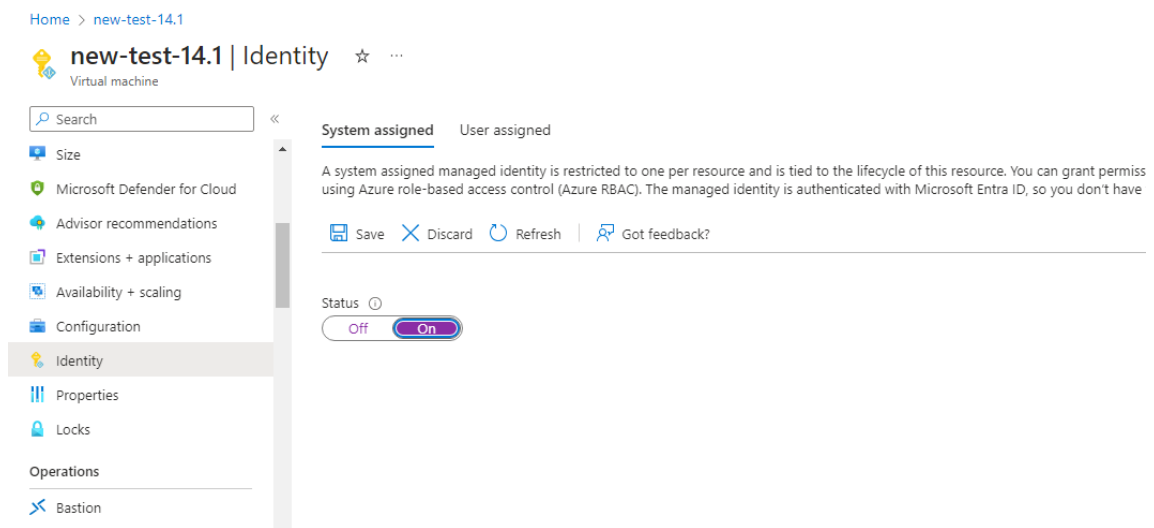

Once the status is saved, you see a service principal object is created and assigned to the VM.

5. Click **Azure role assignments**.

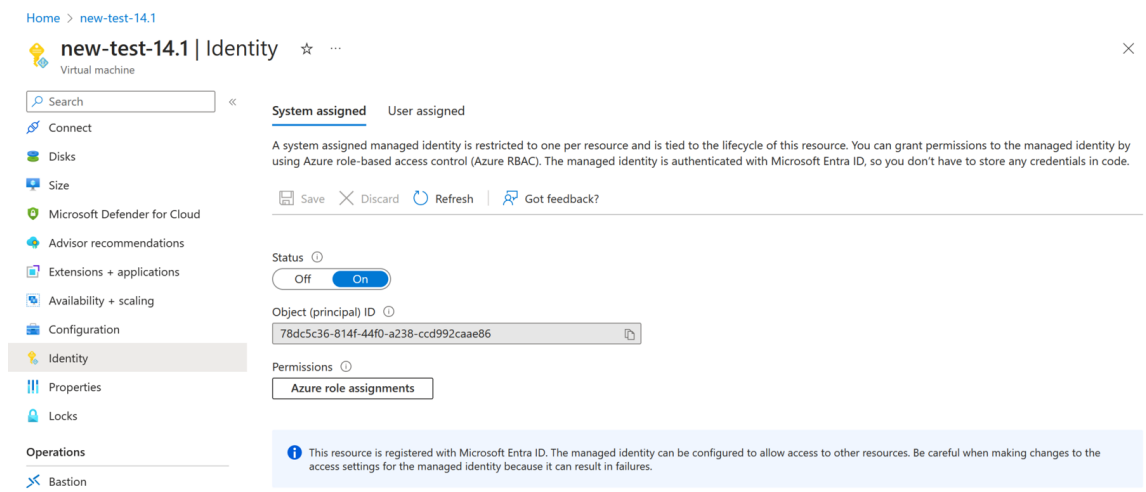

6. In the **Add role assignment** window, select a scope. You can select from the following options:

- Subscription

If the VMSS and VM are in different resource groups, use **Subscription** as the scope.

- Resource group

If the VMSS is in the same resource group as your VM, use **Resource group** as the scope.

- Key Vault
- Storage
- SQL

Based on your scope selection, fill in the details for other fields. Assign a **Contributor** role and **Save** the configuration.

The screenshot shows the 'Add role assignment (Preview)' dialog. On the left, the 'Azure role assignments' page is partially visible, showing a 'Subscription' dropdown and a table with columns 'Role' and 'Resource Name'. The main dialog has the following fields:

- Scope: Resource group
- Subscription: [Redacted]
- Resource group: tahaj-test-ipconfig
- Role: Contributor


Buttons at the bottom: Save, Discard.

The **Azure role assignments** page displays the managed identity that you created.

The screenshot shows the 'Azure role assignments' page. It features a 'Subscription' dropdown and a table with the following data:

Role	Resource Name	Resource Type	Assigned To	Condition
Contributor	tahaj-test-ipconfig	Resource Group	new-test-14.1	None

7. To create a user assigned managed identity, select a subscription, choose a user assigned managed identity, and click **Add**.

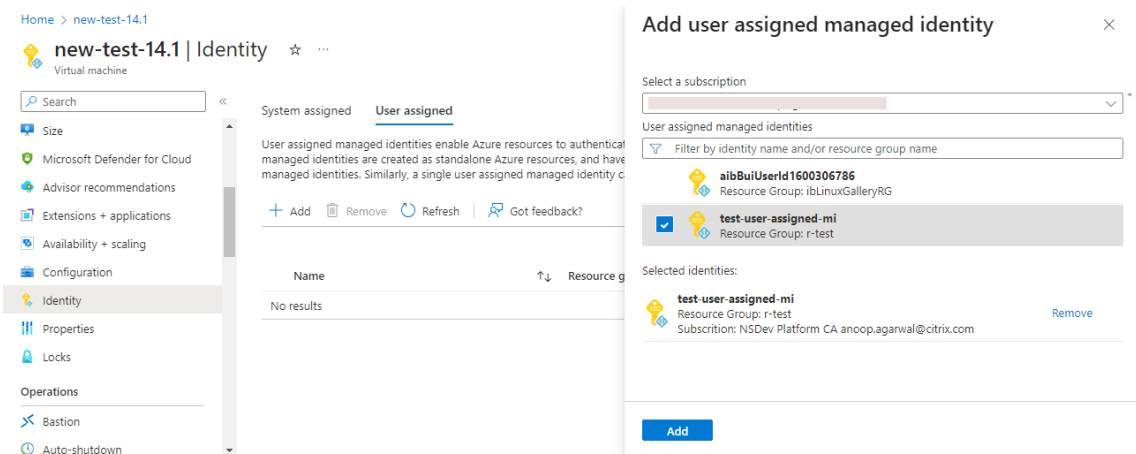

Add VMSS to a NetScaler VPX instance

Complete the following steps to add the Autoscale setting to the VPX instance:

1. Log on to the VPX instance.
2. Navigate to **Configuration > Azure > Set Credentials**. Add the required Azure credentials for the Autoscale feature to work.

← Set Credentials

Tenant ID

Application ID


Application Secret

OK **Cancel**

Note:

If you are using Azure managed identity, it is not required to set credentials.

3. Go to **System > Azure > Cloud Profile** and click **Add** to create a cloud profile.

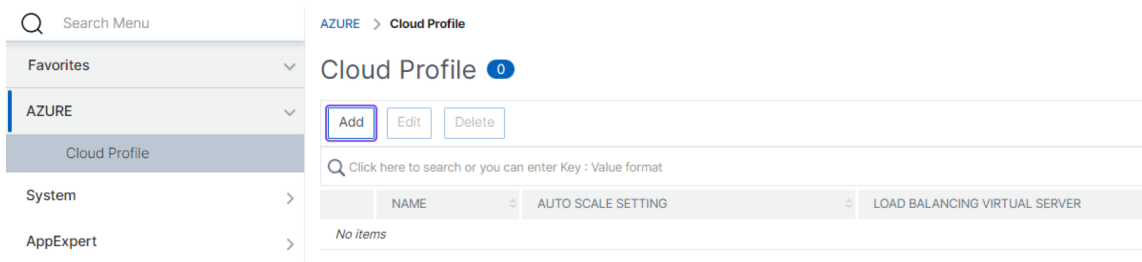

The **Create Cloud Profile** configuration page appears.

← Create Cloud Profile

Name

Virtual Server IP Address*

Type

Load Balancing Server Protocol

Load Balancing Server Port

Auto Scale Setting*

Auto Scale Setting Protocol

Auto Scale Setting Port

Create **Close**

Cloud profile creates a NetScaler load balancing virtual server and a service group with members (servers) as the servers of the Auto Scaling Group. Your back-end servers must be reachable through the SNIP configured on the VPX instance.

Points to keep in mind while creating a cloud profile

- The virtual server IP address is auto-populated from the free IP address available to the VPX instance. For more information, see [Assign multiple IP addresses to virtual machines using the Azure portal](#).
- The autoscale setting is prepopulated from the VMSS instance that is connected to the NetScaler VPX instance either in the same virtual network or peered virtual networks. For more information, see [Overview of Autoscale with Azure virtual machine scale sets](#).
- While selecting the **Auto Scale Setting Protocol** and **Auto Scale Setting Port**, ensure that your servers listen on the protocols and ports, and you bind the correct monitor in the service group. By default, the TCP monitor is used.
- For SSL Protocol type autoscaling, after you create the cloud profile, the load balance virtual server or service group is down because of a missing certificate. You can bind the certificate to the virtual server or service group manually.

Note:

From NetScaler release 13.1-42.x onwards, you can create different cloud profiles for different services (using different ports) with the same VMSS in Azure. Thus, the NetScaler VPX instance supports multiple services with the same Autoscaling group in the public cloud.

To view autoscale-related information in the Azure portal, go to **Virtual machine scale sets**, and select **virtual machine scale set > Scaling**.

References

For information on autoscaling of NetScaler VPX in Microsoft Azure using NetScaler Console, see [Azure Autoscale using NetScaler ADM](#).

Azure tags for NetScaler VPX deployment


May 2, 2023

In the Azure cloud portal, you can tag resources with a name: value pair (such as Dept: Finance) to categorize and view resources across resource groups and, within the portal, across subscriptions. Tagging is helpful when you need to organize resources for billing or management or automation.

How Azure tag works for VPX deployment

For NetScaler VPX standalone and high-availability instances deployed on Azure Cloud, now you can create load balancing service groups associated with an Azure tag. The VPX instance constantly monitors Azure virtual machines (back-end servers) and network interfaces (NICs), or both, with the respective tag and updates the service group accordingly.

The VPX instance creates the service group that load balances the back-end servers using tags. The instance queries the Azure API for all resources that are tagged with a particular tag name and tag value. Depending on the assigned poll period (by default 60 seconds), the VPX instance periodically polls the Azure API and retrieves the resources available with the tag name and tag values assigned in the VPX GUI. Whenever a VM or NIC with the appropriate tag is added or deleted, the ADC detects the respective change and adds or deletes the VM or NIC IP address from the service group automatically.

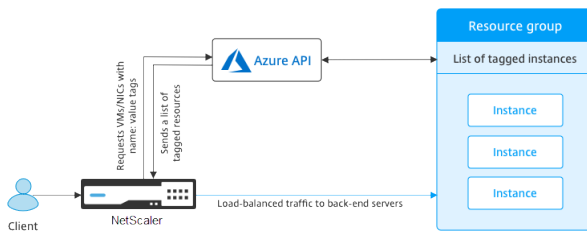

Before you begin

Before creating NetScaler load balancing service groups, add a tag to the servers in Azure. You can assign the tag to either the virtual machine or to NIC.

Name	Value	
Creator	: d34eed9579934591afbbdf28c92caf51	
info_no_auto_shutdown	: temporarily disable automated vm shutdown, if set to 'true', default value is 'false'. A 3 day lease by default will be provided during next run of an auto script if no view/update lease datetime. only valid if no_auto_shutdown tag set to 'true'. max 14 days lease is allowed. all generic date/time string are valid (eg. 'Tue Jun 20	
info_no_auto_shutdown_lease_datetime_UTC	:	
no_auto_shutdown	: false	
no_auto_shutdown_lease_datetime_UTC	:	
tag1	: false	
	:	

For more information about adding Azure tags, see Microsoft document [Use tags to organize your Azure resources.](#)

Note

ADC CLI commands to add Azure tag settings support tag names and tag values that start only with numerals or alphabets and not other keyboard characters.

How to add Azure tag settings by using VPX GUI

You can add the Azure tag cloud profile to a VPX instance by using the VPX GUI so that the instance can load balance the back-end servers using the specified tag. Follow these steps:

1. From the VPX GUI, go to **Configuration > Azure > Cloud Profile**.
2. Click Add to create a cloud profile. The cloud profile window opens.

Create Cloud Profile

Name

Virtual Server IP Address*

Type

Azure Tag Name

Azure Tag Value

Azure Poll Periods

Load Balancing Server Protocol

Load Balancing Server Port

Azure Tag Setting*

Azure Tag Setting Protocol

Azure Tag Setting Port

1. Enter values for the following fields:

- Name: Add a name for your profile
- Virtual Server IP Address: The virtual server IP address is auto-populated from the free IP address available to the VPX instance. For more information, see [Assign multiple IP addresses to virtual machines using the Azure portal](#).
- Type: From the menu, select AZURETAGS.
- Azure Tag Name: Enter the name that you have assigned to the VMs or NICs in the Azure portal.
- Azure Tag Value: Enter the value that you have assigned to the VMs or NICs in Azure portal.
- Azure Poll Periods: By default the poll period is 60 seconds, which is the minimum value. You can change it according to your requirement.
- Load Balancing Server Protocol: Select the protocol that your load balancer listens on.
- Load Balancing Server Port: Select the port that your load balancer listens on.
- Azure tag setting: The name of the service group that will be created for this cloud profile.
- Azure Tag Setting Protocol: Select the protocol that your back-end servers listen on.
- Azure Tag Setting Port: Select the port that your back-end servers listen on.

2. Click **Create**.

A load-balancer virtual server and a service group are created for the tagged VMs or NICs. To see the load balancer virtual server, from the VPX GUI, navigate to **Traffic Management > Load Balancing > Virtual Servers**.

How to add Azure tag settings by using VPX CLI

Type the following command on NetScaler CLI to create a cloud profile for Azure tags.

```
1 add cloud profile `<profile name>` -type azuretags -vServerName `<vserver name>` -serviceType HTTP -IPAddress `<vserver IP address>` -port 80 -serviceName `<service group name>` -boundServiceGroupSvcType HTTP -vsrvbindsvcpport 80 -azureTagName `<Azure tag specified on Azure portal>` -azureTagValue `<Azure value specified on the Azure portal>` -azurePollPeriod 60
```

Important

You must save all configurations; otherwise, the configurations are lost after you restart the instance. Type `save config`.

Example 1: Here's a sample command for a cloud profile for HTTP traffic of all Azure VMs/NICs tagged with the "myTagName/myTagValue" pair:

```
1 add cloud profile MyTagCloudProfile -type azuretags -vServerName
  MyTagVServer -serviceType HTTP -IPAddress 40.115.116.57 -port 80 -
  serviceGroupName MyTagsServiceGroup -boundServiceGroupSvcType HTTP -
  vsvrbindsvcport 80 -azureTagName myTagName -azureTagValue myTagValue
  -azurePollPeriod 60
2 Done
```

To display the cloud profile, type `show cloudprofile`.

Example 2: The following CLI command prints information about the newly added cloud profile in example 1.

```
1 show cloudprofile
2 1)   Name: MyTagCloudProfile Type: azuretags      VServerName:
      MyTagVServer ServiceType: HTTP      IPAddress: 52.178.209.133
      Port: 80      ServiceGroupName: MyTagsServiceGroup
      BoundServiceGroupSvcType: HTTP
3      Vsvrbindsvcport: 80      AzureTagName: myTagName AzureTagValue:
      myTagValue AzurePollPeriod: 60      GraceFul: NO
      Delay: 60
```

To remove a cloud profile, type `rm cloud profile <cloud profile name>`

Example 3: The following command removes the cloud profile created in example 1.

```
1 > rm cloudprofile MyTagCloudProfile
2 Done
```

Troubleshooting

Issue: In very rare cases, the “rm cloud profile” CLI command might fail to remove service group and servers associated with the deleted cloud profile. This happens when the command is issued seconds before the poll period of the cloud profile being deleted elapses.

Solution: Manually delete the remaining service groups by entering the following CLI command for each of the remaining service groups:

```
1 #> rm servicegroup <serviceGroupName>
```

Also remove each of the remain servers by entering the following CLI command for each of the remaining servers:

```
1 #> rm server <name>
```

Issue: If you add an Azure tag setting to a VPX instance by using CLI, the `rain_tags` process continues to run on an HA pair node after a warm reboot.

Solution: Manually terminate the process on the secondary node after a warm reboot. From the CLI of the secondary HA node exit to the shell prompt:

```
1 #> shell
```

Use the following command to kill the rain_tags process:

```
1 # PID=`ps -aux | grep rain_tags | awk '{
2   print $2 }
3   `; kill -9 $PID
```

Issue: Back-end servers might not be reachable and reported as DOWN by the VPX instance, in spite of being healthy.

Solution: Make sure that the VPX instance can reach the tagged IP address corresponding to the back-end server. For a tagged NIC, this is the NIC IP address; whereas for a tagged VM, this is the VM's primary IP address. If the VM/NIC resides on a different Azure VNet, make sure that VNet peering is enabled.

Configure GSLB on NetScaler VPX instances

May 9, 2023

NetScaler appliances configured for global server load balancing (GSLB) provide disaster recovery and continuous availability of applications by protecting against points of failure in a WAN. GSLB can balance the load across data centers by directing client requests to the closest or best performing data center, or to surviving data centers if there is an outage.

This section describes how to enable GSLB on VPX instances on two sites in a Microsoft Azure environment, by using Windows PowerShell commands.

Note

For more information about GSLB, see [Global Server Load Balancing](#).

You can configure GSLB on a NetScaler VPX instance on Azure, in two steps:

1. Create a VPX instance with multiple NICs and multiple IP addresses, on each site.
2. Enable GSLB on the VPX instances.


Note

For more information about configuring multiple NICs and IP addresses see: [Configure multiple IP addresses for a NetScaler VPX instance in standalone mode by using PowerShell commands](#)

Scenario

This scenario includes two sites - Site 1 and Site 2. Each site has a VM (VM1 and VM2) configured with multiple NICs, multiple IP addresses, and GSLB.

Figure. GSLB setup implemented across two sites - Site 1 and Site 2.

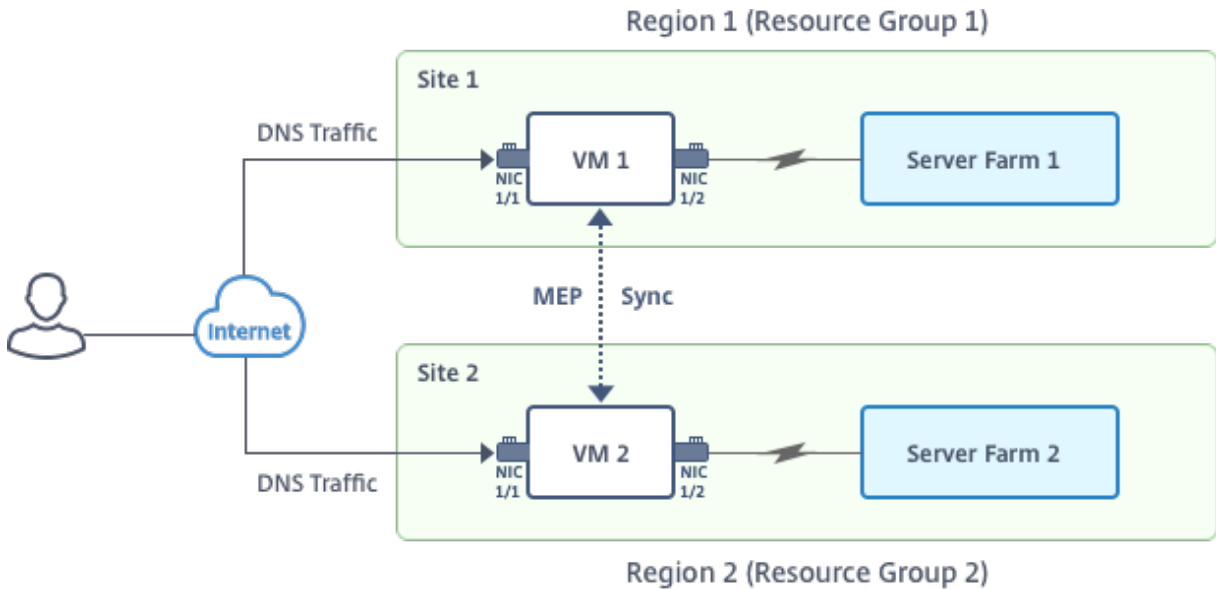

In this scenario, each VM has three NICs - NIC 0/1, 1/1, and 1/2. Each NIC can have multiple private and public IP addresses. The NICs are configured for the following purposes.

- NIC 0/1: to serve management traffic
- NIC 1/1: to serve client-side traffic
- NIC 1/2: to communicate with back-end servers

For information about the IP addresses configured on each NIC in this scenario, see the IP configuration details section.

Parameters

Following are sample parameters settings for this scenario in this document. You can use different settings if you want.

```

1 $location="West Central US"
2
3 $vnetName="NSVPX-vnet"
4
5 $RGName="multiIP-RG"
6
7 $prmStorageAccountName="multiipstorageacctnt"
8

```

```
9 $avSetName="MultiIP-avset"  
10  
11 $vmSize="Standard\_DS3\_V2"
```

Note: The minimum requirement for a VPX instance is 2 vCPUs and 2 GB RAM.

```
1 $publisher="citrix"  
2  
3 $offer="netscalervpx111"  
4  
5 $sku="netscalerbyol"  
6  
7 $version="latest"  
8  
9 $vmNamePrefix="MultiIPVPX"  
10  
11 $nicNamePrefix="MultiipVPX"  
12  
13 $osDiskSuffix="osdiskdb"  
14  
15 $numberOfVMs=1  
16  
17 $ipAddressPrefix="10.0.0."  
18  
19 $ipAddressPrefix1="10.0.1."  
20  
21 $ipAddressPrefix2="10.0.2."  
22  
23 $pubIPName1="MultiIP-pip1"  
24  
25 $pubIPName2="MultiIP-pip2"  
26  
27 $IPConfigName1="IPConfig1"  
28  
29 $IPConfigName2="IPConfig-2"  
30  
31 $IPConfigName3="IPConfig-3"  
32  
33 $IPConfigName4="IPConfig-4"  
34  
35 $frontendSubnetName="default"  
36  
37 $backendSubnetName1="subnet\_1"  
38  
39 $backendSubnetName2="subnet\_2"  
40  
41 $suffixNumber=10
```


Create a VM

Follow steps 1–10 to create VM1 with multiple NICs and multiple IP addresses, by using PowerShell commands:

1. [Create resource group](#)
2. [Create storage account](#)
3. [Create availability set](#)
4. [Create virtual network](#)
5. [Create public IP address](#)
6. [Create NICs](#)
7. [Create VM config object](#)
8. [Get credentials and set OS properties for the VM](#)
9. [Add NICs](#)
10. [Specify OS disk and create VM](#)

After you complete all the steps and commands to create VM1, repeat these steps to create VM2 with parameters specific to it.

Create resource group

```
1 New-AzureRMResourceGroup -Name $RGName -Location $location
```

Create storage account

```
1 $prmStorageAccount=New-AzureRMStorageAccount -Name
   $prmStorageAccountName -ResourceGroupName $RGName -Type Standard_LRS
   -Location $location
```

Create availability set

```
1 $avSet=New-AzureRMAvailabilitySet -Name $avSetName -ResourceGroupName
   $RGName -Location $location
```

Create virtual network

1. Add subnets.

```
1 $subnet1=New-AzureRmVirtualNetworkSubnetConfig -Name
   $frontendSubnetName -AddressPrefix "10.0.0.0/24"
2 $subnet2=New-AzureRmVirtualNetworkSubnetConfig -Name
   $backendSubnetName1 -AddressPrefix "10.0.1.0/24"
3 $subnet3=New-AzureRmVirtualNetworkSubnetConfig -Name
   $backendSubnetName2 -AddressPrefix "10.0.2.0/24"
```

2. Add virtual network object.

```
1 $vnet=New-AzureRmVirtualNetwork -Name $vnetName -ResourceGroupName
   $RGName -Location $location -AddressPrefix 10.0.0.0/16 -Subnet
   $subnet1, $subnet2, $subnet3
```

3. Retrieve subnets.

```
1 $frontendSubnet=$vnet.Subnets|?{
2   $_.Name -eq $frontendSubnetName }
3
4 $backendSubnet1=$vnet.Subnets|?{
5   $_.Name -eq $backendSubnetName1 }
6
7 $backendSubnet2=$vnet.Subnets|?{
8   $_.Name -eq $backendSubnetName2 }
```

Create public IP address

```
1 $pip1=New-AzureRmPublicIpAddress -Name $pubIPName1 -ResourceGroupName
   $RGName -Location $location -AllocationMethod Dynamic
2 $pip2=New-AzureRmPublicIpAddress -Name $pubIPName2 -ResourceGroupName
   $RGName -Location $location -AllocationMethod Dynamic
```

Create NICs

Create NIC 0/1

```
1 $nic1Name=$nicNamePrefix + $suffixNumber + "-Mgmt"
2 $ipAddress1=$ipAddressPrefix + $suffixNumber
3 $IPConfig1=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName1 -
   SubnetId $frontendSubnet.Id -PublicIpAddress $pip1 -PrivateIpAddress
   $ipAddress1 -Primary
4 $nic1=New-AzureRMNetworkInterface -Name $nic1Name -ResourceGroupName
   $RGName -Location $location -IpConfiguration $IpConfig1
```

Create NIC 1/1

```

1 $nic2Name $nicNamePrefix + $suffixNumber + "--frontend"
2 $ipAddress2=$ipAddressPrefix1 + ($suffixNumber)
3 $ipAddress3=$ipAddressPrefix1 + ($suffixNumber + 1)
4 $IPConfig2=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName2 -
    PublicIpAddress $pip2 -SubnetId $backendSubnet1.Id -
    PrivateIpAddress $ipAddress2 -Primary
5 $IPConfig3=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName3 -
    SubnetId $backendSubnet1.Id -PrivateIpAddress $ipAddress3
6 nic2=New-AzureRMNetworkInterface -Name $nic2Name -ResourceGroupName
    $RGName -Location $location -IpConfiguration $IpConfig2, $IpConfig3

```

Create NIC 1/2

```

1 $nic3Name=$nicNamePrefix + $suffixNumber + "--backend"
2 $ipAddress4=$ipAddressPrefix2 + ($suffixNumber)
3 $IPConfig4=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName4 -
    SubnetId $backendSubnet2.Id -PrivateIpAddress $ipAddress4 -Primary
4 $nic3=New-AzureRMNetworkInterface -Name $nic3Name -ResourceGroupName
    $RGName -Location $location -IpConfiguration $IpConfig4

```

Create VM config object

```

1 $vmName=$vmNamePrefix
2 $vmConfig=New-AzureRMVMConfig -VMName $vmName -VMSize $vmSize -
    AvailabilitySetId $avSet.Id

```

Get credentials and set OS properties

```

1 $cred=Get-Credential -Message "Type the name and password for VPX login
    ."
2 $vmConfig=Set-AzureRMVMOperatingSystem -VM $vmConfig -Linux -
    ComputerName $vmName -Credential $cred
3 $vmConfig=Set-AzureRMVMSourceImage -VM $vmConfig -PublisherName
    $publisher -Offer $offer -Skus $sku -Version $version

```

Add NICs

```

1 $vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic1.Id -
    Primary
2 $vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic2.Id
3 $vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic3.Id

```

Specify OS disk and create VM

```

1 $osDiskName=$vmName + "-" + $osDiskSuffix
2 $osVhdUri=$prmStorageAccount.PrimaryEndpoints.Blob.ToString() + "vhds/"
   + $osDiskName + ".vhd"
3 $vmConfig=Set-AzureRMVMOsdisk -VM $vmConfig -Name $osDiskName -VhdUri
   $osVhdUri -CreateOption fromImage
4 Set-AzureRmVMPlan -VM $vmConfig -Publisher $publisher -Product $offer -
   Name $sku
5 New-AzureRMVM -VM $vmConfig -ResourceGroupName $RGName -Location
   $location

```

Note

Repeat steps 1–10 listed in “Create Multi-NIC VMs by Using PowerShell Commands” to create VM2 with parameters specific to VM2.

IP configuration details

The following IP addresses are used.

Table 1. IP addresses used in VM1

NIC	Private IP	Public IP (PIP)	Description
0/1	10.0.0.10	PIP1	Configured as NSIP (management IP)
1/1	10.0.1.10	PIP2	Configured as SNIP/GSLB Site IP
-	10.0.1.11	-	Configured as LB server IP. Public IP is not mandatory
1/2	10.0.2.10	-	Configured as SNIP for sending monitor probes to services; public IP is not mandatory

Table 2. IP addresses used in VM2

NIC	Internal IP	Public IP (PIP)	Description
0/1	20.0.0.10	PIP4	Configured as NSIP (management IP)

NIC	Internal IP	Public IP (PIP)	Description
1/1	20.0.1.10	PIP5	Configured as SNIP/GSLB Site IP
-	20.0.1.11	-	Configured as LB server IP. Public IP is not mandatory
1/2	20.0.2.10	-	Configured as SNIP for sending monitor probes to services; public IP is not mandatory

Here are sample configurations for this scenario, showing the IP addresses and initial LB configurations as created through the NetScaler VPX CLI for VM1 and VM2.

Here's an example configuration on VM1.

```
1 add ns ip 10.0.1.10 255.255.255.0 -mgmtAccess ENABLED
2 Add nsip 10.0.2.10 255.255.255.0
3 add service svc1 10.0.1.10 ADNS 53
4 add lb vserver v1 HTTP 10.0.1.11 80
5 add service s1 10.0.2.120 http 80
6 Add service s2 10.0.2.121 http 80
7 Bind lb vs v1 s[1-2]
```

Here's an example configuration on VM2.

```
1 add ns ip 20.0.1.10 255.255.255.0 -mgmtAccess ENABLED
2 Add nsip 20.0.2.10 255.255.255.0
3 add service svc1 20.0.1.10 ADNS 53
4 add lb vserver v1 HTTP 20.0.1.11 80
5 Add service s1 20.0.2.90 http 80
6 Add service s2 20.0.2.91 http 80
7 Bind lb vs v1 s[1-2]
```

Configure GSLB sites and other settings

Perform the tasks described in the following topic to configure the two GSLB sites and other necessary settings:

[Global Server Load Balancing](#)

For more information, see this support article: <https://support.citrix.com/article/CTX110348>

Here's an example GSLB configuration on VM1 and VM2.

```
1 enable ns feature LB GSLB
2 add gslb site site1 10.0.1.10 -publicIP PIP2
3 add gslb site site2 20.0.1.10 -publicIP PIP5
4 add gslb service site1_gslb_http_svc1 10.0.1.11 HTTP 80 -publicIP PIP3
  -publicPort 80 -siteName site1
5 add gslb service site2_gslb_http_svc1 20.0.1.11 HTTP 80 -publicIP PIP6
  -publicPort 80 -siteName site2
6 add gslb vserver gslb_http_vip1 HTTP
7 bind gslb vserver gslb_http_vip1 -serviceName site2_gslb_http_svc1
8 bind gslb vserver gslb_http_vip1 -serviceName site1_gslb_http_svc1
9 bind gslb vserver gslb_http_vip1 -domainName www.gslbindia.com -TTL 5
```

You've configured GSLB on NetScaler VPX instances running on Azure.

Disaster recovery

Disaster is a sudden disruption of business functions caused by natural calamities or human caused events. Disasters affect data center operations, after which resources and the data lost at the disaster site must be fully rebuilt and restored. The loss of data or downtime in the data center is critical and collapses the business continuity.

One of the challenges that customers face today is deciding where to put their DR site. Businesses are looking for consistency and performance regardless of any underlying infrastructure or network faults.

Possible reasons many organizations are deciding to migrate to the cloud are:

- Having an on-prem data center is very expensive. By using the cloud, the businesses can free up time and resource from expanding their own systems.
- Many of the automated orchestration enables faster recovery
- Replicate data by providing continuous data protection or continuous snapshots to guard against any outage or attack.
- Support use cases where customers need many different types of compliance and security control which are already present on the public clouds. These make it easier to achieve the compliance they need rather than building their own.

A NetScaler configured for GSLB forwards traffic to the least-loaded or best-performing data center. This configuration, referred to as an active-active setup, not only improves performance, but also provides immediate disaster recovery by routing traffic to other data centers if a data center that is part of the setup goes down. NetScaler thereby saves customers valuable time and money.

Multi-NIC Multi-IP (Three-NIC) deployment for disaster recovery

Customers would potentially deploy using three-NIC deployment if they are deploying into a production environment where security, redundancy, availability, capacity, and scalability are critical. With this deployment method, complexity and ease of management are not critical concerns to the users.

Single-NIC Multi-IP (One-NIC) deployment for disaster recovery

Customers would potentially deploy using one-NIC deployment if they are deploying into a non-production environment for the following reasons:

- Setting up the environment for testing, or they are staging a new environment before production deployment.
- Deploying directly to the cloud quickly and efficiently.
- While seeking the simplicity of a single subnet configuration.

Configure GSLB on an active-standby high-availability setup

May 2, 2023

You can configure global server load balancing (GSLB) on active-standby HA deployment on Azure in three steps:

1. Create a VPX HA pair on each GSLB site. See [Configure a high-availability setup with multiple IP addresses and NICs](#) for information about how to create an HA pair.
2. Configure the Azure Load Balancer (ALB) with the front-end IP address and rules to allow GSLB and DNS traffic.

This step involves the following substeps. See the scenario in this section for the PowerShell commands used to complete these substeps.

- a. Create a front-end `IPconfig` for GSLB site.
- b. Create a back-end address pool with IP address of NIC 1/1 of nodes in HA.
- c. Create load-balancing rules for following:


```
1 TCP/3009 - gslb communication
2 TCP/3008 - gslb communication
3 UDP/53 - DNS communication
```

- d. Associate back-end address pool with the LB rules created in step c.
 - e. Update the network security group of NIC 1/1 of nodes in both the HA pair to allow the traffic for TCP 3008, TCP 3009 and UDP 53 ports.
3. Enable GSLB on each HA pair.

Scenario

This scenario includes two sites - Site 1 and Site 2. Each site has an HA pair (HA1 and HA2) configured with multiple NICs, multiple IP addresses, and GSLB.

Figure: GSLB on Active-Standy HA Deployment on Azure

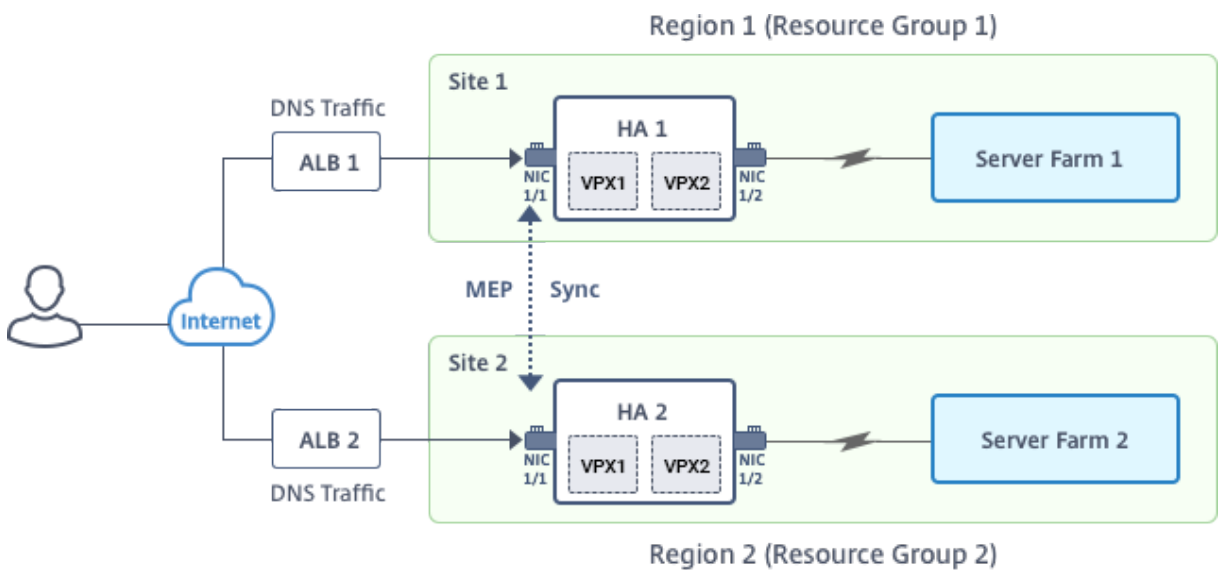

In this scenario, each VM has three NICs - NIC 0/1, 1/1, and 1/2. The NICs are configured for the following purposes.

- NIC 0/1: to serve management traffic
- NIC 1/1: to serve client-side traffic
- NIC 1/2: to communicate with back-end servers

Parameter Settings

Following are sample parameters settings for the ALB. You can use different settings if you want.

```

1 $locName="South east Asia"
2
3 $rgName="MuiltIP-MultiNIC-RG"
4
5 $pubIPName4="PIPFORGSLB1"
    
```



```

6
7 $domName4="vpxgslbdns"
8
9 $lbName="MultiIPALB"
10
11 $frontEndConfigName2="FrontEndIP2"
12
13 $backendPoolName1="BackendPoolHttp"
14
15 $lbRuleName2="LBRuleGSLB1"
16
17 $lbRuleName3="LBRuleGSLB2"
18
19 $lbRuleName4="LBRuleDNS"
20
21 $healthProbeName="HealthProbe"

```

Configure ALB with the front-end IP address and rules to allow GSLB and DNS traffic

Step 1. Create a public IP for GSLB site IP

```

1 $pip4=New-AzureRmPublicIpAddress -Name $pubIPName4 -ResourceGroupName
   $rgName -DomainNameLabel $domName4 -Location $locName -
   AllocationMethod Dynamic
2
3
4 Get-AzureRmLoadBalancer -Name \$lbName -ResourceGroupName \$rgName |
   Add-AzureRmLoadBalancerFrontendIpConfig -Name \$frontEndConfigName2
   -PublicIpAddress \$pip4 | Set-AzureRmLoadBalancer

```

Step 2. Create LB rules and update the existing ALB.

```

1 $alb = get-AzureRmLoadBalancer -Name $lbName -ResourceGroupName $rgName
2
3
4 $frontendipconfig2=Get-AzureRmLoadBalancerFrontendIpConfig -
   LoadBalancer $alb -Name $frontEndConfigName2
5
6
7 $backendPool=Get-AzureRmLoadBalancerBackendAddressPoolConfig -
   LoadBalancer $alb -Name $backendPoolName1
8
9
10 $healthprobe=Get-AzureRmLoadBalancerProbeConfig -LoadBalancer $alb -
   Name $healthProbeName
11
12
13 \$alb | Add-AzureRmLoadBalancerRuleConfig -Name \$lbRuleName2 -
   BackendAddressPool \$backendPool -FrontendIPConfiguration \
   $frontendipconfig2 -Protocol "Tcp" -FrontendPort 3009 -BackendPort
   3009 -Probe \$healthprobe -EnableFloatingIP | Set-
   AzureRmLoadBalancer

```

```
14
15
16 \ $alb | Add-AzureRmLoadBalancerRuleConfig -Name \$lbRuleName3 -
    BackendAddressPool \$backendPool -FrontendIPConfiguration \
    $frontendipconfig2 -Protocol \"Tcp\" -FrontendPort 3008 -BackendPort
    3008 -Probe \$healthprobe -EnableFloatingIP | Set-
    AzureRmLoadBalancer
17
18
19 \ $alb | Add-AzureRmLoadBalancerRuleConfig -Name \$lbRuleName4 -
    BackendAddressPool \$backendPool -FrontendIPConfiguration \
    $frontendipconfig2 -Protocol \"Udp\" -FrontendPort 53 -BackendPort
    53 -Probe \$healthprobe -EnableFloatingIP | Set-AzureRmLoadBalancer
```

Enable GSLB on each high availability pair

Now you've two front-end IP addresses for each ALB: ALB 1 and ALB 2. One IP address is for the LB virtual server and the other for the GSLB site IP.

HA 1 has the following front-end IP addresses:

- FrontEndIPofALB1 (for LB virtual server)
- PIPFORGSLB1 (GSLB IP)

HA 2 has the following front-end IP addresses:

- FrontEndIPofALB2 (for LB virtual server)
- PIPFORGSLB2 (GSLB IP)

The following commands are used for this scenario.

```
1 enable ns feature LB GSLB
2
3 add service dnssvc PIPFORGSLB1 ADNS 53
4
5 add gslb site site1 PIPFORGSLB1 -publicIP PIPFORGSLB1
6
7 add gslb site site2 PIPFORGSLB2 -publicIP PIPFORGSLB2
8
9 add gslb service site1_gslb_http_svc1 FrontEndIPofALB1 HTTP 80 -
    publicIP FrontEndIPofALB1 -publicPort 80 -siteName site1
10
11 add gslb service site2_gslb_http_svc1 FrontEndIPofALB2 HTTP 80 -
    publicIP FrontEndIPofALB2 -publicPort 80 -siteName site2
12
13 add gslb vserver gslb_http_vip1 HTTP
14
15 bind gslb vserver gslb_http_vip1 -serviceName site2_gslb_http_svc1
16
17 bind gslb vserver gslb_http_vip1 -serviceName site1_gslb_http_svc1
```

```
18
19 bind gslb vserver gslb_http_vip1 -domainName www.gslbindia.com -TTL 5
```

Related resources:[Configure GSLB on NetScaler VPX instances](#)[Global Server Load Balancing](#)

Deploy NetScaler GSLB on Azure

February 22, 2024

With the increasing demand, businesses running an on-prem data center serving regional customers want to scale and deploy across globally using Azure cloud. With NetScaler on the network administrator's side, you can use the GSLB StyleBook to configure applications both on-prem and in the cloud. You can transfer the same configuration to the cloud with NetScaler Console. You can reach either on-prem or cloud resources depending on proximity with GSLB. This allows you have seamless experience no matter where the you are located in the world.


DBS overview

NetScaler GSLB supports using Domain-Based Services (DBS) for Cloud load balancers. This allows for the auto-discovery of dynamic cloud services using a cloud load balancer solution. This configuration allows the NetScaler to implement GSLB DBS in an Active-Active environment. DBS allows the scaling of back end resources in Microsoft Azure environments from DNS discovery. This section covers integration between NetScalers in the Azure Autoscale environment.

Domain name-based services using Azure load balancer (ALB)

GLSB DBS utilizes the FQDN of the user ALB to dynamically update the GSLB service groups to include the back-end servers that are being created and deleted within Azure. To configure this feature, the user points the Citrix ADC to their ALB to dynamically route to different servers in Azure. They can do this without having to manually update the Citrix ADC every time an instance is created and deleted within Azure. The Citrix ADC DBS feature for GSLB service groups uses DNS-aware service discovery to determine the member service resources of the DBS namespace identified in the autoscale group.

The following image depicts the NetScaler GSLB DBS autoscale components with cloud load balancers:

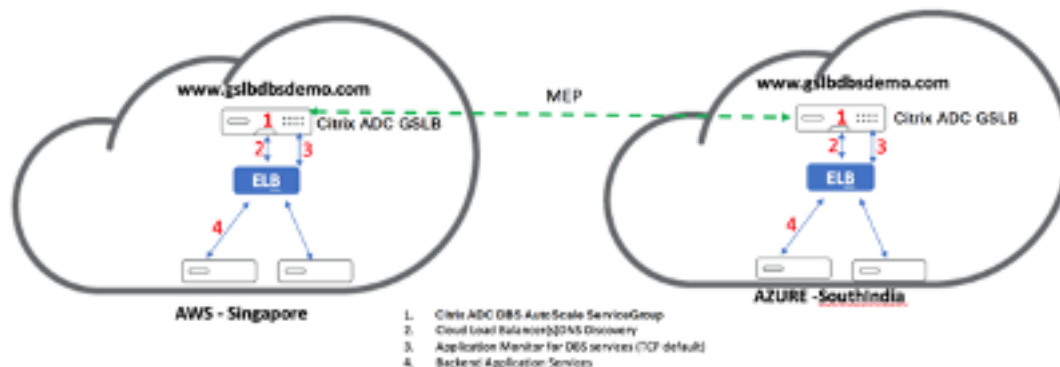

Azure GSLB prerequisites

The prerequisites for the NetScaler GSLB service groups include a functioning Microsoft Azure environment with the knowledge and ability to configure security groups, Linux Web Servers, NetScaler appliances within AWS, Elastic IPs, and Elastic load balancers (ELB).

- GSLB DBS Service integration requires NetScaler version 12.0.57 for Microsoft Azure load balancer instances.
- GSLB service group entity: NetScaler version 12.0.57.
- GSLB service group is introduced which supports autoscale using DBS dynamic discovery.
- DBS Feature Components (domain-based service) must be bound to the GSLB service group.


Example:

```


1  ``
2  > add server sydney_server LB-Sydney-xxxxxxxxx.ap-southeast-2.elb.
    amazonaws.com
3  > add gslb serviceGroup sydney_sg HTTP -autoscale DNS -siteName sydney
4  > bind gslb serviceGroup sydney_sg sydney_server 80
5  ``
    
```

Configure Azure components

1. Log in to the user Azure Portal and create a new virtual machine from a NetScaler template.
2. Create an Azure load balancer.

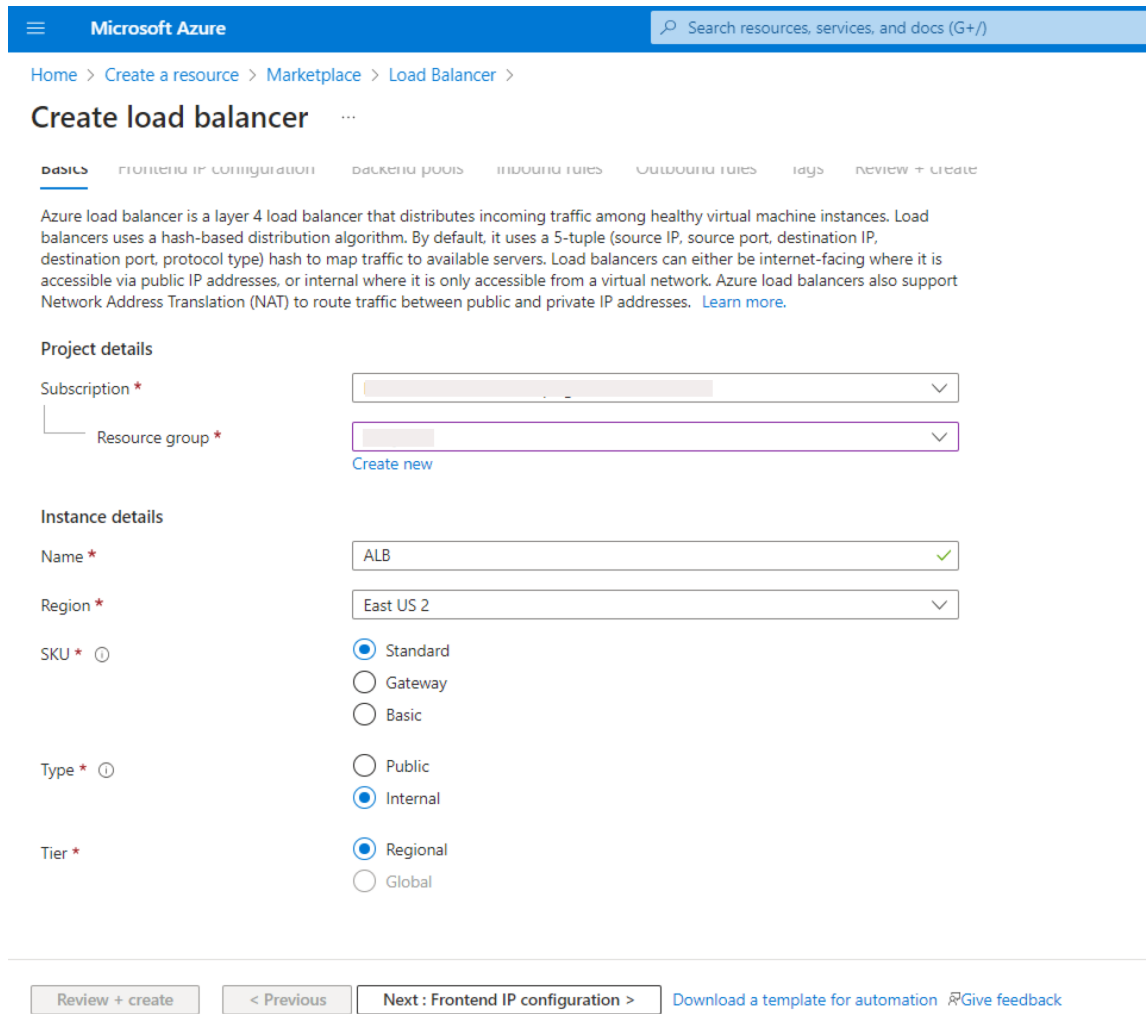

3. Add the created NetScaler back-end pools.

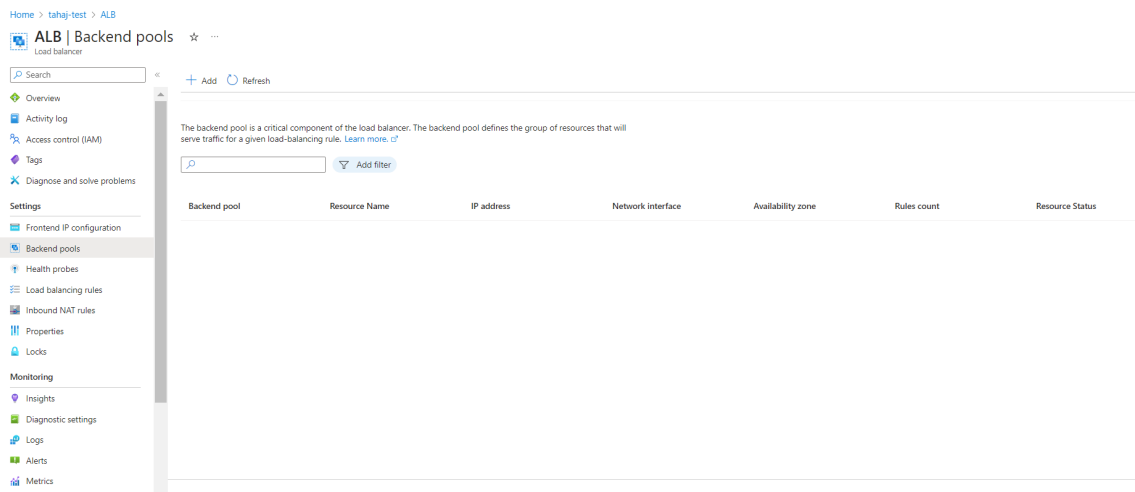

4. Create a health probe for port 80.

Create a load balancing rule utilizing the front-end IP created from the load balancer.

- Protocol: TCP
- Back-end Port: 80
- Back-end pool: NetScaler created in step 1
- Health Probe: Created in step 4
- Session Persistence: None

Microsoft Azure Search resources, services, and docs (G+)

Home > tahaj-test > ALB | Load balancing rules >

Add load balancing rule

ALB

A load balancing rule distributes incoming traffic that is sent to a selected IP address and port combination across a group of backend pool instances. Only backend instances that the health probe considers healthy receive new traffic.

Name *	lb_rule2
IP Version *	<input checked="" type="radio"/> IPv4 <input type="radio"/> IPv6
Frontend IP address * ⓘ	frontend_ip (10.1.0.7) ▼
Backend pool * ⓘ	backend_pool ▼
High availability ports ⓘ	<input type="checkbox"/>
Protocol	<input checked="" type="radio"/> TCP <input type="radio"/> UDP
Port *	80
Backend port * ⓘ	80
Health probe * ⓘ	Select an existing probe ▼ Create new
Session persistence ⓘ	None ▼
Idle timeout (minutes) * ⓘ	4
Enable TCP Reset	<input type="checkbox"/>
Enable Floating IP ⓘ	<input type="checkbox"/>

[Save](#) [Cancel](#)

Configure NetScaler GSLB domain-based service

The following configurations summarize what is required to enable domain-based services for autoscaling ADCs in a GSLB enabled environment.

- [Traffic management configurations](#)
- [GSLB configurations](#)

Traffic management configurations

Note:

It is required to configure the NetScaler with either a nameserver or a DNS virtual server through which the ELB /ALB Domains are resolved for the DBS Service Groups. For more information on name servers or DNS virtual servers, see: [DNS nameServer](#)

1. Navigate to **Traffic Management > Load Balancing > Servers**.
2. Click **Add** to create a server, provide a name and FQDN corresponding to the A record (domain name) in Azure for the ALB.

← Create Server

Name*

 ⓘ

IP Address Domain Name

FQDN*

Traffic Domain

Translation IP Address

Translation Mask

Resolve Retry (secs)

IPv6 Domain

Enable after Creating

Query Type

 ▼

Comments

3. Repeat step 2 to add the second ALB from the second resource in Azure.

GSLB configurations

1. Click the **Add** button to configure a GSLB site.
2. Specify the details for configuring the GSLB site

Name the site. Type is configured as remote or local based on which NetScaler you are configuring the site on. The site IP address is the IP address for the GSLB site. The GSLB site uses this IP address to communicate with the other GSLB sites. The public IP address is required when using a cloud service where a particular IP address is hosted on an external firewall or NAT device. The site should be configured as a parent site. Ensure that the **Trigger Monitors** are set to **ALWAYS**. Also, be sure to check the three boxes at the bottom for **Metric Exchange**, **Network Metric Exchange**, and **Persistence Session Entry Exchange**.

We recommend you set the **Trigger monitor** to **MEPDOWN**. For more information, see [Configure a GSLB Service Group](#).

← Create GSLB Site

Name*
 ⓘ

Type
 ⓘ

Site IP Address*
 ⓘ

Public IP Address
 ⓘ

Parent Site Backup Parent Sites

Parent Site Name
 ⓘ

Trigger Monitors*
 ⓘ

Cluster IP

Public Cluster IP

NAPTR Replacement Suffix

Metric Exchange
 Network Metric Exchange
 Persistence Session Entry Exchange

3. Click **Create**.
4. Navigate to **Traffic Management > GSLB > Service Groups**.
5. Click **Add** to add a service group.
6. Specify the details to configure the service group

Name the Service Group, use the HTTP protocol. Under **Site Name** choose the respective site that you created. Be sure to configure autoscale Mode as DNS and check off the boxes for State and Health Monitoring. Click **OK** to create the Service Group.

← GSLB Service Group

Basic Settings

Name*

Protocol*

Site Name*

AutoScale Mode

State
 Health Monitoring

Comment

7. Click **Service Group Members** and select **Server Based**. Select the respective ELB that was configured in the start of the run guide. Configure the traffic to go over port 80. Click **Create**.

Create Service Group Member

IP Based Server Based

Select Server*

elb-nvirginia
>
Add
Edit
i

Port*

80
i

Weight

1

Order

Site Prefix

State

Create
Close

The service group member binding should populate with 2 instances that it is receiving from the ELB.

GSLB Servicegroup Member Binding x									
<div style="display: flex; justify-content: space-between; align-items: center;"> Add Edit Unbind Monitor Details No action ▾ </div>									
<small>Q Click here to search or you can enter Key : Value format i</small>									
☐	IP ADDRESS	SERVER NAME	PORT	WEIGHT	ORDER	HASH ID	STATE	SERVICE STATE	SITE PREFIX
<input type="checkbox"/>	10.100.234.12	10.100.234.12	80	1		--	ENABLED	UP	
<input type="checkbox"/>	54.252.154.72	elb-nvirginia	80	1	1	--	ENABLED	UP	

Close

8. Repeat steps 5 & 6 to configure the service group for the second resource location in Azure. (This can be done from the same NetScaler GUI).
9. To set up a GSLB virtual server. Navigate to **Traffic Management > GSLB > Virtual Servers**.
10. Click **Add** to create the virtual server.
11. Specify the details to configure the GSLB virtual server.

Name the server, DNS Record Type is set as A, Service Type is set as HTTP, and check the boxes for Enable after Creating and AppFlow Logging. Click **OK** to create the GSLB Virtual Server.

← GSLB Virtual Server

Basic Settings

Name*
 ⓘ

DNS Record Type*
 ▼

Service Type*
 ▼

Consider Effective State
 ▼ ⓘ

Toggle Order
 ▼ ⓘ

Enable after Creating

Order Threshold

AppFlow Logging

When this Virtual Server is DOWN

Do not send any service's IP address in response (EDR)

When this Virtual Server is UP

Send all "active" service IPs' in response (MIR)

EDNS Client Subnet

Respond with ECS option in the response for a DNS query with ECS

Validate ECS address is a private or unroutable address

Comments

- Once the GSLB virtual server is created, click **No GSLB Virtual Server ServiceGroup Binding**.

← **GSLB Virtual Server**

Basic Settings			
Name	GV2	AppFlow Logging	ENABLED
DNS Record Type	A	EDR	DISABLED
Toggle Order	ASCENDING	MIR	DISABLED
Order Threshold	0	ECS	DISABLED
Service Type	HTTP	ECS Address Validation	DISABLED
Consider Effective State	NONE		
State	DOWN		

GSLB Services and GSLB Service Group Binding	
No GSLB Virtual Server to GSLB Service Binding	
No GSLB Virtual Server to GSLB Service Group Binding	

OK

- Under **ServiceGroup Binding** use **Select Service Group Name** to select and add the service groups that were created in the previous steps.

ServiceGroup Binding

Select Service Group Name*

>

Add

Edit

i

Order

1

Bind

Close

- Configure the GSLB virtual server domain binding by clicking **No GSLB Virtual Server Domain Binding**. Configure the FQDN and bind. Retain default setting for other parameters.

The screenshot shows a 'Domain Binding' configuration window. It contains several input fields: 'FQDN*' with the value 'www.gslbdfs.com' and a help icon; 'TTL (secs)' with the value '5'; 'Backup IP' (empty); 'Cookie Domain' (empty); 'Cookie Time-out (mins)' with the value '0'; and 'Site Domain TTL (secs)' with the value '3600'. At the bottom, there are two buttons: 'Bind' (highlighted in blue) and 'Close'.

15. Configure the ADNS Service by clicking **No Service**.
16. Specify the details to configure load balancing service.

Add a **Service Name**, click **New Server**, and enter the **IP Address** of the ADNS server. If the user ADNS is already configured, users can select **Existing Server** and then choose the user ADNS from the drop-down menu. Make sure that the protocol is ADNS and the traffic is configured to flow over port 53.

← Load Balancing Service

Basic Settings

Service Name*

 ⓘ

New Server Existing Server

IP Address*

 ⓘ

Protocol*

 ⓘ

Port*

▶ More

- 17. Configure the **Method** as **Least Connection** and the Backup Method as **Round Robin**.
- 18. Click **Done** and verify that the user GSLB virtual server is shown as Up.



Other resources

[NetScaler Global Load Balancing for Hybrid and Multi-Cloud Deployments](#)

Deploy NetScaler Web App Firewall on Azure

March 22, 2024

NetScaler Web App Firewall is an enterprise grade solution offering state of the art protections for modern applications. NetScaler Web App Firewall mitigates threats against public-facing assets, including websites, web applications, and APIs. NetScaler Web App Firewall includes IP reputation-based filtering, Bot mitigation, OWASP Top 10 application threats protections, Layer 7 DDoS protection and more. Also included are options to enforce authentication, strong SSL/TLS ciphers, TLS 1.3, rate limiting and rewrite policies. Using both basic and advanced WAF protections, NetScaler Web App Firewall provides comprehensive protection for your applications with unparalleled ease of use. Getting up and running is a matter of minutes. Further, using an automated learning model, called dynamic profiling, NetScaler Web App Firewall saves users precious time. By automatically learning how a protected application works, NetScaler Web App Firewall adapts to the application even as developers deploy and alter the applications. NetScaler Web App Firewall helps with compliance for all major regulatory standards and bodies, including PCI-DSS, HIPAA, and more. With our CloudFormation templates, it has never been easier to get up and running quickly. With auto scaling, users can rest assured that their applications remain protected even as their traffic scales up.

NetScaler Web App Firewall can be installed as either a Layer 3 network device or a Layer 2 network bridge between customer servers and customer users, usually behind the customer company's router or firewall. For more information, see [Introduction to NetScaler Web App Firewall](#).

NetScaler Web App Firewall deployment strategy

1. Deploy the web application firewall is to evaluate which applications or specific data need maximum security protection, which ones are less vulnerable, and the ones for which security inspection can safely be bypassed. This helps users in coming up with an optimal configuration, and in designing appropriate policies and bind points to segregate the traffic. For example, users might want to configure a policy to bypass security inspection of requests for static web content, such as images, MP3 files, and movies, and configure another policy to apply advanced security checks to requests for dynamic content. Users can use multiple policies and profiles to protect different contents of the same application.
2. To baseline the deployment, create a virtual server and run test traffic through it to get an idea of the rate and amount of traffic flowing through the user system.
3. Deploy the Web Application Firewall. Use NetScaler Console and the Web Application Firewall StyleBook to configure the Web Application Firewall. See the StyleBook section below in this guide for details.
4. Implement the NetScaler Web App Firewall and OWASP Top Ten.

The three of the Web Application Firewall protections are especially effective against common types of Web attacks, and are therefore more commonly used than any of the others. Thus, they should be implemented in the initial deployment. They are:

- **HTML Cross-Site Scripting:** Examines requests and responses for scripts that attempt to access or modify content on a different website than the one on which the script is located. When this check finds such a script, it either renders the script harmless before forwarding the request or response to its destination, or it blocks the connection.
- **HTML SQL Injection:** Examines requests that contain form field data for attempts to inject SQL commands into a SQL database. When this check detects injected SQL code, it either blocks the request or renders the injected SQL code harmless before forwarding the request to the Web server.

Note:

Ensure that your Web App Firewall is correctly configured for the following conditions to apply in your configuration:

- 1 >* If users enable the HTML Cross-Site Scripting check or the HTML SQL Injection check (or both).
- 2 >
- 3 >* User **protected** websites accept file uploads or contain Web forms that can contain large POST body data.

For more information about configuring the Web Application Firewall to handle this case, see Configuring the Application Firewall: [Configuring the Web App Firewall](#).

- **Buffer Overflow:** Examines requests to detect attempts to cause a buffer overflow on the Web server.

Configuring the Web Application Firewall

Ensure that the NetScaler Web App Firewall is already enabled and functioning correctly. We recommend that you configure NetScaler Web App Firewall using the Web Application Firewall StyleBook. Most users find it the easiest method to configure the Web Application Firewall, and it is designed to prevent mistakes. Both the GUI and the command-line interface are intended for experienced users, primarily to modify an existing configuration or use advanced options.

SQL injection

The NetScaler Web App Firewall HTML SQL Injection check provides special defenses against the injection of unauthorized SQL code that might break user application security. NetScaler Web App Firewall

examines the request payload for injected SQL code in three locations: 1) POST body, 2) headers, and 3) cookies. For more information, see [HTML SQL injection check](#).

Cross-Site scripting

The HTML Cross-Site Scripting (cross-site scripting) check examines both the headers and the POST bodies of user requests for possible cross-site scripting attacks. If it finds a cross-site script, it either modifies (transforms) the request to render the attack harmless, or blocks the request. For more information, see [HTML cross-site scripting check](#).

Buffer overflow check

The Buffer Overflow check detects attempts to cause a buffer overflow on the web server. If the Web Application Firewall detects that the URL, cookies, or header are longer than the configured length, it blocks the request because it can cause a buffer overflow. For more information, see [Buffer overflow check](#).

Virtual patching/signatures

The signatures provide specific, configurable rules to simplify the task of protecting user websites against known attacks. A signature represents a pattern that is a component of a known attack on an operating system, web server, website, XML-based web service, or other resource. A rich set of preconfigured built-in or native rules offers an easy-to-use security solution, applying the power of pattern matching to detect attacks and protect against application vulnerabilities. For more information, see [Signatures](#).

NetScaler Web App Firewall supports both **Auto & Manual** update of signatures. We also suggest enabling **Auto-update** for signatures to stay up to date.



**Automatic signatures
updates**

These signature files are hosted on the AWS Environment and it is important to allow outbound access to NetScaler IP address's from network firewalls to fetch the latest signature files. There is no effect of updating signatures to the NetScaler while processing real-time traffic.

Application security analytics

The **Application Security Dashboard** provides a holistic view of the security status of user applications. For example, it shows key security metrics such as security violations, signature violations, and threat indexes. The application security dashboard also displays attack-related information such as syn attacks, small window attacks, and DNS flood attacks for the discovered NetScaler.

Note:

To view the metrics of the application security dashboard, AppFlow for Security insight should be enabled on the NetScaler instances that users want to monitor.

To view the security metrics of a NetScaler instance on the application security dashboard:

1. Log in to NetScaler Console using the administrator credentials.
2. Navigate to **Applications > App Security Dashboard**, and select the instance IP address from the Devices list.

Users can further drill down on the discrepancies reported on the Application Security Investigator by clicking the bubbles plotted on the graph.

Centralized learning on ADM

NetScaler Web App Firewall protects user web applications from malicious attacks such as SQL injection and cross-site scripting (XSS). To prevent data breaches and provide the right security protection, users must monitor their traffic for threats and real-time actionable data on attacks. Sometimes, the attacks reported might be false-positives and those need to be provided as an exception.

The centralized learning on NetScaler Console is a repetitive pattern filter that enables WAF to learn the behavior (the normal activities) of user web applications. Based on monitoring, the engine generates a list of suggested rules or exceptions for each security check applied on the HTTP traffic.

It is much easier to deploy relaxation rules using the learning engine than to manually deploy it as necessary relaxations.

To deploy the learning feature, users must first configure a Web Application Firewall profile (set of security settings) on the user NetScaler. For more information, see [Creating Web App Firewall Profiles](#).

NetScaler Console generates a list of exceptions (relaxations) for each security check. As an administrator, you can review the list of exceptions in NetScaler Console and decide to deploy or skip.

Using the WAF learning feature in NetScaler Console, you can:

- Configure a learning profile with the following security checks.

- Buffer Overflow
- HTML Cross-Site Scripting

Note:

The cross-site script limitation of location is only FormField.

- HTML SQL Injection

Note:

For the HTML SQL Injection check, users must configure `set -sqlinjectionTransformSpec ON` and `set -sqlinjectiontype sqlspclcharorkeywords` in the NetScaler.

- Check the relaxation rules in NetScaler Console and decide to take the necessary action (deploy or skip).
- Get the notifications through email, slack, and ServiceNow.
- Use the dashboard to view relaxation details.

To use the WAF learning in NetScaler Console:

1. Configure the learning profile: [Configure the Learning Profile](#)
2. See the relaxation rules: [View Relaxation Rules and Idle Rules](#)
3. Use the WAF learning dashboard: [View WAF Learning Dashboard](#)

StyleBooks

StyleBooks simplify the task of managing complex NetScaler configurations for user applications. A StyleBook is a template that users can use to create and manage NetScaler configurations. Here, users are primarily concerned with the StyleBook used to deploy the Web Application Firewall. For more information on StyleBooks, see [StyleBooks](#).

Security insight analytics

Web and web service applications that are exposed to the Internet have become increasingly vulnerable to attacks. To protect applications from attack, users need visibility into the nature and extent of past, present, and impending threats, real-time actionable data on attacks, and recommendations on countermeasures. Security Insight provides a single-pane solution to help users assess user application security status and take corrective actions to secure user applications.


For more information, see [Security Insight](#).

Obtain detailed information about security breaches

Users might want to view a list of the attacks on an application and gain insights into the type and severity of attacks, actions taken by the ADC instance, resources requested, and the source of the attacks.

For example, users might want to determine how many attacks on Microsoft Lync were blocked, what resources were requested, and the IP addresses of the sources.

On the **Security Insight dashboard**, click **Lync > Total Violations**. In the table, click the filter icon in the **Action Taken** column header, and then select **Blocked**.

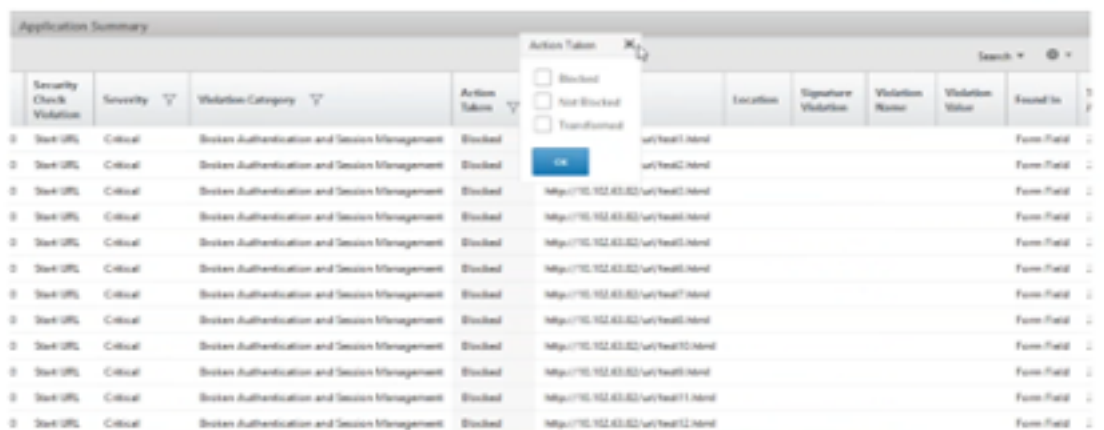

For information about the resources that were requested, review the **URL** column. For information about the sources of the attacks, review the **Client IP** column.

View log expression details


NetScaler use log expressions configured with the Application Firewall profile to take action for the attacks on an application in the user enterprise. In **Security Insight**, users can view the values returned for the log expressions used by the ADC instance. These values include, request header, request body and so on. In addition to the log expression values, users can also view the log expression name and the comment for the log expression defined in the Application Firewall profile that the ADC instance used to take action for the attack.

Prerequisites:

Ensure that users:

- Configure log expressions in the Application Firewall profile. For more information, see Application Firewall.
- Enable log expression-based Security Insights settings in NetScaler Console. Do the following:
 - Navigate to **Analytics > Settings**, and click **Enable Features for Analytics**.

- In the Enable Features for Analytics page, select **Enable Security Insight** under the **Log Expression Based Security Insight Setting** section and click **OK**.

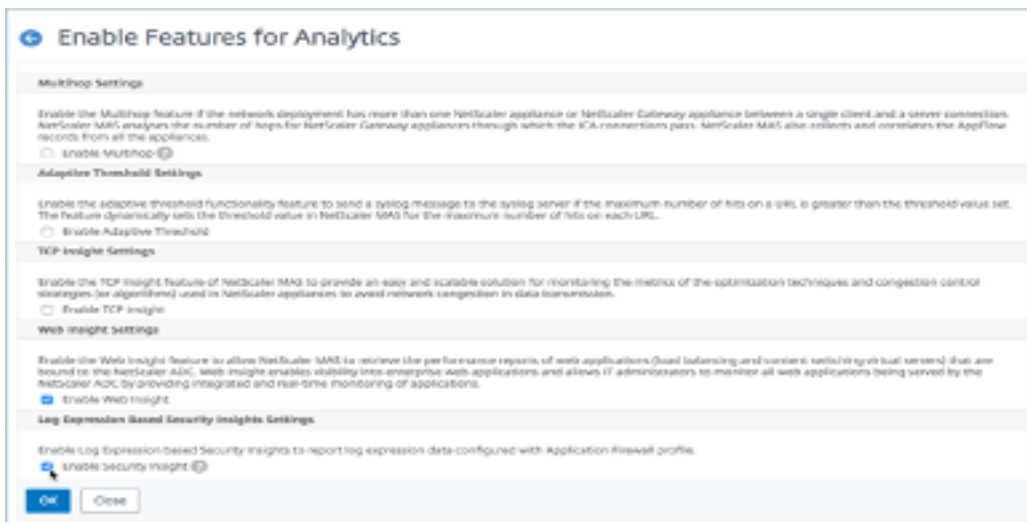

For example, you might want to view the values of the log expression returned by the ADC instance for the action it took for an attack on Microsoft Lync in the user enterprise.


On the **Security Insight dashboard**, navigate to **Lync > Total Violations**. In the Application Summary table, click the URL to view the complete details of the violation in the **Violation Information** page including the log expression name, comment, and the values returned by the ADC instance for the action.

Log Expression Name	Log Expression Comment	Log Expression Value
LSDXPR7	http request contains keyword	false
LSDXPR8	http request contains header	false
LSDXPR6	http method expression	GET /oa/f_Pu/Yu/vow?field=nexted HTTP/1.1 User-Agent: curl/7.19.7 (86_64-gc-linux-gnu) libcurl/7.19.7 OpenSSL/0.9.8k zlib/1.2.3.3 libidn/1.15 Host: 10.102.60.249 Accept: */*
LSDXPR3	http method expression	true
LSDXPR4	http request contains header	
LSDXPR1	http request header contains u seragent	curl/7.19.7 (86_64-gc-linux-gnu) libcurl/7.19.7 OpenSSL/0.9.8k zlib/1.2.3.3 libidn/1.15
LSDXPR2	http method expression	false
LSDXPR5	http method expression	

Determine the Safety Index before deploying the Configuration. Security breaches occur after users deploy the security configuration on an ADC instance, but users might want to assess the effectiveness of the security configuration before they deploy it.

For example, users might want to assess the safety index of the configuration for the SAP application on the ADC instance with IP address 10.102.60.27.


On the **Security Insight dashboard**, under **Devices**, click the IP address of the ADC instance that users configured. Users can see that both the threat index and the total number of attacks are 0. The threat index is a direct reflection of the number and type of attacks on the application. Zero attacks indicate that the application is not under any threat.

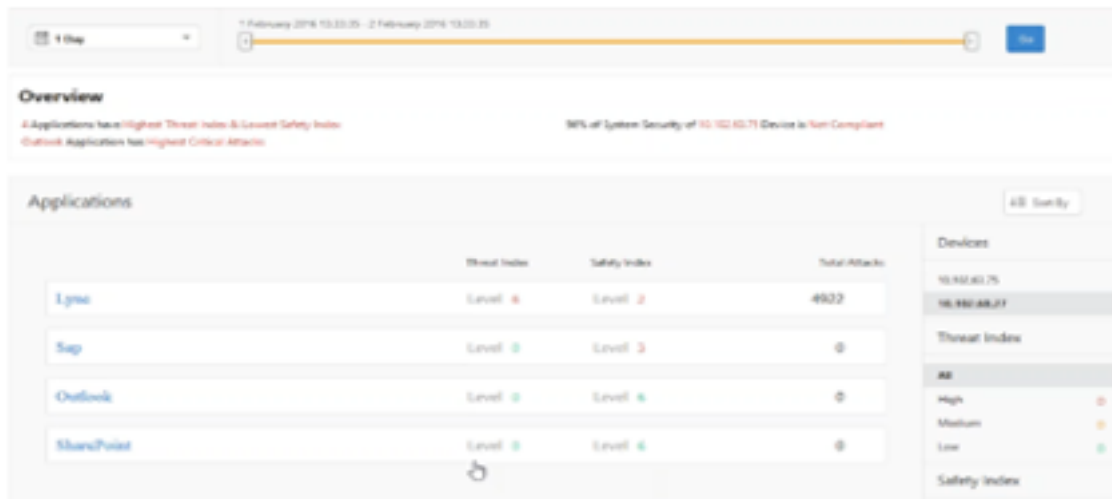

Click **Sap > Safety Index > SAP_Profile** and assess the safety index information that appears.



In the application firewall summary, users can view the configuration status of different protection settings. If a setting is set to log or if a setting is not configured, the application is assigned a lower safety index.

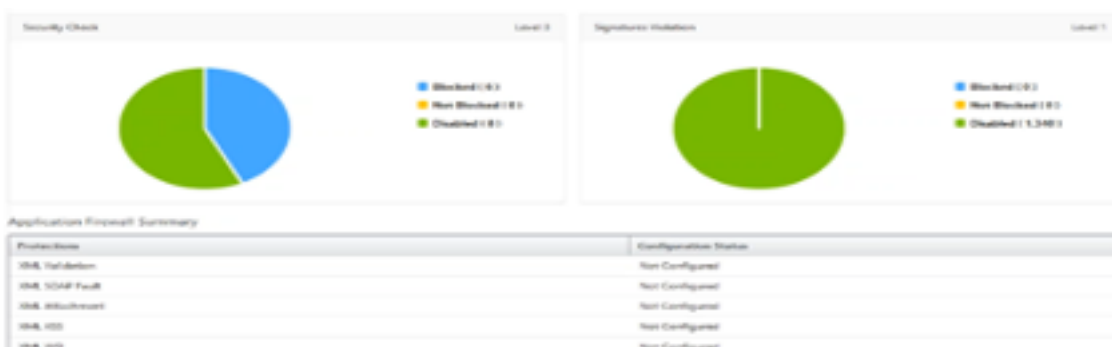

Security violations

Web applications that are exposed to the Internet have become vulnerable to attacks drastically. NetScaler Console enables you to visualize actionable violation details to protect applications from

attacks.

View application security violation details

Web applications that are exposed to the Internet have become drastically more vulnerable to attacks. NetScaler Console enables users to visualize actionable violation details to protect applications from attacks. Navigate to **Security > Security Violations** for a single-pane solution to:

- Access the application security violations based on their categories such as **Network, Bot, and WAF**
- Take corrective actions to secure the applications

To view the security violations in NetScaler Console, ensure:

- Users have a premium license for the NetScaler (for WAF and BOT violations).
- Users have applied for a license on the load balancing or content switching virtual servers (for WAF and BOT). For more information, refer to: [Manage Licensing on Virtual Servers](#).
- Users can enable more settings. For more information, see the procedure available at the Setting up section in the NetScaler product documentation: [Setting up](#).

Violation categories

NetScaler Console enables users to view the violations available in [All Violations](#):

Setting up

For violations, ensure whether **Metrics Collector** is enabled. By default, **Metrics Collector** is enabled on the NetScaler. For more information, see: [Configure Intelligent App Analytics](#).


Enable advanced security analytics

- Navigate to **Networks > Instances > NetScaler**, and select the instance type. For example, MPX.
- Select the NetScaler instance and from the **Select Action** list, select **Configure Analytics**.
- Select the virtual server and click **Enable Analytics**.
- On the **Enable Analytics** window:
 - Select **Web Insight**. After users select Web Insight, the read-only **Advanced Security Analytics** option is enabled automatically.

Note:

The **Advanced Security Analytics** option is displayed only for premium licensed ADC instances.

- Select **Logstream** as Transport Mode
- The Expression is true by default
- Click **OK**

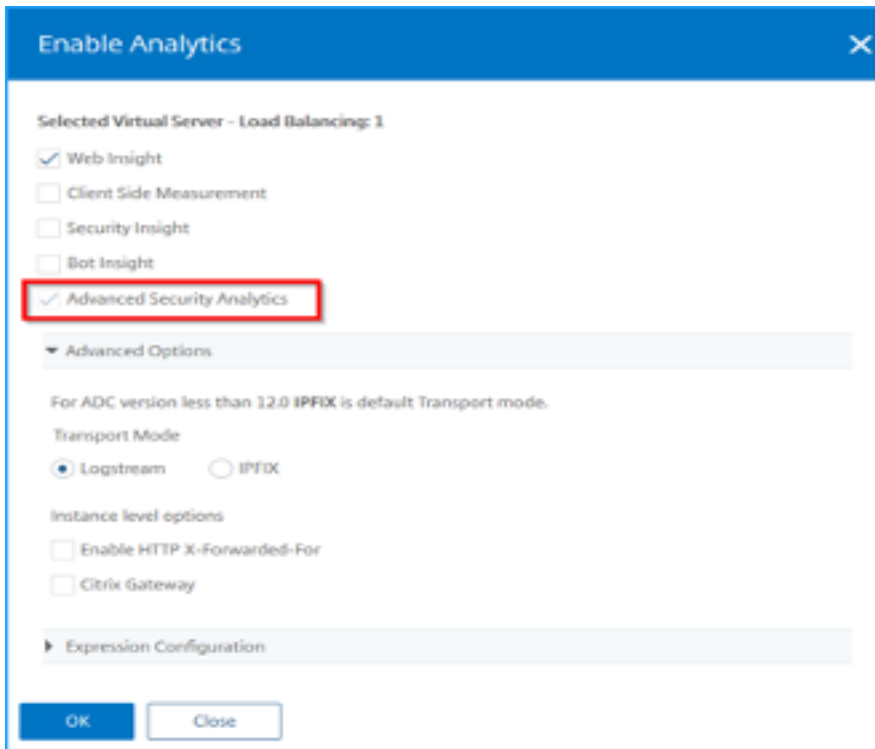


Enable web transaction settings

- Navigate to **Analytics > Settings**.

The **Settings** page is displayed.

- Click **Enable Features for Analytics**.
- Under **Web Transaction Settings**, select **All**.

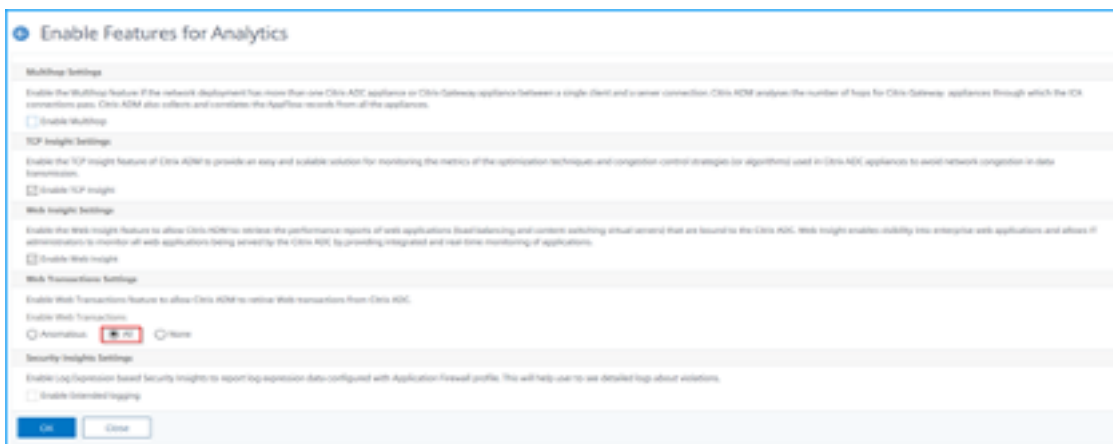

- Click **Ok**.


Security violations dashboard

In the security violations dashboard, users can view:

- Total violations occurred across all NetScaler and applications. The total violations are displayed based on the selected time duration.



- Total violations under each category.

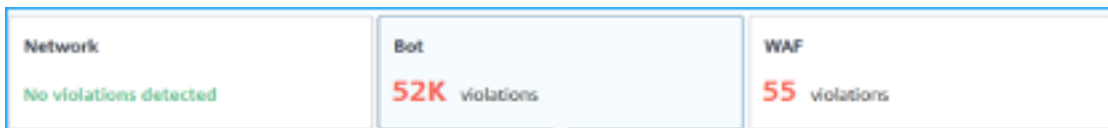

- Total ADCs affected, total applications affected, and top violations based on the total occurrences and the affected applications.




For more information on violations details, see [All violations](#).

Bot insight

Configure BOT insight in NetScaler. For more information, see [Bot](#).

View bots

Click the virtual server to view the **Application Summary**

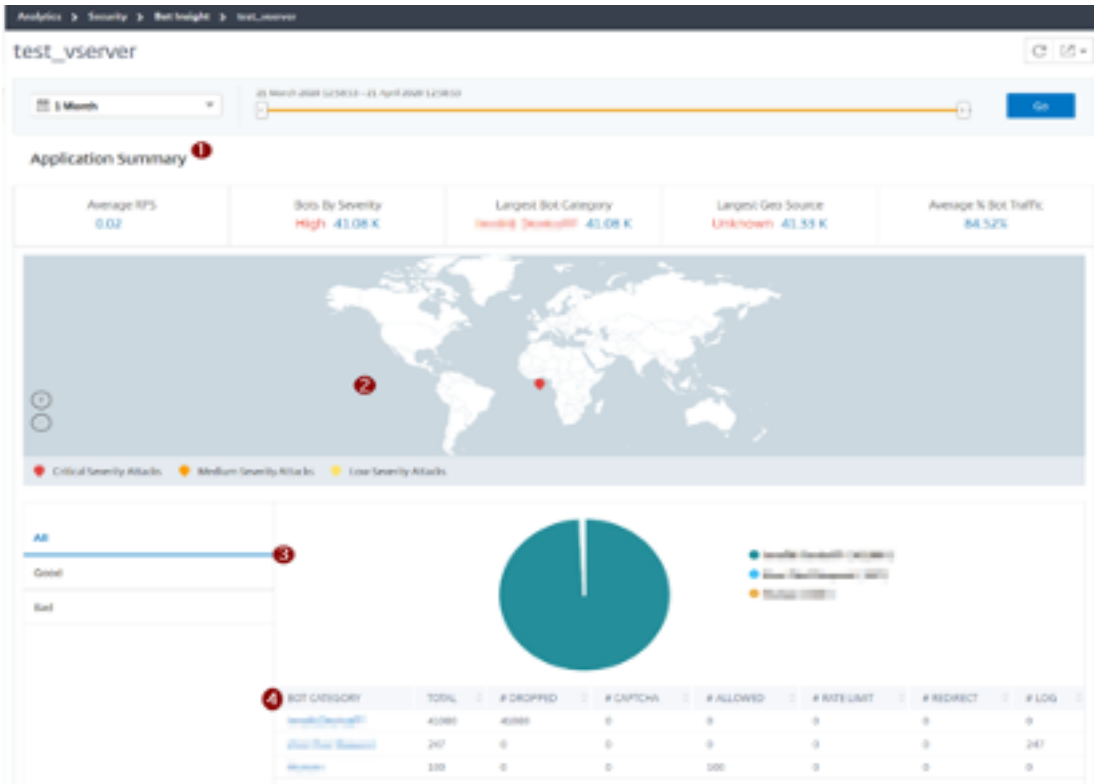

1. Provides the Application Summary details such as:

- **Average RPS** –Indicates the average bot transaction requests per second (RPS) received on virtual servers.
- **Bots by Severity** –Indicates that the highest bot transactions occurred based on the severity. The severity is categorized based on **Critical, High, Medium,** and **Low**.

For example, if the virtual servers have 11770 high severity bots and 1550 critical severity bots, then NetScaler Console displays **Critical 1.55 K** under **Bots by Severity**.

- **Largest Bot Category** –Indicates that the highest bot attacks occurred based on the bot category.

For example, if the virtual servers have 8000 block-listed bots, 5000 allow listed bots, and 10000 Rate Limit Exceeded bots, then NetScaler Console displays **Rate Limit Exceeded 10 K** under **Largest Bot Category**.

- **Largest Geo Source** –Indicates that the highest bot attacks occurred based on a region.

For example, if the virtual servers have 5000 bot attacks in Santa Clara, 7000 bot attacks in London, and 9000 bot attacks in Bangalore, then NetScaler Console displays **Bangalore 9 K** under **Largest Geo Source**.

- **Average % Bot Traffic** –Indicates the human bot ratio.
2. Displays the severity of the bot attacks based on locations in the map view
 3. Displays the types of bot attacks (Good, Bad, and all)
 4. Displays the total bot attacks along with the corresponding configured actions. For example, if you have configured:
 - IP address range (192.140.14.9 to 192.140.14.254) as block list bots and selected Drop as an action for these IP address ranges
 - IP range (192.140.15.4 to 192.140.15.254) as block list bots and selected to create a log message as an action for these IP ranges

In this scenario, NetScaler Console displays:

- Total block listed bots
- Total bots under **Dropped**
- Total bots under Log

View CAPTCHA bots

In webpages, CAPTCHAs are designed to identify if the incoming traffic is from a human or an automated bot. To view the CAPTCHA activities in NetScaler Console, users must configure CAPTCHA as a bot action for IP reputation and device fingerprint detection techniques in a NetScaler Console instance. For more information, see: [Configure Bot Management](#).

The following are the CAPTCHA activities that NetScaler Console displays in Bot insight:

- **Captcha attempts exceeded** –Denotes the maximum number of CAPTCHA attempts made after login failures
- **Captcha client muted** –Denotes the number of client requests that are dropped or redirected because these requests were detected as bad bots earlier with the CAPTCHA challenge
- **Human** –Denotes the captcha entries performed from the human users
- **Invalid captcha response** –Denotes the number of incorrect CAPTCHA responses received from the bot or human, when NetScaler sends a CAPTCHA challenge

BOT CATEGORY	TOTAL ATTACKS	# DROPPED	# CAPTCHA	# ALLOWED	# RATE LIMIT	# REDIRECT	# LOG
Captcha Attempts Exceeded	11	11	0	0	0	0	0
Captcha Client Muted	2	0	0	0	0	2	0
Crawler	86	86	0	0	0	0	0
Feed Fetcher	8	8	0	0	0	0	0
Human	0	0	0	0	0	0	0
Invalid Captcha Response	40	33	0	0	0	0	7
Marketing	262	262	0	0	0	0	0
NULL	1	0	0	0	0	0	1
Scaper	33	33	0	0	0	0	0
Search Engine	155	155	0	0	0	0	0
Site Monitor	57	57	0	0	0	0	0
Tool	82	82	0	0	0	0	0
Uncategorized	0	0	0	0	0	0	0

View bot traps

To view bot traps in NetScaler Console, you must configure the bot trap in NetScaler. For more information, see: [Configure Bot Management](#).

Application	Total Bots	Total Human Requests	Bot Human Ratio	Signatured Bots	Fingerprinted Bots	Rate Based Bots	IP Reputation Bots	Whitelist Bots	Blocklist Bots	Bot Traps	TPS Bots
test_bot1	440	0	100:0	0	0	0	0	0	0	0	440
test_virtual1	9.33 K	0	100:0	0	0	0	0	0	0	5	9.32 K

To identify the bot trap, a script is enabled in the webpage and this script is hidden from humans, but not to bots. NetScaler Console identifies and reports the bot traps, when this script is accessed by the bots.


Click the virtual server and select **Zero Pixel Request**

BOT CATEGORY	TOTAL	# DROPPED	# CAPTCHA	# ALLOWED	# RATE LIMIT	# REDIRECT	# LOG
Invalid DeviceFP	33450	33450	0	0	0	0	0
Zero Pixel Request	246	0	0	0	0	0	246
Human	100	0	0	100	0	0	0


View bot details

For further details, click the bot attack type under **Bot Category**.

The details such as attack time and total number of bot attacks for the selected captcha category are displayed.

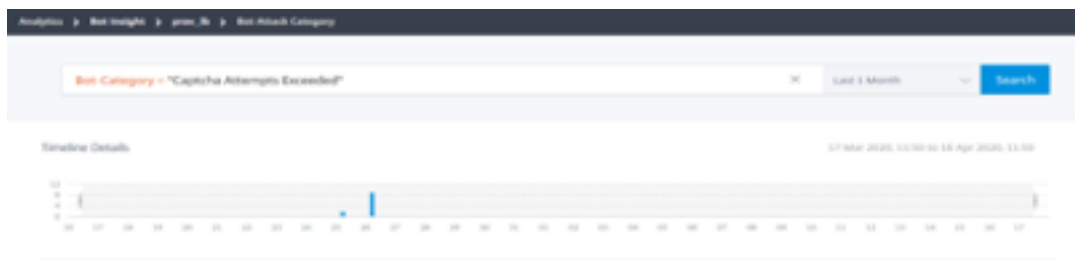

Users can also drag the bar graph to select the specific time range to be displayed with bot attacks.

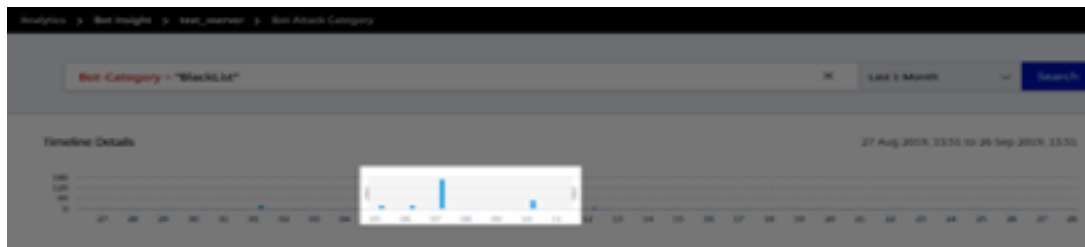

To get additional information of the bot attack, click to expand.

Instance IP	Client IP	Bot Type	Severity	Attack Name	Bot Category	Bot Profile Name	Region	Country Code
10.106.154.240	10.106.154.240	Bad	Critical	Drop	BlackList	BlackList	Bangalore	IN

- **Instance IP** –Indicates the NetScaler instance IP address.
- **Total Bots** –Indicates that the total bot attacks occurred for that particular time.
- **HTTP Request URL** –Indicates the URL that is configured for captcha reporting.
- **Country Code** –Indicates the country where the bot attack occurred.
- **Region** –Indicates the region where the bot attack occurred.
- **Profile Name** –Indicates the profile name that users provided during the configuration.

Advanced search

Users can also use the search text box and time duration list, where they can view bot details as per the user requirement. When users click the search box, the search box gives them the following list of search suggestions.

- **Instance IP** –NetScaler instance IP address.
- **Client-IP** –Client IP address.
- **Bot-Type** –Bot type such as Good or Bad.

- **Severity** –Severity of the bot attack.
- **Action-Taken** –Action taken after the bot attack such as Drop, No action, Redirect.
- **Bot-Category** –Category of the bot attack such as block list, allow list, fingerprint. Based on a category, users can associate a bot action to it.
- **Bot-Detection** –Bot detection types (block list, allow list, and so on) that users have configured on NetScaler.
- **Location** –Region/country where the bot attack has occurred
- **Request-URL** –URL that has the possible bot attacks

Users can also use operators in the user search queries to narrow the focus of the user search. For example, if users want to view all bad bots:

- Click the search box and select **Bot-Type**
- Click the search box again and select the operator =
- Click the search box again and select **Bad**
- Click **Search** to display the results



Unusually high request rate

Users can control the incoming and outgoing traffic from or to an application. A bot attack can perform an unusually high request rate. For example, if users configure an application to allow 100 requests/minute and if users observe 350 requests, then it might be a bot attack.

Using the **Unusually High Request Rate** indicator, users can analyze the unusual request rate received to the application.



Under **Event Details**, users can view:

- The affected application. Users can also select the application from the list if two or more applications are affected with violations.
- The graph indicating all violations
- The violation occurrence time
- The detection message for the violation, indicating the total requests received and % of excessive requests received than the expected requests
- The accepted range of expected request rates range from the application

Bot Detection

The NetScaler bot management system uses various techniques to detect the incoming bot traffic. The techniques are used as detection rules to detect the bot type.

Configuring Bot management by using GUI Users can configure NetScaler bot management by first enabling the feature on the appliance. For more information, see [Bot Detection](#).

IP reputation

IP reputation is a tool that identifies IP addresses that send unwanted requests. Using the IP reputation list you can reject requests that are coming from an IP address with a bad reputation.

Configure IP reputation by using GUI This configuration is a prerequisite for the bot IP reputation feature. For more information, see [IP Reputation](#).

Auto update for Bot signatures The bot static signature technique uses a signature lookup table with a list of good bots and bad bots. For more information, see [Signature auto update](#).

NetScaler Web App Firewall and OWASP top ten–2021

The Open Web Application Security Project(OWAP) released the OWASP Top 10 for 2021 for web application security. This list documents the most common web application vulnerabilities and is a great starting point to evaluate web security. This section explains on how to configure the NetScaler Web App Firewall to mitigate these flaws. WAF is available as an integrated module in the NetScaler (Premium Edition) and a complete range of appliances.

The full OWASP Top 10 document is available at [OWASP Top Ten](#).

OWASP Top-10 2021	NetScaler Web App Firewall Features
A1:2021 Broken Access Control	AAA, Authorization security features within AAA module of NetScaler, Form protections, and cookie tampering protections, StartURL, and ClosureURL
A2:2021 - Cryptographic Failures	Credit Card protection, Safe Commerce, Cookie proxying, and Cookie encryption
A3:2021- Injection	Injection attack prevention (SQL or any other custom injections such as OS Command injection, XPath injection, and LDAP injection), auto update signature feature
A5:2021 Security Misconfiguration	This protection including WSI checks, XML message validation & XML SOAP fault filtering check
A6:2021 - Vulnerability and Outdated Components	Vulnerability scan reports, Application Firewall Templates, and Custom Signatures
A7:2021 - Identification and Authentication Failure	AAA, Cookie tampering protection, Cookie proxying, Cookie encryption, CSRF tagging, Use SSL
A8:2021 –Software and Data Integrity Failures	XML Security checks, GWT content type, custom signatures, Xpath for JSON and XML
A9:2021 –Security Logging and Monitoring Failures	User configurable custom logging, Management and Analytics System

A1:2021 Broken Access Control

Restrictions on what authenticated users are allowed to do are often not properly enforced. Attackers can exploit these flaws to access unauthorized functionality and data, such as access other users' accounts, view sensitive files, modify other users' data, change access rights.

NetScaler Web App Firewall protections

- AAA feature that supports authentication, authorization, and auditing for all application traffic allows a site administrator to manage access controls with the ADC appliance.
- The Authorization security feature within the AAA module of the ADC appliance enables the appliance to verify, which content on a protected server it should allow each user to access.
- Form field consistency: If object references are stored as hidden fields in forms, then using form field consistency you can validate that these fields are not tampered on subsequent requests.
- Cookie proxying and cookie consistency: Object references that are stored in cookie values can be validated with these protections.
- Start URL check with URL closure: Allows user access to a predefined allow list of URLs. URL closure builds a list of all URLs seen in valid responses during the user session and automatically allows access to them during that session.

A2:2021 - Cryptographic failures

Many web applications and APIs do not properly protect sensitive data, such as financial, healthcare, and PII. Attackers may steal or modify such poorly protected data to conduct credit card fraud, identity theft, or other crimes. Sensitive data may be compromised without extra protection, such as encryption at rest or in transit, and requires special precautions when exchanged with the browser.

NetScaler Web App Firewall protections

- Web Application Firewall protects applications from leaking sensitive data like credit card details.
- Sensitive data can be configured as safe objects in Safe Commerce protection to avoid exposure.
- Any sensitive data in cookies can be protected by Cookie proxying and Cookie encryption.

A3:2021- Injection

Injection flaws, such as SQL, NoSQL, OS, and LDAP injection, occur when untrusted data is sent to an interpreter as part of a command or query. The attacker's hostile data can trick the interpreter into running unintended commands or accessing data without proper authorization.

XSS flaws occur whenever an application includes untrusted data in a new webpage without proper validation or escaping, or updates an existing webpage with user-supplied data using a browser API that can create HTML or JavaScript. XSS allows attackers to run scripts in the victim's browser, which can hijack user sessions, deface websites, or redirect the user to malicious sites.

NetScaler Web App Firewall protections

- SQL injection prevention feature protects against common injection attacks. Custom injection patterns can be uploaded to protect against any type of injection attack, including XPath and LDAP. This is applicable for both HTML and XML payloads.
- The auto update signature feature keeps the injection signatures up to date.
- The field format protection feature allows the administrator to restrict any user parameter to a regular expression. For instance, you can enforce that a zip-code field contains integers only or even 5-digit integers.
- Form field consistency validates each submitted user form against the user session form signature to ensure the validity of all form elements.
- Buffer overflow checks ensure that the URL, headers, and cookies are in the right limits blocking any attempts to inject large scripts or code.
- XSS protection protects against common XSS attacks. Custom XSS patterns can be uploaded to modify the default list of allowed tags and attributes. The ADC WAF uses a white list of allowed HTML attributes and tags to detect XSS attacks. This is applicable for both HTML and XML payloads.
- ADC WAF blocks all the attacks listed in the OWASP XSS Filter Evaluation Cheat Sheet.
- Field format check prevents an attacker from sending inappropriate web form data, which can be a potential XSS attack.
- Form field consistency.

A5:2021 - Security misconfiguration

Security misconfiguration is the most commonly seen issue. This is commonly a result of insecure default configurations, incomplete or improvised configurations, open cloud storage, misconfigured

HTTP headers, and verbose error messages containing sensitive information. Not only must all operating systems, frameworks, libraries, and applications be securely configured, but they must be patched and upgraded in a timely fashion.

Many older or poorly configured XML processors evaluate external entity references within XML documents. External entities can be used to disclose internal files using the file URI handler, internal file shares, internal port scanning, remote code execution, and denial of service attacks.

NetScaler Web App Firewall protections

- The PCI-DSS report generated by the Application Firewall, documents the security settings on the Firewall device.
- Reports from the scanning tools are converted to ADC WAF signatures to handle security misconfigurations.
- NetScaler Web App Firewall Web Application Firewall supports Cenxic, IBM AppScan (Enterprise and Standard), Qualys, TrendMicro, WhiteHat, and custom vulnerability scan reports.
- In addition to detecting and blocking common application threats that can be adapted for attacking XML-based applications (that is, cross-site scripting, command injection, and so on).
- NetScaler Web App Firewall Web Application Firewall includes a rich set of XML-specific security protections. These include schema validation to thoroughly verify SOAP messages and XML payloads, and a powerful XML attachment check to block attachments containing malicious executables or viruses.
- Automatic traffic inspection methods block XPath injection attacks on URLs and forms aimed at gaining access.
- NetScaler Web App Firewall Web Application Firewall also thwarts various DoS attacks, including external entity references, recursive expansion, excessive nesting, and malicious messages containing either long or many attributes and elements.

A6:2021 - Vulnerable and outdated components

Components, such as libraries, frameworks, and other software modules, run with the same privileges as the application. If a vulnerable component is exploited, such an attack can facilitate serious data loss or server takeover. Applications and APIs using components with known vulnerabilities may undermine application defenses and enable various attacks and impacts.

NetScaler Web App Firewall protections

- We recommend having the third-party components up to date.

- Vulnerability scan reports that are converted to ADC signatures can be used to virtually patch these components.
- Application firewall templates that are available for these vulnerable components can be used.
- Custom signatures can be bound with the firewall to protect these components.

A7:2021–Broken authentication

Application functions related to authentication and session management are often implemented incorrectly, allowing attackers to compromise passwords, keys, or session tokens, or to exploit other implementation flaws to assume other users' identities temporarily or permanently.

NetScaler Web App Firewall protections

- NetScaler AAA module performs user authentication and provides Single Sign-On functionality to back-end applications. This is integrated into the NetScaler AppExpert policy engine to allow custom policies based on user and group information.
- Using SSL offloading and URL transformation capabilities, the firewall can also help sites to use secure transport layer protocols to prevent stealing of session tokens by network sniffing.
- Cookie proxying and cookie encryption can be employed to completely mitigate cookie stealing.

A8:2021 - Software and data integrity failure

Insecure deserialization often leads to remote code execution. Even if deserialization flaws do not result in remote code execution, they can be used to perform attacks, including replay attacks, injection attacks, and privilege escalation attacks.

NetScaler Web App Firewall protections

- JSON payload inspection with custom signatures.
- XML security: protects against XML denial of service (xDoS), XML SQL and Xpath injection and cross-site scripting, format checks, WS-I basic profile compliance, XML attachments check.
- Field format checks and Cookie Consistency and Field Consistency can be used.

A9:2021 - Security logging and monitoring failures

Insufficient logging and monitoring, coupled with missing or ineffective integration with incident response, allows attackers to further attack systems, maintain persistence, pivot to more systems, and tamper, extract, or destroy data. Most breach studies show the time to detect a breach is over 200 days, typically detected by external parties rather than internal processes or monitoring.

NetScaler Web App Firewall protections

- When the log action is enabled for security checks or signatures, the resulting log messages provide information about the requests and responses that the application firewall has observed while protecting your websites and applications.
- The application firewall offers the convenience of using the built-in ADC database for identifying the locations corresponding to the IP addresses from which malicious requests are originating.
- Default format (PI) expressions give the flexibility to customize the information included in the logs with the option to add the specific data to capture in the application firewall-generated log messages.
- The application firewall supports CEF logs.

References

- [HTML SQL Injection Check](#)
- [XML SQL Injection Check](#)
- [Using the Command Line to Configure the HTML Cross-Site Scripting Check](#)
- [XML Cross-Site Scripting Check](#)
- [Using the Command Line to Configure the Buffer Overflow Security Check](#)
- [Adding or Removing a Signature Object](#)
- [Configuring or Modifying a Signatures Object](#)
- [Updating a Signature Object](#)
- [Snort Rule Integration](#)
- [Bot Detection](#)
- [Deploy a NetScaler VPX instance on Microsoft Azure](#)

Configure address pools intranet IP for a NetScaler Gateway appliance

May 2, 2023

In some situations, users who connect with the NetScaler Gateway Plug-in need a unique IP address for a NetScaler Gateway appliance. When you enable address pools (also known as IP pooling) for a group, the NetScaler Gateway appliance can assign a unique IP address alias to each user. You configure address pools by using intranet IP (IIP) addresses.

You can configure address pools on a NetScaler Gateway appliance deployed on Azure by following this 2-step procedure:

- Registering the private IP addresses that are used in the address pool, in Azure
- Configuring address pools in the NetScaler Gateway appliance

Register a private IP address in the Azure portal

In Azure, you can deploy a NetScaler VPX instance with multiple IP addresses. You can add IP addresses to a VPX instance in two ways:


a. While provisioning a VPX instance

For more information about how to add multiple IP addresses while provisioning a VPX instance, see [Configure multiple IP addresses for a NetScaler standalone instance](#). To add IP addresses by using PowerShell commands while provisioning a VPX instance, see [Configure multiple IP addresses for a NetScaler VPX instance in standalone mode by using PowerShell commands](#).


b. After provisioning a VPX instance

After you've provisioned a VPX instance, follow these steps to register a private IP address in the Azure portal, which you configure as an address pool in the NetScaler Gateway appliance.

1. From Azure Resource Manager (ARM), go to the already created NetScaler VPX instance > **Network interfaces**. Choose the network interface which is bound to a subnet to which the IIP that you want to register belongs.

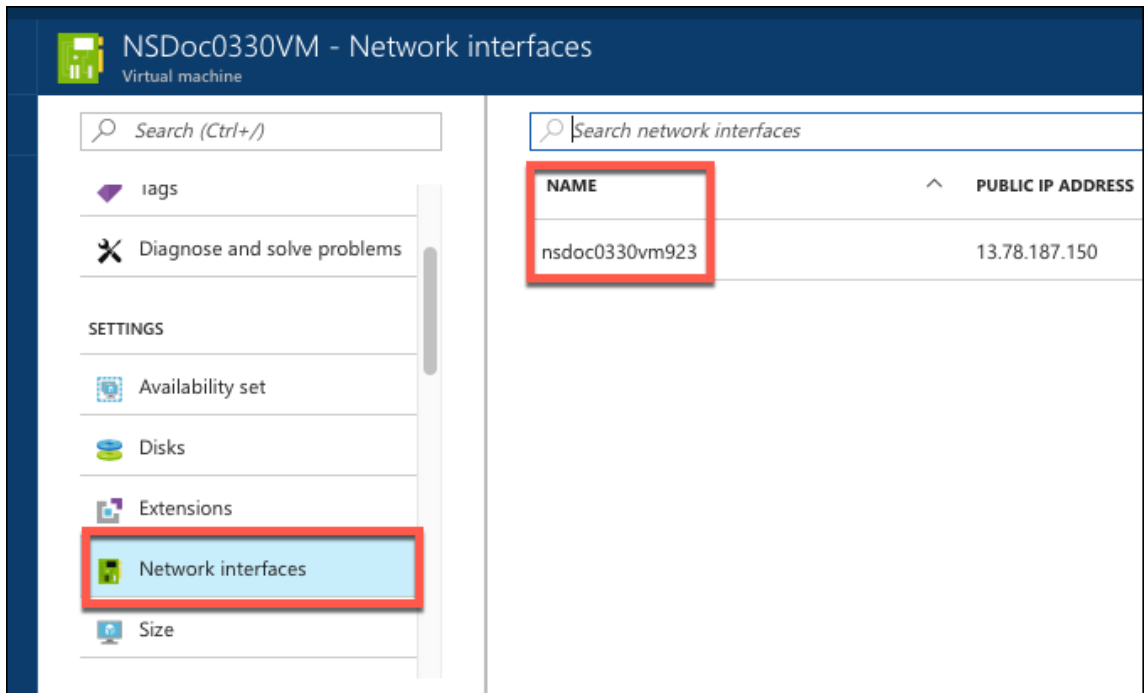

2. Click **IP Configurations**, and then click **Add**.

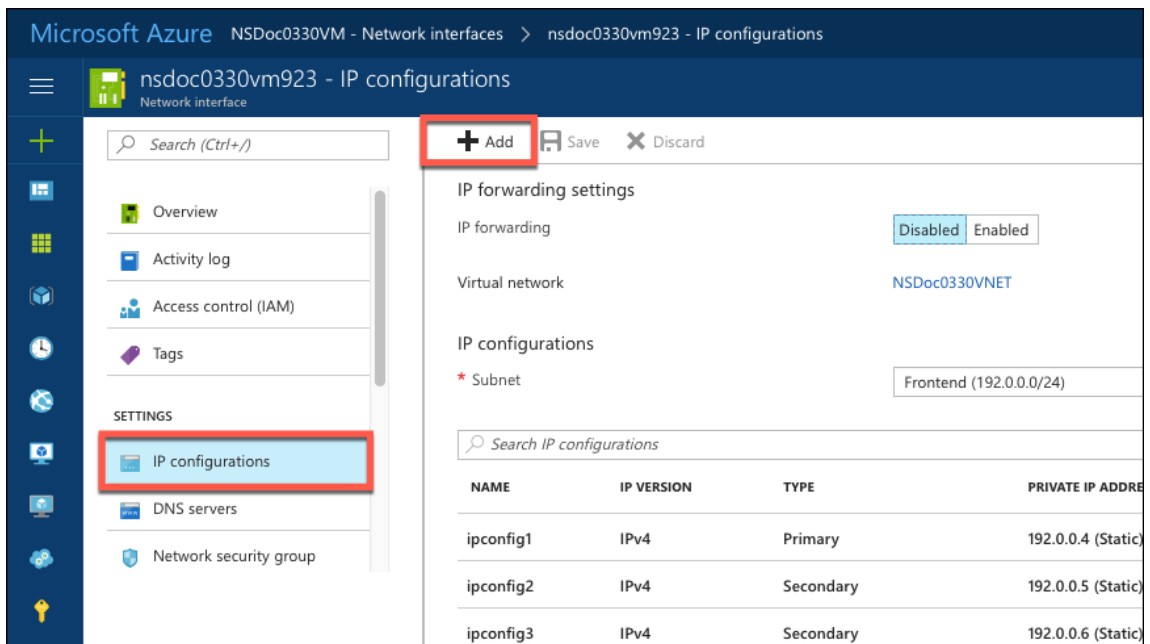

3. Provide the required details as shown in the example below and click **OK**.

The screenshot shows a window titled "Add IP configuration" with the identifier "nsdoc0330vm923". The form contains the following fields and options:

- Name:** A text input field containing "PrivateIP5" with a green checkmark on the right.
- Type:** Two radio buttons, "Primary" (unselected) and "Secondary" (selected).
- Message:** A grey bar with an information icon and the text "Primary IP configuration already exists".
- Private IP address settings:**
 - Allocation:** Two radio buttons, "Dynamic" (unselected) and "Static" (selected).
 - IP address:** A text input field containing "192.0.0.8" with a green checkmark on the right.
 - Public IP address:** Two radio buttons, "Disabled" (selected) and "Enabled" (unselected).
- Buttons:** A blue "OK" button with a red border at the bottom.

Configure address pools in the NetScaler Gateway appliance

For more information about how to configure address pools on the NetScaler Gateway, see this [Configuring Address Pools](#).

Limitation: You cannot bind a range of IIP addresses to users. Every IIP address that is used in an address pool must be registered.

Configure multiple IP addresses for a NetScaler VPX standalone instance by using PowerShell commands

May 2, 2023

In an Azure environment, a NetScaler VPX virtual appliance can be deployed with multiple NICs. Each NIC can have multiple IP addresses. This section describes how to deploy a NetScaler VPX instance with a single NIC and multiple IP addresses, by using PowerShell commands. You can use the same script for multi-NIC and multi-IP deployment.

Note

In this document, IP-Config refers to a pair of IP addresses, public IP, and private IP, that is associated with an individual NIC. For more information, see the [Azure terminology](#) section.

Use case

In this use case, a single NIC is connected to a virtual network (VNET). The NIC is associated with three IP configurations, as shown in the following table.


IP Config	Associated with
IPConfig-1	Static public IP address; static private IP address
IPConfig-2	Static public IP address; static private address
IPConfig-3	Static private IP address

Note

IPConfig-3 is not associated with any public IP address.

Diagram: Topology

Here is the visual representation of the use case.

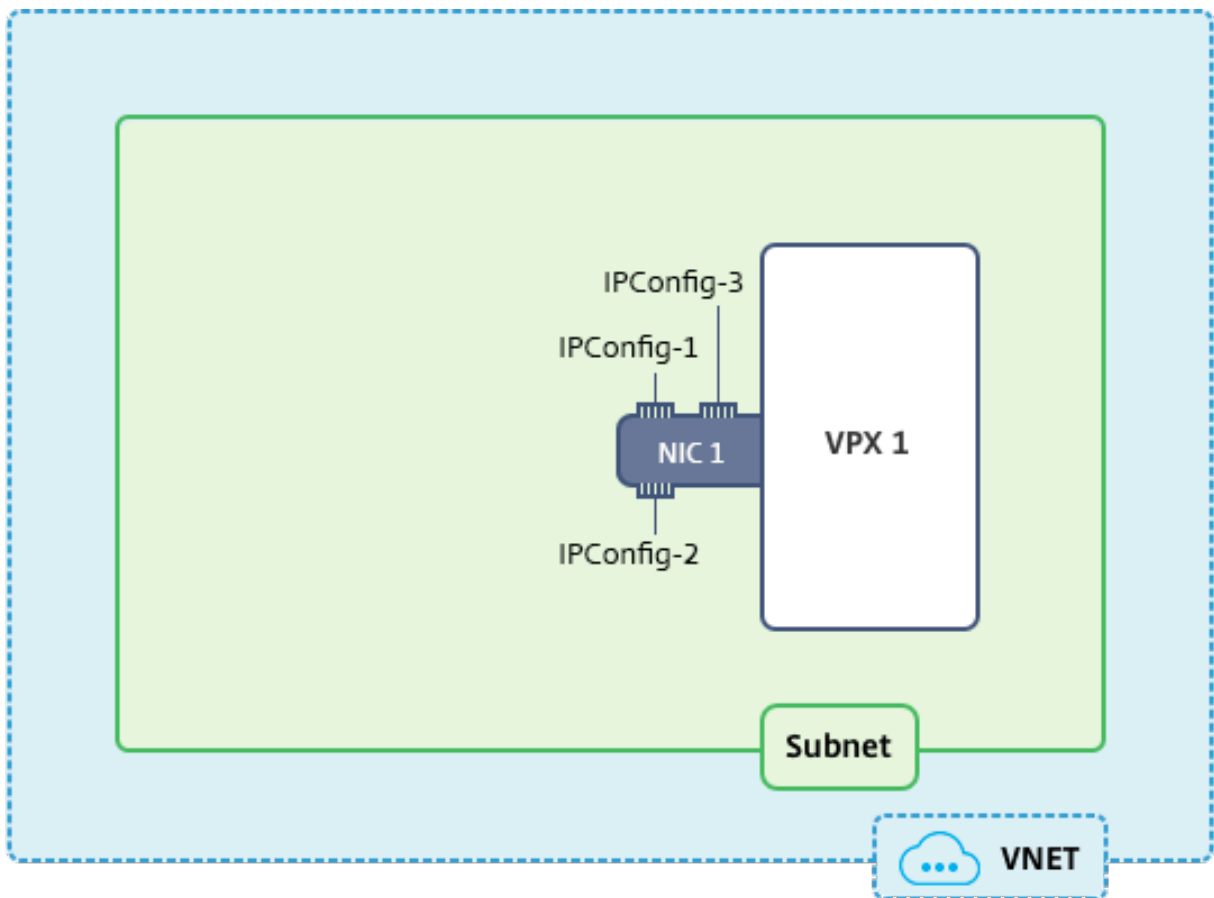**Note**

In a multi-NIC, multi-IP Azure NetScaler VPX deployment, the private IP address associated with the primary (first) `IPConfig` of the primary (first) NIC is automatically added as the management NSIP address of the appliance. The remaining private IP addresses associated with `IPConfigs` must be added in the VPX instance as VIPs or SNIPs by using the `add ns ip` command, as determined by your requirements.

Here is the summary of the steps required for configuring multiple IP addresses for a NetScaler VPX virtual appliance in standalone mode:

1. Create Resource Group
2. Create Storage Account
3. Create Availability Set
4. Create Network service group
5. Create Virtual Network
6. Create Public IP Address
7. Assign IP Configuration
8. Create NIC
9. Create NetScaler VPX Instance

10. Check NIC Configurations
11. Check VPX-side Configurations

Script

Parameters

Following are sample parameters settings for the use case in this document. You can use different settings if you want.

`$locName="westcentralus"`

`$rgName="Azure-MultiIP"`

`$nicName1="VM1-NIC1"`

`$vNetName="Azure-MultiIP-vnet"`

`$vNetAddressRange="11.6.0.0/16"`

`$frontEndSubnetName="frontEndSubnet"`

`$frontEndSubnetRange="11.6.1.0/24"`

`$prmStorageAccountName="multiipstorage"`

`$avSetName="multiip-avSet"`

`$vmSize="Standard_DS4_V2"`(This parameter creates a VM with up to four NICs.)

Note: The minimum requirement for a VPX instance is 2 vCPUs and 2 GB RAM.

`$publisher="Citrix"`

`$offer="netscalervpx110-6531"`(You can use different offers.)

`$sku="netscalerbyol"`(According to your offer, the SKU can be different.)

`$version="latest"`

`$pubIPName1="PIP1"`

`$pubIPName2="PIP2"`

`$domName1="multiipvpx1"`

`$domName2="multiipvpx2"`

`$vmNamePrefix="VPXMultiIP"`

`$osDiskSuffix="osmultiipalbdiskdb1"`

Network Security Group (NSG)-related information:

```
$nsgName="NSG-MultiIP"  
$rule1Name="Inbound-HTTP"  
$rule2Name="Inbound-HTTPS"  
$rule3Name="Inbound-SSH"  
$IpConfigName1="IPConfig1"  
$IPConfigName2="IPConfig-2"  
$IPConfigName3="IPConfig-3"
```

1. Create Resource Group

```
New-AzureRmResourceGroup -Name $rgName -Location $locName
```

2. Create Storage Account

```
$prmStorageAccount = New-AzureRMStorageAccount -Name $prmStorageAccountName  
-ResourceGroupName $rgName -Type Standard_LRS -Location $locName
```

3. Create Availability Set

```
$avSet = New-AzureRMAvailabilitySet -Name $avSetName -ResourceGroupName  
$rgName -Location $locName
```

4. Create Network Security Group

1. Add rules. You must add a rule to the network security group for any port that serves traffic.

```
$rule1=New-AzureRmNetworkSecurityRuleConfig -Name $rule1Name -  
Description "Allow HTTP"-Access Allow -Protocol Tcp -Direction  
Inbound -Priority 101 -SourceAddressPrefix Internet -SourcePortRange  
* -DestinationAddressPrefix * -DestinationPortRange 80  
$rule2=New-AzureRmNetworkSecurityRuleConfig -Name $rule2Name -  
Description "Allow HTTPS"-Access Allow -Protocol Tcp -Direction  
Inbound -Priority 110 -SourceAddressPrefix Internet -SourcePortRange  
* -DestinationAddressPrefix * -DestinationPortRange 443  
$rule3=New-AzureRmNetworkSecurityRuleConfig -Name $rule3Name  
-Description "Allow SSH"-Access Allow -Protocol Tcp -Direction  
Inbound -Priority 120 -SourceAddressPrefix Internet -SourcePortRange  
* -DestinationAddressPrefix * -DestinationPortRange 22
```


2. Create network security group object.

```
$nsg=New-AzureRmNetworkSecurityGroup -ResourceGroupName $rgName  
-Location $locName -Name $nsgName -SecurityRules $rule1,$rule2,  
$rule3
```

5. Create Virtual Network

1. Add subnets.

```
$frontendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name  
$frontEndSubnetName -AddressPrefix $frontEndSubnetRange
```

2. Add virtual network object.

```
$vnet=New-AzureRmVirtualNetwork -Name $vNetName -ResourceGroupName  
$rgName -Location $locName -AddressPrefix $vNetAddressRange -  
Subnet $frontendSubnet
```

3. Retrieve subnets.

```
$subnetName="frontEndSubnet"  
$subnet1=$vnet.Subnets|?{ $_.Name -eq $subnetName }
```

6. Create Public IP Address

```
$pip1=New-AzureRmPublicIpAddress -Name $pubIPName1 -ResourceGroupName  
$rgName -DomainNameLabel $domName1 -Location $locName -AllocationMethod  
Static
```

```
$pip2=New-AzureRmPublicIpAddress -Name $pubIPName2 -ResourceGroupName  
$rgName -DomainNameLabel $domName2 -Location $locName -AllocationMethod  
Static
```

Note

Check availability of domain names before using.

Allocation method for IP addresses can be dynamic or static.

7. Assign IP Configuration

In this use case, consider the following points before assigning IP addresses:

- IPConfig-1 belongs to subnet1 of VPX1.
- IPConfig-2 belongs to subnet 1 of VPX1.

- IPConfig-3 belongs to subnet 1 of VPX1.

Note

When you assign multiple IP configurations to a NIC, one configuration must be assigned as primary.

```

1 $IPAddress1="11.6.1.27"
2 $IPConfig1=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName1 -
    Subnet $subnet1 -PrivateIpAddress $IPAddress1 -PublicIpAddress $pip1
    - Primary
3 $IPAddress2="11.6.1.28"
4 $IPConfig2=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName2 -
    Subnet $subnet1 -PrivateIpAddress $IPAddress2 -PublicIpAddress $pip2
5 $IPAddress3="11.6.1.29"
6 $IPConfig3=New-AzureRmNetworkInterfaceIpConfig -Name $IPConfigName3 -
    Subnet $subnet1 -PrivateIpAddress $IPAddress3 -Primary

```

Use a valid IP address that meets your subnet requirements and check its availability.

8. Create NIC

```
$nic1=New-AzureRmNetworkInterface -Name $nicName1 -ResourceGroupName
    $rgName -Location $locName -IpConfiguration $IpConfig1,$IpConfig2,
    $IPConfig3 -NetworkSecurityGroupId $nsg.Id
```

9. Create NetScaler VPX Instance

1. Initialize variables.

```
$suffixNumber = 1
$vmName = $vmNamePrefix + $suffixNumber
```

2. Create VM config object.

```
$vmConfig=New-AzureRMVMConfig -VMName $vmName -VMSize $vmSize -
    AvailabilitySetId $avSet.Id
```

3. Set credentials, OS, and image.

```
$cred=Get-Credential -Message "Type the name and password for VPX
    login."
$vmConfig=Set-AzureRMVMOperatingSystem -VM $vmConfig -Linux -
    ComputerName $vmName -Credential $cred
$vmConfig=Set-AzureRMVMSourceImage -VM $vmConfig -PublisherName
    $publisher -Offer $offer -Skus $sku -Version $version
```

4. Add NIC.

```
$vmConfig=Add-AzureRMVMNetworkInterface -VM $vmConfig -Id $nic1.  
Id -Primary
```

Note

In a multi-NIC VPX deployment, one NIC must be primary. So, “-Primary” must be appended while adding that NIC to the VPX instance.

5. Specify OS disk and create VM.

```
$osDiskName=$vmName + "-" + $osDiskSuffix1  
$osVhdUri=$prmStorageAccount.PrimaryEndpoints.Blob.ToString()+ "  
vhds/" + $osDiskName + ".vhd"  
$vmConfig=Set-AzureRMVMOsdisk -VM $vmConfig -Name $osDiskName -  
VhdUri $osVhdUri -CreateOption fromImage  
Set-AzureRmVMPlan -VM $vmConfig -Publisher $publisher -Product  
$offer -Name $sku  
New-AzureRMVM -VM $vmConfig -ResourceGroupName $rgName -Location  
$locName
```

10. Check NIC Configurations

After the VPX instance starts, you can check the IP addresses allocated to `IPConfigs` of the VPX NIC by using the following command.

```
$nic.IPConfig
```

11. Check VPX-side Configurations

When the NetScaler VPX instance starts, a private IP address associated with primary `IPconfig` of the primary NIC is added as the NSIP address. The remaining private IP addresses must be added as VIP or SNIP addresses, as determined by your requirements. Use the following command.

```
add nsip <Private IPAddress><netmask> -type VIP/SNIP
```

You’ve now configured multiple IP addresses for a NetScaler VPX instance in standalone mode.

Additional PowerShell scripts for Azure deployment

May 2, 2023

This section provides the PowerShell cmdlets with which you can perform the following configurations in Azure PowerShell:

- Provision a NetScaler VPX standalone instance
- Provision a NetScaler VPX pair in a high availability setup with an Azure external load balancer
- Provision a NetScaler VPX pair in a high availability setup with Azure internal load balancer

Also see the following topics for configurations that you can perform by using PowerShell commands:

- [Configure a high-availability setup with multiple IP addresses and NICs by using PowerShell commands](#)
- [Configure GSLB on NetScaler VPX instances](#)
- [Configure GSLB on a NetScaler active-standby high-availability setup](#)
- [Configure multiple IP addresses for a NetScaler VPX instance in standalone mode by using PowerShell commands](#)
- [Configure multiple Azure VIPs for a standalone VPX instance](#)

Provision a NetScaler VPX standalone instance

1. Create a resource group

The resource group can include all the resources for the solution, or only those resources that you want to manage as a group. The location specified here is the default location for resources in that resource group. Make sure all commands to create a load balancer use the same resource group.

```
$rgName="<resource group name>"  
$locName="<location name, such as West US>"  
New-AzureRmResourceGroup -Name $rgName -Location $locName
```

For example:

```
1 $rgName = "ARM-VPX"  
2 $locName = "West US"  
3 New-AzureRmResourceGroup -Name $rgName -Location $locName
```

2. Create a storage account

Choose a unique name for your storage account that contains only lowercase letters and numbers.

```
$saName="<storage account name>"  
$saType="<storage account type>", specify one: Standard_LRS, Standard_GRS,  
, Standard_RAGRS, or Premium_LRS
```

```
New-AzureRmStorageAccount -Name $saName -ResourceGroupName
$rgName -Type $saType -Location $locName
```

For example:

```
1 $saName="vpxstorage"
2 $saType="Standard\_LRS"
3 New-AzureRmStorageAccount -Name $saName -ResourceGroupName $rgName
  -Type $saType -Location $locName
```

3. Create an availability set

Availability set helps to keep your virtual machines available during downtime, such as during maintenance. A load balancer configured with an availability set ensures that your application is always available.

```
$avName="<availability set name>"
```

```
New-AzureRmAvailabilitySet -Name $avName -ResourceGroupName
$rgName -Location $locName
```

4. Create a virtual network

Add a new virtual network with at least one subnet, if the subnet was not created previously.

```
$FrontendAddressPrefix="10.0.1.0/24"
$BackendAddressPrefix="10.0.2.0/24"
$vnetAddressPrefix="10.0.0.0/16"
$frontendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
frontendSubnet -AddressPrefix $FrontendAddressPrefix
$backendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
backendSubnet -AddressPrefix $BackendAddressPrefix
New-AzureRmVirtualNetwork -Name TestNet -ResourceGroupName
$rgName -Location $locName -AddressPrefix $vnetAddressPrefix -
Subnet $frontendSubnet,$backendSubnet
```

For example:

```
1 $frontendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
  frontendSubnet -AddressPrefix $FrontendAddressPrefix
2
3 $backendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
  backendSubnet -AddressPrefix $BackendAddressPrefix
4
5 New-AzureRmVirtualNetwork -Name TestNet -ResourceGroupName $rgName
  -Location $locName -AddressPrefix $vnetAddressPrefix -Subnet
  $frontendSubnet,$backendSubnet
```

5. Create a NIC

Create a NIC and associate the NIC with the NetScaler VPX instance. The front end Subnet created in the above procedure is indexed at 0 and the back end Subnet is indexed at 1. Now create NIC in one of the three following ways:

a) *NIC with Public IP address*

```
$nicName="<name of the NIC of the VM>"
$pip = New-AzureRmPublicIpAddress -Name $nicName -ResourceGroupName
  $rgName -Location $locName -AllocationMethod Dynamic
$nic = New-AzureRmNetworkInterface -Name $nicName -ResourceGroupName
  $rgName -Location $locName -SubnetId $vnet.Subnets[$subnetIndex
].Id -PublicIpAddressId $pip.Id
```

b) *NIC with Public IP and DNS label*

```
$nicName="<name of the NIC of the VM>"
$domName="<domain name label>"
$pip = New-AzureRmPublicIpAddress -Name $nicName -ResourceGroupName
  $rgName -DomainNameLabel $domName -Location $locName -AllocationMethod
  Dynamic
```

Before assigning \$domName, check it is available or not by using command:

```
Test-AzureRmDnsAvailability -DomainQualifiedName $domName -
Location $locName
$nic = New-AzureRmNetworkInterface -Name $nicName -ResourceGroupName
  $rgName -Location $locName -SubnetId $vnet.Subnets[$subnetIndex
].Id -PublicIpAddressId $pip.Id
```

For example:

```
1 $nicName="frontendNIC"
2
3 $domName="vpxazure"
4
5 $pip = New-AzureRmPublicIpAddress -Name $nicName -
  ResourceGroupName $rgName -DomainNameLabel $domName -Location
  $locName -AllocationMethod Dynamic
6
7 $nic = New-AzureRmNetworkInterface -Name $nicName -
  ResourceGroupName $rgName -Location $locName -SubnetId $vnet.
  Subnets\[0\].Id -PublicIpAddressId $pip.Id
```

c) *NIC with Dynamic Public Address and Static Private IP address*

Make sure that the private (static) IP address you add to the VM must be the same range as that of the subnet specified.

```

$nicName="<name of the NIC of the VM>"
$staticIP="<available static IP address on the subnet>"
$pip = New-AzureRmPublicIpAddress -Name $nicName -ResourceGroupName
  $rgName -Location $locName -AllocationMethod Dynamic
$nic = New-AzureRmNetworkInterface -Name $nicName -ResourceGroupName
  $rgName -Location $locName -SubnetId $vnet.Subnets[$subnetIndex
].Id -PublicIpAddressId $pip.Id -PrivateIpAddress $staticIP

```

6. Create a virtual object

```

$vmName="<VM name>"
$vmSize="<VM size string>"
$avSet=Get-AzureRmAvailabilitySet -Name $avName -ResourceGroupName
  $rgName
$vm=New-AzureRmVMConfig -VMName $vmName -VMSize $vmSize -AvailabilitySetId
  $avset.Id

```

7. Get the NetScaler VPX image

```

$pubName="<Image publisher name>"
$offerName="<Image offer name>"
$skuName="<Image SKU name>"
$cred=Get-Credential -Message "Type the name and password of the
local administrator account."

```

Provide your credentials that is used to log in into VPX

```

$vm=Set-AzureRmVMOperatingSystem -VM $vm -Linux -ComputerName
  $vmName -Credential $cred -Verbose
$vm=Set-AzureRmVMSourceImage -VM $vm -PublisherName $pubName -
  Offer $offerName -Skus $skuName -Version "latest"
$vm=Add-AzureRmVMNetworkInterface -VM $vm -Id $nic.Id

```

For example:

```
$pubName="citrix"
```

The following command is used for displaying all offers from Citrix:

```

1 Get-AzureRMVMImageOffer -Location $locName -Publisher $pubName |
  Select Offer
2
3 $offerName="netscalervpx110-6531"

```

The following command is used to know SKU offered by publisher for specific offer name:

```
Get-AzureRMVMImageSku -Location $locName -Publisher $pubName -
Offer $offerName | Select Skus
```

8. Create a virtual machine

```
$diskName="<name identifier for the disk in Azure storage, such
as OSDisk>"
```

For example:

```
1 $diskName="dynamic"
2
3 $pubName="citrix"
4
5 $offerName="netscalervpx110-6531"
6
7 $skuName="netscalerbyol"
8
9 $storageAcc=Get-AzureRmStorageAccount -ResourceGroupName $rgName -
Name $saName
10
11 $osDiskUri=$storageAcc.PrimaryEndpoints.Blob.ToString() + "vhds/"
+ $diskName + ".vhd"
12
13 $vm=Set-AzureRmVMOSDisk -VM $vm -Name $diskName -VhdUri $osDiskUri
-CreateOption fromImage
```

When you create VM from Images present in marketplace, use the following command to specify the VM plan:

```
Set-AzureRmVMPlan -VM $vm -Publisher $pubName -Product $offerName
-Name $skuName
```

```
New-AzureRmVM -ResourceGroupName $rgName -Location $locName -VM
$vm
```

Provision a NetScaler VPX pair in a high availability setup with an Azure external load balancer

Log on to AzureRmAccount using your Azure user credentials.

1. Create a resource group

The location specified here is the default location for resources in that resource group. Make sure that all commands used to create a load balancer use the same resource group.

```
$rgName="<resource group name>"
```

```
$locName="<location name, such as West US>"
```



```
New-AzureRmResourceGroup -Name $rgName -Location $locName
```

For example:

```
1 $rgName = "ARM-LB-NS"
2
3 $locName = "West US"
4
5 New-AzureRmResourceGroup -Name $rgName -Location $locName
```

2. Create a storage account

Choose a unique name for your storage account that contains only lowercase letters and numbers.

```
$saName="<storage account name>"
```

```
$saType="<storage account type>", specify one: Standard_LRS, Standard_GRS, Standard_RAGRS, or Premium_LRS
```

```
New-AzureRmStorageAccount -Name $saName -ResourceGroupName $rgName -Type $saType -Location $locName
```

For example:

```
1 $saName="vpxstorage"
2
3 $saType="Standard_LRS"
4
5 New-AzureRmStorageAccount -Name $saName -ResourceGroupName $rgName -Type $saType -Location $locName
```

3. Create an availability set

A load balancer configured with an availability set ensures that your application is always available.

```
$avName="<availability set name>"
```

```
New-AzureRmAvailabilitySet -Name $avName -ResourceGroupName $rgName -Location $locName
```

4. Create a virtual network

Add a new virtual network with at least one subnet, if the subnet was not created previously.

```
1 $vnetName = "LBVnet"
2
3 $FrontendAddressPrefix="10.0.1.0/24"
4
5 $BackendAddressPrefix="10.0.2.0/24"
6
7 $vnetAddressPrefix="10.0.0.0/16"
```

```

8
9 $frontendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
    frontendSubnet -AddressPrefix $FrontendAddressPrefix
10
11 $backendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
    backendSubnet -AddressPrefix $BackendAddressPrefix
12
13 $vnet=New-AzureRmVirtualNetwork -Name $vnetName -ResourceGroupName
    $rgName -Location $locName -AddressPrefix $vnetAddressPrefix -
    Subnet $frontendSubnet,$backendSubnet

```

Note: Choose the AddressPrefix parameter value as per your requirement.

Assign front end and back end subnet to the virtual network that you created earlier in this step.

If the front end subnet is the first element of array VNet, subnetId must be \$vnet.Subnets[0].Id.

If the front end subnet is the second element in the array, the subnetId must be \$vnet.Subnets[1].Id, and so on.

5. Configure front end IP address and create back end address pool

Configure a front end IP address for the incoming load balancer network traffic and create a back end address pool to receive the load balanced traffic.

```

1 $pubName="PublicIp1"
2
3 $publicIP1 = New-AzureRmPublicIpAddress -Name $pubName -
    ResourceGroupName $rgName -Location $locName -AllocationMethod
    Static -DomainNameLabel nsvpx

```

Note: Check for the availability of the value for DomainNameLabel.

```

1 $FIPName = "ELBFIP"
2
3 $frontendIP1 = New-AzureRmLoadBalancerFrontendIpConfig -Name
    $FIPName -PublicIpAddress $publicIP1
4
5 $BEPool = "LB-backend-Pool"
6
7 $beaddresspool1= New-AzureRmLoadBalancerBackendAddressPoolConfig -
    Name $BEPool

```

6. Create a health probe

Create a TCP health probe with port 9000 and interval 5 seconds.

```

1 $healthProbe = New-AzureRmLoadBalancerProbeConfig -Name
    HealthProbe -Protocol Tcp -Port 9000 -IntervalInSeconds 5 -
    ProbeCount 2

```

7. Create a load balancing rule

Create an LB rule for each service that you are load balancing.

For example:

You can use the following example to load balance HTTP service.

```
1 $lbrule1 = New-AzureRmLoadBalancerRuleConfig -Name "HTTP-LB" -
  FrontendIpConfiguration $frontendIP1 -BackendAddressPool
  $beAddressPool1 -Probe $healthProbe -Protocol Tcp -FrontendPort
  80 -BackendPort 80
```

8. Create inbound NAT rules

Create NAT rules for services that you are not load balancing.

For example, when creating an SSH access to a NetScaler VPX instance.

Note: Protocol-FrontEndPort-BackendPort triplet must not be the same for two NAT rules.

```
1 $inboundNATRule1= New-AzureRmLoadBalancerInboundNatRuleConfig -
  Name SSH1 -FrontendIpConfiguration $frontendIP1 -Protocol
  TCP -FrontendPort 22 -BackendPort 22
2
3 $inboundNATRule2= New-AzureRmLoadBalancerInboundNatRuleConfig -
  Name SSH2 -FrontendIpConfiguration $frontendIP1 -Protocol TCP -
  FrontendPort 10022 -BackendPort 22
```

9. Create a load balancer entity

Create the load balancer adding all objects (NAT rules, load balancer rules, probe configurations) together.

```
1 $lbName="ELB"
2
3 $NRPLB = New-AzureRmLoadBalancer -ResourceGroupName $rgName -Name
  $lbName -Location $locName -InboundNatRule $inboundNATRule1,
  $inboundNATRule2 -FrontendIpConfiguration $frontendIP1 -
  LoadBalancingRule $lbrule1 -BackendAddressPool $beAddressPool1
  -Probe $healthProbe
```

10. Create a NIC

Create two NICs and associate each NIC with each VPX instance

a) NIC1 with VPX1

For example:

```
1 $nicName="NIC1"
2
3 $lbName="ELB"
4
5 $bePoolIndex=0
6
7 \* Rule indexes starts from 0.
8
```

```

 9 $natRuleIndex=0
10
11 $subnetIndex=0
12
13 \* Frontend subnet index
14
15 $lb=Get-AzureRmLoadBalancer -Name $lbName -ResourceGroupName
    $rgName
16
17 $nic1=New-AzureRmNetworkInterface -Name $nicName -
    ResourceGroupName $rgName -Location $locName -Subnet $vnet.
    Subnets\[ $subnetIndex\] -LoadBalancerBackendAddressPool $lb.
    BackendAddressPools\[ $bePoolIndex\] -LoadBalancerInboundNatRule
    $lb.InboundNatRules\[ $natRuleIndex\]

```

b) NIC2 with VPX2

For example:

```

 1 $nicName="NIC2"
 2
 3 $lbName="ELB"
 4
 5 $bePoolIndex=0
 6
 7 $natRuleIndex=1
 8
 9 \* Second Inbound NAT (SSH) rule we need to use
10
11 ` $subnetIndex=0
12
13 \* Frontend subnet index
14
15 $lb=Get-AzureRmLoadBalancer -Name $lbName -ResourceGroupName
    $rgName
16
17 $nic2=New-AzureRmNetworkInterface -Name $nicName -
    ResourceGroupName $rgName -Location $locName -Subnet $vnet.
    Subnets\[ $subnetIndex\] -LoadBalancerBackendAddressPool $lb.
    BackendAddressPools\[ $bePoolIndex\] -LoadBalancerInboundNatRule
    $lb.InboundNatRules\[ $natRuleIndex\]

```

11. Create NetScaler VPX instances

Create two NetScaler VPX instances as part of the same resource group and availability set, and attach it to the external load balancer.

a) NetScaler VPX instance 1

For example:

```

 1 $vmName="VPX1"
 2
 3 $vmSize="Standard\_A3"

```

```
4
5 $pubName="citrix"
6
7 $offerName="netscalervpx110-6531"
8
9 $skuName="netscalerbyol"
10
11 $avSet=Get-AzureRmAvailabilitySet -Name $avName -ResourceGroupName
    $rgName
12
13 $vm1=New-AzureRmVMConfig -VMName $vmName -VMSize $vmSize -
    AvailabilitySetId $avset.Id
14
15 $cred=Get-Credential -Message "Type Credentials which will be used
    to login to VPX instance"
16
17 $vm1=Set-AzureRmVMOperatingSystem -VM $vm1 -Linux -ComputerName
    $vmName -Credential $cred -Verbose
18
19 $vm1=Set-AzureRmVMSourceImage -VM $vm1 -PublisherName $pubName -
    Offer $offerName -Skus $skuName -Version "latest"
20
21 $vm1=Add-AzureRmVMNetworkInterface -VM $vm1 -Id $nic1.Id
22
23 $diskName="dynamic"
24
25 $storageAcc=Get-AzureRmStorageAccount -ResourceGroupName $rgName -
    Name $saName
26
27 $osDiskUri=$storageAcc.PrimaryEndpoints.Blob.ToString() + "vhds1/
    " + $diskName + ".vhd"
28
29 $vm1=Set-AzureRmVMOSDisk -VM $vm1 -Name $diskName -VhdUri
    $osDiskUri -CreateOption fromImage
30
31 Set-AzureRmVMPlan -VM $vm1 -Publisher $pubName -Product $offerName
    -Name $skuName
32
33 New-AzureRmVM -ResourceGroupName $rgName -Location $locName -VM
    $vm1
```

b) NetScaler VPX instance 2

For example:

```
1 $vmName="VPX2"
2
3 $vmSize="Standard\_A3"
4
5 $avSet=Get-AzureRmAvailabilitySet -Name $avName -ResourceGroupName
    $rgName
6
7 $vm2=New-AzureRmVMConfig -VMName $vmName -VMSize $vmSize -
    AvailabilitySetId $avset.Id
```

```

8
9 $cred=Get-Credential -Message " Type Credentials which will be
    used to login to VPX instance "
10
11 $vm2=Set-AzureRmVMOperatingSystem -VM $vm2 -Linux -ComputerName
    $vmName -Credential $cred -Verbose
12
13 $vm2=Set-AzureRmVMSourceImage -VM $vm2 -PublisherName $pubName -
    Offer $offerName -Skus $skuName -Version "latest"
14
15 $vm2=Add-AzureRmVMNetworkInterface -VM $vm2 -Id $nic2.Id
16
17 $diskName="dynamic"
18
19 $storageAcc=Get-AzureRmStorageAccount -ResourceGroupName $rgName -
    Name $saName
20
21 $osDiskUri1=$storageAcc.PrimaryEndpoints.Blob.ToString() + "vhds2/
    " + $diskName + ".vhd"
22
23 $vm2=Set-AzureRmVMOSDisk -VM $vm2 -Name $diskName -VhdUri
    $osDiskUri1 -CreateOption fromImage
24
25 Set-AzureRmVMPlan -VM $vm2 -Publisher $pubName -Product $offerName
    -Name $skuName
26
27 New-AzureRmVM -ResourceGroupName $rgName -Location $locName -VM
    $vm2

```

12. Configure the virtual machines

When both the NetScaler VPX instances start, then connect to both NetScaler VPX instances using the SSH protocol to configure the virtual machines.

- a) Active-Active: Run the same set of configuration commands on the command line of both the NetScaler VPX instances.
- b) Active-Passive: Run this command on the command line of both the NetScaler VPX instances.

```
add ha node #nodeID <nsip of other NetScaler VPX>
```

In Active-Passive mode, run configuration commands on the primary node only.

Provision a NetScaler VPX pair in a high availability setup with Azure internal load balancer

Log on to AzureRmAccount using your Azure user credentials.

1. Create a resource group

The location specified here is the default location for resources in that resource group. Make sure all commands to create a load balancer use the same resource group.

```
$rgName="\<resource group name\>"
```

```
$locName="\<location name, such as West US\>"
```

```
New-AzureRmResourceGroup -Name $rgName -Location $locName
```

For example:

```
1 $rgName = "ARM-LB-NS"
2
3 $locName = "West US"
4
5 New-AzureRmResourceGroup -Name $rgName -Location $locName
```

2. Create a storage account

Choose a unique name for your storage account that contains only lowercase letters and numbers.

```
$saName="\<storage account name\>"
```

```
$saType="\<storage account type\>", specify one: Standard_LRS, Standard_GRS, Standard_RAGRS, or Premium_LRS
```

```
New-AzureRmStorageAccount -Name $saName -ResourceGroupName $rgName -Type $saType -Location $locName
```

For example:

```
1 $saName="vpxstorage"
2
3 $saType="Standard_LRS"
4
5 New-AzureRmStorageAccount -Name $saName -ResourceGroupName $rgName -Type $saType -Location $locName
```

3. Create an availability set

A load balancer configured with an availability set ensures that your application is always available.

```
$avName="\<availability set name\>"
```

```
New-AzureRmAvailabilitySet -Name $avName -ResourceGroupName $rgName -Location $locName
```

4. Create a virtual network

Add a new virtual network with at least one subnet, if the subnet was not created previously.

```
1 $vnetName = "LBVnet"
2
3 $vnetAddressPrefix="10.0.0.0/16"
4
```

```

5 $FrontendAddressPrefix="10.0.1.0/24"
6
7 $BackendAddressPrefix="10.0.2.0/24"
8
9 $vnet=New-AzureRmVirtualNetwork -Name $vnetName -ResourceGroupName
    $rgName -Location $locName -AddressPrefix $vnetAddressPrefix -
    Subnet $frontendSubnet,$backendSubnet`
10
11 $frontendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
    frontendSubnet -AddressPrefix $FrontendAddressPrefix
12
13 $backendSubnet=New-AzureRmVirtualNetworkSubnetConfig -Name
    backendSubnet -AddressPrefix $BackendAddressPrefix

```

Note: Choose the AddressPrefix parameter value as per your requirement.

Assign front end and back end subnet to the virtual network that you created earlier in this step.

If the front end subnet is the first element of array VNet, subnetId must be \$vnet.Subnets[0].Id.

If the front end subnet is the second element in the array, the subnetId must be \$vnet.Subnets[1].Id, and so on.

5. Create a backend address pool

```
$beaddresspool= New-AzureRmLoadBalancerBackendAddressPoolConfig -
Name "LB-backend"
```

6. Create NAT rules

Create NAT rules for services that you are not load balancing.

```

1 $inboundNATRule1= New-AzureRmLoadBalancerInboundNatRuleConfig -
    Name "Inboundnatrule1" -FrontendIpConfiguration $frontendIP -
    Protocol TCP -FrontendPort 3441 -BackendPort 3389
2
3 $inboundNATRule2= New-AzureRmLoadBalancerInboundNatRuleConfig -
    Name "RDP2" -FrontendIpConfiguration $frontendIP -Protocol TCP
    -FrontendPort 3442 -BackendPort 3389

```

Use front end and back end ports as per your requirement.

7. Create a health probe

Create a TCP health probe with port 9000 and interval 5 seconds.

```

1 $healthProbe = New-AzureRmLoadBalancerProbeConfig -Name "
    HealthProbe" " -Protocol tcp -Port 9000 -IntervalInSeconds 5 -
    ProbeCount 2

```

8. Create a load balancing rule

Create an LB rule for each service that you are load balancing.

For example:

You can use the following example to load balance HTTP service.

```
1 $lbrule = New-AzureRmLoadBalancerRuleConfig -Name "lbrule1" -
  FrontendIpConfiguration $frontendIP -BackendAddressPool
  $beAddressPool -Probe $healthProbe -Protocol Tcp -FrontendPort
  80 -BackendPort 80
```

Use front end and back end ports as per your requirement.

9. Create a load balancer entity

Create the load balancer adding all objects (NAT rules, load balancer rules, probe configurations) together.

```
1 $NRPLB = New-AzureRmLoadBalancer -ResourceGroupName $rgname -Name
  "InternalLB" -Location $locName -FrontendIpConfiguration
  $frontendIP -InboundNatRule $inboundNATRule1,$inboundNatRule2 -
  LoadBalancingRule $lbrule -BackendAddressPool $beAddressPool -
  Probe $healthProbe
```

10. Create a NIC

Create two NICs and associate each NIC with each NetScaler VPX instance

```
1 $backendnic1= New-AzureRmNetworkInterface -ResourceGroupName
  $rgName -Name lb-nic1-be -Location $locName -PrivateIpAddress
  10.0.2.6 -Subnet $backendSubnet -LoadBalancerBackendAddressPool
  $nrplb.BackendAddressPools\[0\] -LoadBalancerInboundNatRule
  $nrplb.InboundNatRules\[0\]
```

This NIC is for NetScaler VPX 1. The Private IP must be in same subnet as that of subnet added.

```
1 $backendnic2= New-AzureRmNetworkInterface -ResourceGroupName
  $rgName -Name lb-nic2-be -Location $locName -PrivateIpAddress
  10.0.2.7 -Subnet $backendSubnet -LoadBalancerBackendAddressPool
  $nrplb.BackendAddressPools\[0\] -LoadBalancerInboundNatRule
  $nrplb.InboundNatRules\[1\].
```

This NIC is for NetScaler VPX 2. The parameter `Private IP Address` can have any private IP as per your requirement.

11. Create NetScaler VPX instances

Create two VPX instances part of the same resource group and availability set, and attach it to the internal load balancer.

a) NetScaler VPX instance 1

For example:

```
1 $vmName="VPX1"
```

```
2
3 $vmSize="Standard\_A3"
4
5 $avSet=Get-AzureRmAvailabilitySet -Name $avName -ResourceGroupName
  $rgName
6
7 $vm1=New-AzureRmVMConfig -VMName $vmName -VMSize $vmSize -
  AvailabilitySetId $avset.Id
8
9 $cred=Get-Credential -Message "Type Credentials which will be used
  to login to VPX instance"
10
11 $vm1=Set-AzureRmVMOperatingSystem -VM $vm1 -Linux -ComputerName
  $vmName -Credential $cred -Verbose
12
13 $vm1=Set-AzureRmVMSourceImage -VM $vm1 -PublisherName $pubName -
  Offer $offerName -Skus $skuName -Version "latest"
14
15 $vm1=Add-AzureRmVMNetworkInterface -VM $vm1 -Id $backendnic1.Id
16
17 $diskName="dynamic"
18
19 $storageAcc=Get-AzureRmStorageAccount -ResourceGroupName $rgName -
  Name $saName
20
21 $osDiskUri=$storageAcc.PrimaryEndpoints.Blob.ToString() + "vhds1/
  " + $diskName + ".vhd"
22
23 $vm1=Set-AzureRmVMOSDisk -VM $vm1 -Name $diskName -VhdUri
  $osDiskUri -CreateOption fromImage
24
25 Set-AzureRmVMPlan -VM $vm1 -Publisher $pubName -Product $offerName
  -Name $skuName
26
27 New-AzureRmVM -ResourceGroupName $rgName -Location $locName -VM
  $vm1
```

b) NetScaler VPX instance 2

For example:

```
1 $vmName="VPX2"
2
3 $vmSize="Standard\_A3"
4
5 $avSet=Get-AzureRmAvailabilitySet -Name $avName -ResourceGroupName
  $rgName
6
7 $vm2=New-AzureRmVMConfig -VMName $vmName -VMSize $vmSize -
  AvailabilitySetId $avset.Id
8
9 $cred=Get-Credential -Message " Type Credentials which will be
  used to login to VPX instance "
```

```

11 $vm2=Set-AzureRmVMOperatingSystem -VM $vm2 -Linux -ComputerName
    $vmName -Credential $cred -Verbose
12
13 $vm2=Set-AzureRmVMSourceImage -VM $vm2 -PublisherName $pubName -
    Offer $offerName -Skus $skuName -Version "latest"
14
15 $vm2=Add-AzureRmVMNetworkInterface -VM $vm2 -Id $backendnic2.Id
16
17 $diskName="dynamic"
18
19 $storageAcc=Get-AzureRmStorageAccount -ResourceGroupName $rgName -
    Name $saName
20
21 $osDiskUri1=$storageAcc.PrimaryEndpoints.Blob.ToString() + "vhds2/"
    " + $diskName + ".vhd"
22
23 $vm2=Set-AzureRmVMOSDisk -VM $vm2 -Name $diskName -VhdUri
    $osDiskUri1 -CreateOption fromImage
24
25 Set-AzureRmVMPlan -VM $vm2 -Publisher $pubName -Product $offerName
    -Name $skuName
26
27 New-AzureRmVM -ResourceGroupName $rgName -Location $locName -VM
    $vm2

```

12. Configure the virtual machines

When both the NetScaler VPX instances start, then connect to both NetScaler VPX instances using the SSH protocol to configure the virtual machines.

a) Active-Active: Run the same set of configuration commands on the command line of both the NetScaler VPX instances.

b) Active-Passive: Run this command on the command line of both the NetScaler VPX instances.

```
add ha node #nodeID <nsip of other NetScaler VPX>
```

In Active-Passive mode, run configuration commands on the primary node only.

Create a support ticket for the VPX instance on Azure

December 6, 2023

If you're experiencing issues with your NetScaler VPX instance on Azure, for troubleshooting, you can create a support ticket in the [NetScaler support portal](#).

To file a support ticket, make sure the following:

- Your network is connected.

Note:

NetScaler supports subscription-based offerings on Azure (subscription license with hourly price).

Once you have all the information ready, call NetScaler support. You're asked to provide your name and email address.

Azure FAQs

May 2, 2023

- **Is the upgrade procedure of NetScaler VPX instance installed from Azure Marketplace different from the on-premises upgrade procedure?**

No. You can upgrade your NetScaler VPX instance in the Microsoft Azure cloud to NetScaler VPX release 11.1 or later, using standard NetScaler VPX upgrade procedures. You can upgrade either using GUI or CLI procedures. For any new installations, use the NetScaler VPX image for Microsoft Azure cloud.

To download the NetScaler VPX upgrade builds, go to **NetScaler downloads** > [NetScaler Firmware](#).

- **How to correct MAC moves and interface mutes observed on NetScaler VPX instances hosted on Azure?**

In Azure Multi-NIC environment, by default, all data interfaces might show MAC moves and interface mutes. To avoid MAC moves and interface mutes on Azure environments, Citrix recommends you to create a VLAN per data interface (without tag) of the NetScaler VPX instance and bind the primary IP of the NIC in Azure.

For more information, see [CTX224626](#) article.

Deploy a NetScaler VPX instance on the Google Cloud Platform

August 21, 2024

You can deploy a NetScaler VPX instance on the Google Cloud Platform (GCP). A VPX instance in GCP enables you to take advantage of GCP cloud computing capabilities and use Citrix load balancing and traffic management features for your business needs. You can deploy VPX instances in GCP as stand-alone instances. Both single NIC and multi NIC configurations are supported.

Supported features

All Premium, Advanced, and Standard features are supported on the GCP based on the license/version type used.

Limitation

- IPv6 isn't supported.

Hardware requirements

VPX instance in GCP must have minimum of 2 vCPUs and 4 GB RAM.


Points to note

Consider the following GCP-specific points before you begin your deployment.

- After creating the instance, you can't add or remove any network interfaces.
- For a multi-NIC deployment, create separate VPC networks for each NIC. One NIC can be associated with only one network.
- For a single-NIC instance, the GCP console creates a network by default.
- Minimum 4 vCPUs are required for an instance with more than two network interfaces.
- If IP forwarding is required, you must enable IP forwarding while creating the instance and configuring the NIC.

Scenario: Deploy a multi-NIC, multi-IP standalone VPX instance

This scenario illustrates how to deploy a NetScaler VPX standalone instance in GCP. In this scenario, you create a standalone VPX instance with many NICs. The instance communicates with back-end servers (the server farm).

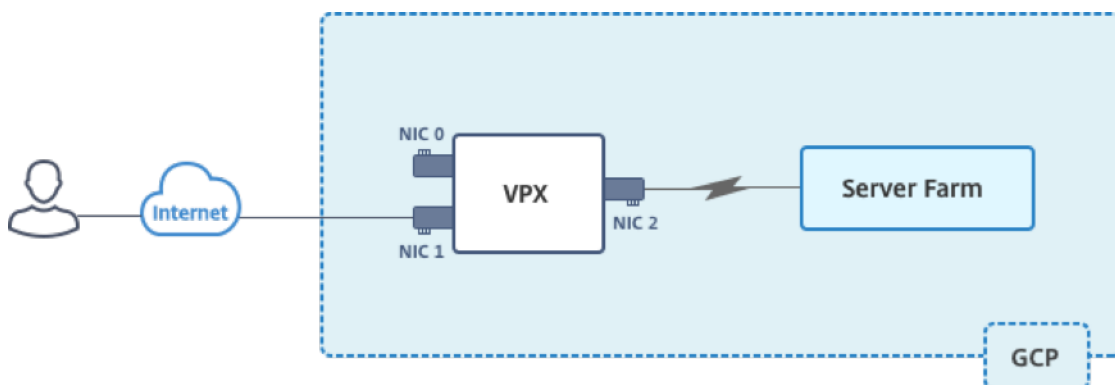

Create three NICs to serve the following purposes.

NIC	Purpose	Associated with VPC network
NIC 0	Serves management traffic (NetScaler IP)	Management network
NIC 1	Serves client-side traffic (VIP)	Client network
NIC 2	Communicates with back-end servers (SNIP)	Back-end server network

Set up the required communication routes between the following:

- VPX instance and the back-end servers.
- VPX instance and the external hosts on the public internet.

Summary of deployment steps

1. Create three VPC networks for three different NICs.
2. Create firewall rules for ports 22, 80, and 443.
3. Create an instance with three NICs.

Select the NetScaler VPX instance from GCP marketplace.

Note:

Create an instance in the same region where you've created the VPC networks.

Step 1. Create VPC networks.

Create three VPC networks that is associated with management NIC, client NIC, and server NIC. To create a VPC network, log on to **Google console > Networking > VPC network > Create VPC Network**. Complete the required fields, as shown in the screen capture, and click **Create**.

netscaler-vpx-platform-eng

← Create a VPC network

Name ?
vpxmgmt

Description (Optional)
management vpc

Subnets

Subnets let you create your own private cloud topology within Google Cloud. Click Automatic to create a subnet in each region, or click Custom to manually define the subnets. [Learn more](#)

Subnet creation mode
 Custom Automatic

New subnet

Name ?
vpxmgmtsubnet

[Add a description](#)

Region ?
asia-east1

IP address range ?
192.168.30.0/24

[Create secondary IP range](#)

Private Google access ?
 On
 Off

Flow logs
 On
 Off

Dynamic routing mode ?
 Regional
Cloud Routers will learn routes only in the region in which they were created

Global
Global routing lets you dynamically learn routes to and from all regions with a single VPN or interconnect and Cloud Router

Similarly, create VPC networks for client and server-side NICs.

Note:

All three VPC networks must be in the same region, which is asia-east1 in this scenario.

Step 2. Create firewall rules for ports 22, 80, and 443.

Create rules for SSH (port 22), HTTP (port 80), and HTTPS (port 443) for each VPC networks. For more information about firewall rules, see [Firewall Rules Overview](#).

netscaler-vpx-platform-eng

←

Create a firewall rule

Firewall rules control incoming or outgoing traffic to an instance. By default, incoming traffic from outside your network is blocked. [Learn more](#)

Name ?

Description (Optional)

Logs
Turning on firewall logs can generate a large number of logs which can increase costs in Stackdriver. [Learn more](#)

On
 Off

Network ?

Priority ?
Priority can be 0 - 65535 [Check priority of other firewall rules](#)

Direction of traffic ?

Ingress
 Egress

Action on match ?

Allow
 Deny

Targets ?

Source filter ?

Source IP ranges ?

Second source filter ?

Protocols and ports ?

Allow all
 Specified protocols and ports


tcp :
 udp :
 Other protocols

[↕ Disable rule](#)


Create
Cancel

Step 3. Create the VPX instance.

1. Log on to the GCP console.
2. Navigate to the [GCP Marketplace](#).
3. Select a subscription based on your requirements.

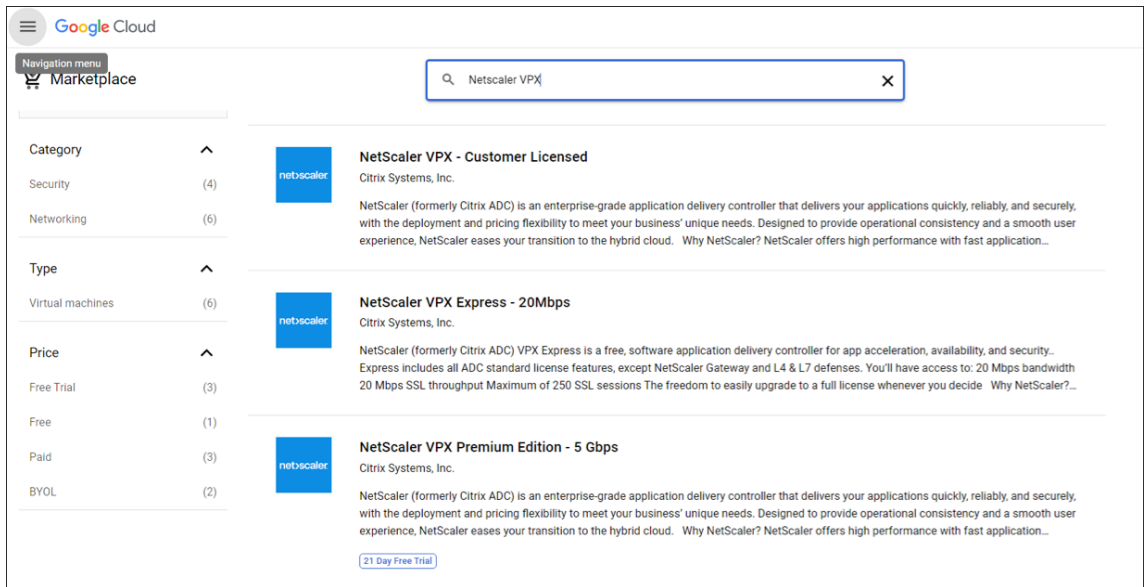

4. Click **Launch** on the selected subscription.

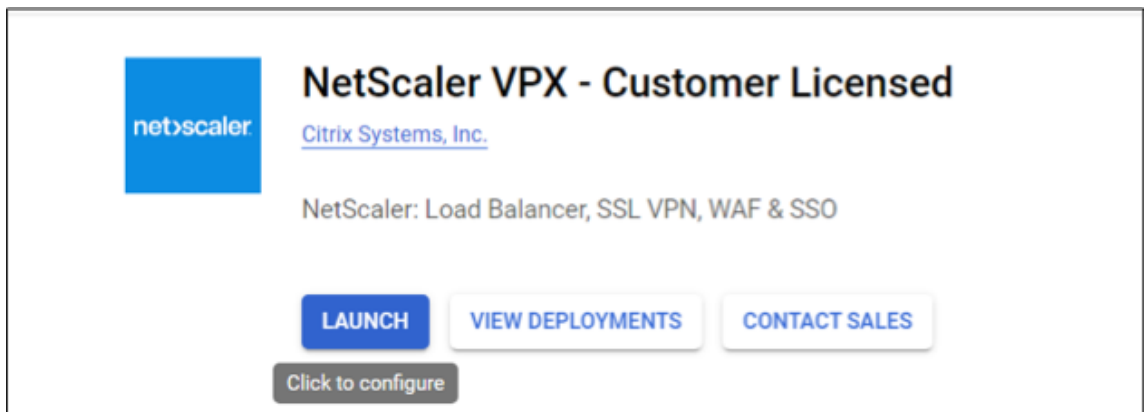

5. Complete the deployment form and click **Deploy**.


Note: Use the VPC Networks created in **Step 1**.

6. The deployed instance appears under **Compute Engine > VM instances**.

Use the GCP SSH or the serial console to configure and manage the VPX instance.

Scenario: Deploy a single-NIC, standalone VPX instance

This scenario illustrates how to deploy a NetScaler VPX standalone instance with a single NIC in GCP. The alias IP addresses are used to achieve this deployment.

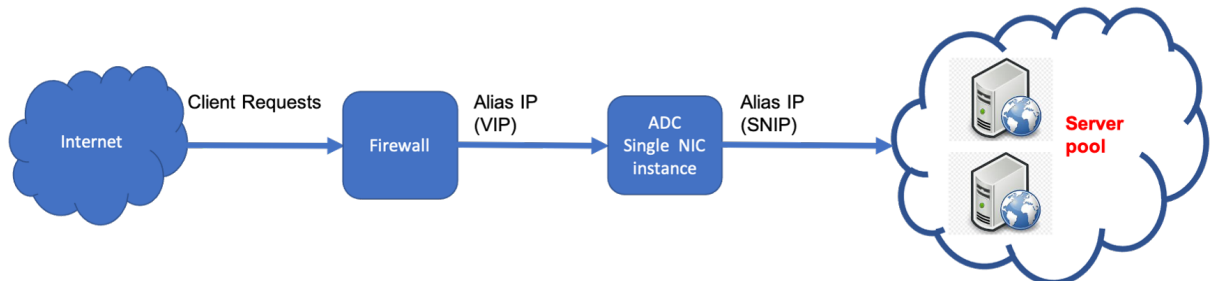

Create a single NIC (NIC0) to serve the following purposes:

- Handle management traffic (NetScaler IP) in the management network.
- Handle client-side traffic (VIP) in the client network.
- Communicate with back-end servers (SNIP) in the back-end server network.

Set up the required communication routes between the following:

- Instance and the back-end servers.
- Instance and the external hosts on the public internet.

Summary of deployment steps

1. Create a VPC network for NIC0.
2. Create firewall rules for ports 22, 80, and 443.
3. Create an instance with a single NIC.
4. Add Alias IP addresses to VPX.
5. Add VIP and SNIP on VPX.
6. Add a load balancing virtual server.
7. Add a service or service group on the instance.
8. Bind the service or service group to the load balancing virtual server on the instance.

Note:

Create an instance in the same region where you've created the VPC networks.

Step 1. Create one VPC network.

Create one VPC network to associate with NIC0.

To create a VPC network, do these steps:

1. Log on to **GCP console > Networking > VPC network > Create VPC Network**
2. Complete the required fields, and click **Create**.

The image shows two screenshots from the Google Cloud Platform console. The top screenshot is titled 'Create a VPC network' and shows the following configuration: Name: vpxmgmt; Description (Optional): management vpc; Subnets: Subnet creation mode is set to 'Custom'. The bottom screenshot is titled 'New subnet' and shows the following configuration: Name: vpxmgmtsubnet; Region: asia-east1; IP address range: 192.168.30.0/24; Private Google access: On; Flow logs: Off. At the bottom of the 'New subnet' form, there is a '+ Add subnet' button and a 'Dynamic routing mode' section with 'Regional' selected.

Step 2. Create firewall rules for ports 22, 80, and 443.

Create rules for SSH (port 22), HTTP (port 80), and HTTPS (port 443) for the VPC network. For more information about firewall rules, see [Firewall Rules Overview](#).

netscaler-vpx-platform-eng

← Create a firewall rule

Firewall rules control incoming or outgoing traffic to an instance. By default, incoming traffic from outside your network is blocked. [Learn more](#)

Name

Description (Optional)

Logs
Turning on Firewall logs can generate a large number of logs which can increase costs in Stackdriver. [Learn more](#)
 On
 Off

Network

Priority
Priority can be 0 - 65535 Check priority of other firewall rules

Direction of traffic
 Ingress
 Egress

Action on match
 Allow
 Deny

Targets

Source filter

Source IP ranges

Second source filter


Protocols and ports
 Allow all
 Specified protocols and ports
 tcp:
 udp:
 Other protocols

Disable rule


Step 3. Create an instance with single NIC.

To create an instance with single NIC, do these steps:

1. Log on to the **GCP console**.
2. Under **Compute**, hover over **Compute Engine**, and select **Images**.
3. Select the image, and click **Create Instance**.

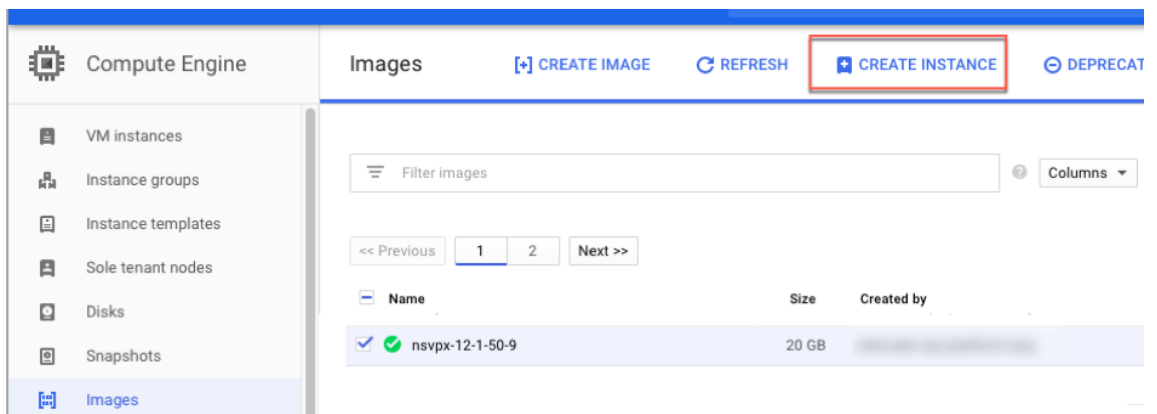

4. Select an instance type with two vCPUs (minimum requirement for ADC).

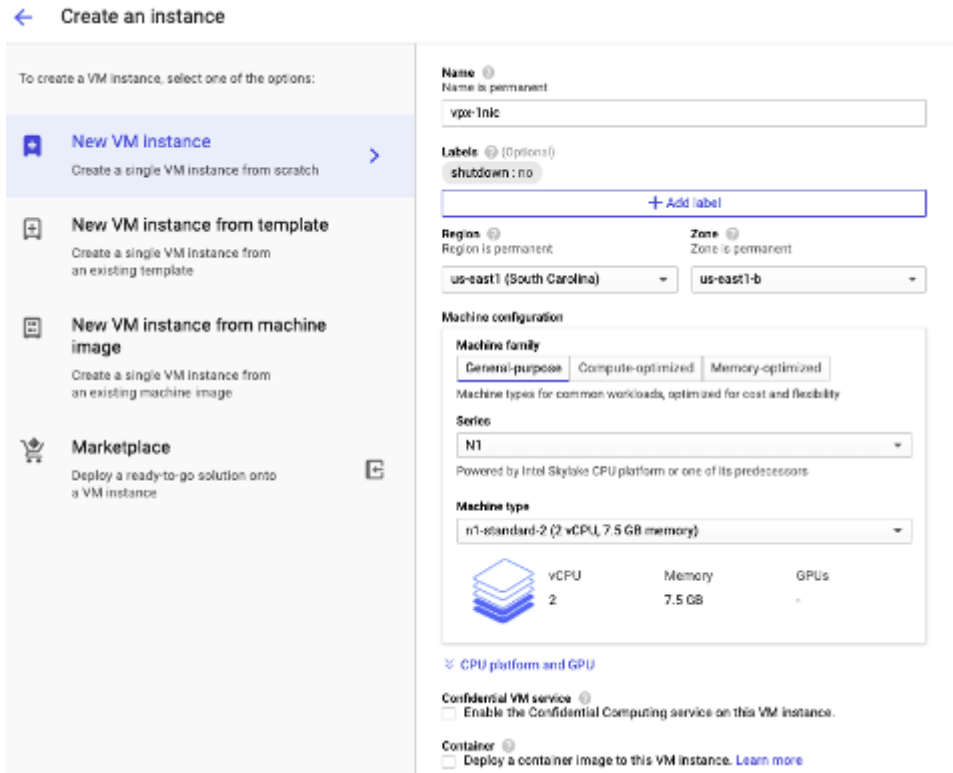

5. Click the **Networking** tab from the **Management, security, disks, networking** window.
6. Under **Network interfaces**, click the **Edit** icon to edit the default NIC.
7. In the **Network interfaces** window, under **Network**, select the VPC network that you created.
8. You can create a static external IP address. Under the **External IP addresses**, click **Create IP address**.
9. In the **Reserve a static address** window, add a name and description and click **Reserve**.
10. Click **Create** to create the VPX instance.
The new instance appears under VM instances.

Step 4. Add alias IP addresses to the VPX instance.


Assign two alias IP addresses to the VPX instance to use as VIP and SNIP addresses.

Note:
Do not use the primary internal IP address of the VPX instance to configure the VIP or SNIP.

To create an alias IP address, perform these steps:

1. Navigate to the VM instance and click **Edit**.
2. In the **Network interface** window, edit the NIC0 interface.

3. In the **Alias IP range** field, enter the alias IP addresses.

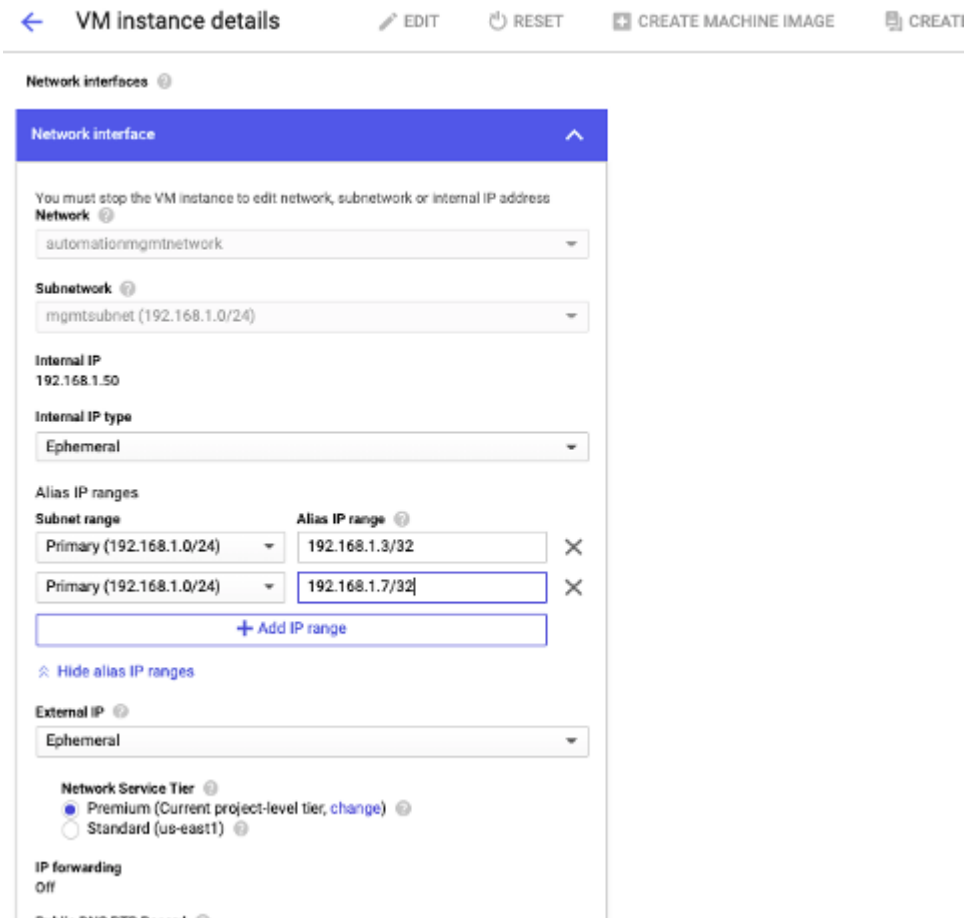

4. Click **Done**, and then **Save**.


5. Verify the alias IP addresses in the **VM instance details** page.



Step 5. Add VIP and SNIP on the VPX instance.

On the VPX instance, add client alias IP address and server alias IP address.

1. On the NetScaler GUI, navigate to **System > Network > IPs > IPv4s**, and click **Add**.

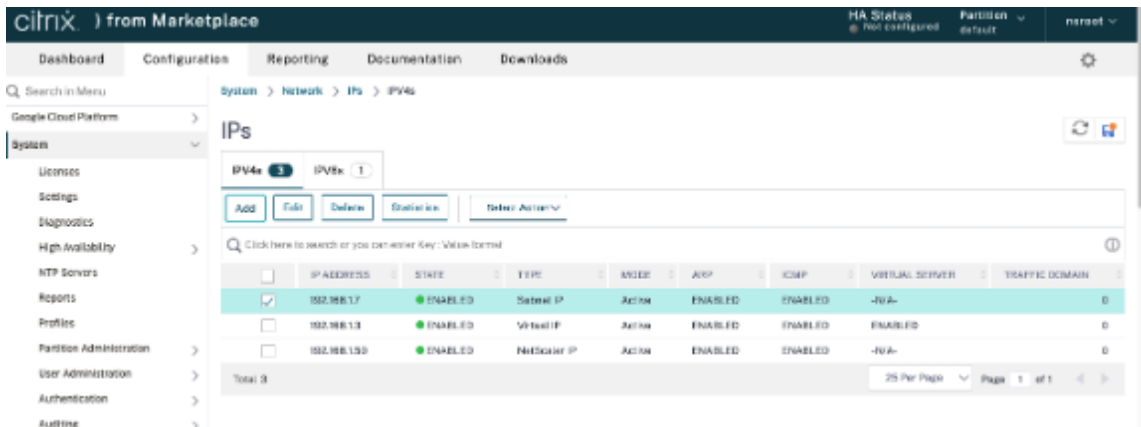

2. To create a client alias IP (VIP) address:

- Enter the client-alias IP address and netmask configured for the VPC subnet in the VM instance.
- In the **IP Type** field, select **Virtual IP** from the drop-down menu.
- Click **Create**.

3. To create a server alias IP (SNIP) address:

- Enter the server-alias IP address and netmask configured for the VPC subnet in the VM instance.
- In the **IP Type** field, select **Subnet IP** from the drop-down menu.
- Click **Create**.

Step 6. Add load balancing virtual server.

1. On the NetScaler GUI, navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers**, and click **Add**.
2. Add the required values for Name, Protocol, IP Address Type (IP Address), IP Address (client alias IP), and Port.
3. Click **OK** to create the load balancing virtual server.

Dashboard Configuration Reporting Documentation Downloads

← Load Balancing Virtual Server

Basic Settings

Create a virtual server by specifying a name, an IP address, a port, and a protocol type. If an application is accessible from the Internet, the virtual server IP (VIP) address is a public IP address. If the application is accessible only from the local area network (LAN) or wide area network (WAN), the VIP is usually a private (RFC1918) IP address. You can configure multiple virtual servers to receive client requests, thereby increasing the availability of resources to process client requests.

Name*
vsor1 ⓘ

Protocol*
HTTP

IP Address Type*
IP Address

IP Address*
192.168.1.3 ⓘ

Port*
80 ⓘ

More

OK Cancel

Step 7. Add a service or service group on the VPX instance.

1. From the NetScaler GUI, navigate to **Configuration > Traffic Management > Load Balancing > Services**, and click **Add**.
2. Add the required values for Service Name, IP Address, Protocol, and Port, and click **OK**.

Step 8. Bind the service/service group to the Load Balancing Virtual Server on the instance.

1. From the GUI, navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers**.
2. Select the load balancing virtual server configured in **Step 6**, and click **Edit**.
3. In the **Service and Service Groups** window, click **No Load Balancing Virtual Server Service Binding**.
4. Select the service configured in **Step 7**, and click **Bind**.

Points to note after you've deployed the VPX instance on GCP

- Log on to the VPX with user name `nsroot` and instance ID as password. At the prompt, change the password and save the configuration.
- For collecting a technical support bundle, run the command `shell /netscaler/showtech_cloud.pl` instead of the customary `show techsupport`.
- After deleting a NetScaler VM from GCP console, delete the associated NetScaler internal target instance also. To do so, go to gcloud CLI and type the following command:

```
1 gcloud compute -q target-instances delete <instance-name>-
  adcinternal --zone <zone>
```

Note:

`<instance-name>-adcinternal` is the name of the target instance that must be deleted.

NetScaler VPX licensing

A NetScaler VPX instance on GCP requires a license. The following licensing options are available for NetScaler VPX instances running on GCP.

- **Subscription-based licensing:** NetScaler VPX appliances are available as paid instances on the GCP marketplace. Subscription-based licensing is a pay-as-you-go option. Users are charged hourly. The following VPX models and license editions are available on the GCP marketplace.

Supported VPX Performance

NetScaler VPX Advanced - 200 Mbps

NetScaler VPX Premium - 1 Gbps

NetScaler VPX Premium - 5 Gbps

NetScaler VPX Express - 20 Mbps

NetScaler VPX - Customer Licensed

NetScaler VPX FIPS - Customer Licensed

- **Bring your own license (BYOL):** If you bring your own license (BYOL), see the VPX Licensing Guide at <http://support.citrix.com/article/CTX122426>. You have to:
 - Use the licensing portal within the Citrix website to generate a valid license.
 - Upload the license to the instance.
- **NetScaler VPX Check-In/Check-Out licensing:** For more information, see [NetScaler VPX Check-In/Check-Out Licensing](#).

VPX Express for on-premises and cloud deployments does not require a license file. For more information on NetScaler VPX Express see the “NetScaler VPX Express license” section in [NetScaler licensing overview](#).

GDM templates to deploy a NetScaler VPX instance

You can use a NetScaler VPX Google Deployment Manager (GDM) template to deploy a VPX instance on GCP. For details, see [NetScaler GDM Templates](#).

NetScaler marketplace images

You can use the images in GDM templates to bring up the NetScaler appliance.

The following table lists the images that are available on GCP marketplace.

Release	Image name	Image location
14.1	citrix-adc-vpx-express-14-1-21-57	projects/citrix-master-project/global/images/citrix-adc-vpx-express-14-1-21-57
14.1	citrix-adc-vpx-200-enterprise-14-1-21-57	projects/citrix-master-project/global/images/citrix-adc-vpx-200-enterprise-14-1-21-57
14.1	citrix-adc-vpx-1000-platinum-14-1-21-57	projects/citrix-master-project/global/images/citrix-adc-vpx-1000-platinum-14-1-21-57
14.1	citrix-adc-vpx-5000-platinum-14-1-21-57	projects/citrix-master-project/global/images/citrix-adc-vpx-5000-platinum-14-1-21-57
14.1	citrix-adc-vpx-byol-14-1-21-57	projects/citrix-master-project/global/images/citrix-adc-vpx-byol-14-1-21-57

Resources

- [Creating Instances with Multiple Network Interfaces](#)
- [Creating and Starting a VM Instance](#)

Related information

- [Deploy a VPX high-availability pair on Google Cloud Platform](#)

Deploy a VPX high-availability pair on Google Cloud Platform

May 2, 2023

You can configure two NetScaler VPX instances on Google Cloud Platform (GCP) as a high availability (HA) active-passive pair. When you configure one instance as the primary node and the other as the secondary node, the primary node accepts connections and manages servers. The secondary node monitors the primary. If for any reason, if the primary node is unable to accept connections, the secondary node takes over.

For more information on HA, see [High Availability](#).

The nodes must be in the same region; however, they can be either in the same zone or different zones. For more information, see [Regions and Zones](#).

Each VPX instance requires at least three IP subnets (Google VPC networks):

- A management subnet
- A client-facing subnet (VIP)
- A back-end facing subnet (SNIP, MIP, and so on)

Citrix recommends three network interfaces for a standard VPX instance.

You can deploy a VPX high-availability pair in the following methods:

- [Using external static IP address](#)
- [Using private IP address](#)
- [Using single nic VMs with private IP address](#)

GDM templates to deploy a VPX high-availability pair on GCP

You can use a NetScaler Google Deployment Manager (GDM) template to deploy a VPX high-availability pair on GCP. For details, see [NetScaler GDM Templates](#).

Forwarding rules support for VPX high-availability pair on GCP

You can deploy a VPX high-availability pair on the GCP using forwarding rules.

For more information on forwarding rules, see [Forwarding rules overview](#).

Prerequisites

- Forwarding rules must be in the same region as the VPX instances.
- Target instances must be in the same zone as the VPX instance.
- Number of target instances for both primary and secondary nodes must match.

Example:

You have a high-availability pair in the `us-east1` region with primary VPX in `us-east1-b` zone and secondary VPX in `us-east1-c` zone. A forwarding rule is configured for the primary VPX with the target instance in `us-east1-b` zone. Configure a target instance for secondary VPX in `us-east1-c` zone to update the forwarding rule on failover.

Limitations

Only forwarding rules that are configured with target instances at the back end are supported in VPX high-availability deployment.

Deploy a VPX high-availability pair with external static IP address on the Google Cloud Platform

May 2, 2023

You can deploy a VPX high-availability pair on GCP using an external static IP address. The client IP address of the primary node must be bound to an external static IP address. Upon failover, the external static IP address is moved to the secondary node for traffic to resume.

A static external IP address is an external IP address that is reserved for your project until you decide to release it. If you use an IP address to access a service, you can reserve that IP address so that only your project can use it. For more information, see [Reserving a Static External IP Address](#).

For more information on HA, see [High Availability](#).

Before you start

- Read the Limitation, Hardware requirements, Points to note mentioned in [Deploy a NetScaler VPX instance on Google Cloud Platform](#). This information applies to HA deployments also.
- Enable **Cloud Resource Manager API** for your GCP project.

- Allow full access to all Cloud APIs while creating the instances.

The screenshot shows the 'Identity and API access' configuration panel. It includes a 'Service account' dropdown menu currently set to 'Compute Engine default service account'. Below this, under the 'Access scopes' section, three radio buttons are visible: 'Allow default access', 'Allow full access to all Cloud APIs' (which is selected), and 'Set access for each API'. A 'Firewall' section is partially visible at the bottom.

- Ensure that the IAM role associated with your GCP service account has the following IAM permissions:

```

1  REQUIRED_INSTANCE_IAM_PERMS = [
2
3  "compute.addresses.use",
4  "compute.forwardingRules.list",
5  "compute.forwardingRules.setTarget",
6  "compute.instances.setMetadata",
7  "compute.instances.addAccessConfig",
8  "compute.instances.deleteAccessConfig",
9  "compute.instances.get",
10 "Compute.instances.list",
11 "compute.networks.useExternalIp",
12 "compute.subnetworks.useExternalIp",
13 "compute.targetInstances.list",
14 "compute.targetInstances.use",
15 "compute.targetInstances.create",
16 "compute.zones.list",
17 "compute.zoneOperations.get",
18 ]

```

- If you have configured alias IP addresses on an interface other than the management interface, ensure that your GCP service account has the following additional IAM permissions:

```

1  "compute.instances.updateNetworkInterface"

```

- If you have configured GCP forwarding rules on the primary node, read the limitations and requirements mentioned in [Forwarding rules support for VPX high-availability pair on GCP](#) to update them to new primary on failover.

How to deploy a VPX HA pair on Google Cloud Platform

Here's a summary of the HA deployment steps:

1. Create VPC networks in the same region. For example, Asia-east.
2. Create two VPX instances (primary and secondary nodes) on the same region. They can be in the same zone or different zones. For example Asia east-1a and Asia east-1b.

3. Configure HA settings on both instances by using the NetScaler GUI or ADC CLI commands.

Step 1. Create VPC networks

Create VPC networks based on your requirements. Citrix recommends you to create three VPC networks for associating with management NIC, client NIC, and server NIC.

To create a VPC network, perform these steps:

1. Log on the **Google console > Networking > VPC network > Create VPC Network**.
2. Complete the required fields, and click **Create**.


For more information, see the **Create VPC Networks** section in [Deploy a NetScaler VPX instance on Google Cloud Platform](#).

Step 2. Create two VPX instances

Create two VPX instances by following the steps given in [Scenario: deploy a multi-NIC, multi-IP stand-alone VPX instance](#).

Important

Assign a static external IP address to client IP address (VIP) of the primary node. You can use an existing reserved IP address or create a new one. To create a static external IP address, navigate to **Network interface > External IP**, click **Create IP address**.

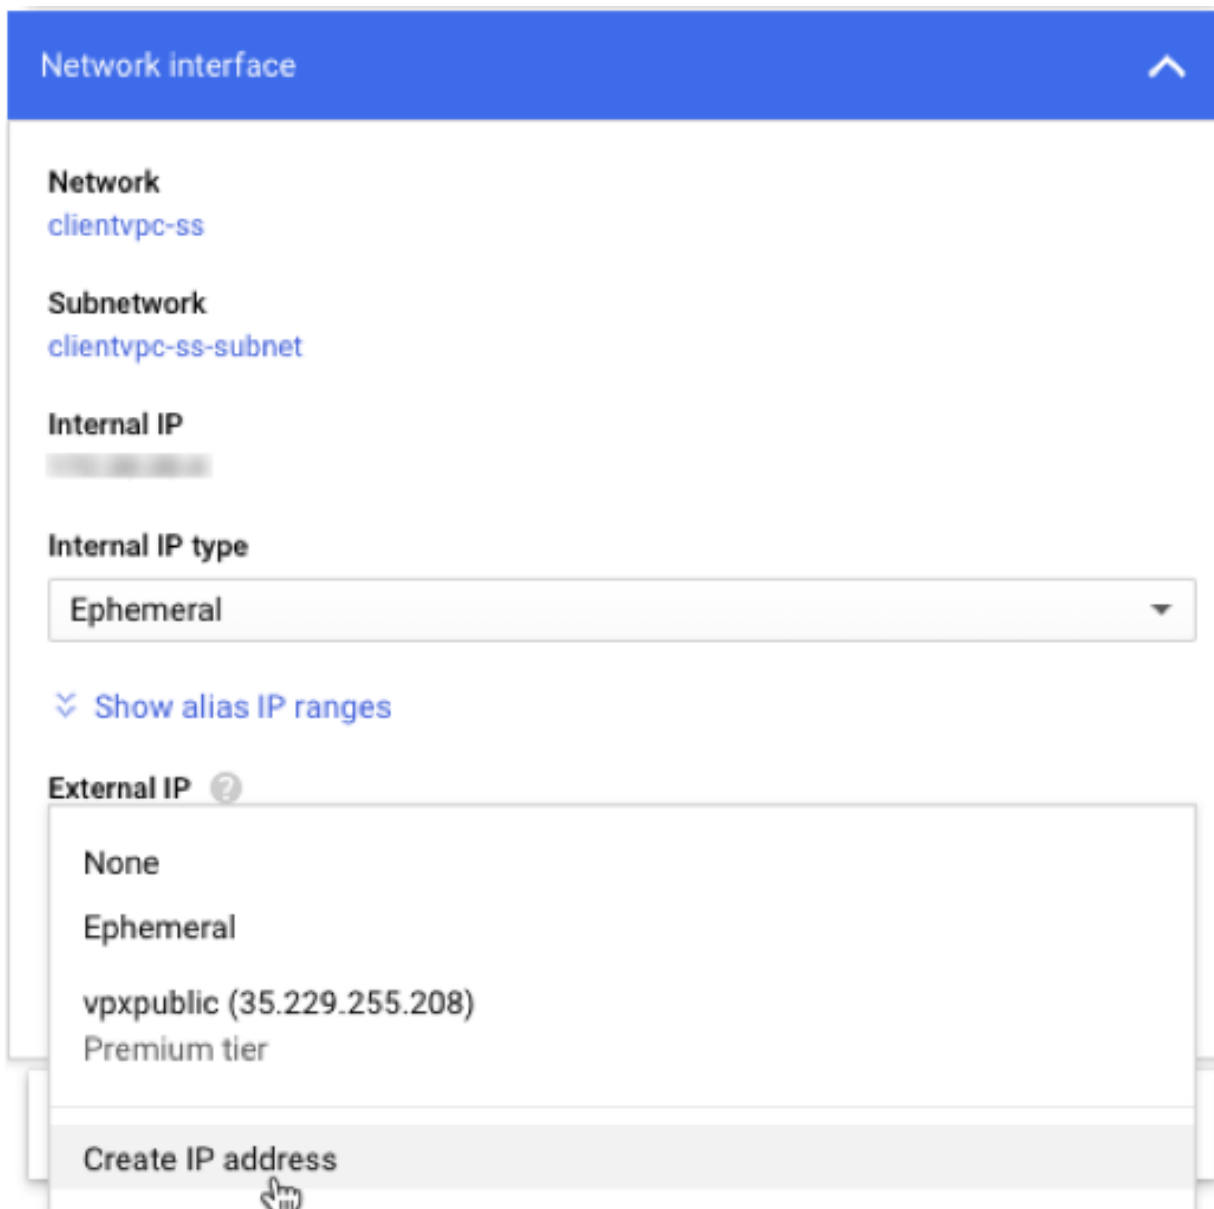

After the failover, when the old primary becomes the new secondary, the static external IP address moves from the old primary and is attached to the new primary. For more information, see the Google cloud document [Reserving a Static External IP Address](#).

After you've configured the VPX instances, you can configure the VIP and SNIP addresses. For more information, see [Configuring NetScaler-owned IP addresses](#).

Step 3. Configure high availability

After you've created the instances on Google Cloud Platform, you can configure HA by using the NetScaler GUI for CLI.

Configure HA by using the GUI Step 1. Set up high availability in INC mode on both the instances.

On the **primary node**, perform the following steps:

1. Log on to the instance with user name `nsroot` and instance ID of the node from GCP console as the password.
2. Navigate to **Configuration > System > High Availability > Nodes**, and click **Add**.
3. In the **Remote Node IP address** field, enter the private IP address of the management NIC of the secondary node.
4. Select the **Turn on INC (Independent Network Configuration) mode on self node** check box.
5. Click **Create**.

On the **secondary node**, perform the following steps:

1. Log on to the instance with user name `nsroot` and instance ID of the node from GCP console as the password.
2. Navigate to **Configuration > System > High Availability > Nodes**, and click **Add**.
3. In the **Remote Node IP address** field, enter the private IP address of the management NIC of the primary node.
4. Select the **Turn on INC (Independent Network Configuration) mode on self node** check box.
5. Click **Create**.

Before you proceed further, ensure that the Synchronization state of the secondary node is shown as **SUCCESS** in the **Nodes** page.

System / High Availability / Nodes

Nodes 2

<input type="checkbox"/>	ID	IP ADDRESS	HOST NAME	MASTER STATE	NODE STATE	INC	SYNCHRONIZATION STATE	SYNCHRONIZATION FAILURE REASON
<input type="checkbox"/>	0	192.168.1.3		Primary	● UP	ENABLED	ENABLED	-NA-
<input type="checkbox"/>	1	192.168.1.66		Secondary	● UP	ENABLED	SUCCESS	-NA-

Total 2 25 Per Page Page 1 of 1

Note

Now, the secondary node has the same log-on credentials as the primary node.

Step 2. Add Virtual IP address and Subnet IP address on both the nodes.

On the **primary node**, perform the following steps:

1. Navigate to **System > Network > IPs > IPv4s**, and click **Add**.
2. Add a primary VIP address by following these steps:
 - a) Enter the internal IP address of the client-facing interface of the primary instance and net-mask configured for the client subnet in the VM instance.

- b) In the **IP Type** field, select **Virtual IP** from the drop-down menu.
 - c) Click **Create**.
3. Add a primary SNIP address by following these steps:
 - a) Enter the internal IP address of the server-facing interface of the primary instance and netmask configured for the server subnet in the primary instance.
 - b) In the **IP Type** field, select **Subnet IP** from the drop-down menu.
 - c) Click **Create**.
4. Add a secondary VIP address by following these steps:
 - a) Enter the internal IP address of the client-facing interface of the secondary instance and netmask configured for the client subnet in the VM instance.
 - b) In the **IP Type** field, select **Virtual IP** from the drop-down menu.
 - c) Click **Create**.

IPs

IPv4s 4 IPv6s 1

Add Edit Delete Statistics Select Action

Click here to search or you can enter Key : Value format

<input type="checkbox"/>	IP ADDRESS	STATE	TYPE	MODE	ARP	ICMP	VIRTUAL SERVER	TRAFFIC DOMAIN
<input checked="" type="checkbox"/>	192.168.2.54	ENABLED	Virtual IP	Active	ENABLED	ENABLED	ENABLED	0
<input checked="" type="checkbox"/>	192.168.3.7	ENABLED	Subnet IP	Active	ENABLED	ENABLED	-N/A-	0
<input checked="" type="checkbox"/>	192.168.2.37	ENABLED	Virtual IP	Active	ENABLED	ENABLED	ENABLED	0
<input type="checkbox"/>	192.168.1.3	ENABLED	NetScaler IP	Active	ENABLED	ENABLED	-N/A-	0

Total 4

25 Per Page Page 1 of 1

On the **secondary node**, perform the following steps:

1. Navigate to **System > Network > IPs > IPv4s**, and click **Add**.
2. Add a secondary VIP address by following these steps:
 - a) Enter the internal IP address of the client-facing interface of the secondary instance and netmask configured for the client subnet in the VM instance.
 - b) In the **IP Type** field, select **Virtual IP** from the drop-down menu.
3. Add a secondary SNIP address by following these steps:
 - a) Enter the internal IP address of the server-facing interface of the secondary instance and netmask configured for the server subnet in the secondary instance.
 - b) In the **IP Type** field, select **Subnet IP** from the drop-down menu.
 - c) Click **Create**.

	IP ADDRESS	STATE	TYPE	MODE	ARP	ICMP	VIRTUAL SERVER	TRAFFIC DOMAIN
Secondary SNIP	192.168.3.76	ENABLED	Subnet IP	Active	ENABLED	ENABLED	-N/A-	0
Secondary VIP	192.168.2.54	ENABLED	Virtual IP	Passive	ENABLED	ENABLED	ENABLED	0
	192.168.1.66	ENABLED	NetScaler IP	Active	ENABLED	ENABLED	-N/A-	0

Step 3. Add IP set and bind IP set to the secondary VIP on both the instances.


On the **primary node**, perform the following steps:

1. Navigate to **System > Network > IP Sets > Add**.
2. Add an IP set name and click **Insert**.
3. From the **IPv4s** page, select the virtual IP (secondary VIP) and click **Insert**.
4. Click **Create** to create the IP set.

	IP ADDRESS	TRAFFIC DOMAIN	OWNER NODE	STATE	TYPE	MODE	ARP	ICMP	VIRTUA
<input type="checkbox"/>	192.168.1.3	0	ALL NODES (255)	ENABLED	NetScaler IP	Active	ENABLED	ENABLED	-N/A-
<input type="checkbox"/>	192.168.2.37	0	ALL NODES (255)	ENABLED	Virtual IP	Active	ENABLED	ENABLED	ENABLI
<input type="checkbox"/>	192.168.3.7	0	ALL NODES (255)	ENABLED	Subnet IP	Active	ENABLED	ENABLED	-N/A-
<input checked="" type="checkbox"/>	192.168.2.54	0	ALL NODES (255)	ENABLED	Virtual IP	Active	ENABLED	ENABLED	ENABLI

On the **secondary node**, perform the following steps:

1. Navigate to **System > Network > IP Sets > Add**.
2. Add an IP set name and click **Insert**.
3. From the **IPv4s** page, select the virtual IP (secondary VIP) and click **Insert**.
4. Click **Create** to create the IP set.

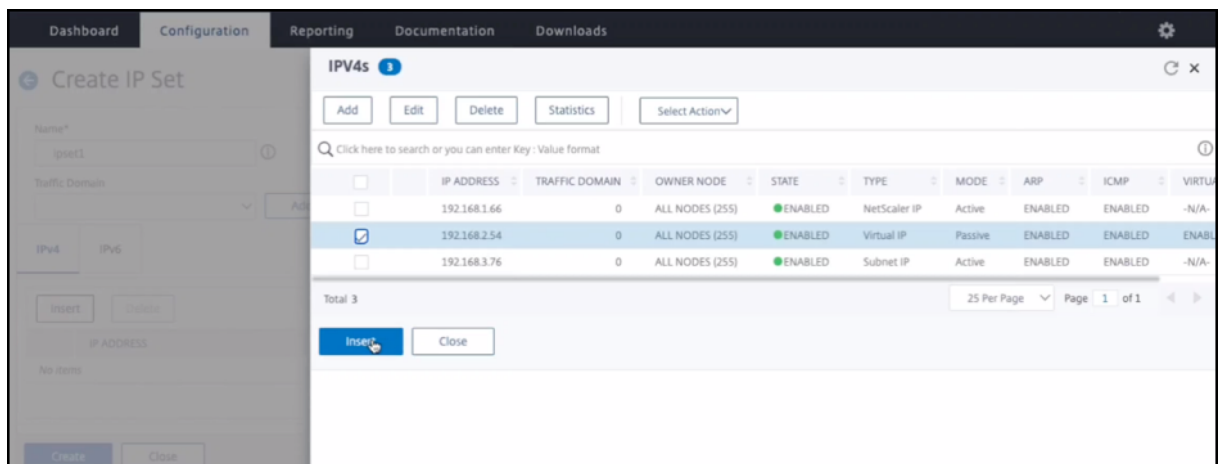


Note

IP set name must be same on both the instances.

Step 4. Add a load balancing virtual server on the primary instance.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers > Add.**
2. Add the required values for Name, Protocol, IP Address Type (IP Address), IP address (primary VIP), and Port.

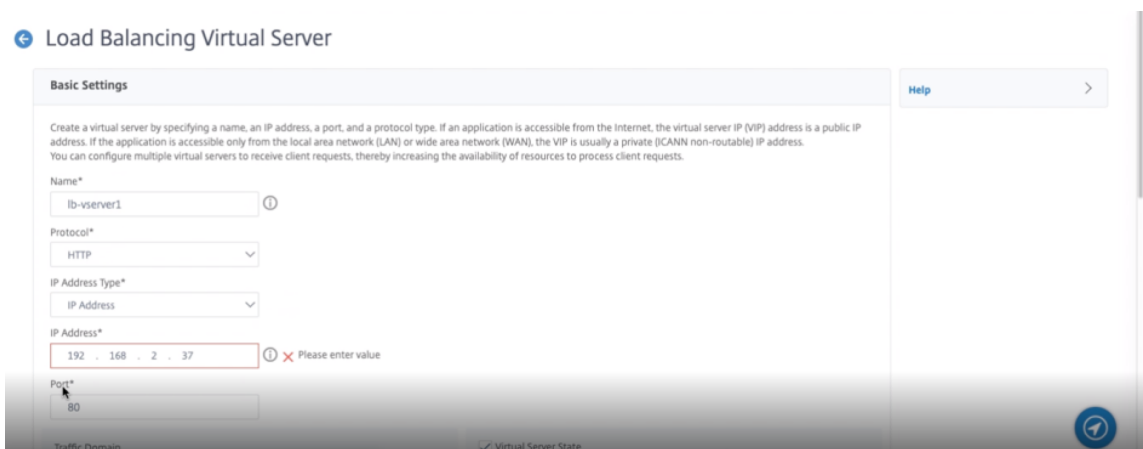

3. Click **More**. Navigate to **IP Range IP Set Settings**, select **IPset** from the drop-down menu, and provide the IPset created in **Step 3**.
4. Click **OK** to create the load balancing virtual server.

Step 5. Add a service or service group on the primary node.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Services > Add.**
2. Add the required values for Service Name, IP Address, Protocol and Port, and click **OK**.

Step 6. Bind the service or service group to the load balancing virtual server on the primary node.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers**.
2. Select the load balancing virtual server configured in **Step 4**, and click **Edit**.
3. In the **Service and Service Groups** tab, click **No Load Balancing Virtual Server Service Binding**.
4. Select the service configured in the **Step 5**, and click **Bind**.

Save the configuration. After a forced failover, the secondary becomes the new primary. The external static IP of the old primary VIP moves to the new secondary VIP.

Configure high availability using CLI Step 1. Set up high availability in INC mode in both the instances.

On the primary node, type the following command.

```
1 add ha node 1 <sec_ip> -inc ENABLED
```

On the secondary node, type the following command.

```
1 add ha node 1 <prim_ip> -inc ENABLED
```

`sec_ip` refers to the internal IP address of the management NIC of the secondary node.

`prim_ip` refers to the internal IP address of the management NIC of the primary node.

Step 2. Add Virtual and Subnet IPs on both the nodes.

On the primary node, type the following command.

```
1 add ns ip <primary_vip> <subnet> -type VIP
2
3 add ns ip <secondary_vip> <subnet> -type VIP
4
5 add ns ip <primary_snip> <subnet> -type SNIP
```

`primary_vip` refers to the internal IP address of the client-facing interface of the primary instance.

`secondary_vip` refers to the internal IP address of the client-facing interface of the secondary instance.

`primary_snip` refers to the internal IP address of the server-facing interface of the primary instance.

On the secondary node, type the following command.

```
1 add ns ip <secondary_vip> <subnet> -type VIP
2
3 add ns ip <secondary_snip> <subnet> -type SNIP
```

`secondary_vip` refers to the internal IP address of the client-facing interface of the secondary instance.

`secondary_snip` refers to the internal IP address of the server-facing interface of the secondary instance.

Step 3. Add IP set and bind IP set to secondary VIP on both the instances.

On the primary node, type the following command:

```
1 add ipset <ipsetname>
2 bind ipset <ipsetname> <secondary VIP>
```

On the secondary node, type the following command:

```
1 add ipset <ipsetname>
2 bind ipset <ipsetname> <secondary VIP>
```

Note

IP set name must be same on both the instances.

Step 4. Add a virtual server on the primary instance.

Type the following command:

```
1 add <server_type> vserver <vserver_name> <protocol> <primary_vip> <port>
   > -ipset <ipset_name>
```

Step 5. Add a service or service group on the primary instance.

Type the following command:

```
1 add service <service_name> <service_ip_address> <protocol> <port>
```

Step 6. Bind the service/service group to the load balancing virtual server on the primary instance.

Type the following command:

```
1 bind <server_type> vserver <vserver_name> <service_name>
```

Note:

To save your configuration, type the command `save config`. Otherwise, the configurations are lost after you restart the instances.

Step 7. Verify the configuration.

Ensure that the external IP address attached to the primary client NIC moves to the secondary on a failover.

1. Make a cURL request to the external IP address and make sure that it is reachable.

2. On the primary instance, perform failover:

From GUI, navigate to **Configuration > System > High Availability > Action > Force Failover**.

From CLI, type the following command:

```
1 force ha failover -f
```

On the GCP console, goto the Secondary instance. The external IP address must have moved to the client NIC of secondary after failover.

3. Issue a cURL request to the external IP and ensure it is reachable again.

Deploy a single NIC VPX high-availability pair with private IP address on Google Cloud Platform


May 2, 2023

You can deploy a single NIC VPX high-availability pair on GCP using private IP address. The client IP (VIP) address must be configured as alias IP address on the primary node. Upon failover, the Client IP address is moved to the secondary node, for the traffic to resume. The Subnet IP (SNIPs) addresses for each node must also be configured as an alias IP range.

For more information on high availability, see [High Availability](#).

Before you start

- Read the Limitation, Hardware requirements, Points to note mentioned in [Deploy a NetScaler VPX instance on Google Cloud Platform](#). This information applies to high availability deployments also.
- Enable **Cloud Resource Manager API** for your GCP project.
- Allow full access to all Cloud APIs while creating the instances.

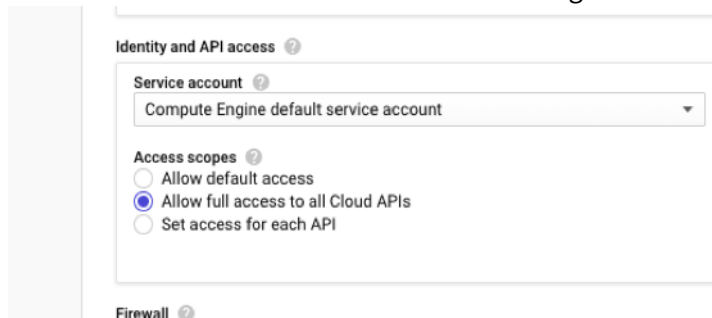

- Ensure that your GCP service account has the following IAM permissions:


```
1  REQUIRED_INSTANCE_IAM_PERMS = [  
2  "compute.forwardingRules.list",  
3  "compute.forwardingRules.setTarget",  
4  "compute.instances.setMetadata",  
5  "compute.instances.get",  
6  "compute.instances.list",  
7  "compute.instances.updateNetworkInterface",  
8  "compute.targetInstances.list",  
9  "compute.targetInstances.use",  
10 "compute.targetInstances.create",  
11 "compute.zones.list",  
12 "compute.zoneOperations.get",  
13 ]
```

- If your VMs do not have internet access, you must enable **Private Google Access** on the VPC subnet.

Add a subnet

Name ⓘ
Name is permanent
management-subnet

Add a description

VPC Network
automationmgmtnetwork

Region ⓘ
us-east1

Reserve for Internal HTTP(S) Load Balancing ⓘ
 On
 Off

IP address range ⓘ
192.168.2.0/24

Create secondary IP range

Private Google access ⓘ
 On
 Off

Flow logs
Turning on VPC flow logs doesn't affect performance, but some systems generate a large number of logs, which can increase costs in Stackdriver. [Learn more](#)
 On
 Off

CANCEL **ADD**

- If you have configured GCP forwarding rules on the primary node, read the limitations and requirements mentioned in [Forwarding rules support for VPX high-availability pair on GCP](#) to update them to new primary on failover.

How to deploy a VPX high availability pair on Google Cloud Platform

Here is a summary of the steps for deploying HA pair with single NIC:

1. Create one VPC network.
2. Create two VPX instances (primary and secondary nodes) in the same region. They can be in the same zone or different zones. For example Asia east-1a and Asia east-1b.
3. Configure HA settings on both instances by using the NetScaler GUI or ADC CLI commands.

Step 1. Create one VPC network

To create a VPC network, perform these steps:

1. Log on to the **Google console > Networking > VPC network > Create VPC Network**.
2. Complete the required fields, and click **Create**.

For more information, see the **Create VPC Networks** section in [Deploy a NetScaler VPX instance on Google Cloud Platform](#).

Step 2. Create two VPX instances


Create two VPX instances by following the step 1 to step 3 given in [Scenario: Deploy a single-NIC, stand-alone VPX instance](#).

Important:

Assign a client alias IP address only to the primary node and server alias IP addresses to primary and secondary nodes. Do not use the internal IP address of the VPX instance to configure the VIP or SNIP.


To create client and server alias IP addresses, perform these steps on the primary node:

1. Navigate to the VM instance and click **Edit**.
2. In the **Network Interface** window, edit the client (NIC0) interface.
3. In the **Alias IP range** field, enter the client alias IP address.
4. Click **Add IP Range** and enter the server alias IP address.

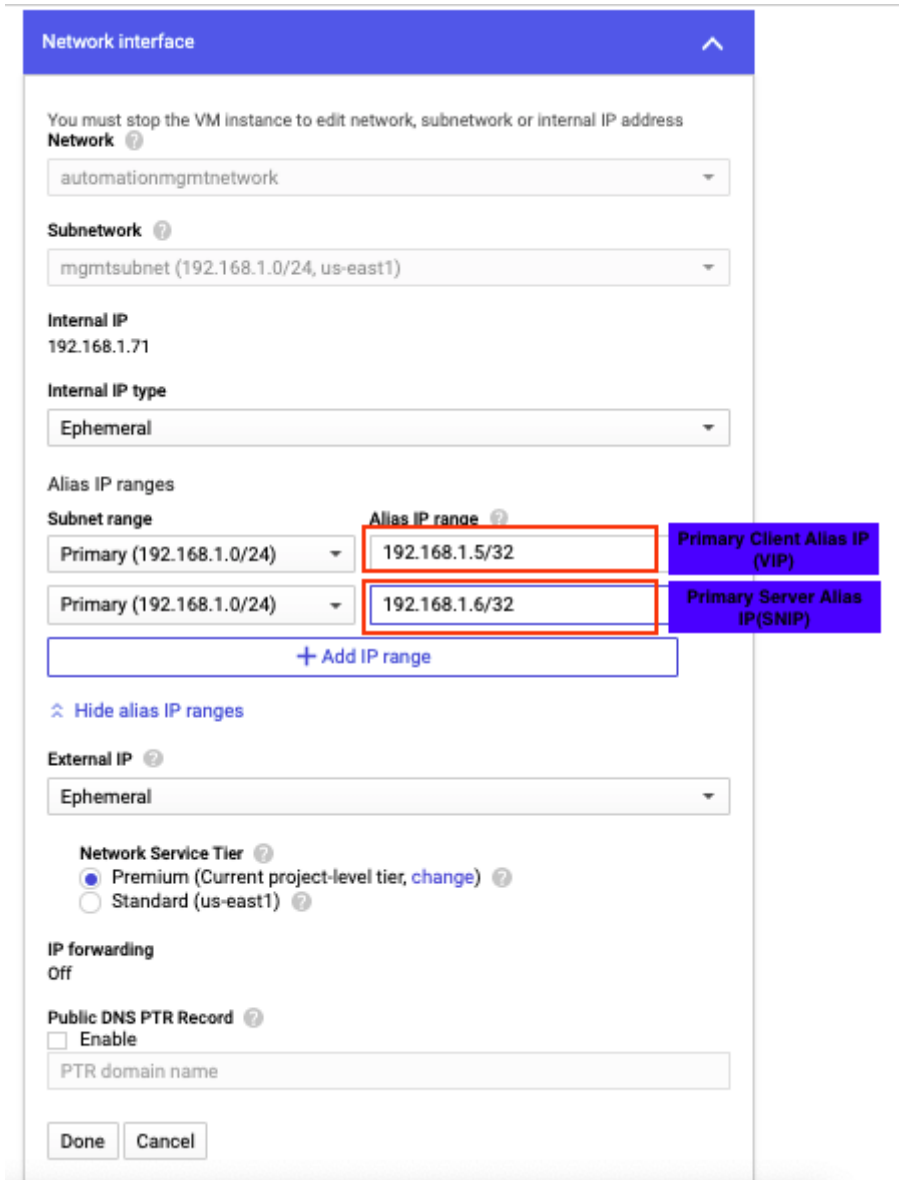

To create a server alias IP address, perform these steps on the secondary node:

1. Navigate to the VM instance and click **Edit**.
2. In the **Network Interface** window, edit the client (NIC0) interface.
3. In the **Alias IP range** field, enter the server alias IP address.

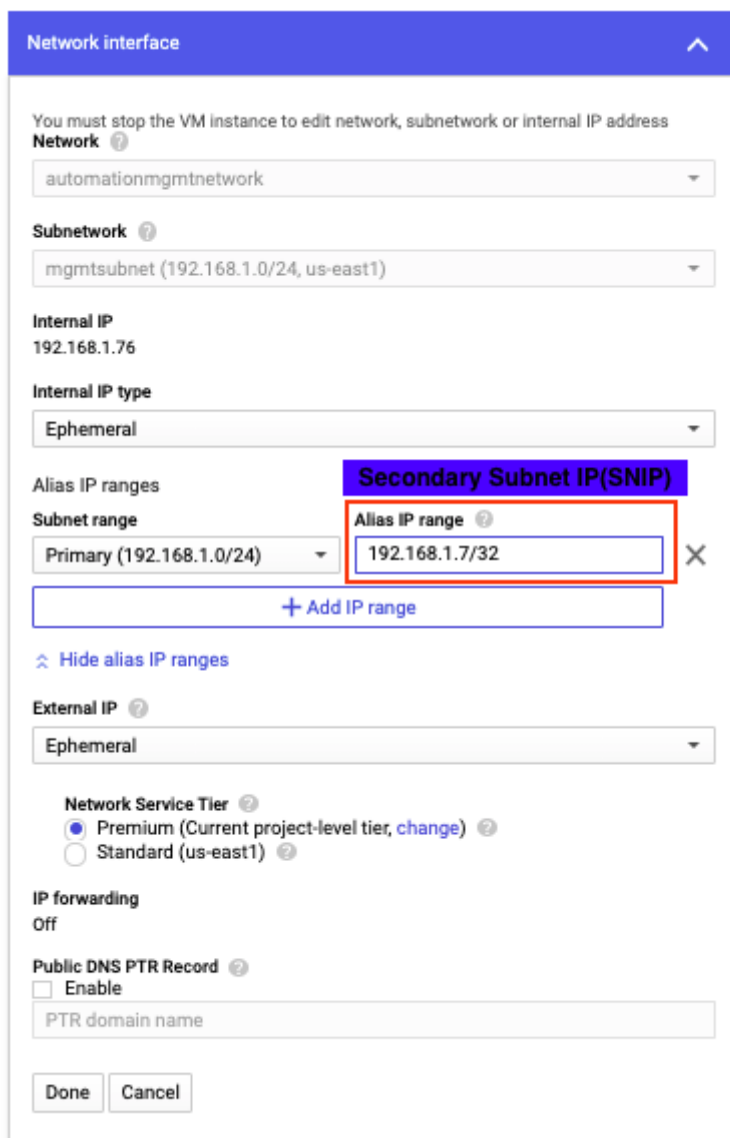

After the failover, when the old primary becomes the new secondary, the client alias IP address is moved from the old primary and is attached to the new primary.

After you have configured the VPX instances, you can configure the Virtual (VIP) and Subnet IP (SNIP) addresses. For more information, see [Configuring NetScaler-owned IP addresses](#).

Step 3. Configure high availability

After you've created the instances on Google Cloud Platform, you can configure high availability by using the NetScaler GUI or CLI.

Configure high availability by using the GUI

Step 1. Set up high availability in INC Enabled mode on both the nodes.

On the **primary node**, perform the following steps:

1. Log on to the instance with user name `nsroot` and instance ID of the node from GCP console as the password.
2. Navigate to **Configuration > System > High Availability > Nodes**, and click **Add**.
3. In the **Remote Node IP address** field, enter the private IP address of the management NIC of the secondary node.
4. Select the **Turn on INC (Independent Network Configuration) mode on self node** check box.
5. Click **Create**.

On the **secondary node**, perform the following steps:

1. Log on to the instance with user name `nsroot` and instance ID of the node from GCP console as the password.
2. Navigate to **Configuration > System > High Availability > Nodes**, and click **Add**.
3. In the **Remote Node IP address** field, enter the private IP address of the management NIC of the primary node.
4. Select the **Turn on INC (Independent Network Configuration) mode on self node** check box.
5. Click **Create**.

Before you proceed further, ensure that the Synchronization state of the secondary node is shown as **SUCCESS** in the **Nodes** page.

System > High Availability > Nodes

Nodes 2

	ID	IP ADDRESS	HOST NAME	MASTER STATE	NODE STATE	INC	SYNCHRONIZATION STATE	SYNCHRONIZATION FAILURE REA
<input type="checkbox"/>	0	192.168.1.71		Primary	● UP	ENABLED	ENABLED	-NA-
<input type="checkbox"/>	1	192.168.1.76		Secondary	● UP	ENABLED	SUCCESS	-NA-

Total 2

25 Per Page Page 1 of 1


Note:

After the secondary node is synchronized with the primary node, the secondary node has the same log-on credentials as the primary node.

Step 2. Add Virtual IP address and Subnet IP address on both the nodes.

On the primary node, perform the following steps:

1. Navigate to **System > Network > IPs > IPv4s**, and click **Add**.
2. To create a client alias IP (VIP) address:
 - a) Enter the client alias IP address and netmask configured for the VPC subnet in the primary VM instance.
 - b) In the **IP Type** field, select **Virtual IP** from the drop-down menu.
 - c) Click **Create**.
3. To create a server alias IP (SNIP) address:
 - a) Enter the server alias IP address and netmask configured for the VPC subnet in the primary VM instance.
 - b) In the **IP Type** field, select **Subnet IP** from the drop-down menu.
 - c) Click **Create**.

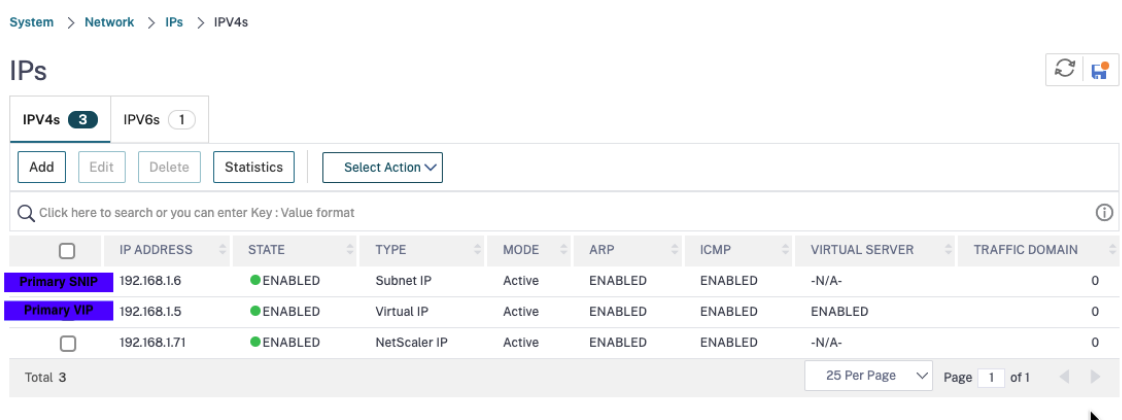

On the secondary node, perform the following steps:

1. Navigate to **System > Network > IPs > IPv4s**, and click **Add**.
2. To create a client alias IP (VIP) address:
 - a) Enter the client alias IP address and netmask configured for the VPC subnet of the primary VM instance.
 - b) In the **IP Type** field, select **Virtual IP** from the drop-down menu.
 - c) Click **Create**.
3. To create a server alias IP (SNIP) address:
 - a) Enter the server alias IP address and netmask configured for the VPC subnet of the secondary VM instance.
 - b) In the **IP Type** field, select **Subnet IP** from the drop-down menu.
 - c) Click **Create**.

System > Network > IPs > IPv4s

IPs 🔄 📄

IPv4s **3** IPv6s **1**

Add Edit Delete Statistics Select Action

🔍 Click here to search or you can enter Key : Value format ⓘ

<input type="checkbox"/>	IP ADDRESS	STATE	TYPE	MODE	ARP	ICMP	VIRTUAL SERVER	TRAFFIC DOMAIN
<input type="checkbox"/>	192.168.1.7	ENABLED	Subnet IP	Active	ENABLED	ENABLED	-N/A-	0
<input type="checkbox"/>	192.168.1.76	ENABLED	NetScaler IP	Active	ENABLED	ENABLED	-N/A-	0
<input checked="" type="checkbox"/>	192.168.1.5	ENABLED	Virtual IP	Passive	ENABLED	ENABLED	ENABLED	0

Total 3 25 Per Page Page 1 of 1

Step 3. Add a load balancing virtual server on the primary node.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers > Add**.
2. Add the required values for Name, Protocol, IP Address Type (IP Address), IP Address (primary client alias IP address) and Port, and click **OK**.

↳ Load Balancing Virtual Server

Basic Settings

Create a virtual server by specifying a name, an IP address, a port, and a protocol type. If an application is accessible from the Internet, the virtual server IP (VIP) address is a public IP address. If the application is accessible only from the local area network (LAN) or wide area network (WAN), the VIP is usually a private (ICANN non-routable) IP address. You can configure multiple virtual servers to receive client requests, thereby increasing the availability of resources to process client requests.

Name*
 ⓘ

Protocol*

IP Address Type*

IP Address*
 ⓘ

Port*

▶ More

Step 4. Add a service or service group on the primary node.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Services > Add**.
2. Add the required values for Service Name, IP Address, Protocol and Port, and click **OK**.

Step 5. Bind the service or service group to the load balancing virtual server on the primary node.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers**.
2. Select the load balancing virtual server configured in **Step 3**, and click **Edit**.

3. In the **Service and Service Groups** tab, click **No Load Balancing Virtual Server Service Binding**.
4. Select the service configured in the **Step 4**, and click **Bind**.

Step 6. Save the configuration.

After a forced failover, the secondary becomes the new primary. The client alias IP (VIP) from the old primary moves to the new primary.

Configure high availability by using the CLI

Step 1. Set up high availability in **INC Enabled** mode in both the instances by using the NetScaler CLI.

On the primary node, type the following command.

```
1 add ha node 1 <sec_ip> -inc ENABLED
```

On the secondary node, type the following command.

```
1 add ha node 1 <prim_ip> -inc ENABLED
```

The `sec_ip` refers to the internal IP address of the management NIC of the secondary node.

The `prim_ip` refers to the internal IP address of the management NIC of the primary node.

Step 2. Add VIP and SNIP on both primary and secondary nodes.

Type the following commands on the primary node:

```
1 add ns ip <primary_client_alias_ip> <subnet> -type VIP
```

Note:

Enter the alias IP address and netmask configured for the client subnet in the VM instance.

```
1 add ns ip <primary_server_alias_ip> <subnet> -type SNIP
```

Type the following commands on the secondary node:

```
1 add ns ip <primary_client_alias_ip> <subnet> -type VIP
```

Note:

Enter the alias IP address and netmask configured for the client subnet in the VM instance.

```
1 add ns ip <secondary_server_alias_ip> <subnet> -type SNIP
```


Note:

Enter the alias IP address and netmask configured for the server subnet in the VM instance.

Step 3. Add a virtual server on the primary node.

Type the following command:

```
1 add <server_type> vserver <vserver_name> <protocol> <
  primary_client_alias_ip> <port>
```

Step 4. Add a service or service group on the primary node.

Type the following command:

```
1 add service <service_name> <service_ip_address> <protocol> <port>
```

Step 5. Bind the service or service group to the load balancing virtual server on the primary node.

Type the following command:

```
1 bind <server_type> vserver <vserver_name> <service_name>
```

Note:

To save your configuration, type the command `save config`. Otherwise, the configurations are lost after you restart the instances.

Deploy a VPX high-availability pair with private IP address on Google Cloud Platform

May 2, 2023


You can deploy a VPX high-availability pair on GCP using private IP address. The client IP (VIP) must be configured as alias IP address on the primary node. Upon failover, the Client IP address is moved to the secondary node, for the traffic to resume.

For more information on high availability, see [High Availability](#).

Before you start

- Read the Limitation, Hardware requirements, Points to note mentioned in [Deploy a NetScaler VPX instance on Google Cloud Platform](#). This information applies to high availability deployments also.

- Enable **Cloud Resource Manager API** for your GCP project.
- Allow full access to all Cloud APIs while creating the instances.

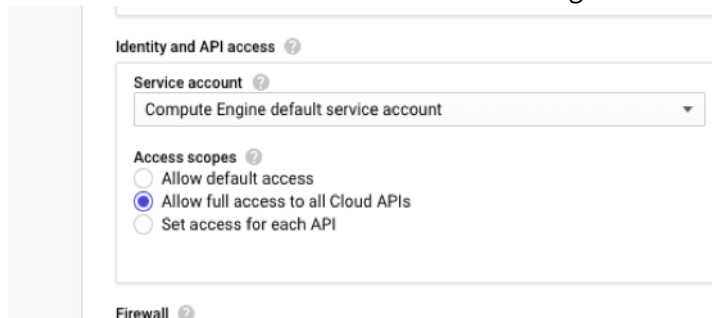

- Ensure that your GCP service account has the following IAM permissions:

```
1  REQUIRED_INSTANCE_IAM_PERMS = [  
2  "compute.forwardingRules.list",  
3  "compute.forwardingRules.setTarget",  
4  "compute.instances.setMetadata",  
5  "compute.instances.get",  
6  "compute.instances.list",  
7  "compute.instances.updateNetworkInterface",  
8  "compute.targetInstances.list",  
9  "compute.targetInstances.use",  
10 "compute.targetInstances.create",  
11 "compute.zones.list",  
12 "compute.zoneOperations.get",  
13 ]
```

- If you have configured external IP addresses on an interface other than the management interface, ensure that your GCP service account has the following additional IAM permissions:

```
1  REQUIRED_INSTANCE_IAM_PERMS = [  
2  "compute.addresses.use"  
3  "compute.instances.addAccessConfig",  
4  "compute.instances.deleteAccessConfig",  
5  "compute.networks.useExternalIp",  
6  "compute.subnetworks.useExternalIp",  
7  ]
```

- If your VMs do not have internet access, you must enable **Private Google Access** on the management subnet.

Add a subnet

Name ⓘ
Name is permanent
management-subnet

[Add a description](#)

VPC Network
automationmgmtnetwork

Region ⓘ
us-east1

Reserve for Internal HTTP(S) Load Balancing ⓘ
 On
 Off

IP address range ⓘ
192.168.2.0/24

[Create secondary IP range](#)

Private Google access ⓘ
 On
 Off

Flow logs
Turning on VPC flow logs doesn't affect performance, but some systems generate a large number of logs, which can increase costs in Stackdriver. [Learn more](#)
 On
 Off

[CANCEL](#) [ADD](#)

- If you have configured GCP forwarding rules on the primary node, read the limitations and requirements mentioned in [Forwarding rules support for VPX high-availability pair on GCP](#) to update them to new primary on failover.

How to deploy a VPX high availability pair on Google Cloud Platform

Here is a summary of the high availability deployment steps:

1. Create VPC networks in the same region. For example, Asia-east.
2. Create two VPX instances (primary and secondary nodes) on the same region. They can be in the same zone or different zones. For example Asia east-1a and Asia east-1b.
3. Configure high availability settings on both instances by using the NetScaler GUI or ADC CLI commands.

Step 1. Create VPC networks

Create VPC networks based on your requirements. Citrix recommends you to create three VPC networks for associating with management NIC, client NIC, and server NIC.

To create a VPC network, perform these steps:

1. Log on the **Google console > Networking > VPC network > Create VPC Network**.
2. Complete the required fields, and click **Create**.

For more information, see the **Create VPC Networks** section in [Deploy a NetScaler VPX instance on Google Cloud Platform](#).

Step 2. Create two VPX instances

Create two VPX instances by following the steps given in [Scenario: deploy a multi-NIC, multi-IP stand-alone VPX instance](#).

Important:

Assign a client alias IP address to the primary node. Do not use the internal IP address of the VPX instance to configure the VIP.

To create a client alias IP address, perform these steps:

1. Navigate to the VM instance and click **Edit**.
2. In the **Network Interface** window, edit the client interface.
3. In the **Alias IP range** field, enter the client alias IP address.

VM instance details

Creation time
Jan 16, 2020, 4:00:22 PM

Network interfaces

nic0: automationmgmtnetwork mgmtsubnet

Network interface

Network
automationclientnetwork

Subnetwork
clientsubnet

Internal IP
192.168.2.65

Internal IP type
Ephemeral

Alias IP ranges

Subnet range
Primary (192.168.2.0/24)

Alias IP range
Example: 10.0.1.0/24 or /32

+ Add IP range

Hide alias IP ranges

External IP
None

Done Cancel

nic2: automationservernetwork serversubnet

Network interfaces		Subnetwork	Primary internal IP	Alias IP ranges	External IP	Network Tier	IP forwarding	Network details
nic0	automationmgmtnetwork	mgmtsubnet	192.168.1.62	—	adc-ha-instance1-ip1 (35.185.108.124)	Premium	Off	View details
nic1	automationclientnetwork	clientsubnet	192.168.2.8	192.168.2.7/32	None			View details
nic2	automationservernetwork	serversubnet	192.168.3.8	—	None			View details

After the failover, when the old primary becomes the new secondary, the alias IP addresses move from the old primary and is attached to the new primary.

After you have configured the VPX instances, you can configure the Virtual (VIP) and Subnet IP (SNIP) addresses. For more information, see [Configuring NetScaler-owned IP addresses](#).

Step 3. Configure high availability

After you've created the instances on Google Cloud Platform, you can configure high availability by using the NetScaler GUI or CLI.

Configure high availability by using the GUI

Step 1. Set up high availability in INC Enabled mode on both the nodes.


On the **primary node**, perform the following steps:

1. Log on to the instance with user name `nsroot` and instance ID of the node from GCP console as the password.
2. Navigate to **Configuration > System > High Availability > Nodes**, and click **Add**.
3. In the **Remote Node IP address** field, enter the private IP address of the management NIC of the secondary node.
4. Select the **Turn on INC (Independent Network Configuration) mode on self node** check box.
5. Click **Create**.

On the **secondary node**, perform the following steps:

1. Log on to the instance with user name `nsroot` and instance ID of the node from GCP console as the password.
2. Navigate to **Configuration > System > High Availability > Nodes**, and click **Add**.
3. In the **Remote Node IP address** field, enter the private IP address of the management NIC of the primary node.
4. Select the **Turn on INC (Independent Network Configuration) mode on self node** check box.
5. Click **Create**.

Before you proceed further, ensure that the Synchronization state of the secondary node is shown as **SUCCESS** in the **Nodes** page.

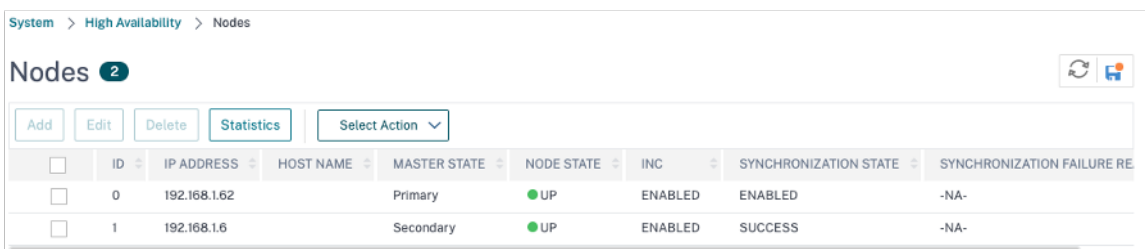

	ID	IP ADDRESS	HOST NAME	MASTER STATE	NODE STATE	INC	SYNCHRONIZATION STATE	SYNCHRONIZATION FAILURE RE
<input type="checkbox"/>	0	192.168.1.62		Primary	UP	ENABLED	ENABLED	-NA-
<input type="checkbox"/>	1	192.168.1.6		Secondary	UP	ENABLED	SUCCESS	-NA-

Note


After the secondary node is synchronized with the primary node, the secondary node has the same log-on credentials as the primary node.

Step 2. Add Virtual IP address and Subnet IP address on both the nodes.

On the primary node, perform the following steps:

1. Navigate to **System > Network > IPs > IPv4s**, and click **Add**.
2. To create a client alias IP (VIP) address:

- a) Enter the Alias IP address and netmask configured for the client subnet in the VM instance.
 - b) In the **IP Type** field, select **Virtual IP** from the drop-down menu.
 - c) Click **Create**.
3. To create a server IP (SNIP) address:
- a) Enter the internal IP address of the server-facing interface of the primary instance and netmask configured for the server subnet.
 - b) In the **IP Type** field, select **Subnet IP** from the drop-down menu.
 - c) Click **Create**.

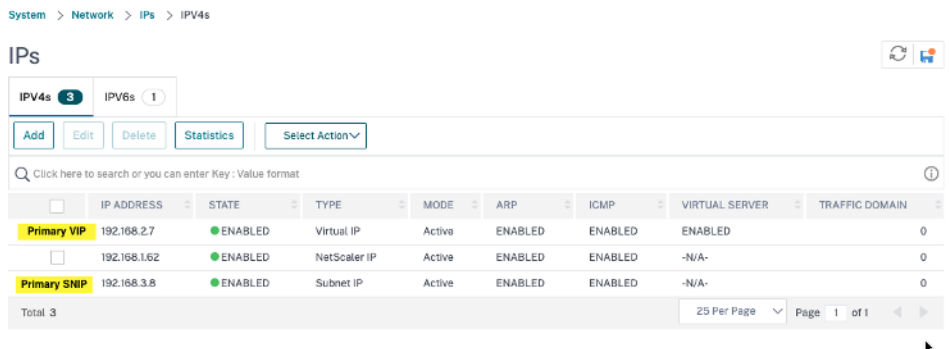

On the secondary node, perform the following steps:

1. Navigate to **System > Network > IPs > IPv4s**, and click **Add**.
2. To create a client alias IP (VIP) address:
 - a) Enter the Alias IP address and netmask configured for the client subnet on the primary VM instance.
 - b) In the **IP Type** field, select **Subnet IP** from the drop-down menu.
 - c) Click **Create**.
3. To create a server IP (SNIP) address:
 - a) Enter the internal IP address of the server-facing interface of the secondary instance and netmask configured for the server subnet.
 - b) In the **IP Type** field, select **Subnet IP** from the drop-down menu.
 - c) Click **Create**.

The screenshot shows the 'IPs' configuration page in NetScaler. It displays a table with columns for IP ADDRESS, STATE, TYPE, MODE, ARP, ICMP, VIRTUAL SERVER, and TRAFFIC DOMAIN. There are three rows of IP addresses listed, with the last two highlighted as 'Secondary SNIP' and 'Primary VIP'.

	IP ADDRESS	STATE	TYPE	MODE	ARP	ICMP	VIRTUAL SERVER	TRAFFIC DOMAIN
	192.168.1.6	ENABLED	NetScaler IP	Active	ENABLED	ENABLED	-N/A-	0
Secondary SNIP	192.168.3.7	ENABLED	Subnet IP	Active	ENABLED	ENABLED	-N/A-	0
Primary VIP	192.168.2.7	ENABLED	Virtual IP	Passive	ENABLED	ENABLED	ENABLED	0

Step 3. Add a load balancing virtual server on the primary node.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers > Add**.
2. Add the required values for Name, Protocol, IP Address Type (IP Address), IP Address (primary client alias IP address) and Port, and click **OK**.

Load Balancing Virtual Server

The screenshot shows the 'Basic Settings' form for creating a virtual server. The fields are filled with the following values:

- Name: lb-vserver1
- Protocol: HTTP
- IP Address Type: IP Address
- IP Address: 192.168.2.5
- Port: 80

Step 4. Add a service or service group on the primary node.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Services > Add**.
2. Add the required values for Service Name, IP Address, Protocol and Port, and click **OK**.

Step 5. Bind the service or service group to the load balancing virtual server on the primary node.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers**.
2. Select the load balancing virtual server configured in **Step 3**, and click **Edit**.
3. In the **Service and Service Groups** tab, click **No Load Balancing Virtual Server Service Binding**.
4. Select the service configured in the **Step 4**, and click **Bind**.

Step 5. Save the configuration.

After a forced failover, the secondary becomes the new primary. The client alias IP (VIP) and the server alias IP (SNIP) from the old primary moves to the new primary.

Configure high availability by using the CLI

Step 1. Set up high availability in **INC Enabled** mode in both the instances by using the NetScaler CLI.

On the primary node, type the following command.

```
1 add ha node 1 <sec_ip> -inc ENABLED
```

On the secondary node, type the following command.

```
1 add ha node 1 <prim_ip> -inc ENABLED
```

The `sec_ip` refers to the internal IP address of the management NIC of the secondary node.

The `prim_ip` refers to the internal IP address of the management NIC of the primary node.

Step 2. Add VIP and SNIP on both nodes.

Type the following commands on the primary node:

```
1 add ns ip <primary_client_alias_ip> <subnet> -type VIP
```

Note:

Enter the Alias IP address and netmask configured for the client subnet in the VM instance.

```
1 add ns ip <primary_snip> <subnet> -type SNIP
```

The `primary_snip` refers to the internal IP address of the server-facing interface of the primary instance.

Type the following commands on the secondary node:

```
1 add ns ip <primary_client_alias_ip> <subnet> -type VIP
```

Note

Enter the Alias IP address and netmask configured for the client subnet on the primary VM instance.

```
1 add ns ip <secondary_snip> <subnet> -type SNIP
```

The `secondary_snip` refers to the internal IP address of the server-facing interface of the secondary instance.

Note:

Enter the IP address and netmask configured for the server subnet in the VM instance.

Step 3. Add a virtual server on the primary node.

Type the following command:

```
1 add <server_type> vserver <vserver_name> <protocol> <
    primary_client_alias_ip> <port>
```

Step 4. Add a service or service group on the primary node.

Type the following command:

```
1 add service <service_name> <service_ip_address> <protocol> <port>
```

Step 5. Bind the service or service group to the load balancing virtual server on the primary node.

Type the following command:

```
1 bind <server_type> vserver <vserver_name> <service_name>
```

Note:

To save your configuration, type the command `save config`. Otherwise, the configurations are lost after you restart the instances.

Install a NetScaler VPX instance on Google Cloud VMware Engine


October 26, 2023

Google Cloud VMware Engine (GCVE) provides you with private clouds that contain vSphere clusters, built from dedicated bare-metal Google Cloud Platform infrastructure. The minimum initial deployment is three hosts, but additional hosts can be added one at a time. All provisioned private clouds have vCenter Server, vSAN, vSphere, and NSX-T.

GCVE enables you to create cloud software-defined data centers (SDDC) on Google Cloud Platform with the desired number of ESX hosts. GCVE supports NetScaler VPX deployments. GCVE provides a user interface same as on-prem vCenter. It functions identical to the ESX-based NetScaler VPX deployments.

The following diagram shows the GCVE on the Google Cloud Platform that an administrator or a client can access over the internet. An administrator can create, manage, and configure workload or server VMs using GCVE. The admin can access the GCVE's web-based vCenter and NSX-T Manager using an

OpenVPN connection. You can create the NetScaler VPX instances (standalone or HA pair) and server VMs within GCVE using vCenter, and manage the corresponding networking using NSX-T manager. The NetScaler VPX instance on GCVE works similar to the On-prem VMware cluster of hosts. GCVE can be managed using OpenVPN connection to the management infrastructure.

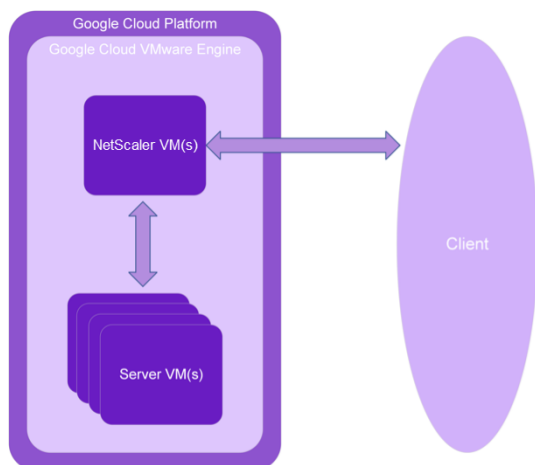

Prerequisites

Before you begin installing a virtual appliance, do the following:

- For more information on Google Cloud VMware Engine and its prerequisites, see [Google Cloud VMware Engine documentation](#).
- For more information on deploying Google Cloud VMware Engine, see [Deploy a Google Cloud VMware Engine private cloud](#).
- For more information on connecting to your private cloud using a point-to-site VPN gateway to access and manage Google Cloud VMware Engine, see [Access an Google Cloud VMware Engine private cloud](#).
- On VPN client machine, download the NetScaler VPX appliance setup files.
- Create appropriate NSX-T network segments on VMware SDDC to which the virtual machines connect. For more information, see [Add a network segment in Google Cloud VMware Engine](#).
- Obtain VPX license files. For more information about NetScaler VPX instance licenses, see [Licensing overview](#).
- Virtual machines (VMs) created or migrated to the GCVE private cloud must be attached to a network segment.

VMware cloud hardware requirements

The following table lists the virtual computing resources that the VMware SDDC must provide for each VPX nCore virtual appliance.

Table 1. Minimum virtual computing resources required for running a NetScaler VPX instance

Component	Requirement
Memory	2 GB
Virtual CPU (vCPU)	2
Virtual network interfaces	In VMware SDDC, you can install a maximum of 10 virtual network interfaces if the VPX hardware is upgraded to version 7 or higher.
Disk space	20 GB

Note

This is in addition to any disk requirements for the hypervisor.

For production use of the VPX virtual appliance, the full memory allocation must be reserved.

OVF Tool 1.0 system requirements

OVF Tool is a client application that can run on Windows and Linux systems. The following table describes the minimum system requirements for installing OVF tool.

Table 2. Minimum system requirements for OVF tool installation

Component	Requirement
Operating system	For detailed requirements from VMware, search for the “OVF Tool User Guide” PDF file at http://kb.vmware.com/ .
CPU	750 MHz minimum, 1 GHz or faster recommended
RAM	1 GB Minimum, 2 GB recommended
NIC	100 Mbps or faster NIC

For information about installing OVF, search for the “OVF Tool User Guide” PDF file at <http://kb.vmware.com/>.

Downloading the NetScaler VPX setup files

The NetScaler VPX instance setup package for VMware ESX follows the Open Virtual Machine (OVF) format standard. You can download the files from the Citrix website. You need a Citrix account to log on. If you do not have a Citrix account, access the home page at <http://www.citrix.com>. Click the **New Users link**, and follow the instructions to create a new Citrix account.

Once logged on, navigate the following path from the Citrix home page:


Citrix.com > **Downloads > NetScaler > Virtual Appliances.**

Copy the following files to a workstation on the same network as the ESX server. Copy all three files into the same folder.

- NSVPX-ESX-<release number>-<build number>-disk1.vmdk (for example, NSVPX-ESX-13.0-79.64-disk1.vmdk)
- NSVPX-ESX-<release number>-<build number>.ovf (for example, NSVPX-ESX-13.0-79.64.ovf)
- NSVPX-ESX-<release number>-<build number>.mf (for example, NSVPX-ESX-13.0-79.64.mf)

Deploy Google Cloud VMware Engine

1. Log in to your [GCVE portal](#), and navigate to **Home**.

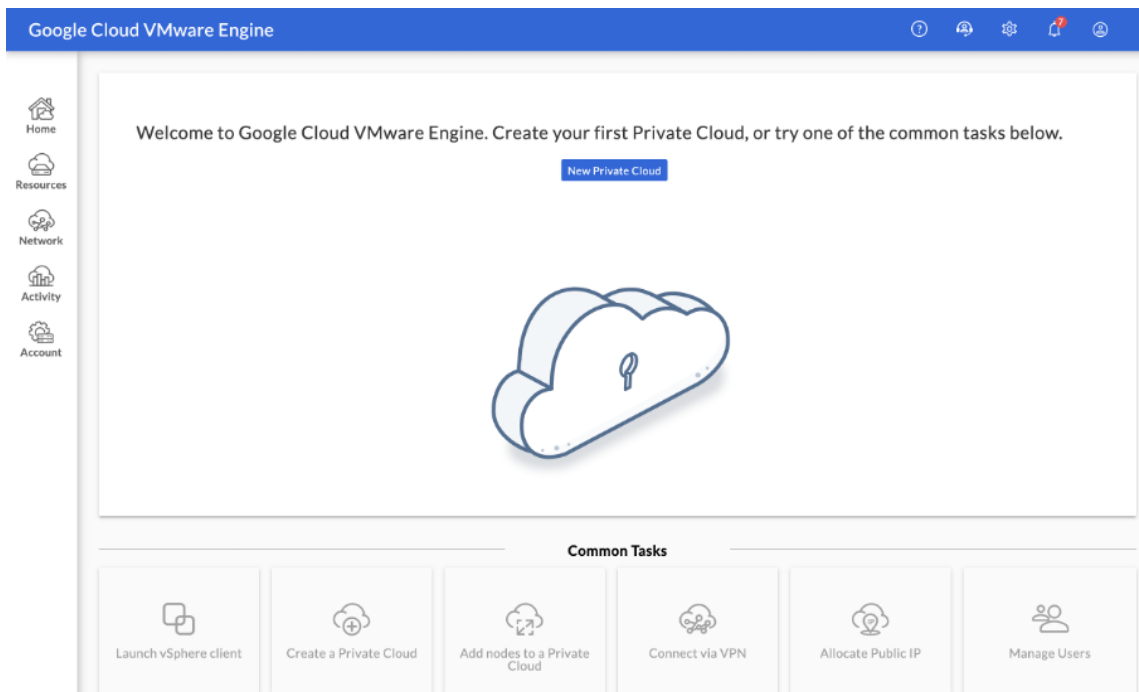

2. In the **New Private Cloud** page, enter the following details:


- Select a minimum of 3 ESXi hosts to create the default cluster of your private cloud.

- For the **vSphere/vSan subnet CIDR range** field, use /22 address space.
- For the **HCX Deployment Network CIDR range** field, use /26 address space.
- For the virtual network, make sure that the CIDR range doesn't overlap with any of your on-premises or other GCP subnets (virtual networks).


The screenshot shows the 'Create Private Cloud' configuration page in the Google Cloud VMware Engine console. The page is titled 'Create Private Cloud' and includes a navigation sidebar on the left with icons for Home, Resources, Network, Activity, and Account. The main content area contains the following configuration options:

- Private Cloud name ***: A text input field with the placeholder text 'Name your Private Cloud'.
- Location ***: A dropdown menu showing 'asia-northeast1 > v-zone-a > VE Placement Group 2'.
- Node type ***: A dropdown menu showing 've1-standard-72' with specifications: '2x2.6 GHz, 36 Cores (72 HT), 768 GB RAM, 19.2 TB Raw, 3.2 TB Cache (All-Flash)'.
- Node configuration**: Radio buttons for 'Multi Node' (selected) and 'Single Node'.
- Node count ***: A text input field with the value '3' and a range indicator '(3 to 8)'.
- Customize Cores**: A toggle switch that is currently turned on.
- vSphere/vSAN subnets CIDR range ***: A text input field with 'CIDR block prefix' and a dropdown menu showing '22'.
- HCX Deployment Network CIDR range**: A text input field with 'CIDR block prefix' and a dropdown menu showing '26'.

3. Click **Review and Create**.
4. Review the settings. If you need to change any settings, click **Previous**.

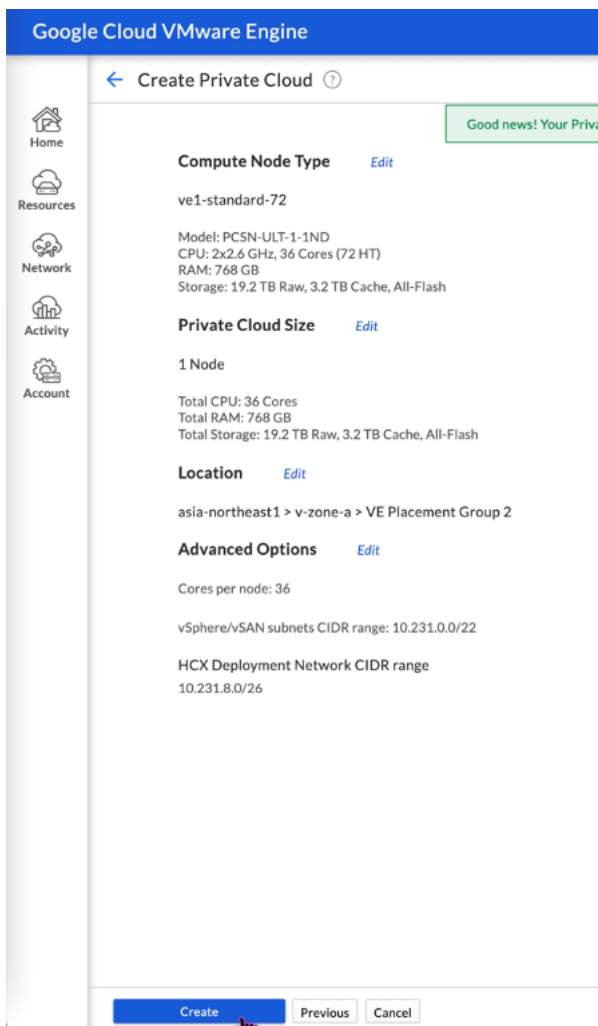


5. Click **Create**. Private Cloud provisioning process starts. It can take up to two hours for the Private Cloud to be provisioned.
6. Go to **Resources** to verify the private cloud that is created.

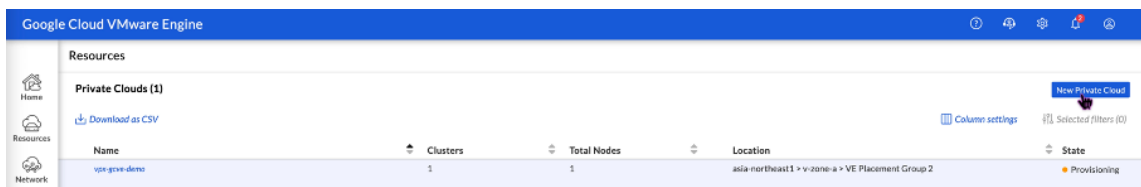


7. To access this resource, you must connect to GCVE using point-to-site VPN. For more information, see the following documentation:
 - [VPN gateways](#)
 - [Connecting using VPN](#)

Access your Private Cloud vCenter portal


1. Navigate to your Google Cloud VMware Engine private cloud. In the **SUMMARY** tab, under **vCenter Login Info**, click **View**.

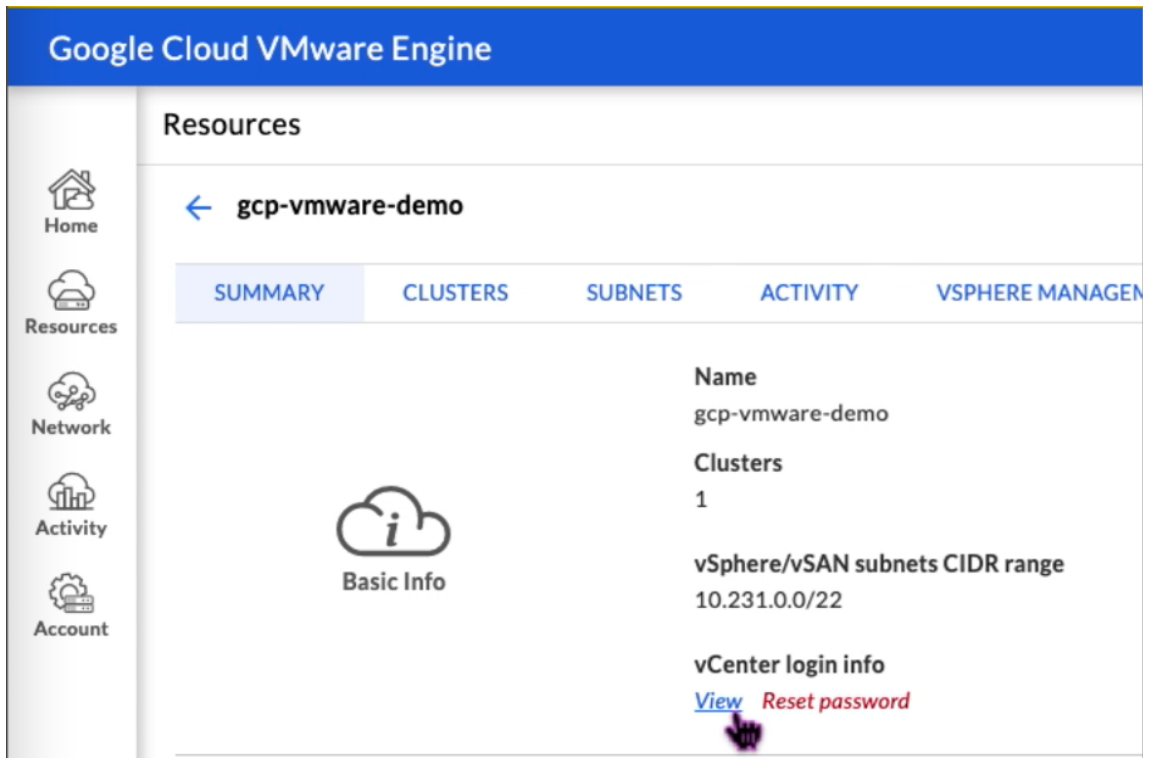


2. Make note of the vCenter credentials.

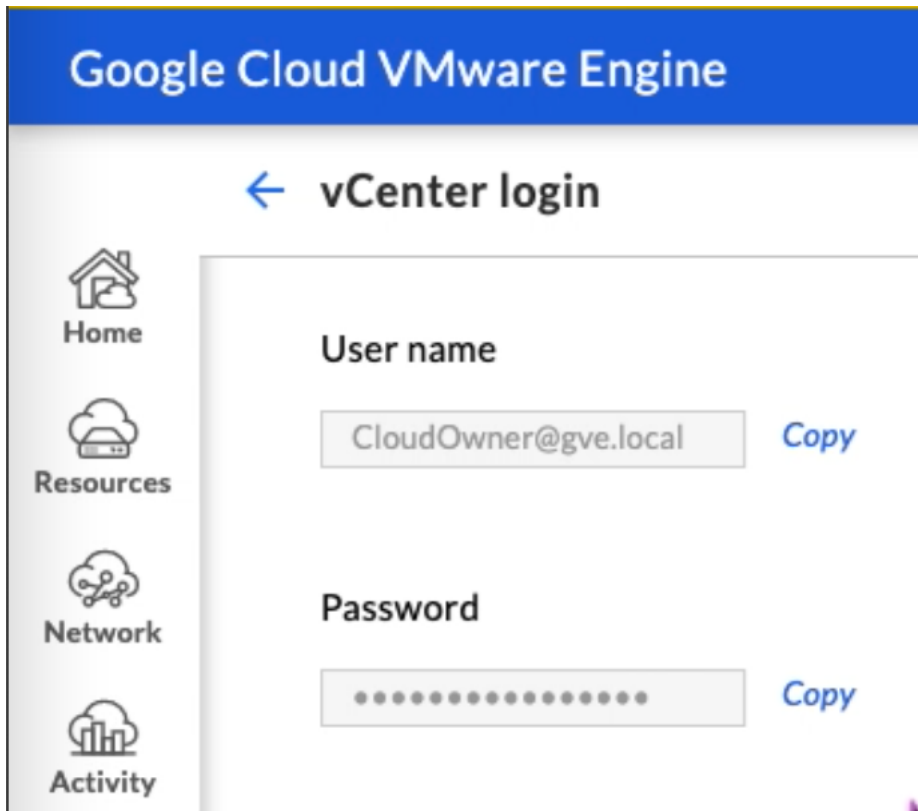


3. Launch the vSphere client by clicking **LAUNCH VSPHERE CLIENT** or navigate to **VSPHERE MANAGEMENT NETWORK** and click the **vCenter Server Appliance** FQDN.

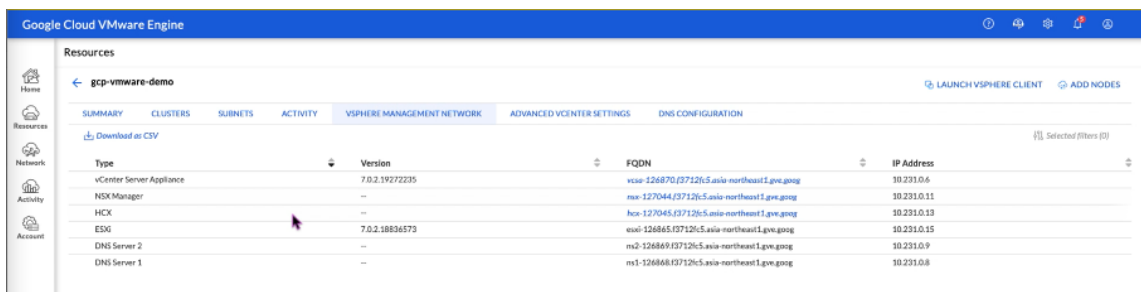

4. Log in to VMware vSphere using vCenter credentials noted in Step 2 of this procedure.

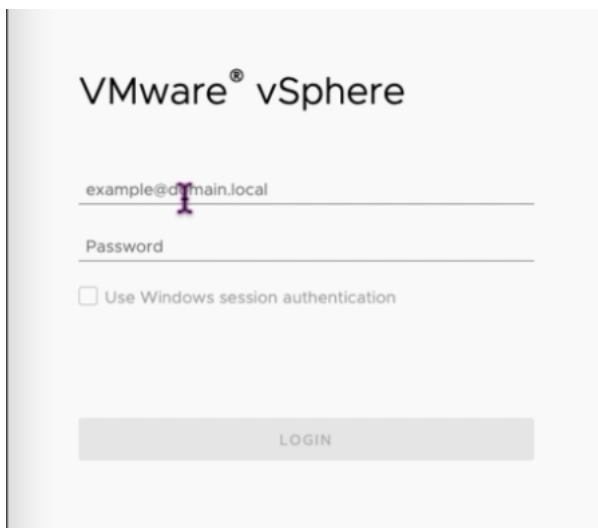


5. In vSphere client, you can verify the ESXi hosts that you created in GCVE portal.

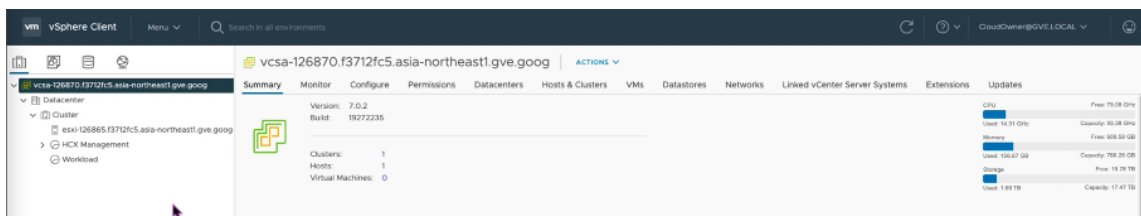


Create an NSX-T segment in the GCVE NSX-T portal

You can create and configure an NSX-T segment from the NSX Manager in the Google Cloud VMware Engine console. These segments are connected to the default Tier-1 gateway, and the workloads on these segments get East-West and North-South connectivity. Once you create the segment, it displays in vCenter.

1. In your GCVE private cloud, under **Summary -> NSX-T login info**, select **View**.

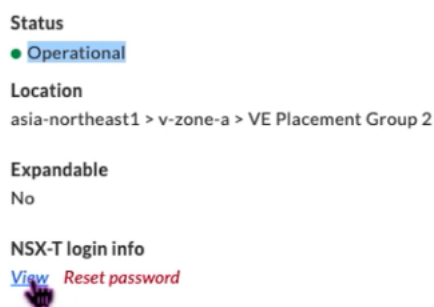


2. Make note of the NSX-T credentials.

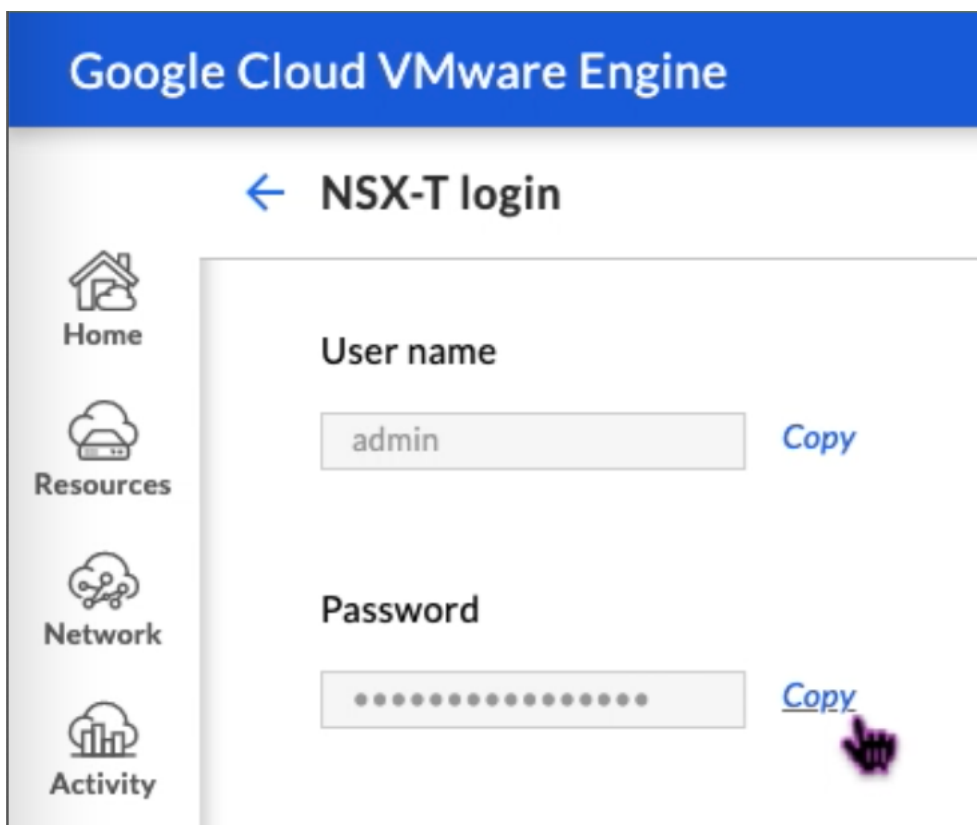


3. Launch the NSX Manager by navigating to **VSPHERE MANAGEMENT NETWORK** and click the **NSX Manager** FQDN.

Type	Version	FQDN	IP Address
vCenter Server Appliance	7.0.2.19272235	vcso-126870.f3712fc5.asia-northeast1.gve.goog	10.231.0.6
NSX Manager	--	nsx-127044.f3712fc5.asia-northeast1.gve.goog	10.231.0.11
HCX	--	hcx-127045.f3712fc5.asia-northeast1.gve.goog	10.231.0.13
ESXi	7.0.2.18836573	esxi-126865.f3712fc5.asia-northeast1.gve.goog	10.231.0.15
DNS Server 2	--	ns2-126869.f3712fc5.asia-northeast1.gve.goog	10.231.0.9
DNS Server 1	--	ns1-126868.f3712fc5.asia-northeast1.gve.goog	10.231.0.8


4. Log in to the NSX Manager using the credentials noted in Step 2 of this procedure.

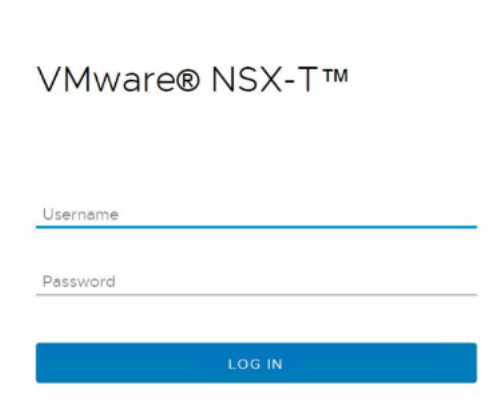


5. Set up DHCP service for the new segments or subnets.
6. Before you can create a subnet, set up a DHCP service.
7. In NSX-T, go to **Networking > DHCP**. The networking dashboard shows that the service creates one tier-0 and one tier-1 gateway.
8. To begin provisioning a DHCP server, click **Add DHCP Profile**.
9. In the DHCP name field, enter a name for the **Client-Management** profile.
10. Select **DHCP server** as the Profile type.
11. In the **Server IP address** column, provide a DHCP service IP address range.
12. Select your **Edge Cluster**.
13. Click **Save** to create the DHCP service.

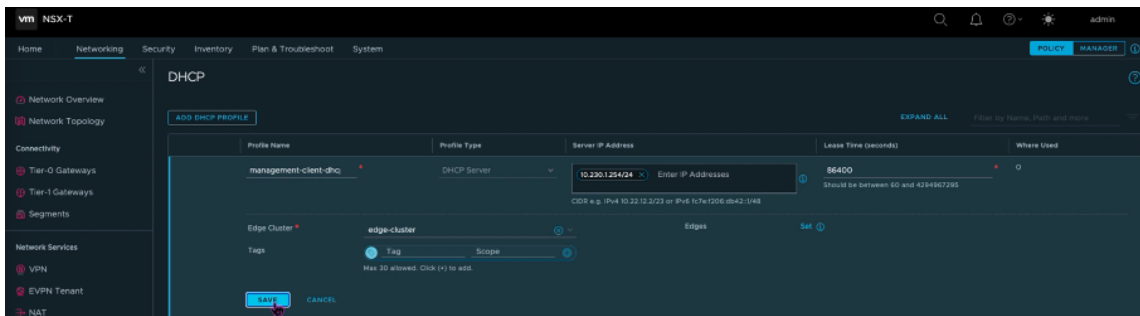

14. Repeat Steps 6 to 13 for Server DHCP range.

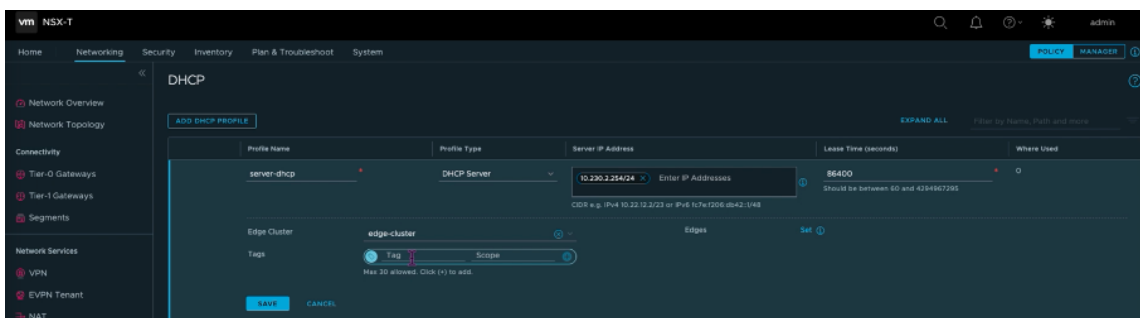


15. Create two separate segments: one for Client and Management interfaces, and another for Server interfaces.
16. In NSX-T, go to **Networking > Segments**.
17. Click **Add Segment**.

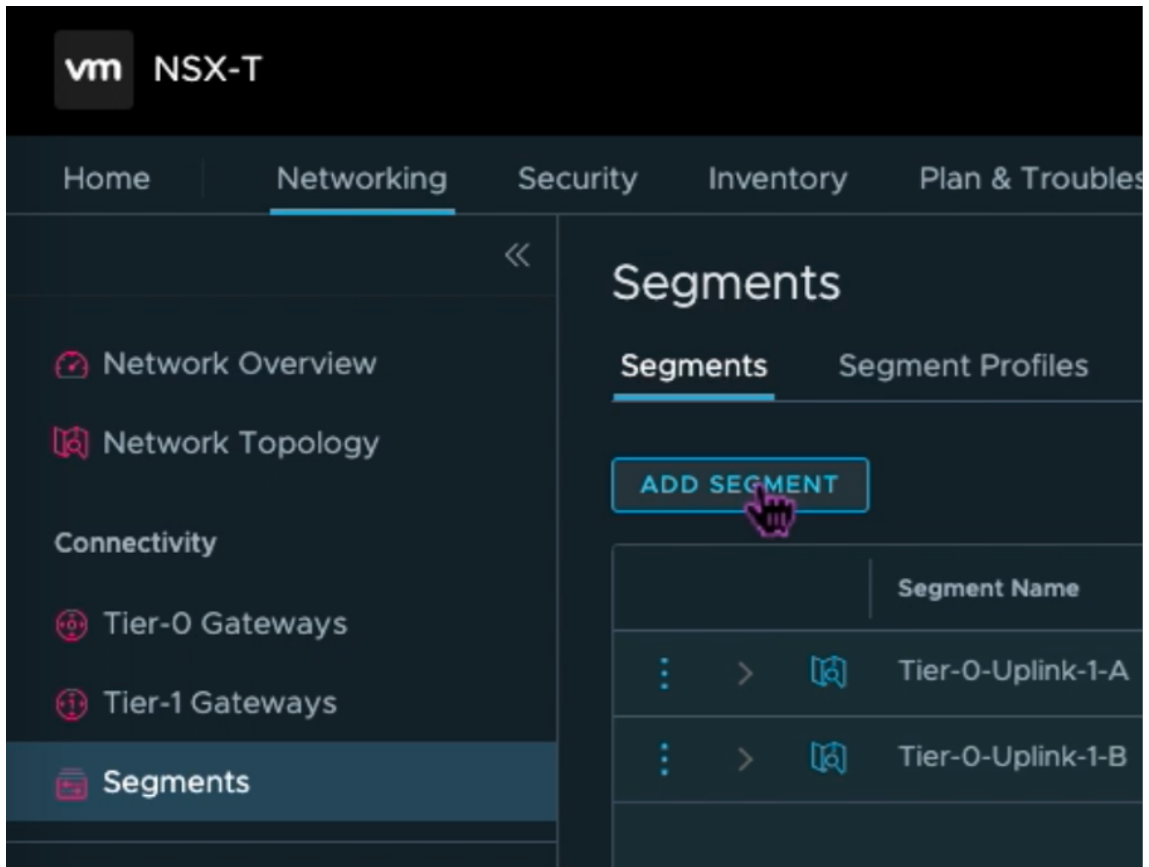


18. In the **Segment Name** field, enter a name for your **Client Management** segment.
19. In the **Connected Gateway** list, select **Tier1** to connect to the tier-1 gateway.

In the **Transport Zone** list, select ****TZ-OVERLAY Overlay****.

- 20.
21. In the **Subnets** column, enter the subnet range. Specify the subnet range with .1 as the last octet. For example, 10.12.2.1/24.

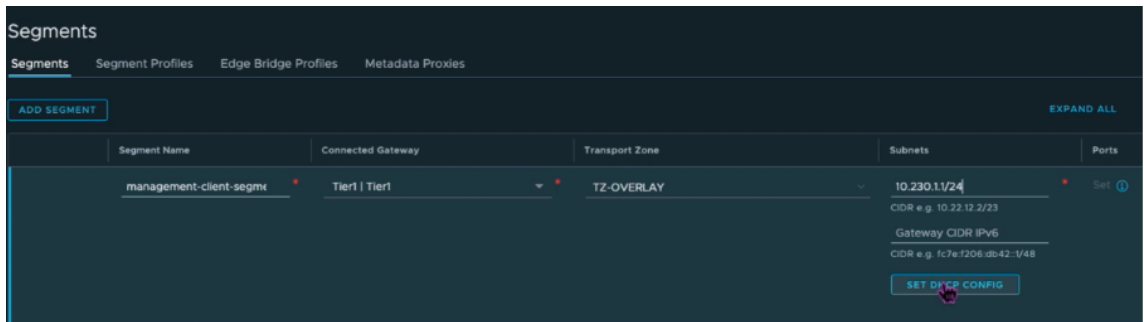



22. Click **Set DHCP Config**, and provide values for the **DHCP Ranges** field.

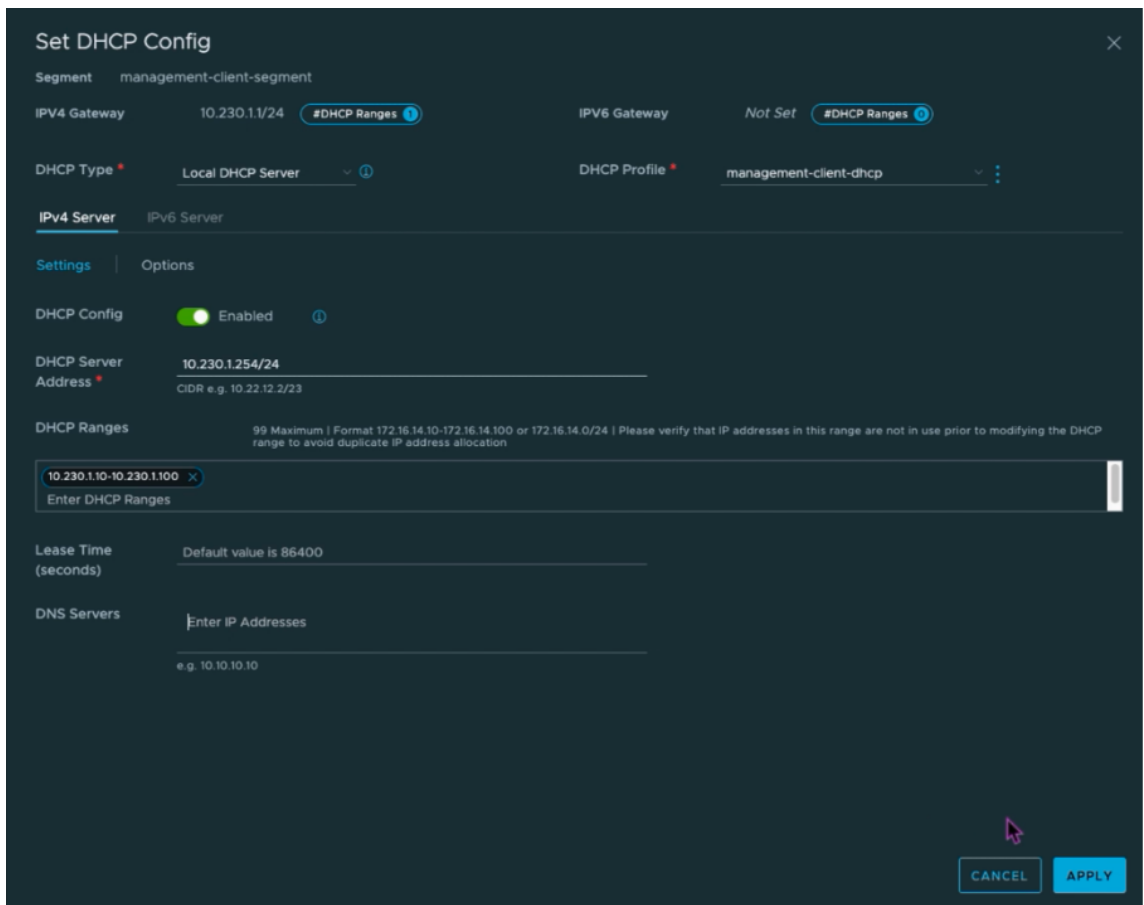

23. Click **Apply** to save your DHCP configuration.

24. Click **Save**.

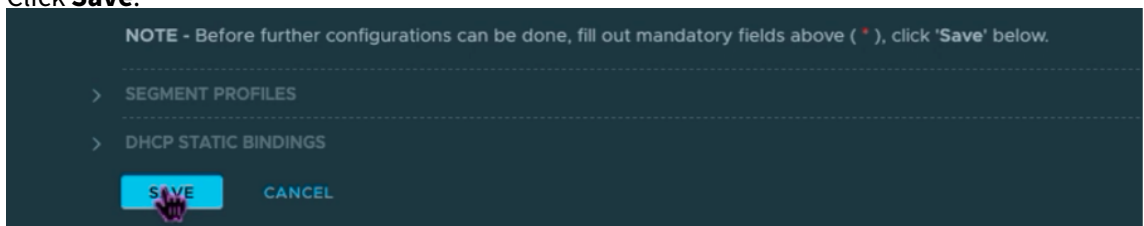

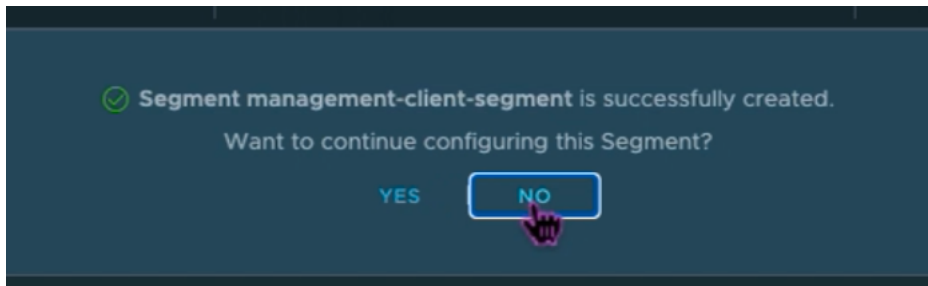

25. Repeat Steps 17 to 24 for Server segment as well.
26. You can now select these network segments in vCenter when creating a VM.

For more information, see [Creating your first subnet](#).

Install a NetScaler VPX instance on VMware cloud

After you have installed and configured Private Cloud on GCVE, you can use the vCenter to install virtual appliances on the VMware Engine. The number of virtual appliances that you can install depends on the amount of resource available on the Private Cloud.

To install NetScaler VPX instances on Private Cloud, perform these steps on a desktop connected to private cloud point-to-site VPN:

1. Download the NetScaler VPX instance setup files for ESXi host from the NetScaler downloads site.
2. Open VMware vCenter in a browser connected to your private cloud point-to-site VPN.
3. In the **User Name** and **Password** fields, type the administrator credentials, and then click **Login**.
4. On the **File** menu, click **Deploy OVF Template**.
5. In the **Deploy OVF Template** dialog box, in **Deploy from file** field, browse to the location at which you saved the NetScaler VPX instance setup files, select the .ovf file, and click **Next**.

Note:

By default, the NetScaler VPX instance uses E1000 network interfaces. To deploy ADC with the VMXNET3 interface, modify the OVF to use VMXNET3 interface instead of E1000. Availability of VMXNET3 interface is limited by GCP infrastructure and might not be available in Google Cloud VMware Engine.

6. Map the networks shown in the virtual appliance OVF template to the networks that you configured on the NSX-T Manager. Click **OK**.

Edit Settings | NSVPX-ESX-13.1-24.38_nc_64
✕


Virtual Hardware
VM Options

[ADD NEW DEVICE](#)


> CPU	2	▼	(i)
> Memory	2	▼	GB ▼
> Hard disk 1	20	▼	GB ▼
> SCSI controller 0	LSI Logic Parallel		
▼ Network adapter 1	management-client-segment ▼		
Status	<input checked="" type="checkbox"/> Connect At Power On		
Port ID	372795cc-b049-47b4-b9		
Adapter Type	VMXNET 3 ▼		
DirectPath I/O	<input checked="" type="checkbox"/> Enable		
Shares	Normal ▼	50	▼
Reservation	0	▼	Mbit/s ▼
Limit	Unlimited	▼	Mbit/s ▼
MAC Address	00:50:56:a2:2c:2f	Automatic ▼	
▼ New Network *	server-segment ▼		
Status	<input checked="" type="checkbox"/> Connect At Power On		
Adapter Type	VMXNET 3 ▼		
DirectPath I/O	<input checked="" type="checkbox"/> Enable		
Shares	Normal ▼	50	▼
Reservation	0	▼	Mbit/s ▼
Limit	Unlimited	▼	Mbit/s ▼
MAC Address	Automatic ▼		
> Video card	Specify custom settings ▼		
VMCI device			

CANCEL
OK

7. Click **Finish** to start installing a virtual appliance on VMware cloud.

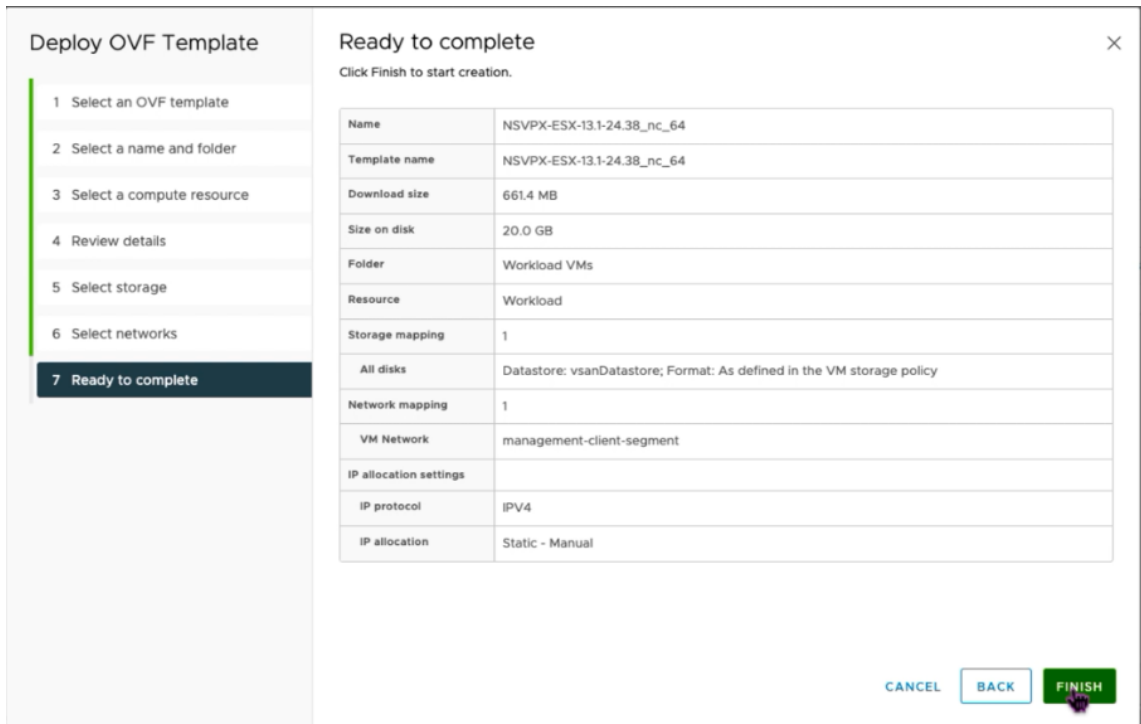

8. You are now ready to start the NetScaler VPX instance. In the navigation pane, select the NetScaler VPX instance that you have installed and, from the right-click menu, select **Power On**. Click the **Launch Web Console** tab to emulate a console port.

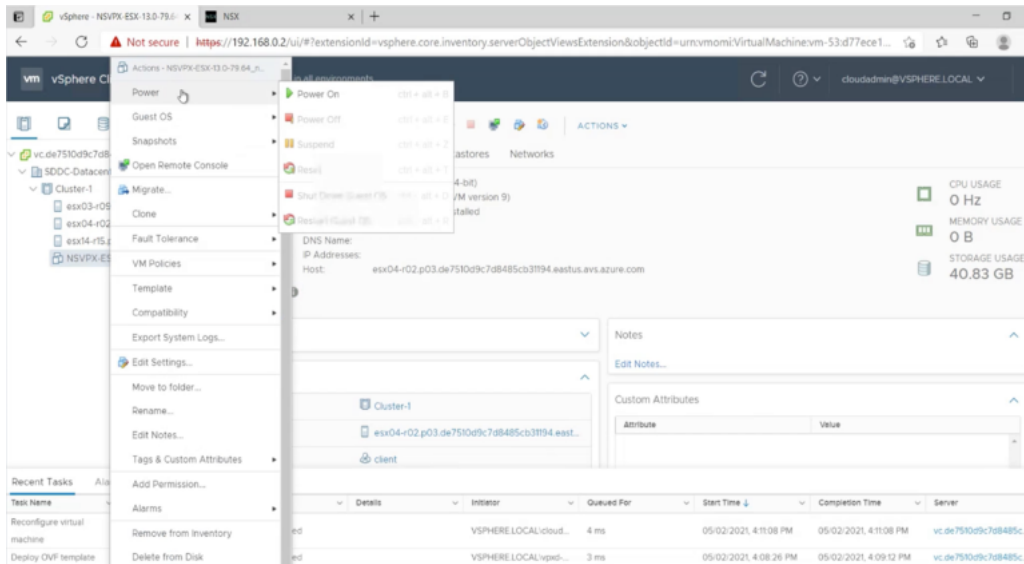

9. You are now connected to the NetScaler VM from the vSphere client.

```

NetScaler has started successfully
Start additional daemons: May 2 16:12:54 <local0.err> ns nsconfigd: _dispatch()
: Invalid password
May 2 16:12:54 <local0.err> ns nsconfigd: _dispatch(): Specified parameters are
not applicable for this type of SSL profile.
May 2 16:12:54 <local0.err> ns nsconfigd: _dispatch(): Invalid rule.
May 2 16:12:54 <local0.err> ns last message repeated 2 times
May 2 16:12:55 <local0.err> ns nsconfigd: _dispatch(): No such resource
May 2 16:12:55 <local0.err> ns nsconfigd: _dispatch(): No such policy exists
monit monit daemon at 1000 awakened
.
May 2 16:12:55 <local0.err> ns last message repeated 4 times
May 2 16:13:00 <user.crit> ns syshealthd: sysid 450010, IPMI device read failed
-2.
May 2 16:13:00 <local0.err> ns nscollect: ns_copyfile(): Not able to get info o
f file /var/log/db/default/nsdevmap.txt : No such file or directory
May 2 16:13:01 <local0.err> ns nsmond[1639]: nsmond daemon started
    
```

10. On first boot, set the management IP and gateway for the ADC instance.

```

This menu allows you to set and modify the initial IPv4 network addresses.
The current value is displayed in brackets ([]).
Selecting the listed number allows the address to be changed.

After the network changes are saved, you may either login as nsroot and
use the Citrix ADC command line interface, or use a web browser to
http://10.230.1.10 to complete or change the Citrix ADC configuration.
-----
    1. Citrix ADC's IPv4 address [10.230.1.10]
    2. Netmask [255.255.255.0]
    3. Gateway IPv4 address [10.230.1.1]
    4. Save and quit
Select item (1-4) [4]: 4
cat: /nsconfig/preboot_nsconfig: No such file or directory

NetScaler...
nsstart: Thu Jul 7 10:27:54 UTC 2022 : Creating default netscaler certificate fo
r NetScaler internal communication
nsstart: Thu Jul 7 10:27:54 UTC 2022 : Creating the RSA root key
nsstart: Thu Jul 7 10:27:54 UTC 2022 : Creating the CSR for the root certificate
nsstart: Thu Jul 7 10:27:54 UTC 2022 : Create the Self-Signed Certificate root c
ertificate
nsstart: Thu Jul 7 10:27:54 UTC 2022 : Creating the RSA key
nsstart: Thu Jul 7 10:27:54 UTC 2022 : Create the CSR for server cert
    
```


11. To access the NetScaler appliance by using the SSH keys, type the following command in the CLI:

```
1 ssh nsroot@<management IP address>
```

Example:

```
1 ssh nsroot@10.230.1.10
```

12. You can verify the ADC configuration by using the `show ns ip` command.

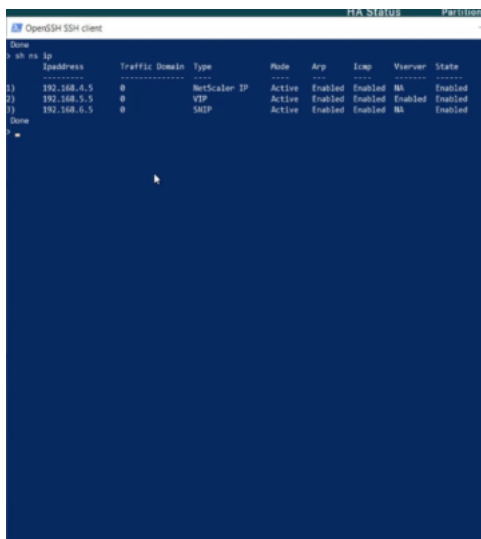


Assign a Public IP address to a NetScaler VPX instance on VMware cloud


After you have installed and configured NetScaler VPX instance on GCVE, you must assign a public IP address to the Client interface. Before assigning public IP addresses to your VMs, make sure that Public IP service is enabled for your Google Cloud region.

To enable Public IP service for a new region, follow these steps:

1. On GCVE console, navigate to **Network > REGIONAL SETTINGS > Add Region**.

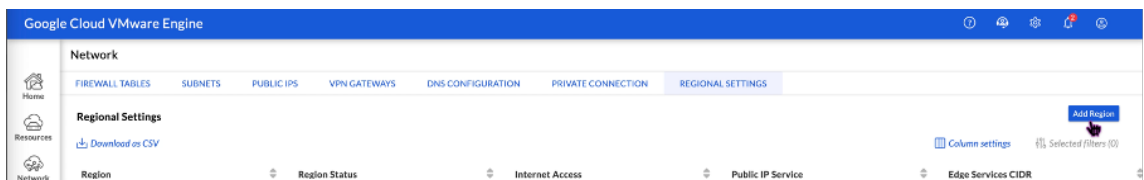


2. Select your region and enable **Internet Access** and **Public IP Service**.
3. Assign an Edge Services CIDR making sure that the CIDR range doesn't overlap with any of your on-premises or other GCP/GCVE subnets (virtual networks).

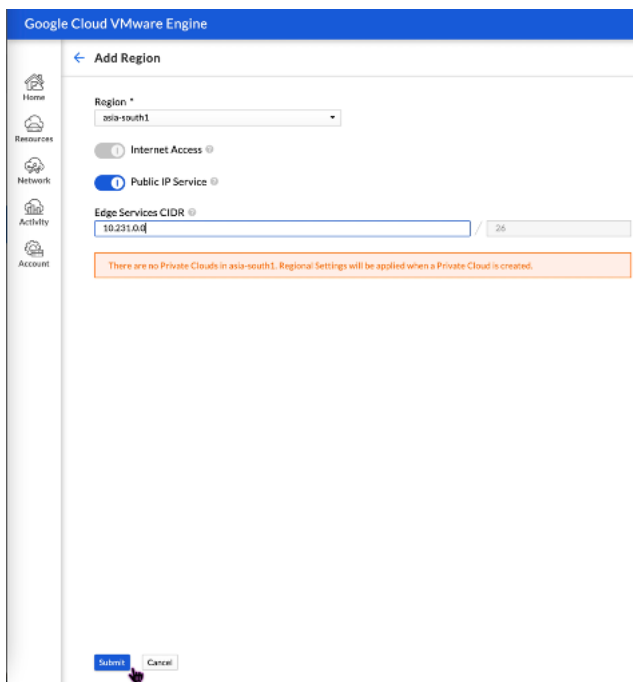

4. Public IP Service will be enabled for the selected region in a few minutes.

To assign public IP to the Client interface on the NetScaler VPX instance on GCVE, perform these steps on GCVE portal:

1. On GCVE console, navigate to **Network > PUBLIC IPS > Allocate**.

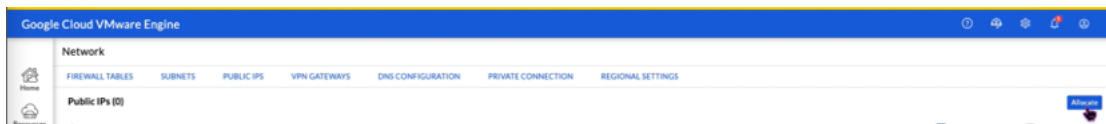

2. Enter a name for the public IP. Select your region, and select the private cloud where the IP will be used.
3. Provide the private IP for the interface to which you want the public IP to be mapped. This will be the **private IP** for your **Client** interface.
4. Click **Submit**.

Google Cloud VMware Engine

← Allocate Public IP ?

Name *

Location *

Private cloud *

Attached local address *

You need to open Firewall ports to enable traffic on this IP address through the Firewall Table feature.

5. Public IP is ready to use in a few minutes.
6. You must add Firewall rules to allow access to the public IP before you can use it. For more information, see [Firewall rules](#).

Add back-end GCP Autoscaling service

August 18, 2023


Efficient hosting of applications in a cloud requires easy and cost-effective management of resources, depending on the application demand. To meet the increasing demand, you have to scale network resources upward. When demand subsides, you need to scale down to avoid the unnecessary cost of underutilized resources. To minimize the cost of running the application, you have to constantly monitor traffic, memory and CPU use, and so on. However, monitoring traffic manually is cumbersome. For the application environment to scale up or down dynamically, you must automate the processes of monitoring traffic and of scaling resources up and down whenever necessary.

Integrated with the GCP Autoscaling service, the NetScaler VPX instance provides the following advantages:

- **Load balance and management:** Auto configures servers to scale up and scale down, depending on demand. The VPX instance auto detects managed instance groups in the back-end subnet and allows you to select the managed instance groups to balance the load. The virtual and subnet IP addresses are auto configured on the VPX instance.

- **High availability:** Detects managed instance groups that span multiple zones and load-balance servers.
- **Better network availability:** The VPX instance supports:
 - Back-end servers on same placement groups
 - Back-end servers on different zones


This diagram illustrates how the GCP Autoscaling service works in a NetScaler VPX instance acting as the load balancing virtual server.

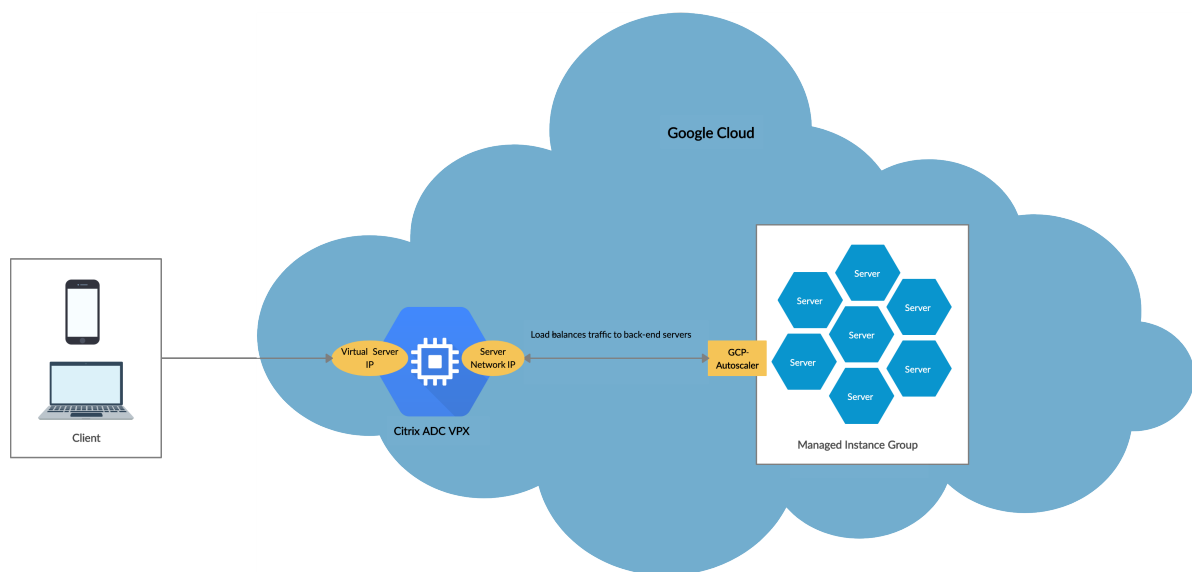

Before you begin

Before you start using Autoscaling with your NetScaler VPX instance, you must complete the following tasks.

- Create a NetScaler VPX instance on GCP according to your requirement.
 - For more information about how to create a NetScaler VPX instance, see [Deploy a NetScaler VPX instance on the Google Cloud Platform](#).
 - For more information about how to deploy VPX instances in HA mode, see [Deploy a VPX high-availability pair on the Google Cloud Platform](#).
- Enable **Cloud Resource Manager API** for your GCP project.
- Allow full access to all Cloud APIs while creating the instances.

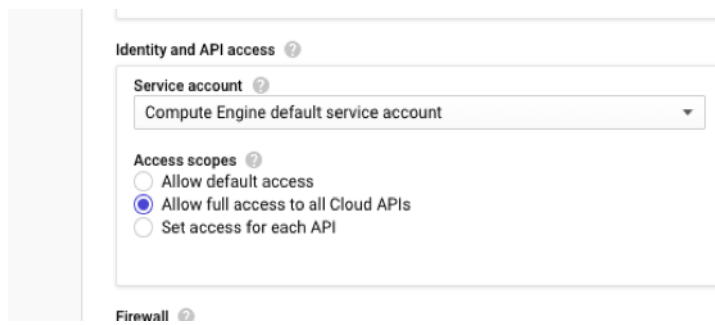

- Make sure that your GCP service account has the following IAM permissions:

```

1  REQUIRED_INSTANCE_IAM_PERMS = [
2  "compute.instances.get",
3  "compute.instanceGroupManagers.get",
4  "compute.instanceGroupManagers.list",
5  "compute.zones.list",
6  "logging.sinks.create",
7  "logging.sinks.delete",
8  "logging.sinks.get",
9  "logging.sinks.list",
10 "logging.sinks.update",
11 "pubsub.subscriptions.consume",
12 "pubsub.subscriptions.create",
13 "pubsub.subscriptions.delete",
14 "pubsub.subscriptions.get",
15 "pubsub.topics.attachSubscription",
16 "pubsub.topics.create",
17 "pubsub.topics.delete",
18 "pubsub.topics.get",
19 "pubsub.topics.getIamPolicy",
20 "pubsub.topics.setIamPolicy",
21 ]

```

- To set up Autoscaling, ensure the following are configured:
 - Instance template
 - Managed Instance group
 - Autoscaling policy

Add the GCP Autoscaling service to a NetScaler VPX instance

You can add the Autoscaling service to a VPX instance with a single click by using the GUI. Complete these steps to add the Autoscaling service to the VPX instance:

1. Log on to the VPX instance by using your credentials for `nsroot`.
2. When you log on to the NetScaler VPX instance for the first time, you see the default Cloud Profile page. Select the GCP managed instance group from the drop-down menu and click **Create** to create a cloud profile.

← Create Cloud Profile

Name

Virtual Server IP Address*

Load Balancing Server Protocol

Load Balancing Server Port

Auto Scale Group*

Auto Scale Group Protocol

Auto Scale Group Port


Select this option to drain the connections gracefully. Else the connections will be dropped in the event of scale down.
 Graceful

- The **Virtual Server IP Address** field is auto-populated from all the IP addresses associated with the instances.
- The **Autoscale Group** is prepopulated from the managed instance group configured on your GCP account.
- When selecting the **Autoscale Group Protocol** and **Autoscale Group Port**, ensure that your servers listen on the configured protocol and ports. Bind the correct monitor in the service group. By default, the TCP monitor is used.
- Clear the **Graceful** checkbox because it is not supported.

Note:

For SSL Protocol type Autoscaling, after you create the Cloud Profile, the load balance virtual server or service group is down because of a missing certificate. You can bind the certificate to the virtual server or service group manually.

3. After the first time logon if you want to create Cloud Profile, on the GUI go to **System > Google Cloud Platform > Cloud Profile** and click **Add**.

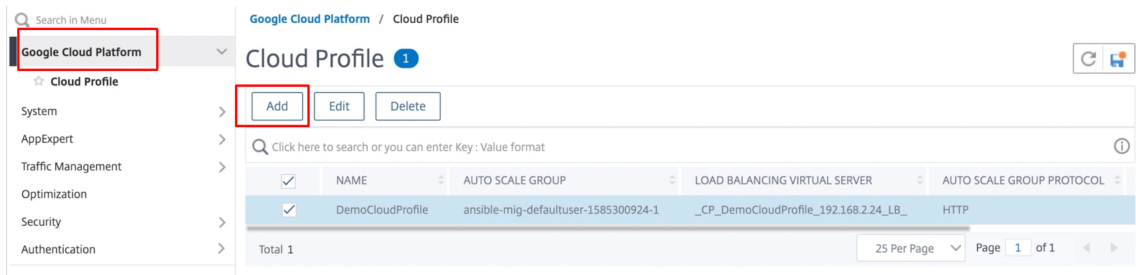

The **Create Cloud Profile** configuration page appears.

← Create Cloud Profile

Name

DemoCloudProfile

Virtual Server IP Address*

192.168.2.24

Load Balancing Server Protocol

HTTP

Load Balancing Server Port

80

Auto Scale Group*

ansible-mig-defaultuser-1585300924-:

Auto Scale Group Protocol

HTTP

Auto Scale Group Port

80


Select this option to drain the connections gracefully. Else the connections will be dropped in the event of scale down.

Graceful

Cloud Profile creates a NetScaler load-balancing virtual server and a service group with members as the servers of the managed instance group. Your back-end servers must be reachable through the SNIP configured on the VPX instance.

Note:

From NetScaler release 13.1-42.x onwards, you can create different cloud profiles for different services (using different ports) with the same managed instance group in GCP. Thus, the NetScaler VPX instance supports multiple services with the same Autoscaling group in public cloud.

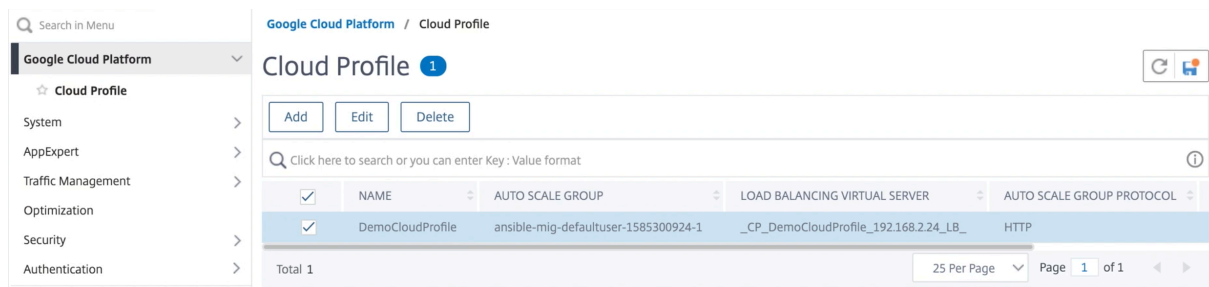

VIP scaling support for NetScaler VPX instance on GCP

May 2, 2023

A NetScaler appliance resides between the clients and the servers, so that client requests and server responses pass through it. In a typical installation, virtual servers configured on the appliance provide connection points that clients use to access the applications behind the appliance. The number of public virtual IP (VIP) addresses needed for a deployment varies on a case-by-case basis.

The GCP architecture restricts each interface on the instance to be connected to a different VPC. A VPC on GCP is a collection of subnets, and each subnet can span across zones of a region. In addition, GCP imposes the following limitation:

- There is a 1:1 mapping of number of public IP addresses to number of NICs. Only one public IP address can be assigned to a NIC.
- A maximum of only 8 NICs can be attached on a higher capacity instance type.

For example, an n1-standard-2 instance can have only 2 NICs, and the Public VIPs that can be added is limited to 2. For more information, see [VPC resource quotas](#).

To achieve higher scales of public virtual IP addresses on a NetScaler VPX instance, you can configure the VIP addresses as part of the metadata of the instance. The NetScaler VPX instance internally uses forwarding rules provided by the GCP to achieve VIP scaling. The NetScaler VPX instance also provides high availability to the VIPs configured.

After you configure VIP addresses as part of the metadata, you can configure an LB virtual server using the same IP that is used to create the forwarding rules. Thus, we can use forwarding rules to mitigate the limitations we have w.r.t scale in using public VIP addresses on an NetScaler VPX instance on GCP.

For more information on forwarding rules, see [Forwarding rules overview](#).

For more information on HA, see [High Availability](#).

Points to note

- Google charges some additional cost for each virtual IP forwarding rule. The actual cost depends on the number of entries created. The associated cost can be found from the Google pricing documents.
- Forwarding rules are applicable only for public VIPs. You can use alias IP addresses when the deployment needs private IP addresses as VIPs.
- You can create forwarding rules only for the protocols, which need the LB virtual server. VIPs can be created, updated, or deleted on the fly. You can also add a new load balancing virtual server with the same VIP address but with a different protocol.

Before you start

- NetScaler VPX instance must be deployed on GCP.
- External IP address must be reserved. For more information, see [Reserving a static external IP address](#).
- Ensure that your GCP service account has the following IAM permissions:

```
1  REQUIRED_IAM_PERMS = [  
2  "compute.addresses.list",  
3  "compute.addresses.get",  
4  "compute.addresses.use",  
5  "compute.forwardingRules.create",  
6  "compute.forwardingRules.delete",  
7  "compute.forwardingRules.get",  
8  "compute.forwardingRules.list",  
9  "compute.instances.use",  
10 "compute.subnetworks.use",  
11 "compute.targetInstances.create"  
12 "compute.targetInstances.get"  
13 "compute.targetInstances.use",  
14 ]
```

- Enable **Cloud Resource Manager API** for your GCP project.
- If you use VIP scaling on a standalone VPX instance, ensure that your GCP service account has the following IAM permissions:

```
1  REQUIRED_IAM_PERMS = [  
2  "compute.addresses.list",  
3  "compute.addresses.get",  
4  "compute.addresses.use",  
5  "compute.forwardingRules.create",  
6  "compute.forwardingRules.delete",  
7  "compute.forwardingRules.get",  
8  "compute.forwardingRules.list",
```

```
9  "compute.instances.use",
10 "compute.subnetworks.use",
11 "compute.targetInstances.create",
12 "compute.targetInstances.list",
13 "compute.targetInstances.use",
14 ]
```

- If you use VIP scaling in a high availability mode, ensure that your GCP service account has the following IAM permissions:

```
1  REQUIRED_IAM_PERMS = [
2  "compute.addresses.get",
3  "compute.addresses.list",
4  "compute.addresses.use",
5  "compute.forwardingRules.create",
6  "compute.forwardingRules.delete",
7  "compute.forwardingRules.get",
8  "compute.forwardingRules.list",
9  "compute.forwardingRules.setTarget",
10 "compute.instances.use",
11 "compute.instances.get",
12 "compute.instances.list",
13 "compute.instances.setMetadata",
14 "compute.subnetworks.use",
15 "compute.targetInstances.create",
16 "compute.targetInstances.list",
17 "compute.targetInstances.use",
18 "compute.zones.list",
19 ]
```

Note:

In a high availability mode, if your service account does not have owner or editor roles, you must add the **Service Account User role** to your service account.

Configure external IP addresses for VIP scaling on NetScaler VPX instance

1. In the Google Cloud Console, navigate to the **VM Instances** page.
2. Create a new VM instance or use an existing instance.
3. Click the instance name. On the **VM instance details** page, click **Edit**.
4. Update the **Custom metadata** by entering the following:
 - Key = vips
 - Value = Provide a value in the following JSON format:


```
{
  "Name of external reserved IP": [list of protocols],
```

```
}

```

GCP supports the following protocols:

- AH
- ESP
- ICMP
- SCT
- TCP
- UDP

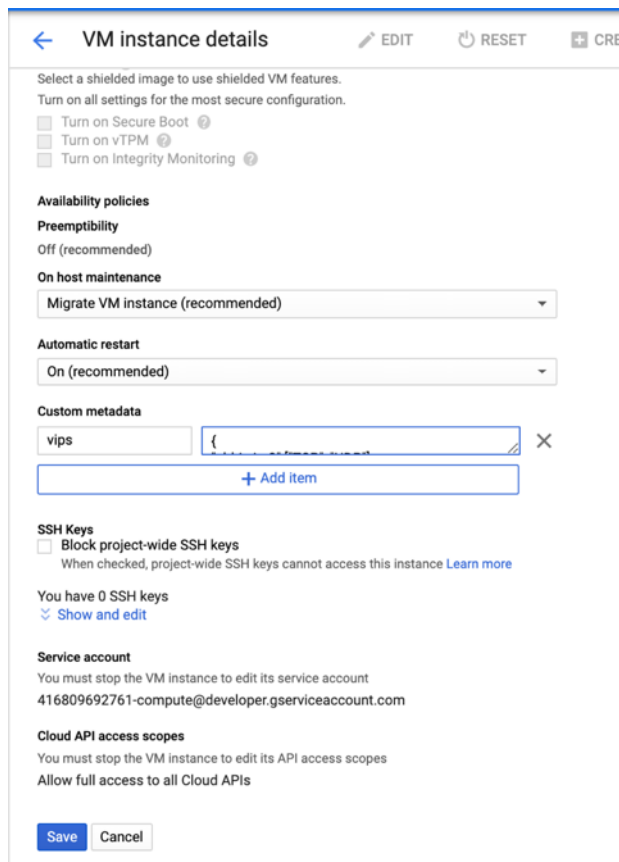

For more information, see [Custom metadata](#).

Example for Custom metadata:

```
{
  "external-ip1-name":["TCP", "UDP"],
  "external-ip2-name":["ICMP", "AH"]
}
```

In this example, the NetScaler VPX instance internally creates one forwarding rule for each IP, protocol pair. The metadata entries are mapped to the forwarding rules. This example helps you understand how many forwarding rules are created for a metadata entry.

Four forwarding rules are created as follows:

- a) external-ip1-name and TCP
- b) external-ip1-name and UDP
- c) external-ip2-name and ICMP
- d) external-ip2-name and AH

Note:

In HA mode, you must add custom metadata only on the primary instance. On failover, the custom metadata is synchronized to the new primary.

5. Click **Save**.

Setting up a load balancing virtual server with external IP address on a NetScaler VPX instance

Step 1. Add a load balancing virtual server.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers > Add**.

<input type="checkbox"/>	NAME	STATE	EFFECTIVE STATE	IP A
<input type="checkbox"/>	gcp1bdnsvserver	● UP	● UP	0.0.0
<input type="checkbox"/>	lbv2	● UP	● UP	10.3
<input type="checkbox"/>	v1	● DOWN	● DOWN	10.2
<input checked="" type="checkbox"/>	Demo-vServer	● DOWN	● DOWN	34.9

Total 4

2. Add the required values for Name, Protocol, IP Address Type (IP Address), IP Address (External IP address of the forwarding rule that is added as VIP on ADC) and Port, and click **OK**.

Load Balancing Virtual Server

Basic Settings

Create a virtual server by specifying a name, an IP address, a port, and a protocol type. If an app address is a public IP address. If the application is accessible only from the local area network (LAN) (ICANN non-routable) IP address.
You can configure multiple virtual servers to receive client requests, thereby increasing the avail

Name*

 ⓘ

Protocol*

 ▼

IP Address Type*

 ▼

IP Address*

 ⓘ

Port*

▶ More

Step 2. Add a service or service group.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Services > Add**.
2. Add the required values for Service Name, IP Address, Protocol and Port, and click **OK**.

← Load Balancing Service

Basic Settings

Service Name*
 ⓘ

New Server Existing Server

IP Address*
 ⓘ

Protocol*
 ▾

Port*

▶ More

Step 3. Bind the service or service group to the load balancing virtual server.

1. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers**.
2. Select the load balancing virtual server configured in **Step 1**, and click **Edit**.
3. In the **Service and Service Groups** page, click **No Load Balancing Virtual Server Service Binding**.

← Load Balancing Virtual Server

Load Balancing Virtual Server | [Export as a Template](#)


Basic Settings

Name	Demo-vServer	Listen Priority	-
Protocol	HTTP	Listen Policy Expression	NONE
State	● DOWN	Redirection Mode	IP
IP Address	34.93.61.42	Range	1
Port	80	IPSet	-
Traffic Domain	0	RHI State	PASSIVE
		AppFlow Logging	ENABLED
		Retain Connections on Cluster	NO
		TCP Probe Port	-

Services and Service Groups

- No Load Balancing Virtual Server Service Binding
>
- No Load Balancing Virtual Server ServiceGroup Binding
>

4. Select the service configured in the **Step 3**, and click **Bind**.

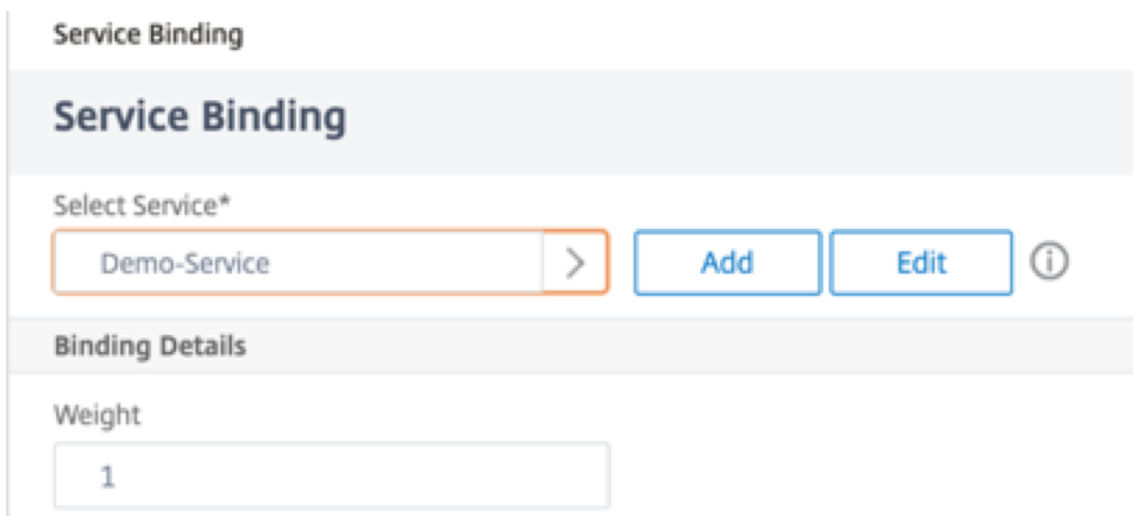

5. Save the configuration.


Troubleshoot a VPX instance on GCP

May 2, 2023

Google Cloud Platform (GCP) provides console access to a NetScaler VPX instance. You can debug only if the network is connected. To view an instance's System Log, access the console and check **System Log files**.

NetScaler supports fee based NetScaler VPX instances (utility license with hourly fee) on GCP. To file a support case, find your GCP account number and support PIN code, and call NetScaler support. You are asked to provide your name and email address. To find the support PIN, log on to the VPX GUI and navigate to the **System** page.

Here is an example of a system page showing the support PIN.

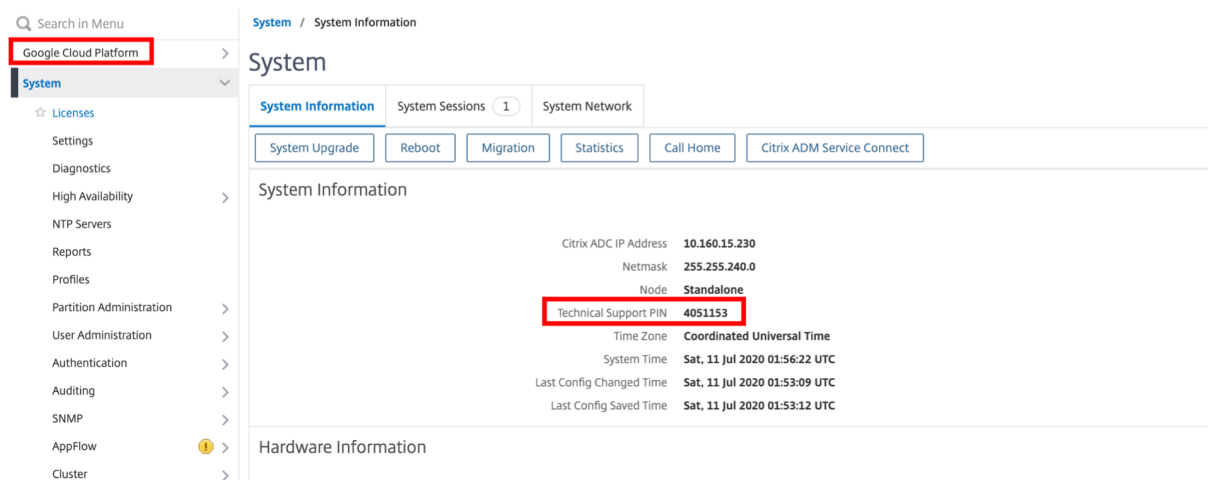

Jumbo frames on NetScaler VPX instances

May 2, 2023

NetScaler VPX appliances support receiving and transmitting jumbo frames containing up to 9216 bytes of IP data. Jumbo frames can transfer large files more efficiently than it is possible with the standard IP MTU size of 1500 bytes.

A NetScaler appliance can use jumbo frames in the following deployment scenarios:

- Jumbo to Jumbo. The appliance receives data as jumbo frames and sends it as jumbo frames.
- Non-Jumbo to Jumbo. The appliance receives data as regular frames and sends it as jumbo frames.
- Jumbo to Non-Jumbo. The appliance receives data as jumbo frames and sends it as regular frames.

For more information, see [Configuring Jumbo Frames Support on a NetScaler Appliance](#).

Jumbo frames support is available on NetScaler VPX appliances running on the following virtualization platforms:

- VMware ESX
- Linux-KVM Platform
- Citrix XenServer
- Amazon Web Services (AWS)

Jumbo frames on VPX appliances work similar to jumbo frames on MPX appliances. For more information on Jumbo Frames and its use cases, see [Configuring Jumbo Frames on MPX appliances](#). The use cases of jumbo frames on MPX appliances also apply to VPX appliances.

Configure jumbo frames for a VPX instance running on VMware ESX

Perform the following tasks to configure jumbo frames on a NetScaler VPX appliance running on the VMware ESX server:

1. Set the MTU of the interface or channel of the VPX appliance to a value in the range 1501–9000. Use the CLI or GUI to set the MTU size. The NetScaler VPX appliances running on VMware ESX support receiving and transmitting jumbo frames containing up to only 9000 bytes of IP data.
2. Set the same MTU size on the corresponding physical interfaces of the VMware ESX server by using its management applications. For more information about setting the MTU size on the physical interfaces of VMware ESX, see <http://vmware.com/>.

Configure jumbo frames for a VPX instance running on Linux-KVM server

Perform the following tasks to configure jumbo frames on a NetScaler VPX appliance running on a Linux-KVM Server:

1. Set the MTU of the interface or channel of the VPX appliance to a value in the range 1501–9216. Use the NetScaler VPX CLI or GUI to set the MTU size.
2. Set the same MTU size on the corresponding physical interfaces of a Linux-KVM Server by using its management applications. For more information about setting the MTU size on the physical interfaces of Linux-KVM, see <http://www.linux-kvm.org/>.

Configure jumbo frames for a VPX instance running on Citrix XenServer

Perform the following tasks to configure jumbo frames on a NetScaler VPX appliance running on Citrix XenServer:

1. Connect to the XenServer using XenCenter.
2. Shut down all the VPX instances that use the Networks for which the MTU must be changed.
3. On the **Networking** tab, select the network - network 0/1/2.
4. Select **Properties** and edit MTU.

After configuring the jumbo frames on the XenServer, you can configure the jumbo frames on the ADC appliance. For more information, see [Configuring Jumbo Frames Support on a NetScaler Appliance](#).

Configure jumbo frames for a VPX instance running on AWS


Host-level configuration is not required for VPX on Azure. To configure Jumbo Frames on VPX, follow the steps given in [Configuring Jumbo Frames Support on a NetScaler Appliance](#).

Automate deployment and configurations of NetScaler

December 22, 2023

NetScaler provides multiple tools to automate your ADC deployments and configurations. This document provides a brief summary of various automation tools and references to various automation resources that you can use to manage ADC configurations.

The following illustration provides an overview of NetScaler automation in a hybrid multi cloud (HMC) environment.

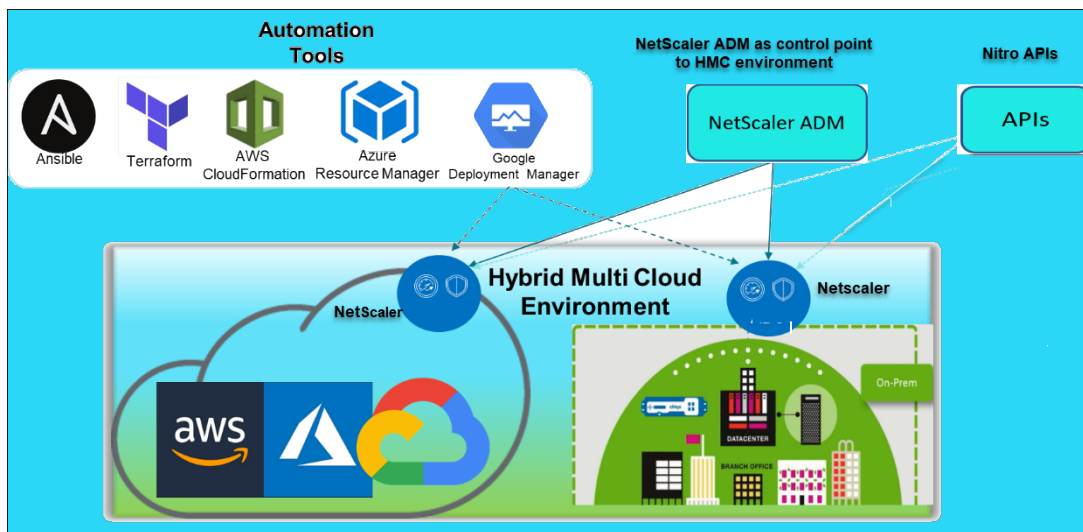

Automate NetScaler using NetScaler Console

NetScaler Console acts as an automation control point to your distributed ADC infrastructure. The NetScaler Console provides a comprehensive set of automation capabilities from provisioning ADC appliances to upgrading it. The following are the key automation features of ADM:

- [Provisioning NetScaler VPX instances on AWS](#)
- [Provisioning NetScaler VPX instances on Azure](#)
- [StyleBooks](#)
- [Configuration jobs](#)
- [Configuration audit](#)
- [ADC upgrades](#)
- [SSL certificate management](#)
- [Integrations - GitHub, ServiceNow, Event notifications integrations](#)

NetScaler Console blogs and videos on automation

- [Application migrations using StyleBooks](#)
- [Integrate ADC configurations with CI/CD using ADM StyleBooks](#)
- [Simplifying public cloud NetScaler deployments through ADM](#)
- [10 ways NetScaler Console service supports easier NetScaler upgrades](#)

NetScaler Console also provides APIs for its various capabilities that integrate NetScaler Console and NetScaler as part of the overall IT automation. For more information, see [NetScaler Console Service APIs](#).

Automate NetScaler using Terraform

Terraform is a tool that takes infrastructure as code approach to provision and manage cloud, infrastructure, or service. NetScaler terraform resources are available in GitHub for use. Refer GitHub for detailed documentation and usage.

- [NetScaler Terraform modules to configure ADC for various use cases such as Load Balancing and GSLB](#)
- [Terraform cloud scripts to deploy ADC in AWS](#)
- [Terraform cloud scripts to deploy ADC in Azure](#)
- [Terraform cloud scripts to deploy ADC in GCP](#)
- [Blue-green deployment using NetScaler VPX and Azure pipelines](#)

Blogs and Videos on Terraform for ADC automation

- [Automate your NetScaler deployments with Terraform](#)
- [Provision and configure ADC in HA setup in AWS using Terraform](#)

Automate NetScaler using Consul-Terraform-Sync

NetScaler Consul-Terraform-Sync (CTS) module empowers application teams to automatically add or remove new instances of services to NetScaler. There is no need to raise manual tickets to IT admins or networking teams to make the necessary ADC configurations changes.

- [NetScaler Consul-Terraform-Sync Module for Network Infrastructure Automation](#)
- Citrix-HashiCorp joint webinar: [Dynamic Networking with Consul-Terraform-Sync for Terraform Enterprise and NetScaler](#)

Automate NetScaler using Ansible

Ansible is an open-source software provisioning, configuration management, and application-deployment tool enabling infrastructure as code. NetScaler Ansible modules and sample playbooks can be found in GitHub for use. Refer GitHub for detailed documentation and usage.

- [Ansible modules to configure ADC](#)
- [ADC Ansible modules documentation/reference guide](#)
- [Ansible modules for ADM](#)

Citrix is a certified Ansible Automation Partner. Users having Red Hat Ansible Automation Platform subscription can access NetScaler Collections from [Red Hat Automation Hub](#).

Terraform and Ansible automation blogs

- [Citrix named HashiCorp Integration Partner of the Year](#)
- [Citrix is now a Certified Red Hat Ansible Automation Platform Partner](#)
- [Terraform and Ansible Automation for app delivery and security](#)

Public cloud templates for ADC deployments

Public cloud templates simplify provisioning of your deployments in public clouds. Different NetScaler templates are available for various environments. For usage details, refer to respective GitHub repositories.

AWS CFTs:

- [CFTs to provision NetScaler VPX on AWS](#)

Azure Resource Manager (ARM) Templates:

- [ARM templates to provision NetScaler VPX on Azure](#)

Google Cloud Deployment Manager (GDM) Templates:

- [GDM templates to provision NetScaler VPX on Google](#)

Videos on Templates

- [Deploy NetScaler HA in AWS using CloudFormation Template](#)
- [Deploy NetScaler HA across Availability Zones using AWS QuickStart](#)
- [NetScaler HA deployment in GCP using GDM templates](#)

AWS Quick Starts

- [NetScaler Web App Firewall Quick Start](#)
- [AWS Quick Start for NetScaler VPX for Web Applications on AWS](#)

NITRO APIs

The NetScaler NITRO protocol allows you to programmatically configure and monitor the NetScaler appliance by using Representational State Transfer (REST) interfaces. Therefore, NITRO applications can be developed in any programming language. For applications that must be developed in Java or .NET or Python, NITRO APIs are exposed through relevant libraries that are packaged as separate Software Development Kits (SDKs).

- [NITRO API documentation](#)
- [Sample ADC use case configuration using NITRO API](#)

FAQs

September 3, 2024

The following section helps you to categorize the FAQs based on Citrix Application Delivery Controller (ADC) VPX.

- Feature and functionality
- Encryption
- Pricing and packaging
- NetScaler VPX Express and 90 day free trial
- Hypervisor
- Capacity planning or sizing
- System requirements
- Other technical FAQs

Feature and functionality

What is NetScaler VPX?

NetScaler VPX is a virtual ADC appliance that can be hosted on a Hypervisor installed on industry standard servers.

Does NetScaler VPX include all the web application optimization functionality as ADC appliances?

Yes. NetScaler VPX includes all load balancing, traffic management, application acceleration, application security (including NetScaler Gateway and Citrix Application Firewall), and offload functionality. For a complete overview of the NetScaler feature and functionality, see [Application delivery your way](#).

Are there any limitations with Citrix Application Firewall when using it on NetScaler VPX?

Citrix Application Firewall on NetScaler VPX provides the same security protections as it does on NetScaler appliances. The performance or throughput of Citrix Application Firewall varies by platform.

Are there any differences between NetScaler Gateway on NetScaler VPX and NetScaler Gateway on NetScaler appliances?

Functionally, they are the same. NetScaler Gateway on NetScaler VPX supports all the NetScaler Gateway features available in NetScaler software release 14.1. However, because NetScaler appliances provide dedicated SSL acceleration hardware, it offers greater SSL VPN scalability than a NetScaler VPX instance.

Other than the obvious difference that NetScaler VPX can run on a hypervisor, how does it differ from NetScaler physical appliances?

There are two main areas where customers see differences in behavior. The first is NetScaler VPX cannot offer the same performance as many NetScaler appliances. The second is that while NetScaler appliances incorporate its own L2 networking functionality, NetScaler VPX relies upon the Hypervisor for its L2 networking services. Generally, it does not limit how the NetScaler VPX can be deployed. There can be certain L2 functionality that is configured on a physical NetScaler appliance must be configured on the underlying Hypervisor.

How does NetScaler VPX play a role in the Application Delivery market?

NetScaler VPX changes the game in the application delivery market in the following ways:

- By making a NetScaler appliance even more affordable, NetScaler VPX enables any IT organization to deploy a NetScaler appliance. It is not just for their most mission-critical web applications, but for all of their Web applications.
- NetScaler VPX allows customers to further converge networking and virtualization within their data centers. NetScaler VPX cannot only be used to optimize web applications hosted on virtualized servers. It also enables web application delivery itself to become a virtualized service that can be easily and rapidly deployed anywhere. IT organizations use the standard data center processes for tasks such as provisioning, automation, and charge-back for the web application delivery infrastructure.
- NetScaler VPX opens up new deployment architectures that are not practical if only physical appliances are used. NetScaler VPX and NetScaler MPX appliances can be used basis, tailored

to the individual needs of each respective application to handle processor-intensive actions such as compression and application firewall inspection. At the data center edge, NetScaler MPX appliances handle high-volume network-wide tasks such as initial traffic distribution, SSL encryption or decryption, denial of service (DoS) attack prevention, and global load balancing. Pairing high-performance NetScaler MPX appliances with easy-to-deploy NetScaler VPX virtual appliance brings unparalleled flexibility and customization capabilities to modern, large-scale, data center environments while also reducing overall data center costs.

How does NetScaler VPX fit into our Citrix delivery center strategy?

With the availability of NetScaler VPX, the entire Citrix delivery center offering is available as a virtualized offering. The entire Citrix delivery center benefits from the powerful management, provisioning, monitoring, and reporting capabilities available in Citrix XenCenter. This can be deployed rapidly into almost any environment, and managed centrally from anywhere. With one integrated, virtualized application delivery infrastructure, organizations can deliver desktops, client-server applications, and Web applications.

Encryption

Does NetScaler VPX support SSL offload?

Yes. However, NetScaler VPX does all SSL processing in software, so NetScaler VPX does not offer the same SSL performance as NetScaler appliances. NetScaler VPX can support up to 750 new SSL transactions per second.

Does third-party SSL cards installed on the server hosting NetScaler VPX accelerate SSL encryption or decryption?

No. Supporting third-party SSL cards cannot associate the NetScaler VPX to specific hardware implementations. It greatly diminishes an organizations ability to flexibly host NetScaler VPX anywhere within the data center. NetScaler MPX appliances must be used when more SSL throughput than NetScaler VPX provides is required.

Does NetScaler VPX support the same encryption ciphers as physical NetScaler appliances?

VPX supports all encryption ciphers as physical NetScaler appliances, except the ECDSA.

What is the SSL transactions throughput of NetScaler VPX?

See [NetScaler VPX data sheet](#) for information on SSL transactions throughput.

Pricing and packaging

How is NetScaler VPX packaged?

NetScaler VPX selection is similar to the selection of NetScaler appliances. First, the customer selects the NetScaler edition based on its functionality requirements. Then, the customer selects the specific NetScaler VPX bandwidth tier based on their throughput requirements. NetScaler VPX is available in Standard, Advanced, and Premium Editions. NetScaler VPX offers from 10 Mbps (VPX 10) to 100 Gbps (VPX 100G). More details can be found in the NetScaler VPX data sheet.

Is NetScaler VPX priced the same for all Hypervisors?

Yes.

Are the same NetScaler SKUs used for VPX on all Hypervisors?

Yes.

Can a NetScaler VPX license be moved from one Hypervisor to another (For example from VMware to Hyper-V)?

Yes. NetScaler VPX licenses are independent of the underlying Hypervisor. If you decide to move the NetScaler VPX virtual machine from one Hypervisor to another, you do not have to get a new license. However, you might need to rehost the existing NetScaler VPX license.

Can NetScaler VPX instances be upgraded?

Yes. Both the throughput limits and NetScaler family edition can be upgraded. Upgrade SKUs for both types of upgrade are available.

If I want to deploy NetScaler VPX in a high availability pair, how many licenses do I need?

As with NetScaler physical appliances, a NetScaler high availability configuration requires two active instances. Therefore, the customer must purchase two licenses.

NetScaler VPX Express and 90 day free trial

Does NetScaler VPX Express include all NetScaler standard functionality? Does it include NetScaler Gateway and load balancing for Citrix Virtual Apps (formerly XenApp) Web Interface and XML broker?

Yes. NetScaler VPX Express includes full NetScaler Premium functionality. Starting from NetScaler release 14.1–29.65, NetScaler modified the VPX Express behavior.

Does NetScaler VPX Express require a license?

With the latest NetScaler VPX Express release (14.1–29.65 and later), VPX Express is free to use and does not require a license file for installation or usage. There is no need for any commitment. If you already have a VPX Express license, the previous licensing behavior remains in effect. However, if you remove the existing VPX Express license file and use version 14.1–29.65 or later, the updated VPX Express behavior will apply.

Does the NetScaler VPX Express license expire?

With the new VPX express, there is no license and no expiry date. If you already have a VPX express license, the license expires one year after download.

Does NetScaler VPX Express support the same encryption ciphers as NetScaler MPX appliances?

For general availability, all the same strong encryption ciphers supported on NetScaler appliances are available on NetScaler VPX and NetScaler VPX Express. It is subjected to the same import or export regulations.

Can I file technical support cases for NetScaler VPX Express?

No. NetScaler VPX Express users are free to use both the NetScaler VPX Knowledge Center, and request help from the community using the discussion forums.

Can NetScaler VPX Express be upgraded to a retail version?

Yes. Simply purchase the retail NetScaler VPX license that you need, and then apply the corresponding license to the NetScaler VPX Express instance.

Hypervisor

What VMware versions do NetScaler VPX support?

NetScaler VPX supports both VMware ESX and ESXi for versions 3.5 or later. For more information, see [Support matrix and usage guidelines](#)

For VMware, how many virtual network interfaces can you allocate to a VPX?

You can allocate up to 10 virtual network interfaces to a NetScaler VPX.

From vSphere, how can we access the NetScaler VPX command line?

The VMware vSphere client provides built-in access to the NetScaler VPX command line through a console tab. Also, you can use any SSH or Telnet client to access the command line. You can use the NSIP address of the NetScaler VPX in the SSH or Telnet client.

How can you access the NetScaler VPX GUI?

To access the NetScaler VPX GUI, type the NSIP of the NetScaler VPX, for example, `http://NSIP address` in the address field of any browser.

Can two NetScaler VPX instances installed on the same VMware ESX be configured in a high availability setup?

Yes, but it is not recommended. A hardware failure would affect both NetScaler VPX instances.

Can two NetScaler VPX instances running on two different VMware ESX systems be configured in a high availability setup?

Yes. It is recommended in a high availability setup.

For the VMware, are interface related events supported on NetScaler VPX?

No. Interface-related events are not supported.

For the VMware, are tagged VLANs supported on NetScaler VPX?

Yes. NetScaler tagged VLANs are supported on NetScaler VPX from release 11.0 and higher. For more information, see the [NetScaler documentation](#).

For VMware, are link aggregation and LACP supported on NetScaler VPX?

No. Link Aggregation and LACP are not supported for NetScaler VPX. Link aggregation must be configured at the VMware level.

How do we access NetScaler VPX documentation?

The documentation is available from the NetScaler VPX GUI. After logging in, select the **Documentation** tab.

Capacity planning or sizing

What performance can I expect with NetScaler VPX?

NetScaler VPX offers good performance. See [NetScaler VPX data sheet](#) for a specific performance level achievable using NetScaler VPX.

Given that server CPU power varies, how can we estimate the maximum performance of a NetScaler instance?

Using a faster CPU can result in higher performance (up to the maximum allowed by the license), while using a slower CPU can certainly limit the performance.

Are NetScaler VPX bandwidth or throughput limits for inbound only traffic, or both inbound and outbound traffic?

NetScaler VPX bandwidth limits are enforced for traffic inbound to the NetScaler only, regardless of whether the request traffic or response traffic. It indicates that a NetScaler VPX-1000 (for example) can process both 1 Gbps of inbound traffic and 1 Gbps of outbound traffic simultaneously. Inbound and outbound traffic is not the same as request and response traffic. To the NetScaler, both traffic coming from endpoints (request traffic) and traffic coming from origin servers (response traffic) is “inbound” (that is, coming into the NetScaler).

Can multiple instances of NetScaler VPX be run on the same server?

Yes. However, ensure that the physical server has enough CPU and I/O capacity to support the total workload running on the host, or NetScaler VPX performance can be impacted.

If more than one instance of NetScaler VPX is running on a physical server, what is the minimum hardware requirement per NetScaler VPX instance?

Each NetScaler VPX instance must be allocated 2 GB of physical RAM, 20 GB of hard disk space, and 2 vCPUs. For critical deployments, we do not recommend 2 GB RAM for VPX because the system operates in a memory-constrained environment. This might lead to scale, performance, or stability related issues. The recommended is 4 GB RAM or 8 GB RAM.

Note:

The NetScaler VPX is a latency-sensitive, high-performance virtual appliance. To deliver its expected performance, the appliance requires vCPU reservation, memory reservation, vCPU pinning on the host. Also, hyper threading must be disabled on the host. If the host does not meet these requirements, issues such as high-availability failover, CPU spike within the VPX instance, sluggishness in accessing the VPX CLI, pit boss daemon crash, packet drops, and low throughput occur.

Make sure that every VPX instance meets the predefined conditions.

Can I host NetScaler VPX and other applications on the same server?

Yes. For example, NetScaler VPX, Citrix Virtual Apps Web Interface and Citrix Virtual Apps XML Broker can all be virtualized and can run on the same server. For best performance, ensure that the physical host has enough CPU and I/O capacity to support all the running workloads.

Will adding CPU cores to a single NetScaler VPX instance increase the performance of that instance?

Depending on the license, a NetScaler VPX instance can use up to 4 vCPU today. Adding an extra CPU to a NetScaler VPX instance that can use more CPUs increases the performance.

Why NetScaler VPX looks like consuming more than 90% of the CPU even though it is idle?

It is normal behavior and NetScaler appliances exhibit the same behavior. To see the true extent of NetScaler VPX CPU utilization, use the `stat CPU` command in the NetScaler CLI, or view NetScaler VPX CPU utilization from the NetScaler GUI. The NetScaler packet processing engine is always “looking

for work,”even when there is no work to be done. Therefore, it does everything to take control of the CPU and not release it. On a server installed with NetScaler VPX and nothing else, results in looking like (from the Hypervisor perspective) that NetScaler VPX is consuming the entire CPU. Looking at the CPU utilization from “inside NetScaler”(by using the CLI or the GUI) provides a picture of NetScaler VPX CPU capacity being used.

System requirements

What are the minimum hardware requirements for NetScaler VPX?

The following table explains the minimum hardware requirements for NetScaler VPX.

Type	Requirements
Processor	Dual core server with Intel Xeon or AMD EPYC.
Memory	Minimum 2 GB. However, 4 GB is recommended.
Disk	Minimum 20 GB hard drive.
Hypervisor	Citrix Hypervisor 5.6 or later, VMware ESX/ESXi 3.5 or later, or Windows Server 2008 R2 with Hyper-V
Network Connectivity	100 Mbps minimum, but 1 Gbps is recommended.
NIC	A NIC compatible with the Hypervisor you are using.

Note:

For critical deployments, 4 GB memory is preferred for NetScaler VPX. With 2 GB memory, NetScaler VPX operates in a memory-constrained environment. This might lead to scale, performance, or stability related issues.

For more information on system requirements, see [NetScaler VPX data sheet](#).

Note:

From NetScaler 13.1 release onwards, the NetScaler VPX instance on VMware ESXi hypervisor supports AMD EPYC processors.

What is the Intel VT-x?

These features, sometimes referred to as “hardware assist” or “virtualization assist”, trap sensitive or privileged CPU instructions run by the guest OS out to the Hypervisor. This simplifies hosting guest OSs (BSD for a NetScaler VPX) on the Hypervisor.

How common are VT-x?

Virtually, all servers shipped within the last two years might support VT-x. Many servers ship with virtualization assist disabled in the BIOS. Before assuming you cannot run NetScaler VPX, check if you need to change this setting on the server.

Is there a hardware compatibility list (HCL) for NetScaler VPX?

As long as the server supports Intel VT-x, NetScaler VPX must run on any server compatible with the underlying Hypervisor. See the Hypervisor HCL for a comprehensive list of supported platforms.

What version of NetScaler OS is NetScaler VPX based on?

NetScaler VPX is based on NetScaler 9.1 or later releases.

Since NetScaler VPX runs on BSD, can it be run natively on a server with BSD Unix installed?

No. NetScaler VPX requires the Hypervisor to run. Detailed Hypervisor supports can be found in [NetScaler VPX data sheet](#).

Other technical FAQs

Does link aggregation on a physical server with multiple NIC's work?

LACP is not supported. For the Citrix Hypervisor, Static link aggregation is supported and has limits of four channels and seven virtual interfaces. For VMware, static link aggregation is not supported within NetScaler VPX, but can be configured at the VMware level.

Is MAC based forwarding (MBF) supported on VPX? Is there any change from the NetScaler appliance implementation?

MBF is supported and it behaves the same way as with the NetScaler appliance. The Hypervisor basically switches all the packets received from NetScaler VPX to the outside and conversely.

How is the NetScaler VPX upgrade process carried out?

Upgrades are performed the same way as for NetScaler appliances: download a kernel file and use `install ns` or the upgrade utility in the GUI.

How are flash and disk space allocated? Can we change it?

`/flash = 965M`

`/var = 14G`

A minimum of 2 GB memory must be allocated to each NetScaler VPX instance. The NetScaler VPX disk image was sized at 20 GB for serviceability purposes such as, room for taking and storing up to 4 GB core dumps, and log and trace files. While it would be possible to generate a smaller disk image, there are no plans to do this currently. `/flash` and `/var` are both in the same disk image. They're kept as separate file systems for compatibility purposes.

For detailed memory allocation recommendation, refer to [NetScaler VPX data sheet](#).

Can we add a new hard drive to increase space on NetScaler VPX instance?

Yes. From NetScaler release 13.1 build 21.x onwards, you have the option to increase disk space on the NetScaler VPX instance by adding a second disk. When you attach the second disk, the `"/var/crash"` directory is automatically mounted on to this disk. The second disk is used for storing core files and logging. Existing directories that are used to store core files and log files continue to work as earlier.

Note:

Take external backup on downgrade of the NetScaler appliance to avoid loss of data.

For information on how to attach a new hard disk drive (HDD) to a NetScaler VPX instance on a cloud, see the following:

- [Azure documentation](#)

Note:

To attach a secondary disk on VPX instances deployed on Azure, ensure that the Azure VM sizes have a local temporary disk. For more information, see [Azure VM sizes with no local temporary disk](#).

- [AWS documentation](#)
- [GCP documentation](#)

Warning:

After you add a new HDD to VPX, some of the scripts that work on files, which are moved to the new HDD might fail under the following conditions:

If you use the “link” shell command to create hard links to the files, which were moved to a new HDD.

Replace all such commands with “ln -s” to use a symbolic link. Also, modify the failing scripts accordingly.

Can I increase the primary disk size on VPX?

Starting from NetScaler release 14.1 build 21.x, admins can dynamically increase the primary disk size on NetScaler VPX from 20 GB up to 1 TB at once. And the subsequent time, you can again increase up to 1 TB. To increase the disk space, extend the primary disk size to a minimum of 1 GB in the respective cloud or hypervisor UI.

Note:

You can only increase the size of the disks. Once the new size is allocated, you cannot decrease it later. Therefore, increase the disk size only if it is essential.

How do I manually increase the primary disk size on NetScaler VPX?

Follow these steps to manually increase the VPX primary disk size from a hypervisor or cloud:

1. Shutdown the VM.
2. Extend the default disk size of 20 GB to a higher value. For example, 20 GB to 30 GB or 40 GB. For Azure, extend the default disk size of 32 GB to 64 GB.
3. Power on the VM and enter the boot prompt.
4. Log into single user mode using the “boot -s” command.
5. Verify the disk space. You can check the newly allocated disk space using “gpart show” command.
6. Note the partition name. For example, the VM partition is da0.
7. Resize the disk partition using the “gpart resize” command.

Example:

Let’s resize the da0 MBR partition to include 10 GB free space by running the following command.

```
gpart resize -i 1 da0
```

8. Merge the free space to the last partition.

Example:

```
gpart resize -i 5 da0s1
```

9. Extend the filesystem to include newly allocated free space using the “growfs” command.

Example:

```
growfs /dev/ada0s1e
```

10. Reboot the VM and verify the increased disk space using the “df -h” command on shell prompt.

What can we expect to regard the NetScaler VPX build numbering and interoperability with other builds?

NetScaler VPX has similar build numbering as the 9.1. Cl (classic) and 9.1. Nc (nCore) releases, for instance 9.1_97.3.vpx, 9.1_97.3.nc, and 9.1_97.3.cl.

Can the NetScaler VPX be a part of a high availability setup with a NetScaler appliance?

Not a supported configuration.

Are all the interfaces visible in NetScaler VPX directly related to the number of interfaces on the Hypervisor?

No. You can add up to seven interfaces (10 for VMware) through the NetScaler VPX configuration utility with only one physical NIC on the Hypervisor.

Can Citrix Hypervisor XenMotion or VMware vMotion or Hyper-V live migration be used to move active instances of NetScaler VPX?

NetScaler VPX does not support Hyper-V live migration. vMotion is supported starting from the NetScaler release 13.0. Live Migration (formerly XenMotion) is supported starting from the NetScaler release 14.1 build 17.38.

Licensing overview

November 22, 2024

NetScaler offers a wide range of product editions and licensing models for MPX and VPX appliances, to meet your organization's needs.

For proper operation of a NetScaler appliance, it must have one of the NetScaler family edition licenses. The ADC product line has three family editions:

- Standard Edition

Note

The standard edition has reached End-of-Sale (EOS) and is only available for renewal.

- Advanced Edition
- Premium Edition

For more information, see the data sheet. The data sheet is available on www.netscaler.com.

Select a NetScaler edition. Then select an MPX or a VPX license offering based on the following criteria:

- Perpetual and subscription (yearly and hourly subscription)
- vCPU and bandwidth
- on-premises and cloud

NetScaler VPX Express license

VPX Express for on-premises and cloud deployments does not require a license file, and it offers the following features:

- 20 Mbps bandwidth
- Starting with NetScaler release 14.1 build 29.65, VPX Express includes all the advanced features that are available with the Premium license.
- Maximum 250 SSL sessions
- 20 Mbps SSL throughput

NetScaler fixed bandwidth (throughput) license

Fixed bandwidth perpetual licenses are EOS and you must now use fixed bandwidth subscription licenses. Fixed bandwidth subscription allows you to run a fixed throughput deployment in any form factor (MPX/SDX/VPX/BLX). After deploying your NetScaler, you must fetch your license files from the license server and download a license manually to each device (on-premises or cloud).

Notes:

- Only advanced and premium editions are supported.
- Edition and bandwidth upgrades are not supported.
- Migration to pooled capacity license is not supported.

NetScaler Flexed license

NetScaler Flexed licensing is the new licensing framework aimed at simplifying the license management process. Your Flexed license includes software instance licenses (VPX/CPX/BLX, SDX, and MPX) and bandwidth capacity licenses. You must apply the Flexed licenses on the NetScaler Console service or NetScaler Console on-prem. You can then allocate them across all NetScaler form factors deployed in cloud or on-prem.

For more information about Flexed licenses on NetScaler Console, see [Flexed license](#).

For more information about Flexed licenses on NetScaler Console service, see [Flexed license](#).

NetScaler Pooled license

Use NetScaler Console to create a licensing framework that comprises a common bandwidth and an instance pool. For more information, see [NetScaler Pooled Capacity](#).

Note:

NetScaler Console can host both Pooled and Self Managed Pool licenses. To use the required license, configure the license server on NetScaler and check out the capacity from the appropriate pool. The ADC CLI and GUI configuration steps for the Pooled and Self Managed Pool license are the same.

NetScaler Self Managed Pool license

From NetScaler release 13.1 build 30.x onwards, NetScaler instances support the Self Managed Pool license. With this license, you can simplify and automate license file uploads to a license server. Use NetScaler Console to create a licensing framework that comprises a common bandwidth or vCPU and instance pool.

To use the Self Managed Pool license, configure the license server to the `SelfManagedPool` license mode on NetScaler and check out the required capacity. Use the `show ns license` command after rebooting the NetScaler appliance to find out the license that is configured.

Important

If your system is configured with Pooled Capacity license but want to migrate to Self Managed Pool license without impacting the traffic flow, ensure that the target server has the required Self Managed Pool license.

You can migrate only between the following compatible licenses:

- Pooled Capacity to Self Managed Pool, and conversely.
- vCPU to Self Managed vCPU, and conversely.

To migrate the license, run the following command:

```
add ns licenseserver (<licenseServerIP> | <serverName>)-forceUpdateIP  
-licensemode [CICO | Pooled | SelfManagedPool | VCPU | SelfManagedvCPU  
]
```

Example:

```
add licenseserver 192.0.2.246 -forceUpdateIP -licensemode selfManagedvCPU
```

Configure Self Managed Pool license using the CLI

To add the license server config to the NetScaler appliance, run the following command:

```
1 add ns licenseserver (<licenseServerIP> | <serverName>) [-port <  
positive_integer>] -licensemode [CICO | Pooled | SelfManagedPool |  
VCPU | SelfManagedvCPU]
```

Example:

```
1 add ns licenseserver 192.0.2.246 -port 27000 -licensemode  
SelfManagedPool
```

Note:

The `show ns licenseserverpool` command displays only licenses based on the specified license mode. Hence, the licenses are fetched faster. To get an inventory of all the licenses, run the `show ns licenseserverpool -getAllLicenses` command. If the license mode is not specified, the Pooled Capacity licenses are displayed by default.

To modify the system capacity, run the following command:

```
1 set ns capacity ((-bandwidth <positive_integer> -unit ( Gbps | Mbps ))  
| -platform <platform>) [-Edition <Edition>]
```

Example:

```
1 set ns capacity -bandwidth 3 -unit gbps -edition enterprise
```

Note:

Capacity is checked out from the license pool of the license server.

To reboot the NetScaler appliance, run the following command:

```
1 reboot [-warm]
```

To display the state of all the licensed features and configured license mode, run the following command:

```
1 show ns license
```

Sample output of `show ns licenseserverpool` command:

```
> add licenseserver [redacted] -licensemode SelfManagedPool
Done
> sh licenseserverpool
Instance Total           : 200
Instance Available      : 199
Standard Bandwidth Total : 10.00 Gbps
Standard Bandwidth Available : 10.00 Gbps
Enterprise Bandwidth Total : 10.00 Gbps
Enterprise Bandwidth Available : 7.00 Gbps
Platinum Bandwidth Total : 0 Mbps
Platinum Bandwidth Available : 0 Mbps
```

Sample output of `show ns licenseserverpool -getallLicenses` command:

```
> sh licenseserverpool -getallLicenses
Instance Total           : 40
Instance Available      : 33
Standard Bandwidth Total : 210.00 Gbps
Standard Bandwidth Available : 210.00 Gbps
Enterprise Bandwidth Total : 50.00 Gbps
Enterprise Bandwidth Available : 50.00 Gbps
Platinum Bandwidth Total : 210.00 Gbps
Platinum Bandwidth Available : 205.00 Gbps
VPX8000P Total          : 1
VPX8000P Available      : 1
Standard CPU Total      : 100
Standard CPU Available  : 100
Enterprise CPU Total    : 100
Enterprise CPU Available : 100
Platinum CPU Total      : 25
Platinum CPU Available  : 20
```

Sample output of `show license` command:

```

> show license
License status:
  Web Logging: YES
  Surge Protection: YES
  Load Balancing: YES
  Content Switching: YES
  Cache Redirection: YES
  Compression Control: YES
  Delta Compression: NO
  SSL Offloading: YES
  Global Server Load Balancing: YES
  GSLB Proximity: YES
  Dynamic Routing: YES
  Content Filtering: YES
  Content Accelerator: NO
  Integrated Caching: NO
  SSL VPN: YES (Maximum users = 1000) (Maximum ICA users = Unlimited)
  AAA: YES
  OSPF Routing: YES
  RIP Routing: YES
  BGP Routing: YES
  Rewrite: YES
  IPv6 protocol translation: YES
  Application Firewall: NO
  Responder: YES
  NetScaler Push: YES
  AppFlow: YES
  CloudBridge: NO
  ISIS Routing: YES
  Clustering: YES
  CallHome: YES
  AppQoE: YES
  AppFlow for ICA: YES
  Front End Optimization: YES
  Large scale NAT: YES
  RD? Proxy: YES
  Reputation: NO
  URL Filtering: NO
  Video Optimization: NO
  Forward Proxy: NO
  SSL Interception: NO
  Remote content inspection: YES
  Adaptive TCP: NO
  Connection Quality Analytics: NO
  Bot Management: NO
  API Gateway: NO
  Model Number ID: 3000
  License Type: Enterprise License
  Licensing mode: Self Managed Pool
Done

```

Configure Self Managed Pool license using the GUI

Complete the following steps to configure the Self Managed Pool license:

1. Navigate to **System > Licenses > ADC License > Manage Licenses > Add New License**.
2. In the **Licenses** page, select the **Use remote licensing** radio button, and choose your license mode from **Remote Licensing Mode**.
3. Enter the server IP address and the license port details.
4. Provide the NetScaler Console access credentials.
5. Click **Continue**.

Related resources

[The Citrix Licensing System](#)

VPX licensing on cloud

VPX deployment is supported on public cloud providers such as Azure, AWS, and Google. For more information, see the following documents:

- [VPX-Azure license](#)
- [VPX-AWS license](#)
- [VPX-GCP license](#)

Allocate and apply a license

December 17, 2024

In the NetScaler MPX and VPX ADC GUI, you can use your hardware serial number (HSN) or your license access code to allocate your licenses. Alternatively, if a license is already present on your local computer, you can upload it to the appliance.

For all other functionality, such as returning or reallocating your license, you must use the licensing portal. Optionally, you can still use the licensing portal for license allocation. For more information, see [Manage Licenses](#).

Citrix Licensing guide

The Citrix Licensing guide also covers information about installing licenses in a NetScaler appliance and installing licenses in other NetScaler products. For more information, see the [NetScaler Licensing Guide](#).

Prerequisites

Note

Buy separate licenses for each appliance in a high availability pair. Ensure that the same types of licenses are installed on both the appliances. For example, if you buy a premium license for one appliance, you must purchase another premium license for the other appliance.

To use the hardware serial number or license access code to allocate your licenses:

- You must be able to access public domains through the appliance. For example, the appliance must be able to access www.citrix.com. The license allocation software internally accesses the Citrix licensing portal for your license. To access a public domain:
 - Use a proxy server or set up a DNS server.
 - Configure a NetScaler IP (NSIP) address or a subnet IP (SNIP) address on your NetScaler appliance.
- Your license must be linked to your hardware, or you must have a valid license access code. Citrix sends your license access code by email when you purchase a license.

Allocate a license by using the GUI

If your license is already linked to your hardware, the license allocation process can use the hardware serial number. Otherwise, you must type the license access code.

You can partially allocate licenses as required for your deployment. For example, if your license file contains 10 licenses, but your current requirement is for only six licenses, you can allocate six licenses now, and allocate more licenses later. You can't allocate more than the total number of licenses present in your license file.

To allocate your license

1. In a web browser, type the IP address of the NetScaler appliance (for example, <http://192.168.100.1>).
2. In User Name and Password, type the administrator credentials.
3. On the **Configuration** tab, navigate to **System > Licenses**.
4. In the details pane, click **Manage Licenses**, click **Add New License**, and then select one of the following options:
 - **Use Serial Number:** The software internally fetches the serial number of your appliance and uses this number to display your licenses.
 - **Use license access code:** Citrix emails the license access code for the license that you purchased. Enter the license access code in the text box.


If you do not want to configure internet connectivity on the NetScaler appliance, you can use a proxy server. Select **Connect through Proxy Server** and specify the IP address and port of your proxy server.
5. Click **Get Licenses**. Depending on the option that you selected, one of the following dialog boxes appears.
 - The following dialog box appears if you selected Hardware Serial Number.

Serial No: HW-47EGM28S8V				
<input type="checkbox"/>	Name	Total count	Allocate	Id
<input type="checkbox"/>	▶ Citrix NetScaler MPX 7500 - Platinum Edition	1	0	key001
<input type="checkbox"/>	▶ Citrix Access Gateway Platform License	1	0	key002
<input type="checkbox"/>	▶ Citrix Access Gateway Universal License	10	0	key003
<input type="checkbox"/>	▶ Citrix EasyCall	10	0	key004
<input type="checkbox"/>	▶ Citrix EasyCall Unlimited License	10	0	key005
<input type="checkbox"/>	▶ Citrix Branch Repeater VPX 45 Mbps	1	0	key006
<input type="checkbox"/>	▶ Citrix Repeater Plug-in	10	0	key007


- The following dialog box appears if you selected License Access Code.

License Activation code: HW-47EGM28S8V				
<input type="checkbox"/>	Name	Total count	Allocate	Id
<input type="checkbox"/>	▶ Citrix NetScaler MPX 7500 - Platinum Edition	1	0	key001
<input type="checkbox"/>	▶ Citrix Access Gateway Platform License	1	0	key002
<input type="checkbox"/>	▶ Citrix Access Gateway Universal License	10	0	key003
<input type="checkbox"/>	▶ Citrix EasyCall	10	0	key004
<input type="checkbox"/>	▶ Citrix EasyCall Unlimited License	10	0	key005
<input type="checkbox"/>	▶ Citrix Branch Repeater VPX 45 Mbps	1	0	key006
<input type="checkbox"/>	▶ Citrix Repeater Plug-in	10	0	key007


6. Select the license file that you want to use to allocate your licenses.
7. In the **Allocate** column, enter the number of licenses to be allocated. Then click **Get**.
 - If you selected **Hardware Serial Number**, enter the number of licenses, as shown in the following screenshot.

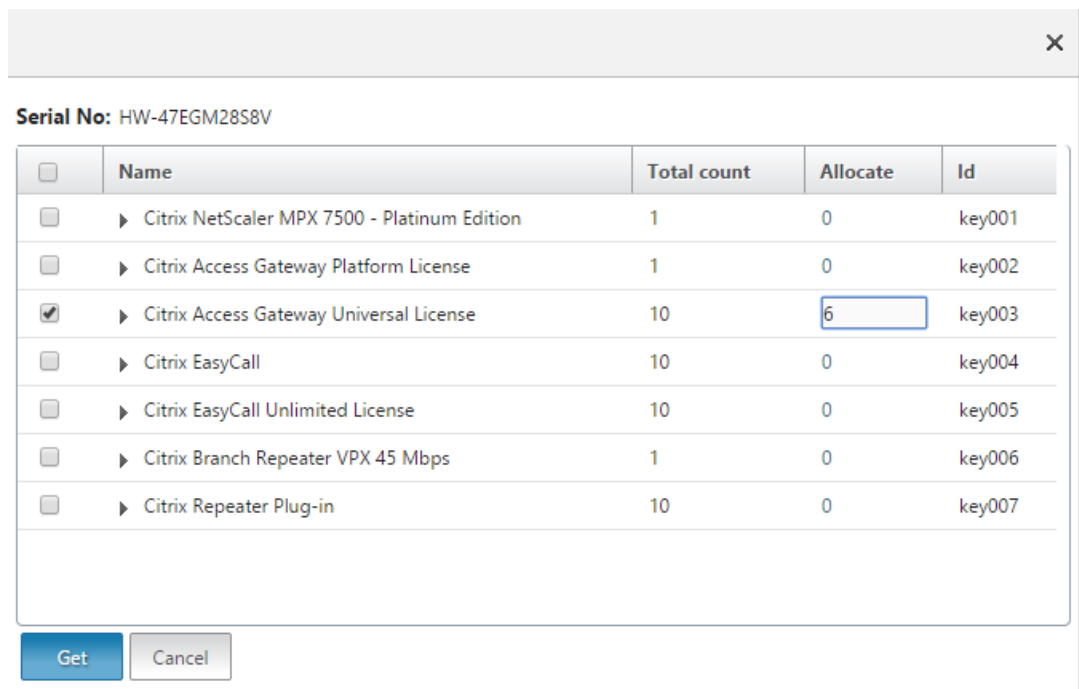

- If you selected **license access code**, enter the number of licenses, as shown in the following screenshot.

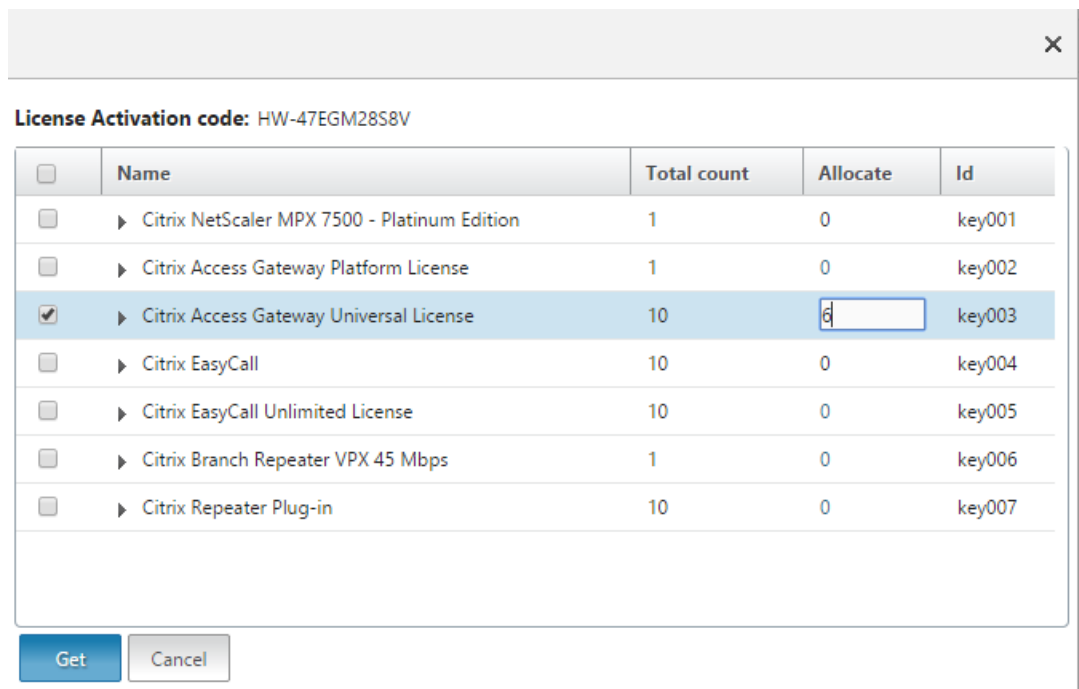

8. Click restart for the license to take effect.
9. In the restart dialog box, click **OK** to proceed with the changes, or click **Close** to cancel the changes.

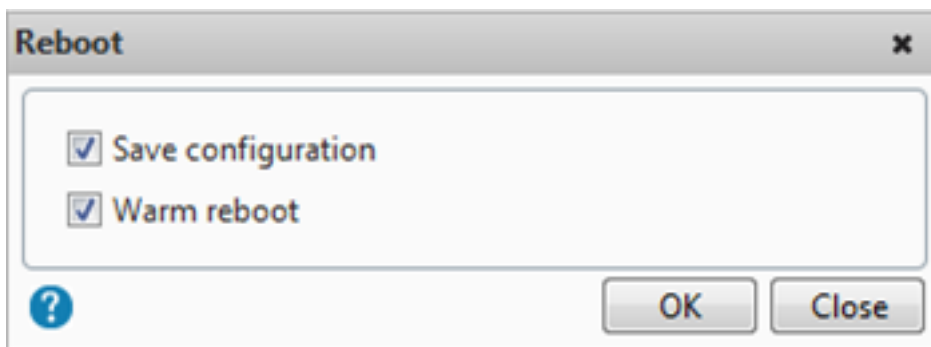

Install a license

If you downloaded your license file to your local computer by accessing the licensing portal, you must upload the license to the appliance.

To install a license file by using the GUI

1. In a web browser, type the IP address of the NetScaler appliance (for example, <http://192.168.100.1>).
2. In User Name and Password, type the administrator credentials.
3. On the **Configuration** tab, navigate to System Licenses.
4. In the details pane, click **Manage Licenses**.
5. Click **Add New License**, then select **Upload license files from a local computer**.
6. Click **Browse**. Navigate to the location of the license files, select the license file, and then click **Open**.
7. Click restart to apply the license.
8. In the restart dialog box, click **OK** to proceed with the changes, or click **Close** to cancel the changes.

To install the licenses by using the CLI

1. Open an **SSH connection** to the ADC appliance by using an SSH client, such as PuTTY.
2. Log on to the ADC appliance by using the administrator credentials.
3. Switch to the shell prompt, create a license subdirectory in the `nsconfig` directory, if it does not exist, and copy one or more new license files to this directory.

Example

```
1 login: nsroot
2 Password: nsroot
```

```
3 Last login: Mon Aug 4 03:37:27 2008 from 10.102.29.9
4 Done
5 > shell
6 Last login: Mon Aug 4 03:51:42 from 10.103.25.64
7 root@ns# mkdir /nsconfig/license
8 root@ns# cd /nsconfig/license
```

Copy one or more new license files to this directory.

Note

The NetScaler appliance does not prompt for a reboot option when you use the command line interface to install the licenses. Run the `reboot -w` command to warm restart the system, or run the `restart` command to restart the system normally.

Verify licensed features

Before using a feature, ensure that your license supports the feature.

To verify the licensed features by using the CLI

1. Open an **SSH connection** to the ADC appliance by using an SSH client, such as PuTTY.
2. Log on to the ADC appliance by using the administrator credentials.
3. At the command prompt, enter the `sh ns license` command to display the features supported by the license.

Example

```
1 sh ns license
2     License status:
3         Web Logging: YES
4         Surge Protection: YES
5         .....
6         Responder: YES
7 Done
```

To verify the licensed features by using the GUI

1. In a web browser, type the IP address of the ADC appliance, such as `http://192.168.100.1`.
2. In User Name and Password, type the administrator credentials.
3. Provide the User name and Password and click **Login**.

- In the navigation pane, expand **System**, and then click **Licenses**. You see a green check mark next to the licensed features.

Enable or disable a feature

When you use the NetScaler appliance for the first time, you must enable a feature before you can use its functionality. If you configure a feature before it's enabled, a warning message appears. The configuration is saved but it applies only after the feature is enabled.

To enable a feature by using the CLI

At the command prompt, type the following commands to enable a feature and verify the configuration:

```
1 - enable feature <FeatureName>
2
3 - show feature
```

```
1 **Example**
```

```
1 enable feature lb cs
2 done
3 >show feature
4
5 Feature Acronym Status
6 -----
7 1) Web Logging WL OFF
8 2) Surge Protection SP ON
9 3) Load Balancing LB ON
10 4) Content Switching CS ON
11 5) Cache Redirection CR ON
12 .
13 .
14 .
15 24) NetScaler Push push OFF
16 Done
```

The example shows how to enable load balancing (lb) and content switching (cs).

If the license key isn't available for a particular feature, the following error message appears for that feature:

```
ERROR: features not licensed
```

Note:

To enable an optional feature, you must have a feature-specific license. For example, you've pur-

chased and installed the NetScaler Advanced Edition license. However, to enable the Integrated Caching feature, you must purchase and install the AppCache license.

To disable a feature by using the CLI

At the command prompt, type the following commands to disable a feature and verify the configuration:

```
1 - disable feature \<FeatureName\>
2
3 - show feature
```

```
1 **Example**
```

The following example shows how to disable load balancing (LB).

```
1 > disable feature lb
2 Done
3 > show feature
4
5 Feature Acronym Status
6 -----
7 1) Web Logging WL OFF
8 2) Surge Protection SP ON
9 3) Load Balancing LB OFF
10 4) Content Switching CS ON
11 .
12 .
13 .
14 24) NetScaler Push push OFF
15 Done
16 >
```

Configure NetScaler license expiry alerts

By default, a GUI alert appears when the ADC license expiry date is less than or equal to 30 days.

You can configure the NetScaler appliance to perform the following alert operations from a specified number of days before a NetScaler license is due to expire:

- Display a license expiry alert banner on the NetScaler GUI.
- Send SNMP traps containing the license expiry information at regular intervals to the configured trap listeners if the “NS_LICENSE_EXPIRY”SNMP alarm is enabled.

Upon license expiry, the NetScaler appliance automatically restarts to revoke the license. If a NetScaler appliance uses Citrix service provider (CSP) licenses, the appliance does not restart

automatically to revoke the license. However, if the user restarts the appliance, it restarts as unlicensed.

To specify a number of days for NetScaler license expiry alerts by using the CLI:

At the command prompt, type:

- **set licenseparameters [-licenseexpiryalerttime]**
- **sh licenseparameters**

Example:

 
```
1 > set licenseparameters -licenseexpiryalerttime 200
2 Done
3
4 > sh licenseparameters
5 ...
6     Licenseexpiryalerttime: 200
```

To specify a number of days for NetScaler license expiry alerts by using the NetScaler GUI:


1. Navigate to **Configuration > System > Licenses > Manage Licenses**.
2. In **Notification Settings**, click the edit button to specify a number of days for NetScaler license expiry alerts.

The following license expiry alerts are displayed depending on the condition met:

- After license expiry



- License nearing expiration and crosses the specified number of days before a NetScaler license is due to expire

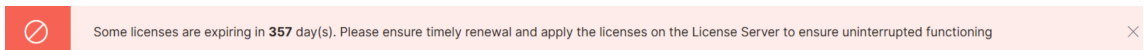


Check license expiry information


You can check NetScaler license expiry information through the GUI or CLI.

To check NetScaler license expiry information through GUI:

- Go to **Configuration > System > Licenses**.
- For Flexed/Pooled license, go to **Configuration > System > Licenses > Manage Licenses**.

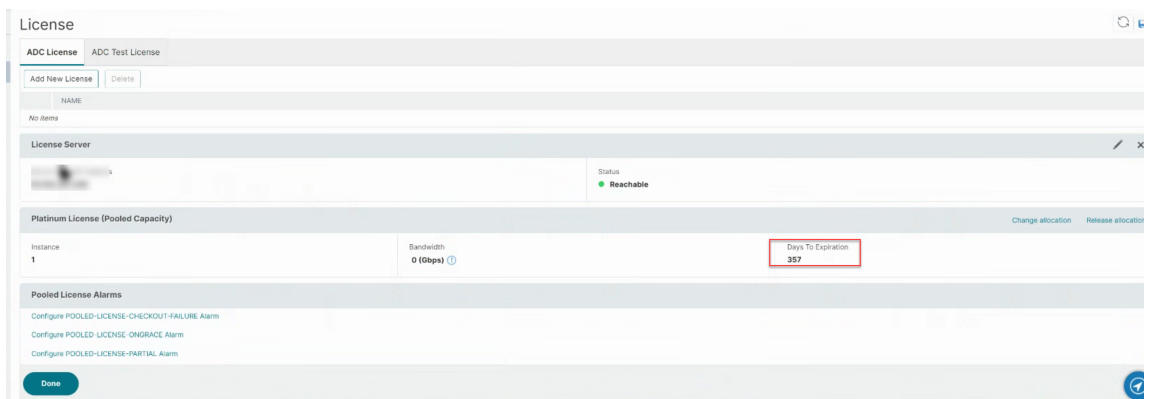

 A GUI alert appears when the ADC license expiry date is less than or equal to the specified number of days for the NetScaler license expiry alert.



To check the license expiry information through CLI:

Type the command “show ns license”.

```

1 > sh license
2   License status:
3
4   Web Logging: YES
5   Surge Protection: YES
6
7   Web Logging: YES
8   Surge Protection: YES
9
10  ...
11
12 Days to expiry: 196
13
14 Done
15 >
    
```

Validate license files without rebooting the NetScaler appliance

With this feature, you can test licenses and see all the features available in the given license without applying them on the NetScaler appliance. This option allows you to test new licenses without rebooting the NetScaler appliance.

You can use this feature by both GUI and CLI.

Validate license files by using the GUI

1. Go to **System -> Licences**.
2. In the **ADC Test License** tab, click **Manage Test Licenses**.
3. Click **Upload**, and upload one or more license files. If multiple license files are uploaded, the union of all license files is calculated.
4. After the license file upload is complete, click **ADC Test License** again to display the licensed features of the uploaded license.

Section 1 shows license information and Section 2 shows all features that the license includes.

License

ADC License

ADC Test License

Manage Test Licenses

Apply

License Type	Platinum
Model ID	15082
Licensing Mode	Local
Days To Expiration	54

Features

Load Balancing	SSL Offloading
Content Switching	Cache Redirection
Global Server Load Balancing	GSLB Proximity
Authentication, Authorization and Auditing	Citrix Gateway
Maximum Citrix Gateway Users Allowed	Maximum ICA Users Allowed
	Unlimited
Clustering	Web Interface
Integrated Caching	Front End Optimization
Rewrite	Responder
HTTP Compression	Citrix Web App Firewall
Citrix Bot Management	Cloud Bridge
AppFlow	AppFlow for ICA
IPv6 Protocol Translation	Dynamic Routing
BGP Routing	OSPF Routing
RIP Routing	ISIS Routing
AppQoE	Citrix ADC Push
Web Logging	vPath
Callhome	Large Scale NAT
RDP Proxy	Reputation
Delta Compression	URL Filtering
SSL Interception	Forward Proxy
Video Optimization	Adaptive TCP

5. Verify the information displayed and click **Apply** to use the license. Reboot (warm) the NetScaler appliance for the license to take effect. Immediate reboot isn't mandatory, and the current license is applicable until the next reboot.

Validate license files by using the CLI

1. Copy the test license file to the ADC appliance at path: `/nsconfig/testlicense`.

Example:

```
1 scp CNS_15082_SERVER_PLT_Retail.lic nsroot@<ns_ip>:/nsconfig/
  testlicense/
```

2. Verify whether the license file is copied to the correct location.

Example:

```
1 ls /nsconfig/testlicense/ CNS_15082_SERVER_PLT_Retail.lic
```

3. Run the `show ns testlicense` command to see the license information.

```
1 > sh ns testlicense
2   License status:
3           Web Logging: YES
4           Surge Protection: YES
5           Load Balancing: YES
6           Content Switching: YES
7           Cache Redirection: YES
8           Compression Control: YES
9           Delta Compression: NO
10          SSL Offloading: YES
11   Global Server Load Balancing: YES
12          .....
13          API Gateway: YES
14          Model Number ID: 15082
15          License Type: Platinum License
16          Licensing mode: Local
17          Days to expiration: 54
```

4. Verify the information displayed, and run the `apply ns testlicense` command to apply the license. Reboot (warm) the NetScaler appliance for the license to take effect.

```
1 > apply ns testlicense
2
3 Warning: The configuration changes will not take effect until the
  system is rebooted
4 Done
5 > reboot -w
6 Are you sure you want to restart NetScaler (Y/N)? [N]:Y
7 Done
```

Upgrade a license

Edition and bandwidth upgrades aren't supported. To move between editions in a pooled subscription, you must purchase a new pooled subscription with the new edition and upload those licenses to NetScaler Console.

Bandwidth upgrade does not apply to pooled licenses because each instance can check-in/check-out the necessary bandwidth based on the requirement as long as the underlying hardware or software supports it.

Note:

You can use NetScaler Console to create a licensing framework that comprises a common bandwidth and instance pool. For complete information, see [NetScaler pooled capacity](#).

Related resources

- [The Citrix Licensing System](#)
- [How to Allocate NetScaler VPX Licenses](#)

Data governance

February 22, 2024

What is Console Advisory Connect?

Console Advisory Connect is a feature to enable seamless onboarding of NetScaler MPX, SDX, and VPX instances, and NetScaler Gateway appliances onto NetScaler Console service. This feature lets the NetScaler instance or NetScaler Gateway appliance automatically, securely connect with NetScaler Console service, and send system, usage, and telemetry data to it. Based on this data, you get insights and recommendations for your NetScaler infrastructure on NetScaler Console service.

By using the Console Advisory Connect feature and onboarding your NetScaler instances or NetScaler Gateway appliances to NetScaler Console service. You can also manage all your NetScaler and NetScaler Gateway assets whether on-premises or in the cloud. Also, you benefit from access to a rich set of visibility features that help in quick identification of performance issues, high resource usage, critical errors, and so on. NetScaler Console service provides a wide range of capabilities for your NetScaler instances and applications. For more information on NetScaler Console service, see [NetScaler Application Delivery Management Service](#)

Important

- NetScaler Gateway appliance also supports the Console Advisory Connect feature. For better ease, the NetScaler Gateway appliance isn't called explicitly in the consecutive sections.

What is NetScaler Console service?

NetScaler Console service is a cloud-based solution that helps you manage, monitor, orchestrate, automate, and troubleshoot your NetScaler instances. It also provides you analytical insights and curated machine learning based recommendations about NetScaler instances and about application health, performance, and security. For more information, see [NetScaler Console service Overview](#)

How the Console Advisory Connect is enabled?

Console Advisory Connect is enabled by default, after you install or upgrade NetScaler or Gateway to release 13.0 build 61.xx and above.

What data is captured using Console Advisory Connect?

The following details are captured using Console Advisory Connect:

- **NetScaler details**
 - Serial ID
 - Encoded Serial ID
 - Host ID
 - UUID
 - Management IP address
 - Host name
 - Version
 - Build type
 - Build
 - License type
 - Hypervisor
 - Deployment type(standalone/HA)
 - Platform type
 - Platform description
 - System ID
 - Modes enabled on ADC
 - Features enabled on ADC

- **License Information**

- Features licensed on NetScaler
- License number

- **Key usage metrics**

- System date time
- CPU usage percentage
- Management CPU percentage
- Throughput
- SSL new sessions
- SSL encryption throughput
- SSL decryption throughput
- System Uptime

- **Configuration**

- ns.conf file

Note

Before the Console Advisory Connect sends the `ns.conf` file from NetScaler appliance to the NetScaler Console service, it anonymizes the encrypted or hashed passwords. The Console Advisory Connect checks for `-encrypted` or `-passcrypt` parameters and replaces the associated encrypted or hashed value with `XXXX`. The Console Advisory Connect then encodes and compresses the `ns.conf` file, and sends it to the NetScaler Console service endpoint.

- **Critical error details**

- Hard disk failures
- SSL card failures
- Power Supply Unit (PSU) failures
- Flash drive failure
- Warm reboot
- Sustained memory usage above 90% or a memory leak
- Sustained rate limit drops

- **Usage of NITRO automation tools**

- Usage of automation tools such as Ansible, Terraform, or NITRO SDKs.

- **Diagnostics details**

Note:

The ADM diagnostic tool uses the following diagnostic details. For more information, see the [Diagnostic tool](#) topic in NetScaler Console.

- ADC CLI status
- ADC DNS status
- network connection status to ADM endpoint “adm.cloud.com”
- network connection status to ADM endpoint “agent.adm.cloud.com”
- network connection status to ADM trust service “trust.citrixnetworkapi.net”
- network connection status to ADM download site “download.citrixnetworkapi.net”

How the data is used?

By collecting the data, NetScaler can provide you with timely and in-depth insights about your NetScaler installations, which include the following:

- **Key metrics.** Details of key metrics about CPU, memory, throughput, SSL throughput, and highlight anomalous behavior on NetScaler instances.
- **Critical errors.** Any critical errors that might have occurred on your NetScaler instances.
- **Deployment advisory.** Identify NetScaler instances that are deployed in standalone mode but have high throughput and are vulnerable to a single point of failure.
- **Diagnostic tool.** When you onboard an ADC instance onto NetScaler Console, you might experience a few issues that prevent the ADC instance from successfully onboarding. To troubleshoot the issues, you can either manually use the diagnostic tool or see the diagnostic information in the ADM GUI. For more information, see [Diagnostic tool](#).

How long the collected data is kept?

Any data collected is kept for no longer than 13 months.

If you decide to terminate the use of the service by disabling the Console Advisory Connect feature from the NetScaler, any previously collected data is deleted after a period of 30 days.

Where the data is stored and how secure is it?

All data collected by Console Advisory Connect is stored in one of the three regions—United States, European Union, and Australia and New Zealand (ANZ). For more information, see [Geographical Considerations](#).

The data is stored securely with strict tenant isolation at the database layer.

How to disable Console Advisory Connect?

If you want to disable data collection through Console Advisory Connect, see [How to enable and disable Console Advisory Connect](#).

Introduction to Console Advisory Connect for NetScaler appliances

February 22, 2024

NetScaler Console service is a cloud-based solution that helps you manage, monitor, orchestrate, automate, and troubleshoot your NetScaler instances. It also provides analytical insights and curated machine learning based recommendations for your applications health, performance, and security. For more information, see [NetScaler Application Delivery Management Service](#).

Console Advisory Connect is a feature to enable seamless onboarding of NetScaler instances onto NetScaler Console service. This feature helps NetScaler instances and NetScaler Console service to function as a holistic solution, which offers customers multi fold benefits.

Console Advisory Connect feature lets the NetScaler instance automatically connect with the NetScaler Console service and send system, usage, and telemetry data to it. Based on this data, the NetScaler Console service gives you some insights and recommendations on your NetScaler and Gateway infrastructure like the following:

- Security advisory insight highlighting your vulnerable ADC appliances.
- Upgrade advisory insight highlighting ADC appliances that have reached or about to reach end of maintenance and end of life.
- Quick identification of performance issues, high resource usage, and critical errors.

To harness the power of NetScaler Console service, you can choose to onboard your NetScaler instances to NetScaler Console service. The onboarding process uses Console Advisory Connect, and makes the experience smooth and faster for you.

Points to note

- Console Advisory Connect is now available on NetScaler MPX, SDX, and VPX instances and NetScaler Gateway appliances.
- The initiative in NetScaler Console service that uses this Console Advisory Connect feature is Console Advisory Connect based low-touch onboarding. For more information, see [Low-touch onboarding of NetScaler instances using Console Advisory Connect](#).

- If Console Advisory Connect is enabled on an ADC instance, certain diagnostic details are automatically sent to ADM service.

For more information, see [Data governance](#).

Important

Console Advisory Connect fails to collect the probe data and cannot help in on-boarding the ADC appliance to ADM service if the following conditions are met:

- `NSinternal` user account is disabled.
- SSH public key is not set up.

To overcome the preceding scenario, Citrix recommends you follow any one of the following:

- Enable `internaluser` user account by using the `set ns param -internaluserlogin ENABLED`.
- Configure the public key authentication. For more information, see [Access a NetScaler appliance by using SSH keys and no password](#).

How does Console Advisory Connect support with NetScaler Console service?

Here is a high-level workflow of how the Console Advisory Connect feature on NetScaler interacts with NetScaler Console service.

1. Console Advisory Connect feature on NetScaler appliance auto connects with NetScaler Console service using a periodic probe request.
2. This request has system, usage and telemetry data, using which the NetScaler Console service gives you some insights and recommendations on your NetScaler infrastructure. Like; quick identification of performance issues, high resource usage, and critical errors.
3. You can view the insights and recommendations and decide to onboard your ADC instances to the NetScaler Console service to start managing your NetScaler instances.
4. When you decide to onboard, the Console Advisory Connect feature helps complete the on-boarding seamlessly.

What versions of NetScaler is Console Advisory Connect supported on?

Console Advisory Connect is supported on all NetScaler platforms and all appliance models (MPX, VPX, and SDX). Starting from NetScaler release 13.0 build 61.xx, Console Advisory Connect is enabled by default for NetScaler appliances.

How to enable Console Advisory Connect?

If you are an existing NetScaler customer, and upgrade to NetScaler release 13.0 build 61.xx, Console Advisory Connect is enabled by default as part of the upgrade process.

If you are a new NetScaler customer, installing NetScaler release 13.0 build 61.xx, Console Advisory Connect is enabled by default as part of the install process.

Note

Unlike the new NetScaler appliances, existing NetScaler appliances find the route through Citrix Insight Service (CIS) or Call Home.

How to enable and disable Console Advisory Connect?

You can enable and disable Console Advisory Connect from CLI, GUI, or NITRO API methods.

Using CLI

To enable the Console Advisory Connect by using the CLI

At the command prompt, type:

```
1 set adm parameter - admserviceconnect ENABLED
```

To disable the Console Advisory Connect by using the CLI

At the command prompt, type:

```
1 set adm parameter - admserviceconnect DISABLED
```

Important

If your NetScaler is on release 13.0 build 61.xx, the parameter name to enable or disable Console Advisory Connect is “autoconnect.” For example, to enable service connect, use the `set adm parameter - autoconnect ENABLED` command.

Using the GUI

To disable the Console Advisory Connect by using the NetScaler GUI

1. In a web browser, type the IP address of the NetScaler appliance (for example, <http://192.0.2.10>).
2. In **User Name** and **Password**, enter the administrator credentials.

3. Navigate to **System > Settings > Configure ADM Parameters**.
4. On the **Configure ADM Parameters** page, clear the **Enable Console Advisory Connect** dialog box, and click **OK**.

Using the NITRO API

You can disable Console Advisory Connect by using the **NITRO** command.

- In NetScaler release 13.0 build 61.xx, you can enable or disable the Console Advisory Connect by using the following command:

```
- curl -X PUT -H "Content-Type:application/json" http://192.0.2.10/nitro/v1/config/admparameter> -d '{ "admparameter":{ "autoconnect": "enabled" } }' -u nsroot:Test@1
```

- From NetScaler release 13.0 build 64.xx, the “autoconnect” parameter name is renamed to **admserviceconnect**. You can disable the Console Advisory Connect by using the following command:

```
- curl -X PUT -H "Content-Type:application/json" http://192.0.2.10/nitro/v1/config/admparameter -d '{ "admparameter":{ "admserviceconnect": "disabled" } }' -u nsroot:Test@1
```

Diagnostic tool

When you onboard an ADC instance onto NetScaler Console, you might experience a few issues that prevent the ADC instance from successfully onboarding. To troubleshoot the issues, you can either manually use the diagnostic tool or see the diagnostic information in the ADM GUI.

- For more information about the details captured using Console Advisory Connect, see [Data governance](#).
- For more information about the diagnostic tool, see [Diagnostic tool](#).

NetScaler Console built-in agent behavior

From NetScaler release 13.0 build 61.xx and higher, the NetScaler Console built-in agent available on NetScaler instances communicates with ADM service. It communicates without the need for manual initialization on the respective ADC instance. After communication with ADM service is established, the built-in agent stays evergreen by auto-upgrading itself to the latest software version regularly.

Previously, you had to initialize the built-in agent on the ADC instances, using `mastools` commands, to establish communication with ADM service and for regular auto-upgrades.

For more information, see [Configure the ADC built-in agent to manage instances](#).

References

For more information on Console Advisory Connect, see the following topics:

- Data governance: [Data governance](#).
- NetScaler Console service: [NetScaler Application Delivery Management Service](#).

Upgrade and downgrade a NetScaler appliance

August 7, 2023

NetScaler 14.1 offers new and updated features with increased functionality. A comprehensive list of enhancements is listed in the release notes accompanying the release announcement. Read the release notes document before you upgrade your software.

This section provides information about **upgrading and downgrading a NetScaler appliance** (MPX and VPX) firmware **by using the NetScaler GUI or CLI**.

You can also **use NetScaler Console to upgrade a NetScaler appliance**. For more information, see:

- [10 ways NetScaler Console service supports easier NetScaler upgrades](#)
- [Use NetScaler Console service to upgrade NetScaler instances](#)
- [Use NetScaler Console software to upgrade NetScaler instances](#)

For information about **upgrading a NetScaler SDX appliance**, see [Single Bundle Upgrade](#).

Before you begin

November 14, 2024

Before you start the upgrade or downgrade process, make sure you check the following:

- Evaluate your organization's support agreement. Document appliance serial number, support agreement, and contact details for support from Citrix technical support or the Citrix Authorized Partner.
- Time allocated for upgrading NetScaler appliances. Follow your organization's change control procedure. Allocate twice as much time to perform the upgrades. Allocate enough time to upgrade each of the NetScaler appliance.
- The NetScaler licensing system enforces Customer Success Services (CSS) membership license validation for NetScaler VPX appliances. Before you upgrade a NetScaler VPX appliance, ensure that the current CSS membership of the appliance is valid and has not expired.

Ensure that the current CSS membership expiration date is equal or newer than the CSS eligibility date of the NetScaler product version to be upgraded.

If the CSS membership expiration date is earlier than the CSS eligibility date, then the existing license does not work on the upgraded version of the NetScaler VPX appliance. This functionality can prevent unauthorized usage of the licenses. You must renew the CSS membership before you can upgrade the NetScaler VPX appliance.

For a list of NetScaler VPX releases and their CSS eligibility dates, see [NetScaler product Customer Success Services Eligibility Dates](#).

For more information about CSS, see [Customer Success Services](#).

- Citrix recommends the upgrade of one major release at a time. For example, if the NetScaler appliance is on release 13.0, and you want to upgrade to release 14.1, first upgrade the appliance to release 13.1, and then to release 14.1.
- The licensing framework and types of licenses. A software edition upgrade might require new licenses, such as:
 - upgrading from the standard edition to the advanced edition, or
 - the standard edition to the Premium edition, or
 - the advanced edition to the Premium edition.

Existing NetScaler licenses continue to work when you upgrade to version 14.1. For more information, see [Licensing](#).

- Check the [New and deprecated commands, parameters, and SNMP OIDs](#).
- Check the [NetScaler MPX Hardware Compatibility Matrix](#) and [NetScaler SDX Software Compatibility Matrix](#).
- If the NetScaler Gateway logon page is customized, then make sure that the UI theme is set to default.
- If you are upgrading LOM, review the [LOM Firmware Upgrade page](#).

- Download the NetScaler firmware from the [NetScaler Downloads](#). For the detailed steps to download the NetScaler firmware, see the [Download a NetScaler release package](#).
- Back up files. Perform a backup of the configuration file, customization file, certificates, monitor scripts, license files, and so on either manually or refer to the following documentation for backup using NetScaler CLI or GUI - [Backup and restore](#).
 - Refer to the following list for other common customized files for backup.
 - * `/nsconfig/monitors/*.pl`
 - * `/nsconfig/rc.netscaler`
 - Back up and delete the customization folder. The folder is usually in the path `/var/customizations`. An example of customization is a logon page with a logo. After you have copied the customizations folder, you have to delete it from the NetScaler appliance, before you upgrade the appliance. Upgrading with customization in place might cause some issues.

Important:

We recommend that you review the backup procedures first and have an action plan in case the update does not complete on NetScaler.

- Verify that there is adequate space in the `/var` and `/flash` directory for the NetScaler appliance before performing an upgrade. The `/var` directory requires 7 GB of free space (1 GB for the upgrade bundle, 2 GB for extraction, and 4 GB for the upgrade process)
The `/flash` directory requires anywhere between 140 MB to 160 MB space to copy the new kernel. Therefore, ensure that there is at least 250 MB free space available.
For more information on clearing out the disk space in `/var` see, [How to free space on /var directory for logging issues with a NetScaler appliance](#).
For more information on clearing out the disk spaces in `/flash` see, <https://support.citrix.com/article/CTX133587>.
- Verify that there are no invalid configurations before performing an upgrade using the preconfiguration check tool. This tool is also run by default during the upgrade process and as part of the `installns` script. To avoid upgrade failures due to invalid configuration, it is recommended to run the preconfiguration check tool before upgrade. For more information, see [Preconfiguration check tool](#).

If there are configurations related to classic policies, see [Upgrade considerations for configurations with classic policies](#) and [Classic Policy Deprecation FAQs](#).

If there are any invalid configurations, use the `nspepi` tool for converting the invalid configurations to valid configurations. For information about the `nspepi` tool, see [Converting policy expressions using NSPEPI tool](#).

Note:

If you select option Y in the `installns` script for upgrading the build, the preconfiguration check is not performed.

- Validate the integrity of the NetScaler appliance. If you have a NetScaler hardware appliance, Citrix highly recommends running `fsck` for running a disk check and validating the integrity of the NetScaler hard drive. In the event of an error, reset the hard disk drive and repeating the disk check command. If the error message reappears, contact NetScaler support to further investigate the issue.
 - Validate the disk integrity of the hard drive using a `fsck` command. For more information, see [CTX122845](#).
 - Validate the integrity of NetScaler using the diagnostic bundle files and upload the logs to Citrix Insight Service for analysis. For more information, see [How to collect a technical support bundle](#).
- Check the NetScaler VPX [Support matrix and usage guidelines](#).
- Check the [FAQ](#) section.
- Verify the upgrading procedures with a test environment.

Upgrade considerations for configurations with classic policies

July 24, 2024

Classic policies are deprecated from NetScaler release 12.0 build 56.20. Starting with release 13.1, classic policy support is removed from some of the features. To know the complete list of features or commands that aren't supported from release 13.1 release, see **Table 2** in [Notice of Status Change Announcement for NetScaler Classic Policy Based Features and Functionalities](#).

As a prerequisite for upgrading to release 13.1 or later, we recommend you to convert the classic policies to advanced policies for the features that are supported by the NSPEPI tool. To know the features that are supported by the NSPEPI tool, see [Commands or features handled by the nspepi conversion tool](#). If you do not convert to advanced policies before the upgrade, then the upgrade fails due to invalid configuration.

Important:

Before you upgrade to release 13.1 or later, we recommend you to run the preconfiguration check tool. This tool ensures that your configuration does not contain commands related to

the deprecated or removed features. If there are any commands related to the deprecated or removed features, the tool throws an error and the configuration might be lost. We recommend you to download the latest version of the preconfiguration check tool from the public GitHub link - <https://github.com/citrix/ADC-scripts/tree/master/nspepi>.

For more information, see the [Preconfiguration check tool before upgrade](#).

If there are any errors as part of the preconfiguration check, we recommend you to use the `nspepi` tool to convert the invalid configurations to valid configurations. Download the latest version of the `nspepi` tool from the public GitHub link - <https://github.com/citrix/ADC-scripts/tree/master/nspepi>. For more information on converting policy expressions using the `nspepi` tool, see [Converting policy expressions using NSPEPI tool](#).

If you miss converting the classic policies before the upgrade, you can choose to convert to advanced policies during the upgrade. As part of the upgrade, you can choose one of the options described in the following table while running the `./installns` command.

Option	Description
No option	If there are any errors as part of the preconfiguration check, the installation stops. You must convert classic policies to advanced policies to proceed with the upgrade process.
-M	NSPEPI tool is run as part of the installation and converts classic policies to advanced policies.
-Y	This option isn't recommended. In this option, the preconfiguration check is skipped and therefore any valid configuration might get lost.

To convert classic policies to advanced policies during the upgrade, select the `-M` option. The `-M` option triggers the NSPEPI tool and updates the existing `ns.conf` file with the modified configuration. The old configuration is present at `/nsconfig/ns.conf_old` for future reference.

```
1 ./installns -M
```

If you find any error during the advanced policy conversion, contact NetScaler support.

The `nspepi` tool does not handle the conversion for a few commands or features. See [Commands or features not handled by the nspepi conversion tool](#) for the complete list.

Note:

If you have classic policies and want to convert them to advanced policies during the upgrade, then you can use the regular upgrade procedure (HA or Cluster or Standalone setup) but use the

“-M” option with `installns` command.

If you want to convert the configuration before the upgrade, then perform the following steps for each configuration:

1. Run the `nspepi` tool on Citrix ADC release 12.1 or 13.0 to convert the `ns.conf` file. The NSPEPI tool generates two files with prefixes `new_` and `warn_`. The file with the `new_` prefix contains the converted configuration and the file with the `warn_` prefix contains the warnings and errors.
2. Check the file with the `warn_` prefix and fix errors (if any).
3. Test the converted configuration. Apply the converted configuration using one of the following options:
 - a) Run the `clear config -f basic` command and then source the converted configuration by running the `source /nsconfig/new_ns.conf` command.
 - b) Remove the classic commands manually (by unbinding and removing policies) and then source the converted configuration by running the `source /nsconfig/new_ns.conf` command.

Note:

You might see “Resource already exists” errors for the configurations that aren’t cleared using the `clear config -f basic` command. You can ignore these errors.

4. Save the configuration.

After successfully converting invalid configurations to valid configurations, verify if there are any other prerequisites and then proceed to upgrade. For more information, see [Upgrade and downgrade a NetScaler appliance](#).

Upgrade considerations for customized configuration files in the `/etc` directory

July 5, 2024

The following configuration files are supported to be modified in the `/etc` directory:

- `inetd.conf`
- `syslog.conf`
- `newsyslog.conf`
- `ntp.conf`
- `crontab`

- `host.conf`
- `hosts`
- `ttys`
- `sshd_config`
- `httpd.conf`
- `monitrc`
- `rc.conf`
- `ssh_config`
- `localtime`
- `issue`
- `issue.net`
- `ldap.conf`
- `motd`

Note:

New files might be added to the above list depending on the NetScaler build running on the appliance. You can display an updated list of files by running the following shell command in the NetScaler command line interface:

```
grep NSETC= /etc/rc
```

If you have modified any of the configuration files in the `/etc` directory and copied it to the `/nsconfig` directory, to maintain persistency, the NetScaler appliance creates a symlink in `/etc` pointing to the file in `/nsconfig`.

For example: `/etc/httpd.conf -> /nsconfig/httpd.conf`

A release package might contain its own version of the configuration files in the `/etc` directory. These configuration files include important updates that are required for the NetScaler appliance to properly function. Upgrading a NetScaler appliance to a release replaces the configuration files in the `/etc` directory with the configuration files containing the release updates.

Consider an example of a customized configuration file, `example.conf`, which is present in the `/etc` directory. The `example.conf` file is copied to the `/nsconfig` directory to maintain persistency. The NetScaler appliance creates a symlink in `/etc` pointing to the file in `/nsconfig`: `/etc/example.conf -> /nsconfig/example.conf`

Also, a release package includes its own version of `example.conf`, which contains important updates. The following behavior is observed when you upgrade the NetScaler appliance to the release:

Because the symlink `/etc/example.conf` is already present, the NetScaler appliance does not place the release package copy of the `example.conf` in the `/etc` directory during the upgrade process.

As the release package copy of `example.conf` contains important updates, the absence of it in the `/etc` directory can cause the NetScaler appliance to fail or to not properly function.

Steps to preserve upgrade changes and customization

To ensure that both release updates and your customizations are not lost, perform the following steps:

- Pre-upgrade steps:
 - [Back up customized file before upgrade](#)
 - [Remove persistency of customized file before upgrade](#)
- Post-upgrade steps:
 - [Apply customizations to upgraded file and add persistency after upgrade](#)

Important:

Do NOT directly replace your customized file in the `/etc` folder. Directly replacing a `/etc` file with the back-up customized file removes any release updates added to the file during the upgrade process.

Back up customized file before upgrade

Take a backup of the customized files present in the `/nsconfig` directory before upgrading the appliance.

Create a `/var/nsconfig_backup` directory and move the customized files to this directory. That is, move any files that you modified in the `/etc` directory and copied to `/nsconfig` by running the following command at the shell prompt:

```
1 mv /nsconfig/<filename> /var/nsconfig_backup/
```

Example:

```
1 mv /nsconfig/httpd.conf /var/nsconfig_backup/
```

Remove persistency of customized file before upgrade

Delete the `/etc` symlinks that are pointing to the `/nsconfig` files before upgrading the appliance.

1. Check the existing symlinks in the `/etc` directory by running the following command at the shell prompt:

```
1 ls -la /etc
```

2. Delete a `/etc` symlink pointing to a `/nsconfig` file by running the following command at the shell prompt:

```
1 unlink /etc/<filename>
```

Example:

```
1 unlink /etc/httpd.conf
```

3. Verify that the symlink is removed by running the following command at the shell prompt:

```
1 cat /etc/<filename>
```

Example:

```
1 cat /etc/httpd.conf
```

This command does not display any content if the symlink is removed.

Apply customizations to upgraded file and add persistency after upgrade

If you have taken a backup of any modified `/nsconfig` config file to the `/var/nsconfig_backup`, do the following after upgrading the appliance:

1. Compare the file present in the `/var/nsconfig_backup` and the `/etc` directories. Manually add the appropriate changes to the `/etc` file already containing the release updates.

Important:

Directly replacing the `/etc` file with the `/var/nsconfig_backup` file removes any release updates added to the file during the upgrade process. This removal of updates can cause the related NetScaler functionalities to fail or to not work properly.

2. To maintain persistency, copy the updated file present in the `/etc` directory to the `/nsconfig` directory by running the following command at the shell prompt:

```
1 cp /etc/<filename> /nsconfig/
```

Example:

```
1 cp /etc/httpd.conf /nsconfig/
```

3. Repeat the above two steps for each customized file present in the `/var/nsconfig_backup` directory.
4. Restart the appliance to put the changes into effect.

Upgrade considerations - SNMP configuration

May 2, 2023

The timeout parameter for an SNMP alarm is an internal option that has no impact on the alarm configuration.

Timeout parameter might appear in the SNMP alarm configurations in the running configuration (sh running) and the saved configuration (ns.conf) even if you have not made any changes to these SNMP alarm configurations.

On upgrading to a release build with the fix for the timeout setting issue, the SNMP configurations are erroneously reset to default values.

The following SNMP alarms (if configured) are impacted during an upgrade:

- APPFW-BUFFER-OVERFLOW
- APPFW-COOKIE
- APPFW-CSRF-TAG
- APPFW-DENY-URL
- APPFW-FIELD-CONSISTENCY
- APPFW-FIELD-FORMAT
- APPFW-POLICY-HIT
- APPFW-REFERER-HEADER
- APPFW-SAFE-COMMERCE
- APPFW-SAFE-OBJECT
- APPFW-SQL
- APPFW-START-URL
- APPFW-VIOLATIONS-TYPE
- APPFW-XML-ATTACHMENT
- APPFW-XML-DOS
- APPFW-XML-SCHEMA-COMPILE
- APPFW-XML-SOAP-FAULT
- APPFW-XML-SQL
- APPFW-XML-VALIDATION
- APPFW-XML-WSI
- APPFW-XML-XSS
- APPFW-XSS
- CLUSTER-BACKPLANE-HB-MISSING
- CLUSTER-NODE-HEALTH
- CLUSTER-NODE-QUORUM
- CLUSTER-VERSION-MISMATCH

- COMPACT-FLASH-ERRORS
- CONFIG-CHANGE
- CONFIG-SAVE
- HA-BAD-SECONDARY-STATE
- HA-NO-HEARTBEATS
- HA-SYNC-FAILURE
- HA-VERSION-MISMATCH
- HARD-DISK-DRIVE-ERRORS
- HA-STATE-CHANGE
- HA-STICKY-PRIMARY
- PORT-ALLOC-FAILED
- SYNFLOOD

These SNMP alarms configurations are impacted when you upgrade the NetScaler to the following release builds:

- Release 11.1 build 61.2 or later
- Release 12.0 build 61.0 or later
- Release 12.1 build 30.1 or later
- Release 13.0 build 51.4 or later

Example

Let's consider an example of CLUSTER-NODE-HEALTH SNMP alarm.

```
1 CLUSTER-NODE-HEALTH SNMP alarm is set up by using the NetScaler command
  line:
2
3 > set snmp alarm CLUSTER-NODE-HEALTH -time 111 -state DISABLED -
  severity Major
4
5 > save config
```

This SNMP alarm configuration appears in the saved configuration file (`ns.conf`) as:

```
1 set snmp alarm CLUSTER-NODE-HEALTH -time 111 -state DISABLED -severity
  Major -timeout 86400
```

During an upgrade to any of the release builds mentioned above, the following error appears in `ns.log` file:

```
1 May 23 09:14:46 <local0.err> ns nsconfigd: __init_config_filter(): (
  null) line 0: No such argument [-timeout]>> set snmp alarm CLUSTER-
  NODE-HEALTH -time 111 -state DISABLED -severity Major -timeout
  86400.
```

After the upgrade, the SNMP alarm configurations are reset to the default values.

Workaround

Use one of the following workarounds:

- Before the upgrade, remove the timeout setting from the SNMP configurations in the saved configuration file (ns.conf).
- After the upgrade, reconfigure the SNMP alarms without the timeout parameter.

Download a NetScaler release package

May 2, 2023

Complete the following steps to download a NetScaler release package:

1. Open [NetScaler Downloads](#) page in a Web browser.
2. On the NetScaler Downloads page, expand the **NetScaler release** that you want to update to.
3. Expand one of the appropriate categories, and click the NetScaler build link. For example, for downloading a version of NetScaler firmware, expand **Firmware**, and click the NetScaler build that you want to download.
4. On the selected NetScaler build page, expand the **Build** section, click **Download File** to download the NetScaler build package.

Note:

The checksum is provided to ensure that you match the downloaded build package with the actual package which is hosted on the website. Checksum is an important check to ensure that you have the correct bits.

Upgrade a NetScaler standalone appliance

July 30, 2024

Before upgrading the system software, make sure that you read the [Before you begin](#) section and complete the prerequisites such as backing up the necessary files and downloading the NetScaler firmware.

Upgrade a NetScaler standalone appliance by using the GUI

Follow these steps to upgrade a standalone NetScaler to release 14.1 by using the GUI.

1. In a web browser, type the IP address of the NetScaler, for example `http://10.102.29.50`.
2. In User Name and Password, type the administrator credentials (nsroot/nsroot) and then click **Log On**.
3. Navigate to **System** and click **System Upgrade**.
4. From the **Choose File** menu choose the appropriate option: **Local** or **Appliance**. If you want to use the Appliance option, the firmware needs to be uploaded to the NetScaler first. You can use any file transfer method such as WinSCP to upload the NetScaler firmware to the appliance.
5. Select the correct file and click **Upgrade**.
6. Follow the instructions to upgrade the software.
7. When prompted, select **Reboot**.

After the upgrade, close all browser instances and clear your computer's cache before accessing the appliance.

Upgrade a NetScaler standalone appliance by using the CLI

Follow these steps to upgrade a standalone NetScaler to release 14.1 by using the CLI:

In the following procedure, <release> and <releasenum> represent the release version you are upgrading to, and <targetbuildnumber> represents the build number that you are upgrading to. The procedure includes optional steps to avoid losing any updates that are pushed to the /etc directory during the upgrade.

1. Use an SSH client, such as PuTTY, to open an SSH connection to the appliance.
2. Log on to the appliance by using the administrator credentials. Save the running configuration. At the prompt, type:

```
save config
```
3. Switch to the shell prompt by running the following command:

```
shell
```
4. Create a copy of the ns.conf file. At the shell prompt, type:
 - `cd /nsconfig`
 - `cp ns.conf ns.conf.NS<currentreleasenum><currentbuildnumber>`

You should backup the configuration file to another computer.

5. IMPORTANT:

It is important that both the upgrade changes and your customizations are applied to an upgraded NetScaler appliance. So, if you have customized configuration files in the `/etc` directory, perform the **pre-upgrade steps** in [Upgrade considerations for customized configuration files](#)

6. Create a location for the installation package. At the shell prompt type:

- `cd /var/nsinstall`
- `cd <releasenum>`

Note:

If the desired release number directory is not present, create one using the following command:

```
mkdir <releasenum>
```

Example:

```
mkdir 14.1
```

- `mkdir build_<targetbuildnum>`
- `cd build_<targetbuildnum>`

7. Copy the already downloaded NetScaler firmware to the build directory that you have created in the above step, by using any file transferring method such as WinSCP. See the [Before You Begin](#) section for more information about downloading the NetScaler firmware.

8. Extract the contents of the installation package. Example:

```
tar -xvzf build-14.1-37.2_nc_64.tgz
```

9. Run the `installns` script to install the new version of the system software.

```
./installns
```

10. When prompted, restart the NetScaler.

11. IMPORTANT:

It is important that both the upgrade changes and your customizations are applied to an upgraded NetScaler appliance. So, if you have customized configuration files in the `/etc` directory, perform the **post-upgrade steps** in [Upgrade considerations for customized configuration files](#)

Below is an example of NetScaler firmware upgrade.

```
1 login: nsroot
2
3 Password: nsroot
4
5 Last login: Mon Apr 17 15:05:05 2018 from 10.252.243.134
6
7 Done
8
9 > save config
10
11 > shell
12
13 Last login: Mon Apr 17 15:05:05 2018 from 10.252.243.134
14
15 root@NSnnn# cd /var/nsinstall
16
17 root@NSnnn# cd 14.1
18
19 root@NSnnn# mkdir build_43.1
20
21 root@NSnnn# cd build_43.1
22
23 root@NSnnn# ftp <FTP server IP address>
24
25 ftp> mget build-14.1-41.1_nc.tgz
26
27 ftp> bye
28
29 root@NSnnn# tar xzvf build-14.1-41.1_nc.tgz
30
31 root@NSnnn# ./installns
32
33 installns version (14.1-41.1) kernel (ns-14.1-41.1_nc.gz)
34
35 ...
36
37 Copying ns-14.1-41.1_nc.gz to /flash/ns-14.1-41.1_nc.gz ...
38
39 ...
40
41 Installation has completed.
42
43 Reboot NOW? [Y/N] Y
```

How to upgrade a standalone NetScaler appliance by using the CLI

This is an embedded video. [Click the link to watch the video](#)

Upgrade a NetScaler standalone appliance by using NITRO API

To use NITRO API to upgrade or downgrade a NetScaler, see [Automate NetScaler Upgrade and Downgrade with a Single API](#).

Verify entities status on the NetScaler appliance after upgrading

After the NetScaler appliance is upgraded, verify the status of the following entities:

- Virtual servers are in UP state
- Monitors are in UP state
- GSLB sites synchronise without any issues
- All certificates are present on the appliance
- All the licenses are present on the appliance

Check and install NetScaler 14.1 software update

Update the NetScaler software when an update is available, for better performance. A NetScaler update can include feature improvements, performance fixes, or enhancements. Make sure you read the release notes to see what fixes and enhancements are available in the update. To check and install a software update, do the following.

1. In the NetScaler home page, click **Check for Update** from the **nsroot** menu at the top right corner.
2. In the **Latest System Software Updates Available** page, check the available software update that you can install.
3. Click **Download** to download the installation package from the [NetScaler download](#) website.
4. After you have downloaded the software package, install the update through either CLI or GUI procedure.

Note

The **Check for Update** link is accessible only if you log into the GUI through HTTP protocol and not through HTTPS protocol.

Related resources

The following resources provide related information about upgrading or downgrading a NetScaler appliance:

- Video tutorial - [How to upgrade your NetScaler using CLI](#)

Downgrade a NetScaler standalone appliance

July 24, 2024

You can downgrade to any earlier release on a standalone NetScaler by using the CLI.

Note:

Loss in configuration might occur when downgrading. Compare the configurations before and after the downgrade, and then manually reenter any missing entries.

Downgrade a NetScaler appliance by using the CLI

Follow the steps given below to downgrade a NetScaler standalone appliance running release 14.1 to an earlier release.

In this procedure, `<release>` and `<releasenum>` represent the release version you are downgrading to, and `<targetbuildnumber>` represents the build number that you are downgrading to.

1. Open an SSH connection to the NetScaler by using an SSH client, such as PuTTY.
2. Log on to the NetScaler by using the administrator credentials. Save the running configuration. At the prompt, type:

```
save config
```

3. Create a copy of the ns.conf file. At the shell prompt, type:

- a) `cd /nsconfig`
- b) `cp ns.conf ns.conf.NS<currentbuildnumber>`

You should backup a copy of the configuration file on another computer.

4. Copy the `<releasenum>` configuration file (`ns.conf.NS<releasenum>`) to `ns.conf`. At the shell prompt, type:

```
1 cp ns.conf.NS<releasenum> ns.conf
```

Note:

`ns.conf.NS<releasenum>` is the backup configuration file that is automatically created when the system software is upgraded from release version `<releasenum>` to the current release version.

There may be some loss in configuration when downgrading. After the appliance restarts, compare the configuration saved in step 3 with the running configuration, and make any

adjustments for features and entities configured before the downgrade. Save the running configuration after making the changes.

Important:

If routing is enabled, perform step 5. Otherwise, skip to step 6.

5. If routing is enabled, the ZebOS.conf file contains the configuration. At the shell prompt, type:

```
1 cd /nsconfig
2 cp ZebOS.conf ZebOS.conf.NS
3 cp ZebOS.conf.NS<targetreleasenum> ZebOS.conf
```

6. Change directory to `/var/nsinstall/<releasenum>nsinstall`, or create one if it does not exist.
7. Change directory to `build_<targetbuildnum>`, or create one if it does not exist.
8. Download or copy the installation package (`build-<release>-<targetbuildnum>.tgz`) to this directory and extract the contents of the installation package.
9. Run the `installns` script to install the new version of the system software. The script updates the `/etc` directory.

Notes:

- **NetScaler version 14-1 build 12.35 or earlier:** You might see a prompt to load the configuration file if the configuration file for the build you are downgrading to does not exist. You can select a different configuration file from the list and downgrade the system software.
- **NetScaler version 14-1 build 17.x or later:** The downgrade fails if the configuration file for the build you are downgrading to does not exist. You must use the `./installns -a` command to select the configuration file and then downgrade the system software manually.

If the free space available on the flash drive is insufficient to install the new build, the NetScaler aborts the installation. Manually clean up the flash drive and restart the installation.

Example:

```
1 login: nsroot
2
3 Password: nsroot
4
5 Last login: Mon Apr 24 02:06:52 2017 from 10.102.29.9
6
7 Done
8
9 > save config
```

```
10
11 > shell
12
13 root@NSnnn# cp ns.conf.NS10.5 ns.conf
14
15 root@NSnnn# cd /var/nsinstall
16
17 root@NSnnn# mkdir 10.5nsinstall
18
19 root@NSnnn# cd 10.5nsinstall
20
21 root@NSnnn# mkdir build_57
22
23 root@NSnnn# cd build_57
24
25 root@NSnnn# ftp 10.102.1.1
26
27 ftp> mget build-10.5-57_nc.tgz
28
29 ftp> bye
30
31 root@NSnnn# tar -xzvf build-10.1-125_nc.tgz
32
33 root@NSnnn# ./installns
34
35 installns version (10.5-57) kernel (ns-10.5-57.gz)
36
37 ...
38
39 ...
40
41 ...
42
43 Copying ns-10.5-57.gz to /flash/ns-10.5-57_nc.gz ...
44
45 Changing /flash/boot/loader.conf for ns-10.5-57 ...
46
47
48
49 Installation has completed.
50
51
52
53 Reboot NOW? [Y/N] Y
```

Upgrade a high availability pair

November 8, 2023

One of the requirements of NetScaler in a high availability setup is to install the same NetScaler software version (Release) on both the primary and secondary nodes. Therefore, ensure that the software is upgraded on both nodes.

You can follow the same procedure as upgrading a standalone instance to upgrade both the nodes in a high availability pair, although other considerations apply to upgrading a high availability pair.

Before you start a NetScaler firmware upgrade on an HA pair, read the prerequisites mentioned in the [Before you begin](#) section. Also, you need to consider a few HA-specific points.


Points to note

IMPORTANT:

It's important that both the upgrade changes and your customizations are applied to an upgraded NetScaler. Therefore, if you have customized configuration files in the `/etc` directory, see [Upgrade considerations for customized configuration files](#) before you continue with the upgrade.

- Upgrade the secondary node first and then the primary node. You can upgrade NetScaler using the CLI or GUI.

- 1 Verify NetScaler software is the same on both the nodes

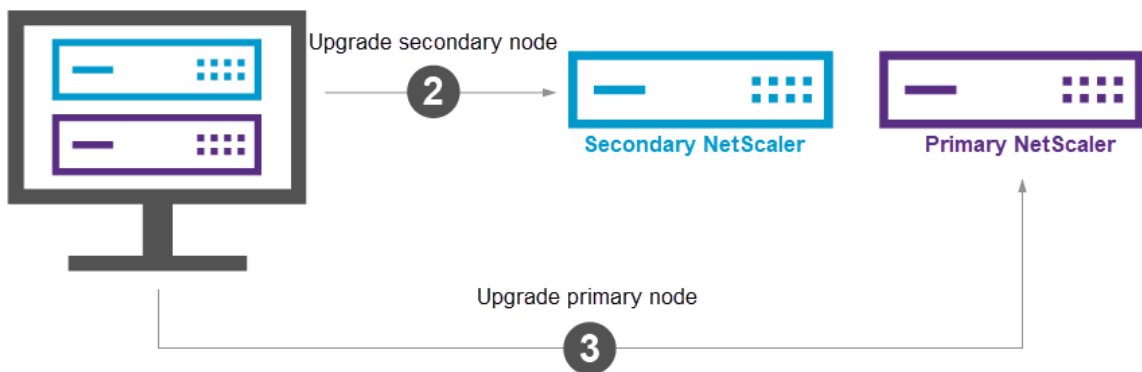

- If both the nodes in an HA setup are running different NetScaler software versions, the following functionalities are disabled:
 - HA config synchronization
 - HA command propagation
 - HA synchronization of state service information
 - Connection mirroring (connection failover) of sessions
 - HA synchronization of persistence sessions information

Notes:

The functionality behavior changes as follows when both the nodes are running different builds (for example 8.x and 4.x) of the same NetScaler software release (for example 14.1):

- These functionalities are disabled if both the builds have different internal HA versions.
- These functionalities work fine if both the builds have the same internal HA versions.

Refer to the New internal HA version in NetScaler builds section to check if the internal HA version has changed in a NetScaler build.

- Synchronization of the files in the `All` mode of the `sync HA files` command works successfully if the two nodes in an HA configuration are running different NetScaler software versions, or the two nodes are running different builds of the same version. For more information, see [synchronizing Configuration Files in High Availability Setup](#).

New internal HA version in NetScaler builds

The following table lists the NetScaler builds in which the internal HA version has changed:

Release 14.1	Release 13.1	Release 13.0	Release 12.1
Build 12.30	Build 50.23	Build 92.21	Build 65.35
Build 8.50	Build 49.15	Build 90.12	Build 62.27
Build 4.42	Build 48.47	Build 87.9	Build 61.19
	Build 45.64	Build 86.17	Build 60.19
	Build 37.38	Build 85.19	Build 59.16
	Build 33.54	Build 84.11	Build 58.15
	Build 30.52	Build 82.45	Build 57.18
	Build 27.59	Build 79.64	Build 56.22
	Build 24.38	Build 76.31	Build 55.24
	Build 21.50	Build 71.44	Build 50.31
	Build 17.42	Build 67.43	Build 49.37
	Build 12.51	Build 64.35	
	Build 9.60	Build 61.48	
	Build 4.44	Build 58.32	


Release 14.1	Release 13.1	Release 13.0	Release 12.1
		Build 52.24	
		Build 41.28	

Upgrade a high availability pair by using the CLI

The upgrade process includes the following steps:

1. Upgrade software on the secondary node
2. Upgrade software on the primary node

The following illustration shows the procedure to upgrade software on the node:

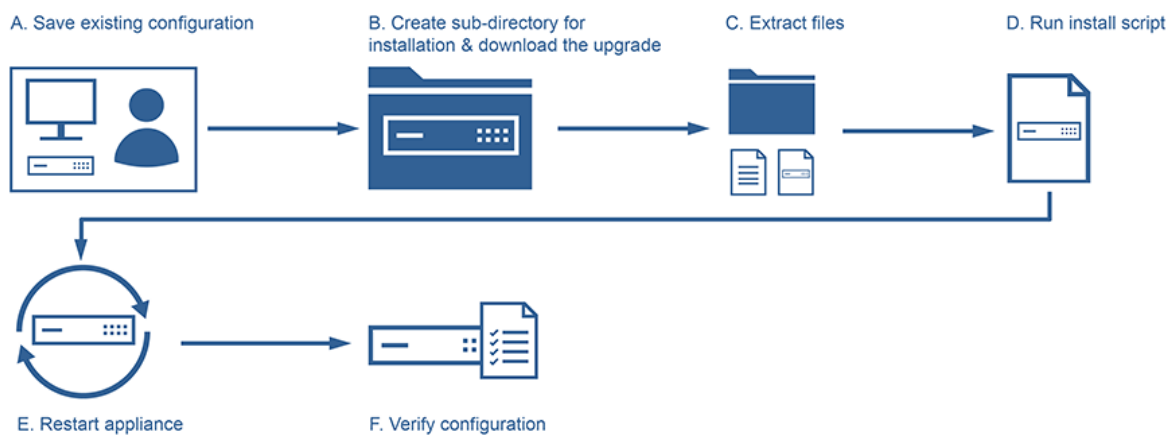

Upgrade software on the secondary node

1. Upgrade the secondary node as described in [Upgrade a NetScaler standalone appliance using the CLI](#).
2. Log in to the NetScaler CLI using the `nsroot` credentials.
3. Run the following command to display the state of NetScaler.

```
1 show ha node
```

The command output must show that the node is a secondary node and synchronization is disabled.

4. Run the following command to perform a force failover and takeover as primary node:

```
1 force failover
```

5. Verify that the node is now a primary node.

Here's a sample configuration in the new primary node.

```
1 login: nsroot
2 Password: nsroot
3 Last login: Monday Apr 17 08:37:26 2017 from 10.102.29.9
4 Done
5 show ha node
6      2 nodes:
7 1)   Node ID:      0
8      IP:          10.0.4.2
9      Node State: UP
10     Master State: Primary
11     ...
12     Sync State: AUTO DISABLED
13     Propagation: AUTO DISABLED
14     ...
15 Done
```

Upgrade software on the primary node

Note:

After completing the “Upgrade software on the secondary node” procedure, the original primary node is now a secondary node.

1. Upgrade the secondary node as described in [Upgrade a NetScaler standalone appliance using the CLI](#).
2. Log in to the NetScaler CLI using the `nsroot` credentials.
3. Run the following command to display the state of the NetScaler.

```
1 show ha node
```

The command output must show that the node is a secondary node and the status of the node as UP.

4. Run the following command to perform a force failover to ensure that the node is a primary node:

```
1 force failover
```

5. Verify that the node is a primary node.

Here's an example configuration of the new primary node and the new secondary node.

```
1 show ha node
2      Node ID:      0
3      IP:          10.0.4.11
```

```
4 Node State: UP
5 Master State: Primary
6 ...
7 ...
8 INC State: DISABLED
9 Sync State: ENABLED
10 Propagation: ENABLED
11 Enabled Interfaces : 1/1
12 Disabled Interfaces : None
13 HA MON ON Interfaces : 1/1
14 ...
15 ...
16 Local node information
17 Critical Interfaces: 1/1
18 Done
19
20 Show ha node
21 Node ID: 0
22 IP: 10.0.4.2
23 Node State: UP
24 Master State: Secondary
25 ..
26 ..
27 INC State: DISABLED
28 Sync State: SUCCESS
29 Propagation: ENABLED
30 Enabled Interfaces : 1/1
31 Disabled Interfaces : None
32 HA MON ON Interfaces : 1/1
33 . .
34 . .
35 Local node information:
36 Critical Interfaces: 1/1
37 Done
```

Upgrade a high availability pair by using the GUI

Follow these steps to upgrade a NetScaler pair in a high availability setup, by using the ADC GUI. Consider an example of a high availability setup of NetScaler instances NETSCALER-A (primary) and NETSCALER-B (secondary).

1. **Upgrade the secondary node.** Log in to the secondary node GUI using administrator credentials, and upgrade the node as described in [Upgrade a NetScaler standalone appliance by using the GUI](#).
2. **Force failover.** Perform a force failover on the secondary node using the GUI as described in [Forcing a node to fail over](#).

After failover operation, the secondary node takes over as primary and the primary node becomes the new secondary node. After the failover operation in the example HA setup:

- NETSCALER-B becomes the new primary
 - NETSCALER-A becomes the new secondary
3. **Upgrade the original primary node (new secondary node).** Log in to the new secondary node GUI (NETSCALER-A) and upgrade the node as described in [Upgrade a NetScaler standalone appliance by using the GUI](#).
 4. **Force failover.** Perform a force failover on the new secondary node (NETSCALER-A) using the GUI as described in [Forcing a node to fail over](#).

After this second failover operation, the state of both the nodes return to the same state as before starting the HA upgrade operation. After the failover operation in the example HA setup:
 - NETSCALER-A becomes primary
 - NETSCALER-B becomes secondary
 5. **Verify the upgrade process.** Log in to the GUI of both the nodes. Navigate to **System > High Availability**, on the details page, verify the HA state of both the nodes. Also, verify the upgraded version details displayed on the top pane of the GUI.

How to upgrade a high availability setup by using the GUI

[This is an embedded video. Click the link to watch the video](#)

In Service Software Upgrade support for high availability for performing zero downtime upgrade

January 17, 2024

During a regular upgrade process in a high availability (HA) setup, at some point, both nodes run different software builds. These two builds can have the same or different internal HA version numbers.

If both the builds have different HA version numbers, connection failover (even if it is enabled) for existing data connections is not supported. In other words, all existing data connections are lost, which leads to downtime.

To address this issue, in Service Software Upgrade (ISSU) can be used for HA set-ups. ISSU introduces a migration functionality, which replaces the force failover operation step in the upgrade process. The migration functionality takes care of honoring the existing connections and includes the force failover operation.

After a migration operation is performed, the new primary node always receives traffic (request and response) related to the existing connections but steers them to the old primary node. The old primary node processes the data traffic and then sends them directly to the destination.

How the enhanced ISSU works

The regular upgrade process in an HA setup consists of the following steps:

1. **Upgrade the secondary node.** This step includes software upgrade of the secondary node and restart of the node.
2. **Force Failover.** Running the force failover makes the upgraded secondary node to primary, and the primary node to secondary.
3. **Upgrade the new secondary node.** This step includes software upgrade of the new secondary node and restart of the node.

During the time frame between step 1 and step 3, both nodes run different software builds. These two builds can have the same or different internal HA versions.

If both the builds have different HA version numbers, connection failover (even if it is enabled) for existing data connections is not supported. In other words, all existing data connections are lost, which leads to downtime.

The ISSU upgrade process in an HA setup consists of the following steps:

1. **Upgrade the secondary node.** This step includes software upgrade of the secondary node and restart of the node.
2. **ISSU migration operation.** The step includes the force failover operation and takes care of the existing connections. After you perform the migration operation, the new primary node always receives traffic (request and response) related to the existing connections but steers them to the old primary node through the configured SYNC VLAN (if configured) in the GRE tunnel. The old primary node processes the data traffic and then sends them directly to the destination. The ISSU migration operation is completed when all the existing connections are closed.
3. **Upgrade the new secondary node.** This step includes software upgrade of the new secondary node and restart of the node.

Before you begin

Before you start performing the ISSU process in an HA setup, go through the following pre-requisites, limitations, and points to note:

- Ensure that the capacity of the interface, where the MAC address of the peer NSIP address is resolved, is equal to or greater than the capacity of the client or server interface. For example, consider the following scenarios:
 - The MAC address of the peer NSIP address is resolved on the interface 1/x, and the data interface is 10/x. In this scenario, you must not perform ISSU because the capacity of the interface on which the MAC address is resolved is less than that of the data interface.
 - The MAC address of the peer NSIP address is resolved on the interface 10/x, and the data interface is 10/x. In this scenario, you can perform ISSU because the capacity of the interface on which the MAC address is resolved is the same as the data interface.
- Ensure the `SYNC VLAN` is configured on both the nodes of the HA setup. For more information, see [Restricting high availability synchronization traffic to a VLAN](#).

Note:

SYNC VLAN configuration is supported only in L2 HA. It is not supported for HA-INC mode.

- ISSU is not supported on the Microsoft Azure cloud because Microsoft Azure does not support GRE tunneling.
- HA config propagation and synchronization do not work during ISSU.
- ISSU is not supported for IPv6 HA setup.
- ISSU is not supported with admin partitions.
- ISSU is not supported for the following sessions:
 - Jumbo frames
 - IPv6 sessions
 - Large scale NAT (LSN)
- In an HA setup in INC mode, ISSU migration operation migrates only the client side connections. The migration of server-side connections is not required because both the HA nodes have independent SNIP configurations.
- For SYNC VLAN configuration, it is recommended to increase the SYNC VLAN MTU by at least 42 bytes.

Configuration steps

ISSU includes a migration feature, which replaces the force failover operation in the regular upgrade process of an HA setup. The migration functionality takes care of honoring the existing connections and includes the force failover operation.

During the ISSU process of an HA setup, you run the migration operation just after you upgraded the secondary node. You can perform the migration operation from either of the two nodes.

CLI Procedure

To perform the HA migration operation by using the CLI:

At the command prompt type:

```
1 start ns migration
```

GUI Procedure

To perform the HA migration operation by using the GUI:

Navigate to **System > System Information > Migration tab**. Click **Start Migration**.

Display ISSU statistics

You can view the ISSU statistics for monitoring the current ISSU process in an HA setup. The ISSU statistics displays the following information:

- Current status of ISSU migration operation
- Start time of the ISSU migration operation
- End time of the ISSU migration operation
- Start time of the ISSU rollback operation
- Total number of connections that are processed as part of ISSU migration operation
- Number of remaining connections that are being processed as part of ISSU migration operation

You can view the ISSU statistics on either of the HA nodes by using the CLI or GUI.

CLI Procedure

To display the ISSU statistics by using the CLI:

At the command prompt type:

```
1 show ns migration
```

GUI Procedure

To display the ISSU statistics by using the GUI:

Navigate to **System > System Information > Migration tab**. Click **Click to show migration details**.

Display ISSU statistics - the list of existing connections that the old primary node is processing

You can display the list of existing connections that the old primary node is serving as part of the ISSU migration operation by using the `dumpsession(Dump Session)` option of the `show migration` operation.

The `show migration` operation with the `dumpsession` option must be run only on the new primary node during the ISSU operation.

CLI Procedure

To display the list of existing connections that the old primary node is processing by using the CLI:

At the command prompt type:

```
1 show ns migration -dumpsession YES
```

```
1 > sh migration -dumpsession yes
2
3 Index      remote-IP-port      local-IP-port      idle-time(x 10
4           ms)
5 1          192.0.2.10         22          192.0.2.1         15998         703
6 2          198.51.100.20      7375         98.51.100.2       22            687
7 3          203.0.113.30       5506         203.0.113.3       22            687
```

GUI Procedure

To display the list of existing connections that the old primary node is processing by using the GUI:

Navigate to **System > System Information > Migration tab**. Click **Click to show migration connections**.

Rollback of the ISSU process

HA setups now support rollback of the In Service Software Upgrade (ISSU) process. The ISSU rollback feature is helpful if you observe that the HA setup during the ISSU migration operation is not stable, or is not performing at an optimum level as expected.

The ISSU rollback is applicable when the ISSU migration operation is in progress. The ISSU rollback does not work if the ISSU migration operation is already completed. In other words, you must run the ISSU rollback operation when the ISSU migration operation is in progress.

The ISSU rollback functions differently based on the state of the ISSU migration operation when the ISSU rollback operation is triggered:

- **Force failover has not yet happened during the ISSU migration operation.** The ISSU rollback stops the ISSU migration operation, and removes any internal data related to the ISSU migration stored in both the nodes. The current primary node remains as the primary node and continues to process data traffic related to existing and new connections.
- **Force failover has happened during ISSU migration operation.** If the HA failover has happened during the ISSU migration operation, then the new primary node (say it is N1) processes traffic related to the new connections. The old primary node (new secondary node, say it is N2) processes traffic related to the old connections (existing connections before the ISSU migration operation).

The ISSU rollback stops the ISSU migration operation and triggers a force failover. The new primary node (N2) now starts processing traffic related to the new connections. The new primary node (N2) also continues to process traffic related to old connections (existing connections established before the ISSU migration operation). In other words, the existing connections established before the ISSU migration operation are not lost.

The new secondary node (N1) removes all the existing connections (new connections created during the ISSU migration operation) and does not process any traffic. In other words, any existing connections that were established after the force failover of the ISSU migration operation are lost forever.

Configuration steps

You can use the NetScaler CLI or GUI to perform the ISSU rollback operation.

CLI Procedure

To perform the ISSU rollback operation by using the CLI:

At the command prompt type:

```
1 stop ns migration
```

GUI Procedure

To perform the ISSU rollback operation by using the GUI:

Navigate to **System > System Information > Migration tab**. Click **Stop Migration**.

SNMP traps for In Service Software Upgrade process

The In Service Software Upgrade (ISSU) process for an HA setup supports the following SNMP trap messages at the start and end of the ISSU migration operation.

SNMP Trap	Description
migrationStarted	This SNMP trap is generated and sent to the configured SNMP trap listeners when the ISSU migration operation starts.
migrationComplete	This SNMP trap is generated and sent to the configured SNMP trap listeners when the ISSU migration operation completes.

The primary node (before the start of the ISSU process) always generates these two SNMP traps and sends them to the configured SNMP trap listeners.

There are no SNMP alarms associated with the ISSU SNMP traps. In other words, these traps are generated irrespective of any SNMP alarm. You only have to configure the trap SNMP listeners.

For more information on configuring SNMP trap listeners, see [SNMP traps on NetScaler](#).

Downgrade a high availability pair

May 2, 2023

You can downgrade to any release on a high availability pair by using the command line interface. The GUI does not support the downgrade process.

To downgrade the system software on a NetScaler pair in a high availability pair, you need to downgrade the software first on the secondary node and then on the primary node. For instructions on downgrading each node separately, see [Downgrade a NetScaler standalone appliance](#).

Important

Loss in configuration might occur when downgrading. You should compare the configurations before and after the downgrade, and then manually re-enter any missing entries.

Troubleshooting issues related to the installation, upgrade, and downgrade processes

May 2, 2023

If the appliance does not work as expected after you complete the installation, upgrade, or downgrade process, the first thing to do is to check for the most common causes of the problem.

Resources for troubleshooting

For best results, use the following resources to troubleshoot an issue related to installing, upgrading, or downgrading a NetScaler:

- The configuration files from the appliance. In case of a High Availability pair, the configuration files from both appliances.
- The following files from the appliance(s):
 - The relevant newslog files.
 - The ns.log file.
 - The messages file.
- A network topology diagram.

Issues and resolutions

Following are the most common installation, upgrade, and downgrade issues, and tips for resolving them:

1. Issue

Upgrading a NetScaler MPX appliance fails due to hardware and software incompatibility.

Resolution

See the [NetScaler MPX hardware-software compatibility matrix](#) and check whether the software release is supported on the NetScaler MPX hardware.

2. Issue

Upgrading a NetScaler VPX appliance fails due to NetScaler VPX appliance and hypervisor incompatibility.

Resolution

See the [NetScaler VPX appliance and hypervisor compatibility matrix](#) and check whether the NetScaler VPX appliance model is supported on the hypervisor.

3. Issue

Upgrading a NetScaler appliance fails due to hardware errors.

Resolution

Validate the integrity of the NetScaler appliance. If you have a NetScaler hardware appliance, Citrix recommends running `fsck` for running a disk check and validating the integrity of the NetScaler hard drive.

For more information, see [How to Verify the File System Integrity of a NetScaler appliance](#).

4. Issue

Upgrading a NetScaler appliance by using the GUI stalls.

Resolution

Refresh the browser to check whether the upgrade is progressing or not.

5. Issue

Upgrading a NetScaler appliance fails due to low Space in /var Directory

Resolution

Free up space on the /var directory. For more information, see Refer to [How to free space on /var directory](#).

6. Issue

The NetScaler is not accessible after the software downgrade

Cause

During the software downgrade process, if the configuration file of the existing release and build does not match the configuration file of the earlier release and build, the appliance cannot load the configuration, and the default IP address is assigned to the appliance.

Resolution

- Verify that the appliance is accessible from the console.
- Verify the NSIP address and the routes on the appliance.
 - If the IP address has changed to the default 192.168.100.1 IP address, change the IP address as required.
 - Verify that the appliance is accessible.

7. Issue

During an upgrade, if I run the command for synchronizing, the following message appears:
Command failed on the secondary node but succeeded on the primary node.

Resolution

Do not run any dependent commands (set /unset /bind /unbind) when High Availability (HA) synchronization is in progress.

8. Issue

During an upgrade process, traffic does not pass through the new primary node when you run the force failover command.

Resolution

- Check for problems with the network topology and the switch configurations.
- Run the set L2param -garpreply ENABLED command to enable the GARP reply.
- Try using virtual MAC if not already used.
- Run the sendarp -a command from the primary node.

9. Issue

After upgrading or downgrading a NetScaler appliance, connecting to the appliance fails through SSH.

Resolution

Perform the following operations in the NetScaler appliance:

- Remove old or insecure host keys at `/nsconfig/ssh/ssh_host_*`.
- Review the custom SSHD configuration at `/nsconfig/sshd_config` and check if it is still relevant and compatible. Rename or remove the custom SSHD configuration accordingly.
- Cold reboot the NetScaler appliance

10. Issue

In an HA pair, after you run the force HA failover command the devices keep rebooting. The secondary device does not come up after an upgrade.

Resolution

Check to see if the `/var` directory is full. If so, remove the old installation files. Run the `df -h` command to show the available disk space.

11. Issue

After upgrading an HA pair, one of the nodes is listed as state UNKNOWN.

Resolution

- Check to see if both nodes are running the same build. If the builds are not same and HA nodes have a version mismatch, some of the fields are shown as UNKNOWN when you run the show ha node command.

- Check to see if the secondary appliance is reachable.

12. **Issue**

After you upgrade the NetScaler, the interface shows most of the load balancing virtual servers and services are DOWN.

Resolution

Verify that the SNIP address is active on the secondary appliance. Also, type the show service command to see if the service is running.

13. **Issue**

After performing an upgrade, all virtual servers are down on the secondary appliance.

Resolution

Enable the HA state and HA synchronization by running the following commands:

- set node hastate enable
- set node hasync enable

Disabling HA is not recommended.

14. **Issue**

After performing a downgrade, the NetScaler does not boot up properly.

Resolution

Check to see if the correct license has been installed.

15. **Issue**

In an HA pair, some features do not get synchronized after an upgrade is performed.

Resolution

Run the sync ha file misc command to synchronize the configurations files from the primary node to secondary node.

16. **Issue**

During reboot, the following error message appears:

One or more commands in ns.conf failedWhat should I do?

Resolution

Make sure that no command in the ns.conf file exceeds the 255 byte limit. In commands that create policies that are too long for the 255-byte limit, you can use pattern sets to shorten the policies.

Example:

```
1 add cs policy p11 -rule 'HTTP.REQ.URL.ENDSWITH_ANY("
  ctx_file_extensions")'
2 Done
```

ctx_file_extensions is a default patset that covers a large number of extensions. In addition to the default pattern sets, you can create user-defined pattern sets. Add a patset by running the following command:

```
1 add patset <name>
```

Note: Patsets are supported only in release 9.3 or later.

17. Issue

When upgrading a NetScaler VPX appliance, I am told to free up space in /var. What files do I remove?

Resolution

Remove the old installation files from /var/tmp/ directory. Also remove unwanted files from /flash.

18. Issue

There is no connectivity to the graphical user interface (GUI) when you run the force HA failover command on the secondary appliance.

Resolution

Log on to the secondary appliance using the command line interface and enable the access to GUI by running the set ns ip <IP> -gui enabled command.

19. Issue

After performing an upgrade, and when I click on any link on the GUI that has to load a java applet (Upgrade Wizard or license Wizard), the following error message appears: **GUI version does not match with the kernel version. Please close this instance, clear java plug-in cache and reopen.**

Resolution

- Log on to the NetScaler using the GUI.
- Navigate to NetScaler Gateway > Global Settings.
- Click Change Global Settings under Settings.
- In the details pane, under Client Experience, select Default from the UI theme list.
- Click OK.

20. Issue

If upgrading a NetScaler appliance failed because of any reason, how to restore the appliance using the backed-up files?

Resolution

If the upgrade is unsuccessful then restore the appliance to the previous version of the NetScaler appliance using the backed-up files. For more information, see [Backup and restore a NetScaler appliance](#).

For more information on backup and restore of a NetScaler cluster setup, see [Backup and restore of a cluster setup](#).

21. Issue

If licenses are missing after a failed upgrade of a NetScaler appliance, how to resolve the issue?

Resolution

If any license goes missing or if you want to reallocate the licenses, refer to the following topic [Licensing overview](#).

Note

These troubleshooting steps also apply to issues with configuration loss when downgrading the software across multiple releases.

For any other issue, see the release notes, Knowledge Center articles, and FAQs.

FAQs

May 2, 2023

For answers to the questions that you might have about upgrading the NetScaler firmware, see the [Installing, Upgrading, and Downgrading FAQs](#).

New and deprecated commands, parameters, and SNMP OIDs

December 3, 2024

This section lists the new and deprecated commands, parameters, and SNMP OIDs.

New parameters

The following table lists the new commands in release 14.1.

Command group	Commands and parameters
Application Firewall	<pre>bind appfw profile <name> [- grpcValidation <string>]; bind appfw profile <name> [- restValidation]; unbind appfw profile <name> [- grpcValidation <string>]; unbind appfw profile <name> [- restValidation <string>]; show appfw profile [grpcValidation]; show appfw profile [restvalidation]</pre>

Command group	Commands and parameters
NS	<pre>show ns httpProfile [- http3WebTransport]; add ns httpProfile [- http3WebTransport (ENABLED \ DISABLED)]; set ns httpProfile [- http3WebTransport (ENABLED \ DISABLED)]; rm ns httpProfile [- http3WebTransport]; unset ns httpProfile [- http3WebTransport]; add vpn vserver <name> < servicetype> [-quicProfileName < strings>]; set vpn vserver <name>[- quicProfileName <strings>]; unset vpn vserver <name> [- quicProfileName]; add ns tcpProfile <name> [- rfc5961Compliance (ENABLED \ DISABLED)]; set ns tcpProfile <name> [- rfc5961Compliance (ENABLED \ DISABLED)]; unset ns tcpProfile <name> [- rfc5961Compliance]; show ns tcpProfile <name> [rfc5961Compliance]; set ns tcpParam [- rfc5961ChlgAckLimit < positive_integer>]; show ns tcpParam[rfc5961ChlgAckLimit]</pre>

Command group	Commands and parameters
Policy	<pre> add policy patset <name> [- dynamic (YES \ NO)]; set policy patset [-dynamic (YES \ NO)]; show policy patset [<name>] [- dynamicOnly]; add policy dataset <name> <type> [-dynamic (Yes \ NO)]; set policy dataset <name> [- dynamic (Yes \ NO)]; show policy dataset <name> [- dynamicOnly];show policy dataset </pre>
API	<pre> show api specfile [<name>] </pre>
HA	<pre> add HA node <id> <IPAddress> [- rpcnodepassword] </pre>
Utility	<pre> show techsupport [-authtoken < string>] </pre>

Deprecated commands

Command group	Commands
LSN	<pre> stat lsn;add lsn pool;rm lsn pool; set lsn pool;unset lsn pool; bind lsn pool;unbind lsn pool; show lsn pool;stat lsn pool; add lsn client;bind lsn client; unbind lsn client;show lsn client; rm lsn client;add lsn group; rm lsn group;set lsn group; unset lsn group;bind lsn group; unbind lsn group;show lsn group; stat lsn group; add lsn transportprofile; rm lsn transportprofile; set lsn transportprofile; unset lsn transportprofile; show lsn transportprofile; add lsn httphdrlogprofile; rm lsn httphdrlogprofile; set lsn httphdrlogprofile; unset lsn httphdrlogprofile; show lsn httphdrlogprofile; add lsn logprofile; rm lsn logprofile; set lsn logprofile; unset lsn logprofile; show lsn logprofile; add lsn appsprofile; rm lsn appsprofile; set lsn appsprofile; unset lsn appsprofile; bind lsn appsprofile; unbind lsn appsprofile; show lsn appsprofile; set lsn parameter; show lsn parameter; show lsn session; flush lsn session;add lsn static; rm lsn static;show lsn static; show lsn deterministicNat; add lsn ip6profile;rm lsn ip6profile;show lsn ip6profile; stat lsn dslite; </pre>

Command group	Commands
URL Filtering	<pre>add urlfiltering categorization; set urlfiltering parameter; unset urlfiltering parameter; show urlfiltering parameter; show urlfiltering categorization; show urlfiltering Categories; show urlfiltering CategoryGroups; clear urlfiltering categorization</pre>
API	<pre>import api specfile <name> <src></pre>

New SNMP OIDs

For more information, see the [SNMP OID Reference](#) guide.

Solutions for Telecom Service Providers

May 2, 2023

Information and Communication Technology (ICT) is about bringing the Internet user closer to the apps and data. The latest datacenter technologies have enabled the user, apps and data to be located anywhere. A user can access apps and data from the office or from home, or from a location such as an airport. The apps and data can be located either on the enterprise's premises, in a public or private cloud, or on a hybrid host. The result has been on only increased productivity, but also reduced costs of ownership and maintenance.

Service providers offer the core infrastructure needed for carrying the user's apps and data over the network. Because the core infrastructure serves millions of subscribers and a wide variety of apps and data, requirements for scale and protocol support are very high. The core infrastructure handles two major types of traffic: data plane and control plane. Each of these planes has its own scale and protocol-support requirements.

The data plane is the part of the core infrastructure that carries user apps and data from end to end, that is, between end-user equipment and the application server. The number of users accessing apps and data is in the thousands of millions, so throughput and IP-addressing requirements are very high. Every user in the network must be uniquely identifiable. Only then can the service provider control the traffic, monitor network usage, deliver user-specific services, and log information correctly. Many

of the today's client devices and application servers support IPv6 natively. The core infrastructure must not only support a mix of IPv4 and IPv6 clients and servers, but also provide the technologies for cross-communication between IPv4 and IPv6. Finally, a service provider is measured by the quality of service (directly related to end-user experience) and the availability of service without disruptions. The data plane should be resilient enough to provide both quality and availability at the same time.

The control-plane infrastructure manages user traffic and maintains the business and network operations services. The most important of the many protocols that run in this plane are Diameter, Radius, and SMPP. Diameter is a base protocol over which several other function-specific protocols have been developed. For example:

- Gx interface between the Policy and Charging Enforcement Function (PCEF) and the Policy and Charging Rules Function (PCRF)
- Gy interface between the Online Charging System (OCS) and the Cisco Packet Data Network Gateway (PGW)/Policy and Charging Enforcement Function (PCEF)

The volume of control plane traffic is in direct proportion to user activity. To manage the control plane traffic, service providers use several ADC functionalities, such as load balancing and content switching. They need fine-grain control of control plane traffic, which equals data-plane traffic in complexity.

Service providers must meet demanding service-level agreements (SLAs), and are scrutinized thoroughly by regulators for compliance. Adhering to requirements while managing the data and control plane traffic requires a service provider to keep its infrastructure nimble, within budget, easily upgradable, and flexible. As the most powerful and advanced ADCs in the market today, NetScaler products are a natural fit for the service-provider environment.

Large Scale NAT

August 11, 2023

Note:

Large Scale NAT (LSN) feature is deprecated from NetScaler 14.1 release onwards.

Deprecated features are not removed immediately. The NetScaler appliance continues to support the deprecated feature until it is removed in a future release.

The Internet's phenomenal growth has resulted in a shortage of public IPv4 addresses. Large Scale NAT (LSN/CGNAT) provides a solution to this issue, maximizing the use of available public IPv4 addresses by sharing a few public IPv4 addresses among a large pool of Internet users.


LSN translates private IPv4 addresses into public IPv4 addresses. It includes network address and port translation methods to aggregate many private IP addresses into fewer public IPv4 addresses.

LSN is designed to handle NAT on a large scale. The NetScaler LSN feature is very useful for Internet Service Providers (ISPs) and carriers providing millions of translations to support a large number of users (subscribers) and at very high throughput.

LSN Architecture

The LSN architecture of an ISP using NetScaler products consists of subscribers (Internet users) in private address spaces accessing the Internet through a NetScaler appliance deployed in ISP's core network. Subscribers are connected to the ISP through the ISP's access network. Usually, subscribers for commercial use of the Internet are directly connected to the ISP's access network. Serving those subscribers requires only one level of NAT (NAT44).

Noncommercial subscribers, however, are typically behind customer-premises equipment (CPE), such as routers and modems, that also implements NAT. These two levels of NAT create the NAT444 model. Deploying a NetScaler appliance in an ISP's core network for LSN functionality is transparent to the subscribers and requires no configuration changes to subscribers or the CPEs.

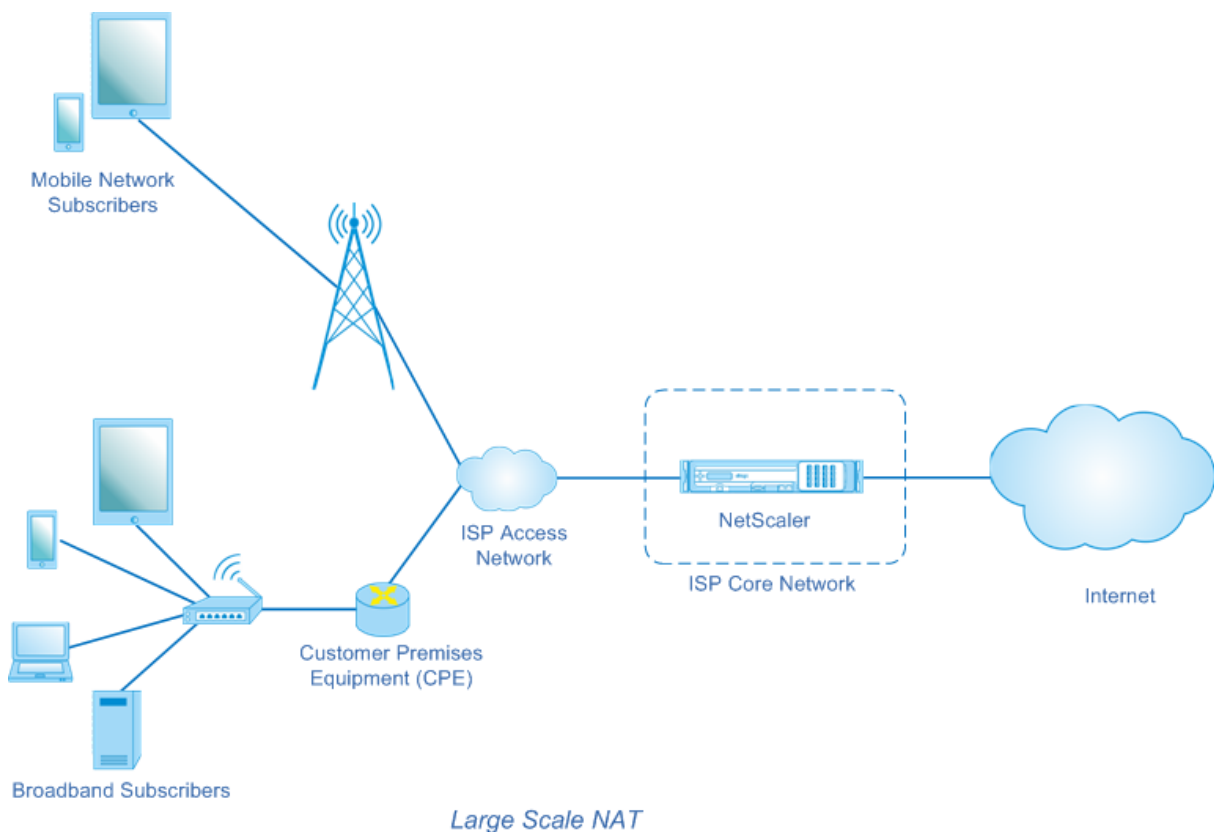

The NetScaler appliance receives all subscriber packets destined to the Internet. The appliance is configured with a pool of pre-defined NAT IP addresses to use for LSN. The NetScaler appliance uses its LSN feature to translate the source IP address (private) and port of the packet to the NAT IP address (public) and NAT port, and then sends the packet to its destination on the Internet. The appliance

maintains a record of all active sessions that use the LSN feature. These sessions are called LSN sessions. The NetScaler appliance also maintains the mappings between subscriber IP address and port, and NAT IP address and port, for each session. These mappings are called LSN mappings. From LSN sessions and LSN mappings, the NetScaler appliance recognizes a response packet (received from the Internet) belonging to a particular session. The appliance translates the destination IP address and port of the response packet from NAT IP address:port to the subscriber IP address:port, and sends the translated packet to the subscriber.

LSN Features Supported on NetScaler appliance

The following describes some of the LSN features supported on NetScaler appliance:

NAT Resource Allocation

The NetScaler appliance allocates NAT IP addresses and ports, from its pre-defined NAT resource pool, to subscribers to translate their packets for transmission to external hosts (Internet). The NetScaler appliance supports the following types of NAT IP address and port allocation for subscribers:

- **Deterministic.** The NetScaler appliance allocates a NAT IP address and a block of ports to each subscriber. The appliance sequentially allocates NAT resources to these subscribers. It assigns the first block of ports on the beginning NAT IP address to the beginning subscriber IP address. The next range of ports is assigned to the next subscriber, and so on, until the NAT address does not have enough ports for the next subscriber. At that point, the first port block on the next NAT address is assigned to the subscriber, and so on.

The NetScaler appliance logs the allocated NAT IP address and the port block for a subscriber. For a connection, a subscriber can be identified just by its mapped NAT IP address and port block. Because of this reason, the NetScaler appliance does not log any LSN session created or deleted. If the entire block of ports is being used, the NetScaler appliance drops any new connection from the subscriber.

- **Dynamic.** The NetScaler appliance allocates a random NAT IP address and a port from the LSN NAT pool for a subscriber's connection. When port block allocation is enabled in the configuration, the appliance allocates a random NAT IP address and a block of ports for a subscriber when it initiates a connection for the first time. The NetScaler appliance then allocates this NAT IP address and one of the ports from the allocated block to each subsequent connection from this subscriber. If the entire block of ports is being used, the appliance allocates a new random port block to the subscriber when it initiates a new connection. One of the port in the new port block is allocated for the new connection.

IP Pooling

The following NAT resource allocation options are available for subsequent sessions of a subscriber who was allocated a random NAT IP address and port for an existing session.

- **Paired.** The NetScaler appliance allocates the same NAT IP address for all sessions associated with the same subscriber. When no more ports are available for that address, the appliance drops any new connections from the subscriber. This option is needed for proper functioning of certain applications that require creation of multiple sessions on the same source IP address (for example in peer-to-peer applications that use RTP or RTCP protocol).
- **Random.** The NetScaler appliance allocates random NAT IP addresses, from the pool, for different sessions associated with the same subscriber.

Reusing LSN Mappings

The NetScaler appliance can reuse an existing LSN map for new connections originating from the same subscriber IP address and port. The NetScaler LSN feature supports the following types of LSN mapping reuse:

1. **Endpoint Independent.** The NetScaler appliance reuses the LSN mapping for subsequent packets sent from the same subscriber IP address and port (X:x) to any external IP address and port. This type of LSN map reuse is useful for proper functioning of VOIP and peer-to-peer applications.
2. **Address dependent.** The NetScaler appliance reuses the LSN mapping for subsequent packets sent from the same subscriber IP address and port (X:x) to the same external IP address (Y), regardless of the external port.
3. **Address port dependent.** The NetScaler appliance reuses the LSN mapping for subsequent packets sent from the same internal IP address and port (X:x) to the same external IP address and port (Y:y) while the mapping is still active.

LSN Filtering

The NetScaler appliance can filter packets from external hosts based on the active LSN sessions and LSN mappings. Consider an example of an LSN mapping that includes the mapping of subscriber IP:port (X:x), NAT IP:port (N:n), and external host IP:port (Y:y). The NetScaler LSN feature supports the following types of filtering:

1. **Endpoint Independent.** The NetScaler appliance filters out only those packets that are not destined to NAT IP:port (N:n), which represents subscriber IP:port (X:x), regardless of the external host IP address and port source (Z:z). The NetScaler appliance forwards any packets destined

to X:x. In other words, sending packets from the subscriber to any external IP address is sufficient to allow packets from any external host to the subscriber. This type of filtering is useful for proper functioning of VOIP and peer-to-peer applications.

2. **Address dependent.** The NetScaler appliance filters out packets not destined to NAT IP:port (N:n), which represents subscriber IP:port (X:x). In addition, the appliance filters out packets from external host IP address and port (Y:y) destined for N:n if the subscriber has not previously sent packets to Y:anyport (external port independent). In other words, receiving packets from a specific external host requires that the subscriber first send packets to that specific external host's IP address.
3. **Address port dependent.** The NetScaler appliance filters out packets not destined to NAT IP:port (N:n), which represents subscriber IP:port (X:x). In addition, the appliance filters out packets from external host IP address and port (Y:y) destined for N:n if the subscriber has not previously sent packets to Y:y. In other words, receiving packets from a specific external host requires that the subscriber first send packets to that specific external IP address and port.

Quotas

The NetScaler appliance can limit the number of NAT ports and sessions for each subscriber to ensure fair distribution of resources among subscribers. The NetScaler appliance can also limit the number of session for a subscriber group to ensure fair distribution of resources among different subscriber groups.

- **Port quota.** The NetScaler appliance can limit the LSN NAT ports to be used at a time by each subscriber for a specified protocol. For example, you could limit each subscriber to a maximum of 500 TCP NAT ports. When the LSN NAT mappings for a subscriber reach the limit, the NetScaler appliance does not allocate additional NAT ports of the specified protocol to that subscriber.
- **Subscriber Session Limit.** The number of concurrent session for a subscriber can be more than it port quota. The NetScaler appliance can limit the LSN sessions allowed for each subscriber for a specified protocol. When the number of LSN sessions reaches the limit for a subscriber, the NetScaler appliance does not allow the subscriber to open additional sessions of the specified protocol.
- **Group Session Limit.** The NetScaler appliance can limit the total number of LSN sessions allowed for a subscriber group for a specified protocol. When the total number of LSN sessions reaches the limit for a group for a specified protocol, the NetScaler appliance does not allow any subscriber of the group to open additional sessions of the specified protocol. For example, You limit a group to a maximum of 10000 UDP sessions. When the total number of UDP sessions for this group reaches 10000, the NetScaler appliance does not allow any subscriber of the group to open additional UDP sessions.

Application Layer Gateways

For some Application layer protocols, the IP addresses and protocol port numbers are also communicated in the packet's payload. Application Layer Gateway for a protocol parses the packet's payload and does necessary changes to ensure that the protocol continues to work over LSN.

The NetScaler appliance supports ALG for the following protocols:

- FTP
- ICMP
- TFTP
- PPTP
- SIP
- RTSP

Hairpin Support

The NetScaler appliance supports communication between subscribers or internal hosts using NAT IP addresses. This type of communication between two subscribers using NAT IP addresses is called hairpin flow. Hairpin flow is enabled by default, and you cannot disable it.

Points to Consider before Configuring LSN

May 2, 2023

Consider the following points before configuring LSN on a NetScaler appliance:

- Make sure that you understand the different components of Large Scale NAT, described in RFCs 6888, 5382, 5508, and 4787.
- Endpoint independent mapping (EIM) and endpoint independent filtering (EIF) are disabled by default. These options must be enabled for proper functioning of VoIP and peer-to-peer (P2P) applications.
- **Logging LSN:** Following are the consideration points for logging LSN information:
 - Citrix recommends logging the LSN information on external log servers instead of on the NetScaler appliance. Logging on external servers facilitates optimal performance when the appliance creates large numbers of LSN log entries (in order of millions).
 - Citrix recommends using SYSLOG over TCP, or NSLOG. By default SYSLOG uses UDP, and NSLOG uses only TCP to transfer log information to the log servers. TCP is more reliable than UDP for transferring complete data.

- The following limitations apply to SYSLOG over TCP:
 - * The Syslog over TCP solution does not provide authentication, integrity check, and privacy.
 - * The NetScaler appliance relies on the TCP protocol to provide confirmation of SYSLOG message delivery to external log servers.
- **High Availability:** Following are the consideration points for high availability of NetScaler appliances for LSN:
 - Citrix recommends configuring the LSN feature in a high availability deployment of two NetScaler appliances for uninterrupted and seamless operation of all LSN sessions.
 - In a high availability deployment, Citrix recommends:
 - * Setting the SYNC VLAN parameter for dedicating a VLAN for all HA related communication.
 - * Synchronizing the symmetric RSS key of the primary node to the secondary node for stateful synchronization of a large number of LSN mappings and sessions.
 - * Binding the subnet of LSN IP addresses to a VLAN to avoid flooding of GARP broadcasts on all VLANs after a failover.
 - In a high availability deployment of NetScaler appliances, ALG-related sessions are not mirrored to the secondary appliance.
- **Application Layer Gateways (ALGs):** Following are the consideration points related for ALGs on a NetScaler appliance:
 - The following are not supported for SIP ALG:
 - * Multicast IP addresses
 - * Encrypted SDP
 - * SIP messages over TLS
 - * FQDN translation in SIP messages
 - * Authentication of SIP messages
 - * Traffic domains, admin partitions, and NetScaler clusters.
 - * SIP messages with multipart bodies.
 - The following are not supported for RTSP ALG:
 - * Multicast RTSP sessions
 - * RTSP session over UDP
 - * NetScaler traffic domains, admin partitions, and NetScaler clusters
 - The NetScaler appliance does not support ALG for the IPSec protocol.
- If you disable the LSN feature when some LSN sessions exist on the NetScaler appliance, these sessions continue to exist for the duration of the configured timeout interval.
- LSN takes precedence over RNAT. If a packet from a specified LSN subscriber also matches a RNAT rule, the packet is translated according to the LSN configuration.

- Forwarding of packets related only to the LSN sessions is based on the NetScaler appliance's routing table.
- Unlike with subnet IP addresses, selection of an LSN NAT IP address for a subscriber's connection is not based on the routing entry for the destination IP address.
- For inbound packets, static LSN mappings take precedence over dynamic LSN mappings.
- For outbound packets, LSN application profiles take precedence over static mapping.
- When a large number of LSN sessions (> 1 million) exist on the NetScaler appliance, Citrix recommends displaying selected LSN sessions instead of all of them. In the command line interface or the configuration utility, use the selection parameters for showing LSN session operation.
- To reduce the amount of active memory allocated to the LSN feature, you must warm restart the NetScaler appliance after changing the configured-memory setting. Without a warm restart, you can only increase the amount of active memory.

Configuration Steps for LSN

May 2, 2023

Configuring LSN on a NetScaler appliance consists of the following tasks:

1. **Set the global LSN parameters.** Global parameters include the amount of NetScaler memory reserved for the LSN feature and synchronization of LSN sessions in a high availability setup.
2. **Create an LSN client entity and bind subscribers to it.** An LSN client entity is a set of subscribers on whose traffic you want the NetScaler appliance to perform LSN. The client entity includes IPv4 addresses and extended ACL rules for identifying subscribers. An LSN client can be bound to only one LSN group. The command line interface has two commands for creating an LSN client entity and binding a subscriber to the LSN client entity. The configuration utility combines these two operations on a single screen.
3. **Create an LSN pool and bind NAT IP addresses to it.** An LSN pool defines a pool of NAT IP addresses to be used by the NetScaler appliance to perform LSN. The pool is assigned parameters, such as port block allocation and NAT type (Deterministic or Dynamic). An LSN pool bound to an LSN group applies to all subscribers of an LSN client entity bound to the same group. Only LSN Pools and LSN groups with the same NAT type settings can be bound together. Multiple LSN pools can be bound to an LSN group. For Dynamic NAT, an LSN pool can be bound to multiple LSN groups. For Deterministic NAT, pools bound to an LSN group cannot be bound to other LSN groups. The command line interface has two commands for creating an LSN pool and binding NAT IP addresses to the LSN pool. The configuration utility combines these two operations on a single screen.
4. **(Optional) Create an LSN Transport Profile for a specified protocol.** An LSN transport profile defines various timeouts and limits, such as maximum LSN sessions and maximum ports

usage, that a subscriber can have for a given protocol. You bind an LSN transport profile for each protocol (TCP, UDP, and ICMP) to an LSN group. A profile can be bound to multiple LSN groups. A profile bound to an LSN group applies to all subscribers of an LSN client bound to the same group. By default, one LSN transport profile with default settings for TCP, UDP, and ICMP protocols is bound to an LSN group during its creation. This profile is called default transport profile. An LSN transport profile that you bind to an LSN group overrides the default LSN transport profile for that protocol.

5. **(Optional) Create an LSN Application Profile for a specified protocol and bind a set of destination ports to it.** An LSN application profile defines the LSN mapping and LSN filtering controls of a group for a given protocol and for a set of destination ports. For a set of destination ports, you bind an LSN profile for each protocol (TCP, UDP, and ICMP) to an LSN group. A profile can be bound to multiple LSN groups. An LSN application profile bound to an LSN group applies to all subscribers of an LSN client bound to the same group. By default, one LSN application profile with default settings for TCP, UDP, and ICMP protocols for all destination ports is bound to an LSN group during its creation. This profile is called a default application profile. When you bind an LSN application profile, with a specified set of destination ports, to an LSN group, the bound profile overrides the default LSN application profile for that protocol at that set of destination ports. The command line interface has two commands for creating an LSN application profile and binding a set of destination ports to the LSN application profile. The configuration utility combines these two operations on a single screen.
6. **Create an LSN Group and bind LSN pools, (optional) LSN transport profiles, and (optional) LSN application profiles to the LSN group.** An LSN group is an entity consisting of an LSN client, LSN pool(s), LSN transport profile(s), and LSN application profiles(s). A group is assigned parameters, such as port block size and logging of LSN sessions. The parameter settings apply to all the subscribers of an LSN client bound to the LSN group. Only LSN Pools and LSN groups with the same NAT type settings can be bound together. Multiples LSN pools can be bound to an LSN group. For Dynamic NAT, an LSN pool can be bound to multiple LSN groups. For Deterministic NAT, pools bound to an LSN group cannot be bound to other LSN groups. Only one LSN client entity can be bound to an LSN group, and an LSN client entity bound to an LSN group cannot be bound to other LSN groups. The command line interface has two commands for creating an LSN group and binding LSN pools, LSN transport profiles, LSN application profiles to the LSN group. The configuration utility combines these two operations in a single screen.

The following table lists the maximum numbers of different LSN entities and bindings that can be created on a NetScaler appliance. These limits are also subject to memory available on the NetScaler appliance.

LSN entities and bindings	Limit
LSN clients	1024

LSN entities and bindings	Limit
LSN pools	128
LSN groups	1024
Subscriber networks that can be bound to an LSN client	64
Extended ACLs that can be bound to an LSN client	1024
NAT IP addresses in a Pool	4096
LSN pools that can be bound to an LSN group	8
LSN groups that can use the same LSN pool	16
LSN transport profiles that can be bound to an LSN group	3 (one each for TCP, UDP, and ICMP protocols)
LSN groups that can use same LSN transport profile	8
LSN application profiles that can be bound to an LSN group	64
LSN groups that can use same LSN application profile	8
Port ranges that can be bound to an LSN application profile	8

Configuration Using the Command Line Interface

To create an LSN client by using the command line interface

At the command prompt, type:

```
1 add lsn client <clientname>
2
3 show lsn client
```

To bind a network address or an ACL rule to an LSN client by using the command line interface

At the command prompt, type:

```
1 bind lsn client <clientname> ((-network <ip_addr> [-netmask <netmask>]
   [-td<positive_integer>]) | -aclname <string>)
2
```

```
3 show lsn client
```

To create an LSN pool by using the command line interface

At the command prompt, type:

```
1 add lsn pool <poolname> [-nattype ( DYNAMIC | DETERMINISTIC )] [-  
    portblockallocation ( ENABLED | DISABLED )] [-portreallocatetimeout <  
    secs>] [-maxPortReallocTmq <positive_integer>]  
2  
3 show lsn pool
```

To bind an IP address range to an LSN pool by using the command line interface

At the command prompt, type:

```
1 bind lsn pool <poolname> <lsnip>  
2  
3 show lsn pool
```

Note: For removing LSN IP addresses from an LSN pool, use the unbind lsn pool command.

To create an LSN transport profile by using the command line interface

At the command prompt, type:

```
1 add lsn transportprofile <transportprofilename> <transportprotocol> [-  
    sessiontimeout <secs>] [-finrsttimeout <secs>] [-portquota <  
    positive_integer>] [-sessionquota <positive_integer>] [-  
    portpreserveparity ( ENABLED | DISABLED )] [-portpreserverange (   
    ENABLED | DISABLED )] [-syncheck ( ENABLED | DISABLED )]  
2  
3 show lsn transportprofile
```

To create an LSN application profile by using the command line interface

At the command prompt, type:

```
1 add lsn appsprofile <appsprofilename> <transportprotocol> [-ippooling (   
    PAIRED | RANDOM )] [-mapping <mapping>] [-filtering <filtering>] [-  
    tcpproxy ( ENABLED | DISABLED )] [-td <positive_integer>]  
2  
3 show lsn appsprofile
```

To bind an application protocol port range to an LSN application profile by using the command line interface

At the command prompt, type:

```
1 bind lsn appsprofile <appsprofilename> <lsnport>
2
3 show lsn appsprofile
```

To create an LSN group by using the command line interface

At the command prompt, type:

```
1 add lsn group <groupname> -clientname <string> [-nattype ( DYNAMIC |
  DETERMINISTIC )] [-portblocksize <positive_integer>] [-logging (
  ENABLED | DISABLED )] [-sessionLogging ( ENABLED | DISABLED )][
  sessionSync ( ENABLED | DISABLED )] [-snmptraplimit <positive_integer
  >] [-ftp ( ENABLED | DISABLED )]
2
3 show lsn group
```

To bind LSN profiles and LSN pools to an LSN group by using the command line interface

At the command prompt, type:

```
1 bind lsn group <groupname> (-poolname <string> | -transportprofilename
  <string> | -appsprofilename <string>)
2
3 show lsn group
```

Configuration Using the Configuration Utility

To configure an LSN client and bind an IPv4 network address or an ACL rule by using the configuration utility

Navigate to **System > Large Scale NAT > Clients**, and add a client and then bind an IPv4 network address or an ACL rule to the client.

To configure an LSN pool and bind NAT IP addresses by using the configuration utility

Navigate to **System > Large Scale NAT > Pools**, and add a pool and then bind an NAT IP address or a range of NAT IP addresses to the pool.

To configure an LSN transport profile by using the configuration utility

1. Navigate to **System > Large Scale NAT > Profiles**.

2. On the details pane, click **Transport** tab, and then add a transport profile.

To configure an LSN application profile by using the configuration utility

1. Navigate to **System > Large Scale NAT > Profiles**.
2. On the details pane, click **Application** tab, and then add an application profile.

To configure an LSN group and bind an LSN client, pools, transport profiles, and application profiles by using the configuration utility

Navigate to **System > Large Scale NAT > Groups**, and add a group and then bind an LSN client, pools, transport profiles, and application profiles to the group.

Parameter Descriptions (of commands listed in the CLI procedure)

- add lsn client

- clientname

Name for the LSN client entity. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN client is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "lsn client1" or 'lsn client1').

This is a mandatory argument. Maximum Length: 127

Parameter Descriptions (of commands listed in the CLI procedure)

- bind lsn client

- clientname

Name for the LSN client entity. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN client is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "lsn client1" or 'lsn client1').

This is a mandatory argument. Maximum Length: 127

- network

IPv4 address(es) of the LSN subscriber(s) or subscriber network(s) on whose traffic you want the NetScaler appliance to perform Large Scale NAT.

- netmask
Subnet mask for the IPv4 address specified in the Network parameter.
Default value: 255.255.255.255
- td
ID of the traffic domain on which this subscriber or the subscriber network (as specified by the network parameter) belongs.
If you do not specify an ID, the subscriber or the subscriber network becomes part of the default traffic domain.
Default value: 0
Minimum value: 0
Maximum value: 4094
- aclname
Name(s) of any configured extended ACL(s) whose action is ALLOW. The condition specified in the extended ACL rule identifies the traffic from an LSN subscriber for which the NetScaler appliance is to perform large scale NAT. Maximum Length: 127

Parameter Descriptions (of commands listed in the CLI procedure)

- add lsn pool
 - poolname
Name for the LSN pool. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN pool is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, “lsn pool1” or ‘lsn pool1’).
This is a mandatory argument. Maximum Length: 127
 - nattype
Type of NAT IP address and port allocation (from the LSN pools bound to an LSN group) for subscribers (of the LSN client entity bound to the LSN group):
Available options function as follows:
 - * **Deterministic**—Allocate a NAT IP address and a block of ports to each subscriber (of the LSN client bound to the LSN group). The NetScaler appliance sequentially allocates NAT resources to these subscribers. The NetScaler appliance assigns the first

block of ports (block size determined by the port block size parameter of the LSN group) on the beginning NAT IP address to the beginning subscriber IP address. The next range of ports is assigned to the next subscriber, and so on, until the NAT address does not have enough ports for the next subscriber. In this case, the first port block on the next NAT address is used for the subscriber, and so on. Because each subscriber now receives a deterministic NAT IP address and a block of ports, a subscriber can be identified without any need for logging. For a connection, a subscriber can be identified based only on the NAT IP address and port, and the destination IP address and port.

- * **Dynamic**—Allocate a random NAT IP address and a port from the LSN NAT pool for a subscribers connection. If port block allocation is enabled (in LSN pool) and a port block size is specified (in the LSN group), the NetScaler appliance allocates a random NAT IP address and a block of ports for a subscriber when it initiates a connection for the first time. The appliance allocates this NAT IP address and a port (from the allocated block of ports) for different connections from this subscriber. If all the ports are allocated (for different subscribers connections) from the subscribers allocated port block, the appliance allocates a new random port block for the subscriber. Only LSN Pools and LSN groups with the same NAT type settings can be bound together. Multiples LSN pools can be bound to an LSN group.

Possible values: DYNAMIC, DETERMINISTIC

Default value: DYNAMIC

- portblockallocation

Allocate a random NAT port block, from the available NAT port pool of an NAT IP address, for each subscriber when the NAT allocation is set as Dynamic NAT. For any connection initiated from a subscriber, the NetScaler appliance allocates a NAT port from the subscribers allocated NAT port block to create the LSN session.

You must set the port block size in the bound LSN group. For a subscriber, if all the ports are allocated from the subscribers allocated port block, the NetScaler appliance allocates a new random port block for the subscriber.

For Deterministic NAT, this parameter is enabled by default, and you cannot disable it.

Possible values: ENABLED, DISABLED

Default value: DISABLED

- portrealloctimeout

The waiting time, in seconds, between deallocating LSN NAT ports (when an LSN mapping is removed) and reallocating them for a new LSN session. This parameter is necessary in order to prevent collisions between old and new mappings and sessions. It ensures that

all established sessions are broken instead of redirected to a different subscriber. This is not applicable for ports used in:

- * Deterministic NAT
- * Address-Dependent filtering and Address-Port-Dependent filtering
- * Dynamic NAT with port block allocation

In these cases, ports are immediately reallocated.

Default value: 0

Maximum value: 600

- maxPortReallocTmq

Maximum number of ports for which the port reallocation timeout applies for each NAT IP address. In other words, the maximum deallocated-port queue size for which the reallocation timeout applies for each NAT IP address.

When the queue size is full, the next port deallocated is reallocated immediately for a new LSN session.

Default value: 65536

Maximum value: 65536

Parameter Descriptions (of commands listed in the CLI procedure)

- bind lsn pool

- poolname

Name for the LSN pool. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN pool is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "lsn pool1" or 'lsn pool1').

This is a mandatory argument. Maximum Length: 127

- lsnip

IPv4 address or a range of IPv4 addresses to be used as NAT IP address(es) for LSN.

After the pool is created, these IPv4 addresses are added to the NetScaler appliance as NetScaler owned IP address of type LSN. An LSN IP address associated with an LSN pool cannot be shared with other LSN pools. IP addresses specified for this parameter must not already exist on the NetScaler appliance as any NetScaler owned IP addresses. In the

command line interface, separate the range with a hyphen. For example: 10.102.29.30-10.102.29.189. You can later remove some or all the LSN IP addresses from the pool, and add IP addresses to the LSN pool.

Parameter Descriptions (of commands listed in the CLI procedure)

- add lsn transportprofile

- transportprofilename

Name for the LSN transport profile. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN transport profile is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "lsn transport profile1" or 'lsn transport profile1').

This is a mandatory argument. Maximum Length: 127

- transportprotocol

Protocol for which to set the LSN transport profile parameters.

This is a mandatory argument.

Possible values: TCP, UDP, ICMP

- sessiontimeout

Timeout, in seconds, for an idle LSN session. If an LSN session is idle for a time that exceeds this value, the NetScaler appliance removes the session.

This timeout does not apply for a TCP LSN session when a FIN or RST message is received from either of the endpoints.

Default value: 120

Minimum value: 60

- finrsttimeout

Timeout, in seconds, for a TCP LSN session after a FIN or RST message is received from one of the endpoints.

If a TCP LSN session is idle (after the NetScaler appliance receives a FIN or RST message) for a time that exceeds this value, the NetScaler appliance removes the session.

Since the LSN feature of the NetScaler appliance does not maintain state information of any TCP LSN sessions, this timeout accommodates the transmission of the FIN or RST, and

ACK messages from the other endpoint so that both endpoints can properly close the connection.

Default value: 30

– portquota

Maximum number of LSN NAT ports to be used at a time by each subscriber for the specified protocol. For example, each subscriber can be limited to a maximum of 500 TCP NAT ports. When the LSN NAT mappings for a subscriber reach the limit, the NetScaler appliance does not allocate additional NAT ports for that subscriber.

Default value: 0

Minimum value: 0

Maximum value: 65535

– sessionquota

Maximum number of concurrent LSN sessions allowed for each subscriber for the specified protocol. When the number of LSN sessions reaches the limit for a subscriber, the NetScaler appliance does not allow the subscriber to open additional sessions.

Default value: 0

Minimum value: 0

Maximum value: 65535

– portpreserveparity

Enable port parity between a subscriber port and its mapped LSN NAT port. For example, if a subscriber initiates a connection from an odd numbered port, the NetScaler appliance allocates an odd numbered LSN NAT port for this connection. You must set this parameter for proper functioning of protocols that require the source port to be even or odd numbered, for example, in peer-to-peer applications that use RTP or RTCP protocol.

Possible values: ENABLED, DISABLED

Default value: DISABLED

– portpreserverange

If a subscriber initiates a connection from a well-known port (0-1023), allocate a NAT port from the well-known port range (0-1023) for this connection. For example, if a subscriber initiates a connection from port 80, the NetScaler appliance can allocate port 100 as the NAT port for this connection.

This parameter applies to dynamic NAT without port block allocation. It also applies to Deterministic NAT if the range of ports allocated includes well-known ports.

When all the well-known ports of all the available NAT IP addresses are used in different subscribers connections (LSN sessions), and a subscriber initiates a connection from a well-known port, the NetScaler appliance drops this connection.

Possible values: ENABLED, DISABLED

Default value: DISABLED

– syncheck

Silently drop any non-SYN packets for connections for which there is no LSN-NAT session present on the NetScaler appliance.

If you disable this parameter, the NetScaler appliance accepts any non-SYN packets and creates a new LSN session entry for this connection.

Following are some reasons for the NetScaler appliance to receive such packets:

- * LSN session for a connection existed but the NetScaler appliance removed this session because the LSN session was idle for a time that exceeded the configured session timeout.
- * Such packets can be a part of a DoS attack.

Possible values: ENABLED, DISABLED

Default value: ENABLED

Parameter Descriptions (of commands listed in the CLI procedure)

- add lsn appsprofile

- appsprofilename

Name for the LSN application profile. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN application profile is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, “lsn application profile1” or ‘lsn application profile1’).

This is a mandatory argument. Maximum Length: 127

- transportprotocol

Name of the protocol for which the parameters of this LSN application profile applies.

This is a mandatory argument.

Possible values: TCP, UDP, ICMP

- `ippooling`

NAT IP address allocation options for sessions associated with the same subscriber.

Available options function as follows:

- * **Paired**—The NetScaler appliance allocates the same NAT IP address for all sessions associated with the same subscriber. When all the ports of a NAT IP address are used in LSN sessions (for same or multiple subscribers), the NetScaler appliance drops any new connection from the subscriber.
- * **Random**—The NetScaler appliance allocates random NAT IP addresses, from the pool, for different sessions associated with the same subscriber.

This parameter is applicable to dynamic NAT allocation only.

Possible values: PAIRED, RANDOM

Default value: RANDOM

- `mapping`

Type of LSN mapping to apply to subsequent packets originating from the same subscriber IP address and port.

Consider an example of an LSN mapping that includes the mapping of the subscriber IP:port (X:x), NAT IP:port (N:n), and external host IP:port (Y:y).

Available options function as follows:

- * **ENDPOINT-INDEPENDENT**—Reuse the LSN mapping for subsequent packets sent from the same subscriber IP address and port (X:x) to any external IP address and port.
- * **ADDRESS-DEPENDENT**—Reuse the LSN mapping for subsequent packets sent from the same subscriber IP address and port (X:x) to the same external IP address (Y), regardless of the external port.
- * **ADDRESS-PORT-DEPENDENT**—Reuse the LSN mapping for subsequent packets sent from the same internal IP address and port (X:x) to the same external IP address and port (Y:y) while the mapping is still active.

Possible values: ENDPOINT-INDEPENDENT, ADDRESS-DEPENDENT, ADDRESS-PORT-DEPENDENT

Default value: ADDRESS-PORT-DEPENDENT

- `filtering`

Type of filter to apply to packets originating from external hosts.

Consider an example of an LSN mapping that includes the mapping of subscriber IP:port (X:x), NAT IP:port (N:n), and external host IP:port (Y:y).

Available options function as follows:

- * **ENDPOINT INDEPENDENT**—Filters out only packets not destined to the subscriber IP address and port X:x, regardless of the external host IP address and port source (Z:z). The NetScaler appliance forwards any packets destined to X:x. In other words, sending packets from the subscriber to any external IP address is sufficient to allow packets from any external hosts to the subscriber.
- * **ADDRESS DEPENDENT**—Filters out packets not destined to subscriber IP address and port X:x. In addition, the appliance filters out packets from Y:y destined for the subscriber (X:x) if the client has not previously sent packets to Y:anyport (external port independent). In other words, receiving packets from a specific external host requires that the subscriber first send packets to that specific external host's IP address.
- * **ADDRESS PORT DEPENDENT** (the default)—Filters out packets not destined to subscriber IP address and port (X:x). In addition, the NetScaler appliance filters out packets from Y:y destined for the subscriber (X:x) if the subscriber has not previously sent packets to Y:y. In other words, receiving packets from a specific external host requires that the subscriber first send packets first to that external IP address and port.

Possible values: ENDPOINT-INDEPENDENT, ADDRESS-DEPENDENT, ADDRESS-PORT-DEPENDENT

Default value: ADDRESS-PORT-DEPENDENT

– tcpproxy

Enable TCP proxy, which enables the NetScaler appliance to optimize the TCP traffic by using Layer 4 features.

Possible values: ENABLED, DISABLED

Default value: DISABLED

– td

ID of the traffic domain through which the NetScaler appliance sends the outbound traffic after performing LSN.

If you do not specify an ID, the appliance sends the outbound traffic through the default traffic domain, which has an ID of 0.

Default value: 65535

Maximum value: 65535

Parameter Descriptions (of commands listed in the CLI procedure)

- bind lsn appprofile

- appsprofilename

Name for the LSN application profile. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN application profile is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "lsn application profile1" or 'lsn application profile1').

This is a mandatory argument. Maximum Length: 127

- lsnport

Port numbers or range of port numbers to match against the destination port of the incoming packet from a subscriber. When the destination port is matched, the LSN application profile is applied for the LSN session. Separate a range of ports with a hyphen. For example, 40-90.

Parameter Descriptions (of commands listed in the CLI procedure)

- add lsn group

- groupname

Name for the LSN group. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN group is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "lsn group1" or 'lsn group1').

This is a mandatory argument. Maximum Length: 127

- clientname

Name of the LSN client entity to be associated with the LSN group. You can associate only one LSN client entity with an LSN group. You cannot remove this association or replace with another LSN client entity once the LSN group is created.

This is a mandatory argument. Maximum Length: 127

- nattype

Type of NAT IP address and port allocation (from the bound LSN pools) for subscribers:

Available options function as follows:

- ★ **Deterministic**—Allocate a NAT IP address and a block of ports to each subscriber (of the LSN client bound to the LSN group). The NetScaler appliance sequentially allocates NAT resources to these subscribers. The NetScaler appliance assigns the first block of ports (block size determined by the port block size parameter of the LSN group) on the beginning NAT IP address to the beginning subscriber IP address. The next range of ports is assigned to the next subscriber, and so on, until the NAT address does not have enough ports for the next subscriber. In this case, the first port block on the next NAT address is used for the subscriber, and so on. Because each subscriber now receives a deterministic NAT IP address and a block of ports, a subscriber can be identified without any need for logging. For a connection, a subscriber can be identified based only on the NAT IP address and port, and the destination IP address and port.
- ★ **Dynamic**—Allocate a random NAT IP address and a port from the LSN NAT pool for a subscriber's connection. If port block allocation is enabled (in LSN pool) and a port block size is specified (in the LSN group), the NetScaler appliance allocates a random NAT IP address and a block of ports for a subscriber when it initiates a connection for the first time. The appliance allocates this NAT IP address and a port (from the allocated block of ports) for different connections from this subscriber. If all the ports are allocated (for different subscribers connections) from the subscribers allocated port block, the appliance allocates a new random port block for the subscriber.

Possible values: DYNAMIC, DETERMINISTIC

Default value: DYNAMIC

– portblocksize

Size of the NAT port block to be allocated for each subscriber.

To set this parameter for Dynamic NAT, you must enable the port block allocation parameter in the bound LSN pool. For Deterministic NAT, the port block allocation parameter is always enabled, and you cannot disable it.

In Dynamic NAT, the NetScaler appliance allocates a random NAT port block, from the available NAT port pool of an NAT IP address, for each subscriber. For a subscriber, if all the ports are allocated from the subscribers allocated port block, the appliance allocates a new random port block for the subscriber.

– logging

Log mapping entries and sessions created or deleted for this LSN group. The NetScaler appliance logs LSN sessions for this LSN group only when both logging and session logging parameters are enabled.

The appliance uses its existing syslog and audit log framework to log LSN information. You must enable global level LSN logging by enabling the LSN parameter in the related NSLOG

action and SYLOG action entities. When the Logging parameter is enabled, the NetScaler appliance generates log messages related to LSN mappings and LSN sessions of this LSN group. The appliance then sends these log messages to servers associated with the NSLOG action and SYSLOG actions entities.

A log message for an LSN mapping entry consists of the following information:

- * NSIP address of the NetScaler appliance
- * Time stamp
- * Entry type (MAPPING or SESSION)
- * Whether the LSN mapping entry is created or deleted
- * Subscriber's IP address, port, and traffic domain ID
- * NAT IP address and port
- * Protocol name
- * Destination IP address, port, and traffic domain ID might be present, depending on the following conditions:
 - Destination IP address and port are not logged for Endpoint-Independent mapping
 - Only Destination IP address (and not port) is logged for Address-Dependent mapping
 - Destination IP address and port are logged for Address-Port-Dependent mapping

Possible values: ENABLED, DISABLED

Default value: DISABLED

– sessionLogging

Log sessions created or deleted for the LSN group. The NetScaler appliance logs LSN sessions for this LSN group only when both logging and session logging parameters are enabled.

A log message for an LSN session consists of the following information:

- * NSIP address of the NetScaler appliance
- * Time stamp
- * Entry type (MAPPING or SESSION)
- * Whether the LSN session is created or removed
- * Subscriber's IP address, port, and traffic domain ID
- * NAT IP address and port
- * Protocol name
- * Destination IP address, port, and traffic domain ID

Possible values: ENABLED, DISABLED

Default value: DISABLED

- sessionSync

In a high availability (HA) deployment, synchronize information of all LSN sessions related to this LSN group with the secondary node. After a failover, established TCP connections and UDP packet flows are kept active and resumed on the secondary node (new primary).

For this setting to work, you must enable the global session synchronization parameter.

Possible values: ENABLED, DISABLED

Default value: ENABLED

- snmptraplimit

Maximum number of SNMP Trap messages that can be generated for the LSN group in one minute.

Default value: 100

Minimum value: 0

Maximum value: 10000

- ftp

Enable Application Layer Gateway (ALG) for the FTP protocol. For some application-layer protocols, the IP addresses and protocol port numbers are usually communicated in the packets payload. When acting as an ALG, the appliance changes the packets payload to ensure that the protocol continues to work over LSN.

Note: The NetScaler appliance also includes ALG for ICMP and TFTP protocols. ALG for the ICMP protocol is enabled by default, and there is no provision to disable it. ALG for the TFTP protocol is disabled by default. ALG is enabled automatically for an LSN group when you bind a UDP LSN application profile, with endpoint-independent-mapping, endpoint-independent filtering, and destination port as 69 (well-known port for TFTP), to the LSN group.

Possible values: ENABLED, DISABLED

Default value: ENABLED

Parameter Descriptions (of commands listed in the CLI procedure)

- bind lsn group

- groupname

Name for the LSN group. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space,

colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN group is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "lsn group1" or 'lsn group1').

This is a mandatory argument. Maximum Length: 127

- poolname

Name of the LSN pool to bind to the specified LSN group. Only LSN Pools and LSN groups with the same NAT type settings can be bound together. Multiple LSN pools can be bound to an LSN group.

For Deterministic NAT, pools bound to an LSN group cannot be bound to other LSN groups. For Dynamic NAT, pools bound to an LSN group can be bound to multiple LSN groups. Maximum Length: 127

- transportprofilename

Name of the LSN transport profile to bind to the specified LSN group. Bind a profile for each protocol for which you want to specify settings.

By default, one LSN transport profile with default settings for TCP, UDP, and ICMP protocols is bound to an LSN group during its creation. This profile is called a default transport.

An LSN transport profile that you bind to an LSN group overrides the default LSN transport profile for that protocol. Maximum Length: 127

- appsprofilename

Name of the LSN application profile to bind to the specified LSN group. For each set of destination ports, bind a profile for each protocol for which you want to specify settings.

By default, one LSN application profile with default settings for TCP, UDP, and ICMP protocols for all destination ports is bound to an LSN group during its creation. This profile is called a default application profile.

When you bind an LSN application profile, with a specified set of destination ports, to an LSN group, the bound profile overrides the default LSN application profile for that protocol at that set of destination ports. Maximum Length: 127

Sample LSN Configurations

September 21, 2020

The following are examples of configuring LSN through command line interface.

Create a simple LSN configuration with a single subscriber network, single LSN NAT IP address, and default settings:

```
1 add lsn client LSN-CLIENT-1
2
3 Done
4
5 bind lsn client LSN-CLIENT-1 -network 192.0.2.0 -netmask 255.255.255.0
6
7 Done
8
9 add lsn pool LSN-POOL-1
10
11 Done
12
13 bind lsn pool LSN-POOL-1 203.0.113.3
14
15 Done
16
17 add lsn group LSN-GROUP-1 -clientname LSN-CLIENT-1
18
19 Done
20
21 bind lsn group LSN-GROUP-1 -poolname pool1 LSN-POOL-1
22
23 Done
```

Create an LSN configuration with an extended ACL for identifying LSN subscribers:

```
1 add ns acl LSN-ACL-2 ALLOW -srcIP 192.0.2.10-192.0.2.20
2
3 Done
4
5 apply acls
6
7 Done
8
9 add lsn client LSN-CLIENT-2
10
11 Done
12
13 bind lsn client LSN-CLIENT-2 -aclname LSN-ACL-2
14
15 Done
16
17 add lsn pool LSN-POOL-2
18
19 Done
20
21 bind lsn pool LSN-POOL-2 203.0.113.5-203.0.113.10
22
23 Done
24
```

```
25 add lsn group LSN-GROUP-2 -clientname LSN-CLIENT-2
26
27 Done
28
29 bind lsn group LSN-GROUP-2 -poolname LSN-POOL-2
30
31 Done
```

Create an LSN configuration with endpoint-independent mapping for HTTP protocol (port 80) and address-port dependent mapping for SSH protocol (port 22). Also, restrict each subscriber to use a maximum of 1000 NAT ports for TCP protocol and 100 NAT ports for UDP protocol. Restrict each subscriber to have a maximum of 2000 concurrent sessions for TCP protocol. Restrict the group to have a maximum of 30000 concurrent sessions for TCP protocol:

```
1 add lsn client LSN-CLIENT-3
2
3 Done
4
5 bind lsn client LSN-CLIENT-3 -network 192.0.3.0 -netmask 255.255.255.0
6
7 Done
8
9 add lsn pool LSN-POOL-3
10
11 Done
12
13 bind lsn pool LSN-POOL-3 203.0.113.11
14
15 Done
16
17 add lsn group LSN-GROUP-3 -clientname LSN-CLIENT-3
18
19 Done
20
21 bind lsn group LSN-GROUP-3 -poolname LSN-POOL-3
22
23 Done
24
25 add lsn appsprofile LSN-APPS-HTTPPROFILE-3 TCP -mapping ENDPOINT-
    INDEPENDENT
26
27 Done
28
29 bind lsn appsprofile LSN-APPS-HTTPPROFILE-3 80
30
31 Done
32
33 bind lsn group LSN-GROUP-3 -applicationprofile LSN-APPS-HTTPPROFILE
    -3
34
35 Done
36
```

```
37 add lsn appprofile LSN-APPS-SSHPROFILE-3 TCP -mapping ADDRESS-PORT-
    DEPENDENT
38
39 Done
40
41 bind lsn appprofile LSN-APPS-SSHPROFILE-3 22
42
43 Done
44
45 bind lsn group LSN-GROUP-3 -applicationfilename LSN-APPS-SSHPROFILE
    -3
46
47 Done
48
49 add lsn transportprofile LSN-TRANS-PROFILE-TCP-3 TCP -portquota 1000 -
    sessionquota 2000 -groupSessionLimit 30000
50
51 Done
52
53 bind lsn group LSN-GROUP-3 -transportfilename LSN-TRANS-PROFILE-TCP
    -3
54
55 Done
56
57 add lsn transportprofile LSN-TRANS-PROFILE-UDP-3 UDP -portquota 100
58
59 Done
60
61 bind lsn group LSN-GROUP-3 -transportfilename LSN-TRANS-PROFILE-UDP
    -3
62
63 Done
```

Create an LSN configuration for a large set of subscribers:

```
1 add lsn client LSN-CLIENT-4
2
3 Done
4
5 bind lsn client LSN-CLIENT-4 -network 192.0.4.0 -netmask 255.255.255.0
6
7 Done
8
9 bind lsn client LSN-CLIENT-4 -network 192.0.5.0 -netmask 255.255.255.0
10
11 Done
12
13 bind lsn client LSN-CLIENT-4 -network 192.0.6.0 -netmask 255.255.255.0
14
15 Done
16
17 bind lsn client LSN-CLIENT-4 -network 192.0.7.0 -netmask 255.255.255.0
18
```

```
19 Done
20
21 bind lsn client LSN-CLIENT-4 -network 192.0.8.0 -netmask 255.255.255.0
22
23 Done
24
25 add lsn pool LSN-POOL-4
26
27 Done
28
29 bind lsn pool LSN-POOL-4 203.0.113.30-203.0.113.40
30
31 Done
32
33 bind lsn pool LSN-POOL-4 203.0.113.45-203.0.113.50
34
35 Done
36
37 bind lsn pool LSN-POOL-4 203.0.113.55-203.0.113.60
38
39 Done
40
41 add lsn group LSN-GROUP-4 -clientname LSN-CLIENT-4
42
43 Done
44
45 bind lsn group LSN-GROUP-4 -poolname LSN-POOL-4
46
47 Done
48
49 add lsn appsprofile LSN-APPS-WELLKNOWNPROFILE-4 TCP -mapping ENDPOINT-
    INDEPENDENT
50
51 Done
52
53 bind lsn appsprofile LSN-APPS-WELLKNOWN-PORTS-PROFILE-4 1- 1023
54
55 Done
56
57 bind lsn group LSN-GROUP-4 -applicationprofilename LSN-APPS-WELLKNOWN-
    PORTS-PROFILE-4
58
59 Done
```

Create an LSN configuration with sharing of NAT resources among multiple LSN groups. In this example, LSN pool LSN-POOL-5 is shared with LSN groups LSN-GROUP-5 and LSN-GROUP-6:

```
1 add lsn client LSN-CLIENT-5
2
3 Done
4
5 bind lsn client LSN-CLIENT-5 -network 192.0.15.0 -netmask 255.255.255.0
6
```

```
7 Done
8
9 add lsn pool LSN-POOL-5
10
11 Done
12
13 bind lsn pool LSN-POOL-5 203.0.113.12-203.0.113.14
14
15 Done
16
17 add lsn group LSN-GROUP-5 -clientname LSN-CLIENT-5
18
19 Done
20
21 bind lsn group LSN-GROUP-5 -poolname LSN-POOL-5
22
23 Done
24
25 add lsn client LSN-CLIENT-6
26
27 Done
28
29 bind lsn client LSN-CLIENT-6 -network 192.0.16.0 -netmask 255.255.255.0
30
31 Done
32
33 add lsn pool LSN-POOL-6
34
35 Done
36
37 bind lsn pool LSN-POOL-6 203.0.113.15-203.0.113.18
38
39 Done
40
41 add lsn group LSN-GROUP-6 -clientname LSN-CLIENT-6
42
43 Done
44
45 bind lsn group LSN-GROUP-6 -poolname LSN-POOL-6
46
47 Done
48
49 bind lsn group LSN-GROUP-6 -poolname LSN-POOL-5
50
51 Done
```

Create an LSN configuration with deterministic NAT resource allocation:

```
1 add lsn client LSN-CLIENT-7
2
3 Done
4
5 bind lsn client LSN-CLIENT-7 -network 192.0.17.0 -netmask 255.255.255.0
```

```
6
7 Done
8
9 add lsn pool LSN-POOL-7 -nattype DETERMINISTIC
10
11 Done
12
13 bind lsn pool LSN-POOL-7 203.0.113.19-203.0.113.23
14
15 Done
16
17 add lsn group LSN-GROUP-7 -clientname LSN-CLIENT-7 -nattype
    DETERMINISTIC -portblocksize 1024
18
19 Done
20
21 bind lsn group LSN-GROUP-7 -poolname LSN-POOL-7
22
23 Done
```

Create an LSN configuration with multiple subscriber networks having the same network address but each network belonging to a different traffic domain. Also, restrict the outbound traffic related to HTTP protocol (port 80), sending it through a particular traffic domain (td 5):

```
1 add lsn client LSN-CLIENT-8
2
3 Done
4
5 bind lsn client LSN-CLIENT-8 -network 192.0.18.0 -netmask 255.255.255.0
    -td 1
6
7 Done
8
9 bind lsn client LSN-CLIENT-8 -network 192.0.18.0 -netmask 255.255.255.0
    -td 2
10
11 Done
12
13 bind lsn client LSN-CLIENT-8 -network 192.0.18.0 -netmask 255.255.255.0
    -td 3
14
15 Done
16
17 add lsn pool LSN-POOL-8
18
19 Done
20
21 bind lsn pool LSN-POOL-8 203.0.113.80-203.0.113.86
22
23 Done
24
25 add lsn group LSN-GROUP-8 -clientname LSN-CLIENT-8
26
```

```
27 Done
28
29 bind lsn group LSN-GROUP-8 -poolname LSN-POOL-8
30
31 Done
32
33 add lsn appprofile LSN-APPS-HTTP-PROFILE-8 TCP -td 5
34
35 Done
36
37 bind lsn appprofile LSN-APPS-HTTP-PROFILE-8 80
38
39 Done
40
41 bind lsn group LSN-GROUP-8 -applicationprofile LSN-APPS-HTTP-
    PROFILE-8
42
43 Done
```

Create an LSN configuration that restricts the outbound traffic of a specific protocol (TCP), sending it through a particular traffic domain (td 5). With endpoint-independent filtering, receive inbound traffic related to this protocol (TCP) on any traffic domain:

```
1 add lsn client LSN-CLIENT-9
2
3 Done
4
5 bind lsn client LSN-CLIENT-9 -network 192.0.9.0 -netmask 255.255.255.0
    -td 1
6
7 Done
8
9 add lsn pool LSN-POOL-9
10
11 Done
12
13 bind lsn pool LSN-POOL-9 203.0.113.90
14
15 Done
16
17 add lsn group LSN-GROUP-9 -clientname LSN-CLIENT-9
18
19 Done
20
21 bind lsn group LSN-GROUP-9 -poolname LSN-POOL-9
22
23 Done
24
25 add lsn appprofile LSN-APPS-PROFILE-9 TCP -filtering ENDPOINT-
    INDEPENDENT -td 5
26
27 Done
28
```



```
29 bind lsn group LSN-GROUP-9 -appfile LSN-APPS-PROFILE-9
30
31 Done
```

Create an LSN configuration that restricts outbound HTTP (port 80) traffic, sending it through a particular traffic domain (td 10). With address-dependent filtering, receive inbound traffic related to this protocol (HTTP) on the specified traffic domain (td 10):

```
1 add lsn client LSN-CLIENT-10
2
3 Done
4
5 bind lsn client LSN-CLIENT-10 -network 192.0.10.0 -netmask
   255.255.255.0 -td 1
6
7 Done
8
9 add lsn pool LSN-POOL-10
10
11 Done
12
13 bind lsn pool LSN-POOL-10 203.0.113.100
14
15 Done
16
17 add lsn group LSN-GROUP-10 -clientname LSN-CLIENT-10
18
19 Done
20
21 bind lsn group LSN-GROUP-10 -poolname LSN-POOL-10
22
23 Done
24
25 add lsn appsprofile LSN-APPS-PROFILE-10 TCP -mapping ENDPOINT -
   INDEPENDENT -filtering ADDRESS-DEPENDENT -td 10
26
27 Done
28
29 bind lsn appsprofile LSN-APPS-PROFILE-10 80
30
31 Done
32
33 bind lsn group LSN-GROUP-10 -appfile LSN-APPS-PROFILE-10
34
35 Done
```

Configuring Static LSN Maps

May 2, 2023

The NetScaler appliance supports manual creation of a one-to-one LSN mapping between a subscriber IP address:port and a NAT IP address:port. Static LSN mappings are useful in cases where you want to ensure that the connections initiated to a NAT IP:Port maps to the subscriber IP address:Port. For example, Web servers located in the internal network.

To create a static LSN mapping by using the command line interface

At the command prompt, type:

```
1 add lsn static <name> <transportprotocol> <subscrIP> <subscrPort> [-td
    <positive_integer>] [<natIP> [<natPort>]] [-destIP <ip_addr> [-dsttd
    <positive_integer>]]
2 - show lsn static
```

To create a static LSN mapping by using the configuration utility

Navigate to System > Large Scale NAT > Static, and add a new static mapping.

Parameter Descriptions (of commands listed in the CLI procedure)

add lsn static name

Name for the LSN static mapping entry. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN group is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "lsn static1" or 'lsn static1'). This is a mandatory argument. Maximum Length: 127

transportprotocol

Protocol for the LSN mapping entry. This is a mandatory argument. Possible values: TCP, UDP, ICMP

subscrIP

IPv4 address of an LSN subscriber for the LSN mapping entry. This is a mandatory argument.

subscrPort

Port of the LSN subscriber for the LSN mapping entry. This is a mandatory argument. Maximum value: 65535

td

ID of the traffic domain to which the subscriber belongs. If you do not specify an ID, the subscriber is assumed to be a part of the default traffic domain. Default value: 0, Minimum value: 0, Maximum value: 4094

natIP

IPv4 address, already existing on the NetScaler appliance as type LSN, to be used as NAT IP address for this mapping entry.

natPort

NAT port for this LSN mapping entry.

destIP

Destination IP address for the LSN mapping entry.

dsttd

ID of the traffic domain through which the destination IP address for this LSN mapping entry is reachable from the NetScaler appliance. If you do not specify an ID, the destination IP address is assumed to be reachable through the default traffic domain, which has an ID of 0. Default value: 0, Minimum value: 0, Maximum value: 4094

Wildcard Port Static Maps

A static mapping entry is usually a one-to-one LSN mapping between a subscriber IP address:port and a NAT IP address:port. A one-to-one static LSN mapping entry exposes only one port of the subscriber to the Internet.

Some situations might require exposing all ports (64K) of a subscriber to the Internet (for example, a server hosted on an internal network and running a different service on each port). To make these

internal services accessible through the Internet, you have to expose all the ports of the server to the Internet.

One way to meet this requirement is to add 64K one-to-one static mapping entries, one mapping entry for each port. Creating 64K entries is very cumbersome and a big task. Also, this large number of configuration entries might lead to performance issues in the NetScaler appliance.

Another simple method is to use wildcard ports in a static mapping entry. You just need to create one static mapping entry with NAT-port and subscriber-port parameters set to the wildcard character (*), and the protocol parameter set to ALL, to expose all the ports of a subscriber to the Internet. For a subscriber's inbound or outbound connections matching a wildcard static mapping entry, the subscriber's port does not change after the NAT operation.

When a subscriber-initiated connection to the Internet matches a wildcard static mapping entry, the NetScaler appliance assigns a NAT port that has the same number as the subscriber port from which the connection is initiated. Similarly, an Internet host gets connected to a subscriber's port by connecting to the NAT port that has the same number as the subscriber's port.

Configuring the NetScaler appliance to Provide Access to All Ports of an IPv4 Subscriber

To configure the NetScaler appliance to provide access to all ports of an IPv4 subscriber, create a wildcard static map with the following mandatory parameter settings:

- Protocol=ALL
- Subscriber port = *
- NAT port = *

In a wildcard static map, unlike in a one-to-one static map, setting the NAT IP parameter is mandatory. Also, the NAT IP address assigned to a wildcard static map cannot be used for any other subscribers.

To create a wildcard static map by using the command line interface

At the command prompt, type:

```
1 add lsn static <name> ALL <subscrIP> * <natIP> * [-td <
    positive_integer>] [-destIP <ip_addr> [-dsttd <positive_integer>]]
2
3 show lsn static
```

Sample Configuration

In the following sample configuration of a wildcard static map, all ports of a subscriber whose IP address is 192.0.2.10 are made accessible through NAT IP 203.0.11.33.

Sample configuration:

```
1 add lsn static NAT44-WILDCARD-STATIC-1 ALL 192.0.2.10 * 203.0.113.33 *
2
3 Done
```

Configuring Application Layer Gateways

May 2, 2023

For some Application layer protocols, the IP addresses and protocol port numbers are also communicated in the packet's payload. Application Layer Gateway for a protocol parses the packet's payload and does necessary changes to ensure that the protocol continues to work over LSN.

The NetScaler appliance supports ALG for the following protocols:

- FTP
- ICMP
- TFTP
- PPTP
- SIP
- RTSP

Application Layer Gateway for FTP, ICMP, and TFTP Protocols

May 2, 2023

You can enable or disable ALG for the FTP protocol for an LSN configuration by enabling or disabling the FTP option of the LSN group of the LSN configuration.

ALG for the ICMP protocol is enabled by default, and there is no provision to disable it.

ALG for the TFTP protocol is disabled by default. TFTP ALG is enabled automatically for an LSN configuration when you bind a UDP LSN application profile, with endpoint-independent-mapping, endpoint-independent filtering, and destination port as 69 (well-known port for TFTP), to the LSN group.

Sample LSN Configuration for FTP ALG:

In the following sample LSN configuration, FTP ALG is enabled for subscribers that have IP address in the range 192.0.2.30-192.0.2.100.

```
1 add ns acl LSN-ACL-1 ALLOW -srcIP 192.0.2.30-192.0.2.100
2
```

```
3 Done
4
5 apply acls
6
7 Done
8
9 add lsn client LSN-CLIENT-1
10
11 Done
12
13 bind lsn client LSN-CLIENT-1 -aclname LSN-ACL
14
15 Done
16
17 add lsn pool LSN-POOL-1
18
19 Done
20
21 bind lsn pool LSN-POOL-1 203.0.113.10
22
23 Done
24
25 add lsn group LSN-GROUP-1 -clientname LSN-CLIENT-1 -FTP ENABLED
26
27 Done
28
29 bind lsn group LSN-GROUP-1 -poolname pool1 LSN-POOL-1
30
31 Done
```

Sample LSN Configuration for TFTP ALG:

In the following sample LSN configuration, endpoint-independent mapping and endpoint-independent filtering are enabled for TFTP protocol (UDP port 69). The NetScaler appliance automatically enables TFTP ALG for this LSN configuration.

```
1 add lsn client LSN-CLIENT-2
2
3 Done
4
5 bind lsn client LSN-CLIENT-2 -network 198.51.100.0 -netmask
   255.255.255.0
6
7 Done
8
9 add lsn pool LSN-POOL-2
10
11 Done
12
13 bind lsn pool LSN-POOL-2 203.0.113.10-203.0.113.11
14
15 Done
16
```

```
17 add lsn group LSN-GROUP-2 -clientname LSN-CLIENT-2
18
19 Done
20
21 bind lsn group LSN-GROUP-2 -poolname pool1 LSN-POOL-2
22
23 Done
24
25 add lsn appspfile LSNAPPSPROFILE-TFTP-2 UDP -mapping ENDPOINT-
    INDEPENDENT - filtering ENDPOINT-INDEPENDENT
26
27 Done
28
29 bind lsn appspfile LSNAPPSPROFILE-TFTP-2 69
30
31 Done
32
33 bind lsn group LSN-GROUP-1 -applicationfilename LSNAPPSPROFILE-TFTP
    -2
34
35 Done
```

Application Layer Gateway for PPTP Protocol

May 2, 2023

The NetScaler appliance supports Application Layer Gateways (ALGs) for the Point-to-Point Tunneling Protocol (PPTP).

PPTP is a network protocol that enables secure transfer of data from a remote client to an enterprise server by creating a tunnel across TCP/IP-based data networks. PPTP encapsulates PPP packets into IP packets for transmission over the Internet. PPTP establishes a tunnel for each communicating PPTP network server (PNS)-PPTP Access Concentrator (PAC) pair. After the tunnel is set up, enhanced generic routing encapsulation (GRE) is used to exchange PPP packets. A call ID in the GRE header indicates the session to which a particular PPP packet belongs.

The NetScaler appliance recognizes PPTP packets that arrive on the default TCP port, 1723. The appliance parses PPTP control packets, translates the call ID, and assigns a NAT IP address. For two-way data communication between the client and server, the NetScaler appliance creates an LSN session entry based on the server call ID, and an LSN session based on the client call ID. The appliance then parses the GRE data packets and translates call IDs on the basis of the two LSN session entries.

For PPTP protocol, the NetScaler appliance also includes timeout setting for any idle PPTP LSN sessions. If a PPTP LSN session is idle for a time that exceeds the timeout setting, the NetScaler appliance removes the session.

Limitations:

The following are the limitations of PPTP ALG on a NetScaler appliance:

- PPTP ALG is not supported for hairpin LSN flow.
- PPTP ALG is not supported to work with any RNAT configuration.
- PPTP ALG is not supported in NetScaler clusters.

Configuring PPTP ALG

Configuring PPTP ALG on the NetScaler appliance consist of the following tasks:

- Create an LSN configuration and enable PPTP ALG on it. In an LSN configuration, the LSN group includes the PPTP ALG setting. For instructions on creating an LSN configuration, see [Configuration Steps for LSN](#).
- (Optional) Set the global timeout for idle PPTP LSN sessions.

To enable PPTP ALG for an LSN configuration by using the CLI

At the command prompt, type:

```
1 add lsn group <groupname> -clientname <string> [-pptp ( ENABLED |  
    DISABLED )]  
2  
3 show lsn group
```

To set the global timeout for idle PPTP LSN sessions by using the CLI

At the command prompt, type:

```
1 set appAlgParam -pptpGreIdleTimeout <positive_integer>  
2  
3 show appAlgParam
```

Example:

In the following sample LSN configuration, PPTP ALG is enabled for subscribers in the 192.0.2.0/24 network.

Also idle PPTP LSN session timeout is set to 200 secs.

```
1 add lsn client LSN-CLIENT-1  
2  
3 Done  
4  
5 bind lsn client LSN-CLIENT-1 -network 192.0.2.0 -netmask 255.255.255.0
```



```
6
7 Done
8
9 add lsn pool LSN-POOL-1
10
11 Done
12
13 bind lsn pool LSN-POOL-1 203.0.113.3
14
15 Done
16
17 add lsn group LSN-GROUP-1 -clientname LSN-CLIENT-1 -pntp ENABLED
18
19 Done
20
21 bind lsn group LSN-GROUP-1 -poolname pool1 LSN-POOL-1
22
23 Done
24
25 set appAlgParam -pntpGreIdleTimeout 200
26
27 Done
```

Application Layer Gateway for SIP Protocol

May 2, 2023

Using Large Scale NAT (LSN) with Session Initiation Protocol (SIP) is complicated, because SIP messages contain IP addresses in the SIP headers as well as in the SIP body. When LSN is used with SIP, the SIP headers contain information about the caller and the receiver, and the device translates this information to hide it from the outside network. The SIP body contains the Session Description Protocol (SDP) information, which includes IP addresses and port numbers for transmission of the media.

SIP ALG adheres to the following RFCs:

- RFC 3261
- RFC 3581
- RFC 4566
- RFC 4475

Note

SIP ALG is supported in a NetScaler standalone appliance, in a NetScaler high availability setup, as well as in a NetScaler cluster setup.

How SIP ALG Works

How IP address translation is performed depends on the type and direction of the message. A message can be any of the following:

- Inbound request
- Outbound response
- Outbound request
- Inbound response

For an outgoing message, the private IP address and port number of the SIP client are replaced with the NetScaler owned public IP address and port number, called the *LSN pool IP address and port number*, specified during LSN configuration. For an incoming message, the LSN pool IP address and the port number are replaced with the private address of the client. If the message contains any public IP addresses, the NetScaler SIP ALG retains them. Also, a pinhole is created on the:

- LSN pool IP address and port on behalf of the private client, so that the messages that arrive at this IP address and port from the public network are treated as SIP messages.
- Public IP address and port on behalf of the public clients, so that the messages that arrive at this IP address and port from the private network are treated as SIP messages.

When a SIP message is sent out across the network, the SIP Application Layer Gateway (ALG) collects information from the message and translates the IP addresses in the following headers into LSN pool IP addresses:

- Via
- Contact
- Route
- Record-Route

In the following sample SIP request message, LSN replaces the IP addresses in the header fields to hide them from the outside network.

```
1 INVITE adam@10.102.185.156 SIP/2.0 Via: SIP/2.0/UDP 192.170.1.161:62914
  From: eve@10.120.210.3 To: adam@10.102.185.156 Call-ID: a12abcde@10
  .120.210.3 Contact: adam@10.102.185.156 Route: <sip:netscreen@10
  .150.20.3:5060> Record-Route: <sip:netscreen@10.150.20.3:5060>
```

When a message containing SDP information arrives, the SIP ALG collects information from the message and translates the IP addresses in the following fields into LSN pool IP addresses and port numbers:

- c= (connection information)

This field can appear at the session or media level. It appears in the following format:

`c=<network-type><address-type><connection-address>`

If the destination IP address is a unicast IP address, the SIP ALG creates pinholes by using the IP address and port numbers specified in the m= field.

- m= (media announcement)

This field appears at the media level and contains the description of the media. It appears in the following format:

`m=<media><port><transport><fmt list>`

- a= (information about the media field)

This field can appear at the session or media level, in the following format:

`a=<attribute>`

`a=<attribute>:<value>`

The following excerpt from a sample SDP section shows the fields that are translated for resource allocation.

`o=user 2344234 55234434 IN IP4 10.150.20.3`

`c=IN IP4 10.150.20.3`

`m=audio 43249 RTP/AVP 0`

The following table shows how SIP payload is translated.

Inbound Request (from public to private)	To	None	
			From Call-ID Via Request-URI Contact
			Record-Route Route
Outbound Response (from private to public)	To	None	From

			Call-ID
			Via
			Request-URI
			Contact
		Record-Route	
			Route
Outbound Request (from private to public)	To	None	
			From
			Call-ID
			Via
			Request-URI
			Contact
		Record-Route	
			Route
Inbound Response (from public to private)	To	None	
			From
			Call-ID
			Via
			Request-URI
			Contact
		Record-Route	
			Route

Limitations of SIP ALG

A SIP ALG has the following limitations:

- Only SDP payload is supported.
- The following are not supported:

- Multicast IP addresses
- Encrypted SDP
- SIP TLS
- FQDN translation
- SIP layer authentication
- TD/partitioning
- Multipart body
- SIP messages over IPv6 network
- Line folding

Tested SIP Clients and Proxy Servers


The following SIP clients and proxy server have been tested with SIP ALG:

- **SIP Clients:** X-Lite, Zoiper, Ekiga, Avaya
- **Proxy Server:** openSIPS

LSN SIP Scenario: SIP Proxy Outside the Private Network (Public Network)

SIP Client Registration


For a typical SIP call, SIP client must register with the SIP registrar by composing a REGISTER request and sending it to the SIP registrar. The NetScaler appliance's SIP ALG intercepts the request, replaces the IP address and port number in the request with the LSN pool IP address and port number provided in the LSN configuration, and forwards the request to the SIP registrar. The SIP ALG then opens a pinhole in the NetScaler configuration to allow further SIP communication between the SIP client and the SIP registrar. The SIP registrar sends a 200 OK response to the SIP client over the LSN pool IP address and port number. The NetScaler appliance captures this response in the pinhole, and the SIP ALG replaces the SIP header, putting the original Contact, Via, Route, and Record-Route SIP fields back into the message. The SIP ALG then forwards the message to the SIP client. The following figure shows how SIP ALG uses LSN in a SIP call registration

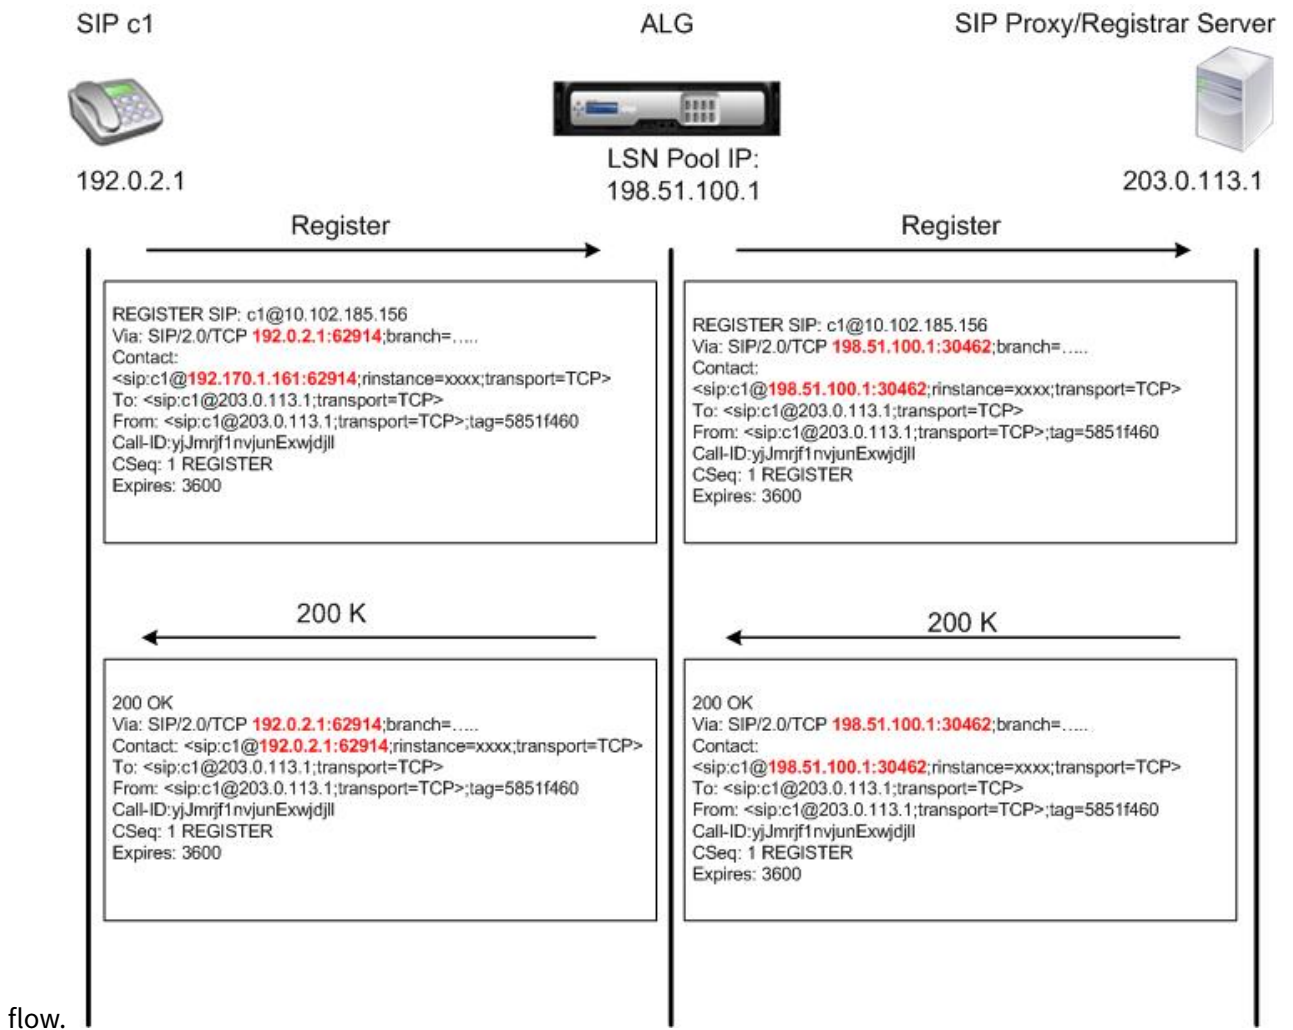

flow.

Outgoing Calls


A SIP call is initiated with a SIP INVITE message sent from the internal to the external network. The SIP ALG performs NAT on the IP addresses and port numbers in the Via, Contact, Route, and Record-Route SIP header fields, replacing them with the LSN pool IP address and port number. LSN stores these mappings for subsequent SIP messages in the SIP call. The SIP ALG then opens separate pinholes in the NetScaler configuration to allow SIP and media through the NetScaler appliance on the dynamically assigned ports specified in the SDP and SIP headers. When a 200 OK message arrives at the NetScaler, it is captured by one of the created pinholes. The SIP ALG replaces the SIP header, restoring the original Contact, Via, Route, and Record-Route SIP fields, and then forwards the message to the internal SIP

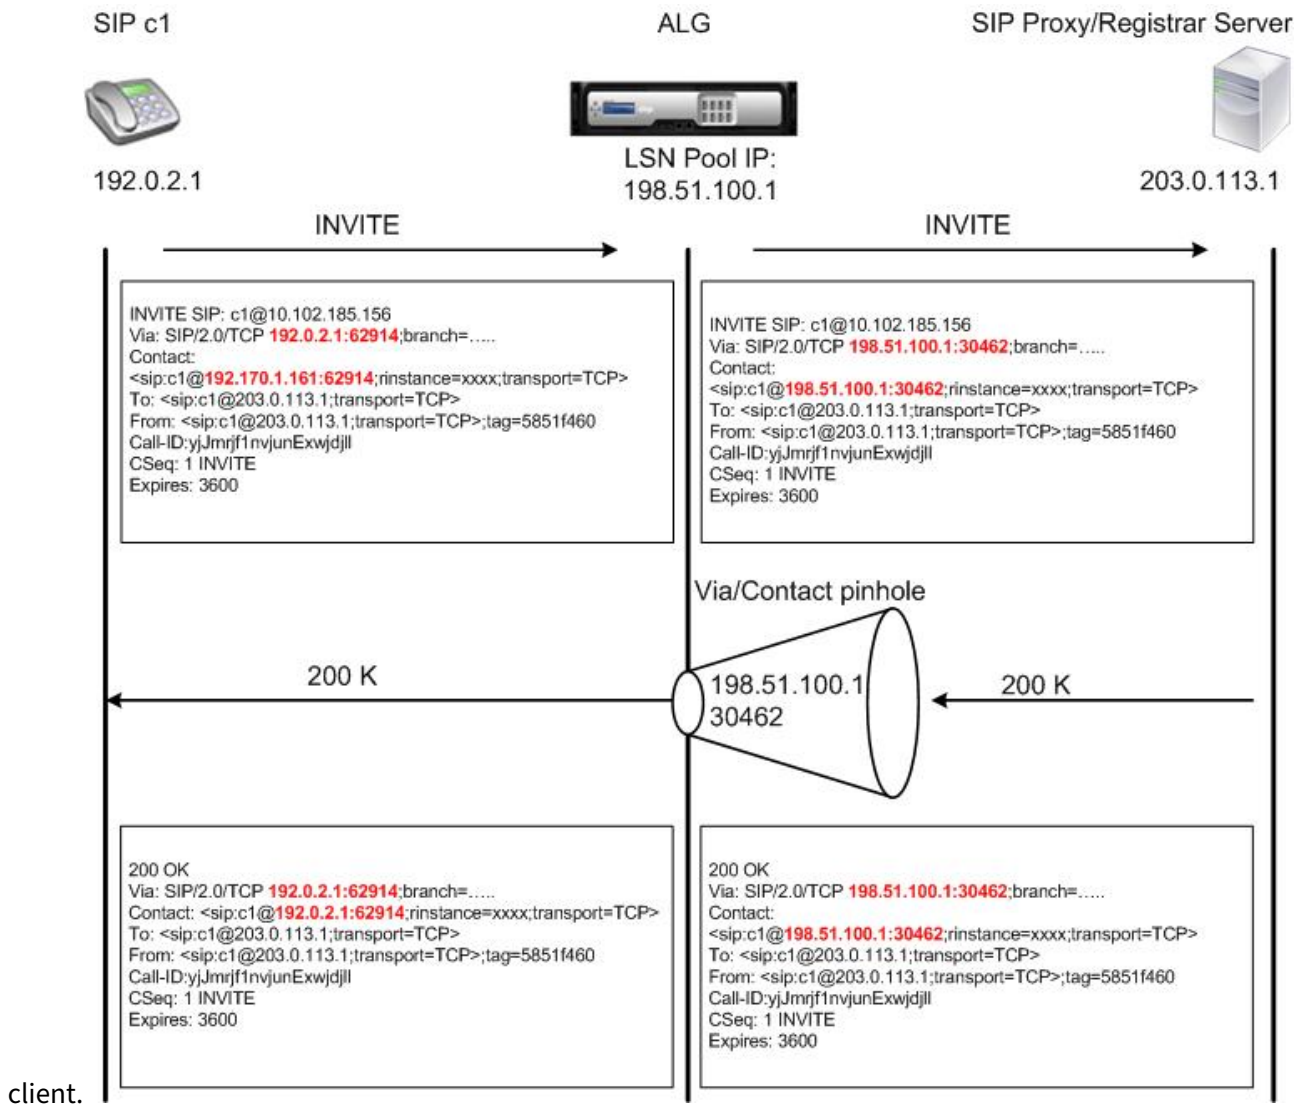

Incoming Calls

A SIP incoming call is initiated with a SIP INVITE message from the external client to the internal network. The SIP registrar forwards the INVITE message to the SIP client in the internal network, using the pinhole that was created when the Internal SIP client registered with the SIP registrar.

The SIP ALG performs NAT on the LSN IP addresses and port numbers in the Via, Contact, Route, and Record-Route SIP header fields, translating them to the IP address and port number of the internal SIP client, and forwards the request to the SIP client. When the 200 OK response message sent by the internal SIP client arrives at the NetScaler appliance, the SIP ALG performs NAT on the IP addresses and port numbers in the Via, Contact, Route, and Record-Route SIP header fields, translating them to the LSN pool IP address and port number, forwards the response message to the SIP registrar, and then opens a pinhole in the outbound direction for further SIP communi-

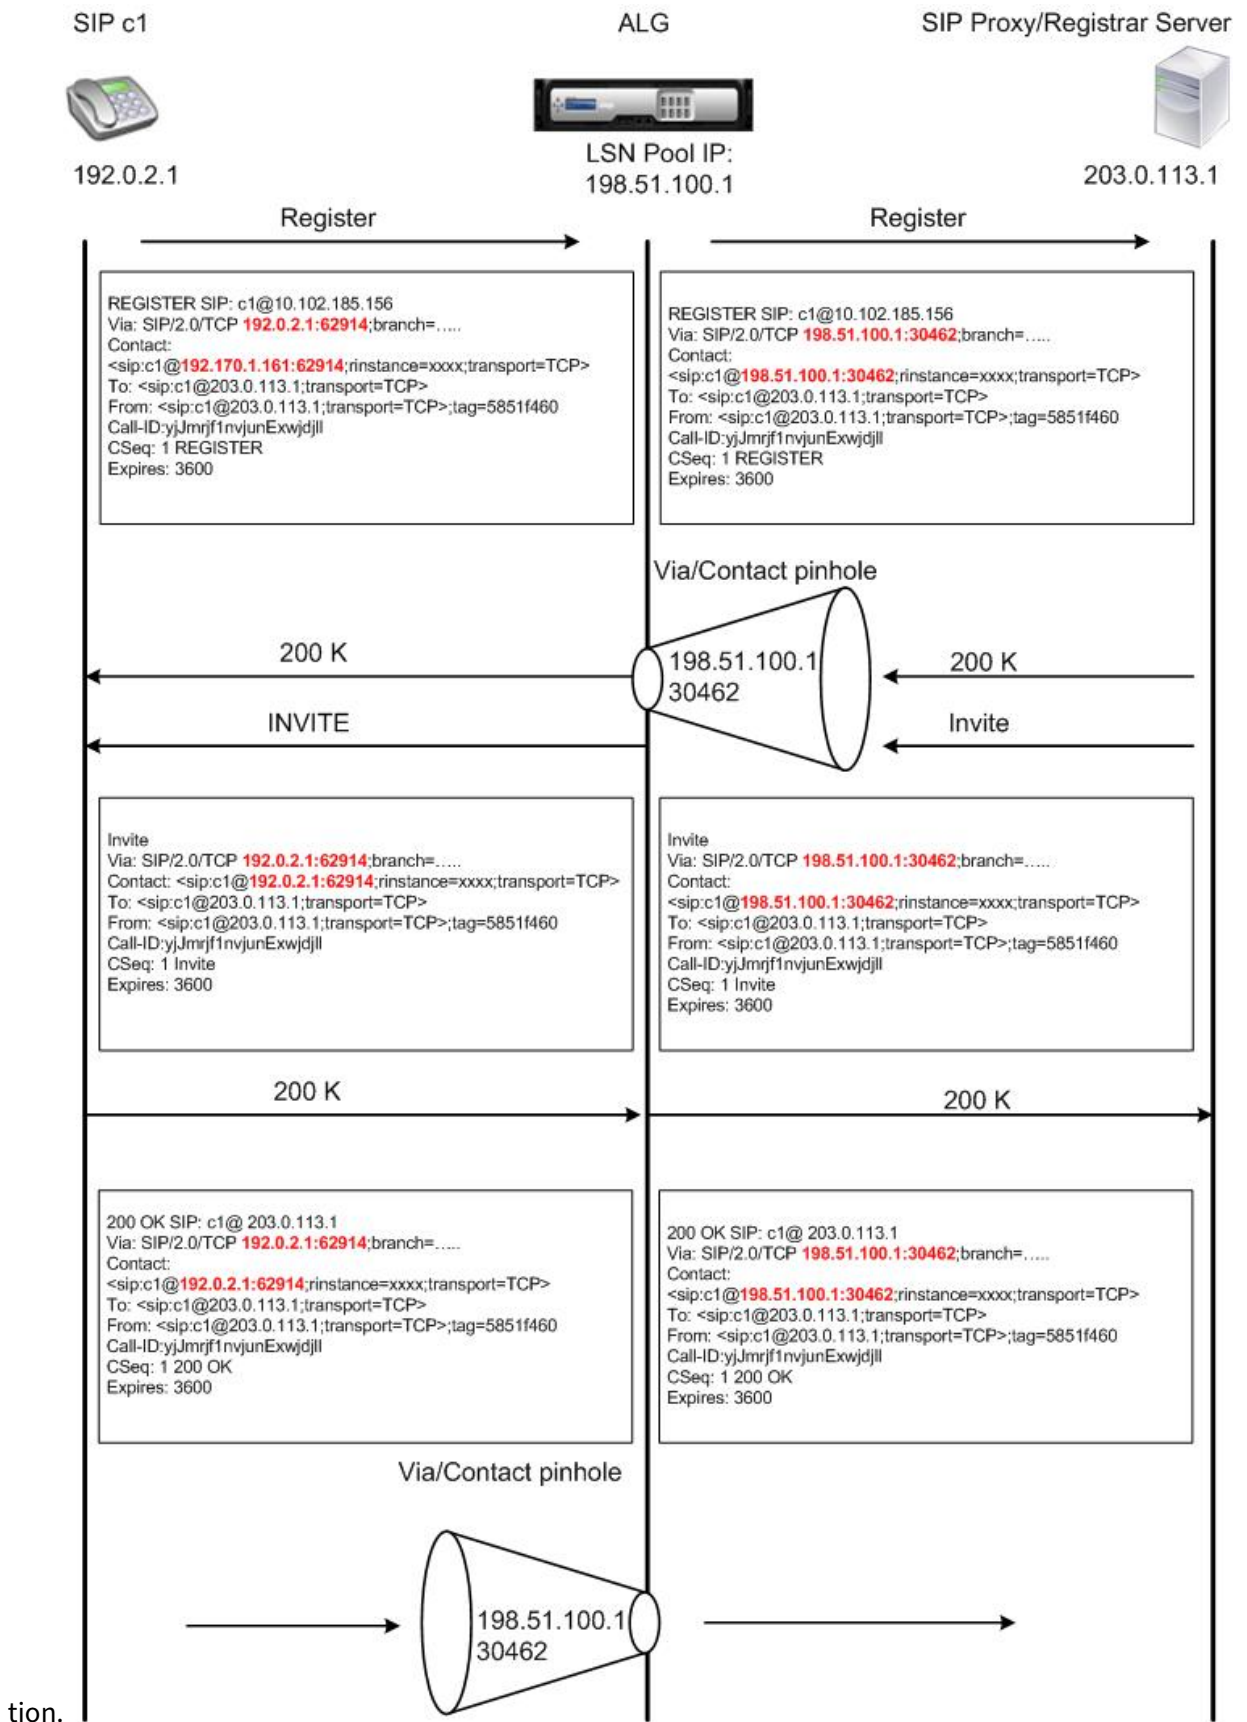

tion.

Call Termination

The BYE message terminates a call. When the device receives a BYE message, it translates the header fields in the message just as it does for any other message. But because a BYE message must be acknowledged by the receiver with a 200 OK, the ALG delays call teardown for 15 seconds to allow time for transmission of the 200 OK.

Call Between Clients in the Same Network

When both client A and client B in the same network initiate a call, the SIP messages are routed through the SIP proxy in the outside network. The SIP ALG processes the INVITE from client A as a normal outgoing call. Since client B is in the same network, the SIP proxy sends the INVITE back to the NetScaler appliance. The SIP ALG examines the INVITE message, determines that it contains the NAT IP address of client A, and replaces that address with the private IP address of client A before sending the message to client B. Once the call is established between the clients, the NetScaler is not involved in the media transmission between the clients.

More LSN SIP Scenarios: SIP Proxy Inside the Private Network

If you want to host the SIP Proxy server inside the private network, Citrix recommends that you do one of the following:

- Configure a static LSN Mapping for the private SIP proxy. For more information, see [Configuring Static LSN Maps](#). Make sure that the NAT port is the same as the port configured in the SIP ALG profile.
- Configure the SIP Proxy server inside a demilitarized zone (DMZ).

Figure 1. SIP Call Registration


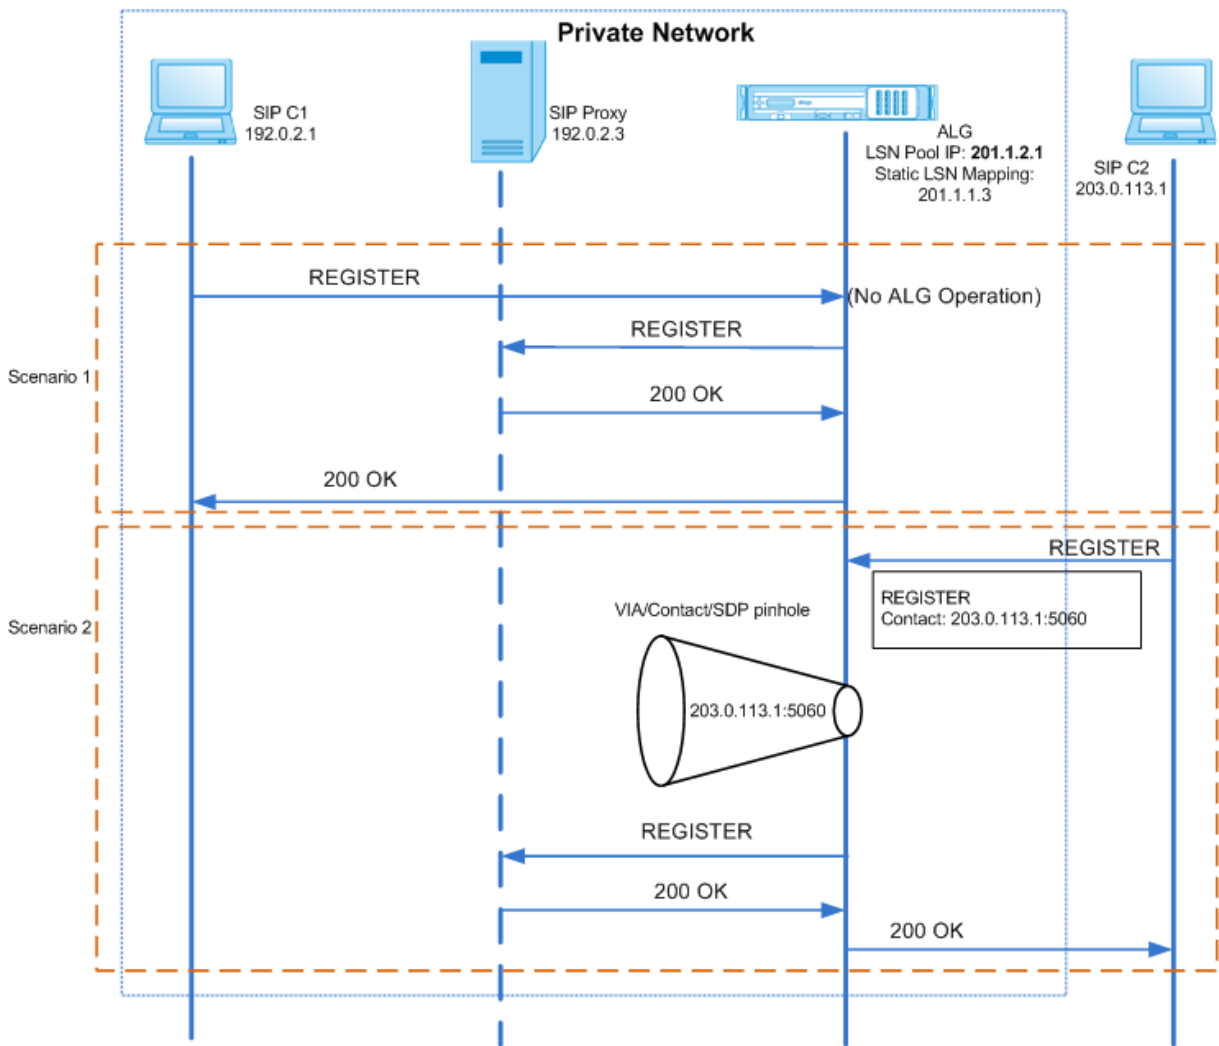


Figure 2. SIP Incoming Call Flow

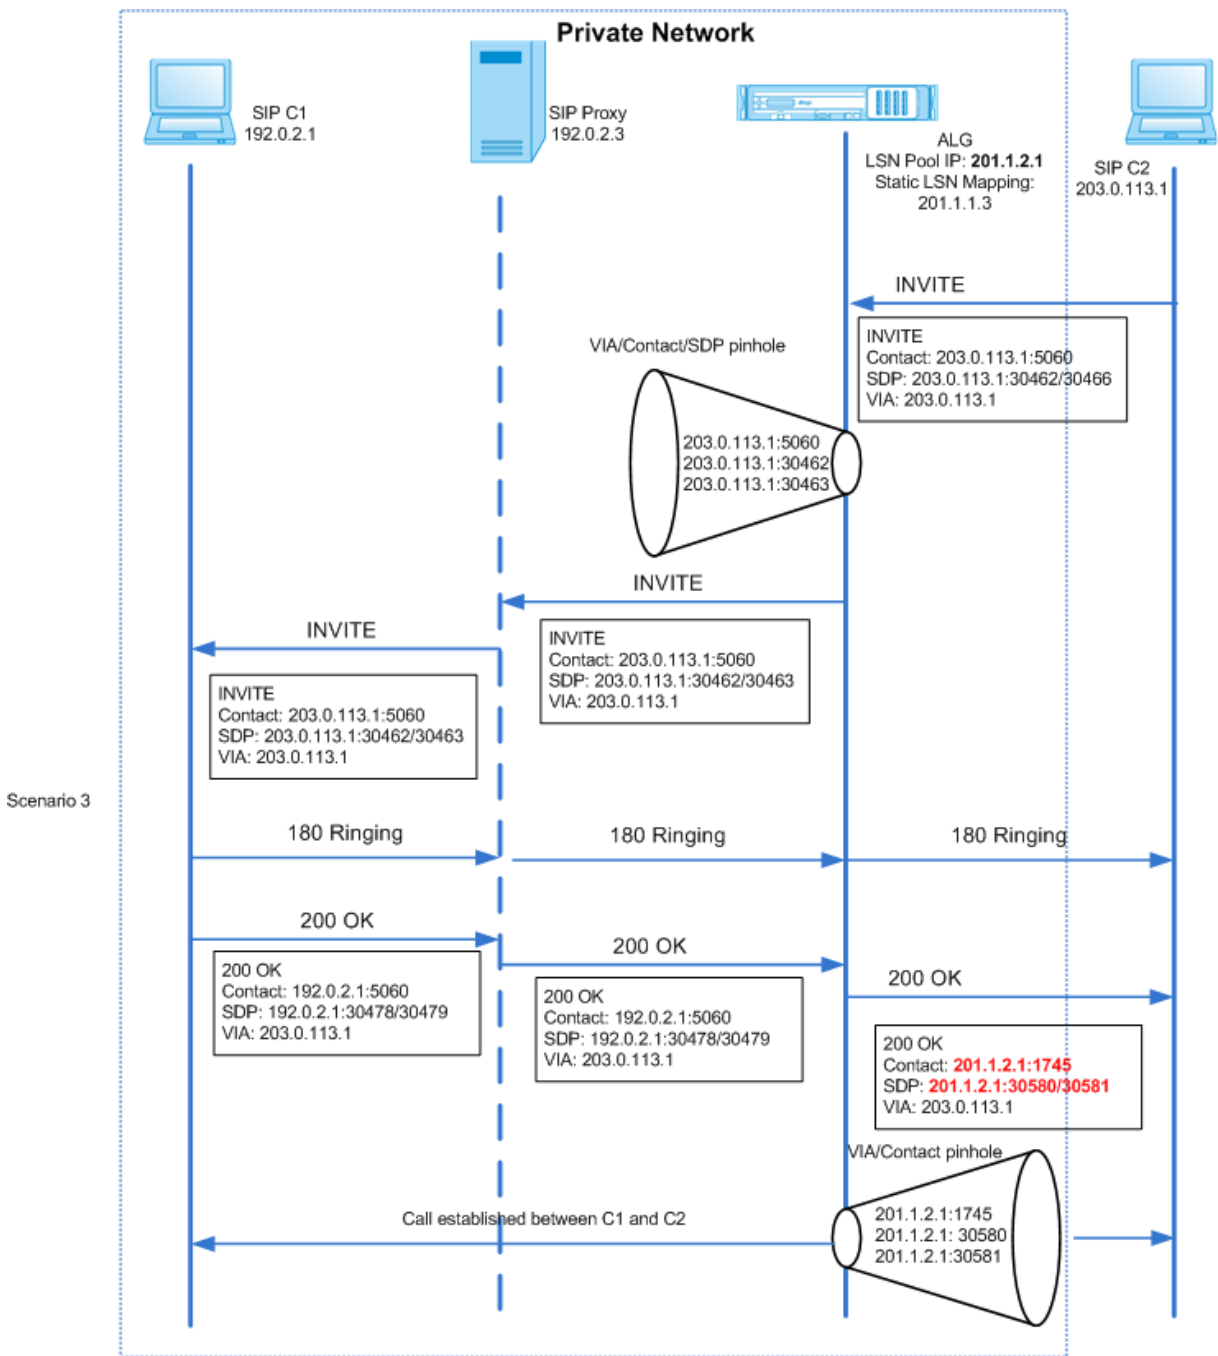

Figures 1 and 2 show the following scenarios:

- Scenario 1—SIP client in the private network registers with the SIP proxy server in the same network. ALG operations are not performed, because the SIP client and SIP proxy server are in the same network.
- Scenario 2—SIP client in the public network registers with the SIP proxy server in the private network. The REGISTER message from the public SIP client is sent to the NetScaler appliance by using the static LSN mapping configured on the appliance, and the appliance creates a pinhole

for further SIP operations.

- Scenario 3—SIP Incoming call flow. A SIP incoming call is initiated with a SIP INVITE message from the external to the internal network. The NetScaler appliance receives the INVITE message from SIP client C2, which is in the external network, through the static LSN maps configured on the NetScaler appliance.

The appliance creates a pinhole and forwards the INVITE message to the SIP proxy. The SIP proxy then forwards the INVITE message to SIP client C1 in the internal network. SIP client C1 then sends 180 and 200 OK messages to the SIP proxy, which in turn forwards the message to SIP client C2 through the NetScaler appliance.

When the 200 OK response message sent by internal SIP client C1 arrives at the NetScaler, the SIP ALG performs NAT on the IP addresses and port numbers in the Via, Contact, Route, and Record-Route SIP header fields, and in the SDP fields, replacing them with the LSN pool IP address and port number. The SIP ALG then forwards the response message to SIP client C2 and opens a pinhole in the outbound direction for further SIP communication.

Support for Audit Logs

You can log ALG information as part of LSN logging by enabling ALG in the LSN audit logging configuration. For more information on LSN logging, see [Logging and Monitoring LSN](#). A log message for an ALG entry in the LSN log consists of the following information:

- Time stamp
- Type of SIP message (for example, SIP request)
- Source IP address and port of the SIP client
- Destination IP address and port of the SIP proxy
- NAT IP address and port
- SIP method
- Sequence number
- Whether or not the SIP client is registered
- Caller's user name and domain
- Receiver's user name and domain

Sample audit log:

Request:

```
1 07/19/2013:09:49:19 GMT Informational 0-PPE-0 : default ALG
  ALG_SIP_INFO_PACKET_EVENT 169 0 : Infomsg: "SIP request" - Group: g2
  - Call_ID: NTY0YjYwMTJmYjNhNDU5ZjlhMmQxOTM5ZTE3Zjc3NjM. - Transport
  : TCP - Source_IP: 192.169.1.165 - Source_port: 57952 -
  Destination_IP: 10.102.185.156 - Destination_port: 5060 - Natted_IP:
  10.102.185.191 - Natted_port: 10313 - Method: REGISTER -
  Sequence_Number: 3060 - Register: YES - Content_Type: -
```

```
Caller_user_name: 156_pvt_1 - Callee_user_name: 156_pvt_1 -
Caller_domain_name: - Callee_domain_name: -
```

Response:

```
1 07/19/2013:09:49:19 GMT Informational 0-PPE-0 : default ALG
  ALG_SIP_INFO_PACKET_EVENT 170 0 : Infomsg: "SIP response" - Group:
  g2 - Call_ID: NTY0YjYwMTJmYjNhNDU5ZjIhMmQxOTM5ZTE3Zjc3NjM. -
  Transport: TCP - Response_code 200 - Source_IP: 10.102.185.156 -
  Source_port: 5060 - Destination_IP: 192.169.1.165 - Destination_port
  : 57952 - Natted_IP: 10.102.185.191 - Natted_port: 10313 -
  Sequence_Number: 3060 - Content_Type: - Caller_user_name: 156_pvt_1
  - Callee_user_name: 156_pvt_1 - Caller_domain_name: -
  Callee_domain_name: -
```

Configuring SIP ALG

You need to configure the SIP ALG as part of the LSN configuration. For instructions on configuring LSN, see [Configuration Steps for LSN](#). While configuring LSN, make sure that you:

- Set the following parameters while adding the LSN application profile:
 - IP Pooling = PAIRED
 - Address and Port Mapping = ENDPOINT-INDEPENDENT
 - Filtering = ENDPOINT-INDEPENDENT

Important: For the SIP ALG to work, a full cone NAT configuration is mandatory.

Example:

```
1 add lsn appsprofile app_tcp TCP -ippooling PAIRED -mapping ENDPOINT-
  INDEPENDENT -filtering ENDPOINT-INDEPENDENT
```

- Create a SIP ALG profile and make sure that you define either the source port range or destination port range.

Example:

```
1 add lsn sipalgprofile sipalgprofile_tcp -sipsrcportrange 1-65535 -
  sipdstportrange 5060 -openViaPinhole ENABLED -openRecordRoutePinhole
  ENABLED -sipTransportProtocol TCP
```

- Set SIP ALG = ENABLED, while creating the LSN group.

Example:

```
1 add lsn group g1 -clientname c1 -sipalg ENABLED
```

- Bind the SIP ALG profile to the LSN group.

Sample SIP ALG Configuration:

The following sample configuration shows how to create a simple LSN configuration with a single subscriber network, single LSN NAT IP address, SIP ALG specific setting, and configure SIP ALG:

```
1 add lsn pool p1
2
3 Done
4
5 bind lsn pool p1 10.102.185.190
6
7 Done
8
9 add lsn client c1
10
11 Done
12
13 bind lsn client c1 -network 192.170.1.0 -netmask 255.255.255.0
14
15 Done
16
17 add lsn appsprofile app_tcp TCP -ippooling PAIRED -mapping ENDPOINT-
    INDEPENDENT -filtering ENDPOINT-INDEPENDENT
18
19 Done
20
21 add lsn appsprofile app_udp UDP -ippooling PAIRED -mapping ENDPOINT-
    INDEPENDENT -filtering ENDPOINT-INDEPENDENT
22
23 Done
24
25 bind lsn appsprofile app_tcp 1-65535
26
27 Done
28
29 bind lsn appsprofile app_udp 1-65535
30
31 Done
32
33 add lsn sipalgprofilesipalgprofile_tcp -sipdstportrange 5060 -
    openViaPinhole ENABLED -openRecordRoutePinhole ENABLED -
    sipTransportProtocol TCP
34
35 Done
36
37 add lsn sipalgprofile sipalgprofile_udp -sipdstportrange 5060 -
    openViaPinhole ENABLED -openRecordRoutePinhole ENABLED -
    sipTransportProtocol UDP
38
39 Done
40
41 add lsn group g1 -clientname c1 -sipalg ENABLED
42
```

```
43 Done
44
45 bind lsn group g1 -poolname p1
46
47 Done
48
49 bind lsn group g1 -appsprofilename app_tcp
50
51 Done
52
53 bind lsn group g1 -appsprofilename app_udp
54
55 Done
56
57 bind lsn group g1 -sipalgprofilename sipalgprofile_tcp
58
59 Done
60
61 bind lsn group g1 -sipalgprofilename sipalgprofile_udp
62
63 Done
```

Application Layer Gateway for RTSP Protocol

July 16, 2023

Real Time Streaming Protocol (RTSP) is an application-level protocol for the transfer of real-time media data. Used for establishing and controlling media sessions between end points, RTSP is a control channel protocol between the media client and the media server. The typical communication is between a client and a streaming media server.

Streaming media from a private network to a public network requires translating IP addresses and port numbers over the network. NetScaler functionality includes an Application Layer Gateway (ALG) for RTSP, which can be used with Large Scale NAT (LSN) to parse the media stream and make any necessary changes to ensure that the protocol continues to work over the network.

How IP address translation is performed depends on the type and direction of the message, and the type of media supported by the client-server deployment. Messages are translated as follows:

- Outbound request—Private IP address to NetScaler owned public IP address called an LSN pool IP address.
- Inbound response—LSN pool IP address to private IP address.
- Inbound request—No translation.
- Outbound response—Private IP address to LSN pool IP address.

Note

RTSP ALG is supported in a NetScaler standalone appliance, in a NetScaler high availability setup, as well as in a NetScaler cluster setup.

Limitations of RTSP ALG

The RTSP ALG does not support the following:

- Multicast RTSP sessions
- RTSP session over UDP
- TD/admin partitioning
- RSTP Authentication
- HTTP tunneling

RTSP and LSN scenario

Typically, a RTSP SETUP request specifies how a single media stream must be transported. The request contains the media stream URL and a transport specifier. This specifier typically includes one local port for receiving RTP data (audio or video), and another for receiving RTCP data (meta information). The server reply usually confirms the chosen parameters and fills in the missing parts, such as the server's chosen ports. Each media stream must be configured by using the SETUP command before an aggregate play request can be sent.

In a typical RTSP communication, the media client in the public network sends a SETUP request to the media server in the private network. RSTP ALG intercepts the request and, in the media stream, replaces the public IP address and port number with the LSN pool IP address and LSN port number.

The media server in the private network uses the LSN pool IP address and LSN port number to send a 200 OK response to the media client in the public network. The NetScaler RTSP ALG intercepts the response and replaces the LSN pool IP address and LSN port number with the public IP address and port number of the media client.

Configuring RTSP ALG

Configure RTSP ALG as part of the LSN configuration. For instructions on configuring LSN, see [Configuration Steps for LSN](#). While configuring LSN, make sure that you:

- Set the **NAT Type** as DETERMINISTIC or DYNAMIC while adding the LSN pool.
- Set the following parameters while adding the LSN application profile:
 - IP Pooling = PAIRED

- Address and Port Mapping = ENDPOINT-INDEPENDENT
- Filtering = ENDPOINT-INDEPENDENT
- Create a RTSP ALG profile and bind the RTSP ALG profile to the LSN group

Sample RTSP ALG Configuration:

The following sample configuration shows how to create a simple LSN configuration with a single subscriber network, single LSN NAT IP address, and RTSP ALG settings:

```
1 enable ns feature WL SP LB CS LSN
2
3 Done
4
5 add lsn pool pool1 -nattype DETERMINISTIC
6
7 Done
8
9 bind lsn pool pool1 10.102.218.246
10
11 Done
12
13 add lsn client client1
14
15 Done
16
17 bind lsn client client1 -network 200.200.200.11 -netmask 255.255.255.0
18
19 Done
20
21 add lsn appsprofile app1 TCP -ippooling PAIRED -mapping ENDPOINT-
    INDEPENDENT -filtering ENDPOINT-INDEPENDENT
22
23 Done
24
25 add lsn appsprofile app2 UDP -ippooling PAIRED -mapping ENDPOINT-
    INDEPENDENT -filtering ENDPOINT-INDEPENDENT
26
27 Done
28
29 bind lsn appsprofile app1 1-65535
30
31 Done
32
33 bind lsn appsprofile app2 1-65535
34
35 Done
36
37 add lsn rtspalgprofile rtspalgprofiledefault -rtspIdleTimeout 1000 -
    rtspportrange 554
38
39 Done
40
```

```
41 add lsn group group1 -clientname client1 -nattype DETERMINISTIC -
    portblocksize 512 -rtspalg ENABLED
42
43 Done
44
45 bind lsn group group1 -poolname pool1
46
47 Done
48
49 bind lsn group group1 -appsprofilename app1
50
51 Done
52
53 bind lsn group group1 -appsprofilename app2
54
55 Done
56
57 bind lsn group group1 -rtspalgprofilename rtspalgprofiledefault
58
59 Done
```

Application Layer Gateway for IPSec Protocol

May 2, 2023

If communication between two network devices (for example, client and server) uses the IPSec protocol, IKE traffic (which is over UDP) uses port fields, but Encapsulating Security Payload (ESP) traffic does not. If a NAT device on the path assigns the same NAT IP address (but different ports) to two or more clients at the same destination, the NAT device is unable to distinguish and properly route the return ESP traffic does not contain port information. Therefore, IPSec ESP traffic fails at the NAT device.

NAT-Traversal (NAT-T) capable IPSec endpoints detect the presence of an intermediate NAT device during IKE phase 1 and switch to UDP port 4500 for all subsequent IKE and ESP traffic (encapsulating ESP in UDP). Without NAT-T support on the peer IPSec endpoints, IPSec protected ESP traffic is transmitted without any UDP encapsulation. Therefore, IPSec ESP traffic fails at the NAT device.

The NetScaler appliance supports IPSec application layer gateway (ALG) functionality for large scale NAT configurations. The IPSec ALG processes IPSec ESP traffic and maintains session information so that the traffic does not fail when the IPSec endpoints do not support NAT-T (UDP encapsulation of ESP traffic).

How IPsec ALG Works

An IPsec ALG monitors IKE traffic between a client and the server, and permits only one IKE phase 2 message exchange between the client and the server at any given time.

Once the two-way ESP packets are received for a particular flow, the IPsec ALG creates a NAT session for this particular flow so that subsequent ESP traffic can flow smoothly. The ESP traffic is identified by Security Parameters Indexes (SPIs), which are unique for a flow and for each direction. An IPsec ALG uses ESP SPIs in place of source and destination ports for performing large scale NAT.

If a gate receives no traffic, it times out. After both gates time out, another IKE phase 2 exchange is permitted.

IPsec ALG Timeouts

IPsec ALG on a NetScaler appliance has three timeout parameters:

- **ESP Gate Timeout.** Maximum time that the NetScaler appliance blocks an IPsec ALG gate for a particular client on a specific NAT IP address for a given server if no two-way ESP traffic is exchanged between the client and the server.
- **IKE Session Timeout.** Maximum time that the NetScaler appliance keeps the IKE session information before removing it if there is no IKE traffic for that session.
- **ESP Session Timeout.** Maximum time that NetScaler appliance keeps the ESP session information before removing it if there is no ESP traffic for that session.

Points to Consider before Configuring IPsec ALG

Before you start configuring IPsec ALG, consider the following points:

- You must understand the different components of IPsec protocol.
- IPsec ALG is not supported for DS-Lite and Large scale NAT64 configurations.
- IPsec ALG is not supported for hairpin LSN flow.
- IPsec ALG does not work with RNAT configurations.
- IPsec ALG is not supported in NetScaler clusters.

Configuration Steps

Configuring IPsec ALG for large scale NAT44 on a NetScaler appliance consists of the following tasks:

- **Create an LSN application profile and bind it to the LSN configuration.** Set the following parameters while configuring an application profile:

- Protocol=UDP
- IP Pooling = PAIRED
- Port=500

Bind the application profile to the LSN group of an LSN configuration. For instructions on creating an LSN configuration, see [Configuration Steps for LSN](#).

- **Create an IPsec ALG profile.** An IPsec profile includes various IPsec timeouts, such as IKE session timeout, ESP session timeout, and ESP gate timeout. You bind an IPsec ALG profile to an LSN group. An IPsec ALG profile has the following default settings:
 - IKE session timeout = 60 minutes
 - ESP session timeout = 60 minutes
 - ESP gate timeout = 30 seconds
- **Bind the IPsec ALG profile to the LSN configuration.** IPsec ALG is enabled for an LSN configuration when you bind an IPsec ALG profile to the LSN configuration. Bind the IPsec ALG profile to the LSN configuration by setting the IPsec ALG profile parameter to the name of the created profile in the LSN group. An IPsec ALG profile can be bound to multiple LSN groups, but an LSN group can have only one IPsec ALG profile.

To create an LSN application profile by using the command line interface

At the command prompt, type:

```
1 add lsn appsprofile <appsprofilename> UDP -ippooling PAIRED
2
3 show lsn appsprofile
```

To bind destination port to the LSN application profile by using the command line interface

At the command prompt, type:

```
1 bind lsn appsprofile <appsprofilename> <lsnport>
2
3 show lsn appsprofile
```

To bind an LSN application profile to an LSN group by using the command line interface

At the command prompt, type:

```
1 bind lsn group <groupname> -appsprofilename <string>
2
3 show lsn group
```

To create an IPsec ALG profile by using the CLI

At the command prompt, type:

```
1 add ipsecalg profile <name> [-ikeSessionTimeout <positive_integer>] [-  
    espSessionTimeout <positive_integer>] [-espGateTimeout <  
    positive_integer>] [-connfailover ( ENABLED | DISABLED )  
2  
3 show ipsecalg profile <name>
```

To bind an IPsec ALG profile to an LSN configuration by using the CLI

At the command prompt, type:

```
1 bind lsn group <groupname> -poolname <string> - ipsecAlgProfile <string  
    >  
2  
3 show lsn group <name>
```

To create an LSN application profile and bind it to an LSN configuration by using the GUI

Navigate to **System > Large Scale NAT > Profiles**, click **Application** tab, add an LSN application profile and bind it to an LSN group.

To create an IPsec ALG profile by using the GUI** Navigate to **System > Large Scale NAT > Profiles**, click **IPSEC ALG** tab, and then add an IPsec ALG profile.

To bind an IPsec ALG profile to an LSN configuration by using the GUI**

1. Navigate to **System > Large Scale NAT > LSN Group**, open the LSN group.
2. In **Advanced Settings**, click **+ IPSEC ALG Profile** to bind the created IPsec ALG profile to the LSN group.

Sample Configuration

In the following sample large scale NAT44 configuration, IPsec ALG is enabled for subscribers in the 192.0.2.0/24 network. IPsec ALG profile IPSECALGPROFILE-1 with various IPsec timeout settings is created and is bound to LSN group LSN Group -1.

Sample configuration:

```
1 add lsn client LSN-CLIENT-1
2
3 Done
4
5 bind lsn client LSN-CLIENT-1 -network 192.0.2.0 -netmask 255.255.255.0
6
7 Done
8
9 add lsn pool LSN-POOL-1
10
11 Done
12
13 bind lsn pool LSN-POOL-1 203.0.113.3-203.0.113.9
14
15 Done
16
17 add lsn appsprofile LSN-APPSPROFILE-1 UDP -ippooling PAIRED
18
19 Done
20
21 bind lsn appsprofile LSN-APPSPROFILE-1 500
22
23 Done
24
25 add ipsecalg profile IPSECALGPROFILE-1 -ikeSessionTimeout 45 -
    espSessionTimeout 40 - espGateTimeout 20 -connfailover ENABLED
26
27 Done
28
29 bind lsn group LSN-GROUP-1 -appsprofilename LSN-APPSPROFILE-1
30
31 Done
32
33 bind lsn group LSN-GROUP-1 -poolname LSN-POOL-1
34
35 Done
36
37 bind lsn group LSN-GROUP-1 - ipsecAlgProfile IPSECALGPROFILE-1
38
39 Done
```

Logging and Monitoring LSN

July 31, 2024

You can log LSN information to diagnose, troubleshoot problems, and to meet legal requirements. You can monitor the performance of the LSN feature by using LSN statistical counters and displaying current LSN sessions.

Logging LSN

Logging LSN information is one of the important functions required by the ISPs to meet legal requirements and for identifying the source of traffic at any given time.

A NetScaler appliance logs LSN mapping entries and the LSN sessions created or deleted for each LSN group. You can control logging of LSN information for an LSN group by using the logging and session logging parameters of the LSN group. These are group level parameters and are disabled by default. The NetScaler appliance logs LSN sessions for an LSN group only when both logging and session logging parameters are enabled.

The following table displays the logging behavior for an LSN group for various settings of logging and session logging parameters.

Logging	Session Logging	Logging Behavior
Enabled	Enabled	Logs LSN mapping entries as well as LSN sessions.
Enabled	Disabled	Logs LSN mapping entries but not LSN sessions.
Disabled	Enabled	Logs neither mapping entries nor LSN sessions.

A log message for an LSN mapping entry consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced.
- Time stamp
- Entry type (MAPPING)
- Whether the LSN mapping entry was created or deleted
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID might be present, depending on the following conditions:
 - Destination IP address and port are not logged for Endpoint-Independent mapping.
 - Only the destination IP address is logged for Address-Dependent mapping. The port is not logged.
 - Destination IP address and port are logged for Address-Port-Dependent mapping.

A log message for an LSN session consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced.
- Time stamp
- Entry type (SESSION)
- Whether the LSN session is created or removed
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID

The appliance uses its existing syslog and audit log framework to log LSN information. You must enable global level LSN logging by enabling the LSN parameter in the related NSLOG action and SYLOG action entities. When the Logging parameter is enabled, the NetScaler appliance generates log messages related to LSN mappings and LSN sessions of this LSN group. The appliance then sends these log messages to servers associated with the NSLOG action and SYSLOG action entities.

For logging LSN information, Citrix recommends:

- Logging the LSN information on external log servers instead of on the NetScaler appliance. Logging on external servers facilitates optimal performance when the appliance creates large amounts of LSN log entries (in order of millions).
- Using SYSLOG over TCP, or NSLOG. By default SYSLOG uses UDP, and NSLOG uses only TCP to transfer log information to the log servers. TCP is more reliable than UDP for transferring complete data.

Note:

- The SYSLOG generated on NetScaler appliance are dynamically sent to the external log servers.
- When using SYSLOG over TCP, if the TCP connection is down or the SYSLOG server is busy, then the NetScaler appliances stores the logs in buffer and send the data once the connection is active.

For more information about configuring logging, see [Audit Logging](#).

Configuring LSN logging consists of the following tasks:

- **Configuring the NetScaler appliance for logging.** This task involves creating and setting various entities and parameters of the NetScaler appliance:
 - **Create a SYSLOG or NSLOG audit logging configuration.** Creating an audit logging configuration involves the following tasks:
 - * Create a NSLOG or SYSLOG audit action and enable the LSN parameter. Audit actions specify the IP addresses of log servers.

- * Create a SYSLOG or NSLOG audit policy and bind the audit action to the audit policy. Audit actions specify the IP addresses of log servers. Optionally, you can set the transport method for log messages that are sent to the external log servers. By default UDP is selected, you can set the transport method as TCP for a reliable transport mechanism. Bind the audit policy to system global.
- * Create a SYSLOG or NSLOG audit policy and bind the audit action to the audit policy.
- * Bind the audit policy to system global.

Note: For an existing audit logging configuration, just enable the LSN parameter for logging LSN information in the server specified by the audit action.

- **Enable logging and session logging parameters.** Enable logging and session logging parameters either as you add LSN groups or after you have created the groups. The NetScaler appliance generates log messages related to these LSN groups and sends them to the server of those audit actions that have the LSN parameter enabled.
- **Configuring log servers.** This task involves installing SYSLOG or NSLOG packages on the desired servers. This task also involves specifying the NSIP address of the NetScaler appliance in the configuration file of SYSLOG or NSLOG. Specifying the NSIP address enables the server to identify the log information sent by the NetScaler appliance for storing them in a log file.

For more information about configuring logging, see [Audit Logging](#).

SYSLOG Configuration Using the CLI

To create a SYSLOG server action for LSN logging by using the command line interface At the command prompt, type:

```
1 add audit syslogAction <name> <serverIP> [-serverPort <port>] -logLevel <logLevel>... [-transport (TCP)] [-lsn ( ENABLED | DISABLED )]
```

To create a SYSLOG server policy for LSN logging by using the CLI At the command prompt, type:

```
1 add audit syslogPolicy <name> <rule> <action>
```

To bind a SYSLOG server policy to system global for LSN logging by using the CLI At the command prompt, type:

```
1 bind system global [<policyName> [-priority <positive_integer>]]
```

SYSLOG Configuration Using the Configuration Utility

To configure a SYSLOG server action for LSN logging by using the configuration utility

1. Navigate to **Systems > Auditing > Syslog** and, on the Servers tab, add a new auditing server or edit an existing server.
2. To enable LSN logging, select the **Large Scale NAT Logging** option.
3. (Optional) To enable SYSLOG over TCP, select the **TCP Logging** option.

To configure a SYSLOG server policy for LSN logging by using the configuration utility Navigate to **Systems > Auditing > Syslog** and, on the **Policies** tab, add a new policy or edit an existing policy.

To bind a SYSLOG server policy to system global for LSN logging by using the configuration utility

1. Navigate to **Systems > Auditing > Syslog**.
2. On the **Policies** tab, in the **Action** list, click **Global Bindings** to bind the audit global policies.

NSLOG Configuration Using the CLI

To create a NSLOG server action for LSN logging by using the CLI At the command prompt, type:

```
1 add audit nslogAction <name> <serverIP> [-serverPort <port>] -logLevel <logLevel> ... [-lsn ( ENABLED | DISABLED )]
```

To create a NSLOG server policy for LSN logging by using the CLI At the command prompt, type:

```
1 add audit nslogPolicy <name> <rule> <action>
```

To bind a NSLOG server policy to system global for LSN logging by using the CLI At the command prompt, type:

```
1 bind system global [<policyName>]
```

NSLOG Configuration Using the Configuration Utility

To configure a NSLOG server action for LSN logging by using the configuration utility

1. Navigate to **Systems > Auditing > Nslog** and, on the **Servers** tab, add a new auditing server or, edit an existing server.
2. To enable LSN logging, select the **Large Scale NAT Logging** option.

To configure a NSLOG server policy for LSN logging by using the configuration utility Navigate to **Systems > Auditing > Nslog** and, on the **Policies** tab, add a new policy or edit an existing policy.

To bind a NSLOG server policy to system global for LSN logging by using the configuration utility

1. Navigate to **Systems > Auditing > Nslog**.
2. On the **Policies** tab, in the **Action** list, click **Global Bindings** to bind the audit global policies.

Example The following configuration specifies two SYSLOG and two NSLOG servers for storing log entries including LSN logs. LSN Logging is configured for LSN groups LSN-GROUP-2 and LSN-GROUP-3.

The NetScaler appliance generates log messages related to LSN mappings and LSN sessions of these LSN groups, and sends them to the specified log servers.

```
1 add audit syslogAction SYS-ACTION-1 198.51.101.10 -logLevel ALL -lsn
  ENABLED
2 Done
3 add audit syslogPolicy SYSLOG-POLICY-1 ns_true SYS-ACTION-1
4 Done
5 bind system global SYSLOG-POLICY-1
6 Done
7
8 add audit syslogAction SYS-ACTION-2 198.51.101.20 -logLevel ALL -lsn
  ENABLED
9 Done
10 add audit syslogPolicy SYSLOG-POLICY-2 ns_true SYS-ACTION-2
11 Done
12 bind system global SYSLOG-POLICY-2
13 Done
14
15 add audit nslogAction NSLOG-ACTION-1 198.51.101.30 -logLevel ALL -lsn
  ENABLED
16 Done
17 add audit nslogPolicy NSLOG-POLICY-1 ns_true NSLOG-ACTION-1
18 Done
19 bind system global NSLOG-POLICY-1
20 Done
21 add audit nslogAction NSLOG-ACTION-2 198.51.101.40 -logLevel ALL -lsn
  ENABLED
22 Done
23 add audit nslogPolicy NSLOG-POLICY-2 ns_true NSLOG-ACTION-2
```

```

24 Done
25 bind system global NSLOG-POLICY-2
26 Done
27
28 add lsn group LSN-GROUP-3 -clientname LSN-CLIENT-2 -logging ENABLED -
    sessionLogging ENABLED
29 Done
30 set lsn group LSN-GROUP-2 -logging ENABLED -sessionLogging ENABLED
31 Done

```

The following configuration specifies SYSLOG configuration for sending log messages to the external SYSLOG server 192.0.2.10 using TCP.

```

1 add audit syslogAction SYS-ACTION-1 192.0.2.10 -logLevel ALL -transport
    TCP
2 Done
3
4 add audit syslogPolicy SYSLOG-POLICY-1 ns_true SYS-ACTION-1
5 Done
6
7 bind system global SYSLOG-POLICY-1
8 Done

```

The following table displays sample LSN log entries of each type stored on the configured log servers. These LSN log entries are generated by a NetScaler appliance whose NSIP address is 10.102.37.115.

LSN Log Entry Type	Sample Log Entry
LSN session creation	Local4.Informational 10.102.37.115 08/05/2014:09:59:48 GMT 0-PPE-0 : LSN LSN_SESSION 2581750 : SESSION CREATED Client IP:Port:TD 192.0.2.10: 15136:0, NatIP:NatPort 203.0.113.6: 6234, Destination IP:Port:TD 198.51.100.9: 80:0, Protocol: TCP
LSN session deletion	Local4.Informational 10.102.37.115 08/05/2014:10:05:12 GMT 0-PPE-0 : LSN LSN_SESSION 3871790 : SESSION DELETED Client IP:Port:TD 192.0.2.11: 15130:0, NatIP:NatPort 203.0.113.6: 7887, Destination IP:Port:TD 198.51.101.2:80:0, Protocol: TCP
LSN mapping creation	Local4.Informational 10.102.37.115 08/05/2014:09:59:47 GMT 0-PPE-0 : LSN LSN_MAPPING 2581580 : EIM CREATED Client IP:Port 192.0.2.15: 14567, NatIP:NatPort 203.0.113.5: 8214, Protocol: TCP

LSN Log Entry Type	Sample Log Entry
LSN mapping deletion	Local4.Informational 10.102.37.115 08/05/2014:10:05:12 GMT 0-PPE-0 : LSN LSN_MAPPING 3871700 : EIM DELETED Client IP:Port 192.0.3.15: 14565, NatIP:NatPort 203.0.113.11: 8217, Protocol: TCP

Minimal Logging

Deterministic LSN configurations and Dynamic LSN configurations with port block significantly reduces the LSN log volume. For these two types of configuration, the NetScaler appliance allocates a NAT IP address and a block of ports to a subscriber. The NetScaler appliance generates a log message for a port block at the time of allocation to a subscriber. The NetScaler appliance also generates a log message when a NAT IP address and port block is freed. For a connection, a subscriber can be identified just by its mapped NAT IP address and port block. Because of this reason, the NetScaler appliance does not log any LSN session created or deleted. The appliance also neither logs any mapping entry created for a session nor when the mapping entry gets removed.

The minimal logging feature for deterministic LSN configurations and dynamic LSN configurations with port block is enabled by default and there is no provision to disable it. In other words, the NetScaler appliance automatically do minimal logging for deterministic LSN configurations and dynamic LSN configurations with port block. There is no option available for disabling this feature. The appliance sends the log messages to all the configured log servers.

A log message for each port block consists of the following information:

- NSIP address of the NetScaler appliance
- Time stamp
- Entry type as DETERMINISTIC or PORTBLOCK
- Whether a port block is allocated or is freed
- Subscriber's IP address and the assigned NAT IP address and port block
- Protocol name

Minimal Logging for Deterministic LSN Configuration

Consider an example of a simple deterministic LSN configuration for four subscribers having the IP address 192.0.17.1, 192.0.17.2, 192.0.17.3, and 192.0.17.4.

In this LSN configuration, the port block size is set to 32768 and LSN NAT IP address pool has IP addresses in the range 203.0.113.19-203.0.113.23.

```

1 add lsn client LSN-CLIENT-7
2 Done
3 bind lsn client LSN-CLIENT-7 -network 192.0.17.0 -netmask
  255.255.255.253
4 Done
5 add lsn pool LSN-POOL-7 -nattype DETERMINISTIC
6 Done
7 bind lsn pool LSN-POOL-7 203.0.113.19-203.0.113.23
8 Done
9 add lsn group LSN-GROUP-7 -clientname LSN-CLIENT-7 -nattype
  DETERMINISTIC -portblocksize 32768
10 Done
11 bind lsn group LSN-GROUP-7 -poolname LSN-POOL-7
12 Done

```

The NetScaler appliance sequentially preallocates, from the LSN NAT IP pool and on the basis of the set port block size, an LSN NAT IP address and a block of ports to each subscriber. It assigns the first block of ports (1024-33791) on the beginning NAT IP address (203.0.113.19) to the beginning subscriber IP address (192.0.17.1). The next range of ports is assigned to the next subscriber, and so on, until the NAT address does not have enough ports for the next subscriber. At that point, the first port block on the next NAT IP address is assigned to the subscriber, and so on. The appliance logs the NAT IP address and the block of ports allocated for each subscriber.

The NetScaler appliance does not log any LSN session created or deleted for these subscribers. The appliance generates the following log messages for the LSN configuration.

```

1 1) 03/23/2015:00:30:56 GMT Informational 0-PPE-0 : default LSN
  LSN_DETERMINISTIC 79201453 0 : Dtrstc ALLOC Client 12.0.0.241,
  NatInfo 50.0.0.2:59904 to 60415
2 2) 03/23/2015:00:30:56 GMT Informational 0-PPE-0 : default LSN
  LSN_DETERMINISTIC 79201454 0 : Dtrstc ALLOC Client 12.0.0.242,
  NatInfo 50.0.0.2:60416 to 60927
3 3) 03/23/2015:00:30:56 GMT Informational 0-PPE-0 : default LSN
  LSN_DETERMINISTIC 79201455 0 : Dtrstc ALLOC Client 12.0.0.243,
  NatInfo 50.0.0.2:60928 to 61439
4 4) 03/23/2015:00:30:56 GMT Informational 0-PPE-0 : default LSN
  LSN_DETERMINISTIC 79201455 0 : Dtrstc ALLOC Client 12.0.0.243,
  NatInfo 50.0.0.2:60928 to 61439

```

When you remove the LSN configuration, the allocated NAT IP address and block of ports is freed from each subscriber. The appliance logs NAT IP address and block of ports freed from each subscriber. The appliance generates the following log messages for each subscriber when you remove the LSN configuration.

```

1 1) 03/23/2015:00:33:57 GMT Informational 0-PPE-0 : default LSN
  LSN_DETERMINISTIC 79201706 0 : Dtrstc FREE Client 12.0.0.238,
  NatInfo 50.0.0.2:58368 to 58879
2 2) 03/23/2015:00:33:57 GMT Informational 0-PPE-0 : default LSN
  LSN_DETERMINISTIC 79201707 0 : Dtrstc FREE Client 12.0.0.239,

```

```

NatInfo 50.0.0.2:58880 to 59391
3 3) 03/23/2015:00:33:57 GMT Informational 0-PPE-0 : default LSN
LSN_DETERMINISTIC 79201708 0 : Dtrstc FREE Client 12.0.0.240,
NatInfo 50.0.0.2:59392 to 59903

```

Minimal Logging for Dynamic LSN Configuration with Port Block

Consider an example of a simple dynamic LSN configuration with port block for any subscriber in the network 192.0.2.0/24. In this LSN configuration, the port block size is set to 1024 and LSN NAT IP address pool has IP addresses in the range 203.0.113.3-203.0.113.4.

```

1 set lsn parameter -memLimit 4000
2 Done
3 add lsn client LSN-CLIENT-1
4 Done
5 bind lsn client LSN-CLIENT-1 -network 192.0.2.0 -netmask 255.255.255.0
6 Done
7 add lsn pool LSN-POOL-1
8 Done
9 bind lsn pool LSN-POOL-1 203.0.113.3-203.0.113.4
10 Done
11 add lsn group LSN-GROUP-1 -clientname LSN-CLIENT-1 -portblocksize 1024
12 Done
13 bind lsn group LSN-GROUP-1 -poolname pool1 LSN-POOL-1
14 Done

```

The NetScaler appliance allocates a random NAT IP address and a block of ports, from the LSN NAT IP pool and on the basis of the set port block size, for a subscriber when it initiates a session for the first time. The NetScaler logs the NAT IP address and block of ports allocated to this subscriber. The appliance does not log any LSN session created or deleted for this subscriber. If all the ports are allocated (for different subscriber's sessions) from the subscriber's allocated port block, the appliance allocates a new random NAT IP address and port block for the subscriber for additional sessions. The NetScaler logs every NAT IP address and port block allocated to a subscriber.

The appliance generates the following log message when the subscriber, having the IP address 192.0.2.1, initiates a session. The log message shows that the appliance has allocated NAT IP address 203.0.113.3 and port block 1024-2047 to the subscriber.

```

1 03/23/2015:00:07:12 GMT Informational 0-PPE-3 : default LSN
LSN_PORTBLOCK 106725793 0 : Portblock ALLOC Client 12.0.2.72,
NatInfo 203.0.113.3:1024 to 2047, Proto:TCP

```

Once there are no more sessions left that is using the allocated NAT IP address and one of the ports in the allocated port block, the allocated NAT IP address and block of ports is freed from the subscriber. The NetScaler logs that the NAT IP address and the block of ports is freed from the subscriber. The appliance generates the following log messages for the subscriber, having the IP address 192.0.2.1 ,

when no more sessions are left that is using the allocated NAT IP address (203.0.113.3) and a port from the allocated port block (1024-2047). The log message shows that the NAT IP address and port block are freed from the subscriber.

```
1 03/23/2015:00:11:09 GMT Informational 0-PPE-3 : default LSN
  LSN_PORTBLOCK 106814342 0 : Portblock FREE Client 12.0.3.122,
  NatInfo 203.0.113.3: 1024 to 2047, Proto:TC
```

Load Balancing SYSLOG Servers

The NetScaler appliance send its SYSLOG events and messages to all the configured external log servers. This results in storing redundant messages and makes monitoring difficult for system administrators. To address this issue, the NetScaler appliance offers load balancing algorithms that can load balance the SYSLOG messages among the external log servers for better maintenance and performance. The supported load balancing algorithms include RoundRobin, LeastBandwidth, CustomLoad, LeastConnection, LeastPackets, and AuditlogHash.

Load balancing of SYSLOG servers using the CLI

Add a service and specify the service type as SYSLOGTCP or SYSLOGUDP.

```
1 add service <name>(<IP> | <serverName>) <serviceType (SYSLOGTCP |
  SYSLOGUDP)> <port>
```

Add a load balancing virtual server, specify the service type as SYSLOGTCP or SYSLOGTCP, and load balancing method as AUDITLOGHASH.

```
1 add lb vserver <name> <serviceType (SYSLOGTCP | SYSLOGUDP)> [-lbMethod
  <AUDITLOGHASH>]
```

Bind the service to the load balancing virtual server.

```
1 Bind lb vserver <name> <serviceName>
```

Add a SYSLOG action and specify the load balancing server name that has SYSLOGTCP or SYSLOGUDP as service type.

```
1 add syslogaction <name> <serverIP> [-lbVserverName <string>] [-logLevel
  <logLevel>]
```

Add a SYSLOG policy by specifying the rule and action.

```
1 add syslogpolicy <name> <rule> <action>
```

Bind the SYSLOG policy to the system global for the policy to take effect.


```
1 bind system global <policyName>
```

Load balancing of SYSLOG servers using the configuration utility

1. Add a service and specify the service type as SYSLOGTCP or SYSLOGUDP.

Navigate to Traffic Management > Services, click Add and select SYLOGTCP or SYSLOGUDP as protocol.

2. Add a load balancing virtual server, specify the service type as SYSLOGTCP or SYSLOGTCP, and load balancing method as AUDITLOGHASH.

Navigate to Traffic Management > Virtual Servers, click Add and select SYLOGTCP or SYSLOGUDP as protocol.

3. Bind the service to the load balancing virtual server to the service.

Bind the service to the load balancing virtual server.

Navigate to Traffic Management > Virtual Servers, select a virtual server and then selectAUDIT-LOGHASH in the Load Balancing Method.

4. Add a SYSLOG action and specify the load balancing server name that has SYSLOGTCP or SYS-LOGUDP as service type.

Navigate to System > Auditing, click Servers and add a server by selecting LB Vserver option inServers.

5. Add a SYSLOG policy by specifying the rule and action.

Navigate to System > Syslog, click Policies and add a SYSLOG policy.

6. Bind the SYSLOG policy to the system global for the policy to take effect.

Navigate to System > Syslog, select a SYSLOG policy and click Action, and then click Global Bind-ings and bind the policy to system global.

Example:

The following configuration specifies load balance of SYSLOG messages among the external log servers using the AUDITLOGHASH as load balancing method. The NetScaler appliance generates SYSLOG events and messages that are load balanced amongst the services, service1, service2, and service 3.

```
1 add service service1 192.0.2.10 SYSLOGUDP 514
2 Done
3
4 add service service2 192.0.2.11 SYSLOGUDP 514
5 Done
```

```
6
7 add service service3 192.0.2.11 SYSLOGUDP 514
8 Done
9
10 add lb vserver lbvserver1 SYSLOGUDP -lbMethod AUDITLOGHASH
11 Done
12
13 bind lb vserver lbvserver1 service1
14 Done
15
16 bind lb vserver lbvserver1 service2
17 Done
18
19 bind lb vserver lbvserver1 service3
20 Done
21
22 add syslogaction sysaction1 -lbVserverName lbvserver1 -logLevel All
23 Done
24
25 add syslogpolicy syspol1 ns_true sysaction1
26 Done
27
28 bind system global syspol1
29 Done
```

Logging HTTP Header Information

The NetScaler appliance can now log request header information of an HTTP connection that is using the LSN functionality of the NetScaler. The following header information of an HTTP request packet can be logged:

- URL that the HTTP request is destined to.
- HTTP Method specified in the HTTP request.
- HTTP version used in the HTTP request.
- IP address of the subscriber that sent the HTTP request.

The HTTP header logs can be used by ISPs to see the trends related to the HTTP protocol among a set of subscribers. For example, an ISP can use this feature to find out the most popular websites among a set of subscribers.

An HTTP header log profile is a collection of HTTP header attributes (for example, URL and HTTP method) that can be enabled or disabled for logging. The HTTP header log profile is then bound to an LSN group. The NetScaler appliance then logs HTTP header attributes, which are enabled in the bound HTTP header log profile for logging, of any HTTP requests related to the LSN group. The appliance then sends the log messages to the configured log servers.

An HTTP header log profile can be bound to multiple LSN groups but an LSN group can have only one HTTP header log profile.

To create an HTTP header log profile by using the the CLI

At the command prompt, type:

```
1 add lsn httphdrlogprofile <httphdrlogfilename> [-logURL ( ENABLED |  
    DISABLED )] [-logMethod ( ENABLED | DISABLED )] [-logVersion (  
    ENABLED | DISABLED )] [-logHost ( ENABLED | DISABLED )]  
2  
3 show lsn httphdrlogprofile
```

To bind an HTTP header log profile to an LSN group by using the the CLI

At the command prompt, type:

```
1 bind lsn group <groupname> -httphdrlogfilename <string>  
2  
3 show lsn group <groupname>
```

Example

In the following example of an LSN configuration, HTTP header log profile HTTP-Header-LOG-1 is bound to LSN group LSN-GROUP-1. The log profile has all the HTTP attributes (URL, HTTP method, HTTP version, and HOST IP address) enabled for logging so that all these attributes are logged for any HTTP requests from subscribers (in the network 192.0.2.0/24) related to the LSN group.

```
1 add lsn httphdrlogprofile HTTP-HEADER-LOG-1  
2 Done  
3  
4 set lsn parameter -memLimit 4000  
5 Done  
6  
7 add lsn client LSN-CLIENT-1  
8 Done  
9  
10 bind lsn client LSN-CLIENT-1 -network 192.0.2.0 -netmask 255.255.255.0  
11 Done  
12  
13 add lsn pool LSN-POOL-1  
14 Done  
15  
16 bind lsn pool LSN-POOL-1 203.0.113.3-203.0.113.4  
17 Done  
18  
19 add lsn group LSN-GROUP-1 -clientname LSN-CLIENT-1 -portblocksize 1024  
20 Done  
21  
22 bind lsn group LSN-GROUP-1 -poolname pool1 LSN-POOL-1  
23 Done
```

```

24
25 bind lsn group LSN-GROUP-1 -httpdrlogprofilename HTTP-HEADER-LOG-1
26 Done
    
```

The NetScaler generates the following HTTP header log message when one of the subscriber belonging to the LSN configuration example sends an HTTP request.

The log message tells us that a client having the IP address 192.0.2.33 sends an HTTP request to URL example.com using HTTP method GET and HTTP version 1.1.

```

1 03/19/2015:16:24:04 GMT Informational 0-PPE-1 : default LSN Message 59
  0 : "LSN Client IP:TD 10.102.37.118:0 URL: example.com Host:
    192.0.2.33 Version: HTTP1.1 Method: GET"
    
```

Logging MSISDN Information

A Mobile Station Integrated Subscriber Directory Number (MSISDN) is a telephone number uniquely identifying a subscriber across multiple mobile networks. The MSISDN is associated with a country code and a national destination code identifying the subscriber’s operator.

You can configure a NetScaler appliance to include MSISDNs in LSN log entries for subscribers in mobile networks. The presence of MSISDNs in the LSN logs helps the administrator in faster and accurate back tracing of a mobile subscriber who has violated a policy or law, or whose information is required by lawful interception agencies.

The following sample LSN log entries include MSISDN information for a connection from a mobile subscriber in an LSN configuration. The log entries show that a mobile subscriber whose MSISDN is E164:5556543210 was connected to destination IP:port 23.0.0.1:80 through the NAT IP:port 203.0.113.3:45195.

Log Entry Type	Sample Log Entry
LSN session creation	Oct 14 15:37:30 10.102.37.77 10/14/2015:10:08:14 GMT 0-PPE-6 : default LSN LSN_SESSION 25012 0 : SESSION CREATED E164:5556543210 Client IP:Port:TD 192.0.2.50:4649:0, NatIP:NatPort 203.0.113.3:45195, Destination IP:Port:TD 23.0.0.1:0:0, Protocol: TCP

Log Entry Type	Sample Log Entry
LSN mapping creation	Oct 14 15:37:30 10.102.37.77 10/14/2015:10:08:14 GMT 0-PPE-6 : default LSN LSN_ADDR_MAPPING 25013 0 : ADM CREATED E164:5556543210 Client IP:Port:TD 192.0.2.50:4649:0, NatIP:NatPort 203.0.113.3:45195, Destination IP:Port:TD 23.0.0.1:0:0, Protocol: TCP
LSN session deletion	Oct 14 15:40:30 10.102.37.77 10/14/2015:10:11:14 GMT 0-PPE-6 : default LSN LSN_SESSION 25012 0 : SESSION CREATED E164:5556543210 Client IP:Port:TD 192.0.2.50:4649:0, NatIP:NatPort 203.0.113.3:45195, Destination IP:Port:TD 23.0.0.1:0:0, Protocol: TCP
LSN mapping	Oct 14 15:40:30 10.102.37.77 10/14/2015:10:11:14 GMT 0-PPE-6 : default LSN LSN_ADDR_MAPPING 25013 0 : ADM CREATED E164:5556543210 Client IP:Port:TD 192.0.2.50:4649:0, NatIP:NatPort 203.0.113.3:45195, Destination IP:Port:TD 23.0.0.1:0:0, Protocol: TCP

Perform the following tasks for including MSISDN information in LSN logs

- **Create an LSN log profile.** An LSN log profile includes the log subscriber ID parameter, which specifies whether to or not to include the MSISDN information in the LSN logs of an LSN configuration. Enable the log subscriber ID parameter when creating the LSN log profile.
- **Bind the LSN log profile to an LSN group of an LSN configuration.** Bind the created LSN log profile to an LSN group of an LSN configuration by setting the log profile name parameter to the created LSN log profile name. For instructions on configuring Large Scale NAT, see [Configuration Steps for LSN](#).

To create an LSN log profile by using the CLI At the command prompt, type:

```

1 add lsn logprofile <logprofilename -logSubscriberID ( ENABLED |
   DISABLED )
2
3 show lsn logprofile

```

To bind an LSN log profile to an LSN group of an LSN configuration by using the CLI At the command prompt, type:

```
1 bind lsn group <groupname> -logProfileName <lsnlogprofilename>
2
3 show lsn group
```

Sample Configuration:

In this example of LSN configuration, the LSN log profile has the log subscriber ID parameter enabled. The profile is bound to LSN group LSN-GROUP-9. MSISDN information is included in the LSN session and LSN mapping logs for connections from mobile subscribers (in the network 192.0.2.0/24).

```
1 add lsn logprofile LOG-PROFILE-MSISDN-9 -logSubscriberID ENABLED
2
3 Done
4 add lsn client LSN-CLIENT-9
5
6 Done
7 bind lsn client LSN-CLIENT-9 -network 192.0.2.0 -netmask 255.255.255.0
8
9 Done
10 add lsn pool LSN-POOL-9
11
12 Done
13 bind lsn pool LSN-POOL-9 203.0.113.3-203.0.113.4
14
15 Done
16 add lsn group LSN-GROUP-9 -clientname LSN-CLIENT-9
17
18 Done
19 bind lsn group LSN-GROUP-9 -poolname LSN-POOL-9
20
21 Done
22 bind lsn group LSN-GROUP-9 -logprofilename LOG-PROFILE-MSISDN-9
23
24 Done
```

Displaying Current LSN Sessions

You can display the current LSN sessions for detecting any unwanted or inefficient LSN sessions on the NetScaler appliance. You can display all or some LSN sessions on the basis of selection parameters.

Note: When more than a million LSN sessions exist on the NetScaler appliance, Citrix recommends displaying selected LSN sessions instead of all by using the selection parameters.

Configuration Using the CLI

To display all LSN sessions by using the CLI At the command prompt, type:

```
1 show lsn session
```

To display selective LSN sessions by using the CLI At the command prompt, type:

```
1 show lsn session [-clientname <string>] [-network <ip_addr> [-netmask <netmask>] [-td <positive_integer>]] [-natIP <ip_addr> [-natPort <port>]]
```

Example To display all LSN sessions existing on a NetScaler

```
> show lsn session
  SubscrIP          SubscrPort  SubscrTD          DstIP          DstPort DstTD    NatIP NatPort Proto  Dir
1.  192.0.2.10      15136      0                 198.51.100.9   80      0        203.0.113.6  6234  TCP  OUT
2.  192.0.2.11      15130      0                 198.51.101.2   80      0        203.0.113.6  7887  TCP  OUT
3.  192.0.2.12      16136      0                 198.51.100.3   80      0        203.0.113.6  9807  TCP  OUT
4.  192.0.2.13      18148      0                 198.51.101.6   80      0        203.0.113.6  4657  TCP  OUT
5.  192.0.2.14      13560      0                 198.51.101.7   80      0        203.0.113.7  9341  TCP  OUT
6.  192.0.2.15      14567      0                 198.51.100.8   80      0        203.0.113.5  8214  TCP  OUT
7.  192.0.2.15      16890      0                 198.51.101.1   80      0        203.0.113.5  8214  TCP  OUT
8.  192.0.2.16      12345      0                 198.51.102.9   80      0        203.0.113.5  1678  TCP  OUT
9.  192.0.2.19      19876      0                 198.51.103.8   80      0        203.0.113.5  1567  TCP  OUT
10. 192.0.2.20      10989      0                 198.51.104.19  80      0        203.0.113.11 1343  TCP  OUT
11. 192.0.3.13      18149      0                 198.51.101.61  80      0        203.0.113.11 4653  TCP  OUT
12. 192.0.3.14      13510      0                 198.51.101.74  80      0        203.0.113.11 9344  TCP  OUT
13. 192.0.3.15      14565      0                 198.51.100.82  80      0        203.0.113.11 8217  TCP  OUT
14. 192.0.3.15      16899      0                 198.51.101.12  80      0        203.0.113.11 8219  TCP  OUT
15. 192.0.3.16      12343      0                 198.51.102.99  80      0        203.0.113.11 1673  TCP  OUT
Done
```

To display all LSN sessions related to an LSN client entity LSN-CLIENT-2

```
> show lsn session -clientname LSN-CLIENT-2
  SubscrIP          SubscrPort  SubscrTD          DstIP          DstPort DstTD    NatIP NatPort Proto  Dir
1.  192.0.2.10      15136      0                 198.51.100.9   80      0        203.0.113.6  68234  TCP  OUT
2.  192.0.2.11      15130      0                 198.51.101.2   80      0        203.0.113.6  7887  TCP  OUT
3.  192.0.2.12      16136      0                 198.51.100.3   80      0        203.0.113.6  9807  TCP  OUT
4.  192.0.2.13      18148      0                 198.51.101.6   80      0        203.0.113.6  4657  TCP  OUT
5.  192.0.2.14      13560      0                 198.51.101.7   80      0        203.0.113.7  9341  TCP  OUT
6.  192.0.2.15      14567      0                 198.51.100.8   80      0        203.0.113.5  8214  TCP  OUT
7.  192.0.2.15      16890      0                 198.51.101.1   80      0        203.0.113.5  8214  TCP  OUT
8.  192.0.2.16      12345      0                 198.51.102.9   80      0        203.0.113.5  1678  TCP  OUT
9.  192.0.2.19      19876      0                 198.51.103.8   80      0        203.0.113.5  1567  TCP  OUT
10. 192.0.2.20      10989      0                 198.51.104.19  80      0        203.0.113.11 1343  TCP  OUT
Done
```

To display all LSN sessions that uses 203.0.113.5 as the NAT IP address

```
> show lsn session -natIP 203.0.113.5
  SubscrIP          SubscrPort  SubscrTD          DstIP          DstPort DstTD    NatIP NatPort Proto  Dir
1.  192.0.2.15      14567      0                 198.51.100.8   80      0        203.0.113.5  8214  TCP  OUT
2.  192.0.2.15      16890      0                 198.51.101.1   80      0        203.0.113.5  8214  TCP  OUT
3.  192.0.2.16      12345      0                 198.51.102.9   80      0        203.0.113.5  1678  TCP  OUT
4.  192.0.2.19      19876      0                 198.51.103.8   80      0        203.0.113.5  1567  TCP  OUT
Done
```

Configuration Using the Configuration Utility

To display all or selected LSN sessions by using the configuration utility

1. Navigate to System > Large Scale NAT > Sessions, and click the NAT44 tab.
2. For displaying LSN sessions on the basis of selection parameters, click Search.

Parameter Descriptions (of commands listed in the CLI procedure)

- show lsn session
 - clientname
Name of the LSN Client entity. Maximum Length: 127
 - network
IP address or network address of subscriber(s).
 - netmask
Subnet mask for the IP address specified by the network parameter.
Default value: 255.255.255.255
 - td
Traffic domain ID of the LSN client entity.
Default value: 0
Minimum value: 0
Maximum value: 4094
 - natIP
Mapped NAT IP address used in LSN sessions.

Displaying LSN Statistics

You can display statistics related to the LSN feature for evaluating the performance of the LSN feature or to troubleshoot problems. You can display a summary of statistics of the LSN feature or of a particular LSN group. The statistical counters reflect events since the NetScaler appliance was last restarted. All these counters are reset to 0 when the NetScaler appliance is restarted.

To display all LSN statistics by using the CLI

At the command prompt, type:

```
1 stat lsn
```


To display statistics for a specified LSN group by using the CLI

At the command prompt, type:

```
1 stat lsn group [<groupname>]
```

Example

```
1 > stat lsn
2
3 Large Scale NAT statistics
4
5 LSN TCP Received Packets          Rate(/s)
   40                               Total
6 LSN TCP Received Bytes            0
   3026
7 LSN TCP Transmitted Packets        0
   40
8 LSN TCP Transmitted Bytes          0
   3026
9 LSN TCP Dropped Packets            0
   0
10 LSN TCP Current Sessions           0
   0
11 LSN UDP Received Packets          0
   0
12 LSN UDP Received Bytes            0
   0
13 LSN UDP Transmitted Packets        0
   0
14 LSN UDP Transmitted Bytes          0
   0
15 LSN UDP Dropped Packets            0
   0
16 LSN UDP Current Sessions           0
   0
17 LSN ICMP Received Packets         0
   982
18 LSN ICMP Received Bytes           0
   96236
19 LSN ICMP Transmitted Packets       0
   0
20 LSN ICMP Transmitted Bytes         0
   0
21 LSN ICMP Dropped Packets           0
   982
22 LSN ICMP Current Sessions          0
   0
23 LSN Subscribers                    0
   1
24
25 Done
```

```

26
27 > stat lsn group LSN-GROUP-1
28
29 LSN Group Statistics
30
31                                     Rate (/s)
32                                     Total
31 TCP Translated Pkts                0
32     40
32 TCP Translated Bytes                0
33     3026
33 TCP Dropped Pkts                    0
34                                     0
34 TCP Current Sessions                0
35                                     0
35 UDP Translated Pkts                 0
36                                     0
36 UDP Translated Bytes                0
37                                     0
37 UDP Dropped Pkts                    0
38                                     0
38 UDP Current Sessions                0
39                                     0
39 ICMP Translated Pkts                0
40                                     0
40 ICMP Translated Bytes                0
41                                     0
41 ICMP Dropped Pkts                  0
42                                     0
42 ICMP Current Sessions                0
43                                     0
43 Current Subscribers                  0
44                                     1
45 Done

```

Parameter Descriptions (of commands listed in the CLI procedure)

- stat lsn group
 - groupname

Name of the LSN Group. Maximum Length: 127
 - detail

Specifies detailed output (including more statistics). The output can be quite voluminous. Without this argument, the output will show only a summary.
 - fullValues

Specifies that numbers and strings should be displayed in their full form. Without this option, long strings are shortened and large numbers are abbreviated.

- ntimes
The number of times, in intervals of seven seconds, the statistics should be displayed.
Default value: 1
- logFile
The name of the log file to be used as input.
- clearstats
Clear the statistics / counters
Possible values: basic, full

Compact Logging

Logging LSN information is one of the important functions needed by ISPs to meet legal requirements and be able to identify the source of traffic at any given time. This eventually results in a huge volume of log data, requiring the ISPs to make large investments to maintain the logging infrastructure.

Compact logging is a technique for reducing the log size by using a notational change involving short codes for event and protocol names. For example, C for client, SC for session created, and T for TCP. Compact logging results in an average of 40 percent reduction in log size.

The following examples of NAT44 mapping creation log entries show the advantage of compact logging.

Default logging format	02/02/2016:01:13:01 GMT Informational 0-PPE-2 : default LSN LSN_ADDRPORT_MAPPING 85 0 : A&PDM CREATED ClientIP:Port:TD1.1.1.1:6500:0,NatIP:NatPort8.8.8.8:47902, DestinationIP:Port:TD2.2.2.2:80:0, Protocol: TCP
Compact logging format	02/02/2016:01:14:57 GMT Info 0-PE2:default LSN 87 0:A&PDM[C-1.1.1.1:6500:0 N-8.8.8.9:51066 D- 2.2.2.2:80:0 T

Configuration Steps

Perform the following tasks for logging LSN information in compact format:

- **Create an LSN log profile.** An LSN log profile includes the Log Compact parameter, which specifies whether to or not to log information in compact format for an LSN configuration.

- **Bind the LSN log profile to an LSN group of an LSN configuration.** Bind the created LSN log profile to an LSN group of an LSN configuration by setting the Log Profile Name parameter to the created LSN log profile name. All sessions and mappings for this LSN group are logged in compact format.

To create an LSN log profile by using the CLI

At the command prompt, type:

```
1 add lsn logprofile <logfilename> -logCompact (ENABLED|DISABLED)
2
3 show lsn logprofile
```

To bind an LSN log profile to an LSN group of an LSN configuration by using the CLI

At the command prompt, type:

```
1 bind lsn group <groupname> -logProfileName <lsnlogfilename>
2
3 show lsn group
```

Sample configuration:

```
1 add lsn logprofile LOG-PROFILE-COMPACT-9 -logCompact ENABLED
2
3 Done
4 add lsn client LSN-CLIENT-9
5 Done
6 bind lsn client LSN-CLIENT-9 -network 192.0.2.0 -netmask 255.255.255.0
7 Done
8 add lsn pool LSN-POOL-9
9 Done
10 bind lsn pool LSN-POOL-9 203.0.113.3-203.0.113.4
11 Done
12 add lsn group LSN-GROUP-9 -clientname LSN-CLIENT-9
13 Done
14 bind lsn group LSN-GROUP-9 -poolname LSN-POOL-9
15 Done
16 bind lsn group LSN-GROUP-9 -logProfileName LOG-PROFILE-COMPACT-9
17 Done
```

IPFIX Logging

The NetScaler appliance supports sending information about LSN events in Internet Protocol Flow Information Export (IPFIX) format to the configured set of IPFIX collector(s). The appliance uses the existing AppFlow feature to send LSN events in IPFIX format to the IPFIX collectors.

IPFIX based logging is available for the following large scale NAT44 related events:

- Creation or deletion of an LSN session.
- Creation or deletion of an LSN mapping entry.
- Allocation or de-allocation of port blocks in the context of deterministic NAT.
- Allocation or de-allocation of port blocks in the context of dynamic NAT.
- Whenever subscriber session quota is exceeded.

Points to Consider before you Configure IPFIX logging

Before you start configuring IPsec ALG, consider the following points:

- You must configure the AppFlow feature and IPFIX collector(s) on the NetScaler appliance. For instructions, see Configuring the AppFlow feature topic.

Configuration Steps

Perform the following tasks for logging LSN information in IPFIX format:

- **Enable LSN logging in the AppFlow configuration.** Enable the LSN logging parameter as part of AppFlow configuration.
- **Create an LSN log profile.** An LSN log profile includes the IPFIX parameter that enables or disables the log information in IPFIX format.
- **Bind the LSN log profile to an LSN group of an LSN configuration.** Bind the LSN log profile to one or multiple LSN group(s). Events related to the bound LSN group will be logged in IPFIX format.

To enable LSN logging in the AppFlow configuration by using the CLI At the command prompt, type:

```
1 set appflow param -lsnLogging ( ENABLED | DISABLED )
2
3 show appflow param
```

To create an LSN log profile by using the CLI At the command prompt, type:

```
1 set lsn logprofile <logProfileName> -logipfix ( ENABLED | DISABLED )
2
3 show lsn logprofile
```

To bind the LSN log profile to an LSN group of an LSN configuration by using the CLI At the command prompt, type:

```
1 bind lsn group <groupname> -logProfileName <lsnlogprofilename>
2
3 show lsn group
```

To create an LSN log profile by using the GUI Navigate to **System > Large Scale NAT > Profiles**, click **Log** tab, and then add a log profile.

To bind the LSN log profile to an LSN group of an LSN configuration by using the GUI

1. Navigate to **System > Large Scale NAT > LSN Group**, open the **LSN** group.
2. In **Advanced Settings**, click **+ Log Profile** to bind the created Log profile to the LSN group.

TCP SYN Idle Timeout

May 2, 2023

SYN idle timeout is the timeout for establishing TCP connections that use LSN on the NetScaler appliance. If a TCP session is not established within the configured timeout period, the NetScaler removes the session. SYN idle timeout is useful in providing protection against SYN flood attacks. In an LSN configuration, the LSN group entity includes the SYN idle timeout setting.

Example:

In the following sample LSN configuration, SYN idle timeout is set to 30 secs for TCP connections related to subscribers from the 192.0.2.0/24 network.

```
1 add lsn client LSN-CLIENT-1
2
3 Done
4
5 bind lsn client LSN-CLIENT-1 -network 192.0.2.0 -netmask 255.255.255.0
6
7 Done
8
9 add lsn pool LSN-POOL-1
10
11 Done
12
13 bind lsn pool LSN-POOL-1 203.0.113.3
14
15 Done
16
```

```
17 add lsn group LSN-GROUP-1 -clientname LSN-CLIENT-1 -synidletimeout 30
18
19 Done
20
21 bind lsn group LSN-GROUP-1 -poolname pool1 LSN-POOL-1
22
23 Done
```

Overriding LSN configuration with Load Balancing Configuration

May 2, 2023

An LSN configuration takes precedence over any load balancing configuration by default. For overriding the large scale networking (LSN) configuration with the load balancing configuration for traffic matching both configurations, create a net profile with Override LSN parameter enabled and bind this profile to the virtual server of the load balancing configuration. USNIP or USIP settings of the load balancing configuration are applied to the traffic, instead of applying the LSN IP address of the LSN configuration.

This option is useful in an LSN deployment that includes NetScaler appliances and value added services, such as firewall and optimization devices. In this type of deployment, the ingress traffic on the NetScaler appliance is required to pass through these value-added services before an LSN configuration on the appliance is applied to the traffic. For the NetScaler appliance to send the ingress traffic to a value added service, a load balancing configuration is created and override LSN is enabled on the appliance. The load balancing configuration includes value added services, represented as load balancing services, bound to a virtual server of type ANY. The virtual server is configured with listen policies for identifying the traffic to be sent to the value added service.

To enable override lsn in a net profile by using the CLI

To enable override lsn while adding a net profile, at the command prompt, type

```
1 add netProfile <name> -overrideLsn ( ENABLED | DISABLED )
2
3 show netprofile <name>
```

To enable override lsn while adding a net profile, at the command prompt, type

```
1 set netProfile <name> -overrideLsn ( ENABLED | DISABLED )
2
3 show netprofile <name>
```

To enable override lsn in a net profile by using GUI

1. Navigate to **System > Network > Net Profiles**.
2. Set the **Override LSN** parameter while adding or modifying net profiles.

In the following sample configuration, net profile NETPROFILE-OVERRIDE LSN-1 has override LSN option enabled and is bound to load balancing virtual server LBVS-1.

Sample configuration:

```
1 add netprofile NETPROFILE-OVERRIDE LSN-1 -overrideLsn ENABLED
2
3 Done
4
5 set lb vserver LBVS-1 -netprofile NETPROFILE-OVERRIDE LSN-1
6
7 Done
```

Clearing LSN Sessions

May 2, 2023

You can remove any unwanted or inefficient LSN sessions from the NetScaler appliance. The appliance immediately releases resources (such as NAT IP address, port, and memory) allocated for these sessions, making the resources available for new sessions. The appliance also drops all the subsequent packets related to these removed sessions. You can remove all or selected LSN sessions from the NetScaler appliance.

To clear all LSN sessions by using the command line interface

At the command prompt, type:

```
1 flush lsn session
2
3 show lsn session
```

To clear selective LSN sessions by using the command line interface

At the command prompt, type:

```
1 flush lsn session [-clientname <string>] [-network <ip_addr> [-netmask
   <netmask>] [-td <positive_integer>]] [-natIP <ip_addr> [-natPort <
   port>]]
```



```
2
3 show lsn session
```

Example

Clear all LSN sessions existing on a NetScaler

```
1 flush lsn session
2
3 Done
```

Clear all LSN sessions related to LSN client entity LSN-CLIENT-1

```
1 flush lsn session -clientname LSN-CLIENT-1
2
3 Done
```

Clear all LSN sessions related to a subscriber network (192.0.2.0) of LSN client entity LSN-CLIENT-2 belonging to traffic domain 100

```
1 flush lsn session -clientname LSN-CLIENT-2 -network 192.0.2.0 -
   netmask 255.255.255.0 -td 100
2
3 Done
```

To clear all LSN sessions by using the configuration utility

Navigate to System > Large Scale NAT > Sessions, and click Flush Sessions.

Parameter Descriptions (of commands listed in the CLI procedure)

- flush lsn session
 - clientname
Name of the LSN Client entity. Maximum Length: 127
 - network
IP address or network address of subscriber(s).
 - netmask
Subnet mask for the IP address specified by the network parameter.
Default value: 255.255.255.255

- td
Traffic domain ID of the LSN client entity.
Default value: 0
Minimum value: 0
Maximum value: 4094
- natIP
Mapped NAT IP address used in LSN sessions.
- natPort
Mapped NAT port used in the LSN sessions.

Load Balancing SYSLOG Servers

May 2, 2023

The NetScaler appliance send its SYSLOG events and messages to all the configured external log servers. This results in storing redundant messages and makes monitoring difficult for system administrators. To address this issue, the NetScaler appliance offers load balancing algorithms that can load balance the SYSLOG messages among the external log servers for better maintenance and performance. The supported load balancing algorithms include RoundRobin, LeastBandwidth, CustomLoad, LeastConnection, LeastPackets, and AuditlogHash.

Load balancing of SYSLOG servers using the command line interface

At the command prompt, type:

Add a service and specify the service type as SYSLOGTCP or SYSLOGUDP.

```
1 add service <name>(<IP> | <serverName>) <serviceType (SYSLOGTCP |  
SYSLOGUDP)> <port>
```

Add a load balancing virtual server, specify the service type as SYSLOGTCP or SYSLOGTCP, and load balancing method as AUDITLOGHASH.

```
1 add lb vserver <name> <serviceType (SYSLOGTCP | SYSLOGUDP)> [-lbMethod  
<AUDITLOGHASH>]
```

Bind the service to the load balancing virtual server.

```
1 bind lb vserver <name> <serviceName>
```

1. Add a SYSLOG action and specify the load balancing server name that has SYSLOGTCP or SYSLOGUDP as service type.

```
1 add syslogaction <name> <serverIP> [-lbVserverName <string>] [-logLevel <logLevel>]
```

Add a SYSLOG policy by specifying the rule and action.

```
1 add syslogpolicy <name> <rule> <action>
```

Bind the SYSLOG policy to the system global for the policy to take effect.

```
1 bind system global <policyName>
```

Load balancing of SYSLOG servers using the configuration utility

1. Add a service and specify the service type as SYSLOGTCP or SYSLOGUDP.
Navigate to Traffic Management > Services, click Add and select SYLOGTCP or SYSLOGUDP as protocol.
2. Add a load balancing virtual server, specify the service type as SYSLOGTCP or SYSLOGTCP, and load balancing method as AUDITLOGHASH.
Navigate to Traffic Management > Virtual Servers, click Add and select SYLOGTCP or SYSLOGUDP as protocol.
3. Bing the service to the load balancing virtual server to the service.
Bing the service to the load balancing virtual server.
Navigate to Traffic Management > Virtual Servers, select a virtual server and then selectAUDITLOGHASH in the Load Balancing Method.
4. Add a SYSLOG action and specify the load balancing server name that has SYSLOGTCP or SYSLOGUDP as service type.
Navigate to System > Auditing, click Servers and add a server by selecting LB Vserver option inServers.
5. Add a SYSLOG policy by specifying the rule and action.
Navigate to System > Syslog, click Policies and add a SYSLOG policy.
6. Bind the SYSLOG policy to the system global for the policy to take effect.
Navigate to System > Syslog, select a SYSLOG policy and click Action, and then click Global Bindings and bind the policy to system global.

Example:

The following configuration specifies load balance of SYSLOG messages among the external log servers using the AUDITLOGHASH as load balancing method. The NetScaler appliance generates SYSLOG events and messages that are load balanced amongst the services, service1, service2, and service 3.

```
1 add service service1 192.0.2.10 SYSLOGUDP 514
2
3 add service service2 192.0.2.11 SYSLOGUDP 514
4
5 add service service3 192.0.2.11 SYSLOGUDP 514
6
7 add lb vserver lbvserver1 SYSLOGUDP -lbMethod AUDITLOGHASH
8
9 bind lb vserver lbvserver1 service1
10
11 bind lb vserver lbvserver1 service2
12
13 bind lb vserver lbvserver1 service3
14
15 add syslogaction sysaction1 -lbVserverName lbvserver1 -logLevel All
16
17 add syslogpolicy syspol1 ns_true sysaction1
18
19 bind system global syspol1
```

Limitations:

The NetScaler appliance does not support an external load balancing virtual server load balancing the SYSLOG messages among the log servers.

Port Control Protocol

May 2, 2023

NetScaler appliances now support Port Control Protocol (PCP) for large scale NAT (LSN). Many of an ISP's subscriber applications must be accessible from Internet (for example, Internet of Things (IOT) devices, such as an IP camera that provides surveillance over the Internet). One way to meet this requirement is to create static large scale NAT (LSN) maps. But for a very large number of subscribers, creating static LSN NAT maps is not a feasible solution.

Port Control Protocol (PCP) enables a subscriber to request specific LSN NAT mappings for itself and/or for other 3rd party devices. The large scale NAT device creates an LSN map and sends it to the subscriber. The subscriber sends the remote devices on the Internet the NAT IP address:NAT port at which they can connect to the subscriber.

Applications usually send frequent keep-alive messages to the large scale NAT device so that their LSN mappings do not time out. PCP helps reduce the frequency of such keep-alive messages by enabling the applications to learn the timeout settings of the LSN mappings. This helps reduce bandwidth consumption on the ISP's access network and battery consumption on mobile devices.

PCP is a client-server model and runs over the UDP transport protocol. A NetScaler appliance implements the PCP server component and is compliant with RFC 6887.

Configuration Steps

Perform the following tasks for configuring PCP:

- (Optional) Create a PCP profile. A PCP profile includes settings for PCP related parameters (for example, to listen for mapping and peer PCP requests). A PCP profile can be bound to a PCP server. A PCP profile bound to a PCP server applies all its settings to the PCP server. A PCP profile can be bound to multiple PCP servers. By default, one PCP profile with default parameters settings is bound to all PCP servers. A PCP profile that you bind to a PCP server overrides the default PCP profile settings for that server. A default PCP profile has the following parameter settings:
 - Mapping: Enabled
 - Peer: Enabled
 - Minimum map life: 120 seconds
 - Maximum max life: 86400 seconds
 - Announce count: 10
 - Third Party: Disabled
- Create a PCP server and bind a PCP profile to it. Create a PCP server on the NetScaler appliance to listen for PCP related requests and messages from the subscribers. A Subnet IP (SNIP) address must be assigned to a PCP server to access it. By default, a PCP server listens on port 5351.
- Bind the PCP server to an LSN group of an LSN configuration. Bind the created PCP server to an LSN group of an LSN configuration by setting the PCP Server parameter to specify the created PCP server. The created PCP server can be accessed only by the subscribers of this LSN group.

Note

A PCP server for a large scale NAT configuration does not serve requests from subscribers that are identified from ACL rules.

To create a PCP profile by using the CLI

At the command prompt, type:

```
1 add pcp profile <name> [-mapping ( ENABLED | DISABLED )] [-peer (
  ENABLED | DISABLED )] [-minMapLife <secs>] [-maxMapLife <secs>] [-
  announceMultiCount <positive_integer>][-thirdParty ( ENABLED |
  DISABLED )]
2
3 show pcp profile <name>
```

To create a PCP server by using the CLI

At the command prompt, type:

```
1 add pcp server <name> <IPAddress> [-port <portNum|*>] [-pcpProfile <
  string>]
2
3 show pcp server <name>
```

Sample Configuration for NAT44

In the following sample configuration, PCP server PCP-SERVER-9, with default PCP settings, is bound to LSN group LSN-GROUP-9. PCP-SERVER-9 serves PCP requests from subscribers in network 192.0.2.0/24.

Sample configuration:

```
1 add pcp server PCP-SERVER-9 192.0.3.9
2
3 Done
4
5 add lsn client LSN-CLIENT-9
6
7 Done
8
9 bind lsn client LSN-CLIENT-9 -network 192.0.2.0 -netmask 255.255.255.0
10
11 Done
12
13 add lsn pool LSN-POOL-9
14
15 Done
16
17 bind lsn pool LSN-POOL-9 203.0.113.3-203.0.113.4
18
19 Done
20
21 add lsn group LSN-GROUP-9 -clientname LSN-CLIENT-9
22
23 Done
24
```

```
25 bind lsn group LSN-GROUP-9 -poolname LSN-POOL-9
26
27 Done
28
29 bind lsn group LSN-GROUP-9 -pcpServer PCP-SERVER-9
30
31 Done
```

LSN44 in a cluster setup

May 2, 2023

Large scale NAT44 configurations are supported on a NetScaler cluster setup.

A NetScaler cluster is a group of NetScaler appliances that are configured and managed as a single system. A NetScaler cluster provides scalability and availability. Each NetScaler appliance in a cluster setup acts as an independent LSN entity and is managed as a single system.

The LSN configuration in a cluster setup is same as in a standalone appliance except a specific pool of LSN IP addresses are owned by only one node at a time. In other words, an LSN IP pool entity is configured as a spotted entity in a particular node. All the nodes of a cluster setup can have a specific LSN IP pool entity. To make sure that the packets related to an LSN session are received on the same cluster node that performed the NAT operation, policy based backplane (PBS) steering is configured. PBS steers the received related packets of an LSN session to the same cluster node.

Sample configuration:

```
1 add lsn client LSN-CLIENT-1
2
3 Done
4
5 bind lsn client LSN-CLIENT-1 -network 192.0.2.0 -netmask 255.255.255.0
6
7 Done
8
9 add lsn pool LSN-POOL-1
10
11 Done
12
13 bind lsn pool LSN-POOL-1 -ownerNode 1 203.0.113.3
14
15 Done
16
17 bind lsn pool LSN-POOL-1 -ownerNode 2 203.0.113.3
18
19 Done
20
```

```
21 add lsn group LSN-GROUP-1 -clientname LSN-CLIENT-1
22
23 Done
24
25 bind lsn group LSN-GROUP-1 -poolname pool1 LSN-POOL-1
26
27 Done
28
29 add ns acl b1 ALLOW -srcIP = 192.0.2.0-192.0.2.255 -type DFD -dfdhash
    SIP
30
31
32 Done
33
34 apply ns acls -type DFD
35
36 Done
```

Dual-Stack Lite

August 11, 2023

Note:

Dual-Stack Lite feature is deprecated from NetScaler 14.1 release onwards.

Deprecated features are not removed immediately. The NetScaler appliance continues to support the deprecated feature until it is removed in a future release.

Because of the shortage of IPv4 addresses, and the advantages of IPv6 over IPv4, many ISPs have started transitioning to IPv6 infrastructure. But during the transition, ISPs must continue to support IPv4 along with IPv6, because most of the public Internet still uses only IPv4, and many subscribers do not support IPv6.


Dual Stack Lite (DS-Lite) is an IPv6 transition solution for ISPs with IPv6 infrastructure to connect their IPv4 subscribers to the Internet. DS-Lite uses IPv4-in-IPv6 tunneling to send a subscriber's IPv4 packet through a tunnel on the IPv6 access network to the ISP. The IPv6 packet is decapsulated to recover the subscriber's IPv4 packet and is then sent to the Internet after NAT address and port translation and other LSN related processing. The response packets traverse through the same path to the subscriber.

The NetScaler appliance implements the AFTR component of a DS-Lite deployment and is compliant with RFC 6333.

Architecture

The Dual-Stack Lite architecture for an ISP consists of the following components:

- **Basic Bridging Broadband (B4).** Basic Bridging broadband, or B4, is a device or component that resides in the subscriber premises. Typically, B4 is a component in the CPE devices in the subscriber premises. IPv4 subscribers are connected to the IPv6-only ISP access network through the CPE device containing the B4 component. The main function of the B4 is to initiate an IPv6 tunnel between B4 and an address family transition router (AFTR) in order to send or receive subscriber IPv4 request or response packets over the tunnel. B4 includes an IPv6 address known as the B4 tunnel endpoint address. B4 uses this address to source IPv6 packets to AFTR and receive packets from AFTR.
- **Address family transition router (AFTR).** AFTR is a device or component residing in the ISP's core network. AFTR terminates the IPv6 tunnel from the B4 device. In other words, the IPv6 tunnel is formed between B4 in the subscriber premise and AFTR in ISP core network. AFTR decapsulates IPv6 packets received from B4 to recover the subscribers' original IPv4 packets. AFTR sends the IPv4 packets to the LSN device or component. LSN routes the IPv4 packets to their destination after performing NAT address and port translation (NAT 44) and other LSN related processing. AFTR includes an IPv6 address known as the AFTR tunnel endpoint address. AFTR uses this address to source IPv6 packets to B4 and receive IPv6 packets from B4. The NetScaler appliance implements the AFTR component.
- **Softwire.** The IPv6 tunnel created between B4 and AFTR is called a softwire.

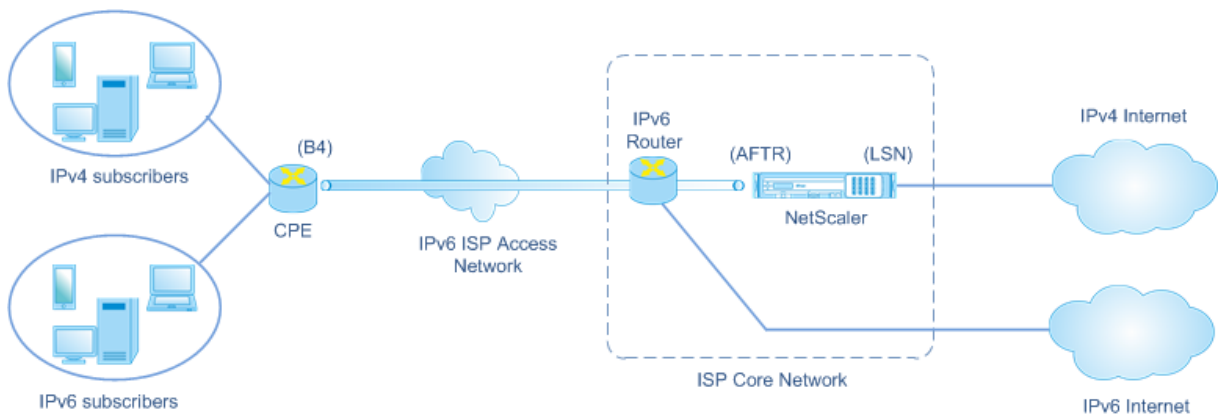

The DS-Lite architecture of an ISP using a NetScaler appliance consists of subscribers in private address spaces accessing the Internet through a NetScaler appliance deployed in ISP's core network. IPv4 subscribers are connected to a CPE device that includes the DS-Lite B4 functionality. The CPE device is connected to the ISP core network through ISP's IPv6-only access network. The NetScaler appliance contains the DS-Lite AFTR and LSN functionality.

IPv4 subscribers connected to the CPE device are assigned private IPv4 addresses either manually or through DHCP server running on the CPE device. On the CPE device, the AFTR tunnel endpoint

address is specified manually or through DHCPv6. Configuration of CPE devices is vendor specific and therefore outside the scope of this documentation.


Upon receiving a request packet that is from an IPv4 subscriber and destined to a location on the Internet, the B4 component of the CPE device encapsulates the IPv4 packet in an IPv6 packet and sends it to the NetScaler appliance in the ISP core network. The NetScaler appliance's AFTR functionality decapsulates the IPv6 packet to recover the subscriber's original IPv4 packet. The LSN functionality of the NetScaler appliance translates the source IP address and port of the IPv4 packet to a NAT IP address and NAT port selected from the configured NAT pool, and then sends the packet to its destination on the Internet.

The appliance maintains a record of all active sessions that use the AFTR and LSN functionalities. These sessions are called DS-Lite sessions. The NetScaler appliance also maintains the mappings between B4 IPv6 address, subscriber IPv4 address and port, and NAT IPv4 address and port, for each DS-Lite session. These mappings are called DS-Lite LSN mappings. From DS-Lite session entries and DS-Lite LSN mapping entries, the NetScaler appliance recognizes a response packet (received from the Internet) as belonging to a particular DS-Lite session.

When the NetScaler appliance receives a response packet belonging to a particular DS-Lite session, the appliance's LSN functionality translates the destination IP address and port of the response packet from NAT IP address and port to the subscriber IP address and port, the AFTR functionality encapsulates the resulting packet in an IPv6 packet and sends it to the CPE device. The B4 functionality of the CPE device decapsulates the IPv6 packet to recover the IPv4 response packet, and then sends the IPv4 packet to the subscriber.

Example

Consider an example of a DS-Lite deployment consisting of NetScaler NS-1 in an ISP's core network, CPE device B4-CPE-1 in a subscriber premise, and a single IPv4 subscriber SUB-1. B4-CPE-1 supports the B4 functionality of DS-Lite feature.

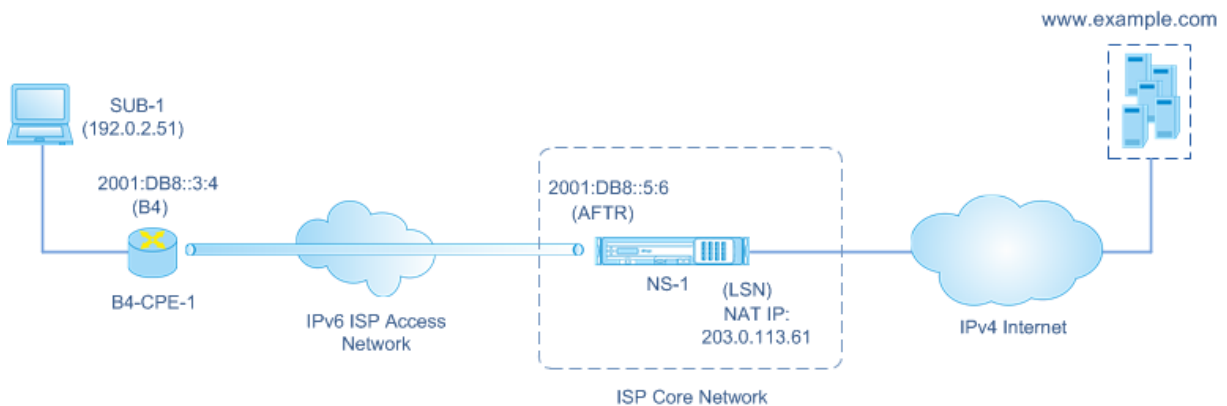

The following table lists the settings used in this example.

Entity	Name	Details
IPv4 address of subscriber SUB-1		192.0.2.51
IPv6 address of softwire endpoint on the B4 device (B4-CPE-1)		2001:DB8::3:4
IPv6 address of the softwire endpoint on the AFTR device (NS-1)		2001:DB8::5:6

Settings on NetScaler appliance NS-1:

Entity	Name	Details
LSN client	LSN-DSLITE-CLIENT-1	Network6 (Identifying traffic from B4 devices) = 2001:DB8::3:0/100
LSN pool	LSN-DSLITE-POOL-1	LSN IPs (NAT IP) = 203.0.113.61 - 203.0.113.70
IPv6 Profile	LSN-DSLITE-PROFILE-1	Type = DS-LITE; IPv6 address (AFTR IPv6 address) = One of the NetScaler owned IPv6 address of type SNIP6 = 2001:DB8::5:6
LSN group	LSN-DSLITE-GROUP-1	LSN client = LSN-DSLITE-CLIENT-1; LSN pool = LSN-DSLITE-POOL-1; IPv6 profile = LSN-DSLITE-PROFILE-1

Following is the traffic flow in this example:

1. IPv4 subscriber SUB-1 sends a request to (<http://www.example.com/>). The IPv4 packet has:
 - Source IP address = 192.0.2.51
 - Source port = 2552
 - Destination IP address = 198.51.100.250
 - Destination port = 80
2. Upon receiving the IPv4 request packet, B4-CPE-1 encapsulates it in the payload of an IPv6 packet and then sends the IPv6 packet to NS-1. The IPv6 packet has:
 - Source IP address = 2001:DB8::3:4

- Destination IP address = 2001:DB8::5:6
3. When NS-1 receives the IPv6 packet, the AFTR module decapsulates the packet by removing the IPv6 headers. The resulting packet is SUB-1's original IPv4 request packet.
 4. The LSN module of NS-1 translates the source IP address and port of the packet to a NAT IP address and NAT port selected from the configured NAT pool. The translated IPv4 packet has:
 - Source IP address = 203.0.113.61
 - Source port = 3002
 - Destination IP address = 198.51.100.250
 - Destination port = 80
 5. The LSN module also creates an LSN mapping and session entry for this DS Lite session. The mapping includes the following information:
 - Source IP address of the IPv6 packet (B4-CPE-1's IPv6 address) = 2001:DB8::3:4
 - Source IP address of the IPv4 packet (SUB-1's IPv4 address) = 192.0.2.51
 - Source port of the IPv4 packet = 2552
 - NAT IP address = 203.0.113.61
 - NAT port = 3002
 6. NS-1 sends the resulting IPv4 packet to its destination on the Internet.
 7. The server for www.example.com processes the request packet and sends a response packet. The IPv4 response packet has:
 - Source IP address = 198.51.100.250
 - Source port = 80
 - Destination IP address = 203.0.113.61
 - Destination port = 3002
 8. Upon receiving the IPv4 packet, NS-1 examines the LSN mapping and session entries and finds that the IPv4 response packet belongs to a DS Lite session. The LSN module of NS-1 translates the destination IP address and port. The IPv4 packet now has:
 - Source IP address = 198.51.100.250
 - Source port = 80
 - Destination IP address = 192.0.2.51
 - Destination port = 2552
 9. The AFTR module of NS-1 encapsulates the IPv4 packet in an IPv6 packet and then sends the IPv6 packet to B4-CPE-1. The IPv6 packet has:
 - Source IP address = 2001:DB8::5:6
 - Destination IP address = 2001:DB8::3:4

10. Upon receiving the packet, B4-CPE-1 decapsulates the IPv6 packet by removing the IPv6 headers, and then sends the resulting IPv4 packet to CL-1.

Points to Consider before Configuring DS-Lite

May 2, 2023

Consider the following points before configuring DS-Lite on a NetScaler appliance:

1. You must understand the different components of DS-Lite, described in RFC 6333.
2. A DS-lite configuration on a NetScaler appliance uses the LSN commands sets. In a DS-Lite configuration, the LSN client entity specifies the IPv6 address or IPv6 network address or ACL6 rules for identifying the traffic from the B4 device. A DS-Lite configuration also includes an IPv6 profile, which specifies the IPv6 address AFTR component on a NetScaler appliance. For more information on NetScaler LSN feature, see [Large Scale NAT](#).
3. For a DS-Lite configuration, the NetScaler appliance supports LSN for IPv4 packets that belong to one of the following protocols only. The NetScaler appliance drops IPv4 packets belonging to other protocols:
 - TCP
 - UDP
 - ICMP
4. The NetScaler appliance supports the following ALGs DS-Lite:
 - ICMP
 - FTP
 - TFTP
 - Session Initiation Protocol (SIP)
 - Real Time Streaming Protocol (RTSP)

Configuring DS-Lite

May 2, 2023

A DS-lite configuration on a NetScaler appliance uses the LSN commands sets. In a DS-Lite configuration, the LSN client entity specifies the IPv6 address or IPv6 network address or ACL6 rules for identifying the traffic from the B4 device. For more information on the NetScaler LSN feature, see [Large](#)

Scale NAT. A DS-Lite configuration also includes an IPv6 profile, which specifies the IPv6 address (of type SNIP6) of the DS-Lite AFTR component on a NetScaler appliance.

Configuring DS-Lite on a NetScaler appliance consists of the following tasks:

- **Set the global LSN parameters.** Global parameters include the amount of NetScaler memory reserved for the LSN feature and synchronization of LSN sessions in a high availability setup.
- **Create an LSN client entity for identifying traffic from B4 CPE devices.** The LSN client entity refers to a set of DS-Lite B4 devices. The client entity includes IPv6 addresses or IPv6 network address or ACL6 rules for identifying the traffic from these B4 devices. An LSN client can be bound to only one LSN group. The command line interface has two commands for creating an LSN client entity and binding a subscriber to the LSN client entity. The configuration utility combines these two operations on a single screen.
- **Create an LSN pool and bind NAT IP addresses to it.** An LSN pool defines a pool of NAT IP addresses to be used by the NetScaler appliance to perform LSN. The command line interface has two commands for creating an LSN pool and binding NAT IP addresses to the LSN pool. The configuration utility combines these two operations on a single screen.
- **Create an LSN IP6 profile.** An LSN IP6 profile defines the IPv6 address of the DS-Lite AFTR component on the NetScaler appliance. The IPv6 address must be one of the NetScaler owned IPv6 address of type SNIP6.
- **(Optional) Create an LSN Transport Profile for a specified protocol.** An LSN transport profile defines various timeouts and limits, such as maximum LSN sessions and maximum ports usage that a subscriber can have for a given protocol. You bind an LSN transport profile for each protocol (TCP, UDP, and ICMP) to an LSN group. A profile can be bound to multiple LSN groups. A profile bound to an LSN group applies to all subscribers of an LSN client bound to the same group. By default, one LSN transport profile with default settings for TCP, UDP, and ICMP protocols is bound to an LSN group during its creation. This profile is called the default transport profile. An LSN transport profile that you bind to an LSN group overrides the default LSN transport profile for that protocol.
- **(Optional) Create an LSN Application Profile for a specified protocol and bind a set of destination ports to it.** An LSN application profile defines the LSN mapping and LSN filtering controls of a group for a given protocol and for a set of destination ports. For a set of destination ports, you bind an LSN profile for each protocol (TCP, UDP, and ICMP) to an LSN group. A profile can be bound to multiple LSN groups. An LSN application profile bound to an LSN group applies to all subscribers of an LSN client bound to the same group. By default, one LSN application profile with default settings for TCP, UDP, and ICMP protocols for all destination ports is bound to an LSN group during its creation. This profile is called a default application profile. When you bind an LSN application profile, with a specified set of destination ports, to an LSN group, the bound profile overrides the default LSN application profile for that protocol at that set of desti-

nation ports. The command line interface has two commands for creating an LSN application profile and binding a set of destination ports to the LSN application profile. The configuration utility combines these two operations on a single screen.

- **Create an LSN Group and bind LSN pools, LSN IPv6 profile, (optional) LSN transport profiles, and (optional) LSN application profiles to the LSN group.** An LSN group is an entity consisting of an LSN client, an LSN IPv6 profile, LSN pool(s), LSN transport profile(s), and LSN application profiles(s). A group is assigned parameters, such as port block size and logging of LSN sessions. The parameter settings apply to all the subscribers of an LSN client bound to the LSN group. Only one LSN IPv6 profile can be bound to an LSN group, and an LSN IPv6 profile bound to an LSN group cannot be bound to other LSN groups. Only LSN Pools and LSN groups with the same NAT type settings can be bound together. Multiples LSN pools can be bound to an LSN group. Only one LSN client entity can be bound to an LSN group, and an LSN client entity bound to an LSN group cannot be bound to other LSN groups. The command line interface has two commands for creating an LSN group and binding LSN pools, LSN transport profiles, and LSN application profiles to the LSN group. The configuration utility combines these two operations in a single screen.

Configuration by Using the Command Line

To create an LSN client by using the command line interface:

At the command prompt, type:

```
1 add lsn client <clientname>
2
3 show lsn client
```

To bind an IPv6 network or an ACL6 rule to an LSN client by using the command line interface:

At the command prompt, type:

```
1 bind lsn client <clientname> (-network6 <ipv6_addr|*>| -acl6name <
  string>)
2
3 show lsn client
```

To create an LSN pool by using the command line interface:

At the command prompt, type:

```
1 add lsn pool <poolname> [-nattype ( DYNAMIC )] [-portblockallocation (
  ENABLED | DISABLED )] [-portrealloctimeout <secs>] [-
  maxPortReallocTmq <positive_integer>]
2
3 show lsn pool
```

To bind an IP address range to an LSN pool by using the command line interface:

At the command prompt, type:

```
1 bind lsn pool <poolname> <lsnip>
2
3 show lsn pool
```

Note: For removing LSN IP addresses from an LSN pool, use the unbind lsn pool command.

To configure an LSN IPv6 profile by using the command line interface:

At the command prompt, type:

```
1 add lsn ip6profile <name> -type DS-Lite -network6 < ipv6_addr|*s >
2
3 show lsn ip6profile
```

To create an LSN transport profile by using the command line interface:

At the command prompt, type:

```
1 add lsn transportprofile <transportfilename> <transportprotocol> [-
  sessiontimeout <secs>] [-finrsttimeout <secs>] [-portquota <
  positive_integer>] [-sessionquota <positive_integer>] [-
  portpreserveparity ( ENABLED | DISABLED )] [-portpreserverange (
  ENABLED | DISABLED )] [-syncheck ( ENABLED | DISABLED )]
2
3 show lsn transportprofile
```

To create an LSN application profile by using the command line interface:

At the command prompt, type:

```
1 add lsn appsprofile <appsfilename> <transportprotocol> [-ippooling (
  PAIRED | RANDOM )] [-mapping <mapping>] [-filtering <filtering>] [-
  tcproxy ( ENABLED | DISABLED )] [-td <positive_integer>]
2
3 show lsn appsprofile
```

To bind an application protocol port range to an LSN application profile by using the command line interface:

At the command prompt, type:

```
1 bind lsn appsprofile <appsfilename> <lsnport>
2
3 show lsn appsprofile
```

To create an LSN group by using the command line interface:

At the command prompt, type:

```

1 add lsn group <groupname> -clientname <string> [-nattype ( DYNAMIC )]
  [-portblocksize <positive_integer>] [-logging (ENABLED | DISABLED )]
  [-sessionLogging ( ENABLED | DISABLED )][-sessionSync ( ENABLED |
  DISABLED )] [-snmptraplimit<positive_integer>] [-ftp ( ENABLED |
  DISABLED )] [-pptp ( ENABLED |DISABLED )] [-sipalg ( ENABLED |
  DISABLED )] [-rtspalg ( ENABLED |DISABLED )] [-ip6profile <string>]
2
3 show lsn group

```

To bind LSN protocol profiles and LSN pools to an LSN group by using the command line interface:

At the command prompt, type:

```

1 bind lsn group <groupname> (-poolname <string> | -transportprofilename
  <string> | -httphdrlogprofilename <string> | -appsprofilename <
  string> | -sipalgprofilename <string> | rtspalgprofilename <string>)
2
3 show lsn group

```

Configuration by Using the Configuration Utility

To configure an LSN client and bind an IPv6 network address or an ACL6 rule by using the configuration utility:

Navigate to **System > Large Scale NAT > Clients**, and add a client and then bind an IPv6 network address or an ACL6 rule to the client.

To configure an LSN pool and bind NAT IP addresses by using the configuration utility:

Navigate to **System > Large Scale NAT > Pools**, and add a pool and then bind an NAT IP address or a range of NAT IP addresses to the pool.

To configure an LSN IPv6 profile by using the configuration utility:

Navigate to **System > Large Scale NAT > Profiles**, click the **IPv6** tab, and assign an IPv6 address for DS-Lite AFTR.

To configure an LSN transport profile by using the configuration utility:

1. Navigate to **System > Large Scale NAT > Profiles**.
2. On the details pane, click **Transport**, and then add a transport profile.

To configure an LSN application profile by using the configuration utility:

1. Navigate to **System > Large Scale NAT > Profiles**.
2. On the details pane, click **Application**, and then add an application profile.

To configure an LSN group and bind an LSN client, an LSN IPv6 profile, pools, transport profiles, and application profiles by using the configuration utility:

Navigate to **System > Large Scale NAT > Groups**, and add a group and then bind an LSN client, an LSN IPv6 profile, pools, transport profiles, and application profiles to the group.

```
1 > add lsn client LSN-DSLITE-CLIENT-1
2 Done
3 > bind lsn client LSN-DSLITE-CLIENT-1 -network6 2001:DB8::3:0/100
4 Done
5 > add lsn pool LSN-DSLITE-POOL-1
6 Done
7 > bind lsn pool LSN-DSLITE-POOL-1 203.0.113.61 - 203.0.113.70
8 Done
9 > add lsn ip6profile LSN-DSLITE-PROFILE-1 -type DS-Lite -network6 2001:
  DB8::5:6
10 Done
11 > add lsn group LSN-DSLITE-GROUP-1 -clientname LSN-DSLITE-CLIENT-1 -
  portblocksize 1024 -ip6profile LSN-DSLITE-PROFILE-1
12 Done
13 > add lsn group LSN-DSLITE-GROUP-1 -poolname LSN-DSLITE-POOL-1
14 Done
```

Logging and Monitoring DS-Lite

You can log DS-Lite information to diagnose or troubleshoot problems, and to meet legal requirements. The NetScaler appliance supports all LSN logging features for logging DS-Lite information. For configuring DS-Lite logging, use the procedures for configuring LSN logging, described at [Logging and Monitoring LSN](#).

A log message for a DS-Lite LSN mapping entry consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced
- Time stamp
- Entry type (MAPPING)
- Whether the DS-Lite LSN mapping entry was created or deleted
- IPv6 address of B4
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID might be present, depending on the following conditions:
 - Destination IP address and port are not logged for Endpoint-Independent mapping.
 - Only the destination IP address is logged for Address-Dependent mapping. The port is not logged.
 - Destination IP address and port are logged for Address-Port-Dependent mapping.

A log message for a DS-Lite session consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced
- Time stamp
- Entry type (SESSION)
- Whether the DS-Lite session is created or removed
- IPv6 address of B4
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID

The following table shows sample DS-Lite log entries of each type stored on the configured log servers. These log entries are generated by a NetScaler appliance whose NSIP address is 10.102.37.115. You can log DS-Lite information to diagnose or troubleshoot problems, and to meet legal requirements. The NetScaler appliance supports all LSN logging features for logging DS-Lite information. For configuring DS-Lite logging, use the procedures for configuring LSN logging, described at [Logging and Monitoring LSN](#).

A log message for a DS-Lite LSN mapping entry consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced
- Time stamp
- Entry type (MAPPING)
- Whether the DS-Lite LSN mapping entry was created or deleted
- IPv6 address of B4
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID might be present, depending on the following conditions:
 - Destination IP address and port are not logged for Endpoint-Independent mapping.
 - Only the destination IP address is logged for Address-Dependent mapping. The port is not logged.
 - Destination IP address and port are logged for Address-Port-Dependent mapping.

A log message for a DS-Lite session consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced

- Time stamp
- Entry type (SESSION)
- Whether the DS-Lite session is created or removed
- IPv6 address of B4
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID

The following table shows sample DS-Lite log entries of each type stored on the configured log servers. These log entries are generated by a NetScaler appliance whose NSIP address is 10.102.37.115.

LSN Log Entry Type	Sample Log Entry
DS-Lite session creation	Local4.Informational 10.102.37.115 08/14/2015:13:35:38 GMT 0-PPE-1 : default LSN LSN_SESSION 37647607 0 : SESSION CREATED 2001:DB8::3:4 Client IP:Port:TD 192.0.2.51:2552:0, NatIP:NatPort 203.0.113.61:3002, Destination IP:Port:TD 198.51.100.250:80:0, Protocol:TCP
DS-Lite session deletion	Local4.Informational 10.102.37.115 08/14/2015:13:38:22 GMT 0-PPE-1 : default LSN LSN_SESSION 37647617 0 : SESSION DELETED 2001:DB8::3:4 Client IP:Port:TD 192.0.2.51:2552:0, NatIP:NatPort 203.0.113.61:3002, Destination IP:Port:TD 198.51.100.250:80:0, Protocol: TCP
DS-Lite LSN mapping creation	Local4.Informational 10.102.37.115 08/14/2015:13:35:39 GMT 0-PPE-1 : default LSN LSN_EIM_MAPPING 37647610 0 : EIM CREATED 2001:DB8::3:4 Client IP:Port:TD 192.0.2.51:2552:0, NatIP:NatPort 198.51.100.250:80, Protocol: TCP

DS-Lite LSN mapping deletion	Local4.Informational 10.102.37.115 08/14/2015:13:38:25 GMT 0-PPE-1 : default LSN LSN_EIM_MAPPING 37647618 0 : EIM DELETED 2001:DB8::3:4 Client IP:Port:TD 192.0.2.51:2552:0, NatIP:NatPort 198.51.100.250:80, Protocol: TCP
------------------------------	--

Displaying Current DS-Lite Sessions

You can display the current DS-Lite sessions for detecting any unwanted or inefficient sessions on the NetScaler appliance. You can display all or some DS-Lite sessions, on the basis of selection parameters.

Configuration by Using the Command Line Interface

To display all DS-Lite sessions by using the command line interface:

At the command prompt, type:

```
1 show lsn session -nattype DS-Lite
```

To display selected DS-Lite sessions by using the command line interface:

At the command prompt, type:

```
1 show lsn session -nattype DS-Lite [-clientname <string>] [-network <ip_addr> [-netmask <netmask>] [-td <positive_integer>]] [-natIP <ip_addr> [-natPort <port>]]
```

Example:

The following sample output displays all DS-Lite sessions existing on a NetScaler appliance:

```
1 show lsn session -nattype DS-Lite
2   B4-Address SubscrIP SubscrPort SubscrTD DstIP DstPort DstTD NatIP
   NatPort Proto Dir
3
4 1. 2001:DB8::3:4 192.0.2.51 2552 0 198.51.100.250 80 0 203.0.113.61
   3002 TCP OUT
5
6 2. 2001:DB8::3:4 192.0.2.51 3551 0 198.51.100.300 80 0 203.0.113.61
   52862 TCP OUT
7
8 3. 2001:DB8::3:4 192.0.2.100 4556 0 198.51.100.250 0 0 203.0.113.61
   48116 ICMP OUT
```

```

9
10 4. 2001: DB8::190 192.0.2.150 3881 0 198.51.100.199 80 0 203.0.113.69
      48305 TCP OUT
11
12 Done

```

Configuration Using the Configuration Utility

To display all or selected DS-Lite sessions by using the configuration utility

1. **Navigate to System > Large Scale NAT > Sessions**, and click the **DS-Lite** tab.
2. For displaying DS-Lite sessions on the basis of selection parameters, click **Search**.

Clearing DS-Lite Sessions

You can remove any unwanted or inefficient DS-Lite sessions from the NetScaler appliance. The appliance immediately releases the resources (such as NAT IP address, port, and memory) allocated for these sessions, making the resources available for new sessions. The appliance also drops all the subsequent packets related to these removed sessions. You can remove all or selected DS-Lite sessions from the NetScaler appliance.

To clear all DS-Lite sessions by using the command line interface:

At the command prompt, type:

```
flush lsn session -nattype DS-Lite
show lsn session -nattype DS-Lite
```

To clear selected DS-Lite sessions by using the command line interface:

At the command prompt, type:

```

1 flush lsn session -nattype DS-Lite [-clientname <string>] [-network <
      ip_addr> [-netmask <netmask>] [-td <positive_integer>]] [-natIP <
      ip_addr> [-natPort <port>]]
2
3 show lsn session -nattype DS-Lite

```

To clear all or selected DS-Lite sessions by using the configuration utility:

1. Navigate to **System > Large Scale NAT > Sessions**, and click the **DS-Lite** tab.
2. Click **Flush Sessions**.

Configuring DS-Lite Static Maps

May 2, 2023

The NetScaler appliance supports manual creation of DS-Lite LSN mappings, which contain the mapping between the following information:

- Subscriber's IP address and port, and IPv6 address of B4 device or component
- NAT IP address and port

Static DS-Lite LSN mappings are useful in cases where you want to ensure that the connections initiated to a NAT IP address and port map to the subscriber IP address and port through the specified B4 device (for example, web servers located in the internal network).

Note: This feature is supported in release 11.0 build 64.x and later.

To create a DS-Lite static LSN mapping by using the command line

At the command prompt, type:

```
1 add lsn static <name> <transportprotocol> <subscrIP> <subscrPort> [-td
   <positive_integer>] [-network6 <B4_ADDR>] [<natIP> [<natPort>]] [-
   destIP<ip_addr> [-dsttd <positive_integer>]]
2
3 show lsn static
```

Parameter Descriptions

add lsn static

- name

Name for the LSN static mapping entry. Must begin with an ASCII alphanumeric or underscore (_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the LSN group is created. The following requirement applies only to the CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "ds-lite lsn static1" or 'ds-lite lsn static1'). This is a mandatory argument. Maximum Length: 127

- transportprotocol

Protocol for the DS-Lite LSN mapping entry.

- subscrIP

IPv4 address of a subscriber for the DS-Lite LSN mapping entry.

- subscrPort

Port of the subscriber for the DS-Lite LSN mapping entry.

- Network6

IPv6 address of the B4 device or component.

- td

ID of the traffic domain to which the B4 device belongs. The IPv6 address of the B4 device is specified in the network6 parameter. If you do not specify an ID, the B4 device is assumed to be a part of the default traffic domain.

- natIP

IPv4 address, already existing on the NetScaler appliance as type LSN, to be used as NAT IP address for this mapping entry.

- natPort

NAT port for this DS-Lite LSN mapping entry.

- destIP

Destination IP address for the DS-Lite LSN mapping entry.

- dsttd

ID of the traffic domain through which the destination IP address for this DS-Lite LSN mapping entry is reachable from the NetScaler appliance. If you do not specify an ID, the destination IP address is assumed to be reachable through the default traffic domain, which has an ID of 0.

To create a DS-Lite static LSN mapping by using the configuration utility

Navigate to System > Large Scale NAT > Static, and add a new DS-Lite static LSN mapping.

Configuring Deterministic NAT Allocation for DS-Lite

May 2, 2023

Deterministic NAT allocation for DS-Lite LSN deployments is a type of NAT resource allocation in which the NetScaler appliance pre-allocates, from the LSN NAT IP pool and on the basis of the specified

port block size, an LSN NAT IP address and a block of ports to each subscriber (subscriber behind B4 device).

Note: This feature is supported in release 11.0 build 64.x and later.

The appliance sequentially allocates NAT resources to these subscribers. It assigns the first block of ports on the beginning NAT IP address to the beginning subscriber IP address. The next range of ports is assigned to the next subscriber, and so on, until the NAT address does not have enough ports for the next subscriber. At that point, the first port block on the next NAT address is assigned to the subscriber, and so on.

The NetScaler appliance logs the allocated NAT IP address and the port block for a subscriber. For a connection, a subscriber can be identified by just its mapped NAT IP address and port block. For this reason, the NetScaler appliance does not log the creation or deletion of an LSN session.

A DS-Lite subscriber can have only one deterministic port block. If the entire block of ports is being used, the NetScaler appliance drops any new connection from the subscriber.

Example: Deterministic DS-Lite

In this example, a deterministic DS-Lite configuration includes four subscribers with IP addresses 192.0.17.5, 192.0.17.6, 192.0.17.7, and 192.0.17.8. These ipv4 subscribers are behind a B4 device having the IPv6 address 2001:DB8::3:4. In this configuration, the port block size is set to 20480 and LSN NAT IP address pool has IP addresses in the range 203.0.113.41-203.0.113.42.

The NetScaler appliance sequentially pre-allocates, from the LSN NAT IP pool and on the basis of the set port block size, an LSN NAT IP address and a block of ports to each subscriber. It assigns the first block of ports (1024-21503) on the beginning NAT IP address (203.0.113.41) to the beginning subscriber IP address (192.0.17.5). The next range of ports is assigned to the next subscriber, and so on, until the NAT address does not have enough ports for the next subscriber. At that point, the first port block on the next NAT IP address is assigned to the subscriber, and so on. The NetScaler logs the NAT IP address and the block of ports allocated for each subscriber.

The NetScaler appliance does not log any LSN session created or deleted for these subscribers.

The following table lists the NAT IP address and blocks of ports allocated to each subscriber in this example:

Subscriber IP address	Allocated NAT IP address	Allocated Block of Ports	IPv6 address of B4
192.0.17.5	203.0.113.41	1024 - 21503	2001:DB8::3:4
192.0.17.6	203.0.113.41	21504 - 41983	2001:DB8::3:4

192.0.17.7	203.0.113.41	41984 - 62463	2001:DB8::3:4
192.0.17.8	203.0.113.42	1024 - 21503	2001:DB8::3:4

Configuration Steps

You need to configure deterministic NAT as part of the DS-Lite configuration. For instructions on configuring DS-Lite, see [Configuring DS-Lite](#).

While configuring DS-Lite, make sure that you:

- Set the NAT Type parameter to Deterministic when adding the LSN pool and the LSN group.
- Set the desired port block size parameter when adding the LSN group, unless you can accept the default value.

Points to Consider before Configuring Deterministic DS-Lite

Consider the following points before configuring deterministic DS-Lite:

- The complete IP address of each subscriber must be specified in a separate add lsn client command, by setting the Network and Netmask parameters. (Set Netmask to 255.255.255.255.) Also the IPv4 address of the B4 device specified in Network6 parameter must be complete (/128 prefix). In other words, Network and Network6 parameter do not accept addresses other than /32 bit mask and /128 prefix, respectively.
- The NetScaler appliance drops connections from subscribers that are not specified in any deterministic DS-Lite configuration but are behind B4 devices specified in a deterministic DS-lite configuration.
- The NetScaler appliance recognizes subscribers having the same IPv4 address as different subscribers if they are behind different B4 devices. A combination of subscriber IPv4 address and B4 device defines a unique subscriber in the LSN client entity of a DS-Lite configuration.

Sample Deterministic DS-Lite Configuration:

The following configuration uses the settings listed in section Example: Deterministic DS-Lite.

```
1 add lsn client LSN-DSLITE-CLIENT-10
2
3 Done
4 bind lsn client LSN-DSLITE-CLIENT-10 -network 192.0.17.5 -netmask
   255.255.255.255 -network6 2001:DB8::3:4/128
5
6 Done
```

```
7 bind lsn client LSN-DSLITE-CLIENT-10 -network 192.0.17.6 -netmask
  255.255.255.255 -network6 2001:DB8::3:4/128
8
9 Done
10 bind lsn client LSN-DSLITE-CLIENT-10 -network 192.0.17.7 -netmask
  255.255.255.255 -network6 2001:DB8::3:4/128
11
12 Done
13 bind lsn client LSN-DSLITE-CLIENT-10 -network 192.0.17.8 -netmask
  255.255.255.255 -network6 2001:DB8::3:4/128
14
15 Done
16 add lsn pool LSN-DSLITE-POOL-10 -nattype DETERMINISTIC
17
18 Done
19 bind lsn pool LSN-DSLITE-POOL-10 203.0.113.41-203.0.113.42
20
21 Done
22 add lsn ip6profile LSN-DSLITE-PROFILE-10 -type DS-Lite -network6 2001:
  DB8::5:6
23
24 Done
25 add lsn group LSN-DSLITE-GROUP-10 -clientname LSN-DSLITE-CLIENT-10 -
  nattype DETERMINISTIC -portblocksize 20480 -ip6profile LSN-DSLITE-
  PROFILE-10
26
27 Done
28 bind lsn group LSN-DSLITE-GROUP-10 -poolname LSN-DSLITE-POOL-10
29
30 Done
```

Configuring Application Layer Gateways for DS-Lite

May 2, 2023

For some application layer protocols, the IP addresses and protocol port numbers are also communicated in the packet's payload. Application Layer Gateway (ALG) for a protocol parses the packet payload and does necessary changes to ensure that the protocol continues to work over DS-Lite.

The NetScaler appliance supports ALG for the following protocols for DS-Lite:

- FTP
- ICMP
- TFTP
- SIP
- RTSP

Application Layer Gateway for FTP, ICMP, and TFTP Protocols

September 21, 2020

You can enable or disable ALG for the FTP protocol for a DS-Lite configuration by enabling or disabling the FTP ALG option of the LSN group of the configuration.

ALG for the ICMP protocol is enabled by default, and there is no provision to disable it.

ALG for the TFTP protocol is disabled by default. TFTP ALG is enabled automatically for a DS-Lite configuration when you bind a UDP LSN application profile, with endpoint-independent-mapping, endpoint-independent filtering, and destination port as 69 (well-known port for TFTP), to the LSN group.

Application Layer Gateway for SIP Protocol

May 2, 2023

Using DS-Lite with Session Initiation Protocol (SIP) is complicated, because SIP messages contain IP addresses in the SIP headers as well as in the SIP body. When LSN is used with SIP, the SIP headers contain information about the caller and the receiver, and the device translates this information to hide it from the outside network. The SIP body contains the Session Description Protocol (SDP) information, which includes IP addresses and port numbers for transmission of the media. SIP ALG for DS-Lite is compliant with RFC 3261, RFC 3581, RFC 4566, and RFC 4475.

Note

SIP ALG is supported in a NetScaler standalone appliance, in a NetScaler high availability setup, as well as in a NetScaler cluster setup.

Limitations of SIP ALG

SIP ALG for DS-Lite has the following limitations:

- Only SDP payload is supported.
- The following are not supported:
 - Multicast IP addresses
 - Encrypted SDP
 - SIP TLS
 - FQDN translation

- SIP layer authentication
- Admin partitions
- Multipart body
- Line folding

Configuring SIP ALG

You need to configure the SIP ALG as part of the LSN configuration. For instructions on configuring LSN, see [Configuring DS-Lite](#). While configuring LSN, make sure that you:

- Set the following parameters while adding an LSN application profile:
 - IP Pooling = PAIRED
 - Address and Port Mapping = ENDPOINT-INDEPENDENT
 - Filtering = ENDPOINT-INDEPENDENT
- Create a SIP ALG profile and make sure that you define either the source port range or destination port range. Bind the SIP ALG profile to the LSN group
- Enable SIP ALG in the LSN group

To enable SIP ALG for an LSN configuration by using the CLI

At the command prompt, type:

```
1 add lsn group <groupname> -clientname <string>[-sipalg ( ENABLED |
   DISABLED )]
2
3 show lsn group<groupname>
```

To enable SIP ALG for an LSN configuration by using the CLI

At the command prompt, type:

```
1 add lsn sipalgprofile<sipalgprofilename>[-dataSessionIdleTimeout<
   positive_integer>][-sipSessionTimeout<positive_integer>][-
   registrationTimeout<positive_integer>][-sipsrcportrange<port[-port
   ]>][-sipedstportrange<port[-port]>][-openRegisterPinhole ( ENABLED |
   DISABLED )][-openContactPinhole ( ENABLED | DISABLED )][-
   openViaPinhole ( ENABLED | DISABLED )][-openRecordRoutePinhole (
   ENABLED | DISABLED )][-sipTransportProtocol ( TCP | UDP )[-
   openRoutePinhole ( ENABLED | DISABLED )][-rport ( ENABLED | DISABLED
   )]
2
3 show lsn sipalgprofile<sipalgprofilename>
```

Sample Configuration

The following sample DS-Lite configuration, SIP ALG is enabled for TCP traffic from B4 devices in the network 2001:DB8::3:0/96.

```
1 add lsn client LSN-DSLITE-CLIENT-1
2 Done
3 bind lsn client LSN-DSLITE-CLIENT-1 -network6 2001:DB8::3:0/96
4 Done
5 add lsn pool LSN-DSLITE-POOL-1
6 Done
7 bind lsn pool LSN-DSLITE-POOL-1 203.0.113.61 - 203.0.113.70
8 Done
9 add lsn ip6profile LSN-DSLITE-PROFILE-1 -type DS-Lite -network6 2001:
  DB8::5:6
10 Done
11 add lsn appsprofile LSN-DSLITE-APPS-PROFILE-1 TCP -ippooling PAIRED -
  mapping ENDPOINT-INDEPENDENT -filtering ENDPOINT-INDEPENDENT
12 Done
13 add lsn sipalgprofile SIPALGPROFILE-1 -sipdstportrange 5060 -
  sipTransportProtocol TCP
14 Done
15 add lsn group LSN-DSLITE-GROUP-1 -clientname LSN-DSLITE-CLIENT-1 -
  portblocksize 1024 -ip6profile LSN-DSLITE-PROFILE-1 -sipalg ENABLED
16 Done
17 bind lsn group LSN-DSLITE-GROUP-1 -poolname LSN-DSLITE-POOL-1
18 Done
19 bind lsn group LSN-DSLITE-GROUP-1 -appsprofilename LSN-DSLITE-APPS-
  PROFILE-1
20 Done
21 bind lsn group LSN-DSLITE-GROUP-1 -sipalgprofilename SIPALGPROFILE-1
22 Done
```

Application Layer Gateway for RTSP Protocol

May 2, 2023

Real Time Streaming Protocol (RTSP) is an application-level protocol for the transfer of real-time media data. Used for establishing and controlling media sessions between end points, RTSP is a control channel protocol between the media client and the media server. The typical communication is between a client and a streaming media server.

Streaming media from a private network to a public network requires translating IP addresses and port numbers over the network. NetScaler functionality includes an Application Layer Gateway (ALG) for RTSP, which can be used with Large Scale NAT (LSN) to parse the media stream and make any necessary changes to ensure that the protocol continues to work over the network.

How IP address translation is performed depends on the type and direction of the message, and the type of media supported by the client-server deployment. Messages are translated as follows:

- Outbound request—Private IP address to NetScaler owned public IP address called LSN IP address.
- Inbound response—LSN IP address to private IP address.
- Inbound request—No translation.
- Outbound response—Private IP address to LSN pool IP address.

Note

RTSP ALG is supported in a NetScaler standalone appliance, in a NetScaler high availability setup, as well as in a NetScaler cluster setup.

Limitations of RTSP ALG

The RTSP ALG does not support the following:

- Multicast RTSP sessions
- RTSP session over UDP
- Admin partitions
- RTSP Authentication
- HTTP tunneling

Configuring RTSP ALG

Configure RTSP ALG as part of the LSN configuration. For instructions on configuring LSN, see [Configuring DS-Lite](#). While configuring LSN, make sure that you:

- Set the following parameters while adding an LSN application profile:
 - IP Pooling = PAIRED
 - Address and Port Mapping = ENDPOINT-INDEPENDENT
 - Filtering = ENDPOINT-INDEPENDENT
- Enable RTSP ALG in the LSN group
- Create a RTSP ALG profile and bind the RTSP ALG profile to the LSN group

To enable RTSP ALG for an LSN configuration by using the CLI

At the command prompt, type:

```

1 add lsn group <groupname> -clientname <string> [-rtspalg ( ENABLED |
   DISABLED )]
2
3 show lsn group <groupname>

```

To enable RTSP ALG for an LSN configuration by using the CLI

At the command prompt, type:

```

1 add lsn rtspalgprofile <rtspalgprofilename> [-rtspIdleTimeout <
   positive_integer>] -rtspportrange <port[-port]> [-
   rtspTransportProtocol (TCP|UDP)]
2
3 show lsn rtspalgprofile <rtspalgprofilename>

```

Sample RTSP ALG Configuration

The following sample DS-Lite configuration, RTSP ALG is enabled for TCP traffic from B4 devices in the network 2001:DB8::4:0/96.

Sample RTSP ALG Configuration:

```

1 add lsn client LSN-DSLITE-CLIENT-5
2 Done
3 bind lsn client LSN-DSLITE-CLIENT-5 -network6 2001:DB8::4:0/96
4 Done
5 add lsn pool LSN-DSLITE-POOL-5
6 Done
7 bind lsn pool LSN-DSLITE-POOL-5 203.0.113.61 - 203.0.113.70
8 Done
9 add lsn ip6profile LSN-DSLITE-PROFILE-5 -type DS-Lite -network6 2001:
   DB8::5:6
10 Done
11 add lsn appsprofile LSN-DSLITE-APPS-PROFILE-5 TCP -ippooling PAIRED -
   mapping ENDPOINT-INDEPENDENT -filtering ENDPOINT-INDEPENDENT
12 Done
13 add lsn rtspalgprofile RTSPALGPROFILE-5 -rtspIdleTimeout 1000 -
   rtspportrange 554
14 Done
15 add lsn group LSN-DSLITE-GROUP-5 -clientname LSN-DSLITE-CLIENT-5 -
   portblocksize 1024 -ip6profile LSN-DSLITE-PROFILE-5 -rtspalg ENABLED
16 Done
17 bind lsn group LSN-DSLITE-GROUP-5 -poolname LSN-DSLITE-POOL-5
18 Done
19 bind lsn group LSN-DSLITE-GROUP-5 -appsprofilename LSN-DSLITE-APPS-
   PROFILE-5
20 Done
21 bind lsn group LSN-DSLITE-GROUP-5 -rtspalgprofilename RTSPALGPROFILE-5
22 Done

```


Logging and Monitoring DS-Lite

May 2, 2023

You can log DS-Lite information to diagnose or troubleshoot problems, and to meet legal requirements. The NetScaler appliance supports all LSN logging features for logging DS-Lite information. For configuring DS-Lite logging, use the procedures for configuring LSN logging, described at [Logging and Monitoring LSN](#).

A log message for a DS-Lite LSN mapping entry consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced
- Time stamp
- Entry type (MAPPING)
- Whether the DS-Lite LSN mapping entry was created or deleted
- IPv6 address of B4
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID might be present, depending on the following conditions:
 - Destination IP address and port are not logged for Endpoint-Independent mapping.
 - Only the destination IP address is logged for Address-Dependent mapping. The port is not logged.
 - Destination IP address and port are logged for Address-Port-Dependent mapping.

A log message for a DS-Lite session consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced
- Time stamp
- Entry type (SESSION)
- Whether the DS-Lite session is created or removed
- IPv6 address of B4
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID

The following table shows sample DS-Lite log entries of each type stored on the configured log servers. These log entries are generated by a NetScaler appliance whose NSIP address is 10.102.37.115. You can

log DS-Lite information to diagnose or troubleshoot problems, and to meet legal requirements. The NetScaler appliance supports all LSN logging features for logging DS-Lite information. For configuring DS-Lite logging, use the procedures for configuring LSN logging, described at [Logging and Monitoring LSN](#).

A log message for a DS-Lite LSN mapping entry consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced
- Time stamp
- Entry type (MAPPING)
- Whether the DS-Lite LSN mapping entry was created or deleted
- IPv6 address of B4
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID might be present, depending on the following conditions:
 - Destination IP address and port are not logged for Endpoint-Independent mapping.
 - Only the destination IP address is logged for Address-Dependent mapping. The port is not logged.
 - Destination IP address and port are logged for Address-Port-Dependent mapping.

A log message for a DS-Lite session consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced
- Time stamp
- Entry type (SESSION)
- Whether the DS-Lite session is created or removed
- IPv6 address of B4
- Subscriber's IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID

The following table shows sample DS-Lite log entries of each type stored on the configured log servers. These log entries are generated by a NetScaler appliance whose NSIP address is 10.102.37.115.

LSN Log Entry Type	Sample Log Entry
DS-Lite session creation	Local4.Informational 10.102.37.115 08/14/2015:13:35:38 GMT 0-PPE-1 : default LSN LSN_SESSION 37647607 0 : SESSION CREATED 2001:DB8::3:4 Client IP:Port:TD 192.0.2.51:2552:0, NatIP:NatPort 203.0.113.61:3002, Destination IP:Port:TD 198.51.100.250:80:0, Protocol:TCP
DS-Lite session deletion	Local4.Informational 10.102.37.115 08/14/2015:13:38:22 GMT 0-PPE-1 : default LSN LSN_SESSION 37647617 0 : SESSION DELETED 2001:DB8::3:4 Client IP:Port:TD 192.0.2.51:2552:0, NatIP:NatPort 203.0.113.61:3002, Destination IP:Port:TD 198.51.100.250:80:0, Protocol: TCP
DS-Lite LSN mapping creation	Local4.Informational 10.102.37.115 08/14/2015:13:35:39 GMT 0-PPE-1 : default LSN LSN_EIM_MAPPING 37647610 0 : EIM CREATED 2001:DB8::3:4 Client IP:Port:TD 192.0.2.51:2552:0, NatIP:NatPort 198.51.100.250:80, Protocol: TCP
DS-Lite LSN mapping deletion	Local4.Informational 10.102.37.115 08/14/2015:13:38:25 GMT 0-PPE-1 : default LSN LSN_EIM_MAPPING 37647618 0 : EIM DELETED 2001:DB8::3:4 Client IP:Port:TD 192.0.2.51:2552:0, NatIP:NatPort 198.51.100.250:80, Protocol: TCP

Displaying Current DS-Lite Sessions

You can display the current DS-Lite sessions for detecting any unwanted or inefficient sessions on the NetScaler appliance. You can display all or some DS-Lite sessions, on the basis of selection parameters.

To display all DS-Lite sessions by using the command line interface

At the command prompt, type:

```
1 show lsn session -nattype DS-Lite
```

To display selected DS-Lite sessions by using the command line interface

At the command prompt, type:

```
1 show lsn session -nattype DS-Lite [-clientname <string>] [-network <
  ip_addr> [-netmask <netmask>] [-td <positive_integer>]] [-natIP <
  ip_addr> [-natPort <port>]]
```

The following sample output displays all DS-Lite sessions existing on a NetScaler appliance:

```
show lsn session -nattype DS-Lite
```

```
1   B4-Address SubscrIP SubscrPort SubscrTD DstIP DstPort DstTD NatIP
   NatPort Proto Dir
2
3  1. 2001:DB8::3:4 192.0.2.51 2552 0 198.51.100.250 80 0 203.0.113.61
   3002 TCP OUT
4
5  2. 2001:DB8::3:4 192.0.2.51 3551 0 198.51.100.300 80 0 203.0.113.61
   52862 TCP OUT
6
7  3. 2001:DB8::3:4 192.0.2.100 4556 0 198.51.100.250 0 0 203.0.113.61
   48116 ICMP OUT
8
9  4. 2001: DB8::190 192.0.2.150 3881 0 198.51.100.199 80 0 203.0.113.69
   48305 TCP OUT
10 Done
```

Configuration Using the Configuration Utility

To display all or selected DS-Lite sessions by using the configuration utility

1. **Navigate to System > Large Scale NAT > Sessions**, and click the **DS-Lite** tab.
2. For displaying DS-Lite sessions on the basis of selection parameters, click **Search**.

Clearing DS-Lite Sessions

You can remove any unwanted or inefficient DS-Lite sessions from the NetScaler appliance. The appliance immediately releases the resources (such as NAT IP address, port, and memory) allocated for

these sessions, making the resources available for new sessions. The appliance also drops all the subsequent packets related to these removed sessions. You can remove all or selected DS-Lite sessions from the NetScaler appliance.

To clear all DS-Lite sessions by using the command line interface

At the command prompt, type:

```
1 flush lsn session -nattype DS-Lite
2
3 show lsn session -nattype DS-Lite
```

To clear selected DS-Lite sessions by using the command line interface

At the command prompt, type:

```
1 flush lsn session -nattype DS-Lite [-clientname <string>] [-network <
    ip_addr> [-netmask <netmask>] [-td <positive_integer>]] [-natIP <
    ip_addr> [-natPort <port>]]
2
3 show lsn session -nattype DS-Lite
```

To clear all or selected DS-Lite sessions by using the configuration utility

1. Navigate to **System > Large Scale NAT > Sessions**, and click the **DS-Lite** tab.
2. Click **Flush Sessions**.

Logging HTTP Header Information

The NetScaler appliance can log request header information of an HTTP connection that is using the DS-Lite functionality. The following header information of an HTTP request packet can be logged:

- URL that the HTTP request is destined to
- HTTP Method specified in the HTTP request
- HTTP version used in the HTTP request
- IPv4 address of the subscriber that sent the HTTP request

The HTTP header logs can be used by ISPs to see the trends related to the HTTP protocol among a set of subscribers. For example, an ISP can use this feature to find out the most popular website among a set of subscribers.

Configuration Steps

Perform the following tasks for configuring the NetScaler appliance to log HTTP header information:

- **Create an HTTP header log profile.** An HTTP header log profile is a collection of HTTP header attributes (for example, URL and HTTP method) that can be enabled or disabled for logging.
- **Bind the HTTP header to an LSN group of a DS-Lite LSN configuration.** Bind the HTTP header log profile to an LSN group of an LSN configuration by setting the HTTP header log profile name parameter to the name of the created HTTP header log profile. The NetScaler appliance then logs HTTP header information of any HTTP requests related to the LSN group. An HTTP header log profile can be bound to multiple LSN groups, but an LSN group can have only one HTTP header log profile.

To create an HTTP header log profile by using the command line interface At the command prompt, type:

```
1 add lsn httphdrlogprofile <httphdrlogprofilename> [-logURL ( ENABLED |  
  DISABLED )] [-logMethod ( ENABLED | DISABLED )] [-logVersion (  
  ENABLED | DISABLED )] [-logHost ( ENABLED | DISABLED )]  
2  
3 show lsn httphdrlogprofile
```

To bind an HTTP header log profile to an LSN group by using the command line interface At the command prompt, type:

```
1 bind lsn group <groupname> -httphdrlogprofilename <string>  
2  
3 show lsn group <groupname>
```

Sample Configuration

In the following DS-Lite LSN configuration, HTTP header log profile HTTP-Header-LOG-1 is bound to LSN group LSN-DSLITE-GROUP-1. The log profile has all the HTTP attributes (URL, HTTP method, HTTP version, and HOST IP address) enabled for logging, so that all these attributes are logged for any HTTP requests from B4 devices (in the network 2001:DB8:5001::/96).

Sample Configuration:

```
1 add lsn httphdrlogprofile HTTP-HEADER-LOG-1  
2  
3 Done  
4  
5 add lsn client LSN-DSLITE-CLIENT-1
```

```
6
7 Done
8
9 bind lsn client LSN-DSLITE-CLIENT-1 -network6 2001:DB8::3:0/100
10
11 Done
12
13 add lsn pool LSN-DSLITE-POOL-1
14
15 Done
16
17 bind lsn pool LSN-DSLITE-POOL-1 203.0.113.61 - 203.0.113.70
18
19 Done
20
21 add lsn ip6profile LSN-DSLITE-PROFILE-1 -type DS-Lite -network6 2001:
    DB8::5:6
22
23 Done
24
25 add lsn group LSN-DSLITE-GROUP-1 -clientname LSN-DSLITE-CLIENT-1 -
    portblocksize 1024 -ip6profile LSN-DSLITE-PROFILE-1
26
27 Done
28
29 bind lsn group LSN-DSLITE-GROUP-1 -poolname LSN-DSLITE-POOL-1
30
31 Done
32
33 bind lsn group LSN-DSLITE-GROUP-1 -httpdrlogprofilename HTTP-HEADER-
    LOG-1
34
35 Done
```

IPFIX Logging

The NetScaler appliance supports sending information about LSN events in Internet Protocol Flow Information Export (IPFIX) format to the configured set of IPFIX collector(s). The appliance uses the existing AppFlow feature to send LSN events in IPFIX format to the IPFIX collectors.

IPFIX based logging is available for the following DS_Lite related events:

- Creation or deletion of an LSN session.
- Creation or deletion of an LSN mapping entry.
- Allocation or de-allocation of port blocks in the context of deterministic NAT.
- Allocation or de-allocation of port blocks in the context of dynamic NAT.
- Whenever subscriber session quota is exceeded.

Points to Consider before you Configure IPFIX logging

Before you start configuring IPsec ALG, consider the following points:

- You must configure the AppFlow feature and IPFIX collector(s) on the NetScaler appliance. For instructions, see [Configuring the AppFlow feature](#).

Configuration Steps

Perform the following tasks for logging LSN information in IPFIX format:

- **Enable LSN logging in the AppFlow configuration.** Enable the LSN logging parameter as part of AppFlow configuration.
- **Create an LSN log profile.** An LSN log profile includes the IPFIX parameter that enables or disables the log information in IPFIX format.
- **Bind the LSN log profile to an LSN group of an LSN configuration.** Bind the LSN log profile to one or multiple LSN group(s). Events related to the bound LSN group will be logged in IPFIX format.

To enable LSN logging in the AppFlow configuration by using the CLI At the command prompt, type:

```
1 set appflow param -lsnLogging (ENABLED | DISABLED )
2
3 show appflow param
```

To create an LSN log profile by using the CLIAt the command prompt, type At the command prompt, type:

```
1 set lsn logprofile <logProfileName> -logipfix ( ENABLED | DISABLED )
2
3 show lsn logprofile
```

To bind the LSN log profile to an LSN group of an LSN configuration by using the CLI At the command prompt, type:

```
1 bind lsn group <groupname> -logProfileName <lsnlogprofilename>
2
3 show lsn group
```

To create an LSN log profile by using the GUI Navigate to **System > Large Scale NAT > Profiles**, click **Log** tab, and then add a log profile.

To bind the LSN log profile to an LSN group of an LSN configuration by using the GUI

1. Navigate to **System > Large Scale NAT > LSN Group**, open the **LSN** group.
2. In **Advanced Settings**, click **+ Log Profile** to bind the created Log profile to the LSN group.

Port Control Protocol for DS-Lite

May 2, 2023

NetScaler appliances now support Port Control Protocol (PCP) for large scale NAT (LSN). Many of an ISP's subscriber applications must be accessible from Internet (for example, Internet of Things (IOT) devices, such as an IP camera that provides surveillance over the Internet). One way to meet this requirement is to create static large scale NAT (LSN) maps. But for a very large number of subscribers, creating static LSN NAT maps is not a feasible solution.

Port Control Protocol (PCP) enables a subscriber to request specific LSN NAT mappings for itself and/or for other 3rd party devices. The large scale NAT device creates an LSN map and sends it to the subscriber. The subscriber sends the remote devices on the Internet the NAT IP address:NAT port at which they can connect to the subscriber.

Applications usually send frequent keep-alive messages to the large scale NAT device so that their LSN mappings do not time out. PCP helps reduce the frequency of such keep-alive messages by enabling the applications to learn the timeout settings of the LSN mappings. This helps reduce bandwidth consumption on the ISP's access network and battery consumption on mobile devices.

PCP is a client-server model and runs over the UDP transport protocol. A NetScaler appliance implements the PCP server component and is compliant with RFC 6887.

Configuration Steps

Perform the following tasks for configuring PCP:

- (Optional) Create a PCP profile. A PCP profile includes settings for PCP related parameters (for example, to listen for mapping and peer PCP requests). A PCP profile can be bound to a PCP server. A PCP profile bound to a PCP server applies all its settings to the PCP server. A PCP profile can be bound to multiple PCP servers. By default, one PCP profile with default parameters settings is bound to all PCP servers. A PCP profile that you bind to a PCP server overrides the default PCP profile settings for that server. A default PCP profile has the following parameter settings:
 - Mapping: Enabled
 - Peer: Enabled

- Minimum map life: 120 seconds
 - Maximum max life: 86400 seconds
 - Announce count: 10
 - Third Party: Disabled
- Create a PCP server and bind a PCP profile to it. Create a PCP server on the NetScaler appliance to listen for PCP related requests and messages from the subscribers. A Subnet IP (SNIP) address must be assigned to a PCP server to access it. By default, a PCP server listens on port 5351.
 - Bind the PCP server to an LSN group of an LSN configuration. Bind the created PCP server to an LSN group of an LSN configuration by setting the PCP Server parameter to specify the created PCP server. The created PCP server can be accessed only by the subscribers of this LSN group.
Note: A PCP server for a large scale NAT configuration does not serve requests from subscribers that are identified from ACL rules.

To create a PCP profile by using the CLI

At the command prompt, type:

```
1 add pcp profile <name> [-mapping ( ENABLED | DISABLED )] [-peer (
  ENABLED | DISABLED )] [-minMapLife <secs>] [-maxMapLife <secs>] [-
  announceMultiCount <positive_integer>][-thirdParty ( ENABLED |
  DISABLED )]
2
3 show pcp profile <name>
```

To create a PCP server by using the CLI

At the command prompt, type:

```
1 add pcp server <name> <IPAddress> [-port <portNum|*>] [-pcpProfile <
  string>]
2
3 show pcp server <name>
```

Sample Configuration for DS-LITE

In the following sample configuration, PCP server PCP-SERVER-1, with PCP settings from PCP-DSLITE-PROFILE-1, is bound to LSN group LSN-DSLITE-GROUP-1. PCP-SERVER-9 serves PCP requests from IPv4 subscribers behind B4 devices from network 2001:DB8::3:0/100.

Sample configuration:

```
1 add pcp profile PCP-DSLITE-PROFILE-1 -minMapLife 300
2 Done
```

```
3 add pcp server PCP-DSLITE-SERVER-1 192.0.3.10 -pcpProfile PCP-DSLITE-
  PROFILE-1
4 Done
5 add lsn client LSN-DSLITE-CLIENT-1
6 Done
7 bind lsn client LSN-DSLITE-CLIENT-1 -network6 2001:DB8::3:0/100
8 Done
9 add lsn pool LSN-DSLITE-POOL-1
10 Done
11 bind lsn pool LSN-DSLITE-POOL-1 203.0.113.61 - 203.0.113.70
12 Done
13 add lsn ip6profile LSN-DSLITE-PROFILE-1 -type DS-Lite -network6 2001:
  DB8::5:6
14 Done
15 add lsn group LSN-DSLITE-PROFILE-1 -clientname LSN-NAT64-CLIENT-1 -
  ip6profile LSN-NAT64-PROFILE-1
16 Done
17 bind lsn group LSN-DSLITE-GROUP-1 -poolname LSN-NAT64-POOL-1
18 Done
19 bind lsn group LSN-DSLITE-GROUP-1 -poolname PCP-NAT64-SERVER-1
20 Done
```

Large Scale NAT64

August 11, 2023

Note:

Large Scale NAT64 (LSN64) feature is deprecated from NetScaler 14.1 release onwards.


Deprecated features are not removed immediately. The NetScaler appliance continues to support the deprecated feature until it is removed in a future release.

Because of the imminent exhaustion of IPv4 addresses, ISPs have started transitioning to IPv6 infrastructure. But during the transition, ISPs must continue to support IPv4 along with IPv6, because most of the public Internet still uses IPv4. Large scale NAT64 is an IPv6 transition solution for ISPs with IPv6 infrastructure to connect their IPv6-only subscribers to the IPv4 Internet. DNS64 is a solution for enabling discovery of IPv4-only domains by IPv6-only clients. DNS64 is used with large scale NAT64 to enable seamless communication between IPv6-only clients and IPv4-only servers.

A NetScaler appliance implements large scale NAT64 and DNS64 and is compliant with RFCs 6145, 6146, 6147, 6052, 3022, 2373, 2765, and 2464.

Architecture

The NAT64 architecture of an ISP using a NetScaler appliance consists of IPv6 subscribers accessing the IPv4 Internet through a NetScaler appliance deployed in the ISP's core network. IPv6 subscribers are connected to the ISP core network through the ISP's IPv6-only access network.

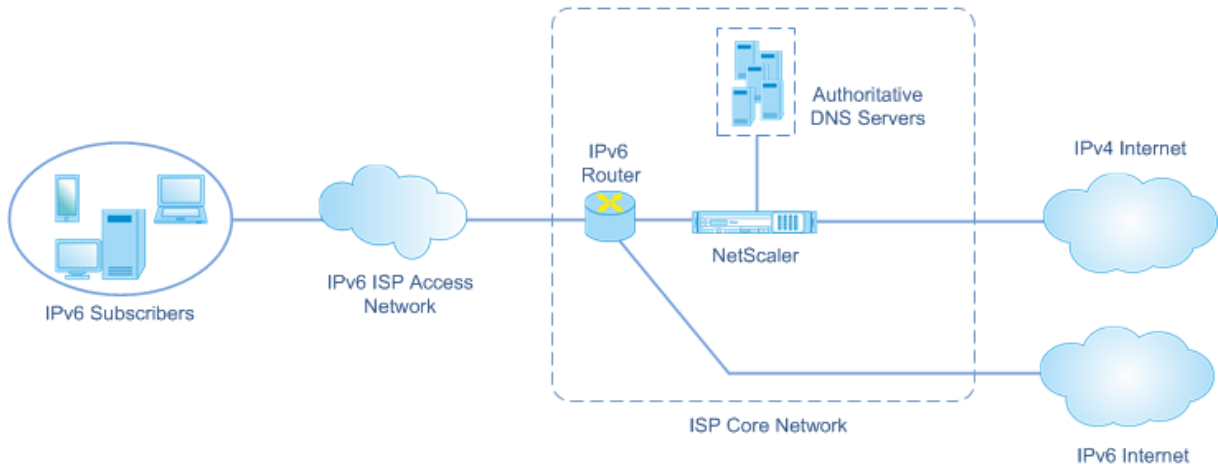

The large scale NAT64 functionality of a NetScaler appliance enables communication between IPv6 clients and IPv4 servers through IPv6-to-IPv4 packet translation, and vice versa, while maintaining session information on the NetScaler appliance. NetScaler DNS64 functionality represents IPv4-only domains to IPv6-subscribers by synthesizing DNS AAAA records for IPv4-only domains and sending them to the subscribers.

Large scale NAT64 has two main components: NAT64 prefix and NAT IPv4 pool. DNS64 has one main component, DNS64 prefix, which has the same value as NAT64 prefix.

Upon receiving an AAAA request from an IPv6-only subscriber for a domain name that is hosted on an IPv4-only web server on the Internet, the NetScaler DNS64 functionality synthesizes an AAAA record for the domain name and sends it to the subscriber. The AAAA record is synthesized by concatenating the DNS64 prefix (which is set to the NAT64 prefix) and the actual IPv4 address of the domain name.

The subscriber now has an IPv6 destination address that corresponds to the desired domain name. The subscriber sends the request to the synthesized IPv6 address. Upon receiving the IPv6 request, the large scale NetScaler NAT64 functionality translates the IPv6 request packet to an IPv4 request packet. Large scale NAT64 sets the IPv4 request's destination address to the IPv4 address, which is extracted from the IPv6 request's destination address by stripping the NAT64 prefix from the IPv6 address. The destination port is retained from the IPv6 request. Large Scale NAT64 also sets the source IP address:source port of the IPv4 packet to the NAT IP address:NAT port selected from the configured NAT pool.

The appliance maintains a record of all active sessions that use the large scale NAT64 functionality. These sessions are called large scale NAT64 sessions. The appliance also maintains the mappings between subscriber IPv6 address and port, and NAT IPv4 address and port, for each large scale NAT64

session. These mappings are called large scale NAT64 mappings. From large scale NAT64 session entries and large scale NAT64 mapping entries, the NetScaler appliance recognizes a response packet (received from the Internet) as belonging to a particular NAT64 session.


When the appliance receives an IPv4 response packet belonging to a particular NAT64 session, it uses the information stored in the NAT64 session to translate the IPv4 packet into an IPv6 packet, and then sends the IPv6 response packet to the subscriber.

Example: Traffic Flow of NAT64 and DNS64 Deployment

Consider an example of a large scale NAT64 and DNS64 deployment consisting of NetScaler appliance NS-1 and two local DNS servers, DNS-1 and DNS-2, in an ISP’s core network, and IPv6 subscriber SUB-1. SUB-1 is connected to NS-1 through the ISP’s IPv6 access network. NS-1 includes large scale NAT64 and DNS64 configurations for enabling the communication between IPv6 subscriber SUB-1 and IPv4 hosts (internal and external).

Large scale NAT64 configuration includes a NAT64 prefix (2001:DB8:300::/96) and NAT IPv4 pool for translation of IPv6 requests to IPv4 requests and IPv4 responses to IPv6 responses.

DNS64 configuration includes a DNS load balancing virtual server LBVS-DNS64-1 (2001:DB8:9999::99) and a DNS64 prefix (2001:DB8:300::/96). LBVS-DNS64-1 represents local DNS server DNS-1 and DNS-2 to ISP’s subscribers. The DNS64 prefix, which has the same value as the NAT64 prefix, is used for synthesizing DNS AAAA records from DNS A records received from DNS servers DNS-1 and DNS-2. NS-1 responds with a synthesized AAAA record to SUB-1 for a DNS request to resolve an IPv4 host.

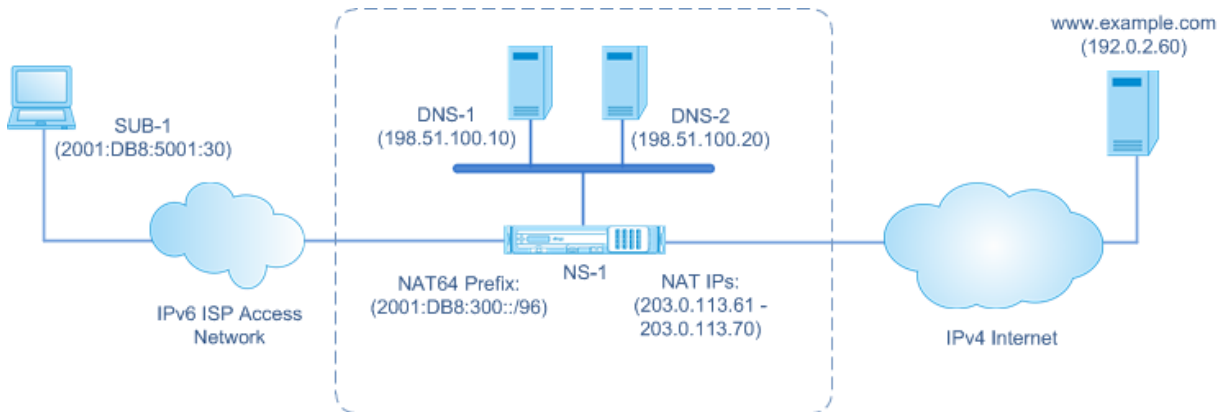

DNS64 Traffic Flow

Traffic flows between IPv6 subscriber SUB-1 and site www.example.com, which resides on an IPv4-only web server on the Internet, as follows:

1. IPv6 subscriber SUB-1 sends a DNS AAAA request for www.example.com to its designated DNS server (2001:DB8:9999::99).

2. DNS load balancing virtual server LBVS-DNS64-1 (2001:DB8:9999::99) on NetScaler appliance NS1 receives the AAAA request. LBVS-DNS64-1's load balancing algorithm selects DNS server DNS-1 and forwards the AAAA request to it.
3. DNS-1 returns an empty record or an error message, because there is no AAAA record available for www.example.com.
4. Because the DNS64 option is enabled on LBVS-DNS64-1 and the AAAA request from CL1 matches the condition specified in DNS64-Policy-1, NS1 sends a DNS A request to DNS-1 for the IPv4 address of www.example.com.
5. DNS-1 responds with the A record of 192.0.2.60 for www.example.com.
6. DNS64 module on NS1 synthesizes an AAAA record for www.example.com by concatenating the DNS64 Prefix (2001:DB8:300::/96) associated with LBVS-DNS64-1, and IPv4 address (192.0.2.60) for www.example.com = 2001:DB8:300::192.0.2.60
7. NS1 sends the synthesized AAAA record to IPv6 client CL1. NS1 also caches the A record into its memory. NS1 uses the cached A record to synthesize AAAA records for subsequent AAAA requests.

NAT64 Traffic Flow

1. IPv6 subscriber SUB-1 sends a request to 2001:DB8:5001:30 www.example.com. The IPv6 packet has:
 - Source IP address = 2001:DB8:5001:30
 - Source port = 2552
 - Destination IP address = 2001:DB8:300::192.0.2.60
 - Destination port = 80
2. IPv6 subscriber SUB-1 sends a request to 2001:DB8:5001:30 www.example.com. The IPv6 packet has:
 - Source IP address = 2001:DB8:5001:30
 - Source port = 2552
 - Destination IP address = 2001:DB8:300::192.0.2.60
 - Destination port = 80
3. When NS-1 receives the IPv6 packet, the large scale NAT64 module creates a translated IPv4 request packet with:
 - Source IP address = One of the IPv4 addresses available in the configured NAT pool (203.0.113.61)
 - Source port = One of ports available with the allocated NAT IPv4 address (3002)
 - Destination IP address = IPv4 address extracted from the IPv6 request's destination address by stripping the NAT64 prefix (2001:DB8:300::/96) from the IPv6 address (192.0.2.60)

- Destination port = IPv6 request's destination port (80)
4. The large scale NAT64 module also creates mapping and session entries for this large scale NAT64 flow. The session and mapping entries include the following information:
 - Source IP address of the IPv6 packet = 2001:DB8:5001:30
 - Source port of the IPv6 packet = 2552
 - NAT IP address = 203.0.113.61
 - NAT port = 3002
 - NS-1 sends the resulting IPv4 packet to its destination on the Internet.
 5. Upon receiving the request packet, the server for www.example.com processes the packet and sends a response packet to NS-1. The IPv4 response packet has:
 - Source IP address = 192.0.2.60
 - Source port = 80
 - Destination IP address = 203.0.113.61
 - Destination port = 3002
 6. Upon receiving the IPv4 response packet, NS-1 examines the large scale NAT64 mapping and session entries and finds that the IPv4 response packet belongs to a large scale NAT64 session. The large scale NAT64 module creates a translated IPv6 response packet:
 - Source IP address = 2001:DB8:300::192.0.2.60
 - Source port = 80
 - Destination IP address = 2001:DB8:5001:30
 - Destination port = 2552
 7. NS-1 sends the translated IPv6 response to client SUB-1.

Large Scale NAT64 features Supported on NetScaler appliances

Large scale NAT64 on a NetScaler appliance supports the standard LSN feature set. For more information on these LSN features, see [LSN Architecture](#).

Following are some of the large scale NAT64 features supported on NetScaler appliances:

- ALGs. Support of application Layer Gateway (ALG) for SIP, RTSP, FTP, ICMP, and TFTP protocols.
- Deterministic/Fixed NAT. Support for pre-allocation of blocks of ports to subscribers to minimize logging.
- Mapping. Support of Endpoint-independent mapping (EIM), Address-dependent mapping (ADM), and Address-Port dependent mapping (APDM).
- Filtering. Support of Endpoint-Independent Filtering (EIF), Address-Dependent Filtering (ADF), and Address-Port-Dependent Filtering (APDF).

- Quotas. Configurable limits on number of ports, sessions per subscriber, and sessions per LSN group.
- Static Mapping. Support for manually defining a large scale NAT64 mapping.
- Hairpin Flow. Support for communication between subscribers or internal hosts using NAT IP addresses.
- 464XLAT connections. Support for communication between IPv4-only applications on IPv6 subscriber hosts and IPv4 hosts on the Internet through IPv6 network.
- Variable length NAT64 and DNS64 prefixes. The NetScaler appliance supports defining NAT64 and DNS64 prefixes of lengths of 32, 40, 48, 56, 64, and 96.
- Multiple NAT64 and DNS64 prefix. The NetScaler appliance supports multiple NAT64 and DNS64 prefixes.
- LSN Clients. Support for specifying or identifying subscribers for large scale NAT64 by using IPv6 prefixes and extended ACL6 rules.
- Logging. Support for logging NAT64 sessions for law enforcement. In addition, the following are also supported for logging.
 - **Reliable SYSLOG.** Support for sending SYSLOG messages over TCP to external log servers for a more reliable transport mechanism.
 - **Load balancing of log servers.** Support for load balancing of external log servers for preventing storage of redundant log messages.
 - **Minimal Logging.** Deterministic LSN configurations or Dynamic LSN configurations with port block significantly reduce the large scale NAT64 log volume.
 - **Logging MSISDN information.** Support for including subscribers' MSISDN information in large scale NAT64 logs to identify and track subscriber activity over the Internet.

Points to Consider for Configuring Large Scale NAT64

May 2, 2023

Before you start configuring large scale NAT64 and DNS64, consider these points:

1. Make sure you understand the different components of large scale NAT64, described in RFCs.
2. The NetScaler appliance supports only the following ALGs for large Scale NAT64:
 - FTP
 - TFTP
 - ICMP
 - SIP
 - RTSP

3. In a high availability setup of two NetScaler appliances, large NAT64 session synchronization (connection mirroring) is not supported.

Configuring DNS64

May 2, 2023

Creating the required entities for stateful NAT64 configuration on the NetScaler appliance involves the following procedures:

- Add DNS services. DNS services are logical representations of DNS servers for which the NetScaler appliance acts as a DNS proxy server. For more information on setting optional parameters of a service, see [Load Balancing](#).
- Add DNS64 action and DNS64 policy and then bind the DNS64 action to the DNS64 policy. A DNS64 policy specifies conditions to be matched against traffic for DNS64 processing according to the settings in the associated DNS64 action. The DNS64 action specifies the mandatory DNS64 prefix and the optional exclude-rule and mapped-rule settings.
- Create a DNS load balancing virtual server and bind the DNS services and the DNS64 policy to it. The DNS load balancing virtual server acts as a DNS proxy server for DNS servers represented by the bound DNS services. Traffic arriving at the virtual server is matched against the bound DNS64 policy for DNS64 processing. For more information on setting optional parameters of a load balancing virtual server, see [Load Balancing](#).

Note

The command line interface has separate commands for these two tasks, but the GUI combines them in a single dialog box.

- Enable caching of DNS records. Enable the global parameter for the NetScaler appliance to cache DNS records, which are obtained through DNS proxy operations. For more information on enabling caching of DNS records, see [Enabling Caching of DNS Records](#).

To create a service of type DNS by using the command line interface

At the command prompt, type:

```
1 add service <name> <IP> <serviceType> <port> ...
```

To create a DNS64 action by using the command line interface

At the command prompt, type:

```
1 add dns action64 <actionName> -Prefix <ipv6_addr|*> [-mappedRule <
  expression>] [-excludeRule <expression>]
```

To create a DNS64 policy by using the command line interface

At the command prompt, type:

```
1 add dns policy64 <name> -rule <expression> -action <string>
```

To create a DNS load balancing virtual server by using the command line interface

At the command prompt, type:

```
1 add lb vserver <name> DNS <IPAddress> <port> -dns64 (ENABLED | DISABLED
  ) [-bypassAAAA ( YES | NO)] ...
```

To bind the DNS services and the DNS64 policy to the DNS load balancing virtual server by using the command line interface

At the command prompt, type:

```
1 bind lb vserver <name> <serviceName> ...
2
3 bind lb vserver <name> -policyName <string> -priority <positive_integer>
  > ...
```

Sample configuration:

```
1 add service SVC-DNS-1 203.0.113.50 DNS 53
2 Done
3 add service SVC-DNS-2 203.0.113.60 DNS 53
4 Done
5 add dns Action64 DNS64-Action-1 -Prefix 2001:DB8:300::/96
6 Done
7 add dns Policy64 DNS64-Policy-1 -rule "CLIENT.IPv6.SRC.IN_SUBNET(2001:
  DB8:5001::/64)" -action DNS64-Action-1
8 Done
9 add lb vserver LBVS-DNS64-1 DNS 2001:DB8:9999::99 53 -dns64 ENABLED
10 Done
11 bind lb vserver LBVS-DNS64-1 SVC-DNS-1
12 Done
13 bind lb vserver LBVS-DNS64-1 SVC-DNS-2
14 Done
15 bind lb vserver LBVS-DNS64-1 -policyname DNS64-Policy-1 -priority 2
16 Done
```

Configuring Large Scaler NAT64

May 2, 2023

A large scale NAT64 configuration on a NetScaler appliance uses the LSN commands sets. In a large scale NAT64 configuration, the LSN client entity specifies the IPv6 address or IPv6 network address, or ACL6 rules, for identifying IPv6 subscribers. A NAT64 configuration also includes an IPv6 profile, which specifies a NAT64 prefix.

Configuring NAT64 on a NetScaler appliance consists of the following tasks:

- Set the global LSN parameters. Global parameters include the amount of NetScaler memory reserved for the LSN feature and synchronization of LSN sessions in a high availability setup.
- Create an LSN client entity for identifying traffic from IPv6 subscribers. The LSN client entity refers to a set of IPv6 subscribers. The client entity includes IPv6 addresses or IPv6 network prefixes, or ACL6 rules, for identifying the traffic from these subscribers. An LSN client can be bound to only one LSN group. The command line interface has two commands for creating an LSN client entity and binding a subscriber to the LSN client entity. The GUI combines these two operations on a single screen.
- Create an LSN pool and bind NAT IP addresses to it. An LSN pool defines a pool of NAT IP addresses to be used by the NetScaler appliance to perform large scale NAT64. The command line interface has two commands for creating an LSN pool and binding NAT IP addresses to the LSN pool. The GUI combines these two operations on a single screen.
- Create an LSN IP6 profile. An LSN IP6 profile defines the NAT64 prefix for a large scale NAT64 configuration.
- (Optional) Create an LSN Transport Profile for a specified protocol. An LSN transport profile defines various timeouts and limits, such as maximum large scale NAT64 sessions and maximum ports usage that a subscriber can have for a given protocol. You bind an LSN transport profile for each protocol (TCP, UDP, and ICMP) to an LSN group. A profile can be bound to multiple LSN groups. A profile bound to an LSN group applies to all subscribers of an LSN client bound to the same group. By default, one LSN transport profile with default settings for TCP, UDP, and ICMP protocols is bound to an LSN group during its creation. This profile is called the default transport profile. An LSN transport profile that you bind to an LSN group overrides the default LSN transport profile for that protocol.
- (Optional) Create an LSN Application Profile for a specified protocol and bind a set of destination ports to it. An LSN application profile defines the LSN mapping and LSN filtering controls of a group for a given protocol and for a set of destination ports. For a set of destination ports, you bind an LSN profile for each protocol (TCP, UDP, and ICMP) to an LSN group. A profile can be bound to multiple LSN groups. An LSN application profile bound to an LSN group applies to all subscribers of an LSN client bound to the same group. By default, one LSN application profile

with default settings for TCP, UDP, and ICMP protocols for all destination ports is bound to an LSN group during its creation. This profile is called a default application profile. When you bind an LSN application profile, with a specified set of destination ports, to an LSN group, the bound profile overrides the default LSN application profile for that protocol at that set of destination ports. The command line interface has two commands for creating an LSN application profile and binding a set of destination ports to the LSN application profile. The GUI combines these two operations on a single screen.

- Create an LSN Group and bind LSN pools, LSN IPv6 profile, (optional) LSN transport profiles, and (optional) LSN application profiles to the LSN group. An LSN group is an entity consisting of an LSN client, an LSN IPv6 profile, LSN pool(s), LSN transport profile(s), and LSN application profiles(s). A group is assigned parameters, such as port block size and logging of LSN sessions. The parameter settings apply to all the subscribers of an LSN client bound to the LSN group. Only one LSN IPv6 profile can be bound to an LSN group, and an LSN IPv6 profile bound to an LSN group cannot be bound to other LSN groups. Only LSN Pools and LSN groups with the same NAT type settings can be bound together. Multiples LSN pools can be bound to an LSN group. Only one LSN client entity can be bound to an LSN group, and an LSN client entity bound to an LSN group cannot be bound to other LSN groups. The command line interface has two commands for creating an LSN group and binding LSN pools, LSN transport profiles, and LSN application profiles to the LSN group. The GUI combines these two operations in a single screen.

Configuration Using the Command Line

You can create different configurations using the command line interface. Follow the steps given below.

To create an LSN client by using the command line interface

At the command prompt, type:

```
1 add lsn client <clientname>
2
3 show lsn client
```

To bind an IPv6 network or an ACL6 rule to an LSN client by using the command line interface

At the command prompt, type:

```
1 bind lsn client <clientname> (-network6 <ipv6_addr|*>| -acl6name <
  string>)
2
3 show lsn client
```

To create an LAN pool by using the command line interface

At the command prompt, type:

```
1 add lsn pool <poolname>
2
3 show lsn pool <poolname>
```

To bind NAT IP addresses to an LSN pool by using the command line interface

At the command prompt, type:

```
1 bind lsn pool <poolname> <lsnip>
2
3 show lsn pool
```

Note

For removing NAT IP (LSN IP addresses) addresses from an LSN pool, use the unbind lsn pool command.

To configure an LSN IPv6 profile by using the command line interface

At the command prompt, type:

```
1 add lsn ip6profile <name> -type NAT64 -natprefix <ipv6_addr|*>
2
3 show lsn ip6profile
```

To create an LSN transport profile by using the command line interface

At the command prompt, type:

```
1 add lsn transportprofile <transportprofilename> <transportprotocol> [-
  sessiontimeout <secs>] [-finrsttimeout <secs>] [-portquota <
  positive_integer>] [-sessionquota <positive_integer>] [-
  portpreserveparity ( ENABLED | DISABLED )] [-portpreserverange (
  ENABLED | DISABLED )] [-syncheck ( ENABLED | DISABLED )]
2
3 show lsn transportprofile
```

To create an LSN application profile by using the command line interface

At the command prompt, type:

```

1 add lsn appsprofile <appsprofilename> <transportprotocol> [-ippooling (
  PAIRED | RANDOM )] [-mapping <mapping>] [-filtering <filtering>][-
  tcpproxy ( ENABLED | DISABLED )]
2
3 show lsn appsprofile

```

To bind an application protocol port range to an LSN application profile by using the command line interface

At the command prompt, type:

```

1 bind lsn appsprofile <appsprofilename> <lsnport>
2
3 show lsn appsprofile

```

To create an LSN group by using the command line interface

At the command prompt, type:

```

1 add lsn group <groupname> -clientname <string> [-nattype ( DYNAMIC |
  DETERMINISTIC )] [-portblocksize <positive_integer>] [-logging(
  ENABLED | DISABLED )] [-sessionLogging ( ENABLED | DISABLED )][-
  sessionSync ( ENABLED | DISABLED )] [-snmptraplimit<positive_integer
  >] [-ftp ( ENABLED | DISABLED )] [-sipalg ( ENABLED | DISABLED )] [-
  rtspalg ( ENABLED |DISABLED )] [-ip6profile <string>]
2
3 show lsn group

```

To bind LSN protocol profiles and LSN pools to an LSN group by using the command line interface

At the command prompt, type:

```

1 bind lsn group <groupname> (-poolname <string> | -transportprofilename
  <string> | -httphdrlogprofilename <string> | -appsprofilename <
  string> | -sipalgprofilename <string> | rtspalgprofilename <string>)
2
3 show lsn group

```

Sample Large Scale NAT64 Configurations

Here are some sample configurations of large scale NAT64:

Simple large scale NAT64 configuration with default settings:

```
1 add lsn client LSN-NAT64-CLIENT-1
2
3 bind lsn client LSN-NAT64-CLIENT-1 -network6 2001:DB8:5001::/96
4
5 add lsn pool LSN-NAT64-POOL-1
6
7 bind lsn pool LSN-NAT64-POOL-1 203.0.113.61 - 203.0.113.70
8
9 add lsn ip6profile LSN-NAT64-PROFILE-1 -type NAT64 -natprefix 2001:DB8
:300::/96
10
11 add lsn group LSN-NAT64-GROUP-1 -clientname LSN-NAT64-CLIENT-1 -
ip6profile LSN-NAT64-PROFILE-1
12
13 bind lsn group LSN-NAT64-GROUP-1 -poolname LSN-NAT64-POOL-1
```

Simple large scale NAT64 configuration with an extended ACL6 rule for identifying subscribers:

```
1 add ns acl6 LSN-NAT64-ACL-2 ALLOW -srcIPv6 = 2001:DB8:5002::20 - 2001:
DB8:5002::200
2
3 apply acl6s
4
5 add lsn client LSN-NAT64-CLIENT-2
6
7 bind lsn client LSN-NAT64-CLIENT-2 -acl6name LSN-NAT64-ACL-2
8
9 add lsn pool LSN-NAT64-POOL-2
10
11 bind lsn pool LSN-NAT64-POOL-2 203.0.113.5-203.0.113.10
12
13 add lsn ip6profile LSN-NAT64-PROFILE-2 -type NAT64 -natprefix 2001:DB8
:302::/96
14
15 add lsn group LSN-NAT64-GROUP-2 -clientname LSN-NAT64-CLIENT-2 -
ip6profile LSN-NAT64-PROFILE-2
16
17 bind lsn group LSN-NAT64-GROUP-2 -poolname LSN-NAT64-POOL-2
```

Large scale NAT64 configuration with deterministic NAT resource allocation:

```
1 add lsn client LSN-NAT64-CLIENT-7
2
3 bind lsn client LSN-NAT64-CLIENT-7 -network6 2001:DB8:1002::7/128
4
5 add lsn pool LSN-NAT64-POOL-7 -nattype DETERMINISTIC
6
7 bind lsn pool LSN-NAT64-POOL-7 203.0.113.24-203.0.113.27
8
9 add lsn ip6profile LSN-NAT64-PROFILE-7 -type NAT64 -natprefix 2001:DB8
:307::/96
```

```
10
11 add lsn group LSN-NAT64-GROUP-7 -clientname LSN-NAT64-CLIENT-7 -
    ip6profile LSN-NAT64-PROFILE-7 -nattype DETERMINISTIC -portblocksize
    256
12
13 bind lsn group LSN-NAT64-GROUP-7 -poolname LSN-POOL-7
```

Configuring Application Layer Gateways for Large Scale NAT64

May 2, 2023

For some Application layer protocols, the IP addresses and protocol port numbers are also communicated in the packet payload. Application Layer Gateway for a protocol parses the packet's payload and does necessary changes to ensure that the protocol continues to work over large scale NAT64.

The NetScaler appliance supports ALG for the following protocols for large scale NAT64:

- FTP
- ICMP
- TFTP
- SIP
- RTSP

Application Layer Gateway for FTP, ICMP, and TFTP Protocols

September 21, 2020

You can enable or disable ALG for the FTP protocol for an large scale NAT64 configuration by enabling or disabling the FTP ALG option of the LSN group of the configuration.

ALG for the ICMP protocol is enabled by default, and there is no provision to disable it.

ALG for the TFTP protocol is disabled by default. TFTP ALG is enabled automatically for an large scale NAT64 configuration when you bind a UDP LSN application profile, with endpoint-independent-mapping, endpoint-independent filtering, and destination port as 69 (well-known port for TFTP), to the LSN group.

Application Layer Gateway for SIP Protocol

May 2, 2023

Using Large Scale NAT64 with Session Initiation Protocol (SIP) is complicated, because SIP messages contain IP addresses in the SIP headers as well as in the SIP body. When LSN is used with SIP, the SIP headers contain information about the caller and the receiver, and the device translates this information to hide it from the outside network. The SIP body contains the Session Description Protocol (SDP) information, which includes IP addresses and port numbers for transmission of the media. SIP ALG for large scale NAT64 is compliant with RFC 3261, RFC 3581, RFC 4566, and RFC 4475.

Note

SIP ALG is supported in a NetScaler standalone appliance, in a NetScaler high availability setup, as well as in a NetScaler cluster setup.

Limitations of SIP ALG

SIP ALG for large scale NAT64 has the following limitations:

- Only SDP payload is supported.
- The following are not supported:
 - Multicast IP addresses
 - Encrypted SDP
 - SIP TLS
 - FQDN translation
 - SIP layer authentication
 - Traffic Domains
 - Admin partitions
 - Multipart body
 - Line folding

Configuring SIP ALG

You need to configure the SIP ALG as part of the LSN configuration. For instructions on configuring LSN, see Configuration Large Scale NAT64. While configuring LSN, make sure that you:

- Set the following parameters while adding an LSN application profile:
 - IP Pooling = PAIRED
 - Address and Port Mapping = ENDPOINT-INDEPENDENT

- Filtering = ENDPOINT-INDEPENDENT
- Create a SIP ALG profile and make sure that you define either the source port range or destination port range. Bind the SIP ALG profile to the LSN group.
- Enable SIP ALG in the LSN group.

To enable SIP ALG for an LSN configuration by using the CLI

At the command prompt, type:

```
1 add lsn group <groupname> -clientname <string> [-sipalg ( ENABLED |
  DISABLED )]
2
3 show lsn group <groupname>
```

To enable SIP ALG for an LSN configuration by using the CLI

At the command prompt, type:

```
1 add lsn sipalgprofile <sipalgprofilename>[-dataSessionIdleTimeout <
  positive_integer>][-sipSessionTimeout <positive_integer>] [-
  registrationTimeout <positive_integer>] [-sipsrcportrange <port[-
  port]>] [-sipdstportrange <port[-port]>] [-openRegisterPinhole (
  ENABLED | DISABLED )] [-openContactPinhole ( ENABLED | DISABLED )]
  [-openViaPinhole ( ENABLED | DISABLED )] [-openRecordRoutePinhole (
  ENABLED | DISABLED )]-sipTransportProtocol ( TCP | UDP ) [-
  openRoutePinhole ( ENABLED | DISABLED )] [-rport ( ENABLED |
  DISABLED )]
2
3 show lsn sipalgprofile <sipalgprofilename>
```

Sample Configuration

The following sample large scale NAT64 configuration, SIP ALG is enabled for TCP traffic from subscriber devices in the network 2001:DB8:1002::/96.

```
1 add lsn client LSN-NAT64-CLIENT-9
2
3 Done
4 bind lsn client LSN-NAT64-CLIENT-9 -network6 2001:DB8:1002::/96
5
6 Done
7 add lsn pool LSN-NAT64-POOL-9
8
9 Done
10 bind lsn pool LSN-NAT64-POOL-9 203.0.113.90
11
```

```
12 Done
13 add lsn ip6profile LSN-NAT64-PROFILE-9 -type NAT64 -natprefix 2001:DB8
    :309::/96
14
15 Done
16 add lsn appsprofile LSN-NAT64-APPS-PROFILE-9 TCP -ippooling PAIRED -
    mapping ENDPOINT-INDEPENDENT -filtering ENDPOINT-INDEPENDENT
17
18 Done
19 add lsn sipalgprofile SIPALGPROFILE-9 -sipdstportrange 5060 -
    sipTransportProtocol TCP
20
21 Done
22 add lsn group LSN-NAT64-GROUP-9 -clientnameLSN-NAT64-CLIENT-9 -
    ip6profile LSN-NAT64-PROFILE-7 -sipalg ENABLED
23
24 Done
25 bind lsn group LSN-NAT64-GROUP-9 -poolnameLSN-NAT64-POOL-9
26 Done
27 bind lsn group LSN-NAT64-GROUP-9 -appsprofilename LSN-NAT64-APPS-
    PROFILE-9
28 Done
29 bind lsn group LSN-NAT64-GROUP-9 -sipalgprofilename SIPALGPROFILE-9
30 Done
```

Application Layer Gateway for RTSP Protocol

May 2, 2023

Real Time Streaming Protocol (RTSP) is an application-level protocol for the transfer of real-time media data. Used for establishing and controlling media sessions between end points, RTSP is a control channel protocol between the media client and the media server. The typical communication is between a client and a streaming media server.

Streaming media from a private network to a public network requires translating IP addresses and port numbers over the network. NetScaler functionality includes an Application Layer Gateway (ALG) for RTSP, which can be used with Large Scale NAT (LSN) to parse the media stream and make any necessary changes to ensure that the protocol continues to work over the network.

How IP address translation is performed depends on the type and direction of the message, and the type of media supported by the client-server deployment. Messages are translated as follows:

- Outbound request—Private IP address to NetScaler owned public IP address called LSN IP address.
- Inbound response—LSN IP address to private IP address.
- Inbound request—No translation.

- Outbound response—Private IP address to LSN pool IP address.

Note

RTSP ALG is supported in a NetScaler standalone appliance, in a NetScaler high availability setup, as well as in a NetScaler cluster setup.

Limitations of RTSP ALG

The RTSP ALG does not support the following:

- Multicast RTSP sessions
- RTSP session over UDP
- Admin partitions
- RTSP Authentication
- HTTP tunneling

Configuring RTSP ALG

Configure RTSP ALG as part of the LSN configuration. For instructions on configuring LSN, see Configuring Large Scale NAT64. While configuring, make sure that you:

- Set the following parameters while adding an LSN application profile:
 - IP Pooling = PAIRED
 - Address and Port Mapping = ENDPOINT-INDEPENDENT
 - Filtering = ENDPOINT-INDEPENDENT
- Enable RTSP ALG in the LSN group
- Create a RTSP ALG profile and bind the RTSP ALG profile to the LSN group

To enable RTSP ALG for an LSN configuration by using the CLI

At the command prompt, type:

```
1 add lsn group <groupname> -clientname <string> [-rtspalg ( ENABLED |  
    DISABLED ) ]  
2  
3 show lsn group <groupname>
```

To enable RTSP ALG for an LSN configuration by using the CLI

At the command prompt, type:

```
1 add lsn rtspalgprofile <rtspalgprofilename> [-rtspIdleTimeout <
  positive_integer>] -rtspportrange <port[-port]> [-
  rtspTransportProtocol (TCP|UDP)]
2
3 show lsn rtspalgprofile <rtspalgprofilename>
```

Sample RTSP ALG Configuration

The following sample large scale NAT64 configuration, RTSP ALG is enabled for TCP traffic from subscriber devices in the network 2001:DB8:1002::/96.

```
1 add lsn client LSN-NAT64-CLIENT-9
2 Done
3 bind lsn client LSN-NAT64-CLIENT-9 -network6 2001:DB8:1002::/96
4 Done
5 add lsn pool LSN-NAT64-POOL-9
6 Done
7 bind lsn pool LSN-NAT64-POOL-9 203.0.113.90
8 Done
9 add lsn ip6profile LSN-NAT64-PROFILE-9 -type NAT64 -natprefix 2001:DB8
  :309::/96
10 Done
11 add lsn appsprofile LSN-NAT64-APPS-PROFILE-9 TCP -ippooling PAIRED -
  mapping ENDPOINT-INDEPENDENT -filtering ENDPOINT-INDEPENDENT
12 Done
13 add lsn rtspalgprofile RTSPALGPROFILE-9 -rtspIdleTimeout 1000 -
  rtspportrange 554
14 Done
15 add lsn group LSN-NAT64-GROUP-9 -clientname LSN-NAT64-CLIENT-9 -
  ip6profile LSN-NAT64-PROFILE-7 -rtspalg ENABLED
16 Done
17 bind lsn group LSN-NAT64-GROUP-9 -poolname LSN-NAT64-POOL-9
18 Done
19 bind lsn group LSN-NAT64-GROUP-9 -appsprofilename LSN-NAT64-APPS-
  PROFILE-9
20 Done
21 bind lsn group LSN-NAT64-GROUP-9 -rtspalgprofilename RTSPALGPROFILE-9
22 Done
```

Configuring Static Large Scale NAT64 Maps

May 2, 2023

The NetScaler appliance supports manual creation of NAT64 mappings, which contain the mapping between the following information:

- Subscriber's IP address and port
- NAT IP address and port

Static Large Scale NAT64 mappings are useful in cases where you want to ensure that the IPv4 connections initiated to a NAT IP address:port are IPv6 translated and mapped to the subscriber IP address:port (for example, web servers located in the internal network).

To create a Large Scale NAT64 mapping by using the command line

At the command prompt, type:

```
1 add lsn static <name> <transportprotocol> <subscrIP> <subscrPort> [<
   natIP> [<natPort>]] [-destIP <ip_addr> [-dsttd <positive_integer>]]
2
3 show lsn static
```

Wildcard Port Static Large Scale NAT64 Maps

A static large scale NAT64 mapping entry is usually a one-to-one mapping between a subscriber IPv6 address:port and a NAT IPv4 address:port. A one-to-one static large scale NAT64 mapping entry exposes only one port of the subscriber IP address to the Internet.

Some situations might require exposing all ports (64K - limited to the maximum number of ports of a NAT IPv4 address) of a subscriber IP address to the Internet (for example, a server hosted on an internal network and running a different service on each port). To make these internal services accessible through the Internet, you have to expose all the ports of the server to the Internet.

One way to meet this requirement is to add 64 thousand one-to-one static mapping entries, one mapping entry for each port. Creating those entries is very cumbersome and a big task. Also, this large number of configuration entries might lead to performance issues in the NetScaler appliance.

A simpler method is to use wildcard ports in a static mapping entry. You just need to create one static mapping entry with NAT-port and subscriber-port parameters set to the wildcard character (*), and the protocol parameter set to ALL, to expose all the ports of a subscriber IP address for all protocols to the Internet.

For a subscriber's inbound or outbound connections matching a wildcard static mapping entry, the subscriber's port does not change after the NAT operation. When a subscriber-initiated connection to the Internet matches a wildcard static mapping entry, the NetScaler appliance assigns a NAT port that has the same number as the subscriber port from which the connection is initiated. Similarly, an Internet host gets connected to a subscriber's port by connecting to the NAT port that has the same number as the subscriber's port.

To configure the NetScaler appliance to provide access to all ports of a subscriber IPv6 address, create a wildcard static map with the following mandatory parameter settings:

- Protocol=ALL
- Subscriber port = *
- NAT port = *

In a wildcard static map, unlike in a one-to-one static map, setting the NAT IP parameter is mandatory. Also, the NAT IP address assigned to a wildcard static map cannot be used for any other subscribers.

To create a wildcard static map by using the command line interface

At the command prompt, type:

```
1 add lsn static <name> ALL <subscrIP> * <natIP> * [-td <
    positive_integer>] [-destIP <ip_addr>
2
3 show lsn static
```

In the following sample configuration of a wildcard static map, all ports of a subscriber whose IP address is 2001:DB8:5001::3 are made accessible through NAT IP 203.0.113.33.

```
1 add lsn static NAT64-WILDCARD-STATIC-1 ALL 2001:DB8:5001::3 *
    203.0.113.33 *
2 Done
```

Logging and Monitoring Large Scale NAT64

May 2, 2023

You can log large scale NAT64 information to diagnose and troubleshoot problems, and to meet legal requirements. You can monitor the performance of the large scale NAT64 deployment by using statistical counters and displaying the related current sessions.

Logging Large Scale NAT64

Logging large scale NAT64 information is required for ISPs to meet legal requirements and identify the source of traffic at any given time.

A log message for a large scale NAT64 mapping entry consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced.
- Time stamp.

- Entry type (MAPPING).
- Whether the mapping entry was created or deleted.
- Subscriber’s IP address, port, and traffic domain ID.
- NAT IP address and port.
- Protocol name.
- Destination IP address, port, and traffic domain ID might be present, depending on the following conditions:
 - Destination IP address and port are not logged for endpoint-independent mapping.
 - Only the destination IP address is logged for address-dependent mapping. The port is not logged.
 - Destination IP address and port are logged for address-port-dependent mapping.

A log message for a large scale NAT64 session consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced
- Time stamp
- Entry type (SESSION)
- Whether the session is created or removed
- Subscriber’s IP address, port, and traffic domain ID
- NAT IP address and port
- Protocol name
- Destination IP address, port, and traffic domain ID

The following table displays sample large scale NAT64 log entries of each type stored on the configured log servers. The log entries show that a subscriber whose IPv6 address is 2001:db8:5001::9 was connected to destination IP:port 23.0.0.1:80 through NAT IP:port 203.0.113.63:45195 on April 7, 2016, from 14:07:57 GMT to 14:10:59 GMT.

Log Entry Type	Sample Log Entry
Session Creation	04/07/2016:14:07:57 GMT Informational 0-PPE-10 : default LSN LSN_SESSION 5532 0 : SESSION CREATED Client IP-Port:TD 2001:db8:5001::9-34937:0 , NatIP:NatPort 203.0.113.63:45195, Destination IP:Port:TD 23.0.0.1:0:80, Protocol: TCP

Log Entry Type	Sample Log Entry
Mapping Creation	04/07/2016:14:07:57 GMT Informational 0-PPE-10 : default LSN LSN_ADDR_MAPPING 5533 0 : ADM CREATED Client IP-Port:TD 2001:db8:5001::9-34937:0 , NatIP:NatPort 203.0.113.63:45195, Destination IP:TD 23.0.0.1:80, Protocol: TCP
Session Deletion	04/07/2016:14:10:59 GMT 0-PPE-10 : default LSN LSN_SESSION 25012 0 : SESSION DELETED Client IP-Port:TD 2001:db8:5001::9-34937:0 , NatIP:NatPort 203.0.113.63:45195, Destination IP:Port:TD 23.0.0.1:0:80, Protocol: TCP
Mapping Deletion	04/07/2016:14:10:59 GMT 0-PPE-10 : default LSN LSN_ADDR_MAPPING 25013 0 : ADM DELETED Client IP-Port:TD 2001:db8:5001::9-34937:0 , NatIP:NatPort 203.0.113.63:45195, Destination IP:Port:TD 23.0.0.1:0:80, Protocol: TCP

Configuration Steps

You can configure logging of large scale NAT64 information for a large scale NAT64 configuration by setting the LSN groups's logging and session logging parameters. These are group level parameters and are disabled by default. The NetScaler appliance logs large scale NAT64 sessions for an LSN group only when both logging and session logging parameters are enabled.

The following table displays the logging behavior for an LSN group for various settings of logging and session logging parameters.

Logging	Session Logging	Logging Behavior
Enabled	Enabled	Logs LSN mapping entries as well as LSN sessions
Enabled	Disabled	Logs LSN mapping entries but not LSN sessions
Disabled	Enabled	Logs neither mapping entries nor LSN sessions

To log large scale NAT64 information by using the CLI

To set the logging and session logging parameters while adding an LSN group, at the command prompt, type:

```
1 add lsn group <groupname> -clientname <string> [-logging (ENABLED|
   DISABLED)] [-sessionLogging (ENABLED|DISABLED)]
2
3 show lsn group
```

To set the logging and session logging parameters for an existing LSN group, at the command prompt, type:

```
1 set lsn group <groupname> [-logging (ENABLED|DISABLED)] [-
   sessionLogging (ENABLED|DISABLED)]
2
3 show lsn group
```

Sample Configuration

In this example of large scale NAT64 configuration, logging and session logging parameters are enabled for LSN group LSN-NAT64-GROUP-1.

The NetScaler appliance logs large scale NAT64 session and mapping information for connections from subscribers (in the network 2001:DB8:5001::/96).

Sample configuration:

```
1 add lsn client LSN-NAT64-CLIENT-1 Done
2 Done
3 bind lsn client LSN-NAT64-CLIENT-1 -network6 2001:DB8:5001::/96
4 Done
5 add lsn pool LSN-NAT64-POOL-1
6 Done
7 bind lsn pool LSN-NAT64-POOL-1 203.0.113.61 - 203.0.113.70
8 Done
9 add lsn ip6profile LSN-NAT64-PROFILE-1 -type NAT64 -natprefix 2001:DB8
   :300::/96
10 Done
11 add lsn group LSN-NAT64-GROUP-1 -clientname LSN-NAT64-CLIENT-1 -
   ip6profile LSN-NAT64-PROFILE-1 -logging ENABLED -sessionLogging
   ENABLED
12 Done
13 bind lsn group LSN-NAT64-GROUP-1 -poolname LSN-NAT64-POOL-1
14 Done
```

Logging MSISDN Information for Large Scale NAT64

A Mobile Station Integrated Subscriber Directory Number (MSISDN) is a telephone number uniquely identifying a subscriber across multiple mobile networks. The MSISDN is associated with a country code and a national destination code identifying the subscriber's operator.

You can configure a NetScaler appliance to include MSISDNs in large scale NAT64 LSN log entries for subscribers in mobile networks. The presence of MSISDNs in the LSN logs facilitates faster and accurate back tracing of a mobile subscriber who has violated a policy or law, or whose information is required by lawful interception agencies.

The following sample LSN log entries include MSISDN information for a connection from a mobile subscriber in an LSN configuration. The log entries show that a mobile subscriber whose MSISDN is E164:5556543210 and IPv6 address is 2001:db8:5001::9 was connected to destination IP:port 23.0.0.1:80 through the NAT IP:port 203.0.113.63:45195 on April 7, 2016, from 14:07:57 GMT to 14:10:59 GMT.

Log Entry Type	Sample Log Entry
Session Creation	04/07/2016:14:07:57 GMT Informational 0-PPE-10 : default LSN LSN_SESSION 5532 0 : SESSION CREATED E164:5556543210 Client IP-Port:TD 2001:db8:5001::9-34937:0 , NatIP:NatPort 203.0.113.63:45195, Destination IP:Port:TD 23.0.0.1:0:80, Protocol: TCP
Mapping Creation	04/07/2016:14:07:57 GMT Informational 0-PPE-10 : default LSN LSN_ADDR_MAPPING 5533 0 : ADM CREATED E164:5556543210 Client IP-Port:TD 2001:db8:5001::9-34937:0 , NatIP:NatPort 203.0.113.63:45195, Destination IP:TD 23.0.0.1:80, Protocol: TCP
Session Deletion	04/07/2016:14:10:59 GMT 0-PPE-10 : default LSN LSN_SESSION 25012 0 : SESSION DELETED E164:5556543210 Client IP-Port:TD 2001:db8:5001::9-34937:0 , NatIP:NatPort 203.0.113.63:45195, Destination IP:Port:TD 23.0.0.1:0:80, Protocol: TCP

Log Entry Type	Sample Log Entry
Mapping Deletion	04/07/2016:14:10:59 GMT 0-PPE-10 : default LSN LSN_ADDR_MAPPING 25013 0 : ADM DELETED E164:5556543210 Client IP-Port:TD 2001:db8:5001::9-34937:0 , NatIP:NatPort 203.0.113.63:45195, Destination IP:Port:TD 23.0.0.1:0:80, Protocol: TCP

Configuration Steps

Perform the following tasks for including MSISDN information in LSN logs:

- **Create an LSN log profile.** An LSN log profile includes the log subscriber ID parameter, which specifies whether to or not to include the MSISDN information in the LSN logs of an LSN configuration.
- Bind the LSN log profile to an LSN group of an LSN configuration. Bind the created LSN log profile to an LSN group of an LSN configuration by setting the log profile name parameter to the created LSN log profile name. MSISDN information is included in all LSN logs related to mobile subscribers of this LSN group.

To create an LSN log profile by using the CLI At the command prompt, type:

```
1 add lsn logprofile <logprofilename> -logSubscriberID ( ENABLED |
  DISABLED )
2
3 show lsn logprofile
```

To bind an LSN log profile to an LSN group of an NAT64 LSN configuration by using the CLI At the command prompt, type:

```
1 bind lsn group <groupname> -logProfileName <lsnlogprofilename>
2
3 show lsn group
```

Sample Configuration

In this example of NAT64 LSN configuration, the LSN log profile LOG-PROFILE-MSISDN-1 has the log subscriber ID parameter enabled. LOG-PROFILE-MSISDN-1 is bound to LSN group LSN-NAT64-GROUP-1. MSISDN information is included in the LSN session and LSN mapping logs for connections from mobile subscribers (in network 2001:DB8:5001::/96).

```
1 add lsn logfile LOG-PROFILE-MSISDN-1 -logSubscriberID ENABLED
2 Done
3 add lsn client LSN-NAT64-CLIENT-1
4 Done
5 bind lsn client LSN-NAT64-CLIENT-1 -network6 2001:DB8:5001::/96
6 Done
7 add lsn pool LSN-NAT64-POOL-1
8 Done
9 bind lsn pool LSN-NAT64-POOL-1 203.0.113.61 - 203.0.113.70
10 Done
11 add lsn ip6profile LSN-NAT64-PROFILE-1 -type NAT64 -natprefix 2001:DB8
    :300::/96
12 Done
13 add lsn group LSN-NAT64-GROUP-1 -clientname LSN-NAT64-CLIENT-1 -
    ip6profile LSN-NAT64-PROFILE-1
14 Done
15 bind lsn group LSN-NAT64-GROUP-1 -poolname LSN-NAT64-POOL-1
16 Done
17 bind lsn group LSN-NAT64-GROUP-1 -logfile LOG-PROFILE-MSISDN-1
18 Done
```

Compact Logging for Large Scale NAT

Logging LSN information is one of the important functions needed by ISPs to meet legal requirements and be able to identify the source of traffic at any given time. This eventually results in a huge volume of log data, requiring the ISPs to make large investments to maintain the logging infrastructure.

Compact logging is a technique for reducing the log size by using a notational change involving short codes for event and protocol names. For example, C for client, SC for session created, and T for TCP. Compact logging results in an average of 40 percent reduction in log size.

Configuration Steps

Perform the following tasks for logging LSN information in compact format:

1. Create an LSN log profile. An LSN log profile includes the Log Compact parameter, which specifies whether to or not to log information in compact format for an LSN configuration.
2. Bind the LSN log profile to an LSN group of an LSN configuration. Bind the created LSN log profile to an LSN group of an LSN configuration by setting the Log Profile Name parameter to the created LSN log profile name. All sessions and mappings for this LSN group are logged in compact format.

To create an LSN log profile by using the CLI At the command prompt, type:

```
1 add lsn logprofile <logprofilename> -logCompact (ENABLED|DISABLED)
2
3 show lsn logprofile
```

To bind an LSN log profile to an LSN group of an LSN configuration by using the CLI At the command prompt, type:

```
1 bind lsn group <groupname> -logProfileName <lsnlogprofilename>
2
3 show lsn group
```

Sample Configuration for NAT64:

```
1 add lsn logprofile LOG-PROFILE-COMPACT-1 -logCompact ENABLED
2 Done
3 add lsn client LSN-NAT64-CLIENT-1
4 Done
5 bind lsn client LSN-NAT64-CLIENT-1 -network6 2001:DB8:5001::/96
6 Done
7 add lsn pool LSN-NAT64-POOL-1
8 Done
9 bind lsn pool LSN-NAT64-POOL-1 203.0.113.61 - 203.0.113.70
10 Done
11 add lsn ip6profile LSN-NAT64-PROFILE-1 -type NAT64 -natprefix 2001:DB8
    :300::/96
12 Done
13 add lsn group LSN-NAT64-PROFILE-1 -clientname LSN-NAT64-CLIENT-1 -
    ip6profile LSN-NAT64-PROFILE-1
14 Done
15 bind lsn group LSN-NAT64-GROUP-1 -poolname LSN-NAT64-POOL-1
16 Done
17 bind lsn group LSN-NAT64-GROUP-1 -logProfileName LOG-PROFILE-COMPACT-1
18 Done
```

Logging HTTP Header Information

The NetScaler appliance can log request header information of an HTTP connection that is using the NetScaler large scale NAT64 functionality. The following header information of an HTTP request packet can be logged:

- URL that the HTTP request is destined to
- HTTP Method specified in the HTTP request
- HTTP version used in the HTTP request
- IPv6 address of the subscriber that sent the HTTP request

The HTTP header logs can be used by ISPs to see the trends related to the HTTP protocol among a set

of subscribers. For example, an ISP can use this feature to find out the most popular website among a set of subscribers.

Configuration Steps

Perform the following tasks for configuring the NetScaler appliance to log HTTP header information:

- Create an HTTP header log profile. An HTTP header log profile is a collection of HTTP header attributes (for example, URL and HTTP method) that can be enabled or disabled for logging.
- Bind the HTTP header to an LSN group of a large scale NAT64 configuration. Bind the HTTP header log profile to an LSN group of an LSN configuration by setting the HTTP header log profile name parameter to the name of the created HTTP header log profile. The NetScaler appliance then logs HTTP header information of any HTTP requests related to the LSN group. An HTTP header log profile can be bound to multiple LSN groups, but an LSN group can have only one HTTP header log profile.

To create an HTTP header log profile by using the the command line interface At the command prompt, type:

```
1 add lsn httphdrlogprofile <httphdrlogprofilename> [-logURL ( ENABLED |  
    DISABLED )] [-logMethod ( ENABLED | DISABLED )] [-logVersion (  
    ENABLED | DISABLED )] [-logHost ( ENABLED | DISABLED )]  
2  
3 show lsn httphdrlogprofile
```

To bind an HTTP header log profile to an LSN group by using the the command line interface At the command prompt, type:

```
1 bind lsn group <groupname> -httphdrlogprofilename <string>  
2  
3 show lsn group <groupname>
```

Sample Configuration

```
1 add lsn httphdrlogprofile HTTP-HEADER-LOG-1  
2 Done  
3 add lsn client LSN-NAT64-CLIENT-1 Done  
4 Done  
5 bind lsn client LSN-NAT64-CLIENT-1 -network6 2001:DB8:5001::/96  
6 Done  
7 add lsn pool LSN-NAT64-POOL-1  
8 Done
```

```
9 bind lsn pool LSN-NAT64-POOL-1 203.0.113.61 - 203.0.113.70
10 Done
11 add lsn ip6profile LSN-NAT64-PROFILE-1 -type NAT64 -natprefix 2001:DB8
    :300::/96
12 Done
13 add lsn group LSN-NAT64-GROUP-1 -clientname LSN-NAT64-CLIENT-1 -
    ip6profile LSN-NAT64-PROFILE-1
14 Done
15 bind lsn group LSN-NAT64-GROUP-1 -poolname LSN-NAT64-POOL-1
16 Done
17 bind lsn group LSN-NAT64-GROUP-1 -httpdrlogprofilename HTTP-HEADER-LOG
    -1
18 Done
```

Displaying Current Large Scale NAT64 Sessions

You can display the current large scale NAT64 sessions in order to detect any unwanted or inefficient sessions on the NetScaler appliance. You can display all or some large scale NAT64 sessions on the basis of selection parameters.

Note

When more than a million large scale NAT64 sessions exist on the NetScaler appliance, Citrix recommends using the selection parameters to display selected large scale NAT64 sessions instead of displaying all of them.

To display all large scale NAT64 sessions by using the command line interface

At the command prompt, type:

```
1 show lsn session -nattype NAT64
```

To display selective large scale NAT64 sessions by using the command line interface

At the command prompt, type:

```
1 show lsn session -nattype NAT64 [-network6 <ipv6_addr|*>] [-clientname
    <string>] [-natIP <ip_addr> [-natPort <port>]]
```

Displaying Large Scale NAT64 Statistics

You can display statistics related to large scale NAT64 module, and evaluate its performance or troubleshoot problems. You can display a summary of statistics of all large scale NAT64 configurations

or of a particular large scale NAT64 configuration. The statistical counters reflect events since the NetScaler appliance was last restarted. All these counters are reset to 0 when the NetScaler appliance is restarted.

To display total statistics of large scale NAT64 by using the command line interface

At the command prompt, type:

```
1 stat lsn nat64
```

To display statistics for a specified large scale NAT64 configuration by using the command line interface

At the command prompt, type:

```
1 stat lsn group <groupname>
```

Clearing Large Scale NAT64 Sessions

You can remove any unwanted or inefficient large scale NAT64 sessions from the NetScaler appliance. The appliance immediately releases resources (such as NAT IP address, port, and memory) allocated for these sessions, making the resources available for new sessions. The appliance also drops all the subsequent packets related to these removed sessions. You can remove all or selected large scale NAT64 sessions from the NetScaler appliance.

To clear all large scale NAT64 sessions by using the command line interface

At the command prompt, type:

```
1 flush lsn session -nattype NAT64
2
3 show lsn session -nattype NAT64
```

To clear selective large scale NAT64 sessions by using the command line interface

At the command prompt, type:

```
1 flush lsn session -nattype NAT64 [-network6 <ipv6_addr|*>] [-
  clientname <string>] [-natIP <ip_addr> [-natPort <port>]]
2
3 show lsn session -nattype NAT64 [-network6 <ipv6_addr|*>] [-clientname
  <string>] [-natIP <ip_addr> [-natPort <port>]]
```

Sample configuration:

Clear all large scale NAT64 sessions existing on a NetScaler appliance

```
1 flush lsn session - nattytype NAT64
2 Done
```

Clear all large scale NAT64 sessions related to client entity LSN-NAT64-CLIENT-1

```
1 flush lsn session - nattytype NAT64 -clientname LSN-NAT64-CLIENT-1
2 Done
```

Clear all large scale NAT64 sessions related to a subscriber network (2001:DB8:5001::/96) of LSN client entity LSN-NAT64-CLIENT-2

```
1 flush lsn session - nattytype NAT64 - network6 2001:DB8:5001::/96 -
  clientname LSN-NAT64-CLIENT-2
2 Done
```

IPFIX Logging

The NetScaler appliance supports sending information about LSN events in Internet Protocol Flow Information Export (IPFIX) format to the configured set of IPFIX collector(s). The appliance uses the existing AppFlow feature to send LSN events in IPFIX format to the IPFIX collectors.

IPFIX based logging is available for the following NAT64 related events:

- Creation or deletion of an LSN session.
- Creation or deletion of an LSN mapping entry.
- Allocation or de-allocation of port blocks in the context of deterministic NAT.
- Allocation or de-allocation of port blocks in the context of dynamic NAT.
- Whenever subscriber session quota is exceeded.

Points to Consider before you Configure IPFIX logging

Before you start configuring IPsec ALG, consider the following points:

- You must configure the AppFlow feature and IPFIX collector(s) on the NetScaler appliance. For instructions, see [Configuring the AppFlow feature](#).

Configuration Steps

Perform the following tasks for logging LSN information in IPFIX format:

- **Enable LSN logging in the AppFlow configuration.** Enable the LSN logging parameter as part of AppFlow configuration.
- **Create an LSN log profile.** An LSN log profile includes the IPFIX parameter that enables or disables the log information in IPFIX format.
- **Bind the LSN log profile to an LSN group of an LSN configuration.** Bind the LSN log profile to one or multiple LSN group(s). Events related to the bound LSN group will be logged in IPFIX format.

To enable LSN logging in the AppFlow configuration by using the CLI At the command prompt, type:

```
1 set appflow param -lsnLogging ( ENABLED | DISABLED )
2
3 show appflow param
```

To create an LSN log profile by using the CLIAt the command prompt, type At the command prompt, type:

```
1 set lsn logprofile <logProfileName> -logipfix ( ENABLED | DISABLED )
2
3 show lsn logprofile
```

To bind the LSN log profile to an LSN group of an LSN configuration by using the CLI At the command prompt, type:

```
1 bind lsn group <groupname> -logProfileName <lsnlogprofilename>
2
3 show lsn group
```

To create an LSN log profile by using the GUI Navigate to **System > Large Scale NAT > Profiles**, click **Log** tab, and then add a log profile.

To bind the LSN log profile to an LSN group of an LSN configuration by using the GUI

1. Navigate to **System > Large Scale NAT > LSN Group**, open the **LSN** group.
2. In **Advanced Settings**, click **+ Log Profile** to bind the created Log profile to the LSN group.

Port Control Protocol for Large Scale NAT64

May 2, 2023

NetScaler appliances now support Port Control Protocol (PCP) for large scale NAT (LSN). Many of an ISP's subscriber applications must be accessible from Internet (for example, Internet of Things (IOT) devices, such as an IP camera that provides surveillance over the Internet). One way to meet this requirement is to create static large scale NAT (LSN) maps. But for a very large number of subscribers, creating static LSN NAT maps is not a feasible solution.

Port Control Protocol (PCP) enables a subscriber to request specific LSN NAT mappings for itself and/or for other 3rd party devices. The large scale NAT device creates an LSN map and sends it to the subscriber. The subscriber sends the remote devices on the Internet the NAT IP address:NAT port at which they can connect to the subscriber.

Applications usually send frequent keep-alive messages to the large scale NAT device so that their LSN mappings do not time out. PCP helps reduce the frequency of such keep-alive messages by enabling the applications to learn the timeout settings of the LSN mappings. This helps reduce bandwidth consumption on the ISP's access network and battery consumption on mobile devices.

PCP is a client-server model and runs over the UDP transport protocol. A NetScaler appliance implements the PCP server component and is compliant with RFC 6887.

Configuration Steps

Perform the following tasks for configuring PCP:

- **(Optional) Create a PCP profile.** A PCP profile includes settings for PCP related parameters (for example, to listen for mapping and peer PCP requests). A PCP profile can be bound to a PCP server. A PCP profile bound to a PCP server applies all its settings to the PCP server. A PCP profile can be bound to multiple PCP servers. By default, one PCP profile with default parameters settings is bound to all PCP servers. A PCP profile that you bind to a PCP server overrides the default PCP profile settings for that server. A default PCP profile has the following parameter settings:
 - Mapping: Enabled
 - Peer: Enabled
 - Minimum map life: 120 seconds
 - Maximum max life: 86400 seconds
 - Announce count: 10
 - Third Party: Disabled

- **Create a PCP server and bind a PCP profile to it.** Create a PCP server on the NetScaler appliance to listen for PCP related requests and messages from the subscribers. A Subnet IP (SNIP) or (SNIP6) address must be assigned to a PCP server to access it. By default, a PCP server listens on port 5351.
- **Bind the PCP server to an LSN group of an LSN configuration.** Bind the created PCP server to an LSN group of an LSN configuration by setting the PCP Server parameter to specify the created PCP server. The created PCP server can be accessed only by the subscribers of this LSN group.

Note

A PCP server for a large scale NAT configuration does not serve requests from subscribers that are identified from ACL rules.

To create a PCP profile by using the CLI

At the command prompt, type:

```
1 add pcp profile <name> [-mapping ( ENABLED | DISABLED )] [-peer (
  ENABLED | DISABLED )] [-minMapLife <secs>] [-maxMapLife <secs>] [-
  announceMultiCount <positive_integer>][-thirdParty ( ENABLED |
  DISABLED )]
2
3 show pcp profile <name>
```

To create a PCP server by using the CLI

At the command prompt, type:

```
1 add pcp server <name> <IPAddress> [-port <portNum|*>] [-pcpProfile <
  string>]
2
3 show pcp server <name>
```

Sample Configuration for NAT64

In the following sample configuration, PCP server PCP-SERVER-1, with PCP settings from PCP-PROFILE-1, is bound to LSN group LSN-NAT64-GROUP-1. PCP-SERVER-1 serves PCP requests from IPv6 subscribers in network 2001:DB8:5001::/96.

Sample configuration:

```
1 add pcp profile PCP-PROFILE-1 -minMapLife 400
2 Done
3 add pcp server PCP-SERVER-1 2001:DB8:6001::90 -pcpProfile PCP-PROFILE
  -1
```

```
4 Done
5 add lsn client LSN-NAT64-CLIENT-1
6 Done
7 bind lsn client LSN-NAT64-CLIENT-1 -network6 2001:DB8:5001::/96
8 Done
9 add lsn pool LSN-NAT64-POOL-1
10 Done
11 bind lsn pool LSN-NAT64-POOL-1 203.0.113.61 - 203.0.113.70
12 Done
13 add lsn ip6profile LSN-NAT64-PROFILE-1 -type NAT64 -natprefix 2001:DB8
:300::/96
14 Done
15 add lsn group LSN-NAT64-PROFILE-1 -clientname LSN-NAT64-CLIENT-1 -
ip6profile LSN-NAT64-PROFILE-1
16 Done
17 bind lsn group LSN-NAT64-GROUP-1 -poolname LSN-NAT64-POOL-1
18 Done
19 bind lsn group LSN-NAT64-GROUP-1 -pcpServer PCP-NAT64-SERVER-1
20 Done
```

LSN64 in a cluster setup

May 2, 2023

Large scale NAT64 configurations are supported on a NetScaler cluster setup.

A NetScaler cluster is a group of NetScaler appliances that are configured and managed as a single system. A NetScaler cluster provides scalability and availability. Each NetScaler appliance in a cluster setup acts as an independent LSN entity and is managed as a single system.

The LSN configuration in a cluster setup is same as in a standalone appliance except for a specific pool of LSN IP addresses are owned by only one node at a time. In other words, an LSN IP pool entity is configured as a spotted entity in a particular node. All the nodes of a cluster setup can have a specific LSN IP pool entity. To make sure that the packets related to an LSN session are received on the same cluster node that performed the NAT operation, policy based backplane (PBS) steering is configured. PBS steers the received related packets of an LSN session to the same cluster node.

Sample configuration:

```
1 add lsn client LSN-NAT64-CLIENT-1
2
3 Done
4
5 bind lsn client LSN-NAT64-CLIENT-1 -network6 2001:DB8:5001::/96
6
7 Done
8
```

```
9 add lsn pool LSN-NAT64-POOL-1
10
11 Done
12
13 bind lsn pool LSN-NAT64-POOL-1 -ownerNode 1 203.0.113.61 -
    203.0.113.70
14
15 Done
16
17 bind lsn pool LSN-NAT64-POOL-1 -ownerNode 2 203.0.113.101 -
    203.0.113.110
18
19 Done
20
21 add lsn ip6profile LSN-NAT64-PROFILE-1 -type NAT64 -natprefix 2001:DB8
    :300::/96
22
23 Done
24
25 add lsn group LSN-NAT64-GROUP-1 -clientname LSN-NAT64-CLIENT-1 -
    ip6profile LSN-NAT64-PROFILE-1
26
27 Done
28
29 bind lsn group LSN-NAT64-GROUP-1 -poolname LSN-NAT64-POOL-1
30
31 Done
32
33 add ns acl6 NAT64-DFD ALLOW -srcIPv6 = 2001:DB8:5001:: -type DFD -
    dfdhash SIP -dfdprefix 64
34
35 Done
36
37 apply ns acls6 -type DFD
38
39 Done
```

Mapping Address and Port using Translation

May 2, 2023

Mapping Address and Port using Translation (MAP-T) is an IPv6 transition solution for ISPs with IPv6 infrastructure to connect their IPv4 subscribers to the IPv4 internet. MAP-T is built on stateless IPv4 and IPv6 address translation technologies. MAP-T is a mechanism that performs double translation (IPv4 to IPv6 and vice versa) on customer edge (CE) devices and border routers (in ISP core network).

In a MAP-T deployment, the CE device implements a combination of stateful NAPT44 translation and

stateless NAT46 translation. The CE device obtains NAT-IP and the port-block to be used for translation through DHCPv6 or any other method.

When an IPv4 packet from a subscriber device arrives at the CE device, the CE device performs NAPT44 and stores the NAPT44 binding information. After NAT44 translation, the packet is subjected to NAT46 translation and then forwarded to the border router (BR) device located in the ISP's core network. The BR device receives the IPv6 packets from the CE device, extracts and validates the NAT-IP and port-block embedded in the IPv6 header, and forwards the IPv4 packet to the IPv4 Internet. When the BR receives the IPv4 packet from the Internet, it translates the IPv4 packet to an IPv6 packet and send the IPv6 packet to the CE device.

MAP-T is stateless on a BR device, so it does not require the BR device to perform NAT on the traffic. Instead, NAT functionality is delegated to the CE devices. This delegation and stateless functionality in BR devices allows the BR deployment to scale in proportion to the volume of traffic.

The NetScaler appliance implements the BR functionality of a MAP-T solution as described by RFC 7599.

Configuring MAP-T

Configuring MAP-T on a NetScaler appliance consists of the following tasks:

- Add a default mapping rule
- Add a basic mapping rule
- Bind an IPv4 NAT address range of CE devices to a basic mapping rule
- Add a map domain and bind a basic mapping rule and default mapping rule to the domain

To add a default mapping rule by using the CLI

At the command prompt, type:

```
1 add MapDmr <name> -BRIPv6Prefix ( <ipv6_addr> | <*> )
2
3 show MapDmr <name>
```

To add a basic mapping rule by using the CLI

At the command prompt, type:

```
1 add MapBmr <name> -RuleIPv6Prefix <ipv6_addr> | <*> [-psidoffset <
  positive_integer>] [-EABitLength <positive_integer>] [-psidlength <
  positive_integer>]
2
3 show MapBmr <name>
```


To bind IPv4 NAT address range of CE devices to a basic mapping rule by using the CLI

At the command prompt, type:

```
1 bind MapBmr <name> (-network <ip_addr> [-netmask <netmask>])
2
3 show MapBmr <name>
```

To add a map domain by using the CLI

At the command prompt, type:

```
1 add MapDomain <name> -MapDmrName <string>
2
3 show MapDomain <name>
```

To bind a basic mapping rule to a map domain by using the CLI

At the command prompt, type:

```
1 bind MapDomain <name> -MapBmrName <string>
2
3 show MapDomain <name>
```

Sample configuration

```
1 add mapdmr DMR-1 -BRIPv6Prefix 2002:db8::/64
2
3 Done
4
5 add mapbmr BMR-1 -ruleIPv6Prefix 2002:db8:89ab::/48 -eAbitLength 16 -
  psidlength 8 -psidoffset 6
6
7 Done
8
9 bind mapbmr BMR-1 -network 192.0.1.0 -netmask 255.255.255.0
10
11 Done
12
13 add MapDomain MAP-DOMAIN-1 -mapdmrname DMR-1
14
15 Done
16
17 bind MapDomain MAP-DOMAIN-1 -mapbmrname BMR-1
18 Done
```

Telco subscriber management

May 2, 2023

The number of subscribers in a telco network is increasing at an unprecedented rate, and managing them is becoming a challenge for service providers. Newer, faster, and smarter devices are placing high demand on the network and the subscriber management systems. It is no longer feasible to provide each subscriber the same standard of service, and the need for traffic processing on a per-subscriber basis is imperative.

The NetScaler appliance provides the intelligence to profile subscribers based on their information stored in the Policy and Charging Rules Function (PCRF). When a mobile subscriber connects to the Internet, the packet gateway associates an IP address with the subscriber and forwards the data packet to the appliance. The appliance receives the subscriber information dynamically, or you can configure static subscribers. This information enables the appliance to apply its rich traffic management capabilities, such as content switching, integrated caching, rewrite, and responder, on a per-subscriber basis to manage the traffic.

Before you configure the NetScaler appliance to manage subscribers, you must allocate memory to the module that stores subscriber sessions. For dynamic subscribers, you must configure an interface through which the appliance receives session information. Static subscribers must be assigned IDs, and you can associate them with policies.

You can also do the following:

- Subscriber policy enforcement and management.
- Configure the appliance to uniquely identify a subscriber by using only the IPv6 prefix instead of the complete IPv6 address.
- Use policies to optimize TCP traffic for both dynamic and static subscribers. These policies associate different TCP profiles with different types of users.
- Manage idle sessions on a NetScaler appliance.
- Enable logging to a log server.
- Remove LSN sessions for deleted subscriber sessions.

Allocating memory for the subscriber session store module

Each subscriber session entry consumes 1 KB of memory. Storing 500,000 subscriber sessions at any point in time requires 500 MB of memory. This value must be added to the minimum memory requirement, which is shown as part of the output of the “show extendedmemoryparam” command. In the following example, the output is for a NetScaler VPX instance with 3 packet engines and 8 GB memory.

To store 500,000 subscriber sessions on this appliance, the configured memory must be 2058+500 MB (500,000 x 1 KB = 500 MB.)

Note

The configured memory must be in multiples of 2 MB and must not exceed the maximum memory usage limit. The appliance must be restarted for the changes to take effect.

Example

```
1 show extendedmemoryparam
2     Extended Memory Global Configuration. This memory is utilized by
3       LSN and Subscriber Session Store Modules:
4     Active Memory Usage: 0 MBytes
5     Configured Memory Limit: 0 MBytes
6     Minimum Memory Required: 2058 MBytes
7     Maximum Memory Usage Limit: 2606 MBytes
8 Done
9 set extendedmemoryparam -memLimit 2558
10 Done
11 show extendedmemoryparam
12     Extended Memory Global Configuration. This memory is
13       utilized by LSN and Subscriber Session Store Modules:
14     Active Memory Usage: 2558 MBytes
15     Configured Memory Limit: 2558 MBytes
16     Minimum Memory Required: 2058 MBytes
17     Maximum Memory Usage Limit: 2606 MBytes
18 Done
```

Configure an interface for dynamic subscribers

The NetScaler appliance dynamically receives the subscriber information through any of the following types of interface:

- Gx Interface
- RADIUS Interface
- RADIUS and Gx Interface

Note

- Starting with NetScaler release 12.0 build 57.19, Gx interface is supported for a cluster deployment. For more information see Gx interface in a cluster topology.
- In an HA setup, the subscriber sessions are continually synchronized on the secondary node. In the event of a failover, the subscriber information is still available on the

secondary node.

Gx interface


A Gx interface (as specified in 3GPP 29.212) is a standard interface based on the Diameter protocol that allows exchange of policy control and charging rules between a PCRF and a Policy and Charging Enforcement Function (PCEF) entity in a Telco network.

When an IP-CAN session is established, the packet gateway forwards the subscriber ID, such as the MSISDN, and Framed-IP address information about the subscriber to the PCRF as a Diameter message. When the data packet arrives at the appliance from packet gateway (PGW), the appliance uses the subscriber IP address to query the PCRF to get the subscriber information. This is also known as secondary PCEF functionality.

The Policy and Charging Control (PCC) rules received by the appliance over the Gx interface are stored on the appliance during the subscriber session, that is, until the PCRF sends a Re-Auth-Request (RAR) message with a Session-Release-Cause AVP or the subscriber session is terminated from the CLI or the configuration utility. If there are any updates to an existing subscriber, the PCRF sends the updates in an RAR message. A subscriber session is initiated when a subscriber logs on to the network, and terminated when the subscriber logs off.

Note: If the PCRF server is down, the NetScaler appliance creates negative sessions for the pending or incoming Gx subscriber requests. When the PCRF server is back up again, the NetScaler appliance prevents a storm of requests by waiting for the negative sessions to expire before performing the specific subscriber requests.

The following illustration shows the high-level traffic flow. It assumes that the data plane traffic is HTTP. The appliance sends a Credit Control Request (CCR) over a Gx interface to the PCRF server and, in the credit control answer (CCA), receives the PCC rules and, optionally, other information, such as the Radio Access Technology (RAT) type, that applies to the particular subscriber. PCC rules include one or more policy (rule) names and other parameters. The appliance uses this information to retrieve the predefined rules stored on the appliance, and to direct the flow of traffic. It also stores this information in the subscriber policy and enforcement management system during the subscriber session. After a subscriber session is terminated, the appliance discards all the information about the subscriber.

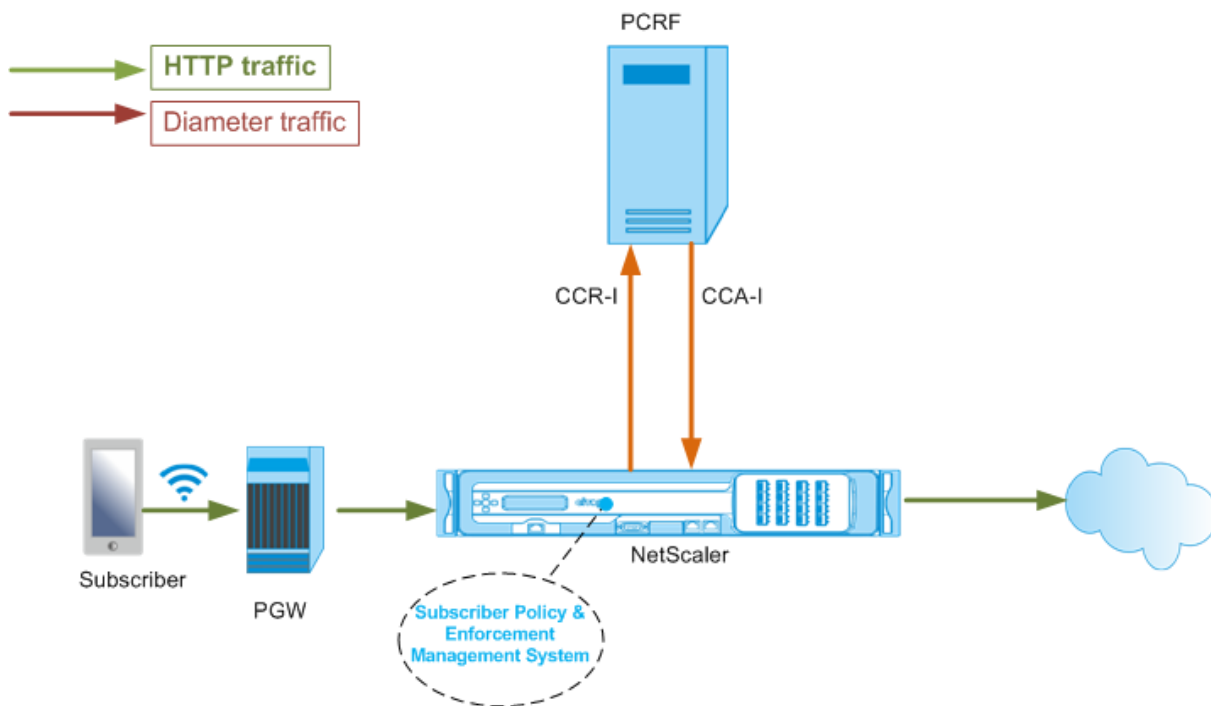

The following example shows the commands for configuring a Gx interface. The commands are in boldface.

To set up a Gx interface, perform the following tasks Add a DIAMETER service for each Gx interface. For example:

```

1 add service pcrf-svc1 203.0.113.1 DIAMETER 3868
2
3 add service pcrf-svc2 203.0.113.2 DIAMETER 3868

```

Add a non-addressable DIAMETER load balancing virtual server and bind the services created in step 1 to this virtual server. For more than one service, specify a persistenceType and the persistAVPno so that specific sessions are handled by the same PCRF server. For example:

```

1 add lb vserver vdiam DIAMETER 0.0.0.0 0 -persistenceType DIAMETER -
   persistAVPno 263
2
3 bind lb vserver vdiam pcrf-svc1
4
5 bind lb vserver vdiam pcrf-svc2

```

Configure NetScaler diameter identity and realm. Identity and realm are used as Origin-Host and Origin-Realm AVPs in diameter messages sent by the Gx client. For example:

```

1 set ns diameter - identity netscaler.com - realm com

```

Configure the Gx interface to use the virtual server created in step 2 as the PCRF virtual server. Specify

the PCRF realm to use as Destination-Realm AVP in diameters messages sent by the Gx client. For example:

```
1 set subscriber gxInterface -vServer vdiam -pcrfRealm pcrf.com
```

Set the subscriber interface type to GxOnly. For example:

```
1 set subscriber param -interfaceType GxOnly
```

To see the Gx interface configuration and status, type:

```
1 show subscriber gxinterface
```

Example

```
1 show subscriber gxinterface
2     Gx Interface parameters:
3         PCRF Vserver: vdiam (DOWN)
4         Gx Client Identity...: netscaler1.com
5         Gx Client Realm .....: com
6         PCRF Realm: epc.mnc030.mcc234.3gppnetwork.org
7         Hold Packets On Subscriber Absence: YES
8         CCR Request Timeout: 4 Seconds
9         CCR Request Retry Attempts: 1
10        Gx HealthCheck enabled: NO
11        Gx HealthCheck TTL : 30 Seconds
12        CER Request Timeout: 10 Seconds
13        RevalidationTimeout: 30 Seconds
14        NegativeTTL: 60 Seconds
15        NegativeTTL Limited Success: NO
16        Purge SDB on Gx Failure: YES
17        ServicePath AVP code: 262099     ServicePath AVP VendorID: 3845
18        PCRF Connection State: PCRF is not ready
19        Done
```

ARGUMENTS

vServer Name of the load balancing or content switching virtual server to which the Gx connections are established. The service type of the virtual server must be DIAMETER or SSL_DIAMETER. This parameter is mutually exclusive with the service parameter. Therefore, you cannot set both service and the virtual server in the Gx interface.

Service Name of DIAMETER or SSL_DIAMETER service corresponding to PCRF to which the Gx connection is established. This parameter is mutually exclusive with the vserver parameter. Therefore, you cannot set both service and the virtual server in the Gx Interface.

pcrfRealm The realm of PCRF to which the message is to be routed. This is the realm used in Destination-Realm AVP by NetScaler Gx client (as a Diameter node).

holdOnSubscriberAbsence Set to Yes to hold packets until the subscriber session information is fetched from the PCRF server. If set to No, the default subscriber profile is applied until the subscriber session information is fetched from the PCRF server. If a default subscriber profile is not configured, an UNDEF is raised for expressions that use subscriber attributes.

requestTimeout Time, in seconds, within which the Gx CCR request must complete. If the request does not complete within this time, the request is retransmitted for the number of times specified in the requestRetryAttempts parameter. If request is not complete even after retransmitting, then the default subscriber profile is applied to this subscriber. If a default subscriber profile is not configured, an UNDEF is raised for expressions that use subscriber attributes. Zero disables the timeout. Default value: 10

requestRetryAttempts Specify the number of times a request must be retransmitted if the request does not complete within the value specified in the requestTimeout parameter. Default value: 3.

healthCheck Set to Yes to enable inline health check of Gx peer. When enabled, NetScaler sends DWR packets to the PCRF server. When the Gx session is idle, the healthCheck timer expires and DWR packets are initiated to check if the PCRF server is active. Default value: No.

Note: This parameter is supported in NetScaler 12.1 build 51.xx and later.

healthCheckTTL Time in seconds defined for watchdog supervision. After the health check TTL time expires, DWR is sent to check the status of the PCRF server. Any CCR, CCA, RAR, or RAA message resets the timer.

Minimum value: 6 seconds. Default value: 30 seconds.

Note: This parameter is supported in NetScaler 12.1 build 51.xx and later.

cerRequestTimeout Time in seconds defined for retransmission of the capabilities exchange request. NetScaler initiates a new CER message if it does not receive a CEA from the PCRF within this configured time.

If no response is received from the PCRF server, the appliance tries to send the CER message 5 times. If there is no response even after 5 CER messages, the appliance closes the TCP connection and reports a failure. If the timeout value is set to 0, the application health check feature is disabled.

Minimum value: 0 seconds. Default value: 0 seconds.

Note: This parameter is supported in NetScaler 12.1 build 51.xx and later.

revalidationTimeout Time, in seconds, after which the Gx CCR-U request is sent after any PCRF activity on a session. Any RAR or CCA message resets the timer. Zero value disables the idle timeout.

negativeTTL Time, in seconds, after which the Gx CCR-I request is resent for sessions that have not been resolved by PCRF because the server is down or there is no response or a failed response is received. Instead of polling the PCRF server constantly, a negative-TTL makes the appliance hold on to an unresolved session. For negative sessions, the appliance inherits the attributes from the default subscriber profile, if one is configured and from the RADIUS accounting message, if one is received. Zero value disables the negative sessions. The appliance does not install negative sessions even if a subscriber session could not be fetched. Default value: 600

negativeTTLLimitedSuccess Set to Yes to create negative session for partial success response code (2002). If set to No, regular session is created. Default value: No.

This parameter is supported in NetScaler 12.1 build 49.xx and later.

purgeSDBonGxFailure Set to Yes to flush subscriber database when the Gx interface fails. Gx interface failure includes both DWR monitoring (if enabled) and network healthCheck (if enabled). When set to Yes, all subscriber sessions are cleared.

Default value: No.

Note: This parameter is supported in NetScaler 12.1 build 51.xx and later.

servicePathAVP The AVP code in which PCRF sends the service path applicable to a subscriber.

servicePathVendorid The vendor id of the AVP in which PCRF sends the service path applicable to a subscriber.

To configure Gx interface by using the GUI

1. Navigate to **Traffic Management > Subscriber > Parameters**.
2. Click **Configure Subscriber Parameters**.
3. In Interface Type, select **GxOnly**.
4. Specify the values for the all required parameters.
5. Click **OK**.

Detect transport failures over established Gx connections

Note: This feature is supported in NetScaler 12.1 build 51.xx and later.

A NetScaler appliance can be configured to detect transport failures over established Gx connections by using device watchdog request (DWR) and device watchdog answer (DWA) messages.

After a Gx session is established, a predefined timer is triggered to detect if a session is idle. A DWR message is sent after the idle time timer expires. The idle time timer is reset each time the NetScaler appliance receives a message over an established Gx session. The peer's availability is confirmed based on the DWA message after a DWR message is sent.

- If the DWA is received, a peer's availability is confirmed and the watchdog timer is reset.
- If the DWA is not received and the watchdog timer expires twice consecutively, the session is considered as down and peer unavailable. The appliance closes the session and tries to establish a new session with the Gx peer.

When the watchdog timer expires twice without a response, the NetScaler appliance considers the Gx connection as faulty and initiates a connection closure. Once the connection is closed, no other watchdog request is sent towards the Gx peer. NetScaler appliance uses the next available Gx session for any PCRF requests.

To detect transport failures over established Gx connections by using the CLI At the command prompt, type:

```
1 set subscriber gxInterface [-vServer <string>] [-service <string>] [-healthCheck ( YES | NO )] [-healthCheckTTL<positive_integer>] [-cerRequestTimeout <positive_integer>] [-purgeSDBonGxFailure ( YES | NO )]
```

Example:


```
1 set subscriber gxInterface set subscriber gxInterface -vServer vdiam -healthCheck YES -healthCheckTTL 31 -cerRequestTimeout 15 purgeSDBonGxFailure YES
```

To detect transport failures over established Gx connections by using the GUI

1. Navigate to **Traffic Management > Subscriber > Parameters**.
2. Click **Configure Subscriber Parameters**.
3. In **Interface Type**, select **GxOnly**.
4. Specify the values for all required parameters.
5. Select **Health Check** and specify values for **Health Check TTL** and **CER Request Timeout**.
6. Click **OK**.

Gx interface in a cluster topology

The NetScaler appliance supports Gx interface in a cluster topology.

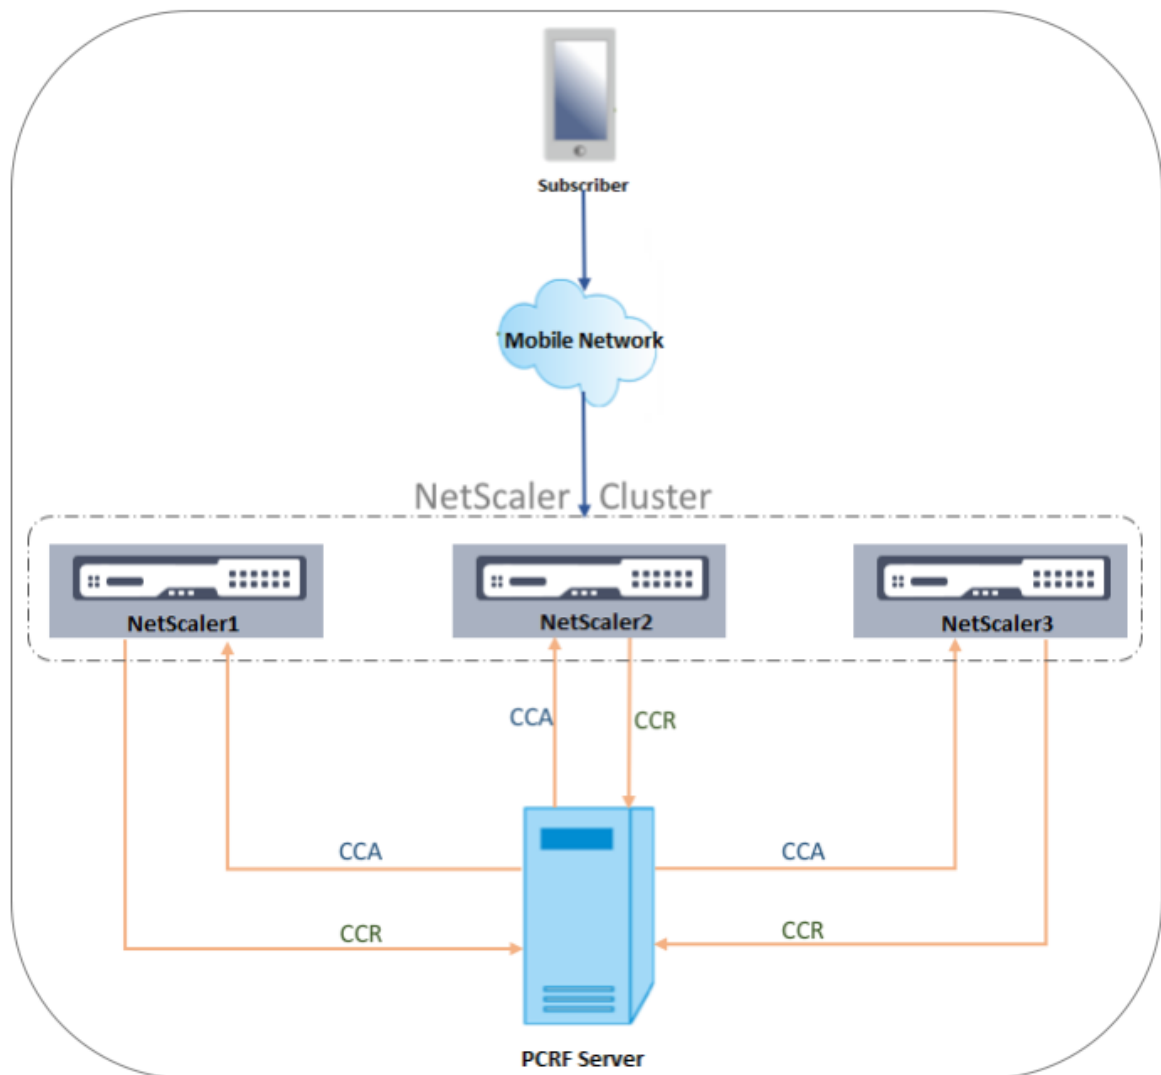

The NetScaler nodes in the cluster communicate with an external PCRF server through the Gx interface. When a node receives client traffic, the appliance performs the following:

- Sends a CCR-I request to the PCRF server to fetch subscriber information.
- The PCRF server responds with a CCR-A.
- The NetScaler node then stores the received subscriber information in its subscriber store and applies the rules to the client traffic.

Each node maintains an independent subscriber store and subscriber sessions are not synchronized to other nodes.

As per the Diameter Base Protocol RFC 6733, each peer must be configured with a unique diameter identity to communicate with other peers over the diameter protocol. Hence, in a cluster deployment, configuration of diameter identity is spotted. The diameter parameters (identity, realm, server close propagation) for each node can be configured individually by using the GUI or the CLI.

When a node is added to a cluster, it assumes the default diameter parameters (identity=netScaler.com, realm=com, serverClosePropogation=NO). After the nodes are added, the diameter parameters for each node must be configured.

To configure the diameter parameters by using the GUI

1. Navigate to **System > Settings**.
2. In the details pane, click **Change Diameter Parameters**.
3. In the Diameter Parameters page, select the NetScaler node for which you want to configure the diameter parameters and then click **Configure**.
4. In the Configure Diameter Parameters page, configure the diameter Identity, diameter Realm, and server Close Propagation for the selected node.
5. Click **OK**.

To configure the diameter parameters by using the CLI At the command prompt, type:

```
1 set ns diameter [-identity <string>] [-ownerNode <positive_integer>]
```

ARGUMENTS

Identity Diameter Identity is used to identify a Diameter node uniquely. Before setting up diameter configuration, the NetScaler appliance (as a Diameter node) must be assigned a unique diameter identity.

For example, set ns diameter -identity netScaler.com -ownerNode 1. So, whenever NetScaler system needs to use identity in diameter messages, it uses 'netScaler.com' as Origin-Host AVP as defined in RFC3588.

Maximum Length: 255

OwnerNode OwnerNode represents the ID of the cluster node for which the diameter ID is set. OwnerNode can be configured only through CLIP.

Minimum value: 0

Maximum value: 31

Example:

```
set ns diameter -identity netScaler1.com -ownerNode 1
```

Note:

The OwnerNode option is also added to the show ns diameter command.

Example:

```
1 show ns diameter -ownerNode <0-31>
```

When the show ns diameter command is executed, it displays the diameter parameters for a given node.

To configure a Gx interface for cluster deployment To set up a Gx interface, perform the following tasks:

Add a DIAMETER service for each Gx interface.

Example:

```
1 add service pcrf-svc1 203.0.113.1 DIAMETER 3868
2 add service pcrf-svc2 203.0.113.2 DIAMETER 3868
```

Add a DIAMETER load balancing virtual server and bind the services created in step 1 to this virtual server.

Example:

```
1 add lb vserver vdiam DIAMETER 0.0.0.0 0 -persistenceType DIAMETER -
  persistAVPno 263
2
3 bind lb vserver vdiam pcrf-svc1
4
5 bind lb vserver vdiam pcrf-svc2
```

Configure NetScaler diameter identity and realm on all the cluster nodes. Identity and realm are used as Origin-Host and Origin-Realm AVPs in diameter messages sent by the Gx client.

Example:

```
1 set ns diameter -identity node0.netscaler.com -realm netscaler.com -
  ownerNode 0
2
3 set ns diameter -identity node1.netscaler.com -realm netscaler.com -
  ownerNode 1
```

Configure the Gx interface to use the virtual server created in step 2 as the PCRF virtual server and set the PCRF realm as well.

Example:

```
1 set subscriber gxInterface -vServer vdiam -pcrfRealm pcrf.com
2
3 Set the subscriber interface type to GxOnly.
```

Example:

```
1 set subscriber param -interfaceType GxOnly
```

To see the Gx interface configuration and status, type:

```
1 show subscriber gxinterface
```

RADIUS interface

With a RADIUS interface, the packet gateway forwards the subscriber information in a RADIUS Accounting Start message to the appliance through the RADIUS interface when an IP-CAN session is established. A service of type RADIUSListener processes RADIUS Accounting messages. Add a shared secret for the RADIUS client. If a shared secret is not configured, the RADIUS message is silently dropped. The following example shows the commands for configuring a RADIUS interface. The commands are in boldface.

To set up a RADIUS interface, perform the following tasks:

Create a RADIUS listener service at the SNIP address where the RADIUS messages are received. For example:

```
1 add service srad1 192.0.0.206 RADIUSLISTENER 1813
```

Configure the subscriber RADIUS interface to use this service. For example:

```
1 set subscriber radiusInterface -listeningService srad1
```

Set the subscriber interface type to RadiusOnly. For example:

```
1 set subscriber param -interfaceType RadiusOnly
```

Add a RADIUS client specifying a subnet and shared secret. For example:

```
1 add radius client 192.0.2.0/24 -radkey client123
```

A subnet of 0.0.0.0/0 implies that it is the default shared secret for all clients. To see the RADIUS interface configuration and status, type:

```
1 show subscriber radiusInterface
```

RADIUS Interface parameters:

Radius Listener Service: srad1(UP)

Done

Example:

```
1 add service pcrf-svc1 203.0.113.1 DIAMETER 3868
```


```
2  
3 add service pcrf-svc2 203.0.113.2 DIAMETER 3868
```

ARGUMENTS

ListeningService Name of the RADIUS listening service that processes the RADIUS accounting requests.

svrState The state of the RADIUS listening service.

The following illustration shows the high-level traffic flow.

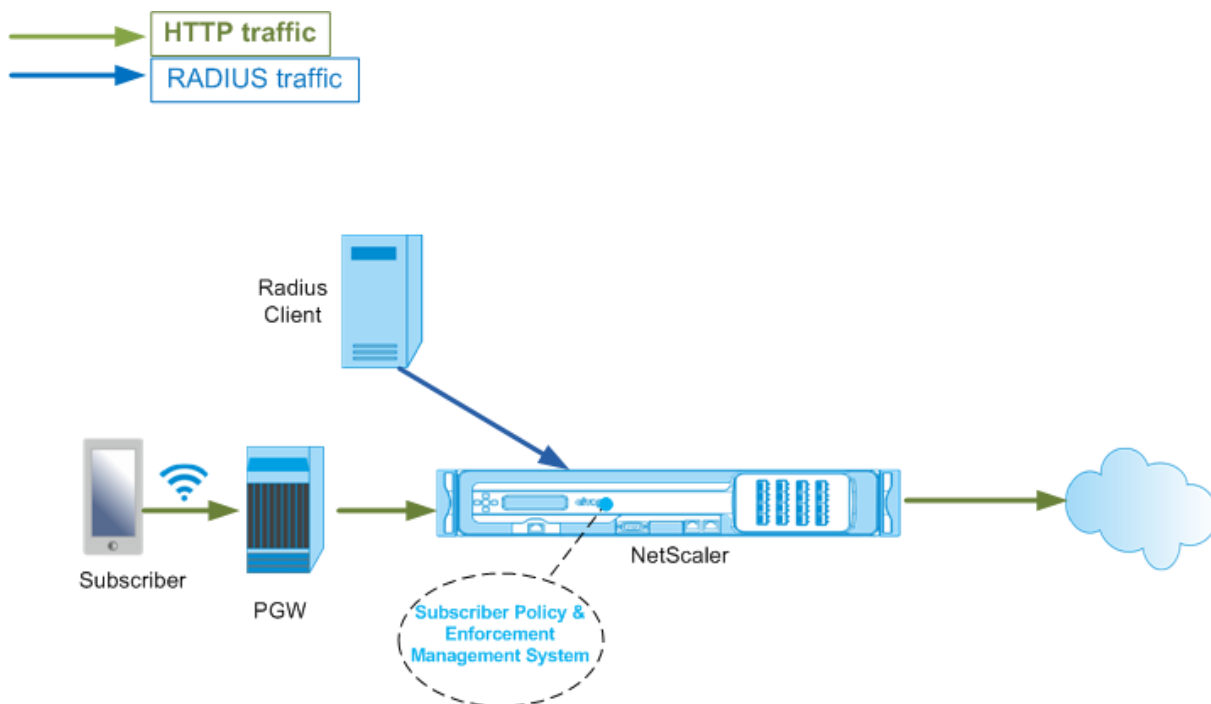

To configure RadiusOnly interface by using the GUI

1. Navigate to **Traffic Management > Subscriber > Parameters**.
2. Click **Configure Subscriber Parameters**.
3. In Interface Type, select **RadiusOnly**.
4. Specify the values for the all required parameters.
5. Click **OK**.

RADIUS and Gx interface


With a RADIUS and Gx interface, when an IP-CAN session is established, the packet gateway forwards the subscriber ID, such as the MSISDN, and Framed-IP address information about the subscriber to the appliance through the RADIUS interface. The appliance uses this subscriber ID to query the PCRF on the Gx interface to get the subscriber information. This is known as primary PCEF functionality. The following example shows the commands for configuring a RADIUS and Gx interface.

```

1 set subscriber param -interfaceType RadiusandGx
2 add service pcrf-svc 203.0.113.1 DIAMETER 3868
3 add lb vserver vdiam DIAMETER 0.0.0.0 0 -persistenceType DIAMETER -
  persistAVPno 263
4 bind lb vserver vdiam pcrf-svc
5 set subscriber gxInterface -vServer vdiam -pcrfRealm testrealm1.net -
  holdOnSubscriberAbsence YES -revalidationTimeout 60 -negativeTTL 120
6 add service srad1 192.0.0.206 RADIUSLISTENER 1813 set subscriber
  radiusInterface -listeningService srad1

```

The following illustration shows the high-level traffic flow.

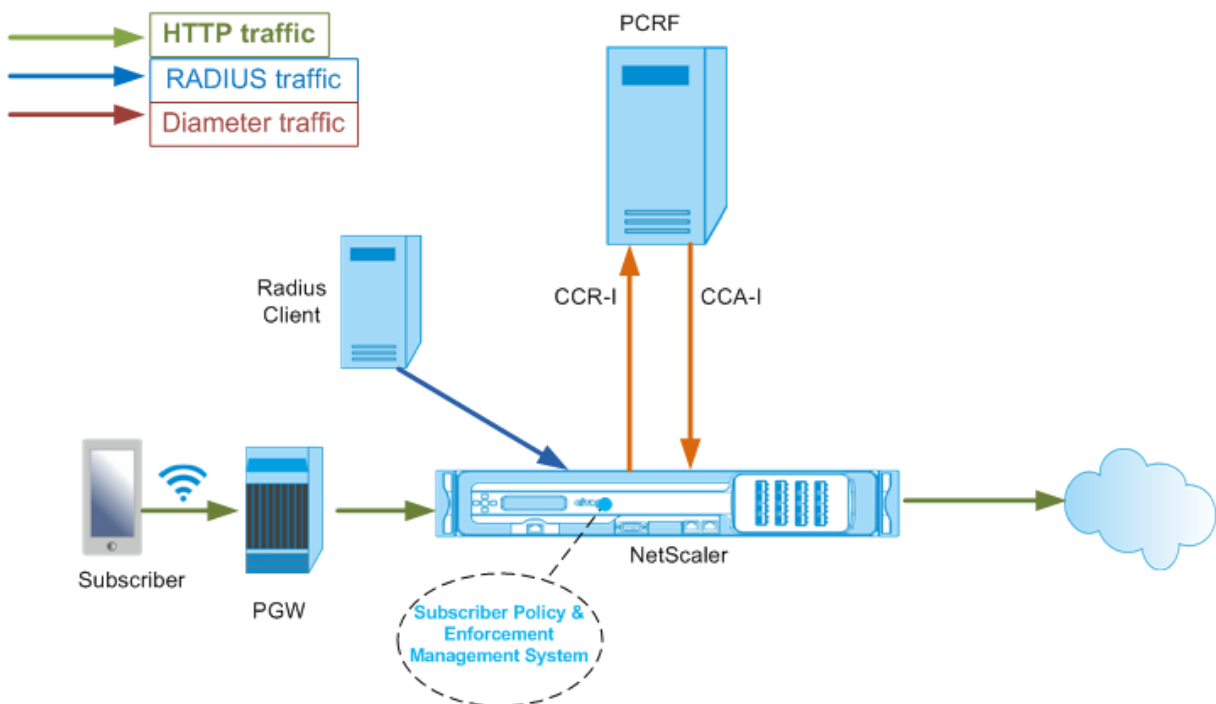

To configure RadiusAndGx interface by using the GUI

1. Navigate to **Traffic Management > Subscriber > Parameters**.
2. Click **Configure Subscriber Parameters**.
3. In Interface Type, select **RadiusAndGx**.
4. Specify the values for the all required parameters.
5. Click **OK**.

Configure static subscribers

You can configure the subscribers manually on the NetScaler appliance by using the command line or the configuration utility. You create static subscribers by assigning a unique subscriber ID and optionally associating a policy with each subscriber. The following examples show the commands for configuring a static subscriber.

In the following examples, **subscriptionIdvalue** specifies the international telephone number, and **subscriptionIdType** (E164 in this example) specifies the general format for international telephone numbers.

```
1   add subscriber profile 203.0.113.6 -subscriberRules policy1 policy2
    -subscriptionIdType E164 -subscriptionIdvalue 98767543211
2   add subscriber profile 2002::a66:e8d3/64 -subscriberRules policy1
    policy3 -subscriptionIdtype E164 -subscriptionIdvalue
    98767543212
3   add subscriber profile 203.0.24.2 10 -subscriberRules policy2
    policy3 -subscriptionIdtype E164 -subscriptionIdvalue
    98767543213
```

To view the configured subscriber profiles, type:

```
show subscriber profile
```

```
1   > show subscriber profile
2
3   1) Subscriber IP: 203.0.24.2 VLAN:10
4     Profile Attributes:
5         Active Rules: policy2, policy3
6         Subscriber Id Type: E164
7         Subscriber Id Value: 98767543213
8   2) Subscriber IP: 2002::/64
9     Profile Attributes:
10        Active Rules: policy1, policy3
11        Subscriber Id Type: E164
12        Subscriber Id Value: 98767543212
13  3) Subscriber IP: 203.0.113.6
14    Profile Attributes:
15        Active Rules: policy1, policy2
16        Subscriber Id Type: E164
17        Subscriber Id Value: 98767543211
18
19    Done
```

Default subscriber profile

A default subscriber profile is used if the subscriber IP address is not found in the subscriber session store on the appliance. In the following example, a default subscriber profile is added with the sub-

subscriber rule policy1.

```
1 > add subscriber profile * -subscriberRules policy1
```

View and clear subscriber sessions

Use the following command to display all the static and dynamic subscriber sessions.

```
show subscriber sessions
```

```
1 > show subscriber sessions
2 1) Subscriber IP: 2002::/64
3     Session Attributes:
4         Active Rules: policy1, policy3
5         Subscriber Id Type: E164
6         Subscriber Id Value: 98767543212
7 2) Subscriber IP: *
8     Session Attributes:
9         Active Rules: policy1
10 3) Subscriber IP: 203.0.24.2 VLAN:10
11     Session Attributes:
12         Active Rules: policy2, policy3
13         Subscriber Id Type: E164
14         Subscriber Id Value: 98767543213
15 4) Subscriber IP: 203.0.113.6
16     Session Attributes:
17         Active Rules: policy1, policy2
18         Subscriber Id Type: E164
19         Subscriber Id Value: 98767543211
20 5) Subscriber IP: 192.168.0.11
21     Session Attributes:
22         Idle TTL remaining: 361 Seconds
23         Active Rules: policy1
24         Subscriber Id Type: E164
25         Subscriber Id Value: 1234567811
26         Service Path: policy1
27         AVP(44): 34 44 32 42 42 38 41 43 2D 30 30 30 30 30 30
28                 31 31
29         AVP(257): 00 01 C0 A8 0A 02
30         PCRF-Host: host.pcrf.com
31         AVP(280): 74 65 73 74 2E 63 6F 6D
32 Done
```

Use the following command to clear a single session or the complete session store. If you do not specify an IP address, the complete subscriber session store is cleared.

```
1 clear subscriber sessions <ip>
```

Subscriber policy enforcement & management system

The NetScaler appliance uses the subscriber's IP address as the key to the subscriber policy enforcement and management system.

You can add subscriber expressions to read the subscriber information available in the Subscriber Policy Enforcement & Management System. These expressions can be used with policy rules and actions that are configured for NetScaler features, such as integrated caching, rewrite, responder, and content switching.

The following commands are an example of adding a subscriber-based responder action and policy. The policy evaluates to true if the subscriber rule value is "pol1."

```
1    add responder action error_msg respondwith "HTTP/1.1 403 OK\r\n\r\n" +
      " You are not authorized to access Internet"
2    add responder policy no_internet_access "SUBSCRIBER.RULE_ACTIVE("
      pol1)" error_msg
```

The following example shows the commands to add a subscriber-based rewrite action and policy. The action inserts an HTTP header "X-Nokia-MSISDN" by using the value of AVP(45) in the subscriber session.

```
1    > add rewrite action AddHDR-act insert_http_header X-Nokia-MSISDN "
      SUBSCRIBER.AVP(45).VALUE"
2    > add rewrite policy AddHDR-pol "HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.
      URL).EQUALS_ANY("patset-test")" AddHDR-act
```

In the following example, two policies are configured on the appliance. When the appliance checks the subscriber information and the subscriber rule is cache_enable, it performs caching. If the subscriber rule is cache_disable, the appliance does not perform caching.

```
1    > add cache policy nocachepol -rule "SUBSCRIBER.RULE_ACTIVE("
      cache_disable)" - action NOCACHE
2    > add cache policy cachepol -rule "SUBSCRIBER.RULE_ACTIVE("
      cache_enable)" - action CACHE -storeInGroup cgl
```

For a complete list of expressions starting with "SUBSCRIBER," see the Policy Configuration Guide.

Important

NetScaler software release 12.1 supports IPANDVLAN key lookup method when the subscriber interface is set to GxOnly. For details, see IP address and VLAN ID key lookup method.

IPv6 prefix based subscriber sessions

A telco user is identified by the IPv6 prefix rather than the complete IPv6 address. The NetScaler appliance now uses the prefix instead of the complete IPv6 address (/128) to identify a subscriber in the

database (subscriber store). For communicating with the PCRF server (for example, in a CCR-I message), the appliance now uses the framed-IPv6-Prefix AVP instead of the complete IPv6 address. The default prefix length is /64, but you can configure the appliance to use a different value.

To configure the IPv6 prefix by using the command line

```
set subscriber param [-ipv6PrefixLookupList <positive_integer> ...]
```

The first example command below sets a single prefix and the second example command sets multiple prefixes.

```
1 set subscriber param -ipv6PrefixLookupList 64
2 set subscriber param -ipv6PrefixLookupList 64 72 96
```

To configure the IPv6 prefix by using the configuration utility

1. Navigate to **Traffic Management > Subscriber > Parameters**.
2. In the details pane, under **Settings**, click **Configure Subscriber Parameters** and in **IPv6 Prefix Lookup List**, specify one or more prefixes.

IP address and VLAN ID key lookup method

The NetScaler appliance uses the subscriber's IP address as the key lookup method to the subscriber policy enforcement and management system. This method is not effective if the IP addresses are overlapping. In such cases, you can use the VLAN ID as an additional subscriber lookup type. IPANDVLAN key lookup method is supported only when the subscriber interface is set to GxOnly. When IPANDVLAN is configured as the lookup method, the NetScaler appliance performs the following:

- Includes the originating VLAN ID in the Gx query for IPv4 subscribers.
- Includes the Gx VLAN AVP in all Gx responses. However, if there is a VLAN ID mismatch, the appliance ignores the responses.

For example, if the appliance sends a CCR-I with GxSessionId-a:IPv4-b:VLAN-c and the response contains GxSessionId-a:IPv4-b:VLAN-d, the response is dropped and a default subscriber entry is created.

Note

- Interface type RadiusAndGx and RadiusOnly cannot be configured together with key type IPANDVLAN.
- If the traffic is from an IPv6 address, the NetScaler appliance uses the IP lookup method.

To configure IP or IPANDVLAN as the key lookup method by using the CLI

At the command prompt, type:

```
1 set subscriber param [-keytype ( IP | IPANDVLAN )] [-interfaceType <
  interfaceType>]
```

Example:

```
1 set subscriber param -keytype IPANDVLAN -interfaceType GxOnly
2
3 set subscriber param -keytype IP -interfaceType GxOnly
```

Note

Changing the keytype parameter from IP to IPANDVLAN and conversely clears all subscriber data.

VLAN parameter

The VLAN parameter is also added for the following commands.

```
1 add subscriber profile <ip>@ [-vlan]
2
3 set subscriber profile <ip>@ [-vlan] [-subscriptionIdType <
  subscriptionIdType>]
4
5 show subscriber profile [<ip>@] [-vlan]
6
7 rm subscriber profile <ip>@ [-vlan <positive_integer>]
```

Arguments

ip Represents the subscriber IP address. This is a mandatory argument and cannot be changed after the subscriber profile is added.

vlan Represents the VLAN number on which the subscriber is located. The VLAN number cannot be changed after the subscriber profile is added.

Minimum value: 1

Maximum value: 4096

```
1 add subscriber profile 192.0.2.23 10
2
3 set subscriber profile 192.0.2.23 10 -subscriptionIdtype E164
4
5 show subscriber profile 192.0.2.23 10
```

```
6
7 rm subscriber profile 192.0.2.23 10
```

To configure IP or IPANDVLAN as the key lookup method by using the GUI

1. Navigate to **Traffic Management > Subscriber > Parameters**.
2. Click **Configure Subscriber Parameters**.
3. In **Key Type**, select **IP** or **IPANDVLAN** as per your requirement.
4. Complete the configuration and click **OK**.

Idle session management of subscriber sessions in a Telco network

Subscriber session cleanup on a NetScaler appliance is based on control plane events, such as a RADIUS Accounting Stop message, a Diameter RAR (session release) message, or a “clear subscriber session” command. In some deployments, the messages from a RADIUS client or a PCRF server might not reach the appliance. Also, during heavy traffic, the messages might be lost. A subscriber session that is idle for a long time continues to consume memory and IP resources on the NetScaler appliance. The idle session management feature provides configurable timers to identify idle sessions, and cleans up these sessions based on the specified action.

A session is considered idle if no traffic from this subscriber is received on the data plane or the control plane. You can specify an update, terminate (inform PCRF and then delete the session), or delete (without informing PCRF) action. The action is taken only after the session is idle for the time specified in the idle timeout parameter.

To configure the idle session timeout and the associated action by using the command line

```
1 set subscriber param [-idleTTL <positive_integer>] [-idleAction <
  idleAction>]
```

Examples:

```
1 set subscriber param -idleTTL 3600 -idleAction ccrTerminate
2
3 set subscriber param -idleTTL 3600 -idleAction ccrUpdate
4
5 set subscriber param -idleTTL 3600 -idleAction delete
```

To disable the idle session timeout, set the idle timeout to zero.

```
set subscriber param -idleTTL 0
```

To configure the idle session timeout and the associated action by using the configuration utility

1. Navigate to **Traffic Management > Subscriber > Parameters**.
2. In the details pane, under **Settings**, click **Configure Subscriber Parameters** and specify an **Idle Time** and **Idle Action**.

Subscriber session event logging

If you enable subscriber logging, you can track the RADIUS and Gx control plane messages specific to a subscriber, and use the historical data to analyze subscriber activities. Some of the key attributes are MSISDN and time stamp. The following attributes are also logged:

- Session Event (Install, Update, Delete, Error)
- Gx Message Type (CCR-I, CCR-U, CCR-T, RAR)
- Radius Message Type (Start, Stop)
- Subscriber IP
- SubscriberID Type (MSISDN(E164), IMSI)
- SubscriberID value

By using these logs, you can track users by IP address and, if available, MSISDN.

You can enable subscriber session logging to a local or remote syslog or nlog server. The following example shows how to enable subscriber logging to a remote syslog server.

```
1 > add syslogAction sysact1 192.0.2.0 -loglevel EMERGENCY ALERT
    CRITICAL ERROR WARNING NOTICE INFORMATIONAL -subscriberlog
    enabled
```

From these logs, you can learn about any activity related to a user, such as the time when a session was updated, deleted, or created (installed). Additionally, error messages are also logged.

Examples:

1. The following log entries are examples of RADIUS and Gx session creation, session update, and session deletion.

```
09/30/2015:16:29:18 GMT Informational 0-PPE-0 : default SUBSCRIBER SESSION_EVENT
147 0 : Session Install, GX MsgType: CCR-I, RADIUS MsgType: Start, IP: 100.10.1.1, ID: E164 -
30000000001
09/30/2015:16:30:18 GMT Informational 0-PPE-0 : default SUBSCRIBER SESSION_EVENT
148 0 : Session Update, GX MsgType: CCR-U, IP: 100.10.1.1, ID: E164 - 30000000001
09/30/2015:17:27:56 GMT Informational 0-PPE-0 : default SUBSCRIBER SESSION_EVENT
```


To configure subscriber aware LSN session termination by using the GUI

1. Navigate to **System > Large Scale NAT**.
2. In **Getting started**, click **Set LSN Parameter**.
3. Set the **Subscriber Aware Session Removal parameter**.

Troubleshooting

If your deployment is not working as expected, use the following commands to troubleshoot:

- show subscriber gxinterface
This command's output can include the following error messages (shown here with suggested responses):
 - Gx Interface Not Configured-Use set subscriber param command to configure the correct interface type.
 - PCRF not configured-Configure a Diameter vServer or Service on GxInterface-Use the set subscriber gx interface command to assign a Diameter virtual server or service to this interface.
 - PCRF is not ready-Check corresponding vserver/service for more details-Use the show LB vserver or show service command to check the state of the service.
 - NetScaler is waiting for CEA from PCRF-Capability negotiation between the PCRF and NetScaler might be failing. This could be an intermittent state. If it persists, check the DIAMETER settings on your PCRF server.
 - Memory is not configured to store subscriber sessions. Please use 'set extendedmemoryparam -memlimit <>' -Use the set extendedmemoryparam command to configure extended memory.
- show subscriber radiusinterface
If "Not Configured" is the output of this command, use the set subscriber radiusinterface command to specify a RADIUSListener service.

If subscriber logging is enabled, you can get more detailed information from the log files.

Subscriber aware traffic steering


May 2, 2023

Traffic steering directs subscriber traffic from one point to another. When a subscriber connects to the network, the packet gateway associates an IP address with the subscriber and forwards the data

packet to the NetScaler appliance. The appliance communicates with the PCRF server over the Gx interface to get the policy information. Depending on the policy information, the appliance performs one of the following actions:

- Forward the data packet to another set of services (as shown in the following illustration).
- Drop the packet.
- Perform only Large Scale NAT (LSN), if LSN is configured on the appliance.

The values shown in the following figure are configured in the CLI procedure that follows the figure. A content switching virtual server on the NetScaler appliance directs requests to the value added services or skips them, depending on the defined rule, and then sends the packet out to the Internet after performing LSN.

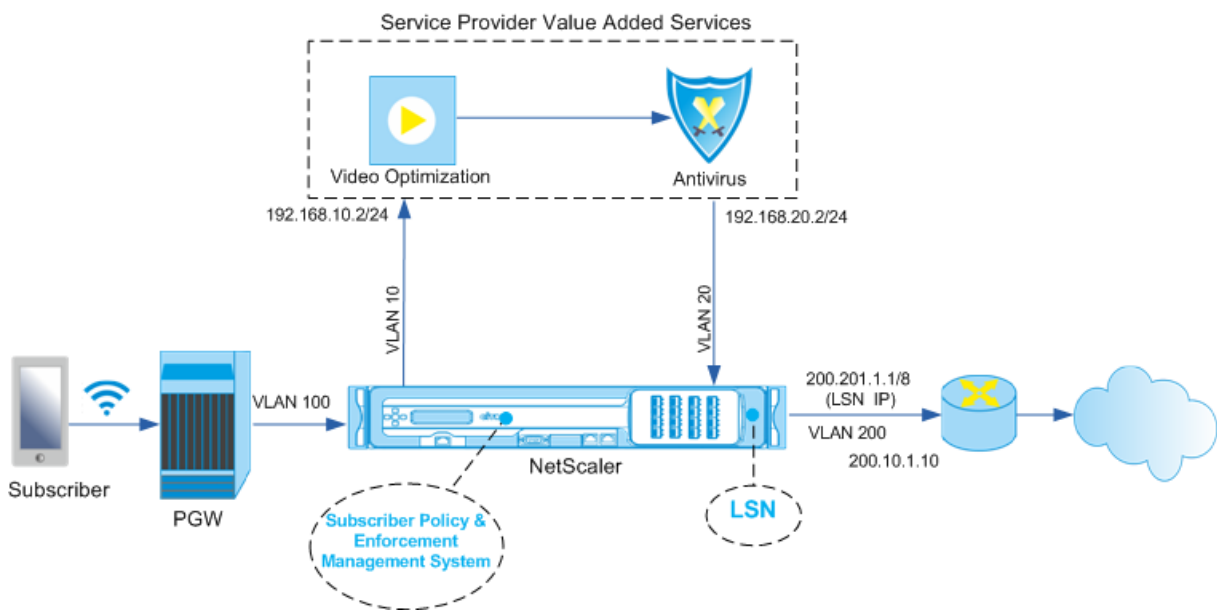

To configure traffic steering for the above deployment by using the CLI

Add the appliance's subnet IP (SNIP) addresses.

Example:

```

1 add ns ip 192.168.10.1 255.255.255.0 -type snip
2
3 add ns ip 192.168.20.1 255.255.255.0 -type snip
4
5 add ns ip 100.100.100.1 255.0.0.0 -type snip
6
7 add ns ip 200.200.200.1 255.0.0.0 -type snip
8
9 add ns ip 100.1.1.1 255.0.0.0 -type snip
10
11 add ns ip 200.201.1.1 255.0.0.0 -type snip

```

Add the VLANs. VLANs help the appliance identify the source of the traffic. Bind the VLANs to the interfaces and subnet IP addresses.

Example:

```
1 add vlan 10
2
3 add vlan 20
4
5 add vlan 100
6
7 add vlan 200
8
9 bind vlan 10 -ifnum 1/4 -tagged -IPAddress 192.168.10.1 255.255.255.0
10
11 bind vlan 20 -ifnum 1/4 -tagged -IPAddress 192.168.20.1 255.255.255.0
12
13 bind vlan 100 -ifnum 1/2 -tagged -IPAddress 100.1.1.1 255.0.0.0
14
15 bind vlan 200 -ifnum 1/3 -tagged -IPAddress 200.1.1.1 255.0.0.0
```

Specify the VLAN on which the subscriber traffic arrives on the appliance. Specify the service path AVP that tells the appliance where to look for the service path name within the subscriber session. For primary PCEF functionality, specify the interfaceType as RadiusAndGx.

Example:

```
1 set ns param -servicePathIngressVLAN 100
2
3 set subscriber gxinterface -servicepathAVP 1001 1005 -
  servicepathVendorid 10415
4
5 set subscriber param -interfaceType RadiusAndGx
```

Configure a service and virtual server of type Diameter, and bind the service to the virtual server. Then, specify the PCRF realm and subscriber Gx interface parameters. For primary PCEF functionality, configure a RADIUS listener service and RADIUS interface.

Example:

```
1 add service sd1 10.102.232.200 DIAMETER 3868
2
3 add lb vserver vdiam DIAMETER 0.0.0.0 0 -persistenceType DIAMETER -
  persistAVPno 263
4
5 bind lb vserver vdiam sd1
6
7 set ns diameter -identity netscaler.sc1.net -realm pcrf1.net
8
9 set subscriber gxInterface -vServer vdiam -pcrfRealm pcrf1.net -
  holdOnSubscriberAbsence YES -idleTTL 1200 -negativeTTL 120
10
```

```
11 add service srad1 10.102.232.236 RADIUSListener 1813
12
13 set subscriber radiusInterface -listeningService srad1
```

Add service functions to associate a VAS with an ingress VLAN. Add a service path to define the chain, that is, specify the VAS that the packet must be sent to and the order in which it must go to that VAS. The service path name is usually sent by the PCRF. However, the service path of the default subscriber profile (*) applies if any of the following is true:

- PCRF does not have the subscriber information.
- The subscriber information does not include this AVP.
- The appliance is unable to query the PCRF. For example, the service representing the PCRF is DOWN.

The service path AVP that contains this name must already be configured as part of the global configuration. Bind the service function to the service path. The service index specifies the order in which the VAS is added to the chain. The highest number (255) indicates the beginning of the chain.

Example:

```
1 add ns servicefunction SF1 -ingressVLAN 20
2
3 add ns servicepath pol1
4
5 bind ns servicepath pol1 -servicefunction SF1 -index 255
6
7 add subscriber profile * -subscriberrules default_path
```

Add the LSN configuration. That is, define the NAT pool and identify the clients for which the appliance must perform LSN.

```
1 add lsn pool pool1
2
3 bind lsn pool pool1 200.201.1.1
4
5 add lsn client client1
6
7 bind lsn client client1 -network 100.0.0.0 -netmask 255.0.0.0
8
9 add lsn group group1 -clientname client1
10
11 bind lsn group group1 -poolname pool1
```

The appliance performs LSN by default. To override LSN, you must create a net profile with the `overrideLsn` parameter enabled, and bind this profile to all the load balancing virtual servers that are configured for value added services (VASs).

Example:

```
1 add netprofile np1
2
3 set netprofile np1 -overrideLsn ENABLED
4
5 set lb vserver vs1 -netprofile np1
```

Configure the VAS on the appliance. This includes creating the services and virtual servers and then binding the services to the virtual servers.

```
1 add service vas1 192.168.10.2 ANY 80 -usip YES
2
3 add service sint 200.10.1.10 ANY 80 -usip YES
4
5 add lb vserver vs1 ANY -m MAC -l2Conn ON
6
7 add lb vserver vint ANY -m MAC -l2Conn ON
8
9 bind lb vserver vs1 vas1
10
11 bind lb vserver vint sint
```

Add the content switching (CS) configuration. This includes virtual servers, policies, and their associated actions. The traffic arrives at the CS virtual server and is then redirected to the appropriate load balancing virtual server. Define expressions that associate a virtual server with a service function.

Example:

```
1 add cs vserver cs1 ANY * 80 -l2Conn ON
2
3 add cs action csact1 -targetLBVserver vs1
4
5 add cs action csactint -targetLBVserver vint
6
7 add cs policy cspol1 -rule SUBSCRIBER.SERVICEPATH.IS_NEXT("SF1") &&
   SYS.VSERVER("vs1").STATE.EQ(UP)" -action csact1
8
9 bind cs vserver cs1 -policyName cspol1 -priority 110
10
11 bind cs vserver cs1 -lbvserver vint
```

To configure traffic steering on the appliance by using the GUI

1. Navigate to **System > Network > IPs** and add the subnet IP addresses.
2. Navigate to **System > Network > VLANs** and add VLANs, Bind the VLANs to the interfaces and subnet IP addresses.
3. Navigate to **Traffic Management > Service Chaining > Configure Service Path Ingress VLAN** and specify an ingress VLAN.

4. Navigate to **Traffic Management > Subscriber > Parameters > Configure Subscriber Parameters** and specify the following:
 - Interface Type: Specify **RadiusAndGx**.
 - Configure a diameter virtual server, PCRF realm, and the subscriber GX interface parameters.
 - Specify the RADIUS interface parameters.
5. Navigate to **Traffic Management > Service Chaining > Service Function** and add service functions to associate a value-added service with an ingress VLAN.
6. Navigate to **System > Network > Large Scale NAT**. Click **Pools** and add a pool. Click **Clients** and add a client. Click **Groups** and add a group and specify the client. Edit the group and bind the pool to this group.
7. Navigate to **System > Network > Net Profiles** and add a net profile. Select **Override LSN**. Optionally, navigate to **System > Network > Settings > Configure Layer 3 Parameters** and verify that **Override LSN** is not selected.
8. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and configure the virtual servers and value-added services on the appliance. Bind the services and the net profile to the virtual server.
9. Navigate to **Traffic Management > Content Switching > Virtual Servers** and configure a virtual server, policy, and action. Specify the target load balancing virtual server.

To configure service chaining on the appliance by using the GUI

1. Navigate to **System > Network > IPs** and add the subnet IP addresses.
2. Navigate to **System > Network > VLANs** and add VLANs, Bind the VLANs to the interfaces and subnet IP addresses.
3. Navigate to **Traffic Management > Service Chaining > Configure Service Path Ingress VLAN** and specify an ingress VLAN.
4. Navigate to **Traffic Management > Subscriber > Parameters > Configure Subscriber Parameters** and specify the following:
 - Interface Type: Specify **RadiusAndGx**.
 - Configure a diameter virtual server, PCRF realm, and the subscriber GX interface parameters.
 - Specify the RADIUS interface parameters.
5. Navigate to **Traffic Management > Service Chaining > Service Function** and add service functions to associate a value-added service with an ingress VLAN.
6. Navigate to **System > Network > Large Scale NAT**. Click **Pools** and add a pool. Click **Clients** and add a client. Click **Groups** and add a group and specify the client. Edit the group and bind the pool to this group.

7. Navigate to **System > Network > Net Profiles** and add a net profile. Select **Override LSN**. Optionally, navigate to **System > Network > Settings > Configure Layer 3 Parameters** and verify that **Override LSN** is not selected.
8. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and configure the virtual servers and value-added services on the appliance. Bind the services and the net profile to the virtual server.
9. Navigate to **Traffic Management > Content Switching > Virtual Servers** and configure a virtual server, policy, and action. Specify the target load balancing virtual server.

Subscriber aware service chaining


May 2, 2023

With the huge increase in the data traffic passing through telco networks, it is no longer feasible for service providers to steer all the traffic through all the value added services (VAS). A service provider should be able to optimize usage of VAS and intelligently steer traffic to improve the user experience. For example, video optimization is not required for traffic that does not include a video. Moreover, if a subscriber is connected to a 4G network, content can be streamed in high definition (HD), and video optimization might not be needed. However, video optimization improves the experience for a user in a 3G network. Similarly, caching provides a faster and better user experience and can be enabled depending on the subscriber plan. Another example of VAS is parental control. If parents provide a mobile handset to a minor child, they would like some kind of control over the websites that their child visits.

To do the above and more, service providers must be able to provide value-added services on a per-subscriber basis. In other words, entities in the service provider network must be capable of extracting the subscriber information and intelligently steering the packet on the basis of this information.

Service chaining determines the set of services through which the traffic from a subscriber must pass before going to the Internet. Instead of sending all the traffic to all the services, the NetScaler intelligently routes all requests from a subscriber to a specific set of services on the basis of the policy defined for that subscriber.

The following figure shows the entities involved in service chaining. The values shown are configured in the procedure that follows the figure. A content switching virtual server on the NetScaler appliance directs requests to the value added services or skips them, depending on the defined rule, and then sends the packet out to the Internet after performing LSN.

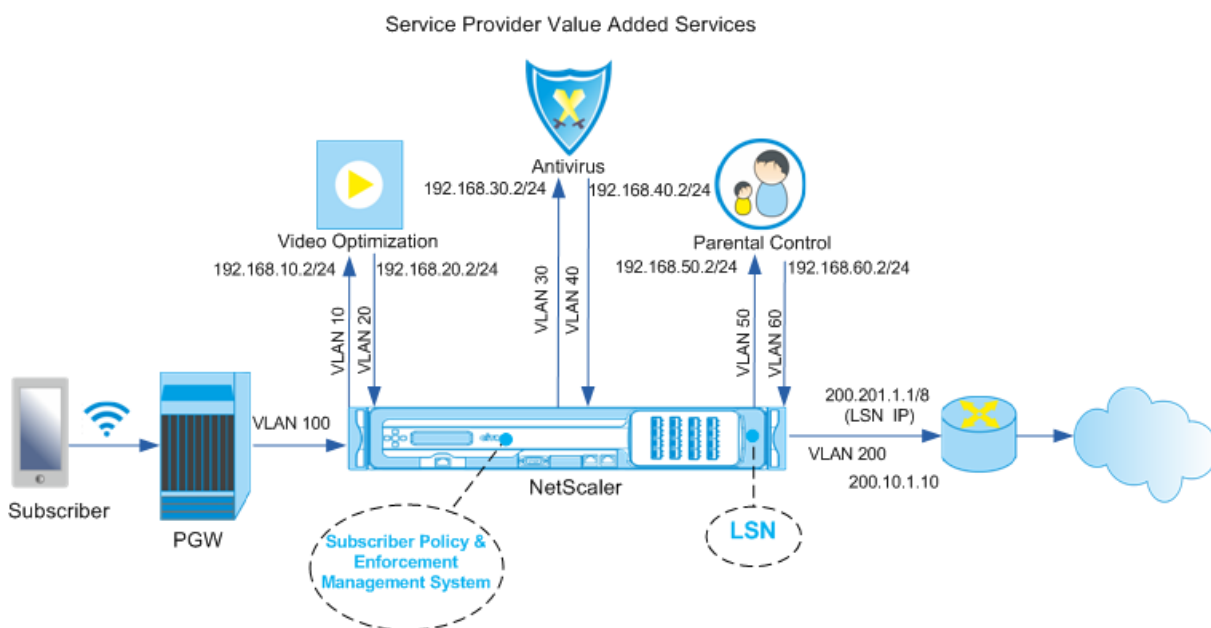

To configure service chaining for the above deployment by using the CLI

Add the appliance’s subnet IP (SNIP) addresses.

Example:

```

1 add ns ip 192.168.10.1 255.255.255.0 -type snip
2
3 add ns ip 192.168.20.1 255.255.255.0 -type snip
4
5 add ns ip 192.168.30.1 255.255.255.0 -type snip
6
7 add ns ip 192.168.40.1 255.255.255.0 -type snip
8
9 add ns ip 192.168.50.1 255.255.255.0 -type snip
10
11 add ns ip 192.168.60.1 255.255.255.0 -type snip
12
13 add ns ip 100.1.1.1 255.0.0.0 -type snip
14
15 add ns ip 200.201.1.1 255.0.0.0 -type snip
    
```

Add the VLANs. VLANs help the appliance identify the source of the traffic. Bind the VLANs to the interfaces and subnet IP addresses. Add an ingress and an egress VLAN for each VAS.

Example:

```

1 add vlan 10
2
3 add vlan 20
4
    
```

```
5 add vlan 30
6
7 add vlan 40
8
9 add vlan 50
10
11 add vlan 60
12
13 add vlan 100
14
15 add vlan 200
16
17 bind vlan 10 -ifnum 1/4 -tagged -IPAddress 192.168.10.1 255.255.255.0
18
19 bind vlan 20 -ifnum 1/4 -tagged -IPAddress 192.168.20.1 255.255.255.0
20
21 bind vlan 20 -ifnum 1/4 -tagged -IPAddress 192.168.30.1 255.255.255.0
22
23 bind vlan 20 -ifnum 1/4 -tagged -IPAddress 192.168.40.1 255.255.255.0
24
25 bind vlan 20 -ifnum 1/4 -tagged -IPAddress 192.168.50.1 255.255.255.0
26
27 bind vlan 20 -ifnum 1/4 -tagged -IPAddress 192.168.60.1 255.255.255.0
28
29 bind vlan 100 -ifnum 1/2 -tagged -IPAddress 100.1.1.1 255.0.0.0
30
31 bind vlan 200 -ifnum 1/3 -tagged -IPAddress 200.201.1.1 255.0.0.0
```

Specify the VLAN on which the subscriber traffic arrives on the appliance. Specify the service path AVP that tells the appliance where to look for the service path name within the subscriber session. For primary PCEF functionality, specify the interfaceType as RadiusAndGx.

Example:

```
1 set ns param -servicePathIngressVLAN 100
2
3 set subscriber gxinterface -servicepathAVP 1001 1005 -
  servicepathVendorid 10415
4
5 set subscriber param -interfaceType RadiusAndGx
```

Configure a service and virtual server of type Diameter, and bind the service to the virtual server. Then, specify the PCRF realm and subscriber Gx interface parameters. For primary PCEF functionality, configure a RADIUS listener service and RADIUS interface.

Example:

```
1 add service sd1 10.102.232.200 DIAMETER 3868
2
3 add lb vserver vdiam DIAMETER 0.0.0.0 0 -persistenceType DIAMETER -
  persistAVPno 263
4
```



```
5 bind lb vserver vdiam sd1
6
7 set ns diameter -identity netscaler.sc1.net -realm pcrf1.net
8
9 set subscriber gxInterface -vServer vdiam -pcrfRealm pcrf1.net -
  holdOnSubscriberAbsence YES -idleTTL 1200 -negativeTTL 120
10
11 add service srad1 10.102.232.236 RADIUSListener 1813
12
13 set subscriber radiusInterface -listeningService srad1
```

Add service functions to associate a VAS with an ingress VLAN. Add a service path to define the chain, that is, specify the VAS that the packet must be sent to and the order in which it must go to that VAS. The service path name is usually sent by the PCRF. However, the service path of the default subscriber profile (*) applies if any of the following is true:

- PCRF does not have the subscriber information.
- The subscriber information does not include this AVP.
- The appliance is unable to query the PCRF. For example, the service representing the PCRF is DOWN.

The service path AVP that contains this name must be configured as part of the global configuration earlier. Bind the service function to the service path. The service index specifies the order in which the VAS is added to the chain. The highest number (255) indicates the beginning of the chain.

Example:

```
1 add ns servicefunction SF1 -ingressVLAN 20
2
3 add ns servicefunction SF2 -ingressVLAN 40
4
5 add ns servicefunction SF3 -ingressVLAN 60
6
7 add ns servicepath pol1
8
9 bind ns servicepath pol1 -servicefunction SF1 -index 255
10
11 bind ns servicepath pol1 -servicefunction SF2 -index 254
12
13 bind ns servicepath pol1 -servicefunction SF3 -index 253
14
15 add ns servicepath pol2
16
17 bind ns servicepath pol2 -servicefunction SF2 -index 255
18
19 add ns servicepath pol3
20
21 bind ns servicepath pol3 -servicefunction SF1 -index 255
22
23 add subscriber profile * -subscriberrules default_path
```

Add the LSN configuration. That is, define the NAT pool and identify the clients for which the appliance must perform LSN.

Example:

```
1 add lsn pool pool1
2
3 bind lsn pool pool1 200.201.1.1
4
5 add lsn client client1
6
7 bind lsn client client1 -network 100.0.0.0 -netmask 255.0.0.0
8
9 add lsn group group1 -clientname client1
10
11 bind lsn group group1 -poolname pool1
```

The appliance performs LSN by default. To override LSN, you must create a net profile with `overrideLsn` parameter enabled and bind this profile to all the load balancing virtual servers that are configured for value added services (VASs).

Example:

```
1 add netprofile np1
2
3 set netprofile np1 -overrideLsn ENABLED
4
5 set lb vserver vs1 -netprofile np1
```

Configure the VAS on the appliance. This includes creating the services and virtual servers and then binding the services to the virtual servers.

Example:

```
1 add service vas1 192.168.10.2 ANY 80 -usip YES
2
3 add service vas2 192.168.30.2 ANY 80 -usip YES
4
5 add service vas3 192.168.50.2 ANY 80 -usip YES
6
7 add service sint 200.10.1.10 ANY 80 -usip YES
8
9 add lb vserver vs1 ANY -m MAC -l2Conn ON
10
11 add lb vserver vs2 ANY -m MAC -l2Conn ON
12
13 add lb vserver vs3 ANY -m MAC -l2Conn ON
14
15 add lb vserver vint ANY -m MAC -l2Conn ON
16
17 bind lb vserver vs1 vas1
18
19 bind lb vserver vs2 vas2
```

```
20
21 bind lb vserver vs3 vas3
22
23 bind lb vserver vint sint
```

Add the content switching (CS) configuration. This includes virtual servers, policies, and their associated actions. The traffic arrives at the CS virtual server and is then redirected to the appropriate load balancing virtual server. Define expressions that associate a virtual server with a service function.

Example:

```
1 add cs vserver cs1 ANY * 80 -l2Conn ON
2
3 add cs action csact1 -targetLBVserver vs1
4
5 add cs action csact2 -targetLBVserver vs2
6
7 add cs action csact3 -targetLBVserver vs3
8
9 add cs action csactint -targetLBVserver vint
10
11 add cs policy cspol1 -rule "SUBSCRIBER.SERVICEPATH.IS_NEXT("SF1") &&
    SYS.VSERVER("vs1").STATE.EQ(UP)" -action csact1
12
13 add cs policy cspol2 -rule "SUBSCRIBER.SERVICEPATH.IS_NEXT("SF2") &&
    SYS.VSERVER("vs2").STATE.EQ(UP)" -action csact2
14
15 add cs policy cspol3 -rule "SUBSCRIBER.SERVICEPATH.IS_NEXT("SF3") &&
    SYS.VSERVER("vs3").STATE.EQ(UP)" -action csact3
16
17 bind cs vserver cs1 -policyName cspol1 -priority 110
18
19 bind cs vserver cs1 -policyName cspol2 -priority 120
20
21 bind cs vserver cs1 -policyName cspol3 -priority 130
22
23 bind cs vserver cs1 -lbvserver vint
```

To configure service chaining on the appliance by using the GUI

1. Navigate to **System > Network > IPs** and add the subnet IP addresses.
2. Navigate to **System > Network > VLANs** and add VLANs, Bind the VLANs to the interfaces and subnet IP addresses.
3. Navigate to **Traffic Management > Service Chaining > Configure Service Path Ingress VLAN** and specify an ingress VLAN.
4. Navigate to **Traffic Management > Subscriber > Parameters > Configure Subscriber Parameters** and specify the following:
 - Interface Type: Specify **RadiusAndGx**.

- Configure a diameter virtual server, PCRF realm, and the subscriber GX interface parameters.
 - Specify the RADIUS interface parameters.
5. Navigate to **Traffic Management > Service Chaining > Service Function** and add service functions to associate a value-added service with an ingress VLAN.
 6. Navigate to **System > Network > Large Scale NAT**. Click **Pools** and add a pool. Click **Clients** and add a client. Click **Groups** and add a group and specify the client. Edit the group and bind the pool to this group.
 7. Navigate to **System > Network > Net Profiles** and add a net profile. Select **Override LSN**. Optionally, navigate to **System > Network > Settings > Configure Layer 3 Parameters** and verify that **Override LSN** is not selected.
 8. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and configure the virtual servers and value-added services on the appliance. Bind the services and the net profile to the virtual server.
 9. Navigate to **Traffic Management > Content Switching > Virtual Servers** and configure a virtual server, policy, and action. Specify the target load balancing virtual server.


Subscriber aware traffic steering with TCP optimization

May 2, 2023

Traffic steering directs subscriber traffic from one point to another. When a subscriber connects to the network, the packet gateway associates an IP address with the subscriber and forwards the data packet to the NetScaler appliance. The appliance communicates with the PCRF server over the Gx interface to get the subscriber policy information. Depending on the policy information, the appliance performs one of the following actions:

- Forward the data packet to another set of services (as shown in the following illustration).
- Perform only TCP optimization.

The values shown in the following figure are configured in the CLI procedure that follows the figure. A content switching virtual server on the NetScaler appliance directs requests to the value added services or skips them and performs TCP optimization, depending on the defined rule, and then sends the packet out to the Internet.

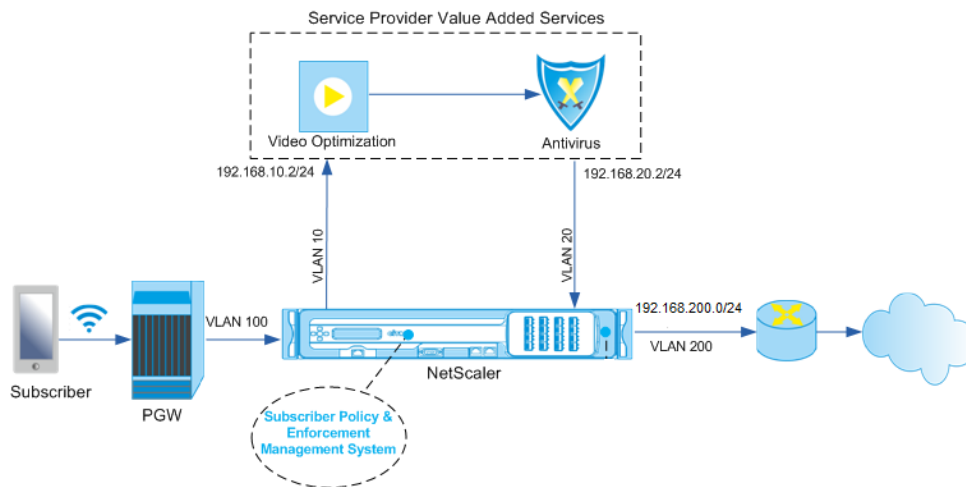

Note

Support for the configuration shown below was introduced in release 11.1 build 50.10.

To configure traffic steering for the above deployment by using the CLI:

1. Add the appliance's subnet IP (SNIP) addresses.

```

1 add ns ip 192.168.10.1 255.255.255.0 -type snip
2
3 add ns ip 192.168.20.1 255.255.255.0 -type snip
4
5 add ns ip 192.168.100.1 255.255.255.0 -type snip
6
7 add ns ip 192.168.200.1 255.255.255.0 -type snip
8
9 add ns ip 10.102.232.236 255.255.255.0 -type snip

```

2. Add the VLANs. VLANs help the appliance identify the source of the traffic. Bind the VLANs to the interfaces and subnet IP addresses.

```

1 add vlan 10
2
3 add vlan 20
4
5 add vlan 100
6
7 add vlan 200
8
9 add vlan 102
10
11 bind vlan 10 -ifnum 1/4 -tagged -IPAddress 192.168.10.1
    255.255.255.0
12

```

```

13 bind vlan 20 -ifnum 1/4 -tagged -IPAddress 192.168.20.1
    255.255.255.0
14
15 bind vlan 100 -ifnum 1/2 -tagged -IPAddress 192.168.100.1
    255.255.255.0
16
17 bind vlan 200 -ifnum 1/2 -tagged -IPAddress 192.168.200.1
    255.255.255.0
18
19 bind vlan 102 -ifnum 1/1 -tagged -IPAddress 10.102.232.236
    255.255.255.0

```

3. Configure a service and virtual server of type Diameter, and bind the service to the virtual server. Specify the PCRF realm and values for the subscriber Gx interface parameters. Also specify the service path AVP that indicates where the appliance can find the service path name within the subscriber session. For primary PCEF functionality, configure a RADIUS listener service and RADIUS interface, and specify the interface type as “RadiusAndGx”.

```

1 add service sd1 10.102.232.200 DIAMETER 3868
2
3 add lb vserver vdiam DIAMETER 0.0.0.0 0 -persistenceType DIAMETER
  -persistAVPno 263
4
5 bind lb vserver vdiam sd1
6
7 set ns diameter -identity netscaler.scl.net -realm pcrf1.net
8
9 set extendedmemoryparam -memLimit 2558
10
11 set subscriber gxInterface -vServer vdiam -pcrfRealm pcrf1.net
12
13 set subscriber gxinterface -servicepathAVP 1001 1005 -
  servicepathVendorid 10415
14
15 add service srad1 10.102.232.236 RADIUSListener 1813
16
17 set subscriber radiusInterface -listeningService srad1
18
19 set subscriber param -interfaceType RadiusAndGx

```

4. Specify a default subscriber profile (*) to be applied if any of the following is true:
 - PCRF does not have the subscriber information.
 - The subscriber information does not include the service path AVP.
 - The appliance is unable to query the PCRF. For example, the service representing the PCRF is DOWN.

```

1 add subscriber profile * -subscriberrules default_path

```

5. Create TCP profiles for the VAS and TCP optimization path, respectively. Traffic steered to VAS

will not undergo any TCP optimization before or after leaving the VAS. Therefore, the TCP mode of the VAS profile should be set to TRANSPARENT while the TCP mode of the TCPOpt profile should be set to ENDPOINT.

```
add ns tcpProfile VAS -tcpMode TRANSPARENT
```

```
add ns tcpProfile TCPOpt -WS ENABLED -SACK ENABLED -WSVal 8 -mss 1460 -maxBurst 30 -
initialCwnd 16 -oooQSize 15000 -minRTO 800 -bufferSize 4000000 -flavor BIC -dynamicReceiveBuffering
ENABLED -KA ENABLED -sendBuffsize 4000000 -rstWindowAttenuate ENABLED -spoofSynDrop
ENABLED -ecn ENABLED -frto ENABLED -maxcwnd 1000000 -fack ENABLED -rstMaxAck enABLED
-tcpmode ENDPOINT
```

6. Configure load balancing for the VAS servers. Create a non-addressable virtual server of type TCP. Create TCP services with the IP addresses of the VAS servers, and bind the services to the virtual server. The virtual server and services will use the transparent TCP profile created for the VAS path:

```
1 add service vas1 192.168.10.2 TCP * -usip YES -useproxyport NO -
  TCPB NO -tcpProfileName VAS
2
3 add service vas2 192.168.10.3 TCP * -usip YES -useproxyport NO -
  TCPB NO -tcpProfileName VAS
4
5 add lb vserver vs1 TCP -m MAC -l2Conn ON - tcpProfileName VAS
6
7 bind lb vserver vs1 vas1
8
9 bind lb vserver vs1 vas2
```

7. Add a load balancing virtual server to capture VAS egress traffic. This vserver will monitor the VAS egress VLAN and will use the transparent TCP profile:

```
1 add lb vserver vsint TCP * * -Listenpolicy "CLIENT.VLAN.ID.EQ(20)"
  - Listenpriority 30 - l2Conn ON - tcpProfileName VAS
```

8. Add a TCP optimization virtual server that listens for any traffic in the wireless-side VLAN and uses the endpoint TCP profile created for the TCP optimization path:

```
1 add lb vserver vs-TcpOpt TCP * * -Listenpolicy "client.vlan.id.eq
  (100)" - Listenpriority 20 -l2Conn ON -tcpProfileName TCPOpt
```

9. Add the content switching (CS) configuration. This includes virtual servers, policies, and their associated actions. The CS virtual server receives the traffic and redirects it to the appropriate load balancing virtual server according to defined CS policies. Create a CS TCP virtual server that listens for any traffic in the wireless-side VLAN with highest priority and uses the endpoint TCP profile. Create a CS policy that evaluates to TRUE when “vas” is the subscriber rule, and specify a CS action that steers traffic to VAS. Make the TCP optimization virtual server the default LB vserver. Any subscriber traffic with a rule other than “vas” will go through the default LB vserver.

```

1 add cs vserver cs1 TCP * * -Listenpolicy "client.vlan.id.eq(100)"
  -Listenpriority 10 -l2Conn ON -tcpProfileName TCP0pt
2
3 add cs action csact1 -targetLBVserver vs1
4
5 add cs policy cspol1 -rule SUBSCRIBER.RULE_ACTIVE("\vas\") && SYS
  .VSERVER("\vs1\").STATE.EQ(UP)" -action csact1
6
7 bind cs vserver cs1 -policyName cspol1
8
9 bind cs vserver cs1 -lbvserver vs-Tcp0pt

```

10. Add static or policy based routes to the internet. Dynamic routing is also supported in this configuration. The following example uses policy based routes:

```

1 add ns pbr pbr-vlan100-to-vlan200 ALLOW -nextHop 192.168.200.10 -
  vlan 100 -priority 10
2
3 add ns pbr pbr-vlan20-to-vlan200 ALLOW -nextHop 192.168.200.10 -
  vlan 20 -priority 11
4
5 apply ns pbrs

```

Note

The CS policies can contain IP addresses and port numbers in addition to the subscriber expressions—for example, SUBSCRIBER.RULE_ACTIVE("vas") && && (CLIENT.TCP.DSTPORT.EQ(80))

- Add IPv6 configuration (addresses, routes, PBRs) to support IPv6 subscribers. Happy Eye-balls client applications will work smoothly for both VAS and TCP optimization paths.
- Add VLANs, IP addresses, PBRs and LB virtual servers in front of VAS (vs1, vs2, etc.) to support multiple subscriber flows. Modify the listen policies of CS vserver "cs1" and LB vserver "vsint" to include the additional VLANs.

Policy based TCP profile selection

May 2, 2023

You can configure the NetScaler appliance to perform TCP optimization based on subscriber attributes. For example, the appliance can select different TCP profiles at run time, based on the network to which

the user equipment (UE) is connected. As a result, you can improve a mobile user's experience by setting some parameters in the TCP profiles and then using a policy to select the appropriate profile.

Create separate TCP profiles for subscribers connecting through a 4G network and for users connecting through any other network. Define a policy rule that is selected based on a subscriber parameter, such as Radio Access Technolog type (RAT-Type). In the following examples, if RAT-Type is EUTRAN, a TCP profile that supports a faster connection is selected (Example 1). For all other RAT-Type values, a different TCP profile is selected (Example 2).

For more information about radio access technology and its policy configuration, see [RFC 29.212](#).

Note

The RAT-Type AVP (AVP code 1032) is of type “Enumerated” and is used to identify the radio access technology serving the UE.

The value “1004” indicates that the RAT is EUTRAN.

Example 1:

```

1 add ns tcpProfile tcp2 -WS ENABLED -SACK ENABLED -WSVal 8 -initialCwnd
  16 - oooQSize 15000 -slowStartIncr 1 -bufferSize 1000000 -flavor BIC
  - dynamicReceiveBuffering DISABLED -sendBuffsize 1000000 -dsack
  DISABLED -maxcwnd 4000000 -fack ENABLED -minRTO 500 -maxburst 15
2
3 add appqoe action appact2 -priority HIGH -tcpprofile tcp2
4
5 add appqoe policy appol2 -rule "SUBSCRIBER.AVP(1032).VALUE.
  GET_UNSIGNED32(0, BIG_ENDIAN).EQ(1004)" -action appact2
6
7 bind cs vserver <name> -policyname appol2 -priority 20 -type request

```

Example 2:

```

1 add ns tcpProfile tcp1 -WS ENABLED -SACK ENABLED -WSVal 8 -initialCwnd
  16 - oooQSize 15000 -slowStartIncr 1 -bufferSize 150000 -flavor BIC
  - dynamicReceiveBuffering DISABLED -sendBuffsize 150000 -dsack
  DISABLED -maxcwnd 4000000 -fack ENABLED -minRTO 200 -maxburst 15
2
3 add appqoe action appact1 -priority HIGH -tcpprofile tcp1
4
5 add appqoe policy appol1 -rule "SUBSCRIBER.AVP(1032).VALUE.
  GET_UNSIGNED32(0, BIG_ENDIAN).NE(1004)" -action appact1
6
7 bind cs vserver <name> -policyname appol1 -priority 10 -type request

```

Load Balance Control-Plane Traffic that is based on Diameter, SIP, and SMPP Protocols

May 2, 2023

With the increase in control-plane traffic, the servers can become a bottleneck because the traffic is not optimally distributed among the servers. Therefore, messages must be load balanced. The NetScaler appliance supports Diameter, SIP, and SMPP load balancing.

SIP

NetScaler enables you to load balance SIP messages over UDP or over TCP (including TLS) to a group of proxy servers. NetScaler also provides Call-ID based persistence and Call-ID hash load balancing method using which you direct packets for a particular SIP session to the same load balanced SIP server.

The NetScaler default expressions language contains a number of expressions that operate on Session Initiation Protocol (SIP) connections. These expressions are intended to be used in policies for SIP protocol that operates on a request/response basis. These expressions can be used in content switching, rate limiting, responder, and rewrite policies.

For more information, see [Load Balancing a Group of SIP Servers](#).

SMPP

Millions of short messages are exchanged daily between individuals and value-added service providers, such as banks, advertisers, and directory services, by using the short message peer to peer (SMPP) protocol. Often, message delivery is delayed because servers are overloaded and traffic is not optimally distributed among the servers.

The NetScaler appliance provides optimal distribution of messages across your servers, preventing poor performance and outages. The NetScaler appliance:

- Load balances messages originating from the server and from the client
- Monitors the health of the message centers
- Provides content switching support for the message centers
- Handles concatenated messages

Limitation: Message IDs, from the message center, longer than 59 bytes are not supported. If the message ID length returned by the message center is more than 59 bytes, ancillary operations fail and the NetScaler appliance responds with an error message.

For more information, see [SMPP Load Balancing](#)

Diameter

Diameter is a base protocol with more than 50 protocols (also called applications) built over it. Therefore, the diameter traffic generated in a Telco network is high. To optimally maintain this diameter traffic, the NetScaler appliance performs load balancing, content switching, and acts as a relay agent. Additionally, the appliance offers rewrite and responder functionality. The appliance supports rate limiting of Diameter messages.

For more information, see [Configuring Diameter Load Balancing](#).

Provide DNS Infrastructure/Traffic Services, such as, Load Balancing, Caching, and Logging for Telecom Service Providers

May 2, 2023

Telecom service providers can configure the NetScaler appliance to function as a DNS proxy. Caching of DNS records, which is an important function of a DNS proxy, is enabled by default on the NetScaler appliance. This enables the NetScaler appliance to provide quick responses for repeated translations and hence enhances the customer experience and also saves the bandwidth. The caches responses from DNS name servers. When the appliance receives a DNS query, it checks for the queried domain in its cache. If the address for the queried domain is present in its cache, the NetScaler appliance returns the corresponding address to the client. Otherwise, it forwards the query to a DNS name server that checks for the availability of the address and returns it to the NetScaler appliance. The NetScaler appliance then returns the address to the client.

For requests for a domain that has been cached earlier, the NetScaler appliance serves the Address record of the domain from the cache without querying the configured DNS server and hence saves the bandwidth.

From 11.0 release onwards, NetScaler also logs the DNS requests that it receives and also the responses that it sends to the client. Telecom service providers can use this log to:

- Audit the DNS responses to the client
- Audit DNS clients
- Detect and prevent DNS attacks
- Troubleshooting

For more information, see [Domain Name System](#).

Provide Subscriber Load Distribution Using GSLB Across Core-Networks of a Telecom Service Provider

May 2, 2023

Scalability, high availability and performance are critical to service provider deployments. While many service providers deploy their infrastructure at a single location or multiple locations, these deployments are subject to a number of inherent limitations, such as:

- If the site loses connectivity to all or part of the public Internet, it will be inaccessible to users and customers, which can have significant impact on the business.
- Users accessing the site from geographically distant locations may experience large and highly variable delays, which are exacerbated by the large number of round trips that HTTP requires to transfer content.

NetScaler appliance's Global Server Load Balancing (GSLB) overcomes these problems by distributing traffic among sites deployed in multiple geographic locations. By serving content from many different points in the Internet, GSLB alleviates the impact of network bandwidth bottlenecks and provides robustness in case of network failures at a particular site. Users can be automatically directed to the nearest or least loaded site at the time of the request, minimizing the likelihood of long download delays and/or service disruptions.

You can use NetScaler appliance's global server load balancing for:

- Disaster recovery or high availability by configuring an Active-standby data center setup that consists of an active and a standby data center. When a failover occurs as a result of a disaster event, the standby data center becomes operational.
- High availability and speed by configuring an active-active data center setup that consists of multiple active data centers. Client requests are load balanced across active data centers.
- Directing client requests to the data center that is closest in geographical distance or network distance by configuring a proximity setup.
- Full-DNS resolutions, GSLB processes DNS queries of the A, AAAA and CNAME types, and the DNS function option can process DNS queries of all other types, such as MX and PTR. Also, if the recursive resolution is enabled, the appliance will forward DNS queries for domain names that are not configured on the NetScaler appliance.

For more information, see [Global Server Load Balancing](#).

Bandwidth Utilization Using Cache Redirection Functionality

May 2, 2023

The volume of web traffic on the Internet is enormous and a large percentage of that traffic is redundant. Multiple clients ask web servers for the same content repeatedly leading to inefficient use of bandwidth. To relieve the origin web server of processing each request, Internet Service Providers (ISPs) can use the cache redirection feature of NetScaler appliance and serve the content from a cache server instead of from the origin server. The NetScaler appliance analyzes incoming requests, sends requests for cacheable data to cache servers, and sends non-cacheable requests and dynamic HTTP requests to origin servers. Cache redirection feature of NetScaler is policy-based, and by default, requests that match a policy are sent to the origin server, and all other requests are sent to a cache server. You can combine content switching with cache redirection to cache selective content and serve content from specific cache servers for specific types of requested content.

For more information, see [Cache Redirection](#).

NetScaler TCP Optimization

May 2, 2023

The NetScaler appliance provides advanced TCP tuning and optimization techniques and capabilities that are well suited to modern 3.5 and 4G networks, improving user experience and perceived download speeds significantly.

This section focuses on detailed instructions relevant to:

- Choosing and inserting an appropriate NetScaler T1000 Series model in a mobile network for TCP optimization
- Full configuration instructions related to not only TCP optimization but also for appropriate Layer-2 and Layer-3 configuration of the T1 device

The section includes the following topics:

- [Getting Started](#)
- [Management Network](#)
- [Licensing](#)
- [High Availability](#)
- [Gi-LAN Integration](#)
- [TCP Optimization Configuration](#)
- [Optimizing TCP Performance Using TCP NILE](#)

- [Analytics and Reporting](#)
- [Real-time Statistics](#)
- [SNMP](#)
- [Technical Recipes](#)
- [Troubleshooting Guidelines](#)
- [Frequently Asked Questions](#)

Getting Started

May 2, 2023

Hardware

NetScaler provides a wide breath of NetScaler models that might be loosely based on two factors:

- Capacity, currently ranging from hundreds of Mbps for the low-end VPX appliance to 160Gbps for the high-end 25000 MPX series appliance
- Telco grade, with the availability of the T1000 series for Telco datacenters.

Your NetScaler sales or Support representative can help you select the appropriate hardware for your demo, trial, or production needs.

The remainder of this section uses a NetScaler T1200 as a reference hardware. Note that putting aside superficial differences related to number and notation of available interfaces (see * in note) or well-documented limitations of NetScaler VPX (see * in note) the instructions should apply mostly verbatim regardless of the NetScaler model selected.

Note

* For instance a the T1010 model only has 12x1GbE typically marked as 1/1-1/12 rather than the 10/x notation used in this document.

** A NetScaler VPX instance typically doesn't support LACP aggregation; it might also not support VLAN tagging.

Initial Setup

Through Serial Console

After a serial cable is connected, you can log on to the NetScaler appliance with the following credentials:

- Username: nsroot
- Password: nsroot

Once logged in, configure the basic details of the NetScaler appliance as shown in the screen capture below.

Example:

```
1 set ns config -IPAddress <ip_addr> -netmask <netmask>
2
3 saveconfig
4
5 reboot -warm
```


After you restart the appliance, you might use SSH for further configuration of the T1100 nodes.

Through LOM

Lights out Management (LOM) port on the front panel of the NetScaler appliance allows operator to remotely monitor and manage the appliance independently of the operating system. Operator can change the IP address, power cycle, and perform a code dump by connecting to the NetScaler appliance through the LOM port.

Default IP Address of LOM port is 192.168.1.3

Figure. Intial Configuration of LOM Module

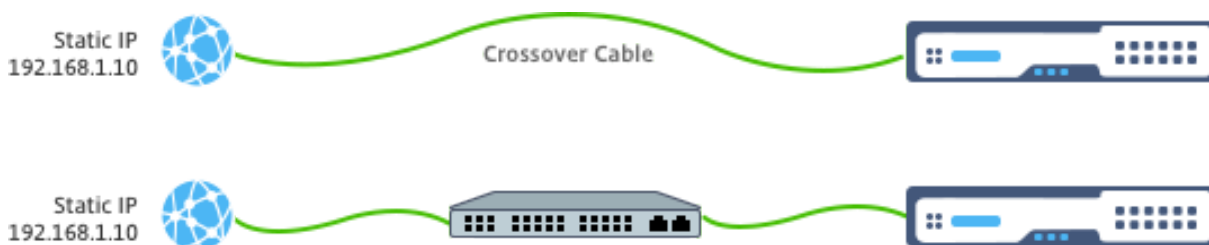

Set a static IP on your laptop and plug it directly into the LOM interface with a crossover cable or into a switch in the same broadcast domain as the LOM interface.

For initial configuration, type the port's default address: <http://192.168.1.3> in a web browser and change the LOM port's default IP address.

Refer to Configuration Guides for further details.

Software

The NetScaler TCP optimization for mobile networks is constantly evolving. The capabilities and tunings outlined in this document require a NetScaler Telco build. Here is an example showing the NetScaler Telco build.

Example:

```

1 show ver
2
3 NetScaler NS11.0: Build 64.957.nc, Date: Aug 26 2016, 02:00:23
    
```

If the T1000 has not shipped with the appropriate build revision, contact the NetScaler Customer Support.

Important
Both the appliances should have the same software image.

SSH Client

A NetScaler appliance can be configured by using either the CLI or the HTML5 GUI. However, this section provides only CLI-based instructions.

While the CLI is accessible through the NetScaler serial console, an SSH client is normally recommended to allow for remote NetScaler configuration.


Management Network

May 2, 2023

Connectivity

Most NetScaler devices offer redundant 1GbE OAM ports, notated as 0/1 and 0/2. To provide for redundancy in case of a switch failure, you should connect the relevant ports to different upstream switches.

A high-level overview of the recommended connectivity is outlined in the following diagram:

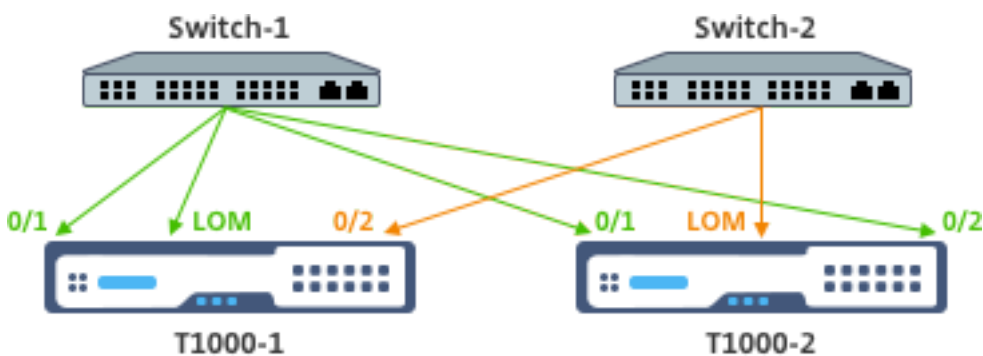

After the NetScaler appliance is connected to the management network, subsequent configuration steps can be performed remotely using SSH or web connectivity to the CLI and GUI respectively.

Routing

The add route command may be used to configure any routes appropriate to the management network. The relevant gateway should be reachable on the NSIP subnet, as shown below.

Example:

```
1 add route <network> <netmask> <gateway>
```

Licensing

May 2, 2023

A valid license file should be installed on the NetScaler appliance. The license should support at least as many Gbps as the expected maximum Gi-LAN throughput.

License files should be copied through an SCP client to the /nsconfig/license of the appliance, as shown in the screen capture below.

Example:

```
1 shell ls /nsconfig/license/  
2  
3 CNS_V3000_SERVER_PLT_Retail.lic ssl
```

Do a warm restart to apply the new license, as shown in the screen capture below.

Example:

```
1 reboot -warm  
2  
3 Are you sure you want to restart NetScaler (Y/N)? [N]:y  
4  
5 Done
```

After the restart completes, verify that the license has been properly applied, by using the show license CLI.

In the example below a 3Gbps Premium license has been successfully installed.

Example:

```
1 > show license  
2
```

```
3      License status:
4
5      Web Logging: YES
6
7      ...
8
9      Model Number ID: 3000
10
11     License Type: Premium License
12
13 Done
```


High Availability

May 2, 2023

High availability (HA) refers to an active-standby operational mode of a NetScaler device pair. Each device has its own dedicated management IP address. All other IP addresses are owned by the active device in the pair.

Connectivity

While there are multiple connectivity options for a NetScaler HA pair, the most recommended one is depicted in the following diagram:

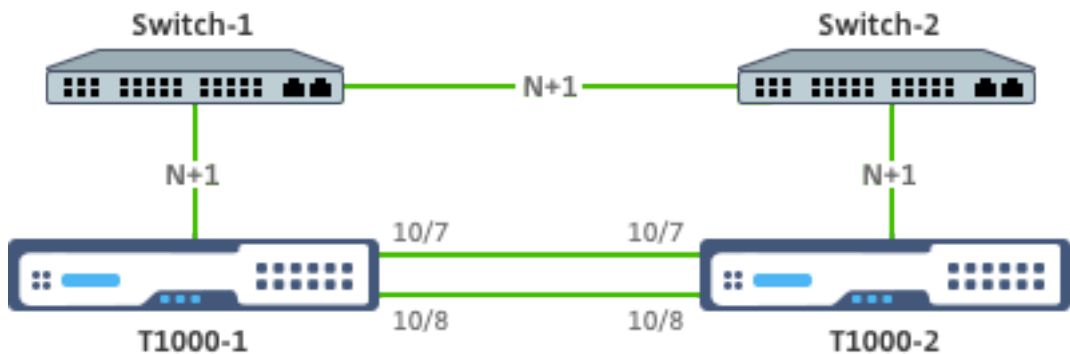

In the above diagram, the N+1 red links between each T1000 and the respective switch imply N+1 redundancy - as explained in [Connectivity](#). For instance, considering a 45 Gbps Gi-LAN N=5 is an appropriate value, with 6x10GbE LACP channels between each switch and the respective T1000 as well as between the two switches.


An extra pair of links is recommended between the NetScaler pair, to provide for HA communication isolation from the OAM network.

Gi-LAN Integration

May 2, 2023

Typically, a NetScaler appliance is inserted as a separate L3 inline node in the Gi-LAN, similarly to an L3 router.

Figure: A simple depiction of a Gi-LAN

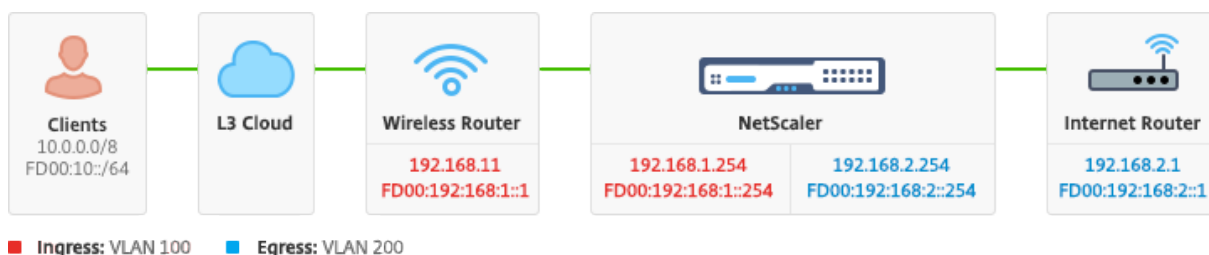

Connectivity

A physical NetScaler connectivity to upstream switches is recommended to provide for sufficient redundancy. For example, assuming that a NetScaler appliance is inserted in a Gi-LAN that is handling a total (uplink+downlink) of 24Gbps, connectivity with 4x10GbE or more interfaces is recommended. This effectively provides for N+1 redundancy in case of a link failure.

The relevant ports on the upstream switch should be configured for LACP port aggregation. The relevant configuration on NetScaler is outlined below:

Connectivity Configuration:

```

1 set interface 10/1 - tagall ON - lacpMode ACTIVE - lacpKey 1
2
3 set interface 10/2 - tagall ON - lacpMode ACTIVE - lacpKey 1
4
5 set interface 10/3 - tagall ON - lacpMode ACTIVE - lacpKey 1
6
7 set interface 10/4 - tagall ON - lacpMode ACTIVE - lacpKey 1

```

You can verify the appropriate functionality of LACP using the “show interface” command:

show interface:

```

1 sh interface LA/1
2
3 1) Interface LA/1 (802.3ad Link Aggregate) #39
4
5 flags=0x4100c020 <ENABLED, UP, AGGREGATE, UP, HAMON, 802.1
6 q>

```

```
7      MTU=1500, native vlan=1, MAC=02:e0:ed:33:88:b0, uptime 340
      h11m56s
8
9      Requested: media NONE, speed AUTO, duplex NONE, fctl NONE,
10
11     throughput 0
12
13     Actual: throughput 4000
14
15     LLDP Mode: NONE,
16
17     RX: Pkts(918446) Bytes(110087414) Errs(0) Drops(795989)
      Stalls(0)
18
19     TX: Pkts(124113) Bytes(15255532) Errs(0) Drops(0) Stalls
      (0)
20
21     NIC: InDisc(0) OutDisc(0) Fctls(0) Stalls(0) Hangs(0)
      Muted(0)
22
23     Bandwidth thresholds are not set.
24
25     Disable the remaining unused interfaces and turn off the monitor.
26
27     set interface 10/5 - haMonitor OFF
```

Command:

```
1 set interface 10/24 - haMonitor OFF
2
3 disable interface 10/5
4
5 disable interface 10/24
```

Configuration of physical interfaces is not shared across the two NetScaler units. Hence, the above commands must be run across both NetScaler nodes in case of an HA pair deployment.

HA Configuration

All other configuration parameters are shared between the NetScaler nodes of an HA pair. Hence, HA sync should be enabled prior to any other configuration commands being run. Basic HA configuration involves the following steps:

1. Using the exact same NetScaler hardware, software, and license: HA pairs are not supported between different models (i.e. a T1100 and an MPX21550) or same models with different firmware levels. Refer to the appropriate instructions on upgrading an existing HA pair - [Upgrading to Release 11.1](#).
2. Establishing the HA pair.

Example:

```
1 netScaler-1> add HA node 1 <netScaler-2-NSIP>
2
3 netScaler-2> add HA node 1 <netScaler-1-NSIP>
```

3. Verify the HA pair establishment running the following command in either node; both nodes should be visible, one of them as Primary (active), the other as a Secondary (standby).

Example:

```
1 show HA node
```

4. Enable failsafe mode and maxFlips. This ensures that in case of a route monitor failure on both nodes at least one node remains active without active/standby status constantly switching.

Example:

```
1 set HA node -failsafe ON
2
3 set HA node -maxFlips 3 -maxFlipTime 1200
```

5. Finally, enable HA sync to occur over the dedicated intra-NetScaler ports rather than the OAM network.

Example:

```
1 add vlan 4080 -aliasName syncVlan
2
3 set HA node -syncvlan 4080
```

Note

The VLAN 4080 in the commands in the above example shouldn't be taken literally. Any unused VLAN-ID might be reserved.

VLAN Configuration

After the physical interfaces have been appropriately configured, you might configure the appropriate Gi-LAN VLANs. For instance, consider a rather simple Gi-LAN environment with an ingress/egress VLAN pair with 100/101 VLAN-identifier respectively.

The following commands configure the relevant VLANs on top of the LACP channel created in the prior step.

```
1 add vlan 100
2 add vlan 101
3 bind vlan 100 -ifnum LA/1 -tagged
4 bind vlan 101 -ifnum LA/1 -tagged
```

IPv4 Configuration

Typically, a NetScaler appliance requires one SNIP per VLAN. The example below assumes that the networks outlined in the Gi-LAN integration diagram, given in the beginning of this page, have a /24 subnet mask:

```
1 add ns ip 192.168.1.254 255.255.255.0 -vserver DISABLED -mgmtAccess
  DISABLED
2 add ns ip 192.168.2.254 255.255.255.0 -vserver DISABLED -mgmtAccess
  DISABLED
```

After the SNIPs have been configured they should be associated with the appropriate VLAN:

```
1 bind vlan 100 -IPAddress 192.168.1.254 255.255.255.0
2 bind vlan 101 -IPAddress 192.168.2.254 255.255.255.0
```

IPv4 Static Routing

The example outlined in the [Management Network](#) section calls for only a couple of static routing rules:

- A 10.0.0.0/8 static route to the clients through the ingress router
- A default route to the internet through the egress router

Example:

```
1 add route 0.0.0.0 0.0.0.0 192.168.2.1
2 add route 10.0.0.0 255.0.0.0 192.168.1.1
```

IPv4 Policy-Based (VLAN - VLAN) routing

A NetScaler appliance allows for policy-based routing instead of static routing, with routing decisions usually keyed against the incoming interface and/or VLAN rather than destination IP. Policy-based routing is either a convenient alternative, in case the client source IP address range is subject to periodic changes, or a mandatory consideration, in case a packet's destination IP address is not sufficient by itself to reach a routing decision (i.e. in case of overlapping client IP addresses across multiple VLANs).

Example:

```
1 add ns pbr fromWirelessToInternet ALLOW -nextHop 192.168.2.1 -vlan
  100 -priority 10
2
3 Done
4
```

```
5 add ns pbr fromInternetToWireless ALLOW -nextHop 192.168.1.1 -vlan
  200 -priority 20
6
7 Done
8
9 apply ns pbrs
```

IPv6 Configuration

The following commands assign IPv6 SNIP per vlan. The example below assumes that the networks outlined in the Figure: A simple depiction of a Gi-LAN in this page have a /64 subnet mask:

Command:

```
1 add ns ip6 fd00:192:168:1::254/64 -vServer DISABLED -mgmtAccess
  DISABLED
2 add ns ip6 fd00:192:168:2::254/64 -vServer DISABLED -mgmtAccess
  DISABLED
3 bind vlan 100 -IPAddress fd00:192:168:1::254/64
4 bind vlan 200 -IPAddress fd00:192:168:2::254/64
```

IPv6 Routing

After IPv6 addressing is complete, IPv6 static routing might be configured:

- A fd00:10::/64 static route to the clients via the ingress router
- A default route to the internet via the egress router

Example:

```
1 add route6 fd00:10::/64 fd00:192:168:1::1
2 add route6 ::/0 fd00:192:168:2::1
```

Or using policy-based routing:

Example:

```
1 add ns pbr6 fromWirelessToInternetv6 ALLOW -vlan 100 -priority 10 -
  nextHop fd00:192:168:2::1
2
3 add ns pbr6 fromInternetToWirelessv6 ALLOW -vlan 200 -priority 20 -
  nextHop fd00:192:168:1::1
4
5 apply ns pbr6
```

LACP Redundancy and Failover

In case of an HA configuration, it's recommended to leverage the throughput option to configure a low threshold for the LACP channel. For instance, consider a 25Gbps Gi-LAN and a 4x10GbE channel between each NetScaler appliance in the HA pair and the upstream switch to provide N+1 link redundancy:

Example:

```
1 set interface LA/1 - haMonitor ON - throughput 29000
```

In case of a double-link failure between the primary appliance and the upstream switch the maximum Gi-LAN throughput that can be supported would fall to 20Gbps. A 29Gbps low threshold per the example above would result in a redundancy switchover event to the secondary appliance (which has not suffered similar link failures) so that Gi-LAN traffic is not affected.

Route Monitors

In addition to LACP redundancy, route monitor checks might be configured and associated with the HA pair configuration. Route monitor checks can be useful to detect failures between the NetScaler appliance and the next-hop routers, especially if said routers are not directly connected but through an upstream switch.

A typical HA route monitor configuration per the sample Gi-LAN in section 2.5.1 is outlined below:

```
1 add route 192.168.1.0 255.255.255.0 192.168.1.1 -msr ENABLED -monitor arp
2 add route 192.168.2.0 255.255.255.0 192.168.2.1 -msr ENABLED -monitor arp
3 bind HA node -routeMonitor 192.168.1.0 255.255.255.0
4 bind HA node -routeMonitor 192.168.2.0 255.255.255.0
```

TCP optimization configuration

May 2, 2023

Before configuring TCP optimization, apply the following basic configuration settings on the NetScaler appliance:

Initial configuration:

```
1 enable ns feature LB IPv6PT
2 enable ns mode FR L3 USIP MBF Edge USNIP PMTUD
3 disable ns feature SP
```



```
4 disable ns mode TCPB
5 set lb parameter -preferDirectRoute NO
6 set lb parameter -vServerSpecificMac ENABLED
7 set l4param -l2ConnMethod Vlan
8 set rsskeytype -rsstype SYMMETRIC
9 set ns param -useproxyport DISABLED
```

Note

Restart the NetScaler appliance if you change the rsskeytype system parameter.

TCP termination

For NetScaler T1 to apply TCP optimization it needs to first terminate incoming TCP traffic. Towards this end, a wildcard TCP vserver should be created and configured to intercept ingress traffic and then forward it to the Internet router.

Static or dynamic routing environment


For environments with static or dynamic routing in place, vserver can rely on routing table info to forward packets towards internet router. Default route must point to the internet router and also routing entries for client subnets towards wireless router should be in place:

Example:

```
1 add lb vserver vsrv-wireless TCP * * -persistenceType NONE -
  Listenpolicy "CLIENT.VLAN.ID.EQ(100) && SYS.VSERVER(\"vsrv-wireless
  \").STATE.EQ(UP)" -m IP -cltTimeout 9000
2 add route 0.0.0.0 0.0.0.0 192.168.2.1
3 add route 10.0.0.0 255.0.0.0 192.168.1.1
```

VLAN-to-VLAN (PBR) environment

There are customer environments where subscriber traffic is segmented to multiple flows and needs to be forwarded to different routers based on incoming traffic parameters. Policy Based Routing (PBR) can be used to route packets based on incoming packet parameters, such as VLAN, MAC address, Interface, source IP, source port, destination IP address, and destination port.

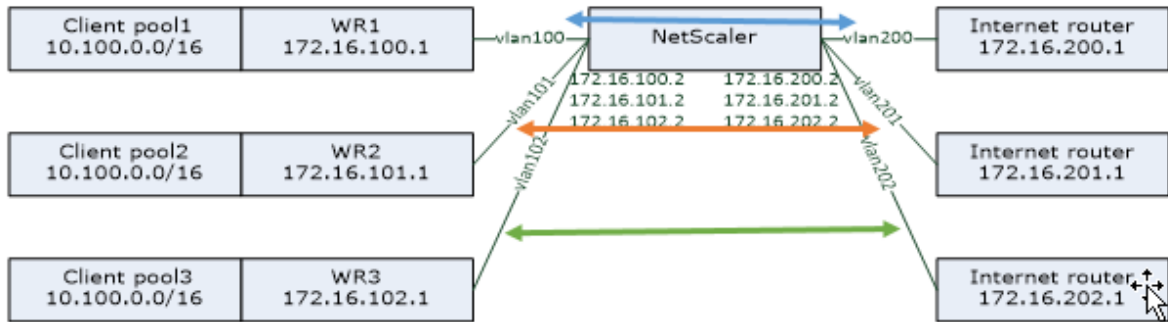

Example:

```

1 add lb vserver vsrv-wireless TCP * * -m IP -l2Conn ON -listenpolicy "
  CLIENT.VLAN.ID.EQ(100) || CLIENT.VLAN.ID.EQ(101) || CLIENT.VLAN.ID.
  EQ(102)"
2
3 add ns pbr pbr-vlan100-to-vlan200 ALLOW -vlan 100 -nexthop 172.16.200.1
4
5 add ns pbr pbr-vlan101-to-vlan201 ALLOW -vlan 101 -nexthop 172.16.201.1
6
7 add ns pbr pbr-vlan102-to-vlan202 ALLOW -vlan 102 -nexthop 172.16.202.1

```

Using Policy Based Routing to route TCP optimized traffic is a new feature added in release 11.1 50.10. For previous releases, having multiple “mode MAC” vserver entities per VLAN is an alternative solution for multi-VLAN environments. Each vserver has a bound service representing the internet router for the particular flow.

Example:

```

1 add server internet_router_1 172.16.200.1
2
3 add server internet_router_2 172.16.201.1
4
5 add server internet_router_3 172.16.202.1
6
7 add service svc-internet-1 internet_router_1 TCP * -usip YES -
  useproxyport NO
8
9 add service svc-internet-2 internet_router_2 TCP * -usip YES -
  useproxyport NO
10
11 add service svc-internet-3 internet_router_3 TCP * -usip YES -
  useproxyport NO
12
13 bind service svc-internet-1 -monitorName arp
14
15 bind service svc-internet-2 -monitorName arp
16
17 bind service svc-internet-3 -monitorName arp
18

```

```

19 add lb vserver vsrv-wireless-1 TCP * * -Listenpolicy "CLIENT.VLAN.ID.EQ
    (100) && SYS.VSERVER(\"vsrv-wireless-1\").STATE.EQ(UP)" -m MAC -
    l2Conn ON
20
21 add lb vserver vsrv-wireless-2 TCP * * -Listenpolicy "CLIENT.VLAN.ID.EQ
    (101) && SYS.VSERVER(\"vsrv-wireless-2\").STATE.EQ(UP)" -m MAC -
    l2Conn ON
22
23 add lb vserver vsrv-wireless-3 TCP * * -Listenpolicy "CLIENT.VLAN.ID.EQ
    (102) && SYS.VSERVER(\"vsrv-wireless-3\").STATE.EQ(UP)" -m MAC -
    l2Conn ON
24
25 bind lb vserver vsrv-wireless-1 svc-internet-1
26
27 bind lb vserver vsrv-wireless-2 svc-internet-2
28
29 bind lb vserver vsrv-wireless-3 svc-internet-3

```

Note:

The vserver mode is MAC in contrast to previous examples where it is mode IP. This is required to retain the destination IP information when we have service(s) bound to vserver. Also, the additional PBR configuration need to route non-optimized traffic.

TCP optimization

Out-of-the-box NetScaler TCP termination is configured for TCP pass-through functionality. TCP pass-through essentially means that NetScaler T1 may transparently intercept a client-server TCP stream but does not retain separate client/server buffers or otherwise apply any optimization techniques.

To enable TCP optimization a TCP profile, named as nstcpprofile, is used to specify TCP configurations that is used if no TCP configurations are provided at the service or virtual server level and it should be modified as follows:

Command:

```

1 add ns tcpProfile nstcpprofile -WS ENABLED -SACK ENABLED -WSVal 8 -mss
    1460 -maxBurst 30 -initialCwnd 16 -oooQSize 15000 -minRTO 800 -
    bufferSize 4000000 -flavor BIC -dynamicReceiveBuffering ENABLED -KA
    ENABLED -sendBufferSize 4000000 -rstWindowAttenuate ENABLED -
    spoofSynDrop ENABLED -ecn ENABLED -frto ENABLED -maxcwnd 1000000 -
    fack ENABLED -rstMaxAck enABLED -tcpmode ENDPOINT

```

Note:

If there is not any profile explicitly created and bound to vserver and service, the profile nstcp_default_profile is bound by default.

In case of multiple TCP profiles requirement, extra TCP profiles can be created and associated

with the appropriate virtual server

Command:

```
1 add ns tcpProfile custom_profile -WS ENABLED -SACK ENABLED -WSVal 8 -  
  mss 1460 -maxBurst 30 -initialCwnd 16 -oooQSize 15000 -minRTO 800 -  
  bufferSize 4000000 -flavor BIC -dynamicReceiveBuffering ENABLED -KA  
  ENABLED -sendBuffsize 4000000 -rstWindowAttenuate ENABLED -  
  spoofSynDrop ENABLED -ecn ENABLED -frto ENABLED -maxcwnd 1000000 -  
  fack ENABLED -rstMaxAck enABLED -tcpmode ENDPOINT  
2  
3 set lb vserver vsrv-wireless -tcpProfileName custom_profile
```

Note:

For deployments with vserver -m MAC and service, same profile should be associated with service.

```
1 set service svc-internet -tcpProfileName custom_profile
```

TCP optimization capabilities

Most of the relevant TCP optimization capabilities of a NetScaler appliance are exposed through a corresponding TCP profile. Typical CLI parameters that should be considered when creating a TCP profile are the following:

1. **Window Scaling (WS):** TCP Window scaling allows increasing the TCP receive window size beyond 65535 bytes. It helps improving TCP performance overall and specially in high bandwidth and long delay networks. It helps with reducing latency and improving response time over TCP.
2. **Selective acknowledgment (SACK):** TCP SACK addresses the problem of multiple packet loss which reduces the overall throughput capacity. With selective acknowledgement the receiver can inform the sender about all the segments which are received successfully, enabling sender to only retransmit the segments which were lost. This technique helps T1 improve overall throughput and reduce the connection latency.
3. **Window Scaling Factor (WSVal):** Factor used to calculate the new window size. It must be configured with a high value in order to allow the advertised window by NS to be at least equal to the buffer size.
4. **Maximum Segment Size (MSS):** MSS of a single TCP segment. This value depends on the MTU setting on intermediate routers and end clients. A value of 1460 corresponds to an MTU of 1500.
5. **maxBurst:** Maximum number of TCP segments allowed in a burst.
6. **Initial Congestion Window size(initialCwnd):** TCP initial congestion window size determines the number of bytes which can be outstanding in beginning of the transaction. It enables T1 to send those many bytes without bothering for congestion on the wire.

7. **Maximum OOO packet queue size(oooQSize):** TCP maintains Out Of Order queue to keep the OOO packets in the TCP communication. This setting impacts system memory if the queue size is long as the packets need to be kept in runtime memory. Thus this needs to be kept at optimized level based on the kind of network and application characteristics.
8. **Minimum RTO(minRTO):** The TCP retransmission timeout is calculated on each received ACK based on internal implementation logic. The default retransmission timeout happens at 1 second to start with and this can be tweaked with this setting. For second retransmission of these packets RTO will be calculated by $N*2$ and then $N*4 \dots N*8 \dots$ goes on till last retransmission attempt.
9. **bufferSize/sendBufferSize:** these refer to the maximum amount of data that the T1 may receive from the server and buffer internally without sending to the client. They should be set to a value larger (at least double) than the Bandwidth Delay Product of the underlying transmission channel.
10. **flavor:** this refers to the TCP congestion control algorithm. Valid values are Default, BIC, CUBIC, Westwood and Nile.
11. **Dynamic receive buffering:** allows the receive buffer to be adjusted dynamically based on memory and network conditions. It will fill up the buffer as much as it's required to keep the client's download pipe full instead of filling up, by reading ahead from server, a fixed size buffer, as latter is specified in TCP profile and typically based on criteria such as $2*BDP$, for a connection. NetScaler T1 monitors the network conditions to the client and estimates how much it should read ahead from the server.
12. **Keep-Alive (KA):** Send periodic TCP keep-alive (KA) probes to check if peer is still up.
13. **rstWindowAttenuate:** Defending TCP against spoofing attacks. It will reply with corrective ACK when a sequence number is invalid.
14. **rstMaxAck:** Enable or disable acceptance of RST that is out of window yet echoes highest ACK sequence number.
15. **spoofSynDrop:** Drop of invalid SYN packets to protect against spoofing.
16. **Explicit Congestion Notification(ecn):** It sends notification of the network congestion status to the sender of the data and takes corrective measures for data congestion or data corruption.
17. **Forward RTO-Recovery:** In case of spurious retransmissions, the congestion control configurations are reverted to their original state.
18. **TCP maximum congestion window (maxcwnd):** TCP maximum congestion window size that is user configurable.
19. **Forward acknowledgment (FACK):** To avoid TCP congestion by explicitly measuring the total number of data bytes outstanding in the network, and helping the sender (either T1 or a client) control the amount of data injected into the network during retransmission timeouts.
20. **tcpmode:** TCP optimization modes for specific profile. There are two TCP optimization modes - Transparent and Endpoint.
 - Endpoint. In this mode, the appliance manages the client and server connections separately.

- **Transparent.** In the transparent mode the clients need to access the servers directly, with no intervening virtual server. The server IP addresses must be public because the clients need to be able to access them.

Silently dropping idle connections

In a telco network, almost 50 percent of a NetScaler appliance's TCP connections become idle, and the appliance sends RST packets to close them. The packets sent over radio channels activate those channels unnecessarily, causing a flood of messages that in turn cause the appliance to generate a flood of service-reject messages. The default TCP profile now includes DropHalfClosedConnOnTimeout and DropEstConnOnTimeout parameters, which by default are disabled. If you enable both of them, neither a half closed connection nor an established connection causes a RST packet to be sent to the client when the connection times out. The appliance just drops the connection.

```
1 set ns tcpProfile nstcpprofile -DropHalfClosedConnOnTimeout ENABLED
2 set ns tcpProfile nstcpprofile -DropEstConnOnTimeout ENABLED
```

Analytics and Reporting

May 2, 2023

The TCP Speed Reporting is a NetScaler feature which extracts TCP connection statistics, as a measure of TCP download and upload performance, and is utilized in [TCP Insight](#) reports of the NetScaler Application Delivery Management (ADM). To achieve this, NetScaler monitors each TCP connection, locates packet bursts on an idle time-out basis and reports key metrics (such as byte count, retransmitted byte count and duration) for the identified maximum burst. TCP Speed Reporting feature is enabled by default, support both TCP and HTTP vServers and depends on the Appflow/ULFD reporting infrastructure.

Real-time Statistics

September 21, 2020

The stat command might be used to verify that TCP optimization is properly applied:

Command:

```
1 > stat lb vserver vsrv-wireless
2 Virtual Server Summary
```

3		vsvrIP	port	Protocol	State	Health
4	vsvr...eless	actSvcs	*	TCP	UP	100
5	1		0			
6	inactSvcs					
7	vsvr...eless	0				
8	Virtual Server Statistics					
9				Rate (/s)		
				Total		
10	Vserver hits				0	
	10					
11	Requests				0	
12	Responses	0			0	
		0				
13	Request bytes				0	
	1580					
14	Response bytes				0	
	532594360					
15	Total Packets rcvd				0	
	216463					
16	Total Packets sent				0	
	369898					
17	Current client connections				--	
	0					
18	Current Client Est connections				--	
	0					
19	Current server connections				--	
	0					
20	Requests in surge queue				--	
	0					
21	Requests in vserver's surgeQ				--	
	0					
22	Requests in service's surgeQs				--	
	0					
23	Spill Over Threshold				--	
	0					
24	Spill Over Hits				--	
	0					
25	Labeled Connection				--	
	0					
26	Push Labeled Connection				--	
	0					
27	Deferred Request				0	
	0					
28	Invalid Request/Response				--	
	0					
29	Invalid Request/Response Dropped				--	
	0					
30	Bound Service(s) Summary					
31		IP	port	Type	State	Hits
			Hits/s			

32	svc-internet	192.168.2.2	0	TCP	UP	10	
	0/s						
33							
34		Req	Req/s	Rsp	Rsp/s	Throughp	ClntConn
		SurgeQ					
35	svc-internet	0	0/s	0	0/s	0	0
	0						
36		SvrConn	ReuseP	MaxConn	ActvTran	SvrTTFB	Load
37	svc-internet	0	0	0	0	0	0

The Total counters should constantly increase for an operational system. In addition, the Rate counters should be non-zero.

Note

The preceding output is from an operational yet idle lab system, explaining the zero rate.

SNMP

May 2, 2023

SNMP agent can be queried for system specific information from a remote device (SNMP Manager). Based on the query, the agent searches for the equal object identifier (OID) in the management information base (MIB) for the data requested and sends the information to the SNMP Manager. The following are the most useful SNMP OIDs for Telco deployments:

Memory

- **resMemUsage (1.3.6.1.4.1.5951.4.1.1.41.2)**

Percentage of memory utilization on NetScaler.

Packet Engine CPU

- **resCpuUsage (1.3.6.1.4.1.5951.4.1.1.41.1)**

CPU utilization percentage.

- **nsCPUTable (1.3.6.1.4.1.5951.4.1.1.41.6)**

This table contains information about each CPU in NetScaler.

Indexed on: nsCPUname

- **nsCPUName (1.3.6.1.4.1.5951.4.1.1.41.6.1.1)**

The name of the CPU.

- **nsCPUUsage (1.3.6.1.4.1.5951.4.1.1.41.6.1.2)**

CPU utilization percentage.

Throughput

- **allNicTotRxMbits (1.3.6.1.4.1.5951.4.1.1.71.1)**

Number of megabits received by the NetScaler appliance.

- **allNicTotTxMbits (1.3.6.1.4.1.5951.4.1.1.71.2)**

Number of megabits transmitted by the NetScaler appliance.

- **ipTotRxPkts (1.3.6.1.4.1.5951.4.1.1.43.25)**

IP packets received.

- **ipTotRxMbits (1.3.6.1.4.1.5951.4.1.1.43.27)**

Megabits of IP data received.

- **ipTotTxPkts (1.3.6.1.4.1.5951.4.1.1.43.28)**

IP packets transmitted.

- **ipTotTxMbits (1.3.6.1.4.1.5951.4.1.1.43.30)**

Megabits of IP data transmitted.

Connections

Active connections:

- **tcpActiveServerConn (1.3.6.1.4.1.5951.4.1.1.46.8)**

Connections to a server currently responding to requests.

Total connections:

- **tcpCurServerConn (1.3.6.1.4.1.5951.4.1.1.46.1)**

Server connections, including connections in the Opening, Established, and Closing state.

- **tcpCurClientConn (1.3.6.1.4.1.5951.4.1.1.46.2)**

Client connections, including connections in the Opening, Established, and Closing state.

Note: Because of SYN-Cookie, this doesn't include Client in Opening state

- **tcpTotZombieCltConnFlushed (1.3.6.1.4.1.5951.4.1.1.46.26)**

Client connections that are flushed because the client has been idle for some time.

- **tcpTotZombieSvrConnFlushed (1.3.6.1.4.1.5951.4.1.1.46.27)**

Server connections that are flushed because there have been no client requests in the queue for some time.

Errors

- **tcpErrSynGiveUp (1.3.6.1.4.1.5951.4.1.1.46.37)**

Attempts to establish a connection on the NetScaler that timed out.

- **tcpErrRetransmitGiveUp (1.3.6.1.4.1.5951.4.1.1.46.60)**

Number of times NetScaler terminates a connection after retransmitting the packet seven times on that connection. Retransmission happens when receiving end doesn't acknowledge the packet.

- **ifInDiscards (1.3.6.1.2.1.2.2.1.13)**

The number of inbound packets which were chosen to be discarded even though no errors had been detected to prevent their being deliverable to a higher-layer protocol. One possible reason for discarding such a packet could be to free up buffer space.

- **ifOutDiscards (1.3.6.1.2.1.2.2.1.19)**

The number of outbound packets which were chosen to be discarded even though no errors had been detected to prevent their being transmitted. One possible reason for discarding such a packet could be to free up buffer space.

- **ifErrTxOverflow (1.3.6.1.4.1.5951.4.1.1.54.1.36)**

Number of packets that have passed through the overflow queues, during transmission on the specified interface, since the NetScaler appliance was started or the interface statistics were cleared. This gets incremented only on congested ports.

Optimized/Bypass connections

- **tcpOptimizationEnabled (1.3.6.1.4.1.5951.4.1.1.46.131)**

Total number of connections enabled with TCP optimization.

- **tcpOptimizationBypassed (1.3.6.1.4.1.5951.4.1.1.46.132)**

Total number of connections bypassed TCP Optimization.

Technical Recipes

May 2, 2023

The NetScaler T1 models provide advanced features and a powerful policy configuration language that allow for evaluation of complex decision in runtime.

While it is not possible to evaluate all capabilities that are potentially unlocked by the T1000 features and policy configuration guide, technical recipes consider implementation of various requirements brought in by Telco operators. Feel free to re-use the “recipes” as is or adapt to your environment.

Per-user Connection Limit

The NetScaler T1 model can be configured to limit the number of connections per unique subscriber IP. With the below configuration, N concurrent TCP connections per IP (CLIENT.IP.SRC) is allowed. For every attempt for connection beyond the configured threshold, T1 sends an RST. For maximum 2 concurrent connections per user:

Command:

```
1 add stream selector streamSel_usrlimit CLIENT.IP.SRC
2 add ns limitIdentifier limitId_usrlimit -threshold 2 -mode CONNECTION -
  selectorName streamSel_usrlimit
3 add responder policy respPol_usrlimit "SYS.CHECK_LIMIT(\"
  limitId_usrlimit\")" RESET
4 bind lb vserver vsrv-wireless -policyName respPol_usrlimit -priority 1
  -gotoPriorityExpression END
```

Smooth Insertion/Deletion of Vserver

Many operators concern about TCP connections disruption when the NetScaler T1 model is activated inline for TCP optimization or when it is disabled for maintenance purposes. To avoid breaking existing connections when vserver is introduced, the following configuration needs to be applied before configuring or activating vserver for TCP optimization:

Command:

```
1 add ns acl acl-ingress ALLOW -vlan 100
2 add forwardingSession fwd-ingress -aclname acl-ingress
3 apply ns acls
```

Forwarding sessions are effective on top of routing (either static or dynamic or PBR) and create session entries for traffic that is routed (L3 mode). Any existing connection is handled by forwarding session due to corresponding sessions, and upon vserver introduction it starts capturing only new TCP connections.

ACLs can be configured to capture only specific ports like vserver, in order to avoid creating sessions for unnecessary traffic, which is memory consuming. Another option is to remove specific configuration after vserver activation.

For maintenance purposes, vserver should be disabled and its state appears as OUT OF SERVICE. When this happens, the vserver terminates all connections immediately by default. To make vserver to still serve the existing connections and not accept new, the following configuration should be applied:

Command:

```
1 set lb vserver vsrv-wireless -downStateFlush DISABLED
```

New connections go through the routing table, and corresponding session entries are created due to forwarding sessions.

Policy-Based TCP Profiling

Policy-based TCP Profile selection allows operators to configure TCP profile dynamically for clients coming from different traffic domains (i.e. 3G or 4G). Some of the QoS metrics are different for these traffic domains, and in order to achieve better performance, you need to change some of the TCP parameter dynamically. Consider a case where clients coming from 3G and 4G hit same vserver and use same TCP profile, which have negative impact on some client's performance. AppQoE functionality can classify these clients and dynamically change TCP profile on vserver.

Example:

```
1 enable feature AppQoE
2
3 add ns tcpProfile nstcpprofile1 -WS ENABLED -SACK ENABLED -WSVal 8 -mss
  1460 -maxBurst 30 -initialCwnd 16 -oooQSize 15000 -minRTO 800 -
  slowStartIncr 1 -bufferSize 4000000 -flavor BIC -KA ENABLED -
  sendBuffsize 4000000 -rstWindowAttenuate ENABLED -spooofSynDrop
  ENABLED -frto ENABLED -maxcwnd 1000000 -fack ENABLED -tcpmode
  ENDPOINT
4
```

```

5  add ns tcpProfile nstcpprofile2 -WS ENABLED -SACK ENABLED -WSVal 8 -mss
    1460 -maxBurst 15 -initialCwnd 16 -oooQSize 15000 -minRTO 800 -
    slowStartIncr 1 -bufferSize 128000 -flavor BIC -KA ENABLED -
    sendBuffsize 6000000 -rstWindowAttenuate ENABLED -spooofSynDrop
    ENABLED -frto ENABLED -maxcwnd 64000 -fack ENABLED -tcpmode ENDPOINT
6
7  add appqoe action action_1 -priority HIGH -tcpprofile nstcpprofile1
8
9  add appqoe action action_2 -priority HIGH -tcpprofile nstcpprofile2
10
11 add appqoe policy appqoe_4G -rule "CLIENT.VLAN.ID.EQ(100)" -action
    action_1
12
13 add appqoe policy appqoe_3G -rule "CLIENT.VLAN.ID.EQ(200)" -action
    action_2
14
15 bind lb vserver vsrv-wireless -policyName appqoe_4G -priority 100
16
17 bind lb vserver vsrv-wireless -policyName appqoe_3G -priority 110

```

The NetScaler T1 model is capable to receive the subscriber information dynamically through Gx or Radius or Radius and Gx interface and apply different TCP profile on a per-subscriber basis.

Command:

```

1  add appqoe action action_1 -priority HIGH -tcpprofile nstcpprofile1
2
3  add appqoe action action_2 -priority HIGH -tcpprofile nstcpprofile2
4
5  add appqoe policy appqoe_4G -rule "SUBSCRIBER.RULE_ACTIVE(\"3G\")" -
    action action_1
6
7  add appqoe policy appqoe_3G -rule "SUBSCRIBER.RULE_ACTIVE(\"4G\")" -
    action action_2

```

For integration of the NetScaler T1 model with operator control-plane network, see [Telco Subscriber Management](#).


Scalability

May 2, 2023

Because TCP optimization is resource intensive, a single NetScaler appliance, even a high end –appliance, might not be able to sustain high Gi-LAN throughputs. To expand the capacity of your network, you can deploy NetScaler appliances in an N+1 cluster formation. In a cluster deployment, the NetScaler appliances work together as a single system image. The client traffic is distributed across the cluster nodes with the help of external switch device.

Topology

Figure 1 is an example of a cluster consisting of four T1300-40G nodes.

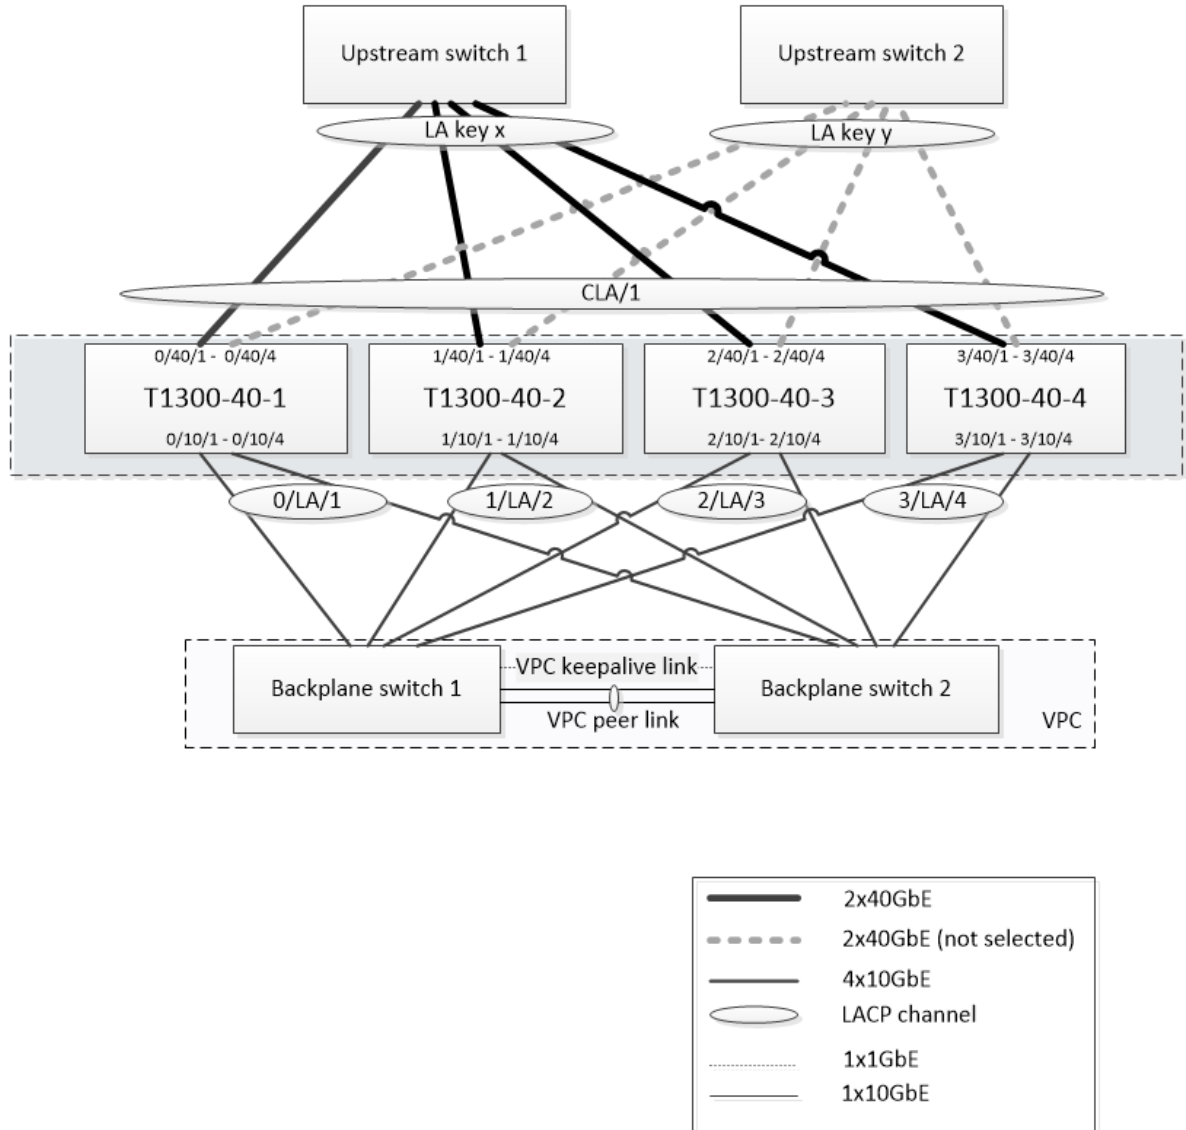

The setup shown in Figure 1 has the following properties:

1. All cluster nodes belong to the same network (also known as an L2 cluster).
2. Data plane and backplane traffic are handled by different switches.
3. Assuming Gi-LAN throughput is 200 Gbps and that a T1300-40G appliance can sustain 80Gbps of throughput, we need three T1300-40G appliances. To provide redundancy in case of single cluster node failure, we deploy four appliances in total.
4. Each node will receive up to 67Gbps of traffic (50Gbps in normal operating conditions and 67Gbps in case of single cluster node failure), so it needs 2x40Gbps connections to the upstream switch. To provide redundancy in case of switch failure, we deploy a couple of upstream

switches and double the number of connections.

5. Cluster Link Aggregation (CLAG) is used to distribute traffic across cluster nodes. A single CLAG handles both client and server traffic. Link Redundancy is enabled on the CLAG, so only one “subchannel” is selected at any given time and handles the traffic. If some link fails or throughput falls below specified threshold, the other subchannel is selected.
6. The upstream switch performs symmetric port-channel load balancing (for example, source-dest-ip-only algorithm of Cisco IOS 7.0(8) N1(1)) so that forward and reverse traffic flows are handled by the same cluster node. This property is desirable because it eliminates packet re-ordering, which would degrade TCP performance.
7. Fifty percent of data traffic is expected to be steered to backplane, which means each node will steer up to 34Gbps to other cluster nodes (25Gbps in normal operating conditions and 34Gbps in case of single cluster node failure). Thus, each node needs at least 4x10G connections to the backplane switch. To provide redundancy in case of switch failure, we deploy a couple of backplane switches and double the number of connections. Link redundancy is not currently supported for backplane, so Cisco VPC or equivalent technology is desired to achieve switch-level redundancy.
8. MTU size of steered packets is 1578 bytes, so backplane switches must support an MTU more than 1500 bytes.

Note: The design depicted in Figure 1 is also applicable to T1120 and T1310 appliances. For T1310 we would use 40GbE interfaces for the backplane connections, since it lacks 10GbE ports.

Note: While this document uses Cisco VPC as an example, if working with non-Cisco switches alternate equivalent solutions could be used, such as Juniper’s MLAG.

Note: While other topologies such as ECMP instead of CLAG are possible, they are not currently supported for this particular use case.

Configuring TCP Optimization in a NetScaler T1000 Cluster

After physical installation, physical connectivity, software installation, and licensing are completed, you can proceed with the actual cluster configuration. The configurations described below apply to the cluster depicted in Figure 1.

Note: For more information about cluster configuration, see [Setting up a NetScaler cluster](#).

Assume that the four T1300 nodes in Figure 1 have the following NSIP addresses:

Four T1300 nodes with NSIP address:

```
1 T1300-40-1: 10.102.29.60
2 T1300-40-2: 10.102.29.70
3 T1300-40-3: 10.102.29.80
4 T1300-40-4: 10.102.29.90
```

The cluster will be managed through the cluster IP (CLIP) address, which is assumed to be 10.78.16.61.

Setting Up the Cluster

To begin configuring the cluster shown in Figure 1, log on to the first appliance that you want to add to the cluster (for example, T1300-40-1) and do the following.

1. At the command prompt, enter the following commands:

Command:

```
1 > add cluster instance 1
2 > add cluster node 0 10.102.29.60 -state ACTIVE
3 > add ns ip 10.102.29.61 255.255.255.255 -type clip
4 > enable cluster instance 1
5 > save ns config
6 > reboot -warm
```

2. After the appliance restarts, connect to the Cluster IP (CLIP) address and add the rest of the nodes to the cluster:

Command:

```
1 > add cluster node 1 10.102.29.70 -state ACTIVE
2 > add cluster node 2 10.102.29.80 -state ACTIVE
3 > add cluster node 3 10.102.29.90 -state ACTIVE
4 > save ns config
```

3. Connect to the NSIP address of each of the newly added nodes and join the cluster:

Command:

```
1 > join cluster -clip 10.102.29.61 -password nsroot
2 > save ns config
3 > reboot -warm
```

4. After the nodes restart, proceed with backplane configuration. On the cluster IP address, enter the following commands to create an LACP channel for the backplane link of each cluster node:

Command:

```
1 > set interface 0/10/[1-8] - lacpkey 1 - lacpmode ACTIVE
2 > set interface 1/10/[1-8] - lacpkey 2 - lacpmode ACTIVE
3 > set interface 2/10/[1-8] - lacpkey 3 - lacpmode ACTIVE
4 > set interface 3/10/[1-8] - lacpkey 4 - lacpmode ACTIVE
```

5. Similarly, configure dynamic LA and VPC on the backplane switches. Make sure the MTU of the backplane switch interfaces is at least 1578 bytes.

6. Verify the channels are operational:

Command:

```
1 > show channel 0/LA/1
2 > show channel 1/LA/2
3 > show channel 2/LA/3
4 > show channel 3/LA/4
```

7. Configure the cluster node backplane interfaces.

Command:

```
1 > set cluster node 0 -backplane 0/LA/1
2 > set cluster node 1 -backplane 1/LA/2
3 > set cluster node 2 -backplane 2/LA/3
4 > set cluster node 3 -backplane 3/LA/4
```

8. Check the cluster status and verify that the cluster is operational:

```
1 > show cluster instance
2 > show cluster node
```

For more information on cluster setup, see [Setting up a NetScaler cluster](#)

Distributing Traffic Across Cluster Nodes

After you have formed the NetScaler cluster, deploy Cluster Link Aggregation (CLAG) to distribute traffic across cluster nodes. A single CLAG link will handle both client and server traffic.

On the cluster IP address, execute the following commands to create the Cluster Link Aggregation (CLAG) group shown in Figure 1:

Command:

```
1 > set interface 0/40/[1-4] -lacpMode active -lacpKey 5 -lagType Cluster
2 > set interface 1/40/[1-4] -lacpMode active -lacpKey 5 -lagType Cluster
3 > set interface 2/40/[1-4] -lacpMode active -lacpKey 5 -lagType Cluster
4 > set interface 3/40/[1-4] -lacpMode active -lacpKey 5 -lagType Cluster
```

Configure dynamic link aggregation on the external switches.

Then, enable Link Redundancy as follows:

Code:

```
1 > set channel CLA/1 -linkRedundancy ON -lrMinThroughput 240000
```

Finally, check the channel status by entering:

Command:

```
1 > show channel CLA/1
```

The channel should be UP and the actual throughput should be 320000.

For more information about cluster link aggregation, see the following topics:

- [Dynamic Cluster Link Aggregation](#)
- [Link Redundancy in a Cluster with LACP.](#)

Because we will be using MAC-based forwarding (MBF), configure a linkset and bind it to the CLAG group as follows:

Command:

```
1 > add linkset LS/1
2 > bind linkset LS/1 -ifnum CLA/1
```

More information about linksets, see the following topics:

- [Configuring Linksets](#)
- [Using Cluster LA Channel with Linksets](#)

Configuring VLAN and IP Addresses

We will be using striped IP configuration, which means that IP addresses are active on all nodes (default setting). See [Striped, Partially Striped, and Spotted Configurations](#) for more information about this topic.

1. Add the ingress and egress SNIPs:

Command:

```
1 > add ns ip 172.16.30.254 255.255.255.0 -type SNIP
2 > add ns ip 172.16.31.254 255.255.255.0 -type SNIP
3 > add ns ip6 fd00:172:16:30::254/112 -type SNIP
4 > add ns ip6 fd00:172:16:31::254/112 -type SNIP
```

2. Add the corresponding ingress and egress VLANs:

Command:

```
1 > add vlan 30 -aliasName wireless
2 > add vlan 31 -aliasName internet
```

3. Bind VLANs with IPs and linkset:

Command:

```
1 > bind vlan 31 -ifnum LS/1 -tagged
2 > bind vlan 30 -ifnum LS/1 -tagged
3 > bind vlan 30 -IPAddress 172.16.30.254 255.255.255.0
4 > bind vlan 31 -IPAddress 172.16.31.254 255.255.255.0
5 > bind vlan 30 -IPAddress fd00:172:16:30::254/112
6 > bind vlan 31 -IPAddress fd00:172:16:31::254/112
```

More ingress and egress VLANs can be added if needed.

Configuring TCP Optimization

At this point, we have applied all cluster specific commands. To complete the configuration, follow the steps described in [TCP optimization configuration](#).

Configuring Dynamic Routing

A NetScaler cluster can be integrated into the dynamic routing environment of the customer's network. Following is an example of dynamic routing configuration using BGP routing protocol (OSPF is also supported).

1. From the CLIP address, enable BGP and dynamic routing on ingress and egress IP addresses:

Command:

```
1 > enable ns feature bgp
2 > set ns ip 172.16.30.254 -dynamicRouting ENABLED
3 > set ns ip 172.16.31.254 -dynamicRouting ENABLED
```

2. Open vtysh and configure BGP for the egress side:

Code:

```
1 > shell
2 root@ns# vtysh
3 ns# configure terminal
4 ns(config)# router bgp 65531
5 ns(config-router)# network 10.0.0.0/24
6 ns(config-router)# neighbor 172.16.31.100 remote-as 65530
7 ns(config-router)# neighbor 172.16.31.100 update-source
   172.16.31.254
8 ns(config-router)# exit
9 ns(config)# ns route-install propagate
10 ns(config)# ns route-install default
11 ns(config)# ns route-install bgp
12 ns(config)# exit
```

3. Configure the egress-side BGP peer to advertise the default route to the NetScaler cluster. For example:

Command:

```
1 router bgp 65530
2   bgp router-id 172.16.31.100
3   network 0.0.0.0/0
4   neighbor 172.16.31.254 remote-as 65531
```

4. Follow similar steps to configure the ingress side.
5. From vtysh verify that configuration is propagated to all cluster nodes, by entering:

Command:

```
1 ns# show running-config
```

6. Finally, log on to NSIP address of each cluster node and verify routes advertised from BGP peer:

Command:

```
1 > show route | grep BGP
```

Optimizing TCP Performance using TCP Nile

April 16, 2024

TCP uses the following optimization techniques and congestion control strategies (or algorithms) to avoid network congestion in data transmission.

Congestion Control Strategies

The Transmission Control Protocol (TCP) has long been used to establish and manage Internet connections, handle transmission errors, and smoothly connect web applications with client devices. But network traffic has become more difficult to control, because packet loss does not depend only on the congestion in the network, and congestion does not necessarily cause packet loss. Therefore, to measure congestion, a TCP algorithm should focus on both packet loss and bandwidth.

NILE Algorithm

Citrix Systems has developed a new congestion-control algorithm, NILE, a TCP optimization algorithm designed for high-speed networks such as LTE, LTE advanced and 3G. Nile addresses unique challenges caused by fading, random or congestive losses, link layer retransmissions and carrier aggregation.

The NILE algorithm:

- Bases queue-latency estimates on round-trip time measurements.
- Uses a congestion-window-increase function that is inversely proportional to the measured queue latency. This method results in approaching the network congestion point more slowly than does the standard TCP method, and reduces the packet losses during congestion.
- Can distinguish between random loss and congestion based loss on the network by using the estimated queue latency.

The telecom service providers can use the NILE algorithm in their TCP infrastructure to:

- Optimize mobile and long-distance networks—The NILE algorithm achieves higher throughput compared to standard TCP. This feature is especially important for mobile and long-distance networks.
- Decrease application perceived latency and enhance subscriber experience—The Nile algorithm uses packet loss information to determine whether the transmission-window size should be increased or decreased, and uses queuing delay information to determine the size of the increment or decrement. This dynamic setting of transmission-window size decreases the application latency on the network.

To configure NILE support using the command line interface

At the command prompt, type the following:

```
1 set ns tcpProfile <name> [-flavor NILE]
```

Configuring NILE support using the configuration utility

1. Navigate to **System > Profiles > TCP Profiles** and click **TCP profiles**.
2. From the **TCP Flavor** drop-down list, select **NILE**.

Example:

```
1 set ns tcpProfile tcpprofile1 -flavor NILE
```

Proportional Rate Recovery (PRR) Algorithm

TCP Fast Recovery mechanisms reduce web latency caused by packet losses. The new Proportional Rate Recovery (PRR) algorithm is a fast recovery algorithm that evaluates TCP data during a loss recovery. It is patterned after Rate-Halving, by using the fraction that is appropriate for the target window chosen by the congestion control algorithm. It minimizes window adjustment, and the actual window size at the end of recovery is close to the Slow-Start threshold (ssthresh).

TCP Fast Open (TFO)

TCP Fast Open (TFO) is a TCP mechanism that enables speedy and safe data exchange between a client and a server during TCP's initial handshake. This feature is available as a TCP option in the TCP profile bound to a virtual server of a NetScaler appliance. TFO uses a TCP Fast Open Cookie (a security cookie) that the NetScaler appliance generates to validate and authenticate the client initiating a TFO connection to the virtual server. By using the TFO mechanism, you can reduce an application's network latency by the time required for one full round trip, which significantly reduces the delay experienced in short TCP transfers.

How TFO works

When a client tries to establish a TFO connection, it includes a TCP Fast Open Cookie with the initial SYN segment to authenticate itself. If authentication is successful, the virtual server on the NetScaler appliance can include data in the SYN-ACK segment even though it has not received the final ACK segment of the three-way handshake. This saves up to one full round-trip compared to a normal TCP connection, which requires a three-way handshake before any data can be exchanged.

A client and a backend server perform the following steps to establish a TFO connection and exchange data securely during the initial TCP handshake.

1. If the client does not have a TCP Fast Open Cookie to authenticate itself, it sends a Fast Open Cookie request in the SYN packet to the virtual server on the NetScaler appliance.
2. If the TFO option is enabled in the TCP profile bound to the virtual server, the appliance generates a cookie (by encrypting the client's IP address under a secret key) and responds to the client with a SYN-ACK that includes the generated Fast Open Cookie in a TCP option field.
3. The client caches the cookie for future TFO connections to the same virtual server on the appliance.
4. When the client tries to establish a TFO connection to the same virtual server, it sends SYN that includes the cached Fast Open Cookie (as a TCP option) along with HTTP data.
5. The NetScaler appliance validates the cookie, and if the authentication is successful, the server accepts the data in the SYN packet and acknowledges the event with a SYN-ACK, TFO Cookie, and HTTP Response.

Note: If the client authentication fails, the server drops the data and acknowledges the event only with a SYN indicating a session timeout.

1. On the server side, if the TFO option is enabled in a TCP profile bound to a service, the NetScaler appliance determines whether the TCP Fast Open Cookie is present in the service to which it is trying to connect.
2. If the TCP Fast Open Cookie is not present, the appliance sends a cookie request in the SYN packet.

3. When the backend server sends the Cookie, the appliance stores the cookie in the server information cache.
4. If the appliance already has a cookie for the given destination IP pair, it replaces the old cookie with the new one.
5. If the cookie is available in the server information cache when the virtual server tries to reconnect to the same backend server by using the same SNIP address, the appliance combines the data in SYN packet with the cookie and sends it to the backend server.
6. The backend server acknowledges the event with both data and a SYN.

Note: If the server acknowledges the event with only a SYN segment, the NetScaler appliance immediately resends the data packet after removing the SYN segment and the TCP options from the original packet.

Configuring TCP Fast Open

To use the TCP Fast Open (TFO) feature, enable the TCP Fast Open option in the relevant TCP profile and set the TFO Cookie Timeout parameter to a value that suits the security requirement for that profile.

To enable or disable TFO by using the command line At the command prompt, type one of the following commands to enable or disable TFO in a new or existing profile.

Note: The default value is DISABLED.

```
1 add tcpprofile <TCP Profile Name> - tcpFastOpen ENABLED | DISABLED
2 set tcpprofile <TCP Profile Name> - tcpFastOpen ENABLED | DISABLED
3 unset tcpprofile <TCP Profile Name> - tcpFastOpen
```

Examples:

```
add tcpprofile Profile1 -tcpFastOpen
Set tcpprofile Profile1 -tcpFastOpen Enabled
unset tcpprofile Profile1 -tcpFastOpen
```

To set TCP Fast Open cookie timeout value by using the command line interface

At the command prompt, type:

```
1 set tcpparam -tcpfastOpenCookieTimeout <Timeout Value>
```

Example:

```
1 set tcpprofile - tcpfastOpenCookieTimeout 30secs
```

To configure the TCP Fast Open by using the GUI

1. Navigate to **Configuration > System > Profiles >** and then click **Edit** to modify a TCP profile.
2. On the **Configure TCP Profile** page, select the **TCP Fast Open** checkbox.
3. Click **OK** and then **Done**.

To Configure the TCP Fast Cookie timeout value by using the GUI

Navigate to **Configuration > System > Settings > Change TCP Parameters** and then **Configure TCP Parameters** page to set the TCP Fast Open Cookie timeout value.

TCP Hystart

A new TCP profile parameter, hystart, enables the Hystart algorithm, which is a slow-start algorithm that dynamically determines a safe point at which to terminate (ssthresh). It enables a transition to congestion avoidance without heavy packet losses. This new parameter is disabled by default.

If congestion is detected, Hystart enters a congestion avoidance phase. Enabling it gives you better throughput in high-speed networks with high packet loss. This algorithm helps maintain close to maximum bandwidth while processing transactions. It can therefore improve throughput.

Configuring TCP Hystart

To use the Hystart feature, enable the Cubic Hystart option in the relevant TCP profile.

To configure Hystart by using the command line interface (CLI)

At the command prompt, type one of the following commands to enable or disable Hystart in a new or existing TCP profile.

```
1 add tcpprofile <profileName> -hystart ENABLED
2 set tcpprofile <profileName> -hystart ENABLED
3 unset tcpprofile <profileName> -hystart
```

Examples:

```
1 add tcpprofile Profile1 - tcpFastOpen
2 Set tcpprofile Profile1 - tcpFastOpen Enabled
3 unset tcpprofile Profile1 - tcpFastOpen
```


To configure Hystart support by using the GUI

1. Navigate to **Configuration > System > Profiles >** and click **Edit** to modify a TCP profile.
2. On the **Configure TCP Profile** page, select the **Cubic Hystart** check box.
3. Click **OK** and then **Done**.

Optimization Techniques

TCP uses the following optimization techniques and methods for optimized flow controls.

Policy based TCP Profile Selection

Network traffic today is more diverse and bandwidth-intensive than ever before. With the increased traffic, the effect that Quality of Service (QoS) has on TCP performance is significant. To enhance QoS, you can now configure AppQoE policies with different TCP profiles for different classes of network traffic. The AppQoE policy classifies a virtual server's traffic to associate a TCP profile optimized for a particular type of traffic, such as 3G, 4G, LAN, or WAN.

To use this feature, create a policy action for each TCP profile, associate an action with AppQoE policies, and bind the policies to the load balancing virtual servers.

Configuring Policy Based TCP Profile Selection

Configuring policy based TCP profile selection consists of the following tasks:

- Enabling AppQoE. Before configuring the TCP profile feature, you must enable the AppQoE feature.
- Adding AppQoE Action. After enabling the AppQoE feature, configure an AppQoE action with a TCP profile.
- Configuring AppQoE based TCP Profile Selection. To implement TCP profile selection for different classes of traffic, you must configure AppQoE policies with which your NetScaler appliance can distinguish the connections and bind the correct AppQoE action to each policy.
- Binding AppQoE Policy to Virtual Server. Once you have configured the AppQoE policies, you must bind them to one or more load balancing, content switching, or cache redirection virtual servers.

Configuring using the command line interface

To enable AppQoE by using the command line interface:

At the command prompt, type the following commands to enable the feature and verify that it is enabled:

```
1 enable ns feature appqoe
2
3 show ns feature
```

To bind a TCP profile while creating an AppQoE action using the command line interface At the command prompt, type the following AppQoE action command with tcpprofiletobind option.

Binding a TCP Profile:

```
1 add appqoe action <name> [-priority <priority>] [-respondWith ( ACS |
  NS ) [<CustomFile>] [-altContentSvcName <string>] [-altContentPath <
  string>] [-maxConn <positive_integer>] [-delay <usecs>]] [-polqDepth
  <positive_integer>] [-priqDepth <positive_integer>] [-
  dosTrigExpression <expression>] [-dosAction ( SimpleResponse |
  HICResponse )] [-tcpprofiletobind <string>]
2
3 show appqoe action
```

To configure an AppQoE policy by using the command line interface

At the command prompt, type:

```
1 add appqoe policy <name> -rule <expression> -action <string>
```

To bind an AppQoE policy to load balancing, cache redirection or content switching virtual servers by using the command line interface

At the command prompt, type:

```
1 bind cs vserver cs1 -policyName <appqoe_policy_name> -priority <
  priority>
2 bind lb vserver <name> - policyName <appqoe_policy_name> -priority <
  priority>
3 bind cr vserver <name> -policyName <appqoe_policy_name> -priority <
  priority>
```

Example:

```
1 add ns tcpProfile tcp1 -WS ENABLED -SACK ENABLED -WSVal 8 -nagle
  ENABLED -maxBurst 30 -initialCwnd 16 -oooQSize 15000 -minRTO 500 -
  slowStartIncr 1 -bufferSize 4194304 -flavor BIC -KA ENABLED -
  sendBuffsize 4194304 -rstWindowAttenuate ENABLED -spooofSynDrop
  ENABLED -dsack enabled -frto ENABLED -maxcwnd 4000000 -fack ENABLED
  -tcpmode ENDPOINT
```

```
2
3 add appqoe action appact1 -priority HIGH -tcpprofile tcp1
4
5 add appqoe policy apppol1 -rule "client.ip.src.eq(10.102.71.31)" -
  action appact1
6
7 bind lb vserver lb2 -policyName apppol1 -priority 1 -
  gotoPriorityExpression END -type REQUEST
8
9 bind cs vserver cs1 -policyName apppol1 -priority 1 -
  gotoPriorityExpression END -type REQUEST
```

Configuring Policy based TCP Profiling using the GUI

To enable AppQoE by using the GUI

1. Navigate to **System > Settings**.
2. In the details pane, click **Configure Advanced Features**.
3. In the **Configure Advanced Features** dialog box, select the **AppQoE** check box.
4. Click **OK**.

To configure AppQoE policy by using the GUI

1. Navigate to **App-Expert > AppQoE > Actions**.
2. In the details pane, do one of the following:
3. To create a new action, click **Add**.
4. To modify an existing action, select the action, and then click **Edit**.
5. In the **Create AppQoE Action** or the **Configure AppQoE Action** screen, type or select values for the parameters. The contents of the dialog box correspond to the parameters described in “Parameters for configuring the AppQoE Action” as follows (asterisk indicates a required parameter):
 - a) Name—name
 - b) Action type—respondWith
 - c) Priority—priority
 - d) Policy Queue Depth—polqDepth
 - e) Queue Depth—priqDepth
 - f) DOS Action—dosAction
6. Click **Create**.

To bind AppQoE policy by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, select a server and then click **Edit**.
2. In the **Policies** section and click (+) to bind an AppQoE policy.
3. In the **Policies** slider, do the following:
 - a) Select a policy type as AppQoE from the drop-down list.
 - b) Select a traffic type from the drop-down list.
4. In the **Policy Binding** section, do the following:
 - a) Click **New** to create a new AppQoE policy.
 - b) Click **Existing Policy** to select an AppQoE policy from the drop-down list.
5. Set the binding priority and click **Bind** to the policy to the virtual server.
6. Click **Done**.

SACK Block Generation

TCP performance slows down when multiple packets are lost in one window of data. In such a scenario, a Selective Acknowledgement (SACK) mechanism combined with a selective repeat retransmission policy overcomes this limitation. For every incoming out-of-order packet, you must generate a SACK block.

If the out-of-order packet fits in the reassembly queue block, insert packet info in the block, and set the complete block info as SACK-0. If an out-of-order packet does not fit into reassembly block, send the packet as SACK-0 and repeat the earlier SACK blocks. If an out-of-order packet is a duplicate and packet info is set as SACK-0 then D-SACK the block.

Note: A packet is considered as D-SACK if it is an acknowledged packet, or an out of order packet which is already received.

Client Reneging

A NetScaler appliance can handle client reneging during SACK based recovery.

Memory checks for marking end_point on PCB is not considering total available memory

In a NetScaler appliance, if the memory usage threshold is set to 75 percent instead of using the total available memory, it causes new TCP connections to bypass TCP optimization.

Unnecessary retransmissions due to missing SACK blocks

In a non-endpoint mode, when you send DUPACKS, if SACK blocks are missing for few out of order packets, triggers additional retransmissions from the server.

SNMP for number of connections bypassed optimization because of overload

The following SNMP ids have been added to a NetScaler appliance to track number of connections bypassed TCP optimization due to overload.

1. 1.3.6.1.4.1.5951.4.1.1.46.13 (tcpOptimizationEnabled). To track the total number of connections enabled with TCP optimization.
2. 1.3.6.1.4.1.5951.4.1.1.46.132 (tcpOptimizationBypassed). To track the total number of connections bypassed TCP Optimization.

Dynamic Receive Buffer

To maximize TCP performance, a NetScaler appliance can now dynamically adjust the TCP receive buffer size.

Troubleshooting Guidelines

May 2, 2023

Technical Support

All troubleshooting and escalation queries require a recent NetScaler techsupport bundle, which captures current configuration, firmware version installed, log files, outstanding cores, and others.

Example:

```
1 show techsupport
2
3 showtechsupport data collector tool - $Revision: #5 $!
4 ...
```

All the data will be collected under

```
1 ...
2 Archiving all the data into "/var/tmp/support/collector_P_192
   .168.121.117_18Jun2015_09_53.tar.gz" ....
```

- ```
3 Created a symbolic link for the archive with /var/tmp/support/support.
 tgz
4 /var/tmp/support/support.tgz ---- points to ---> /var/tmp/support/
 collector_P_192.168.121.117_18Jun2015_09_53.tar.gz
```

After a techsupport bundle has been generated, it might be copied using SCP.

## Traces


NetScaler TCP optimization issues normally require NetScaler traces to troubleshoot properly. Note that one should try to capture traces under similar conditions, i.e. on the same cell, during the same time of day, using the same user equipment and application, and others.

The start nstrace and stop nstrace commands might be used to capture traces:

- It's strongly recommended that the appropriate filter is used to avoid capturing extraneous, unnecessary packets on the trace. For instance use start nstrace -filter 'IP == 10.20.30.40' to only capture packets being sent to or received from IP address 10.20.30.40, which is the user equipment IP address.
- Do not use the -tcpdump option, since it strips the nstrace headers which are required for debugging.

## Trace Analysis

After a NetScaler trace has been captured, it might be viewed with Wireshark 1.12 or later. Verify that the captured traces include the appropriate NetScaler Packet Trace headers, as shown in the screen capture below:

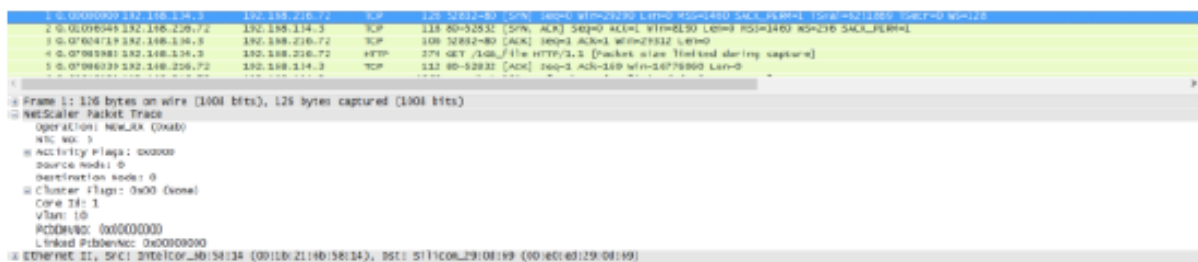

The additional debug headers are also visible per the illustration below:

|    |             |             |                |                |     |       |       |      |
|----|-------------|-------------|----------------|----------------|-----|-------|-------|------|
| 29 | 0.187895407 | 0.000002025 | 192.168.134.3  | 192.168.216.72 | TCP | 169   | 16061 | 106  |
| 30 | 0.187896825 | 0.000001418 | 192.168.134.3  | 192.168.216.72 | TCP | 169   | 21901 | 106  |
| 31 | 0.187898029 | 0.000001204 | 192.168.134.3  | 192.168.216.72 | TCP | 169   | 23361 | 106  |
| 32 | 0.187899320 | 0.000001291 | 192.168.216.72 | 192.168.134.3  | TCP | 20661 | 169   | 1566 |
| 33 | 0.187899596 | 0.000000276 | 192.168.216.72 | 192.168.134.3  | TCP | 32121 | 169   | 1566 |

Frame 16: 1566 bytes on wire (12528 bits), 252 bytes captured (2016 bits)

NetScaler Packet Trace

- operation: TXS (0xab)
- Nic No: 5
- Activity Flags: 0x0000
- sendCmd: 23360
- RTT: 10
- tsRecent: 613200
- httpAbortCode: 0
- Source Node: 0
- Destination Node: 0
- Cluster Flags: 0x00 (None)
- Core Id: 1
- Vlan: 10
- PcbDevNo: 0x00000000
- Linked PcbDevNo: 0x00000000

Ethernet II, Src: Silicom\_29:0d:69 (00:e0:ed:29:0d:69), Dst: IntelCor\_6b:58:14 (00:1b:21:6b:58:14)

## Connection Table

When the issue is related to TCP optimization and it can be reproduced or it's on-going, it is best to get also the connection table when the issue occurs from the primary T1 node.

To get the table you shall need to switch to the BSD shell and run the following command:

```
1 shell
2 ...
3
4 nscli -U 127.0.0.1:nsroot:nsroot show connectiontable -detail full link
 > /var/tmp/contable.log
```

### Note

The command might be executed for a longer time and management CPU might be stressed at that time (depends on the number of connection table entries), but it's not service affecting.

## Frequently Asked Questions

May 2, 2023

### Timeouts

#### Important

Before using *any nsapimgr* knob, consult with Citrix Customer Support.

The following is a list of different idle connection timeouts that can be set on NetScaler T1 virtual servers and services. Idle timeout set for client or server connections at the vserver or service level are applicable only for the connections in TCP ESTABLISHED state and are idle.

- Load Balancing virtual server `cltTimeout` parameter specifies the time in seconds that a connection from a client to a Load Balancing virtual server must be idle, before the appliance closes the connection.
- Service `svrTimeout` parameter specifies the time in seconds that a connection from the appliance to a service or server must be idle, before the appliance closes the connection.
- Service `cltTimeout` parameter specifies the time in seconds that a connection from a client to a service must be idle, before the appliance closes the connection.

When a service is bound to a Load Balancing virtual server, then the `cltTimeout` for the Load Balancing virtual server takes precedence, and the service `cltTimeout` for service is ignored.

In case of there is not service bound to Load Balancing virtual server, global idle timeout, namely `tcpServer`, is used for server side connections. It can be configured as follows:

**Command:**

```
1 set ns timeout - tcpServer 9000
```

Connections in other state have different timeout values:

- Half open connections idle timeout: 120 seconds (hardcoded value)
- `TIME_WAIT` connections idle timeout: 40 seconds (hardcoded value)
- Half close connections idle timeout. By default it is 10s and can be configured between 1s and 600s using the snippet

**Command:**

```
1 set ns timeout - halfclose 10
```

When half-close timeout is triggered, connection is moved to zombie state. When zombie timeout expires, zombie cleanup kicks in and T1 sends RST on both client and server side for given connection by default.

- Zombie timeout: Interval at which the zombie cleanup process must run to clean up inactive TCP connections. Default timeout value is 120s and can be configured between 1s and 600s.

**Command:**

```
1 set ns timeout - zombie 120
```



## Maximum Segment Size Table

A NetScaler T1 appliance defends against SYN flood attacks by using SYN cookies instead of maintaining half-open connections on the system memory stack. The appliance sends a cookie to each client that requests a TCP connection, but it does not maintain the states of half-open connections. Instead, the appliance allocates system memory for a connection only upon receiving the final ACK packet, or, for HTTP traffic, upon receiving an HTTP request. This prevents SYN attacks and allows normal TCP communications with legitimate clients to continue uninterrupted. Specific function is enabled by default without option to disable.

However, there is caveat as standard SYN cookies limit connections to the use of only eight Maximum Segment Size (MSS) values. If connection MSS does not match with any predefined value, it will pick up the next available lower value towards both client and server side.

The predefined TCP Maximum Segment Size (MSS) values are the following and can be configured through a new `nsapimgr` knob.

---

|      |      |      |      |     |     |     |     |
|------|------|------|------|-----|-----|-----|-----|
| 1460 | 1440 | 1330 | 1220 | 956 | 536 | 384 | 128 |
|------|------|------|------|-----|-----|-----|-----|

---

The new MSS table:

- Need not contain Jumbo-Frame support. Even though by default 8 values are reserved in the MSS table for jumbo frames, the table settings can be modified to include standard Ethernet-sized frames only.
- Should have 16 values
- Should have values in descending order
- Should include 128 as the last value

If the new MSS table is valid, the table is stored and the old values are switched out at the SYN-cookie rotation time. Otherwise the new table returns an error. Changes are applied to new connections while existing connections preserve the old MSS table until the connections expire or are terminated.

To display the current MSS table in a NetScaler appliance, type the following command.

### Command:

```
1 >shell
2
3 #nsapimgr -d mss_table
```

### Example:

```
1 #nsapimgr -d mss_table
2
3 MSS table
4
5 {
6 9176,9156,8192,7168,6144,4196,3072,2048,1460,1440,1330,1212,956,536,384,128
7 }
8
9 Done.
```

To change the mss table, type the following command:

**Command:**

```
1 >shell
2
3 #nsapimgr -s mss_table=<16 comma seperated values>
```

**Example:**

```
1 #nsapimgr -ys mss_table
 =9176,9156,8192,7168,6144,4196,3072,2048,1460,1400,1330,1212,956,536,384,128
2
3 # nsapimgr -d mss_table
4
5 MSS table
6
7 {
8 9176,9156,8192,7168,6144,4196,3072,2048,1460,1400,1330,1212,956,536,384,128
9 }
10
11 Done.
```

An example using standard Ethernet-sized values is depicted below:

**Example:**

```
1 #nsapimgr -ys mss_table
 =1460,1440,1420,1400,1380,1360,1340,1320,1300,1280,1260,1212,956,536,384,128
2
3 # nsapimgr -d mss_table
4
5 MSS table
6
7 {
8 1460,1440,1420,1400,1380,1360,1340,1320,1300,1280,1260,1212,956,536,384,128
9 }
10
```

```
11 Done.
```

To make this change permanent even after the NetScaler appliance restarts, include the command `#nsapimgr -ys mss_table=<16 comma seperated values>` in the “/nsconfig/rc.netscaler”file. If the “rc.netscaler”file doesn’t exist, create it under the “/nsconfig”folder, and then append the command.

## Memory Overload Protection

A NetScaler Packet Processing Engine (PPE) starts bypassing connections from TCP optimization if the memory in use by that one PPE is more than a specified high watermark value. If a PPE memory utilization goes above ~2.6GB, then it starts bypassing *any new* connections from optimization. The existing connections (ones admitted for optimization previously) continues getting optimization. This watermark value has been purposefully selected and is not recommended for tuning.

### Note

If you believe that there is a good reason to change that watermark value, contact Customer Support.

## Support for Happy Eyeballs Clients

If the NetScaler appliance receives a SYN for a destination for which the state is unknown, the appliance first checks the reachability of the server and then acknowledges the client. This probing mechanism enables clients with dual IP stacks to discover the reachability of dual-stack internet servers. If the client discovers that both IPv6 and IPv4 access are available, it establishes a connection to the server that responds more quickly, and resets the other. For the connection for the NetScaler appliance receives a reset, it will reset the corresponding server side connection.

**Note:** This feature has no user configurable TCP settings to be disabled/enabled on the NetScaler appliance.

For more information on Happy Eyeballs support, see RFC 6555.

## NetScaler Video Optimization

June 1, 2023

### Warning:

Video optimization is supported only for a forward proxy telco solution. Do not enable video op-

imization for any other type of use case. Video optimization is not supported on admin partition and cluster topologies.

The NetScaler appliance provides optimization techniques and capabilities to optimization ABR video traffic for video traffic over mobile networks. This improves user experience and reduces the overall network bandwidth consumption.

The section includes the following topics:

- [Getting Started](#)
- [Licensing](#)
- [Configuring Video Optimization over TCP](#)
- [Configuring Video Optimization over UDP](#)

## Getting Started

May 2, 2023

Media files have been driving an increasing amount of traffic over mobile networks, and migration to faster networking technologies has dramatically increased the volume of encrypted video traffic. The traditional media delivery technology (Progressive Download) is failing to deliver acceptable quality of experience (QoE) at a high transmission rate. This has led to the introduction of the Adaptive Bit Rate (ABR) protocol. It can adapt the streaming bit rate to the available network bandwidth and restrict streaming quality to match the capability of the handset receiving the video. However, the ABR protocol does not work as well in mobile networks as it does over the internet. Mobile operators must, therefore, optimize ABR traffic.

A NetScaler appliance has unique capabilities to detect incoming video traffic and selectively optimize ABR videos.

### How NetScaler Video Optimization Works

A NetScaler appliance can identify and optimize encrypted ABR traffic (including Facebook video traffic) over TCP, and YouTube ABR traffic over QUIC. The appliance has the following capabilities:

1. Detect Progressive Download (PD) videos over HTTP.
2. Detect and optimize ABR videos over HTTP.
3. Detect and optimize ABR videos over HTTPS.
4. Detect and optimize YouTube ABR videos over QUIC.


Also, the appliance uses the following support domains for detecting video traffic over TCP and QUIC protocols.


- Unencrypted ABR videos over TCP. Appliance detects all standard compliant video streaming web sites. The appliance detects ABR sessions by inspecting the response video payload header, URL, and HTTP headers.
- Encrypted ABR video over TCP. Appliance detects ABR sessions using a generic and heuristic algorithm based on domain, SSL header and traffic patterns. Using this, the appliance has a built-in support to detect top video web sites, with 95 percent accuracy and we continue to add support for new video types. NetScaler also has a program to provide additional verification for top encrypted ABR sites for a region or country to ensure network coverage.
- Encrypted ABR videos over QUIC. The appliance detects ABR sessions for QUIC based video provider, such as YouTube. The detection algorithm is on the basis of a heuristic leveraging the QUIC headers and domain. NetScaler will continue to add support for newer video sites using QUIC.

### Benefits

Optimizing the ABR video traffic can provide the following benefits:

- Manage the network during congestion in peak hours.
- Improve video play consistency and reduce video stalling.
- Enable new video service offerings (for example, Binge-on video services).
- Enable customers to select the best sustainable video quality.
- Provide a consistent user experience for the subscriber.

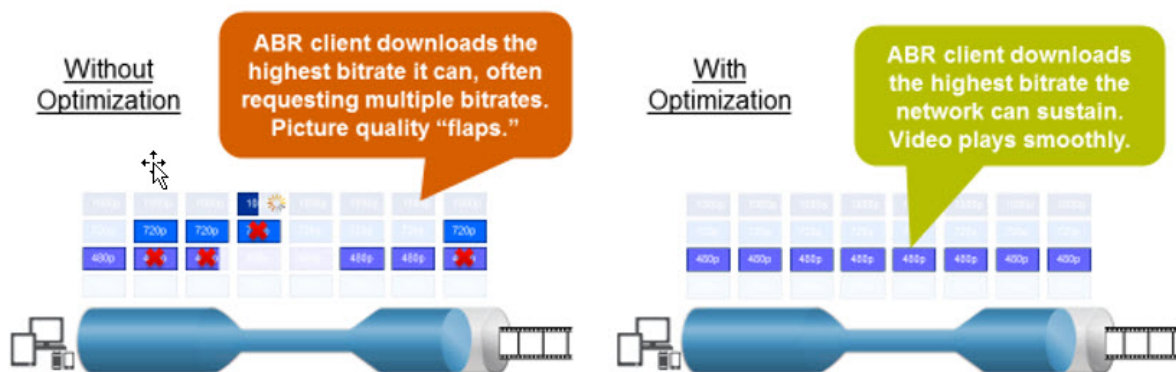

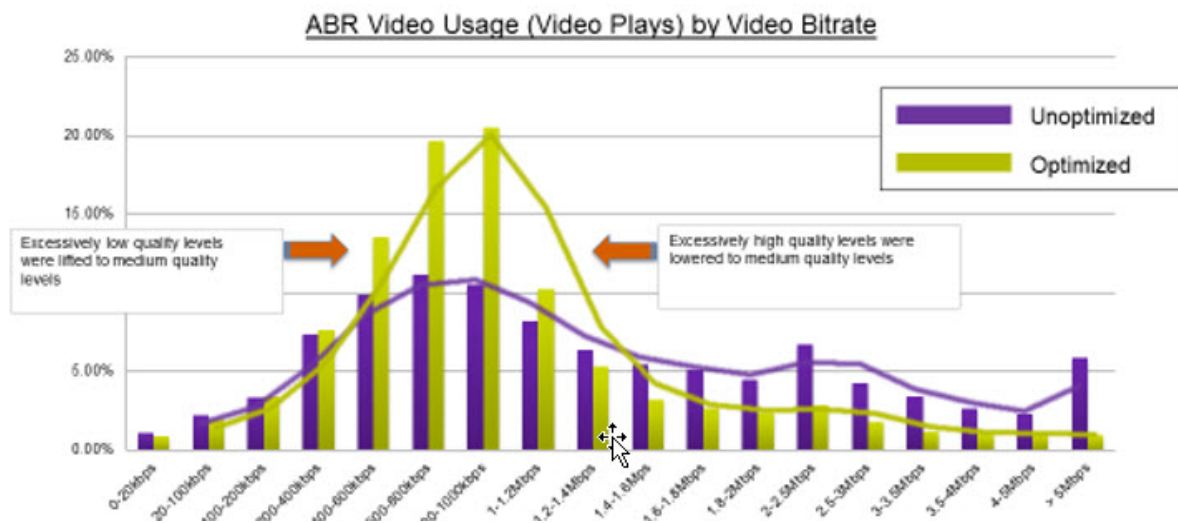

### Video Optimization over TCP

NetScaler optimization of ABR traffic over TCP works as follows:

1. HTTP or HTTPS traffic that the appliance receives over TCP is sent to the corresponding load balancing virtual server.
2. The built-in detection policies bound to the virtual server combined with other proprietary detection algorithms evaluate the traffic.
3. The policies use a set of built-in video detection signatures to detect the video type. The policy that matches traffic applies an action that categorizes the video type as one of the following:
  - a) Clear-text PD
  - b) Clear-text ABR
  - c) Encrypted ABR
  - d) Other
4. The optimization policies bound to the same virtual server evaluate the traffic and determine the optimization bit rate to apply to the traffic.
5. The optimization bit rate is applied if the traffic is either clear-text ABR or encrypted ABR.

A mobile service provider can improve the quality of experience (QoE) by setting the download speed for 2G, 3G, and 4G mobile traffic. This reduces the video start times or buffering events. Optimization can also reduce the amount of network bandwidth consumed by video sessions.

The optimization techniques include dynamic burst control and random sampling.

## **Dynamic Burst Control**

NetScaler ABR optimization adapts dynamically to changing network conditions. It allows an initial burst rate of 1.3 times the configured pacing rate for 15 seconds. The initial burst rate applies to the beginning of every optimized ABR video session, even when multiple sessions use the same TCP connection or group of TCP connections.

The appliance also supports recovery bursts in the event that the bit rate supported by the network drops below the configured pacing rate. For example, if the effective bit rate drops at the 7th second and recovers at 15th second of the initial burst, the appliance recovers the loss during the next burst cycle. By doing so, the appliance dynamically optimizes the network bandwidth for all subscribers so that the quality of video remains consistent per pixel.

Note: When a recovery burst happens during an initial burst, the pacing bit rate must not exceed the maximum recovery-burst and initial-burst rates (you must not add the Recovery Burst factor on top of the Initial Burst factor). Otherwise, it might be so fast that the media player shifts to a higher quality mode. However, if necessary, you can extend the duration of the Initial Burst to compensate the unused bandwidth.

## **Random Sampling**

To estimate the savings from video optimization, the NetScaler appliance implements random sampling. With this technique, the appliance randomly selects a configurable percentage of the detected video traffic (the random sampling parameter is an integer number ranging from 0 to 100, so less than 1 percent is not possible). These randomly selected and non-optimized transactions (and sessions) become a reference group, and they are identified in the transaction logs (along with other characteristics, such as byte size and timer fields). The characteristics of the optimized sessions are also logged, and the reporting engine compares statistics of the optimized and reference groups to estimate the savings from optimization (including the savings from ABR Optimization).

## **Video Optimization over UDP**

Google has introduced a new transport protocol called QUIC. Google's QUIC protocol is very similar to TCP+TLS+HTTP/2 and is implemented on top of UDP. NetScaler can detect YouTube ABR videos streamed over the QUIC protocol, and apply ABR video optimization in a similar way as ABR over TCP.

## Licensing

May 2, 2023

The Video Optimization feature works on Telco platforms with the purchase of a basic CBM license and CBM Premium license and for other NetScaler platforms, the feature works with the purchase of a CNS Premium license. Before you configure the video optimization feature, your appliance must have a suitable license.

License support for Telco platforms:

- **CBM\_TXXX\_SERVER\_Retail.lic**
- **CBM\_TPRE\_SERVER\_Retail.lic**
- **CNS\_WEBF\_SSERVER\_Retail.lic**

Where XXX is the throughput, for example, NetScaler T1000.

License support for other NetScaler platforms:

- **CNS\_XXX\_SERVER\_PLT\_Retail.lic**

Where XXX is the throughput.

To upload a Premium license file, follow the steps given below:

1. A valid license file should be installed on the NetScaler appliance. The license should support at least as many Gbps as the expected maximum Gi-LAN throughput.

License files should be copied through an SCP client to the `/nsconfig/license` of the appliance, as shown in the screen capture below.

```
1 > shell ls /nsconfig/license/
2 CNS_V3000_SERVER_PLT_Retail.lic ssl
```

2. Do a warm restart to apply for the new license, as shown in the screen capture below.

```
1 > reboot -warm
2 Are you sure you want to restart NetScaler (Y/N)? [N]:y
3 Done
```

3. After the restart completes, verify that the license has been properly applied, by using the `show license` CLI.

In the example below a Premium license with Premium edition has been successfully installed.

```
1 > show license
2
3 License status:
4
```



```
5 Video Optimization: YES
6
7 ...
8
9 Model Number ID: 110050
10
11 License Type: Premium License
```

## Configuring Video Optimization over TCP

May 2, 2023

### Warning:

As part of video optimization, the video pacing functionality is deprecated and will be removed from the NetScaler appliance in forthcoming releases.

To optimize video traffic over TCP, begin by enabling the video optimization feature. The appliance then activates the built-in detection policies to detect the incoming video traffic and identify the type of video. User configurable optimization policies for each video type specify the optimization bit rate needed for optimizing the traffic.

### Configuring Video Optimization over TCP by using the CLI

To configure video optimization on a NetScaler appliance, you perform the following tasks:

1. Enable the video optimization feature.
2. Add virtual servers for HTTP and HTTPS traffic.
3. Bind all the built-in detection policies to a load balancing virtual server for HTTP traffic.
4. Bind all the built-in detection policies to an SSL-bridge load balancing virtual server for HTTPS traffic.
5. Add the desired optimization policies for HTTP and HTTPS traffic.
6. Bind optimization policies to a load balancing virtual server for HTTP Traffic.
7. Bind optimization policies to an SSL-bridge load balancing virtual server for HTTPS traffic.

### Enabling Video Optimization

If you want the NetScaler appliance to detect, optimize, and report video traffic, you must enable the Video Optimization feature and set optimization to ON. After enabling the feature you can use built-in detection policies to identify the incoming video traffic, and you can configure optimization policies

to optimize encrypted ABR traffic. To optimize ABR video traffic, you must configure the download bit rate (also called the *pacing rate*).

You must also enable the load balancing feature, and if you want to use video optimization for HTTPS traffic you must enable the SSL feature.

**To enable the video optimization feature** At the command prompt, type the following command:

```
1 enable ns feature VideoOptimization
```

**Note**

If you want to monitor the video optimization performance and video insight reports you must enable the AppFlow feature and then access the Video Analytics feature on NetScaler Application Delivery Management (ADM). For more information, see [Video Insight](#) documentation.

## Creating Virtual Servers for HTTP and HTTPS Video Traffic

A NetScaler appliance uses different virtual servers for detecting and optimizing the different types of incoming video traffic. The appliance supports the following types of virtual servers for TCP traffic.

- **HTTP Load Balancing virtual server.** For detecting HTTP video traffic, the appliance uses an HTTP load balancing virtual server. It manages HTTP video requests that the appliance receives from clients.
- **SSL-Bridge Load Balancing virtual server.** To detect encrypted video traffic, you must configure an SSL bridge virtual server on the appliance.

### To add an HTTP Load Balancing virtual server for detecting HTTP video traffic

At the command prompt, type the following:

```
1 add lb vsrver <name> HTTP * 80 -persistenceType NONE
```

**Example:**

```
1 add lb vsrver ProxyVserver-HTTP HTTP * 80 -persistenceType NONE -
 cltTimeout 120
```

### To add an SSL Bridge virtual server for detecting HTTPS video traffic

At the command prompt, type the following:

```
1 add lb vserver <name> SSL_BRIDGE * 443 -persistenceType NONE
```

**Example:**

```
1 add lb vserver ProxyVserver-SSL SSL_BRIDGE * 443 -persistenceType NONE
 -cltTimeout 180
```

**Binding Built-In Detection Policies to an HTTP Load Balancing Virtual Server**

To detect video traffic over an HTTP connection, you must bind all the built-in detection policies to a load balancing virtual server. You must bind the policies to either request-time or response-time processing, depending on the policy type.

**Note:**

The `ns_videoopt_http_body_detection` video optimization policy does not support the `CONNECT` HTTP request method.

**To bind detection policies for different video types to an HTTP load balancing virtual server**

At the command prompt, type the appropriate command for each type. The available commands are:

```
1 bind lb vserver <name> -policyName ns_videoopt_http_abr_netflix -
 priority <integer> -type (REQUEST | RESPONSE)
2
3 bind lb vserver <name> -policyName ns_videoopt_http_abr_netflix2 -
 priority <integer> -type (REQUEST | RESPONSE)
4
5 bind lb vserver <name> -policyName ns_videoopt_http_abr_youtube -
 priority <integer> -type (REQUEST | RESPONSE)
6
7 bind lb vserver <name> -policyName ns_videoopt_http_pd_youtube -
 priority <integer> -type (REQUEST | RESPONSE)
8
9 bind lb vserver <name> -policyName ns_videoopt_http_pd_youtube2 -
 priority <integer> -type (REQUEST | RESPONSE)
10
11 bind lb vserver <name> -policyName ns_videoopt_http_pd_youtube3 -
 priority <integer> -type (REQUEST | RESPONSE)
12
13 bind lb vserver <name> -policyName ns_videoopt_http_abr_generic -
 priority <integer> -type (REQUEST | RESPONSE)
```

**Example:**

```
1 bind lb vserver ProxyVserver-HTTP -policyName
 ns_videoopt_http_abr_netflix -priority 400 type RESPONSE
```

```
2
3 bind lb vserver ProxyVserver-HTTP -policyName
 ns_videoopt_http_abr_netflix2 -priority 500 -type RESPONSE
4
5 bind lb vserver ProxyVserver-HTTP -policyName
 ns_videoopt_http_abr_youtube -priority 600 -type RESPONSE
6
7 bind lb vserver ProxyVserver-HTTP -policyName
 ns_videoopt_http_pd_youtube -priority 800 -type RESPONSE
8
9 bind lb vserver ProxyVserver-HTTP -policyName
 ns_videoopt_http_pd_youtube2 -priority 900 -type RESPONSE
10
11 bind lb vserver ProxyVserver-HTTP -policyName
 ns_videoopt_http_pd_youtube3 -priority 1000 -type REQUEST
12
13 bind lb vserver ProxyVserver-HTTP -policyName
 ns_videoopt_http_abr_generic -priority 1100 -type RESPONSE
```

## Binding the HTTP Body Content Detection Policy to Load Balancing Virtual Server

To detect video traffic over HTTP, you must bind the body content detection policy to the load balancing virtual server. You can use the following command:

```
1 bind lb vserver <name> -policyName ns_videoopt_http_body_detection -
 priority <integer> -type (REQUEST | RESPONSE)
```

### Example:

```
1 bind lb vserver ProxyVserver-HTTP -policyName
 ns_videoopt_http_body_detection -priority 1500 -type REQUEST
```

## Binding Built-In Detection Policies to an SSL-Bridge Load Balancing Virtual Server

To detect video traffic over an HTTPS connection, you must bind built-in detection policies to an SSL Bridge load balancing virtual server.

### To bind a detection policy to an SSL bridge load balancing virtual server

At the command prompt, type the appropriate command for each type. The available commands are:

```
1 bind lb vserver <name> -policyName ns_videoopt_https_abr_netflix -
 priority <positive_integer> -type (REQUEST | RESPONSE)
2
3 bind lb vserver <name> -policyName ns_videoopt_https_abr_youtube -
 priority <positive_integer> -type (REQUEST | RESPONSE)
```

```
4
5 bind lb vserver <name> -policyName ns_videoopt_https_abr_generic -
 priority <positive_integer> -type (REQUEST | RESPONSE)
```

**Example:**

```
1 bind lb vserver ProxyVserver-SSL -policyName
 ns_videoopt_https_abr_netflix -priority 120 -type REQUEST
2
3 bind lb vserver ProxyVserver-SSL -policyName
 ns_videoopt_https_abr_youtube -priority 140 -type REQUEST
4
5 bind lb vserver ProxyVserver-SSL -policyName
 ns_videoopt_https_abr_generic -priority 150 -type REQUEST
```

### Adding Optimization Policies for Pacing ABR traffic

To optimize ABR traffic, you have to configure optimization policies and the associated actions. You then bind the policies to the same load balancing virtual servers to which you bound the detection policies. For each policy, create the action first, so that you can include it when you create the policy.

**To add an optimization action**

At the command prompt, type:

```
1 add videooptimization pacingaction <action Name> -rate <integer> [-
 comment <string>]
```

Where the **rate** parameter specifies the rate in Kbps at which to send the traffic (the pacing rate).

**Example:**

```
1 add videooptimization pacingaction MyOptAct2000 -rate 2000
```

**To add an optimization policy**

At the command prompt, type:

```
1 add videooptimization pacingpolicy <name> -rule <expression> -action <
 string>
```

**Example:**

```
1 add videooptimization pacingpolicy myOptPolicy2000 -rule TRUE -action
 MyOptAct2000
```

## Binding Optimization Policies to an HTTP Load Balancing Virtual Server

To optimize ABR video traffic over an HTTP connection, you must bind the optimization policies to a load balancing virtual server to which the detection policies are bound.

### To bind an optimization policy to a Load Balancing virtual server

At the command prompt, type the following command:

```
1 bind lb vserver <name> -policyName <policy_name> -priority <
 positive_integer> -type (REQUEST | RESPONSE)
```

#### Example:

```
1 bind lb vserver ProxyVserver-HTTP -policyName myOptPolicy2000 -priority
 3400 -type REQUEST
```

## Binding Optimization Policies to SSL-bridge Virtual Servers

To optimize ABR video traffic over an HTTPS connection, you must bind the optimization policies to the SSL Bridge virtual server to which the built-in detection policies are bound.

### To bind an optimization policy to SSL Bridge virtual server for pacing encrypted traffic

At the command prompt, type the following command:

```
1 bind lb vserver <name> -policyName <policy_name> -priority <
 positive_integer> -type (REQUEST | RESPONSE)
```

#### Example:

```
1 bind lb vserver ProxyVserver-SSL -policyName myOptPolicy2000 -priority
 3400 -type REQUEST
```

## Setting video optimization pacing parameters

The CLI enables you to set the video optimization pacing parameters, such as random sampling percentage.

### To set the random sampling percentage

At the command prompt, type the following command:

```
1 set videooptimization parameter -RandomSamplingPercentage <realNumber>
```

Where, a realNumber is a value from 0.0 to 100.0.

**Example:**

```
1 set videooptimization parameter -RandomSamplingPercentage 50
```

## Configuring Video Optimization over TCP by using the GUI

The GUI enables you to:

- Enable video optimization feature.
- Create HTTP load balancing virtual server.
- Create SSL-bridge load balancing virtual server.
- Bind built-in detection policies to HTTP load balancing virtual server.
- Bind built-in detection policies to SSL-bridge load balancing virtual server.
- Create an optimization policy.
- Create an optimization action.
- Configuring optimization pacing parameter.
- Bind optimization policy to load balancing virtual server for HTTP traffic.
- Bind optimization policy to SSL-bridge load balancing virtual server for HTTPS traffic.

### To enable video optimization feature

1. In the navigation pane, expand **System**, and then click **Settings**.
2. On the **Settings** page, click the **Configure Advanced Features** link.
3. On the **Configure Advanced Features** page, select the **Video Optimization** check box.
4. Click **OK**, and then click **Close**.

### To create load balancing virtual server for HTTP traffic

1. Sign in to the NetScaler appliance and navigate to the **Traffic Management > Load Balancing > Virtual Servers** page.
2. In the details pane, click **Add**.
3. On the Load Balancing Virtual Server screen, set the following parameters:
  - a) **Name**. Name of the load balancing virtual server.
  - b) **Protocol**. Select protocol type as HTTP
  - c) **IP Address Type**. IP address type: IPv4 or IPv6.
  - d) **IP Address**. IPv4 or IPv6 address assigned to the virtual server.

- e) **Port.** Port number of the virtual server.
4. Click **OK** to continue with configuration of other, optional, parameters. For more information, see [Creating a Virtual Server](#).
5. Click **Create** and **Close**.

### To create load balancing virtual server for HTTPS traffic

1. Sign in to the NetScaler appliance and navigate to the **Traffic Management > Load Balancing > Virtual Servers** page.
2. In the details pane, click **Add**.
3. On the **Load Balancing Virtual Server** screen, set the following parameters:
  - a) **Name.** Name of the load balancing virtual server.
  - b) **Protocol.** Select protocol type as SSL-bridge.
  - c) **IP Address Type.** IP address type: IPv4 or IPv6.
  - d) **IP Address.** IPv4 or IPv6 address assigned to the virtual server.
  - e) **Port.** Port number of the virtual server.
4. Click **OK** to continue with the configuration of other, optional, parameters. For more information, see [Creating a Virtual Server](#).
5. Click **Create** and then **Close**.

### To bind a built-in detection policy to a load balancing virtual server

1. Sign in to the NetScaler appliance and navigate to **Traffic Management > Load Balancing > Virtual Servers** screen.
2. In the details pane, select the load balancing virtual server and click **Edit**.
  - a) In the **Advanced Setting** section, click **Policies**.
  - b) In the **Policies** section, click the **+** icon to access the **Policies** slider.
  - c) In the **Policies** section, set the following parameters.
  - d) Choose Policy. Select a video optimization detection policy from the drop-down list.
  - e) Choose Type. Select the policy type as Request.
  - f) Click **Continue**.
3. Select the video detection policy from the list and click **Close**.

### To bind a built-in detection policy to a SSL-bridge load balancing virtual server

1. Log on to the NetScaler appliance and navigate to the **Traffic Management > Load Balancing > Virtual Servers** screen.



2. In the details pane, select the SSL-bridge load balancing virtual server and click **Edit**.
3. In the **Advanced Setting** section, click **Policies**.
4. In the **Policies** section, click the **+** icon to access the **Policies** slider.
5. In the **Policies** section, set the following parameters.
  - a) Choose Policy. Select video optimization detection policy from the drop-down list.
  - b) Choose Type. Select the policy type as Request.
6. Click **Continue**.
7. Select the video detection policy from the list and click **Close**.

### To create a video optimization action

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization > Pacing > Actions**.
2. In the details pane, click **Add**.
3. On the **Create Video Optimization Pacing Action** page, set the following parameters.
  - a) **Name**. Name of the optimization action.
  - b) **ABR Optimization Rate (Kbps)**. Pacing rate at which to send the ABR video traffic. The default rate for ABR optimization is 1000 Kbps. The minimum value is 1, and the maximum value is 2147483647.
  - c) **Comment**. A short description of the action.
4. Click **Create** and **Close**.

### To create a video optimization policy

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization > Pacing > Policies**.
2. In the details pane, click **Add**.
3. On the **Create Video Optimization Pacing Policy** page, set the following parameters.
  - a) **Name**. Name of the optimization policy
  - b) **Expression**. Custom regex expressions that implement the policy.
  - c) **Action**. Optimization action associated with the policy to handle the incoming video traffic.
  - d) **UNDEF Action**. Undefined event if the incoming request does not match the optimization policy.
  - e) **Comment**. A short description of the policy.
  - f) **Log Action**. Select the audit log action that creates the desired log messages.
4. Click **Create**, and then click **Close**.

### To set video optimization pacing parameters

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization**.
2. In the **Video Optimization** page, click **Change Video Optimization Settings** link.
3. In the **Video Optimization Settings** page, set the following parameter.
  - a) **Random Sampling Percentage (%)**. Percentage of packets selected for random sampling.
4. Click **OK** and **Close**.

### To bind a video optimization policy to an HTTP load balancing virtual server

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization**.
2. On the **Video Optimization** page, click the **Video Optimization Pacing Policy Manager** link.
3. Set the following parameters.
  - a) **Bind Point**. The point at which to apply the optimization policy during request or response processing.
  - b) **Connection Type**. Connection type as Request or Response.
  - c) **Virtual Server**. The load balancing virtual server to which to bind the policy.
  - d) Click **Continue**.
4. In the **Bind Point** section, do one of the following:
  - a) Select a policy from the list.
  - b) Click **Add Binding** to access the **Policies Binding** slider.
    - i. Select an existing policy or add a new policy.
    - ii. Enter binding details and click **Bind**.
5. Click **Close**.

### To bind a video optimization policy to an SSL-bridge load balancing virtual server

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization**.
2. On the **Video Optimization** page, click the **Video Optimization Pacing Policy Manager** link.
3. On the **Video Optimization Policy Manager** page, set the following parameters.
  - a) **Bind Point**. The point at which to apply the optimization policy during request/response processing.

- b) Connection Type. Connection type as Request or Response.
  - c) Virtual Server. The SSL-bridge load balancing virtual server to which to bind the policy.
4. Click **Continue**.
5. In the **Bind Point** section, do one of the following:
  - a) Select a policy binding from the list.
  - b) Click **Add Binding** to access the **Policies Binding** slider.
    - i. Select an existing policy or add a new policy.
    - ii. Enter binding details and click **Bind**.
6. Click **Close**.

## Configuring Video Optimization over UDP

May 2, 2023

To optimize QUIC ABR video traffic over UDP, begin by enabling the video optimization feature. After you complete the configuration, the appliance detects QUIC based ABR video traffic and applies the optimization bit rate that is configured on the appliance.

### Configuring video optimization for QUIC by using the CLI

To configure video optimization for QUIC video traffic over UDP, you must perform the following tasks:

1. Enable Video Optimization.
2. Create a QUIC service.
3. Create a QUIC load balancing virtual server.
4. Bind QUIC web service to the loading balancing virtual server.
5. Create video optimization policy for pacing QUIC based UDP traffic.
6. Bind optimization policy to a QUIC based load balancing virtual server.

### Enabling video optimization for QUIC traffic

If you want the NetScaler appliance to detect, optimize, and report video traffic, you must enable the Video Optimization feature and set optimization ON.

**Note**

If you want to use video optimization for QUIC traffic, you must enable the load balancing and AppFlow features.

**To enable the video optimization** At the command prompt, type the following command:

```
1 enable ns feature VideoOptimization
```

**Creating a service for QUIC traffic**

A NetScaler appliance uses a QUIC service for the load balancing virtual server to connect to the egress router in the static routing mode.

**Note**

Currently, dynamic routing is not supported.

**To create a load balancing web service for QUIC video traffic** At the command prompt, type:

```
1 add service <name> <router-IP> <serviceType> <port> -usip yes -
 useproxyport [yes | no]
```

**Example:**

```
1 add service svc-quic 10.102.29.200 QUIC 443 -usip yes -useproxyport
 no
2
3 where IP address is the internet router address.
```

**Creating a load balancing virtual server for QUIC traffic**

A NetScaler appliance uses a load balancing virtual server for detecting and optimizing QUIC video traffic over UDP.

**To create a load balancing virtual server for QUIC video traffic** At the command prompt, type:

```
1 add lb vserver <name> <serviceType> <ip> <port> -m MAC
```

**Example:**

```
1 add lb vserver vs-quic QUIC * 443 -persistenceType NONE -m MAC -
 cltTimeout 120
```

## Binding a QUIC web service to the load balancing virtual server

After you have created the web services and load balancing virtual server for QUIC traffic, you must bind the services to the virtual server.

**To bind a web service to load balancing virtual server for QUIC video traffic** At the command prompt, type:

```
1 bind lb vserver <name> <serviceName>
```

### Example:

```
1 bind lb vserver vs-quic svc-quic
```

## Creating Video Optimization Policy for QUIC based UDP traffic

To optimize QUIC based UDP traffic, you have to configure optimization pacing policies and its actions. You must then, bind the policies to QUIC based load balancing virtual servers. For each policy, create an action first so that you can associate it to the policy.

**To add an optimization action** At the command prompt, type:

```
1 add videooptimization pacingaction <action Name> -rate <integer> [-comment <string>]
```

Where, the **rate** parameter specifies the rate in Kbps at which to send the traffic (the pacing rate).

### Example:

```
1 set videooptimization parameter -QUICPacingRate 1000
```

where 1000 represents the desired pacing rate in Kbits/sec.

**To add an optimization policy** At the command prompt, type:

```
1 add videooptimization pacingpolicy <name> -rule <expression> -action <string>
```

### Example:

```
1 add videooptimization pacingpolicy myOptPolicy2000 -rule TRUE -action MyOptAct2000
```

**Binding Optimization Policies to a QUIC Load Balancing Virtual Server** To optimize QUIC video traffic over a UDP connection, you must bind the optimization policies to a QUIC load balancing virtual server.

**To bind an optimization policy to a QUIC Load Balancing virtual server** At the command prompt, type the following command:

```
1 bind lb vserver <name> -policyName <policy_name> -priority <
 positive_integer> -type (REQUEST)
```

**Note**

The pacing policies must be bound to a QUIC load balancing virtual server only at request time.

**Example:**

```
1 bind lb vserver vs-quic -policyName myOptPolicy2000 -priority 3400 -
 type REQUEST
```

## Configuring video optimization for QUIC by using the GUI

To configure the feature on the appliance through the GUI, you must perform the following tasks:

1. Enable video optimization
2. Configure a QUIC servers
3. Configure QUIC service
4. Configure a QUIC load balancing virtual server
5. Bind the QUIC web service to the load balancing virtual server
6. Create optimization policy.
7. Create optimization action.
8. Configuring optimization pacing parameter.
9. Bind optimization policy to load balancing virtual server for QUIC traffic.

**To enable video optimization**

1. Log on to the NetScaler appliance and navigate to **System > Settings**.
2. On the details page, select **Configure Advanced Features** link.
3. On the **Configure Advanced Features** page, select the **Video Optimization** check box.

**To create a QUIC servers**

1. Log on to the NetScaler appliance and navigate to the **Traffic Management > Load Balancing > Servers** screen.
2. In the details pane, click **Add**.
3. On the **Create Server** page, set the following parameters:
  - a) **Name.** Name of the QUIC server.
  - b) **IP address.** IP address of the QUIC server
  - c) **Traffic Domain.** Domain name of the server.
  - d) **Enabling after creating.** Initial state of the server.
  - e) **Comments.** Brief information about the server.
4. Click **Create**.

#### To create a QUIC service

1. Log on to the NetScaler appliance and navigate to the **Traffic Management > Load Balancing > Services screen**.
2. In the details pane, click **Add**.
3. On the **Load Balancing Service** page, set the following parameters:
  - a) **Service Name.** Name of the QUIC service.
  - b) **IP address.** IP address assigned to the QUIC service.
  - c) **Protocol.** Select protocol as QUIC.
  - d) **Port.** Port number of the web service.
4. Click **OK** to continue. You can then configure other, optional, parameters. For more, see [Configuring Services](#).
5. Once you configure the optional parameters, click **OK** and **Close**.

#### To create a load balancing virtual server

1. Log on to the NetScaler appliance and navigate to the **Traffic Management > Load Balancing > Virtual Servers** screen.
2. In the details pane, click **Add**.
3. On the **Load Balancing Virtual Server** page, set the following parameters:
  - a) **Name.** Name of the load balancing virtual server.
  - b) **Protocol.** The protocol used by the service to send QUIC requests.
  - c) **IP Address Type.** IP address type: IPv4 or IPv6.
  - d) **IP Address.** IP 4 or IP6 IP address assigned to the virtual server.
  - e) **Port.** Port number of the virtual server.
4. Click **OK** to continue with the configuration of other, optional, parameters. For more information, see [Creating a Virtual Server](#).

### To bind a load balancing virtual server to a QUIC service

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and select a virtual server.
2. Click **Services and Service Groups** to access the **Load Balancing Virtual Server Service Binding** screen.
3. Select a QUIC based web service and click **Bind**.
4. Click **Done**.

### To bind a load balancing virtual server to a QUIC service

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and select a virtual server.
2. Click **Services and Service Groups** to access the **Load Balancing Virtual Server Service Binding** screen.
3. Select a QUIC based web service and click **Bind**.
4. Click **Done**.

### To create a video optimization action for QUIC traffic

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization > Pacing > Actions**.
2. In the details pane, click **Add**.
3. On the **Create Video Optimization Pacing Action** page, set the following parameters.
  - a) **Name**. Name of the optimization action.
  - b) **ABR Optimization Rate (Kbps)**. Pacing rate at which to send the ABR video traffic. The default rate for ABR optimization is 1000 Kbps. The minimum value is 1, and the maximum value is 2147483647.
  - c) **Comment**. A short description of the action.
4. Click **Create** and **Close**.

### To create a video optimization policy for QUIC traffic

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization > Pacing > Policies**.
2. In the details pane, click **Add**.
3. On the **Create Video Optimization Pacing Policy** page, set the following parameters.
  - a) **Name**. Name of the optimization policy
  - b) **Expression**. Custom regex expressions that implement the policy.



- c) Action. Optimization action associated with the policy to handle the incoming video traffic.
  - d) UNDEF Action. Undefined event if the incoming request does not match the optimization policy.
  - e) Comment. A short description of the policy.
  - f) Log Action. Select the audit log action that creates the desired log messages.
4. Click **Create**, and then click **Close**.

### To bind a video optimization policy to an QUIC load balancing virtual server

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization**.
2. On the **Video Optimization** page, click the **Video Optimization Pacing Policy Manager** link.
3. On the **Video Optimization Policy Manager** page, set the following parameters.
  - a) Bind Point. The point at which to apply the optimization policy during request processing.  
**Note:** The pacing policies must be bound to a QUIC load balancing virtual server only at request time.
  - b) Connection Type. Connection type as Request or Response.
  - c) Virtual Server. The load balancing virtual server to which to bind the policy.
4. Click **Continue**.
5. In the **Bind Point** section, do one of the following:
  - a) Select a policy from the list.
  - b) Click **Add Binding** to access the **Policies Binding** slider.
    - i. Select an existing policy or add a new policy.
    - ii. Enter binding details and click **Bind**.
6. Click **Close**.

## NetScaler URL Filtering

July 27, 2023

**Note:**

URL categorisation in the URL filtering feature is deprecated in this release.

URL Filtering provides policy-based control of websites by using the information contained in URLs. This feature helps network administrators monitor and control user access to malicious websites on mobile networks.

As an administrator, you can configure a URL filtering policy by using either the URL Categorization feature or the URL List feature.

**URL List.** Controls access to blacklisted websites and webpages by blocking access to URLs that are in a URL set imported into the appliance.

**URL Categorization.** Controls access to websites and webpages by filtering traffic based on a predefined list of categories.

## URL List

July 21, 2023

The URL List feature enables you to control access to customized URL lists (up to one million entries). The feature filters websites by applying a URL filtering policy bound to a virtual server.

As an administrator, you must import the URL List into the NetScaler appliance. This imported list is internally stored as a Policy data set called a *URL Set*. The appliance then applies a unique fast URL matching algorithm to the incoming URL requests. If the incoming URL request matches an entry in the set, the appliance applies the associated policy action to control access.

### URL List Types

Each entry in a URL set can include a URL and, optionally, its metadata (URL category, category groups, or any other related data). For URLs with a metadata, the appliance uses a policy expression that evaluates the metadata. For more information, see [URL Sets](#).

**Custom URL List.** You can create a customized URL set of up to 1,000,000 URL entries and import it as a text file into your appliance. The list can contain URLs with or without metadata (which could be like a URL category). TheNetScaler platform automatically detects whether metadata is present. It also supports storing the imported lists securely. For more information, see [URL Set](#).

You can host the URL list and configure the NetScaler appliance to periodically update the list without requiring manual intervention. Once the URL list is updated, the appliance can automatically detect the metadata and the categories by using policy expressions to evaluate each incoming URL and then apply actions such as allow, block, redirect, or notify the user.

### URL List Policy Expressions

The following table describes the basic expressions you can use to evaluate incoming traffic. After you import an URL List to the appliance, it is called a *URL Set*.

| Expression                                                                                                                           | Operation                                                                                                                                                                                                            |
|--------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;URL expression&gt; . URLSET_MATCHES_ANY(&lt;URLSET&gt;)</code>                                                             | Evaluates to TRUE if the URL exactly matches any entry in the URL set.                                                                                                                                               |
| <code>&lt;URL expression&gt; . GET_URLSET_METADATA(&lt;URLSET&gt;)</code>                                                            | The GET_URLSET_METADATA() expression returns the associated metadata if the URL exactly matches any pattern within the URL set. An empty string is returned if there is no match.                                    |
| <code>&lt;URL expression&gt; . GET_URLSET_METADATA(&lt;URLSET&gt; ) . EQ(&lt;METADATA&gt;)</code>                                    | Evaluates to TRUE if the matched metadata is equal to <METADATA>.                                                                                                                                                    |
| <code>&lt;URL expression&gt; . GET_URLSET_METADATA(&lt;URLSET&gt; ) . TYPECAST_LIST_T(' , ' ) . GET(0) . EQ(&lt;CATEGORY&gt;)</code> | Evaluates to TRUE if the matched metadata is at the beginning of the category. This pattern can be used to encode separate fields within metadata, but match only the <code>1&lt;sup&gt;st&lt;/sup&gt;</code> field. |
| <code>HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL)</code>                                                                                  | Joins the host and URL parameters, which can then be used as a <URL expression> for matching.                                                                                                                        |

### URL List Policy Actions

The most common enforcement action for URLs that match a URL list is to restrict access. Create a URL list policy with a desired URL list matching expression and enforcement action. The policy group usage depends upon the incoming traffic type (HTTP or HTTPS) and the virtual server configured on the appliance. You can use a Responder policy for HTTP traffic or a Video Optimization policy for HTTPS traffic. Specify actions to apply to the URLs that match the expressions in the policies. The following table lists the available actions.

| Action Type | Policy                       | Description                                              |
|-------------|------------------------------|----------------------------------------------------------|
| ALLOW       | Responder                    | Allow the request to access the target URL.              |
| REDIRECT    | Responder                    | Redirect the request to the URL specified as the target. |
| DENY        | Responder                    | Deny the request.                                        |
| RESET       | Responder, VideoOptimization | Reset the connection.                                    |

| Action Type | Policy                       | Description          |
|-------------|------------------------------|----------------------|
| DROP        | Responder, VideoOptimization | Drop the connection. |

## Prerequisites

To configure URL List feature, make sure you have configured the following server.

## DNS Server for DNS Requests

You must configure a DNS server if you import a URL Set from a hostname URL.

At the command prompt, type:

```
1 add dns nameServer ((<IP> [-local]) | <dnsVserverName>) [-state (
 ENABLED | DISABLED)] [-type <type>] [-dnsProfileName <string>]
```

### Example:

```
1 add dns nameServer 10.140.50.5
```

## Importing a custom URL list

To import a URL set, see [URL Set](#) topic.

## Configuring a URL List for HTTP traffic

The NetScaler appliance supports HTTP and HTTPS traffic. To configure a load balancing virtual server for HTTP traffic and bind URL list policies to the server, do the following:

- Add URL List actions.
- Add URL List policies.
- Add an HTTP load balancing virtual server for HTTP traffic
- Bind the URL List policies to the HTTP load balancing virtual server for HTTP traffic

### To add a URL list action

At the command prompt, type the following:

```
1 add responder action <name> <type> (<target> | <htmlpage>) [-comment <
 string>] [-responseStatusCode <positive_integer>] [-reasonPhrase <
 string>]
```

**To add a HTTP load balancing virtual server for HTTP traffic**

At the command prompt, type the following:

```
1 add lb vserver <name> [-td <positive_integer>] <serviceType> [-cltT
 imeout <secs>]
```

**Example:**

```
1 add lb vserver vsrv-HTTP HTTP * 80 -persistenceType NONE -cltTimeout
 120
```

**To bind URL list policy to HTTP load balancing virtual server**

At the command prompt, type the following:

```
1 bind lb vserver <vServerName> -policyName <string> [-priority <
 positive_integer>]
```

**Configuring URL List for HTTPS traffic**

The NetScaler appliance supports HTTP and HTTPS traffic. To configure a SSL-bridge load balancing virtual server for HTTPS traffic and bind URL list policies to the server, do the following:

- Add URL List actions.
- Add URL List policies.
- Add a SSL-bridge load balancing virtual server for HTTP traffic
- Bind the URL List policies to the SSL-bridge load balancing virtual server for HTTP traffic

**To add a URL List policy for HTTPS traffic**

At the command prompt, type:

```
1 add videooptimization detectionpolicy <name> -rule <expression> -action
 <string> [-undefAction <string>] [-comment <string>] [-logAction <
 string>]
```

**To add a SSL-bridge load balancing virtual server**

At the command prompt type:

```
1 add lb vserver <name> [-td <positive_integer>] <serviceType> [-cltT
 imeout <secs>]
```

**Example:**

```
1 add lb vserver vsrv-HTTPS SSL_BRIDGE * 443 -persistenceType NONE -
 cltTimeout 180
```

**To bind URL List policy with SSL-bridge load balancing by using the CLI**

At the command prompt type:

```
1 bind lb vserver <vServerName> -policyName <string> [-priority <
 positive_integer>]
```

**Configuring a URL List by using the GUI**

The GUI enables you to:

- Import a URL list.
- Add a URL list.
- Configure URL list actions.
- Configure URL list policies for HTTP traffic.
- Add an HTTP load balancing virtual server for HTTP traffic.
- Add an SSL-bridge load balancing virtual server for HTTPS traffic.
- Bind URL list policies to the HTTP load balancing virtual server.
- Bind a URL list policies to the SSL-bridge load balancing virtual server.

**To import a URL list**

1. In the navigation pane, expand **AppExpert > URL Sets**.
2. In the details pane, click **Import**.
3. On the **Configure URL Set** page, set the following parameters.
  - a) **Name**. Name of the URL set.
  - b) **URL**. Web address of the location at which to access the URL Set.
  - c) **Overwrite**. Overwrite a previously imported URL set.
  - d) **Delimiter**. Character sequence that delimits a CSV file record.
  - e) **Row Separator**. Row separator used in the CSV file. A single character value is permitted for example “/n”.
  - f) **Interval**. Interval in seconds, rounded off to the nearest 15 minutes, at which the URL set is updated.
  - g) **Private Set**. Option to prevent exporting the URL set

- h) **Canary URL.** Internal URL for testing whether the content of the URL set is to be kept confidential. The maximum length of the URL is 2047 characters
4. Click **Create**, and then **Close**.

#### To add a URL list

1. In the navigation pane, expand **AppExpert > URL Sets**.
2. In the details pane, click **Add**.
3. On the **Create URL Set** page, set the following parameters.
  - a) **Name.** The name of the URL set that was given when it was imported.
  - b) **Comments.** A short description about the URL set.
4. Click **Create**.

#### To configure a URL list action

1. Log on to the NetScaler appliance and navigate to **Configuration** tab page.
2. In the menu pane, navigate to **AppExpert > Responder > Actions**.
3. In the details pane, click **Add**.
4. On the **Create Responder Action** page, set the following parameters.
  - a) **Name.** Name of the URL List policy action.
  - b) **Type.** Select an action type.
  - c) **Expression.** Use the expression editor to create the policy expression.
  - d) **Comments.** A short description about the policy action.
5. Click **Create** and **Close**.

#### To configure a URL list policy

1. In the navigation pane, expand **AppExpert > Responder > Policies**.
2. In the details pane, click **Add**.
3. On the **Create Responder Policy** page, set the following parameters.
  - a) **Name.** Name of the URL List policy action.
  - b) **Action.** Select the URL List action that you prefer to associate with the policy.
  - c) **Log Action.** Select the log action.
  - d) **AppFlow.** Select an AppFlow action.
  - e) **Expression.** Use the expression editor to create the policy expression.
  - f) **Comments.** A short description about the policy.
4. Click **Create** and **Close**.

### To add an HTTP load balancing virtual server

1. Navigate to the **Traffic Management > Load Balancing > Virtual Servers** page.
2. In the details pane, click **Add**.
3. On the **Load Balancing Virtual Server** screen, set the following parameters:
  - a) **Name**. Name of the load balancing virtual server.
  - b) **Protocol**. Choose protocol type as HTTP.
  - c) **IP Address Type**. IP addressable type.
  - d) **IP Address**. IP 4 or IP6 IP address assigned to the virtual server.
  - e) **Port**. Port number of the virtual server.
4. Click **OK** to continue with the configuration of other, optional, parameters. For more information, see *Creating a Virtual Server*.

### To bind a URL List policy to the HTTP load balancing virtual server

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** screen.
2. In the details pane, select the load balancing virtual server and click **Edit**.
3. In the **Advanced Setting** section, click **Policies**.
4. In the **Policies** section, click the **+** icon to access the **Policies** slider.
5. In the **Policies** section, set the following parameters.
  - a) Choose Policy. Select a URL categorization policy from the drop-down list.
  - b) Choose Type. Select the policy type as Request.
6. Click **Continue**.
7. In the Policies page, select the URL List policy from the list and click **Select**.
8. In the **Policies** slider, click **Bind** and **Close**.

### To add URL List policy for HTTPS traffic

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization > Detection**.
2. On the **Detection** page, click the **Video Optimization Detection Policies** link.
3. On the **Video Optimization Detection Policies** page, click **Add**.
4. On the **Create Video Optimization Detection Policy** page, set the following parameters.
  - a) **Name**. Name of the optimization policy
  - b) **Expression**. Configure policy using custom expressions.
  - c) **Action**. Optimization action associated with the policy to handle the incoming video traffic.



- d) **UNDEF Action.** Undefined event if the incoming request does not match the optimization policy.
  - e) **Comment.** A short description of the policy.
  - f) **Log Action.** Select an audit log action that specifies the action to be performed for the log messages.
5. Click **Create** and **Close**.

### To add a SSL-bridge load balancing virtual server for HTTPS traffic

1. Navigate to the **Traffic Management > Load Balancing > Virtual Servers** page.
2. In the details pane, click **Add**.
3. On the **Load Balancing Virtual Server** screen, set the following parameters:
  - a) **Name.** Name of the load balancing virtual server.
  - b) **Protocol.** Select protocol type as SSL-bridge.
  - c) **IP Address Type.** IP address type: IPv4 or IPv6.
  - d) **IP Address.** IPv4 or IPv6 IP address assigned to the virtual server.
  - e) **Port.** Port number of the virtual server.
4. Click **OK** to continue with the configuration of other, optional, parameters. For more information, see “Creating a Virtual Server” topic.

### To bind a URL List Policy to the SSL-bridge load balancing virtual server

1. Navigate to the **Traffic Management > Load Balancing > Virtual Servers** screen.
2. In the details pane, select the SSL-bridge load balancing virtual server and click **Edit**.
3. In the **Advanced Setting** section, click **Policies**.
4. In the **Policies** section, click the **+** icon to access the **Policies** slider.
5. Set the following parameters.
  - a) **Choose Policy.** Select video detection policy from the drop-down list.
  - b) **Choose Type.** Select the policy type as Request.
6. Click **Continue**.
7. Select the video detection policy from the list and click **Close**.

### Configuring Audit Log Messaging

Audit logging enables you to review a condition or a situation in any phase of URL List process. When a NetScaler appliance receives an incoming URL, if the responder policy has an URL Set advanced policy

expression, the audit log feature collects URL Set information in the URL and stores the details as a log message for any target allowed by audit logging.

The log message contains the following information:

1. Timestamp.
2. Log message type.
3. The predefined log levels (Critical, Error, Notice, Warning, Informational, Debug, Alert, and Emergency).
4. Log message information, such as URL set name, policy action, URL.

To configure audit logging for URL List feature, you must complete the following tasks:

1. Enable Audit Log.
2. Create Audit Log message action.
3. Set URL List responder policy with Audit Log message action.

For more information, see [Audit Logging](#).

### URL List Semantics

The following table lists the URL Match patterns and describes how the URLs within a URL list are matched against the incoming-request URLs. For example, the pattern `www.example.com/bar` matches only with one page at `www.example.com/bar`. To match all the pages whose URL starts with `www.example.com/bar`, you would add an asterisk (\*) to the end of the URL.

| Semantics                | URL Pattern                        | Matched                                                                      | Unmatched                               |
|--------------------------|------------------------------------|------------------------------------------------------------------------------|-----------------------------------------|
| Subdomain matching       | domain.com                         | domain.com;<br>www.domain.com;<br>sub.one.domain.com                         | yourdomain.com;<br>wwwdomain.com        |
| URL matching, exact path | domain.com/example/bar/index.html  | domain.com/example/bar/index.html;<br>www.domain.com/example/bar/index.html; | do-<br>main.com/example/bar/index.html; |
| URL matching, exact path | domain.com/example/bar/index.html? | domain.com/example/bar/index.html;<br>www.domain.com/example/bar/index.html? | do-<br>main.com/example/bar/index.html; |

| Semantics                         | URL Pattern            | Matched                                                                                                                     | Unmatched                         |
|-----------------------------------|------------------------|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------|
| URL matching,<br>subpath matching | domain.com/example/bar | domain.com/example/bar/<br>www.domain.com/<br>example/bar/<br>index.html;<br>do-<br>main.com/example/bar/index.html/one.jpg | domain.com/example/bar/index.html |

## URL Categorization

July 27, 2023

**Note:**


URL categorisation in the URL filtering feature is deprecated in this release.

URL Categorization restricts user access to specific websites and website categories. As a subscribed service in collaboration with [NetSTAR](#), the feature enables enterprise customers to filter web traffic using a commercial categorization database. The [NetSTAR](#) database has a vast number (billions) of URLs classified into different categories, such as social networking, gambling, adult content, new media, and shopping. In addition to categorization, each URL has a reputation score kept up to date based on the site’s historical risk profile. We can use [NetSTAR](#) data to filter the traffic by configuring advanced policies based on categories, category groups (such as Terrorism, Illegal drugs), or site-reputation scores.

For example, you might block access to dangerous sites, such as sites infected with malware, or selectively restrict access to adult content or entertainment streaming media.

### How URL Categorization Works

The following figure shows how the NetScaler URL Filtering service is integrated with a commercial URL Categorization database and cloud services for frequent updates.

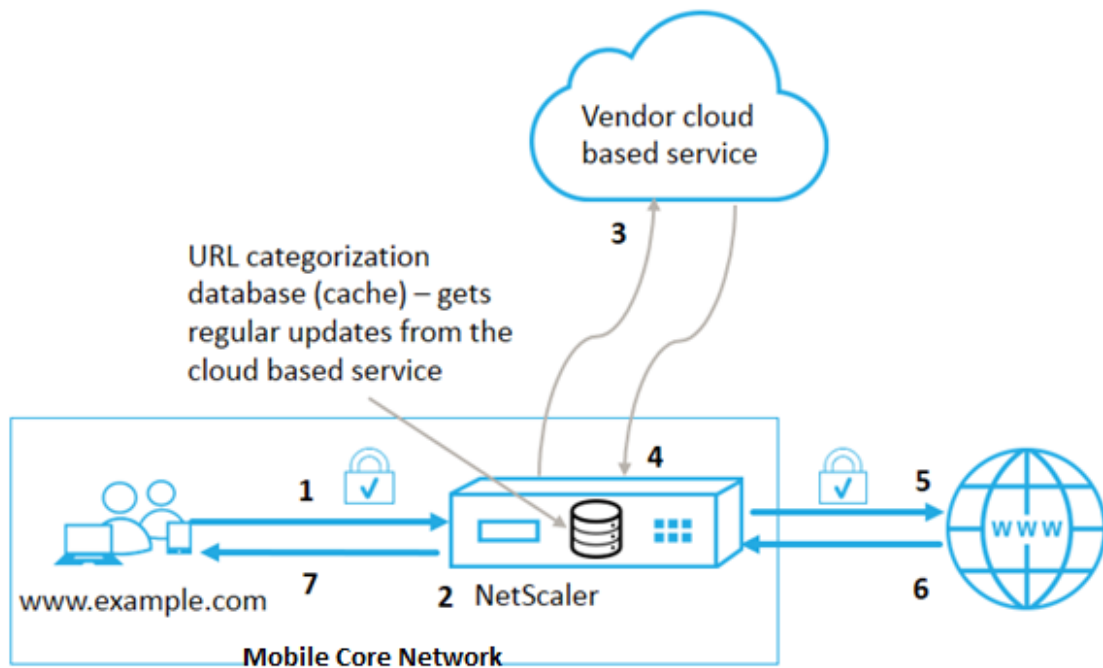

The components interact as follows:

1. Client sends internet bound URL request.
2. A NetScaler policy attempts to evaluate the request in terms of categorization details (such as category, category group, and site-reputation score) retrieved from the URL categorization database. If the database returns the category details, the process jumps to step 5.
3. If the database does not return categorization details, the request is sent to a cloud-based lookup service maintained by a URL categorization vendor. However, the appliance does not wait for a response. Instead, it marks the URL as Uncategorized and jumps to step 5. However, it continues to monitor the cloud query feedback and uses it to update the cache so that future requests can benefit from the cloud lookup.
4. The NetScaler appliance receives the URL category details (category, category group, and reputation score) from the cloud-based service and stores it in the cloud cache.
5. If the policy allows the URL, the request is sent to the origin server. Otherwise, the appliance drops or redirects the request, or responds with a custom HTML page.
6. The origin server responds with the requested data to the NetScaler appliance.
7. The appliance sends the response to the client.

You can use the URL filtering feature to detect sites that violate safe internet usage mandates issued by the government and implement policies to block these sites. Sites that host adult content, streaming media, or social networking identified as unsafe for children or banned as illegal.

## Prerequisites

The feature works on Telco platforms with the purchase of a basic CBM license and CBM Premium license and for other NetScaler platforms, the feature works with the purchase of a CNS Premium license.

**Note:** In addition to a Basic CBM license and a CBM Premium license, the appliance must have a URL Threat Intelligence license with a subscription service for 1 year or 3 years. Before enabling and configuring the feature, you must install the following licenses:

License support for Telco platforms:

- **CBM\_TXXX\_SERVER\_Retail.lic**
- **CBM\_TPRE\_SERVER\_Retail.lic**
- **CNS\_WEBF\_SSERVER\_Retail.lic**

Where XXX is the throughput, for example, NetScaler T1000.

License support for other NetScaler platforms:

- **CNS\_XXX\_SERVER\_PLT\_Retail.lic**

Where XXX is the throughput.

## URL Categorization Policy Expressions

The following table lists the different URL categorization policy expressions for identifying incoming URLs and applies a configured action.

| Expression                                                                                 | Operation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|--------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>&lt;text&gt;. URL_CATEGORIZE (&lt;min_reputation&gt;, &lt;max_reputation&gt;)</code> | Returns a URL_CATEGORY object. Reputation score is a number from 1 to 4. To get objects all reputation scores use 0.0 as <code>&lt;min_reputation&gt;</code> and <code>.</code> If is greater than 0, the returned object does not contain a category with reputation lower than <code>.</code> If is greater than 0, the returned object does not contain a category with reputation higher than <code>.</code> If the category fails to resolve in a timely manner, the undef value is returned. |

| Expression   | Operation                                                                                                                                                                                                                                                                                                     |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| . CATEGORY   | Returns the category string for this object. If the URL does not have a category, or if the URL is malformed, the returned value is “Uncategorized”.                                                                                                                                                          |
| . GROUP      | Returns a string identifying the object’s category group. This is a higher level grouping of categories, which is useful in operations that require less detailed information about the URL category. If the URL does not have a category, or if the URL is malformed, the returned value is “Uncategorized”. |
| . REPUTATION | Returns the reputation score as a number from 1 to 4, where 4 indicates the riskiest reputation. If the category is “Uncategorized,” the reputation value is 2.                                                                                                                                               |

### Sample Policy Expressions

| Policy                                                                               | Policy Expressions                                                                                                                                                                                                                    |
|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Policy to select requests for URLs that are in the Search Engine category            | add responder policy p1<br>‘HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORY.EQ(“Search Engine”)                                                                                                                                   |
| Policy to select requests for URLs that are in the Adult category group              | add responder policy p1<br>‘HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORY.GROUP.EQ(“Adult”)                                                                                                                                     |
| Policy to select requests for Search Engine URLs with a reputation score equal to 4. | add responder policy p2<br>‘HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORY.EQ(“Search Engine”)                                                                                                                                   |
| Policy to select requests for Search Engine and Shopping URLs                        | add policy patset good_categories; bind policy good_categories “Search Engine”; bind policy good_categories “Shopping”; add responder policy p3<br>‘HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORY.EQUALS_ANY(“good_categories”) |

| Policy                                                                               | Policy Expressions                                                                                          |
|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| Policy to select requests for Search Engine URLs with a reputation score equal to 4. | add responder policy p5<br>'CLIENT.SSL.DETECTED_DOMAIN.URL_CATEGORIZE(4,0).<br>CATEGORY.EQ("Search Engine") |

## URL Categorization Policy Actions

A URL filtering policy evaluates the traffic to identify requests belonging to a particular category. The following table lists the actions that you can assign to a URL filtering policy.

| Policy Action | Policy Group                 | Description                                                       |
|---------------|------------------------------|-------------------------------------------------------------------|
| ALLOW         | Responder                    | Allow the incoming request to access the target URL               |
| REDIRECT      | Responder                    | Redirect the incoming request to the URL specified as the target. |
| DENY          | Responder                    | Deny incoming request.                                            |
| RESET         | Responder, VideoOptimization | Reset connection.                                                 |
| DROP          | Responder, VideoOptimization | Drop connection.                                                  |

### Note

For encrypted traffic, the VideoOptimization policy includes actions that implement the URL Filtering actions.

## Configuring URL Categorization

To configure URL categorization, begin by enabling the URL Filtering feature. You must then configure the cache memory limits, categorization policy, and virtual servers for HTTP and HTTPS traffic. Configuring URL Categorization by using the CLI.

To use the CLI configure URL categorization on a NetScaler appliance, do the following:

- Set up URL Categorization.
  - Enable the URL Filtering feature.
  - Configure shared memory to limit cache memory.
  - Configure URL categorization parameters.

- Configure URL categorization for HTTP traffic.
  - Add URL categorization actions.
  - Add URL categorization policies.
  - Add a load balancing virtual server for HTTP traffic.
  - Bind URL categorization policies to the load balancing virtual server.
- Configure URL categorization for HTTPS traffic.
  - Add URL categorization policies.
  - Add a SSL-Bridge load balancing virtual server.
  - Bind URL categorization policies to the load balancing virtual server.

## Setting up URL Categorization

To set up the feature, you must enable the URL Categorization feature, configure the filtering parameters and set the shared memory limit.

### To enable URL Filtering feature

At the command prompt, type:

```
enable ns feature URLFiltering VideoOptimization Responder IC SSL
AppFlow
```

### To configure shared memory limit

At the command prompt, type:

```
1 set cache parameter [-memLimit <megaBytes>]
```

Where memLimit is the memory limit for caching.

### Example:

```
set cache parameter -memLimit 10
```

### To configure URL categorization parameters

At the command prompt, type:

```
1 set urlfiltering parameter [-HoursBetweenDBUpdates <positive_integer>]
[-TimeOfDayToUpdateDB <HH:MM>]
```



**\*Example:**

```
set urlfiltering parameter -HoursBetweenDBUpdates 3 -TimeOfDayToUpdateDB
03:00
```

**Configuring URL categorization for HTTP traffic**

To configure the URL categorization feature for HTTP traffic, you must configure a loading balancing virtual server, add URL categorization policies and bind the policies to the virtual server. By doing so, the virtual server receives the HTTP traffic and based on policy evaluation, the system assigns a filtering action.

**To add URL categorization action for HTTP traffic**

At the command prompt, type:

```
add responder action <name> <type> (<target> | <htmlpage>)[-comment
<string>] [-responseStatusCode <positive_integer>] [-reasonPhrase <
string>]
```

**Example:**

```
add responder action act_url_categorize respondwith "\"HTTP/1.1 200
OK\r\n\r\n\" + HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORIZE
(0,0).CATEGORY + \"\n\""
```

**To add URL categorization policy for HTTP traffic**

At the command prompt, type:

```
add responder policy <name> <rule> <action> [<undefAction>] [-comment
<string>] [-logAction <string>] [-appflowAction <string>]
```

**Example:**

```
add responder policy pol_url_categorize_http "HTTP.REQ.HOSTNAME.
APPEND(HTTP.REQ.URL).URL_CATEGORIZE(0,0).GROUP.EQ(\"Adult\") || HTTP
.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORIZE(0,0).GROUP.EQ(\"
Gambling\")"RESET
```

**To add an HTTP load balancing virtual server**

If a virtual server for HTTP traffic is not already configured, at the command prompt, type:

```
add lb vserver <name> [-td <positive_integer>] <serviceType> [-clt
Timeout <secs>]
```

**Example:**

```
add lb vserver vsrv-HTTP HTTP * 80 -persistenceType NONE -cltTimeout
120
```

**To bind URL categorization policy with load balancing virtual server**

At the command prompt, type:

```
bind lb vserver <name> -policyName <string> [-priority <positive_integer
>]
```

**Example:**

```
bind lb vserver vsrv-HTTP -policyName pol_url_categorize_http -
priority 10 -gotoPriorityExpression END -type REQUEST
```

**Configuring URL categorization for HTTPS traffic**

To configure the URL categorization feature for HTTPS traffic, you must configure a SSL-bridge loading balancing virtual server, add URL categorization policies and bind the policies to the SSL-bridge virtual server. By doing so, the server receives the HTTPS traffic and based on policy evaluation, the system assigns a filtering action.

**To add URL categorization policy for HTTPS traffic**

At the command prompt, type:

```
add videooptimization detectionpolicy <name> -rule <expression>
-action <string> [-undefAction <string>] [-comment <string>] [-
logAction <string>]
```

**Example:**

```
add videooptimization detectionpolicy pol_url_categorize_https_block_adult
-rule "CLIENT.SSL.DETECTED_DOMAIN.URL_CATEGORIZE(0,0).CATEGORY.EQ("
Adult")' -action RESET
```

### To add SSL-Bridge load balancing virtual server

At the command prompt, type:

```
add lb vserver <name> [-td <positive_integer>] <serviceType> [-cltT
imeout <secs>]
```

#### Example:

```
add lb vserver vsrv-HTTPS SSL_BRIDGE * 443 -persistenceType NONE -
cltTimeout 180
```

### To bind categorization policy with SSL-Bridge virtual server

At the command prompt, type:

```
bind lb vserver <name> -policyName <string> [-priority <positive_integer
>]
```

#### Example:

```
bind lb vserver vsrv-HTTPS -policyName pol_url_categorize_https_block_adult
-priority 20 -type REQUEST
```

## Configuring URL Categorization by using the GUI

The GUI enables you to:

- Enable the URL Categorization feature.
- Add URL Categorization actions for HTTP traffic.
- Add URL Categorization policies for HTTP traffic.
- Add URL Categorization policies for HTTPS traffic.
- Add a load balancing virtual server for HTTP traffic.
- Add an SSL bridge load balancing virtual server for HTTPS traffic.
- Bind URL Categorization policies to the load balancing virtual server.
- Bind URL Categorization policies to the SSL-Bridge load balancing virtual server.
- Configure shared memory limit.
- Configure URL categorization parameters.

### To enable URL categorization

1. In the navigation pane, expand **System** and then click **Settings**.
2. On the **Settings** page, click **Configure Advanced Features** link.

3. On the **Configure Advanced Features** page, select **URL Filtering** check box.
4. Click **OK** and **Close**.

#### To add a URL categorization action

1. In the navigation pane, expand **AppExpert > Responder > Action**.
2. In the details pane, click **Add**.
3. On the **Create Responder Action** page, set the following parameters.
  - a) **Name**. Name of the URL categorization policy action.
  - b) **Type**. Select an action type.
  - c) **Expression**. Use the expression editor to create the policy expression.
  - d) **Comments**. A short description of the policy action.
4. Click **Create** and **Close**.

#### To add a URL categorization policy for HTTP traffic

1. In the navigation pane, expand **AppExpert > Responder > Policies**.
2. On the details pane, click **Add**.
3. On the **Create Responder Policy** page, set the following parameters.
  - a) **Name**. Name of the URL categorization policy action.
  - b) **Action**. Select the URL Categorization action that you prefer to associate with the policy.
  - c) **Log Action**. Select the log action.
  - d) **AppFlow**. Select an AppFlow action.
  - e) **Expression**. Use the expression editor to create the policy expression.
  - f) **Comments**. A short description about the policy action.
4. Click **Create** and **Close**.

#### To add a categorization policy for HTTPS traffic

1. Log on to the NetScaler appliance and navigate to **Configuration > Optimization > Video Optimization > Detection**.
2. On the **Detection** page, click the **Video Optimization Detection Policies** link.
3. On the Video Optimization Detection Policies page, click **Add**.
4. On the **Create Video Optimization Detection Policy** page, set the following parameters.
  - a) **Name**. Name of the optimization policy
  - b) **Expression**. Configure policy using custom expressions.

- c) **Action.** Optimization action associated with the policy to handle the incoming video traffic.
  - d) **UNDEF Action.** Undefined event if the incoming request does not match the optimization policy.
  - e) **Comment.** A short description about the policy.
  - f) **Log Action.** Select an audit log action that specifies the action to be performed for the log messages.
5. Click **Create** and **Close**.

### To add a load balancing virtual server for HTTP traffic

1. Navigate to the **Traffic Management > Load Balancing > Virtual Servers** page.
2. In the details pane, click **Add**.
3. On the **Load Balancing Virtual Server** page set the following parameters:
  - a) **Name.** Name of the load balancing virtual server.
  - b) **Protocol.** Choose protocol type as HTTP.
  - c) **IP Address Type.** IPv4 or IPv6.
  - d) **IP Address.** IPv4 or IPv6, VIP address assigned to the virtual server.
  - e) **Port.** Port number of the virtual server.
4. Click **OK** to continue with the configuration of other, optional, parameters.
5. Click **Create** and **Close**.

### To add an SSL-bridge load balancing virtual server

1. Navigate to the **Traffic Management > Load Balancing > Virtual Servers** page.
2. On the details pane, click **Add**.
3. On the **Load Balancing Virtual Server** page, set the following parameters:
  - a) **Name.** Name of the load balancing virtual server.
  - b) **Protocol.** Select protocol type as SSL-bridge.
  - c) **IP Address Type.** IP addressable type.
  - d) **IP Address.** IP 4 or IP6 IP address assigned to the virtual server.
  - e) **Port.** Port number of the virtual server.
4. Choose **OK** to continue configuration other optional parameters.
5. Click **Create** and then **Close**.

### To bind a URL categorization policy to the HTTP load balancing virtual server

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** page.
2. On the details pane, select the load balancing virtual server and click **Edit**.
3. In the **Advanced Setting** section, click **Policies**.
4. In the **Policies** section, click the **+** icon to access the **Policies** slider.
5. Set the following parameters.
  - a) **Choose Policy**. Select URL categorization policy from the drop-down list.
  - b) **Choose Type**. Select the policy type as Request.
6. Click **Continue**.
7. Select the URL categorization policy from the list and click **Close**.

### To bind a categorization policy to the SSL-bridge load balancing virtual server

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** screen.
2. In the details pane, select the SSL-bridge load balancing virtual server and click **Edit**.
3. In the **Advanced Setting** section, click **Policies**.
4. In the **Policies** section, click **+** icon to access the **Policies** slider.
5. In the **Policies** section, set the following parameters.
  - a) **Choose Policy**. Select video detection policy from the drop-down list.
  - b) **Choose Type**. Select the policy type as Request.
6. Click **Continue**.
7. Select the video detection policy from the list and click **Close**.

### To configure the shared memory limit

1. Sign on to the appliance and navigate to **Optimization > Integrated Caching**.
2. In the details pane, click **Change cache settings** link.
3. On the **Cache Global Settings** page, set the following parameters.
  - a) **Memory Usage Limit (MB)**.
  - b) **Active memory Usage Limit**.
  - c) **Via Header**.
  - d) **Maximum Post Body Length to be Cached**
  - e) **Global Undefined-Result Action**
  - f) **Enable HA Object Persist**
  - g) **Verify Cached Object Persist**
  - h) **Prefetches**

4. Click **OK** and **Close**.

### To configure URL categorization parameters

1. Sign to the appliance and navigate to **Security**.
2. On the details pane, click **Change URL filtering settings** link.
3. In the **Configuring URL Filtering Params** page, set the following parameters.
  - a) Hours Between DB Updates. URL Filtering hours between database updates. Minimum value: 0 and Maximum value: 720.
  - b) Time of Day to Update DB. URL Filtering time of day to update the database.
4. Click **OK** and **Close**.

### Configuring Audit Log Messaging

When a NetScaler appliance receives an incoming URL, if the responder policy has a URL Filtering expression, the audit log feature collects categorization information and displays it as log messages to any target audit log server that is configured. The info is logged.

- Source IP address (the IP address of the client that made the request).
- Destination IP address (the IP address of the requested server).
- Requested URL containing the schema, the host, and the domain name (<http://www.example.com>).
- URL category that the URL filtering framework returns.
- URL category group that the URL filtering framework returned.
- URL reputation number that the URL filtering framework returned.
- Audit log action taken by URL Categorization policy.

To configure audit logging for the URL List feature, you must complete the following tasks:

1. Enable Audit Log.
2. Create Audit Log message action.
3. Set URL List responder policy with Audit Log message action.

For more information, see [Audit Logging](#) topic.

### Storing Failure Errors Using SYSLOG Messaging

At any stage of the URL Filtering process, if there is a system-level failure, the NetScaler appliance uses the audit log mechanism to store logs in the ns.log file. The errors are stored as text messages in SYSLOG format so that, an administrator can view it later in a chronological order of event occurrence.

These logs are also sent to an external SYSLOG server for archival. For more information, see [article CTX229399](#).

For example, if a failure occurs when you initialize the URL Filtering SDK, the error message is stored in the following messaging format.

```
Oct 3 15:43:40 <local0.err> ns URLFiltering[1349]: Error initializing NetStar SDK (SDK error=-1). (status=1).
```

The NetScaler appliance stores the error messages under four different failure categories:

- Download failure. If an error occurs when you try to download the categorization database.
- Integration failure. If an error occurs when you integrate an update into the existing categorization database.
- Initialization failure. If an error occurs when you initialize the URL Categorization feature, set categorization parameters, or end a categorization service.
- Retrieval failure. If an error occurs when the appliance retrieves the categorization details of the request.

## URL Reputation Score

The URL Categorization feature provides policy-based control to restrict blacklisted URLs. You can control access to websites based on URL category, reputation score, or URL category and reputation score. If a network administrator monitors a user accessing highly risky websites, he or she can use a responder policy bound to the URL reputation score to block such risky websites.

Upon receiving an incoming URL request, the appliance retrieves the category and reputation score from the URL categorization database. Based on the reputation score returned by the database, the appliance assigns a reputation rating for websites. The value can range from 1 to 4, where 4 is the riskiest type of websites, as shown in the following table.

---

| URL Reputation Rating | Reputation Comment                                     |
|-----------------------|--------------------------------------------------------|
| 1                     | Clean site.                                            |
| 2                     | Unknown site.                                          |
| 3                     | Potentially dangerous or affiliated to dangerous site. |
| 4                     | Malicious site.                                        |

---



## FAQs

April 22, 2024

**This section provides the FAQ on the following NetScaler features**

- [Authentication, Authorization, and Auditing](#)
- [Admin Partition](#)
- [AppFlow](#)
- [Call Home](#)
- [Clustering](#)
- [Connection Management](#)
- [Content Switching](#)
- [Debugging](#)
- [Hardware](#)
- [High Availability](#)
- [Integrated Caching](#)
- [Installing, Upgrading, and Downgrading](#)
- [Load Balancing](#)
- [NetScaler GUI](#)
- [SSL](#)

## Authentication, Authorization, and Auditing

April 22, 2024

### Web Application Firewall protection

- Is it necessary to upgrade NetScaler to a version that addresses security vulnerabilities if the Web Application Firewall protection feature is enabled?

Yes, because the Web Application Firewall protection feature does not resolve security vulnerabilities on NetScaler. It only offers protection against malicious attacks. We recommend you to always upgrade NetScaler to the latest version as it contains the latest security fixes.

- What are the licensing requirements for the Web Application Firewall feature?

This feature is available with all the licenses (Standard, Enterprise, and Premium).

## Admin Partition

May 2, 2023

### Where can I get the NetScaler configuration file for a partition?

The configuration file (*ns.conf*) for the default partition is available in the */nsconfig* directory. For admin partitions, the file is available in the */nsconfig/partitions/<partitionName>* directory.

### How can I configure integrated caching in a partitioned NetScaler appliance?

#### Note

Integrated caching in admin partitions is supported from NetScaler 11.0 onwards.

To configure integrated caching (IC) on a partitioned NetScaler, after defining the IC memory on the default partition, the superuser can configure the IC memory on each admin partition such that the total IC memory allocated to all admin partitions does not exceed the IC memory defined on the default partition. The memory that is not configured for the admin partitions remains available for the default partition.

For example, if a NetScaler appliance with two admin partitions has 10 GB of IC memory allocated to the default partition, and the IC memory allocation for the two admin partitions is as follows:

- Partition1: 4 GB
- Partition2: 3 GB

Then, the default partition has  $10 - (4 + 3) = 3$  GB of IC memory available for use.

#### Note

If all IC memory is used by the admin partitions, no IC memory is available for the default partition.

### What is the scope for L2 and L3 parameters in admin partitions?

#### Note

- Applicable from NetScaler 11.0 onwards.
- For ARP to work in non-default partition, you must enable the “proxyArp” parameter in the “set l2param” command.

On a partitioned NetScaler appliance, the scope of updating the L2 and L3 parameters is as follows:

- For L2 parameters that are set by using the “set L2Param” command, the following parameters can be updated only from the default partition, and their values are applicable to all the admin partitions:

maxBridgeCollision, bdgSetting, garpOnVridIntf, garpReply, proxyArp, resetInterfaceOn-HAfailover, and skip\_proxying\_bsd\_traffic.

The other L2 parameters can be updated in specific admin partitions, and their values are local to those partitions.

- For L3 parameters that are set by using the “set L3Param” command, all parameters can be updated in specific admin partitions, and their values are local to those partitions. Similarly, the values that are updated in the default partition are applicable only to the default partition.

## How to enable dynamic routing in an admin partition?

### Note

Dynamic routing in admin partitions is supported from NetScaler 11.0 onwards.

While dynamic routing (OSPF, RIP, BGP, ISIS, BGP+) is by default enabled on the default partition, in an admin partition, it must be enabled by using the following command:

```
> set L3Param -dynamicRouting ENABLED
```

### Note

A maximum of 63 partitions can run dynamic routing (62 admin partitions and 1 default partition).

On enabling dynamic routing on an admin partition, a virtual router (VR) is created.

- Each VR maintains its own vlan0 which will be displayed as `vlan0_<partition-name>`.
- All unbound IP addresses that are exposed to ZebOS are bound to vlan0.
- The default VR (of the default partition) shows all the VRs that are configured.
- The default VR shows the VLANs that are bound to these VRs (except default VLANs).

## Where can I find the logs for a partition?

NetScaler logs are not partition-specific. Log entries for all partitions must be stored in the `/var/log/` directory.

## How can I get audit logs for an admin partition?

In a partitioned NetScaler, you cannot have specific log servers for a specific partition. The servers that are defined at the default partition are applicable across all admin partitions. Therefore, to view the audit logs for a specific partition, you have to use the “show audit messages” command.

### Note

The users of an admin partition do not have access to the shell and therefore are not able to access the log files.

## How can I get web logs for an admin partition?

You can get the web logs for an admin partition as follows:

- **For NetScaler 11.0 and later versions**

The web logging feature must be enabled on each of the partitions that require web logging. Using the NetScaler Web Logging (NSWL) client, the NetScaler retrieves the web logs for all the partitions with which the user is associated.

- **For versions prior to NetScaler 11.0**

Web logs can be obtained only by `nsroot` and other superusers. Also, even though web logging is enabled on the default partition, the NetScaler Web Logging (NSWL) client fetches web logs for all the partitions.

To view the partition for each log entry, customize the log format to include the %P option. You can then filter the logs to view the logs for a specific partition.

## How can I get the trace for an admin partition?

You can get the trace for an admin partition as follows:

- **For NetScaler 11.0 and later versions**

In a partitioned NetScaler appliance, the `nstrace` operation can be performed on individual admin partitions. The trace files are stored in the `/var/partitions/<partitionName>/nstrace/` directory.

**Note:** You cannot get the trace of an admin partition by using the GUI. You must use the CLI.

- **For versions prior to NetScaler 11.0**

The `nstrace` operation can only be performed on the default partition. Therefore, packet captures are available for the entire NetScaler system. To get partition-specific packet captures, use VLAN-ID based filters.

## How can I get the technical support bundle specific to an admin partition?

To get the tech support bundle for a specific partition, run the following command from the default partition:

```
> show techsupport -scope partition <partitionName>
```

**Note:** This command also gives system-specific information.

## AppFlow

May 2, 2023

- **Which build of NetScaler supports AppFlow?**

AppFlow is supported on NetScaler appliances running version 9.3 and above with nCore build.

- **What is the format used by AppFlow to transmit data?**

AppFlow transmits information in the Internet Protocol Flow Information eXport (IPFIX) format, which is an open Internet Engineering Task Force (IETF) standard defined in RFC 5101. IPFIX (the standardized version of Cisco's NetFlow) is widely used to monitor network flow information.

- **What do AppFlow records contain?**

AppFlow records contain standard NetFlow or IPFIX information, such as time stamps for the beginning and end of a flow, packet count, and byte count. AppFlow records also contain application-level information (such as HTTP URLs, HTTP request methods and response-status codes, server response time, and latency). IPFIX flow records are based on templates that must be sent before sending flow records.

- **After an upgrade to NetScaler Version 9.3 Build 48.6 Cl, why does an attempt to open a virtual server from the GUI result in the error message “The AppFlow feature is only available on NetScaler Ncore”?**

AppFlow is supported only on nCore appliances. When you open the virtual server configuration tab, clear the **AppFlow** check box.

- **What does the transaction ID in an AppFlow records contain?**

A transaction ID is an unsigned 32-bit number identifying an application-level transaction. For HTTP, a transaction corresponds to a request and response pair. All flow records that correspond to this request and response pair have the same transaction ID. A typical transaction has four flow records. If the NetScaler generates the response by itself (served from the integrated cache or by a security policy), there might be only two flow records for the transaction.

- **What is an AppFlow action ?**

An AppFlow action is a set of collectors to which the flow records are sent if the associated AppFlow policy matches.

- **What commands can I run on the NetScaler appliance to verify that the AppFlow action is a hit?**

The show AppFlow action. For example:

```
1 > show appflow action
2 1) Name: aFL-act-collector-1
3 Collectors: collector-1
4 Hits: 0
5 Action Reference Count: 2
6 2) Name: apfl-act-collector-2-and-3
7 Collectors: collector-2, collector-3
8 Hits: 0
9 Action Reference Count: 1
10 3) Name: apfl-act-collector-1-and-3
11 Collectors: collector-1, collector-3
12 Hits: 0
13 Action Reference Count: 1
```

- **What is an AppFlow collector?**

A collector receives flow records generated by the NetScaler appliance. To be able to send flow records, you must specify at least one collector. You can specify up to four. You can remove unused collectors.

- **What NetScaler version is required for using AppFlow?**

Use NetScaler version 9.3.49.5 or higher, and remember that AppFlow is available in only the nCore builds.

- **What transport protocol does AppFlow use?**

AppFlow uses UDP as the transport protocol.

- **What ports needs to be opened if I have a firewall in the network?**

Port 4739. It is the default UDP port the AppFlow collector uses for listening on IPFIX messages. If the user changes the default port, that port must be opened on the firewall.

- **How can I change the default port AppFlow uses?**

When you add an AppFlow collector by using the add appflowCollector command, you can specify the port to be used.

```
1 > add appflowCollector coll1 -IPAddress 10.102.29.251 -port 8000
2 Done
```

- **What does setting `clientTrafficOnly` do?**

NetScaler generates AppFlow records only for client-side traffic.

- **How many collectors can be configured at a time?**

You can configure up to four AppFlow collectors at a time on the NetScaler appliance. Note that the maximum number of collectors that can be configured on a NetScaler appliance is four.

## Call Home

May 22, 2023

- **What is Call Home on a NetScaler appliance?**

Call Home monitors, and notifies critical events on a NetScaler appliance. By enabling Call Home, you can automate the error notification process. You not only avoid calling NetScaler support, raise a service request, and upload system data before NetScaler support can troubleshoot the issue, but also identify and resolve issues before it occurs.

- **Is Call Home enabled by default on a NetScaler appliance?**

Yes, Call Home is enabled by default on the appliance. If you upgrade to the latest software from an older version where Call Home was disabled by default, the upgrade process automatically enables the feature. If you later choose to disable it, the updated setting is remembered for all further upgrades. For information, see [Call Home](#).

- **What are the pre-requisites for Call Home to work?**

Access to an Internet connection.

**Note:** If your NetScaler appliance does not have an Internet connectivity, you can configure a proxy server through which NetScaler can generate System Logs and upload it to the Citrix technical support server (CIS).

- **What are the benefits of using Call Home?**

- Monitor hardware and software error conditions.
- Notify about the occurrence of critical events that impact your network.
- Send performance data and System Logs to Citrix to:
  - \* Analyze and improve product quality.
  - \* Provide real-time troubleshooting information for proactive issue identification, and faster issue resolution.

- **Which release of NetScaler software supports Call Home?**

NetScaler release 10.0 and later.

- **What NetScaler platform models support Call Home?**

Call Home feature is enabled by default on all NetScaler platforms and all appliance models (MPX, VPX, and SDX).

- NetScaler MPX: All MPX models.
- NetScaler VPX: All VPX models. In addition, it is supported on VPX appliances that obtain their licenses from external or central licensing pools. However, the feature remains the same as for a standard VPX appliance.
- NetScaler SDX: Monitors the disk drive and assigned SSL chips for any errors or failures. The VPX instances, however, do not have access to the Power Supply Unit (PSU) and therefore their status is not monitored. In an SDX platform, you can configure Call Home either directly on an individual instance or through the SVM.

- **Should I configure SNMP alarm for Call Home to notify error conditions?**

No, you need not configure SNMP for Call Home to monitor error conditions, because SNMP and Call Home uploads are independent of each other. If you want to be notified each time an error condition occurs, you can configure the CALLHOME-UPLOAD-EVENT SNMP alarm to generate an SNMP alert whenever a Call Home upload happens. The SNMP alert notifies the local administrator about the occurrences of critical events.

- **How do I contact a technical support?**

For all critical hardware-related events, Call Home automatically creates a service request to NetScaler. For other errors, after you review the System Logs, you can contact the NetScaler technical support team to open a service request for further investigation. To contact support, visit <https://www.netscaler.com/resources/support>.

- **What error conditions does Call Home monitor in a NetScaler appliance?**

Call Home supports monitoring of the following events in a NetScaler appliance:

- Compact flash drive errors
- Hard disk drive errors
- Power supply unit failure
- SSL card failure
- Warm restart
- Memory anomalies
- Rate limit drops

- **Do you need a separate license for Call Home?**

No, Call Home does not require a separate license. You can enable it in all NetScaler platform licenses.



- **What data does Call Home send to NetScaler support server and how frequently is it sent?**

Call Home collects and sends two types of data to the CIS. They are:

- Basic System information (running NetScaler version, deployment mode (standalone, HA, cluster), hardware details and so on). It is sent at the time of Call Home registration and as part of periodic heartbeats. The heartbeat is sent once every 30 days, but you can configure this interval anywhere from 1 to 30 days. However, a value of less than 5 days is not recommended, because frequent uploads are usually not very useful.
- An abbreviated version of the [show tech support bundle](#) when there is an error condition. It is sent upon the first occurrence of a particular error condition since the appliance was last started. That is, a reoccurrence of the same error condition does not trigger another upload unless the appliance was rebooted after the previous occurrence.

- **Can Call Home generate and upload system logs through a proxy server?**

Yes. If your NetScaler appliance does not have direct Internet connectivity, you can configure a proxy server and upload System Logs to the Citrix technical support server (CIS).

- **Can I review Call Home data before it is sent to CIS?**

Unfortunately, you cannot review Call Home data before it is sent to CIS. Call Home does not collect any other data in addition to the data that you will provide when contacting the NetScaler support team.

- **How secure and private are the Call Home uploads?**

Call Home provides data security and privacy in the following ways:

- Uses a secure SSL/TLS channel to transfer data to Citrix servers.
- Uploaded data is reviewed only by authorized personnel and is not shared with any third party.

## Clustering

April 27, 2021

Click [here](#) for FAQs on clustering.

## Connection Management

May 2, 2023

- **What is an admin connection?**

An admin connection establishes a connection to the NSIP address and allows administrators to configure and monitor the NetScaler appliance.

- **What are the types of admin connections?**

There are two types of admin connections:

- SSH connection –Admin users use an SSH client to log on through the NSIP address.
- NITRO API connection –Admin users use NITRO APIs to automate the logon process to the NetScaler appliance.

**Note**

Admin users can also log on through the GUI to log on, by using a browser to connect to the NSIP address. The GUI internally opens a NITRO API connection. Therefore, a GUI session is equivalent to a NITRO API connection, and FAQs related to the NITRO API apply to GUI.

- **How many concurrent admin connections are allowed on a NetScaler appliance?**

The appliance allows up to 20 concurrent admin connections.

- **Which login credentials are required for an admin logon?**

Admin logon requires a user name and a password.

**Note:** An authentication key can be used instead of a password.

- **Which external authentication methods does a NetScaler appliance support?**

The appliance supports the following external authentication methods:

- RADIUS
- LDAP
- TACACS

- **What is a client?**

A client is a device (laptop or desktop), used by the admin user to open an admin connection.

- **What is a session token?**

A session token is a unique identifier that the NetScaler appliance issues to a client that sends a NITRO API logon request.

- API clients can reuse the session token, if it has not expired, for subsequent API requests on new TCP connections
- GUI clients internally open NITRO API connections and keep the session token active during the GUI session.

- **What is an active session on a NetScaler appliance?**

A CLI session is considered active if the session has not expired and has an open SSH connection with a NetScaler appliance.

A NITRO API session is considered active if the session token timeout has not expired on the NetScaler appliance.

- **How does NetScaler enforce the concurrent connection limit?**

Every time the NetScaler appliance receives an admin connection request (SSH or NITRO API), it checks the number of admin connections it has open. If the number is lower than 20, a new connection is opened.

- **Which counter reflects the number of admin connections on a NetScaler appliance?**

The connection counter (`nsconfigd_cur_clients`) reflects the number of active connections. This counter is incremented when a client opens new connection to the appliance, and is decremented when a connection is closed.

- **Which counter reflects the number of active tokens on the NetScaler appliance?**

The `configd_cur_tokens` counter reflects the number of active tokens on the NetScaler appliance.

- **How does NetScaler appliance handle errors on a connection?**

The NetScaler appliance immediately closes the client (CLI, API, and GUI) connection if it encounters errors on a connection.

- **Does a CLI or GUI session on a connection to the management address count against the admin connection limit?**

Yes, all CLI and GUI connections are TCP based connections, and every TCP connection to the management address counts against the admin connection limit.

- **Does a NITRO session count against the admin connection limit?**

A NITRO session counts against the admin connection limit if there is an open TCP connection using the session token issued by the NetScaler appliance.

- **What is the default timeout period for API, GUI, and CLI sessions on NetScaler appliance?**

The following table lists the default timeout period for API, GUI, and CLI sessions on the NetScaler appliance:

|                    | CLI default timeout period (min) | API default timeout period (min) | GUI default timeout period (min) |
|--------------------|----------------------------------|----------------------------------|----------------------------------|
| NetScaler Releases |                                  |                                  |                                  |
| NetScaler 9.3      | None                             | 30 Minutes                       | 30 Minutes                       |

| NetScaler Releases | CLI default timeout period (min) | API default timeout period (min) | GUI default timeout period (min) |
|--------------------|----------------------------------|----------------------------------|----------------------------------|
| NetScaler 10.1     | None                             | 30 Minutes                       | 30 Minutes                       |
| NetScaler 10.5     | 15 Minutes                       | 30 Minutes                       | 15 Minutes                       |
| Onwards            |                                  |                                  |                                  |

- **How can you set the CLI sessions time out on a NetScaler appliance?**

The CLI session timeout can be configured by running the following command at the CLI prompt:

```
set cli mode -timeout \

```

- **How do you override the default timeout period when using the NITRO API?**

You can override the default timeout period for a NITRO API by setting the timeout duration in the “timeout” field of the login object. If the session timeout is set to zero, the session token has an infinite timeout.

Note: An infinite timeout is not advisable, because sessions that do not time out continue to count against the admin connection count.

- **What happens if a user account is deleted from the NetScaler appliance after an admin session is created?**

For internal system users, the NetScaler appliance closes the existing CLI or NITRO API session. For external system users, the session remains active until it expires.

- **Can NITRO API clients use a single session token to open multiple admin connections on the NetScaler appliance?**

Yes. Each such connection counts against the admin connection limit.

- **If management access is enabled for a SNIP address, do admin connections to that address count against the limit for the number of admin connections?**

Yes, admin connections to management address (SNIP) count against the admin connection limit on NetScaler.

- **Can a NetScaler admin log on to the NetScaler appliance after the maximum connections limit is reached?**

Yes. One more admin connection is allowed after the maximum connection limit is reached.

- **Can NITRO API endpoints open multiple admin connections on NetScaler the appliance?**

Yes, NITRO API endpoints can open multiple admin connections and exhaust the concurrent admin connection limit on a NetScaler appliance. In such situations, an extra SSH/CLI connection

is allowed and the admin can force closure of old API sessions, or reduce the session timeout duration for the existing API sessions.

- **Can same client open multiple API sessions on a NetScaler appliance?**

Yes, a client can open multiple API sessions by repeatedly logging on. For example, the client might log back on after a reboot.

Note: Repeated client logons count against the admin connection limit on NetScaler appliance.

- **Can API clients use the entire API session token limit?**

Yes, API clients can use the entire API session token limit, provided by repeatedly logging on without using a previously issued token.

Note: If a client’s session timeout is zero, the token is valid forever. Repeated logons using new session tokens can count against the limit for API session tokens.

- **Do CLI sessions count against the API session token limit?**

No, CLI sessions are not counted against the API session token limit.

- **Can admin users use telnet to open a CLI session?**

No. Only an SSH client can open a CLI session.

- **What is connection limit and API session limit applicable for various NetScaler releases?**

The following table lists the maximum concurrent admin connection and active API session limits applicable for various NetScaler releases:

| NetScaler Releases                             | 9.3  | 10.1 (Before 130.x) | 10.1 (Before 130.10) | 10.1 (From 130.10) |
|------------------------------------------------|------|---------------------|----------------------|--------------------|
| Maximum number of concurrent admin connections | 20   | 20                  | 20                   | 20                 |
| Maximum number of active API sessions*         | 1000 | 20                  | 1000                 | 1000               |

**Note:**

- API sessions are considered active if they have not timed out. For example, if 500 API sessions were created but 100 have expired, 400 API sessions are active.
- An API session need not open a TCP connection to the NetScaler appliance.

## Content Switching

May 2, 2023

- **I have installed a non-NetScaler load balancing appliance on the network. However, I would like to use the content switching feature of the NetScaler appliance to direct the client requests to the load balancing appliance. Is it possible to use the Content switching feature of the NetScaler appliance with a non-NetScaler load balancing appliance?**

Yes. You can use the Content switching feature of the NetScaler appliance with the load balancing feature of the NetScaler appliance or a non-NetScaler load balancing appliance. However, when using the non-NetScaler load balancing appliance, make sure that you create a load balancing virtual server on the NetScaler appliance and bind it to the non-NetScaler load balancing appliance as a service.

- **How is a Content switching virtual server different from a load balancing virtual server?**

A Content switching virtual server is capable only of sending the client requests to other virtual servers. It does not communicate with the servers.

A Load balancing virtual server balances the client load among servers and communicates with the servers. It monitors server availability and can be used to apply different load balancing algorithms to distribute the traffic load.

Content switching is a method used to direct client requests for specific types of content to targeted servers by way of load balancing virtual servers. You can direct the client requests to the servers best suited to handle them. This result in reduced overheads to process the client requests on the servers.

- **I want to implement the Content switching feature of the NetScaler appliance to direct the client requests. What types of client request can I direct by using the Content switching feature?**

You can direct only HTTP, HTTPS, FTP, TCP, Secure TCP, and RTSP client requests by using the Content switching feature. To direct HTTPS client requests, you must configure the SSL offload feature on the appliance.

- **I want to create Content switching rules on the NetScaler appliance. What are the various elements of the client request on which I can create a content switching rule?**

You can create the content switching rules based on the following elements and their values in the client request:

- URL
- URL tokens

- HTTP version
- HTTP Headers
- Source IP address of the client
- Client version
- Destination TCP port

• **I understand that the content switching feature of the NetScaler appliance helps enhance the performance of the network. Is this correct?**

Yes. You can direct the client requests you the servers best suited to handle them. The result is reduced overhead for processing the client requests on the servers.

• **Which feature of the NetScaler appliance should I configure on the NetScaler appliance to enhance the site manageability and response time to the client requests?**

You can configure the content switching feature of the NetScaler appliance to enhance the site manageability and response time to the client request. This feature enables you to create content groups within the same domain name and IP address. This approach is flexible, unlike the common approach of explicitly partitioning the content into different domain names and IP addresses, which are visible to the user.

Multiple partitions dividing a website into various domain names and IP addresses force the browser to create a separate connection for each domain it finds when rendering and fetching the content of a webpage. These additional WAN connections degrade the response time for the webpage.

• **I have hosted a web site on a web server farm. What advantages does the NetScaler content switching feature offer for this type of setup?**

The content switching feature provides the following advantages on a NetScaler appliance in a site that is based in a web server farm:

- Manage the site content by creating a content group within the same domain and IP address.
- Enhance the response time to client requests by using the content group within the same domain and IP address.
- Avoid the need for full content replication across domains.
- Enable application-specific content partitioning. For example, you can direct client requests to a server that handles only dynamic content or only static content, as appropriate for the request.
- Support multi-homing of multiple domains on the same server and use the same IP address.
- Reuse connections to the servers.

• **I want to implement the content switching feature on the NetScaler appliance. I want to**

**direct the client requests to the various servers after evaluating the various parameters of each request. What approach should I follow to implement this setup when configuring the content switching feature?**

You can use policy expressions to create policies for the content switching feature. An expression is a condition evaluated by comparing the qualifiers of the client request to an operand by using an operator. You can use the following parameters of the client request to create an expression:

- **Method**- HTTP request method.
- **URL**- URL in the HTTP header.
- **URL TOKENS**- Special tokens in the URL.
- **VERSION**- HTTP request version.
- **URL QUERY**- Contains the URL Query LEN, URL LEN, and HTTP header.
- **SOURCEIP**- IP address of the client.

Following is a complete list of the operators that you can use to create an expression:

- == (equals)
- != (not equals)
- EXISTS
- NOT EXISTS
- CONTAINS
- NOT CONTAINS
- GT (greater than)
- LT (less than)

---

You can also create various rules, which are logical aggregations of a set of expressions. You can combine multiple expressions to create rules. To combine expressions, you can use the && (AND) and

---

- **I want to configure a rule based policy along with a URL based policy for the same content switching virtual server. Is it possible to create both types of policies for the same content switching virtual server?**

Yes. You can create both type of policies for the same content switching virtual server. However, be sure to assign priorities to set an appropriate precedence for the policies.

- **I want to create content switching policies that evaluate the domain name, along with a prefix and suffix of a URL, and direct the client requests accordingly. Which type of content switching policy should I create?**

You can create a Domain and Exact URL policy. When this type of policy is evaluated, the NetScaler appliance selects a content group if the complete domain name and the URL in



the client request match the ones configured. The client request must match the configured domain name and exactly match the prefix and suffix of the URL if they are configured.

- **I want to create content switching policies that evaluate the domain name, along with a partial prefix and suffix of URL, and direct the client requests accordingly. Which type of content switching policy should I create?**

You can create a Domain and Wildcard URL policy for the content switching virtual server. When this type of policy is evaluated, the NetScaler appliance selects a content group if the request matches the complete domain name and partially matches the URL prefix.

- **What is a Wildcard URL policy?**

You can use wildcards to evaluate partial URLs in client requests to the URL you have configured on the NetScaler appliance. You can use wildcards in the following types of URL-based policies:

- Prefix only. For example, the `/sports/*` expression matches all URLs available under the `/sports` URL. Similarly, the `/sports*` expression matches all URLs whose prefix is `/sports`.
- Suffix only. For example the `/*.jsp` expression matches all URLs with a file name extension of `.jsp`.
- Prefix and Suffix. For example, the `/sports/*.jsp` expression matches all URLs under the `/sports/` URL that also have the `.jsp` file name extension. Similarly, the `/sports*.jsp` expression matches all URLs with a prefix of `/sports*` and a file name extension of `.jsp`.

- **What is a Domain and Rule policy?**

When you create a Domain and Rule policy, the client request must match the complete domain and the rule configured on the NetScaler appliance.

- **What is the default precedence set for evaluating policies?**

By default, the rule based policies are evaluated first.

- **If some of the content is the same for all client requests, what type of precedence should I use for evaluating policies?**

If some of the content is the same for all the users and different content must be served on the basis of client attributes, you can use URL-based precedence for policy evaluation.

- **What policy expression syntaxes are supported in content switching?**

Content switching supports two types of policy expressions:

- **Classic Syntax-** Classic syntax in content switching starts with the keyword `REQ` and is more advanced than the Advanced policy. Classic policies cannot be bound to an action. Therefore, the target load balancing virtual server can be added only after binding the content switching virtual server.

- **Advanced policy:** Advanced policy generally starts with the key word HTTP and is easier to configure. A target load balancing virtual server action can be bound to a Advanced policy, and the policy can be used on multiple content switching virtual servers.

- **Can I bind a single content switching policy to multiple virtual servers?**

Yes. You can bind a single content switching policy to multiple virtual servers by using policies with defined actions. Content switching policies that use an action can be bound to multiple content switching virtual servers because the target load balancing virtual server is no longer specified in the content switching policy. The ability to bind a single policy to multiple content switching virtual servers helps to further reduce the size of the content switching configuration.

For more information, see the following Knowledge Center articles and NetScaler documentation topics:

- See CTX122918 - [How to Bind the Same Content Switching Policy to Two Content Switching virtual server on a NetScaler Appliance.](#)
- See CTX122736 - [How to Bind the Same Advanced Policy to Multiple Content Switching Virtual Servers using Policy Labels.](#)
- [Configuring Basic Content Switching.](#)

- **Can I create an action based policy using classic expressions?**

No. As of now NetScaler does not support policies using classic syntax expressions with actions. The target load balancing virtual server must be added when binding the policy instead of defining it in an action.

## Debugging

May 2, 2023

- **How can I determine the interface (CLI, GUI, or API) through which an operation was performed?**

The NetScaler keeps track of the interfaces through which operations are performed. You can view this information in syslogs (in the GUI, navigate to Configuration > System > Auditing > Audit Messages > Syslog messages) or in the ns.log (located at the /var/log/ directory) file.

For example, operations that are performed through the API are flagged as “API CMD\_EXECUTED.”

## Hardware

September 21, 2020

Click [here](#) for FAQs about MPX hardware.

## High Availability

November 8, 2023

Click [here](#) for FAQs about High Availability.

## Integrated Caching

May 2, 2023

### Content Groups

- **How is a DEFAULT content group different from other content groups?**

The behavior of the DEFAULT content group is the same as any other group. The only attribute that makes the DEFAULT content group special is that if an object is being cached and no content group has been created. The object is cached in the DEFAULT group.

- **What is the ‘cache-Control’ option of the content group level?**

You can send any cache-control header the browser. There is a content group level option, -cacheControl, which enables you to specify the cache-control header that you want to be inserted in the response to the browser.

- **What is the ‘Minhit’ option in content group level?**

`Minhit` is an integer value specifying the minimum number of select to a cache policy before the object is cached. This value is configurable at the content group level. Following is the syntax to configure this value from the CLI.

```
add/set cache contentGroup \
```

- **What is the use of the expireAtLastByte option?**

The expireAtLastByte option enables the integrated cache to expire the object when it is downloaded. Only requests that are outstanding requests then are served from the cache. any new requests are sent to the server. This setting is useful when the object is frequently modified, as in the case of stock quotes. This expiry mechanism works along with the Flash Cache feature. To configure a expireAtLastByte option, run the following command from the CLI:

```
add cache contentGroup \<<Group_Name> -expireAtLastByte YES
```

## Cache policy

- **What is a caching policy?**

Policies determine which transactions are cacheable and which are not. Also, policies add or override the standard HTTP caching behavior. Policies determine an action, such as CACHE or NOCACHE, depending on the specific characteristics of the request or response. If a response matches the policy rules, the object in the response is added to the content group configured in the policy. If you have not configured a content group, the object is added to the DEFAULT content group.

- **What is a policy hit?**

A select occurs when a request or response matches a cache policy.

- **What is a miss?**

A miss occurs when a request or response does not match any cache policy. A miss can also occur if the request or response matches a cache policy but some override of RFC behavior prevents the object from being stored in the cache.

- **I have configured Integrated Caching feature of the NetScaler appliance. When adding the following policy, an error message appears. Is there any error in the command?**

```
add cache policy image_caching -rule exp1 | ns_ext_not_jpeg -
action cache

\> ERROR: No such command
```

In the preceding command, the expression must be within the quotation marks. Without quotation marks, the operator is considered to be the pipe operator.

## Memory Requirements

- **What are the commands that I can run on the NetScaler appliance to check the memory allocated to cache?**

To display the memory allocated for cache in the NetScaler appliance, run any of the following commands from the CLI:

- `show cache parameter`

In the output, check the value of the Memory usage limit parameter. This is the maximum memory allocated for cache.

- `show cache \<Content_Group_Name>`

In the output, check the values of the Memory usage and Memory usage limit parameters indicating the memory used and allocated for the individual content group.

- **My NetScaler appliance has 2 GB of memory. Is there any recommended memory limit for cache?**

For any model of the NetScaler appliance, you can allocate half of the memory to the cache. However, Citrix recommends allocating a little less than half of the memory, because of internal memory dependency. You can run the following command to allocate 1 GB of memory to the cache:

```
set cache parameter -memLimit 1024
```

- **Is it possible to allocate memory for individual content groups?**

Yes. Even though you allocate memory for the integrated cache globally by running the `set cache parameter -memlimit<Integer>`, you can allocate memory to individual content groups by running the `set cache <Content_Group_Name> -memLimit <Integer>` command. The maximum memory you can allocate to content groups (combined) cannot exceed the memory you have allocated to the integrated cache.

- **What is the dependency of memory between integrated cache and TCP buffer?**

If the NetScaler appliance has 2 GB memory, then the appliance reserves approximately 800 MB to 900 MB of memory and the remaining is allocated to the FreeBSD operating system. Therefore, you can allocate up to 512 MB of memory to the integrated cache and the rest is allocated to the TCP buffer.

- **Does it affect the caching process if I do not allocate global memory to the integrated cache?**

If you do not allocate memory to the integrated cache, all requests are sent to the server. To make sure that you have allocated memory to the integrated cache, run the `show cache parameter` command. Actually no objects are cached if the global memory is 0, so it must be set first.

## Verification commands

- **What are the options for displaying cache statistics?**

You can use either of the following options to display the statistics for cache:

- `stat cache`

To display the summary of the cache statistics.

- `stat cache -detail`

To display the full details of the cache statistics.

- **What are the options for displaying the cached content?**

To display the cached content, you can run the `show cache object` command.

- **What is the command that I can run to display the characteristics of an object stored in cache?**

If the object stored in the cache is, for example, `GET //10.102.12.16:80/index.html`, you can display the details about the object by running the following command from the CLI of the appliance:

```
show cache object -url '/index.html'-host 10.102.3.96 -port 80
```

- **Is it mandatory to specify the group name as a parameter to display the parameterized objects in cache?**

Yes. It is mandatory to specify the group name as a parameter to display the parameterized objects in the cache. For example, consider that you have added the following policies with the same rule:

```
1 add cache policy p2 -rule ns_url_path_cgibin -action CACHE -
 storeInGroup g1
2 add cache policy p1 -rule ns_url_path_cgibin -action CACHE -
 storeInGroup g2
```

In this case, for the multiple requests, if policy p1 is evaluated, its select counter is incremented and the policy stores the object in the g1 group, which has select parameters. Therefore, you have to run the following command to display the objects from the cache:

```
show cache object -url "/cgi-bin/setCookie.pl"-host 10.102.18.152
 groupName g1
```

Similarly, for another set of multiple requests, if policy p2 is evaluated, its select counter is incremented and the policy stores the object in the g2 group, which does not have select parameters. Therefore, you have to run the following command to display the objects from the cache:

```
show cache object -url "/cgi-bin/setCookie2.pl"-host 10.102.18.152
```

- **I notice that there are some blank entries in the output of the nscachemgr command. What are those entries?**

Consider the following sample output of the `nscachemgr` command. The blank entries in this output are highlighted in bold face for your reference:

```
1 root@ns# /netscaler/nscachemgr -a
2 //10.102.3.89:80/image8.png
3 //10.102.3.97:80/staticdynamic.html
4 //10.102.3.97:80/
5 //10.102.3.89:80/image1.png
6 //10.102.3.89:80/file5.html
7 //10.102.3.96:80/
8 //10.102.3.97:80/bg_logo_segue.png
9 //10.102.3.89:80/file500.html
10 //10.102.3.92:80/
11 //10.102.3.96:80/cgi-bin/rfc/ccProxyReval.pl
12 Total URLs in IC = 10
```

The blank entries in the output are due to the default caching properties for GET / HTTP/1.1.

## Flushing Objects

- **How can I flush a selective object from the cache?**

You can identify an object uniquely by its complete URL. To flush such an object, you can perform any of the following tasks:

- Flush cache
- Flush content group
- Flush the specific object

To flush the specific object, you have to specify the query parameters. You specify the `inval-Param` parameter to flush the object. This parameter applies only to a query.

- **Does any change in the cache configuration trigger flushing of cache?**

Yes. When you change to the cache configuration, all the SET cache commands inherently flush the appropriate content groups.

- **I have updated the objects on the server. Do I need to flush the cached objects?**

Yes. When you update objects on the server, you must flush the cached objects, or at least the relevant objects and content groups. The integrated cache is not affected by an update to the server. It continues to serve the cached objects until they expire.

## Flash Cache

- **What is Flash Cache feature of the NetScaler appliance?**

The phenomenon of Flash crowds occurs when many clients access the same content. The result is a sudden surge in traffic toward the server. The Flash Cache feature enables the NetScaler appliance to improve performance in such a situation by sending only one request to the server. All other requests are queued on the appliance and the single response is served to the requests. You can use either of the following commands to enable the Fast Cache feature:

- `add cache contentGroup \<Group_Name> -flashCache YES`
- `set cache contentGroup \<Group_Name> -flashCache YES`

- **What is the limit for Flash Cache clients?**

The number of Flash Cache clients depends on the availability of resources on the NetScaler appliance.

## Default Behavior

- **Does the NetScaler appliance proactively receive objects upon expiry?**

The NetScaler appliance never proactively receives objects on expiry. This is true even for the negative objects. The first access after expiry triggers a request to the server.

- **Does the integrated cache add clients to the queue for serving even before it starts receiving the response?**

Yes. The integrated cache adds clients to the queue for serving even before it starts receiving the response.

- **What is the default value for the Verify cached object using parameter of the cache configuration?**

HOSTNAME\_AND\_IP is the default value.

- **Does the NetScaler appliance create log entries in the log files?**

Yes. The NetScaler appliance creates log entries in the log files.

- **Are compressed objects stored in the cache?**

Yes. Compressed objects are stored in the cache.

## Interoperability with other features

- **What happens to objects that are currently stored in cache and are being accessed through SSL VPN?**



Objects stored in the cache and accessed regularly are served as cache, select when accessed through the SSL VPN.

- **What happens to objects stored in the cache when accessed through SSL VPN and later accessed through a regular connection?**

The objects stored through the SSL VPN access are served as a select when accessed through the regular connection.

- **When using web logging, how do I differentiate entries that indicate response served from cache from those served by the server?**

For responses served from the integrated cache, the server log field contains the value IC. For responses served from a server, the server log field contains the value sent by the server. Following is a sample log entry for an integrated caching transaction:

```
"10.102.1.52 - "Mozilla/4.0 (compatible; MSIE 6.0; Windows NT 4.0; .NET CLR 1.0.3705)""GET /"200 0 "IC"10.102.1.45"
```

Along with a client request, the response logged is the one sent to the client and not necessarily the one sent by the server.

#### Note

When using the web logging, the responses from the integrated cache contains the value IC in the server log field. The server log field is present in the NSWL client with “%o1” format specifier.

## Miscellaneous

- **What do you mean by configuring relexpiry and absexpiry?**

By configuring `relexpiry` and `absexpiry`, it means that you are overriding the header irrespective of what appears in the header. You can configure a different expiry setting and the content group level. With `relexpiry`, the expiration of the header is based on the time at which the object is received by the NetScaler. With `absexpiry`, expiration is based on the time configured on the NetScaler. `Relexpiry` is configured in terms of seconds. `Absexpiry` is a time of day.

- **What do you mean by configuring weakpos and heuristic?**

The `weakpos` and `heuristic` are like fallback values. If there is an expiry header, it is considered only if the last-modified header is present. The NetScaler appliance sets expiry based on the last-modified header and the heuristic parameter. The heuristic expiry calculation determines the time to expiry by checking the last-modified header. Some percentage of the duration since the object was last modified is used as time to expiry. The heuristic of an object that remains

unmodified for longer periods of time and is likely to have longer expiry periods. The `–heurExpiryParam` specifies what percentage value to use in this calculation. Otherwise, the appliance uses the `weakpos` value.

- **What should I consider before configuring dynamic caching?**

If there is some parameter that is in name-value form and does not have the full URL query, or the appliance receives the parameter in a cookie header or POST body, consider configuring dynamic caching. To configure dynamic caching, you have to configure the `hitParams` parameter.

- **How is hexadecimal encoding supported in the parameter names?**

On the NetScaler appliance, the %HEXHEX encoding is supported in the parameter names. In the names that you specify for `hitParams` or `invalParams`, you can specify a name that contains %HEXHEX encoding in the names. For example, `name`, `name%65`, and `n %61m%65` are equivalent.

- **What is the process for selecting a hitParam parameter?**

Consider the following excerpt of an HTTP header for a POST request:

```

1 POST /data2html.asp?param1=value1¶m2=¶m3¶m4=value4
2 HTTP/1.1
3 Accept: image/gif, image/x-xbitmap, image/jpeg, image/pjpeg,
4 application/vnd.ms-powerpoint, application/vnd.ms-excel,
5 application/msword, application/x-shockwave-flash, */*
6 Referer: http://10.102.3.97/forms.html
7 Accept-Language: en-us
8 Content-Type: application/x-www-form-urlencoded
9 Accept-Encoding: gzip, deflate
10 User-Agent: Mozilla/4.0 (compatible; MSIE 6.0; Windows NT 5.1)
11 Host: 10.102.3.97
12 Content-Length: 153
13 Connection: Keep-Alive
14 Cache-Control: no-cache
15 Cookie: ASPSESSIONIDQGGRNY=NNLLKDADEENOAFLLCCDGFDMO
16 S1=This+text+is+only+text%2C+not+more+and+not+less%2C+%0D%0Ajust+
 text+to+be+itself%2C+namely+%22Text%22+to+be+posted+as+text
 +%28what+else...%29&B1=Submit

```

In the preceding request, you can use `S1` and `B1`, highlighted in bold face for your reference, as `hitParams` depending on your requirements. Also, if you use `-matchCookies YES` in the `ASPSESSIONIDQGGRNY` content group, then you can also use these parameters as `hitParams`.

- **What happens to the queued clients if the response is not cacheable?**

If the response is not cacheable, all the clients in the queue receive the same response that the first client receives.

- **Can I enable the Poll every time (PET) and Flash Cache features on the same content group?**

No. You cannot enable PET and Flash Cache on the same content group. The integrated cache does not perform the AutoPET function on Flash Cache content groups. The PET feature ensures that the integrated cache does not serve a stored object without consulting the server. You can configure PET explicitly for a content group.

- **When are the log entries created for the queued clients?**

The log entries are created for the queued clients soon after the appliance receives the response header. The log entries are created only if the response header does not make the object non-cacheable.

- **What is the meaning of the DNS, HOSTNAME, and HOSTNAME\_AND\_IP values of the Verify cached object using parameter of the cache configuration?**

The meanings are as follows:

- `set cache parameter -verifyUsing HOSTNAME`

The command ignores the destination IP address.

- `set cache parameter -verifyUsing HOSTNAME_AND_IP`

The command matches the destination IP address.

- `set cache parameter -verifyUsing DNS`

The command uses the DNS server.

- **I have set weakNegRelExpiry to 600, which is 10 minutes. I noticed that 404 responses are not getting cached. What is the reason?**

This completely depends on your configuration. By default, 404 responses are cached for 10 minutes. If you want all 404 responses to be fetched from the server, specify `-weakNegRelExpiry 0`. You can fine-tune the `-weakNegRelExpiry` to a desired value, such as higher or lower to get the 404 responses cached appropriately. If you have configured `-absExpiry` for positive responses, then it might not yield the desired results.

- **When the user accesses the site by using the Mozilla Firefox browser, the updated content is served. However, when the user accesses the site by using the Microsoft Internet Explorer browser, stale content is served. What could be the reason?**

The Microsoft Internet Explorer browser might be taking the content from its local cache instead of the NetScaler integrated cache. The reason can be that the Microsoft Internet Explorer browser is not respecting the expiry related header in the response.

To resolve this issue, you can disable the local cache of the Internet Explorer and clear the offline content. After clearing the offline content, the browser must display the updated content.

- **What if Hits are zero?**

Check to see if the server time and NS time are in sync. And the weakPosrelexpiry limit set must bear the time difference between NS and server as following:

```
1 root@ns180\# date
2 Tue May 15 18:53:52 IST 2012
```

- **Why are policies getting hits but nothing is being cached?**

Verify that memory is allocated to the integrated cache and that the allocation is greater than zero.

- **Is it possible to zero the cache counters?**

There is no command line or GUI option for setting the cache counters to zero, and flushing the cache does not do so either. Rebooting the box automatically sets these counters to zero.

## Install, upgrade, and downgrade

July 17, 2024

### Install and upgrade

#### How to download a specific NetScaler release build package?

For information on downloading a specific NetScaler release build package, see [Download a NetScaler release package](#).

#### How to upgrade the system software of a NetScaler appliance?

For information on upgrading the system software of a NetScaler appliance, see [Upgrade a NetScaler standalone appliance](#).

#### Where do I find the release notes for a NetScaler release build?

The release notes document for a NetScaler release build lists the following for the release build:

- Enhancements
- Fixed issues
- Known issues

The release notes document for a NetScaler release build is found at the following locations:

- [NetScaler firmware or virtual appliance downloads page](#) of a specific release build.
- [ADC release notes page](#) in NetScaler docs site

### **Where do I find security updates for NetScaler appliances?**

NetScaler security team regularly releases security bulletins on Common Vulnerabilities and Exposures (CVE) for all related NetScaler products. This information can be found at [security bulletin](#). Alternatively, you can search for a specific CVE at [NetScaler support site](#).

### **What is the use of the zebos.conf file available in a NetScaler release?**

A NetScaler appliance uses ZebOS as the routing suite. The zebos.conf file available in a NetScaler release is the configuration file for ZebOS.

### **I want to change the SSH port (22) on the NetScaler appliance to some other port. Is it possible to change the SSH port on the appliance?**

Yes. You can change the SSH port on the NetScaler appliance by editing the sshd\_config file in the “/nsconfig” directory. If the file does not exist in the /nsconfig directory, copy it from the “/etc” directory.

In the sshd\_config file, edit the entry for Port 22 to Port <Number>, where <Number> is the target port number. If you do not want to restart the appliance and make the changes effective, terminate the `sshd` process by using the kill command, and then restart the process.

#### **Note:**

Some features such as config synchronization, file synchronization, and HA synchronization don't work after you customize the default SSH port.

### **The flash directory is missing from the NetScaler appliance. What procedure must I follow to mount the flash directory?**

To mount the flash directory, do the following:

1. Start the NetScaler appliance in single-user mode.

When the appliance starts, the following message appears:

Select [Enter] to boot immediately, or any other key for the command prompt. Booting [kernel] in 10 seconds...”Select space and you must see the following prompt:

Type ‘?’ for a list of commands, ‘help’ for more detailed help.

2. Enter the following command to start FreeBSD in single-user mode:

```
boot -s
```

After the appliance starts, the following message appears:

Enter full pathname of shell or RETURN for /bin/sh:

3. Press Enter to display the # prompt.
4. Run the following command to mount the flash directory:

```
1 mount /dev/ad0s1a /flash
2
3 Note: If the preceding command displays an error message about
 permissions, run the following command to check the disk for
 consistency:
4
5 fsck /dev/ad0s1a
6
7 Run the mount command again to mount the flash directory.
```

5. Restart the appliance.
6. From the shell prompt, run the following command to verify that the flash directory is mounted:

```
1 df -kh
```

### **I want to log on to the NetScaler appliance without entering the password. Is it possible to configure SSH on the appliance to allow that?**

Yes. You can configure SSH on the NetScaler appliance to log on without a password. However, you must provide your user name. To configure SSH for logging in without a password, do the following:

1. Run the following command to generate the public and private keys:

```
1 \# ssh-keygen -t rsa
```

2. Run the following command to copy the id\_rsa.pub file to the .ssh directory of the remote host that you want to log on to:

```
1 \# scp id_dsa.pub \<user>@\<remote_host>/.ssh/id_dsa.pub
```

3. Log on to the remote host.
4. Change to the .ssh directory.
5. Run the following commands to add the public key of the client to the known public keys:

```
1 \# cat id_dsa.pub >> authorized_keys2
2
```

```
3 \# chmod 640 authorized_keys2
4
5 \# rm id_dsa.pub
```

### **What is the procedure to reset the NetScaler appliance BIOS? Under what circumstances must I reset the BIOS?**

To reset the BIOS of the NetScaler appliance, complete the following procedure:

1. Connect to the appliance through the serial port.
2. Start the appliance and press Delete when the boot-up process starts.  
Pressing Delete during the POST process displays the appliance's BIOS settings.
3. Activate the Exit page of the BIOS settings.
4. Select the Load Optimal Defaults option. The Load Optimal Settings message box appears.
5. Select OK.
6. Make the following changes to the BIOS settings on the various tabs:  
Tab
7. Activate the Exit page of the BIOS settings.
8. Select Save changes and Exit.
9. Select OK to confirm.
10. Verify that the appliance starts cleanly and the serial console displays output after the appliance starts.

You must reset BIOS when the serial console does not respond. This usually happens after you upgrade the appliance and the serial console is disabled. However, you can still access the appliance by using the telnet or SSH utility.

### **I need to reset the NetScaler appliance to the factory defaults. What procedure must I follow?**

To reset the NetScaler appliance to the factory defaults, you need to reset two environments: the NetScaler application environment and the base FreeBSD environment.

To reset the NetScaler application environment of the appliance to the factory defaults, do the following:

1. Make a backup of the appliance's `/nsconfig/ns.conf`.
2. Delete the `/nsconfig/ns.conf` file.

3. Restart the appliance. To reset the FreeBSD environment of the appliance to the factory defaults, do the following:
  - a) Install a fresh NetScaler code image on the appliance. This overwrites several FreeBSD-level configuration files with default values.
  - b) Delete any users and groups that are added to the appliance, that is, all except the default users.
  - c) Delete the `/etc/resolv.conf` file.
  - d) Delete the entries that you have added to the `/etc/hosts` file.
  - e) If the `/etc/rc.netscaler` file exists, delete it.
  - f) Open the `/etc/nsperm_group_suser` file and make sure that all IOCTL entries are comment entries.
  - g) Open the `/etc/rc.conf` file and make sure that the `syslogd_enable=NO` entry is not changed to `syslogd_enable=YES`.
  - h) Open the `/etc/syslog.conf` file and make sure that there are no additional entries in the file.
  - i) Delete the contents of the `/var/nslog`, `/var/nstrace`, and `/var/crash` files.
  - j) If the syslog process is enabled on the appliance and the appliance creates log files locally, delete the contents of the log files listed in the `/etc/syslog.conf` file. The files are created in the `/var/log` directory. For example, if the syslog process writes system events to the `/var/log/events` file, and `sslvpn` access events to the `/var/log/sslvpnevents` file, delete these files.

**The appliance displays a message similar to the “Jun 21 12:20:18 ns /flash/ns-10.0-47.15: [1/2]dc0: NIC hangs condition #663: TX 10000/10000, RX 0, HF 0”message on the console. What is the meaning of this message?**

The message consists of the following components (shown here as examples):

- #663: Number of times this condition has occurred on the appliance.
- TX 10000/10000: Number of packets that the appliance attempted to transmit, and number of packets transmitted. If both numbers are the same, as in this example, the NIC transmitted all the packets that the appliance attempted to transmit.
- RX 0: Number of packets received. In this example, no packet was received.
- HF0: Number of hardware issues reported by the NIC. In this example, the NIC did not report any hardware issue.

If the appliance does not receive any packets, it reports a hang condition, because on a network it is unlikely not to receive any packets. However, if the appliance is plugged into quite the interface, you can ignore this error message.



**After I upgraded the NetScaler release on the appliance, the appliance still displays the earlier release/build. What can be the reason?**

The appliance displays the software version number from the `/flash/boot/loader.conf` file. If the kernel entry for the current NetScaler release is missing from that file, the appliance displays the last NetScaler release version for which the entry was available.

To resolve this issue, do the following:

1. Verify that the kernel file exists in the `/nsconfig` directory.
2. Check the `/flash/boot/loader.conf` file for an entry for the kernel.  
(You can expect the entry for the kernel of the release/build that you installed to be missing from the file.)
3. Open the `loader.conf` file in a text editor, such as the `vi` editor, and update the kernel entry for the new release/build.
4. Save and close the file.
5. Repeat step 2 through step 4 for the `/flash/boot/loader.conf.local` file.
6. Update the release/build entry in the `ns.conf` file.
7. Restart the appliance.

**Since I upgraded the NetScaler release on the appliance, the LCD display on the front panel of the appliance displays the out of service message or does not display anything. How can I resolve this issue?**

Run the following command from the appliance's shell prompt:

```
1 /netscaler/nslcd -k
```

**I have upgraded the NetScaler release/build. However, after the upgrade process, the appliance fails to start. Can I downgrade the appliance's software to the previous release/build?**

Yes. You can start the appliance with the `kernel.old` kernel file. When you restart the appliance, press the F1 key when the appliance console displays the Press F1 message. Type `kernel.old` and press **Enter**.

**After upgrading the NetScaler release on the appliance, I accidentally deleted the kernel file from the /flash directory. As a result, I am not able to start the appliance. Is there a method for starting the appliance in this situation?**

Yes. You can start the appliance by using the `kernel.GENERIC` kernel file, as follows:

1. When you restart the appliance, press the F1 key when the appliance console displays the Press F1 message.
2. Type `kernel.GENERIC` and press Enter.
3. Log in as the root user.
4. Reinstall the NetScaler release.
5. Restart the appliance.

**After upgrading the appliance software, I am not able to log on to the appliance, and the following message appears. I tried to resolve this issue by using the password recovery procedure, but I was not successful. Have I done something incorrectly?**

```
1 ```
2 login: nsroot
3 Password:
4 connect: No such file or directory
5 nsnet_connect: No such file or directory
6 Login incorrect
7 ```
```

You cannot resolve this issue by using the password recovery procedure. NetScaler release 12.1 or later use the new licensing system, based on the `Imgird` daemon, which runs during the startup procedure. For this daemon to work properly, the host name of NetScaler appliance, which is set in the `/nsconfig/rc.conf` file, must be resolved by a name server to the NSIP address. Alternately, you can create a hosts file in the `/nsconfig` directory and add the `127.0.0.1 <Host_Name>` entry in file.

Also, make sure that you have copied the license files to the `/nsconfig/license/` directory.

**During an upgrade of a high availability pair, the following message appears repeatedly. What can be the reason?**

```
<auth.err> ns sshd[5035]: error: Invalid user name or password
```

This error message appears when the appliances involved in the high availability pairing have either a different NetScaler release or a different build of the same release installed. The appliances can have different version installed if you have upgraded or downgraded one appliance but not the other.

**I want to change the netmask of the NSIP address on a NetScaler appliance. Can I do so without causing an outage?**

Changing the netmask of the NetScaler IP might result in a short outage. Make sure that you change the netmask on the secondary appliance, and then break the high availability pairing. Check the functionality of the appliance. If everything works as expected, rebuild the high availability pairing.

To change the netmask on the appliance, run the `config ns` command from the CLI prompt, and then choose the second option in the menu.

**I have configured a High Availability pair of NetScaler appliances. After upgrading the software release from a preview release to a final release, I noticed that some of the appliance configurations are missing. Can I retrieve the lost configurations?**

You can use the following procedure to restore the configuration:

1. Log on to the NetScaler command line of the primary appliance.
2. Run the following commands:

```
1 save config
2
3 shell
4
5 \#cp /nsconfig/ns.conf /nsconfig/ns.conf.bkup
6
7 The ns.conf.bkup file is a backup for the running configuration.
```

3. Upgrade software of both the appliances to the final release.
4. Log on to the NetScaler command line of the primary appliance.

**Can the primary appliance and secondary appliance have separate builds?**

Recommended practice is to use the same version and build number on both the primary and the secondary appliance.

**Can both the appliances in a High Availability (HA) pair be upgraded at the same time?**

No. In an HA pair, first upgrade the secondary node and then upgrade the primary node.

For details, refer [Upgrading a High Availability Pair](#).

**Does NetScaler support firmware upgrades in the Amazon Web Services cloud?**

Yes.

**Can I upgrade the NetScaler instance independently of the SDX version?**

It is not required to upgrade the SDX version when the NetScaler appliance is upgraded. However, some features might not work.

**Can I use the FTP server to upgrade the NetScaler appliance?**

No. You must first download the firmware from the NetScaler site, save it on your local computer, and then upgrade the appliance.

**Is the procedure for upgrading the NetScaler appliance with GSLB configurations different from an upgrade of an appliance that is not involved in GSLB?**

No. The upgrade procedure is similar to the basic upgrade procedure. The only difference is that you can upgrade the standalone or HA appliances on different sites in a phased manner.

**Upgrade fails with a warning “Many deprecated features, parameters, and functionalities, and use of classic expressions have been removed”. How do I fix this issue?**

Starting from NetScaler 13.1 release, classic expressions aren't supported in some features. Similarly, some deprecated features are also removed. For more information on deprecated features and commands, see [Notice of Status Change Announcement for NetScaler Classic Policy Based Features and Functionalities](#).

If the configuration contains any command related to the removed features, then the upgrade fails. The removed commands throw errors in releases 13.1 or later and therefore configuration can be lost. Use the `nspepi` tool to convert the invalid or classic configuration to valid or advanced configuration. For information on the `nspepi` tool, see [Converting policy expressions using the NSPEPI tool](#).

**Note:**

If you see an invalid configuration error, we recommend you to use the `-M` option to convert classic policies to advanced policies.

```

***** WARNING *****
In the 13.1 release many deprecated features, parameters, functionalities, and use of Classic expressions have been removed; please convert the configuration which will throw error in 13.1 or later releases to non-deprecated prior to upgrade; the nspepi tool can be used to help with this.

Checking invalid config in ns.conf file
installns: [82335]:
Checking invalid config in ns.conf file
Installing files to check for invalid config...
installns: [82335]:
Installing files to check for invalid config...

The following configuration lines will get errors in 13.1 and both they and dependent configuration will be removed from the configuration:
enable ns feature LB CS CR CMP SSL CF IC SSLVPN AAA REWRITE AppFw RESPONDER AppFlow AppOe FEO VideoOptimization CI
add filter action f_act_1 errorcode 405
add filter policy fpol_1 -rule ns_true -resAction f_act_1
add filter policy fpol_2 -rule ns_true -resAction f_act_1
add cs policy cs_pol_1 -rule ns_true
add cs policy cs_pol_2 -url "/abcd"
add cs policy cs_pol_3 -url "/abcd*"
add appfw policy appfw_pol_ns_true APPFW_BYPASS
add ssl policy ssl_pol -rule ns_true -action CLIENTAUTH

The nspepi upgrade tool can be useful in converting your configuration - see the documentation at https://docs.citrix.com/en-us/citrix-adc/current-release/appexpert/policies-and-expressions/introduction-to-policies-and-exp/convert-policy-expressions-nspepi-tool.html. Use nspepi tool available at https://github.com/citrix/ADC-scripts/tree/master/nspepi for the most complete and up-to-date version.
NOTE: the nspepi tool doesn't convert the following configurations:
1. SureConnect commands
2. PriorityQueuing commands
3. HTTP Denial of Service Protection commands
4. HTMLInjection commands.

Installation cancelled; if you wish to run the NSEPEPI tool during installation, then use the -M option; or if you wish to force the installation use the -Y option but invalid configuration will be lost.
installns: [82335]:
Installation cancelled; if you wish to run the NSEPEPI tool during installation, then use the -M option; or if you wish to force the installation use the -Y option but invalid configuration will be lost.
root@ns#

```

We do **NOT** recommend you to use the **Y** option while running the `installns` script. If you use the **Y** option, then configuration check does not happen and the invalid configuration can be lost.

## Downgrade

**I have received a NetScaler appliance with the latest NetScaler release installed on it. However, I want to downgrade the software release. Can I do so?**

No. If you attempt to downgrade the software release, the appliance might not work as expected, because the `ns.conf` file of the later release might not be compatible with the earlier release, and the appliance might restore to the factory settings.

**When downgrading the NetScaler release, I followed the instructions. However, the appliance displays the following message. How is the rollback procedure performed on a NetScaler appliance?**

```

1 root@LBCOL03B# ./installns
2 installns version (10.0-47.7) kernel (ns-10.0-47.7.gz)
3 Note:
4 Installation may pause for up to 3 minutes while data is written to the
 flash.
5 Caution:
6 Do not interrupt the installation process.
7 Doing so may cause the system to become unusable.
8 Installation will proceed in 5 seconds, CTRL-C to abort
9 No Valid NetScaler Version Detected
10 root@LBCOL03B#

```

The rollback procedure is similar to the basic upgrade procedure. Select the target build that you want to roll back to and perform the downgrade. Before rolling back to a different release, it is recom-

mended that you create a copy of your current configuration files. To downgrade from a release, see [Downgrading a NetScaler Standalone Appliance](#).

## Load Balancing

May 2, 2023

- **What are the various load balancing policies I can create on the NetScaler appliance?**

You can create the following types of load balancing policies on the NetScaler appliance:

- Least Connections
- Round Robin
- Least response time
- Least bandwidth
- Least packets
- URL hashing
- Domain name hashing
- Source IP address hashing
- Destination IP address hashing
- Source IP - Destination IP hashing
- Token
- LRTM

- **Can I achieve the Web farm security by implementing load balancing using the NetScaler appliance?**

Yes. You can achieve Web farm security by implementing load balancing using the NetScaler appliance. NetScaler appliance enables you to implement the following options of the load balancing feature:

- IP Address hiding: Enables you to install the actual servers to be on private IP address space for security reasons and for IP address conservation. This process is transparent to the end-user because the NetScaler appliance accepts requests on behalf of the server. While in the address hiding mode, the appliance completely isolates the two networks. Therefore, a client can access a service running on the private subnet, such as FTP or a Telnet server, through a different VIP on the appliance for that service.
- Port Mapping: Enables the actual TCP services to be hosted on non-standard ports for security reasons. This process is transparent to the end-user as the NetScaler appliance accepts requests on behalf of the server on the standard advertised IP address and port number.

- **What are various devices that I can use to load balance with a NetScaler appliance?**

You can load balance the following devices with a NetScaler appliance:

- Server farms
- Caches or Reverse Proxies
- Firewall devices
- Intrusion detection systems
- SSL offload devices
- Compression devices
- Content Inspection servers

- **Why should I implement the load balancing feature for the website?**

You can implement the Load balancing feature for the website to take the following advantages:

- Reduce the response time: When you implement the load balancing feature for the website, one of the major benefits is the boost you can look forward to in load time. With two or more servers sharing the load of the web traffic, each of the servers runs less traffic load than a single server alone. This means there are more resources available to fulfill the client requests. This results in a faster website.
- Redundancy: Implementing the load balancing feature introduces a bit of redundancy. For example, if the website is balanced across three servers and one of them does not respond at all, the other two can keep running and the website visitors do not even notice any downtime. Any load balancing solution immediately stops sending traffic to the back-end server that is not available.

- **Why do I need to disable the Mac Based Forwarding (MBF) option for Link Load Balancing (LLB)?**

- If you enable the MBF option, the NetScaler appliance considers that the incoming traffic from the client and the outgoing traffic to the same client flow through the same upstream router. However, the LLB feature requires that the best path be chosen for the return traffic.
- Enabling the MBF option breaks this topology design by sending the outgoing traffic through the router that forwarded the incoming client traffic.

- **What are the various persistence types available on the NetScaler appliance?**

The NetScaler appliance supports the following persistence types:

- Source IP
- Cookie insert
- SSL session ID
- URL passive
- Custom Server ID

- Rule
- DESTIP

## GUI

June 28, 2024

- **When I use Firefox to compare two NetScaler configurations, the browser seems to freeze?**

Firefox eventually displays the difference in the configurations, but the process takes a considerable amount of time if there are more than 1000 differences. Use Chrome for a faster response.

- **I am using a MAC Safari browser to upgrade a NetScaler. On the upgrade wizard, when I click the Browse button to choose the build file from the appliance, the dialog box does not show any files or folders. Also, when I navigate back to the root folder, the dialog box displays the top level folder, but I cannot browse it. What should I do?**

On the Safari browser, click the Settings icon and navigate to **Preferences > Security > Manage Website Settings > Java**. Change the value of the **When visiting other websites** setting to Run in unsafe mode.

- **What should I do before accessing the GUI?**

Before accessing a new version of the NetScaler software:

- Clear browser cache including cookies.
- Access GUI in browser incognito mode.
- Access GUI in some other browser.
- Clear the **Use software acceleration** option in setting and restart the browser.
- Access **chrome: extensions**, clear the **Enable** box and restart the Chrome browser.

- **Which port should I open to access GUI using HTTP or HTTPS?**

The following lists the default port numbers for HTTP and HTTPS management services (GUI) in the NetScaler MPX and VPX appliances:

- NetScaler MPX and VPX appliances: 80 (HTTP) and 443 (HTTPS)

Also, you can configure ports for HTTP and HTTPS management services (GUI) other than port 80 and 443. For more information, see [Configure HTTP and HTTPS management ports](#).

- **With which browsers is the GUI compatible for different operating systems?**

The following table lists the compatible browsers for NetScaler GUI version 12.1, 13.0, and 13.1:



---

| <b>Operating System</b> | <b>Browser</b>  | <b>Versions</b>       |
|-------------------------|-----------------|-----------------------|
| Windows 10 and later    | Edge            | 110.1587.63 and later |
| Windows 10 and later    | Mozilla Firefox | 102 and later         |
| Windows 10 and later    | Chrome          | 108 and later         |
| MAC                     | Mozilla Firefox | 110.0.1 and later     |
| MAC                     | Safari          | 15.5 and later        |

---

## SSL

September 21, 2020

Click [here](#) for FAQs about SSL.

## Authentication, authorization, and auditing application traffic

May 2, 2023

Many companies restrict website access to valid users only, and control the level of access permitted to each user. The authentication, authorization, and auditing feature allows a site administrator to manage access controls with the NetScaler appliance instead of managing these controls separately for each application. Doing authentication on the appliance also permits sharing this information across all websites within the same domain that are protected by the appliance.

To use authentication, authorization, and auditing, you must configure authentication virtual servers to handle the authentication process and traffic management virtual servers to handle the traffic to web applications that require authentication. You also configure your DNS to assign FQDNs to each virtual server. After configuring the virtual servers, you configure a user account for each user that will authenticate via the NetScaler appliance, and optionally you create groups and assign user accounts to groups. After creating user accounts and groups, you configure policies that tell the appliance how to authenticate users, which resources to allow users to access, and how to log user sessions. To put the policies into effect, you bind each policy globally, to a specific virtual server, or to the appropriate user accounts or groups. After configuring your policies, you customize user sessions by configuring session settings and binding your session policies to the traffic management virtual server. Finally, if your intranet uses client certs, you set up the client certificate configuration.

To understand how authentication, authorization, and auditing works in a distributed environment, consider an organization with an intranet that its employees access in the office, at home, and when traveling. The content on the intranet is confidential and requires secure access. Any user who wants to access the intranet must have a valid user name and password. To meet these requirements, the ADC does the following:

- Redirects the user to the login page if the user accesses the intranet without having logged in.
- Collects the user's credentials, delivers them to the authentication server, and caches them in a directory that is accessible through the Lightweight Directory Access Protocol (LDAP). For more information, see [Determining Attributes in Your LDAP Directory](#).
- Verifies that the user is authorized to access specific intranet content before delivering the user's request to the application server.
- Maintains a session timeout after which users must authenticate again to regain access to the intranet. (You can configure the timeout.)
- Logs the user accesses, including invalid login attempts, in an audit log.

### **Supported authentication types**

- Local
- LDAP
- RADIUS
- SAML
- TACACS+
- Client certificate authentication (including smart card authentication)
- Web
- Advanced authentication
- Forms based authentication
- 401 based authentication
- Native OTP
- Push notification
- Email OTP
- reCaptcha

NetScaler Gateway also supports RSA SecurID, Gemalto Protiva, and SafeWord. You use a RADIUS server to configure these types of authentication.

Before configuring authentication, authorization, and auditing, you must be familiar with and understand how to configure load balancing, content switching, and SSL on the NetScaler appliance.

## Authentication without authorization

Authorization specifies the network resources to which users have access when they log on to the appliance. The default setting for authorization is to deny access to all network resources. Citrix recommends using the default global setting and then creating authorization policies to define the network resources users can access.

You configure authorization on the appliance by using an authorization policy and expressions. After you create an authorization policy, you can bind it to the users or groups that you configured on the appliance.

You can configure the appliance to use authentication only, without authorization. When you configure authentication without authorization, the appliance does not perform a group authorization check. The policies that you configure for the user or group are assigned to the user.

## Enabling authentication, authorization, and auditing

To use the authentication, authorization, and auditing feature, you must enable it. You can configure authentication, authorization, and auditing entities—such as the authentication and traffic management virtual servers—before you enable the authentication, authorization, and auditing feature, but the entities do not function until the feature is enabled.

### To enable authentication, authorization, and auditing by using the CLI

At the command prompt, type the following commands to enable authentication, authorization, and auditing and verify the configuration:

```
1 enable ns feature AAA
```

### To enable authentication, authorization, and auditing by using the GUI

1. Navigate to **System > Settings**.
2. In the details pane, under **Modes and Features**, click **Change Basic Features**.
3. In the **Configure Basic Features** dialog box, select the **Authentication, Authorization and Auditing** check box.
4. Click **OK**.

## Disabling Authentication

If your deployment does not require authentication, you can disable it. You can disable authentication for each virtual server that does not require authentication.

**Important:**

**Important:** Citrix recommends disabling authentication with caution. If you are not using an external authentication server, create local users and groups to allow the appliance to authenticate users. Disabling authentication stops the use of authentication, authorization, and accounting features that control and monitor connections to the appliance. When users type a web address to connect to the appliance, the logon page does not appear.

### To disable authentication

1. Navigate to **Configuration > NetScaler Gateway > Virtual Servers**.
2. In the details pane, click a virtual server, and then click **Open**.
3. In the **Basic Settings** page, clear the **Enable Authentication** check box.

## How authentication, authorization, and auditing works

May 2, 2023

Authentication, authorization, and auditing provides security for a distributed internet environment by allowing any client with the proper credentials to connect securely to protected application servers from anywhere on the Internet. This feature incorporates the three security features of authentication, authorization, and auditing. Authentication enables the NetScaler to verify the client's credentials, either locally or with a third-party authentication server, and allow only approved users to access protected servers. Authorization enables the ADC to verify which content on a protected server it allows each user to access. Auditing enables the ADC to keep a record of each user's activity on a protected server.

To understand how authentication, authorization, and auditing works in a distributed environment, consider an organization with an intranet that its employees access in the office, at home, and when traveling. The content on the intranet is confidential and requires secure access. Any user who wants to access the intranet must have a valid user name and password. To meet these requirements, the ADC does the following:

- Redirects the user to the login page if the user accesses the intranet without having logged in.
- Collects the user's credentials, delivers them to the authentication server, and caches them in a directory that is accessible through LDAP. For more information, see [Determining Attributes in Your LDAP Directory](#).
- Verifies that the user is authorized to access specific intranet content before delivering the user's request to the application server.

- Maintains a session timeout after which users must authenticate again to regain access to the intranet. (You can configure the timeout.)
- Logs the user accesses, including invalid login attempts, in an audit log.

## **Configure authentication authorization and auditing policies**

After you set up your users and groups, you next configure authentication policies, authorization policies, and audit policies to define which users are allowed to access your intranet, which resources each user or group is allowed to access, and what level of detail authentication, authorization, and auditing will preserve in the audit logs. An authentication policy defines the type of authentication to apply when a user attempts to log on. If external authentication is used, the policy also specifies the external authentication server. Authorization policies specify the network resources that users and groups can access after they log on. Auditing policies define the audit log type and location.

You must bind each policy to put it into effect. You bind authentication policies to authentication virtual servers, authorization policies to one or more user accounts or groups, and auditing policies both globally and to one or more user accounts or groups.

When you bind a policy, you assign a priority to it. The priority determines the order in which the policies you define are evaluated. You can set the priority to any positive integer. In the NetScaler operating system, policy priorities work in reverse order: the higher the number, the lower the priority. For example, if you have three policies with priorities of 10, 100, and 1000, the policy assigned a priority of 10 is performed first, then the policy assigned a priority of 100, and finally the policy assigned an order of 1000. The authentication, authorization, and auditing feature implements only the first of each type of policy that a request matches, not any additional policies of that type that a request might also match, so policy priority is important for getting the results you intend.

You can leave yourself plenty of room to add other policies in any order, and still set them to evaluate in the order you want, by setting priorities with intervals of 50 or 100 between each policy when you bind the policies. You can then add additional policies at any time without having to reassign the priority of an existing policy.

For additional information about binding policies on the NetScaler appliance, see the [NetScaler product documentation](#).

## **Configure the No\_Auth policy to bypass certain traffic**

You can now configure No\_Auth policy to bypass certain traffic from authentication when 401-based authentication is enabled on traffic management virtual server. For such traffic, you must bind a “No\_Auth” policy.

## To configure the No\_Auth policy to bypass certain traffic by using the CLI

At the command prompt, type:

```
1 add authentication policy <name> -rule <expression> -action <string>
```

### Example:

```
1 add authentication policy ldap -rule ldapAct1 -action No_Auth
```

## Basic components of authentication, authorization, and auditing configuration

May 2, 2023

The basic components of the authentication, authorization, and auditing configuration are as follows:

- **Authentication virtual server** - All authentication requests are redirected by the traffic management virtual server (load balancing or content switching) to the authentication virtual sever. This virtual server processes the associated authentication policies and accordingly provides access to the application. For details, see [Authentication virtual server](#).
- **Authentication profiles** - An authentication profile specifies the authentication virtual server, the authentication host, the authentication domain, and an authentication level.

You can create one or more authentication profiles to specify different authentication settings and bind these authentication profiles to relevant traffic management servers based on your requirements. For details, see [Authentication profiles](#).

- **Authentication policies** - When users log on to the NetScaler or NetScaler Gateway appliance, they are authenticated according to a policy that you create. An authentication policy comprises of an expression and an action. Authentication policies use NetScaler expressions. For details, see [Authentication policies](#).
- **Authorization policies** - When you configure an authorization policy, you can set it to allow or deny access to network resources in the internal network. For details, see [Authorization policies](#).
- **Users and groups:** - After configuring the authentication, authorization, and auditing basic setup, you create users and groups. You first create a user account for each person who will authenticate via the NetScaler appliance. If you are using local authentication controlled by the

NetScaler appliance itself, you create local user accounts and assign passwords to each of those accounts. For details, see [Users and groups](#).

## Authentication virtual server

September 25, 2024

The traffic management virtual server (load balancing or content switching) redirects all authentication requests to the authentication virtual server. This virtual server processes the associated authentication policies and accordingly provides access to the application.

**Note:** You cannot bind traffic management policies to authentication, authorization, and auditing virtual servers.

### Set up authentication virtual server

The steps involved in setting up an authentication virtual server are;

1. Enable the authentication, authorization, and auditing feature.

```
1 enable ns feature AAA
```

2. Configure an authentication virtual server. It must be of type SSL and make sure to bind the SSL certificate-key pair to the virtual server.

```
1 add authentication vserver <name> SSL <ipaddress> <port>
2
3 bind ssl certkey <auth-vserver-name> <certkey>
```

3. Specify the FQDN of the domain for the authentication virtual server.

```
1 set authentication vserver <name> -authenticationDomain <FQDN>
```

4. Associate the authentication virtual server to the relevant traffic management virtual server.

#### Points to Note:

- The FQDN of the traffic management virtual server must be in the same domain as the FQDN of the authentication virtual server for the domain session cookie to function correctly. On the traffic management virtual server:
  - Enable authentication.
  - Specify the FQDN of the authentication virtual server as the authentication host of the traffic management virtual server.

- [Optional] Specify the authentication domain on the traffic management virtual server.
- If you do not configure the authentication domain, the appliance assigns an FQDN that consists of the FQDN of the authentication virtual server without the host name portion. For example, if the domain name of the authentication virtual server is **tm.xyz.bar.com**, the appliance assigns **xyz.bar.com** as the authentication domain.

\* For load balancing:

```
1 set lb vserver <name> -authentication ON -
 authenticationhost <FQDN> [-authenticationdomain <
 authdomain>]
```

\* For content switching:

```
1 set cs vserver <name> <protocol> <IPAddress> <port>
```

- If you have to set a domain wide cookie for an authentication domain, you must enable authentication profile on a load balancing virtual server.

5. Verify that both the virtual servers are UP and configured correctly.

```
1 show authentication vserver <name>
```

#### Note:

To use the authentication virtual server in a non-default partition, run the following command in the shell:

```
1 nsapimgr_wr.sh -ys call=toggle_vpn_httpd_partition_support
```

When you enable the authentication virtual server in a non-default partition, NetScaler Gateway generates an info log in `/var/log/ns.log`. The following is an example of a sample info log file:

```
1 Jun 21 12:25:56 <local0.info> x.x.x.x 06/21/2023:11:25:56 GMT 0-
 PPE-0 : default SSLVPN Message 837 0 : "vpn httpd partition
 support value is changed from 0 to 1"
2
3 Jun 21 12:25:56 <local0.info> x.x.x.x 06/21/2023:11:25:56 GMT 0-
 PPE-1 : default SSLVPN Message 1090 0 : "vpn httpd partition
 support value is changed from 0 to 1"
4
5 Jun 21 12:25:56 <local0.info> x.x.x.x 06/21/2023:11:25:56 GMT 0-
 PPE-2 : default SSLVPN Message 676 0 : "vpn httpd partition
 support value is changed from 0 to 1"
```

Run the same command again to disable the authentication virtual server in a non-default partition. This feature is disabled by default.



## To set up an authentication virtual server by using the GUI

1. Enable the authentication, authorization, and auditing feature.

Navigate to **System > Settings**, click **Configure Basic features**, and enable **Authentication, Authorization and Auditing**.

2. Configure the authentication virtual server.

Navigate to **Security > AAA - Application Traffic > Virtual Servers**, and configure as required.

3. Configure the traffic management virtual server for authentication.

- **For load balancing:**

Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and configure the virtual server as required.

- **For content switching:**

Navigate to **Traffic Management > Content Switching > Virtual Servers**, and configure the virtual server as required.

4. • Verify the authentication setup.

Navigate to **Security > AAA - Application Traffic > Virtual Servers**, and check the details of the relevant authentication virtual server.

## Configure the authentication virtual server

To configure authentication, authorization, and auditing, first configure an authentication virtual server to handle authentication traffic. Next, bind an SSL certificate-key pair to the virtual server to enable it to handle SSL connections.

For additional information about configuring SSL and creating a certificate-key pair, see [SSL certificates](#).

## Configure an authentication virtual server by using the CLI

To configure an authentication virtual server and verify the configuration, at the command prompt type the following commands in the same order:

```
1 add authentication vserver <name> ssl <ipaddress>
2
3 show authentication vserver <name>
4
5 bind ssl certkey <certkeyName>
6
```

```
7 show authentication vserver <name>
8
9 set authentication vserver <name>
10
11 show authentication vserver <name>
```

**Example:**

```
1 add authentication vserver Auth-Vserver-2 SSL 10.102.29.77 443 Done
2
3 show authentication vserver Auth-Vserver-2 Auth-Vserver-2
 (10.102.29.77:443) - SSL Type: CONTENT State: DOWN[Certkey not bound
] Client Idle Timeout: 180 sec Down state flush: DISABLED Disable
 Primary Vserver On Down : DISABLED Authentication : ON Current AAA
 Users: 0 Done
4
5 bind ssl certkey Auth-Vserver-2 Auth-Cert-1 Done
6
7 show authentication vserver Auth-Vserver-2 Auth-Vserver-2
 (10.102.29.77:443) - SSL Type: CONTENT State: UP Client Idle Timeout
 : 180 sec Down state flush: DISABLED Disable Primary Vserver On Down
 : DISABLED Authentication : ON Current AAA Users: 0 Done
8
9 set authentication vserver Auth-Vserver-2
10
11 show authentication vserver Auth-Vserver-2 Auth-Vserver-2
 (10.102.29.77:443) - SSL Type: CONTENT State: DOWN[Certkey not bound
] Client Idle Timeout: 180 sec Down state flush: DISABLED Disable
 Primary Vserver On Down : DISABLED Authentication : ON Current AAA
 Users: 0 Done
```

**Note**

The Authentication Domain parameter is deprecated. Use Authentication Profile for setting domain wide cookies.

**Configure an authentication virtual server by using the GUI**

1. Navigate to **Security > AAA - Application Traffic > Virtual Servers**.
2. In the details pane, do one of the following:
  - To create a new authentication virtual server, click **Add**.
  - To modify an existing authentication virtual server, select the virtual server, and then click **Edit**. The Configuration dialog opens with the Basic Settings area expanded.
3. Specify values for the parameters as follows (asterisk indicates a required parameter):
  - Name\*—name (Cannot be changed for a previously created virtual server)
  - IP Address Type\*—IP address type of the authentication virtual server

- IP Address\*—IP address of the authentication virtual server
- Port\*—TCP port on which the virtual server accepts connections.
- Failed login timeout—failedLoginTimeout (Seconds allowed before login fails, and user must start login process again.)
- Max login attempts—maxLoginAttempts (Number of login attempts allowed before user is locked out)

**Note:**

The authentication virtual server uses only the SSL protocol and port 443, so those options are grayed out. Any options that are not mentioned can be ignored.

4. Click **Continue** to display the Certificates area.
5. In the **Certificates** area, configure any SSL certificates you want to use with this virtual server.
  - To configure a CA certificate, click the arrow on the right of CA Certificate to display the CA Cert Key dialog box, select the certificate you want to bind to this virtual server, and click **Save**.
  - To configure a server certificate, click the arrow on the right of Server Certificate, and follow the same process as for the CA certificate.
6. Click **Continue** to display the **Advanced Authentication Policies** area.
7. If you want to bind an advanced authentication policy to the virtual server, click the arrow on the right side of the line to display the **Authentication Policy** dialog box, choose the policy that you want to bind to the server, set the priority, and then click **OK**.
8. Click **Continue** to display the **Basic Authentication Policies** area.
9. If you want to create a basic authentication policy and bind it to the virtual server, click the plus sign to display the **Policies** dialog box, and follow the prompts to configure the policy and bind it to this virtual server.
10. Click **Continue** to display the 401-Based Virtual Servers area.
11. In the 401-Based Virtual Servers area, configure any load balancing or content switching virtual servers that you want to bind to this virtual server.
  - To bind a load balancing virtual server, click the arrow to the right of load balancing virtual server to display the Load Balancing Virtual Servers dialog box, and follow the prompts.
  - To bind a content switching virtual server, click the arrow to the right of content switching virtual server to display the Content Switching Virtual Servers dialog box, and follow the same process as to bind an LB virtual server.
12. If you want to create or configure a group, in the Groups area click the arrow to display the Groups dialog box, and follow the prompts.

13. Review your settings, and when you are finished, click **Done**. The dialog box closes. If you created a new authentication virtual server, it now appears in the **Configuration** window list.

## Traffic management virtual server

After you have created and configured your authentication virtual server, you next create or configure a traffic management virtual server and associate your authentication virtual server with it. You can use either a load balancing or content switching virtual server for a traffic management virtual server. For more information about creating and configuring either type of virtual server, see the *Citrix Traffic Management Guide* at [Traffic Management](#).

### Note:

The FQDN of the traffic management virtual server must be in the same domain as the FQDN of the authentication virtual server for the domain session cookie to function correctly.

You configure a traffic management virtual server for authentication, authorization, and auditing by enabling authentication and then assigning the FQDN of the authentication server to the traffic management virtual server. You can also configure the authentication domain on the traffic management virtual server currently. If you do not configure this option, the NetScaler appliance assigns the traffic management virtual server an FQDN that consists of the FQDN of the authentication virtual server without the host name portion. For example, if the domain name of the authentication virtual server is tm.xyz.bar.com, the appliance assigns xyz.bar.com. as the authentication domain.

## To configure a traffic management virtual server by using the CLI

At the command prompt, type one of the following sets of commands:

```
1 set lb vserver <name> - authentication ON -authenticationhost <FQDN> [-
 authenticationdomain <authdomain>]
2 show lb vserver <name>
3 set cs vserver <name> - authentication ON -authenticationhost <FQDN> [-
 authenticationdomain <authdomain>]
4 show cs vserver <name>
```

### Example:

```
1 set lb vserver vs-cont-sw -Authentication ON -AuthenticationHost mywiki
 .index.com Done
2
3 show lb vserver vs-cont-sw vs-cont-sw (0.0.0.0:0) - TCP Type: ADDRESS
 State: DOWN Last state change was at Wed Aug 19 10:03:15 2009 (+410
 ms) Time since last state change: 5 days, 20:00:40.290 Effective
 State: DOWN Client Idle Timeout: 9000 sec Down state flush: ENABLED
 Disable Primary Vserver On Down : DISABLED No. of Bound Services : 0
```

```
(Total) 0 (Active) Configured Method: LEASTCONNECTION Mode: IP
Persistence: NONE Connection Failover: DISABLED Authentication: ON
Host: mywiki.index.com
```

```
4 Done
```

## To configure a traffic management virtual server by using the GUI

1. In the navigation pane, do one of the following.
  - Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
  - Navigate to **Traffic Management > Content Switching > Virtual Servers**
  - In the details pane, select the virtual server on which you want to enable authentication, and then click **Edit**.
  - In the Domain text box, type the authentication domain.
  - In the **Advanced** menu on the right, select **Authentication**.
  - Choose either **Form Based Authentication** or **401 Based Authentication**, and fill in the Authentication information.
    - For Form Based Authentication, enter the Authentication FQDN (the fully qualified domain name of the authentication server), the Authentication virtual server (the IP address of the authentication virtual server), and the Authentication Profile (the profile to use for authentication).
    - For 401 Based Authentication, enter the Authentication virtual server and the Authentication Profile only.
  - Click **OK**. A message appears in the status bar, stating that the virtual server has been configured successfully.

## Simplified login protocol support for authentication, authorization, and auditing

The login protocol between authentication, authorization, and auditing traffic management virtual servers and authentication, authorization, and auditing virtual servers is simplified to use internal mechanisms as opposed to sending the encrypted data through query parameters. Using this feature, the replay of requests is prevented.

## Configure DNS

For the domain session cookie used in the authentication process to function correctly, you must configure DNS to assign both the authentication and the traffic management virtual servers to FQDNs

in the same domain. For information about how to the configure DNS address records, see [Domain Name System](#).

## Verify authentication virtual server

After you configure authentication and traffic management virtual servers and before you create user accounts, you must verify that both virtual servers are configured correctly and are in the UP state.

### Configure a noAuth authentication by using the CLI

At the command prompt, type the following command:

```
1 show authentication vserver <name>
```

#### Example:

```
1 show authentication vserver Auth-Vserver-2
2 Auth-Vserver-2 (10.102.29.77:443) - SSL Type: CONTENT
3 State: UP
4 Client Idle Timeout: 180 sec
5 Down state flush: DISABLED
6 Disable Primary Vserver On Down : DISABLED
7 Authentication : ON
8 Current AAA Users: 0
9 Authentication Domain: myCompany.employee.com
10 Done
```

### Configure a noAuth authentication by using the GUI

1. Navigate to **Security > NetScaler AAA - Application Traffic > Virtual Servers**.  
Note: From NetScaler Gateway, navigate to **NetScaler Gateway > Virtual Servers**.
2. Review the information in the **AAA Virtual Servers** pane to verify that your configuration is correct and your authentication virtual server is accepting traffic. You can select a specific virtual server to view detailed information in the details pane.

## Authorization policies

May 10, 2024

When you configure an authorization policy, you can set it to allow or deny access to network resources in the internal network. For example, to allow users access to the 10.3.3.0 network, use the following expression:

#### CLIENT.IP.DST.IN\_SUBNET(10.3.0.0/16)

Authorization policies are applied to users and groups. After a user is authenticated, NetScaler Gateway performs a group authorization check by obtaining the user's group information from either an RADIUS, LDAP, or TACACS+ server. If group information is available for the user, NetScaler Gateway checks the network resources allowed for the group.

To control which resources users can access, you must create authorization policies. If you do not need to create authorization policies, you can configure default global authorization.

If you create an expression within the authorization policy that denies access to a file path, you can only use the subdirectory path and not the root directory. For example, use `fs.path contains "\\dir1\\dir2"` instead of `fs.path contains "\\rootdir\\dir1\\dir2"`. If you use the second version in this example, the policy fails.

After you configure the authorization policy, you then bind it to a user or group.

By default, authorization policies are validated first against policies that you bind to the virtual server and then against policies bound globally. If you bind a policy globally and want the global policy to take precedence over a policy that you bind to a user, group, or virtual server, you can change the priority number of the policy. Priority numbers start at zero. A lower priority number gives the policy higher precedence.

For example, if the global policy has a priority number of one and the user has a priority of two, the global authentication policy is applied first.

#### **Important:**

- Classic authorization policies are applied only on TCP traffic.
- Advanced authorization policy can be applied on all types of traffic (TCP/UDP/ICMP/DNS).
  - To apply policy on UDP/ICMP/DNS traffic, policies must be bound at type `UDP_REQUEST`, `ICMP_REQUEST`, and `DNS_REQUEST` respectively.
  - While binding, if “type” is not explicitly mentioned or “type” is set to `REQUEST`, the behavior does not change from earlier builds, that is these policies are applied only to TCP traffic.
  - The policies bound at `UDP_REQUEST` do not apply for DNS traffic. For DNS, policies must be explicitly bound to `DNS_REQUEST`. `TCP_DNS` is similar to other TCP requests.

For more details on advanced authorization policies, see article <https://support.citrix.com/article/CTX232237>.

## Configure and bind an authorization policy

### Configure an authorization policy by using the GUI

1. Navigate to **NetScaler Gateway > Policies > Authorization**.
2. In the details pane, click **Add**.
3. In **Name**, type a name for the policy.
4. In **Action**, select **Allow** or **Deny**.
5. In **Expression**, click **Expression Editor**.
6. To configure the expressions, click **Select** and choose the necessary elements.

Following are a few expression examples,

- `HTTP.REQ.USER.IS_MEMBER_OF("AllowedGroup")` - You can allow or deny access to a user if the user is member of the user group “AllowedGroup”.
- `CLIENT.IP.DST.BETWEEN(10.102.75.10,10.102.75.20)` - You can allow or deny access if the client destination IP address is within a certain range.
- `HTTP.REQ.HOSTNAME.CONTAINS("portal-srv") || CLIENT.IP.DST.IN_SUBNET(10.102.75.0/25)` - You can allow or deny access to the user if the hostname of their HTTP request contains the text “portal-srv” or if the client device destination IP address is in the subnet 10.102.75.0/25.

7. Click **Done** when your expression is complete.
8. Click **Create**.

### Bind an authorization policy to a user by using the GUI

1. Navigate to **NetScaler Gateway > User Administration**.
2. Click **AAA Users**.
3. In the details pane, select a user and then click **Edit**.
4. In **Advanced Settings**, click **Authorization Policies**.
5. In **Policy Binding** page, select a policy or create a policy.
6. In **Priority**, set the priority number.
7. In **Type**, select the request type and then click **OK**.

### Bind an authorization policy to a group by using the GUI

1. Navigate to **NetScaler Gateway > User Administration**.
2. Click **AAA Groups**.
3. In the details pane, select a group and then click **Edit**.
4. In **Advanced Settings**, click **Authorization Policies**.
5. In **Policy Binding** page, select a policy or create a policy.



6. In **Priority**, set the priority number.
7. In **Type**, select the request type and then click **OK**.

Authorization specifies the network resources to which users have access when they log on to NetScaler Gateway. The default setting for authorization is to deny access to all network resources. Citrix recommends using the default global setting and then creating authorization policies to define the network resources users can access.

You configure authorization on NetScaler Gateway by using an authorization policy and expressions. After you create an authorization policy, you can bind it to the users or groups that you configured on the appliance.

### **Default global authorization**

To define the resources to which users have access on the internal network, you can configure default global authorization. You configure global authorization by allowing or denying access to network resources globally on the internal network.

Any global authorization action you create is applied to all users who do not already have an authorization policy associated with them, either directly or through a group. A user or group authorization policy always overrides the global authorization action. If the default authorization action is set to Deny, you must apply authorization policies for all users or groups to make network resources accessible to those users or groups. This requirement helps to improve security.

To set default global authorization:

1. In the configuration utility, on the Configuration tab, in the navigation pane, expand NetScaler Gateway and then click Global Settings.
2. In the details pane, under Settings, click Change global settings.
3. On the Security tab, next to Default Authorization Action, select Allow or Deny then and click OK.

### **Authentication profiles**

May 2, 2023

When you want the same authentication settings to be used by multiple traffic management virtual servers, you can create an authentication profile which specifies the authentication virtual server, the authentication host, the authentication domain, and the authentication level.

This authentication profile can be associated with the relevant traffic management virtual servers.

## Configure an authentication profile

### Configure an authentication profile by using the CLI

- Create the authentication profile and set the required parameters.

For example, to create a profile with an authentication virtual server named “authVS”.

```
1 add authentication authnProfile authProfile1 -authnVsName authVS
 -authenticationHost authnVS.example.com -authenticationDomain
 example.com -authenticationLevel
```

#### Note:

The authentication weight or level depends on the virtual server to which the traffic is bound. A session that is created by authenticating against the traffic management virtual server at a given level cannot be used to access the traffic management virtual server at a higher level.

- Bind the authentication profile to the relevant traffic management virtual servers.

For example, to bind authProfile1 to a load balancing virtual server named “vserver1”.

```
1 set lb vserver vserver1 -authnProfile authProfile1
```

### Configure an authentication profile by using the GUI

In the **Configuration** tab, navigate to **Security > AAA - Application Traffic > Authentication Profile**, and configure the authentication profile as required.

#### Note:

- You can create an authentication profile by using the NetScaler Gateway wizard as well. The profile contains all the settings for the authentication policy. You configure the profile when you create the authentication policy.
- With the NetScaler Gateway wizard, you can use the chosen authentication type to configure authentication. If you want to configure other authentication policies after running the wizard, you can use the configuration utility. For more information about the NetScaler Gateway wizard, see [Configuring Settings by Using the NetScaler Gateway Wizard](#)].

## Authentication policies

January 10, 2024

When users log on to NetScaler or NetScaler Gateway, they are authenticated according to a policy that you create. An authentication policy comprises an expression and an action. Authentication policies use NetScaler expressions.

After creating an authentication action and an authentication policy, bind it to an authentication virtual server and assign a priority to it. When binding it, also designate it as either a primary or a secondary policy. Primary policies are evaluated before secondary policies. In configurations that use both types of policy, primary policies are normally more specific policies while secondary policies are normally more general policies. It is intended to handle authentication for any user accounts that do not meet the more specific criteria. The policy defines the authentication type. A single authentication policy can be used for simple authentication needs and is typically bound at the global level. You can also use the default authentication type, which is local. If you configure local authentication, you must also configure users and groups on NetScaler.

You can configure multiple authentication policies and bind them to create a detailed authentication procedure and virtual servers. For example, you can configure cascading and two-factor authentication by configuring multiple policies. You can also set the priority of the authentication policies to determine which servers and the order in which NetScaler checks user credentials. An authentication policy includes an expression and an action. For example, if you set the expression to True value, when users log on, the action evaluates user logon to true and then users have access to network resources.

After you create an authentication policy, you bind the policy at either the global level or to virtual servers. When you bind at least one authentication policy to a virtual server, any authentication policies that you bound to the global level are not used when users log on to the virtual server, unless the global authentication type has a higher precedence than the policy bound to the virtual server.

When a user logs on to NetScaler, authentication is evaluated in the following order:

- The virtual server is checked for any bound authentication policies.
- If authentication policies are not bound to the virtual server, NetScaler checks for global authentication policies.
- If an authentication policy is not bound to a virtual server or globally, the user is authenticated through the default authentication type.

If you configure LDAP and RADIUS authentication policies and want to bind the policies globally for two-factor authentication, you can select the policy in the configuration utility and then select if the policy is the primary or secondary authentication type. You can also configure a group extraction policy.

**Note:**

NetScaler or NetScaler Gateway encodes only UTF-8 characters for authentication, and it is not compatible with servers that use ISO-8859-1 characters.

## On the GUI

### Create or modify an advanced authentication policy

1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Policy**.
2. On the **Authentication Policies** page, perform one of the following tasks:
  - To create an authentication policy, click **Add**. The **Create Authentication Policy** page appears.
  - Update the required fields and click **Create**.
  - To modify an authentication policy, select the action, and then click **Edit**. The **Configure Authentication Policy** page is displayed. Modify the required fields and click **OK**.
    - **Name:** Name of the advanced authentication policy.
    - **Action Type:** Type of the authentication action for which the policy is being created.
    - **Action:** Name of the authentication action (LDAP, RADIUS, SAML) to be performed if the policy matches. If there is no authentication action in the drop-down list, click **Add**.
    - **Expression:** Name of the NetScaler named rule or expression that the policy uses to determine whether to attempt to authenticate the user with the authentication virtual server. For more information about advanced policy expressions, see [Advanced policy expressions](#).
    - **Log Action:** Name of message log action to use when a request matches this policy.

#### ← Configure Authentication Policy

The screenshot shows the 'Configure Authentication Policy' form with the following details:

- Name:** LDAP\_Pol
- Action Type\*:** LDAP
- Action\*:** LDAP\_Server (with 'Add' and 'Edit' buttons)
- Expression\*:** TRUE (with an 'Expression Editor' link and 'Evaluate' button)
- More:** A section with 'OK' and 'Close' buttons.

### Remove an authentication policy

If you have changed or removed an authentication server from your network, remove the corresponding authentication policy from NetScaler.


1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Policy**.
2. On the **Authentication Policies** page, select the policy that you want to remove and click **Delete**.
3. Click **Yes** to confirm your action.

### Bind the authentication policy

You must bind advanced authentication policies to an authentication virtual server and link the authentication virtual server to a VPN virtual server by using an authentication profile.


1. Create an authentication virtual server.
  - Navigate to **Security > AAA - Application Traffic > Virtual Servers**.
  - On the **Authentication Virtual Servers** page, and click **Add**. Update the required fields and click **OK**.
  - If an authentication virtual server exists, select the relevant server on the **Authentication Virtual Servers** page.
  - In the **Advanced Authentication Policies** section, select the authentication policy.
  - On the **Policy Binding** page, select the policy and click **Add**. Provide the binding details such as the priority, GoTo expression, and the next factor, and then click **Bind**.

1. Create a VPN virtual server.
  - Navigate to **NetScaler Gateway > Virtual servers**.
  - On the **NetScaler Gateway Virtual Servers** page, click **Add**.
  - On the **VPN Virtual Server** page, update the required fields and click **OK**.

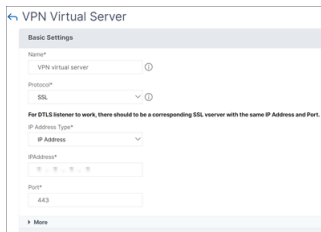


2. Create an authentication profile.

- Navigate to **Security > AAA - Application Traffic > Authentication Profile**.
- On the **Authentication Profile** page, click **Add**.
- Update the required fields and click **Create**.

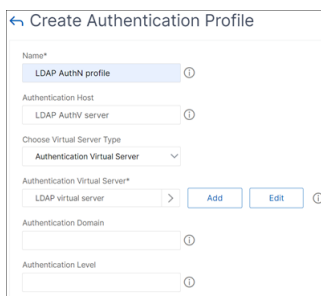

3. Link the authentication virtual server to the VPN virtual server by using the authentication profile.

- Navigate to **NetScaler Gateway > NetScaler Gateway Virtual Servers** and select the VPN virtual server. The **VPN Virtual Server** page appears.
- In the **Authentication profile** section, select the authentication profile from the drop-down list and click **OK**.
- Alternatively, you can navigate to the **Advanced settings** section on the **VPN Virtual server** page, click **+ Authentication Profile**, select the authentication profile from the drop-down list, and click **OK**.
- Click **Done**.

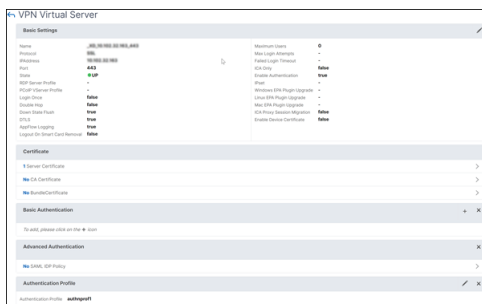

**On the CLI**

At the command prompt, type the following commands:

```
1 add authentication policy <name> -rule <expression> -action <string>
2
3 show authentication policy <name>
4
5 bind authentication vserver <name> -policy <policyname> [-priority <
 priority>][-secondary]
6
7 show authentication vserver <name>
```

**Example:**

```
1 add authentication policy Authn-Pol-1 true
2
3
4 show authentication policy Authn-Pol-1
5 Name: Authn-Pol-1 Rule: true Request action: LOCAL
6
7 bind authentication vserver Auth-Vserver-2 -policy Authn-Pol-1
8
9 show authentication vserver Auth-Vserver-2
10 Auth-Vserver-2 (10.102.29.77:443) - SSL Type: CONTENT State: UP Client
 Idle
11 Timeout: 180 sec Down state flush: DISABLED
12 Disable Primary Vserver On Down : DISABLED
13 Authentication : ON
14 Current AAA Users: 0
15 Authentication Domain: myCompany.employee.com
16 Primary authentication policy name: Authn-Pol-1 Priority: 0
```

**Modify an authentication policy** At the command prompt, type the following commands to modify an existing authentication policy:

```
1 set authentication policy <name> [-rule <expression>] [-action <string>
 >] [-undefAction <string>] [-comment <string>] [-logAction <string>
 >]
```

**Example**

```
1 set authentication policy Authn-Pol-1 -rule true
```

**Remove an authentication policy** At the command prompt, type the following command to remove an authentication policy:

```
1 rm authentication policy <name>
```

### Example

```
1 rm authentication localPolicy Authn-Pol-1
```

**Bind the authentication policy** For advanced policies, create an authentication profile and associate the profile to an authentication virtual server. Once the authentication profile is created, associate the authentication profile to a VPN virtual server.

Create an authentication profile and set an authentication virtual server to the profile:

```
1 add authentication authnProfile <name> {
2 -authnVsName <string> }
3 {
4 -AuthenticationHost <string> }
5 {
6 -AuthenticationDomain <string> }
7 [-AuthenticationLevel <positive_integer>]
```

### Example

```
1 add authentication authnProfile Authn-Prof-1 -authnVsName Auth-Vserver
 -2 -AuthenticationDomain "myCompany.employee.com"
```

Create a VPN virtual server and add the corresponding authentication profile:

### Example

```
1 add vpn vserver VPN-Vserver-2 ssl -authentication ON -authnprofile
 Authn-Prof-1
```

## Add an authentication action

If you do not use LOCAL authentication, you need to add an explicit authentication action. At the command prompt, type the following command:

```
1 add authentication tacacsAction <name> -serverip <IP> [-serverPort <
 port>][-authTimeout <positive_integer>][...]
```

### Example

```
1 add authentication tacacsaction Authn-Act-1 -serverip 10.218.24.65 -
 serverport 1812 -authtimeout 15 -tacacsSecret "minotaur" -
 authorization OFF -accounting ON -auditFailedCmds OFF -
 defaultAuthenticationGroup "users"
```



### Configure an authentication action

To configure an existing authentication action, at the command prompt, type the following command:

```
1 set authentication tacacsAction <name> -serverip <IP> [-serverPort <port>][-authTimeout <positive_integer>][...]
```

Example

```
1 set authentication tacacsaction Authn-Act-1 -serverip 10.218.24.65 -serverport 1812 -authtimeout 15 -tacacsSecret "minotaur" -authorization OFF -accounting ON -auditFailedCmds OFF -defaultAuthenticationGroup "users"
```

### Remove an authentication action

To remove an existing RADIUS action, at the command prompt, type the following command:

```
1 rm authentication radiusAction <name>
```

Example

```
1 rm authentication tacacsaction Authn-Act-1
```

### The noAuth authentication

NetScaler supports noAuth authentication capability that enables the customer to configure a defaultAuthenticationGroup parameter in the `noAuthAction` command, when a user performs this policy. The administrator can check for the presence of this group in the user's group to determine the user's navigation through the noAuth policy.

### To configure a noAuth authentication

At the command prompt, type;

```
1 add authentication noAuthAction <name> [-defaultAuthenticationGroup <string>]
```

Example

```
1 add authentication noAuthAction noauthact -defaultAuthenticationGroup mynoauthgroup
```

## Default global authentication types

When you installed NetScaler Gateway and ran the NetScaler Gateway wizard, you configured authentication within the wizard. This authentication policy is bound automatically to the NetScaler Gateway global level. The authentication type that you configure within the NetScaler Gateway wizard is the default authentication type. You can change the default authorization type by running the NetScaler Gateway wizard again or you can modify the global authentication settings in the configuration utility.

If you need to add other authentication types, you can configure authentication policies on NetScaler Gateway and bind the policies to NetScaler Gateway by using the configuration utility. When you configure authentication globally, you define the type of authentication, configure the settings, and set the maximum number of users that can be authenticated.

After configuring and binding the policy, you can set the priority to define which authentication type takes precedence. For example, you configure LDAP and RADIUS authentication policies. If the LDAP policy has a priority number of 10 and the RADIUS policy has a priority number of 15, the LDAP policy takes precedence, regardless of where you bind each policy. This is called cascading authentication.

You can select to deliver logon pages from the NetScaler Gateway in-memory cache or from the HTTP server running on NetScaler Gateway. If you choose to deliver the logon page from the in-memory cache, the delivery of the logon page from NetScaler Gateway is faster than from the HTTP server. Choosing to deliver the logon page from the in-memory cache reduces the wait time when many users log on at the same time. You can only configure the delivery of logon pages from the cache as part of a global authentication policy.

You can also configure the network address translation (NAT) IP address that is a specific IP address for authentication. This IP address is unique for authentication and is not the NetScaler Gateway subnet, mapped, or virtual IP addresses. This is an optional setting.

**Note:**

- You cannot use the NetScaler Gateway wizard to configure SAML authentication.
- You can use the Quick Configuration wizard to configure LDAP, RADIUS, and client certificate authentication. When you run the wizard, you can select from an existing LDAP or RADIUS server configured on NetScaler Gateway. You can also configure the settings for LDAP or RADIUS. If you use two-factor authentication, it is recommended that you use LDAP as the primary authentication type.

## Configure default global authentication types

1. In the GUI, on the Configuration tab, in the navigation pane, expand **NetScaler Gateway**, and then click **Global Settings**.
2. In the details pane, under Settings, click **Change authentication settings**.
3. In **Maximum Number of Users**, type the number of users who can be authenticated by using this authentication type.
4. In **NAT IP address**, type the unique IP address for authentication.
5. Select **Enable static caching to deliver logon pages faster**.
6. Select **Enable Enhanced Authentication Feedback to provide a message to users if authentication fails**. The message users receive include the password errors, the account disabled or locked, or the user is not found, to name a few.
7. In **Default Authentication Type**, select the authentication type.
8. Configure the settings for your authentication type, and then click **OK**.

## Support to retrieve current login attempts for a user

NetScaler provides an option to retrieve the value of current login attempts for a user by an expression `aaa.user.login_attempts`. This expression takes either one argument (user name) or no argument. If there is no argument, the expression fetches the user name from the `aaa_session` or `aaa_info`.

You can use the `aaa.user.login_attempts` expression with authentication policies for further processing.

## To configure the number of login attempts per user

At the command prompt, type:

```
add expression er aaa.user.login_attempts
```

### Note:

The `aaa.user.login_attempts` expression does not work if the Persistent Login Attempts parameter is enabled. For details about the Persistent Login Attempts parameter, see [System user account lockout](#).

The following CLI examples describe the login attempt configurations for different scenarios:

- Authentication virtual server

```
set authentication vserver av_vs -maxLoginAttempts 5 -failedLoginTimeout 100
```

For details about the authentication virtual server and its supported parameters, see [Authentication virtual server](#).

- NetScaler Gateway virtual server

```
set vpn vserver vpn_vs -maxLoginAttempts 5 -failedLoginTimeout 100
```

For details about a NetScaler Gateway virtual server, see [Virtual servers](#) section.

- Lockout a system user account

```
set aaa parameter -maxloginAttempts 3 -failedLoginTimeout 10
```

For details about the system user account lockout, see [Lock system user account for management access](#).

**Parameter descriptions:**

- `maxLoginAttempts`: Maximum number of login attempts allowed before a user is locked out.
- `failedLoginTimeout`: Number of seconds allowed before the login fails. The user must restart the login process.

## Users and groups

May 2, 2023

After configuring the authentication, authorization, and auditing basic setup, you create users and groups. You first create a user account for each person who authenticates via the NetScaler appliance. If you are using local authentication controlled by the NetScaler appliance itself, you create local user accounts and assign passwords to each of those accounts.

You also create user accounts on the NetScaler appliance if you are using an external authentication server. In this case, however, each user account must exactly match an account for that user on the external authentication server, and you do not assign passwords to the user accounts that you create on the NetScaler. The external authentication server manages the passwords for users that authenticate with the external authentication server.

If you are using an external authentication server, you can still create local user accounts on the NetScaler appliance if, for example, you want to allow temporary users (such as visitors) to log in but do not want to create entries for those users on the authentication server. You assign a password to each local user account, just as you would if you were using local authentication for all user accounts.

Each user account must be bound to policies for authentication and authorization. To simplify this task, you can create one or more groups and assign user accounts to them. You can then bind policies to groups instead of individual user accounts.

## Configure policies with groups

After you configure groups, you can use the **Group** dialog box to apply policies and settings that specify user access. If you are using local authentication, you create users and add them to groups that are configured on NetScaler Gateway. The users then inherit the settings for that group.

You can configure the following policies or settings for a group of users in the **Group** dialog box:

- Users
- Authorization policies
- Auditing policies
- Session policies
- Traffic policies
- Bookmarks
- Intranet applications
- Intranet IP addresses

In your configuration, you might have users that belong to more than one group. In addition, each group might have one or more bound session policies, with different parameters configured. Users that belong to more than one group inherit the session policies assigned to all the groups to which the user belongs. To ensure which session policy evaluation takes precedence over the other, you must set the priority of the session policy.

For example, you have group1 that is bound with a session policy configured with the home page `www.homepage1.com`. Group2 is bound with a session policy configured with home page `www.homepage2.com`. When these policies are bound to respective groups without a priority number or with a same priority number, the home page that appears to users who belong to both the groups depends on which policy is processed first. By setting a lower priority number, which gives higher precedence, for the session policy with home page `www.homepage1.com`, you can ensure that users who belong to both the groups receive the home page `www.homepage1.com`.

If session policies do not have a priority number assigned or have the same priority number, precedence is evaluated in the following order:

- User
- Group
- Virtual server
- Global

If policies are bound to the same level, without a priority number or if the policies have the same priority number, the order of evaluation is per the policy bind order. Policies that are bound first to a level receive precedence over policies bound later.

If we have a user bound to multiple groups with each group having IIP bound, the user can get free IP from any of the bound groups.

## Create users and groups

### Configure authentication, authorization, and auditing local users by using the GUI

1. Navigate to **Security > AAA - Application Traffic > Users**  
From NetScaler Gateway, expand **NetScaler Gateway > User Administration**, and then click **AAA Users**.
2. In the details pane, do one of the following:
  - To create a new user account, click **Add**.
  - To modify an existing user account, select the user account, and then click **Open**.
3. In the **Create AAA User** dialog box, in the **User Name** text box, type a name for the user.
4. If creating a locally authenticated user account, clear the **External Authentication** check box and provide a local password that the user uses to log on.
5. Click **Create** or **OK**, and then click **Close**. A message appears in the status bar, stating that the user has been configured successfully.

### Configure authentication, authorization, and auditing local groups and add users to them by using the configuration utility

1. Navigate to **Security > AAA - Application Traffic > Groups**  
From NetScaler Gateway, expand **NetScaler Gateway > User Administration**, and then click **AAA Groups**.
2. In the details pane, do one of the following:
  - To create a new group, click **Add**.
  - To modify an existing group, select the group, and then click **Edit**.
3. If you are creating a new group, in the **Create AAA Group** dialog box, in the **Group Name** text box, type a name for the group.
4. In the **Advanced** area to the right, click **AAA Users**.
  - To add a user to the group, select the user, and then click **Add**.

- To remove a user from the group, select the user, and then click **Remove**.
  - To create a new user account and add it to the group, click the **Plus** icon, and then follow the instructions in “To configure authentication, authorization, and auditing local users by using the configuration utility.”
5. Click **Create** or **OK**. The group that you created appears in the **AAA Groups** page.

### Delete a group by using the GUI

You can also delete user groups from NetScaler Gateway.

1. Navigate to **Security > AAA - Application Traffic > Groups**  
From NetScaler Gateway, expand Citrix **Gateway > User Administration**, and then click **AAA Groups**.  
In the details pane, select the group, and then click Remove.

### Configure authentication, authorization, and auditing local users by using the CLI

At the command prompt, type the following commands:

```
1 add aaa group <groupname>
2
3 bind aaa group <groupname> -username <username>
```

#### Example:

```
1 add aaa group group-2
2
3 bind aaa group group-2 -username user-2
```

### Remove users from an authentication, authorization, and auditing group by using the command line interface

At the command prompt, unbind users from the group by typing the following command once for each user account that is bound to the group:

```
1 unbind aaa group <groupname> -username <username>````
```

#### Example:

```
1 unbind aaa group group-hr -username user-hr-1
```

## Remove an authentication, authorization, and auditing group by using the command line interface

First remove all users from the group. Then, at the command prompt, type the following command to remove a NetScaler AAA group and verify the configuration:

```
1 rm aaa group <groupname>
```

### Example:

```
1 rm aaa group group-hr
```

#### Note

You cannot add a user name with domain if the user name is already added without domain. If the user name with domain is added first followed by the same user name without domain, then the NetScaler appliance adds the user name to the user list.

The following example shows adding a user name with domain is not permitted if the same user name is added without domain.

```
1 > add aaa user u47985
2 Done
3 > show aaa users
4 1) UserName: u47985
5 Done
6 > add aaa user u47985@domain.com
7 ERROR: User already exists
```

The following example shows if the user name with domain is added first followed by the same user name without domain, then the NetScaler appliance adds the user name to the user list.

```
1 > add aaa user u47985@domain.com
2 Done
3 > add aaa user u47985
4 Done
5 > sh aaa user
6 1) UserName: u47985@domain.com
7 2) UserName: u47985
```

## Authentication methods

November 14, 2023

The NetScaler appliance can authenticate users with local user accounts or by using an external authentication server. The appliance supports the following authentication types:



- **LOCAL:** Authenticates to the NetScaler appliance by using a password, without reference to an external authentication server. User data is stored locally on the NetScaler appliance.
- **RADIUS:** Authenticate to an external RADIUS server.
- **LDAP:** Authenticates to an external LDAP authentication server.
- **TACACS:** Authenticates to an external Terminal Access Controller Access-Control System (TACACS) authentication server.
- **CERT:** Authenticates to the NetScaler appliance by using a client certificate, without reference to an external authentication server.
- **NEGOTIATE:** Authenticates to a Kerberos authentication server. If there is an error in Kerberos authentication, NetScaler uses NTLM authentication.
- **SAML:** Authenticates to a server that supports the Security Assertion Markup Language (SAML).
- **SAML IDP:** Configures the NetScaler to serve as a Security Assertion Markup Language (SAML) Identity Provider (IdP).
- **WEB:** Authenticates to a web server, providing the credentials that the web server requires in an HTTP request and analyzing the web server response to determine that the user authentication was successful.
- **Native OTP:** NetScaler appliance supports one-time passwords (OTPs) without having to use a third-party server.
- **Push notification:** NetScaler Gateway supports push notifications for OTP. Users do not have to manually enter the OTP received on their registered devices to log in to NetScaler Gateway. Admins can configure NetScaler Gateway such that login notifications are sent to users' registered devices using push notification services.
- **Email OTP:** The Email OTP method enables you to authenticate using the one-time password (OTP) that is sent to the registered email address. When you try to authenticate on any service, the server sends an OTP to the registered email address of the user.
- **reCaptcha authentication** - NetScaler Gateway supports a new first class action 'captchaAction' that simplifies reCaptcha configuration. As reCaptcha is a first class action, it can be a factor of its own. You can inject reCaptcha anywhere in the nFactor flow.
- **nFactor authentication:** Multifactor authentication enhances the security of an application by requiring users to provide multiple proofs of identity to gain access. The NetScaler appliance provides an extensible and flexible approach to configuring multifactor authentication. This approach is called nFactor authentication.
- **OAuth authentication:** OAuth authentication authorizes and authenticates users to services that are hosted on applications such as Google, Facebook, and Twitter.

## nFactor authentication

October 18, 2024

### Important

- nFactor authentication is supported from NetScaler 11.0 Build 62.x onwards.
- For nFactor authentication to work with NetScaler, an Advanced license or a Premium license is required.
- Starting from release 13.0 build 67.x, nFactor authentication is supported with Standard license only for Gateway/VPN virtual server. For more information about nFactor authentication with NetScaler Gateway, see [nFactor for Gateway Authentication](#).

Multifactor authentication enhances the security of an application by requiring users to provide multiple proofs of identity to gain access. The NetScaler appliance provides an extensible and flexible approach to configuring multifactor authentication. This approach is called *nFactor authentication*.

### How nFactor authentication works

Each authentication factor performs the following tasks:

- Collects credentials from the user. NetScaler supported authentication mechanisms include LDAP, RADIUS, SAML assertion, Client Certificate, OAuth OpenID Connect, Kerberos, and so on.
- Evaluates the supplied credentials to decide whether the authentication succeeded, failed or the actions like Group extraction, Attribute extraction is to be performed.
- Based on the evaluation results, access is either granted, denied, or a next factor is selected.
- Repeat these steps, until there are no more next factors to evaluate.

With nFactor authentication you can:

- Configure any number of authentication factors.
- Base the selection of the next factor on the result of executing the previous factor.
- Customize the login interface. For example, you can customize the label names, error messages, and help text.
- Extract user group information without doing authentication.
- Configure pass-through for an authentication factor. This means that no explicit login interaction is required for that factor.
- Configure the order in which different types of authentication are applied. Any of the authentication mechanisms that are supported on the NetScaler appliance can be configured as any

factor of the nFactor authentication setup. These factors are executed in the order in which they are configured.

- Configure the NetScaler appliance to proceed to an authentication factor that must be executed when authentication fails. To do so, you configure another authentication policy with the same condition, but with the next highest priority and with the action set to “NO\_AUTH”. You must configure the next factor, which must specify the alternative authentication mechanism to apply.

## **Encryption of NetScaler Gateway login information for nFactor authentication**

NetScaler Gateway with nFactor authentication can encrypt the login request fields submitted by a client (browser or SSO apps) during authentication process. The encrypted login request fields provide an extra layer of security to protect the user’s sensitive data from being disclosed.

### **Compatible browsers**

The following table lists the browsers along with version details that support login encryption.

---

| Browsers | Version        |
|----------|----------------|
| Chrome   | 78 and above   |
| Firefox  | 69 and above   |
| Edge     | 42 and above   |
| Safari   | 11.0 and above |
| Opera    | 66             |

---

### **Compatible clients**

The following section lists the clients along with version details that support encryption of NetScaler Gateway login information.

- Citrix Workspace app in Mac supports encryption only when OS version is 10.14.x and above.
- Citrix SSO app in Mac supports encryption only when OS version is 10.14.x and above.
- Windows SSO app does not have restrictions on the compatibility.

### **To enable the login encryption by using the CLI**

At the command prompt, type:

```
set aaa parameter [-loginEncryption (ENABLED | DISABLED)]
```

**Note**

The loginEncryption parameter is DISABLED by default. You must ENABLE it.

**To enable the login encryption by using the GUI**

1. Navigate to **Security > AAA –Application Traffic**, click **Change authentication AAA settings** under **Authentication Settings** section.
2. On the **Configure AAA Parameter** page, scroll down to the **Login Encryption** option, and enable it.

**Important note about login encryption:**

When you try logging on to NetScaler Gateway, you see an error message that the password encryption has failed and that you must disable password encryption to continue with the logon, in the following scenarios:

- Login encryption is enabled.
- Unsupported browser is used.

You can ignore the suggestion to disable login encryption. But, ensure that you use a supported browser for a successful logon.

## nFactor concepts, entities, and terminology

August 23, 2024

This topic captures some of the major entities involved in nFactor authentication and their significance.

### Login schema

nFactor decouples the ‘view’, the user interface, with the ‘model’ that is the runtime handling. nFactor’s view is defined by the login schema. Login schema is an entity that defines what the user sees and specifies how to extract the data from the user.

For defining a view, the login schema points to a file on disk that defines the logon form. This file must be according to the specification of the “Citrix Common Forms Protocol.” This file is essentially an XML definition of the logon form.

In addition to the XML file, the login schema contains advanced policy expressions to glean user name and password from the user's login request. These expressions are optional, and can be omitted if user name and password from user arrive with expected form variable names.

Login schema also defines, whether the current set of credentials must be used as default Single-SignOn credentials.

Login schema can be created by running the following CLI command:

```
1 add authentication loginSchema <name> -authenticationSchema <string>
 [-userExpression <string>] [-passwdExpression <string>] [-
 userCredentialIndex <positive_integer>] [-passwordCredentialIndex
 <positive_integer>] [-authenticationStrength <positive_integer>]
 [-SSOCredentials (YES | NO)]
```

**Note:**

**SSOCredentials** indicate whether the current factor credentials are the default SSO credentials. Default value is NO.

In the nFactor authentication configuration, last factor credentials are used for SSO by default. By using the **SSOCredentials** configuration, current factor credentials can be used. In case this configuration is set in different factors, the final factor which has this configuration set takes the priority.

For details about each parameter, see <https://developer-docs.citrix.com/projects/citrix-adc-command-reference/en/latest/authentication/authentication-loginSchema/#add-authentication-loginschema>.

## Policy label

A policy label is a collection of policies. It is a construct not alien to NetScaler's policy infrastructure. Policy label defines an authentication factor. That is, it contains all the policies necessary to determine whether credentials from the user are satisfied. All the policies in a policy label can be assumed as homogenous. Policy label for authentication cannot take policies of different type, say rewrite. To put in a different way, all the policies in a policy label validate the same password/credential from the user, mostly. The result of policies in a policyLabel follows the logical OR condition. Hence, if the authentication specified by the first policy succeeds, other policies following it are skipped.

Policy label can be created by running the following CLI command:

```
1 add authentication policy label mylabel - loginSchema <>
```

A policy label takes the login schema as the property. Login schema defines the view for that policy label. If the login schema is not specified, an implicit login schema, LSCHEMA\_INT, is associated with that policy label. Login schema decides whether a policy label becomes a passthrough or not.

## Virtual server label

In NetScaler's advanced policy infrastructure, a virtual server is also an implicit policy label. That's because the virtual server can also be bound with more than one policy. However, a virtual server is special because it is the entry point for client traffic and can take policies of a different type. Each of the policies it put under its own label within the virtual server. Hence, the virtual server is a conglomeration of labels.

## Next factor

Whenever a policy is bound to a virtual server or a policy label, it can be specified with the next factor. Next factor determines what must be done if a given authentication succeeds. If there is no next factor, that concludes the authentication process for that user.

Each policy bound to a virtual server or policy label can have a different next factor. This allows for ultimate flexibility where in every policy's success can define a new path for user's authentication. Administrator can take advantage of this fact and craft clever fallback factors for users who do not meet certain policies.

## No-Auth policy

nFactor introduces a special built-in policy called NO\_AUTHN. NO\_AUTHN policy always returns success as the authentication result. The `no-auth` policy can be created by running the following CLI command:

```
1 add authentication policy noauthpolicy -rule <> -action NO_AUTHN
```

As per the command, the `no-authentication` policy takes a rule that can be any advanced policy expression. Authentication result is always success from NO\_AUTHN.

A `no-auth` policy in itself does not seem to add value. However, when used along with passthrough policy labels, it offers great flexibility to make logical decisions to drive user authentication flow. NO\_AUTHN policy and passthrough factors offer a new dimension to nFactor's flexibility.

**Note:** Check the examples that depict the usage of `no-auth` and passthrough in subsequent sections.

## Passthrough factor/label

Once the user has passed the authentication at the virtual server (for the first factor), subsequent authentications happen at policy labels or user defined (secondary) factors.

Every policy label/factor is associated with a login schema entity to display the view for that factor.

This allows for customizing views based on the path the user would have taken to arrive at a given factor.

There are specialized kinds of policy labels which do not point explicitly to a login schema. Specialized policy labels point to a login schema that does not actually point to the XML file for the view. These policy labels/factors are called ‘passthrough’ factors.

Passthrough factors can be created by running the following CLI commands:

Example 1:

```
1 add authentication policylabel example1
```

Example 2:

```
1 add loginschema passthrough_schema - authenticationSchema noschema
2
3 add authentication policylabel example2 - loginschema
 passthrough_schema
```

Passthrough factor implies that the authentication, authorization, and auditing subsystem must not go back to the user to get the credential set for that factor. Instead, it is a hint for authentication, authorization, and auditing to continue with already obtained credentials. This is useful in cases where user intervention is not desired. For example,

- When the user is presented two password fields, after the first factor, the second factor does not need user intervention.
- When authentication of a type (say certificate) is done, and the administrator must extract groups for that user.

Passthrough factor can be used with [NO\\_AUTH](#) policy to make conditional jumps.

## nFactor authentication flow

Authentication always begins at the virtual server in nFactor. Virtual server defines the first factor for the user. The first form that the user sees is served by the virtual server. The login form that the user sees can be customized at the virtual server using login schema policies. If there are no login schema policies, a single user name and password field are displayed to the user.

If more than one password fields must be displayed to the user on customized form, login schema policies must be used. They allow for displaying different forms based on the configured rules (such as intranet user versus external user, service provider A versus service provider B).

Once user credentials are posted, authentication begins at the authentication virtual server, the first factor. Because the authentication virtual server can be configured with multiple policies, each of them is evaluated in a sequence. At any given point, if an authentication policy succeeds, the next

factor specified against it is taken. If there is no next factor, the authentication process ends. If the next factor exists, it is checked if that factor is a passthrough factor or a regular factor. If that is passthrough, authentication policies on that factor are evaluated without user intervention. Otherwise, the login schema associated with that factor is displayed to the user.

### Example of using passthrough factor and no-auth policies to make logical decisions

Administrator would like to decide nextFactor based on groups.

```
1 add authentication policylabel group check
2
3 add authentication policy admingroup -rule http.req.user.is_member_of(
 "Administrators") -action NO_AUTHN
4
5 add authentication policy nonadmins -rule true -action NO_AUTHN
6
7 bind authentication policy label group check -policy admingroup -pri
 1 -nextFactor factor-for-admin
8
9 bind authentication policy label groupcheck -policy nonadmins -pri 10
 -nextfactor factor-for-others
10
11 add authentication policy first_factor_policy -rule <> -action <>
12
13 bind authentication vserver <> -policy first_factor_policy -priority
 10 -nextFactor groupcheck
```

## Configuring nFactor authentication

November 7, 2023

You can configure multiple authentication factors using the nFactor configuration. The nFactor configuration is supported only in NetScaler Advanced and Premium editions.

### Methods to configure nFactor

You can configure nFactor authentication by one of the following methods:

- **nFactor Visualizer:** nFactor visualizer enables you to easily link factors or policy labels together in a single pane and also change the linking of the factors in the same pane. You can create an nFactor flow using the visualizer and bind that flow to an authentication, authorization, and auditing virtual server. For details about nFactor Visualizer and an example nFactor configuration using the visualizer, see [nFactor Visualizer for simplified configuration](#).



- **NetScaler GUI:** For details, see section **Configuration elements involved in nFactor configuration**.
- **NetScaler CLI:** For a sample snippet on nFactor configuration using the NetScaler CLI, see [Sample snippet on nFactor configuration by using the NetScaler CLI](#).

**Important:** This topic contains details about configuring nFactor by using the NetScaler GUI.

## Configuration elements involved in nFactor configuration

The following elements are involved in configuring nFactor. For detailed steps, refer to the appropriate sections in this topic.

| Configuration element                   | Tasks to be performed                                                                                      |
|-----------------------------------------|------------------------------------------------------------------------------------------------------------|
| <b>AAA virtual server</b>               | Create a AAA virtual server                                                                                |
| <b>Login schema</b>                     | Configure a login schema profile                                                                           |
| <b>Advanced authentication policies</b> | Create advanced authentication policies                                                                    |
| <b>Authentication policy label</b>      | Create authentication policy label                                                                         |
| <b>nFactor for NetScaler Gateway</b>    | Create authentication profile to link a NetScaler AAA virtual server with NetScaler Gateway virtual server |

## How nFactor works

When a user connects to the authentication, authorization, and auditing or NetScaler Gateway virtual server, the sequence of events that occur are as follows:


1. If forms-based authentication is used, the login schema bound to the authentication, authorization, and auditing virtual server is displayed.
2. Advanced authentication policies bound to the authentication, authorization, and auditing virtual server are evaluated.
  - If the advanced authentication policy succeeds, and if the next factor (authentication policy label) is configured, the next factor is evaluated. If Next Factor is not configured, then authentication is complete and successful.
  - If the advanced authentication policy fails, and if Goto Expression is set to Next, then the next bound advanced authentication policy is evaluated. If none of the advanced authentication policies succeed, then authentication fails.
3. If the next factor authentication policy label has a Login Schema bound to it, it is displayed to the user.
4. The advanced authentication policies bound to the next factor authentication policy label are evaluated.
  - If the Advanced authentication policy succeeds, and if the next factor (authentication policy label) is configured, the next factor is evaluated.
  - If Next Factor is not configured, then authentication is complete and successful.
5. If the Advanced authentication policy fails, and if Goto Expression is Next, then the next bound advanced authentication policy is evaluated.
6. If the policies succeed, then authentication fails.

### **Authentication, authorization, and auditing virtual server**

To use nFactor with NetScaler Gateway, you first configure it on an authentication, authorization, and auditing virtual server. Then you later link the authentication, authorization, and auditing virtual server to the NetScaler Gateway virtual server.


### **Create authentication, authorization, and auditing Virtual Server**

1. If the Authentication, authorization, and auditing feature is not already enabled, navigate to **Security > AAA –Application Traffic**, and right-click to enable the feature.

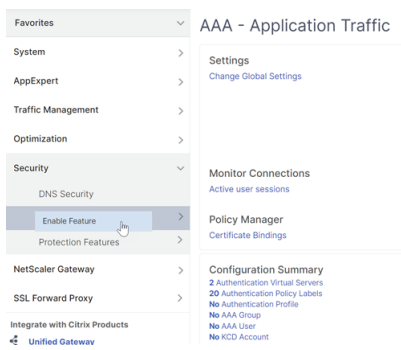


2. Navigate to **Configuration > Security > AAA - Application Traffic > Virtual Servers**.
3. Click **Add** to create an authentication virtual server.
4. Enter the following information and click **OK**.

| Parameter name  | Parameter Description                                                                                           |
|-----------------|-----------------------------------------------------------------------------------------------------------------|
| Name            | Name for the authentication, authorization, and auditing virtual server.                                        |
| IP address Type | Change the IP address Type to <b>Non Addressable</b> if this virtual server is used only for NetScaler Gateway. |

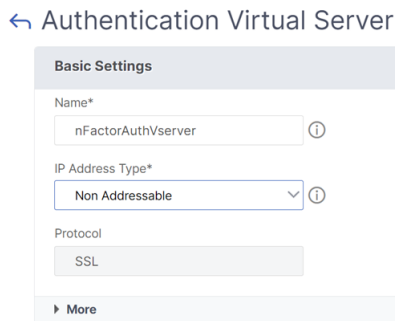


5. Under Certificate, select **No Server Certificate**.

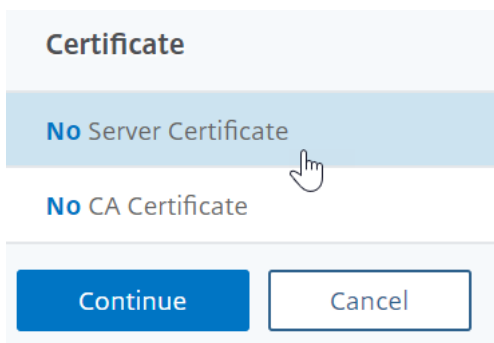


6. Click the text, **Click to select** to select the server certificate.

- Click the radio button next to a certificate for the authentication, authorization, and auditing Virtual Server, and click **Select**. The chosen certificate doesn't matter because this server is not directly accessible.

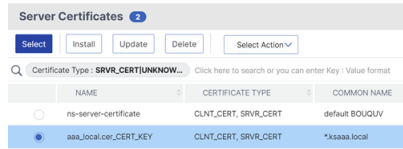


- Click **Bind**.
- Click **Continue** to close the **Certificate** section.

← Authentication Virtual Server

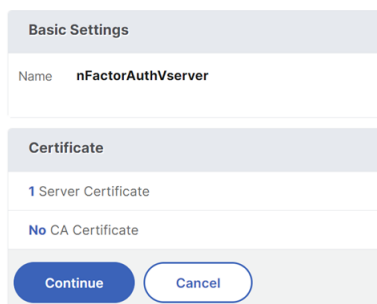

- Click **Continue**.

← Authentication Virtual Server

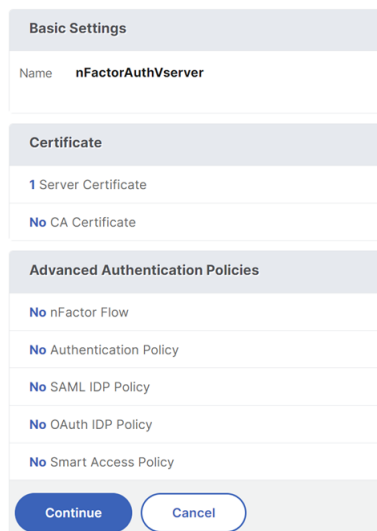

### Bind the portal theme to the authentication, authorization, and auditing virtual server

- Navigate to **NetScaler Gateway > Portal Themes**, and add a theme. You create the theme under NetScaler Gateway, and then later bind it to the authentication, authorization, and auditing virtual server.

2. Create a theme based on the RfWebUI template theme.

← Portal Theme

**Create Portal Theme**

Theme Name\*  
 ⓘ

Template Theme\*

3. After adjusting the theme as desired, at the top of the portal theme editing page, click **Click to Bind and View Configured Theme**.

← Portal Theme

Portal Theme

Theme Name: nFactorPortalTheme Click to Bind and View Configured Theme

Template Theme: RfWebUI

The look and feel of portal pages is modified by customizing the attributes with the following controls.

4. Change the selection to Authentication. From the **Authentication Virtual Server Name** drop-down menu, select the authentication, authorization, and auditing virtual server, and click **Bind and Preview** and close the preview window.

**Select a VPN/Authentication Virtual Server**

To preview the theme please select a VPN/Authentication Virtual Server to bind the theme to. If any changes are not visible, clear your browser's cache.  
**Note:** The preview will be displayed in the viewing browser's language, not the theme's selected language.

VPN  Authentication

VPN Virtual Server Name\*  
 Add ⓘ Please select value.

### Enable the client certificate authentication

If one of your authentication factors is the client certificate, then you must perform some SSL configuration on the authentication, authorization, and auditing virtual server:

1. Navigate to **Traffic Management > SSL > Certificates > CA Certificates**, and install the root certificate for the issuer of the client certificates. Root certificates do not have a key file.

CA Certificates ⓘ

Q Certificate Type: ROOT\_CERTINTM\_CE... Click here to search or you can enter Key : Value format

| <input type="checkbox"/> | NAME | CERTIFICATE TYPE | COMMON NAME        |
|--------------------------|------|------------------|--------------------|
| <input type="checkbox"/> | test | ROOT_CERT        | GlobalSign Root CA |

← Install CA Certificate

Certificate-Key Pair Name\*  
 ⓘ

Certificate File Name\*  
  ⓘ


Local xpires

Appliance

⚠ SNMP Trap destination found.

Notification Period

2. Navigate to **Traffic Management > SSL > Change advanced SSL settings.**

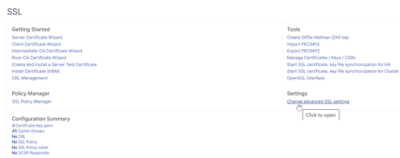


- a) Scroll down to check whether **Default Profile** is **ENABLED**. If yes, then you must use an SSL Profile to enable Client Certificate Authentication. Otherwise, you can enable Client Certificate Authentication directly on the authentication, authorization, and auditing virtual server in the SSL Parameters section.

3. If default SSL Profiles are not enabled:

- a) Navigate to **Security > AAA - Application > Virtual Servers**, and edit an existing authentication, authorization, and auditing virtual server.
- b) In the **SSL Parameters** section, click the pencil icon.




- a) Enable the **Client Authentication** option.
- b) Set **Client Certificate** to **Optional** and click **OK**.

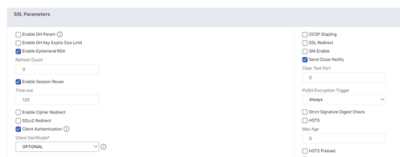


4. If Default SSL Profiles are enabled, then create an SSL Profile with Client Authentication enabled:

- a) On the left menu, expand System, and click Profiles.
- b) On the top right, switch to the SSL Profile tab.
- c) Right-click the ns\_default\_ssl\_profile\_frontend profile, and click Add. This copies settings from the default profile.
- d) Give the Profile a name. The purpose of this profile is to enable Client Certificates.
- e) Scroll down and find the Client Authentication check box. Check the box.
- f) Change the Client Certificate drop-down menu to OPTIONAL.
- g) Copying the default SSL Profile does not copy the SSL Ciphers. You must redo them.
- h) Click Done when done creating the SSL Profile.


- i) Navigate to **Security > AAA –Application Traffic > Virtual Servers**, and edit an authentication, authorization, and auditing virtual server.
  - j) Scroll down to the SSL Profile section and click the pencil.
  - k) Change the SSL Profile drop-down menu to the profile that has Client Certificates enabled. Click OK.
  - l) Scroll down this article until you reach the instructions to bind the CA certificate.
5. On the left, in the **Certificate** section, click **No CA Certificate**.

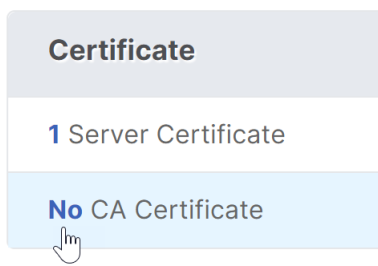


6. Click the text, **Click to select**.

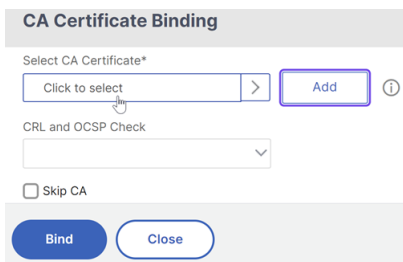

 7. Click the radio button next to the root certificate for the issuer of the client certificates, and click **Select**.



8. Click **Bind**.

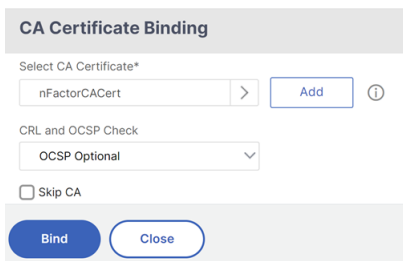

## Login schema XML file


Login Schema is an XML file providing the structure of forms-based authentication logon pages.

nFactor implies multiple authentication factors that are chained together. Each Factor can have different Login Schema pages/files. In some authentication scenarios, users can be presented with multiple logon screens.


### Configure a login schema profile

To configure a Login Schema Profile:


1. Create or Edit a Login Schema .XML file based on your nFactor design.
2. Navigate to **Security > AAA - Application Traffic > Login Schema**.
3. On the right, switch to the **Profiles** tab, and click **Add**.
4. In the **Authentication Schema** field, click the pencil icon.

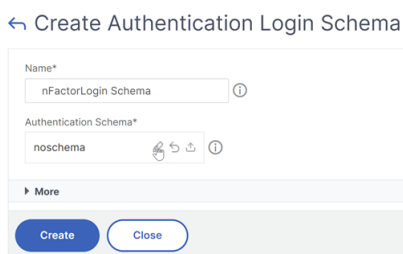

5. Click the **LoginSchema** folder to see the files in it.

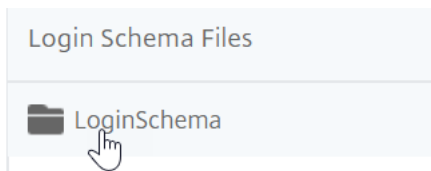

6. Select one of the files. You can see a preview on the right. The labels can be changed by clicking the **Edit** button on the top right.

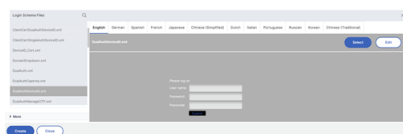


7. When you Save the changes, a new file is created under `/nsconfig/LoginSchema`.
8. On the top right, click **Select**.



9. Give the Login Schema a name, and click **More**.




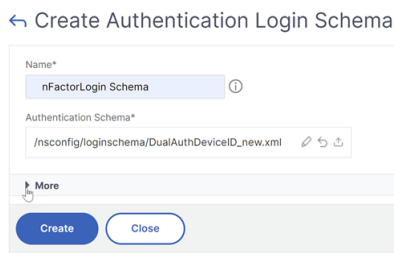

10. Use the user name and the password entered in the login schema for single sign-on (SSO) to a back-end service, for example StoreFront.

You can use the credentials entered in the login schema as your Single Sign-On credentials by using any of the following methods.

- Click **More** at the bottom of the **Create Authentication Login Schema** page and select **Enable Single Sign On Credentials**.
- Click **More** at the bottom of the **Create Authentication Login Schema** page and enter unique values for the user credential index and password credential index. These values can be between 1 and 16. Later you reference these index values in a traffic policy/profile by using the expression AAA.USER.ATTRIBUTE(#).

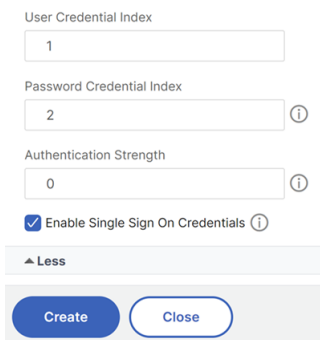

11. Click **Create** to create the login schema profile.

**Note:** If you edit the login schema file (.xml) later, for changes to be reflected you must edit the login schema profile and select the login schema (.xml) file again.

### Create and bind a login schema policy

To bind a login schema profile to an authentication, authorization, and auditing virtual server, you must first create a login schema policy. Login schema policies are not required when binding the login schema profile to an authentication policy label, as detailed later.

To create and bind a login schema policy:

1. Navigate to **Security > AAA - Application Traffic > Login Schema**.

2. On the **Policies** tab, click **Add**.
3. Use the **Profile** drop-down menu to select the Login Schema Profile you already created.
4. Enter an advanced policy expression in the **Rule** box, and click **Create**.
5. Navigate to **Security > AAA - Application Traffic > Virtual Servers**, and click edit to an existing authentication, authorization, and auditing virtual server.
6. In the Advanced Settings column, click **Login Schemas**.
7. In the Login Schemas section, click **No Login Schema**.
8. Select an authentication policy from the **Select Policy** drop-down list.

9. On the **Authentication Policies** page, click the radio button next to the authentication policy, and click **Select**. Only login schema policies appear in this list. Login schema profiles (without a policy) do not appear.

| NAME                                                          | RULE                                        |
|---------------------------------------------------------------|---------------------------------------------|
| <input checked="" type="radio"/> ischema_cst_deviceid         | HTTP.REQUEST.User-Agent*1.CONTAINS("NAC10") |
| <input type="radio"/> ischema_single_factor_deviceid          | HTTP.REQUEST.User-Agent*1.CONTAINS("NAC10") |
| <input checked="" type="radio"/> ischema_dual_factor_deviceid | HTTP.REQUEST.User-Agent*1.CONTAINS("NAC10") |
| <input type="radio"/> ischema_cst_single_factor_deviceid      | HTTP.REQUEST.User-Agent*1.CONTAINS("NAC10") |
| <input type="radio"/> ischema_cst_dual_factor_deviceid        | HTTP.REQUEST.User-Agent*1.CONTAINS("NAC10") |
| <input type="radio"/> ischema_asd                             | HTTP.REQUEST.User-Agent*1.CONTAINS("Auth0") |
| <input type="radio"/> ischema_dual_factor_builtin             | true                                        |
| <input type="radio"/> ischema_dual_factor_w_sso_cred_builtin  | true                                        |
| <input type="radio"/> ischema_dual_factor_tipped_builtin      | true                                        |

10. Click **Bind**.

## Advanced authentication policies

Authentication policies are a combination of policy expression, and policy action. If the expression is true, then evaluate the authentication action.

## Create advanced authentication policies


Authentication policies are a combination of policy expression and policy action. If the expression is true, then evaluate the authentication action.

You need authentication actions/servers (for example LDAP, RADIUS, CERT, SAML, and so forth) When creating an advanced authentication policy, there's a plus (Add) icon that lets you create authentication actions/servers.

Or you can create authentication actions (servers) before creating the advanced authentication policy. The authentication servers are located under **Authentication > Dashboard**. On the right, click Add and select a Server Type. The instructions for creating these Authentication Servers are not detailed here. See the Authentication –NetScaler 12 / NetScaler 12.1 procedures.

To create an Advanced Authentication Policy:

1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Policy**

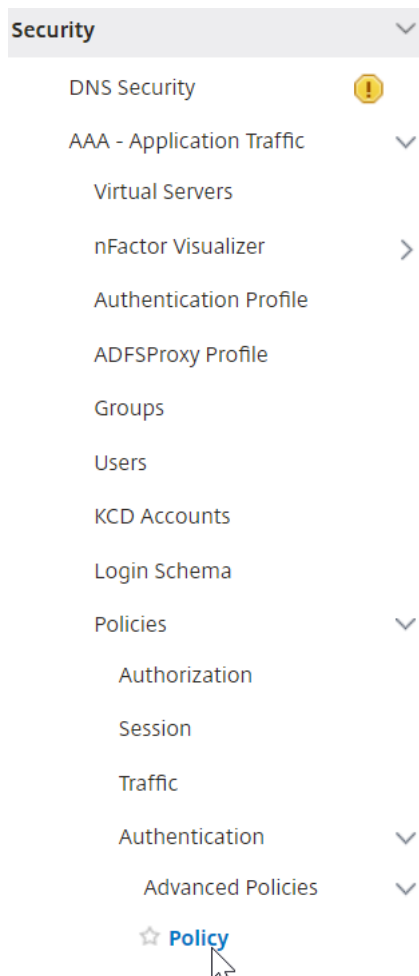

2. In the details pane do one of the following:

- To create a policy, click **Add**.
- To modify an existing policy, select the policy, and then click **Edit**.

3. In the **Create Authentication Policy** or **Configure Authentication Policy** dialog box, type or

select values for the parameters.

## ← Create Authentication Policy

Name\*  
 ⓘ

Action Type\*  
 ⓘ

Action\*

Expression\*  

Select Select Select

▶ More

- **Name** - The policy name. Cannot be changed for a previously configured policy.
- **Action Type** - The policy type: Cert, Negotiate, LDAP, RADIUS, SAML, SAMLIDP, TACACS, or WEBAUTH.
- **Action** - The authentication action (profile) to associate with the policy. You can choose an existing authentication action, or click the plus and create an action of the proper type.
- **Log Action** - The audit action to associate with the policy. You can choose an existing audit action, or click the plus and create an action.  
 You don't have any Actions configured, or to create an action, click **Add** and complete the steps.
- **Expression** - The rule that selects connections to which you want to apply the action that you specified. The rule can be simple ("true" selects all traffic) or complex. You enter expressions by first choosing the type of expression in the leftmost drop-down list beneath the Expression window, and then by typing your expression directly into the expression text area, or by clicking Add to open Add Expression dialog box and using the drop-down lists in it to construct your expression.)


- **Comment** - You can type a comment that describes the type of traffic that this authentication policy applies to. Optional.
4. Click **Create** and then click **Close**. If you created a policy, that policy appears in the Authentication Policies and Servers page.

Create additional advanced authentication policies as required based on your nFactor design.


### Bind first factor advanced authentication policy to authentication, authorization, and auditing

You can directly bind advanced authentication policies for the first Factor the authentication, authorization, and auditing virtual server. For the next factors, you must bind the advanced authentication policies to the authentication policy labels.

1. Navigate to **Security > AAA - Application Traffic > Virtual Servers**. Edit an existing virtual server.
2. On the left, in the Advanced Authentication Policies section, click **No Authentication Policy**.

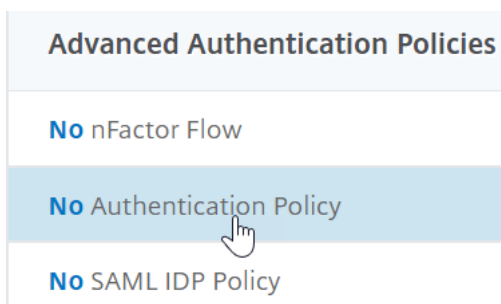

3. In **Select Policy**, click the text, **Click to select**.

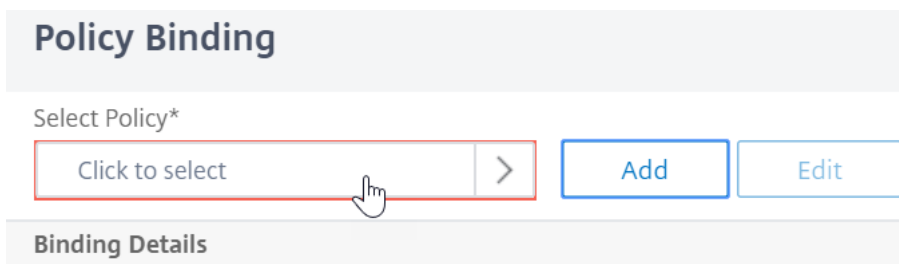

4. Click the radio button next to the **Advanced Authentication Policy**, and click **Select**.

Policy Binding / Authentication Policies

### Authentication Policies 1

Select Add Edit Delete Rename Show Bindings

Click here to search or you can enter Key : Value format

|                                     | NAME            | EXPRESSION |
|-------------------------------------|-----------------|------------|
| <input checked="" type="checkbox"/> | nFactor-adv-pol | true       |

Total 1

5. In the Binding Details section, the **Goto Expression** determines what happens next if this advanced authentication policy fails.
- If **Goto Expression** is set to **NEXT**, then the next advanced authentication policy bound to this authentication, authorization, and auditing Virtual Server is evaluated.
  - If **Goto Expression** is set to **END**, or if there are no more advanced authentication policies bound to this authentication, authorization, and auditing virtual server, then authentication is completed and marked as failed.

Policy Binding

### Policy Binding

Select Policy\*

nFactor-adv-pol >

► More

#### Binding Details

Priority\*

100

Goto Expression\*

NEXT NEXT END More...

6. In **Select Next Factor**, you can select can point to an authentication policy label. The next factor is evaluated only if the advanced authentication policy succeeds. Finally, click **Bind**.

Policy Binding

### Policy Binding

Select Policy\*

>
Add
Edit

► More

---

#### Binding Details

Priority\*

Goto Expression\*

▼
i

Select Next Factor

>
Add
Edit

Bind
Close

### Use extracted LDAP groups to select the next authentication Factor

You can use extracted LDAP groups to select the next authentication factor without actually authentication with LDAP.

1. When creating or editing an LDAP server or LDAP action, clear the **Authentication** check box.
2. In **Other Settings**, select appropriate values in **Group Attribute** and **Sub Attribute Name**.

### Authenticate the policy label

When you bind an advanced authentication policy to the authentication, authorization, and auditing Virtual Server and have selected a next factor, the next factor is evaluated only if the advanced authentication policy succeeds. The next factor that is evaluated is an authentication policy label.

The authentication policy label specifies a collection of authentication policies for a particular factor. Each policy label corresponds to a single factor. It also specifies the login form that must be presented to the user. The authentication policy label must be bound as the next factor of an authentication policy or of another authentication policy label.




**Note:** Every factor does not need a login schema. Login schema profile is required only if you are binding a login schema to an Authentication Policy Label.

### Create an authentication policy label

A policy label specifies the authentication policies for a particular factor. Each policy label corresponds to a single factor. The policy label specifies the login form that must be presented to the user. The policy label must be bound as the next factor of an authentication policy or of another authentication policy label. Typically, a policy label includes authentication policies for a specific authentication mechanism. However, you can also have a policy label that has authentication policies for different authentication mechanisms.

1. Navigate to **Security > AAA – Application Traffic > Policies > Authentication > Advanced Policies > Policy Label.**

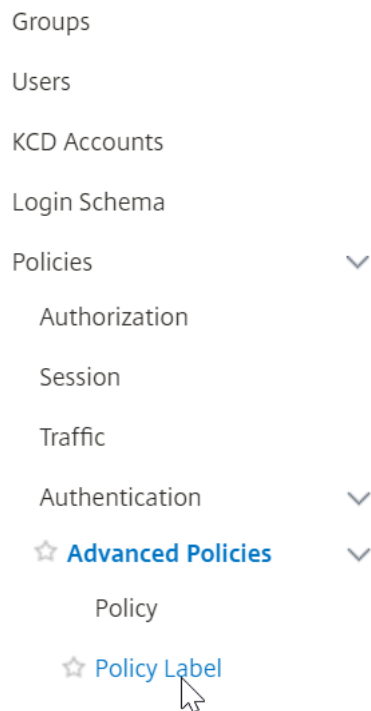

2. Click the **Add** button.

## Authentication Policy Labels 0

Add
Edit
Delete
Rename

🔍 Click here to search or you can enter Key : Value format

|                 | NAME |  | NUMBER OF BOUND POLICIES |
|-----------------|------|--|--------------------------|
| <i>No items</i> |      |  |                          |

3. Complete the following fields to create an authentication policy label:

a) Enter the **Name** for the new authentication policy label.

b) Select the **Login Schema** associated with authentication policy label. IF you do not want to display anything to the user, you can select a login schema profile that is set to no schema (LSHEMA\_INT).

c) Click **Continue**.

### ← Authentication Policy Label

**Create Authentication Policylabel**

Name\*

 i

Login Schema\*

▼

Add
Edit

Feature Type

 ▼

Comment

Continue

Cancel

4. In the **Policy Binding** section, click where it says **Click to select**.

5. Select the authentication policy that evaluates this factor.

**Authentication Policies** 1

Select Add Edit Delete Rename Show Bindings Global Bindings

🔍 Click here to search or you can enter Key : Value format

|                                     | NAME            | EXPRESSION | REQUEST  |
|-------------------------------------|-----------------|------------|----------|
| <input checked="" type="checkbox"/> | nFactor-adv-pol | true       | nfactor- |

Total 1 25 Pe

6. Complete the following fields:

a) Enter the **Priority** of the policy binding.

b) In **Goto Expression** select **NEXT** if you want to bind more advanced authentication policies to this factor or select **END**.

**Policy Binding**

Select Policy\*

nFactor-adv-pol > Add Edit

▶ **More**

**Binding Details**

Priority\*

100

Goto Expression\*

NEXT ▼

Select Next Factor

Click to select > Add Edit

Bind Close


7. In **Select Next Factor**, if you want to add another factor, click to select and bind the next authentication policy label (next factor).

If you do not select the next factor, and if this advanced authentication policy succeeds, then authentication is successful and complete.

8. Click **Bind**.

9. You can click **Add Binding** to add more advanced authentication policies to this policy label

(factor). Click **Done** upon completion.

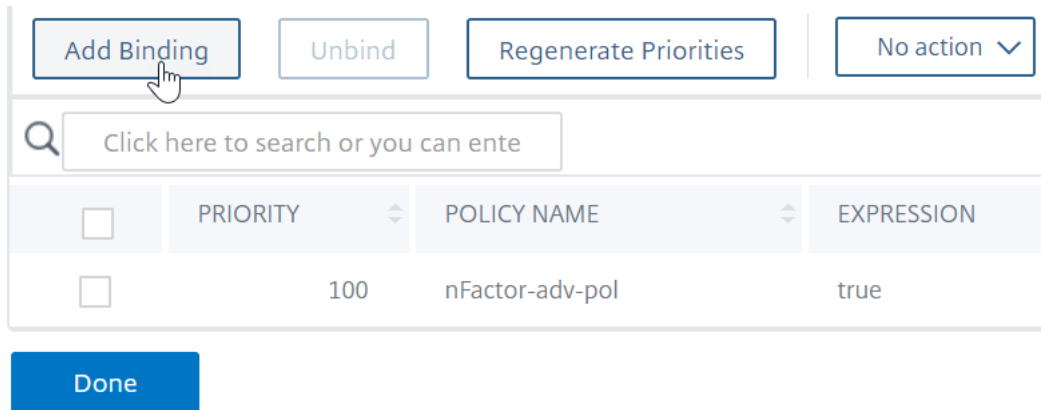


### Bind authentication policy label

After you create the policy label, you bind it to an existing advanced authentication policy binding to chain the factors together.


You can select the next factor when editing an existing authentication, authorization, and auditing virtual server that has an advanced authentication policy bound or when editing a different policy label to include the next factor.

### To edit an existing authentication, authorization, and auditing virtual server that has an advanced authentication policy already bound to it


1. Navigate to **Security > AAA –Application Traffic > Virtual Servers**. Select the virtual server and click **Edit**.
2. On the left, in the **Advanced Authentication Policies** section, click an existing authentication policy binding.
3. In **Select Action**, click **Edit Binding**.

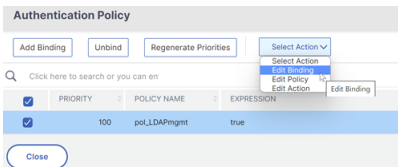

4. Click **Select Next Factor** and select an existing authentication policy label (next factor).

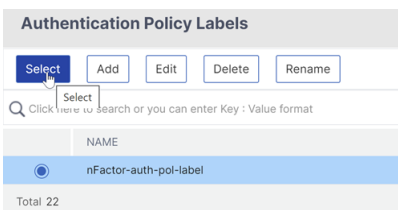


 - Click **Bind** in the **Policy Binding** page. You can see the **NEXT FACTOR** column with the next factor details on the extreme right.




### To add a policy label next factor to a different policy label

- Navigate to **Security > AAA –Application Traffic > Policies > Authentication > Advanced Policies > PolicyLabel**.
- On the **Authentication Policy Labels** page, select an authentication policy label and click **Edit**.
- On the **Authentication Policies** page, select an authentication policy label and in **Select Action**, click **Edit Binding**.

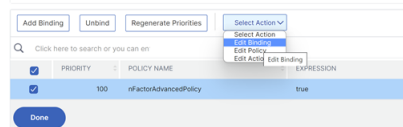

- In **Binding Details > Select Next Factor**, click to select the next factor.
- Choose the policy label for the next factor and click the **Select** button.
- Click **Bind** in the **Policy Binding** page. On the **Authentication Policy Label** page, you can see the **NEXT FACTOR** column with the next factor details on the extreme right.

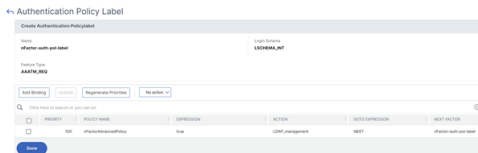

## nFactor for NetScaler Gateway

To enable nFactor on the NetScaler Gateway, an authentication profile must be linked to an authentication, authorization, and auditing virtual server.

### Create authentication profile to link an authentication, authorization, and auditing virtual server with NetScaler Gateway virtual server

- Navigate to **NetScaler Gateway > Virtual Servers** and select an existing gateway virtual server to edit.
- In **Advanced Settings**, click **Authentication Profile**.

3. Click **Add** under **Authentication Profile**

The screenshot shows the 'Authentication Profile' configuration interface. At the top, there is a header 'Authentication Profile'. Below it, a dropdown menu is open, showing 'Add' and 'Edit' buttons. Below the dropdown are 'OK' and 'Done' buttons.

4. Enter the name for the authentication profile and click where it says **Click to select**.

The screenshot shows the 'Create Authentication Profile' dialog. The 'Name\*' field contains 'nFactorGateway'. The 'Authentication Virtual Server\*' dropdown shows 'Click to select'. 'Add' and 'Edit' buttons are visible. 'Create' and 'Close' buttons are at the bottom.

5. In **Authentication Virtual Server**, select an existing server that has login schema, advanced authentication policy, and authentication policy labels configured. You can also create an authentication virtual server. The authentication, authorization, and auditing virtual server does not need an IP address. Click **Select**.

6. Click **Create**.

The screenshot shows the 'Create Authentication Profile' dialog. The 'Name\*' field contains 'nFactorGateway'. The 'Authentication Virtual Server\*' dropdown now shows 'nFactorAuthVserver'. 'Add' and 'Edit' buttons are visible. 'Create' and 'Close' buttons are at the bottom.

7. Click **OK** to close the Authentication Profile section.

**Note:** If you have configured one of the factors as client certificates, then must configure the SSL parameters and CA certificate.

After you have completed linking the authentication profile to an authentication, authorization, and auditing virtual server, and when you browse to your NetScaler Gateway, you can view the nFactor authentication screens.

### Configure SSL parameters and CA certificate

If one of the authentication factors is a certificate, then you must perform some SSL configuration on the NetScaler Gateway virtual server.

1. Navigate to **Traffic Management > SSL > Certificates > CA Certificates**, and install the root certificate for the issuer of the client certificates. Certificate Authority certificates do not need key files.

If default SSL Profiles are enabled, then you have already created an SSL Profile that has Client Authentication enabled.

2. Navigate to **NetScaler Gateway > Virtual Servers**, and edit an existing NetScaler Gateway virtual server that is enabled for nFactor.
  - If default SSL Profiles are enabled, click the edit icon.
  - In the SSL Profile list, select the SSL Profile that has Client Authentication enabled and set to OPTIONAL.
  - If default SSL Profiles are not enabled, click the edit icon.
  - Check the Client Authentication check box.
  - Ensure that Client Certificate is set to Optional
3. Click OK.
4. In Certificates section, click **No CA Certificate**.
5. In Select CA Certificate, click to select and select the root certificate for the issuer of the client certificates.
6. Click Bind.

Note: You might have to also bind any Intermediate CA Certificates that issued the client certificates.

### **Configure NetScaler Gateway traffic policy for nFactor single sign-on to StoreFront**

For single sign-on to StoreFront, nFactor defaults to using the last entered password. If LDAP is not the last entered password, then you must create a traffic policy/profile to override the default nFactor behavior.

1. Navigate to **NetScaler Gateway > Policies > Traffic**.
2. In the **Traffic Profiles** tab, click **Add**.
3. Enter a name for the traffic profile. Select the **HTTP** protocol.  
In **Single Sign-on**, select **ON**.

← Create Citrix Gateway Traffic Profile

4. In the **SSO Expression**, enter a AAA.USER.ATTRIBUTE(#) expression that matches the indexes specified in the login schema and click **Create**.

**Note**

AAA.USER expression is now implemented to replace the deprecated HTTP.REQ.USER expressions.

5. Click **Traffic Policies** tab, and click **Add**.
6. Enter a name for the policy. Select the traffic profile created in the previous step. In **Expression**, enter an advanced expression, and click **Create**.

← Create Citrix Gateway Traffic Policy

7. Navigate to **NetScaler Gateway > NetScaler Gateway Virtual Server**.
  - Select an existing virtual server and click **Edit**.



- In the **Policies** section, click the **+** sign.
- In **Choose Policy**, select **Traffic**.
- In **Choose Type**, select **Request**.
- Select the traffic policy that you have created and then click **Bind**.

### Sample snippet on nFactor configuration by using the CLI

To understand the step-wise configurations for nFactor authentication, let us consider a two-factor authentication deployment where the first factor is LDAP authentication and the second factor is RADIUS authentication.

This sample deployment requires the user to log in to both factors using a single login form. Therefore, we define a single login form that accepts two passwords. The first password is used for LDAP authentication and the other for RADIUS authentication.

Here are the configurations that are performed:

1. Configure the load balancing virtual server for authentication

```
add lb vsrver lbvs89 HTTP 1.136.19.55 80 -AuthenticationHost auth56.aatm.com -
Authentication ON
```

2. Configure the authentication virtual server.

```
add authentication vsrver auth56 SSL 10.106.30.223 443 -AuthenticationDomain aatm.com
```

3. Configure the login schema for the login form and bind it to a login schema policy.

```
add authentication loginSchema login1 -authenticationSchema login-2passwd.xml -
userCredentialIndex 1 -passwordCredentialIndex 2
```

**Note:**

Use the user name and one of the passwords entered in the login schema for single sign-on (SSO) to a back-end service, for example StoreFront. You can reference these index values in the traffic action by using the expression AAA.USER.ATTRIBUTE(#). The values can be between 1 and 16.

Alternatively, you can use the credentials entered in the login schema as your Single Sign-On credentials by using the following command.

```
1 add authentication loginSchema login1 -authenticationSchema login
-2passwd.xml -SSOCredentials YES
2
3 add authentication loginSchemaPolicy login1 -rule true -action
login1
```

4. Configure a login schema for the pass-through and bind it to a policy label

```

1 add authentication loginSchema login2 -authenticationSchema
 noschema
2
3 add authentication policylabel label1 -loginSchema login2

```

5. Configure the LDAP and RADIUS policies.

```

1 add authentication ldapAction ldapAct1 -serverIP 10.17.103.28 -
 ldapBase "dc=aaatm, dc=com" -ldapBindDn administrator@aaatm.com
 -ldapBindDnPassword 81
 qw1b99ui971mn1289op1abc12542389b1f6c111n0d98e1d78ae90c8545901 -
 encrypted -encryptmethod ENCMTHD_3 -ldapLoginName
 samAccountName -groupAttrName memberOf -subAttributeName CN
2
3 add authentication Policy ldap -rule true -action ldapAct1
4
5 add authentication radiusAction radius -serverIP 10.101.14.3 -
 radKey
 n231d9a8cao8671or4a9ace940d8623babca0f092gfv4n5598ngc40b18876hj32
 -encrypted -encryptmethod ENCMTHD_3 -radNASip ENABLED -
 radNASid NS28.50 -radAttributeType 11 -ipAttributeType 8
6
7 add authentication Policy radius -rule true -action radius

```

6. Bind the login schema policy to the authentication virtual server

```

1 bind authentication vserver auth56 -policy login1 -priority 1 -
 gotoPriorityExpression END

```

7. Bind the LDAP policy (first factor) to the authentication virtual server.

```

1 bind authentication vserver auth56 -policy ldap -priority 1 -
 nextFactor label1 -gotoPriorityExpression next

```

8. Bind the RADIUS policy (second factor) to the authentication policy label.

```

1 bind authentication policylabel label1 -policyName radius -
 priority 2 -gotoPriorityExpression end

```

## NFactor configuration using the latest visualizer

August 20, 2024

### Important information:

This topic contains instructions to configure the nFactor flow using the latest visualizer. The old visualizer described in the [nFactor Visualizer for simplified configuration](#) article is planned for

deprecation in the upcoming releases.

Starting from release 14.1 build 29.x,


NetScaler supports the latest nFactor visualizer. The latest visualizer is an enhanced version of the old visualizer. It provides a new look and feel, and is more intuitive than the old visualizer.

The latest visualizer supports the following features:


- You can build a prototype of your nFactor flow even before configuring the associated entities such as policies, login schema, and authentication server. The old visualizer allowed you to create the second factor only after the policies and login schema of the first factor are configured.
- The View nFactor option is introduced on the Authentication Policy page. This page displays a summary of the nFactor flows created. For the flows configured using the GUI or CLI, NetScaler automatically displays them on the latest visualizer.
- When creating the nFactor flow, you can name its entities at any point. This functionality is not supported in the old visualizer.

To configure the nFactor flow using the latest visualizer:

1. Navigate to **Security > AAA-Application traffic > Virtual Servers**.
2. Select an authentication virtual server and click **Edit**.
3. In the **Advanced Authentication Policies** section, select the authentication policy.

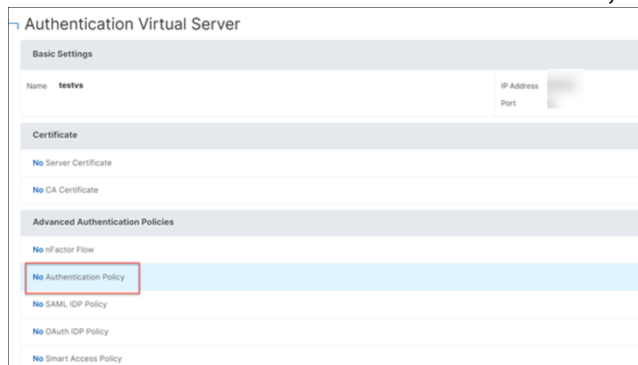


4. On the **Create NFactor** page, configure the nFactor flow.

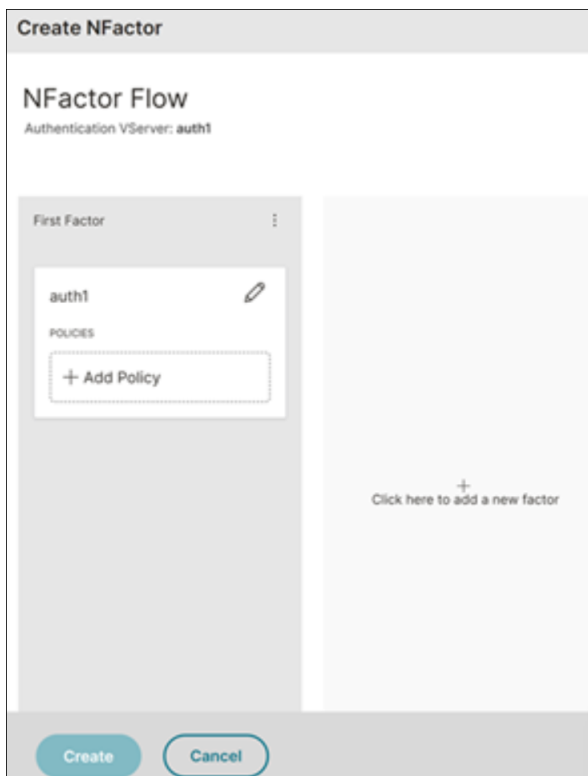


### View the nFactor flow


1. Navigate to **Security > AAA - Application Traffic > Authentication Virtual Servers**.
2. On the **Authentication Virtual Server** page, select the authentication policy under **Advanced Authentication Policies**.

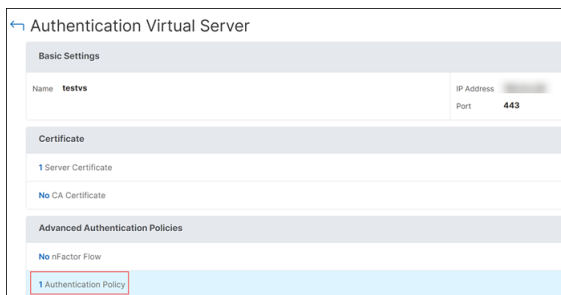

 3. On the **Authentication Policy** page, select the policy and click **View nFactor**.



You can now view a summary of your nFactor flow.

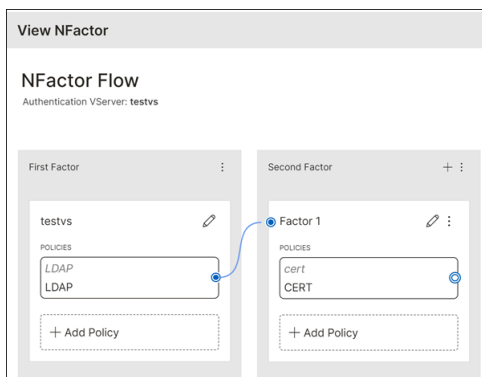

**Notes:**

- Currently, NetScaler does not support modifying an nFactor flow once created.
- When configuring a flow, if an entity (login schema, policy, or policy label) is created with a duplicate name, the GUI displays an error without specifying the name of the duplicate entity. Clicking **Create** results in the loss of the entire flow.


**Scenario 1: LDAP group extraction as the first factor followed by LDAP or Client certificate authentication based on group membership as the second factor**

In this scenario, admins can:

1. Configure LDAP group extraction in the first factor.
2. Based on the groups extracted during the first factor, admins can configure the next factors with LDAP or certificate authentication.

On the latest visualizer:


1. Navigate to **Security > AAA-Application traffic > Virtual Servers**.
2. On the **Authentication Virtual Servers** page, select an authentication virtual server and click **Edit**. In this scenario, “testvs” is the authentication server used.

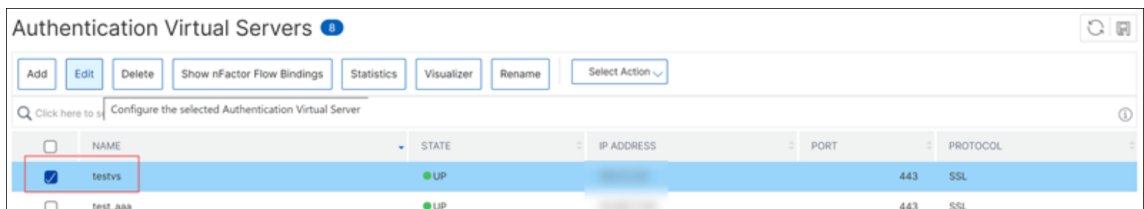

3. Create a login schema for the first factor.
  - On the **Authentication Virtual Server** page, navigate to the **Login Schemas** section.


**Note:**

In this scenario, “OnlyUsername.xml” is used as the login schema for the first factor.

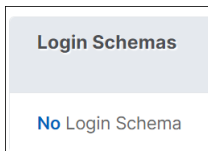


4. On the **Policy Binding** page, add a login schema policy and profile.

- To add a policy, on the **Policy Binding** page, click **Add** next to the **Select Policy** field.

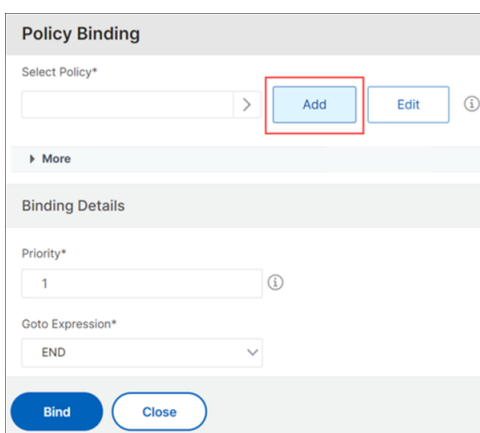

- To add a profile, on the **Create Authentication Login Schema Policy** page, click **Add** next to the **Profile** field.

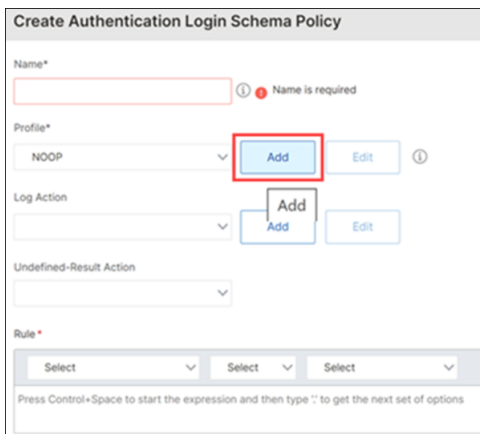

- On the **Create Authentication Login Schema** page, select “OnlyUsername” as the login schema.
- Click **Create**.

**Create Authentication Login Schema**

Name\*  
OnlyUserName ⓘ

Authentication Schema\*  
/nsconfig/loginschema/LoginSchema/OnlyUsername.xml ⓘ ↻ ↺

▶ More

Create Close

- On the **Create Authentication Login Schema Policy** page, click **Create**. The authentication login schema policy and the authentication login schema are now created.

**Create Authentication Login Schema Policy**

Name\*  
Onlyusername ⓘ

Profile\*  
onlyusername Add Edit ⓘ

Log Action  
Add Edit

Undefined-Result Action

Rule\*  
Select Select Select  
true

Comments

Create Close

5. Bind the authentication login schema policy.

- On the **Policy Binding** page, select the configured authentication login schema policy, configure the binding details, and click **Bind**.

**Policy Binding**

Select Policy\*  
Onlyusername > Add Edit ⓘ

Expression  
true

Profile  
onlyusername

▲ Less

**Binding Details**


Priority\*  
1 ⓘ

Goto Expression\*  
END ▾


Bind Close

6. Create the first factor.

- On the **Authentication Virtual Server** page, navigate to the **Advanced Authentication Policies** section and select the authentication policy.

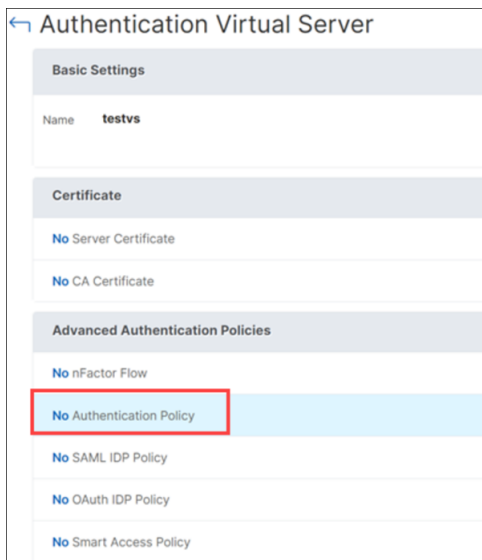

- On the **Create NFactor** page, configure the LDAP group extraction policy for the first factor.

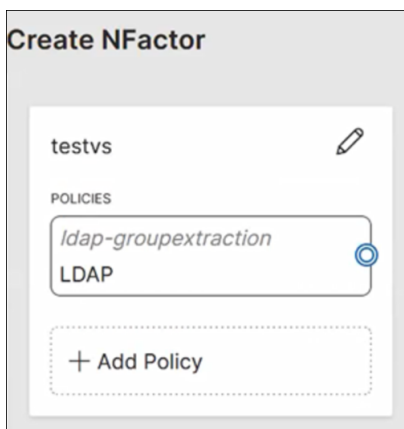


7. Click + to add the second factor.

**Note:**


The second factor is for the pass-through. This means that there is no login schema for this factor. Configure 2 policies (LDAP and certificate policies) for 2 different user groups for authentication. If the rules configured for this policy are met, NetScaler does not perform any authentication for this factor.



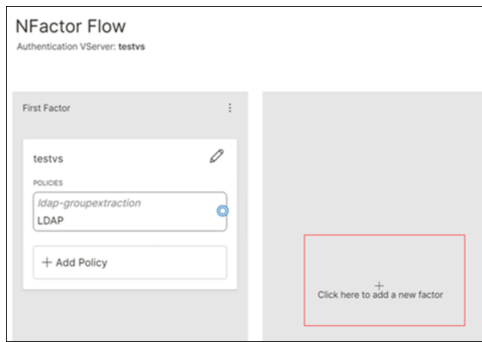


- Configure policies for different user groups. In this scenario, based on the groups extracted in the first factor, you can determine the second factor as LDAP or certificate-based authentication.


The following screenshot displays the policy expression and server details (LDAP) for “group1” users.

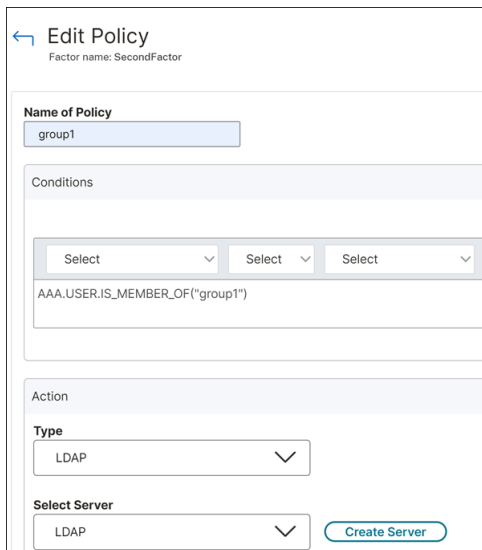

The following screenshot displays the policy expression and server details (certificate-based authentication) for “group2” users.

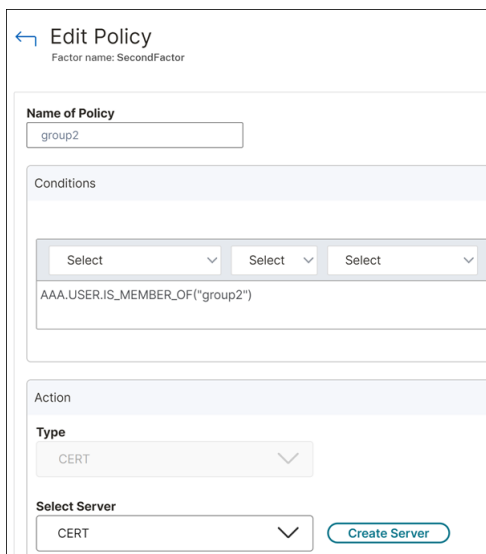

8. On the **Configure Factor** page, click **Add**.
9. On the **NFactor flow** page, link the first and second factors using the blue dots and click **Create**.

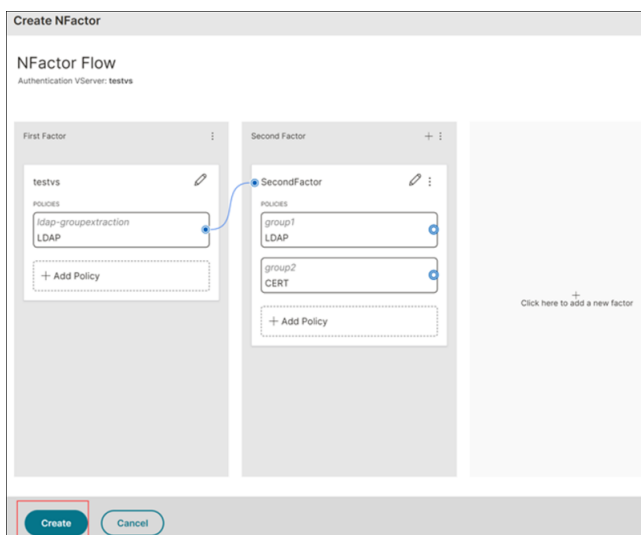

10. Click **Done**.


**Scenario 2: Domain drop-down list as the first factor followed by different policy evaluations based on the domain selection**

In this scenario, admins can:


1. Configure the Azure EntraID and AD credentials for users of domain-type Employee.
2. Configure the Google IdP and AD credentials for users of domain-type Partner.
3. Configure the Okta and AD credentials for users of domain-type Vendor.

On the latest visualizer:

1. Navigate to **Security > AAA-Application traffic > Virtual Servers**.
2. Select the authentication virtual server for the nFactor flow and then click **Edit**. In this scenario, “auth1” is the virtual server for which the nFactor flow is created.



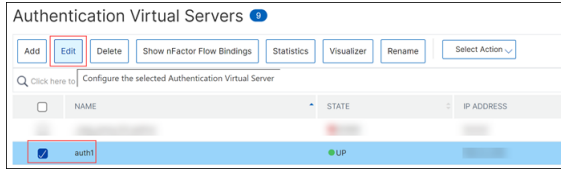


3. Under **Advanced Authentication Policies**, select an authentication policy.

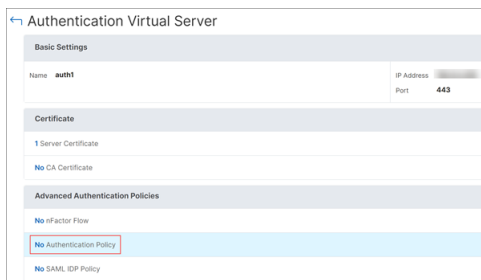


4. On the **First Factor** tile, configure SAML policies.


- In this scenario, for the first factor, the policy expressions are configured for users of 3 different domains; Employee, Partner, and Vendor.

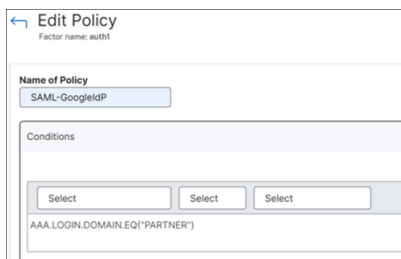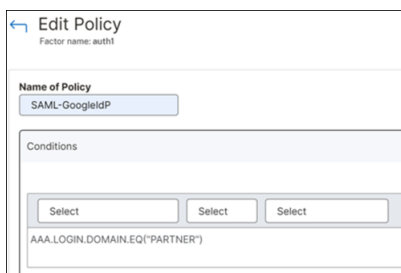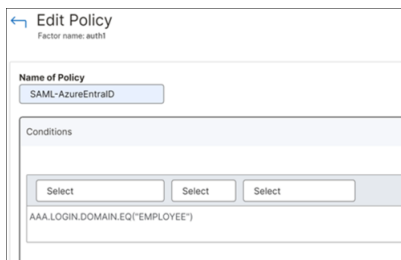


5. On the **Second Factor** tile, configure the login interface and click **Add**.

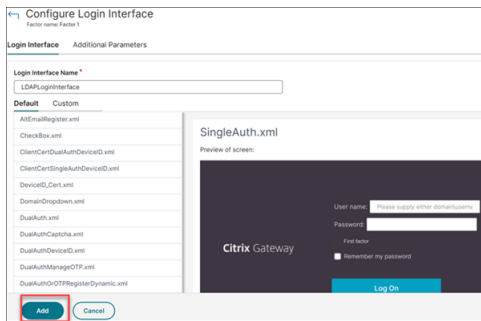

6. Configure the LDAP policy and click **Add**.

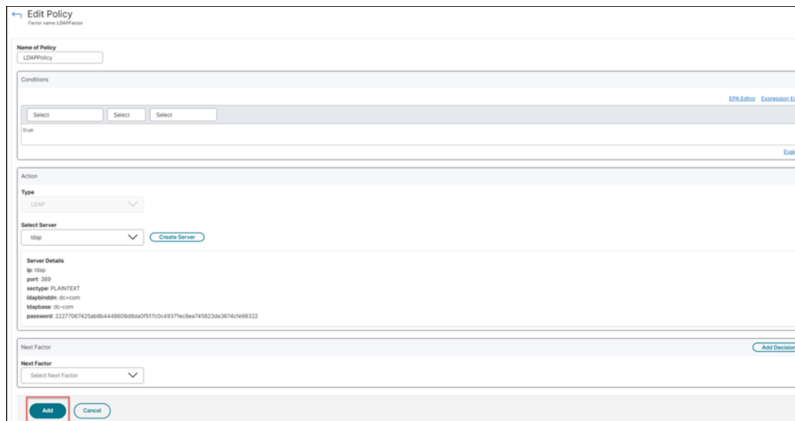

7. Link both the factor tiles and click **Create**.

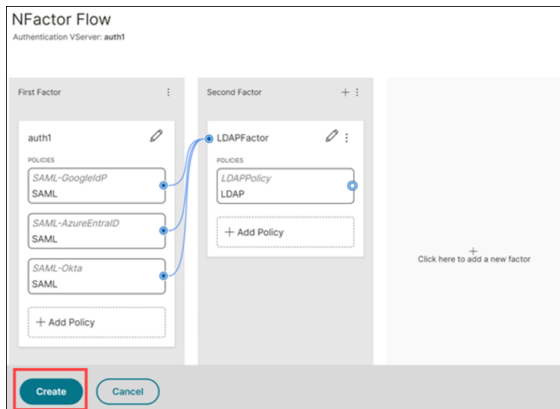

## nFactor visualizer for simplified configuration

August 18, 2024

Starting from NetScaler release 13.0 build 36.27, nFactor configuration through the GUI is simplified by using the nFactor Visualizer. The nFactor Visualizer helps admins add multiple factors without losing

track of each factor. The group of factors that are built in the flow are displayed in one place. Admins can add authentication success and failure paths separately. After creating the flow, admins have to bind the nFactor flow to an authentication virtual server.


**Note**

- The visualizer described in this article is planned for deprecation.
- All factors created by an admin in the nFactor flow are retained for any future use.
- From NetScaler feature release 13.0 build 64.35 and above, using the nFactor visualizer, you can start the nFactor flow with a decision block.

Previously, nFactor configuration was cumbersome wherein the admins had to visit many pages to configure it. If a change was required, the admins had to revisit the configured sections each time. Also, there was no option to view the complete configuration in one place.

**Use Case 1: RADIUS followed by LDAP authentication, else fallback to Captcha through nFactor Visualizer**


Achieve RADIUS authentication as the first-level authentication followed by LDAP authentication. In case RADIUS fails, authentication must fall back to Captcha.

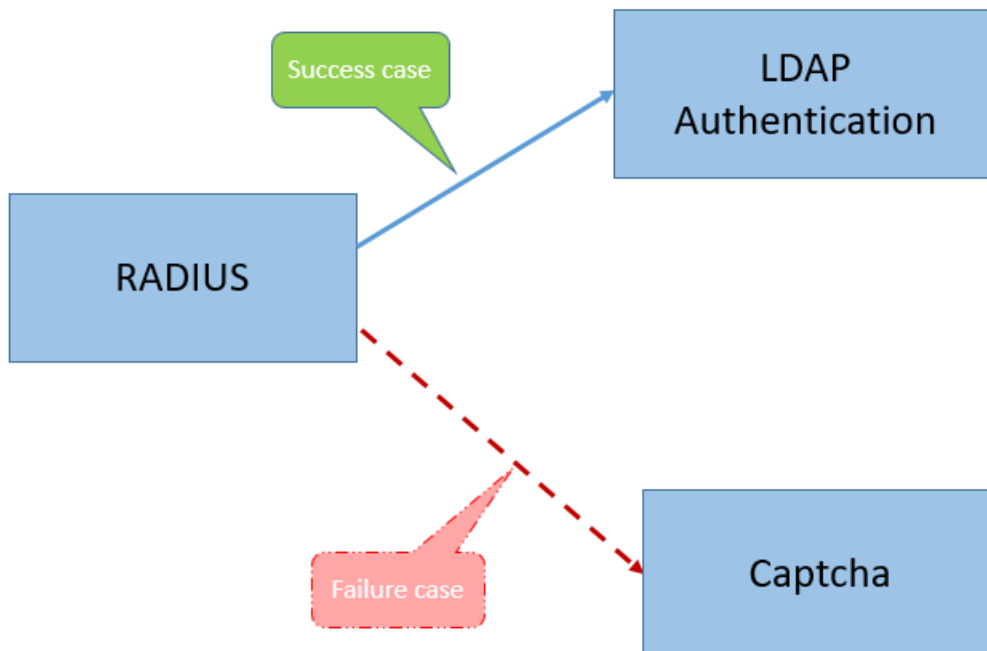

To achieve this use case, you can use the nFactor Visualizer. The Visualizer provides various controls that can be used to add this flow and the related items.

The following figure displays the nFactor flow created for the previous mentioned use case by using the visualizer.


## ← nFactor Flow

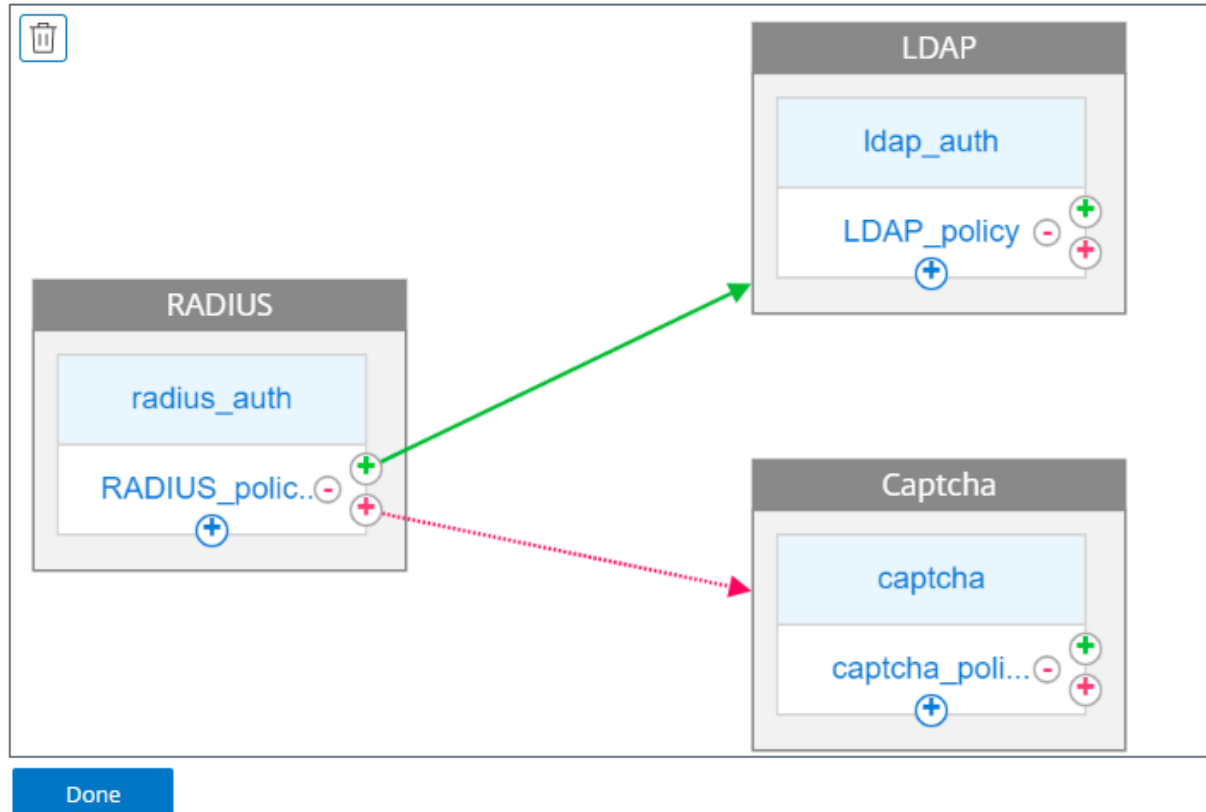

- **RADIUS.** You configure RADIUS as the first factor. You add a login schema and a policy. In this example, radius\_auth and RADIUS\_policy are the login schema and policy that is added. For the RADIUS\_Policy, you can add another factor for the success case. In this example, an LDAP factor block is added for the success case. For the failure case, you can add a Captcha factor.
- **LDAP.** You configure LDAP authentication as the second factor. You add a login schema and a policy. In this example, ldap\_auth and LDAP\_policy are the login schema and policy that is added.
- **Captcha.** For the RADIUS policy failure case, you create a Captcha factor. In this example, captcha and captcha\_policy are the login schema and policy that is added.


### Use Case 2: LDAP followed by RADIUS/Certificate authentication with Captcha based on LDAP Group Membership through nFactor Visualizer

Achieve RADIUS authentication as the first-level authentication followed by LDAP authentication. In case RADIUS fails, authentication must fall back to Captcha.

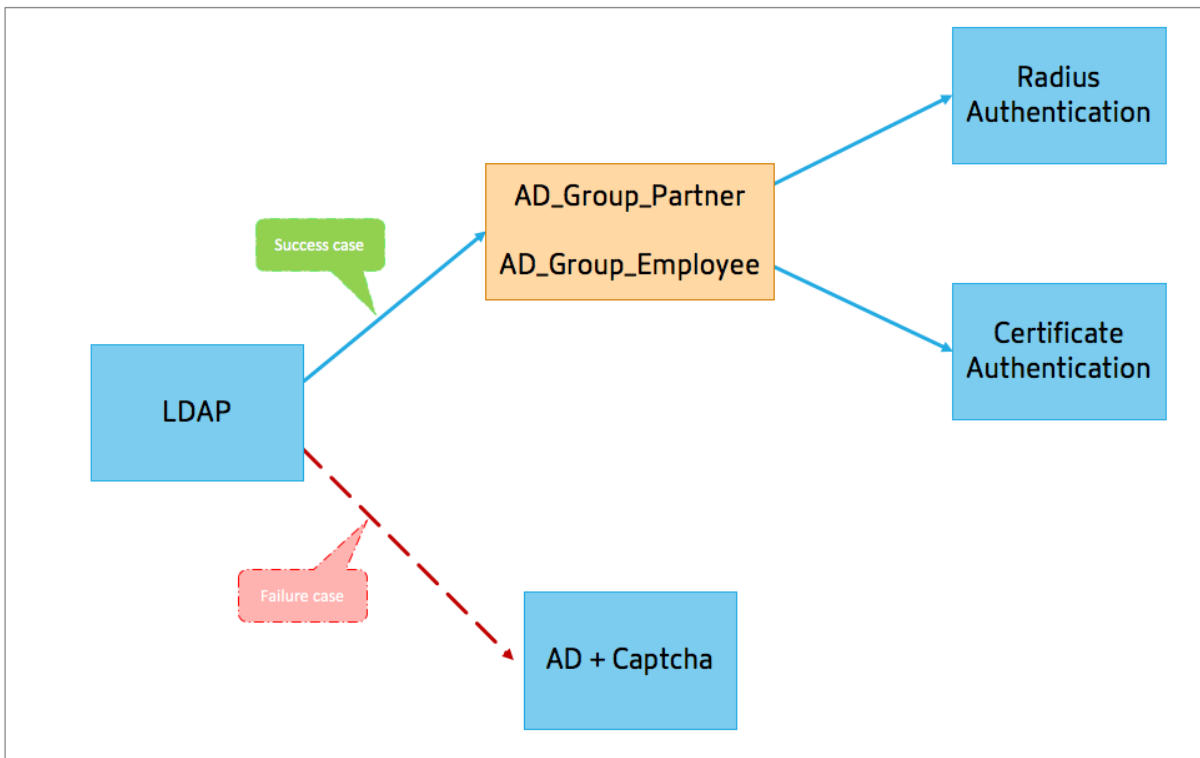

The following figure displays the nFactor flow created for the previous mentioned use case by using the visualizer.

← nFactor Flow

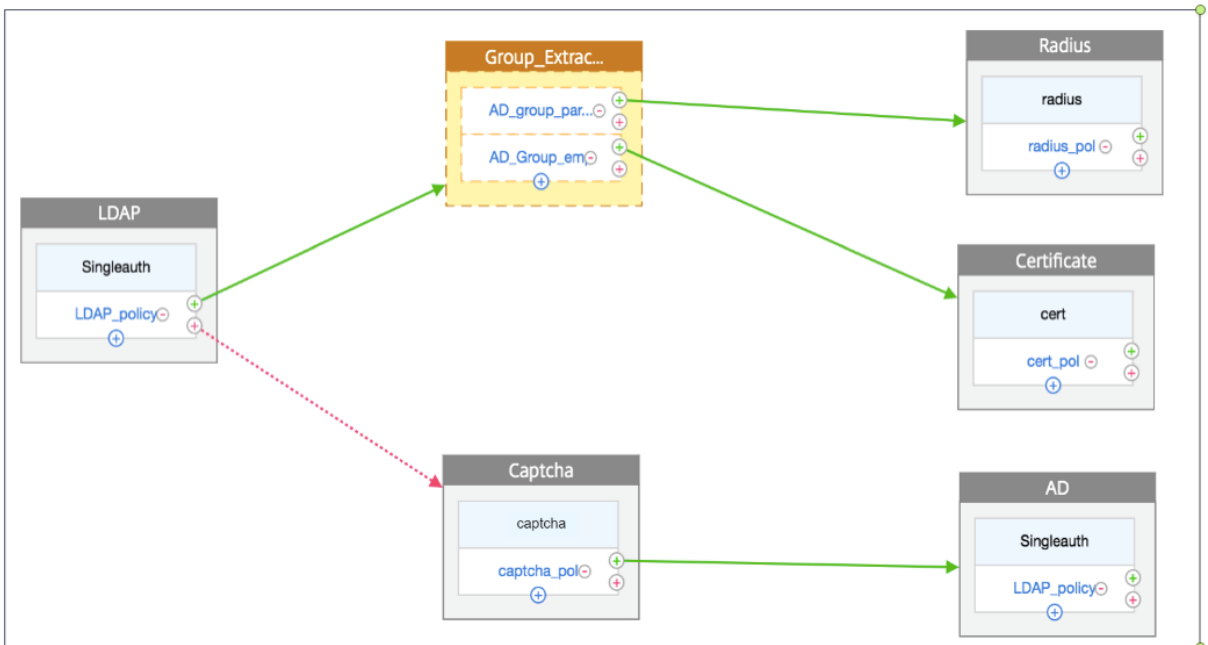

- **LDAP.** You configure LDAP as the first factor. You add a login schema and a policy. In this example SingleAuth and LDAP\_Policy are the login schema and policy that is added. For the

LDAP\_Policy, you can add another factor for the success case. In this example, a decision block is added for the success case. For the failure case, you can add Captcha followed by AD factor.

- **Group Extraction LDAP.** Is the decision block added for the LDAP success case. The decision block is used as a branch out factor to branch out the users based on the policy rules. Visualizer allows configuring only a NO\_AUTHN policy for the decision block.

In this example, Group\_Extraction\_LDAP is the decision block. You add two policies ([AD\\_Group\\_Partner](#) and [AD\\_Group\\_Employee](#)) to this decision block. As explained in the use cases, all requests routed through AD\_Group\_Partner policy use RADIUS authentication. Therefore, you connect the success case of this policy to the next factor that is RADIUS factor. Similarly, all requests routed through AD\_Group\_Employee policy use certification authentication. Therefore, you connect the success case of this policy to the next factor that is the certification authentication factor.

- **RADIUS.** For the AD\_Group\_Partner policy success case, you create the RADIUS authentication factor.
  - **Certificate.** For the AD\_Group\_Employee policy success case, you create the certificate authentication factor.
- **Captcha.** For the LDAP policy failure case, you create two next factors, Captcha and AD factor.

#### Note

- If you have a use case to branch out as a first thing, then you can either create two flows and bind separately or create one flow with the first one as branch out, and bind it to the virtual server.
- If you have multiple blocks, and to view the entire flow in the nFactor Flow screen, click the visualizer and drag the flow to the extreme left.
- We recommend that you modify the nFactor flows using the nFactor Flows page only.

## To configure nFactor by using the nFactor Visualizer

#### Note

The following nFactor configuration is a simple example that helps you accomplish the Use Case 1 scenario configurations.

1. Navigate to **Security > AAA –Application Traffic > nFactor Visualizer > nFactor Flows**.
2. Click **Add**.
3. On the **nFactor Flows** page, click **+** to add a first factor for the flow. The first factor also serves as an identifier for this nFactor flow.



4. Enter the factor name and click **Create**.

**Add Factor**

This factor name will also serve as the name of the nFactor flow.

Create Factor  Create decision block

Factor Name

Comment


The factor name appears on the factor block in the nFactor Flow page.

**Note**

We recommend that you do not use policy label names such as, `__root` and `__<flow_name>` as suffix and `_db_` as prefix. It is used as the factor names that are created in the nFactor flow.

5. Once the RADIUS factor is created, the Add Schema and Add Policy must be created.

## nFactor Flow

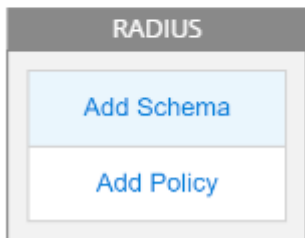

**Note**

For more information, see [nFactor concepts, entities, and terminology](#).

6. Click **Add Schema**. You can either add a new login schema or select an existing login schema from the **Authentication Login Schema** list.

**Choose Login Schema**

Login schema is a login form which is displayed to the user for this factor.

Authentication Login Schema\*

- To create a login schema, click **Add** and in the **Create Authentication Login Schema** page, enter the name for the schema. Click **Edit** (pencil icon) to select the **Login Schema Files** from the list.

**Create Authentication Login Schema**

Name\*  
radius\_auth

Authentication Schema\*  
/nsconfig/loginschema/LoginSchema/SingleAuthDeviceID.xml

More

Create Close

- Click **Add Policy**. You can either create a new policy or choose an existing authentication policy.

**Choose Authentication Policy**

Select Policy\*  
nFactorAdvancedPolicy Add Edit

Binding Details

Priority\*  
100

Goto Expression\*  
NEXT

Add Close

- To create a new policy, click **Add** and in the **Create Authentication Policy** page, enter the name for the policy and click **Create**.

**Create Authentication Policy**

Name\*


Action Type\*  
RADIUS

Expression\*

More

Create Close

- After you add a login schema and policy to the factor, the login schema and policy appear on the factor in the Visualizer as displayed in the following figure. For any given factor, you can add multiple policies and define the next factor for the success and failure of each policy. You can also remove the policies that are part of the factor.

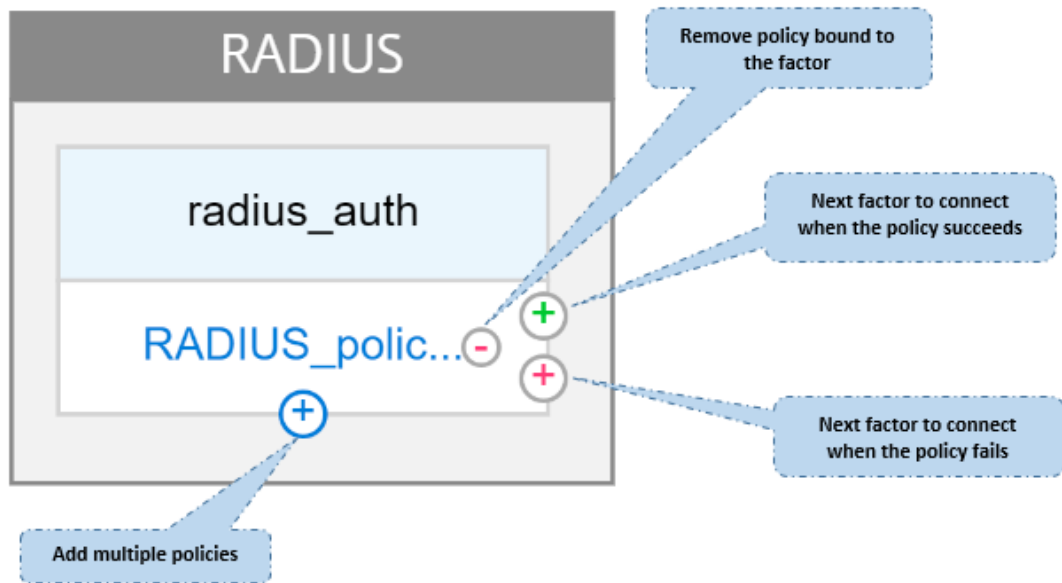

11. After you create the flow, you can then bind the nFactor flow to an authentication virtual server.

### Adding the next factor

To add the next factor, you can select one of the following options as per your requirement:

- **Create Factor.** Create a factor. Each factor that is created in a flow is exclusive to that flow.
- **Create a decision block.** Create a decision block to serve as a branch-out factor. You cannot add a login schema to the decision block. Visualizer allows configuring only a NO\_AUTHN policy for the decision block.

#### Note

You can only add or edit the decision block through the NetScaler GUI. There is no option to configure the decision block from the CLI command.

- **Connect to an existing Factor.** Select an existing factor as your next factor. All the factors that appear in the existing list are created exclusively for that flow.
- **None.** Remove an existing connection.

Next Factor to Connect

Create Factor
  Create decision block
  Connect to existing Factor
  None

Add a new factor to connect to.


Factor Name\*

Radius

Create Close

## To bind the nFactor flow to authentication server

1. On the **nFactor Flows** page, select an nFactor flow that you prefer to bind to an authentication virtual server.
2. Click the horizontal ellipsis and select **Bind to Authentication Server** or on the **nFactor Flows** page, click **Bind to Authentication Server**.

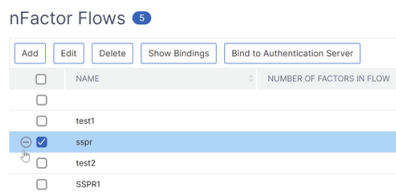

3. On the **Bind to Authentication Server** page, you can perform the following actions:
  - To add a **Authentication Virtual Server**, click **Add**.
  - To select an existing authentication server from the list, click **Authentication Server** field.
4. Click **Show Bindings** from the hamburger icon to view the bindings.
5. To unbind the authentication server from the specific nFactor flow, perform the following steps:
  - On the **nFactor Flows** page, click **Show Bindings** from the hamburger icon.
  - On the **Authentication Server Bindings** page, select the authentication server to unbind and click **Unbind**. Click **Close**.

For more information on nFactor authentication, see the following topics:

- Concept: [Multi-Factor \(nFactor\) authentication](#).
- Workflow: [How nFactor authentication works](#).
- Configuration: [Configuring nFactor authentication](#).

## Enhancements to the nFactor Visualizer

Starting from NetScaler release 13.0 build 41.20, the following enhancements are made in the nFactor Visualizer.

- Admins can move the created factors to the trash icon.
- View the nFactor flows in the Authentication Virtual server page.

**Trash icon.** Admins can only delete the nodes that have no connections. However, the underlying policies or the schemas that are created for the factor are not deleted if the factor is moved to trash.

To view the trash icon,

1. Navigate to **Security > AAA –Application Traffic > nFactor Visualizer > nFactor Flows**. You can view the trash icon on the top left corner.
2. To delete the factor, click the factor block and drag it to trash.

**View nFactor flow from Authentication Virtual Server.** Admins can also view the created nFactor flows from the Authentication Virtual Server page.

To view the nFactor flow from Authentication Virtual Server page,

1. Navigate to **Security > AAA –Application Traffic > Virtual Servers**. On the **Authentication Virtual Servers** page, you can perform the following steps:
  - To add an authentication virtual server, click **Add**.
  - To edit an existing authentication virtual server, click **Edit** option from the details pane.
2. On the **Authentication Virtual Server** page, you can view the **nFactor Flow** option under **Advanced Authentication Policies**.
3. If there is no nFactor flow bound to the virtual server, you can click **No nFactor Flow** option under **Advanced Authentication Policies** section to either add a new nFactor flow or select the existing nFactor flow from the list.

## nFactor Extensibility

May 2, 2023

nFactor authentication framework provides the flexibility of adding customizations to make the logon interface more intuitive for rich user experience. You can add custom login labels, custom login credentials, customizing UI displays and so on.

With nFactor, each factor can have its own logon screen. In each logon screen you can present any information from any of the previous factors or more information that is invisible in other factors. For example, your last factor can be an informative page where the user reads the instructions and clicks continue.

Before nFactor, custom login pages were limited and customizations and needed support. It was possible to replace the tmindex.html or apply rewrite rules to change some of its behavior. However, it was not possible to achieve the underlying functionality.

The following nFactor related customizations are captured in detail in this topic.

- Customize login labels
- Customize UI to display images
- Customize NetScaler nFactor logon form

## Assumptions

You are familiar with nFactor, Shell commands, XML, and text editors.

## Prerequisites

- Customization described in this topic is possible only when the RfWeb UI theme (or theme based) is configured on NetScaler.
- Authentication policy must be bound to the authentication, authorization, and auditing virtual server, else the flow does not work as intended.
- You have the following items related to nFactor
  - XML schema
  - JavaScript
  - Authentication actions
  - Authentication virtual server
  - NetScaler version 11.1 and later

## Customize logon labels

To customize logon labels, you need the following:

- The XML schema that describes how the logon page looks.
- The script.js file that contains the JavaScript that is used to change the rendering process.

### Note:

The script.js file can be found in the directory `/var/netscaler/logon/themes/<custom_theme>/`.

## How it works

The JavaScript parses the XML file, rendering each item inside the `<Requirements>` tag. Each element corresponds to a line in the HTML form. For example, a login field is a line, the password field is another line, and so is the logon button. To introduce new lines, you must specify them in the XML schema file using the StoreFront SDK. The StoreFront SDK allows the logon page with an XML schema to use the `<Requirement>` tag and define elements on it. These elements allow to use JavaScript to introduce in that space whatever HTML elements are required. In this case, a line is created with some text in the form of HTML.

The XML that can be used is as follows:

```
1 <Requirement>
2 <Credential>
3 <Type>nsg-custom-cred</Type>
4 <ID>passwd</ID>
5 </Credential>
6 <Label>
7 <Type>nsg-custom-label</Type>
8 </Label>
9 </Requirement>
```

<Requirement>: Space provided in the logon page. The credential fills the space, and the other parts route the engine into the correct information. In this case, type `nsg-custom-cred`. This is defined as plain text and the label is defined for its body.

The requirement XML is paired with the JavaScript code to achieve the required results.

```
1 // Custom Label Handler for Self Service Links
2 CTXS.ExtensionAPI.addCustomAuthLabelHandler({
3
4 getLabelTypeName: function () {
5 return "nsg-custom-label"; }
6 ,
7 getLabelTypeMarkup: function (requirements) {
8
9 return $("< Enter your HTML codes here>");
10 }
11 ,
12 // Instruction to parse the label as if it was a standard type
13 parseAsType: function () {
14
15 return "plain";
16 }
17
18 }
19);
20 //Custom Credential Handler for Self Service Links
21 CTXS.ExtensionAPI.addCustomCredentialHandler({
22
23 getCredentialTypeName: function () {
24 return "nsg-custom-cred"; }
25 ,
26 getCredentialTypeMarkup: function (requirements) {
27
28 return $("<div/>");
29 }
30 ,
31 }
32);
```

**Important:**

When you are adding the HTML code, ensure that the return value starts with an HTML tag.

The XML portion indicates the logon page what to display, and the JavaScript code provides the actual text. The credential handler opens up the space and the label fills the space. Because all authentication traffic is now invisible to rewrite and responder, you can change the look and feel of the page. Configuration to customize login labels

1. Create and bind a theme based on RfWeb.

```
1 add vpn portaltheme RfWebUI_MOD -basetheme RfWebUI
2
3 bind vpn vserver TESTAAA -portaltheme RfWebUI_MOD
```

The path for the files based on the theme is available in the directory; `/var/netscaler/logon/themes/RfWebUI_MOD`

2. Add the following snippet to the end of the script.js file:

**Note:**

Failing to include the preceding lines inside the correct file or missing to include any JavaScript functions prevent the XML from being loaded. The error can only be seen in the Developer Console of the browser with the following text: “Undefined Type `nsg-custom-cred`.”

```
1 // Custom Label Handler for Self Service Links
2 CTXS.ExtensionAPI.addCustomAuthLabelHandler({
3
4 getLabelTypeName: function () {
5 return "nsg-custom-label"; }
6 ,
7 getLabelTypeMarkup: function (requirements) {
8
9 return $("Self Registration
Forgot Password
Forgot User Login");
10 }
11 ,
12 // Instruction to parse the label as if it was a standard type
13 parseAsType: function () {
14
15 return "plain";
16 }
17
18 }
19);
20 //Custom Credential Handler for Self Service Links
21 CTXS.ExtensionAPI.addCustomCredentialHandler({
```



```
22
23 getCredentialTypeName: function () {
24 return "nsg-custom-cred"; }
25 ,
26 getCredentialTypeMarkup: function (requirements) {
27
28 return $("<div/>");
29 }
30 ,
31 }
32);
```

**Important:**

When you are adding the HTML code, ensure that the return value starts with an HTML tag.

**Login schema used in this example**


```
1 <?xml version="1.0" encoding="utf-8"?>
2 <AuthenticateResponse xmlns="http://citrix.com/authentication/response
 /1">
3 <Status>success</Status>
4 <Result>more-info</Result>
5 <StateContext/>
6 <AuthenticationRequirements>
7 <PostBack>/nf/auth/doAuthentication.do</PostBack>
8 <CancelPostBack>/Citrix/Authentication/ExplicitForms/CancelAuthenticate
 </CancelPostBack>
9 <CancelButtonText>Cancel</CancelButtonText>
10 <Requirements>
11 <Requirement>
12 <Credential>
13 <ID>login</ID>
14 <SaveID>Username</SaveID>
15 <Type>username</Type>
16 </Credential>
17 <Label>
18 <Text>User name</Text>
19 <Type>plain</Type>
20 </Label>
21 <Input>
22 <AssistiveText>Please supply either domain\username or user@fully.
 qualified.domain</AssistiveText>
23 <Text>
24 <Secret>false</Secret>
25 <ReadOnly>false</ReadOnly>
26 <InitialValue></InitialValue>
27 <Constraint>.<+</Constraint>
28 </Text>
29 </Input>
30 </Requirement>
```

```
31 <Requirement>
32 <Credential>
33 <ID>passwd</ID>
34 <SaveID>Password</SaveID>
35 <Type>password</Type>
36 </Credential>
37 <Label>
38 <Text>Password:</Text>
39 <Type>plain</Type>
40 </Label>
41 <Input>
42 <Text>
43 <Secret>true</Secret>
44 <ReadOnly>false</ReadOnly>
45 <InitialValue/>
46 <Constraint>.+</Constraint>
47 </Text>
48 </Input>
49 </Requirement>
50 <Requirement>
51 <Credential>
52 <Type>nsg-custom-cred</Type>
53 <ID>passwd</ID>
54 </Credential>
55 <Label>
56 <Type>nsg-custom-label</Type>
57 </Label>
58 </Requirement>
59 <Requirement>
60 <Credential>
61 <ID>loginBtn</ID>
62 <Type>none</Type>
63 </Credential>
64 <Label>
65 <Type>none</Type>
66 </Label>
67 <Input>
68 <Button>Please Log On</Button>
69 </Input>
70 </Requirement>
71 </Requirements>
72 </AuthenticationRequirements>
73 </AuthenticateResponse>
```

Run the following commands to load the custom schema to config.

```
1 add authentication loginSchema custom -authenticationSchema custom.xml
2
3 add authentication loginSchemaPolicy custom -rule true -action custom
4
5 bind authentication vserver AAATEST -policy custom -priority 100 -
 gotoPriorityExpression END
```

The following figure displays the login page that is rendered with this configuration.

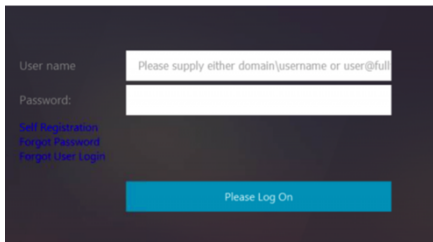

### Customize UI to display images


nFactor allows for customized display with the use of login schema files. There might be a requirement for further customizations other than those offered by the built-in login schema files. For example, displaying a hyperlink or writing custom logic in the UI. These can be achieved using ‘custom credentials’ that comprises the login schema extension and corresponding javascript file.

Login schema files can be found in the `/nsconfig/loginschema/LoginSchema` directory.

For UI customization to display images, a deployment flow in the “NetScaler-Swivel” integration is used as an example.

There are two factors in this flow.

- First factor: Checks user’s AD credentials.
- Second factor: Prompts for user logon based on group membership.

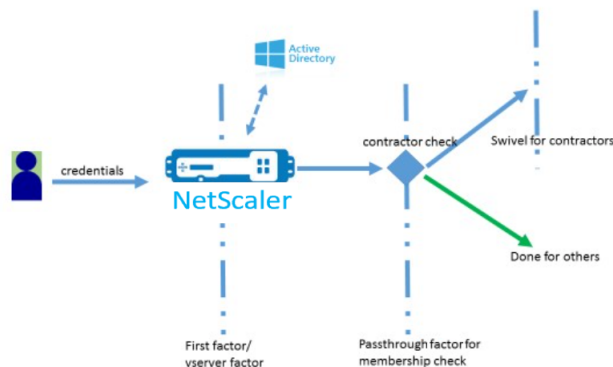

In this flow, all users go through the first factor. Before the second factor, there is a pseudo factor to check if some users can be omitted from the “swivel” factor. If the user requires the “swivel” factor, an image and a text box are displayed to enter the code.

### Solution

The solution for customizing the UI to display images contains two parts;

- Login schema extension.
- Custom script to process the login schema extension.

**Login schema extension** To control form rendering, a custom ‘id’/‘credential’ is injected into the login schema. This can be done by reusing the existing schema and modifying as per the requirement.

In the example, a login schema that has only one text field (such as /nsconfig/loginschema/LoginSchema/OnlyPassword.xml) is considered.

The following snippet is added to the login schema.

```

1 <Requirement><Credential><ID>swivel_cred</ID><Type>swivel_cred</Type><
 Input><Text><Hidden>true</Hidden><InitialValue>${
2 http.req.user.name }
3 </InitialValue></Text></Input></Credential></Requirement>

```

In the snippet, “swivel\_cred” is specified as the “Type” of the credential. Because this is not recognized as a built-in ‘credential,’ UI looks for a handler for this type, and calls it if it exists.

An initial value is sent for this credential which is an expression that NetScaler dynamically fills. In the example, it is the user’s name used to notify the swivel server of the user name. It might not be needed all the time or it can be augmented with some other data. Those details must be added as required.

**Javascript to handle custom credential** When the UI finds a custom credential, it looks for a handler. All custom handlers are written in /var/netscaler/logon/LogonPoint/custom/script.js for the default portal theme.

For the custom portal themes, script.js can be found in the directory /var/netscaler/logon/themes/<custom\_theme>/.

The following script is added to render markup for custom credentials.

```

1 CTXS.ExtensionAPI.addCustomCredentialHandler({
2
3 // The name of the credential, must match the type returned by the
 server
4 getCredentialTypeName: function () {
5 return "swivel_cred"; }
6 ,
7 // Generate HTML for the custom credential
8 getCredentialTypeMarkup: function (requirements) {
9
10 var div = $("<div></div>");
11 var image = $("");
12 var username = requirements.input.text.initialValue; //Get the
 secret from the response
13 image.attr({

```

```
14
15 "style" : "width:200px;height:200px;",
16 "id" : "qrcodeimg",
17 "<Enter your server URL here>"
18 }
19);
20 div.append(image);
21 return div;
22 }
23
24 }
25);
```

This snippet is for handling the mark-up for 'swivel\_cred'. Credential name highlighted must match the 'type' specified earlier in the login schema extension.

To generate mark-up, an image whose source points to the swivel server needs to be added. Once this is done, UI loads the image from the specified location. Because this login schema also has a textbox, UI renders that text box.

**Note:**

Administrator can modify the "style" of the image element to resize the image. Currently it configured for 200x200 pixels.

**Configuration for customizing UI to display images**

nFactor configuration is better constructed bottom-up, that is the last factor first because when you try to specify 'nextFactor' for the previous factors, you require the subsequent factor's name.

**Swivel factor configuration:**

```
1 add loginschema swivel_image - authenticationSchema /nsconfig/
 loginschema/SwivelImage.xml
2
3 add authentication policylabel SwivelFactor - loginSchema swivel_image
4
5 bind authentication policylabel SwivelFactor - policy <policy-to-check-
 swivel-image> -priority 10
```

**Note:**

Download SwivelImage.xml from the login schema used in the example.

**Pseudo factor for group check configuration:**

```
1 add authentication policylabel GroupCheckFactor
2
3 add authentication policy contractors_auth_policy - rule ' http.req.
 user.is_member_of(" contractors ") ' - action NO_AUTHN
```

```

4
5 add authentication policy not_contractors_auth_policy - rule true -
 action NO_AUTHN
6
7 bind authentication policylabel GroupCheckFactor - policy
 contractors_auth_policy - pri 10 - nextFactor SwivelFactor
8
9 bind authentication policylabel GroupCheckFactor - policy
 not_contractors_auth_policy - pri 20

```

### First factor for Active Directory login:

```

1 add ldapAction <>
2
3 add authentication policy user_login_auth_policy - rule true - action
 <>
4
5 bind authentication vserver <> -policy user_login_auth_policy - pri 10
 - nextFactor GroupCheckFactor

```

In the configuration, three factors are specified of which one is implicit/pseudo.

### Login schema used in this example

The following is an example schema with swivel credential and a text box.

#### Note:

When copying data for a web browser, quotes might be displayed differently. Copy data in editors like notepad before saving them to files.

```

1 <?xml version="1.0" encoding="UTF-8"?>
2 <AuthenticateResponse xmlns="http://citrix.com/authentication/response
 /1">
3 <Status>success</Status>
4 <Result>more-info</Result>
5 <StateContext></StateContext>
6 <AuthenticationRequirements>
7 <PostBack>/nf/auth/doAuthentication.do</PostBack>
8 <CancelPostBack>/nf/auth/doLogoff.do</CancelPostBack>
9 <CancelButtonText>Cancel</CancelButtonText>
10 <Requirements>
11 <Requirement><Credential><ID>swivel_cred</ID><Type>swivel_cred</Type><
 Input><Text><Hidden>true</Hidden><InitialValue>${
12 http.req.user.name }
13 </InitialValue></Text></Input></Credential></Requirement>
14 <Requirement><Credential><ID>passwd</ID><SaveID>ExplicitForms-Password
 </SaveID><Type>password</Type></Credential><Label><Text>Password:</
 Text><Type>plain</Type></Label><Input><Text><Secret>true</Secret><
 ReadOnly>false</ReadOnly><InitialValue></InitialValue><Constraint
 >.+</Constraint></Text></Input></Requirement>


```

```

15 <Requirement><Credential><Type>none</Type></Credential><Label><Text>
 Hello ${
16 http.req.user.name }
17 , Please enter passcode from above image.</Text><Type>confirmation</
 Type></Label><Input /></Requirement>
18 <Requirement><Credential><ID>saveCredentials</ID><Type>savecredentials
 </Type></Credential><Label><Text>Remember my password</Text><Type>
 plain</Type></Label><Input><CheckBox><InitialValue>false</
 InitialValue></CheckBox></Input></Requirement>
19 <Requirement><Credential><ID>loginBtn</ID><Type>none</Type></Credential
 ><Label><Type>none</Type></Label><Input><Button>Log On</Button></
 Input></Requirement>
20 </Requirements>
21 </AuthenticationRequirements>
22 </AuthenticateResponse>

```

**Output** Once the configuration is performed, the following image is displayed.

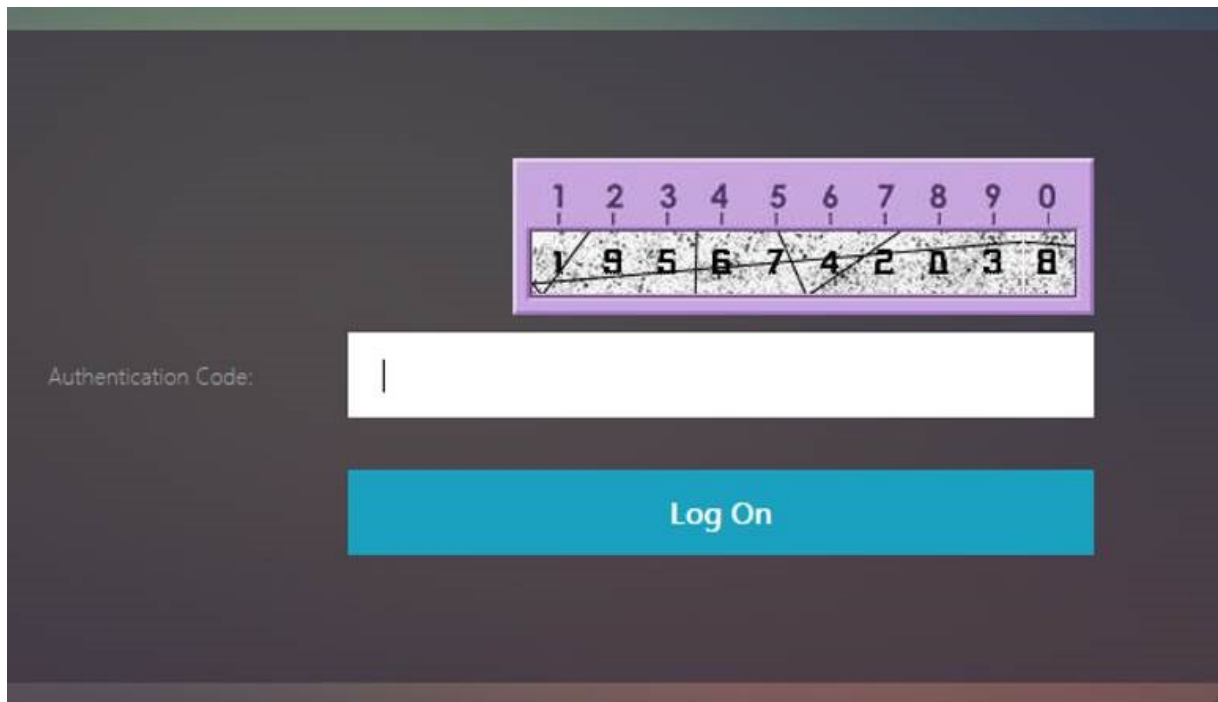

**Note:**

Image height and placement can be altered in the JavaScript.

### Customize NetScaler nFactor logon form to show or hide fields

NetScaler Gateway's RfWeb UI allows for wide variety of customizations. This capability when combined with the nFactor authentication framework lets customers configure complex flows without compromising existing workflows.

In this example, two authentication options, OAuth and LDAP are available from the Logon Type list. When the form is first loaded, the user name and password fields (LDAP is shown first) are displayed. If OAuth is selected, all the fields are hidden because OAuth implies an offload of authentication to a third party server. This way, an administrator can configure intuitive workflows as per user convenience.

**Note:**

- The values in the Logon Type list can be modified with simple modifications to the script file.
- This section describes only the UI part of the flow. The run time handling of the authentication is outside the scope of this article. Users are recommended to refer to the nFactor documentation for authentication configuration.

### How to customize nFactor logon form

Customizing nFactor logon form can be classified into two parts

- Sending the right login schema to the UI
- Writing a handler to interpret login schema and user selections

**Send the correct login schema to the UI** In this example, a simple claim/requirement is sent in the login schema.

For this, the SingleAuth.xml file is modified. The SingleAuth.xml is shipped with NetScaler firmware and can be found in the `/nsconfig/loginschema/LoginSchema` directory.

#### Steps to send login schema:

1. Log in via SSH and drop to shell (type 'shell').
2. Copy SingleAuth.xml to a different file for modification.

**Note:**

The destination folder is different from the default NetScaler login schemas folder.

```
cp /nsconfig/loginschema/LoginSchema/SingleAuth.xml /nsconfig/loginschema/SingleAuthDynamic.xml
```

3. Add the following claim to SingleAuthDynamic.xml.

```
1 <Requirement><Credential><ID>nsg_dropdown</ID><Type>nsg_dropdown</Type></Credential><Label><Text>Logon Type:</Text><Type>plain</Type></Label></Requirement>
```



## 4. Configure NetScaler to send this login schema to load the first form.

```

1 add loginschema single_auth_dynamic - authenticationSchema
 SingleAuthDynamic.xml
2
3 add loginschemaPolicy single_auth_dynamic - rule true - action
 single_auth_dynamic
4
5 bind authentication vserver aaa_nfactor - policy
 single_auth_dynamic - pri 10

```

**Script changes to load form and handle user events** You can modify the JavaScript that enables an administrator to customize the display for the logon form. In this example, the user name and password field are displayed if LDAP is chosen and are hidden if OAuth is chosen. Administrator can also hide only the password.

Admins must append the following snippet to “script.js” that is at “/var/netscaler/logon/LogonPoint/-custom” directory.

**Note:**

Because this directory is a global directory, create a portal theme and edit the “script.js” file within that folder, at “/var/netscaler/logon/themes/<THEME\_NAME>”.

```


1 CTXS.ExtensionAPI.addCustomCredentialHandler({
2
3 // The name of the credential, must match the type returned by the
 server
4 getCredentialTypeName: function () {
5 return "nsg_dropdown"; }
6
7 // Generate HTML for the custom credential
8 getCredentialTypeMarkup: function (requirements) {
9
10 var div = $("<div></div>");
11 var select = $("<select name='nsg_dropdown'></select>").attr("
 id", "nsg_dropdown");
12
13 var rsa = $("<option></option>").attr("selected", "selected").
 text("LDAP").val("LDAP");
14 var OAuthID = $("<option></option>").text("OAuth").val("OAuth")
 ;
15 select.append(rsa, OAuthID);
16
17 select.change(function(e) {
18
19 var value = $(this).val();
20 var ldapPwd = $($(".credentialform").find(".
 CredentialTypepassword")[0]);

```

```
21 var ldapUsername = $($(".credentialform").find(".
22 CredentialTypeusername"));
23 if(value == "OAuth") {
24 if (ldapPwd.length)
25 ldapPwd.hide();
26 if (ldapUsername.length)
27 ldapUsername.hide();
28 }
29 else if(value == "LDAP") {
30
31 if (ldapPwd.length)
32 ldapPwd.show();
33 if (ldapUsername.length)
34 ldapUsername.show();
35 }
36
37 }
38);
39 div.append(select);
40 return div;
41 }
42
43 }
44);
```

### End-user experience

When an end user loads the logon page first time, the following screen appears.

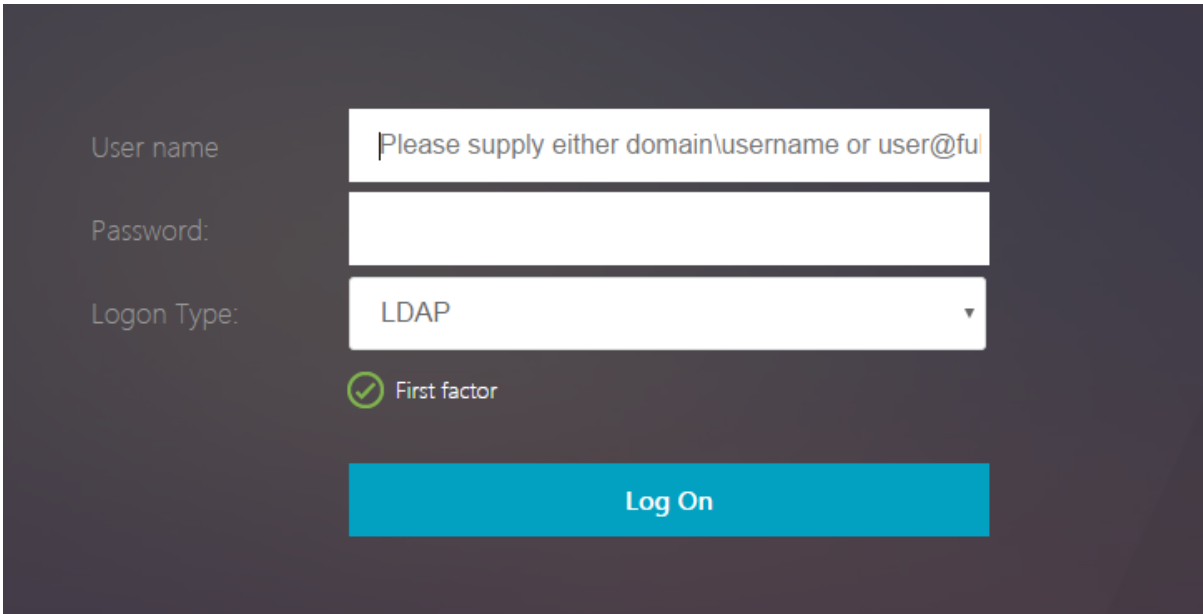

The screenshot displays a logon interface on a dark background. It features three input fields: 'User name' with a placeholder 'Please supply either domain\username or user@fu', 'Password:', and 'Logon Type:' with a dropdown menu showing 'LDAP'. Below the dropdown is a checked checkbox labeled 'First factor'. A prominent blue 'Log On' button is positioned at the bottom of the form.

If **OAuth** is selected in **Logon Type**, user name and password fields are hidden.

Logon Type:

First factor

If **LDAP** is selected, user name and password are displayed. This way, the logon page can be dynamically loaded based on user selection.

#### Login schema used in this example

```

1 <?xml version="1.0" encoding="UTF-8"?>
2 <AuthenticateResponse xmlns="http://citrix.com/authentication/response
 /1">
3 <Status>success</Status>
4 <Result>more-info</Result>
5 <StateContext></StateContext>
6 <AuthenticationRequirements>
7 <PostBack>/nf/auth/doAuthentication.do</PostBack>
8 <CancelPostBack>/nf/auth/doLogoff.do</CancelPostBack>
9 <CancelButtonText>Cancel</CancelButtonText>
10 <Requirements>
11 <Requirement><Credential><ID>login</ID><SaveID>ExplicitForms-Username</
 SaveID><Type>username</Type></Credential><Label><Text>User name</
 Text><Type>plain</Type></Label><Input><AssistiveText>Please supply
 either domain\username or user@fully.qualified.domain</AssistiveText
 ><Text><Secret>false</Secret><ReadOnly>false</ReadOnly><InitialValue
 ></InitialValue><Constraint>.+</Constraint></Text></Input></
 Requirement>
12 <Requirement><Credential><ID>passwd</ID><SaveID>ExplicitForms-Password
 </SaveID><Type>password</Type></Credential><Label><Text>Password:</
 Text><Type>plain</Type></Label><Input><Text><Secret>true</Secret><
 ReadOnly>false</ReadOnly><InitialValue></InitialValue><Constraint
 >.+</Constraint></Text></Input></Requirement>
13 <Requirement><Credential><ID>nsg_dropdown</ID><Type>nsg_dropdown</Type
 ></Credential><Label><Text>Logon Type:</Text><Type>plain</Type></
 Label></Requirement>
14 <Requirement><Credential><Type>none</Type></Credential><Label><Text>
 First factor</Text><Type>confirmation</Type></Label><Input /></

```

```

 Requirement>
15 <Requirement><Credential><ID>saveCredentials</ID><Type>savecredentials
 </Type></Credential><Label><Text>Remember my password</Text><Type>
 plain</Type></Label><Input><CheckBox><InitialValue>false</
 InitialValue></CheckBox></Input></Requirement>
16 <Requirement><Credential><ID>loginBtn</ID><Type>none</Type></Credential
 ><Label><Type>none</Type></Label><Input><Button>Log On</Button></
 Input></Requirement>
17 </Requirements>
18 </AuthenticationRequirements>
19 </AuthenticateResponse>

```

**Note:**

For more details about various nFactor related topics, see [nFactor authentication](#).

## Set a cookie using nFactor

May 2, 2023

You can apply the nFactor custom labels and set a cookie as a factor of the authentication flow. Through custom labels, you can use JavaScript to manipulate the login schema.

To set a cookie as a factor, you do not need to display any information to the user, which is performed with a no schema login. Instead, you must interact with the user's browser to instruct the login schema to store the desired data. A login schema is required to set the cookie when the page is loaded. The cookie is set with a custom label and JavaScript code.

To implement a factor that sets a cookie, create an XML file called cookie.xml to store the schema in the /nsconfig/loginschema/ directory with the following content:

```

1 <?xml version="1.0" encoding="UTF-8"?>
2 <AuthenticateResponse xmlns="http://citrix.com/authentication/response
 /1">
3 <Status>success</Status>
4 <Result>more-info</Result>
5 <StateContext></StateContext>
6 <AuthenticationRequirements>
7 <PostBack>/nf/auth/doAuthentication.do</PostBack>
8 <CancelPostBack>/nf/auth/doLogoff.do</CancelPostBack>
9 <CancelButtonText>Cancel</CancelButtonText>
10 <Requirements>
11
12 <Requirement>
13 <Credential><ID>nsg_cookie</ID><Type>nsg_cookie</Type></Credential>
14 <Label><Text>Logon Type:</Text><Type>Plain</Type></Label>
15 </Requirement>

```

```

16
17 <Requirement>
18 <Credential><ID>loginBtn</ID><Type>none</Type></Credential>
19 <Label><Type>none</Type></Label><Input><Button>Log On</Button></Input>
20 </Requirement>
21
22 </Requirements>
23 </AuthenticationRequirements>
24 </AuthenticateResponse>

```

In this XML;

- The custom label nsg\_cookie is used to create the cookie and submit the form, and the form button.
- The RfWebUI\_custom is the new Portal theme based on the RfWebUI theme.

### Steps to set a cookie using nFactor

1. Create a portal theme based on the RfWebUI theme.

```
1 add vpn portaltheme RfWebUI_custom -basetheme RfWebUI
```

This command creates a folder for this theme at /var/netScaler/logon/themes/RfWebUI\_custom

2. Edit the file /var/netScaler/logon/themes/RfWebUI\_custom/script.js and add the following script:

```

1 CTXS.ExtensionAPI.addCustomCredentialHandler({
2
3 // The name of the credential, must match the type returned by
4 // the server
5 getCredentialTypeName: function () {
6 return "nsg_cookie"; }
7
8 // Generate HTML for the custom credential
9 getCredentialTypeMarkup: function (requirements) {
10
11 var div = $("<div></div>");
12 $(document).ready(function() {
13
14 //Set cookie valid for 1000 days
15 var exdays = 1000;
16 var d = new Date();
17 d.setTime(d.getTime() + (exdays*24*60*60*1000));
18 var expires = "expires="+ d.toUTCString();
19 document.cookie = "NSC_COOKIE_NAME=CookieValue;" + expires
20 + ";path=/";
21
22 //Submit form
23 document.getElementById('loginBtn').click();
24 })
25 }
26 }

```

```
23);
24 return div;
25 }
26
27 }
28);
```

This code performs the following:

- Waits for the browser to finish loading the page
- Sets a cookie called NSC\_COOKIE\_NAME with the value CookieValue, valid for 1000 days
- Auto-submits the form.

The cookie is created and the user does not need to interact with the page.

3. Create a login schema to bind to the policy label that represents the set cookie factor.

```
1 add authentication loginSchema Cookie_LS -authenticationSchema "/
 nsconfig/loginschema/cookie.xml"
```

4. Create a NO\_AUTHN authentication policy to bind to the policy label that represents the set cookie factor.

```
1 add authentication Policy NO_AUTHN_POL -rule TRUE -action NO_AUTHN
```

This policy always evaluates as true, moving the user to the next factor or completing the authentication flow.

5. Bind the portal theme RfWebUI\_custom to the NetScaler Gateway virtual server or NetScaler AAA virtual server.

## Sample deployments using nFactor authentication

May 17, 2023

The following are the sample deployments using nFactor authentication:

- Getting two passwords up-front, pass-through in next factor. [Read](#)
- Group extraction followed by certificate or LDAP authentication, based on group membership. [Read](#)
- SAML followed by LDAP or certificate authentication, based on attributes extracted during SAML. [Read](#)
- SAML in first factor, followed by group extraction, and then LDAP or certificate authentication, based on groups extracted. [Read](#)
- Prefilling user name from certificate. [Read](#)

- Certificate authentication followed by group extraction for 401 enabled traffic management virtual servers. [Read](#)
- Username and two passwords with group extraction in third factor. [Read](#)
- Certificate fallback to LDAP in same cascade; one virtual server for both certificate and LDAP authentication. [Read](#)
- LDAP in first factor and WebAuth in second factor. [Read](#)
- Domain drop down in first factor, then different policy evaluations based on group. [Read](#)
- Configure email ID (or user name) input based group extraction at first factor to decide the next factor authentication flow. [Read](#)

## How to articles

May 2, 2023

The Authentication, authorization, and auditing “How to articles” are simple, relevant, and easy to implement articles. These articles contain information about some of the popular Authentication, authorization, and auditing features such as LDAP authentication and multifactor authentication. For some of the popular articles on configuring and troubleshooting authentication through NetScaler, see [NetScaler Authentication: How do I?](#)

## Endpoint Analysis

[Configure pre-authentication Endpoint Analysis scan as a factor in nFactor authentication](#)

[Configure post-authentication Endpoint Analysis scan as a factor in NetScaler nFactor authentication](#)

[Configure pre-authentication and post-authentication EPA scan as a factor in nFactor authentication](#)

[Configure periodic Endpoint Analysis scan as a factor in nFactor authentication](#)

[Configure NetScaler Gateway preauthentication EPA scan for the domain check](#)

## First factor and second factor configuration combinations

[Configure nFactor for NetScaler Gateway with WebAuth in first factor and LDAP with password change in second factor](#)

[Configure SAML followed by LDAP or certificate authentication based on SAML attribute extraction in nFactor authentication](#)

Configure certificate authentication as first factor and LDAP as second factor in NetScaler nFactor authentication

Configure two-factor authentication with one login schema and one passthrough schema in NetScaler nFactor authentication

Configure user name and two passwords with group extraction in third factor by nFactor authentication

Configure domain drop-down, username, and password field in the first factor and policy evaluation based on groups in the next factor

Configure email ID (or user name) input based group extraction at first factor to decide the next factor authentication flow

Configure a domain drop-down list for user input in the first factor to decide the next factor authentication flow

### **EULA as an authentication factor**

Configure EULA as an authentication factor in NetScaler nFactor system

### **Prefill user name from certificate**

Configure prefill user name from certificate in NetScaler nFactor authentication

### **Step-up authentication**

Configure nFactor for applications with different login site requirements including step-up authentication

## **SAML authentication**

May 2, 2023

Security Assertion Markup Language (SAML) is an XML-based authentication mechanism that provides single sign-on capability and is defined by the OASIS Security Services Technical Committee.

#### Note

Starting from NetScaler 12.0 Build 51.x, NetScaler appliance used as a SAML Service Provider (SP) with Multi-Factor (nFactor) authentication now prepopulates the user-name field on the login




page. The appliance sends a NameID attribute as part of a SAML authorization request, retrieves the NameID attribute value from the NetScaler SAML Identity Provider (IdP), and prepopulates the user-name field.

### Why use SAML authentication

Consider a scenario in which a service provider (LargeProvider) hosts a number of applications for a customer (BigCompany). BigCompany has users that must seamlessly access these applications. In a traditional setup, LargeProvider would need to maintain a database of users of BigCompany. This raises some concerns for each of the following stakeholders:

- LargeProvider must ensure security of user data.
- BigCompany must validate the users and keep the user data up-to-date, not just in its own database, but also in the user database maintained by LargeProvider. For example, a user removed from the BigCompany database must also be removed from the LargeProvider database.
- A user has to log on individually to each of the hosted applications.

The SAML authentication mechanism provides an alternative approach. The following deployment diagram shows how SAML works (SP initiated flow).

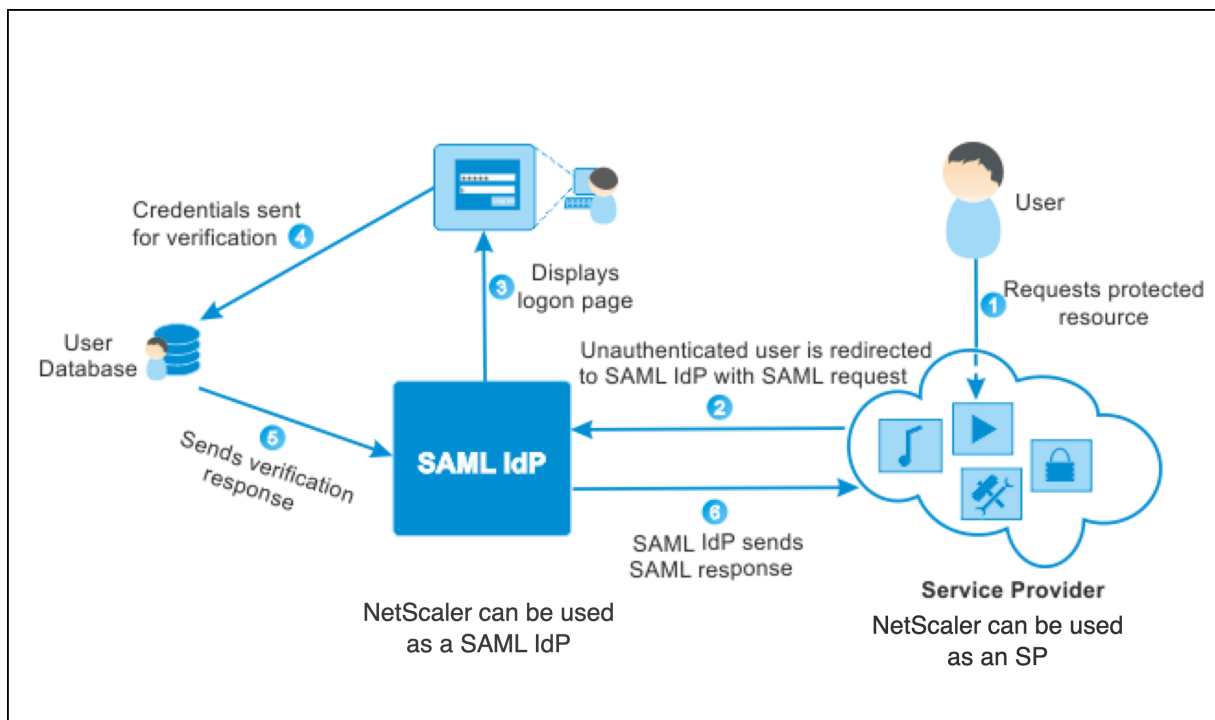

The concerns raised by traditional authentication mechanisms are resolved as follows:

- LargeProvider does not have to maintain a database for BigCompany users. Freed from identity management, LargeProvider can concentrate on providing better services.

- BigCompany does not bear the burden of making sure the LargeProvider user database is kept in sync with its own user database.
- A user can log on once, to one application hosted on LargeProvider, and be automatically logged on to the other applications that are hosted there.

The NetScaler appliance can be deployed as a SAML Service Provider (SP) and a SAML Identity Provider (IdP). Read through the relevant topics to understand the configurations that must be performed on the NetScaler appliance.

A NetScaler appliance configured as a SAML service provider can now enforce an audience restriction check. The audience restriction condition evaluates to “Valid” only if the SAML replying party is a member of at least one of the specified audiences.

You can configure a NetScaler appliance to parse attributes in SAML assertions as group attributes. Parsing them as group attributes enables the appliance to bind policies to the groups.

## NetScaler as a SAML SP

August 17, 2024

The SAML service provider (SP) is a SAML entity deployed by the service provider. When a user tries to access a protected application, the SP evaluates the client request. If the client is unauthenticated (does not have a valid NSC\_TMAA or NSC\_TMAS cookie), the SP redirects the request to the SAML identity provider (IdP).

The SP also validates SAML assertions that are received from the IdP.

When the NetScaler appliance is configured as an SP, a traffic management virtual server (load balancing or content switching) receives all user requests associated with the relevant SAML action.

The NetScaler appliance also supports POST and Redirect bindings during logout.

### Note

A NetScaler appliance can be used as a SAML SP in a deployment where the SAML IdP is configured either on the appliance or on any external SAML IdP.

When used as a SAML SP, a NetScaler appliance:

- Can extract the user information (attributes) from the SAML token. This information can then be used in the policies that are configured on the NetScaler appliance. For example, if you want to extract the GroupMember and **emailaddress** attributes, in the SAMLAction, specify the **Attribute2** parameter as GroupMember and the **Attribute3** parameter as **emailaddress**.

**Note**

Default attributes such as user name, password, and logout URL must not be extracted in attributes 1–16, because they are implicitly parsed and stored in the session.

- Can extract attribute names of up to 127 bytes from an incoming SAML assertion. The previous limit was 63 bytes.
- Supports post, redirect, and artifact bindings.

**Note**

Do not use redirect binding for large amounts of data when the assertion after inflate or decoding is greater than 10K.

- Can decrypt assertions.
- Can extract multi-valued attributes from a SAML assertion. These attributes are sent in nested XML tags such as:

```
<AttributeValue> <AttributeValue>Value1</AttributeValue>
<AttributeValue>Value2</AttributeValue>
</AttributeValue>
```

**Note**

From NetScaler 13.0 Build 63.x and above, the individual maximum length for SAML attributes has been increased to allow a maximum of 40k bytes. The size of all the attributes must not exceed 40k bytes.

When presented with previous XML, the NetScaler appliance can extract both Value1 and Value2 as values of a given attribute, as opposed to the old firmware that extracts only Value1.

- Can specify the validity of a SAML assertion.

If the system time on NetScaler SAML IdP and the peer SAML SP is not in sync, the messages might get invalidated by either party. To avoid such cases, you can now configure the time duration for which the assertions are valid.

This duration, called the “skew time,” specifies the number of minutes for which the message can be accepted. The skew time can be configured on the SAML SP and the SAML IdP.

- Can send an extra attribute called ‘ForceAuth’ in the authentication request to an external IdP (identity provider). By default, the ForceAuth is set to ‘False’. It can be set to ‘True’ to suggest IdP to force authentication despite the existing authentication context. Also, NetScaler SP does authentication request in query parameter when configured with artifact binding.

## Configure the NetScaler appliance as a SAML SP by using the CLI

1. Configure a SAML SP action.

### Example

The following command adds a SAML action that redirects unauthenticated user requests.

```
add authentication samlAction SamlSPAct1 -metadataUrl "https://ksidp1.ksaaa.local/metadata/samlidp/SAML_IDP_profile"-samlIdPCertName nssp -preferredbindtype SSOREDIRECT -samlSigningCertName nssp -samlRedirectUrl https://auth1.example.com -relaystateRule "AAA.LOGIN.RELAYSTATE.EQ(\"https://lb.example1.com/\")"
```

### Points to note

- Certificate provided for `-samlIdPCertName` in the `samlAction` command must match the corresponding certificate from IdP for the signature verification to succeed.
- SAML supports only the RSA certificate. Other certificates like HSM and FIPS are not supported.
- It is recommended to have a full domain name with a trailing `/'` in the expression.
- If the authentication virtual server is configured as a SAML IdP, the metadata URL that must be used in the SAML SP action is `https://<netscaler-saml-idp-fqdn>/metadata/samlidp/SAML_IDP_profile`.
- If multiple SAML policies are part of an IdP chain, it is sufficient to configure a relay state rule only on the first SAML policy.

For details on this command, see <https://developer-docs.netscaler.com/en-us/adc-command-reference-int/current-release/authentication/authentication-samlaction> and <https://support.citrix.com/article/CTX316577>.

2. Configure the SAML policy.

### Example:

The following command defines a SAML policy that applies the previously defined SAML action to all traffic.

```
add authentication policy SamlSPPol1 -rule true -action SamlSPAct1
```

3. Bind the SAML policy to the authentication virtual server.

### Example

The following command binds the SAML policy to an authentication virtual server named `av_saml`.

```
bind authentication vserver av_saml -policy SamlSPPol1
```

4. Bind the authentication virtual server to the appropriate traffic management virtual server.

**Example**

The following command adds a load balancing virtual server named “lb1\_ssl” and associates the authentication virtual server named “av\_saml” to the load balancing virtual server.

```
add lb vserver lb1_ssl SSL 10.217.28.224 443 -persistenceType
 NONE -cltTimeout 180 -AuthenticationHost auth1.example.com -
 Authentication ON -authnVsName av_saml
```

For details on this command, see <https://developer-docs.citrix.com/projects/citrix-adc-command-reference/en/latest/authentication/authentication-samlAction>.

**Configure a NetScaler appliance as a SAML SP by using the GUI**

1. Configure a SAML SP action.
  - a) Navigate to **Security > AAA-Policies > Authentication > Basic Policies > SAML**.
  - b) Select **Servers** tab, click **Add**, enter values for the following parameters, and click **Create**.

**Parameter descriptions:**

- Name - Name of the server.
- Redirect URL - URL that users authenticate against. Some IdPs have special URLs that are not reachable unless they are on a SAML setup.
- Single Logout URL - URL specified so that the NetScaler can recognize when to send the client back to the IdP to complete the signout process.
- SAML Binding - A mechanism that is used to transport SAML requestor and responder messages between the SP and IdP. When NetScaler acts as an SP, it supports Post, Redirect, and Artifact bindings. The default binding method is POST.

**Note:**

For Artifact binding, the transport mechanism on the SP and IdP must be the same.

- Logout Binding - Specifies the transport mechanism of SAML logout messages. The default binding mechanism is Post.
- IdP Certificate Name - IdPCert Certificate (Base64) present under SAML Signing Certificate.
- SAML IDP Metadata URL - Used to obtain the SAML metadata. You do not have to specify the IdP certificate name and the redirect URL fields when the metadata URL is present.

When you configure the metadata URL, the SAML IdP sends the binding type options for SSO and Logout to NetScaler. By default, NetScaler selects Redirect as the binding type for Logout and Post as the binding type for SSO.

The following is an example of the SAML IdP response that includes the options for binding type:

```
<?xml version="1.0"?> <md:EntityDescriptor xmlns:md="urn:oasis:names:tc:SAML:2.0:metadata" ID="_b4743282f0a1e14164b8cc" entityID="192.0.2.255"> <md:SingleLogoutService Binding="urn:oasis:names:tc:SAML:2.0:bindings:HTTP-Redirect" Location="https://192.0.2.255/cgi/tmlogout_redirect1"></md:SingleLogoutService> <md:SingleLogoutService Binding="urn:oasis:names:tc:SAML:2.0:bindings:HTTP-POST" Location="https://192.0.2.255/cgi/tmlogout_post1"></md:SingleLogoutService> <md:SingleSignOnService Binding="urn:oasis:names:tc:SAML:2.0:bindings:HTTP-POST" Location="https://192.0.2.255/saml/login_post1"></md:SingleSignOnService> <md:SingleSignOnService Binding="urn:oasis:names:tc:SAML:2.0:bindings:HTTP-Redirect" Location="https://192.0.2.255/saml/login_redirect1"></md:SingleSignOnService> </md:EntityDescriptor>
```

You can modify the default binding types for SSO and Logout by configuring the **Preferred bind type** parameter.

**Note:**

Starting from release 14.1 build 29.x onwards, NetScaler configured as a SAML SP can retrieve and store multiple certificates from the same IdP using the SAML IdP metadata URL. This functionality allows the SP to select the correct certificate and validate SAML assertions from the IdP by using that certificate. The SP can store up to 4 certificates. This enhances the flexibility and robustness of the system.

- Preferred bind type - Specifies the preferred binding type for SSO and logout. This option is available from release 14.1 build 25.x onwards.

In the previous SAML IdP response, for SSO, NetScaler selects Post as the SAML binding and chooses `https://192.0.2.255/saml/login_post1`, by default. You can modify this behavior by selecting the **SSOREDIRECT** checkbox as the preferred binding type.

In the previous SAML IdP response, for Logout, NetScaler selects Redirect

as the Logout binding type and chooses [https://192.0.2.255/cgi/tmlogout\\_redirect1](https://192.0.2.255/cgi/tmlogout_redirect1), by default. You can modify this behavior by selecting the **LOGOUTPOST** checkbox as the preferred binding type.

You can configure either one or both the binding types based on your preference.

- Metadata Refresh Interval (mins) - Interval in minutes for fetching metadata from the specified metadata URL.
- User Field - Section of the IdP's SAML authentication form that contains the user name for SP to extract if necessary.
- Signing Certificate Name - Select the SAML SP certificate (with private key) that NetScaler uses to sign authentication requests to the IdP. The same certificate (without private key) must be imported to the IdP, so that the IdP can verify the authentication request signature. Most IdPs do not require the signing certificate name.
- IssuerName - Identifier. Unique ID that is specified on both the SP and IdP to help identify the service provider to each other.
- Reject unsigned assertion - Option that you can specify if you require the assertions from the IdP to be signed. The default option is ON.
  - ON: Rejects assertions without a signature
  - STRICT: Ensures that both response and assertion are signed
  - OFF: Allows unsigned assertions
- Audience - Audience for which an assertion sent by IdP is applicable. This is typically an entity name or a URL that represents the service provider.
- Signature Algorithm - Algorithm to be used to sign/verify SAML transactions. The default value is RSA-SHA256.
- Digest Method - Algorithm to be used to compute/verify digest for SAML transactions. The default value is SHA256.
- Relay State Rule - Refer to [Points to note about the relayStateRule parameter](#) for details about this parameter.
- State Check Rule - Configure the expressions that are evaluated to validate HTTP requests on SAML endpoints.
- Default Authentication Group - The default group that is chosen when the authentication succeeds in addition to the extracted groups.
- Group Name Field - Name of the tag in an assertion that contains user groups.
- Skew Time (mins) - This option specifies the clock skew in minutes that the NetScaler service provider allows on an incoming assertion. For example, if you set the skew

time to 10 minutes at 16:00, the SAML assertion is valid from 15:50 to 16:10 - 20 minutes in total. The default skew time is 5 minutes.

- Two Factor - Enables the second factor authentication after SAML.
- Assertion Consumer Service Index - Index/ID of the metadata entry corresponding to this configuration.
- Attribute Consuming Service Index - Index/ID of the attribute specification at the IdP. The IdP locates the attributes requested by SP using this index and send those attributes in the SAML assertion.
- Requested Authentication Context - Specifies the context requirements of the authentication statements returned in the response.
- Authentication Class Types - Specifies the authentication class types that are requested from the IdP.
- Custom Authentication Class Types - Specifies the custom authentication class reference to be sent as part of the authentication request sent by the SP to SAML IdP.
- Send Thumbprint - Sends the thumbprint instead of the certificate in the SAML request.
- Enforce Username - Choose if the username extracted from the SAML assertion can be edited on the login page while doing a second factor authentication.
- Force Authentication - Enforces authentication at the IdP that receives the request from NetScaler.
- Store SAML Response - Stores the entire SAML response as long as the user session is active.

## 2. Create a corresponding SAML policy.

Navigate to **Security > AAA-Application Traffic > Policies > Authentication > Advanced Policies > Policy** and click **Add**.

On the **Create Authentication SAML Policy** page, provide the following details:

- Name - Specify a name for the SAML policy.
- Action Type - Select **SAML** as the authentication action type.
- Action - Select the SAML server profile to bind the SAML policy with.
- Expression - Displays the name of the rule or expression that the SAML policy uses to determine if the user must authenticate with the SAML server. On the text box, set the value "rule = true" for the SAML policy to take effect and the corresponding SAML action to be run.



3. Bind the SAML policy to the authentication virtual server.

Navigate to **Security > AAA - Application Traffic > Virtual Servers**, and associate the SAML policy with the authentication virtual server.

4. Associate the authentication server with the appropriate traffic management virtual server.

Navigate to **Traffic Management > Load Balancing** (or **Content Switching**) > **Virtual Servers**, select the virtual server, and associate the authentication virtual server with it.

### Points to note about the `relaysStateRule` parameter

Configure an expression for the `relaysStateRule` parameter in the `samlAction` command for a smooth authentication redirection after the SAML assertion. The expression must include a single published domain or a list of published domains that users want to connect to, before an authentication redirection. For example, the expression must contain the domains of the front-end virtual server (VPN, load balancing, or content switching) that uses the SAML action for authentication.

We recommend using full domain names with a trailing (/). For example `https://example.com/`.

The following examples describe the `RelayStateRule` parameter configuration examples for single domain and multiple domain scenarios:

For a single domain:

```
set samlAction <samlActionName> -relaysStateRule "AAA.LOGIN.RELAYSTATE.EQ(\"https://example1.com/\")"
```

For multiple domains:

Use pattern sets to add multiple domains:

```
1 add patset test1
2
3 bind patset test1 "https://example1.com/"
4
5 bind patset test1 "https://test1.com/"
6
7 bind patset test1 "https://10.11.11.112/"
8
9 set samlAction <samlActionName> -relaysStateRule AAA.LOGIN.RELAYSTATE.
CONTAINS_ANY("test1")
```

To configure RegEx pattern matching for the FQDN:

```
1 set samlAction <samlActionName> -relaysStateRule "AAA.LOGIN.RELAYSTATE.
REGEX_MATCH(re#^https://[a-zA-Z0-9]*\.example1\.com/#)"
```

Specify the “^” sign (^https) at the starting of the domain and specify the forward slash “/” at the end of the expression (example: `example1\.com/`).

Following are some of definitions of the `RelayStateRule` expressions:

- 1 `EQ`: Exact match.
- 2 `CONTAINS`: Domain inclusion.
- 3 `CONTAINS_ANY`: Match any domain from a PATSET.
- 4 `REGEX_MATCH`: Regex-based matching.

## NetScaler as a SAML IdP

December 12, 2024

The SAML IdP (Identity Provider) is a SAML entity that is deployed on the customer network. The IdP receives requests from the SAML SP and redirects users to a logon page, where they must enter their credentials. The IdP authenticates these credentials with the active directory (external authentication server, such as LDAP) and then generates a SAML assertion that is sent to the SP.

The SP validates the token, and the user is then granted access to the requested protected application.

When the NetScaler appliance is configured as an IdP, all requests are received by an authentication virtual server that is associated with the relevant SAML IdP profile.

### Note

A NetScaler appliance can be used as a IdP in a deployment where the SAML SP is configured either on the appliance or on any external SAML SP.

When used as a SAML IdP, a NetScaler appliance:

- Supports all authentication methods that it supports for traditional logons.
- Digitally signs assertions.
- Supports single-factor and two-factor authentication. SAML must not be configured as the secondary authentication mechanism.
- Can encrypt assertions by using the public key of the SAML SP. This is recommended when the assertion includes sensitive information.
- Can be configured to accept only digitally signed requests from the SAML SP.
- Can log on to the SAML IdP by using the following 401-based authentication mechanisms: Negotiate, NTLM, and Certificate.

- Can be configured to send 16 attributes in addition to the NameId attribute. The attributes must be extracted from the appropriate authentication server. For each of them, you can specify the name, the expression, the format, and a friendly name in the SAML IdP profile.
- If the NetScaler appliance is configured as a SAML IdP for multiple SAML SP, a user can gain access to applications on the different SPs without explicitly authenticating every time. The NetScaler appliance creates a session cookie for the first authentication, and every subsequent request uses this cookie for authentication.
- Can send multi-valued attributes in a SAML assertion.
- Supports post and redirect bindings. Support for artifact binding is introduced in NetScaler release 13.0 Build 36.27.
- Can specify the validity of a SAML assertion.

If the system time on NetScaler SAML IdP and the peer SAML SP is not in sync, the messages might get invalidated by either party. To avoid such cases, you can now configure the time duration for which the assertions are valid.

This duration, called the “skew time,” specifies the number of minutes for which the message must be accepted. The skew time can be configured on the SAML SP and the SAML IdP.

- Can be configured to serve assertions only to SAML SPs that are pre-configured on or trusted by the IdP. For this configuration, the SAML IdP must have the service provider ID (or issuer name) of the relevant SAML SPs.

**Note**

- Before you proceed, make sure that you have an authentication policy that is bound to an LDAP authentication virtual server.
- For details on how to configure an LDAP action to retrieve the required attributes, see [Name-value attribute support for LDAP authentication](#).

## Configure a NetScaler appliance as a SAML IdP by using the CLI

1. Create a SAML IdP profile.

**Example**

Adding NetScaler appliance as an IdP with SiteMinder as the SP.

```
add authentication samlIdPProfile samlIDPProf1 -samlSPCertName
siteminder-cert -encryptAssertion ON -metadataUrl https://samlidp
.example.com/metadata -samlIdPCertName ns-cert -assertionConsumerServiceUR
https://example.com/cgi/samlauth -rejectUnsignedRequests ON
-signatureAlg RSA-SHA256 -digestMethod SHA256 -acsUrlRule AAA.
```

```
LOGIN.SAML_REQ_ACS_URL.REGEX_MATCH(re#^https://example\.com/cgi/samlauth$#)
```

2. Configure the SAML IdP profile. In the following example, the IdP session contains the “userPrincipalName” attribute.

```
set samlidpProfile SAML-IDP-Profile -Attribute1 "userPrincipalName"
-Attribute1Expr "AAA.USER.ATTRIBUTE(\"userPrincipalName\")"
```

### Points to note

- In the SAML IdP profile, configure **acsURLRule** that takes an expression of the list of applicable service provider URLs for this IdP. This expression depends on the SP being used. If NetScaler is configured as SP, the ACS URL is `https://<SP-domain_name>/cgi/samlauth`. It is recommended that you have a full URL in the expression for matching.
- If you want the SAML IdP to allow only one ACS URL, use the following command:

The following CLI example uses `https://testlb.aaa.local` as the ACS URL:

```
1 set samlidpprofile SAML_IDP_profile -acsurlrule "AAA.LOGIN.
SAML_REQ_ACS_URL.eq(\"https://testlb.aaa.local\")"
```

- If you want the SAML IdP to match the ACS URL with a regular expression, use the following expression:

```
-acsurlrule AAA.LOGIN.SAML_REQ_ACS_URL.REGEX_MATCH(re#^https
://example.com/cgi/samlauth$#)
```

The above expression ensures that the ACS URL matches with `https://example.com/cgi/samlauth`. The “^” sign at the beginning of the regular expression ensures that NetScaler does not allow anything before “https”. The “\$” sign at the end of the regular expression ensures that NetScaler does not allow anything after “samlauth”.

If the expression is `-acsurlrule AAA.LOGIN.SAML_REQ_ACS_URL.REGEX_MATCH(re#https://example.com/cgi/#)`, the SAML IdP allows any ACS URL as shown in the following examples:

- `https://example.com/cgi/samlauth`
- `abcdhttps://example.com/cgi/xyz`
- `https://example.com/cgi/abcde`

- Some third-party SPs do not specify or send the ACS URL in SAML authentication requests. In such cases, use the following expression in the SAML IdP profile:

```
AAA.LOGIN.SAML_REQ_ACS_URL.LENGTH.EQ(0) || AAA.LOGIN.SAML_REQ_ACS_URL
.EQ("https://fqdn/endpoint")
```

- SAML supports only RSA certificate. Other certificates like HSM, FIPS are not supported. For more details on the command, see <https://developer-docs.netscaler.com/en-us/adc-command-reference-int/current-release/authentication/authentication-samlaction> and <https://support.citrix.com/article/CTX316577>.

- If the IdP logout URL is different from the redirect URL and the user is on the NetScaler login page for more than 2 minutes, a server error `HTTP/1.1 Internal Server Error 43549` appears when the user attempts to authenticate. The NetScaler logs display a message indicating that the incoming post logout redirect URL is not in the allowlisted logout redirect URLs for the user.

To resolve this issue, bind the pattern set as shown in the following example:

```
bind patset ns_aaa_oauthidp_logout_redirect_uris "https://
FQDN and path to the logout url"
```

- If the authentication virtual server is configured as a SAML SP, the metadata URL that must be used in the SAML IdP profile is `https://<netscaler-saml-sp-fqdn>/metadata/samlsp/saml_sp_act`. For example,

```
add authentication samlIdPProfile SAML_IDP_profile -samlIdPCertName
aaa_local -assertionConsumerServiceURL "https://ksav.ksaaa.
local/cgi/samlauth"-samlIssuerName "https://ksidp1.aaa.local
/saml/login"-rejectUnsignedRequests OFF -serviceProviderID
kslb.ksaaa.local -signAssertion NONE -SPLogoutUrl "https
://ksav.ksaaa.local/cgi/tmlogout"-logoutBinding REDIRECT
-metadataUrl "https://ksav.ksaaa.local/metadata/samlsp/
saml_sp_act"-metadataRefreshInterval 1
```

3. Configure the SAML authentication policy and associate the SAML IdP profile as the action of the policy.

```
add authentication samlIdPPolicy samlIDPPol1 -rule true -action
samlIDPProf1
```

**Note:**

If the policy name includes one or more spaces, enclose the name in double or single quotation marks (for example, “my policy” or ‘my policy’).

4. Bind the policy to the authentication virtual server.

```
bind authentication vserver saml-auth-vserver -policy samlIDPPol1
-priority 100
```

For more details on the command, see <https://developer-docs.netscaler.com/en-us/adc-command-reference-int/current-release/authentication/authentication-samlidpprofile>.

## Configure a NetScaler appliance as a SAML IdP by using the GUI

1. Configure a SAML IdP profile. This profile is used to verify the incoming authentication requests from the SP, and create and sign the assertion before sending it to the SP.

Navigate to **Security > AAA - Application Traffic > Policies > Authentication Advanced Policies > SAML IDP Policies**.

Select **Servers**, click **Add**, enter values for the following parameters, and click **Create**.

### Parameter descriptions:

- Name - The name of the new SAML single sign-on profile.
- Export SAML IdP Metadata - Click this link if you want to export the metadata of the SAML IdP profile to a NetScaler Gateway VPN virtual server.
- Import Metadata - This option imports the SAML IdP metadata. This option is enabled by default.
- Assertion Consumer Service Url - The URL to which the assertion is to be sent.
- Service Provider Logout URL - The SP endpoint to which logout messages are to be sent.
- Logout Binding –Specifies the transport mechanism of the SAML logout messages. Available options are POST and REDIRECT.
- SAML SP Metadata URL –The URL that is used to obtain the SAML IdP metadata.

#### Note:

When the SAML SP metadata URL is configured, the following parameters are taken from the SAML IdP profile and are auto-filled in the SAML SP configuration:

- Assertion Consumer Service URL
- Service Provider Logout URL
- SP Certificate Name
- Logout Binding
- SAML Binding
- Sign Assertion

- Metadata Refresh Interval (mins) - The time interval (in minutes) for fetching the metadata from the specified metadata URL. The default time interval is 3600 minutes.
- Assertion Consumer Service URL Rule - Expression that defines the allowed ACS URLs that come from a SAML SP. In other words, it allowlists ACS URLs to prevent attacks that insert rogue ACS URLs in SAML requests.
- Assertion Consumer Service URL - The URL that the authenticated user is redirected to.

- IdP Certificate Name - Certificate-Key pair used for the authentication page.
- SP Certificate Name - Certificate of the Service Provider in this scenario, the key is not required for this.
- Sign Assertion - The option to sign the assertion and the response when redirecting the client back to the Service Provider.
- Issuer Name - A string value included in the SAML assertion issued by IdP.
- Service Provider ID - Unique ID that is specified on SP to help identify the service provider. The ID can be anything and is not necessarily a URL. But the ID must be the same on both SP and IdP profiles.
- Default Authentication Group - The default group that is chosen when an authentication succeeds, in addition to the extracted groups. This group is useful for admins using the nFactor flow to decide the appropriate configurations for the relaying party. For example, when you configure an authentication policy, you can specify the default group name as part of the following expression:  

```
AAA.USER.IS_MEMBER_OF("Default Authentication Group name").
```
- Reject Unsigned Requests - Option that you can specify to ensure only assertions signed with the SP Certificate are accepted.
- Audience - The Audience to whom the assertion is sent by the IdP. This is usually an entity name or a URL that represents the SP.
- Skew Time (mins) - Skew Time (mins) - This option specifies the clock skew in minutes that the NetScaler service provider allows on an incoming assertion. For example, if you set the skew time to 10 minutes at 16:00, the SAML assertion is valid from 15:50 to 16:10 - 20 minutes in total. The default skew time is 5 minutes.
- NAME ID format - Format of name identifier sent in the assertion.
- Name ID expression - Expression that is evaluated to obtain the name identifier to be sent in the assertion.
- Sign Assertion - Option to sign portions of the assertion sent by the IdP. The available options are None, Assertion, Response, or Both.
- Signature Algorithm - Algorithm used to sign and verify the assertions between the IdP and SP, this needs to be the same on the IdP profile and the SP profile.
- Digest Method - Algorithm used to verify the integrity of the Assertions between IdP and SP, this needs to be the same on the IdP profile and the SP profile.
- SAML Binding - A mechanism that is used to transport SAML requestor and responder messages between the SP and IdP. When NetScaler acts as an SP, it supports Post, Redirect,

and Artifact bindings. The default binding method is POST. Associate the SAML IdP policy with an authentication virtual server. For Artifact binding, the transport mechanism on the SP and IdP must be the same.

**Note:**

For NetScaler SAML artifact binding, the Artifact Resolution Service URL value must be in the following format:

```
https://<your-idp-hostname>/saml/idp/artifactresolve
```

- Attribute 1 - Name of the attribute in SAML assertion whose value must be extracted and stored as attribute1. A similar pattern is applicable to the remaining attributes as well.
  - Attribute1Expr - Expression that is evaluated to obtain attribute 1's value.
  - Attribute1FriendlyName - Name of attribute 1 that must be sent in the SAML assertion.
  - Attribute1Format - Format of attribute 1 to be sent in the SAML assertion.
2. Configure the SAML authentication policy and associate the SAML IdP profile as the action of the policy.

Navigate to **Security > AAA - Application Traffic > Policies > Authentication Advanced Policies > SAML IDP Policies**.

Select **Policies**, click **Add**, enter values for the following parameters, and click **Create**.

**Parameter descriptions:**

- Name - Name of the SAML IdP authentication policy.
  - Action - Name of the SAML IdP profile to apply to requests or connections that match this policy.
  - Log Action - Name of message log action to use when a request matches this policy. Select a log action from the drop-down list or create a log action by clicking Add.
  - Undefined-Result Action - Action to perform if the result of a policy evaluation is undefined. An undefined event indicates an internal error condition. Only the built-in actions can be used.
  - Comments - Any comments to preserve information about this policy.
3. Associate the SAML IdP policy with an authentication virtual server.

Navigate to **Security > AAA - Application Traffic > Virtual Servers**, and bind the SAML IdP policy with the authentication virtual server.



## Configure SAML single sign-on

October 13, 2023

To provide single sign-on capabilities across applications that are hosted on the service provider, you can configure SAML single sign-on on the SAML SP.

### Configuring SAML single sign-on by using the command line interface

1. Configure the SAML SSO profile.

#### Example

In the following command, [Example](#) is the load balancing virtual server that has a web link from the SharePoint portal. Nssp.example.com is the Traffic Management virtual server that is load balancing the SharePoint server.

```
1 add tm samlSSOProfile tm-saml-ss0 -samlSigningCertName nssp -
 assertionConsumerServiceURL "https://nssp2.example.com/cgi/
 samlauth" -relaystateRule "\\\"https://nssp2.example.com/
 samlss0.html\\\"" -sendPassword ON -samlIssuerName nssp.example
 .com
```

2. Associate the SAML SSO profile with the traffic action.

#### Example

The following command enables SSO and binds the SAML SSO profile created above to a traffic action.

```
1 add tm trafficAction html_act -SSO ON -samlSSOProfile tm-saml-ss0
```

3. Configure the traffic policy that specifies when the action must be run.

#### Example

The following command associates the traffic action with a traffic policy.

```
1 add tm trafficPolicy html_pol "HTTP.REQ.URL.CONTAINS(\\\"abc.html\\
 \")" html_act
```

4. Bind the traffic policy created previously to a traffic management virtual server (load balancing or content switching). Alternatively, the traffic policy can be associated globally.

#### Note

This traffic management virtual server must be associated with the relevant authentication virtual server that is associated with the SAML action.

```
1 bind lb vserver lb1_ssl -policyName html_pol -priority 100 -
 gotoPriorityExpression END -type REQUEST
```

## Configuring SAML single sign-on by using the GUI

To configure SAML single sign-on you need to define the SAML SSO profile, the traffic profile, and the traffic policy and bind the traffic policy to a traffic management virtual server or globally to the NetScaler appliance.

1. Navigate to **Security > AAA-Application Traffic > Policies > Traffic > SAML SSO Profiles** and click **Add**.
2. On the **Create SAML SSO Profiles** page, enter values for the following fields and click **Create**.
  - Name - Name for the SAML SSO Profile
  - Assertion Consumer Service Url - URL to which the assertion is to be sent
  - Signing Certificate Name - Name of the SSL certificate that is used to Sign Assertion
  - SP Certificate Name - Name of the SSL certificate of a peer/receiving party using which Assertion is encrypted
  - Issuer Name - The name to be used in requests sent from NetScaler to IdP to uniquely identify NetScaler
  - Signature Algorithm - Algorithm to be used to sign/verify SAML transactions
  - Digest Method - Algorithm to be used to compute/verify digest for SAML transactions
  - Audience - Audience for which an assertion sent by IdP is applicable. This is typically an entity name or url that represents a ServiceProvider
  - Audience - Audience for which an assertion sent by IdP is applicable. This is typically an entity name or url that represents a ServiceProvider
  - Skew Time (mins) - The number of minutes on either side of current time that the assertion would be valid
  - Sign Assertion - Option to sign portions of assertion when NetScaler IdP sends one. Based on the user selection, either Assertion or Response or Both or none can be signed.
  - Name ID Format - Format of Name Identifier sent in Assertion
  - Name ID Expression - Expression that is evaluated to obtain NameIdentifier to be sent in assertion

The screenshot shows the 'Create SAML SSO Profiles' configuration page. The form contains the following fields and options:

- Name\***: tm-saml-ssso
- Assertion Consumer Service Url\***: https://nssp2.example.com/samlst
- Relay State Expression**: Three 'Select' dropdown menus.
- Signing Certificate Name**: asa\_local (with 'Add' and 'Edit' buttons)
- SP Certificate Name**: asa\_local (with 'Add' and 'Edit' buttons)
- Encrypt Assertion**:
- Issuer Name**: (empty text field)
- Signature Algorithm\***:  RSA-SHA1,  RSA-SHA256
- Digest Method\***:  SHA1,  SHA256
- Audience**: (empty text field)
- Skew Time (mins)**: 5
- Sign Assertion**: ASSERTION
- Name ID Format**: Transient
- Name ID Expression**: Three 'Select' dropdown menus.

3. Navigate to **Security > AAA-Application Traffic > Policies>Traffic > Traffic Profiles** and click **Add**.
4. On the **Create Traffic Profile** page, enter values for the following fields, and click **Create**.
  - Name - Name for the traffic action.
  - AppTimeout (minutes) - Time interval, in minutes, of user inactivity after which the connection is closed.
  - Single Sign-on - Select ON
  - SAML SSO Profile - Select the created SAML SSSO Profile
  - KCD Account - Kerberos constrained delegation account name
  - SSO User Expression - Expression that is evaluated to obtain user name for SingleSignOn
  - SSO Password Expression - Expression that is evaluated to obtain password for Single-SignOn

## ← Create Traffic Profile

Name\*  
html\_act ⓘ

AppTimeout (minutes)  
2 ⓘ

Single Sign-on  
ON ▼ ⓘ

Form SSO Profile  
▼ Add Edit

SAML SSO Profile  
tm-saml-ss0 ▼ Add Edit ⓘ

Enable Persistent Cookie

Initiate Logout

KCD Account\*  
NONE ▼ Add Edit

Forced Timeout  
▼

SSO User Expression  
Select ▼ Select ▼ Select ▼  
Press Control+Space to start the expression and then type '.' to get the next set of options

SSO Password Expression  
Select ▼ Select ▼ Select ▼  
Press Control+Space to start the expression and then type '.' to get the next set of options

5. Navigate to **Security > AAA-Application Traffic > Policies > Traffic > Traffic Policies** and click **Add**.
6. On the **Create Traffic policy** page, enter values for the following, and click **Create**.
  - Name –Name of the traffic policy to be created
  - Profile –Select the created Traffic profile
  - Expression –Advanced policy expression that the policy uses to respond to specific request. For example, true.

The screenshot shows the 'Create Traffic Policy' configuration page. It has a title bar with a back arrow and the text 'Create Traffic Policy'. Below the title bar, there are three main sections:
 

- Name\***: A text input field containing 'html\_pol' and a help icon.
- Profile\***: A dropdown menu showing 'html\_act', with 'Add' and 'Edit' buttons to its right.
- Expression\***: Three 'Select' dropdown menus, with a text input field below them containing 'true'.

7. To bind the traffic policy to a traffic management virtual server, navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers** and select a virtual server.
8. Under **Advanced Settings**, click **Policies**.
9. Select **Traffic** in the **Choose Policy** field and select **Request** in the **Choose Type** field, and click **Continue**.
10. Under **Select Policy**, click to select the created traffic.
11. Click **Select**.
12. Click **Bind** to bind the traffic policy to the virtual server.

## Configure Microsoft Entra ID as SAML IdP and NetScaler as SAML SP


December 23, 2024

The SAML service provider (SAML SP) is a SAML entity that is deployed by the service provider. When a user tries to access a protected application, the SP evaluates the client request. If the client is unauthenticated (does not have a valid NSC\_TMAA or NSC\_TMAS cookie), the SP redirects the request to the SAML identity provider (IdP). The SP also validates SAML assertions that are received from the IdP.

The SAML identity provider (SAML IdP) is a SAML entity that is deployed on the customer network. The IdP receives requests from the SAML SP and redirects users to a logon page, where they must enter

their credentials. The IdP authenticates these credentials with the user directory (external authentication server, such as LDAP) and then generates a SAML assertion that is sent to the SP. The SP validates the token, and the user is then granted access to the requested protected application.


The following diagram depicts the SAML authentication mechanism.

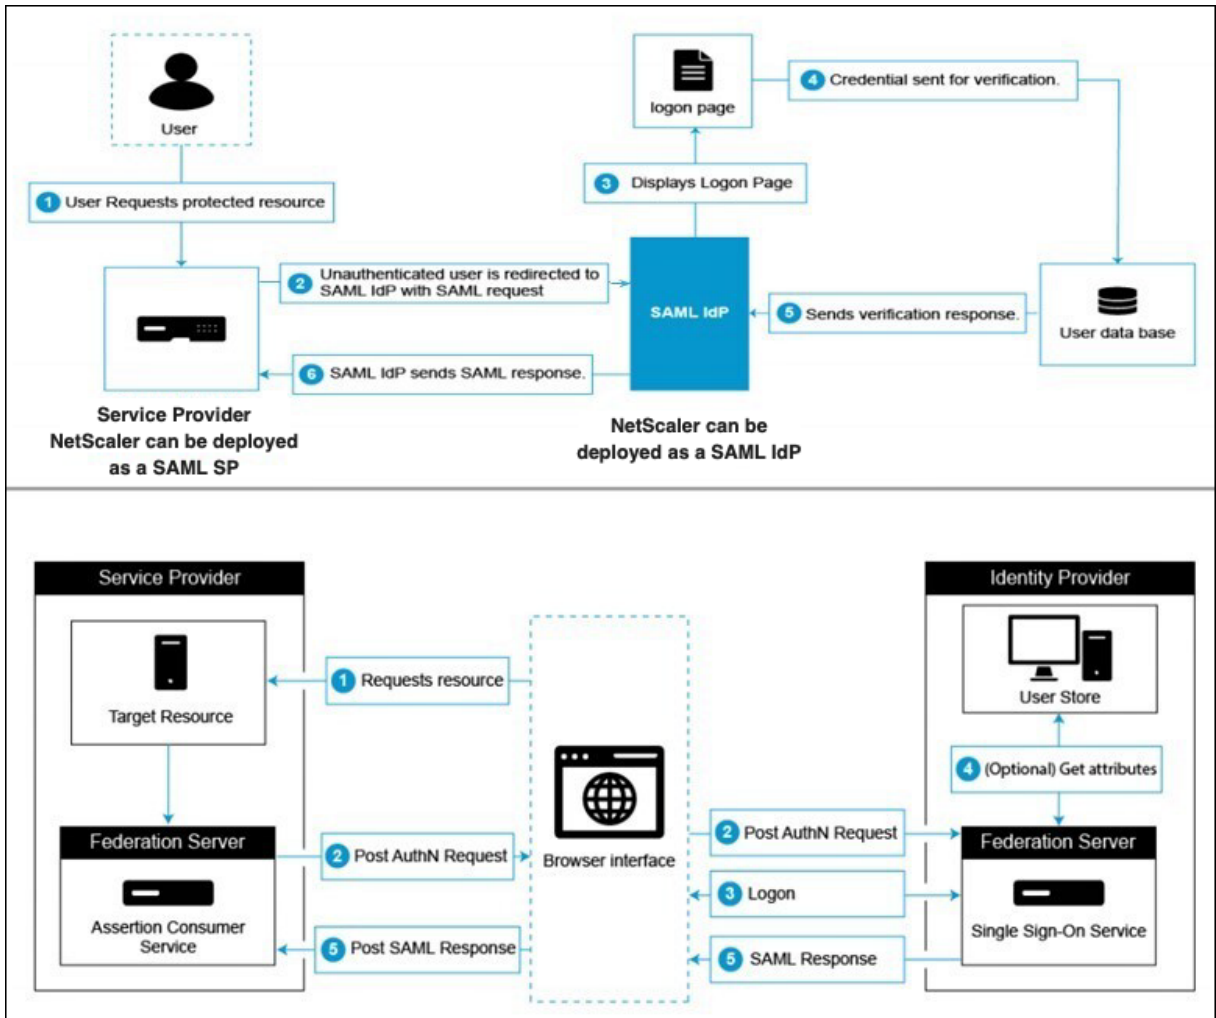


## Microsoft Entra ID side configurations

### Configure single sign-on settings:


1. On the Azure portal, click **Azure Active Directory**.
2. Under the **Manage** section in the navigation pane, click **Enterprise Applications**. A random sample of the applications in your Microsoft Entra ID (formerly Azure AD) tenant appears.
3. In the search bar, enter **NetScaler SAML Connector for Azure AD**.

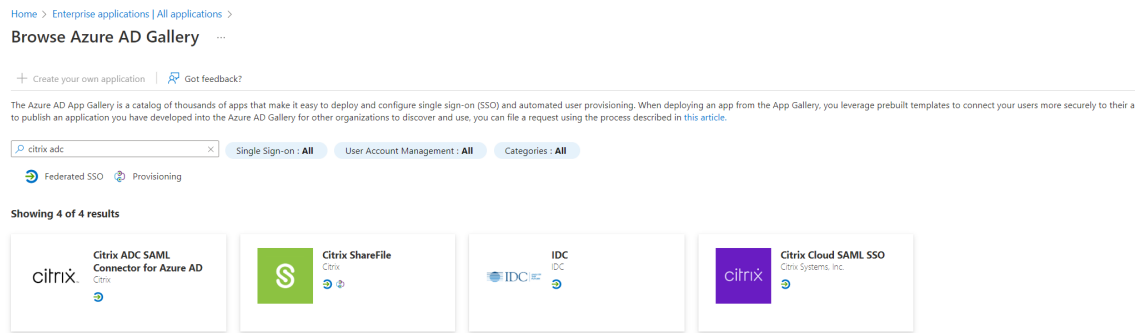

4. Under the **Manage** section, select **Single sign-on**.
5. Select **SAML** to configure single sign-on. The **Set up Single Sign-On with SAML - Preview** page appears. Here, Azure is acting as a SAML IdP.
6. **Configure basic SAML options:**
  - Identifier (Entity ID)** - Required for some apps. Uniquely identifies the application for which single sign-on is being configured. Microsoft Entra ID sends the identifier to the application as the audience parameter of the SAML token. The application is expected to validate it. This value also appears as the Entity ID in any SAML metadata provided by the application.
  - Reply URL** - Mandatory. Specifies where the application expects to receive the SAML token. The reply URL is also referred as the Assertion Consumer Service (ACS) URL. Specify the reply URL in the format `http(s)://<SP_URL>/cgi/samlauth`.
  - Sign-on URL** - When a user opens this URL, the service provider redirects to Microsoft Entra ID to authenticate and sign on the user.
  - Relay State** - Specifies to the application where to redirect the user after the authentication is complete.
7. Download the certificate (Base64) from the **SAML Certificates** section. The certificate is used as `samlidPCertName` while configuring NetScaler as SAML SP.

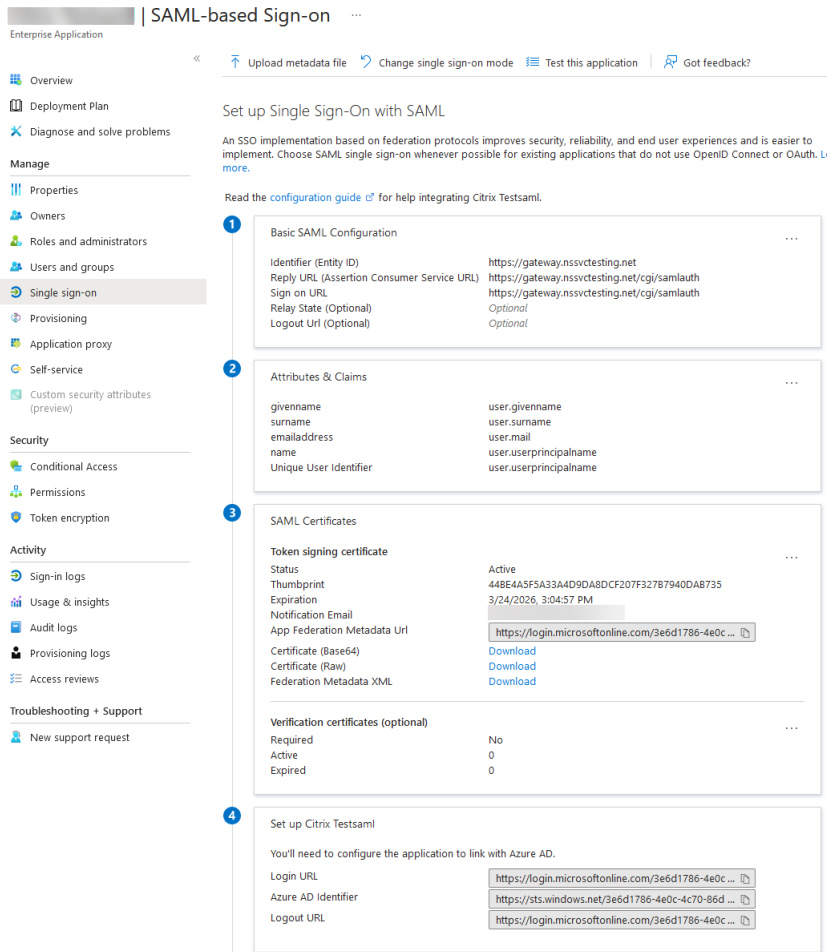

8. Once the Microsoft Entra ID side configuration is completed, add users and user groups that are permitted to access the application. Navigate to the **Users and groups** tab and click **+Add user/group**.

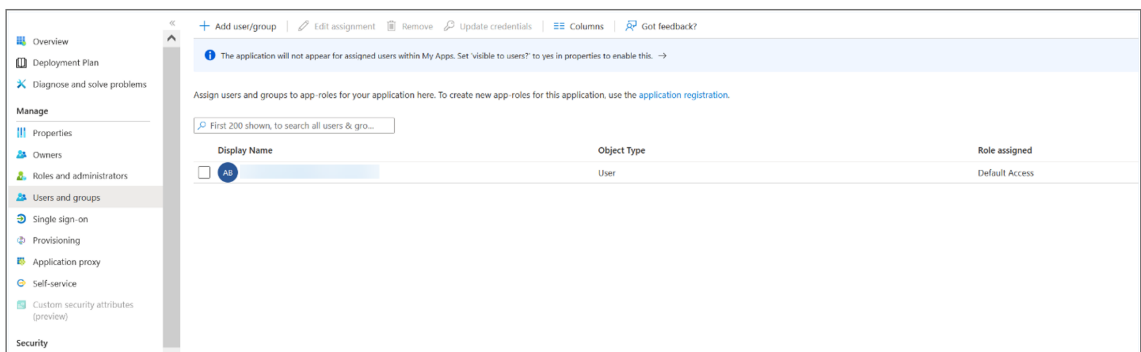

## NetScaler side configurations

1. Create a SAML action.

- Navigate to **NetScaler Gateway > Policies > Authentication > Actions > SAML**.



- On the **Policies** tab, click **Add**.
- In **Name**, specify a policy name.
- In **Server**, click **Add**, enter values for the following parameters, and click **Create**.

**Parameter description:**

The value for parameters in bold must be taken from the Azure side configurations.

- Name - Name of the server
- **Redirect URL** - Enter the login URL used previously in the Microsoft Entra ID “Setup NetScaler” section. <https://login.microsoftonline.com/3e6d1786-4e0c-4c70-86d2-ae7811f97f79/saml2>
- Single Logout URL - <https://login.microsoftonline.com/3e6d1786-4e0c-4c70-86d2-ae7811f97f79/saml2>
- SAML Binding - A mechanism that is used to transport SAML requestor and responder messages between the SP and IdP. When NetScaler acts as an SP, it supports Post, Redirect, and Artifact bindings. The default binding method is Post.
- Logout Binding - Specifies the transport mechanism of SAML logout messages. The default binding mechanism is Post.
- **IDP Certificate Name** - IdPCert Certificate (Base64) present in the **SAML Certificates** section.

```
1 add ssl certkey <IDP-CERT-NAME> -cert <Name of the IdP
certificate downloaded above>
```

- **User Field** - userprincipalName. Taken from “User Attributes and Claims” section of Azure IdP.
- **Signing Certificate Name** - Not needed for Microsoft Entra ID. Select the SAML SP certificate (with private key) that NetScaler uses to sign authentication requests to the IdP. The same certificate (without private key) must be imported to the IdP, so that the IdP can verify the authentication request signature. This field is not needed by most IdPs.
- **IssuerName** - Entity ID or the identifier. <https://gateway.nssvctesting.net> in this case. In a load balancing deployment scenario, you must use the FQDN of the load balancing virtual server.
- Reject unsigned assertion - Option that you can specify if you require the assertions from the IdP to be signed. The default option is ON.
- Audience - Audience for which the assertion sent by IdP is applicable. This is typically an entity name or URL that represents the service provider.

- Signature Algorithm - Algorithm to be used to sign/verify SAML transactions. The default value is RSA-SHA256.
  - Digest Method\*\* - Algorithm to be used to compute/verify digest for SAML transactions. The default value is SHA256.
  - Default Authentication Group\*\* - The default group that is chosen when the authentication succeeds in addition to the extracted groups.
  - Group Name Field - Name of the tag in an assertion that contains user groups.
  - Skew Time (mins) - This option specifies the clock skew in minutes that the NetScaler service provider allows on an incoming assertion. For example, if you set the skew time to 10 minutes at 16:00, the SAML assertion is valid from 15:50 to 16:10 - 20 minutes in total. The default skew time is 5 minutes.
  - Two factor - OFF
  - Requested Authentication Context - Exact
  - Authentication Class Type - None
  - Send Thumbprint - OFF
  - Enforce Username - ON
  - Force Authentication - OFF
  - Store SAML Response - OFF
2. Create a corresponding SAML policy for the SAML action, and bind the policy to the authentication virtual server.
- Navigate to **Security > AAA-Application Traffic > Policies > Authentication > Advanced Policies > Policy** and click **Add**.
  - On the **Create Authentication SAML Policy** page, provide the following details:
    - Name - Specify a name for the SAML policy.
    - Action Type - Select SAML as the authentication action type.
    - Action - Select the SAML server profile to bind the SAML policy with.
    - Expression - Displays the name of the rule or expression that the SAML policy uses to determine if the user must authenticate with the SAML server. On the text box, set the value “rule = true” for the SAML policy to take effect and the corresponding SAML action to be run.
3. Bind the SAML policy to the VPN virtual server and link the VPN virtual server to the authentication virtual server through an authentication profile. For details on the binding procedure, see [Bind the authentication policy](#).

**Notes:**

- Microsoft Entra ID does not expect the **Subject ID** field in the SAML request.
- For NetScaler to not send the **Subject ID** field, type the following command on the NetScaler CLI.  

```
nsapimgr_wr.sh -ys call="ns_saml_dont_send_subject"
```

This command is only applicable in nFactor authentication workflows.
- Add `nsapimgr_wr.sh -ys call="ns_saml_dont_send_subject"` command in the `/nsconfig/rc.netscaler` file for persistency and also to take effect upon rebooting.

## More features supported for SAML

August 17, 2024

The following features are supported for SAML.

### Metadata reading and generation support for SAML SP and IdP configuration

NetScaler appliance now supports metadata files as means of configuration entities for both SAML Service Provider (SP) and Identity Provider (IdP). The metadata file is a structured XML file that describes the configuration of an entity. The metadata files for SP and IdP are separate. Based on deployment, and at times, one SP, or IdP entity can have multiple metadata files.

As an administrator, you can export and import (SAML SP and IdP) metadata files on NetScaler.

The functionality of metadata export and import for SAML SP and IdP is explained in the following sections.

#### Metadata export for SAML SP

Consider an example where the NetScaler is configured as SAML SP and an SAML IdP would like to import metadata that contains the NetScaler SP configuration. Assume that the NetScaler appliance is already configured with a “samlAction” attribute that specifies SAML SP configuration.

To export metadata from users or administrator, query the NetScaler Gateway or authentication virtual server in the following format:

```
1 https://vserver.company.com/metadata/samlsp/<action-name>
```

Starting from 14.1-29.x, NetScaler as a SAML SP can support multiple certificates from the same IdP. This functionality allows the SP to select the correct certificate and validate SAML assertions from the IdP by using that certificate. The SP can store up to 4 certificates.

The following command displays the configuration of the SAML action:

```
1 show authentication samlaction SAMLSPAct1
2 Name: SamlSPAct1
3 User field:
4 IdPCert:
5 SigningCert : ns-sftrust-certificate
6 IssuerName :
7 Redirect Url:
8 Single Logout Url:
9 Reject unsigned assertion: ON
10 Two factor: OFF
11 Signature Method: RSA-SHA256
12 Digest Method: SHA256
13 SAML Binding: POST
14 Send Thumbprint: OFF
15 Enforce Username: ON
16 Skew Time: 5
17 Requested Authentication Context: exact
18 Authentication Class Reference: None
19 Logout Binding: POST
20 Force Authentication: OFF
21 Metadata Import URL: https://<idp meta-data url>
22 Metadata Import Refresh Interval: 3600
23 Preferred bind type: SSOREDIRECT
24 Store SAML Response: OFF
```

### Metadata import for SAML SP

Currently, the SAML Action configuration on the NetScaler appliance takes various parameters. The administrator manually specifies these parameters. However, administrators are often unaware of nomenclature if it comes to interop with different SAML systems. If metadata of IdP is available, then a bulk of the configuration in the 'samlAction' entity can be avoided. In fact, the entire IdP specific configuration might be omitted if IdP metadata file is given. The 'samlAction' entity now takes an extra parameter to read configuration from metadata file.

When you import a metadata in a NetScaler appliance, the metadata does not contain any signature algorithms to be used, it contains the endpoint details. A metadata can be signed with certain algorithms which can be used to verify the metadata itself. The algorithms are not stored in the 'samlAction' entity.

Therefore, what you specify in the 'samlAction' entity are the ones used when sending the data out. An incoming data can contain a different algorithm for a NetScaler appliance to process.

You can import a maximum size of 64 K bytes of metadata.

**To fetch the metadata files by using command line interface.**

```
1 set samlAction <name> [-metadataUrl <url> [-metadataRefreshInterval <int>] https://idp.citrix.com/samlidp/metadata.xml
```

**Note**

The metadataRefreshInterval parameter is the interval in minutes for fetching metadata information from the specified metadata URL. Default value 36000.

**Metadata import for SAML IdP**

The “samlIdPProfile” parameter takes a new argument to read the entire configuration that is specific to SP. SAML IdP configuration can be simplified by replacing SP specific properties with an SP metadata file. This file is queried through HTTP.

**To read from metadata file using command line interface:**

```
1 set samlIdPProfile <name> [-metadataUrl <url>] [-metadataRefreshInterval <int>]
```

**Name-value attribute support for SAML authentication**

You can now configure SAML authentication attributes with a unique name along with values. The names are configured in the SAML action parameter and the values are obtained by querying for the names. By specifying the name attribute value, admins can easily search for the attribute value associated with the attribute name. Also, admins no longer have to remember the attribute by its value alone.

**Important**

- In samlAction command, you can configure a maximum of 64 attributes separated by comma with total size less than 2048 bytes.
- Citrix recommends that you use the attributes list. Use of “attribute 1 to attribute 16” will cause session failure if the extracted attribute size is large.

**To configure the name-value attributes by using the CLI**

At the command prompt, type:

```
1 add authentication samlAction <name> [-Attributes <string>]
```

**Example:**

```
1 add authentication samlAction samlAct1 -attributes " mail,sn,
 userprincipalName "
```

## Assertion Consumer Service URL support for SAML IdP

A NetScaler appliance configured as a SAML Identity Provider (IdP) now supports Assertion Consumer Service (ACS) indexing to process SAML Service Provider (SP) request. The SAML IdP imports ACS indexing configuration from SP metadata or allows for entering ACS indexes information manually.

The following table lists some articles that are specific to deployments where the NetScaler appliance is used as a SAML SP or a SAML IdP.

Some information on other specific deployments:

- [NetScaler as SAML SP on FIPS Device](#)
- [Configuring Office365 for single sign-on with NetScaler as SAML IdP](#)

## WebView credential type support for authentication mechanisms

The authentication of a NetScaler appliance can now support AUTHv3 protocol. The WebView credential type in AUTHv3 protocol support all type of authentication mechanisms (including SAML and OAuth). The WebView credential type is a part of AUTHv3, which is implemented by Citrix Receiver and browser in web applications.

The following example explains the flow of WebView events through NetScaler Gateway and Citrix Receiver:

1. The Citrix Receiver negotiates to NetScaler Gateway for AUTHv3 protocol support.
2. NetScaler appliance responds positively and suggests a specific start URL.
3. Citrix Receiver then connects to the specific endpoint (URL).
4. The NetScaler Gateway sends a response to the client to start the WebView.
5. Citrix Receiver starts WebView and sends initial request to NetScaler appliance.
6. NetScaler appliance redirects URI to browser login endpoint.
7. Once authentication is complete, NetScaler appliance sends completion response to WebView.
8. The WebView now exits and gives control back to Citrix Receiver to continue AUTHv3 protocol for session establishment.

## Increase of SessionIndex size in SAML SP

The SessionIndex size of the SAML Service Provider (SP) is increased to 96 bytes. Previously, the default maximum size of SessionIndex was 63 bytes.

**Note**

Support introduced in NetScaler 13.0 Build 36.x

**Custom authentication class reference support for SAML SP**

You can configure custom authentication class reference attribute in the **SAML action** command. Using the custom authentication class reference attribute, you can customize the class names in the appropriate SAML tags. The custom authentication class reference attribute along with namespace is sent to the SAML IdP as part of SAML SP authentication request.

Previously, using SAML action command, you might configure only a set of predefined classes defined in `authnCtxClassRef` attribute.

**Important**

While configuring `customAuthnCtxClassRef` attribute, ensure the following:

- The names of the classes must include alphanumeric characters or a valid URL with proper XML tags.
- If you have to configure multiple custom classes, each class must be separated by commas

**To configure the `customAuthnCtxClassRef` attributes by using the CLI**

At the command prompt, type:

- `add authentication samlAction <name> [-customAuthnCtxClassRef <string>]`
- `set authentication samlAction <name> [-customAuthnCtxClassRef <string>]`

Example:

- `add authentication samlAction samlact1 -customAuthnCtxClassRef http://www.class1.com/LoA1,http://www.class2.com/LoA2`
- `set authentication samlAction samlact2 -customAuthnCtxClassRef http://www.class3.com/LoA1,http://www.class4.com/LoA2`

**To configure the `customAuthnCtxClassRef` attributes by using the GUI**

1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Actions > SAML**.
2. On the SAML page, select **Servers** tab and Click **Add**.
3. On the **Create Authentication SAML Server** page, enter the name for SAML action.

4. Scroll down to configure the class types in **Custom Authentication Class Types** section.

Custom Authentication Class Types

  
 Send Thumbprint ⓘ  
 Enforce Username ⓘ  
 Force Authentication  
 Store SAML Response

### Support for artifact binding in SAML IdP

NetScaler appliance configured as SAML Identity Provider (IdP) supports artifact binding. The artifact binding enhances the security of SAML IdP and restricts the malicious users from inspecting the assertion.

### Assertion Consumer Service URL support for SAML IdP

A NetScaler appliance configured as a SAML Identity Provider (IdP) now supports Assertion Consumer Service (ACS) indexing to process SAML Service Provider (SP) request. The SAML IdP imports ACS indexing configuration from SP metadata or allows for entering ACS indexes information manually.

### FIPS offload support

A NetScaler MPX FIPS appliance used as a SAML service provider now supports encrypted assertions. Also, a NetScaler MPX FIPS appliance functioning as a SAML service provider or a SAML identity provider can now be configured to use the SHA2 algorithms on FIPS hardware.

#### Note

In FIPS mode, only the RSA-V1\_5 algorithm is supported as key transport algorithm.

### Configuring FIPS offload support using the command line interface:

1. Add SSL FIPS

**add ssl fipsKey fips-key**

2. Create a CSR and use it at CA server to generate a certificate. You can then copy the certificate in `/nsconfig/ssl`. Let's assume that the file is `fips3cert.cer`.

```
add ssl certKey fips-cert -cert fips3cert.cer -fipsKey fips-key
```



3. Specify this certificate in the SAML action for SAML SP module

```
set samlAction <name> -samlSigningCertName fips-cert
```

4. Use the certificate in samlIdpProfile for SAML IdP module

```
set samlidpprofile fipstest -samlIdpCertName fips-cert
```

## Common SAML terminologies

The following are some common SAML terminologies:

- **Assertion:** A SAML assertion is an XML document returned by the Identity Provider to the Service Provider after authentication of the user. The assertion has a specific structure, as defined by the SAML standard.
- **Types of Assertions:** The following are the types of assertion.
  - Authentication - the user is authenticated by a particular means at a particular time
  - Authorization - the user was granted or denied access to a specified resource
  - Attributes - the user is associated with the supplied attributes
- **Assertion Consumer Service (ACS):** The service provider's endpoint (URL) that is responsible for receiving and parsing a SAML assertion
- **Audience Restriction:** A value within the SAML assertion that specifies who (and only who) the assertion is intended for. The "audience" will be the service provider and is typically a URL but can technically be formatted as any string of data.
- **Identity Provider (IdP):** In terms of SAML, the Identity Provider is the entity that verifies the identity of the user, in response to a request by the Service Provider.

The Identity Provider is responsible for maintaining and authenticating the user's identity

- **Service Provider (SP):** In terms of SAML, the Service Provider (SP) offers a service to the user and allows the user to sign in by using SAML. When the user attempts to sign in, the SP sends a SAML authentication request to the Identity Provider (IdP)
- **SAML Binding:** SAML requestors and responders communicate by exchanging messages. The mechanism to transport these messages is called a SAML binding.
- **HTTP Artifact:** One of the binding options supported by the SAML protocol. HTTP Artifact is useful in scenarios where the SAML requester and responder are using an HTTP User-Agent and do not want to transmit the entire message, either for technical or security reasons. Instead, a SAML Artifact is sent, which is a unique ID for the full information. The IdP can then use the Artifact to retrieve the full information. The artifact issuer must maintain state while the artifact is pending. An Artifact Resolution Service (ARS) must be set up.

HTTP Artifact sends the artifact as a query parameter.

- **HTTP POST:** One of the binding options supported by the SAML protocol.

HTTP POST sends the message content as a POST parameter, in the payload.

- **HTTP Redirect:** One of the binding options supported by the SAML protocol.

When HTTP Redirect is used, the Service Provider redirects the user to the Identity Provider where the login happens, and the Identity Provider redirects the user back to the Service Provider. HTTP Redirect requires intervention by the User-Agent (the browser).

HTTP Redirect sends the message content in the URL. Because of this, it cannot be used for the SAML response, because the size of the response will typically exceed the URL length allowed by most browsers.

**Note:** The NetScaler appliance supports POST and Redirect bindings during logout.

- **Metadata:** Metadata is the configuration data in SP and IdP to know how to communicate to each other which will be in XML standards

## Other useful Citrix articles related to SAML authentication

You might find the following articles related to SAML authentication useful.

- <https://support.citrix.com/article/CTX277558>
- <https://support.citrix.com/article/CTX259127>
- <https://support.citrix.com/article/CTX228135>
- <https://support.citrix.com/article/CTX221631>
- <https://support.citrix.com/article/CTX138988>

## OAuth authentication

May 2, 2023

The authentication, authorization, and auditing traffic management feature supports OAuth and OpenID Connect (OIDC) authentication. It authorizes and authenticates users to services that are hosted on applications such as Google, Facebook, and Twitter.

### Points to note

- NetScaler Advanced Edition and higher is required for the solution to work.

- A NetScaler appliance must be on version 12.1 or later for the appliance to work as an OAuth IdP using OIDC.
- OAuth on a NetScaler appliance is qualified for all SAML IdPs that are compliant with “OpenID connect 2.0”.

A NetScaler appliance can be configured to behave as a Service Provider (SP) or an Identity Provider (IdP), using SAML and OIDC. Previously, a NetScaler appliance configured as IdP supported only SAML protocol. Starting from NetScaler 12.1 version, NetScaler supports the OIDC as well.

OIDC is an extension to OAuth authorization/delegation. A NetScaler appliance supports OAuth and OIDC protocols in the same class of other authentication mechanisms. OIDC is an add-on to OAuth as it provides a way for getting user information from the authorization server as opposed to OAuth that gets only a token which cannot be gleaned for user information.

The authentication mechanism facilitates the inline verification of OpenID tokens. A NetScaler appliance can be configured to obtain certificates and verify signatures on the token.

A major advantage of using the OAuth and OIDC mechanisms is that the user information is not sent to the hosted applications. Therefore, the risk of identity theft is considerably reduced.

The NetScaler appliance configured for authentication, authorization, and auditing now accepts incoming tokens that are signed using the HMAC HS256 algorithm. In addition, the public keys of the SAML Identity Provider (IdP) are read from a file, instead of learning from a URL endpoint.

In the NetScaler implementation, the application is accessed by the authentication, authorization, and auditing traffic management virtual server. So, to configure OAuth, you must configure an OAuth policy which must then be associated with an authentication, authorization, and auditing traffic management virtual server.

### **Configure the OpenID Connect protocol**

A NetScaler appliance can now be configured as an identity provider by using OIDC protocol. OIDC protocol strengthens the identity providing capabilities of the NetScaler appliance. You can now access the enterprise wide hosted application with a single sign-on. The OIDC offers more security by not transferring user password but works with tokens with specific lifetime. OIDC also is designed to integrate with non-browser clients such as apps and services. Therefore, many implementations adopt OIDC widely.

### **Advantages of having the OpenID Connect support**

- OIDC eliminates the overhead of maintaining multiple authentication passwords as the user has a single identity across the organization.

- OIDC provides a robust security for your password as the password is shared only with your identity provider and not with any application you access.
- OIDC has vast interoperability with various systems making it easier for the hosted applications to accept OpenID.
- OIDC is a simple protocol that enables native clients to easily integrate with servers.

### To configure a NetScaler appliance as an IdP using the OpenID Connect protocol by using GUI

1. Navigate to **Configuration > Security > AAA-Application Traffic > Policies > Authentication > Advanced Policies > OAuth IdP**.

2. Click **Profile** and click **Add**.

On the **Create Authentication OAuth IDP Profile** screen, set values for the following parameters and click **Create**.

- **Name** –Name of the authentication profile.
- **Client ID** –Unique string that identifies SP.
- **Client Secret** –Unique secret that identifies SP.
- **Redirect URL** –Endpoint on SP to which code/token has to be posted.
- **Issuer Name** –String that identifies IdP.
- **Audience** –Target recipient for the token being sent by IdP. This might be checked by the recipient.
- **Skew Time** –The time for which the token remains valid.
- **Default Authentication Group** –A group added to the session for this profile to simplify policy evaluation and help in customizing policies.

3. Click **Policies** and click **Add**.

4. On the **Create Authentication OAuth IDP Policy** screen, set values for the following parameters and click **Create**.

- **Name** – The name of the authentication policy.
- **Action** –Name of profile created earlier.
- **Log Action** –Name of message log action to use when a request matches this policy. Not a mandatory field.
- **Undefined-Result Action** –Action to perform if the result of policy evaluation is undefined(UNDEF). Not a mandatory field.
- **Expression** –Advanced policy expression that the policy uses to respond to specific request. For example, true.
- **Comments** –Any comments about the policy.

**Binding the OAuthIdP policy and LDAP policy to the authentication virtual server**

1. Navigate to **Configuration > Security > AAA-Application Traffic > Policies > Authentication > Advanced Policies > Actions > LDAP**.
2. On **LDAP Actions** screen, click **Add**.
3. On **Create Authentication LDAP Server** screen, set the values for the following parameters, and click **Create**.
  - **Name** – The name of the LDAP action
  - **ServerName/ServerIP** – Provide FQDN or IP of the LDAP server
  - Choose appropriate values for **Security Type, Port, Server Type, Time-Out**
  - Make sure **Authentication** is checked
  - **Base DN** – Base from which to start LDAP search. For example, dc=aaa,dc=local.
  - **Administrator Bind DN:** User name of the bind to LDAP server. For example, admin@aaa.local.
  - **Administrator Password/Confirm Password: Password to bind LDAP**
  - Click **Test Connection** to test your settings.
  - **Server Logon Name Attribute:** Choose “sAMAccountName”
  - Other fields are not mandatory and hence can be configured as required.
4. Navigate to **Configuration > Security > AAA-Application Traffic > Policies > Authentication > Advanced Policies > Policy**.
5. On **Authentication Policies** screen, click **Add**.
6. On **Create Authentication Policy** page, set the values for the following parameters, and click **Create**.
  - **Name** – Name of the LDAP Authentication Policy.
  - **Action Type** – Choose **LDAP**.
  - **Action** – Choose the LDAP action.
  - **Expression** – Advanced policy expression that the policy uses to respond to specific request. For example, true\*\*.

**To configure the NetScaler appliance as an IdP using the OpenID Connect protocol by using CLI**

At the command prompt, type the following commands:

- `add authentication OAuthIDPProfile <name> [-clientID <string>][-clientSecret ][-redirectURL <URL>][-issuer <string>][-audience <string>][-skewTime <mins>] [-defaultAuthenticationGroup <string>]`

- `add authentication OAuthIdPPolicy <name> -rule <expression> [-action <string> [-undefAction <string>] [-comment <string>]] [-logAction <string>]`
- `add authentication ldapAction aaa-ldap-act -serverIP 10.0.0.10 -ldapBase "dc=aaa,dc=local"`
- `ldapBindDn <administrator@aaa.local> -ldapBindDnPassword <password> -ldapLoginName sAMAccountName`
- `add authentication policy aaa-ldap-adv-pol -rule true -action aaa-ldap-act`
- `bind authentication vserver auth_vs -policy <ldap_policy_name> -priority 100 -gotoPriorityExpression NEXT`
- `bind authentication vserver auth_vs -policy <OAuthIDPPolicyName> -priority 5 -gotoPriorityExpression END`
- `bind vpn global -certkey <>`

**Note**

You can bind more than one key. Public parts of certificates bound are sent in response to `jwtks \\_uri query (https://gw/oauth/idp/certs)`.

## NetScaler as an OAuth SP

August 17, 2024

The authentication, authorization, and auditing traffic management feature supports OAuth authentication for authenticating users to applications that are hosted on applications such as Google, Facebook, and Twitter.

**Points to note**

- NetScaler Advanced Edition and higher is required for the solution to work.
- OAuth on NetScaler is qualified for all SAML IdPs that are compliant with “OpenID connect 2.0”.

**Important:**

NetScaler might respond with a CSRF error when a content-heavy website sends multiple authentication requests on session expiry. As a workaround, it is recommended that when you

configure the OAuth policy, ensure that the policy is configured for both the host name and the path which are the main entry points.

### Configure OAuth by using the GUI

#### 1. Configure the OAuth action.

- Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Actions > OAUTH Actions** and click **Add**.
- On the **Create Authentication OAuth Server** page, set the following parameter values and click **Create**:
  - Name: Name for the OAuth Authentication action.
  - OAuth Implementation Type: Type of the OAuth implementation. Default value is Generic.
  - Client ID: Unique identity of the client/user being authenticated.
  - Client Secret: Secret string established by the user and authorization server. MaxLength = 239.
  - Authentication: If the authentication is disabled, password is not sent in the request.
  - Authorization Endpoint: Authorization endpoint/URL to which the unauthenticated user is redirected. NetScaler redirects the user to this endpoint by adding query parameters including the client ID. If this parameter is not specified then as the default value, NetScaler considers the token Endpoint/URL value.
  - Token Endpoint: URL to which the OAuth token is sent to verify its authenticity. Upon successful authentication, the user obtains this token from the authorization server. NetScaler validates the presented token by posting it to the configured URL. Maximum Length: 511.  
Note: Authorization endpoint or token endpoint are mandatory parameters for OAuth action. Maximum Length: 511.
  - ID Token Decrypt Endpoint: URL to which obtained idtoken will be posted to get a decrypted user identity. Encrypted idtoken will be obtained by posting OAuth token to token endpoint. In order to decrypt idtoken, NetScaler posts request to the URL configured Maximum Length: 511.  
Graph Endpoint: URL of the Graph API service to learn Enterprise Mobility Services (EMS) endpoints. MaxLength = 255
  - Cert Endpoint: URL of the endpoint that contains JWKs (Json Web Key) for JWT (Json Web Token) verification. MaxLength = 127
  - Audience: Audience for which token sent by Authorization server is applicable. This is typically entity name or url that represents the recipient. MaxLength = 127

- User Name Field: Attribute in the token from which username should be extracted. MaxLength = 127
- User Info URL: URL to which OAuth access token will be posted to obtain user information. MaxLength = 127
- Introspect URL: URL to which access token would be posted for validation. MaxLength = 127
- Skew Time (mins): This option specifies the allowed clock skew in number of minutes that NetScaler allows on an incoming token. For example, if skewTime is 10, then token would be valid from (current time - 10) min to (current time + 10) min, ie 20min in all. MaxLength = 127
- Issuer: Identity of the server whose tokens are to be accepted. MaxLength = 127.
- Certificate File Path: Path to the file that contains JWKS (Json Web Key) for JWT (Json Web Token) verification.
- Refresh Interval: Interval at which services are monitored for necessary configuration. Default = 1440
- Default Authentication Group: This is the default group that is chosen when the authentication succeeds in addition to extracted groups.
- Grant Type: Grant type support. value can be code or password
- Attributes: List of attribute names separated by ',' which needs to be extracted.
- Resource URL: Resource URL for OAuth configuration.
- OAuth Misc Flags
  - \* Base64Encode Authorization With Padding: When sending authorization requests to the token and introspect endpoints, this parameter ensures that the authorization header is Base64 encoded, with padding.
  - \* Enable JWT Request: Enables the JWT-request parameter to be included in the authorization requests sent to the IdP.
  - \* Request Attribute: Indicates the Name-Value pairs of attributes to be inserted in the request parameter.

2. Configure the OAuth Policy.

Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Policy**, and create a policy with OAuth as the action type, and associate the required OAuth action with the policy.

3. Associate the OAuth policy with an authentication virtual server.

Navigate to **Security > AAA - Application Traffic > Virtual Servers**, and associate the OAuth policy with the authentication virtual server.



**Note:**

Attributes (1 to 16) can be extracted in the OAuth response. Currently these attributes are not evaluated. They are added for the future reference.

**Configure OAuth by using the CLI**

## 1. Define an OAuth action.

```
1 add authentication OAuthAction <name> [-OAuthType <OAuthType>] [-
 authorizationEndpoint <URL>] [-tokenEndpoint <URL>] [-
 idtokenDecryptEndpoint <URL>] [-clientId <string>][-
 clientSecret] [-defaultAuthenticationGroup <string>][-
 OAuthMiscFlags (Base64Encode_Authorization_With_Padding |
 EnableJWTRequest)][-Attribute1 <string>] [-Attribute2 <string>]
 [-Attribute3 <string>] [-Attributes <string>] [-tenantID <
 string>] [-GraphEndpoint <string>] [-refreshInterval <
 positive_integer>] [-CertEndpoint <string>][-audience <string>]
 [-userNameField <string>] [-skewTime <mins>] [-issuer <string
 >] [-UserInfoURL <URL>] [-CertFilePath <string>] [-grantType (
 CODE | PASSWORD)] [-authentication (ENABLED | DISABLED)] [-
 introspectURL <URL>][-allowedAlgorithms <allowedAlgorithms>
 ...] [-PKCE (ENABLED | DISABLED)] [-tokenEndpointAuthMethod <
 tokenEndpointAuthMethod>] [-metadataUrl <URL>] [-resourceUri <
 URL>]
```

## 2. Associate the action with an advanced authentication policy.

```
1 add authentication Policy <name> -rule <expression> -action <
 string>
```

**Example:**

```
1 add authentication oauthAction a -authorizationEndpoint https://
 example.com/ -tokenEndpoint https://example.com/ -clientId sadf
 -clientsecret df
```

For more information on authentication OAuthAction parameters, see [authentication OAuthAction](#).

**Note:**

- When a certEndpoint is specified, NetScaler polls that endpoint at the configured frequency to learn the keys.

To configure a NetScaler to read the local file and parse keys from that file, a new configuration option is introduced as follows:

```
1 set authentication OAuthAction <name> -CertFilePath <path to local file
 with jwks>
```

OAuth feature now supports the following capabilities in the token API from the Relying Party (RP) side and from the IdP side of NetScaler Gateway and NetScaler.

- PKCE (Proof Key for Code Exchange) support
- Support for client\_assertion

### **Name-value attribute support for OAuth authentication**

You can now configure OAuth authentication attributes with a unique name along with the values. The names are configured in the OAuth action parameter either as “Attributes” and the values are obtained by querying for the names. The extracted attributes are stored in the authentication, authorization, and auditing session. Admins can query these attributes either using `http.req.user.attribute("attribute name")` or `http.req.user.attribute(1)`, based on the chosen method of specifying attribute names.

By specifying the name of the attribute, admins can easily search for the attribute value associated with that attribute name. Also, admins no longer have to remember the “attribute1 to attribute16” by its number alone.

#### **Important**

In an OAuth command, you can configure a maximum of 64 attributes separated by comma with a total size less than 1024 bytes.

#### **Note**

The session failure can be avoided if the total value size of “attribute 1 to attribute 16” and the values of attributes specified in “Attributes” are not more than 10 KB.

### **To configure the name-value attributes by using the CLI**

At the command prompt, type:

```
1 add authentication OAuthAction <name> [-Attributes <string>]
2
3 set authentication OAuthAction <name> [-Attributes <string>]
```

Examples:

```
1 add authentication OAuthAction a1 - attributes "email,company" -
 attribute1 email
2
3 set authentication OAuthAction oAuthAct1 -attributes "mail,sn,
 userprincipalName"
```

## NetScaler as an OAuth IdP

March 18, 2024

NetScaler can now be configured as an identity provider by using the OpenID-Connect (OIDC) protocol. OIDC protocol strengthens the identity providing capabilities of NetScaler. You can now access the enterprise wide-hosted application with a single sign-on as OIDC offers more security by not transferring the user password but using tokens with specific lifetime. OpenID is also designed to integrate with non-browser clients such as apps and services. Therefore, the OIDC protocol is widely adopted by many implementations.

### Note

NetScaler must be on version 12.1 or later to work as an OAuth IdP using the OIDC protocol.

## Advantages of having NetScaler as an OAuth IdP

- Eliminates the overhead of maintaining multiple authentication passwords as the user has a single identity across an organization.
- Provides a robust security for your password as the password is shared only with your identity provider and not with any application you access.
- Provides vast interoperability with various systems, making it easier for the hosted applications to accept OpenID.

### Note

NetScaler Advanced Edition and higher is required for the solution to work.

## To configure NetScaler as an OAuth IdP using the GUI

1. Create an authentication OAuth IdP policy.
  - Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > OAuth IDP > Policies**.
  - Under **Policies**, click **Add**.
  - On the **Create Authentication OAuth IDP Policy** page, set values for the following parameters and click **Create**.
    - Name: The name of the authentication policy.
    - Action: Name of authentication OAuth IdP profile to apply to requests or connections that match this policy. See step 2 for detailed steps.

- **Log Action:** Name of the message log action to use when a request matches this policy. See step 3 for detailed steps. This field is optional.
- **Undefined-Result Action:** Action to perform if the result of the policy evaluation is undefined. An undefined event indicates an internal error condition. Available actions are DROP and RESET. This field is optional.
- **Expression:** Advanced expression that the policy uses to respond to specific requests. For more information about policies and expressions, see [Policies and expressions](#).

## 2. Create an authentication OAuth IdP action.

- On the **Create Authentication OAuth IDP Policy** page, click **Add** in the **Action** field.
- On the **Create Authentication OAuth IDP Profile** page that appears, set values for the following parameters and click **Create**.
  - **Name:** Name for the new OAuth IdP single sign-on profile.
  - **Client ID:** Unique identity of the relying party requesting for authentication. Maximum allowed length is 127 characters.
  - **Client Secret:** Unique secret string to authorize the relying party at the authorization server. Maximum allowed length is 239 characters.
  - **Redirect URL:** The relying party URL endpoint to which the OAuth token needs to be sent. Maximum allowed length is 255 characters.
  - **Issuer Name:** The name to be used in requests sent from NetScaler to the IdP to uniquely identify NetScaler. Maximum allowed length is 127 characters.
  - **Audience:** Target recipient for the token being sent by the IdP. This is the entity name or the URL that represents the recipient. Maximum allowed length is 127 characters.
  - **Skew Time:** This option specifies the duration for which the token sent by the NetScaler IdP is valid. For example, if the skew time is set to 10 minutes, then the token would be valid from (current time minus 10) minutes to (current time plus 10) minutes; 20 minutes in total. Default duration is 5 minutes.
  - **Default Authentication Group:** Group added to the session's internal group list. This is useful for admins to determine the configuration for the relying party in an nFactor flow. It can be used in the expression `AAA.USER.IS_MEMBER_OF("group name")` for authentication policies to identify the relying party-related nFactor flow. Maximum allowed length is 63 characters.
  - **Relying Party metadata URL:** Endpoint where the NetScaler IdP can get details about the relying party being configured. Metadata response must include endpoints for `jwks_uri` for the relying party public keys. Maximum allowed length is 255 characters.
  - **Refresh Interval:** Intervals at which the relying party metadata is refreshed.
  - **Signature Service:** Select this option to encrypt the token when the NetScaler IdP sends one.

- Attributes: Name-Value pairs of attributes to be inserted in the ID token. Configuration format is `name=value_expr@@name2=value2_expr@@@`. The `@@@` format is used as a delimiter between the name-value pairs.
- Send Password: Select this option to send the encrypted password in the ID token.

3. Create an audit message action.

- On the **Create Authentication OAuth IDP Policy** page, click **Add** in the **Log Action** field.
- On the **Create Audit Message Action** page, set values for the following parameters and click **Create**.
  - Name: Name of the audit message action.
  - Log Level: Audit log level, which specifies the severity level of the log message being generated.
  - Expression: Default-syntax expression that defines the format and content of the log message.
  - Log in newnslog: Sends the message to the new NSLOG server.

4. Create an authentication OAuth server.

- Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Actions > OAUTH Actions** and click **Add**.
- On the **Create Authentication OAuth Server** page, set values for the required parameters and click **Create**.

5. Bind the OAuth IdP policy to the authentication OAuth server.

OAuth feature now supports the following capabilities in the token API from the Relying Party (RP) side and from the IdP side of NetScaler Gateway and NetScaler.

- PKCE (Proof Key for Code Exchange) support
- Support for `client_assertion`

**To configure NetScaler as an IdP using the OIDC protocol by using the CLI**

At the command prompt, type the following commands:

```

1 add authentication OAuthIDPProfile <name> [-clientID <string>][
 clientSecret][-redirectURL <URL>][-issuer <string>][-audience <
 string>][-skewTime <mins>] [-defaultAuthenticationGroup <string>]
2
3 add authentication OAuthIdPPolicy <name> -rule <expression> [-action <
 string>] [-undefAction <string>] [-comment <string>][-logAction <
 string>]
4

```

```
5 add authentication ldapAction aaa-ldap-act -serverIP 10.0.0.10 -
 ldapBase "dc=aaa,dc=local"
6
7 ldapBindDn <administrator@aaa.local> -ldapBindDnPassword <password> -
 ldapLoginName sAMAccountName
8
9 add authentication policy aaa-ldap-adv-pol -rule true -action aaa-ldap-
 act
10
11 bind authentication vserver auth_vs -policy <ldap_policy_name> -
 priority 100 -gotoPriorityExpression NEXT
12
13 bind authentication vserver auth_vs -policy <OAuthIDPPolicyName> -
 priority 5 -gotoPriorityExpression END
14
15 bind vpn global -certkey <>
```

**Notes:**

- You can bind more than one key. Public parts of certificates bound are sent in response to `jwtks\_\_uri query` (<https://gw/oauth/idp/certs>).
- The OAuth IdP introspective endpoint supports the property `active: true`.
- If the authentication virtual server is configured as an OAuth IdP, the well-known OAuth IdP discovery endpoint URL must be <https://<netscaler-oauth-idp-fqdn>/oauth/idp/.well-known/openid-configuration>.
- NetScaler configured as an OAuth IdP does not display the `client_secret_post`, `client_secret_jwt`, `private_key_jwt`, and `client_secret_basic` token endpoint authentication methods in the `.well-known-Endpoint` response sent to the OAuth SP.

**Encrypted tokens support on OIDC protocol**

NetScaler with the OIDC mechanism now supports the sending of encrypted tokens along with signed tokens. NetScaler uses JSON web encryption specifications to compute the encrypted tokens and supports only compact serialization of encrypted tokens. To encrypt an OpenID token, NetScaler requires the public key of the relying party (RP). The public key is obtained dynamically by polling the relying party's well-known configuration endpoint.

A new "relyingPartyMetadataURL" option is introduced in the "authentication OAuthIDPProfile." profile.

**To configure the relying party's endpoint by using CLI**

At the command prompt, type:

```
1 set authentication OAuthIDPProfile <name> [-relyingPartyMetadataURL <URL>] [-refreshInterval <mins>] [-status <>]
```

- **relyingPartyMetadataURL** - Endpoint at which NetScaler IdP can get details about the relying party being configured. Metadata response must include endpoints for `jwtks_uri` for RP public keys.
- **refreshInterval** - Defines the rate at which this endpoint must be polled to update the certificates in minutes.
- **status** - Reflects the status of the polling operation. The status is complete once NetScaler successfully obtains the public keys.

**Example,**

```
1 set authentication OAuthIDPProfile sample_profile -
 relyingPartyMetadataURL https://rp.customer.com/metadata -
 refreshInterval 50 -status <>
```

After the endpoint is configured, NetScaler first polls the relying party's well-known endpoint to read the configuration. Currently, NetScaler processes only the `jwtks_uri` endpoint.

- If the `jwtks_uri` is absent in the response, the status of the profile is not complete.
- If the `jwtks_uri` is present in the response, NetScaler polls that endpoint also to read the public keys of the relying party.

**Note:**

Only RSAES-OAEP and AES256 GCM encryption type algorithms are supported for token encryption.

**Custom attributes support on OpenID Connect**

The [OpenID](#) relying parties might require more than a user name or a user principal name (UPN) in the token to create the user profile or make authorization decisions. Most commonly, the user groups are required to apply authorization policies for the user. Sometimes, more details, such as the first or the last name is required for provisioning a user account.

NetScaler configured as an IdP can be used to send extra attributes in the `OIDCid_token` using expressions. Advanced policy expressions are used to send the custom attributes as per the requirement. The NetScaler OAuth IdP evaluates the expressions corresponding to the attributes and then computes the final token.

NetScaler automatically applies [JSONify](#) in the output data. For example, numbers (such as SSN) or boolean values (true or false) are not surrounded by quotes. Multi-valued attributes, such as groups

are placed within an array marker (“[” and “]”). The complex type attributes are not automatically computed, and you can configure the PI expression of those complex values as per your requirement.

### To configure the relying party’s endpoint by using CLI

At the command prompt, type:

```
1 set oauthidprofile <name> -attributes <AAA-custom-attribute-pattern>
```

The <AAA-custom-attribute-pattern> can be described as:

Attribute1=PI-Expression@@@attribute2=PI-Expression@@@

‘attribute1’, ‘attribute2’ are literal strings that represent the name of the attribute to be inserted in the ID token.

#### Note:

In the following example, the maximum value of the "q{ myname=http.req.user.name@@@ssn="123456789"@@@jit="false"@@@groups=http.req.user.groups } " expression can be 2000 bytes. It contains 4 custom attributes (myname, ssn, jit, groups). The maximum value of each custom attribute is 10000 bytes. For example, the groups attribute (evaluated based on the PI expression http.req.user.groups) can contain upto 10000 bytes of data in the OIDCid\_token.

Example:

```
set oauthidprofile sample_1 -attributes "q{ myname=http.req.user.name@@@ssn="123456789"@@@jit="false"@@@groups=http.req.user.groups } "
```

- Preceding PI expression is an advanced policy expression that represents the value to be used against the attribute. The PI expression can be used to send a string literal, such as “hardcoded string”. The string literal is surrounded by double quotes around single quotes or double quotes around a start pattern (the start pattern is "q( )"). If the value of the attribute is not a string literal, the expression is evaluated at runtime and its value is sent in token. If the value at runtime is empty, the corresponding attribute is not added to the ID token.
- As defined in the example, “false” is a literal string for the attribute “jit”. Also, “ssn” has hardcoded value for reference. Groups and “myname” are PI expressions that yield strings.

### Support for active-active GSLB deployments on NetScaler Gateway

NetScaler Gateway configured as an Identity Provider (IdP) using the OIDC protocol can support active-active GSLB deployments. The active-active GSLB deployment on NetScaler Gateway IdP provides the



capability to load balance an incoming user login request across multiple geographic locations.

### **Important**

We recommend you to bind CA certificates to the SSL service and enable certificate validation on the SSL service for enhanced security.

For more information on configuring a GSLB setup, see [Example of a GSLB setup and configuration](#).

## **API authentication with the NetScaler appliance**

August 29, 2023

There is a paradigm shift in the way modern applications interact with their clients. Traditionally, browser clients were used to access services. Applications set session cookies to track user context. Modern and distributed applications make it hard to maintain user sessions across microservices. Due to this, most of the application accesses have become API based.

Clients that communicate with these distributed services have also evolved. Most clients obtain tokens from a trusted entity called Authorization Server to prove user identity and access. These clients then present the token to the application with each access request. Therefore, traditional proxy devices like NetScaler need to evolve to support these clients. A NetScaler appliance provides a way for administrators to handle such traffic. NetScaler can be deployed as an API Gateway to front-end all the traffic that destined to the published services. An API Gateway can be deployed for traditional (Hybrid Multi Cloud or HMC) or Cloud native environments. The API Gateway terminates all the inbound traffic to offer several services such as authentication, authorization, rate limiting, routing, caching, SSL offload, application firewall, and so on. Therefore, it becomes a critical component in the infrastructure.

### **Token types**

Tokens exchanged during the API access mostly conform to the OAuth/OpenID Connect (OIDC) protocol. Access tokens that are used only for ‘delegated access’ conform to the OAuth protocol, whereas ID Tokens that comply with OIDC carry user information as well.

Access tokens are normally an opaque or random blob of data. However, they can sometimes be signed tokens conforming to JWT (JSON Web Token) standards. ID Tokens are always signed JWTs.

## API Access with OAuth

OAuth authentication type on a NetScaler appliance can be used to handle both OAuth and OIDC protocols. OIDC is an extension to the OAuth protocol.

OAuthAction on a NetScaler appliance can be used to handle interactive clients such as browsers and native clients such as client apps. Interactive clients are redirected to the identity provider for login using the OIDC protocol. Native clients can obtain tokens out of band and can present those tokens at a NetScaler appliance for access.

**Note:**

The access token obtained from endpoints can be cached for subsequent requests, thereby enhancing the API performance.

**To configure token caching support by using the command line interface, type the following command at the command prompt:**

```
1 set aaparameter -APITokenCache <ENABLED>
```

The following sections describe the API access method performed by native clients.

## Virtual server for API Access

To deploy a NetScaler appliance for an API access, a Traffic Management (TM) virtual server is deployed with 401 Authentication. It is associated with an authentication (authentication, authorization, and auditing) virtual server to hold the authentication and session policies. Following configuration snippet creates one such virtual server.

```
1 Add lb vsrver lb-api-access SSL <IP> 443 -authn401 On -AuthnVsName
 auth-api-access
2
3 Bind ssl vsrver lb-api-access -certkeyName <ssl-cert-entity>
4
5 Add authentication vsrver auth-api-access SSL
```

**Note:**

You would need to bind a service to the traffic management virtual server, and an authentication policy (with OAuthAction described as follows) to the authentication virtual server to complete the configuration.

After creating the virtual server, one needs to add an OAuthAction along with corresponding policy. There are several other options within an OAuth action depending on the token type, and other security mechanisms.

## OAuth Configuration for ID Tokens

ID Tokens are always signed JWTs. That is, they carry header, payload and signature. Since these are self-contained tokens, a NetScaler appliance can validate these tokens locally. To validate these tokens, the appliance would need to know the public key of the corresponding private key used to sign these tokens.

Following is an example of OAuthAction with certain mandatory arguments along with “certEndpoint”

```
1 Add authentication OAuthAction oauth-api-access -clientid <your-
 client-id> -clientsecret <your-client-secret> -
 authorizationEndpoint <URL to which users would be redirected for
 login> -tokenEndpoint <endpoint at which tokens could be obtained>
 -certEndpoint <URL at which public keys of IdP are published>
```

Where,

- **Client ID** –Unique string that identifies SP. Authorization server infers client configuration using this ID. Maximum Length: 127.
- **Client Secret** –Secret string established by user and authorization server. Maximum Length: 239.
- **authorizationEndpoint** - URL at which users would normally log in (when using interactive clients).
- **tokenEndpoint** - URL on Authorization Server at which tokens/code are obtained/exchanged
- **certEndpoint** - URL at which Authorization Server publishes public keys used to sign the tokens. Authorization Server can publish more than one key and choose one of them to sign tokens.

**Note:**

Client ID/Client Secret/authorizationEndpoint/TokenEndpoint are optional parameters for API Access. However, it is a good practice to provide values for these parameters as the action entity can be reused for different purposes.

In the preceding configuration ‘certEndpoint’ is essential for ID Token validation. This endpoint contains public keys of the certificate used to sign the tokens. These public keys must correspond to JWKs (JSON Web Keys) specification.

Once the certEndpoint is configured at the NetScaler appliance, it polls the endpoint periodically (with the default interval of 1 day that can be customizable in the configuration) to keep the public keys up to date. After the public keys are available, ADC can perform local validation of the incoming ID Tokens.

## OAuth Configuration for opaque access tokens

Opaque tokens cannot be verified locally on the NetScaler appliance. These need to be validated on the Authorization server. A NetScaler appliance uses ‘introspection protocol’ mentioned in the OAuth specifications to verify these tokens. A new option, introspectURL, is provided in the OAuth configuration for verifying opaque tokens.

```
1 set oauthAction oauth-api-access -introspectURL <URL of the
 Authorization Server for introspection>
```

The format of the introspection API conforms to the specification at <https://tools.ietf.org/html/rfc7662#section-2.1> as follows:

```
1 POST /introspect HTTP/1.1
2 Host: server.example.com
3 Accept: application/json
4 Content-Type: application/x-www-form-urlencoded
5 Authorization: Basic czZCaGRSa3F0MzpnWDFmQmF0M2JW
6 token=mF_9.B5f-4.1JqM&token_type_hint=access_token
```

## Binding policy to Authentication virtual server

Once OAuthAction is created, a corresponding policy needs to be created for invoking it.

```
1 add authentication policy oauth-api-access -rule <> -action <oauth-
 api-access>
2
3 bind authentication vserver auth-api-access -policy oauth-api-access
 -pri 100
```

## Additional security settings on a NetScaler appliance

Token validation includes token lifetime checks. Tokens outside of acceptable time are rejected. Following are the additional settings for extra security. Some of these are recommended to be configured always.

**Audience:** OAuth Action can be configured with an intended recipient of the token. All tokens are matched against this configured URL. A NetScaler appliance has an additional capability where the audience field actually points to a pattern set on the appliance. Using this pattern set, an administrator can configure more than one URL for the audience.

```
1 add policy patset oauth_audiences
2
3 bind patset oauth_audiences https://app1.company.com
4
5 bind patset oauth_audiences https://app2.company.com
```

```
6
7 bind patset oauth_audiences httpsL//app1.company.com/path1
8
9 set oAuthAction oauth-api-access -audience oauth_audiences
```

In the preceding example, more than one audience is specified in a pattern set. Therefore, an incoming token is allowed only if it contains any of the configured URLs in the pattern set.

**Issuer:** Identity of the server whose tokens are to be accepted. Maximum Length: 127. It is a good practice to configure the issuer of the tokens in OAuth action. This ensures that tokens issued by the wrong authorization server are not allowed.

**SkewTime:** Specifies the allowed clock skew in number of minutes that a NetScaler appliance allows on an incoming token. For example, if skewTime is 10, then the token would be valid from (current time - 10) min to (current time + 10) min, that is 20 min in all. Default value: 5

**AllowedAlgorithms:** This option allows administrator to restrict certain algorithms in the incoming tokens. By default, all the supported methods are allowed. However, these can be controlled using this option.

The following configuration ensures only tokens that use RS256 and RS512 are allowed:

```
1 set oAuthAction oauth-api-access -allowedAlgorithms RS256 RS512
```

After the preceding configuration is performed, only tokens that use RS256 and RS512 are allowed.

## Bypassing certain traffic from authentication

In many instances, there are some discovery APIs that are publicly accessible to the clients. These APIs typically reveal configuration and capabilities of the service itself. AN administrator can configure the NetScaler appliance to bypass authentication from these metadata URLs using ‘No Authentication’ policy described as follows:

```
1 add authentication policy auth-bypass-policy -rule <> -action
 NO_AUTHN
2
3 bind authentication vserver auth-api-access -policy auth-bypass-
 policy -pri 110
```

NO\_AUTHN is an implicit action that results in authentication to be completed when the rule matches. There are other uses of NO\_AUTHN action beyond the scope of API access.

## LDAP authentication

September 13, 2024

You can use Lightweight Directory Access Protocol (LDAP) to authenticate users against Active Directory or other LDAP directories.

As with other types of authentication policies, a Lightweight Directory Access Protocol (LDAP) authentication policy comprises an expression and an action. After creating an authentication policy, bind it to an [Authentication Virtual Server](#) with a priority. Then add that Virtual Server to an [Authentication Profile](#).

**Note:**

Basic LDAP policies are deprecated may not work when used from a VPN Virtual Server. Instead, follow the instructions below to create an advanced policy, along with an Authentication Virtual Server and Authentication Profile. Then add the Authentication Profile to the VPN virtual server.

### Create an LDAP Authentication Action using the GUI

1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Actions > LDAP**.
2. Click **Add**. The **Create Authentication LDAP Server** screen is displayed.
3. Enter a name.
4. Update the parameter details. For more details, see LDAP parameters.
5. Click **Test network connectivity** to verify the entered details. See also Testing LDAP authentication.
6. Click **Create**.

← Create Authentication LDAP Server

|                                                                                                                                                                                                                      |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <p>Name*<br/>LDAP_Action ⓘ</p> <p><input checked="" type="radio"/> Server Name <input type="radio"/> Server IP</p> <p>Server Name*<br/>dc.example.com ⓘ</p> <p>Security Type<br/>PLAINTEXT ▾</p> <p>Port<br/>389</p> |  | <p>Server Type<br/>AD ⓘ</p> <p>Time-out (seconds)<br/>3</p> <p><input checked="" type="checkbox"/> Authentication</p> <p>SSH Public Key<br/><input type="text"/></p>                                                                                                                                                                                                                                                                                                                  |  |
| <b>Connection Settings</b>                                                                                                                                                                                           |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |  |
| <p>Base DN (location of users)*<br/>CN=Users,dc=example,dc=com ⓘ</p> <p>Administrator Bind DN*<br/>administrator@example.com ⓘ</p>                                                                                   |  | <p>Network connectivity test checks LDAP server reachability and if admin bind credentials are valid.</p> <p>Administrator Password*<br/>..... ⓘ</p> <p>Confirm Administrator Password*<br/>..... ⓘ</p> <p>Retrieve Attributes</p> <p><input type="button" value="Test Network connectivity"/></p> <p>End-to-end login test performs LDAP/AD login from an end user's context and involves all the steps of a normal log in process.</p> <p><a href="#">End-to-end login test</a></p> |  |
| <b>Other Settings</b>                                                                                                                                                                                                |  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |  |
| <p>Server Logon Name Attribute<br/>sAMAccountName ▾ ⓘ</p> <p>Search Filter<br/><input type="text"/></p> <p>Group Attribute<br/><input type="text"/></p>                                                              |  | <p>Default Authentication Group<br/><input type="text"/></p> <p><input checked="" type="checkbox"/> User Required</p> <p><input checked="" type="checkbox"/> Allow Password Change</p> <p><input type="checkbox"/> Referrals</p> <p>Maximum Referral Level<br/>1</p>                                                                                                                                                                                                                  |  |

**Create an LDAP Authentication Action using the CLI**

Use the command `add authentication ldapAction`. For more information, see [add authentication ldapAction](#).

Example:

```
1 add authentication ldapAction ldap_server -serverip 1.1.1.1 -ldapBase "
 Cn=Users,dc=example,dc=com" -ldapBindDn admin@example.com -
 ldapBindDnPassword -ldapLoginName sAMAccountName
```

## Edit an LDAP authentication action using the GUI

1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Actions > LDAP**.
2. Click the action you wish to edit.
3. Update the parameters. For more details, see LDAP parameters.
4. Click **Test network connectivity** to verify the entered details. See also Testing LDAP authentication.
5. Click **OK** to save.

## Edit an LDAP authentication action using the CLI

Use the command `set authentication ldapAction`. For more information, see [set authentication ldapAction](#).

Example:

```
1 set authentication ldapAction ldap_server -serverip 2.2.2.2
```

## Create an LDAP authentication policy using the GUI

Once you have created your LDAP action, create an [Authentication Policies](#):

1. Navigate to **Security > AAA - Application Traffic > Advanced Policies > Policy**.
2. Click **Add**.
3. Enter a **Name**.
4. Choose **Action Type** of **LDAP**.
5. Under **Action** specify the authentication server you created.
6. Enter the **Expression** as **TRUE**.
7. Click **Create**.



## ← Configure Authentication Policy

Name  
 ⓘ

Action Type\*  
 ⓘ

Action\*

Expression\* [Expression Editor](#)  

Select Select Select ✕

TRUE

[Evaluate](#)

▶ More

Kv

### Create an LDAP authentication policy using the CLI

Use the command `add authentication ldappolicy`. For more information, see [add authentication ldappolicy](#).

Example:

```
1 add authentication Policy LDAP_Pol -rule TRUE -action ldap_server
```

### LDAP parameters

#### Server name or Server IP

Normally you configure the NetScaler to use the IP address of the authentication server during authentication. With LDAP authentication servers, you can also configure the ADC to use the FQDN of

the LDAP server instead of its IP address to authenticate users. Using an FQDN can simplify an otherwise much more complex authentication, authorization, and auditing configuration in environments where the authentication server might be at any of several IP addresses, but always uses a single FQDN. To configure authentication by using a server's FQDN instead of its IP address, you follow the normal configuration process except when creating the authentication action. When creating the action, you use the **serverName** parameter instead of the **serverIP** parameter, and substitute the server's FQDN for its IP address.

Before you decide whether to configure the ADC to use the IP or the FQDN of your LDAP server to authenticate users, consider that configuring authentication, authorization, and auditing to authenticate to an FQDN instead of an IP address adds an extra step to the authentication process. Each time the ADC authenticates a user, it must resolve the FQDN. If a great many users attempt to authenticate simultaneously, the resulting DNS lookups might slow the authentication process.

Instead of adding a single server, you can set up a load balancer in front of multiple LDAP servers and add this load balancer to the LDAP action. For example in Active Directory domain you could create a load balancer in front of multiple domain controllers.

### **Security type**

Choose whether to use plain text, SSL or TLS.

It is recommended that you configure your LDAP servers for TLS to ensure that all data is encrypted.

### **Port**

The typical port numbers for LDAP connections are:

- 389 for unsecured LDAP connections (for plain text LDAP)
- 636 for secure LDAP connections (for SSL LDAP)
- 3268 for Microsoft unsecure LDAP connections (for plain text Global Catalog Server)
- 3269 for Microsoft secure LDAP connections (for SSL Global Catalog Server)

### **Authenticate**

Enable authentication to validate users' passwords. If you disable authentication then the user's password is not validated.

From the GUI, tick **Authentication**.

From the CLI, use parameter `authentication`.

### Server Logon Name Attribute

Choose which LDAP field contain the username.

The following table contains examples of user attribute fields for common LDAP servers:

---

| LDAP server                          | User attribute                      | Case sensitive |
|--------------------------------------|-------------------------------------|----------------|
| Microsoft Active Directory Server    | userPrincipalName or sAMAccountName | No             |
| Novell eDirectory                    | ou                                  | Yes            |
| IBM Directory Server                 | uid                                 | Yes            |
| Lotus Domino                         | CN                                  | Yes            |
| Sun ONE directory (formerly iPlanet) | uid or cn                           | Yes            |

---

### Server type

If you are using Active Directory (AD) or Novell Directory Services (NDS) then choose the appropriate type.

### Base DN

The Base DN specifies the section of directory in which the server will search for users.

This table contains examples of the base DN:

---

| LDAP server type                     | Example                    |
|--------------------------------------|----------------------------|
| Microsoft Active Directory Server    | CN=Users,dc=example,dc=com |
| Novell eDirectory                    | ou=users,ou=dev            |
| IBM Directory Server                 | cn=users                   |
| Lotus Domino                         | OU=City,O=Citrix,C=US      |
| Sun ONE directory (formerly iPlanet) | ou=People,dc=citrix,dc=com |

---

### Bind DN

The Bind DN specifies the user that is used to query the LDAP directory and validate the credentials.

The following table contains examples of bind DN:

---

| LDAP server                          | Bind DN                                                           |
|--------------------------------------|-------------------------------------------------------------------|
| Microsoft Active Directory Server    | CN=Administrator, CN=Users, DC=citrix, DC=local                   |
| Novell eDirectory                    | cn=admin, o=citrix                                                |
| IBM Directory Server                 | LDAP_dn                                                           |
| Lotus Domino                         | CN=Notes Administrator, O=Citrix, C=US                            |
| Sun ONE directory (formerly iPlanet) | uid=admin,ou=Administrators, ou=TopologyManagement,o=NetscapeRoot |

---

For more information about setting up authentication policies in general, see [Authentication Policies](#). For more information about NetScaler expressions, which are used in the policy rule, see [Policies and Expressions](#).

### Administrator password

Enter the **Administrator Password** corresponding to the Bind DN. Enter it again in the **Confirm Administrator Password** field.

### Referral

In addition to standard authentication functions, LDAP can search other active directory (AD) servers for user accounts for users that do not exist locally. This function is called referral support or referral chasing.

LDAP referral support is disabled by default and cannot be enabled globally. It must be explicitly enabled for each LDAP action. Make sure that the AD server accepts the same `binddn credentials` that are used with the referring (GC) server. To enable referral support, you configure an LDAP action to follow referrals, and specify the maximum number of referrals to follow.

If referral support is enabled, and the NetScaler receives an LDAP\_REFERRAL response to a request, authentication, authorization, and auditing follows the referral to the active directory (AD) server contained in the referral and performs the update on that server. First, authentication, authorization, and auditing looks up the referral server in DNS, and connects to that server. If the referral policy requires SSL/TLS, it connects via SSL/TLS. It then binds to the new server with the `binddn credentials` that it used with the previous server, and performs the operation which generated the referral. This feature is transparent to the user.

To enable LDAP referral support type the following commands:

```
1 set authentication ldapAction <name> -followReferrals ON
2 set authentication ldapAction <name> -maxLDAPReferrals <integer>
```

### Key-based authentication

With key-based authentication, you can fetch the list of public keys that are stored on the user object in the LDAP server through SSH. The NetScaler appliance during the role-based authentication (RBA) process must extract public SSH keys from the LDAP server. The retrieved public key, which is compatible with SSH, must allow you to log in through the RBA method. This has the following benefits:

- Can store the retrieved public key, and the LDAP action uses this attribute to retrieve SSH key information from the LDAP server.
- Can extract attribute names of up to 24 KB.

#### Note

The external authentication server, such as LDAP is used only to retrieve SSH key information. It is not used for the authentication purpose.

Following is an example of the flow of events through SSH:

- SSH daemon sends an AAA\_AUTHENTICATE request with password field empty to authentication, authorization, and auditing daemon port.
- If LDAP is configured to store the SSH public key, authentication, authorization, and auditing responds with the “sshPublicKey” attribute along with other attributes.
- SSH daemon verifies these keys with the client keys.
- SSH daemon passes the user name in the request payload, and authentication, authorization, and auditing returns the keys specific to this user along with generic keys.

In the GUI you can enter the **SSH Public Key**.

From the CLI, you can configure key based authentication by using the `sshPublicKey` parameter. For example:

```
1 set authentication ldapAction LDAP_Action -sshPublicKey AD89E46324345
```

### Name-value attributes

You can configure the attributes of LDAP authentication with a unique name along with values. The names are configured in the LDAP action parameter and the values are obtained by querying for the name. This feature has the following benefits:

- Minimizes the effort for administrators by remembering the attribute by name (not just by value)

- Enhances the search to query the attribute value associated with a name
- Provides an option to extract multiple attributes

From the GUI, click **More** and in the **Attributes** field enter a comma separated list of attributes to fetch from the LDAP server.

From the CLI, use the `attributes` parameter.

For example:

```
1 set authentication ldapAction ldapAct1 -attributes "company, mail"
```

### Cloud attributes settings

When you enable the Cloud Attributes parameter, NetScaler extracts (from the LDAP Active Directory) the attributes required for Citrix Cloud operations. For more information about the prerequisites for the cloud attributes, see [Connect an on-premises Citrix Gateway as an identity provider to Citrix Cloud](#).

From the GUI, set **Cloud Attributes** to **Enabled** or **Disabled**.

From the CLI, use the parameter `CloudAttributes`


For example:

```
1 set authentication ldapAction LDAP_Action -CloudAttributes ENABLED
```

### Testing LDAP authentication

The NetScaler appliance can validate end-to-end LDAP authentication through the GUI. This helps you check you've correctly configured the LDAP action and troubleshoot issues.


1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Actions > LDAP**.
2. Select the available **LDAP action** from the list.
3. On the **Configure Authentication LDAP Server** page, scroll down to the **Connections Settings** section.
4. Click **Test Network connectivity** to check the LDAP server connection. You can view a pop-up message of successful connection to the LDAP server with TCP port details and authenticity of valid credentials.

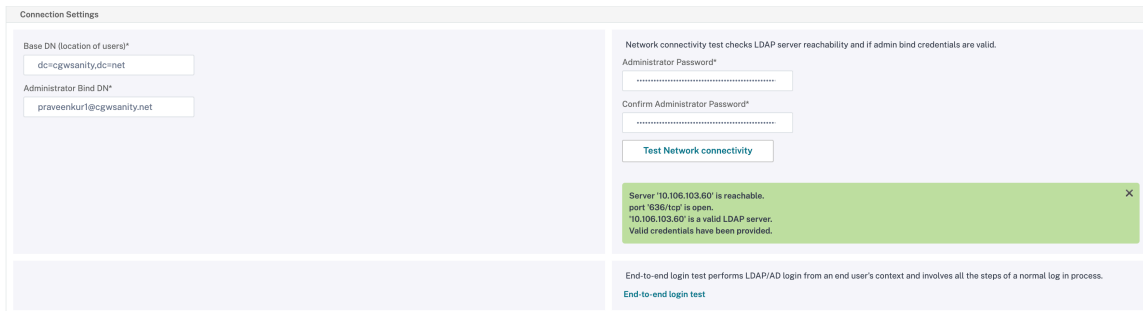


5. To view the end-to-end LDAP authentication, click **End-to-end login test** link.

6. In the **End-to-end login test** page, click **Test**.

- On the authentication page, enter the valid credentials to log in. The success screen is displayed.

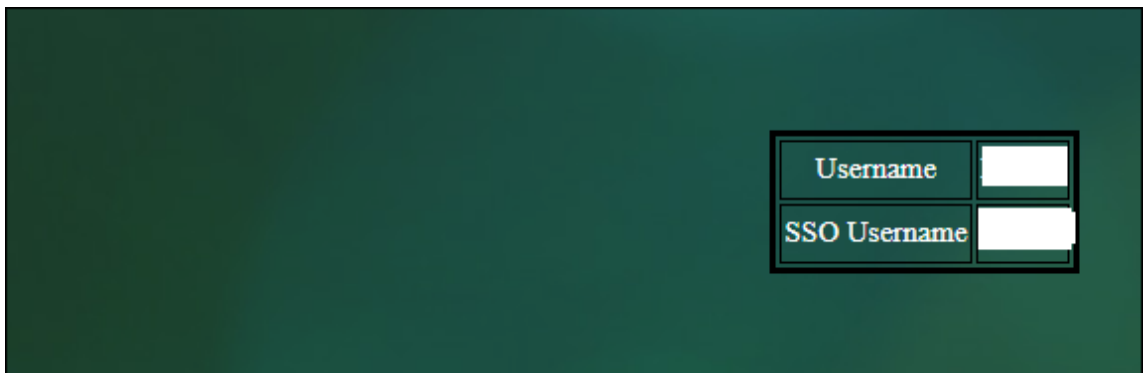

- If the authentication fails, the error screen is displayed.

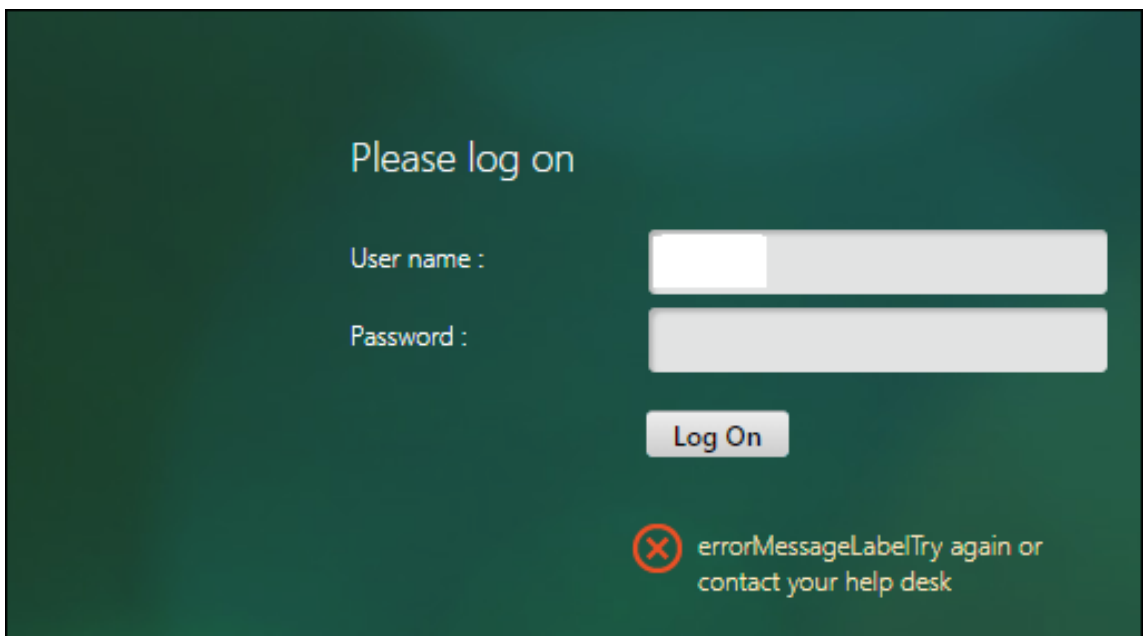

You can also reach the **Configure Authentication LDAP Server** screen by navigating to **Authentication > Dashboard**

## Password expiry notification for LDAP authentication

The NetScaler appliance supports password expiry notification for LDAP based authentication. By using this feature, administrators can notify the end users about the password expiry threshold time in days.

### Note

Expiry notification can be configured for clientless VPN and Full VPN use cases and not for ICA Proxy.

## Advantages of password expiry notification

- Permit users to reset their passwords on their own and provide administrators a flexible way to notify the end user about their password expiry in days.
- Eliminates end user dependence to track their password expiration days.
- Sends notifications to the VPN portal page to the users (based on the number of days) to change their password before expiry.

### Note

This feature is applicable only for LDAP based authentication schemes, not for RADIUS or TACACS.

## Understanding the password expiry notification

The NetScaler appliance fetches two attributes (`Max-Pwd-Age` and `Pwd-Last-Set`) from the LDAP authentication server.

- **Max-Pwd-Age.** This attribute denotes the maximum amount of time, in 100-nanosecond intervals, until the password is valid. The value is stored as a large integer that represents the number of 100-nanosecond intervals from the time the password was set before the password expires.
- **Pwd-Last-Set.** This attribute determines the date and time at which the password for an account was last changed.

By fetching the two attributes from the LDAP authentication server, the NetScaler appliance determines the time left for the password to expire for a particular user. This information is collected when any user credentials are validated on the authentication server and a notification is sent back to the user.



Use the parameter `pwdExpiryNotification` in the `set aaa parameter` command. By using this parameter, an administrator can keep track the number of days left for password expiry. The NetScaler appliance can now start notifying the end user about their password expiry.

**Note**

Currently, this feature works only for authentication servers having Microsoft AD servers with LDAP implementation. Support for OpenLDAP based servers is not currently available.

Following is an example of the flow of events for setting a password expiry notification:

1. An administrator, by using the NetScaler appliance, sets a time (e.g. 14-days) for password expiration.
2. The user sends an HTTP or HTTPS request to access a resource on the back-end server.
3. Before providing access, the NetScaler appliance validates the user credentials with what is configured on the LDAP authentication server.
4. Along with this query to the authentication server, the NetScaler appliance carries the request to fetch the details of the two attributes (`Max-Pwd-Age` and `Pwd-Last-Set`).
5. Based on the time left for the password to expire, an expiry notification is displayed.
6. The user then takes appropriate action to update the password.

**Configure password expiry notification** To configure expiry notification by using GUI:

1. Navigate to **Security > AAA - Application Traffic > Authentication Settings**.
2. Click **Change authentication AAA settings**.
3. On the **Configure AAA Parameter** page, specify the days in the **Password Expiry Notification(days)** field. The maximum value is 255 days.

4. Click **OK**.

To configure password expiry using the CLI use command:


```
1 set aaa parameter -pwdExpiryNotificationDays <positive_integer>
2
3 show aaa parameter
```

The maximum value is 255 days.

For example:

```
1 > set aaa parameter -pwdExpiryNotificationDays 14
2 Done
3 > show aaa parameter
 Configured AAA parameters
 EnableStaticPageCaching: YES EnableEnhancedAuthFeedback: NO
 DefaultAuthType: LOCAL MaxAAAUsers: Unlimited
 AAAD nat ip: None
 EnableSessionStickiness : NO aaaSessionLogLevel : INFORMATIONAL
 AAAD Log Level : INFORMATIONAL Dynamic
 address: OFF
4 GUI mode: ON
5 Max Saml Deflate Size: 1024 Password Expiry
 Notification Days: 14
```

**Display of notifications** When a user logs in whose password is about to expire, a notification appears on the top right corner of the VPN portal page.

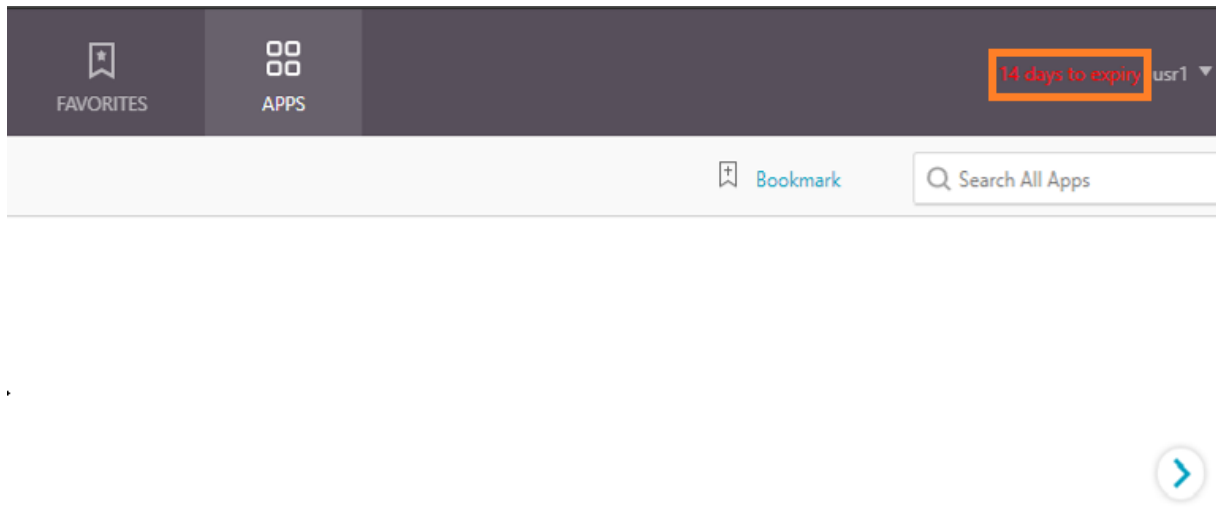

## Configure LDAP authentication on the NetScaler appliance for management purposes


October 13, 2023

You can configure user logon to the NetScaler appliance using the active directory credentials (user name and password) for management purposes (superuser, read-only, network privileges and all others).

### Prerequisites

- Windows Active Directory domain controller servers
- A dedicated domain group for NetScaler administrators
- NetScaler Gateway 10.1 and later versions

The following figures illustrate the LDAP authentication on the NetScaler appliance.

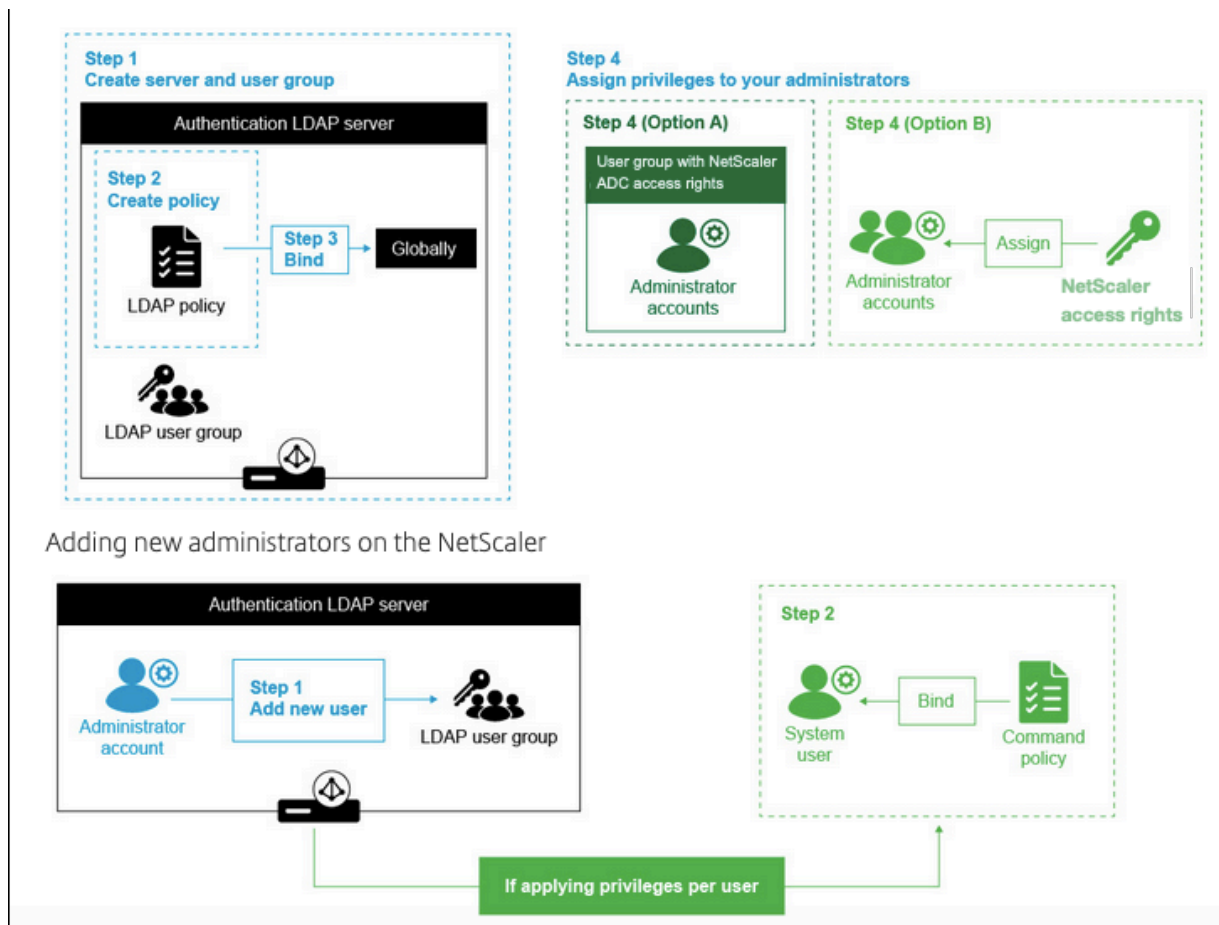

## High level configuration steps

1. Create an LDAP server
2. Create an LDAP policy
3. Bind the LDAP policy
4. Assign privileges to your administrators by one of the following ways
  - Apply privileges on group
  - Apply privileges individually for each user

## Create an authentication LDAP server

1. Navigate to **System > Authentication > LDAP**.
2. Click the **Server** tab and then click **Add**.
3. Complete the configuration, and then click **Create**.

### ← Create Authentication LDAP Server

Name\*  
LDAP\_management ⓘ

Server Name  Server IP

Server Name\*  
MyAD.citrix.lab ⓘ

Security Type  
SSL ⓘ

Port  
636

Server Type  
AD ⓘ

Time-out (seconds)  
3

Authentication

SSH Public Key

---

Connection Settings

Base DN (location of users)\*  
DC=citrix,DC=lab ⓘ

Administrator Bind DN\*  
 ⓘ

Network connectivity test checks LDAP server reachability and if admin bind credentials are valid.

Administrator Password\*  
 ⓘ

Confirm Administrator Password\*  
 ⓘ

[Test Network connectivity](#)

---

Other Settings

Server Logon Name Attribute  
sAMAccountName ⓘ

Search Filter  
|U=AdminGroups,DC=lab,DC=citrix,DC=lab ⓘ

Group Attribute  
 ⓘ

Sub Attribute Name  
 ⓘ

SSO Name Attribute  
 ⓘ

Email  
mail

Alternate Email  
 ⓘ

Default Authentication Group  
 ⓘ

User Required

Allow Password Change

Referrals

Maximum Referral Level  
1

Referral DNS Lookup  
A-REC ⓘ

Validate LDAP Server Certificate

LDAP Host Name  
 ⓘ

OTP Secret  
 ⓘ

Push Service  
 ⓘ [Add](#) [Edit](#)

KB Attribute  
 ⓘ

**Note:**


In this example, the access is limited to the NetScaler appliance by filtering the authentication on the user group membership by setting Search Filter. The value used for this example is - &(memberof=CN=NSG\_Admin,OU=AdminGroups,DC=Citrix,DC=lab)

### Create an LDAP Policy

1. Navigate to **System > Authentication > Advanced Policies > Policy**.
2. Click **Add**.
3. Enter a name for the policy, select the server that you created in the previous steps.
4. In the Expression text field, enter the appropriate expression, and then click **Create**.

## Bind the LDAP policy globally

1. Navigate to **System > Authentication > Advanced Policies > Policy**.
2. In the Authentication Policies page, click **Global Bindings**.
3. Select the policy you created (in this example, pol\_LDAPmgmt).
4. Choose a priority accordingly (the lower the number, the higher the priority)
5. Click **Bind**, and then **Done**. A green checkmark appears in the **Globally Bound** column.

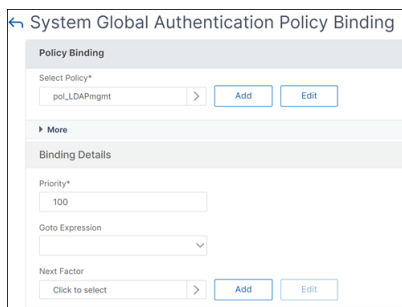

The screenshot shows the 'System Global Authentication Policy Binding' configuration page. It features a 'Policy Binding' section with a 'Select Policy\*' dropdown menu containing 'pol\_LDAPmgmt' and 'Add' and 'Edit' buttons. Below this is a 'More' section with a 'Binding Details' subsection. The 'Binding Details' section includes a 'Priority\*' input field with the value '100', a 'Goto Expression' dropdown menu, and a 'Next Factor' dropdown menu with the value 'Click to select'. 'Add' and 'Edit' buttons are also present at the bottom of the 'Next Factor' section.

## Assign privileges to your administrators


You can choose one of the following two options.

- **Apply privileges on a group:** Add a group in the NetScaler appliance and assign the same access rights for each user who is a member of this group.
- **Apply privileges individually for each user:** Create each user administrator account and assign rights for each of them.

### Apply privileges on a group

When you apply privileges on a group, users who are member of the Active Directory group configured in the Search filter (in this example, NSG\_Admin) can connect to the NetScaler Management interface and have superuser command policy.

1. Navigate to **System > User Administration > Groups**.
2. Enter the details as per the requirement, and then click **Create**.

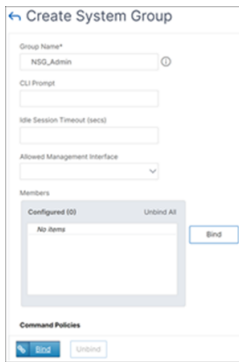

You have defined the active directory group that the users belong to and also the command policy level that must be associated to the account when logging in. You can add new administrator users to the LDAP group you configured on the search filter.

**Note:**


The group name must match the active directory record.

**Apply privileges individually for each user**

In this scenario, users who are member of your Active Directory group configured in the search filter (in this example, NSG\_Admin) can connect to the NetScaler management interface but do not have any privileges until you create the specific user on the NetScaler appliance and bind the command policy to it.

1. Navigate to **System > User Administration > Users**.
2. Click **Add**.
3. Enter the details as per the requirement.

**Note:** Make sure to select **Enable External Authentication**.

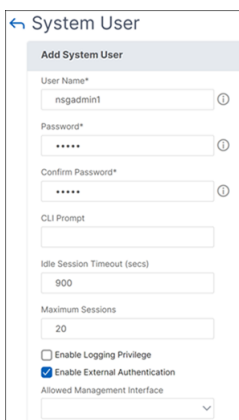

1. Click **Continue**.


You have defined the active directory user and the command policy level that must be associated to the account when logging in.

**Note:**

- The user name must match the existing user’s active directory record.
- When you add a user to the NetScaler for external authentication, you must provide a password, if the external authentication is not available. For the external authentication to work properly, the internal password must not be the same as the user account LDAP password.

**Add command policy to the user**

1. Navigate to **System > User Administration > Users**.
2. Select the user that you created, and then click **Edit**.
3. In Bindings, click **System Command Policy**.
4. Select the correct command policy to apply to your user.
5. Click **Bind**, then click **Close**.

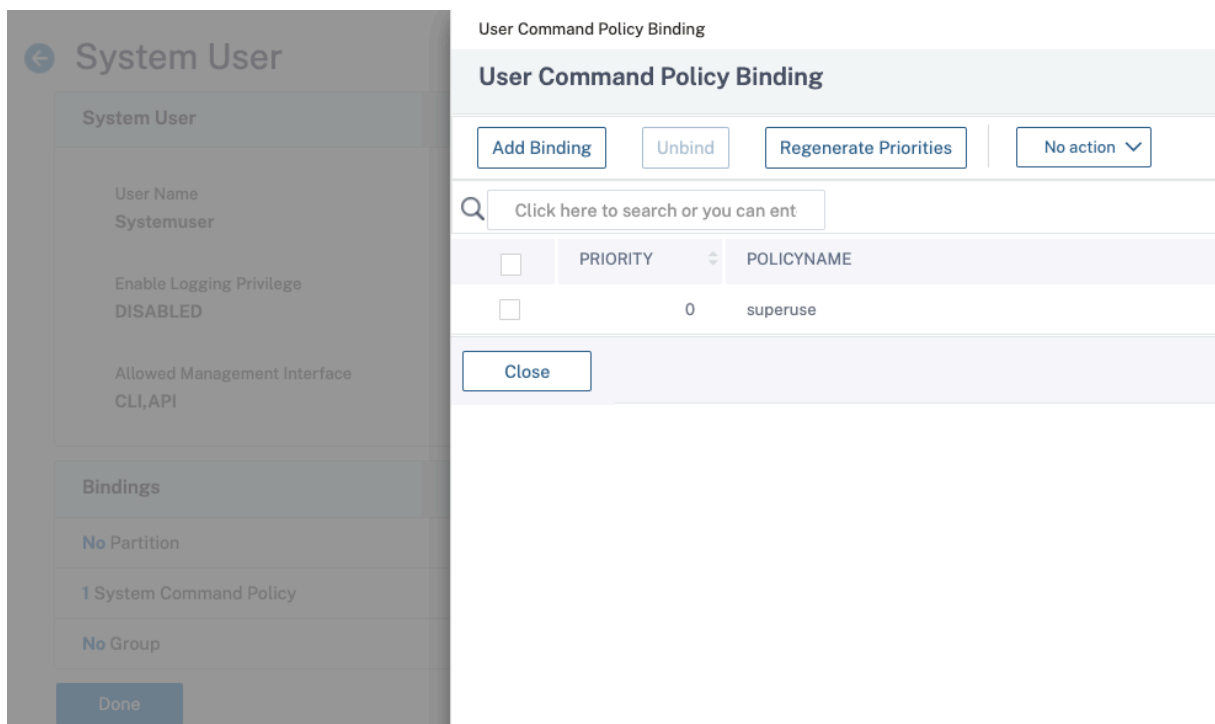

To add more administrators;

- Add the administrator users to the LDAP group you configured on the search filter.
- Create the system user in NetScaler and assign the correct command policy.



## To configure LDAP authentication on the NetScaler appliance for management purposes by using the CLI

Use the following commands as a reference to configure log on for a group with superuser privileges on the NetScaler appliance CLI.

### 1. Create an LDAP server

```
1 add authentication ldapAction LDAP_mgmt -serverIP myAD.citrix.lab
 -serverPort 636 -ldapBase "DC=citrix,DC=lab" -ldapBindDn
 readonly@citrix.lab -ldapBindDnPassword -ldapLoginName
 sAMAccountName -searchFilter "&(memberof=CN=NSG_Admin,OU=
 AdminGroups,DC=citrix,DC=lab)" -groupAttrName memberOf
```

### 2. Create and LDAP policy

```
1 add authentication ldapPolicy pol_LDAPmgmt ns_true LDAP_mgmt
```

### 3. Binding the LDAP policy

```
1 bind system global pol_LDAPmgmt -priority 110
```

### 4. Assign privileges to your administrators

- To apply privileges on the group

```
1 add system group NSG_Admin
2 bind system group NSG_Admin -policyName superuser 100
```

- To apply privileges individually for each user

```
1 add system user admyoa
2 bind system user admyoa superuser 100
```

## Configure LDAP after offloading SSL to a load balancing virtual server

September 26, 2024

In a NetScaler appliance, the AAA process is used for performing basic authentication like LDAP, RADIUS, TACACS for management access or authentication authorization and gateway access. As AAA runs on the management CPU, there might be issues with intermittent authentication failures. To avoid these failures, the load balancing virtual server can be used to offload the SSL functionality from AAA.

## Advantages of offloading SSL to a load balancing virtual server

- Enhanced AAAD performance. In AAAD, for every authentication request for the LDAP server of SSL type, a new SSL session is established. As the AAAD process runs on the management CPU, establishing the SSL session impacts performance during high requests to the AAAD. Offloading SSL functionality to load balancing virtual server enhances performance of the AAAD process.
- Render client certificate to server. Client LDAP library in AAAD only performs server certificate validation, there is no support for rendering client certificate to server. Because SSL mutual authentication requires rendering the client certificate for establishing the SSL connection, offloading SSL functionality to the load balancing virtual server enables rendering of the client certificate to the server.

## Configure LDAP after offloading SSL to the load balancing virtual server


**Note:** After you create a load balancing virtual server IP address for LDAP and point the LDAP request server to the virtual server IP address, the traffic is sourced from the SNIP.

### Prerequisites


- Ensure that secure LDAP is enabled on the domain controllers which the NetScaler appliance uses for authentication. By default, with an enterprise CA, all the domain controllers enroll for a certificate using the domain controller certificate template.
- Ensure that secure LDAP is working by using the `ldp.exe` and connecting to the domain controller over port 636 and SSL.

## Configure LDAP after offloading SSL to the load balancing virtual server by using the GUI

1. Create a load balancing service with the protocol set to `SSL_TCP`.
  - Navigate to **Traffic management > Load Balancing > Services** and click **Add**.
  - Specify the IP address of the domain controller and set the port number to 636.
  - Click **OK**.

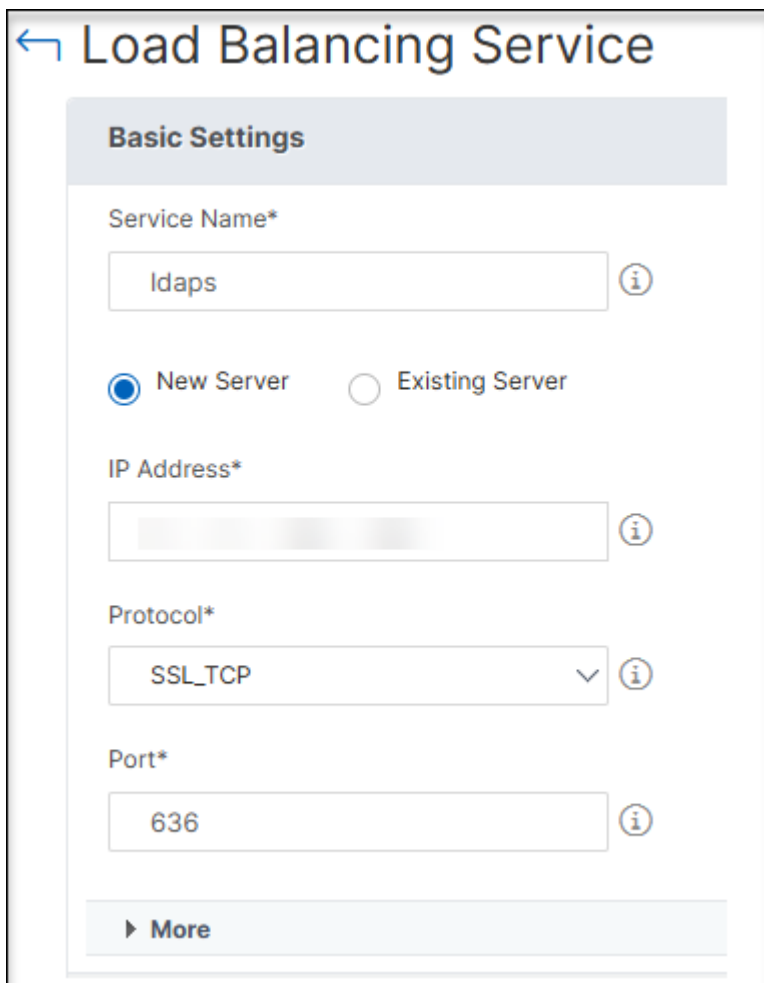


2. Create a load balancing virtual server for LDAPS load balancing service.
  - a) Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
  - b) Set the protocol to TCP, enter the IP address, set the port to 636, and click **OK**.

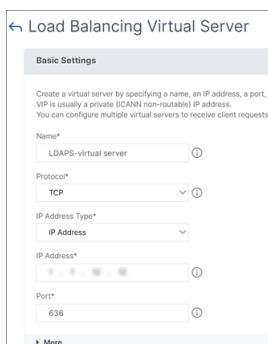

3. Bind the LDAPS service to the load balancing virtual server.
  - Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
  - Select the LDAP virtual server. The **Load Balancing Virtual Server** page appears.

- In the **Services and Service Groups** section, click **No Load Balancing Virtual Server Service Binding**. The **Service Binding** page appears.
  - Select the load balancing service. Update the other required fields and click **Bind**.
  - Click **Done**.
4. Now change the LDAP authentication policy server to point to the load balancing virtual server for secure LDAP. The security type must be PLAINTEXT.
    - a) Navigate to **NetScaler Gateway > Policies > Authentication > LDAP**.
    - b) Select the LDAP server and click **Edit**.
    - c) Change the IP address to the LDAPS VIP hosted on the NetScaler appliance created earlier.
    - d) Change Security type to **PLAINTEXT**, Change port to 636, select the **Allow Password Change** check box, if necessary (SLDAP allows password changes).
    - e) Click **Test Network Connectivity** to verify connectivity.
    - f) Click **OK**.

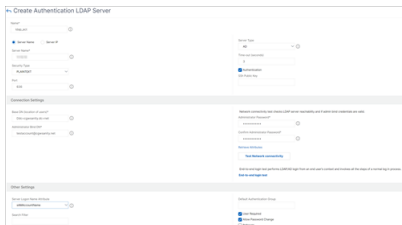

You can check the authentication dashboard to confirm that the status of the LDAP server is UP. Also, check the authentication logs to confirm that the authentication is working as intended.

## Configure LDAP after offloading SSL to the load balancing virtual server by using the CLI

1. Configure an LDAP server for the AAAD process. The following sample configuration establishes the SSL connection with a load balancing virtual server without SSL mutual authentication.

```
1 add authentication ldapAction ldap_act -serverIP 1.1.12.12 -
 serverPort 636 -secTYPE PLAINTEXT -ldapBase "dc=aaatm-test,dc=
 com" -ldapBindDn administrator@aaatm-test.com -
 ldapBindDnPassword <password> -ldapLoginName samAccountName
```

2. Configure a load balancing virtual server for the LDAP virtual server. The load balancing virtual server is of type TCP.

```
1 add lb vserver ldaps TCP 1.1.12.12 636 -persistenceType NONE -
 cltTimeout 9000
```

3. Configure a service for the load balancing virtual server. The service type is SSL-TCP.

```
1 add service ldaps 1.1.10.1 SSL_TCP 636
```

4. Configure a CA certificate for the service and set the “serverAuth” parameter for the server certificate validation.

```
1 bind ssl service ldaps -certkeyName ca-cert -CA
2 set ssl service ldaps -serverAuth enabled
```

5. Attach the certificate to the service that is rendered to the LDAP server.

```
1 bind ssl service ldaps -certkeyName usr_cert [client-certificate
 for client-authentication]
```

6. Bind the service to the load balancing virtual server.

```
1 bind lb vserver ldaps ldaps
```

## RADIUS authentication

May 2, 2023

As with other types of authentication policies, a Remote Authentication Dial In User Service (RADIUS) authentication policy is comprised of an expression and an action. After creating an authentication policy, you bind it to an authentication virtual server and assign a priority to it. When binding it, you also designate it as either a primary or a secondary policy. However, setting up a RADIUS authentication policy has certain special requirements that are described below.

Normally you configure the NetScaler to use the IP address of the authentication server during authentication. With RADIUS authentication servers, you can now configure the ADC to use the FQDN of the RADIUS server instead of its IP address to authenticate users. Using an FQDN can simplify an otherwise much more complex authentication, authorization, and auditing configuration in environments where the authentication server might be at any of several IP addresses, but always uses a single FQDN. To configure authentication by using a server’s FQDN instead of its IP address, you follow the normal configuration process except when creating the authentication action. When creating the action, you substitute the **serverName** parameter for the **serverIP** parameter.

Before you decide whether to configure the NetScaler to use the IP or the FQDN of your RADIUS server to authenticate users, consider that configuring authentication, authorization, and auditing to authenticate to an FQDN instead of an IP address adds an extra step to the authentication process. Each time the ADC authenticates a user, it must resolve the FQDN. If a great many users attempt to authenticate simultaneously, the resulting DNS lookups might slow the authentication process.

### Note

These instructions assume that you are already familiar with the RADIUS protocol and have al-

ready configured your chosen RADIUS authentication server.

## To add an authentication action for a RADIUS server by using the command line interface

If you authenticate to a RADIUS server, you need to add an explicit authentication action. To do this, at the command prompt, type the following command:

```
1 add authentication radiusAction <name> [-serverip <IP> | -serverName] <
 FQDN>][-serverPort <port>] [-authTimeout <positive_integer>] {
2 -radKey }
3 [-radNASip (ENABLED | DISABLED)][-radNASid <string>] [-radVendorID
 <positive_integer>][-radAttributeType <positive_integer>][-
 radGroupsPrefix <string>] [-radGroupSeparator <string>][-
 passEncoding <passEncoding>][-ipVendorID <positive_integer>] [-
 ipAttributeType <positive_integer>][-accounting (ON | OFF)][-
 pwdVendorID <positive_integer> [-pwdAttributeType <
 positive_integer>]] [-defaultAuthenticationGroup <string>] [-
 callingstationid (ENABLED | DISABLED)]
```

The following example adds a RADIUS authentication action named **Authn-Act-1**, with the server IP **10.218.24.65**, the server port **1812**, the authentication timeout **15** minutes, the radius key **WareTheLorax**, NAS IP disabled, and NAS ID **NAS1**.

```
1 add authentication radiusaction Authn-Act-1 -serverip 10.218.24.65 -
 serverport 1812 -authtimeout 15 -radkey WareTheLorax -radNASip
 DISABLED -radNASid NAS1
2 Done
```

The following example adds the same RADIUS authentication action, but using the server FQDN **rad01.example.com** instead of the IP.

```
1 add authentication radiusaction Authn-Act-1 -serverName rad01.example.
 com -serverport 1812 -authtimeout 15 -radkey WareTheLorax -radNASip
 DISABLED -radNASid NAS1
2 Done
```

## To configure an authentication action for an external RADIUS server by using the command line

To configure an existing RADIUS action, at the command prompt, type the following command:

```
1 set authentication radiusAction <name> [-serverip <IP> | -serverName] <
 FQDN>][-serverPort <port>] [-authTimeout <positive_integer>] {
2 -radKey }
3 [-radNASip (ENABLED | DISABLED)][-radNASid <string>] [-radVendorID
 <positive_integer>][-radAttributeType <positive_integer>][-
```

```
radGroupsPrefix <string>] [-radGroupSeparator <string>][
passEncoding <passEncoding>][-ipVendorID <positive_integer>] [
ipAttributeType <positive_integer>][-accounting (ON | OFF)][
pwdVendorID <positive_integer> [-pwdAttributeType <
positive_integer>]] [-defaultAuthenticationGroup <string>] [
callingstationid (ENABLED | DISABLED)]
```

## To remove an authentication action for an external RADIUS server by using the command line interface

To remove an existing RADIUS action, at the command prompt, type the following command:

```
1 rm authentication radiusAction <name>
```

### Example

```
1 rm authentication radiusaction Authn-Act-1
2 Done
```

## To configure a RADIUS server by using the configuration utility

### Note

In the configuration utility, the term server is used instead of action, but refers to the same task.

1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Radius**
2. In the details pane, on the **Servers** tab, do one of the following:
  - To create a new RADIUS server, click **Add**.
  - To modify an existing RADIUS server, select the server, and then click **Edit**.
3. In the **Create Authentication RADIUS Server** or **Configure Authentication RADIUS Server** dialog, type or select values for the parameters. To fill out parameters that appear beneath **Send Calling Station ID**, expand **Details**.
  - Name\*—radiusActionName (Cannot be changed for a previously configured action)
  - Authentication Type\*—authtype (Set to RADIUS, cannot be changed)
  - Server Name / IP Address\*—Choose either Server Name or Server IP
    - Server Name\*—serverName <FQDN>
    - IP Address\*—serverIp <IP> If the server is assigned an IPv6 IP address, select the IPv6 check box.
  - Port\*—serverPort

- Time-out (seconds)\*—authTimeout
- Secret Key\*—radKey (RADIUS shared secret.)
- Confirm Secret Key\*—Type the RADIUS shared secret a second time. (No command line equivalent.)
- Send Calling Station ID—callingstationid
- Group Vendor Identifier—radVendorID
- Group Attribute Type—radAttributeType
- IP Address Vendor Identifier—ipVendorID
- pwdVendorID—pwdVendorID
- Password Encoding—passEncoding
- Default Authentication Group—defaultAuthenticationGroup
- NAS ID—radNASid
- Enable NAS IP address extraction—radNASip
- Group Prefix—radGroupsPrefix
- Group Separator—radGroupSeparator
- IP Address Attribute Type—ipAttributeType
- Password Attribute Type—pwdAttributeType
- Accounting—accounting

4. Click **Create** or **OK**. The policy that you created appears in the Servers page.

### **Support to pass through RADIUS attribute 66 (Tunnel-Client-Endpoint)**

The NetScaler appliance now allows the pass-through of RADIUS attribute 66 (Tunnel-Client-Endpoint) during RADIUS authentication. By applying this feature, the clients IP address is received by second-factor authentication from entrusting to make risk-based authentication decisions.

A new attribute “tunnelEndpointClientIP” is introduced in both “add authentication radiusAction” and “set radiusParams” command.

**To use this feature, at the NetScaler appliance command prompt, type:**

```
1 add authentication radiusAction <name> {
2 -serverIP <ip_addr|ipv6_addr|*> | {
3 -serverName <string> }
4 }
5 [-serverPort <port>] ... [-tunnelEndpointClientIP (ENABLED|DISABLED)]
```



```
6
7 set radiusParams {
8 -serverIP <ip_addr|ipv6_addr|*> |{
9 -serverName <string> }
10 }
11 [-serverPort<port>] ... [-tunnelEndpointClientIP(ENABLED|DISABLED)]
```

### Example

```
1 add authentication radiusAction radius -serverIP 1.217.22.20 -serverName
 FQDN -serverPort 1812 -tunnelEndpointClientIp ENABLED
2
3 set radiusParams -serverIp 1.217.22.20 -serverName FQDN1 -serverPort
 1812 -tunnelEndpointClientIP ENABLED
```

## Support for validating end-to-end RADIUS authentication

The NetScaler appliance can now validate end-to-end RADIUS authentication through a GUI. To validate this feature, a new “test” button is introduced in GUI. A NetScaler appliance administrator can leverage this feature to achieve the following benefits:

- Consolidates the complete flow (packet engine –aaa daemon–external server) to provide better analysis
- Reduces time on validating and troubleshooting issues related to individual scenarios

You have two options to configure and view the test results of RADIUS end-to-end authentication by using the GUI.

### From system option

1. Navigate to **System > Authentication > Basic Policies > RADIUS**, click **Servers** tab.
2. Select the available **RADIUS action** from the list.
3. On the **Configure Authentication RADIUS Server** page, you have two options under **Connections Settings** section.
4. To check the RADIUS server connection, click **Test RADIUS Reachability** tab.
5. To view the end-to-end RADIUS authentication, click **Test End User Connection** link.

### From Authentication option

1. Navigate to **Authentication > Dashboard**, select the available RADIUS action from the list.
2. On the **Configure Authentication RADIUS Server** page, you have two options under **Connections Settings** section.
3. To check the RADIUS server connection, click **Test RADIUS Reachability** tab.

4. To view the end-to-end RADIUS authentication status, click **Test End User Connection** link.

## RADIUS authentication using TCP or TLS

October 13, 2023

Starting from release 13.1–27.59, RADIUS authentication is supported on TCP and TLS protocols as well.

### Note:

- The **Test RADIUS Reachability** option is not supported for RADIUS on TCP and TLS transport types.
- RADIUS authentication using UDP is not supported on FIPS appliances.

### Configure RADIUS over TCP by using the CLI

At the command prompt type:

```
1 add authentication radiusAction <name> [-serverIP] [-serverPort] [-transport <transport>]
```

### Example:

```
1 add authentication radiusAction RadAction -serverIP 1.1.1.1 -radkey 123 -transport TCP
```

### Configure RADIUS over TCP by using the GUI

1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Actions > RADIUS**.
2. Select an existing server or create a server.

For details on creating a server, see [To configure a RADIUS server by using the GUI](#).

3. In **Transport**, select **TCP**.
4. Click **Create**.

### Configure RADIUS over TLS by using the CLI

At the command prompt type:

```
1 add authentication radiusAction <name> [-serverIP] [-serverPort] [-transport <transport>] [-targetLBVserver <string>]
```

Example

```
1 add authentication radiusAction RadAction -serverIP 1.1.1.1 -radkey 123 -transport TLS -targetLBVserver rad-lb
```

#### Note:

- Server name is not supported for TLS transport type.
- For the TLS transport type, configure a target load balancing virtual server of type TCP and bind a service of type SSL\_TCP to this virtual server.
- The IP address and the port number configured for RADIUS action must match the IP address and port number of the configured target load balancing virtual server.

### Configure RADIUS over TLS by using the GUI

1. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Actions > Servers**.
2. Select an existing server or create a server.  
For details about creating a server, see [To configure a RADIUS server by using the GUI](#).
3. In **Transport**, select **TLS**.

4. In **Target Load Balancing Virtual Server**, select the virtual server. For details on creating a load balancing virtual server, see [Creating a virtual server](#).

**Note:**

- Server name is not supported for TLS transport type.
- For the TLS transport type, configure a target load balancing virtual server of type TCP and bind a service of type SSL\_TCP to this virtual server.
- The IP address and the port number configured for RADIUS action must match the IP address and port number of the configured target load balancing virtual server.

5. Click **Create**.

## TACACS authentication

May 9, 2023

TACACS authentication policy authenticates to an external Terminal Access Controller Access-Control System (TACACS) authentication server.

After a user authenticates to a TACACS server, the NetScaler connects to the same TACACS server for all subsequent authorizations. When a primary TACACS server is unavailable, this feature prevents any delay while the ADC waits for the first TACACS server to time out. It happens before resending the authorization request to the second TACACS server.

**Note:**

TACACS authorization server does not support commands whose string length exceeds 255 characters.

**Workaround:** Use local authorization instead of a TACACS authorization server.

When authenticating through a TACACS server, authentication, authorization, and auditing traffic management logs only successfully runs TACACS commands. It prevents the logs from showing TACACS commands that are entered by the users who were not authorized to run them.

Starting from NetScaler 12.0 Build 57.x, the Terminal Access Controller Access-Control System (TACACS) is not blocking the authentication, authorization, and auditing daemon while sending the TACACS request. The allow LDAP, and RADIUS authentication to proceed with the request. The TACACS authentication request resumes once the TACACS server acknowledges the TACACS request.

**Important:**

- Citrix recommends you do not modify any TACACS related configurations when you run a “clear ns config” command.
- TACACS related configuration related to advanced policies is cleared and reapplied when the “RBAconfig” parameter is set to NO in “clear ns config” command for advanced policy.

**Name-value attribute support for TACACS authentication**

You can now configure TACACS authentication attributes with a unique name along with values. The names are configured in the TACACS action parameter and the values are obtained by querying for the names. By specifying the name attribute value, admins can easily search for the attribute value associated with the attribute name. Also, admins no longer have to remember the attribute by its value alone.

**Important**

- In the tacacsAction command, you can configure a maximum of 64 attributes separated by comma with total size less than 2048 bytes.

**To configure the name-value attributes by using the CLI**

At the command prompt, type:

```
1 add authentication tacacsAction <name> [-Attributes <string>]
```

**Example:**

```
1 add authentication tacacsAction tacacsAct1 -attributes "mail,sn,
 userprincipalName"
```

**To add an authentication action by using the command line interface**

If you do not use LOCAL authentication, you need to add an explicit authentication action. At the command prompt, type the following command:

```
1 add authentication tacacsAction <name> -serverip <IP> [-serverPort <
 port>][-authTimeout <positive_integer>][...]
```

**Example**

---

```
1 add authentication tacacsaction Authn-Act-1 -serverip 10.218.24.65 -
 serverport 1812 -authtimeout 15 -tacacsSecret "
 minotaur" -authorization OFF -accounting ON -auditFailedCmds OFF -
 defaultAuthenticationGroup "users"
```

### To configure an authentication action by using the command line interface

To configure an existing authentication action, at the command prompt, type the following command:

```
1 set authentication tacacsAction <name> -serverip <IP> [-serverPort <
 port>][-authTimeout <positive_integer>][...]
```

#### Example

```
1 > set authentication tacacsaction Authn-Act-1 -serverip
 10.218.24.65 -serverport 1812 -authtimeout 15
 -tacacsSecret "minotaur" -authorization OFF -accounting ON -
 auditFailedCmds OFF -defaultAuthenticationGroup "users" Done
```

### To remove an authentication action by using the command line interface

To remove an existing RADIUS action, at the command prompt, type the following command:

```
1 rm authentication radiusAction <name>
```

#### Example

```
1 rm authentication tacacsaction Authn-Act-1
```

## Client certificate authentication

June 19, 2023

Websites that contain sensitive content, such as online banking websites or websites with employee personal information, sometimes require client certificates for authentication. To configure authentication, authorization, and auditing to authenticate users based on client-side certificate attributes, you first enable client authentication on the traffic management virtual server and bind the root certificate to the authentication virtual server. Then, you implement one of two options. You can configure the default authentication type on the authentication virtual server as CERT, or you can create a certificate action that defines what the NetScaler must do to authenticate users based on a client

certificate. In either case, your authentication server must support CRLs. You configure the ADC to extract the user name from the **SubjectCN** field or another specified field in the client certificate.


When the user tries to log on to an authentication virtual server for which an authentication policy is not configured, and a global cascade is not configured, the user name information is extracted from the specified field of the certificate. If the required field is extracted, the authentication succeeds. If the user does not provide a valid certificate during the SSL handshake, or if the user name extraction fails, authentication fails. After it validates the client certificate, the ADC presents a logon page to the user.

The following procedures assume that you have already created a functioning authentication, authorization, and auditing configuration, and therefore they explain only how to enable authentication by using client certificates. These procedures also assume that you have obtained your root certificate and client certificates and have placed them on the ADC in the `/nsconfig/ssl` directory.

## Configure client certificate authentication

### Configure client certificate parameters by using the GUI

1. Install a CA certificate and bind it to an authentication virtual server.
  - a) Navigate to **Security > AAA - Application Traffic > Virtual Servers**.
  - b) In the **Authentication Virtual Servers** page that appears, select the virtual server that you want to configure to handle client certificate authentication, and then click **Edit**.
  - c) On the **Authentication Virtual Server** page, navigate to the **Certificate** section and click the right arrow “>”.
  - d) On the **CA Certificate Binding** page, select a CA certificate, update the other required fields, and click **Bind**.

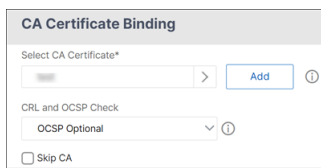


The screenshot shows the 'CA Certificate Binding' configuration window. It includes a 'Select CA Certificate\*' dropdown menu with a right arrow and an 'Add' button. Below this is a 'CRL and OCSP Check' section with an 'OCSP Optional' dropdown menu. At the bottom, there is a checkbox labeled 'Skip CA'.


- e) If a CA certificate is not available, then select **Add**.
- f) On the **Install Certificate** page, update the following fields and click **Install** and then click **Close**.
  - Certificate-Key Pair Name: Name for the certificate and private-key pair
  - Certificate File Name: The name of the certificate file that is used to form the certificate-key pair. The certificate file must be present on the NetScaler’s hard-disk drive or solid-state drive. Storing a certificate in any location other than the

default might cause inconsistency in a high availability setup. The default path is /nsconfig/ssl/.

- Notification Period: Number of days before certificate expiration at which NetScaler notifies the admin that the certificate is about to expire.
- Notify When Expires: Enable this option to receive an alert when the certificate is about to expire.

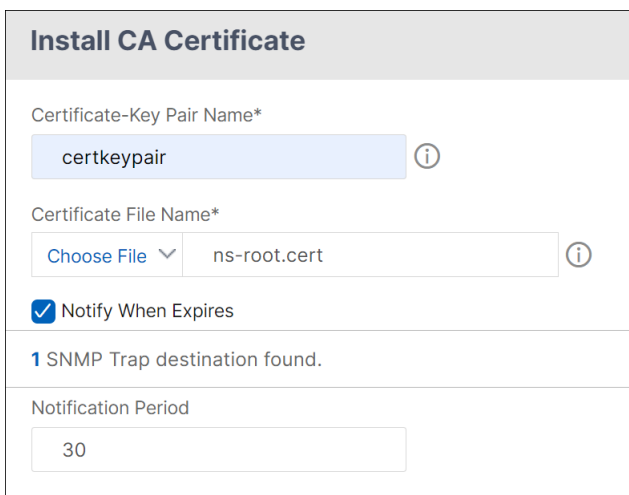

- g) Once the CA certificate is installed, go to the **CA Certificate Binding** page, bind it to an authentication virtual server.
2. Return to the **Security > AAA - Application Traffic > Virtual Servers** page.
  3. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Basic Policies > CERT**.
  4. Select the policy that you want to configure to handle client certificate authentication, and then click **Edit**.
  5. On the **Configure Authentication CERT Policy** page, go to the **Server** drop-down list and select the virtual server that is configured to handle client certificate authentication.
  6. Click **OK**.

 

### Configure client certificate parameters by using the CLI

At the command prompt, type the following commands, in the order shown, to configure the certificate and verify the configuration:



```
1 add ssl certKey <certkeyName> -cert <certFile> -key <keyFile> -password
 -inform <inform> -expiryMonitor <expiryMonitor> -notificationPeriod
 <notificationPeriod>
2
3 bind ssl certKey [<certkeyName>] [-ocspResponder <string>] [-priority <
 positive_integer>]
4
5 show ssl certKey [<certkeyName>]
6
7 set aaa parameter -defaultAuthType CERT
8
9 show aaa parameter
10
11 set aaa certParams -userNameField "Subject:CN"
12
13 show aaa certParams
```

## Configure client certificate advanced authentication policies by using the GUI

1. Install CA certificate and bind it to a certificate-key pair.
  - a) Navigate to **Security > AAA - Application Traffic > Virtual Servers**.
  - b) In the **Authentication Virtual Servers** page that appears, select the virtual server that you want to configure to handle client certificate authentication, and then click **Edit**.
  - c) On the **Authentication Virtual Server** page, navigate to the **Certificate** section and click the right arrow “>”.
  - d) On the **CA Certificate Binding** page, select a CA certificate, update the other required fields, and click **Bind**.
  - e) If a CA certificate is not available, then select **Add**.
  - f) On the **Install Certificate** page, update the following fields and click **Install** and then click **Close**.
    - Certificate-Key Pair Name: Name for the certificate and private-key pair
    - Certificate File Name: The name of the certificate file that is used to form the certificate-key pair. The certificate file must be present on the NetScaler’s hard-disk drive or solid-state drive. Storing a certificate in any location other than the default might cause inconsistency in a high availability setup. The default path is `/nsconfig/ssl/`.
    - Notification Period: Number of days before certificate expiration at which NetScaler notifies the admin that the certificate is about to expire.
    - Notify When Expires: Enable this option to receive an alert when the certificate is about to expire.
  - g) Once the CA certificate is installed, go to the **CA Certificate Binding** page and repeat step 4.

2. Return to the **Security > AAA - Application Traffic > Virtual Servers** page.

**Note:**

If you have imported a valid CA certificate and server certificate for the virtual server you can skip **steps 1 and 2**.

3. Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies**, and then select **Policy**.
4. On the **Authentication Policies** page, do one of the following:
  - To create a policy, click **Add**.
  - To modify an existing policy, select the policy, and then click **Edit**.
5. On the **Create Authentication Policy** or **Configure Authentication Policy** page, type or select values for the parameters.
  - Name: Policy name. You cannot change the name of a previously configured policy.
  - Action Type: Type of the authentication action.
  - Action: Name of the authentication action to be performed if the policy matches. You can choose an existing authentication action, or click **Add** and create an action.
  - Expression: The rule that selects connections to which you want to apply the action that you specified. The rule can be simple (“true”selects all traffic) or complex. You enter expressions by first choosing the type of expression in the leftmost drop-down list beneath the Expression window, and then by typing your expression directly into the expression text area, or by clicking Add to open Add Expression dialog box and using the drop-down lists in it to define your expression.
  - Log Action: Name of the audit action to use when an authentication request matches this policy. You can choose an existing audit action, or click **Add** to create an action.
  - Comment: You can type a comment that describes the type of traffic that this authentication policy applies to. This field is optional.
6. Click **Create** or **OK**, and then click **Close**.

## Client certificate pass-through

The NetScaler can now be configured to pass client certificates through to protected applications that require client certificates for user authentication. The ADC first authenticates the user, then inserts the client certificate into the request and sends it to the application. This feature is configured by adding appropriate SSL policies.

The exact behavior of this feature when a user presents a client certificate depends upon the configuration of the VPN virtual server.

- If the VPN virtual server is configured to accept client certificates but not require them, the ADC inserts the certificate into the request and then forwards the request to the protected application.
- If the VPN virtual server has client certificate authentication disabled, the ADC renegotiates the authentication protocol and reauthenticates the user before it inserts the client certificate in the header and forwards the request to the protected application.
- If the VPN virtual server is configured to require client certificate authentication, the ADC uses the client certificate to authenticate the user, then inserts the certificate in the header and forwards the request to the protected application.

In all of these cases, you configure the client certificate pass-through as follows.

### Create and configure client certificate pass-through by using the CLI

At the command prompt, type the following commands:

```
1 add vpn vsrver <name> SSL <IP> 443
```

For **name**, substitute a name for the virtual server. The name must contain from one to 127 ASCII characters, beginning with a letter or underscore (\_), and containing only letters, numbers, and the underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. For **<IP>**, substitute the IP address assigned to the virtual server.

```
1 set ssl vsrver <name> -clientAuth ENABLED -clientCert <clientcert>
```

For **<name>**, substitute the name of the virtual server that you created. For **<clientCert>**, substitute one of the following values:

- **disabled**—disables client certificate authentication on the VPN virtual server.
- **mandatory**—configures the VPN virtual server to require client certificates to authenticate.
- **optional**—configures the VPN virtual server to allow client certificate authentication, but not to require it.

```
1 bind vpn vsrver <name> -policy local
```

For **<name>**, replace the name of the VPN virtual server that you created.

```
1 bind vpn vsrver <name> -policy cert
```

For **<name>**, substitute the name of the VPN virtual server that you created.

```
1 bind ssl vsrver <name> -certkeyName <certkeyname>
```

For **<name>**, substitute the name of the virtual server that you created. For **<certkeyName>**, substitute the client certificate key.

```
1 bind ssl vserver <name> -certkeyName <cacertkeyname> -CA -ocspCheck
Optional
```

For <name>, substitute the name of the virtual server that you created. For <cacertkeyName>, substitute the CA certificate key.

```
1 add ssl action <actname> -clientCert ENABLED -certHeader CLIENT-CERT
```

For <actname>, substitute a name for the SSL action.

```
1 add ssl policy <polname> -rule true -action <actname>
```

For <polname>, substitute a name for your new SSL policy. For <actname>, substitute the name of the SSL action that you created.

```
1 bind ssl vserver <name> -policyName <polname> -priority 10
```

For <name>, replace the name of the VPN virtual server.

**Example**

```
1 add vpn vserver vs-certpassthru SSL 10.121.250.75 443
2 set ssl vserver vs-certpassthru -clientAuth ENABLED -clientCert
Optional
3 bind vpn vserver vs-certpassthru -policy local
4 bind vpn vserver vs-certpassthru -policy cert
5 bind ssl vserver vs-certpassthru -certkeyName mycertKey
6 bind ssl vserver vs-certpassthru -certkeyName mycertKey -CA -ocspCheck
Optional
7 add ssl action act-certpassthru -clientCert ENABLED -certHeader CLIENT-
CERT
8 add ssl policy pol-certpassthru -rule true -action act-certpassthru
9 bind ssl vserver vs-certpassthru -policyName pol-certpassthru -priority
10
```

## Negotiate authentication

May 2, 2023

As with other types of authentication policies, a Negotiate authentication policy is comprised of an expression and an action. After creating an authentication policy, you bind it to an authentication virtual server and assign a priority to it. When binding it, you also designate it as either a primary or a secondary policy.

In addition to standard authentication functions, the Negotiate Action command can now extract user information from a keytab file instead of requiring you to enter that information manually. If a keytab

has more than one SPN, authentication, authorization, and auditing selects the correct SPN. You can configure this feature at the command line, or by using the configuration utility.

**Note**

These instructions assume that you are already familiar with the LDAP protocol and have already configured your chosen LDAP authentication server.

**To configure authentication, authorization, and auditing to extract user information from a keytab file by using the command line interface**

At the command prompt, type the appropriate command:

```
1 add authentication negotiateAction <name> {
2 -domain <string> }
3 {
4 -domainUser <string> }
5 {
6 -domainUserPasswd }
7 [-defaultAuthenticationGroup <string>] [-keytab <string>] [-NTLMPath
 <string>]
8
9 set authentication negotiateAction <name> {
10 -domain <string> }
11 {
12 -domainUser <string> }
13 {
14 -domainUserPasswd }
15 [-defaultAuthenticationGroup <string>] [-keytab <string>] [-NTLMPath
 <string>]
```

**Parameter description**

- **name** - Name of the negotiate action to be used.
- **domain** - Domain name of the service principal that represents NetScaler.
- **domainUser** - User name of the account that is mapped with NetScaler principal. This can be given along with domain and password when keytab file is not available. If username is given along with keytab file, then that keytab file will be searched for this user's credentials. Maximum Length: 127
- **domainUserPasswd** - Password of the account that is mapped to the NetScaler principal.
- **defaultAuthenticationGroup** - This is the default group that is chosen when the authentication succeeds in addition to extracted groups. Maximum Length: 63
- **keytab** - The path to the keytab file that is used to decrypt kerberos tickets presented to NetScaler. If keytab is not available, domain/username/password can be specified in the negotiate action configuration. Maximum Length: 127

- **NTLMPath** - The path to the site that is enabled for NTLM authentication, including FQDN of the server. This is used when clients fallback to NTLM. Maximum Length: 127

## To configure authentication, authorization, and auditing to extract user information from a keytab file by using the configuration utility

### Note

In the configuration utility, the term server is used instead of action, but refers to the same task.

1. Navigate to **Security > AAA - Application Traffic > Authentication > Advanced Policies > Actions > NEGOTIATE Actions**.
2. In the details pane, on the **Servers** tab, do one of the following:
  - If you want to create a new **Negotiate** action, click **Add**.
  - If you want to modify an existing **Negotiate** action, in the data pane select the action, and then click **Edit**.
3. If you are creating a new **Negotiate** action, in the **Name** text box, type a name for your new action. The name can be from one to 127 characters in length and can consist of upper- and lowercase letters, numbers, and the hyphen (-) and underscore (\_) characters. If you are modifying an existing Negotiate action, skip this step. The name is read-only; you cannot change it.
4. Under **Negotiate**, if the Use Keytab file check box is not already checked, check it.
5. In the Keytab file path text box, type the full path and filename of the keytab file that you want to use.
6. In the Default authentication group text box, type the authentication group that you want to set as default for this user.
7. Click **Create** or **OK** to save your changes.

## Points to note when advanced encryptions is used for Kerberos authentication

- **Sample configuration when keytab is used:** add authentication negotiateAction neg\_act\_aes256 -keytab “/nsconfig/krb/lbvs\_aes256.keytab”
- **Use the following command when keytab has multiple encryption types.** The command additionally captures domain user parameters: add authentication negotiateAction neg\_act\_keytab\_all -keytab “/nsconfig/krb/lbvs\_all.keytab”-domainUser “HTTP/lbvs.aaa.local”
- **Use the following commands when user credential are used:** add authentication negotiateAction neg\_act\_user -domain AAA.LOCAL -domainUser “HTTP/lbvs.aaa.local”

-domainUserPasswd <password>

- Ensure that the correct **domainUser** information is provided. You can look for the user logon name in AD.

## Web authentication

May 2, 2023

Authentication, authorization, and auditing is now able to authenticate a user to a web server, providing the credentials that the web server requires in an HTTP request and analyzing the web server response to determine that user authentication was successful. As with other types of authentication policies, a Web authentication policy is comprised of an expression and an action. After creating an authentication policy, you bind it to an authentication virtual server and assign a priority to it. When binding it, you also designate it as either a primary or a secondary policy.

To set up web-based authentication with a specific web server, first you create a web authentication action. Since authentication to web servers does not use a rigid format, you must specify exactly which information the web server requires and in which format when creating the action. To do this, you create an expression in NetScaler appliance Advanced policy that contains the following items:

- **Server IP**—The IP address of the authentication Web server.
- **Server Port**—The port of the authentication Web server.
- **Authentication Rule**—An expression in NetScaler appliance Advanced policy that contains the user's credentials in the format that the Web server expects.
- **Scheme**—HTTP (for unencrypted web authentication) or HTTPS (for encrypted web authentication).
- **Success Rule**—An expression in NetScaler appliance Advanced policy that matches the web server response string that signifies that the user authenticated successfully.

For all other parameters, follow the normal rules for the add authentication action command.

Next you create a policy associated with that action. The policy is similar to an LDAP policy, and like LDAP policies uses NetScaler appliance syntax.

### Note

These instructions assume that you are already familiar with the authentication requirements of the web server(s) to which you want to authenticate, and have already configured the web authentication server.

## To configure a Web authentication action by using the command line interface

To create a web authentication action at the command line, at the command line type the following command:

```
1 add authentication webAuthAction <name> -serverIP <ip_addr|ipv6_addr|*>
 -serverPort <port|*> [-fullReqExpr <string>] -scheme (http | https
) -successRule <expression> [-defaultAuthenticationGroup <string
 >][-Attribute1 <string>][-Attribute2 <string>] [-Attribute3 <string
 >][-Attribute4 <string>] [-Attribute5 <string>][-Attribute6 <string
 >] [-Attribute7 <string>][-Attribute8 <string>] [-Attribute9 <string
 >][-Attribute10 <string>] [-Attribute11 <string>][-Attribute12 <
 string>] [-Attribute13 <string>][-Attribute14 <string>] [-
 Attribute15 <string>][-Attribute16 <string>]
```

### Example

```
1 add policy expression post_data "\"username=\" + http.REQ.BODY(1000).
 SET_TEXT_MODE(IGNORECASE).AFTER_STR(\"login=\").BEFORE_STR(\"&\") +
 \"&password=\" + http.REQ.BODY(1000).SET_TEXT_MODE(IGNORECASE).
 AFTER_STR(\"passwd=\")"
2
3 add policy expression length_post_data "\"username= \" + http.REQ.BODY
 (1000).SET_TEXT_MODE(IGNORECASE).AFTER_STR(\"login=\").BEFORE_STR
 (\"&\") + \"password=\" + http.REQ.BODY(1000).SET_TEXT_MODE(
 IGNORECASE).AFTER_STR(\"passwd=\")).length"
4
5 add authentication webAuthAction webAuth_POST -serverIP 10.106.187.54 -
 serverPort 80 -fullReqExpr q{
6 "POST /MyPHP/auth.php HTTP/" + http.req.version.major + "." + http.req
 .version.major + "\r\nAccept:*/*\r\nHost: 10.106.187.54\r\nReferer:
 http://10.106.187.54/MyPHP/auth.php\r\nAccept-Language: en-US\r\
 nUser-Agent: Mozilla/5.0 (compatible; MSIE 9.0; Windows NT 6.1;
 Trident/5.0)\r\nContent-Type: application/x-www-form-urlencoded\r\n
 " + "Content-Length: " + length_post_data + "\r\nConnection: Keep-
 Alive\r\n\r\n" + post_data }
7 -scheme http -successRule "http.res.status.eq(200)"
```

## To configure a Web authentication action by using the configuration utility

### Note

In the configuration utility, the term server is used instead of action, but refers to the same task.

1. Navigate to **Security > AAA - Application Traffic > Policies > LDAP**.
2. In the details pane, on the **Servers** tab, do one of the following:
  - If you want to create a new web authentication action, click **Add**.
  - If you want to modify an existing web authentication action, in the data pane select the action, and then click **Edit**.



3. If you are creating a new web authentication action, in the **Create Authentication Web** server dialog box, **Name** text box, type a name for the new web authentication action. The name can be from one to 127 characters in length, and can consist of upper- and lowercase letters, numbers, and the hyphen (-) and underscore (\_) characters. If you are modifying an existing web authentication action, skip this step. The name is read-only; you cannot change it.
4. In the **Web Server IP Address** text box, type the IPv4 or IPv6 IP address of the authentication web server. If the address is an IPv6 IP address, select the IPv6 check box first.
5. In the Port text box, type the port number on which the web server accepts connections.
6. Select **HTTP** or **HTTPS** in the **Protocol** drop-down list.
7. In the HTTP Request Expression text area, type a PCRE-format regular expression that creates the web server request that contains the user's credentials in the exact format expected by the authentication web server.
8. In the Expression to validate the Authentication text area, type a NetScaler appliance Advanced policy expression that describes the information in the web server response that indicates that user authentication was successful.
9. Fill out the remaining fields as described in the general authentication action documentation.
10. Click **OK**.

## Configure SMS OTP for Web authentication

January 30, 2024

NetScaler can now be integrated with a third party SMS provider to provide an extra layer of authentication.

NetScaler appliance can be configured to send an OTP on the user's mobile as a second factor of authentication. The appliance presents the user with a logon form to enter the OTP after successful AD login. It is only after the successful validation of SMS OTP authentication that the user is presented with the requested resource.

To achieve SMS OTP authentication, the NetScaler appliance relies on the following factors in the back end.

1. Authenticate the user using LDAP authentication and extract the user's mobile number.
2. Create OTP and store it in the NS variable. [Configuring and using variables](#).
3. Send the OTP via WebAuth authentication method to the mobile number extracted from LDAP.
4. Validate the OTP.

## Prerequisites

### Enable features and add SNIP

Run the following commands to enable the features required for this configuration:

```
1 enable ns feature LB SSL SSLVPN AAA
2
3 add ns ip <SNIP-IP> <subnet mask> -type SNIP
```

### Configure OTP store

Admins must set up a database/store to save OTPs used for SMS authentication.

The recommended configuration range for the `expires` parameter (OTP expiration) is 30 to 180 seconds. Any value outside this range might result in a failed SMS OTP configuration and nFactor flow.

```
1 add ns variable otp_store -type "map(text(65),text(6),100000)" -
 ifValueTooBig undef -ifNoValue undef -expires 60
```

### Generate random OTP per user session

Use the following command to generate a 6-digit random OTP per user session and save it in the OTP store.

```
1 add ns assignment generate_otp -variable "$otp_store[AAA.USER.SESSIONID
]" -set ("000000" + SYS.RANDOM.MUL(1000000).
 TYPECAST_UNSIGNED_LONG_AT.TYPECAST_TEXT_T).SUFFIX(6)
```

## Configure SMS OTP authentication with NetScaler

- Before you configure the SMS two factor authentication feature, you must have an LDAP authentication configured on a NetScaler appliance as first factor with authentication enabled. For instructions to configure LDAP authentication, see [To configure LDAP authentication by using the configuration utility](#).
- Configure LDAP and extract the mobile number to be used for SMS OTP authentication.

### Sample first factor configuration

Configure LDAP as the first factor for authentication.

```

1 add authentication ldapAction ldap_extraction_action -serverIP <
 IP_Address> -ldapBase OU=Sanity,dc=aaa,dc=local -ldapBindDn
 administrator@aaa.local -ldapBindDnPassword <password> -
 ldapLoginName samaccountname -groupAttrName memberof -
 subAttributeName CN -authentication disabled
2
3 add authentication Policy ldap_extraction_policy -rule true -action
 ldap_extraction_action

```

**Note**

Mobile number can be extracted using AAA.USER.ATTRIBUTE(1) and can be included while sending it to the back-end server.

**Sample second factor configuration**

Using the following sample configuration, an OTP that is to be sent to the end user is generated.

```

1 add authentication Policy set_otp -rule true -action generate_otp
2
3 add authentication policylabel set_otp_label -loginSchema LSCHEMA_INT
4
5 bind authentication policylabel set_otp_label -policyName set_otp -
 priority 1
6
7 add authentication Policy cascade_noauth -rule true -action NO_AUTHN

```

**Web authentication policy and action**

Now, configure the web authentication action to send the OTP to any third party SMS sender along with the mobile number fetched from the LDAP policy.

Check the OTP and send the generated OTP to a third party SMS provider or any web server as configured below:

```

1 add policy expression otp_exp_post "\"Message: OTP is \" + $otp_store[
 AAA.USER.SESSIONID] + \" for login into secure access gateway.
 Valid till EXPIRE_TIME. Do not share the OTP with anyone for
 security reasons&Mobile:\" + AAA.USER.ATTRIBUTE(1)\"
2
3 add authentication webAuthAction sms_post -serverIP <web_application_ip
 > -serverPort 80 -fullReqExpr q{
4 "POST /MyPHP/auth.php HTTP/" + http.req.version.major + "." + http.req
 .version.major + "\r\nAccept:*/*\r\nHost: <web_application_ip> \r\
 nContent-Length:100\r\n\r\n" + otp_exp_post }
5 -scheme http -successRule true
6
7 add authentication Policy post_wpp -rule true -action sms_post

```

**Check the OTP**

Add the following policy and policy label to check if the OTP exists for the user session:

```
1 add authentication policylabel check_otp_label -loginSchema LSCHEMA_INT
2
3 add authentication Policy check_otp -rule "$otp_store.valueExists(AAA.
 USER.SESSIONID)" -action NO_AUTHN
```

**OTP verification by comparing the user-provided value and the OTP store value**

Run the following commands to verify the OTP by comparing the user-provided value and the OTP store value:

```
1 add authentication loginSchema onlypassword -authenticationSchema "/
 nsconfig/loginschema/LoginSchema/OnlyPassword.xml"
2
3 add authentication policylabel otp_verify_label -loginSchema
 onlypassword
4
5 add authentication Policy otp_verify -rule "AAA.LOGIN.PASSWORD.EQ(
 $otp_store[AAA.USER.SESSIONID])" -action NO_AUTHN
```

**Bind the policy to the authentication policy label**

```
1 bind authentication policylabel set_otp_label -policyName
 cascade_noauth -priority 2 -gotoPriorityExpression NEXT -nextFactor
 check_otp_label
2
3 bind authentication policylabel check_otp_label -policyName post_wpp -
 priority 1 -gotoPriorityExpression NEXT -nextFactor otp_verify_label
4
5 bind authentication policylabel otp_verify_label -policyName otp_verify
 -priority 1 -gotoPriorityExpression NEXT
```

**Create an authentication virtual server and a load balancing virtual server**

```
1 add authentication vserver avs SSL <ipadresss> 443
2
3 add ssl certKey aaa_local -cert aaatm_wild.cer -key aaatm_wild.key
4
5 bind ssl vserver avs -certkeyName aaa_local
6
7 bind authentication vserver avs -policy ldap_extraction_policy -
 priority 1 -nextFactor set_otp_label -gotoPriorityExpression NEXT
8
```

```
9 add lb vserver lb HTTP <ip_adress> 80 -persistenceType NONE -
 cltTimeout 180 -AuthenticationHost <auth_server> -Authentication ON
10
11 add service svc <Ip_adress> HTTP 80
12
13 bind lb vserver lb svc
```


**Note:**

The policy for cascading authentication is added to enable reliable and continuous authentication for the end users. If the current factor fails, the next factor is evaluated such that there is no impact on the user experience.

## Forms based authentication

October 30, 2020

With Forms based authentication, a logon form is presented to the end-user. This type of authentication form supports both multifactor (nFactor) authentication and Classic authentication.

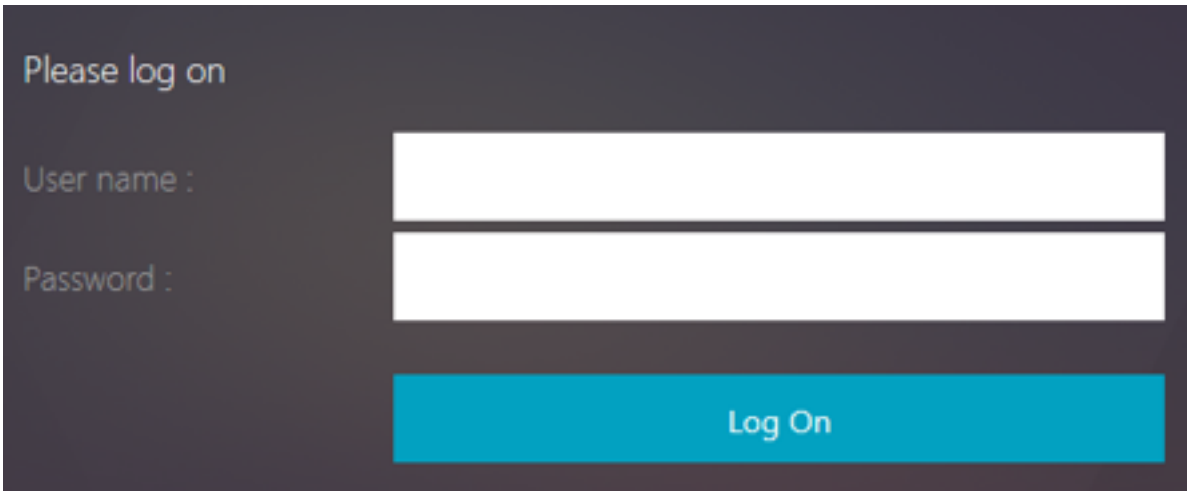

Please log on

User name :

Password :

Log On

Ensure the following for the Forms based authentication to work:


- The load balancing virtual server must have authentication turned **ON**.
- ‘authenticationHost’ parameter must be specified to which the user must be redirected for authentication. The command for configuring the same is as follows:

```
1 set lb vs lb1 -authentication on - authenticationhost aaavs-ip/
 fqdn
```

- Form based authentication is compatible with browser that supports HTML

The following steps walk through how the Forms based authentication works:


1. The client (browser) sends a GET request for a URL on the TM (load balancing/CS) virtual server.
2. The TM virtual server determines that the client has not been authenticated, and sends an HTTP 302 response to the client. The response contains a hidden script that causes the client to issue a GET request for /cgi/tm to the authentication virtual server.
3. The client sends GET /cgi/tm containing the target URL to the authentication virtual server.
4. The authentication virtual server sends out a redirect to the login page.
5. The user sends out its credentials to the authentication virtual server with a POST /doAuthentication.do. Authentication is done by the authentication virtual server.
6. If the credentials are correct, the authentication virtual server sends an HTTP 302 response to the cgi/selfauth url on the load balancing server with a one time token (OTP).
7. The load balancing server sends HTTP 302 to the client.
8. The client sends a GET request for their initial URL target URL along with a 32 byte cookie.

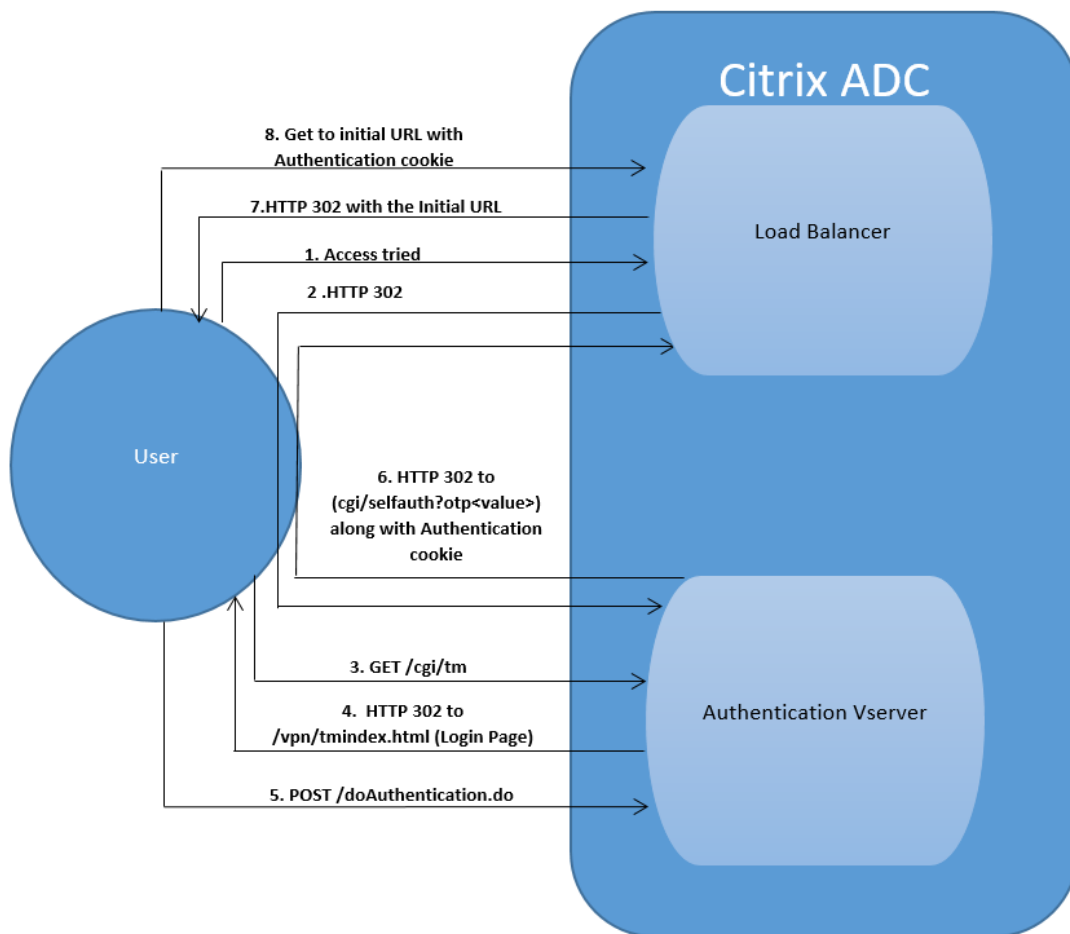

## 401 based authentication

May 2, 2023

With 401 based Authentication, the NetScaler appliance presents a pop-up dialog box to the end user.

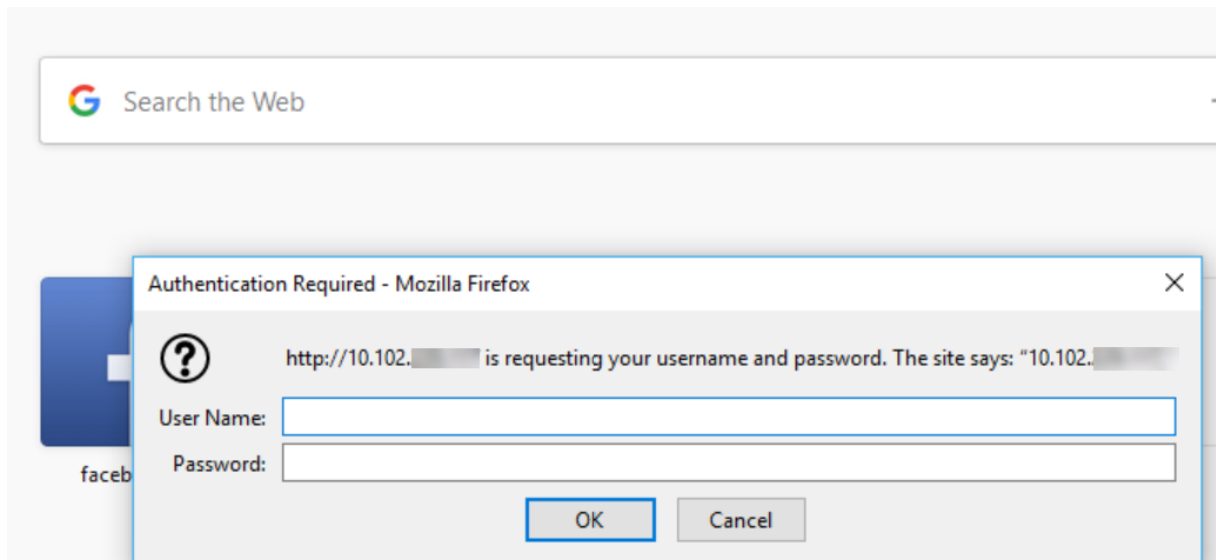

Form based AAA-TM works on the redirect messages. Some applications do not support redirects, in such cases the 401 authentication enabled AAA-TM is used.


Enable the following parameters for 401 Authentication AAA-TM to work.

- 'authnVsName' parameter value for the load balancing virtual server must be the name of the authentication virtual server to be used to authenticate users.
- 'authn401' parameter must be enabled. The command for configuring the same is as follows:

```
1 set lb vs lb1 - authn401 on - authnvsName <aaavs-name>
```

The following steps walk through how the 401 Authentication works:

1. User tries to access a particular URL using the load balancing virtual server.
2. The load balancing virtual server sends a 401 HTTP response back to the user indicating that authentication is required for the access.
3. The user sends its credentials to the load balancing virtual server in the authorization header.
4. The load balancing virtual server authenticates the user and then connects the user to the back end servers.

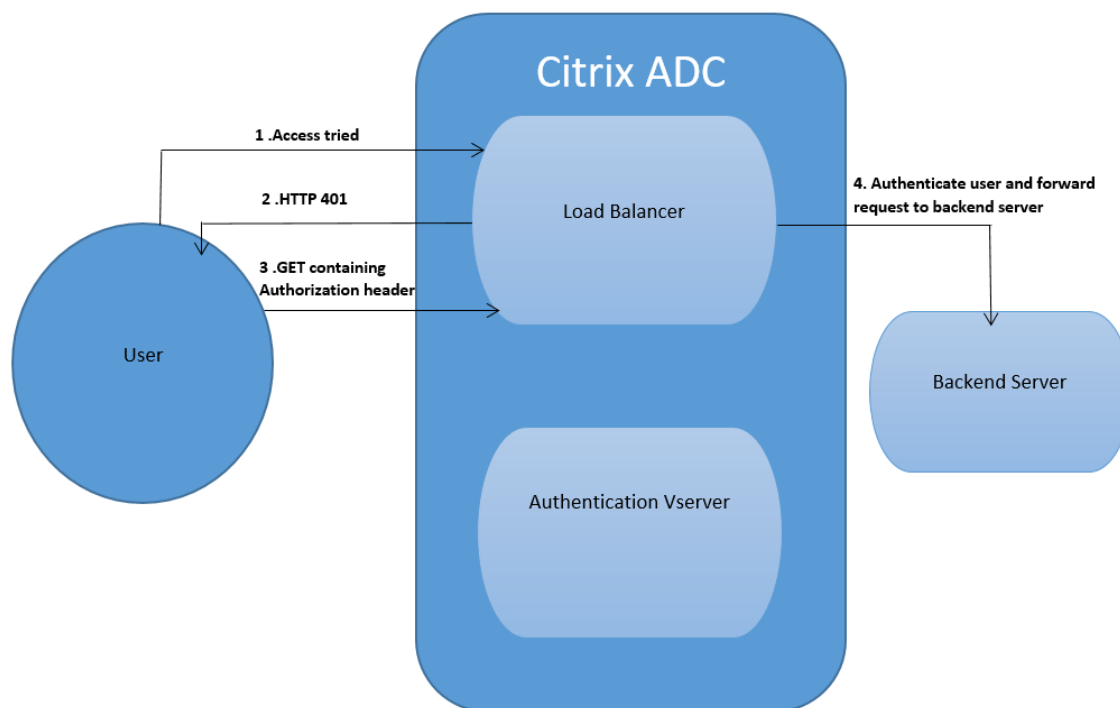**Important:**

For a load balancing virtual server with 401 authentication ON, several authentication and authorization sessions might be created for the same user in a short time. This configuration might lead to a spike in the memory. You can apply the following configuration on the NetScaler appliance to debug and identify the end client application.

```

1 set syslogparams -userDefinedAuditlog yes
2
3 add audit messageaction 401_log_act INFORMATIONAL '"LB-401 accessed:
 User: <" + AAA.USER.NAME + "> SessionID <" + AAA.USER.SESSIONID + ">
 Client :<" + CLIENT.IP.SRC + "> accessed URL: <" + HTTP.REQ.URL +
 ">"
4
5 add rewritepolicy rewrite_401_log true NOREWRITE -logAction 401_log_act
6
7 bind lb vserver <lb_name> -policyName rewrite_401_log -priority 100 -
 type reqEST

```

**re-Captcha configuration for nFactor authentication**

May 10, 2024



NetScaler Gateway supports a new first-class action `captchaAction` that simplifies re-Captcha configuration. As re-Captcha is a first-class action, it can be a factor of its own. You can inject re-Captcha anywhere in the nFactor flow.

Previously, you had to write custom WebAuth policies with changes to the RfWebUI as well. With the introduction of `captchaAction`, you do not have to modify the JavaScript.

**Important:**

If re-Captcha is used along with the user name or password fields in the schema, the **Submit** button is disabled until re-Captcha is met.

## re-Captcha configuration

re-Captcha configuration involves two parts.

1. Configuration on Google for registering re-Captcha.
2. Configuration on NetScaler appliance to use re-Captcha as part of login flow.

### re-Captcha configuration on Google

Register a domain for re-Captcha at <https://www.google.com/recaptcha/admin#l1ist>.

1. When you navigate to this page, the following screen appears.

← Register a new site

**Label** ⓘ

e.g. example.com 0 / 50

---

**reCAPTCHA type** ⓘ

reCAPTCHA v3 Verify requests with a score

reCAPTCHA v2 Verify requests with a challenge

**Domains** ⓘ

+ Add a domain, e.g. example.com

**Accept the reCAPTCHA Terms of Service**

By accessing or using the reCAPTCHA APIs, you agree to the Google APIs [Terms of Use](#), Google [Terms of Use](#), and to the Additional Terms below. Please read and understand all applicable terms and policies before accessing the APIs.

reCAPTCHA Terms of Service ▾

**Send alerts to owners** ⓘ

CANCEL
SUBMIT

**Note**

Use reCAPTCHA v2 only. Invisible re-Captcha is still in preview.

2. After a domain is registered, the “SiteKey” and “SecretKey” are displayed.

ⓘ Adding reCAPTCHA to your site

▾ Keys

|                                                                                                                                                                              |                                                                                                                                                                                                                |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Site key</b><br/>Use this in the HTML code your site serves to users.</p> <div style="border: 1px solid #ccc; padding: 5px; background-color: #f0f0f0;">6Ld..._B</div> | <p><b>Secret key</b><br/>Use this for communication between your site and Google. Be sure to keep it a secret.</p> <div style="border: 1px solid #ccc; padding: 5px; background-color: #f0f0f0;">6I..._C</div> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

▾ Step 1: client-side integration

**Note**

The “SiteKey” and “SecretKey” are grayed out for security reasons. “SecretKey” must be kept safe.

**re-Captcha configuration on a NetScaler appliance**

The re-Captcha configuration on the NetScaler appliance can be divided into three parts:

- Display re-Captcha screen
- Post the re-Captcha response to Google server
- LDAP configuration is second factor for user logon (optional)

**Display re-Captcha screen** The login form customization is done through the SingleAuth-Captcha.xml login schema. This customization is specified at authentication virtual server and is sent to UI for rendering the login form. The built-in login schema, SingleAuthCaptcha.xml, is at the `/nsconfig/loginSchema/LoginSchema` directory on the NetScaler appliance.

**Important**

- The SingleAuthCaptcha.xml login schema can be used when LDAP is configured as the first factor.
- Based on your use case and different schemas, you can modify the existing schema. For instance if you need only re-Captcha factor (without user name or password) or dual authentication with re-Captcha.
- If any custom modifications are done or the file is renamed, Citrix recommends copying all loginSchemas from the `/nsconfig/loginschema/LoginSchema` directory to the parent directory, `/nsconfig/loginschema`.

**To configure display of re-Captcha using CLI**

```
1 add authentication loginSchema singleauthcaptcha -authenticationSchema
 /nsconfig/loginschema/SingleAuthCaptcha.xml
2
3 add authentication loginSchemaPolicy singleauthcaptcha -rule true -
 action singleauthcaptcha
4
5 add authentication vserver auth SSL <IP> <Port>
6
7 add ssl certkey vserver-cert -cert <path-to-cert-file> -key <path-to-
 key-file>
8
9 bind ssl vserver auth -certkey vserver-cert
10
11 bind authentication vserver auth -policy singleauthcaptcha -priority 5
 -gotoPriorityExpression END
```

**Post the re-Captcha response to Google server** After you have configured the re-Captcha that must be displayed to the users, the admins add the configuration to the Google server to verify the re-Captcha response from the browser.

**To verify re-Captcha response from the browser**

```
1 add authentication captchaAction myrecaptcha -sitekey <sitekey-copied-
 from-google> -secretkey <secretkey-from-google>
2
3 add authentication policy myrecaptcha -rule true -action myrecaptcha
4
5 bind authentication vserver auth -policy myrecaptcha -priority 1
```

NetScaler contacts <https://www.google.com/recaptcha/api/siteverify> to validate the Captcha information. So, ensure that the site is reachable from NetScaler.

To verify if the Google site is reachable, run the script `curl -vvv https://www.google.com/recaptcha/api/siteverify`.

The following commands are required to configure if AD authentication is desired. Else, you can ignore this step.

```
1 add authentication ldapAction ldap-new -serverIP x.x.x.x -serverPort
 636 -ldapBase "cn=users,dc=aaatm,dc=com" -ldapBindDn adminuser@aaatm
 .com -ldapBindDnPassword <password> -encrypted -encryptmethod
 ENCMTHD_3 -ldapLoginName sAMAccountName -groupAttrName memberof -
 subAttributeName CN -secType SSL -passwdChange ENABLED -
 defaultAuthenticationGroup ldapGroup
2
3 add authenticationpolicy ldap-new -rule true -action ldap-new
```

**LDAP configuration is second factor for user logon (optional)** The LDAP authentication happens after re-Captcha, you add it to the second factor.

```
1 add authentication policylabel second-factor
2
3 bind authentication policylabel second-factor -policy ldap-new -
 priority 10
4
5 bind authentication vserver auth -policy myrecaptcha -priority 1 -
 nextFactor second-factor
```


Administrator needs to add appropriate virtual servers depending on whether load balancing virtual server or NetScaler Gateway appliance is used for access. Administrator must configure the following command if a load balancing virtual server is required:

```
1 add lb vserver lbtest HTTP <IP> <Port> -authentication ON -
 authenticationHost nssp.aaatm.com
```

**\*\*nssp.aaatm.com\*\*** –Resolves to authentication virtual server.


**User validation of re-Captcha** Once you have configured all the steps mentioned in the previous sections, you must see the following UI.

1. Once the authentication virtual server loads the login page, the logon screen is displayed. **Log On** is disabled until re-Captcha is complete.

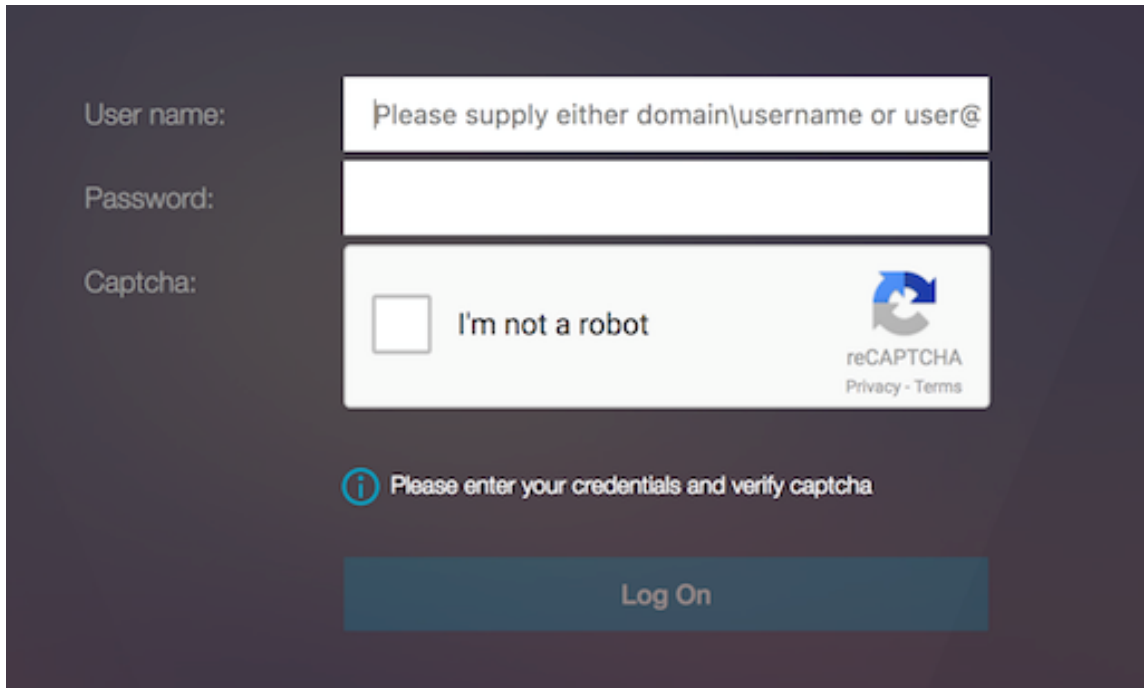


The screenshot shows a login interface on a dark background. On the left, there are labels for 'User name:', 'Password:', and 'Captcha:'. To the right of 'User name:' is a text input field containing the placeholder text 'Please supply either domain\username or user@'. Below that is a password input field. Under the 'Captcha:' label is a reCAPTCHA widget with a checkbox and the text 'I'm not a robot'. To the right of the checkbox is the reCAPTCHA logo and the text 'reCAPTCHA Privacy - Terms'. Below the reCAPTCHA widget is a blue information icon followed by the text 'Please enter your credentials and verify captcha'. At the bottom center is a large, dark blue button with the text 'Log On'.

2. Select I'm not a robot option. The re-Captcha widget is displayed.

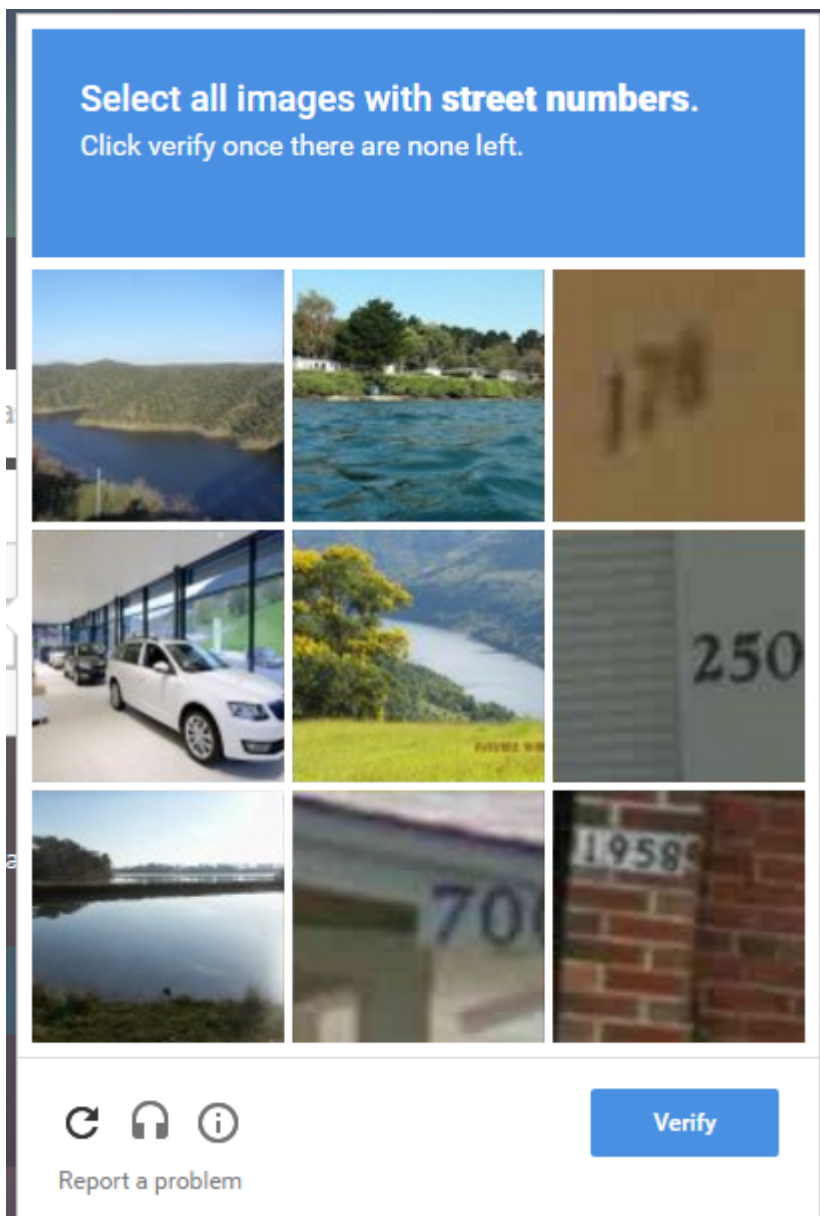

3. You are navigated through a series of re-Captcha images, before the completion page is displayed.
4. Enter the AD credentials, select the **I'm not a robot** check box and click **Log On**. If authentication succeeds, you are redirected to the desired resource.

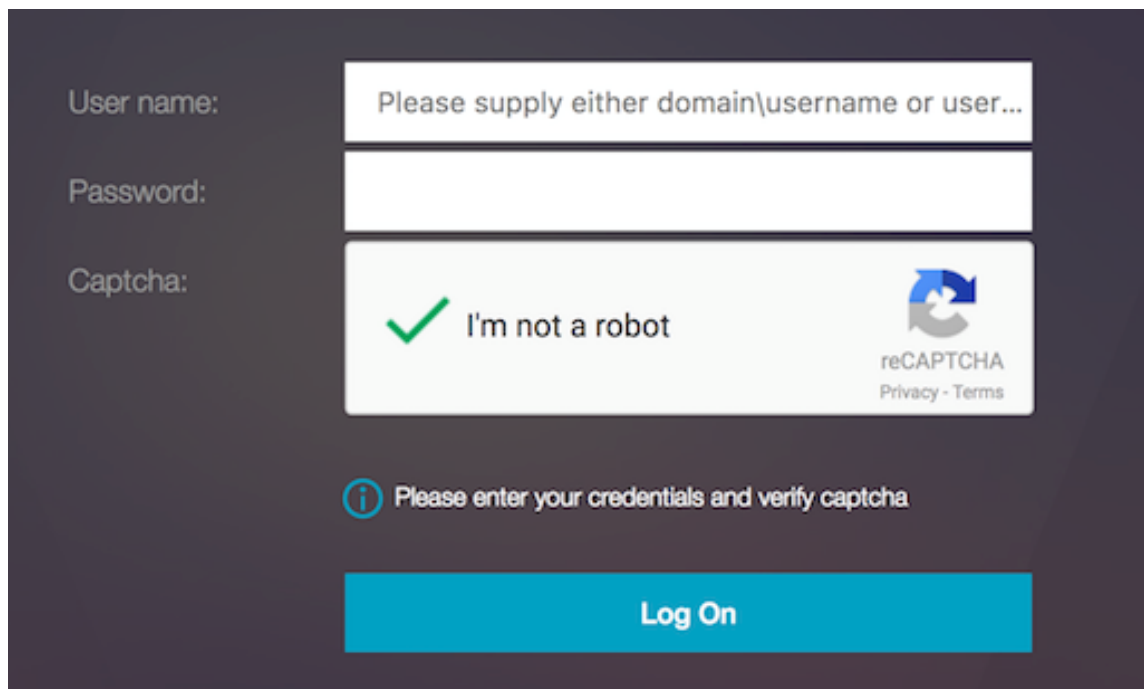

The image shows a login form on a dark background. It has three input fields: 'User name:' with a placeholder 'Please supply either domain\username or user...', 'Password:', and 'Captcha:'. The captcha field contains a green checkmark, the text 'I'm not a robot', and the reCAPTCHA logo with 'reCAPTCHA Privacy - Terms' text. Below the fields is an information icon and the text 'Please enter your credentials and verify captcha'. At the bottom is a large blue 'Log On' button.

**Notes:**

- If re-Captcha is used with AD authentication, the **Submit** button for credentials is disabled until re-Captcha is complete.
- The re-Captcha happens in a factor of its own. Therefore, any subsequent validations like AD must happen in the `next factor` of re-Captcha.

## Native OTP support for authentication

December 11, 2024

NetScaler supports one-time passwords (OTPs) without having to use a third-party server. One-time password is a highly secure option for authenticating to secure servers as the number or passcode generated is random. Previously, specialized firms, such as RSA with specific devices that generate random numbers offered the OTPs.

In addition to reducing capital and operating expenses, this feature enhances the administrator's control by keeping the entire configuration on the NetScaler appliance.

**Points to note:**

- The NetScaler administrator must configure an interface to manage and validate user devices because third-party servers are no longer needed.

- The native OTP solution does not support the SAML logout feature.

User must be registered with a NetScaler virtual server to use the OTP solution. Registration is required only once per unique device, and can be restricted to certain environments. Configuring and validation of a registered user is similar to configuring an extra authentication policy.

### Advantages of native OTP support

- Reduces operating cost by eliminating the need to have an extra infrastructure on an authenticating server in addition to the Active Directory.
- Consolidates configuration only to NetScaler appliance thus offering great control to administrators.
- Eliminates the client's dependence on an extra authentication server for generating a number expected by clients.

### Native OTP workflow


The native OTP solution is a two-fold process and the workflow is classified as the following:

- Device registration
- End user login

#### Important:

You can skip the registration process if you are using third-party solutions or managing other devices apart from the NetScaler appliance. The final string that you add must be in the NetScaler specified format.

The following figure depicts the device registration flow to register a new device to receive OTP.

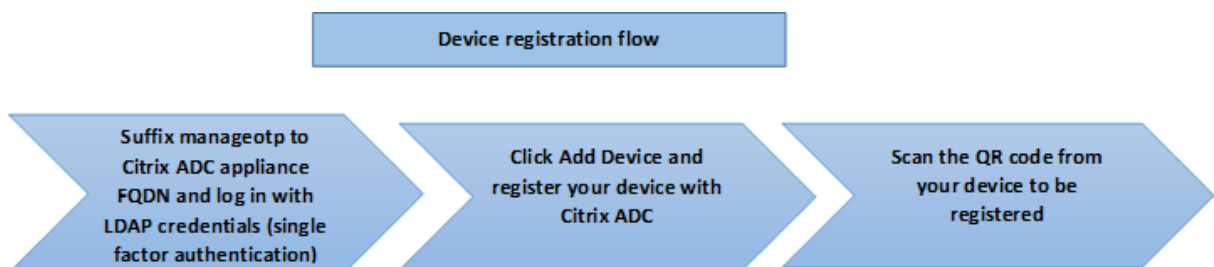


#### Note:

The device registration can be done using any number of factors. The single factor (as specified




in the previous figure) is used as an example to explain the device registration process. For more details, see [Recommended native OTP configurations for device registration](#).


The following figure depicts the verification of OTP through the registered device.

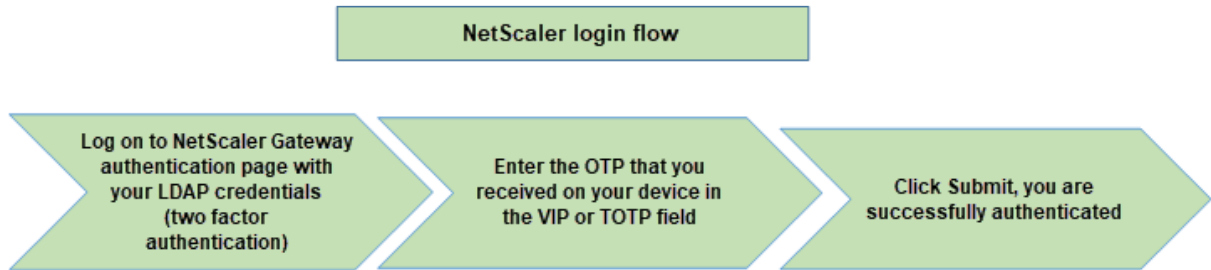

The following figure depicts the device registration and management flow.

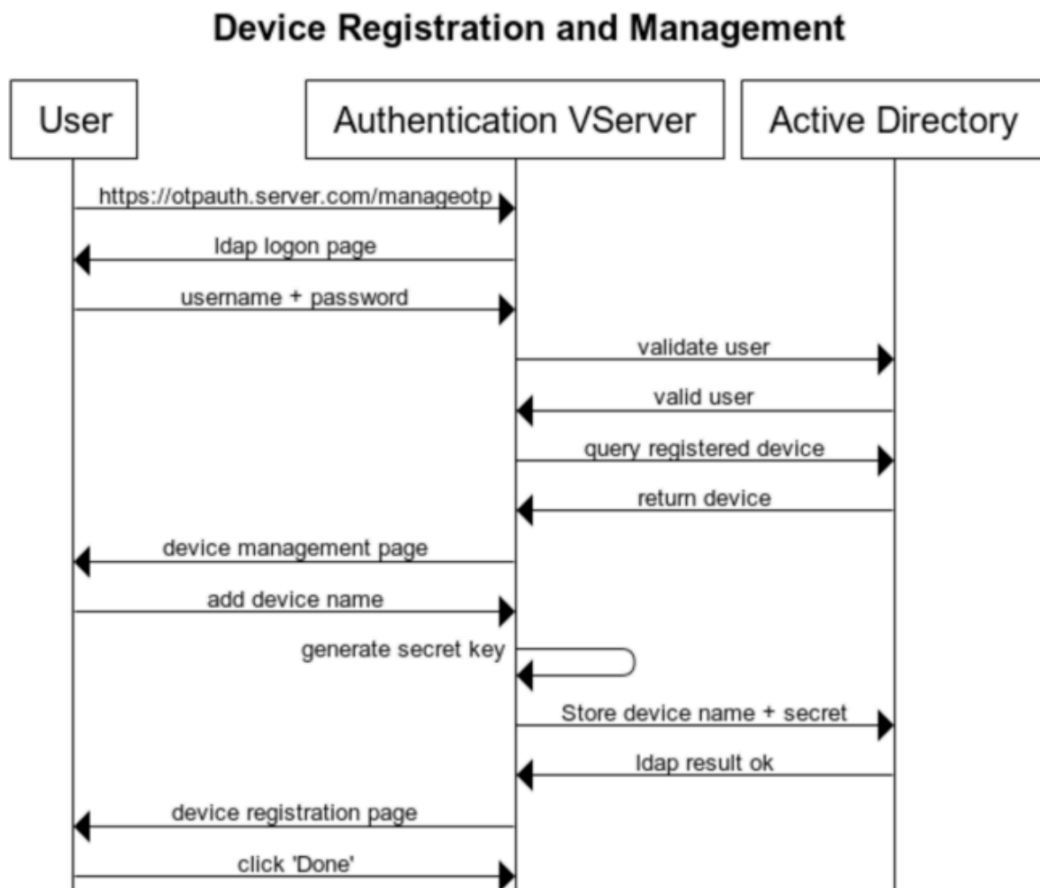

The following figure depicts the end user flow for the Native OTP feature.

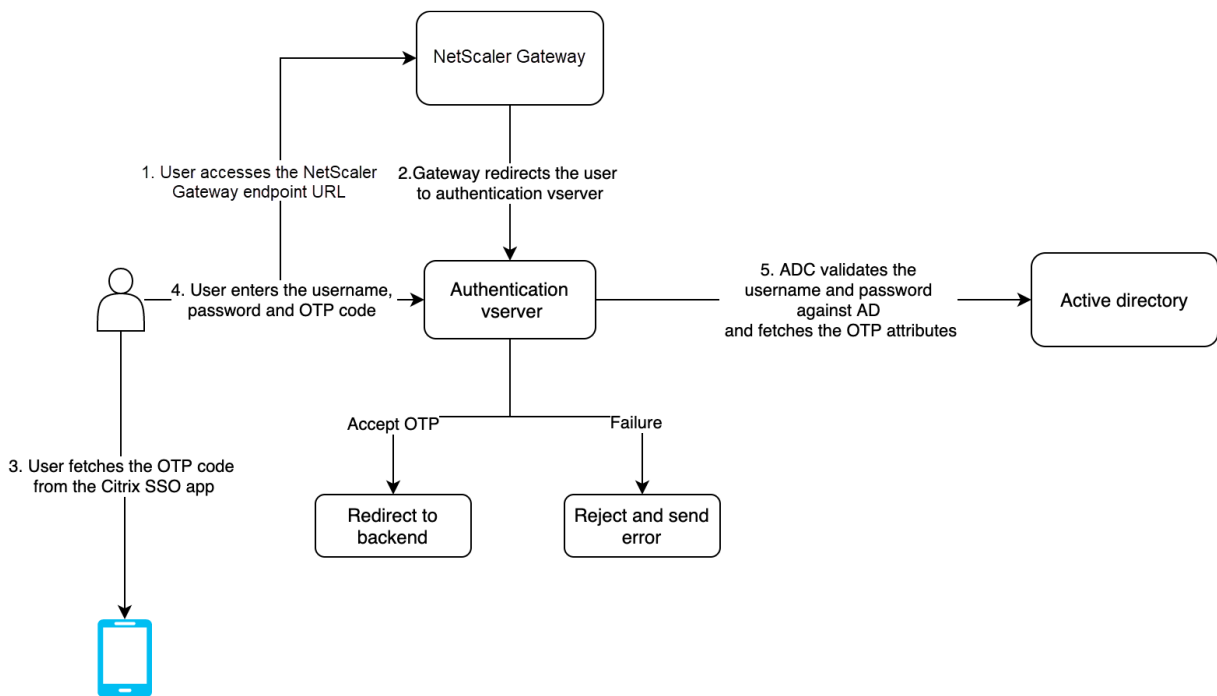

## Prerequisites

To use the native OTP feature, make sure that the following prerequisites are met.

- NetScaler feature release version is 12.0 build 51.24 and later.
- Advanced or Premium edition license is installed on NetScaler Gateway.
- NetScaler is configured with management IP and the management console is accessible both using a browser and command line.
- NetScaler is configured with authentication, authorization, and auditing virtual server to authenticate users. For more information, see [Authentication virtual server](#)
- NetScaler appliance is configured with Unified Gateway and the authentication, authorization, and auditing profile is assigned to the Gateway virtual server.
- Native OTP solution is restricted to nFactor authentication flow. Advanced policies are required to configure the solution. For more details, see [Configuring nFactor authentication](#).

Also ensure the following for Active Directory:

- A minimum attribute length of 256 characters.
- Attribute type must be 'DirectoryString' such as UserParameters. These attributes can hold string values.
- Attribute string type must be Unicode, if device name is in non-English characters.
- NetScaler LDAP administrator must have write access to the selected AD attribute.
- NetScaler appliance and client machine must be synced to a common Network Time Server.

## Configure Native OTP using the GUI

The native OTP registration is not just a single factor authentication. The following sections help you to configure the single and second factor authentication.

### Create Login Schema for first factor

1. Navigate to **Security > AAA-Application Traffic > Login Schema**.
2. Go to **Profiles** and click **Add**.
3. On the **Create Authentication Login Schema** page, enter *lschema\_single\_auth\_manage\_otp* under the **Name** field and click **Edit** next to **noschema**.
4. Click the **LoginSchema** folder.
5. Scroll down to select **SingleAuthManageOTP.xml** and click **Select**.
6. Click **Create**.
7. Click **Policies** and Click **Add**.
8. On the **Create Authentication Login Schema Policy** screen, enter the following values.

**Name:** lpol\_single\_auth\_manage\_otp\_by\_url

**Profile:** Select lschema\_single\_auth\_manage\_otp from the list.

**Rule:** HTTP.REQ.COOKIE.VALUE("NSC\_TASS").EQ("manageotp")

### Configure authentication, authorization, and auditing virtual server

1. Navigate to **Security > AAA –Application Traffic > Authentication Virtual Servers**. Click to edit the existing virtual server. For more information, see [Authentication virtual server](#)
2. Click the + icon next to **Login Schemas** under **Advanced Settings** in the right pane.
3. Select **No Login Schema**.
4. Click the arrow and select the **lpol\_single\_auth\_manage\_otp\_by\_url** Policy, click **Select**, and click **Bind**.
5. Scroll up and select **1 Authentication Policy** under **Advanced Authentication Policy**.
6. Right-click the **nFactor Policy** and select **Edit Binding**. Right-click the already configured nFactor Policy or refer to [nFactor](#) to create one and select Edit Binding.
7. Click the arrow under **Select Next Factor** to select an existing configuration or click **Add** to create a factor.

8. On the **Create Authentication PolicyLabel** screen, enter the following, and click **Continue**:  
**Name:** manage\_otp\_flow\_label  
**Login Schema:** Lschema\_Int
9. On the **Authentication PolicyLabel** screen, click **Add** to create a Policy.  
Create a policy for a normal LDAP server.
10. On the **Create Authentication Policy** screen, enter the following:  
**Name:** auth\_pol\_ldap\_native\_otp
11. Select the Action type as **LDAP** using the **Action Type** list.
12. In the **Action** field, click **Add** to create an action.  
Create the first LDAP action with authentication enabled to be used for single factor.
13. In the **Create Authentication LDAP server** page, select the **Server IP** radio button, enter the following values, and select **Test Connection**. The following is a sample configuration.  
**Name:** ldap\_native\_otp  
**IP Address:** 192.8.xx.xx  
**Base DN:** DC=training, DC=lab  
**Administrator:** Administrator@training.lab  
**Password:** xxxxxx  
Create a policy for OTP .
14. On the **Create Authentication Policy** screen, enter the following:  
**Name:** auth\_pol\_ldap\_otp\_action
15. Select the Action type as **LDAP** using the **Action Type** list.
16. In the **Action** field, click **Add** to create an action.  
Create the second LDAP action to set OTP authenticator with OTP secret configuration and authentication unchecked.
17. In the **Create Authentication LDAP server** page, select the **Server IP** radio button, clear the checkbox next to **Authentication**, enter the following values, and select **Test Connection**. The following is a sample configuration.  
**Name:** ldap\_otp\_action  
**IP Address:** 192.8.xx.xx  
**Base DN:** DC=training, DC=lab

**Administrator:** Administrator@training.lab

**Password:** xxxxxx

18. Scroll down to the **Other Settings** section. Use the drop-down menu to select the following options.

**Server Logon Name Attribute** as **New** and type **userprincipalname**.

19. Use the drop-down menu to select **SSO Name Attribute** as **New** and type **userprincipalname**.

20. Enter "UserParameters" in the **OTP Secret** field and click **More**.

21. Enter the following Attributes.

**Attribute 1** = mail

**Attribute 2** = objectGUID

**Attribute 3** = immutableID

22. Click **OK**.

23. On the **Create Authentication Policy** page, set the Expression to **true** and click **Create**.

24. On the **Create Authentication Policylabel** page, click **Bind**, and click **Done**.

25. On the **Policy Binding** page, click **Bind**.

26. On the **Authentication policy** page, click **Close** and click **Done**.

Create OTP for OTP verification.

27. On the **Create Authentication Policy** screen, enter the following:

**Name:** auth\_pol\_ldap\_otp\_verify

28. Select the Action type as **LDAP** using the **Action Type** list.

29. In the **Action** field, click **Add** to create an action.

Create the third LDAP action to verify OTP.

30. In the **Create Authentication LDAP server** page, select the **Server IP** radio button, clear the checkbox next to **Authentication**, enter the following values, and select **Test Connection**. The following is a sample configuration.

**Name:** ldap\_verify\_otp

**IP Address:** 192.168.xx.xx

**Base DN:** DC=training, DC=lab

**Administrator:** Administrator@training.lab

**Password:** xxxxxx

31. Scroll down to the **Other Settings** section. Use the drop-down menu to select the following options.  
**Server Logon Name Attribute** as **New** and type **userprincipalname**.
32. Use the drop-down menu to select **SSO Name Attribute** as **New** and type **userprincipalname**.
33. Enter “UserParameters” in the **OTP Secret** field and click **More**.
34. Enter the following Attributes.  
**Attribute 1** = mail  
**Attribute 2** = objectGUID  
**Attribute 3** = immutableID
35. Click **OK**.
36. On the **Create Authentication Policy** page, set the Expression to **true** and click **Create**.
37. On the **Create Authentication Policylabel** page, click **Bind**, and click **Done**.
38. On the **Policy Binding** page, click **Bind**.
39. On the **Authentication policy** page, click **Close** and click **Done**.

You probably don't already have an Advanced Authentication Policy for your normal LDAP server. Change the Action Type to LDAP.

Select your normal LDAP server, which is the one that has Authentication enabled. Enter true as the expression. This uses Advanced policy instead of Classic Syntax. Click **Create**.

**Note:**

The authentication virtual server must be bound to the RFWebUI portal theme. Bind a server certificate to the server. The server IP '1.2.3.5' must have a corresponding FQDN that is, otpauth.server.com, for later use.

**Create login schema for second factor OTP**

1. Navigate to **Security > AAA-Application Traffic > Virtual Servers**. Select the virtual server to be edited.
2. Scroll down and select **1 Login Schema**.
3. Click **Add Binding**.
4. Under the **Policy Binding** section, click **Add** to add a policy.
5. On the **Create Authentication Login Schema Policy** page, enter the name of the policy, and click **Add**.
6. On the **Create Authentication Login Schema** page, enter the name of the login schema and click the pencil icon next to **noschema**.

7. Click the **LoginSchema** folder, select **DualAuthManageOTP.xml**, and then click **Select**.
8. Click **More** and scroll down.
9. In the **Password Credential Index** field, enter 1. This causes nFactor to save the user's password into authentication, authorization, and auditing Attribute #1, which can be used later in a Traffic Policy to single sign-on to StoreFront. If you don't do this, then NetScaler Gateway tries to use the Passcode to authenticate to StoreFront, which does not work.
10. Click **Create**.
11. In the **Rule** section, enter **True**. Click **Create**.
12. Click **Bind**.
13. Notice the two factors of authentication. Click **Close** and click **Done**.

### Traffic Policy for single sign-on

1. Navigate to **NetScaler Gateway > Policies > Traffic**
2. On the **Traffic Profiles** tab, click **Add**.
3. Enter a name for the traffic profile.
4. Scroll down, in the SSO Password Expression box, enter the following, and click **Create**. This is where we use the login schema password attribute specified for the second factor OTP.  
`AAA.USER.ATTRIBUTE(1)`
5. On the **Traffic Policies** tab, click **Add**.
6. In the **Name** field, enter a name for the traffic policy.
7. In the **Request Profile** field, select the traffic profile you created.
8. In the Expression box, enter **True**. If your NetScaler Gateway virtual server allows full VPN, change the expression to the following.  
`http.req.method.eq(post) || http.req.method.eq(get)&& false`
9. Click **Create**.
10. Bind the traffic policy to a VPN virtual server.
  - Navigate to **Security > AAA - Application Traffic > Authentication Profile**.
  - Configure the authentication profile by selecting the NetScaler Gateway virtual server and then click **OK**.
  - Navigate to **NetScaler Gateway > NetScaler Gateway Virtual Servers** and select the NetScaler Gateway virtual server. The **VPN Virtual Server** page appears.
  - In the **Policies** section, click the + icon.
  - Select the policy type as **Traffic** and click **Continue**.
  - Select the traffic policy and click **Bind**.
  - Click **Done**.

## Configure content switching policy for manage OTP

The following configurations are required if you are using Unified Gateway.

1. Navigate to **Traffic Management > Content Switching > Policies**. Select the content switching policy, right click, and select **Edit**.
2. Edit the expression to evaluate the following OR statement and click **OK**:

```
is_vpn_url || HTTP.REQ.URL.CONTAINS("manageotp")
```

## Configure Native OTP using the CLI

You must have the following information to configure the OTP device management page:

- IP assigned to authentication virtual server
- FQDN corresponding to the assigned IP
- Server certificate for authentication virtual server

**Note:**

Native OTP is a web-based solution only.

## To configure the OTP device registration and management page

Create authentication virtual server

```
1 add authentication vserver authvs SSL 1.2.3.5 443
2
3 bind authentication vserver authvs -portaltheme RFWebUI
4
5 bind ssl vserver authvs -certkeyname otpauthcert
```

**Note:**

The authentication virtual server must be bound to the RFWebUI portal theme. Bind a server certificate to the server. The server IP '1.2.3.5' must have a corresponding FQDN that is, otpauth.server.com, for later use.

## To create LDAP logon action

```
1 add authentication ldapAction <LDAP ACTION NAME> -serverIP <SERVER IP>
 - serverPort <SERVER PORT> -ldapBase <BASE> -ldapBindDn <AD USER> -
 ldapBindDnPassword <PASSWO> -ldapLoginName <USER FORMAT>
```

**Example:**



```
1 add authentication ldapAction ldap_logon_action -serverIP 1.2.3.4 -
 serverPort 636 -ldapBase "OU=Users,DC=server,DC=com" -ldapBindDn
 administrator@ctxnsdev.com -ldapBindDnPassword PASSWORD -
 ldapLoginName userprincipalname
```

### To add authentication policy for LDAP Logon

```
1 add authentication Policy auth_pol_ldap_logon -rule true -action
 ldap_logon_action
```

### To present UI via LoginSchema

Show user name field and password field to users upon logon

```
1 add authentication loginSchema lschema_single_auth_manage_otp -
 authenticationSchema "/nsconfig/loginschema/LoginSchema/
 SingleAuthManageOTP.xml"
```

### Display device registration and management page

We recommend two ways of displaying the device registration and management screen: URL or host name.

**Note:**

Currently, device registration and device management can be performed only using a browser.

- **Using URL**

When the URL contains '/manageotp'

```
- add authentication loginSchemaPolicy lpol_single_auth_manage_otp_by_ur
 -rule "http.req.cookie.value("NSC_TASS").contains("manageotp
 ")"-action lschema_single_auth_manage_otp
- bind authentication vserver authvs -policy lpol_single_auth_manage_otp
 -priority 10 -gotoPriorityExpression END
```

- **Using hostname**

When the host name is 'alt.server.com'

```
- add authentication loginSchemaPolicy lpol_single_auth_manage_otp_by_ho
 -rule "http.req.header("host").eq("alt.server.com)"-action
 lschema_single_auth_manage_otp
```

```
- bind authentication vserver authvs -policy lpol_single_auth_manage_otp
 -priority 20 -gotoPriorityExpression END
```

### To configure the user login page using the CLI

You must have the following information to configure the User Logon page:

- IP for a load balancing virtual server
- Corresponding FQDN for the load balancing virtual server
- Server certificate for the load balancing virtual server

```
1 bind ssl virtual server lbvs_https -certkeyname lbvs_server_cert
```

Back-end service in load balancing is represented as follows:

```
1 add service iis_backendsso_server_com 1.2.3.210 HTTP 80
2
3 bind lb vserver lbvs_https iis_backendsso_server_com
```

### To create OTP passcode validation action

```
1 add authentication ldapAction <LDAP ACTION NAME> -serverIP <SERVER IP>
 -serverPort <SERVER PORT> -ldapBase <BASE> -ldapBindDn <AD USER> -
 ldapBindDnPassword <PASSWORD> -ldapLoginName <USER FORMAT> -
 authentication DISABLED -OTPSecret <LDAP ATTRIBUTE>`
```

### Example:

```
1 add authentication ldapAction ldap_otp_action -serverIP 1.2.3.4 -
 serverPort 636 -ldapBase "OU=Users,DC=server,DC=com" -ldapBindDn
 administrator@ctxnsdev.com -ldapBindDnPassword PASSWORD -
 ldapLoginName userprincipalname -authentication DISABLED -OTPSecret
 userParameters
```

### Important:

The difference between the LDAP logon and OTP action is the need to disable the authentication and introduce a new parameter `OTPSecret`. Do not use the AD attribute value.

### To add authentication policy for OTP passcode validation

```
1 add authentication Policy auth_pol_otp_validation -rule true -action
 ldap_otp_action
```

**To present the two-factor authentication through LoginSchema** Add the UI for two factor authentication.

```

1 add authentication loginSchema lscheme_dual_factor -
 authenticationSchema "/nsconfig/loginschema/LoginSchema/DualAuth.xml"
2 add authentication loginSchemaPolicy lpol_dual_factor -rule true -
 action lscheme_dual_factor

```

**To create passcode validation factor via the policy label** Create a manage OTP flow policy label for the next factor (first factor is LDAP logon)

```

1 add authentication loginSchema lschema_noschema -authenticationSchema
 noschema
2 add authentication policylabel manage_otp_flow_label -loginSchema
 lschema_noschema

```

**To bind the OTP policy to the policy label**

```

1 bind authentication policylabel manage_otp_flow_label -policyName
 auth_pol_otp_validation -priority 10 -gotoPriorityExpression NEXT

```

**To bind the UI flow** Bind the LDAP logon followed by the OTP validation with the authentication virtual server.

```

1 bind authentication vserver authvs -policy auth_pol_ldap_logon -
 priority 10 -nextFactor manage_otp_flow_label -
 gotoPriorityExpression NEXT
2 bind authentication vserver authvs -policy lpol_dual_factor -priority
 30 -gotoPriorityExpression END

```

**To create a traffic policy for single sign-on and bind it to a VPN virtual server**


```

1 add vpn trafficAction vpn_html_pol http -userExpression aaa.user.
 attribute(1) -passwdExpression aaa.user.attribute(2)
2
3 add vpn trafficpolicy tf1 'http.req.method.eq\(post\)||http.req.method.
 eq\(get) && false' vpn_html_pol
4
5 bind vpn vserver vpn1 -policy tf1 -priority 10


```

## Register your device with NetScaler

1. On your browser, navigate to your NetScaler FQDN (first public facing IP), with a /manageotp suffix. For example, <https://otpauth.server.com/manageotp> Login with user credentials.
2. Click the + icon to add a device.

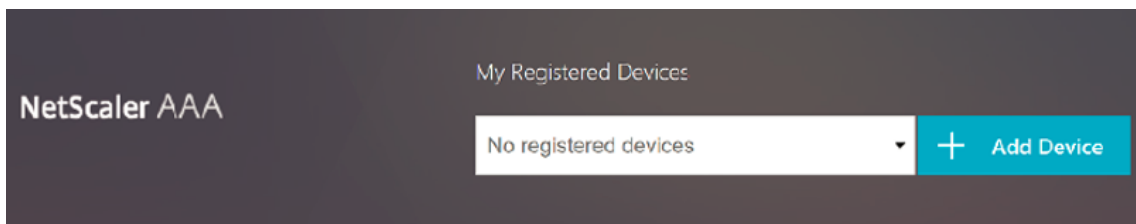


3. Enter a device name and press **Go**. A barcode appears on the screen.
4. Click **Begin Setup** and then click **Scan Barcode**.
5. Hover the device camera over the QR code. You can optionally enter the code.

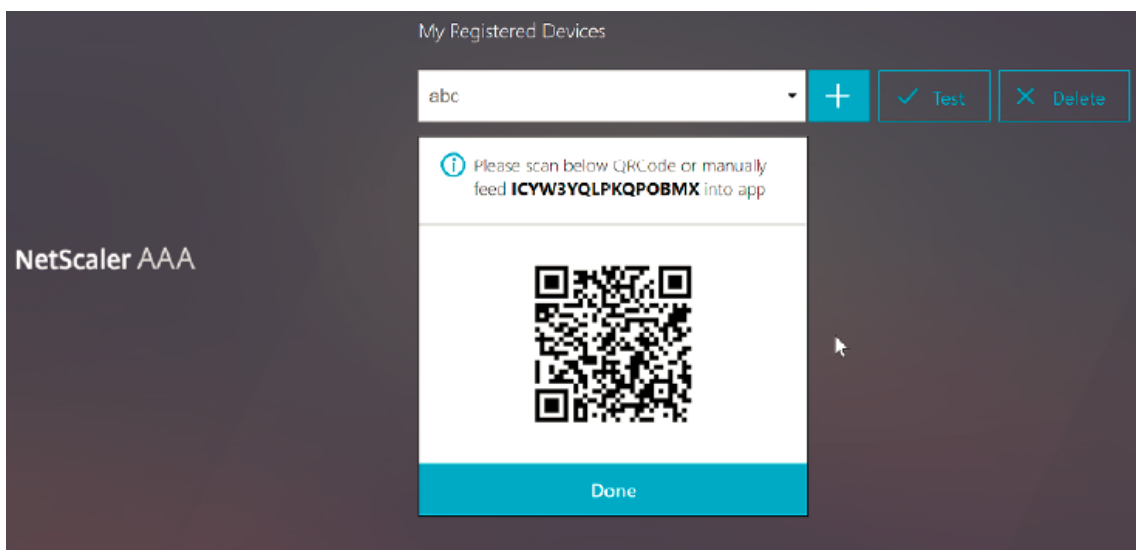

**Note:**

The displayed QR code is valid for 3 minutes.


6. Upon successful scan, you are presented with a 6 digit time sensitive code that can be used to log in.

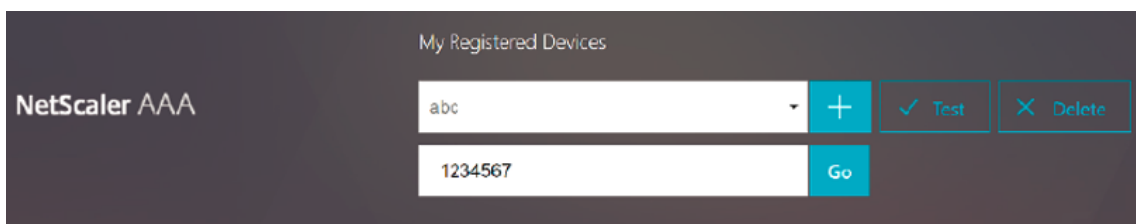

7. To test, click **Done** on the QR screen, then click the green check mark on the right.
8. Select your device from the drop-down menu and enter the code from Google Authenticator (must be blue, not red) and click **Go**.
9. Make sure to log out using the drop-down menu at the top right corner of the page.

## Log in to NetScaler using the OTP

1. Navigate to your first public-facing URL and enter your OTP from Google Authenticator to log on.
2. Authenticate to the NetScaler splash page.

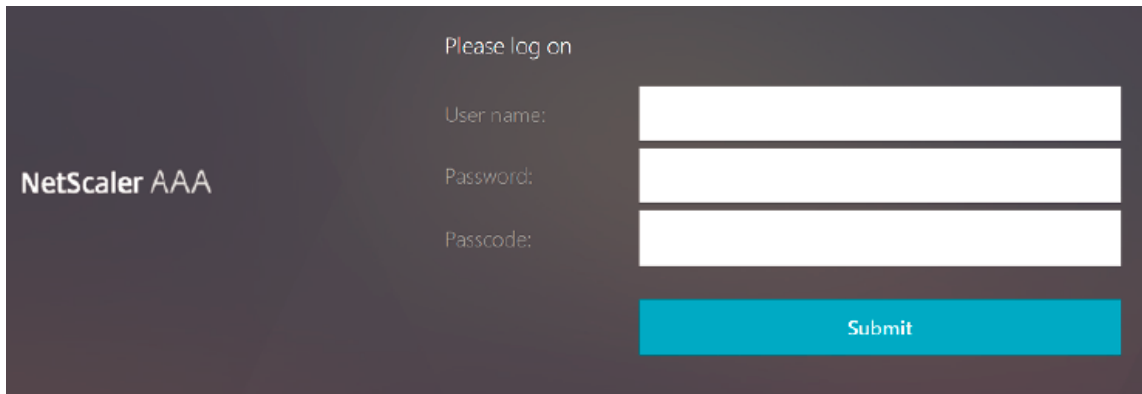The image shows a dark-themed login splash page for NetScaler AAA. On the left, the text "NetScaler AAA" is displayed in a light color. On the right, there is a "Please log on" section with three input fields: "User name:", "Password:", and "Passcode:". Below these fields is a prominent blue "Submit" button.

## Store OTP secret data in an encrypted format

October 13, 2023

Starting from NetScaler release 13.0 build 41.20, the OTP secret data can be stored in an encrypted format instead of plain text.

Previously, the NetScaler appliance stored OTP secret as a plain text in AD. Storing OTP secret in plain text poses a security threat as a malicious attacker or an admin might exploit the data by viewing the shared secret of other users.

The encryption parameter enables encryption of OTP secret in AD. When you register a new device with NetScaler version 13.0 build 41.20, and enable the encryption parameter, the OTP secret is stored in an encrypted format, by default. However, if the encryption parameter is disabled, the OTP secret is stored in plain text format.

For devices registered prior to 13.0 build 41.20, you must perform the following as a best practice:

1. Upgrade the 13.0 NetScaler appliance to 13.0 build 41.20.
2. Enable the encryption parameter on the appliance.
3. Use the OTP secret migration tool to migrate OTP secret data from plain text format to encrypted format.

For details about the OTP secret migration tool, see [OTP encryption tool](#).

**Important**

Citrix recommends you as an admin to ensure the following criteria is met:

- A new certificate must be configured to encrypt OTP secrets if you are not using KBA as part of self-service password reset feature.
  - To bind the certificate to VPN global, you can use the following command:
 

```
bind vpn global -userDataEncryptionKey <certificate name>
```
- If you are already using a certificate to encrypt KBA, you can use the same certificate to encrypt OTP secrets.
- New OTP registrations always happen with the last bound certificate, as it gets the highest priority. In the example shown below, if you bind a certificate (cert1) and then bind another certificate (cert2), then cert2 is considered for device registration. If the certificate required for device registration is missing, the end user login fails.

```
1 bind vpn global -userDataEncryptionKey otp-cert1
2 bind vpn global -userDataEncryptionKey otp-cert2
```

In the following example, the `cert2` certificate is displayed as the first entry on the output of the `show vpn global` command:

```
1 show vpn global
2
3 Portal Theme: RfWebUI
4 Userdata Encryption Certificate: cert2
5 Userdata Encryption Certificate: cert1
6 1) VPN Clientless Access Policy Name:
 ns_cvpn_owa_policy Priority: 95000
7 Bindpoint: REQ_DEFAULT
8 2) VPN Clientless Access Policy Name: ns_cvpn_sp_policy
 Priority: 96000
9 Bindpoint: REQ_DEFAULT
10 3) VPN Clientless Access Policy Name:
 ns_cvpn_sp2013_policy Priority: 97000
11 Bindpoint: REQ_DEFAULT
12 4) VPN Clientless Access Policy Name: ns_cvpn_default_policy
 Priority: 100000
13 Bindpoint: REQ_DEFAULT
```

**To enable OTP encryption data by using the CLI**

At the command prompt, type:

```
set aaa otpparameter [-encryption (ON | OFF)]
```

Example

```
set aaa otpparameter -encryption ON
```

### To configure the OTP encryption by using the GUI

1. Navigate to **Security > AAA –Application Traffic** and click **Change authentication AAA OTP Parameter** under **Authentication Settings** section.
2. On the **Configure AAA OTP Parameter** page, select **OTP Secret encryption**.
3. Click OK.

### Configuring the number of end-user devices for receiving OTP notifications

Administrators can now configure the number of devices that an end user can register to receive OTP notification or authentication.

### To configure the number of devices in OTP by using the CLI

At the command prompt, type:

```
set aaa otpparameter [-maxOTPDevices <positive_integer>]
```

Example

```
set aaa otpparameter -maxOTPDevices 4
```

### To configure the number of devices by using the GUI

1. Navigate to **Security > AAA –Application Traffic**.
2. In the **Authentication Settings** section, click **Change authentication AAA OTP Parameter**.
3. On the **Configure AAA OTP Parameter** page, enter the value for **Max OTP device Configured**.
4. Click **OK**.

## OTP encryption tool

November 7, 2023

Starting from NetScaler release 13.0 build 41.20, the OTP secret data is stored in an encrypted format instead of plain text for enhanced security. Storing of an OTP secret in encrypted format is automatic and does not require manual intervention.

Previously, the NetScaler appliance stored an OTP secret as a plain text in the active directory. Storing an OTP secret in a plain text format posed a security threat as a malicious attacker or an admin can exploit the data by viewing the shared secret of other users.

The OTP encryption tool provides the following advantages:

- Does not result in any data loss even if you have old devices that are using an old format (plain text).
- The backward compatibility support with an old NetScaler Gateway version, helps to integrate and support the existing devices, along with the new device.
- The OTP encryption tool helps admins migrate all the OTP secret data of all users at once.

#### Note

The OTP encryption tool does not encrypt or decrypt KBA registration or Email registration data.

### Uses of OTP encryption tool

The OTP encryption tool can be used for the following:

- **Encryption.** Store the OTP secret in encrypted format. The tool extracts the OTP data of the devices registered with NetScaler, and then converts the OTP data in plain text format to encrypted format.
- **Decryption.** Revert the OTP secret to the plain text format.
- **Update certificates.** Administrators can update the certificate to a new certificate at any time. Admins can use the tool to enter the new certificate and update all the entries with the new certificate data. The certificate path must either be an absolute path or a relative path.

#### Important

- You must enable the encryption parameter in the NetScaler appliance to use the OTP encryption tool.
- For devices registered with NetScaler before build 41.20, you must perform the following:
  - Upgrade the 13.0 NetScaler appliance to 13.0 build 41.20.
  - Enable the encryption parameter on the appliance.
  - Use the OTP Secret migration tool to migrate OTP secret data from plain text format to encrypted format.
- The OTP encryption tool supports only single-valued user attributes. It does not support multi-valued user attributes.

### OTP secret data in plain text format

Example:



```
#@devicename=<16 or more bytes>&tag=<64bytes>&,</pre>

```

As you can see, the starting pattern for an old format is always “#@” and an ending pattern is always “&”. All the data between “devicename=” and end pattern, constitutes user OTP data.

## OTP secret data in encrypted format

The new encrypted format of OTP data is of the following format:

Example:

```
1 {
2
3 "otpdata" : {
4
5 "devices" : {
6
7 "device1" : "value1" ,
8 "device2" : "value2" , ...
9 }
10 }
11
12
13 }
```

Where, value1 is a base64 encoded value of KID + IV + cipher data

Cipher data is structured as the following:

```
1 {
2
3 secret:<16-byte secret>,
4 tag : <64-byte tag value>
5 alg: <algorithm used> (not mandatory, default is sha1, specify
6 the algorithm only if it is not default)
7 }
```

- In “devices”, you have value against each name. The value is base64encode(KID).base64encode(IV).base64encode(cipher data).
- KID is the key ID value that is used to identify the certificate used for OTP secret data encryption. The key ID is useful especially when multiple certificates are used for the OTP secret data encryption.
- In standard AES algorithms, IV is always sent as first 16 or 32 bytes of cipher data. You can follow the same model.
- IV differs for each device though key remains the same.

### Note:

The encrypted format of the OTP data is stored in a user attribute AD.

## OTP encryption tool setup

### Note

To run the OTP encryption tool, Citrix recommends you to use an alternative platform with Python environment instead of the NetScaler appliance.

The OTP encryption tool is located in the directory `\var\netscaler\otptool`. You must download the code from the NetScaler source and run the tool with the required AD credentials.

- Prerequisites for using the OTP encryption tool:
  - Install python 3.5 or higher version in the environment where this tool is run.
  - Install pip3 or later versions.
- Run the following commands:
  - **pip install -r requirements.txt**. Automatically installs the requirements.
  - **python main.py**. Invokes the OTP encryption tool. You must provide the required arguments as per your need for the migration of OTP secret data.
- The tool can be located at `\var\netscaler\otptool` from a shell prompt.
- Run the tool with the required AD credentials.

## OTP encryption tool interface

The following figure displays a sample OTP encryption tool interface. The interface contains all the arguments that must be defined for encryption/decryption/certificate upgrade. Also, a brief description of each argument is captured.

### OPERATION argument

You must define the OPERATION argument to use the OTP encryption tool for encryption, decryption, or certificate upgrade.

The following table summarizes some of the scenarios in which you can use the OTP encryption tool and the corresponding OPERATION argument values.

---

| Scenario                                                                  | Operation argument value and other arguments                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Convert plaintext OTP secret to encrypted format in the same attribute    | Enter the OPERATION argument value as 0 and provide the same value for the source and target attribute. <b>Example:</b> <code>python3 main.py -Host 192.0.2.1 -Port 636 -username ldapbind_user@aaa.local -search_base cn=users,dc=aaa,dc=local -source_attribute unixhomedirectory -target_attribute unixhomedirectory -operation 0 -cert_path aaatm_wild_all.cert</code>        |
| Convert plaintext OTP secret to encrypted format in a different attribute | Enter the OPERATION argument value as 0 and provide the corresponding values for the source and target attribute. <b>Example:</b> <code>python3 main.py -Host 192.0.2.1 -Port 636 -username ldapbind_user@aaa.local -search_base cn=users,dc=aaa,dc=local -source_attribute unixhomedirectory -target_attribute userparameters -operation 0 -cert_path aaatm_wild_all.cert</code> |
| Convert the encrypted entries back to plaintext                           | Enter the OPERATION argument value as 1 and provide the corresponding values for the source and target attribute. <b>Example:</b> <code>python3 main.py -Host 192.0.2.1 -Port 636 -username ldapbind_user@aaa.local -search_base cn=users,dc=aaa,dc=local -source_attribute unixhomedirectory -target_attribute userparameters -operation 1 -cert_path aaatm_wild_all.cert</code> |

| Scenario                                    | Operation argument value and other arguments                                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Update the certificate to a new certificate | Enter the OPERATION argument value as 2 and provide all the previous certificate and the new certificate details in the corresponding arguments. <b>Example:</b> <code>python3 main.py -Host 192.0.2.1 -Port 636 -username ldapbind_user@aaa.local -search_base cn=users,dc=aaa,dc=local -source_attribute unixhomedirectory -operation 2 -cert_path aaatm_wild_all.cert -new_cert_path aaatm_wild_all_new.cert</code> |

### CERT\_PATH argument

The CERT\_PATH argument is a file containing the certificate which is used in the NetScaler for encrypting the data. The user must provide this argument for all the three operations namely **Encryption, Decryption, and Update certificates**.

The CERT\_PATH argument file must contain both the certificate and the associated private key in the PEM or CERT format (pfx is non supported).

For example, if the certificate.cert and certificate.key files correspond to the certificate file and its private key, in a Unix like system the following command creates the file `certkey.merged` that can be used as the value for the cert\_path flag.

```
1 $ cat certificate.cert certificate.key > certkey.merged
2 $
```

#### Points to note about the certificate

- The user must provide the same certificate which is bound globally in the NetScaler appliance for user data encryption.
- The certificate must contain the Base64 encoded public certificate and its corresponding RSA private key in the same file.
- The format of the certificate has to be either PEM or CERT. The certificate must adhere to X509 format.
- Password protected certificate format and .pfx file are not accepted by this tool. The user must convert the PFX certificates to .cert before providing the certificates to the tool.

## SEARCH\_FILTER argument

The SEARCH\_FILTER argument is used to filter the Active Directory domains or users.

### Examples:

- `-search_filter "(sAMAccountName=OTP*)"`: Filters users whose samAccountNames (user logon names) start with “OTP”.
- `-search_filter "(objectCategory=person)"`: Filters the object category of type person.
- `-search_file "(objectclass=*)"`: Filters all the objects.

## Enabling encryption option in the NetScaler appliance

To encrypt the plain text format, you must enable the encryption option in the NetScaler appliance.

To enable OTP encryption data by using the CLI, at the command prompt, type:

```
set aaa otpparameter [-encryption (ON | OFF)]
```

Example:

```
set aaa otpparameter -encryption ON
```

## OTP encryption tool use cases

The OTP encryption tool can be used for the following use cases.

### Register new devices with NetScaler appliance version 13.0 build 41.20

When you register your new device with NetScaler appliance version 13.0 build 41.x, and if the encryption option is enabled, then the OTP data is saved in an encrypted format. You can avoid manual intervention.

If the encryption option is not enabled, the OTP data is stored in the plain text format.

### Migrate OTP data for the devices registered previous to 13.0 build 41.20

You must perform the following to encrypt the OTP secret data for the devices that are registered with the NetScaler appliance before 13.0 build 41.20.

- Use the conversion tool to migrate OTP data from plain text format to encrypted format.
- Enable the “Encryption” parameter on the NetScaler appliance.

- To enable the encryption option by using the CLI:
  - \* `set aaa otpparameter -encryption ON`
- To enable encryption options by using the GUI:
  - \* Navigate to **Security > AAA –Application Traffic** and click **Change authentication AAA OTP Parameter** under **Authentication Settings** section.
  - \* On the **Configure AAA OTP Parameter** page, select **OTP Secret encryption**, and click **OK**.
- Log in with the valid AD credentials.
- If it is required, register more devices (optional).

### **Migrate encrypted data from old certificate to new certificate**

If admins want to update the certificate to a new certificate, the tool provides an option to update the new certificate data entries.

To update the certificate to a new certificate by using the CLI

At the command prompt, type:

Example:

```
python3 main.py -Host 192.0.2.1 -Port 636 -username ldapbind_user@aaa.local -search_base cn=users,dc=aaa,dc=local -source_attribute unixhomedirectory -target_attribute userparameters -operation 2 -cert_path aaatm_wild_all.cert -new_cert_path aaatm_wild_all_new.cert
```

#### **Note**

- The certificates must have both private and public keys.
- Currently, the functionality is provided only for OTP.

### **Re-encrypt or migrate to new certificate for devices registered after the appliance is upgraded to 13.0 build 41.20 with encryption**

Admin can use the tool on the devices that are already encrypted with a certificate, and can update that certificate with a new certificate.

### **Convert encrypted data back to plain text format**

Admin can decrypt the OTP secret and revert them to the original plain text format. The OTP encryption tool scans through all the users for an OTP secret in encrypted format and converts them to decrypted format.

To update the certificate to a new certificate by using the CLI

At the command prompt, type:

Example:

```
1 python3 main.py -Host 192.0.2.1 -Port 636 -username ldapbind_user@aaa
 .local -search_base cn=users,dc=aaa,dc=local -source_attribute
 unixhomedirectory -target_attribute userparameters -operation 1
```

## Troubleshooting

The tool generates the following log files.

- **app.log.** Logs all the major steps of execution and information about errors, warnings, and failures.
- **unmodified\_users.txt.** Contains a list of User DNs that was not upgraded from plain text to encrypted format. These logs are generated to an error in format or might be due to some other reason.

## Recommended native OTP configurations for device registration

May 13, 2024

This section describes the native OTP configurations that you can perform for device registration in the following scenarios:

- New users who are registering their devices
- Registered users who have lost their devices

### Pre-requisite


Configure the authentication virtual server using the NetScaler CLI.

```
1 add authentication vserver authvs_otp SSL 1.2.3.5 443
2
3 bind authentication vserver authvs_otp -portaltheme RFWebUI
4
5 bind ssl vserver authvs_otp -certkeyname otpauthcert
```

## Native OTP configurations for enhanced OTP security


- Approach 1: Client IP address restriction

In this approach, the validity of the user access is evaluated using the client source IP address. The user must be present in the office network or the branch office to register or remove their device. User requests for device registration from outside the office subnets are not approved.

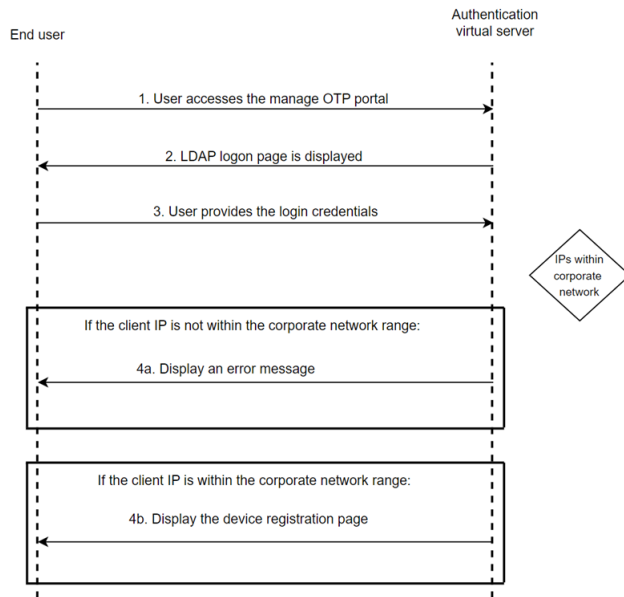

- Approach 2: User group membership based restriction


In this approach, the validity of the user's access is evaluated based on their membership of the AD group. A user is added to a special group whenever a new registration is required or when the user has lost their mobile device.

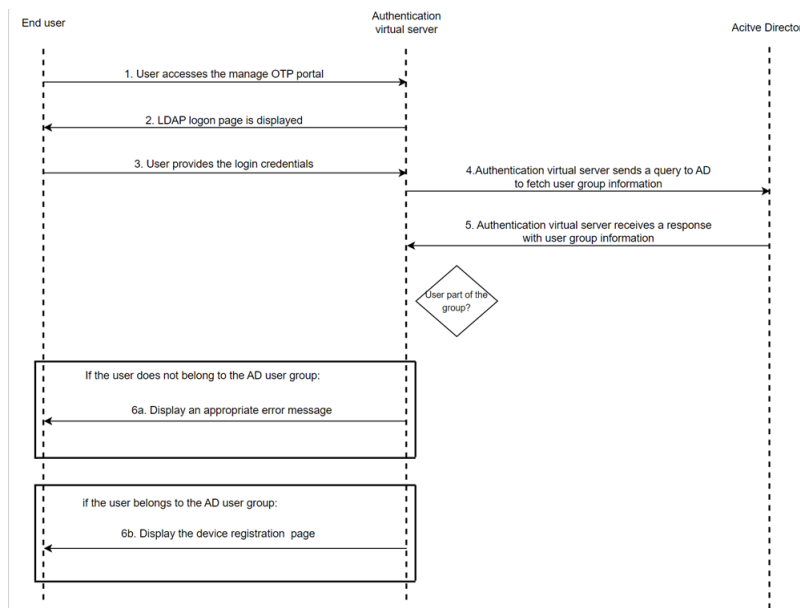



- Approach 3: Introduce an additional factor along with LDAP authentication

In this approach, an additional validation factor is configured along for authentication. In this example, LDAP and RADIUS authentication methods are used for configuration.

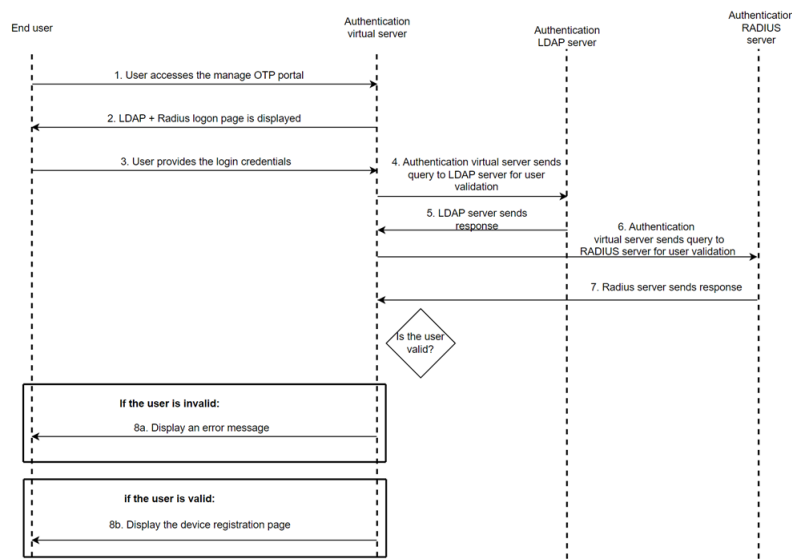

### Approach 1: Client IP address restriction

1. Configure the first factor. The first factor determines whether the client device is accessing the device registration page or attempting the native OTP multi-factor logon.

- Create an authentication policy for the device registration request.

```
add authentication Policy check_request_for_manageotp -rule "
HTTP.REQ.COOKIE.VALUE(\"NSC_TASS\").EQ(\"manageotp\")"-action
NO_AUTHN
```

2. This factor determines whether the access is legitimate or not. NetScaler verifies if the client IP address is within the range of the configured corporate network IP addresses.

- Create a login schema for the device registration flow.

```
add authentication loginSchema lschema_single_manage_otp
-authenticationSchema "/nsconfig/loginschema/LoginSchema/
SingleAuthManageOTP.xml"
```

- Create a device registration flow policy label for the second factor.

```
add authentication policylabel otp_manage_flow -loginSchema
lschema_single_manage_otp
```

- Create an LDAP action for user validation.

```
add authentication ldapAction ldap_otp_action_for_manageotp
-serverIP <LDAPServerIP> -ldapBase <LdapBase> -ldapBindDn
<LdapAdminUser> -ldapBindDnPassword <LdapAdminPassword>
-ldapLoginName samAccountName -groupAttrName memberOF -
subAttributeName CN
```

- Create an authentication policy for user validation. The rule is based on the end user's office network.

```
add authentication Policy ldap_otp_policy_for_manageotp -rule
"CLIENT.IP.SRC.APPLY_MASK(255.255.255.0).EQ(10.140.200.0)"-
action ldap_otp_action_for_manageotp
```

3. Configure the third factor. Based on the policy evaluation from the previous factor, the user is either allowed to access the device registration page or denied access with an appropriate error message.

- Create an authentication policy for an invalid user access.

```
add authentication Policy noauthnotallowed -rule true -action
NO_AUTHN
```

- Create a login schema for an invalid user access. You can customise the login schema based on your requirement for displaying the relevant message.

```
add authentication loginSchema notallowed -authenticationSchema
"/nsconfig/loginschema/LoginSchema/InvalidFlow.xml"
```

- Create a policy label for the invalid user access and add a login schema.

```
add authentication policylabel notallowed -loginSchema notallowed
```

- Bind the policy to the `otp_manage_flow` policy label to complete the invalid user access flow.

```
bind authentication policylabel otp_manage_flow -policyName
noauthnotallowed -priority 1000 -gotoPriorityExpression NEXT
-nextFactor notallowed
```

4. Configure the fourth factor. In this factor, the user can add or remove their OTP device in the device registration page.

- Create an LDAP action for valid user access, The user can register the devices in this factor.

```
add authentication ldapAction ldap_otp_register_action -
serverIP <LDAPServerIP> -ldapBase <LdapBase> -ldapBindDn
<LdapAdminUser> -ldapBindDnPassword <LdapAdminPassword>
```

```
-ldapLoginName samAccountName -authentication DISABLED -
OTPSecret userParameters
```

- Create an LDAP policy for valid user access.

```
add authentication Policy ldap_otp_register_policy -rule true
-action ldap_otp_register_action
```

- Add an authentication policy label for valid user access.

```
1 add authentication loginSchema lschema_noschema -
authenticationSchema noschema
2
3 add authentication policylabel otp_manage_register_factor -
loginSchema lschema_noschema
```

- Bind the LDAP policy to the label for valid user access.

```
bind authentication policylabel otp_manage_register_factor -
policyName ldap_otp_register_policy -priority 10
```

- Bind the policy to the previous factor.


```
bind authentication policylabel otp_manage_flow -policyName
ldap_otp_policy_for_manageotp -priority 1 -gotoPriorityExpression
NEXT -nextFactor otp_manage_register_factor
```


5. Bind the device registration flow to the authentication virtual server to complete the flow.

```
bind authentication vserver authvs_otp -policy check_request_for_manageotp
-priority 10 -nextFactor otp_manage_flow -gotoPriorityExpression
NEXT
```



### Examples:

- A user accesses the device registration page from outside the office network and therefore denied access.

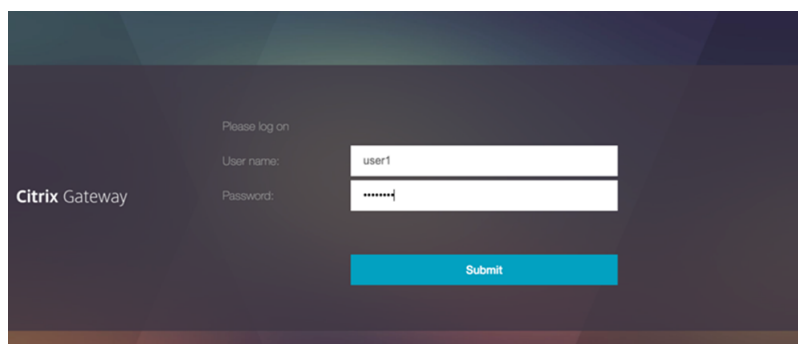

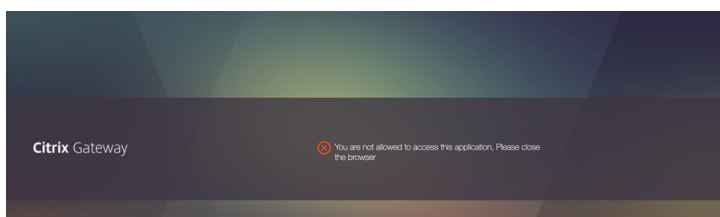

- A user accesses the device registration page from the office network and therefore allowed access.

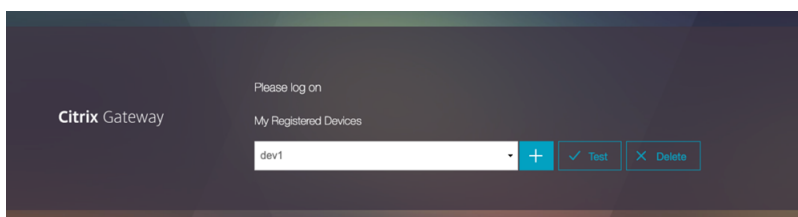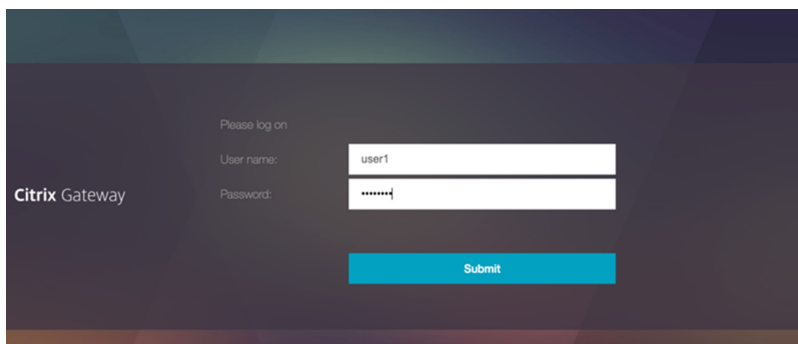

Use the following login schema to display an appropriate error message:

- **InvalidFlow.xml**

```

1 <AuthenticateResponse
2 xmlns="http://citrix.com/authentication/response/1">
3 <Status>success</Status>
4 <Result>more-info</Result>
5 <StateContext/>
6 <AuthenticationRequirements>
7 <PostBack>/nf/auth/doAuthentication.do</PostBack>
8 <CancelPostBack>/nf/auth/doLogoff.do</CancelPostBack>
9 <CancelButtonText>Cancel</CancelButtonText>
10 <Requirements>
11 <Req<AuthenticateResponse
12 xmlns="http://citrix.com/authentication/response/1">
13 <Status>success</Status>
14 <Result>more-info</Result>
15 <StateContext/>
16 <AuthenticationRequirements>
17 <PostBack>/nf/auth/doAuthentication.do</PostBack>
18 <CancelPostBack>/nf/auth/doLogoff.do</CancelPostBack>
19 <CancelButtonText>Cancel</CancelButtonText>
20 <Requirements>

```

```

21 <Requirements>
22 <Requirement>
23 <Credential>
24 <Type>none</Type>
25 </Credential>
26 <Label>
27 <Text>You are not allowed to access this
 application, Please close the browser</
 Text>
28 <Type>error</Type>
29 </Label>
30 <Input/>
31 </Requirement>
32 <Requirement>
33 <Credential>
34 <ID>error_okBtn</ID>
35 <Type>error_okBtn</Type>
36 </Credential>
37 <Label>
38 <Type>none</Type>
39 </Label>
40 </Requirement>
41 </Requirements>
42 </Requirements>
43 </AuthenticationRequirements>
44 </AuthenticateResponse>

```

## Approach 2: User group membership based restriction

1. Configure the first factor. This factor determines whether the client device is accessing the device registration page or attempting a native OTP multi-factor login.

- Configure an authentication policy for the device registration request.

```

add authentication Policy check_request_for_manageotp -rule "
HTTP.REQ.COOKIE.VALUE(\"NSC_TASS\").EQ(\"manageotp\")"-action
NO_AUTHN

```

2. Configure the second factor. This factor determines if the access is legitimate. NetScaler fetches the group information from the LDAP server and verifies if the user belongs to a specific group configured for device registration. In the following example, the “allowmanageotp” group is used.

- Create a login schema for the device registration flow.

```

add authentication loginSchema lschema_single_manage_otp
-authenticationSchema "/nsconfig/loginschema/LoginSchema/
SingleAuthManageOTP.xml"

```

- Create a device registration flow policy label for the second factor.

```
add authentication policylabel otp_manage_flow -loginSchema
lschema_single_manage_otp
```

- Create an LDAP action for user validation.

```
add authentication ldapAction ldap_otp_action_for_manageotp
-serverIP <LDAPServerIP> -ldapBase <LdapBase> -ldapBindDn
<LdapAdminUser> -ldapBindDnPassword <LdapAdminPassword>
-ldapLoginName samAccountName -groupAttrName memberOF -
subAttributeName CN
```

- Create an authentication policy for user validation. The rule is based on the end user's office network.

```
add authentication Policy ldap_otp_policy_for_manageotp -
rule "AAA.USER.GROUPS.CONTAINS(\"allowedmanageotp\")"-action
ldap_otp_action_for_manageotp
```

3. Configure the third factor. Based on the policy evaluation from the previous factor, NetScaler verifies the group membership based on the LDAP server's response. If a valid group membership is found, then the user is allowed to access the device registration page or is denied access with an appropriate error message.

- Create an authentication policy for invalid user access.

```
add authentication Policy noauthnotallowed -rule true -action
NO_AUTHN
```

- Create a login schema for invalid user access. You can customise the login schema based on your requirement for displaying the relevant message.

```
add authentication loginSchema notallowed -authenticationSchema
"/nsconfig/loginschema/LoginSchema/InvalidFlow.xml"
```

- Create a policy label for invalid user access and add the login schema.

```
add authentication policylabel notallowed -loginSchema notallowed
```

- Bind the policy to the `otp_manage_flow` policy label to complete the invalid user access flow.

```
bind authentication policylabel otp_manage_flow -policyName
noauthnotallowed -priority 1000 -gotoPriorityExpression NEXT
-nextFactor notallowed
```

4. Configure the fourth factor. This factor determines where the user can add or remove their OTP device on the device registration page. Based on the policy evaluation of the previous factor, the actual user device registration happens in this factor.

- Create an LDAP action for valid user access. The user registers their device in this factor.

```
add authentication ldapAction ldap_otp_register_action -
serverIP <LDAPServerIP> -ldapBase <LdapBase> -ldapBindDn
 <LdapAdminUser> -ldapBindDnPassword <LdapAdminPassword>
 -ldapLoginName samAccountName -authentication DISABLED -
 OTPSecret userParameters
```

- Create an LDAP policy for valid user access.

```
add authentication Policy ldap_otp_register_policy -rule true
 -action ldap_otp_register_action
```

- Add an authentication policy label for valid user access.

```
1 add authentication loginSchema lschema_noschema -
 authenticationSchema noschema
2
3 add authentication policylabel otp_manage_register_factor -
 loginSchema lschema_noschema
```

- Bind the LDAP policy to the policy label for valid user access.

```
bind authentication policylabel otp_manage_register_factor -
 policyName1 ldap_otp_register_policy -priority 10
```

- Bind the policy to the previous factor.

```
bind authentication policylabel otp_manage_flow -policyName
 ldap_otp_policy_for_manageotp -priority 1 -gotoPriorityExpression
 NEXT -nextFactor otp_manage_register_factor
```



- Bind the device registration flow to the authentication virtual server to complete the overall flow.

```
bind authentication vserver authvs_otp -policy check_request_for_manage
 -priority 10 -nextFactor otp_manage_flow -gotoPriorityExpression
 NEXT
```

### Example:

A user who is outside of the allowed device registration group attempts to access the device registration page through the office network. The user is denied access to the portal.

For details about the login schema to be used for this configuration, refer to Approach 1: Client IP address restriction.

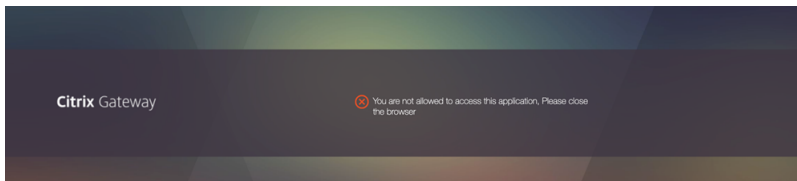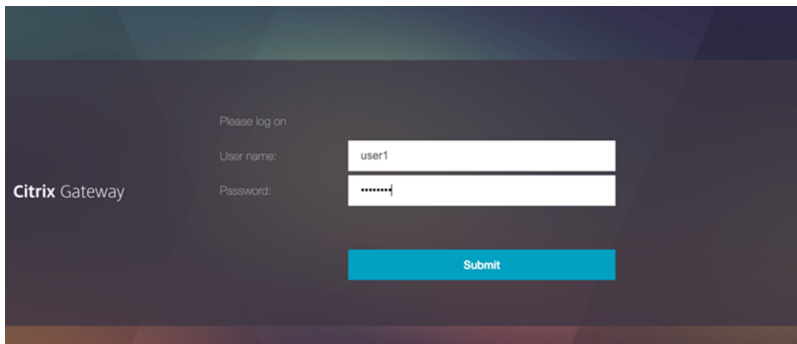

### Approach 3: Introduce an additional factor along with LDAP authentication

1. Configure the first factor. This factor determines whether the user is accessing the device registration page or attempting a native OTP multifactor logon.

- Authentication policy for the device registration request.

```
add authentication Policy check_request_for_manageotp -rule "
HTTP.REQ.COOKIE.VALUE(\"NSC_TASS\").EQ(\"manageotp\")"-action
NO_AUTH
```

2. Configure the second factor. In this factor, NetScaler verifies if the client IP address belongs to the office network.

In this example, the `DualAuthManageOTP.xml` login schema is used. This login schema requests the user for the LDAP and RADIUS credentials.

- Create a login schema for the device registration flow.

```
1 `add authentication loginSchema dualauth_manageOTP -
authenticationSchema "/nsconfig/loginschema/LoginSchema/
DualAuthManageOTP.xml"`
```

- Add a policy label for the device registration flow.

```
add authentication policylabel otp_manage_flow -loginSchema
dualauth_manageOTP
```

- Add an LDAP authentication action for user validation.



```
add authentication ldapAction ldap_otp_action_for_manageotp
-serverIP <LDAPServerIP> -ldapBase <LdapBase> -ldapBindDn
<LdapAdminUser> -ldapBindDnPassword <LdapAdminPassword> -
ldapLoginName samAccountName
```

- Add an LDAP authentication policy for user validation.

```
add authentication Policy ldap_pol_for_manageOTP -rule true -
action ldap_action_for_manageOTP
```

3. Configure the third factor, an additional factor after LDAP, to further secure access to the device registration page. In this factor, the RADIUS policy is added to verify the user identity with the RADIUS server. If the user's client IP address matches the office subnet range, then the user is allowed to access the device registration page. If not, the user is denied access with an appropriate error message. Based on the policy evaluation of the previous factor, the actual user device registration happens in this factor.

- Add the `noschema` login schema.

```
add authentication loginSchema lschema_noschema -authenticationSchema
noschema
```

- Add a policy label for RADIUS authentication.

```
add authentication policylabel radius_label_for_mangeOTP -
loginSchema lschema_noschema
```

- Add an authentication policy for RADIUS authentication.

```
add authentication Policy rad_pol_for_manageOTP -rule true -
action rad_act_for_manageOTP
```

- Add an authentication action for RADIUS authentication.

```
add authentication radiusAction rad_act_for_manageOTP -serverIP
<RADIUS Server IP> -radKey <RADIUSKEY>
```

- Bind the RADIUS factor to the previous policy label.

```
bind authentication policylabel otp_manage_flow -policyName
ldap_pol_for_manageOTP -priority 10 -gotoPriorityExpression
NEXT -nextFactor radius_label_for_mangeOTP
```

4. Configure the fourth factor. This factor is where the user can add or remove their OTP device on the device registration page.

- Add a policy label for device registration.

```
add authentication policylabel ldap_label_for_mangeOTP_registration
-loginSchema lschema_noschema
```

- Add an authentication LDAP action for OTP device registration.

```
add authentication ldapAction ldap_action_for_manageOTP_registration
 -serverIP <LDAPServerIP> -ldapBase <LdapBase> -ldapBindDn
 <LdapAdminUser> -ldapBindDnPassword <LdapAdminPassword>
 -ldapLoginName samAccountName -authentication DISABLED -
 OTPSecret userParameters
```

- Add an authentication policy for OTP device registration.

```
add authentication Policy ldap_pol_for_manageOTP_registration
 -rule true -action ldap_action_for_manageOTP_registration
```

- Bind the authentication policy to the policy label.

```
bind authentication policylabel ldap_label_for_manageOTP_registration
 -policyName ldap_pol_for_manageOTP_registration -priority 10
```

- Bind the policy label to the previous factor.


```
bind authentication policylabel radius_label_for_mangeOTP -
 policyName rad_pol_for_manageOTP -priority 1 -gotoPriorityExpression
 NEXT -nextFactor ldap_label_for_mangeOTP_registration
```

5. Complete the nFactor flow by binding the first factor to the authentication virtual server.


```
bind authentication vserver authvs_otp -policy check_OTP_manageRequest
 -priority 10 -nextFactor otp_manage_flow
```

### Examples:

- A user accesses the device registration page and is prompted to provide the LDAP credentials and the RADIUS password.

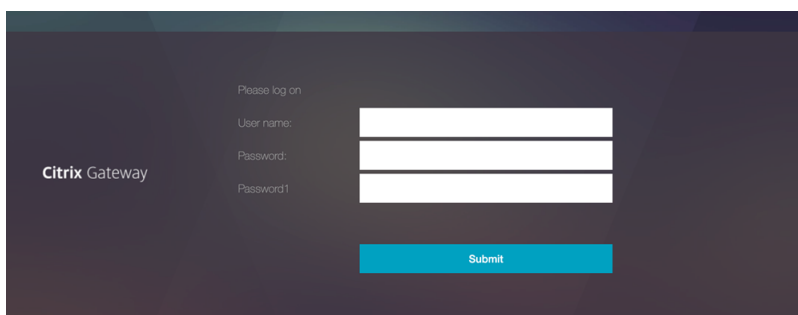

- A user provides the required fields and therefore is allowed to access the device registration page.

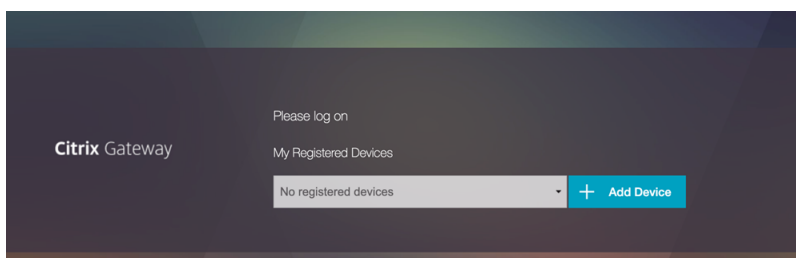

Use the following login schema in this configuration where an additional authentication method is introduced after AD based authentication:

- **DualAuthManageOTP.xml**

```

1 <?xml version="1.0" encoding="UTF-8" standalone="yes"?>
2 <AuthenticateResponse
3 xmlns="http://citrix.com/authentication/response/1">
4 <Status>success</Status>
5 <Result>more-info</Result>
6 <StateContext/>
7 <AuthenticationRequirements>
8 <PostBack>/nf/auth/doAuthentication.do</PostBack>
9 <CancelPostBack>/nf/auth/doLogoff.do</CancelPostBack>
10 <CancelButtonText>Cancel</CancelButtonText>
11 <Requirements>
12 <Requirement>
13 <Credential>
14 <Type>none</Type>
15 </Credential>
16 <Label>
17 <Text>dualauth_please_log_on</Text>
18 <Type>nsg-login-label</Type>
19 </Label>
20 <Input/>
21 </Requirement>
22 <Requirement>
23 <Credential>
24 <ID>login</ID>
25 <SaveID>login</SaveID>
26 <Type>username</Type>
27 </Credential>
28 <Label>
29 <Text>dualauth_user_name</Text>
30 <Type>nsg-login-label</Type>
31 </Label>
32 <Input>
33 <Text>
34 <ReadOnly>false</ReadOnly>
35 <InitialValue/>
36 <Constraint>.+</Constraint>
37 </Text>
38 </Input>
39 </Requirement>

```

```
40 <Requirement>
41 <Credential>
42 <ID>passwd</ID>
43 <SaveID>passwd</SaveID>
44 <Type>password</Type>
45 </Credential>
46 <Label>
47 <Text>dualauth_password</Text>
48 <Type>nsg-login-label</Type>
49 </Label>
50 <Input>
51 <Text>
52 <Secret>true</Secret>
53 <Constraint>.+</Constraint>
54 </Text>
55 </Input>
56 </Requirement>
57 <Requirement>
58 <Credential>
59 <ID>passwd1</ID>
60 <SaveID>passwd1</SaveID>
61 <Type>password</Type>
62 </Credential>
63 <Label>
64 <Text>Password1</Text>
65 <Type>nsg-login-label</Type>
66 </Label>
67 <Input>
68 <Text>
69 <Secret>true</Secret>
70 <Constraint>.+</Constraint>
71 </Text>
72 </Input>
73 </Requirement>
74 <Requirement>
75 <Credential>
76 <ID>otpmanage</ID>
77 <Type>otpmanage</Type>
78 </Credential>
79 <Input>
80 <Text>
81 <Secret>>false</Secret>
82 <Hidden>true</Hidden>
83 <InitialValue>1</InitialValue>
84 <Constraint>.+</Constraint>
85 </Text>
86 </Input>
87 </Requirement>
88 <Requirement>
89 <Credential>
90 <ID>pushregister</ID>
91 <Type>nsg_registerpush</Type>
92 </Credential>
```

```
93 <Input>
94 <Text>
95 <Secret>false</Secret>
96 <Hidden>true</Hidden>
97 <InitialValue>1</InitialValue>
98 <Constraint>.+</Constraint>
99 </Text>
100 </Input>
101 </Requirement>
102 <Requirement>
103 <Credential>
104 <ID>otpregister</ID>
105 <Type>nsg_registerotp</Type>
106 </Credential>
107 <Input>
108 <Text>
109 <Secret>false</Secret>
110 <Hidden>true</Hidden>
111 <InitialValue>1</InitialValue>
112 <Constraint>.+</Constraint>
113 </Text>
114 </Input>
115 </Requirement>
116 <Requirement>
117 <Credential>
118 <ID>savecredentials</ID>
119 <SaveID/>
120 <Type>savecredentials</Type>
121 </Credential>
122 <Label>
123 <Text>dualauth_remember_my_credentials</Text>
124 <Type>nsg-login-label</Type>
125 </Label>
126 <Input>
127 <AssistiveText>dualauth_</AssistiveText>
128 <CheckBox>
129 <InitialValue>false</InitialValue>
130 </CheckBox>
131 </Input>
132 </Requirement>
133 <Requirement>
134 <Credential>
135 <ID>Logon</ID>
136 <Type>none</Type>
137 </Credential>
138 <Label>
139 <Type>none</Type>
140 </Label>
141 <Input>
142 <Button>dualauth_submit</Button>
143 </Input>
144 </Requirement>
145 </Requirements>
```

```
146 </AuthenticationRequirements>
147 </AuthenticateResponse>
```

## NetScaler login

To configure the NetScaler login flow:

1. Configure the first factor. This factor determines whether this is a login request or a device registration request.

- Add an authentication policy for OTP login flow.

```
add authentication Policy otp_login_pol -rule true -action
NO_AUTHN
```

2. Configure the second factor. In this factor, a login schema that prompts the user for the credentials (user name, password, and OTP passcode) is added. To validate the user identity, an LDAP action is added in this factor.

- Add a login schema to display the user login page.

```
add authentication loginSchema dualauth_login -authenticationSchema
"LoginSchema/DualAuth.xml"
```

- Add a policy label for user login and attach the login schema.

```
add authentication policylabel otp_login_flow -loginSchema
dualauth_login
```

- Add an LDAP action for user login.

```
1 add authentication ldapAction ldap_act_for_validation -
serverIP <LDAPServerIP> -ldapBase <LdapBase> -ldapBindDn <
LdapAdminUser> -ldapBindDnPassword <LdapAdminPassword> -
ldapLoginName samAccountName -groupAttrName memberOF -
subAttributeName CN
2
3 add authentication Policy ldap_pol_for_validation -rule true
-action ldap_act_for_validation
```

3. Configure the third factor. Validation of OTP is done in this factor. An LDAP action that is used for OTP passcode validation is added here.

- Add a policy label for the user OTP validation.

```
add authentication policylabel otp_validation_login_factor -
loginSchema LSCHEMA_INT
```

- Add an LDAP action for user OTP validation.

```
add authentication ldapAction ldap_otp_validate_action -
serverIP <LDAPServerIP> -ldapBase <LdapBase> -ldapBindDn
 <LdapAdminUser> -ldapBindDnPassword <LdapAdminPassword>
 -ldapLoginName samAccountName -authentication DISABLED -
 OTPSecret userParameters
```

- Add an authentication policy for user OTP validation.

```
add authentication policy ldap_otp_validate_pol -action
ldap_otp_validate_action -rule true
```

- Bind the policy to the policy label.

```
bind authentication policylabel otp_validation_login_factor -
policyName ldap_otp_validate_pol -priority 100
```

- Bind the current policy label as the next factor for the OTP login flow.

```
bind authentication policylabel otp_login_flow -policyName
aaa_local_pwd_pol -priority 100 -nextFactor otp_validation_login_factor
```

4. Complete the login flow by binding the first factor to the authentication virtual server.

```
bind authentication vserver authvs_otp -policy otp_login_pol -
nextfactor otp_login_flow -priority 100
```

For more information about NetScaler login, see [Native OTP workflow](#).

## Push notification for OTP

May 2, 2023

NetScaler Gateway supports push notifications for OTP. Users do not have to manually enter the OTP received on their registered devices to log in to NetScaler Gateway. Admins can configure NetScaler Gateway such that login notifications are sent to users' registered devices using push notification services. When users receive the notification, they have to simply tap Allow on the notification to log in to NetScaler Gateway. When the gateway receives acknowledgment from the user, it identifies the source of the request, and sends a response to that browser connection.

If the notification response is not received within the timeout period (30 seconds), users are redirected to the NetScaler Gateway login page. The users can then enter the OTP manually or click **Resend Notification** to receive the notification again on the registered device.

Admins can make push notification authentication as the default authentication by using the login schemas created for push notification.

**Important:**

Push notification feature is available with a NetScaler Premium edition license.


### Advantages of push notifications

- Push notifications provide a more secure multifactor authentication mechanism. Authentication to NetScaler Gateway is not successful until the user approves the login attempt.
- Push notification is easy to administer and use. Users have to download and install the Citrix SSO mobile app that does not require any administrator assistance.
- Users do not have to copy or remember the code. They have to simply tap on the device to get authenticated.
- Users can register multiple devices.

### How push notifications work

The push notification workflow can be classified into two categories:

- Device registration
- End user login

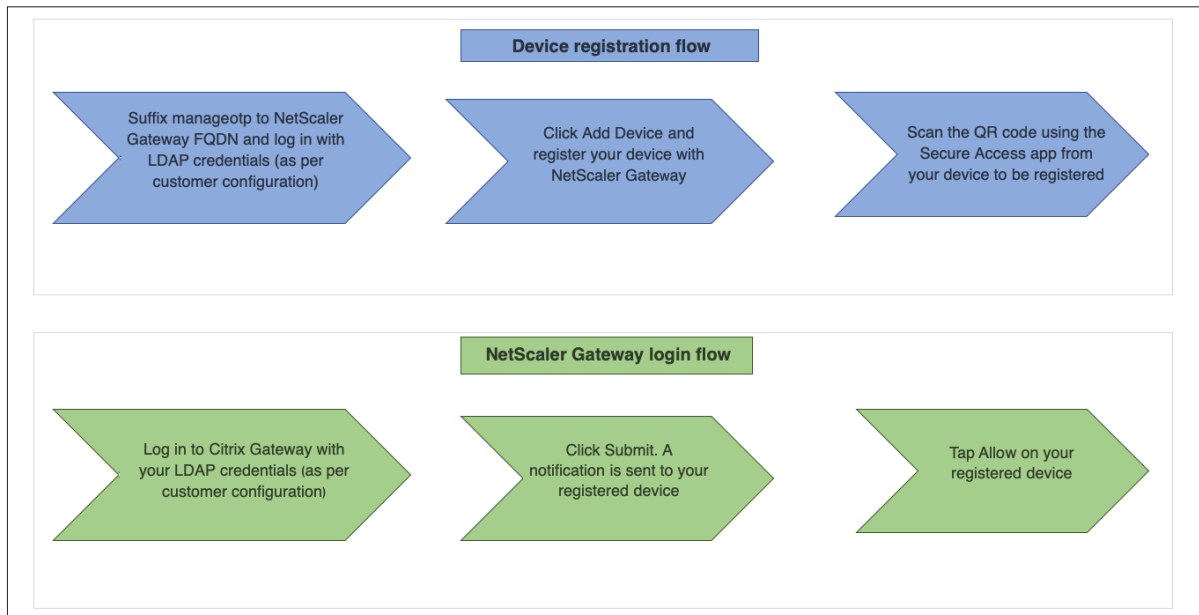



## Prerequisites for using push notification

- Complete the Citrix Cloud onboarding process.
  1. Create a Citrix Cloud company account or join an existing one. For detailed processes and instructions on how to proceed, see [Signing Up for Citrix Cloud](#).
  2. Log in to <https://citrix.cloud.com>, and select the customer.
  3. From Menu, select **Identity and Access Management** and then navigate to the **API Access** tab to create a client for the account.
  4. Copy the ID, secret, and customer ID. The ID and secret are required to configure the push service in NetScaler as “ClientID” and “ClientSecret” respectively.

### Important:

- Same API credentials can be used on multiple data centers.
- On-premises NetScaler appliances must be able to resolve server addresses [mfa.cloud.com](#) and [trust.citrixworkspacesapi.net](#) and are accessible from the appliance. This is to ensure that there are no firewalls or IP address blocks for these servers over port 443.
- Download the Citrix SSO mobile app from the App Store and Play Store for iOS devices and Android devices respectively. Push notification is supported on iOS from build 1.1.13 on Android from 2.3.5.
- Ensure the following for the Active Directory.
  - Minimum attribute length must be at least 256 characters.
  - Attribute type must be ‘DirectoryString’ such as UserParameters. These attributes can hold string values.
  - Attribute string type must be Unicode, if device name is in non-English characters.
  - NetScaler LDAP administrator must have write access to the selected AD attribute.
  - NetScaler and the client machine must be synchronized to a common Network Time Server.

## Push notification configuration

The following are the high-level steps that must be completed to use the push notification functionality.

- The NetScaler Gateway administrator must configure the interface to manage and validate users.
  1. Configure a push service.

2. Configure NetScaler Gateway for OTP management and end user login.

Users must register their devices with the gateway for logging in to NetScaler Gateway.

3. Register your device with NetScaler Gateway.
4. Log in to NetScaler Gateway.

### Create a push service

1. Navigate to **Security > AAA-Application Traffic > Policies > Authentication > Advanced Policies > Actions > Push Service** and click **Add**.
2. In **Name**, enter the name of the push service.
3. In **Client ID**, enter the unique identity of the relying party for communicating with the NetScaler Push server in cloud.
4. In **Client Secret**, enter the unique secret of the relying party for communicating with the NetScaler Push server in cloud.
5. In **Customer ID**, enter the customer ID or name of the account in cloud that is used to create the Client ID and the Client Secret pair.

#### Important

The TLS 1.2 version is required for push service. For more information, see [TLS 1.2 configuration details](#).

### Configure NetScaler Gateway for OTP management and end user login

Complete the following steps for OTP management and end user login.

- Create login schema for OTP management
- Configure authentication, authorization, and auditing virtual server
- Configure VPN or load balancing virtual servers
- Configure policy label
- Create login schema for end user login

For details on configuration, see [Native OTP support](#).

**Important:** For push notification, admins must explicitly configure the following:

- Create a push service.
- While creating a login schema for OTP management, select the SingleAuthManageOTP.xml login schema or equivalent as per the need.
- While creating a login schema for end user login, select the DualAuthOrPush.xml login schema or equivalent as per the need.

## Register your device with NetScaler Gateway


Users must register their devices with NetScaler Gateway to use the push notification functionality.

1. In your web browser, browse to your NetScaler Gateway FQDN, and suffix **/manageotp** to the FQDN.

This loads the authentication page.


Example: <https://gateway.company.com/manageotp>

2. Log in using your LDAP credentials or appropriate two-factor authentication mechanisms, as required.

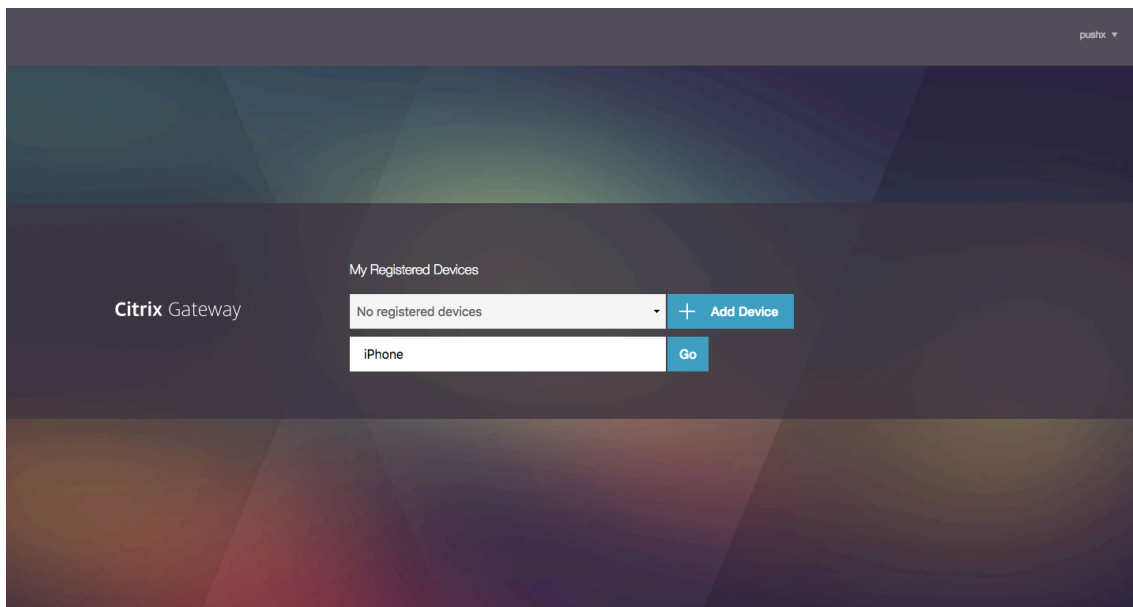

3. Click **Add Device**.
4. Enter a name for your device, then click **Go**.

A QR code is displayed on the NetScaler Gateway browser page.

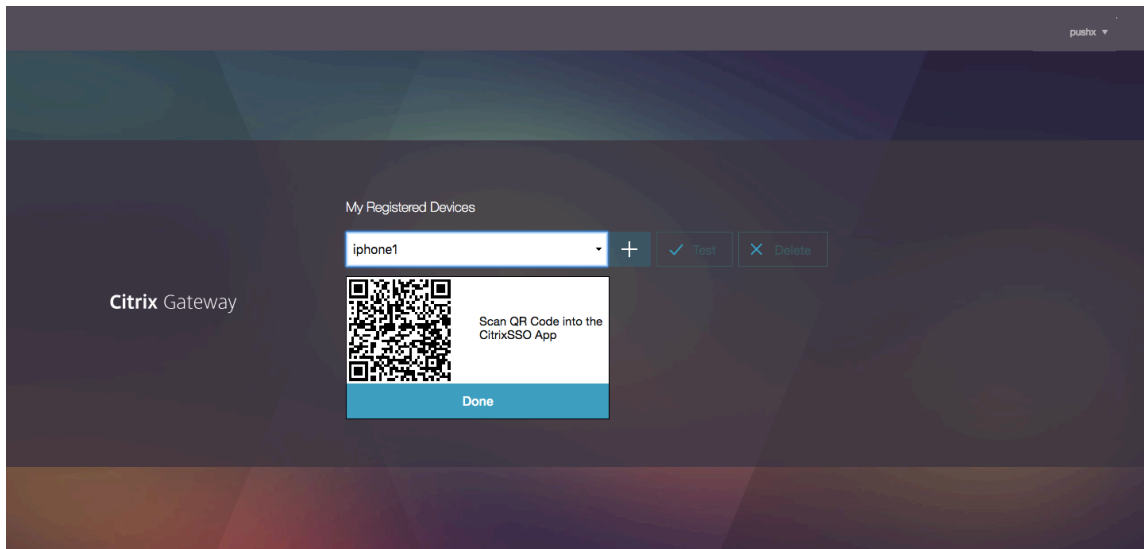


5. Scan this QR code using the Citrix SSO app from the device to be registered.

Citrix SSO validates the QR code and then registers with the gateway for push notifications. If there are no errors in the registration process, the token is successfully added to the password tokens page.

**Important:**

The login fails if you manually enter the secret key provided in the QR code.

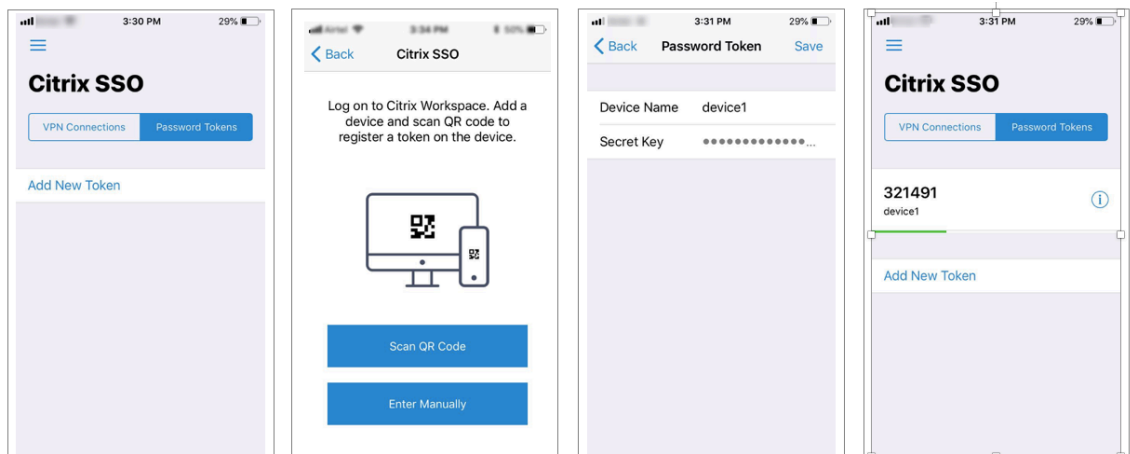

6. If there are no additional devices to add/manage log out using the list at the top right corner of the page.

**Test one-time password authentication**

1. To test the OTP, click your device from the list and then click **Test**.

2. Enter the OTP that you have received on your device and click **Go**.

The OTP verification successful message appears.

3. Log out using the list at the top right corner of the page.


**Note:** You can use the OTP management portal anytime to test authentication, remove registered devices, or register more devices.

### Log in to NetScaler Gateway

After registering their devices with NetScaler Gateway, users can use the push notification functionality for authentication.

1. Navigate to your NetScaler Gateway authentication page (for example: <https://gateway.company.com>)

You are prompted to enter only your LDAP credentials depending on the login schema configuration.

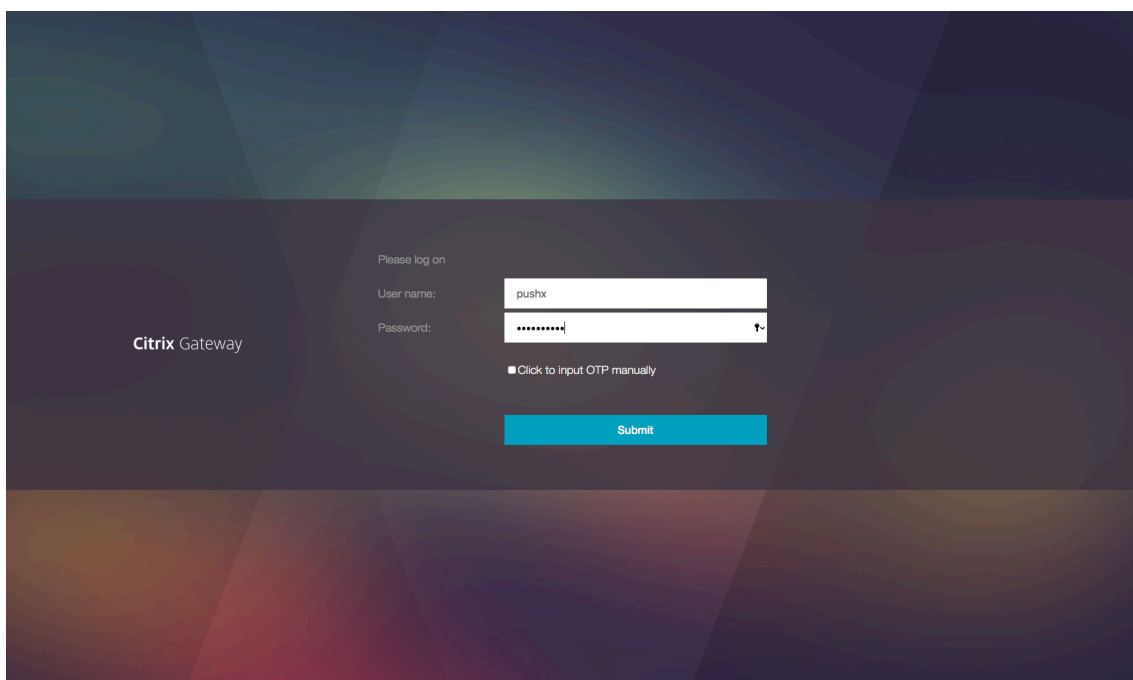


2. Enter your LDAP user name and password, then select **Submit**.

A notification is sent to your registered device.


**Note:** If you want to enter the OTP manually, you must select **Click** to input OTP manually and enter the OTP in the **TOTP** field.

3. Open the Citrix SSO app on your registered device and tap **Allow**.

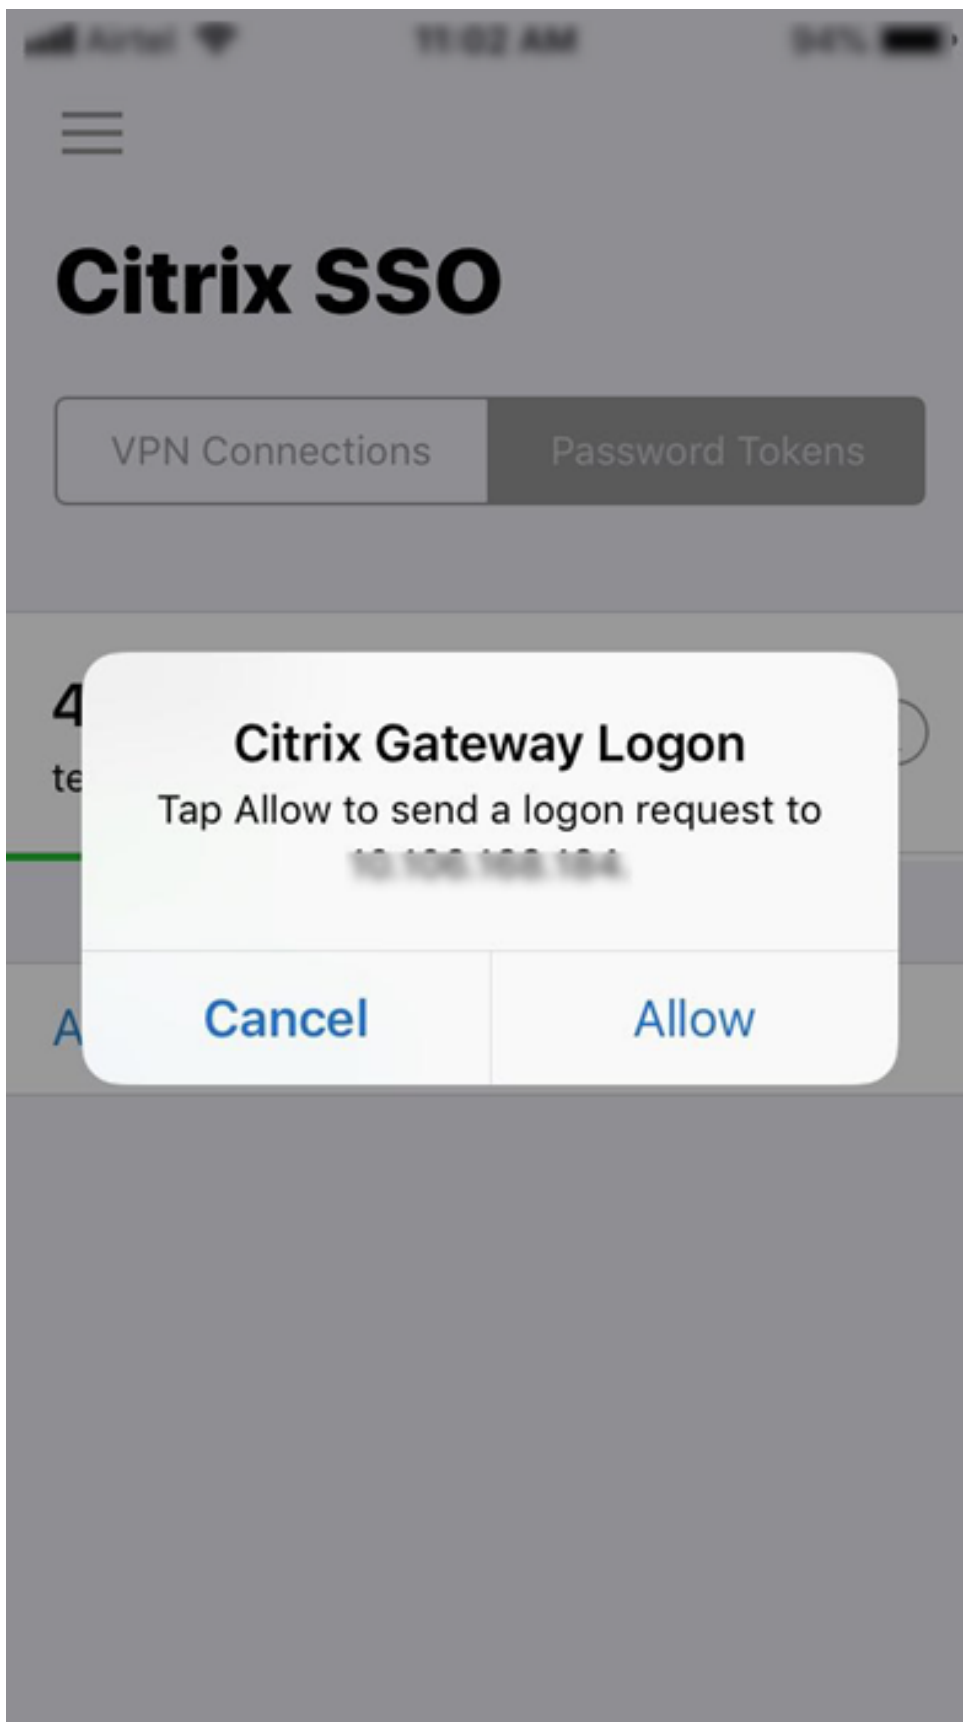

**Note:**

- In an iOS device, you are prompted for Touch-ID/Face-ID/Passcode as an extra factor of authentication.
- The authentication server waits for the push server notification response until the configured timeout period expires. After the timeout, NetScaler Gateway displays the login page. The users can then enter the OTP manually or click **Resend Notification** to receive the notification again on the registered device. Based on your selected option, the gateway validates the OTP that you have entered or resends the notification on your registered device.

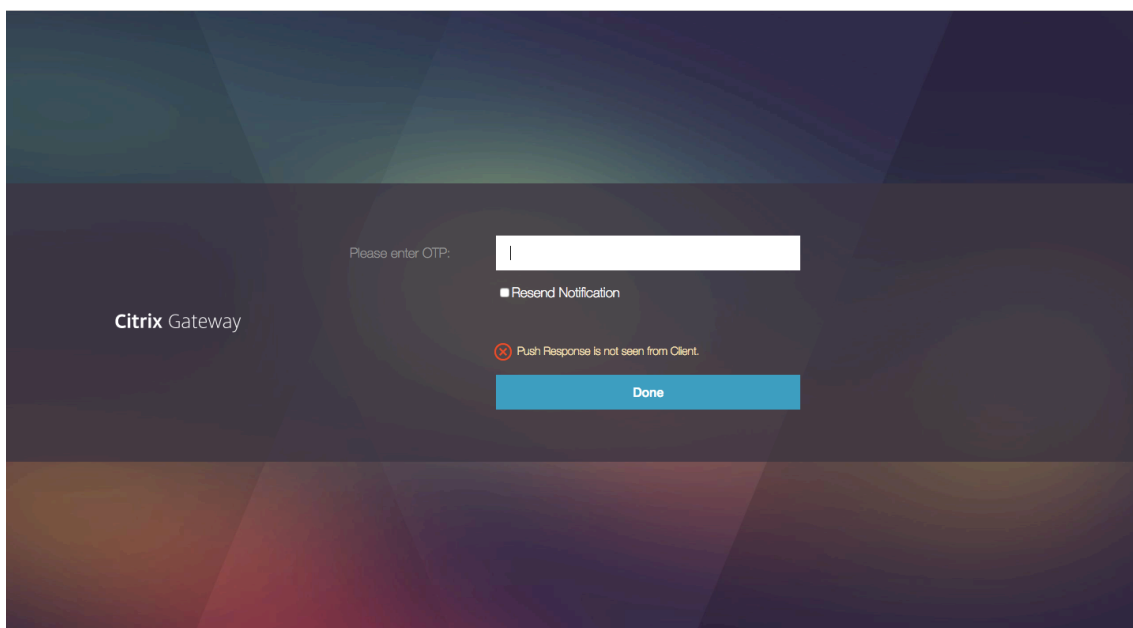

- No notification is sent to your registered device regarding login failure.

**Failure conditions**

- The device registration might fail in the following cases.
  - Server certificate might not be trusted by end-user device.
  - NetScaler Gateway used to register for OTP is not reachable by the client.
- The notifications might fail in the following cases.
  - User device is not connected to the internet
  - Notifications on the user device are blocked
  - User does not approve the notification on the device

In these cases, the authentication server waits until the configured timeout period expires. After the timeout, the NetScaler Gateway displays a login page with the options to manually enter the OTP or to resend the notification again on your registered device. Based on the selected option, further validation occurs.

## Failure logs

The following are the expected logs when the OTP push service is not reachable.

- Push notification failure when user device is not connected to the internet - Push: Failed to prepare Push Request to “`client name`” for Push service.
- Device registration failure log - Push: No devices are registered to send Push Request to cloud for “`client name`”.
- In case the user does not accept the push - Push: Response is not seen from client, for “`user name`”, checking retry options.

## Citrix SSO app behavior on iOS –points to note



### Notification shortcuts

Citrix SSO iOS app includes support for actionable notifications to enhance user experience. Once a notification is received on an iOS device, and if the device is locked or the Citrix SSO app is not in the foreground, users can use the shortcuts built into the notification to either approve or deny the login request.

To access notification shortcuts, users need to either force touch (3D touch) or long press the notification depending on the device’s hardware. Selecting the Allow shortcut action sends a login request to NetScaler. Depending on how the authentication policy is configured on the authentication, authorization, and auditing virtual server;

- The login request might be sent in the background without any need to launch the app into the foreground or unlock the device.
- The app might prompt for Touch-ID/Face-ID/Passcode as an extra factor in which case the app is launched into the foreground.



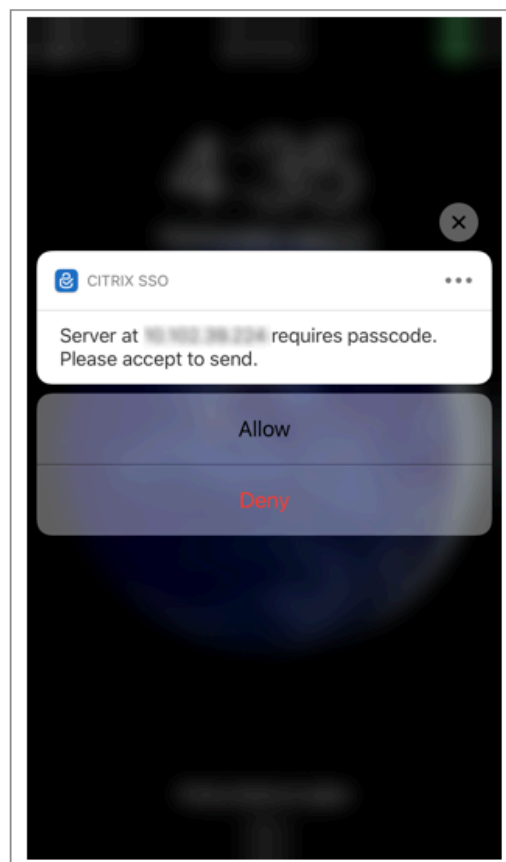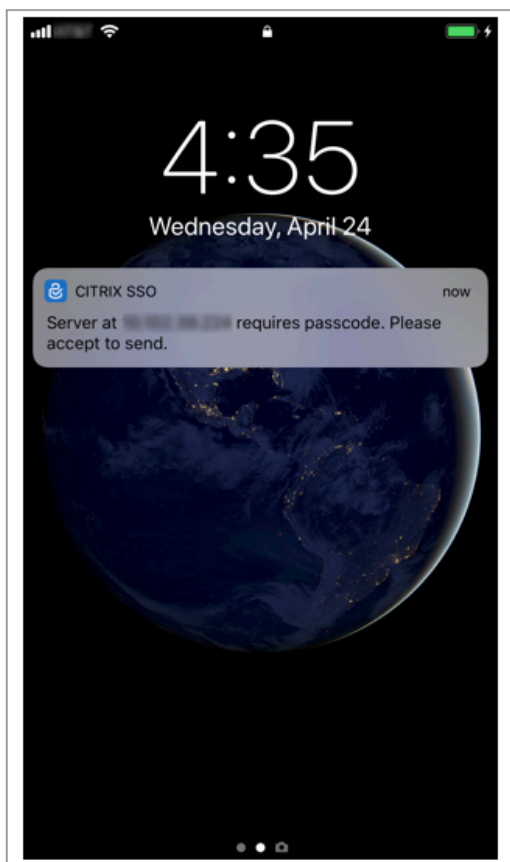


### Deleting password tokens from Citrix SSO

1. To delete a password token registered for push in the Citrix SSO app, users must perform the following steps:
2. Unregister (remove) the iOS/Android device on the gateway. QR code for removing registration from the device appears.
3. Open the Citrix SSO app and tap the info button of the password token to be deleted.
4. Tap **Delete Token** and scan the QR code.

#### Note:

- If the QR code is valid, the token is successfully removed from the Citrix SSO app.
- Users can tap Force Delete to delete a password token without having to scan the QR code if the device is already removed from the gateway. Force deleting might result in the device continuing to receive notifications if the device has not been removed from NetScaler Gateway.

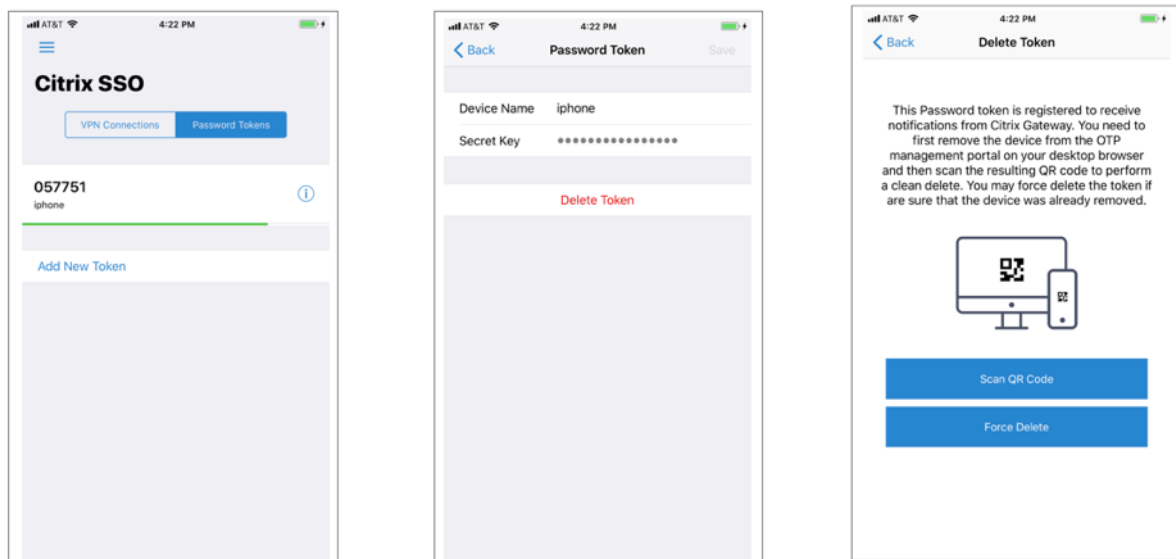

## Email OTP authentication

May 2, 2023

Email OTP is introduced with NetScaler 12.1 build 51.x. The Email OTP method enables you to authenticate using the one-time password (OTP) that is sent to the registered email address. When you try to authenticate on any service, the server sends an OTP to the registered email address of the user.

To use the Email OTP feature, you must first register your alternate email ID. An alternative email ID registration is needed so that the OTP can be sent to that mail ID since you would not be able to access the primary email ID if there was an account lockout or in the event of you forgetting the AD password.

You can use Email OTP validation without email ID registration if you have provided the alternate email ID already as part of some AD attribute. You can refer to the same attribute in the email action instead of specifying the alternate email ID in the email address section.

### Prerequisites

Before you configure the Email OTP feature, review the following prerequisites:

- NetScaler feature release 12.1 build 51.28 and above
- Email OTP feature is available in nFactor authentication flow only
  - For more details, refer to <https://support.citrix.com/pages/citrix-adc-authentication-how#nfactor>

- Supported for AAA-TM, NetScaler Gateway (Browser, Native plug-in, and Receiver).

### Active directory setting

- Supported version is 2016/2012 and 2008 Active Directory domain function level
- NetScaler ldapBind user name must have write access to the user's AD path

### Email server

- For the Email OTP solution to work, ensure that the login based authentication is enabled on the SMTP server. NetScaler supports only AUTH LOGIN based authentication for Email OTP to work.
- To ensure that the AUTH LOGIN based authentication is enabled, type the following command on the SMTP server. If the login based authentication is enabled, you notice that the text AUTH LOGIN appears in **bold** in the output.

```
root@ns# telnet <IP address of the SMTP server><Port number of the server>
ehlo
root@ns# telnet 10.106.3.
Trying 10.106.3.
Connected to 10.106.3.
Escape character is '^]'.
220 E2K13.NSGSanity.com Microsoft ESMTA MAIL Service ready at Fri, 22 Nov
2019 16:24:17 +0530
ehlo
250-E2K13.NSGSanity.com Hello [10.221.3.1]
250-SIZE 37748736
250-PIPELINING
250-DSN
250-ENHANCEDSTATUSCODES
250-STARTTLS
250-X-ANONYMOUSTLS
250-AUTH LOGIN
250-X-EXPS GSSAPI NTLM
250-8BITMIME
250-BINARYMIME
250-CHUNKING
250 XRDST
For information on how to enable login based authentication, see
https://support.microfocus.com/kb/doc.php?id=7020367
```

### Limitations

- This feature is supported only if the authentication back-end is LDAP.
- Already registered alternate email ID cannot be seen.
- Only the alternate email ID from the KBA Registration page cannot be updated.
- Email OTP authentication cannot be the first factor in the authentication flow. This is by design to achieve a robust authentication.

- If both Alternate email ID and KBA are configured using the same authentication action, the attribute must be the same for both.
- For the native plug-in and Receiver, registration is supported only through a browser.

### Active Directory configuration

- Email OTP uses the Active Directory attribute as user data storage.
- After you register the alternate email ID, the email ID is sent to the NetScaler appliance and the appliance stores it in the configured KB attribute in the AD user object.
- The alternate email ID is encrypted and stored in the configured AD attribute.


When configuring an AD attribute, consider the following:

- Attribute name length supported must be at least 128 characters.
- Attribute type must be 'DirectoryString'.
- Same AD attribute can be used for Native OTP and Email OTP registration data.
- LDAP administrator must have write access to the selected AD attribute.

### Using existing attributes

The attribute used in this example is [Userparameters](#). As this is an existing attribute within the AD user, you do not need to make any changes to the AD itself. However, you have to make sure that the attribute is not being used.

To ensure that the attribute is not used, navigate to **ADSI** and select user, right-click on the user, and scroll down to the attribute list. You must see the attribute value for **UserParameters** as **not set**. This indicates that the attribute is not being used at the moment.

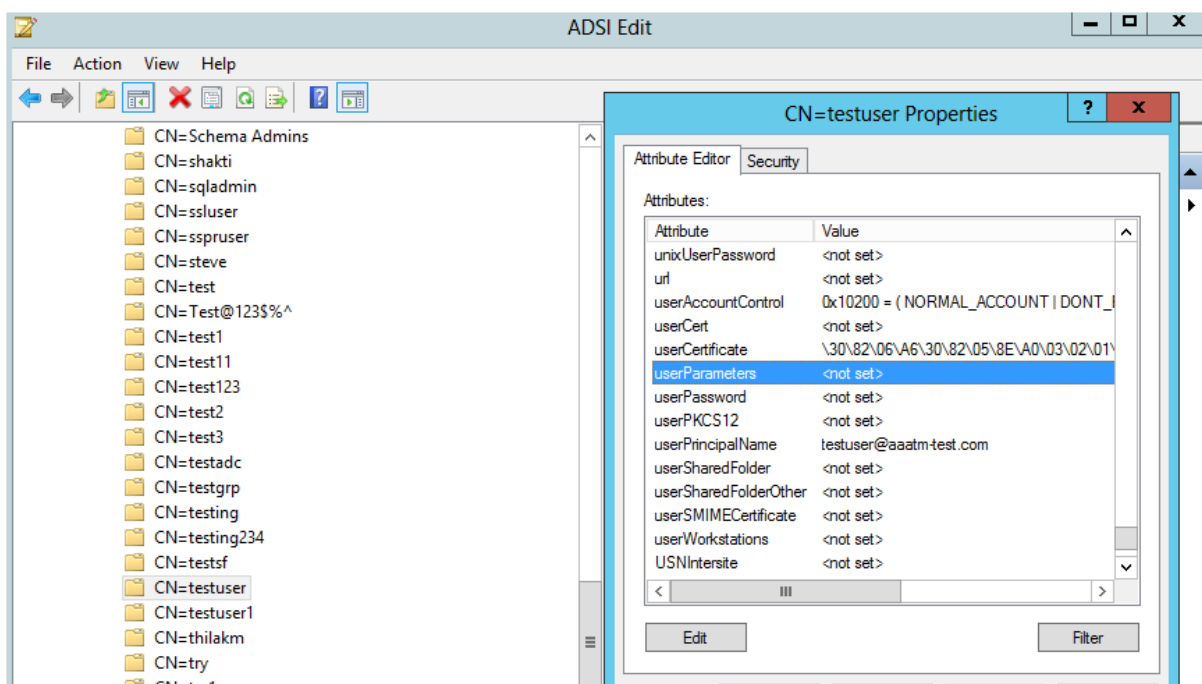

## Configure Email OTP

Email OTP solution consists of the following two parts:

- Email registration
- Email validation

### Email ID registration

Do the following configuration by using the CLI after the KBA registration schema is created successfully:

1. Bind the portal theme and the certificate to VPN global.

```
1 bind authentication vserver authvs -portaltheme RfWebUI
2 bind vpn global -userDataEncryptionKey c1
```

**Note:**

Preceding certificate binding is required to encrypt the user data (KB Q&A and alternate mail ID Registered) stored in the AD attribute.

2. Create an LDAP authentication policy.

```
1 add authentication ldapAction ldap -serverIP 10.102.2.2 -
 serverPort 636 -ldapBase "dc=aaatm-test,dc=com" -ldapBindDn
 administrator@aaatm-test.com -ldapBindDnPassword freebsd -
 ldapLoginName samAccountName -secType SSL
2 add authentication Policy ldap -rule true -action ldap
```

3. Create an LDAP authentication policy for email registration.

```
1 add authentication ldapAction ldap_email_registration -serverIP
 10.102.2.2 -serverPort 636 -ldapBase "dc=aaatm-test,dc=com" -
 ldapBindDn administrator@aaatm-test.com -ldapBindDnPassword
 freebsd -ldapLoginName samAccountName -secType SSL -KBAttribute
 userParameters -alternateEmailAttr userParameters
2 add authentication Policy ldap_email_registration -rule true -
 action ldap_email_registration
```

4. Create an email registration login schema and policy label.


```
1 add authentication loginSchema onlyEmailRegistration -
 authenticationSchema /nsconfig/loginschema/LoginSchema/
 AltEmailRegister.xml
2 add authentication policylabel email_Registration_factor -
 loginSchema onlyEmailRegistration
3 bind authentication policylabel email_Registration_factor -
 policyName ldap_email_registration -priority 1 -
 gotoPriorityExpression NEXT
```

5. Bind the authentication policy to the authentication virtual server.

```
1 bind authentication vserver authvs -policy ldap -priority 1 -
 nextFactor email_Registration_factor -gotoPriorityExpression
 NEXT
```

6. Once you have configured all the steps mentioned in the previous sections, you must see the following GUI screen. Upon accessing via the URL for example, <https://lb1.server.com/> you are presented with an initial login page that only requires the LDAP logon credential followed by an alternate email registration page.

**Note:** The domain <https://lb1.server.com/> can belong to either gateway or an authentication virtual server.

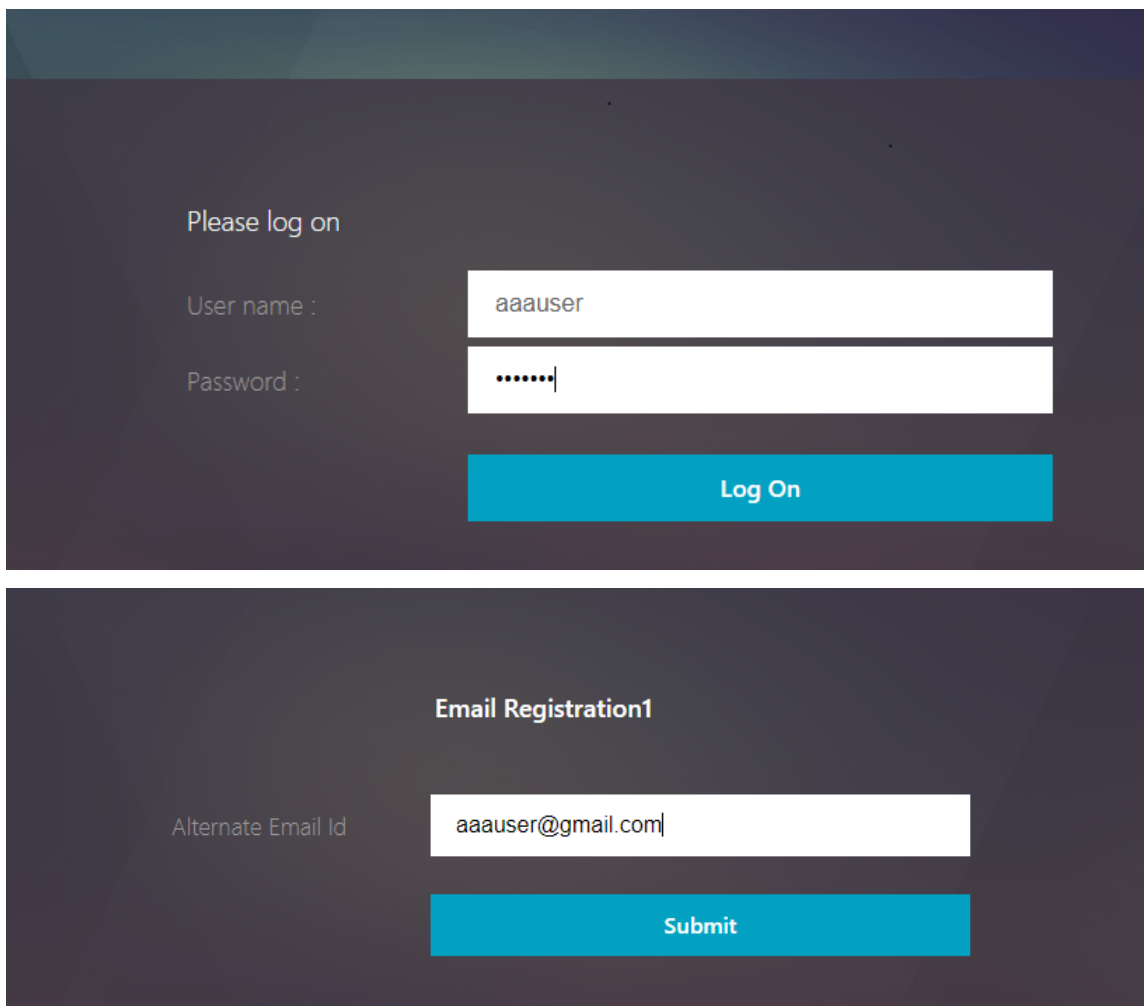

**Note:**

- You can use the same authentication schema for both KBA registration and for Email ID registration.
- While configuring KBA registration, you can select **Register Alternate Email** in the Email Registration section to register an alternate email ID.

**Email validation**

Do the following steps for Email validation.

1. Bind the portal theme and the certificate to VPN global

```
1 bind authentication vserver authvs -portaltheme RfWebUI
2 bind vpn global -userDataEncryptionKey c1
```

**Note:**

Preceding certificate binding is required to decrypt the user data (KB Q&A and alternate email ID registered) stored in the AD attribute.

2. Create an LDAP authentication policy. LDAP must be a prior factor to the email validation factor because you need the user's email ID or alternate email ID for Email OTP Validation.

```
1 add authentication ldapAction ldap1 -serverIP 10.102.2.2 -
 serverPort 636 -ldapBase "dc=aaatm-test,dc=com" - ldapBindDn
 administrator@aaatm-test.com -ldapBindDnPassword freebsd -
 ldapLoginName samAccountName -secType SSL -KBAttribute
 userParameters -alternateEmailAttr userParameters
2 add authentication Policy ldap1 -rule true -action ldap1
```

3. Create an email authentication policy.

```
1 add authentication emailAction email -userName sqladmin@aaa.com -
 password freebsd-encrypted -encryptmethod ENCMTHD_3 -serverURL
 "smtps://10.2.3.3:25" -content "OTP is $code" -
 defaultAuthenticationGroup emailgrp -emailAddress "aaa.user.
 attribute(\"alternate_mail\")"
2 add authentication Policy email -rule true - action email
```

In the previously mentioned command, **email address** is the alternate email ID user provided during KBA Registration.

4. Create an email OTP validation policy label.

```
1 add authentication policylabel email_validation_factor
2 bind authentication policylabel email_validation_factor -
 policyName email -priority 1 -gotoPriorityExpression NEXT
```

5. Bind the authentication policy to the authentication virtual server.

```
1 bind authentication vserver authvs - policy ldap1 -priority 1 -
 nextFactor email_validation_factor -gotoPriorityExpression NEXT
```

6. Once you have configured all the steps mentioned in the previous sections, you must see the following GUI screen for EMAIL OTP Validation. Upon accessing via the URL for example, <https://lb1.server.com/> you are presented with an initial login page that only requires the LDAP logon credential followed by the EMAIL OTP Validation page.

**Note:**

In the LDAP policy it is important to configure `alternateEmailAttr` to be able to query the user's email id from the AD attribute.





### Registration - Failure scenario

On the user login page, you see the following error message, “Cannot Complete your request”. This indicates that the cert-key to be bound to the VPN global for encrypting the user data is missing.

```

1 Jul 31 08:51:46 <local0.info> 10.102.229.79 07/31/2020:03:21:4 6 GMT
 0-PPE-1 : default SSLVPN Message 696 0 : "Encrypt UserData: No
 Encryption cert is bound to vpn global"
2 Jul 31 08:51:46 <local0.info> 10.102.229.79 07/31/2020:03:21:46 GMT 0-
 PPE-1 : default SSLVPN Message 697 0 : "KBA Register: Alternate
 email id Encrypted blob length is ZERO aaauser"

```

### Email validation –Successful scenario

The following entries indicate a successful Email OTP Validation.

```

1 "NFactor: Successfully completed email auth, nextfactor is pwd_reset"

```

### Email Validation –Failure scenario

On the user login page, the “Cannot Complete your request” error message is displayed. This indicates login based authentication is not enabled on the email server and the same needs to be enabled.

```

1 " /home/build/rs_130_36_15_RTM/usr.src/netscaler/aaad/pocomail.cpp
 [100]: void ThreadWorker_SendMailJob(SMTPJob*) 0-215: [POCO][JobID:
 8]SMTP Configuration is Secure..
2 /home/build/rs_130_36_15_RTM/usr.src/netscaler/aaad/pocomail.cpp[108]:
 void ThreadWorker_SendMailJob(SMTPJob*) 0-215: [POCO][JobID: 8]
 First login succeeded
3 Wed Mar 4 17:16:28 2020
4 /home/build/rs_130_36_15_RTM/usr.src/netscaler/aaad/naaad.c[697]: main
 0-0: timer 2 firing...
5 /home/build/rs_130_36_15_RTM/usr.src/netscaler/aaad/pocomail.cpp[127]:
 void ThreadWorker_SendMailJob(SMTPJob*) 0-0: [POCO-ERROR][JobID: 8]
 Poco SMTP Mail Dispatch Failed. SMTP TYPE:1, SMTPException:
 Exception occurs. SMTP Exception: The mail service does not support
 LOGIN authentication: 250-smtprelay.citrix.com Hello [10.9.154.239]
6 250-SIZE 62914560
7 250-PIPELINING
8 250-DSN
9 250-ENHANCEDSTATUSCODES
10 250-8BITMIME
11 250-BINARYMIME
12 250 CHUNKING

```

## re-Captcha configuration for nFactor authentication

May 10, 2024

NetScaler Gateway supports a new first-class action `captchaAction` that simplifies re-Captcha configuration. As re-Captcha is a first-class action, it can be a factor of its own. You can inject re-Captcha anywhere in the nFactor flow.

Previously, you had to write custom WebAuth policies with changes to the RfWebUI as well. With the introduction of `captchaAction`, you do not have to modify the JavaScript.

### **Important:**

If re-Captcha is used along with the user name or password fields in the schema, the **Submit** button is disabled until re-Captcha is met.

## re-Captcha configuration

re-Captcha configuration involves two parts.

1. Configuration on Google for registering re-Captcha.
2. Configuration on NetScaler appliance to use re-Captcha as part of login flow.

### re-Captcha configuration on Google

Register a domain for re-Captcha at <https://www.google.com/recaptcha/admin#l1ist>.

1. When you navigate to this page, the following screen appears.

← Register a new site

Label ⓘ  
e.g. example.com 0 / 50

reCAPTCHA type ⓘ

reCAPTCHA v3 Verify requests with a score

reCAPTCHA v2 Verify requests with a challenge

Domains ⓘ

+ Add a domain, e.g. example.com

Accept the reCAPTCHA Terms of Service

By accessing or using the reCAPTCHA APIs, you agree to the Google APIs [Terms of Use](#), Google [Terms of Use](#), and to the Additional Terms below. Please read and understand all applicable terms and policies before accessing the APIs.

reCAPTCHA Terms of Service ▾

Send alerts to owners ⓘ

CANCEL SUBMIT

**Note**

Use reCAPTCHA v2 only. Invisible re-Captcha is still in preview.

2. After a domain is registered, the “SiteKey” and “SecretKey” are displayed.

ⓘ Adding reCAPTCHA to your site

▾ Keys

|                                                                                                                                                    |                                                                                                                                                                                     |
|----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Site key</b><br/>Use this in the HTML code your site serves to users.</p> <div style="border: 1px solid #ccc; padding: 2px;">6Ld1..._B</div> | <p><b>Secret key</b><br/>Use this for communication between your site and Google. Be sure to keep it a secret.</p> <div style="border: 1px solid #ccc; padding: 2px;">6I..._C</div> |
|----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

▾ Step 1: client-side integration

**Note**

The “SiteKey” and “SecretKey” are grayed out for security reasons. “SecretKey” must be kept safe.

**re-Captcha configuration on a NetScaler appliance**

The re-Captcha configuration on the NetScaler appliance can be divided into three parts:

- Display re-Captcha screen
- Post the re-Captcha response to Google server
- LDAP configuration is second factor for user logon (optional)

**Display re-Captcha screen** The login form customization is done through the SingleAuth-Captcha.xml login schema. This customization is specified at authentication virtual server and is sent to UI for rendering the login form. The built-in login schema, SingleAuthCaptcha.xml, is at the `/nsconfig/loginSchema/LoginSchema` directory on the NetScaler appliance.

**Important**

- The SingleAuthCaptcha.xml login schema can be used when LDAP is configured as the first factor.
- Based on your use case and different schemas, you can modify the existing schema. For instance if you need only re-Captcha factor (without user name or password) or dual authentication with re-Captcha.
- If any custom modifications are done or the file is renamed, Citrix recommends copying all loginSchemas from the `/nsconfig/loginschema/LoginSchema` directory to the parent directory, `/nsconfig/loginschema`.

**To configure display of re-Captcha using CLI**

```
1 add authentication loginSchema singleauthcaptcha -authenticationSchema
 /nsconfig/loginschema/SingleAuthCaptcha.xml
2
3 add authentication loginSchemaPolicy singleauthcaptcha -rule true -
 action singleauthcaptcha
4
5 add authentication vserver auth SSL <IP> <Port>
6
7 add ssl certkey vserver-cert -cert <path-to-cert-file> -key <path-to-
 key-file>
8
9 bind ssl vserver auth -certkey vserver-cert
10
11 bind authentication vserver auth -policy singleauthcaptcha -priority 5
 -gotoPriorityExpression END
```

**Post the re-Captcha response to Google server** After you have configured the re-Captcha that must be displayed to the users, the admins add the configuration to the Google server to verify the re-Captcha response from the browser.

**To verify re-Captcha response from the browser**

```
1 add authentication captchaAction myrecaptcha -sitekey <sitekey-copied-
 from-google> -secretkey <secretkey-from-google>
2
3 add authentication policy myrecaptcha -rule true -action myrecaptcha
4
5 bind authentication vserver auth -policy myrecaptcha -priority 1
```

NetScaler contacts <https://www.google.com/recaptcha/api/siteverify> to validate the Captcha information. So, ensure that the site is reachable from NetScaler.

To verify if the Google site is reachable, run the script `curl -vvv https://www.google.com/recaptcha/api/siteverify`.

The following commands are required to configure if AD authentication is desired. Else, you can ignore this step.

```
1 add authentication ldapAction ldap-new -serverIP x.x.x.x -serverPort
 636 -ldapBase "cn=users,dc=aaatm,dc=com" -ldapBindDn adminuser@aaatm
 .com -ldapBindDnPassword <password> -encrypted -encryptmethod
 ENCMTHD_3 -ldapLoginName sAMAccountName -groupAttrName memberof -
 subAttributeName CN -secType SSL -passwdChange ENABLED -
 defaultAuthenticationGroup ldapGroup
2
3 add authenticationpolicy ldap-new -rule true -action ldap-new
```

**LDAP configuration is second factor for user logon (optional)** The LDAP authentication happens after re-Captcha, you add it to the second factor.

```
1 add authentication policylabel second-factor
2
3 bind authentication policylabel second-factor -policy ldap-new -
 priority 10
4
5 bind authentication vserver auth -policy myrecaptcha -priority 1 -
 nextFactor second-factor
```


Administrator needs to add appropriate virtual servers depending on whether load balancing virtual server or NetScaler Gateway appliance is used for access. Administrator must configure the following command if a load balancing virtual server is required:

```
1 add lb vserver lbtest HTTP <IP> <Port> -authentication ON -
 authenticationHost nssp.aaatm.com
```

**\*\*nssp.aaatm.com\*\*** –Resolves to authentication virtual server.


**User validation of re-Captcha** Once you have configured all the steps mentioned in the previous sections, you must see the following UI.

1. Once the authentication virtual server loads the login page, the logon screen is displayed. **Log On** is disabled until re-Captcha is complete.

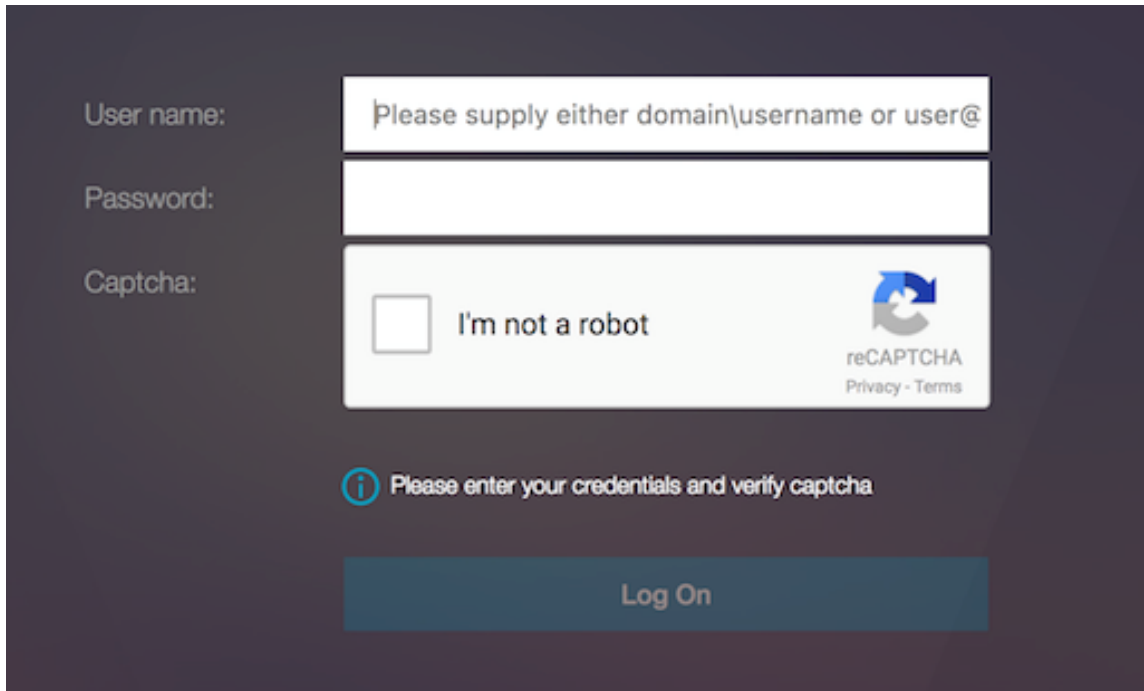


The screenshot shows a login interface on a dark background. On the left, there are labels for 'User name:', 'Password:', and 'Captcha:'. To the right of 'User name:' is a text input field containing the placeholder text 'Please supply either domain\username or user@'. Below that is a password input field. Under the 'Captcha:' label is a reCAPTCHA widget with a checkbox and the text 'I'm not a robot'. To the right of the widget is the reCAPTCHA logo and the text 'reCAPTCHA Privacy - Terms'. Below the widget is an information icon (i) followed by the text 'Please enter your credentials and verify captcha'. At the bottom center is a 'Log On' button.

2. Select I'm not a robot option. The re-Captcha widget is displayed.

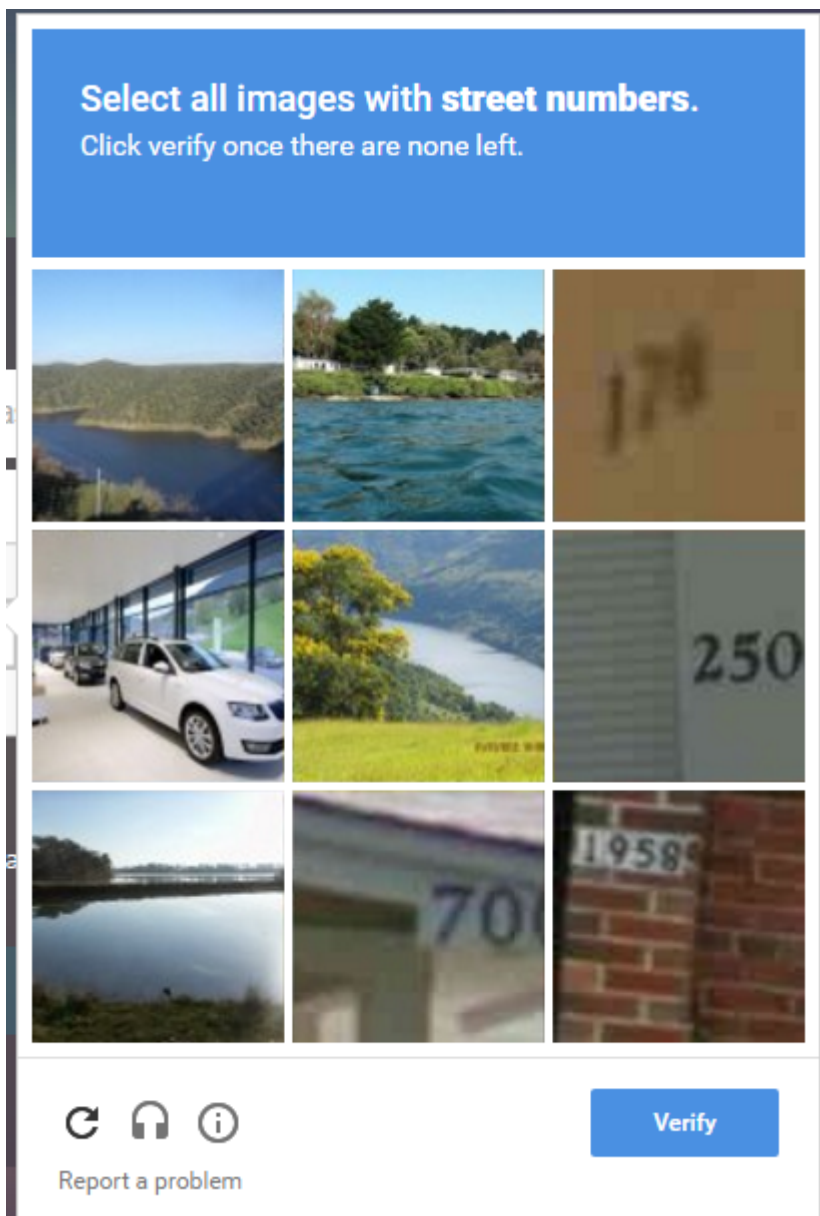

3. You are navigated through a series of re-Captcha images, before the completion page is displayed.
4. Enter the AD credentials, select the **I'm not a robot** check box and click **Log On**. If authentication succeeds, you are redirected to the desired resource.



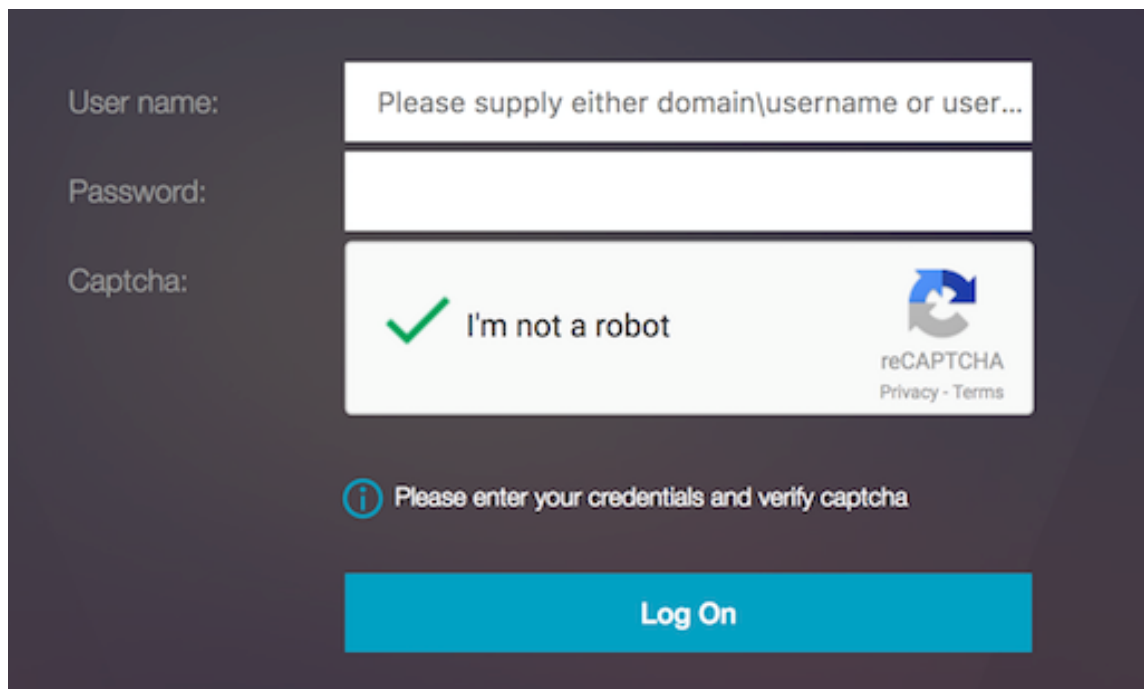

The screenshot shows a login interface on a dark background. On the left, there are labels for 'User name:', 'Password:', and 'Captcha:'. To the right of these labels are three input fields. The first field contains the placeholder text 'Please supply either domain\username or user...'. The second field is empty. The third field contains a reCAPTCHA widget with a green checkmark, the text 'I'm not a robot', and the reCAPTCHA logo with 'reCAPTCHA Privacy - Terms' below it. Below the input fields is a blue circular information icon followed by the text 'Please enter your credentials and verify captcha'. At the bottom of the form is a large blue button with the text 'Log On'.

**Notes:**

- If re-Captcha is used with AD authentication, the **Submit** button for credentials is disabled until re-Captcha is complete.
- The re-Captcha happens in a factor of its own. Therefore, any subsequent validations like AD must happen in the `next factor` of re-Captcha.

## Authentication, authorization, and auditing configuration for commonly used protocols

May 2, 2023

Configuring the NetScaler appliance for authentication, authorization, and auditing needs a specific setup on the NetScaler appliance and clients' browsers. The configuration varies with the protocol used for authentication, authorization, and auditing.

For more information about configuring the NetScaler appliance for Kerberos authentication, see [Handling Authentication, Authorization and Auditing with Kerberos/NTLM](#).

## Handling authentication, authorization and auditing with Kerberos/NTLM


May 2, 2023

Kerberos, a computer network authentication protocol, provides secure communication over the Internet. Designed primarily for client-server applications, it provides for mutual authentication by which the client and server can each ensure the other’s authenticity. Kerberos uses a trusted third party, referred to as Key Distribution Center (KDC). A KDC consists of an Authentication Server (AS), which authenticates a user, and a Ticket Granting Server (TGS).

Each entity on the network (client or server) has a secret key that is known only to itself and the KDC. The knowledge of this key implies authenticity of the entity. For communication between two entities on the network, the KDC generates a session key, referred to as the Kerberos ticket or service ticket. The client makes a request to the AS for credentials for a specific server. The client then receives a ticket, referred to as Ticket Granting Ticket (TGT). The client then contacts the TGS, using the TGT it received from the AS to prove its identity, and asks for a service. If the client is eligible for the service, the TGS issues a Kerberos ticket to the client. The client then contacts the server hosting the service (referred to as the service server), using the Kerberos ticket to prove that it is authorized to receive the service. The Kerberos ticket has a configurable lifetime. The client authenticates itself with the AS only once. If it contacts the physical server multiple times, it reuses the AS ticket.

The following figure shows the basic functioning of the Kerberos protocol.

Figure 1. **Functioning of Kerberos**

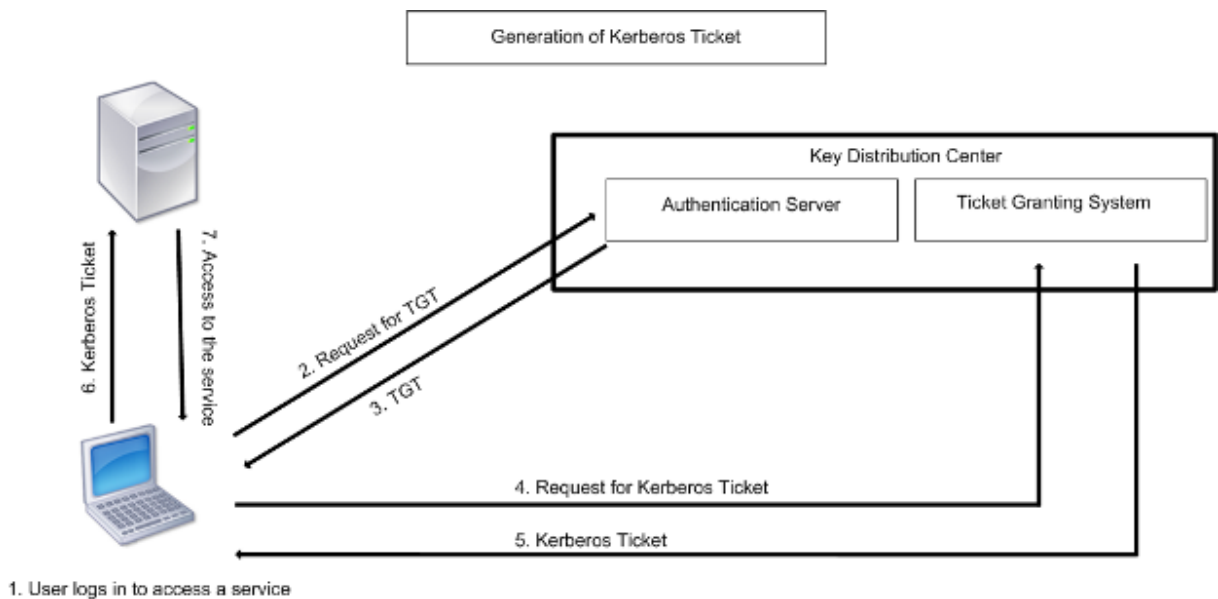

**Kerberos authentication has the following advantages:**

- **Faster authentication.** When a physical server gets a Kerberos ticket from a client, the server has enough information to authenticate the client directly. It does not have to contact a domain controller for client authentication, and therefore the authentication process is faster.
- **Mutual authentication.** When the KDC issues a Kerberos ticket to a client and the client uses the ticket to access a service, only authenticated servers can decrypt the Kerberos ticket. If the virtual server on the NetScaler appliance is able to decrypt the Kerberos ticket, you can conclude that both the virtual server and client are authenticated. Thus, the authentication of the server happens along with the authentication of the client.
- **Single sign-on between Windows and other operating systems that support Kerberos.**

**Kerberos authentication may have the following disadvantages:**

- Kerberos has strict time requirements; the clocks of the involved hosts must be synchronized with the Kerberos server clock to ensure that the authentication does not fail. You can mitigate this disadvantage by using the Network Time Protocol daemons to keep the host clocks synchronized. Kerberos tickets have an availability period, which you can configure.
- Kerberos needs the central server to be available continuously. When the Kerberos server is down, no one can log on. You can mitigate this risk by using multiple Kerberos servers and fallback authentication mechanisms.
- Because all the authentication is controlled by a centralized KDC, any compromise in this infrastructure, such as the user's password for a local workstation being stolen, can allow an attacker to impersonate any user. You can mitigate this risk to some extent by using only a desktop machine or laptop that you trust, or by enforcing preauthentication by means of a hardware-token.

To use Kerberos authentication, you must configure it on the NetScaler appliance and on each client.

**Optimizing Kerberos authentication on authentication, authorization, and auditing**

The NetScaler appliance now optimizes and improves the system performance while Kerberos authentication. The authentication, authorization, and auditing daemon remembers the outstanding Kerberos request for the same user to avoid load on Key Distribution Center (KDC), which will avoid duplicate requests.

**How NetScaler implements Kerberos for client authentication**

May 2, 2023

### **Important**

Kerberos/NTLM authentication is supported only in the NetScaler 9.3 nCore release or later, and it can be used only for authentication, authorization, and auditing traffic management virtual servers.

NetScaler handles the components involved in Kerberos authentication in the following way:

### **Key Distribution Center (KDC)**

In the Windows 2000 Server or later versions, the Domain Controller and KDC are part of the Windows Server. If the Windows Server is UP and running, it indicates that the Domain Controller and KDC are configured. The KDC is also the Active Directory server.

### **Note**

All Kerberos interactions are validated with the Windows Kerberos Domain Controller.

### **Authentication service and protocol negotiation**

A NetScaler appliance supports Kerberos authentication on the authentication, authorization, and auditing traffic management authentication virtual servers. If the Kerberos authentication fails, the NetScaler uses the NTLM authentication.

By default, Windows 2000 Server and later Windows Server versions use Kerberos for authentication, authorization, and auditing. If you create an authentication policy with NEGOTIATE as the authentication type, the NetScaler attempts to use the Kerberos protocol for authentication, authorization, and auditing and if the client's browser fails to receive a Kerberos ticket, the NetScaler uses the NTLM authentication. This process is referred to as negotiation.

The client may fail to receive a Kerberos ticket in any of the following cases:

- Kerberos is not supported on the client.
- Kerberos is not enabled on the client.
- The client is in a domain other than that of the KDC.
- The Access Directory on the KDC is not accessible to the client.

For Kerberos/NTLM authentication, the NetScaler does not use the data that is present locally on the NetScaler appliance.

### **Authorization**

The traffic management virtual server can be a load balancing virtual server or a content switching virtual server.

## Auditing

The NetScaler appliance supports auditing of Kerberos authentication with the following audit logging:

- Complete audit trail of the traffic management end-user activity
- SYSLOG and high performance TCP logging
- Complete audit trail of system administrators
- All system events
- Scriptable log format

## Supported Environment

Kerberos authentication does not need any specific environment on the NetScaler. The client (browser) must provide support for Kerberos authentication.


## High Availability

In a high availability setup, only the active NetScaler joins the domain. In case of a failover, the NetScaler lwagent daemon joins the secondary NetScaler appliance to the domain. No specific configuration is required for this functionality.

## Kerberos authentication process

The following figure shows a typical process for Kerberos authentication in the NetScaler environment.

Figure 1. Kerberos Authentication Process on NetScaler

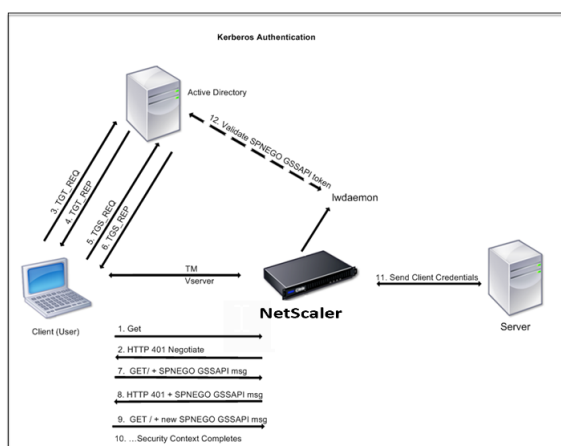

The Kerberos authentication occurs in the following stages:

### **Client authenticates itself to the KDC**

1. The NetScaler appliance receives a request from a client.
2. The traffic management (load balancing or content switching) virtual server on the NetScaler appliance sends a challenge to the client.
3. To respond to the challenge, the client gets a Kerberos ticket.
  - The client sends the Authentication Server of the KDC a request for a ticket-granting ticket (TGT) and receives the TGT. (See 3, 4 in the figure, Kerberos Authentication Process.)
  - The client sends the TGT to the Ticket Granting Server of the KDC and receives a Kerberos ticket. (See 5, 6 in the figure, Kerberos Authentication Process.)

#### **Note**

The above authentication process is not necessary if the client already has a Kerberos ticket whose lifetime has not expired. In addition, clients such as Web Services, .NET, or J2EE, which support SPNEGO, get a Kerberos ticket for the target server, create an SPNEGO token, and insert the token in the HTTP header when they send an HTTP request. They do not go through the client authentication process.

### **Client requests a service.**

1. The client sends the Kerberos ticket containing the SPNEGO token and the HTTP request to the traffic management virtual server on the NetScaler. The SPNEGO token has the necessary GSSAPI data.
2. The NetScaler appliance establishes a security context between the client and the NetScaler. If the NetScaler cannot accept the data provided in the Kerberos ticket, the client is asked to get a different ticket. This cycle repeats till the GSSAPI data is acceptable and the security context is established. The traffic management virtual server on the NetScaler acts as an HTTP proxy between the client and the physical server.

### **NetScaler appliance completes the authentication.**

1. After the security context is complete, the traffic management virtual server validates the SPNEGO token.
2. From the valid SPNEGO token, the virtual server extracts the user ID and GSS credentials, and passes them to the authentication daemon.
3. A successful authentication completes the Kerberos authentication.

## **Configuring kerberos authentication on the NetScaler appliance**

May 5, 2023

This topic provides the detailed steps to configure Kerberos authentication on the NetScaler appliance by using the CLI and the GUI.

## Configuring Kerberos authentication on the CLI

1. Enable the authentication, authorization, and auditing feature to ensure the authentication of traffic on the appliance.

```
ns-cli-prompt> enable ns feature AAA
```

2. Add the keytab file to the NetScaler appliance. A keytab file is necessary for decrypting the secret received from the client during Kerberos authentication. A single keytab file contains authentication details for all the services that are bound to the traffic management virtual server on the NetScaler appliance.

First generate the keytab file on the Active Directory server and then transfer it to the NetScaler appliance.

- Log on to the Active Directory server and add a user for Kerberos authentication using the following command.

```
1 net user <username> <password> /add
```

### Note

In the **User Properties** section, ensure that the “Change password at next logon option” is not selected and the “Password does not expire” option is selected.

- Map the HTTP service to the above user and export the keytab file. For example, run the following command on the Active Directory server:

```
1 ktpass /out keytabfile /princ HTTP/owa.newacp.com@NEWACP.COM
/pass <user password> /mapuser newacp\\dummy /ptype KRB5\
_NT_PRINCIPAL
```

### Note

You can map more than one service if authentication is required for more than one service. If you want to map more services, repeat the above command for every service. You can give the same name or different names for the output file.

- Transfer the keytab file to the NetScaler appliance by using the unix **ftp** command or any other file transfer utility of your choice. Upload the keytab file to the /nsconfig/krb/ directory on the NetScaler appliance.

3. The NetScaler appliance must obtain the IP address of the domain controller from the fully qualified domain name (FQDN). Therefore, Citrix recommends configuring the NetScaler with a DNS server.

```
ns-cli-prompt> add dns nameserver <ip-address>
```

**Note**

Alternatively, you can add static host entries or use any other means so that the NetScaler appliance can resolve the FQDN name of the domain controller to an IP address.

4. Configure the authentication action and then associate it to an authentication policy.
  - Configure the negotiate action. This configuration creates an action (profile) for an Active Directory server that is used as a Kerberos Key Distribution Center (KDC). The profile contains all the configuration data necessary to communicate with that AD KDC server.

```
ns-cli-prompt> add authentication negotiateAction <name> -domain <domain name> -domainUser <domain user name> -domainUserPasswd <domain user password> -defaultAuthenticationGroup <default authentication group> -keytab <string> -NTLMPath <string>
```

**Note:** For domain user and domain name configuration, go to client and use the klist command as shown in the following example:

```
Client: username @ AAA.LOCAL
```

```
Server: HTTP/onprem_idp.aaa.local @ AAA.LOCAL
```

```
add authentication negotiateAction <name> -domain -domainUser <HTTP/onprem_idp.aaa.local>
```

- Configure the negotiate policy and associate the negotiate action to this policy.

```
ns-cli-prompt> add authentication negotiatePolicy <name> <rule> <reqAction>
```

5. Create an authentication virtual server and associate the negotiate policy with it.

- Create an authentication virtual server.

```
ns-cli-prompt> add authentication vserver <name> SSL <ipAuthVserver> 443 -authenticationDomain <domainName>
```

- Bind the negotiate policy to the authentication virtual server.

```
ns-cli-prompt> bind authentication vserver <name> -policy <negotiatePolicyName>
```

6. Associate the authentication virtual server with the traffic management (load balancing or content switching) virtual server.

```
ns-cli-prompt> set lb vserver <name> -authn401 ON -authnVsName <string>
```



**Note**

Similar configurations can also be done on the content switching virtual server.

7. Verify the configurations by doing the following:

- Access the traffic management virtual server, using the FQDN. For example, [Sample](#)
- View the details of the session on the CLI.

```
ns-cli-prompt> show aaa session
```

### Configuring Kerberos authentication on the GUI

1. Enable the authentication, authorization, and auditing feature.

Navigate to **System > Settings**, click **Configure Basic Features** and enable the authentication, authorization, and auditing feature.

2. Add the keytab file as detailed in step 2 of the CLI procedure mentioned above.

3. Add a DNS server.

Navigate to **Traffic Management > DNS > Name Servers**, and specify the IP address for the DNS server.

4. Configure the **Negotiate** action and policy.

Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Policy**, and create a policy with **Negotiate** as the action type. Click **ADD** to create a new authentication negotiate server or click **Edit** to configure the existing details.

5. Bind the negotiate policy to the authentication virtual server.

Navigate to **Security > AAA - Application Traffic > Virtual Servers**, and associate the **Negotiate** policy with the authentication virtual server.

6. Associate the authentication virtual server with the traffic management (load balancing or content switching) virtual server.

Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and specify the relevant authentication settings.

**Note**

Similar configurations can also be done on the content switching virtual server.

7. Verify the configurations as detailed in step 7 of the CLI procedure mentioned above.

## Configure kerberos authentication on a client

May 2, 2023

Kerberos support must be configured on the browser to use Kerberos for authentication. You can use any Kerberos-compliant browser. Instructions for configuring Kerberos support on Internet Explorer and Mozilla Firefox follow. For other browsers, see the documentation of the browser.

### To configure Internet Explorer for Kerberos authentication

1. In the **Tools** menu select **Internet Options**.
2. On the **Security** tab, click **Local Intranet**, and then click **Sites**.
3. In the **Local Intranet** dialog box, make sure that the Automatically detect intranet network option is selected, and then click **Advanced**.
4. In the **Local Intranet** dialog box, add the web sites of the domains of the traffic management virtual server on the NetScaler appliance. The specified sites become local intranet sites.
5. Click **Close** or **OK** to close the dialog boxes.

### To configure Mozilla Firefox for Kerberos authentication

1. Make sure that you have Kerberos properly configured on your computer.
2. Type about:config in the URL bar.
3. In the filter text box, type network.negotiate.
4. Change network.negotiate-auth.delegation-uris to the domain that you want to add.
5. Change network.negotiate-auth.trusted-uris to the domain that you want to add.

**Note:** If you are running Windows, you also need to enter sspi in the filter text box and change the network.auth.use-sspi option to False.

## Offload Kerberos authentication from physical servers

May 2, 2023

The NetScaler appliance can offload authentication tasks from servers. Instead of the physical servers authenticating the requests from clients, the NetScaler authenticates all the client requests before it forwards them to any of the physical servers bound to it. The user authentication is based on Active Directory tokens.

There is no authentication between the NetScaler and the physical server, and the authentication offload is transparent to the end users. After the initial logon to a Windows computer, the end user does not have to enter any additional authentication information in a pop-up or on a logon page.

In the current NetScaler appliance release, Kerberos authentication is available only for authentication, authorization, and auditing traffic management virtual servers. Kerberos authentication is not supported for SSL VPN in the NetScaler Gateway Advanced Edition appliance or for NetScaler appliance management.

Kerberos authentication requires configuration on the NetScaler appliance and on client browsers.

## To configure Kerberos authentication on the NetScaler appliance

### Note

The passwords used in the following sample configuration are only examples and not the actual configuration passwords.

1. Create a user account on Active Directory. When creating a user account, verify the following options in the User Properties section:
  - Make sure that you do not select the Change password at next logon option.
  - Be sure to select the Password does not expire option.
2. On the AD server, at the CLI command prompt, type:
  - `ktpass -princ HTTP/kerberos.crete.lab.net@crete.lab.net -ptype KRB5_NT_PRINCIPAL -mapuser kerbuser@crete.lab.net -mapop set -pass Citrix1 -out C:\kerbtabfile.txt`

### Note

Be sure to type the above command on a single line. The output of the above command is written into the C:\kerbtabfile.txt file.

3. Upload the kerbtabfile.txt file to the /etc directory of the NetScaler appliance by using a Secure Copy (SCP) client.
4. Run the following command to add a DNS server to the NetScaler appliance.
  - `add dns nameserver 1.2.3.4`

The NetScaler appliance cannot process Kerberos requests without the DNS server. Be sure to use the same DNS server that is used in the Microsoft Windows domain.

5. Switch to the command line interface of NetScaler.
6. Run the following command to create a Kerberos authentication server:

- `add authentication negotiateAction KerberosServer -domain "crete.lab.net"-domainUser kerbuser -domainUserPasswd Citrix1 -keytab /var/mykcd.keytab`

**Note**

If keytab is not available, you can specify the parameters: domain, domainUser, and -domainUserPasswd.

7. Run the following command to create a negotiation policy:

- `add authentication negotiatePolicy Kerberos-Policy "REQ.IP.DESTIP == 192.168.17.200"KerberosServer`

8. Run the following command to create an authentication virtual server.

- `add authentication vserver Kerb-Auth SSL 192.168.17.201 443 -AuthenticationDomain crete.lab.net`

9. Run the following command to bind the Kerberos policy to the authentication virtual server:

- `bind authentication vserver Kerb-Auth -policy Kerberos-Policy -priority 100`

10. Run the following command to bind an SSL certificate to the authentication virtual server. You can use one of the test certificates, which you can install from the GUI NetScaler appliance. Run the following command to use the ServerTestCert sample certificate.

- `bind ssl vserver Kerb-Auth -certkeyName ServerTestCert`

11. Create an HTTP load balancing virtual server with the IP address, 192.168.17.200.

Ensure that you create a virtual server from the command line interface for NetScaler 9.3 releases if they are older than 9.3.47.8.

12. Run the following command to configure an authentication virtual server:

- `set lb vserver <name>-authn401 ON -authnVsName Kerb-Auth`

13. Enter the host name [Example](#) in the address bar of the Web browser.

The Web browser displays an authentication dialog box because the Kerberos authentication is not set up in the browser.

**Note**

Kerberos authentication requires a specific configuration on the client. Ensure that the client can resolve the hostname, which results in the Web browser connecting to an HTTP virtual server.


14. Configure Kerberos on the Web browser of the client computer.
  - For configuring on Internet Explorer, see [Configuring Internet Explorer for Kerberos authentication](#).
  - For configuring on Mozilla Firefox, see [Configuring Internet Explorer for Kerberos authentication](#).
15. Verify whether you can access the backend physical server without authentication.

### To configure Internet Explorer for Kerberos authentication

1. Select **Internet Options** from the **Tools** menu.
2. Activate the **Security** tab.
3. Select **Local Intranet** from the Select a zone to view change security settings section.
4. Click **Sites**.
5. Click **Advanced**.
6. Specify the URL, [Example](#) and click **Add**.
7. Restart **Internet Explorer**.

### To configure Mozilla Firefox for Kerberos authentication

1. Enter about:config in the address bar of the browser.
2. Click the warning disclaimer.
3. Type **Network.Negotiate-auth.trusted-uris** in the **Filter** box.
4. Double click **Network.Negotiate-auth.trusted-uris**. A sample screen is shown below.

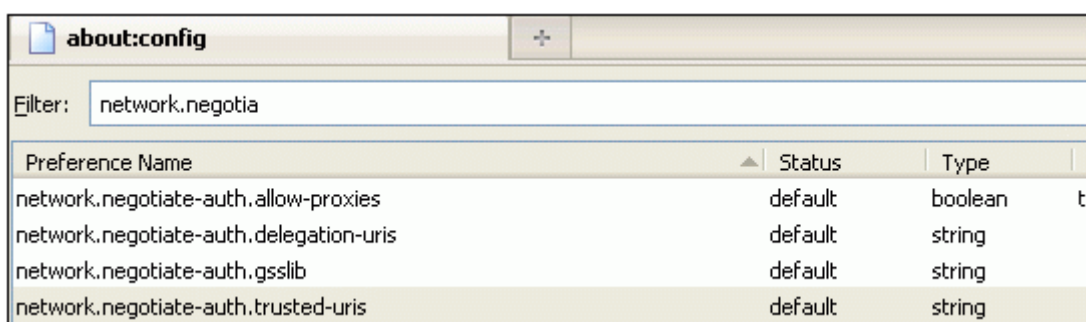

5. In the Enter String Value dialog box, specify www.crete.lab.net.
6. Restart Firefox.

## Single sign-on types

May 2, 2023

NetScaler Authentication, authorization, and auditing features supports the following single sign-on types.

- **NetScaler kerberos single sign-on:** NetScaler appliances now support single sign-on (SSO) using the Kerberos 5 protocol. Users log on to a proxy, the Application Delivery Controller (ADC), which then provides access to protected resources. For details, see [NetScaler kerberos single sign-on](#).
- **SSO for Basic, Digest, and NTLM authentication:** Single Sign-On (SSO) configuration in NetScaler and NetScaler Gateway can be enabled at global level and also per traffic level. By default the SSO configuration is OFF and an administrator can enable the SSO per traffic or globally. From a security point of view, Citrix recommends administrators to turn SSO globally OFF and enable per traffic basis. This enhancement is to make SSO configuration more secure by disabling certain type of SSO methods globally. For details, see [SSO for Basic, Digest, and NTLM authentication](#).

## NetScaler kerberos single sign-on

May 2, 2023

NetScaler appliances now support single sign-on (SSO) using the Kerberos 5 protocol. Users log on to a proxy, the Application Delivery Controller (ADC), which then provides access to protected resources.

The NetScaler Kerberos SSO implementation requires the user's password for SSO methods that rely on basic, NTLM, or forms-based authentication. The user's password is not required for Kerberos SSO, although if Kerberos SSO fails and the NetScaler appliance has the user's password, it uses the password to attempt NTLM SSO.

If the user's password is available, the KCD account is configured with a realm, and no delegated user information is present, the Citrix AD Kerberos SSO engine impersonates the user to obtain access to authorized resources. Impersonation is also called unconstrained delegation.

The NetScaler Kerberos SSO engine can also be configured to use a delegated account to obtain access to protected resources on the user's behalf. This configuration requires delegated user credentials, a keytab, or a delegated user certificate and matching CA certificate. Configuration that uses a delegated account is called constrained delegation.


## An overview of NetScaler kerberos SSO

May 2, 2023

To use the NetScaler Kerberos SSO feature, users first authenticate with Kerberos or a supported third-party authentication server. Once authenticated, the user requests access to a protected web application. The web server responds with a request for proof that the user is authorized to access that web application. The user's browser contacts the Kerberos server, which verifies that the user is authorized to access that resource, and then provides the user's browser with a service ticket that provides proof. The browser resends the user's request to the web application server with the service ticket attached. The web application server verifies the service ticket, and then allows the user to access the application.

Authentication, authorization, and auditing traffic management implements this process as shown in the following diagram. The diagram illustrates the flow of information through the NetScaler appliance and authentication, authorization, and auditing traffic management, on a secure network with LDAP authentication and Kerberos authorization. Authentication, authorization, and auditing traffic management environments that use other types of authentication have essentially the same information flow, although they might differ in some details.

Figure 1. A Secure Network with LDAP and Kerberos

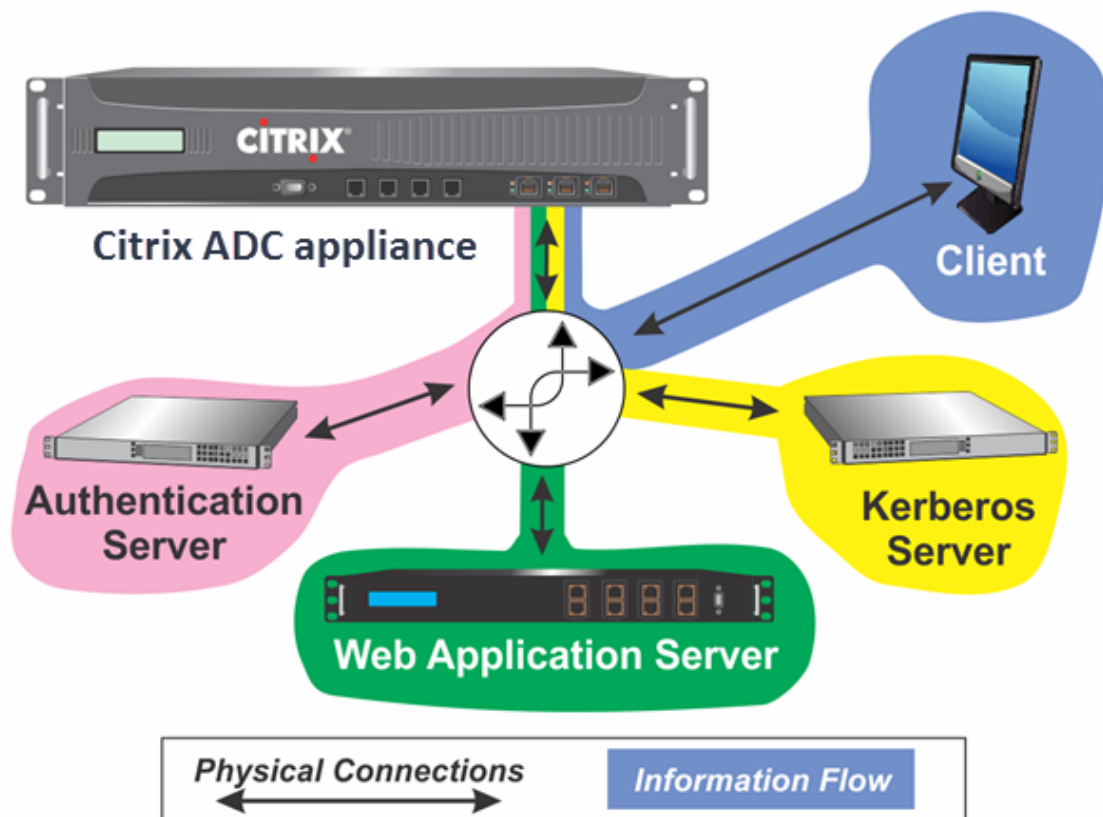

The authentication, authorization, and auditing traffic management with authentication and authorization in a Kerberos environment requires that the following actions take place.

1. The client sends a request for a resource to the traffic management virtual server on the NetScaler appliance.
2. The traffic management virtual server passes the request to the authentication virtual server, which authenticates the client and then passes the request back to the traffic management virtual server.
3. The traffic management virtual server sends the client's request to the web application server.
4. The web application server responds to the traffic management virtual server with a 401 Unauthorized message that requests Kerberos authentication, with fallback to NTLM authentication if the client does not support Kerberos.
5. The traffic management virtual server contacts the Kerberos SSO daemon.
6. The Kerberos SSO daemon contacts the Kerberos server and obtains a ticket-granting ticket (TGT) allowing it to request service tickets authorizing access to protected applications.
7. The Kerberos SSO daemon obtains a service ticket for the user and sends that ticket to the traffic management virtual server.
8. The traffic management virtual server attaches the ticket to the user's initial request and sends the modified request back to the web application server.
9. The web application server responds with a 200 OK message.

These steps are transparent to the client, which just sends a request and receives the requested resource.

### **Integration of NetScaler Kerberos SSO with authentication methods**

All authentication, authorization, and auditing traffic management authentication mechanisms support NetScaler Kerberos SSO. Authentication, authorization, and auditing traffic management supports the Kerberos SSO mechanism with the Kerberos, CAC (Smart Card) and SAML authentication mechanisms with any form of client authentication to the NetScaler appliance. It also supports the HTTP-Basic, HTTP-Digest, Forms-based, and NTLM (versions 1 and 2) SSO mechanisms if the client uses either HTTP-Basic or Forms-Based authentication to log on to the NetScaler appliance.

The following table shows each supported client-side authentication method, and the supported server-side authentication method for that client-side method.

Table 1. Supported Authentication Methods



|                                          | Basic/Digest/NTLM | Kerberos Constrained |                    |
|------------------------------------------|-------------------|----------------------|--------------------|
|                                          |                   | Delegation           | User Impersonation |
| CAC (Smart Card): at<br>SSL/TLS Layer    |                   | X                    | X                  |
| Forms-Based<br>(LDAP/RADIUS/TA-<br>CACS) | X                 | X                    | X                  |
| HTTP Basic (LDAP/RA-<br>DIUS/TACACS)     | X                 | X                    | X                  |
| Kerberos                                 |                   | X                    |                    |
| NT LM v1/v2                              |                   | X                    | X                  |
| SAML                                     |                   | X                    |                    |
| SAML Two-Factor                          | X                 | X                    | X                  |
| Certificate Two-Factor                   | X                 | X                    | X                  |

## Set up NetScaler SSO

May 2, 2023

You can configure NetScaler SSO to work in one of two ways: by impersonation or by delegation. SSO by impersonation is a simpler configuration than SSO by delegation, and is therefore preferable when your configuration allows it. To configure NetScaler SSO by impersonation, you must have the user's user name and password.

To configure NetScaler SSO by delegation, you must have the delegated user's credentials in one of the following formats: the user's user name and password, the keytab configuration that includes the user name and an encrypted password, or the delegated user certificate and the matching CA certificate.

### Prerequisites for configuring NetScaler SSO

Before you configure a NetScaler SSO, you need to have your NetScaler appliance fully configured to manage traffic to and authentication for your web application servers. Therefore, you must configure either load balancing or content switching, and then authentication, authorization, and auditing, for these web application servers. You must also verify the routing between the appliance, your LDAP server, and your Kerberos server.

If your network is not already configured in this manner, perform the following configuration tasks:

- Configure a server and service for each web application server.
- Configure a traffic management virtual server to handle traffic to and from your web application server.

Following are brief instructions and examples for performing each of these tasks from the NetScaler command line. For further assistance, see [Setting up an Authentication Virtual Server](#).

#### Note

From NetScaler 13.1 release onwards, the traversal between Root domain and Tree domain is supported during Kerberos SSO authentication for backend server from the NetScaler appliance.

### To create a server and service by using the CLI

For NetScaler SSO to obtain a TGS (service ticket) for a service, either the FQDN assigned to the server entity on the NetScaler appliance must match the FQDN of the web application server, or the server entity name must match the NetBios name of the web application server. You can take either of the following approaches:

- Configure the NetScaler server entity by specifying the FQDN of the web application server.
- Configure the NetScaler server entity by specifying the IP address of the web application server, and assign the server entity the same name as the NetBios name of the web application server.

At the command prompt, type the following commands:

```
1 - add server name <serverFQDN>
2
3 - add service name serverName serviceType port
```

For the variables, substitute the following values:

- **serverName**. A name for the NetScaler appliance to use to refer to this server.
- **serverFQDN**. The FQDN of the server. If the server has no domain assigned to it, use the server's IP address and make sure that the server entity name matches the NetBios name of the web application server.
- **serviceName**. A name for the NetScaler appliance to use to refer to this service.
- **type**. The protocol used by the service, either HTTP or MSSQLSVC.
- **port**. The port on which the service listens. HTTP services normally listen on port 80. Secure HTTPS services normally listen on port 443.

#### Example:

The following examples add server and service entries on the NetScaler appliance for the web application server was1.example.com. The first example uses the FQDN of the web application server; the second uses the IP address.

To add the server and service using the web application server FQDN, was1.example.com, you would type the following commands:

```
1 add server was1 was1.example.com
2 add service was1service was1 HTTP 80
```

To add the server and service using the web application server IP and NetBios name, where the web application server IP is 10.237.64.87 and its NetBios name is WAS1, you would type the following commands:

```
1 add server WAS1 10.237.64.87
2 add service was1service WAS1 HTTP 80
```

### To create a traffic management virtual server by using the CLI

The traffic management virtual server manages traffic between the client and the web application server. You can use either a load balancing or a content switching virtual server as the traffic management server. The SSO configuration is the same for either type.

To create a load balancing virtual server, at the command prompt, type the following command:

```
1 add lb vservice <vserviceName> <type> <IP> <port>
```

For the variables, substitute the following values:

- **vserviceName**—A name for the NetScaler appliance to use to refer to this virtual server.
- **type**—The protocol used by the service, either HTTP or MSSQLSVC.
- **IP**—The IP address assigned to the virtual server. This would normally be an IANA-reserved, non-public IP address on your LAN.
- **port**—The port on which the service listens. HTTP services normally listen on port 80. Secure HTTPS services normally listen on port 443.

### Example:

To add a load balancing virtual server called tmvserv1 to a configuration that manages HTTP traffic on port 80, assigning it a LAN IP address of 10.217.28.20 and then binding the load balancing virtual server to the wasservice1 service, you would type the following commands:

```
1 add lb vservice tmvserv1 HTTP 10.217.28.20 80
2 bind lb vservice tmvserv1 wasservice1
```

## To create an authentication virtual server by using the CLI

The authentication virtual server manages authentication traffic between the client and the authentication (LDAP) server. To create an authentication virtual server, at the command prompt type the following commands:

```
1 add authentication vserver <authvserverName> SSL <IP> 443
```

For the variables, substitute the following values:

- **authvserverName**—A name for the NetScaler appliance to use to refer to this authentication virtual server. Must begin with a letter, number, or the underscore character (\_), and must contain only letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), colon (:), and underscore characters. Can be changed after the authentication virtual server is added by using the rename authentication vserver command.
- **IP**—The IP address assigned to the authentication virtual server. As with the traffic management virtual server, this address would normally be an IANA-reserved, non-public IP on your LAN.
- **domain**—The domain assigned to the virtual server. This would usually be the domain of your network. It is customary, though not required, to enter the domain in all capitals when configuring the authentication virtual server.

### Example:

To add an authentication virtual server called authvserver1 to your configuration and assign it the LAN IP 10.217.28.21 and the domain EXAMPLE.COM, you would type the following commands:

```
1 add authentication vserver authvserver1 SSL 10.217.28.21 443
```

## To configure a traffic management virtual server to use an authentication profile

The authentication virtual server can be configured to handle authentication for a single domain or for multiple domains. If it is configured to support authentication for multiple domains, you must also specify the domain for NetScaler SSO by creating an authentication profile, and then configuring the traffic management virtual server to use that authentication profile.

### Note

The traffic management virtual server can be either a load balancing (lb) or content switching (cs) virtual server. The following instructions assume that you are using a load balancing virtual server. To configure a content switching virtual server, simply substitute set cs vserver for set lb vserver. The procedure is otherwise the same.

To create the authentication profile, and then configure the authentication profile on a traffic management virtual server, type the following commands:

```
1 - add authentication authnProfile <authnProfileName> {
2 -authvserverName <string> }
3 {
4 -authenticationHost <string> }
5 {
6 -authenticationDomain <string> }
7
8 - set lb vserver \<vserverName\> -authnProfile <authnprofileName>
```

For the variables, substitute the following values:

- **authnprofileName**—A name for the authentication profile. Must begin with a letter, number, or the underscore character (\_), and must consist of from one to thirty-one alphanumeric or hyphen (-), period (.), pound (#), space ( ), at (@), equals (=), colon (:), and underscore characters.
- **authvserverName**—The name of the authentication virtual server that this profile uses for authentication.
- **authenticationHost**—Host name of the authentication virtual server.
- **authenticationDomain**—Domain for which NetScaler SSO handles authentication. Required if the authentication virtual server performs authentication for more than one domain, so that the correct domain is included when the NetScaler appliance sets the traffic management virtual server cookie.

### Example:

To create an authentication profile named authnProfile1 for authentication of the example.com domain, and to configure the load balancing virtual server vserver1 to use the authentication profile authnProfile1, you would type the following commands:

```
1 add authentication authnProfile authnProfile1 -authnvsName
 authvserver1
2 -authenticationHost authvserver1 -authenticationDomain example.
 com
3 set lb vserver vserver1 -authnProfile authnProfile1
```

## Configure single sign-on

May 8, 2023

Configuring NetScaler single sign-on (SSO) to authenticate by impersonation is simpler than configuring than SSO to authenticate by delegation, and is therefore preferable when your configuration allows it. You create a KCD account. You can use the user's password.

If you do not have the user's password, you can configure NetScaler SSO to authenticate by delegation. Although more complex than configuring SSO to authenticate by impersonation, the delegation method provides flexibility in that a user's credentials might not be available to the NetScaler appliance in all circumstances.

For either impersonation or delegation, you must also enable integrated authentication on the web application server.

### **Enable integrated authentication on the web application server**

To set up NetScaler Kerberos SSO on each web application server that Kerberos SSO manages, use the configuration interface on that server to configure the server to require authentication. Select Kerberos (negotiate) authentication by preference, with fallback to NTLM for clients that do not support Kerberos.

Following are instructions for configuring the Microsoft Internet Information Server (IIS) to require authentication. If your web application server uses software other than IIS, consult the documentation for that web server software for instructions.

#### **To configure Microsoft IIS to use integrated authentication**

1. Log on to the IIS server and open **Internet Information Services Manager**.
2. Select the website for which you want to enable integrated authentication. To enable integrated authentication for all IIS web servers managed by IISM, configure authentication settings for the Default website. To enable integrated authentication for individual services (such as Exchange, Exadmin, ExchWeb, and Public), configure these authentication settings for each service individually.
3. Open the **Properties** dialog box for the default website or for the individual service, and click the **Directory Security** tab.
4. Beside **Authentication** and **Access Control**, select **Edit**.
5. Disable anonymous access.
6. Enable Integrated Windows authentication (only). Enabling integrated Windows authentication must automatically set protocol negotiation for the web server to Negotiate, NTLM, which specifies Kerberos authentication with fallback to NTLM for non-Kerberos capable devices. If this option is not automatically selected, manually set protocol negotiation to Negotiate, NTLM.

### **Set up SSO by impersonation**

You can configure the KCD account for NetScaler SSO by impersonation. In this configuration, the NetScaler appliance obtains the user's user name and password when the user authenticates to the

authentication server and uses those credentials to impersonate the user to obtain a ticket-granting ticket (TGT). If the user's name is in UPN format, the appliance obtains the user's realm from UPN. Otherwise, it obtains the user's name and realm by extracting it from the SSO domain used during initial authentication, or from the session profile.

**Note**

You cannot add a user name with domain if the user name is already added without domain. If the user name with domain is added first followed by the same user name without domain, then the NetScaler appliance adds the user name to the user list.

When configuring the KCD account, you must set the realm parameter to the realm of the service that the user is accessing. The same realm is also used as the user's realm if the user's realm cannot be obtained from authentication with the NetScaler appliance or from the session profile.

**To create the KCD account for SSO by impersonation with a password**

At the command prompt, type the following command:

```
1 add aaa kcdaccount <accountname> -realmStr <realm>
```

For the variables, substitute the following values:

- **accountname**. The KCD account name.
- **realm**. The domain assigned to the NetScaler SSO.

**Example**

To add a KCD account named kcdaccount1, and use the keytab named kcdvserver.keytab, you would type the following command:

```
1 add aaa kcdAccount kcdaccount1 -keytab kcdvserver.keytab
```

For information on configuring Kerberos impersonation through the NetScaler GUI, see [NetScaler support](#).

**Configure SSO by delegation**

To configure SSO by Delegation, you need to perform the following tasks:

- If you are configuring delegation by delegated user certificate, install the matching CA certificates on the NetScaler appliance and add them to the NetScaler configuration.

- Create the KCD account on the appliance. The appliance uses this account to obtain service tickets for your protected applications.
- Configure the Active Directory server.

**Note**

For more information on creating a KCD account and configuring on the NetScaler appliance, refer to the following topics:

- [Handling authentication, authorization and auditing with Kerberos/NTLM](#)
- [How NetScaler implements Kerberos for client authentication](#)
- [Configuring kerberos authentication on the NetScaler appliance](#)

**Installing the client CA certificate on the NetScaler appliance**

If you are configuring the NetScaler SSO with a client certificate, you must copy the matching CA certificate for the client certificate domain (the client CA certificate) to the NetScaler appliance, and then install the CA certificate. To copy the client CA certificate, use the file transfer program of your choice to transfer the certificate and private-key file to the NetScaler appliance, and store the files in `/nsconfig/ssl`.

**To install the client CA certificate on the NetScaler appliance** At the command prompt, type the following command:

```
1 add ssl certKey <certkeyName> -cert <cert> [(-key <key> [-password]) |
 -fipsKey <fipsKey>][-inform (DER | PEM)][-expiryMonitor (ENABLED
 | DISABLED | UNSET) [-notificationPeriod <positive_integer>]] [-
 bundle (YES | NO)]
```

For the variables, substitute the following values:

- **certkeyName.** A name for the client CA certificate. Must begin with an ASCII alphanumeric or underscore ( `_` ) character, and must consist of from one to thirty-one characters. Allowed characters include the ASCII alphanumerics, underscore, hash ( `#` ), period ( `.` ), space, colon ( `:` ), at ( `@` ), equals ( `=` ), and hyphen ( `-` ) characters. Cannot be changed after the certificate-key pair is created. If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, “my cert” or ‘my cert’).
- **cert.** Full path name and file name of the X509 certificate file used to form the certificate-key pair. The certificate file must be stored on the NetScaler appliance, in the `/nsconfig/ssl/` directory.
- **key.** Full path name and file name of the file that contains the private key to the X509 certificate file. The key file must be stored on the NetScaler appliance in the `/nsconfig/ssl/` directory.



- **password.** If a private key is specified, the passphrase used to encrypt the private key. Use this option to load encrypted private keys in PEM format.
- **fipsKey.** Name of the FIPS key that was created inside the Hardware Security Module (HSM) of a FIPS appliance, or a key that was imported into the HSM.

**Note**

You can specify either a key or a fipsKey, but not both.

- **inform.** Format of the certificate and private-key files, either PEM or DER.
- **passplain.** Passphrase used to encrypt the private key. Required when adding an encrypted private-key in PEM format.
- **expiryMonitor.** Configure the NetScaler appliance to issue an alert when the certificate is about to expire. Possible values: ENABLED, DISABLED, UNSET.
- **notificationPeriod.** If `expiryMonitor` is ENABLED, the number of days before the certificate expires to issue an alert.
- **bundle.** Parse the certificate chain as a single file after linking the server certificate to its issuer's certificate within the file. Possible values: YES, NO.

### Example

The following example adds the specified delegated user certificate `customer-cert.pem` to the NetScaler configuration along with the key `customer-key.pem`, and sets the password, certificate format, expiration monitor, and notification period.

To add the delegated user certificate, you would type the following commands:

```
1 add ssl certKey customer -cert "/nsconfig/ssl/customer-cert.pem"
2 -key "/nsconfig/ssl/customer-key.pem" -password "dontUseDefaultPWs!"
3 -inform PEM -expiryMonitor ENABLED [-notificationPeriod 14]
```

### Creating the KCD account

If you are configuring NetScaler SSO by delegation, you can configure the KCD account to use the user's log-on name and password, to use the user's log-on name and keytab, or to use the user's client certificate. If you configure SSO with user name and password, the NetScaler appliance uses the delegated user account to obtain a Ticket Granting Ticket (TGT), and then uses the TGT to obtain service tickets for the specific services that each user requests. If you configure SSO with keytab file, the NetScaler appliance uses the delegated user account and keytab information. If you configure SSO with a delegated user certificate, the NetScaler appliance uses the delegated user certificate.

**Note:**

For cross-realm, the servicePrincipalName of the delegated user must be in the format `host /<name>`. If it is not in this format, change the servicePrincipalName of the delegated user `<servicePrincipalName>` to `host/<service-account-samaccountname>`. You can check the attribute of the delegated user account in the domain controller. One method to change is to change the delegated user's `logonName` attribute.

**To create the KCD account for SSO by delegation with a password** At the command prompt, type the following commands:

```
1 add aaa kcdAccount <kcdAccount> {
2 -realmStr <string> }
3 {
4 -delegatedUser <string> }
5 {
6 -kcdPassword }
7 [-userRealm <string>]
8 [-enterpriseRealm <string>] [-serviceSPN <string>]
```

For the variables, substitute the following values:

- **kcdAccount** - A name for the KCD account. This is a mandatory argument. Maximum Length: 31
- **realmStr** - The realm of Kerberos. Maximum Length: 255
- **delegatedUser** - The user name that can perform kerberos constrained delegation. The delegated user name is derived from the servicePrincipalName of your domain controller. For cross-realm, the servicePrincipalName of the delegated user must be in the format `host/<name>`. Maximum Length: 255.
- **kcdPassword** - Password for Delegated User. Maximum Length: 31
- **userRealm** - Realm of the user. Maximum Length: 255
- **enterpriseRealm** - Enterprise Realm of the user. This is given only in certain KDC deployments where KDC expects Enterprise user name instead of Principal Name. Maximum Length: 255
- **serviceSPN** - Service SPN. When specified, this is used to fetch kerberos tickets. If not specified, NetScaler constructs SPN using the service FQDN. Maximum Length: 255

**Example (UPN Format):**

To add a KCD account named `kcdaccount1` to the NetScaler appliance configuration with a password of `password1` and a realm of `EXAMPLE.COM`, specifying the delegated user account in UPN format (as root), you would type the following commands:

```
1 add aaa kcdaccount kcdaccount1 -delegatedUser root
2 -kcdPassword password1 -realmStr EXAMPLE.COM
```

**Example (SPN Format):**

To add a KCD account named `kcdaccount1` to the NetScaler appliance configuration with a password of `password1` and a realm of `EXAMPLE.COM`, specifying the delegated user account in SPN format, you would type the following commands:

```
1 add aaa kcdAccount kcdaccount1 -realmStr EXAMPLE.COM
2 -delegatedUser "host/kcdvserver.example.com" -kcdPassword password1
```

**Creating the KCD account for SSO by delegation with a keytab** If you plan to use a keytab file for authentication, first create the keytab. You can create the keytab file manually by logging on to the AD server and using the `ktpass` utility, or you can use the NetScaler configuration utility to create a batch script, and then run that script on the AD server to generate the keytab file. Next, use FTP or another file transfer program to transfer the keytab file to the NetScaler appliance and place it in the `/nsconfig/krb` directory. Finally, configure the KCD account for NetScaler SSO by delegation and provide the path and file name of the keytab file to the NetScaler appliance.

**Note:**

For cross-realm, if you want to get the Keytab file as part of the KCD account, use the following command for the updated delegated user name.

In the domain controller, create an updated Keytab file.

```
ktpass /princ <servicePrincipalName-with-prefix<host/>Of-delegateUser
>@<DC REALM in uppercase> /ptype KRB5_NT_PRINCIPAL /mapuser <DC
REALM in uppercase>\<sAMAccountName> /pass <delegatedUserPassword
> -out filepathfor.keytab
```

The `filepathfor.keytab` file can be placed in the NetScaler appliance and can be used as part of the Keytab configuration in the ADC KCD account.

**To create the keytab file manually** Log on to the AD server command line and, at the command prompt, type the following command:

```
1 ktpass princ <SPN> ptype KRB5_NT_PRINCIPAL mapuser <DOMAIN><username>
pass <password> -out <File_Path>
```

For the variables, substitute the following values:

- **SPN.** The service principal name for the KCD service account.
- **DOMAIN.** The domain of the Active Directory server.
- **username.** The KSA account user name.
- **password.** The KSA account password.
- **path.** The full path name of the directory in which to store the keytab file after it is generated.

**To use the NetScaler configuration utility to create a script to generate the keytab file**

1. Navigate to **Security > AAA - Application Traffic**.
2. In the data pane, under **Kerberos Constrained Delegation**, click **Batch** file to generate Keytab.
3. In the **Generate KCD (Kerberos Constrained Delegation) Keytab Script** dialog box, set the following parameters:
  - **Domain User Name**. The KSA account user name.
  - **Domain Password**. The KSA account password.
  - **Service Principal**. The service principal name for the KSA.
  - **Output File Name**. The full path and file name to which to save the keytab file on the AD server.
4. Clear the **Create Domain User Account** check box.
5. Click **Generate Script**.
6. Log on to the Active Directory server and open a command line window.
7. Copy the script from the **Generated Script** window and paste it directly into the Active Directory server command-line window. The keytab is generated and stored in the directory under the file name that you specified as **Output File Name**.
8. Use the file transfer utility of your choice to copy the keytab file from the Active Directory server to the NetScaler appliance and place it in the /nsconfig/krb directory.

**To create the KCD account** At the command prompt, type the following command:

```
1 add aaa kcdaccount <accountname> - keytab <keytab>
```

**Example**

To add a KCD account named kcdccount1, and use the keytab named kcdvserver.keytab, you would type the following commands:

```
1 add aaa kcdaccount kcdccount1 - keytab kcdvserver.keytab
```

**To create the KCD account for SSO by delegation with a delegated user cert** At the command prompt, type the following command:

```
1 add aaa kcdaccount <accountname> -realmStr <realm> -delegatedUser <
 user_nameSPN> -usercert <cert> -cacert <cacert>
```

For the variables, substitute the following values:

- **accountname**. A name for the KCD account.
- **realmStr**. The realm for the KCD account, usually the domain for which SSO is configured.
- **delegatedUser**. The delegated user name, in SPN format.

- **usercert.** The full path and name of the delegated user certificate file on the NetScaler appliance. The delegated user certificate must contain both the client certificate and the private key, and must be in PEM format. If you use smart card authentication, you must create a smart card certificate template to allow certificates to be imported with the private key.
- **cacert.** The full path to and name of the CA certificate file on the NetScaler appliance.

#### Example

To add a KCD account named `kcdccount1`, and use the keytab named `kcdvserver.keytab`, you would type the following command:

```
1 add aaa kcdaccount kcdaccount1 -realmStr EXAMPLE.COM
2 -delegatedUser "host/kcdvserver.example.com" -usercert /certs/
 usercert
3 -cacert /cacerts/cacert
```

### Setting up Active Directory for NetScaler SSO

When you configure SSO by delegation, in addition to creating the KCDAccount on the NetScaler appliance, you must also create a matching Kerberos Service Account (KSA) on your LDAP active directory server, and configure the server for SSO. To create the KSA, use the account creation process on the active directory server. To configure SSO on the active directory server, open the properties window for the KSA. In the **Delegation** tab, enable the following options: Trust this user for delegation to specified services only and Use any Authentication protocol. (The Kerberos only option does not work, because it does not enable protocol transition or constrained delegation.) Finally, add the services that NetScaler SSO manages.

#### Note:

If the Delegation tab is not visible in the KSA account properties dialog box, before you can configure the KSA as described, you must use the Microsoft `setspn` command line tool to configure the active directory server so that the tab is visible.

### To configure delegation for the Kerberos service account

1. In the LDAP account configuration dialog box for the Kerberos service account that you created, click the **Delegation** tab.
2. Choose **Trust this user for delegation to the specified services only**.
3. Under Trust this user for delegation to the specified services only, choose **Use any authentication protocol**.
4. Under Services to which this account can present delegated credentials, click **Add**.

5. In the **Add Services** dialog box, click **Users** or **Computers**, choose the server that hosts the resources to be assigned to the service account, and then click **OK**.

**Note:**

- Constrained delegation does not support services hosted in domains other than the domain assigned to the account, even though Kerberos might have a trust relationship with other domains.
- Use the following command to create the `setspn` if a new user is created in the active directory: `setspn -A host/kcdvserver.example.com example\kcdtest`

6. Back in the **Add Services** dialog box, in the Available Services list, chooses the services assigned to the service account. NetScaler SSO supports the HTTP and MSSQLSVC services.
7. Click **OK**.

### Configuration changes to enable KCD to support child domains

If the KCD account is configured with `samAccountName` for `-delegatedUser`, KCD does not work for users accessing services from child domains. In this case, you can modify the configuration on the NetScaler appliance and the Active Directory.

- Change service account `<service-account-samaccountname>` (which is configured as `delegateUser` on the KCD Account) logon name on AD in `host/<service-account-samaccountname>.<completeUSERDNSDOMAIN>` format (for example, `host/svc_act.child.parent.com`).

You can change the service account manually or by using the `ktpass` command. The `ktpass` automatically updates the service account.

```
ktpass /princ host/svc_act.child.parent.com@CHILD.PARENT.COM /
ptype KRB5_NT_PRINCIPAL /mapuser CHILD\sv_act /pass serviceaccountpassword
-out filepathfor.keytab
```

- Modify `delegatedUser` in KCD account on the NetScaler appliance.
- Modify the `-delegatedUser` parameter in the KCD account as `host/svc_act.child.parent.com`

### Points to note when advanced encryptions are used to configure KCD account

- **Sample configuration when keytab is used:** `add kcdaccount lbvs_keytab_aes256 -keytab "/nsconfig/krb/kcd2_aes256.keytab"`
- **Sample command when keytab has multiple encryption types.** The command also captures domain user parameters: `add kcdaccount lbvs_keytab_aes256 -keytab "/nsconfig/krb/kcd2_aes256.keytab"-domainUser "HTTP/lbvs.aaa.local"`
- **Sample command when user credentials are used:** `add kcdaccount kslb2_user -realmStr AAA.LOCAL -delegatedUser lbvs -kcdPassword <password>`

### Domain user information

When advanced encryption types are used for Kerberos SSO, ensure that the correct domain user information is provided. You can get the information about the user login name from Active Directory.

**When configuring NetScaler SSO using Kerberos delegation** When advanced encryption types are used for Kerberos SSO using delegation, the `delegatedUser` parameter of the `add aaa kcdaccount` command must be the service principal name (SPN) of the user. The service principal name is case sensitive.

To know the service principal name of a user, use the `setspn -L <domain\user>` command on the Active Directory domain controller. For example, `setspn -L EXAMPLE\username`

To set the service principal name, use the `setspn` command on the Active Directory domain controller. To create a keytab file, use the `ktpass` command on the Active Directory domain controller. The following is an example of how to do so:

- **setspn:** `setspn -S host/username.example.com EXAMPLE\username`
- **keytab:** `ktpass /princ host/username.example.com@EXAMPLE.COM /ptype KRB5_NT_PRINCIPAL /mapuser EXAMPLE.COM\username /pass XXXX /crypto AES256-SHA1 -out <pathto.keytab.file>`

Once the above actions are performed on Active Directory, update the KCD account with the configured SPN by using the `add kcdaccount` or the `setkcdaccount` commands on the NetScaler CLI.

To view the SPN of the specific user account, navigate to the **User Properties** section of **Active Directory**.

**When configuring NetScaler SSO using Kerberos impersonation** When advanced encryption types are used for Kerberos SSO using impersonation, ensure that the SSO credentials are used with

the correct service principal name of the end user. If the end user login credentials do not work with a Kerberos SSO, then configure the appropriate user expression to set the SSO user name.

When the user principal name is the correct service principal name of the end user on Active Directory, then:

- Use the `ssoNameAttribute` parameter in the `LDAPAction` command to set the SSO user name if LDAP authentication is used for end user login.

Example: `set authentication ldapAction ldap_act -ssoNameAttribute userPrincipalName`

- Use the `userExpression` parameter in the `trafficAction` command if any other authentication method is used for user login. For example, if user attribute1 has the user principal name stored, then you can use `AAA.USER.ATTRIBUTE(1)` with the traffic action.

Example: `add tm traffic action traf_act -userExpression AAA.USER.ATTRIBUTE(1)`

## Generate the KCD keytab script

May 2, 2023

The KCD Keytab Script dialog box generates the keytab script, which in turn generates the keytab file necessary to configure KCD on the NetScaler.

### To generate the KCD keytab script by using the configuration utility

1. Navigate to **Security > AAA - Application Traffic**.
2. In the details pane, under **Kerberos Constrained Delegation**, click Batch file to generate keytab.
3. In the Generate KCD (Kerberos Constrained Delegation) **Keytab Script** dialog box, fill out the fields as described below.
  - **Domain User Name:** The name of the domain user.
  - **Domain Password:** The password for the domain user.
  - **Service Principal:** The service principal.
  - **Output File Name:** A filename for the KCD script file.
  - **Create Domain User Account:** Select this check box to create the specified domain user account.



4. Click **Generate Script** to generate the script. The script is generated, and appears in the **Generated Script** text box below the **Generate Script** button.
5. Copy the script, and save it as a file on your AD domain controller. You must now run this script on the domain controller to generate the keytab file, and then copy the keytab file to the /nsconfig/krb/ directory on the NetScaler appliance.
6. Click **OK**.

## SSO for Basic, Digest, and NTLM authentication

May 2, 2023

Single Sign-On (SSO) configuration in NetScaler and NetScaler Gateway can be enabled at global level and also per traffic level. By default the SSO configuration is **OFF** and an administrator can enable the SSO per traffic or globally. From a security point of view, Citrix recommends administrators to turn SSO globally **OFF** and enable per traffic basis. This enhancement is to make SSO configuration more secure by dishonoring certain type of SSO methods globally.

### Note:

From NetScaler feature release 13.0 build 64.35 and above, the following SSO types are dishonored globally.

- Basic authentication
- Digest Access authentication
- NTLM without Negotiate NTLM2 Key or Negotiate Sign

### Non-impacted SSO types

The following SSO types are not impacted with this enhancement.

- Kerberos authentication
- SAML authentication
- Form based authentication
- OAuth bearer authentication
- NTLM with Negotiate NTLM2 Key or Negotiate Sign

### Impacted SSO configurations

Following are the impacted (dishonored) SSO configurations.

## Global configurations

```
1 set tmsessionparam -SSO ON
2 set vpnparameter -SSO ON
3 add tmsessionaction tm_act -SSO ON
4 add vpn sessionaction tm_act -SSO ON
```

## Per traffic configurations

```
1 add vpn trafficaction tf_act http -SSO ON
2 add tm trafficaction tf_act -SSO ON
```

You can enable/disable SSO as a whole and cannot modify individual SSO types.

## Security measures to be applied

As part of the security measures, security sensitive SSO types are dishonored in the global configuration but are allowed only through a Traffic action configuration.

So, if a back-end server expects Basic, Digest, or NTLM without Negotiate NTLM2 Key or Negotiate Sign, the administrator can allow SSO only through the following configuration.

### Traffic Action

```
1 add vpn trafficaction tf_act http -SSO ON
2 add tm trafficaction tf_act -SSO ON
```

### Traffic Policy

```
1 add tm trafficpolicy <name> <rule> tf_act
2 add vpn trafficpolicy <name> <rule> tf-act
```

Administrator must have an appropriate rule configured for traffic policy to make sure SSO is enabled for only trusted back-end server.

## AAA-TM

### Scenarios based on global configuration:

```
1 set tmsessionparam -SSO ON
```

Workaround:

```
1 add tm trafficaction tf_act -SSO ON
2 add tm trafficpolicy tf_pol true tf_act
```

**Bind the following traffic policy to all LB virtual server where SSO is expected:**

```
1 bind lb vserver <LB VS Name> -policy tf_pol -priority 65345
```

**Scenarios based on session Policy configuration:**

```
1 add tm sessionaction tm_act -SSO ON
2 add tm session policy <name> <rule> tm_act
3 add tm trafficaction tf_act -SSO ON
4 add tm trafficpolicy tf_pol <same rule as session Policy> tf_act
```

**Points of note:**

- NetScaler AAA user/group for the preceding session policy must be replaced by traffic policy.
- Bind the following policy to the load balancing virtual servers for the preceding session policy,

```
1 bind lb vserver [LB VS Name] -policy tf_pol -priority 65345
```

- If a traffic policy with other priority is configured, the preceding command does not serve good.

**The following section deals with scenarios based on conflict with multiple traffic policies associated with a traffic:**

For a particular TM traffic, only one TM traffic policy is applied. Because of global setting of SSO feature changes, applying an additional TM traffic policy with low priority might not be applicable in case a TM traffic policy with high priority (that does not have required SSO configuration) is already applied. The following section describes method to ensure that such cases are handled.

**Consider that the following three traffic policies with higher priority are applied to load balancing (LB) virtual server:**

```
1 add tm trafficaction tf_act1 <Addition config>
2 add tm trafficaction tf_act2 <Addition config>
3 add tm trafficaction tf_act3 <Addition config>
4
5 add tm trafficpolicy tf_pol1 <rule1> tf_act1
6 add tm trafficpolicy tf_pol2 <rule2> tf_act2
7 add tm trafficpolicy tf_pol3 <rule3> tf_act3
8
9 bind lb vserver <LB VS Name> -policy tf_pol1 -priority 100
10 bind lb vserver <LB VS Name> -policy tf_pol2 -priority 200
11 bind lb vserver <LB VS Name> -policy tf_pol3 -priority 300
```

**Error prone method - To resolve the Global SSO configuration, you add the following configuration:**

```
1 add tm trafficaction tf_act_default -SSO ON
2 add tm trafficpolicy tf_pol_default true tf_act_default
3
4 bind lb vserver <LB VS Name> -policy tf_pol_default -priority 65345
```

**Note:** The preceding modification can break SSO for traffic which hits <tf\_pol1/tf\_pol2/tf\_pol3> as for these traffic, traffic policy is not be applied.

**Correct method - To mitigate this, the SSO property must be applied individually for each of the corresponding traffic actions:**

For example, in the preceding scenario, for SSO to happen for the traffic hitting tf\_pol1/tf\_pol3, the following configuration must be applied along with .

```
1 add tm trafficaction tf_act1 <Addition config> -SSO ON
2 add tm trafficaction tf_act3 <Addition config> -SSO ON
```

## NetScaler Gateway cases

### Scenarios based on global configuration:

```
1 set vpnparameter -SSO ON
```

Workaround:

```
1 add vpn trafficaction vpn_tf_act http -SSO ON
2 add vpn trafficpolicy vpn_tf_pol true vpn_tf_act
3 bind the following traffic policy to all VPN virtual server where SSO
 is expected:
4 bind vpn vserver vpn_vs -policy vpn_tf_pol -priority 65345
```

### Scenarios based on session Policy configuration:

```
1 add vpn sessionaction vpn_sess_act -SSO ON
2 add vpnsession policy <name> <rule> vpn_sess_act
```

### Points to note:

- NetScaler AAA user/group for the preceding session policy must be replaced by traffic policy.
- Bind the following policy to the LB virtual servers for the preceding session policy, `bind lb virtual server [LB VS Name] -policy tf_pol -priority 65345`.
- If a traffic policy with other priority is configured, the preceding command does not serve good. The following section deals with scenarios based on conflict with multiple traffic policies associated with traffic.

### Functional scenarios based on conflict with multiple traffic policies associated with a traffic:

For a particular NetScaler Gateway traffic, only one VPN traffic policy is applied. Because of global setting of SSO feature changes, applying an additional VPN traffic policy with low priority might not be applicable if there are other VPN traffic policies with high priority that does not have a required SSO configuration.

**The following section describes method to ensure such cases are handled:**

Consider there are three traffic policies with higher priority applied to a VPN virtual server:

```
1 add vpn trafficaction tf_act1 <Addition config>
2 add vpn trafficaction tf_act2 <Addition config>
3 add vpn trafficaction tf_act3 <Addition config>
4
5 add vpn trafficpolicy tf_pol1 <rule1> tf_act1
6 add vpn trafficpolicy tf_pol2 <rule2> tf_act2
7 add vpn trafficpolicy tf_pol3 <rule3> tf_act3
8
9 bind vpn vserver <VPN VS Name> -policy tf_pol1 -priority 100
10 bind vpn vserver <VPN VS Name> -policy tf_pol2 -priority 200
11 bind vpn vserver <VPN VS Name> -policy tf_pol3 -priority 300
```

**Error prone method:** To resolve the Global SSO configuration, you add the following configuration:

```
1 add vpn trafficaction tf_act_default -SSO ON
2 add vpn trafficpolicy tf_pol_default true tf_act_default
3
4 bind vpn vserver <VPN VS Name> -policy tf_pol_default -priority 65345
```

**Note:** The preceding modification can break SSO for the traffic that hits <tf\_pol1/tf\_pol2/tf\_pol3> as for these traffic, traffic policy is not applied.

**Correct method:** To mitigate this, the SSO property must be applied individually for each of the corresponding traffic actions.

For example in the preceding scenario, for SSO to happen for traffic hitting tf\_pol1/tf\_pol3, the following configuration must be applied along with .

```
1 add vpn trafficaction tf_act1 [Additional config] -SSO ON
2
3 add vpn trafficaction tf_act3 [Additional config] -SSO ON
```

## Rewrite for NetScaler Gateway and authentication server generated responses

November 7, 2023

Rewrite refers to the rewriting of some information in the requests or responses handled by the NetScaler appliance. Rewriting can help in providing access to the requested content without exposing unnecessary details about the website's actual configuration. For a detailed information on rewrite concept, see [Rewrite](#)

Starting from NetScaler release build 13.0-76.29, the support for rewrite policies has been extended to NetScaler Gateway virtual server and authentication virtual server generated responses.

**Note**

A bind type `AAA_RESPONSE` is introduced to support rewrite policies for the NetScaler Gateway virtual server and authentication virtual server generated responses. Configure the `AAA_RESPONSE` bind type if the response generated by the authentication virtual server or the NetScaler Gateway virtual server is from the packet engine.

**An example to use Rewrite**

You can use Rewrite to share the resources available on on-premises NetScaler with Citrix Cloud deployment. This can be achieved securely by implementing CORS origin resource sharing. Rewrite can be used as follows to implement CORS header.

**Sample configuration**

```
1 add rewrite action cors_header_action insert_http_header access-control
 -allow-credentials \"true\"
2
3 add rewrite policy cors_header_pol true cors_header_action
4
5 add rewrite action non_cors_header_action insert_http_header X-Frame-
 Options \"DENY\"
6
7 add rewrite policy non_cors_header_pol true non_cors_header_action
8
9 bind authentication vserver av_cors -policy cors_header_pol -priority
 100 -type AAA_RESPONSE
10
11 bind vpn vserver av_cors -policy cors_header_pol -priority 100 -type
 AAA_RESPONSE
```

**Note:**

For instructions on how to configure a rewrite action and policy using the GUI, see [Rewrite](#).

## Content Security Policy response header support for NetScaler Gateway and authentication virtual server-generated responses

March 18, 2024

Starting from NetScaler release build 13.0–76.29, the Content-Security-Policy (CSP) response header is supported for NetScaler Gateway and authentication virtual server-generated responses.

The Content-Security-Policy (CSP) response header is a combination of policies which the browser uses to avoid Cross Site Scripting (CSS) attacks.

The HTTP CSP response header allows website administrators to control the resources the user agent is allowed to load for a given page. With a few exceptions, policies mostly involve specifying server origins and script endpoints. This helps guard against cross-site scripting attacks.

The CSP header is designed to modify the way browsers render pages, and thus to protect from various cross-site injections, including CSS. It is important to set the header value correctly, in a way that does not prevent proper operation of the website. For example, if the header is set to prevent execution of inline JavaScript, the website must not use inline JavaScript in its pages.

The following are the advantages of the CSP response header.

- The primary function of a CSP response header is to prevent CSS attacks.
- In addition to restricting the domains from which content can be loaded, the server can specify which protocols are allowed to be used; for example (and ideally, from a security standpoint), a server can specify that all contents must be loaded using HTTPS.
- CSP helps in securing NetScaler from cross-site scripting attacks by securing files like “tmin-index.html” and “homepage.html”. The file “tmin-index.html” is related to authentication and the file “homepage.html” is related to the published apps/links.

### Configuring Content-Security-Policy header for NetScaler Gateway and authentication virtual server-generated responses

To enable the CSP header, you need to configure your web server to return the CSP HTTP header.

#### Points to note

- By default, the CSP header is disabled.
- While enabling or disabling the default CSP policy, you are recommended to run the following command. `Flush cache contentgroup loginstaticobjects`
- For modifying the CSP for /logon/LogonPoint/index.html, modify the “Header set Content-Security-Policy” value as required under the section corresponding to the logon directory which can be found under the directory `/var/netscaler/logon`.


- For instructions on how to configure a rewrite action and policy using the GUI, see [Rewrite](#).

To configure CSP for authentication virtual server and NetScaler Gateway generated responses using CLI, type the following command at the command prompt:

```
1 set aaa parameter -defaultCSPHeader <ENABLE/DISABLE>
```

To configure CSP for NetScaler Gateway and authentication virtual server-generated responses using GUI.

1. Navigate to **NetScaler Gateway > Global Settings**, click **Change authentication AAA settings** under Authentication Settings.

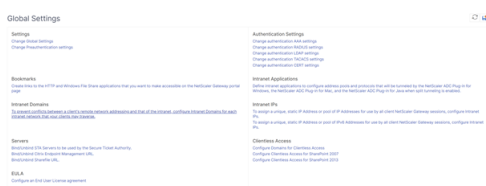

2. On the **Configure AAA Parameters** page, select the **Enabled in Default CSP Header** field.



← Configure AAA Parameter

|                                                                  |                                              |
|------------------------------------------------------------------|----------------------------------------------|
| Maximum Number of Users                                          | <input type="text" value="1000"/> ⓘ          |
| Max Login Attempts                                               | <input type="text"/>                         |
| NAT IP Address                                                   | <input type="text" value="0 . 0 . 0 . 0"/>   |
| Failed Login Timeout                                             | <input type="text"/>                         |
| Default Authentication Type*                                     | <input type="text" value="LOCAL"/> ▾         |
| AAA Session Log Levels                                           | <input type="text" value="INFORMATIONAL"/> ▾ |
| AAAD Log Level                                                   | <input type="text" value="DEBUG"/> ▾ ⓘ       |
| <input checked="" type="checkbox"/> Enable Static Caching        |                                              |
| <input type="checkbox"/> Enable Enhanced Authentication Feedback |                                              |
| <input type="checkbox"/> Enable Session Stickiness               |                                              |
| Maximum Deflate Size                                             | <input type="text" value="1024"/>            |
| Persistent Login Attempts*                                       | <input type="text" value="DISABLED"/> ▾      |
| Password Expiry Notification(days)                               | <input type="text" value="14"/>              |
| Maximum KB Questions                                             | <input type="text" value="2"/>               |
| Login Encryption*                                                | <input type="text" value="DISABLED"/> ▾      |
| SameSite                                                         | <input type="text"/> ▾                       |
| Default CSP Header*                                              | <input type="text" value="ENABLED"/> ▾ ⓘ     |
| HttpOnly Cookie*                                                 | <input type="text" value="DISABLED"/> ▾      |

### Custom Content-Security-Policy header

You can configure a custom CSP header using a rewrite policy on the VPN virtual server and authentication virtual servers for AAA endpoint-generated responses.

The following is an example for CSP header customization to include images and scripts only from the following two specified sources respectively, <https://company.fqdn.com>, <https://example.com>.

```
1 add rewrite action modify_csp insert_http_header Content-Security-
 Policy "\"default-src 'self'; script-src 'self' https://company.fqdn
 .com 'unsafe-inline' 'unsafe-eval'; connect-src 'self'; img-src http
 ://localhost:* https://example.com 'self' data: http: https;; style-
 src 'self' 'unsafe-inline'; font-src 'self'; frame-src 'self'; child
 -src 'self' com.citrix.agmacepa://* citrixng://* com.citrix.
 nsgclient://*; form-action 'self'; object-src 'self'; report-uri /
 nscsp_violation/report_uri\""
2
3 add rewrite policy csp_pol true modify_csp
```

To bind the policy to the authentication virtual server,

```
1 bind authentication vserver auth_vs -policy csp_pol -priority 1 -type
 AAA_RESPONSE
2
3 bind authentication vserver auth_vs -policy csp_pol -priority 2 -type
 RESPONSE
```

To bind the policy to the VPN virtual server,

```
1 bind vpn vserver vpn_vs -policy csp_pol -priority 1 -type AAA_RESPONSE
2
3 bind vpn vserver vpn_vs -policy csp_pol -priority 2 -type RESPONSE
```

**Note:**

The custom CSP header cannot be configured on the content switching and load balancing virtual servers for certain AAA-generated responses.

## Self-service password reset

December 12, 2024

Self-service password reset is a web-based password management solution. It is available in both the authentication, authorization, and auditing feature of the NetScaler appliance and NetScaler Gateway. It eliminates the user's dependency on the administrator's assistance for changing the password.

The self-service password reset provides the end user an ability to securely reset or create a password in the following scenarios:

- User has forgotten the password.
- User is unable to log on.


Until now, if an end user forgets an AD password, the end user had to contact the AD administrator to reset the password. With self-service password reset functionality, an end user can reset the password

without an administrator's intervention.

The following are some of the benefits of using self-service password reset:

- Increased productivity through the automatic password change mechanism, which eliminates the lead-time for users to wait for password resets.
- With the automatic password change mechanism, admins can concentrate on other critical tasks.

The following figure illustrates the self-service password reset flow to reset the password.

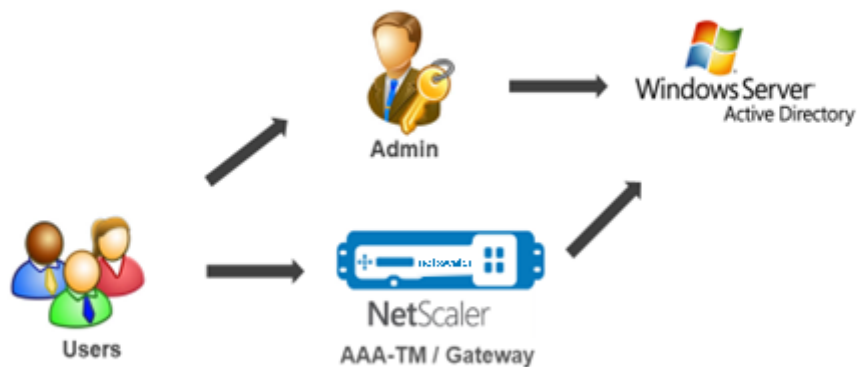

To use the self-service password reset, a user must be registered either with the NetScaler authentication, authorization, and auditing or with the NetScaler Gateway virtual server.

Self-service password reset provides the following capabilities:

- **New user self-registration.** You can self-register as a new user.
- **Configure knowledge-based questions.** As an administrator, you can configure a set of questions for users.
- **Alternate email ID registration.** You must provide an alternate email ID while registration. The OTP is sent to the alternate email ID because the user has forgotten the primary email ID password.

**Note:**

Starting from version 12.1 build 51.xx, alternate email ID registration can be done as stand-alone. A new login schema, **AltEmailRegister.xml** is introduced to do only alternate email

ID registration. Previously, alternate email ID registration can be done only while doing the KBA registration.

- **Reset forgotten password.** User can reset the password by answering the knowledge-based questions. As an administrator, you can configure and store the questions.

The self-service password reset provides the following two new authentication mechanisms:

- **Knowledge based question and answer.** You must register to NetScaler authentication, authorization, and auditing or to a NetScaler Gateway before selecting the knowledge-based question and answer schema.
- **Email OTP authentication.** An OTP is sent to the alternate email ID, which the user has registered during self-service password reset registration.

#### Note

These authentication mechanisms can be used for the self-service password reset use cases, and for any authentication purposes similar to any of the existing authentication mechanisms.

## Prerequisites

Before you configure the self-service password reset, review the following prerequisites:

- NetScaler feature release 12.1, build 50.28.
- Supported version is 2016, 2012, and 2008 AD domain function level.
- The ldapBind user name bound to the NetScaler must have write access to the users AD path.

#### Note

Self-service password reset is supported in nFactor authentication flow only. For more information, see [nFactor Authentication through NetScaler](#).

## Limitations

Following are some of the limitations of self-service password reset:

- Self-service password reset is supported on LDAPS. Self-service password reset is available only if the authentication back-end is LDAP (LDAP protocol).
- User cannot see the already registered alternate email ID.
- Knowledge-based question and answer, and email OTP authentication and registration cannot be the first factor in the authentication flow.
- For Native Plug-in and Receiver, registration is supported only through the browser.

- The minimum certificate size used for self-service password reset is 1024 bytes, and must follow the x.509 standard.
- Only an RSA certificate is supported for self-service password reset.


### Active directory setting

The NetScaler knowledge-based question and answer, and email OTP uses an AD attribute to store users data. You must configure an AD attribute to store the questions and answers along with the alternate email ID. The NetScaler appliance stores it in the configured KB attribute in the AD user object. When configuring an AD attribute, consider the following:

- The AD attribute must support a maximum length of 32k value.
- Attribute type must be a 'DirectoryString'.
- A single AD attribute can be used for knowledge-based question and answer and alternate email ID.
- A single AD Attribute cannot be used for Native OTP and knowledge-based question and answer or alternative email ID registration.
- NetScaler LDAP administrator must have write access to the selected AD attribute.

You can also use an existing AD attribute. However, make sure that the attribute you plan to use is not used for other cases. For example, userParameters is an existing attribute within the AD user that you can use. To verify this attribute, perform the following steps:

1. Navigate to **ADSI > select user**.
2. Right-click and scroll down to attribute list.
3. On the **CN=testuser Properties** window pane, you can see the **userParameters** attribute is not set.

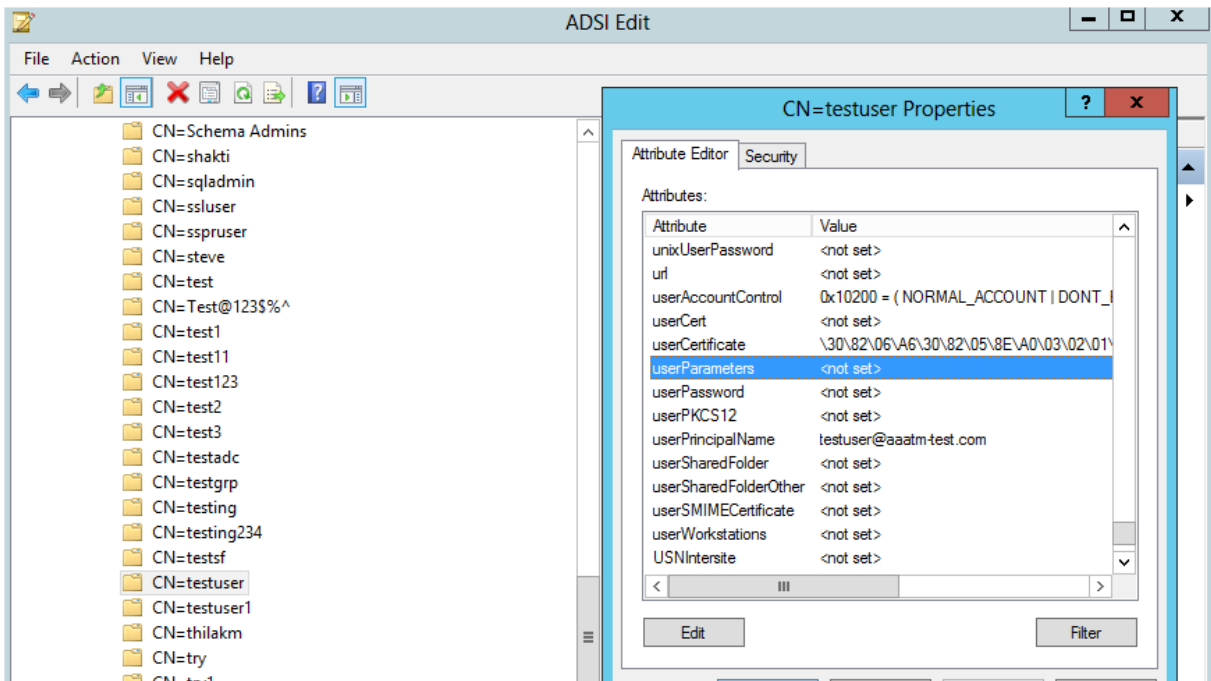

### Self-service password reset registration

To implement the self-service password reset solution on a NetScaler appliance, you have to perform the following:

- Self-service password reset (knowledge-based question and answer/email ID) registration.
- User Logon Page (for password reset, which includes knowledge-based question and answer and email OTP validation and final password reset factor).

A set of predefined questions catalog is provided as a JSON file. As an administrator, you can select the questions and create the self-service password reset registration login schema through the NetScaler GUI. You can choose any of the following options:

- Select a maximum of four system-defined questions.
- Provide an option for users to customize two questions and answers.

**To view the default knowledge-based questions JSON file from CLI**


```
root@ns# cd /nsconfig/loginschema/LoginSchema/
root@ns# cat KBQuestions.json
[
 {"question":"What is the last name of the teacher who gave you your first failing
grade?"},
 {"question":"What is the name of your favourite childhood friend?"},
 {"question":"Where were you when you first heard about 9/11?"},
 {"question":"What is the name of a college you applied to but didn't attend?"},
 {"question":"What was the last name of your third grade teacher?"},
 {"question":"What was the name of your first stuffed animal?"},
 {"question":"What is the name of the teacher who gave you your first A?"},
 {"question":"What is the name of the city where you got lost?"},
 {"question":"In what city or town did your mother and father meet?"},
 {"question":"What was your most hated food as a child?"},
 {"question":"What was your most favourite food as a child?"},
 {"question":"What is your favourite website?"},
 {"question":"What is your most disliked website?"},
 {"question":"What is your dream job?"},
 {"question":"Why did the chicken cross the road?"},
 {"question":"Name your first boss."},
 {"question":"What is the name of your favorite school teacher?"},
 {"question":"What is the name of your favorite actor or actress?"},
 {"question":"What is the title of your favorite movie?"},
 {"question":"In what city or town did you spend most of your youth?"}
]
```

**Note**


- NetScaler Gateway includes the set of system-defined questions by default. Administrator can edit the “KBQuestions.json” file to include their choice of questions.
- System-defined questions are displayed only in English and language localization support is not available for these questions.

**To complete knowledge-based question and answer registration Login Schema using GUI**

1. Navigate to **Security > AAA –Application Traffic > Login Schema**.
2. On the **Login Schema** page, click **Profiles**.
3. Click **Add KBA Registration Login Schema**.
4. On the **Create Authentication Login Schema** page, specify a name in the **Schema Name** field.

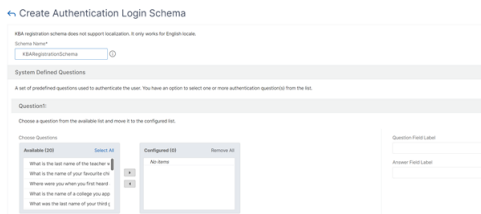

5. Select the questions of your choice and move it to the **Configured** list.
6. In the **User Defined Questions** section, you can provide questions and answers in the Q1 and A1 fields.
7. In the **Email Registration** section, check the **Register Alternate Email** option. You can register the **Alternate Email ID** from user registration logon page to receive the OTP.

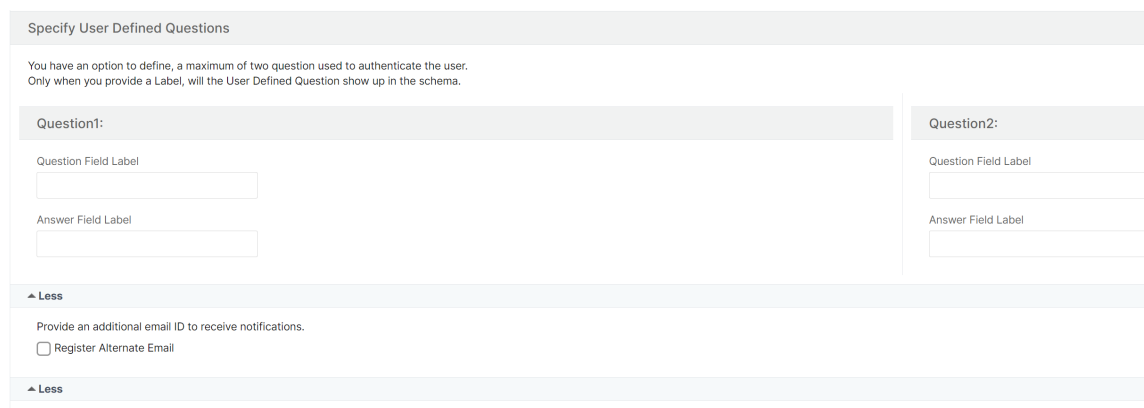

8. Click **Create**. The login schema once generated displays all the configured questions to the end user during the registration process.


## Create user registration and management workflow using CLI

The following are required before you begin the configuration:

- IP address assigned to the authentication virtual server
- FQDN corresponding to the assigned IP address
- Server certificate for authentication virtual server

To set up the device registration and management page, you require an authentication virtual server. The following figure illustrates the user registration.



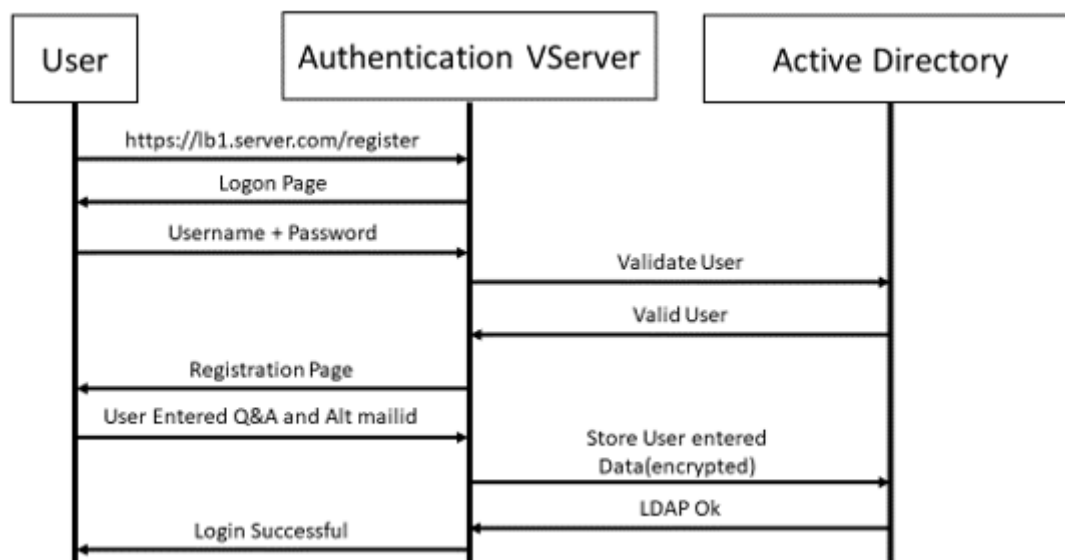

### To create authentication virtual server

1. Configure an authentication virtual server. It must be of type SSL and make sure to bind authentication virtual server with portal theme.

```

1 > add authentication vserver <vServerName> SSL <ipaddress> <port>
2 > bind authentication vserver <vServerName> [-portaltheme<string>]

```

2. Bind SSL virtual server certificate-key pair.

```

1 > bind ssl vserver <vServerName> certkeyName <string>

```

#### Example:

```

1 > add authentication vserver authvs SSL 1.2.3.4 443
2 > bind authentication vserver authvs -portaltheme RFWebUI
3 > bind ssl vserver authvs -certkeyname c1

```

### To create LDAP logon action

```

1 > add authentication ldapAction <name> {
2 -serverIP <ipaddr|ipv6_addr> \[-serverPort <port>] \[-ldapBase <BASE
>] \[-ldapBindDn <AD USER>] \[-ldapBindDnPassword <PASSWORD>] \[-
ldapLoginName <USER FORMAT>]

```

#### Note

You can configure any authentication policy as the first factor.

**Example:**

```
1 > add authentication ldapAction ldap_logon_action -serverIP 1.2.3.4
 -serverPort 636 -ldapBase "OU=Users,DC=server,DC=com" -
 ldapBindDn administrator@ctxnsdev.com -ldapBindDnPassword
 PASSWORD -ldapLoginName samAccountName -serverport 636 -sectype
 SSL -KBAttribute userParameters
```

**To create an authentication policy for LDAP logon**

```
1 > add authentication policy <name> <rule> [<reqAction>]
```

**Example:**

```
1 > add authentication policy ldap_logon -rule true -action
 ldap_logon_action
```

**To create knowledge-based question and answer registration action**

Two new parameters are introduced in `ldapAction`. `KBAttribute` for KBA Authentication (Registration and validation) and `alternateEmailAttr` for registration of user's alternate email ID.

```
1 > add authentication ldapAction <name> {
2 -serverIP <ipaddr|ipv6_addr|> \[-serverPort <port>] \[-ldapBase <
 BASE>] \[-ldapBindDn <AD USER>] \[-ldapBindDnPassword <PASSWORD>]
 \[-ldapLoginName <USER FORMAT>] \[-KBAttribute <LDAP ATTRIBUTE>]
 \[-alternateEmailAttr <LDAP ATTRIBUTE>]
```

**Example:**

```
1 > add authentication ldapAction ldap1 -serverIP 1.2.3.4 -sectype
 ssl -serverPort 636 -ldapBase "OU=Users,DC=server,DC=com" -
 ldapBindDn administrator@ctxnsdev.com -ldapBindDnPassword
 PASSWORD -ldapLoginName samAccountName -KBAttribute
 userParameters -alternateEmailAttr userParameters
```

**Display user registration and management screen**

The "KBRegistrationSchema.xml" login schema is used to display the user registration page to the end user. Use the following CLI to display the login schema.

```
1 > add authentication loginSchema <name> -authenticationSchema <string>
```

**Example:**

```
1 > add authentication loginSchema kba_register -authenticationSchema /
nsconfig/loginschema/LoginSchema/KBARegistrationSchema.xml
```

We recommend two ways of displaying the user registration and management screen: URL or LDAP Attribute.

### Using URL

If the URL path contains '/register' (for example, <https://lb1.server.com/register>) then the user registration page is displayed using the URL.

#### To create and bind the registration policy

```
1 > add authentication policylabel user_registration -loginSchema
kba_register
2 > add authentication policy ldap1 -rule true -action ldap1
3 > bind authentication policylabel user_registration -policy ldap1 -
priority 1
```

#### To bind authentication policy to authentication, authorization, and auditing virtual server when the URL contains '/register'

```
1 > add authentication policy ldap_logon -rule "http.req.cookie.value(\
NSC_TASS\").contains(\"register\")" -action ldap_logon
2 > bind authentication vserver authvs -policy ldap_logon -nextfactor
user_registration -priority 1
```

#### To bind certificate to VPN global

```
1 bind vpn global -userDataEncryptionKey c1
```

#### Note

- You must bind the certificate to encrypt the user data (KB Q&A and registered alternate email ID) stored in the AD attribute.
- If the certificate expires, you must bind a new certificate and perform the registration again.
- If the certificate expires, self-service password reset feature is not affected.

### Using attribute

You can bind an authentication policy to the authentication, authorization, and auditing virtual server to check if the user is already registered or not. In this flow, any of the preceding policies before the knowledge-based question and answer registration factor must be LDAP with the KBA attribute configured. This is to check if the AD user is registered or not using an AD attribute.

**Important**

The rule “AAA.USER.ATTRIBUTE(“kba\_registered”).EQ(“0”)”enforces new users to register for knowledge-based questions and answer and alternate email.

**To create an authentication policy to check if the user is not already registered**

- ```
1 > add authentication policy switch_to_kba_register -rule "AAA.USER.ATTRIBUTE(\"kba_registered\").EQ(\"0\")" -action NO_AUTHN
2 > add authentication policy first_time_login_forced_kba_registration -rule true -action ldap1
```

To create a registration policy label and bind to the LDAP registration policy

- ```
1 > add authentication policylabel auth_or_switch_register -loginSchema LSCHEMA_INT
2 > add authentication policylabel kba_registration -loginSchema kba_register
3
4 > bind authentication policylabel auth_or_switch_register -policy switch_to_kba_register -priority 1 -nextFactor kba_registration
5 > bind authentication policylabel kba_registration -policy first_time_login_forced_kba_registration -priority 1
```


**To bind authentication policy to authentication, authorization, and auditing virtual server**

- ```
1 bind authentication vserver authvs -policy ldap_logon -nextfactor auth_or_switch_register -priority 2
```

User registration and management validation

Once you have configured all the steps mentioned in the previous sections, you must see the following UI screen.

1. Enter the lb virtual server URL; for example, <https://lb1.server.com>. The logon screen is displayed.

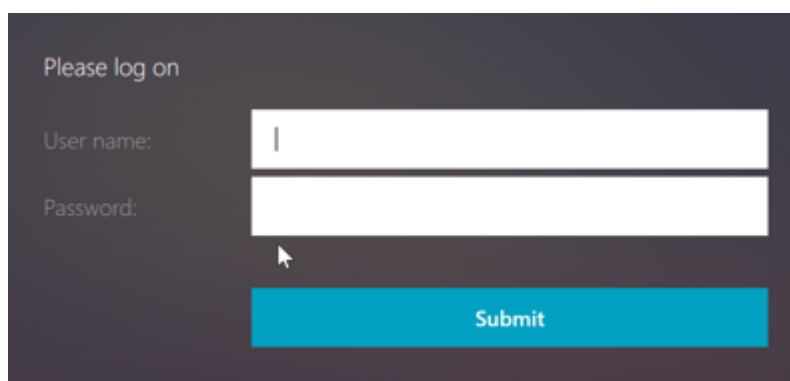

The screenshot shows a dark-themed logon interface. At the top, it says "Please log on". Below this are two input fields: "User name:" and "Password:". The "User name:" field contains a single character, possibly a cursor. Below the "Password:" field is a blue "Submit" button. A mouse cursor is visible over the bottom-left corner of the "Submit" button.

2. Enter the user name and password. Click **Submit**. The **User Registration** screen is displayed.

3. Select the preferred question from the drop-down list and enter the **Answer**.
4. Click **Submit**. The user registration successful screen is displayed.

Configure user logon page

In this example, the administrator assumes that the first factor is the LDAP logon (for which the end user has forgotten the password). The user then follows the knowledge-based question and answer registration and email ID OTP validation, and finally resets the password using self-service password reset.

You can use any of the authentication mechanisms for self-service password reset. We recommend that you have either a knowledge-based question and answer, and email OTP, or both to achieve strong privacy and to avoid any illegitimate user password resets.

The following are required before you start configuring the user logon page:

- IP for load balancer virtual server
- Corresponding FQDN for the load balancer virtual server
- Server certificate for the load balancer

Create load balancer virtual server by using CLI

To access the internal website, you have to create an LB virtual server to front the back-end service and delegate the authentication logic to the authentication virtual server.

```
1 > add lb vserver lb1 SSL 1.2.3.162 443 -persistenceType NONE -
    cltTimeout 180 -AuthenticationHost otpauth.server.com -
    Authentication ON -authnVsName authvs
2
3 > bind ssl vserver lb1 -certkeyname c1
```

To represent the back-end service in load balancing:

```
1 > add service iis_backendsso_server_com 1.2.3.4 HTTP 80
2
3 > bind lb vserver lb1 iis_backendsso_server_com
```

Create LDAP action with authentication disabled as first policy

```
1 > add authentication ldapAction ldap3 -serverIP 1.2.3.4 -serverPort 636
    -ldapBase "OU=Users,DC=server,DC=com" -ldapBindDn
    administrator@ctxnsdev.com -ldapBindDnPassword PASSWORD -
    ldapLoginName samAccountName -authentication disabled
2
3 > add authentication policy ldap3 -rule aaa.LOGIN.VALUE("passwdreset").
    EQ("1") -action ldap3
```

Create knowledge-based question and answer validation action

For knowledge-based question and answer validation in the self-service password reset flow, you need to configure the LDAP server with authentication disabled.

```
1 > add authentication ldapAction <LDAP ACTION NAME> -serverIP <SERVER IP>
    > -serverPort <SERVER PORT> -ldapBase <BASE> -ldapBindDn <AD USER> -
    ldapBindDnPassword <PASSWORD> -ldapLoginName <USER FORMAT> -
    KBAttribute <LDAP ATTRIBUTE> - alternateEmailAttr <LDAP ATTRIBUTE>
    -authentication DISABLED
```

Example:

```
1 > add authentication ldapAction ldap2 -serverIP 1.2.3.4 -serverPort 636
    -ldapBase "OU=Users,DC=server,DC=com" -ldapBindDn
    administrator@ctxnsdev.com -ldapBindDnPassword PASSWORD -
    ldapLoginName samAccountName -KBAttribute userParameters -
    alternateEmailAttr userParameters -authentication disabled
```

To create an authentication policy for knowledge-based question and answer validation using CLI

```
1 add authentication policy kba_validation -rule true -action ldap2
```

Create an email validation action

LDAP must be a prior factor to the email validation factor because you need the user's email ID or alternate email ID as part of the self-service password reset registration.

Note:

For the Email OTP solution to work, ensure that the login based authentication is enabled on the SMTP server.

To ensure that the login based authentication is enabled, type the following command on the SMTP server. If the login based authentication is enabled, you notice that the text **AUTH LOGIN** appears in bold in the output.

```
1 root@ns# telnet <IP address of the SMTP server><Port number of the
  server>
2 ehlo
```

Example:

```
1 root@ns# telnet 10.106.3.66 25
2 Trying 10.106.3.66...
3 Connected to 10.106.3.66.
4 Escape character is '^]'.
5 220 E2K13.NSGSanity.com Microsoft ESMTP MAIL Service ready at Fri, 22
  Nov 2019 16:24:17 +0530
6 ehlo
7 250-E2K13.NSGSanity.com Hello [10.221.41.151]
8 250-SIZE 37748736
9 250-PIPELINING
10 250-DSN
11 250-ENHANCEDSTATUSCODES
12 250-STARTTLS
13 250-X-ANONYMOUSTLS
14 250-AUTH LOGIN
15 250-X-EXPS GSSAPI NTLM
16 250-8BITMIME
17 250-BINARYMIME
18 250-CHUNKING
19 250 XRDST
```

For information on how to enable login based authentication, see <https://support.microfocus.com/kb/doc.php?id=7020367>.

To configure email action using CLI

```
1 add authentication emailAction emailact -userName sender@example.com -
  password <Password> -serverURL "smtps://smtp.example.com:25" -
  content "OTP is $code"
```

Example:

```
1 add authentication emailAction email -userName testmail@gmail.com -
  password 298
  a34b1a1b7626cd5902bbb416d04076e5ac4f357532e949db94c0534832670 -
  encrypted -encryptmethod ENCMTD_3 -serverURL "smtps
  ://10.19.164.57:25" -content "OTP is $code" -emailAddress "aaa.user.
  attribute(\"alternate_mail\")"
```

Note

The “emailAddress” parameter in the configuration is a PI expression. Hence, this is configured to take either the default user email ID from the session or the already registered alternative email ID.

To configure email ID using GUI

1. Navigate to **Security > AAA –Application Traffic > policies > Authentication > Advanced Policies > Actions > Authentication Email Action**. Click **Add**.
2. On the **Create Authentication Email Action** page, fill the details, and click **Create**.

To create an authentication policy for email validation by using CLI

```
1 add authentication policy email_validation -rule true -action email
```

To create an authentication policy for password reset factor

```
1 add authentication policy ldap_pwd -rule true -action ldap_logon_action
```

Presenting UI through Login Schema

There are three LoginSchema’s for self-service password reset to reset the password. Use the following CLI commands to view the three Login Schema:

```
1 root@ns# cd /nsconfig/loginschema/LoginSchema/
2 root@ns# ls -ltr | grep -i password
3 -r--r--r-- 1 nobody wheel 2088 Nov 13 08:38
  SingleAuthPasswordResetRem.xml
4 -r--r--r-- 1 nobody wheel 1541 Nov 13 08:38
  OnlyUsernamePasswordReset.xml
```



```
5 -r--r--r-- 1 nobody wheel 1391 Nov 13 08:38 OnlyPassword.xml
```

To create single authentication password reset by using CLI

```
1 > add authentication loginSchema lschema_password_reset -  
    authenticationSchema "/nsconfig/loginschema/LoginSchema/  
    SingleAuthPasswordResetRem.xml"  
2  
3 > add authentication loginSchemaPolicy lpol_password_reset -rule true -  
    action lschema_password_reset
```

Create knowledge-based question and answer and email OTP validation factor through policy label

If the first factor is LDAP logon, you can create a knowledge-based question and answer and email OTP policy labels for the next factor using the following commands.

```
1 > add authentication loginSchema lschema_noschema -authenticationSchema  
    noschema  
2  
3 > add authentication policylabel kba_validation -loginSchema  
    lschema_noschema  
4  
5 > add authentication policylabel email_validation -loginSchema  
    lschema_noschema
```

Create password reset factor through policy label

You can create the password reset factor through the policy label by using the following commands.

```
1 > add authentication loginSchema lschema_noschema -authenticationSchema  
    noschema  
2  
3 > add authentication policylabel password_reset -loginSchema  
    lschema_noschema  
4  
5 > bind authentication policylabel password_reset -policyName ldap_pwd -  
    priority 10 -gotoPriorityExpression NEXT
```

Bind the knowledge-based question and answer and email policy to the previous created policies using the following commands.

```
1 > bind authentication policylabel email_validation -policyName  
    email_validation -nextfactor password_reset -priority 10 -  
    gotoPriorityExpression NEXT  
2
```

```
3 > bind authentication policylabel kba_validation -policyName
    kba_validation -nextfactor email_validation -priority 10 -
    gotoPriorityExpression NEXT
```

Bind the flow

You must have the LDAP logon flow created under the authentication policy for LDAP Logon. In this flow, the user clicks the forgot password link presented on the first LDAP logon page, then KBA validation followed by OTP validation and finally the password reset page.

```
1 bind authentication vserver authvs -policy ldap3 -nextfactor
    kba_validation -priority 10 -gotoPriorityExpression NEXT
```


To bind all the UI flow

```
1 bind authentication vserver authvs -policy lpol_password_reset -
    priority 20 -gotoPriorityExpression END
```

User log on workflow to reset password

Following is a user logon workflow if the user needs to reset the password:

1. Enter the lb virtual server URL; for example, <https://lb1.server.com>. The logon screen is displayed.

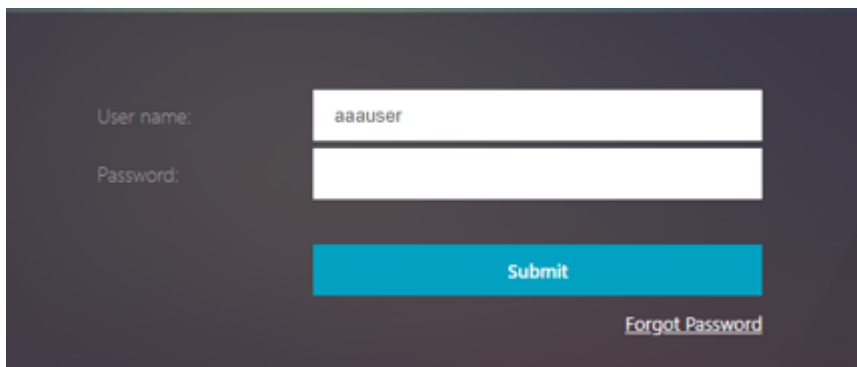

The screenshot shows a dark-themed login interface. On the left, there are labels 'User name:' and 'Password:'. To the right of 'User name:' is a white text input field containing the text 'aaauser'. Below this is another white text input field for the password. A blue 'Submit' button is centered below the password field. In the bottom right corner, there is a link labeled 'Forgot Password'.

2. Click **Forgot Password**. A validation screen displays two questions out of the maximum six questions and answers registered against an AD user.
3. Answer the questions, and click **Log on**. An email OTP Validation screen where you must enter the OTP received on the registered alternate email ID, is displayed.
4. Enter the email OTP. Once the email OTP validation is successful, the password reset page is displayed.
5. Enter a new password and confirm the new password. Click **Submit**. After the password reset is successful, the password reset successful screen is displayed.

You can now log on using the reset password.

Troubleshooting

NetScaler provides an option to troubleshoot some of the basic issues that you might face while using self-service password reset. The following section helps you troubleshoot some of the issues that might occur in specific areas.

NS Log

Before analyzing the logs, we recommend you to set the log level to debug using the `set syslogparams -loglevel DEBUG` command. When this parameter is enabled, the logs are printed in the `ns.log` file.

Registration

The following message indicates a successful user registration.

```
1 "ns_aaa_insert_hash_keyValue_entry key:kba_registered value:1"
2 Nov 14 23:35:51 <local0.debug> 10.102.229.76 11/14/2018:18:05:51 GMT
  0-PPE-1 : default SSLVPN Message 1588 0 : "
  ns_aaa_insert_hash_keyValue_entry key:alternate_mail value:
  eyJ2ZXJzaW9uIjoiaMSIsICJraWQiOiIxYXk1oWJN0T2NjLVVvZUx6NDRwZFhxdS01dT9IiwgImtleS
  ==.oKmv0a1a0J3a9z7BcGCsegNPMw=="
```

Knowledge-based question and answer validation

The following message indicates successful knowledge-based question and answer validation.

```
1 "NFactor: Successfully completed KBA Validation, nextfactor is email"
```

Email ID validation


The following message indicates successful password reset.

```
1 "NFactor: Successfully completed email auth, nextfactor is pwd_reset"
```

Configure SSPR using nFactor visualizer

Before we begin the SSPR configuration using the nFactor visualizer, we need to add the following LDAP servers:

1. Standard LDAP server with authentication enabled for user authentication and AD attribute specified.
2. LDAP server for user parameter extraction with no auth.
3. LDAP server for password reset on SSL with no auth. Also, the AD attribute to be used for storing the user details must be defined in this server.
4. LDAP server for user registration, with authentication enabled, and AD attribute specified.
5. The following figure displays the complete flow:

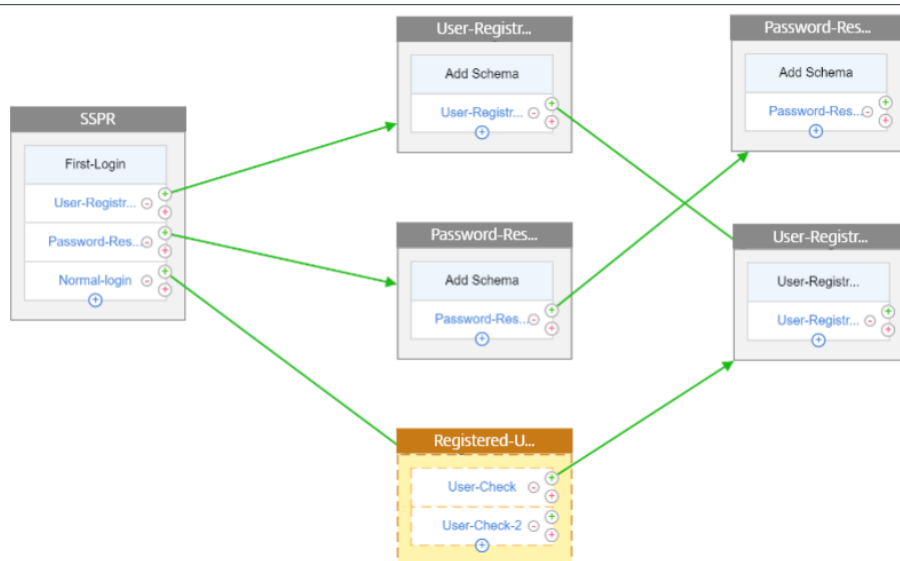


6. Bind the certificate globally using the following CLI command:

```
1 bind vpn global -userDataEncryptionKey Wildcard
```

Now that the LDAP servers are added, proceed with the nFactor configuration using the visualizer

1. Navigate to, **Security > AAA > Application Traffic > nFactor Visualizer > nFactor Flows**, click **Add** and click the plus icon inside the box.
2. Give the flow a name.
3. Click **Add Schema** that serves as the default schema. Click **Add** on the login schema page.
4. After giving the schema a name, select the schema. Click **Select** on the top right corner for the schema to be selected.

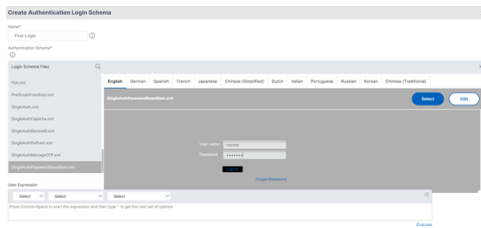


5. Click **Create** and click **OK**.

Once the default Schema is added, then we have to configure the following three flows:


- **User registration:** For explicit user registration
- **Password reset:** For password reset
- **Normal login + Registered user check:** In case the user is registered and enters the correct password, the user is logged in. In case the user is not registered it takes the user to the registration page.

User Registration Let us continue from where we left after adding the schema.

1. Click **Add Policy**, this checks if the user is trying to explicitly register.
2. Click **Create** and then click **Add**.
3. Click the green '+' icon, to add the next authentication factor to the user-registration flow.

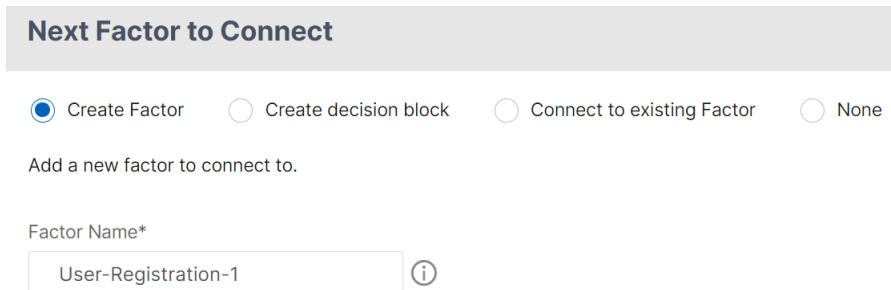


4. Click **Create**.
5. Click **Add Policy** for User-Registration-1 factor.
6. Create the authentication policy. This policy extracts the user information and validates it before redirecting it to the registration page.
7. Click **Create** and then click **Add**.
8. Now click the green '+' icon to create another factor for the user registration and click **Create**. Click **Add Schema**.

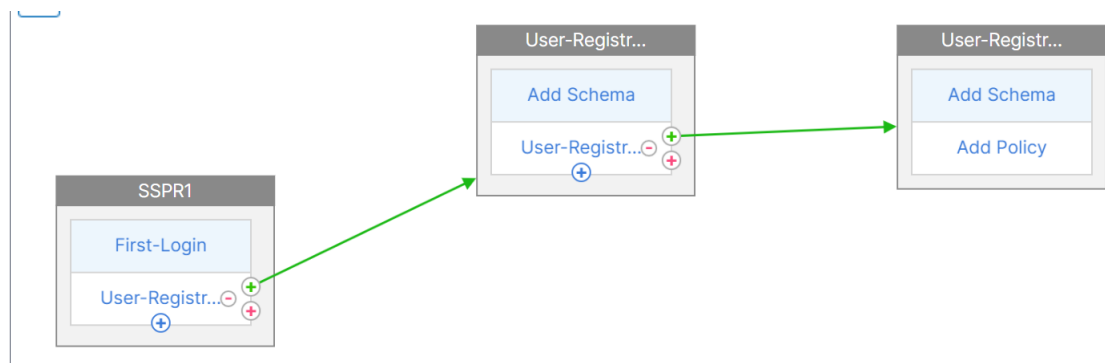


9. Create the authentication login schema for user registration.
10. Click **Add Policy** and create the authentication policy.
11. Click **Create** and click **Add**.

Password reset

1. Click the Blue '+' icon to add another policy (Password reset flow) for the parent SSPR factor.

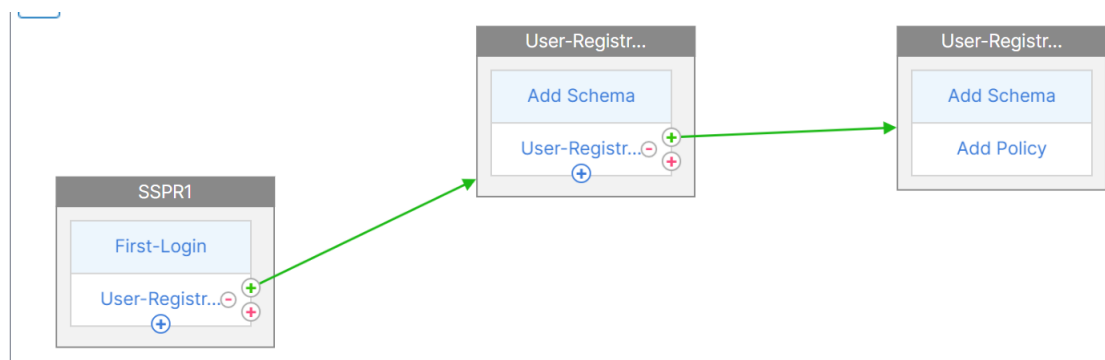

2. In the **Choose Authentication Policy** page, click **Add** to create an authentication policy or select an existing policy in the drop-down list. This policy is triggered if the user clicks "Forgot password" on the login page.
3. Click **Add**.
4. Click the green '+' icon for the password reset authentication policy to add the next factor.

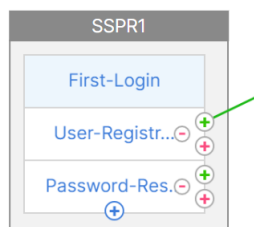

5. Click **Create**.

6. Click **Add policy** to create an authentication policy for the earlier created factor. This factor is for validating the user.
7. Click **Add**.
8. Click the green '+' icon to add the next factor for the password factor flow. This validates the answers provided for resetting the password. Click **Create**.
9. Click **Add Policy** to add an authentication policy for the factor.
10. Select the same authentication policy from the drop-down list and click **Add**.

Choose Authentication Policy

Select Policy*

Password-Reset-Pol1

Add

Edit

Binding Details

Priority*

100

Goto Expression*


NEXT

Add


Close

Normal login + Registered user check


1. Click the blue '+' icon to add another authentication policy (Normal login flow) to the parent SSPR factor.

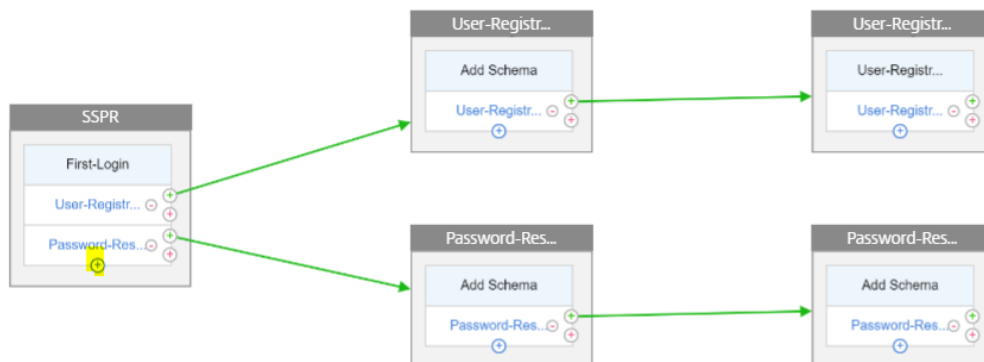

2. Click **Add**, to create an authentication policy for normal user login.
3. Click **Create** and then click **Add**.

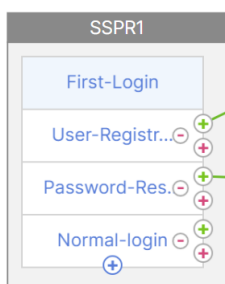

4. Click the green '+' icon for the earlier created policy to add the next factor and select the **Create decision block** option and provide a name to the decision block.
5. Click **Create**.
6. Click **Add Policy** to create an authentication policy for this decision factor.
7. Click **Create** then click **Add**. This checks if the user is registered or not.
8. Click the green '+' icon on the decision block tile to point the user to the registration policy and select the **Connect to existing factor** option.

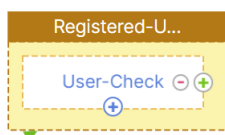

9. Select the registration factor from the **Connect to** drop-down list and click **Create**.
10. Now click the blue '+' icon on the decision block tile to add another policy to the decision block. This policy is for the registered user to complete the authentication.
11. Click **Add Policy** to create an authentication policy.
12. Click **Create** and click **Add**.

Web App Firewall protection for VPN virtual servers and authentication virtual servers

November 6, 2024

Starting from NetScaler release 14.1 build 21.57, you can protect the NetScaler Gateway virtual servers, traffic management virtual servers, and authentication virtual servers against malicious attacks by applying Web App Firewall protection. This functionality provides an additional layer of security to your deployments as it filters incoming requests by validating them using the API schema and then authenticates users to access applications.

Note:

The Web App firewall protection for authentication and Gateway endpoint feature is not supported on Linux based CPX and BLX deployments.

When Web App Firewall protection is enabled, NetScaler leverages the built-in Web App Firewall profiles `ns-aaatm-default-appfw-profile`, `ns-aaa-default-appfw-profile`, and `ns-vpn-default-appfw-profile`. The profiles contain the associated built-in API specification files `ns-aaatm-spec`, `ns-aaa-spec`, and `ns-vpn-spec` to ensure that network traffic is secure and compliant with the API specifications.

Note:

We recommend that you always upgrade to the latest software version as it contains the latest security fixes.

Licensing requirements

This feature is available with all the licenses (Standard, Enterprise, and Premium).

Note:

For the standard license, only the Web App Firewall protection for VPN virtual server and authentication virtual server features are applicable, not the entire Web App Firewall feature.

Configure Web App Firewall protection

On the GUI

To configure Web App Firewall protection to the virtual servers:

1. Navigate to **Security > AAA- Application Traffic > Change Authentication AAA Settings**.
2. On the **Configure AAA Parameter** page, configure **WAF Protection**.

The following options are supported:

- Disabled - When selected, Web App Firewall protection is not applied to any virtual server. By default, Web App Firewall protection is not set to any value.
 - AUTH –Protects the authentication virtual server.
 - VPN –Protects the VPN virtual server.
 - AUTH and VPN –Protects the authentication, traffic management, and VPN virtual servers.
3. Click **OK**.

← Configure AAA Parameter

Maximum Number of Users
Unlimited

Max Login Attempts
5

NAT IP Address
192 . 0 . 2 . 0

Failed Login Timeout
5

WAF Protection
AUTH and VPN

Security Insights*
ENABLED

Default Authentication Type*
LOCAL

AAA Session Log Levels
INFORMATIONAL

AAA Log Level
INFORMATIONAL

Enable Static Caching
 Enable Enhanced Authentication Feedback
 Enable Session Stickiness
Maximum Deflate Size
1024

On the CLI

Run the following command to enable Web App Firewall protection to the virtual servers:

```
set aaa parameter -wafProtection <DISABLED/AUTH/VPN>
```

Examples:

The following is an example of Web App Firewall protection for the authentication virtual servers:

- The `set aaa parameter -wafProtection AUTH` command protects the authentication virtual servers.
- The `set aaa parameter -wafProtection VPN` command protects the VPN virtual servers.
- The `set aaa parameter -wafProtection AUTH VPN` command protects the authentication, VPN, and traffic management virtual servers.

Configure security insights

To view the violations detected by the built-in Web App Firewall profiles, configure security insights. When configured, NetScaler sends the insight records to the AppFlow collector (configured in the analytics profile) whenever a request is sent to a virtual server. The security insight records are sent to the AppFlow collector.

Notes:

- Before you configure the security insights, as a pre-requisite, ensure that the ULFD mode and AppFlow feature are enabled. On the GUI, you can perform this step by navigating to **System > Settings > Modes and Features**. On the CLI, you can use the commands `en ns mode ULFD` and `en ns feature appflow`.

- Ensure that your NetScaler instances are added in NetScaler Console. For details, see [Instance management](#).

On the GUI

On the **Configure AAA Parameter** page, enable the **Security Insights** option. This parameter is disabled, by default.

← Configure AAA Parameter

The screenshot shows the 'Configure AAA Parameter' page in the NetScaler GUI. The 'Security Insights' dropdown menu is highlighted with a red box and is set to 'ENABLED'. Other visible settings include: Maximum Number of Users (Unlimited), Max Login Attempts (5), NAT IP Address (192.0.2.0), Failed Login Timeout (5), WAF Protection (AUTH and VPN), Default Authentication Type (LOCAL), AAA Session Log Levels (INFORMATIONAL), AAAD Log Level (INFORMATIONAL), Enable Static Caching (checked), Enable Enhanced Authentication Feedback (unchecked), Enable Session Stickiness (unchecked), Maximum Default Size (1024), and Persistent Login Attempts (DISABLED).

On the CLI

Run the following command to enable security insights for debug logging. This parameter is disabled, by default.

```
set aaa parameter -securityInsights <ENABLED/DISABLED>
```

Configure AppFlow collector and analytics profile on the GUI


- Navigate to **System > Settings**. In the **Modes and Features** section and enable the ULFD mode and the AppFlow feature.
- Configure an AppFlow collector.
 - Navigate to **Configuration > System > AppFlow > AppFlow Collectors**. Configure the required parameters and click **Create**.

← Create AppFlow Collector

The screenshot shows the 'Create AppFlow Collector' form in the NetScaler GUI. The fields are: Name (col2), IP Address (10.146.77.19), Port (5557), and Transport (logstream). There are 'Create' and 'Close' buttons at the bottom.

- Set the configured AppFlow collector to the analytics profile. In this example, the AppFlow collector is set to the built-in analytics profile `ns-aaa-vpn-appfw-analytics-profile`.
 - Navigate to **Configuration > System > Profiles > Analytics Profiles**. In the **Basic details** section, select the AppFlow collector on the **Collectors** field.

← Configure Analytics Profile

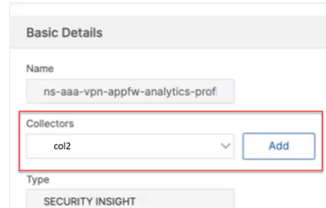

Basic Details

Name
ns-aaa-vpn-appfw-analytics-prof

Collectors
col2

Type
SECURITY INSIGHT

Configure AppFlow collector and analytics profile on the CLI

```
1 - add appflow collector col2 -IPAddress 10.146.77.19 -port 5557 -  
   Transport logstream  
2  
3 - set analytics profile ns-aaa-vpn-appfw-analytics-profile -collectors  
   col2 -type securityinsight
```


For more information about the AppFlow configuration, see [Configuring the AppFlow feature](#).

Note:

Security insights for this feature work only with Logstream messages. They do not work with IPFIX messages.

View the AppFlow records on NetScaler Console

1. On the NetScaler Console on-prem GUI, navigate to **Security > Security Violations**. In the **WAF** section, select the VPN or the authentication virtual server. For more details, see [View application security violation details](#).

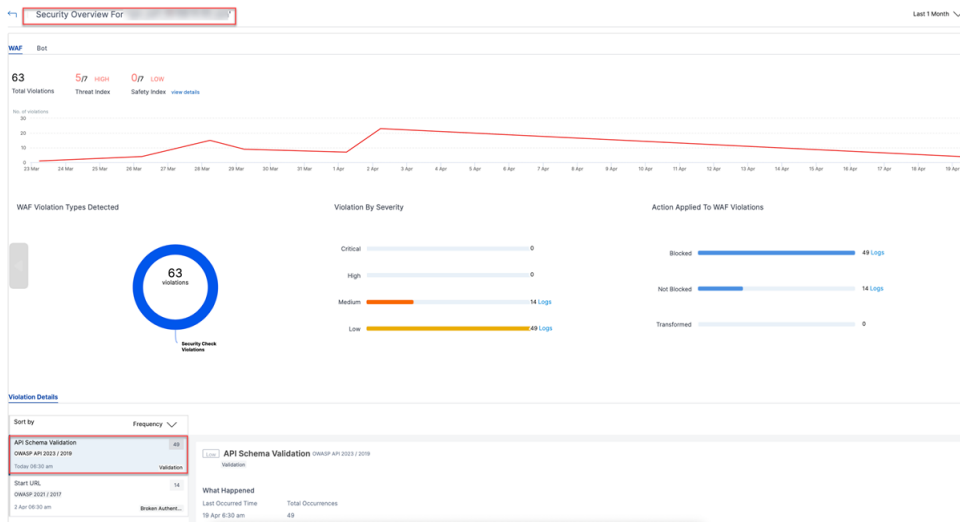

For a detailed view, select the URL in the **Request URL** field.

Violation Information

Violation information

Attack Time: **Apr 18 06:30 AM**
 Client IP: [REDACTED]
 Signature Category: **-NA-**
 Violation Name: **-NA-**
 Violation Value: **-NA-**
 Security Check Violation: **Parameter Value Violation in Schema**
 Violation Category: **Validation**
 Threat Index: **3**
 Severity: **Low**
 Action Taken: **Blocked**
 URL: **https://[REDACTED]**
 Application Name: [REDACTED]
 OWASP Violation 2021: **-NA-**
 OWASP Violation 2017: **-NA-**
 Found In: **Other Location**
 Location: **-NA-**
 Total Attacks: **1**

LOG EXPRESSION NAME	LOG EXPRESSION COMMENT	LOG EXPRESSION VALUE
No items		

2. Apply the appropriate licenses to your VPN or authentication virtual server.

- Verify if your virtual server is licensed.
- In **Settings > Analytics configuration** section of the NetScaler Console GUI, select your virtual server and apply the licenses. For more details, see [Manage licensing and enable analytics on virtual servers](#).

Note:

This step is required only if you are using NetScaler Console on-prem versions 14.1-17.38 or prior.


Configure relaxation rules

You can configure a relaxation rule on the endpoint URLs or the virtual server IP addresses, to bypass certain traffic from being validated against the schema specified in the API specification file.

On the GUI

The following is an example of a REST validation relaxation that you can apply to the "GET:/oauth/idp/login" authentication endpoint URL:

- Navigate to **Security > NetScaler Web App Firewall > Profiles**.
- Select the profile `ns-aaa-default-appfw-profile`.
- Under **Advanced Settings**, click **Relaxation Rules**.
- Select the **REST API schema validation** checkbox.
- Navigate to the beginning of the **Relaxation Rules** section and click **Edit**.
- Click **Add**.
- On the **REST API Schema Validation Relaxation Rule** page, update the required fields and click **Create**.

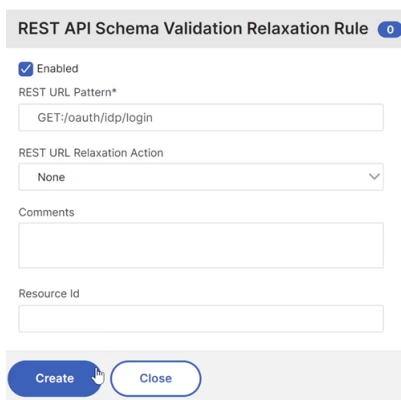

The screenshot shows the configuration page for a REST API Schema Validation Relaxation Rule. The page title is "REST API Schema Validation Relaxation Rule" with a blue information icon. The "Enabled" checkbox is checked. The "REST URL Pattern*" field contains the text "GET:/oauth/idp/login". The "REST URL Relaxation Action" dropdown menu is set to "None". There is an empty "Comments" text area and an empty "Resource Id" text area. At the bottom, there are two buttons: "Create" (highlighted with a mouse cursor) and "Close".

The following is an example of a relaxation that you can apply to a virtual server IP address:

- Under **Advanced Settings**, select **Profile Settings**.
- In the **Common Settings** section, select the **Enable Bypass List** checkbox.
- Go back to the **Advanced Settings** section and select **Global Bypass/Deny List**.
- In the **Global Bypass List** section, click **Add**.
- On the **Create AppFirewall Bypass List Binding** page, update the required fields and click **Create**.

Create AppFirewall Bypass List Binding

Enabled

Bypass List Value Type
 ⓘ

Bypass List Value*

<input type="text" value="Select"/>	<input type="text" value="Select"/>	<input type="text" value="Select"/>
-------------------------------------	-------------------------------------	-------------------------------------

`CLIENT.IP.DST.EQ()`

Bypass List Action

Bypass List Location

Comments

On the CLI

The following is an example of a REST validation relaxation that you can apply to the "GET:/oauth/idp/login" authentication endpoint URL:

```
1 bind appfwprofile ns-aaa-default-appfw-profile -restValidation "GET:/
  oauth/idp/login"
```

The following is an example of a relaxation that you can apply to a virtual server IP address:

```
1 set appfwprofile ns-aaa-default-appfw-profile -bypasslist on
2
3 bind appfwprofile ns-aaa-default-appfw-profile -bypasslist "CLIENT.IP.
  DST.EQ(192.0.2.255)" -valueType expression
```

For details about the configuration of relaxation rules, see [Configure relaxation rule for API schema validation using CLI](#).

Debug logging

The following is a sample error message that appears in the ns.log file for user requests that NetScaler Web App Firewall blocks:

```
Mar 22 07:04:26 <local0.info> 192.0.2.4 03/22/2024:07:04:26 GMT 0-PPE
-0 : default APPFW APPFW_SCHEMA_VALUE_INCORRECT 864 0 : 10.106.31.93
107-PPE0 - ns-aaa-default-appfw-profile Parameter value incorrect as
per API Spec: (ns-aaa-spec) for Endpoint: (GET https://192.0.2.5/oauth
```

```
/idp/login?client_id=test&response_type=code&scope=openid%20profile&
redirect_uri=https%3A%2F%2Foauthrp.aaa.local%2Foauth%2Flogin&state=
Y3R4PU9tNzJ5WkNlTGJaSVhBb1lXM2lZVm40N0ZfQ1JzNjM1OGhvWEpRWkpDVFV1ZkY5U1hoOV9Edn
)<blocked>
```

In the preceding example, the profile name and endpoint URLs are specified to help users with the analysis and configure relaxation rules.

The following `stat` command displays the counters of the user requests blocked by the traffic management and authentication virtual servers:

```
1 stat aaa | grep -i blocked
2
3 Total AAA Waf blocked hits      0      15
4 Total AAATM Waf blocked hits    0       1
```

The following `stat` command displays the counters of API specification file:


```
1 stat apispec
2 API spec(s) Summary hits validate unmatched
3 ns-a...-spec 0 0 0
4 ns-aaa-spec 15 12 0
5 ns-vpn-spec 4 4 0
6 aaa 0 0 0
```

Dynamic update of the new API specification files provided by NetScaler

When the Web App Firewall protection parameter is enabled, NetScaler uses the following built-in API specification files for API schema validation.

- **ns-aaatm-spec:** This file performs API schema validation of the incoming requests to the traffic management virtual servers.
- **ns-aaa-spec:** This file performs API schema validation of the incoming requests to the authentication virtual servers.
- **ns-vpn-spec:** This file performs API schema validation of the incoming requests to the VPN virtual servers.

On the GUI, you can locate these files by navigating to **Security > NetScaler Web App Firewall > Imports > API Spec Import**.

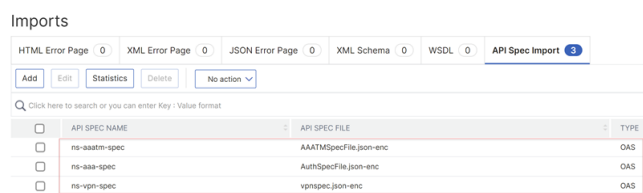

You can dynamically update the built-in API specification files by using the API specification files that NetScaler provides. Perform the following steps on the GUI:

1. Navigate to **Security > NetScaler Web App Firewall > Imports > API Spec Import**.
2. Select the API specification file and click **Edit**.
3. On the API Spec Import Object page, click **File**.
4. Upload the new API schema file and click **Continue**.

Notes:

- Do not rename API specification files that NetScaler provides.
- Ensure that the **Encrypted** checkbox is selected.

← API Spec Import Object

Modify API Spec

API Spec Name
ns-aaatm-spec

Add API Spec

API Spec Type*

REST (OpenAPI/Swagger) gRPC (PROTO)

Encrypted

Done Cancel

5. Click **Done**.

For more details about importing files, see [Imports](#).

For details about the API specification validation, see [API specification validation](#).

Limitation

This feature is currently applicable to traffic in the default partition.

References

- For more information about the NetScaler Web App Firewall feature, see [Introduction to NetScaler Web App Firewall](#).
- For more information about the AppFlow feature, see [AppFlow](#).
- For FAQ details, see [Authentication, Authorization, and Auditing](#).

Polling during authentication

May 2, 2023

Starting from NetScaler release build 13.0.79.64, a NetScaler appliance can be configured for Polling mechanism during multifactor authentication.

If Polling is configured on a NetScaler appliance, endpoints (like a web browser or an app) can poll (probe) the appliance during authentication at the configured intervals to get the status of the submitted authentication request.

Polling can be configured to handle authentications when an endpoint drops a TCP connection while authenticating with a NetScaler appliance.

Points to note

- The Polling configuration is supported for LDAP, RADIUS, and TACACS authentication methods.
- Client can probe authentication requests from second factor onwards.


Why configure Polling?

Sometimes while authenticating, switching between the apps (for example a login app and an authenticator app) causes endpoints to lose connection with the NetScaler appliance leading to a break in the authentication flow. With Polling configured, this break in authentication can be avoided.

Understanding the Polling mechanism


The following is an example for the flow of events during authentication without Polling configured.

The Polling mechanism enables a NetScaler appliance to resume an ongoing authentication with the endpoint without having to restart the authentication process in a rare case of a TCP connection reset at the endpoint.

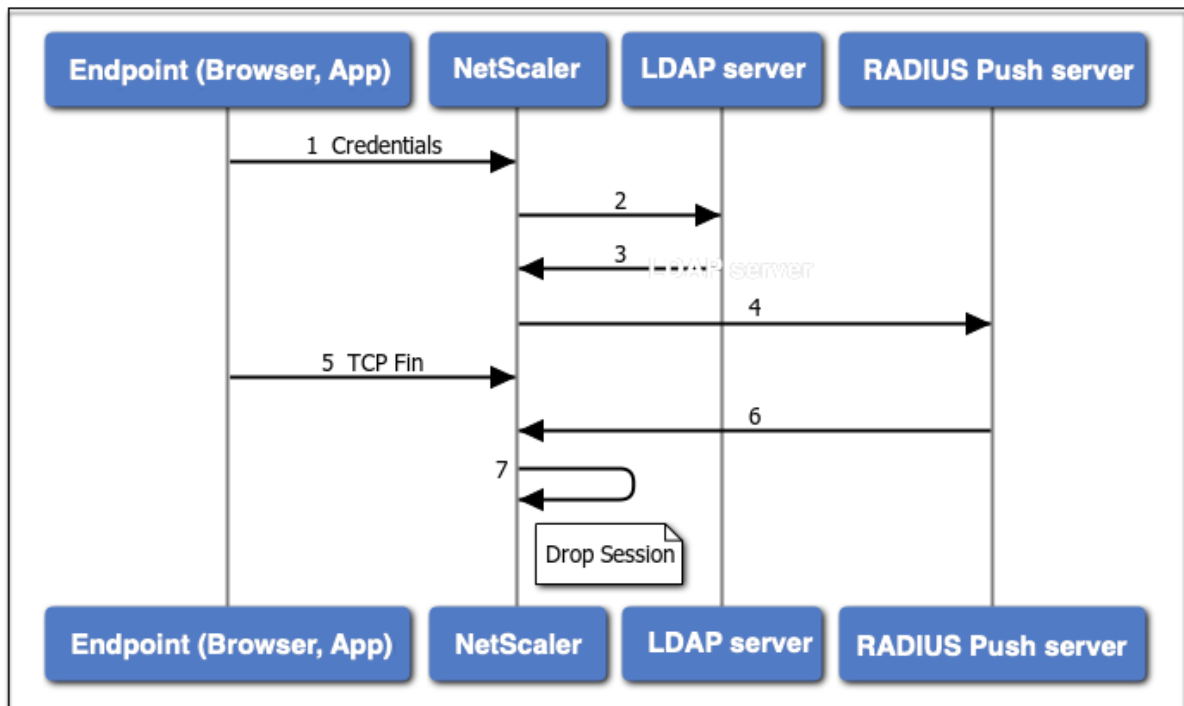

1. An endpoint (App or Web browser) authenticates with credentials.
2. The user name and password is verified against an existing first factor directory (LDAP/Active Directory).
3. If the correct credentials are supplied, the authentication moves to the next factor.
4. At this point, the NetScaler appliance sends request to the RADIUS Push server.
5. While the NetScaler appliance waits for a response from the RADIUS server, the endpoint drops TCP connection.
6. The NetScaler receives a response from the RADIUS Push server.
7. As no client TCP connection is found, the NetScaler appliance drops session and the login fails.

The following is an example for the flow of events during authentication with Polling configured.

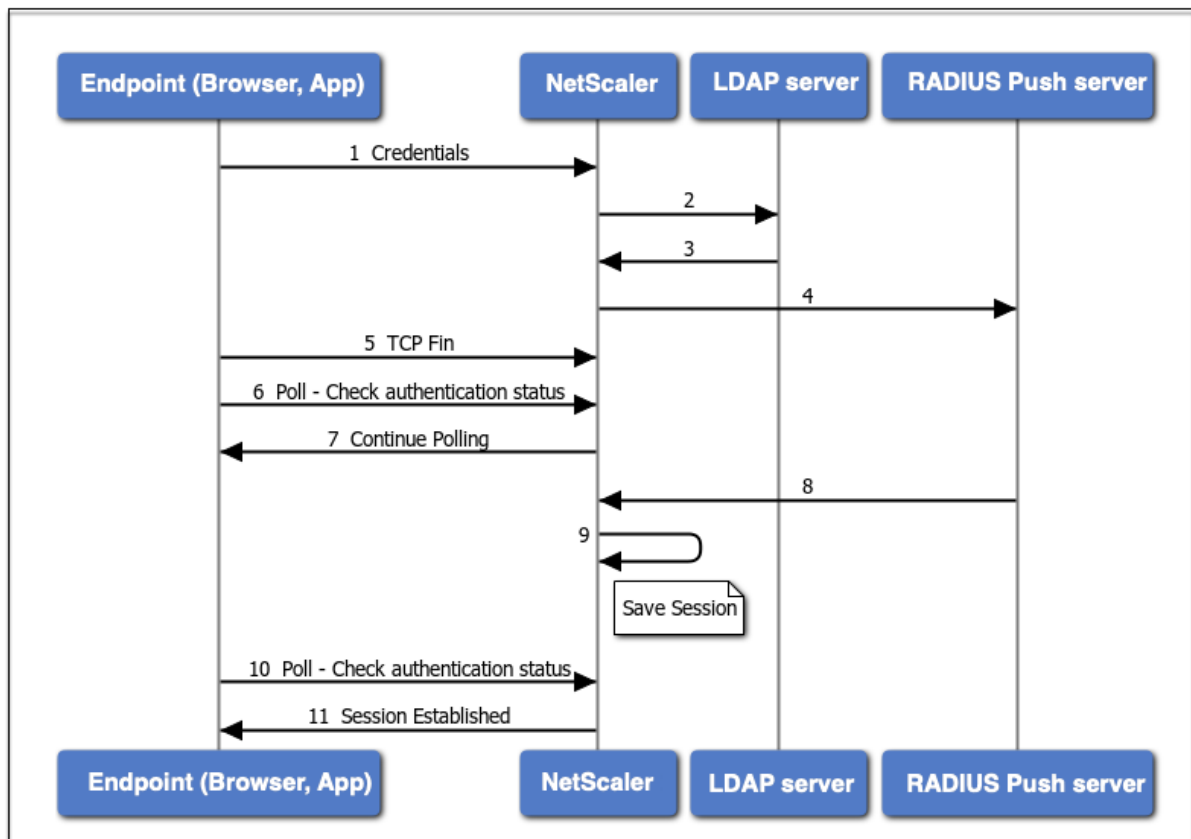

1. An endpoint (App or Web browser) authenticates with credentials.
2. The user name and password is verified against an existing first factor directory (LDAP/Active Directory).
3. If the correct credentials are supplied, the authentication moves to the next factor.
4. At this point, the NetScaler appliance sends request to the RADIUS Push server.
5. While the NetScaler appliance waits for a response from the RADIUS server, the endpoint drops TCP connection.
6. Endpoint sends a poll (probe) to the NetScaler appliance to check for the authentication status.
7. As the NetScaler appliance does not hear back from the RADIUS server, it requests the endpoint to continue polling.
8. The NetScaler appliance receives response from the RADIUS Push server.
9. As no client TCP connection is found, ADC saves the session state.
10. Endpoint again polls to check for the authentication status.
11. NetScaler appliance establishes the session and the login succeeds.

Configure Polling using CLI

The following is a sample CLI configuration.

Configure First factor

```
1 add authentication ldapAction ldap-new -serverIP 10.106.40.65 -
  serverPort 636 -ldapBase "dc=aaatm-test,dc=com" -ldapBindDn
  administrator@aaatm-test.com -ldapBindDnPassword 2
  f63d3659103464a4fad0ade65e2ccfd4e8440e36ddff941d29796af03e01139 -
  encrypted -encryptmethod ENCMTD_3 -ldapLoginName sAMAccountName -
  groupAttrName memberof -subAttributeName CN -secType SSL -
  alternateEmailAttr userParameters
2
3 add authentication Policy ldap-new -rule true -action ldap-new
4
5 bind authentication vserver avs -policy ldap-new -priority 1 -
  nextFactor rad_factor
```

Configure Second factor

```
1 add authentication radiusAction rad1 -serverIP 10.102.229.120 -radKey 1
  b1613760143ce2371961e9a9eb5392c86a4954a62397f29a01b5d12b42ce232 -
  encrypted -encryptmethod ENCMTD_3
2
3 add authentication Policy rad -rule true -action rad1
```

Configure Poll.xml login schema

```
1 add authentication loginSchema polling_schema -authenticationSchema
  LoginSchema/Poll.xml
2
3 add authentication policylabel rad_factor -loginSchema polling_schema
4
5 bind authentication policylabel rad_factor -policyName rad -priority 1
  -gotoPriorityExpression NEXT
```

Configure Polling using GUI

For detailed steps on configuring multifactor authentication using GUI see, [Configuring nFactor authentication](#)

Following are the sample high level steps required for configuring NetScaler for Polling from second factor onwards.

1. Create a first factor for authentication, for example LDAP.
2. Create a second factor for authentication, for example RADIUS.
3. Add **Poll.xml** present in NetScaler (/nsconfig/loginschema/LoginSchema/) as login schema for the second factor.

Session and traffic management

November 21, 2024

Session settings

After you configure your authentication, authorization, and auditing profiles, you configure session settings to customize your user sessions. The session settings are:

- **The session timeout.**

Controls the period after which the user is automatically disconnected and must authenticate again to access your intranet.

- **The default authorization setting.**

Determines whether the NetScaler appliance will by default allow or deny access to content for which there is no specific authorization policy.

- **The single sign-on setting.**

Determines whether the NetScaler appliance will log users on to all web applications automatically after they authenticate, or will pass users to the web application logon page to authenticate for each application.

- **The credential index setting.**

Determines whether the NetScaler appliance uses the primary or the secondary authentication credentials for single sign-on.

To configure the session settings, you can take one of two approaches. If you want different settings for different user accounts or groups, you create a profile for each user account or group for which you want to configure custom sessions settings. You also create policies to select the connections to which to apply particular profiles, and you bind the policies to users or groups. You can also bind a policy to the authentication virtual server that handles the traffic to which you want to apply the profile.

If you want the same settings for all sessions, or if you want to customize the default settings for sessions that do not have specific profiles and policies configured, you can simply configure the global session settings.

Session profiles

To customize your user sessions, you first create a session profile. The session profile allows you to override global settings for any of the session parameters.

Note

The terms “session profile” and “session action” mean the same thing.

To create a session profile by using the command line interface

At the command prompt, type the following commands to create a session profile and verify the configuration:

```
1 add tm sessionAction <name> [-sesTimeout <mins>] [-
  defaultAuthorizationAction ( ALLOW | DENY )][-SSO ( ON | OFF )][-
  ssoCredential ( PRIMARY | SECONDARY )] [-ssoDomain <string>][-
  httpOnlyCookie ( YES | NO )] [-persistentCookie ( ENABLED | DISABLED
  )] [-persistentCookieValidity <minutes>]
2
3 show tm sessionAction <name>
```

Example

```
1 > add tm sessionAction session-profile -sesTimeout 30 -
  defaultAuthorization ALLOW
2 Done
3 > show tm sessionAction session-profile
4 1)      Name: session-profile
5         Authorization action : ALLOW
6         Session timeout: 30 minutes
7 Done
```

To modify a session profile by using the command line interface

At the command prompt, type the following commands to modify a session profile and verify the configuration:

```
1 set tm sessionAction <name> [-sesTimeout <mins>] [-
  defaultAuthorizationAction ( ALLOW | DENY )][-SSO ( ON | OFF )][-
  ssoCredential ( PRIMARY | SECONDARY )] [-ssoDomain <string>][-
  httpOnlyCookie ( YES | NO )] [-persistentCookie ( ENABLED | DISABLED
  )] [-persistentCookieValidity <minutes>]
2
3 show tm sessionAction
```

Example

```
1 > set tm sessionAction session-profile -sesTimeout 30 -
  defaultAuthorization ALLOW
2 Done
3 > show tm sessionAction session-profile
4 1)      Name: session-profile
5         Authorization action : ALLOW
```

```
6      Session timeout: 30 minutes
7 Done
```

To remove a session profile by using the command line interface

At the command prompt, type the following command to remove a session profile:

```
1 rm tm sessionAction <name>
```

To configure session profiles by using the configuration utility

1. Navigate to **Security > AAA - Application Traffic > Session**.
2. Navigate to **Security > AAA - Application Traffic > Policies > Session**.
3. In the details pane, click the **Profiles** tab.
4. On the **Profiles** tab, do one of the following:
 - To create a new session profile, click **Add**.
 - To modify an existing session profile, select the profile, and then click **Edit**.
5. In the Create TM Session Profile or Configure TM Session Profile dialog, type or select values for the parameters.
 - Name*—actionname (Cannot be changed for a previously configured session action.)
 - Session Time-out—sesstimeout
 - Single sign-on to Web Applications—sso
 - Default Authorization Action—defaultAuthorizationAction
 - Credential Index—ssocredential
 - Single Sign-on Domain—ssoDomain
 - HTTPOnly Cookie—httpOnlyCookie
 - Enable Persistent Cookie—persistentCookie
 - Persistent Cookie Validity—persistentCookieValidity
6. Click **Create** or **OK**. The session profile that you created appears in the Session Policies and Profiles pane.

Session policies

After you create one or more session profiles, you create session policies and then bind the policies globally or to an authentication virtual server to put them into effect.

To create a session policy by using the command line interface

At the command prompt, type the following commands to create a session policy and verify the configuration:

```
1 - add tm sessionPolicy <name> <rule> <action>
2 - show tm sessionPolicy <name>
```

Example

```
1 > add tm sessionPolicy session-pol "URL == /*.png" session-profile
2 Done
3 > show tm sessionPolicy session-pol
4 1)      Name: session-pol      Rule: URL == '/*.png'
5        Action: session-profile
6 Done
```

To modify a session policy by using the command line interface

At the command prompt, type the following commands to modify a session policy and verify the configuration:

```
1 - set tm sessionPolicy <name> [-rule <expression>] [-action <action>]
2 - show tm sessionPolicy <name>
```

Example

```
1 > set tm sessionPolicy session-pol "URL == /*.png" session-profile
2 Done
3 > show tm sessionPolicy session-pol
4 1)      Name: session-pol      Rule: URL == '/*.png'
5        Action: session-profile
6 Done
```

To globally bind a session policy by using the command line interface

At the command prompt, type the following commands to globally bind a session policy and verify the configuration:

```
1 bind tm global -policyName <policyname> [-priority <priority>]
```

Example

```
1 > bind tm global -policyName session-pol
2 Done
3
4 > show tm sessionPolicy session-pol
5 1)      Name: session-pol      Rule: URL == '/*.png'
```

```
6      Action: session-profile
7      Policy is bound to following entities
8      1) TM GLOBAL      PRIORITY : 0
9      Done
```

To bind a session policy to an authentication virtual server by using the command line interface

At the command prompt, type the following command to bind a session policy to an authentication virtual and verify the configuration:

```
1 bind authentication vserver <name> -policy <policyname> [-priority <
  priority>]
```

Example

```
1 bind authentication vserver auth-vserver-1 -policyName Session-Pol-1 -
  priority 1000
2 Done
```

To unbind a session policy from an authentication virtual server by using the command line interface

At the command prompt, type the following commands to unbind a session policy from an authentication virtual server and verify the configuration:

```
1 unbind authentication vserver <name> -policy <policyname>
```

Example

```
1 unbind authentication vserver auth-vserver-1 -policyName Session-Pol-1
2 Done
```

To unbind a globally bound session policy by using the command line interface

At the command prompt, type the following commands to unbind a globally bound session policy:

```
1 unbind tm global -policyName <policyname>
```

Example

```
1 unbind tm global -policyName Session-Pol-1
2 Done
```

To remove a session policy by using the command line interface

First unbind the session policy from global, and then, at the command prompt, type the following commands to remove a session policy and verify the configuration:

```
1 rm tm sessionPolicy <name>
```

Example

```
1 rm tm sessionPolicy Session-Pol-1
2 Done
```

To configure and bind session policies by using the configuration utility

1. Navigate to **Security > AAA - Application Traffic > Session**.
2. Navigate to **Security > AAA - Application Traffic > Policies > Session**.
3. In the details pane, on the **Policies** tab, do one of the following:
 - To create a new session policy, click **Add**.
 - To modify an existing session policy, select the policy, and then click **Edit**.
4. In the **Create Session Policy** or **Configure Session Policy** dialog, type or select the values for the parameters.
 - Name*—policyname (Cannot be changed for a previously configured session policy.)
 - Request Profile*—actionname
 - Expression*—rule (You enter expressions by first choosing the type of expression in the leftmost drop-down list beneath the Expression text area and then typing your expression directly into the expression text area, or by clicking **Add** to open the Add Expression dialog box and using the drop-down lists in it to construct your expression.)
5. Click **Create** or **OK**. The policy that you created appears in the details pane of the **Session Policies** and **Profiles** page.
6. To globally bind a session policy, in the details pane, select **Global Bindings** from the **Action** drop-down list, and fill in the dialog.
 - Select the name of the session policy you want to globally bind.
 - Click **OK**.
7. To bind a session policy to an authentication virtual server, in the navigation pane, click **Virtual Servers**, and add that policy to the policies list.
 - In the details pane, select the virtual server, and then click **Edit**.
 - In the **Advanced Selections** to the right of the detail area, click **Policies**.
 - Select a policy, or click the **plus** icon to add a policy.

- In the **Priority** column to the left, modify the default priority to ensure that the policy is evaluated in the proper order.
- Click **OK**.
A message appears in the status bar, stating that the policy has been configured successfully.

Global session settings

In addition to or instead of creating session profiles and policies, you can configure global session settings. These settings control the session configuration when there is no explicit policy overriding them.

To configure the session settings by using the command line interface

At the command prompt, type the following commands to configure the global session settings and verify the configuration:

```
1 set tm sessionParameter [-sessTimeout <mins>][-  
  defaultAuthorizationAction ( ALLOW | DENY )][-SSO ( ON | OFF )][-  
  ssoCredential ( PRIMARY | SECONDARY )][-ssoDomain <string>][-  
  httpOnlyCookie ( YES | NO )][-persistentCookie ( ENABLED | DISABLED  
  )] [-persistentCookieValidity <minutes>]
```

Example

```
1 > set tm sessionParameter -sessTimeout 30  
2 Done  
3 > set tm sessionParameter -defaultAuthorizationAction DENY  
4 Done  
5 > set tm sessionParameter -SSO ON  
6 Done  
7 > set tm sessionParameter -ssoCredential PRIMARY  
8 Done
```

To configure the session settings by using the configuration utility

1. Navigate to **Security > AAA - Application Traffic**
2. In the details pane, under **Settings**, click Change global settings.
3. In the **Global Session Settings** dialog, type or select values for the parameters.
 - Session Time-out—sessTimeout
 - Default Authorization Action—defaultAuthorizationAction
 - Single Sign-on to Web Applications—sso
 - Credential Index—ssoCredential

- Single Sign-on Domain—ssoDomain
- HTTPOnly Cookie—httpOnlyCookie
- Enable Persistent Cookie—persistentCookie
- Persistent Cookie Validity (minutes)—persistentCookieValidity
- Home Page—home page

4. Click **OK**.

Traffic settings

If you use forms-based or SAML single sign-on (SSO) for your protected applications, you configure that feature in the Traffic settings. SSO enables your users to log on once to access all protected applications, rather than requiring them to log on separately to access each one.

Forms-based SSO allows you to use a web form of your own design as the sign-on method instead of a generic pop-up window. You can therefore put your company logo and other information you might want your users to see on the logon form. SAML SSO allows you to configure one NetScaler appliance or virtual appliance instance to authenticate to another NetScaler appliance on behalf of users who have authenticated with the first appliance.

To configure either type of SSO, you first create a forms or SAML SSO profile. Next, you create a traffic profile and link it to the SSO profile you created. Next, you create a policy, link it to the traffic profile. Finally, you bind the policy globally or to an authentication virtual server to put your configuration into effect.

Traffic profiles

After creating at least one forms or SAML sso profile, you must next create a traffic profile.

Note:

In this feature, the terms “profile” and “action” mean the same thing.

To create a traffic profile by using the command line interface

At the command prompt, type:

```
1 add tm trafficAction <name> [-appTimeout <mins>][-SSO ( ON | OFF ) [-formSSOAction <string>]][-persistentCookie ( ENABLED | DISABLED )][-InitiateLogout ( ON | OFF )]
```

Example

```
1 add tm trafficAction Traffic-Prof-1 - appTimeout 10 -SSO ON -  
   formSSOAction SSO-Prof-1
```

To modify a session profile by using the command line interface

At the command prompt, type:

```
1 set tm trafficAction <name> [-appTimeout <mins>] [-SSO ( ON | OFF ) [-  
   formSSOAction <string>]] [-persistentCookie ( ENABLED | DISABLED )]  
   [-InitiateLogout ( ON | OFF )]
```

Example

```
1 set tm trafficAction Traffic-Prof-1 - appTimeout 10 -SSO ON -  
   formSSOAction SSO-Prof-1
```

To remove a session profile by using the command line interface

At the command prompt, type:

```
1 rm tm trafficAction <name>
```

Example

```
1 rm tm trafficAction Traffic-Prof-1
```

To configure traffic profiles by using the configuration utility

1. Navigate to **Security > AAA - Application Traffic > Traffic**.
2. Navigate to **Security > AAA - Application Traffic > Policies > Traffic**.
3. In the details pane, click the Profiles tab.
4. On the Profiles tab, do one of the following:
 - To create a new traffic profile, click **Add**.
 - To modify an existing traffic profile, select the profile, and then click **Edit**.
5. In the **Create Traffic Profile** or **Configure Traffic Profile** dialog box, specify values for the parameters.
 - Name*—name (Cannot be changed for a previously configured session action.)
 - AppTimeout—appTimeout
 - Single Sign-On—SSO
 - Form SSO Action—formSSOAction

- SAML SSO Action—samlSSOAction
 - Enable Persistent Cookie—persistentCookie
 - Initiate Logout—InitiateLogout
6. Click **Create** or **OK**. The traffic profile that you created appears in the Traffic Policies, Profiles, and either the Form SSO Profiles or SAML SSO Profiles pane, as appropriate.

Support for AAA.USER and AAA.LOGIN expressions

The AAA.USER expression is now implemented to replace the existing HTTP.REQ.USER expressions. The AAA.USER expression is applicable to handle non-HTTP traffic, such as the Secure Web Gateway (SWG) and role-based access (RBA) mechanism. The AAA.USER expressions are equivalent to HTTP.REQ.USER expressions.

You can use the expression at various actions or profiles configuration.

At the command prompt, type:

```
1 add tm trafficAction <name> [SSO (ON|OFF)] [-userExpression <string>]
2
3 add tm trafficAction <name> [SSO (ON|OFF)] [-passwdExpression <string>]
```

Example

```
1 add tm trafficAction tm_act -SSO ON -userExpression "AAA.USER.NAME"
2
3 add tm trafficAction tm_act -SSO ON -userExpression "AAA.USER.PASSWD"
4
5 add tm trafficPolicy tm_pol true tm_act
6
7 bind lb vserver lb1 -policyName tm_pol -priority 2
```

Note:

If you use HTTP.REQ.USER expression, a warning message “HTTP.REQ.USER has been deprecated. Use AAA.USER instead” appears on the command prompt.

- **AAA.LOGIN Expression.** The LOGIN expression represents pre-login, also known as the login request. The login request can be from NetScaler Gateway, SAML IdP, or from OAuth authentication. The NetScaler will abstract the required attributes from the policy configuration. The AAA.LOGIN expression contains the attributes, which can be fetched based on the following:
 - **AAA.LOGIN.USERNAME.** The user name (if found) is fetched from the current login request. The same expression applied to a non-login request (determined by an authentication, authorization, and auditing) results in an empty string.
 - **AAA.LOGIN.PASSWORD.** The user password (if found) is fetched from the current login request. The expression results in an empty string if the password is not found.

- **AAA.LOGIN.PASSWORD2.** The second password (if found) is fetched from the login request.
- **AAA.LOGIN.DOMAIN.** The domain information is fetched from the login request.
- **AAA.LOGIN.VALUE("#").** The expression is used to retrieve information associated with your account when are you logged in. Here # is a string value. You can use these index values by using the expression AAA.LOGIN.VALUE("#"). The authentication, authorization, and auditing module looks up the login sessions value and AAA.LOGIN.VALUE("#") queries the hash table for that particular attribute. For example, if Value("username") is set, AAA.LOGIN.VALUE("#") queries the hash map and fetches the value corresponding to username.
- **AAA.USER.ATTRIBUTE("#").** The expression is used to store user attribute. Here # can either be an integer value (between 1 and 16) or a string value. You can use these index values by using the expression AAA.USER.ATTRIBUTE("#"). The authentication, authorization, and auditing module looks up the user sessions attribute and AAA.USER.ATTRIBUTE("#") queries the hash table for that particular attribute. For example, if Attributes("samaccountname") is set, AAA.USER.ATTRIBUTE("samaccountname") queries the hash map and fetches the value corresponding to samaccountname.

Traffic policies

After you create one or more form SSO and traffic profiles, you create traffic policies and then bind the policies, either globally or to a traffic management virtual server, to put them into effect.

To create a traffic policy by using the command line interface

At the command prompt, type:

```
1 add tm trafficPolicy <name> <rule> <action>
```

Example

```
1 add tm trafficPolicy Traffic-Pol-1 "HTTP.REQ.HEADER("Cookie").CONTAINS("login=true)" Traffic-Prof-1
```

To modify a traffic policy by using the command line interface

At the command prompt, type:

```
1 set tm trafficPolicy <name> <rule> <action>
```

Example


```
1 set tm trafficPolicy Traffic-Pol-1 "HTTP.REQ.HEADER("Cookie").CONTAINS(
    "login=true)" Traffic-Prof-1
```

To globally bind a traffic policy by using the command line interface

At the command prompt, type:

```
1 bind tm global -policyName <string> [-priority <priority>]
```

Example

```
1 bind tm global -policyName Traffic-Pol-1
```

To bind a traffic policy to a load balancing or content switching virtual server by using the command line interface

At the command prompt, type one of the following commands:

```
1 bind lb vserver <name> -policy <policyName> [-priority <priority>]
2
3 bind cs vserver <name> -policy <policyName> [-priority <priority>]
```

Example

```
1 bind authentication vserver auth-vserver-1 -policyName Traffic-Pol-1 -
    priority 1000
```

To unbind a globally bound traffic policy by using the command line interface

At the command prompt, type:

```
1 unbind tm global -policyName <polycyname>
```

Example

```
1 unbind tm global -policyName Traffic-Pol-1
```

To unbind a traffic policy from a load balancing or content switching virtual server by using the command line interface

At the command prompt, type one of the following commands:

```
1 unbind lb vserver <name> -policy <policyname>
2
3 unbind cs vserver <name> -policy <policyname>
```

Example

```
1 unbind authentication vserver auth-vserver-1 -policyName Traffic-Pol-1
```

To remove a traffic policy by using the command line interface

First unbind the session policy from global, and then, at the command prompt, type:

```
1 rm tm trafficPolicy <name>
```

Example

```
1 rm tm trafficPolicy Traffic-Pol-1
```

To configure and bind traffic policies by using the configuration utility

1. Navigate to **Security > AAA - Application Traffic > Traffic**.
2. Navigate to **Security > AAA - Application Traffic > Policies > Traffic**.
3. In the details pane, do one of the following:
 - To create a new session policy, click **Add**.
 - To modify an existing session policy, select the policy, and then click **Edit**.
4. In the **Create Traffic Policy** or **Configure Traffic Policy** dialog, specify values for the parameters.
 - Name*—policyName (Cannot be changed for a previously configured session policy.)
 - Profile*—actionName
 - Expression—rule (You enter expressions by first choosing the type of expression in the left-most drop-down list beneath the Expression text area and then typing your expression directly into the expression text area, or by clicking Add to open the Add Expression dialog box and using the drop-down lists in it to construct your expression.)
5. Click **Create** or **OK**. The policy that you created appears in the details pane of the **Session Policies** and **Profiles** page.

Form SSO profiles

To enable and configure forms-based SSO, you first create an SSO profile.

Note

- Forms-based single sign-on does not work if the form is customized to include Javascript.
- In this feature, the terms “profile” and “action” mean the same thing.

To create a form SSO profile by using the command line interface

At the command prompt, type:

```
1 add tm formSSOAction <name> -actionURL <URL> -userField <string> -  
  passwdField <string> -ssoSuccessRule <expression> [-nameValuePair <  
  string>] [-responseSize <positive_integer>][-nvtype ( STATIC |  
  DYNAMIC )][ -submitMethod ( GET | POST ) ]  
2  
3 show tm formSSOAction [<name>]
```

Example

```
1 add tm formSSOAction SSO-Prof-1 -actionURL "/logon.php"  
2 -userField "loginID" -passwdField "passwd"  
3 -nameValuePair "loginID passwd" -responseSize "9096"  
4 -ssoSuccessRule "HTTP.RES.HEADER("Set-Cookie").CONTAINS("LogonID")"  
5 -nvtype STATIC -submitMethod GET  
6 -sessTimeout 10 -defaultAuthorizationAction ALLOW
```

To modify a form SSO by using the command line interface

At the command prompt, type:

```
1 set tm formSSOAction <name> -actionURL <URL> -userField <string> -  
  passwdField <string> -ssoSuccessRule <expression> [-nameValuePair <  
  string>] [-responseSize <positive_integer>][-nvtype ( STATIC |  
  DYNAMIC )][ -submitMethod ( GET | POST ) ]
```

Example

```
1 set tm formSSOAction SSO-Prof-1 -actionURL "/logon.php"  
2 -userField "loginID" -passwdField "passwd"  
3 -ssoSuccessRule "HTTP.RES.HEADER("Set-Cookie").CONTAINS("LogonID")"  
4 -nameValuePair "loginID passwd" -responseSize "9096"  
5 -nvtype STATIC -submitMethod GET  
6 -sessTimeout 10 -defaultAuthorizationAction ALLOW
```

To remove a form SSO profile by using the command line interface

At the command prompt, type:

```
1 rm tm formSSOAction <name>
```

Example

```
1 rm tm sessionAction SSO-Prof-1
```

To configure form SSO profiles by using the configuration utility

1. Navigate to **Security > AAA - Application Traffic > Policies > Traffic**.
2. In the details pane, click the **Form SSO Profiles** tab.
3. On the Form SSO Profiles tab, do one of the following:
 - To create a new form SSO profile, click **Add**.
 - To modify an existing form SSO profile, select the profile, and then click Edit.
4. In the **Create Form SSO Profile** or **Configure Form SSO Profile** dialog, specify the values for the parameters:
 - Name*—name (Cannot be changed for a previously configured session action.)
 - Action URL*—actionURL
 - User Name Field*—userField
 - Password Field*—passField
 - Expression*—ssoSuccessRule
 - Name Value Pair—nameValuePair
 - Response Size—responsesize
 - Extraction—nvtype
 - Submit Method—submitMethod
5. Click **Create** or **OK**, and then click **Close**. The form SSO profile that you created appears in the **Traffic Policies, Profiles**, and **Form SSO Profiles** pane.

SAML SSO profiles

To enable and configure SAML-based SSO, you first create a SAML SSO profile.

To create a SAML SSO profile by using the command line interface

At the command prompt, type:

```
1 add tm samlSSOProfile <name> -samlSigningCertName <string> -  
  assertionConsumerServiceURL <URL> -relaystateRule <expression> -  
  sendPassword (ON | OFF) [-samlIssuerName <string>]
```

Example

```
1 add tm samlSSOProfile saml-SSO-Prof-1 -samlSigningCertName "Example, Inc." -assertionConsumerServiceURL "https://service.example.com" -relaystateRule "true" -sendPassword "ON" -samlIssuerName "Example, Inc."
```

To modify a SAML SSO by using the command line interface

At the command prompt, type:

```
1 set tm samlSSOProfile <name> -samlSigningCertName <string> -assertionConsumerServiceURL <URL> -relaystateRule <expression> -sendPassword (ON | OFF) [-samlIssuerName <string>]
```

Example

```
1 set tm samlSSOProfile saml-SSO-Prof-1 -samlSigningCertName "Example, Inc." -assertionConsumerServiceURL "https://service.example.com" -relaystateRule "true" -sendPassword "ON" -samlIssuerName "Example, Inc."
```

To remove a SAML SSO profile by using the command line interface

At the command prompt, type:

```
1 rm tm samlSSOProfile <name>
```

Example

```
1 rm tm sessionAction saml-SSO-Prof-1
```

To configure a SAML SSO profile by using the configuration utility

1. Navigate to **Security > AAA - Application Traffic > Policies > Traffic**.
2. In the details pane, click the **SAML SSO Profiles** tab.
3. On the **SAML SSO Profiles** tab, do one of the following:
 - To create a new SAML SSO profile, click **Add**.
 - To modify an existing SAML SSO profile, select the profile, and then click **OpenEdit**.
4. In the **Create SAML SSO Profiles** or the **Configure SAML SSO Profiles** dialog box, set the following parameters:
 - Name*
 - Signing Certificate Name*

- ACS URL*
- Relay State Rule*
- Send Password
- Issuer Name

5. Click **Create** or **OK**, and then click **Close**. The SAML SSO profile that you created appears in the Traffic Policies, Profiles, and SAML SSO Profiles pane.

Session timeout for OWA 2010

You can now force OWA 2010 connections to time out after a specified period of inactivity. OWA sends repeated keepalive requests to the server to prevent timeouts. Keeping the connections open can interfere with single sign-on.

To force OWA 2010 to time out after a specified period by using the command line interface

At the command prompt, type the following commands:

```
1 add tm trafficAction <actname> [-forcedTimeout <forcedTimeout> -
  forcedTimeoutVal <mins>]
```

For <actname>, substitute a name for your traffic policy. For <mins>, substitute the number of minutes after which to initiate a forced timeout. For <forcedTimeout>, substitute one of the following values:

-START —Starts the timer for forced timeout if a timer has not already been started. If a running timer exists, has no effect.

-STOP —Stops a running timer. If no running timer is found, has no effect.

-RESET —Restarts a running timer. If no running timer is found, starts a timer as if the START option had been used.

```
1 add tm trafficPolicy <polname> <rule> <actname>
```

For <polname>, substitute a name for your traffic policy. For <rule>, substitute a rule in NetScaler Advanced policy.

```
1 bind lb vserver <vservname> -policyName <name> -priority <number>
```

For <vservname>, substitute the name of the authentication, authorization, and auditing traffic management virtual server. For <priority>, substitute an integer that designates the policy's priority.

Example

```
1 add tm trafficAction act-owa2010timeout -forcedTimeout RESET -
   forcedTimeoutVal 10
2 add tm trafficPolicy pol-owa2010timeout true act-owa2010timeout
3 bind lb vserver vs-owa2010 -policyName pol-owa2010timeout -priority 10
```

Rate Limiting for NetScaler Gateway

December 23, 2024

The rate limiting feature for NetScaler Gateway enables you to define the maximum load for a given network entity or virtual entity on the NetScaler Gateway appliance. Since the NetScaler Gateway appliance consumes all the unauthenticated traffic, the appliance is often exposed to process requests at a high rate. The rate limiting feature enables you to configure the NetScaler Gateway appliance to monitor the rate of traffic associated with an entity and take preventive action, in real time, based on the traffic. For more information about how rate limiting works in a NetScaler appliance, see [Rate limiting](#).

NetScaler has the rate limiting feature that provides protection to back-end servers for an unforeseen rate. Since the feature for NetScaler did not serve the unauthenticated traffic that NetScaler Gateway handles, NetScaler Gateway needed its own rate limiting functionality. This is needed to check an unforeseen rate of requests from various sources the NetScaler Gateway appliance is exposed to. For example, unauthenticated/login/control requests and certain APIs exposed for end user or device validations.

Common use-cases for Rate limiting

- Limit the number of requests per second from a URL.
- Drop a connection based on cookies received in request from a particular host if the request exceeds the rate limit.
- Limit the number of HTTP requests that arrive from the same host (with a particular subnet mask) and that have the same destination IP address.

Configure Rate Limiting for NetScaler Gateway

Prerequisites

A configured authentication virtual server.

Points to note

- In the configuration steps, a sample limit identifier is configured. The same can be configured with all the supported parameters like stream selector, mode. For an exhaustive description of the rate limiting capabilities, see [Rate limiting](#).
- The policy can also be bound to a VPN virtual server as follows. You need a configured VPN virtual server to bind the policies using the following command.

```
1 bind vpn vserver -policy denylogin -pri 1 -type aaa_request
```

- AAA_REQUEST is a newly introduced bindpoint for responder policies. The policies configured at this bind point are applied to all the incoming request at the specified virtual server. The policies are processed for the unauthenticated/control traffic first before any other processing.
- Binding the policy to the NetScaler Gateway virtual server enables rate limiting at the AAA_REQUEST bindpoint for all the traffic consumed by NetScaler Gateway including unauthenticated requests.
- Binding the policy to an authentication virtual server rate limits the unauthenticated/control requests hitting the authentication virtual server.

To configure rate limiting by using the command line interface, at the command prompt, type the following commands:

```
1 add limitIdentifier <limitIdentifier name> -threshold <positive_integer>
  > -timeslice <positive_integer> -mode <mode type>
```

Example:

```
1 add limitIdentifier limit_one_login -threshold 3 -timeslice 6000 -mode
  REQUEST_RATE
```

```
1 add responder action denylogin respondwith "\"HTTP/1.1 200 OK\r\n\r\nRequest is denied due to unusual rate\\""
```

```
1 add responder policy denylogin 'sys.check_limit("limit_one_login")'
  denylogin
```

```
1 bind authentication vserver <vserver name> -policy denylogin -priority
  1 -type aaa_request
```

Example:

```
1 bind authentication vserver authvserver -policy denylogin -priority 1 -
  type aaa_request
```


Parameter description

- **limitIdentifier** - Name for a rate limit identifier. Must begin with an ASCII letter or underscore (_) character, and must consist only of ASCII alphanumeric or underscore characters. Reserved words must not be used. This is a mandatory argument. Maximum Length: 31
- **threshold** - A maximum number of requests that are allowed in the given timeslice when requests (mode is set as REQUEST_RATE) are tracked per timeslice. When connections (mode is set as CONNECTION) are tracked, it is the total number of connections that would be let through. Default value: 1 Minimum value: 1 Maximum Value: 4294967295
- **timeSlice** - Time interval, in milliseconds, specified in multiples of 10, during which requests are tracked to check if they cross the threshold. The argument is needed only when the mode is set to REQUEST_RATE. Default value: 1000 Minimum value: 10 Maximum Value: 4294967295
- **mode** - Defines the type of traffic to be tracked.
 - REQUEST_RATE - Tracks requests/timeslice.
 - CONNECTION - Tracks active transactions.

To configure Rate Limiting using the NetScaler GUI:

1. Navigate to **AppExpert > Rate Limiting > Limit Identifiers**, click **Add** and specify the relevant details as specified in the CLI section.

← Create Limit Identifier

Name*	<input type="text" value="Gateway_limit_identifier"/>	i
Selector	<input type="text" value="Top_CLIENTS"/>	<input type="button" value="Add"/> <input type="button" value="Edit"/> i
Mode*	<input type="text" value="REQUEST_RATE"/>	
Limit Type*	<input type="text" value="BURSTY"/>	
Threshold	<input type="text" value="1"/>	
Time Slice (msec)	<input type="text" value="1000"/>	
Maximum Bandwidth (Kbps)	<input type="text" value="0"/>	
Traps	<input type="text" value="0"/>	

2. Navigate to **AppExpert>Responder>Policies**. On the **Responder Policies** page, click **Add**.
3. On the **Create Responder Policy** page, create a responder policy with a responder action which has the limit identifier.
4. To create a responder action, Click **Add** next to **Action**.
5. On the **Create Responder Action** page, enter a name for responder action.
6. Select the type as **Respond with** from the drop-down menu.
7. In the Expression editor, configure the response message. For example, `"HTTP/1.1 200 OK \r\n\r\n" + "Request is denied due to unusual rate"`.
8. Click **Create**.
9. To create a responder policy, on the **Create Responder Policy** page, enter a name for the responder policy.
10. In the Expression editor, configure the condition for the responder policy. For example, `'sys.check_limit("limit_one_login")'`.
11. Click **Create**.
12. Bind the responder policy to the authentication virtual server.

- Go to **Security>AAA-Application Traffic>Virtual server**.
- Select the virtual server.
- Add a policy.
- Choose the responder policy that you want to bind to the server, set the priority.
- Choose the type as **AAA-REQUEST** and click **Continue**.

Note:

You can also enable rate limiting at the AAA_REQUEST bind point for the VPN virtual server.

Configuration for the common use cases for applying rate limiting to NetScaler Gateway

The following are the examples of commands to configure common use cases.

- Limit the number of requests per second from a URL.

```

1  add stream selector ipStreamSelector http.req.url "client.ip.src
   "
2
3  add ns limitIdentifier ipLimitIdentifier -threshold 4 -
   timeslice 1000 -mode request_rate -limitType smooth -
   selectorName ip StreamSelector
4
5  add responder policy ipLimitResponderPolicy "http.req.url.
   contains(\ "myasp.asp\ ") && sys.check_limit(\ "
   ipLimitIdentifier\ ") " myWebSiteRedirectAction
6
7  bind authentication virtual server authvserver -policy denylogin
   -pri 1 -type aaa_request

```

- Drop a connection based on cookies received in request from `www.yourcompany.com` if the request exceeds the rate limit.

```

1  add stream selector cacheStreamSelector "http.req.cookie.value(\
   "mycookie\ ") " "client.ip.src.subnet(24) "
2
3  add ns limitIdentifier myLimitIdentifier -Threshold 2 -
   timeSlice 3000 -selectorName reqCookieStreamSelector
4
5  add responder action sendRedirectURL redirect `"http://www.
   mycompany.com\ "` + http.req.url'
6
7  add responder policy rateLimitCookiePolicy
8
9  "http.req.url.contains(\www.yourcompany.com\ ) && sys.check_limit
   (\ "myLimitIdentifier\ ") " sendRedirectUrl

```

- Limit the number of HTTP requests that arrive from the same host (with a subnet mask of 32) and that have the same destination IP address.

```

1  add stream selector ipv6_sel "CLIENT.IPv6.src.subnet(32)" CLIENT
    .IPv6.dst
2
3  add ns limitIdentifier ipv6_id -imeSlice 20000 -selectorName
    ipv6_sel
4
5  add lb vserver ipv6_vip HTTP 3ffe:: 209 80 -persistenceType NONE
    -cltTime
6
7  add responder action redirect_page redirect "\ " `http://
    redirectpage.com/\ " "`
8
9  add responder policy ipv6_resp_pol "SYS.CHECK_LIMIT(\ " ipv6_id\
    )" " redirect_page
10
11 bind responder global ipv6_resp_pol 5 END -type DEFAULT

```

- Limit the number of authentication attempts against an authentication, authorization, and auditing virtual server or Gateway virtual server

```

1  add stream selector URLStreamSelector HTTP.REQ.URL
2
3  add ns limitIdentifier Request_limit -threshold 3 -timeSlice 1000
    -selectorName URLStreamSelector -mode REQUEST_RATE -limitType
    BURSTY
4
5  add responder policy Rate_limit_pol "HTTP.REQ.URL.CONTAINS(\
    doAuthentication.do\)"&&SYS.CHECK_LIMIT("\Request_limit\)"
    RESET
6
7  bind vpn vserver <vserver_names> -policy Rate_limit_pol -priority
    100 -gotoPriorityExpression END -type AAA_REQUEST

```

Bind responder policy for authentication, authorization, and auditing endpoints

To allow the packet engine to handle the requests, bind the responder policy to the authentication virtual server or the VPN virtual server by using the `AAA_REQUEST` bindpoint.

- **Example for VPN virtual server:** `bind vpn vserver vpnVs -policy resp_pol -priority 6 -type AAA_REQUEST`
- **Example for authentication virtual server:** `bind authentication vserver av_vs -policy resp_pol -priority 6 -type AAA_REQUEST`

To allow the Apache HTTP server to handle the requests, bind the responder policy to the authentication virtual server or the VPN virtual server by using the `REQUEST` bindpoint.

For example,

- **Example for VPN virtual server:** `bind vpn vserver vpnVs -policy resp_pol -priority 6 -type REQUEST`
- **Example for authentication virtual server:** `bind authentication vserver av_vs -policy resp_pol -priority 6 -type REQUEST`

For details about binding responder policies, see [Bind a responder policy](#).

Client source IP address tracking

August 29, 2024

NetScaler supports validating the client IP address after validating the NSC_TMAS cookie to ensure that requests are generated from the same client IP address. If a client request comes from a different source IP, even with a valid session cookie, the session is discarded, and the user will be prompted to log in again. This adds an extra layer of security and verification to the authentication process.

Configure client source IP address tracking for sessions

To support this functionality, two new PI expressions AAA.USER.SOURCEIP and AAA.USER.SOURCEIPV6 is introduced. These expressions return the source IPV4/IPV6 address stored in the AAA-TM or AAA Session. You can create an authorization policy to validate the client's source IP address for each request that comes with a cookie by using these expressions.

Note:

The AAA.USER.SOURCEIP and AAA.USER.SOURCEIPV6 expressions are only available in NetScaler 14.1-25.x, 13.1- 53. x, 13.1-37 FIPS and later releases.

To configure authorization policy using PI expressions:

At the command prompt, type:

```
add authorization policy <policy_name> <expression> <action>
```

Example:

```
1 add lb vserver <LB_VS> HTTP <LB-VIP> <PORT> -AuthenticationHost <
  AUTH_VIP> -Authentication ON
2 add authentication vserver <AUTH_VS> SSL <Auth-VIP> <PORT>
3 add authorization policy validateClientIP "AAA.USER.SOURCEIP.EQ(CLIENT
  .IP.SRC).NOT" DENY
4 bind lb vserver <LB_VS> -policy validateClientIP -priority 1
```

Authorizing user access to application resources

November 15, 2022

You can control the resources that an authenticated user can access within an application.

To do this, associate an authorization policy to each of the users, either individually or by associating the policy to a group of users. The authorization policy must specify the following:

- **Rule.** The resource to which access must be authorized. This can be specified by using basic or advanced expressions.
- **Action.** Whether access to the resource must be allowed or denied.

By default, access to all resources within an application is **DENIED** to all users. However, you can change this default authorization action to **ALLOW** access to all users (by setting the session parameters in session profile or by setting the global session parameters).

Warning

For optimum security, Citrix recommends that you do not to change the default authorization action from DENY to ALLOW. Instead, it is advised to create specific authorization policies for users who need access to specific resources.

To configure authorization by using the CLI

1. Configure the authorization policy.

```
ns-cli-prompt> add authorization policy <name> <rule> <action>
```

2. Associate the policy with the appropriate user or group.

- Bind the policy to a specific user.

```
ns-cli-prompt> bind aaa user <username> -policy <policyname>
```

- Bind the policy to a specific group.

```
ns-cli-prompt> bind aaa group <groupName> -policy <policyname>
```

To configure authorization by using the GUI (Configuration tab)

1. Create the authorization policy.

Navigate to **Security > AAA - Application Traffic > Policies > Authorization**, click **Add** and then define the policy as required.

2. Associate the policy with the appropriate user or group.

Navigate to **Security > AAA - Application Traffic > Users** or **Groups**, and edit the relevant user or group to associate it with the authorization policy.

Sample authorization configurations

Here are some example configurations to authorize user access to some application resources. Note that these are CLI commands. You can do similar configurations using the GUI, although you must not enclose the expression within quotes (“”).

```
1 add authorization policy authzpol1 "HTTP.REQ.URL.SUFFIX.EQ(\.gif\n)" ALLOW
```

```
1 bind aaa user user1 -policy authzpol1
```

```
1 add authorization policy authzpol2 "HTTP.REQ.URL.SUFFIX.EQ(\.png\n)" DENY
```

```
1 bind aaa group group1 -policy authzpol2
```

Audit authenticated sessions

May 2, 2023

You can configure the NetScaler appliance to keep a log of all the events that are triggered in an authenticated session. Using this information, you can audit state and status information, to see the history for users in chronological order.

To do this, define an audit policy that specifies the following:

- **Log type.** The logs can be stored remotely (syslog) or locally on the NetScaler appliance (nslog).
- **Rule.** The conditions on which the logs are stored.
- **Action.** Details of the log server and other details for creating the log entries.

This audit policy can be configured at different levels: user-level, group-level, authentication, authorization, and auditing virtual server, and global system level. The policies configured at the user-level have the highest priority.

Note

This topic details steps for using syslog. Make necessary changes to use nslog.

To configure syslog auditing by using the CLI

1. Configure the audit server with the relevant log settings.

```
ns-cli-prompt> add audit syslogAction <name> <serverIP> ...
```

2. Configure the audit policy by associating the audit server.

```
ns-cli-prompt> add audit syslogPolicy <name> <rule> <action>
```

3. Associate the audit policy with one of the following entities:

- Bind the policy to a specific user.

```
ns-cli-prompt> bind aaa user <userName>-policy <policyname> ...
```

- Bind the policy to a specific group.

```
ns-cli-prompt> bind aaa group <groupName>-policy <policyname> ...
```

- Bind the policy to a authentication, authorization, and auditing virtual server.

```
ns-cli-prompt> bind authentication vserver <name> -policy <policyname> ...
```

- Bind the policy globally to the NetScaler appliance.

```
ns-cli-prompt> bind tm global -policyName <policyname> ...
```

To configure syslog auditing by using the GUI (Configuration tab)

1. Configure the audit server and policy.

Navigate to **Security > AAA - Application Traffic > Policies > Auditing > Syslog**, and configure the server and the policy in the relevant tabs.

2. Associate the policy with one of the following:

- Bind the policy to a specific user.

Navigate to **Security > AAA - Application Traffic > Users**, and associate the authorization policy with the relevant user.

- Bind the policy to a specific group.

Navigate to **Security > AAA - Application Traffic > Groups**, and associate the authorization policy with the relevant group.

- Bind the policy to a authentication, authorization, and auditing virtual server.
Navigate to **Security > AAA - Application Traffic > Virtual Servers**, and associate the authorization policy with the relevant virtual server.
- Bind the policy globally to the NetScaler appliance.
Navigate to **Security > AAA - Application Traffic > Policies > Auditing > Syslog or Nslog**, select the authorization policy, and click **Action > Global Bindings** to bind the policy globally.

NetScaler as an Active Directory Federation Services proxy

May 2, 2023

Active Directory Federation Services (ADFS) is a Microsoft service that enables single sign-on (SSO) experience for Active Directory-authenticated clients to resources outside the enterprise data center. An ADFS server farm allows internal users to access external cloud-hosted services. But the moment external users are brought into the mix, the external users must be given a way to connect remotely and access cloud-based services through federated identity. Most enterprises do not prefer keeping the ADFS server exposed in the DMZ. Therefore, ADFS proxy plays a critical role in remote user connectivity and application access.

For more than a decade, NetScaler appliance is playing similar roles of remote user connectivity, and application access. NetScaler appliance becomes the preferred solution to be used as ADFS proxy for supporting a new ADFS implementation to enable the following services:

- Secure connectivity.
- Authentication and handling of federated identity.

For more information about NetScaler as a SAML IdP, see [NetScaler as a SAML IdP](#).

Advantages of ADFS proxy

- Reduces the footprint in DMZ to cater the need for most of the enterprises.
- Provides an SSO experience for end users.
- Supports rich methods for pre-authentication and enables multifactor authentication.
- Supports both active and passive clients.


Prerequisites for using NetScaler as ADFS proxy

Before you configure the NetScaler appliance as an ADFS proxy, make sure that the following prerequisites are met:

- A NetScaler appliance with 12.1 build or later.
- Domain ADFS server.
- Domain SSL certificate.
- Virtual IP for Content Switching virtual server.
- Enable Load Balancing, SSL Offload, Content Switching, Rewrite, and authentication, authorization, and auditing traffic management features on NetScaler appliance.

Configure NetScaler appliance as ADFS proxy

To achieve this use case, configure NetScaler as an ADFS proxy in a DMZ zone. The ADFS server is configured along with the AD domain controller in the back-end.

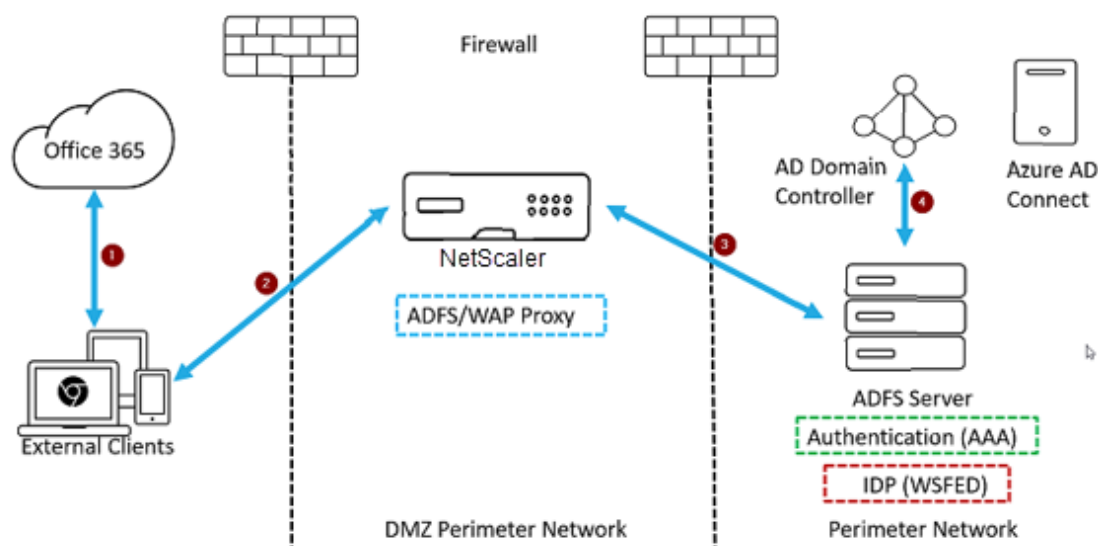

1. A client request to access Microsoft Office365 gets redirected to NetScaler deployed as ADFS proxy.
2. User's credentials are passed to the ADFS server.
3. ADFS server authenticates the credentials with on-premises AD of the domain.
4. ADFS server upon successful validation of credentials with AD, generates a token which is passed to Microsoft Office365 for session establishment.

The following are the high-level steps involved in configuring NetScaler appliance before you configure as ADFS proxy.

At the NetScaler command prompt, type the following commands:

1. Create an SSL profile for the back-end and enable SNI in the SSL profile. Disable SSLv3/TLS1.

```
add ssl profile <new SSL profile> -sslprofileType backEnd -
sniEnable ENABLED -ssl3 DISABLED -tls1 DISABLED -commonName <
FQDN of ADFS>
```

2. Disable SSLv3/TLS1 for the service.

```
set ssl service <adfs service name> -sslProfile <SSL profile
created in the above step>
```

3. Enable SNI extension for back-end server handshakes.

- set vpn parameter -backendServerSni ENABLED
- set ssl parameter -denySSLReneg NONSECURE

Configure NetScaler appliance as ADFS proxy using the CLI

The following sections are categorized based on the requirement to complete the configuration steps.

To configure ADFS service

1. Configure ADFS service on NetScaler for ADFS server.

```
add service <Domain_ADFS_Service> <ADFS Server IP> SSL 443 -gslb
NONE -maxClient 0 -maxReq 0 -cip DISABLED -usip NO -useproxyport
YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -TCPB NO -CMP
NO
```

Example

```
add service CTXTEST_ADFS_Service 1.1.1.1 SSL 443 -gslb NONE -maxClient 0 -maxReq 0 -cip
DISABLED -usip NO -useproxyport YES -sp OFF -cltTimeout 180 -svrTimeout 360 -CKA NO -TCPB
NO -CMP NO
```

2. Configure FQDN for content switching virtual server and enable SNI.

```
set ssl service <Domain_ADFS_Service> -SNIEnable ENABLED -commonName
<sts.domain.com>
```

Example

```
set ssl service CTXTEST_ADFS_Service -SNIEnable ENABLED -commonName sts.ctxtest.com
```

To configure ADFS load balancing virtual server**Important**

Domain SSL certificate (SSL_CERT) is required for secure traffic.

1. Configure ADFS load balancing virtual server.

```
add lb vserver <Domain_ADFS_LBVS> SSL <IP_address> -persistenceType  
NONE -cltTimeout 180
```

Example

```
add lb vserver CTXTEST_ADFS_LBVS SSL 192.168.1.0 -persistenceType  
NONE -cltTimeout 180
```

2. Bind ADFS load balancing virtual server to ADFS service.

```
bind lb vserver <Domain_ADFS_LBVS> <Domain_ADFS_Service>
```

Example

```
bind lb vserver CTXTEST_ADFS_LBVS CTXTEST_ADFS_Service
```

3. Bind an SSL virtual server certificate-key pair.

```
bind ssl vserver <Domain_ADFS_LBVS> -certkeyName <SSL_CERT>
```

Example

```
bind ssl vserver CTXTEST_ADFS_LBVS -certkeyName ctxtest_newcert_2019
```

To configure content switching virtual server for domain**Note**

One free virtual IP (for example, 2.2.2.2), which is NATed to public IP is required for a content switching virtual server. It must be reachable for both external and internal traffic.

1. Create a content switching virtual server with free VIP.

```
add cs vserver <Domain_CSVS> SSL <FREE VIP> 443 -cltTimeout 180 -  
persistenceType NONE
```

Example

```
add cs vserver CTXTEST_CSVS SSL 2.2.2.2 443 -cltTimeout 180 -  
persistenceType NONE
```

2. Bind content switching virtual server to load balancing virtual server.

```
bind cs vserver <Domain_CSVS> -lbvserver <Domain_ADFS_LBVS>
```

Example

- `bind cs vserver CTXTEST_CSVS -lbvserver CTXTEST_ADFS_LBVS`
- `set ssl vserver CTXTEST_CSVS -sessReuse DISABLED`

3. Bind an SSL virtual server certificate-key pair.

```
bind ssl vserver <Domain_CSVS> -certkeyName <SSL_CERT>
```

Example

```
bind ssl vserver CTXTEST_CSVS -certkeyName ctxtest_newcert_2019
```

Supported protocols

The Microsoft provided protocols plays a vital role in integrating with the NetScaler appliance. NetScaler as ADFS proxy supports the following protocols:

- **WS-Federation.** For details, see [Web Services Federation protocol](#).
- **ADFSPIP.** For details, see [Active Directory Federation Service Proxy Integration Protocol compliance](#).

Note

NetScaler appliance does not support device certificate authentication when deployed as an ADFS proxy.

Web Services Federation protocol

June 21, 2024

Web Services Federation (WS-Federation) is an identity protocol that allows a Security Token Service (STS) in one trust domain to provide authentication information to an STS in another trust domain when there is a trust relationship between the two domains.

Advantages of WS-Federation

WS-Federation supports both active and passive clients whereas SAML IdP supports only passive clients.

- Active clients are Microsoft native clients such as, Outlook, and Office clients (Word, PowerPoint, Excel, and OneNote).
- Passive clients are browser-based clients such as, Google Chrome, Mozilla Firefox, and Internet Explorer.

Prerequisites for using NetScaler as WS-Federation

Before you configure the NetScaler appliance as the ADFS proxy, review the following:

- Active Directory.
- Domain SSL certificate.
- NetScaler SSL certificate and ADFS token signing certificate on ADFS server must be the same.

Important

SAML IdP is now capable of handling the WS-Federation protocol. Therefore, to configure the WS-Federation IdP, you must actually configure the SAML IdP. You do not see any user interface explicitly mentioning WS-Federation.

Features supported by NetScaler when configured as ADFS proxy and WS-Federation IdP


The following table lists the features supported by the NetScaler appliance when configured as an ADFS proxy and WS-Federation IdP.

Features	Configure NetScaler appliance as ADFS		
	proxy	NetScaler as WS-Federation IdP	NetScaler as ADFSPIP
Load Balancing	Yes	Yes	Yes
SSL Termination	Yes	Yes	Yes
Rate Limiting	Yes	Yes	Yes
Consolidation (reduces DMZ server footprint and saves public IP)	Yes	Yes	Yes
Web Application Firewall (WAF)	Yes	Yes	Yes
Authentication Offload to NetScaler appliance	Yes	Yes (Active and Passive clients)	Yes
Single sign-on (SSO)	Yes	Yes (Active and Passive clients)	Yes
Multi-Factor (nFactor) authentication	No	Yes (Active and Passive clients)	Yes

Features	Configure NetScaler appliance as ADFS proxy	NetScaler as WS-Federation IdP	NetScaler as ADFSPIP
Azure multifactor authentication	No	Yes (Active and Passive clients)	Yes
ADFS server farm can be avoided	No	Yes	Yes

Configure NetScaler appliance as WS-Federation IdP

Configure NetScaler as WS-Federation IdP (SAML IdP) in a DMZ zone. The ADFS server is configured along with the AD domain controller in the back-end.

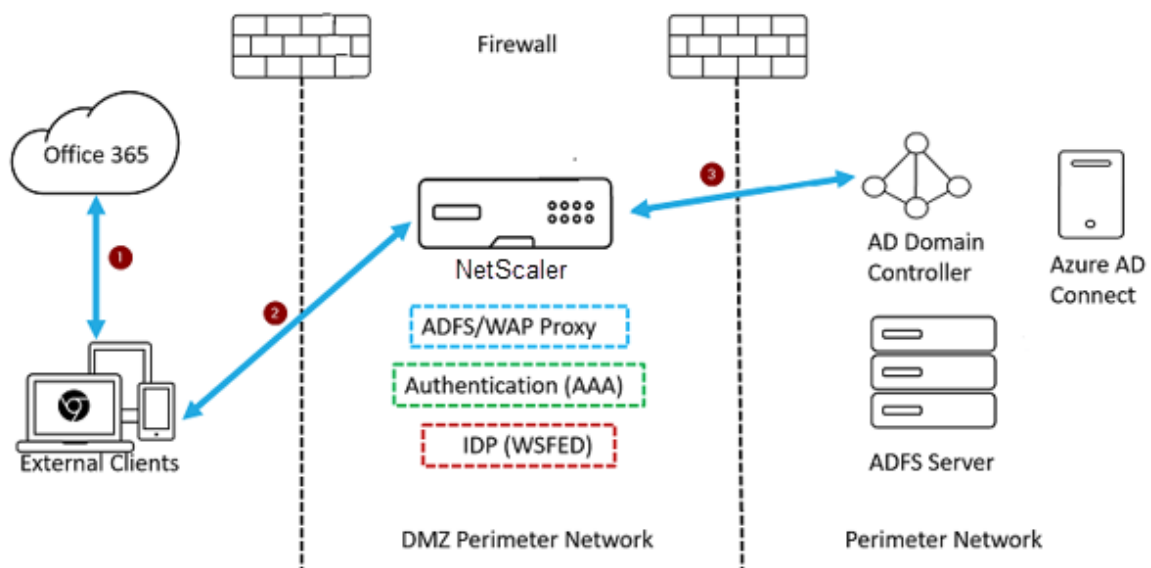

1. The client request to Microsoft Office365 gets redirected to the NetScaler appliance.
2. The user enters the credentials for multifactor authentication.
3. NetScaler validates the credentials with AD and generates a token natively on the NetScaler appliance. The credentials are passed to Office365 for access.

Note:

WS-Federation IdP support is done natively through the NetScaler appliance when compared to the F5 Networks load balancer.

Configure NetScaler appliance as WS-Federation IdP (SAML IdP) using the CLI

The following sections are categorized based on the requirement to complete the configuration steps.

To configure LDAP authentication and add policy

Important

For domain users, to log on to the NetScaler appliance by using their corporate email addresses, you must configure the following:

- Configure LDAP authentication server and policy on the NetScaler appliance.
- Bind it to your authentication, authorization, and auditing virtual IP address (use of an existing LDAP configuration is also supported).

```

1 add authentication ldapAction <Domain_LDAP_Action> -serverIP <Active
  Directory IP> -serverPort 636 -ldapBase "cn=Users,dc=domain,dc=com"
  -ldapBindDn "cn=administrator,cn=Users,dc=domain,dc=com" -
  ldapBindDnPassword <administrator password> -encrypted -
  encryptmethod ENCMTD_3 -ldapLoginName sAMAccountName -groupAttrName
  memberOf -subAttributeName cn -secType SSL -ssoNameAttribute
  UserPrincipalName -followReferrals ON -Attribute1 mail -Attribute2
  objectGUID
2
3 add authentication Policy <Domain_LDAP_Policy> -rule true -action <
  Domain_LDAP_Action>

```

Example

```

1 add authentication ldapAction CTXTEST_LDAP_Action -serverIP 3.3.3.3 -
  serverPort 636 -ldapBase "cn=Users,dc=ctxtest,dc=com" -ldapBindDn "
  cn=administrator,cn=Users,dc=ctxtest,dc=com" -ldapBindDnPassword
  xxxxxxxxxxxx -encrypted -encryptmethod ENCMTD_3 -ldapLoginName
  sAMAccountName -groupAttrName memberOf -subAttributeName cn -secType
  SSL -ssoNameAttribute UserPrincipalName -followReferrals ON -
  Attribute1 mail -Attribute2 objectGUID
2
3 add authentication Policy CTXTEST_LDAP_Policy -rule true -action
  CTXTEST_LDAP_Action

```

To configure NetScaler as WS-Federation IdP or SAML IdP

Create WS-Federation IdP (SAML IdP) action and policy for token generation. Bind it to the authentication, authorization, and auditing virtual server later.


```

1 add authentication samlIdPProfile <Domain_SAMLIDP_Profile> -
  samlIdPCertName <SSL_CERT> -assertionConsumerServiceURL "https://
  login.microsoftonline.com/login.srf" -samlIssuerName <Issuer Name
  for Office 365 in ADFS Server> -rejectUnsignedRequests OFF -audience
  urn:federation:MicrosoftOnline -NameIDFormat persistent -NameIDExpr
  "HTTP.REQ.USER.ATTRIBUTE(2).B64ENCODE" -Attribute1 IDPEmail -
  Attribute1Expr "HTTP.REQ.USER.ATTRIBUTE(1)"
2
3 add authentication samlIdPPolicy <Domain_SAMLIDP_Policy> -rule "HTTP.
  REQ.HEADER(\"referer\").CONTAINS(\"microsoft\") || true" -action <
  Domain_SAMLIDP_Profile>

```

Example

```

1 add authentication samlIdPProfile CTXTEST_SAMLIDP_Profile -
  samlIdPCertName ctxtest_newcert_2019 -assertionConsumerServiceURL "
  https://login.microsoftonline.com/login.srf" -samlIssuerName "http
  ://ctxtest.com/adfs/services/trust/" -rejectUnsignedRequests OFF -
  audience urn:federation:MicrosoftOnline -NameIDFormat persistent -
  NameIDExpr "HTTP.REQ.USER.ATTRIBUTE(2).B64ENCODE" -Attribute1
  IDPEmail -Attribute1Expr "HTTP.REQ.USER.ATTRIBUTE(1)"
2
3 add authentication samlIdPPolicy CTXTEST_SAMLIDP_Policy -rule "HTTP.REQ
  .HEADER(\"referer\").CONTAINS(\"microsoft\") || true" -action
  CTXTEST_SAMLIDP_Profile

```

To configure an authentication, authorization, and auditing virtual server to authenticate the employees who log on to Office365 using corporate credentials

```
1 add authentication vserver <Domain_AAA_VS> SSL <IP_address>`
```

Example

```

1 add authentication vserver CTXTEST_AAA_VS SSL 192.168.1.0
2
3 bind authentication vserver CTXTEST_AAA_VS -portaltheme RfWebUI

```

To bind authentication virtual server and policy

```

1 bind authentication vserver <Domain_AAA_VS> -policy <
  Domain_SAMLIDP_Policy> -priority 100 -gotoPriorityExpression NEXT
2
3 bind authentication vserver <Domain_AAA_VS> -policy <Domain_LDAP_Policy
  > -priority 100 -gotoPriorityExpression NEXT

```

Example

```
1 bind authentication vserver CTXTEST_AAA_VS -policy
  CTXTEST_SAMLIDP_Policy -priority 100 -gotoPriorityExpression NEXT
```

```
2
3 bind authentication vserver CTXTEST_AAA_VS -policy CTXTEST_LDAP_Policy
  -priority 100 -gotoPriorityExpression NEXT
4
5 bind ssl vserver CTXTEST_AAA_VS -certkeyName ctxtest_newcert_2019
```

To configure content switching

```
1 add cs action <Domain_CS_Action> -targetVserver <Domain_AAA_VS>
2
3 add cs policy <Domain_CS_Policy> -rule "is_vpn_url || http.req.url.
  contains(\"/ads/ls\") || http.req.url.contains(\"/ads/services/
  trust\") || -action <Domain_CS_Action>
```

Example

```
1 add cs action CTXTEST_CS_Action -targetVserver CTXTEST_AAA_VS
2
3 add cs policy CTXTEST_CS_Policy -rule "is_vpn_url || http.req.url.
  contains(\"/ads/ls\") || http.req.url.contains(\"/ads/services/
  trust\") || -action CTXTEST_CS_Action
```


To bind content switching virtual server to policy

```
1 bind cs vserver CTXTEST_CS_VS -policyName CTXTEST_CS_Policy -priority
  100
```

Active Directory Federation Service Proxy Integration Protocol compliance

June 21, 2024

If third-party proxies are to be used in place of the Web Application Proxy, they must support the MS-ADFSPiP protocol which specifies the ADFS and WAP integration rules. ADFSPiP integrates Active Directory Federation Services with an authentication and application proxy to enable access to services located inside the boundaries of the corporate network for clients that are located outside of that boundary.

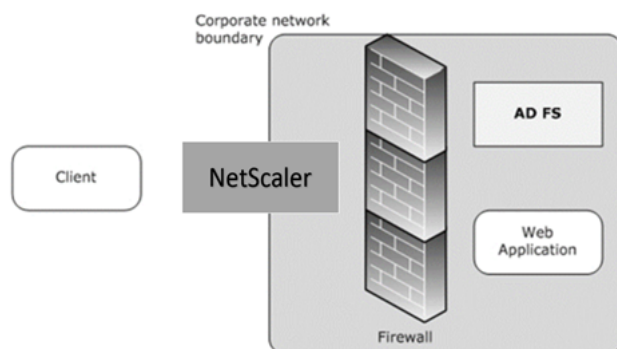

Prerequisites

To successfully establish Trust between the proxy server and the ADFS farm, review the following configuration in the NetScaler appliance:

- Create an SSL profile for the back end and enable SNI in the SSL profile. Disable SSLv3/TLS1. At the command prompt, type the following command:

```
1 add ssl profile <new SSL profile> -sniEnable ENABLED -ssl3
  DISABLED -tls1 DISABLED -commonName <FQDN of ADFS>
```

- Disable SSLv3/TLS1 for the service. At the command prompt, type the following command:

```
1 set ssl profile <adfs service name> -sessReuse <ENABLED|DISABLED>
  -tls1 <ENABLED|DISABLED> -SNIEnable <ENABLED|DISABLED> -
  commonName <name> -denySSLReneg <YES|NO>
```

Important

For Home Realm Discovery (HRD) scenarios where authentication must be offloaded to the ADFS server, Citrix recommends you disable both authentication and SSO on the NetScaler appliance.

Authentication mechanism

The following are the high-level flow of events for the authentication.

1. **Establish Trust with ADFS server** –The NetScaler server establishes Trust with the ADFS server by registering a client certificate. Once the Trust is established, the NetScaler appliance re-establishes the trust after reboot without user intervention.

Upon certificate expiry, you must reestablish the trust by removing and adding the ADFS proxy profile again.

2. **Published endpoints** - The NetScaler appliance automatically fetches the list of published endpoints on the ADFS server post trust establishment. These published endpoints filter the requests forwarded to the ADFS server.
3. **Insert headers to client requests** –When the NetScaler appliance tunnels client requests, the HTTP headers related to ADFS are added in the packet while sending them to the ADFS server. You can implement access control at the ADFS server based on these header values. The following headers are supported.
 - X-MS-Proxy
 - X-MS-Endpoint-Absolute-Path
 - X-MS-Forwarded-Client-IP
 - X-MS-Proxy
 - X-MS-Target-Role
 - X-MS-ADFS-Proxy-Client-IP
4. **Manage end-user traffic** –End-user traffic is routed securely to the desired resources.

Note:

- NetScaler uses form based authentication.
- NetScaler does not support publishing of an application using the Active Directory Federation Service Proxy Integration Protocol compliance.

Configure NetScaler to support ADFS server

Prerequisites

- Configure Context Switching (CS) server as front-end with authentication, authorization, and auditing server behind CS. At the command prompt, type:

```
1 add cs vserver cs_adfs_proxy SSL a.b.c.d 443 -cltTimeout 180 -  
AuthenticationHost adfs.ns.com
```

```
1 add cs action adfs_proxy_cs_act -targetVserver avs_adfs_proxy
```

```
1 add cs policy adfs_proxy_policy -rule is_vpn_url -action  
adfs_proxy_cs_act
```

```
1 bind cs vserver cs_adfs_proxy -policyName adfs_proxy_policy -  
priority 100
```

```
1 bind cs vserver cs_adfs_proxy -lbserver lb_adfs_proxy
```

- Add an ADFS service. At the command prompt, type:

```

1  add service adfs_service adfs_server SSL 443
2
3  set ssl service adfs_service -sslProfile
   ns_default_ssl_profile_backend
4
5  bind ssl service adfs_service -certkeyName adfs_trust_cert

```

```

1  set ssl profile ns_default_ssl_profile_backend -sessReuse ENABLED
   -tls1 DISABLED -SNIEnable ENABLED -commonName www.server.com
   -denySSLReneg NO

```

- Add a load balancing virtual server. At the command prompt, type:

```

1  add lb vserver lb_adfs_proxy SSL 0.0.0.0 0 -AuthenticationHost
   adfs.ns.com -Authentication ON -adfsProxyProfile
   adfs_proxy_profile

```

- Bind the ADFS traffic policy and the ADFS service to the load balancing virtual server. At the command prompt, type:

```

1  bind lb vserver lb_adfs_proxy adfs_service
2
3
4  bind lb vserver lb_adfs_proxy -policyName adfs_traffic_pol -
   priority 1 -type REQUEST

```

- Configure an SNIP address:

```

1  add ns ip p.q.r.s 255.255.255.0 -type SNIP

```

- Configure traffic actions and policies:

```

1  add tm trafficAction adfs_traffic_action -SSO ON -formSSOAction
   adfs_form_action
2
3  add tm formSSOAction adfs_form_action -actionURL "/adfs/ls" -
   userField UserName -passwdField Password -ssoSuccessRule "HTTP
   .RES.SET_COOKIE.EQ(\"MSISAuth\")" -nameValuePair AuthMethod=
   FormsAuthentication -submitMethod POST
4
5  add tm trafficAction adfs_traffic_action -SSO ON -formSSOAction
   adfs_form_action
6
7  add tm trafficPolicy adfs_traffic_pol "HTTP.REQ.URL.EQ(\"/adfs/ls
   /\")" adfs_traffic_action


```

To configure NetScaler to work with ADFS server, you need to do the following:

1. Create an SSL CertKey profile key to use with ADFS proxy profile
2. Create an ADFS proxy profile
3. Associate the ADFS proxy profile to the load balancing virtual server

Create an SSL certificate with private key to use with ADFS proxy profile by using the GUI

1. Navigate to **Traffic Management > SSL > Certificates > CA Certificates**.
2. In the details pane, click **Install**.
In the **Install Certificate** dialog box, type the details, such as the certificate and key file name, and then select **Certificate Bundle**.
3. Click **Install**, and then click **Close**.

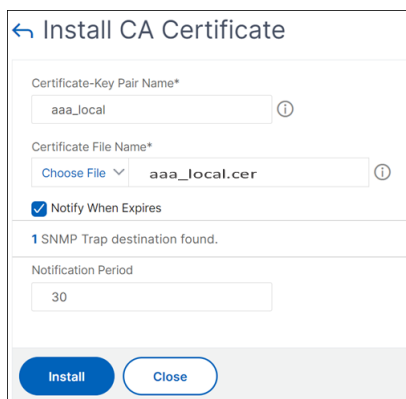

Create an SSL certificate with private key to use with ADFS proxy profile by using the CLI

At the command prompt, type:

```
1 add ssl certKey aaa_local -cert aaa_local.cer -key aaa_local.key
```

Note: The Certificate file and the key file must be present in the NetScaler appliance.

Create an ADFS proxy profile using the GUI

1. Navigate to **Configuration > Security > AAA-Application Traffic > adfsProxy Profile**.
2. Click **Add** on the **adfsProxy Profile** page.
3. On the **Create adfsProxy Profile** page, configure the following parameters:
 - Name: Assign a name to the ADFS proxy profile.
 - User name: This is the name of an account in the directory that would be used to authenticate the trust request from NetScaler acting as a proxy.
 - Password: This is the password of the account.
 - Server URL: FQDN of the ADFS server.
 - Cert Key Name: SSL certificate of the proxy that is registered at the ADFS server.
4. Click **Create**.

Create an ADFS proxy profile using the CLI

At the command prompt, type:

```

1 add authentication adfsProxyProfile <profile name> -serverUrl <https://
  <server FQDN or IP address>/> -username <adfs admin user name> -
  password <password for admin user> -certKeyName <name of the CertKey
  profile created above>
2
3 add dns addRec adfs.server.com 10.106.30.151
  
```

Example,

```


1 add authentication adfsProxyProfile adf_proxy_profile -userName test -
  password test -serverURL "https://adfs.server.com" -CertKeyName
  adfs_trust_cert
  
```

Note:

The ADFS proxy and the ADFS server can establish trust only if the certificate is signed by the Certificate Authority of the ADFS server.

Associate the ADFS proxy profile to the load balancing virtual server using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and select an SSL virtual server.
2. Click **Edit**.
3. In **Advanced Settings**, click **Profiles**.
4. Select the ADFS profile created earlier.
5. Click **OK** and then click **Done**.

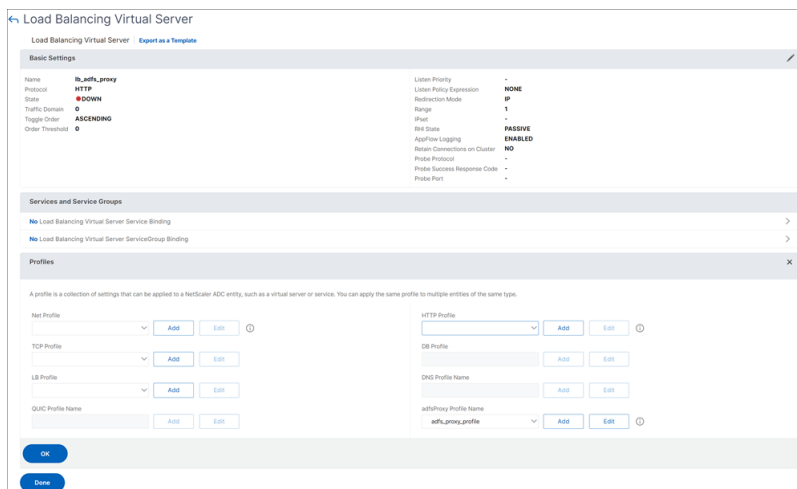

Associate the ADFS proxy profile to the load balancing virtual server using the CLI

In the ADFS deployment, two virtual servers are used, one for the client traffic and the other one for metadata exchange. The ADFS proxy profile must be associated with the load balancing virtual server that is front-ending the ADFS server.

At the command prompt, type:

```
1 set ssl vserver lb_adfs_proxy -sslProfile
   ns_default_ssl_profile_frontend
```

Trust renewal support for ADFSPIIP

You can renew the trust of the existing certificates that are nearing to expiry or if the existing certificate is not valid. The trust renewal of certificates is done only when the trust is established between NetScaler appliance and ADFS server. To renew the trust of the certificate, you must provide the new certificate.

Important:

Manual intervention is required for trust renewal of new certificates.

The following example lists the steps involved in the certificate trust renewal:

1. The NetScaler appliance sends both old (SerializedTrustCertificate) and new (SerializedReplacementCertificate) certificates in POST request to the ADFS server for trust renewal.
2. The ADFS server responds with 200 OK success if trust is renewed successfully.
3. The NetScaler appliance updates the state as “ESTABLISHED_RENEW_SUCCESS” if the trust renewal is successful. If the trust renewal fails, the state is updated as “ESTABLISHED_RENEW_FAILED” and the NetScaler appliance keeps using the old certificate.

Note:

You cannot update the certificate key if it is already bound to an ADFS proxy profile.

To configure the trust renewal of certificates by using the CLI

At the command prompt, type:

```
1 add ssl certKey <name> -cert <certificate file> -key <key file>
```

```
1 add authentication vserver <name> SSL <ipaddress> <port>
```

```
1 bind ssl vserver <virtual server name> -certkeyName <string>
```

Example:

```
1 add ssl certKey adfs_trust_cert -cert "client/client_rsa_2048.pem" -key  
"client/client_rsa_2048.ky"
```

Note:

The certificate must be issued by the Certificate Authority of the ADFS server.

```
1 add authentication vserver avs_adfs_proxy SSL 0.0.0.0
```

```
1 bind ssl vserver avs_adfs_proxy -certkeyName aaa_local
```

Client certificate based authentication on ADFS server


Starting with Windows server 2016, Microsoft introduced a new way of authenticating users when ADFS is accessed through proxy servers. Now, end users can log in with their certificates thereby avoiding the use of a password.

End users often access ADFS through a proxy, especially when they are not in the premises. Therefore, ADFS proxy servers are required to support client certificate authentication through the ADFSPIIP protocol.

When ADFS is load balanced using a NetScaler appliance, to support certificate-based authentication at the ADFS server, users need to log in to the NetScaler appliance using the certificate as well. This allows NetScaler to pass the user certificate to ADFS to provide SSO to the ADFS server.

The following diagram represents the client-certificate authentication flow.

Client Certificate Authentication

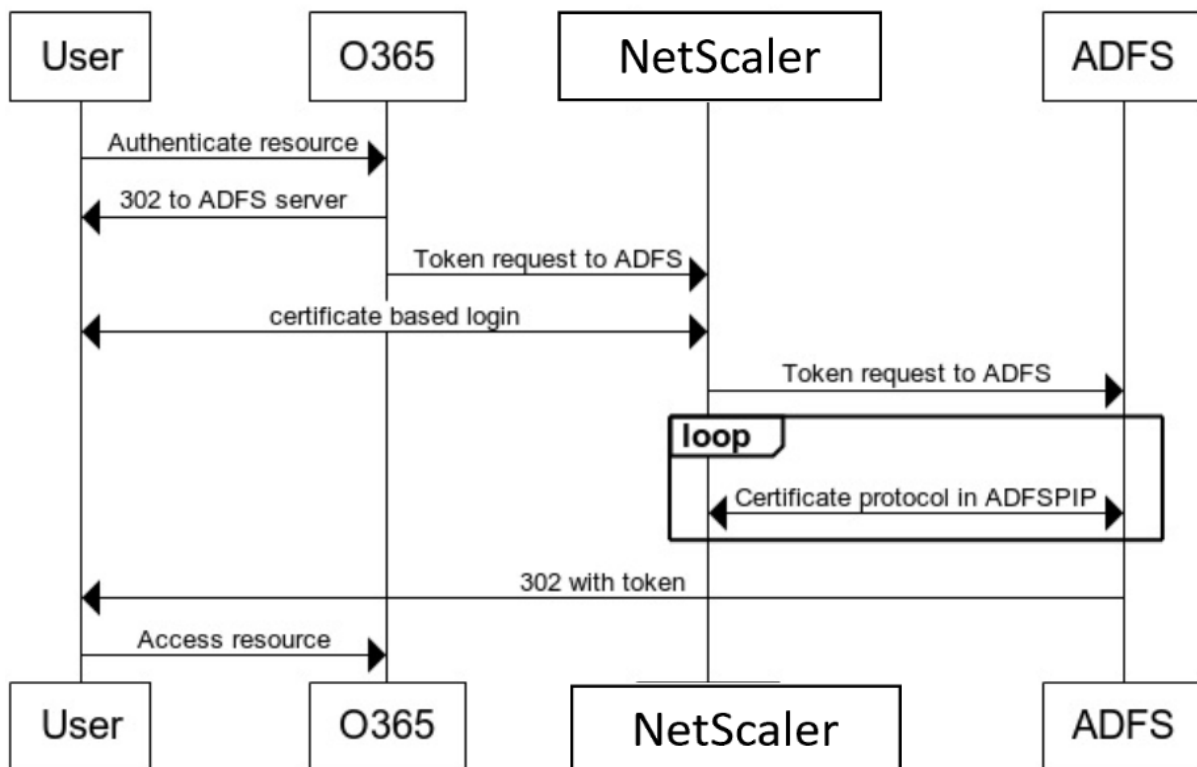

Configure SSO for ADFS server using client certificate

To configure SSO for the ADFS server using the client certificate, you must first configure the client certificate authentication on the NetScaler appliance. You must then bind the certificate authentication policy to the authentication, authorization, and auditing virtual server.

In addition, you must perform the following steps.

- An extra context switching virtual server with port 49443 must be configured and this context switching virtual server must point to the same load balancing virtual server which is open for all ports, which you have created earlier.
- The port 49443 must be opened on the NetScaler appliance for authentication.
- The context switching policy must be bound the same load balancing virtual server with port 443 open that you have created earlier.
- You must bind the same SSL service that you have created earlier to the load balancing virtual server.
- If you have already created an SSL profile for the back end, you must use that profile.

At the command prompt, type;

```
1 bind ssl vsriver <name> -certkeyName <string>
2
3 bind ssl vsriver <vServerName> -certkeyName <string>
4
5 add authentication Policy <policy name> -rule <expression> -action <
  action name>
6
7 bind authentication vsriver <name> -policy <name of the policy> -
  priority <integer>
```

Example:

```
1 bind ssl vsriver lb_adfs_proxy -certkeyName aaa_local
2
3 set ssl profile ns_default_ssl_profile_frontend -eRSA ENABLED -
  sessReuse ENABLED -denySSLReneg NONSECURE
4
5 bind ssl vsriver cs_adfs_proxy -certkeyName aaa_local
6
7 add authentication Policy local_pol -rule true -action LOCAL
8
9 bind authentication vsriver avs_adfs_proxy -policy local_pol -priority
  1
```

For information on configuring client certificate on the NetScaler appliance, see [Configure client certificate authentication using advanced policies](#).

Use an on-premises NetScaler Gateway as the identity provider for Citrix Cloud

October 23, 2023

Citrix Cloud supports using an on-premises NetScaler Gateway as an identity provider to authenticate subscribers signing in to their workspaces.

By using NetScaler Gateway authentication, you can:

- Continue authenticating users through your existing NetScaler Gateway so they can access the resources in your on-premises Virtual Apps and Desktops deployment through Citrix Workspace.
- Use the NetScaler Gateway authentication, authorization, and auditing functions with Citrix Workspace.
- Provide your users access to the resources they need through Citrix Workspace using features such as pass-through authentication, smart cards, secure tokens, conditional access policies, federation.

NetScaler Gateway authentication is supported for use with the following product versions:

- NetScaler Gateway 13.0 41.20 Advanced edition or later
- NetScaler Gateway 12.1 54.13 Advanced edition or later

Prerequisites

- Cloud Connectors - You need at least two servers on which to install the Citrix Cloud Connector software.
- Active Directory - Perform the necessary checks.
- NetScaler Gateway requirements
 - Use advanced policies on the on-premises gateway due to deprecation of classic policies.
 - When configuring the Gateway for authenticating subscribers to Citrix Workspace, the gateway acts as an OpenID Connect provider. Messages between Citrix Cloud and Gateway conform to the OIDC protocol, which involves digitally signing tokens. Therefore, you must configure a certificate for signing these tokens.
 - Clock synchronization - The Gateway must be synchronized to NTP time.

For details, see [Prerequisites](#).

Create an OAuth IdP policy on the on-premises NetScaler Gateway

Important:

You must have generated the client ID, secret, and redirect URL in the **Citrix Cloud > Identity and Access Management > Authentication** tab. For details, see [Connect an on-premises NetScaler Gateway to Citrix Cloud](#).

Creating an OAuth IdP authentication policy involves the following tasks:

1. Create an OAuth IdP profile.
2. Add an OAuth IdP policy.
3. Bind the OAuth IdP policy to an authentication virtual server.
4. Bind the certificate globally.

Creating an OAuth IdP profile by using the CLI

At the command prompt, type;

```

1 add authentication OAuthIDPProfile <name> [-clientID <string>][ -
  clientSecret ][-redirectURL <URL>][-issuer <string>][-audience <
  string>][-skewTime <mins>] [-defaultAuthenticationGroup <string>]
2
3 add authentication OAuthIdPPolicy <name> -rule <expression> [-action <
  string>] [-undefAction <string>] [-comment <string>][-logAction <
  string>]
4
5 add authentication ldapAction <name> -serverIP <IP> -ldapBase "dc=aaa,
  dc=local"
6
7 ldapBindDn <administrator@aaa.local> -ldapBindDnPassword <password> -
  ldapLoginName sAMAccountName
8
9 add authentication policy <name> -rule <expression> -action <string>
10
11 bind authentication vserver auth_vs -policy <ldap_policy_name> -
  priority <integer> -gotoPriorityExpression NEXT
12
13 bind authentication vserver auth_vs -policy <OAuthIDPPolicyName> -
  priority <integer> -gotoPriorityExpression END
14
15 bind vpn global -certkeyName <>

```

Creating an OAuth IdP profile by using the GUI

1. Navigate to **Security > AAA – Application Traffic > Policies > Authentication > Advanced Policies > OAuth IDP**.
2. In the **OAuth IDP** page, select the **Profiles** tab and click **Add**.
3. Configure the OAuth IdP profile.

Note:

- Copy and paste the client ID, secret, and Redirect URL values from the **Citrix Cloud > Identity and Access Management > Authentication** tab to establish the connection to Citrix Cloud.
- Enter the Gateway URL correctly in the **Issuer Name** Example: <https://GatewayFQDN.com>
- Also copy and paste the client ID in the **Audience** field as well.
- **Send Password:** Enable this option for single sign-on support. This option is disabled by default.

4. On the **Create Authentication OAuth IDP Profile** screen, set values for the following parameters and click **Create**.

- **Name:** Name of the authentication profile. Must begin with a letter, number, or the underscore character (_). Name must contain only letters, numbers, and the hyphen (-), period (.), pound (#), space (), at (@), equals (=), colon (:), and underscore characters. Cannot be changed after the profile is created.
- **Client ID:** Unique string that identifies SP. Authorization server infers client configuration using this ID. Maximum Length: 127.
- **Client Secret:** Secret string established by user and authorization server. Maximum Length: 239.
- **Redirect URL:** Endpoint on SP to which code/token has to be posted.
- **Issuer Name:** Identity of the server whose tokens are to be accepted. Maximum Length: 127. Example: <https://GatewayFQDN.com>
- **Audience:** Target recipient for the token sent by IdP. This token is checked by the recipient.
- **Skew Time:** This option specifies the allowed clock skew (in minutes) that NetScaler allows on an incoming token. For example, if skewTime is 10, then the token would be valid from (current time - 10) min to (current time + 10) min, that is 20 min in all. Default value: 5.
- **Default Authentication Group:** A group added to the session internal group list when this profile is chosen by IdP which can be used in nFactor flow. It can be used in the expression (AAA.USER.IS_MEMBER_OF("xxx")) for authentication policies to identify relying party related nFactor flow. Maximum Length: 63

A group is added to the session for this profile to simplify policy evaluation and help in customizing policies. This group is the default group that is chosen when the authentication succeeds in addition to the extracted groups.

- **Relying Party Metadata URL:** Endpoint at which the NetScaler IdP can get details about the relying party being configured. The metadata response must include endpoints for the jwks_uri for RP public keys. Maximum length is 255.
- **Refresh Interval:** The interval at which the relying party metadata is refreshed. The default interval is 50.
- **Encrypt Token:** When you select this option, the token sent by NetScaler is encrypted.
- **Signature Service:** Name of the cloud service that is used to sign the data. This is applicable only if the signature is offloaded to cloud.
- **Attributes:** Name-Value pairs of the attributes to be inserted in the ID token. Maximum length is 1047 characters.
- **Send Password:** Select this option to send the encrypted password in the ID token.

5. Click **Policies** and click **Add**.

6. On the **Create Authentication OAuth IDP Policy** screen, set values for the following parameters and click **Create**.

- **Name** –The name of the authentication policy.
- **Action** –Name of profile created earlier.
- **Log Action** –Name of the message log action to use when a request matches this policy. Not a mandatory field.
- **Undefined-Result Action** –Action to perform if the result of policy evaluation is undefined(UNDEF). Not a mandatory field.
- **Expression** –Default syntax expression that the policy uses to respond to specific request. For example, true.
- **Comments** –Any comments about the policy.

Note:

When **sendPassword** is set to ON (OFF by default), user credentials are encrypted and passed through a secure channel to Citrix Cloud. Passing user credentials through a secure channel allows you to enable SSO to Citrix Virtual Apps and Desktops upon launch.

Binding the OAuthIDP policy and LDAP policy to the authentication virtual server

1. Navigate to **Configuration > Security > AAA-Application Traffic > Policies > Authentication > Advanced Policies > Actions > LDAP**.
2. On **LDAP Actions** screen, click **Add**.
3. On the **Create Authentication LDAP Server** screen, set the values for the following parameters, and click **Create**.
 - **Name** – The name of the LDAP action
 - **ServerName/ServerIP** – Provide FQDN or IP of the LDAP server
 - Choose appropriate values **for Security Type, Port, Server Type, Time-Out**
 - Make sure **Authentication** is checked
 - **Base DN** – Base from which to start LDAP search. For example, `dc=aaa,dc=local`.
 - **Administrator Bind DN:** User name of the bind to LDAP server. For example, `admin@aaa.local`.
 - **Administrator Password/Confirm Password: Password to bind LDAP**
 - Click **Test Connection** to test your settings.
 - **Server Logon Name Attribute:** Choose “**sAMAccountName**”
 - Other fields are not mandatory and hence can be configured as required.
4. Navigate to **Configuration > Security > AAA-Application Traffic > Policies > Authentication > Advanced Policies > Policy**.
5. On the **Authentication Policies** screen, click **Add**.

6. On the **Create Authentication Policy** page, set the values for the following parameters, and click **Create**.

- **Name** – Name of the LDAP Authentication Policy.
- **Action Type** – Choose **LDAP**.
- **Action** – Choose the LDAP action.
- **Expression** – Default syntax expression that the policy uses to respond to specific request. For example, `true**`.

Store Authentication Context Class Reference values

NetScaler configured as an on-premises IdP can store Authentication Context Class Reference (ACR) values provided by Citrix Workspace to support the multi-domain login feature of Citrix Workspace Platform (WSP).

When Citrix Workspace sends the ACR values to the OAuth authorization endpoint of the NetScaler IdP, NetScaler stores the ACR values. You can use these ACR values to determine the next factor in the nFactor flow.

The OAuth IdP authorization endpoint `/oauth/idp/login` receives a query with the ACR value parameter in the below format. NetScaler stores the ACR value in the user sessions attribute.

```
GET /oauth/idp/login?response_type=code&scope=openid%20profile%20
ctxs_cc&acr_values=device_id:69eec33333333333+wsp:wspmultiurlmain.
cloud.com&client_id=test&redirect_uri=https%3A%2F%2Fav6.aaa.local%2
Foauth%2Flogin&state=Y3R4PXlFYkpFdEJOeDFLN0hUY2VCc1pBOGc2RjU3d21PcjJ2aXprZkhFS
&code_challenge_method=S256&code_challenge=IJgD-qaJZdhuGt3m262BjjMXrFT0wioV6uS
-uIY18
```

In the above example, the ACR value parameter is `acr_values=device_id:69eec33333333333+wsp:wspmultiurlmain.cloud.com`.

Following are the expression examples of how you can use ACR values in an nFactor flow.

- To retrieve the WSP URL, use the expression `aaa.user.wsp.eq("URL")` in your policy configuration.

For example,

```
add authentication policy wsp_check -rule aaa.user.wsp.eq("
wspmultiurlmain.cloud.com")-action ldap-act
```

- To retrieve the device ID from the ACR value parameter, use the expression `aaa.user.acr_values.value("device_id").eq(value)` in your policy configuration.

For example,

- The persistence type in the GSLB deployment must be configured as “ConnectionProxy”.

Configuration support for SameSite cookie attribute

October 23, 2023

The SameSite attribute indicates the browser whether the cookie can be used for cross-site context or only for same-site context. Also, if an application intends to be accessed in a cross-site context then it can do so only via the HTTPS connection. For details, see RFC6265.

Until Feb 2020, the SameSite attribute was not explicitly set in NetScaler. The browser took the default value (None). Not setting the SameSite attribute did not impact the NetScaler Gateway and authentication, authorization, and auditing deployments.

With certain browsers upgrade, such as Google Chrome 80, there is a change in the default cross-domain behavior of cookies. The SameSite attribute can be set to one of the following values. Default value for Google Chrome is set to Lax. For certain version of other browsers, the default value for the SameSite attribute might still be set to None.

- **None:** Indicates the browser to use a cookie in cross-site context only on secure connections.
- **Lax:** Indicates the browser to use a cookie for requests on the same domain and for cross-sites. For cross-site, only safe HTTP methods like GET request can use the cookie. For example, a GET request of a one subdomain abc.example.com can read the cookie of another subdomain xyz.example.com using a GET. For cross site, only safe HTTP methods are used because Safe HTTP methods do not alter the server state. For more details, see <https://developer.mozilla.org/en-US/docs/Web/HTTP/Headers/Set-Cookie/SameSite#lax>
- **Strict:** Use the cookie only in the same site context.

If there is no SameSite attribute in the cookie, the Google Chrome assumes the functionality of SameSite = Lax.

As a result, for deployments within an iframe with cross-site context that require cookies to be inserted by the browser, Google Chrome does not share cross-site cookies. As a result, the iframe within the website might not load.

Configure SameSite cookie attribute

A new cookie attribute named SameSite is added to the VPN and authentication, authorization, and auditing virtual servers. This attribute can be set at the global level and at the virtual server level.

To configure the SameSite attribute, you must do the following:

1. Set the SameSite attribute for the virtual server
2. Bind cookies to the patset (if the browser drops cross-site cookies)

Setting the SameSite attribute by using the CLI

To set the SameSite attribute at the virtual server level, use the following commands.

```
1 set vpn vserver VP1 -SameSite [STRICT | LAX | None]
2 set authentication vserver AV1 -SameSite [STRICT | LAX | None]
```

To set the SameSite attribute at the global level, use the following commands.

```
1 set aaa parameter -SameSite [STRICT | LAX | None]
2 set vpn parameter -SameSite [STRICT | LAX | None]
```

Note: The virtual server level setting takes preference over the global level setting. Citrix recommends setting the SameSite cookie attribute at the virtual server level.

Binding cookies to the patset by using the CLI

If the browser drops cross-site cookies, you can bind that cookie string to the existing ns_cookies_SameSite patset so that the SameSite attribute is added to the cookie.


Example:

```
1 bind patset ns_cookies_SameSite "NSC_TASS"
2 bind patset ns_cookies_SameSite "NSC_TMAS"
```

Setting the SameSite attribute by using the GUI


To set the SameSite attribute at the virtual server level:

1. Navigate to **Security > AAA –Application Traffic > Virtual Servers**.
2. Select a virtual server and click **Edit**.
3. Click the edit icon in the **Basic Settings** section and click **More**.
4. In **SameSite**, select the option as required.

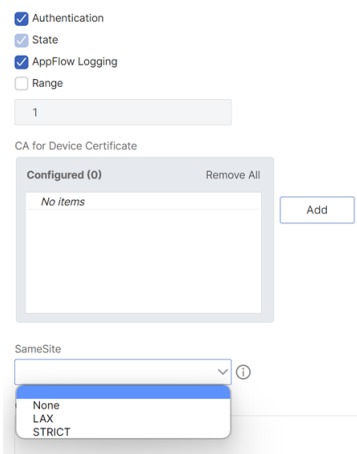

To set the SameSite attribute at the global level:

1. Navigate to **Security > AAA –Application Traffic > Change Authentication Settings.**

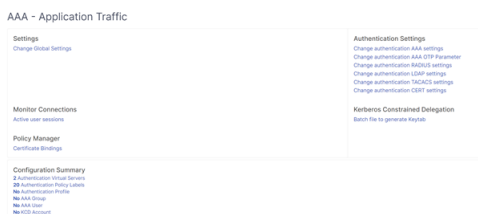

2. In the **Configure AAA Parameter** page, click the **SameSite** list, and select the option as required.

Authentication, authorization, and auditing configuration for commonly used protocols

May 2, 2023

Configuring the NetScaler appliance for authentication, authorization, and auditing needs a specific setup on the NetScaler appliance and clients’ browsers. The configuration varies with the protocol used for authentication, authorization, and auditing.

For more information about configuring the NetScaler appliance for Kerberos authentication, see [Handling Authentication, Authorization and Auditing with Kerberos/NTLM](#).

Handling authentication, authorization and auditing with Kerberos/NTLM


May 2, 2023

Kerberos, a computer network authentication protocol, provides secure communication over the Internet. Designed primarily for client-server applications, it provides for mutual authentication by which the client and server can each ensure the other’s authenticity. Kerberos uses a trusted third party, referred to as Key Distribution Center (KDC). A KDC consists of an Authentication Server (AS), which authenticates a user, and a Ticket Granting Server (TGS).

Each entity on the network (client or server) has a secret key that is known only to itself and the KDC. The knowledge of this key implies authenticity of the entity. For communication between two entities on the network, the KDC generates a session key, referred to as the Kerberos ticket or service ticket. The client makes a request to the AS for credentials for a specific server. The client then receives a ticket, referred to as Ticket Granting Ticket (TGT). The client then contacts the TGS, using the TGT it received from the AS to prove its identity, and asks for a service. If the client is eligible for the service, the TGS issues a Kerberos ticket to the client. The client then contacts the server hosting the service (referred to as the service server), using the Kerberos ticket to prove that it is authorized to receive the service. The Kerberos ticket has a configurable lifetime. The client authenticates itself with the AS only once. If it contacts the physical server multiple times, it reuses the AS ticket.

The following figure shows the basic functioning of the Kerberos protocol.

Figure 1. **Functioning of Kerberos**

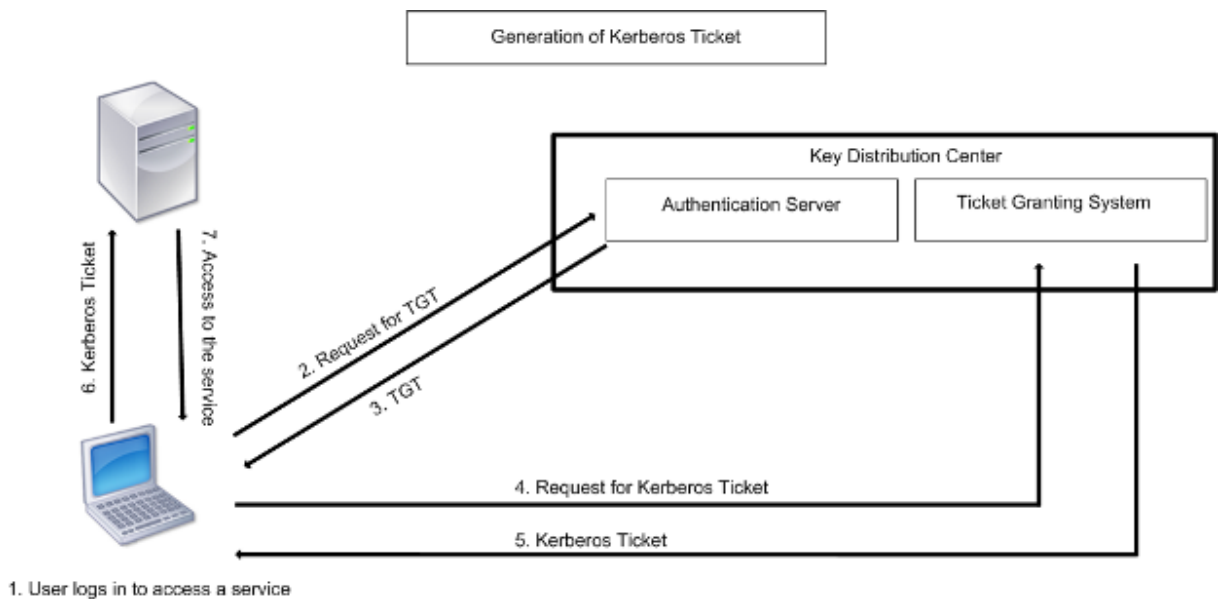

Kerberos authentication has the following advantages:

- **Faster authentication.** When a physical server gets a Kerberos ticket from a client, the server has enough information to authenticate the client directly. It does not have to contact a domain controller for client authentication, and therefore the authentication process is faster.
- **Mutual authentication.** When the KDC issues a Kerberos ticket to a client and the client uses the ticket to access a service, only authenticated servers can decrypt the Kerberos ticket. If the virtual server on the NetScaler appliance is able to decrypt the Kerberos ticket, you can conclude that both the virtual server and client are authenticated. Thus, the authentication of the server happens along with the authentication of the client.
- **Single sign-on** between Windows and other operating systems that support Kerberos.

Kerberos authentication may have the following disadvantages:

- Kerberos has strict time requirements; the clocks of the involved hosts must be synchronized with the Kerberos server clock to ensure that the authentication does not fail. You can mitigate this disadvantage by using the Network Time Protocol daemons to keep the host clocks synchronized. Kerberos tickets have an availability period, which you can configure.
- Kerberos needs the central server to be available continuously. When the Kerberos server is down, no one can log on. You can mitigate this risk by using multiple Kerberos servers and fallback authentication mechanisms.
- Because all the authentication is controlled by a centralized KDC, any compromise in this infrastructure, such as the user's password for a local workstation being stolen, can allow an attacker to impersonate any user. You can mitigate this risk to some extent by using only a desktop machine or laptop that you trust, or by enforcing preauthentication by means of a hardware-token.

To use Kerberos authentication, you must configure it on the NetScaler appliance and on each client.

Optimizing Kerberos authentication on authentication, authorization, and auditing

The NetScaler appliance now optimizes and improves the system performance while Kerberos authentication. The authentication, authorization, and auditing daemon remembers the outstanding Kerberos request for the same user to avoid load on Key Distribution Center (KDC), which will avoid duplicate requests.

How NetScaler implements Kerberos for client authentication

May 2, 2023

Important

Kerberos/NTLM authentication is supported only in the NetScaler 9.3 nCore release or later, and it can be used only for authentication, authorization, and auditing traffic management virtual servers.

NetScaler handles the components involved in Kerberos authentication in the following way:

Key Distribution Center (KDC)

In the Windows 2000 Server or later versions, the Domain Controller and KDC are part of the Windows Server. If the Windows Server is UP and running, it indicates that the Domain Controller and KDC are configured. The KDC is also the Active Directory server.

Note

All Kerberos interactions are validated with the Windows Kerberos Domain Controller.

Authentication service and protocol negotiation

A NetScaler appliance supports Kerberos authentication on the authentication, authorization, and auditing traffic management authentication virtual servers. If the Kerberos authentication fails, the NetScaler uses the NTLM authentication.

By default, Windows 2000 Server and later Windows Server versions use Kerberos for authentication, authorization, and auditing. If you create an authentication policy with NEGOTIATE as the authentication type, the NetScaler attempts to use the Kerberos protocol for authentication, authorization, and auditing and if the client's browser fails to receive a Kerberos ticket, the NetScaler uses the NTLM authentication. This process is referred to as negotiation.

The client may fail to receive a Kerberos ticket in any of the following cases:

- Kerberos is not supported on the client.
- Kerberos is not enabled on the client.
- The client is in a domain other than that of the KDC.
- The Access Directory on the KDC is not accessible to the client.

For Kerberos/NTLM authentication, the NetScaler does not use the data that is present locally on the NetScaler appliance.

Authorization

The traffic management virtual server can be a load balancing virtual server or a content switching virtual server.

Auditing

The NetScaler appliance supports auditing of Kerberos authentication with the following audit logging:

- Complete audit trail of the traffic management end-user activity
- SYSLOG and high performance TCP logging
- Complete audit trail of system administrators
- All system events
- Scriptable log format

Supported Environment

Kerberos authentication does not need any specific environment on the NetScaler. The client (browser) must provide support for Kerberos authentication.


High Availability

In a high availability setup, only the active NetScaler joins the domain. In case of a failover, the NetScaler lwagent daemon joins the secondary NetScaler appliance to the domain. No specific configuration is required for this functionality.

Kerberos authentication process

The following figure shows a typical process for Kerberos authentication in the NetScaler environment.

Figure 1. Kerberos Authentication Process on NetScaler

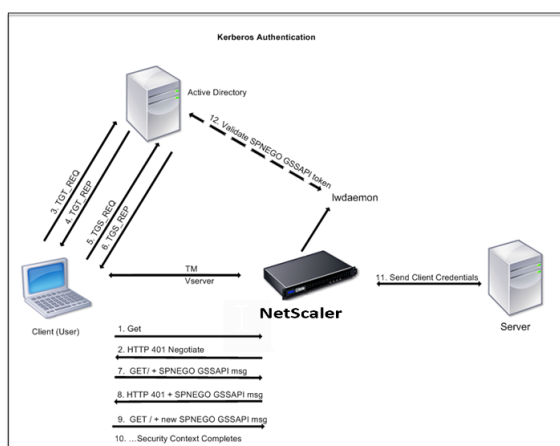

The Kerberos authentication occurs in the following stages:

Client authenticates itself to the KDC

1. The NetScaler appliance receives a request from a client.
2. The traffic management (load balancing or content switching) virtual server on the NetScaler appliance sends a challenge to the client.
3. To respond to the challenge, the client gets a Kerberos ticket.
 - The client sends the Authentication Server of the KDC a request for a ticket-granting ticket (TGT) and receives the TGT. (See 3, 4 in the figure, Kerberos Authentication Process.)
 - The client sends the TGT to the Ticket Granting Server of the KDC and receives a Kerberos ticket. (See 5, 6 in the figure, Kerberos Authentication Process.)

Note

The above authentication process is not necessary if the client already has a Kerberos ticket whose lifetime has not expired. In addition, clients such as Web Services, .NET, or J2EE, which support SPNEGO, get a Kerberos ticket for the target server, create an SPNEGO token, and insert the token in the HTTP header when they send an HTTP request. They do not go through the client authentication process.

Client requests a service.

1. The client sends the Kerberos ticket containing the SPNEGO token and the HTTP request to the traffic management virtual server on the NetScaler. The SPNEGO token has the necessary GSSAPI data.
2. The NetScaler appliance establishes a security context between the client and the NetScaler. If the NetScaler cannot accept the data provided in the Kerberos ticket, the client is asked to get a different ticket. This cycle repeats till the GSSAPI data is acceptable and the security context is established. The traffic management virtual server on the NetScaler acts as an HTTP proxy between the client and the physical server.

NetScaler appliance completes the authentication.

1. After the security context is complete, the traffic management virtual server validates the SPNEGO token.
2. From the valid SPNEGO token, the virtual server extracts the user ID and GSS credentials, and passes them to the authentication daemon.
3. A successful authentication completes the Kerberos authentication.

Configuring kerberos authentication on the NetScaler appliance

May 5, 2023

This topic provides the detailed steps to configure Kerberos authentication on the NetScaler appliance by using the CLI and the GUI.

Configuring Kerberos authentication on the CLI

1. Enable the authentication, authorization, and auditing feature to ensure the authentication of traffic on the appliance.

```
ns-cli-prompt> enable ns feature AAA
```

2. Add the keytab file to the NetScaler appliance. A keytab file is necessary for decrypting the secret received from the client during Kerberos authentication. A single keytab file contains authentication details for all the services that are bound to the traffic management virtual server on the NetScaler appliance.

First generate the keytab file on the Active Directory server and then transfer it to the NetScaler appliance.

- Log on to the Active Directory server and add a user for Kerberos authentication using the following command.

```
1 net user <username> <password> /add
```

Note

In the **User Properties** section, ensure that the “Change password at next logon option” is not selected and the “Password does not expire” option is selected.

- Map the HTTP service to the above user and export the keytab file. For example, run the following command on the Active Directory server:

```
1 ktpass /out keytabfile /princ HTTP/owa.newacp.com@NEWACP.COM  
/pass <user password> /mapuser newacp\\dummy /ptype KRB5\  
_NT\_PRINCIPAL
```

Note

You can map more than one service if authentication is required for more than one service. If you want to map more services, repeat the above command for every service. You can give the same name or different names for the output file.

- Transfer the keytab file to the NetScaler appliance by using the unix **ftp** command or any other file transfer utility of your choice. Upload the keytab file to the `/nsconfig/krb/` directory on the NetScaler appliance.

3. The NetScaler appliance must obtain the IP address of the domain controller from the fully qualified domain name (FQDN). Therefore, Citrix recommends configuring the NetScaler with a DNS server.

```
ns-cli-prompt> add dns nameserver <ip-address>
```

Note

Alternatively, you can add static host entries or use any other means so that the NetScaler appliance can resolve the FQDN name of the domain controller to an IP address.

4. Configure the authentication action and then associate it to an authentication policy.
 - Configure the negotiate action. This configuration creates an action (profile) for an Active Directory server that is used as a Kerberos Key Distribution Center (KDC). The profile contains all the configuration data necessary to communicate with that AD KDC server.

```
ns-cli-prompt> add authentication negotiateAction <name> -domain <domain name> -domainUser <domain user name> -domainUserPasswd <domain user password> -defaultAuthenticationGroup <default authentication group> -keytab <string> -NTLMPath <string>
```

Note: For domain user and domain name configuration, go to client and use the klist command as shown in the following example:

```
Client: username @ AAA.LOCAL
```

```
Server: HTTP/onprem_idp.aaa.local @ AAA.LOCAL
```

```
add authentication negotiateAction <name> -domain -domainUser <HTTP/onprem_idp.aaa.local>
```

- Configure the negotiate policy and associate the negotiate action to this policy.

```
ns-cli-prompt> add authentication negotiatePolicy <name> <rule> <reqAction>
```

5. Create an authentication virtual server and associate the negotiate policy with it.

- Create an authentication virtual server.

```
ns-cli-prompt> add authentication vserver <name> SSL <ipAuthVserver> 443 -authenticationDomain <domainName>
```

- Bind the negotiate policy to the authentication virtual server.

```
ns-cli-prompt> bind authentication vserver <name> -policy <negotiatePolicyName>
```

6. Associate the authentication virtual server with the traffic management (load balancing or content switching) virtual server.

```
ns-cli-prompt> set lb vserver <name> -authn401 ON -authnVsName <string>
```

Note

Similar configurations can also be done on the content switching virtual server.

7. Verify the configurations by doing the following:

- Access the traffic management virtual server, using the FQDN. For example, [Sample](#)
- View the details of the session on the CLI.

```
ns-cli-prompt> show aaa session
```

Configuring Kerberos authentication on the GUI

1. Enable the authentication, authorization, and auditing feature.

Navigate to **System > Settings**, click **Configure Basic Features** and enable the authentication, authorization, and auditing feature.

2. Add the keytab file as detailed in step 2 of the CLI procedure mentioned above.

3. Add a DNS server.

Navigate to **Traffic Management > DNS > Name Servers**, and specify the IP address for the DNS server.

4. Configure the **Negotiate** action and policy.

Navigate to **Security > AAA - Application Traffic > Policies > Authentication > Advanced Policies > Policy**, and create a policy with **Negotiate** as the action type. Click **ADD** to create a new authentication negotiate server or click **Edit** to configure the existing details.

5. Bind the negotiate policy to the authentication virtual server.

Navigate to **Security > AAA - Application Traffic > Virtual Servers**, and associate the **Negotiate** policy with the authentication virtual server.

6. Associate the authentication virtual server with the traffic management (load balancing or content switching) virtual server.

Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and specify the relevant authentication settings.

Note

Similar configurations can also be done on the content switching virtual server.

7. Verify the configurations as detailed in step 7 of the CLI procedure mentioned above.

Configure kerberos authentication on a client

May 2, 2023

Kerberos support must be configured on the browser to use Kerberos for authentication. You can use any Kerberos-compliant browser. Instructions for configuring Kerberos support on Internet Explorer and Mozilla Firefox follow. For other browsers, see the documentation of the browser.

To configure Internet Explorer for Kerberos authentication

1. In the **Tools** menu select **Internet Options**.
2. On the **Security** tab, click **Local Intranet**, and then click **Sites**.
3. In the **Local Intranet** dialog box, make sure that the Automatically detect intranet network option is selected, and then click **Advanced**.
4. In the **Local Intranet** dialog box, add the web sites of the domains of the traffic management virtual server on the NetScaler appliance. The specified sites become local intranet sites.
5. Click **Close** or **OK** to close the dialog boxes.

To configure Mozilla Firefox for Kerberos authentication

1. Make sure that you have Kerberos properly configured on your computer.
2. Type about:config in the URL bar.
3. In the filter text box, type network.negotiate.
4. Change network.negotiate-auth.delegation-uris to the domain that you want to add.
5. Change network.negotiate-auth.trusted-uris to the domain that you want to add.

Note: If you are running Windows, you also need to enter sspi in the filter text box and change the network.auth.use-sspi option to False.

Offload Kerberos authentication from physical servers

May 2, 2023

The NetScaler appliance can offload authentication tasks from servers. Instead of the physical servers authenticating the requests from clients, the NetScaler authenticates all the client requests before it forwards them to any of the physical servers bound to it. The user authentication is based on Active Directory tokens.

There is no authentication between the NetScaler and the physical server, and the authentication offload is transparent to the end users. After the initial logon to a Windows computer, the end user does not have to enter any additional authentication information in a pop-up or on a logon page.

In the current NetScaler appliance release, Kerberos authentication is available only for authentication, authorization, and auditing traffic management virtual servers. Kerberos authentication is not supported for SSL VPN in the NetScaler Gateway Advanced Edition appliance or for NetScaler appliance management.

Kerberos authentication requires configuration on the NetScaler appliance and on client browsers.

To configure Kerberos authentication on the NetScaler appliance

Note

The passwords used in the following sample configuration are only examples and not the actual configuration passwords.

1. Create a user account on Active Directory. When creating a user account, verify the following options in the User Properties section:
 - Make sure that you do not select the Change password at next logon option.
 - Be sure to select the Password does not expire option.
2. On the AD server, at the CLI command prompt, type:
 - `ktpass -princ HTTP/kerberos.crete.lab.net@crete.lab.net -ptype KRB5_NT_PRINCIPAL -mapuser kerbuser@crete.lab.net -mapop set -pass Citrix1 -out C:\kerbtabfile.txt`

Note

Be sure to type the above command on a single line. The output of the above command is written into the C:\kerbtabfile.txt file.

3. Upload the kerbtabfile.txt file to the /etc directory of the NetScaler appliance by using a Secure Copy (SCP) client.
4. Run the following command to add a DNS server to the NetScaler appliance.
 - `add dns nameserver 1.2.3.4`

The NetScaler appliance cannot process Kerberos requests without the DNS server. Be sure to use the same DNS server that is used in the Microsoft Windows domain.

5. Switch to the command line interface of NetScaler.
6. Run the following command to create a Kerberos authentication server:

- `add authentication negotiateAction KerberosServer -domain "crete.lab.net"-domainUser kerbuser -domainUserPasswd Citrix1 -keytab /var/mykcd.keytab`

Note

If keytab is not available, you can specify the parameters: domain, domainUser, and -domainUserPasswd.

7. Run the following command to create a negotiation policy:

- `add authentication negotiatePolicy Kerberos-Policy "REQ.IP.DESTIP == 192.168.17.200"KerberosServer`

8. Run the following command to create an authentication virtual server.

- `add authentication vserver Kerb-Auth SSL 192.168.17.201 443 -AuthenticationDomain crete.lab.net`

9. Run the following command to bind the Kerberos policy to the authentication virtual server:

- `bind authentication vserver Kerb-Auth -policy Kerberos-Policy -priority 100`

10. Run the following command to bind an SSL certificate to the authentication virtual server. You can use one of the test certificates, which you can install from the GUI NetScaler appliance. Run the following command to use the ServerTestCert sample certificate.

- `bind ssl vserver Kerb-Auth -certkeyName ServerTestCert`

11. Create an HTTP load balancing virtual server with the IP address, 192.168.17.200.

Ensure that you create a virtual server from the command line interface for NetScaler 9.3 releases if they are older than 9.3.47.8.

12. Run the following command to configure an authentication virtual server:

- `set lb vserver <name>-authn401 ON -authnVsName Kerb-Auth`

13. Enter the host name [Example](#) in the address bar of the Web browser.

The Web browser displays an authentication dialog box because the Kerberos authentication is not set up in the browser.

Note

Kerberos authentication requires a specific configuration on the client. Ensure that the client can resolve the hostname, which results in the Web browser connecting to an HTTP virtual server.


14. Configure Kerberos on the Web browser of the client computer.
 - For configuring on Internet Explorer, see [Configuring Internet Explorer for Kerberos authentication](#).
 - For configuring on Mozilla Firefox, see [Configuring Internet Explorer for Kerberos authentication](#).
15. Verify whether you can access the backend physical server without authentication.

To configure Internet Explorer for Kerberos authentication

1. Select **Internet Options** from the **Tools** menu.
2. Activate the **Security** tab.
3. Select **Local Intranet** from the Select a zone to view change security settings section.
4. Click **Sites**.
5. Click **Advanced**.
6. Specify the URL, [Example](#) and click **Add**.
7. Restart **Internet Explorer**.

To configure Mozilla Firefox for Kerberos authentication

1. Enter about:config in the address bar of the browser.
2. Click the warning disclaimer.
3. Type **Network.Negotiate-auth.trusted-uris** in the **Filter** box.
4. Double click **Network.Negotiate-auth.trusted-uris**. A sample screen is shown below.

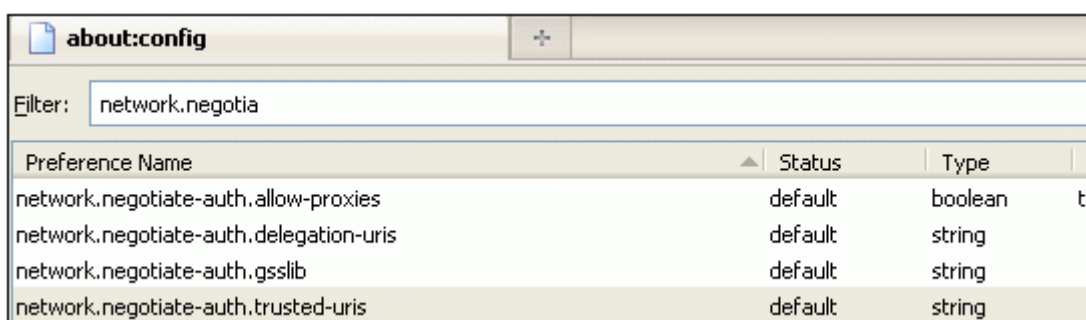

5. In the Enter String Value dialog box, specify www.crete.lab.net.
6. Restart Firefox.

Troubleshoot authentication and authorization-related issues

May 2, 2023

Localize error messages

[Localize error messages generated by NetScaler nFactor system](#)


Troubleshoot authentication issues with aad.debug module

[Troubleshoot authentication issues in NetScaler and NetScaler Gateway with aad.debug module](#)

Admin partition

May 2, 2023

A NetScaler appliance can be partitioned into logical entities called admin partitions. Each partition can be configured and used as a separate NetScaler appliance. The following figure shows the partitions of a NetScaler being used by different customers and departments:

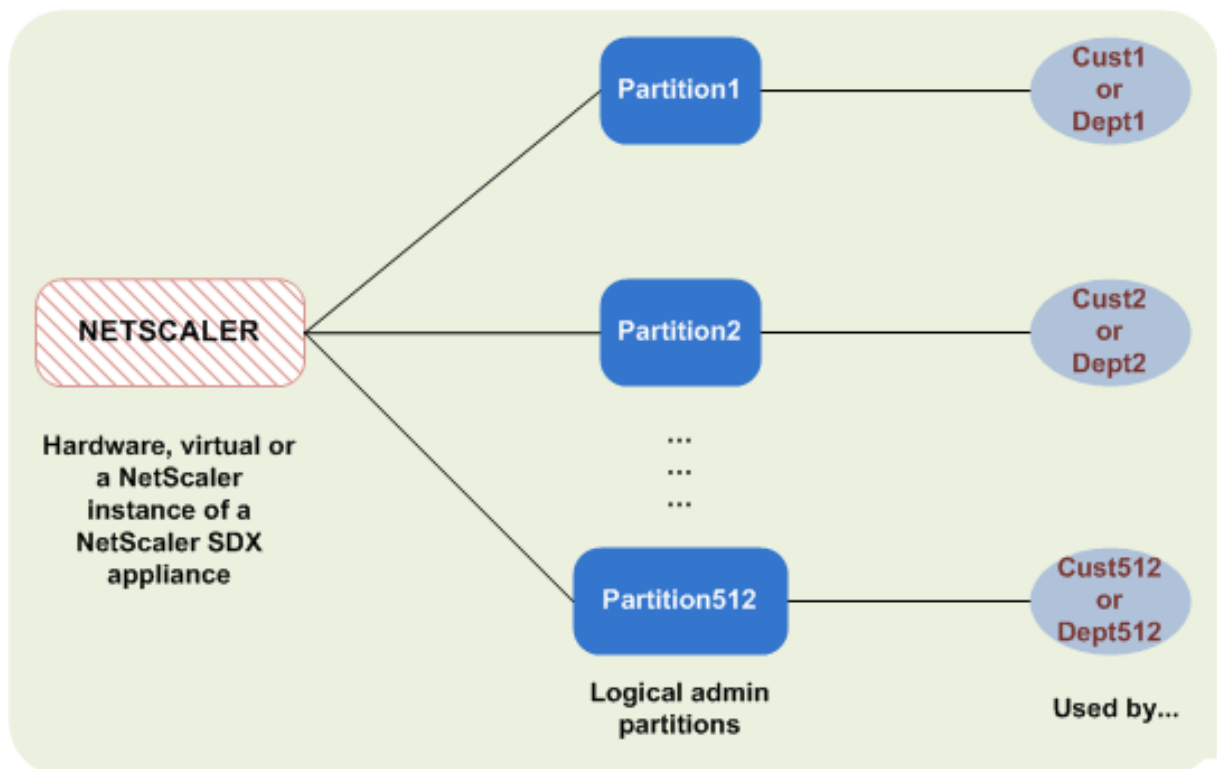

A partitioned NetScaler appliance has a single default partition and one or more admin partitions. The following table provides further details on the two partition types:

Note

In a partitioned appliance, the mode BridgeBPDUs can be enabled only in the default partition and not in the administrative partitions.

Availability:

The NetScaler appliance ships with a single partition, which is called a default partition. The default partition is retained even after the NetScaler appliance is partitioned.

Must be explicitly created as described in [Configure admin partitions](#).

Number of Partitions:

One

A NetScaler appliance can have one or more (maximum of 512) admin partitions.

User Access and Roles:

All NetScaler users, who are not associated with a *partition-specific* command policy, can access and configure the default partition. As always, the associated command policy restricts the operations that a user can perform.

The user access and roles are created by NetScaler superusers who also specify the users for that partition. Only superusers and associated users of the partition can access and configure the admin partition.

Note

Partition users do not have shell access.

File Structure:

All files in a default partition are stored in the default NetScaler file structure.

For example, the `/nsconfig` directory stores the NetScaler configuration file and the `/var/log/` directory stores the NetScaler logs.

All files in an admin partition are stored in directory paths that have the name of the admin partition.

For example, the NetScaler configuration file (`ns.conf`) is stored in the `/nsconfig/partitions/<partitionName>` directory. Other partition-specific files are stored in the `/var/partitions/<partitionName>` directories.

Some other paths in an admin partition:

- Downloaded files: `/var/partitions/<partitionName>/download/`
- Log files: `/var/partitions/<partitionName>/log/`

Note

Currently, logging is not supported at partition-level. Therefore, this directory is empty and all logs are stored in the `/var/log/` directory.

- SSL CRL certificate related files: `/var/partitions/<partitionName>/netscaler/ssl`

Resources Available:

All NetScaler resources.

NetScaler resources that are explicitly assigned to the admin partition.

User access and roles

In authenticating and authorizing a partitioned NetScaler appliance, a root administrator can assign a partition administrator to one or more partitions. The partition administrator can authorize users to that partition without affecting other partitions. The partition users are authorized to access only that partition using the SNIP address. Both the root administrator and the partition administrator can configure role based access (RBA) by authorizing users to access different applications.

Administrators and user roles can be described as follows:

Root Administrator. Accesses the partitioned appliance through its NSIP address and can grant user access to one or more partitions. The administrator can also assign partition administrators to one or more partitions. The administrator can create a partition administrator from the default partition using an NSIP address or switch to a partition and then create a user and assign partition admin access using a SNIP address.

Partition Administrator. Accesses the specified partition through an NSIP address assigned by the root administrator. The administrator can assign role-based access to partition user access to that partition and also configure external server authentication using partition specific configuration.

System User. Accesses partitions through the NSIP address. Has access to the partitions and resources specified by the root administrator.

Partition User. Accesses a partition through a SNIP address. The user account is created by the partition administrator and the user has access to resources, only within the partition.

Points to remember

Following are some points to remember when providing role-based access in a partition.

1. NetScaler users accessing the GUI through the NSIP address uses the default partition authentication configuration to log on to the appliance.

2. Partition system users accessing the GUI through a partition SNIP address uses partition specific authentication configuration to log on to the appliance.
3. Partition user created in a partition cannot log in using the NSIP address.
4. The NetScaler user bound to a partition cannot log in using the partition SNIP address.
5. System users authenticating through an external authentication server (for example, LDAP, RADIUS, TACACS) must access a partition through a SNIP address.

Use case for managing role based access in a partitioned setup

Consider a scenario where an enterprise organization, www.example.com has multiple business units and a centralized administrator who manages all instances in their network. However, they want to provide exclusive user privileges and environment for each business unit.

Following are the administrators and users managed by default partition authentication configuration and partition specific configuration in a partitioned appliance.

John: Root Administrator

George: Partition Administrator

Adam: System User

Jane: Partition User

John, is the root administrator of a partitioned NetScaler appliance. John manages all user accounts and administrative user accounts across partitions (for example, P1, P2, P3, P4, and P5) within the appliance. John provides granular role-based access to entities from the default partition of the appliance. John creates user accounts and assigns partition access to each account. George being a network engineer within the organization prefers to have a role based access to few applications running on partition P2. Based on user management, John creates a partition administrator role for George and associates his user account with a partition-admin command policy in the P2 partition. Adam being another network engineer prefers to access an application running on P2. John creates a system user account for Adam and associates his user account to a P2 partition. Once the account is created, Adam can log into the appliance to access the NetScaler management interface through the NSIP address and can switch to partition P2 based on user/group binding.

Suppose, Jane who is another network engineer wants to directly access an application running only on partition P2, George (partition administrator) can create a partition user account for her and associate her account with command policies for authorization privileges. Jane's user account created within the partition is now directly associated with P2. Now Jane can access the NetScaler management interface through the SNIP address and cannot switch to any other partition.

Note

If Jane's user account is created by a partition administrator in partition P2, the admin can access the NetScaler management interface only through the SNIP address (created within the partition). The admin is not permitted to access the interface through the NSIP address. Similarly, if Adam's user account is created by a root administrator in the default partition and is bound to a P2 partition. The admin can access the NetScaler management interface only through the NSIP address or SNIP address created in the default partition (with management access enabled). And not permitted to access the partition interface through the SNIP address created in the administrative partition.

Configure roles and responsibilities for partition administrators

Following are the configurations performed by a root administrator in a default partition.

Creating administrative partitions and system users –A root administrator creates administrative partitions and system users in the default partition of the appliance. The administrator then associates the users to different partitions. If you are bound to one or more partitions, you can switch from one partition to another based on user bindings. Also, your access to one or more bound partitions is authorized only by the root administrator.

Authorizing the system user as partition administrator for a specific partition –Once a user account is created, the root administrator switches to a specific partition and authorizes the user as the partition administrator. It is done by assigning partition-admin command policy to the user account. Now, the user can access the partition as partition administrator and manage entities within the partition.

Following are the configurations performed by a partition administrator in an administrative partition.

Configuring the SNIP address in an administrative partition- The partition administrator logs on to the partition and creates a SNIP address and provides management access to the address.

Creating and Binding a Partition System User with Partition Command Policy - The partition administrator creates partition users and defines the scope of user access. It is done by binding the user account to partition command policies.

Creating and Binding a Partition System User Groups with Partition Command Policy -The partition administrator creates partition user groups and defines the scope of user group access. It is done by binding the user group account to partition command policies.

Configuring External Server authentication for external users (optional)-This configuration is done for authenticating external TACACS users accessing the partition using the SNIP address.

Following are the tasks performed in configuring role-based access for partition users in an Administrative Partition.

1. Creating an Administrative Partition –Before you create partition users in an administrative partition, you must first create the partition. As a root administrator, you can create a partition from the default partition using the configuration utility or a command line interface.
2. Switching user access from default partition to partition P2 –If you are partition administrator accessing the appliance from the default partition, you can switch from default partition to a specific partition. For example, partition P2 based on user binding.
3. Adding a SNIP address to the partition user account with management access enabled-Once you have switched your access to an administration partition. You create a SNIP address and provide management access to the address.
4. Creating and binding a partition System User with Partition Command Policy-If you are a partition administrator, you can create partition users and define the scope of user access. It is done by binding the user account to partition command policies.
5. Creating and binding partition user group with partition command policy - If you are a partition administrator, you can create partition user groups and define the scope of user access control. It is done by binding the user group account to partition command policies.

Configuring External Server authentication for external users (optional)-This configuration is done for authenticating external TACACS users accessing the partition using a SNIP address.

Benefits of using admin partitions

You can avail the following benefits by using admin partitions for your deployment:

- Allows delegation of administrative ownership of an application to the customer.
- Reduces the cost of ADC ownership without compromising on performance and ease-of-use.
- Safeguards from unwarranted configuration changes. In a non-partitioned NetScaler appliance, authorized users of the other application can intentionally or unintentionally change configurations that are required for your application. It can lead to undesirable behavior. This possibility is reduced in a partitioned NetScaler appliance.
- Isolates traffic between different applications by the use of dedicated VLANs for each partition.
- Accelerates and allows application deployments to scale.
- Allows application-level or localized management and reporting.

Let us analyze a couple of cases to understand the scenarios in which you can use admin partitions.

User case 1: How admin partition is used in an enterprise network

Let us consider a scenario faced by a company named **Foo.com**.

- **Foo.com** has a single NetScaler.

- There are five departments and each department has one application that requires to be deployed with the NetScaler.
- Each application must be managed independently by a different set of users or administrators.
- Other users must be restricted from accessing the configurations.
- The application or back-end must be able to share resources like IP addresses.
- The global IT department must be able to control NetScaler-level settings which must be common to all partitions.
- Applications must be independent of one another. An error in the configuration of one application must not affect the other.

A non-partitioned NetScaler would not be able to satisfy these requirements. However, you can achieve all these requirements by partitioning a NetScaler.

Simply create a partition for each of the applications, assign the required users to the partitions, specify a VLAN for each partition, and define global settings on the default partition.

Use case 2: How an admin partition is used by a service provider

Let us consider a scenario faced by a service provider named **BigProvider**:

- BigProvider has 5 customers: 3 small enterprises and 2 large enterprises.
- **SmallBiz**, **SmallerBiz**, and **StartupBiz** need only the most basic NetScaler functionality.
- **BigBiz** and **LargeBiz** are larger enterprises and have applications that attract heavy traffic. They would like to use some of the more complex NetScaler functionality.

In a non-partitioned approach, the NetScaler administrator would typically use a NetScaler SDX appliance and provision a NetScaler instance for each customer.

The solution suits **BigBiz** and **LargeBiz** because their applications need the undiminished power of the entire non-partitioned NetScaler appliance. However, this solution might not be as cost effective for servicing **SmallBiz**, **SmallerBiz**, and **StartupBiz**.

Therefore, **BigProvider** decides on the following solution:

- Using a NetScaler SDX appliance to bring up dedicated NetScaler instances for **BigBiz** and **LargeBiz**.
- Using a single NetScaler which is partitioned into three partitions, one each for **SmallBiz**, **SmallerBiz**, and **StartupBiz**.

The NetScaler administrator (superuser) creates an admin partition for each of these customers, and specifies the users for the partitions. And also specifies the NetScaler resources for the partitions, and specifies the VLAN to be used by the traffic that is destined for each of the partitions.

NetScaler configurations support in admin partition

June 3, 2024


NetScaler configurations can be categorized into the following three types of configurations. It depends on the Citrix configuration and the partition in which the configuration is performed.

Note

- Admin partitions cannot be set up on a NetScaler cluster. It means that a NetScaler cluster cannot be partitioned.
- Admin partitions are not supported on a NetScaler 14000 FIPS appliance.
- [Case 3](#) lists the NetScaler features that are not supported in admin partitions.
- Load balancing templates are not supported in admin partitions.

Case 1 (global configurations)


Configurations that can be performed ONLY in the default partition and which are available or impact all the admin partitions.

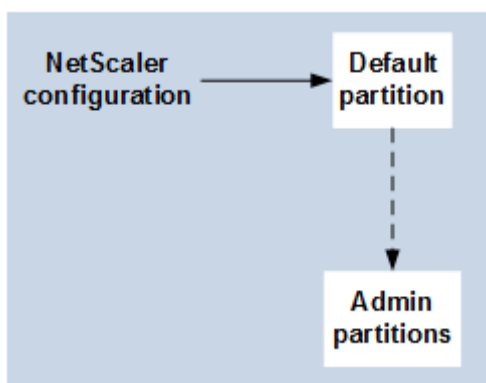

- Updates to built-in entities for monitors, TCP profiles, HTTP profiles, and so on.
- Updates to global parameters for syslog, NSLOG, weblog, content switching, IPSEC, SIP, DHCP, Surge protection, TCP buffering, and system collection.
- High availability (HA) configurations
- Interface and VLAN changes
- User configurations

Case 2 (partition-specific configurations)


Configurations that can be performed independently in default and admin partitions. These configurations are applicable only to the partition in which they are performed.

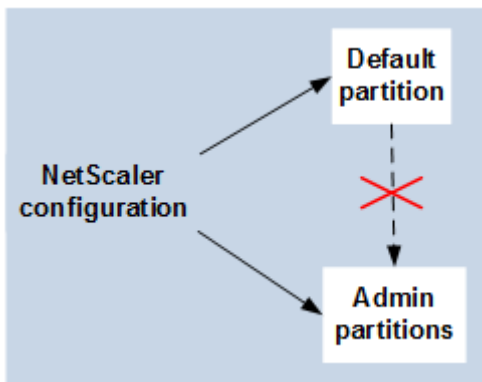

- Getting traffic level statistics for a partition.
- Partition admin can update IP bindings for VLAN which is bound to that partition. But cannot update the interface bindings.
- Clearing NetScaler configurations.
- Feature-specific parameters for the following features: AppFlow, AppQoE, HTTP compression, DNS, TCP, HTTP, encryption, responder, rewrite, and SSL.
- Feature-specific configurations such as virtual servers, services, monitors.

Case 3

Configurations that cannot be performed on admin partitions. These features can be configured in the default partition, but there is no impact on admin partitions.

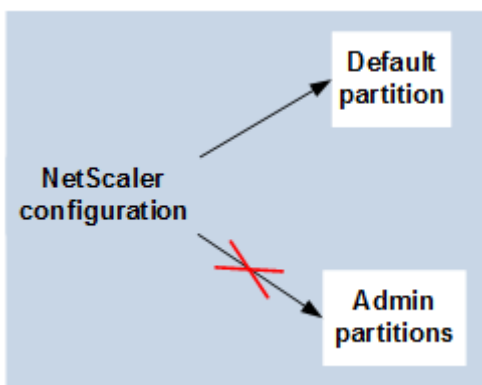

Note:

Configurations that are supported on admin partitions for a particular release are marked as **Yes**.

NetScaler 14.1

Feature Component	NetScaler Feature	NetScaler 12.1	NetScaler 13.0	NetScaler 13.1	NetScaler 14.1
Networking	Traffic	No	No	No	No
Policy	Domain Extensibility	Yes	Yes	Yes	Yes
Load Balancing	DBS Autoscale	Yes	Yes	Yes	Yes
Load Balancing	DNSSEC	Yes	Yes	Yes	Yes
Load Balancing	Diameter	Yes	Yes	Yes	Yes
Load Balancing	RTSP	No	No	No	No
Load Balancing	Sure Connect	Deprecated	Deprecated	Removed	Removed
Load Balancing	Autoscale	Yes	Yes	Yes	Yes
Manageability	Service Group				
Manageability	RBA External Authentication	Yes	Yes	Yes	Yes
Manageability	RISE Cisco	No	Yes	Yes	Yes
Manageability	AppExpert	Yes	Yes	Yes	Yes
Manageability	HDX Insight	No	No	No	No
Manageability	Insight	No	No	No	No
VPN	Citrix CloudBridge Connector	No	No	No	No
VPN	NetScaler Gateway or SSL VPN	No	No	No	No
VPN	SSL VPN ICA Proxy	No	No	No	No
VPN	Web Interface on NetScaler	No	No	No	No
SSL	SSL Profile	Yes	Yes	Yes	Yes
SSL	SSL-FIPS	No	No	No	No
SSL	External-HSM	No	No	No	No

NetScaler 14.1

Feature Component	NetScaler Feature	NetScaler 12.1	NetScaler 13.0	NetScaler 13.1	NetScaler 14.1
Infra	Cache	No	No	No	No
Infra	Redirection Integrated	Yes	Yes	Yes	Yes
Network	Caching				
Network	VXLAN	Yes	Yes	Yes	Yes
Network	Graceful Shutdown	Yes	Yes	Yes	Yes
Network	LSN	No	No	No	No
Network	IPv6 Ready	Yes	Yes	Yes	Yes
Network	Logo				
Network	vPath	Yes	Yes	Yes	Yes
Load Balancing	Datastream	Yes	Yes	Yes	Yes
Logging	Web logging	Yes	Yes	Yes	Yes
Network	L2 Param/L3 Param	Yes	Yes	Yes	Yes
Network	GRE Tunnel	Yes	Yes	Yes	Yes
Loading Balancing	Scriptable Monitoring	Yes	Yes	Yes	Yes
Load Balancing	GSLB	Yes	Yes	Yes	Yes
Infra	Connection Mirroring	Yes	Yes	Yes	Yes
Infra	FEO	Yes	Yes	Yes	Yes
Infra	Ns trace	Yes	Yes	Yes	Yes
Load Balancing	Priority Queuing	Deprecated	Deprecated	Removed	Removed
Network	HDOSP	Deprecated	Deprecated	Removed	Removed
Network	Net profile	Yes	Yes	Yes	Yes
Network	Networking (Restricted Feature)	Yes	Yes	Yes	Yes

Feature Component	NetScaler Feature	NetScaler 12.1	NetScaler 13.0	NetScaler 13.1	NetScaler 14.1
Network	VRRP (Restricted Feature)	Yes	Yes	Yes	Yes
Logging	Audit Logging (SYSLOG-TCP, LB of syslog servers, SNIP support, and FQDN support for syslog)	Yes	Yes	Yes	Yes
VPN	NetScaler Gateway	No	No	No	No
VPN	AAA-TM	Yes	Yes	Yes	Yes
AppFlow	AppFlow	Yes (IPFIX only)	Yes	Yes	Yes
AppFw	Application Firewall	No	No	No	No
URL transformation	URL transformation	No	No	No	No
Load Balancing	TCP Buffering	No	No	No	No
Policies	OCSP Responder	Yes	Yes	Yes	Yes
Audit Log	SYSLOG-TCP	Yes	Yes	Yes	Yes
Optimization	Front-end-optimization	Yes	Yes	Yes	Yes
AppQoE	AppQoE	Yes	Yes	Yes	Yes

The preceding table lists some of the features as **Restricted Features** in the admin partition setup. The following section provides the reason why some of the features are mentioned as **Restricted Features**.

- **VRRP**. The VRRP is Restricted Feature in the admin partition because of the following:
 - VRID addition or deletion can be done only from the default partition context. However, once a VRID is created, it can be used within non-default partitions.

- VRRP functionality is supported only over the dedicated VLANs.
- VRRP functionality is not supported on shared VLANs, used by the admin partition. It is blocked internally. No error message is shown during configuration. The protocol is blocked on a shared VLAN (tagged or untagged) bound to a default or any administrative partition.

Important

To support active-active deployment using VRRP, main and backup VIP must use the same VRID. Different VRIDs cannot be used.

- **Networking.** Some of the networking configurations (L2 Param and L3 Param) are not supported or valid in the partition context. If you come across any such configurations, the following error message is displayed. “ERROR: This configuration option is not supported on the non-default partition.”

Configure admin partitions

May 2, 2023

Important

- Only superusers are authorized to create and configure admin partitions.
- Unless specified otherwise, configurations to set up an admin partition must be done from the default partition.

By partitioning a NetScaler appliance, you are creating multiple instances of a single NetScaler appliance. Each instance has its own configurations and the traffic of each of these partitions is isolated from the other. It is done by assigning each partition a dedicated VLAN or a shared VLAN.

A partitioned NetScaler has one default partition and the admin partitions that are created. To set up an admin partition, you must first create a partition with the relevant resources (memory, maximum bandwidth, and connections). Then, specify the users that can access the partition and the level of authorization for each of the users on the partition.

Accessing a partitioned NetScaler is the same as accessing a non-partitioned NetScaler: through the NSIP address or any other management IP address. As a user, after you provide your valid logon credentials, you are taken to the partition to which you are bound. Any configurations that you create are saved to that partition. If you are associated with more than one partition, you are taken to the first partition with which you were associated. If you want to configure entities on one of your other partitions, you must explicitly switch to that partition.

After accessing the appropriate partition, the configurations that you perform are saved to that partition and are specific to that partition.

Note

- NetScaler superusers and other non-partition users are taken to the default partition.
- Users of all the 512 partitions can log in simultaneously.

Tip

To access a partitioned NetScaler appliance over HTTPS by using the SNIP (with management access enabled), make sure that each partition has the certificate of its partition administrator. Within the partition, the partition admin must do the following:

1. Add the certificate to the NetScaler.

```
add ssl certKey ns-server-certificate -cert ns-server.cert-key ns-server.key
```

2. Bind it to a service named `nshttps-<SNIP>-3009`, where `<SNIP>` must be replaced with the SNIP address, in this case `100.10.10.1`.

```
bind ssl service nshttps-100.10.10.1-3009 -certkeyName ns-server-certificate
```

Partition resource limiting

In a partitioned NetScaler appliance, a network administrator can create a partition with partition resources such as memory, bandwidth, and connection limit configured as unlimited. It is done by specifying Zero as the partition resource value. Where Zero indicates the resource is unlimited on the partition and it can be consumed up to system limits. Partition resource configuration is useful when you migrate a traffic domain deployment to an administrative partition or if you do not know about the resource allocation limit for a partition in a given deployment.

Resource limit for an administrative partition is as follows:

1. **Partition memory.** It is the maximum allocated memory for a partition. You make sure to specify the values when creating a partition.

Note

From NetScaler 12.0 onwards, when you create a partition, you can set the memory limit to Zero. If a partition is already created with a specific memory limit, you can reduce the limit to any value or set the limit as Zero.

Parameter: maxMemLimit

Maximum memory is allocated in MB in a partition. A zero value indicates the memory is unlimited on the partition and it can consume up to the system limits.

Default value: 10

2. **Partition bandwidth.** Maximum allocated bandwidth for a partition. If you specify a limit, make sure it is within the appliance's licensed throughput. Otherwise, you are not limiting the bandwidth that is used by the partition. The specified limit is accountable for the bandwidth that the application requires. If the application bandwidth exceeds the specified limit, packets are dropped.

Note

From NetScaler 12.0 onwards, when you can create a partition, you can set the partition bandwidth limit to Zero. If a partition is already created with a specific bandwidth, you can reduce the bandwidth or set the limit as Zero.

Parameter: maxBandwidth

Maximum bandwidth is allocated in Kbps in a partition. A zero value indicates the bandwidth is unrestricted. That is, the partition can consume up to the system limits.

Default value: 10240

Maximum Value: 4294967295

3. **Partition connection.** Maximum number of concurrent connections that can be open in a partition. The value must accommodate the maximum simultaneous flow expected within the partition. The partition connections are accounted from the partition quota memory. Previously, the connections were accounted from the default partition quota memory. It is configured only on the client-side, not on the back-end server-side TCP connections. New connections cannot be established beyond this configured value.

Note

From NetScaler 12.0 onwards, you can create a partition with the number of open connections set to Zero. If you have already created a partition with a specific number of open connections, you can reduce the connection limit or set the limit as Zero.

Parameter: maxConnections

Maximum number of concurrent connections that can be open in the partition. A zero value indicates no limit on the number of open connections.

Default value: 1024

Minimum value: 0

Maximum Value: 4294967295

Configure an admin partition

To configure an admin partition, complete the following tasks.

To access in an admin partition by using the CLI

1. Log on to the NetScaler appliance.
2. Check if you are in the correct partition. The command prompt displays the name of the currently selected partition.
3. If yes, skip to the next step.
4. If no, get a list of the partitions with which you are associated and switch over to the appropriate partition.
 - `show system user <username>`
 - `switch ns partition <partitionName>`
5. Now, you can perform the required configurations just as a non-partitioned NetScaler.

To access an admin partition by using the GUI

1. Log on to the NetScaler appliance.
2. Check if you are in the correct partition. The top bar of the GUI displays the name of the currently selected partition.
 - If yes, skip to the next step.
 - If no, navigate to **Configuration > System > Partition Administration > Partitions**, right-click the partition to which you want to switch, and select **Switch**.
3. Now, you can perform the required configurations just as a non-partitioned NetScaler.

Add an admin partition

The root administrator adds an administrative partition from the default partition and binds the partition with VLAN 2.

To create an administrative partition by using the CLI

At the command prompt, type:

```
1 add partition <partitionname>
```

Switch user access from default partition to an admin partition

Now you can switch user access from default partition to partition Par1.

To switch a user account from default partition to an admin partition by using the CLI:

At the command prompt, type:

```
1 Switch ns partition <pname>
```

Adding SNIP address to a partition user account with management access enabled

In the partition, create a SNIP address with management access enabled.

To add SNIP address to the partition user account with management access enabled by using the command line interface:

At the command prompt, type:

```
> add ns ip <ip address> <subnet mask> -mgmtAccess enabled
```

Create and Bind a partition user with partition command policy

In partition, create a partition system user and bind the user with partition-admin command policies.

To create and bind a partition system user with partition command policy by using the CLI:

At the command prompt, type:

```
> add system user <username> <password>
```

Done

Creating and binding partition user group with partition command policy

In Partition Par1, create a partition system user group and bind the group with partition command policy such as partition admin, partition read-only, partition-operator, or partition-network.

To create and bind a partition user group with partition command policy by using the command line interface:

```
1 > add system group <groupName>
2 > bind system group <groupname> \(-userName | -policyName <cmdpolicy> <
    priority> | -partitionName)
```

Configuring external server authentication for external users

In partition Par1 you can configure an external server authentication to authenticate external TACACS users accessing the partition through a SNIP address.

To configure external server authentication for external users by using the command line interface:

At the command prompt, type:

```
1 > add authentication tacacsaction <name> -serverip <IP> -tacacsSecret <
    secret key> -authorization ON -accounting ON
2 > add authentication policy <pollicname> -rule true -action <name>
3 > bind system global <pollicname> -priority <value>1
```

Configure a partition system user account in a partition by using the GUI

To configure a partition user account in an administrative partition, you must create a partition user or a partition user group and bind it partition command policies. Also, you can configure the external server authentication for an external user.

To create a partition user account in a partition by using the GUI

Navigate to **System > User Administration**, click **Users** to add a partition system user, and bind the user to command policies (partitionadmin/partitionread-only/partition-operator/partition-network).

To create a partition user group account in a partition by using the GUI

Navigate to **System > User Administration**, click **Groups** to add a partition system user group and bind the user group to command policies (partitionadmin/partitionread-only/partition-operator/partition-network).

To configure external server authentication for external users by using the GUI

Navigate to **System > Authentication > Basic Actions** and click **TACACS** to configure a TACACS server for authenticating external users accessing the partition.

Sample configuration

The following configuration shows how to create a partition user or a partition user group and bind it partition command policies. Also, how to configure the external server authentication for authenticating an external user.

```

1 > add partition Par1
2 > switch ns partition Par1
3 > add ns ip 10.102.29.203 255.255.255.0 -mgmtAccessenabled
4 > add system user John Password
5 > bind system user Jane partition-read-only -priority 1
6 > add system group Retail
7 > bind system group Retail -policyname partition-network 1 (where 1 is
   the priority number)
8 > bind system group Retail -username Jane
9 > add authentication tacacsaction tacuser -serverip 10.102.29.200 -
   tacacsSecret Password -authorization ON -accounting ON
10 > add authentication policy polname -rule true -action tacacsAction
11 > bind system global polname -priority 1
  
```

Command policies for a partition users and partition user groups in administrative partition

Commands to authorize a user account inside administrative partition	Command policies available inside an administrative partition (built-in policies)	User account access type
add system user	Partition-admin	SNIP (with management access enabled)
add system group	Partition-network	SNIP (with management access enabled)
add authentication <action, policy>, bind system global <policy name>	Partition-read-only	SNIP (with management access enabled)
remove system user	Partition-admin	SNIP(with management access enabled)

Commands to authorize a user account inside administrative partition	Command policies available inside an administrative partition (built-in policies)	User account access type
remove system group	Partition-admin	SNIP (with management access enabled)
<code>bind system cmdpolicy to system user;</code> <code>bind system cmdpolicy to system group</code>	Partition-admin	SNIP (with management access enabled)

Configure an LACP Ethernet channel on the default admin partition

With the Link Aggregation Control Protocol (LACP), you can combine multiple ports into a single, high-speed link (also called a channel). An LACP-enabled appliance exchanges LACP Data Units (LACPDU) over the channel.

There are three LACP configuration modes that you can enable in the default partition of a NetScaler appliance:

1. **Active.** A port in active mode sends LACPDUs. Link aggregation is formed if the other end of the Ethernet link is in the LACP active or passive mode.
2. **Passive.** A port in passive mode sends LACPDUs only when it receives LACPDUs. The link aggregation is formed if the other end of the Ethernet link is in the LACP active mode.
3. **Disable.** Link aggregation is not formed.

Note

By default, the link aggregation is disabled in the default partition of the appliance.

LACP exchanges LACPDU between devices connected by an Ethernet link. These devices are typically referred as an actor or partner.

A LACPDU data unit contains the following parameters:

- **LACP Mode.** Active, passive, or disable.
- **LACP timeout.** The waiting period before timing out the partner or actor. Possible values: Long and Short. Default: Long.
- **Port Key.** To distinguish between the different channel. When the key is 1, LA/1 is created. When the key is 2, LA/2 is created. Possible values: Integer from 1 through 8. 4 through 8 is for cluster CLAG.
- **Port Priority.** Minimum value: 1. Maximum value: 65535. Default: 32768.

- **System Priority.** Uses this priority along with the system MAC to form the system ID to uniquely identify the system during LACP negotiation with the partner. Sets system priority from 1 and 65535. The default value is set to 32768.
- **Interface.** Supports 8 interfaces per channel on NetScaler 10.1 appliance and supports 16 interfaces per channel on NetScaler 10.5 and 11.0 appliances.

After exchanging LACPDUs, the actor and partner negotiate the settings and decide whether to add the ports to the aggregation.

Configure and verify LACP

The following section shows how to configure and verify LACP in the admin partition.

To configure and verify LACP on a NetScaler appliance by using the CLI

1. Enable LACP on each interface.

```
set interface <Interface_ID> -lacpMode PASSIVE -lacpKey 1
```

When you enable LACP on an interface, the channels are dynamically created. Also, when you enable LACP on an interface and set lacpKey to 1, the interface is automatically bound to channel LA/1.

Note

When you bind an interface to a channel, the channel parameters take precedence over the interface parameters, so the interface parameters are ignored. If a channel is created dynamically by LACP, you cannot perform the add, bind, unbind, or remove operations on the channel. A channel dynamically created by LACP is automatically deleted when you disable LACP on all interfaces of the channel.

2. Set the system priority.

```
set lacp -sysPriority <Positive_Integer>
```

3. Verify that LACP is working as expected.

```
show interface <Interface_ID>
```

```
show channel
```

```
show LACP
```

Note

In some versions of Cisco Internetwork Operating System (iOS), running the switchport trunk native VLAN <VLAN_ID> command causes the Cisco switch to tag LACP PDUs. It

causes the LACP channel between the Cisco switch and the NetScaler appliance to fail. However, this issue does not affect the static link aggregation channels configured in the previous procedure.

Save configuration of all admin partitions from the default partition

Administrators can save the configuration of all the admin partitions at once from the default partition.

Save all admin partitions from default partition by using the CLI

At the command prompt, type:

```
save ns config -all
```

Support for partition and cluster based custom reports

NetScaler GUI displays only the custom reports created in the current viewing partition or in the cluster.

Previously, the NetScaler GUI used to store the Custom Report names directly to the back end file without mentioning the partition or cluster name to differentiate.

To view the custom reports of the current partition or cluster in the GUI

- Navigate to **Reporting** tab.
- Click **Custom Reports** to view the reports created in the current partition or in the cluster.

Support to bind VPN global certificates in a partitioned setup for OAuth IdP

In a Partitioned setup, you can now bind the certificates to VPN global for OAuth IdP deployments.

To bind the certificates in Partitioned setup by using the CLI

At the command prompt, type:

```
1 bind vpn global [-certkeyName <string>] [-userDataEncryptionKey <string>]
```

VLAN configuration for admin partitions

May 2, 2023

VLANs can be bound to a partition as a “Dedicated”VLAN or a “Shared”VLAN. Based on your deployment, you can bind a VLAN to a partition to isolate its network traffic from other partitions.

Dedicated VLAN –A VLAN bound only to one partition with the “Sharing”option disabled and must be a tagged VLAN. For example, in a client-server deployment, for security reasons a system administrator creates a dedicated VLAN for each partition on the server side.

Shared VLAN –A VLAN bound (shared across) to multiple partitions with the “Sharing”option enabled. For example, in a client-server deployment, if the system administrator do not have control over the client side network, a VLAN is created and shared across multiple partitions.


Shared VLAN can be used across multiple partitions. It is created in the default partition and you can bind a shared VLAN to multiple partitions. By default, a shared VLAN is bound to the default partition implicitly and hence it cannot be bound explicitly.

Notes

- A NetScaler appliance deployed on any hypervisor (ESX, KVM, Xen, and Hyper-V) platform must comply with both the following conditions in a partition setup and traffic domain:
 - Enable the promiscuous mode, MAC changes, MAC spoofing, or forged transmit for shared VLANs with partition.
 - Enable the VLAN with port group properties of the virtual switch, if the traffic is through a dedicated VLAN.
- In a partitioned (multitenant) NetScaler appliance, a system administrator can isolate the traffic flowing to a particular partition or partitions. It is done by binding one or more VLANs to each partition. A VLAN can be dedicated to one partition or Shared across multiple partitions.
- Internal routing between partitions that are hosted on the same NetScaler appliance is not supported.

Dedicated VLANs

To isolate the traffic flowing into a partition, create a VLAN and associate it with the partition. The VLAN is then visible only to the associated partition, and the traffic flowing through the VLAN is classified and processed only in the associated partition.

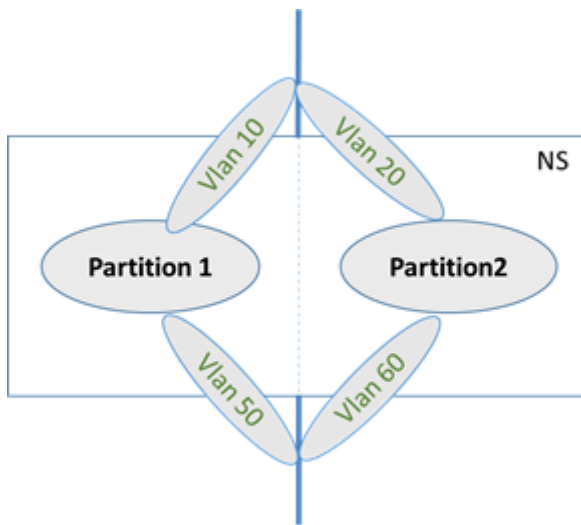

To implement a dedicated VLAN for a particular partition, do the following.

1. Add a VLAN (V1).
2. Bind a network interface to VLAN as a tagged network interface.
3. Create a partition (P1).
4. Bind partition (P1) to the dedicated VLAN (V1).

Configure the following by using the CLI

- Create a VLAN

```
add vlan <id>
```

Example

```
1 add vlan 100
```

- Bind a VLAN

```
bind vlan <id> -ifnum <interface> -tagged
```

Example

```
1 bind vlan 100 -ifnum 1/8 -tagged
```

- Create a partition

```
Add ns partition <partition name> [-maxBandwidth <positive_integer>] [-maxConn <positive_integer>] [-maxMemLimit <positive_integer>]
```

Example


```
1   Add ns partition P1 - maxBandwidth 200 - maxconn 50 - maxmemlimit
    90
2
3   Done
```

- Bind a partition to a VLAN

```
bind partition <partition-id> -vlan <id>
```

Example

```
1   bind partition P1 -vlan 100
```

Configure a dedicated VLAN by using the NetScaler GUI

1. Navigate to **Configuration > System > Network > VLANs*** and click **Add** to create a VLAN.
2. On the **Create VLAN** page, set the following parameters:
 - VLAN ID
 - Alias Name
 - Maximum Transmission Unit
 - Dynamic Routing
 - IPv6 Dynamic Routing
 - Partitions Sharing
3. In the **Interface Bindings** section, select one or more interfaces and bind it to the VLAN.
4. In the **IP Bindings** section, select one or more IP addresses and bind to the VLAN.
5. Click **OK** and **Done**.


Shared VLAN

In a shared VLAN configuration, each partition has a MAC address, and traffic received on the shared VLAN is classified by MAC address. Only a Layer3 VLAN is recommended because it can restrict the subnet traffic. A partition MAC address is applicable and important only for a shared VLAN deployment.

Note

Starting from NetScaler version 12.1 build 51.16, shared VLAN in a partitioned appliance support dynamic routing protocol.

The following diagram shows how a VLAN (VLAN 10) is shared across two partitions.

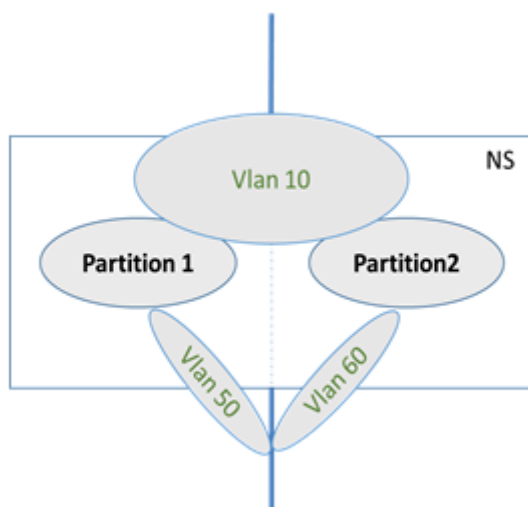

To deploy a shared VLAN configuration, do the following:

1. Create a VLAN with the sharing option 'enabled', or enable the sharing option on an existing VLAN. By default, the option is 'disabled'.
2. Bind partition interface to shared VLAN.
3. Create the partitions, each with its own PartitionMAC address.
4. Bind the partitions to the shared VLAN.

Configure a shared VLAN by using the CLI

At the command prompt, type one of the following commands to add VLAN or set the sharing parameter of an existing VLAN:

```
1 add vlan <id> \[-sharing \{ENABLED | DISABLED}\]
2
3 set vlan <id> \[-sharing \{ENABLED | DISABLED}\]
4
5 add vlan 100 -sharing ENABLED
6
7 set vlan 100 -sharing ENABLED
```

Bind a partition to a Shared VLAN by using the CLI

At the command prompt, type:

```
1 bind partition <partition-id> -vlan <id>
2
3 bind partition P1 -vlan 100
4
5 add ns partition P1 -maxBandwidth 200 -maxconn 50 -maxmemlimit 90
  -partitionMAC<mac_addr>
```

```
6  
7 Done
```

Configure a Partition MAC Address by using the CLI

```
1 set ns partition <partition name> [-partitionMAC<mac_addr>]  
2  
3 set ns partition P1 - partitionMAC 22:33:44:55:66:77
```

Bind partitions to a shared VLAN by using the CLI

```
1 bind partition <partition-id> -vlan <id>  
2  
3 bind partition <partition-id> -vlan <id>  
4  
5 bind partition P1 - vlan 100  
6  
7 bind partition P2 - vlan 100  
8  
9 bind partition P3 - vlan 100  
10  
11 bind partition P4 - vlan 100
```

Configure Shared VLAN by using the NetScaler GUI


1. Navigate to **Configuration > System > Network > VLANs** and then select a **VLAN** profile and click **Edit** to set the partition sharing parameter.
2. On the **Create VLAN** page, select the **Partitions Sharing** check box.
3. Click **OK** and then **Done**.

Dynamic routing over a shared VLAN across admin partitions

Admin partitions in a NetScaler appliance provide a way to host multiple tenants.

Starting from NetScaler version 12.1 build 51.16, a shared VLAN in a partitioned appliance supports the dynamic routing protocol. Routing can be configured in dedicated or shared VLANs associated with admin partitions.


Dedicated VLAN of an admin partition. In a dedicated VLAN, the data path for the tenant is identified using one or more VLANs. It results in strict configuration and data-path isolation for the tenant. For advertising the health of a VIP address, dynamic routing is enabled in each partition and the routing adjacency is established per partition.

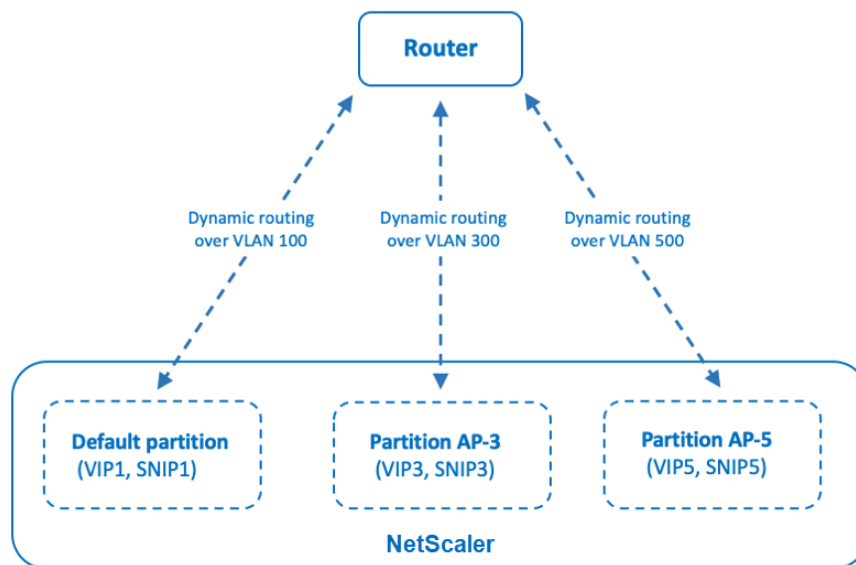

Dynamic routing over a dedicated VLAN per partition

A shared VLAN across admin partitions. In a shared VLAN, VIP addresses configured in a non-default partition can be advertised through a single adjacency or peering formed in the default partition. A SNIP address in the non-default partition is used as the next-hop for all the VIP addresses (configured with **advertiseOnDefaultPartition** option) in that non-default partition. The configured SNIP address is marked as a next-hop IP address in the routing advertisements.

Consider an example setup of admin partitions in a NetScaler appliance, VLAN 100 is shared across the default partition, and non-default partitions: AP-3 and AP-5. SNIP addresses SNIP1 is added in the default partition, SNIP3 is added in AP-3, and SNIP5 is added in AP-5. SNIP1, SNIP3, and SNIP5 are reachable over the vlan-100. VIP addresses VIP1 is added in the default partition, VIP3 is added in AP-3, and VIP5 is added in AP-5. VIP3 and VIP5 are advertised through the single adjacency or peering formed in the default partition.

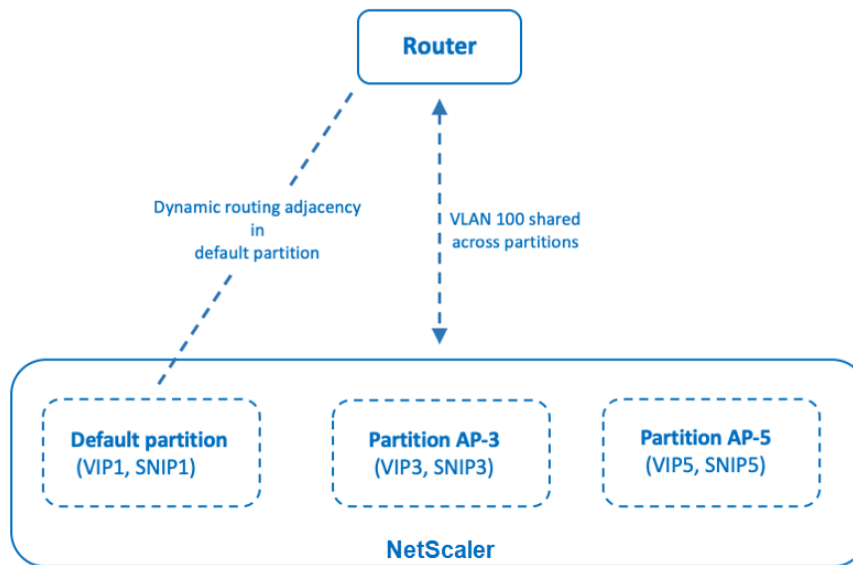

Dynamic routing over a shared VLAN across partitions

Before you begin

Before configuring dynamic routing over a shared VLAN in a non-default admin partition, make sure that:

- **Dynamic routing is configured on the shared VLAN in the default partition.** Configuring dynamic routing on the shared VLAN in the default partition consists of the following steps:
 1. Enable dynamic routing on the shared VLAN.
 2. Add a SNIP IP address with dynamic routing enabled. This SNIP IP address is used for dynamic routing with the upstream.
 3. Bind the SNIP IP subnet to the shared VLAN.
- **One or more dynamic routing protocol is configured on the default partition.** For more information, see [configure dynamic routing protocols](#).

Configuration steps

Configuring dynamic routing over a shared VLAN in a non-default admin partition consists of the following steps:

1. **Add a SNIP IP address in the non-default partition.** This SNIP IP address must be in the same subnet of the SNIP IP address that is being used for dynamic routing in the default partition.

2. Set or enable the following parameters for advertising a VIP address, in a non-default partition, using dynamic routing.

- Host route gateway (hostRtGw). Set this parameter to the SNIP address added in the preceding step.
- Advertise on default partition (advertiseOnDefaultPartition). Enable this parameter.

Sample configuration

Consider an example of an admin partition setup in a NetScaler appliance. A non-default admin partition AP-3 is configured on this appliance. A shared VLAN VLAN100 is bound to AP-3. The following sample configuration configures dynamic routing, through VLAN100, in AP-3.

Steps	Sample configuration
On default admin partition	-
Enable dynamic routing on shared VLAN 100.	<code>set vlan 100 -dynamicRouting enabled</code>
Add SNIP IP address 192.0.2.10 with dynamic routing enabled. This SNIP IP address is used for dynamic routing with the upstream.	<code>add ns ip 192.0.2.10 255.255.255.0 -type SNIP -dynamicRouting enabled</code>
Bind subnet of 192.0.2.10 to shared VLAN 100.	<code>bind vlan 100 -IPAddress 192.0.2.10 255.255.255.0</code>
On non-default admin partition AP-3	-
Add SNIP IP address 192.0.2.30. This SNIP IP address is in the same subnet as the SNIP IP address 192.0.2.10 on the default partition.	<code>add ns ip 192.0.2.30 255.255.255.0 -type SNIP</code>
For advertising VIP address 203.0.113.300 using dynamic routing, enable <code>advertiseOnDefaultPartition</code> parameter and set <code>hostRtGw</code> parameter to 192.0.2.30.	<code>set ns ip 203.0.113.300 255.255.255.255 -hostRoute enabled -advertiseOnDefaultPartition enabled -hostRtGw 192.0.2.30</code>

Dynamic routing of IPv6 over a shared VLAN across admin partition

The `enable ns feature IPv6PT` and `set L3Param -ipv6DynamicRouting ENABLED` commands must be enabled for an IPv6 address to dynamically route over a shared VLAN in an admin

partition. The following sample configurations help you to configure dynamic routing of IPv6 over shared VLAN.

Sample configuration

The following sample configuration configures dynamic routing, through VLAN 100, in AP-3.

Steps	Sample configuration
On default admin partition	-
Enable dynamic routing on shared VLAN 100.	<code>set vlan 100 -dynamicRouting enabled</code>
Add SNIP IP address 2001:b:c:d::1/64 with dynamic routing enabled. The SNIP IP address is used for dynamic routing with the upstream.	<code>add ns ip6 2001:b:c:d::1/64 -type SNIP -dynamicRouting enabled</code>
Bind subnet of 2001:b:c:d::1/64 to shared VLAN 100.	<code>bind vlan 100 -IPAddress 2001:b:c:d::1/64</code>
On non-default admin partition AP-3	-
Add SNIP IP address 2001:b:c:d::2/64. This SNIP IP address is in the same subnet as the SNIP IP address 2001:b:c:d::1/64 on the default partition.	<code>add ns ip6 2001:b:c:d::2/64 -type SNIP</code>
For advertising VIP address 2002::1/128 using dynamic routing, enable <code>advertiseOnDefaultPartition</code> parameter and set <code>ip6hostRtGw</code> parameter to 2001:b:c:d::2.	<code>set ns ip6 2002::1/128 - hostRoute enabled - advertiseOnDefaultPartition enabled -ip6hostRtGw 2001:b:c:d::2</code>

The VIP present in the admin partition must be seen on VTYSH of default partition as a kernel route.

```

1 > switch partition default
2 Done
3
4 >vtysh
5 ns#
6
7 ns# sh ipv6 route kernel
8
9 IPv6 routing table
10 Codes: K - kernel route, C - connected, S - static, R - RIP, O - OSPF,
11 IA - OSPF inter area, E1 - OSPF external type 1,
12 E2 - OSPF external type 2, I - IS-IS, B - BGP
13 Timers: Uptime

```

```
14
15 K      2002::1/128 via 2001:b:c:d::2, vlan0, 01:24:15
          >> on Default Partition, VIP : 2002::1
          present in AP known via SNIP6 : 2001:b:c:d::2 is present in AP as a
          Kernel Route
```

It can be advertised to upstream by using “redistribute kernel” option under OSPFv3/BGP+ in default partition.

```
1 ns# sh run router ipv6 ospf
2 !
3 router ipv6 ospf 1
4 redistribute kernel
5 !
```

Shared VLAN with admin partition on NetScaler SDX appliance

On an SDX appliance, you must generate and configure the PMAC address by using the Management Service user interface, before using the admin partitions with shared VLANs. Management Service enables you to generate partition MAC addresses by:

- Using a base MAC address
- Specifying custom MAC addresses
- Randomly generating MAC addresses

Notes

- The randomly generating MAC addresses are used for other deployments other than high availability.
- After generating the partition MAC addresses, you must restart the NetScaler instance before configuring the admin partitions. For more information on generating partition MAC addresses from the SDX appliance, see [Generating Partition MAC Addresses to Configure Admin Partition on a NetScaler instance in the SDX Appliance](#).

VXLAN support for admin partitions

May 2, 2023

In a partitioned NetScaler appliance, similar to configuring a VLAN, you can configure a VXLAN in the default partition. After configuring a VXLAN, you can bind it to an administrative partition or if a VXLAN is extending a VLAN that is bound to a partition, the appliance binds the VXLAN to the partition under

the same broadcast domain. It is applicable in unbinding a VLAN that unbinds a VXLAN from the partition.

For more information about how VXLAN works in a NetScaler appliance, see [VXLAN](#).

Also, for more information on how VLAN works in a partitioned NetScaler appliance, see [Admin Partitioning](#).

Points to remember before configuring a VXLAN

Remember the following points before you configure a VXLAN in a partitioned NetScaler appliance:

- When you extend a VLAN over VXLAN, make sure VLAN is bound to the partition.
- Only a partition administrator must configure the IP and dynamic routing for the VXAN in the administrative partition.

A shared VXLAN is not supported in a partitioned appliance and so a VXLAN cannot be tagged to a shared VLAN or you cannot make a VLAN a shared one when it is tagged to a VXLAN.

Supportable VXLAN configurations

Following are the supportable VXLAN configurations.

Extending VLAN over a VXLAN in the same broadcast domain

The following CLI steps help you to extend a VLAN over a VXLAN and the opposite way within the same broadcast domain.

1. Add a VLAN in the default partition

```
1 add vlan <id>
```

2. Extend VLAN over a VXLAN within the same broadcast domain.

```
1 add vxlan <vxlan id> -vlan <id>
```

3. Configure a peer `vtep` to carry all BUM (broadcast unknown multicast) traffic.

Note

The `vtep` address can be a multicast address.

```
1 add bridgetable -mac <mac_addr> -vxlan <positive_integer> -vtep <ip_addr> [-vni <positive_integer>] [-deviceVlan <positive_integer>]
```

4. Bind IP addresses to VXLAN.

```
1 bind vxlan <id> \[-srcIP <ip\_addr>\]\[-IPAddress <ip\_addr|ipv6\_addr|\*> \[<netmask>\]
```

5. Bind VLAN to an administrative partition.

```
1 bind partition <partition-id> -vxlan <id>
2
3 add vlan 3000
4
5 add vxlan 3000 -vlan 10
6
7 add bridgetable -mac 00:00:00:00:00:00 -vxlan 3000 -vtep
  10.102.58.8 -vni 11
8
9 bind vxlan 3000 - srcIP 10.102.101.15
10
11 bind partition p1 -vlan 10
```

SNMP support for admin partitions

May 2, 2023

A partitioned NetScaler appliance uses the SNMP infrastructure for partition rate limiting and for monitoring partition resource utilization details.

SNMP traps for admin partition rate limiting

On a partitioned NetScaler appliance, a PARTITION-RATE-LIMIT alarm can generate nine SNMP traps for notifying a partition resource (such as bandwidth, connection, or memory) has reached its limit or returned to normal.

The following nine SNMP traps are generated when:

- **partitionCONNThresholdReached.** The number of active connections for a partition exceeds its high threshold percentage.
- **partitionCONNThresholdNormal.** The number of active connections is less than or equal to the normal threshold percentage.
- **partitionBWThresholdReached.** The partition's bandwidth usage reaches its high threshold percentage.
- **partitionMEMThresholdReached.** The current memory usage of the partition exceeds its high threshold percentage.

- **partitionMEMThresholdNormal.** The current memory usage of the partition becomes less than or equal to the normal threshold percentage.
- **partitionMEMLimitExceeded.** The current memory usage of the partition exceeds its memory limit percentage.
- **partitionCONNLimitExceeded.** The number of active connections for a partition exceeds its configured limit and new connections are being dropped.
- **partitionCONNLimitNormal.** The number of active connections for a partition goes below its configured limit and the partition can now accept a new connection.
- **partitionBWLimitExceeded.** The current bandwidth usage for a partition has exceeded its configured limit.

The threshold values for the SNMP traps are non-configurable and are the following:

- High threshold = 80% (applicable for all partition rate limit traps)
- Low threshold = 60% (applicable for all partition rate limit traps)
- Memory limit = 95% (applicable only for partition memory traps)

Configuring PARTITION-RATE-LIMIT alarm

To configure the PARTITION-RATE-LIMIT alarm in a specific partition and enable generation of the SNMP trap messages.

1. Enable PARTITION-RATE-LIMIT Alarm
2. Configure PARTITION-RATE-LIMIT Alarm
3. Configure SNMP Trap Destination

To enable PARTITION-RATE-LIMIT alarm by using the CLI

At the command prompt, type the following commands:

```
1 enable snmp alarm PARTITION-RATE-LIMIT
2
3 show snmp alarm PARTITION-RATE-LIMIT
```

To configure PARTITION-RATE-LIMIT Alarm by using the CLI

At the command prompt, type the following command:

```
1 set snmp alarm PARTITION-RATE-LIMIT \[-state \{ ENABLED | DISABLED }\]
   \[-severity <severity>\] \[-logging \{ ENABLED | DISABLED }\]
```

To configure the SNMP trap destination by using the CLI

At the command prompt, type the following command:

```
1 add snmp trap <trapClass> <trapDestination> \[-version <version>] \[-td
  <positive\_integer>] \[-destPort <port>] \[-communityName <string>]
  \[-srcIP <ip\_addr|ipv6\_addr>] \[-severity <severity>] \[-
  allPartitions \{ ENABLED | DISABLED \}]
```

To configure the PARTITION-Rate-Limit alarm by using the GUI

Navigate to **System > SNMP > Alarms**, select **PARTITION-RATE-LIMIT** alarm, and configure the alarm parameters.

To configure the SNMP trap destination by using the GUI

Navigate to **System > SNMP > Trap**, specify the IP address of the destination device.

SNMP monitoring for partition resource utilization

Using SNMP, you can monitor a partition's resource (such as bandwidth, connection, and memory) utilization details at real time on a NetScaler appliance. It is done by sending an SNMP request (such as SNMP GET, SNMP GET BULK, SNMP GETNEXT, or SNMP WALK) from the SNMP Manager.

Note

To monitor partition resources, you must configure the SNMP community in the default partition. Wherein, the *partitionTable* is maintained in the default partition, and the SNMP communication is done through the NSIP address of the appliance.

Consider a scenario where a NetScaler administrator wants to know the bandwidth usage of partition P1 on the appliance. The SNMP Manager retrieves this information by sending an SNMP GET request on the corresponding OID (*partitionCurrentBandwidth*) to the NSIP address of the appliance. The SNMP agent on the default partition retrieves and sends the current bandwidth usage of P1 to the SNMP Manager through the NSIP address.

The following table lists the SNMP counters which are part of *partitionTable* and its description:

SNMP Parameter	SNMP OID	Description
partitionName	1.3.6.1.4.1.5951.4.1.1.88.1.1	Partition name

SNMP Parameter	SNMP OID	Description
partitionCurrentBandwidth	1.3.6.1.4.1.5951.4.1.1.88.1.2	Current bandwidth usage of the partition.
partitionCurrentConnections	1.3.6.1.4.1.5951.4.1.1.88.1.3	Current number of active connections of the partition.
partitionMemoryUsagePcnt	1.3.6.1.4.1.5951.4.1.1.88.1.4	Current Memory usage (in percentage) of the partition.

Audit log support for admin partitions

May 2, 2023

On a partitioned NetScaler appliance, for enhanced data security, you can configure audit logging in an administrative partition by using advanced policies. For example, you might want to view logs (states and status information) of a specific partition. It has multiple users accessing different sets of features based on their levels of authorization in the partition.

Points to remember

1. The audit logs generated from the partition is stored as a single log file (/var/log/ns.log).
2. Configure the audit log server's (syslog or ns log) subnet address as the source IP address in the partition for sending the audit-log messages.
3. The default partition uses the NSIP as the source IP address for the audit log messages by default.
4. You can display the audit-log message by using the "show audit messages" command.

For information on audit-log configuration, see [Configuring the NetScaler Appliance for Audit Logging](#).

Configuring audit logging in partitioned NetScaler appliance

Complete the following tasks to configure audit logging in an administrative partition.

1. Configure partition subnet IP address. An IPv4 SNIP address of an administrative partition.
2. Configure audit-log (syslog and ns log) action. An Audit action is a collection of information that specifies the messages to be logged and how to log the messages on the external log server.

3. Configure audit-log (syslog and ns log) policies. Audit-log policies define log messages for the source partition to the syslog or ns log server.
4. Bind audit-log policy to sysGlobal and nsGlobal entity. Bind an audit-log policy to a system global entity.
5. Review audit-log statistics. Display the audit-log statistics and evaluate the configuration.

Configure the following by using the CLI

1. Create a partition's subnet IP address

```
add ns ip <ip address> <subnet mask>
```

2. Create a syslog action

```
add audit syslogAction <name> <serverIP> [-serverPort <port>] -  
-logLevel <logLevel> [-dateFormat (MMDDYYYY | DDMMYYYY )] [-  
transport ( TCP | UDP )]
```

3. Create an ns log action

```
add audit nslogAction <name> <serverIP> [-serverPort <port>] -  
logLevel <logLevel> [-dateFormat (MMDDYYYY | DDMMYYYY )]
```

4. Create a syslog audit-log policies

```
add audit syslogpolicy syslog-pol1 true audit-action1
```

5. Create an ns log audit-log policies

```
add audit nslogpolicy nslog-pol1 true audit-action1
```

6. Bind an audit-log policy to syslogGlobal entity

```
bind audit syslogglobal -policyName <name> -priority <priority_integer>  
> -globalBindType SYSTEM_GLOBAL
```

7. Bind an audit-log policy to nslogGlobal entity

```
bind audit nslogglobal -policyName <name> -priority <priority_integer>  
> -globalBindType SYSTEM_GLOBAL
```

8. Display an audit-log statistics

```
stat audit -detail
```

Example

```
1 add ns ip 10.102.1.1 255.255.255.0
2 add audit syslogAction syslog_action1 10.102.1.2 -logLevel
  INFORMATIONAL - dateFormat MMDDYYYY - transport UDP
3 add audit syslogpolicy syslog-pol1 true syslog_action1
4 bind audit syslogglobal -policyName syslog-pol1 -priority 1 -
  globalBindType SYSTEM_GLOBAL
```

Storing logs

When the SYSLOG or NSLOG server collects log information from all partitions, it is stored as log messages in the ns.log file. The log messages contain the following information:

- Partition Name.
- The IP address.
- A time stamp.
- The message type
- The predefined log levels (Critical, Error, Notice, Warning, Informational, Debug, Alert, and Emergency)
- The message information.

Display configured PMAC addresses for shared VLAN configuration

May 2, 2023

To use a partition setup with shared VLAN configuration, you need a virtual MAC address called as partition MAC (PMAC) address. The partition uses the PMAC address for its communication on the shared VLAN. A unique PMAC address is configured for each partition and it is used across all shared VLANs bound to that partition. In the case of a non-SDX platform (VPX or MPX) platform, the PMAC address can be either user specified or internally generated by a NetScaler appliance. If the PMAC address is not specified for a partition, it is internally generated when the partition is bound to the first shared VLAN. While in the case of an SDX platform, the PMAC addresses always need to be configured from the SVM tool first and then assigned to a partition.

To display a list of configured PMACs, you can use the **Show ns PartitionMAC** command. The command enables you to verify the configured PMACs either through the NetScaler CLI or GUI. The command displays all the PMAC addresses and the corresponding partitions (if assigned). In the case of a non-SDX platform, the command displays all the PMAC addresses and their corresponding partitions because the PMAC address is assigned to a partition only on need basis (when a partition bound a shared VLAN). However in the case of an SDX platform, you might have some unassigned PMACs in the list.

For information on how to generate PMAC for the SDX platform, see [Generating Partition MAC Addresses](#) topic.

Display PMACs by using the NetScaler CLI

At the command prompt, type the following command:

```
show ns partitionMAC
```

```
1 Partition MAC Partition Name
2
3 1) f2:0c:64:da:f6:d7
4
5 2) b4:0c:43:da:f6:d2
6
7 3) a6:e7:b2:6c:48:e0
8
9 Done
```

Display PMAC Addresses by using the NetScaler GUI

1. Sign in to the NetScaler appliance and navigate to the **Configuration > System > Partition MAC**.
2. The Partition MAC page displays a list of PMACs and its partitions.

AppExpert

May 2, 2023

The following topics provide a conceptual reference and configuration instructions for the AppExpert and other features of the NetScaler appliance.

Note

For information about policy extensions, see [Policy Extensions](#).

- [Action Analytics](#): Collects run-time statistics on the basis of pre-defined criteria. When used with policies, the feature also provides you with the infrastructure for automatic, real-time traffic optimization.
- [AppExpert Applications and Templates](#): Simplify configuration steps for the Citrix® NetScaler® appliance by using applications, application templates, NetScaler Gateway applications, and entity templates.

- **AppQoE:** Application level Quality of Experience (AppQoE) integrates several existing policy-based security features of the NetScaler appliance into a single integrated feature that takes advantage of a new queuing mechanism, fair queuing.
- **Entity Template:** Describes how to use entity templates to set up and configure individual NetScaler entities, such as a policy or virtual server. An entity template provides a specification and a set of defaults for the object.
- **HTTP Callouts:** An HTTP request that the NetScaler appliance generates and sends to an external application when certain criteria are met during policy evaluation.
- **Pattern Sets:** Allow string matching during the evaluation of a Advanced policy.
- **Policies and Expressions:** Rules that determine the operations that the NetScaler appliance must perform.
- **Rate Limiting:** Defines the maximum load for a given network entity or virtual entity on the NetScaler appliance.
- **Responder:** Bases responses on who sends the request, where it is sent from, and other criteria with security and system management implications.
- **Rewrite:** Rewrites information in the requests or responses handled by the NetScaler appliance.
- **String Maps:** Perform pattern matching in all NetScaler features that use the default policy syntax.

Action analytics

May 2, 2023

The performance of your website or application depends on how well you optimize the delivery of the most frequently requested content. Techniques such as caching and compression help accelerate the delivery of services to clients, but you need to be able to identify the resources that are requested most frequently, and then cache or compress those resources. You can identify the most frequently used resources by aggregating real-time statistics about website or application traffic. Statistics such as how frequently a resource is accessed relative to other resources and how much bandwidth is consumed by those resources help you determine whether those resources need to be cached or compressed to improve server performance and network utilization. Statistics such as response times and the number of concurrent connections to the application help you determine whether you must enhance server-side resources.

If the website or application does not change frequently, you can use products that collect statistical data, and then manually analyze the statistics and optimize the delivery of content. However, if you

do not want to perform manual optimizations, or if your website or application is dynamic in nature, you need infrastructure that can not only collect statistical data but can also automatically optimize the delivery of resources on the basis of the statistics. On the NetScaler appliance, this functionality is provided by the action analytics feature. The feature operates on a single NetScaler appliance and collects run-time statistics on the basis of criteria that you define. When used with NetScaler policies, the feature also provides you with the infrastructure that you need for automatic, real-time traffic optimization.

When configuring the action analytics feature, you specify the request attributes for which you want to collect statistical data, for example, URLs and HTTP methods by configuring Advanced policy expressions in an entity called a selector. Then, you configure an identifier to configure settings such as the sampling interval and sample count. You also configure a policy that enables the appliance to evaluate traffic as specified by the selector-identifier pair. Finally, you bind the policy to a bind point to begin collecting statistics.

The appliance also provides you with a set of built-in selectors, identifiers, and responder policies that you can use to get started with the feature.

The appliance aggregates the following statistics:

- The number of requests.
- The bandwidth consumed by the requests.
- The response time.
- The number of concurrent connections.

You can configure the feature to perform run-time sorting of the records on an attribute of your choice. You can view the statistical data by using either the command-line interface or the Stream Sessions tool in the configuration utility.

Configure a selector

October 18, 2023

A selector is a filter for identifying requests. It consists of up to five individual Advanced policy expressions that identify request attributes such as the client IP address and the URL in the request. Each expression is a non-compound Advanced policy expression and is considered to be in an AND relationship with the other expressions. The following are some examples of selector expressions:

- `HTTP.REQ.URL`
- `CLIENT.IP.SRC`
- `HTTP.RES.BODY(1000).AFTER_STR("<string>").BEFORE_STR("<string>")`
- `CLIENT.IP.SRC.SUBNET(24)`

Selectors are used in rate limiting and action analytics configurations. A selector is optional in a rate limiting configuration but is required in an action analytics configuration.

The order in which you specify parameters is significant. For example, if you configure an IP address and a domain (in that order) in one selector, and then specify the domain and the IP address (in the reverse order) in another selector, the NetScaler considers these values to be unique. This can lead to the same transaction being counted twice. Also, if multiple policies invoke the same selector, the NetScaler, again, can count the same transaction more than once.

If you modify an expression in a selector, you may get an error if any policy that invokes it is bound to a new policy label or bind point. For example, suppose that you create a selector named `myLimitSelector1`, invoke it from `myLimitID1`, and invoke the identifier from a DNS policy named `dnsRateLimit1`. If you change the expression in `myLimitSelector1`, you might receive an error when binding `dnsRateLimit1` to a new bind point. The workaround is to modify these expressions before creating the policies that invoke them.

The NetScaler appliance provides [built-in selectors](#) for some of the most common use cases.

You can also configure a selector with expressions that identify the request attributes of your choice. For example, you might want to create a record for a request that arrives with a specific header. To evaluate the header, you can add `HTTP.REQ.HEADER("<header_name>")` to the selector that you intend to use.

To configure a selector by using the command line interface:

At the command prompt, type the following commands to configure a selector and verify the configuration:

- `add stream selector <name> <rule> ...`
- `show stream selector`

Example

```
1 > add stream selector myselector HTTP.REQ.URL CLIENT.IP.SRC
2 Done
3 > show stream selector myselector
4 Name: myselector
5 Expressions:
6     1) HTTP.REQ.URL
7     2) CLIENT.IP.SRC
8 Done
9 >
```

To modify or remove a selector by using the command line interface:

- To modify a selector, type the `set stream selector` command, the name of the selector, and the rule parameter with the expressions. Enter the existing expressions that you want to retain,

along with the new expressions that you want to add.

- To remove a selector, type the `rm stream selector` command and the name of the selector.

To configure a selector by using the GUI:

1. Navigate to **AppExpert > Action Analytics > Selectors**.
2. In the details pane, do one of the following:
 - To create a selector, click **Add**.
 - To modify a selector, select the selector, and then click **Edit**.
3. In the **Create Selector** or **Configure Selector** page, set the following parameters:
 - **Name**. To add a name for the selector, enter the name in the **Name** field. The Name must begin with an ASCII, alphanumeric, or underscore character. The name must contain only ASCII alphanumeric, underscore, hash, period, space, colon, at, equals, and hyphen characters.
 - **Expressions**. To add the expression to the selector configuration, click **Insert**. To remove an expression from the selector configuration, in the Expression box, select the expression, and then click **Delete**. Note: In the Expressions box, enter a valid parameter. For example, enter HTTP. Then, enter a period after this parameter. A drop-down menu appears. The contents of this menu provide the keywords that can follow the initial keyword that you entered. To select the next keyword in this expression prefix, double-click the selection in the drop-down menu. The **Expressions** text box displays both the first and second keywords for the expression prefix, for example, HTTP.REQ. Continue adding expression components until the complete expression is formed.
4. Click **Insert**.
5. Continue adding up to five non-compound expressions.
6. Click **Create** and then **Close**.

Configure a stream identifier

August 12, 2024

You configure a stream identifier to specify parameters for collecting statistical data from requests identified by a given selector. An identifier specifies the selector to be used, the statistics collection interval, the sample count, and the field on which the records are to be sorted.

The NetScaler appliance includes the following built-in stream identifiers for common use cases. All the built-in identifiers specify a sample count of 1 and an interval of 1 minute. Additionally, they sort the data on the

REQUESTS attribute. They differ only in being associated with different built-in selectors. Each built-in identifier is associated with a built-in selector of the same name (for example, the built-in identifier Top_URL is associated with the built-in selector Top_URL). Following are the built-in identifiers:

- Top_URL
- Top_CLIENTS
- Top_URL_CLIENTS_LBVSERVER
- Top_URL_CLIENTS_CSVSERVER
- Top_MSSQL_QUERY_DB_LBVSERVER
- Top_MYSQL_QUERY_DB_LBVSERVER

For more information about the built-in selectors, see [Configuring a Selector](#).

Note: The maximum length for storing string results of selectors (for example, HTTP.REQ.URL) is 60 characters. If the string (for example, URL) is 1000 characters long, of which 50 characters are enough to uniquely identify a string, use an expression to extract only the required 50 characters.

You cannot modify a built-in identifier's configuration. However, you can create an identifier with a configuration of your choice.

To configure a stream identifier by using the command line interface

At the command prompt, type the following commands to configure a stream identifier and verify the configuration:

- `add stream identifier <name> <selectorName> [-interval <positive_integer>] [-SampleCount <positive_integer>] [-sort <sort>] -Log SYSLOG -LogInterval <int in mins> -LogLimit <int>`
- `show stream identifier <name>`

Example

```
1 > add stream identifier myidentifier Top_URL -interval 10 -sampleCount
   100 -log SYSLOG -loginterval 10 - loglimit 10
2 Done
```

To configure a stream identifier by using the GUI

1. Navigate to **AppExpert > Action Analytics > Stream Identifiers**.
2. In the details pane, do one of the following:
 - To create a stream identifier, click **Add**.
 - To modify a stream identifier, select the identifier, and then click **Edit**.
3. In the Configure Stream Identifier page, set the following parameters:

- Name
- Selector
- Interval
- Sample Count
- Sort
- Log
- Log Interval
- Log Limit

4. Click **Create**, and then click **Close**.

View statistics

October 18, 2023

You can view the collected statistics in tabular format in the command-line interface and in graphical format in the configuration utility.

The following table describes the collected statistics:

Statistics	Column name in the output of the stat stream identifier <code><identifier name></code> command	Description
Number of requests	Req	The number of requests for which records were created in the last <code><interval></code> number of minutes.

Statistics	Column name in the output of the stat stream identifier <identifier name> command	Description
Bandwidth consumed	BandW	The total bandwidth consumed by the requests that were received in the last <interval> number of minutes. The total bandwidth of a request is the bandwidth consumed by the request and its response. The value is rounded off to the next higher or next lower integer value. So, it might differ slightly from the expected value. For example, if a request's total bandwidth consumption is 2.2 KB. One instance of the request might be shown as having consumed 2 KB. Two instances might be shown as having consumed 4 KB, but three instances might be shown as having consumed 7 KB.
Response time	RspTime	The average response time for all the requests received in the last <interval> number of minutes.
Concurrent connections	Conn	The total number of concurrent connections that are currently open.

To view the statistical data collected for a stream identifier by using the command line

At the command prompt, type:

```
stat stream identifier <name> [<pattern> ...] [-detail] [-fullValues]
[-ntimes <positive_integer>] [-logFile <input_filename>] [-sortBy <
sortBy> [<sortOrder>]
```

Examples

Example 1 sorts the output on the BandW column, in the descending order. Example 2 sorts the output in Example 1, on the **Req** column, and in the ascending order

Example 1

```

1 > stat stream identifier myidentifier -sortBy BandW Descending -
  fullValues
2 Stream Session statistics
3           Req           BandW
4 User1           508       125924
5 User2           5020      12692
6 User3           2025      4316
7
8           RspTime        Conn
9 User1           5694         0
10 User2           109         0
11 User3            3         0
12 Done

```

Example 2


```

1 > stat stream identifier myidentifier -sortBy Req Ascending -
  fullValues
2 Stream Session statistics
3           Req           BandW
4 User1           508       125924
5 User3           2025      4316
6 User2           5020      12692
7
8           RspTime        Conn
9 User1           5694         0
10 User3            3         0
11 User2           109         0
12 Done

```

To view the statistical data collected for a stream identifier by using the GUI

1. Navigate to **AppExpert > Action Analytics > Stream Identifiers**.
2. Select the stream identifier whose sessions you want to view, and then click Statistics For information about how you can group the output based on the values collected for various selector expressions.

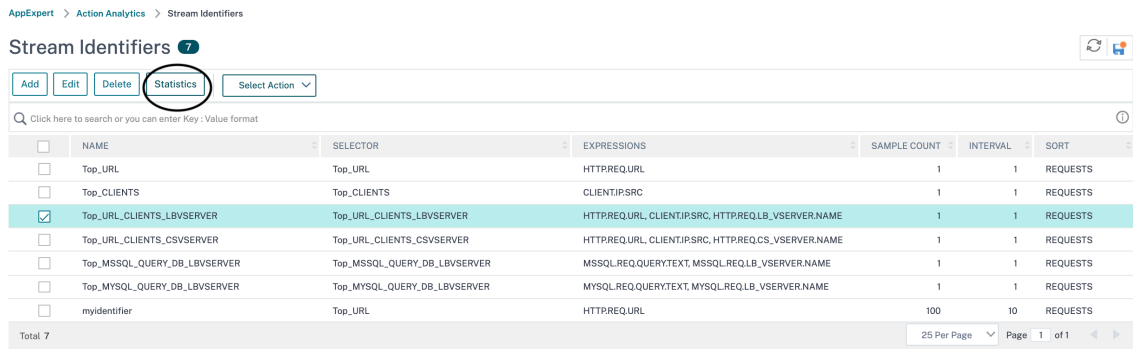

Group records on attribute values

December 22, 2023

Statistical information such as the number of times a particular URL has been accessed overall and per client, and the total number of GET and POST requests per client can provide valuable insights into whether any of your resources need to be expanded to meet the demand or be optimized for delivery. To obtain such statistics, you must use an appropriate set of selector expressions, and then use the pattern parameter in the stat stream identifier command. The grouping is based on the pattern that is specified in the command. Grouping can be performed concurrently on the values of multiple expressions.

In the command-line interface, you can group the output by using patterns of your choice. In the configuration utility, the pattern depends on the choices you make when drilling down through the values of various selector expressions. For example, consider a selector that has the expressions `HTTP.REQ.URL`, `CLIENT.IP.SRC`, and `HTTP.REQ.LB_VSERVER.NAME`, in that order. The statistics home page displays icons for each of these expressions. If you click the icon for `CLIENT.IP.SRC`, the output is based on the patterns `? <IP address> ?`. The output displays statistics for each client IP address. If you click an IP address, the output is based on the patterns `* <IP address> ?` and `? <IP address> *` where `<IP address>` is the IP address you selected. In the resulting output, if you click a URL, the pattern used is `<URL> <IP address> ?`.

To group the records on the values of selector expressions by using the command line interface

At the command prompt, enter the following command to group the records on the basis of a selector expression:

```
stat stream identifier <name> [<pattern> ...]
```

The following examples use a different pattern to demonstrate the effect of the pattern on the output of the stat stream identifier command. The selector expressions are HTTP.REQ.URL and HTTP.REQ.HEADER("UserHeader"), in that order. The requests contain a custom header whose name is UserHeader. Note that in the examples, a given statistical value changes as determined by the grouping, but the sum total of the values for a given field remains the same.

Example 1

In the following command, the pattern used is ? ?. The appliance groups the output on the values collected for both selector expressions. The row headers consist of the expression values separated by a question mark (?). The row with the header /mysite/mypage1.html?Ed displays statistics for requests made by user Ed for the URL /mysite/mypage1.html.

Note:

You must ensure to type the following command with “\?” instead of “?”. For example, If selector uses an expression - client.ip.src and client.tcp.srcport. The Stat command to group the output on the values collected for the selector is ‘stat stream identifier myidentifier \? \? -fullValues’ as given below.

```

1 > stat stream identifier myidentifier ? ? -fullValues
2 Stream Session statistics
3
4                               Req           BandW
5 /mysite/mypage2.html?Grace      1           2553
6 /mysite/mypage1.html?Grace      2             4
7 /mysite/mypage1.html?Ed         8            16
8 /mysite/mypage2.html?Joe        1           2554
9 /mysite/mypage1.html?Joe        5            10
10 /mysite/?Joe                    1             4
11
12                               RspTime        Conn
13 /mysite/mypage2.html?Grace      0             0
14 /mysite/mypage1.html?Grace      0             0
15 /mysite/mypage1.html?Ed         0             0
16 /mysite/mypage2.html?Joe        0             0
17 /mysite/mypage1.html?Joe        0             0
18 /mysite/?Joe                    6             0
19 Done

```

Example 2

In the following command, the pattern used is * ?. The appliance groups the output on the values accumulated for the second expression HTTP.REQ.HEADER("UserHeader"). The rows display statistics for all requests made by users Grace, Ed, and Joe.

Note:

Ensure to type the following command with “\?” instead of “?”.

```

1 > stat stream identifier myidentifier * ?
2 Stream Session statistics
3           Req      BandW  RspTime      Conn
4 Grace           3      2557         0         0
5 Ed              8        16         0         0
6 Joe            7      2568         6         0
7 Done

```

Example 3

In the following command, the pattern used is `? *`, which is the default pattern. The output is grouped on the values collected for the first selector expression. Each row displays statistics for one URL.

Note:

Ensure to type the following command with `"\"?"` instead of `"?"`.

```

1 > stat stream identifier myidentifier ? * -fullValues
2 Stream Session statistics
3           Req      BandW
4 /mysite/mypage2.html      2      5107
5 /mysite/mypage1.html     15        30
6 /mysite/                   1         4
7
8           RspTime      Conn
9 /mysite/mypage2.html      0         0
10 /mysite/mypage1.html     0         0
11 /mysite/                  6         0
12 Done

```

Example 4

In the following command, the pattern used is `* *`. The appliance displays one set of collective statistics for all the requests received, with no row title.

```

1 > stat stream identifier myidentifier * *
2 Stream Session statistics
3           Req      BandW  RspTime      Conn
4           18      5141         6         0
5 Done

```

Example 5

In the following command, the pattern is `/mysite/mypage1.html *`. The appliance displays one set of collective statistics for all the requests received for the URL `/mysite/mypage1.html`, with no row title.

```

1 > stat stream identifier myidentifier /mysite/mypage1.html *
2 Stream Session statistics
3           Req      BandW  RspTime      Conn
4           15        30         0         0

```

Clear a stream session

December 22, 2023

You can flush all the records that have been accumulated for a stream identifier.

To clear a stream session by using the command line interface

At the command prompt, enter the following commands to clear a stream session and verify the results:

- clear stream session
- stat stream identifier

Example

This example uses the stat stream identifier command first, so that a comparison can be made with the stat stream identifier command that is used for verifying the result of the clear stream session command.

```
1 >stat stream identifier myidentifier
2 Stream Session statistics
3
4           Req    BandW  RspTime    Conn
5 /aed....html    2      0        0        0
6 /              636    303     12        0
6 Done
7 >clear stream session myidentifier
8 Done
9 >stat stream identifier myidentifier
10 Done
```

To clear a stream session by using the GUI

1. Navigate to **AppExpert > Action Analytics > Stream Identifiers**.

2. Select the stream identifier whose sessions you want to clear, and then click **Clear Sessions**.

Stream Identifiers 🔄 🏠

<input type="checkbox"/>	Name	Selector	Expressions	Sample Count
<input type="checkbox"/>	Top_URL	Top_URL	HTTP.REQ.URL	1
<input type="checkbox"/>	Top_CLIENTS	Top_CLIENTS	CLIENT.IPSRC	1
<input checked="" type="checkbox"/>	Top_URL_CLIENTS_LBVSERVER	Top_URL_CLIENTS_LBVSERVER	HTTP.REQ.URL, CLIENT.IPSRC, HTTP.REQ.LB_VSERVER.NAME	1
<input type="checkbox"/>	Top_URL_CLIENTS_CSVSERVER	Top_URL_CLIENTS_CSVSERVER	HTTP.REQ.URL, CLIENT.IPSRC, HTTP.REQ.CS_VSERVER.NAME	1
<input type="checkbox"/>	Top_MSSQL_QUERY_DB_LBVSERVER	Top_MSSQL_QUERY_DB_LBVSERVER	MSSQL.REQ.QUERY.TEXT, MSSQL.REQ.LB_VSERVER.NAME	1
<input type="checkbox"/>	Top_MYSQL_QUERY_DB_LBVSERVER	Top_MYSQL_QUERY_DB_LBVSERVER	MYSQL.REQ.QUERY.TEXT, MYSQL.REQ.LB_VSERVER.NAME	1

Note: A context menu is shown over the selected row with options: Select Action, Stream Sessions, and Clear Sessions.

Configure policy for optimizing traffic

May 2, 2023

To put the selector-identifier pair in your action analytics configuration into effect, you must associate the pair with the point in the traffic flow at which you want to collect statistics. You can do so by configuring a Advanced policy and referencing the stream identifier from the policy rule. You can use compression policies, caching policies, rewrite policies, application firewall policies, responder policies, and any other policies whose action is based on a Boolean expression.

The action analytics feature introduces a set of Advanced policy expressions and functions for collecting and evaluating data. The expression `ANALYTICS.STREAM(<identifier_name>)` is used for referencing the identifier that you want to use. The expression `COLLECT_STATS` is used to collect statistical data. Functions such as `IS_TOP(<uint>)` and `IS_TOP_FREQUENTS(<uint>)` are used for making automatic, real-time traffic optimization decisions.

- **IS_TOP(<number>)**. Finds if a given object is in the top <number> of elements. For example, is the element among the top 10 elements. When multiple elements have the count, they are considered to be similar in nature. The sort function must be turned on to avoid an undef condition.
- **IS_TOP_FREQUENTS(<frequency>)**. Finds if a given object is in the top <frequency> of the elements that are in the top elements. For example, is the element among the top 50% of all the top elements maintained. Elements having the same values are considered similar in nature. The sort function must be turned on to avoid an undef condition.

It is your policy configuration that determines whether the NetScaler appliance must only collect data from traffic or also perform an action. If the appliance must only collect statistical data, you can configure a policy with the rule `ANALYTICS.STREAM(<identifier_name>).COLLECT_STATS` and the action NOOP. The NOOP policy must be the policy with the highest priority at the bind point. This policy is sufficient if you are only collecting statistics. Traffic optimization decisions, such as what to compress or cache, must be based on manual, periodic evaluation of the statistical data.

If, in addition to collecting statistics, the appliance must also perform an action on the traffic, you must configure the `gotoPriorityExpression` parameter of the NOOP policy such that another policy that has the desired rule and action is evaluated subsequently. This second policy must have a rule that begins with the `ANALYTICS.STREAM(<identifier_name>)` prefix and a function that evaluates the data.

Following is an example of two responder policies that are configured and bound globally. The policy `responder_stat_collection` enables the appliance to collect statistics based on the identifier, `myidentifier`. The policy `responder_notify` evaluates the data that is collected.

Example

```
1 > add responder action send_notification respondwith "You are in the
   Top 10 list for bandwidth consumption"
2 Done
3 > add responder policy responder_stat_collection' ANALYTICS.STREAM("
   myidentifier").COLLECT_STATS' NOOP
4 Done
5 > add responder policy responder_notify 'ANALYTICS.STREAM("myidentifier
   ").BANDWIDTH.IS_TOP(10)' send_notification
6 Done
7 > bind responder global responder_stat_collection 10 NEXT
8 Done
9 > bind responder global responder_notify 20 END
10 Done
```

How to limit bandwidth consumption per user or client device

October 1, 2024

Your web site, application, or file hosting service has finite network and server resources available to it to serve all its users. One of the most important resources is bandwidth. Substantial bandwidth consumption by only a subset of the user base can result in network congestion and reduced resource availability to other users. To prevent network congestion, you might have to limit a client's bandwidth consumption by using temporary service denial techniques such as responding to a client re-

quest with an HTML page if it has exceeded a preconfigured bandwidth value over a fixed time period leading up to the request.

In general, you can regulate bandwidth consumption either per client device or per user. This use case demonstrates the following:

- How to limit bandwidth consumption per client to 100 Mbps.
- How to regulate bandwidth consumption per user to 100 Mbps using a custom header that provides the user name.
- How to import an HTML page to send to a client that has exceeded the limit. Importing an HTML page simplifies the configuration of the responder action in these use cases and all responder actions that need the same response.

To limit bandwidth consumption per user or client device by using the command line interface

In the command-line interface, perform the following tasks to configure action analytics for limiting a client's or user's bandwidth consumption. Each step includes sample commands and their output.

1. **Set up your load balancing configuration.** Configure load balancing virtual server `mysitevip`, and then configure all the services that you need. Bind the services to the virtual server. The following example creates ten services and binds the services to `mysitevip`.

```
1 > add lb vserver mysitevip HTTP 192.0.2.17 80
2 Done
3 > add service service[1-10] 192.0.2.[240-249] HTTP 80
4 service "service1" added
5 service "service2" added
6 service "service3" added
7 .
8 .
9 .
10 service "service10" added
11 Done
12 > bind lb vserver vserver1 service[1-10]
13 service "service1" bound
14 service "service2" bound
15 service "service3" bound
16 .
17 .
18 .
19 service "service10" bound
20 Done
```

2. **Configure the stream selector.** Configure one of the following stream selectors:

- To limit bandwidth consumption per client, configure a stream selector that identifies the client IP address.

```
1 > add stream selector myselector CLIENT.IP.SRC
2 Done
```

- To limit bandwidth consumption per user on the basis of the value of a request header that provides the user name, configure a stream selector that identifies the header. In the following example, the name of the header is `UserHeader`.

```
1 > add stream selector myselector HTTP.REQ.HEADER( " UserHeader
   ")
2 Done
```

3. **Configure a stream identifier.** Configure a stream identifier that uses the stream selector. Set the interval parameter to 60 minutes.

```
1 > add stream identifier myidentifier myselector -interval 60 -
   sampleCount 1 -sort BANDWIDTH
2 Done
```

4. **Configure the responder action.** Import the HTML page that you want to send to users or clients that have exceeded the bandwidth consumption limit, and then use the page in responder action `crossed_limits`.

```
1 > import responder htmlpage http://.1.1.1/stdpages/wait.html
   crossed-limits.html
2 This operation may take some time, Please wait...
3
4 Done
5 > add responder action crossed_limits respondwithhtmlpage crossed-
   limits.html
6 Done
```

5. **Configure the responder policies.** Configure responder policy `myrespol1` with the rule `ANALYTICS.STREAM("myidentifier").COLLECT_STATS` and the action `NOOP`. Then, configure policy `myrespol2` for determining whether a client or user has crossed the 100 Mbps limit. The policy `myrespol2` is configured with the responder action `crossed_limits`, measured in Kilobits per second.

```
1 > add responder policy myrespol1 'ANALYTICS.STREAM("myidentifier")
   .COLLECT_STATS' NOOP
2 Done
3 > add responder policy myrespol2 'ANALYTICS.STREAM("myidentifier")
   .BANDWIDTH.GT(102400)' crossed_limits
4 Done
```

6. **Bind the responder policies to the load balancing virtual server.** The policy `myrespol1`, which only collects statistical data, must have the higher priority and a `GOTO` expression of `NEXT`.

```
1 > bind lb vserver mysitevip -policyName myrespol1 -priority 1 -
   gotoPriorityExpression NEXT
2 Done
3 > bind lb vserver mysitevip -policyName myrespol2 -priority 2 -
```



```
4 gotoPriorityExpression END
Done
```

7. **Test the configuration.** Test the configuration by sending test HTTP requests, from multiple clients or users, to the load balancing virtual server and using the stat stream identifier command to view the statistics that are collected for the specified identifier. The following output displays statistics for clients.

```
1 > stat stream identifier myidentifier -sortBy BandW -fullValues
2 Stream Session statistics
3
4           Req           BandW
5 192.0.2.30      5000      3761
6 192.0.2.31       29      2602
7 192.0.2.32       25       51
8
9           RspTime       Conn
10 192.0.2.30         2         0
11 192.0.2.31         0         0
12 192.0.2.32         0         0
13 Done
14 >
```

AppExpert applications

May 2, 2023

Warning

The application template functionality is deprecated. As an alternative, you can use StyleBooks. For more information, see [StyleBooks](#) and [Web application firewall StyleBook](#).

An AppExpert application is a collection of configuration that you set up on the NetScaler appliance. Managing AppExpert applications is simplified by a GUI (GUI) that allows you to specify application traffic subsets and a distinct set of security and optimization policies for processing each traffic subset. Also, it consolidates deployment steps in one view, so you can quickly configure target IP addresses for clients and specify host servers.

After the AppExpert application is set up, you must verify that the application is working correctly. If necessary, you can customize the configuration to suit your requirements.

Periodically, you can verify and monitor the configuration by viewing the counters for various application components, statistics, and the Application Visualizer. You can also configure authentication, authorization, and auditing (authentication, authorization, and auditing) policies for the application.

AppExpert application terminology

Following are the terms used in the AppExpert applications feature and the descriptions of the entities for which the terms are used:

Public endpoint. The IP address and port combination at which the NetScaler appliance receives client requests for the associated web application. A public endpoint can be configured to receive either HTTP or secure HTTP (HTTPS) traffic. All client requests for the web application must be sent to a public endpoint. An AppExpert application can be assigned multiple endpoints.

Application unit. An AppExpert application entity that processes a subset of web application traffic and load balances a set of services that host the associated content. The subset of traffic that an application unit must manage is defined by a rule. Each application unit also defines its own set of traffic optimization and security policies for the requests and responses that it manages. The NetScaler services associated with these policies are Compression, Caching, Rewrite, Responder, and application firewall.

By default, every AppExpert application with at least one application unit includes a default application unit, which cannot be deleted. The default application unit is not associated with a rule for identifying requests and is always placed last in the order of application units. It defines a set of policies for processing any request that does not match the rules that are configured for the other application units. Thereby ensuring all client requests are processed.

Service. The combination of the IP address of the server that hosts the web application instance and the port to which the application is mapped on the server, in the format `\<IP address\>:\<Port\>`. A web application that serves many requests is hosted on multiple servers. Each server is said to host an instance of the web application, and each such instance of the web application is represented by a service on the NetScaler appliance.

Application unit rule. Advanced policy expression that defines the characteristics of a traffic subset for an application unit. The following example rule is a Advanced policy expression that identifies a traffic subset that consists of four image types:

```
HTTP.REQ.URL.SUFFIX.EQ("bmp") || HTTP.REQ.URL.SUFFIX.EQ("gif") || HTTP.REQ.URL.SUFFIX.EQ("png") || HTTP.REQ.URL.SUFFIX.EQ("jpg")
```

For more information about Advanced policy expressions, see [Policies and Expressions](#).

Traffic Subset. A set of client requests that require a common set of traffic optimization and security policies. A traffic subset is managed by an application unit and is defined by a rule.

How AppExpert application works


December 21, 2023

When the endpoint receives a client request, the NetScaler appliance evaluates the request against the rule that is configured for the topmost application unit. If the request satisfies this rule, the request is processed by the policies that are configured for the application unit, and then forwarded to a service. The choice of service depends on which services are configured for the application, and on settings such as the load balancing algorithm and persistence method configured for the application unit.

If the request does not satisfy the rule, the request is evaluated against the rule for the next topmost application unit. In this order, the request is evaluated against each application unit rule until the request satisfies a rule. If the request does not satisfy any of the configured rules, it is processed by the default application unit, which is always the last application unit.

You can configure multiple public endpoints for an AppExpert application. In such a configuration, by default, each application unit processes requests received by all the public endpoints and load balances all the services that are configured for the application. However, you can specify that an application unit processes traffic from only a subset of the public endpoints and load balances only a subset of the services that are configured for the AppExpert application.

The following flow diagram illustrates the AppExpert Application flow sequence for using a built-in application template.

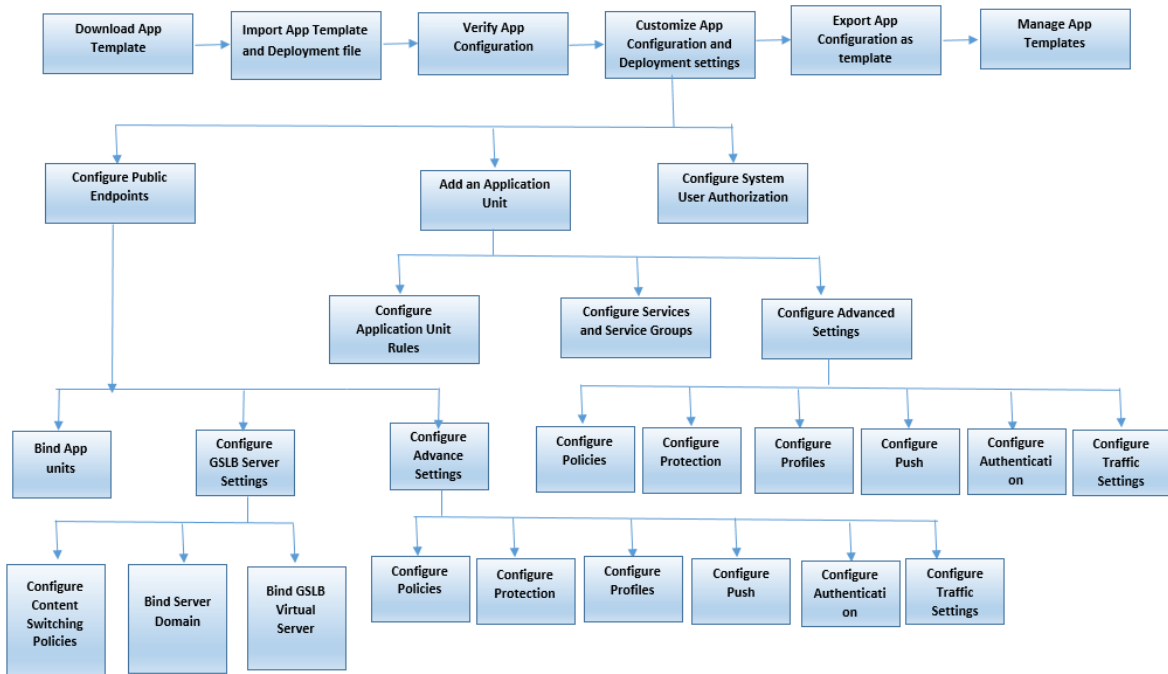

If you prefer to create a customized application without using a template, do the following:

1. Create a custom application.
2. Configure application and deployment settings.
3. Export the configuration to new template files (optional).
4. Import the template files to other NetScaler appliances that require a similar AppExpert application configuration

Customize AppExpert configuration

December 22, 2023

After you verify that the AppExpert application is working correctly, you can customize the configuration to suit your requirements.

After you verify that the AppExpert application configuration is working correctly, you can configure the application and the deployment settings to suit your requirements. When you import an application template and deployment file, the system automatically populates the target application with the available configuration settings (such as application units, application unit rules, policies, persistence settings, load balancing methods, profiles, and traffic settings). In this application, you can configure deployment settings such as public endpoints, services, and service groups for each traffic subset. If you want the AppExpert application to manage a traffic subset that is not included in the template, you can either add an application unit for a traffic subset or modify the existing application unit. After you customize the configuration, you can also specify the order of evaluation for each traffic subset that the application manages.

Configuring an AppExpert application consists of the following steps:

1. [Configuring Public Endpoints](#)
2. [Configuring Application Units](#)
3. [Specifying the Order of Evaluation](#)
4. [Viewing Application Configuration using Visualizer](#)

Also, you can configure the policies that the template provided. If the AppExpert application template does not include policies for a particular NetScaler feature, such as Rewrite or application firewall, you can configure your own policies.

Configure public endpoints

June 6, 2022

If you did not specify a public endpoint when importing an AppExpert application, you can specify public endpoints after you create the application. You can configure one public endpoint of type HTTP and one public endpoint of type HTTPS for your AppExpert application.

If endpoints are already configured for the application, you can dissociate endpoints from the AppExpert application and delete any endpoints that you no longer need. Note that when you dissociate a public endpoint from the AppExpert application, the endpoint is automatically unbound from the associated application unit, but it is not deleted from the system.

To configure public endpoints for an AppExpert application:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click the application for which you want to configure public endpoints, and then click Edit.
3. In the **Applications** page, go to **Public Endpoint** section and click the pencil icon.
4. In the **Public Endpoint** slider, set the following parameters.
 - a) Public endpoint type. Select the radio button to define the endpoint type.
 - b) Name. Name of the public endpoint.
 - c) IP address. IP address of the public endpoint.
 - d) Port. Port number of the public endpoint.
 - e) Protocol. Select a protocol type as HTTP or HTTPS.
5. Click **Continue**.
6. In the **Application Units** section, select an application unit from the list.
7. Click **Continue** to set the policy and server details.
8. Click **OK** and then Done.
9. Click Close.

For more information about the parameters in the **Configure Public Endpoint** dialog box, see [Content Switching](#).

Configure services and service groups for an application unit

June 6, 2022

When you configure a service or service group, you either modify an existing service or service group, or add new services to the AppExpert application. You add services or service groups if you did not specify them when you imported the application template. You also add services and service groups when you increase the number of servers that host instances of the application. You can configure a service and service group for an application unit only after you configure the service or service group for the AppExpert application.

To configure a service or service group for the AppExpert application:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click the application and then click **Edit**.
3. In the **Applications** page, select an application unit and then click **Continue**.
4. In the **Services and Service Groups** section, do the following:
 - a) In the Service Binding slider, set the following parameters.
 - i. Service. Select a load balancing service from the list or create a new service.
 - ii. Weight. Provide a weight value for the service.
 - b) Click **Bind** and then **Done**.
 - c) In the ServiceGroup Binding slider, set the following parameters:
 - i. Service Group Name. Select a load balancing service group or create a new service group.
 - ii. Click **Bind** and then **Done**.
 - d) Click **Done**.
5. Click **Continue** to set other configurations.

Create application units

June 6, 2022

You might need to add application units for traffic subsets that are either specific to your web application implementation or not defined in the template. When creating an application unit, you must configure a rule for the application unit.

To create an application unit for the AppExpert application:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click the application for which you want to add an application unit, and then click **Add**.
3. In the **Applications** page, go to **Application Units** section and click the **pencil** icon.

To configure policy expressions for an application unit:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click the application for which you want to add an application unit, and then click **Add**.
3. In the **Applications** page, go to **Application Units** section and click the **+** icon. to create a unit and add policy expressions.

4. To specify the format of the new expression, do one of the following:
 - a) To specify that you want to configure a policy expression in the Rule box, click **Classic Syntax**.
 - b) To specify that you want to configure an advanced expression in the Rule box, click **Advanced policy**.
 - c) In the Rule box, configure the expression.
5. Click **OK**.

Configure application unit rules

December 21, 2023

You might want to configure an application unit rule to include or exclude certain types of traffic. When you configure the rule, you can also define the syntax of the expression.

To configure an application unit rule:

1. In the navigation pane of the GUI, expand AppExpert, and then click **Applications**.
2. In the details pane, right-click the application unit for which you want to modify the rule, and then click **Open**.
3. In the Configure Application Unit dialog box, do the following:
 - a) To specify the format of the new expression, do one of the following:
 - To specify that you want to configure a Advanced policy expression in the Rule box, click **Classic Syntax**.
 - To specify that you want to configure an advanced expression in the Rule box, click **Advanced policy**.
 - b) In the Rule box, configure the expression.
4. Click **OK**.

Configure policies for application units

December 21, 2023

For an AppExpert application, you can configure policies for Compression, Caching, Rewrite, Responder, and Application Firewall. The templates that you download from the Citrix Community web site provide you with a set of policies that fulfill the most common application management requirements.

You might want to fine-tune or customize these policies. If the set of policies provided for a given application unit does not include policies for a particular feature, you can create and bind your own policies for that feature.

If you create an AppExpert application without using a template, you must configure all the policies that the web application needs.

The GUI uses various icons to indicate whether or not policies are configured for a feature. For an application unit, if a policy is configured for a given feature, an icon that represents the feature is displayed. For example, if a compression policy is configured for an application unit, a compression icon is displayed in the Compression column for the application unit. For features for which no policy is configured, an icon depicting a plus sign (+) is displayed.

Note: When configuring policies for application units, you might need to configure policies and expressions that are either in the classic or Advanced policy. Additionally, when you configure Advanced policy policies, you might need to specify parameters such as Goto expressions and invoke policy banks.

For information about configuring policies and expressions in both formats, see [Policies and Expressions](#).

Configuring compression policies

You can use either classic policies or advanced policies to configure compression, but you cannot bind compression policies of both types to the same application unit.

To configure a compression policy for an application unit:

1. Navigate to **AppExpert > Applications**.
 2. In the details pane, in the row for the application unit you want to configure, click the icon provided in the Compression column.
 3. In the Configure Compression Policies dialog box, do one or more of the following, depending on the configuration tasks you want to perform:
 - Click Switch to Advanced policy if you want to configure a Advanced policy compression policy. If you want to bind or configure classic compression policies, and if you are in the Advanced policy view, you can click Switch to Classic Syntax to return to the classic policy view and begin modifying bound classic policies or create and bind new classic compression policies.
- Important:** This setting also determines what policies are displayed when you want to insert a policy. For example, if you are in the Advanced policy view, when you click Insert Policy, the list that appears in the Policy Name column will include only Advanced policy policies. You cannot bind policies of both types to an application unit.

- If you want to configure classic policies, click either Request or Response, depending on whether you want the policy to be evaluated at request-time or at response-time.
You can configure both request-time and response-time classic compression policies for an application unit. After evaluating all of the request-time policies, if no match is found, the appliance evaluates response-time policies.
 - To modify a compression policy that is already bound to the application unit, click the name of the policy, and then click Modify Policy. Then, in the Configure Compression Policy dialog box, modify the policy, and then click OK.
For information about modifying a compression policy, see [Compression](#).
 - To unbind a policy, click the name of the policy, and then click Unbind Policy.
 - To modify the priority assigned to a policy, double-click the priority value, and then enter a new value.
 - To regenerate assigned priorities, click Regenerate Priorities.
 - To insert a new policy, click **Insert Policy** and, in the list that is displayed in the Policy Name column, click **New Policy**. Then, in the Create Compression Policy dialog box, configure the policy, and then click **Create**.
For information about modifying a compression policy, see [Compression](#).
 - If you are configuring a Advanced policy expression, do the following:
 - In the Goto Expression column, select a Goto expression.
 - In the Invoke column, specify the policy bank that you want to invoke if the current policy evaluates to TRUE.
4. Click **Apply Changes**, and then click **Close**.

Configuring Caching Policies

You can use only Advanced policy policies and expressions to configure Caching policies.

To configure Caching policies for an application unit:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, in the row for the application unit you want to configure, click the icon provided in the Caching column.
3. In the Configure Cache Policies dialog box, do one or more of the following, depending on the configuration tasks you want to perform:
 - Click either Request or Response, depending on whether you want the policy to be evaluated at request-time or at response-time.
You can configure both request-time and response-time Caching policies for an application unit. After evaluating all of the request-time policies, if no match is found, the appliance evaluates response-time policies.

- To modify a Caching policy that is already bound to the application unit, click the name of the policy, and then click **Modify Policy**. Then, in the **Configure Cache Policy** dialog box, modify the policy, and then click **OK**.
For information about modifying a Caching policy, see [Integrated Caching](#).
 - To unbind a policy, click the name of the policy, and then click **Unbind Policy**.
 - To modify the priority assigned to a policy, double-click the priority value, and then enter a new value.
 - To regenerate assigned priorities, click **Regenerate Priorities**.
 - To insert a new policy, click **Insert Policy** and, in the list that is displayed in the Policy Name column, click **New Policy**. Then, in the **Create Cache Policy** dialog box, configure the policy, and then click **Create**.
For information about modifying a Caching policy, see [Integrated Caching](#).
 - In the Goto Expression column, select a Goto expression.
 - In the Invoke column, specify the policy bank that you want to invoke if the current policy evaluates to TRUE.
4. Click **Apply Changes**, and then click **Close**.

Configuring rewrite policies

You can use only Advanced policy policies and expressions to configure Rewrite policies.

To configure Rewrite policies for an application unit:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, in the row for the application unit you want to configure, click the icon provided in the Rewrite column.
3. In the **Configure Rewrite Policies** dialog box, do one or more of the following, depending on the configuration tasks you want to perform:
 - Click either Request or Response, depending on whether you want the policy to be evaluated at request-time or at response-time.
You can configure both request-time and response-time Rewrite policies for an application unit. After evaluating all of the request-time policies, if no match is found, the appliance evaluates response-time policies.
 - To modify a Rewrite policy that is already bound to the application unit, click the name of the policy, and then click **Modify Policy**. Then, in the Configure Rewrite Policy dialog box, modify the policy, and then click **OK**.
For information about modifying a Rewrite policy, see [Rewrite](#).

- To unbind a policy, click the name of the policy, and then click **Unbind Policy**.
- To modify the priority assigned to a policy, double-click the priority value, and then enter a new value.
- To regenerate assigned priorities, click **Regenerate Priorities**.
- To insert a new policy, click **Insert Policy** and, in the list that is displayed in the **Policy Name** column, click **New Policy**. Then, in the **Create Rewrite Policy** dialog box, configure the policy, and then click **Create**.

For information about modifying a Rewrite policy, see [Rewrite](#).

- In the Goto Expression column, select a Goto expression.
- In the Invoke column, specify the policy bank that you want to invoke if the current policy evaluates to TRUE.

4. Click **Apply Changes**, and then click **Close**.

Configuring responder policies

You can use only Advanced policy policies and expressions to configure Responder policies.

To configure Responder policies for an application unit:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, in the row for the application unit you want to configure, click the icon provided in the Responder column.
3. In the **Configure Responder Policies** dialog box, do one or more of the following, depending on the configuration tasks you want to perform:

- To modify a Filter policy that is already bound to the application unit, click the name of the policy, and then click **Modify Policy**. Then, in the Configure Responder Policy dialog box, modify the policy, and then click **OK**.

For information about modifying a Responder policy, see [Responder](#).

- To unbind a policy, click the name of the policy, and then click **Unbind Policy**.
- To modify the priority assigned to a policy, double-click the priority value, and then enter a new value.
- To regenerate assigned priorities, click **Regenerate Priorities**.
- To insert a new policy, click **Insert Policy** and, in the list that is displayed in the Policy Name column, click **New Policy**. Then, in the **Create Responder Policy** dialog box, configure the policy, and then click **Create**.

For information about modifying a Responder policy, see [Responder](#).

- In the Goto Expression column, select a Goto expression.

- In the Invoke column, specify the policy bank that you want to invoke if the current policy evaluates to TRUE.
4. Click **Apply Changes**, and then click **Close**.

Configuring Application Firewall Policies

You can configure both classic and Advanced policy policies and expressions for Application Firewall. However, if a policy of one type is already bound globally or to a virtual server that is configured on the appliance, you cannot bind a policy of the other type to an application unit. For example, if a Advanced policy is already bound either globally or to a virtual server, you cannot bind a classic policy to an application unit.

To configure Application Firewall policies for an application unit:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, in the row for the application unit you want to configure, click the icon provided in the **Application Firewall** column.
3. In the **Configure Application Firewall Policies** dialog box, do one or more of the following, depending on the configuration tasks you want to perform:
 - Click either Classic Expression or Advanced Expression depending on the type of expression you want to configure for the Application Firewall policy.
Important: This setting also determines what policies are displayed when you want to insert a policy. For example, if you select Advanced Expression, when you click **Insert Policy**, the list that appears in the **Policy Name** column will include only Advanced policy policies. You cannot bind policies of both types to an application unit. This option is not available if a policy of either type is already bound either globally or to a virtual server.
 - To modify an application firewall policy that is already bound to the application unit, click the name of the policy, and then click Modify Policy. Then, in the Configure Application Firewall Policy dialog box, modify the policy, and then click OK.
For information about modifying a application firewall policy, see [Policies](#).
 - To unbind a policy, click the name of the policy, and then click Unbind Policy.
 - To modify the priority assigned to a policy, double-click the priority value, and then enter a new value.
 - To regenerate assigned priorities, click Regenerate Priorities.
 - To insert a new policy, click **Insert Policy** and, in the list that is displayed in the **Policy Name** column, click New Policy. Then, in the **Create Application Firewall Policy** dialog box, configure the policy, and then click **Create**.
For information about modifying a application firewall policy, see [Policies](#).

4. Click **Apply Changes**, and then click **Close**.

Configure application units

December 21, 2023

To configure an application unit by using the GUI:

1. Navigate to **AppExpert > Applications > Application Unit** section and then click the plus icon to add a new application unit for a traffic subset.
2. In the **Application Unit** slider, set the following parameters:
 - Name
 - Expression

You can insert an expression either by adding the expression components manually or by using the Expression Editor link. To manually add an expression, enter a selector component and then type a period (.) to display a list from which you can select the next component. For example, type HTTP and then type a period. A drop-down menu appears. The contents of this menu provide the keywords that can follow the initial keyword that you entered. Select a component from the drop-down menu. The Expression* text box now displays the components that you have added to the expression (for example, HTTP.REQ). Continue adding components until the complete expression is formed.

If you prefer assistance to form the expression, you can use the Expression Editor link. On the Expression Editor page, you can form an expression by selecting components from the drop-down boxes. Select the components and click Done to insert the expression on the Application Unit page.

3. Click **Continue** to bind services and service groups.
4. Click the **Service** section to select or add a virtual service and bind it to the application unit.
5. Click **Continue** and click the **Service Group** section to select or add a virtual service group and bind it to the application unit.
6. Click **Bind** and **Continue** to configure Advanced Settings (such as Policies, Method, Persistence, Protection, Profiles, Push, Authentication, and Traffic Settings) for the application unit.
7. Click the **plus** icon in each section to set the configuration parameters.
8. Click **OK** and then **Done**.

To edit an application unit for an application by using the GUI:

Navigate to **AppExpert > Applications**, select an application and click **Edit**. In the **Application Unit** section, select an entity, click the edit icon and modify the application unit settings.

Note: You cannot modify the name and rule expression for an existing application unit.

NetScaler's video tutorials enable you to understand NetScaler features in an easy and simple way. Watch https://www.youtube.com/watch?v=bJ5_i8fV2hc video to learn how configure an application unit.

Configure public endpoints for an application

December 21, 2023

To configure public endpoints for an application by using the GUI:

1. Navigate to **AppExpert > Applications**, select an application entity, and then click **Edit**.
2. In the **Public Endpoint** section, click **+** to configure a new public endpoint.
3. In the **Public Endpoint** slider, do one of the following:
 - a) Click **New** to create a new endpoint.
 - b) Click **Existing Public Endpoint** to select an endpoint from the drop-down list.
4. Set the following endpoint parameters:
 - a) Name
 - b) IP address
 - c) Protocol
 - d) Port
5. Click **Continue** to configure additional settings such as application units, GSLB server bindings, policies, profiles, push, traffic settings, and authentication.
6. Click **OK** and then **Done**.
7. Click **Continue** and then **Done**.

To edit a public endpoint for an application by using the GUI:

Navigate to **AppExpert > Applications**, select an application, and click **Edit**. In the **Public Endpoint** section, select an endpoint, click the pen icon, and modify the endpoint settings.

To delete a public endpoint for an application by using the GUI:

Navigate to **AppExpert > Applications > Public Endpoint**, click the pen icon to view the delete icon next to the entity.

NetScaler's video tutorials enable you to understand NetScaler features in an easy and simply way. Watch <https://www.youtube.com/watch?v=z4v-edQiVpw> video to learn how to configure a public endpoint.

Specify the order of evaluation of application units

December 21, 2023

Application unit rules are evaluated in the order in which they are placed in the GUI. The rule that is configured for the topmost application unit is always configured first, followed by the rule that is configured for the second topmost application unit, and so on. The default application unit is always evaluated last.

When a request matches the rule that is configured for an application unit, the request is processed by the application unit, and no further matching is performed. Therefore, the order of evaluation of application units becomes an important factor if the traffic subsets for two or more application units overlap. If the traffic subsets for two or more application units overlap, you must specify the order in which an incoming request is matched against the application unit rules.

To specify the order of evaluation of application units:

1. Navigate to **AppExpert > Applications**, select an application and click **Edit**. In the **Application Unit** section, click the **Pencil** icon and then hover the cursor over the check box to the left of the name of the application unit. Click the icon that appears next to the check box and hold down the mouse to drag the application up or down to a new location in the priority list.

Configure persistency groups for application units

December 21, 2023

You can configure a persistency group for the application units in an AppExpert application. In the context of an AppExpert application, a persistency group is a group of application units that you can treat as a single entity for the purpose of applying common persistence settings. When the application is exported to an application template file, the persistency group settings are included, and they are automatically applied to the application units when you import the AppExpert application.

To configure a persistency group for an application by using the GUI:

1. Navigate to **AppExpert > Applications**.

2. In the **Applications View** dialog box, click the name of the application for whose application units you want to configure a persistency group, and then click Configure **Persistency Groups**.
3. In the **Configure Persistency Groups** dialog box, do one of the following:
 - To add a persistency group, click **Add**.
 - To modify a persistency group, click **Open**.
4. In the **Create Persistency Group** or **Configure Persistency Group** dialog box, set the following parameters:
 - Group Name—Name of the persistency group. For the NetScaler appliance to recognize the persistency group as part of the application's configuration, the name of the AppExpert application must be included in the name of the persistency group, as a prefix. Therefore, by default, the appliance displays the prefix in the Group Name box, and you cannot remove that prefix. Enter a name of your choice after the prefix.
 - Persistence—Type of persistence for the virtual server. If you select SOURCEIP, in the IPv4 Netmask box, enter a network mask that specifies the number of bits that the appliance must consider when creating persistence sessions. If you select COOKIEINSERT, in the Cookie Domain and Cookie Name boxes, specify a domain attribute to send in the Set-Cookie directive, and a name for the cookie, respectively.
 - Timeout—Time period for which a persistence session is in effect.
 - Backup Persistence—Type of backup persistence for the group.
 - Backup Timeout—Time period, in minutes, for which backup persistence is in effect.
 - Application Units—To add an application unit to the persistency group, in the Available Application Units box, click the application unit, and then click Add. To remove an application unit from the persistency group, in the Configured Application Units box, click the application unit, and then click **Remove**.
5. Click **OK**.

View AppExpert applications and configure entities by using the application visualizer

December 21, 2023

The Visualizer feature shows you a graphical representation of an application's configuration. It includes the name of the public endpoint, application units assigned to the public endpoint, and the number of policies and services bound to the application. You can use the Visualizer to obtain a visual overview of an AppExpert application's configuration and configure some of the displayed entities.

By default, the Visualizer displays application units, services, and monitors for the selected application.

To view an AppExpert application by using the Application Visualizer:

1. Navigate to **AppExpert > Applications**, select an application entity, and click **Visualizer**.

Configure user authentication, authorization, and auditing

December 21, 2023

You can configure authorization for users and groups to enable them to access an AppExpert application. If the AAA user or group for which you want to configure permissions has not already been created, you can create it from AppExpert and then configure permissions for application access.

To configure AAA users and AAA user groups for an application by using the configuring utility

1. Navigate to **AppExpert > Applications**, select an application entity, and then click **Edit**.
2. In the **Advanced Settings** section, click **Authorization**, and configure authorized users and user groups.
3. Click the **AAA** user section to bind authorized users to the application.
4. In the **AAA User** slider, set the parameters .
5. Click **Continue**, and then click **Authorization Policies** in the **Advanced Settings** section.
6. In the **Authorization Policy** slider, bind an authorization policy to the application.
7. Click **Continue**, and then click the **Authorization Group** section in the **Advanced Settings** section.
8. In the **AAA Group Binding** slider, bind an authorization user group to the application.
9. Click **Continue**, and then click **Policies** in the **Advanced Settings** section.
10. In the **Policies** slider, bind an **Audit Syslog** or **Audit NSlog** policy to the application.
11. Click **Continue** and then **Done**.

To edit AAA users and AAA user groups for an application by using the GUI:

Navigate to **AppExpert > Applications > Advanced Settings** and click **Authorization**. Then click the edit icon and specify values for user or user-group authorization settings.

To delete AAA users and AAA user groups by using the GUI:

Navigate to **AppExpert > Applications**, select an application and click **Edit**. In the **Applications** page, click **Advanced Settings** and click **Authorization**. Click the delete icon next to the entity.

Monitor a NetScaler application

December 21, 2023

After you customize the AppExpert application, you can view application statistics to make sure that the application and all its entities are working correctly. You can also use the Application Visualizer to monitor statistics associated with certain entities such as policies and virtual servers.

You can also view the hit counters for various entities at regular intervals to make sure that counters are being updated.

View application statistics

In the **Applications** node, you can select an application and view the Statistics page for the application. On the Statistics page, you can monitor the health and states of public endpoints and application units, and view the following statistical information:

- Requests and responses per second for each of the public endpoints and application units.
- Bytes per second, at each endpoint, for incoming and outgoing traffic.
- Application unit hit counters and the number of client and server connections for each application unit.
- Statistics for the services that are bound to the application units.

On the Statistics page, you can also view CPU usage, memory usage, and system logs.

To view statistics for an application:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, click the application for which you want to view statistics, and then click **Statistics**.

Monitoring an Application by Using the Application Visualizer

You can use the Application Visualizer to monitor the number of requests received per second at a given point in time by the vservers and the number of hits per second at a given point in time for Rewrite, Responder, and Cache policies.

To view statistical information for vservers, Rewrite policies, Responder policies, and Cache policies in the Visualizer:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, select the application for which you want to view statistical information, and then click **Visualizer**.

3. In the **Application Visualizer** window, do the following:

- To view the statistics, click **Show Stats**.

The statistical information is displayed on the respective nodes in the Visualizer. This information is not updated in real time and has to be refreshed manually.

- To refresh the statistical information, click **Refresh Stats**.

Viewing Hits

The hit counters that are provided for various AppExpert application entities enable you to monitor the functioning of public endpoints and application units. For an application, the Hits dialog box displays the total number of requests received by each configured public endpoint. For an application unit, the Hits dialog box displays the number of requests that the application unit processed from each of the public endpoints and the total hit count. For instructions on viewing hit counters, see [Verifying and Testing the Configuration](#).

Delete an AppExpert application

December 22, 2023

If you no longer need an application and its application units, you can delete it. When you delete an AppExpert application, backend services are not deleted, and any public endpoints that the application used become available for use by other applications.

When deleting an application, you are also prompted to specify whether you want to delete any bound policies and actions that are not used elsewhere.

To delete an application unit for an application by using the GUI:

Navigate to **AppExpert > Applications**, select an application and click **Edit**. In the **Application Unit** section, click the delete icon next to the entity

Configure application authentication, authorization, and auditing

June 6, 2022

You can configure Authentication, Authorization, and Auditing (AAA) for the applications that you configure on the appliance. An authentication policy that is configured for an application defines the type

of authentication to apply when a user or group attempts to access the application. If external authentication is used, the policy also specifies the external authentication server. Authorization policies configured for an application specify whether a particular user or group can access the application. Auditing policies define the audit log type, the level at which logging is performed, and other audit server settings. Authentication and auditing policies use the classic policy format.

Authentication policies, authorization policies, and auditing policies can be configured in any order. However, before you configure AAA for an application, you must configure a public endpoint for the application.

Configuring authentication for an application involves specifying an authentication FQDN, an authentication virtual server, a server certificate, and authentication and session policies. Authentication policies are automatically bound to the authentication virtual server specified for the application.

To configure authentication for an AppExpert application:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, do one of the following:
 - a) Click Add to add an authentication for a new application.
 - b) Click Edit to modify an existing application.
3. In the **Applications** page, select an Application Unit.
4. In the **Application Unit** slider page, click Authentication from the **Advanced Settings** section.
5. In the **Authentication** section, select the authentication type as follows:
 - a) Form based authentication
 - b) 401 based authentication
 - c) None
6. Click **OK** and then click **Done**.

Configure application authorization

You can configure authorization for users and groups to enable them to access an AppExpert application. If the AAA user or group for which you want to configure permissions has not already been created, you can create it from AppExpert and then configure permissions for application access.

To configure permissions for a AAA user or group to access an AppExpert application:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, click the AppExpert application for which you want to configure a user or group access.
3. In the **Applications** page, and then click Authorization. from the **Advanced Settings** section.
4. Do one of the following:

- If the AAA user or group for which you want to configure permissions are already in the Groups/Users tree, drag the user or group from the Groups/Users tree to the Users or Groups node in the application tree. Then, right-click the user or group and click Allow.
- If the AAA user or group for which you want to configure permissions is not configured on the appliance, in the application tree, right-click Users or Groups, and then click Add. In the Create AAA Group or Create AAA User dialog box, fill in the values, click Create, and then click Close.

The user or group is created with the permission set to Allow. To change the permission setting, right-click the group or user, and then click the permission setting.

5. Click **Done** and then click **Close**.

Configure application auditing

When you configure auditing policies for an application, you must specify the server to which the log messages must be directed, the format of the messages logged, and the log level. Optionally, you can configure other settings, such as the log facility and date format. Auditing policies are automatically bound to all the AppExpert application's public endpoints.

To configure auditing policies for an application:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, click the application for which you want to configure auditing policies.
3. In the Application Unit slider page, click + icon in the **Policies** section to configure the auditing policies.
4. In the **Policies** slider page, select policy type as Syslog auditing or Nslog auditing and click **Continue**.
5. In the Policy binding section, set the following parameters.
 - a) Select a policy for binding. If you do not have a policy for binding, click + to create a new policy.
 - b) To create a new auditing policy, under Policy Name, click **New Policy**, and then, in the **Policy** page do the following:
 - i. In the Name box, type a name for the policy.
 - ii. The Name box already contains the string that is required at the beginning of the server name. You cannot modify the string.
 - iii. From the Auditing Type list, select the auditing type (either SYSLOG or NSLOG).
 - iv. If the audit server you want to specify is already listed in the Server list, select the server from the list, and then, if you want to modify the server settings, click Modify. In the Configure Auditing Server dialog box, modify the settings as appropriate, and then

click **OK**. For more information about the settings in the Configure Auditing Server dialog box, see [Auditing Authenticated Sessions](#).

- v. If you want to configure a new audit server, click **New**, and then, in the Create Auditing Server dialog box, type a name for the server, specify the server IP address, port number, and other settings as appropriate. When finished, click **OK**.
 - vi. Click **Create**.
- c) To change the priorities for the new auditing policies you created, under **Priority**, for each policy for which you want to change the priority, double-click the priority value and type new priority value.
 - d) To regenerate priorities, click **Regenerate Priorities**.
 - e) To unbind a policy, click the policy, and then click **Unbind Policy**.
 - f) To modify a policy, click the policy, and then click **Modify Policy**.
6. Click **Apply Changes**, and then click **Close**.

Disabling AAA for an Application

After you configure AAA for an application, you can disable the AAA configuration for that application. When you disable AAA for an application, the configuration is not lost. You can enable AAA for the application when you want to reapply the configuration.

To enable or disable AAA for an application:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, click the application for which you want to enable or disable AAA, and then do one of the following:
3. To disable AAA for the application, click **Turn Off AAA**.
4. To enable AAA for the application, click **Turn On AAA**.

Set up a custom NetScaler application

December 21, 2023

If an AppExpert application template is not available for the Web application that you want to manage through the NetScaler appliance, or if available AppExpert application templates do not suit your requirements, you can create an AppExpert application without a template.

To create an AppExpert application without a template, you must first create an application and application units. Then, you configure public endpoints, services, and service groups. Finally, you configure the policies that determine how application traffic is evaluated and processed.

After you create the application and application units and configure policies, you must verify the configuration and test it to make sure that it is working correctly, just as you would when you configure an application by using a prebuilt AppExpert application template. Then, you must monitor the application to make sure that the application and its entities are working correctly.

Creating an application

When you create an AppExpert application, the appliance creates a container to which you can add application units. The default application unit is not created until you create the first application unit.

To create an AppExpert application by using the GUI:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click **Applications**, and then click **Add**.
3. In the **Create Application** dialog box, in Name, enter a name for the application, and then click **OK**.

Creating application units

For each subset of traffic associated with your web application, you must create an application unit.

To create an application unit for the AppExpert application by using the GUI:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click the application for which you want to add an application unit, and then click **Add**.
3. Click **Create**.

Configuring public endpoints for an AppExpert application

After you have created all the application units that you require, you must configure one or more public endpoints to enable clients to access the web application through the NetScaler appliance.

To configure public endpoints for an AppExpert application by using the GUI:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click the application for which you want to configure public endpoints, and then click **Configure Public Endpoints**.
3. In the Choose Public Endpoints dialog box for the application, do one of the following:
 - If the endpoints you want are listed in the dialog box, click the corresponding check boxes.
 - If you want to specify all the public endpoints, click **Activate All**.

- If you want to dissociate endpoints from the AppExpert application, clear the corresponding check boxes.
- If you want to create a new public endpoint, click **Add**. Then, in the Create public endpoint dialog box, configure endpoint settings, and then click **OK**.

In the **Create public endpoint** dialog box, you can specify only the name, IP address, port, and protocol for the endpoint. You can specify additional endpoint settings after you create the public endpoint. To specify additional endpoint settings, after you create the endpoint, in the Choose Public Endpoints dialog box, click the endpoint, and then click **Open**. Then, in the **Configure Public Endpoint** dialog box, provide additional settings, and then click **OK**.

For more information about the parameters in the **Create public endpoint** and **Configure Public Endpoint** dialog boxes, see [Content Switching](#).

- If you want to modify a public endpoint, click the endpoint, and then click **Open**. Then, in the **Configure Public Endpoint** dialog box, modify settings for the endpoint, and then click **OK**.

For more information about the parameters in the Configure Public Endpoint dialog box, see [Content Switching](#).

4. Click **Close**.

Configuring public endpoints for an application unit

For an application unit, you specify public endpoints in the same way as you would specify public endpoints for an application that is created from an AppExpert application template. For more information about specifying a subset of the endpoints for an application unit, see [Configuring Endpoints for an Application Unit](#).

To configure endpoints for an application unit by using the GUI:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click the application unit for which you want to specify public endpoints, and then click **Configure Public Endpoints**.
3. In the **Choose Public Endpoints** dialog box for the application unit, do one of the following:
 - If you are specifying endpoints for the application unit for the first time, clear the check boxes that correspond to the endpoints that you do not want to be bound to the application unit.
 - If you want to specify endpoints that are listed in the dialog box but not currently bound to the application unit, click the corresponding check boxes.
4. Click **OK**.

Configuring Services and Service Groups for an AppExpert Application

Services and service groups are available for application units only after you configure the services and service groups for the AppExpert application. Therefore, you must configure services and service groups for the AppExpert application before you configure the services for the application units. All the services and service groups that you configure for an AppExpert application must use the same protocol (either HTTP or HTTPS). The procedure for configuring services and service groups for an AppExpert application that is not created from a template is the same as that for an application created from a template.

To configure a service or service group for the AppExpert application by using the GUI:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click the application for which you want to configure services or service groups, and then click **Configure Backend Services**.
3. In the Configure Backend Services dialog box, do one of the following:
 - To configure services, click the **Services** tab.
 - To configure service groups, click the **Service Groups** tab.
4. On the **Service** or **Service Groups** tab, do one of the following:
 - If the services or service groups that you want are listed on the tab, click the corresponding check boxes.
 - If you want to specify all the services or service groups, click **Activate All**.
 - If you want to create a new service or service group, click **Add**. Then, in the **Create Service** dialog box or **Create Service Group** dialog box, configure settings for the service or service group, respectively, and then click **Create**.
 - If you want to modify a service, click the service, and then click **Open**. Then, in the **Configure Service** dialog box or **Create Service Group** dialog box, configure settings for the service or service group, respectively, and then click **OK**.

For information about the settings in the Create Service, Configure Service, and **Create Service Group** dialog boxes, see [Load Balancing](#).

Configuring services and service groups for an application unit

After you configure services and service groups, you must configure services and service groups for each application unit. However, this step is not necessary if each backend service hosts all the content associated with the web application. You configure services and service groups for an application unit if the content associated with the application unit is hosted on only a subset of the backend servers.

To configure services or service groups for an application unit by using the GUI:

1. Navigate to **AppExpert > Applications**.
2. In the details pane, right-click the application unit for which you want to configure a service or service group, and then click **Configure Backend Services**.
3. In the **Configure Backend Services** dialog box, do one of the following:
 - To configure services, click the **Services** tab.
 - To configure service groups, click the **Service Groups** tab.
4. In the **Services** or **Service Groups** tab, do one of the following:
 - Clear the check boxes that correspond to the services or service groups that you do not want configured for the application unit. Make sure that the check boxes that correspond to the services or service groups that you want configured for the application unit are selected. Then, in the Weight column, specify the weight that you want to assign to each configured service.
 - To specify all services or service groups, click **Activate All**.
5. On the **Method** and **Persistence** and **Advanced** tabs, specify the desired parameters.
6. Click **OK**.

Configuring policies

The procedures for configuring policies for an AppExpert application that is created without using a template are the same as those for an AppExpert application that was created from a template. For more information, see [Configuring Policies for Application Units](#).

NetScaler Gateway applications

May 2, 2023

When you configure an AppExpert application to manage a web application through the Citrix® NetScaler® appliance, you also create a set of application units and configure a set of traffic optimization and security policies for each unit. The policies that you configure for each application unit (policies for features such as Compression, Caching, and Rewrite) evaluate traffic that is meant only for that unit. In addition to these policies, you might want to configure Access Gateway policies for the application as a whole to optimize the application traffic when accessed through the Access Gateway. The Access Gateway Applications feature enables you to configure Access Gateway policies (Authorization, Traffic, Clientless Access, and TCP Compression) for an AppExpert application. After you configure NetScaler Gateway policies for AppExpert applications, you can include the policy configuration in the AppExpert application templates that you create.

You can also configure NetScaler Gateway policies for intranet subnets, file shares, and other network resources. Finally, you can create bookmarks for AppExpert applications and certain resources if you want users to be able to access them from the NetScaler Gateway home page.

You can configure the entities in the NetScaler Gateway Applications feature only by using the GUI.

How an NetScaler Gateway application works

When you create an AppExpert application in the Applications node in the GUI, a corresponding Access Gateway application is automatically created in the Access Gateway Applications node. Additionally, a rule that uses the AppExpert application's configured public endpoint is automatically created for the Access Gateway application entry. If multiple endpoints are configured for the AppExpert application, the rule includes all the configured public endpoints. The NetScaler appliance uses this rule to apply any configured Access Gateway policies to the traffic received at the AppExpert application's public endpoint. Traffic received at the AppExpert application's public endpoint is first evaluated against the NetScaler Gateway policies and then evaluated against the policies configured for AppExpert application's application units.

The rule that is created for the Clientless Access policies for an Access Gateway application is an advanced expression that also uses the public endpoint that is configured for the AppExpert application. Therefore, before you configure NetScaler Gateway policies for an AppExpert application, you must configure public endpoints for the AppExpert application.

When you include the NetScaler Gateway configuration in an application template, deployment-specific information, such as IP address and port information, and the rule that is created from this information are not included in the template.

How a NetScaler configuration for a file share works

On the NetScaler appliance, you can configure Authorization policies for a file share that is hosted on your organization's network.

When you create a file share, you specify a name for the file share and the network path to the file share. In the network path, you can specify either the name of the server or the server IP address. A rule that uses the components of the file share path is automatically created for the file share. This rule enables the appliance to identify requests for files hosted on the file share server. Any Authorization policies that are configured for the file share are applied to incoming requests.

The NetScaler configuration for a file share cannot be saved in AppExpert application templates.

How a NetScaler configuration for an intranet subnet works

For the intranet subnets that form a part of your network, you can configure policies for Authorization, Traffic, and TCP Compression on the NetScaler appliance. When adding an intranet subnet, you specify the IP address and the netmask of the intranet subnet. A rule that uses these two parameters is automatically created for the intranet subnet. The appliance applies the configured policies to any request that has a destination IP address and netmask set to the subnet's IP address and netmask, respectively.

The NetScaler configuration for an intranet subnet cannot be saved in AppExpert application templates.

How other resources category works

The Other Resources category enables you to configure Access Gateway policies for any network resource by using a rule of your choice. When you configure the NetScaler appliance to process requests for the network resource, you configure a classic expression to identify the requests that are associated with the network resource. You can configure Authorization, Traffic, Clientless Access, and TCP Compression policies for a network resource in Other Resources. The NetScaler appliance applies the configured NetScaler Gateway policies to any requests that match the configured rule.

The NetScaler configuration for a network resource in Other Resources cannot be saved in AppExpert application templates.

Entity naming conventions

The NetScaler Gateway Applications feature enforces a naming convention for some of the entities that you create in this feature. For example, the names of the profiles that you create for Traffic policies for an intranet subnet always begin with a string that consists of the name of the intranet subnet followed by an underscore (_). The name that you provide for the entity is appended to this string. If the name of a subnet is "subnet1," the name of the profile begins with "subnet1_." When such a naming convention is required (in the text box in which you type the name of an entity, for example), the user interface automatically inserts the string with which the name of the entity must begin and does not allow you to modify it.

Add intranet subnets

December 21, 2023

You can specify the authorization and traffic policies for traffic that is bound for the intranet subnets that are configured in your network. The rules for these policies are automatically created by using the parameters you specify for the subnet.

To configure an intranet subnet by using the GUI:

1. In the navigation pane of the GUI, expand **AppExpert**, and then click Access Gateway Applications.
2. In the details pane, do one of the following:
 - To add an intranet subnet, click **Intranet Subnets**, and then click **Add**.
 - To modify an intranet subnet, click an intranet subnet, and then click **Open**.
3. In the **Create Intranet Subnet** or **Configure Intranet Subnet** dialog box, do the following:
 - a) In the Name box, type a name for the intranet subnet you are adding. This parameter cannot be changed for an existing intranet subnet.
 - b) In the IP Address box, type the IP address of the intranet subnet.
 - c) In the Netmask box, type the netmask that will be used for the intranet subnet.
 - d) Click **Create** or **OK**, and then click **Close**.

Add other resources

December 21, 2023

For a network resource that you add to Other Resources, you must configure Advanced policy expression that identifies the subset of traffic associated with the resource.

To configure a resource in other Resources by using the GUI:

1. In the navigation pane of the GUI, expand AppExpert, and then click **Access Gateway Applications**.
2. In the details pane, do one of the following:
 - To add a resource, click **Other Resources**, and then click **Add**.
 - To modify a resource, click a resource, and then click **Open**.
3. In the **Create Resource** or **Configure Resource** dialog box, do the following:
 - a) In the Name box, type a name for the resource you are adding. This parameter cannot be changed for an existing resource.
 - b) In the Rule box, type the rule that will identify the subset of traffic that is associated with the resource you are adding.

Alternatively, click **Configure**, and then create the rule in the **Create Expression** dialog box.

- c) Click **Create** or **OK**, and then click **Close**.

Configure authorization policies

December 21, 2023

You can configure NetScaler Gateway authorization policies for AAA users and groups to access a resource.

To configure permissions for a AAA user or group to access a resource by using the GUI:

1. In the navigation pane of the GUI, expand AppExpert, and then click **Access Gateway Applications**.
2. In the details pane, in the Authorization column, click the icon for the application, file share, intranet subnet, or resource for which you want to configure authorization policies for AAA users and groups.
3. Do one of the following:
 - If the AAA user or group for which you want to configure permissions is already in the Groups/Users tree, drag the user or group from the Groups/Users tree to the Users or Groups node in the <application name> tree. Then, right-click the user or group and click **Allow**.
 - If the AAA user or group for which you want to configure permissions is not configured on the appliance, in the <application name> tree, right-click Users or Groups, and then click **Add**. In the Create **AAA Group** or **Create AAA User** dialog box, fill in the values, click **Create**, and then click **Close**.

The user or group is created with the permission set to Allow. To change the permission setting, right-click the group or user, and then click the permission setting.

4. Click **Close**.

Configure traffic policies

December 21, 2023

The traffic policies that you configure for the resources in the NetScaler Gateway Applications node control client connections to the application. You do not have to configure a rule for the resource. The

rule created automatically when you create the resource. You only need to associate a request profile with the traffic policy. In the traffic profile, you specify parameters such as the protocol, application time-out, and file type association.

To configure traffic policies for a resource

1. In the navigation pane of the GUI, expand AppExpert, and then click Access Gateway Applications.
2. In the details pane, in the Traffic column, click the icon provided for the application, file share, intranet subnet, or resource for which you want to configure traffic policies.
3. In the **Configure Traffic Policies** dialog box, do the following:
 - To specify an existing traffic policy, click **Insert Policy**, and then, in the Policy Name column, click the name of the policy.
 - To configure a new policy, click Insert Policy, and then, in the Policy Name column, click New Policy. In the Create Traffic Policy dialog box, in the Name box, after the underscore (_), type a name for the policy. Then, in Request Profile, either select an existing request profile or click New to configure a new request profile. You can also select an existing profile and then click Modify to modify the profile.
For more information about configuring a traffic policy or profile, see [NetScaler Gateway](#).
 - To modify a policy that you have inserted, in the Policy Name column, click the policy name, and then click Modify Policy. To modify only the associated profile, in the Profile column, click the name of the profile, and then click **Modify Profile**.
 - To regenerate the priorities assigned to the policies, click **Regenerate Priorities**.
 - To specify a new priority value for a policy, in the Priority column, double-click the assigned priority, and then enter the value you want.
 - To unbind a policy, click the policy, and then click **Unbind Policy**.
4. Click **Apply Changes**, and then click **Close**.

Configure clientless access policies

December 21, 2023

Clientless access, when configured for a resource on the NetScaler appliance, allows end-users to access the resource without using the NetScaler Gateway client software. Users can use web browsers to access resources such as Outlook Web Access. You configure clientless access for a resource by configuring a clientless access policy that is associated with a clientless access profile.

To configure a clientless access policy for a resource in the NetScaler Gateway Applications node:

1. In the navigation pane of the GUI, expand **AppExpert**, and then click **Access Gateway Applications**.
2. In the details pane, in the **Clientless Access** column, click the icon for the application, file share, intranet subnet, or resource for which you want to configure a clientless access policy.
3. In the **Configure Clientless Access Policies** dialog box, do the following:
 - To specify an existing clientless access policy, click **Insert Policy**, and then, in the **Policy Name** column, click the name of the policy.
 - To configure a new clientless access policy, click **Insert Policy**, and then, in the **Policy Name** column, click **New Policy**. In the **Create Clientless Access Policy** dialog box, in the Name box, after the underscore (_), type a name for the policy. Then, in Profile, either select an existing profile or click New to configure a new profile. You can also select an existing profile and then click **Modify** to modify the profile.
For more information about configuring a clientless access policy or profile, see [NetScaler Gateway](#).
 - To modify a policy that you have inserted, in the Policy Name column, click the policy name, and then click **Modify Policy**. To modify only the associated profile, in the Profile column, click the name of the profile, and then click Modify Profile.
 - To specify a new priority value for a policy, in the Priority column, double-click the assigned priority, and then enter the value you want.
 - To unbind a policy, click the policy, and then click **Unbind Policy**.
4. Click **Apply Changes**, and then click **Close**.

Configure TCP compression policies

December 21, 2023

You can configure TCP compression policies for an application to increase the performance of the application. TCP compression reduces network latency, reduces bandwidth requirements, and increases the speed of transmission. When configuring a TCP compression policy, you associate a compression action with the policy. The compression action specifies either Compress, GZIP, Deflate, or NoCompress as the compression type. For more information about the compression policies, and compression actions, see [NetScaler Gateway](#).

To configure a TCP compression policy for a resource in the NetScaler Gateway Applications node

1. In the navigation pane of the GUI, expand **AppExpert**, and then click **Access Gateway Applications**.

2. In the details pane, in the TCP Compression column, click the icon for the application, file share, intranet subnet, or resource for which you want to configure a TCP compression policy.
3. In the **Configure TCP Compression Policies** dialog box, do the following:
 - To specify an existing TCP compression policy, click **Insert Policy**, and then, in the **Policy Name** column, click the name of the policy.
 - To create a new TCP compression policy, click **Insert Policy**, and then, in the Policy Name column, click **New Policy**. In the Create TCP Compression Policy dialog box, in the Policy Name box, after the underscore (“_”), type a name for the policy. Then, in Action, either select an existing action or click **New** and configure a new action. You can also click **View** to view the configured compression type.

For more information about configuring a TCP compression policy or action, see NetScaler Gateway , Advanced Edition at [NetScaler Gateway](#).
 - To modify a policy that you have inserted, in the Policy Name column, click the policy name, and then click **Modify Policy**.
 - To regenerate the priorities assigned to the policies, click **Regenerate Priorities**.
 - To specify a new priority value for a policy, in the Priority column, double-click the assigned priority, and then enter the value you want.
 - To unbind a policy, click the policy, and then click **Unbind Policy**.
4. Click **Apply Changes**, and then click **Close**.

Configure bookmarks

June 6, 2022

You can configure bookmarks for internal applications or resources that are available for an entitled user. You can then bind the bookmark to a user, user group or virtual server globally and enable it for the user in the Access Interface. The bookmark links that you create appear on the web sites panes under enterprise web sites.

For more information, see [Creating and Applying Web Links](#) topic.

AppQoE

May 2, 2023

Application level Quality of Experience (AppQoE) integrates several existing policy-based security features of the NetScaler appliance into a single integrated feature that takes advantage of a new queuing mechanism, fair queuing. Fair queuing manages requests to load-balanced web servers and applications at the virtual server level instead of at the service level, allowing it to handle the queuing of all requests to a website or application as one group before load balancing, instead of as separate streams after load balancing.

- **Simple overload.** Any server, no matter how robust, can accept only a limited number of connections at one time. When a protected website or application receives too many requests at once, the Surge Protection feature detects the overload and queues the excess connections til the server can accept them. The AppQoE feature displays an alternate webpage that notifies users that the resource that they requested is not available.
- **Denial-of-Service (DOS) attacks.** Any public-facing resource is vulnerable to attacks whose purpose is to bring that service down and deny legitimate users access to it. The Surge Protection feature help manage DOS attacks in addition to other types of high load. In addition, the HTTP Denial-of-Service Protection feature targets DOS attacks against your websites, sending challenges to suspected attackers and dropping connections if the clients do not send an appropriate response.

Until the current version of the NetScaler operating system, these features were implemented at the service level, which means that each service was assigned its own queues. While service-level queues work, they also have some disadvantages, most of which are due to the NetScaler appliance having to load balance requests before implementing any of the protection features that rely on queuing. Implementing protection features before queuing has various advantages, some of which are listed below:

- Connections are not flushed if a service transitions state, as they are in a service-level queue.
- During periods of high load, such as a denial-of-service attack, and HTTP DoS come into play before load balancing, allowing these features to detect and divert unwanted or lower-priority traffic from the load balancer before the load balancer must cope with it.

In addition to implementing fair queuing, AppQoE integrates a set of features that each provide a different set of tools to achieve a common goal: protecting your networked resources from excessive or inappropriate demand. Putting these features into a common framework enables you to configure and implement them more easily.

Enable AppQoE

December 22, 2023

To configure AppQoE, you must first enable the feature.

To enable AppQoE by using the command line

At the command prompt, type the following commands:

- enable ns feature appqoe
- show ns feature

Example:

```
1 > enable ns feature appqoe
2 Done
3 > show ns feature
4
5 Feature Acronym Status
6 -----
7 1) Web Logging WL ON
8 2) Surge Protection SP ON
9 3) Load Balancing LB ON
10 ...
11 1) AppQoE AppQoE ON
12 Done
```

To enable AppQoE by using the GUI

1. Navigate to **System > Settings**.
2. In the details pane, click **Configure Advanced Features**.
3. In the **Configure Advanced Features** dialog box, select the **AppQoE** check box.
4. Click **OK**.

AppQoE actions

May 2, 2023

After enabling the AppQoE feature, you must configure one or more actions for handling request.

Important:

No specific individual parameters are required to create an action, but you must include at least one parameter or you cannot create the action.

To configure an AppQoE action by using the command line

At the command prompt, type the following commands:

- `add appqoe action <name> [-priority <priority>] [-respondWith (ACS|NS)[<customfile>] [-altContentSvcName <string>] [-altContentPath <string>] [-maxConn <positive_integer>] [-delay <usecs>] [-polqDepth <positive_integer>] [-priqDepth <positive_integer>] [-dosTrigExpression <expression>] [-dosAction (**SimpleResponse ** | **HICResponse**)]`
- `show appqoe action`

Example

To configure priority queuing with policy queue depths of 10 and 1000 for medium and lowest priority queues, respectively:

```

1 > add appqoe action appqoe-act-basic-prhigh -priority HIGH
2   Done
3
4 > add appqoe action appqoe-act-basic-prmedium -priority MEDIUM -
   polqDepth 10
5   Done
6
7 > add appqoe action appqoe-act-basic-prlow -priority LOW -polqDepth
   1000
8   Done
9
10 > show appqoe action
11
12 1.      Name: appqoe-act-basic-prhigh
13        ActionType: PRIORITY_QUEUING
14        Priority: HIGH
15        PolicyQdepth: 0
16        Qdepth: 0
17
18 1.      Name: appqoe-act-basic-prmedium
19        ActionType: PRIORITY_QUEUING
20        Priority: MEDIUM
21        PolicyQdepth: 10
22        Qdepth: 0
23
24 1.      Name: appqoe-act-basic-prlow
25        ActionType: PRIORITY_QUEUING
26        Priority: LOW
27        PolicyQdepth: 1000
28        Qdepth: 0
29 Done

```

To modify an existing AppQoE action by using the command line

At the command prompt, type the following commands:

- `set appqoe action <name> [-priority <priority>] [-altContentSvcName <string>] [-altContentPath <string>] [-polqDepth <positive_integer>] [-priqDepth <positive_integer>] [-maxConn <positive_integer>] [-delay <usecs>] [-dosTrigExpression <expression>] [-dosAction (SimpleResponse | HICResponse)]`
- `show appqoe action`

To remove an AppQoE action by using the command line

At the command prompt, type the following commands:

- `rm appqoe action <name>`
- `show appqoe action`

Parameters for configuring an AppQoE action

- **name.** A name for the new action, or the name of the existing action that you want to modify. The name can begin with a letter, number, or the underscore symbol, and can consist of from one to letters, numbers, and the hyphen (-), period (.) pound (#), space (), at sign (@), equals (=), colon (:), and underscore (_) symbols.
- **priority.** The priority queue to which the request is assigned. When a protected web server or application is heavily loaded and cannot accept additional requests, specifies the order in which waiting requests are to be fulfilled when resources are available. The choices are:
 1. **HIGH.** Fulfills the request as soon as resources are available.
 2. **MEDIUM.** Fulfills the request after it has fulfilled all requests in the HIGH priority queue.
 3. **LOW.** Fulfills the request after it has fulfilled all requests in the HIGH and MEDIUM priority queues.
 4. **LOWEST.** Fulfills the request only after it has fulfilled all requests in higher-priority queues.

If priority is not configured, then the NetScaler appliance assigns the request to the LOWEST priority queue by default.

- **respondWith.** Configures the NetScaler to take the specified Responder action when the specified threshold is reached. Must be used with one of the following settings:
 - **ACS:** Serves content from an alternate content service. Threshold: maxConn (maximum connections) or delay.
 - **NS:** Serves a built-in response from the NetScaler. Threshold: maxConn (maximum connections) or delay.

- **NO ACTION:** Serves no alternative content. Assigns connections to the LOWEST priority queue if the maxConn (maximum connections) or delay threshold is reached.

- altContentSvcName. If -responseWith ACS is specified, the name of the alternative content service, usually an absolute URL to the web server that hosts the alternate content.

altContentPath. If -responseWith (ACS NS) is specified, the path to the alternative content.

-
- olqDepth. Policy queue depth threshold value for the policy queue associated with this action. When the number of connections in the policy queue associated with this action increases to the specified number, subsequent requests are assigned to the LOWEST policy queue. Minimum value: 1 Maximum value: 4,294,967,294
- priqDepth. Policy queue depth threshold value for the specified priority queue. If the number of requests in the specified queue on the virtual server to which the policy associated with the current action is bound increases to the specified number, subsequent requests are assigned to the LOWEST priority queue. Minimum value: 1 Maximum value: 4,294,967,294
- maxConn. The maximum number of connections that can be open for requests that match the policy rule. Minimum value: 1 Maximum value: 4,294,967,294
- delay. The delay threshold, in microseconds, for requests that match the policy rule. If a matching request has been delayed for longer than the threshold, the NetScaler appliance performs the specified action. If NO ACTION is specified, then the appliance assigns requests to the LOWEST priority queue. Minimum value: 1 Maximum value: 599999,999
- dosTrigExpression. Adds an optional second-level check to trigger DoS actions.
- dosAction. Action to take when the appliance determines that it or a protected server is under DoS attack. Possible values: SimpleResponse, HICResponse.

These values specify HTTP challenge-response methods for validating the authenticity of incoming requests to mitigate an HTTP-DDoS attack.

In the HTTP challenge-response generation and validation process, AppQoE uses cookies to validate the client's response and verify that the client seems to be genuine. When sending a challenge, a NetScaler appliance generates two cookies:

Header cookie (_DOSQ). Contains client-specific information, so that the NetScaler appliance can verify the response.

Body cookie (_DOSH). Information used to validate the client machine. The client's browser (or the user, in the case of HIC) computes a value for this cookie. The NetScaler appliance compares that value with the expected value to verify the client.

The information that the appliance sends to the client for computing the `_DOSH` value is based on the DoS Action configuration.

1. **SimpleResponse:** In this case, a NetScaler appliance splits the value and generates a JavaScript code to combine the final value. A client machine capable of computing the original value is considered genuine.
2. **HICResponse:** in this case, a NetScaler appliance generates two single-digit numbers and generates images for those numbers. Then, using a backpatch framework, the appliance inserts those images as base64 strings.

Limitations

1. This is not a trivial CAPTCHA implementation, which is why that term not used.
2. The validation number is based on a NetScaler-generated number that does not change for 120s. This number should be dynamic or client specific.

To configure an AppQoE action by using the configuration utility

1. Navigate to **App-Expert > AppQoE > Actions**.
2. In the details pane, do one of the following:
 - To create a new action, click **Add**.
 - To modify an existing action, select the action, and then click **Edit**.
3. In the **Create AppQoE Action** or the **Configure AppQoE Action** screen, type or select values for the parameters. The contents of the dialog box correspond to the parameters described in “Parameters for configuring the AppQoE Action” as follows (asterisk indicates a required parameter):
 - Name—name
 - Action type—respondWith
 - Priority—priority
 - Policy Queue Depth—polqDepth
 - Queue Depth—priqDepth
 - DOS Action—dosAction
4. Click **Create** or **OK**.

AppQoE parameters

September 21, 2020

In the AppQoE parameters, you configure the session life of an AppQoE session, the file name of the file containing the customized response, and the number of client connections that can be placed in a queue.

To configure the AppQoE parameter settings by using the command line

At the command prompt, type the following commands:

- `set appqoe parameter [-sessionLife <secs>] [-avgwaitingclient <positive_integer>] [-MaxAltRespBandWidth <positive_integer>] [-dosAttackThresh <positive_integer>]`
- `show appqoe parameter`

Parameters for configuring the AppQoE parameters

- **sessionLife**
Number of seconds to wait after displaying alternate content before the appliance displays the same content again. Default value: 300 Maximum Minimum value: 1 Maximum value: 4,294,967,294
- **avgwaitingclient**
The average number of client requests that can be in the service waiting queue. Default value: 1000000 Maximum value: 4,294,967,294
- **MaxAltRespBandWidth**
The maximum bandwidth to consume when sending alternate responses. If the maximum is reached, the appliance quits sending the alternate content til bandwidth consumption drops. Default value: 100 Minimum value: 1 Maximum value: 4,294,967,294
- **dosAtckThrsh**
The denial-of-service attack threshold. The number of connections that must be waiting in queues before the appliance responds with DoS protection measures. Default value: 2000 Minimum value: 0 Maximum value: 4,294,967,294

To configure the AppQoE parameter settings by using the GUI

1. Navigate to **AppExpert > AppQoE**.
2. In the details pane, click **Configure AppQoE Parameters**.
3. In the **Configure AppQoE params** screen, type or select values for the parameters. The contents of the dialog box correspond to the parameters described in “Parameters for configuring the AppQoE Parameters” as follows (asterisk indicates a required parameter):
 - Session Life (secs)
 - sessionLife
 - Average waiting client—avgwaitingclient
 - Alternate Response Bandwidth Limit(Mbps) —MaxAltRespBandWidth
 - DOS Attack Threshold —dosAttackThresh
4. Click **OK**.

AppQoE policies

May 2, 2023

To implement AppQoE, you must configure at least one policy to tell your NetScaler how to distinguish the connections to be queued in a specific queue.

To configure an AppQoE policy by using the command line

At the command prompt, type the following command:

```
add appqoe policy <name> -rule <expression> -action <string>
```

Example:

The following example selects requests with a User-Agent header that contains “Android,” and assigns them to the medium priority queue. These requests come from smartphones and tablets that run the Google Android operating system.

```
1 > add appqoe action appqoe-act-primd -priority MEDIUM
2 Done
3 > add appqoe policy appqoe-pol-primd -rule "HTTP.REQ.HEADER("User-Agent
  ").CONTAINS("Android")" -action appqoe-act-primd
4 Done
5 > sh appqoe policy appqoe-pol-primd
6     Name: appqoe-pol-primd
7     Rule: HTTP.REQ.HEADER("User-Agent").CONTAINS("Android")
8     Action: appqoe-act-primd
```

```
9           Hits: 0
10
11 Done
```

Parameters for configuring an AppQoE policy

- name. A name for the AppQoE policy. The name can begin with a letter, number, or the underscore symbol, and can consist of from one to 127 letters, numbers, and the hyphen (-), period (.) pound (#), space (), at sign (@), equals (=), colon (:), and underscore (_) symbols. You should chose a name that helps identify the type of action.
- rule. A NetScaler expression that tells the appliance which connections it should handle.
- action. The AppQoE action to perform when a connection matches the policy.

To configure an AppQoE policy by using the configuration utility

1. Navigate to **App-Expert > AppQoE > Policies**.
2. In the details pane, do one of the following:
 - To create a policy, click **Add**.
 - To modify an existing policy, select the policy, and then click **Edit**.
3. If you are creating a policy, in the **Create AppQoE Policy** dialog, in the Name text box, type a name for your new policy.

The name can begin with a letter, number, or the underscore symbol, and can consist of from one to 127 letters, numbers, and the hyphen (-), period (.) pound (#), space (), at sign (@), equals (=), colon (:), and underscore (_) symbols. You should chose a name that helps identify the purpose and effect of this policy.

If you are modifying an existing policy, skip this step. You cannot change the name of an existing policy.

4. In the **Action** drop-down list, choose the AppQoE action to perform when the policy matches a connection. Click the plus (+) to open the **Add AppQoE Action** dialog and add a new action.
5. In the **Rule** text box, either enter the policy expression directly, or click New to create a policy expression. If you click New, perform the following steps:

- a) In the **Create Expression** dialog box, click **Add**.
 - 1 In the **Add Expression** dialog box, select a common expression from the **Frequently Used Expressions** drop-down list, or use the **Construct Expression** drop-down lists to create the expression that defines which traffic to filter.If you choose to create your own expression, you start by selecting the first term from the

first drop-down list on the left side of the Construct Expression area. The choices in that list are:

- HTTP
- SYS
- CLIENT
- SERVER
- ANALYTICS
- TEXT

The default choice is HTTP. After you make a choice in the first drop-down list (or accept the default), you can choose the next term in your expression from the drop-down list to the right of it. The terms in that list and other lists that follow change depending on your previous choices. The lists offer only terms that are valid choices. Continue to select terms until you have finished the expression.

- a) When you have created the expression that you want, click **OK**. The expression is added in the **Expression** text box.
6. Click **Create**. The expression appears in the **Rule** text box.

Entity templates

December 22, 2023

Warning

The entity template functionality is deprecated from NetScaler 13.0 build 82.x onwards and as an alternative Citrix recommends you to use the Style Books. For more information, see [Style Books](#) topic.

An entity template is a collection of information for creating a load balancing virtual server template on a NetScaler appliance. It provides a specification and a set of defaults to be configured for a load balancing virtual server. By using a template that defines a set of defaults, you can quickly configure multiple virtual servers that require a similar configuration while eliminating several configuration steps.

You can create an entity template by exporting the load balancing virtual server details to a template file. This can be done only through the NetScaler GUI. You use the NetScaler GUI to export, import, and manage entity templates. You can share entity templates with other administrators and manage templates saved locally on your appliance or machine. You can also import entity templates from the appliance or your local computer.

Before creating a template, you should be familiar with the configuration of the load balancing virtual server.

Load balancing virtual server template

Load balancing entity templates are created in the same way that NetScaler application templates are created. When you export a load balancing virtual server to a template file, the following two files are automatically created:

- Load balancing virtual server template file. Contains XML elements that store the values of the parameters that are configured for the load balancing virtual server. The file also contains XML elements for storing information about bound policies.
- Deployment file. Contains XML elements that store deployment-specific information such as services, service groups, and configured variables.

In the template and deployment files, each unit of configuration information is encapsulated in a specific XML element that is meant for that unit type. For example, the load balancing method parameter, `lbMethod`, is encapsulated within the `<lbmethod>` and `</lbmethod>` tags.

Note:

After you export a load balancing virtual server, you can add elements, remove elements, and modify existing elements before importing the configuration information to a NetScaler appliance.

How a load balancing virtual server template works

When you create a template for a load balancing virtual server, you specify default values for the server. You specify what values must be read-only, what values must not be displayed, and what values users can configure. You also configure the pages that compose the template import wizard. All the information and settings you provide are stored in the template file.

When a user imports the template to a NetScaler appliance, the GUI guides the user through the various pages that you configured for the template. The GUI displays the read-only parameter values and prompts the user to specify values for the configurable parameters. After the user follows the instructions, the appliance creates the entity with the configured values.

You can create or modify an entity template for a load balancing virtual server from the Traffic Management node.

To export virtual server details to a template, you must specify the following options and settings for the template:

- The default value of a parameter.
- Whether the default values are visible to users.

- Whether the default values can be changed by users.
- The number of pages in the entity import wizard, including the page names, text, and available parameters.
- The entities that must be bound to the entity for which the template is being created.

For example, when you are creating a load balancing virtual server template, you can specify the policies that you want to bind to the virtual server that you create from the template. However, only binding information is included in the template. The bound entities are not included. If the entity template is imported to another NetScaler appliance, the bound entities must exist on the appliance at import time for the binding to succeed. If none of the bound entities exist on the target appliance, the entity (for which the template was configured) is created without any bindings. If only a subset of the bound entities exist on the target appliance, they are bound to the entity that is created from the template.

When you export a template for the load balancing virtual server, the configuration settings of the entity appear in the template. All bound entities are selected by default, but you can modify bindings as necessary. As in the case of a template that is not based on an existing entity, only binding information is included and not the entities. You can either save the template with the existing configuration settings or use the settings as a basis for creating a new configuration for a template.

Configure variables in load balancing virtual server template

Load balancing virtual server templates support the declaration of variables in the configured load balancing parameters and in bound policies and actions. The ability to declare variables enables you to replace preconfigured values with values that suit the environment into which you are importing the template.

As an example, consider the following expression configured for a policy that is bound to a load balancing virtual server for which you are creating a template. The expression evaluates the value of the accept-language header in an HTTP request.

```
HTTP.REQ.HEADER("Accept-Language").CONTAINS("en-us")
```

If you want the value of the header to be configurable at import time, you can specify the string `en-us` as a variable.


After you create a variable, you can do the following:

- Assign more strings to an existing variable. After you create a variable for a string, you can select and assign other parts of the same or different expression to the variable. The strings you assign to a variable need not be the same. At import time, all the strings that are assigned to the variable are replaced with the value that you provide.
- View the string or strings that are assigned to the variable.
- View a list of all the entities and parameters that use the variable


To configure variables in a load balancing virtual server template

Complete the following procedure to configure variables for a load balancing virtual server template by using the NetScaler GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**
2. In the details pane, right-click the virtual server that you want to export to a template file, and then click **Add**.
3. In the **Create Load balancing Virtual Server** page, set the virtual server parameters. For more information on configuring a load balancing virtual server, see [How load balancing works](#)
4. Once you have the set the parameters for the load balancing virtual server, click **Done**.

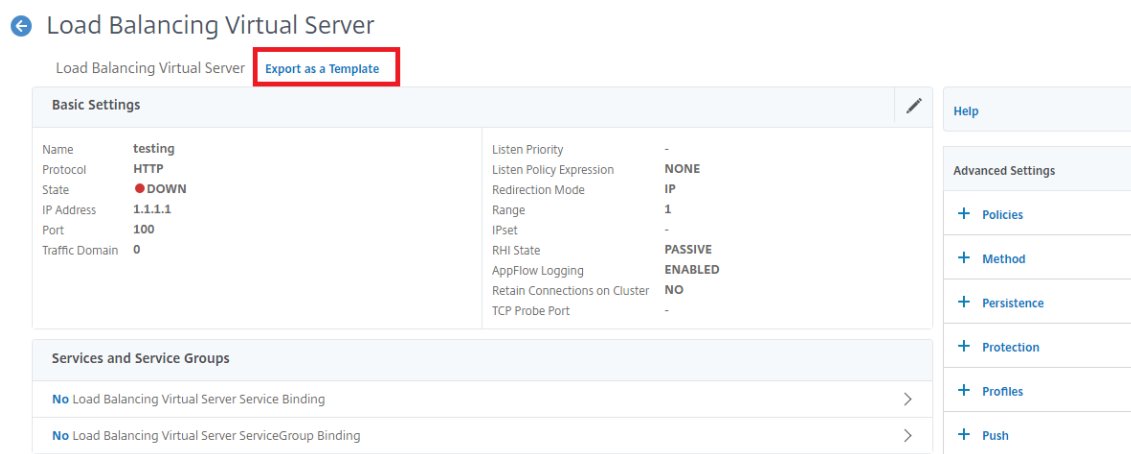

5. Click **Export as Template** link at the top to export the server details as a template file.
6. In the **Create Load Balancing Template** page, enter the template settings.
7. Click **Done**.

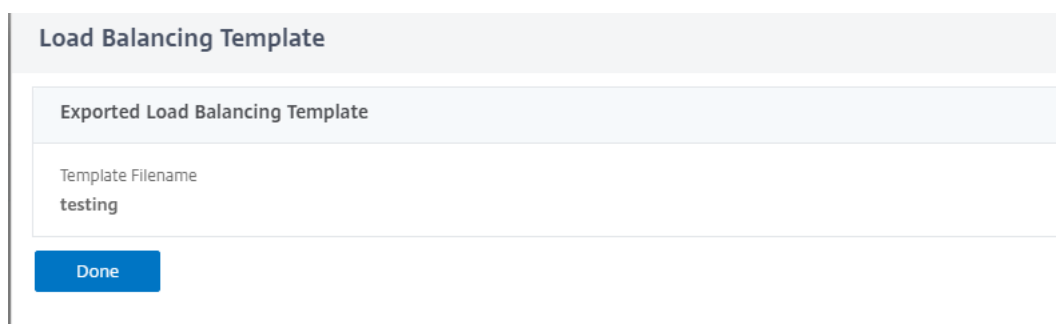

Modify a load balancing virtual server template

You can modify only the parameters, bindings, and pages configured for a template. The name and location of the template specified when the template was created cannot be changed. The NetScaler ap-

pliance does not provide you with the option of modifying a load balancing virtual server template.

To modify a load balancing virtual server by using NetScaler GUI


1. Navigate to **Traffic Management > Load balancing > Virtual Servers**.
2. In the **Load Balancing Virtual Server** page, modify the entity parameters.
3. Click Done.
4. Click **Export as a Template** link.
5. The modified changes are now available in the load balancing virtual server template file.
6. In the **Exported Load Balancing Template** page, click **Done**.

Manage load balancing virtual server templates

You can organize load balancing virtual server template files and deployment files by using the NetScaler GUI.

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the **Virtual Servers** page, select **Manage Template** action.
3. In the **Load Balancing Templates** page, click **Template File** tab.
4. In the **Template Files** tab page, you can upload or download a template from and to the appliance template folder.

← Load Balancing Templates

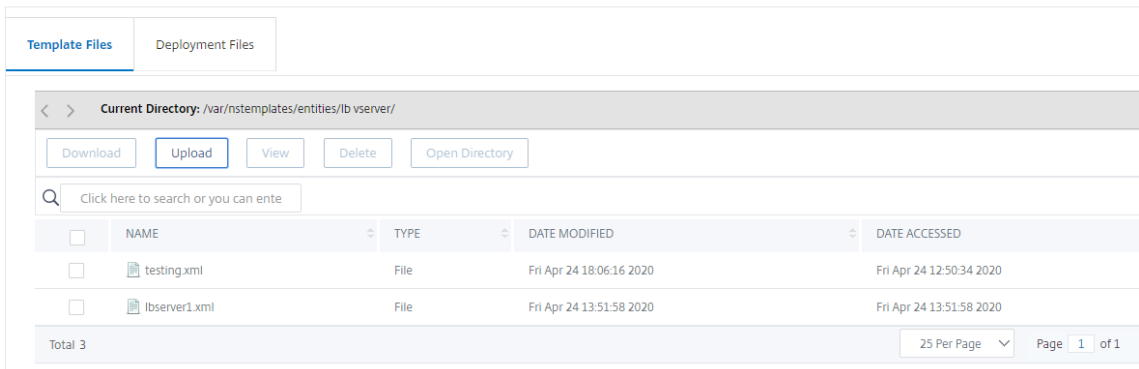


5. Click **Close**.

To upload load balancing virtual server entity template by using NetScaler GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the **Virtual Servers** page, click **Select Action** and then select **Manage Template**.
3. In the Load Balancing Templates page, click **Template Files** tab.

4. In the **Template Files** tab page, click **Upload** to upload a template.
5. Click **Close**.


← Load Balancing Templates

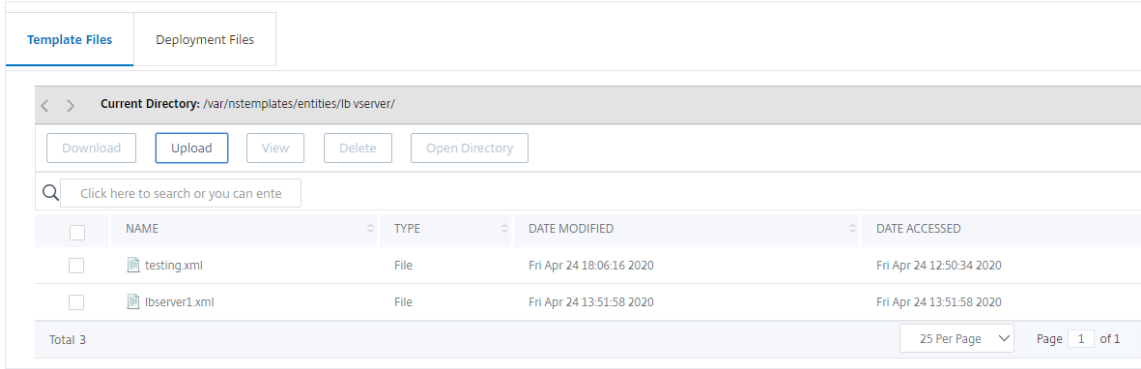

To download load balancing virtual server entity template by using NetScaler GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the **Virtual Servers** page, click **Select Action** and then select **Manage Template**.
3. In the **Load Balancing Templates** page, click **Template Files** tab.
4. In the Template Files tab page, select a template file and click Download.
5. Click Close.

← Load Balancing Templates

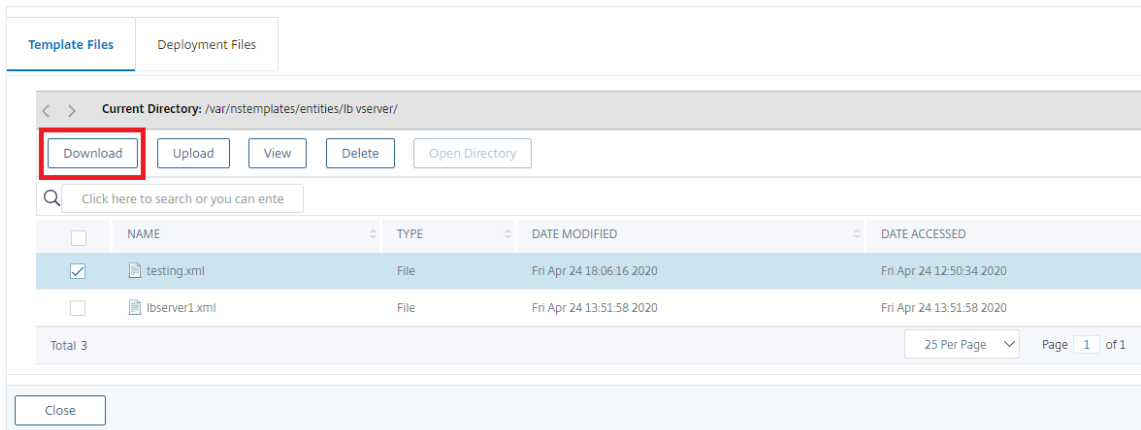

Example of load balancing virtual server template and deployment template

Following is an example of a template file that was created from a load balancing virtual server called “Lbvip”:


```
1 COPY
2
3 <?xml version="1.0" encoding="UTF-8" ?>
4 <template>
5   <template_info>
6     <entity_name>Lbvip</entity_name>
7     <version_major>10</version_major>
8     <version_minor>0</version_minor>
9     <build_number>40.406</build_number>
10  </template_info>
11  <entitytemplate>
12    <lbvserver_list>
13      <lbvserver>
14        <name>Lbvip</name>
15        <servicetype>HTTP</servicetype>
16        <ipv46>0.0.0.0</ipv46>
17        <ipmask>*</ipmask>
18        <port>0</port>
19        <range>1</range>
20        <persistencetype>NONE</persistencetype>
21        <timeout>2</timeout>
22        <persistencebackup>NONE</persistencebackup>
23        <backuppersistencetimeout>2</backuppersistencetimeout>
24        <lbmethod>LEASTCONNECTION</lbmethod>
25        <persistmask>255.255.255.255</persistmask>
26        <v6persistmasklen>128</v6persistmasklen>
27        <pq>OFF</pq>
28        <sc>OFF</sc>
29        <m>IP</m>
30        <datalength>0</datalength>
31        <dataoffset>0</dataoffset>
32        <sessionless>DISABLED</sessionless>
33        <state>ENABLED</state>
34        <connfailover>DISABLED</connfailover>
35        <clttimeout>180</clttimeout>
36        <somethod>NONE</somethod>
37        <sopersistence>DISABLED</sopersistence>
38        <sopersistencetimeout>2</sopersistencetimeout>
39        <redirectportrewrite>DISABLED</redirectportrewrite>
40        <downstateflush>DISABLED</downstateflush>
41        <gt2gb>DISABLED</gt2gb>
42        <ipmapping>0.0.0.0</ipmapping>
43        <disableprimaryondown>DISABLED</disableprimaryondown>
44        <insertvserveripport>OFF</insertvserveripport>
45        <authentication>OFF</authentication>
46        <authn401>OFF</authn401>
47        <push>DISABLED</push>
48        <pushlabel>none</pushlabel>
49        <l2conn>OFF</l2conn>
50        <appflowlog>DISABLED</appflowlog>
51        <icmpvsrresponse>PASSIVE</icmpvsrresponse>
52        <lbvserver_cmppolicy_binding_list>
53          <lbvserver_cmppolicy_binding>
```

```

54         <name>Lbvip</name>
55         <polycname>NOPOLICY-COMPRESSION</polycname>
56         <priority>100</priority>
57         <gotopriorityexpression>END</gotopriorityexpression>
58         <bindpoint>REQUEST</bindpoint>
59     </lbvserver_cmppolicy_binding>
60 </lbvserver_cmppolicy_binding_list>
61 </lbvserver>
62 </lbvserver_list>
63 </entitytemplate>
64 </template>

```

Example of a deployment file Following is the deployment file associated with the virtual server in the preceding example:

COPY

```

1 <?xml version="1.0" encoding="UTF-8" ?>
2 <template_deployment>
3 <template_info>
4 <entity_name>Lbvip</entity_name>
5 <version_major>10</version_major>
6 <version_minor>0</version_minor>
7 <build_number>40.406</build_number>
8 </template_info>
9 <service_list>
10 <service>
11 <ip>1.2.3.4</ip>
12 <port>80</port>
13 <servicetype>HTTP</servicetype>
14 </service>
15 </service_list>
16 <servicegroup_list>
17 <servicegroup>
18 <name>svcgrp</name>
19 <servicetype>HTTP</servicetype>
20 <servicegroup_servicegroupmember_binding_list>
21 <servicegroup_servicegroupmember_binding>
22 <ip>1.2.3.90</ip>
23 <port>80</port>
24 </servicegroup_servicegroupmember_binding>
25 <servicegroup_servicegroupmember_binding>
26 <ip>1.2.8.0</ip>
27 <port>80</port>
28 </servicegroup_servicegroupmember_binding>
29 <servicegroup_servicegroupmember_binding>
30 <ip>1.2.8.1</ip>
31 <port>80</port>
32 </servicegroup_servicegroupmember_binding>
33 <servicegroup_servicegroupmember_binding>
34 <ip>1.2.9.0</ip>
35 <port>80</port>

```

```
36     </servicegroup_servicegroupmember_binding>
37     </servicegroup_servicegroupmember_binding_list>
38 </servicegroup>
39 </servicegroup_list>
40 </template_deployment>
```

HTTP callouts

May 2, 2023

For certain types of requests, or when certain criteria are met during policy evaluation, you might want to stall policy evaluation briefly, retrieve information from a server, and then perform a specific action that depends on the information that is retrieved. At other times, when you receive certain types of requests, you might want to update a database or the content hosted on a Web server. HTTP callouts enable you to perform all these tasks.

An HTTP callout is an HTTP or HTTPS request that the NetScaler appliance generates and sends to an external application when certain criteria are met during policy evaluation. The information that is retrieved from the server can be analyzed by Advanced policy expressions, and an appropriate action can be performed. You can configure HTTP callouts for HTTP content switching, TCP content switching, rewrite, responder, and for the token-based method of load balancing.

Before you configure an HTTP callout, you must set up an application on the server to which the callout will be sent. The application, which is called the *HTTP callout agent*, must be configured to respond to the HTTP callout request with the required information. The HTTP callout agent can also be a Web server that serves the data for which the NetScaler appliance sends the callout. You must make sure that the format of the response to an HTTP callout does not change from one invocation to another.

After you set up the HTTP callout agent, you configure the HTTP callout on the NetScaler appliance. Finally, to invoke the callout, you include the callout in a Advanced policy in the appropriate NetScaler feature and then bind the policy to the bind point at which you want the policy to be evaluated.

After you have configured the HTTP callout, you must verify the configuration to make sure that the callout is working correctly.

How an HTTP callout works


May 2, 2023

When the NetScaler appliance receives a client request, the appliance evaluates the request against the policies bound to various bind points. During this evaluation, if the appliance encounters the HTTP callout expression, `SYS.HTTP_CALLOUT(<name>)`, it stalls policy evaluation briefly and sends a request to the HTTP callout agent by using the parameters configured for the specified HTTP callout. Upon receiving the response, the appliance inspects the specified portion of the response, and then either performs an action or evaluates the next policy, depending on whether the evaluation of the response from the HTTP callout agent evaluates to TRUE or FALSE, respectively. For example, if the HTTP callout is included in a responder policy, if the evaluation of the response evaluates to TRUE, the appliance performs the action associated with the responder policy.

If the HTTP callout configuration is incorrect or incomplete, or if the callout invokes itself recursively, the appliance raises an UNDEF condition, and updates the undefined hits counter.

The following figure illustrates the working of an HTTP callout that is invoked from a globally bound responder policy. The HTTP callout is configured to include the IP address of the client that is associated with an incoming request. When the NetScaler appliance receives a request from a client, the appliance generates the callout request and sends it to the callout server, which hosts a database of blacklisted IP addresses and an HTTP callout agent that checks whether the client's IP address is listed in the database. The HTTP callout agent receives the callout request, checks whether the client's IP address is listed, and sends a response that the NetScaler appliance evaluates. If the response indicates that the client's IP address is not blacklisted, the appliance forwards the request to the configured service. If the client's IP address is blacklisted, the appliance resets the client connection

Figure 1. HTTP Callout Entity Model

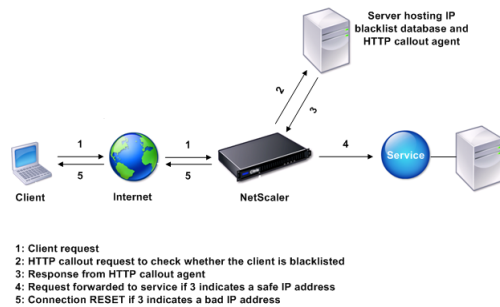

Notes on the format of HTTP requests and responses

May 2, 2023

The NetScaler appliance does not check for the validity of the HTTP callout request. Therefore, before you configure HTTP callouts, you must know the format of an HTTP request. You must also know the format of an HTTP response, because configuring an HTTP callout involves configuring expressions that evaluate the response from the HTTP callout agent.

This section includes the following sections:

- Format of an HTTP Request
- Format of an HTTP Response

Format of an HTTP Request

An HTTP request contains a series of lines that each end with a carriage return and a line feed, represented as either <CR><LF> or `\r\n`.

The first line of a request (the *message line*) contains the HTTP method and target. For example, a message line for a GET request contains the keyword GET and a string that represents the object that is to be fetched, as shown in the following example:

```
1 GET /mysite/mydirectory/index.html HTTP/1.1\r\n
```

The rest of the request contains HTTP headers, including a required Host header and, if applicable, a message body.

The request ends with a blank line (an extra <CR><LF> or `\r\n`).

Following is an example of a request:

```
1 Get /mysite/index.html HTTP/1.1\r\n
2 Host: 10.101.101.10\r\n
3 Accept: */*\r\n
4 \r\n
```

Format of an HTTP Response

An HTTP response contains a status message, response HTTP headers, and the requested object or, if the requested object cannot be served, an error message.

Following is an example of a response:

```
1 HTTP/1.1 200 OK\r\n
2 Content-Length: 55\r\n
3 Content-Type: text/html\r\n
4 Last-Modified: Wed, 12 Aug 1998 15:03:50 GMT\r\n
5 Accept-Ranges: bytes\r\n
6 ETag: "04f97692cbd1:377" \r\n
7 Date: Thu, 19 Jun 2008 19:29:07 GMT\r\n
8 \r\n
9 <55-character response>
```

Configure an HTTP callout

December 21, 2023

When configuring an HTTP callout, you specify the type of request (HTTP or HTTPS), destination, and format of the request. The expected format of the response, and, finally, the portion of the response that you want to analyze.

For the destination, you either specify the IP address and port of the HTTP callout agent. Or engage a load balancing, content switching, or cache redirection virtual server, to manage the HTTP callout requests.

In the first case, the HTTP callout requests are sent directly to the HTTP callout agent. In the second case, the HTTP callout requests are sent to the virtual IP address (VIP) of the specified virtual server. The virtual server processes the request in the same way as it processes a client request. For example, if you expect many callouts to be generated, you can configure instances of the HTTP callout agent on multiple servers, bind these instances (as services) to a load balancing virtual server, and then specify the load balancing virtual server in the HTTP callout configuration. The load balancing virtual server then balances the load on those configured instances as determined by the load balancing algorithm.

For the format of the HTTP callout request, you can specify the individual attributes of the HTTP callout request (an attribute-based HTTP callout), or you can specify the entire HTTP callout request as an advanced policy expression (an expression-based HTTP callout).

For the format of the HTTP callout request, you can specify the individual attributes of the HTTP callout request (an attribute-based HTTP callout), or you can specify the entire HTTP callout request as an Advanced policy expression (an expression-based HTTP callout).

For more information, see [policy-httpCallout](#)

Parameter	Description
Name	Name of the callout, 127 character maximum
IP address and port (<i>ip-address / port</i>) or Virtual server name (<i>vserver</i>)	IPv4 or IPv6 address of the server to which the callout is sent, or a wildcard, and the port on the server to which the callout is sent, or a wildcard. Or, the name of a load balancing, content switching, or cache redirection virtual server with a service type of HTTP.

Parameter	Description
HTTP Method (httpMethod)	HTTP Method (httpMethod). Method used in the HTTP request that this callout sends. Valid values: GET or POST. Default: GET.
Host expression (hostExpr)	Host expression (hostExpr). Advanced text expression to configure the Host header. Maximum length: 255. The expression can be a literal value or it can be an advanced expression that derives the value. Examples: “10.101.10.11”, “http.req.header(“Host”)”
URL stem expression (urlStemExpr)	URL stem expression (urlStemExpr) An advanced string expression for generating the URL stem. Maximum length: 8191. The expression can be a literal string or an expression that derives the value. Examples: ““/mysite/index.html””×“http.req.url”
HTTP Headers (headers)	HTTP Headers (headers). Advanced text expression to insert HTTP headers and their values in the HTTP callout request. Specify a value for every header. You specify the header name as a string and the header value as an advanced expression. Specify the headers separated by space. Such as -headers cip(client.ip.src) hdr(http.req.header(“HDR”)). The number of headers can be 8
Expression-based request to send to the server (fullReqExpr)	Exact HTTP request that the NetScaler is to send as an advanced expression to 8191 characters. If you specify this parameter, you must omit the httpMethod, hostExpr, urlStemExpr, headers, and parameters arguments. The request expression is constrained by the feature where the callout is used. For example, an HTTP.RES expression cannot be used in a request-time policy bank or in a TCP content switching policy bank.

Parameter	Description
Expression-based request to send to the server (bodyExpr)	An advanced string expression for generating the body of the request. The expression can contain a literal string or an expression that derives the value (for example, client.ip.src). Mutually exclusive with -fullReqExpr.
Parameters	Advanced expression to insert query parameters in the HTTP request that the callout sends. Specify a value for every parameter that you configure. If the callout request uses the GET method, these parameters are inserted in the URL. If the callout request uses the POST method, these parameters are inserted in the POST body. You configure the query parameter name as a string and the value as an advanced expression. The parameter values are URL encoded. Specify the parameters separated by space like: -parameters name1("name1") name2(http.req.header("hdr")). The maximum 8 parameters can be configured.
Return type (returnType)	Type of data that the target application returns in the response to the callout. Valid values: TEXT: Treat the returned value as a text string. NUM: Treat the returned value as a number. BOOL: Treat the returned value as a Boolean value. Note: You cannot change the return type after it is set.

Parameter	Description
Expression to extract data from the response (resultExpr)	Advanced expression that extracts HTTP.RES objects from the response to the HTTP callout. The maximum length is 8191. The operations in this expression must match the return type. For example, if you configure a return type of text, the result expression must be a text-based expression. If the return type is num, the result expression (resultExpr) must return a numeric value similar to the following: “http.res.body(10000).length” Note: Sometimes, if you set a return type of TEXT and the result sent from the server exceeds 16 KB, the result expression can return NULL. For example, when the result is a concatenated string that exceeds 16 KB.
Scheme	The type of scheme for the callout server. Example: HTTP, https
cacheForSecs	Duration, in seconds, for which the callout response is cached. The cached responses are stored in an integrated caching content group named “calloutContentGroup”. If no duration is configured, the callout responses are not cached unless a normal caching configuration is used to cache them. This parameter takes precedence over any normal caching configuration that would otherwise apply to these responses.

Note: The appliance does not check for the validity of the request. You must make sure that the request is a valid request and doesn't contain any confidential information. An incorrect or incomplete HTTP callout configuration results in a runtime UNDEF condition that is not associated with an action. The UNDEF condition merely updates the Undefined Hits counter, which enables you to troubleshoot an incorrectly configured HTTP callout. However, the appliance parses the HTTP callout request to enable you to configure certain NetScaler features for the callout. This can lead to an HTTP callout invoking itself. For information about callout recursion and how you can avoid it, see [Avoiding HTTP Callout Recursion](#).

Finally, regardless of whether you use HTTP request attributes or an expression to define the format of the HTTP callout request, you must specify the format of the response from the HTTP callout agent

and the portion of the response that you want to evaluate. The response type can be a Boolean value, a number, or text. Based on this return type only, you can use the further expression methods on the callout response. If the return type is a number, then you can use the number based expression on the callout response. The portion of the response that you want to evaluate is specified by an expression. For example, if you specify that the response contains text, you can use `HTTP.RES.BODY(<unit>)` to specify that the appliance must evaluate only the first <unit> bytes of the response from the callout agent.

At the command line, you first create an HTTP callout by using the `add` command. When you add a callout, all parameters are set to a default value of NONE, except the HTTP method, which is set to a default value of GET. You then configure the callout's parameters by using the `set` command. The `set` command is used to configure both types of callouts (attribute-based and expression-based). The difference lies in the parameters that are used for configuring the two types of callouts. So, the command-line instructions that follow include a `set` command for configuring an attribute-based callout and a `set` command for configuring an expression-based callout. In the configuration utility, all of these configuration tasks are performed in a single dialog box.

Note: Before you put an HTTP callout into a policy, you can modify all configured parameters except the return type. Once an HTTP callout is in a policy, you cannot completely modify an expression that is configured in the callout. For example, you cannot change `HTTP.REQ.HEADER("myVal")` to `CLIENT.IP.SRC`. You can modify the operators and arguments that are passed to the expression. For example, you can change `HTTP.REQ.HEADER("myVal1")` to `HTTP.REQ.HEADER("myVal2")`, or `HTTP.REQ.HEADER("myVal")` to `HTTP.REQ.HEADER("myVal").AFTER_STR(<string>)`. If the `set` command fails, create an HTTP callout.

HTTP callout configuration involves configuring Advanced policy expressions. For more information about configuring Advanced policy expressions, see [Configuring Advanced policy Expressions: Getting Started](#).

To configure an HTTP callout by using the command line interface

At the command prompt, do the following:

Create an HTTP callout.

```
1 add policy httpCallout <name> [-IPAddress <ip_addr|ipv6_addr>] [-port<
  port>] [-vServer <string>] [-returnType <returnType>] [-httpMethod (
  GET | POST )] [-hostExpr <expression>] [-urlStemExpr <expression>]
  [-headers <name(value)> ...] [-parameters <name(value)> ...] [-
  bodyExpr <expression>] [-fullReqExpr <expression>] [-scheme ( http |
  https )] [-resultExpr <expression>] [-cacheForSecs <secs>] [-
  comment <string>]
```

Example:

```

1 add policy httpCallout mycallout -vserver lbv1 -returnType num -
  httpMethod GET -hostExpr 'http.req.header("Host")'-urlStemExpr "http
  .req.url" -parameters Name("My Name") -headers Name("MyHeader")-
  resultExpr "http.res.body(10000).length"

```

Modify the HTTP callout configuration.

```

1 set policy httpCallout <name> [-IPAddress <ip_addr|ipv6_addr|*>] [-port
  <port|*>] [-vServer <string>] [-returnType <returnType>] [-
  httpMethod ( GET | POST )] [-hostExpr <string>] [-urlStemExpr <
  string>] [-headers <name(value)> ...] [-parameters <name(value)>
  ...] [-resultExpr <string>]

```

Example:

```

1 > set policy httpCallout mycallout -vserver lbv1 -returnType num -
  httpMethod GET -hostExpr 'http.req.header("Host")'-urlStemExpr "http
  .req.url" -parameters Name("My Name") -headers Name("MyHeader") -
  resultExpr "http.res.body(10000).length"

```

Configure HTTP callout using fullReqExpr parameter.

```

1 set policy httpCallout <name> [-vServer <string>] [-returnType <
  returnType>] [-fullReqExpr <string>] [-resultExpr <string>]

```

Example:

```

1 > set policy httpCallout mycallout1 -vserver lbv1 -returnType num
  fullReqExpr q{
2 "GET " + http.req.url + "HTTP/" + http.req.version.major + "." + http.
  req.version.minor.sub(1) + "r\nHost:10.101.10.10\r\nAccept: */*\r\n
  \r\n" }

```

Verify the configurations of the HTTP callout.

```

1 show policy httpCallout `<name>`
2
3 sh policy httpCallout mycallout1
4 > Name: mycallout1
5 >Vserver: lbv1 (UP)
6 Effective Vserver state: UP
7 Return type: TEXT
8 Scheme: HTTP
9 Full REQ expr: "GET " + http.req.url + "HTTP/" + http.req.version.major
  + "." + http.req.version.minor.sub(1)+ "r\nHost:10.101.10.10\r\
  nAccept: */*\r\n\r\n"
10 Result expr: http.res.body(100)
11 Hits: 0
12 Undef Hits: 0
13 Done
14 >

```

To configure an HTTP callout by using the configuration utility

1. Navigate to **AppExpert > HTTP Callouts**.
2. In the details pane, click **Add**.
3. In the **Create HTTP Callout** dialog box, configure the parameters of the HTTP callout. For a description of the parameter, hover the mouse cursor over the check box.
4. Click **Create** and then click **Close**.

← Create HTTP Callout

Name*
test_123

Comment
preserve

Server to receive callout request

Virtual Server IP Address

IP Address
1 . 1 . 1 . 1

Port
80

Request to send to the server

Request Type*
Attribute-Based

Method*
GET

Host Expression [Expression Editor](#)

Select Select Select

Press Control+Space to start the expression and then type '.' to get the next set of options

[Evaluate](#)

URL Stem Expression [Expression Editor](#)

Select Select Select

Press Control+Space to start the expression and then type '.' to get the next set of options

[Evaluate](#)

Body Expression [Expression Editor](#)

Select Select Select

Press Control+Space to start the expression and then type '.' to get the next set of options

[Evaluate](#)

Headers

[Insert](#) [Delete](#)

HEADERS	VALUE
No items	

Parameters

[Insert](#) [Delete](#)

PARAMETERS	VALUE
No items	

Scheme*
http

Server Response

Return Type

Expression to extract data from the response [Expression Editor](#)

Select Select Select

Press Control+Space to start the expression and then type '.' to get the next set of options

[Evaluate](#)

Cache Expiration Time(in secs)

[Create](#) [Close](#)

Verify the configuration

December 21, 2023

For an HTTP callout to work correctly, all the HTTP callout parameters and the entities associated with the callout must be configured correctly. While the NetScaler appliance does not check the validity of the HTTP callout parameters, it indicates the state of the bound entities, namely the server or virtual server to which the HTTP callout is sent. The following table lists the icons and describes the conditions under which the icons are displayed.




Icon	Indicates that
	The state of the server that hosts the HTTP callout agent, or the load balancing, content switching, or cache redirection virtual server to which the HTTP callout is sent is UP.
	The state of the server that hosts the HTTP callout agent, or the load balancing, content switching, or cache redirection virtual server to which the HTTP callout is sent is OUT OF SERVICE.
	The state of the server that hosts the HTTP callout agent, or the load balancing, content switching, or cache redirection virtual server to which the HTTP callout is sent is DOWN.

Table 1. Icons That Indicate the States of Entities Bound to an HTTP Callout

For an HTTP callout to function correctly, the icon must be green at all times. If the icon is not green, check the state of the callout server or virtual server to which the HTTP callout is sent. If the HTTP callout is not working as expected even though the icon is green, check the parameters configured for the callout.

You can also verify the configuration by sending test requests that match the policy from which the HTTP callout is invoked, checking the hits counter for the policy and the HTTP callout, and verifying the responses that the NetScaler appliance sends to the client.

Note: An HTTP callout can sometimes invoke itself recursively a second time. If this happens, the hits counter is incremented by two counts for each callout that is generated by the appliance. For the hits counter to display the correct value, you must configure the HTTP callout in such a way that it does not invoke itself a second time. For more information about how you can avoid HTTP callout recursion, see [Avoiding HTTP Callout Recursion](#).

To view the hits counter for an HTTP callout

1. Navigate to **AppExpert > HTTP Callouts**.
2. In the details pane, click the HTTP callout for which you want to view the hits counter, and then view the hits in the **Details** area.

Invoke an HTTP callout

December 21, 2023

After you configure an HTTP callout, you invoke the callout by including the `SYS.HTTP_CALLOUT (<name>)` expression in a Advanced policy rule. In this expression, `<name>` is the name of the HTTP callout that you want to invoke.

You can use Advanced policy expression operators with the callout expression to process the response and then perform an appropriate action. The return type of the response from the HTTP callout agent determines the set of operators that you can use on the response. If the part of the response that you want to analyze is text, you can use a text operator to analyze the response. For example, you can use the `CONTAINS(<string>)` operator to check whether the specified portion of the response contains a particular string, as in the following example:

```
1 SYS.HTTP_CALLOUT(mycallout).contains("Good IP address")
```

If you use the preceding expression in a responder policy, you can configure an appropriate responder action.

Similarly, if the part of the response that you want to evaluate is a number, you can use a numeric operator such as `GT(int)`. If the response contains a Boolean value, you can use a Boolean operator.

Note: An HTTP callout can invoke itself recursively. HTTP callout recursion can be avoided by combining the HTTP callout expression with a Advanced policy expression that prevents recursion. For information about how you can avoid HTTP callout recursion, see [Avoiding HTTP Callout Recursion](#).

You can also cascade HTTP callouts by configuring policies that each invoke a callout after evaluating previously generated callouts. In this scenario, after one policy invokes a callout, when the NetScaler appliance is parsing the callout before sending the callout to the callout server, a second set of policies can evaluate the callout and invoke additional callouts, which can in turn be evaluated by a third set of policies, and so on. Such an implementation is described in the following example.

First, you could configure an HTTP callout called `myCallout1`, and then configure a responder policy, `Pol1`, to invoke `myCallout1`. Then, you could configure a second HTTP callout, `myCallout2`, and a responder policy, `Pol2`. You configure `Pol2` to evaluate `myCallout1` and invoke `myCallout2`. You bind both responder policies globally.

To avoid HTTP callout recursion, myCallout1 is configured with a unique custom HTTP header called "Request1." Pol1 is configured to avoid HTTP callout recursion by using the Advanced policy expression,

```
1 HTTP.REQ.HEADER("Request1").EQ("Callout Request").NOT.
```

Pol2 uses the same Advanced policy expression, but excludes the .NOT operator so that the policy evaluates myCallout1 when the NetScaler appliance is parsing it. Note that myCallout2 identifies its own unique header called "Request2," and Pol2 includes a Advanced policy expression to prevent myCallout2 from invoking itself recursively.

Example:

```
1 > add policy httpCallout myCallout1
2
3 Done
4
5 > set policy httpCallout myCallout1 -IPAddress 10.102.3.95 -port 80 -
  returnType TEXT -hostExpr
6 "10.102.3.95" -urlStemExpr "\/cgi-bin/check_clnt_from_database.pl\"
  -headers Request1
7 ("Callout Request") -parameters cip(CLIENT.IP.SRC) -resultExpr "HTTP.
  RES.BODY(100)"
8
9 Done
10
11 > add responder policy Pol1 "HTTP.REQ.HEADER(\"Request1\").EQ(\"Callout
  Request\").NOT &&
12 SYS.HTTP_CALLOUT(myCallout1).CONTAINS(\"IP Matched\")" RESET
13
14 Done
15
16 > bind responder global Pol1 100 END -type OVERRIDE
17
18 Done
19
20 > add policy httpCallout myCallout2
21
22 Done
23
24 > set policy httpCallout myCallout2 -IPAddress 10.102.3.96 -port 80 -
  returnType TEXT -hostExpr
25 "\/10.102.3.96\" -urlStemExpr "\/cgi-bin/
  check_clnt_location_from_database.pl\" -headers Request2
26 ("Callout Request") -parameters cip(CLIENT.IP.SRC) -resultExpr "HTTP.
  RES.BODY(200)"
27
28 Done
29
30 > add responder policy Pol2 "HTTP.REQ.HEADER(\"Request2\").EQ(\"Callout
  Request\").NOT &&
31 HTTP.REQ.HEADER(\"Request1\").EQ(\"Callout Request\") && SYS.
```



```
    HTTP_CALLOUT(myCallout2).CONTAINS
32  (\ "APAC\ " ) RESET
33
34  Done
35
36  > bind responder global Pol2 110 END -type OVERRIDE
37
38  Done
```

Avoid HTTP callout recursion

December 21, 2023

Even though the NetScaler appliance does not check for the validity of the HTTP callout request, it parses the request once before it sends the request to the HTTP callout agent. This parsing allows the appliance to treat the callout request as any other incoming request, which in turn allows you to configure several useful NetScaler features (such as integrated caching) to work on the callout request.

However, during this parsing, the HTTP callout request can select the same policy and therefore invoke itself recursively. The appliance detects the recursive invocation and raises an undefined (UNDEF) condition. However, the recursive invocation results in the policy and HTTP callout select counters being incremented by two counts each instead of one count each.

To prevent a callout from invoking itself, you must identify at least one unique characteristic of the HTTP callout request, and then exclude all requests with this characteristic from being processed by the policy rule that invokes the callout. You can do so by including another Advanced policy expression in the policy rule. The expression must precede the `SYS.HTTP_CALLOUT(<name>)` expression so that it is evaluated before the callout expression is evaluated. For example:

```
1  <Expression that prevents callout recursion> OR SYS.HTTP_CALLOUT(<name
   >)
```

When you configure a policy rule in this way, when the appliance generates the request and parses it, the compound rule evaluates to FALSE, the callout is not generated a second time, and the select counters are incremented correctly.

One way by which you can assign a unique characteristic to an HTTP callout request is to include a unique custom HTTP header when you configure the callout. Following is an example of an HTTP callout called “myCallout.” The callout generates an HTTP request that checks whether a client’s IP address is present in a database of blacklisted IP addresses. The callout includes a custom header called “Request,” which is set to the value “Callout Request.” A globally bound responder policy, “Pol1,” invokes the HTTP callout but excludes all requests whose Request header is set to this value, thus

preventing a second invocation of myCallout. The expression that prevents a second invocation is `HTTP.REQ.HEADER("Request").EQ("Callout Request").NOT`.

Example:

```
1 > add policy httpCallout myCallout
2   Done
3
4 > set policy httpCallout myCallout -IPAddress 10.102.3.95 -port 80 -
   returnType TEXT -hostExpr "\"10.102.3.95\"" -urlStemExpr "\"/cgi-bin
   /check_clnt_from_database.pl\"" -headers Request("Callout Request")
   -parameters cip(CLIENT.IP.SRC) -resultExpr "HTTP.RES.BODY(100)"
5   Done
6
7 > add responder policy Pol1 "HTTP.REQ.HEADER(\"Request\").EQ(\"Callout
   Request\").NOT && SYS.HTTP_CALLOUT(myCallout).CONTAINS(\"IP Matched
   \")" RESET
8   Done
9
10 > bind responder global Pol1 100 END -type OVERRIDE
11 Done
```

Note:

You can also configure an expression to check whether the request URL includes the stem expression configured for the HTTP callout. To implement the solution, ensure the HTTP callout agent can respond only to HTTP callouts and not to other requests directed through the appliance. If the HTTP callout agent is an application or Web server that serves other client requests, such an expression prevents the appliance from processing those client requests. Instead, use a unique custom header as described earlier.

Cache HTTP callout responses

December 21, 2023

For improved performance while using callouts, you can use the integrated caching feature to cache callout responses. The responses are stored in an integrated caching content group named `callout-ContentGroup` for a specified time duration.

Note: To cache callout responses, make sure that the integrated caching feature is enabled.

To set the cache duration by using the command line interface

At the command prompt, type:

```
set policy httpCallout <name> -cacheForSecs <secs>
```

Example:

```
1 > set httpcallout httpcallout1 -cacheForSecs 120
```

To set the cache duration by using the configuration utility

1. Navigate to **AppExpert > HTTP Callouts**.
2. In the details pane, select the HTTP callout for which you want to set the cache duration and click **Open**.
3. In the **Configure HTTP Callout** dialog box, specify the **Cache Expiration Time**.
4. Verify that you have entered the correct time duration, and then click **OK**.

Use Case: Filter clients by using an IP blacklist

December 21, 2023

HTTP callouts can be used to block requests from clients that are blacklisted by the administrator. The list of clients can be a publicly known blacklist, a blacklist that you maintain for you organization, or a combination of both.

The NetScaler appliance checks the IP address of the client against the pre-configured blacklist and blocks the transaction if the IP address has been blacklisted. If the IP address is not in the list, the appliance processes the transaction.

To implement this configuration, you must perform the following tasks:

1. Enable responder on the NetScaler appliance.
2. Create an HTTP callout on the NetScaler appliance and configure it with details about the external server and other required parameters.
3. Configure a responder policy to analyze the response to the HTTP callout, and then bind the policy globally.
4. Create an HTTP callout agent on the remote server.

Enabling responder

You must enable responder before you can use it.

To enable responder by using the GUI

1. Make sure that you have installed the responder license.

2. In the configuration utility, expand AppExpert, and right-click **Responder**, and then click **Enable Responder** feature.

Creating an HTTP callout on the NetScaler appliance

Create an HTTP callout, HTTP_Callout, with the parameter settings shown in the following table. For more information about creating an HTTP callout, see [Configuring an HTTP Callout](#) pdf.

Configuring a responder policy and binding it globally

After you configure the HTTP callout, verify the callout configuration, and then configure a responder policy to invoke the callout. While you can create a responder policy in the Policies sub-node and then bind it globally by using the Responder Policy Manager, this demonstration uses the Responder Policy Manager to create the responder policy and bind the policy globally.

To create a responder policy and bind it globally by using

1. Navigate to **AppExpert > Responder**.
2. In the details pane, under **Policy Manager**, click **Policy Manager**.
3. In the **Responder Policy Manager** dialog box, click **Override Global**.
4. Click **Insert Policy**, and then, under **Policy Name**, click **New Policy**.
5. In the **Create Responder Policy** dialog box, do the following:
 - a) In **Name**, type **PolicyResponder1**.
 - b) In **Action**, select **RESET**.
 - c) In **Undefined-Result Action**, select **Global undefined-result** action.
 - d) In **Expression**, type the following Advanced policy expression:

```
1 "HTTP.REQ.HEADER("Request").EQ("Callout Request").NOT && SYS.  
HTTP_CALLOUT(HTTP_Callout).CONTAINS("IP Matched")"
```
 - e) Click **Create**, and then click **Close**.
6. Click **Apply Changes**, and then click **Close**.

Creating an HTTP callout agent on the remote server

You must now create an HTTP callout agent on the remote callout server that will receive callout requests from the NetScaler appliance and respond appropriately. The HTTP callout agent is a script that is different for each deployment and must be written with the server specifications in mind, such as the type of database and the scripting language supported.

Following is a sample callout agent that verifies whether the given IP address is part of an IP blacklist. The agent has been written in the Perl scripting language and uses a MYSQL database.

The following CGI script checks for a given IP address on the callout server.

```
1  #!/usr/bin/perl -w
2  print "Content-type: text/html\n\n";
3      use DBI();
4      use CGI qw(:standard);
5  #Take the Client IP address from the request query
6      my $ip_to_check = param('cip');
7  # Where a MYSQL database is running
8      my $dsn = 'DBI:mysql:BAD_CLIENT:localhost';
9  # Database username to connect with
10     my $db_user_name = 'dbuser';
11 # Database password to connect with
12     my $db_password = 'dbpassword';
13     my ($id, $password);
14 # Connecting to the database
15     my $dbh = DBI->connect($dsn, $db_user_name, $db_password);
16     my $sth = $dbh->prepare(qq{
17     select * from bad_clnt }
18 );
19     $sth->execute();
20     while (my ($ip_in_database) = $sth->fetchrow_array()) {
21
22         chomp($ip_in_database);
23 # Check for IP match
24     if ($ip_in_database eq $ip_to_check) {
25
26         print "\n IP Matched\n";
27
28                                     $sth->finish();
29                                     exit;
30     }
31 }
32
33 print "\n IP Failed\n";
34 $sth->finish();
35 exit;
```

Use Case: ESI support for fetching and updating content dynamically

May 2, 2023

Edge Side Includes (ESI) is a markup language for edge-level dynamic Web content assembly. It helps in accelerating dynamic Web-based applications by defining a simple markup language to describe cacheable and non-cacheable Web page components that can be aggregated, assembled, and delivered at the network edge. By using HTTP callouts on the NetScaler appliance, you can read through the ESI constructs and aggregate or assemble content dynamically.

To implement this configuration, you must perform the following tasks:

1. Enable rewrite on the NetScaler appliance.
2. Create an HTTP callout on the appliance and configure it with details about the external server and other required parameters.
3. Configure a rewrite action to replace the ESI content with the callout response body.
4. Configure a rewrite policy to specify the conditions under which the action is performed, and then bind the rewrite policy globally.

Enabling rewrite

Rewrite must be enabled before it is used on the NetScaler appliance. The following procedure describes the steps to enable the rewrite feature.

To enable rewrite by using the GUI

1. Make sure that you have installed the rewrite license.
2. In the configuration utility, expand AppExpert, and right-click Rewrite, and then click Enable Rewrite feature.

Creating an HTTP Callout on the NetScaler Appliance

For more information about creating an HTTP callout, see [Configuring an HTTP Callout](#).

For more information about the parameter values, see [Parameters and Values for HTTP-Callout-2.pdf](#).

Configuring the Rewrite Action

Create a rewrite action, Action-Rewrite-1, to replace the ESI content with the callout response body. Use the parameter settings shown in the following table.

Table 2. Parameters and Values for Action-Rewrite-1

Parameter	Value
Name	Action-Rewrite-1
Type	Replace
Expression to choose target text reference	“HTTP.RES.BODY(500).AFTER_STR (\”\”).BEFORE_STR (\”\”)”
String expression for replacement text	“SYS.HTTP_CALLOUT(HTTP-Callout-2)”

To configure the rewrite action by using the configuration utility

1. Navigate to **AppExpert > Rewrite > Actions**.
2. In the details pane, click **Add**.
3. In the **Create Rewrite Action** dialog box, in Name, type **Action-Rewrite-1**.
4. In Type, select **REPLACE**.
5. In **Expression** to choose target text reference, type the following Advanced policy expression:

```
1 "HTTP.RES.BODY(500).AFTER_STR("<example>").BEFORE_STR("<example>")"
```

6. In the String expression for replacement text, type the following string expression:

```
1 "SYS.HTTP_CALLOUT(HTTP-Callout-2)"
```

7. Click **Create**, and then click **Close**.

Creating the Rewrite Policy and Binding it Globally

Create a rewrite policy, Policy-Rewrite-1, with the parameter settings shown in the following table. You can create a rewrite policy in the Policies subnode and then bind it globally by using the Rewrite Policy Manager. Alternatively, you can use the Rewrite Policy Manager to perform both these tasks simultaneously. This demonstration uses the Rewrite Policy Manager to perform both tasks.

Table 3. Parameters and Values for Policy-Rewrite-1

Parameter	Value
Name	Policy-Rewrite-1
Action	Action_Rewrite-1
Undefined Result Action	-Global undefined-result action-
Expression	“HTTP.REQ.HEADER(“Name”).CONTAINS (“Callout”).NOT”

To configure a rewrite policy and bind it globally by using the configuration utility

1. Navigate to **AppExpert > Rewrite**.
2. In the details pane, under **Policy Manager**, click **Rewrite Policy Manager**.
3. In the **Rewrite Policy Manager** dialog box, click **Override Global**.
4. Click **Insert Policy**, and then, in the **Policy Name** column, click **New Policy**.
5. In the **Create Rewrite Policy** dialog box, do the following:
 1. In Name, type Policy-Rewrite-1.
 - a) In Action, select Action-Rewrite-1.
 - b) In Undefined-Result Action, select Global undefined-result action.
 - c) In Expression, type the following Advanced policy expression:

```
1 "HTTP.REQ.HEADER("Name").CONTAINS("Callout").NOT"
```
6. Click **Apply Changes**, and then click **Close**.

Use Case: Access control and authentication

May 2, 2023

In high security zones, it is mandatory to externally authenticate the user before a resource is accessed by clients. On the NetScaler appliance, you can use HTTP callouts to externally authenticate the user by evaluating the credentials supplied. In this example, the assumption is that the client is sending the user name and password through HTTP headers in the request. However, the same information could be fetched from the URL or the HTTP body.

To implement this configuration, you must perform the following tasks:

1. Enable the responder feature on the NetScaler appliance.
2. Create an HTTP callout on the appliance and configure it with details about the external server and other required parameters.
3. Configure a responder policy to analyze the response, and then bind the policy globally.
4. Create a callout agent on the remote server.

Enabling Responder

The responder feature must be enabled before it is used on the NetScaler appliance.

To enable responder by using the configuration utility

1. Make sure that the responder license is installed.
2. In the configuration utility, expand AppExpert, and right-click Responder, and then click **Enable Responder feature**.

Creating an HTTP callout on the NetScaler appliance

Create an HTTP callout, HTTP-Callout-3, with the parameter settings shown in the following table. For more information about creating an HTTP callout, see [Configuring an HTTP Callout](#).

Table 1. Parameters and Values for HTTP-Callout-3

Parameter	Value	Name
Name	Policy-Responder-3	

Parameter

Value

Name

HTTP-Callout-3

Server to receive callout request:

IP Address

10.103.9.95

Port

80

Request to send to the server:

Method

GET

Host Expression

10.102.3.95

URL Stem Expression

“/cgi-bin/authenticate.pl”

Headers:

Name

Request

Value-expression

Callout Request

Parameters:

Name

Username

Value-expression

HTTP.REQ.HEADER(“Username”).VALUE(0)

Name

Password

Value-expression

HTTP.REQ.HEADER(“Password”).VALUE(0)

Server Response:

Return Type

TEXT

Expression to extract data from the response

HTTP.RES.BODY(100)

Creating a Responder Policy to Analyze the Response

Create a responder policy, Policy-Responder-3, that will check the response from the callout server and RESET the connection if the source IP address has been blacklisted. Create the policy with the

parameters settings shown in the following table. While you can create a responder policy in the Policies subnode and then bind it globally by using the Responder Policy Manager, this demonstration uses the Responder Policy Manager to create the responder policy and bind the policy globally.

Table 2. Parameters and Values for Policy-Responder-3

Parameter	Value
Name	Policy-Responder-3
Action	RESET
Undefined-Result-Action	-Global undefined-result action-
Expression	“HTTP.REQ.HEADER(\“Request\”).EQ(\“Callout Request\”).NOT && SYS.HTTP_CALLOUT(HTTP-Callout-3).CONTAINS(\“Authentication Failed\”)”

To create a responder policy and bind it globally by using the configuration utility

1. Navigate to **AppExpert > Responder**.
2. In the details pane, under **Policy Manager**, click **Responder Policy Manager**.
3. In the **Responder Policy Manger** dialog box, click **Override Global**.
4. Click **Insert Policy**, and then, in the **Policy Name** column, click **New Policy**.
5. In the **Create Responder Policy** dialog box, do the following:
 - a) In Name, type Policy-Responder-3.
 - b) In Action, select **RESET**.
 - c) In Undefined-Result Action , select Global undefined-result action.
 - d) In the Expression text box, type:

```
1 "HTTP.REQ.HEADER(\"Request\").EQ(\"Callout Request\").NOT && SYS.  
HTTP_CALLOUT(HTTP-Callout-3).CONTAINS(\"Authentication Failed  
\")"
```

- a) Click **Create**, and then click **Close**.
6. Click **Apply Changes**, and then click **Close**.

Creating an HTTP Callout Agent on the Remote Server

You now need to create an HTTP callout agent on the remote callout server. The HTTP callout agent receives callout requests from the NetScaler appliance and responds appropriately. The callout agent is a script that is different for each deployment and must be written with server specifications in mind, such as the type of database and the scripting language supported.

Following is sample callout agent pseudo-code that verifies whether the supplied user name and password are valid. The agent can be implemented in any programming language of your choice. The pseudo-code is to be used only as a guideline for developing the callout agent. You can build additional functionality into the program.

To verify the supplied user name and password by using pseudo-code

1. Accept the user name and password supplied in the request and format them appropriately.
2. Connect to the database that contains all the valid user names and passwords.
3. Check the supplied credentials against your database.
4. Format the response as required by the HTTP callout.
5. Send the response to the NetScaler appliance.

Use Case: OWA-based spam filtering

May 2, 2023

Spam filtering is the ability to dynamically block emails that are not from a known or trusted source or that have inappropriate content. Spam filtering requires an associated business logic that indicates that a particular kind of message is spam. When the NetScaler appliance processes Outlook Web Access (OWA) messages based on the HTTP protocol, HTTP callouts can be used to filter spam.

You can use HTTP callouts to extract any portion of the incoming message and check with an external callout server that has been configured with rules that are meant for determining whether a message is legitimate or spam. In case of spam email, for security reasons, the NetScaler appliance does not notify the sender that the email is marked as spam.

The following example conducts a very basic check for various listed keywords in the email subject. These checks can be more complex in a production environment.

To implement this configuration, you must perform the following tasks:

1. Enable the responder feature on the NetScaler appliance.

2. Create an HTTP callout on the NetScaler appliance and configure it with details about the external server and other required parameters.
3. Create a responder policy to analyze the response, and then bind the policy globally.
4. Create a callout agent on the remote server.

Enabling responder

The responder feature must be enabled before it can be used on the NetScaler appliance.

To enable responder by using the GUI

1. Make sure that the responder license is installed.
2. In the configuration utility, expand AppExpert, and right-click **Responder**, and then click **Enable Responder** feature.

Creating an HTTP callout on the NetScaler appliance

Create an HTTP callout, HTTP-Callout-4, with the parameter settings shown in the following table. For more information about creating an HTTP callout, see [Configuring an HTTP Callout](#).

For more information, see [Parameters and Values for HTTP-Callout-4](#) pdf.

Creating a responder action

Create a responder action, Action-Responder-4. Create the action with the parameter settings shown in the following table.

Parameter	Value
Name	Action-Responder-4
Type	Respond with
Target	"""HTTP/1.1 200 OK\r\nServer: Microsoft-IIS/6.0\r\nX-Powered-By: ASP.NET\r\nContent-Length: 0\r\nMS-WebStorage: 6.5.6944\r\nCache-Control: no-cache\r\n\r\n"""

Table 2. Parameters and Values for Action-Responder-4

To create a responder action by using the configuration utility

1. Navigate to **AppExpert > Responder > Actions**.
2. In the details pane, click **Add**.
3. In the **Create Responder Action** dialog box, in Name, type **Action-Responder-4**.
4. In Type, click **Respond with**.
5. In Target, type:

```
1  "\"HTTP/1.1 200 OK\r\nServer: Microsoft-IIS/6.0\r\nX-Powered-By:
    ASP.NET\r\nContent-Length: 0\r\nMS-WebStorage: 6.5.6944\r\
    nCache-Control: no-cache\r\n\r\n\""
```

6. Click **Create**, and then click **Close**.

Creating a Responder Policy to Invoke the HTTP Callout

Create a responder policy, Policy-Responder-4, that will check the request body and, if the body contains the word “

subject,” invoke the HTTP callout to verify the email. Create the policy with the parameter settings shown in the following table. While you can create a responder policy in the Policies subnode and then bind it globally by using the Responder Policy Manager, this demonstration uses the Responder Policy Manager to create the responder policy and bind it globally.

Parameter	Value
Name	Policy-Responder-4
Action	Action-Responder-4
Undefined-Result-Action	-Global undefined-result action-
Expression	“HTTP.REQ.BODY(1000).CONTAINS(“urn:schemas:httpmail:subject”) && SYS.HTTP_CALLOUT(HTTP-Callout-4)”

To create a responder policy by using the configuration utility

1. Navigate to **AppExpert > Responder**.
2. In the details pane, under **Policy Manager**, click **Responder policy manager**.
3. In the **Responder Policy Manger** dialog box, click **Override Global**.

4. Click **Insert Policy**, and then, in the **Policy Name** column, click **New Policy**.
5. In the **Create Responder Policy** dialog box, do the following:
 - a) In Name, type **Policy-Responder-4**.
 - b) In Action, click **Action-Responder-4**.
 - c) In Undefined-Result Action, click **Global undefined-result** action.
 - d) In the **Expression** text box, type:

```
1 "HTTP.REQ.BODY(1000).CONTAINS(\"urn:schemas:httpmail:subject\n\") && SYS.HTTP_CALLOUT(HTTP-Callout-4)"
```
 - e) Click **Create**, and then click **Close**.
6. Click **Apply Changes**, and then click **Close**.

Creating an HTTP callout agent on the remote server

You will now need to create an HTTP callout agent on the remote callout server. The HTTP callout agent receives callout requests from the NetScaler appliance and responds accordingly. The callout agent is a script that is different for each deployment and must be written with server specifications in mind, such as the type of database and the scripting language supported.

The following pseudo-code provides instructions for creating a callout agent that checks a list of words that are generally understood to indicate spam mails. The agent can be implemented in any programming language of your choice. The pseudo-code is to be used only as a guideline for developing the callout agent. You can build additional functionality into the program.

To identify spam email by using pseudo-code

1. Accept the email subjecta provided by the NetScaler appliance.
2. Connect to the database that contains all the terms against which the email subject is checked.
3. Check the words in the email subject against the spam word list.
4. Format the response as required by the HTTP callout.
5. Send the response to the NetScaler appliance.

Use Case: Dynamiccontent switching

September 21, 2020

This use case provides dynamic content switching by using an HTTP callout to get the name of the load balancing virtual server to which the request is forwarded.

1. Add a content switching virtual server.

```
1 add cs vserver cs_vserver1 HTTP 10.102.29.196 80
```

2. Create an HTTP callout.

```
1 add policy httpCallout http_callout1
```

3. Configure the HTTP callout to respond with the name of the load balancing virtual server from a request that contains the client IP address in the HTTP header “X-CLIENT-IP”.

```
1 > set policy httpCallout http_callout1 -IPAddress 10.217.14.23 -  
port 80 -returnType TEXT -hostExpr "www.get-lbvip.com" -  
urlStemExpr "\/index.html\" -headers X-CLIENT-IP(CLIENT.IP.  
SRC) -resultExpr "HTTP.RES.BODY(1000).AFTER_STR(\"<lbvip>\").  
BEFORE_STR(\"<lbvip\")"
```

4. Configure the content switching action to retrieve the callout response.

```
1 add cs action cs_action1 -targetVserverExpr 'SYS.HTTP_CALLOUT(  
http_callout1)'
```

Note:

You must bind a load balancing virtual server to the content switching virtual server to account for:

- The non-availability of the load balancing virtual server that the callout resolves to.
- A UNDEF condition that results from the execution of the callout.

```
1 > bind cs vserver cs_vserver1 -lbvserver default_lbvip
```

5. Configure the content switching policy.

```
1 add cs policy cs_policy1 -rule true -action cs_action1
```

6. Binding the content switching policy to the content switching virtual server.

```
1 bind cs vserver cs_vserver1 -policyName cs_policy1 -priority 10
```

Pattern sets and data sets

January 5, 2023

Policy expressions for string matching operations on a large set of string patterns tend to become long and complex. Resources consumed by the evaluation of such complex expressions are significant in

terms of processing cycles, memory, and configuration size. You can create simpler, less resource-intensive expressions by using pattern matching.

Depending on the type of patterns that you want to match, you can use one of the following features to implement pattern matching:

- A pattern set is an array of indexed patterns used for string matching during default syntax policy evaluation. Example of a pattern set: image types {svg, bmp, PNG, GIF, tiff, jpg}.
- A data set is a specialized form of pattern set. It is an array of patterns of types number (integer), IPv4 address, or IPv6 address.

The difference between a `patset` and a `dataset` is that in a `dataset` we compare the boundary condition. For example, if the input string is 1.1.1.11 and supposes that the 1.1.1.1 pattern is bound to a `patset` and a `dataset` of IPv4 type, then a `patset` and `dataset` is configured to check whether the IP address is present in the request. After evaluation, `patset` returns that the 1.1.1.1 is present in the input, but `dataset` evaluation is false. This is because of a boundary check in which the IP address is not been part of some other IP address. It means, after the bound pattern there must not be any integer.

Often, you can use either pattern sets or data sets. However, in cases where you want specific matches for numerical data or IPv4 and IPv6 addresses, you must use data sets.

Notes:

- Pattern sets and data sets can be used only in default syntax policies.
- From release 13.1 build 42.x and later, you can bind 50000 patterns to a pattern set. With the pattern set file, only 10000 patterns can be bound to a pattern set. Also, if the pattern set is used in streaming, then only 5000 patterns can be bound to that pattern set. A pattern set for streaming is used in the rewrite action search parameter, HTTP body, or TCP payload based expression.

How string matching works with pattern sets and data sets

May 2, 2023

A pattern set or data set contains a set of patterns, and each pattern is assigned a unique index. When a policy is applied to a packet, an expression identifies a string to be evaluated, and the operator compares the string to the patterns defined in the pattern set or data set until a match is found or all patterns have been compared. Then, depending on its function, the operator returns either a boolean value that indicates whether or not a matching pattern was found or the index of the pattern that matches the string.


Note: This topic explains the working of a pattern set. Data sets work the same way. The only difference between pattern sets and data sets is the type of patterns defined in the set.

Consider the following use case to understand how patterns can be used for string matching.


You want to determine whether the URL suffix (target text) contains any of the image file extensions. Without using pattern sets, you would have to define a complex expression, as follows:

```
1 HTTP.REQ.URL.SUFFIX.CONTAINS("svg") || HTTP.REQ.URL.SUFFIX.CONTAINS("
  bmp") || HTTP.REQ.URL.SUFFIX.CONTAINS("png") ||
2 HTTP.REQ.URL.SUFFIX.CONTAINS("gif") || HTTP.REQ.URL.SUFFIX.CONTAINS("
  tiff") || HTTP.REQ.URL.SUFFIX.CONTAINS("jpg")
```

If the URL has a suffix of “jpg,” with the above compound expression, the NetScaler appliance has to iterate through the entire compound expression sequentially, from one sub expression to the next, to determine that the request refers to a jpg image. The following figure shows the steps in the process.

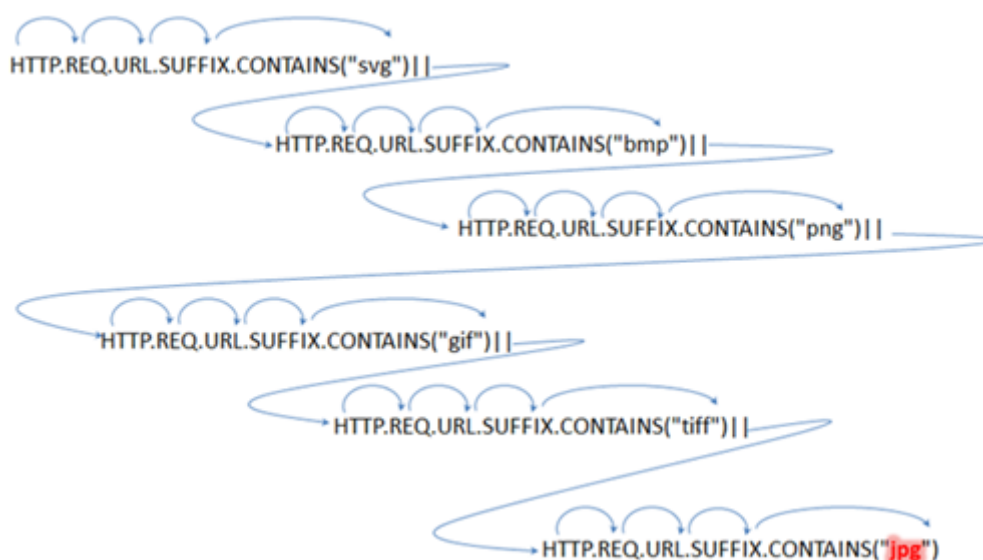

When a compound expression includes hundreds of sub expressions, the above process is resource intensive. A better alternative is an expression that invokes a pattern set, as shown in the following figure.

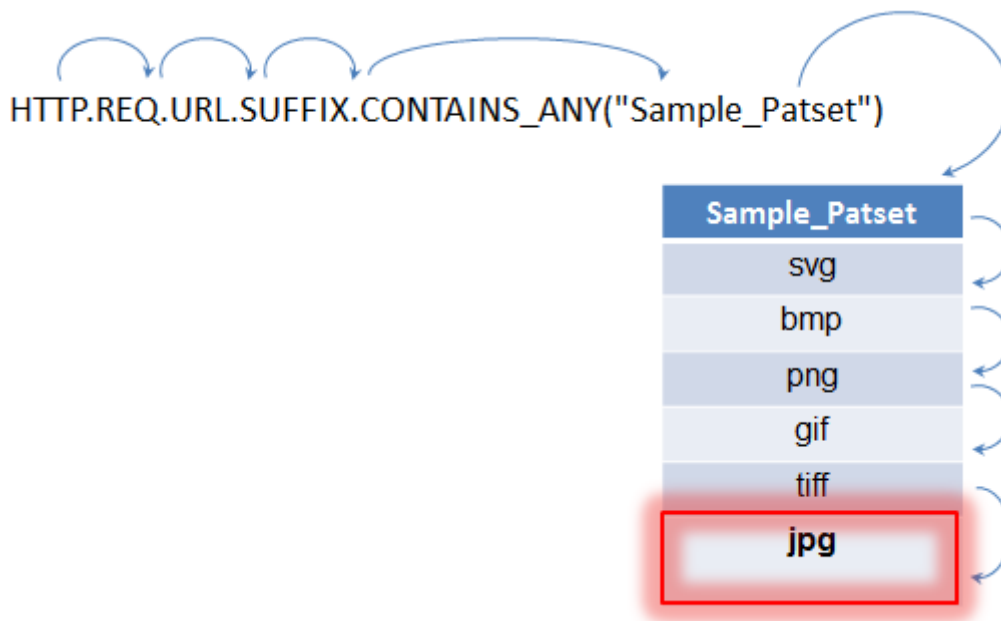

During policy evaluation as shown above, the operator (CONTAINS_ANY) compares the string identified in the request with the patterns defined in the pattern set until a match is found. With the Sample_Patset expression, the multiple iterations through six sub expressions are reduced to just one.

By eliminating the need to configure compound expressions that perform string matching with multiple OR operations, pattern sets or data sets simplify configuration and accelerate processing of requests and responses.

Configure a pattern set

December 22, 2023

To configure a pattern set, you must specify the strings that are to serve as patterns. You can manually assign a unique index value to each of these patterns, or you can allow the index values to be assigned automatically.

Note:

Pattern sets are case sensitive (unless you specify the expression to ignore case). Therefore, the string pattern "product1," for example, is not the same as the string pattern "Product1."

Points to remember about index values:

- You cannot bind the same index value to more than one pattern.

- An automatically assigned index value is one number larger than the highest index value of the existing patterns within the pattern set. For example, if the highest index value of existing patterns in a pattern set is 104, the next automatically assigned index value is 105.
- If you do not specify an index for the first pattern, index value 1 is automatically assigned to that pattern.
- Index values are not regenerated automatically if one or more patterns are deleted or modified. For example, if the set contains five patterns, with indexes from 1 through 5, and if the pattern with an index of 3 is deleted, the other index values in the pattern set are not automatically regenerated to produce values from 1 through 4.
- The maximum index value that can be assigned to a pattern is 4294967290. If that value is already assigned to a pattern in the set, you must manually assign index values to any newly added patterns. An unused index value that is lower than a currently used value cannot be assigned automatically.

Starting with NetScaler 14.1-12.x release, in addition to using a static string, you can also use an expression to derive the pattern set name and associate the pattern set in policy expression methods like `CONTAINS_ANY`, `EQUALS_ANY`, `STARTSWITH_ANY`. The pattern set name is dynamically derived from the expression and therefore reduces the number of policies that must be created for multiple pattern sets. By creating a dynamic pattern set, you can avoid repetitive configuration.

For example, in releases prior to NetScaler 14.1-12.x release, if there are four pattern sets, you have to create four policies to associate the four pattern sets. From NetScaler 14.1-12.x release onwards, in addition to using a static string, you can also use an expression to derive the pattern set name. The expression helps in reducing the configuration.

For the expression to identify the pattern set as part of its evaluation, you must configure the pattern set as dynamic using the `dynamic` keyword. The expression considers only those pattern sets that are configured as dynamic. If you have not configured the pattern set as dynamic at the time of pattern set creation, you can set it later as well. You can set dynamic keyword only for non-default pattern sets.

As part of the expression evaluation the following checks are performed:

- If there are no pattern sets that match the expression, then it is considered as an error and the error counter is incremented.
- If there is a pattern set name that matches the expression but it is not marked as dynamic, then it is considered as an error and the error counter is incremented.

Configure a pattern set by using the command line interface

At the command prompt, do the following:

1. Create a pattern set.

```
add policy patset <name>
```

Example:

```
add policy patset samplepatset
```

1. Bind patterns to the pattern set.

```
bind policy patset <name> <string> [-index <positive_integer>][-charset ( ASCII | UTF_8 )] [-comment <string>]
```

Example:

```
bind policy patset samplepatset product1 -index 1 -comment short  
description about the pattern bound to the pattern set
```

Note: Repeat this step for all the patterns you want to bind to the pattern set.

1. Verify the configuration.

```
show policy patset <name>
```

Configure a pattern set by using the configuration utility

1. Navigate to **AppExpert > Pattern Sets**.
2. In the details pane, click **Add** to open the **Create Pattern Set** dialog box.
3. Specify a name for the pattern set in the Name text box.
4. Under Specify Pattern, type the first pattern and, optionally, specify values for the following parameters:
 - Treat back slash as escape character—Select this check box to specify that any backslash characters that you might include in the pattern are to be treated as escape characters.
 - Index—A user assigned index value, from 1 through 4294967290.
5. Verify that you have entered the correct characters, and then click **Add**.
6. Repeat steps 4 and 5 to add more patterns, and then click **Create**.

Configure a dynamic pattern set**Configure a dynamic pattern set using the CLI**

At the command prompt, type the following commands:

1. Create pattern sets.

```
add policy patset <name> - dynamic yes
```

2. Bind the patterns set to a pattern set.

```
bind patset <name> <string>
```

3. Add a policy and use an expression instead of pattern set name.

```
add responder policy <name> <rule> <action>
```

4. Verify the configuration.

```
show patset -dynamicOnly
```

Example for configuring dynamic pattern set using the CLI

Create CompA_pat and CompB_pat as the two dynamic pattern sets.

```
1 add policy patset CompA_pat -dynamic yes
2 bind policy patset CompA_pat stringA
3 add policy patset CompB_pat -dynamic yes
4 bind policy patset CompB_pat string B
```

Add a policy with an expression that derives the pattern set name dynamically:

```
add responder policy samplepolicy1 http.req.hostname.contains_any("
Comp"+ http.req.url.path.get(1)+ "_pat")reset
```

Consider that `http://www.citrix.com/A/home.html` or `http://www.google.com/B/test.html` are the incoming URLs. Based on the incoming URL, the expression “Comp”+ `http.req.url.path.get(1)` + “_pat”, determines the pattern set, CompA_pat or CompB_pat dynamically at the run time. You need not create two separate policies for CompA_pat and CompB_pat.

Verify the configuration using the show command:

```
1 > show patset -dynamicOnly
2 1) Patset: CompA_pat
3 2) Patset: CompB_pat
4 Done
```

Configure a dynamic pattern set using the GUI

1. Navigate to **AppExpert > Pattern Sets**.
2. Click **Add** to open the **Create Pattern Set** dialog box.
3. Specify a name for the data set in the **Name** text box.
4. Click **Insert** and specify the pattern in the Pattern field. Optionally, specify a value for the Index. Index is a user assigned value, from 1 through 4294967290.
5. Verify that you have entered the correct characters, and then click **Insert**.
6. Repeat steps 4 and 5 to add more patterns.
7. Select the **Dynamic** check-box and then click **Create**.

8. Navigate to **AppExpert > Responder > Policies > Add**.
9. Create an expression that can derive the pattern set.
10. Fill in the other mandatory fields and click Create.

Set, unset, or remove a dynamic pattern set

To set a non default pattern set as dynamic:

```
> set patset <name> -dynamic yes
```

Example:

```
1 > set patset CompA_pat -dynamic yes
2 Done
```

To unset a non default pattern set as dynamic

```
> unset patset <name> -dynamic
```

Example:

```
1 > unset patset CompA_pat -dynamic
2 Warning: [Dynamic attribute turned off. Expressions using this patset
or dataset dynamically will not work.]
3 Done
```

To remove a dynamic pattern set

```
> rm patset <name>
```

Example:

```
1 > rm patset CompA_pat
2 Warning: [Dynamic patset or dataset removed. Expressions using this
patset or dataset dynamically will not work.]
3 Done
```

Note:

When you unset or remove a dynamic patset, the expression that is using this pattern set does not work.

Configure file-based pattern sets

The NetScaler appliance supports file-based pattern sets.

Configure file-based pattern sets by using the CLI

At the command prompt, type the following commands:

- Import a new pattern set file into the NetScaler appliance.

```
1 import policy patsetfile <src> <name> -delimiter <char> -charset  
  <ASCII | UTF_8>
```

Example:

```
1 import policy patsetfile local:test.csv clientids_list -  
  delimiter ,
```

You can import a file from a local device, HTTP server, or FTP server. To add the file from your local device, the file must be available in `/var/tmp` location.

- Add a pattern set file to the packet engine.

```
1 add policy patsetfile <patset filename>
```

Example:

```
1 add policy patsetfile clientids_list
```

- Update an existing pattern set file on the NetScaler appliance.

```
1 update policy patsetfile <patset filename>
```

Example:

```
1 update policy patsetfile clientids_list
```

- Bind patterns to the pattern set.

```
1 add policy patset <patset name> -patsetfile <patset filename>
```

Example:

```
1 add policy patset clientid_patset -patsetfile clientids_list
```

- Verify the configuration.

```
1 show policy patsetfile clientids_list  
2  
3 Name: clientids_list  
4 Patset Name: clientid_patset  
5 Number of Imported Patterns: 8  
6 Number of Bound Patterns: 8  
7 (All the patterns bound successfully)  
8  
9 Done
```


Configure file-based pattern sets by using the GUI

1. Navigate to **AppExpert-> Pattern Set Files**.
2. In the **Imported** pane, click **Import**.
3. In the **Configure Policy Patset File** page, select the file you want to import, and click **OK**.
4. Select the imported file, and click **Add**.
5. In the **Create Policy Patset File** page, enter the details, and click **Create** to add a policy pattern set.

Configure a data set

December 21, 2023

To configure a data set, you must specify the strings that server as a pattern, assign a type (number, IPv4 address, or IPv6 address) and configure the dataset range. You can manually assign a unique index value to the pattern, or you can allow the index values to be assigned automatically. Dataset is not related to HTTP or any 7-layer protocol. It works only on text or string. There are different types of dataset such as NUM, ULONG, IPv4, IPv6, MAC, DOUBLE. You can select a type and define the dataset range based on the specified type.

Note:

Policy data sets are case sensitive (unless you specify the expression to ignore case). Therefore, the MAC address `ff:ff:ff:ff:ff:ff` for example, is not the same as the MAC address `FF:FF:FF:FF:FF:FF`.

The rules applied for index values of data sets are similar to pattern sets. For information about index values, see [Configuring a Pattern Set](#).

Starting with NetScaler release 14.1-12.x, in addition to using a static string, you can use an expression to bind a data set with a policy. The data set name is dynamically derived from the expression and therefore reduces the number of policies that must be created for multiple data sets. By creating a dynamic data set, you can avoid repetitive configuration.

Example: In releases prior to NetScaler 14.1-12.x release, if there are four data sets, you have to create four policies to bind the four data sets. From the release NetScaler 14.1-12.x onwards, you can use an expression instead of the data set name to bind with the policy. As part of the expression evaluation, all four data sets are evaluated and the data set name is derived. So, all the four data sets are bound to one policy using the expression.

The expression evaluation process of dynamic data sets is similar to that of pattern sets. For more information about expression evaluation, see [Configuring a Pattern Set](#).

Configure a data set

Complete the following steps to configure a data set:

1. Add a policy dataset
2. Bind pattern to a policy dataset
3. Add a policy expression
4. Verify the policy configuration

Add a policy dataset

At the command prompt, do the following:

```
add policy dataset <name> <type>
```

Example:

```
add policy dataset ds1 ipv4 -comment numbers
```

Bind a pattern to the data set

At the command prompt, type:

```
bind policy dataset <name> <value> [-index <positive_integer>] [-endRange <string>] [-comment <string>]
```

Example:

```
bind policy dataset ds1 1.1.1.1 -endRange 1.1.1.10 -comment short  
description about the pattern bound to the data set
```

Note:

You must repeat this step for all the patterns you want to bind to the data set. You can bind only up to 5000 patterns to a dataset.

And, a dataset range must not overlap with other ranges bound to a dataset and cannot include single values bound to the dataset. If you bind a dataset with an overlapping range results in an error.

Example:

```
1 add policy dataset ip_set ipv4
2 Done
3 bind policy dataset ip_set 2.2.2.25
4 Done
5 bind policy dataset ip_set 2.2.2.20 -endRange 2.2.2.30
```

```
6 ERROR: The range overlaps an existing range or includes a value bound
to the dataset.
```

A value is considered to be in the dataset if it is either equal to a single value bound to the data set or is between the lower-value and upper-value (lower-value <= value && value <- upper-value), for a range bound to the data set.

Use policy expression in a policy data set

At the command prompt, type:

```
add policy expression exp1 http.req.body(100).contains_any("ds1")
```

Where,

The expression checks whether there is any pattern (or pattern within the range) bound to the dataset ds1 is present in the first 100 bytes of the HTTP request body.

Verify dataset configuration

At the command prompt, type:

```
show policy dataset ds1
```

Example:

```
1 > show policy dataset ds1
2     Dataset:      ds1
3     Type:        IPV4
4 1)    Bound Dataset Range from: 1.1.1.1      through: 1.1.1.10
        Index:    1
```

Configure a dynamic data set

Configure a dynamic data set using the CLI

At the command prompt, type the following commands:

1. Create data sets.

```
add policy dataset <name> - dynamic yes
```

Example:

```
1 add policy dataset CompA_data -dynamic yes
2 add policy dataset CompB_data -dynamic yes
```

2. Bind the data set to a policy.

```
bind policy dataset <name> <string>
```

Example:

```
1 bind policy dataset CompA_data stringA
2 bind policy patset CompB_data string B
```

3. Add a policy and use an expression instead of a data set name.

```
add responder policy <name> <rule> <action>
```

Example:

```
1 add responder policy samplepolicy1 http.req.hostname.contains_any(
  "Comp" + http.req.url.path.get(1) + "_pat") reset
```

4. Verify the configuration.

```
> show dataset -dynamicOnly
```

Example:

```
1 > show dataset -dynamicOnly
2 1) Dataset: CompA_data
3 2) Dataset: CompB_data
4 Done
```

Configure a dynamic data set using the GUI

1. Navigate to **AppExpert > Data Sets**.
2. Click **Add** to open the **Create Data Set** dialog box.
3. Specify a name for the data set in the **Name** text box.
4. Click **Insert** and specify a value in the **Data** field. 1. Optionally, specify an Index. Index is a user assigned value, from 1 through 4294967290.
5. Verify that you have entered the correct characters, and then click **Insert**.
6. Repeat steps 4 and 5 to add more values.
7. Select the Dynamic check-box and then click **Create**.
8. Navigate to **AppExpert > Responder > Policies > Add**.
9. Create an expression that can derive the data set.
10. Add detail in the other mandatory fields and click **Create**.

Set, unset, or remove a dynamic data set

To set a data set as dynamic:

```
> set dataset <name> -dynamic yes
```

Example:

```
> set dataset CompA_data -dynamic yes
```

To unset a data set as dynamic:

```
> unset dataset <name> -dynamic
```

Example:

```
1 > unset dataset CompA_data -dynamic
2 Warning: [Dynamic attribute turned off. Expressions using this patset
  or dataset dynamically will not work.]
3 Done
```

To remove a dynamic pattern set:

```
> rm dataset <name>
```

Example:

```
1 > rm dataset CompA_pat
2 Warning: [Dynamic patset or dataset removed. Expressions using this
  patset or dataset dynamically will not work.]
3 Done
```

Note:

When you unset or remove a dynamic data set, the expression that is using the data set does not work.

Configure a data set by using the configuration utility

Follow the steps given below to configure a policy dataset:

1. Navigate to **AppExpert > Data Sets**.
2. In the details pane, under Data Sets, click **Add**.
3. In the **Configure Data Set** page, set the following parameters.
 - a) Name. Name of the policy data set.
 - b) Type. Type of value to bind to the dataset.

Configuring data set

4. Click **Insert** to bind the dataset value of specific type.
 - a) Value. Value of the specified type associated with the dataset.
 - b) Index. The index value of the dataset.

- c) End range. The dataset entry. This is a range <value> to <end_range>.
- d) Comments. A short description about the data set.

dataset binding

5. Click **Insert** and **Close**.
6. Enter comments.
7. Click **Create** and **Close**.

CIDR subnet notation in IPv4 and IPv6 addresses for policy dataset

The Policy datasets for IPv4 and IPv6 address allow the bound value to be subnets using the CIDR notation. The CIDR notation specifies the address and the range of the subnet. CIDR notation <address>/<n>, where <address> is the first address in the subnet and <n> is an integer specifying the number of left-most bits set in the subnet mask, which defines the range of the subnet.

For example, 192.128.0.0/10 represents an IPv4 subnet starting at address 192.129.0.0 with a mask 0xFFC0000 (255.192.0.0).

Example:

```
1 add policy dataset ds1 ipv4
2 bind policy dataset ds1 192.128.0.0/10
3 show policy dataset ds1
4     Dataset: ds1
5     Type: IPV4
6 Bound Dataset Value: 192.128.0.0/10 Index: 1 Comment: Subnet range from
    192.128.0.0 through 192.191.255.255
```

An example to use this dataset in an expression:

```
1 add responder policy resp_ipv4_pol client.ip.src.typecast_text_t.
    equals_any("ds1") drop
```

Example of an IPv6 subnet:

An example of an IPv6 subnet would be 2001:db8:123::/56, which starts at address 2001:db8:123:: with a mask FFFF:FFFF:FFFF:FF00::

```
1 add policy dataset ds2 ipv6
2 bind policy dataset ds2 2001:db8:123::/56
3 show policy dataset ds2
4     Dataset: ds2
5     Type: IPV61
6 Bound Dataset Value: 2001:db8:123::/56 Index: 1 Comment: Subnet range
    from 2001:db8:123:: through 2001:db8:123:ff:ffff:ffff:ffff:ffff
```

The starting address of the subnet will be determined by the specified address masked by the subnet mask. A warning is issued if the specified address does not match the resulting starting address.

Example:

```
1 bind policy dataset ds1 192.168.0.0/10
2 Warning: Starting subnet address masked using subnet mask to create new
  starting address [192.128.0.0]
3 show policy dataset ds1
4   Dataset: ds1
5   Type: IPV4
6 Bound Dataset Value:192.168.0.0/10 Index: 1 Comment: Subnet range from
  192.128.0.0 through 192.191.255.255
```

An example to use this dataset in an expression:

```
1 add responder policy resp_ipv6_pol client.ipv6.src.typecast_text_t.
  equals_any("ds2") drop
```

Use pattern sets and data sets

December 21, 2023

Advanced policy expressions that take pattern sets or data sets as an argument can be used to perform string matching operations.

The usage is as follows:

```
1 <text>.<operator>("<name>")
```

where,

- `<text>` is the expression that identifies a string in a packet. Example: HTTP.REQ.HEADER("Host").
- `<operator>` is one of the operators described in the [Pattern Set Types table](#) pdf.

For sample usage, see [Sample Usage](#).

Sample usage

September 21, 2020

To understand the usage of pattern sets in expressions, consider the example of a pattern set named "imagetypes."

Patterns	Index value
svg	1
bmp	2
png	3
gif	4
tiff	5
jpg	6

Table 1. Pattern set “imagentypes”

Example 1: Determine whether the suffix of an HTTP request is one of the file extensions defined in the “imagentypes” pattern set.

- **Expression.** `HTTP.REQ.URL.SUFFIX.EQUALS_ANY(“imagentypes”)`
- **Sample URL.** `http://www.example.com/homepageicon.jpg`
- **Result.** TRUE

Example 2: Determine whether the suffix of an HTTP request is one of the file extensions defined in the “imagentypes” pattern set, and return the index of that pattern.

- **Expression.** `HTTP.REQ.URL.SUFFIX.EQUALS_INDEX(“imagentypes”)`
- **Sample URL.** `http://www.example.com/mylogo.png`
- **Result.** 4 (The index value of the pattern “gif”.)

Example 3: Use the index value of a pattern to determine whether the URL suffix is within a specified index-value range.

- **Expression.** `HTTP.REQ.URL.SUFFIX.EQUALS_INDEX(“imagentypes”).GE(3) && HTTP.REQ.URL.SUFFIX.EQUALS(“imagentypes”).LE(5)`
- **Sample URL.** `http://www.example.com/mylogo.png`
- **Result.** TRUE (The index value of gif file types is 4.)

Example 4: Implement one set of policies for file extensions bmp, jpg, and png, and a different set of policies for gif, tiff, and svg files.

An expression that returns the index of a matched pattern can be used to define traffic subsets for a web application. The following two expressions could be used in content switching policies for a content switching virtual server:

- `HTTP.REQ.URL.SUFFIX.EQUALS_INDEX(“imagentypes”).LE(3)`
- `HTTP.REQ.URL.SUFFIX.EQUALS_INDEX(“imagentypes”).GE(4)`

Variables

May 2, 2023

Variables are named objects that store information in the form of tokens. These tokens are used within and across different transactions on the NetScaler Appliance for internal computation and policy processing.

The NetScaler appliance supports creation of variables of the following types:

- **Singleton variables.** Can have a single value of one of the following types: `ulong` and `text` (max-size). The `ulong` type is an unsigned 64-bit integer, the `text` type is a sequence of bytes, and max-size is the maximum number of bytes in the sequence.
- **Map variables.** Maps hold values associated with keys: each key-value pair is called a map entry. The key for each entry is unique within the map. Maps are specified as follows:

`map (key_type, value_type, max-values).`

where,

- `key_type` is the data type of the key. It is of type `text` (max-size).
- `value_type` is the data type of the values of the map. It can be of type `ulong` or `text` (max-size).
- `max-values` is the maximum number of entries that the map can contain. It is of type `ulong`.

Values for these variables are set using assignments which must be invoked on policy actions.

Variables Scope

A map variable or a singleton variable can have a global scope. Alternatively, the scope of a singleton variable can be limited to a single transaction.

- **Global Scope Variable** - A variable with global scope (the default) has only one instance, and that instance has the same value(s) across all cores of a NetScaler appliance and across all nodes of a cluster or HA configuration. Global variable values exist until they are explicitly deleted, until they expire, or until a standalone appliance is restarted or all nodes of a cluster or HA configuration are restarted.
- **Transaction Scope Variable** - A variable with transaction scope has a separate instance, with its own value, for each transaction processed by the NetScaler appliance. When the transaction processing is complete, the transaction variable value is deleted.

Note: Transaction scope variables are available in NetScaler release 10.5.e or later.

Configure and use variables

December 21, 2023

You must first create a variable and then assign a value or specify the operation that must be performed on the variable. After performing these operations, you can use the assignment as a policy action.

Note: Once configured, a variable's settings cannot be modified or reset. If the variable needs to be changed, the variable and all references to the variable (expressions and assignments) must be deleted. The variable can then be re-added with new settings, and the references (expressions and assignments) can be re-added.

To configure variables by using the command line interface

1. Create a variable.

```
1 add ns variable <name> -type <string> [-scope global] [-ifFull ( undef | lru )] [-ifValueTooBig ( undef | truncate )] [-ifNoValue ( undef | init )] [-init <string>] [-expires <positive_integer>] [-comment <string>]
```

Note: Refer to the man page “man add ns variable” for description of the command parameters.

Example 1: Create a ulong variable named “my_counter” and initialize it to 1.

```
1 add ns variable my_counter -type ulong -init 1
```

Example 2: Create a map named “user_privilege_map”. The map will contain keys of maximum length 15 characters and text values of maximum length 10 characters, with a maximum of 10000 entries.

```
1 add ns variable user_privilege_map -type map(text(15),text(10),10000)
```

Note: If the map contains 10000 unexpired entries, assignments for new keys reuse one of the least recently used entries. By default, an expression trying to get a value for a non-existent key will initialize an empty text value.

Assign the value or specify the operation to be performed on the variable. This is done by creating an assignment.

```
1 add ns assignment <name> -variable <expression> [-set <expression> | -
  add <expression> | -sub <expression> | -append <expression> | -clear
] [-comment <string>]
```

Note: A variable is referenced by using the variable selector (\$). Therefore,

\$variable1 is used to refer to text or ulong variables. Similarly,

\$variable2[key-expression] is used to refer to map variables.

Example 1: Define an assignment named “inc_my_counter” that automatically adds 1 to the “my_counter” variable.

```
1 add ns assignment inc_my_counter -variable $my_counter -add 1
```

Example 2: Define an assignment named “set_user_privilege” that adds to the “user_privilege_map” variable an entry for the client’s IP address with the value returned by the “get_user_privilege” HTTP callout.

```
1 add ns assignment set_user_privilege -variable $user_privilege_map[
  client.ip.src.typecast_text_t] -set sys.http.callout(
  get_user_privilege)
```

Note: If an entry for that key already exists, the value will be replaced. Otherwise a new entry for the key and value will be added. Based on the previous declaration for user_privilege_map, if the map already has 10000 entries, one of the least recently used entries will be reused for the new key and value.

1. Invoke the variable assignment in a policy.

There are two functions that can operate on map variables.

- **\$name.valueExists(key-expression)**. Returns true if there is a value in the map selected by the key-expression. Otherwise returns false. This function will update the expiration and LRU information if the map entry exists, but will not create a new map entry if the value does not exist.
- **\$name.valueCount**. Returns the number of values currently held by the variable. This is the number of entries in a map. For a singleton variable, this is 0 if the variable is uninitialized or 1 otherwise.

Example: Invoke the assignment named “set_user_privilege” with a compression policy.

```
1 add cmp policy set_user_privilege_pol -rule $user_privilege_map.
  valueExists(client.ip.src.typecast_text_t).not -resAction
  set_user_privilege
```

Use Case to Insert HTTP header in the Response Side

The following example shows an example of a singleton variable.

Add a singleton variable of type text. This variable can hold maximum 100 Bytes data.

```
1 add ns variable http_req_data -type text(100) -scope transaction
```

Add an assignment action, which will be used to store the HTTP request data into the variable.

```
1 add ns assignment set_http_req_data -variable $http_req_data -set http.req.body(100)
```

Add a rewrite action to insert HTTP header, whose value will be fetched from the variable.

```
1 add rewrite action act_ins_header insert_http_header user_name $http_req_data.after_str("user_name").before_str("password")
```

Add a rewrite policy which will evaluate in the request time, and take assignment action to store data. When we hit this policy, we'll take assignment action and store the data into the ns variable (http_req_data)

```
1 add rewrite policy pol_set_variable true set_http_req_data
2
3 bind rewrite global pol_set_variable 10 -type req_DEFAULT
```

Add a rewrite policy which will evaluate in the response time, and add an HTTP header in the response.

```
1 add rewrite policy pol_ins_header true act_ins_header
2
3 bind rewrite global pol_ins_header 10 -type res_DEFAULT
```

Assignment action

In a NetScaler appliance, an assignment action bound to the policy is triggered when the policy rule evaluates to true. The action updates the value in the variable which can be used in subsequent policy rule evaluations. This way, the same variable can be updated and used for subsequent policy evaluations in the same feature. Previously, the appliance executed assignment actions only after evaluating all of the policies in the feature when the policies of the associated assignment actions evaluated to true. Therefore, the variable value set by the assignment action cannot be used in the subsequent policy rule evaluations within the feature.

This functionality can be understood better with a use case that controls access list for clients on a NetScaler appliance. The access decision is provided by a separate web service, with the request `GET /client-access?<client-IP-address>` which returns a response with "BLOCK" or "ALLOW" in the body. The HTTP callout is configured to include the IP address of the client that is

associated with an incoming request. When the NetScaler appliance receives a request from a client, the appliance generates the callout request and sends it to the callout server, which hosts a database of blacklisted IP addresses and an HTTP callout agent that checks whether the client's IP address is listed in the database. The HTTP callout agent receives the callout request, checks whether the client's IP address is listed, and sends a response. The response is a status code, 200, 302 along with "BLOCK" or "ALLOW" in the body. Based on the status code, the appliance performs the policy evaluation. If the policy evaluation is true, the assignment action is triggered immediately and action sets the value to the variable. The appliance uses and sets this variable value for subsequent policy evaluation in the same module.

Use case for configuring assignment action

Follow the steps below to configure assignment action and use variable for subsequent policies:

1. The access decision is provided by a separate web service, with the request which returns a response with BLOCK or ALLOW in the body.

```
GET /url-service>/url-allowed?<URL path>
```

2. Set up a map variable to hold the access decisions for URLs.

```
add ns variable url_list_map -type 'map(text(1000),text(10),10000)'
```

3. Set up an HTTP callout to send the access request to the web service.

```
add policy httpCallout url_list_callout -vserver url_vs -returnType TEXT -urlStemExpr '"/url-allowed?" + HTTP.REQ.URL.PATH'-resultExpr 'HTTP.RES.BODY(10)'
```

4. Set up an assignment action to invoke the callout to get the access decision and assign it to the map entry for the URL.

```
add ns assignment client_access_assn -variable '$client_access_map [CLIENT.IP.SRC.TYPECAST_TEXT_T]'-set SYS.HTTP_CALLOUT(client_access_callout)
```

5. Set up a responder action to send a 403 response if a URL request is blocked.

```
add responder action url_list_block_act respondwith '"HTTP/1.1 403 Forbidden\r\n\r\n"'
```

6. Set up a responder policy to set the map entry for the URL if it is not already set. With the immediate action enhancement, the map entry value is set when this policy is evaluated. Prior to the enhancement, the assignment was not done until all responder policies had been evaluated decision is provided by a separate web service.

```
add responder policy url_list_assn_pol '!$url_list_map.VALUEEXISTS
(HTTP.REQ.URL.PATH)'url_list_assn
```

7. Set up a responder policy to block access to a URL if its map entry value is BLOCK. With the immediate action enhancement, the map entry set by the preceding policy is available for use in this policy. Prior to the enhancement, the map entry would still be unset at this point.

```
add responder policy client_access_block_pol '$client_access_map[
CLIENT.IP.SRC.TYPECAST_TEXT_T] == "BLOCK"'client_access_block_act
```

8. Bind the responder policies to the virtual server. **Note:** We cannot globally bind the policies because we don't want to execute them for the HTTP callout on a separate virtual server.

```
bind lb vserver vs -policyName client_access_assn_pol -priority
10 -gotoPriorityExpression NEXT -type REQUEST
bind lb vserver vs -policyName client_access_block_pol -priority
20 -gotoPriorityExpression END -type REQUEST
```

To configure variables by using the configuration utility

1. Navigate to **AppExpert > NS Variables**, to create a variable.
2. Navigate to **AppExpert > NS Assignments**, to assign value(s) to the variable.
3. Navigate to the appropriate feature area where you want to configure the assignment as an action.

Use case for caching user privileges

December 22, 2023

In this use case, user privileges (“GOLD”, “SILVER”, and so on) must be retrieved from an external web service.

To achieve this use case, perform the following operations

Create an HTTP callout to fetch the user privileges from the external web service.

```
1 add policy httpcallout <name> [-IPAddress <ip_addr|ipv6_addr>] [-port <
port>] [-vServer <string>] [-returnType <returnType>] [-httpMethod (
GET | POST )] [-hostExpr <string>] [-urlStemExpr <string>] [-headers
<name(value)> ...] [-parameters <name(value)> ...] [-bodyExpr <
string>][-fullReqExpr <string>] [-scheme ( http | https )] [-
resultExpr <string>] [-cacheForSecs <secs>] [-comment <string>]
```

```

2
3 add policy httpcallout get_user_privilege -ipaddress 10.217.193.84 -
  port 80 -returnType text -httpMethod GET -hostExpr "/"
  get_user_privilege" -resultExpr 'http.res.body(5)'

```

Store the privileges in a variable.

```

1 add ns variable <name> -type <string> [-scope ( global | transaction )
  ][-ifFull ( undef | lru )] [-ifValueTooBig ( undef | truncate )][-
  ifNoValue ( undef | init )] [-init <string>] [-expires <
  positive_integer>] [-comment <string>]
2
3 add ns variable user_privilege_map -type map(text(15),text(10),10000) -
  expires 1200
4
5 add ns assignment set_user_privilege -variable $user_privilege_map[
  client.ip.src] -set sys.http_callout(get_user_privilege)

```

Create a policy to check if there is already a cached entry for the client's IP address; if not, it calls the HTTP callout to set a map entry for the client.

```

1 add cmp policy <name> -rule <expression> -resAction <string>
2
3 add cmp policy set_user_privilege_pol -rule $user_privilege_map.
  valueExists(client.ip.src).not -resAction set_user_privilege>

```

Create a policy that compresses if the cached privilege entry for the client is "GOLD".

```

1 add cmp policy <name> -rule <expression> -resAction <string>
2
3 add cmp policy compress_if_gold_privilege_pol -rule '
  $user_privilege_map[client.ip.src].eq("GOLD")' -resAction compress

```

Bind the compression policies globally.

```

1 bind cmp global <policyName> [-priority <positive_integer>] [-state (
  ENABLED | DISABLED )] [-gotoPriorityExpression <expression>] [-type
  <type>] [-invoke (<labelType> <labelName>) ]
2
3 bind cmp global set_user_privilege_pol -priority 10 NEXT
4
5 bind cmp global compress_if_gold_privilege_pol -priority 20 END

```

Use case for limiting the number of sessions

December 10, 2024

In this use case, the requirement is to limit the number of active back-end sessions. In the deployment,

each session login has login in the URL and each session logout has logout in the URL. On successful login, the back-end sets a session id cookie with a unique ten character value.

To achieve this use case, perform the following operations:

1. Create a map variable that can store each active session. The key of the map is the session id. The expiry time for the variable is set to 600 seconds (10 minutes).

```
1 > add ns variable session_map -type map(text(10),ulong,100) -
    expires 600
```

2. Create the following assignments for the map variable:

- Create an entry for the session id and set that value to 1 (this value is not used).

```
1 > add ns assignment add_session -variable '$session_map[http.
    req.cookie.value("sessionid")] -set 1
```

- Deallocate the entry for a session ID, which implicitly decrements the value count for session_map.

```
1 > add ns assignment delete_session -variable '$session_map[
    http.req.cookie.value("sessionid")] -clear
```

3. Create responder policies for the following:

- To check if a map entry exists for that session id in the HTTP request. The add_session assignment is run if the map entry does not exist.

```
1 > add responder policy add_session_pol 'http.req.url.contains
    ("example") || $session_map.valueExists(http.req.cookie.
    value("abc"))' add_session
```

Note: The

valueExists() function in the

add_session_pol policy counts as a reference to the session's map entry, so each request resets the expiration timeout for its session. If no requests for a session are received after 10 minutes, the session's entry will be deallocated.

- To check when the session is logged out. The delete_session assignment is run.

```
1 add responder policy delete_session_pol "http.req.url.
    contains(\"Logout\")" delete_session
```

- To check for login requests and if the number of active sessions exceed 100. If these conditions are satisfied, to limit the number of sessions, the user is redirected to a page that indicates that the server is busy.

```
1 add responder action redirect_too_busy redirect "\/too_busy.
    html\""
```



```
2 add responder policy check_login_pol "http.req.url.contains  
  ("example\") && $session_map.valueCount > 100"  
  redirect_too_busy
```

4. Bind the responder policies globally.

```
1 bind responder global add_session_pol 30 next  
2 bind responder global delete_session_pol 10  
3 bind responder global check_login_pol 20
```

Policies and expressions

September 28, 2023

The following topics provide the conceptual and reference information that you require for configuring advanced policies on the NetScaler.

To know about all the advanced policy expressions supported on the NetScaler appliance, see [Policy Expressions](#)

Topic	Description
Introduction to Policies and Expressions	Describes the purpose of expressions, policies, and actions, and how different NetScaler applications make use of them.
Configuring Advanced Policies	Describes the structure of advanced policies and how to configure them individually and as policy banks.
Configuring Advanced Expressions: Getting Started	Describes expression syntax and semantics, and briefly introduces how to configure expressions and policies.
Advanced Expressions: Evaluating Text	Describes expressions that you configure when you want to operate on text (for example, the body of an HTTP POST request or the contents of a user certificate).
Advanced Expressions: Working with Dates, Times, and Numbers	Describes expressions that you configure when you want to operate on any type of numeric data (for example, the length of a URL, a client's IP address, or the date and time that an HTTP request was sent).

Topic	Description
Advanced Expressions: Parsing HTTP, TCP, and UDP Data	Describes expressions for parsing IP and IPv6 addresses, MAC addresses, and data that is specific to HTTP and TCP traffic.
Advanced Expressions: Parsing SSL Certificates	Describes how to configure expressions for SSL traffic and client certificates, for example, how to retrieve the expiration date of a certificate or the certificate issuer.
Advanced Expressions: IP and MAC Addresses, Throughput, VLAN IDs	Describes expressions that you can use to work with any other client-related or server-related data not discussed in other chapters.
Typecasting Data	Describes expressions for transforming data of one type to another.
Regular Expressions	Describes how to pass regular expressions as arguments to operators in advanced expressions.
Expressions Reference	A reference for advanced expression arguments.
Summary Examples of Advanced Expressions and Policies	Examples of advanced expressions and policies, in both quick reference and tutorial format, that you can customize for your own use.
Tutorial Examples of Advanced Policies for Rewrite	Examples of advanced policies for use in the Rewrite feature.
Tutorial Examples of Policies	Examples of policies for NetScaler features such as application firewall and SSL.
Migration of Apache mod_rewrite Rules to Advanced Policies	Examples of functions that were written using the Apache HTTP Server mod_rewrite engine, with examples of these functions after translation into Rewrite and Responder policies on the NetScaler.

Introduction to policies and expressions

May 2, 2023

For many NetScaler features, policies control how a feature evaluates data. A policy uses a logical expression, called as rule, to evaluate data, and applies one or more actions based on evaluation.

Alternatively, a policy can apply a profile, which defines a complex action.

Some NetScaler features use Advanced policies, which provide greater capabilities than older classic policies. If you have migrated to a newer release of the NetScaler software and have configured classic policies for features that use Advanced policies, you have to manually migrate policies to advanced policy infrastructure.

Advanced policy infrastructure

April 11, 2024

The advanced policy infrastructure enables you to analyze many pieces of data (for example, the body of an HTTP request) and to configure many operations in the policy rule (for example, transforming data in the body of a request into an HTTP header). You must bind the policy to a particular point in the processing associated with the NetScaler features. The bind point is one factor that determines when the policy will be evaluated.

Benefits of using advanced policies

Advanced policies use a powerful expression language that is built on a class-object model, and they offer several options that enhance your ability to configure the behavior of various NetScaler features. With advanced policy infrastructure, you can do the following:

- Perform fine-grained analyses of network traffic from layers 2 through 7.
- Evaluate any part of the header or body of an HTTP or HTTPS request or response.
- Bind policies to the multiple bind points that the advanced policy infrastructure supports at the default, override, and virtual server levels.
- Use special tools such as pattern sets, policy labels, rate limit identifiers, HTTP callouts, and variables, which enable you to configure policies effectively for complex use cases.

Also, the configuration utility extends robust GUI support for advanced policy infrastructure and expressions and enables users who have limited knowledge of networking protocols to configure policies quickly and easily. The configuration utility also includes a policy evaluation feature for advanced policies. You can use this feature to evaluate an advanced policy and test its behavior before you commit it, thus reducing the risk of configuration errors.

Basic components of an advanced policy

Following are a few characteristics of an Advanced policy:

- **Name.** Each policy has a unique name.
- **Rule.** The rule is a logical expression that enables the NetScaler feature to evaluate a piece of traffic or another object. For example, a rule can enable the NetScaler to determine whether an HTTP request originated from a particular IP address, or whether a Cache-Control header in an HTTP request has the value “No-Cache.”
- **Bindings.** To ensure that the NetScaler can invoke a policy when it is needed, you associate the policy, or bind it, to one or more bind points.

You can bind a policy globally or to a virtual server. For more information, see [About policy bindings](#).

- **An associated action.** An action is a separate entity from a policy. Policy evaluation ultimately results in the NetScaler performing an action.

For example, a policy in the integrated cache can identify HTTP requests for .png or .jpeg files. An action that you associate with this policy determines that the responses to these types of requests are served from the cache.

For some features, you configure actions as part of a more complex set of instructions known as a profile.

How different NetScaler features use policies

The NetScaler supports various features that rely on policies for operation. The following table summarizes how the NetScaler features use policies.

Feature name	How you use policies in the feature
Rewrite	To identify the data that you want to modify before serving. The policies provide rules for modifying the data. For example, you can modify HTTP data to redirect a request to a new home page, or a new server, or a selected server based on the address of the incoming request, or you can modify the data to mask server information in a response for security purposes. The URL Transformer function identifies URLs in HTTP transactions and text files for evaluating whether a URL must be transformed.

Feature name	How you use policies in the feature
Responder	To configure the behavior of the Responder function. A responder policy is based on a rule, which consists of one or more expressions. The rule is associated with an action, which is performed if a request matches the rule.
Content Switching	To determine what server or group of servers is responsible for serving responses, based on the characteristics of an incoming request. Request characteristics include device type, language, cookies, HTTP method, content type, and associated cache server.
Cache Redirection	To determine whether responses are served from a cache or from an origin server.
Compression Control	To determine what type of traffic must be compressed.
DNS	To modify various portions of DNS requests and responses
VPN clientless access	To determine how the NetScaler Gateway performs authentication, authorization, auditing, and other functions, and to define rewrite rules for general Web access using the NetScaler Gateway.
Cache	To determine whether to serve a response from the cache or the origin server.
URL Transform Policy	To select the requests and responses that the NetScaler must transform by using the URL transformation profile.
Application Firewall Policy	To assign different filtering rules to different types of web content.
Authorization	To provide access to the requested content without exposing unnecessary details about the website's actual configuration.
TM traffic	To set the characteristics (such as connection timeout, single sign-on, and initiating logout) of application traffic at run time.

Feature name	How you use policies in the feature
TM session	To customize user sessions after the user logs on to the Authorization, Authorization, and Accounting virtual server.
SSL Policies	To define a control or a data action to be performed on requests. SSL policies can therefore be categorized as control policies and data policies. A control policy uses a control action, such as forcing client authentication. A data policy uses a data action, such as inserting some data into the request.
Autoscale	To scale the number of virtual servers up or down seamlessly and automatically according to the defined conditions.
AppFlow	To allow NetScaler to export flow data to collection tools, often to be used for network or security analysis.
Content optimization	To reduce transaction times between the clients and the servers, and reduce bandwidth consumption. Also to enhance server performance by offloading some tasks and making others more efficient.
Spillover	To use a NetScaler rule to specify the conditions for spillover to occur. The rules give you the flexibility to configure spillover for various operational conditions.
ICA	To dynamically generate an ICAP request, receive the ICAP response, and log content inspection data.
VPN Session	On a NetScaler Gateway, to configure Endpoint Analysis (EPA) to check if a user device meets certain security requirements and accordingly allow access of internal resources to the user.
VPN Traffic	On a NetScaler Gateway, to configure Endpoint Analysis (EPA) to check if a user device meets certain security requirements and accordingly allow access of internal resources to the user.

Feature name	How you use policies in the feature
syslog	To define which messages to log to the specified syslog server.
nslog	To define which messages to log to the specified nslog server.
Video Optimization Detection	To create a user-defined video optimization detection policy label, to which you can bind detection policies. A policy label is a tool for evaluating a set of policies in a specified order. By using a policy label, you can configure the video optimization feature to choose the next policy, invoke a different policy label, or terminate a policy evaluation completely by looking at whether the previous policy evaluated to TRUE or FALSE.
Tunneling	To define the type of compression to be used for the tunneled traffic.
Content Inspection	To specify requests that the NetScaler ADC intercepts and runs the specified action.
VPN URL	To create a bookmark link to an external or internal resource that appears on the Access Interface, according to type, as a website link or file share link.
Bot	To create a user-defined bot policy label, to which you can bind policies. A policy label is a tool for evaluating a set of policies in a specified order. By using a policy label, you can configure the responder feature to choose the next policy, invoke a different policy label, or terminate a policy evaluation completely by looking at whether the previous policy evaluated to TRUE or FALSE.
VPN intranet application policy	To define intranet applications to be made accessible through a NetScaler Gateway.
SmartAccess	To create an ICA access profile that specifies the status of the features(Default or Disabled).

Load Balancing

To define how to distribute the client connections among the load-balanced servers that it manages.

About actions and profiles

Policies do not themselves take action on data. Policies provide read-only logic for evaluating traffic. To enable a feature to perform an operation based on a policy evaluation, you configure actions or profiles and associate them with policies.

Note:

Actions and profiles are specific to particular features. For information about assigning actions and profiles to features, see the documentation for the individual features.

About actions

Actions are steps that the NetScaler takes, depending on the evaluation of the expression in the policy. For example, if an expression in a policy matches a particular source IP address in a request, the action that is associated with this policy determines whether the connection is permitted.

The types of actions that the NetScaler can take are feature specific. For example, in Rewrite, actions can replace text in a request, change the destination URL for a request, and so on. In Integrated Caching, actions determine whether HTTP responses are served from the cache or an origin server.

In some NetScaler features actions are predefined, and in others they are configurable. In some cases (for example, Rewrite), you configure the actions using the same types of expressions that you use to configure the associated policy rule.

Note:

Not all combinations of feature, protocol, direction, and entity are valid.

About profiles

Some NetScaler features enable you to associate profiles, or both actions and profiles, with a policy. A profile is a collection of settings that enable the feature to perform a complex function. For example, in the application firewall, a profile for XML data can perform multiple screening operations, such as examining the data for illegal XML syntax or evidence of SQL injection.

About policy bindings

A policy is associated with, or bound to an entity that enables the policy to be invoked. For example, you can bind a policy to request-time evaluation that applies to all virtual servers. A collection of policies that are bound to a particular bind point constitutes a policy bank.

Following is an overview of the different types of bind points for a policy:

- Request time global. A policy can be available to all components in a feature at request time.
- Response time global. A policy can be available to all components in a feature at response time.
- Request time, virtual server-specific. A policy can be bound to request-time processing for a particular virtual server. For example, you can bind a request-time policy to a cache redirection virtual server to ensure that particular requests are forwarded to a load balancing virtual server for the cache, and other requests are sent to a load balancing virtual server for the origin.
- Response time, virtual server-specific. A policy can also be bound to response-time processing for a particular virtual server.
- User-defined policy label. For advanced policy infrastructure, you can configure custom groupings of policies (policy banks) by defining a policy label and collecting a set of related policies under the policy label.
- Other bind points. The availability of additional bind points depends on type of advanced policy, and the specifics of the relevant NetScaler feature.

For additional information about advanced policy bindings, see [Bind policies that use the advanced policies](#) topic.

About evaluation order of policies

The features in the NetScaler are processed in a certain order, which includes evaluating the policies for the feature and performing the actions selected. For more information, see [Packet flow](#).

At any one point in message processing, policy evaluation is performed depending on the combination of the following:

- Protocol (such HTTP, SIP TCP, or Diameter)
- Direction (request or response)
- Feature (such as Rewrite, Responder, or Bot)

The combinations cannot be mixed up. Policies are evaluated in groups of policies called banks (also called policy labels or bind points) in the following order:

1. Global override
2. Specific LB virtual server used
3. If any specific CS virtual server used

4. Global default

Within a bank, policies are evaluated from the lowest numbered priority to the highest. If a policy rule evaluates to false, evaluation automatically goes to the next higher numbered priority in the same bank. If there are no policy rules in the same bank, then the evaluation falls to the first policy of the next bank in the order. If there are no more policies, then policy evaluation ends. If a policy rule evaluates to true, the corresponding action or profile is remembered for possible later execution.

If the policy is evaluated to true, then the “gotoPriorityExpression” value is checked. If “gotoPriorityExpression” is “END” then policy evaluation stops. If “NEXT” then the next policy (as described above) gets evaluated. If it is an expression then that expression is evaluated and the policy with that priority is selected next.

Note

The default “gotoPriorityExpression” value except for policy labels is “END”. However, for some features that can run all the actions, we recommend you to explicitly specify the “gotoPriorityExpression” value.

Once policy evaluation stops, the feature runs the ordered list of actions or profiles. The features either run all actions (for example Rewrite) or run one action (for example, Responder or Bot). If more than one action or profile is associated with a feature that can only run one, the standard is to run the last one. If there are no actions or profiles selected, then the feature performs its default action.

Order of evaluation based on traffic flow

Some policies affect the outcome of other policies. Following are examples:

- If a response is served from the integrated cache, some other NetScaler features do not process the response or the request that initiated it.
- If the application firewall rejects an incoming request, no other features can process it.
- Most actions that are performed by Responder stops further processing.
- The Drop and Reset actions performed by Rewrite stops further processing.

Advanced policy expressions

May 2, 2023

One of the most fundamental components of a policy is its rule. A policy rule is a logical expression that enables the policy to analyze traffic. Most of the policy’s functionality is derived from its expression.

An expression matches characteristics of traffic or other data with one or more parameters and values. For example, an expression can enable the NetScaler to accomplish the following:

- Determine whether a request contains a certificate.
- Determine the IP address of a client that sent a TCP request.
- Identify the data that an HTTP request contains (for example, a popular spreadsheet or word processing application).
- Calculate the length of an HTTP request.

About advanced policy expressions

Any feature that uses advanced policy infrastructure also uses Advanced expressions. For information about which features use Advanced policies, see the table [NetScaler Feature, Policy Type, and Policy Usage](#).

Advanced policy expressions have a few other uses. In addition to configuring Advanced expressions in policy rules, you configure Advanced expressions in the following situations:

- **Integrated Caching:**
You use Advanced policy expressions to configure a selector for a content group in the integrated cache.
- **Load Balancing:**
You use Advanced policy expressions to configure token extraction for a load balancing virtual server that uses the TOKEN method for load balancing.
- **Rewrite:**
You use Advanced policy expressions to configure rewrite actions.
- **Rate-based policies:**
You use Advanced policy expressions to configure limit selectors when configuring a policy to control the rate of traffic to various servers.

Following are a few simple examples of Advanced policy expressions:

- An HTTP request URL contains no more than 500 characters.

```
http.req.url.length \<= 500
```

- An HTTP request contains a cookie that has fewer than 500 characters.

```
http.req.cookie.length \< 500
```

- An HTTP request URL contains a particular text string.

```
http.req.url.contains(".html")
```

Convert policy expressions using the NSPEPI tool

December 2, 2024

Note:

You can download the NSPEPI and preconfig check tool from the public GitHub. For more information, see the [GitHub NSPEPI](#) page and [README](#) page for detailed instructions to download, install, and use the tools. We recommend customers to use the tools available in GitHub for the most complete and up-to-date version.

Classic policy-based features and functionalities are deprecated from NetScaler 12.0 build 56.20 onwards. As an alternative, NetScaler recommends you to use the Advanced policy infrastructure for the features supported by the NSPEPI tool. For the list of supported features, see [Commands or features handled by the nspepi conversion tool](#). The features that are not supported by the NSPEPI tool continue to support classic policies. For the list of unsupported features, see [NSPEPI tool unsupported features](#).

The `nspepi` tool can perform the following tasks:

1. Convert Classic policy expressions to Advanced policy expressions.
2. Convert certain Classic policies and their entity bindings to Advanced policies and bindings.
3. Convert a few more deprecated features to their corresponding non-deprecated features.
4. Convert classic filter commands to advanced filter commands.

Note:

After the `nspepi` tool successfully converts the `ns.conf` config file, the tool displays the converted file as a new file with a prefix, “new_”. If the converted config file has errors or warnings, you must manually fix them as part of the conversion process. Once converted, you must test the file in the test environment and then use it to replace the actual `ns.conf` config file. After testing, you must reboot the appliance for the newly converted or fixed `ns.conf` config file.

Features that only support Classic policies or expressions are deprecated and they can be replaced by the corresponding non-deprecated features.

Note:

Information pertaining to the older version of the `nspepi` tool is available in a PDF format. For more information, see [Classic policy conversion using nspepi tool before 12.1-51.16](#) PDF.

Conversion warnings and error files

Before you use the tool for your conversion, there are a few warnings to keep in mind:

1. All warnings and errors are output to the console. There is a warning file created where the configuration files are stored.
2. The warnings and error file has the same name as the input file but with a prefix “warn_” added to the file name. During expression conversion (when using `-e`), the warnings show up in the current directory with a name “warn_expr”.

Note:

This file is in a standard log file format, with date/time stamp and log level. Previous instances of the file are kept with suffixes like “.1”, “.2”, and so forth as the tool is run multiple times. At most 10 instances will be kept.

Converted file format

When converting a configuration file (using “`-f`”), the converted file is put into the same directory as where the input configuration file exists with the same name but a prefix “new_”.

Commands or features handled by the nspepi conversion tool

Following are the commands handled during the auto conversion process.

- The following Classic policies and their expressions are converted to Advanced policies and expressions. The conversion includes entity bindings and global bindings.
 1. add appfw policy
 2. add cmp policy
 3. add cr policy
 4. add cs policy
 5. add ssl policy
 6. add filter action
 7. add filter policy
 8. filter policy binding to load balancing, content switching, cache redirection, and global.

- The rule parameter configured in “add lb virtual server” is converted from Classic expression to Advanced expression.
- The SPDY parameter configured in the “add ns httpProfile” or the “set ns httpProfile” command is changed to “-http2 ENABLED”.
- Named expressions (“add policy expression” commands). Each Classic named policy expression is converted to its corresponding Advanced named expression with “nspepi_adv_” set as the prefix. In addition, usage of named expressions for the converted Classic expressions is changed to the corresponding Advanced named expressions. In addition, every named expression has two named expressions, where one is Classic and the other one is Advanced (as shown below).
- Handling built-in classic policy bindings in CMP and CR.
- Patclass feature is converted to Pat set feature.
- “-pattern” parameter in the “add rewrite action” command is converted to use “-search” parameter.
- Q and S prefixes of advanced expressions are converted to equivalent non-deprecated advanced expressions. These expressions can be seen in any command where advanced expressions are allowed.

For example:

```

1 add policy expression classic_expr ns_true
2 Converts to:
3 add policy expression classic_expr ns_true
4 add policy expression nspepi_adv_classic_expr TRUE

```

- The policyType parameter configured in the “set cmp parameter” command is removed. By default, the policy type is “Advanced”.

Convert classic filter commands to advanced filter commands

The `nspepi` tool can convert commands based on classic filter actions such as add, bind and so forth to advanced filter commands.

However, the `nspepi` tool does not support the following filter commands.

1. add filter action <action Name> FORWARD <service name>
2. add filter action <action name> ADD prebody
3. add filter action <action name> ADD postbody

Note:

1. If there are existing rewrite or responder features in ns.conf and their policies are bound globally with the `GOTO` expression as `END` or `USER_INVOCATION_RESULT` and the bind

- type is REQ_X or RES_X then the tool converts bind filter commands partially and comments out. An error is displayed for the manual conversion.
- If there are existing rewrite or responder features and their policies are bound to virtual servers (for example, load balancing, content switching or cache redirect) of type HTTPS with GOTO - END or USER_INVOCATION_RESULT, the tool converts bind filter commands partially and then comments out. Warning is displayed for the manual conversion.

Example

Following is a sample input:

```

1 add lb vserver v1 http 1.1.1.1 80 -persistenceType NONE -cltTimeout
  9000
2 add cs vserver csv1 HTTP 1.1.1.2 80 -cltTimeout 180 -persistenceType
  NONE
3 add cr vserver crv1 HTTP 1.1.1.3 80 -cacheType FORWARD
4 add service svc1 1.1.1.4 http 80
5 add filter action fact_add add 'header:value'
6 add filter action fact_variable add 'H1:%%HTTP.TRANSID%%'
7 add filter action fact_prebody add prebody
8 add filter action fact_error_act1 ERRORCODE 200 "<HTML>Good URL</HTML>"
9 add filter action fact_forward_act1 FORWARD svc1
10 add filter policy fpol_add_res -rule ns_true -resAction fact_add
11 add filter policy fpol_error_res -rule ns_true -resAction
  fact_error_act1
12 add filter policy fpol_error_req -rule ns_true -reqAction
  fact_error_act1
13 add filter policy fpol_add_req -rule ns_true -reqAction fact_add
14 add filter policy fpol_variable_req -rule ns_true -reqAction
  fact_variable
15 add filter policy fpol_variable_res -rule ns_true -resAction
  fact_variable
16 add filter policy fpol_prebody_req -rule ns_true -reqAction
  fact_prebody
17 add filter policy fpol_prebody_res -rule ns_true -resAction
  fact_prebody
18 add filter policy fpol_forward_req -rule ns_true -reqAction
  fact_forward_act1
19 bind lb vserver v1 -policyName fpol_add_res
20 bind lb vserver v1 -policyName fpol_add_req
21 bind lb vserver v1 -policyName fpol_error_res
22 bind lb vserver v1 -policyName fpol_error_req
23 bind lb vserver v1 -policyName fpol_variable_res
24 bind lb vserver v1 -policyName fpol_variable_req
25 bind lb vserver v1 -policyName fpol_forward_req
26 bind cs vserver csv1 -policyName fpol_add_req
27 bind cs vserver csv1 -policyName fpol_add_res
28 bind cs vserver csv1 -policyName fpol_error_res
29 bind cs vserver csv1 -policyName fpol_error_req
30 bind cr vserver crv1 -policyName fpol_add_req

```

```

31 bind cr vserver crv1 -policyName fpol_add_res
32 bind cr vserver crv1 -policyName fpol_error_res
33 bind cr vserver crv1 -policyName fpol_error_req
34 bind cr vserver crv1 -policyName fpol_forward_req
35 bind filter global fpol_add_req
36 bind filter global fpol_add_res
37 bind filter global fpol_error_req
38 bind filter global fpol_error_res
39 bind filter global fpol_variable_req
40 bind filter global fpol_variable_res
41 bind filter global fpol_variable_res -state DISABLED
42 bind filter global fpol_prebody_req
43 bind filter global fpol_forward_req

```

After conversion, warnings or error messages are displayed for manual effort.

```

1 ERROR - Line(7): Conversion of HTMLInjection feature related command [
  add filter action fact_prebody add prebody] is not supported in this
  tool.
2 ERROR - Line(9): Conversion of FORWARD action type related command [add
  filter action fact_forward_act1 FORWARD svc1] not supported in this
  tool
3 ERROR - Line(16): Conversion of HTMLInjection feature reated command [
  add filter policy fpol_prebody_req -rule ns_true -reqAction
  fact_prebody]not supported in this tool.
4 ERROR - Line(17): Conversion of HTMLInjection feature reated command [
  add filter policy fpol_prebody_res -rule ns_true -resAction
  fact_prebody]not supported in this tool.
5 ERROR - Line(18): Conversion of FORWARD action type related command [
  add filter policy fpol_forward_req -rule ns_true -reqAction
  fact_forward_act1]not supported in this tool.
6 ERROR - Line(25): Conversion of FORWARD action type related command [
  bind lb vserver v1 -policyName fpol_forward_req]not supported in
  this tool.
7 ERROR - Line(34): Conversion of FORWARD action type related command [
  bind cr vserver crv1 -policyName fpol_forward_req]not supported in
  this tool.
8 WARNING - Line(41): Following bind command is commented out because
  state is disabled. If state is disabled, then command is not in use.
  Since state parameter is not supported with the advanced
  configuration, so if we convert this config then functionality will
  change. If command is required please take a backup because comments
  will not be saved in ns.conf after triggering 'save ns config':
  bind filter global fpol_variable_res -state DISABLED
9 ERROR - Line(42): Conversion of HTMLInjection feature related command [
  bind filter global fpol_prebody_req]not supported in this tool.
10 ERROR - Line(43): Conversion of FORWARD action type related command [
  bind filter global fpol_forward_req]not supported in this tool.

```

Following is a sample output. All converted commands are commented.

```

1 add lb vserver v1 http 1.1.1.1 80 -persistenceType NONE -cltTimeout
  9000

```



```
2 add cs vserver csv1 HTTP 1.1.1.2 80 -cltTimeout 180 -persistenceType
  NONE
3 add cr vserver crv1 HTTP 1.1.1.3 80 -cacheType FORWARD
4 add service svc1 1.1.1.4 http 80
5 add rewrite action fact_add insert_http_header header "\"value\""
6 add filter action fact_prebody add_prebody # Error in conversion in
  using nspepi tool, for details see the warn_abc.conf
7 add responder action fact_error_act1 respondwith "HTTP.REQ.VERSION.
  APPEND(\" 200 OK\\r\\n\\nConnection: close\\r\\n\\nContent-Length: 21\\r\\
  n\\r\\n\\n<HTML>Good URL</HTML>\")"
8 add rewrite action nspepi_adv_fact_error_act1 replace_http_res "HTTP.
  REQ.VERSION.APPEND(\" 200 OK\\r\\n\\nConnection: close\\r\\n\\nContent-
  Length: 21\\r\\n\\n\\r\\n\\n<HTML>Good URL</HTML>\")"
9 add filter action fact_forward_act1 FORWARD svc1 # Error in conversion
  in using nspepi tool, for details see the warn_abc.conf
10 add filter policy fpol_prebody_req -rule ns_true -reqAction
  fact_prebody # Error in conversion in using nspepi tool, for details
  see the warn_abc.conf
11 add filter policy fpol_prebody_res -rule ns_true -resAction
  fact_prebody # Error in conversion in using nspepi tool, for details
  see the warn_abc.conf
12 add filter policy fpol_forward_req -rule ns_true -reqAction
  fact_forward_act1 # Error in conversion in using nspepi tool, for
  details see the warn_abc.conf
13 bind lb vserver v1 -policyName fpol_forward_req # Error in conversion
  in using nspepi tool, for details see the warn_abc.conf
14 bind cr vserver crv1 -policyName fpol_forward_req # Error in conversion
  in using nspepi tool, for details see the warn_abc.conf
15 #bind filter global fpol_variable_res -state DISABLED
16 bind filter global fpol_prebody_req # Error in conversion in using
  nspepi tool, for details see the warn_abc.conf
17 bind filter global fpol_forward_req # Error in conversion in using
  nspepi tool, for details see the warn_abc.conf
18 add rewrite action nspepi_adv_fact_variable insert_http_header H1 HTTP.
  RES.TXID
19 add rewrite action fact_variable insert_http_header H1 HTTP.REQ.TXID
20 add rewrite policy fpol_add_res TRUE fact_add
21 add rewrite policy fpol_error_res TRUE nspepi_adv_fact_error_act1
22 add responder policy fpol_error_req TRUE fact_error_act1
23 add rewrite policy fpol_add_req TRUE fact_add
24 add rewrite policy fpol_variable_req TRUE fact_variable
25 add rewrite policy fpol_variable_res TRUE nspepi_adv_fact_variable
26 bind rewrite global fpol_add_req 100 NEXT -type REQ_DEFAULT
27 bind rewrite global fpol_variable_req 200 NEXT -type REQ_DEFAULT
28 bind rewrite global fpol_add_res 100 NEXT -type RES_DEFAULT
29 bind rewrite global fpol_error_res 200 NEXT -type RES_DEFAULT
30 bind rewrite global fpol_variable_res 300 NEXT -type RES_DEFAULT
31 bind responder global fpol_error_req 100 END -type REQ_DEFAULT
32 bind lb vserver v1 -policyName fpol_add_res -type RESPONSE -priority
  100 -gotoPriorityExpression NEXT
33 bind lb vserver v1 -policyName fpol_error_res -type RESPONSE -priority
  200 -gotoPriorityExpression NEXT
34 bind lb vserver v1 -policyName fpol_variable_res -type RESPONSE -
```

```
    priority 300 -gotoPriorityExpression NEXT
35 bind lb vserver v1 -policyName fpol_add_req -type REQUEST -priority 100
    -gotoPriorityExpression NEXT
36 bind lb vserver v1 -policyName fpol_variable_req -type REQUEST -
    priority 200 -gotoPriorityExpression NEXT
37 bind lb vserver v1 -policyName fpol_error_req -type REQUEST -priority
    100 -gotoPriorityExpression END
38 bind cs vserver csv1 -policyName fpol_add_req -type REQUEST -priority
    100 -gotoPriorityExpression NEXT
39 bind cs vserver csv1 -policyName fpol_add_res -type RESPONSE -priority
    100 -gotoPriorityExpression NEXT
40 bind cs vserver csv1 -policyName fpol_error_res -type RESPONSE -
    priority 200 -gotoPriorityExpression NEXT
41 bind cs vserver csv1 -policyName fpol_error_req -type REQUEST -priority
    100 -gotoPriorityExpression END
42 bind cr vserver crv1 -policyName fpol_add_req -type REQUEST -priority
    100 -gotoPriorityExpression NEXT
43 bind cr vserver crv1 -policyName fpol_add_res -type RESPONSE -priority
    100 -gotoPriorityExpression NEXT
44 bind cr vserver crv1 -policyName fpol_error_res -type RESPONSE -
    priority 200 -gotoPriorityExpression NEXT
45 bind cr vserver crv1 -policyName fpol_error_req -type REQUEST -priority
    100 -gotoPriorityExpression END
```

Convert classic filter commands to advanced feature commands if existing rewrite or responder policy bindings have goto expression END or USE_INNVOCATION

In this conversion, if a rewrite policy bound to one or more virtual servers and if the server has END or USE_INVOCATION_RESULT, the tool comments out the commands.

Example

Following is a sample input command:

```
1 add lb vserver v1_tcp TCP
2 add lb vserver v1_http HTTP
3 add lb vserver v2_http HTTP
4 add cs vserver csv1_tcp TCP 1.1.1.1 12345
5 add cs vserver csv1_http HTTP 2.2.2.1 80
6 add cs vserver csv2_http HTTP 2.2.2.5 180
7 add cr vserver crv1_tcp TCP 1.1.1.2 2345
8 add cs vserver crv2_http HTTP 2.2.2.2 90
9 add filter policy fpol1 -rule ns_true -resAction reset
10 add filter policy fpol2 -rule ns_true -reqAction reset
11 add rewrite policy pol1 true NOWRITE
12 add rewrite policylabel pl http_res
13 bind rewrite policylabel pl pol1 1
14 bind rewrite global NOPOLICY 1 USE_INVOCATION_RESULT -type RES_DEFAULT
    -invoke policylabel pl
```

```
15 add responder policy pol2 true NOOP
16 add responder policylabel pl -policylabeltype HTTP
17 bind responder policylabel pl pol2 1
18 bind responder global NOPOLICY 1 USE_INVOCATION_RESULT -type
    REQ_DEFAULT -invoke policylabel pl
19 bind lb vserver v1_tcp -policyName pol1 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type RESPONSE
20 bind cs vserver csv1_tcp -policyName pol1 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type RESPONSE
21 bind lb vserver v1_tcp -policyName pol2 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type REQUEST
22 bind cs vserver csv1_tcp -policyName pol2 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type REQUEST
23 bind cr vserver crv1_tcp -policyName pol2 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type REQUEST
24 bind lb vserver v1_http -policyName fpol1
25 bind cs vserver csv1_http -policyName fpol1
26 bind lb vserver v2_http -policyName fpol2
27 bind cs vserver csv2_http -policyName fpol2
28 bind cr vserver crv2_http -policyName fpol2
29 bind filter global fpol1 -priority 100
30 bind filter global fpol2 -priority 100
```

Following is a sample output command:

```
1 add lb vserver v1_tcp TCP
2 add lb vserver v1_http HTTP
3 add lb vserver v2_http HTTP
4 add cs vserver csv1_tcp TCP 1.1.1.1 12345
5 add cs vserver csv1_http HTTP 2.2.2.1 80
6 add cs vserver csv2_http HTTP 2.2.2.5 180
7 add cr vserver crv1_tcp TCP 1.1.1.2 2345
8 add cs vserver crv2_http HTTP 2.2.2.2 90
9 add rewrite policy pol1 true NOREWRITE
10 add rewrite policylabel pl http_res
11 bind rewrite policylabel pl pol1 1
12 add responder policy pol2 true NOOP
13 add responder policylabel pl -policylabeltype HTTP
14 bind responder policylabel pl pol2 1
15 bind lb vserver v1_tcp -policyName pol1 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type RESPONSE
16 bind cs vserver csv1_tcp -policyName pol1 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type RESPONSE
17 bind lb vserver v1_tcp -policyName pol2 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type REQUEST
18 bind cs vserver csv1_tcp -policyName pol2 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type REQUEST
19 bind cr vserver crv1_tcp -policyName pol2 -priority 100 -
    gotoPriorityExpression USE_INVOCATION_RESULT -type REQUEST
20 add rewrite policy fpol1 TRUE RESET
21 add responder policy fpol2 TRUE RESET
22 #bind lb vserver v2_http -policyName fpol2 -type REQUEST
23 #bind cs vserver csv2_http -policyName fpol2 -type REQUEST
```

```

24 #bind cr vserver crv2_http -policyName fpol2 -type REQUEST
25 #bind responder global fpol2 100 -type REQ_DEFAULT
26 bind rewrite global NOPOLICY 1 USE_INVOCATION_RESULT -type RES_DEFAULT
   -invoke policylabel pl
27 bind rewrite global fpol1 100 NEXT -type RES_DEFAULT
28 bind responder global NOPOLICY 1 USE_INVOCATION_RESULT -type
   REQ_DEFAULT -invoke policylabel pl
29 bind lb vserver v1_http -policyName fpol1 -type RESPONSE -priority 100
   -gotoPriorityExpression NEXT
30 bind cs vserver csv1_http -policyName fpol1 -type RESPONSE -priority
   100 -gotoPriorityExpression NEXT

```

Running the nspepi tool

This tool is run from the shell, which can be accessed by typing the “shell” command in the NetScaler CLI. To convert classic policies to advanced policies, use the “-f”, “-e”, or “-a” option. The “-d” option is intended for Citrix support personnel to analyze the data for troubleshooting purposes. Run the following command to view all the available options:

```

1 root@ns# ./nspepi --help
2 usage: nspepi [-h] (-e <classic policy expression> | -f <path to ns
   config file>)[-d] [-a] [-v] [-V]
3
4 Convert classic policy expressions to advanced policy expressions and
   deprecated commands to non-deprecated
5 commands.
6
7 optional arguments:
8 -h, --help show this help message and exit
9 -e <classic policy expression>, --expression <classic policy expression
   >
10 convert classic policy expression to advanced policy
11 expression (maximum length of 8191 allowed)
12 -f <path to ns config file>, --infile <path to ns config file>
13 convert netscaler config file
14 -a, --all Convert Syslog classic policies
15 -d, --debug log debugoutput
16 -v, --verbose show verbose output
17 -V, --version show program's version number and exit

```

Usage Examples:

1. nspepi -e "req.tcp.destport == 80"
2. nspepi -f /nsconfig/ns.conf

Following are few examples of running the nspepi tool by using the CLI

Example output for –e parameter:

```

1 root@ns# nspepi -e "req.http.header foo == \"bar\""

```

```
2 "HTTP.REQ.HEADER(\"foo\").EQ(\"bar\")"
```

Example output for -f parameter:

```
1 root@ns# cat sample.conf
2 add cr vserver cr_vs HTTP -cacheType TRANSPARENT -cltTimeout 180 -
  originUSIP OFF
3 add cr policy cr_pol1 -rule ns_true
4 bind cr vserver cr_vs -policyName cr_pol1
```

Running nspepi with -f parameter:

```
1 nspepi -f sample.conf
```

Converted config is available in a new file `new_sample.conf`.

Check the `warn_sample.conf` file for any warnings or errors that might have been generated.

Example output of -f parameter along with -v parameter

```
1 nspepi -f sample.conf -v
2 INFO - add cr vserver cr_vs HTTP -cacheType TRANSPARENT -cltTimeout 180
  -originUSIP OFF
3 INFO - add cr policy cr_pol1 -rule TRUE -action ORIGIN
4 INFO - bind cr vserver cr_vs -policyName cr_pol1 -priority 100 -
  gotoPriorityExpression END -type REQUEST
```

Converted config is available in a new file `new_sample.conf`.

Check the `warn_sample.conf` file for any warnings or errors that might have been generated.

Running nspepi with -a parameter:

Sample syslog configuration in classic policies before running nspepi:

```
1 root@ns# cat /root/sample_syslog.conf
2 add syslogAction act1 10.106.194.122 -logLevel ALL
3 add audit syslogPolicy pol1 ns_true act1
4 add cs vserver sachin_cs-vs HTTP 10.10.102.35 90 -cltTimeout 180 -
  persistenceType NONE
5 bind cs vserver sachin_cs-vs -policyName ap1 -priority 11
6 bind vpn global -policyName pol1 -priority 100
```

Run nspepi with -a parameter:

```
1 root@ns# ./nspepi -f /root/sample_syslog.conf -a
2
3 Converted config will be available in a new file new_sample_syslog.conf
4
5 Conversion is successful, no error or warning is generated.
6 Use nspepi tool available at https://github.com/citrix/ADC-scripts/tree/master/nspepi for the most complete and up-to-date version.
```

Sample syslog configuration converted to advanced policies after running nspepi with -a parameter:

```
1 root@ns# cat /root/new_sample_syslog.conf
2 add syslogAction act1 10.106.194.122 -logLevel ALL
3 add audit syslogPolicy pol1 TRUE act1
4 add cs vserver sachin_cs-vs HTTP 10.10.102.35 90 -cltTimeout 180 -
  persistenceType NONE
5 bind cs vserver sachin_cs-vs -policyName ap1 -priority 11
6 bind syslogGlobal -policyname pol1 -priority 100 -globalBindType
  VPN_GLOBAL
```

Converted Config file:

```
1 root@ns# cat new_sample.conf
2 add cr vserver cr_vs HTTP -cacheType TRANSPARENT -cltTimeout 180 -
  originUSIP OFF
3 add cr policy cr_pol1 -rule TRUE -action ORIGIN
4 set cmp parameter -policyType ADVANCED
5 bind cr vserver cr_vs -policyName cr_pol1 -priority 100 -
  gotoPriorityExpression END -type REQUEST
```

Example output of a sample configuration with no errors or warnings:

```
1 nspepi -f sample_2.conf
```

Converted config is available in a new file `new_sample_2.conf`.

Check the `warn_sample_2.conf` file for any warnings or errors that might have been generated.

Example output of a sample configuration with warnings:

```
1 root@ns# cat sample_2.conf
2 add policy expression security_expr "req.tcp.destport == 80" -
  clientSecurityMessage "Not allowed"
3 set cmp parameter -policyType CLASSIC
4 add cmp policy cmp_pol1 -rule ns_true -resAction COMPRESS
5 add cmp policy cmp_pol2 -rule ns_true -resAction COMPRESS
6 add cmp policy cmp_pol3 -rule TRUE -resAction COMPRESS
7 bind cmp global cmp_pol1
8 bind cmp global cmp_pol2 -state DISABLED
9 bind cmp global cmp_pol3 -priority 1 -gotoPriorityExpression END -type
  RES_DEFAULT
10 bind lb vserver lb_vs -policyName cmp_pol2
11 root@ns#
```

Converted file:

```
1 root@ns# cat new_sample_2.conf
2 add policy expression security_expr "req.tcp.destport == 80" -
  clientSecurityMessage "Not allowed"
3 set cmp parameter -policyType ADVANCED
4 add cmp policy cmp_pol1 -rule TRUE -resAction COMPRESS
5 add cmp policy cmp_pol2 -rule TRUE -resAction COMPRESS
```

```
6 add cmp policy cmp_pol3 -rule TRUE -resAction COMPRESS
7 #bind cmp global cmp_pol2 -state DISABLED
8 #bind cmp global cmp_pol3 -priority 1 -gotoPriorityExpression END -type
  RES_DEFAULT
9 bind cmp global cmp_pol1 -priority 100 -gotoPriorityExpression END -
  type RES_DEFAULT
10 bind lb vserver lb_vs -policyName cmp_pol2 -priority 100 -
  gotoPriorityExpression END -type RESPONSE
11 root@ns#
```

Warning file:

- 1 WARNING - Following bind command is commented out because state is disabled. If state is disabled, then command is not in use. Since state parameter is not supported with the advanced configuration, so **if** we convert **this** config then functionality will change. If command is required please take a backup because comments will not be saved in ns.conf after triggering 'save ns config': bind cmp global cmp_pol2 -state DISABLED
- 2 WARNING - Initial global cmp parameter is classic and in **this case** advanced policies's bindings are not evaluated. Now global cmp parameter policy type is set to advanced, so existing advanced policies's bindings will be evaluated and can change the functionality. So, bindings of advanced CMP policies to cmp global are commented out. If commands are required please take a backup because comments will not be saved in ns.conf after triggering 'save ns config'.

Binding Priorities

Advanced policies do not allow arbitrary interleaving by priority between global and non-global and between different binding types. If you rely on such interleaving of Classic policy priorities, you need to adjust the priorities to conform to the Advanced policy rules and to get the behavior you desire. Priorities in Advanced policies are local to a bind point. A bind point is a unique combination of protocol, feature, direction, and entity (entities are specific virtual servers, users, groups, services, and either global override or global default). Policy priorities are not followed across bind points.

For a given protocol, feature, and direction, the following is the order of evaluation of Advanced policies:

- Global override.
- (Current) authentication, authorization, and auditing user.
- Authentication, authorization, and auditing groups (that the user is a member of) in order of weight - ordering is undefined if two or more groups have the same weight.
- LB virtual server that either the request was received on or that Content Switching selected.
- Content switching virtual server, cache redirection virtual server that the request was received on.

- Service selected by load balancing.
- Global default.

Within each bind point, the policies are evaluated in order of priority from lowest numbered to highest numbered. Policies are only evaluated for the protocol used and the direction that the message was received from.

Classic policy bindings that require manual reprioritization

Here are some types of Classic policy bindings that require manual reprioritization to accomplish your needs. All these are for a given feature and the direction.

- Classic priorities that increase in priority number opposite to the direction of the above entity type lists. For example a content switching virtual server binding lower than a load balancing virtual server binding.
- Classic priorities that increase in number other than the order of weights of authentication, authorization, and auditing groups.
- Classic global priorities that are less than some non-global priority and the same global priorities are greater than some other non-global priority (in other words, any segment of priorities that are a non-global, followed by one or more globals, followed by a non-global).

The NSPEPI and check_invalid_config tools can be run on the CentOS and Ubuntu systems

The following modules are the prerequisites for using these tools:

- Python
- Perl
- Python pip module
- PLY module for Python
- Switch.pm for Perl

If Python 3 is installed, create a soft link, for example, `ln -s /usr/bin/python3 /usr/bin/python`.

To install Python pip module, PLY module for Python, and Switch.pm for Perl in CentOS, run the following commands:

- `sudo yum install -y perl-Switch`
- `sudo yum install python-pip`
- `sudo yum install python-ply`

To install Python pip module, PLY module for Python, and Switch.pm for Perl in Ubuntu, run the following commands:

- `sudo apt install libswitch-perl`
- `sudo apt install python-ply`
- `sudo apt install python-pip` or `sudo apt install python3-pip`

NSPEPI tool unsupported features

July 3, 2024

This topic provides information about the features that are not supported by the NSPEPI tool.

Commands or features not handled by the nspepi conversion tool

The following are some commands that are not handled as part of the auto conversion process.

- Client security expressions are not handled.
- Authentication
- Authorization
- VPN
- Syslog
- Nslog
- File based Classic expressions are not handled.

Note:

For some features like Patclass/filter, the command syntax is changed. If there are command policies, then command policies might need to be changed depending on customer requirement.

To convert classic policies to advanced policies for the following features, reach out to NetScaler customer support:

- Sure Connect (SC)
- Priority Queuing (PQ)
- HTTP Denial of Service (HDOS)
- HTML Injection

Binding Priorities

Advanced policies do not allow arbitrary interleaving by priority between global and non-global and between different binding types. If you rely on such interleaving of Classic policy priorities, you need to adjust the priorities to conform to the Advanced policy rules and to get the desired behavior.

Priorities in Advanced policies are local to a bind point. A bind point is a unique combination of protocol, feature, direction, and entity (entities are specific virtual servers, users, groups, services, and either global override or global default). Policy priorities are not followed across bind points.

For a given protocol, feature, and direction, the following is the order of evaluation of Advanced policies:

- Global override.
- Authentication, authorization, and auditing user (Current).
- Authentication, authorization, and auditing groups (that the user is a member of) in order of weight. The ordering is undefined if two or more groups have the same weight.
- LB virtual server that either the request was received on or that Content Switching selected.
- Content switching virtual server, cache redirection virtual server that the request was received on.
- Service selected by load balancing.
- Global default.

For authorization policy evaluation, the order is:

- Systems override.
- Load balancing virtual server that either the request was received on or that CS selected.
- Content switching virtual server that the request was received on.
- System default.

Within each bind point, the policies are evaluated in order of priority from lowest numbered to highest numbered. Policies are only evaluated for the protocol used and the direction that the message was received from.

Warning

The following scenarios show the warnings in the `nspepi` tool:

- If the rule expression of load balancing virtual server is a boolean expression, the equivalent advanced expression results in boolean value in string format. This results in functionality change when the rule is used for `persistenceType` or `lbMethod`. To avoid the functionality change, the command is modified by removing the keywords `rule` and `persistenceType`.

- If the state field of the binding command is DISABLED. If the state is disabled, then command is not in use. The state parameter is not supported with the advanced configuration. So, if we convert this configuration then the functionality changes. If the command is required, take a backup because comments will not be saved in `ns.conf` after triggering `save ns config`.

Warning in CMP feature conversion:

- If a global cmp parameter policy type is set to CLASSIC and advanced policies are bound to global. Without conversion, bounded advanced policies will not be evaluated because the global policy type is set to CLASSIC. After conversion, the policy type would be converted to ADVANCED. So, if we do not comment out the existing global advanced bindings, then these bindings are evaluated and can change the functionality.
- If the global cmp parameter policy type is set to ADVANCED and classic policies are bound to global. Without conversion, these global classic bindings would not be evaluated because global policy type is ADVANCED. So, to preserve the functionality, we comment out the converted configuration, otherwise converted advanced policies are evaluated and can change the functionality.

Note:

All classic policy bindings with `-state` option disabled are commented out. The `-state` option is not available for Advanced policy bindings.

Limitations of NSPEPI tool

The following scenarios cause errors in the `nspepi` tool:

- If there is an issue when converting an expression
- If a named policy expression uses the `-clientSecurityMessage` parameter because this parameter is not supported in the Advanced policy expression
- If load balancing virtual server rule expression is a complex expression and has multiple CONTENT based expressions
- Errors in CMP feature conversion occur in the following scenarios:
 - Both classic and advanced policies are bound to global
 - Classic policies are bound at global and CMP parameter is advanced
 - Advanced policies are bound at global and CMP parameter is classic
 - Classic policies are bound to a virtual server and advanced policies are bound to a global server
 - Advanced policies are bound to a virtual server and classic policies are bound to a global server
 - Classic policies are bound to a virtual server and both classic and advanced policies are bound to a global server

- Advanced policies are bound to a virtual server and both classic and advanced policies are bound to a global server
- Errors in converting filter feature policy occur in the following scenarios:
 - If action is of type FORWARD
 - If action is part of HTMLInjection feature, mainly following commands:
 - `add filter action <action name> ADD prebody`
 - `add filter action <action name> ADD postbody`
 - If there are existing rewrite or responder policy bindings with `gotoPriorityExpression END` or `USE_INNVOCATION`, then filter policy bindings cannot be converted.
- When both classic and advanced SSL policies are bound, classic SSL bindings cannot be converted.
- If the classic named expression has the same name as the callout entity name
- If the classic expression name is invalid for the advanced expression
- If the converted expression length is more than 1499 characters
- If the classic expression has client security or file-based expressions

Classic policy bindings that require manual reprioritization

Here are some types of Classic policy bindings that require manual reprioritization to accomplish your needs. All these are for a given feature and the direction.

- Classic priorities that increase in priority number opposite to the direction of the above entity type lists. For example, a content switching virtual server binding lower than a load balancing virtual server binding.
- Classic priorities that interleave authentication, authorization, and auditing groups. One part of one group is before some other group and yet another part is after part of that other group.
- Classic priorities that increase in number other than the order of weights of authentication, authorization, and auditing groups.
- Classic global priorities that are less than some non-global priority and the same global priorities are greater than some other non-global priority (in other words, any segment of priorities that are a non-global, followed by one or more globals, followed by a non-global).

Preconfiguration check tool

September 24, 2024

Note:

You can download the latest version of NSPEPI and preconfiguration check tool from public GitHub. For information on how to download the tools, see [GitHub NEPEPI](#) and [GitHub preconfiguration](#). We recommend you to use the latest version of the tool for the most complete and up-to-date version.

The preconfiguration check tool is available from NetScaler release 12.1. You can use this tool to check if any invalid, removed, or deprecated functionality is still used in any feature configuration. The tool validates if the configuration file contains parameters or commands that are removed or deprecated from NetScaler release 13.1. The tool validates only the configuration files that are from a saved configuration, for example `ns.conf`.

If the validation result shows usage of removed or invalid commands, then you must first modify the configuration to the NetScaler recommended alternative before upgrading your appliance.

The tool also checks for classic policy expressions in feature configurations that no longer support classic expressions. You can use the `nspepi` tool to convert the classic configuration to the advanced configuration. After the successful run, the tool generates two files, one for the invalid commands and one for the deprecated parameters or commands. The file with invalid commands has the same name as the input file but with the prefix “issues_”. The file with the deprecated commands, has the “deprecated_” prefix.

The tool validates the following:

1. Classic policy expressions in Content Switching, Cache Redirection, AppFW, SSL, and CMP features.
2. Filter feature (also known as Content Filtering) - actions, policies, and binding.
3. SPDY in HTTP profile, sure connect (SC), priority queuing (PQ), HTTP Denial of Service (DoS), and HTML Injection features.
4. Classic expressions in load balancing persistence rules.
5. “Pattern” and “bypassSafetyCheck” parameters in Rewrite actions.
6. “patclass” configuration entity.
7. “HTTP.REQ.BODY” with no argument in Advanced expressions.
8. Q and S prefixes in Advanced expressions.
9. “PolicyType” parameter for the cmp parameter setting.
10. Deprecated commands and parameters.

Run preconfiguration check tool in UNIX Shell

At the command prompt, type:

```
1 check_invalid_config <config_file> -buildVersion <build version>
```

In the command syntax,

- `<config file>` refers to the NetScaler configuration file. The file must be from a saved configuration such as `ns.conf`.
- `<build version>` refers to the build for which you want to know the deprecated and removed commands. If the build version is not specified, then by default, the tool detects the deprecated and removed commands for NetScaler release 13.1.

Example:

```
root@ns# check_invalid_config /nsconfig/ns.conf -buildVersion 13.1
```

Run the preconfiguration check tool by using the GUI

You can run the preconfiguration check tool as part of the upgrade process using the GUI. To run the tool, perform the following steps:

1. In a web browser, type the IP address of the NetScaler and login using the user name and password.
2. Navigate to **System > Upgrade**.
3. On the **System Upgrade** page, select the **Enable NSPEPI Tool** checkbox.
4. Click **Upgrade**.

Sample output with invalid commands

The following is a sample output of the configuration file having invalid commands:

```
1 root@ns# check_invalid_config sample_conf_1.conf
2
3 The following configuration lines will get errors in 13.1 and both they
4   and dependent configuration will be removed from the configuration:
5 add cmp policy cmp_pol -rule ns_true -resAction GZIP
6 add cs policy cs_pol_2 -rule ns_true
7 add cs policy cs_pol_3 -domain www.abc.com
8 add cs policy cs_pol_4 -url "/abc"
9 add rewrite action act_1 replace_all "http.req.body(1000)" http.req.url
10  -pattern abcd
11 add rewrite action act_123 replace_all http.req.url "\"aaaa\"" -pattern
12  abcd
13 add responder action ract respondwith "Q.URL + Q.HEADER(\"abcd\")"
14 add appfw policy aff_pol_1 "http.req.body.length.gt(10)" APPFW_BYPASS
15 add appfw policy aff_pol ns_true APPFW_BYPASS
16
17 The nspepi upgrade tool can be useful in converting your configuration
18 - see the documentation at https://docs.citrix.com/en-us/citrix-adc/current-release/appexpert/policies-and-expressions/introduction-to-policies-and-exp/converting-policy-expressions-nspepi-tool.html.
```

```
15
16 NOTE: the nspepi tool doesn't convert the following configurations:
17     1. SureConnect commands
18     2. PriorityQueuing commands
19     3. HTTP Denial of Service Protection commands
20     4. Classic SSL commands
21     5. HTMLInjection commands.
22
23 NOTE: No deprecated commands detected in the configuration.
```

If you get the preceding errors, you can use the `nspepi` upgrade tool to convert the configuration or manually convert the configuration. For more information, see [nspepi tool](#).

Note:

You can run the `nspepi` tool only on NetScaler version 12.1, 13.0 and later versions.

Sample output with invalid and deprecated commands

The following is a sample output of the configuration file having both invalid and deprecated commands:

```
1 root@ns# check_invalid_config sample_conf_2.conf
2
3 The following configuration lines will get errors in 13.1 and both they
4   and dependent configuration will be removed from the configuration:
5 add cmp policy cmp_pol -rule ns_true -resAction GZIP
6 add cs policy cs_pol_2 -rule ns_true
7 add cs policy cs_pol_3 -domain www.abc.com
8 add cs policy cs_pol_4 -url "/abc"
9 add rewrite action act_1 replace_all "http.req.body(1000)" http.req.url
10  -pattern abcd
11 add rewrite action act_123 replace_all http.req.url "\"aaaa\"" -pattern
12  abcd
13 add responder action ract respondwith "Q.URL + Q.HEADER(\"abcd\")"
14 add appfw policy aff_pol_1 "http.req.body.length.gt(10)" APPFW_BYPASS
15 add appfw policy aff_pol ns_true APPFW_BYPASS
16
17 The nspepi upgrade tool can be useful in converting your configuration
18 - see the documentation at https://docs.citrix.com/en-us/citrix-adc/current-release/appexpert/policies-and-expressions/introduction-to-policies-and-exp/converting-policy-expressions-nspepi-tool.html.
19
20 NOTE: the nspepi tool doesn't convert the following configurations:
21     1. SureConnect commands
22     2. PriorityQueuing commands
23     3. HTTP Denial of Service Protection commands
24     4. Classic SSL commands
25     5. HTMLInjection commands.
26
```

23 NOTE: some deprecated commands have also been detected in the config file, please check `./deprecated_sample_conf_2.conf` file for the deprecated commands.

Sample output with no invalid commands but with deprecated commands

The following is a sample output of the configuration having deprecated commands but no invalid commands:

```
1 root@ns# check_invalid_config sample_conf_3.conf
2
3 The following configuration lines have been deprecated in 13.1 and will
  be removed in future releases:
4 [add authentication localPolicy lpol ns_true] command has been
  deprecated, please use the advanced authentication policy command
5 [add authentication certPolicy auth_pol_1 ns_true auth_act] command has
  been deprecated, please use the advanced authentication policy
  command
6 [add authentication negotiatePolicy auth_pol_2 ns_true auth_act]
  command has been deprecated, please use the advanced authentication
  policy command
7 [add authentication tacacsPolicy auth_pol_3 ns_true auth_act] command
  has been deprecated, please use the advanced authentication policy
  command
8 [add authentication samlPolicy auth_pol_4 ns_true auth_act] command has
  been deprecated, please use the advanced authentication policy
  command
9 [add authentication radiusPolicy auth_pol_5 ns_true auth_act] command
  has been deprecated, please use the advanced authentication policy
  command
10 [add authentication ldapPolicy auth_pol_6 ns_true auth_act] command has
  been deprecated, please use the advanced authentication policy
  command
11 [add authentication webAuthPolicy auth_pol_1 -rule ns_true -action
  auth_act] command has been deprecated, please use the advanced
  authentication policy command
12 [add authentication dfaPolicy auth_pol_1 -rule ns_true -action auth_act
  ] command has been deprecated, please use the advanced
  authentication policy command
13
14 For the complete deprecated commands, please see the output of ./
  deprecated_sample_conf_3.conf file.
15
16 No invalid config detected with the configuration.
```

Sample output without validation errors and warnings

The following is a sample output of the configuration file having no invalid, removed, or deprecated commands:


```
1 root@ns# check_invalid_config /var/tmp/new_ns.conf
2 No invalid or deprecated config detected with the configuration.
```

Classic policy deprecation FAQs

October 9, 2024

- **What are the classic policies deprecated from NetScaler 12.0 release onwards?**

All the features and functionalities mentioned in the [Deprecated policies](#) table are deprecated from NetScaler release 12.0 build 56.20. See the following tables (in PDF format) for deprecated feature and policy details.

- [Table 1](#) for deprecated policies and its alternative.
- [Table 2](#) for deprecated NetScaler functionalities and its alternative with configuration details.

- **How can I convert classic policy based feature and functionalities to Advanced policy?**

You can use the NetScaler proprietary `nspepi` tool to convert commands, expressions, and configurations. `nspepi` tool helps to convert all the classic expressions in the NetScaler configuration to the Advanced policy expressions. For more information about the `nspepi` tool, see [Converting policy expressions using NSPEPI tool](#).

- **From which release are classic policy based features and functionalities deprecated?**

NetScaler 12.0 build 56.20 and later.

- **From which release are the deprecated classic policy based features and functionalities removed from the NetScaler appliance?**

NetScaler version 13.1 onwards. For more information, see [Deprecated policies](#) table.

- **What steps to follow when I upgrade my appliance to a build that does not support the classic policy based features?**

- Some of the classic policy based features are no longer available in NetScaler and need to be converted manually. Contact NetScaler customer support to convert manually.
- Some of the classic policy based features are no longer supported and need to be converted using `nspepi` tool. For more information on how to convert see, [Upgrade considerations for configurations with classic policies](#).
- Some of the classic policy based features are still supported until a further announcement is made.

For more information on classic features that are supported and not supported, see [CTX296948](#).

- **How long will the deprecated features be supported on a NetScaler appliance?**

Classic policies are deprecated since NetScaler release 12.0 build 56.20. Starting with release 13.1, support for classic policies is removed from certain features. To view the complete list of features or commands that are no longer supported from release 13.1 onwards, see Table 2 in [Notice of Status Change Announcement for NetScaler Classic Policy Based Features and Functionalities](#).

- **Do I have to reboot my appliance after converting the configuration file?**

Yes, you have to reboot the NetScaler instance after successful conversion of the `ns.config` file.

Before you proceed

May 2, 2023

Before configuring expressions and policies, be sure you understand the relevant NetScaler feature and the structure of your data, as follows:

- Read the documentation on the relevant feature.
- Look at the data stream for the type of data that you want to configure.

You may want to run a trace on the type of traffic or content that you want to configure. This will give you an idea of the parameters and values, and operations on these parameters and values, that you need to specify in an expression.

Note: The NetScaler supports Advanced policy within a feature. You cannot have both types in the same feature. Over the past few releases, some NetScaler features have migrated from using policies and expressions to Advanced policy and expressions. If a feature of interest to you has changed to the Advanced policy format, you may have to manually migrate the older information. Following are guidelines for deciding if you need to migrate your policies:

- If you configured classic policies in a version of the Integrated Caching feature prior to release 9.0 and then upgrade to version 9.0 or later, there is no impact. All legacy policies are migrated to the Advanced policy format.
- For other features, you need to manually migrate classic policies and expressions to the Advanced syntax if the feature has migrated to the Advanced policy.

Configure advanced policy infrastructure

May 2, 2023

You can create advanced policies for various NetScaler features, including DNS, Rewrite, Responder, and Integrated Caching, and the clientless access function in the NetScaler Gateway. Policies control the behavior of these features.

When you create a policy, you assign it a name, a rule (an expression), feature-specific attributes, and an action that is taken when data matches the policy. After creating the policy, you determine when it is invoked by binding it globally or to either request-time or response-time processing for a virtual server.

Policies that share the same bind point are known as a *policy bank*. For example, all policies that are bound to a virtual server constitute the policy bank for the virtual server. When binding the policy, you assign it a priority level to specify when it is invoked relative to other policies in the bank. In addition to assigning a priority level, you can configure an arbitrary evaluation order for policies in a bank by specifying Goto expressions.

In addition to policy banks that are associated with a built-in bind point or a virtual server, you can configure *policy labels*. A policy label is a policy bank that is identified by an arbitrary name. You invoke a policy label, and the policies in it, from a global or virtual-server-specific policy bank. A policy label or a virtual-server policy bank can be invoked from multiple policy banks.

For some features, you can use the policy manager to configure and bind policies.

Rules for names in identifiers used in policies

May 2, 2023

The names of identifiers in the named expression, HTTP callout, pattern set, and rate limiting features must begin with an ASCII alphabet or an underscore (_). The remaining characters can be ASCII alphanumeric characters or underscores (_).

The names of these identifiers must not begin with the following reserved words:

- The words ALT, TRUE, or FALSE or the Q or S one-character identifier.
- The special-syntax indicator RE (for regular expressions) or XP (for XPath expressions).
- Expression prefixes, which currently are the following:
 - CLIENT

- EXTEND
- HTTP
- SERVER
- SYS
- TARGET
- TEXT
- URL
- MYSQL
- MSSQL

Additionally, the names of these identifiers cannot be the same as the names of enumeration constants used in the policy infrastructure. For example, the name of an identifier cannot be IGNORECASE, YEAR, or LATIN2_CZECH_CS (a MySQL character set).

Note: The NetScaler appliance performs a case-insensitive comparison of identifiers with these words and enumeration constants. For example, names of the identifiers cannot begin with TRUE, True, or true.

Create or modify a policy

September 21, 2020

All policies have some common elements. Creating a policy consists, at minimum, of naming the policy and configuring a rule. The policy configuration tools for the various features have areas of overlap, but also differences. For the details of configuring a policy for a particular feature, including associating an action with the policy, see the documentation for the feature.

To create a policy, begin by determining the purpose of the policy. For example, you may want to define a policy that identifies HTTP requests for image files, or client requests that contain an SSL certificate. In addition to knowing the type of information that you want the policy to work with, you need to know the format of the data that the policy is analyzing.

Next, determine whether the policy is globally applicable, or if it pertains to a particular virtual server. Also consider the effect that the order in which your policies are evaluated (which will be determined by how you bind the policies) will have on the policy that you are about to configure.

Create a policy by using the CLI

At the command prompt, type the following commands to create a policy and verify the configuration:

```

1 - add responder|dns|cs|rewrite|cache policy <policyName> -rule <
    expression> [<feature-specific information>]
2
3 - show rewrite policy <name>

```

Example 1:

```

1 add rewrite policy "pol_remove-ae" true "act_remove-ae"
2 Done
3 > show rewrite policy pol_remove-ae
4     Name: pol_remove-ae
5     Rule: true
6     RewriteAction: act_remove-ae
7     UndefAction: Use Global
8     Hits: 0
9     Undef Hits: 0
10    Bound to: GLOBAL RES_OVERRIDE
11    Priority: 90
12    GotoPriorityExpression: END
13 Done

```

Example 2:

```

1 add cache policy BranchReportsCachePolicy -rule q{
2   http.req.url.query.value("actionoverride").contains("branchReport s")
3   }
4   -action cache
5 Done
6 show cache policy BranchReportsCachePolicy
7     Name: BranchReportsCachePolicy
8     Rule: http.req.url.query.value("actionoverride").contains("
9     branchReports")
10    CacheAction: CACHE
11    Stored in group: DEFAULT
12    UndefAction: Use Global
13    Hits: 0
14    Undef Hits: 0
15 Done

```

Note: At the command line, quote marks within a policy rule (the expression) must be escaped or delimited with the q delimiter. For more information, see [Configure advanced policy expressions: Get started](#).

Create or modify a policy by using the GUI

1. In the navigation pane, expand the name of the feature for which you want to configure a policy, and then click **Policies**. For example, you can select **Content Switching, Integrated Caching, DNS, Rewrite, or Responder**.

2. In the details pane, click **Add**, or select an existing policy and click **Open**. A policy configuration dialog box appears.
3. Specify values for the following parameters. (An asterisk indicates a required parameter. For a term in parentheses, see the corresponding parameter in “Parameters for creating or modifying a policy.”)
4. Click **Create**, and then click **Close**.
5. Click **Save**. A policy is added.

Note: After you create a policy, you can view the policy’s details by clicking the policy entry in the configuration pane. Details that are highlighted and underlined are links to the corresponding entity (for example, a named expression).

Policy configuration examples

September 21, 2020

These examples show how policies and their associated actions are entered at the command line interface. In the configuration utility, the expressions would appear in the Expression window of the feature-configuration dialog box for the integrated caching or rewrite feature.

Following is an example of creating a caching policy. Note that actions for caching policies are built in, so you do not need to configure them separately from the policy.

```
1 add cache policy BranchReportsCachePolicy -rule q{
2 http.req.url.query.value("actionoverride").contains("branchReports") }
3 -action cache
```

Following is an example of a rewrite policy and action:

```
1 add rewrite action myAction1 INSERT_HTTP_HEADER "myHeader" "
   valueForMyHeader"
2 add rewrite policy myPolicy1 "http.req.url.contains(\"myURLstring\")"
   myAction1
```

Note: At the command line, quote marks within a policy rule (the expression) must be escaped or delimited with the q delimiter. For more information, see [Configure advanced policy expressions: Get started](#).

Configure and bind policies with the policy manager

May 2, 2023

Warning:

Classic policy expressions are no longer supported from NetScaler 12.0 build 56.20 onwards and as an alternative, Citrix recommends you to use Advanced policies. For more information, see [Advanced Policies](#).

Some applications provide a specialized Policy Manager in the NetScaler configuration utility to simplify configuring policy banks. It also lets you find and delete policies and actions that are not being used.

The Policy Manager is currently available for the Rewrite, Integrated Caching, Responder, and Compression features.

The following are keyboard equivalents for the procedures in this section:

- For editing a cell in the Policy Manager, you can tab to the cell and click F2 or press the SPACE bar on the keyboard.
- To select an entry in a drop-down menu, you can tab to the entry, press the space bar to view the drop-down menu, use the UP and DOWN ARROW keys to navigate to the entry that you want, and press the space bar again to select the entry.
- To cancel a selection in a drop-down menu, press the Escape key.
- To insert a policy, tab to the row above the insertion point and press Control + Insert, or click Insert Policy.
- To remove a policy, tab to the row that contains the policy and press Delete.

Note: Note that when you delete the policy, the NetScaler searches the Goto Expression values of other policies in the bank. If any of these Goto Expression values match the priority level of the deleted policy, they are removed.

Configure policy bindings by using the policy manager

1. In the navigation pane, click the feature for which you want to configure policies. The choices are Responder, Integrated Caching, Rewrite or Compression.
2. In the details pane, click **Policy Manager**.
3. At any time before you complete configuring policy bindings, if you want to configure bindings for policies that use the Advanced Policy click the Switch to Advanced Policy button.
4. For features other than Responder, to specify the bind point, click Request or Response, and then click one of the request-time or response-time bind points. The options are Override Global, LB Virtual Server, CS Virtual Server, Default Global, or Policy Label. If you are configuring the Responder, the Request and Response flow types are not available.

5. To bind a policy to this bind point, click Insert Policy, and select a previously configured policy, a NOPOLICY label, or the New policy option. Depending on the option that you select, you have the following choices:
 - **New policy:** Create the policy as described in “[Create or modify a policy](#),” and then configure the priority level, GoTo expression, and policy invocation as described in the table, “[Format of each entry in a policy bank](#).”
 - **Existing policy, NOPOLICY, or NOPOLICY\<feature name\>:** Configure the priority level, GoTo expression, and policy invocation as described in the table, “[Format of each entry in a policy bank](#).” The **NOPOLICY** or **NOPOLICY\<feature name\>** options are available only for policies that use Advanced Policies.
6. Repeat the preceding steps to add entries to this policy bank.
7. To modify the priority level for an entry, you can do any of the following:
 - Double-click the Priority field for an entry and edit the value.
 - Click and drag a policy to another row in the table.
 - Click Regenerate Priorities.

In all three cases, priority levels of all other policies are modified as needed to accommodate the new value. Goto Expressions with integer values are also updated automatically. For example, if you change a priority value of 10 to 100, all policies with a Goto Expression value of 10 are updated to the value 100.

8. To change the policy, action, or policy bank invocation for an row in the table, click the down arrow to the right of the entry and do one of the following:
 - To change the policy, select another policy name or select New Policy and follow the steps in [Create or modify a policy](#).
 - To change the Goto Expression, select Next, End, USE_INVOCATION_RESULT, or select more and enter an expression whose result returns the priority level of another entry in this policy bank.
 - To modify an invocation, select an existing policy bank, or click New Policy Label and follow the steps in [Bind a policy to a policy label](#).
9. To unbind a policy or a policy label invocation from this bank, click any field in the row that contains the policy or policy label, and then click Unbind Policy.
10. When you are done, click Apply Changes. A message in the status bar indicates that the policy is bound successfully.

Remove unused policies by using the policy manager

1. In the navigation pane, click the feature for which you want to configure the policy bank. The choices are Responder, Integrated Caching, or Rewrite.
2. In the details pane, click <Feature Name> policy manager.
3. In the **Feature Name > Policy Manager** dialog box, click **Cleanup Configuration**.
4. In the **Cleanup Configuration** dialog box, select the items that you want to delete, and then click **Remove**.
5. In the Remove dialog box, click **Yes**.
6. Click **Close**. A message in the status bar indicates that the policy is removed successfully.

Unbind a policy

January 4, 2021

If you want to re-assign a policy or delete it, you must first remove its binding.

Unbind an integrated caching, rewrite, or compression advanced policy globally by using the CLI

At the command prompt, type the following commands to unbind an integrated caching, rewrite, or compression Advanced policy globally and verify the configuration:

```
1 - unbind cache|rewrite|cmp global <policyName> [-type req_override|
   req_default|res_override|res_default] [-priority <positiveInteger>]
2
3 - show cache|rewrite|cmp global
```

Example:

```
1 > unbind cache global_nonPostReq
2 Done
3 > show cache global
4     1)      Global bindpoint: REQ_DEFAULT
5             Number of bound policies: 1
6
7     2)      Global bindpoint: RES_DEFAULT
8             Number of bound policies: 1
9
10 Done
```

The priority is required only for the “dummy” policy named NOPOLICY.

Unbind a responder policy globally by using the CLI

At the command prompt, type the following commands to unbind a responder policy globally and verify the configuration:

```
1 - unbind responder global <policyName> [-type override|default] [-  
    priority <positiveInteger>]  
2  
3 - show responder global
```

Example:

```
1 > unbind responder global pol404Error  
2 Done  
3 > show responder global  
4     1)      Global bindpoint: REQ_DEFAULT  
5           Number of bound policies: 1  
6 Done
```

The priority is required only for the “dummy” policy named NOPOLICY.

Unbind a DNS policy globally by using the CLI

At the command prompt, type the following commands to unbind a DNS policy globally and verify the configuration:

```
1 - unbind responder global <policyName>  
2  
3 - unbind responder global
```

Example:

```
1 unbind dns global dfgdfg  
2 Done  
3 show dns global  
4     Policy name : dfgdfggfhg  
5           Priority : 100  
6           Goto expression : END  
7 Done
```

Unbind an advanced policy from a virtual server by using the CLI

At the command prompt, type the following commands to unbind an Advanced policy from a virtual server and verify the configuration:

```
1 - unbind cs vserver <name> -policyName <policyName> [-priority <  
    positiveInteger>] [-type REQUEST|RESPONSE]  
2
```

```
3 - show lb vserver <name>
```

Example:

```
1 unbind cs vserver vs-cont-switch -policyName pol1
2 Done
3 > show cs vserver vs-cont-switch
4         vs-cont-switch (10.102.29.10:80) - HTTP Type: CONTENT
5         State: UP
6         Last state change was at Wed Aug 19 08:56:55 2009 (+18 ms)
7         Time since last state change: 0 days, 02:47:55.750
8         Client Idle Timeout: 180 sec
9         Down state flush: ENABLED
10        Disable Primary Vserver On Down : DISABLED
11        Port Rewrite : DISABLED
12        State Update: DISABLED
13        Default:          Content Precedence: RULE
14        Vserver IP and Port insertion: OFF
15        Case Sensitivity: ON
16        Push: DISABLED   Push VServer:
17        Push Label Rule: none
18 Done
```

The priority is required only for the “dummy” policy named NOPOLICY.

Unbind an integrated caching, responder, rewrite, or compression Advanced policy globally by using the GUI

1. In the navigation pane, click the feature with the policy that you want to unbind (for example, Integrated Caching).
2. In the details pane, click <Feature Name> policy manager.
3. In the **Policy Manager** dialog box, select the bind point with the policy that you want to unbind, for example, Advanced Global.
4. Click the policy name that you want to unbind, and then click Unbind Policy.
5. Click **Apply Changes**.
6. Click **Close**. A message in the status bar indicates that the policy is unbound successfully.

Unbind a DNS policy globally by using the GUI

1. Navigate to **Traffic Management > DNS > Policies**.
2. In the details pane, click **Global Bindings**.
3. In the **Global Bindings** dialog box, select policy and click **unbind policy**.
4. Click **OK**. A message in the status bar indicates that the policy is unbound successfully.

Unbind an advanced policy from a load balancing or content switching virtual server by using the GUI

1. Navigate to **Traffic Management**, and expand Load Balancing or Content Switching, and then click **Virtual Servers**.
2. In the details pane, double-click the virtual server from which you want to unbind the policy.
3. On the **Policies** tab, in the **Active** column, clear the check box next to the policy that you want to unbind.
4. Click **OK**. A message in the status bar indicates that the policy is unbound successfully.

Create policy labels

October 31, 2023

In addition to the built-in bind points where you set up policy banks, you can also configure user-defined policy labels and associate policies with them.

Within a policy label, you bind policies and specify the order of evaluation of each policy relative to others in the bank of policies for the policy label. The NetScaler also permits you to define an arbitrary evaluation order as follows:

- You can use “goto” expressions to point to the next entry in the bank to be evaluated after the current one.
- You can use an entry in a policy bank to invoke another bank.

Each feature determines the type of policy that you can bind to a policy label, the type of load balancing virtual server that you can bind the label to, and the type of content switching virtual server from which the label can be invoked. For example, a TCP policy label can only be bound to a TCP load balancing virtual server. You cannot bind HTTP policies to a policy label of this type. And you can invoke a TCP policy label only from a TCP content switching virtual server.

After configuring a new policy label, you can invoke it from one or more banks for the built-in bind points.

Create a caching policy label by using the CLI

At the command prompt, type the following commands to create a Caching policy label and verify the configuration:

```
1 - add cache policylabel <labelName> -evaluates req|res
2
3 - show cache policylabel<labelName>
```

Example:

```
1 > add cache policylabel lbl-cache-pol -evaluates req
2 Done
3
4 > show cache policylabel lbl-cache-pol
5     Label Name: lbl-cache-pol
6     Evaluates: REQ
7     Number of bound policies: 0
8     Number of times invoked: 0
9 Done
```

Create a content switching policy label by using the CLI

At the command prompt, type the following commands to create a Content Switching policy label and verify the configuration:

```
1 - add cs policylabel <labelName> http|tcp|rtsp|ssl
2
3 - show cs policylabel <labelName>
```

Example:

```
1 > add cs policylabel lbl-cs-pol http
2 Done
3 > show cs policylabel lbl-cs-pol
4     Label Name: lbl-cs-pol
5     Label Type: HTTP
6     Number of bound policies: 0
7     Number of times invoked: 0
8 Done
```

Create a rewrite policy label by using the CLI

At the command prompt, type the following commands to create a Rewrite policy label and verify the configuration:

```
1 - add rewrite policylabel <labelName> http_req|http_res|url|text|
   clientless_vpn_req|clientless_vpn_res
2
3 - show rewrite policylabel <labelName>
```

Example:

```
1 > add rewrite policylabel lbl-rewrt-pol http_req
2 Done
3
4 > show rewrite policylabel lbl-rewrt-pol
5     Label Name: lbl-rewrt-pol
```

```
6          Transform Name: http_req
7          Number of bound policies: 0
8          Number of times invoked: 0
9 Done
```

Create a responder policy label by using the CLI

At the command prompt, type the following commands to create a Responder policy label and verify the configuration:

```
1 - add responder polyclabel <labelName>
2
3 - show responder polyclabel <labelName>
```

Example:

```
1 > add responder polyclabel lbl-respndr-pol
2 Done
3
4 > show responder polyclabel lbl-respndr-pol
5          Label Name: lbl-respndr-pol
6          Number of bound policies: 0
7          Number of times invoked: 0
8 Done
```

Note: Invoke this policy label from a policy bank. For more information, see the “Binding a Policy to a Policy Label” section.

Create a policy label by using the GUI

1. In the navigation pane, expand the feature for which you want to create a policy label, and then click **Policy Labels**. For example, to create a rewrite policy label, navigate to **AppExpert > Rewrite** and then click **Policy Labels**.
2. In the details pane, click **Add**.
3. In the Name box, enter a unique name for this policy label.
4. Enter feature-specific information for the policy label. For example, for rewrite policy label specific information, see [Configure a rewrite policy label](#).
5. Click **Create**.
6. Configure one of the built-in policy banks to invoke this policy label. For more information, see the Binding a Policy to a Policy Label section. A message in the status bar indicates that the policy label is created successfully.

For more examples on creating a policy label, see the following:

- [Create an authentication policy label](#)

- [Configure content switching policy labels](#)
- [Configure a policy label in an integrated cache](#)

Bind a policy to a policy label

As with policy banks that are bound to the built-in bind points, each entry in a policy label is a policy that is bound to the policy label. As with policies that are bound globally or to a vserver, each policy that is bound to the policy label can also invoke a policy bank or a policy label that is evaluated after the current entry has been processed. The following table summarizes the entries in a policy label.

- **Name.** The name of a policy, or, to invoke another policy bank without evaluating a policy, the “dummy” policy name NOPOLICY.

You can specify NOPOLICY more than once in a policy bank, but you can specify a named policy only once.

- **Priority.** An integer. This setting can work with the Goto expression.
- **Goto Expression.** Determines the next policy to evaluate in this bank. You can provide one of the following values:
 - **NEXT.** Go to the policy with the next higher priority.
 - **END.** Stop evaluation.
 - **USE_INVOCATION_RESULT.** Applicable if this entry invokes another policy bank. If the final Goto in the invoked bank has a value of END, evaluation stops. If the final Goto is anything other than END, the current policy bank performs a NEXT.
 - **Positive number:** The priority number of the next policy to be evaluated.
 - **Numeric expression.** An expression that produces the priority number of the next policy to be evaluated.

The Goto can only proceed forward in a policy bank.

If you omit the Goto expression, it is the same as specifying END.

- **Invocation Type.** Designates a policy bank type. The value can be one of the following:
 - **Request Vserver.** Invokes request-time policies that are associated with a virtual server.
 - **Response Vserver.** Invokes response-time policies that are associated with a virtual server.
 - **Policy label.** Invokes another policy bank, as identified by the policy label for the bank.
- **Invocation Name.** The name of a virtual server or a policy label, depending on the value that you specified for the Invocation Type.

Invoke or remove a policy label or virtual server policy bank

October 24, 2024

Unlike a policy, which can only be bound once, you can use a policy label or a virtual server's policy bank any number of times by invoking it. Invocation can be performed from two places:

- From the binding for a named policy in a policy bank.
- From the binding for a NOPOLICY “dummy” entry in a policy bank.

Typically, the policy label must be of the same type as the policy from which it is invoked. For example, you would invoke a responder policy label from a responder policy.

Note: When binding or unbinding a global NOPOLICY entry in a policy bank at the command line, you specify a priority to distinguish one NOPOLICY entry from another.

Invoke a rewrite or integrated caching policy label by using the CLI

At the command prompt, type the one of the following commands to invoke a rewrite or integrated caching policy label and verify the configuration:

```

1 - bind cache global <policy> -priority <positive_integer> [-
    gotoPriorityExpression <expression>] -type REQ_OVERRIDE|REQ_DEFAULT|
    RES_OVERRIDE|RES_DEFAULT] -invoke reqvserver|resvserver|policylabel
    <label_name>
2
3 - bind rewrite global<policy> -priority <positive_integer> [-
    gotoPriorityExpression <expression>] -type REQ_OVERRIDE|REQ_DEFAULT|
    RES_OVERRIDE|RES_DEFAULT] -invoke reqvserver|resvserver|policylabel
    <label_name>
4
5 - show cache global|show rewrite global

```

Example:

```

1 > bind cache global _nonPostReq2 -priority 100 -type req_override -
    invoke
2     policylabel lbl-cache-pol
3 Done
4 > show cache global
5     1)      Global bindpoint: REQ_DEFAULT
6           Number of bound policies: 2
7
8     2)      Global bindpoint: RES_DEFAULT
9           Number of bound policies: 1
10
11    3)      Global bindpoint: REQ_OVERRIDE
12           Number of bound policies: 1

```



```
13
14 Done
```

Invoke a responder policy label by using the CLI

At the command prompt, type the following commands to invoke a responder policy label and verify the configuration:

```
1 - bind responder global <policy_Name> <priority_as_positive_integer>
   [<gotoPriorityExpression>] -type REQ_OVERRIDE|REQ_DEFAULT|OVERRIDE|
   DEFAULT -invoke vserver|policylabel <label_name>
2
3 - show responder global
```

Example:

```
1 > bind responder global pol404Error1 300 -invoke policylabel lbl-
   respndr-pol
2 Done
3 > show responder global
4     1)      Global bindpoint: REQ_DEFAULT
5             Number of bound policies: 2
6
7 Done
```

Invoke a virtual server policy bank by using the CLI

At the command prompt, type the following commands to invoke a Virtual Server Policy Bank and verify the configuration:

```
1 - bind lb vserver <vserver_name> -policyName <policy_Name> -priority <
   positive_integer> [-gotoPriorityExpression <expression>] -type
   REQUEST|RESPONSE -invoke reqvserver|resvserver|policylabel <
   policy_Label_Name>
2
3 - bind lb vserver <vserver_name>
```

Example:

```
1 > bind lb vserver lbvip -policyName ns_cmp_msapp -priority 100
2 Done
3
4 > show lb vserver lbvip
5     lbvip (8.7.6.6:80) - HTTP           Type: ADDRESS
6     State: DOWN
7     Last state change was at Wed Jul 15 05:54:24 2009 (+166 ms)
8     Time since last state change: 28 days, 06:37:49.250
9     Effective State: DOWN
```

```

10      Client Idle Timeout: 180 sec
11      Down state flush: ENABLED
12      Disable Primary Vserver On Down : DISABLED
13      Port Rewrite : DISABLED
14      No. of Bound Services : 0 (Total)          0 (Active)
15      Configured Method: LEASTCONNECTION
16      Mode: IP
17      Persistence: NONE
18      Vserver IP and Port insertion: OFF
19      Push: DISABLED  Push VServer:
20      Push Multi Clients: NO
21      Push Label Rule: none
22
23      1)      CSPolicy: pol-cont-sw   CSVserver: vs-cont-sw   Priority:
           100   Hits: 0
24
25      2)      Policy : pol-ssl Priority:0
26      3)      Policy : ns_cmp_msapp Priority:100
27      4)      Policy : cf-pol Priority:1      Inherited
28 Done

```

Remove a rewrite or integrated caching policy label by using the CLI

At the command prompt, type one of the following commands to remove a rewrite or integrated caching policy label and verify the configuration:

```

1 - unbind rewrite global <policyName> -priority <positiveInteger> -type
   REQ_OVERRIDE|REQ_DEFAULT|RES_OVERRIDE|RES_DEFAULT
2
3 - unbind cache global <policyName> -priority <positiveInteger> -type
   REQ_OVERRIDE|REQ_DEFAULT|RES_OVERRIDE|RES_DEFAULT
4
5 - show rewrite global|show cache global

```

Example:

```

1 > unbind rewrite global NOPOLICY -priority 100 -type REQ_OVERRIDE
2 > show rewrite global
3 Done
4      1)      Global bindpoint: REQ_DEFAULT
5              Number of bound policies: 1
6
7 Done

```

Remove a responder policy label by using the CLI

At the command prompt, type the following commands to remove a responder policy label and verify the configuration:

```

1 - unbind responder global <policyName> -priority <positiveInteger> -
   type OVERRIDE|DEFAULT
2
3 - show responder global

```

Example:

```

1 > unbind responder global NOPOLICY -priority 100 -type REQ_DEFAULT
2 Done
3 > show responder global
4     1)      Global bindpoint: REQ_DEFAULT
5             Number of bound policies: 1
6
7 Done

```

Remove a virtual server policy label by using the CLI

At the command prompt, type one of the following commands to remove a Virtual Server policy label and verify the configuration:

```

1 - unbind lb vsrver <virtualServerName> -policyName NOPOLICY-REWRITE |
   NOPOLICY-RESPONDER|NOPOLICY-CACHE -type REQUEST|RESPONSE -priority <
   positiveInteger>
2
3 - unbind cs vsrver <virtualServerName> -policyName NOPOLICY-REWRITE |
   NOPOLICY-RESPONDER|NOPOLICY-CACHE -type REQUEST|RESPONSE -priority <
   positiveInteger>
4
5 - show lb vsrver|show cs vsrver

```

Example:

```

1 > unbind lb vsrver lbvip -policyName ns_cmp_msapp -priority 200
2 Done
3 > show lb vsrver lbvip
4     lbvip (8.7.6.6:80) - HTTP           Type: ADDRESS
5     State: DOWN
6     Last state change was at Wed Jul 15 05:54:24 2009 (+161 ms)
7     Time since last state change: 28 days, 06:47:54.600
8     Effective State: DOWN
9     Client Idle Timeout: 180 sec
10    Down state flush: ENABLED
11    Disable Primary Vserver On Down : DISABLED
12    Port Rewrite : DISABLED
13    No. of Bound Services : 0 (Total)      0 (Active)
14    Configured Method: LEASTCONNECTION
15    Mode: IP
16    Persistence: NONE
17    Vserver IP and Port insertion: OFF
18    Push: DISABLED  Push VServer:

```

```
19          Push Multi Clients: NO
20          Push Label Rule: none
21
22      1)      CSPolicy: pol-cont-sw   CSVserver: vs-cont-sw   Priority:
           100   Hits: 0
23
24      1)      Policy : pol-ssl Priority:0
25      2)      Policy : cf-pol Priority:1       Inherited
26 Done
```

Invoke a policy label or virtual server policy bank by using the GUI

1. Bind a policy, as described in [Bind a policy globally](#), [Bind a policy to a virtual server](#), or [Bind a policy to a policy label](#). Alternatively, you can enter a NOPOLICY “dummy” entry instead of a policy name. You do this if you do not want to evaluate a policy before evaluating the policy bank.
2. In the Invoke field, select the name of the policy label or virtual server policy bank that you want to evaluate if traffic matches the bound policy. A message in the status bar indicates that the policy label or virtual server policy bank is invoked successfully.

Remove a policy label invocation by using the GUI

1. Open the policy and clear the Invoke field. Unbinding the policy also removes the invocation of the label. A message in the status bar indicates that the policy label is removed successfully.

Configure a policy label or virtual server policy bank

October 24, 2024

After you have created policies, and created policy banks by binding the policies, you can perform additional configuration of policies within a label or policy bank. For example, before you configure invocation of an external policy bank, you might want to wait until you have configured that policy bank.

This topic includes the following sections:

- [Configure a policy label](#)
- [Configure a policy bank for a virtual server](#)

Configure a policy label

A policy label consists of a set of policies and invocations of other policy labels and virtual server-specific policy banks. An Invoke parameter enables you to invoke a policy label or a virtual server-specific policy bank from any other policy bank. A special-purpose NoPolicy entry enables you to invoke an external bank without processing an expression (a rule). The NoPolicy entry is a “dummy” policy that does not contain a rule.

For configuring policy labels from the NetScaler command line, note the following elaborations of the command syntax:

- gotoPriorityExpression is configured as described in Table 2. Format of Each Entry in a Policy Bank of the section “Entries in a Policy Bank” in [Bind policies using advanced policy](#).
- The type argument is required. This is unlike binding a conventional policy, where this argument is optional.
- You can invoke the bank of policies that are bound to a virtual server by using the same method as you use for invoking a policy label.

Configure a policy label by using the CLI

At the command prompt, type the following commands to configure a policy label and verify the configuration:

```

1 - bind cache|rewrite|responder policylabel <policylabelName> -
    policyName <policyName> -priority <priority> [-
    gotoPriorityExpression <gotopriorityExpression>] [-invoke reqvserver
    |resvserver|policylabel <policyLabelName>|<vserverName>]
2
3 - show cache|rewrite|responder policylabel <policylabelName>
```

Example:

```

1 bind cache policylabel _reqBuiltinDefaults -policyName _nonGetReq -
  priority 100
2 Done
3 show cache policylabel _reqBuiltinDefaults
4     Label Name: _reqBuiltinDefaults
5     Evaluates: REQ
6     Number of bound policies: 3
7     Number of times invoked: 0
8     1) Policy Name: _nonGetReq
9         Priority: 100
10        GotoPriorityExpression: END
11     2) Policy Name: _advancedConditionalReq
12        Priority: 200
13        GotoPriorityExpression: END
14
```

```

15     3)      Policy Name: _personalizedReq
16           Priority: 300
17           GotoPriorityExpression: END
18 Done

```

Invoke a policy label from a rewrite policy bank with a NOPOLICY entry by using the CLI

At the command prompt, type the following commands to invoke a policy label from a Rewrite policy bank with a NOPOLICY entry and verify the configuration:

```

1 - bind rewrite global <policyName> <priority> <gotoPriorityExpression>
   -type REQ_OVERRIDE|REQ_DEFAULT|RES_OVERRIDE|RES_DEFAULT -invoke
   reqvserver|resvserver|policylabel <policyLabelName>|<vserverName>
2
3 - show rewrite global

```

Example:

```

1 > bind rewrite global NOPOLICY 100 -type REQ_DEFAULT -invoke
   policylabel lbl-rewrt-pol
2 Done
3 > show rewrite global
4     1)      Global bindpoint: REQ_DEFAULT
5           Number of bound policies: 1
6
7     2)      Global bindpoint: REQ_OVERRIDE
8           Number of bound policies: 1
9 Done

```

Invoke a policy label from an Integrated Caching policy bank by using the CLI

At the command prompt, type the following commands to invoke a policy label from an Integrated Caching policy bank and verify the configuration:

```

1 - bind cache global NOPOLICY -priority <priority> -
   gotoPriorityExpression <gotopriorityExpression> -type REQ_OVERRIDE|
   REQ_DEFAULT|RES_OVERRIDE|RES_DEFAULT -invoke reqvserver|resvserver|
   policylabel <policyLabelName>|<vserverName>
2
3 - show cache global

```

Example:

```

1 bind cache global NOPOLICY -priority 100 -gotoPriorityExpression END -
   type REQ_DEFAULT -invoke policylabel lbl-cache-pol
2 Done
3 > show cache global
4     1)      Global bindpoint: REQ_DEFAULT
5           Number of bound policies: 2

```

```

6
7     2)      Global bindpoint: RES_DEFAULT
8             Number of bound policies: 1
9
10 Done

```

Invoke a policy label from a Responder policy bank by using the CLI

At the command prompt, type the following commands to invoke a policy label from a Responder policy bank and verify the configuration:

```

1 - bind responder global NOPOLICY <priority> <gotopriorityExpression> -
   type OVERRIDE|DEFAULT -invoke vserver|policylabel <policyLabelName
   >|<vserverName>
2
3 - show responder global

```

Example:

```

1 > bind responder global NOPOLICY 100 NEXT -type DEFAULT -invoke
   policylabel lbl-respndr-pol
2 Done
3 > show responder global
4     1)      Global bindpoint: REQ_DEFAULT
5             Number of bound policies: 2
6
7 Done

```

Configure a policy label by using the GUI

1. In the navigation pane, expand the feature for which you want to configure a policy label, and then click Policy Labels. The choices are Integrated Caching, Rewrite, or Responder.
2. In the details pane, double-click the label that you want to configure.
3. If you are adding a new policy to this policy label, click Insert Policy, and in the Policy Name field, select New Policy. For more information about adding a policy, see [Create or modify a policy](#). Note that if you are invoking a policy bank, and do not want a rule to be evaluated prior to the invocation, click Insert Policy, and in the Policy Name field select NOPOLICY.
4. For each entry in this policy label, configure the following:

- **Policy Name:**

This is already determined by the Policy Name, new policy, or NOPOLICY entry that you inserted in this bank.

- **Priority:**

A numeric value that determines either an absolute order of evaluation within the bank, or is used in conjunction with a Goto expression.

- **Expression:**

The policy rule. Policy expressions are described in detail in the following chapters. For an introduction, see [Configure advanced policy expressions: Get started](#).

- **Action:**

The action to be taken if this policy evaluates to TRUE.

- **Goto Expression:**

Optional. Used to augment the Priority level to determine the next policy or policy bank to evaluate. For more information on possible values for a Goto expression, see Table 2. Format of Each Entry in a Policy Bank of the section “Entries in a Policy Bank” in [Bind policies using advanced policy](#).

- **Invoke:**

Optional. Invokes another policy bank.

5. Click **OK**. A message in the status bar indicates that the policy label is configured successfully.

Configure a policy bank for a virtual server

You can configure a bank of policies for a virtual server. The policy bank can contain individual policies, and each entry in the policy bank can optionally invoke a policy label or a bank of policies that you configured for another virtual server. If you invoke a policy label or policy bank, you can do so without triggering an expression (a rule) by selecting a NOPOLICY “dummy” entry instead of a policy name.

Add policies to a virtual server policy bank by using the CLI

At the command prompt, type the following commands to add policies to a virtual server policy bank and verify the configuration:

```
1 - bind lb|cs vserver <virtualServerName> <serviceType> [-policyName <
    policyName>] [-priority <positiveInteger>] [-gotoPriorityExpression
    <expression>] [-type REQUEST|RESPONSE]
2
3 - show lb|cs vserver <virtualServerName>
```

Example:


```

1 add lb vserver vs-cont-sw TCP
2 Done
3 show lb vserver vs-cont-sw
4         vs-cont-sw (0.0.0.0:0) - TCP      Type: ADDRESS
5         State: DOWN
6         Last state change was at Wed Aug 19 10:04:02 2009 (+279 ms)
7         Time since last state change: 0 days, 00:02:14.420
8         Effective State: DOWN
9         Client Idle Timeout: 9000 sec
10        Down state flush: ENABLED
11        Disable Primary Vserver On Down : DISABLED
12        No. of Bound Services : 0 (Total)      0 (Active)
13        Configured Method: LEASTCONNECTION
14        Mode: IP
15        Persistence: NONE
16        Connection Failover: DISABLED
17 Done

```

Invoke a policy label from a virtual server policy bank with a NOPOLICY entry by using the CLI

At the command prompt, type the following commands to invoke a policy label from a virtual server policy bank with a NOPOLICY entry and verify the configuration:

```

1 - bind lb|cs vserver <virtualServerName> -policyName NOPOLICY-REWRITE|
  NOPOLICY-CACHE|NOPOLICY-RESPONDER -priority <integer> -type REQUEST|
  RESPONSE -gotoPriorityExpression <gotopriorityExpression> -invoke
  reqVserver|resVserver|policyLabel <vserverName>|<labelName>
2
3 - show lb vserver

```

Example:

```

1 > bind lb vserver vs-cont-sw -policyname NOPOLICY-REWRITE -priority 200
  -type REQUEST -gotoPriorityExpression NEXT -invoke policyLabel lbl-
  rewrt-pol
2 Done

```

Configure a virtual server policy bank by using the GUI

1. In the left navigation pane, expand **Traffic Management > Load Balancing, Traffic Management > Content Switching, Traffic Management > SSL Offload, Security > AAA - Application Traffic**, or **NetScaler Gateway**, as appropriate, and then click **Virtual Servers**.
2. In the details pane, select the virtual server that you want to configure, and then click **Open**.
3. In the **Configure Virtual Server** dialog box click the **Policies** tab.

4. To create a new policy in this bank, click the icon for the type of policy or policy label that you want to add to the virtual server's bank of policies, click **Insert Policy**. Note that if you want to invoke a policy label without evaluating a policy rule, select the NOPOLICY "dummy" policy.
5. To configure an existing entry in this policy bank, enter the following:
 - **Priority:**

A numeric value that determines either an absolute order of evaluation within the bank or is used in conjunction with a Goto expression.
 - **Expression:**

The policy rule. Policy expressions are described in detail in the following chapters. For an introduction, see [Configuring Advanced Policy Expressions: Getting Started](#).
 - **Action:**

The action to be taken if this policy evaluates to TRUE.
 - **Goto Expression:**

Optional. Determines the next policy or policy bank evaluate. For more information on possible values for a Goto expression, see the section "Entries in a Policy Bank" in [Bind policies using advanced policy](#).
 - **Invoke:**

Optional. To invoke another policy bank, select the name of the policy label or virtual server policy bank that you want to invoke.
6. Click **OK**. A message in the status bar indicates that the policy is configured successfully.

Policy tracing

October 24, 2024

Policy tracing in NetScaler allows you to monitor and troubleshoot policies in real time. It helps you see which policies are checked during a transaction and what actions are taken based on those checks. This feature enables you to get a better understanding of how policies work and find ways to boost your application's performance.

Some of the benefits of this feature are as follows:

- **Troubleshooting issues:** When you experience issues with application behavior, policy tracing helps pinpoint which policies were applied or skipped.

- **Validation of policy configurations:** Before deploying changes, tracing can validate that new policies operate as expected within the existing workflows.
- **Performance monitoring:** Tracking which policies are frequently evaluated can help optimize performance by identifying redundant or conflicting policies.

Policy tracing using the CLI

The following commands enable you to manage the policy tracing process.

To start policy tracing, use the following command:

```
1 start policy tracing -filterExpr <expr> [-protocolType <protocolType>]
   [-captureSSLHandshakePolicies <yes/no>]
```

- **<expr>:** This filter expression specifies the conditions under which tracing data is collected. Data is collected only when the expression evaluates to True, and it also clears any previously stored tracing data. By default, data collection occurs only for the HTTP protocol. If users want to collect data for other protocols, they must select the appropriate protocol type.
- **[-protocolType <protocolType>]:** (Optional) Specify the protocol type if other than HTTP.
- **[-captureSSLHandshakePolicies <yes/no>]:** (Optional) Specify whether to capture SSL handshake policies.

Example:

```
1 start policy tracing -filterExpr "client.ip.src.eq(10.102.102.222)" -
   protocolType HTTP -captureSSLHandshakePolicies yes
```

To stop policy tracing, use the following command:

```
1 stop policy tracing
```

To display policy tracing data, use the following command:

```
1 show policy tracing [-httpTransactionId <string>] [-detail (brief | all
   )]
```

This command displays the data collected from each PE and node. If no parameters are specified, all available data is fetched. When an `httpTransactionId` is provided, only the data related to that specific ID is displayed. If you set the detail level to “brief,” only high-level metadata is shown. This output includes the client and destination IP addresses, and a unique transaction ID generated internally for identification.

```
>
> sh policy tracing
  Filter Expr          : CLIENT.IP.SRC.EQ(10.102.102.222)
1) Trace details:
  Client IP address:Port : 10.102.102.222:39651
  Destination IP address:Port : 10.102.102.225:80
  Transaction ID         : 00000015-0e12-1671-a201-2628d9a7b0e7
  URL                    : /first_request
  Tracing start time    : Mon, 21 Oct 2024 09:20:36.119079000 GMT
  Packet engine id      : 1
  Policy Details:

  Request ContentSwitching: cs_pol_1
  Request URLTRANS: transform_pol
  Request Bot Management: bot_pol_1
  Request AppFw: app_pol
  Request Responder: resp_pol_1, resp_pol_2
  Request CACHE: cache_pol
  Request REWRITE: rw_pol
  Request LB: lb_pol
  Request Compression: cmp_pol_req_1
  Response REWRITE: rw_pol_1

2) Trace details:
  Client IP address:Port : 10.102.102.222:57754
  Destination IP address:Port : 10.102.102.225:80
  Transaction ID         : 00000016-0e12-1671-a201-2628d9a7b0e7
  URL                    : /second_request
  Tracing start time    : Mon, 21 Oct 2024 09:20:38.543079000 GMT
  Packet engine id      : 1
  Policy Details:

  Request ContentSwitching: cs_pol_2
  Request URLTRANS: No policy is evaluated to true
  Request Bot Management: bot_pol_1
  Request AppFw: No policy is evaluated to true
  Request Responder: resp_pol_3 (undef)
  Request CACHE: No policy is evaluated to true
  Request REWRITE: No policy is evaluated to true
  Request LB: lb_pol
  Request Compression: No policy is evaluated to true
  Response REWRITE: No policy is evaluated to true
  Response CACHE: No policy is evaluated to true
  Response Compression: ns_adv_cmp_content_type

Done
>
```

In the example tracing record, policies and features are listed in the order they're evaluated. For example, in trace record #1, the features are evaluated in the following order on the request side:

1. Content Switching
2. URL Transform
3. BOT Management
4. AppFw (Application Firewall)
5. Responder
6. Caching
7. Rewrite
8. Load Balancing
9. Compression

In the example, outputs indicate the following:

- “Request Responder: resp_pol_1, resp_pol_2”:
 - For the Responder feature, actions are taken for two policies: resp_pol_1 and resp_pol_2.
 - resp_pol_1 is evaluated first, followed by resp_pol_2.

- “Request Rewrite”:
 - The rewrite feature is evaluated on the request side that is when the packet goes from the client to NetScaler.
 - Conversely, “Response Rewrite” means that the rewrite feature is evaluated on the response side that is when the packet goes from NetScaler to the client.
- “Request AppFw: **No** policy is evaluated to true”:
No Application Firewall (AppFw) policy is evaluated to true during the request.
- “Request Responder: resp_pol_3 (undef)”:
 - For the Responder feature, the resp_pol_3 policy raised an undefined (undef) status for the URL “/second_request”.
 - No policy is applied and no action is taken for the responder feature.

To clear policy tracing data, use the following command:

```
1 clear policy tracing
```

This command frees up memory by removing collected tracing data. It makes sure that system resources aren't wasted on storing outdated tracing data.

Configure advanced policy expression: Getting started

December 22, 2023

Advanced policies evaluate data based on information that you supply in Advanced policy expressions. An Advanced policy expression analyzes data elements (for example, HTTP headers, source IP addresses, the NetScaler system time, and POST body data). In addition to configuring an Advanced policy expression in a policy, in some NetScaler features, you configure Advanced policy expression outside of the context of a policy.

To create an Advanced policy expression, you select a prefix that identifies a piece of data that you want to analyze, and then you specify an operation to perform on the data. For example, an operation can match a piece of data with a text string that you specify, or it can transform a text string into an HTTP header. Other operations match a returned string with a set of strings or a string pattern. You configure compound expressions by specifying Boolean and arithmetic operators, and by using parentheses to control the order of evaluation.

Advanced policy expression can also contain classic expressions. You can assign a name to a frequently used expression to avoid having to build the expression repeatedly.

Policies and a few other entities include rules that the NetScaler uses to evaluate a packet in the traffic flowing through it, to extract data from the NetScaler system itself, to send a request (a “callout”) to an external application, or to analyze another piece of data. A rule takes the form of a logical expression that is compared against traffic and ultimately returns values of TRUE or FALSE.

The elements of the rule can themselves return TRUE or FALSE, string, or numeric values.

Before configuring an Advanced policy expression, you need to understand the characteristics of the data that the policy or other entity is to evaluate. For example, when working with the Integrated Caching feature, a policy determines what data can be stored in the cache. With Integrated Caching, you need to know the URLs, headers, and other data in the HTTP requests and responses that the NetScaler receives. With this knowledge, you can configure policies that match the actual data and enable the NetScaler to manage caching for HTTP traffic. This information helps you determine the type of expression that you need to configure in the policy.

Basic elements of an advanced policy expression

May 2, 2023

An Advanced policy expression consists of, at a minimum, a prefix (or a single element used in place of a prefix). Most expressions also specify an operation to be performed on the data that the prefix identifies. You format an expression of up to 1,499 characters as follows:

```
<prefix>.<operation> [<compound-operator> <prefix>.<operation>. . .]
```

where

- <prefix>

is an anchor point for starting an expression.

The prefix is a period-delimited key that identifies a unit of data. For example, the following prefix examines HTTP requests for the presence of a header named Content-Type:

```
http.req.header(“Content-Type”)
```

Prefixes can also be used on their own to return the value of the object that the prefix identifies.

- <operation>

identifies an evaluation that is to be performed on the data identified by the prefix.

For example, consider the following expression:

```
http.req.header(“Content-Type”).eq(“text/html”)
```

In this expression, the following is the operator component:

```
eq("text/html")
```

This operator causes the NetScaler to evaluate any HTTP requests that contain a Content-Type header, and in particular, to determine if the value of this header is equal to the string "text/html." For more information, see "Operations."

- **<compound-operator>**

is a Boolean or arithmetic operator that forms a compound expression from multiple prefix or prefix.operation elements.

For example, consider the following expression:

```
http.req.header("Content-Type").eq("text/html") && http.req.url.contains(".html")
```

Prefixes

An expression prefix represents a discrete piece of data. For example, an expression prefix can represent an HTTP URL, an HTTP Cookie header, or a string in the body of an HTTP POST request. An expression prefix can identify and return a wide variety of data types, including the following:

- A client IP address in a TCP/IP packet
- NetScaler system time
- An external callout over HTTP
- A TCP or UDP record type

In most cases, an expression prefix begins with one of the following keywords:

- **CLIENT:**
 - Identifies a characteristic of the client that is either sending a request or receiving a response, as in the following examples:
 - The prefix `client.ip.dst` designates the destination IP address in the request or response.
 - The prefix `client.ip.src` designates the source IP address.
- **HTTP:**
 - Identifies an element in an HTTP request or a response, as in the following examples:
 - The prefix `http.req.body(integer)` designates the body of the HTTP request as a multiline text object, up to the character position designated in integer.
 - The prefix `http.req.header("header_name")` designates an HTTP header, as specified in `header_name`.
 - The prefix `http.req.url` designates an HTTP URL in URL-encoded format.

- SERVER:

Identifies an element in the server that is either processing a request or sending a response.

- SYS:

Identifies a characteristic of the NetScaler that is processing the traffic.

Note: Note that DNS policies support only SYS, CLIENT, and SERVER objects.

In addition, in the NetScaler Gateway, the Clientless VPN function can use the following types of prefixes:

- TEXT:

Identifies any text element in a request or a response.

- TARGET:

Identifies the target of a connection.

- URL:

Identifies an element in the URL portion of an HTTP request or response.

As a general rule of thumb, any expression prefix can be a self-contained expression. For example, the following prefix is a complete expression that returns the contents of the HTTP header specified in the string argument (enclosed in quotation marks):

```
http.res.header.("myheader")
```

Or you can combine prefixes with simple operations to determine TRUE and FALSE values. For example, the following returns a value of TRUE or FALSE:

```
http.res.header.("myheader").exists
```

You can also use complex operations on individual prefixes and multiple prefixes within an expression, as in the following example:

```
http.req.url.length + http.req.cookie.length <= 500
```

Which expression prefixes you can specify depends on the NetScaler feature. The following table describes the expression prefixes that are of interest on a per-feature basis

Feature	Types of Expression Prefix Used in the Feature
DNS	SYS, CLIENT, SERVER
Responder in Protection Features	HTTP, SYS, CLIENT
Content Switching	HTTP, SYS, CLIENT

Feature	Types of Expression Prefix Used in the Feature
Rewrite	HTTP, SYS, CLIENT, SERVER, URL, TEXT, TARGET, VPN
Integrated Caching	HTTP, SYS, CLIENT, SERVER
NetScaler Gateway, Clientless Access	HTTP, SYS, CLIENT, SERVER, URL, TEXT, TARGET, VPN

Table 1. Permitted Types of Expression Prefixes in Various NetScaler Features

Note: For details on the permitted expression prefixes in a feature, see the documentation for that feature.

Single-element expressions

The simplest type of Advanced policy expression contains a single element. This element can be one of the following:

- **true.** An Advanced policy expression can consist simply of the value true. This type of expression always returns a value of TRUE. It is useful for chaining policy actions and triggering Goto expressions.
- **false.** An Advanced policy expression can consist simply of the value false. This type of expression always returns a value of FALSE.
- **A prefix for a compound expression.** For example, the prefix HTTP.REQ.HOSTNAME is a complete expression that returns a host name and HTTP.REQ.URL is a complete expression that returns a URL. The prefix could also be used in conjunction with operations and additional prefixes to form a compound expression.

Operations

In most expressions, you also specify an operation on the data that the prefix identifies. For example, suppose that you specify the following prefix:

```
http.req.url
```

This prefix extracts URLs in HTTP requests. This expression prefix does not require any operators to be used in an expression. However, when you configure an expression that processes HTTP request URLs, you can specify operations that analyze particular characteristics of the URL. Following are a few possibilities:

- Search for a particular host name in the URL.

- Search for a particular path in the URL.
- Evaluate the length of the URL.
- Search for a string in the URL that indicates a time stamp and convert it to GMT.

The following is an example of a prefix that identifies an HTTP header named Server and an operation that searches for the string IIS in the header value:

```
http.res.header("Server").contains("IIS")
```

Following is an example of a prefix that identifies host names and an operation that searches for the string “www.mycompany.com” as the value of the name:

```
http.req.hostname.eq("www.mycompany.com")
```

Basic operations on expression prefixes

The following table describes a few of the basic operations that can be performed on expression prefixes.

Operation	Determines Whether or Not
CONTAINS()	The object matches . Following is an example: http.req.header("Cache-Control").contains("no-cache")
EXISTS	A particular item is present in an object. Following is an example: http.res.header("MyHdr").exists
EQ()	A particular non-numeric value is present in an object. Following is an example: http.req.method.eq(post)
EQ()	A particular numeric value is present in an object. Following is an example: client.ip.dst.eq(10.100.10.100)
LT()	An object's value is less than a particular value. Following is an example: http.req.content_length.lt(5000)
GT()	An object's value is greater than a particular value. Following is an example: http.req.content_length.gt(5)

The following table summarizes a few of the available types of operations.

Operation Type	Description
Text operations	Match individual strings and sets of strings with any portion of a target. The target can be an entire string, the start of a string, or any portion of text in between the start and the end of the string. For example, you can extract the string “XYZ” from “XYZSomeText”. Or, you can compare an HTTP header value with an array of different strings. You can also transform text into another type of data. Following are examples: Transform a string into an integer value, create a list from the query strings in a URL, and transform a string into a time value.
Numeric operations	Numeric operations include applying arithmetic operators, evaluating content length, the number of items in a list, dates, times, and IP addresses.

Compound advanced policy expressions

August 19, 2024

You can configure an Advanced policy expression with boolean or arithmetic operators and atomic operations. The following compound expression has a boolean AND:

```
http.req.hostname.eq("mycompany.com") && http.req.method.eq(post)
```

The following expression adds the value of two targets, and compares the result to a third value:

```
http.req.url.length + http.req.cookie.length \<= 500
```

A compound expression can have any number of logical and arithmetic operators.

The following expression evaluates the length of an HTTP request. This expression is based on the URL and cookie.

This expression evaluates the text in the header. Also, does a Boolean AND on these two results:

```
http.req.url.length + http.req.cookie.length \<= 500 && http.req.header.contains("some text")
```

You can use parentheses to control the order of evaluation in a compound expression.

Booleans in compound expressions

You configure compound expressions with the following operators:

- &&

This operator is a logical AND. For the expression to evaluate to TRUE, all components must evaluate to TRUE.

Example:

```
http.req.url.hostname.eq("myHost") && http.req.header("myHeader").exists
```

- ||

This operator is a logical OR. If any component of the expression evaluates to TRUE, the entire expression is TRUE.

- !

This operator does a logical NOT on the expression.

- IF

This operator does a logical IF on the boolean expression. If the boolean expression is true, the first expression (expr1) is evaluated. If the boolean expression is false, the first expression (expr1) is skipped, and the second expression (expr2) is evaluated. The third expression (expr3) is further processed based on the result of the IF function.

IF operator syntax:

```
<boolean expr>.IF(<expr1>, <expr2>).<expr3>
```

Example1: Client IP source in subnet

```
CLIENT.IP.SRC.IN_SUBNET(10.0.0.0/8).IF(HTTP.REQ.HEADER("PERSIST-VAL"), HTTP.REQ.HEADER("ABCD"))
```

This expression checks if the source IP address of the client is within the 10.0.0.0/8 subnet. If True, it uses a conditional IF logic to select a persistence value based on the presence of a specific HTTP request header. If False, it uses the value of the "ABCD" header.

Example2: Content length-based data check

```
HTTP.REQ.HEADER("Content-Length").EXISTS.IF(HTTP.REQ.BODY(HTTP.REQ.CONTENT_LENGTH), HTTP.REQ.BODY(100000)).CONTAINS("mydata")
```

This expression checks if the HTTP request is based on content length. If True, the data is retrieved according to the value specified in the content-length header. If False, the first 100,000 bytes of the request body are inspected.

Sometimes, the NetScaler configuration utility offers AND, NOT, and OR operators in the **Add Expression** dialog box. However, these compound expressions are of limited use. Citrix recommends that you use the operators `&&`, `||`, and `!` To configure compound expressions that use Boolean logic.

Parentheses in compound expressions

You can use parentheses to control the order of evaluation of an expression.

Example1:

```
http.req.url.contains("myCompany.com") || (http.req.url.hostname.eq("myHost") && http.req.header("myHeader").exists)
```

Example2:

```
(http.req.header("Content-Type").exists && http.req.header("Content-Type").eq("text/html")) || (http.req.header("Transfer-Encoding").exists || http.req.header("Content-Length").exists)
```

Compound operations for strings

The following table describes operators that you can use to configure compound operations on string data.

Operations that produce a string value	Description
<code>str + str</code>	Concatenates the value of the expression on the left of the operator with the value on the right. Example: <code>http.req.hostname + http.req.url.protocol</code>
<code>str + num</code>	Concatenates the value of the expression on the left of the operator with a numeric value on the right. Example: <code>http.req.hostname + http.req.url.content_length</code>
<code>num + str</code>	Concatenates the numeric value of the expression on the left side of the operator with a string value on the right. Example: <code>http.req.url.content_length + http.req.url.hostname</code>

Operations that produce a string value	Description
<code>str + ip</code>	Concatenates the string value of the expression on the left side of the operator with an IP address value on the right. Example: <code>http.req.hostname + 10.00.000.00</code>
<code>IP + str</code>	Concatenates the IP address value of the expression on the left of the operator with a string value on the right. Example: <code>client.ip.dst + http.req.url.hostname</code>
<code>str1 ALT str2</code>	Uses <code>string2</code> if the evaluation of <code>string1</code> results in an <code>undef</code> exception or the result is a null string. Otherwise uses <code>string1</code> and never evaluates <code>string2</code> . Example: <code>http.req.hostname alt client.ip.src</code>

Operations on strings that produce a result of TRUE or FALSE

Operations on strings that produce a result of TRUE or FALSE	Description
<code>str == str</code>	Evaluates whether the strings on either side of the operator are the same. Example: <code>http.req.header("myheader") == http.res.header("myheader")</code>
<code>str <= str</code>	Evaluates whether the string on the left side of the operator is the same as the string on the right, or precedes it alphabetically.
<code>str >= str</code>	Evaluates whether the string on the left side of the operator is the same as the string on the right, or follows it alphabetically.
<code>str < str</code>	Evaluates whether the string on the left side of the operator precedes the string on the right alphabetically.
<code>str > str</code>	Evaluates whether the string on the left side of the operator follows the string on the right alphabetically.
<code>str != str</code>	Evaluates whether the strings on either side of the operator are different.

Logical operations on strings	Description
<code>bool && bool</code>	This operator is a logical AND. When evaluating the components of the compound expression, all components that are joined by the AND must evaluate to TRUE. Example: <code>http.req.method.eq(GET) && http.req.url.query.contains("viewReport && my_pagelabel")</code>
<code>bool bool</code>	This operator is a logical OR. When evaluating the components of the compound expression, if any component of the expression belonging to OR evaluates to TRUE, the entire expression is TRUE. Example: <code>http.req.url.contains(".js") http.res.header("Content-Type").Contains("javascript")</code>
<code>bool</code>	Performs a logical NOT on the expression.

Compound operations for numbers

You can configure compound numeric expressions. For example, the following expression returns a numeric value that is the sum of an HTTP header length and a URL length:

```
http.req.header.length + http.req.url.length
```

The following tables describe operators that you can use to configure compound expressions for numeric data.

Arithmetic operations on numbers	Description
<code>num + num</code>	Add the value of the expression on the left to the value on the right. Example: <code>http.req.content_length + http.req.url.length</code>
<code>num - num</code>	Subtract the value of the expression on the right from the value on the left.
<code>num * num</code>	Multiply the value of the expression on the left of the operator with the value of the expression on the right. Example: <code>client.interface.rxthroughput * 9</code>

Arithmetic operations on numbers	Description
num / num	Divide the value of the expression on the left of the operator by the value of the expression on the right.
num % num	Calculate the modulo, or the numeric remainder on a division of the value of the expression on the left of the operator by the value of the expression on the right. For example, the values “15 mod 4” equals 3, and “12 mod 4” equals 0.
~number	Returns a number after applying a bitwise logical negation of the number. The following example assumes that numeric.expression returns 12 (binary 1100): ~numeric.expression. The result of applying the ~ operator is -11 (a binary 1110011, 32 bits total with all ones to the left). Note that all returned values of less than 32 bits before applying the operator implicitly have zeros to the left to make them 32 bits wide.
number ^ number	Compares two bit patterns of equal length and performs an XOR operation on each pair of corresponding bits in each number argument, returning 1 if the bits are different, and 0 if they are the same. Returns a number after applying a bitwise XOR to the integer argument and the current number value. If the values in the bitwise comparison are the same, the returned value is a 0. The following example assumes that numeric.expression1 returns 12 (binary 1100) and numeric.expression2 returns 10 (binary 1010): numeric.expression1 ^ numeric.expression2The result of applying the ^ operator to the entire expression is 6 (binary 0110). Note that all returned values of less than 32 bits before applying the operator implicitly have zeros to the left to make them 32 bits wide.

Arithmetic operations on numbers	Description
number number	<p>Returns a number after applying a bitwise OR to the number values. If either value in the bitwise comparison is a 1, the returned value is a 1. The following example assumes that numeric.expression1 returns 12 (binary 1100) and numeric.expression2 returns 10 (binary 1010): numeric.expression1 numeric.expression2 The result of applying the operator to the entire expression is 14 (binary 1110). Note that all returned values of less than 32 bits before applying the operator implicitly have zeros to the left to make them 32 bits wide.</p>
number & number	<p>Compares two bit patterns of equal length and performs a bitwise AND operation on each pair of corresponding bits, returning 1 if both of the bits contains a value of 1, and 0 if either bits are 0. The following example assumes that numeric.expression1 returns 12 (binary 1100) and numeric.expression2 returns 10 (binary 1010): numeric.expression1 & numeric.expression2 The whole expression evaluates to 8 (binary 1000). Note that all returned values of less than 32 bits before applying the operator implicitly have zeros to the left to make them 32 bits wide.</p>
num « num	<p>Returns a number after a bitwise left shift of the number value by the right-side number argument number of bits. Note that the number of bits shifted is integer modulo 32. The following example assumes that numeric.expression1 returns 12 (binary 1100) and numeric.expression2 returns 3: numeric.expression1 « numeric.expression2 The result of applying the LSHIFT operator is 96 (a binary 1100000). Note that all returned values of less than 32 bits before applying the operator implicitly have zeros to the left to make them 32 bits wide.</p>

Arithmetic operations on numbers	Description
<code>num » num</code>	Returns a number after a bitwise right shift of the number value by the integer argument number of bits. Note that the number of bits shifted is integer modulo 32. The following example assumes that <code>numeric.expression1</code> returns 12 (binary 1100) and <code>numeric.expression2</code> returns 3: <code>numeric.expression1 » numeric.expression2</code> The result of applying the RSHIFT operator is 1 (a binary 0001). Note that all returned values of less than 32 bits before applying the operator implicitly have zeros to the left to make them 32 bits wide.

Numeric operators that produce a result of TRUE or FALSE

	Description
<code>num == num</code>	Determine if the value of the expression on the left of the operator is equal to the value of the expression on the right.
<code>num != num</code>	Determine if the value of the expression on the left of the operator is not equal to the value of the expression on the right.
<code>num > num</code>	Determine if the value of the expression on the left of the operator is greater than the value of the expression on the right.
<code>num < num</code>	Determine if the value of the expression on the left of the operator is less than the value of the expression on the right.
<code>num >= num</code>	Determine if the value of the expression on the left of the operator is greater than or equal to the value of the expression on the right.
<code>num <= num</code>	Determine if the value of the expression on the left of the operator is less than or equal to the value of the expression on the right

Functions for data types in the policy infrastructure

The NetScaler policy infrastructure supports the following numeric data types:

- Integer (32 bits)
- Unsigned long (64 bits)
- Double (64 bits)

Simple expressions can return all of these data types. Also, you can create compound expressions that use arithmetic operators and logical operators to evaluate or return the values of these data types. Also, you can use all of these values in policy expressions. Literal constants of type unsigned long can be specified by appending the string `ul` to the number. Literal constants of type double contain a period (`.`), an exponent, or both.

Arithmetic Operators, Logical Operators, and Type Promotion In compound expressions, the following standard arithmetic and logical operators can be used for the double and unsigned long data types:

- `+`, `-`, `*`, and `/`

`%`, `~`, `^`, `&`,

`,` `«`, and `»` (do not apply to double)

- `==`, `!=`, `>`, `<`, `>=`, and `<=`

All of these operators have the same meaning as in the C programming language.

In all cases of mixed operations between operands of type integer, unsigned long, and double. Type promotion is done to do the operation on the operands of the same type. The operation promotes a lower precedence type to the operand with the highest precedence type. The order of precedence (higher to lower) is as follows:

- Double
- Unsigned long
- Integer

So, an operation that returns a numeric result returns a result of the highest type involved in the operation.

For example, if the operands are of type integer and unsigned long, the integer operand is automatically converted to type unsigned long. This type conversion is done in simple expressions. The type of data identified by the expression prefix does not match the type of data that is passed as

the argument to the function. In the operation `HTTP.REQ.CONTENT_LENGTH.DIV(3ul)`, the prefix `HTTP.REQ.CONTENT_LENGTH` returns an integer that becomes an unsigned long. Unsigned long: the data type passed as the argument to the `DIV()` function, an unsigned long division is done. Similarly, the argument can be promoted in an expression. For example, `HTTP.REQ.HEADER("myHeader").TYPECAST_DOUBLE_AT.DIV(5)` promotes the integer 5 to type double and does double-precision division.

For information about expressions to cast data of one type to data of another type, see [Typecasting data](#).

Specify the character set in expressions

May 2, 2023

The policy infrastructure on the NetScaler appliance supports ASCII and UTF-8 character sets. The default character set is ASCII. If the traffic for which you are configuring an expression consists of only ASCII characters, you need not specify the character set in the expression. The appliance allows all string and character literals which include binary characters. However, the UTF-8 character sets still require the string and character literals to be a valid UTF-8.

```
CLIENT.TCP.PAYLOAD(100).CONTAINS("\xff\x02")
```

In an expression, the `SET_CHAR_SET()` function must be introduced at the point in the expression after which data processing must be carried out in the specified character set. For example, in the expression `HTTP.REQ.BODY(1000).AFTER_REGEX(re/following example/).BEFORE_REGEX(re/In the preceding example/).CONTAINS_ANY("Greek_alphabet")`, if the strings stored in the pattern set "Greek_alphabet" are in UTF-8, you must include the `SET_CHAR_SET(UTF_8)` function immediately before the `CONTAINS_ANY("<string>")` function, as follows:

```
HTTP.REQ.BODY(1000).AFTER_REGEX(re/following example/).BEFORE_REGEX(re/In the preceding example/).SET_CHAR_SET(UTF_8).CONTAINS_ANY("Greek_alphabet")
```

The `SET_CHAR_SET()` function sets the character set for all further processing (that is, for all subsequent functions) in the expression unless it is overridden later in the expression by another `SET_CHAR_SET()` function that changes the character set. Therefore, if all the functions in a given simple expression are intended for UTF-8, you can include the `SET_CHAR_SET(UTF_8)` function immediately after functions that identify text (for example, the `HEADER("<name>")` or `BODY(<int>)` functions). In the second example that follows the first paragraph above, if the ASCII arguments passed to the `AFTER_REGEX()` and `BEFORE_REGEX()` functions are changed to UTF-8 strings, you can include the `SET_CHAR_SET(UTF_8)` function immediately after the `BODY(1000)` function, as follows:

```
HTTP.REQ.BODY(1000).SET_CHAR_SET(UTF_8).AFTER_REGEX(re/Bücher/).  
BEFORE_REGEX(re/Wörterbuch/).CONTAINS_ANY("Greek_alphabet")
```

The UTF-8 character set is a superset of the ASCII character set, so expressions configured for the ASCII character set continue to work as expected if you change the character set to UTF-8.

Compound expressions with different character sets

In a compound expression, if one subset of expressions is configured to work with data in the ASCII character set and the rest of the expressions are configured to work with data in the UTF-8 character set, the character set specified for each individual expression is considered when the expressions are evaluated individually. However, when processing the compound expression, just before processing the operators, the appliance promotes the character set of the returned ASCII values to UTF-8. For example, in the following compound expression, the first simple expression evaluates data in the ASCII character set while the second simple expression evaluates data in the UTF-8 character set:

```
HTTP.REQ.HEADER("MyHeader")== HTTP.REQ.BODY(10).SET_CHAR_SET(UTF_8)
```

However, when processing the compound expression, just before evaluating the “is equal to” Boolean operator, the NetScaler appliance promotes the character set of the value returned by HTTP.REQ.HEADER(“MyHeader”) to UTF-8.

The first simple expression in the following example evaluates data in the ASCII character set. However, when the NetScaler appliance processes the compound expression, just before concatenating the results of the two simple expressions, the appliance promotes the character set of the value returned by HTTP.REQ.BODY(10) to UTF-8.

```
HTTP.REQ.BODY(10)+ HTTP.REQ.HEADER("MyHeader").SET_CHAR_SET(UTF_8)
```

Therefore, the compound expression returns data in the UTF-8 character set.

Specify the character set based on the character set of traffic

You can set the character set to UTF-8 based on traffic characteristics. If you are not sure whether the character set of the traffic being evaluated is UTF-8, you can configure a compound expression in which the first expression checks for UTF-8 traffic and subsequent expressions set the character set to UTF-8. Following is an example of a compound expression that first checks the value of “charset” in the request’s Content-Type header for “UTF-8” before checking whether the first 1000 bytes in the request contain the UTF-8 string Bücher:

```
HTTP.REQ.HEADER("Content-Type").SET_TEXT_MODE(IGNORECASE).TYPECAST_NVLIST_T  
( '=', ' ; ', ' ' ).VALUE("charset").EQ("UTF-8")&& HTTP.REQ.BODY(1000).  
SET_CHAR_SET(UTF_8).CONTAINS("Bücher")
```

If you are sure that the character set of the traffic being evaluated is UTF-8, the second expression in the example is sufficient.

Character and string literals in expressions

During expression evaluation, even if the current character set is ASCII, character literals and string literals, which are enclosed in single quotation marks (‘’) and quotation marks (“”), respectively, are considered to be literals in the UTF-8 character set. In a given expression, if a function is operating on character or string literals in the ASCII character set and you include a non-ASCII character in the literal, an error is returned.

Note:

The string literals in advanced policy expressions are now as long as the policy expression. The expression is allowed to be 1499 bytes or 8191 bytes long.

Values in hexadecimal and octal formats

When configuring an expression, you can enter values in octal and hexadecimal formats. However, each hexadecimal or octal byte is considered a UTF-8 byte. Invalid UTF-8 bytes result in errors regardless of whether the value is entered manually or pasted from the clipboard. For example, “\xc8” is an invalid UTF-8 character because “c8” cannot be followed by “20” (each byte in a multi-byte UTF-8 string must have the high bit set). Another example of an invalid UTF-8 character is “\xc8 \xa9,” since the hexadecimal characters are separated by a white-space character.

Functions that return UTF-8 strings

Only the `<text>.XPATH` and `<text>.XPATH_JSON` functions always return UTF-8 strings. The following MySQL routines determine at runtime which character set to return, depending on the data in the protocol:

- `MYSQL_CLIENT_T.USER`
- `MYSQL_CLIENT_T.DATABASE`
- `MYSQL_REQ_QUERY_T.COMMAND`
- `MYSQL_REQ_QUERY_T.TEXT`
- `MYSQL_REQ_QUERY_T.TEXT(<unsigned int>)`
- `MYSQL_RES_ERROR_T.SQLSTATE`
- `MYSQL_RES_ERROR_T.MESSAGE`
- `MYSQL_RES_FIELD_T.CATALOG`
- `MYSQL_RES_FIELD_T.DB`

- `MYSQL_RES_FIELD_T.TABLE`
- `MSQL_RES_FIELD_T.ORIGINAL_TABLE`
- `MYSQL_RES_FIELD_T.NAME`
- `MYSQL_RES_FIELD_T.ORIGINAL_NAME`
- `MYSQL_RES_OK_T.MESSAGE`
- `MYSQL_RES_ROW_T.TEXT_ELEM(<unsigned int>)`

Terminal connection settings for UTF-8

When you set up a connection to the NetScaler appliance by using a terminal connection (by using PuTTY, for example), you must set the character set for transmission of data to UTF-8.

Minimum and maximum functions in an advanced policy expression

The advanced policy expressions support the below minimum and maximum functions.

1. `(<expression1>.max(<expression2>)` - returns the maximum of the two values.
2. `(<expression1>.min(<expression2>)` - returns the minimum of the two values.

Configure advanced policy expressions in a policy

September 21, 2021

You can configure an Advanced policy expression of up to 1,499 characters in a policy. The user interface for Advanced policy expressions depends to some extent on the feature for which you are configuring the expression, and on whether you are configuring an expression for a policy or for another use.

When configuring expressions on the command line, you delimit the expression by using quotation marks (“ . . .” or ‘ . . .’). Within an expression, you escape additional quotation marks by using a back-slash (). For example, the following are standard methods for escaping quotation marks in an expression:

```
"\"abc\""
```

```
' \"abc\"'
```

You must also use a backslash to escape question marks and other backslashes on the command line. For example, the expression `http.req.url.contains(“\?”)` requires a backslash so that the question mark is parsed. Note that the backslash character will not appear on the command line after you

type the question mark. On the other hand, if you escape a backslash (for example, in the expression ‘http.req.url.contains(“\\http”)’), the escape characters are echoed on the command line.

To make an entry more readable, you can escape ~\$^+=&%@‘?. the quotation marks for an entire expression. At the start of the expression you enter the escape sequence “q” plus one of the following special characters: /{<

You enter only the special character at the end of the expression, as follows:

```
1 q@http.req.url.contains("sometext") && http.req.cookie.exists@
2
3 q~http.req.url.contains("sometext") && http.req.cookie.exists~
```

Note that an expression that uses the { delimiter is closed with }.

For some features (for example, Integrated Caching and Responder), the policy configuration dialog box provides a secondary dialog box for configuring expressions. This dialog enables you to choose from drop-down lists that show the available choices at each point during expression configuration. You cannot use arithmetic operators when using these configuration dialogs, but most other advanced policy expression features are available. To use arithmetic operators, write your expressions in free-form format.

Configure an Advanced policy syntax rule by using the CLI

At the command prompt, type the following commands to configure a Advanced policy rule and verify the configuration:

1. `add cache|dns|rewrite|cs policyName **-rule** expression featureSpecificParameters **-action**`
2. `show cache|dns|rewrite|cs policyName`

Following is an example of configuring a caching policy:

Example:

```
1 > add cache policy pol-cache -rule http.req.content_length.le(5) -
   action INVALID
2 Done
3
4 > show cache policy pol-cache
5     Name: pol-cache
6     Rule: http.req.content_length.le(5)
7     CacheAction: INVALID
```



```

8      Invalidate groups: DEFAULT
9      UndefAction: Use Global
10     Hits: 0
11     Undef Hits: 0
12
13     Done

```

Configure a Advanced policy expression by using the GUI

1. In the navigation pane, click the name of the feature where you want to configure a policy, for example, you can select Integrated Caching, Responder, DNS, Rewrite, or Content Switching, and then click **Policies**.
2. Click Add.
3. For most features, click in the **Expression** field. For content switching, click **Configure**.
4. Click the **Prefix** icon (the house) and select the first expression prefix from the drop-down list. For example, in Responder, the options are HTTP, SYS, and CLIENT. The next set of applicable options appear in a drop-down list.
5. Double-click the next option to select it, and then type a period (.). Again, a set of applicable options appears in another drop-down list.
6. Continue selecting options until an entry field (signalled by parentheses) appears. When you see an entry field, enter an appropriate value in the parentheses. For example, if you select GT(int) (greater-than, integer format), you specify an integer in the parentheses. Text strings are delimited by quotation marks. Following is an example:

```
HTTP.REQ.BODY\ (1000) .BETWEEN\ (\ "this\ ", \ "that\ ")
```

To insert an operator between two parts of a compound expression, click the Operators icon (the sigma), and select the operator type. Following is an example of a configured expression with a Boolean OR (signalled by double vertical bars,

7. `HTTP.REQ.URL.EQ\ (\ "www.mycompany.com\ ") \ | HTTP.REQ.BODY\ (1000) .BETWEEN\ (\ "this\ ", \ "that\ ")`

8. To insert a named expression, click the down arrow next to the Add icon (the plus sign) and select a named expression.
9. To configure an expression using drop-down menus, and to insert built-in expressions, click the Add icon (the plus sign). The **Add Expression** dialog box works in a similar way to the main dialog box, but it provides drop-down lists for selecting options, and it provides text fields for data entry instead of parentheses. This dialog box also provides a Frequently Used Expressions drop-down list that inserts commonly used expressions. When you are done adding the expression, click **OK**.
10. When finished, click **Create**. A message in the status bar indicates that the policy expression is configured successfully.

Test a Advanced policy expression by using the GUI

1. In the navigation pane, click the name of the feature for which you want to configure a policy (for example, you can select Integrated Caching, Responder, DNS, Rewrite, or Content Switching), and then click Policies.
2. Select a policy and click **Open**.
3. To test the expression, click the Evaluate icon (the check mark).
4. In the expression evaluator dialog box, select the Flow Type that matches the expression.
5. In the **HTTP Request Data** or **HTTP Response Data** field, paste the HTTP request or response that you want to parse with the expression, and click **Evaluate**. Note that you must supply a complete HTTP request or response, and the header and body should be separated by blank line. Some programs that trap HTTP headers do not also trap the response. If you are copying and pasting only the header, insert a blank line at the end of the header to form a complete HTTP request or response.
6. Click **Close** to close this dialog box.

Configure named advanced policy expressions

July 16, 2021

Instead of retyping the same expression multiple times in multiple policies, you can configure a named expression and refer to the name any time you want to use the expression in a policy. For example, you could create the following named expressions:

- ThisExpression:

```
http.req.body(100).contains("this")
```

- ThatExpression:

```
http.req.body(100).contains("that")
```

You can then use these named expressions in a policy expression. For example, the following is a legal expression based on the preceding examples:

ThisExpression

You can use the name of an advanced policy expression as the prefix to a function. The named expression can be either a simple expression or a compound expression. The function must be one that can operate on the type of data that is returned by the named expression.

Example 1: Simple Named Expression as a Prefix

The following simple named expression, which identifies a text string, can be used as a prefix to the AFTER_STR("<string>") function, which works with text data:

```
HTTP.REQ.BODY(1000)
```

If the name of the expression is top1KB, you can use top1KB.AFTER_STR("username") instead of HTTP.REQ.BODY(1000).AFTER_STR("username").

Example 2: Compound named expression as a prefix

You can create a compound named expression called basic_header_value to concatenate the user name in a request, a colon (:), and the user's password, as follows:

```
add policy expression basic_header_value "HTTP.REQ.USER.NAME + \":\"  
+ HTTP.REQ.USER.PASSWD"
```

You can then use the name of the expression in a rewrite action, as shown in the following example:

```
add rewrite action insert_b64encoded_authorization insert_http_header  
authorization '"Basic " + basic_header_value.b64encode'
```

In the example, in the expression that is used to construct the value of the custom header, the B64 encoding algorithm is applied to the string returned by the compound named expression.

You can also use a named expression (either by itself or as a prefix to a function) to create the text expression for the replacement target in a rewrite.

Configure a named Advanced policy expression by using the CLI

At the command prompt, type the following commands to configure a named expression and verify the configuration:

```
1 - add policy expression \<name\>\<value\>
2
3 - show policy expression \<name\>
```

Example:

```
1 > add policy expression myExp "http.req.body(100).contains(\"the other
   \")"
2 Done
3
4 > show policy expression myExp
5     1)      Name: myExp  Expr: "http.req.body(100).contains("the other"
           )" Hits: 0 Type : ADVANCED
6 Done
```

The expression can be up to 1,499 characters.

Configure a named expression by using the GUI

1. In the navigation pane, expand **AppExpert**, and then click **Expressions**.
2. Click **Advanced Expressions**.
3. Click **Add**.
4. Enter a name and a description for the expression.
5. Configure the expression by using the process described in [Configure advanced policy expression](#). A message in the status bar indicates that the policy expression is configured successfully.

Configure advanced policy expressions outside the context of a policy

September 21, 2020

A number of functions, including the following, can require an advanced policy expression that is not part of a policy:

- Integrated Caching selectors:

You define multiple non-compound expressions (selectlets) in the definition of the selector. Each selectlet is in an implicit logical AND relationship with the others.

- Load Balancing:

You configure an expression for the TOKEN method of load balancing for a load balancing virtual server.

- Rewrite actions:

Expressions define the location of the rewrite action and the type of rewriting to be performed, depending on the type of rewrite action that you are configuring. For example, a DELETE action only uses a target expression. A REPLACE action uses a target expression and an expression to configure the replacement text.

- Rate-based policies:

You use advanced policy expressions to configure Limit Selectors. You can use these selectors when configuring policies to throttle the rate of traffic to various servers. You define up to five non-compound expressions (selectlets) in the definition of the selector. Each selectlet is in an implicit logical AND with the others.

Configure an advanced policy expression outside a policy by using the CLI (cache selector example)

At the command prompt, type the following commands to configure an advanced policy expression outside a policy and verify the configuration:

```
1 - add cache selector <selectorName> <rule>
2 - show cache selector <selectorName>
```

Example:

```
1 > add cache selector mainpageSelector "http.req.cookie.value("ABC_def")
   "
2   "http.req.url.query.value("_ghi")"selector "mainpageSelector" added
3 Done
4 > show cache selector mainpageSelector
5     Name: mainpageSelector
6     Expressions:
7         1) http.req.cookie.value("ABC_def")
8         2) http.req.url.query.value("_ghi")
9 Done
```

Following is an equivalent command that uses the more readable q delimiter, as described in [Configure advanced policy expressions in a policy](#):

```
1 > add cache selector mainpageSelector2 q~http.req.cookie.value("ABC_def")~
   ")~
2   q~http.req.url.query.value("_ghi")~selector "mainpageSelector2"
   added
3 Done
```

```
4 > show cache selector mainpageSelector2
5     Name: mainpageSelector2
6     Expressions:
7         1) http.req.cookie.value("ABC_def")
8         2) http.req.url.query.value("_ghi")
9 Done
```

Advanced policy expressions: Evaluating text

December 22, 2023

You can configure a policy with an advanced policy expression that evaluates text in a request or response. Advanced policy text expressions can range from simple expressions that perform string matching in HTTP headers to complex expressions that encode and decode text. You can configure text expressions to be case sensitive or case insensitive and to use or ignore spaces. You can also configure complex text expressions by combining text expressions with Boolean operators

You can use expression prefixes and operators for evaluating HTTP requests, HTTP responses, and VPN and Clientless VPN data. However, text expression prefixes are not restricted to evaluating these elements of your traffic.

About text expressions

May 2, 2023

You can configure various expressions for working with text that flows through the NetScaler appliance. Following are some examples of how you can parse text by using a Advanced policy expression:

- Determine that a particular HTTP header exists.

For example, you may want to identify HTTP requests that contains a particular Accept-Language header for the purpose of directing the request to a particular server.

- Determine that a particular HTTP URL contains a particular string.

For example, you may want to block requests for particular URLs. Note that the string can occur at the beginning, middle, or end of another string.

- Identify a POST request that is directed to a particular application.

For example, you may want to identify all POST requests that are directed to a database application for the purpose of refreshing cached application data.

Note that there are specialized tools for viewing the data stream for HTTP requests and responses. You can use the tools to view the data stream.

About operations on text

A text-based expression consists of at least one prefix to identify an element of data and usually (although not always) an operation on that prefix. Text-based operations can apply to any part of a request or a response. Basic operations on text include various types of string matches.

For example, the following expression compares a header value with a string:

```
http.req.header("myHeader").contains("some-text")
```

Following expressions are examples of matching a file type in a request:

```
http.req.url.suffix.contains("jpeg")
```

```
http.req.url.suffix.eq("jpeg")
```

In the preceding examples, the contains operator permits a partial match and the eq operator looks for an exact match.

Other operations are available to format the string before evaluating it. For example, you can use text operations to strip out quotes and white spaces, to convert the string to all lowercase, or to concatenate strings.

Note:

Complex operations are available to perform matching based on patterns or to convert one type of text format to another type.

For more information, see the following topics:

- [Pattern sets and data sets.](#)
- [Regular expressions.](#)
- [Typecasting data.](#)

Compounding and precedence in text expressions

You can apply various operators to combine text prefixes or expressions. For example, the following expression concatenates the returned values of each prefix:

```
http.req.hostname + http.req.url
```

Following is an example of a compound text expression that uses a logical AND. Both components of this expression must be TRUE for a request to match the expression:

```
http.req.method.eq(post)&& http.req.body(1024).startswith("destination=")
```

Note:

For more information on operators for compounding, see [Compound advanced expressions](#).

Categories of text expressions

The primary categories of text expressions that you can configure are:

- Information in HTTP headers, HTTP URLs, and the POST body in HTTP requests.
For more information, see [Expression prefixes for text in HTTP requests and responses](#).
- Information regarding a VPN or a clientless VPN.
For more information, see [Expression prefixes for VPNs and clientless VPNs](#).
- TCP payload information.
For more information about TCP payload expressions, see [Advanced policy expressions: Parsing HTTP, TCP, and UDP data](#).
- Text in a Secure Sockets Layer (SSL) certificate.
For information about text expressions for SSL and SSL certificate data, see [Advanced policy expressions: Parsing SSL certificates](#) and [Expressions for SSL certificate dates](#).

Note:

Parsing a document body, such as the body of a POST request, can affect performance. You may want to test the performance impact of policies that evaluate a document body.

Guidelines for text expressions

From a performance standpoint, it typically is best to use protocol-aware functions in an expression. For example, the following expression makes use of a protocol-aware function:

```
HTTP.REQ.URL.QUERY
```

The previous expression performs better than the following equivalent expression, which is based on string parsing:

```
HTTP.REQ.URL.AFTER_STR("?")
```

In the first case, the expression looks specifically at the URL query. In the second case, the expression scans the data for the first occurrence of a question mark.

There is also a performance benefit from structured parsing of text, as in the following expression:

```
HTTP.REQ.HEADER("Example").TYPECAST_LIST_T(' , ').GET(1)
```

(For more information on typecasting, see [Typecasting data](#). The typecasting expression, which collects comma-delimited data and structures it into a list, typically would perform better than the following unstructured equivalent:

```
HTTP.REQ.HEADER("Example").AFTER_STR(",").BEFORE_STR(",")
```

Finally, unstructured text expressions typically have better performance than regular expressions. For example, the following is an unstructured text expression:

```
HTTP.REQ.HEADER("Example").AFTER_STR("more")
```

The previous expression would generally provide better performance than the following equivalent, which uses a regular expression:

```
HTTP.REQ.HEADER("Example").AFTER_REGEX(re/more/)
```

For more information on regular expressions, see [Regular expressions](#).

Expression prefixes for text in HTTP requests and responses

May 2, 2023

An HTTP request or response typically contains text, such as in the form of headers, header values, URLs, and POST body text. You can configure expressions to operate on one or more of these text-based items in an HTTP request or response.

For more information on parameters, see [NetScaler Advanced Policy Expression Reference](#).

Refer to the following topics to get more details on how to configure using advanced expression.

- [Compound advanced policy expressions](#)
- [Advanced policy expressions: IP and MAC addresses, throughput, VLAN IDs](#)
- [Advanced policy expressions: parsing SSL](#)
- [Advanced policy expressions: working with dates, times, and numbers](#)
- [Basic elements of an advanced policy expression](#)
- [Advanced policy expressions: evaluating text](#)
- [Advanced policy expressions: parsing HTTP, TCP, and UDP data](#)
- [Summary examples of default syntax expressions and policies](#)

Expression prefixes for VPNs and clientless VPNs

September 21, 2020

The Advanced policy engine provides prefixes that are specific to parsing VPN or Clientless VPN data. This data includes the following:

- Host names, domains, and URLs in VPN traffic.
- Protocols in the VPN traffic.
- Queries in the VPN traffic.

These text elements are often URLs and components of URLs. In addition to applying the text-based operations on these elements, you can parse these elements by using operations that are specific to parsing URLs. For more information, see [Expressions for extracting segments of URLs](#)

For information about VPN expression prefixes, see [VPN expression table](#).

Basic operations on text

July 14, 2021

Basic operations on text include operations for string matching, calculating the length of a string, and controlling case sensitivity. You can include white space in a string that is passed as an argument to an expression, but the string cannot exceed 255 characters.

String comparison functions

The following table lists basic string matching operations in which the functions return a Boolean TRUE or FALSE.

Function	Description
<code><text>.CONTAINS(<string>)</code>	Returns a Boolean TRUE value if the target contains <code><string></code> . Example: <code>http.req.url.contains(".jpeg")</code>

Function	Description
<code><text>.EQ(<string>)</code>	Returns a Boolean TRUE value if the target is an exact match with <code><string></code> . For example, the following expression returns a Boolean TRUE for a URL with a host name of "myhostabc": <code>http.req.url.hostname.eq("myhostabc")</code>
<code><text>.STARTSWITH(<string>)</code>	Returns a Boolean TRUE value if the target begins with <code><string></code> . For example, the following expression returns a Boolean TRUE for a URL with a host name of "myhostabc": <code>http.req.url.hostname.startswith("myhost")</code>
<code><text>.ENDSWITH(<string>)</code>	Returns a Boolean TRUE value if the target ends with <code>.</code> . For example, the following expression returns a Boolean TRUE for a URL with a host name of "myhostabc": <code>http.req.url.hostname.endswith("abc")</code>
<code><text>.NE(<string>)</code>	Returns a Boolean TRUE value if the prefix is not equal to the string argument. If the prefix returns a non-string value, the function argument is compared to the string representation of the value returned by the prefix. You can use the functions with <code>SET_TEXT_MODE(IGNORECASE)</code> or <code>SET_TEXT_MODE(NOIGNORECASE)</code> , and with both ASCII and UTF-8 character sets.
<code><text>.GT(<string>)</code>	Returns a Boolean TRUE value if the prefix is alphabetically greater than the string argument. If the prefix returns a non-string value, the function argument is compared to the string representation of the value returned by the prefix. You can use the functions with <code>SET_TEXT_MODE(IGNORECASE)</code> or <code>SET_TEXT_MODE(NOIGNORECASE)</code> , and with both ASCII and UTF-8 character sets.

Function	Description
<code><text>.GE(<string>)</code>	Returns a Boolean TRUE value if the prefix is alphabetically greater than or equal to the string argument. If the prefix returns a non-string value, the function argument is compared to the string representation of the value returned by the prefix. You can use the functions with <code>SET_TEXT_MODE (IGNORECASE)</code> or <code>SET_TEXT_MODE (NOIGNORECASE)</code> , and with both ASCII and UTF-8 character sets.
<code><text>.LT(<string>)</code>	Returns a Boolean TRUE value if the prefix is alphabetically lesser than the string argument. If the prefix returns a non-string value, the function argument is compared to the string representation of the value returned by the prefix. You can use the functions with <code>SET_TEXT_MODE (IGNORECASE)</code> or <code>SET_TEXT_MODE (NOIGNORECASE)</code> , and with both ASCII and UTF-8 character sets.
<code><text>.LE(<string>)</code>	Returns a Boolean TRUE value if the prefix is alphabetically lesser than or equal to the string argument. If the prefix returns a non-string value, the function argument is compared to the string representation of the value returned by the prefix. You can use the functions with <code>SET_TEXT_MODE (IGNORECASE)</code> or <code>SET_TEXT_MODE (NOIGNORECASE)</code> , and with both ASCII and UTF-8 character sets.

Calculate the length of a string

The `<text>.LENGTH` operation returns a numeric value that is equal to the number of characters (not bytes) in a string:

```
<text>.LENGTH
```

For example, you may want to identify request URLs that exceed a particular length. Following is an expression that implements this example:

```
HTTP.REQ.URL.LENGTH < 500
```

After taking a count of the characters or elements in a string, you can apply numeric operations to them. For more information, see [Advanced policy Expressions: Working with Dates, Times, and Numbers](#).

Consider, ignore, and change text case

The following functions operate on the case (upper-case or lower-case) of the characters in the string.

Function	Description
<code><text>.SET_TEXT_MODE (IGNORECASE)</code>	NOIGNORECASE This function turns case sensitivity on or off for all text operations.
<code><text>.TO_LOWER</code>	Converts the target to lowercase for a text block of up to 2 kilobyte (KB). Returns UNDEF if the target exceeds 2 KB. For example, the string “ABCd:” is converted to “abcd:”.
<code><text>.TO_UPPER</code>	Converts the target to uppercase. Returns UNDEF if the target exceeds 2 KB. For example, the string “abcD:” is converted to “ABCD:”.

Strip specific characters from a string

You can use the `STRIP_CHARS(<string>)` function to remove specific characters from the text that is returned by a Advanced policy expression prefix (the input string). All instances of the characters that you specify in the argument are stripped from the input string. You can use any text method on the resulting string, including the methods used for matching the string with a pattern set.

For example, in the expression `CLIENT.UDP.DNS.DOMAIN.STRIP__CHARS(“.-_”)`, the `STRIP__CHARS(<string>)` function strips all periods (.), hyphens (-), and underscores () from the domain name returned by the prefix `CLIENT.UDP.DNS.DOMAIN`. If the domain name that is returned is “a.dom_ai_n-name”, the function returns the string “adomainname”.

In the following example, the resulting string is compared with a pattern set called “listofdomains”:

```
CLIENT.UDP.DNS.DOMAIN.STRIP_CHARS(“.-\_”).CONTAINS_ANY(“listofdomains”)
```

Note: You cannot perform a rewrite on the string that is returned by the `STRIP_CHARS(<string>)` function.

The following functions strip matching characters from the beginning and end of a given string input.

Function	Description
<code><text>.STRIP_START_CHARS(s)</code>	Strips matching characters from the beginning of the input string until the first non-matching character is found and returns the remainder of the string. You must specify the characters that you want to strip as a single string within quotation marks. For example, if the name of a header is <code>TestLang</code> and <code>:/en_us:is its value,HTTP.RES.HEADER("TestLang").STRIP_START_CHARS(":")</code> strips the specified characters from the beginning of the value of the header until the first non-matching character <code>e</code> is found and returns <code>sen_us:</code> as a string.
<code><text>.STRIP_END_CHARS(s)</code>	Strips matching characters from the end of the input string to the first non-matching character is found and returns the remainder of the string. You must specify the characters that you want to strip as a single string within quotation marks. For example, if the name of a header is <code>TestLang</code> and <code>:/en_us:is its value,HTTP.RES.HEADER("TestLang").STRIP_END_CHARS("s")</code> strips the specified characters from the end of the value of the header until the first non-matching character <code>s</code> is found and returns <code>:/_en_us</code> as a string.

Append a string to another string

You can use the `APPEND()` function to append the string representation of the argument to the string representation of the value returned by the preceding function. The preceding function can be one that returns a number, unsigned long, double, time value, IPv4 address, or IPv6 address. The argument can be a text string, number, unsigned long, double, time value, IPv4 address, or IPv6 address. The resulting string value is the same string value that is obtained by using the `+` operator.

Complex operations on text

May 2, 2023

In addition to simple string matching, you can configure expressions that examine string length and text block for patterns rather than specific strings.

Be aware of the following for any text-based operation:

- For any operation that takes a string argument, the string cannot exceed 255 characters.
- You can include white space when you specify a string in an expression.

Operations on the length of a string

The following operations extract strings by a character count.

Character Count Operation	Description
<code><text>.TRUNCATE(<count>)</code>	Returns a string after truncating the end of the target by the number of characters in <code><count></code> . If the entire string is shorter than <code><count></code> , nothing is returned.
<code><text>.TRUNCATE(<character>, <count>)</code>	Returns a string after truncating the text after <code><character></code> by the number of characters specified in <code><count></code> .
<code><text>.PREFIX(<character>, <count>)</code>	Selects the longest prefix in the target that has at most <code><count></code> occurrences of <code><character></code> .
<code><text>.SUFFIX(<character>, <count>)</code>	Selects the longest suffix in the target that has at most <code><count></code> occurrences of <code><character></code> . For example, consider the following response body: <code>peninsula</code> . The following expression returns a value of <code>sula</code> : <code>http.res.body(100).suffix('n',0)</code> . The following expression returns <code>insula</code> : <code>http.res.body(100).suffix('n',1)</code> . The following expression returns a value of <code>peninsula</code> : <code>http.res.body(100).suffix('n',2)</code> . The following expression returns a value of <code>peninsula</code> : <code>http.res.body(100).suffix('n',3)</code> .

Character Count Operation	Description
<code><text>.SUBSTR(<starting_offset>, <length>)</code>	Select a string with <code><length></code> number of characters from the target object. Begin extracting the string after the <code><starting_offset></code> . If the number of characters after the offset are fewer than the value of the <code><length></code> argument, select all the remaining characters.
<code><text>.SKIP(<character>, <count>)</code>	Select a string from the target after skipping over the longest prefix that has at most <code><count></code> occurrences of <code><character></code> .

Operations on a portion of a string

Refer to the [String operations table](#) to know how to extract a subset of a larger string by using one of the operations.

Operations for comparing the alphanumeric order of two strings

The COMPARE operation examines the first nonmatching character of two different strings. This operation is based on lexicographic order, which is the method used when ordering terms in dictionaries.

This operation returns the arithmetic difference between the ASCII values of the first nonmatching characters in the compared strings. The following differences are examples:

- The difference between “abc” and “and” is -1 (based on the third pair-wise character comparison).
- The difference between “@” and “abc” is -33.
- The difference between “1” and “abc” is -47.

Following is the syntax for the COMPARE operation.

```
<text>.COMPARE(<string>)
```

Extract an integer from a string of bytes that represent text

Refer to the [Integer extraction table](#) to know how to treat a string of bytes that represent text as a sequence of bytes, extract 8 bits, 16 bits, or 32 bits from the sequence, and then convert the extracted bits to an integer.

Convert text to a hash value

You can convert a text string to a hash value by using the HASH function. This function returns a 31-bit positive integer as a result of the operation. Following is the format of the expression:

```
<text>.HASH
```

This function ignores case and white spaces. For example, after the operation, the two strings Ab c and a bc would produce the same hash value.

Encode and decode text by applying the Base64 encoding algorithm

The following two functions encode and decode a text string by applying the Base64 encoding algorithm

Function	Description
text.B64ENCODE	Encodes the text string (designated by text) by applying the Base64 encoding algorithm.
text.B64DECODE	Decodes the Base64-encoded string (designated by text) by applying the Base64 decoding algorithm. The operation raises an UNDEF if text is not in B64-encoded format.

Refine the search in a rewrite action by using the EXTEND function

The EXTEND function is used in rewrite actions that specify patterns or pattern sets and target the bodies of HTTP packets. When a pattern match is found, the EXTEND function extends the scope of the search by a predefined number of bytes on both sides of the matching string. A regular expression can then be used to perform a rewrite on matches in this extended region. Rewrite actions that are configured with the EXTEND function perform rewrites faster than rewrite actions that evaluate entire HTTP bodies using only regular expressions.

The format of the EXTEND function is EXTEND(m,n), where m and n are the number of bytes by which the scope of the search is extended before and after the matching pattern, respectively. When a match is found, the new search scope comprises m bytes that immediately precede the matching string, the string itself, and the n bytes that follow the string. A regular expression can then be used to perform a rewrite on a portion of this new string.

The EXTEND function can be used only if the rewrite action in which it is used fulfills the following requirements:

- The search is performed by using patterns or patterns sets (not regular expressions)

- The rewrite action evaluates only the bodies of HTTP packets.

Also, the EXTEND function can be used only with the following types of rewrite actions:

- `replace_all`
- `insert_after_all`
- `delete_all`
- `insert_before_all`

For example, you might want to delete all instances of “<http://exampleurl.com/>” and “<http://exampleurl.au/>” in the first 1000 bytes of the body. To do this, you can configure a rewrite action to search for all instances of the string `exampleurl`, extend the scope of the search on both sides of the string when a match is found, and then use a regular expression to perform the rewrite in the extended region. The following example extends the scope of the search by 20 bytes to the left and 50 bytes to the right of the matching string:

```
add rewrite action delurl_example delete_all 'HTTP.REQ.BODY(1000)'-  
search exampleurl -refineSearch 'extend(20,50).regex_select(re#http  
://exampleurl.(com|au)#)'
```

Convert text to hexadecimal format

The following function converts text to hexadecimal format and extracts the resulting string:

```
<text>.BLOB_TO_HEX(<string>)
```

For example, this function converts the byte string “abc” to “61:62:63”.

Encrypt and decrypt text

In Advanced policy expressions, you can use the ENCRYPT and DECRYPT functions to encrypt and decrypt text. Data encrypted by the ENCRYPT function on a given NetScaler appliance or high availability (HA) pair is intended for decryption by the DECRYPT function on the same NetScaler appliance or HA pair. The appliance supports the RC4, DES3, AES128, AES192, and AES256 encryption methods. The key value that is required for encryption is not user-specifiable. When an encryption method is set, the appliance automatically generates a random key value that is appropriate for the specified method. The default method is AES256 encryption, which is the most secure encryption method and the one that Citrix recommends.

You do not need to configure encryption unless you want to change the encryption method or you want the appliance to generate a new key value for the current encryption method.

Note: You can also encrypt and decrypt XML payloads. For information about the functions for encrypting and decrypting XML payloads, see [Encrypt and decrypt XML payloads](#).

Configure encryption

During startup, the appliance runs the `set ns encryptionParams` command with, by default, the AES256 encryption method, and uses a randomly generated key value that is appropriate for AES256 encryption. The appliance also encrypts the key value and saves the command, with the encrypted key value, to the NetScaler configuration file. Therefore, the AES256 encryption method is enabled for the ENCRYPT and DECRYPT functions by default. The key value that is saved in the configuration file persists across reboots even though the appliance runs the command each time you restart it.

You can run the `set ns encryptionParams` command manually, or use the configuration utility, if you want to change the encryption method or if you want the appliance to generate a new key value for the current encryption method. To use the CLI to change the encryption method, set only the `method` parameter, as shown in “**Example 1: Changing the Encryption Method.**” If you want the appliance to generate a new key value for the current encryption method, set the `method` parameter to the current encryption method and the `keyValue` parameter to an empty string (“”), as shown in “**Example 2: Generating a New Key Value for the Current Encryption Method.**” After you generate a new key value, you must save the configuration. If you do not save the configuration, the appliance uses the newly generated key value only until the next restart, after which it reverts to the key value in the saved configuration.

Configure encryption by using the GUI

1. Navigate to **System > Settings**.
2. In the **Settings** area, click **Change Encryption** parameters.
3. In the **Change Encryption Parameters** dialog box, do one of the following:
 - To change the encryption method, in the Method list, select the encryption method that you want.
 - To generate a new key value for the current encryption method, click Generate a new key for the selected method.
4. Click **OK**.

Use the ENCRYPT and DECRYPT functions

You can use the ENCRYPT and DECRYPT functions with any expression prefix that returns text. For example, you can use the ENCRYPT and DECRYPT functions in rewrite policies for cookie encryption. In the following example, the rewrite actions encrypt a cookie named MyCookie, which is set by a back-end service, and decrypt the same cookie when it is returned by a client:

```
1 add rewrite action my-cookie-encrypt-action replace "HTTP.RES.  
  SET_COOKIE.COOKIE("MyCookie").VALUE(0)" "HTTP.RES.SET_COOKIE.COOKIE(  
  "MyCookie").VALUE(0).ENCRYPT"
```

```
2  
3 add rewrite action my-cookie-decrypt-action replace "HTTP.REQ.COOKIE.  
VALUE("MyCookie")" "HTTP.REQ.COOKIE.VALUE("MyCookie").DECRYPT"
```

After you configure policies for encryption and decryption, save the configuration to bring the policies into effect.

Configure encryption key for third-party encryption

In Advanced policy expressions, you can use ENCRYPT and DECRYPT functions for encrypting and decrypting text in a request or response. The data encrypted by the ENCRYPT function on an appliance (standalone, high availability, or cluster) is intended to be decrypted by the DECRYPT function by the same appliance. The appliance supports RC4, DES, Triple-DES, AES92, and AES256 encryption methods and each of these methods use a secret key for both encryption and decryption of data. You can use any of these methods to encrypt and decrypt data in two ways - self-encryption and third-party encryption.

The self-encryption feature in an appliance (standalone, high availability or cluster) encrypts and then decrypts data by evaluating the header value. One example to understand this is the HTTP Cookie encryption. The expression evaluates the header, encrypts the HTTP cookie value in the Set-Cookie header in the outgoing response and then decrypts the cookie value when it is returned in the cookie header of a subsequent incoming request from the client. The key value is not user configurable, instead when an encryption method is configured in the set ns encryptionParams command, the appliance automatically generates a random key value for the configured method. By default, the command uses the AES256 encryption method, which is the highly secured method and Citrix recommends this method.

The third-party encryption feature encrypts or decrypts data with a third-party application. For example, a client may encrypt data in a request and the appliance decrypts the data before sending it the back-end server or vice versa. To perform this, the appliance and the third party application must share a secret key. On the appliance, you can directly configure the secret key using an encryption key object and key value is automatically generated by the appliance for a stronger encryption. The same key is manually configured on the third-party appliance so that both appliance and third-party application can use the same key for encrypting and decryption data.

Note: Using third-party encryption, you can also encrypt and decrypt XML payloads. For information about the functions for encrypting and decrypting XML payloads, see “Encrypting and Decrypting XML Payloads.”

Cipher methods

A cipher method provides two functions: an encryption function that transforms a plaintext byte sequence into a ciphertext byte sequence, and a decryption function that transforms the ciphertext back to the plaintext. Cipher methods use byte sequences called keys to perform encryption and decryption. Cipher methods that use the same key for encryption and decryption are called symmetric. Cipher methods that use different keys for encryption and decryption are asymmetric. The most notable examples of asymmetric ciphers are in public key cryptography, which uses a public key available to anyone for encryption and a private key known only to the decrypter.

A good cipher method makes it infeasible to decrypt (“crack”) ciphertext if you don’t possess the key. “Infeasible” really means that cracking the ciphertext would take more time and computing resources than it is worth. As computers become more powerful and cheaper, ciphers that were formerly infeasible to crack become more feasible. Also, over time, flaws are found in cipher methods (or their implementations), making cracking easier. Newer cipher methods are therefore preferred over older ones. In general, longer length keys provide better security than shorter keys, at the cost of longer encryption and decryption times.

A cipher method can use stream ciphers or block ciphers. RC4 is the mostly secured stream ciphers and it is used only for legacy application. Block ciphers can include padding.

Stream ciphers

A stream cipher method operates on individual bytes. Only one stream cipher is available on NetScaler- appliances: RC4, which uses a 128 bit (16 bytes) key length. For a given key, RC4 generates a pseudo-random sequence of bytes, call a keystream, which is X-ORed with the plaintext to produce the ciphertext. RC4 is no longer considered secure and should be used only if required by legacy applications.

Block ciphers

A block cipher method operates on a fixed block of bytes. A NetScaler appliance provides two block ciphers: Data Encryption Standard (DES) and the Advanced Encryption Standard (AES). DES uses a block size of 8 bytes and (on a NetScaler appliance) two choices for key length: 64 bits (8 bytes), of which 56 bits are data and 8 bits are parity, and Triple-DES, a 192 bit (24 bytes) key length. AES has a block size of 16 bytes and (on NetScaler) three choices for key length: 128 bits (16 bytes), 192 bits (24 bytes) and 256 bits (32 bytes).

Padding

If the plaintext for a block cipher is not an integral number of blocks, padding with more bytes might be required. For example, suppose the plaintext is “xyzyz”(hex 78797a7a79). For an 8-byte Triple-DES block, this value would have to be padded to create 8 bytes. The padding scheme must allow the decryption function to determine the length of the original plaintext after decryption. Following are some padding schemes currently in use (n is the number of bytes added):

- PKCS7: Adds n bytes of value n each. For example, 78797a7a79030303. This is the padding scheme used by OpenSSL and ENCRYPT() policy function. The PKCS5 padding scheme is the same as PKCS7.
- ANSI X.923: Adds n-1 zero bytes and a final byte of value n. For example, 78797a7a79000003.
- ISO 10126: Adds n-1 random bytes and a final byte of value n. For example, 78797a7a79xxxx03, where xx can be any byte value. The DECRYPT() policy function accepts this padding scheme, which also allows it to accept the PKCS7 and ANSI X.923 schemes.
- ISO/IEC 7816-4: Adds a 0x80 byte and n-1 zero bytes. For example, 78797a7a79800000. This is also call OneAndZeros padding.
- Zero: Adds n zero bytes. Example: 78797a7a79000000. This can only be used with plaintext that does not include NUL bytes.

If padding is used and the plaintext is an integral number of blocks, an extra block is typically added so that the decryption function can unambiguously determine the original plaintext length. For PCKS7 and 8 byte block, this would be 0808080808080808.

Modes of operation

There are a number of different modes of operation for block ciphers, which specify how multiple blocks of plaintext are encrypted. Some modes use an initialization vector (IV), a block of data apart from the plaintext that is used to start the encryption process. It is a good practice to use a different IV for each encryption, so that the same plaintext produces different ciphertext. The IV does not need to be secret, and so is prepended to the ciphertext. Modes include:

- Electronic Codebook (ECB): Each block of plaintext is encrypted independently. An IV is not used. Padding is required if the plaintext is not a multiple of the cipher block size. The same plaintext and key always produces the same ciphertext. Because of this, ECB is considered less secure than other modes and should only be used for legacy applications.
- Cipher Block Chaining (CBC): Each block of plaintext is XORed with the previous ciphertext block, or the IV for the first block, before being encrypted. Padding is required if the plaintext is not a multiple of the cipher block size. This is the mode used with the NetScaler encryptionParams method.

- Cipher Feedback (CFB): The previous ciphertext block, or the IV for the first block, is encrypted and the output is XORed with the current plaintext block to create the current ciphertext block. The feedback can be 1 bit, 8 bits, or 128 bits. Since the plaintext is XORed with the cipher text, padding is not required.
- Output Feedback (OFB): A keystream is generated by applying the cipher successively to the IV and XORing the keystream blocks with the plaintext. Padding is not required.

Configure encryption keys for third-party encryption Following are the configuration tasks performed in configuring encryption key.

1. Adding an encryption key. Configures an encryption key for a specified cipher method with a specified key value.
2. Modifying an encryption key. You can edit parameters for a configured encryption key.
3. Unsetting an encryption key. Sets parameters for a configured encryption key to their default values. An encryptionKey value with the name must exist. Sets padding to DEFAULT (determined by the method), Deletes an existing IV, which causes ENCRYPT() to generate a random IV. Deletes an existing comment. The method and key value cannot be reset.
4. Removing an encryption key. Deletes a configured encryption key. The key cannot have any references.
5. Show an encryption key. Displays parameters for the configured encryption key or all configured keys. If the name is omitted, the key value is not displayed.

Add an encryption key by using the CLI At the command prompt, type:

```
add ns encryptionKey <name> -method <method> [-keyValue <keyvalue>] [-padding (OFF | ON)] [-iv <hexstring>] -keyValue <keyvalue> [-comment <string>]
```

Where,

```
1 <method> = ( NONE | RC4 | DES3 | AES128 | AES192 | AES256 | DES | DES-CBC | DES-CFB | DES-OFB | DES-ECB | DES3-CBC | DES3-CFB | DES3-OFB | DES3-ECB | AES128-CBC | AES128-CFB | AES128-OFB | AES128-ECB | AES192-CBC | AES192-CFB | AES192-OFB | AES192-ECB | AES256-CBC | AES256-CFB | AES256-OFB | AES256-ECB ) <hexstring> = hex-encoded byte sequence
```

The above encryption methods specify the operation mode with CBC as the default mode of operation. Therefore, DES, DES2, AES128, AES192, and AES256 methods are equivalent to DES-CBC, DES3-CBC, AES128-CBC, AES192-CBC, and AES256-CBC methods.

Modify an encryption key by using the CLI At the command prompt, type:

```
set ns encryptionKey <name> [-method <method>] [-keyValue <keyvalue>]  
[-padding ( OFF | ON )] [-iv <string>] [-comment <string>]
```

Unset an encryption key by using the CLI At the command prompt, type:

```
unset ns encryptionKey <name> [-padding] [-iv] [-comment]
```

Remove an encryption key by using the CLI At the command prompt, type:

```
rm ns encryptionKey <name>
```

Show an encryption key by using the CLI At the command prompt, type:

Example:

```
1 show ns encryptionKey [<name>]  
2  
3 add ns encryptionKey my_key -method aes256 -keyValue 26  
   ea5537b7e0746089476e5658f9327c0b10c3b4778c673a5b38cee182874711 - iv  
   c2bf0b2e15c15004d6b14bcd7e5e365  
4 set ns encryptionKey my_key -keyValue  
   b8742b163abcf62d639837bbee3cef9fb5842d82d00dfe6548831d2bd1d93476  
5 unset ns encryptionKey my_key -iv  
6 rm ns encryptionKey my_key  
7 show ns encryptionKey my_key  
8 Name: my_key  
9 Method: AES256  
10 Padding: DEFAULT  
11 Key Value: (not disclosed)
```

Add an encryption key by using the GUI Navigate to **System > Encryption Keys** and click **Add** to create an encryption key.

Modify an encryption key by using the GUI Navigate to **System > Encryption Keys** and click **Edit** to modify parameters for a configured encryption key.

Remove an encryption key by using the GUI Navigate to **System > Encryption keys** and click **Delete**.

ENCRYPT and DECRYPT functions for third-party encryption

Following is the ENCRYPT function used for third-part encryption.

ENCRYPT (*encryptionKey*, *out_encoding*)

Where,

Input data for the appliance is the text to be encrypted

encryptionKey: An optional string parameter that specifies the configured encryption key object to provide the encryption method, secret key value and other encryption parameters. If omitted, the method uses the automatically generated key value associated with the set ns encryptionParams command.

out_encoding: This value specifies how the output is encoded. If omitted, BASE64 encoding is used.

Input:

```

1  BASE64: original PEM base64-encoding: 6 bits (0..63) encoded as one
   ASCII character:
2      0..23 = 'A'..'Z', 24..51 = 'a'..'z', 52..61 = '0'..'9
   ', 62 = '+', 63 = '/', '=' = pad byte.
3  BASE64URL: URL and Filename safe base64-encoding: same as BASE64
   except 62 = '-', 63 = '_'
4  HEX_UPPER: Hexadecimal with 0..9 = '0'..'9' and 10..15 = 'A'..'F'
   '.'
5  HEX_LOWER: Hexadecimal with 0..9 = '0'..'9' and 10..15 = 'a'..'f'
   '.'
6  HEX_COLONS: Hexadecimal with 0..9 = '0'..'9' and 10..15 = 'A'..'F'
   '; ':' between each hex byte. Matches BLOB_TO_HEX() output
   format
7  HEX: For input, accepts HEX_UPPER, HEX_LOWER, and HEX_COLONS
   format. For output, produces HEX_LOWER format

```

Output: The output is a text encrypted using the specified method and key and encoded using a specified output encoding. It inserts a generated IV before the encrypted text for block methods and modes that require an IV, and either no IV is specified for the *encryptionKey* or the *encryptionKey* is omitted.

Following is the DECRYPT function used for third-part decryption.

DECRYPT (*encryptionKey*, *in_encoding*)

Where,

Input data is an encrypted text using the specified method and key encoded using the specified input encoding. This text is expected to include a generated IV before the encrypted text for block methods and modes that require an IV, and either no IV is specified for the *encryptionKey* or the *encryptionKey* is omitted.

encryptionKey—An optional string parameter that specifies the configured *encryptionKey* object to provide the encryption method, secret key and other encryption parameters. If omitted, the method and automatically generated key associated with the *encryptionParams* setting will be used

`in_encoding`—An optional enumeration parameter that specifies how the input is expected to be encoded. The values are the same as the `out_encoding` of `ENCRYPT`. If omitted, `BASE64` encoding will be expected.

The output data is an unencoded decrypted text.

Variants and optional parameters Following are the variants of these functions with the optional parameters:

Variant	Description
<code>ENCRYPT</code>	Use <code>encryptionParams</code> command and <code>BASE64</code> output encoding parameter.
<code>ENCRYPT(out_encoding)</code>	Use <code>encryptionParams</code> and specified output encoding parameter.
<code>ENCRYPT(encryptionKey)</code>	Use the specified <code>encryptionKey</code> and <code>BASE64</code> output encoding parameter.
<code>ENCRYPT(encryptionKey, out_encoding)</code>	Use the specified <code>encryptionKey</code> and output encoding parameter.
<code>DECRYPT</code>	Use <code>encryptionParams</code> command and <code>BASE64</code> input encoding parameter.
<code>DECRYPT(out_encoding)</code>	Use <code>encryptionParams</code> command and the specified input encoding parameter.
<code>DECRYPT(encryptionKey)</code>	Use the specified <code>encryptionKey</code> and <code>BASE64</code> input encoding parameter.
<code>DECRYPT(encryptionKey, out_encoding)</code>	Use the specified <code>encryptionKey</code> and input encoding parameter.

Configure HMAC keys

NetScaler appliances support a Hashed Message Authentication Code (HMAC) function that calculates a digest method or hash of input text by using a secret key shared between a message sender and message receiver. The digest method (derived from an RFC 2104 technique) authenticates the sender and verifies that the message content has not been altered. For example, when a client sends a message with the shared HMAC key to a NetScaler appliance, advanced (PI) policy expressions use the HMAC function to compute the hash-based code on the selected text. Then, when the receiver receives the message with the secret key, it recomputes the HMAC by comparing it with the original HMAC to determine whether the message has been altered. The HMAC function is supported by standalone appliances and by appliances in a high availability configuration or in a cluster. Using it is similar to

configuring an encryption key.

The `add ns hmacKey` and `set ns hmacKey` commands include a parameter that specifies the digest method and the shared secret key to use for the HMAC computation.

To configure a HMAC key, you must perform the following:

1. Adding an HMAC key. Configures an HMAC key with a specified key value.
2. Modifying an HMAC key. Modifies parameters for a configured HMAC key. The digest method can be changed without changing the key value, since the key value length is not determined by the digest. However, it is advisable to specify a new key when changing the digest.
3. Unsetting an HMAC key. Sets parameters for a configured HMAC key to their default values. An `hmacKey` object with the name must exist. The only parameter that can be unset is the comment, which is deleted.
4. Removing an HMAC key. Deletes a configured key. The key cannot have any references.
5. Show an HMAC key. Displays parameters for the configured HMAC key or all configured keys. If the name is omitted, the key value is not displayed.

Configure a unique and random HMAC key

You can automatically generate a unique HMAC key. If your appliance is a cluster configuration, the HMAC key is generated at the start of the process and distributed to all nodes and packet engines. This ensures the HMAC key is the same for all packet engines and all nodes in the cluster.

At the command prompt, type:

```
add ns hmacKey <your_key> -digest <digest> -keyValue <keyvalue>
```

Example:

```
add ns hmacKey <name> -digest sha1 -keyValue AUTO
```

Where,

- Name syntax is correct and does not duplicate the name of an existing key.
- The “AUTO”keyValue can be used in the set commands to generate new keys for existing encryptionKey and hmacKey objects.

Note:

The automatic key generation is useful if the NetScaler appliance is encrypting and decrypting data with the key, or generating and verifying an HMAC key. Since the key value itself is already encrypted when displayed, you cannot retrieve the generated key value for use by any other party.

Example:

```
add ns hmacKey my_hmac_key -digest sha1 -keyValue 0c753c6c5ef859189cacdf95b506
```

The above encryption methods specify the operation mode with CBC as the default mode of operation. Therefore, DES, DES2, AES128, AES192, and AES256 methods are equivalent to DES-CBC, DES3-CBC, AES128-CBC, AES192-CBC, and AES256-CBC methods.

Modify an HMAC key by using the CLI

This command modifies the parameters configured for an HMAC key. You can change the digest without changing the key value, since the key value length is not determined by the digest. However, it is advisable to specify a new key when changing the digest. At the command prompt, type:

```
1 set ns hmacKey <name> [-digst <digest>] [-keyValue <keyvalue>]
2 [-comment <string>]
```

Unset an HMAC key by using the CLI

This command sets parameters configured for an HMAC key with their default values. An hmacKey object with the name must exist. The only parameter that you can unset is the comment option, which is deleted. At the command prompt, type:

```
unset ns hmacKey <name> -comment
```

Remove an HMAC key by using the CLI

This command deletes the configured hmac key. The key cannot have references. At the command prompt, type:

```
rm ns hmacKey <name>
```

Show an HMAC key by using the CLI

At the command prompt, type:

```
1 show ns encryptionKey [<name>]
2
3 add ns hmacKey my_hmac_key -digest sha1 -keyValue 0
  c753c6c5ef859189cacdf95b506d02c1797407d
4 set ns hmacKey my_hmac_key -keyValue
  f348c594341a840a1f641a1cf24aa24c15eb1317
5 rm ns hmacKey my_hmac_key
6 show ns hmacKey my_hmac_key
7      Name: my_hmac_key
```

```
8   Digest: SHA1
9   Key Value: (not disclosed)
```

Advanced policy expressions: Working with dates, times, and numbers

December 22, 2023

Most numeric data that the NetScaler appliance processes consists of dates and times. In addition to working with dates and times, the appliance processes other numeric data, such as the lengths of HTTP requests and responses. To process this data, you can configure advanced policy expressions that process numbers.

A numeric expression consists of an expression prefix that returns a number and sometimes, but not always, an operator that can perform an operation on the number. Examples of expression prefixes that return numbers are `SYS.TIME.DAY`, `HTTP.REQ.CONTENT_LENGTH`, and `HTTP.RES.BODY.LENGTH`. Numeric operators can work with any prefix expression that returns data in numeric format. The `GT(<int>)` operator, for example, can be used with any prefix expression, such as `HTTP.REQ.CONTENT_LENGTH`, that returns an integer.

Format of dates and times in an expression

May 2, 2023

When configuring an advanced policy expression in a policy that works with dates and times (for example, the NetScaler system time or a date in an SSL certificate), you specify a time format as follows:

```
GMT | LOCAL [<yyyy>] [<month>] [<d>] [<h>] [<m>] [<s>]
```

Where:

- `<yyyy>` is a four-digit year after GMT or LOCAL.
- `<month>` is a three-character abbreviation for the month, for example, Jan, Dec.
- `<d>` is a day of the week or an integer for the date.

You cannot specify the day as Monday, Tuesday, and so on. You specify either an integer for a specific day of the month, or you specify a date as the first, second, third weekday of the month, and so on. Following are examples of specifying a day of the week:

- Sun_1 is the first Sunday of the month.
- Sun_3 is the third Sunday of the month.

- Wed_3 is the third Wednesday of the month.
- 30 is an example of an exact date in a month.
- <h> is the hour, for example, 10h.
- <s> is the number of seconds, for example, 30s.

The following example expression is true if the date is between 2008 Jan and 2009 Jan, based on GMT.

```
http.req.date.between(GMT 2008 Jan, GMT 2009 Jan)
```

The following example expression is true for March and all months that follow March in the calendar year, based on GMT:

```
sys.time.ge(GMT 2008 Mar)
```

When you specify a date and time, note that the format is case sensitive and must preserve the exact number of blank spaces between entries.

```
1  **Note:**
2
3  In an expression that requires two time values, both must use GMT or
4     both must use LOCAL. You cannot mix the two in an expression.
5
6  Unlike when you use the SYS.TIME prefix in an advanced policy
7     expression, if you specify SYS.TIME in a rewrite action, the
8     NetScaler returns a string in conventional date format (for example,
9     Sun, 06 Nov 1994 08:49:37 GMT). For example, the following rewrite
10    action replaces the http.res.date header with the NetScaler system
11    time in a conventional date format:
12
13    add rewrite action sync_date replace http.res.date sys.time
```

Expressions for the NetScaler system time

May 2, 2023

The SYS.TIME expression prefix extracts the NetScaler system time. You can configure expressions that establish whether a particular event occurred at a particular time or within a particular time range according to the NetScaler system time.

The following table describes the expressions that you can create by using the SYS.TIME prefix.

- **SYS.TIME.BETWEEN(<time1>, <time2>):**

Returns a Boolean TRUE if the returned value is later than <time1> and earlier than <time2>.

You format the <time1>, <time2> arguments as follows:

- They must both be GMT or both LOCAL.
- <time2> must be later than <time1>.

For example, if the current time is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month, you can specify the following:

- sys.time.between(GMT 2004, GMT 2006)
- sys.time.between(GMT 2004 Jan, GMT 2006 Nov)
- sys.time.between(GMT 2004 Jan, GMT 2006)
- sys.time.between(GMT 2005 May Sun_1, GMT 2005 May Sun_3)
- sys.time.between(GMT 2005 May 1, GMT May 2005 1)
- sys.time.between(LOCAL 2005 May 1, LOCAL May 2005 1)

- **SYS.TIME.DAY:**

Returns the current day of the month as a number from 1 through 31.

- **SYS.TIME.EQ(<time>):**

Returns a Boolean TRUE if the current time is equal to the <time> argument.

For example, if the current time is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month, you can specify the following (evaluation results are shown in parentheses):

- sys.time.eq(GMT 2005) (TRUE in this example.)
- sys.time.eq(GMT 2005 Dec) (FALSE in this example.)
- sys.time.eq(LOCAL 2005 May) (Evaluates to TRUE or FALSE in this example, depending on the current time zone.)
- sys.time.eq(GMT 10h) (TRUE in this example.)
- sys.time.eq(GMT 10h 30s) (TRUE in this example.)
- sys.time.eq(GMT May 10h) (TRUE in this example.)
- sys.time.eq(GMT Sun) (TRUE in this example.)
- sys.time.eq(GMT May Sun_1) (TRUE in this example.)

- **SYS.TIME.NE(<time>):**

Returns a Boolean TRUE if the current time is not equal to the <time> argument.

- **SYS.TIME.GE(<time>):**

Returns a Boolean TRUE if the current time is later than or equal to <time>.

For example, if the current time is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month, you can specify the following (evaluation results are shown in parentheses):

- sys.time.ge(GMT 2004) (TRUE in this example.)
- sys.time.ge(GMT 2005 Jan) (TRUE in this example.)

- sys.time.ge(LOCAL 2005 May) (TRUE or FALSE in this example, depending on the current time zone.)
- sys.time.ge(GMT 8h) (TRUE in this example.)
- sys.time.ge(GMT 30m) (FALSE in this example.)
- sys.time.ge(GMT May 10h) (TRUE in this example.)
- sys.time.ge(GMT May 10h 0m) (TRUE in this example.)
- sys.time.ge(GMT Sun) (TRUE in this example.)
- sys.time.ge(GMT May Sun_1) (TRUE in this example.)

• **SYS.TIME.GT(<time>):**

Returns a Boolean TRUE if the time value is later than the <time> argument.

For example, if the current time is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month, you can specify the following (evaluation results are shown in parentheses):

- sys.time.gt(GMT 2004) (TRUE in this example.)
- sys.time.gt(GMT 2005 Jan) (TRUE in this example.)
- sys.time.gt(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- sys.time.gt(GMT 8h) (TRUE in this example.)
- sys.time.gt(GMT 30m) (FALSE in this example.)
- sys.time.gt(GMT May 10h) (FALSE in this example.)
- sys.time.gt(GMT May 10h 0m) (TRUE in this example.)
- sys.time.gt(GMT Sun) (FALSE in this example.)
- sys.time.gt(GMT May Sun_1) (FALSE in this example.)

• **SYS.TIME.HOURS:**

Returns the current hour as an integer from 0 to 23.

• **SYS.TIME.LE(<time>):**

Returns a Boolean TRUE if the current time value precedes or is equal to the <time> argument.

For example, if the current time is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month, you can specify the following (evaluation results are shown in parentheses):

- sys.time.le(GMT 2006) (TRUE in this example.)
- sys.time.le(GMT 2005 Dec) (TRUE in this example.)
- sys.time.le(LOCAL 2005 May) (TRUE or FALSE depending on the current timezone.)
- sys.time.le(GMT 8h) (FALSE in this example.)
- sys.time.le(GMT 30m) (TRUE in this example.)
- sys.time.le(GMT May 10h) (TRUE in this example.)
- sys.time.le(GMT Jun 11h) (TRUE in this example.)
- sys.time.le(GMT Wed) (TRUE in this example.)

- `sys.time.lt(GMT May Sun_1)` (TRUE in this example.)

- **SYS.TIME.LT(<time>):**

Returns a Boolean TRUE if the current time value precedes the <time> argument.

For example, if the current time is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month, you can specify the following (evaluation results are shown in parentheses):

- `sys.time.lt(GMT 2006)` (TRUE in this example.)
- `sys.time.lt.time.lt(GMT 2005 Dec)` (TRUE in this example.)
- `sys.time.lt(LOCAL 2005 May)` (TRUE or FALSE depending on the current time zone.)
- `sys.time.lt(GMT 8h)` (FALSE in this example.)
- `sys.time.lt(GMT 30m)` (TRUE in this example.)
- `sys.time.lt(GMT May 10h)` (FALSE in this example.)
- `sys.time.lt(GMT Jun 11h)` (TRUE in this example.)
- `sys.time.lt(GMT Wed)` (TRUE in this example.)
- `sys.time.lt(GMT May Sun_1)` (FALSE in this example.)

- **SYS.TIME.MINUTES:**

Returns the current minute as an integer from 0 to 59.

- **SYS.TIME.MONTH:**

Extracts the current month and returns an integer from 1 (January) to 12 (December).

- **SYS.TIME.RELATIVE_BOOT:**

Calculates the number of seconds to the closest previous or scheduled reboot, and returns an integer.

If the closest boot time is in the past, the integer is negative. If it is in the future, the integer is positive.

- **SYS.TIME.RELATIVE_NOW:**

Calculates the number of seconds between the current NetScaler system time and the specified time, and returns an integer showing the difference.

If the designated time is in the past, the integer is negative; if it is in the future, the integer is positive.

- **SYS.TIME.SECONDS:**

Extracts the seconds from the current NetScaler system time, and returns that value as an integer from 0 to 59.

- **SYS.TIME.WEEKDAY:**

Returns the current weekday as a value from 0 (Sunday) to 6 (Saturday).

- **SYS.TIME.WITHIN (<time1>, <time2>):**

If you omit an element of time in <time1>, for example, the day or hour, it is assumed to have the lowest value in its range. If you omit an element in <time2>, it is assumed to have the highest value of its range.

The ranges for the elements of time are as follows: month 1-12, day 1-31, weekday 0-6, hour 0-23, minutes 0-59 and seconds 0-59. If you specify the year, you must do so in both <time1> and <time2>.

For example, if the time is GMT 2005 May 10 10h 15m 30s, and it is the second Tuesday of the month, you can specify the following (evaluation results are shown in parentheses):

- `sys.time.within(GMT 2004, GMT 2006)` (TRUE in this example.)
- `sys.time.within(GMT 2004 Jan, GMT 2006 Mar)` (FALSE, May is not in the range of January to March.)
- `sys.time.within(GMT Feb, GMT)` (TRUE, May is in the range of February to December.)
- `sys.time.within(GMT Sun_1, GMT Sun_3)` (TRUE, the second Tuesday is between the first Sunday and the third Sunday.)
- `sys.time.within(GMT 2005 May 1 10h, GMT May 2005 1 17h)` (TRUE in this example.)
- `sys.time.within(LOCAL 2005 May 1, LOCAL May 2005 1)` (TRUE or FALSE, depending on the NetScaler system time zone.)

- **SYS.TIME.YEAR:**

Extracts the year from the current system time and returns that value as a four-digit integer.

Expressions for SSL certificate dates

May 2, 2023

You can determine the validity period for SSL certificates by configuring an expression that contains the following prefix:

`CLIENT.SSL.CLIENT_CERT`

The following example expression matches a particular time for expiration with the information in the certificate:

```
client.ssl.client_cert.valid_not_after.eq(GMT 2009)
```

The following table describes time-based operations on SSL certificates. To obtain the expression you want, replace *certificate* in the expression in the first column with the prefix expression, “CLIENT.SSL.CLIENT_CERT”.

- **<certificate>.VALID_NOT_AFTER:**

Returns the last day before certificate expiration. The return format is the number of seconds since GMT January 1, 1970 (0 hours, 0 minutes, 0 seconds).

- **<certificate>.VALID_NOT_AFTER.BETWEEN(<time1>, <time2>):**

Returns a Boolean TRUE value if the certificate validity is between the <time1> and <time2> arguments. Both <time1> and <time2> must be fully specified. Following are examples:

GMT 1995 Jan is fully specified.

GMT Jan is not fully specified

GMT 1995 20 is not fully specified.

GMT Jan Mon_2 is not fully specified.

The <time1> and <time2> arguments must be both GMT or both LOCAL, and <time2> must be greater than <time1>.

For example, if it is GMT 2005 May 1 10h 15m 30s, and the first Sunday of the month, you can specify the following (evaluation results are in parentheses).

- . . .between(GMT 2004, GMT 2006) (TRUE)
- . . .between(GMT 2004 Jan, GMT 2006 Nov) (TRUE)
- . . .between(GMT 2004 Jan, GMT 2006) (TRUE)
- . . .between(GMT 2005 May Sun_1, GMT 2005 May Sun_3) (TRUE)
- . . .between(GMT 2005 May 1, GMT May 2005 1) (TRUE)
- . . .between(LOCAL 2005 May 1, LOCAL May 2005 1) (TRUE or FALSE, depending on the NetScaler system time zone.)

- **<certificate>.VALID_NOT_AFTER.DAY:**

Extracts the last day of the month that the certificate is valid, and returns a number from 1 through 31, as appropriate for the date.

- **<certificate>.VALID_NOT_AFTER.EQ(<time>):**

Returns a Boolean TRUE if the time is equal to the <time> argument.

For example, if the current time is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month, you can specify the following (evaluation results for this example are in parentheses):

- . . .eq(GMT 2005) (TRUE)
- . . .eq(GMT 2005 Dec) (FALSE)
- . . .eq(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone)
- . . .eq(GMT 10h) (TRUE)
- . . .eq(GMT 10h 30s) (TRUE)

- ...eq(GMT May 10h) (TRUE)
- ...eq(GMT Sun) (TRUE)
- ...eq(GMT May Sun_1) (TRUE)

- **<certificate>.VALID_NOT_AFTER.GE(<time>):**

Returns a Boolean TRUE if the time value is greater than or equal to the argument <time>.

For example, if the time value is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month of May in 2005, you can specify the following (evaluation results for this example are in parentheses):

- ...ge(GMT 2004) (TRUE)
- ...ge(GMT 2005 Jan) (TRUE)
- ...ge(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- ...ge(GMT 8h) (TRUE)
- ...ge(GMT 30m) (FALSE)
- ...ge(GMT May 10h) (TRUE)
- ...ge(GMT May 10h 0m) (TRUE)
- ...ge(GMT Sun) (TRUE)
- ...ge(GMT May Sun_1) (TRUE)

- **<certificate>.VALID_NOT_AFTER.GT(<time>):**

Returns a Boolean TRUE if the time value is greater than the argument <time>.

For example, if the time value is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month of May in 2005, you can specify the following (evaluation results for this example are in parentheses):

- ...gt(GMT 2004) (TRUE)
- ...gt(GMT 2005 Jan) (TRUE)
- ...gt(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- ...gt(GMT 8h) (TRUE)
- ...gt(GMT 30m) (FALSE)
- ...gt(GMT May 10h) (FALSE)
- ...gt(GMT Sun) (FALSE)
- ...gt(GMT May Sun_1) (FALSE)

- **<certificate>.VALID_NOT_AFTER.HOURS:**

Extracts the last hour that the certificate is valid and returns that value as an integer from 0 to 23.

- **<certificate>.VALID_NOT_AFTER.LE(<time>):**

Returns a Boolean TRUE if the time precedes or is equal to the <time> argument.

For example, if the time value is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month of May in 2005, you can specify the following (evaluation results for this example are in parentheses):

- ...le(GMT 2006) (TRUE)
- ...le(GMT 2005 Dec) (TRUE)
- ...le(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- ...le(GMT 8h) (FALSE)
- ...le(GMT 30m) (TRUE)
- ...le(GMT May 10h) (TRUE)
- ...le(GMT Jun 11h) (TRUE)
- ...le(GMT Wed) (TRUE)
- ...le(GMT May Sun_1) (TRUE)

• **<certificate>.VALID_NOT_AFTER.LT(<time>):**

Returns a Boolean TRUE if the time precedes the <time> argument.

For example, if the current time is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month, you can specify the following:

- ...lt(GMT 2006) (TRUE)
- ...lt(GMT 2005 Dec) (TRUE)
- ...lt(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- ...lt(GMT 8h) (FALSE)
- ...lt(GMT 30m) (TRUE)
- ...lt(GMT May 10h) (FALSE)
- ...lt(GMT Jun 11h) (TRUE)
- ...lt(GMT Wed) (TRUE)
- ...lt(GMT May Sun_1) (FALSE)

• **<certificate>.VALID_NOT_AFTER.MINUTES:**

Extracts the last minute that the certificate is valid and returns that value as an integer from 0 to 59.

• **<certificate>.VALID_NOT_AFTER.MONTH:**

Extracts the last month that the certificate is valid and returns that value as an integer from 1 (January) to 12 (December).

• **<certificate>.VALID_NOT_AFTER.RELATIVE_BOOT:**

Calculates the number of seconds to the closest previous or scheduled reboot and returns an integer. If the closest boot time is in the past, the integer is negative. If it is in the future, the integer is positive.

- **<certificate>.VALID_NOT_AFTER.RELATIVE_NOW;**

Calculates the number of seconds between the current system time and the specified time and returns an integer. If the time is in the past, the integer is negative; if it is in the future, the integer is positive.

- **<certificate>.VALID_NOT_AFTER.SECONDS:**

Extracts the last second that the certificate is valid and returns that value as an integer from 0 to 59.

- **<certificate>.VALID_NOT_AFTER.WEEKDAY:**

Extracts the last weekday that the certificate is valid. Returns a number between 0 (Sunday) and 6 (Saturday) to give the weekday in the time value.

- **<certificate>.VALID_NOT_AFTER.WITHIN(<time1>, <time2>):**

Returns a Boolean TRUE if the time lies within all the ranges defined by the elements in <time1> and <time2>.

If you omit an element of time from <time1>, it is assumed to have the lowest value in its range. If you omit an element from <time2>, it is assumed to have the highest value of its range. If you specify a year in <time1>, you must specify it in <time2>.

The ranges for elements of time are as follows: month 1-12, day 1-31, weekday 0-6, hour 0-23, minutes 0-59 and seconds 0-59. For the result to be TRUE, each element in the time must exist in the corresponding range that you specify in <time1>, <time2>.

For example, if time is GMT 2005 May 10 10h 15m 30s, and it is the second Tuesday of the month, you can specify the following (evaluation results are in parentheses):

- . . .within(GMT 2004, GMT 2006) (TRUE)
- . . .within(GMT 2004 Jan, GMT 2006 Mar) (FALSE, May is not in the range of January to March.)
- . . .within(GMT Feb, GMT) (TRUE, May is in the range for February to December)
- . . .within(GMT Sun_1, GMT Sun_3) (TRUE, the second Tuesday lies within the range of the first Sunday through the third Sunday)
- . . .within(GMT 2005 May 1 10h, GMT May 2005 1 17h) (TRUE)
- . . .within(LOCAL 2005 May 1, LOCAL May 2005 1) (TRUE or FALSE, depending on the NetScaler system time zone)

- **<certificate>.VALID_NOT_AFTER.YEAR:**

Extracts the last year that the certificate is valid and returns a four-digit integer.

- **<certificate>.VALID_NOT_BEFORE:**

Returns the date that the client certificate becomes valid.

The return format is the number of seconds since GMT January 1, 1970 (0 hours, 0 minutes, 0 seconds).

- **<certificate>.VALID_NOT_BEFORE.BETWEEN(<time1>, <time2>):**

Returns a Boolean TRUE if the time value is between the two time arguments. Both <time1> and <time2> arguments must be fully specified.

Following are examples:

GMT 1995 Jan is fully specified.

GMT Jan is not fully specified.

GMT 1995 20 is not fully specified.

GMT Jan Mon_2 is not fully specified.

The time arguments must be both GMT or both LOCAL, and <time2> must be greater than <time1>.

For example, if the time value is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month of May in 2005, you can specify the following (evaluation results for this example are in parentheses):

- . . .between(GMT 2004, GMT 2006) (TRUE)
- . . .between(GMT 2004 Jan, GMT 2006 Nov) (TRUE)
- . . .between(GMT 2004 Jan, GMT 2006) (TRUE)
- . . .between(GMT 2005 May Sun_1, GMT 2005 May Sun_3) (TRUE)
- . . .between(GMT 2005 May 1, GMT May 2005 1) (TRUE)
- . . .between(LOCAL 2005 May 1, LOCAL May 2005 1) (TRUE or FALSE, depending on the NetScaler system time zone.)

- **<certificate>.VALID_NOT_BEFORE.DAY:**

Extracts the last day of the month that the certificate is valid and returns that value as a number from 1 through 31 representing that day.

- **<certificate>.VALID_NOT_BEFORE.EQ(<time>):**

Returns a Boolean TRUE if the time is equal to the <time> argument.

For example, if the time value is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month of May in 2005, you can specify the following (evaluation results for this example are in parentheses):

- . . .eq(GMT 2005) (TRUE)
- . . .eq(GMT 2005 Dec) (FALSE)
- . . .eq(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- . . .eq(GMT 10h) (TRUE)
- . . .eq(GMT 10h 30s) (TRUE)

- . . .eq(GMT May 10h) (TRUE)
- . . .eq(GMT Sun) (TRUE)
- . . .eq(GMT May Sun_1) (TRUE)

- **<certificate>.VALID_NOT_BEFORE.GE(<time>):**

Returns a Boolean TRUE if the time is greater than (after) or equal to the <time> argument.

For example, if the time value is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month of May in 2005, you can specify the following (evaluation results are in parentheses):

- . . .ge(GMT 2004) (TRUE)
- . . .ge(GMT 2005 Jan) (TRUE)
- . . .ge(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- . . .ge(GMT 8h) (TRUE)
- . . .ge(GMT 30m) (FALSE)
- . . .ge(GMT May 10h) (TRUE)
- . . .ge(GMT May 10h 0m) (TRUE)
- . . .ge(GMT Sun) (TRUE)
- . . .ge(GMT May Sun_1) (TRUE)

- **<certificate>.VALID_NOT_BEFORE.GT(<time>):**

Returns a Boolean TRUE if the time occurs after the <time> argument.

For example, if the time value is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month of May in 2005, you can specify the following (evaluation results are in parentheses):

- . . .gt(GMT 2004) (TRUE)
- . . .gt(GMT 2005 Jan) (TRUE)
- . . .gt(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- . . .gt(GMT 8h) (TRUE)
- . . .gt(GMT 30m) (FALSE)
- . . .gt(GMT May 10h) (FALSE)
- . . .gt(GMT May 10h 0m) (TRUE)
- . . .gt(GMT Sun) (FALSE)
- . . .gt(GMT May Sun_1) (FALSE)

- **<certificate>.VALID_NOT_BEFORE.HOURS:**

Extracts the last hour that the certificate is valid and returns that value as an integer from 0 to 23.

- ****<certificate>.VALID_NOT_BEFORE.LE(<time>)**

Returns a Boolean TRUE if the time precedes or is equal to the <time> argument.

For example, if the time value is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month of May in 2005, you can specify the following (evaluation results for this example are in parentheses):

- ...le(GMT 2006) (TRUE)
- ...le(GMT 2005 Dec) (TRUE)
- ...le(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- ...le(GMT 8h) (FALSE)
- ...le(GMT 30m) (TRUE)
- ...le(GMT May 10h) (TRUE)
- ...le(GMT Jun 11h) (TRUE)
- ...le(GMT Wed) (TRUE)
- ...le(GMT May Sun_1) (TRUE)

- **<certificate>.VALID_NOT_BEFORE.LT(<time>):**

Returns a Boolean TRUE if the time precedes the <time> argument.

For example, if the time value is GMT 2005 May 1 10h 15m 30s, and it is the first Sunday of the month of May in 2005, you can specify the following (evaluation results for this example are in parentheses):

- ...lt(GMT 2006) (TRUE)
- ...lt(GMT 2005 Dec) (TRUE)
- ...lt(LOCAL 2005 May) (TRUE or FALSE, depending on the current time zone.)
- ...lt(GMT 8h) (FALSE)
- ...lt(GMT 30m) (TRUE)
- ...lt(GMT May 10h) (FALSE)
- ...lt(GMT Jun 11h) (TRUE)
- ...lt(GMT Wed) (TRUE)
- ...lt(GMT May Sun_1) (FALSE)

- **<certificate>.VALID_NOT_BEFORE.MINUTES:**

Extracts the last minute that the certificate is valid. Returns the current minute as an integer from 0 to 59.

- **<certificate>.VALID_NOT_BEFORE.MONTH:**

Extracts the last month that the certificate is valid. Returns the current month as an integer from 1 (January) to 12 (December).

- **<certificate>.VALID_NOT_BEFORE.RELATIVE_BOOT:**

Calculates the number of seconds to the closest previous or scheduled NetScaler reboot and returns an integer. If the closest boot time is in the past, the integer is negative; if it is in the future, the integer is positive.

- **<certificate>.VALID_NOT_BEFORE.RELATIVE_NOW:**

Returns the number of seconds between the current NetScaler system time and the specified time as an integer. If the designated time is in the past, the integer is negative. If it is in the future, the integer is positive.

- **<certificate>.VALID_NOT_BEFORE.SECONDS:**

Extracts the last second that the certificate is valid. Returns the current second as an integer from 0 to 59.

- **<certificate>.VALID_NOT_BEFORE.WEEKDAY:**

Extracts the last weekday that the certificate is valid. Returns the weekday as a number between 0 (Sunday) and 6 (Saturday).

- **<certificate>.VALID_NOT_BEFORE.WITHIN(<time1>, <time2>):**

Returns a Boolean TRUE if each element of time exists within the range defined in the <time1>, <time2> arguments.

If you omit an element of time from <time1>, it is assumed to have the lowest value in its range. If you omit an element of time from <time2>, it is assumed to have the highest value in its range. If you specify a year in <time1>, it must be specified in <time2>. The ranges for elements of time are as follows: month 1-12, day 1-31, weekday 0-6, hour 0-23, minutes 0-59 and seconds 0-59.

For example, if the time is GMT 2005 May 10 10h 15m 30s, and it is the second Tuesday of the month, you can specify the following (evaluation results are in parentheses):

- . . .within(GMT 2004, GMT 2006) (TRUE)
- . . .within(GMT 2004 Jan, GMT 2006 Mar) (FALSE, May is not in the range of January to March.)
- . . .within(GMT Feb, GMT) (TRUE, May is in the range of February to December.)
- . . .within(GMT Sun_1, GMT Sun_3) (TRUE, the second Tuesday is between the first Sunday and the third Sunday.)
- . . .within(GMT 2005 May 1 10h, GMT May 2005 1 17h) (TRUE)
- . . .within(LOCAL 2005 May 1, LOCAL May 2005 1) (TRUE or FALSE, depending on the NetScaler system time zone)

- **<certificate>.VALID_NOT_BEFORE.YEAR:**

Extracts the last year that the certificate is valid. Returns the current year as a four-digit integer.

Expressions for HTTP request and response dates

July 2, 2021

The following expression prefixes return the contents of the HTTP Date header as text or as a date object. These values can be evaluated as follows:

- As a number. The numeric value of an HTTP Date header is returned in the form of the number of seconds since Jan 1, 1970.

For example, the expression `http.req.date.mod(86400)` returns the number of seconds since the beginning of the day. These values can be evaluated using the same operations as other non-date-related numeric data. For more information, see [Expression prefixes for numeric data other than date and time](#).

- As an HTTP header. Date headers can be evaluated using the same operations as other HTTP headers.

For more information, see [Advanced policy expressions: Parsing HTTP, TCP, and UDP data](#).

- As text. Date headers can be evaluated using the same operations as other strings.

For more information, see [Advanced Policy Expressions: Evaluating Text](#).

Prefix	Description
HTTP.REQ.DATE	Returns the contents of the HTTP Date header as text or as a date object. The date formats recognized are: RFC822. Sun, 06 Jan 1980 08:49:37 GMT, RFC850. Sunday, 06-Jan-80 09:49:37 GMT, and ASCTIME. Sun Jan 6 08:49:37 1980.
HTTP.RES.DATE	Returns the contents of the HTTP Date header as text or as a date object. The date formats recognized are: RFC822. Sun, 06 Jan 1980 8:49:37 GMT, RFC850. Sunday, 06-Jan-80 9:49:37 GMT, and ASCTIME. Sun Jan 6 08:49:37 1980.

Generate the day of the week, as a string, in short and long formats

September 21, 2020

The functions, [WEEKDAY_STRING_SHORT](#) and [WEEKDAY_STRING](#), generate the day of the week, as a string, in short and long formats, respectively. The strings that are returned are always in English. The prefix used with these functions must return the day of the week in integer format and the acceptable range for the value returned by the prefix is 0-6. Therefore, you can use any prefix that returns an

integer in the acceptable range. An UNDEF condition is raised if the returned value is not in this range or if memory allocation fails.

Following are the descriptions of the functions:

Function	Description
<code><prefix>.WEEKDAY_STRING_SHORT</code>	Returns the day of the week in short format. The short form is always 3 characters long with an initial capital and the remaining characters in lower case. For example, <code>SYS.TIME.WEEKDAY.WEEKDAY_STRING_SHORT</code> returns Sun if the value returned by the WEEKDAY function is 0 and Sat if the value returned by the prefix is 6.
<code><prefix>.WEEKDAY_STRING</code>	Returns the day of the week in long format. The long form always has an initial capital, with the remaining characters in lower case. For example, <code>SYS.TIME.WEEKDAY.WEEKDAY_STRING</code> returns Sunday if the value returned by the WEEKDAY function is 0 and Saturday if the value returned by the prefix is 6.

Expression prefixes for numeric data other than date and time

September 21, 2020

In addition to configuring expressions that operate on time, you can configure expressions for the following types of numeric data:

- The length of HTTP requests, the number of HTTP headers in a request, and so on.
For more information, see [Expressions for numeric HTTP payload data other than dates](#).
- IP and MAC addresses.
For more information, see [Expressions for IP addresses and IP subnets](#).
- Client and server data in regard to interface IDs and transaction throughput rate.
For more information, see [Expressions for numeric client and server data](#).

- Numeric data in client certificates other than dates.

For information on these prefixes, including the number of days until certificate expiration and the encryption key size, see [Prefixes for numeric data in SSL certificates](#).

Convert numbers to text

December 21, 2023

The following functions produce binary strings from a number returned by an expression prefix. These functions are particularly useful in the TCP rewrite feature as replacement strings for binary data. For more information about the TCP rewrite feature, see [Rewrite](#).

All the functions return a value of type text. The endianness that some of the functions accept as a parameter is either LITTLE_ENDIAN or BIG_ENDIAN.

Function	Description
.SIGNED8_STRING	Produces an 8-bit signed binary string representing the number. If the value is out of range, an undef condition is raised. Example: HTTP.REQ.BODY(100).GET_SIGNED8(16).SUB(3).SIGNED8_STRING
.UNSIGNED8_STRING	Produces an 8-bit unsigned binary string representing the number. If the value is out of range, an undef condition is raised. Example: HTTP.REQ.BODY(100).GET_UNSIGNED8(31).ADD(3).UNSIGNED8_STRING
.SIGNED16_STRING()	Produces a 16-bit signed binary string representing the number. If the value is out of range, an undef condition is raised. Example: HTTP.REQ.BODY(100).SKIP(12).GET_SIGNED16(0, BIG_ENDIAN).SUB(4).SIGNED16_STRING(BIG_ENDIAN)
.UNSIGNED16_STRING()	Produces a 16-bit unsigned binary string representing the number. If the value is out of range, an undef condition is raised. Example: HTTP.REQ.BODY(100).GET_UNSIGNED16(47, LITTLE_ENDIAN).ADD(7).UNSIGNED16_STRING(LITTLE_ENDIAN)

Function	Description
<code>.SIGNED32_STRING()</code>	Produces a 32-bit signed binary string representing the number. Example: <code>HTTP.REQ.BODY(100).AFTER_STR("delim").GET_SIGNED32(0, BIG_ENDIAN).SUB(1).SIGNED32_STRING(BIG_ENDIAN)</code>
<code>.UNSIGNED8_STRING</code>	Produces an 8-bit unsigned binary string representing the number. If the value is out of range, an undef condition is raised. Example: <code>HTTP.REQ.BODY(100).GET_UNSIGNED8(24).TYPECAST_UNSIGNED</code>
<code>.UNSIGNED16_STRING()</code>	Produces a 16-bit unsigned binary string representing the number. If the value is out of range, an undef condition is raised. Example: <code>HTTP.REQ.BODY(100).GET_UNSIGNED16(23, LITTLE_ENDIAN).TYPECAST_UNSIGNED_LONG_AT.ADD(10).UNSI</code>
<code>.UNSIGNED32_STRING()</code>	Produces a 32-bit unsigned binary string representing the number. If the value is out of range, an undef condition is raised. Example: <code>HTTP.REQ.BODY(100).AFTER_STR("delim2").GET_UNSIGNED32(0, BIG_ENDIAN).ADD(2).UNSIGNED32_STRING(BIG_ENDIAN)</code>

Virtual server based expressions

July 16, 2021

The `SYS.VSERVER("<vserver-name>")` expression prefix enables you to identify a virtual server. You can use the following functions with this prefix to retrieve information related to the specified virtual server:

- THROUGHPUT.** Returns the throughput of the virtual server in Mbps (Megabits per second). The value returned is an unsigned long number.
Usage: `SYS.VSERVER("vserver").THROUGHPUT`
- CONNECTIONS.** Returns the number of connections being managed by the virtual server. The value returned is an unsigned long number.
Usage: `SYS.VSERVER("vserver").CONNECTIONS`

- **STATE.** Returns the state of the virtual server. The value returned is UP, DOWN, or OUT_OF_SERVICE. One of these values can therefore be passed as an argument to the EQ() operator to perform a comparison that results in a Boolean TRUE or FALSE.

Usage: SYS.VSERVER("vserver").STATE

- **HEALTH.** Returns the percentage of services in an UP state for the specified virtual server. The value returned is an integer.

Usage: SYS.VSERVER("vserver").HEALTH

- **RESPTIME.** Returns the response time as an integer representing the number of microseconds. Response time is the average TTFB (Time To First Byte) from all the services bound to the virtual server.

Usage: SYS.VSERVER("vserver").RESPTIME

- **SURGECOUNT.** Returns the number of requests in the surge queue of the virtual server. The value returned is an integer.

Usage: SYS.VSERVER("vserver").SURGECOUNT

Example 1:

The following rewrite policy aborts rewrite processing if the number of connections at the load balancing virtual server LBvserver exceeds 10000:

```
add rewrite policy norewrite_pol sys.vserver("LBvserver").connections
.gt(10000)norewrite
```

Example 2:

The following rewrite action inserts a custom header, TP, whose value is the throughput at the virtual server LBvserver:

```
add rewrite action tp_header insert_http_header TP SYS.VSERVER("
LBvserver").THROUGHPUT
```

Example 3:

The following audit log message action writes the average TTFB of the services bound to a virtual server, to the newnslog log file:

```
add audit messageaction log_vserver_resptime_act INFORMATIONAL "\"NS
Response Time to Servers:\" + sys.vserver(\"ssl1b\").resptime + \"
millisec\""-logtoNewnslog YES
```

Advanced policy expressions: Parsing HTTP, TCP, and UDP data

April 14, 2023

You can configure advanced policy expressions to evaluate the payload in an HTTP request or response. The payload associated with an HTTP connection includes HTTP headers (standard or custom headers), body, and connection URL. Also, you can evaluate and process the payload in a TCP or a UDP packet. For HTTP connections, for example, you can check whether a particular HTTP header is present or if the URL includes a particular query parameter.

You can configure expressions to transform the URL encoding and apply HTML or XML “safe” coding for subsequent evaluation. You can also use XPATH and JSON prefixes to evaluate data in XML and JSON files, respectively.

You can also use text-based and numeric Advanced policy expressions to evaluate HTTP request and response data. For more information, see [Advanced policy expressions: Evaluating text](#) and [Advanced policy Expressions: Working with Dates, Times, and Numbers](#).

About evaluating HTTP and TCP payload

October 3, 2024

The payload of an HTTP request or response consists of HTTP protocol information such as headers, a URL, body content, and version and status information. When you configure an advanced policy expression to evaluate HTTP payload, you use an advanced policy expression prefix and, if necessary, an operator.

For example, use the following expression, which includes the `http.req.header("<header_name>")` prefix and the `exists` operator, if you want to determine whether an HTTP connection includes a custom header named “myHeader”:

```
http.req.header("myHeader").exists
```

You can also combine multiple advanced policy expressions with Boolean and arithmetic operators. For example, the following compound expression can be useful with various NetScaler features, such as Integrated Caching, Rewrite, and Responder. This expression first uses the `&&` Boolean operator to determine whether an HTTP connection includes the Content-Type header with a value of “text/html.” If that operation returns a value of FALSE, the expression determines whether the HTTP connection includes a “Transfer-Encoding” or “Content-Length” header.

```
(http.req.header("Content-Type").exists && http.req.header("Content-Type").eq("text/html")) || (http.req.header("Transfer-Encoding").
```



```
exists) || (http.req.header("Content-Length").exists)
```

The payload of a TCP or UDP packet is the data portion of the packet. You can configure advanced policy expressions to examine features of a TCP or UDP packet, including the following:

- Source and destination domains
- Source and destination ports
- The text in the payload
- Record types

The following expression prefixes extract text from the body of the payload:

- `HTTP.REQ.BODY(integer)`. Returns the body of an HTTP request as a multiline text object, up to the character position designated in the integer argument. If there are fewer characters in the body than is specified in the argument, the entire body is returned.

Note:

The HTTP.REQ based expressions don't work with the SSL_BRIDGE protocol type.

- `HTTP.RES.BODY(integer)`. Returns a portion of the HTTP response body. The length of the returned text is equal to the number in the integer argument. If there are fewer characters in the body than is specified in an integer, the entire body is returned.
- `CLIENT.TCP.PAYLOAD(integer)`. Returns TCP payload data as a string, starting with the first character in the payload and continuing for the number of characters in the integer argument.

Following is an example that evaluates to TRUE if a response body of 1024 bytes contains the string "https", and this string occurs after the string "start string" and before the string "end string":

```
http.res.body(1024).after_str("start_string").before_str("end_string").contains("https")
```

Note:

You can apply any text operation to the payload body. For information on operations that you can apply to text, see [Advanced policy expressions: Evaluating text](#).

Expressions for identifying the protocol in an incoming IP packet

May 2, 2023

The following table lists the expressions that you can use to identify the protocol in an incoming packet.

Expression	Description
CLIENT.IP.PROTOCOL	Identifies the protocol in IPv4 packets sent by clients.
CLIENT.IPV6.PROTOCOL	Identifies the protocol in IPv6 packets sent by clients.
SERVER.IP.PROTOCOL	Identifies the protocol in IPv4 packets sent by servers.
SERVER.IPV6.PROTOCOL	Identifies the protocol in IPv6 packets sent by servers.

Arguments to the PROTOCOL function

You can pass the Internet Assigned Numbers Authority (IANA) protocol number to the PROTOCOL function. For example, if you want to determine whether the protocol in an incoming packet is TCP, you can use CLIENT.IP.PROTOCOL.EQ(6), where 6 is the IANA-assigned protocol number for TCP. For some protocols, you can pass an enumeration value instead of the protocol number. For example, instead of CLIENT.IP.PROTOCOL.EQ(6), you can use CLIENT.IP.PROTOCOL.EQ(TCP). The following table lists the protocols for which you can use enumeration values, and the corresponding enumeration values for use with the PROTOCOL function.

Protocol	Enumeration value
Transmission Control Protocol (TCP)	TCP
User Datagram Protocol (UDP)	UDP
Internet Control Message Protocol (ICMP)	ICMP
IP Authentication Header (AH), for providing authentication services in IPv4 and IPv6	AH
Encapsulating Security Payload (ESP) protocol	ESP
General Routing Encapsulation (GRE)	GRE
IP-within-IP Encapsulation Protocol	IPIP
Internet Control Message Protocol for IPv6 (ICMPv6)	ICMPv6
Fragment Header for IPv6	FRAGMENT

Use case scenarios

The protocol expressions can be used in both request-based and response-based policies. You can use the expressions in various NetScaler features, such as load balancing, WAN optimization, content switching, rewrite, and listen policies. You can use the expressions with functions such as EQ() and NE(), to identify the protocol in a policy and perform an action.

Following are some use cases for the expressions:

- In Branch Repeater load balancing configurations, you can use the expressions in a listen policy for the wildcard virtual server. For example, you can configure the wildcard virtual server with the listen policy CLIENT.IP.PROTOCOL.EQ(TCP) so that the virtual server processes only TCP traffic and simply bridges all non-TCP traffic. Even though you can use an Access Control List instead of the listen policy, the listen policy provides better control over what traffic is processed.
- For content switching virtual servers of type ANY, you can configure content switching policies that switch requests on the basis of the protocol in incoming packets. For example, you can configure content switching policies to direct all TCP traffic to one load balancing virtual server and all non-TCP traffic to another load balancing virtual server.
- You can use the client-based expressions to configure persistence based on the protocol. For example, you can use CLIENT.IP.PROTOCOL to configure persistence on the basis of the protocols in incoming IPv4 packets.

Expressions for HTTP and cache-control headers

August 12, 2024

One common method of evaluating HTTP traffic is to examine the headers in a request or a response. A header can perform a number of functions, including the following:

- Provide cookies that contain data about the sender.
- Identify the type of data that is being transmitted.
- Identify the route that the data has traveled (the Via header).

Note:

If an operation is used to evaluate both header and text data, the header-based operation always overrides the text-based operation. For example, the AFTER_STR operation, when applied to a header, overrides text-based AFTER_STR operations for all instances of the current header type.

Prefixes for HTTP headers

The [Prefixes for HTTP headers](#) table for expression prefixes that extract HTTP headers.

Operations for HTTP headers

The [Operations for HTTP headers](#) table for operations that you can specify with the prefixes for HTTP headers.

Prefixes for cache-control headers

The following prefixes apply specifically to Cache-Control headers.

HTTP Header Prefix	Description
HTTP.REQ.CACHE_CONTROL	Returns a Cache-Control header in an HTTP request.
HTTP.RES.CACHE_CONTROL	Returns a Cache-Control header in an HTTP response.

Operations for cache-control headers

You can apply any of the operations for HTTP headers to Cache-Control headers.

In addition, the following operations identify specific types of Cache-Control headers. See RFC 2616 for information about these header types.

HTTP Header Operation	Description
<code>Cache-Control header.NAME(<integer>)</code>	Returns as a text value the name of the Cache-Control header that corresponds to the <i>nth</i> component in a name-value list, as specified by <code><integer></code> . The index of the name-value component is 0-based. If the <code><integer></code> that is specified by the integer argument is greater than the number of components in the list, a zero-length text object is returned. Following is an example: <code>http.req.cache_control.name(3).contains("some_text")</code>

HTTP Header Operation	Description
Cache-Control header.IS_INVALID	Returns a Boolean TRUE if the Cache-Control header is not present in the request or response. Following is an example: <code>http.req.cache_control.is_invalid</code>
Cache-Control header.IS_PRIVATE	Returns a Boolean TRUE if the Cache-Control header has the value Private. Following is an example: <code>http.req.cache_control.is_private</code>
Cache-Control header.IS_PUBLIC	Returns a Boolean TRUE if the Cache-Control header has the value Private. Following is an example: <code>http.req.cache_control.is_public</code>
Cache-Control header.IS_NO_STORE	Returns a Boolean TRUE if the Cache-Control header has the value No-Store. Following is an example: <code>http.req.cache_control.is_no_store</code>
Cache-Control header.IS_NO_CACHE	Returns a Boolean TRUE if the Cache-Control header has the value No-Cache. Following is an example: <code>http.req.cache_control.is_no_cache</code>
Cache-Control header.IS_MAX_AGE	Returns a Boolean TRUE if the Cache-Control header has the value Max-Age. Following is an example: <code>http.req.cache_control.is_max_age</code>
Cache-Control header.IS_MIN_FRESH	Returns a Boolean TRUE if the Cache-Control header has the value Min-Fresh. Following is an example: <code>http.req.cache_control.is_min_fresh</code>
Cache-Control header.IS_MAX_STALE	Returns a Boolean TRUE if the Cache-Control header has the value Max-Stale. Following is an example: <code>http.req.cache_control.is_max_stale</code>
Cache-Control header.IS_MUST_REVALIDATE	Returns a Boolean TRUE if the Cache-Control header has the value Must-Revalidate. Following is an example: <code>http.req.cache_control.is_must_revalidate</code>
Cache-Control header.IS_NO_TRANSFORM	Returns a Boolean TRUE if the Cache-Control header has the value No-Transform. Following is an example: <code>http.req.cache_control.is_no_transform</code>

HTTP Header Operation	Description
Cache-Control header.IS_ONLY_IF_CACHED	Returns a Boolean TRUE if the Cache-Control header has the value Only-If-Cached. Following is an example: <code>http.req.cache_control.is_only_if_cached</code>
Cache-Control header.IS_PROXY_REVALIDATE	Returns a Boolean TRUE if the Cache-Control header has the value Proxy-Revalidate. Following is an example: <code>http.req.cache_control.is_proxy_revalidate</code>
Cache-Control header.IS_S_MAXAGE	Returns a Boolean TRUE if the Cache-Control header has the value S-Maxage. Following is an example: <code>http.req.cache_control.is_s_maxage</code>
Cache-Control header.IS_UNKNOWN	Returns a Boolean TRUE if the Cache-Control header is of an unknown type. Following is an example: <code>http.req.cache_control.is_unknown</code>
Cache-Control header.MAX_AGE	Returns the value of the Cache-Control header Max-Age. If this header is absent or invalid, 0 is returned. Following is an example: <code>http.req.cache_control.max_age.le(3)</code>
Cache-Control header.MAX_STALE	Returns the value of the Cache-Control header Max-Stale. If this header is absent or invalid, 0 is returned. Following is an example: <code>http.req.cache_control.max_stale.le(3)</code>
Cache-Control header.MIN_FRESH	Returns the value of the Cache-Control header Min-Fresh. If this header is absent or invalid, 0 is returned. Following is an example: <code>http.req.cache_control.min_fresh.le(3)</code>
Cache-Control header.S_MAXAGE	Returns the value of the Cache-Control header S-Maxage. If this header is absent or invalid, 0 is returned. Following is an example: <code>http.req.cache_control.s_maxage.eq(2)</code>

Expressions for extracting segments of URLs

September 21, 2020

You can extract URLs and portions of URLs, such as the host name, or a segment of the URL path. For example, the following expression identifies HTTP requests for image files by extracting image file suffixes from the URL:

```
http.req.url.suffix.eq("jpeg") || http.req.url.suffix.eq("gif")
```

Most expressions for URLs operate on text and are described in [Expression Prefixes for Text in HTTP Requests and Responses](#). This section discusses the GET operation. The GET operation extracts text when used with the following prefixes:

- HTTP.REQ.URL.PATH
- VPN.BASEURL.PATH
- VPN.CLIENTLESS_BASEURL.PATH

The following table describes prefixes for HTTP URLs.

URL Prefix	Description
HTTP.REQ.URL.PATH.GET()	Returns a slash- ("/") separated list from the URL path. For example, consider the following URL: <http://www.mycompany.com/dir1/dir2/dir3/index.html?a=1>. The following expression returns dir1 from this URL: <http.req.url.path.get(1)>. The following expression returns dir2: http.req.url.path.get(2)
HTTP.REQ.URL.PATH.GET_REVERSE()	Returns a slash- ("/") separated list from the URL path, starting from the end of the path. For example, consider the following URL: <http://www.mycompany.com/dir1/dir2/dir3/index.html?a=1>. The following expression returns index.html from this URL: <http.req.url.path.get_reverse(0)>. The following expression returns dir3: http.req.url.path.get_reverse(1)

Expressions for HTTP status codes and numeric HTTP payload data other than dates

September 21, 2020

The following table describes prefixes for numeric values in HTTP data other than dates.

Prefix	Description
HTTP.REQ.CONTENT_LENGTH	Returns the length of an HTTP request as a number. Following is an example: <code>http.req.content_length < 500</code>
HTTP.RES.CONTENT_LENGTH	Returns the length of the HTTP response as a number. Following is an example: <code>http.res.content_length <= 1000</code>
HTTP.RES.STATUS	Returns the response status code
HTTP.RES.IS_REDIRECT	Returns a Boolean TRUE if the response code is associated with a redirect. Following are the redirect response codes: 300 (Multiple Choices), 301 (Moved Permanently), 302 (Found), 303 (See Other), 305 (Use Proxy), and 307 (Temporary Redirect). Note: Status code 304 is not considered a redirect HTTP response status code. Status code 306 is unused.

SIP expressions

May 2, 2023

The NetScaler Advanced policy expressions language contains a number of expressions that operate on Session Initiation Protocol (SIP) connections. These expressions are intended to be used in policies for any supported protocol that operates on a request/response basis. These expressions can be used in content switching, rate limiting, responder, and rewrite policies.

Certain limitations apply to SIP expressions used with responder policies. Only the DROP, NOOP or RESPONDWITH actions are allowed on a SIP load balancing virtual server. Responder policies can be bound to a load balancing virtual server, an override global bind point, a default global bind point, or a sip_udp policy label.

The header format used by the SIP protocol is similar to that used by the HTTP protocol, so many of the new expressions look and function much like their HTTP analogs. Each SIP header consists of a line that includes the SIP method, the URL, and the version, followed by a series of name-value pairs that look like HTTP headers.

Following is a sample SIP header that is referred to in the expressions tables beneath it:

```
1 INVITE sip:16@www.sip.com:5060;transport=udp SIP/2.0
2 Record-Route: <sip:200.200.100.22;lr=on>
3 Via: SIP/2.0/UDP 200.200.100.22;branch=z9hG4bK444b.c8e103d1.0;rport
   =5060;
4   received=10.102.84.18
5 Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;
6   received=10.102.84.160
7 From: "12" <sip:12@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53
   cc0185
8 To: "16" <sip:16@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185
9 Call-ID: 00127f54-ec850017-0e46f5b9-5ec149c2@10.102.84.180
10 Max-Forwards: 69CSeq: 101 INVITE
11 User-Agent: Cisco-CP7940G/8.0
12 Contact: <sip:12@10.102.84.180:5060;transport=udp>
13 Expires: 180
14 Accept: application/sdp
15 Allow: ACK,BYE,CANCEL,INVITE,NOTIFY,OPTIONS,REFER,REGISTER,UPDATE
16 Supported: replaces,join,norefersub
17 Content-Length: 277
18 Content-Type: application/sdp
19 Content-Disposition: session;handling=optiona
```

SIP reference tables

The following tables contain lists of expressions that operate on SIP headers. The first table contains expressions that apply to request headers. Most response-based expressions are nearly the same as the corresponding request-based expressions. To create a response expression from the corresponding request expression, you change the first two sections of the expression from SIP.REQ to SIP.RES, and make other obvious adjustments. The second table contains those response expressions that are unique to responses and have no request equivalents. You can use any element in the following tables as a complete expression on its own, or you can use various operators to combine these expression elements with others to form more complex expressions.

SIP request expressions

Expression	Description
SIP.REQ.METHOD	Operates on the method of the SIP request. The supported SIP request methods are ACK, BYE, CANCEL, INFO, INVITE, MESSAGE, NOTIFY, OPTIONS, PRACK, PUBLISH, REFER, REGISTER, SUBSCRIBE, and UPDATE. This expression is a derivative of the text class, so all operations that are applicable to text are applicable to this method. For example, for a SIP request of INVITE sip:16@10.102.84.181:5060;transport=udp SIP/2.0, this expression returns INVITE.
SIP.REQ.URL	Operates on the SIP request URL. This expression is a derivative of the text class, so all operations that are applicable to text are applicable to this method. For example, for a SIP request of INVITE sip:16@10.102.84.181:5060;transport=udp SIP/2.0, this expression re-
SIP.REQ.URL.PROTOCOL	Returns the URL protocol. For example, for a SIP URL of sip:16@www.sip.com:5060;transport=udp, this expression returns sip.
SIP.REQ.URL.HOSTNAME	Returns the hostname portion of the SIP URL. For example, for a SIP URL of sip:16@www.sip.com:5060;transport=udp, this expression returns www.sip.com:5060.
SIP.REQ.URL.HOSTNAME.PORT	Returns the port portion of the SIP URL hostname. If no port is specified, this expression returns the default SIP port, 5060. For example, for a SIP hostname of www.sip.com:5060, this expression returns 5060.

Expression	Description
SIP.REQ.URL.HOSTNAME.DOMAIN	Returns the domain name portion of the SIP URL hostname. If the host is an IP address, then this expression returns an incorrect result. For example, for a SIP hostname of <code>www.sip.com:5060</code> , this expression returns <code>sip.com</code> . For a SIP hostname of <code>192.168.43.15:5060</code> , this expression returns an error.
SIP.REQ.URL.HOSTNAME.SERVER	Returns the server portion of the host. For example, for a SIP hostname of <code>www.sip.com:5060</code> , this expression returns <code>www</code> .
SIP.REQ.URL.USERNAME	Returns the username that precedes the <code>@</code> character. For example, for a SIP URL of <code>sip:16@www.sip.com:5060;transport=udp</code> , this expression returns <code>16</code> .
SIP.REQ.VERSION	Returns the SIP version number in the request. For example, for a SIP request of <code>INVITE sip:16@10.102.84.181:5060;transport=udp SIP/2.0</code> , this expression returns <code>SIP/2.0</code> .
SIP.REQ.VERSION.MAJOR	Returns the major version number (the number to the left of the period). For example, for a SIP version number of <code>SIP/2.0</code> , this expression returns <code>2</code> .
SIP.REQ.VERSION.MINOR	Returns the minor version number (the number to the right of the period). For example, for a SIP version number of <code>SIP/2.0</code> , this expression returns <code>0</code> .
SIP.REQ.CONTENT_LENGTH	Returns the contents of the Content-Length header. This expression is a derivative of the <code>thesip_header_t</code> class, so all operations that are available for SIP headers can be used. For example, for a SIP Content-Length header of <code>Content-Length: 277</code> , this expression returns <code>277</code> .

Expression	Description
SIP.REQ.TO	Returns the contents of the To header. For example, for a SIP To header of To: “16” <sip:16@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185, this expression returns “16” <sip:16@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185.
SIP.REQ.TO.ADDRESS	Returns the SIP URI, which is found in the sip_url object. All operations that are available for SIP URIs can be used. For example, for a SIP To header of To: “16” <sip:16@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185, this expression returns sip:16@sip_example.com.
SIP.REQ.TO.DISPLAY_NAME	Returns the display name portion of the To header. For example, for a SIP To header of To: “16” <sip:16@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185, this expression returns 16.
SIP.REQ.TO.TAG	Returns the “tag” value from the “tag” name value pair in the TO header. For example, for a SIP To header of To: “16” <sip:16@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185, this expression returns 00127f54ec85a6d90cc14f45-53cc0185.
SIP.REQ.FROM	Returns the contents of the From header. For example, for a SIP From header of From: “12” <sip:12@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185, this expression returns sip:12@sip_example.com.
SIP.REQ.FROM.ADDRESS	Returns the SIP URI, which is found in the sip_url object. All operations that are available for SIP URIs can be used. For example, for a SIP From header of From: “12” <sip:12@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185, this expression returns sip:12@sip_example.com.

Expression	Description
SIP.REQ.FROM.DISPLAY_NAME	Returns the display name portion of the To header. For example, for a SIP From header of From: "12" <sip:12@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185, this expression returns 12.
SIP.REQ.FROM.TAG	Returns the "tag" value from the "tag" name/value pair in the TO header. For example, for a SIP From header of From: "12" <sip:12@sip_example.com>;tag=00127f54ec85a6d90cc14f45-53cc0185, this expression returns 00127f54ec85a6d90cc14f45-53cc0185.
SIP.REQ.VIA	Returns the complete Via header. If there are multiple Via headers in the request, returns the last Via header. For example, for the two Via headers in the sample SIP header, this expression returns Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;re
SIP.REQ.VIA.SENTBY_ADDRESS	Returns the address that sent the request. For example, for the Via header Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;re this expression returns 10.102.84.180.
SIP.REQ.VIA.SENTBY_PORT	Returns the port that sent the request. For example, for the Via header Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;re this expression returns 5060.
SIP.REQ.VIA.RPORT	Returns the value from the rport name/value pair. For example, for the Via header Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;re this expression returns 5060.
SIP.REQ.VIA.BRANCH	Returns the value from the branch name/value pair. For example, for the Via header Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;re this expression returns z9hG4bK03e76d0b.

Expression	Description
SIP.REQ.VIA.RECEIVED	Returns the value from the received name/value pair. For example, for the Via header Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;re this expression returns 10.102.84.160.
SIP.REQ.CALLID	Returns the contents of the Callid header. This expression is a derivative of the sip_header_t class, so all operations that are available for SIP headers can be used. For example, for a SIP Callid header of Call-ID: 00127f54-ec850017-0e46f5b9-5ec149c2@10.102.84.180, this expression returns 00127f54-ec850017-0e46f5b9-5ec149c2@10.102.84.180.
SIP.REQ.CSEQ	Returns the CSEQ number from the CSEQ, as an integer. For example, for a SIP CSEQ header of CSeq: 101 INVITE, this expression returns 101.
SIP.REQ.HEADER()	Returns the specified SIP header. For , substitute the name of the header that you want. For example, to return the SIP From header, you would type SIP.REQ.HEADER("From").
SIP.REQ.HEADER().INSTANCE()	Returns the specified instance of the specified SIP header. Multiple instances of the same SIP header can occur. Where you want a specific instance of such a SIP header (for example, a specific Via header), you can specify that header by typing a number as the . Header instances are matched from last (0) to first. In other words, SIP.REQ.HEADER("Via").INSTANCE(0) returns the last instance of the Via header, while SIP.REQ.HEADER("Via").INSTANCE(1) returns the last instance but one of the Via header, and so on. For example, if used on the example SIP header, SIP.REQ.HEADER("Via").INSTANCE(1) returns Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060.

Expression	Description
SIP.REQ.HEADER().VALUE()	Returns the contents of the specified instance of the specified SIP header. The usage is nearly the same as the previous expression. For example, if used on the SIP header example in the preceding table entry, SIP.REQ.HEADER("Via").VALUE(1) returns SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060.
SIP.REQ.HEADER().COUNT	Returns the number of instances of a particular header as an integer. For example, if used on the SIP header example above, SIP.REQ.HEADER("Via").COUNT returns 2.
SIP.REQ.HEADER().EXISTS	Returns a boolean value of true or false, depending upon whether the specified header exists or not. For example, if used on the SIP header example above, SIP.REQ.HEADER("Expires").EXISTS returns true, while SIP.REQ.HEADER("Caller-ID").EXISTS returns false.
SIP.REQ.HEADER().LIST	Returns the comma-separated parameter list in the specified header. For example, if used on the SIP header example above, SIP.REQ.HEADER("Allow").LIST returns ACK,BYE,CANCEL,INVITE,NOTIFY,OPTIONS,REFER,REGISTER,U You can append the string .GET() to select a specific list item. For example, to get the first item (ACK) from the above list, you would type SIP.REQ.HEADER("Allow").LIST.GET(0). To extract the second item (BYE), you would type SIP.REQ.HEADER("Allow").LIST.GET(1). Note: If the specified header contains a list of name/value pairs, the entire name/value pair is returned.

Expression	Description
<code>SIP.REQ.HEADER().TYPECAST_SIP_HEADER_T(" ")</code>	Typecasts to <code>.</code> . Any text can be typecasted to the <code>sip_header_t</code> class, after which all header-based operations can be used. After you perform this operation, you can apply all operations that can be used with <code>.</code> . For example, the expression <code>SIP.REQ.CONTENT_LENGTH.TYPECAST_SIP_HEADER_T</code> typecasts all instances of the Content-Length header. After you perform this operation, you can apply all header operations to all instances of the specified header.
<code>SIP.REQ.HEADER().CONTAINS()</code>	Returns boolean true if the specified text string is present in any instance of the specified header. Operates on all the instances of the specified header. Header instances are matched from last (0) to first.
<code>SIP.REQ.HEADER().EQUALS_ANY()</code>	Returns boolean true if any pattern associated with <code>if</code> matches any content in any instance of the specified header. Operates on all the instances of the specified header. Header instances are matched from last (0) to first.
<code>SIP.REQ.HEADER().CONTAINS_ANY()</code>	Returns Boolean true if any pattern associated with <code>if</code> matches any content in any instance of the specified header. Operates on all the instances of the specified header. Header instances are matched from last (0) to first.
<code>SIP.REQ.HEADER().CONTAINS_INDEX()</code>	Returns the index of the matching pattern associated with <code>if</code> if that pattern matches any content in any instance of the specified header. Operates on all the instances of the specified header. Header instances are matched from last (0) to first.
<code>SIP.REQ.HEADER().EQUALS_INDEX()</code>	Returns the index of the matching pattern associated with <code>if</code> if that pattern matches any instance of the specified header. Operates on all the instances of the specified header. Header instances are matched from last (0) to first.

Expression	Description
<code>SIP.REQ.HEADER().SUBSTR()</code>	If the specified string is present in any instance of the specified header, this expression returns that string. For example, for the SIP header <code>Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;received=10.102.84.180</code> , <code>SIP.REQ.HEADER("Via").SUBSTR("rport=5060")</code> returns <code>"rport=5060"</code> . <code>SIP.REQ.HEADER("Via").SUBSTR("rport=5061")</code> returns an empty string.
<code>SIP.REQ.HEADER().AFTER_STR()</code>	If the specified string is present in any instance of the specified header, this expression returns the string immediately after that string. For example, for the SIP header <code>Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;received=10.102.84.180</code> , the expression <code>SIP.REQ.HEADER("Via").AFTER_STR("rport=")</code> returns <code>5060</code> .
<code>SIP.REQ.HEADER().REGEX_MATCH()</code>	Returns boolean true if the specified regular expression (regex) matches any instance of the specified header. You must specify the regular expression in the following format: <code>regular expression</code> . The regular expression cannot be larger than 1499 characters in length. It must conform to the PCRE regular expression library. See http://www.pcre.org/pcre.txt for documentation on PCRE regular expression syntax. The <code>pcrepattern</code> man page also has useful information on specifying patterns by using PCRE regular expressions. The regular expression syntax supported in this expression has some differences from PCRE. Back references are not allowed. You should avoid recursive regular expressions; although some work, many do not. The dot (.) metacharacter matches newlines. Unicode is not supported. <code>SET_TEXT_MODE(IGNORECASE)</code> overrides the (?i) internal option specified in the regular expression.

Expression	Description
SIP.REQ.HEADER().REGEX_SELECT()	If the specified regex matches any text in any instance of the specified header, this expression returns the text. For example, for the SIP header Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;received=10.102.84.160 the expression SIP.REQ.HEADER("Via").REGEX_SELECT("received=[0-9]{1,3}.[0-9]{1,3}.[0-9]{1,3}.[0-9]{1,3}") returns received=10.102.84.160.
SIP.REQ.HEADER().AFTER_REGEX()	If the specified regex matches any text in any instance of the specified header, this expression returns the string immediately after that text. For example, for the SIP header Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;received=10.102.84.160 the expression SIP.REQ.HEADER("Via").AFTER_REGEX("received=") returns 10.102.84.160.
SIP.REQ.HEADER().BEFORE_REGEX()	If the specified regex matches any text in any instance of the specified header, this expression returns the string immediately before that text. For example, for the SIP header Via: SIP/2.0/UDP 10.102.84.180:5060;branch=z9hG4bK03e76d0b;rport=5060;received=10.102.84.160 the expression SIP.REQ.HEADER("Via").BEFORE_REGEX("received=") returns received=.
SIP.REQ.FULL_HEADER	Returns the entire SIP header, including the terminating CR/LF.
SIP.REQ.IS_VALID	Returns boolean true if the request format is valid.
SIP.REQ.BODY()	Returns the request body, up to the specified length. If the specified length is greater than the length of the request body, this expression returns the entire request body.
SIP.REQ.LB_VSERVER	Returns the name of the load balancing virtual server (LB vserver) that is serving the current request.

Expression	Description
SIP.REQ.CS_VSERVER	Returns the name of the content switching virtual server (CS vserver) that is serving the current request.

SIP response expressions

Expression	Description
SIP.RES.STATUS	Returns the SIP response status code. For example, if the first line of the response is SIP/2.0 100 Trying, this expression returns 100.
SIP.RES.STATUS_MSG	Returns the SIP response status message. For example, if the first line of the response is SIP/2.0 100 Trying, this expression returns Trying.
SIP.RES.IS_REDIRECT	Returns boolean true if the response code is a redirect.
SIP.RES.METHOD	Returns the response method extracted from the request method string in the CSeq header.

Operations for HTTP, HTML, and XML encoding and “safe” characters

May 2, 2023

The following operations work with the encoding of HTML data in a request or response and XML data in a POST body.

- **<text>.HTML_XML_SAFE:**

Transforms special characters into XML safe format, as in the following examples:

A left-pointing angle bracket (<) is converted to <

A right-pointing angle bracket (>) is converted to >

An ampersand (&) is converted to &

This operation safeguards against cross-site scripting attacks. Maximum length of the transformed text is 2048 bytes. This is a read-only operation.

After applying the transformation, additional operators that you specify in the expression are applied to the selected text. Following is an example:

```
http.req.url.query.html_xml_safe.contains("myQueryString")
```

- **<text>.HTTP_HEADER_SAFE:**

Converts all new line ('\n') characters in the input text to '%0A' to enable the input to be used safely in HTTP headers.

This operation safeguards against response-splitting attacks.

The maximum length of the transformed text is 2048 bytes. This is a read-only operation.

- **<text>.HTTP_URL_SAFE:**

Converts unsafe URL characters to '%xx' values, where "xx" is a hex-based representation of the input character. For example, the ampersand (&) is represented as %26 in URL-safe encoding. The maximum length of the transformed text is 2048 bytes. This is a read-only operation.

Following are URL safe characters. All others are unsafe:

- Alpha-numeric characters: a-z, A-Z, 0-9
- Asterix: "*"
- Ampersand: "&"
- At-sign: "@"
- Colon: ":"
- Comma: ","
- Dollar: "\$"
- Dot: "."
- Equals: "="
- Exclamation mark: "!"
- Hyphen: "-"
- Open and close parentheses: "(", ")"
- Percent: "%"
- Plus: "+"
- Semicolon: ";"
- Single quote: "'"
- Slash: "/"
- Question mark: "?"
- Tilde: "~"
- Underscore: "_"

- **<text>.MARK_SAFE:**

Marks the text as safe without applying any type of data transformation.

****SET_TEXT_MODE(URL ENCODED NOURL ENCODED)****

- Transforms all %HH encoding in the byte stream. This operation works with characters (not bytes). By default, a single byte represents a character in ASCII encoding. However, if you specify URL ENCODED mode, three bytes can represent a character.

In the following example, a PREFIX(3) operation selects the first 3 characters in a target.

```
http.req.url.hostname.prefix(3)
```

In the following example, the NetScaler can select up to 9 bytes from the target:

```
http.req.url.hostname.set_text_mode(urlencoded).prefix(3)
```

****SET_TEXT_MODE(PLUS AS SPACE NO PLUS AS SPACE)****

- Specifies how to treat the plus character (+). The PLUS AS SPACE option replaces a plus character with white space. For example, the text “hello+world” becomes “hello world.” The NO PLUS AS SPACE option leaves plus characters as they are.
-

****SET_TEXT_MODE(BACKSLASH ENCODED NO BACKSLASH ENCODED)****

- Specifies whether or not backslash decoding is performed on the text object represented by <text>.

If BACKSLASH ENCODED is specified, the SET_TEXT_MODE operator performs the following operations on the text object:

- All occurrences of “\XXX” will be replaced with the character “Y” (where XXX represents a number in the octal system and Y represents the ASCII equivalent of XXX). The valid range of octal values for this type of encoding is 0 to 377. For example, the encoded text “http\72//” and http\072//” will both be decoded to <http://>, where the colon (:) is the ASCII equivalent of the octal value “72”.
- All occurrences of “\xHH” will be replaced with the character “Y” (HH represents a number in the hexadecimal system and Y denotes the ASCII equivalent of HH). For example, the encoded text “http\x3a//” will be decoded to <http://>, where the colon (:) is the ASCII equivalent of the hexadecimal value “3a”.
- All occurrences of “\uWWXX” will be replaced with the character sequence “YZ” (Where WW and XX represent two distinct hexadecimal values and Y and Z represent their ASCII equivalents of WW and XX respectively. For example, the encoded text “http%u3a2f” and

“http%u003a//” will both be decoded to `<http://>`, where “3a” and “2f” are two hexadecimal values and the colon (:) and forward slash (“/”) represent their ASCII equivalents respectively.

- All occurrences of “\b”, “\n”, “\t”, “\f”, and “\r” are replaced with the corresponding ASCII characters.

If `NO_BACKSLASH_ENCODED` is specified, backslash decoding is not performed on the text object.

****`.SET_TEXT_MODE(BAD_ENCODE_RAISE_UNDEF NO_BAD_ENCODE_RAISE_UNDEF):**`**

- Performs the associated undefined action if either the `URLENCODED` or the `BACKSLASH_ENCODED` mode is set and bad encoding corresponding to the specified encoding mode is encountered in the text object represented by `<text>`.

If `NO_BAD_ENCODE_RAISE_UNDEF` is specified, the associated undefined action will not be performed when bad encoding is encountered in the text object represented by `<text>`.

Expressions for TCP, UDP, and VLAN data

May 2, 2023

TCP and UDP data take the form of a string or a number. For expression prefixes that return string values for TCP and UDP data, you can apply any text-based operations. For more information, see [Advanced policy expressions: Evaluating text](#).

For expression prefixes that return numeric value, such as a source port, you can apply an arithmetic operation. For more information, see [Basic operations on expression prefixes](#) and [Compound operations for numbers](#).

The following table describes prefixes that extract TCP and UDP data from client.

GET Operation	Description
<code>CLIENT.TCP.PAYLOAD(<integer>)</code>	Returns TCP payload data as a string, starting with the first character in the payload and continuing for the number of characters in the <code><integer></code> argument. You can apply any text-based operation to this prefix.

GET Operation	Description
CLIENT.TCP.SRCPORT	Returns the ID of the current packet's source port as a number.
CLIENT.TCP.DSTPORT	Returns the ID of the current packet's destination port as a number.
CLIENT.TCP.OPTIONS	Returns the TCP options set by the client. Examples of TCP options are Maximum Segment Size (MSS), Window Scale, Selective Acknowledgements (SACK), and Time Stamp Option. The COUNT, TYPE(), and TYPE_NAME() operators can be used with this prefix. For the TCP options set by the server, see the SERVER.TCP.OPTIONS prefix.
CLIENT.TCP.OPTIONS.COUNT	Returns the number of TCP options that the client has set.
CLIENT.TCP.OPTIONS.TYPE()	Returns the value of the TCP option whose type (or option kind) is specified as the argument. The value is returned as a string of bytes in big endian format (or network byte order). Parameters: type - Type value
CLIENT.TCP.OPTIONS.TYPE_NAME()	Returns the value of the TCP option whose enumeration constant is specified as the argument. The enumeration constants that you can pass as the argument are REPEATER, TIMESTAMP, SACK_PERMITTED, WINDOW, and MAXSEG. To specify the TCP option kind instead of these enumeration constants, use CLIENT.TCP.OPTIONS.TYPE(). For other TCP options, you must use CLIENT.TCP.OPTIONS.TYPE(). Parameters: m - TCP option enumeration constant
CLIENT.TCP.REPEATER_OPTION.EXISTS	Returns a Boolean TRUE if Repeater TCP options exist.
CLIENT.TCP.REPEATER_OPTION.IP	Returns the branch repeater's IPv4 address from the Repeater TCP options.
CLIENT.TCP.REPEATER_OPTION.MAC	Returns the branch repeater's MAC address from the Repeater TCP options.
CLIENT.UDP.DNS.DOMAIN	Returns the DNS domain name.

GET Operation	Description
CLIENT.UDP.DNS.DOMAIN.EQ(“”)	Returns a Boolean TRUE if the domain name matches the argument. The comparison is case insensitive. Following is an example: client.udp.dns.domain.eq(“www.mycompany.com”)
CLIENT.UDP.DNS.IS_AAAAREC	Returns a Boolean TRUE if the record type is AAAA. These types of records indicate an IPv6 address in forward lookups.
CLIENT.UDP.DNS.IS_ANYREC	Returns a Boolean TRUE if it is of any record type.
CLIENT.UDP.DNS.IS_AREC	Returns a Boolean TRUE if the record is type A. Type A records provide the host address.
CLIENT.UDP.DNS.IS_CNAMEREC	Returns a Boolean TRUE if the record is of type CNAME. In systems that use multiple names to identify a resource, there is one canonical name and a number of aliases. The CNAME provides the canonical name.
CLIENT.UDP.DNS.IS_MXREC	Returns a Boolean TRUE if the record is of type MX (mail exchanger). This DNS record describes a priority and a host name. The MX records for the same domain name specify the email servers in the domain and the priority for each server.
CLIENT.UDP.DNS.IS_NSREC	Returns a Boolean TRUE if the record is of type NS. This is a name server record that includes a host name with an associated A record. This enables locating the domain name that is associated with the NS record.
CLIENT.UDP.DNS.IS_PTRREC	Returns a Boolean TRUE if the record is of type PTR. This is a domain name pointer and is often used to associate a domain name with an IPv4 address.
CLIENT.UDP.DNS.IS_SOAREC	Returns a Boolean TRUE if the record is of type SOA. This is a start of authority record.
CLIENT.UDP.DNS.IS_SRVREC	Returns a Boolean TRUE if the record is of type SRV. This is a more general version of the MX record.
CLIENT.UDP.DSTPORT	Returns the numeric ID of the current packet’s UDP destination port.

GET Operation	Description
CLIENT.UDP.SRCPORT	Returns the numeric ID of the current packet's UDP source port.
CLIENT.UDP.LENGTH	Returns the numeric ID of the current packet's UDP length.
CLIENT.UDP.CHECKSUM	Returns the numeric ID of the current packet's UDP checksum.
CLIENT.UDP.PAYLOAD	Returns current packet's UDP payload.
CLIENT.UDP.RADIUS	Returns RADIUS data for the current packet.
CLIENT.UDP.RADIUS.ATTR_TYPE()	Returns the value for the attribute type specified as the argument.
CLIENT.UDP.RADIUS.USERNAME	Returns the RADIUS user name.
CLIENT.TCP.MSS	Returns the maximum segment size (MSS) for the current connection as a number.
CLIENT.VLAN.ID	Returns the numeric ID of the VLAN through which the current packet entered the NetScaler.

The following table describes prefixes that extract TCP and UDP data from server.

GET Operation	Description
SERVER.TCP.DSTPORT	Returns the numeric ID of the current packet's destination port.
SERVER.TCP.SRCPORT	Returns the numeric ID of the current packet's source port.
SERVER.TCP.OPTIONS	Returns the TCP options set by the server. Examples of TCP options are Maximum Segment Size (MSS), Window Scale, Selective Acknowledgements (SACK), and Time Stamp Option. The COUNT, TYPE(), and TYPE_NAME() operators can be used with this prefix. For the TCP options set by the client, see the CLIENT.TCP.OPTIONS prefix.
SERVER.TCP.OPTIONS.COUNT	Returns the number of TCP options that the server has set.

GET Operation	Description
SERVER.TCP.OPTIONS.TYPE()	Returns the value of the TCP option whose type (or option kind) is specified as the argument. The value is returned as a string of bytes in big endian format (or network byte order). Parameters: type - Type value
SERVER.TCP.OPTIONS.TYPE_NAME()	Returns the value of the TCP option whose enumeration constant is specified as the argument. The enumeration constants that you can pass as the argument are REPEATER, TIMESTAMP, SACK_PERMITTED, WINDOW, and MAXSEG. To specify the TCP option kind instead of these enumeration constants, use CLIENT.TCP.OPTIONS.TYPE(). For other TCP options, you must use CLIENT.TCP.OPTIONS.TYPE(). Parameters: m - TCP option enumeration constant
SERVER.VLAN	Operates on the VLAN through which the current packet entered the NetScaler.
SERVER.UDP.DSTPORT	Returns the numeric ID of the current packet's UDP destination port.
SERVER.UDP.SRCPORT	Returns the numeric ID of the current packet's UDP source port.
SERVER.UDP.LENGTH	Returns the numeric ID of the current packet's UDP length.
SERVER.UDP.CHECKSUM	Returns the numeric ID of the current packet's UDP checksum.
SERVER.UDP.PAYLOAD	Returns current packet's UDP payload.
SERVER.VLAN.ID	Returns the numeric ID of the VLAN through which the current packet entered the NetScaler.

Expressions for evaluating a DNS message and identifying its carrier protocol

October 20, 2023

You can evaluate DNS requests and responses by using expressions that begin with DNS.REQ and DNS.RES, respectively. You can also identify the transport layer protocol that is being used to send the DNS messages.

The following functions return the contents of a DNS query.

Function	Description
DNS.REQ.QUESTION.DOMAIN	Return the domain name (the value of the QNAME field) in the question section of the DNS query. The domain name is returned as a text string, which can be passed to EQ(), NE(), and any other functions that work with text.
DNS.REQ.QUESTION.TYPE	Return the query type (the value of the QTYPE field) in the DNS query. The field indicates the type of resource record (for example, A, NS, or CNAME) for which the name server is being queried. The returned value can be compared to one of the following values by using the EQ() and NE() functions: A, AAAA, NS, SRV, PTR, CNAME, SOA, MX, and ANY. Note: You can use only the EQ() and NE() functions with the TYPE function. Example: DNS.REQ.QUESTION.TYPE.EQ(MX)

The following functions return the contents of a DNS response.

Function	Description
DNS.RES.HEADER.RCODE	Return the response code (the value of the RCODE field) in the header section of the DNS response. You can use only the EQ() and NE() functions with the RCODE function. Following are the possible values: NOERROR, FORMERR, SERVFAIL, NXDOMAIN, NOTIMP, and REFUSED.
DNS.RES.QUESTION.DOMAIN	Return the domain name (the value of the QNAME field) in the question section of the DNS response. The domain name is returned as a text string, which can be passed to EQ(), NE(), and any other functions that work with text.

Function	Description
DNS.RES.QUESTION.TYPE	Return the query type (the value of the QTYPE field) in the question section of the DNS response. The field indicates the type of resource record (for example, A, NS, or CNAME) that is contained in the response. The returned value can be compared to one of the following values by using the EQ() and NE() functions: A, AAAA, NS, SRV, PTR, CNAME, SOA, MX, and ANY. You can use only the EQ() and NE() functions with the TYPE function. Example: DNS.RES.QUESTION.TYPE.EQ(SOA)

The following functions return the transport layer protocol name.

Function	Description
DNS.REQ.TRANSPORT	Return the name of the transport layer protocol that was used to send the DNS query. Possible values returned are TCP, DOT, and UDP. You can use only the EQ() and NE() functions with the TRANSPORT function. Example: DNS.REQ.TRANSPORT.EQ(TCP)
DNS.RES.TRANSPORT	Return the name of the transport layer protocol that was used for the DNS response. Possible values returned are TCP, DOT, and UDP. You can use only the EQ() and NE() functions with the TRANSPORT function. Example: DNS.RES.TRANSPORT.EQ(TCP)

The following functions return the name of the matched location when the query contains or does not contain the DNS ECS option.

Function	Description
DNS.REQ.OPT.ECS.IP.MATCHES_LOCATION	Return the name of the matched location that was used in the query with the DNS ECS option. Exam- ple:(DNS.REQ.OPT.ECS.IP.MATCHES_LOCATION(“CH.....”))
client.IP.SRC.MATCHES_LOCATION	Return the name of the matched location that was used in the query without the DNS ECS option. Example: (client.IP.SRC.MATCHES_LOCATION(“CH.....”))
DNS.REQ.OPT.ECS.IP.MATCHES_LOCATION OR client.IP.SRC.MATCHES_LOCATION	Common expression to be used in the policy when the DNS traffic may or may not have ECS option in the query. Example: “(((DNS.REQ.OPT.ECS.IP.MATCHES_LOCATION(“CH.....”).typecast_text_t) ALT (client.IP.SRC.MATCHES_LOCATION(“CH.....”).typecast_text_t)).eq(“true”))”

XPath and HTML, XML, or JSON expressions

September 21, 2020

The Advanced policy infrastructure supports expressions for evaluating and retrieving data from HTML, XML, and JavaScript Object Notation (JSON) files. This enables you to find specific nodes in an HTML, XML, or JSON document, determine if a node exists in the file, locate nodes in XML contexts (for example, nodes that have specific parents or a specific attribute with a given value), and return the contents of such nodes. Additionally, you can use XPath expressions in rewrite expressions.

The Advanced policy expression implementation for XPath comprises an Advanced policy expression prefix (such as “HTTP.REQ.BODY”) that designates HTML or XML text, and the XPATH operator that takes the XPath expression as its argument.

HTML files are a largely free-form collection of tags and text elements. You can use the XPATH_HTML operator, which takes an XPath expression as its argument, to process HTML files. JSON files are either a collection of name/value pairs or an ordered list of values. You can use the XPATH_JSON operator, which takes an XPath expression as its argument, to process JSON files.

- **<text>.XPATH(xpathex):**

Operate on an XML file and return a Boolean value.

For example, the following expression returns a Boolean TRUE if a node called “creator” exists under the node “Book” within the first 1000 bytes of the XML file.

```
HTTP.REQ.BODY(1000).XPATH(xp%boolean(//Book/creator)%)
```

Parameters:

xpathex - XPath Boolean expression

- **<text>.XPATH(xpathex):**

Operate on an XML file and return a value of data type “double.”

For example, the following expression converts the string “36”(a price value) to a value of data type “double” if the string is in the first 1000 bytes of the XML file:

```
HTTP.REQ.BODY(1000).XPATH(xp%number(/Book/price)%)
```

Parameters:

xpathex - XPath numeric expression

Example:

```
1    <Book>
2    <creator>
3        <Person>
4            <name>Milton</name>
5        </Person>
6    </creator>
7    <title>Paradise Lost</title>
8    </Book>
```

- **<text>.XPATH(xpathex):**

Operate on an XML file and return a node-set or a string. Node-sets are converted to corresponding strings by using the standard XPath string conversion routine.

For example, the following expression selects all the nodes that are enclosed by “/Book/creator” (a node-set) in the first 1000 bytes of the body:

```
HTTP.REQ.BODY(1000).XPATH(xp%/Book/creator%)
```

Parameters:

xpathex - XPath expression

- **<text>.XPATH_HTML(xpathex)**

Operate on an HTML file and return a text value.

For example, the following expression operates on an HTML file and returns the text enclosed in <title>\</title>\ tags if the title HTML element is found in the first 1000 bytes:

```
HTTP.REQ.BODY(1000).XPATH_HTML(xp%/html/head/title%)
```

Parameters:

xpathex - XPath text expression

- **<text>.XPATH_HTML_WITH_MARKUP(xpathex)**

Operate on an HTML file and return a string that contains the entire selected portion of the document, including markup such as including the enclosing element tags.

The following expression operates on the HTML file and selects all content within the <title> tag, including markup.

```
HTTP.REQ.BODY(1000).XPATH_HTML_WITH_MARKUP(xp%/html/head/title%)
```

The portion of the HTML body that is selected by the expression is marked for further processing.

Parameters:

xpathex - XPath expression

- **<text>.XPATH_JSON(xpathex)**

Operate on a JSON file and return a Boolean value.

For example, consider the following JSON file:

```
{ "Book": { "creator": { "person": { "name": "<name>" }, "title": "<title>" } }
```

The following expression operates on the JSON file and returns a Boolean TRUE if the JSON file contains a node named “creator,” whose parent node is “Book,” in the first 1000 bytes:

```
HTTP.REQ.BODY(1000).XPATH_JSON(xp%boolean(/Book/creator)%)
```

Parameters:

xpathex - XPath Boolean expression

- **<text>.XPATH_JSON(xpathex)**

Operate on a JSON file and return a value of data type “double.”

For example, consider the following JSON file:

```
{ "Book": { "creator": { "person": { "name": "<name>" }, "title": "<title>", "price": "36" } }
```

The following expression operates on the JSON file and converts the string “36” to a value of data type “double” if the string is present in the first 1000 bytes of the JSON file.

```
HTTP.REQ.BODY(1000).XPATH_JSON(xp%number(/Book/price)%)
```

Parameters:

xpathex - XPath numeric expression

- **<text>.XPATH_JSON(xpathex)**

Operate on a JSON file and return a node-set or a string. Node-sets are converted to corresponding strings by using the standard XPath string conversion routine.

For example, consider the following JSON file:

```
{ "Book": { "creator": { "person": { "name": '<name>' }, "title": '<title>' } }
```

The following expression selects all the nodes that are enclosed by “/Book”(a node-set) in the first 1000 bytes of the body of the JSON file and returns the corresponding string value, which is “<name><title>”:

```
HTTP.REQ.BODY(1000).XPATH_JSON(xpathex/Book%)
```

Parameters:

xpathex - XPath expression

- **<text>.XPATH_JSON_WITH_MARKUP(xpathex)**

Operate on an XML file and return a string that contains the entire portion of the document for the result node, including markup such as including the enclosing element tags.

For example, consider the following JSON file:

```
{ "Book": { "creator": { "person": { "name": '<name>' }, "title": '<title>' } }
```

The following expression operates on the JSON file and selects all the nodes that are enclosed by “/Book/creator” in the first 1000 bytes of the body, which is “creator:{ person:{ name:'<name>' } }.”

```
HTTP.REQ.BODY(1000).XPATH_JSON_WITH_MARKUP(xpathex/Book/creator%)
```

The portion of the JSON body that is selected by the expression is marked for further processing.

Parameters:

xpathex - XPath expression

- **<text>.XPATH_WITH_MARKUP(xpathex):**

Operate on an XML file and return a string that contains the entire portion of the document for the result node, including markup such as including the enclosing element tags.

For example, the following expression operates on an XML file and selects all the nodes enclosed by “/Book/creator” in the first 1000 bytes of the body.

```
HTTP.REQ.BODY(1000).XPATH_WITH_MARKUP(xpathex/Book/creator%)
```

The portion of the JSON body that is selected by the expression is marked for further processing.

Parameters:

xpathex - XPath expression

Encrypt and decrypt XML payloads

May 2, 2023

You can use the XML_ENCRYPT() and XML_DECRYPT() functions in Advanced policy expressions to encrypt and decrypt, respectively, XML data. These functions conform to the W3C XML Encryption standard defined at “<http://www.w3.org/TR/2001/PR-xmlsig-core-20010820/>.” XML_ENCRYPT() and XML_DECRYPT() support a subset of the XML Encryption specification. In the subset, data encryption uses a bulk cipher method (RC4, DES3, AES128, AES192, or AES256), and an RSA public key is used to encrypt the bulk cipher key.

Note: If you want to encrypt and decrypt text in a payload, you must use the ENCRYPT and DECRYPT functions. For more information about these functions, see [Encrypt and decrypt text](#).

The XML_ENCRYPT() and XML_DECRYPT() functions are not dependent on the encryption/decryption service that is used by the ENCRYPT and DECRYPT commands for text. The cipher method is specified explicitly as an argument to the XML_ENCRYPT() function. The XML_DECRYPT() function obtains the information about the specified cipher method from the `<xenc:EncryptedData>` element. Following are synopses of the XML encryption and decryption functions:

- `XML_ENCRYPT(<certKeyName>, <method> [, <flags>])**`. Returns an `<xenc:EncryptedData>` element that contains the encrypted input text and the encryption key, which is itself encrypted by using RSA.
- `XML_DECRYPT(<certKeyName>)`. Returns the decrypted text from the input `<xenc:EncryptedData>` element, which includes the cipher method and the RSA-encrypted key.

Note: The `<xenc:EncryptedData>` element is defined in the W3C XML Encryption specification.

Following are descriptions of the arguments:

- **certKeyName:** Selects an X.509 certificate with an RSA public key for XML_ENCRYPT() or an RSA private key for XML_DECRYPT(). The certificate key must have been previously created by an `add ssl certKey` command.
- **method:** Specifies which cipher method to use for encrypting the XML data. Possible values: RC4, DES3, AES128, AES192, AES256.
- **flags:** A bitmask specifying the following optional key information (`<ds:KeyInfo>`) to be included in the `<xenc:EncryptedData>` element that is generated by `XML_ENCRYPT()`:
 - **1** - Include a KeyName element with the certKeyName. The element is `<ds:KeyName>`.
 - **2** - Include a KeyValue element with the RSA public key from the certificate. The element is `<ds:KeyValue>`.

- **4** - Include an X509IssuerSerial element with the certificate serial number and issuer DN. The element is `<ds:X509IssuerSerial>`.
- **8** - Include an X509SubjectName element with the certificate subject DN. The element is `<ds:X509SubjectName>`.
- **16** - Include an X509Certificate element with the entire certificate. The element is `<ds:X509Certificate>`.

Use the XML_ENCRYPT() and XML_DECRYPT() functions in expressions

The XML encryption feature uses SSL certificate-key pairs to provide X.509 certificates (with RSA public keys) for key encryption and RSA private keys for key decryption. Therefore, before you use the XML_ENCRYPT() function in an expression, you must create an SSL certificate-key pair. The following command creates an SSL certificate-key pair, my-certkey, with the X.509 certificate, my-cert.pem, and the private key file, my-key.pem.

```
add ssl certKey my-certkey -cert my-cert.pem -key my-key.pem -passcrypt
kxPeMRyNity=
```

The following CLI commands create rewrite actions and policies for encrypting and decrypting XML content.

```
1 add rewrite action my-xml-encrypt-action replace "HTTP.RES.BODY(10000).
  XPATH_WITH_MARKUP(xp%/)" "HTTP.RES.BODY(10000).XPATH_WITH_MARKUP(xp
  %/).XML_ENCRYPT("my-certkey", AES256, 31)"
2
3 add rewrite action my-xml-decrypt-action replace "HTTP.REQ.BODY(10000).
  XPATH_WITH_MARKUP(xp%/xenc:EncryptedData%)" "HTTP.REQ.BODY(10000).
  XPATH_WITH_MARKUP(xp%/xenc:EncryptedData%).XML_DECRYPT("my-certkey"
  )"
4
5 add rewrite policy my-xml-encrypt-policy "HTTP.REQ.URL.CONTAINS("xml-
  encrypt")" my-xml-encrypt-action
6
7 add rewrite policy my-xml-decrypt-policy "HTTP.REQ.BODY(10000).XPATH(xp
  %boolean(//xenc:EncryptedData%)" my-xml-decrypt-action
8
9 bind rewrite global my-xml-encrypt-policy 30
10
11 bind rewrite global my-xml-decrypt-policy 30
```

In the above example, the rewrite action my-xml-encrypt-action encrypts the entire XML document (XPATH_WITH_MARKUP(xp%/)) in the request by using the AES-256 bulk encryption method and the RSA public key from my-certkey to encrypt the bulk encryption key. The action replaces the document with an `<xenc:EncryptedData>` element containing the encrypted data and an encrypted key. The flags represented by 31 include all of the optional `<ds:KeyInfo>` elements.

The action `my-xml-decrypt-action` decrypts the first `<xenc:EncryptedData>` element in the response (`XPATH_WITH_MARKUP(xp%//xenc:EncryptedData%)`). This requires the prior addition of the `xenc` XML namespace by use of the following CLI command:

```
add ns xmlnsnamespace xenc http://www.w3.org/2001/04/xmlenc#
```

The `my-xml-decrypt-action` action uses the RSA private key in `my-certkey` to decrypt the encrypted key and then uses the bulk encryption method specified in the element to decrypt the encrypted contents. Finally, the action replaces the encrypted data element with the decrypted content.

The rewrite policy `my-xml-encrypt-policy` applies `my-xml-encrypt-action` to requests for URLs containing `xml-encrypt`. The action encrypts the entire response from a service configured on the NetScaler appliance.

The rewrite policy `my-xml-decrypt-policy` applies `my-xml-decrypt-action` to requests that contain an `<xenc:EncryptedData>` element (`(XPATH(xp%//xenc:EncryptedData%)` returns a non-empty string). The action decrypts the encrypted data in requests that are bound for a service configured on the NetScaler appliance.

Advanced policy expressions: Parsing SSL certificates

April 12, 2024

There are advanced policy expressions to parse SSL certificates and SSL client hello messages.

Parse SSL certificates

You can use advanced policy expressions to evaluate X.509 Secure Sockets Layer (SSL) client certificates. A client certificate is an electronic document that can be used to authenticate a user's identity. A client certificate contains (at a minimum) version information, a serial number, a signature algorithm ID, an issuer name, a validity period, a subject (user) name, a public key, and signatures.

You can examine both SSL connections and data in client certificates. For example, you might want to send SSL requests that use low-strength ciphers to a particular load balancing virtual server farm. The following command is an example of a Content Switching policy that parses the cipher strength in a request and matches cipher strengths that are less than or equal to 40:

```
add cs policy p1 -rule "client.ssl.cipher_bits.le(40)"
```

As another example, you can configure a policy that determines whether a request contains a client certificate:

```
add cs policy p2 -rule "client.ssl.client_cert exists"
```

Or, you can configure a policy that examines particular information in a client certificate. For example, the following policy verifies that the certificate has one or more days before expiration:

```
add cs policy p2 -rule "client.ssl.client_cert exists && client.ssl.client_cert.days_to_expire.ge(1)"
```

An example for JA3 fingerprint usage:

```
add ssl policy ja3_pol -rule "CLIENT.SSL.JA3_FINGERPRINT.EQ(bb4c15a90e93a25ddc16274395bce4c6)-action reset"
```

Or, an example for JA3 fingerprint usage with patset:

```
1 add policy patset pat1
2 bind policy patset pat1 bb4c15a90e93a25ddc16274395bce4c6 -index 1
3 bind policy patset pat1 cd3c15a90e93a25ddc16274395bce6b4 -index 2
4 add ssl policy ssl_ja3_pol -rule CLIENT.SSL.JA3_FINGERPRINT.contains_any("\pat1\") -action reset
```

Note

For information on parsing dates and times in a certificate, see [Format of Dates and Times in an Expression](#) and [Expressions for SSL Certificate Dates](#).

Prefixes for text-based SSL and certificate data

The following table describes expression prefixes that identify text-based items in SSL transactions and client certificates.

Table 1. Prefixes That Return Text or Boolean Values for SSL and Client Certificate Data

Prefix	Description
CLIENT.SSL.CLIENT_CERT	Returns the SSL client certificate in the current SSL transaction.
CLIENT.SSL.CLIENT_CERT.TO_PEM	Returns the SSL client certificate in binary format.
CLIENT.SSL.CIPHER_EXPORTABLE	Returns a Boolean TRUE if the SSL cryptographic cipher is exportable.
CLIENT.SSL.CIPHER_NAME	Returns the name of the SSL Cipher if invoked from an SSL connection, and a NULL string if invoked from a non-SSL connection.
CLIENT.SSL.IS_SSL	Returns a Boolean TRUE if the current connection is SSL-based.

Prefix	Description
CLIENT.SSL.JA3_FINGERPRINT	Returns a Boolean TRUE if the configured JA3 fingerprint matches the JA3 fingerprint in the client hello message. Note: This expression is available in release 13.1 build 12.x and later.

Prefixes for numeric data in SSL certificates

The following table describes prefixes that evaluate numeric data other than dates in SSL certificates. These prefixes can be used with the operations that are described in [Basic Operations on Expression Prefixes](#) and [Compound Operations for Numbers](#).

Table 2. Prefixes That Evaluate Numeric Data Other Than Dates in SSL Certificates

Prefix	Description
CLIENT.SSL.CLIENT_CERT.DAYS_TO_EXPIRE	Returns the number of days that the certificate is valid, or returns -1 for expired certificates.
CLIENT.SSL.CLIENT_CERT.PK_SIZE	Returns the size of the public key used in the certificate.
CLIENT.SSL.CLIENT_CERT.VERSION	Returns the version number of the certificate. If the connection is not SSL-based, returns zero (0).
CLIENT.SSL.CIPHER_BITS	Returns the number of bits in the cryptographic key. Returns 0 if the connection is not SSL-based.
CLIENT.SSL.VERSION	Returns a number that represents the SSL protocol version, as follows: 0. The transaction is not SSL-based: 0x002. The transaction is SSLv2: 0x300. The transaction is SSLv3: 0x301. The transaction is TLSv1: 0x302. The transaction is TLS 1.1: 0x303. The transaction is TLS 1.2: 0x304. The transaction is TLS 1.3.

Note

For expressions related to expiration dates in a certificate, see [Expressions for SSL Certificate Dates](#).

Expressions for SSL certificates

You can parse SSL certificates by configuring expressions that use the following prefix:

CLIENT.SSL.CLIENT_CERT

This section discusses the expressions that you can configure for certificates, except expressions that examine certificate expiration. Time-based operations are described in [Advanced Policy Expressions: Working with Dates, Times, and Numbers](#).

The following table describes the operations that you can specify for the CLIENT.SSL.CLIENT_CERT prefix.

Table 3. Operations That Can Be Specified with the CLIENT.SSL.CLIENT_CERT Prefix

SSL Certificate Operation	Description
<code><certificate>.EXISTS</code>	Returns a Boolean TRUE if the client has an SSL certificate.
<code><certificate>.ISSUER</code>	Returns the Distinguished Name (DN) of the Issuer in the certificate as a name-value list. An equals sign (“=”) is the delimiter for the name and the value, and the slash (“/”) is the delimiter that separates the name-value pairs. Following is an example of the returned DN: <code>/C=US/O=myCompany/OU=www.mycompany.com/CN=www.mycompany.com/emailAddress=myuserid@mycompany.com</code>
<code><certificate>.ISSUER.IGNORE_EMPTY_ELEMENTS</code>	Returns the Issuer and ignores the empty elements in a name-value list. For example, consider the following: <code>Cert-Issuer: /c=in/st=kar//l=bangalore //o=mycompany/ou=sales/ /emailAddress=myuserid@mycompany.com</code> . The following Rewrite action returns a count of 6 based on the preceding Issuer definition: <code>sh rewrite action insert_ssl_header Name: insert_ssl Operation: insert_http_header Target:Cert-Issuer Value:CLIENT.SSL.CLIENT_CERT.ISSUER.COUNT</code> . However, if you change the value to the following, the returned count is 9: <code>CLIENT.SSL.CLIENT_CERT.ISSUER.IGNORE_EMPTY_ELEMENTS.COUNT</code>

SSL Certificate Operation	Description
<code><certificate>. SERIALNUMBER</code>	Returns the serial number of the certificate as an upper case hexadecimal string with no leading zeroes. For example, if the serial number of the certificate is 04daa1e44bd2e7769638a0058b4964bd, the following expression helps match the serial number <code>CLIENT.SSL.CLIENT_CERT.SERIALNUMBER.SET_TEXT_MODE(IGNORECASE).CONTAINS("\4daa1e44bd2e7769638a0058b4964bd\")</code>
<ul style="list-style-type: none"> <code><certificate>.extensions.has_object</code> 	Returns the Boolean value TRUE if the client certificate has the extension with a matching OID. For example, if the client certificate has the extension with the OID 2.16.756.5.4.2.1.2.13.2.7 then the expression <code>client.ssl.client_cert.extensions.has_object(2.16.756.5.4.2.1.2.13.2.7)</code> , returns TRUE.
<ul style="list-style-type: none"> <code><certificate>.extensions.object(OID).has_value(value)</code> 	Returns the Boolean value TRUE if the client certificate has the extension with a matching OID and value. For example, if the client certificate has the extension with the OID 2.16.756.5.4.2.1.2.13.2.7 and a value XB then the expression <code>client.ssl.client_cert.extensions.object("2.16.756.5.4.2.1.2.13.2.7").has_value("XB")</code> returns TRUE.
<code><certificate>.extensions.count</code>	Number of extensions received in the client certificate. For example, if the number of extensions in the client certificate is 16 then the expression <code>client.ssl.client_cert.extensions.count.eq(16)</code> , returns TRUE.

Notes:

If an extension with a specified OID has a value of

Note:

You can use a well-known short name instead of OID for standard extensions. For example, the Netscape comment extension has the OID 2.16.840.1.113730.1.13 and the short name `nsComment`. You can use `nsComment` in the extension instead of 2.16.840.1.113730.1.13

- 1 - `client.ssl.client_cert.extensions.has_object(nscomment).`
- 2 - `client.ssl.client_cert.extensions.object("nscomment").`

```
has_value("OpenSSL Generated Client Certificate").
```

Parse SSL client hello

You can parse the SSL client hello message by configuring expressions that use the following prefix:

Prefix	Description
CLIENT.SSL.CLIENT_HELLO.CIPHERS.HAS_HEXCODE	Matches the hex code provided in the expression with the hex codes of cipher suites received in the client hello message.
CLIENT.SSL.CLIENT_HELLO.CLIENT_VERSION	Version received in the client hello message header.
CLIENT.SSL.CLIENT_HELLO.IS_RENEGOTIATE	Returns true if a client or server initiates session renegotiation.
CLIENT.SSL.CLIENT_HELLO.IS_REUSE	Returns true if the appliance reuses the SSL session based on the non-zero session-ID received in the client-hello message.
CLIENT.SSL.CLIENT_HELLO.IS_SCSV	Returns true if Signaling Cipher Suite Value (SCSV) capability is advertised in the client hello message. The hex code for fallback SCSV is 0x5600.
CLIENT.SSL.CLIENT_HELLO.IS_SESSION_TICKET	Returns true if session ticket extension with non-zero length is advertised in the client-hello message.
CLIENT.SSL.CLIENT_HELLO.LENGTH	Length received in the client hello message header.
CLIENT.SSL.CLIENT_HELLO.SNI	Returns the server name received in the Server Name extension of the client hello message.
CLIENT.SSL.CLIENT_HELLO.ALPN.HAS_NEXTPROT	Returns true if the application protocol in the ALPN extension received in the client hello message matches the protocol provided in the expression.

These expressions can be used at the CLIENTHELLO_REQ bind point. For more information, see [SSL policy binding](#).

Advanced policy expressions: IP and MAC addresses, throughput, VLAN IDs

May 2, 2023

You can use Advanced policy expression prefixes that return IPv4 and IPv6 addresses, MAC addresses, IP subnets, useful client and server data such as the throughput rates at the interface ports (Rx, Tx, and RxTx), and the IDs of the VLANs through which packets are received. You can then use various operators to evaluate the data that is returned by these expression prefixes.

Expressions for IP addresses and IP subnets

You can use Advanced policy expressions to evaluate addresses and subnets that are in Internet Protocol version 4 (IPv4) or Internet Protocol version 6 (IPv6) format. Expression prefixes for IPv6 addresses and subnets include IPv6 in the prefix. Expression prefixes for IPv4 addresses and subnets include IP in the prefix. Following is an example of an expression that identifies whether a request has originated from a particular IPv4 subnet.

```
1 client.ip.src.in_subnet(147.1.0.0/16)
```

Following are two examples of Rewrite policies that examine the subnet from which the packet is received and perform a rewrite action on the Host header. With these two policies configured, the rewrite action that is performed depends on the subnet in the request. These two policies evaluate IP addresses that are in the IPv4 address format.

```
1 - add rewrite action URL1-rewrite-action replace "http.req.header(\"
  Host\")" "\"www.mycompany1.com\""
2 - add rewrite policy URL1-rewrite-policy "http.req.header(\"Host\").
  contains(\"www.test1.com\") && client.ip.src.in_subnet(147.1.0.0/16)
  " URL1-rewrite-action
3 - add rewrite action URL2-rewrite-action replace "http.req.header(\"
  Host\")" "\"www.mycompany2.com\""
4 - add rewrite policy URL2-rewrite-policy "http.req.header(\"Host\").
  contains(\"www.test2.com\") && client.ip.src.in_subnet
  (10.202.0.0/16)" URL2-rewrite-action
```

Note

The preceding examples are commands that you type at the NetScaler command-line interface (CLI) and, therefore, each quotation mark must be preceded by a backslash (\). For more information, see [Configuring advanced policy expressions in a policy.](#)

Prefixes for IPV4 addresses and IP subnets

The following table describes prefixes that return IPv4 addresses and subnets, and segments of IPv4 addresses. You can use numeric operators and operators that are specific to IPv4 addresses with these prefixes. For more information about numeric operations, see “[Basic Operations on Expression Prefixes](#)” and “[Compound Operations for Numbers](#).”

Table 1. Prefixes That Evaluate IP and MAC Addresses

Prefix	Description
CLIENT.IP.SRC	Returns the source IP of the current packet as an IP address or as a number.
CLIENT.IP.DST	Returns the destination IP of the current packet as an IP address or as a number.
SERVER.IP.SRC	Returns the source IP of the current packet as an IP address or as a number.
SERVER.IP.DST	Returns the destination IP of the current packet as an IP address or as a number.

Operations for IPV4 Addresses

The [Prefix for IPV4 operations](#) table describes the operators that can be used with prefixes that return an IPv4 address.

About IPv6 expressions

The IPv6 address format allows more flexibility than the older IPv4 format. IPv6 addresses are in the hexadecimal format (RFC 2373). In the following examples, Example 1 is an IPv6 address, Example 2 is a URL that includes the IPv6 address, and Example 3 includes the IPv6 address and a port number.

Example 1:

```
1 9901:0ab1:22a2:88a3:3333:4a4b:5555:6666
```

Example 2:

```
1 http://[9901:0ab1:22a2:88a3:3333:4a4b:5555:6666]/
```

Example 3:

```
1 https://[9901:0ab1:22a2:88a3:3333:4a4b:5555:6666]:8080/
```

In Example 3, the brackets separate the IP address from the port number (8080).

Note that you can only use the '+' operator to combine IPv6 expressions with other expressions. The output is a concatenation of the string values that are returned from the individual expressions. You cannot use any other arithmetic operator with an IPv6 expression. The following syntax is an example:

```
1 client.ipv6.src + server.ip.dst
```

For example, if the client source IPv6 address is `ABCD:1234::ABCD`, and the server destination IPv4 address is `10.100.10.100`, the preceding expression returns `"ABCD:1234::ABCD10.100.10.100"`.

Note that when the NetScaler appliance receives an IPv6 packet, it assigns a temporary IPv4 address from an unused IPv4 address range and changes the source address of the packet to this temporary address. At response time, the outgoing packet's source address is replaced with the original IPv6 address.

Note

You can combine an IPv6 expression with any other expression except an expression that produces a Boolean result.

Expression prefixes for IPv6 addresses

The IPv6 addresses that are returned by the expression prefixes in the following table can be treated as text data. For example, the prefix `client.ipv6.dst` returns the destination IPv6 address as a string that can be evaluated as text.

The following table describes expression prefixes that return an IPv6 address.

Table 3. IPv6 Expression Prefixes That Return Text

Prefix	Description
CLIENT.IPV6	Operates on the IPv6 address in with the current packet.
CLIENT.IPV6.DST	Returns the IPv6 address in the destination field of the IP header.
CLIENT.IPV6.SRC	Returns the IPv6 address in the source field of the IP header. Following are examples: <code>client.ipv6.src.in_subnet</code> (2007::2008/64) <code>client.ipv6.src.get1.le(2008)</code>

Prefix	Description
SERVER.IPV6	Operates on the IPv6 address in with the current packet.
SERVER.IPV6.DST	Returns the IPv6 address in the destination field of the IP header.
SERVER.IPV6.SRC	Returns the IPv6 address in the source field of the IP header. Following are examples: <code>server.ipv6.src.in_subnet</code> (2007::2008/64) <code>server.ipv6.src.get1.le(2008)</code>

Operations for IPv6 prefixes

The following table describes the operators that can be used with prefixes that return an IPv6 address:

Table 4. Operations That Evaluate IPv6 Addresses

IPv6 Operation	Description
<code><ipv6>.EQ(<IPv6_address></code>	Returns a Boolean TRUE if the IP address value is same as the <code><IPv6_address></code> argument. Following is an example: <code>client.ipv6.dst.eq(ABCD:1234::ABCD)</code>

IPv6 Operation	Description
<ipv6>.GET1. . . .GET8	Returns a segment of an IPv6 address as a number. The following example expressions retrieve segments from the ipv6 address 1000:1001:CD10:0000:0000:89AB:4567:CDEF: <code>client.ipv6.dst.get5</code> extracts 0000, which is the fifth set of bits in the address. <code>client.ipv6.dst.get6</code> extracts 89 AB. <code>client.ipv6.dst.get7</code> extracts 4567. You can perform numeric operations on these segments. Note that you cannot perform numeric operations when you retrieve an entire IPv6 address. This is because expressions that return an entire IPv6 address, such as <code>CLIENT.IPV6.SRC</code> , return the address in text format.
<ipv6>.IN_SUBNET(<subnet>)	Returns a Boolean TRUE if the IPv6 address value is in the subnet specified by the <subnet> argument. Following is an example: <code>client.ipv6.dst.eq(1000:1001:CD10:0000:0000:89AB:4567:CDEF/60)</code>
<ipv6>.IS_IPV4	Returns a Boolean TRUE if this is an IPv4 client, and returns a Boolean FALSE if it is not.
<ipv6>.SUBNET(<n>)	Returns the IPv6 address after applying the subnet mask specified as the argument. The subnet mask can take values between 0 and 128. For example: <code>CLIENT.IPV6.SRC.SUBNET(24)</code>

Expressions for MAC addresses

A MAC address consists of colon-delimited hexadecimal values in the format `##:##:##:##:##:##`, where each “#” represents either a number from 0 through 9 or a letter from A through F. DAdvanced policy expression prefixes and operators are available for evaluating source and destination MAC addresses.

Prefixes for MAC addresses

The following table describes prefixes that return MAC addresses.

Table 5. Prefixes That Evaluate MAC Addresses

Prefix	Description
<code>client.ether.dstmac</code>	Returns the MAC address in the destination field of the Ethernet header.
<code>client.ether.srcmac</code>	Returns the MAC address in the source field of the Ethernet header.

Operations for MAC addresses

The following table describes the operators that can be used with prefixes that return a MAC address.

Table 6. Operations on MAC Addresses

Prefix	Description
<code><mac address>.EQ(<address>)</code>	Returns a Boolean TRUE if the MAC address value is same as the <code><address></code> argument.
<code><mac address>.GET1. . .GET4</code>	Returns a numeric value extracted from the segment of the MAC address that is specified in the GET operation. For example, if the MAC address is 12:34:56:78:9a:bc, the following returns 34: <code>client.ether.dstmac.get2</code>

Expressions for numeric client and server data

The following table describes prefixes for working with numeric client and server data, including throughput, port numbers, and VLAN IDs.

Table 7. Prefixes that evaluate numeric client and server data

Prefix	Description
client.interface.rxthroughput	Returns an integer representing the raw received traffic throughput in kilobytes per second (KBps) for the previous seven seconds.
client.interface.txthroughput	Returns an integer representing the raw transmitted traffic throughput in KBps for the previous seven seconds.
client.interface.rxtxthroughput	Returns an integer representing the raw received and transmitted traffic throughput in KBps for the previous seven seconds.
server.interface.rxthroughput	Returns an integer representing the raw received traffic throughput in KBps for the previous seven seconds.
server.interface.txthroughput	Returns an integer representing the raw transmitted traffic throughput in KBps for the previous seven seconds.
server.interface.rxtxthroughput	Returns an integer representing the raw received and transmitted traffic throughput in KBps for the previous seven seconds.
server.vlan.id	Returns a numeric ID of the VLAN through which the current packet entered the NetScaler.
client.vlan.id	Returns a numeric ID for the VLAN through which the current packet entered the NetScaler.

Advanced policy expressions: Stream analytics functions

December 22, 2023

Stream Analytics expressions begin with the `ANALYTICS.STREAM(<identifier_name>)` prefix. The following list describes the functions that can be used with this prefix.

- **COLLECT_STATS**

Collect statistical data from the requests that are evaluated against the policy and create a record for each request.

- **REQUESTS**

Return the number of requests that exist for the specified record grouping. The value returned is of type unsigned long.

- **BANDWIDTH**

Return the bandwidth statistic for the specified record grouping. The value returned is of type unsigned long.

- **RESPTIME**

Return the response time statistic for the specified record grouping. The value returned is of type unsigned long.

- **CONNECTIONS**

Return the number of concurrent connections that exist for the specified record grouping. The value returned is of type unsigned long.

- **IS_TOP(n)**

Return a Boolean TRUE if the statistical value for the specified record grouping is one among the top n groups. Otherwise, return a Boolean FALSE.

- **CHECK_LIMIT**

Return a Boolean TRUE if the statistic for the specified record grouping has hit the preconfigured limit. Otherwise, return a Boolean FALSE.

Advanced policy expressions: DataStream

May 2, 2023

The policy infrastructure on the NetScaler appliance includes expressions that you can use to evaluate and process database server traffic when the appliance is deployed between a farm of application servers and their associated database servers.

This topic includes the following sections:

- Expressions for the MySQL Protocol
- Expressions for Evaluating Microsoft SQL Server Connections

Expressions for the MySQL protocol

The following expressions evaluate traffic associated with MySQL database servers. You can use the request-based expressions (expressions that begin with `MYSQL.CLIENT` and `MYSQL.REQ`) in policies to

make request switching decisions at the content switching virtual server bind point and the response-based expressions (expressions that begin with `MYSQL.RES`) to evaluate server responses to user-configured health monitors.

- **MYSQL.CLIENT.** Operates on the client properties of a MySQL connection.
- **MYSQL.CLIENT.CAPABILITIES.** Returns the set of flags that the client has set in the capabilities field of the handshake initialization packet during authentication. Examples of the flags that are set are `CLIENT_FOUND_ROWS`, `CLIENT_COMPRESS`, and `CLIENT_SSL`.
- **MYSQL.CLIENT.CHAR_SET.** Returns the enumeration constant assigned to the character set that the client uses. The `EQ(<m>)` and `NE(<m>)` operators, which return Boolean values to indicate the result of a comparison, are used with this prefix. Following are the character set enumeration constants:
 - `LATIN2_CZECH_CS`
 - `DEC8_SWEDISH_CI`
 - `CP850_GENERAL_CI`
 - `GREEK_GENERAL_CI`
 - `LATIN1_GERMAN1_CI`
 - `HP8_ENGLISH_CI`
 - `KOI8R_GENERAL_CI`
 - `LATIN1_SWEDISH_CI`
 - `LATIN2_GENERAL_CI`
 - `SWE7_SWEDISH_CI`
 - `ASCII_GENERAL_CI`
 - `CP1251_BULGARIAN_CI`
 - `LATIN1_DANISH_CI`
 - `HEBREW_GENERAL_CI`
 - `LATIN7_ESTONIAN_CS`
 - `LATIN2_HUNGARIAN_CI`
 - `KOI8U_GENERAL_CI`
 - `CP1251_UKRAINIAN_CI`
 - `CP1250_GENERAL_CI`
 - `LATIN2_CROATIAN_CI`
 - `CP1257_LITHUANIAN_CI`
 - `LATIN5_TURKISH_CI`
 - `LATIN1_GERMAN2_CI`
 - `ARMSCII8_GENERAL_CI`
 - `UTF8_GENERAL_CI`
 - `CP1250_CZECH_CS`
 - `CP866_GENERAL_CI`

- KEYBCS2_GENERAL_CI
- MACCE_GENERAL_CI
- MACROMAN_GENERAL_CI
- CP852_GENERAL_CI
- LATIN7_GENERAL_CI
- LATIN7_GENERAL_CS
- MACCE_BIN
- CP1250_CROATIAN_CI
- LATIN1_BIN
- LATIN1_GENERAL_CI
- LATIN1_GENERAL_CS
- CP1251_BIN
- CP1251_GENERAL_CI
- CP1251_GENERAL_CS
- MACROMAN_BIN
- CP1256_GENERAL_CI
- CP1257_BIN
- CP1257_GENERAL_CI
- ARMSCII8_BIN
- ASCII_BIN
- CP1250_BIN
- CP1256_BIN
- CP866_BIN
- DEC8_BIN
- GREEK_BIN
- HEBREW_BIN
- HP8_BIN
- KEYBCS2_BIN
- KOI8R_BIN
- KOI8U_BIN
- LATIN2_BIN
- LATIN5_BIN
- LATIN7_BIN
- CP850_BIN
- CP852_BIN
- SWE7_BIN
- UTF8_BIN
- GEOSTD8_GENERAL_CI
- GEOSTD8_BIN

- LATIN1_SPANISH_CI
 - UTF8_UNICODE_CI
 - UTF8_ICELANDIC_CI
 - UTF8_LATVIAN_CI
 - UTF8_ROMANIAN_CI
 - UTF8_SLOVENIAN_CI
 - UTF8_POLISH_CI
 - UTF8_ESTONIAN_CI
 - UTF8_SPANISH_CI
 - UTF8_SWEDISH_CI
 - UTF8_TURKISH_CI
 - UTF8_CZECH_CI
 - UTF8_DANISH_CI
 - UTF8_LITHUANIAN_CI
 - UTF8_SLOVAK_CI
 - UTF8_SPANISH2_CI
 - UTF8_ROMAN_CI
 - UTF8_PERSIAN_CI
 - UTF8_ESPERANTO_CI
 - UTF8_HUNGARIAN_CI
 - INVALID_CHARSET
- **MYSQL.CLIENT.DATABASE.** Returns the name of the database specified in the authentication packet that the client sends to the database server. This is the databasename attribute.
 - **MYSQL.CLIENT.USER.** Returns the user name (in the authentication packet) with which the client is attempting to connect to the database. This is the user attribute.
 - **MYSQL.REQ.** Operates on a MySQL request.
 - **MYSQL.REQ.COMMAND.** Identifies the enumeration constant assigned to the type of command in the request. The EQ(<m>) and NE(<m>) operators, which return Boolean values to indicate the result of a comparison, are used with this prefix. Following are the enumeration constant values:
 - SLEEP
 - QUIT
 - INIT_DB
 - QUERY
 - FIELD_LIST
 - CREATE_DB
 - DROP_DB
 - REFRESH

- SHUTDOWN
 - STATISTICS
 - PROCESS_INFO
 - CONNECT
 - PROCESS_KILL
 - DEBUG
 - PING
 - TIME
 - DELAYED_INSERT
 - CHANGE_USER
 - BINLOG_DUMP
 - TABLE_DUMP
 - CONNECT_OUT
 - REGISTER_SLAVE
 - STMT_PREPARE
 - STMT_EXECUTE
 - STMT_SEND_LONG_DATA
 - STMT_CLOSE
 - STMT_RESET
 - SET_OPTION
 - STMT_FETCH
- **MYSQL.REQ.QUERY.** Identifies the query in the MySQL request.
 - **MYSQL.REQ.QUERY.COMMAND.** Returns the first keyword in the MySQL query.
 - **MYSQL.REQ.QUERY.SIZE.** Returns the size of the request query in integer format. The SIZE method is similar to the CONTENT_LENGTH method that returns the length of an HTTP request or response.
 - **MYSQL.REQ.QUERY.TEXT.** Returns a string covering the entire query.
 - **MYSQL.REQ.QUERY.TEXT(<n>).** Returns the first n bytes of the MySQL query as a string. This is similar to HTTP.BODY(<n>).
- Parameters:**
- n - Number of bytes to be returned
- **MYSQL.RES.** Operates on a MySQL response.
 - **MYSQL.RES.ATLEAST_ROWS_COUNT(<i>).** Checks whether the response has at least i number of rows and returns a Boolean TRUE or FALSE to indicate the result.
- Parameters:**
- i - Number of rows

- **MYSQL.RES.ERROR.** Identifies the MySQL error object. The error object includes the error number and the error message.
- **MYSQL.RES.ERROR.MESSAGE.** Returns the error message that is retrieved from the server's error response.
- **MYSQL.RES.ERROR.NUM.** Returns the error number that is retrieved from the server's error response.
- **MYSQL.RES.ERROR.SQLSTATE.** Returns the value of the SQLSTATE field in the server's error response. The MySQL server translates error number values to SQLSTATE values.
- **MYSQL.RES.FIELD(<i>).** Identifies the packet that corresponds to the *i*th individual field in the server's response. Each field packet describes the properties of the associated column. The packet count (*i*) begins at 0.

Parameters:

i - Packet number

- **MYSQL.RES.FIELD(<i>).CATALOG.** Returns the catalog property of the field packet.
- **MYSQL.RES.FIELD(<i>).CHAR_SET.** Returns the character set of the column. The EQ(<m>) and NE(<m>) operators, which return Boolean values to indicate the result of a comparison, are used with this prefix.
- **MYSQL.RES.FIELD(<i>).DATATYPE.** Returns an enumeration constant that represents the data type of the column. This is the type (also called enum_field_type) attribute of the column. The EQ(<m>) and NE(<m>) operators, which return Boolean values to indicate the result of a comparison, are used with this prefix. The possible values for the various data types are:
 - DECIMAL
 - TINY
 - SHORT
 - LONG
 - FLOAT
 - DOUBLE
 - NULL
 - TIMESTAMP
 - LONGLONG
 - INT24
 - DATE
 - TIME
 - DATETIME
 - YEAR
 - NEWDATE

- VARCHAR (new in MySQL 5.0)
 - BIT (new in MySQL 5.0)
 - NEWDECIMAL (new in MySQL 5.0)
 - ENUM
 - SET
 - TINY_BLOB
 - MEDIUM_BLOB
 - LONG_BLOB
 - BLOB
 - VAR_STRING
 - STRING
 - GEOMETRY
- **MYSQL.RES.FIELD(<i>).DB.** Returns the database identifier (db) attribute of the field packet.
 - **MYSQL.RES.FIELD(<i>).DECIMALS.** Returns the number of positions after the decimal point if the type is DECIMAL or NUMERIC. This is the decimals attribute of the field packet.
 - **MYSQL.RES.FIELD(<i>).FLAGS.** Returns the flags property of the field packet. Following are the possible hexadecimal flag values:
 - 0001: NOT_NULL_FLAG
 - 0002: PRI_KEY_FLAG
 - 0004: UNIQUE_KEY_FLAG
 - 0008: MULTIPLE_KEY_FLAG
 - 0010: BLOB_FLAG
 - 0020: UNSIGNED_FLAG
 - 0040: ZEROFILL_FLAG
 - 0080: BINARY_FLAG
 - 0100: ENUM_FLAG
 - 0200: AUTO_INCREMENT_FLAG
 - 0400: TIMESTAMP_FLAG
 - 0800: SET_FLAG
 - **MYSQL.RES.FIELD(<i>).LENGTH.** Returns the length of the column. This is the value of the length attribute of the field packet. The value that is returned might be larger than the actual value. For example, an instance of a VARCHAR(2) column might return a value of 2 even when it contains only one character.
 - **MYSQL.RES.FIELD(<i>).NAME.** Returns the column identifier (the name after the AS clause, if any). This is the name attribute of the field packet.
 - **MYSQL.RES.FIELD(<i>).ORIGINAL_NAME.** Returns the original column identifier (before the AS clause, if any). This is the org_name attribute of the field packet.

- **MYSQL.RES.FIELD(<i>).ORIGINAL_TABLE.** Returns the original table identifier of the column (before the AS clause, if any). This is the org_table attribute of the field packet.
- **MYSQL.RES.FIELD(<i>).TABLE.** Returns the table identifier of the column (after the AS clause, if any). This is the table attribute of the field packet.
- **MYSQL.RES.FIELDS_COUNT.** Returns the number of field packets in the response (the field_count attribute of the OK packet).
- **MYSQL.RES.OK.** Identifies the OK packet sent by the database server.
- **MYSQL.RES.OK.AFFECTED_ROWS.** Returns the number of rows affected by an INSERT, UPDATE, or DELETE query. This is the value of the affected_rows attribute of the OK packet.
- **MYSQL.RES.OK.INSERT_ID.** Identifies the unique_id attribute of the OK packet. If an auto-increment identity is not generated by the current MySQL statement or query, the value of unique_id, and hence the value returned by the expression, is 0.
- **MYSQL.RES.OK.MESSAGE.** Returns the message property of the OK packet.
- **MYSQL.RES.OK.STATUS.** Identifies the bit string in the server_status attribute of the OK packet. Clients can use the server status to check whether the current command is a part of a running transaction. The bits in the server_status bit string correspond to the following fields (in the given order):
 - IN TRANSACTION
 - AUTO_COMMIT
 - MORE RESULTS
 - MULTI QUERY
 - BAD INDEX USED
 - NO INDEX USED
 - CURSOR EXISTS
 - LAST ROW SEEN
 - DATABASE DROPPED
 - NO BACKSLASH ESCAPES
- **MYSQL.RES.OK.WARNING_COUNT.** Returns the warning_count attribute of the OK packet.
- **MYSQL.RES.ROW(<i>).** Identifies the packet that corresponds to the *i*th individual row in the database server's response.

Parameters:

i - Row number

- **MYSQL.RES.ROW(<i>).DOUBLE_ELEM(<j>).** Checks whether the *j*th column of the *i*th row of the table is NULL. Following C conventions, both indexes *i* and *j*

start from 0. Therefore, row i and column j are actually the $(i+1)$ th row and the $(j+1)$ th column, respectively.

Parameters:

i - Row number

j - Column number

- **MYSQL.RES.ROW(< i >).IS_NULL_ELEM(< j >).** Checks whether the j th column of the i th row of the table is NULL. Following C conventions, both indexes i and j start from 0. Therefore, row i and column j are actually the $(i+1)$ th row and the $(j+1)$ th column, respectively.

Parameters:

i - Row number

j - Column number

- **MYSQL.RES.ROW(< i >).NUM_ELEM(< j >).** Returns an integer value from the j th column of the i th row of the table. Following C conventions, both indexes i and j start from 0. Therefore, row i and column j are actually the $(i+1)$ th row and the $(j+1)$ th column, respectively.

Parameters:

i - Row number

j - Column number

- **MYSQL.RES.ROW(< i >).TEXT_ELEM(< j >).** Returns a string from the j th column of the i th row of the table. Following C conventions, both indexes i and j start from 0. Therefore, row i and column j are actually the $(i+1)$ th row and the $(j+1)$ th column, respectively.

Parameters:

i - Row number

j - Column number

- **MYSQL.RES.TYPE.** Returns an enumeration constant for the response type. Its values can be ERROR, OK, and RESULT_SET. The EQ(< m >) and NE(< m >) operators, which return Boolean values to indicate the result of a comparison, are used with this prefix.

Expressions for evaluating Microsoft SQL server connections

The following expressions evaluate traffic associated with Microsoft SQL Server database servers. You can use the request-based expressions (expressions that begin with MSSQL.CLIENT and MSSQL.REQ)

in policies to make request switching decisions at the content switching virtual server bind point and the response-based expressions (expressions that begin with MSSQL.RES) to evaluate server responses to user-configured health monitors.

Expression	Description
MSSQL.CLIENT.CAPABILITIES	Returns the OptionFlags1, OptionFlags2, OptionFlags3, and TypeFlags fields of the LOGIN7 authentication packet, in that order, as a 4-byte integer. Each field is 1 byte long and specifies a set of client capabilities.
MSSQL.CLIENT.DATABASE	Returns the name of the client database. The value returned is of type text.
MSSQL.CLIENT.USER	Returns the user name with which the client authenticated. The value returned is of type text.
MSSQL.REQ.COMMAND	Returns an enumeration constant that identifies the type of command in the request sent to a Microsoft SQL Server database server. The value returned is of type text. Examples of the values of the enumeration constant are QUERY, RESPONSE, RPC, and ATTENTION. The EQ() and NE() operators, which return Boolean values to indicate the result of a comparison, are used with this expression.
MSSQL.REQ.QUERY.COMMAND	Returns the first keyword in the SQL query. The value returned is of type text.
MSSQL.REQ.QUERY.SIZE	Returns the size of the SQL query in the request. The value returned is a number.
MSSQL.REQ.QUERY.TEXT	Returns the entire SQL query as a string. The value returned is of type text.
MSSQL.REQ.QUERY.TEXT()	Returns the first n bytes of the SQL query. The value returned is of type text. Parameters: n - Number of bytes
MSSQL.REQ.RPC.NAME	Returns the name of the procedure that is being called in a remote procedure call (RPC) request. The name is returned as a string.

Expression	Description
MSSQL.REQ.RPC.IS_PROCID	Returns a Boolean value that indicates whether the remote procedure call (RPC) request contains a procedure ID or an RPC name. A return value of TRUE indicates that the request contains a procedure ID and a return value of FALSE indicates that the request contains an RPC name.
MSSQL.REQ.RPC.PROCID	Returns the procedure ID of the remote procedure call (RPC) request as an integer.
MSSQL.REQ.RPC.BODY Note: Not available for releases before 10.1.	Returns the body of the SQL request as a string in the form of parameters represented as “a=b” clauses separated by commas, where “a” is the RPC parameter name and “b” is its value.
MSSQL.REQ.RPC.BODY(n) Note: Not available for releases before 10.1.	Returns part of the body of the SQL request as a string in the form of parameters represented as “a=b” clauses separated by commas, where “a” is the RPC parameter name and “b” is its value. Parameters are returned from only the first “n” bytes of the request, skipping the SQL header. Only complete name-value pairs are returned.
MSSQL.RES.ATLEAST_ROWS_COUNT(i)	Checks whether the response has at least i number of rows. The value returned is a Boolean TRUE or FALSE value. Parameters: i - Number of rows
MSSQL.RES.DONE.ROWCOUNT	Returns a count of the number of rows affected by an INSERT, UPDATE, or DELETE query. The value returned is of type unsigned long.
MSSQL.RES.DONE.STATUS	Returns the status field from the DONE token sent by a Microsoft SQL Server database server. The value returned is a number.
MSSQL.RES.ERROR.MESSAGE	Returns the error message from the ERROR token sent by a Microsoft SQL Server database server. This is the value of the MsgText field in the ERROR token. The value returned is of type text.

Expression	Description
MSSQL.RES.ERROR.NUM	Returns the error number from the ERROR token sent by a Microsoft SQL Server database server. This is the value of the Number field in the ERROR token. The value returned is a number.
MSSQL.RES.ERROR.STATE	Returns the error state from the ERROR token sent by a Microsoft SQL Server database server. This is the value of the State field in the ERROR token. The value returned is a number.
MSSQL.RES.FIELD(). <i>DATATYPE</i>	Returns the data type of the ith field in the server response. The EQ() and NE() functions, which return Boolean values to indicate the result of a comparison, are used with this prefix. For example, the following expression returns a Boolean TRUE if the DATATYPE function returns a value of datetime for the third field in the response: MSSQL.RES.FIELD(<2>).DATATYPE.EQ(datetime) Parameters: i - Row number
MSSQL.RES.FIELD(). <i>LENGTH</i>	Returns the maximum possible length of the ith field in the server response. The value returned is a number. Parameters: i - Row number
MSSQL.RES.FIELD(). <i>NAME</i>	Returns the name of the ith field in the server response. The value returned is of type text. Parameters: i - Row number
MSSQL.RES.ROW(). <i>DOUBLE_ELEM()</i>	Returns a value of type double from the jth column of the ith row of the table. If the value is not a double value, an UNDEF condition is raised. Following C conventions, both indexes i and j start from 0 (zero). Therefore, row i and column j are actually the (i + 1)th row and the (j + 1)th column, respectively. Parameters: i - Row number j - Column number

Expression	Description
<code>MSSQL.RES.ROW().NUM_ELEM(j)</code>	Returns an integer value from the <i>j</i> th column of <i>i</i> th row of the table. If the value is not an integer value, an UNDEF condition is raised. Following C conventions, both indexes <i>i</i> and <i>j</i> start from 0 (zero). Therefore, row <i>i</i> and column <i>j</i> are actually the (<i>i</i> + 1)th row and the (<i>j</i> + 1)th column, respectively. Parameters: <i>i</i> - Row number <i>j</i> - Column number
<code>MSSQL.RES.ROW().IS_NULL_ELEM(j)</code>	Checks whether the <i>j</i> th column of the <i>i</i> th row of the table is NULL and returns a Boolean TRUE or FALSE to indicate the result. Following C conventions, both indexes <i>i</i> and <i>j</i> start from 0 (zero). Therefore, row <i>i</i> and column <i>j</i> are actually the (<i>i</i> + 1)th row and the (<i>j</i> + 1)th column, respectively. Parameters: <i>i</i> - Row number <i>j</i> - Column number
<code>MSSQL.RES.ROW().TEXT_ELEM(j)</code>	Returns a text string from the <i>j</i> th column of <i>i</i> th row of the table. Following C conventions, both indexes <i>i</i> and <i>j</i> start from 0 (zero). Therefore, row <i>i</i> and column <i>j</i> are actually the (<i>i</i> + 1)th row and the (<i>j</i> + 1)th column, respectively. Parameters: <i>i</i> - Row number <i>j</i> - Column number
<code>MSSQL.RES.TYPE</code>	Returns an enumeration constant that identifies the response type. Following are the possible return values: ERROR, OK, and RESULT_SET. The EQ() and NE() operators, which return Boolean values to indicate the result of a comparison, are used with this expression.

Typecasting data

September 21, 2020

You can extract data of one type (for example, text or an integer) from requests and responses and transform it to data of another type. For example, you can extract a string and transform the string to

time format. You can also extract a string from an HTTP request body and treat it like an HTTP header or extract a value from one type of request header and insert it in a response header of a different type.

After typecasting the data, you can apply any operation that is appropriate for the new data type. For example, if you typecast text to an HTTP header, you can apply any operation that is applicable to HTTP headers to the returned value.

For more information about typecasting data, see the [Typecasting Operations](#) pdf.

Regular expressions

December 21, 2023

When you want to perform string matching operations that are more complex than the operations that you perform with the `CONTAINS("<string>")` or `EQ("<string>")` operators, you use regular expressions. The policy infrastructure on the Citrix® NetScaler® appliance includes operators to which you can pass regular expressions as arguments for text matching. The names of the operators that work with regular expressions include the string `REGEX`. The regular expressions that you pass as arguments must conform to the regular expression syntax that is described in "<http://www.pcre.org/pcre.txt>." You can learn more about regular expressions at "<http://www.regular-expressions.info/quickstart.html>" and at "<http://www.silverstones.com/thebat/Regex.html>."

The target text for an operator that works with regular expressions can be either text or the value of an HTTP header. Following is the format of a Advanced policy expression that uses a regular expression operator to operate on text:

```
<text>.<regex_operator>(re<delimiter><regex_pattern><delimiter>)
```

The string `<text>` represents the Advanced policy expression prefix that identifies a text string in a packet (for example, `HTTP.REQ.URL`). The string `<regex_operator>` represents the regular expression operator. The regular expression always begins with the string `re`. A pair of matching delimiters, represented by `<delimiter>`, enclose the string `<regex_pattern>`, which represents the regular expression.

The following example expression checks whether the URL in an HTTP packet contains the string `*.jpeg` (where `*` is a wildcard) and returns a Boolean `TRUE` or `FALSE` to indicate the result. The regular expression is enclosed within a pair of slash marks (`/`), which act as delimiters.

```
http.req.url.regex_match(re/.<asterisk>\.jpeg/)
```

Regular expression operators can be combined to define or refine the scope of a search. For example, `<text>.AFTER_REGEX(reregex_pattern1).BEFORE_REGEX(reregex_pattern2)`

specifies that the target for string matching is the text between the patterns `regex_pattern1` and `regex_pattern2`. You can use a text operator on the scope that is defined by the regular expression operators. For example, you can use the `CONTAINS("<string>")` operator to check whether the defined scope contains the string `abc`:

```
<text>.AFTER_REGEX(re/regex_pattern1).BEFORE_REGEX(re/regex_pattern2/).CONTAINS("abc")
```

Note

The process of evaluating a regular expression inherently takes more time than that for an operator such as `CONTAINS("<string>")` or `EQ("<string>")`, which work with simple string arguments. You should use regular expressions only if your requirement is beyond the scope of other operators.

Basic characteristics of regular expressions

May 2, 2023

Following are notable characteristics of regular expressions as defined on the NetScaler appliance:

- A regular expression always begins with the string “re” followed by a pair of delimiting characters (called delimiters) that enclose the regular expression that you want to use.

For example, `re#<regex_pattern>#` uses the number sign (#) as a delimiter.

- A regular expression cannot exceed 1499 characters.
- Digit matching can be done by using the string `\d` (a backslash followed by `d`).
- White space can be represented by using `\s` (a backslash followed by `s`).
- A regular expression can contain white spaces.

Following are the differences between the NetScaler syntax and the PCRE syntax:

- The NetScaler does not allow back references in regular expressions.
- You should not use recursive regular expressions.
- The dot meta-character also matches the newline character.
- Unicode is not supported.
- The operation `SET_TEXT_MODE(IGNORECASE)` overrides the `(?i)` internal option in the regular expression.

Operations for regular expressions

July 14, 2021

The following table describes the operators that work with regular expressions. The operation performed by a regular expression operator in a given Advanced policy expression depends on whether the expression prefix identifies text or HTTP headers. Operations that evaluate headers override any text-based operations for all instances of the specified header type. When you use an operator, replace <text> with the Advanced policy expression prefix that you want to configure for identifying text.

Regular Expression Operation	Description
<code>.BEFORE_REGEX()</code>	Selects the text that precedes the string that matches the argument. If the regular expression does not match any data in the target, the expression returns a text object of length 0. The following expression selects the string "text" from "text/plain". <code>http.res.header("content-type").before_regex(re/#/#)</code>
<code>.AFTER_REGEX()</code>	Selects the text that follows the string that matches the argument. If the regular expression does not match any text in the target, the expression returns a text object of length 0. The following expression extracts "Example" from "myExample": <code>http.req.header("etag").after_regex(re/my/)</code>
<code>.REGEX_SELECT()</code>	Selects a string that matches the argument. If the regular expression does not match the target, a text object of length 0 is returned. The following example extracts the string "NS-CACHE-9.0: 90" from a Via header: <code>http.req.header("via").regex_select(re!NS-CACHE-\d.\d:\s*\d{1,3}!)</code>

Regular Expression Operation	Description
<code>.REGEX_MATCH()</code>	<p>Returns TRUE if the target matches a argument of up to 1499 characters. The regular expression must be of the following format: <code>reregular expression< delimiter></code> Both delimiters must be the same. Additionally, the regular expression must conform to the Perl-compatible (PCRE) regular expression library syntax. For more information, go to http://www.pcre.org/pcre.txt. In particular, see the <code>pcrepattern</code> man page. However, note the following: Back-references are not allowed. Recursive regular expressions are not recommended. The dot metacharacter also matches the newline character. The Unicode character set is not supported. <code>SET_TEXT_MODE(IGNORECASE)</code> overrides the <code>(?i)</code> internal option specified in the regular expression. The following are examples:</p> <pre>http.req.hostname.regex_match(re/[[:alpha:]]+(abc){2,3}/)</pre> <p>and</p> <pre>http.req.url.set_text_mode(urlencoded).regex_match(re#(a*b</pre> <p>The following example matches <code>ab</code> and <code>aB</code>:</p> <pre>http.req.url.regex_match(re/a(?i)b/)</pre> <p>The following example matches <code>ab</code>, <code>aB</code>, <code>Ab</code> and <code>AB</code>:</p> <pre>http.req.url.set_text_mode(ignorecase).regex_match(re/ab/)</pre> <p>The following example performs a case-insensitive, multiline match in which the dot meta-character also matches a newline character:</p> <pre>http.req.body.regex_match(re/(?ixm) (^ab (.*) cd\$) /)</pre>

Summary examples of advanced policy expressions and policies

December 22, 2023

The following table provides examples of Advanced policy expressions that you can use as the basis

for your own Advanced policy expressions.

Table 1. Examples of Advanced policy Expressions

Expression Type	Sample Expressions
Look at the method used in the HTTP request.	<code>http.req.method.eq(post)</code> <code>http.req.method.eq(get)</code>
Check the Cache-Control or Pragma header value in an HTTP request (req) or response (res).	<code>http.req.header("Cache-Control").contains("no-store")</code> <code>http.req.header("Cache-Control").contains("no-cache")</code> <code>http.req.header("Pragma").contains("no-cache")</code> <code>http.res.header("Cache-Control").contains("private")</code> <code>http.res.header("Cache-Control").contains("public")</code> <code>http.res.header("Cache-Control").contains("must-revalidate")</code> <code>http.res.header("Cache-Control").contains("proxy-revalidate")</code> <code>http.res.header("Cache-Control").contains("max-age")</code>
Check for the presence of a header in a request (req) or response (res).	<code>http.req.header("myHeader").exists</code> <code>http.res.header("myHeader").exists</code>
Look for a particular file type in an HTTP request based on the file extension.	<code>http.req.url.contains(".html")</code> <code>http.req.url.contains(".cgi")</code> <code>http.req.url.contains(".asp")</code> <code>http.req.url.contains(".exe")</code> <code>http.req.url.contains(".cfm")</code> <code>http.req.url.contains(".ex")</code> <code>http.req.url.contains(".shtml")</code> <code>http.req.url.contains(".htx")</code> <code>http.req.url.contains("/cgi-bin/")</code> <code>http.req.url.contains("/exec/")</code> <code>http.req.url.contains("/bin/")</code>

Expression Type	Sample Expressions
Look for anything that is other than a particular file type in an HTTP request.	<code>http.req.url.contains(".png").not ; http.req.url.contains(".jpeg").not</code>
Check the type of file that is being sent in an HTTP response based on the Content-Type header.	<code>http.res.header("Content-Type").contains("text")http.res.header("Content-Type").contains("application/msword")http.res.header("Content-Type").contains("vnd.ms-excel")http.res.header("Content-Type").contains("application/vnd.ms-powerpoint"); http.res.header("Content-Type").contains("text/css"); http.res.header("Content-Type").contains("text/xml"); http.res.header("Content-Type").contains("image/)</code>
Check whether this response contains an expiration header.	<code>http.res.header("Expires").exists</code>
Check for a Set-Cookie header in a response.	<code>http.res.header("Set-Cookie").exists</code>
Check the agent that sent the response.	<code>http.res.header("User-Agent").contains("Mozilla/4.7")http.res.header("User-Agent").contains("MSIE")</code>
Check if the first 1024 bytes of the body of a request starts with the string "some text".	<code>http.req.body(1024).contains("some text")</code>

The following table shows examples of policy configurations and bindings for commonly used functions.

Table 2. Examples of Advanced policy Expressions and Policies

Purpose	Example
Use the rewrite feature to replace occurrences of <code>http://</code> with <code>https://</code> in the body of an HTTP response.	<pre>add rewrite action httpRewriteAction replace_all http.res.body(50000) "\"https://\" "-search http://add rewrite policy demo_rep34312 "http.res. body(50000).contains(\"http://\") " httpRewriteAction</pre>
Replace all occurrences of “abcd” with “1234” in the first 1000 bytes of the HTTP body.	<pre>add rewrite action abcdTo1234Action replace_all " http.req.body(1000) "\"1234\""- search abcd add rewrite policy abcdTo1234Policy "http.req.body (1000).contains(\"abcd\")" abcdTo1234Action bind rewrite global abcdTo1234Policy 100 END - type REQ_OVERRIDE</pre>
Downgrade the HTTP version to 1.0 to prevent the server from chunking HTTP responses.	<pre>add rewrite action downgradeTo1.0 Action replace http.req.version. minor "\"0\""+add rewrite policy downgradeTo1.0Policy "http.req. version.minor.eq(1)"downgradeTo1 .0Action bind lb vserver myLBVserver -policyName downgradeTo1.0Policy -priority 100 -gotoPriorityExpression NEXT -type REQUEST</pre>

Purpose	Example
Remove references to the HTTP or HTTPS protocol in all responses, so that if the user's connection is HTTP, the link is opened by using HTTP, and if the user's connection is HTTPS, the link is opened by using HTTPS.	<pre>add rewrite action remove_http_https replace_all " http.res.body(1000000). set_text_mode(ignorecase)""\"//\" "-search "re~https?::// HTTPS?:://~ "add rewrite policy remove_http_https true remove_http_https bind lb vserver test_vsvr -policyName remove_http_https -priority 20 - gotoPriorityExpression NEXT -type RESPONSE</pre>
Rewrite instances of http: to https: in all URLs.	<pre>add responder action httpToHttpsAction redirect "\" https://\" + http.req.hostname + http.req.url"add responder policy httpToHttpsPolicy "!CLIENT.SSL. IS_SSL"httpToHttpsAction bind responder global httpToHttpsPolicy 1 END -type OVERRIDE</pre>
Modify a URL to redirect from URL A to URL B. In this example, "file5.html" is appended to the path.	<pre>add responder action appendFile5Action redirect "\"http ://\" + http.req.hostname + http. req.url + \"/file5.html\""add responder policy appendFile5Policy "http.req.url. eq(\"/testsite\")" appendFile5Action bind responder global appendFile5Policy 1 END - type OVERRIDE</pre>

Purpose	Example
Redirect an external URL to an internal URL.	<pre>add rewrite action act_external_to_internal REPLACE 'http.req.hostname.server'"www. my.host.com"'add rewrite policy pol_external_to_internal 'http. req.hostname.server.eq("www. external.host.com")' act_external_to_internal bind rewrite global pol_external_to_internal 100 END -type REQ_OVERRIDE</pre>
Redirect requests to www.example.com that have a query string to www.Webn.example.com. The value n is derived from a server parameter in the query string, for example, server=5.	<pre>add rewrite action act_redirect_query REPLACE q#http .req.header("Host").before_str(". example.com")'"Web"+ http.req. url.query.value("server"# add rewrite policy pol_redirect_query q#http.req.header("Host").eq(" www.example.com")&& http.req.url. contains("?")'act_redirect_query#</pre>

Purpose	Example
Limit the number of requests per second from a URL.	<pre>add ns limitSelector ip_limit_selector http.req.url " client.ip.src"add ns limitIdentifier ip_limit_identifier -threshold 4 -timeSlice 3600 -mode request_rate -limitType smooth - selectorName ip_limit_selector add responder action my_Web_site_redirect_action redirect "\"http://www.mycompany. com/\\""add responder policy ip_limit_responder_policy "http. req.url.contains(\"myasp.asp\")&& sys.check_limit (\ ip_limit_identifier\)" my_Web_site_redirect_action bind responder global ip_limit_responder_policy 100 END -type default</pre>
Check the client IP address but pass the request without modifying the request.	<pre>add rewrite policy check_client_ip_policy 'HTTP.REQ. HEADER ("x-forwarded-for").EXISTS HTTP.REQ.HEADER ("client-ip"). EXISTS'NOREWRITE bind rewrite global check_client_ip_policy 100 END</pre>

Purpose	Example
Remove old headers from a request and insert an NS-Client header.	<pre>add rewrite action del_x_forwarded_for delete_http_header x-forwarded- for add rewrite action del_client_ip delete_http_header client-ip add rewrite policy check_x_forwarded_for_policy ' HTTP.REQ.HEADER("x-forwarded-for ").EXISTS'del_x_forwarded_for add rewrite policy check_client_ip_policy 'HTTP.REQ. HEADER("client-ip").EXISTS' del_client_ip add rewrite action insert_ns_client_header insert_http_header NS-Client ' CLIENT.IP.SRC'add rewrite policy insert_ns_client_policy 'HTTP.REQ .HEADER("x-forwarded-for").EXISTS HTTP.REQ.HEADER("client-ip"). EXISTS'insert_ns_client_header bind rewrite global check_x_forwarded_for_policy 100 200 bind rewrite global check_client_ip_policy 200 300 bind rewrite global insert_ns_client_policy 300 END</pre>

Purpose	Example
<p>Remove old headers from a request, insert an NS-Client header, and then modify the “insert header” action so that the value of the inserted header contains the client IP values from the old headers and the NetScaler appliance’s connection IP address. Note that this example repeats the previous example, with the exception of the final set rewrite action.</p>	<pre> 'add rewrite action del_x_forwarded_for delete_http_header x-forwarded-for add rewrite action del_client_ip delete_http_header client-ip add rewrite policy check_x_forwarded_for_policy 'HTTP.REQ.HEADER("x-forwarded-for").EXISTS' del_x_forwarded_for add rewrite policy check_client_ip_policy 'HTTP.REQ.HEADER("client-ip").EXISTS' del_client_ip add rewrite action insert_ns_client_header insert_http_header NS-Client 'CLIENT.IP.SRC' add rewrite policy insert_ns_client_policy 'HTTP.REQ.HEADER("x-forwarded-for").EXISTS HTTP.REQ.HEADER("client-ip").EXISTS' insert_ns_client_header bind rewrite global check_x_forwarded_for_policy 100 200 bind rewrite global check_client_ip_policy 200 300 bind rewrite global insert_ns_client_policy 300 END set rewrite action insert_ns_client_header -stringBuilderExpr 'HTTP.REQ.HEADER("x-forwarded-for").VALUE(0) + ""'+ HTTP.REQ.HEADER("client-ip").VALUE(0) + ""'+ CLIENT.IP.SRC' </pre>

Tutorial examples of advanced policies for rewrite

December 21, 2023

With the rewrite feature, you can modify any part of an HTTP header, and, for responses, you can modify the HTTP body. You can use this feature to accomplish several useful tasks, such as removing unnecessary HTTP headers, masking internal URLs, redirecting webpages, and redirecting queries or keywords.

In the following examples, you first create a rewrite action and a rewrite policy. Then you bind the policy globally.

This document includes the following details:

- Redirecting an External URL to an Internal URL
- Redirecting a Query
- Rewriting HTTP to HTTPS
- Removing Unwanted Headers
- Reducing Web Server Redirects
- Masking the Server Header
- Converting plain text to URL encoded string and the opposite way

For more information about the commands and syntax descriptions, see [Rewrite Command Reference](#) page.

Redirecting an external URL to an internal URL

This example describes how to create a rewrite action and rewrite policy that redirects an external URL to an internal URL. You create an action, called `act_external_to_internal`, that performs the rewrite. Then you create a policy called `pol_external_to_internal`.

To redirect an external URL to an internal URL by using the CLI

- To create the rewrite action, at the command prompt, type:

```
add rewrite action act_external_to_internal REPLACE "http.req.hostname
.server" "\host_name_of_internal_Web_server\"
```

- To create the rewrite policy, at the NetScaler command prompt, type:

```
add rewrite policy pol_external_to_internal "http.req.hostname.server
.eq(\"host_name_of_external_Web_server\")"act_external_to_internal
```

- Bind the policy globally.

To redirect an external URL to an internal URL by using the configuration utility

1. Navigate to **AppExpert > Rewrite > Actions**.
2. In the details pane, click **Add**.
3. In the **Create Rewrite Action** dialog box, enter the name `act_external_to_internal`.
4. To replace the HTTP server host name with the internal server name, choose **Replace** from the Type list box.
5. In the header name field, type **Host**.
6. In the string expression for a replacement text field, type the internal host name of your Web server.

7. Click **Create** and then click **Close**.
8. In the navigation pane, click **Policies**.
9. In the details pane, click **Add**.
10. In the Name field, type `pol_external_to_internal`. This policy detects connections to the Web server.
11. In the **Action** drop-down menu, choose the action `act_external_to_internal`.
12. In the Expression editor, construct the following expression:

```
1 HTTP.REQ.HOSTNAME.SERVER.EQ("www.example.com")
```

1. Bind your new policy globally.

Redirecting a query

This example describes how to create a rewrite action and rewrite policy that redirects a query to the proper URL. The example assumes that the request contains a Host header set to `**www.example.com**` and a GET method with the **string** `/query.cgi?server=5`. The redirect extracts the domain name from the host header and the number from the query string, and redirects the user's query to the server **Web5.example.com**, where the rest of the user's query is processed.

Note:

Although the following commands appear on multiple lines, you must enter them on a single line without line breaks.

To redirect a query to the appropriate URL using the CLI

- To create a rewrite action named `act_redirect_query` that replaces the HTTP server host name with the internal server name, type:

```
add rewrite action act_redirect_query REPLACE http.req.header("Host").before_str(".example.com") "'Web" + http.req.url.query.value("server")'
```

- To create a rewrite policy named `pol_redirect_query`, type the following commands at the NetScaler command prompt. This policy detects connections, to the Web server, that contain a query string. Do not apply this policy to connections that do not contain a query string:

```
add rewrite policy pol_redirect_query 'http.req.header("Host").eq(www.example.com)&& http.req.url.contains("?")'act_redirect_query
```

- Bind your new policy globally.

Because this rewrite policy is highly specific and must be run before any other rewrite policies, it is advisable to assign it a high priority. If you assign it a priority of 1, it is evaluated first.

Rewriting HTTP to HTTPS

This example describes how to rewrite Web server responses to find all URLs that begin with the string “HTTP” and replace that string with “https.” You can use it to avoid having to update webpages after moving a server from HTTP to HTTPS.

To redirect HTTP URLs to HTTPS by using the CLI

- To create a rewrite action named `act_replace_http_with_https` that replaces all instances of the string “HTTP” with the string “https,” enter the following command:

```
add rewrite action act_replace_http_with_https replace_all 'http.res.  
body(100)' "https" -search text("http")
```

- To create a rewrite policy named `pol_replace_http_with_https` that detects connections to the Web server, enter the following command:

```
add rewrite policy pol_replace_http_with_https TRUE act_replace_http_with_https  
NOREWRITE
```

- Bind your new policy globally.

To troubleshoot this rewrite operation, see [“Case Study: Rewrite Policy for Converting HTTP Links to HTTPS not Working.”](#)

Removing Unwanted Headers

This example explains how to use a Rewrite policy to remove unwanted headers. Specifically, the example shows how to remove the following headers:

- **Accept Encoding header.** Removing the Accept Encoding header from HTTP responses prevents compression of the response.
- **Content Location header.** Removing the Content Location header from HTTP responses prevents your server from providing a hacker with information that might allow a security breach.

To delete headers from HTTP responses, you create a rewrite action and a rewrite policy, and you bind the policy globally.

To create the appropriate Rewrite action by using the CLI

At the command prompt, type one of the following commands to either remove the Accept Encoding header and prevent response compression or remove the Content Location header:

- `add rewrite action "act_remove-ae"delete_http_header "Accept-Encoding"`
- `add rewrite action "act_remove-cl"delete_http_header "Content-Location"`

To create the appropriate Rewrite policy by using the CLI

At the command prompt, type one of the following commands to remove either the Accept Encoding header or the Content Location header:

- `add rewrite policy "pol_remove-ae"true "act_remove-ae"`
- `add rewrite policy "pol_remove-cl"true "act_remove-cl"`

To bind the policy globally by using the CLI

At the command prompt, type one of the following commands, as appropriate, to globally bind the policy that you have created:

- `bind rewrite global pol_remove-ae 100`
- `bind rewrite global pol_remove-cl 200`

Reducing Web Server Redirects

This example explains how to use a Rewrite policy to modify connections to your home page and other URLs that end with a forward slash (/) to the default index page for your server, preventing redirects and reducing load on your server.

To modify directory-level HTTP requests to include the default home page by using the CLI

- To create a Rewrite action named `action-default-homepage` that modifies URLs that end in a forward slash to include the default home page `index.html`, type:

```
add rewrite action "action-default-homepage"replace http.req.url.path
"/index.html"
```

- To create a Rewrite policy named policy-default-homepage that detects connections to your home page and applies your new action, type:

```
add rewrite policy "policy-default-homepage"q\|#http.req.url.path.EQ(
"/")"action-default-homepage"\|#
```

- Globally bind your new policy to put it into effect.

Masking the Server Header

This example explains how to use a Rewrite policy to mask the information in the Server header in HTTP responses from your Web server. That header contains information that hackers can use to compromise your website. While masking the header will not prevent a skilled hacker from finding out information about your server, it makes hacking your Web server more difficult and encourage hackers to choose less well protected targets.

To mask the Server header in responses from the CLI

1. To create a Rewrite action named act_mask-server that replaces the contents of the Server header with an uninformative string, type:

```
add rewrite action "act_mask-server"replace "http.RES.HEADER(\"Server
\")\"\" \"Web Server 1.0\|\"
```

1. To create a Rewrite policy named pol_mask-server that detects all connections, type:

```
add rewrite policy "pol_mask-server"true "act_mask-server"
```

1. Globally bind your new policy to put it into effect.

How to convert plain text to URL encoded string and the opposite way

The following expressions convert plain text to URL encoded string and the opposite way:

1. URL_RESERVED_CHARS_SAFE (string to URL ENCODED).

Example:

```
1 ("abc def&123").URL_RESERVED_CHARS_SAFE
2 Output will be
3 " abc%20def%26123 " which is url encoded.
```

1. SET_TEXT_MODE(URL ENCODED).DECODE_USING_TEXT_MODE. (URL ENCODED to string)

Example:

```
1 ("abc%20def%26123").SET_TEXT_MODE(URLENCODED).DECODE_USING_TEXT_MODE
2 Output will be
3 " abc def&123 "
```

Rewrite and responder policy examples

August 31, 2021

Following are some examples for rewrite and responder policies:

Example 1: To add a local Client-IP header by using the command line interface

```
1 add rewrite action act_ins_client insert_http_header NS-Client 'CLIENT.
  IP.SRC'
2 add rewrite policy pol_ins_client http.req.is_valid act_ins_client
3 bind rewrite global pol_ins_client 300 END
4
5 namem@obelix:~$ curl -v http://10.10.10.10/testsite/file5.html
6 * Hostname was NOT found in DNS cache
7 *   Trying 10.10.10.10...
8 * Connected to 10.10.10.10 (10.10.10.10) port 80 (#0)
9 > GET /testsite/file5.html HTTP/1.1
10 > User-Agent: curl/7.35.0
11 > Host: 10.10.10.10
12 > Accept: */*
13 >
14 < HTTP/1.1 200 OK
15 < Date: Tue, 10 Nov 2020 10:06:48 GMT
16 * Server Apache/2.2.15 (CentOS) is not blacklisted
17 < Server: Apache/2.2.15 (CentOS)
18 < Last-Modified: Thu, 20 Jun 2019 07:16:04 GMT
19 < ETag: "816c5-5-58bbc1e73cdd3"
20 < Accept-Ranges: bytes
21 < Content-Length: 5
22 < Content-Type: text/html; charset=UTF-8
23 < NS-Client: 10.102.1.98
24 <
25 * Connection #0 to host 10.10.10.10 left intact
26 JLEwxt_namem@obelix:~$
```

Example 2: Mask the HTTP Server Type

```
1 add rewrite action Action-Rewrite-Server_Mask REPLACE HTTP.RES.HEADER("
  Server") "\"Web Server 1.0\""
2 add rewrite policy Rewrite-Server_Mask HTTP.RES.IS_VALID Action-Rewrite
  -Server_Mask NOREWRITE
3 namem@obelix:~$ curl -v http://10.10.10.10/testsite/file5.html
4 * Hostname was NOT found in DNS cache
5 *   Trying 10.10.10.10...
6 * Connected to 10.10.10.10 (10.10.10.10) port 80 (#0)
7 > GET /testsite/file5.html HTTP/1.1
8 > User-Agent: curl/7.35.0
9 > Host: 10.10.10.10
10 > Accept: */*
11 >
12 < HTTP/1.1 200 OK
13 < Date: Tue, 10 Nov 2020 10:15:42 GMT
14 * Server Web Server 1.0 is not blacklisted
15 < Server: Web Server 1.0
16 < Last-Modified: Thu, 20 Jun 2019 07:16:04 GMT
17 < ETag: "816c5-5-58bbc1e73cdd3"
18 < Accept-Ranges: bytes
19 < Content-Length: 5
20 < Content-Type: text/html; charset=UTF-8
21 <
22 * Connection #0 to host 10.10.10.10 left intact
23 JLEwxt_namem@obelix:~$
```

Example 3: Respond by redirecting to different url when a url is received

```
1 > add responder action act1 redirect "\"www.google.com\""
2 Done
3 > add responder policy pol1 'HTTP.REQ.URL.CONTAINS("file")' act1
4 Done
5 > bind responder global pol1 1
6 Done
7 >
8
9 name:~$ curl -v http://10.10.10.10/testsite/file5.html
10 * Hostname was NOT found in DNS cache
11 *   Trying 10.10.10.10...
12 * Connected to 10.10.10.10 (10.10.10.10) port 80 (#0)
13 > GET /testsite/file5.html HTTP/1.1
14 > User-Agent: curl/7.35.0
15 > Host: 10.10.10.10
16 > Accept: */*
17 >
18 < HTTP/1.1 302 Found : Moved Temporarily
19 < Location: www.google.com
20 < Connection: close
21 < Cache-Control: no-cache
22 < Pragma: no-cache
23 <
```

```
24 * Closing connection 0
25 name@obelix:~$
```

Example 4: Respond with a message which can be any expression or a text

```
1 add responder action act123 respondwith "\"Please reach out to
  administrator\""
2 add responder policy pol1 "HTTP.REQ.URL.CONTAINS(\"file\")" act123
3 bind responder global pol1 100 END
4
5 name@obelix:~$ curl -v http://10.10.10.10/testsite/file5.html
6 * Hostname was NOT found in DNS cache
7 *   Trying 10.10.10.10..Responder Action and Policy:
8
9 >add responder action Redirect-Action redirect "\"https://xyz.abc.com/
  dispatcher/SAML2AuthService?siteurl=wmapv\"" -responseStatusCode 302
10
11 >add responder policy Redirect-Policy "HTTP.REQ.HOSTNAME.CONTAINS(\"abc
  \")" Redirect-Action
12
13 Binding to LB Virtual Server:
14
15 >bind lb vserver Test1_SF -policyName Redirect-Policy -priority 100 -
  gotoPriorityExpression END -type REQUEST.
16 * Connected to 10.10.10.10 (10.10.10.10) port 80 (#0)
17 > GET /testsite/file5.html HTTP/1.1
18 > User-Agent: curl/7.35.0
19 > Host: 10.10.10.10
20 > Accept: */*
21 >
22 * Connection #0 to host 10.10.10.10 left intact
23 Please reach out to administratort_name@obelix:~$
```

Example 5: Respond with an HTML imported page

```
1 import responder htmlpage http://10.10.10.10)/testsite/file5.html
  page112
2 add responder action act1 respondwithHtmlpage page1
3 add responder policy pol1 true act1
4 bind responder global pol1 100
5
6 name@obelix:~$ curl -v http://10.10.10.10)/testsite/file5.html
7 * Hostname was NOT found in DNS cache
8 *   Trying 10.10.10.10...
9 * Connected to 10.10.10.10 (10.10.10.10) port 80 (#0)
10 > GET /testsite/file5.html HTTP/1.1
11 > User-Agent: curl/7.35.0
12 > Host: 10.102.58.140
13 > Accept: */*
```



```
14 >
15 < HTTP/1.1 200 OK
16 < Content-Length: 5
17 < Content-Type: text/html
18 <
19 * Connection #0 to host 10.10.10.10 left intact
20 JLEwxt_name@obelix:~$
```

Example 6: Redirect URL based on HOSTNAME using Responder Policy

```
1 Responder Action and Policy:
2
3 >add responder action Redirect-Action redirect "\"https://xyz.abc.com/
   dispatcher/SAML2AuthService?siteurl=wmap\" -responseStatusCode 302
4
5 >add responder policy Redirect-Policy "HTTP.REQ.HOSTNAME.CONTAINS(\"abc
   \")" Redirect-Action
6
7 Binding to LB Virtual Server:
8
9 >bind lb vserver Test1_SF -policyName Redirect-Policy -priority 100 -
   gotoPriorityExpression END -type REQUEST
```

Rate limiting

May 2, 2023

The rate limiting feature enables you to define the maximum load for a given network entity or virtual entity on the NetScaler appliance. The feature enables you to configure the appliance to monitor the rate of traffic associated with the entity and take preventive action, in real time, based on the traffic rate. This feature is particularly useful when the network is under attack from a hostile client that is sending the appliance a flood of requests. You can mitigate the risks that affect the availability of resources to clients, and you can improve the reliability of the network and the resources that the appliance manages.

You can monitor and control the rate of traffic that is associated with virtual and user-defined entities, including virtual servers, URLs, domains, and combinations of URLs and domains. You can throttle the rate of traffic if it is too high, base information caching on the traffic rate, and redirect traffic to a given load balancing virtual server if the traffic rate exceeds a predefined limit. You can apply rate-based monitoring to HTTP, TCP, and DNS requests.

To monitor the rate of traffic for a given scenario, you configure a *rate limit identifier*. A rate limit identifier specifies numeric thresholds such as the maximum number of requests or connections (of

a particular type) that are permitted in a specified time period called a *time slice*.

Optionally, you can configure filters, known as *stream selectors*, and associate them with rate limit identifiers when you configure the identifiers. After you configure the optional stream selector and the limit identifier, you must invoke the limit identifier from a Advanced policy. You can invoke identifiers from any feature in which the identifier may be useful, including rewrite, responder, DNS, and integrated caching.

You can globally enable and disable SNMP traps for rate limit identifiers. Each trap contains cumulative data for the rate limit identifier's configured data collection interval (time slice), unless you specified multiple traps to be generated per time slice. For more information about configuring SNMP traps and managers, see [SNMP](#).

Configure a stream selector

December 21, 2023

A traffic stream selector is an optional filter for identifying an entity for which you want to throttle access. The selector is applied to a request or a response and selects data points (keys) that can be analyzed by a rate stream identifier. These data points can be based on almost any characteristic of the traffic, including IP addresses, subnets, domain names, TCP or UDP identifiers, and particular strings or extensions in URLs.

A stream selector consists of individual Advanced policy expressions called selectlets. Each selectlet is a non-compound Advanced policy expression. A traffic stream selector can contain up to five non-compound expressions called selectlets. Each selectlet is considered to be in an AND relationship with the other expressions. Following are some examples of selectlets:

```
1 http.req.url
2 http.res.body(1000>after_str("car_model").before_str("made_in"))
3 "client.ip.src.subnet(24)"
```

The order in which you specify parameters is significant. For example, if you configure an IP address and a domain (in that order) in one selector, and then specify the domain and the IP address (in the reverse order) in another selector, the NetScaler considers these values to be unique. This can lead to the same transaction being counted twice. Also, if multiple policies invoke the same selector, the NetScaler, again, can count the same transaction more than once.

Note: If you modify an expression in a stream selector, you may get an error if any policy that invokes it is bound to a new policy label or bind point. For example, suppose that you create a stream selector named `myStreamSelector1`, invoke it from `myLimitID1`, and invoke the identifier from a DNS policy named `dnsRateLimit1`. If you change the expression in `myStreamSelector1`, you might receive an error

when binding `dnsRateLimit1` to a new bind point. The workaround is to modify these expressions before creating the policies that invoke them.

To configure a traffic stream selector by using the command line interface

At the command prompt, type:

```
1 add stream selector <name> <rule> ...
```

Example:

```
1 add stream selector myStreamSel HTTP.REQ.URL CLIENT.IP.SRC
```

To configure a stream selector by using the configuration utility

Navigate to AppExpert > Rate Limiting > Selectors, click Add and specify the relevant details.

Configure a traffic rate limit identifier

December 21, 2023

A rate limit identifier checks if the amount of traffic exceeds a specified value, within a particular time interval. The identifier returns a “Boolean TRUE” if the amount of traffic exceeds a limit within a particular time interval. When you include a limit identifier in the compound dAdvanced policy expression in a policy rule, you must include a stream selector. If you do not specify, the limit identifier is applied to all requests or responses identified by the compound expressions.

Note:

The maximum length for storing string results (for example, `HTTP.REQ.URL`) is 60 characters. If the string (for example, `URL`) is 1000 characters long, out of which 50 characters are long enough to uniquely identify a string, you can use an expression to extract required 50 characters.

To configure a traffic limit identifier from the command line interface

At the command prompt, type:

```
1 add ns limitIdentifier <limitIdentifier> -threshold <positive_integer>
  -timeSlice <positive_integer> -mode <mode> -limitType ( BURSTY |
  SMOOTH ) -selectorName <string> -maxBandwidth <positive_integer> -
  trapsInTimeSlice <positive_integer>
```

Argument description

limitIdentifier. Name for a rate limit identifier. Must begin with an ASCII letter or underscore (_) character, and must consist only of ASCII alphanumeric or underscore characters. Reserved words must not be used. This is a mandatory argument. Maximum Length: 31

threshold. A maximum number of requests that are allowed in the given timeslice when requests (mode is set as REQUEST_RATE) are tracked per timeslice. When connections (mode is set as CONNECTION) are tracked, it is the total number of connections that would be let through. Default value: 1 Minimum value: 1 Maximum Value: 4294967295

timeSlice. Time interval, in milliseconds, specified in multiples of 10, during which requests are tracked to check if they cross the threshold. This argument is needed only when the mode is set to REQUEST_RATE. Default value: 1000 Minimum value: 10 Maximum Value: 4294967295

mode. Defines the type of traffic to be tracked.

1. REQUEST_RATE. Tracks requests/timeslice.
2. CONNECTION. Tracks active transactions.

limitType. Defines the type of limit.

- **Smooth:** Spreads the load evenly across each time slice of the set time frame. Use for application traffic that is consistent.
- **Bursty:** Allows the requests to pass through if the load is below the set threshold. Use for application traffic that is sporadic. It is helpful if the load peaks anytime within the set time frame.

For example, the set maximum requests are 100 and the time frame is 10 seconds. If your application receives 80 requests in the first second, these limit types behave differently. The bursty limit type allows the requests to pass through because the load is below the set threshold. However, the smooth limit type allows only 10 requests per second. So, it applies the configured action for the excess load.

selectorName. Name of the rate limit selector. If this argument is NULL, rate limiting will be applied on all traffic received by the virtual server or the NetScaler (depending on whether the limit identifier is bound to a virtual server or globally) without any **filtering**. **Maximum Length: 31**

maxBandwidth. Maximum bandwidth permitted, in kbps. Minimum value: 0 Maximum value: 4294967287

Example:

Configuring traffic rate limit identifier in BURSTY mode:

```
1 add ns limitIdentifier 100_request_limit -threshold 100 -timeSlice 1000
   -mode REQUEST_RATE -limitType BURSTY -selectorName
   limit_100_requests_selector -trapsInTimeSlice 30
```

Configuring traffic rate limit identifier in SMOOTH mode:

```
1 add ns limitidentifier limit_req -mode request_rate -limitType smooth -
  timeslice 1000 -Threshold 2000 -trapsInTimeSlice 200
```

To configure a traffic limit identifier by using the configuration utility

Navigate to AppExpert > Rate Limiting > Limit Identifiers, click Add and specify the relevant details.

Configure and bind a traffic rate policy

December 21, 2023

You implement rate-based application behavior by configuring a policy in an appropriate NetScaler feature. The feature must support Advanced policies. The policy expression must contain the following expression prefix to enable the feature to analyze the traffic rate:

```
1 sys.check_limit(<limit_identifier>)
```

Where `limit_identifier` is the name of a limit identifier.

The policy expression must be a compound expression that contains at least two components:

- An expression that identifies traffic to which the rate limit identifier is applied. For example:

```
1 http.req.url.contains("my_aspx.aspx").
```

- An expression that identifies a rate limit identifier, for example, `sys.check_limit("my_limit_identifier")`. This must be the last expression in the policy expression.

To configure a rate-based policy by using the command line interface

At the command prompt, type the following command to configure a rate-based policy and verify the configuration:

```
1 add cache|dns|rewrite|responder policy <policy_name> -rule expression
  && sys.check_limit("<LimitIdentifierName>") [<feature-specific
  information>]
```

Following is a complete example of a rate-based policy rule. Note that this example assumes that you have configured the responder action, `send_direct_url`, that is associated with the policy. Note that the `sys.check_limit` parameter must be the last element of the policy expression:

```
1 add responder policy responder_threshold_policy "http.req.url.contains(
  "myindex.html") && sys.check_limit("my_limit_identifler)"
  send_direct_url
```

For information about binding a policy globally or to a virtual server, see “[Binding Advanced policy Policies.](#)”

To configure a rate-based policy by using the configuration utility

1. In the navigation pane, expand the feature in which you want to configure a policy (for example, Integrated Caching, Rewrite, or Responder), and then click Policies.
2. In the details pane, click Add. In Name, enter a unique name for the policy.
3. Under Expression, enter the policy rule, and make sure that you include the `sys.check_limit` parameter as the final component of the expression. For example:

```
1 http.req.url.contains("my_aspx.aspx") && sys.check_limit("
  my_limit_identifler")
```

4. Enter feature-specific information about the policy.

For example, you may be required to associate the policy with an action or a profile. For more information, see the feature-specific documentation.

5. Click Create, and then click Close.
6. Click Save.

View the traffic rate

December 21, 2023

If traffic through one or more virtual servers matches a rate-based policy, you can view the rate of this traffic. The rate statistics are maintained in the limit identifier that you named in the rule for the rate-based policy. If more than one policy uses the same limit identifier, you can view the traffic rate as defined by hits to all of the policies that use the particular limit identifier.

To view the traffic rate by using the command line interface

At the command prompt, type the following command to view the traffic rate:

```
1 show ns limitSessions <limitIdentifier>
```

Example:

```
1 sh limitSession myLimitSession
```

To view the traffic rate by using the configuration utility

1. Navigate to AppExpert > Rate Limiting > Limit Identifiers.
2. Select a limit identifier whose traffic rate you want to view.
3. Click the Show Sessions button. If traffic through one or more virtual servers has matched a rate limiting policy that uses this limit identifier (and the hits are within the configured time slice for this identifier), the Session Details dialog box appears. Otherwise, you receive a “No session exists” message.

Testing a rate-based policy

December 21, 2023

To test a rate-based policy, you can send traffic to any virtual server to which a rate-based policy is bound.

Task overview: Testing a rate-based policy

1. Configure a stream selector (optional) and a rate limit identifier (required). For example:

```
1 add stream selector sel_subnet Q.URL "CLIENT.IP.SRC.SUBNET(24)"
2 add ns limitIdentifier k_subnet -Threshold 4 -timeSlice 3600 -mode
  REQUEST_RATE -limittype smooth -selectorName sel_subnet -
  trapsInTimeSlice 8
```

2. Configure the action that you want to associate with the policy that uses the rate limit identifier. For example:

```
1 add responder action resp_redirect redirect "\"http://
  response_site.com/\""
```

3. Configure a policy that uses the sys.check_limit expression prefix to call the rate limit identifier. For example, the policy can apply a rate limit identifier to all requests arriving from a particular subnet, as follows:

```
1 add responder policy resp_subnet "SYS.CHECK_LIMIT(\"k_subnet\")"
  resp_redirect
```

4. Bind the policy globally or to a virtual server. For example:

```
1 bind responder global resp_subnet 6 END -type DEFAULT
```

5. In a browser address bar, send a test HTTP query to a virtual server. For example:

```
1 http://<IP of a vserver>/testsite/test.txt
```

6. At the NetScaler command prompt, type:

```
1 show ns limitSessions \<limitIdentifier\>
```

Example

```
1 > sh limitsession k_subnet
2 1)      Time Remaining:      98 secs Hits: 2
          Action Taken: 0
3      Total Hash:      1718618 Hash String: /test.txt
4      IPs gathered:
5          1) 10.217.253.0
6      Active Transactions: 0
7 Done
8 >
```

7. Repeat the query and check the limit identifier statistics again to verify that the statistics are being updated correctly.

Examples of rate-based policies

September 10, 2024

This topic lists some examples of rate-based policies.

Limit the number of requests from a URL

Run the following commands to limit the number of requests per second from a URL:

```
1 add stream selector ipStreamSelector http.req.url "client.ip.src"
2
3 add ns limitIdentifier ipLimitIdentifier -threshold 4 -timeSlice 1000 -
  mode request_rate -limitType smooth -selectorName ipStreamSelector
4
5 add responder action myWebSiteRedirectAction redirect "\"http: //www.
  mycompany .com/\\""
6
```



```
7 add responder policy ipLimitResponderPolicy "http.req.url.contains(\"
  myasp.asp\") && sys.check_limit(\"ipLimitIdentifier\")"
  myWebSiteRedirectaction
8
9 bind responder global ipLimitResponderPolicy 100 END -type default
```

Cache a response for the request URL

Run the following commands to cache a response if the request URL rate is more than 5 per 2000 milliseconds:

```
1 add stream selector cacheStreamSelector http.req.url
2
3 add ns limitIdentifier cacheRateLimitIdentifier -threshold 5 -timeSlice
  2000 -selectorName cacheStreamSelector
4
5 add cache policy cacheRateLimitPolicy -rule "http req.method.eq(get) &&
  sys.check_limit \"cacheRateLimitIdentifier\"" -action cache
6
7 bind cache global cacheRateLimitPolicy -priority 10
```

Drop a connection based on cookies

Run the following commands to drop a connection based on the cookies when the following conditions are met:

- cookies are received in requests from `www.mycompany.com`
- the number of requests are more than the rate limit

```
1 add stream selector reqCookieStreamSelector "http req.cookie «value(\"
  mycookie\")\" \"client.ip.src.subnet(24)\"
2
3 add ns limitIdentifier myLimitIdentifier -Threshold 2 -timeSlice 3000 -
  selectorName reqCookieStreamSelector
4
5 add responder action sendRedirectUrl redirect '\"http://www.mycompany.
  com\" + http.req.url' -bypassSafetyCheck YES
6
7 add responder policy rateLimitCookiePolicy "http.req.url.contains(\"
  www.yourcompany.com\") && sys check_limit(\"myLimitIdentifier\")"
  sendRedirectUrl
```

Drop a DNS packet from a particular IP address

Run the following commands to drop a DNS packet if the requests from a particular client IP address and DNS domain are more than the rate limit:

```

1 add stream selector dropDNSStreamSelector client udp.dns.domain client.
  ip.src
2
3 add ns limitIdentifier dropDNSRateIdentifier -timeslice 20000 -mode
  request_rate -selectorName dropDNSStreamSelector -maxBandwidth 1 -
  trapsintimeslice 20
4
5 add dns policy dnsDropOnClientRatePolicy "sys check_limit (\
  dropDNSRateIdentifier\)" -drop yes

```

Limit the number of HTTP requests from the same host

Run the following commands to restrict the number of HTTP requests that:

- Originate from the same host
- Use a subnet mask of 32
- Are directed to the same destination IP address

```

1 add stream selector ipv6_sel CLIENT.IPv6.SRC.SUBNET(32) CLIENT.IPv6.DST
  HTTP.REQ.URL
2
3 add ns limitIdentifier ipv6_id -timeSlice 20000 -selectorName ipv6_sel
4
5 add lb vserver ipv6_vip HTTP 3ffe::209 80 -persistenceType NONE -
  cltTimeout 180
6
7 add responder action redirect_page redirect "\http://redirectpage.com
  /\\"
8
9 add responder policy ipv6_resp_pol "SYS.CHECK_LIMIT(\\"ipv6_id\\""
  redirect_page
10
11 bind responder global ipv6_resp_pol 5 END -type DEFAULT

```

Sample use cases for rate-based policies

December 22, 2023

The following scenarios describe two uses of rate-based policies in global server load balancing (GSLB):

- The first scenario describes the use of a rate-based policy that sends traffic to a new data center if the rate of DNS requests exceed 1000 per second.
- In the second scenario, if more than five DNS requests arrive for a local DNS (LDNS) client within a particular period, the additional requests are dropped.

Redirecting Traffic on the Basis of Traffic Rate

In this scenario, you configure a proximity-based load balancing method, and a rate-limiting policy that identifies DNS requests for a particular region. In the rate-limiting policy, you specify a threshold of 1000 DNS requests per second. A DNS policy applies the rate limiting policy to DNS requests for the region “Europe.GB.17.London.UK-East.ISP-UK.” In the DNS policy, DNS requests that exceed the rate limiting threshold, starting with request 1001 and continuing to the end of the one-second interval, are to be forwarded to the IP addresses that are associated with the region “North America.US.TX.Dallas.US-East.ISP-US.”

The following configuration demonstrates this scenario:

```
1 add stream selector DNSSelector1 client.udp.dns.domain
2
3 add ns limitIdentifier DNSLimitIdentifier1 -threshold 5 -timeSlice 1000
  -selectorName DNSSelector1
4
5 add dns policy DNSLimitPolicy1 "client.ip.src.matches_location(\"Europe
  .GB.17.London.*.*\") &&
6 sys.check_limit(\"DNSLimitIdentifier1\")" -preferredLocation "North
  America.US.TX.Dallas.*.*"
7
8 bind dns global DNSLimitPolicy1 5
```

Dropping DNS Requests on the Basis of Traffic Rate

In the following example of global server load balancing, you configure a rate limiting policy that permits a maximum of five DNS requests in a particular interval, per domain, to be directed to an LDNS client for resolution. Any requests that exceed this rate are dropped. This type of policy can help protect the NetScaler from resource exploitation. For example, in this scenario, if the time to live (TTL) for a connection is five seconds, this policy prevents the LDNS from requerying a domain. Instead, it uses data that is cached on the NetScaler.

```
1 add stream selector LDNSSelector1 client.udp.dns.domain client.ip.src
2
3 add ns limitIdentifier LDNSLimitIdentifier1 -threshold 5 -timeSlice
  1000 -selectorName LDNSSelector1
4
5 add dns policy LDNSPolicy1 "client.udp.dns.domain.contains(\".\") &&
  sys.check_limit(\"LDNSLimitIdentifier1\")" -drop YES
6
7 bind dns global LDNSPolicy1 6
8
9 show gslb vserver gvip
10
11 gvip - HTTP      State: UP
12 Last state change was at Mon Sep  8 11:50:48 2008 (+711 ms)
```

```
13 Time since last state change: 1 days, 02:55:08.830
14 Configured Method: STATICPROXIMITY
15 BackupMethod: ROUNDRBIN
16 No. of Bound Services : 3 (Total)          3 (Active)
17 Persistence: NONE          Persistence ID: 100
18 Disable Primary Vserver on Down: DISABLED          Site Persistence: NONE
19 Backup Session Timeout: 0
20 Empty Down Response: DISABLED
21 Multi IP Response: DISABLED Dynamic Weights: DISABLED
22 Cname Flag: DISABLED
23 Effective State Considered: NONE
24 1.      site11_svc(10.100.00.00: 80)- HTTP State: UP      Weight: 1
25 Dynamic Weight: 0          Cumulative Weight: 1
26 Effective State: UP
27 Threshold : BELOW
28 Location: Europe.GB.17.London.UK-East.ISP-UK
29 2.      site12_svc(10.101.00.100: 80)- HTTP State: UP      Weight: 1
30 Dynamic Weight: 0          Cumulative Weight: 1
31 Effective State: UP
32 Threshold : BELOW
33 Location: North America.US.TX.Dallas.US-East.ISP-US
34 3.      site13_svc(10.102.00.200: 80)- HTTP State: UP      Weight: 1
35 Dynamic Weight: 0          Cumulative Weight: 1
36 Effective State: UP
37 Threshold : BELOW
38 Location: North America.US.NJ.Salem.US-Mid.ISP-US
39 4.      www.gslbindia.com          TTL: 5 secn
40 Cookie Timeout: 0 min   Site domain TTL: 3600 sec
41 Done
```

Rate limiting for traffic domains

March 20, 2024

You can configure rate limiting for traffic domains. The following expression in the NetScaler expressions language identifies the traffic associated with traffic domains.

- `client.traffic_domain.id`

You can configure rate limiting for traffic associated with a particular traffic domain, a set of traffic domains, or all traffic domains.

For more information on how to configure IP rate limiting with NetScaler, see the following video:

[This is an embedded video. Click the link to watch the video](#)

For configuring rate limiting for traffic domains, you perform the following steps on a NetScaler appliance by using the configuration utility or the NetScaler command line:

1. Configure a stream selector that uses the `client.traffic_domain.id` expression for identifying the traffic, associated with traffic domains, to be rate limited.
2. Configure a rate limit identifier that specifies parameters such as maximum threshold for traffic to be rate limited. You also associate a stream selector to the rate limiter in this step.
3. Configure an action that you want to associate with the policy that uses the rate limit identifier.
4. Configure a policy that uses the `sys.check_limit` expression prefix to call the rate limit identifier, and associate the action with this policy.
5. Bind the policy globally.

Consider an example in which two traffic domains, with IDs 10 and 20, are configured on NetScaler NS1. On traffic domain 10, LB1-TD-1 is configured to load balance servers S1 and S2; LB2-TD1 is configured to load balance servers S3 and S4.

On traffic domain 20, LB1-TD-2 is configured to load balance servers S5 and S6; LB2-TD2 is configured to load balance servers S7 and S8.

The following table lists some examples of rate limiting policies for traffic domains in the example setup.

Purpose	CLI commands
Limit the number of requests to 10 per second for each of the traffic domains.	<pre>add stream selector tdratelimit-1 CLIENT.TRAFFIC_DOMAIN.ID add ns limitIdentifier limitidf-1 -threshold 10 -selectorName tdratelimit-1 -trapsInTimeSlice 0 add responder policy ratelimit-pol "sys.check_limit(\\"limitidf-1\\")"DROP bind responder global ratelimit-pol 1</pre>
Limit the number of requests to 5 per client per second for each of the traffic domains.	<pre>add stream selector tdandclientip CLIENT.IP.SRC,CLIENT.TRAFFIC_DOMAIN.ID add ns limitIdentifier td_limitidf -threshold 5 -selectorName tdandclientip -trapsInTimeSlice 5 add responder policy tdratelimit-pol "sys.check_limit(\\"td_limitidf\\")"DROP bind responder global tdratelimit-pol 2</pre>

Purpose	CLI commands
Limit the number of requests sent for a particular traffic domain (for example traffic domain 10) to 30 requests every 3 seconds.	<pre>add stream selector tdratelimit CLIENT.TRAFFIC_DOMAIN.ID add ns limitIdentifier td10_limitidf -threshold 30 -timeSlice 3000 -selectorName tdratelimit -trapsInTimeSlice 5 add responder policy td10ratelimit "client.traffic_domain.id==10 && sys.check_limit(\"td10_limitidf\")"DROP bind responder global td10ratelimit 3</pre>
Limit the number of connections to 5 per client per second for a particular traffic domain (for example traffic domain 20).	<pre>add stream selector tdandclientip CLIENT.IP.SRC CLIENT.TRAFFIC_DOMAIN.ID add ns limitIdentifier td20_limitidf -threshold 5 -mode CONNECTION -selectorName tdandclientip -trapsInTimeSlice 5 add responder policy td20_ratelimit "client.traffic_domain.id==20 && sys.check_limit(\"td20_limitidf\")"DROP bind responder global td20_ratelimit 4</pre>

Configure rate limit at packet level

December 6, 2021

You can configure a stream selector and a responder policy to collect statistics at the packet level flowing through all the connections identified by the selector. If the number of packets per second exceed the configured threshold, the policy applies the configured action (RESET or DROP). You can configure these policies for all types of virtual servers. Packets of all sizes are considered.

To configure rate limiting at packet level, perform the following tasks

1. Enable load balancing
2. Add stream selector
3. Add stream identifier
4. Add responder policy
5. Add load balancing virtual server
6. Bind responder policy

To enable load balancing feature

At the command prompt, type:

```
1 enable ns feature lb
```

To add a stream selector

At the command prompt, type:

```
1 add stream selector packetlimitselector client.ip.src client.tcp.  
  srcport client.ip.dst client.tcp.dstport
```

To add a stream identifier

At the command prompt, type:

```
1 add stream identifier packetlimitidentifier packetlimitselector -  
  interval 1
```

To enable tracking of ACK only packets

At the command prompt, type:

```
1 set stream identifier packetlimitidentifier - trackAckOnlyPackets  
  ENABLED
```

To add a responder policy

At the command prompt, type:

```
1 add responder policy packet_rate_sessionpolicy "ANALYTICS.STREAM(\"  
  packetlimitidentifier\").COLLECT_STATS(\"PACKET_LIMIT\", <  
  max_threshold_PPS>, ACTION, 0/1)" NOOP
```

Where,

- <max_threshold_PPS> is the maximum number of packets allowed through the connection per second.
- ACTION can be DROP or RESET.
- 0 or 1 represents the limit type; 0 represents the BURSTY limit type and 1 represents the SMOOTH limit type.

Example:

```
1 add responder policy packet_rate_sessionpolicy "ANALYTICS.STREAM(\"
  packetlimitidentifier\").COLLECT_STATS(\"PACKET_LIMIT\", 40, RESET,
  0)" NOOP
```

To add a load balancing virtual server

At the command prompt, type:

```
1 add lb vserver <name> <serviceType> <ip> <port>
2
3 add lb vserver Vserver-lb-1 HTTP 10.102.20.200 80
```

To bind a responder policy

After the selector and the responder policy are configured, the policy can be bound globally or to the specific virtual server.

At the command prompt, type either of the following commands:

```
1 bind responder global <policyName> <priority> [<gotoPriorityExpression
  >] [-type <type>] [-invoke (<labelType> <labelName>)]
```

OR

```
1 bind lb vserver <name>@ (-policyName <string>@ [-priority <
  positive_integer>])
```

Examples:

```
1 bind responder global packet_rate_sessionpolicy 101 END -type
  REQ_DEFAULT
2
3 bind responder global packet_rate_sessionpolicy 102 END -type
4
5 bind lb vserver v1 -policyname packet_rate_sessionpolicy -priority 10
```

Responder

May 2, 2023

Warning

Filter features using classic policies are deprecated and as an alternative Citrix recommends you to use the rewrite and responder features with advanced policy infrastructure.

Today's complex Web configurations often require different responses to HTTP requests that appear, on the surface, to be similar. When users request a webpage, you may want to provide a different page depending on the user geographical location, browser specification, or languages the browser accepts and the order of preference. You might want to drop the connection if the request is coming from an IP range that has been generating DDoS attacks or initiating hacking attempts.

Responder supports protocols such as TCP, DNS (UDP), and HTTP. With responder enabled on your appliance, server responses can be based on who sends the request, where it is sent from, and other criteria with security and system management implications. The feature is simple and quick to use. By avoiding the invocation of more complex features, it reduces CPU cycles and time spent in handling requests that do not require complex processing.

For handling sensitive data such as financial information, if you want to ensure that the client uses a secure connection to browse a site, you can redirect the request to a secure connection by using <https://> instead of <http://>.

To use a responder, do the following:

- Enable a responder feature on the appliance.
- Configure a responder action. The action can be to generate a custom response, redirect a request to a different webpage, or reset a connection.
- Configure a responder policy. The policy determines the requests (traffic) on which an action has to be taken.
- Bind each policy to a bind point put it into effect. A bind point refers to an entity at which the NetScaler appliance examines the traffic to see if it matches a policy. For example, a bind point can be a load balancing virtual server.

You can specify a default action for requests that do not match any policy, and you can bypass the safety check for actions that would otherwise generate error messages.

The Rewrite feature of NetScaler helps in rewriting some information in the requests or responses handled by NetScaler. The following section shows some differences between the two features.

Comparison between Rewrite and Responder options

The main difference between the rewrite feature and the responder feature is as follows:

Responder cannot be used for response or server-based expressions. Responder can be used only for the following scenarios depending on client parameters:

- Redirecting an HTTP request to new websites or webpages
- Responding with some custom response
- Dropping or resetting a connection at request level

If there is a responder policy, the NetScaler examines the request from the client, takes action according to the applicable policies, sends the response to the client, and closes the connection with the client.

If there is a rewrite policy, the NetScaler examines the request from the client or response from the server, takes action according to the applicable policies, and forwards the traffic to the client or the server.

In general, it is recommended to use a responder if you want the appliance to reset or drop a connection based on a request-based parameter. Use a responder to redirect traffic, or respond with custom messages. Use rewrite for manipulating data on HTTP requests and responses.

Enable the responder feature

December 21, 2023

To use the Responder feature, you must first enable it.

To enable the responder feature by using the NetScaler CLI:

At the command prompt, type the following commands to enable the responder feature and verify the configuration:

- `enable ns feature <feature>`
- `show ns feature`

Example:

```

1 enable ns feature Responder
2 Done
3 > show ns feature
4
5         Feature                Acronym                Status
6         -----                -
7 1)    Web Logging              WL                     ON
8 2)    Surge Protection         SP                     ON
9      .
10     .
11     .
12 19)   Responder                RESPONDER              ON
13 20)   NetScaler Push          push                   OFF
14 Done
  
```

To enable the responder feature by using the GUI:

1. In the navigation pane, expand **System**, and then click **Settings**.
2. In the details pane, under **Modes** and **Features**, click **Change advanced features**.
3. In the **Configure Advanced Features** dialog box, select the **Responder** check box, and then click **OK**.
4. In the **Enable/Disable Feature(s)?** dialog box, click **YES**. A message appears in the status bar, stating that the feature has been enabled.

Configure a responder action

December 22, 2023

After enabling the responder feature, you must configure one or more actions for handling requests. The responder supports the following types of actions:

- **Respond with.** Sends the response defined by the Target expression without forwarding the request to a web server. (The NetScaler appliance substitutes for and acts as a web server.) Use this type of action to manually define a simple HTML-based response. Normally the text for a Respond with action consists of a web server error code and brief HTML page.
- **Respond with SQL OK.** Sends the designated SQL OK response defined by the Target expression. Use this type of action to send an SQL OK response to an SQL query.
- **Respond with SQL Error.** Sends the designated SQL Error response defined by the Target expression. Use this type of action to send an SQL Error response to an SQL query.
- **Respond with HTML page.** Sends the designated HTML page as the response. You can choose from a drop-down list of HTML pages that were previously uploaded, or upload a new HTML page. Use this type of action to send an imported HTML page as the response. The appliance responds with a custom header in the responsewithhtmlpage responder action. You can configure up to eight custom headers. The imported HTML page is stored in the `/var/download/responder` directory.
- **Redirect.** Redirects the request to a different webpage or web server. A Redirect action can redirect requests originally sent to a “dummy” website that exists in DNS, but for which there is no actual web server, to an actual website. It can also redirect search requests to an appropriate URL. Normally, the redirection target for a Redirect action consists of a complete URL.

Configure a responder action by using the CLI:

Displays the current settings for the specified responder action. If no action name is provided, display a list of all responder actions currently configured on the NetScaler appliance, with abbreviated settings.

At the command prompt, type the following commands to configure a responder action and verify the configuration:

- `add responder action <name> <type> <target>`
- `show responder action`

Parameters:

- **Name.** Name of the responder action. Maximum Length: 127
- **type.** Type of responder action. It can be: (respondwith).
- **target.** An expression specifying what to respond with.
- **htmlpage.** Option specifying to respond with an html page.
- **hits.** The number of times the action has been taken.
- **referenceCount.** The number of references to the action.
- **undefHits.** The number of times the action resulted in UNDEF.
- **comment.** Any type of information about this responder action.
- **builtin.** Flag to determine whether responder action is built in or not.

Example:

```
1 Create a responder action that displays a " Not Found " error page for
  URLs that do not exist:
2
3 > add responder action act404Error respondwith "HTTP/1.1 404 Not Found
  \r\n\r\n"+ HTTP.REQ.URL.HTTP_URL_SAFE + " does not exist on the web
  server."
4 Done
5
6 > show responder action
7
8 1) Name: act404Error
9 Operation: respondwith
10 Target: "HTTP/1.1 404 Not Found" + HTTP.REQ.URL.HTTP_URL_SAFE + " does
  not exist on the web server."
11 Hits: 0
12 Undef Hits: 0
13 Action Reference Count: 0
14 Done
15
16 Create a responder action that displays a " Not Found " error page for
  URLs that do not exist:
```

```
17
18 add responder action act404Error respondWith "HTTP/1.1 404 Not Found\r\n\r\n"+ HTTP.REQ.URL.HTTP_URL_SAFE + " does not exist on the web server."
19 Done
20 > show responder action
21
22 1) Name: act404Error
23 Operation: respondwith
24 Target: "HTTP/1.1 404 Not Found" + HTTP.REQ.URL.HTTP_URL_SAFE + " does not exist on the web server."
25 Hits: 0
26 Undef Hits: 0
27 Action Reference Count: 0
28 Done
```

Modify an existing responder action by using the CLI:

At the command prompt, type the following command to modify an existing responder action and verify the configuration:

- `set responder action <name> -target <string>`
- `show responder action`

Example:

```
1 set responder action act404Error -target "HTTP/1.1 404 Not Found\r\n\r\n"+ HTTP.REQ.URL.HTTP_URL_SAFE + " does not exist on the web server."
2 Done
3 > show responder action
4
5 1) Name: act404Error
6 Operation: respondwith
7 Target: "HTTP/1.1 404 Not Found" + HTTP.REQ.URL.HTTP_URL_SAFE + " does not exist on the web server."
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done
```

Remove a responder action by using the CLI:

At the command prompt, type the following command to remove a responder action and verify the configuration:

- `rm responder action <name>`
- `show responder action`

Example:

```
1 rm responder action act404Error
```

```
2 Done
3
4 > show responder action
5 Done
```

Add custom headers in `responsewithhtmlpage` responder action by using the CLI:

A NetScaler appliance can now respond with custom headers in the `responsewithhtmlpage` responder action. You can configure up to eight custom headers. Previously, the appliance responded only with `Content-type: text/html` and `Content-Length: <value>` static headers.

Note:

In the custom header configuration, you can also over-write the “Content-Type” header value.

At the command prompt, type the following command:

```
add responder action <name> <type> (<target> | <htmlpage>) [-comment
<string>] [-responseStatusCode <positive_integer>] [-reasonPhrase <
expression>] [-headers <name(value)> ...]
```

Where,

name: Name for the responder action. Must begin with a letter, number, or the underscore character (_), and must contain only letters, numbers, and the hyphen (-), period (.), hash (#), space (), at (@), equals (=), colon (:), and underscore characters. Can be changed after the responder policy is added.

Type: Type of responder action. Available settings function as follows:

1. **respondwith <target>** - Respond to the request with the expression specified as the target.
2. **respondwithhtmlpage** - Respond to the request with the uploaded HTML page object specified as the target.
3. **redirect** - Redirect the request to the URL specified as the target.
4. **sqlresponse_ok** - Send an SQL OK response.
5. **sqlresponse_error** - Send an SQL ERROR response. This is a mandatory argument. Possible values: `noop`, `respondwith`, `redirect`, `responsewithhtmlpage`, `sqlresponse_ok`, `sqlresponse_error`

Target: Expression specifying what to respond with. Typically a URL for redirect policies or a default-syntax expression. In addition to NetScaler default-syntax expressions that refer to information in the request, a string builder expression can contain text and HTML, and simple escape codes that define new lines and paragraphs. Enclose each string builder expression element (either a NetScaler default-syntax expression or a string) in double quotation marks. Use the plus (+) character to join the elements.

htmlpage: For `respondwithhtmlpage` policies, name of the HTML page object to use as the response. You must first import the page object. Maximum Length: 31

Comment: Any type of information about this responder action. Maximum Length: 255

responseStatusCode: HTTP response status code, for example 200, 302, 404, and so forth The default value for the `redirect` action type is 302 and for `respondwithhtmlpage` is 200 Minimum value: 100 Maximum value: 599

reasonPhrase: Expression specifying the reason phrase of the HTTP response. The reason phrase may be a string literal with quotes or a PI expression. For example: `"Invalid URL: "+ HTTP.REQ.URL` Maximum Length: 8191

Headers: One or more headers to insert into the HTTP response. Each header is specified as `"name(expr),"` where `expr` is an expression that is evaluated at runtime to provide the value for the named header. You can configure a maximum of eight headers for a responder action.

Configure a responder action by using the GUI:

1. Navigate to **AppExpert > Responder > Actions**.
2. In the details pane, do one of the following:
 - To create an action, click **Add**.
 - To modify an existing action, select the action, and then click **Open**.
3. Click **Create** or **OK**, depending on whether you are creating an action or modifying an existing action.
4. Click **Close**. A message appears in the status bar, stating that the feature has been enabled.
5. To delete a responder action, select the action, and then click **Remove**. A message appears in the status bar, stating that the feature has been disabled.

Add an expression by using the **Add Expression** dialog box

1. In the **Create Responder Action** or **Configure Responder Action** dialog box, click **Add**.
2. In the **Add Expression** dialog box, in the first list box choose the first term for your expression.
 - HTTP. The HTTP protocol. Choose this if you want to examine some aspect of the request that pertains to the HTTP protocol.
 - SYS. One or more protected websites. Choose this if you want to examine some aspect of the request that pertains to the recipient of the request.
 - CLIENT. The computer that sent the request. Choose this if you want to examine some aspect of the sender of the request.
 - ANALYTICS. The analytics data associated with the request. Choose this if you want to examine request metadata.

- SIP. A SIP request. Choose this if you want to examine some aspect of a SIP request. When you make your choice, the rightmost list box lists appropriate terms for the next part of your expression.
3. In the second list box, choose the second term for your expression. The choices depend upon which choice you made in the previous step, and are appropriate to the context. After you make your second choice, the Help window below the Construct Expression window (which was blank) displays help describing the purpose and use of the term you just chose.
 4. Continue choosing terms from the list boxes that appear to the right of the previous list box, or typing strings or numbers in the text boxes that appear to prompt you to enter a value, until your expression is finished.

Configuring the Global HTTP Action

You can configure the global HTTP action to invoke a responder action when an HTTP request times out. To configure this feature, you must first create the responder action that you want to invoke. Then, configure the global HTTP timeout action to respond to a timeout with that responder action.

Configure the global HTTP action by using the CLI:

At the command prompt, type the following command:

- `set ns httpProfile -reqTimeoutAction <responder action name>`
- `save ns config`

For `<responder action name>`, replace the name of the responder action.

Configure an HTML page import

When a NetScaler appliance responds with a custom message, we can respond with an HTML file. You can import the file using the `import responder htmlpage` command and then use this file in `add responder action <act name> respondwithhtmlpage <file name>` command. You can also import the file through the NetScaler GUI. You can import a desired HTML page into the appliance folder and upload the page during responder run time.

Import an HTML page by using the CLI

At the command prompt, type:

```
import responder htmlpage [<src>] <name> [-comment <string>] [-  
overwrite] [-CAcertFile <string>]
```


Example:

```
import responder htmlpage http://www.example.com/page.html my-responder  
-page -CAcertFile my_root_ca_cert
```

Where,

A CA certificate is used for verifying the client certificate. The certificate has to be imported using the `import ssl certfile` CLI command or equivalent through an API or GUI. If a certificate name is not configured, then default root CA certificates are used for the certificate verification.

Import an HTML page from the local filesystem

You can also import an HTML page from the local filesystem. To import, copy the file using SCP or any other way to the `/var/tmp/` directory and then import it using the “local:” keyword. For example:

```
import responder htmlpage local:my_local_file.html my_local_file
```

Where `my_local_file.html` is present at “`/var/tmp/`” directory.

Note

“local:” keyword only searches the file in the “`/var/tmp/`” directory. For non-default partitions, you need to copy the file into the partition specific tmp directory that is present at `/var/partitions/<partition name>/tmp`.

Import an HTML page by using the GUI

1. Navigate to **AppExpert > Responder > HTML Page Imports**.
2. In the **Responder HTML Imports** details pane, click **Add**.
3. In the **HTML Page Import Object** page, set the following parameters:
 - a) Name. Name of the HTML page.
 - b) Import From. Imported from file, text, or text.
 - c) URL. Select to enter the URL location of the HTML file.
 - d) File. Select the HTML file from the appliance directory.
 - e) Text. Select the HTML file as a text.
4. Click **Continue**.
5. Verify responder HTML page details.
6. Click **Done**.

HTML Page Import Object

View Responder Details

Name Test-HTML-page-import	Import From URL
-------------------------------	---------------------------

File Contents

CA Certificate File
 >

Comment
 ⓘ

File Contents*

To edit an HTML page, you can select a file and click **Edit Responder HTML Page File** from the **Select Action** drop-down list.

[AppExpert](#) / [Responder](#) / Responder HTML Pages

Responder HTML Pages 1

Add
Edit & Update
Delete

Select Action ▾

Select Action
Edit Responder HTML Page File

	NAME	
<input checked="" type="checkbox"/>	qwdqwe	qwdqwe.html
<input type="checkbox"/>	rrrr	rrrr.html
<input type="checkbox"/>	lejin	lejin.html
<input type="checkbox"/>	page1	page1.html
<input type="checkbox"/>	test_p1	test_p1.html
Total 1		

Configure a responder policy

October 3, 2024

After you configure a responder action, you must next configure a responder policy to select the requests to which the NetScaler appliance should respond. A responder policy is based on a rule, which consists of one or more expressions. The rule is associated with an action, which is performed if a request matches the rule.

Note:

For creating and managing responder policies, the GUI provides assistance that is not available at the CLI.

Configure a responder policy by using the CLI

At the command prompt, type:

- `add responder policy <name> <expression> <action> [<undefaction>]-appFlowaction <actionName>`
- `show responder policy <name>`

Example:

```
1 > add responder policy policyThree "CLIENT.IP.SRC.IN_SUBNET
   (222.222.0.0/16)" RESET
2   Done
3
4 > show responder policy policyThree
5
6     Name: policyThree
7     Rule: CLIENT.IP.SRC.IN_SUBNET(222.222.0.0/16)
8     Responder Action: RESET
9     UndefAction: Use Global
10    Hits: 0
11    Undef Hits: 0
12   Done
```

Modify an existing responder policy by using the CLI

At the command prompt, type:

- `set responder policy <name> [-rule <expression>] [-action <string>] [-undefAction <string>]`
- `show responder policy <name>`

Remove a responder policy by using the CLI

At the command prompt, type:

- `rm responder policy <name>`
- `show responder policy`

Example:

```
1 >rm responder policy pol404Error
2   Done
3
4 > show responder policy
5   Done
```

Configure a responder policy by using the GUI

1. Navigate to **AppExpert > Responder > Policies**.
2. In the details pane, do one of the following:
 - To create a policy, click **Add**.
 - To modify an existing policy, select the policy, and then click **Open**.
3. Click **Create** or **OK**, depending on whether you want to create a policy or modify an existing policy.
4. Click **Close**. A message appears in the status bar, stating that the feature has been configured.

Note:

The HTTP.REQ based expressions don't work with the SSL_BRIDGE protocol type.

Bind a responder policy

December 21, 2023

To put a policy into effect, you must bind it either globally, so that it applies to all traffic that flows through the NetScaler, or to a specific virtual server, so that the policy applies only to requests whose destination IP address is the VIP of that virtual server.

When you bind a policy, you assign a priority to it. The priority determines the order in which the policies you define are evaluated. You can set the priority to any positive integer.

In the NetScaler operating system, policy priorities work in reverse order—the higher the number, the lower the priority. For example, if you have three policies with priorities of 10, 100, and 1000, the policy assigned a priority of 10 is performed first, then the policy assigned a priority of 100, and finally the policy assigned an order of 1000. The responder feature implements only the first policy that a request matches, not any additional policies that it might also match, so policy priority is important for getting the results you intend.

You can leave yourself plenty of room to add other policies in any order, and still set them to evaluate in the order you want, by setting priorities with intervals of 50 or 100 between each policy when you globally bind it. You can then add more policies at any time without having to reassign the priority of an existing policy.

For additional information about binding policies on the NetScaler, see [Policies and Expressions](#).

Note:

Responder policies are bound to TCP-based virtual servers.

To globally bind a responder policy by using the NetScaler command line:

At the command prompt, type the following command to globally bind a responder policy and verify the configuration:

- `bind responder global <policyName> <priority> [<gotoPriorityExpression> [-type <type>] [-invoke (<labelType> <labelName>)]`
- `show responder global`

Example:

```
1 > bind responder global poliError 100
2 Done
3 > show responder global
4 1)      Global bindpoint: REQ_DEFAULT
5         Number of bound policies: 1
6
7 Done
```

To bind responder policy to a specific virtual server by using the NetScaler command line:

At the command prompt, type:

- `bind lb vserver <name> -policyname <policy_name> -priority <priority>`
- `show lb vserver vs-loadbal <name>`

Example:

```
1 > bind lb vserver vs-loadbal -policyName policyTwo -priority 100
2 Done
3 > show lb vserver
4 1)      vs-loadbal (10.102.29.20:80) - HTTP      Type: ADDRESS
5         State: OUT OF SERVICE
6         Last state change was at Wed Aug 19 09:05:47 2009 (+211 ms)
7         Time since last state change: 2 days, 00:58:03.260
8         Effective State: DOWN
9         Client Idle Timeout: 180 sec
10        Down state flush: ENABLED
```

```

11      Disable Primary Vserver On Down : DISABLED
12      Port Rewrite : DISABLED
13      No. of Bound Services : 0 (Total)          0 (Active)
14      Configured Method: LEASTCONNECTION
15      Mode: IP
16      Persistence: NONE
17      Vserver IP and Port insertion: OFF
18      Push: DISABLED  Push VServer:
19      Push Multi Clients: NO
20      Push Label Rule: none
21  2)   vs-cont-sw (0.0.0.0:0) - TCP      Type: ADDRESS
22      State: DOWN
23      Last state change was at Wed Aug 19 10:03:46 2009 (+213 ms)
24      Time since last state change: 2 days, 00:00:04.260
25      Effective State: DOWN
26      Client Idle Timeout: 9000 sec
27      Down state flush: ENABLED
28      Disable Primary Vserver On Down : DISABLED
29      No. of Bound Services : 0 (Total)          0 (Active)
30      Configured Method: LEASTCONNECTION
31      Mode: IP
32      Persistence: NONE
33      Connection Failover: DISABLED
34      Done

```

To globally bind a responder policy by using the GUI:

1. Navigate to **AppExpert > Responder > Policies**.
2. On the **Responder Policies** page, select a responder policy, and then click **Policy Manager**.
3. In the **Responder Policy Manager** dialog box Bind Points menu, select Default Global.
4. Click **Insert Policy** to insert a new row and display a drop-down list of all unbound responder policies.
5. Click one of the policies on the list. That policy is inserted into the list of globally bound responder policies.
6. Click **Apply Changes**.
7. Click **Close**. A message appears in the status bar, stating that the configuration has been successfully completed.

To bind a responder policy to a specific virtual server by using the GUI:

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. On the **Load Balancing Virtual Servers** page, select the virtual server to which you want to bind the responder policy, and then click **Open**.
3. In the **Configure Virtual Server** (Load Balancing) dialog box, select the **Policies** tab, which displays a list of all policies configured on your NetScaler appliance.
4. Select the check box next to the name of the policy you want to bind to this virtual server.
5. Click **OK**. A message appears in the status bar, stating that the configuration has been successfully completed.

Set the default action for a responder policy

December 21, 2023

The NetScaler appliance generates an undefined event (UNDEF event) when a request does not match a responder policy. The appliance then performs the default action assigned to undefined events. By default, the action forwards the request to the next feature such as load balancing, content filtering and so forth. This default behavior ensures the requests do not require any specific responder action to be sent to your Web servers. Also, the clients receive access to the content that they have requested.

If one or more websites your NetScaler appliance protects receive a significant number of invalid or malicious requests, however, you might want to change the default action to either reset the client connection or drop the request. In this type of configuration, you would write one or more responder policies that would match any legitimate requests, and simply redirect those requests to their original destinations. Your NetScaler appliance would then block any other requests as specified by the default action you configured.

You can assign any one of the following actions to an undefined event:

- **NOOP.** The NOOP action aborts responder processing but does not alter the packet flow. So that the appliance continues to process requests that do not match any responder policy, and eventually forwards them to the requested URL unless another feature intervenes and blocks or redirects the request. This action is appropriate for normal requests to your Web servers and is the default setting.
- **RESET.** If the undefined action is set to RESET, the appliance resets the client connection, informing the client that it must re-establish its session with the Web server. The action is appropriate for repeat requests for webpages that do not exist, or for connections that might be attempts to hack or probe your protected websites.
- **DROP.** If the undefined action is set to DROP, the appliance silently drops the request without responding to the client in any way. This action is appropriate for requests that appear to be part of a DDoS attack or other sustained attack on your servers.

Note: UNDEF events are triggered only for client requests. No UNDEF events are triggered for responses.

To set the undefined action by using the NetScaler command line:

At the command prompt, type the following command to set the undefined action and verify the configuration:

- `set responder param -undefAction (RESET|DROP|NOOP)[-timeout < msecs>]`

- `show responder param`

Where,

timeout - Maximum time in milliseconds to allow for processing all the policies and their selected actions without interruption. If the timeout is reached then the evaluation causes an UNDEF to be raised and no further processing is performed.

Minimum value: 1

Maximum value: 5000

Example:

```
1 >set responder param -undefAction RESET -timeout 3900
2   Done
3 > show responder param
4 Action Name: RESET
5 Timeout: 3900
6   Done
7 >
```

Set the undefined action by using the GUI

1. Navigate to **AppExpert > Responder**, and then under **Settings**, click the **Change Responder Settings** link.
2. In the **Set Responder Params** page, set the following parameters:
 - a) Global Undefined-Result Action. Undefined-result action is preferred in an unhandled processing exception in the responder policies and actions. Select **NOOP**, **RESET**, or **DROP**.
 - b) Timeout. Maximum time in milliseconds to allow for processing all the policies and their selected actions without interruption. If the timeout is reached then the evaluation causes an UNDEF to be raised and no further processing is performed.
3. Click **OK**.

← Configure Responder Params

Global Undefined-Result Action*

NOOP ▼ ⓘ

Note: Undefined-result action is used in case of an unhandled process

Timeout

3900

OK
Close

Responder action and policy examples

December 21, 2023

Responder actions and policies are powerful and complex, but you can get started with relatively simple applications.

Example: Blocking Access from Specified IPs

The following procedures block access to your protected Web site(s) by clients originating from the CIDR 222.222.0.0/16. The responder sends an error message stating that the client is not authorized to access the URL requested.

To block access by using the NetScaler command line:

At the command prompt, type the following commands to block access:

- add responder action act_unauthorized respond with “HTTP/1.1 403 Forbidden\r\n\r\n”+ “Client: “+ CLIENT.IP.SRC + “is not authorized to access URL:”+ “HTTP.REQ.URL.HTTP_URL_SAFE”
- add responder policy pol_un “CLIENT.IP.SRC.IN_SUBNET (222.222.0.0/16)”act_unauthorized
- bind responder global pol_un 10

To block access by using the GUI:

1. In the navigation pane, expand **Responder**, and then click **Actions**.
2. In the details pane, click **Add**.

3. In the **Create Responder Action** dialog box, do the following:
 - a) In the **Name** text box, type `act_unauthorized`.
 - b) Under **Type**, select **Respond with**.
 - c) In the **Target** text area, type the following string: `"HTTP/1.1 403 Forbidden\r\n\r\n"+ "Client: "+ CLIENT.IP.SRC + "is not authorized to access URL:" + HTTP.REQ.URL.HTTP_URL_SAFE`
 - d) Click **Create**, and then click **Close**.

The responder action you configured, named `act_unauthorized`, now appears in the **Responder Actions** page.
4. In the navigation pane, click **Policies**.
5. In the details pane, click **Add**.
6. In the **Create Responder Policy** dialog box, do the following:
 - a) In the **Name** text box, type `pol_unauthorized`.
 - b) Under **Action**, select `act_unauthorized`.
 - c) In the **Expression** window, type the following rule: `CLIENT.IP.SRC.IN_SUBNET(222.222.0.0/16)`
 - d) Click **Create**, then click **Close**.

The responder policy you configured, named `pol_unauthorized`, now appears in the **Responder Policies** page.
7. Globally bind your new policy, `pol_unauthorized`, as described in [Binding a Responder Policy](#).

Example: Redirecting a client to a new URL

The following procedures redirect clients who access your protected Web site(s) from within the CIDR `222.222.0.0/16` to a specified URL.

To redirect clients by using the NetScaler command line:

At the command prompt, type the following commands to redirect clients and verify the configuration:

- `add responder action act_redirect redirect "<http://www.example.com/404.html>"`
- `show responder action act_redirect`
- `add responder policy pol_redirect "CLIENT.IP.SRC.IN_SUBNET(222.222.0.0/16)"act_redirect`
- `show responder policy pol_redirect`
- `bind responder global pol_redirect 10`

Example:

```
1 > add responder action act_redirect redirect `http ://www.example.com
  /404.html `
2 Done
3
```

```
4 > add responder policy pol_redirect "CLIENT.IP.SRC.IN_SUBNET
    (222.222.0.0/16)" act_redirect
5 Done
```

To redirect clients by using the GUI:

1. Navigate to **AppExpert > Responder > Actions**.
2. In the details pane, click **Add**.
3. In the **Create Responder Action** dialog box, do the following:
 - a) In the **Name** text box, type `act_redirect`.
 - b) Under **Type**, select **Redirect**.
 - c) In the **Target** text area, type the following string: `"<http://www.example.com/404.html>"`
 - d) Click **Create**, then click **Close**.

The responder action you configured, named `act_redirect`, now appears in the **Responder Actions** page.
4. In the navigation pane, click **Policies**.
5. In the details pane, click **Add**.
6. In the **Create Responder Policy** dialog box, do the following:
 - a) In the **Name** text box, type `pol_redirect`.
 - b) Under **Action**, select `act_redirect`.
 - c) In the **Expression** window, type the following rule: `CLIENT.IP.SRC.IN_SUBNET(222.222.0.0/16)`
 - d) Click **Create**, then click **Close**.

The responder policy you configured, named `pol_redirect`, now appears in the **Responder Policies** page.
7. Globally bind your new policy, `pol_redirect`, as described in [Binding a Responder Policy](#).

Diameter support for responder

December 21, 2023

The Responder feature now supports the Diameter protocol. You can configure Responder to respond to Diameter requests as it does HTTP and TCP requests. For example, you could configure Responder to respond to requests from a specific Diameter origin with a redirect to a web page enhanced for mobile devices. A number of NetScaler expressions have been added that support examination of the Diameter header and the attribute-value pairs (AVPs). These expressions support lookup of specific AVPs by index, ID or name, examine the information in each AVP, and send an appropriate response.

To configure Responder to respond to a Diameter request:

At the command prompt, type the following commands:

- `add responder action <actname> RESPONDWITH "DIAMETER.NEW_REDIRECT (\\"aaa://host.example.com\\")"`

For <actname>, substitute a name for your new action. The name can consist of from one to 127 characters in length, and can contain letters, numbers, and the hyphen (-) and underscore (_) symbols. For `aaa://host.example.com`, substitute the URL of the diameter host to which you want to redirect connections.

- `add responder policy <polname> "diameter.req.avp(264).value.eq("host1.example.net")" <actname>`

For <polname>, substitute a name for your new policy. As with <actname>, the name can consist of from one to 127 characters in length, and can contain letters, numbers, and the hyphen (-) and underscore (_) symbols. For `host1.example.net`, substitute the name of the originating host of the requests that you want to redirect. For <actname>, substitute the name of the action that you just created.

- `bind lb vserver <vservname> -policyName <polname> -priority <priority> -type REQUEST`

For <vservname>, substitute the name of the load balancing virtual server to which you want to bind the policy. For <polname>, substitute the name of the policy you just created. For <priority>, substitute a priority for the policy.

Example:

To create a Responder action and policy to respond to Diameter requests that originate from “host1.example.net” with a redirect to “host.example.com”, you could add the following action and policy, and bind the policy as shown.

```
1 > add responder action act_resp-dm-redirect RESPONDWITH "DIAMETER.
  NEW_REDIRECT(\\"aaa://host.example.com\\")"
2 Done
3
4 > add responder pol_resp-dm-redirect "diameter.req.avp(264).value.eq(\\"
  host1.example.net\\")" act_resp-dm-redirect
5 Done
6
7 > bind lb vserver vs1 -policyName pol_resp-dm-redirect -priority 10 -
  type REQUEST
8 Done
```

RADIUS support for responder

December 21, 2023

The NetScaler expressions language contains expressions that can extract information from and manipulate RADIUS requests. These expressions enable you to use the Responder feature to respond to RADIUS requests. Your responder policies and actions can use any expression that is appropriate or relevant to a RADIUS request. The available expressions enable you to identify the RADIUS message type, extract any attribute-value pair (AVP) from the connection, and send different responses on the basis of that information. You can also create policy labels that invoke all responder policies for RADIUS connections.

You can use RADIUS expressions to construct simple responses that do not require communication with the RADIUS server to which the request was sent. When a responder policy matches a connection, the NetScaler constructs and sends the appropriate RADIUS response without contacting the RADIUS authentication server. For example, if the source IP address of a RADIUS request is from a subnet that is specified in the responder policy, the NetScaler can reply to that request with an access-reject message, or can simply drop the request.

You can also create policy labels to route specific types of RADIUS requests through a series of policies that are appropriate to those requests.

Note: The current RADIUS expressions do not work with RADIUS IPv6 attributes.

The NetScaler documentation for expressions that support RADIUS assumes familiarity with the basic structure and purpose of RADIUS communications. If you need more information about RADIUS, see your RADIUS server documentation or search online for an introduction to the RADIUS protocol.

Configuring Responder Policies for RADIUS

The following procedure uses the NetScaler command line to configure a responder action and policy, and bind the policy to a RADIUS-specific global bind point.

To configure a Responder action and policy, and bind the policy:

At the command prompt, type the following commands:

- `add responder action <actName> <actType>`
- `add responder policy <polName> <rule> <actName>`
- `bind responder policy <polName> <priority> <nextExpr> -type <bindPoint>` where `<bindPoint>` represents one of the RADIUS-specific global bind points.

RADIUS Expressions for Responder

In a responder configuration, you can use the following NetScaler expressions to refer to various portions of a RADIUS request.

Identifying the Type of Connection:

- `RADIUS.IS_CLIENT`. Returns TRUE if the connection is a RADIUS client (request) message.
- `RADIUS.IS_SERVER`. Returns TRUE if the connection is a RADIUS server (response) message.

Request Expressions:

- `RADIUS.REQ.CODE`. Returns the number that corresponds to the RADIUS request type. A derivative of the `num_at` class. For example, a RADIUS access request would return 1 (one). A RADIUS accounting request would return 4.
- `RADIUS.REQ.LENGTH`. Returns the length of the RADIUS request, including the header. A derivative of the `num_at` class.
- `RADIUS.REQ.IDENTIFIER`. Returns the RADIUS request identifier, a number assigned to each request that allows the request to be matched to the corresponding response. A derivative of the `num_at` class.
- `RADIUS.REQ.AVP(<AVP Code No>).VALUE`. Returns the value of first occurrence of this AVP as a string of type `text_t`.
- `RADIUS.REQ.AVP(<AVP code no>).INSTANCE(instance number)`. Returns the specified instance of the AVP as a string of type `RAVP_t`. A specific RADIUS AVP can occur multiple times in a RADIUS message. `INSTANCE (0)` returns the first instance, `INSTANCE (1)` returns second instance, and so on, up to sixteen instances.
- `RADIUS.REQ.AVP(<AVP code no>).VALUE(instance number)`. Returns the value of specified instance of the AVP as a string of type `text_t`.
- `RADIUS.REQ.AVP(<AVP code no>).COUNT`. Returns the number of instances of a specific AVP in a RADIUS connection, as an integer.
- `RADIUS.REQ.AVP(<AVP code no>).EXISTS`. Returns TRUE if the specified type of AVP exists in the message, or FALSE if it does not.

Response Expressions:

RADIUS response expressions are identical to RADIUS request expressions, except that RES replaces REQ.

Typecasts of AVP Values:

The ADC supports expressions to typecast RADIUS AVP values to the text, integer, unsigned integer, long, unsigned long, ipv4 address, ipv6 address, ipv6 prefix and time data types. The syntax is the same as for other NetScaler typecast expressions.

Example:

The ADC supports expressions to typecast RADIUS AVP values to the text, integer, unsigned integer, long, unsigned long, ipv4 address, ipv6 address, ipv6 prefix and time data types. The syntax is the same as for other NetScaler typecast expressions.

```
1 RADIUS.REQ.AVP(8).VALUE(0).typecast_ip_address_at
```

AVP Type Expressions:

The NetScaler supports expressions to extract RADIUS AVP values by using the assigned integer codes described in RFC2865 and RFC2866. You can also use text aliases to accomplish the same task. Some examples follow.

- RADIUS.REQ.AVP (1).VALUE or RADIUS.REQ.USERNAME.value. Extracts the RADIUS user-name value.
- RADIUS.REQ.AVP (4). VALUE or RADIUS.REQ. ACCT_SESSION_ID.value. Extracts the Acct-Session-ID AVP (code 44) from the message.
- RADIUS.REQ.AVP (26). VALUE or RADIUS.REQ.VENDOR_SPECIFIC.VALUE. Extracts the vendor-specific value.

The values of most commonly-used RADIUS AVPs can be extracted in the same manner.

RADIUS Bind Points:

Four global bind points are available for policies that contain RADIUS expressions.

- RADIUS_REQ_OVERRIDE. Priority/override request policy queue.
- RADIUS_REQ_DEFAULT. Standard request policy queue.
- RADIUS_RES_OVERRIDE. Priority/override response policy queue.
- RADIUS_RES_DEFAULT. Standard response policy queue.

RADIUS Responder-Specific Expressions:

- RADIUS_RESPONDWITH. Respond with the specified RADIUS response. The response is created with NetScaler expressions, both RADIUS expressions and any others that are applicable.
- RADIUS.NEW_ANSWER. Sends a new RADIUS answer to the user.
- RADIUS.NEW_ACCESSREJECT. Rejects the RADIUS request.
- RADIUS.NEW_AVP. Adds the specified new AVP to the response.

Use Cases

Following are use cases for RADIUS with responder.

Blocking RADIUS Requests from a Specific Network

To configure the responder feature to block authentication requests from a specific network, begin by creating a responder action that rejects requests. Use the action in a policy that selects requests from the networks that you want to block. Bind the responder policy to a RADIUS-specific global bind point, specifying:

- The priority
- END as the nextExpr value, to ensure that policy evaluation stops when this policy is matched
- RADIUS_REQ_OVERRIDE as the queue to which you assign the policy, so that it is evaluated before policies assigned to the default queue

To configure Responder to block logons from a specific network**

- `add responder action <actName> <actType>`
- `add responder policy <polName> <rule> <actName>`
- `bind responder global <polName> <priority> <nextExpr> -type <bindPoint>`

Example:

```
1 > add responder action rspActRadiusReject respondwith radius.  
   new_accessreject  
2 Done  
3  
4 > add responder policy rspPolRadiusReject client.ip.src.in_subnet  
   (10.224.85.0/24) rspActRadiusReject  
5 Done  
6  
7 > bind responder global rspPolRadiusReject 1 END -type  
   RADIUS_REQ_OVERRIDE
```

DNS support for the responder feature

December 21, 2023

You can configure the responder feature to respond to DNS requests as it does to HTTP and TCP requests. For example, you could configure it to send DNS responses over UDP and ensure that the DNS requests from the client are sent over TCP. A number of NetScaler expressions support examination of the DNS header in the request. These expressions examine specific header fields and send an appropriate response.

- **DNS Expressions.** In a responder configuration, you can use the following NetScaler expressions to refer to various portions of a DNS request:

Expressions	Descriptions
DNS.NEW_RESPONSE	Creates a new empty DNS response based on the request.
DNS.NEW_RESPONSE <AA, TC, rcode>	Creates a new DNS response based on the specified parameters.

- **DNS Bind Points.** The following global bind points are available for policies that contain DNS expressions.

Bind Points	Descriptions
DNS_REQ_OVERRIDE	Priority/override request policy queue.
DNS_REQ_DEFAULT	Standard request policy queue.

In addition to the default bind points, you can create policy labels of type DNS and bind DNS policies to them.

Configuring Responder Policies for DNS

The following procedure uses the NetScaler command line to configure a responder action and policy and bind the policy to a responder-specific global bind point.

To configure Responder to respond to a DNS request:

At the command prompt, type the following commands:

1. `add responder action <actName> <actType>`

For <actname>, substitute a name for your new action. The name can be 1 to 127 characters in length, and can contain letters, numbers, hyphen (-), and underscore (_) symbols. For <actType>, substitute a responder action type, *respondWith*.

2. `add responder policy <polName> <rule> <actName>`

For <polname>, substitute a name for your new policy. For <actname>, the name can be 1 to 127 characters in length, and can contain letters, numbers, hyphen (-), and underscore (_) symbols. For <actname>, substitute the name of the action that you just created.

3. `bind responder policy <polName> <priority> <nextExpr> -type <bindPoint>`

For `<bindPoint>`, specify one of the responder-specific global bind points. For `<polName>`, substitute the name of the policy that you just created. For `<priority>`, specify the priority of the policy.

Sample configuration - Enforce all DNS request over TCP:

To enforce all the DNS requests over TCP, create a responder action that will set the TC bit and rcode as NOERROR.

```
1 > add responder action resp_act_set_tc_bit respondwith DNS.NEW_RESPONSE
   (true, true, NOERROR)
2 Done
3
4 > add responder policy enforce_tcp dns.REQ.TRANSPORT.EQ(udp)
   resp_act_set_tc_bit
5 Done
6
7 >bind lb vserver dns_udp - policyName enforce_tcp -type request -
   priority 100
8 Done
```

MQTT support for responder

May 2, 2023

The Responder feature supports the MQTT protocol. You can configure responder policies to take an action based on the parameters in the incoming MQTT message.

The action responds with any of the following to a new connection:

- DROP
- RESET
- NOOP
- A responder action to initiate a new MQTT CONNACK response.

Configuring responder policies for MQTT

After enabling the responder feature, you must configure one or more actions for handling MQTT requests. Then, configure a responder policy. You can bind the responder policies globally, or to a specific load balancing virtual server or content switching virtual server.

The following bind points are available to bind the responder policies globally:

- MQTT_REQ_DEFAULT

- MQTT_REQ_OVERRIDE
- MQTT_JUMBO_REQ_DEFAULT
- MQTT_JUMBO_REQ_OVERRIDE

The following bind points are available to bind the responder policies to a content switching or load balancing virtual server:

- REQUEST
- MQTT_JUMBO_REQ (this bind point is used only for Jumbo packets)

To configure the responder to respond to an MQTT request by using CLI

At the command prompt, type the following commands:

Configure a responder action.

```
1 add responder action <actName> <actType>
```

- For `actname`, substitute a name for your new action. The name can be 1–127 characters in length, and can contain letters, numbers, hyphen (-), and underscore (_) symbols.
- For `actType`, substitute a responder action type, `respondwith`.

Example:

```
1 add responder action mqtt_connack_unsup_ver respondwith MQTT.  
NEW_CONNACK(132)
```

Configure a responder policy. The NetScaler appliance responds to the MQTT requests that are selected by this responder policy.

```
1 add responder policy <polName> <rule> <actname>
```

- For `polname`, substitute a name for your new policy.
- For `actname`, substitute the name of the action that you created.

Example:

```
1 add responder policy reject_lower_version "MQTT.HEADER.COMMAND.EQ(  
CONNECT) && MQTT.VERSION.LT(3)" mqtt_connack_unsup_ver
```

Bind the responder policy to a specific load balancing virtual server or content switching virtual server. The policy applies only to the MQTT requests whose destination IP address is the VIP of that virtual server.

```
1 bind lb vserver <name> -policyName <policy_name> -priority <priority>  
2  
3 bind cs vserver <name> -policyName <policy_name> -priority <priority>
```

- For `policy_name`, substitute the name of the policy that you have created.
- For `priority`, specify the priority of the policy.

Example:

```
1 bind lb vserver lb1 -policyName reject_lower_version -priority 50
2
3 bind cs vserver mqtt_frontend_cs -policyName reject_lower_version -
  priority 5
```

Use case1: Filter clients based on the user name or client ID

The administrator can configure an MQTT responder policy to reject the connection based on the user name or client ID in the MQTT CONNECT message.

Sample configuration for filtering clients based on the client ID

```
1 add policy patset filter_clients
2 bind policy patset filter_clients client1
3
4 add responder action mqtt_connack_invalid_client respondwith MQTT.
  NEW_CONNACK(2)
5
6 add responder policy reject_clients "MQTT.HEADER.COMMAND.EQ(CONNECT) &&
  mqtt.connect.clientid.equals_any(\"filter_clients\")"
  mqtt_connack_invalid_client
7
8 bind cs vserver mqtt_frontend_cs -policyName reject_clients -priority 5
```

Use case2: Limit the maximum message length of MQTT messages to handle jumbo packets

The administrator can configure an MQTT responder policy to drop the client connection if the length of the message exceeds a certain threshold, or take necessary action based on the requirement.

To handle jumbo packets, the responder policies with any of the following rule patterns are bound to the jumbo bind point:

- MQTT.MESSAGE_LENGTH
- MQTT.COMMAND
- MQTT.FROM_CLIENT
- MQTT.FROM_SERVER

Policies bound to jumbo bind points are evaluated only for jumbo packets.

Sample configuration for limiting the maximum message length of MQTT messages

```

1 set lb parameter -dropmqttjumbomessage no
2
3 add responder policy drop_large_message MQTT.MESSAGE_LENGTH.GT(100000)
  reset
4
5 bind cs vserver mqtt_frontend_cs -policyName drop_large_message -
  priority 10

```

In this example, the `dropmqttjumbomessage` parameter is set to NO. Therefore, the ADC appliance processes the messages with length greater than 64,000 bytes and less than 1,00,000 bytes. The messages with length greater than 1,00,000 bytes are reset.

How to redirect HTTP request to HTTPS using responder


October 25, 2024

This article explains how to configure the responder feature with a load balancing virtual server IP addresses and redirect client requests from HTTP to HTTPS.

Consider a scenario where a user might attempt to access a secure website by sending an HTTP request. Instead of dropping the request, you might want to redirect the request to a secure website. You can use the responder feature to redirect the request to the secure website without changing the path and the URL query which the user attempts to access.

How NetScaler responder redirects a request from HTTP to HTTPS

The following illustration shows a step by step flow of how the appliance redirects a request.

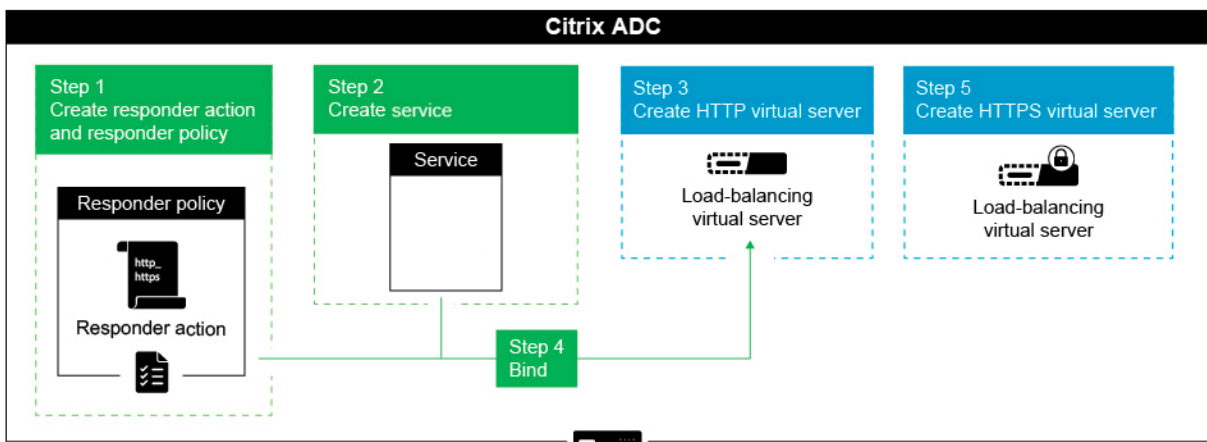

To configure the Responder feature along with the Load Balancing VIP addresses of a NetScaler appliance to redirect client requests from HTTP to HTTPS, complete the following procedure.

Enable the responder feature on the appliance

To enable the responder feature on the appliance, navigate to **System > Settings > Configure Advanced Features** and select **Responder**.

Create a responder action

To create a responder action, perform the following steps:

1. Navigate to **AppExpert > Responder > Actions** and click **Add**.
2. Specify an appropriate name, such as `http_to_https_actn`, in the **Name** field.
3. Select **Redirect** as **Type**.
4. In the **Expression** field, type the following expression:

```
"https://" + HTTP.REQ.HOSTNAME.HTTP_URL_SAFE + HTTP.REQ.URL.PATH_AND_QUERY.HTTP_URL_SAFE.
```
5. Click **Create**.

Create responder policy

To create a responder policy, perform the following steps:

1. Navigate to **AppExpert > Responder > Policies** and click **Add**.
2. Specify an appropriate name, such as `http_to_https_pol`, in the **Name** field.
3. From the **Action** list, select the action name that you have created.
4. From the **Undefined Action list**, select **RESET**.
5. Type the **HTTP.REQ.IS_VALID** expression in the **Expression** field as shown in the following screenshot.

← Create Responder Policy

Name* (i)

Action* (i)

Log Action

AppFlow Action

Undefined-Result Action* (i)

Expression * [Expression Editor](#)

Select
Select
Select
✕

HTTP.REQ.IS_VALID

(i)

[Evaluate](#)

Comments

Create a service

To create a service, perform the following steps:

1. Navigate to **Load Balancing > Services** and click **Add**.
2. Specify an appropriate name, such as Always_UP_service, in the **Name** field.
3. Specify a non-existent IP address in the **Server** field.
4. Specify 80 in the **Port** field.
5. Add the created monitor from the **Available Monitors** list.

Create a load balancing virtual server

1. Navigate to **Load Balancing > Services** and then click **Add**.

2. Specify an appropriate name in the **Name** field.
3. Specify the IP address of the website in the **IP Address** field.
4. Select HTTP from the **Protocol** list.
5. Type 80 in the Port field.
6. Click the **Policies** tab.
7. Bind the Responder policy that you created to the HTTP Load Balancing VIP address of the website.
8. Create a secure Load Balancing virtual server that has the IP address of the website and port as 443.

To create a configuration similar to the preceding procedure from the command line interface of the appliance, run the following commands:

```
1 enable ns feature responder
2 add responder action http_to_https_actn redirect "\"https://\" + http.
  req.hostname.HTTP_URL_SAFE + http.REQ.URL.PATH_AND_QUERY.
  HTTP_URL_SAFE"
3 add responder policy http_to_https_pol HTTP.REQ.IS_VALID
  http_to_https_actn RESET
4 add lb monitor localhost_ping PING -LRTM ENABLED -destIP 127.0.0.1
5 add service Always_UP_service 1.2.3.4 HTTP 80 -gslb NONE -maxClient 0 -
  maxReq 0 -cip ENABLED dummy -usip NO -sp OFF -cltTimeout 180 -
  svrTimeout 360 -CKA NO -TCPB NO -CMP YES -healthMonitor NO
6 add lb vserver http_site.com HTTP 10.217.96.238 80 -persistenceType
  COOKIEINSERT -timeout 0 -cltTimeout 180
7 bind lb vserver http_site.com Always_UP_service
8 bind lb vserver http_site.com -policyName http_to_https_pol -priority 1
  -gotoPriorityExpression END
```

Notes:

- The status of the port 80 Load Balancing Redirect virtual server must be UP for the redirect to work.
- Web browsers might not redirect correctly if the HTTPS virtual server is not active.
- This redirect setup allows for situations where multiple domains are bound to the same IP address.
- If the client sends an invalid HTTP request to the redirect virtual server, then the appliance sends a RESET message code.

Troubleshooting

May 2, 2023

If the responder feature does not work as expected after you have configured it, you can use some common tools to access NetScaler resources and diagnose the problem.

Resources for Troubleshooting

For best results, use the following resources to troubleshoot an integrated cache issue on a NetScaler appliance:

- The ns.conf file
- The relevant trace files from the client and the NetScaler appliance

In addition to the above resources, the following tools expedite troubleshooting:

- The iehttpheaders or a similar utility
- The Wireshark application customized for the NetScaler trace files

Troubleshooting Responder Issues

- **Issue**

The Responder feature is configured, but the responder action is not working.

Resolution

- Verify that the feature is enabled.
- Check the hit counters of any of the policies to see if the counters are getting incremented.
- Verify that the policies and actions are configured correctly.
- Verify that the actions and policies are bound appropriately.
- Record the packet traces on the client and the NetScaler appliance, and analyze them to get some pointer to the issue.
- Record the iehttpHeaders packet traces on the client and verify the HTTP requests and responses to get some pointer to the issue.

- **Issue**

You need to create a maintenance page.

Resolution

1. Configure the services and virtual Server.
2. Configure a backup virtual server with a service bound to it. This ensures that the status of the Web site is always displayed as UP.
3. Configure the primary virtual server to use the backup virtual server as a backup.

4. Create a responder action with an appropriate target. Following is an example for your reference:

```
add responder action sorry_page respondwith q{ "HTTP/1.0 200 OK"+
"\r\n\r\n"+ "<html><body>Sorry, this page is not available</body>
</html>" + "\r\n" }
```

5. Create a responder policy and bind the action to it.
6. Bind the responder policy to the backup virtual Server.

Rewrite

June 22, 2023

Warning:

Filter features using classic policies are deprecated and as an alternative Citrix recommends you to use the rewrite and responder features with advanced policy infrastructure.

Rewrite refers to the rewriting of some information in the requests or responses handled by the NetScaler appliance. Rewriting can help in providing access to the requested content without exposing unnecessary details about the website's actual configuration. A few situations in which the rewrite feature is useful are as follows:

- To improve security, the NetScaler can rewrite all the [http://links](#) to [https://](#) in the response body.
- In the SSL offload deployment, the insecure links in the response have to be converted into secure links. Using the rewrite option, you can rewrite all the [http://links](#) to [https://](#) for making sure that the outgoing responses from NetScaler to the client have the secured links.
- If a website has to show an error page, you can show a custom error page instead of the default 404 Error page. For example, if you show the home page or site map of the website instead of an error page, the visitor remains on the site instead of moving away from the website.
- If you want to launch a new website, but use the old URL, you can use the Rewrite option.
- When a topic in a site has a complicated URL, you can rewrite it with a simple, easy-to-remember URL (also referred to as 'cool URL').
- You can append the default page name to the URL of a website. For example, if the default page of a company's website is [http://www.abc.com/index.php](#), when the user types 'abc.com' in the address bar of the browser, you can rewrite the URL to 'abc.com/index.php'.

When you enable the rewrite feature, NetScaler can modify the headers and body of HTTP requests and responses.

To rewrite HTTP requests and responses, you can use protocol-aware NetScaler policy expressions in the rewrite policies you configure. The virtual servers that manage the HTTP requests and responses must be of type

HTTP or

SSL. In HTTP traffic, you can take the following actions:

- Modify the URL of a request
- Add, modify, or delete headers
- Add, replace, or delete any specific string within the body or headers.

To rewrite TCP payloads, consider the payload as a raw stream of bytes. Each of the virtual servers that managing the TCP connections must be of type TCP or SSL_TCP. The term TCP rewrite is used to refer to the rewrite of TCP payloads that are not HTTP data. In TCP traffic, you can add, modify, or delete any part of the TCP payload.

For examples to use the rewrite feature, see [Rewrite Action and Policy Examples](#).

Comparison between Rewrite and Responder options

The main difference between the rewrite feature and the responder feature is as follows:

Responder cannot be used for response or server-based expressions. Responder can be used only for the following scenarios depending on client parameters:

- Redirecting an HTTP request to new websites or webpages
- Responding with some custom response
- Dropping or resetting a connection at request level

If there is a responder policy, the NetScaler examines the request from the client, takes action according to the applicable policies, sends the response to the client, and closes the connection with the client.

If there is a rewrite policy, the NetScaler examines the request from the client or response from the server, takes action according to the applicable policies, and forwards the traffic to the client or the server.

In general, it is recommended to use a responder if you want the NetScaler to reset or drop a connection based on a client or request-based parameter. Use the responder to redirect traffic, or respond with custom messages. Use rewrite for manipulating data on HTTP requests and responses.

How rewrite works

A rewrite policy consists of a rule and action. The rule determines the traffic on which rewrite is applied and the action determines the action to be taken by the NetScaler. You can define multiple rewrite policies. For each policy, specify the bind point and priority.

A bind point refers to a point in the traffic flow at which the NetScaler examines the traffic to verify whether any rewrite policy can be applied to it. You can bind a policy to a specific load balancing or content switching virtual server, or make the policy global if you want the policy to be applied to the entire traffic handled by the NetScaler. These policies are referred to as global policies.

In addition to the user-defined policies, the NetScaler has some default policies. You cannot modify or delete a default policy.

For evaluating the policies, NetScaler follow these order:

- Global policies
- Policies bound to specific virtual servers
- Default policies

Note:

NetScaler can apply a rewrite policy only when it is bound to a point.

NetScaler implements the rewrite feature in the following steps:

- The NetScaler appliance checks for global policies and then checks for policies at individual bind points.
- If multiple policies are bound to a bind point, the NetScaler evaluates the policies in the order of their priority. The policy with the highest priority is evaluated first. After evaluating each policy, if the policy is evaluated to TRUE, it adds the action associated with the policy the associated action is performed. A match occurs when the characteristics specified in the policy rule match the characteristics of the request or response being evaluated.
- For any policy, in addition to the action, you can specify the policy that must be evaluated after the current policy is evaluated. This policy is referred to as the 'Go to Expression'. For any policy, if a Go to Expression (gotoPriorityExpr) is specified, the NetScaler evaluates the Go to Expression policy. It ignores the policy with the next highest priority.


You can specify the priority of the policy to indicate the Go to Expression policy; you cannot use the name of the policy. If you want the NetScaler to stop evaluating other policies after evaluating a particular policy, you can set the Go to Expression to 'END'.

- After all the policies are evaluated or when a policy has the Go to Expression set as END, the NetScaler starts performing the actions according to the list of actions.

For more information about configuring rewrite policies, see [Configuring a Rewrite Policy](#) and about binding rewrite policies, see [Binding a Rewrite Policy](#).

The following figure illustrates how NetScaler processes a request or response when the rewrite feature is used.

Figure 1. The Rewrite Process

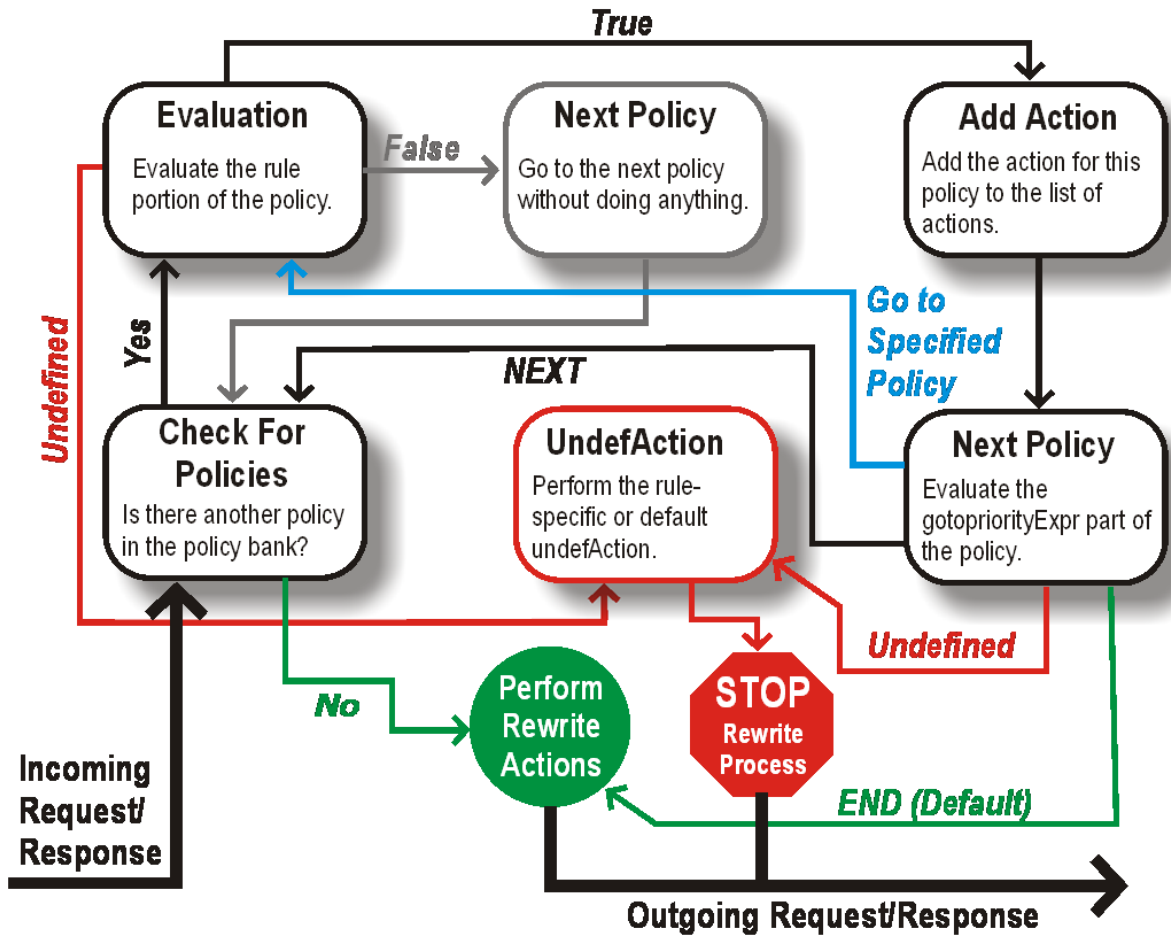

Policy Evaluation

The policy with the highest priority is evaluated first. NetScaler does not stop the evaluation of rewrite policies when it finds a match. It evaluates all the rewrite policies configured on the NetScaler.

- If a policy evaluates to TRUE, the NetScaler follows the procedure below:
 - If the policy has the Go to Expression set to END, the NetScaler stops evaluating all the other policies and starts performing the rewrite.
 - The gotoPriorityExpression can be set to 'NEXT', 'END', some integer or 'INVOCATION_LIST'. The value determines the policy with the next priority. The following table shows the action taken by NetScaler for each value of the expression.

Value of the expression	Action
NEXT	The policy with the next priority gets evaluated.
END	Evaluation of policies stops.
<an integer>	Policy with specified priority gets evaluated.
INVOCATION_LIST	Goto NEXT or END is applied based on the result of the invocation list.

- If a policy evaluates to FALSE, the NetScaler continues the evaluation in the order of priority.
- If a policy evaluates to UNDEFINED (cannot be evaluated on the received traffic due to an error), the NetScaler performs the action assigned to the UNDEFINED condition (referred to as undefAction) and stops further evaluation of policies.

The NetScaler starts the actual rewriting only after the evaluation is complete. It refers to the list of actions identified by policies that are evaluated to TRUE, and starts the rewriting. After implementing all the actions in the list, the NetScaler forwards the traffic as required.

Note:

Ensure that the policies do not specify conflicting or overlapping actions on the same part of the HTTP header or body, or TCP payload. When such a conflict occurs, the NetScaler encounters an undefined situation and aborts the rewrite.

Rewrite Actions

On the NetScaler appliance, specify the actions to be taken such as adding, replacing, or deleting text within the body, or adding, modifying, or deleting headers, or any changes in the TCP payload as rewrite actions. For more information about rewrite actions, see [Configuring a Rewrite Action](#).

The following table describes the steps the NetScaler can take when a policy evaluates to TRUE.

Action	Result
Insert	The rewrite action specified for the policy is carried out.
NOREWRITE	The request or response is not rewritten. NetScaler forwards the traffic without rewriting any part of the message.
RESET	The connection is aborted at the TCP level.
DROP	The message is dropped.

Note:

For any policy, you can configure the underaction (action to be taken when the policy evaluates to UNDEFINED) as NOREWRITE, RESET, or DROP.

To use the

Rewrite feature, take the following steps:

- Enable the feature on the NetScaler.
- Define rewrite actions.
- Define rewrite policies.
- Bind the policies to a bind point to bring a policy into effect.

Enable rewrite

Enable the rewrite feature on the NetScaler appliance if you want to rewrite the HTTP or TCP requests or responses. If the feature is enabled, NetScaler takes rewrite action according to the specified policies. For more information, see [How rewrite works](#).

To enable the rewrite feature by using the command line interface

At the command prompt, type the following commands to enable the rewrite feature and verify the configuration:

- enable ns feature REWRITE
- show ns feature

Example:

```
1 > enable ns feature REWRITE
2 Done
3 > show ns feature
4
5         Feature                Acronym                Status
6         -----                -
7 1)    Web Logging              WL                     OFF
8 2)    Surge Protection         SP                     ON
9 .
10 .
11 .
12 1)    Rewrite                  REWRITE               ON
13 .
14 .
15 1)    NetScaler Push           push                   OFF
16 Done
```

To enable the rewrite feature by using the GUI

1. In the navigation pane, click **System**, and then click **Settings**.
2. In the details pane, under Modes and Features, click **Configure basic features**.
3. In the **Configure Basic Features** dialog box, select the Rewrite check box, and then click **OK**.
4. In the **Enable/Disable Feature(s)** dialog box, click **Yes**. A message appears in the status bar, stating that the selected feature was enabled.

Configuring a Rewrite Action

Warning

The Pattern function in a rewrite action is deprecated from NetScaler 12.0 build 56.20 onwards and as an alternative, Citrix recommends you to use the Search rewrite action parameter.

A rewrite action indicates changes made to a request or response prior to sending it to a server or client.

Expressions define the following:

- Rewrite action type.
- Location of the rewrite action.
- Rewrite action configuration type.

For Example, a DELETE action only uses a target expression. A REPLACE action uses a target expression and an expression to configure the replacement text.

After enabling the rewrite feature, you need to configure one or more actions unless a built-in rewrite action is sufficient. All of the built-in actions have names beginning with the string `ns_cvpn`, followed by a string of letters and underscore characters. Built-in actions perform useful and complex tasks such as decoding parts of a clientless VPN request or response or modifying JavaScript or XML data. The built-in actions can be viewed, enabled, and disabled, but cannot be modified or deleted.

Note:

Action types that can be used only for HTTP rewrite are identified in the **Rewrite Action Type** column.

For more information, see **Type parameter**.

Create a rewrite action by using the command line interface

At the command prompt, type the following commands to create a rewrite action and verify the configuration:

- `add rewrite action <name> <type> <target> [<stringBuilderExpr>] [-search <expression>] [refineSearch <expression>] [-comment<string>]`
- `show rewrite action <name>`

For more information, see the [Rewrite Action Types and their Arguments](#) table.

The rewrite feature has the following built-in actions:

- NOREWRITE - Sends the request or response to the user without rewriting it.
- RESET - Resets the connection and notifies the user's browser, so that the user can resend the request.
- DROP - Drops the connection without sending a response to the user.

One of the following flow types is implicitly associated with every action:

- Request - Action applies to the request.
- Response - Action applies to the response.
- Neutral - Action applies to both requests and responses.

Name

Name for the user-defined rewrite action. Must begin with a letter, number, or the underscore character (`_`), and must contain only letters, numbers, and the hyphen (`-`), period (`.`) hash (`#`), space (), at (`@`), equals (`=`), colon (`:`), and underscore characters. Can be changed after the rewrite policy is added.

Type parameter

The **Type** parameter shows the type of user-defined rewrite action.

Following are the values of the **Type** parameter:

- `REPLACE <target> <string_builder_expr>`. Replaces the target string with the string-builder expression.

Example:

```
1 > add rewrite action replace_http_act replace http.res.body(100) "
    new_replaced_data"
2 Done
3 > sh rewrite action replace_http_act
4 Name: replace_http_act
5 Operation: replace
6 Target:http.res.body(100)
```

```

7 Value:"new_replaced_data"
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done

```

- `REPLACE_ALL <target> <string_builder_expr> -(search)<s> -` In the request or response specified by `<target>`, replaces all occurrences of the string defined by `<pattern_to_search>` with the string defined by `<string_builder_expr>`. You can use the `search` option to find the strings to be replaced.

Example:

```

1 > add policy patset pat_list_2
2 Done
3 > bind policy patset pat_list_2 "www.abc.com"
4 Done
5 > bind policy patset pat_list_2 "www.def.com"
6 Done
7 > add rewrite action refineSearch_act_31 replace_all "HTTP.RES.BODY
      (100000)" "\"https://\""-search "patset(\"pat_list_2\")" -
      refineSearch "EXTEND(7,0).REGEX_SELECT(re#http://#)"
8 Done
9
10 > sh rewrite action refineSearch_act_31
11 Name: refineSearch_act_31
12 Operation: replace_all
13 Target:HTTP.RES.BODY(100000)
14 Refine Search:EXTEND(7,0).REGEX_SELECT(re#http://#)
15 Value:"https://"
16 Search: patset("pat_list_2")
17 Hits: 0
18 Undef Hits: 0
19 Action Reference Count: 0
20 Done

```

- `REPLACE_HTTP_RES <string_builder_expr>`. Replaces the complete HTTP response with the string defined by the string-builder expression.

Example:

```

1 > add rewrite action replace_http_res_act replace_http_res "'HTTP/1.1
      200 OK\r\n\r\nSending from ADC'"
2 Done
3 > sh rewrite action replace_http_res_act
4 Name: replace_http_res_act
5 Operation: replace_http_res
6 Target:"HTTP/1.1 200 OK
7 Sending from ADC"
8 Hits: 0
9 Undef Hits: 0

```

```
10 Action Reference Count: 0
11 Done
```

- `REPLACE_SIP_RES <target>`. Replaces the complete SIP response with the string specified by `<target>`.

Example:

```
1 > add rewrite action replace_sip_res_act replace_sip_res "HTTP/1.1 200
  OK\r\n\r\nSending from ADC"
2 Done
3 > sh rewrite action replace_sip_res_act
4 Name: replace_sip_res_act
5 Operation: replace_sip_res
6 Target:"HTTP/1.1 200 OK
  Sending from ADC"
7 Hits: 0
8 Undef Hits: 0
9 Action Reference Count: 0
10 Done
```

- `INSERT_HTTP_HEADER <header_string> <contents_string_builder_expr>`. Inserts the HTTP header specified by `header_string` and header contents specified by `contents_string_builder_expr`.

Example:

```
1 > add rewrite action ins_cip_header insert_http_header "CIP" "CLIENT.IP
  .SRC"
2 Done
3 > sh rewrite action ins_cip_header
4 Name: ins_cip_header
5 Operation: insert_http_header
6 Target:CIP
7 Value:CLIENT.IP.SRC
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done
```

- `DELETE_HTTP_HEADER <target>`. Deletes the HTTP header specified by `<target>`

Example:

```
1 > add rewrite action del_true_client_ip_header delete_http_header "True
  -Client-IP"
2 Done
3 > sh rewrite action del_true_client_ip_header
4 Name: del_true_client_ip_header
5 Operation: delete_http_header
6 Target:True-Client-IP
```

```

7 Hits: 0
8 Undef Hits: 0
9 Action Reference Count: 0
10 Done

```

- **CORRUPT_HTTP_HEADER** <target>. Replaces the header name of all occurrences of the HTTP header specified by <target> with a corrupted name, so that it will not be recognized by the receiver Example: MY_HEADER is changed to MHEY_ADER.

Example:

```

1 > add rewrite action corrupt_content_length_hdr corrupt_http_header "
  Content-Length"
2 Done
3 > sh rewrite action corrupt_content_length_hdr
4 Name: corrupt_content_length_hdr
5 Operation: corrupt_http_header
6 Target:Content-Length
7 Hits: 0
8 Undef Hits: 0
9 Action Reference Count: 0
10 Done

```

- **INSERT_BEFORE** <string_builder_expr1> <string_builder_expr1> . Finds the string specified in <string_builder_expr1> and inserts the string in <string_builder_expr2> before it.

```

1 > add rewrite action insert_before_ex_act insert_before http.res.body
  (100) "Add this string in the starting"
2 Done
3 > sh rewrite action insert_before_ex_act
4 Name: insert_before_ex_act
5 Operation: insert_before
6 Target:http.res.body(100)
7 Value:"Add this string in the starting"
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done

```

- **INSERT_BEFORE_ALL** <target> <string_builder_expr1> -(search)<string_builder_expr2>. In the request or response specified by <target>, locates all occurrences of the string specified in and inserts the string specified in before it. You can use the search option to find the strings.

Example:

```

1 > add policy patset pat
2 Done
3 > bind policy patset pat abcd

```

```

4 Done
5 > add rewrite action refineSearch_act_1 insert_before_all http.res.body
  (10) 'target.prefix(10) + "refineSearch_testing" -search patset("
  pat") -refineSearch extend(10,10)
6 Done
7 > sh rewrite action refineSearch_act_1
8 Name: refineSearch_act_1
9 Operation: insert_before_all
10 Target:http.res.body(10)
11 Refine Search:extend(10,10)
12 Value:target.prefix(10) + "refineSearch_testing"
13 Search: patset("pat")
14 Hits: 0
15 Undef Hits: 0
16 Action Reference Count: 0
17 Done

```

- `INSERT_AFTER <string_builder_expr1> <string_builder_expr2>`. Inserts the string specified by `string_builder_expr2` after the string `string_builder_expr1`.

Example:

```

1 > add rewrite action insert_after_act insert_after http.req.body(100) '
  "add this string after 100 bytes"
2 Done
3 > sh rewrite action insert_after_act
4 Name: insert_after_act
5 Operation: insert_after
6 Target:http.req.body(100)
7 Value:"add this string after 100 bytes"
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done

```

- `INSERT_AFTER_ALL <target> <string_builder_expr1> -(search) <string_builder_expr2>`. In the request or response specified by `<target>`, locates all occurrences of the string specified by `<string_builder_expr2>` and inserts the string specified by `<string_builder_expr1>` after it. You can use the search facility to find the strings.

Example:

```

1 > add rewrite action refineSearch_act_2 insert_after_all http.res.body
  (100) '"refineSearch_testing" -search text("abc") -refineSearch
  extend(0, 10)
2 Done
3 > sh rewrite action refineSearch_act_2
4 Name: refineSearch_act_2
5 Operation: insert_after_all

```

```

6 Target:http.res.body(100)
7 Refine Search:extend(0, 10)
8 Value:"refineSearch_testing"
9 Search: text("abc")
10 Hits: 0
11 Undef Hits: 0
12 Action Reference Count: 0
13 Done

```

- **DELETE** <target>. Deletes the string specified by target.

Example:

```

1 > add rewrite action delete_ex_act delete http.req.header("HDR")
2 Done
3 > sh rewrite action delete_ex_act
4 Name: delete_ex_act
5 Operation: delete
6 Target:http.req.header("HDR")
7 Hits: 0
8 Undef Hits: 0
9 Action Reference Count: 0
10 Done

```

- **DELETE_ALL** <target> -(search)<string_builder_expr>. In the request or response specified by <target>, locates and deletes all occurrences of the string specified by <string_builder_expr>. You can use the search facility to find the strings.

Example:

```

1 >add rewrite action refineSearch_act_4 delete_all "HTTP.RES.BODY(50000)
   -search text("Windows Desktops") -refineSearch "EXTEND(40,40).
   REGEX_SELECT(re#\s`*`<AppData>.`*`\s`*`<\/AppData>#)"
2 Done
3 > show REWRITE action refineSearch_act_4
4 Name: refineSearch_act_4
5 Operation: delete_all
6 Target:HTTP.RES.BODY(50000)
7 Refine Search:EXTEND(40,40).REGEX_SELECT(re#\s`*`<AppData>.`*`\s`*`<\/
   AppData>#)
8 Search: text("Windows Desktops")
9 Hits: 0
10 Undef Hits: 0
11 Action Reference Count: 0
12 Done

```

- **REPLACE_DIAMETER_HEADER_FIELD** <target> <field value>. In the request or responses modify the header field specified by <target>. Use `Diameter.req.flags.SET(<flag>)` or `Diameter.req.flags.UNSET<flag>` as stringbuilder expression to set or unset flags.

Example:

```
1 > add rewrite action replace_diameter_field_ex_act
  replace_diameter_header_field diameter.req.flags diameter.req.flags.
  set(PROXIABLE)
2 Done
3 > sh rewrite action replace_diameter_field_ex_act
4 Name: replace_diameter_field_ex_act
5 Operation: replace_diameter_header_field
6 Target:diameter.req.flags
7 Value:diameter.req.flags.set(PROXIABLE)
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done
```

- **REPLACE_DNS_HEADER_FIELD** <target>. In the request or response modifies the header field specified by <target>.

Example:

```
1 > add rewrite action replace_dns_hdr_act replace_dns_header_field dns.
  req.header.flags.set(AA)
2 Done
3 > sh rewrite action replace_dns_hdr_act
4 Name: replace_dns_hdr_act
5 Operation: replace_dns_header_field
6 Target:dns.req.header.flags.set(AA)
7 Hits: 0
8 Undef Hits: 0
9 Action Reference Count: 0
10 Done
```

- **REPLACE_DNS_ANSWER_SECTION** <target>. Replace the DNS answer section in the response. This is applicable for A and AAAA records only. Use **DNS.NEW_RRSET_A** and **NS.NEW_RRSET_AAAA** expressions to configure the new answer section.

Example:

```
1 > add rewrite action replace_dns_ans_act replace_dns_answer_section
  DNS.NEW_RRSET_A("1.1.1.1", 10)
2 Done
3 > sh rewrite action replace_dns_ans_act
4 Name: replace_dns_ans_act
5 Operation: replace_dns_answer_section
6 Target:DNS.NEW_RRSET_A("1.1.1.1", 10)
7 Hits: 0
8 Undef Hits: 0
9 Action Reference Count: 0
10 Done
```

- `CLIENTLESS_VPN_DECODE<target>`. Decodes the pattern specified by the target in clientless VPN format.

Example:

```
1 > add rewrite action cvpn_decode_act_1 clientless_vpn_decode http.req.  
   body(100)  
2 Done  
3 > sh rewrite action cvpn_decode_act_1  
4 Name: cvpn_decode_act_1  
5 Operation: clientless_vpn_decode  
6 Target:http.req.body(100)  
7 Hits: 0  
8 Undef Hits: 0  
9 Action Reference Count: 0  
10 Done
```

- `CLIENTLESS_VPN_DECODE_ALL<target>-search<expression>`. Decodes ALL the patterns specified by search parameter in clientless VPN format.

Example:

```
1 > add rewrite action act1 clientless_vpn_decode_all http.req.body(100)  
   -search text("abcd")  
2 Done  
3 > sh rewrite action act1  
4 Name: act1  
5 Operation: clientless_vpn_decode_all  
6 Target:http.req.body(100)  
7 Search: text("abcd")  
8 Hits: 0  
9 Undef Hits: 0  
10 Action Reference Count: 0  
11 Done
```

- `CLIENTLESS_VPN_ENCODE<target>`. Encodes the pattern specified by target in clientless VPN format.

Example:

```
1 > add rewrite action cvpn_encode_act_1 clientless_vpn_encode http.req.  
   body(100)  
2 Done  
3 > sh rewrite action cvpn_encode_act_1  
4 Name: cvpn_encode_act_1  
5 Operation: clientless_vpn_encode  
6 Target:http.req.body(100)  
7 Hits: 0  
8 Undef Hits: 0  
9 Action Reference Count: 0  
10 Done
```


- `CLIENTLESS_VPN_ENCODE_ALL<target>-search<expression>`. Encodes ALL the patterns specified search parameter in clientless VPN format.

Example:

```
1 > add rewrite action act2 clientless_vpn_encode_all http.req.body(100)
   -search text("abcd")
2 Done
3 > sh rewrite action act2
4 Name: act1
5 Operation: clientless_vpn_encode_all
6 Target:http.req.body(100)
7 Search: text("abcd")
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done
```

- `CORRUPT_SIP_HEADER<target>`. Replaces the header name of all occurrences of the SIP header specified by `<target>` with a corrupted name, so that the receiver doesn't recognize it.

Example:

```
1 > add rewrite action corrupt_sip_hdr_act corrupt_sip_header SIP_HDR
2 Done
3 > sh rewrite action corrupt_sip_hdr_act
4 Name: corrupt_sip_hdr_act
5 Operation: corrupt_sip_header
6 Target:SIP_HDR
7 Hits: 0
8 Undef Hits: 0
9 Action Reference Count: 0
10 Done
```

- `INSERT_SIP_HEADER <header_string_builder_expr> <contents_string_builder_expr>`. Inserts the SIP header specified by `<header_string_builder_expr>` and header contents specified by `<contents_string_builder_expr>`.

Example:

```
1 > add rewrite action insert_sip_hdr_act insert_sip_header SIP_HDR "
   inserting_sip_header"
2 Done
3 >sh rewrite action insert_sip_hdr_act
4 Name: insert_sip_hdr_act
5 Operation: insert_sip_header
6 Target:SIP_HDR
7 Value:"inserting_sip_header"
8 Hits: 0
9 Undef Hits: 0
```

```
10 Action Reference Count: 0
11 Done
```

- `DELETE_SIP_HEADER<target>`. Deletes the SIP header specified by `<target>`

Example:

```
1 > add rewrite action delete_sip_hdr delete_sip_header SIP_HDR
2 Done
3 > sh rewrite action delete_sip_hdr
4 Name: delete_sip_hdr
5 Operation: delete_sip_header
6 Target:SIP_HDR
7 Hits: 0
8 Undef Hits: 0
9 Action Reference Count: 0
10 Done
```

Target parameter

The Target parameter is an expression that specifies which part of the request or response to rewrite.

StringBuilderExpr

The StringBuilderExpr is an expression that specifies the content that is to be inserted into the request or response at the specified location. This expression replaces a specified string.

Example 1. Inserting an HTTP Header With the Client IP:

```
1 > add rewrite action insertact INSERT_HTTP_HEADER "client-IP" CLIENT.IP
  .SRC
2 Done
3 > show rewrite action insertact
4 Name: insertact
5 Operation: insert_http_header
6 Target:Client-IP
7 Value:CLIENT.IP.SRC
8 BypassSafetyCheck : NO
9 Hits: 0
10 Undef Hits: 0
11 Action Reference Count: 0
12 Done
```

Example 2. Replacing Strings in a TCP Payload (TCP Rewrite):

```
1 > add rewrite action client_tcp_payload_replace_all REPLACE_ALL
2 'client.tcp.payload(1000)' '"new-string"' -search text("old-string")
3 Done
```

```
4 > show rewrite action client_tcp_payload_replace_all
5 Name: client_tcp_payload_replace_all
6 Operation: replace_all
7 Target:client.tcp.payload(1000)
8 Value:"new-string"
9 Search: text("old-string")
10 BypassSafetyCheck : NO
11 Hits: 0
12 Undef Hits: 0
13 Action Reference Count: 0
14 Done
15 >
```

Search a part of the request or response to rewrite

The Search functionality helps to find all the Instances of the required pattern in the request or response.

The Search functionality is required to be used in the following Action types:

- INSERT_BEFORE_ALL
- INSERT_AFTER_ALL
- REPLACE_ALL
- DELETE_ALL
- CLIENTLESS_VPN_ENCODE_ALL
- CLIENTLESS_VPN_DECODE_ALL

The Search functionality cannot be used with the following Action types:

- INSERT_HTTP_HEADER
- INSERT_BEFORE
- INSERT_AFTER
- REPLACE
- DELETE
- DELETE_HTTP_HEADER
- CORRUPT_HTTP_HEADER
- REPLACE_HTTP_RES
- CLIENTLESS_VPN_ENCODE
- CLIENTLESS_VPN_DECODE
- INSERT_SIP_HEADER
- DELETE_SIP_HEADER
- CORRUPT_SIP_HEADER
- REPLACE_DIAMETER_HEADER_FIELD
- REPLACE_DNS_ANSWER_SECTION

- REPLACE_DNS_HEADER_FIELD
- REPLACE_SIP_RES

The following Search types are supported:

- Text - a literal string
Example: -search text ("hello")
- Regular Expression - pattern that is used to match multiple strings in the request or response
Example: -search regex(re~^hello*~)
- XPATH - An XPATH expression to search XML.
Example: -search xpath(xp%/a/b%)
- JSON - An XPATH expression to search JSON.
Example: -search xpath_json(xp%/a/b%)
- HTML - An XPATH expression to search HTML
Example: -search xpath_html(xp%/html/body%)
- Patset - This searches all the patterns bound to the patset entity.
Example: -search patset("patset1")
- Dataset - This searches all the patterns bound to the dataset entity.
Example: -search dataset("dataset1")
- AVP - AVP number that is used to match multiple AVPs in a Diameter/Radius Message
Example: -search avp(999)

Refine the search results

You can use the Refine Search functionality to specify the additional criteria to refine the search results. Refine Search functionality can only be used if Search functionality is used.

The Refine search parameter always starts with the "extend(m,n)" operation, where 'm' specifies some bytes to the left of the search result and 'n' specifies several bytes to the right of the search result to extend the selected area.

If the configured rewrite action is:

```
1 > add rewrite action test_refine_search replace_all http.res.body(10) '
    "testing_refine_search" -search text("abc") -refineSearch extend
    (1,1)
2 And the HTTP response body is abcxxx456.
```

Then, the search parameter finds pattern "abc" and since the refineSearch parameter is also configured to check an extra 1 byte to the left and an extra one byte to the right of the matched pattern. The resultant replaced text is: abcx. So, the output of this action is `testing_refine_searchxxx456`.

Example 1: Using the Refine search functionality in INSERT_BEFORE_ALL action type.

```
1 > add policy patset pat
2 Done
3 > bind policy patset pat abcd
4 Done
5 > add rewrite action refineSearch_act_1 insert_before_all http.res.body
   (10) 'target.prefix(10) + "refineSearch_testing" -search patset("
   pat") -refineSearch extend(10,10)
6 Done
7 > sh rewrite action refineSearch_act_1
8 Name: refineSearch_act_1
9 Operation: insert_before_all
10 Target:http.res.body(10)
11 Refine Search:extend(10,10)
12 Value:target.prefix(10) + "refineSearch_testing"
13 Search: patset("pat")
14 Hits: 0
15 Undef Hits: 0
16 Action Reference Count: 0
17 Done
```

Example 2: Using the Refine search functionality in INSERT_AFTER_ALL action type.

```
1 > add rewrite action refineSearch_act_2 insert_after_all http.res.body
   (100) "refineSearch_testing" -search text("abc") -refineSearch
   extend(0, 10)
2 Done
3 > sh rewrite action refineSearch_act_2
4 Name: refineSearch_act_2
5 Operation: insert_after_all
6 Target:http.res.body(100)
7 Refine Search:extend(0, 10)
8 Value:"refineSearch_testing"
9 Search: text("abc")
10 Hits: 0
11 Undef Hits: 0
12 Action Reference Count: 0
13 Done
```

Example 3: Using the Refine search functionality in REPLACE_ALL action type.

```
1 > add policy patset pat_list_2
2 Done
3 > bind policy patset pat_list_2 "www.abc.com"
4 Done
5 > bind policy patset pat_list_2 "www.def.com"
6 Done
7 > add rewrite action refineSearch_act_31 replace_all "HTTP.RES.BODY
   (100000)" "\"https://\"" -search "patset(\"pat_list_2\")" -
   refineSearch "EXTEND(7,0).REGEX_SELECT(re#http://#)"
8 Done
9 > sh rewrite action refineSearch_act_31
10 Name: refineSearch_act_31
11 Operation: replace_all
```

```

12 Target:HTTP.RES.BODY(100000)
13 Refine Search:EXTEND(7,0).REGEX_SELECT(re#http://#)
14 Value:"https://"
15 Search: patset("pat_list_2")
16 Hits: 0
17 Undef Hits: 0
18 Action Reference Count: 0
19 Done

```

Example 4: Using the Refine search functionality in DELETE_ALL action type.

```

1 >add rewrite action refineSearch_act_4 delete_all "HTTP.RES.BODY(50000)
  " -search text("Windows Desktops") -refineSearch "EXTEND(40,40).
  REGEX_SELECT(re#\s*<AppData>.*\s*<\/AppData>#)"
2 > show REWRITE action refineSearch_act_4
3 Name: refineSearch_act_4
4 Operation: delete_all
5 Target:HTTP.RES.BODY(50000)
6 Refine Search:EXTEND(40,40).REGEX_SELECT(re#\s*<AppData>.*\s*<\/AppData
  >#)
7 Search: text("Windows Desktops")
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done
12 >

```

Example 5: Using the Refine Search functionality in CLIENTLESS_VPN_ENCODE_ALL action type.

»»

```

add rewrite action act2 clientless_vpn_encode_all http.req.body(100) -search text("abcd")
Done
sh rewrite action act2
Name: act1
Operation: clientless_vpn_encode_all
Target:http.req.body(100)
Search: text("abcd")
Hits: 0
Undef Hits: 0
Action Reference Count: 0
Done

```

»»

Example 6: Using the Refine Search functionality in CLIENTLESS_VPN_DECODE_ALL action type.

```
1 > add rewrite action act1 clientless_vpn_decode_all http.req.body(100)
   -search text("abcd")
2 Done
3 > sh rewrite action act1
4 Name: act1
5 Operation: clientless_vpn_decode_all
6 Target:http.req.body(100)
7 Search: text("abcd")
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done
12 >
```

Modify an existing rewrite action by using the command line interface

At the command prompt, type the following commands to modify an existing rewrite action and verify the configuration:

- `set rewrite action <name> [-target <expression>] [-stringBuilderExpr <expression>] [-search <expression>] [-refineSearch <expression >] [-comment <string>]`

At the command prompt, type the following commands to verify the modified configuration

- `show rewrite action <name>`

Example:

```
1 > set rewrite action insertact -target "Client-IP"
2 Done
3 > show rewrite action insertact
4
5 Name: insertact
6 Operation: insert_http_header Target:Client-IP
7 Value:CLIENT.IP.SRC
8 Hits: 0
9 Undef Hits: 0
10 Action Reference Count: 0
11 Done
```

Remove a rewrite action by using the command line interface

At the command prompt, type the following commands to remove a rewrite action:


```
rm rewrite action <name>
```

Example:

```
1 > rm rewrite action insertact
2 Done
```

Configure a rewrite action by using the configuration utility

1. Navigate to **AppExpert > Rewrite > Actions**.
2. In the details pane, do one of the following:
 - To create an action, click **Add**.
 - To modify an existing action, select the action, and then click **Edit**.
3. Click **Create** or **OK**. A message appears in the status bar, stating that the Action has been configured successfully.
4. Repeat steps 2 through 4 to create or modify as many rewrite actions as you want.
5. Click **Close**.

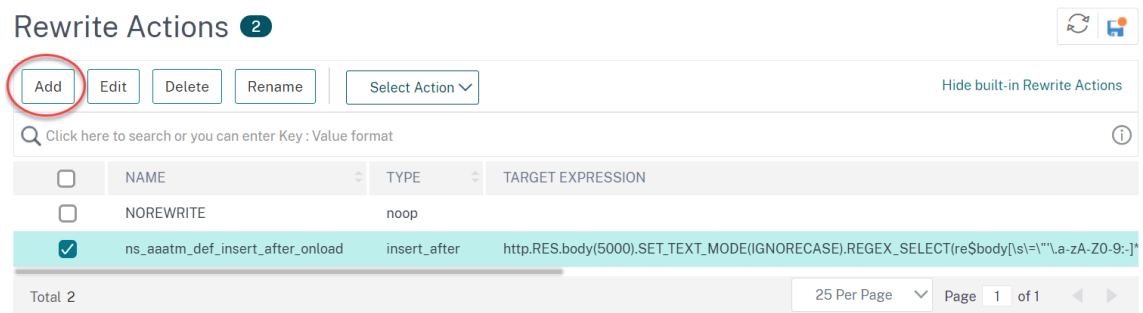

Rewrite Actions 2

Hide built-in Rewrite Actions

Click here to search or you can enter Key : Value format

<input type="checkbox"/>	NAME	TYPE	TARGET EXPRESSION
<input type="checkbox"/>	NOREWRITE	noop	
<input checked="" type="checkbox"/>	ns_aaatm_def_insert_after_onload	insert_after	http.RES.body(5000).SET_TEXT_MODE(IGNORECASE).REGEX_SELECT(re\$body[!s=!""\a-zA-Z0-9-:]

Total 2 25 Per Page Page 1 of 1

Add an expression by using the Add Expression dialog box

1. In the **Create Rewrite Action** or **Configure Rewrite Action** dialog box, under the text area for the type argument you want to enter, click **Add**.
2. In the **Add Expression** dialog box, in the first list box choose the first term for your expression.
 - HTTP. The HTTP protocol. Choose this if you want to examine some aspect of the request that pertains to the HTTP protocol.
 - SYS. The protected websites. Choose this if you want to examine some aspect of the request that pertains to the recipient of the request.
 - CLIENT. The computer that sent the request. Choose this if you want to examine some aspect of the sender of the request.

When you make your choice, the rightmost list box lists appropriate terms for the next part of your expression.

1. In the second list box, choose the second term for your expression. The choices depend upon which choice you made in the previous step, and are appropriate to the context. After you make your second choice, the Help window below the Construct Expression window (which was blank) displays help describing the purpose and use of the term you just chose.
2. Continue choosing terms from the list boxes that appear to the right of the previous list box, or typing strings or numbers in the text boxes that appear to prompt you to enter a value, until your expression is finished.
For more information about the PI expressions language and creating expressions for responder policies, see [“Policies and Expressions.”](#)

If you want to test the effect of a rewrite action when used on sample HTTP data, you can use the Rewrite Expression Evaluator.

Rewrite TCP payloads

Target expressions in actions for TCP rewrite must begin with one of the following expression prefixes:

- **CLIENT.TCP.PAYLOAD.** For rewriting TCP payloads in client requests. For example, CLIENT.TCP.PAYLOAD(10000).AFTER_STR(“string1”).
- **SERVER.TCP.PAYLOAD.** For rewriting TCP payloads in server responses. For example, SERVER.TCP.PAYLOAD(1000).B64DECODE.BETWEEN(“string1”, “string2”).

Evaluate a rewrite action by using the Rewrite Action Evaluator dialog box

1. In the **Rewrite Actions** details pane, select the rewrite action that you want to evaluate, and then click **Evaluate**.
2. In the Rewrite Expression Evaluator dialog box, specify values for the following parameters. (An asterisk indicates a required parameter.)

Rewrite Action—If the rewrite action you want to evaluate is not already selected, select it from the drop-down list. After you select a Rewrite action, the Details section displays the details of the selected Rewrite action.

New—Select New to open the Create Rewrite Action dialog box and create a rewrite action.

Modify—Select Modify to open the Configure Rewrite Action dialog box and modify the selected rewrite action.

Flow Type—Specifies whether to test the selected rewrite action with HTTP Request data or

HTTP Response data. The default is Request. If you want to test with Response data, select Response.

HTTP Request/Response Data*—Provides a space for you to provide the HTTP data that the Rewrite Action Evaluator is used for testing. You can paste the data directly into the window, or click Sample to insert some sample HTTP headers.


Show end-of-line—Specifies whether to show UNIX-style end-of-line characters (\n) at the end of each line of sample HTTP data.

Sample—Inserts sample HTTP data into the HTTP Request/Response Data window. You can choose either GET or POST data.

Browse—Opens a local browse window so that you can choose a file containing sample HTTP data from a local or network location.

Clear—Clears the current sample HTTP data from the HTTP Request/Response Data window.

3. Click Evaluate. The **Rewrite Action Evaluator** evaluates the effect of the Rewrite action on the sample data that you chose, and displays the results as modified by the selected **Rewrite** action in the **Results** window. Additions and deletions are highlighted as indicated in the legend in the lower left-hand corner of the dialog box.
4. Continue evaluating Rewrite actions until you have determined that all of your actions have the effect that you wanted.
 - You can modify the selected rewrite action and test the modified version by clicking **Modify** to open the **Configure Rewrite Action** dialog box, making and saving your changes, and then clicking Evaluate again.
 - You can evaluate a different rewrite action using the same request or response data by selecting it from the **Rewrite Action** drop-down list, and then clicking **Evaluate** again.
5. Click **Close** to close the **Rewrite Expression Evaluator** and return to the **Rewrite Actions** pane.
6. To delete a rewrite action, select the rewrite action you want to delete, then click **Remove** and, when prompted, confirm your choice by clicking **OK**.

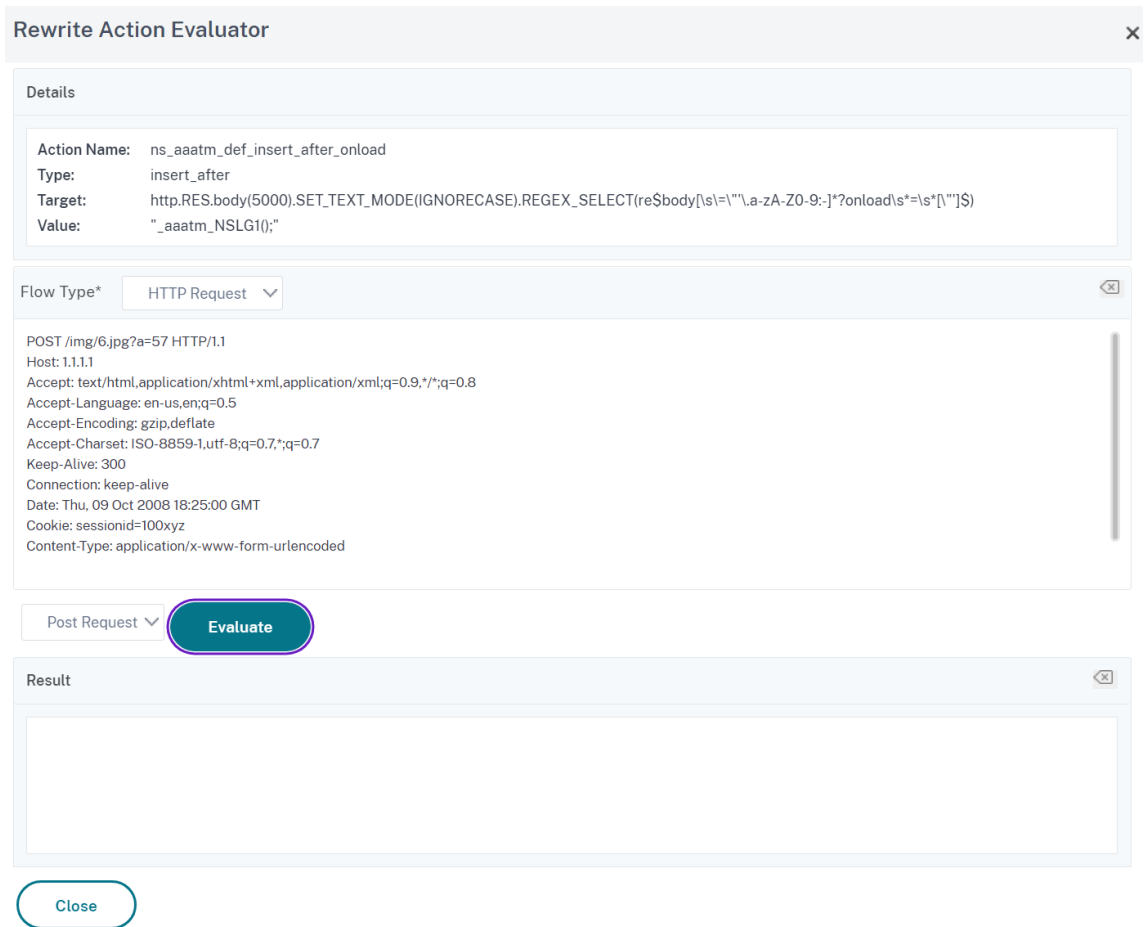

Configure rewrite policy

After you create any needed rewrite actions, you must create at least one rewrite policy to select the requests that you want the NetScaler appliance to rewrite.

A rewrite policy consists of a rule, which itself consists of one or more expressions, and an associated action that is performed if a request or response matches the rule. Policy rules for evaluating HTTP requests and responses can be based on almost any part of a request or response.

Even though you cannot use TCP rewrite actions to rewrite data other than the TCP payload, you can base the policy rules for TCP rewrite policies on the information in the transport layer and the layers below the transport layer.

If a configured rule matches a request or response, the corresponding policy is triggered and the action associated with it is carried out.

Note:

You can use either the command line interface or the GUI to create and configure rewrite policies.

Users who are not thoroughly familiar with the command line interface and the NetScaler Policy expression language will usually find using the GUI much easier.

To add a new rewrite policy by using the command line interface

At the command prompt, type the following commands to add a new rewrite policy and verify the configuration:

- `<add rewrite policy <name> <expression> <action> [<undefaction>]`
- `<show rewrite policy <name>`

Example 1. Rewriting HTTP Content

```
1 > add rewrite policyNew "HTTP.RES.IS_VALID" insertact NOREWRITE
2 Done
3 > show rewrite policyNew
4     Name: policyNew
5     Rule: HTTP.RES.IS_VALID
6     RewriteAction: insertact
7     UndefAction: NOREWRITE
8     Hits: 0
9     Undef Hits: 0
10
11 Done
```

Example 2. Rewriting a TCP Payload (TCP Rewrite):

```
1 > add rewrite policy client_tcp_payload_policy CLIENT.IP.SRC.EQ
   (172.168.12.232) client_tcp_payload_replace_all
2 Done
3 > show rewrite policy client_tcp_payload_policy
4     Name: client_tcp_payload_policy
5     Rule: CLIENT.IP.SRC.EQ(172.168.12.232)
6     RewriteAction: client_tcp_payload_replace_all
7     UndefAction: Use Global
8     LogAction: Use Global
9     Hits: 0
10    Undef Hits: 0
11
12 Done
13 >
```

To modify an existing rewrite policy by using the command line interface

At the command prompt, type the following commands to modify an existing rewrite policy and verify the configuration:

- `<set rewrite policy <name> -rule <expression> -action <action> [<undefaction>]`
- `<show rewrite policy <name>`

Example:

```
1 > set rewrite policyNew -rule "HTTP.RES.IS_VALID" -action insertaction
2 Done
3
4 > show rewrite policyNew
5     Name: policyNew
6     Rule: HTTP.RES.IS_VALID
7     RewriteAction: insertaction
8     UndefAction: NOREWRITE
9     Hits: 0
10    Undef Hits: 0
11
12 Done
```

To remove a rewrite policy by using the command line interface

At the command prompt, type the following command to remove a rewrite policy:

```
rm rewrite policy <name>
```

Example:

```
1 > rm rewrite policyNew
2 Done
```

To configure a rewrite policy by using the GUI

1. Navigate to **AppExpert > Rewrite > Policies**.
2. In the details pane, do one of the following:
 - To create a policy, click Add.
 - To modify an existing policy, select the policy, and then click Open.
3. Click **Create** or **OK**. A message appears in the status bar, stating that the Policy has been configured successfully.
4. Repeat steps 2 through 4 to create or modify as many rewrite actions as you want.
5. Click **Close**. To delete a rewrite policy, select the rewrite policy you want to delete, then click **Remove** and, when prompted, confirm your choice by clicking **OK**.

Bind rewrite policy

After creating a rewrite policy, you must bind it to put it into effect. You can bind your policy to Global if you want to apply it to all traffic that passes through your NetScaler, or you can bind your policy to a specific virtual server or bind point to direct only that virtual server or bind the point's incoming traffic to that policy. If an incoming request matches a rewrite policy, the action associated with that policy is carried out.

Rewrite policies for evaluating HTTP requests and responses can be bound to virtual servers of type HTTP or SSL, or they can be bound to the REQ_OVERRIDE, REQ_DEFAULT, RES_OVERRIDE, and RES_DEFAULT bind points. Rewrite policies for TCP rewrite can be bound only to virtual servers of type TCP or SSL_TCP, or to the OTHERTCP_REQ_OVERRIDE, OTHERTCP_REQ_DEFAULT, OTHERTCP_RES_OVERRIDE, and OTHERTCP_RES_DEFAULT bind points.

Note:

The term OTHERTCP is used in the context of the NetScaler appliance to refer to all TCP or SSL_TCP requests and responses that you want to treat as a raw stream of bytes regardless of the protocols that the TCP packets encapsulate.

When you bind a policy, you assign it a priority. The priority determines the order in which the policies you define are evaluated. You can set the priority to any positive integer.

In the NetScaler operating system, policy priorities work in reverse order - the higher the number, the lower the priority. For example, if you have three policies with priorities of 10, 100, and 1000, the policy assigned a priority of 10 is applied first, then the policy assigned a priority of 100, and finally the policy assigned an order of 1000.

Unlike most other features in the NetScaler operating system, the rewrite feature continues to evaluate and implement policies after a request matches a policy. However, the effect of a particular action policy on a request or response will often be different depending on whether it is performed before or after another action. Priority is important to get the results you intended.

You can leave yourself plenty of room to add other policies in any order, and still set them to evaluate in the order you want, by setting priorities with intervals of 50 or 100 between each policy when you bind it. If you do this, you can add more policies at any time without having to reassign the priority of an existing policy.

When binding a rewrite policy, you also have the option of assigning a goto expression (gotoPriorityExpression) to the policy. A goto expression can be any positive integer that matches the priority assigned to a different policy that has a higher priority than the policy that contains the goto expression. If you assign a goto expression to a policy, and a request or response matches the policy, the NetScaler will immediately go to the policy whose priority matches the goto expression. It skips over any policies with priority numbers that are lower than that of the current policy, but higher than the priority number of the goto expression, and not evaluate those policies.

To globally bind a rewrite policy by using the command line interface

At the command prompt, type the following commands to globally bind a rewrite policy and verify the configuration:

- `bind rewrite global <policyName> <priority> [<gotoPriorityExpression>] [-type <type>] [-invoke (<labelType> <labelName>)]`

- `show rewrite global`

Example:

```

1 >bind rewrite global policyNew 10
2   Done
3
4 > show rewrite global
5 1)      Global bindpoint: RES_DEFAULT
6         Number of bound policies: 1
7
8 2)      Global bindpoint: REQ_OVERRIDE
9         Number of bound policies: 1
10
11   Done

```

To bind rewrite policy to a specific virtual server by using the command line interface

At the command prompt, type the following commands to bind the rewrite policy to a specific virtual server and verify the configuration:

- `bind lb vserver <name>@ (<serviceName>@ [-weight <positive_integer>])| <serviceGroupName>@ | (-policyName <string>@ [-priority <positive_integer>] [-gotoPriorityExpression <expression>] [-type (REQUEST | RESPONSE)] [-invoke (<labelType> <labelName>)])`
- `show lb vserver <name>`

Example:

```

1 > bind lb vserver lbvip -policyName ns_cmp_msapp -priority 50
2   Done
3 >
4 > show lb vserver lbvip
5     lbvip (8.7.6.6:80) - HTTP           Type: ADDRESS
6     State: DOWN
7     Last state change was at Wed Jul 15 05:54:24 2009 (+226 ms)
8     Time since last state change: 28 days, 01:57:26.350
9     Effective State: DOWN
10    Client Idle Timeout: 180 sec
11    Down state flush: ENABLED
12    Disable Primary Vserver On Down : DISABLED
13    Port Rewrite : DISABLED
14    No. of Bound Services : 0 (Total)      0 (Active)
15    Configured Method: LEASTCONNECTION
16    Mode: IP
17    Persistence: NONE
18    Vserver IP and Port insertion: OFF
19    Push: DISABLED  Push VServer:
20    Push Multi Clients: NO
21    Push Label Rule: none
22
23 1)      Policy : ns_cmp_msapp Priority:50

```

24	2)	Policy : cf-pol	Priority:1	Inherited
25		Done		

To bind a rewrite policy to a bind point by using the GUI

1. Navigate to **AppExpert > Rewrite > Policies**.
2. In the details pane, select the rewrite policy you want to globally bind, and then click **Policy Manager**.
3. In the **Rewrite Policy Manager** dialog box, in the **Bind Points** menu, do one of the following:
 - a) If you want to configure bindings for HTTP rewrite policies, click **HTTP**, and then click either **Request** or **Response**, depending on whether you want to configure request-based rewrite policies or response-based rewrite policies.
 - b) If you want to configure bindings for TCP rewrite policies, click **TCP**, and then click either **Client** or **Server**, depending on whether you want to configure client-side TCP rewrite policies or server-side TCP rewrite policies.
4. Click the bind point to which you want to bind the rewrite policy. The **Rewrite Policy Manager** dialog box displays all the rewrite policies that are bound to the selected bind point.
5. Click **Insert Policy** to insert a new row and display a drop-down list with all available, unbound rewrite policies.
6. Click the policy you want to bind to the bind point. The policy is inserted into the list of rewrite policies bound to the bind point.
7. In the **Priority** column, you can change the priority to any positive integer. For more information about this parameter, see priority in “Parameters for binding a rewrite policy.”
8. If you want to skip over policies and go directly to a specific policy if the current policy is matched, change the value in the Goto Expression column to equal the priority of the next policy to be applied.. For more information about this parameter, see gotoPriorityExpression in “Parameters for binding a rewrite policy.”
9. To modify a policy, click the policy, and then click **Modify Policy**.
10. To unbind a policy, click the policy, and then click **Unbind Policy**.
11. To modify an action, in the Action column, click the action you want to modify, and then click **Modify Action**.
12. To modify an invoke label, in the **Invoke** column, click the invoke label you want to modify, and then click **Modify Invoke Label**.
13. To regenerate the priorities of all the policies that are bound to the bind point you are currently configuring, click **Regenerate Priorities**. The policies retain their existing priorities relative to the other policies, but the priorities are renumbered in multiples of 10.
14. Click **Apply Changes**.
15. Click **Close**. A message appears in the status bar, stating that the Policy has been configured successfully.

To bind a rewrite policy to a specific virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane list of virtual servers, select the virtual server to which you want to bind the rewrite policy, and then click **Open**.
3. In the **Configure Virtual Server (Load Balancing)** dialog box, select the **Policies** tab. All policies configured on your NetScaler appear on the list.
4. Select the check box next to the name of the policy you want to bind to this virtual server.
5. Click **OK**. A message appears in the status bar, stating that the Policy has been configured successfully.

Configure rewrite policy labels

If you want to build a more complex policy structure than is supported by single policies, you can create policy labels and then bind them as you would policies. A policy label is a user-defined point to which policies are bound. When a policy label is invoked, all the policies bound to it are evaluated in the order of the priority you configured. A policy label can include one or multiple policies, each of which can be assigned its own result. A match on one policy in the policy label can result in proceeding to the next policy, invoking a different policy label or appropriate resource, or an immediate end to policy evaluation and the return of control to the policy that invoked the policy label.

A rewrite policy label consists of a name, a transform name that describes the type of policy included in the policy label, and a list of policies bound to the policy label. Each policy that is bound to the policy label contains all of the elements described in [Configuring a Rewrite Policy](#).

Note: You can use either the command line interface or the GUI to create and configure rewrite policy labels. Users who are not thoroughly familiar with the command line interface and the NetScaler Policy Infrastructure (PI) language usually find using the GUI much easier.

To configure a rewrite policy label by using the command line interface

To add a rewrite policy label, at the command prompt, type the following command:

```
add rewrite policylabel <labelName> <transform>
```

For example, to add a rewrite policy label named polLabelHTTPResponses to group all policies that work on HTTP responses, you would type the following:

```
add rewrite policy label polLabelHTTPResponses http_res
```

To modify an existing rewrite policy label, at the **NetScaler** command prompt, type the following command:

```
set rewrite policy <name> <transform>
```

Note:

The set rewrite policy command takes the same options as the add rewrite policy command.

To remove a rewrite policy label, at the **NetScaler** command prompt, type the following command:

```
rm rewrite policy <name>
```

For example, to remove a rewrite policy label named polLabelHTTPResponses, you would type the following:

```
rm rewrite policy polLabelHTTPResponses
```

To configure a rewrite policy label by using the GUI

1. Navigate to **AppExpert > Rewrite > Policy Labels**.
2. In the details pane, do one of the following:
 - To create a policy label, click **Add**.
 - To modify an existing policy label, select the policy, and then click **Open**.
3. Add or remove policies from the list that is bound to the policy label.
 - To add a policy to the list, click **Insert Policy**, and choose a policy from the drop-down list. You can create a policy and add it to the list by choosing New Policy in the list, and following the instructions in [Configuring a Rewrite Policy](#).
 - To remove a policy from the list, select that policy, and then click Unbind Policy.
4. Modify the priority of each policy by editing the number in the Priority column. You can also automatically renumber policies by clicking Regenerate Priorities.
5. Click **Create** or **OK**, and then click **Close**.

To remove a policy label, select it, and then click **Remove**. To rename a policy label, select it and then click **Rename**. Edit the name of the policy, and then click **OK** to save your changes.

Content-length header behavior in a streaming rewrite action

December 22, 2023

Content-Length header is one of the ways to indicate the length of the message (in bytes) in an HTTP request or response. Apart from the Content-Length header, you can also specify the length of the message by using one of the following ways:

- Chunked encoding
- FIN Termination

In a streaming process, the NetScaler sends data continuously after processing the rewrite action. As the data is sent continuously and not held by the NetScaler, the actual length of the message that would be sent to the client is unknown. Therefore, the correct value of the Content-Length header cannot be mentioned in the response.

To support the streaming process, the rewrite feature of NetScaler converts the way to indicate the length of the message from the Content-Length header to the FIN termination. As part of the conversion, the NetScaler corrupts the Content-Length header by rearranging the first four characters of the header name.

In HTTP, the client is expected to ignore headers that it does not understand. So the client does not understand the corrupted Content-Length header name and therefore ignores the header. To improve the performance of the NetScaler, the header is corrupted instead of deleted. Corrupting the header name instead of deleting avoids recomputing the checksum because the checksum is not changed if the same bytes are in a different order.

For example, consider the following HTTP request:

```
1 GET / HTTP/1.1
2 Accept: application/x-ms-application, image/jpeg, application/xaml+xml,
  image/gif, image/pjpeg, application/x-ms-xbap, application/vnd.ms-
  excel, application/vnd.ms-powerpoint, application/msword, /
3 Accept-Language: en-GB
4 User-Agent: Mozilla/4.0 (compatible; MSIE 7.0; Windows NT 6.1; WOW64;
  Trident/7.0; SLCC2; .NET CLR 2.0.50727; .NET CLR 3.5.30729; .NET CLR
  3.0.30729; Media Center PC 6.0; .NET4.0C; .NET4.0E; CMDTDF; MS-RTC
  LM 8)
5 Accept-Encoding: gzip, deflate
6 Host: test.example.net
7 Connection: Keep-Alive
```

In a working scenario, the response between NetScaler and the back-end server for this HTTP request is as follows:

```
1 HTTP/1.1 200 OK
2 Content-Length: 10967
3 Connection: close
4 var SERVER_URL = 'https\x3a\x2f\x2ftest.example.net\x2f';
5 var WEB_SERVER_HOST = 'test.example.net';
```

But the response received by the client from NetScaler in a non-working scenario is as follows. The Content-Length header is renamed to ntCoent-Length.

```
1 HTTP/1.1 200 OK
2 ntCoent-Length: 10967
3 nnCoection: close
4 var SERVER_URL = 'https\x3a\x2f\x2ftest.example.net\x2f';
5 var WEB_SERVER_HOST = 'test.example.net';
```

In general, the client applications support all the three ways of transaction - Content-Length header, Chunked encoding, and FIN Termination. So, the conversion from Content-Length header to FIN Termination must not cause any issue. But, if the application doesn't work because of this modification, then you must Disable the streaming process.

How to disable the streaming process in a rewrite policy

You can disable the streaming process in a rewrite policy using one of the following ways:

1. Add a non-streaming action associated with a rewrite policy that is bound at a higher priority. The action must be in such a way that it doesn't modify the response.

For example:

```
add rewrite action non_stream_act replace_all HTTP.RES.BODY
(1000000)HTTP.RES.FULL_HEADER -search text("pattern_which_will_not_match_i
")
```

The value of the body in this rewrite action must be more than the value on which the current streaming action is working.

2. Instead of the streaming configuration, use the non-streaming configuration.

Note:

Moving from streaming to non-streaming processing might impact the performance of the NetScaler.

For example, a streaming configuration can be converted to a non-streaming configuration as follows:

Streaming Configuration:

```
1 add rewrite action rw_act_1 replace_all HTTP.RES.BODY(1000) "\
  http\\"" -search text("http")
2
3 add policy patset pat_list
4 bind policy patset pat_list abcd
5 bind policy patset pat_list defg
6
7 add rewrite action rw_act_2 replace_all HTTP.RES.BODY(1000) "\
  replaced_data\\"" -search patset("pat_list")
```

Non-streaming configuration:

```
1 add rewrite action rw_act_1 replace_all HTTP.RES.BODY(1000) "\
  http\\"" -search regex(re/http/)
2
3 add rewrite action rw_act_1 replace_all HTTP.RES.BODY(1000) "\
  http\\"" -search regex(re/abcd|defg/)
```

Rewrite action and policy examples

December 21, 2023

The examples in this section demonstrate how to configure rewrite to perform various useful tasks. The examples occur in the server room of Example Manufacturing Inc., a mid-sized manufacturing company that uses its Web site to manage a considerable portion of its sales, deliveries, and customer support.

Example Manufacturing has two domains: example.com for its Web site and email to customers, and example.net for its intranet. Customers use the Example Web site to place orders, request quotes, research products, and contact customer service and technical support.

As an important part of Example's revenue stream, the Web site must respond quickly and keep customer data confidential. Example therefore has several Web servers and uses NetScaler appliances to balance the Web site load and manage traffic to and from its Web servers.

The Example system administrators use the rewrite features to perform the following tasks:

Example 1: Delete old X-Forwarded-For and Client-IP Headers

Example Inc. removes old X-Forwarded-For and Client-IP HTTP headers from incoming requests.

Example 2: Adding a Local Client-IP Header

Example Inc. adds a new, local Client-IP header to incoming requests.

Example 3: Tagging Secure and Insecure Connections

Example Inc. tags incoming requests with a header that indicates whether the connection is a secure connection.

Example 4: Mask the HTTP Server Type

Example Inc. modifies the HTTP Server: header so that unauthorized users and malicious code cannot use that header to determine the HTTP server software it uses.

Example 5: Redirect an External URL to an Internal URL

Example Inc. hides information about the actual names of its Web servers and the configuration of its server room from users, to make URLs on its Web site shorter and easier to remember and to improve security on its site.

Example 6: Migrating Apache Rewrite Module Rules

Example Inc. moved its Apache rewrite rules to a NetScaler appliance, translating the Apache PERL-based script syntax to the NetScaler rewrite rule syntax.

Example 7: Marketing Keyword Redirection

The marketing department at Example Inc. sets up simplified URLs for certain predefined keyword searches on the company's Web site.

Example 8: Redirect Queries to the Queried Server.

Example Inc. redirects certain query requests to the appropriate server.

Example 9: Home Page Redirection

Example Inc. recently acquired a smaller competitor, and it now redirects requests to the acquired company's home page to a page on its own Web site.

Example 10: Policy-based RSA Encryption

Example Inc. encrypt HTTP predefined and user-defined header or body content by using PEM RSA public key.

Each of these tasks requires that the system administrators create rewrite actions and policies and bind them to a valid bind point on the NetScaler.

Example 1: Delete Old X-Forwarded-For and client-IP headers

December 22, 2023

Example Inc. wants to remove old X-Forwarded-For and Client-IP HTTP headers from incoming requests, so that the only X-Forwarded-For headers that appear are the ones added by the local server. This configuration can be done through the NetScaler command line or the configuration utility. The Example Inc. system administrator is an old-school networking engineer and prefers to use a CLI where possible, but wants to be sure he understands the configuration utility interface so that he can show new system administrators on the team how to use it.

The examples below demonstrate how to perform each configuration with both the CLI and the configuration utility. The procedures are abbreviated on the assumption that users will already know the basics of creating rewrite actions, creating rewrite policies, and binding policies.

- For more detailed information about creating rewrite actions, see [Configuring a Rewrite Action](#).
- For more detailed information about creating rewrite policies, see [Configuring a Rewrite Policy](#).
- For more detailed information about binding rewrite policies, see [Binding a Rewrite Policy](#).

To delete old X-Forwarded and Client-IP headers from a request by using the command line interface

At the command prompt, type the following commands in the order shown:

```

1 add rewrite action act_del_xfor delete_http_header x-forwarded-for
2 add rewrite action act_del_cip delete_http_header client-ip
3 add rewrite policy pol_check_xfor 'HTTP.REQ.HEADER("x-forwarded-for").
  EXISTS' act_del_xfor
4 add rewrite policy pol_check_cip 'HTTP.REQ.HEADER("client-ip").EXISTS'
  act_del_cip
5 bind rewrite global pol_check_xfor 100 200
6 bind rewrite global pol_check_cip 200 300

```

To delete old X-Forwarded and Client-IP headers from a request by using the configuration utility

In the Create Rewrite Action dialog box, create two rewrite actions with the following descriptions.

Name	Type	Argument(s)
act_del_xfor	delete_http_header	x-forwarded-for
act_del_cip	delete_http_header	client-ip

In the Create Rewrite Policy dialog box, create two rewrite policies with the following descriptions.

Name	Expression	Action
pol_check_xfor	'HTTP.REQ.HEADER("x-forwarded-for").EXISTS'	act_del_xfor
pol_check_cip	'HTTP.REQ.HEADER("client-ip").EXISTS'	act_del_cip

Bind both policies to global, assigning the priorities and goto expression values shown below.

Name	Priority	Goto Expression
pol_check_xfor	100	200
pol_check_cip	200	300

All old X-Forwarded-For and Client-IP HTTP headers are now deleted from incoming requests.

Example 2: Add a local client-IP header

December 21, 2023

Example Inc. wants to add a local Client-IP HTTP header to incoming requests. This example contains two slightly different versions of the same basic task.

To add a local Client-IP header by using the command line interface

At the command prompt, type the following commands in the order shown:

```
1 add rewrite action act_ins_client insert_http_header NS-Client 'CLIENT.
  IP.SRC'
2 add rewrite policy pol_ins_client 'HTTP.REQ.HEADER("x-forwarded-for").
  EXISTS || HTTP.REQ.HEADER("client-ip").EXISTS' act_ins_client
3 bind rewrite global pol_ins_client 300 END
```

To add a local Client-IP header by using the configuration utility

In the Create Rewrite Action dialog box, create a rewrite action with the following description.

Name	Type	Argument(s)
act_ins_client	insert_http_header	NS-Client 'CLIENT.IP.SRC'

In the Create Rewrite Policy dialog box, create a rewrite policy with the following description.

Name	Expression	Action
pol_ins_client	'HTTP.REQ.HEADER("x-forwarded-for").EXISTS HTTP.REQ.HEADER("client-ip") .EXISTS'	act_ins_client

Bind policy to global, assigning the priorities and goto expression values shown below.

Name	Priority	Goto Expression
pol_ins_client	100	Next

Example 3: Tag secure and insecure connections

December 22, 2023

Example Inc. wants to tag incoming requests with a header that indicates whether or not the connection is a secure connection. This helps the server keep track of secure connections after the NetScaler has decrypted the connections.

To implement this configuration, you would begin by creating rewrite actions with the values shown in the following tables. These actions label connections to port 80 as insecure connections, and connections to port 443 as secure connections.

Action Name	Type of Rewrite Action	Header Name	Value
Action-Rewrite-SSL_YES	INSERT_HTTP_HEADER	SSL	YES

Action Name	Type of Rewrite Action	Header Name	Value
Action-Rewrite-SSL_NO	INSERT_HTTP_HEADER	SSL	NO

You would then create a rewrite policy with the values shown in the following tables. These policies check incoming requests to determine which requests are directed to port 80 and which are directed to port 443. The policies then add the correct SSL header.

Policy Name	Action Name	Undefined Action	Expression
Policy-Rewrite-SSL_YES	Action-Rewrite-SSL_YES	NOREWRITE	CLIENT.TCP.DSTPORT.EQ(443)
Policy-Rewrite-SSL_NO	Action-Rewrite-SSL_NO	NOREWRITE	CLIENT.TCP.DSTPORT.EQ(80)

Finally, you would bind the rewrite policies to NetScaler, assigning the first policy a priority of 200, and the second a priority of 300, and setting the goto expression of both policies to END.

Each incoming connection to port 80 now has an SSL:NO HTTP header added to it and each incoming connection to port 443 has an SSL:YES HTTP header added to it.

Example 4: Mask the HTTP server type

December 21, 2023

Example Inc. wants to modify the HTTP Server: header so that unauthorized users and malicious code cannot use the header to identify the software that the HTTP server uses.

To modify the HTTP Server: header, you would create a rewrite action and a rewrite policy with the values in the following tables.

Action Name	Type of Rewrite Action	Expression to choose target reference	String expression for replacement text
Action-Rewrite-Server_Mask	REPLACE	HTTP.RES.HEADER("Server")	"Web Server 1.0"

Policy Name	Action Name	Undefined Action	Expression
Policy-Rewrite-Server_Mask	Action-Rewrite-Server_Mask	NOREWRITE	HTTP.RES.IS_VALID

Example commands:

```
> add rewrite action Action-Rewrite-Server_Mask REPLACE HTTP.RES.HEADER("Server") "\"Web Server 1.0\""
```

```
> add rewrite policy-Rewrite-Server_Mask HTTP.RES.IS_VALID Action-Rewrite-Server_Mask NOREWRITE
```

You would then globally bind the rewrite policy, assigning a priority of 100 and setting the Goto Priority Expression of the policy to END.

The HTTP Server: header is now modified to read "Web Server 1.0,"masking the actual HTTP server software used by the Example Inc. Web site.

Example 5: Redirect an external URL to an internal URL

January 25, 2022

Example Inc. wants to hide its actual server room configuration from users to improve security on its Web servers.

To improve security, you would create a rewrite action with the values as shown in the following tables. For request headers, the action in the table modifies `www.example.com` to `web.hq.example.net`. For response headers, the action does the opposite, translating `web.hq.example.net` to `www.example.com`.

Action Name	Type of Rewrite Action	Expression to choose target reference	String expression for replacement text
Action-Rewrite-Request_Server_Replace	REPLACE	HTTP.REQ.HOSTNAME.SERVER	"web.hq.example.net"
Action-Rewrite-Response_Server_Replace	REPLACE	HTTP.RES.HEADER("Server")	"www.example.com"

The first policy checks incoming requests to see if they are valid. If they are valid, it performs the Action-Rewrite-Request_Server_Replace action. The second policy checks responses to see if they originate at the server `web.hq.example.net`. If they do, it performs the Action-Rewrite-Response_Server_Replace action.

Examples of rewrite action and policy for redirecting an external URL.

```
add rewrite action Action-Rewrite-Request_Server_Replace REPLACE HTTP
.REQ.HOSTNAME.SERVER '"Web.hq.example.net"'

add rewrite action Action-Rewrite-Response_Server_Replace REPLACE
HTTP.RES.HEADER("Server") '"www.example.com"'

add rewrite policy Rewrite-Request_Server_Replace HTTP.REQ.HOSTNAME
.SERVER.EQ("www.example.com")Action-Rewrite-Request_Server_Replace
NOREWRITE

add rewrite policy Rewrite-Response_Server_Replace HTTP.REQ.HEADER("
Server").EQ("Web.hq.example.net")Action-Rewrite-Response_Server_Replace
```

Finally, you would bind the rewrite policies, assigning each a priority of 500 because they are in different policy banks and does not conflict. Set the goto expression to NEXT for both bindings.

```
bind rewrite global Policy-Rewrite-Request_Server_Replace 500 END -
type REQ_DEFAULT

bind rewrite global Policy-Rewrite-Response_Server_Replace 500 END -
type RES_DEFAULT
```

All instances of `www.example.com` in the request headers are now changed to `web.hq.example.net`, and all instances of `web.hq.example.net` in response headers are now changed to `www.example.com`.

Example 6: Migrate Apache rewrite module rules

December 21, 2023

Example Inc., is currently using the Apache rewrite module to process search requests sent to its Web servers and redirect those requests to the appropriate server on the basis of information in the request URL. Example Inc. wants to simplify its setup by migrating these rules onto the NetScaler platform.

Several Apache rewrite rules that Example currently uses are shown below. These rules redirect search requests to a special results page if they do not have a SiteID string or if they have a SiteID string equal to zero (0), or to the standard results page if these conditions do not apply.

The following are the current Apache rewrite rules:

- RewriteCond %{REQUEST_FILENAME} ^/search\$ [NC]
- RewriteCond %{QUERY_STRING} !SiteId= [OR]
- RewriteCond %{QUERY_STRING} SiteId=0
- RewriteCond %{QUERY_STRING} CallName=DisplayResults [NC]
- RewriteRule ^.*\$ results2.html [P,L]
- RewriteCond %{REQUEST_FILENAME} ^/search\$ [NC]
- RewriteCond %{QUERY_STRING} CallName=DisplayResults [NC]
- RewriteRule ^.*\$ /results.html [P,L]

To implement these Apache rewrite rules on the NetScaler, you would create rewrite actions with the values in the following tables.

Action Name	Type of Rewrite Action	Expression to choose target reference	String expression for replacement text
Action-Rewrite-Display_Results_NulSiteID	REPLACE	HTTP.REQ.URL	"/results2.html"
Action-Rewrite-Display_Results	REPLACE	HTTP.REQ.URL	"/results2.html"

You would then create rewrite policies with the values as shown in the tables below.

Policy Name	Action Name	Undefined Action	Expression
Policy-Rewrite-Display_Results_NulSiteID	Action-Rewrite-Display_Results_NulSiteID	NOREWRITE	HTTP.REQ.URL.PATH.SET_TEXT_MO “/search”) && (!HTTP.REQ.URL.QUERY.CONTAINS(“SiteId=”) HTTP.REQ.URL.QUERY.CONTAINS(“SiteId=0”) HTTP.REQ.URL.QUERY.SET_TEXT_M “Call- Name=DisplayResults”))
Policy-Rewrite-Display_Results	Action-Rewrite-Display_Results	NOREWRITE	HTTP.REQ.URL.PATH.SET_TEXT_MO “/search”) HTTP.REQ.URL.QUERY.SET_TEXT_M “Call- Name=DisplayResults”))

Finally, you would bind the rewrite policies, assigning the first a priority of 600 and the second a priority of 700, and then set the goto expression to NEXT for both bindings.

The NetScaler now handles these search requests exactly as the Web server did before the Apache rewrite module rules were migrated.

Example 7: Marketing keyword redirection

December 21, 2023

The marketing department at Example Inc. wants to set up simplified URLs for certain predefined keyword searches on the company’s Web site. For these keywords, it wants to redefine the URL as shown below.

- External URL:

<http://www.example.com/\<marketingkeyword\>>

- Internal URL:

<http://www.example.com/go/kwsearch.asp?keyword=\<marketingkeyword\>>

To set up redirection for marketing keywords, you would create a rewrite action with the values in the following table.

Action Name	Type of Rewrite Action	Expression to choose target location	String expression for replacement text
Action-Rewrite-Modify_URL	INSERT_BEFORE	HTTP.REQ.URL.PATH.GET("go/k-	wsearch.aspkeyword="l"

You would then create a rewrite policy with the values in the following table.

Policy Name	Action Name	Undefined Action	Expression
Policy-Rewrite-Modify_URL	Action-Rewrite-Modify_URL	NOREWRITE	HTTP.REQ.HOSTNAME.SERVER.EQ("www.example.com")

Finally, you would bind the rewrite policy, assigning it a priority of 800. Unlike the previous rewrite policies, this policy should be the last to be applied to a request that matches its criteria. For this reason, NetScaler administrator sets its Goto Priority Expression to END.

Any request using a marketing keyword is redirected to the keyword search CGI page, whereupon a search is performed and all remaining policies are skipped.

Example 8: Redirect queries to the queried server

December 21, 2023

Example Inc. wants to redirect query requests to the appropriate server, as shown here.

- <Request: GET /query.cgi?server=5HOST: www.example.com
- <Redirect URL: <http://web-5.example.com/>

To implement this redirection, you would first create a rewrite action with the values in the following table.

Action Name	Type of Rewrite Action	Expression to choose target reference	String expression for replacement text
Action-Rewrite-Replace_Hostheader	REPLACE	HTTP.REQ.HEADER("Host").BEFORE_STR(".example.com")	"server"+" HTTP.REQ.URL.QUERY.VALUE("web")

You would then create a rewrite policy with the values in the following table.

Policy Name	Action Name	Undefined Action	Expression
Policy-Rewrite-Replace_Hostheader	Action-Rewrite-Replace_Hostheader	NOREWRITE	HTTP.REQ.HEADER("Host").EQ("www.example.com")

Example commands:

```
> add rewrite action Action-Rewrite-Server_Mask REPLACE HTTP.RES.HEADER("Server") "\"Web Server 1.0\""
Done
```

```
> add rewrite policy Policy-Rewrite-Server_Mask HTTP.RES.IS_VALID Action-Rewrite-Server_Mask NOREWRITE
Done
```

Finally, you would bind the rewrite policy, assigning it a priority of 900. Because this policy should be the last policy applied to a request that matches its criteria, you set the goto expression to END.

Incoming requests to any URL that begins with `<http://www.example.com/query.cgi?server>=` are redirected to the server number in the query.

Example 9: Home Page Redirection

April 25, 2023

New Company, Inc. recently acquired a smaller competitor, Purchased Company, and wants to redirect the home page for Purchased Company to a new page on its own Web site, as shown here.

- Old URL: http://www.purchasedcompany.com/%5C*
- New URL: <http://www.newcompany.com/products/page.htm>

To redirect requests to the Purchased Company home page, you would create rewrite actions with the values in the following table.

Action Name	Type of Rewrite Action	Expression to choose target reference	String expression for replacement text
Action-Rewrite-Replace_URLr	REPLACE	HTTP.REQ.URL.PATH_AND_QUERY	"/products/page.htm"
Action-Rewrite-Replace_Host	REPLACE	HTTP.REQ.HOSTNAME	"www.newcompany.com"

```

1 add rewrite action action-Rewrite-Replace_URLr REPLACE HTTP.REQ.URL.PATH_AND_QUERY "/products/page.htm"
2
3 add rewrite action action-Rewrite-Replace_Host REPLACE HTTP.REQ.HOSTNAME "www.newcompany.com"

```

You would then create rewrite policies with the values in the following table.

Policy Name	Action Name	Undefined Action	Expression
Policy-Rewrite-Replace-None	Action-Rewrite-Replace-None	NOREWRITE	!HTTP.REQ.HOSTNAME.SERVER.EQ("www.purchasedcompany.com"))
Policy-Rewrite-Replace-Host	Action-Rewrite-Replace_Host	NOREWRITE	HTTP.REQ.HOSTNAME.SERVER.EQ("www.purchasedcompany.com"))

```

1 add rewrite policy Policy-Rewrite-Replace-None !HTTP.REQ.HOSTNAME.SERVER.EQ("www.purchasedcompany.com") Action-Rewrite-Replace-None NOREWRITE
2
3 add rewrite policy Policy-Rewrite-Replace-Host HTTP.REQ.HOSTNAME.SERVER.EQ("www.purchasedcompany.com") Action-Rewrite-Replace_Host NOREWRITE

```

Finally, you would bind the rewrite policies globally, assigning the first a priority of 100 and the second a priority of 200.

```

1 bind rewrite global Policy-Rewrite-Replace-None 100
2
3 bind rewrite global Policy-Rewrite-Replace-Host 200

```

Requests to the acquired company’s old Web site are now redirected to the correct page on the New Company home page.

Example 10: Policy-based RSA encryption

December 21, 2023

The RSA algorithm uses the PKEY_ENCRYPT_PEM() function to encrypt HTTP predefined and user-defined header or body content. The function accepts only RSA public keys (not private keys) and the encrypted data cannot be longer than the length of the public key. When the data being encrypted is shorter than the key length, the algorithm uses RSA_PKCS1 padding method.

In a sample scenario, the function can be used with B64ENCODE() function in a rewrite action to replace an HTTP header value with a value encrypted by an RSA public key. The data being encrypted is then decrypted by the recipient using the RSA private key.

You can implement the feature by using a rewrite policy. To do this, you must complete the following tasks:

1. Add RSA public key as a policy expression.
2. Create rewrite action.
3. Create rewrite policy.
4. Bind rewrite policy as global.
5. Verify RSA encryption

Policy-based RSA encryption by using NetScaler command interface

Complete the following tasks to configure policy-based RSA encryption by using the NetScaler command interface.

To add RSA public key as a policy expression by using the NetScaler command interface:

```
1 add policy expression pubkey '"-----BEGIN RSA PUBLIC KEY-----
  MIGJAoGBAKL5vgQEj73Kxp+9
  yn1v5gPR1pnc4oLM2a0kaWwB0sB6rzCIy6znwnvwCY1xRvQhRlJSAyJb7oL7wZFIJ2FOR8Cz
  +8ZQWXU2syG+udi4EnWqLgFYowF9zK+o79az597eNPAjsHZ/C2oL/+6qY5a/
  f1z8bQPrHC4GpFfAEJhh/+NnAgMBAAE=-----END RSA PUBLIC KEY-----"'
```

To add rewrite an action to encrypt an HTTP header request by using the NetScaler command interface:

```
add rewrite action encrypt_act insert_http_header encrypted_data
HTTP.REQ.HEADER("data_to_encrypt").PKEY_ENCRYPT_PEM(pubkey).B64ENCODE
```

To add rewrite policy by using the NetScaler command interface:

```
1 add rewrite policy encrypt_pol 'HTTP.REQ.HEADER("data_to_encrypt").
  EXISTS' encrypt_act
```

To bind rewrite policy global by using the NetScaler command interface:

```
bind rewrite global encrypt_pol 10 -type RES_DEFAULT
```

To verify RSA encryption by using the NetScaler command interface:

```
1 >curl -v -H "data_to_encrypt: Now is the time that tries men's souls"
  http://10.217.24.7/`
2
3 * About to connect() to 10.217.24.7 port 80 (#0)
4
5 * Trying 10.217.24.7...
6
7 * connected
8
9 * Connected to 10.217.24.7 (10.217.24.7) port 80 (#0)
10
11 > GET / HTTP/1.1
12 > User-Agent: curl/7.24.0 (amd64-portbld-freebsd8.4) libcurl/7.24.0
  OpenSSL/0.9.8y zlib/1.2.3
13 > Host: 10.217.24.7
14 > Accept: */*
15 > data_to_encrypt: Now is the time that tries men's souls
16 >
17 < HTTP/1.1 200 OK
18 < Date: Mon, 09 Oct 2017 05:22:37 GMT
19 < Server: Apache/2.2.24 (FreeBSD) mod_ssl/2.2.24 OpenSSL/0.9.8y DAV/2
20 < Last-Modified: Thu, 20 Feb 2014 20:29:06 GMT
21 < ETag: "6bd9f2-2c-4f2dc5b570880"
22 < Accept-Ranges: bytes
23 < Content-Length: 44
24 < Content-Type: text/html
25 < encrypted_data: UliegKBJqZd7JdaC49XMLEK1+eQN2rEfevypW91gKvBVlaKM9N9/
  C2BKuztS99SE0xQaisidzN5IgeIcpQMn+
  CiKYVlLzPG1RuhGaqHYzIt6C8A842da7xE40lV5SHwScqkqZ5aVrXc3EwtUksna7j0Lr40aLeXnnB
  /DB11pUAE=
26 <
27 * Connection #0 to host 10.217.24.7 left intact
28 <html><body><h1>It works!</h1></body></html>* Closing connection #0
```

Subsequent execution of this curl command with the same data to encrypt shows that the encrypted data is different each execution. This is because the padding inserts random bytes at the beginning of the data to encrypt, causing the encrypted data to be different each time.

```
1 >curl -v -H "data_to_encrypt: Now is the time that tries men's souls"
  http://10.217.24.7/`
2
3 < encrypted_data:
  Da0jtl1Pl4DlQKf58MMel4cFwFvZwhjMqv5aUYM5Iyzk4UpwIYhpRvgTNU2lXEvc1H0tcR1EGC
```

```
 /ViQncLc4EbTurCWLbzjce3+fknnMmzF0lRT6ZZXWbMvsNF0xDA1SnuAgwxWXY/  
 ooe9Wy6SYsL2oi1sr5wTG+RihDd9zP+P14=  
4  
5 >curl -v -H "data_to_encrypt: Now is the time that tries men's souls"  
 http://10.217.24.7/  
6  
7 . . .  
8  
9 < encrypted_data: eej6YbGP68yHn48qFUvi+fkG+0i08j3yYLSrRBU+  
 TPQ8WeDVaWnDNAVLvL0ZYHHAU1W2YDRYb+8  
 cdKHLpW36QbI6Q5FfBuWKZSI2hSyUvypTpCoAYcHXFv0ns+tRtg0EPNNj+  
 lyGjKQWtFi6K8IXXISoDy42FblKIlA7gEriY=
```

Policy-based RSA encryption by using the GUI

The GUI enables you to complete the following tasks:

To add RSA public key as a policy expression by using the GUI:

1. Sign into the NetScaler appliance and navigate to **Configurations > AppExpert > Advanced Expressions**.
2. In the details pane, click **Add** to define an RSA public key as an advanced policy expression.
3. In Create Expression page, set the following parameters:
 - a) Expression name. Name of the advanced expression.
 - b) Expression. Define RSA public key as an advanced expression using the Expression Editor.
 - c) Comments. A brief description of the expression.
4. Click **Create**.

To add rewrite an action to encrypt an HTTP header request by using the GUI:

1. Sign into the NetScaler appliance and navigate to **Configurations > AppExpert > Rewrite > Actions**.
2. In the details pane, click **Add** to add a rewrite action.
3. In the **Create Rewrite Action** screen, set the following parameters:
 - a) Name. Name of the rewrite action.
 - b) Type. Select action type as INSERT_HTTP_HEADER.
 - c) Use the action type to insert a header. Enter the name of the HTTP header that needs to be rewritten.
 - d) Expression. Name of the advanced policy expression associated to the action.
 - e) Comments. A brief description of the rewrite action.
4. Click **Create**.

To add rewrite advanced policy by using the GUI:

1. Sign into the NetScaler appliance and navigate to **Configurations > AppExpert > Rewrite > Policies**.
2. In the **Rewrite Policies** page, click **Add** to add a rewrite policy.
3. In the **Create Rewrite Policy** page, set the following parameters:
 - a) Name. Name of the rewrite policy.
 - b) Action. Name of the rewrite action to perform if the request or response matches this rewrite policy.
 - c) Log Action. Name of message log action to use when a request matches this policy.
 - d) Undefined-Result Action. Action to perform if the result of policy evaluation is undefined.
 - e) Expression. Name of the advanced policy expression that triggers the action.
 - f) Comments. A brief description of the rewrite action.
4. Click **Create**.

To bind rewrite policy global by using the GUI:

1. Sign into the NetScaler appliance and navigate to **Configurations > AppExpert > Rewrite > Policies**.
2. In the **Rewrite Policies** screen, select a rewrite policy that you want to bind and click **Policy Manager**.
3. In the Rewrite Policy Manager page, in the Bind Points section, set the following parameters:
 - a) Bind Point. Select the binding point as Default Global.
 - b) Protocol. Select the protocol type as HTTP.
 - c) Connection Type. Select the connection type as Request.
 - d) Click **Continue** to view the **Policy Binding** section.
 - e) In the **Policy Binding** section, select the rewrite policy and set the bind parameters.
4. Click **Bind**.

Example 11: Policy-based RSA encryption with no padding operation

May 2, 2023

The `PKEY_ENCRYPT_PEM_NO_PADDING()` policy function uses the RSA algorithm with no padding operation before performing RSA encryption. The policy function works just like the `PKEY_ENCRYPT_PEM()` function, except it uses `RSA_NO_PADDING` method instead of `RSA_PKCS1_PADDING`. The `pkey` parameter is a text string with a PEM-encoded RSA public key. Similar to `PKEY_ENCRYPT_PEM()`, you can use a policy expression for the key.

You can implement the feature by using a rewrite policy. To do this, you must complete the following tasks:

1. Add RSA public key as a policy expression.
2. Create rewrite action.

Policy-based RSA encryption by using NetScaler command interface

Complete the following tasks to configure policy-based RSA encryption by using the NetScaler command interface.

To add RSA public key with no padding policy expression by using the NetScaler command interface:

```
1 add expression rsa_pub_key_4096 '"-----BEGIN RSA PUBLIC KEY-----" + "
  MIICGgKCAgEArrwBldKd48xrp0SRPMrg+eNA000DU6t5b/WYQLdElqNv7WpEfBrA" +
  \ "nwI2s619gEU1r4zoLqL7l5ALtt5Z+F0JBYf0zBz0ky0GtEJ5iX5GP4QxT65J3nHH"
  + "4MTF3acmjvXxclmaKXEFlaVIzW7FTTr3Luw/Cn0jflAB403Q6F9VBVvQmOVYWnqoI"
  + \ "+0q1VIg6Q1pAcvdKBi0f85BBofE5EIBZ/1Jt0CdbSv568l+8
  ve7BnSUncFHoRR30" + "/"
  VfSsDuNWZf7n3RNMzxEuIA72UGPzNYFQzvcPOdzd0aN7jAXw0mgC/NSvKzGKHlo" +
  \ "mUYYBzLVQdDMZWnd6jSzsBRXsXsNEy/RuXwplrA5epo7JdCoMkfeI4vUXm6MNR8"
  + "TQdFqIc1pdn0sbRf9ec62XbcfR7P8CDTsmLSaagx3rjenPdB+LTWKw2VUF+YONIG"
  + \ "jM3fyFef9ovVhLhS5HvMqFGs8P75W+
  d7B0IbIu3EngACiEJOpySsETD4WgPK6Iyv" + "
  j6cxsLeYMtELTb0fBIIqysCHdmjF3M1lqdp4dKs3+W798GJZYM5MxZKUzrBi0Xu" +
  \ "e7GtSh2aimsfQureUD+0z0RN2umeDsYcA1ghXMclDP+jLS1lnrv0Yvo+TKcm9b8G"
  + "uR/drbcrcsGyWFW+bsAu3Awz9S6TePurP5unRmNNvXpH5DRgsYl3d50CAwEAAQ=="
  + \ "-----END RSA PUBLIC KEY-----\ "
```

To add rewrite action for no padding policy expression by using the NetScaler command interface:

```
add rewrite action rsa_encrypt_act insertHTTPHeader encrypted 'HTTP.
REQ.HEADER("plaintext").PKEY_ENCRYPT_PEM_NO_PADDING(rsa_pub_key_4096)
```

Policy-based RSA encryption with no padding option by using the GUI

The GUI enables you to complete the following tasks:

To add RSA public key for no padding operation as a policy expression by using the GUI:

1. Sign into the NetScaler appliance and navigate to **Configurations > AppExpert > Advanced Expressions**.
2. In the details pane, click **Add** to define an RSA public key as an advanced policy expression.
3. In Create Expression page, set the following parameters:
 - a) Expression name. Name of the advanced expression.

- b) Expression. Define RSA public key as an advanced expression using the Expression Editor.
Note: The maximum string length is of 255 characters in a policy expression. For any key longer than 1024-bits, you have to break the key into smaller chunks and concatenate the chunks together as “chunk1”+ “chunk2”+ ...
 - c) Comments. A brief description of the expression.
4. Click **Create**.

To add rewrite an action by using the GUI:

1. Sign into the NetScaler appliance and navigate to **Configurations > AppExpert > Rewrite > Actions**.
2. In the details pane, click **Add** to add a rewrite action.
3. In the **Create Rewrite Action** screen, set the following parameters:
 - a) Name. Name of the rewrite action.
 - b) Type. Select action type as INSERT_HTTP_HEADER.
 - c) Use the action type to insert a header. Enter the name of the HTTP header that needs to be rewritten.
 - d) Expression. Name of the advanced policy expression associated to the action.
 - e) Comments. A brief description of the rewrite action.
4. Click **Create**.

Example 12: Configure rewrite to change the host name and URL in client request on NetScaler appliance

June 4, 2024

Rewrite feature on a NetScaler appliance is used to convert the URL available in the client request to another URL that the back end server can understand. You can achieve the following benefits by using the rewrite feature:

- Enhances the security by hiding the actual URL to the resource, which is requested by the client.
- Prevents the unauthorized user access from gaining access to the network resources.

Consider an example where your current organization is acquired by another organization. It becomes a difficult job for admins to inform about the new web address to every user of the acquired organization. In this scenario, using rewrite feature becomes convenient to change the host name and URL in the client requests for the website of the acquired organization. You can use rewrite to change the URLs in the client request temporarily when the website is under maintenance.

The following section describes the procedure to change the host name and URL in a client request using rewrite feature.

Consider an example where the user enters a `http://www.example.com` URL in the web browser. The website administrator wants the NetScaler appliance to convert the preceding URL in the client request as `http://myexample.example.net.in/resource/inventory/s?t=112`.

In the preceding example, the website administrator wants the NetScaler appliance to replace the “example.com” domain name with “myexample.example.net.in” and the URL with “resource/inventory/s?t=112”.

Perform the following by using the CLI

1. Log on to the NetScaler appliance using SSH.
2. Add rewrite actions.
 - `add rewrite action rewrite_domain_url_replace_act replace HTTP.REQ.URL "\"http://myexample.example.net.in/resource/inventory/s?t=112\""`
3. Add rewrite policies for the rewrite actions.
 - `add rewrite policy rewrite_domain_url_pol HTTP.REQ.HOSTNAME.EQ("www.example.com")rewrite_domain_url_replace_act`
4. Bind the rewrite policies to a virtual server.
 - `bind lb vserver rewrite_LB -policyName rewrite_domain_url_pol -priority 100 -gotoPriorityExpression END -type REQUEST`

URL transformation

December 21, 2023

The URL transformation feature provides a method for modifying all URLs in designated requests from an external version seen by outside users to an internal URL seen only by your Web servers and IT staff. You can redirect user requests seamlessly, without exposing your network structure to users. You can also modify complex internal URLs that users may find difficult to remember into simpler, more easily remembered external URLs.

Note

Before you can use the URL transformation feature, you must enable the Rewrite feature. To enable the Rewrite feature, see [Enabling the Rewrite Feature](#).

URL transform feature rewrites URLs in HTML response body and is not applied to JavaScript and other variables.

To begin configuring URL transformation, you create profiles, each describing a specific transformation. Within each profile, you create one or more actions that describe the transformation in detail. Next, you create policies, each of which identifies a type of HTTP request to transform, and you associate each policy with an appropriate profile. Finally, you globally bind each policy to put it into effect.

Configure URL transformation profiles

December 21, 2023

A profile describes a specific URL transformation as a series of actions. The profile functions primarily as a container for the actions, determining the order in which the actions are performed. Most transformations transform an external hostname and optional path into a different, internal hostname and path. Most useful transformations are simple and require only a single action, but you can use multiple actions to perform complex transformations.

You cannot create actions and then add them to a profile. You must create the profile first, and then add actions to it. In the CLI, creating an action and configuring the action are separate steps. Creating a profile and configuring the profile are separate steps in both the CLI and the configuration utility.

To create a URL transformation profile by using the NetScaler command line

At the NetScaler command prompt, type the following commands, in the order shown, to create a URL transformation profile and verify the configuration. You can then repeat the second and third commands to configure additional actions:

- `add transform profile <profileName> -type URL [-onlyTransformAbsURLinBody (ON|OFF)] \[-comment <comment>]`
- `add transform action <name> <profileName> <priority>`
- `set transform action <name> [-priority <priority>] [-reqUrlFrom <expression>] [-reqUrlInto <expression>] [-resUrlFrom <expression>] [-resUrlInto <expression>] [-cookieDomainFrom <expression>]`


```
[-cookieDomainInto <expression>] [-state (ENABLED|DISABLED)] [-comment "<string>"]
```

- show transform profile <name>

Example:

```

1 > add transform profile shoppingcart -type URL
2 Done
3 > add transform action actshopping shoppingcart 1000
4 Done
5 > set transform action actshopping -priority 1000 -reqUrlFrom 'shopping
   .example.com' -reqUrlInto 'www.example.net/shopping' -resUrlFrom '
   www.example.net/shopping' -resUrlInto 'shopping.example.com' -
   cookieDomainFrom 'example.com' -cookieDomainInto 'example.net' -
   state ENABLED -comment 'URL transformation for shopping cart.'
6 Done
7 > show transform profile shoppingcart
8     Name: shoppingcart
9         Type: URL           onlyTransformAbsURLinBody: OFF
10    Comment:
11    Actions:
12
13 1)           Priority 1000   Name: actshopping           ENABLED
14 Done

```

To modify an existing URL transformation profile or action by using the NetScaler command line

At the NetScaler command prompt, type the following commands to modify an existing URL transformation profile or action and verify the configuration:

Note: Use a set transform profile or set transform action command, respectively. The set transform profile command takes the same arguments as does the add transform profile command, and set transform action is the same command that was used for initial configuration.

- set transform action <name> [-priority <priority>] [-reqUrlFrom <expression>] [-reqUrlInto <expression>] [-resUrlFrom <expression>] [-resUrlInto <expression>] [-cookieDomainInto <expression>] [-state (ENABLED|DISABLED)] [-comment "<string>"]
- show transform profile <name>

Example:

```

1 > set transform action actshopping -priority 1000 -reqUrlFrom '
   searching.example.net' -reqUrlInto 'www.example.net/searching' -
   resUrlFrom 'www.example.net/searching' -resUrlInto 'searching.
   example.com' -cookieDomainInto 'example.net' -state ENABLED -comment
   'URL transformation for searching cart.'

```

```
2 Done
3 > show transform profile shoppingcart
4     Name: shoppingcart
5         Type: URL           onlyTransformAbsURLinBody: OFF
6     Comment:
7     Actions:
8
9 1)          Priority 1000   Name: actshopping       ENABLED
10 Done
```

To remove a URL transformation profile and actions by using the NetScaler command line

First remove all actions associated with that profile by typing the following command once for each action:

- `rm transform action <name>` After you have removed all actions associated with a profile, remove the profile as shown below.
- `rm transform profile <name>`

To create a URL transformation profile by using the configuration utility

1. In the navigation pane, expand **Rewrite**, expand URL Transformation, and then click **Profiles**.
2. In the details pane, click **Add**.
3. In the **Create URL Transformation Profile** dialog box, type or select values for the parameters. The contents of the dialog box correspond to the parameters described in “Parameters for configuring URL transformation profiles” as follows (asterisk indicates a required parameter):
 - Name*—name
 - Comment—comment
 - Only transform absolute URLs in response body—onlyTransformAbsURLinBody
4. Click **Create**, and then click **Close**. A message appears in the status bar, stating that the Profile has been configured successfully.

To configure a URL transformation profile and actions by using the configuration utility

1. In the navigation pane, expand **Rewrite**, expand URL Transformation, and then click **Profiles**.
2. In the details pane, select the profile you want to configure, and then click **Open**.
3. In the **Configure URL Transformation Profile** dialog box, do one of the following.
 - To create a new action, click **Add**.

- To modify an existing action, select the action, and then click **Open**.
4. Fill in the **Create URL Transformation Action** or **Modify URL Transformation Action** dialog box by typing or selecting values for the parameters. The contents of the dialog box correspond to the parameters described in “Parameters for configuring URL transformation profiles” as follows (asterisk indicates a required parameter):
 - Action Name*—name
 - Comments—comment
 - Priority*—priority
 - Request URL from—reqUrlFrom
 - Request URL into—reqUrlInto
 - Response URL from—resUrlFrom
 - Response URL into—resUrlInto
 - Cookie Domain from—cookieDomainFrom
 - Cookie Domain into—cookieDomainInto
 - Enabled—state
 5. Save your changes.
 - If you are creating a new action, click **Create**, and then **Close**.
 - If you are modifying an existing action, click **OK**.

A message appears in the status bar, stating that the Profile has been configured successfully.
 6. Repeat step 3 through step 5 to create or modify any additional actions.
 7. To delete an action, select the action, and then click **Remove**. When prompted, click **OK** to confirm the deletion.
 8. Click **OK** to save your changes and close the Modify URL Transformation Profile dialog box.
 9. To delete a profile, in the details pane select the profile, and then click **Remove**. When prompted, click **OK** to confirm the deletion.

Configure URL transformation policies

December 21, 2023

After you create a URL transformation profile, you next create a URL transformation policy to select the requests and responses that the NetScaler should transform by using the profile. URL transformation considers each request and the response to it as a single unit, so URL transformation policies are evaluated only when a request is received. If a policy matches, the NetScaler transforms both the request and the response.

Note: The URL transformation and rewrite features cannot both operate on the same HTTP header during request processing. Because of this, if you want to apply a URL transformation to a request, you must make sure that none of the HTTP headers it will modify are manipulated by any rewrite action.

To configure a URL transformation policy by using the NetScaler command line

You must create a new policy. On the command line, an existing policy can only be removed. At the NetScaler command prompt, type the following commands to configure a URL transformation policy and verify the configuration:

- `<add transform policy <name> <rule> <profileName>`
- `<show transform policy <name>`

Example:

```
1 > add transform policy polsearch HTTP.REQ.URL.SUFFIX.EQ("Searching")
   prosearching
2 Done
3 > show transform policy polsearch
4 1) Name: polsearch
5 Rule: HTTP.REQ.URL.SUFFIX.EQ("Searching")
6 Profile: prosearching
7 Priority: 0
8 Hits: 0
9 Done
```

To remove a URL transformation policy by using the NetScaler command line

At the NetScaler command prompt, type the following command to remove a URL transformation policy:

```
rm transform policy <name>
```

Example:

```
1 > rm transform policy polsearch
2 Done
```

To configure a URL transformation policy by using the configuration utility

1. In the navigation pane, expand **Rewrite**, expand URL Transformation, and then click **Policies**.
2. In the details pane, do one of the following:
 - To create a new policy, click **Add**.

- To modify an existing policy, select the policy, and then click **Open**.
3. In the **Create URL Transformation Policy** or **Configure URL Transformation Policy** dialog box, type or select values for the parameters. The contents of the dialog box correspond to the parameters described in “Parameters for configuring URL transformation policies” as follows (asterisk indicates a required parameter):

- Name*—name (Cannot be changed for a previously configured policy.)
- Profile*—profileName
- Expression—rule

If you want help with creating an expression for a new policy, you can either hold down the Control key and press the space bar while your cursor is in the Expression text box. To create the expression, you can type it directly as described below, or you can use the Add Expression dialog box.

4. Click **Prefix**, and choose the prefix for your expression.

Your choices are:

- HTTP—The HTTP protocol. Choose this if you want to examine some aspect of the request that pertains to the HTTP protocol.
- SYS—The protected Web site(s). Choose this if you want to examine some aspect of the request that pertains to the recipient of the request.
- CLIENT—The computer that sent the request. Choose this if you want to examine some aspect of the sender of the request.
- SERVER—The computer to which the request was sent. Choose this if you want to examine some aspect of the recipient of the request.
- URL—The URL of the request. Choose this if you want to examine some aspect of the URL to which the request was sent.
- TEXT—Any text string in the request. Choose this if you want to examine a text string in the request.
- TARGET—The target of the request. Choose this if you want to examine some aspect of the request target.

After you choose a prefix, the NetScaler displays a two-part prompt window that displays the possible next choices at the top, and a brief explanation of what the selected choice means at the bottom. The choices depend on which prefix you chose.

5. Select your next term.

If you chose HTTP as your prefix, your choices are REQ, which specifies HTTP requests, and RES, which specifies HTTP responses. If you chose another prefix, your choices are more varied. For help on a specific choice, click that choice once to display information about it in the lower prompt window.

When you are certain which choice you want, double-click it to insert it into the Expression window.

1. Type a period, and then continue selecting terms from the list boxes that appear to the right of the previous list box. You type the appropriate text strings or numbers in the text boxes that appear to prompt you to enter a value, until your expression is finished.
2. Click **Create** or **OK**, depending on whether you are creating a new policy or modifying an existing policy.
3. Click **Close**. A message appears in the status bar, stating that the Policy has been configured successfully.

To add an expression by using the Add Expression dialog box

1. In the **Create Responder Action** or **Configure Responder Action** dialog box, click **Add**.
2. In the **Add Expression** dialog box, in the first list box choose the first term for your expression.
 - HTTP. The HTTP protocol. Choose this if you want to examine some aspect of the request that pertains to the HTTP protocol.
 - SYS. The protected Web site(s). Choose this if you want to examine some aspect of the request that pertains to the recipient of the request.
 - CLIENT. The computer that sent the request. Choose this if you want to examine some aspect of the sender of the request.
 - SERVER. The computer to which the request was sent. Choose this if you want to examine some aspect of the recipient of the request.
 - URL. The URL of the request. Choose this if you want to examine some aspect of the URL to which the request was sent.
 - TEXT. Any text string in the request. Choose this if you want to examine a text string in the request.
 - TARGET. The target of the request. Choose this if you want to examine some aspect of the request target.

When you make your choice, the rightmost list box lists appropriate terms for the next part of your expression.
3. In the second list box, choose the second term for your expression. The choices depend upon which choice you made in the previous step, and are appropriate to the context. After you make your second choice, the Help window below the Construct Expression window (which was blank) displays help describing the purpose and use of the term you just chose.

4. Continue choosing terms from the list boxes that appear to the right of the previous list box, or typing strings or numbers in the text boxes that appear to prompt you to enter a value, until your expression is finished.

Globally binding URL transformation policies

December 21, 2023

After you have configured your URL transformation policies, you bind them to Global or a bind point to put them into effect. After binding, any a request or response that matches a URL transformation policy is transformed by the profile associated with that policy.

When you bind a policy, you assign a priority to it. The priority determines the order in which the policies you define are evaluated. You can set the priority to any positive integer. In the NetScaler OS, policy priorities work in reverse order - the higher the number, the lower the priority.

Because the URL transformation feature implements only the first policy that a request matches, not any additional policies that it might also match, policy priority is important for achieving the results that you intend. If you give your first policy a low priority (such as 1000), you tell the NetScaler to perform it only if other policies with a higher priority do not match a request. If you give your first policy a high priority (such as 1), you tell the NetScaler to perform it first, and skip any other policies that might also match. You can leave yourself plenty of room to add other policies in any order, without having to reassign priorities, by setting priorities with intervals of 50 or 100 between each policy when you globally bind your policies.

Note: URL transformation policies cannot be bound to TCP-based virtual servers.

To bind a URL transformation policy by using the NetScaler command line

At the NetScaler command prompt, type the following commands to globally bind a URL transformation policy and verify the configuration:

- `bind transform global <policyName> <priority>`
- `show transform global`

Example:

```
1 > bind transform global polisearching 100
2   Done
3 > show transform global
4 1)   Policy Name: polisearching
5     Priority: 100
6
```

To bind a URL transformation policy by using the configuration utility

1. In the navigation pane, expand Rewrite, then expand URL Transformation, and then click ****Policies**.
2. In the details pane, click **Policy Manager**.
3. In the **Transform Policy Manager** dialog box, choose the bind point to which you want to bind the policy**. The choices are:
 - **Override Global.** Policies that are bound to this bind point process all traffic from all interfaces on the NetScaler appliance, and are applied before any other policies.
 - **LB Virtual Server.** Policies that are bound to a load balancing virtual server are applied only to traffic that is processed by that load balancing virtual server, and are applied before any Default Global policies. After selecting LB Virtual Server, you must also select the specific load balancing virtual server to which you want to bind this policy.
 - **CS Virtual Server.** Policies that are bound to a content switching virtual server are applied only to traffic that is processed by that content switching virtual server, and are applied before any Default Global policies. After selecting CS Virtual Server, you must also select the specific content switching virtual server to which you want to bind this policy.
 - **Default Global.** Policies that are bound to this bind point process all traffic from all interfaces on the NetScaler appliance.
 - **Policy Label.** Policies that are bound to a policy label process traffic that the policy label routes to them. The policy label controls the order in which policies are applied to this traffic.
4. Select Insert Policy to insert a new row and display a drop-down list with all available, unbound URL transformation policies.
5. Select the policy you want to bind, or select New Policy to create a new policy. The policy that you selected or created is inserted into the list of globally bound URL transformation policies.
6. Make any additional adjustments to the binding.
 - To modify the policy priority, click the field to enable it, and then type a new priority. You can also select Regenerate Priorities to renumber the priorities evenly.
 - To modify the policy expression, double click that field to open the Configure Transform Policy dialog box, where you can edit the policy expression.
 - To set the Goto Expression, double click field in the Goto Expression column heading to display the drop-down list, where you can choose an expression.
 - To set the Invoke option, double click field in the Invoke column heading to display the drop-down list, where you can choose an expression.

7. Repeat steps 3 through 6 to add any additional URL transformation policies you want to globally bind.
8. Click **OK** to save your changes. A message appears in the status bar, stating that the Policy has been configured successfully.

RADIUS support for the rewrite feature

May 2, 2023

The NetScaler expressions language includes expressions that can extract information from and manipulate RADIUS messages in requests and responses. These expressions enable you to use the rewrite feature to modify portions of a RADIUS message before sending it to its destination. Your rewrite policies and actions can use any expression that is appropriate or relevant to a RADIUS message. The available expressions enable you to identify the RADIUS message type, extract any attribute-value pair (AVP) from the connection, and modify RADIUS AVPs. You can also create policy labels for RADIUS connections.

You can use the new RADIUS expressions in Rewrite rules for a number of purposes. For example, you could:

- Remove the domain\ portion of the RADIUS user-name AVP to simplify single sign-on (SSO).
- Insert a vendor-specific AVP, such as the MSISDN field used in telephone company operations to contain subscriber information.

You can also create policy labels to route specific types of RADIUS requests through a series of policies that are appropriate to those requests.

Note:

RADIUS for Rewrite has the following limitations:

- The NetScaler does not re-sign rewritten RADIUS requests or responses. If the RADIUS authentication server requires signed RADIUS messages, authentication will fail.
- The currently available RADIUS expressions do not work with RADIUS IPv6 attributes.

The NetScaler documentation for expressions that support RADIUS assumes familiarity with the basic structure and purpose of RADIUS communications. If you need more information about RADIUS, see your RADIUS server documentation or search online for an introduction to the RADIUS protocol.

Configuring Rewrite Policies for RADIUS

The following procedure uses the NetScaler command line to configure a rewrite action and policy and bind the policy to a rewrite-specific global bind point.

To configure a Rewrite action and policy, and bind the policy:

At the command prompt, type the following commands:

- `add rewrite action <actName> <actType>`
- `add rewrite policy <polName> <rule> <actName>`
- `bind rewrite policy <polName> <priority> <nextExpr> -type <bindPoint>` where `<bindPoint>` represents one of the rewrite-specific global bind points.

RADIUS Expressions for Rewrite

In a rewrite configuration, you can use the following NetScaler expressions to refer to various portions of a RADIUS request or response.

Identifying the Type of Connection:

- `RADIUS.IS_CLIENT`
Returns TRUE if the connection is a RADIUS client (request) message.
- `RADIUS.IS_SERVER`
Returns TRUE if the connection is a RADIUS server (response) message.

Request Expressions:

- `RADIUS.REQ.CODE`
Returns the number that corresponds to the RADIUS request type. A derivative of the `num_at` class. For example, a RADIUS access request would return 1 (one). A RADIUS accounting request would return 4.
- `RADIUS.REQ.LENGTH`
Returns the length of the RADIUS request, including the header. A derivative of the `num_at` class.
- `RADIUS.REQ.IDENTIFIER`
Returns the RADIUS request identifier, a number assigned to each request that allows the request to be matched to the corresponding response. A derivative of the `num_at` class.

- `RADIUS.REQ.AVP(<AVP Code No>).VALUE`
Returns the value of first occurrence of this AVP as a string of type `text_t`.
- `RADIUS.REQ.AVP(<AVP code no>).INSTANCE(instance number)`
Returns the specified instance of the AVP as a string of type `RAVP_t`. A specific RADIUS AVP can occur multiple times in a RADIUS message. `INSTANCE (0)` returns the first instance, `INSTANCE (1)` returns second instance, and so on, up to sixteen instances.
- `RADIUS.REQ.AVP(<AVP code no>).VALUE(instance number)`
Returns the value of specified instance of the AVP as a string of type `text_t`.
- `RADIUS.REQ.AVP(<AVP code no>).COUNT`
Returns the number of instances of a specific AVP in a RADIUS connection, as an integer.
- `RADIUS.REQ.AVP(<AVP code no>).EXISTS`
Returns `TRUE` if the specified type of AVP exists in the message, or `FALSE` if it does not.

Response Expressions:

RADIUS response expressions are identical to RADIUS request expressions, except that `RES` replaces `REQ`.

Typecasts of AVP Values:

The ADC supports expressions to typecast RADIUS AVP values to the text, integer, unsigned integer, long, unsigned long, ipv4 address, ipv6 address, ipv6 prefix and time data types. The syntax is the same as for other NetScaler typecast expressions.

Example:

The ADC supports expressions to typecast RADIUS AVP values to the text, integer, unsigned integer, long, unsigned long, ipv4 address, ipv6 address, ipv6 prefix and time data types. The syntax is the same as for other NetScaler typecast expressions.

```
1 RADIUS.REQ.AVP(8).VALUE(0).typecast_ip_address_at
```

AVP Type Expressions:

The NetScaler supports expressions to extract RADIUS AVP values by using the assigned integer codes described in RFC2865 and RFC2866. You can also use text aliases to accomplish the same task. Some examples follow.

- `RADIUS.REQ.AVP (1).VALUE` or `RADIUS.REQ.USERNAME.value`
Extracts the RADIUS user-name value.

- `RADIUS.REQ.AVP (4). VALUE` or `RADIUS.REQ. ACCT_SESSION_ID.value`
Extracts the Acct-Session-ID AVP (code 44) from the message.
- `RADIUS.REQ.AVP (26). VALUE` or `RADIUS.REQ.VENDOR_SPECIFIC.VALUE`
Extracts the vendor-specific value.

The values of most commonly-used RADIUS AVPs can be extracted in the same manner.

RADIUS Bind Points:

Four global bind points are available for policies that contain RADIUS expressions.

- `RADIUS_REQ_OVERRIDE`
Priority/override request policy queue.
- `RADIUS_REQ_DEFAULT`
Standard request policy queue.
- `RADIUS_RES_OVERRIDE`
Priority/override response policy queue.
- `RADIUS_RES_DEFAULT`
Standard response policy queue.

RADIUS Rewrite-Specific Expressions:

- `RADIUS.NEW_AVP`
Returns the specified RADIUS AVP as a string.
- `RADIUS.NEW_AVP_INTEGER32`
Returns the specified RADIUS AVP as an integer.
- `RADIUS.NEW_AVP_UNSIGNED32`
Returns the specified RADIUS AVP as an unsigned integer.
- `RADIUS.NEW_VENDOR_SPEC_AVP(<ID>, <definition>)`
Adds the specified extended vendor specific AVPs to the connection. For `<ID>`, substitute a long number. For `<definition>`, substitute a string that contains the data for the AVP.
- `RADIUS.REQ.AVP_START`
Returns the location between the end of the RADIUS header and the start of the AVPs. Used in rewrite actions.

Example:

```
1 add rewrite action insert1 insert_after radius.req.avp_start radius
  .new_avp(33, "NEW AVP")
```

- `RADIUS.REQ.AVP_END`

Returns the location at the end of radius message (or in other words end of all AVPs) in radius message. Used when performing rewrite actions.

Example:

```
1 add rewrite action insert2 insert_before radius.req.avp_end "radius
  .new_avp(33, \"NEW AVP\")"
```

- `RADIUS.REQ.AVP_LIST`

Returns the location at the start of the AVPs in a RADIUS message, and the length of the RADIUS message, excluding the header. In other words, returns all AVPs in a RADIUS message. Used to perform Rewrite actions.

Example:

```
1 add rewrite action insert3 insert_before_all radius.req.avp_list "
  radius.new_avp(33, \"NEW AVP\")" -search "avp(33)"
```

Valid Rewrite-Action Types for RADIUS:

The Rewrite action types that can be used with RADIUS expressions are:

- `INSERT_AFTER`
- `INSERT_BEFORE`
- `INSERT_AFTER_ALL`
- `INSERT_BEFORE_ALL`
- `DELETE`
- `DELETE_ALL`
- `REPLACE`
- `REPLACE_ALL`

All `INSERT_` actions can be used to insert a RADIUS AVP into a RADIUS connection.

Use Cases

Following are use cases for RADIUS with rewrite.

Rewriting the User-Name AVP

To configure the rewrite feature to remove the Domain\ string from the RADIUS user-name AVP, begin by creating a rewrite REPLACE action as shown in the example below. Use the action in a Rewrite policy that selects all RADIUS requests. Bind the policy to a global bind point. When you do so, set the priority the appropriate level to allow any block or reject policies to take effect first, but ensure that all requests that are not blocked or rejected are rewritten. Set the Goto Expression (gotoPriorityExpr) to NEXT to continue policy evaluation, and attach the policy to the RADIUS_REQ_DEFAULT queue.

Example:

```
1 add rewrite action rwActRadiusDomainDel replace radius.req.user_name q/  
  RADIUS.NEW_AVP(1,RADIUS.REQ.USER_NAME.VALUE.AFTER_STR(" "))/  
2 add rewrite policy RadiusRemoveDomainPol true rwActRadiusDomainDel
```

Note:

The rewrite policy for RADIUS is not applicable to a gateway virtual server. If a gateway virtual server is used a load balancing then RADIUS needs to be configured and the rewrite policy needs to be bound to a RADIUS load balancing virtual server.

Inserting a Vendor-Specific AVP

To configure Rewrite action to insert a Vendor-Specific AVP containing the contents of the MSISDN field, begin by creating a rewrite INSERT action that inserts the MSISDN field into the request. Use the action in a Rewrite policy that selects all RADIUS requests. bind the policy to global, setting the priority to an appropriate level and the other parameters as shown in the following example.

Example:

```
1 add rewrite action rwActRadiusInsMSISDN insert_after radius.req.  
  avp_start RADIUS.NEW_VENDOR_SPEC_AVP(<VENDOR ID>, "RADIUS.NEW_AVP(<  
  Attribute Code>, <MSISDN>")  
2 add rewrite policy rwPolRadiusInsMSISDN true rwActRadiusInsMSISDN  
3 bind rewrite global rwPolRadiusInsMSISDN 100 NEXT -type  
  RADIUS_REQ_DEFAULT
```

Diameter support for rewrite

December 21, 2023

The Rewrite feature now supports the Diameter protocol. You can configure Rewrite to modify Diameter requests and response as you would HTTP or TCP requests and responses, allowing you to use

Rewrite to manage the flow of Diameter requests and make necessary modifications. For example, if the “Origin-Host” value in a Diameter request is inappropriate, you can use Rewrite to replace it with a value that is acceptable to the Diameter server.

To configure Rewrite to modify a Diameter request

To configure the Rewrite feature to replace the Origin-Host in a diameter request with a different value, at the command prompt, type the following commands:

- `<add rewrite action <actname> replace “DIAMETER.REQ.AVP(264, \“NetScaler.example.net\”)”`
For `<actname>`, substitute a name for your new action. The name can consist of from one to 127 characters in length, and can contain letters, numbers, and the hyphen (-) and underscore (_) symbols. For `NetScaler.example.net`, substitute the Host-Origin that you want to use instead of the original Host-Name.
- `add rewrite policy <polname> “diameter.req.avp(264).value.eq(\“host.example.com\”)”<actname>`
For `<polname>`, substitute a name for your new policy. As with `<actname>`, the name can consist of from one to 127 characters in length, and can contain letters, numbers, and the hyphen (-) and underscore (_) symbols. For `host.example.com`, substitute the name of the Host-Origin that you want to change. For `<actname>`, substitute the name of the action that you just created.
- `bind lb vserver <vservname> -policyName <polname> -priority <priority> -type REQUEST`
For `<vservname>`, substitute the name of the load balancing virtual server to which you want to bind the policy. For `<polname>`, substitute the name of the policy you just created. For `<priority>`, substitute a priority for the policy.

Example:

To create a Rewrite action and policy to modify all Diameter Host-Origins of “host.example.com” to “NetScaler.example.net”, you could add the following action and policy, and bind the policy as shown.

```
1 > add rewrite action rw_act_replace_avp replace "diameter.req.avp(264)"
   "diameter.new.avp(264, \“NetScaler.example.net\”)"
2 > add rewrite policy rw_diam_pol "diameter.req.avp(264).value.eq(\“
   client.realm2.net\”)" rw_act_replace_avp
3 > bind lb vserver vs1 -policyName rw_diam_pol -priority 10 -type
   REQUEST
4
5 Done
```

DNS support for rewrite

December 26, 2023

You can configure the rewrite feature to modify DNS requests and responses, as you would for HTTP or TCP requests and responses. You can use rewrite to manage the flow of DNS requests, and make necessary modifications in the header, or in the answer section. For example, if the DNS response does not have the AA bit set in the header flag, you can use rewrite to set the AA bit in the DNS response and send it to the client.

DNS Expressions

In a rewrite configuration, you can use the following NetScaler expressions to refer to various portions of a DNS request or response:

See [Expressions and Descriptions](#)

DNS Bind Points

The following global bind points are available for policies that contain DNS expressions.

Bind Points	Description
DNS_REQ_OVERRIDE	Override request policy queue.
DNS_REQ_DEFAULT	Standard request policy queue.
DNS_RES_OVERRIDE	Override response policy queue.
DNS_RES_DEFAULT	Standard response policy queue.

In addition to the default bind points, you can create policy labels of type DNS_REQ or DNS_RES and bind DNS policies to them.

Rewrite Action Types for DNS

- **replace_dns_answer_section**—This action replaces the DNS answers section with the defined expression in the DNS policy.
- **replace_dns_header_field**—Checks the opcode type in the DNS request. Returns True or False, indicating whether the opcode type in the DNS request matches the specified opcode type. This action replaces the DNS header section with the defined expression in the DNS policy.

Configuring Rewrite Policies for DNS

The following procedure uses the NetScaler command line to configure a rewrite action and policy and bind the policy to a rewrite-specific global bind point.

Configure Rewrite action and policy, and bind the policy for DNS

At the command prompt, type the following commands:

1. `add rewrite action <actName> <actType>`

For `<actname>`, substitute a name for your new action. The name can be 1 to 127 characters in length, and can contain letters, numbers, hyphen (-), and underscore (_) symbols. For `<actType>`, specify the rewrite action types provided for DNS expressions.

2. `add rewrite policy <polName> <rule> <actName>`

For `<polname>`, substitute a name for your new policy. For `<actname>`, the name can be 1 to 127 characters in length, and can contain letters, numbers, hyphen (-), and underscore (_) symbols. For `<actname>`, substitute the name of the action that you just created.

3. `bind rewrite global <polName> <priority> <gotoPriorityExpression> -type <bindPoint>`

For `<polName>`, substitute the name of the policy that you just created. For `<priority>`, specify the priority of the policy. For `<bindPoint>`, substitute one of the rewrite -specific global bind points.

Example:

Set the AA bit of DNS request to load balance virtual server.

The following commands configure the NetScaler appliance to act as an authoritative DNS server for all the queries that it serves.

```
1 add rewrite action set_aa replace_dns_header_field dns.req.header.flags
  .set(aa)
2 add rewrite policy pol !dns.req.header.flags.is_set(aa) set_aa
3 bind rewrite global pol 100 -type dns_res_override
```

Modify the response answer and header section.

If the server responds with an NX domain, you can set the rewrite action to replace the response with specified IP address. A NOPOLICY-REWRITE enables you to invoke an external bank without processing an expression (a rule). This entry is a dummy policy that does not contain a rule but directs the entry to a policy label or virtual server specific policy banks.

```
1 add rewrite action set_aa_res replace_dns_header_field "dns.res.header.  
  flags.set(aa)"  
2 add rewrite action modify_nxdomain_res replace_dns_answer_section "dns.  
  new_rrset_a(\"10.102.218.160\",300)"  
3 add rewrite policy set_res_aa true set_aa_res  
4 add add rewrite policy modify_answer "dns.RES.HEADER.RCODE.EQ(nxdomain)  
  && dns.RES.QUESTION.TYPE.EQ(A)"  
5 modify_nxdomain_res  
6 add rewrite policylabel MODIFY_NODATA dns_res  
7 bind rewrite policylabel MODIFY_NODATA modify_answer 10 END  
8 bind rewrite policylabel MODIFY_NODATA set_res_aa 11 END  
9 bind lb vserver v1 -policyName NOPOLICY-REWRITE -priority 11 -  
  gotoPriorityExpression END -type  
10 RESPONSE -invoke policylabel MODIFY_NODATA
```

Limitations:

- Rewrite policies are evaluated only if the NetScaler appliance is configured as a DNS proxy server and there is a cache miss.
- If the Recursion Available (RA) flag in the header is set to YES, the RA flag will not be modified in the rewrites.
- If the RA flag in the header is set to YES, the CD flag in the header is modified regardless of any rewrite action.

MQTT support for rewrite

December 21, 2023

The rewrite feature supports the MQTT protocol. You can configure rewrite policies to take actions based on the parameters in the MQTT client requests and server responses.

Rewrite action for MQTT

The rewrite action for MQTT indicates the changes made to the MQTT request or response before sending it to a server or client.

Expression:

```
add rewrite action <name> <rewrite_type> <target> <rewrite_action>
```

Rewrite type for MQTT

Depending on the type of rewrite expression rule that is used, the following MQTT rewrite types are supported:

- `replace_mqtt`
- `insert_before_mqtt`
- `insert_after_mqtt`
- `delete_mqtt`
- `insert_mqtt`

Rewrite target for MQTT

In the following sample examples, the MQTT rewrite feature uses policy expressions to indicate the part of the request to be modified (target) and the modification to be performed (string expression):

- Rewrite a client ID in the connect packet using the `replace_mqtt` action type.

```
add rewrite action rwact1 replace_mqtt MQTT.CONNECT.CLIENTID "\xyz\""
```
- Rewrite a topic in the publish request using the `replace_mqtt` action type.

```
add rewrite action rwact1 replace_mqtt MQTT.PUBLISH.TOPIC "\testing/test123\""
```
- Rewrite to insert a property using the `insert_mqtt` action type.

```
add rewrite action rwact1 insert_mqtt MQTT.NEW_PROPERTY("prop1", "test")
```
- Delete a topic using the `delete_mqtt` action type.

```
add rewrite action rwact2 delete_mqtt MQTT.SUBSCRIBE.TOPIC_FILTERS.TOPIC(1)
```

Rewrite action for MQTT

The following are the predefined rewrite actions for MQTT:

- `MQTT.NEW_KEEPALIVE(interval)`
- `MQTT.NEW_PACKET_IDENTIFIER(packetID)`
- `MQTT.NEW_REASON_CODE(retCode)`
- `MQTT.NEW_PUBLISH(topic_name, payload)`
- `MQTT.NEW_CONNECT_USERNAME(username)`

- `MQTT.NEW_CONNECT_WILL_MESSAGE(will_topic, will_payload, will_Qos, will_retain)`
- `MQTT.NEW_TOPIC(topic, qos)`
- `MQTT.NEW_TOPIC(topic)`
- `MQTT.NEW_PROPERTY(key, value)`

Example for the predefined rewrite action:

```
add rewrite action rwact1 replace_mqtt MQTT.CONNECT.KEEPALIVE MQTT.NEW_KEEPALIVE(90)
```

Example for the user defined rewrite action:

```
add rewrite action rwact1 replace_mqtt MQTT.CONNECT.USERNAME "\"user1\""
```

Rewrite policy for MQTT

A rewrite policy for MQTT consists of a rule and action. The rule determines the MQTT traffic on which rewrite is applied and the action determines the action to be taken by the NetScaler appliance.

Expression:

```
add rewrite policy <name> <rewrite_rule> <rewrite_action>
```

Example:

```
add rewrite action insert_mqtt_username insert_mqtt MQTT.NEW_CONNECT_USERNAME ("user1")
```

```
add rewrite policy rewrite_mqtt_username "MQTT.COMMAND.EQ(CONNECT)&&MQTT.CONNECT.USERNAME.LENGTH.EQUALS(0)insert_mqtt_username"
```

Bind points for MQTT

You can bind a rewrite policy globally, or to a specific load balancing virtual server or content switching virtual server.

The following are the global bind points:

- `MQTT_REQ_DEFAULT`
- `MQTT_REQ_OVERRIDE`
- `MQTT_RES_DEFAULT`
- `MQTT_RES_OVERRIDE`

Expression:

- `bind rewrite global <policyName> <priority> [-type MQTT_REQ_OVERRIDE | MQTT_REQ_DEFAULT | MQTT_RES_OVERRIDE | MQTT_RES_DEFAULT]`
- `bind lb|cs vserver <virtualServerName> -policyName <policyName> -priority <positiveInteger> -type REQUEST|RESPONSE`

Example:

- `bind rewrite global pol1 10 -type MQTT_REQ_DEFAULT`
- `add/bind lb vserver v1 -policyName pol1 -type reqUEST -priority 10`

Configure a rewrite policy for MQTT

To configure a rewrite policy, follow the steps and type the commands at the command prompt:

1. Enable the rewrite feature on the NetScaler appliance.

```
enable ns feature REWRITE
```

2. Add a rewrite action.

```
add rewrite action rwact1 replace_mqtt MQTT.CONNECT.KEEPALIVE  
MQTT.NEW_KEEPALIVE(10)
```

3. Add a rewrite policy.

```
add rewrite policy pol1 MQTT.COMMAND.EQ(CONNECT)rwact1
```

4. Configure an MQTT load balancing virtual server.

```
add lb vserver v1 MQTT 1.1.1.1 1883
```

5. Bind the rewrite policy globally, or to a specific load balancing virtual server.

 
```
bind rewrite global pol1 10 -type MQTT_REQ_DEFAULT  
add/bind lb vserver v1 -policyName pol1 -type REQUEST -priority  
10
```

Use case 1: Replace the user name in the MQTT CONNECT message with the certificate name

The administrator can configure an MQTT rewrite policy to replace the user name with the client's certificate name.

Let us consider an example. The client request has an `MQTT CONNECT` message, which contains the user name as “admin”. This user name must be replaced with the serial number (16 digit) that is extracted from the client certificate (cert name).

The following figure shows the workflow:



1. A Transport Control Protocol (TCP) request is sent to the load balancer.
2. In the load balancer, the user name is replaced with the certificate name.
3. The request is forwarded to the MQTT broker.
4. This new user name is used for authorization through the webhook payload.

Sample Configuration:

```

add rewrite action mqtt_rw_unameact1 replace_mqtt MQTT.CONNECT.
USERNAME CLIENT.SSL.CLIENT_CERT.SERIALNUMBER

add rewrite policy mqtt_rw_uname_pol1 "MQTT.COMMAND.EQ(CONNECT)"
mqtt_rw_unameact1

bind cs vserver mqtt_frontend_cs -policyName mqtt_rw_uname_pol1 -
priority 10 -gotoPriorityExpression END -type REQUEST
  
```

Use case 2: Provide subscription to a new TOPIC

The administrator can provide a subscription to a new TOPIC. Let us consider an example. A client request has subscription to TOPIC 1. The administrator can configure a rewrite policy to provide subscription to a new TOPIC 2. The subscription can be inserted before or after.

Sample Configuration:

- `add rewrite action act2 insert_before_mqtt MQTT.TOPIC_FILTERS.TOPIC(1)MQTT.NEW_TOPIC(topic2, 2)`
- `add rewrite policy policy2 "MQTT.COMMAND.EQ(SUBSCRIBE)&& MQTT.SUBSCRIBE.TOPIC_FILTERS.TOPIC.CONTAINS(\"test\")"act2`

String maps

May 2, 2023

You can use string maps to perform pattern matching in all NetScaler features that use the default policy syntax. A string map is a NetScaler entity that consists of key-value pairs. The keys and values are strings in either ASCII or UTF-8 format. String comparison uses two new functions, `MAP_STRING(<string_map_name>)` and `IS_STRINGMAP_KEY(<string_map_name>)`.

A policy configuration that uses string maps performs better than one that does string matching through policy expressions, and you need fewer policies to perform string matching with a large number of key-value pairs. String maps are also intuitive, simple to configure, and result in a smaller configuration.

How String Maps Work

String maps are similar in structure to pattern sets (a pattern set defines a mapping of index values to strings; a string map defines a mapping of strings to strings) and the configuration commands for string maps (commands such as `add`, `bind`, `unbind`, `remove`, and `show`) are syntactically similar to configuration commands for pattern sets. Also, as with index values in a pattern set, each key in a string map must be unique across the map. The following table illustrates a string map called `url_string_map`, which contains URLs as keys and values.

Key	Value
<code>/url_1.html</code>	<code>http://www.redirect_url_1.com/url_1.html</code>
<code>/url_2.html</code>	<code>http://www.redirect_url_2.com/url_2.html</code>
<code>/url_3.html</code>	<code>http://www.redirect_url_1.com/url_1.html</code>

Table 1. String Map “url_string_map”

The following table describes the two functions that have been introduced to enable string matching with keys in a string map. String matching is always performed with the keys. Additionally, the following functions perform a comparison between the keys in the string map and the complete string that is returned by the expression prefix. The examples in the descriptions refer to the preceding example.

For completed information about the two functions introduced for enabling string matching with keys in a string map, see [String Map Function](#) table pdf.

Configuring a String Map

You first create a string map and then bind key-value pairs to it. You can create a string map from the command line interface (CLI) or the configuration utility.

To configure a string map by using the command line interface

At the command prompt, do the following:

1. Create a string map.

```
add policy stringmap <name> -comment <string>
```

1. Bind a key-value pair to the string map.

```
bind policy stringmap <name> <key> <value> [-comment <string>]
```

Example:

```
1 bind policy stringmap url_string_map1 "/url_1.html" "http://www.  
  redirect_url_1.com/url_1.html"
```

To configure a string map by using the NetScaler GUI

Navigate to **AppExpert > String Maps**, click **Add** and specify the relevant details.

Example: responder policy with a redirect action

The following use case involves a responder policy with a redirect action. In the example below, the first four commands create the string map `url_string_map` and bind the three key-value pairs used in the earlier example. After creating the map and binding the key-value pairs, you create a responder action (`act_url_redirects`) that redirects the client to the corresponding URL in the string map or to `www.default.com`. You also configure a responder policy (`pol_url_redirects`) that checks whether requested URLs match any of the keys in `url_string_map` and then performs the configured action. Finally, you bind the responder policy to the content switching virtual server that receives the client requests that are to be evaluated.

```
add stringmap url_string_map
```

```
bind stringmap url_string_map /url_1.html http://www.redirect_url_1.  
com/url_1.html
```

```
bind stringmap url_string_map /url_2.html http://www.redirect_url_2.  
com/url_2.html
```

```
bind stringmap url_string_map /url_3.html http://www.redirect_url_1.  
com/url_1.html
```



```
'add responder action act_url_redirects redirect 'HTTP.REQ.URL.MAP_STRING("url_string_map") ALT
"www.default.com"'
```

```
add responder policy pol_url_redirects TRUE act_url_redirects
bind cs vserver csw_redirect -policyname pol_url_redirects -priority
1 -type request
```

To configure a string map by using the NetScaler GUI

Follow the procedure given below to configure a string map.

1. On the navigation pane, expand **AppExpert** and click **String Maps**.
2. On the details pane, click **Add**.
3. In the **Create String Map** page, set the following parameters:
 - Name. Name of the string map.
 - Configure key value. ASCII based key value entry bound to the string map
 - Comments. A short description about the key values bound to the string map.
4. Click **Create** and **Close**.

← Create String Map

Name* ⓘ

<input checked="" type="checkbox"/>	KEY	VALUE	COMMENTS
<input checked="" type="checkbox"/>	ASCII	UFT_8	demo_config

Comments ⓘ

URL sets

December 21, 2023

This feature enables you to blacklist one million URLs. The section includes the following topics:

- [Getting Started](#)
- [Using Advanced Policy Expressions for URL Evaluation](#)
- [Configuring a URL Set](#)
- [URL Pattern Semantics](#)
- [Blacklisted URL Categories](#)

Getting started

December 22, 2023

To prevent access to restricted websites, a NetScaler appliance uses a specialized URL matching algorithm. The algorithm uses a URL set that can contain a list of URLs up to 1 million (1,000,000) blocked entries. The global limit is 1 million entries. You can either add one URL set with 1 million entries or multiple URL sets containing 1 million entries in total.

Note:

Avoid using many URL sets. We recommend you to use limited number of URL sets based on the memory available for the URL set.

Each entry can include metadata that defines URL categories and category groups as indexed patterns. The appliance can also periodically download highly sensitive URL sets managed by internet enforcement agencies (with government websites) or internet organizations. Once the URL set is downloaded from a website and imported into the appliance, the appliance encrypts the URL sets (as required by these agencies). The encrypted URL sets are kept confidential and the entries are not tampered.

The NetScaler appliance uses advanced policies to determine whether an incoming URL must be blocked, allowed, or redirected. These policies use advanced expressions to evaluate incoming URLs against blacklisted entries. An entry can include metadata. For entries that have no metadata, you can use an expression that evaluates the URL based on an exact string match. For other URLs, you can use an expression that evaluates the URL's metadata, in addition to an expression that checks for an exact string match.

Use Case for Safe Internet Access Policies for ISPs/Telcos

A URL set enables an ISP (ISP) or a Telco customer to enforce government mandated safe internet access policies such as:

1. Block access to illegal internet sites (child abuse, drugs, and so on)
2. Safe browsing for children

A NetScaler appliance enables you to periodically download URL sets managed by internet enforcement agencies or independent internet organizations. The appliance periodically downloads the list and updates it securely. The list is stored as confidential URL sets so that it is not tampered or human readable. The periodically downloaded URL set functions as a blacklisted set for URL evaluation purposes.

If you have a private URL set and the contents of the list are kept confidential and the network administrator does not know about the blacklisted URLs present in the list. To make sure the policy is configured correctly and the correct list is referenced, you must configure the Canary URL and add it to the URL set. Using the Canary URL, the administrator can request through the appliance uses the private URL set to ensure it is looked up for every URL request.

Advanced policy expressions for URL evaluation

December 21, 2023

The following table describes the expressions you can use to evaluate incoming URLs with entries in an URL set.

Note: HTTP.REQ.URL is generalized to be used as <URL expression>

Expression	Operation
<URL expression>.URLSET_MATCHES_ANY	Evaluates to TRUE if the URL exactly matches any entry in the URL set.
<URL expression>. .GET_URLSET_METADATA(<URLSET>)	The GET_URLSET_METADATA() expression returns the associated metadata if the URL exactly matches any pattern within the URL set. An empty string is returned if there was no match.
<URL expression>.GET_URLSET_METADATA(<URLSET>).EQ(<METADATA>)	Evaluates to TRUE if the matched metadata is equal to <METADATA>.

Expression	Operation
<code><URL expression></code> <code>.GET_URLSET_METADATA(<URLSET></code> <code>).TYPECAST_LIST_T(';</code> <code>).GET(0).EQ(<CATEGORY>)</code>	Evaluates to TRUE if the matched metadata is at the beginning of the category. This pattern can be used to encode separate fields within metadata, but match only the 1st field.
<code>HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL)</code>	Joins the host and URL parameters, which can then be used as a <code><URL expression></code> for matching.

Configure URL set

December 21, 2023

You can perform the following tasks to configure a URL set and restrict URLs on a NetScaler platform:

1. Import a URL set (download and encrypt it). Importing a URL set in a NetScaler appliance allows you:

- To download the URL file.
- To add the file to the appliance.
- To encrypt the file.

Until you add the URL set to the system, it is not visible to the user.

You can download a set in the following ways:

- Download a URL set once from a remote server and specify it as `http://myserver.com/file_with_urlset.csv`
- add a file under the `/var/tmp/` path inside ADC and use the command, as in the example:

```

1 > shell cat /var/tmp/test_urlset.csv
2 example.com
3 google.com
4 > import policy urlset top10
5 k -url local:test_urlset.csv -delimiter "," -rowSeparator "n" -interval
   10 -privateSet -canaryUrl http://www.in.gr
6 Done

```

The imported URL set is further categorized into different categories and category groups in the database. This is valid only if categories exist in the metadata of the URL set file.

Note: There can be a chance that you might have URL patterns without metadata.

Once you have imported the file, you can update, delete, or display file properties. After the file is pushed into the appliance, you can modify the entries by more adding rows.

The imported set is then stored in an encrypted file format on the NetScaler directory. The imported list contains millions of URL entries. To the following ‘The imported list can contain up to 1 million URL entries. Otherwise, the appliance returns an error message saying that the value exceeds the limit. If the imported URL set has blacklisted entries with metadata, the metadata it is detected by the appliance when it is imported.

Once you import a URL set and add it into the appliance, the URL set is available for advanced policies to identify the correct URL set during incoming URL evaluation. `HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URLSET_MATCHES_ANY(<URL set name>)`

1. Updating a URL set on the NetScaler appliance. Once you have pushed the file into the appliance, at this interval you can manually update a URL file by using command line interface.
2. Exporting a URL set. If you prefer a backup of the URL set, you can export the list of URL patterns and save a copy of it to a destination URL. Before you export, check whether the URL set is marked as private. If is marked private, the URL set cannot be exported. Export functionality does not work with private set. So a new url set `myurl` would be imported without private set defined, and then it would be exported to another file in a local path, as below:

```
1 > shell touch /var/tmp/test_urlset_export.csv
2 Done
3 > shell cat /var/tmp/test_urlset_export.csv
4 Done
5 > shell cat /var/tmp/test_urlset.csv
6 example.com
7 google.com
8 Done
9 > export urlset myurl -url local:test_urlset_export.csv
10
11 > import urlset myurl -url local:test_urlset.csv
12 Done
13 (a non-private urlset is imported)
```

1. Removing a URL set. If you want to delete a URL set of blacklisted entries, you can use the `remove` command to delete the URL set from the NetScaler appliance.
2. Displaying a URL set. You can display the properties of a URL set by using the `show` command.

Note: URLs with query part are removed during import.

Example:

```
1 show urlset
```

```
2 Name: top100 PatternCount: 100 Delimiter: RowSeparator: Interval: 0
3 Done
```

Import a URL set with meta by using the command line interface

At command prompt, type:

```
1 import urlset <name> [-overwrite] [-delimiter <character>] [-rowSeparator <character>] [-url <url> [-interval <seconds>] [-privateSet] [-canaryUrl <URL>]
```

Where,

Delimiter is a CSV file record with default value set as 44.

rowSeparator is a CSV file row separator with default value set as 10.

Interval is the time interval in secs, rounded to the nearest 15 minutes at which the update of the url set occurs.

CanaryURL is a URL used for testing when the contents of the url set is kept confidential.

Example

```
import policy urlset -url local:test_urlset.csv -delimiter ","-rowSeparator "n"-interval 10 -privateSet -canaryUrl http://www.in.gr
```

Perform explicit subdomain match for an imported URL set

You can now perform an explicit subdomain match for an imported URL set. A new parameter, “subdomainExactMatch” is added to the “import policy URLset” command. When you enable the parameter, the URL Filtering algorithm performs an explicit subdomain match. For example, if the incoming URL is “news.example.com” and if the entry in the URL set is “example.com,” the algorithm does not match the URLs.

At the command prompt, type:

```
import policy urlset <name> [-overwrite] [-delimiter <character>] [-rowSeparator <character>] -url <URL> [-interval <secs>] [-privateSet] [-subdomainExactMatch] [-canaryUrl <URL>]
```

Example:

```
import policy urlset forth_urlset -url local:test_urlset.csv -interval 3600 -subdomainExactMatch
```

To show the URL set by using the command line interface

At the command prompt, type:

```
show urlset <name>
```

Example:

At the command prompt, type:

```
1          URLset      Count
2          -----      -
3 1)      top1k        100
4 Done
5
6 > show urlset top1k
7          Count      Delimiter  Interval  RowSeparator
8          -----      -
9          100          ,          0          0x0a
10 Done
11 >
```

To show the URL set imported by using the command line interface

At the command prompt, type:

```
show urlset -imported
```

Example:

At the command prompt, type:

```
1          URLset
2          -----
3 1)      top1k
4 Done
```

To show URL set by using the command line interface

At the command prompt, type:

```
show urlset <name>
```

To export a URL set by using the command line interface

At the command prompt, type:

```
export urlset <name> <url>
```

To add a URL set by using the command line interface

At the command prompt, type:

```
add urlset <urlset_name>
```

To update a URL set by using the command line interface

At the command prompt, type:

```
update urlset <name>
```

To remove a URL set command by using the command line interface

At the command prompt, type:

```
remove urlset <name>
```

Example:

Note:

Before you import or export a URLset, you must make sure the `test_urlset_export.csv` and `test_urlset.csv` files are created and available under the `/var/tmp` directory.

```
1  import policy urlset -url local:test_urlset.csv -delimiter "," -  
   rowSeparator "n" -interval 10 -privateSet -overwrite -canaryUrl  
   http://www.in.gr  
2  
3  add policy urlset top10k  
4  
5  update policy urlset top10k  
6  
7  sh policy urlset  
8  
9  sh policy urlset top10k  
10  
11 export policy urlset urlset1 -url local:test_urlset_export.csv  
12  
13 import policy urlset top10k -url local:test_urlset.csv -privateSet  
14  
15 add policy urlset top10k  
16  
17 update policy urlset top10k  
18  
19 show policy urlset top10k
```


Display imported URL sets

You can now display imported URL sets in addition to added URL sets. To do this, a new parameter “imported” is added to the “show url set” command. If you enable this option, the appliance displays all imported URL sets and distinguishes the imported URL sets from the added URL sets.

At the command prompt, type:

```
show policy urlset [<name>] [-imported]
```

Example:

```
show policy urlset -imported
```

To import a URL set by using the GUI

Navigate to **AppExpert > URL Sets**, click **Import** to download the URL set.

To add a URL set by using the GUI

Navigate to **AppExpert > URL Sets**, click **Add** to create a URL set file for the downloaded URL set.

To edit a URL set by using the GUI

Navigate to **AppExpert > URL Sets**, select a URL set and click **Edit** to modify.

To Update a URL set by using the GUI

Navigate to **AppExpert > URL Sets**, select a URL set and click **Update URL Set** to update the URL set with the latest modifications made to the file.

To Export a URL set by using the GUI

Navigate to **AppExpert > URL Sets**, select a URL set, and click **Export URL Set** to export the URL patterns in a set to a destination URL and save it in that location.

URL pattern semantics

December 21, 2023

The following table shows the URL patterns used for specifying the list of pages you to want to filter. For example, the URL pattern, <http://www.example.com/bar> matches a single page <http://www.example.com/bar>. To cover all the pages where the URL starts with www.example.com/bar, you must explicitly add a '*' at the end.

For more information, see [URL pattern metadata mapping](#) table.

URL Categories

September 21, 2020

Following is a list of blacklisted categories.

S.no	Blacklisted Categories
1	Illegal Activities
2	Illegal Drugs
3	Medication
4	Marijuana
5	Terrorism/Extremists
6	Weapons
7	Hate/Slander
8	Violence/Suicide
9	Advocacy in general
10	Adult/Porn
11	Nudity
12	Sexual Services
13	Adult Search/Links
14	Hacking/Cracking
15	Malware
16	Remote Proxies
17	Search Engine Caches
18	Translators
19	Dating

S.no	Blacklisted Categories
20	Weddings/Matrimony
21	Market Rates
22	Online Trading
23	Insurance
24	Financial Products
25	Gambling in general
26	Lottery
27	Online games
28	Games
29	Auctions
30	Shopping/Retail
31	Real Estate
32	IT Online Shopping
33	Web based Chat
34	Instant Messages
35	Web based Mail
36	E-Mail Subscriptions
37	Bulletin Boards
38	IT Bulletin Boards
39	Personal Web Pages/Blogs
40	Downloads
41	Program Downloads
42	Storage Services
43	Streaming Media
44	Employment
45	Career Advancement
46	Side Business
47	Grotesque
48	Special Events

S.no	Blacklisted Categories
49	Popular Topics
50	Adult Magazine/News
51	Smoking
52	Drinking
53	Alcoholic Products
54	Fetish
55	Sexual Expression(text)
56	Costume Play/Enjoyment
57	Occult
58	Home & Family
59	Professional Sports
60	Sports in general
61	Life Events
62	Travel & Tourism
63	Public Agency Tourism
64	Public Transit
65	Accommodations
66	Music
67	Horoscope/Astrology/Fortune Telling
68	Entertainer/Celebrity
69	Dining/Gourmet
70	Entertainment/Venues/Activities
71	Traditional Religions
72	Religions
73	Politics
74	Advertisements/Banners
75	Sweepstakes/Prizes
76	SPAM
77	News

S.no	Blacklisted Categories
78	Automotive
79	Business & Commercial
80	Computing & Internet
81	Education
82	Government
83	Health
84	Internet Telephony
85	Military
86	Peer to Peer/Torrents
87	Recreation & Hobbies
88	Reference
89	Search Engines & Portals
90	Sex Education
91	SMS & Mobile Telephony Services
92	Mobile Apps & Publishers
93	Spyware
94	Content Delivery Networks & Infrastructure
95	Kids Sites
96	Swimsuits & Lingerie
97	Arts & Cultural Events
98	Hosting Sites
99	Philanthropy & Non-Profit Organizations
100	Photo Search & Photo Sharing Sites
101	Ringtones
102	Fashion & Beauty
103	Mobile App Stores
104	Parked Domains
105	Emoticons
106	Mobile Operators

S.no	Blacklisted Categories
107	Botnets
108	Infected Sites
109	Phishing Sites
110	Keyloggers
111	Mobile Malware
112	No Content
113	Agriculture
114	Architecture
115	Associations/Trade Groups/Unions
116	Books/eBooks
117	BOT Phone Home
118	DDNS
119	Unsupported URL
120	Law
121	Local Communities
122	Miscellaneous
123	Online Magazines
124	Pets/Veterinarian
125	Piracy & Copyright Theft
126	Private IP Addresses
127	Recycling/Environment
128	Science
129	Society & Culture
130	Transport Services & Freight
131	Photography & Film
132	Museums & History
133	eLearning
134	Social Networks in General
135	Facebook

S.no	Blacklisted Categories
136	Facebook: Posting
137	Facebook: Commenting
138	Facebook: Friends
139	Facebook: Photo Upload
140	Facebook: Events
141	Facebook: Apps
142	Facebook: Chat
143	Facebook: Questions
144	Facebook: Video Upload
145	Facebook: Groups
146	Facebook: Games
147	LinkedIn
148	LinkedIn: Updates
149	LinkedIn: Mail
150	LinkedIn: Connections
151	LinkedIn: Jobs
152	Twitter
153	Twitter: Posting
154	Twitter: Mail
155	Twitter: Follow
156	YouTube
157	YouTube: Commenting
158	YouTube: Video Upload
159	YouTube: Sharing
160	Instagram
161	Instagram: Upload
162	Instagram: Commenting
163	Instagram: Private Message
164	Tumblr

S.no	Blacklisted Categories
165	Tumblr: Posting
166	Tumblr: Commenting
167	Tumblr: Photo or Video Upload
168	Google+
169	Google+: Posting
170	Google+: Commenting
171	Google+: Photo Upload
172	Google+: Video Upload
173	Google+: Video Chat
174	Pinterest
175	Pinterest: Pin
176	Vine: Upload
177	Vine: Commenting
178	Vine: Message
179	Ask.fm
180	Ask.fm: Ask
181	Ask.fm: Answer
182	YikYak
183	YikYak: Posting
184	YikYak: Commenting
185	Wordpress
186	Wordpress: Posting
187	Wordpress: Upload

AppFlow

May 2, 2023

The NetScaler appliance is a central point of control for all application traffic in the data center. It collects flow and user-session level information valuable for application performance monitoring, analytics, and business intelligence applications. It also collects webpage performance data and database information. AppFlow transmits the information by using the Internet Protocol Flow Information eXport (IPFIX) format, which is an open Internet Engineering Task Force (IETF) standard defined in RFC 5101. IPFIX (the standardized version of Cisco's NetFlow) is widely used to monitor network flow information. AppFlow defines new Information Elements to represent application-level information, webpage performance data, and database information.

Using UDP as the transport protocol, AppFlow transmits the collected data, called *flow records*, to one or more IPv4 collectors. The collectors aggregate the flow records and generate real-time or historical reports.

AppFlow provides visibility at the transaction level for HTTP, SSL, TCP, SSL_TCP flows, and HDX Insight flows. You can sample and filter the flow types that you want to monitor.

Note

For more information on HDX Insight, see [HDX Insight](#).

AppFlow use actions and policies to send records for a selected flow to specific set of collectors. An AppFlow action specifies which set of collectors receive the AppFlow records. Policies, which are based on Advanced expressions can be configured to select flows for which flow records are sent to the collectors specified by the associated AppFlow action.

To limit the types of flows, you can enable AppFlow for a virtual server. AppFlow can also provide statistics for the virtual server.

You can also enable AppFlow for a specific service, representing an application server, and monitor the traffic to that application server.


Note: This feature is supported only on NetScaler nCore builds.

How AppFlow Works

In the most common deployment scenario, inbound traffic flows to a Virtual IP address (VIP) on the NetScaler appliance and is load balanced to a server. Outbound traffic flows from the server to a mapped or subnet IP address on the NetScaler and from the VIP to the client. A flow is a unidirectional collection of IP packets identified by the following five tuples: sourceIP, sourcePort, destIP, destPort, and protocol.

The following figure describes how the AppFlow feature works.

Figure 1. NetScaler Flow Sequence

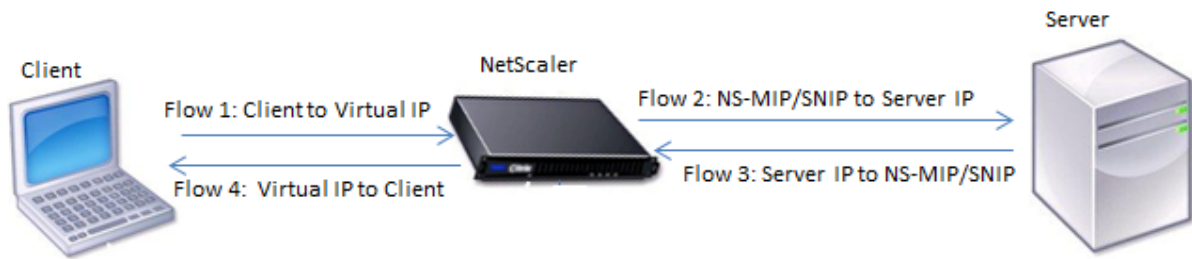

As shown in the figure, the network flow identifiers for each leg of a transaction depend on the direction of the traffic.

The different flows that form a flow record are:

Flow1: <Client-IP, Client-Port, VIP-IP, VIP-port, Protocol>

Flow2: <NS-MIP/SNIP, NS-port, Server-IP, Server-Port, Protocol>

Flow3: <Server-IP, Server-Port, NS-MIP/SNIP, NS-Port, Protocol>

Flow4: <VIP-IP, VIP-port, Client-IP, Client-Port, Protocol>

To help the collector link all four flows in a transaction, AppFlow adds a custom transactionID element to each flow. For application-level content switching, such as HTTP, it is possible for a single client TCP connection to be load balanced to different back end TCP connections for each request. AppFlow provides a set of records for each transaction.

Flow Records

AppFlow records contain standard NetFlow or IPFIX information, such as time stamps for the beginning and end of a flow, packet count, and byte count. AppFlow records also contain application-level information (such as HTTP URLs, HTTP request methods and response status codes, server response time, and latency). Webpage performance data (such as page load time, page render time, and time spent on the page). And database information (such as database protocol, database response status, and database response size). IPFIX flow records are based on templates that need to be sent before sending flow records.

Templates

AppFlow defines a set of templates, one for each type of flow. Each template contains a set of standard Information Elements (IEs) and Enterprise-specific Information Elements (EIEs). IPFIX templates define the order and sizes of the Information Elements (Internet Explorer) in the flow record. The templates are sent to the collectors at regular intervals, as described in RFC 5101.

A template can include the following EIEs:

- transactionID

An unsigned 32-bit number identifying an application-level transaction. For HTTP, it corresponds to a request and response pair. All flow records that correspond to this request and response pair have the same transaction ID. In the most common case, there are four `uniflow` records that correspond to this transaction. If the NetScaler generates the response by itself (served from the integrated cache or by a security policy), there might be only two flow records for this transaction.

- connectionID

An unsigned 32-bit number identifying a layer-4 connection (TCP or UDP). The NetScaler flows are bidirectional, with two separate flow records for each direction of the flow. This information element can be used to link the two flows.

For the NetScaler, a connectionID is an identifier for the connection data structure to track the progress of a connection. In an HTTP transaction, for instance, a given connectionID might have multiple transactionID elements corresponding to multiple requests that were made on that connection.

- tcpRTT

The round trip time, in milliseconds, as measured on the TCP connection. It can be used as a metric to determine the client or server latency on the network.

- httpRequestMethod

An 8-bit number indicating the HTTP method used in the transaction. An options template with the number-to-method mapping is sent along with the template.

- httpRequestSize

An unsigned 32-bit number indicating the request payload size.

- httpRequestURL

The HTTP URL requested by the client.

- httpUserAgent

The source of incoming requests to the Web server.

- httpResponseStatus

An unsigned 32-bit number indicating the response status code.

- httpResponseSize

An unsigned 32-bit number indicating the response size.

- httpResponseTimeToFirstByte

An unsigned 32-bit number indicating the time taken to receive the first byte of the response.

- `httpResponseTimeToLastByte`

An unsigned 32-bit number indicating the time taken to receive the last byte of the response.

- `flowFlags`

An unsigned 64-bit flag used to indicate different flow conditions.

EIEs for webpage performance data

- `clientInteractionStartTime`

Time at which the browser receives the first byte of the response to load any objects of the page such as images, scripts, and style sheets.

- `clientInteractionEndTime`

Time at which the browser received the last byte of response to load all the objects of the page such as images, scripts, and style sheets.

- `clientRenderStartTime`

Time at which the browser starts to render the page.

- `clientRenderEndTime`

Time at which a browser finished rendering the entire page, including the embedded objects.

EIEs for database information

- `dbProtocolName`

An unsigned 8-bit number indicating the database protocol. Valid values are 1 for MS SQL and 2 for MySQL.

- `dbReqType`

An unsigned 8-bit number indicating the database request method used in the transaction. For MS SQL, valid values are 1 is for QUERY, 2 is for TRANSACTION, and 3 is for RPC. For valid values for MySQL, see the MySQL documentation.

- `dbReqString`

Indicates the database request string without the header.

- `dbRespStatus`

An unsigned 64-bit number indicating the status of the database response received from the web server.

- `dbRespLength`

An unsigned 64-bit number indicating the response size.

- dbRespStatString

The response status string received from the web server.

Configuring the AppFlow feature

November 7, 2024

You can configure AppFlow in the same manner as most other policy-based features. First, you enable the AppFlow feature. Then you specify the collectors to which the flow records are sent. After that, you define actions, which are sets of configured collectors. Then you configure one or more policies and associate an action to each policy. The policy instructs the NetScaler appliance to select requests the flow records of which are sent to the associated action. Finally, you bind each policy either globally or to the specific virtual server to put it into effect.

You can further set AppFlow parameters to specify the template refresh interval and to enable the exporting of httpURL, httpCookie, and httpReferer information. On each collector, you must specify the NetScaler IP address as the address of the exporter.

Note

For information about configuring the NetScaler as an exporter on the collector, see the documentation for the specific collector.

The configuration utility provides tools that help users define the policies and actions. It determines exactly how the NetScaler appliance export records for a particular flow to a set of collectors(action.) The command line interface provides a corresponding set of CLI-based commands for experienced users who prefer a command line.

Enabling AppFlow

To be able to use the AppFlow feature, you must first enable it.

Note

AppFlow can be enabled only on nCore NetScaler appliances.

Enable the AppFlow feature by using the command line interface

At the command prompt, type one of the following commands:

```
1 enable ns feature AppFlow
```

Enable the AppFlow feature by using the configuration utility

Navigate to **System > Settings**, click **Configure Advanced Features**, and select the **AppFlow** option.

Specifying a Collector

A collector receives AppFlow records generated by the NetScaler appliance. To send the AppFlow records, you must specify at least one collector. By default, the collector listens to IPFIX messages on UDP port 4739. You can change the default port, when configuring the collector. Similarly, by default, NSIP is used as the source IP for AppFlow traffic. You can change this default source IP to a SNIP address when configuring a collector. You can also remove unused collectors.

Specify a collector by using the command line interface

Important

Starting from NetScaler release 12.1 build 55.13, you can specify the type of collector that you want to use. A new parameter “Transport” is introduced in the `add appflow collector` command. By default, the collector listens to IPFIX messages. You can change the type of collector to either `logstream` or `ipfix` by using “Transport” parameter. For more information on configuration, see the example.

At the command prompt, type the following commands to add a collector and verify the configuration:

```
1 - add appflow collector <name> -IPAddress <ipaddress> -port <
    port_number> -netprofile <netprofile_name> -Transport <Transport>
2
3 - show appflow collector <name>
```

Example

```
1 add appflow collector col1 -IPAddress 10.102.29.251 -port 8000 -
    netprofile n2 -Transport ipfix
```

Specify multiple collectors by using the command line interface

At the command prompt, type the following commands to add and send same data to multiple collectors:

```
1 add appflow collector <collector1> -IPAddress <IP>
2
3 add appflow collector <collector2> -IPAddress <IP>
```

```
4
5 add appflow action <action> -collectors <collector1> <collector2>
6
7 add appflow policy <policy> true <action>
8
9 bind lbvserver <lbvserver> -policy <policy> -priority <priority>
```

Specify one or more collectors by using the configuration utility

Navigate to **System > AppFlow > Collectors**, and create the AppFlow collector.

Configure an AppFlow Action

An AppFlow action is a set collector, to which the flow records are sent if the associated AppFlow policy matches.

Configure an AppFlow action by using the command line interface

At the command prompt, type the following commands to configure an AppFlow action and verify the configuration:

```
1 add appflow action <name> --collectors <string> ... [-
    clientSideMeasurements (Enabled|Disabled) ] [-comment <string>]
2
3 show appflow action
```

Example

```
1 add appflow action apfl-act-collector-1-and-3 -collectors collector-1
    collector-3
```

Configure an AppFlow action by using the configuration utility

Navigate to **System > AppFlow > Actions**, and create the AppFlow action.

Configure an AppFlow Policy

After you configure an AppFlow action, you must next configure an AppFlow policy. An AppFlow policy is based on a rule, which consists of one or more expressions.

Note

For creating and managing AppFlow policies, the configuration utility provides assistance that is not available at the command line interface.

Configure an AppFlow policy by using the command line interface

At the command prompt, type the following command to add an AppFlow policy and verify the configuration:

```
1 add appflow policy <name> <rule> <action>
2
3 show appflow policy <name>
```

Example

```
1 add appflow policy apfl-pol-tcp-dsprt client.TCP.DSTPORT.EQ(22) apfl-act-collector-1-and-3
```

Configure an AppFlow policy by using the configuration utility

Navigate to **System > AppFlow > Policies**, and create the AppFlow policy.

Add an expression by using the Add Expression dialog box

1. In the Add Expression dialog box, in the first list box choose the first term for your expression.

-

HTTP

The HTTP protocol. Choose the option if you want to examine some aspect of the request that pertains to the HTTP protocol.

-

SSL

- ```
1 The protected websites. Choose the option if you want to examine
 some aspect of the request that pertains to the recipient of
 the request. -
2 CLIENT
3
4 The computer that sent the request. Choose the option if you want
 to examine some aspect of the sender of the request. When you
 make your choice, the rightmost list box lists appropriate
 terms for the next part of your expression.
```



2. In the second list box, choose the second term for your expression. The choices depend upon which choice you made in the previous step, and are appropriate to the context. After you make your second choice, the Help window below the Construct Expression window (which was blank) displays help describing the purpose and use of the term you just chose.
3. Continue choosing terms from the list boxes that appear to the right of the previous list box, or typing strings or numbers in the text boxes that appear to prompt you to enter a value, until your expression is finished.

## Bind an AppFlow Policy

To put a policy into effect, you must bind it either globally, so that it applies to all traffic that flows through the NetScaler, or to a specific virtual server, so that the policy applies only to the traffic related to that virtual server.

When you bind a policy, you assign it a priority. The priority determines the order in which the policies you define are evaluated. You can set the priority to any positive integer.

In the NetScaler operating system, policy priorities work in reverse order—the higher the number, the lower the priority. For example, if you have three policies with priorities of 10, 100, and 1000, the policy assigned a priority of 10 is performed first. Later, the policy assigned with a priority of 100, and finally the policy assigned an order of 1000.

You can leave yourself plenty of a room to add other policies in any order, and still set them to evaluate in the order you want. You can achieve by setting priorities with intervals of 50 or 100 between each policy when you globally bind it. You can then add more policies at any time without having to change the priority of an existing policy.

## Globally bind an AppFlow policy by using the command line interface

At the command prompt, type the following command to globally bind an AppFlow policy and verify the configuration:

```
1 bind appflow global <policyName> <priority> [<gotoPriorityExpression [-
 type <type>] [-invoke (<labelType> <labelName>)]]
2
3 show appflow global
```

### Example

```
1 bind appflow global af_policy_lb1_10.102.71.190 1 NEXT -type
 REQ_OVERRIDE -invoke vserver google
```

### Bind an AppFlow policy to a specific virtual server by using the command line interface

At the command prompt, type the following command to bind an AppFlow policy to a specific virtual server and verify the configuration:

```
1 bind lb vserver <name> -policyname <policy_name> -priority <priority>
```

#### Example

```
1 bind lb vserver google -policyname af_policy_google_10.102.19.179 -
 priority 251
```

### Globally bind an AppFlow policy by using the configuration utility

Navigate to **System > AppFlow**, click **AppFlow policy Manager**, and select the relevant Bind Point (Default Global) and Connection Type, and then bind the AppFlow policy.

### Bind an AppFlow policy to a specific virtual server by using the configuration utility

Navigate to **Traffic Management > Load Balancing > Virtual Servers**, select the virtual server, and click **Policies**, and bind the AppFlow policy.

### Enable AppFlow for Virtual Servers

If you want to monitor only the traffic through certain virtual servers, enable AppFlow specifically for those virtual servers. You can enable AppFlow for load balancing, content switching, cache redirection, SSL VPN, GSLB, and authentication virtual servers.

### Enable AppFlow for a virtual server by using the command line interface

At the command prompt, type:

```
1 set cs vserver <name> <protocol> <IPAddress> <port> -appflowLog ENABLED
```

#### Example

```
1 set cs vserver Vserver-CS-1 HTTP 10.102.29.161 80 -appflowLog ENABLED
```

### Enable AppFlow for a virtual server by using the configuration utility

Navigate to **Traffic Management > Content Switching > Virtual Servers**, select the virtual server, and enable AppFlow Logging option.

## Enable AppFlow for a Service

You can enable AppFlow for services that are to be bound to the load balancing virtual servers.

### Enable AppFlow for a service by using the command line interface

At the command prompt, type:

```
1 set service <name> -appflowLog ENABLED
```

#### Example

```
1 set service ser -appflowLog ENABLED
```

### Enable AppFlow for a service by using the configuration utility

Navigate to **Traffic Management > Load Balancing > Services**, select the service, and enable AppFlow Logging option.

## Set the AppFlow Parameters

You can set AppFlow parameters to customize the exporting of data to the collectors.

### Set the AppFlow Parameters by using the command line interface

#### Important

- Starting from NetScaler release 12.1 build 55.13, you can use the NSIP to send **Logstream** records instead of the SNIP. A new parameter “logstreamOverNSIP” is introduced in the `set appflow param` command. By default, the “logstreamOverNSIP” parameter is DISABLED, you must “ENABLE” it. For more information on configuration, see the example.
- Starting from NetScaler release 13.0 build 58.x release, you can enable the Web SaaS application option in AppFlow feature. It can be enabled to receive the data usage of Web or SaaS applications from the Citrix Gateway service. For more information on configuration, see the example.

At the command prompt, type the following commands to set the AppFlow parameters and verify the settings:

```

1 - set appflow param [-templateRefresh <secs>] [-appnameRefresh <secs>]
 [-flowRecordInterval <secs>] [-udpPmtu <positive_integer>] [-
 httpUrl (**ENABLED** | **DISABLED**)] [-httpCookie (**ENABLED** |
 DISABLED)] [-httpReferer (**ENABLED** | **DISABLED**)] [-
 httpMethod (**ENABLED** | **DISABLED**)] [-httpHost (**ENABLED**
 | **DISABLED**)] [-httpUserAgent (**ENABLED** | **DISABLED**)] [-
 httpXForwardedFor (**ENABLED** | **DISABLED**)] [-clientTrafficOnly
 (**YES** | **NO**)] [-webSaaSAppUsageReporting (**ENABLED** | **
 DISABLED**)] [-logstreamOverNSIP (**ENABLED** | **DISABLED**)]
2
3 - show appflow Param

```

**Example**

```

1 set appflow Param -templateRefresh 240 -udpPmtu 128 -httpUrl enabled -
 webSaaSAppUsageReporting ENABLED -logstreamOverNSIP ENABLED

```

**Set the AppFlow parameters by using the configuration utility**

Navigate to **System > AppFlow**, click **Change AppFlow Settings**, and specify relevant AppFlow parameters.

**Support for subscriber ID obfuscation**

Starting from NetScaler release 13.0 build 35.xx, the AppFlow configuration is enhanced to support “subscriberIdObfuscation” algorithm for obfuscating MSISDN in layer 4 or layer 7, AppFlow records. However, before configuring the algorithm as MD5 or SHA256, you must first enable it as an AppFlow parameter. The parameter is disabled by default.

**Configure the subscriber ID obfuscation algorithm by using the CLI**

At the command prompt, type:

```

1 set appflow param [-subscriberIdObfuscation (ENABLED | DISABLED)] [-
 subscriberIdObfuscationAlgo (MD5 | SHA256)]]

```

**Example**

```


1 set appflow param -subscriberIdObfuscation ENABLED -
 subscriberIdObfuscationAlgo SHA256

```

**Configure the subscriber ID obfuscation algorithm by using the GUI**

1. Navigate to **System > AppFlow**.

2. In the AppFlow detailed pane, click **Change AppFlow Setting** under **Settings**.
3. In Configure AppFlow Settings page, set the following parameters:
  - **Subscriber ID Obfuscation.** Enable the option for obfuscation MSISDN in L4/L7 AppFlow records.
  - **Subscriber ID Obfuscation Algo.** Select algorithm type as MD5 or SHA256.
4. Click **OK** and **Close**.

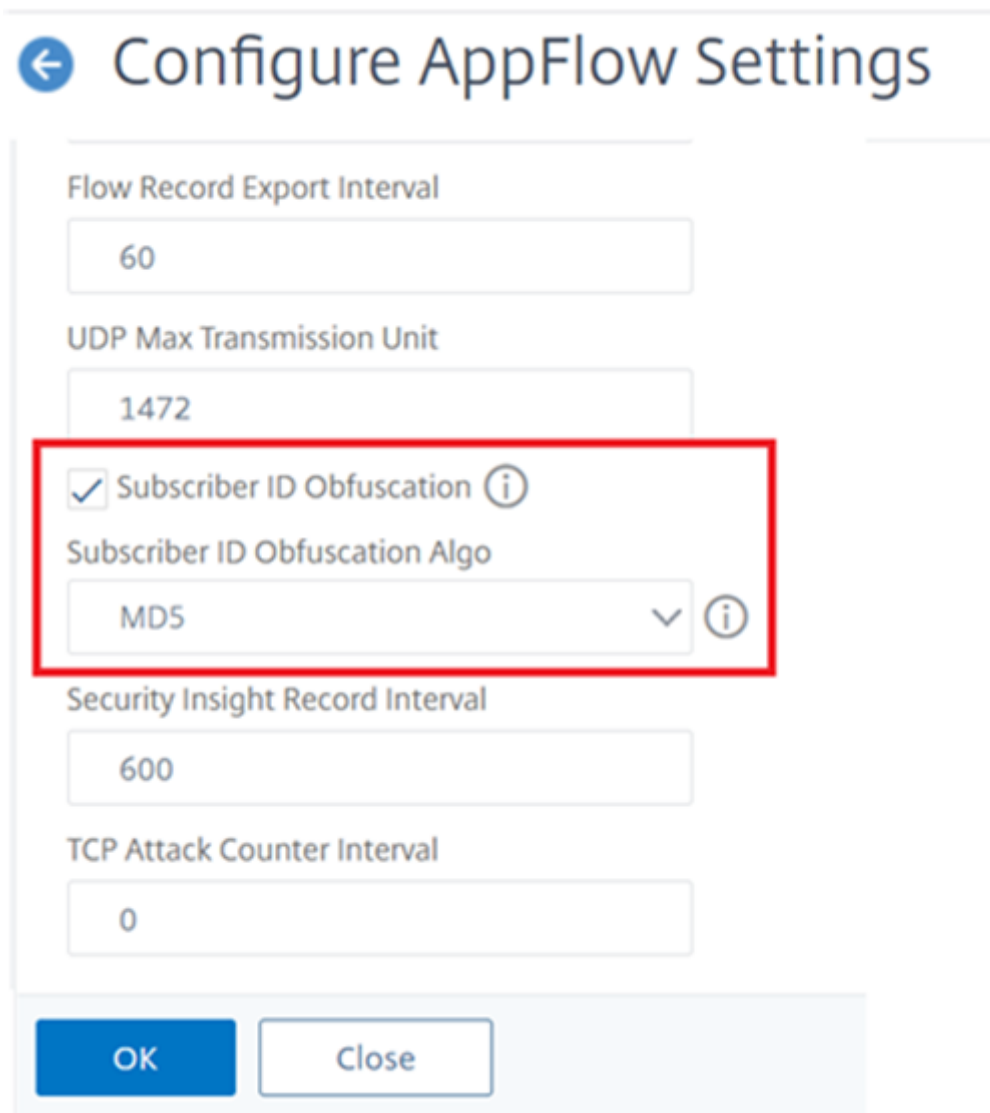

Configure AppFlow Settings

Flow Record Export Interval  
60

UDP Max Transmission Unit  
1472

Subscriber ID Obfuscation ⓘ

Subscriber ID Obfuscation Algo  
MD5 ▼ ⓘ

Security Insight Record Interval  
600

TCP Attack Counter Interval  
0

OK Close

### Example: Configure AppFlow for DataStream

The following example illustrates the procedure for configuring AppFlow for DataStream using the command line interface.

```
1 enable feature appflow
2
3 add db user sa password freebsd
4
5 add lbvserver lb0 MSSQL 10.102.147.97 1433 -appflowLog ENABLED
6
7 add service sv0 10.103.24.132 MSSQL 1433 -appflowLog ENABLED
8
9 bind lbvserver lb0 sv0
10
11 add appflow collector col0 -IPAddress 10.102.147.90
12
13 add appflow action act0 -collectors col0
14
15 add appflow policy pol0 "mssql.req.query.text.contains('select')" act0
16
17 bind lbvserver lb0 -policyName pol0 -priority 10
```

When the NetScaler appliance receives a database request, the appliance evaluates the request against a configured policy. If a match is found, the details are sent to the AppFlow collector configured in the policy.

## Exporting performance data of webpages to AppFlow collector

May 2, 2023

The EdgeSight Monitoring application provides webpage monitoring data with which you can monitor the performance of various Web applications served in a NetScaler environment. You can now export this data to AppFlow collectors to get an in-depth analysis of the webpage applications. AppFlow, which is based on the IPFIX standard, provides more specific information about web application performance than does EdgeSight monitoring alone.

You can configure both load balancing and content switching virtual servers to export EdgeSight Monitoring data to AppFlow collectors. Before configuring a virtual server for AppFlow export, associate an AppFlow action with the EdgeSight Monitoring responder policy.

The following webpage performance data is exported to AppFlow:

- **Page Load Time.** Elapsed time, in milliseconds, from when the browser starts to receive the first byte of a response until the user starts to interact with the page. At this stage, all the page content might not be loaded.
- **Page Render Time.** Elapsed time, in milliseconds, from when the browser receives the first byte of response until either all page content has been rendered or the page load action has timed out.

- **Time Spent on the Page.** Time spent by users on a page. Represents the time from one page request to the next one.

AppFlow transmits the performance data by using the Internet Protocol Flow Information eXport (IP-FIX) format, which is an open Internet Engineering Task Force (IETF) standard defined in RFC 5101. The AppFlow templates use the following enterprise-specific Information Elements (IEs) to export the information:

- **Client Load End Time.** Time at which the browser received the last byte of a response to load all the objects of the page such as images, scripts, and style sheets.
- **Client Load Start Time.** Time at which the browser receives the first byte of the response to load any objects of the page such as images, scripts, and Style sheets.
- **Client Render End Time.** Time at which a browser finished rendering the entire page, including the embedded objects.
- **Client Render Start Time.** Time at which the browser started rendering the page.

### **Prerequisites for exporting performance data of webpages to AppFlow collectors**

Before associating the AppFlow action with the AppFlow policy, verify that the following prerequisites have been met:

- The AppFlow feature has been enabled and configured.
- The Responder feature has been enabled.
- The EdgeSight Monitoring feature has been enabled.
- EdgeSight Monitoring has been enabled on the load balancing or content switching virtual servers bound to the services of applications for which you want to collect the performance data.

### **Associating an AppFlow action with the EdgeSight monitoring responder policy**

To export the webpage performance data to the AppFlow collector, you must associate an AppFlow action with the EdgeSight Monitoring responder policy. An AppFlow action specifies which set of collectors receive the traffic.

#### **To associate an AppFlow action with the EdgeSight Monitoring Responder policy by using the CLI**

At the command prompt, type:

```
1 set responder policy <name> -appflowAction <action_Name>
```

### Example

```
1 set responder policy pol -appflowAction actn
```

## To associate an AppFlow action with the EdgeSight Monitoring Responder policy by using the GUI

1. Navigate to **AppExpert > Responder > Policies**.
2. In the details pane, select an EdgeSight Monitoring responder policy, and then click **Open**.
3. In the **Configure Responder Policy** dialog box, in the **AppFlow Action** drop-down list, select the AppFlow action associated with the collectors to which you want to send the webpage performance data.
4. Click **OK**.

## Configuring a virtual server to export EdgeSight statistics to AppFlow collectors

To export EdgeSight statistics information from a virtual server to the AppFlow collector, you must associate an AppFlow action with the virtual server.

## To associate an AppFlow action with a Load Balancing or Content Switching virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**. You can also navigate to **Traffic Management > Content Switching > Virtual Servers**.
2. In the details pane, select a virtual server, or multiple virtual servers, and then click **Enable EdgeSight Monitoring**.
3. In the Enable EdgeSight Monitoring dialog box, select the **Export EdgeSight statistics to Appflow** check box.
4. From the AppFlow Action drop-down list, select the **AppFlow** action. The AppFlow action defines the list of AppFlow collectors to which it exports EdgeSight Monitoring statistics. If you have selected multiple load balancing virtual servers, the same AppFlow Action is associated with the responder policies bound to them. You can later change the AppFlow Action configured for each of the selected Load Balancing virtual server individually, if necessary.
5. Click **OK**.

## Session reliability on NetScaler high availability pair

May 2, 2023



When a network disruption or a device failover occurs during an ICA session, session reconnection can use one of two mechanisms: session reliability or Auto Client Reconnect.

**Session reliability.** The preferred mode, is a smooth experience for the user. The disruption is barely noticeable for brief network interruptions.

**Auto client reconnect.** The fallback option, involves restarting the client. This mechanism is disruptive for the user and is not always supported.

Receivers can reconnect their ICA sessions seamlessly using the ICA session reliability feature, when HDX Insight is enabled.

This feature works both in standalone and in a NetScaler HA pair configuration, and even when a NetScaler failover happens.

**Note:**

- NetScaler appliances must be running on software version 11.1 build 49.16 or later.
- You must not enable or disable session reliability mode when the NetScaler appliances have active connections.
- Enabling or disabling the feature when connections are still active causes HDX Insight to stop parsing those sessions after a failover occurs. It results in the loss of information about the sessions.
- Session reliability on a high availability setup is disabled by default for NetScaler software version 11.1 49.16 or later. Session reliability is supported on a high availability setup only if both the nodes of the setup run the same build (for example, release 11.1 build 53). In other words, session reliability is not supported on a high availability setup if both the nodes run different builds (for example, one node has release 11.1 build 53 whereas the other has release 11.1 build 56). Session reliability for SSL VDA is supported if the following conditions are met:
  - The “EnableSRonHAFailover” parameter in the `set ica parameter` command must be YES.
  - The HTTPS must be used instead of HTTP while configuring the virtual server.
- When HDX Insight is enabled, basic encryption applications and desktops reconnect after high availability failover even if the EnableSRonHAFailover parameter is disabled.

**To configure Session reliability by using CLI:**

1. At the command line, use the default system administrator credentials to log on to the system.
2. To enable session reliability on HA failover, at the prompt, type: `set ica parameter EnableSRonHAFailover YES`
3. To disable session reliability on HA failover, at the prompt, type: `set ica parameter EnableSRonHAFailover NO`

**To Enable Session reliability on HA failover by using GUI:**

1. In a web browser, type the IP address of the primary NetScaler instance in the HA pair (for example, <http://192.168.100.1>).
2. In **User Name** and **Password**, enter the administrator credentials.
3. On the **Configuration** tab, navigate to **System > Settings**, and click **Change ICA Parameters**.
4. In the **Change ICA Parameters** section, select **Session Reliability on HA Failover**.
5. Click **OK**.

## Limitations

- Enabling this feature results in increased bandwidth consumption which is due to ICA compression being turned off by the feature. And the extra traffic between the primary and secondary nodes to keep them in sync.
- This feature is supported in Active-Passive mode only. Active-Active mode is not currently supported.
- When HDX Insight is enabled, and session reliability on the HA knob is set to NO, only ACR reconnect mode is supported in the NetScaler high availability failover scenario. The HA knob does not disable session reliability if HDX Insight is disabled.

The **Session Reconnect Semantics** table is as follows:

### Session reconnects semantics

| Status               | EnableSRonHAFailover Yes  | EnableSRonHAFailover No (Default) |
|----------------------|---------------------------|-----------------------------------|
| HDX Insight enabled  | Session reconnect for ICA | Session reconnect for ICA         |
|                      | Session works             | Sessions does not work            |
| HDX Insight disabled | Session reconnect for ICA | Session reconnect for ICA         |
|                      | Session works             | Sessions works                    |

#### Points to note

- Session reliability for ICA sessions works out of the box with NetScaler Gateway.
- Session reliability for ICA sessions does not work when both the following conditions are met:
  - HDX Insight is enabled
  - EnableSRonHAFailover is set to NO
- Setting the EnableSRonHAFailover knob to either YES or NO does not make any difference, when HDX Insight is disabled.

## API security

December 6, 2024

API security plays an important role in protecting sensitive data by enforcing access controls, authentication, and encryption on the API traffic and ensuring that only authorized entities can access and transmit confidential information securely.

NetScaler allows you to secure the API traffic by validating the incoming API traffic against the imported API specification. An API specification defines the design of an API, including endpoints, methods, parameters, and data formats.

Perform the following configuration to secure the API traffic:

- [Import API Specification](#)
- [API specification validation](#)
- [API traffic visibility using API specification validation](#)

Starting from NetScaler release 14.1 build 21.x, you can protect the authentication and VPN endpoint URLs hosted by NetScaler using a built-in API specification. NetScaler checks the URL traffic to ensure that it is not a potential attack. By default, this feature is disabled. For information on how to enable it, see [Authentication methods](#).

**Note:**

The Web App firewall protection for authentication and Gateway endpoint is not supported on Linux based CPX and BLX deployments.

## Import API Specification

September 24, 2024

API specification defines the design of an API, including endpoints, methods, parameters, and data formats. The import API specification capability allows you to import the open API specification, which is generally used to describe the REST API. When the Web App Firewall performs a validation check on a user's request for an API-based web service, it validates the request against the schema specified in the API specification file for that web service. NetScaler supports schema validations for a REST API with payload being application JSON and ProtoBuf for gRPC API requests.

**Note:**

Starting from NetScaler release 14.1 build 34.x, NetScaler supports content validation for application/x-www-form-urlencoded body content.

NetScaler supports the following specification formats:

- Open API - Swagger 2.0, OAS 3.0,3.1
- ProtoBuf - v3 and v2

## Manage API specification files

You can validate incoming API traffic against the imported API specification by assigning it to a profile and setting a relaxation rule to either block or allow the traffic. You can also use the imported API specification in creating policy expressions. Importing an API specification consists of two steps:

1. Import the API specification - Import an API specification to NetScaler through a URL or from the system.
2. Add the API specification to NetScaler - When you add an API specification to NetScaler, the file is validated, converted into an internal format, and an API specification entity is created. The API specification entity created will be used in policy expressions and Web App Firewall profiles.

**Note:**

Ensure that the uploaded Open API Swagger 2.0, OAS 3.0, and 3.1 specification files do not contain any references to external files. If you need to use details from an external file, consolidate the information into a single file using open-source tools and then upload it.

## Manage API specification files using the CLI

The following parameters are used in the CLI commands:

- Name - Name of the API specification file that is uploaded.
- Source - URL (protocol, host, path, and name) for the location to store the imported specification file.
- Spec Name - The name of the entity that is created from the uploaded API specification.
- Type - Input format of the API specification.  
Default Value: OAS

To import an API specification file, type:

```
import api specFile <name> <src>
```

Example:

```
import apispec testapispec.json http://www.example.com/testapispec.json
```

To add an API specification file, type:

```
add api spec <Name> -File <string> -Type <string>
```

Example:

```
add api spec testapispec -File testapispec.json -Type OAS
```

To update an API specification file, import a new specification file that needs to be updated.

At the command prompt, type:

```
update api spec <specName> -File <string> -Type <string>
```

Example:

```
update api spec testapispec -File testapispec.json -Type OAS
```

**Note:**

If the type attribute is not specified, OAS is the default type.

To view all the endpoints, type:

```
show api spec <specName>
```

Example:

```
show api spec testapispec
```

To delete the API specification, type:

```
rm api spec <specName>
```

Example:

```
rm api spec testapispec
```

**Note:**

Before removing the API specification, make sure it is not being used by any profile or policy.

### Manage API specification files using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Imports**.
2. On the **Imports** page, select the **API Spec Import Page** tab, and then click **Add**.
3. On the **API Spec Import Object** page, select any one of the following options for the **Import From** parameter:

- a) URL: A web URL on a website accessible to the appliance.
  - b) File: A file on a local or networked hard disk or other storage device.
4. Click **Continue**.
  5. On the **API Spec Import Object** page, enter the following details:
    - a) API Spec Name –The name of the entity that is created from the uploaded API specification.  
Note: Both the API file name and the API Spec Name entered should be the same.
    - b) API Spec Type –Select the type of specification.  
Types: REST (OpenAPI/Swagger), and gRPC(PROTO).  
Default Type: REST (OpenAPI/Swagger)
    - c) Click **Done**.

The newly added entity is listed in the **Imports** page under the **API Spec Import Page tab**.

### View the statistics of API specification and API endpoints

You can view the following statistics for all the API specifications and API endpoints:

- API specifications hits - Requests matching any endpoint of the API specification.
- API specification successful validations - Requests matching any endpoint of the API specification and in conformance with the API schema.
- API specification unmatched requests - Requests not matching any endpoint of the API specification.
- API endpoints hits - Requests matching a specific endpoint.
- API endpoints successful validations - Requests matching a specific endpoint and in conformance with the API schema.

### View API specifications and API endpoint statistics using the CLI

At the command prompt, type:

```
stat apispec <apispec name>
```

Example

```
stat apispec testapispec
```

### View API specifications and API endpoint statistics using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Imports**.

2. On the Imports page, select the **API Spec Import tab**, and then click **Statistics**.

The API specification summary is displayed.

3. To view the endpoint summary, click any of the API specifications.

The API endpoint summary is displayed for the selected API specification.

## API specification validation

September 24, 2024

API specification ensures seamless data transfer between systems through an API (Application Programming Interface). It guarantees that the data exchanged follows a predefined structure or format, thereby enhancing the overall reliability and security of the system.

An API specification defines the endpoint, schema, and parameters. Schema validation is a process that allows you to check if the incoming traffic adheres to the schema you provided in the API specification. By associating an API specification to a Web App Firewall profile, you can specify which incoming traffic is allowed, and which is either blocked or logged. Validating incoming traffic against the imported API specifications helps to ensure that network traffic is secure and compliant.

There are several API types that are commonly used in software development. These types determine how data is structured and exchanged between different software systems. NetScaler supports the following API types:

- Representational State Transfer (REST)
- Google Remote Procedure Call (gRPC)

API specifications define the design of an API, including endpoints, methods, parameters, and data formats. These specifications ensure consistency, interoperability, and ease of use when developing and consuming APIs. NetScaler supports the following specification formats:

- Open API (formerly known as Swagger)
- ProtoBuf (Protocol Buffers)

Note: You can import, add, update, and delete API specification files using the GUI or the CLI. For more information, see [Imports](#).

### Assign API Spec to a profile using CLI

Configure a Web App Firewall profile with an API specification file to validate the traffic. You can configure an action used when the validation fails using the `restAction` (for REST APIs) or `grpcAction` (for gRPC APIs) parameter.

At the command prompt, type:

```
set appfw profile <Profile Name> -apispec <API spec entity name>
```

- |                                                                                                                                                                                                            |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ol style="list-style-type: none"><li>1 - Profile name - The name of the profile.</li><li>2 - API spec entity name - The name of the entity that is created from the uploaded API specification.</li></ol> |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Assign API Spec to a profile using GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles** and click **Add**.
2. Select the required file for an API Spec Schema and click **Ok**

### Assign API Spec to an existing profile using GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**
2. Select a user-defined profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, click the **Edit** icon.
4. Select the required file for an API Spec Schema and click **Ok**.

### Configure REST and gRPC API schema validation using CLI

At the command prompt, type:

- |                                                                                                                                                                    |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <pre>1 set appfw profile &lt;profile name&gt; -restAction [block log none stats] 2 set appfw profile &lt;profile name&gt; -grpcAction [block log none stats]</pre> |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Configure REST and gRPC API schema validation using GUI

To configure or modify the REST and gRPC API schema validation:

1. Navigate to **Security > NetScaler Web App Firewall > Profiles\*\***.
2. Select a user-defined profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, Under the **Advanced Settings** section, click **Security Checks**.
4. In the **Security Checks** section, select **REST API Schema Validation** or **gRPC API Schema Validation** and Click **Action Settings**.
5. In the **Actions** page, set the **Action parameter**. You can either select or clear the option.
6. Click **Ok**.



**Note:**

Unselect the Start URL option before configuring the security check for API Schema Validation.

**Configure relaxation rule for API schema validation using CLI**

Configure a relaxation rule to bypass certain traffic from being validated against the schema specified in the API specification linked with the web App Firewall profile.

To configure the relaxation rule for REST API schema validation, at the command prompt, type:

```
bind appfw profile <profile name> -restValidation <REST relaxation pattern> -ruleAction <Log|None>
```

- REST relaxation pattern - The URL pattern for which the relaxation is applied. Patterns can include variables as well as wildcard definitions, as described in proto of Google APIs Current link: <https://github.com/googleapis/googleapis/blob/master/google/api/http.proto>

The URL specified is not required to be part of the API specification.

**Note:**

The prefix of the pattern should have an HTTP method (ie. GET, PUT, POST, DELETE, PATCH) followed by a colon (:).

**Example:**

- GET:/v1/{name=messages/\*} - Allows three segment URLs starting with /v1/messages and the method is GET.
  - PATCH:/v1/messages/{message\_id=\*\*} - Allows anything with /v1/messages prefix and the method is PATCH.
  - POST:/v1/lists/\*\* - Allows anything with /v1/lists prefix and the method is POST.
  - ://engineering/\*\*- Allows any URL that has the second segment as engineering regardless of the method.
- Log or None - Specifies whether logs are generated for bypassed traffic matching the rule. When action is set to log, relaxed URLs and corresponding rules are dumped into system logs. When the action is set to none, the relaxed URLs and the corresponding rule are recorded in the system logs.

To configure the relaxation rule for gRPC API schema validation, at the command prompt, type:

```
bind appfw profile <profile name> -grpcValidation <gRPC pattern> -ruleAction <Log|None>
```

- gRPC pattern - The pattern of gRPC endpoint(s) for which the relaxation is applied. The gRPC method specified is not required to be part of the API specification.

**Example:**

- citrix.api.doc.AddBook - Allows the RPC AddBook in package citrix.api.doc.
- test.api.\*\* - Allows all RPCs in packages, starting with test.api.
- \*.engineering.\*\* - Allows all RPCs that have engineering as the second segment of the package name.

---

|     |                                                                                     |
|-----|-------------------------------------------------------------------------------------|
| Log | None - Specifies whether logs are generated for bypassed traffic matching the rule. |
|-----|-------------------------------------------------------------------------------------|

---

•

## Configure relaxation rule for API schema validation using GUI

### REST API schema validation

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. Select a user-defined profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, Under the **Advanced Settings** section, click **Relaxation Rule**.
4. Select the **REST API Schema Validation** and click **Edit**.
5. In the **REST API Schema Validation Relaxation Rules** page, click **Add**.
6. In the **REST API Schema Validation Relaxation Rule** page, specify the following details:
  - a) Enabled - Select the option to enable the relaxation rule.
  - b) Rest URL Pattern - Enter the URL pattern for which the relaxation is applied.
  - c) REST URL Relaxation Action - Select an action.
  - d) Comments- Description of the expression.
  - e) Resource ID - Unique ID to identify the resource.
  - f) Click **Create**.

The newly added REST API schema validation relaxation rule is listed on the REST API Schema Validation Relaxation Rules page.

### gRPC API schema validation

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. On the **Profiles** page, select a profile and click **Edit**.

3. On the **NetScaler Web App Firewall Profile** page, under the **Advanced Settings** section, click **Relaxation Rule**.
4. Select the **gRPC API Schema Validation** and click **Edit**.
5. In the **gRPC API Schema Validation Relaxation Rules** page, click **Add**.
6. In the **gRPC API Schema Validation Relaxation Rule** page, specify the following details:
  - a) Enabled - Select the option to enable the relaxation rule.
  - b) gRPC Method Pattern - Enter the gRPC Method pattern for which the relaxation is applied
  - c) REST URL Relaxation Action - Select any one of the actions.
  - d) Comments- Description of the expression.
  - e) Resource ID - Unique ID to identify the resource.
  - f) Click **Create**.The newly added gRPC API schema validation relaxation rule is listed in the gRPC API Schema Validation Relaxation Rules page.

## Advanced policy expressions using API specification

April 15, 2024

You can import unified API specifications onto the Web App Firewall imports page and then create an advanced policy expression using the API specifications. You can configure the appropriate actions for the incoming API traffic based on the expressions. An API specification contains the endpoint, schema, and parameters. The incoming API traffic can be of type gRPC or REST.

You can use the `http.req.api` expression to identify the endpoints in the incoming requests defined in the API specification.

Syntax:

```
http.req.api ("API_Spec_Name")
```

Example:

```
set responder policy reject -rule !"http.req.api(\"myspec\").endpoint
(\"POST\"\", \"/v1/pet/\")
```

The system rejects all the traffic if the traffic does not match the endpoints specified in the API specification.

### Advanced policy expression for API schema

You can create advanced policy expressions for the API using the following operations:

**Prerequisites.**

Import the API specification file using the import option in the Web App Firewall.

For more information, see [Imports](#).

**Expression to match traffic by HTTP method**

---

Use an HTTP string method to restrict matching APIs. This string can contain one or more HTTP methods separated by “

”or can contain a wild card (\*). When more than one method is specified, the expression evaluates to an OR condition between the methods.

---

For example, GET or PUT or DELETE matches an incoming request with the HTTP method GET OR PUT OR DELETE.

**Example:**

- Single HTTP method

```
http.req.api("petstore").method("POST").text("id").eq("1")
```

- Multiple Method

```
http.req.api("petstore").method("GET|DELETE").exists
```

**Expression to match traffic by URL**

PATH (URL string) is used to match the endpoints that include wildcards. The single asterisk (\*) matches a single segment while the double asterisk (\*\*) matches all possible segments prefixed before the double asterisk.

**Example:**

- `http.api("petstore").path("/v1/pets/*/find")`

It matches the incoming traffic only with `/v1/pets/*/find`

- `http.api("petstore").path("/v1/pets/**")`

It matches all endpoints starting with `/v1/pets`

**Expression to match traffic by API name**

Use the APINAME (name string) expression to restrict the matching traffic by API name. You can also use the API name string by running the show command as shown in the following example:

```
1 show api spec gspec
2 Name: gspec
3 File: gfile
4 Type: OAS
```

- The `operation ID` serves as the endpoint name if the file type is OAS.

Example: To validate the incoming traffic against the endpoint from the following OAS:

operationId: adexchangebuyer.accounts.list

Use the following policy expression:

```
http.req.api("schema").apiname("adexchangebuyer.accounts.list").exists
```

- The `service name` and `rpc name` serves as the endpoint name if the file type is proto.

In the following example, EchoService.Echo is the endpoint:

```
service EchoService
{
 rpc Echo(EchoReq) returns (EchoResp)
 {
 option (google.api.http) = {
 get: "/v1/{name=messages/*}"
 };
 }
}
```

## Access values from the API specification

You can access the fields in the API specifications by name, path, query parameters, JSON body, or gRPC body. To define the type of the parameter, use PI expressions. The following types are supported:

- num - An integer value.
- ulong - A long integer value.
- bool - A boolean value.
- double - A double value.
- text - A string of any length.

### Example:

To validate the incoming traffic using numeric parameter that matches the value one, use the following expression:

```
http.req.api("petstore.proto").APIName("TestPet").NUM("test_num1").eq(1)
```

### Access value from the repeated fields

To access repeated objects in APIs, use the second parameter as the repeating index. Accessing outside the array results in an undefined value.

#### Example:

To retrieve the fifth tag in the 'FindPets' endpoint use:

```
http.req.api("petstore.proto", "FindPets').TEXT("tags", 5).contains("mytag")
```

To retrieve the fifth tag in the repeated tags string, use:

```
/v1/pets?tags=1&tags=2&tags=3&tags=4&tags=mytag&tags=6
```

### Access values from the nested objects

Objects can be nested inside other objects. The same field name can occur in nested objects in the same document. However, the full access name must still be unique.

To access nested fields, concatenate the field names with a "."(dot) as a separator.

Example: use kennel.location.state to retrieve California from the following JSON.

```
{
 "kennel": {
 "location": {
 "state": "California"
 }
 }
}
```

Expression

```
http.req.api("petstore.proto", "TestPet").text("kennel.location.state").contains("California")
```

### Access value using object expression

The Object() expression is used when accessing subfields of repeated objects. If there are two or more objects configured with different values, you can create an expression to validate the object specific to one value.

For example, in the following JSON body, the object “foo” has two values, which are one and none.

```
{
 "foo":
 [
 {
 "bar": "one"
 },
 {
 "bar": "none"
 }
]
}
```

To compare the value to none, you can configure the expression as follows:

```
HTTP.req.api("schema").object("foo",1).text("bar").eq("none")
```

## API traffic visibility using API specification validation

April 15, 2024

NetScaler provides an option to export additional information as part of the HTTP transactions related to the HTTP APIs when it determines the traffic as API traffic.

For more information on exporting the HTTP transaction logs, see [Export transaction logs directly from NetScaler to Splunk](#).

### Enable API traffic visibility with the API specification using the CLI

1. Create the API profile

At the command prompt, type:

```
add api profile <name>
```

2. Enable the API visibility

At the command prompt, type

```
set api profile <name> -apiVisibility <ENABLED/DISABLED>
```

3. Bind the specification to the profile

At the command prompt, type:

```
bind -apiprofile <name> -apiSpec <name>
```

4. Assign the profile to a virtual server

At the command prompt, type:

```
set cs vserver <name> -apiprofile <name>
```

**Example:**

```
1 add api profile test_apiprofile1
2 set api profile test_apiprofile1 -apiVisibility enabled
3 bind api profile test_apiprofile1 -apispec testapi spec name
4 set cs vserver vserver_test1 -apiprofile test_apiprofile1
```

If the incoming traffic matches the endpoint in the API specification, then `apiEndpoint`, `apiSpecName`, and `isApi` parameters are sent in the HTTP transaction logs.

**Enable API traffic visibility without the API Specification using the CLI**

1. Create the API profile

At the command prompt, type:

```
add api profile <name>
```

2. Enable the API visibility

At the command prompt, type:

```
set api profile <name> -apiVisibility <ENABLED/DISABLED>
```

3. Assign the profile to virtual server

At the command prompt, type:

```
set cs vserver <name> -apiprofile <name>
```

**Example:**

```
1 add api profile test_apiprofile
2 set api profile <test_apiprofile> -apiVisibility enabled
3 set cs vserver vserver_test -apiprofile test_apiprofile
```

If the incoming traffic is API traffic, then `isApi` parameter is sent in the HTTP transaction logs.

**Enable API traffic visibility using GUI**

1. Navigate to **System > Profiles > API Profiles**.
2. Click **Add**.
3. On the **API Profiles** page, enter a Name for the API profile.
4. Select **API Visibility**, and click **OK**.



5. To enable API traffic visibility, bind the API Specification file.
  - a) On the **API Profiles** page, under **Advanced Settings**, click **API Spec**.
  - b) In the **API SPEC Binding** section, click **>** and select the required API specification.
  - c) Click **Bind** and then click **Close**.
6. Click **Done**.

## NetScaler Web App Firewall

June 12, 2023

The NetScaler Web App Firewall offers easy to configure options to meet a wide range of application security requirements. Web App Firewall profiles, which consist of sets of security checks, can be used to protect both the requests and the responses by providing deep packet-level inspections. Each profile includes an option to select basic protections or advanced protections. Some protections might require use of other files. For example, xml validation checks might require WSDL or schema files. The profiles can also use other files, such as signatures or error objects. These files can be added locally, or they can be imported ahead of time and saved on the appliance for future use.

Each policy identifies a type of traffic, and that traffic is inspected for the security check violations specified in the profile that is associated with the policy. The policies can have different bind points, which determine the scope of the policy. For example, a policy that is bound to a specific virtual server is invoked and evaluated for only the traffic flowing through that virtual server. The policies are evaluated in the order of their designated priorities, and the first one that matches the request or response is applied.

- Quick Deployment of Web App Firewall Protection

You can use the following procedure for quick deployment of Web App Firewall security:

1. Add a Web App Firewall profile and select the appropriate type (html, xml, JSON) for the security requirements of the application.
2. Select the required level of security (basic or advanced).
3. Add or import the required files, such as signatures or WSDL.
4. Configure the profile to use the files, and make any other necessary changes to the default settings.
5. Add a Web App Firewall policy for this profile.
6. Bind the policy to the target bind point and specify the priority.

- Web App Firewall entities

**Profile**—An Web App Firewall profile specifies what to look for and what to do. It inspects both the request and the response to determine which potential security violations must be checked and what actions must be taken when processing a transaction. A profile can protect an HTML, XML, or HTML and XML payload. Depending on the security requirements of the application, you can create either a basic or an advanced profile. A basic profile can protect against known attacks. If higher security is required, you can deploy an advanced profile to allow controlled access to the application resources, blocking zero day attacks. However, a basic profile can be modified to offer advanced protections, and conversely. Multiple action choices (for example, block, log, learn, and transform) are available. Advanced security checks might use session cookies and hidden form tags for controlling and monitoring the client connections. Web App Firewall profiles can learn the triggered violations and suggest the relaxation rules.

**Basic Protections**—A basic profile includes a preconfigured set of Start URL and Deny URL relaxation rules. These relaxation rules determine which requests must be allowed and which must be denied. Incoming requests are matched against these lists and the configured actions are applied. This allows the user to be able to secure applications with minimal configuration for relaxation rules. The Start URL rules protect against forceful browsing. Known web server vulnerabilities that are exploited by hackers can be detected and blocked by enabling a set of default Deny URL rules. Commonly launched attacks, such as Buffer Overflow, SQL, or Cross-site scripting can also be easily detected.

**Advanced Protections**—As the name indicates, advanced protections are used for applications that have higher security requirements. Relaxation rules are configured to allow access to only specific data and block the rest. This positive security model mitigates unknown attacks, which might not be detected by basic security checks. In addition to all the basic protections, an advanced profile keeps track of a user session by controlling the browsing, checking for cookies, specifying input requirements for various form fields, and protecting against tampering of forms or cross-site request forgery attacks. Learning, which observes the traffic and deploys the appropriate relaxations, is enabled by default for many security checks. Although easy to use, advanced protections require due consideration, because they offer tighter security but also require more processing and do not allow use of caching, which can affect performance.

**Import**—Import functionality is useful when Web App Firewall profiles must use external files, that is, files hosted on an external or internal web server, or that have to be copied from a local machine. Importing a file and storing it on the appliance is useful, especially in situations where you have to control access to external websites, or where compilation takes a long time, large files have to be synced across HA deployments, or you can reuse a file by copying it across multiple devices. For example:

- WSDLs hosted on external web servers can be imported locally before blocking access to external websites.
- Large signature files generated by an external scan tool such as Cenzic can be imported

and precompiled, using schema on the NetScaler ADC appliance.

- A customized HTML or XML error page can be imported from an external web server or copied from a local file.

**Signatures**—Signatures are powerful, because they use pattern matching to detect malicious attacks and can be configured to check both the request and the response of a transaction. They are a preferred option when a customizable security solution is needed. Multiple choices (for example, block, log, learn, and transform) are available for the action to take when a signature match is detected. The Web App Firewall has a built-in default signature object consisting of more than 1,300 signature rules, with an option to get the latest rules by using the auto-update feature. Rules created by other scan tools can also be imported. The signature object can be customized by adding new rules, which can work with the other security checks specified in the Web App Firewall profile. A signature rule can have multiple patterns and can flag a violation only when all the patterns are matched, thereby avoiding false positives. Careful selection of a literal `fastmatch` pattern for a rule can significantly optimize processing time.

**Policies**—Web App Firewall Policies are used to filter and separate the traffic into different types. This provides the flexibility to implement different levels of security protections for the application data. Access to highly sensitive data can be directed to advanced security-check inspections, while less sensitive data is protected by basic-level security inspections. Policies can also be configured to bypass security-check inspection for harmless traffic. Higher security requires more processing, so careful design of the policies can provide desired security along with optimized performance. The priority of the policy determines the order in which it is evaluated, and its bind point determines the scope of its application.

## Highlights

1. Ability to secure a wide range of applications by protecting different types of data, implementing the right level of security for different resources, and still getting maximum performance.
2. Flexibility to add or modify a security configuration. You can tighten or relax security checks by enabling or disabling basic and advanced protections.
3. Option to convert an HTML profile to an XML or Web2.0 (HTML+XML) profile and conversely, providing the flexibility to add security for different types of payload.
4. Easily deployed actions to block attacks, monitor them in logs, collect statistics, or even transform some attack strings to render them harmless.
5. Ability to detect attacks by inspecting incoming requests, and to prevent leakage of sensitive data by inspecting the responses sent by the servers.
6. Capability to learn from the traffic pattern to get recommendations for easily editable relaxation rules that can be deployed to allow exceptions.
7. Hybrid security model that applies the power of customizable signatures to block attacks that

match specified patterns, and provides the flexibility to use the positive-security-model checks for basic or advanced security protections.

8. Availability of comprehensive configuration reports, including information about PCI-DSS compliance.

## FAQs and Deployment Guide

June 2, 2023

### Q: Why is NetScaler Web App Firewall the preferred choice for securing applications?

With the following features, the NetScaler Web App Firewall offers a comprehensive security solution:

- **Hybrid security model:** NetScaler hybrid security model allows you to take advantage of both a positive security model and a negative security model to come up with a configuration ideally suited for your applications.
  - **Positive security model** protects against Buffer Overflow, CGI-BIN Parameter Manipulation, Form/Hidden Field Manipulation, Forceful Browsing, Cookie or Session Poisoning, Broken ACLs, Cross-Site Scripting (cross-site scripting), Command Injection, SQL Injection, Error Triggering Sensitive Information Leak, Insecure Use of Cryptography, Server Misconfiguration, Back Doors and Debug Options, Rate-Based Policy Enforcement, Well Known Platform Vulnerabilities, Zero-Day Exploits, Cross Site Request Forgery (CSRF), and leakage of Credit Card and other sensitive data.
  - **Negative security model** uses a rich set signatures to protect against L7 and HTTP application vulnerabilities. The Web App Firewall is integrated with several third party scanning tools, such as those offered by Cenzic, Qualys, Whitehat, and IBM. The built-in XSLT files allow easy importation of rules, which can be used in conjunction with the native-format Snort based rules. An auto-update feature gets the latest updates for new vulnerabilities.

The positive security model might be the preferred choice for protecting applications that have a high need for security, because it gives you the option to fully control who can access what data. You allow only what you want and block the rest. This model includes a built-in security check configuration, which is deployable with few clicks. However, keep in mind that the tighter the security, the greater the processing overhead.

The negative security model might be preferable for customized applications. The signatures allow you to combine multiple conditions, and a match and the specified action are triggered only when

all the conditions are satisfied. You block only what you don't want and allow the rest. A specific fast-match pattern in a specified location can significantly reduce processing overhead to optimize performance. The option to add your own signature rules, based on the specific security needs of your applications, gives you the flexibility to design your own customized security solutions.

- **Request as well as response side detection and protection:** You can inspect the incoming requests to detect any suspicious behavior and take appropriate actions, and you can check the responses to detect and protect against leakage of sensitive data.
- **Rich set of built-in protections for HTML, XML and JSON payloads:** The Web App Firewall offers 19 different security checks. Six of them (such as Start URL and Deny URL) apply to both HTML and XML data. Five checks (such as Field Consistency and Field Format) are specific to HTML, and eight (such as XML Format and Web Service Interoperability) are specific to XML payloads. This feature includes a rich set of actions and options. For example, URL Closure enables you to control and optimize the navigation through your website, to safeguard against forceful browsing without having to configure relaxation rules to allow each and every legitimate URL. You have the option to remove or x-out the sensitive data, such as credit-card numbers, in the response. Be it SOAP Array attack protection, XML denial of Service (XDoS), WSDL scan prevention, Attachment check, or any number of other XML attacks, you have the comfort of knowing that you have an ironclad shield protecting your data when your applications are protected by the Web App Firewall. The signatures allow you to configure rules using XPATH-Expressions to detect violations in the body as well as the header of a JSON payload.
- **GWT:** Support for protecting Google Web Toolkit applications to safeguard against SQL, cross-site scripting and Form Field Consistency check violations.
- **Java-free, user friendly graphical user interface (GUI):** An intuitive GUI and preconfigured security checks make it easy to deploy security by clicking a few buttons. A wizard prompts and guides you to create the required elements, such as profiles, policies, signatures, and bindings. The HTML5 based GUI is free of any Java dependency. It's performance is significantly better than that of the older, Java based versions.
- **Easy to Use and automatable CLI:** Most of the configuration options that are available in GUI are also available in the command line interface (CLI). The CLI commands can be executed by a batch file and are easy to automate.
- **Support for REST API:** The NetScaler NITRO protocol supports a rich set of REST API's to automate Web App Firewall configuration and collect pertinent statistics for ongoing monitoring of security violations.
- **Learning:** The Web App Firewall's ability to learn by monitoring traffic to fine tune security is very user friendly. The learning engine recommends rules, which makes it easy to deploy relaxations without proficiency in regular expressions.

- **RegEx editor support:** Regular expression offer an elegant solution to the dilemma of wanting to consolidate rules and yet optimize search. You can capitalize on the power of regular expressions to configure URLs, field names, signature patterns, and so on. The rich built-in GUI RegEx editor offers you a quick reference for the expressions and provides a convenient way to validate and test your RegEx for accuracy.
- **Customized error page:** Blocked requests can be redirected to an error URL. You also have the option to display a customized error object that uses supported variables and NetScaler advanced policy (advanced PI expressions) to embed troubleshooting information for the client.
- **PCI-DSS, stats, and other violation reports:** The rich set of reports makes it easy to meet the PCI-DSS compliance requirement, gather stats about traffic counters, and view violation reports for all profiles or just one profile.
- **Logging and click-to-rule from log:** Detailed logging is supported for native as well as CEF format. The Web App Firewall offers you the ability to filter targeted log messages in the syslog viewer. You can select a log message and deploy a corresponding relaxation rule by a simple click of a button. You have the flexibility to customize log messages and also have support for generating web logs. For additional details, see [Web App Firewall Logs](#) topic.
- **Include violation logs in trace records:** The ability to include log messages in the trace records makes it very easy to debug unexpected behavior such as reset and block.
- **Cloning:** The useful Import/Export profile option allows you to clone the security configuration from one NetScaler appliance to others. Export learned data options make it easy to export the learned rules to an Excel file. You can then get them reviewed and approved by application owner before applying them.
- **An AppExpert template** (a set of configuration settings) can be designed to provide appropriate protection for your websites. You can simplify and expedite the process of deploying similar protection on other appliances by exporting these cookie-cutter templates to a template.

For additional details, see [AppExpert template](#) topic.

- **Sessionless security checks:** Deploying sessionless security checks can help you reduce the memory footprint and expedite the processing.
- **Interoperability with other NetScaler features:** The Web App Firewall works seamlessly with other NetScaler features, such as rewrite, URL transformation, integrated caching, CVPN, and rate limiting.
- **Support of PI expressions in policies:** You can leverage the power of advanced PI expressions to design policies to implement different levels of security for different parts of your application.
- **Support for IPv6:** The Web App Firewall supports both IPv4 and IPv6 protocols.
- **Geolocation based security protection:** You have the flexibility of using NetScaler advanced policy (PI Expressions) for configuring location based policies, which can be used in conjunction

with a built-in location database to customize firewall protection. You can identify the locations from which malicious requests originate, and enforce the desired level of security-check inspections for requests that originate from a specific geographical location.

- **Performance:** Request-side **streaming** significantly improves performance. As soon as a field is processed, the resulting data is forwarded to the back end while evaluation continues for the remaining fields. The improvement in processing time is especially significant when handling large posts.
- **Other security features:** The Web App Firewall has several other security settings that can help ensure the security of your data. For example, the **Confidential Field** lets you block leakage of sensitive information in the log messages, and **Strip HTML Comment** allows you to remove the HTML comments from the response before forwarding it to the client. **Field Types** can be used to specify what inputs are allowed in the forms submitted to your application.

### **Q: What do I need to do to configure Web App Firewall?**

Do the following:

- Add an Web App Firewall profile and select the appropriate type (html, xml, web2.0) for the security requirements of the application.
- Select the required level of security (basic or advanced).
- Add or import the required files, such as signatures or WSDL.
- Configure the profile to use the files, and make any other necessary changes to the default settings.
- Add an Web App Firewall policy for this profile.
- Bind the policy to the target bind point and specify the priority.

### **Q: How do I know what profile type to choose?**

The Web App Firewall profile offers protection for both HTML and XML payloads. Depending on the need of your application, you can choose either a HTML profile or XML profile. If your application supports both HTML and XML data, you can choose a Web2.0 profile.

### **Q: What is the difference between basic and advanced profiles? How do I decide which one I need?**

The decision to use a basic or an advance profile depends on the security need of your application. A basic profile includes a preconfigured set of Start URL and Deny URL relaxation rules. These relaxation rules determine which requests are allowed and which are denied. Incoming requests are matched with the preconfigured rules, and the configured actions are applied. The user can secure applications

with minimal configuration of relaxation rules. The Start URL rules protect against forceful browsing. Known web server vulnerabilities that are exploited by hackers can be detected and blocked by enabling a set of default Deny URL rules. Commonly launched attacks, such as Buffer Overflow, SQL, or Cross-Site Scripting can also be easily detected.

As the name indicates, advanced protections are for applications that have higher security requirements. Relaxation rules are configured to allow access to only specific data and block the rest. This positive security model mitigates unknown attacks, which might not be detected by basic security checks. In addition to all the basic protections, an advanced profile keeps track of a user session by controlling the browsing, checking for cookies, specifying input requirements for various form fields, and protecting against tampering of forms or Cross-Site Request Forgery attacks. Learning, which observes the traffic and recommends the appropriate relaxations, is enabled by default for many security checks. Although easy to use, advanced protections require due consideration, because they offer tighter security but also require more processing. Some advanced security checks do not allow use of caching, which can affect performance.

Keep the following points in mind when deciding whether to use basic or advanced profiles:

- Basic and advanced profiles are just starting templates. You can always modify the basic profile to deploy advanced security features, and vice versa.
- Advanced security checks require more processing and can affect performance. Unless your application needs advanced security, you might want to start with a basic profile and tighten the security as required for your application.
- You do not want to enable all security checks unless your application needs it.

### **Q: What is a policy? How do I select the bind point and set the priority?**

Web App Firewall policies can help you sort your traffic into logical groups for configuring different levels of security implementation. Carefully select the bind points for the policies to determine which traffic is matched against which policy. For example, if you want every incoming request to be checked for SQL/cross-site scripting attacks, you can create a generic policy and bind it globally. Or, if you want to apply more stringent security checks to the traffic of a virtual server hosting applications that contain sensitive data, you can bind a policy to that virtual server.

Careful assignment of priorities can enhance the traffic processing. You want to assign higher priorities to more specific policies and lower priorities to generic policies. Note that the higher the number, the lower the priority. A policy with a priority of 10 is evaluated before a policy that has a priority of 15.

You can apply different levels of security for different kinds of contents, e.g. requests for static objects like images and text can be by-passed by using one policy and requests for other sensitive contents can be subjected to a much stringent check by using a second policy.



**Q: How do I go about configuring the rules to secure my application?**

The Web App Firewall makes it very easy to design the right level of security for your web-site. You can have multiple Web App Firewall policies, bound to different Web App Firewall profiles, to implement different levels of security-check inspections for your applications. You can initially monitor the logs to observe what security threats are being detected and which violations are being triggered. You can either manually add the relaxation rules or take advantage of the Web App Firewall's recommended learned rules to deploy the required relaxations to avoid false positives.

The NetScaler Web App Firewall offers **visualizer** support in GUI, which makes rule management very easy. You can easily view all the data on one screen, and take action on several rules with one click. The biggest advantage of the visualizer is that it recommends regular expressions to consolidate several rules. You can select a subset of the rules, basing your selection on the delimiter and Action URL. Visualizer support is available for viewing 1) learned rules and 2) relaxation rules.

1. The visualizer for learned rules offers the option to edit the rules and deploy them as relaxations. You can also skip (ignore) rules.
2. The visualizer for deployed relaxations offers you the option to add a new rule or edit an existing one. You can also enable or disable a group of rules by selecting a node and clicking the **Enable** or **Disable** button in the relaxation visualizer.

**Q: What are signatures? How do I know which signatures to use?**

A signature is an object that can have multiple rules. Each rule consists of one or more patterns that can be associated with a specified set of actions. The Web App Firewall has a built-in default signature object consisting of more than 1,300 signature rules, with an option to get the latest rules by using the **auto-update** feature to get protection against new vulnerabilities. Rules created by other scan tools can also be imported.

Signatures are very powerful because they use pattern matching to detect malicious attacks and can be configured to check both the request and the response of a transaction. They are a preferred option when a customizable security solution is needed. Multiple action choices (for example, block, log, learn, and transform) are available for when a signature match is detected. The default signatures cover rules to protect different types of applications, such as web-cgi, web-coldfusion, web-frontpage, web-iis, web-php, web-client, web-activex, web-shell-shock, and web-struts. To match the needs of your application, you can select and deploy the rules belonging to a specific category.

Signature-usage tips:

- You can just make a copy of the default signature object and modify it to enable the rules you need and configure the actions you want.

- The signature object can be customized by adding new rules, which can work in conjunction with other signature rules.
- The signature rules can also be configured to work in conjunction with the security checks specified in the Web App Firewall profile. If a match indicating a violation is detected by a signature as well as a security check, the more restrictive action is the one that gets enforced.
- A signature rule can have multiple patterns and be configured to flag a violation only when all the patterns are matched, thereby avoiding false positives.
- Careful selection of a literal fast-match pattern for a rule can significantly optimize processing time.

### **Q: Does the Web App Firewall work with other NetScaler features?**

The Web App Firewall is fully integrated into the NetScaler appliance and works seamlessly with other features. You can configure maximum security for your application by using other NetScaler security features in conjunction with the Web App Firewall. For example, **AAA-TM** can be used to authenticate the user, check the user's authorization to access the content, and log the accesses, including invalid login attempts. **Rewrite** can be used to modify the URL or to add, modify or delete headers, and **Responder** can be used to deliver customized content to different users. You can define the maximum load for your website by using **Rate Limiting** to monitor the traffic and throttle the rate if it is too high. **HTTP Denial-of-Service (DoS)** protection can help distinguish between real HTTP clients and malicious DoS clients. You can narrow the scope of security-check inspection by binding the Web App Firewall policies to virtual servers, while still optimizing the user experience by using the **Load Balancing** feature to manage heavily used applications. Requests for static objects such as images or text can bypass security check inspection, taking advantage of **integrated caching** or **compression** to optimize the bandwidth usage for such content.

### **Q: How is the payload processed by the Web App Firewall and the other NetScaler features?**

A diagram showing details of the L7 packet flow in a NetScaler appliance is available in the [Processing Order of Features](#) section.

### **Q: What is the recommended workflow for Web App Firewall deployment?**

Now that you know the advantages of using the state-of-the-art security protections of the NetScaler Web App Firewall, you might want to collect additional information that can help you design the optimal solution for your security needs. Citrix recommends that you do the following:

- **Know your environment:** Knowing your environment will help you to identify the best security protection solution (signatures, security checks, or both) for your needs. Before you begin configuration, you must gather the following information.
  - **OS:** What kind of OS (MS Windows, Linux, BSD, Unix, others) do you have?
  - **Web Server:** What web server (IIS, Apache or NetScaler Enterprise Server) are you running?
  - **Application:** What type of applications are running on your application server (for example, ASP.NET, PHP, Cold Fusion, ActiveX, FrontPage, Struts, CGI, Apache Tomcat, Domino, and WebLogic)?
  - Do you have customized applications or off-the-shelf (for example, Oracle, SAP) applications? What version you are using?
  - **SSL:** Do you require SSL? If so, what key size (512, 1024, 2048, 4096) is used for signing certificates?
  - **Traffic Volume:** What is the average traffic rate through your applications? Do you have seasonal or time-specific spikes in the traffic?
  - **Server Farm:** How many servers do you have? Do you need to use load balancing?
  - **Database:** What type of database (MS-SQL, MySQL, Oracle, Postgres, SQLite, nosql, Sybase, Informix and so forth.) do you use?
  - **DB Connectivity:** What kind of data base connectivity do you have (DSN, per-file connection string, single file connection string) and what drivers are used?
- **Identify your security needs:** You might want to evaluate which applications or specific data need maximum security protection, which ones are less vulnerable, and the ones for which security inspection can safely be bypassed. This will help you in coming up with an optimal configuration, and in designing appropriate policies and bind points to segregate the traffic. For example, you might want to configure a policy to bypass security inspection of requests for static web content, such as images, MP3 files, and movies, and configure another policy to apply advanced security checks to requests for dynamic content. You can use multiple policies and profiles to protect different contents of the same application.
- **License requirement:** NetScaler offers a unified solution to optimize the performance of your application by taking advantage of a rich set of features such as load balancing, content switching, caching, compression, responder, rewrite, and content filtering, to name a few. Identifying the features that you want can help you decide which license you need.
- **Install and baseline a NetScaler appliance:** Create a virtual server and run test traffic through it to get an idea of the rate and amount of traffic flowing through your system. This information will help you to identify your capacity requirement and select the right appliance (VPX, MPX, or SDX).
- **Deploy the Web App Firewall:** Use the Web App Firewall wizard to proceed with a simple security configuration. The wizard walks you through several screens and prompts you to add a profile, policy, signature, and security checks.

- **Profile:** Select a meaningful name and the appropriate type (HTML, XML or WEB 2.0) for your profile. The policy and signatures will be auto-generated using the same name.
- **Policy:** The auto-generated policy has the default Expression (true), which selects all traffic and is bound globally. This is a good starting point unless you have in mind a specific policy that you want to use.
- **Protections:** The wizard helps you take advantage of the hybrid security model, in which you can use the default signatures offering a rich set of rules to protect different types of applications. **Simple** edit mode allows you to view the various categories (CGI, Cold Fusion, PHP, and so forth.). You can select one or more categories to identify a specific set of rules applicable to your application. Use the **Action** option to enable all the signature rules in the selected categories. Make sure that blocking is disabled, so that you can monitor the traffic before tightening the security. Click **Continue**. In the **Specify Deep protections** pane, you can make changes as needed to deploy the security check protections. In most cases, basic protections are sufficient for initial security configuration. Run the traffic for a while to collect a representative sample of the security-inspection data.
- **Tightening the security:** After deploying Web App Firewall and observing the traffic for a while, you can start tightening the security of your applications by deploying relaxations and then enabling blocking. **Learning**, **Visualizer**, and **Click to deploy rules** are useful features that make it very easy to tweak your configuration to come up with just the right level of relaxation. At this point, you can also change the policy expression and/or configure additional policies and profiles to implement desired levels of security for different types of content.
- **Debugging:** If you see unexpected behavior of your application, the Web App Firewall offers various options for easy debugging:
  - \* **Log.** If legitimate requests are getting blocked, your first step is to check the ns.log file to see if any unexpected security-check violation is being triggered.
  - \* **Disable feature.** If you do not see any violations but are still seeing unexpected behavior, such as an application resetting or sending partial responses, you can disable the Web App Firewall feature for debugging. If the issue persists, it rules out the Web App Firewall as a suspect.
  - \* **Trace records with log messages.** If the issue appears to be Web App Firewall related and needs closer inspection, you have the option to include security violation messages in an nstrace. You can use “Follow TCP stream” in the trace to view the details of the individual transaction, including headers, payload, and the corresponding log message, together on the same screen. Details of how to use this functionality are available at [Appendixes](#).

## Introduction to NetScaler Web App Firewall

March 22, 2024

The NetScaler Web App Firewall prevents security breaches, data loss, and possible unauthorized modifications to websites that access sensitive business or customer information. It does so by filtering both requests and responses, examining them for evidence of malicious activity, and blocking requests that exhibit such activity. Your site is protected not only from common types of attacks, but also from new, as yet unknown attacks. In addition to protecting web servers and websites from unauthorized access, the Web App Firewall protects against vulnerabilities in legacy CGI code or scripts, web frameworks, web server software, and other underlying operating systems.

The NetScaler Web App Firewall is available as a stand-alone appliance, or as a feature on a NetScaler virtual appliance (VPX). In the Web App Firewall documentation, the term NetScaler refers to the platform on which the Web App Firewall is running, regardless of whether that platform is a dedicated firewall appliance, a NetScaler on which other features have also been configured, or a NetScaler VPX.

To use the Web App Firewall, you must create at least one security configuration to block connections that violate the rules that you set for your protected websites. The number of security configurations that you might want to create depends on the complexity of your website. Sometimes, a single configuration is sufficient. In other cases, particularly those that include interactive websites, websites that access database servers, online stores with shopping carts, you might need several different configurations to best protect sensitive data without wasting significant effort on content that is not vulnerable to certain types of attacks. You can often leave the defaults for the global settings, which affect all security configurations, unchanged. However, you can change the global settings if they conflict with other parts of your configuration or you prefer to customize them.

### Web application security

Web application security is network security for computers and programs that communicate by using the HTTP and HTTPS protocols. This is a broad area in which security flaws and weaknesses abound. Operating systems on both servers and clients have security issues and are vulnerable to attack. Web server software and website enabling technologies such as CGI, Java, JavaScript, PERL, and PHP have underlying vulnerabilities. Browsers and other client applications that communicate with web-enabled applications also have vulnerabilities. Websites that use any technology but the simplest of HTML, including any site that allows interaction with visitors, often have vulnerabilities of their own.

In the past, a breach in security was often just an annoyance, but today that is seldom the case. For example, attacks in which a hacker gained access to a web server and made unauthorized modifications to (defaced) a website used to be common. They were usually launched by hackers who had no

motivation beyond demonstrating their skills to fellow hackers or embarrassing the targeted person or company. Most current security breaches, however, are motivated by a desire for money. The majority attempt to accomplish one or both of the following goals: to obtain sensitive and potentially valuable private information, or to obtain unauthorized access to and control of a website or web server.

Certain forms of web attacks focus on obtaining private information. These attacks are often possible even against websites that are secure enough to prevent an attacker from taking full control. The information that an attacker can obtain from a website can include customer names, addresses, phone numbers, social security numbers, credit card numbers, medical records, and other private information. The attacker can then use this information or sell it to others. Much of the information obtained by such attacks is protected by law, and all of it by custom and expectation. A breach of this type can have serious consequences for customers whose private information is compromised. At best, these customers have to exercise vigilance to prevent others from abusing their credit cards, opening unauthorized credit accounts in their name, or appropriating their identities outright (identity theft). At worst, the customers may face ruined credit ratings or even be blamed for criminal activities in which they had no part.

Other web attacks are aimed at obtaining control of (or *compromising*) a website or the server on which it operates, or both. A hacker who gains control of a website or server can use it to host unauthorized content, act as a proxy for content hosted on another web server, provide SMTP services to send unsolicited bulk email, or provide DNS services to support such activities on other compromised web servers. Most websites that are hosted on compromised web servers promote questionable or outright fraudulent businesses. For example, most phishing websites and child exploitation websites are hosted on compromised web servers.

Protecting your websites and web services against these attacks requires a multilayered defense capable of both blocking known attacks with identifiable characteristics and protecting against unknown attacks, which can often be detected because they look different from the normal traffic to your websites and web services.

For more information on security check, see [Overview of security checks](#).

### **Known web attacks**

The first line of defense for your websites is protection against the large number of attacks that are known to exist and have been observed and analyzed by web security experts. Common types of attacks against HTML-based websites include:

- **Buffer overflow attacks.** Sending a long URL, long cookie, or long information to a web server causes the system to hang, crash, or provide unauthorized access to the underlying operating system. A buffer overflow attack can be used to gain access to unauthorized information, to compromise a web server, or both.

- **Cookie security attacks.** Sending a modified cookie to a web server, usually in hopes of obtaining access to unauthorized content by using falsified credentials.
- **Forceful browsing.** Accessing URLs on a website directly, without navigating to the URLs with hyperlinks on the home page or other common start URLs on the website. Individual instances of forceful browsing might indicate a user who bookmarked a page on your website, but repeated attempts to access nonexistent content, or content that users must never access directly, often represent an attack on website security. Forceful browsing is normally used to gain access to unauthorized information, but can also be combined with a buffer overflow attack in an attempt to compromise your server.
- **Web form security attacks.** Sending inappropriate content to your website in a web form. Inappropriate content can include modified hidden fields, HTML, or code in a field intended for alphanumeric data only, an overly long string in a field that accepts only a short string, an alphanumeric string in a field that accepts only an integer, and a wide variety of other data that your website does not expect to receive in that web form. A web form security attack can be used either to obtain unauthorized information from your website or to compromise the website outright, usually when combined with a buffer overflow attack.

Two specialized types of attacks on web form security deserve special mention:

- **SQL injection attacks.** Sending an active SQL command or commands in a web form or as part of a URL, with the goal of causing an SQL database to run the command or commands. SQL injection attacks are normally used to obtain unauthorized information.
- **Cross-site scripting attacks.** Using a URL or a script on a webpage to violate the same-origin policy, which forbids any script from obtaining properties from or modifying any content on a different website. Since scripts can obtain information and modify files on your website, allowing a script access to content on a different website can provide an attacker the means to obtain unauthorized information, to compromise a web server, or both.

Attacks against XML-based web services normally fall into at least one of the following two categories: attempts to send inappropriate content to a web service, or attempts to breach security on a web service. Common types of attacks against XML-based web services include:

- **Malicious code or objects.** XML requests that contain code or objects that can either directly obtain sensitive information or can give an attacker control of the web service or underlying server.
- **Badly-formed XML requests.** XML requests that do not conform to the W3C XML specification, and that can therefore breach security on an insecure web service
- **Denial of service (DoS) attacks.** XML requests that are sent repeatedly and in high volume, with the intent of overwhelming the targeted web service and denying legitimate users access to the web service.

In addition to standard XML-based attacks, XML web services and Web 2.0 sites are also vulnerable to

SQL injection and cross-site scripting attacks, as described below:

- **SQL injection attacks.** Sending an active SQL command or commands in an XML-based request, with the goal of causing an SQL database to run that command or commands. As with HTML SQL injection attacks, XML SQL injection attacks are normally used to obtain unauthorized information.
- **Cross-site scripting attacks.** Using a script included in an XML based application to violate the same-origin policy, which does not allow any script to obtain properties from or modify any content on a different application. Since scripts can obtain information and modify files by using your XML application, allowing a script access to content belonging to a different application can give an attacker the means to obtain unauthorized information, to compromise the application, or both

Known web attacks can usually be stopped by filtering website traffic for specific characteristics (signatures) that always appear for a specific attack and must never appear in legitimate traffic. This approach has the advantages of requiring relatively few resources and posing relatively little risk of false positives. Therefore, it is a valuable tool in fighting attacks on websites and web services, and configuring basic signature protection.

### **Unknown web attacks**

The greatest threat against websites and applications does not come from known attacks, but from unknown attacks. Most unknown attacks fall into one of two categories: newly launched attacks for which security firms have not yet developed an effective defense (zero-day attacks), and carefully targeted attacks on a specific website or web service rather than many websites or web services (spear attacks). These attacks, like known attacks, are intended to obtain sensitive private information, compromise the website or web service and allow it to be used for further attacks, or both of those goals.

Zero-day attacks are a major threat to all users. These attacks are usually of the same types as known attacks; zero-day attacks often involve injected SQL, a cross-site script, a cross-site request forgery, or another type of attack similar to known attacks. Usually, they target vulnerabilities that the developers of the targeted software, website, or web service either are unaware of or have learned about. Security firms have therefore not developed defenses against these attacks, and even if they have, users have not obtained and installed the patches or performed the workarounds necessary to protect against these attacks. The time between discovery of a zero-day attack and availability of a defense (the vulnerability window) is shrinking, but perpetrators can still count on hours or even days in which many websites and web services lack any specific protection against the attack.

Spear attacks are a major threat, but to a more select group of users. A common type of spear attack, a spear phishes, is targeted at customers of a specific bank or financial institution, or (less commonly) at employees of a specific company or organization. Unlike other phishes, which are often crudely written forgeries that a user with any familiarity with the actual communications of that bank or financial



institution can recognize, spear phishes are letter perfect and convincing. They can contain information specific to the individual that, at first look, no stranger must know or be able to obtain. The spear phisher is therefore able to convince the target to provide the requested information, which the phisher can then use to loot accounts, to process illegitimately obtained money from other sources, or to gain access to other, even more sensitive information.

Both of these types of attack have certain characteristics that can usually be detected, although not by using static patterns that look for specific characteristics, as do standard signatures. Detecting these types of attacks requires more sophisticated and more resource-intensive approaches, such as heuristic filtering and positive security model systems. Heuristic filtering looks, not for specific patterns, but for patterns of behaviors. Positive security model systems model the normal behavior of the website or web service that they are protecting, and then block connections that do not fit within that model of normal use. URL based and web-form based security checks profile normal use of your websites, and then control how users interact with your websites, using both heuristics and positive security to block anomalous or unexpected traffic. Both heuristic and positive security, properly designed and deployed, can catch most attacks that signatures miss. However, they require considerably more resources than do signatures, and you must spend some time configuring them properly to avoid false positives. They are therefore used, not as the primary line of defense, but as backups to signatures or other less resource-intensive approaches.

By configuring these advanced protections in addition to signatures, you create a hybrid security model, which enables the Web App Firewall to provide comprehensive protection against both known and unknown attacks.

## **How NetScaler Web App Firewall works**

When you install the Web App Firewall, you create an initial security configuration, which consists of a policy, a profile, and a signatures object. The policy is a rule that identifies the traffic to be filtered, and the profile identifies the patterns and types of behavior to allow or block when the traffic is filtered. The simplest patterns, which are called signatures, are not specified within the profile, but in a signatures object that is associated with the profile.

A signature is a string or pattern that matches a known type of attack. The Web App Firewall contains over a thousand signatures in seven categories, each directed at attacks on specific types of web servers and web content. NetScaler updates the list with new signatures as new threats are identified. During configuration, you specify the signature categories that are appropriate for the web servers and content that you need to protect. Signatures provide good basic protection with low processing overhead. If your applications have special vulnerabilities or you detect an attack against them for which no signature exists, you can add your own signatures.

The more advanced protections are called security checks. A security check is a more rigorous, algorithmic inspection of a request for specific patterns or types of behavior that might indicate an attack


or constitute a threat to your protected websites and web services. It can, for example, identify a request that attempts to perform a certain type of operation that might breach security, or a response that includes sensitive private information such as a social security number or credit card number. During configuration, you specify the security checks that are appropriate for the web servers and content that you need to protect. The security checks are restrictive. Many of them can block legitimate requests and responses if you do not add the appropriate exceptions (relaxations) when configuring them. Identifying the needed exceptions is not difficult if you use the adaptive learning feature, which observes normal use of your website and creates recommended exceptions.

The Web App Firewall can be installed as either a Layer 3 network device or a Layer 2 network bridge between your servers and your users, usually behind your company's router or firewall. It must be installed in a location where it can intercept traffic between the web servers that you want to protect and the hub or switch through which users access those web servers. You then configure the network to send requests to the Web App Firewall instead of directly to your web servers, and responses to the Web App Firewall instead of directly to your users. The Web App Firewall filters that traffic before forwarding it to its final destination, using both its internal rule set and your additions and modifications. It blocks or renders harmless any activity that it detects as harmful, and then forwards the remaining traffic to the web server. The following figure provides an overview of the filtering process.

**Note:**

The figure omits the application of a policy to incoming traffic. It illustrates a security configuration in which the policy is to process all requests. Also, in this configuration, a signatures object has been configured and associated with the profile, and security checks have been configured in the profile.

Figure 1. A Flowchart of Web App Firewall Filtering

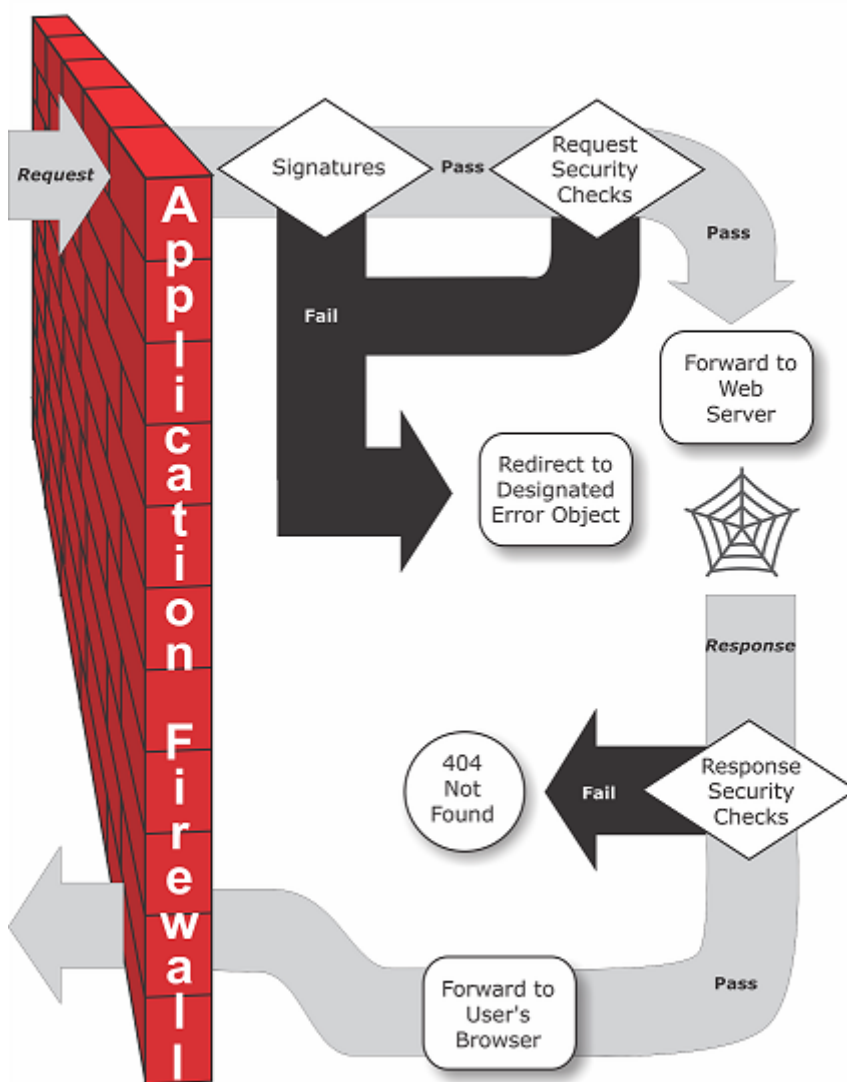

As the figure shows, when a user requests a URL on a protected website, the Web App Firewall first examines the request to ensure that it does not match a signature. If the request matches a signature, the NetScaler Web App Firewall either displays the error object (a webpage located on the Web App Firewall appliance and which you can configure by using the imports feature) or forwards the request to the designated error URL (the error page). Signatures do not require as many resources as do security checks, so detecting and stopping attacks that are detected by a signature before running any of the security checks reduces the load on the server.

If a request passes signature inspection, the Web App Firewall applies the request security checks that have been enabled. The request security checks verify that the request is appropriate for your website or web service and does not contain material that might pose a threat. For example, security checks examine the request for signs indicating that it might be of an unexpected type, request unexpected content, or contain unexpected and possibly malicious web form data, SQL commands, or scripts. If the request fails a security check, the Web App Firewall either sanitizes the request and then sends

it back to the NetScaler appliance (or NetScaler virtual appliance), or displays the error object. If the request passes the security checks, it is sent back to the NetScaler appliance, which completes any other processing and forwards the request to the protected web server.

When the website or web service sends a response to the user, the Web App Firewall applies the response security checks that have been enabled. The response security checks examine the response for leaks of sensitive private information, signs of website defacement, or other content that must not be present. If the response fails a security check, the Web App Firewall either removes the content that must not be present or blocks the response. If the response passes the security checks, it is sent back to the NetScaler appliance, which forwards it to the user.

### **NetScaler Web App Firewall features**

The basic Web App Firewall features are policies, profiles, and signatures, which provide a hybrid security model as described in [Known Web Attacks](#), [Unknown Web Attacks](#), and [How the Web App Firewall Works](#). Of special note is the learning feature, which observes traffic to your protected applications and recommends appropriate configuration settings for certain security checks.

The imports feature manages files that you upload to the Web App Firewall. These files are then used by the Web App Firewall in various security checks, or when responding to a connection that matches a security check.

You can use the logs, statistics, and reports features to evaluate the performance of the Web App Firewall and identify possible needs for more protections.

### **How NetScaler Web App Firewall modifies application traffic**

The NetScaler Web App Firewall affects the behavior of a web application it protects by modifying the following:

- Cookies
- HTTP Headers
- Forms/Data

### **NetScaler Web App Firewall session cookie**

To maintain the state of the session, NetScaler Web App Firewall generates its own session cookie. This cookie is passed only between the web browser and the NetScaler Web Application Firewall and not to the web server. If a hacker tries to modify the session cookie, Web App Firewall drops the cookie before forwarding the request to the server and treats the request as a new user session. The session cookie is present as long as the web browser is open. When the web browser is closed, the Application

Firewall session cookie becomes invalid. The state of the session maintains the information of the URLs and forms visited by the client.

The configurable Web App Firewall session cookie is `citrix_ns_id`.

Starting from NetScaler build 12.1 54 and 13.0, the cookie consistency is sessionless, and adding the session cookie `citrix_ns_id` generated by the appliance is not enforced. For more information on configuring cookies, see [Engine settings](#).

**NetScaler Web App Firewall cookies** Many web applications generate cookies to track user or session specific information. This information can be user preferences or shopping cart items. A web application cookie can be one of the following two types:

- **Persistent Cookies** - These cookies are stored locally on the computer and used again the next time you visit the site. This type of cookie usually contains information about the user, such as, logon, password, or preferences.
- **Session or Transient Cookies** - These cookies are used only during the session and are destroyed after the session is terminated. This type of cookie contains application state information, such as, shopping cart items or session credentials.

Hackers can attempt to modify or steal application cookies to hijack a user session or masquerade as a user. The Application Firewall prevents such attempts by hashing the application cookies and then adding more cookies with the digital signatures. By tracking the cookies, the Application Firewall ensures that the cookies are not modified or compromised between the client browser and the Application Firewall. The Application Firewall does not modify the application cookies.

The NetScaler Web App Firewall generates the following default cookies to track the application cookies:

- **Persistent Cookies:** `citrix_ns_id_wlf`. Note: wlf stands for will live forever.
- **Session or Transient Cookies:** `citrix_ns_id_wat`. Note: wat stands for will act transiently.

To track the application cookies, the Application Firewall groups the persistent or session application cookies together and then hash and sign all the cookies together. Thus, the Application Firewall generates one `wlf` cookie to track all persistent application cookies and one `wat` cookie to track all application session cookies.

The following table shows the number and types of cookies generated by the Application Firewall based on the cookies generated by the web application:

| Before NetScaler Web App Firewall | To                                              |
|-----------------------------------|-------------------------------------------------|
| One persistent cookie             | Persistent cookie: <code>citix_ns_id_wlf</code> |

| Before NetScaler Web App Firewall                       | To                                                                                                            |
|---------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|
| One transient cookie                                    | Transient cookie: <code>citrix_ns_id_wat</code>                                                               |
| Multiple persistent cookies, Multiple transient cookies | One Persistent cookie: <code>citrix_ns_id_wlf</code> ,<br>One Transient cookie: <code>citrix_ns_id_wat</code> |

NetScaler Web App Firewall allows encrypting the application cookie. Application Firewall also provides an option to proxy the session cookie sent by the application, by storing it with the rest of the Application Firewall session data and not sending it to the client. When a client sends a request to the application that includes an Application Firewall session cookie, Application Firewall inserts the application sent cookie back into the request before sending the request on to the origin application. Application Firewall also allows adding the HTTPOnly and/or Secure flags to cookies.

### How the application firewall affects HTTP headers

Both HTTPs requests and HTTPs responses use headers to send information about one or more HTTPs' message. A header is a series of lines with each line containing a name followed by a colon and a space, and a value. For example, the Host header has the following format:

Host: `www.citrix.com`

Some header fields are used in both request and response headers, while others are appropriate only for either a request or a response. The Application Firewall might add, modify, or delete some headers in one or more HTTPs request or response to maintain the security of the application.

**Request headers dropped by NetScaler Web App Firewall** Many of the request headers related to caching is dropped to view every request within the context of a session. Similarly, if the request includes an encoding header to allow the web server to send compressed responses, the Application Firewall deletes this header so the contents in the uncompressed server response is inspected by the Web App Firewall to prevent any leakage of sensitive data to the client.

The Application Firewall drops the following request headers:

- Range –Used to recover from a failed or partial file transfers.
- If-Range –Allows a client to retrieve a partial object when it contains a part of that object in its cache already (conditional GET).
- If-Modified-Since –If the requested object is not modified since the time specified in this field, an entity is not returned from the server. You get an HTTP 304 not modified error.
- If-None-Match –Allows efficient updates of cached information with a minimum amount of overhead.
- Accept-Encoding –What encoding methods are allowed for a particular object, such as gzip.

**Request header modified by NetScaler Web App Firewall** If a web browser uses the HTTP/1.0 or earlier protocols, the browser continually opens and closes the TCP socket connection after receiving each response. This adds overhead to the web server and prevents maintaining session state. The HTTP/1.1 protocol allows the connection to remain open during the session. The Application Firewall modifies the following request header to use HTTP/1.1 between the Application Firewall and the web server regardless of the protocol used by the web browser:

Connection: keep-alive

**Request headers added by NetScaler Web App Firewall** The Application Firewall acts as a reverse proxy and replaces the original source IP address of the session with the IP address of the Application Firewall. Therefore, all requests logged in the web server log indicate that the requests are sent from the Application Firewall.

**Response header dropped by NetScaler Web App Firewall** The Application Firewall might block or modify content such as removing credit card numbers or stripping comments, and this might result in a mismatch in size. To prevent such a scenario, the Application Firewall drops the following header:

Content-Length –Indicates the size of the message sent to the recipient.

**Response Headers Modified by NetScaler Web App Firewall** Many of the response headers modified by the Application Firewall are related to caching. Caching headers in HTTP(S) responses must be modified to force the web browser to always send a request to the web server for the latest data and not use the local cache. However, some ASP applications use separate plug-ins to display dynamic contents and might require the ability to cache the data temporarily in the browser. To allow temporary caching of data when Advanced Security protections such as FFC, URL closure, or CSRF checks are enabled, Application Firewall adds or modifies the cache-control headers in the server response using the following logic:

- If Server sends Pragma: no-cache, then the Application Firewall does not do any modification.
- If Client Request is HTTP 1.0, then Application Firewall inserts Pragma: no-cache.
- If Client Request is HTTP 1.1 and has Cache-control: no-store, then Application Firewall does not make any modification.
- If Client Request is HTTP 1.1 and Server Response has Cache-Control header with no store or no cache directive, then Application Firewall does not make any modification.
- If Client Request is HTTP 1.1 and Server Response has either No Cache-control Header or Cache-Control header does not have no store or no-cache directive, the Application Firewall completes the following tasks:

1. Inserts Cache-control: max-age=3, must-revalidate,private.
2. Inserts X-Cache-Control-orig = Original value of Cache-Control Header.
3. Deletes Last-Modified header.
4. Replaces Etag.
5. Inserts X-Expires-Orig=Original value of the Expire Header sent by the server.
6. Modifies the Expires Header and sets the expiration date of the webpage to the past, so it is always picked up again.
7. Modifies Accept-Ranges and sets it to none.

To replace temporarily cached data in the client browser when Application Firewall changes the response such as, for StripComments, X-out/Remove SafeObject, xout or remove Credit Card or URL Transform, Application Firewall takes the following actions:

1. Deletes Last-Modified from server before forwarding to client.
2. Replaces Etag with a value determined by Application Firewall.

### **Response headers added by NetScaler Web App Firewall**

- **Transfer-Encoding:** Chunked. This header streams information back to a client without having to know the total length of the response before sending the response. This header is required because the content-length header is removed.
- **Set-Cookie:** The cookies added by the Application Firewall.
- **Xet-Cookie:** If the session is valid and if the response is not expired in cache, you can serve from cache and do not have to send a new cookie because the session is still valid. In such a scenario, the Set-Cookie is changed to Xet-Cookie. For the web browser.

### **How form data is affected**

The Application Firewall protects against attacks that attempt to modify the content of the original form sent by the server. It can also protect against Cross-site Request forgery attacks. The Application Firewall accomplishes by inserting the hidden form tag as\_fid in the page.

Example: `<input type="hidden" name="as_fid" value="VRgWq0I196Jmg/+LOY7C" />`

The hidden field as\_fid is used for field consistency. This field is used by Application Firewall to track all fields of the form including the hidden field name/value pairs and to ensure that none of the fields of the form sent by the server are changed on the client side. The CSRF check also uses this unique form tag as\_fid to ensure that the forms submitted by the user were served to the user in this session and no hacker is attempting to hijack the user session.



**Sessionless form check** Application Firewall also offers an option to protect form data using sessionless field consistency. This is useful for applications where the forms might have large number of dynamic hidden fields that lead to high memory allocation per session by the Application Firewall. The sessionless field consistency check is accomplished by inserting another hidden field as `as_ffc_field` for only POST requests or for both GET and POST requests based on the configured setting. The Application Firewall changes the method GET to POST when it forwards the form to the client. The appliance then reverts the method to GET when submitting it back to the server. The `as_ffc_field` value can be large because it contains the encrypted digest of the form being served. The following is an example of the sessionless form check:

```
1 <input type="hidden" name="as_ffc_field" value="CwAAAVIGLD/
 luRRi1Wu1rbYrFYargEDc05xVAXsEnMP1megXuQfiDTGbwk0fpngndMHqfMbzfAFdjwR+
 T0m1oT
2 +u+Svo9+NuloPhtnbkxGtNe7gB/o8GlxEcK9ZkIIIVv3oIL/
 nIPSRWJljgpWgafzVx7wtugNwnn8/
 GdnhneLCJTaYU7ScnC6LexJDLisI1xsEeONWt8Zm
3 +vJTa3mTebDY6LVyhDpDQfBgI1XLgfLTexAUzSNWHYyloqPruGYfnRPw+
 DIGf6gGwn1BYLEsRHKNbjJBrKp0Jo9JzhEqdtZ1g3bMzEF9PocPvM1Hpvi5T6VB
4 /YFunUFM4f+bD7EAVcugdhovzb71CsSQX5+qcC1B8WjQ==" />
```

**HTML comment stripping** The Application Firewall also offers an option to strip all HTML comments in the responses before sending them to the client. This affects not only forms, but all response pages. The Application Firewall locates and removes any text embedded between “<!--” and “-->” comment tags. The tags remain to indicate that a comment existed in that location of the HTML source code. Any text embedded within any other HTML or JavaScript tags is ignored.

Some applications might not work correctly if they have JavaScript incorrectly embedded within comment tags. A comparison of the page source code before and after the comments were stripped by Application Firewall can help in identifying if any of the stripped comments had the required JavaScript embedded in them.

**Credit card protection** The Application Firewall offers an option to inspect the headers and body of the response and either removes or x-outs the Credit Card numbers before forwarding the response to the client. Currently Application Firewall offers protection for the following major credit cards: American Express, Diners Club, Discover, JCB, MasterCard, and Visa. The x-out action works independent of the Block action.

**Safe object protection** Similar to Credit Card numbers, leakage of other sensitive data can also be prevented by using Application Firewall Safe Object security check to either remove or x-out the sensitive content in the response.

**Cross-site scripting transforms action** When the transform is enabled for cross-site scripting, the Web App Firewall changes "<" into "%26lt;" and ">" into "%26gt;" in the requests. If the checkRequestHeaders setting in the Web App Firewall is enabled, then the Web App Firewall inspects the Request Headers and transforms these characters in Header and cookies also. The transform action does not block or transform values that were originally sent by the server. There is a set of default attributes and tags for cross-site scripting which the Web App Firewall allows. A default list of denied cross-site scripting patterns is also provided. These can be customized by selecting the signatures object and clicking the **Manage SQL/cross-site scripting Patterns dialogue** in the GUI.

**Transforming SQL special characters** Application Firewall has the following default transformation rules for SQL special characters:

| From                          | To | Transformation          |
|-------------------------------|----|-------------------------|
| ' (single quote that is, %27) | ”  | Another single quote    |
| \ (backslash that is %5C)     |    | Another backslash added |
| ;(semicolon that is %3B)      |    | Dropped                 |

When the transformation of special characters is enabled and the checkRequestHeaders is set to ON, then the transformation of special characters happens in Headers and cookies also.

Note: Some request headers such as User-Agent, Accept-Encoding usually contain semicolons and might be impacted by SQL transformation.

### NetScaler Web App Firewall behavior wherein it corrupts the EXPECT header

1. Whenever NetScaler receives an HTTP request with the EXPECT header in it, NetScaler sends the EXPECT: 100 -continue response to client on behalf of the back end server.
2. This behavior is because Application Firewall protections must be run on the entire request before forwarding the request to the server, NetScaler must get the entire request from the client.
3. On receiving a 100 **continue** response, the client sends the remaining portion of request that completes the request.
4. NetScaler then runs all the protections and then forwards the request to the server.
5. Now as NetScaler is forwarding the complete request the EXPECT header that came in the initial request becomes obsolete as a result NetScaler corrupts this header and sends it to the server.
6. Server on receiving the request ignores any header which is corrupted.

## Configuring the Web App Firewall

May 2, 2023

You can configure the NetScaler Web App Firewall (Web App Firewall) by using any of the following methods:

- **Web App Firewall Wizard.** A dialog box consisting of a series of screens that step you through the configuration process.
- **NetScaler Web Interface AppExpert Template.** A AppExpert template (a set of configuration settings) that are designed to provide appropriate protection for websites. This AppExpert template contains appropriate Web App Firewall configuration settings for protecting many websites.
- **NetScaler GUI.** The web-based configuration interface.
- **NetScaler Command Line Interface.** The command line configuration interface.

Citrix recommends that you use the Web App Firewall Wizard. Most users will find it the easiest method to configure the Web App Firewall, and it is designed to prevent mistakes. If you have a new NetScaler or VPX that you will use primarily to protect websites, you may find the Web Interface AppExpert template a better option because it provides a good default configuration, not just for the Web App Firewall, but for the entire appliance. Both the GUI and the command line interface are intended for experienced users, primarily to modify an existing configuration or use advanced options.

### The Web App Firewall Wizard

The Web App Firewall wizard is a dialog box that consists of several screens that prompt you to configure each part of a simple configuration. The Web App Firewall then creates the appropriate configuration elements from the information that you give it. This is the simplest and, for most purposes, the best way to configure the Web App Firewall.

To use the wizard, connect to the GUI with the browser of your choice. When the connection is established, verify that the Web App Firewall is enabled, and then run the Web App Firewall wizard, which prompts you for configuration information. You do not have to provide all of the requested information the first time you use the wizard. Instead, you can accept default settings, perform a few relatively straightforward configuration tasks to enable important features, and then allow the Web App Firewall to collect important information to help you complete the configuration.

For example, when the wizard prompts you to specify a rule for selecting the traffic to be processed, you can accept the default, which selects all traffic. When it presents you with a list of signatures, you can enable the appropriate categories of signatures and turn on the collection of statistics for those signatures. For this initial configuration, you can skip the advanced protections (security checks). The

wizard automatically creates the appropriate policy, signatures object, and profile (collectively, the security configuration), and binds the policy to global. The Web App Firewall then begins filtering connections to your protected websites, logging any connections that match one or more of the signatures that you enabled and collecting statistics about the connections that each signature matches. After the Web App Firewall processes some traffic, you can run the wizard again and examine the logs and statistics to see if any of the signatures that you have enabled are matching legitimate traffic. After determining which signatures are identifying the traffic that you want to block, you can enable blocking for those signatures. If your website or web service is not complex, does not use SQL, and does not have access to sensitive private information, this basic security configuration will probably provide adequate protection.

You may need additional protection if, for example, your website is dynamic. Content that uses scripts may need protection against cross-site scripting attacks. Web content that uses SQL—such as shopping carts, many blogs, and most content management systems—may need protection against SQL injection attacks. Websites and web services that collect sensitive private information such as social security numbers or credit card numbers may require protection against unintentional exposure of that information. Certain types of web-server or XML-server software may require protection from types of attacks tailored to that software. Another consideration is that specific elements of your websites or web services may require different protection than do other elements. Examining the Web App Firewall logs and statistics can help you identify the additional protections that you might need.

After deciding which advanced protections are needed for your websites and web services, you can run the wizard again to configure those protections. Certain security checks require that you enter exceptions (relaxations) to prevent the check from blocking legitimate traffic. You can do so manually, but it is usually easier to enable the adaptive learning feature and allow it to recommend the necessary relaxation. You can use the wizard as many times as necessary to enhance your basic security configuration and/or create additional security configurations.

The wizard automates some tasks that you would have to perform manually if you did not use the wizard. It automatically creates a policy, a signatures object, and a profile, and assigns them the name that you provided when you were prompted for the name of your configuration. The wizard also adds your advanced-protection settings to the profile, binds the signatures object to the profile, associates the profile with the policy, and puts the policy into effect by binding it to Global.

A few tasks cannot be performed in the wizard. You cannot use the wizard to bind a policy to a bind point other than Global. If you want the profile to apply to only a specific part of your configuration, you must manually configure the binding. You cannot configure the engine settings or certain other global configuration options in the wizard. While you can configure any of the advanced protection settings in the wizard, if you want to modify a specific setting in a single security check, it may be easier to do so on the manual configuration screens in the GUI.

For more information on using the Web App Firewall Wizard, see [The Web App Firewall Wizard](#).

## The NetScaler Web Interface AppExpert Template

AppExpert Templates are a different and simpler approach to configuring and managing complex enterprise applications. The AppExpert display in the GUI consists of a table. Applications are listed in the left-most column, with the NetScaler features that are applicable to that application appearing each in its own column to the right. (In the AppExpert interface, those features that are associated with an application are called *application units*.) In the AppExpert interface, you configure the interesting traffic for each application, and turn on rules for compression, caching, rewrite, filtering, responder and the Web App Firewall, instead of having to configure each feature individually.

The Web Interface AppExpert Template contains rules for the following Web App Firewall signatures and security checks:

- **Deny URL check.** Detects connections to content that is known to pose a security risk, or to any other URLs that you designate.
- **Buffer Overflow check.** Detects attempts to cause a buffer overflow on a protected web server.
- **Cookie Consistency check.** Detects malicious modifications to cookies set by a protected website.
- **Form Field Consistency check.** Detects modifications to the structure of a web form on a protected website.
- **CSRF Form Tagging check.** Detects cross-site request forgery attacks.
- **Field Formats check.** Detects inappropriate information uploaded in web forms on a protected website.
- **HTML SQL Injection check.** Detects attempts to inject unauthorized SQL code.
- **HTML Cross-Site Scripting check.** Detects cross-site scripting attacks.

For information on installing and using an AppExpert Template, see [AppExpert Applications and Templates](#).

## The GUI

The GUI is a web-based interface that provides access to all configuration options for the Web App Firewall feature, including advanced configuration and management options that are not available from any other configuration tool or interface. Specifically, many advanced Signatures options can be configured only in the GUI. You can review recommendations generated by the learning feature only in the GUI. You can bind policies to a bind point other than Global only in the GUI.

For a description of the GUI, see [The Web App Firewall Configuration Interfaces](#). For more information on using the GUI to configure the Web App Firewall, see [Manual Configuration By Using the GUI](#).

For instructions on configuring the Web App Firewall by using the GUI, see [Manual Configuration By Using the GUI](#). For information on the citrix-adc GUI, see [The Web App Firewall Configuration Interfaces](#).

## The NetScaler command line interface

The NetScaler command line interface is a modified UNIX shell based on the FreeBSD bash shell. To configure the Web App Firewall from the command line interface, you type commands at the prompt and press the Enter key, just as you do with any other Unix shell. You can configure most parameters and options for the Web App Firewall by using the NetScaler command line. Exceptions are the signatures feature, many of whose options can be configured only by using the GUI or the Web App Firewall wizard, and the learning feature, whose recommendations can only be reviewed in the GUI.

For instructions on configuring the Web App Firewall by using the NetScaler command line, see [Manual Configuration By Using the Command Line Interface](#).

## Enable NetScaler Web App Firewall

January 9, 2024

Before you can create a security configuration, you must enable the NetScaler Web App Firewall feature on the appliance.

### Points to remember

- If you are configuring a dedicated NetScaler Web App Firewall appliance or upgrading an existing appliance, the feature is already enabled. You do not have to perform either of the procedures described here.
- If you have a new NetScaler or VPX, you must enable the NetScaler Web App Firewall feature before you configure it.
- If you are upgrading a NetScaler or VPX from a previous version, you must first enable the NetScaler Web App Firewall feature before you configure it.

#### Note:

If you are upgrading a NetScaler or VPX from a previous version, you might need to update the licenses on your appliance before you enable NetScaler Web App Firewall. Check with your NetScaler representative or reseller to obtain the correct license.

### Enable NetScaler Web App Firewall by using the command interface

At the command prompt, type the following command:

```
enable ns feature AppFW
```

## Enable the Web App Firewall by using the GUI

1. Navigate to **System > Settings**.
2. In the details pane, click **Configure Advanced Features**.
3. In the **Configure Advanced Features** page, select **NetScaler Web App Firewall**.
4. Click **OK**.

## The Web App Firewall wizard

May 2, 2023

Unlike most wizards, the NetScaler Web App Firewall Wizard is designed not just to simplify the initial configuration process, but also to modify previously created configurations and to maintain your Web App Firewall setup. A typical user runs the wizard multiple times, skipping some of the screens each time.

The Web App Firewall Wizard automatically creates profiles, policies, and signatures.

### Opening the wizard

To run the Web App Firewall Wizard, open the GUI and follow these steps:

1. Navigate to **Security > Application Firewall**.
2. In the details pane, under **Getting Started**, click **Application Firewall Wizard**. The wizard opens.

For more information about the GUI, see [The Web App Firewall Configuration Interfaces](#).

### The Wizard screens

The Web App Firewall wizard displays the following screens on a tabular page:

**1. Specify Name:** on this screen, when creating a new security configuration, specify a meaningful name and the appropriate type (HTML, XML or WEB 2.0) for your profile. The default policy and signatures are auto-generated by using the same name.

Profile Name

The name can begin with a letter, number, or the underscore symbol, and can consist of from 1 to 31 letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), colon (:), and underscore (\_) symbols. Choose a name that makes it easy for others to tell what content your new security configuration protects.

**Note:**

Because the wizard uses this name for both the policy and the profile, it is limited to 31 characters. Manually created policies can have names up to 127 characters in length.

When modifying an existing configuration, you select **Modify Existing Configuration** and then, in the Name drop-down list, select the name of the existing configuration that you want to modify.

**Note:**

Only policies that are bound to global or to a bind point appear in this list; you cannot modify an unbound policy by using the Application Firewall wizard. You must either manually bind it to Global or a bind point, or modify it manually. (For manual modification, in the GUI) **Application Firewall > Policies > Firewall** pane, select the policy and click **Open**.

### Profile Type

You also select a profile type on this screen. The profile type determines the types of advanced protection (security checks) that can be configured. Because certain kinds of content are not vulnerable to certain types of security threats, restricting the list of available checks saves time during configuration. The types of Web App Firewall profiles are:

- Web Application (HTML). Any HTML-based website that does not use XML or Web 2.0 technologies.
- XML Application (XML, SOAP). Any XML-based Web service.
- Web 2.0 Application (HTML, XML, REST). Any Web 2.0 site that combines HTML and XML-based content, such as an ATOM-based site, a blog, an RSS feed, or a wiki.

**Note:** If you are unsure which type of content is used on your website, you can choose Web 2.0 Application to ensure that you protect all types of web application content.

**2. Specify Rule:** on this screen, you specify the policy rule (expression) that defines the traffic the current configuration examines. If you create an initial configuration to protect your websites and web services, you can accept the default value, **true**, which selects all web traffic .

If you want this security configuration to examine, not all HTTP traffic that is routed through the appliance, but specific traffic, you can write a policy rule specifying the traffic that you want it to examine. Rules are written in NetScaler expressions language, which is a fully functional object-oriented programming language.

**Note:** In addition to the default expressions syntax, for backward compatibility the NetScaler operating system supports the NetScaler classic expressions syntax on NetScaler Classic and nCore appliances and virtual appliances. Classic expressions are not supported on NetScaler Cluster appliances and virtual appliances. Current users who want to migrate their existing configurations to the NetScaler cluster must migrate any policies that contain classic expressions to the default expressions syntax.



- For a simple description of using the NetScaler expressions syntax to create Web App Firewall rules, and a list of useful rules, see [Firewall Policies](#).
- For a detailed explanation of how to create policy rules in NetScaler expressions syntax, see [Policies and Expressions](#).

**4. Select Signatures:** on this screen, you select the categories of signatures that you want to use to protect your websites and web services.

This is not a mandatory step, and you can skip it if you want to and go to the **Specify Deep Protections** screen. If the Select Signatures screen is skipped, only a profile and associated policies are created, and the signatures are not created.

You can select **Create New Signature** or **Select Existing Signature**.

If you are creating a new security configuration, the signature categories that you select are enabled, and by default they are recorded in a new signatures object. The new signatures object is assigned the same name that you entered on the Specify name screen as the name of the security configuration.

If you have previously configured signatures objects and want to use one of them as the signatures object associated with the security configuration that you are creating, click **Select Existing Signature** and select a signatures object from the Signatures list.

If you are modifying an existing security configuration, you can click Select Existing Signature and assign a different signatures object to the security configuration.

If you click Create New Signature, you can choose the edit mode as **Simple** or **Advanced**.

#### 1. Specify Signature Protections (Simple mode)

The simple mode allows for easy configuration of the signature, with a preset list of protection definitions for common applications such as IIS (Internet Information Server), PHP and ActiveX. The default categories in Simple mode are:

- CGI. Protection against attacks on websites that use CGI scripts in any language, including PERL scripts, Unix shell scripts, and Python scripts.
- Cold Fusion. Protection against attacks on websites that use the Adobe Systems® ColdFusion® Web development platform.
- FrontPage. Protection against attacks on websites that use the Microsoft® FrontPage® Web development platform.
- PHP. Protection against attacks on websites that use the PHP open-source Web development scripting language.
- Client side. Protection against attacks on client-side tools used to access your protected websites, such as Microsoft Internet Explorer, Mozilla Firefox, the Opera browser, and the Adobe Acrobat Reader.

- Microsoft IIS. Protection against attacks on websites that run the Microsoft Internet Information Server (IIS)
- Miscellaneous. Protection against attacks on other server-side tools, such as Web servers and database servers.

On this screen, you select the actions associated with the signature categories that you selected on the Select Signatures screen. The actions that you can configure are:

- Block
- Log
- Stats

By default the Log and Stats actions are enabled but not the Block action. To configure actions, click **Settings**. You can change the action settings of all the selected categories by using the **Action** drop-down list.

#### 1. Specify Signature Protections (Advanced mode)

The advanced mode allows for more granular control over the signature definitions and provides significantly more information. Use the advanced mode if you want complete control over signature definition.

The contents of this screen are the same as the contents of the Modify Signatures Object dialog box, as described in [Configuring or Modifying a Signatures Object](#). In this screen, you can configure actions either by clicking the **Actions** drop-down list or the actions menu, which appears as a circle with three dots.

**7. Specify Deep Protections:** on this screen, you choose the advanced protections (also called security checks or simply checks) that you want to use to protect your websites and web services. Which checks are available depends on the profile type that you chose on the Specify Name screen. All checks are available for Web 2.0 Application profiles.

For more information, see [Overview of Security Checks](#) and see [Advanced Form Protections Checks](#).

You configure the actions for the advanced protections that you have enabled. The actions that you can configure are:

- Block: blocks connections that match the signature. Disabled by default.
- Log: logs connections that match the signature for later analysis. Enabled by default.
- Stats: maintains statistics, for each signature, that show how many connections it matched and provide certain other information about the types of connections that were blocked. Disabled by default.
- Learn. Observe traffic to this website or web service, and use connections that repeatedly violate this check to generate recommended exceptions to the check, or new rules for the check.

Available only for some checks. For more information about the learning feature see [Configuring and Using the Learning Feature](#), and how learning works and how to configure exceptions (relaxations) or deploy learned rules for a check, see [Manual Configuration By Using the GUI](#).

To configure actions, select the protection by clicking the check box, and then click **Action Settings** to select the required actions. Select other parameters, if required, and then click **OK** to close the Action Settings window.

To view all logs for a specific check, select that check, and then click **Logs** to display the Syslog Viewer, as described in [Web App Firewall Logs](#). If a security check is blocking legitimate access to your protected website or web service, you can create and implement a relaxation for that security check by selecting a log that shows the unwanted blocking, and then clicking **Deploy**.


After you completing specifying Action Settings, click **Finish** to complete the wizard.

Following are four procedures that show how to perform specific types of configuration by using the Web App Firewall wizard.

### Create a new configuration

Follow these steps to create a new firewall configuration and signature objects, by using the Application Firewall wizard.

1. Navigate to **Security > Application Firewall**.
2. In the details pane, under **Getting Started**, click **\*\*Application Firewall**. The wizard opens.

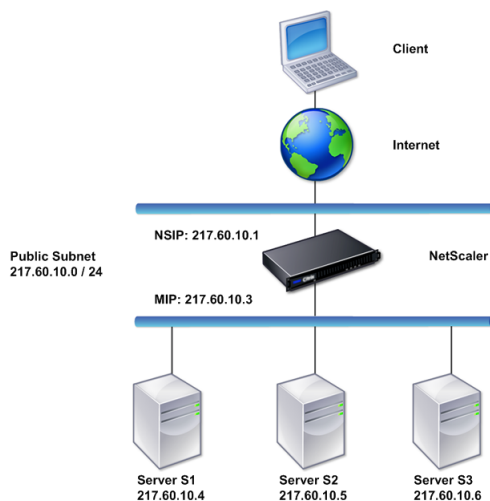

3. On the **Specify Name** screen, select **\*\*Create New Configuration**.
4. In the **Name** field, type a name, and then click **Next**.

5. In the **Specify Rule** screen, click **Next** again.
6. In the **Select Signatures** screen, select **Create New Signature** and **Simple** as the edit mode, and then click **Next**.
7. In the **Specify Signature Protections** screen, configure the required settings. For more information about which signatures to consider for blocking and how to determine when you can safely enable blocking for a signature, see [Signatures](#).
8. In the **Specify Deep Protections** screen configure the required actions and parameters in **Action Settings**.
9. When you complete, click **Finish** to close the Application Firewall wizard.

### Modify an existing configuration

Follow these steps to modify an existing configuration and existing signature categories.

1. Navigate to **Security > Application Firewall**.
2. In the details pane, under **Getting Started**, click **Application Firewall Wizard**. The wizard opens.
3. On the **Specify Name** screen, select Modify Existing Configuration and, in the **Name** drop-down list, choose the security configuration that you created during new configuration, and then click **Next**.
4. In the **Specify Rule** screen, click Next to keep the default value “true.”If you want to modify the rule, follow the steps described in [Configure a Custom Policy Expression](#).
5. In the **Select Signatures** screen, click **Select Existing Signature**. From the **Existing Signature** drop-down list, select the appropriate option, and then click **Next**. The advanced signature protection screen appears.  
**Note:** If you select an existing signature, the default edit mode for signature protected is advanced.
6. In the Specify Signature Protections screen, configure the required settings and click **Next**. For more information about which signatures to consider for blocking and how to determine when you can safely enable blocking for a signature, see [Signatures](#).
7. In the **Specify Deep Protections** screen, configure the settings and click **Next**.
8. After you complete, click **Finish** to close the **Web App Firewall Wizard**.

### Create a new configuration without signatures

Follow these steps to use the Application Firewall Wizard to skip the Select Signatures screen and create a new configuration with just the profile and the associated policies but without any signatures.

1. Navigate to **Security > Application Firewall**.

2. In the details pane, under **Getting Started**, click **Application Firewall Wizard**. The wizard opens.
3. On the **Specify Name** screen, select **Create New Configuration**.
4. In the **Name** field, type a name, and then click **Next**.
5. In the **Specify Rule** screen, click **Next** again.
6. In the **Select Signatures** screen, click **Skip**.
7. In the **Specify Deep Protections** screen configure the required actions and parameters in **Action Settings**.
8. When you complete, click **Finish** to close the Application Firewall Wizard.

### Configure a custom policy expression

Follow these steps to use the Application Firewall Wizard to create a specialized security configuration to protect only specific content. In this case, you create a new security configuration instead of modifying the initial configuration. This type of security configuration requires a custom rule, so that the policy applies the configuration to only the selected Web traffic.

1. Navigate to **Security > Application Firewall**.
2. In the details pane, under **Getting Started**, click **Application Firewall Wizard**.
3. On the Specify Name screen, type a name for your new security configuration in the Name text box, select the type of security configuration from the Type drop-down list, and then click **Next**.
4. On the **Specify Rule** screen, enter a rule that matches only that content that you want this web application to protect. Use the **Frequently Used Expressions** drop-down list and the **Expression Editor** to create a custom expression. When you complete, click **Next**.
5. In the **Select Signatures** screen, select the edit mode, and then click **Next**.
6. In the **Specify Signature Protections** screen, configure the required settings.
7. In the **Specify Deep Protections** screen configure the required actions and parameters in **Action Settings**.
8. When you complete, click **Finish** to close the **Application Firewall Wizard**.

### Manual configuration

August 10, 2021

If you want to bind a profile to a bind point other than Global, you must manually configure the binding. Also, certain security checks require that you either manually enter the necessary exceptions or enable the learning feature to generate the exceptions that your websites and Web services need. Some of these tasks cannot be performed by using the Web App Firewall wizard.

If you are familiar with how the Web App Firewall works and prefer manual configuration, you can manually configure a signatures object and a profile, associate the signatures object with the profile, create a policy with a rule that matches the web traffic that you want to configure, and associate the policy with the profile. You then bind the policy to Global, or to a bind point, to put it into effect, and you have created a complete security configuration.

For manual configuration, you can use the GUI (a graphical interface) or the command line. Citrix recommends that you use the GUI. Not all configuration tasks can be performed at the command line. Certain tasks, such as enabling signatures and reviewing learned data, must be done in the GUI. Most other tasks are easier to perform in the GUI.

## Replicating configuration

When you use the GUI (GUI) or the command line interface (CLI) to manually configure the Web App Firewall, the configuration is saved in the `/nsconfig/ns.conf` file. You can use the commands in that file to replicate the configuration on another appliance. You can cut and paste the commands into the CLI one by one, or you can save multiple commands in a text file in the `/var/tmp` folder and run them as a batch file. Following is an example of running a batch file containing commands copied from the `/nsconfig/ns.conf` file of a different appliance:

```
> batch -f /var/tmp/appfw_add.txt
```

### Warning:

Import commands are not saved in the `ns.conf` file. Before running commands from the `ns.conf` file to replicate the configuration on another appliance, you must import all the objects used in the configuration (for example, signatures, error page, WSDL, and Schema) to the appliance on which you replicate the configuration. The `add` command to add a Web App Firewall profile saved in an `ns.conf` file might include the name of an imported object, but such a command might fail when run on another appliance if the referenced object does not exist on that appliance.

For more information on import or export details for replicating configuration, see [Signature export](#), and [Common import export](#) topics.

## Manual configuration by using the NetScaler GUI

February 9, 2024

If you need to manually configure the Web App Firewall feature, Citrix recommends you to use the NetScaler GUI procedure.

## To create and configure signatures object

Before you can configure the signatures, you must create a signatures object from the appropriate default signatures object template. Assign the copy a new name, and then configure the copy. You cannot configure or modify the default signatures objects directly. The following procedure provides basic instructions for configuring a signatures object. For more detailed instructions, see [Manually Configuring the Signatures Feature](#).

1. Navigate to **Security > NetScaler Web App Firewall > Signatures**.
2. In the details pane, select the signatures object that you want to use as a template, and then click **Add**.

Your choices are:

- **Default Signatures.** Contains the signatures rules, the SQL injection rules, and the cross-site scripting rules.
  - **XPath Injection.** Contains all of the items in the Default Signatures, and in addition, contains the XPath injection rules.
3. In the **Add Signatures Object** dialog box, type a name for your new signatures object, click **OK**, and then click **Close**. The name can begin with a letter, number, or the underscore symbol, and can consist of from one to 31 letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), and underscore (\_) symbols.
  4. Select the signatures object that you created, and then click **Open**.
  5. In the **Modify Signatures Object** dialog box, set the **Display Filter Criteria** options at the left to display the filter items that you want to configure.  
  
As you modify these options, the results that you specify are displayed in the Filtered Results window at the right. For more information about the categories of signatures, see [Signatures](#).
  6. In the **Filtered Results** area, configure the settings for a signature by selecting and clearing the appropriate check boxes.
  7. When finished, finished, click **Close**.

## To create a Web App Firewall profile by using the GUI

Creating a Web App Firewall profile requires that you specify only a few configuration details.

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, click **Add**.

3. In the **Create Web App Firewall** Profile dialog box, type a name for your profile.

The name can begin with a letter, number, or the underscore symbol, and can consist of from one to 31 letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), colon (:), and underscore (\_) symbols.

4. Choose the profile type from the drop-down list.
5. Click **Create**, and then click **Close**.

### To configure a Web App Firewall profile by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select the profile that you want to configure, and then click **Edit**.
3. In the **Configure Web App Firewall Profile** dialog box, on the **Security Checks** tab, configure the security checks.

- To enable or disable an action for a check, in the list, select or clear the check box for that action.
- To configure other parameters for those checks that have them, in the list, click the blue chevron to the far right of that check. In the dialog box that appears, configure the parameters. These vary from check to check.

You can also select a check and, at the bottom of the dialog box, click **Open** to display the **Configure Relaxation** dialog box or **Configure Rule** dialog box for that check. These dialog boxes also vary from check to check. Most of them include a **Checks** tab and a **General** tab. If the check supports relaxations or user-defined rules, the **Checks** tab includes an **Add** button, which opens yet another dialog box, in which you can specify a relaxation or rule for the check. (A relaxation is a rule for exempting specified traffic from the check.) If relaxations have already been configured, you can select one and click **Open** to modify it.

- To review learned exceptions or rules for a check, select the check, and then click **Learned Violations**. In the **Manage Learned Rules** dialog box, select each learned exception or rule in turn.
  - To edit the exception or rule, and then add it to the list, click **Edit & Deploy**.
  - To accept the exception or rule without modification, click **Deploy**.
  - To remove the exception or rule from the list, click **Skip**.
- To refresh the list of exceptions or rules to be reviewed, click **Refresh**.
- To open the **Learning Visualizer** and use it to review learned rules, click **Visualizer**.
- To review the log entries for connections that matched a check, select the check, and then click **Logs**. You can use this information to determine which checks are matching attacks



so that you can enable blocking for those checks. You can also use this information to determine which checks are matching legitimate traffic, so that you can configure an appropriate exemption to allow those legitimate connections. For more information about the logs, see [Logs, Statistics, and Reports](#).

- To completely disable a check, in the list, clear all of the check boxes to the right of that check.

4. On the **Settings** tab, configure the profile settings.

- To associate the profile with the set of signatures that you previously created and configured, under **Common Settings**, choose that set of signatures in the Signatures drop-down list.

**Note:**

You may must use the scroll bar on the right of the dialog box to scroll down to display the Common Settings section.

- To configure an HTML or XML Error Object, select the object from the appropriate drop-down list.

**Note:**

You must first upload the error object that you want to use in the Import pane.

- To configure the default XML Content Type, type the content type string directly into the Default Request and Default Response text boxes, or click Manage Allowed Content Types to manage the list of allowed content types.

5. If you want to use the learning feature, click Learning, and configure the learning settings for the profile. For more information, see [Configure and Learning feature](#).

6. Click **OK** to save your changes and return to the Profiles pane.

## Configuring a Web App Firewall rule or relaxation

You configure two different types of information in this dialog box, depending upon which security check you are configuring. In most cases, you configure an exception (or relaxation) to the security check. If you are configuring the Deny URL check or the Field Formats check, you configure an addition (or rule). The process for either of these is the same.

### To configure a relaxation rule by using the NetScaler GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.

2. In the **Profiles** pane, select the profile you want to configure, and then click **Edit**.
3. In the **Configure Web App Firewall Profile** page, click **Relaxation Rule** from **Advanced Settings** section. The **Relaxation Rule** section contains the complete list of Web App Firewall relaxation rules.
4. Click a security rule that you want to configure, and then click **Edit**.
5. The URL Relaxation Rules page contains a list of actions and that you can configure for this rule and a list of existing relaxations or rules. The list might be empty if you have not either manually added any relaxations or approved any relaxations that were recommended by the learning engine. Beneath the list is a row of buttons that allow you to add, modify, delete, enable, or disable the relaxations on the list.
6. To add or modify a relaxation or a rule, do one of the following:
  - To add a new relaxation, click **Add**.
  - To modify an existing relaxation, select the relaxation that you want to modify, and then click **Open**.

The **Start URL Relaxation Rule** page is displayed. Except for the title, these dialog boxes are identical.

7. Fill in the dialog box as described below. The dialog boxes for each check are different. The list below covers all elements that might appear in any dialog box.
  - **Enabled check box**—Select to place this relaxation or rule in active use; clear to deactivate it.
  - **Attachment Content Type**—The Content-Type attribute of an XML attachment. In the text area, enter a regular expression that matches the Content-Type attribute of the XML attachments to allow.
  - **Action URL**—In the text area, enter a PCRE-format regular expression that defines the URL to which data entered into the web form is delivered.
  - **Cookie**—In the text area, enter a PCRE-format regular expression that defines the cookie.
  - **Field Name**—A web form field name element may be labeled Field Name, Form Field, or another similar name. In the text area, enter a PCRE-format regular expression that defines the name of the form field.
  - **From Origin URL**—In the text area, enter a PCRE-format regular expression that defines the URL that hosts the web form.
  - **From Action URL**—In the text area, enter a PCRE-format regular expression that defines the URL to which data entered into the web form is delivered.

- **Name**—An XML element or attribute name. In the text area, enter a PCRE-format regular expression that defines the name of the element or attribute.
- **URL**—A URL element may be labeled Action URL, Deny URL, Form Action URL, Form Origin URL, Start URL, or simply URL. In the text area, enter a PCRE-format regular expression that defines the URL.
- **Format**—The format section contains multiple settings that include list boxes and text boxes. Any of the following can appear:
  - **Type**—Select a field type in the Type drop-down list. To add a new field type definition, click Manage—
  - **Minimum Length**—Type a positive integer that represents the minimum length in characters if you want to force users to fill in this field. Default: 0 (Allows field to be left blank.)
  - **Maximum length**—To limit the length of data in this field, type a positive integer that represents the maximum length in characters. Default: 65535
- **Location**—Choose the element of the request that your relaxation applies to from the drop-down list. For HTML security checks, the choices are:
  - FORMFIELD—Form fields in web forms.
  - HEADER—Request headers.
  - COOKIE—Set-Cookie headers.

For XML security checks, the choices are:

- ELEMENT—XML element.
  - ATTRIBUTE—XML attribute.
- **Maximum Attachment Size**—The maximum size in bytes allowed for an XML attachment.
  - **Comments**—In the text area, type a comment. Optional.

**Note:** For any element that requires a regular expression, you can type the regular expression, use the Regex Tokens menu to insert regular expression elements and symbols directly into the text box, or click **Regex Editor** to open the **Add Regular Expression** dialog box, and use it to construct the expression.

8. To remove a relaxation or rule, select it, and then click **Delete**.
9. To enable a relaxation or rule, select it, and then click **Enable**.
10. To disable a relaxation or rule, select it, and then click **Disable**.
11. To configure the settings and relationships of all existing relaxations in an integrated interactive graphic display, click **Visualizer**, and use the display tools.

**Note:**

The **Visualizer** button does not appear on all check relaxation dialog boxes.

12. To review learned rules for this check, click Learning and perform the steps in [To configure and use the Learning feature](#)
13. Click **OK**.

**To configure the Learned Rules by using the NetScaler GUI**

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the **Profiles** pane, select the profile, and then click **Edit**.
3. In the **NetScaler Web App Firewall Profile** page, click **Learned Rules** from **Advanced Settings**. In the **Learned Rules** section you can see a list of security checks that are available in the current profile and that support the learning feature.
4. To configure the learning thresholds, select a security check, and click **Settings**.
5. In the **Dynamic Profiling and Learning Rules Settings** page, you can set the settings. For more information, see [Dynamic profile settings](#)
  - **Minimum number threshold.** Depending on which security check's learning settings you are configuring, the minimum number threshold might refer to the minimum number of total user sessions that must be observed, the minimum number of requests that must be observed, or the minimum number of times a specific form field must be observed, before a learned relaxation is generated. Default: 1
  - **Percentage of times threshold.** Depending on which security check's learning settings you are configuring, the percentage of times threshold might refer to the percentage of total observed user sessions that violated the security check, the percentage of requests, or the percentage of times a form field matched a particular field type, before a learned relaxation is generated. Default: 0
6. To remove all learned data and reset the learning feature, so that it must start its observations again from the beginning, select **Remove All Learned Data** action.

**Note:**

This button removes only learned recommendations that have not been reviewed and either approved or skipped. It does not remove learned relaxations that have been accepted and deployed.

7. To restrict the learning engine to traffic from a specific set of IPs, click **Trusted Learning Clients**, and add the IP addresses that you want to use to the list.

- a) To add an IP address or IP address range to the Trusted Learning Clients list, click **Add**.
  - b) In the **AppFirewall Profile to Trusted Client Binding** page, click **Add**.
  - c) Select the **Enabled** check box to enable the feature.
  - d) In Trusted Learning Client\*\* box, type the IP address or an IP address range in CIDR format.
  - e) In the **Comments** text area, type a comment that describes this IP address or range.
  - f) Click **Create** and **Close**.
8. To modify an existing IP address or range, click the IP address or range, and then click **Edit**. Except for the name, the dialog box that appears is identical to the Add Trusted Learning Clients dialog box.
  9. To disable or enable an IP address or range, but leave it on the list, click the IP address or range, and then click **Disable** or **Enable**, as appropriate.
  10. To remove an IP address or range completely, click the IP address or range, and then click **Delete**.
  11. Click **Close** to return to the **NetScaler Web App Firewall Profile** page.

### To create a NetScaler Web App Firewall policy by using the NetScaler GUI

1. Navigate to **Security > NetScaler Web App Firewall > Policies > Firewall**.
2. In the **Policies** page, click **NetScaler Web App Firewall Policy** link.
3. In the NetScaler Web App Firewall Policies page, click **Add**.
4. In the Create NetScaler Web App Firewall Policy page, set the following parameters.
  - a) Name. The name can begin with a letter, number, or the underscore symbol, and can consist of from one to 128 letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), colon (:), and underscore (\_) symbols.
  - b) Profile. Select the profile that you want to associate with this policy from the Profile drop-down list. You can create a profile to associate with your policy by clicking New, and you can modify an existing profile by clicking **Modify**.
  - c) Expression. In the Expression text area, create a rule for your policy.
  - d) Log Action. Add a log action or you can modify an existing log action.
  - e) Comments. A brief description about the policy.
5. Click **Create** or **OK**, and then click **Close**.

### To create or configure a Web App Firewall rule (expression)

The policy rule, also called the *expression*, defines the web traffic that the Web App Firewall filters by using the profile associated with the policy. Like other NetScaler policy rules (or *expressions*), Web App

Firewall rules use NetScaler expressions syntax. This syntax is powerful, flexible, and extensible. It is too complex to describe completely in this set of instructions. You can use the following procedure to create a simple firewall policy rule, or you can read it as an overview of the policy creation process.

1. If you have not already done so, navigate to the appropriate location in the Web App Firewall wizard or the NetScaler GUI to create your policy rule:
  - If you are configuring a policy in the Web App Firewall wizard, in the navigation pane, click **NetScaler Web App Firewall Wizard**, then in the details pane click **NetScaler Web App Firewall Wizard**, and then navigate to the **Specify Rule** tab page.
  - In the **Specify Rule** page, choose the prefix for your expression from the drop-down list. Your choices are:
    - **HTTP**. The HTTP protocol. Choose this if you want to examine some aspect of the request that pertains to the HTTP protocol.
    - **SYS**. One or more protected websites. Choose this if you want to examine some aspect of the request that pertains to the recipient of the request.
    - **CLIENT**. The computer that sent the request. Choose this if you want to examine some aspect of the sender of the request.
    - **SERVER**. The computer to which the request was sent. Choose this if you want to examine some aspect of the recipient of the request.

After you choose a prefix, the Web App Firewall displays a two-part prompt window that displays the possible next choices at the top, and a brief explanation of what the selected choice means at the bottom.

2. Choose your next term.

If you chose HTTP as your prefix, your only choice is REQ, which specifies the Request/Response pair. (The Web App Firewall operates on the request and response as a unit instead of on each separately.) If you chose another prefix, your choices are more varied. For help on a specific choice, click that choice once to display information about it in the lower prompt window.

When you have decided which term you want, double-click it to insert it into the Expression window.

3. Type a period after the term you just chose. You are then prompted to choose your next term, as described in the previous step. When a term requires that you type a value, fill in the appropriate value. For example, if you choose HTTP.REQ.HEADER(""), type the header name between the quotation marks.
4. Continue choosing terms from the prompts and filling in any values that are needed, until your expression is finished.

Following are some examples of expressions for specific purposes.

- **Specific web host.** To match traffic from a particular web host:

```
HTTP.REQ.HEADER("Host").EQ("shopping.example.com")
```

For shopping.example.com, substitute the name of the web host that you want to match.

- **Specific web folder or directory.** To match traffic from a particular folder or directory on a Web host:

```
HTTP.REQ.URL.STARTSWITH("https://www.example.com/folder")
```

For www.example.com, substitute the name of the web host. For folder, substitute the folder or path to the content that you want to match. For example, if your shopping cart is in a folder called /solutions/orders, you substitute that string for folder.

- **Specific type of content: GIF images.** To match GIF format images:

```
HTTP.REQ.URL.ENDSWITH(".png")
```

To match other format images, substitute another string in place of .png.

- **Specific type of content: scripts.** To match all CGI scripts located in the CGI-BIN directory:

```
HTTP.REQ.URL.STARTSWITH("https://www.example.com/CGI-BIN")
```

To match all JavaScripts with .js extensions:

```
HTTP.REQ.URL.ENDSWITH(".js")
```

For more information about creating policy expressions, see [Policies and Expressions](#).

**Note:**

If you use the command line to configure a policy, remember to escape any double quotation marks within NetScaler expressions. For example, the following expression is correct if entered in the GUI:

```
HTTP.REQ.HEADER("Host").EQ("shopping.example.com")
```

If entered at the command line, however, you must type this instead:

```
HTTP.REQ.HEADER("Host").EQ("shopping.example.com")
```

**To add a firewall rule (expression) by using the Add Expression dialog box**

The **Add Expression** dialog box (also referred to as the Expression Editor) helps users who are not familiar with the NetScaler expressions language to construct a policy that matches the traffic that they want to filter.

1. If you have not already done so, navigate to the appropriate location in the Web App Firewall wizard or the NetScaler GUI:
  - If you are configuring a policy in the **Web App Firewall** wizard, in the navigation pane, click **Web App Firewall**, then in the details pane click **Web App Firewall Wizard**, and then navigate to the **Specify Rule** screen.
  - If you are configuring a policy manually, in the navigation pane, expand **Web App Firewall**, then **Policies**, and then **Firewall**. In the details pane, to create a policy, click **Add**. To modify an existing policy, select the policy, and then click **Open**.
2. On the **Specify Rule** screen, in the **Create Web App Firewall Profile** dialog box, or in the **Configure Web App Firewall Profile** dialog box, click **Add**.
3. In the **Add Expression** dialog box, in the Construct Expression area, in the first list box, choose one of the following prefixes:
  - **HTTP**. The HTTP protocol. Choose this if you want to examine some aspect of the request that pertains to the HTTP protocol. The default choice.
  - **SYS**. One or more protected websites. Choose this if you want to examine some aspect of the request that pertains to the recipient of the request.
  - **CLIENT**. The computer that sent the request. Choose this if you want to examine some aspect of the sender of the request.
  - **SERVER**. The computer to which the request was sent. Choose this if you want to examine some aspect of the recipient of the request.
4. In the second list box, choose your next term. The available terms differ depending on the choice you made in the previous step, because the dialog box automatically adjusts the list to contain only those terms that are valid for the context. For example, if you selected HTTP in the previous list box, the only choice is REQ, for requests. Because the Web App Firewall treats requests and associated responses as a single unit and filters both, you do not need to specific responses separately. After you choose your second term, a third list box appears to the right of the second. The Help window displays a description of the second term, and the Preview Expression window displays your expression.
5. In the third list box, choose the next term. A new list box appears to the right, and the Help window changes to display a description of the new term. The Preview Expression window updates to display the expression as you have specified it to that point.
6. Continue choosing terms, and when prompted filling in arguments, until your expression is complete. If you make a mistake or want to change your expression after you have already selected a term, you can simply choose another term. The expression is modified, and any arguments or more terms that you added after the term that you modified is cleared.
7. When you have finished constructing your expression, click OK to close the Add Expression dialog box. Your expression is inserted into the Expression text area.



## To bind a Web App Firewall policy by using the NetScaler GUI

1. Do one of the following:
  - Navigate to **Security > Web App Firewall**, and in the details pane, click **application firewall policy manager**.
  - Navigate to **Security > NetScaler Web App Firewall > Policies > Firewall**, and in the “NetScaler Web App Firewall Policies” pane, click **Policy Manager**.
2. In the **Application Firewall Policy Manager** dialog, choose the bind point to which you want to bind the policy from the drop-down list. The choices are:
  - **Override Global.** Policies that are bound to this bind point process all traffic from all interfaces on the NetScaler appliance, and are applied before any other policies.
  - **LB Virtual Server.** Policies that are bound to a load balancing virtual server are applied only to traffic that is processed by that load balancing virtual server, and are applied before any Default Global policies. After selecting LB Virtual Server, you must also select the specific load balancing virtual server to which you want to bind this policy.
  - **CS Virtual Server.** Policies that are bound to a content switching virtual server are applied only to traffic that is processed by that content switching virtual server, and are applied before any Default Global policies. After selecting CS Virtual Server, you must also select the specific content switching virtual server to which you want to bind this policy.
  - **Default Global.** Policies that are bound to this bind point process all traffic from all interfaces on the NetScaler appliance.
  - **Policy Label.** Policies that are bound to a policy label process traffic that the policy label routes to them. The policy label controls the order in which policies are applied to this traffic.
  - **None.** Do not bind the policy to any bind point.
3. Click **Continue**. A list of existing Web App Firewall policies appears.
4. Select the policy you want to bind by clicking it.
5. Make any additional adjustments to the binding.
  - To modify the policy priority, click the field to enable it, and then type a new priority. You can also select **Regenerate Priorities** to renumber the priorities evenly.
  - To modify the policy expression, double-click that field to open the **Configure Web App Firewall Policy** dialog box, where you can edit the policy expression.
  - To set the Goto Expression, double-click field in the **Goto Expression** column heading to display the drop-down list, where you can choose an expression.
  - To set the Invoke option, double-click field in the Invoke column heading to display the drop-down list, where you can choose an expression.
6. Repeat steps 3 through 6 to add any additional Web App Firewall policies you want to globally bind.

7. Click **OK**. A message appears in the status bar, stating that the policy has been successfully bound.

## Manual configuration By using the command line interface

May 2, 2023

### Note:

If you need to manually configure the Web App Firewall feature, Citrix recommends you to use the NetScaler GUI procedure.

You can configure the Web App Firewall features from the **NetScaler** command interface. However, there are important exceptions. You cannot enable signatures from the command interface. There are around 1,000 default signatures in seven categories and the task is too complex for the command interface. You can enable or disable features and configure parameters from the command line, but cannot configure manual relaxations. While you can configure the adaptive learning feature and enable learning from the command line, you cannot review learned relaxations or learned rules and approve or skip them. The command line interface is intended for advanced users who are familiar in using the NetScaler appliance and Web App Firewall.

To manually configure the Web App Firewall by using the NetScaler command line, use a telnet or secure shell client of your choice to log on to the NetScaler command line.

### To create a profile by using the command line interface

At the command prompt, type the following commands:

- `add appfw profile <name> [-defaults ( basic | advanced )]`
- `set appfw profile <name> -type ( HTML | XML | HTML XML )`
- `save ns config`

### Example

The following example adds a profile named pr-basic, with basic defaults, and assigns a profile type of HTML. This is the appropriate initial configuration for a profile to protect an HTML website.

```
1 add appfw profile pr-basic -defaults basic
2 set appfw profile pr-basic -type HTML
3 save ns config
```

## To configure a profile by using the command line interface

At the command prompt, type the following commands:

- `set appfw profile <name> <arg1> [<arg2> ...]` where `<arg1>` represents a parameter and `<arg2>` represents either another parameter or the value to assign to the parameter represented by `<arg1>`. For descriptions of the parameters to use when configuring specific security checks, see [Advanced Protections](#) and its subtopics. For descriptions of the other parameters, see “Parameters for Creating a Profile.”
- `save ns config`

### Example

The following example shows how to configure an HTML profile created with basic defaults to begin protecting a simple HTML-based website. This example turns on logging and maintenance of statistics for most security checks, but enables blocking only for those checks that have low false positive rates and require no special configuration. It also turns on transformation of unsafe HTML and unsafe SQL, which prevents attacks but does not block requests to your websites. With logging and statistics enabled, you can later review the logs to determine whether to enable blocking for a specific security check.

```
1 set appfw profile -startURLAction log stats
2 set appfw profile -denyURLAction block log stats
3 set appfw profile -cookieConsistencyAction log stats
4 set appfw profile -crossSiteScriptingAction log stats
5 set appfw profile -crossSiteScriptingTransformUnsafeHTML ON
6 set appfw profile -fieldConsistencyAction log stats
7 set appfw profile -SQLInjectionAction log stats
8 set appfw profile -SQLInjectionTransformSpecialChars ON
9 set appfw profile -SQLInjectionOnlyCheckFieldsWithSQLChars ON
10 set appfw profile -SQLInjectionParseComments checkall
11 set appfw profile -fieldFormatAction log stats
12 set appfw profile -bufferOverflowAction block log stats
13 set appfw profile -CSRFTagAction log stats
14 save ns config
```

## To create and configure a policy

At the command prompt, type the following commands:

- `add appfw policy <name> <rule> <profile>`
- `save ns config`

## Example

The following example adds a policy named pl-blog, with a rule that intercepts all traffic to or from the host blog.example.com, and associates that policy with the profile pr-blog.

```
1 add appfw policy pl-blog "HTTP.REQ.HOSTNAME.DOMAIN.EQ("blog.example.com")" pr-blog
```

## To bind a Web App Firewall policy

At the command prompt, type the following commands:

- `bind appfw global <policyName> <priority>`
- `save ns config`

## Example

The following example binds the policy named pl-blog and assigns it a priority of 10.

```
1 bind appfw global pl-blog 10
2 save ns config
```

## To configure session limit per PE

At the command prompt, type the following commands:

- `set appfw settings <session limit>`

## Example

The following example configures the session limit per PE.

```
1 > set appfw settings -sessionLimit 500000`
2
3 Done
4
5 Default value:100000 Max value:500000 per PE
```

## Signatures

May 2, 2023

The Web App Firewall signatures provide specific, configurable rules to simplify the task of protecting your websites against known attacks. A signature represents a pattern that is a component of a known attack on an operating system, web server, website, XML-based web service, or other resource. A rich set of preconfigured Web App Firewall built-in or native rules offers an easy to use security solution, applying the power of pattern matching to detect attacks and protect against application vulnerabilities.

You can create your own signatures or use signatures in the built-in templates. The Web App Firewall has two built-in templates:

- **Default Signatures:** This template contains a preconfigured list of over 1,300 signatures, in addition to a complete list of SQL injection keywords, SQL special strings, SQL transform rules, and SQL wildchar characters. It also contains denied patterns for cross-site scripting, and allowed attributes and tags for cross-site scripting. This is a read-only template. You can view the contents, but you cannot add, edit, or delete anything in this template. To use it, you must make a copy. In your own copy, you can enable the signature rules that you want to apply to your traffic, and specify the actions to be taken when the signature rules match the traffic.

The Web App Firewall signatures are derived from the rules published by [Snort](#), which is an open source intrusion prevention system capable of performing real-time traffic analysis to detect various attacks and probes.

- **\*Xpath Injection Patterns:** This template contains a preconfigured set of literal and PCRE keywords and special strings that are used to detect XPath (XML Path Language) injection attacks.

**Blank Signatures:** In addition to making a copy of the built-in \*Default Signatures template, you can use a blank signatures template to create a signature object. The signature object that you create with the blank signatures option does not have any native signature rules, but, just like the \*Default template, it has all the SQL/cross-site scripting built-in entities.

**External-Format Signatures:** The Web App Firewall also supports external format signatures. You can import the third party scan report by using the XSLT files that are supported by the NetScaler Web App Firewall. A set of built-in XSLT files is available for the following scan tools to translate external format files to native format:

- Cenzic
- Deep Security for Web Apps
- IBM AppScan Enterprise
- IBM AppScan Standard.
- Qualys
- Qualys Cloud
- Whitehat
- Hewlett Packard Enterprise WebInspect

- Rapid7 Appspider
- Acunetix

## Security protection for your application

Tighter security increases processing overhead. Signatures provide the following deployment options to help you to optimize the protection of your applications:

- **Negative Security Model:** With the negative security model, you use a rich set of preconfigured signature rules to apply the power of pattern matching to detect attacks and protect against application vulnerabilities. You block only what you don't want and allow the rest. You can add your own signature rules, based on the specific security needs of your applications, to design your own customized security solutions.
- **Hybrid security Model:** In addition to using signatures, you can use positive security checks to create a configuration ideally suited for your applications. Use signatures to block what you don't want, and use positive security checks to enforce what is allowed.

To protect your application by using signatures, you must configure one or more profiles to use your signatures object. In a hybrid security configuration, the SQL injection and cross-site scripting patterns, and the SQL transformation rules, in your signatures object are used not only by the signature rules, but also by the positive security checks configured in the Web App Firewall profile that is using the signatures object.

The Web App Firewall examines the traffic to your protected websites and web services to detect traffic that matches a signature. A match is triggered only when every pattern in the rule matches the traffic. When a match occurs, the specified actions for the rule are invoked. You can display an error page or error object when a request is blocked. Log messages can help you to identify attacks being launched against your application. If you enable statistics, the Web App Firewall maintains data about requests that match a Web App Firewall signature or security check.

If the traffic matches both a signature and a positive security check, the more restrictive of the two actions are enforced. For example, if a request matches a signature rule for which the block action is disabled, but the request also matches an SQL Injection positive security check for which the action is block, the request is blocked. In this case, the signature violation might be logged as `<not blocked >`, although the request is blocked by the SQL injection check.

**Customization:** If necessary, you can add your own rules to a signatures object. You can also customize the SQL/cross-site scripting patterns. The option to add your own signature rules, based on the specific security needs of your applications, gives you the flexibility to design your own customized security solutions. You block only what you don't want and allow the rest. A specific fast-match pattern in a specified location can significantly reduce processing overhead to optimize performance. You can

add, modify, or remove SQL injection and cross-site scripting patterns. Built-in RegEx and expression editors help you configure your patterns and verify their accuracy.

**Auto-update:** You can manually update the signature object to get the latest signature rules, or you can apply the auto-update feature so that the Web App Firewall can automatically update the signatures from the cloud-based Web App Firewall updates service.

**Note:**

If new signature rules are added during auto-update, they are disabled by default. You must periodically review the updated signatures and enable the newly added rules that are pertinent for protecting your applications.

You must configure CORS to host signatures on IIS servers.

Signature auto update feature does not work on the local web server when you access the URL from the NetScaler GUI.

## Getting started

Using Citrix signatures to protect your application is easy and can be accomplished in a few simple steps:

1. Add a signature object.
  - You can use the Wizard that prompts you to create the entire Web App Firewall configuration, including adding the profile and policy, selecting and enabling signatures, and specifying actions for signatures and positive security checks. The signatures object is created automatically.
  - You can create a copy of the signatures object from the \*Default Signatures template, use a blank template to create a signature with your own customized rules, or add an external format signature. Enable the rules and configure the actions that you want to apply.
1. Configure the target Web App Firewall profile to use this signatures object.
2. Send traffic to validate the functionality

## Highlights

- The Default signatures object is a template. It cannot be edited or deleted. To use it, you must create a copy. In your own copy, you can enable the rules and the desired action for each rule as required for your application. To protect the application, you must configure the target profile to use this signature.
- Processing signature patterns has overhead. Try to enable only those signatures that are applicable for protecting your application, rather than enabling all signature rules.

- Every pattern in the rule must match to trigger a signature match.
- You can add your own customized rules to inspect incoming requests to detect various types of attacks, such as SQL injection or cross-site scripting attacks. You can also add rules to inspect the responses to detect and block leakage of sensitive information such as credit card numbers.
- You can make a copy of an existing signature object and tweak it, by adding or editing rules and SQL/cross-site scripting patterns, to protect another application.
- You can use auto-update to download the latest version of the Web App Firewall default rules without need for ongoing monitoring to check for the availability of the new update.
- A signature object can be used by more than one profile. Even after you have configured one or more profiles to use a signature object, you can still enable or disable signatures or change the action settings. You can manually create and modify your own custom signature rules. The changes apply to all the profiles that are currently configured to use this signature object.
- You can configure signatures to detect violations in various types of payloads, such as HTML, XML, JSON, and GWT.
- You can export a configured signatures object and import it to another NetScaler appliance for easy replication of your customized signature rules.

Signatures are patterns that are associated with a known vulnerability. You can use signature protection to identify the traffic that attempts to exploit these vulnerabilities, and take specific actions.

Signatures are organized into categories. You can optimize the performance and reduce the processing overhead by enabling only the rules in the categories that are appropriate for protecting your application.

## Manually configuring the signatures feature

December 4, 2020

To use signatures to protect your websites, you must review the rules, and enable and configure the ones that you want to apply. The rules are disabled by default. Citrix recommends that you enable all rules that are applicable to the type of content that your website uses.

To manually configure the signatures feature, use a browser to connect to the GUI. Then, create a signatures object from a built-in template, an existing signatures object, or by importing a file. Next, configure the new signatures object as explained in [Configuring or Modifying a Signatures Object](#).

## Adding or removing a signature object

May 2, 2023



You can add a new signature object to the Web App Firewall by:

- Copying a built-in template.
- Copying an existing signatures object.
- Importing a signatures object from an external file.

The signature file includes CPU usage, latest applicable year, and severity level details. You can see the CPU usage, latest year, and CVE severity level every time a signature file is modified and uploaded periodically. After observing these values, you can decide to enable or disable the signature on the appliance.

You must use the GUI to copy a template or existing signatures object. You can use either the GUI or the command line to import a signatures object. You can also use either the GUI or the command line to remove a signatures object.

### To create a signatures object from a template

1. Navigate to **Security > NetScaler Web App Firewall > Signatures**.
2. In the details pane, select the signatures object that you want to use as a template.

Your choices are:

- **Default Signatures.** Contains the signatures rules, the SQL injection rules, and the cross-site scripting rules.
- **XPath Injection.** Contains the XPath injection patterns.
- **Any existing signatures object.**

#### Attention:

If you do not choose a signatures type to use as a template, the Web App Firewall prompts you to create signatures from scratch.

3. Click **Add**.
4. In the Add Signatures Object dialog box, type a name for your new signatures object, and then click OK. The name can begin with a letter, number, or the underscore symbol, and can consist of from one to 31 letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), and underscore (\_) symbols.
5. Click **Close**.

### To create a signatures object by importing a file

1. Navigate to **Security > NetScaler Web App Firewall > Signatures**.

2. In the details pane, click **Add**.
3. In the **Add Signatures Object** dialog box, select the format of the signatures you want to import.
  - To import a NetScaler format signatures file, select the **Native Format** tab.
  - To import an external signatures format file, select the **External Format** tab.
4. Choose the file that you want to use to create your signatures object.
  - To import a native NetScaler format signatures file, in the Import section select either Import from Local File or Import from URL, then type or browse to the path or URL to the file.
  - To import a Cenzic, IBM AppScan, Qualys, or Whitehat format file, in the XSLT section select Use Built-in XSLT File, Use Local File, or Reference from URL. Next, if you chose Use Built-in XSLT File, select the appropriate file format from the list. If you chose Use Local File or Reference from URL, then type or browse to the path or URL to the file.
5. Click **Add**, and then click **Close**.

### To create a signatures object by importing a file by using the command line

At the command prompt, type the following commands:

- `import appfw signatures <src> <name> [-xslt <string>] [-comment <string>] [-overwrite] [-merge] [-sha1 <string>]`
- `save ns config`

#### Example #1

The following example creates a signatures object from a file named signatures.xml and assigns it the name MySignatures.

```
1 import appfw signatures local:signatures.xml MySignatures
2 save ns config
```

### To add individual signatures by using CLI

You can select signatures by their IDs or category and then set actions. At the command prompt, run the following command:

```
1 import appfw signature <source> <name> [-sigRuleId | -sigCategory] [Rule
 -IDs | Category name] -Enabled [ON | OFF] [-Action LOG BLOCK]
```

- **Examples to use signature IDs**

The following example enables the signatures by their rule IDs and sets the log and block actions:

```
1 import appfw signature DEFAULT object_name -sigRuleId 1001 9882
 2000 1250 810 -Enabled ON -Action LOG BLOCK
```

The following example adds the signature by its ID without enabling it:

```
1 import appfw signature DEFAULT object_name -sigRuleId 810 -
 Enabled OFF
```

- **Examples to use signature category**

The following example enables the signatures by the `web-misc` category and sets the log and block actions:

```
1 import appfw signature DEFAULT object_name -sigCategory web-misc
 -Enabled ON -Action LOG BLOCK
```

The following example adds the signatures by the `web-misc` category without enabling it:

```
1 import appfw signature DEFAULT object_name -sigCategory web-misc
 -Enabled OFF
```

## To remove a signatures object by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Signatures**.
2. In the details pane, select the signatures object that you want to remove.
3. Click **Remove**.

## To remove a signatures object by using the command line

At the command prompt, type the following commands:

- `rm appfw signatures <name>`
- `save ns config`

## Configuring or modifying a signatures object

January 9, 2024

You configure a signatures object after creating it, or modify an existing signatures object, to enable or disable signature categories or specific signatures, and configure how the Web App Firewall responds when a signature matches a connection.

### To configure or modify a signatures object

1. Navigate to **Security > NetScaler Web App Firewall > Signatures**.
2. In the details pane, select the signatures object that you want to configure, and then click **Open**.
3. In the **Modify Signatures Object** dialog box, set the **Display Filter Criteria** options at the left to display the filter items that you want to configure.

As you modify these options, the results that you requested are displayed in the Filtered Results window at the right.

- To display only selected categories of signatures, check or clear the appropriate signature-category check boxes. From release 13.1 build 48.x, you can use CVE on the left panel to view the vulnerabilities published for the selected year.

The signature categories are:

| Name        | Type of Attack that this Signature Protects Against                   |
|-------------|-----------------------------------------------------------------------|
| cgi         | CGI scripts. Includes Perl and UNIX shell scripts.                    |
| client      | Browsers and other clients.                                           |
| coldfusion  | websites that use the Adobe Systems ColdFusion application server.    |
| frontpage   | websites that use Microsoft's FrontPage server.                       |
| iis         | websites that use the Microsoft Internet Information Server (IIS).    |
| misc        | Miscellaneous attacks.                                                |
| php         | websites that use PHP                                                 |
| web-activex | websites that contain ActiveX controls.                               |
| web-struts  | websites that contain Apache struts, which are java-ee based applets. |
| CVE         | Lists the CVEs that are published for the selected year.              |

- To display only signatures that have specific check actions enabled, select the ON check box for each of those actions, clear the ON check boxes for the other actions, and clear

all of the OFF check boxes. To display only signatures that have a specific check action disabled, select their respective OFF check boxes and clear all of the ON check boxes. To display signatures regardless of whether they have a check action enabled or disabled, select or clear both the ON and the OFF check boxes for that action. The check actions are:

| Criterion | Description                                                                                                                  |
|-----------|------------------------------------------------------------------------------------------------------------------------------|
| Enabled   | The signature is enabled. The Web App Firewall checks only for signatures that are enabled when it processes traffic.        |
| Block     | Connections that match this signature are blocked.                                                                           |
| Log       | A log entry is produced for any connection that matches this signature.                                                      |
| Stats     | The Web App Firewall includes any connection that matches this signature in the statistics that it generates for that check. |

- To further filter the details that are displayed in the result window, use the search bar above the result window and perform the following steps:
  - Select the properties that you want to filter in the search bar.
  - Type the value, and press the enter button.
 It further filters the content that are already displayed in the result window and lists the details based on the entered value.

**Example:** In the following image, web-CGI is selected as a category in the Display Filter Criteria options at the left. The web-CGI signature details are listed in the result window at the right. To further filter the details based on the severity, in the search bar, severity is selected as a property and medium is entered as a value. The web-CGI signature with medium severity are listed in the result window.

Auto Enable New Signatures

Signatures Rules

Show/Hide Toggle All

Navigation: [Left Arrow] [Right Arrow] [Add] [Edit] [Delete] Manage CMD/SQL/XSS Patterns Select Action

Severity: Medium X Click here to search or you can enter X

Page: 1/9, #Rules: 177

| LOCK                     | LOG                                 | STATS                               | ID  | LOGSTRING                                             | CATEGORY | SOURCE | SOURCE-ID | CPU USAGE | YEAR | SEVERITY |
|--------------------------|-------------------------------------|-------------------------------------|-----|-------------------------------------------------------|----------|--------|-----------|-----------|------|----------|
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 803 | WEB-CGI HyperSeek hxx.cgi directory traversal attempt | web-cgi  | Snort  | 803       | MEDIUM    | 2001 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 806 | WEB-CGI yabb directory traversal attempt              | web-cgi  | Snort  | 806       | MEDIUM    | 2001 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 808 | WEB-CGI webdriver access                              | web-cgi  | Snort  | 808       | LOW       | 2001 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 811 | WEB-CGI websitepro path access                        | web-cgi  | Snort  | 811       | LOW       | 2000 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 812 | WEB-CGI webplus version access                        | web-cgi  | Snort  | 812       | MEDIUM    | 2000 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 813 | WEB-CGI webplus directory traversal                   | web-cgi  | Snort  | 813       | MEDIUM    | 2000 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 815 | WEB-CGI websendmail access                            | web-cgi  | Snort  | 815       | LOW       | 1999 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 826 | WEB-CGI htmscript access                              | web-cgi  | Snort  | 826       | LOW       | 1999 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 834 | WEB-CGI rwwshell.pl access                            | web-cgi  | Snort  | 834       | LOW       | 1999 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 835 | WEB-CGI perlshop.cgi access                           | web-cgi  | Snort  | 835       | LOW       | 1999 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 840 | WEB-CGI perlshop.cgi access                           | web-cgi  | Snort  | 840       | LOW       | 2001 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 844 | WEB-CGI args.bat access                               | web-cgi  | Snort  | 844       | LOW       | 2001 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 848 | WEB-CGI view-source directory traversal               | web-cgi  | Snort  | 848       | MEDIUM    | 1999 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 849 | WEB-CGI view-source access                            | web-cgi  | Snort  | 849       | LOW       | 1999 | MEDIUM   |
| <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 851 | WEB-CGI files.pl access                               | web-cgi  | Snort  | 851       | LOW       | 2001 | MEDIUM   |

- To reset all display filter criteria to the default settings and display all signatures, click Show All.

**Note**

The number of items listed in the filtered result window is 20. The pagination is available above the Display Filter Criteria options on the left.

- For information about a specific signature, select the signature, and then click the blue double arrow in the More field. The Signature Rule Vulnerability Detail message box appears. It contains information about the purpose of the signature and provides links to external web-based information about the vulnerability or vulnerabilities that this signature addresses. To access an external link, click the blue double arrow to the left of the description of that link.
- Configure the settings for a signature by selecting the appropriate check boxes.
- If you want to add a local signature rule to the signatures object, or modify an existing local signature rule, see [The Signatures Editor](#).
- If you have no need for SQL injection, cross-site scripting, or Xpath injection patterns, click OK, and then click Close. Otherwise, in the lower left-hand corner of the details pane, click Manage SQL/cross-site scripting Patterns.
- In the Manage SQL/cross-site scripting Patterns dialog box, Filtered Results window, navigate to the pattern category and pattern that you want to configure. For information about the SQL injection patterns, see [HTML SQL Injection Check](#). For information about the cross-site scripting patterns, see [HTML Cross-Site Scripting Check](#).
- To add a new pattern:
  - Select the branch to which you want to add the new pattern.

- b) Click the **Add** button directly below the lower section of the **Filtered Results** window.
  - c) In the Create Signature Item dialog box, fill in the Element text box with the pattern that you want to add. If you are adding a transformation pattern to the transform rules branch, under Elements, fill in the From text box with the pattern that you want to change and the To text box with the pattern to which you want to change the previous pattern.
  - d) Click **OK**.
7. To modify an existing pattern:
- a) In the **Filtered Results** window, select the branch that contains the pattern that you want to modify.
  - b) In the detail window beneath the **Filtered Results** window, select the pattern that you want to modify.
  - c) Click **Modify**.
  - d) In the **Modify Signature Item** dialog box, **Element** text box, modify the pattern. If you are modifying a transformation pattern, you can modify either or both patterns under Elements, in the From and the To text boxes.
  - e) Click **OK**.
8. To remove a pattern, select the pattern that you want to remove, then click the **Remove** button below the details pane beneath the **Filtered Results** window. When prompted, confirm your choice by clicking **Close**.
9. To add the patterns category to the cross-site scripting branch:
- a) Select the branch to which you want to add the patterns category.
  - b) Click the **Add** button directly below the **Filtered Results** window.
 

**Note:** Currently you can add only one category, named patterns, to the cross-site scripting branch, so after you click **Add**, you must accept the default choice, which is patterns.
  - c) Click **OK**.
10. To remove a branch, select that branch, and then click the Remove button directly below the **Filtered Results** window. When prompted, confirm your choice by clicking **OK**.
- Note:** If you remove a default branch, you remove all of the patterns in that branch. Doing so can disable the security checks that use that information.
11. When you are finished modifying the SQL injection, cross-site scripting, and XPath injection patterns, click **OK**, and then click **Close** to return to the **Modify Signatures Object** dialog box.
12. Click **OK** at any point to save your changes, and when you are finished configuring the signatures object, click **Close**.

## Protecting JSON applications using signatures

May 2, 2023

JavaScript Object Notation (JSON) is a text-based open standard derived from the JavaScript scripting language. JSON is preferred for human readable representation of simple data structures and associative arrays, called objects. It serves as an alternative to XML and is primarily used to transmit serialized data structures for communicating with web applications. The JSON files are typically saved with a .json extension.

The JSON payload is typically sent with the MIME type specified as **application/json**. The other “standard” content types for JSON are:

- **application/x-javascript**
- **text/javascript**
- **text/x-javascript**
- **text/x-json**

### Using the NetScaler Web App Firewall signatures to protect JSON applications

To allow JSON requests, the appliance is preconfigured with the JSON content type as shown in the following show-command output:

```
1 > sh appfw jsonContentType
2 1) JSONContenttypevalue: "^application/json$" IsRegex: REGEX
3 Done
```

The NetScaler Web App Firewall processes the post body for the following content-types only:

- **application/x-www-form-urlencoded**
- **multipart/form-data**
- **text/x-gwt-rpc**

The requests that are received with other content-type headers including application/json (or any other allowed content type) are forwarded to the backend after header inspection. The post body in such requests is not inspected for security check violations even when the profile’s security checks such as SQL or cross-site scripting are enabled.

In order to protect JSON applications and detect violations, Web App Firewall signatures can be used. All requests that contain the allowed content-type header are processed by the Web App Firewall for signature match. You can add your own customized signature rules to process JSON payload to perform various security check inspections (for example, cross-site scripting, SQL, and Field Consistency), to detect violations in the headers as well as the post body, and take specified actions.



**Tip**

Unlike the other built-in defaults, the preconfigured JSON content type can be edited or removed by using the CLI or the GUI (GUI). If legitimate requests for JSON applications are getting blocked and triggering content-type violations, check to make sure that the content type value is configured accurately. For additional details regarding how Web App Firewall processes content-type header, see [Content type protection](#)

**To add or remove JSON content-type by using the command line interface**

At the command prompt, type one of the following commands:

```
add appfw jsonContentType ^application/json$ IsRegex REGEX
rm appfw JSONContentType "^application/json$"
```

**To managing JSON content types by using the GUI**

Navigate to **Security > Web App Firewall** and, in the **Settings** section, select **Manage JSON Content Types**.

In the **Configure Web App Firewall JSON Content Type** panel, add, edit, or delete JSON content types to suit the needs of your applications.

**Configuring signature protection to detect attacks in JSON payload**

In addition to a valid JSON content type, you need to configure signatures to specify the pattern(s) that, when detected in a JSON request, indicate a security breach. The specified actions, such as block and log, are taken when an incoming request triggers a match for all the target patterns in the signature rule.

To add a customized signature rule, Citrix recommends that you use the GUI. Navigate to **System > Security > Web App Firewall > Signatures**. Double click the target signature object to access the **Edit Web App Firewall Signatures** panel. Click on the **Add** button to configure the actions, category, log string, rule patterns and so on. Although Web App Firewall inspects all allowed content-type payload for signature match, you can optimize the processing by specifying the JSON expression in the rule. When you **Add** a new rule pattern, select **Expression** in the drop-down options for **Match** and provide the target match expression from your JSON payload to identify the specific requests that need to be inspected. An expression must begin with a **TEXT.** prefix. You can add other rule patterns to specify additional match patterns to identify the attack.

The following example shows a signature rule. If any cross-site script tag is detected in the POST body of the JSON payload that matches the specified XPATH\_JSON expression, a signature match is triggered.

### Example of a signature to detect cross-site scripting in JSON payload

```
1 <SignatureRule actions="log,stats" category="JSON" enabled="ON" id="
 1000001" severity="" source="" type="" version="1">
2
3 <PatternList>
4
5 <RequestPatterns>
6
7 <Pattern>
8
9 <Location area="HTTP_POST_BODY"/>
10
11 <Match type="Expression">TEXT.XPATH_JSON(xpath%/glossary/title%).
 CONTAINS("example glossary")</Match>
12
13 </Pattern>
14
15 <Pattern>
16
17 <Location area="HTTP_METHOD"/>
18
19 <Match type="LITERAL">POST</Match>
20
21 </Pattern>
22
23 <Pattern>
24
25 <Location area="HTTP_POST_BODY"/>
26
27 <Match type="CrossSiteScripting"/>
28
29 </Pattern>
30
31 </RequestPatterns>
32
33 </PatternList>
34
35 <LogString>Cross-site scripting violation detected in json payload</
 LogString>
36
37 <Comment/>
38
39 </SignatureRule>
```

## Example of the payload

The following payload triggers the signature match, because it includes the cross-site scripting tag **<Gotcha!!>**.

```
1 {
2 "glossary": {
3 "title": "example glossary", "GlossDiv": {
4 "title": "S", "GlossList": {
5 "GlossEntry": {
6 "ID": "SGML", "SortAs": "SGML", "GlossTerm": "Standard Generalized
 Markup Language", "Acronym": "SGML", "Abbrev": "ISO 8879:1986", "
 GlossDef": {
7 "para": "A meta-markup language, used to create markup languages **<
 Gotcha!!>** such as DocBook.", "GlossSeeAlso": ["GML", "XML"] }
8 , "GlossSee": "markup" }
9 }
10 }
11 }
12 }
```

## Example of the log message

```
1 Aug 21 12:21:42 <local0.info> 10.217.31.239 08/21/2015:23:21:42 GMT ns
 0-PPE-1 : APPFW APPFW_SIGNATURE_MATCH 1471 0 : 10.217.253.62 990-
 PPE0 NtJnVMNnvPeQJnaUzXYW/GTvAQsA010 prof1 http://10.217.31.212/FFC/
 login_post.php Signature violation rule ID 1000001: cross-site
 scripting violation detected in json payload <not blocked>
```

### Note

If you send the same payload after removing the cross-site script tag (**<Gotcha!!>**), the signature rule match is not triggered.

## Highlights

- To protect JSON payload, use Web App Firewall signatures to detect cross-site scripting, SQL and other violations.
- Verify that the JSON content type is configured on the appliance as the allowed content type.
- Make sure that the content type in the payload matches the configured JSON content type.
- Make sure that all the patterns configured in the signature rule match for the signature violation to be triggered.
- When you add a signature rule, it MUST have at least one Rule pattern to match the Expression in the JSON payload. All the PI expressions in signature rules must start with the prefix TEXT. and must be Boolean.

## Protect application or JSON content-type with SQL and cross-site scripting encoded payload using policies and signatures

NetScaler Web App Firewall can protect application or JSON content type using policies and signatures.

### Inspect application or JSON content type for SQL injection using policies

You must add the following policies and bind it to virtual server globally for supporting SQL injection.

```
add appfw policy sql_i_1 HTTP.REQ.BODY(10000).SET_TEXT_MODE(IGNORECASE)
.SET_TEXT_MODE(URL ENCODED).DECODE_USING_TEXT_MODE.REGEX_MATCH(re
#((\\A)|(?!=[^a-zA-Z0-9_]))(select|insert|delete|update|drop|
create|alter|grant|revoke|commit|rollback|shutdown|union|intersect
|minus|case|decode|where|group|begin|join|exists|distinct|add|modify|
constraint|null|like|exec|execute|char|or|and|sp_sdidebug)((Z)|(?!=[^a
-zA-Z0-9_]))#)APPFW_BLOCK
```

```
add appfw policy sql_i_2 HTTP.REQ.BODY(10000).SET_TEXT_MODE(IGNORECASE)
.SET_TEXT_MODE(URL ENCODED).DECODE_USING_TEXT_MODE.REGEX_MATCH(re
#((\\A)|(?!=[^a-zA-Z0-9_]))(xp_availablemedia|xp_cmdshell|xp_deletemail
|xp_dirtree|xp_dropwebtask|xp_dsninfo|xp_enumsn|xp_enumerrorlogs|
xp_enumgroups|xp_enumqueuedtasks|xp_eventlog|xp_findnextmsg|xp_fixeddrives
|xp_getfiledetails|xp_getnetname|xp_grantlogin|xp_logevent|xp_loginconfig
|xp_logininfo|xp_makewebtask|xp_msver|xp_regread|xp_perfend|xp_perfmonitor
|xp_perfsample|xp_perfstart|xp_readerrorlog|xp_readmail|xp_revokelogin
|xp_runwebtask|xp_schedulersignal|xp_sendmail|xp_servicecontrol
|xp_snmp_getstate|xp_snmp_raisetrap|xp_sprintf|xp_sqlinventory|
xp_sqlregister|xp_sqltrace|xp_sscanf|xp_startmail|xp_stopmail|xp_subdirs
|xp_unc_to_drive)((Z)|(?!=[^a-zA-Z0-9_]))#)APPFW_BLOCK
```

```
add appfw policy sql_i_3 HTTP.REQ.BODY(10000).SET_TEXT_MODE(IGNORECASE)
.SET_TEXT_MODE(URL ENCODED).DECODE_USING_TEXT_MODE.REGEX_MATCH(re
#((\\A)|(?!=[^a-zA-Z0-9_]))(sysobjects|syscolumns|MSysACEs|MSysObjects
|MSysQueries|MSysRelationships)((Z)|(?!=[^a-zA-Z0-9_]))#)APPFW_BLOCK
```

```
add appfw policy sql_i_4 HTTP.REQ.BODY(10000).SET_TEXT_MODE(IGNORECASE)
.SET_TEXT_MODE(URL ENCODED).DECODE_USING_TEXT_MODE.REGEX_MATCH(re
#((\\A)|(?!=[^a-zA-Z0-9_]))(SYS\\.USER_OBJECTS|SYS\\.TAB|SYS\\.USER_TABLES
|SYS\\.USER_VIEWS|SYS\\.ALL_TABLES|SYS\\.USER_TAB_COLUMNS|SYS\\.USER_CONSTRAINTS
|SYS\\.USER_TRIGGERS|SYS\\.USER_CATALOG|SYS\\.ALL_CATALOG|SYS\\.ALL_CONSTRAINTS
```

```
|SYS\.ALL_OBJECTS|SYS\.ALL_TAB_COLUMNS|SYS\.ALL_TAB_PRIVS|SYS\.
ALL_TRIGGERS|SYS\.ALL_USERS|SYS\.ALL_VIEWS|SYS\.USER_ROLE_PRIVS|
SYS\.USER_SYS_PRIVS|SYS\.USER_TAB_PRIVS)((Z)|(?=[^a-zA-Z0-9_]))#)
APPFW_BLOCK
```

### Inspect application or JSON content type using signatures

You can add the following signature rules to the signature object in the application firewall profile to support SQL injection for JSON content-type.

#### Note:

Post body signatures are cpu-intensive.

```
1 <?xml version="1.0" encoding="UTF-8"?>
2 <!-- Copyright 2013-2018 Citrix Systems, Inc. All rights reserved. -->
3 <SignaturesFile schema_version="6" version="0" minor_schema_version="0"
4 >
5 <Signatures>
6 <SignatureRule id="4000000" enabled="ON" actions="log,block"
7 category="sql" source="" severity="" type="" version="1"
8 sourceid="" harmscore="">
9 <PatternList>
10 <RequestPatterns>
11 <Pattern>
12 <Location area="HTTP_POST_BODY"/>
13 <Match type="Expression">TEXT.SET_TEXT_MODE(
14 IGNORECASE).SET_TEXT_MODE(URLENCODED).
15 DECODE_USING_TEXT_MODE.REGEX_MATCH(re#(((\\A
16)|(?!=[^a-zA-Z0-9_])))(select|insert|delete|
17 update|drop|create|alter|grant|revoke|commit
18 |rollback|shutdown|union|intersect|minus|
19 case|decode|where|group|begin|join|exists|
20 distinct|add|modify|constraint|null|like|
21 exec|execute|char|or|and|sp_sdidebug)((
22 Z)|(?!=[^a-zA-Z0-9_]))#</Match>
23 </Pattern>
24 <Pattern type="fastmatch">
25 <Location area="HTTP_METHOD"/>
26 <Match type="LITERAL">T</Match>
27 </Pattern>
28 </RequestPatterns>
29 </PatternList>
30 <LogString>sql Injection</LogString>
31 <Comment/>
32 </SignatureRule>
33 <SignatureRule id="4000001" enabled="ON" actions="log,block"
34 category="sql" source="" severity="" type="" version="1"
35 sourceid="" harmscore="">
36 <PatternList>
```

```

24 <RequestPatterns>
25 <Pattern>
26 <Location area="HTTP_POST_BODY"/>
27 <Match type="Expression">TEXT.SET_TEXT_MODE(
 IGNORECASE).SET_TEXT_MODE(URLENCODED).
 DECODE_USING_TEXT_MODE.REGEX_MATCH(re#((\\A
 |(?<=[^a-zA-Z0-9_]))(xp_availablemedia|
 xp_cmdshell|xp_deletemail|xp_dirtree|
 xp_dropwebtask|xp_dsninfo|xp_enumdsn|
 xp_enumerrorlogs|xp_enumgroups|
 xp_enumqueuedtasks|xp_eventlog|
 xp_findnextmsg|xp_fixeddrives|
 xp_getfiledetails|xp_getnetname|
 xp_grantlogin|xp_logevent|xp_loginconfig|
 xp_logininfo|xp_makewebtask|xp_msver|
 xp_regread|xp_perfend|xp_perfmonitor|
 xp_perfsample|xp_perfstart|xp_readerrorlog|
 xp_readmail|xp_revokelogin|xp_runwebtask|
 xp_schedulersignal|xp_sendmail|
 xp_servicecontrol|xp_snmp_getstate|
 xp_snmp_raisetraps|xp_sprintf|xp_sqlinventory
 |xp_sqlregister|xp_sqltrace|xp_sscanf|
 xp_startmail|xp_stopmail|xp_subdirs|
 xp_unc_to_drive)((
28 Z)|(?=[^a-zA-Z0-9_]))#</Match>
29 </Pattern>
30 <Pattern type="fastmatch">
31 <Location area="HTTP_METHOD"/>
32 <Match type="LITERAL">T</Match>
33 </Pattern>
34 </RequestPatterns>
35 </PatternList>
36 <LogString>sql Injection</LogString>
37 <Comment/>
38 </SignatureRule>
39 <SignatureRule id="4000002" enabled="ON" actions="log,block"
 category="sql" source="" severity="" type="" version="1"
 sourceid="" harmscore="">
40 <PatternList>
41 <RequestPatterns>
42 <Pattern>
43 <Location area="HTTP_POST_BODY"/>
44 <Match type="Expression">TEXT.SET_TEXT_MODE(
 IGNORECASE).SET_TEXT_MODE(URLENCODED).
 DECODE_USING_TEXT_MODE.REGEX_MATCH(re#((\\A
 |(?<=[^a-zA-Z0-9_]))(sysobjects|syscolumns|
 MSysACEs|MSysObjects|MSysQueries|
 MSysRelationships)((
45 Z)|(?=[^a-zA-Z0-9_]))#</Match>
46 </Pattern>
47 <Pattern type="fastmatch">
48 <Location area="HTTP_METHOD"/>
49 <Match type="LITERAL">T</Match>

```

```

50 </Pattern>
51 </RequestPatterns>
52 </PatternList>
53 <LogString>sql Injection</LogString>
54 <Comment/>
55 </SignatureRule>
56 <SignatureRule id="4000003" enabled="ON" actions="log,block"
57 category="sql" source="" severity="" type="" version="1"
58 sourceid="" harmscore="">
59 <PatternList>
60 <RequestPatterns>
61 <Pattern>
62 <Location area="HTTP_POST_BODY"/>
63 <Match type="Expression">TEXT.SET_TEXT_MODE(
64 IGNORECASE).SET_TEXT_MODE(URLENCODED).
65 DECODE_USING_TEXT_MODE.REGEX_MATCH(re#((\\A
66 |(?<=[^a-zA-Z0-9_]))(SYS\\.USER_OBJECTS|SYS\\.
67 TAB|SYS\\.USER_TABLES|SYS\\.USER_VIEWS|SYS\\.
68 ALL_TABLES|SYS\\.USER_TAB_COLUMNS|SYS\\.
69 USER_CONSTRAINTS|SYS\\.USER_TRIGGERS|SYS\\.
70 USER_CATALOG|SYS\\.ALL_CATALOG|SYS\\.
71 ALL_CONSTRAINTS|SYS\\.ALL_OBJECTS|SYS\\.
72 ALL_TAB_COLUMNS|SYS\\.ALL_TAB_PRIVS|SYS\\.
73 ALL_TRIGGERS|SYS\\.ALL_USERS|SYS\\.ALL_VIEWS|
74 SYS\\.USER_ROLE_PRIVS|SYS\\.USER_SYS_PRIVS|SYS
75 \\.USER_TAB_PRIVS)((
76 Z)|(?=[^a-zA-Z0-9_]))#)</Match>
77 </Pattern>
78 <Pattern type="fastmatch">
79 <Location area="HTTP_METHOD"/>
80 <Match type="LITERAL">T</Match>
81 </Pattern>
82 </RequestPatterns>
83 </PatternList>
84 <LogString>sql Injection</LogString>
85 <Comment/>
86 </SignatureRule>
87 </Signatures>
88 </SignaturesFile>

```

## Updating a signature object

May 2, 2023

You must update your signatures objects frequently to ensure that your Web App Firewall is providing protection against current threats. You must regularly update both the default Web App Firewall signatures and any signatures that you import from a supported vulnerability scanning tool.

NetScaler regularly updates the default signatures for the Web App Firewall. You can update the

default signatures manually or automatically. In either case, ask your NetScaler representative or NetScaler reseller for the URL to access the updates. You can enable automatic updates of the NetScaler native format signatures in the “Engine Settings” and “Signature Auto Update Settings” dialog boxes.

Most makers of vulnerability scanning tools regularly update the tools. Most websites also change frequently. You must update your tool and rescan your websites regularly, exporting the resulting signatures to a file and importing them into your Web App Firewall configuration.

**Tip**

When you update the Web App Firewall signatures from the NetScaler command line, you must first update the default signatures, and then issue more update commands to update each custom signatures file that is based on the default signatures. If you do not update the default signatures first, a version mismatch error prevents updating of the custom signatures files.

**Note**

The following applies to merging a third-party signature object with a user-defined signature object with Native rules and user-added rules:

When a version 0 signatures is merged with a new imported file, the resultant signatures remain as version 0.

This means all native (or built-in) rules in the imported file will be ignored after the merge. This is to ensure that the version 0 signatures are maintained as is after a merge.

To include the native rules in the imported file for merge, you must update the existing signatures from version 0 first before the merge. This means you need to abandon the version 0 nature of the existing signatures.

When there is a NetScaler release upgrade, the file “default\_signatures.xml” is added to the new build and the file “updated\_signature.xml” is removed from the older build. After the upgrade, if the signature auto update feature is enabled, the appliance updates the existing signature to the latest version of the build and generates the “updated\_signature.xml” file.

**To update the Web App Firewall signatures from the source by using the command line**

At the command prompt, type the following commands:

- `update appfw signatures <name> [-mergedefault]`
- `save ns config`



## Example

The following example updates the signatures object named MySignatures from the default signatures object, merging new signatures in the default signatures object with the existing signatures. This command does not overwrite any user-created signatures or signatures imported from another source, such as an approved vulnerability scanning tool.

```
1 update appfw signatures MySignatures -mergedefault
2 save ns config
```

## Updating a signatures object from a NetScaler format file

NetScaler regularly updates the signatures for the Web App Firewall. You must regularly update the signatures on your Web App Firewall to ensure that your Web App Firewall is using the most current list. Ask your NetScaler representative or NetScaler reseller for the URL to access the updates.

### To update a signatures object from a NetScaler format file by using the command line

At the command prompt, type the following commands:

- `update appfw signatures <name> [-mergeDefault]`
- `save ns config`

### To update a signatures object from a NetScaler format file by using the GUI

1. Navigate to **Security > Web App Firewall > Signatures**.
2. In the details pane, select the signatures object that you want to update.
3. In the **Action** drop-down list, select **Merge**.
4. In the **Update Signatures Object** dialog box, choose one of the following options.
  - **Import from URL**—Choose this option if you download signature updates from a web URL.
  - **Import from Local File**—Choose this option if you import signature updates from a file on your local hard drive, network hard drive, or other storage device.
5. In the text area, type the URL, or type or browse to the local file.
6. Click **Update**. The update file is imported, and the Update Signatures dialog box changes to a format nearly identical to that of the **Modify Signatures Object** dialog box. The **Update Signatures Object** dialog box displays all branches with new or modified signature rules, SQL injection or cross-site scripting patterns, and XPath injection patterns if there are any.
7. Review and configure the new and modified signatures.
8. When you are finished, click **OK**, and then click **Close**.

## Updating a signatures object from a supported vulnerability scanning tool

### Note:

Before you update a signatures object from a file, you must create the file by exporting signatures from the vulnerability scanning tool.

### To import and update signatures from a vulnerability scanning tool

1. Navigate to **Security > Web App Firewall > Signatures**.
2. In the details pane, select the signatures object that you want to update, and then click **Merge**.
3. In the **Update Signatures Object** dialog box, on the **External Format** tab, Import section, choose one of the following options.
  - **Import from URL**—Choose this option if you download signature updates from a Web URL.
  - **Import from Local File**—Choose this option if you import signature updates from a file on your local or a network hard drive or other storage device.
4. In the text area, type the URL, or browse or type the path to the local file.
5. In the XSLT section, choose one of the following options.
  - **Use Built-in XSLT File**—Choose this option if you want to use a built-in XSLT file.
  - **Use Local XSLT File**—Choose this option to use an XSLT file on your local computer.
  - **Reference XSLT from URL**—Choose this option to import an XSLT file from a web URL.
6. If you chose Use Built-in XSLT File, in the Built-In XSLT drop-down list select the file that you want to use from the following options:
  - **Cenzic.**
  - **Deep\_Security\_for\_Web\_Apps.**
  - **Hewlett\_Packard\_Enterprise\_WebInspect.**
  - **IBM-AppScan-Enterprise.**
  - **IBM-AppScan-Standard.**
  - **Qualys.**
  - **Whitehat.**
7. Click **Update**. The update file is imported, and the Update Signatures dialog box changes to a format nearly identical to that of the Modify Signatures Object dialog box, which is described in [Configuring or Modifying a Signatures Object](#). The **Update Signatures Object** dialog box displays all branches with new or modified signature rules, SQL injection or cross-site scripting patterns, and XPath injection patterns if there are any.
8. Review and configure the new and modified signatures.
9. When you are finished, click **OK**, and then click **Close**.

## Signature auto update

October 3, 2024

The Signature Auto Update functionality in the Web Application Firewall allows the user to get the latest signatures to protect the web application against new vulnerabilities. The auto update feature provides better protection without the need for ongoing manual intervention to get the latest updates.

The signatures are auto updated on an hourly basis and do not require regular check for the availability of the most recent update. Once you enable Signature Auto Update, then the NetScaler appliance connects to the server hosting the signatures to check if a newer version is available.

### Customizable location

The latest Application Firewall signatures are hosted on Amazon which is configured as the default Signature URL to check for the latest update.

However, the user has an option to download these signature mapping files to their internal server. User can then configure a different Signature URL path to download the signature mapping files from a local server. For the auto update feature to work, you might need to configure the DNS server to access the external site.

### Support for Cloud Software Group products against vulnerabilities

You can protect the Cloud Software Group products from future CVEs using a Web App Firewall. To use the feature, you must register NetScaler with the NetScaler Console service. You can enable or disable the signatures based on your requirements. By default, signatures in the range of 400,000-500,000 are enabled for the following profiles:

- ns-aaa-default-appfw-profile
- ns-aaatm-default-appfw-profile
- ns-vpn-default-appfw-profile

The administrators can disable the default signatures by assigning a custom signature object to the above profiles.

### Update signatures

All the user defined signature objects which are created using the appfw default signature object have a version greater than zero. If you enable Signature Auto Update, then all the signatures are updated

automatically.

If the user has imported signatures with the external format such as Cenzic or Qualys, then the signatures are imported with the version as zero. Similarly, if the user has created a signature object using the blank template, then it is created as a zero version signature. These signatures are not automatically updated, because the user might not be interested in the overhead of managing the default signatures that is not used.

However, Web Application Firewall also allows the user the flexibility to manually select these signatures and update them to add the default signature rules to the existing rules. After the signatures are manually updated, the version changes and then the signatures will also get auto updated along with the other signatures.

### Configure the signature auto update

To configure the signature auto update feature using the CLI:

At the command prompt, type:

```
1 set appfw settings SignatureAutoUpdate on
2 set appfw settings SignatureUrl https://s3.amazonaws.com/
 NSAppFwSignatures/SignaturesMapping.xml
```

To configure the signature auto update using the GUI:

1. Navigate to **Security > NetScaler Web App Firewall > Signatures**.
2. Select **Auto Update Settings** from **Action**.
3. Enable the **Signatures Auto Update** option.
4. You can specify a customized path for the signature update URL, if necessary. Click **Reset** to reset to the default `s3.amazonaws.com` server.
5. Click **OK**.

## ← Signatures Auto Update

Schema Version

Please note that DNS must be configured in order for Auto Update to work.

Signatures Auto Update ⓘ

Signatures Update URL\*

### Update signatures manually

To manually update a zero version signature or any other user defined signature, you must first get the latest update for the default signatures and then use this for updating the target user defined signature.

Run the following commands from the CLI to update a signature file:

```
1 update appfw signatures "*Default Signatures"
2 update appfw signatures cenzic -mergedefault
```

**Note:**

`Default Signatures` is case sensitive. `Cenzic` in the preceding command is the name of the signature file that is updated.

### Import default signatures without internet access

It is recommended to configure a proxy server to point to Amazon (AWS) server to get the latest update. However, if the NetScaler appliance does not have an internet connection to the external sites, then

the user can store the updated signature files on a local server. The appliance can then download the signatures from the local server. In this scenario, the user must constantly check the **Amazon site** to get the latest updates. You can download and verify the signature file against the corresponding sha1 file which were created by using the **Citrix public** key to protect against tampering.

To copy the Signatures files to a local server, complete the following procedure:

1. Create a local directory such as `<MySignatures>` on a local server.
2. Open the AWS site.
3. Copy the `SignaturesMapping.xml` file to the `<MySignatures>` folder.

If you open the `SignaturesMapping.xml` file, you can see all the xml files for signatures and their corresponding sha1 files for different supported versions. One such pair is highlighted in the following screenshot:

1. Create a subdirectory `<sig>` in the `<MySignatures>` folder.
2. Copy all pairs of the `*.xml` files listed in the `<file>` tags and the `*.xml.sha1` files listed in the corresponding `<sha1>` tags of the `SignaturesMapping.xml` file to the `<sig>` folder. The following are a few sample files that is copied to the `<sig>` folder:

```
https://s3.amazonaws.com/NSAppFwSignatures/sigs/sig-r10.1b86v3s3.xml
https://s3.amazonaws.com/NSAppFwSignatures/sigs/sig-r10.1b86v3s3.xml.
sha1
https://s3.amazonaws.com/NSAppFwSignatures/sigs/sig-r10.1b0v3s2.xml
https://s3.amazonaws.com/NSAppFwSignatures/sigs/sig-r10.1b0v3s2.xml.
sha1
```

**Note:**

You can give any name to the `<MySignatures>` folder and it can be in any location but the subdirectory `<sig>` must be a subdirectory in the `<MySignatures>` folder where the mapping file is copied. In addition, ensure that as shown in the `SignaturesMapping.xml`, the subdirectory name `<sig>` must have the exact name and is case sensitive. All Signature files and their corresponding sha1 files should be copied under this `<sig>` directory.

After mirroring the contents from the hosted Amazon web server to the local server, change the path to the new local web server to set it as the `SignatureUrl` for auto update. For example, run the following command from the command line interface of the appliance:

```
1 set appfw settings SignatureUrl https://myserver.example.net/
 MySignatures/SignaturesMapping.xml
```

The update operation can take several minutes, depending on the number of signatures to be updated. Allow sufficient time for the update operation to complete.

If you face an error “Error in accessing URL!” while configuring, follow the steps to resolve it.

1. Add the url `https://myserver.example.net` to `/netscaler/ns_gui/admin_ui/php/application/controllers/common/utils.php` so that Content Security Policy (CSP) security does not block the url access. Please note that these settings do not persists in an upgrade. User has to add it again after the upgrade.

```
1 $configuration_view_connect_src = "connect-src 'self' https://app.pendo.io https://s3.amazonaws.com https://myserver.example.net;";
```

1. User must configure the webserver `https://myserver.example.net` such that it responds to the following CORS headers for `https://myserver.example.net/MySignatures/SignaturesMapping.xml`

```
1 Access-Control-Allow-Methods: GET
2 Access-Control-Allow-Origin: *
3 Access-Control-Max-Age: 3000
```

## Guidelines to update signatures

Following guidelines are used when updating signatures:

- The signatures are updated when the Signature update URL has a signature object which has the same or newer version.
- Each Signature Rule is associated with a rule ID and version number. For example: `<SignatureRule id="803"version="16"...>`
- Signature Rule from the incoming Signatures file with the same ID and version number as the existing one is ignored even if it has different patterns or log string.
- Signature Rule with a new ID is added. All the actions and enabled flag are used from the new file.

### Note:

You must review the updated signatures periodically to enable the newly added rules and change other action settings as per the requirements of the application.

- Rules with the same ID but with a newer version number replace the existing one. All the actions and enabled flag from the existing rule is preserved.

### Tip:

When you update the signatures from the CLI, you must first update the default signatures. You must then add update commands to update each custom signature file that is based on the de-


fault signatures. If you do not update the default signatures first, a version mismatch error prevents custom signatures file update.

### Auto-enable new signatures

From release 13.1 build 27.x and later, you can select **Auto Enable New Signatures** to allow new WAF signature default rules to be auto-enabled after an update.

### Auto-enable new signatures using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Signatures**.
2. Select a signature and click **Edit**.
3. Select **Auto Enable New Signatures**.

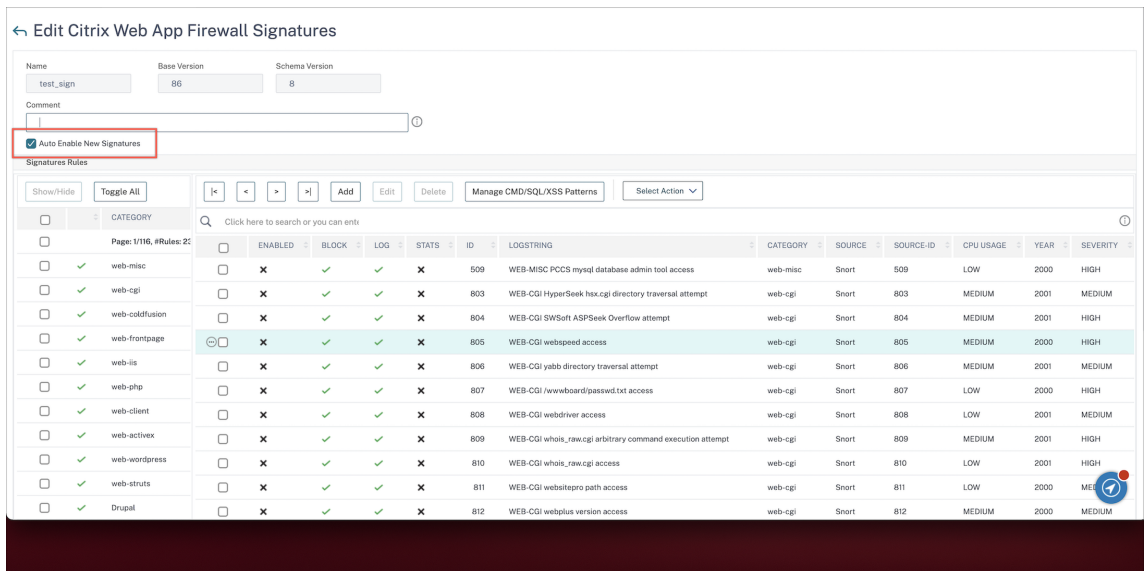

### Auto-enable new signatures using the CLI

At the command prompt, type:

```
import appfw signatures <src> <name> [-xslt <string>] [-comment <string>] [-overwrite] [-merge [-preservedefactions]] [-sha1 <string>] [-VendorType Snort] [-autoEnableNewSignatures (ON | OFF)]
```

#### Example:

```
import signatures http://www.example.com/ns/signatures.xml my-signature -autoEnableNewSignatures ON
```



## Snort rule integration

February 9, 2024

With malicious attacks on web applications, it is important to protect your internal network. Malicious data not only affect your web applications at the interface level but malicious packets also reach the application layer. To overcome such attacks, it is important to configure an intrusion detection and prevention system that examines your internal network.

Snort rules are integrated into the appliance for examine malicious attacks in data packets at the application layer. You can download the snort rules and convert it into WAF signatures rules. The signatures have rule-based configuration that can detect malicious activities such as DOS attacks, buffer overflows, stealth port scans, CGI attacks, SMB probes, and OS Fingerprinting attempts. By integrating Snort rules, you can strengthen your security solution at the interface and at the application level.

### Configure snort rules

The configuration begins by first downloading the Snort rules and then importing it into WAF signature rules. Once you have converted the rules into WAF signatures, the rules can be used as WAF security checks. The snort based signature rules examine the incoming data packet to detect if there are malicious attacks on your network.

A new parameter, “VendorType” is added to the import command to convert Snort rules to WAF signatures.

The parameter “VendorType” is set on SNORT only for Snort rules.

### Download snort rules by using the command interface

You can download the Snort rules as a text file from the below URL:

<https://www.snort.org/downloads/community/snort3-community-rules.tar.gz>

### Import snort rules by using the command interface

After you download, you can import the Snort rules into your appliance.

At the command prompt, type:

```
import appfw signatures <src> <name> [-xslt <string>] [-comment <string>] [-overwrite] [-merge [-preservedefactions]] [-sha1 <string>] [-VendorType Snort]
```

**Example:**

```
import appfw signatures http://www.example.com/ns/signatures.xml sig-
snort -comment "signatures from snort rules" -VendorType snort
```

**Arguments:**

Src. URL (protocol, host, path, and file name) for the location at which to store the imported signatures object.

**Note:**

The import fails if the object to be imported is on an HTTPS server that requires client certificate authentication for access. Mandatory argument of maximum length: 2047

Name. Name to assign to the signatures object on the NetScaler. Mandatory argument of maximum length: 31

Comment. Description of how to preserve information about the signatures object. Maximum Length: 255

overwrite. Overwrite any existing signatures object of the same name.

Merge. Merges existing Signature with new signature rules.

Preservedefactions. Preserves def actions of signature rules.

VendorType. Third-party vendor to generate the WAF signatures. Possible values: Snort.

**Configure snort rules by using the NetScaler GUI**

The GUI configuration for Snort rules is similar to configuring other external web application scanners like Cenzic, Qualys, Whitehat.

Follow the steps below to configure Snort:

1. Navigate to **Configuration > Security > NetScaler Web App Firewall > Signatures**.
2. In the **Signatures** page, click **Add**.
3. In the **Add Signatures** page, set the following parameters to configure Snort rules.
  - a) File format. Select the file format as external.
  - b) Import from. Select the import option as a snort file or URL to enter the URL.
  - c) Snort V3 Vendor. Select the check box to import Snort rules from a file or from a URL.
4. Click **Open**.

## ← Add Signatures

File Format\*

Native
  External
  Blank Signatures

Import From\*

File
  URL

Local File\*

snort.txt

SNORT V3 Vendor

The appliance imports the Snort rules as snort-based WAF signature rules.

As a best practice, you must use filter actions to enable snort rules that you prefer to import as WAF signature rules on the appliance.

snort-based waf rule: 0 7

# New Rules [View New Rules](#)

9

Comment

Signatures Rules

| Category         | Enabled                             | Block                               | Log                                 | Stats                               | ID      | Logstring                           | Action       |
|------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|---------|-------------------------------------|--------------|
| (New Rules Only) |                                     |                                     |                                     |                                     |         |                                     |              |
| SNORT            | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 3000001 | SQL xp_regaddmultistring attempt    | Enable rules |
|                  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 3000002 | SQL xp_regdeletevalue attempt       | Enable rules |
|                  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 3000003 | SQL xp_regenumkeys attempt          | Enable rules |
|                  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 3000004 | SQL xp_regenumvalues attempt        | Enable rules |
|                  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 3000005 | SQL xp_regremovemultistring attempt | Enable rules |
|                  | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 3000006 | SQL xp_servicecontrol attempt       | Enable rules |

- To confirm, click **Yes**.
- The selected rules are enabled on the appliance.
- Click **OK**.

## Exporting a signatures object to a file

May 2, 2023

You export a signatures object to a file so that you can import it to another NetScaler.

### To export a signatures object to a file

1. Navigate to **Security > NetScaler Web App Firewall > Signatures**.
2. In the details pane, select the signatures object that you want to configure.
3. In the **Actions** drop-down list, select **Export**.
4. In the **Export Signatures Object** dialog box, **Local File** text box, type the path and name of the file to which you want to export the signatures object, or use the **Browse** dialog to designate a path and name.
5. Click **OK**.

## Edit signatures to add or modify rules

May 2, 2023

You can edit the user-defined signatures to add or modify a rule. A local signature rule has the same attributes as a default signature rule from Citrix, and it functions in the same way. You enable or disable it, and configure the signature actions for it, just as you do for a default signature.

Add a local rule if you need to protect your websites and services from a known attack that the existing signatures do not match. For example, you might discover a new type of attack and determine its characteristics by examining the logs on your web server, or you might obtain third-party information about a new type of attack.

At the heart of a signature rule are the rule *patterns*, which collectively describe the characteristics of the attack that the rule is designed to match. Each pattern can consist of a simple string, a PCRE-format regular expression, or the built-in SQL injection or cross-site scripting patterns.

You might want to modify a signature rule by adding a new pattern or modifying an existing pattern to match an attack. For example, you might find out about changes to an attack, or you might determine a better pattern by examining the logs on your web server, or from third-party information.

### Add or modify a local signature rule

1. Navigate to **Security > NetScaler Web App Firewall > Signatures**.

2. In the details pane, select the user-defined signatures that you want to edit, and then click **Edit**.
3. In the **Signature Rules** section, click **Add**. The **Signature Rule** pane appears.
4. Configure the actions for a signature by selecting the appropriate check boxes.
  - **Enabled**. Enables the new signature rule. If you do not select this, this new signature rule is added to your configuration, but is inactive.
  - **Block**. Blocks connections that violate this signature rule.
  - **Log**. Logs violations of this signature rule to the NetScaler log.
  - **Stat**. Includes violations of this signature rule in the statistics.
  - **Remove**. Strips information that matches the signature rule from the response. (Applies only to response rules.)
  - **X-Out**. Masks information that matches the signature rule with the letter X. (Applies only to response rules.)
  - **Allow Duplicates**. Allows duplicates of this signature rule in this signatures object.
5. Choose a category for the new signature rule from the **Category** drop-down list.

If you want to create a category, click **Add**. For more information, see [Add a signature rule category](#).
6. In the **LogString** text box, type a brief description of the signature rule to be used in the logs.
7. In the **Comment** text box, type a comment. (Optional)
8. Click **More** to modify the advanced options.
  - a) To strip HTML comments before applying this signature rule, in the Strip Comments drop-down list choose All or Exclude Script Tag.
  - b) To set CSRF Referrer Header checking, in the CSRF Referrer Header checking radio button array, select either the If Present or Always radio button.
  - c) To manually modify the Rule ID assigned to this local signature rule, modify the number in the Rule ID text box. The ID must be a positive integer between 1000000 and 1999999 that has not already been assigned to a local signature rule.
  - d) To assign a version number to the new signature rule, modify the number in the Version Number text box.
  - e) To assign a Source ID, modify the string in the Source ID text box.
  - f) To specify the source, choose Local or Snort from the Source drop-down list, or click the Add icon to the right of the list and add a new source.
  - g) To assign a harm score to violations of this local signature rule, type a number between 1 and 10 in the Harm Score text box.
  - h) To assign a severity rating to this local signature rule, in the Severity drop-down list choose High, Medium, or Low, or click the Add icon to the right of the list and add a new severity rating.

- i) To assign a violation type to this local signature rule, in the Type drop-down list choose Vulnerable or Warning, or click the Add icon to the right of the list and add a new violation type.
9. In **Rule Patterns**, click **Add** to add a pattern. You can also edit the existing patterns to do so click **Edit**.  
  
For more information about adding or editing patterns, see [Signature Rule Patterns](#).
10. Click **OK**.

## Add a signature rule category

Putting signature rules into a category enables you to configure the actions for a group of signatures instead of for each individual signature. You might want to do so for the following reasons:

- **Ease of selection.** For example, assume that all of the signature rules in a particular group protect against attacks on a specific type of web server software or technology. If your protected websites use that software or technology, you want to enable them all. If they do not, you do not want to enable any of them.
- **Ease of initial configuration.** It is easiest to set defaults for a group of signatures as a category, instead of one-by-one. You can then make any changes to the individual signatures as needed.
- **Ease of ongoing configuration.** It is easier to configure signatures if you can display only those that meet specific criteria, such as belonging to a specific category.

## Add a signature rule category

November 3, 2023

Adding signature rules to a category enables you to configure the actions for a group of signatures instead of for each individual signature. You might want to do so for the following reasons:

- **Ease of selection.** For example, assume that all of signature rules in a particular group protect against attacks on a specific type of web server software or technology. If your protected websites use that software or technology, you want to enable them all. If they do not, you do not want to enable any of them.
- **Ease of initial configuration.** It is easiest to set defaults for a group of signatures as a category, instead of one-by-one. You can then make any changes to individual signatures as needed.
- **Ease of ongoing configuration.** It is easier to configure signatures if you can display only those that meet specific criteria, such as belonging to a specific category.

1. Navigate to **Security > Web App Firewall > Signatures**.
2. In the details pane, select that signatures object that you want to configure, and then click **Open**.
3. In the **Modify Signatures Object** dialog box, in the middle of the screen, beneath the **Filtered Results** window, click **Add**.
4. In the **Add Local Signature Rule** dialog box, click the icon to the right of the Category drop-down list.
5. In the **Add Signature Rule Category** dialog box, **New Category** text box, type a name for your new signature category. The name can consist of from one to 64 characters.
6. Click **OK**.

## Add signature rule patterns

May 2, 2023

You can add a pattern or modify an existing pattern to specify a string or expression that characterizes an attack if the signature matches. To detect the patterns an attack exhibits, you can examine the logs on your web server. You can use a tool to observe connection data in real time, or obtain the string or expression from a third-party report about the attack.

### Important

A new pattern that you add to a signature rule is in an AND relationship with the existing patterns. Do not add a pattern to an existing signature rule if you do not want a potential attack to have to match all patterns to match the signature.

Each pattern can consist of a simple string, a PCRE-format regular expression, or the built-in SQL injection or cross-site scripting pattern. Before you attempt to add a pattern that is based on a regular expression, you must make sure that you understand PCRE-format regular expressions. PCRE expressions are complex and powerful. If you do not understand how they work, you can unintentionally create a pattern that matches something that you did not want (a *false positive*) or that fails to match something that you did want (a *false negative*).

### Custom signature pattern for non-default content types

The NetScaler Web App Firewall (WAF) now supports new location to inspect canonicalized content. By default, WAF does not block encoded payload with non-default content types. When these content types are whitelisted, and no configured action is applied, the SQL and cross-site scripting protection check do not filter SQL or cross-site scripting attacks in the encoded payloads. To resolve the issue, a user can create a custom signature rule with this new location (HTTP\_CANON\_POST\_BODY) that

examines the encoded payloads for non-default content-types and if there is any SQL or cross-site scripting attack, it blocks the traffic after canonicalization of the post body.

**Note:**

That support is applicable only for HTTP requests.

If you are not already familiar with PCRE-format regular expressions, you can use the following resources to learn the basics, or for help with some specific issue:

- “Mastering Regular Expressions,” Third Edition. Copyright (c) 2006 by Jeffrey Friedl. O’Reilly Media, ISBN: 9780596528126.
- “Regular Expressions Cookbook”. Copyright (c) 2009 by Jan Goyvaerts and Steven Levithan. O’Reilly Media, ISBN: 9780596520687
- [PCRE Man page/Specification](#)
- [PCRE Man Page/Specification](#)
- [Wikipedia PCRE entry](#)
- [PCRE Mailing List](#)

If you need to encode non-ASCII characters in a PCRE-format regular expression, the NetScaler platform supports the encoding of hexadecimal UTF-8 codes. For more information, see [PCRE Character Encoding Format](#).

## Configure a signature rule pattern

When you are editing a signature, you can add or edit the rule pattern. To add or modify the signature rules, see [Edit signatures to add or modify rules](#).

- **Type** - Select the type of connection that the pattern is intended to match.
  - **Request** - It matches the request elements or features such as injected SQL code, attacks on web forms, cross-site scripts, or inappropriate URLs.
  - **Response** - It matches the response elements or features such as credit card numbers or safe objects.
- **Location** - Select an **Area** to examine with this pattern. The area describes what elements of the HTTP request or response to examine for this pattern. Based on the selected pattern type, the options appear in the **Area** list. depend upon the chosen pattern type.

For the **Request** pattern type, items relevant to HTTP requests appear.

- **HTTP\_ANY**. All parts of the HTTP connection.
- **HTTP\_COOKIE**. All cookies in the HTTP request headers after any cookie transformations are performed.



**Note**

Does not search HTTP response “Set-Cookie:”headers.

- **HTTP\_FORM\_FIELD.** Form fields and their contents, after URL decoding, percent decoding, and removal of excess whitespace. You can use the <Location> tag to further restrict the list of form field names to be searched.
- **HTTP\_HEADER.** The value portions of the HTTP header after any cross-site scripting or URL decoding transformations.
- **HTTP\_METHOD.** The HTTP request method.
- **HTTP\_URL.** The value portion of the URL in the HTTP headers, excluding any query or fragment ports, after conversion to the UTF-\* character set, URL decoding, stripping of whitespace, and conversion of relative URLs to absolute. Does not include HTML entity decoding.
- **HTTP\_ORIGIN\_URL.** The origin URL of a web form.
- **HTTP\_POST\_BODY.** The HTTP post body and the web form data that it contains.
- **HTTP\_RAW\_COOKIE.** All HTTP request cookie, including the “Cookie:”name portion.  
Note: Does not search HTTP response “Set-Cookie:”headers.
- **HTTP\_RAW\_HEADER.** The entire HTTP header, with individual headers separated by line-feed characters (\n) or carriage return/line-feed strings (\r\n).

For the **Response** type, items relevant to HTTP responses appear.

- **HTTP\_RAW\_RESP\_HEADER.** The entire response header, including the name and value parts of the response header after URL transformation has been done, and the complete response status. As with HTTP\_RAW\_HEADER, individual headers are separated by line-feed characters (\n) or carriage return/line-feed strings (\r\n).
- **HTTP\_RAW\_SET\_COOKIE.** The entire Set-Cookie header after any URL transformations have been performed

**Note**

URL transformation can change both the domain and path parts of the Set-Cookie header.

- **HTTP\_RAW\_URL.** The entire request URL before any URL transformations is performed, including any query or fragment parts.
- **HTTP\_RESP\_HEADER.** The value part of the complete response headers after any URL transformations have been performed.

- **HTTP\_RESP\_BODY.** The HTTP response body
- **HTTP\_SET\_COOKIE.** All “Set-Cookie” headers in the HTTP response headers.
- **HTTP\_STATUS\_CODE.** The HTTP status code.
- **HTTP\_STATUS\_MESSAGE.** The HTTP status message.

When you select an option from the **Area** list, it dynamically changes options for the selected area.

- **Any.** Checks field names or URLs.
  - **Literal.** Checks field names or URLs that contain a literal string. After you select Literal, a text box is displayed. Type the literal string that you want in the text box.
  - **PCRE.** Checks field names or URLs that match a PCRE-format regular expression. After you select this choice, the regular expression window is displayed. Type the regular expression in the window. You can use the **Regex Tokens** to insert common regular expression elements at the cursor, or you can click **Regex Editor** to display the Regular Expression Editor dialog box, which provides more assistance in constructing the regular expression that you want.
  - **Expression.** Checks field names or URLs that match a NetScaler default expression.
- **Pattern** - A pattern is a literal string or PCRE-format regular expression that defines the pattern that you want to match. Select the **Match** type from the list.
    - **Literal.** A literal string.
    - **PCRE.** A PCRE-format regular expression.

**Note**

When you choose PCRE, the regular expression tools beneath the Pattern window are enabled. These tools are not useful for most other types of patterns.

- **Expression.** An expression in the NetScaler default expressions language is the same expression language for creating Web App Firewall policies on the NetScaler appliance. Although the NetScaler expressions language was originally developed for policy rules, it is a highly flexible general purpose language that can also be used to define a signature pattern.

When you choose Expression, the NetScaler Expression Editor appears beneath the Pattern window. For more information about the Expression Editor and instructions on how to use it, see [To add a firewall rule \(expression\) by using the Add Expression dialog box](#)

- **SQL Injection.** Directs the Web App Firewall to look for injected SQL in the specified location.

- **CrossSiteScripting**. Directs the Web App Firewall to look for cross-site scripts in the specified location.
- **CommandInjection**. Directs the NetScaler Web App Firewall to look for any injected malicious commands in the specified location.
- **SQLInjectionGrammar**. Directs the NetScaler Web App Firewall to look for injected SQL grammar in the specified location. Especially when commonly used words such as `Select` and `From` are used in an HTTP request.
- **CommandInjectionGrammar**. Directs the NetScaler Web App Firewall to look for injected malicious command grammar in the specified location. Especially, when a commonly used word such as “Exit” is used in an HTTP request.

If you want to configure more settings, specify the following:

- **Offset**. The number of characters to skip over before starting to match on this pattern. You use this field to start examining a string at some point other than the first character.
- **Depth**. How many characters from the starting point to examine for matches. You use this field to limit searches of a large string to a specific number of characters.
- **Min-Length**. The string to be searched must be at least the specified number of bytes in length. Shorter strings are not matched.
- **Max-Length**. The string to be searched must be no longer than the specified number of bytes in length. Longer strings are not matched.
- **Search method**. A check box labeled `fastmatch`. You can enable `fastmatch` only for a literal pattern, to improve performance.

#### Note

Until you click **OK** in the **Signature Rule Pattern** pane, your changes are not saved. Do not close either of these dialog boxes without clicking **OK** unless you want to discard your changes.

## Import and merge rules

November 3, 2023

When using the signature editor to perform an import and merge operation from the GUI, you can now see the new, updated, duplicate, and invalid rules.

The signature editor displays the following four new rows:

1. New Rules
2. Updated Rules

3. Duplicate Rules
4. Invalid Rules

The output of the New Rules Only and Updated Rules Only filters also appears in the Category filter pane of the Edit window in signature editor.

You will need to import the files from GUI to see the corresponding links for New, duplicate, invalid and updated rules.

#### **Procedure to import signature rules:**

1. In the NetScaler web GUI, go to **Configuration > Security > NetScaler Web App Firewall Signatures**. In the Signatures window, click **Add**. Then select **File Format > Native, Import From > URL** and in the URL field, add the above link. If you are unable to access the URL, you can download the [XML data](#).
2. After you click **Open**, the signature file will open and you can see links for new rule and invalid rules.
3. If you import a `3<sup>rd</sup>` party signature rule, you can see 90 new rules and 9 duplicate rules in the imported .xml file. If you are unable to access the URL, you can download the [XML data](#).

## **Signature updates in high availability deployment and build upgrades**

September 21, 2020

The signature update occurs on the primary node. While the signatures are updated on the primary node, in parallel the updated files are simultaneously synchronized with the secondary node.

The Default signature is always updated first and then the rest of the user-defined signatures are updated.

### **Connecting to Amazon AWS**

The default route NSIP is used to connect to the Amazon AWS. If there is a specific use case scenario where SNIP is used, and if there are multiple SNIPs, the first one to receive the ARP response from the hosting site will hold the route.

### **Signature updates during version upgrades**

In case of an upgrade, if the NS has an older base version for the signatures, \*Default signature is automatically updated if a newer signature version is available.

If the schema has changed, the schema version of all the signature objects gets updated when the version is upgraded.

However, for the base version of the user-defined signatures, the behavior is different in release 10.5 versus release 11.0.

In release 10.5, only the default signature was updated and the base version of the rest of the signatures remained unchanged after the build upgrade.

In release 11.0, this behavior has changed. When the appliance is upgraded to install a new build, not only the \*Default signature object but all the other user-defined signatures that currently exist in the appliance are also updated and will have the same version after the build upgrade.

In both 10.5 and 11.0 release builds, if auto-update is configured, the \*Default Signatures as well as all non-zero version signatures get auto-updated to the latest released signature version and will have the same base version.

## Overview of security checks

September 28, 2023

The Web App Firewall advanced protections (security checks) are a set of filters designed to catch complex or unknown attacks on your protected websites and web services. The security checks use heuristics, positive security, and other techniques to detect attacks that may not be detected by signatures alone. You configure the security checks by creating and configuring an Web App Firewall profile, which is a collection of user-defined settings that tell the Web App Firewall which security checks to use and how to handle a request or response that fails a security check. A profile is associated with a signatures object and with a policy to create a security configuration.

The Web App Firewall provides twenty security checks, which differ widely in the types of attacks that they target and how complex they are to configure. The security checks are organized into the following categories:

- **Common security checks.** Checks that apply to any aspect of web security that either does not involve content or is equally applicable to all types of content.
- **HTML security checks.** Checks that examine HTML requests and responses. These checks apply to HTML-based websites and to the HTML portions of Web 2.0 sites, which contain mixed HTML and XML content.
- **XML security checks.** Checks that examine XML requests and responses. These checks apply to XML-based web services and to the XML portions of Web 2.0 sites.

The security checks protect against a wide range of types of attack, including attacks on operation system and web server software vulnerabilities, SQL database vulnerabilities, errors in the design and

coding of websites and web services, and failures to secure sites that host or can access sensitive information.

All security checks have a set of configuration options, the check actions, which control how the Web App Firewall handles a connection that matches a check. Three check actions are available for all security checks. They are:

- **Block.** Block connections that match the signature. Disabled by default.
- **Log.** Log connections that match the signature, for later analysis. Enabled by default.
- **Stats.** Maintain statistics, for each signature, that show how many connections it matched and provide certain other information about the types of connections that were blocked. Disabled by default.

A fourth check action, **Learn**, is available for more than half of the check actions. It observes traffic to a protected website or web service and uses connections that repeatedly violate the security check to generate recommended exceptions (relaxations) to the check, or new rules for the check. In addition to the check actions, certain security checks have parameters that control the rules that the check uses to determine which connections violate that check, or that configure the Web App Firewall's response to connections that violate the check. These parameters are different for each check, and they are described in the documentation for each check.

To configure security checks, you can use the Web App Firewall wizard, as described in [The Web App Firewall Wizard](#), or you can configure the security checks manually, as described in [Manual Configuration By Using the GUI](#). Some tasks, such as manually entering relaxations or rules or reviewing learned data, can be done only by using the GUI, not the command line. Using the wizard is usually best configuration method, but in some cases manual configuration might be easier if you are thoroughly familiar with it and simply want to adjust the configuration for a single security check.

Regardless of which method you use to configure the security checks, each security check requires that certain tasks be performed. Many checks require that you specify exceptions (relaxations) to prevent blocking of legitimate traffic before you enable blocking for that security check. You can do this manually, by observing the log entries after a certain amount of traffic has been filtered and then creating the necessary exceptions. However, it is usually much easier to enable the learning feature and let it observe the traffic and recommend the necessary exceptions.

Web App Firewall uses packet engines (PE) during processing the transactions. Each packet engine has a limit of 100K sessions which is sufficient for most deployment scenarios. However, when Web App Firewall is processing heavy traffic and the session timeout is configured at a higher value, the sessions might get accumulated. If the number of alive Web App Firewall sessions exceed the 100K per PE limit, the Web App Firewall security check violations might not be sent to the Security Insight appliance. Lowering the session timeout to a smaller value, or using sessionless mode for the security checks with sessionless URL closure or sessionless field consistency might help in preventing the sessions getting accumulated. If this is not a viable option in scenarios where transactions might require longer

sessions, upgrading to a higher-end platform with more packet engine is recommended.

Support for cached AppFirewall is added, and the max session setting through the CLI per core is set to 50K sessions.

## **Request and response security checks**

The following are the list of security checks:

### **Request checks**

The following are the request security checks:

- Start URL
- Deny URL
- Cookie Consistency
- Cookie Hijacking
- Buffer Overflow
- Post Body Limit
- Content-type
- Infer Content Type XML Payload
- File Upload Types
- Form Field Consistency
- Field Formats
- CSRF Form Tagging
- HTML Cross-Site Scripting
- HTML SQL Injection
- HTML Command Injection
- Block Keyword - XML
- XML Format
- XML Denial of Service
- XML Cross-Site Scripting
- XML SQL Injection
- XML Attachement
- XML Message Validation
- JSON Denial of Service
- JSON Cross-Site Scripting
- JSON SQL Injection
- JSON Command Injection
- Block Keyword - JSON

## Response checks

The following are the response security checks:

- Credit Card
- Safe Object
- XML SOAP Fault Filtering
- Some of Web Service Interoperability

## Top level protections

May 2, 2023

Four of the Web App Firewall protections are especially effective against common types of Web attacks, and are therefore more commonly used than any of the others. They are:

- **HTML Cross-Site Scripting.** Examines requests and responses for scripts that attempt to access or modify content on a different website than the one on which the script is located. When this check finds such a script, it either renders the script harmless before forwarding the request or response to its destination, or it blocks the connection.
- **HTML SQL Injection.** Examines requests that contain form field data for attempts to inject SQL commands into an SQL database. When this check detects injected SQL code, it either blocks the request or renders the injected SQL code harmless before forwarding the request to the Web server.

**Note:** If both of the following conditions apply to your configuration, you must make certain that your Web App Firewall is correctly configured:

- If you enable the HTML Cross-Site Scripting check or the HTML SQL Injection check (or both), and
- Your protected websites accept file uploads or contain Web forms that can contain large POST body data.

For more information about configuring the Web App Firewall to handle this case, see [Configuring the Application Firewall](#).

- **Buffer Overflow.** Examines requests to detect attempts to cause a buffer overflow on the Web server.
- **Cookie Consistency.** Examines cookies returned with user requests to verify that they match the cookies your Web server set for that user. If a modified cookie is found, it is stripped from the request before the request is forwarded to the Web server.



The Buffer Overflow check is simple; you can usually enable blocking for it immediately. The other three top-level checks are considerably more complex and require configuration before you can safely use them to block traffic. NetScaler strongly recommends that, rather than attempting to configure these checks manually, you enable the learning feature and allow it to generate the necessary exceptions.

## HTML cross-site scripting check

May 9, 2023

The HTML Cross-Site Scripting (cross-site scripting) check examines both the headers and the POST bodies of user requests for possible cross-site scripting attacks. If it finds a cross-site script, it either modifies (*transforms*) the request to render the attack harmless, or blocks the request.

### Note:

The HTML Cross-Site Scripting (cross-site scripting) check works only for content type, content length, and so forth. Also ensure to have the 'checkRequestHeaders' option enabled in your Web Application Firewall profile.

You can prevent misuse of the scripts on your protected websites by using the HTML Cross-Site Scripting scripts that violate the *same origin rule*, which states that scripts must not access or modify content on any server but the server on which they are located. Any script that violates the same origin rule is called a cross-site script, and the practice of using scripts to access or modify content on another server is called cross-site scripting. The reason cross-site scripting is a security issue is that a web server that allows cross-site scripting can be attacked with a script that is not on that web server, but on a different web server, such as one owned and controlled by the attacker.

Unfortunately, many companies have a large installed base of JavaScript-enhanced web content that violates the same origin rule. If you enable the HTML Cross-Site Scripting check on such a site, you have to generate the appropriate exceptions so that the check does not block legitimate activity.

The Web App Firewall offers various action options for implementing HTML Cross-Site Scripting protection. In addition to the **Block, Log, Stats** and **Learn** actions, you also have the option to **Transform cross-site scripts** to render an attack harmless by the entity encoding the script tags in the submitted request. You can configure Check complete URLs for cross-site scripting parameter to specify if you want to inspect not just the query parameters but the entire URL to detect cross-site scripting attack. You can configure the **InspectQueryContentTypes** parameter to inspect the request query portion for the cross-site scripting attack for the specific content-types.

You can deploy relaxations to avoid false positives. The Web App Firewall learning engine can provide recommendations for configuring relaxation rules.

To configure an optimized HTML Cross-Site Scripting protection for your application, configure one of the actions:

- **Block**—If you enable block, the block action is triggered if the cross-site scripting tags are detected in the request.
- **Log**—If you enable the log feature, the HTML Cross-Site Scripting check generates log messages indicating the actions that it takes. If block is disabled, a separate log message is generated for each header or form field in which the cross-site scripting violation was detected. However, only one message is generated when the request is blocked. Similarly, 1 log message per request is generated for the transform operation, even when cross-site scripting tags are transformed in multiple fields. You can monitor the logs to determine whether responses to legitimate requests are getting blocked. A large increase in the number of log messages can indicate attempts to launch an attack.
- **Stats**—If enabled, the stats feature gathers statistics about violations and logs. An unexpected surge in the stats counter might indicate that your application is under attack. If legitimate requests are getting blocked, you might have to revisit the configuration to see if you must configure the new relaxation rules or modify the existing ones.
- **Learn**—If you are not sure which relaxation rules might be ideally suited for your application, you can use the learn feature to generate HTML Cross-Site Scripting rule recommendations based on the learned data. The Web App Firewall learning engine monitors the traffic and provides learning recommendations based on the observed values. To get optimal benefit without compromising performance, you might want to enable the learn option for a short time to get a representative sample of the rules, and then deploy the rules and disable learning.
- **Transform cross-site scripts**—If enabled, the Web App Firewall makes the following changes to requests that match the HTML Cross-Site Scripting check:
  - Left angle bracket (<) to HTML character entity equivalent (&lt;)
  - Right angle bracket (>) to HTML character entity equivalent (&gt;)

This ensures that browsers do not interpret unsafe html tags, such as `<script>`, and thereby run malicious code. If you enable both request-header checking and transformation, any special characters found in request headers are also modified. If the scripts on your protected website contain cross-site scripting features, but your website does not rely upon those scripts to operate correctly, you can safely disable blocking and enable transformation. This configuration ensures that no legitimate web traffic is blocked, while stopping any potential cross-site scripting attacks.

- **Check complete URLs for cross-site scripting.** If checking of complete URLs is enabled, the Web App Firewall examines entire URLs for HTML cross-site scripting attacks instead of checking just the query portions of URLs.
- **Check Request headers.** If Request header checking is enabled, the Web App Firewall examines the headers of requests for HTML cross-site scripting attacks, instead of just URLs. If you use the GUI, you can enable this parameter in the Settings tab of the Web App Firewall profile.

- **InspectQueryContentTypes.** If Request query inspection is configured, the App Firewall examines the query of requests for cross-site scripting attacks for the specific content-types. If you use the GUI, you can configure this parameter in the Settings tab of the App Firewall profile.

**Important:**

As part of the streaming changes, the Web App Firewall processing of the cross-site scripting tags has changed. This change is applicable to 11.0 builds onwards. This change is also pertinent for the enhancement builds of 10.5.e that support request side streaming. In earlier releases, the presence of either open bracket (<), or close bracket (>), or both open and close brackets (<>) was flagged as cross-site scripting Violation. The behavior has changed in the builds that include support for request side streaming. Only the close bracket character (>) is no longer considered as an attack. Requests are blocked even when an open bracket character (<) is present, and is considered as an attack. The Cross-site scripting attack gets flagged.

## Cross-site scripting Fine grained Relaxations

The Web App Firewall gives you an option to exempt a specific form field, header, or Cookie from the cross-site scripting inspection check. You can completely bypass the inspection for one or more of these fields by configuring the relaxation rules.

The Web App Firewall allows you to implement tighter security by fine-tuning the relaxation rules. An application might require the flexibility to allow specific patterns, but configuring a relaxation rule to bypass the security inspection might make the application vulnerable to attacks, because the target field is exempted from inspection for any cross-site scripting attack patterns. Cross-site scripting fine grained relaxation provides the option to allow specific attributes, tags, and patterns. The rest of the attributes, tags, and patterns are blocked. For example, the Web App Firewall currently has a default set of more than 125 denied patterns. Because hackers can use these patterns in Cross-site script attacks, the Web App Firewall flags them as potential threats. You can relax one or more patterns that are considered safe for the specific location. The rest of the potentially dangerous cross-site scripting patterns are still checked for the target location and continue to trigger the security check violations. You now have much tighter control.

The commands used in relaxations have optional parameters for **Value Type** and **Value Expression**. The value type can be left blank or you have an option to select **Tag** or **Attribute** or **Pattern**. If you leave the value type blank, the configured field of the specified URL is exempted from the Cross-Site Scripting check inspection. If you select a value type, you must provide a value expression. You can specify whether the value expression is a regular expression or a literal string. When the input is matched against the allowed and denied list, only the specified expressions configured in the relaxation rules are exempted.

The Web App Firewall has the following cross-site scripting built-in lists:

1. **cross-site scripting Allowed Attributes:** There are 52 defaults allowed attributes, such as, **abbr, accesskey, align, alt, axis, bgcolor, border, cell padding, cell spacing, char, charoff, charset** and so forth
2. **cross-site scripting Allowed Tags:** There are 47 defaults allowed tags, such as, **address, basefont, bgsound, big, blockquote, bg, br, caption, center, cite, dd, del** and so forth
3. **cross-site scripting Denied Patterns:** There are 129 defaults denied patterns, such as, **FSCommand, javascript:, onAbort, onActivate** and so forth

### Warning

Web App Firewall action URLs are regular expressions. When configuring HTML cross-site scripting relaxation rules, you can specify **Name**, and **Value Expression** to be literal or RegEx. Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the rule that you want to add as an exception, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (\*) metacharacter or the wildcard combination, can have results that you do not want, such as blocking access to web content that you did not intend to block or allowing an attack that the HTML Cross-Site Scripting check would otherwise have blocked.

### Points to Consider:

- Value expression is an optional argument. A field name might not have any value expression.
- A field name can be bound to multiple value expressions.
- Value expressions must be assigned a value type. The cross-site scripting value type can be: 1) Tag, 2) Attribute, or 3) Pattern.
- You can have multiple relaxation rules per field name/URL combination
- The form field names and the action URLs are not case sensitive.

### Using the Command Line to Configure the HTML Cross-Site Scripting check

To configure HTML Cross-Site Scripting check actions and other parameters by using the command line

If you use the command-line interface, you can enter the following commands to configure the HTML Cross-Site Scripting Check:

- [set appfw profile](#) topic.
- `<name> -crossSiteScriptingAction ([[block] [learn] [log] [stats]] | [**none**])`
- [\[set appfw profile](#) topic.
- `<name> **-crossSiteScriptingTransformUnsafeHTML** (ON | OFF)`
- [set appfw profile](#) topic.

- `<name> -crossSiteScriptingCheckCompleteURLs (ON | OFF)`
- [set appfw profile](#) topic.
- `' - checkRequestHeaders (ON | OFF)`
- `<name> - CheckRequestQueryNonHtml \ (ON | OFF)`

To configure an HTML Cross-Site Scripting check relaxation rule by using the command line

Use the bind or unbind command to add or delete binding, as follows:

- `bind appfw profile <name> -crossSiteScripting <String> \[isRegex \ (REGEX | NOTREGEX) <formActionURL> \[-location <location>] \[-valueType \ (Tag|Attribute|Pattern) \[<valueExpression>] \[-isValueRegex \ (REGEX | NOTREGEX)]]`
- `unbind appfw profile <name> -crossSiteScripting <String> <formActionURL> \[-location <location>] \[-valueType \ (Tag |Attribute|Pattern) \[<valueExpression>]]`

## Using the GUI to configure the HTML cross-site scripting check

In the GUI, you can configure the HTML Cross-Site Scripting check in the pane for the profile associated with your application.

To configure or modify the HTML Cross-Site Scripting check by using the GUI

1. Navigate to **Application Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Security Checks**.

The security check table displays the currently configured action settings for all the security checks. You have 2 options for configuration:

- a. If you want to enable or disable **Block**, **Log**, **Stats**, and **Learn** actions for the HTML Cross-Site Scripting, you can select or clear check boxes in the table, click **OK**, and then click **Save and Close** to close the **Security Check** pane.
- b. If you want to configure more options for this security check, double-click **HTML Cross-Site Scripting**, or select the row and click **Action Settings**, to display the following options:

**Transform cross-site scripts**—Transform unsafe script tags.

**Check complete URLs for Cross-site scripting**—Instead of checking just the query part of the URL, check the complete URL for cross-site script violations.

After changing any of the above settings, click **OK** to save the changes and return to the Security Checks table. You can proceed to configure other security checks if needed. Click **OK** to save all the changes you have made in the **Security Checks** section, and then click **Save and Close** to close the **Security Check** pane.

To enable or disable the **Check request Header** setting, in the **Advanced Settings** pane, click **Profile Settings**. In **Common Settings**, Select or clear the **Check Request Headers** check box. Click **OK**. You can either use the **X** icon at the top right hand side of the **Profile Settings** pane to close this section or, if you have finished configuring this profile, you can click **Done** to return to the **Application Firewall > Profile**.

To enable or disable the **Check request Query Non HTML** setting, in the **Advanced Settings** pane, click **Profile Settings**. In **Common Settings**, Select or clear the **Check request Query Non HTML** check box. Click **OK**. You can either use the **X** icon at the top right hand side of the **Profile Settings** pane to close this section or, if you have finished configuring this profile, you can click **Done** to return to the **App Firewall > Profile**.

To configure an HTML Cross-Site Scripting relaxation rule by using the GUI

1. Navigate to **Application Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Relaxation Rules**.
3. In the Relaxation Rules table, double-click the **HTML Cross-Site Scripting** entry, or select it and click **Edit**.
4. In the **HTML Cross-Site Scripting Relaxation Rules** dialogue box, perform **Add**, **Edit**, **Delete**, **Enable**, or **Disable** operations for relaxation rules.

#### Note

When you add a new rule, the **Value Expression** field is not displayed unless you select **Tag** or **Attribute** or **Pattern** option in the **Value Type** Field.

To manage HTML Cross-Site Scripting relaxation rules by using the visualizer

For a consolidated view of all the relaxation rules, you can highlight the **HTML Cross-Site Scripting** row in the Relaxation Rules table, and click **Visualizer**. The visualizer for deployed relaxations offers you the option to **Add** a new rule or **Edit** an existing one. You can also **Enable** or **Disable** a group of rules by selecting a node and clicking the corresponding buttons in the relaxation visualizer.

To view or customize the Cross-Site Scripting patterns by using the GUI

You can use the GUI to view or customize the default list of cross-site scripting allowed attributes or allowed tags. You can also view or customize the default list of cross-site scripting denied Patterns.

The default lists are specified in **Application Firewall > Signatures > Default Signatures**. If you do not bind any signature object to your profile, the default cross-site scripting allowed and denied list specified in the Default Signatures object will be used by the profile for the Cross-Site Scripting security check processing. The Tags, Attributes, and Patterns, specified in the default signatures object, are read-only. You cannot edit or modify them. If you want to modify or change these, make a copy of the Default Signatures object to create a User-Defined signature object. Make changes in the allowed or denied lists in the new User-defined signature object and use this signature object in your profile that is processing the traffic for which you want to use these customized allowed and denied lists.

1. To view default cross-site scripting patterns:

a. Navigate to **Application Firewall > Signatures**, select **Default Signatures**, and click **Edit**. Then click **Manage SQL/cross-site scripting Patterns**.

The **Manage SQL/cross-site scripting Paths** table shows the following three rows pertaining to cross-site scripting:

`xss/allowed/attribute`

`xss/allowed/tag`

`xss/denied/pattern`

b. Select a row and click **Manage Elements** to display the corresponding cross-site scripting Elements (Tag, Attribute, Pattern) used by the Web App Firewall **Cross-Site Scripting** check.

1. **To customize cross-site scripting Elements:** You can edit the User-Defined signature object to customize the allowed Tag, allowed Attributes, and denied Patterns. You can add new entries or remove the existing ones.

a. Navigate to **Application Firewall > Signatures**, highlight the target User-defined signature, and click **Edit**. Click **Manage SQL/cross-site scripting Patterns** to display the **Manage SQL/cross-site scripting paths** table.

b. Select the target cross-site scripting row.

i. Click **Manage Elements**, to **Add**, **Edit** or **Remove** the corresponding cross-site scripting element.

ii. Click **Remove** to remove the selected row.

**Warning:**

You must be careful before you remove or modify any default cross-site scripting element, or delete the cross-site scripting path to remove the entire row. The signature rules and the Cross-Site Scripting security check rely on these elements for detecting attacks to protect your applications. Customizing the cross-site scripting Elements can make your application vulnerable to Cross-Site Scripting attacks if the required pattern is removed during editing.

## Learn HTML Cross-Site Scripting (cross-site scripting) violations

With learning enabled, the NetScaler Web App Firewall learning engine monitors the traffic and learns the cross-site scripting URL violations. You can periodically inspect cross-site scripting URL rules and deploy it for false positive scenarios.

**Note:**

In a cluster configuration, all nodes must be of the same version to deploy the cross-site scripting

## URL rules.

As part of the learning configuration, the Web App Firewall offers fine grained HTML Cross-Site Scripting learning. The learning engine makes recommendations regarding the observed Value Type (Tag, Attribute, Pattern) and the corresponding Value expression observed in the input fields. In addition to checking the blocked requests to determine whether the current rule is too restrictive and needs to be relaxed, you can review the rules generated by the learning engine to determine which value type and value expressions are triggering violations and need to be addressed in the relaxation rules.

### **Note:**

The Web App Firewall's learning engine can distinguish only the first 128 bytes of the name. If a form has multiple fields with names that match for the first 128 bytes, the learning engine might not be able to distinguish between them. Similarly, the deployed relaxation rule might inadvertently relax all such fields from HTML Cross-Site Scripting inspection.

### **Tip:**

Cross-site scripting tags which are longer than 12 characters are not learned or logged correctly. If you need a larger tag length for learning, you can add a large non-appearing tag in the **AS\_cross-site scripting\_ALLOWED\_TAGS\_LIST** for length 'x'.

The HTML Cross-Site Scripting learning process reduces false positives in cross-site scripting attacks. With learning enabled, you can learn all violations in a request and potentially apply relaxation to multiple tags, attributes, or patterns without the need of repetition.

For example, if there are 15 custom tags in a payload each resulting in a violation, you can apply the fine grain relaxation for all tags that are flagged as a violation, instead of repeating the process to apply relaxation for one tag at a time.

### **Scenario 1: Learning enabled, and block enabled:**

In this scenario, the NetScaler appliance learns all the violations in custom tags/attributes/patterns, and the request is blocked and each violation is logged. The behavior is consistent for violations identified in form field, header, or cookie.

### **Scenario 2: Learning enabled and block disabled:**

In this scenario, the NetScaler appliance learns the violations in custom tags/attributes/patterns and each of the violations is logged. The request is not blocked. The behavior is consistent for violations identified in form field, header, or cookie.

To view or use learned data by using the command line interface

At the command prompt, type one of the following commands:

- `show appfw learningdata <filename> crossSiteScripting`



- `rm appfw learningdata <profilename> -crossSiteScripting <string> <formActionURL> \[<location>] \[<valueType> <valueExpression>]`
- `export appfw learningdata <profilename> \*\*crossSiteScripting\*`

### Configure cross-site scripting fine grain relaxation to bypass custom tags

You can configure cross-site scripting relaxation in the web app firewall profile to bypass custom tags/attributes/patterns not present in the allow list.

At the command prompt, type:

```
bind appfw profile p1 -crossSiteScripting <string> <formActionURL> -valueType <valueType> <value expression>
```

#### Example:

```
bind appfw profile profile1 -crossSiteScripting formfield1 http://1.1.1.1 -valueType Tag tag1
```

To view or use learned data by using the GUI

1. Navigate to **Application Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Learned Rules**. You can select the **HTML Cross-Site Scripting** entry in the Learned Rules table and double-click it to access the learned rules. The table displays the **Field Name**, **Action URL**, **Value Type**, **Value**, and **Hits** columns. You can deploy the learned rules or edit a rule before deploying it as a relaxation rule. To discard a rule, you can select it and click the **Skip** button. You can edit only one rule at a time, but you can select multiple rules to deploy or skip.

You also have the option to show a summarized view of the learned relaxations by selecting the **HTML Cross-Site Scripting** entry in the Learned Rules table and clicking **Visualizer** to get a consolidated view of all the learned violations. The visualizer makes it easy to manage the learned rules. It presents a comprehensive view of the data on one screen and facilitates taking action on a group of rules with one click. The biggest advantage of the visualizer is that it recommends regular expressions to consolidate multiple rules. You can select a subset of these rules, based on the delimiter and Action URL. You can display 25, 50, or 75 rules in the visualizer, by selecting the number from a drop-down list. The visualizer for learned rules offers the option to edit the rules and deploy them as relaxations. Or you can skip the rules to ignore them.

### Using the log feature with the HTML Cross-Site Scripting check

When the log action is enabled, the HTML Cross-Site Scripting security check violations are logged in the audit log as **APPFW\_cross-site scripting** violations. The Web App Firewall supports both Native and CEF log formats. You can also send the logs to a remote syslog server.

To access the log messages by using the command line

Switch to the shell and tail the ns.logs in the `/var/log/` folder to access the log messages pertaining to the HTML Cross-Site Scripting violations:

```
Shell
tail -f /var/log/ns.log | grep APPFW_cross-site scripting
```

#### Example of a Cross-Site Scripting security check violation log message in CEF log format:

```
1 Jul 11 00:45:51 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
.0|APPFW|**APPFW_cross-site scripting**|6|src=10.217.253.62
geolocation=Unknown spt=4840 method=GET request=http://aaron.
stratum8.net/FFC/CreditCardMind.html?abc\=%3Cdef%3E msg=**Cross-site
script check failed for field abc=\"Bad tag: def\"** cn1=133 cn2=294
cs1=pr_ffc cs2=PPE1 cs3=eUljypvLa0BbabwfGVE52Sewg9U0001 cs4=ALERT
cs5=2015 act=**not blocked**
```

Example of a Cross-Site Scripting security check violation log message in Native log format showing transform action

```
1 Jul 11 01:00:28 <local0.info> 10.217.31.98 07/11/2015:01:00:28 GMT ns
0-PPE-0 : default APPFW **APPFW_cross-site scripting** 132 0 :
10.217.253.62 392-PPE0 eUljypvLa0BbabwfGVE52Sewg9U0001 pr_ffc http:
//aaron.stratum8.net/FFC/login.php?login_name=%3CB0B%3E&passwd=&
drinking_pref=on &text_area=&loginButton=ClickToLogin&as_sfid=
AAAAAVFqmYL68IGvkr-cn2pzehjfIkm5E6EZ9FL8YLvIW_41AvAATuKYe9N7uGThSpEAx
bb0iBx55j
-FC4llF **Cross-site script special characters seen in fields <
transformed>**
```

#### Access the log messages by using the GUI

The GUI includes a useful tool (Syslog Viewer) for analyzing the log messages. You have multiple options for accessing the Syslog Viewer:

- Navigate to the **Application Firewall > Profiles**, select the target profile, and click **Security Checks**. Highlight the **HTML Cross-Site Scripting** row and click **Logs**. When you access the logs directly from the HTML Cross-Site Scripting check of the profile, the GUI filters out the log messages and displays only the logs pertaining to these security check violations.
- You can also access the Syslog Viewer by navigating to **NetScaler > System > Auditing**. In the **Audit Messages** section, click the **Syslog messages** link to display the Syslog Viewer, which displays all log messages, including other security check violation logs. This is useful for debugging when multiple security check violations might be triggered during request processing.
- Navigate to **Application Firewall > policies > Auditing**. In the Audit Messages section, click the **Syslog messages** link to display the Syslog Viewer, which displays all log messages, including other security check violation logs.

The HTML based Syslog Viewer provides various filter options for selecting only the log messages that are of interest to you. To select log messages for the **HTML Cross-Site Scripting** check, filter by selecting **APPFW** in the drop-down list options for **Module**. The **Event Type** list offers a rich set of options to further refine your selection. For example, if you select the **APPFW\_cross-site scripting** check box and click the **Apply** button, only log messages pertaining to the **HTML Cross-Site Scripting security** check violations appear in the Syslog Viewer.

If you place the cursor in the row for a specific log message, multiple options, such as **Module**, **Event Type**, **Event ID**, **Client IP** and so forth appear below the log message. You can select any of these options to highlight the corresponding information in the log message.

**Click to Deploy** functionality is available only in the GUI. You can use the Syslog Viewer to not only view the logs but also to deploy the HTML Cross-Site Scripting relaxation rules based on the log messages for the Web App Firewall security check violations. The log messages must be in CEF log format for this operation. Click to deploy functionality is available only for log messages that are generated by the block (or not block) action. You cannot deploy a relaxation rule for a log message about the transform operation.

To deploy a relaxation rule from the Syslog Viewer, select the log message. A check box appears in the upper right corner of the **Syslog Viewer** box of the selected row. Select the check box, and then select an option from the **Action** list to deploy the relaxation rule. **Edit & Deploy**, **Deploy**, and **Deploy All** are available as **Action** options.

The HTML Cross-Site Scripting rules that are deployed by using the **Click to Deploy** option do not include the fine grain relaxation recommendations.

### Configure click to deploy feature by using the GUI

1. In the Syslog Viewer, select **APPFW** in the **Module** options.
2. Select the **APP\_cross-site scripting** as the **Event Type** to filter corresponding log messages.
3. Select the check box to identify the rule to deploy.
4. Use the **Action** drop-down list of options to deploy the relaxation rule.
5. Verify that the rule appears in the corresponding relaxation rule section.

### Statistics for the HTML Cross-Site Scripting violations

When the stats action is enabled, the counter for the HTML Cross-Site Scripting check is incremented when the Web App Firewall takes any action for this security check. The statistics are collected for Rate and Total count for Traffic, Violations, and Logs. The size of an increment of the log counter can vary depending on the configured settings. For example, if the block action is enabled, the request for a page that contains 3 HTML Cross-Site Scripting violations increments the stats counter by one, because the page is blocked when the first violation is detected. However, if the block is disabled,

processing the same request increments the statistics counter for violations and the logs by three, because each violation generates a separate log message.

To display HTML Cross-Site Scripting check statistics by using the command line

At the command prompt, type:

```
> sh appfw stats
```

To display stats for a specific profile, use the following command:

```
> **stat appfw profile** <profile name>
```

### Display HTML Cross-Site Scripting statistics by using the GUI

1. Navigate to **Security > Application Firewall > Profiles > Statistics**.
2. In the right pane, access the **Statistics** Link.
3. Use the scroll bar to view the statistics about HTML Cross-Site Scripting violations and logs. The statistics table provides real-time data and is updated every 7 seconds.

### Highlights

- **Built-in Support for HTML Cross-Site Scripting attack Protection**—The NetScaler Web App Firewall protects against Cross-Site Scripting attacks by monitoring a combination of allowed attributes and tags, and denied patterns in the received payload. All the built-in default allowed tags, allowed attributes and denied patterns used by the cross-site scripting check are specified in the `/netscaler/default_custom_settings.xml` file.
- **Customization**—You can change the default list of tags, attributes, and patterns to customize the Cross-Site Scripting security check inspection for the specific needs of your application. Make a copy of the default signature object, modify existing entries, or add new ones. Bind this signature object to your profile to make use of the customized configuration.
- **Hybrid Security Model**—Both signatures and deep security protections use the SQL/cross-site scripting patterns specified in the signature object that is bound to the profile. If no signature object is bound to the profile, the SQL/cross-site scripting patterns present in the default signature object are used.
- **Transform**—Note the following about the transform operation:

The transform operation works independently of the other Cross-Site Scripting action settings. If transform is enabled and block, log, stats, and learn are all disabled, cross-site scripting tags are transformed.

If the block action is enabled, it takes precedence over the transform action.

- **Fine Grained Relaxation and Learning.** Fine-tune the relaxation rule to relax a subset of cross-site scripting elements from security check inspection but detect the rest. The learning engine recommends a specific value type and value expressions based on the observed data.
- **Click to Deploy**—Select one, or multiple cross-site scripting violation log messages in the syslog viewer and deploy them as relaxation rules.
- **Charset**—The default charset for the profile must be set based on the need of the application. By default, the profile charset is set to English US (ISO-8859-1). If a request is received without the specified charset, the Web App Firewall processes the request as if it is ISO-8859-1. The open bracket character (<) or the close bracket character (>) will not get interpreted as cross-site scripting tags if these characters are encoded in other charsets. For example, if a request contains a UTF-8 character string “%uff1cscript%uff1e” but the charset is not specified on the request page, the cross-site scripting violation might not get triggered unless the default charset for the profile is specified as Unicode.

## HTML SQL injection check

February 9, 2024

Many web applications have web forms that use SQL to communicate with relational database servers. Malicious code or a hacker can use an insecure web form to send SQL commands to the web server. The Web App Firewall HTML SQL Injection check provides special defenses against injection of unauthorized SQL code that might break security. If the Web App Firewall detects unauthorized SQL code in a user request, it either transforms the request, to render the SQL code inactive, or blocks the request. The Web App Firewall examines the request payload for injected SQL code in three locations: 1) POST body, 2) headers, and 3) cookies. To examine a query portion in requests for injected SQL code, please configure an application firewall profile setting ‘InspectQueryContentTypes’ for the specific content-types.

A default set of keywords and special characters provides known keywords and special characters that are commonly used to launch SQL attacks. You can add new patterns, and you can edit the default set to customize the SQL check inspection. The Web App Firewall offers various action options for implementing SQL Injection protection. In addition to the **Block, Log, Stats** and **Learn** actions, the Web App Firewall profile also offers the option to **transform SQL special characters** to render an attack harmless.

In addition to actions, there are several parameters that can be configured for SQL injection processing. You can check for **SQL wildcard characters**. You can change the SQL Injection type and select one of the 4 options (**SQLKeyword, SQLSplChar, SQLSplCharANDKeyword, SQLSplCharORKeyword**) to indicate how to evaluate the SQL keywords and SQL special characters when processing the

payload. The **SQL Comments Handling parameter** gives you an option to specify the type of comments that need to be inspected or exempted during SQL Injection detection.

You can deploy relaxations to avoid false positives. The Web App Firewall learning engine can provide recommendations for configuring relaxation rules.

The following options are available for configuring an optimized SQL Injection protection for your application:

**Block**—The block action is triggered only if the input matches the SQL injection type specification. For example, if **SQLSplCharANDKeyword** is configured as the SQL injection type, a request is not blocked if it contains no key words, even if SQL special characters are detected in the input. Such a request is blocked if the SQL injection type is set to either **SQLSplChar**, or **SQLSplCharORKeyword**.

**Log**—If you enable the log feature, the SQL Injection check generates log messages indicating the actions that it takes. If the block action is disabled, a separate log message is generated for each input field in which the SQL violation was detected. However, only one message is generated when the request is blocked. Similarly, one log message per request is generated for the transform operation, even when SQL special characters are transformed in multiple fields. You can monitor the logs to determine whether responses to legitimate requests are getting blocked. A large increase in the number of log messages can indicate attempts to launch an attack.

**Stats**—If enabled, the stats feature gathers statistics about violations and logs. An unexpected surge in the stats counter might indicate that your application is under attack. If legitimate requests are getting blocked, you might have to revisit the configuration to see if you need to configure new relaxation rules or modify the existing ones.

**Learn**—If you are not sure which SQL relaxation rules might be ideally suited for your application, you can use the learn feature to generate recommendations based on the learned data. The Web App Firewall learning engine monitors the traffic and provides SQL learning recommendations based on the observed values. To get optimal benefit without compromising performance, you might want to enable the learn option for a short time to get a representative sample of the rules, and then deploy the rules and disable learning.

**Transform SQL special characters**—The Web App Firewall considers three characters, Single straight quote (‘), Backslash (\), and Semicolon (;) as special characters for SQL security check processing. The SQL Transformation feature modifies the SQL Injection code in an HTML request to ensure that the request is rendered harmless. The modified HTML request is then sent to the server. All default transformation rules are specified in the /netscaler/default\_custom\_settings.xml file.

The transform operation renders the SQL code inactive by making the following changes to the request:

- Single straight quote (‘) to double straight quote (“).
- Backslash (\) to double backslash (\).

- Semicolon (;) is dropped completely.

These three characters (special strings) are necessary to issue commands to an SQL server. Unless an SQL command is prefaced with a special string, most SQL servers ignore that command. Therefore, the changes that the Web App Firewall performs when transformation is enabled prevent an attacker from injecting active SQL. After these changes are made, the request can safely be forwarded to your protected website. When web forms on your protected website can legitimately contain SQL special strings, but the web forms do not rely on the special strings to operate correctly, you can disable blocking and enable transformation to prevent blocking of legitimate web form data without reducing the protection that the Web App Firewall provides to your protected websites.

The transform operation works independently of the **SQL Injection Type** setting. If transform is enabled and the SQL Injection type is specified as the SQL keyword, SQL special characters are transformed even if the request does not contain any keywords.

**Tip**

You normally enable either transformation or blocking, but not both. If the block action is enabled, it takes precedence over the transform action. If you have blocking enabled, enabling transformation is redundant.

**Check for SQL Wildcard Characters**—Wild card characters can be used to broaden the selections of a SQL (SQL-SELECT) statement. These wild card operators can be used with **LIKE** and **NOT LIKE** operators to compare a value to similar values. The percent (%), and underscore (\_) characters are frequently used as wild cards. The percent sign is analogous to the asterisk (\*) wildcard character used with MS-DOS and to match zero, one, or multiple characters in a field. The underscore is similar to the MS-DOS question mark (?) wildcard character. It matches a single number or character in an expression.

For example, you can use the following query to do a string search to find all customers whose names contain the D character.

**SELECT \* from customer WHERE name like “%D%”:**

The following example combines the operators to find any salary values that have 0 in the second and third place.

**SELECT \* from customer WHERE salary like ‘\_00%’:**

Different DBMS vendors have extended the wildcard characters by adding extra operators. The NetScaler Web App Firewall can protect against attacks that are launched by injecting these wildcard characters. The 5 default Wildcard characters are percent (%), underscore (\_), caret (^), opening bracket ([), and closing bracket (]). This protection applies to both HTML and XML profiles.

The default wildcard chars are a list of literals specified in the **\*Default Signatures**:

- `<wildchar type="LITERAL">%</wildchar>`

- `<wildchar type="LITERAL">_</wildchar>`
- `<wildchar type="LITERAL">^</wildchar>`
- `<wildchar type="LITERAL">[</wildchar>`
- `<wildchar type="LITERAL">]</wildchar>`

Wildcard characters in an attack can be PCRE, like `[^A-F]`. The Web App Firewall also supports PCRE wildcards, but the literal wildcard chars above are sufficient to block most attacks.

**Note:**

The SQL wildcard character check is different from the SQL special character check. This option must be used with caution to avoid false positives.

**Check Request Containing SQL Injection Type**—The Web App Firewall provides 4 options to implement the desired level of strictness for SQL Injection inspection, based on the individual need of the application. The request is checked against the injection type specification for detecting SQL violations. The 4 SQL injection type options are:

- **SQL Special Character and Keyword**—Both an SQL keyword and an SQL special character must be present in the input to trigger SQL violation. This least restrictive setting is also the default setting.
- **SQL Special Character**—At least one of the special characters must be present in the input to trigger SQL violation.
- **SQL key word**—At least one of the specified SQL keywords must be present in the input to trigger an SQL violation. Do not select this option without due consideration. To avoid false positives, make sure that none of the keywords are expected in the inputs.
- **SQL Special Character or Keyword**—Either the key word or the special character string must be present in the input to trigger the security check violation.

**Tip:**

If you configure the Web App Firewall to check for inputs that contain an SQL special character, the Web App Firewall skips web form fields that do not contain any special characters. Since most SQL servers do not process SQL commands that are not preceded by a special character, enabling this option can significantly reduce the load on the Web App Firewall and speed up processing without placing your protected websites at risk.

**SQL comments handling**—By default, the Web App Firewall checks all SQL comments for injected SQL commands. Many SQL servers ignore anything in a comment, however, even if preceded by an SQL special character. For faster processing, if your SQL server ignores comments, you can configure the Web App Firewall to skip comments when examining requests for injected SQL. The SQL comments handling options are:



- **ANSI**—Skip ANSI-format SQL comments, which are normally used by UNIX-based SQL databases. For example:
  - `--` (Two Hyphens) - This is a comment that begins with two hyphens and ends with end of line.
  - `{ }` - Braces (Braces enclose the comment. The `{` precedes the comment, and the `}` follows it. Braces can delimit single- or multiple-line comments, but comments cannot be nested)
  - `/**/` : C style comments (Does not allow nested comments).  
Please note `/*!` <comment that begin with slash followed by asterisk and exclamation mark is not a comment > `*/`
  - MySQL Server supports some variants of C-style comments. These enable you to write code that includes MySQL extensions, but is still portable, by using comments of the following form: `/*! MySQL-specific code */`
  - `.` #: Mysql comments: This is a comment that begins with # character.
- **Nested**—Skip nested SQL comments, which are normally used by Microsoft SQL Server. For example; `--` (Two Hyphens), and `/**/` (Allows nested comments)
- **ANSI/Nested**—Skip comments that adhere to both the ANSI and nested SQL comment standards. Comments that match only the ANSI standard, or only the nested standard, are still checked for injected SQL.
- **Check all Comments**—Check the entire request for injected SQL without skipping anything. This is the default setting.

### Tip

Usually, you must not choose the Nested or the ANSI/Nested option unless your back-end database runs on Microsoft SQL Server. Most other types of SQL server software do not recognize nested comments. If nested comments appear in a request directed to another type of SQL server, they might indicate an attempt to breach security on that server.

**Check Request headers**—Enable this option if, in addition to examining the input in the form fields, you want to examine the request headers for HTML SQL Injection attacks. If you use the GUI, you can enable this parameter in the **Advanced Settings** -> **Profile Settings** pane of the Web App Firewall profile.

### Note:

If you enable the Check Request header flag, you might have to configure a relaxation rule for the **User-Agent** header. Presence of the SQL keyword **like** and SQL special character semi-colon (`;`) might trigger false positive and block requests that contain this header.

### Warning

If you enable both request header checking and transformation, any SQL special characters

found in the headers are also transformed. The Accept, Accept-Charset, Accept-Encoding, Accept-Language, Expect, and User-Agent headers normally contain semicolons (;). Enabling both Request header checking and transformation simultaneously might cause errors.

**InspectQueryContentTypes** —Configure this option if you want to examine the request query portion for SQL Injection attacks for the specific content-types. If you use the GUI, you can configure this parameter in the **Advanced Settings** -> **Profile Settings** pane of the App Firewall profile.

## SQL Fine grained Relaxations

The Web App Firewall gives you an option to exempt a specific form field, header, or Cookie from the SQL Injection inspection check. You can completely bypass the inspection for one or more of these fields by configuring the relaxation rules for the SQL Injection check.

The Web App Firewall allows you to implement tighter security by fine-tuning the relaxation rules. An application might require the flexibility to allow specific patterns, but configuring a relaxation rule to bypass the security inspection might make the application vulnerable to attacks, because the target field is exempted from inspection for any SQL attack patterns. SQL fine grained relaxation provides the option to allow specific patterns and block the rest. For example, the Web App Firewall currently has a default set of more than 100 SQL keywords. Because hackers can use these keywords in SQL Injection attacks, the Web App Firewall flags them as potential threats. You can relax one or more keywords that are considered safe for the specific location. The rest of the potentially dangerous SQL keywords are still checked for the target location and continue to trigger the security check violations. You now have much tighter control.

The commands used in relaxations have optional parameters for **Value Type** and **Value Expression**. You can specify whether the value expression is a regular expression or a literal string. The value type can be left blank or you have an option to select **Keyword** or **SpecialString** or **WildChar**.

### Warning:

Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the URL that you want to add as an exception, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (.) metacharacter or wildcard combination, can have results that you do not want, such as blocking access to web content that you did not intend to block or allowing an attack that the HTML SQL Injection check would otherwise have blocked.

### Points to Consider:

- Value expression is an optional argument. A field name might not have any value expression.
- A field name can be bound to multiple value expressions.

- Value expressions must be assigned a value type. The SQL value type can be: 1) Keyword, 2) SpecialString, or 3) WildChar.
- You can have multiple relaxation rules per field name/URL combination.

## Using the Command Line to Configure the SQL Injection Check

To configure SQL Injection actions and other parameters by using the command line:

In the command line interface, you can use either the **set appfw profile** command or the **add appfw profile** command to configure the SQL Injection protections. You can enable the block, learn, log, stats actions and specify whether you want to transform the special characters used in SQL Injection attack strings to disable the attack. Select the type of SQL attack pattern (key words, wildcard characters, special strings) you want to detect in the payloads, and indicate whether you want the Web App Firewall to also inspect the request Headers for SQL Injection violations. Use the **unset appfw profile** command to revert the configured settings back to their defaults. Each of the following commands sets only one parameter, but you can include multiple parameters in a single command:

- **set application firewall profile** “Parameter descriptions provided at the bottom of the page.”  
• `<name> -SQLInjectionAction ([block] [learn] [log] [stats]) | [none])`
- **set application firewall profile** “Parameter descriptions provided at the bottom of the page.”  
• `<name> -SQLInjectionTransformSpecialChars (**ON** | OFF)`
- **set application firewall profile** “Parameter descriptions provided at the bottom of the page.”  
• `<name> -**SQLInjectionCheckSQLWildChars** (**ON** | **OFF**)`
- **set application firewall profile** “Parameter descriptions provided at the bottom of the page.”  
• `**<name> -**SQLInjectionType** ([**SQLKeyword**] | [**SQLSplChar**] | [**SQLSplCharANDKeyword**] | [**SQLSplCharORKeyword**])`
- **set application firewall profile** “Parameter descriptions provided at the bottom of the page.”  
• `<name> -**SQLInjectionParseComments** ([**checkall**] | [**ansi|nested**] | [**ansinested**])`
- **set application firewall profile** “Parameter descriptions provided at the bottom of the page.”  
• `<name> -CheckRequestHeaders (ON | OFF)` Parameter descriptions provided at the bottom of the page.
- `<name> - CheckRequestQueryNonHtml (ON | OFF)` Parameter descriptions provided at the bottom of the page.

To configure a SQL Injection relaxation rule by using the command interface

Use the bind or unbind command to add or delete binding, as follows:

- `bind appfw profile <name> -SQLInjection <String> [isRegex(REGEX|NOTREGE)] <formActionURL> [-location <location>] [-valueType (`

```
Keyword|SpecialString|Wildchar)[<valueExpression>][-isValueRegex (
REGEX | NOTREGEX)]]
```

- `unbind appfw profile <name> -SQLInjection <String> <formActionURL> [-location <location>] [-valueTyp (Keyword|SpecialString|Wildchar)[<valueExpression>]]`

**Note:**

You can find the list of SQL keywords from the default signature file contents by viewing the view signature object, which has list of SQL key words and SQL special characters.

## Using the GUI to Configure the SQL Injection Security Check

In the GUI, you can configure the SQL Injection security check in the pane for the profile associated with your application.

To configure or modify the SQL Injection check by using the GUI

1. Navigate to **Application Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Security Checks**.

The security check table displays the currently configured action settings for all the security checks. You have 2 options for configuration:

- a. If you want to enable or disable Block, Log, Stats, and Learn actions for HTML SQL Injection, you can select or clear check boxes in the table, click **OK**, and then click **Save and Close** to close the **Security Check** pane.
- b. If you want to configure more options for this security check, double click HTML SQL Injection, or select the row and click **Action Settings**, to display the following options:

**Transform SQL Special character**—Transform any SQL Special characters in the request.

**Check for SQL Wildcard Characters**—Consider SQL Wildcard characters in the payload to be attack patterns.

**Check Request Containing**—Type of SQL injection (SQLKeyword, SQLSplChar, SQLSplCharANDKeyword, or SQLSplCharORKeyword) to check.

**SQL Comments Handling**—Type of comments (Check All Comments, ANSI, Nested, or ANSI/Nested) to check.

After changing any of the above settings, click **OK** to save the changes and return to the Security Checks table. You can proceed to configure other security checks if needed. Click **OK** to save all the changes you have made in the Security Checks section, and then click **Save and Close** to close the Security Check pane.

To configure an SQL Injection relaxation rule by using the GUI

- Navigate to **Application Firewall > Profiles**, highlight the target profile, and click **Edit**.
- In the **Advanced Settings** pane, click **Relaxation Rules**.
- In the Relaxation Rules table, double-click the **HTML SQL Injection** entry, or select it and click **Edit**.
- In the **HTML SQL Injection Relaxation Rules** dialogue box, perform **Add**, **Edit**, **Delete**, **Enable**, or **Disable** operations for relaxation rules.

#### Note

When you add a new rule, the **Value Expression** field is not displayed unless you select **Keyword** or **SpecialString** or **WildChar** option in the **Value Type** Field.

To manage SQL injection relaxation rules by using the visualizer

For a consolidated view of all the relaxation rules, you can highlight the **HTML SQL Injection** row and click **Visualizer**. The visualizer for deployed relaxations offers you the option to **Add** a new rule or **Edit** an existing one. You can also **Enable** or **Disable** a group of rules by selecting a node and clicking the corresponding buttons in the relaxation visualizer.

## View or customize injection patterns by using the GUI

You can use the GUI to view or customize the injection patterns.

The default SQL patterns are specified in the default signatures file. If you do not bind any signature object to your profile, the default Injection patterns specified in the default signatures object will be used by the profile for the command injection security check processing. The rules and patterns, specified in the default signatures object, are read-only. You cannot edit or modify them. If you want to modify or change these patterns, make a copy of the default sSignatures object to create a User-Defined signature object. Make changes in the command injection patterns in the new User-defined signature object and use this signature object in your profile that is processing the traffic for which you want to use these customized patterns.

For more information, see [Signatures](#)

To view the default injection patterns by using the GUI:

1. Navigate to **Application Firewall > Signatures**, select **\*Default Signatures**, and click **Edit**.
2. Click **Manage CMD/SQL/XSS patterns**. The **Manage SQL/cross-site scripting paths** table shows patterns pertaining to CMD/SQL/XS injection:

| CMD/SQL/XSS Paths (read-only)                  |                                                                       |        |
|------------------------------------------------|-----------------------------------------------------------------------|--------|
| <input type="button" value="Manage Elements"/> |                                                                       |        |
| <input type="checkbox"/>                       | PATHS                                                                 | #ITEMS |
| <input type="checkbox"/>                       | commandinjection/keyword                                              | 286    |
| <input type="checkbox"/>                       | commandinjection/specialstring                                        | 12     |
| <input type="checkbox"/>                       | injection (delimiter=not_alphanum, type=SQL)/keyword                  | 134    |
| <input type="checkbox"/>                       | injection (delimiter=not_alphanum, type=SQL)/specialstring            | 3      |
| <input type="checkbox"/>                       | injection (delimiter=not_alphanum, type=SQL)/transformrules/transform | 5      |
| <input type="checkbox"/>                       | injection (delimiter=not_alphanum, type=SQL)/wildchar                 | 5      |
| <input type="checkbox"/>                       | xss/allowed/attribute                                                 | 52     |
| <input type="checkbox"/>                       | xss/allowed/tag                                                       | 47     |
| <input type="checkbox"/>                       | xss/denied/pattern                                                    | 179    |

1. Select a row and click **Manage Elements** to display the corresponding injection patterns (keywords, special strings, transformation rules or the wildcard characters) used by the Web App Firewall command injection check.

### Using the Learn Feature with the SQL Injection Check

When the learn action is enabled, the Web App Firewall learning engine monitors the traffic and learns the triggered violations. You can periodically inspect these learned rules. After due consideration, you can deploy the learned rule as an SQL Injection relaxation rule.

**SQL Injection Learning enhancement**—An Web App Firewall learning enhancement was introduced in release 11.0 of the NetScaler software. To deploy fine grained SQL Injection relaxation, the Web App Firewall offers fine grained SQL Injection learning. The learning engine makes recommendations regarding the observed Value Type (keyword, SpecialString, Wildchar) and the corresponding Value expression observed in the input fields. In addition to checking the blocked requests to determine whether the current rule is too restrictive and needs to be relaxed, you can review the rules generated by the learning engine to determine which value type and value expressions are triggering violations and need to be addressed in the relaxation rules.

#### Important

The Web App Firewall’s learning engine can distinguish only the first 128 bytes of the name. If a form has multiple fields with names that match for the first 128 bytes, the learning engine might

not be able to distinguish between them. Similarly, the deployed relaxation rule might inadvertently relax all such fields from SQL Injection inspection.

**Note** To bypass the SQL check in the User-Agent header, use the following relaxation rule:

```
bind appfw profile your_profile_name -SQLInjection User-Agent ".*\n"-location HEADER
```

To view or use learned data by using the command line interface

At the command prompt, type one of the following commands:

- `show appfw learningdata <profilename> SQLInjection`
- `rm appfw learningdata <profilename> -SQLInjection <string> <formActionURL> [<location>] [<valueType> <valueExpression>]`
- `export appfw learningdata <profilename> SQLInjection`

To view or use learned data by using the GUI

1. Navigate to **Application Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Learned Rules**. You can select the **HTML SQL Injection** entry in the Learned Rules table and double-click it to access the learned rules. You can deploy the learned rules or edit a rule before deploying it as a relaxation rule. To discard a rule, you can select it and click the **Skip** button. You can edit only one rule at a time, but you can select multiple rules to deploy or skip.

You also have the option to show a summarized view of the learned relaxations by selecting the **HTML SQL Injection** entry in the Learned Rules table and clicking **Visualizer** to get a consolidated view of all the learned violations. The visualizer makes it easy to manage the learned rules. It presents a comprehensive view of the data on one screen and facilitates taking action on a group of rules with one click. The biggest advantage of the visualizer is that it recommends regular expressions to consolidate multiple rules. You can select a subset of these rules, based on the delimiter and Action URL. You can display 25, 50, or 75 rules in the visualizer, by selecting the number from a drop-down list. The visualizer for learned rules offers the option to edit the rules and deploy them as relaxations. Or you can skip the rules to ignore them.

## Using the Log Feature with the SQL Injection Check

When the log action is enabled, the HTML SQL Injection security check violations are logged in the audit log as **APPFW\_SQL** violations. The Web App Firewall supports both Native and CEF log formats. You can also send the logs to a remote syslog server.

To access the log messages by using the command line

Switch to the shell and tail the ns.logs in the **/var/log/** folder to access the log messages pertaining to the SQL Injection violations:

```
> Shell
```

```
tail -f /var/log/ns.log | grep APPFW_SQL
```

Example of an HTML SQL Injection log message when the request is transformed

```
1 Jun 26 21:08:41 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
.0|APPFW|APPFW_SQL|6|src=10.217.253.62 geolocation=Unknown spt=54001
method=GET request=http://aaron.stratum8.net/FFC/login.php?
login_name\=%27+or&passwd\=and+%3B&drinking_pref\=on&text_area\=
select+*+from+%5C+%3B&loginButton\=ClickToLogin&as_sfid\=
AAAAAAXjnGN5gLH-hvhT0pIySEIqES7BjFRs5Mq0fwPp-3ZHDi5yWLRWByj0cVbMyy-
Ens2vaaiULK0cUri40D4kbXWwSY5s7I3QkDsrvIgcYMC9BMvBwY2wbNcSqCwk52lfE0k
%3D&as_fid\=feec8758b41740eedeeb6b35b85dfd3d5def30c msg= Special
characters seen in fields cn1=74 cn2=762 cs1=pr_ffc cs2=PPE1 cs3=9
ztIlf9p1H7p6Xtzn6NMygTv/QM0002 cs4=ALERT cs5=2015 act=transformed
```

Example of an HTML SQL Injection log message when the post request is blocked

```
1 Jun 26 21:30:34 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
.0|APPFW|APPFW_SQL|6|src=10.217.253.62 geolocation=Unknown spt=9459
method=POST request=http://aaron.stratum8.net/FFC/login_post.php msg
=SQL Keyword check failed for field text_area=\"(')'\" cn1=78 cn2=834
cs1=pr_ffc cs2=PPE1 cs3=eVJMMPtZ2XgylGrHjKx3rZLfBCI0002 cs4=ALERT
cs5=2015 act=blocked
```

#### Note

As part of the streaming changes in 10.5.e build (enhancement builds) and 11.0 build onwards, we now process the input data in blocks. RegEx pattern matching is now restricted to 4K for contiguous character string matching. With this change, the SQL violation log messages might include different information compared to the earlier builds. The keyword and special character in the input can be separated by many bytes. We now keep track of the SQL keywords and special strings when processing the data, instead of buffering the entire input value. In addition to the field name, the log message now includes the SQL keyword, or the SQL special character, or both the SQL keyword and the SQL special character, as determined by the configured setting. The rest of the input is no longer included in the log message, as shown in the following example:

#### Example:

In 10.5, when the Web App Firewall detects the SQL violation, the entire input string might be included in the log message, as shown below:

```
SQL Keyword check failed for field text=\"select a name from
testbed1;(;)\".*<blocked>
```

In the enhancement builds of 10.5.e that support request side streaming and 11.0 build onwards,



we log only the field name, keyword, and special character (if applicable) in the log message, as shown below:

```
SQL Keyword check failed for field **text="select(;"<blocked>
```

This change is applicable to requests that contain application/x-www-form-urlencoded, or multipart/form-data, or text/x-gwt-rpc content-types. Log messages generated during processing of **JSON** or **XML** payloads are not affected by this change.

To access the log messages by using the GUI

The GUI includes a useful tool (**Syslog Viewer**) for analyzing the log messages. You have multiple options for accessing the Syslog Viewer:

- Navigate to the **Application Firewall > Profiles**, select the target profile, and click **Security Checks**. Highlight the **HTML SQL Injection** row and click **Logs**. When you access the logs directly from the HTML SQL Injection check of the profile, the GUI filters out the log messages and displays only the logs pertaining to these security check violations.
- You can also access the Syslog Viewer by navigating to **NetScaler > System > Auditing**. In the Audit Messages section, click the **Syslog messages** link to display the Syslog Viewer, which displays all log messages, including other security check violation logs. This is useful for debugging when multiple security check violations might be triggered during request processing.
- Navigate to **Application Firewall > policies > Auditing**. In the Audit Messages section, click the **Syslog messages** link to display the Syslog Viewer, which displays all log messages, including other security check violation logs.

The HTML based Syslog Viewer provides various filter options for selecting only the log messages that are of interest to you. To select log messages for the **HTML SQL Injection** check, filter by selecting **APPFW** in the drop-down list options for **Module**. The **Event Type** list offers a rich set of options to further refine your selection. For example, if you select the **APPFW\_SQL** check box and click the **Apply** button, only log messages pertaining to the **SQL Injection** security check violations appear in the Syslog Viewer.

If you place the cursor in the row for a specific log message, multiple options, such as **Module**, **Event Type**, **Event ID**, **Client IP** and so forth. appear below the log message. You can select any of these options to highlight the corresponding information in the log message.

**Click to Deploy** functionality is available only in the GUI. You can use the Syslog Viewer to not only view the logs but also to deploy HTML SQL Injection relaxation rules based on the log messages for the Web App Firewall security check violations. The log messages must be in CEF log format for this operation. Click to deploy functionality is available only for log messages that are generated by the block (or not block) action. You cannot deploy a relaxation rule for a log message about the transform operation.

To deploy a relaxation rule from the Syslog Viewer, select the log message. A check box appears in the upper right corner of the **Syslog Viewer** box of the selected row. Select the check box, and then select an option from the Action list to deploy the relaxation rule. **Edit & Deploy**, **Deploy**, and **Deploy All** are available as **Action** options.

The SQL Injection rules that are deployed by using the Click to Deploy option do not include the fine grain relaxation recommendations.

#### To use Click to Deploy functionality in the GUI:

1. In the Syslog Viewer, select **Application Firewall** in the **Module** options.
2. Select the **APP\_SQL** as the **Event Type** to filter corresponding log messages.
3. Select the check box to identify the rule to deploy.
4. Use the **Action** drop-down list of options to deploy the relaxation rule.
5. Verify that the rule appears in the corresponding relaxation rule section.

### Statistics for the SQL Injection violations

When the stats action is enabled, the counter for the SQL Injection check is incremented when the Web App Firewall takes any action for this security check. The statistics are collected for Rate and Total count for Traffic, Violations, and Logs. The size of an increment of the log counter can vary depending on the configured settings. For example, if the block action is enabled, the request for a page that contains 3 SQL Injection violations increments the stats counter by one, because the page is blocked as soon as the first violation is detected. However, if the block is disabled, processing the same request increments the statistics counter for violations and the logs by three, because each violation generates a separate log message.

#### To display SQL Injection check statistics by using the command line:

At the command prompt, type:

```
sh appfw stats
```

To display stats for a specific profile, use the following command:

```
> stat appfw profile <profile name>
```

To display HTML SQL Injection statistics by using the GUI

1. Navigate to **System > Security > Application Firewall**.
2. In the right pane, access the **Statistics** Link.
3. Use the scroll bar to view the statistics about HTML SQL Injection violations and logs. The statistics table provides real-time data and is updated every 7 seconds.

## Highlights

### Note the following points about the SQL Injection check:

- **Built-in Support for SQL Injection Protection**—The NetScaler Web App Firewall protects against SQL Injection by monitoring a combination of SQL keywords and special characters in the form parameters. All SQL keywords, special characters, wildcard characters, and default transformation rules are specified in the `/netscaler/default_custom_settings.xml` file.
- **Customization**—You can change the default key words, special characters, wildcard characters, and transformation rules to customize the SQL security check inspection for the specific needs of your application. Make a copy of the default signature object, modify existing entries, or add new ones. Bind this signature object to your profile to make use of the customized configuration.
- **Hybrid Security Model**—Both signatures and deep security protections use the SQL/cross-site scripting patterns specified in the signature object that is bound to the profile. If no signature object is bound to the profile, the SQL/cross-site scripting patterns present in the default signature object are used.
- **Transform**—Note the following about the transform operation:
  - The transform operation works independently of the other SQL Injection action settings. If transform is enabled and the block, log, stats, and learn are all disabled, SQL special characters are transformed.
  - When SQL Transformation is enabled, user requests are sent to the back end servers after the SQL special characters are transformed in non-block mode. If the block action is enabled, it takes precedence over the transform action. If the injection type is specified as SQL special character and the block is enabled, the request is blocked despite the transform action.
- **Fine Grained Relaxation and Learning**—Fine-tune the relaxation rule to relax a subset of SQL elements from security check inspection but detect the rest. The learning engine recommends a specific value type and value expressions based on the observed data.
- **Click to Deploy**—Select one, or multiple SQL violation log messages in the syslog viewer and deploy them as relaxation rules.

## SQL grammar-based protection for HTML and JSON payload

February 9, 2024

NetScaler Web App Firewall uses a pattern match approach for detecting SQL injection attacks in [HTTP](#) and [JSON](#) payloads. The approach uses a set of pre-defined key-words and (or) special char-

acters to detect an attack and flag it as a violation. Although this approach is effective, it can result in many false positives resulting in adding one or more relaxation rules. Especially when commonly used words such as “Select” and “From” are used in an HTTP or JSON request. We can reduce false positives by implementing the SQL grammar protection check for [HTML](#) and [JSON](#) payload.

In the existing pattern match approach, an SQL injection attack is identified if a pre-defined keyword and or a special character is present in an HTTP request. In this case, the statement need not be a valid SQL statement. But in the grammar-based approach, an SQL injection attack is detected only if a keyword or a special character is present in a SQL statement or is part of a SQL statement thereby reducing false positive scenarios.

### SQL grammar-based protection usage scenario

Consider a statement, “Select my tickets and let’s meet at union station” present in an HTTP request. Although, the statement is not a valid SQL statement, the existing pattern match approach detects the request as an SQL injection attack because the statement uses keywords such as “Select”, “and” and “Union”. But, in the case of the SQL grammar approach, the statement is not detected as a violation attack because the keywords are not present in a valid SQL statement or not part of a valid SQL statement.

The grammar-based approach can also be configured for detecting SQL injection attacks in [JSON](#) payloads. For adding a relaxation rule, you can reuse the existing relaxation rules. Fine grained relaxation rules are also applicable for SQL grammar, for rules with “valueType” “keyword”. In [JSON](#) SQL grammar, the existing URL-based method can be reused.

### Configure SQL grammar-based protection for HTML using the CLI

To implement SQL grammar based detection, you must configure the “SQLInjectionGrammar” parameter in the Web App Firewall profile. By default, the parameter is disabled. All existing SQL Injection actions are supported except learning. Any new profile created after an upgrade supports SQL injection grammar and it continues to have default type as “special character or keyword” and it must be explicitly enabled.

At the command prompt, type:

```
1 add appfw profile <profile-name> - SQLInjectionAction <action-name> -
SQLInjectionGrammar ON/OFF
```

#### Example:

```
add appfw profile profile1 -SQLInjectionAction Block -SQLInjectionGrammar
ON
```

## Configure SQL pattern-match protection and grammar-based protection for HTML using the CLI

If you have enabled both grammar-based and pattern-match approaches, then the appliance performs grammar-based detection first and if there is SQL injection detection with the action type set to block, the request is blocked (without verifying detection using pattern-match).

At the command prompt, type:

```
1 add appfw profile <profile-name> - SQLInjectionAction <action-name> -
 SQLInjectionGrammar ON - SQLInjectionType <Any action other than '
 None ' : SQLSplCharANDKeyword/ SQLSplCharORKeyword/ SQLSplChar/
 SQLKeyword>
```

### Example:

```
add appfw profile p1 -SQLInjectionAction block - SQLInjectionGrammar
ON -SQLInjectionType SQLSplChar
```

## Configure SQL Injection check only with grammar-based protection for HTML using the CLI

At the command prompt, type:

```
1 add appfw profile <profile-name> - SQLInjectionAction <action-name> -
 SQLInjectionGrammar ON - SQLInjectionType None
```

### Example:

```
add appfw profile p1 -SQLInjectionAction block - SQLInjectionGrammar
ON -SQLInjectionType None
```

## Bind relaxation rules for SQL grammar-based protection for HTML using the CLI

If your application requires you to bypass the SQL injection check for a specific “ELEMENT” or “ATTRIBUTE” in the payload, you must configure a relaxation rule.

### Note:

Relaxation rules with valueType “keyword” are evaluated only when the appliance performs detection using SQL grammar.

The SQL command Injection inspection relaxation rules have the following syntax. At the command prompt, type:

```
1 bind appfw profile <name> -SQLInjection <String> [isRegex(REGEX|
 NOTREGE)] <formActionURL> [-location <location>] [-valueType (Keywor
 |SpecialString|Wildchar) [<valueExpression>][-isValueRegex (REGEX |
 NOTREGE)]]
```

**Example:**

```
bind appfw profile p1 -sqlinjection abc http://10.10.10.10/
bind appfw profile p1 -sqlinjection 'abc[0-9]+'http://10.10.10.10/ -
isregex regEX
bind appfw profile p1 -sqlinjection 'name'http://10.10.10.10/ -valueType
Keyword 'selec[a-z]+' -isvalueRegex regEX
```

**Configure SQL grammar based protection for HTML using the GUI**

Complete the GUI procedure to configure grammar based HTML SQL Injection detection.

1. On the navigation pane, navigate to **Security > Profiles**.
2. In the **Profiles** page, click **Add**.
3. In the **NetScaler Web App Firewall Profile** page, click **Security Checks** under **Advanced Settings**.
4. In the **Security Checks** section, go to **HTML SQL Injection** settings.
5. Click the executable icon near the check box.
6. Click **Action Settings** to access the **HMTL SQL Injection Settings** page.
7. Select the **Check using SQL Grammar** check box.
8. Click **OK**.

**Configure SQL grammar-based protection for JSON payload using the CLI**

To implement SQL grammar-based detection for the JSON payload, you must configure the “JSON-SQLInjectionGrammar”parameter in the Web App Firewall profile. By default, the parameter is disabled. All existing SQL Injection actions are supported except learning. Any new profile created after an upgrade supports SQL injection grammar and it continues to have default type as “special character or keyword”and you must explicitly enable it.

At the command prompt, type:

```
1 add appfw profile <profile-name> -type JSON -JSONSQLInjectionAction <
 action-name> -JSONSQLInjectionGrammar ON/OFF
```

**Example:**

```
add appfw profile profile1 -type JSON -JSONSQLInjectionAction Block -
JSONSQLInjectionGrammar ON
```

## Configure SQL pattern match protection and grammar-based protection for JSON payload using the CLI

If you have enabled both grammar-based and pattern-match checks, then the appliance performs grammar-based detection first and if there is SQL injection detection with the action type set to block, the request is blocked (without verifying detection using pattern-match).

**Note:**

Relaxation rules with valueType “keyword” are evaluated only when the appliance performs detection using SQL grammar.

At the command prompt, type:

```
1 add appfw profile <profile-name> -type JSON -JSONSQLInjectionAction <
 action-name> -JSONSQLInjectionGrammar ON -JSONSQLInjectionType <Any
 action other than 'None': SQLSplCharANDKeyword/
 SQLSplCharORKeyword/ SQLSplChar/ SQLKeyword>
```

**Example:**

```
add appfw profile p1 -type JSON -JSONSQLInjectionAction block -
JSONSQLInjectionGrammar ON -JSONSQLInjectionType SQLSplChar
```

## Configure SQL Injection check only grammar-based protection for JSON payload using the CLI

At the command prompt, type:

```
1 add appfw profile <profile-name> -type JSON -JSONSQLInjectionAction <
 action-name> -JSONSQLInjectionGrammar ON -JSONSQLInjectionType None
 \
```

**Example:**

```
add appfw profile p1 -type JSON -JSONSQLInjectionAction block -
JSONSQLInjectionGrammar ON -JSONSQLInjectionType None
```

## Bind url-based relaxation rules for JSON SQL grammar-based protection for JSON payload using the CLI

If your application requires you to bypass the `JSON` command injection inspection for a specific “ELEMENT” or “ATTRIBUTE” in the payload, you can configure a relaxation rule.

The `JSON` command Injection inspection relaxation rules have the following syntax. At the command prompt, type:

```
1 bind appfw profile <profile name> -JSONCMDURL <expression> -comment <
 string> -isAutoDeployed (AUTODEPLOYED | NOTAUTODEPLOYED) -state (
 ENABLED | DISABLED)
```

**Example:**

```
bind appfw profile p1 -sqlinjection abc http://10.10.10.10/
bind appfw profile p1 -sqlinjection 'abc[0-9]+'http://10.10.10.10/ -
isregex regEX
bind appfw profile p1 -sqlinjection 'name'http://10.10.10.10/ -valueType
Keyword 'selec[a-z]+' -isvalueRegex regEX
```

**Configure SQL grammar based protection for JSON payload using the GUI**

Complete the GUI procedure to configure grammar based JSON SQL Injection detection.

1. On the navigation pane, navigate to **Security > Profiles**.
2. In the **Profiles** page, click **Add**.
3. In the **NetScaler Web App Firewall Profile** page, click **Security Checks** under **Advanced Settings**.
4. In the **Security Checks** section, go to **JSON SQL Injection** settings.
5. Click the executable icon near the check box.
6. Click **Action Settings** to access the **JSON SQL Injection Settings** page.
7. Select the **Check using SQL Grammar** check box.
8. Click **OK**.

**Command injection grammar-based protection for HTML payload**

February 9, 2024

NetScaler Web App Firewall uses a pattern match approach for detecting command injection attacks in HTML payloads. The approach uses a set of pre-defined keywords and (or) special characters to detect an attack and flag it as a violation. Although this approach is effective, it can result in many false positives that lead to adding one or more relaxation rules. Especially, when a commonly used word such as “Exit” is used in an HTTP request. We can reduce false positives by implementing the command injection grammar-based protection check for the HTML payload.

In the pattern-match approach, a command injection attack is identified if a pre-defined keyword and (or) a special character is present in an HTTP request. In this case, the statement need not be a valid command injection statement. But in the grammar-based approach, a command injection



attack is detected only if a keyword or a special character is present in a command injection statement. Therefore, false-positive scenarios are reduced.

### **Command injection grammar-based protection usage scenario**

Consider a statement, “Rush towards the exit!” present in an HTTP request. Although the statement is not a valid command injection statement, the pattern-match approach detects the request as a command injection attack due to the keyword “exit”. But in the command injection grammar-based approach, the statement is not detected as a violation attack because the keywords are not present in a valid command injection statement.

### **Configure command injection grammar-based protection parameter using the CLI**

To implement command injection grammar-based detection, you must configure the “CMDInjectionGrammar” parameter in the Web App Firewall profile. By default, the parameter is disabled. All existing command injection actions are supported except learning. Any new profile created after an upgrade supports command injection grammar. The new profile continues to have the default type as “special character or keyword” and command injection grammar must be explicitly enabled.

At the command prompt, type:

```
1 add appfw profile <profile-name> - CMDInjectionAction <action-name> -
 CMDInjectionGrammar ON/OFF
```

Example:

```
1 add appfw profile profile1 - CMDInjectionAction Block -
 CMDInjectionGrammar ON
```

### **Configure command injection pattern-match protection and grammar-based protection using the CLI**

If you have enabled both grammar-based and pattern-match approaches, then the appliance performs grammar-based detection first. If there is a command injection detected with the action type set to “block”, the request is blocked (without verifying detection using pattern-match).

At the command prompt, type:

```
1 add appfw profile <profile-name> - CMDInjectionAction <action-name> -
 CMDInjectionGrammar ON - CMDInjectionType <Any action other than ‘
 None ’ : CMDSplCharANDKeyword/ CMDSplCharORKeyword/ CMDSplChar/
 CMDKeyword>
```

Example:

```
1 add appfw profile p1 -CMDInjectionAction block - CMDInjectionGrammar
 ON -CMDInjectionType CMDSplChar
```

## Configure command injection check only with grammar-based protection using the CLI

At the command prompt, type:

```
1 add appfw profile <profile-name> -CMDInjectionAction <action-name> -
 CMDInjectionGrammar ON -CMDInjectionType None
```

Example:

```
1 add appfw profile p1 -CMDInjectionAction block - CMDInjectionGrammar
 ON -CMDInjectionType None
```

## Bind relaxation rules for command injection grammar-based protection using the CLI

If your application requires you to bypass the command injection check for a specific “ELEMENT” or “ATTRIBUTE” in the HTML payload, you must configure a relaxation rule.

### Note:

Relaxation rules with the valueType as “keyword” are evaluated only when the appliance performs detection using command injection grammar.

The command injection inspection relaxation rules have the following syntax. At the command prompt, type:

```
1 bind appfw profile <name> -CMDInjection <String> [isRegex(REGEX|
 NOTREGE)] <formActionURL> [-location <location>] [-valueType (Keywor
 |SpecialString|Wildchar) [<valueExpression>][-isValueRegex (REGEX |
 NOTREGE)]]
```

Example:

```
1 bind appfw profile p1 -cmdinjection abc http://10.10.10.10/
2
3 bind appfw profile p1 -cmdinjection 'abc[0-9]+' http://10.10.10.10/ -
 isregex regEX
4
5 bind appfw profile p1 -cmdinjection 'name' http://10.10.10.10/ -
 valueType Keyword 'exi[a-z]+' -isvalueRegex regEX
```

## Configure command injection grammar-based protection using the GUI

Complete the following steps to configure grammar-based HTML command injection detection.

1. Navigate to **Security > NetScaler Web App Firewall Profile > Profiles**.
2. Select a profile and click **Edit**.
3. Go to the **Advanced Settings** section and click **Security Checks**.
4. Select the **HTML Command Injection** check box and click **Action Settings**.
5. Select the **Check using CMD Grammar** check box.
6. Select **None** from **Check Request Containing**.
7. Click **OK**.

## Relaxation and deny rules for handling HTML SQL injection attacks

October 12, 2023


When there is an incoming traffic, the violation detection logic checks for traffic violations. If no HTML SQL injection attacks are detected, the traffic is allowed to pass. But if a violation is detected, the relaxation (allow) and deny rules define how to handle the violations. If the security check is configured in the allow mode (default mode), the detected violation is blocked unless the user has explicitly configured a relaxation or allow rule.

In addition to allow mode, the security check can also be configured in deny mode and use deny rules for handling violations. If the security check is configured in this mode, the detected violations are blocked if a user has explicitly configured a deny rule. If there are no deny rules configured, then the user configured action is applied.

**Note:**

By default, the URL is a regular expression.

The following illustration explains how to allow and deny modes of operation work:

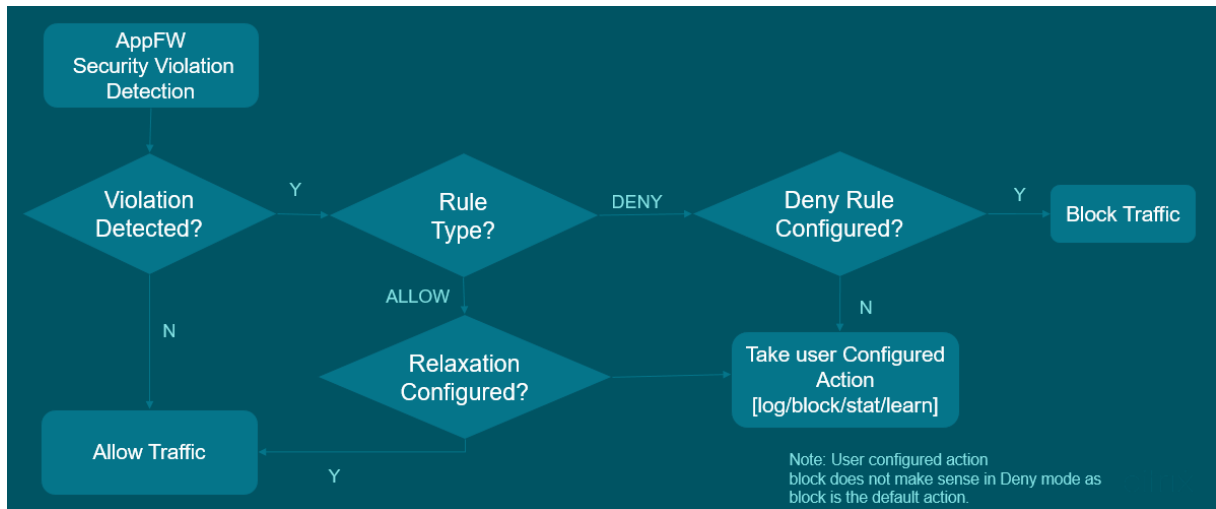

1. When a violation is detected, the relaxation (allow) and deny rules define how to handle the violations.
2. If the security check is configured in deny mode (if configured in allow mode, jump to step 5), the violation is blocked unless you have explicitly configured a deny rule.
3. If the violation matches a deny rule, the appliance blocks the traffic.
4. If the traffic violation does not match a rule, the appliance applies a user-defined action (block, reset, or drop).
5. If the security check is configured in allow mode, the Web App Firewall module checks if there are any allow rule configured.
6. If the violation matches an allow rule, the appliance allows the traffic to bypass otherwise, it is blocked.

### Configure security check-in relaxation and enforcement mode using CLI

At the command prompt, type:

```
1 set appfw profile <name> -SQLInjectionAction [block stats learn] -
 SQLInjectionRuleType [ALLOW DENY]
```

#### Example:

```
set appfw profile prof1 sqlInjectionAction block -sqlInjectionRuleType
ALLOW DENY
```

### Configure security check-in relaxation and enforcement mode using GUI

1. Navigate to **Security > NetScaler Web App Firewall** and **Profiles**.
2. On the **Profiles** page, select a profile and click **Edit**.

3. On the **NetScaler Web App Firewall Profile** page, go to the **Advanced Settings** section and click **Security Checks**.
4. In the **Security Checks** section, select **HTML SQL Injection Settings** and click **Action Settings**.
5. On the **HTML Command Injection Settings** page, select that actions to be performed as part of HTML command injection security check and update the parameters.
6. Click **OK**.

## Bind relaxation and enforcement rules to Web Application Firewall profile using CLI

At the command prompt, type:

```
1 bind appfw profile <name> -SQLInjection <string> <formActionURL>
```

### Example:

```
bind appfw profile p1 -SQLInjection field_f1 "/login.php"-RuleType
ALLOW
```

```
bind appfw profile p2 -SQLInjection field_f1 "/login.php"-RuleType
ALLOW
```

## Bind relaxation and enforcement rules to Web Application Firewall profile using GUI

1. Navigate to **Security > NetScaler Web App Firewall** and **Profiles**.
2. On the **Profiles** page, select a profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, go to **Advanced Settings** section and click **Relaxation Rules**.
4. In the **Relaxation Rule** section, select **HTML SQL Injection Settings** and click **Edit**.
5. On the **HTML SQL Injection Relaxation Rules** page, click **Add**.
6. Specify the required details.
7. Click **Create**.

### HTML SQL Injection Relaxation Rule

Enabled  
 Is Name Regex

Name\*

RegEx Editor

URL\*

RegEx Editor

Location

Value Type

Comments

Resource Id

## HTML command injection protection check

February 9, 2024

The **HTML** command injection check examines if the incoming traffic has unauthorized commands that break the system security or modify the system. If the traffic has any malicious commands when detected, the appliance blocks the request or performs the configured action.

The NetScaler Web App Firewall profile is now enhanced with a new security check for command injection attacks. When the command injection security check examines the traffic and detects any malicious commands, the appliance blocks the request or performs the configured action.

In a command injection attack, the attacker aims to run unauthorized commands on the NetScaler operation system. To achieve this, the attacker injects operating system commands using a vulnerable application. A NetScaler appliance is vulnerable to injection attacks if the application passes any unsafe data (forms, cookies, or header) to the system shell.

### How command injection protection works

1. For an incoming request, WAF examines the traffic for keywords or special characters. If the incoming request has no patterns that match any of the denied keywords or special characters, the request is allowed. Otherwise, the request is blocked, dropped, or redirected based on the configured action.
2. If you prefer to exempt a keyword or a special character from the list, you can apply a relaxation rule to bypass the security check under specific conditions.

3. You can enable logging to generate log messages. You can monitor the logs to determine whether responses to legitimate requests are getting blocked. A large increase in the number of log messages can indicate attempts to launch an attack.
4. You can also enable the statistics feature to gather statistical data about violations and logs. An unexpected surge in the stats counter might indicate that your application is under attack. If legitimate requests are getting blocked, you might have to revisit the configuration to see if you must configure the new relaxation rule or modify the existing one.

### Keywords and special characters denied for command injection check

To detect and block command injection attacks, the appliance has a set of patterns (keywords and special characters) defined in the default signature file. Following is a list of keywords blocked during command injection detection.

```

1 <commandinjection>
2 <keyword type="LITERAL" builtin="ON">7z</keyword>
3 <keyword type="LITERAL" builtin="ON">7za</keyword>
4 <keyword type="LITERAL" builtin="ON">7zr</keyword>
5 ...
6 </commandinjection>
```

Special characters defined in the signature file are:

```
| ; & $ > < '\ ! >> #
```

### Configuring command injection check by using the CLI

In the command line interface, you can use either the set the profile command or the add the profile command to configure the command injection settings. You can enable the block, log, and stats actions. You must also set the key words and string characters that you want to detect in the payloads.

At the command prompt, type:

```
set appfw profile <profile-name> -cmdInjectionAction <action-name> -
CMDInjectionType <CMDInjectionType>]
```

#### Note:

By default, the command injection action is set as “None.” Also, the default command injection type is set as `CmdSpLCharANDKeyWord`.

#### Example:

```
set appfw profile profile1 -cmdInjectionAction block -CMDInjectionType
CmdSpLChar
```

Where, the available command injection actions are:

- None - Disable command injection protection.
- Log - Log command injection violations for the security check.
- Block - blocks traffic that violates the command injection security check.
- Stats - Generates statistics for command injection security violations.

Where, the available command injection types are:

- Cmd SplChar. Checks special characters
- CmdKeyWord. Checks command injection Keywords
- CmdSplCharANDKeyWord. Checks special characters and command injection. Keywords and blocks only if both are present.
- CmdSplCharORKeyWord. Checks special characters and command injection Keywords and blocks if either of them is found.

## Configuring relaxation rules for command injection protection check

If your application requires you to bypass the command injection inspection for a specific ELEMENT or ATTRIBUTE in the payload, you can configure a relaxation rule.

The command Injection inspection relaxation rules have the following syntax:

```
bind appfw profile <profile name> -cmdInjection <string> <URL> -
isregex <REGEX/NOTREGEX>
```

### Example for relaxation rule for Regex in header

```
bind appfw profile sample -CMDInjection hdr "http://10.10.10.10/"-
location header -valueType Keyword '[a-z]+grep'-isvalueRegex REGEX
```

As a result, the injection exempts the command injection check allows header `hdr` containing variants of “grep.”

### Example for relaxation rule with valueType as regex in cookie

```
bind appfw profile sample -CMDInjection ck_login "http://10.10.10.10/"-
location cookie -valueType Keyword 'pkg[a-z]+'-isvalueRegex REGEX
```

## Configuring command injection check by using NetScaler GUI

Complete the following steps to configure the command injection check.



1. Navigate to **Security > NetScaler Web App Firewall and Profiles**.
2. On the **Profiles** page, select a profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, go to the **Advanced Settings** section and click **Security Checks**.
4. In the **Security Checks** section, select **HTML Command Injection** and click **Action** settings.
5. In the **HTML Command Injection Settings** page, set the following parameters:
  - a) Actions. Select one or more actions to perform for command injection security check.
  - b) Check Request Containing. Select a command injection pattern to check if the incoming request has the pattern.
6. Click **OK**.

## View or customize command injection patterns by using the GUI

You can use the GUI to view or customize the **HTML** command injection patterns.

The default command injection patterns are specified in default signatures file. If you do not bind any signature object to your profile, the default HTML command injection patterns specified in the default signatures object will be used by the profile for the command injection security check processing. The rules and patterns, specified in the default signatures object, are read-only. You cannot edit or modify them. If you want to modify or change these patterns, make a copy of the default sSignatures object to create a User-Defined signature object. Make changes in the command injection patterns in the new User-defined signature object and use this signature object in your profile that is processing the traffic for which you want to use these customized patterns.

For more information, see [Signatures](#)

To view the default command injection patterns by using the GUI:

1. Navigate to **Application Firewall > Signatures**, select **\*Default Signatures**, and click **Edit**.
2. Click **Manage CMD/SQL/XSS patterns**. The **CMD/SQL/XSS Paths (read-only)** table shows patterns pertaining to **CMD/SQL/XSS** injection:

| CMD/SQL/XSS Paths (read-only) |                                                                       |        |
|-------------------------------|-----------------------------------------------------------------------|--------|
| Manage Elements               |                                                                       |        |
| <input type="checkbox"/>      | PATHS                                                                 | #ITEMS |
| <input type="checkbox"/>      | commandinjection/keyword                                              | 286    |
| <input type="checkbox"/>      | commandinjection/specialstring                                        | 12     |
| <input type="checkbox"/>      | injection (delimiter=not_alphanum, type=SQL)/keyword                  | 134    |
| <input type="checkbox"/>      | injection (delimiter=not_alphanum, type=SQL)/specialstring            | 3      |
| <input type="checkbox"/>      | injection (delimiter=not_alphanum, type=SQL)/transformrules/transform | 5      |
| <input type="checkbox"/>      | injection (delimiter=not_alphanum, type=SQL)/wildchar                 | 5      |
| <input type="checkbox"/>      | xss/allowed/attribute                                                 | 52     |
| <input type="checkbox"/>      | xss/allowed/tag                                                       | 47     |
| <input type="checkbox"/>      | xss/denied/pattern                                                    | 179    |

OK

1. Select a row and click **Manage Elements** to display the corresponding command injection patterns (keywords, special strings, transformation rules, or wildcard characters) used by the Web App Firewall command injection check.

To customize a command injection pattern by using the GUI

You can edit the user-defined signature object to customize the **CMD** key words, special strings, and wildcard characters. You can add new entries or remove the existing ones. You can modify the transformation rules for the command injection special strings.

1. **Navigate to Application Firewall > Signatures**, highlight the target User-defined signature, and click **Add**. Click **Manage CMD/SQL/XSS patterns**.
2. In the **Manage CMD/SQL/XSS paths** page, select the target CMD injection row.
3. Click **Manage Elements**, **Add**, or **Remove** a command injection element.

**Warning:**

You must be careful before you remove or modify any default command injection element, or delete the CMD path to remove the entire row. The signature rules and the command injection security check rely on these elements for detecting command injection attacks to protect your applications. Customizing the SQL patterns can make your application vulnerable to command injection attacks if the required pattern is removed during editing.

## Viewing command injection traffic and violation statistics

The **NetScaler Web App Firewall Statistics** page shows security traffic and security violation details in a tabular or graphical format.

To view security statistics by using the command interface.

At the command prompt, type:

```
stat appfw profile profile1
```

---

| Appfw profile Traffic Statistics | Rate (/s) | Total |
|----------------------------------|-----------|-------|
| Requests                         | 0         | 0     |
| Request Bytes                    | 0         | 0     |
| Responses                        | 0         | 0     |
| Response Bytes                   | 0         | 0     |
| Aborts                           | 0         | 0     |
| Redirects                        | 0         | 0     |
| Long Term Ave Response Time (ms) | –         | 0     |
| Recent Ave Response Time (ms)    | –         | 0     |

---

### HTML/XML/JSON Violation

| Statistics                | Rate (/s) | Total |
|---------------------------|-----------|-------|
| Start URL                 | 0         | 0     |
| Deny URL                  | 0         | 0     |
| Referer header            | 0         | 0     |
| Buffer overflow           | 0         | 0     |
| Cookie consistency        | 0         | 0     |
| Cookie hijacking          | 0         | 0     |
| CSRF form tag             | 0         | 0     |
| HTML Cross-site scripting | 0         | 0     |
| HTML SQL injection        | 0         | 0     |
| Field format              | 0         | 0     |

HTML/XML/JSON Violation

| Statistics                     | Rate (/s) | Total |
|--------------------------------|-----------|-------|
| Field consistency              | 0         | 0     |
| Credit card                    | 0         | 0     |
| Safe object                    | 0         | 0     |
| Signature Violations           | 0         | 0     |
| Content Type                   | 0         | 0     |
| JSON Denial of Service         | 0         | 0     |
| JSON SQL injection             | 0         | 0     |
| JSON Cross-Site Scripting      | 0         | 0     |
| File Upload Types              | 0         | 0     |
| Infer Content Type XML Payload | 0         | 0     |
| HTML CMD Injection             | 0         | 0     |
| XML Format                     | 0         | 0     |
| XML Denial of Service (XDoS)   | 0         | 0     |
| XML Message Validation         | 0         | 0     |
| Web Services Interoperability  | 0         | 0     |
| XML SQL Injection              | 0         | 0     |
| XML Cross-Site Scripting       | 0         | 0     |
| XML Attachment                 | 0         | 0     |
| SOAP Fault Violations          | 0         | 0     |
| XML Generic Violations         | 0         | 0     |
| Total Violations               | 0         | 0     |

---

| HTML/XML/JSON Log Statistics | Rate (/s) | Total |
|------------------------------|-----------|-------|
| Start URL logs               | 0         | 0     |
| Deny URL logs                | 0         | 0     |
| Referer header logs          | 0         | 0     |
| Buffer overflow logs         | 0         | 0     |
| Cookie consistency logs      | 0         | 0     |

| HTML/XML/JSON Log Statistics             | Rate (/s) | Total |
|------------------------------------------|-----------|-------|
| Cookie hijacking logs                    | 0         | 0     |
| CSRF from tag logs                       | 0         | 0     |
| HTML cross-site scripting logs           | 0         | 0     |
| HTML cross-site scripting transform logs | 0         | 0     |
| HTML SQL Injection logs                  | 0         | 0     |
| HTML SQL transform logs                  | 0         | 0     |
| Field format logs                        | 0         | 0     |
| Field consistency logs                   | 0         | 0     |
| Credit cards                             | 0         | 0     |
| Credit card transform logs               | 0         | 0     |
| Safe object logs                         | 0         | 0     |
| Signature logs                           | 0         | 0     |
| Content Type logs                        | 0         | 0     |
| JSON Denial of Service logs              | 0         | 0     |
| JSON SQL injection logs                  | 0         | 0     |
| JSON Cross-Site Scripting logs           | 0         | 0     |
| File upload types logs                   | 0         | 0     |
| Infer Content Type XML Payload L         | 0         | 0     |
| HTML Command Injection logs              | 0         | 0     |
| XML Format logs                          | 0         | 0     |
| XML Denial of Service(XDoS) logs         | 0         | 0     |
| XML Message Validation logs              | 0         | 0     |
| WSI logs                                 | 0         | 0     |
| XML SQL Injection logs                   | 0         | 0     |
| XML cross-site scripting logs            | 0         | 0     |
| XML Attachment logs                      | 0         | 0     |
| SOAP Fault logs                          | 0         | 0     |

---

| HTML/XML/JSON Log Statistics | Rate (/s) | Total |
|------------------------------|-----------|-------|
| XML Generic logs             | 0         | 0     |
| Total log messages           | 0         | 0     |

---

**Server Error Response****Statistics Rate (/s) > Total**

---

|                               |   |   |
|-------------------------------|---|---|
| HTTP Client Errors (4xx Resp) | 0 | 0 |
| HTTP Server Errors (5xx Resp) | 0 | 0 |

---

**Viewing HTML command injection statistics by using the NetScaler GUI**

Complete the following steps to view the command injection statistics:

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select a Web App Firewall profile and click **Statistics**.
3. The **NetScaler Web App Firewall Statistics** page displays the HTML command injection traffic and violation details.
4. You can select **Tabular View** or switch to **Graphical View** to display the data in a tabular or graphical format.

**Custom keyword support for HTML payload**

February 9, 2024

Starting from NetScaler release 13.1 build 27.xx, you can add keywords of your choice and check if these configured keywords are present in the HTML payload.

SQL injection and command injection have a predefined set of keywords or patterns that they look for in the incoming requests. These predefined sets of keywords might not cover all the keywords as per your requirement and might lead to an increase in the number of false positives. With this feature, you can add keywords that are not covered in the SQL injection and command injection checks and therefore reduce the false positives.

After adding the keywords, you can configure the NetScaler appliance to check if the added keywords are detected in the incoming requests. You can then configure the NetScaler appliance to do one of the following actions:

- **None** –No action is taken. This action is the default.
- **Log** - Log all requests that match the URL and have the configured keywords.
- **Block** –Block all requests that match the URL and have the configured keywords.
- **Stats** –Increment the log counter for each request that matches the URL and has the configured keywords.

## Add custom keywords using the CLI

Adding a custom keyword using the CLI involves the following steps:

1. Configure a web application firewall profile and define an action when the custom keyword is detected in the incoming request.

```
1 set appfw profile <profile-name> -blockKeywordAction (block | log
| stats | none)
```

By default, the `-blockKeywordAction` is set to `none`.

Example:

```
1 set appfw profile test_profile -blockKeywordAction none
```

2. Bind the web application firewall profile with your custom keywords.

```
1 bind appfw profile <profile_name> -blockKeyword <keyword_name> -
BlockKeywordType <literal|PCRE > -fieldName <field_name> -
formURL <URL> -isFieldNameRegex <REGEX|NOTREGEX> -state <enable
/disable> -comment <text>
```

Example:

To add **blockword** as the custom keyword and bind it to **test\_profile**, run the following command:

```
1 bind appfw profile test_profile -blockKeyword "blockword"
BlockKeywordType literal -fieldName "firstname" -formURL "/
signup.php" -state enable
```

### Note:


You can enter an URL or an FQDN in the URL parameter. The FQDN supports both HTTP and HTTPS protocol.

## Add custom keywords using the GUI

1. Navigate to **Security > NetScaler Web App Firewall Profile > Profiles**.
2. Select a profile and click **Edit**.

3. Go to the **Advanced Settings** section and click **Deny Rules**.
4. Select **Block Keyword** and click **Edit**.
5. Click **Add** and set the following parameters:

- Enable
- Block Keyword
- Block Keyword Type
- Field Name
- URL
- Is Regex
- Comments
- **Resource ID**

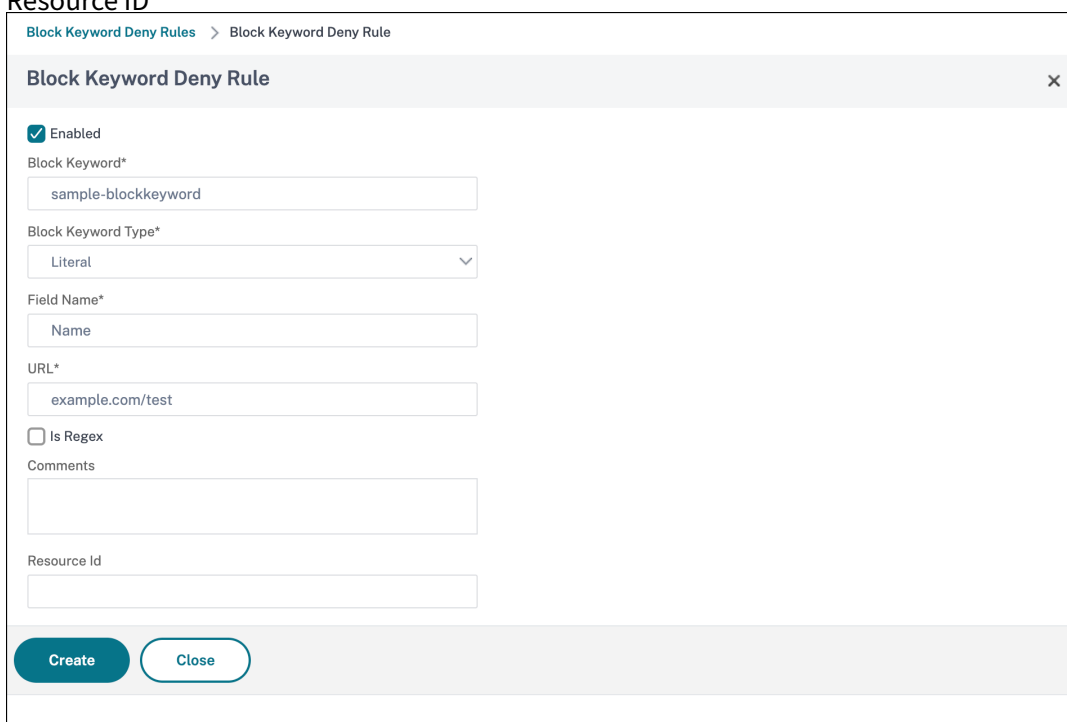

The screenshot shows a configuration window titled "Block Keyword Deny Rule" with a close button (X) in the top right corner. The window contains the following fields and options:

- Enabled
- Block Keyword\*:
- Block Keyword Type\*:  (dropdown menu)
- Field Name\*:
- URL\*:
- Is Regex
- Comments:
- Resource Id:

At the bottom of the form, there are two buttons: "Create" (a dark teal button) and "Close" (a light teal button).

6. Click **Create**. The custom keyword that you added is listed in the **Block Keyword Deny Rules** page.
7. Go to the **Advanced Settings** section and click **Security Checks**.
8. Select **Block Keyword** and click **Action Settings**.
9. Select the required actions and click **OK**.

## View custom keyword statistics using the CLI

To view the custom keyword statistics, type the following command at the command prompt:

```
1 stat appfw profile <profile name>
```



## Example

```
1 stat appfw profile test_profile
```

## View custom keyword statistics the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select a **Web App Firewall profile** and click **Statistics**. The **NetScaler Web App Firewall Statistics** page displays the custom keyword traffic and violation details.
3. You can select **Tabular View** or switch to **Graphical View** to display the data in a tabular or graphical format.

## XML external entities (XXE) Attack Protection

February 9, 2024

The XML external entities (XXE) attack protection examines if an incoming payload has any unauthorized XML input regarding entities outside the trusted domain where the web application resides. The XXE attack occurs if you have a weak XML parser that parses an XML payload with input containing references to external entities.

In a NetScaler appliance, if the XML parser is improperly configured, the impact of exploiting the vulnerability can be dangerous. It allows an attacker to read sensitive data on the web server. Perform the denial of service attack and so forth. Therefore, it is important protect the appliance from XXE attacks. Web Application Firewall is able to protect the appliance from XXE attacks as long as the content-type is identified as XML. To prevent a malicious user from bypassing this protection mechanism, WAF blocks an incoming request if the “inferred” content-type in the HTTP headers does not match with the content-type of the body. This mechanism prevents the XXE attack protection bypass when a whitelisted default or non-default content-type is used.

Some of the potential XXE threats that affect a NetScaler appliance are:

- Confidential data leaks
- Denial-of-service (DOS) attacks
- server side forgery requests
- Port scanning

## Configure XML external entities (XXE) injection protection

To configure XML external entities (XXE) check by using the command interface:

In the command line interface, you can add or modify the application firewall profile command to configure the **XXE** settings. You can enable the block, log, and stats actions.

At the command prompt, type:

```
set appfw profile <name> [-inferContentTypeXmlPayloadAction <inferContentTypeX
<block | log | stats | none>]
```

Note:

By default, the XXE action is set as “none.”

### Example:

```
set appfw profile profile1 -inferContentTypeXmlPayloadAction Block
```

Where, action types are:

**Block:** The request is blocked without any exception to the urls in the request.

**Log:** If a mismatch between content-type in an HTTP request header and payload occurs, information about the violating request must be contained in the log message.

**Stats:** If a mismatch in the content-types is detected, the corresponding statistics for this violation type is incremented.

**None:** No action is taken if mismatch in content-types is detected. None cannot be combined with any other action type. Default action is set to None.

## Configure XXE injection check by using NetScaler GUI

Complete the following steps to configure the XXE injection check.

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. On the **Profiles** page, select a profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, go to the **Advanced Settings** section and click **Security Checks**.
4. In the **Security Checks** section, select **Infer Content Type XML Payload** and click **Action** settings.
5. In the Infer Content Type XML Payload Settings page, set the following parameters:
  - a) **Actions.** Select one or more actions to perform for XXE injection security check.
6. Click **OK**.

## Viewing XXE injection traffic and violation statistics

The NetScaler Web App Firewall Statistics page shows security traffic and security violation details in a tabular or graphical format.

To view security statistics by using the command interface.

At the command prompt, type:

```
stat appfw profile profile1
```

## Viewing XXE injection statistics by using the NetScaler GUI

Complete the following steps to view the XXE injection statistics:

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select a Web App Firewall profile and click **Statistics**.
3. The **NetScaler Web App Firewall Statistics** page displays the XXE command injection traffic and violation details.
4. You can select **Tabular View** or switch to **Graphical View** to display the data in a tabular or graphical format.

## Buffer overflow check

May 2, 2023

The Buffer Overflow check detects attempts to cause a buffer overflow on the web server. If the Web App Firewall detects that the URL, cookies, or header are longer than the configured length, it blocks the request because it can cause a buffer overflow.

The Buffer Overflow check prevents attacks against insecure operating-system or web-server software that can crash or behave unpredictably when it receives a data string that is larger than it can handle. Proper programming techniques prevent buffer overflows by checking incoming data and either rejecting or truncating overlong strings. Many programs, however, do not check all incoming data and are therefore vulnerable to buffer overflows. This issue especially affects older versions of web-server software and operating systems, many of which are still in use.

The Buffer Overflow security check allows you to configure the **Block**, **Log**, and **Stats** actions. In addition, you can also configure the following parameters:

- **Maximum URL Length.** The maximum length the Web App Firewall allows in a requested URL. Requests with longer URLs are blocked. **Possible Values:** 0–65535. **Default:** 1024

- **Maximum Cookie Length.** The maximum length the Web App Firewall allows for all cookies in a request. Requests with longer cookies trigger the violations. **Possible Values:** 0–65535. **Default:** 4096
- **Maximum Header Length.** The maximum length the Web App Firewall allows for HTTP headers. Requests with longer headers are blocked. **Possible Values:** 0–65535. **Default:** 4096
- **Query string length.** Maximum length allowed for query string in an incoming request. Requests with longer queries are blocked. **Possible Values:** 0–65535. **Default:** 1024
- **Total request length.** Maximum request length allowed for an incoming request. Requests with longer length are blocked. **Possible Values:** 0–65535. **Default:** 24820

### Using the command line to configure the Buffer Overflow security check

To configure Buffer Overflow security check actions and other parameters by using the command line

At the command prompt, type:

```
add appfw profile <name> -bufferOverflowMaxURLLength <positive_integer>
> -bufferOverflowMaxHeaderLength <positive_integer> - bufferOverflowMaxCookieL
<positive_integer> -bufferOverflowMaxQueryLength <positive_integer>
-bufferOverflowMaxTotalHeaderLength <positive_integer>
```

#### Example:

```
add appfw profile profile1 -bufferOverflowMaxURLLength 7000 -bufferOverflowMax
7250 - bufferOverflowMaxCookieLength 7100 -bufferOverflowMaxQueryLength
7300 -bufferOverflowMaxTotalHeaderLength 7300
```

### Configure buffer overflow security check by using the NetScaler GUI

1. Navigate to **Security > Web App Firewall** and **Profiles**.
2. On the **Profiles** page, select a profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, go to **Advanced Settings** section and click **Security Checks**.
4. In **Security Checks** section, select **Buffer Overflow** and click **Action Settings**.
5. In the **Buffer Overflow Settings** page, set the following parameters.
  - a. **Actions.** Select one or more actions to perform for command injection security check.
  - b. **Maximum URL Length.** Maximum length, in characters, for URLs on your protected websites. Requests with longer URLs are blocked.
  - c. **Maximum Cookie Length.** Maximum length, in characters, for cookies sent to your protected

websites. Requests with longer cookies are blocked.

d. Maximum Header Length. Maximum length, in characters, for HTTP headers in requests sent to your protected websites. Requests with longer headers are blocked.

e. Maximum Query Length. Maximum length, in bytes, for query string sent to your protected websites. Requests with longer query strings are blocked.

f. Maximum Total Header Length. Maximum length, in bytes, for the total HTTP header length in requests sent to your protected websites. The minimum value of this and maxHeaderLen in httpProfile will be used. Requests with longer length are blocked.

6. Click **OK** and **Close**.

**Buffer Overflow Settings**

**Actions**

Block  Log  Stats

**Parameters**

Maximum URL Length\*

Maximum Cookie Length\*

Maximum Header Length\*

Maximum Query Length\*

Maximum Total Header Length\*

## Using the Log Feature with the Buffer Overflow Security Check

When the log action is enabled, the Buffer Overflow security check violations are logged in the audit log as **APPFW\_BUFFEROVERFLOW\_URL**, **APPFW\_BUFFEROVERFLOW\_COOKIE**, and **APPFW\_BUFFEROVERFLOW\_HDR** violations. The Web App Firewall supports both Native and CEF log formats. You can also send the logs to a remote syslog server.

If you use the GUI to review the logs, you can use the click-to-deploy feature to apply relaxations indicated by the logs.

To access the log messages by using the command line

Switch to the shell and tail the ns.logs in the **/var/log/** folder to access the log messages pertaining to the Buffer overflow violations:

```

1 > **Shell**
2 > **tail -f /var/log/ns.log | grep APPFW_BUFFEROVERFLOW**

```

Example of a CEF log message showing `bufferOverflowMaxCookieLength` violation in non-block mode

```

1 Oct 22 17:35:20 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
.0|APPFW|**APPFW_BUFFEROVERFLOW_COOKIE**|6|src=10.217.253.62
geolocation=Unknown spt=41198 method=GET request=http://aaron.
stratum8.net/FFC/sc11.html **msg=Cookie header length(43) is greater
than maximum allowed(16).** cn1=119 cn2=465 cs1=owa_profile cs2=
PPE1 cs3=ww000b+cJ2ZRbstZpyeNXIqLj7Y0001 cs4=ALERT cs5=2015 **act=
not blocked**

```

Example of a CEF log message showing `bufferOverflowMaxURLLength` violation in non-block mode

```

1 Oct 22 18:39:56 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
.0|APPFW|**APPFW_BUFFEROVERFLOW_URL**|6|src=10.217.253.62
geolocation=Unknown spt=19171 method=GET request=http://aaron.
stratum8.net/FFC/sc11.html **msg=URL length(39) is greater than
maximum allowed(20).** cn1=707 cn2=402 cs1=owa_profile cs2=PPE0 cs3=
kW49GcKbnwKByByi3+jjeNzfgWa80000 cs4=ALERT cs5=2015 **act=not blocked
**

```

Example of a Native Format Log message showing `bufferOverflowMaxHeaderLength` violation in block mode

```

1 Oct 22 18:44:00 <local0.info> 10.217.31.98 10/22/2015:18:44:00 GMT ns
0-PPE-2 : default APPFW **APPFW_BUFFEROVERFLOW_HDR** 155 0 :
10.217.253.62 374-PPE2 khhBEeY4DB8V2D3H2sMLkXmfWnA0002 owa_profile
**Header(User-Agent) length(82) is greater than maximum allowed(10)
** : http://aaron.stratum8.net/ **<blocked>**

```

To access the log messages by using the GUI

The GUI includes a useful tool (**Syslog Viewer**) for analyzing the log messages. You have multiple options for accessing the Syslog Viewer:

- Navigate to the **Application Firewall > Profiles**, select the target profile, and click **Security Checks**. Highlight the **Buffer Overflow** row and click **Logs**. When you access the logs directly from the Buffer Overflow Security Check of the profile, the GUI filters out the log messages and displays only the logs pertaining to these security check violations.
- You can also access the Syslog Viewer by navigating to **NetScaler > System > Auditing**. In the Audit Messages section, click the **Syslog messages** link to display the Syslog Viewer, which displays all log messages, including other security check violation logs. This is useful for debugging when multiple security check violations might be triggered during request processing.
- Navigate to **Application Firewall > policies > Auditing**. In the **Audit Messages** section, click the

**Syslog messages** link to display the Syslog Viewer, which displays all log messages, including other security check violation logs.

The XML based Syslog Viewer provides various filter options for selecting only the log messages that are of interest to you. To select log messages for the **Buffer Overflow** check, filter by selecting **APPFW** in the drop-down list options for **Module**. The **Event Type** list offers three options, **APPFW\_BUFFEROVERFLOW\_URL**, **APPFW\_BUFFEROVERFLOW\_COOKIE**, and **APPFW\_BUFFEROVERFLOW\_HDR**, to view all the log messages pertaining to buffer overflow security check. You can select one or more options to further refine your selection. For example, if you select the **APPFW\_BUFFEROVERFLOW\_COOKIE** check box and click the **Apply** button, only log messages pertaining to the **Buffer Overflow security** check violations for the Cookie header appear in the Syslog Viewer. If you place the cursor in the row for a specific log message, multiple options, such as **Module**, **Event Type**, **Event ID**, and **Client IP**, appear below the log message. You can select any of these options to highlight the corresponding information in the log message.

**Click-to-Deploy:** The GUI provides click-to-deploy functionality, which is currently supported only for the buffer overflow log messages pertaining to the **URL Length** violations. You can use the Syslog Viewer to not only view the triggered violations, but also run informed decisions based on the observed lengths of the blocked messages. If the current value is too restrictive and is triggering false positives, you can select a message and deploy it to replace the current value with the URL length value seen in the message. The log messages must be in CEF log format for this operation. If the relaxation can be deployed for a log message, a check box appears at the right edge of the **Syslog Viewer** box in the row. Select the check box, and then select an option from the **Action** list to deploy the relaxation. **Edit & Deploy**, **Deploy**, and **Deploy All** are available as **Action** options. You can use the **APPFW\_BUFFEROVERFLOW\_URL** filter to isolate all the log messages pertaining to the configured URL length violations.

If you select an individual log message, all three action options **Edit & Deploy**, **Deploy**, and **Deploy All** are available. If you select **Edit & Deploy**, the **Buffer Overflow settings** dialogue is displayed. The new URL length that was observed in the request is inserted into the **Maximum URL length input** field. If you click **Close** without any edits, the current configured values remain unchanged. If you click the **OK** button, the new value of the Maximum URL length replaces the previous value.

#### Note

The **block**, **log** and **stats** action check boxes are unchecked in the displayed **Buffer Overflow settings** dialogue, and need to be reconfigured if you select the **Edit & Deploy** option. Make sure to enable these check boxes before clicking **OK**, otherwise the new URL length gets configured but the actions are set to **none**.

If you select the check boxes for multiple log messages, you can use the **Deploy** or **Deploy All** option. If the deployed log messages have different URL lengths, the configured value gets replaced by the highest URL Length value observed in the selected messages. Deploying the rule results only

in changing the **bufferOverflowMaxURLLength** value. Configured actions are retained and remain unchanged.

To use Click-to-Deploy functionality in the GUI

1. In the Syslog Viewer, select **APPFW** in the **Module** options.
2. Enable the **APPFW\_BUFFEROVERFLOW\_URL** check box as the **Event Type** to filter corresponding log messages.
3. Enable the check box to select the rule.
4. Use the **Action** drop-down list of options to deploy the relaxation.
5. Navigate to **Application Firewall > Profiles**, select the target profile, and click **Security Checks** to access the **Buffer Overflow** settings pane to verify that the **Maximum URL Length** value is updated.

### Statistics for the Buffer Overflow violations

When the stats action is enabled, the counter for the Buffer Overflow Security Check is incremented when the Web App Firewall takes any action for this security check. The statistics are collected for Rate and Total count for Traffic, Violations, and Logs. The size of an increment of the log counter can vary depending on the configured settings. For example, if the block action is enabled, a request for a page that contains three Buffer Overflow violations increments the stats counter by one, because the page is blocked when the first violation is detected. However, if block is disabled, processing the same request increments the stat counter for violations because each violation generates a separate log message.

To display Buffer Overflow Security Check statistics by using the command line

At the command prompt, type:

```
> sh appfw stats
```

To display stats for a specific profile, use the following command:

```
> stat appfw profile <profile name>
```

To display Buffer Overflow statistics by using the GUI

1. Navigate to **System > Security > Application Firewall**.
2. In the right pane, access the **Statistics** Link.
3. Use the scroll bar to view the statistics about Buffer Overflow violations and logs. The statistics table provides real-time data and is updated every 7 seconds.



## Highlights

- The buffer overflow security check allows you to configure limits to enforce the maximum length of allowed URLs, Cookies, and Headers.
- **Block, Log** and **Stats** actions enable you to monitor the traffic and configure optimal protection for your application.
- Syslog viewer enables you to filter and view all the log messages pertaining to buffer overflow violations.
- **Click-to-Deploy** functionality is supported for the **bufferOverflowMaxURLLength** violations. You can select and deploy an individual rule, or you can select multiple log messages to tweak and relax the current configured value of the maximum allowed length of the URL. The highest value of the URL from the selected group is set as the new value, to allow all these requests that are currently flagged as violations.
- The Web App Firewall now evaluates individual cookies when inspecting the incoming request. If length of any one cookie received in the Cookie header exceeds the configured **BufferOverflowMaxCookieLength**, the Buffer Overflow violation is triggered.

### Important

In release 10.5.e (in a few interim enhancements builds prior to 59.13xx.e build) and in the 11.0 release (in builds prior to 65.x), Web App Firewall processing of the Cookie header was changed. In those releases, every cookie is evaluated individually, and if the length of any one cookie received in the Cookie header exceeds the configured **BufferOverflowMaxCookieLength**, the Buffer Overflow violation is triggered. As a result of this change, requests that were blocked in 10.5 and earlier release builds might be allowed, because the length of the entire cookie header is not calculated for determining the cookie length. \*\* In some situations, the total cookie size forwarded to the server might be larger than the accepted value, and the server might respond with “400 Bad Request”.

This change has been reverted. The behavior in the 10.5.e ->59.13xx.e and subsequent 10.5.e enhancement builds in addition to 11.0 release 65.x and subsequent builds is now similar to that of the non-enhancement builds of release 10.5. The entire raw Cookie header is now considered when calculating the length of the cookie. Surrounding spaces and the semicolon (;) characters separating the name-value pairs are also included in determining the cookie length.

## Web App Firewall support for Google web toolkit

May 2, 2023

**Note:** This feature is available in NetScaler release 10.5.e.

Web servers following Google Web Toolkit (GWT) Remote Procedure Call (RPC) mechanisms can be secured by the NetScaler Web App Firewall without a need for any specific configuration to enable the GWT support.

## What is GWT

The GWT is used for building and optimizing complex high-performance web applications by people who do not have expertise in XMLHttpRequest, and JavaScript. This open source, free development toolkit is used extensively for developing small and large scale applications and is quite frequently used for displaying browser based data such as search results for flights, hotels, and so on. The GWT provides a core set of Java APIs and widgets for writing optimized JavaScript scripts that can run on most browsers and mobile devices. The GWT RPC framework makes it easy for the client and server components of the web application to exchange Java objects over HTTP. GWT RPC services are not the same as web services based on SOAP or REST. They are simply a lightweight method for transferring data between the server and the GWT application on the client. GWT handles serialization of the Java objects exchanging the arguments in the method calls and the return value.

For popular websites that use GWT, see

<https://www.quora.com/What-web-applications-use-Google-Web-Toolkit-%28GWT%29>

## How a GWT request works

The GWT RPC request is pipe delimited and has variable number of arguments. It is carried as a payload of HTTP POST and has the following values:

1. Content-type = text/x-gwt-rpc. Charset can be any value.
2. Method = POST.

Both GET and POST HTTP requests are considered valid GWT requests if content-type is “text/x-gwt-rpc”. Query strings are now supported as part of GWT requests. Configure the “InspectQueryContentTypes” parameter of the App Firewall profile to “OTHER” to examine the request query portion for content-type “text/x-gwt-rpc”.

The following example shows a valid payload for a GWT request:

```
1 5|0|8|http://localhost:8080/test/|16878339F02B83818D264AE430C20468| com
 .test.client.TestService|testMethod|java.lang.String|java.lang.
 Integer| myInput1|java.lang.Integer/3438268394|1|2|3|4|2|5|6|7|8|1|
```

The request can be divided into three parts:

### a) Header: 5|0|8|

The first 3 digits 5|0|8| in the above request, represent “version, subversion, and size of table”, respectively. These must be positive integers.

**b) String Table:**

```
http://localhost:8080/test/|16878339F02B83818D264AE430C20468| com.
test.client.TestService|testMethod|java.lang.String|java.lang.Integer
|myInput1| java.lang.Integer/3438268394|
```

The members of the above pipe delimited string table contain the user-provided inputs. These inputs are parsed for the Web App Firewall checks and are identified as follows:

- 1st: `http://localhost:8080/test/`  
This is the Request URL.
- 2nd: `16878339F02B83818D264AE430C20468`  
Unique HEX identifier. A request is considered malformed if this string has non-hex characters.
- 3rd: `com.test.client.TestService`  
Service Class name
- 4th: `testMethod`  
Service method name
- 5th onwards: `java.lang.String|java.lang.Integer|myInput1|java.lang.Integer/3438268394`  
Data-types and data. Non-primitive data-types are specified as  
<container>.<sub-cntr>.name/<integer><identifier>

**c) Payload: 1|2|3|4|2|5|6|7|8|1|**

The payload consists of references to the elements in the string table. These integer values cannot be larger than the number of elements in the string table.

**Web App Firewall protection for GWT applications**

The Web App Firewall understands and interprets GWT RPC requests, inspects the payload for security check violations, and takes specified actions.

The Web App Firewall headers and cookies checks for GWT requests are similar to those for other request formats. After appropriate URL decoding and charset conversion, all the parameters in the string table are inspected. The GWT request body does not contain field names, just the field values. The input values can be validated against the specified format by using the Web App Firewall Field

Format check, which can also be used to control the length of the input. The **Cross-site Scripting** and **SQL Injection** attacks in the inputs can be easily detected and thwarted by the Web App Firewall.

**Learning and relaxation rules:** Learning and deployment of relaxation rules are supported for GWT requests. Web App Firewall rules are in the form of <actionURL> <fieldName> mapping. The GWT request format does not have the field names and thus requires special handling. The Web App Firewall inserts dummy field names in the learned rules that can be deployed as relaxation rules. The -isRegex flag works as it does for non-GWT rules.

- Action URL:

Multiple services responding to an RPC can be configured on the same web server. The HTTP request has the URL of the web server, not of the actual service handling the RPC. Therefore, relaxation is not applied on the basis of the HTTP request URL, because that would relax all the services on that URL for the target field. For GWT requests, the Web App Firewall uses the URL of the actual service found in the GWT payload, in the fourth field in the string table.

- Field name:

Since the GWT request body contains only field values, the Web App Firewall inserts dummy field names such as 1, 2, and so on when recommending learned rules.

#### Example of a GWT learned rule

```

1 POST /abcd/def/gh HTTP/1.1
2 Content-type: text/x-gwt-rpc
3 Host: 10.217.222.75
4 Content-length: 157
5
6 5|0|8|http://localhost:8080/acdtest/|16878339
 F02Baf83818D264AE430C20468|
7 com.test.client.TestService|testMethod|java.lang.String%3b|java.
 lang.Integer|onblur|
8
9 The learn data will be as follows:
10 > sh learningdata pr1 crossSiteScripting
11 Profile: pr1 SecurityCheck: crossSiteScripting
12 1) Url: http://localhost:8080/acdtest/ >> From GWT Payload.
13 Field: 10
14 Hits: 1
15 Done

```

#### Example of a GWT relaxation rule

```
bind appfw profile pr1 -crossSiteScripting 1 abcd -isregex
NOTREGEX
```

**Log Messages:** The Web App Firewall generates log messages for the security check violations that are detected in the GWT requests. A log message generated by a malformed GWT request contains the string “GWT” for easy identification.

**Example of a Log message for malformed GWT request:**

```
Dec 5 21:48:02 <local0.notice> 10.217.31.247 12/05/2014:21:48:02 GMT
ns 0-PPE-0 : APPFW Message 696 0 : "GWT RPC request with malformed
payload. <blocked>"
```

**Difference in processing of GWT vs non-GWT requests:**

The same payload can trigger different Web App Firewall security check violations for different Content-types. Consider the following example:

```
5|0|8|http://localhost:8080/acdtest/|16878339F02Baf83818D264AE430C20468
|com.test.client.TestService|testMethod|java.lang.String%3b|java.lang
.Integer|select|
```

**Content-type: application/x-www-form-urlencoded:**

A request sent with this content type results in a SQL violation if the SQL Injection Type is configured to use any of the four available options: **SQLSplCharANDKeyword**, **SQLSplCharORKeyword**, **SQLKeyword**, or **SQLSplChar**. The Web App Firewall considers ‘&’ to be the field separator and ‘=’ to be the name-value separator when processing the above payload. Since neither of these characters appears anywhere in the post body, the entire content is treated as a single field name. The field name in this request contains both an SQL special character (;) and an SQL Keyword (select). Therefore violations are caught for all four SQL Injection type options.

**Content-type: text/x-gwt-rpc:**

A request sent with this content type triggers an SQL violation only if the SQL injection type is set to one of the following three options: **SQLSplCharORKeyword**, **SQLKeyword**, or **SQLSplChar**. No violation is triggered if the SQL injection type is set to **SQLSplCharANDKeyword**, which is the default option. The Web App Firewall considers the vertical bar | to be the field separator for the above payload in the GWT request. Therefore, the post body is divided into various form-field values, and form-field names are added (in accordance with the convention described earlier). Because of this splitting, the SQL special character and SQL keyword become parts of separate form fields.

Form field 8: `java.lang.String%3b -\> %3b is the (;)char`

Form Field 10: `select`

As a result, when SQL Injection Type is set to **SQLSplChar**, field 8 indicates the SQL violation. For **SQLKeyword**, field 10 indicates the violation. Either of these two fields can indicate a violation if the SQL Inject type is configured with the **SQLSplCharORKeyword** option, which looks for the presence of either a keyword or a special character. No violation is caught for the default **SQLSplCharAND-Keyword** option, because there is no single field that has a value that contains both **SQLSplChar** and **SQLKeyword** together.

**Tips:**

- No special Web App Firewall configuration is needed to enable GWT support.
- The Content-type must be text/x-gwt-rpc.
- Learning and deploying of the relaxation rules for all the pertinent Web App Firewall security checks applied to GWT payload works the same as it does for the other supported content-types.
- Only POST requests are considered valid for GWT. All other request methods are blocked if the content-type is text/x-gwt-rpc.
- GWT requests are subject to the configured POST body limit of the profile.
- The sessionless setting for the security checks is not applicable and will be ignored.
- CEF log format is supported for the GWT log messages.

## Cookie Protection

May 2, 2023

Cookie is a small packet data sent from a web server to a client browser. Cookies carry sensitive data such as passwords, user authentication details, and credentials over an HTTP connection and stored in a web browser. Hence it is highly important to protect cookies from attackers who steal information.

**Cookie consistency check:** Examines cookies returned with user requests to verify that they match the cookies your Web server set for that user. If a modified cookie is found, it is stripped from the request before the request is forwarded to the Web server. For more information, see [Cookie consistency check](#) topic.

**Cookie hijacking protection:** Hijacking refers to a situation where an attacker gains an unauthorized access to cookies. To protect cookie from authorized access, the NetScaler Web App Firewall (WAF) challenges the TLS connection from the client along with WAF cookie consistency validation. For every new client request, the appliance validates the TLS connection and also verifies the consistency of application and session cookie in the request. For more information, see [Cookie hijacking protection](#) topic.

**SameSite cookie attribute:** The [SameSite](#) attribute in the Set-Cookie HTTP response allows you to declare if your cookie must be restricted to a first-party or same-site context. The cookie setting mitigates attacks and provides a secured web communication. For more information, see [SameSite cookie attribute](#) topic.

## Cookie consistency check

January 24, 2023

The Cookie Consistency check examines cookies returned by users to verify that they match the cookies that your website set for that user. If a modified cookie is found, it is stripped from the request before the request is forwarded to the web server. You can also configure the Cookie Consistency check to transform all of the server cookies that it processes, by encrypting the cookies, proxying the cookies, or adding flags to the cookies. This check applies to requests and responses.

An attacker would normally modify a cookie to gain access to sensitive private information by posing as a previously authenticated user, or to cause a buffer overflow. The Buffer Overflow check protects against attempts to cause a buffer overflow by using a long cookie. The Cookie Consistency check focuses on the first scenario.

If you use the wizard or GUI, in the Modify Cookie Consistency Check dialog box, on the General tab you can enable or disable the following actions:

- Block
- Log
- Learn
- Statistics
- Transform. If enabled, the Transform action modifies all cookies as specified in the following settings:
  - **Encrypt Server Cookies.** Encrypt cookies set by your web server, except for any listed in the Cookie Consistency check relaxation list, before forwarding the response to the client. Encrypted cookies are decrypted when the client sends a subsequent request, and the decrypted cookies are reinserted into the request before it is forwarded to the protected web server. Specify one of the following types of encryption:
    - \* **None.** Do not encrypt or decrypt cookies. The default.
    - \* **Decrypt only.** Decrypt encrypted cookies only. Do not encrypt cookies.
    - \* **Encrypt session only.** Encrypt session cookies only. Do not encrypt persistent cookies. Decrypt any encrypted cookies.
    - \* **Encrypt all.** Encrypt both session and persistent cookies. Decrypt any encrypted cookies.
  - Note:** When encrypting cookies, the Web App Firewall adds the **HttpOnly** flag to the cookie. This flag prevents scripts from accessing and parsing the cookie. The flag therefore prevents a script-based virus or trojan from accessing a decrypted cookie and using that information to breach security. This is done regardless of the Flags to Add in Cookies parameter settings, which are handled independently of the Encrypt Server Cookies parameter settings.
- **Proxy Server Cookies.** Proxy all non-persistent (session) cookies set by your web server, except for any listed in the Cookie Consistency check relaxation list. Cookies are proxied by using the

existing Web App Firewall session cookie. The Web App Firewall strips session cookies set by the protected web server and saves them locally before forwarding the response to the client. When the client sends a subsequent request, the Web App Firewall reinserts the session cookies into the request before forwarding it to the protected web server. Specify one of the following settings:

- **None.** Do not proxy cookies. The default.
- **Session only.** Proxy session cookies only. Do not proxy persistent cookies  
Note: If you disable cookie proxying after having enabled it (set this value to None after it was set to Session only), cookie proxying is maintained for sessions that were established before you disabled it. You can therefore safely disable this feature while the Web App Firewall is processing user sessions.
- **Flags to Add in Cookies.** Add flags to cookies during transformation. Specify one of the following settings:
  - **None.** Do not add flags to cookies. The default.
  - **HTTP only.** Add the HttpOnly flag to all cookies. Browsers that support the HttpOnly flag do not allow scripts to access cookies that have this flag set.
  - **Secure.** Add the Secure flag to cookies that are to be sent only over an SSL connection. Browsers that support the Secure flag do not send the flagged cookies over an insecure connection.
  - **All.** Add the HttpOnly flag to all cookies, and the Secure flag to cookies that are to be sent only over an SSL connection.

If you use the command-line interface, you can enter the following commands to configure the Cookie Consistency Check:

- `set appfw profile <name> -cookieConsistencyAction [**block**] [**learn**] [**log**] [**stats**] [**none**]`
- `set appfw profile <name> -cookieTransforms ([**ON**] | [**OFF**])`
- `set appfw profile <name> -cookieEncryption ([**none**] | [**decryptOnly**] | [**encryptSession**] | [**encryptAll**])`
- `set appfw profile <name> -cookieProxying ([**none**] | [**sessionOnly**])`
- `set appfw profile <name> -addCookieFlags ([**none**] | [**httpOnly**] | [**secure**] | [**all**])`

To specify relaxations for the Cookie Consistency check, you must use the GUI. On the Checks tab of the Modify Cookie Consistency Check dialog box, click Add to open the Add Cookie Consistency Check Relaxation dialog box, or select an existing relaxation and click Open to open the Modify Cookie Consistency Check Relaxation dialog box. Either dialog box provides the same options for configuring a relaxation.



Following are examples of Cookie Consistency check relaxations:

- **Logon Fields.** The following expression exempts all cookie names beginning with the string `logon_` followed by a string of letters or numbers that is at least two characters long and no more than fifteen characters long:

```
1 ^logon_[0-9A-Za-z]{
2 2,15 }
3 $
```

- **Logon Fields (special characters).** The following expression exempts all cookie names beginning with the string `türkçe-logon_` followed by a string of letters or numbers that is at least two characters long and no more than fifteen characters long:

```
1 ^txC3xBCrKxC3xA7e-logon_[0-9A-Za-z]{
2 2,15 }
3 $
```

- **Arbitrary strings.** Allow cookies that contain the string `sc-item_`, followed by the ID of an item that the user has added to his shopping cart (`[0-9A-Za-z]+`), a second underscore (`_`), and finally the number of these items he wants (`[1-9][0-9]?`), to be user-modifiable:

```
1 ^sc-item_[0-9A-Za-z]+_[1-9][0-9]?$
```

Caution: Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the URL you want to add as an exception, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (`.*`) metacharacter/wildcard combination, can have results you do not want or expect, such as blocking access to web content that you did not intend to block or allowing an attack that the Cookie Consistency check would otherwise have blocked.

## Cookie hijacking protection

December 11, 2024

Cookie hijacking protection mitigates cookie stealing attacks from hackers. In the security attack, an attacker takes over a user session to gain unauthorized access to a web application. When a user browses a website, for example banking application, the website establishes a session with the browser. During the session, the application saves the user details such as login credentials, page visits in a cookie file. The cookie file is then sent to the client browser in the response. The browser stores the cookies to maintain active sessions. The attacker can steal these cookies either manually from the cookie store of the browser or through some rouge browser extension. The attacker then use these cookies to gain access into the user's web application sessions.

To mitigate cookie attacks, the NetScaler Web App Firewall (WAF) challenges the TLS connection from the client along with WAF cookie consistency validation. For every new client request, the appliance validates the TLS connection and also verifies the consistency of application and session cookie in the request. If an attacker tries to mix and match application cookies and session cookies stolen from the victim, the cookie consistency validation fails, and the configured cookie hijack action is applied. For more information about cookie consistency, see [Cookie Consistency Check](#).

The Cookie hijacking protection is effective only when SSL session reuse is enabled in the browser. To detect cookie hijacking attempts, validations continue until the session is marked as verified. As a result, even if only the `log` action is enabled, the Cookie hijacking protection might still impact traffic and block requests.

Perform the following configuration to enable session reuse on TLS 1.3:

```
1 set ssl parameter -defaultProfile ENABLED
2 set ssl profile ns_default_ssl_profile_frontend -sessionticket ENABLED
 -TLS13 ENABLED
```

**Note:**

The Cookie hijacking feature supports logging and SNMP traps. For more information about logging, see ADM topic and for more information about SNMP configuration see SNMP topic.

### Limitations

- JavaScript must be enabled in the client browser.
- Cookie Hijacking protection is not supported on TLS version 1.3.

**Note:**


Starting from release 14.1 build 12.17, Cookie hijacking protection feature is supported on TLS version 1.3.

- Ensure that your browser has the capability to reuse SSL sessions for cookie hijacking protection to be effective.
- Limited support for the Internet Explorer (IE) browser because the browser does not reuse the SSL connections. Results in multiple redirects sent for a request eventually leading to a “MAX REDIRECTS EXCEEDED” error in the IE browser.

### How cookie hijacking protection works

The following scenarios explain how cookie hijacking protection works in a NetScaler appliance.

### Scenario 1: User accessing the first webpage without session cookie

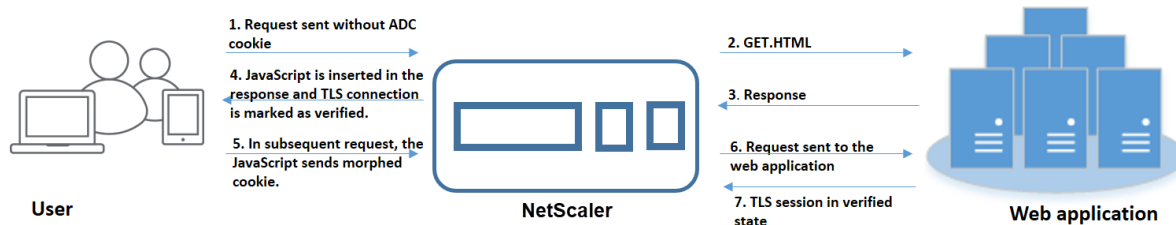


1. The user attempts to authenticate into a web application and begins to access the first webpage without any ADC session cookie in the request.
2. When the request is received, the appliance creates an Application Firewall session with a session cookie ID.
3. This initiates a TLS connection for the session. Since the JavaScript is not sent and ran on the client browser, the appliance marks the TLS connection as validated and no challenge is required.

**Note:**

Even if an attacker tries to send all the app cookie IDs from a victim without sending the session cookie, the appliance detects the issue and strips off all the app cookies in the request before forwarding the request to the back-end server. The back end server considers this request without no app cookie and takes necessary as per its configuration.


4. When the back-end server sends a response, the appliance receives the response and forwards it with a JavaScript session token and seed cookie. The appliance then marks the TLS connection as verified.
5. When the client browser receives the response, the browser runs the JavaScript and generates a morphed cookie ID using the session token and seed cookie.
6. When a user sends a subsequent request over the TLS connection, the appliance bypasses the morphed cookie validation. This is because the TLS connection is already validated.

**Scenario 2: User accessing successive webpages over new TLS connection with session cookie**

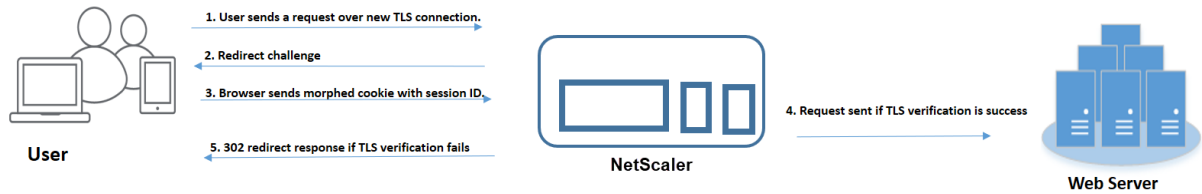


1. When a user sends an HTTP request for successive pages over a new TLS connection, the browser sends session cookie ID and morphed cookie ID.
2. Since this is a new TLS connection, the appliance detects the TLS connection and challenges the client with redirect response with seed cookie.
3. The client upon receiving the response from the ADC, calculates the morphed cookie using the session's token and new seed cookie.
4. The client then sends this newly calculated morphed cookie along with a session ID.
5. If the morphed cookie calculated within the ADC appliance and the one sent over the request matches, then the TLS connection is marked as verified.
6. If the calculated morphed cookie differs from the one present in the client request, then validation fails. After which, the appliance sends the challenge back to the client, to send a proper morphed cookie.

**Scenario 3: Attacker impersonating as a non-authenticated user**

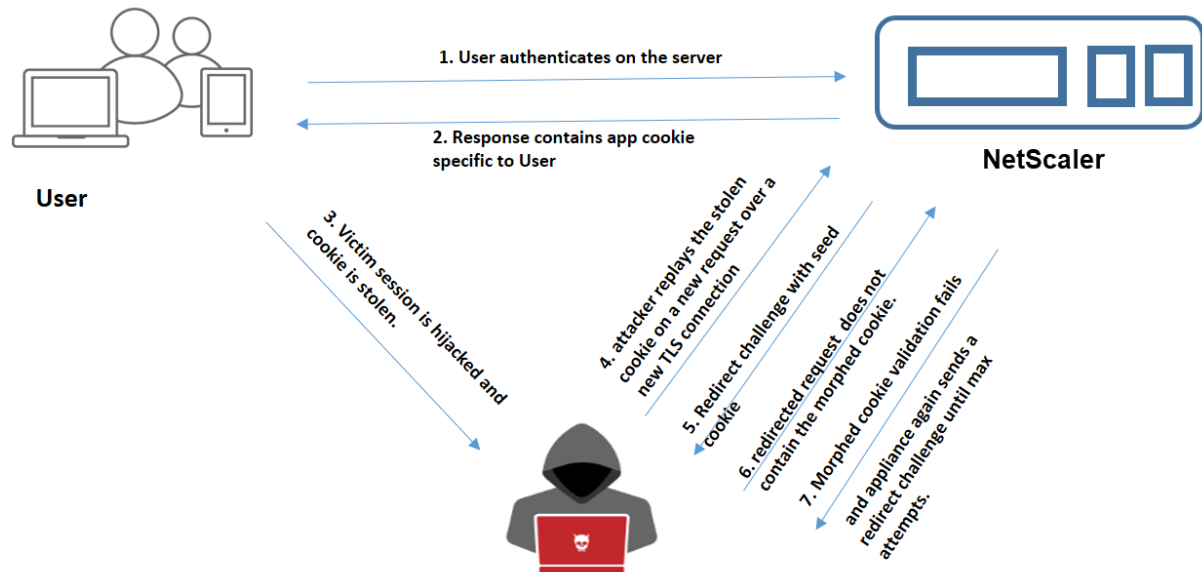

1. When a user authenticates into the web application, the attacker uses different techniques to steal the cookies and replay them.
2. Since this is a new TLS connection from the attacker, the ADC sends a redirect challenge along with a new seed cookie.
3. Since the attacker does not have JavaScript running, the response from the attacker for the redirected request does not contain the morphed cookie.
4. This results in morphed cookie validation failure at the ADC appliance side. The appliance again sends a redirect challenge to the client.
5. If the number of morphed cookie validation attempts exceeds the threshold limit, the appliance flags the status as cookie hijacking.
6. If the attacker tries to mix and match application cookies and session cookies stolen from the victim, the cookie consistency check fails, and the appliance applies the configured cookie hijack action.

**Scenario 4: Attacker impersonating as an authenticated user**

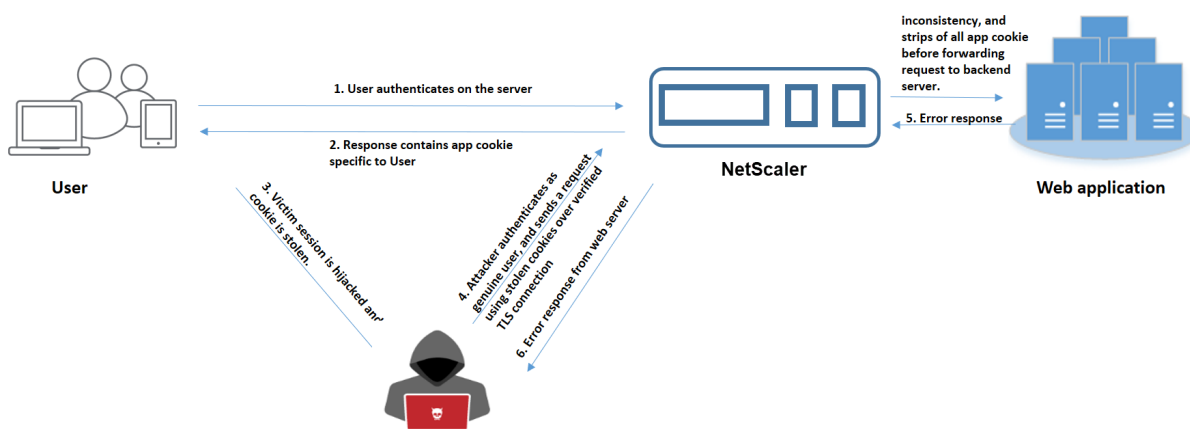

1. Attackers can also attempt to authenticate into a web application as a genuine user and replay the victim’s cookies to gain access to the web session.
2. The ADC appliance detects such impersonated attackers also. Although a verified TLS connection is used by the attacker in replaying a victim’s cookie, the ADC appliance still verifies if the session cookie and application cookie in the request are consistent. The appliance verifies the consistency of an application cookie using the session cookie in the request. Since the request contains an attacker’s session cookie and a victim’s app cookie, the cookie consistency validation fails.
3. As a result, the appliance applies the configured cookie hijack action. If the configured action is set as “block,” then the appliance strips off all the application cookies and sends the request to the back-end Server.
4. The back-end server receives a request with no application cookie and so it responds an error response to the attacker, such as “User not logged in”.

## Configure cookie hijacking by using the CLI

You can select a specific application firewall profile and set one or more actions that prevent cookie hijacking.

At the command prompt, type:

```
set appfw profile <name> [-cookieHijackingAction <action-name> <block
| log | stats | none>]
```

**Note:**

By default, the action is set to “none.”

**Example:**

```
set appfw profile profile1 - cookieHijackingAction Block
```

Where, action types are:

Block: Block connections that violate this security check.

Log: Log violations of this security check.

Stats: Generate statistics for this security check.

None: Disable all actions for this security check.

## Configure cookie hijacking by using the NetScaler GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. On the **Profiles** page, select a profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, go to **Advanced Settings** section and click **Security Checks**.
4. In the **Security Checks** section, select **Cookie Hijacking** and then click **Action** settings.
5. In the **Cookie Hijacking Settings** page, select one or more actions to prevent cookie hijacking.
6. Click **OK**.

## Add a relaxation rule for cookie consistency validation by using the NetScaler GUI

To handle false positives in cookie consistency validation, you can add a relaxation rule for cookies that can be exempted from cookie validation.

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. On the **Profiles** page, select a profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, go to **Advanced Settings** section and click **Relaxation rules**.

4. In the **Relaxation Rules** section, select **Cookie Consistency** and click **Action**.
5. In the **Cookie Consistency Relaxation Rule** page, set the following parameters.
  - a) Enabled. Select if you want to enable the relaxation rule.
  - b) Is Cookie Name Regex. Select if the cookie name is a regular expression.
  - c) Cookie Name. Enter the name of the cookie that can be exempted from cookie validation.
  - d) Regex Editor. Click this option to provide the regular expression details.
  - e) Comments. A brief description about the cookie.
6. Click **Create** and **Close**.

### View cookie hijacking traffic and violation statistics by using the CLI

View security traffic and security violation details in a tabular or graphical format.

To view security statistics:

At the command prompt, type:

```
stat appfw profile profile1
```

| Appfw profile Traffic Statistics | Rate (/s) | Total |
|----------------------------------|-----------|-------|
| Requests                         | 0         | 0     |
| Request Bytes                    | 0         | 0     |
| Responses                        | 0         | 0     |
| Response Bytes                   | 0         | 0     |
| Aborts                           | 0         | 0     |
| Redirects                        | 0         | 0     |
| Long Term Ave Response Time (ms) | –         | 0     |
| Recent Ave Response Time (ms)    | –         | 0     |

| HTML/XML/JSON Violation |           |       |
|-------------------------|-----------|-------|
| Statistic               | Rate (/s) | Total |
| Start URL               | 0         | 0     |
| Deny URL                | 0         | 0     |
| Referer header          | 0         | 0     |

HTML/XML/JSON Violation

| Statistic                      | Rate (/s) | Total |
|--------------------------------|-----------|-------|
| Buffer overflow                | 0         | 0     |
| Cookie consistency             | 0         | 0     |
| Cookie hijacking               | 0         | 0     |
| CSRF form tag                  | 0         | 0     |
| HTML Cross-site scripting      | 0         | 0     |
| HTML SQL injection             | 0         | 0     |
| Field format                   | 0         | 0     |
| Field consistency              | 0         | 0     |
| Credit card                    | 0         | 0     |
| Safe object                    | 0         | 0     |
| Signature Violations           | 0         | 0     |
| Content Type                   | 0         | 0     |
| JSON Denial of Service         | 0         | 0     |
| JSON SQL injection             | 0         | 0     |
| JSON Cross-Site Scripting      | 0         | 0     |
| File Upload Types              | 0         | 0     |
| Infer Content Type XML Payload | 0         | 0     |
| HTML CMD Injection             | 0         | 0     |
| XML Format                     | 0         | 0     |
| XML Denial of Service (XDoS)   | 0         | 0     |
| XML Message Validation         | 0         | 0     |
| Web Services Interoperability  | 0         | 0     |
| XML SQL Injection              | 0         | 0     |
| XML Cross-Site Scripting       | 0         | 0     |
| XML Attachment                 | 0         | 0     |
| SOAP Fault Violations          | 0         | 0     |
| XML Generic Violations         | 0         | 0     |
| Total Violations               | 0         | 0     |



| HTML/XML/JSON Log Statistics             | Rate (/s) | Total |
|------------------------------------------|-----------|-------|
| Start URL logs                           | 0         | 0     |
| Deny URL logs                            | 0         | 0     |
| Referer header logs                      | 0         | 0     |
| Buffer overflow logs                     | 0         | 0     |
| Buffer overflow logs                     | 0         | 0     |
| Cookie consistency logs                  | 0         | 0     |
| Cookie hijacking logs                    | 0         | 0     |
| CSRF form tag logs                       | 0         | 0     |
| HTML cross-site scripting logs           | 0         | 0     |
| HTML cross-site scripting transform logs | 0         | 0     |
| HTML SQL Injection logs                  | 0         | 0     |
| HTML SQL transform logs                  | 0         | 0     |
| Field format logs                        | 0         | 0     |
| Field consistency logs                   | 0         | 0     |
| Credit cards                             | 0         | 0     |
| Credit card transform logs               | 0         | 0     |
| Safe object logs                         | 0         | 0     |
| Signature logs                           | 0         | 0     |
| Content Type logs                        | 0         | 0     |
| JSON Denial of Service logs              | 0         | 0     |
| JSON SQL injection logs                  | 0         | 0     |
| JSON Cross-Site Scripting logs           | 0         | 0     |
| File upload types logs                   | 0         | 0     |
| Infer Content Type XML Payload L         | 0         | 0     |
| HTML Command Injection logs              | 0         | 0     |
| XML Format logs                          | 0         | 0     |
| XML Denial of Service(XDoS) logs         | 0         | 0     |

| HTML/XML/JSON Log Statistics  | Rate (/s) | Total |
|-------------------------------|-----------|-------|
| XML Message Validation logs   | 0         | 0     |
| WSI logs                      | 0         | 0     |
| XML SQL Injection logs        | 0         | 0     |
| XML cross-site scripting logs | 0         | 0     |
| XML Attachment logs           | 0         | 0     |
| SOAP Fault logs               | 0         | 0     |
| XML Generic logs              | 0         | 0     |
| Total log messages            | 0         | 0     |

| Server Error Response         |           |       |
|-------------------------------|-----------|-------|
| Statistics                    | Rate (/s) | Total |
| HTTP Client Errors (4xx Resp) | 0         | 0     |
| HTTP Server Errors (5xx)      | 0         | 0     |

### View cookie hijacking traffic and violation statistics by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select a **Web App Firewall** profile and click **Statistics**.
3. The **NetScaler Web App Firewall Statistics** page displays the cookie hijacking traffic and violation details.
4. You can select **Tabular View** or switch to **Graphical View** to display the data in a tabular or graphical format.

|                                           |                  |              |    |
|-------------------------------------------|------------------|--------------|----|
| Long Term Ave Response Time (ms)          | -                | 0            |    |
| Recent Ave Response Time (ms)             | -                | 0            |    |
| <b>HTML/XML/JSON Violation Statistics</b> |                  |              |    |
|                                           | <b>Rate (/s)</b> | <b>Total</b> |    |
| Start URL                                 | 0                | 0            | 0% |
| Deny URL                                  | 0                | 0            | 0% |
| Referer header                            | 0                | 0            | 0% |
| Buffer overflow                           | 0                | 0            | 0% |
| Cookie consistency                        | 0                | 0            | 0% |
| Cookie hijacking                          | 0                | 0            | 0% |
| Cookie format                             | 0                | 0            | 0% |
| HTML Cross-site scripting                 | 0                | 0            | 0% |
| HTML SQL injection                        | 0                | 0            | 0% |
| Field format                              | 0                | 0            | 0% |
| Field consistency                         | 0                | 0            | 0% |

## SameSite cookie attribute

May 2, 2023

For secure web communication, Google has mandated the usage of the [SameSite](#) cookie attribute. By complying with Google Chrome’s new [SameSite](#) policy, the NetScaler appliance can manage third-party cookies with the [SameSite](#) attribute set in the `set-cookie` header. The cookie setting mitigates attacks and provides a secured web communication.

Until February 2020, the [SameSite](#) attribute was not explicitly set in the cookie. The browser took the default value as “None.” However, with certain browser upgrade, such as Google Chrome 80, there is a change in the default cross-domain behavior in cookies.

### Setting cookie attribute value

The [SameSite](#) attribute is set to one of the following values and for the Google Chrome browser, the default value is set as “Lax.”

**None.** Indicates the browser to use the cookie for requests in the cross-site context only on secure connections.

**Lax.** Indicates the browser to use the cookie for requests in the same-site context. In the cross-site context, only safe HTTP methods like GET request can use the cookie.

**Strict.** Use the cookie only when the user is requesting for the domain explicitly.

**Note:**

If set-cookies (including firewall session cookies) have the `SameSite` attribute and if the `addcookiesamesite` attribute flag is enabled in the Web Application Firewall profile, then the `SameSite` attribute is overwritten according to the value configured in the profile.

**Configure the SameSite attribute in the Web App Firewall profile by using the CLI**

To configure the `SameSite` attribute, you must complete the following steps:

1. Enable the `SameSite` cookie attribute.
2. Set the cookie attribute for the appfw session cookies.

**Enable the ‘Samesite’ cookie attribute**

At the command prompt, type:

```
set appfw profile <profile-name> -insertCookieSameSiteAttribute \ (ON
| OFF)
```

**Example:**

```
set appfw profile p1 -insertCookieSameSiteAttribute ON
```

**Set same site cookie attribute value for Web Application Firewall session cookies**

At the command prompt, type:

```
set appfw profile <profile-name> - cookieSameSiteAttribute \ (LAX |
NONE | STRICT)
```

**Example:**

```
set appfw profile p1 - cookieSameSiteAttribute LAX
```

Where attribute types are,

**None.** Cookie attribute SameSite is set to “none” and marked secure for all WAF and application cookies.

**Lax.** Cookie attribute SameSite is set to “Lax” for all WAF and application cookies.

**Strict.** Cookie attribute SameSite is set to “Lax” for all WAF and application cookies.

## Configure the SameSite cookie attribute in the Web App Firewall profile by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select a profile and click **Edit**.
3. In the **NetScaler Web App Firewall Profile** page, click **Profile Settings** under **Advanced Settings**.
4. In **Profile Settings** section set the following parameters:
  - a. Insert the cookie `Samesite` attribute. Select the check box to enable the cookie `Samesite` attribute.
  - b. Cookie Samesite Attribute. Select an option from the drop-down list to set the `Samesite` cookie value.
5. Click **OK** and **Done**.

The screenshot displays the 'Profile Settings' configuration page for a NetScaler Web App Firewall profile. The 'Name' field is set to 'test' and the 'Profile Type' is 'HTML'. Under the 'Inspected Content Types' section, three content types are checked: 'application/x-www-form-urlencoded', 'multipart/form-data', and 'text/x-gwt-rpc'. In the 'Common Settings' section, the 'Signature Post Body Limit (Bytes)' is set to 2048. The 'Bound Signatures' dropdown is empty. The 'Cookie Samesite Attribute' dropdown is set to 'Lax' and is highlighted with a red box. The 'Insert Cookie Samesite Attribute' checkbox is checked and also highlighted with a red box. Other settings include 'Multiple Header Actions' with 'Block' and 'Log' checked, and 'Inspect Query Content Types' with 'HTML', 'XML', and 'JSON' listed.

## Data leak prevention checks

September 21, 2020

The data-leak-prevention checks filter responses to prevent leaks of sensitive information, such as credit card numbers and social security numbers, to unauthorized recipients.

## Credit card check

May 2, 2023

If you have an application that accepts credit cards, or your websites have access to database servers that store credit card numbers, you must use Data Leak Prevention (DLP) measures and configure protection for each type of credit card that you accept.

The NetScaler Web App Firewall Credit Card check prevents attackers from exploiting Data Leak Prevention flaws to obtain credit card numbers of your customers. By following simple configuration steps, you can enforce protection of one or more of the following credit cards: 1) Visa, 2) Master Card, 3) Discover, 4) American Express (Amex), 5) JCB, and 6) Diners Club.

The Credit Card security check examines server responses to identify instances of the target credit card numbers, and applies a specified action when such a number is found. The action can be to transform the response by X'ing out all but the last group of digits in the credit card number, or to block the response if it contains more than a specified number of credit card numbers. If you specify both, the block action takes precedence. The Maximum credit cards allowed per page setting determines when the block action is invoked. The default setting, 0 (no credit card numbers allowed on the page), is the safest, but you can allow up to 255. Depending on where the violation is detected in the response and the block action gets triggered, you might get fewer than the maximum allowed number of credit cards in the response.

To avoid false positives, you can apply relaxations to exempt specific numbers from the Credit Card check. For example, a social security number, purchase order number, or Google account number might be similar to a credit card number. You can specify individual numbers or use a regular expression to indicate the string of digits to be bypassed when processing the response URL for credit card inspection.

If you're not sure which credit card numbers to exempt, you can use the learn feature to generate recommendations based on the learned data. To get optimal benefit without compromising performance, you might want to enable this option for a short time to get a representative sample of the rules, and then deploy the relaxations and disable learning.

If you enable the log feature, the Credit Card check generates log messages indicating the actions that it takes. You can monitor the logs to determine whether responses to legitimate requests are getting blocked. A large increase in the number of log messages can indicate thwarted attempts to gain access. By default, the `doSecureCreditCardLogging` parameter is ON, so the credit card number is not included in the log message generated by the safe commerce (Credit Card) violation.

The stats feature gathers statistics about violations and logs. An unexpected surge in the stats counter might indicate that your application is under attack.

To configure the Credit Card security check for protecting your application, configure the profile that governs inspecting the traffic to and from this application.

**Note:**

A website that does not access a SQL database usually does not have access to sensitive private information such as credit card numbers.

## Using the command line to configure the credit card check

In the command line interface, you can use either the `set appfw profile` command or the `add appfw profile` command to activate credit-card checking and specify which actions to perform. You can use the `unset appfw profile` command to revert back to the default settings. To specify relaxations, use the `bind appfw` command to bind credit card numbers to the profile.

To configure a credit card check by using the command line

Use either the `set appfw profile` command or the `add appfw profile` command, as follows:

- `set appfw profile <name> -creditCardAction ( ([block][learn] [log][stats]) | [none])`
- `set appfw profile <name> -creditCard (VISA | MASTERCARD | DISCOVER | AMEX | JCB | DINERSCLUB)`
- `set appfw profile <name> -creditCardMaxAllowed <integer>`
- `set appfw profile <name> -creditCardXOut ([ON] | [OFF])<name> -doSecureCreditCardLogging ([ON] | [OFF])`
- To configure a Credit Card relaxation rule by using the command line

Use the `bind` command to bind the credit card number to the profile. To remove a credit card number from a profile, use the `unbind` command, with the same arguments that you used for the `bind` command. You can use the `show` command to display the credit card numbers bound to a profile.

- To bind a credit card number a profile

```
bind appfw profile <profile-name> -creditCardNumber <any number/regex> "<url>"
```

**Example:** `bind appfw profile test_profile -creditCardNumber 378282246310005 http://www.example.com/credit\_card\_test.html`

- To unbind a credit card number from a profile

```
unbind appfw profile <profile-name> -creditCardNumber <credit
card number / regex> <url>
```

- To show the list of credit card numbers bound to a profile.

```
show appfw profile <profile>
```

## Using the GUI to configure the credit card check

In the GUI, you configure the credit card security check in the pane for the profile associated with your application.

To add or modify the Credit Card security check by using the GUI

1. Navigate to **Web App Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Security Checks**.

The security check table displays the currently configured action settings for all the security checks. You have 2 options for configuration:

- a) If you just want to enable or disable Block, Log, Stats, and Learn actions for Credit Card, you can select or clear check boxes in the table, click **OK**, and then click **Save** and **Close** to close the **Security Check** pane.
  - b) If you want to configure additional options for this security check, double click Credit Card, or select the row and click **Action Settings** to display additional options as follows:
    - Out—Mask any credit card number detected in a response by replacing each digit, except the digits in the final group, with the letter “X.”
    - Maximum credit cards allowed per page—Specify the number of credit cards that can be forwarded to the client without triggering a block action.
    - Protected Credit Cards. Select or clear a check box to enable or disable protection for each type of credit card.
    - You can also edit the Block, Log, Stats and Learn actions in the Credit Card Settings pane.After making any of the above changes, click OK to save the changes and return to the Security Checks table. You can proceed to configure other security checks if needed. Click OK to save all the changes you have made in the Security Checks section and then click Save and Close to close the Security Check pane.
3. In the **Advanced Settings** pane, click **Profile settings**. To enable or disable secure logging of credit card Numbers, select or clear the **Secure Credit Card Logging** check box. (By default, it is selected).



Click **OK** to save the changes.

- To configure a Credit Card relaxation rule by using the GUI
  1. Navigate to **Web App Firewall > Profiles**, highlight the target profile, and click **Edit**.
  2. In the **Advanced Settings** pane, click **Relaxation Rules**. The Relaxation Rules table has a Credit Card entry. You can double click, or select this row and click **Edit** to access the **Credit Card Relaxation Rules** dialogue. You can perform Add, Edit, Delete, Enable, or Disable operations for relaxation rules.

## Using the learn feature with the credit card check

When the learn action is enabled, the Web App Firewall learning engine monitors the traffic and learns the triggered violations. You can periodically inspect these learned rules. After due consideration, if you want to exempt a specific string of digits from the Credit Card security check, you can by deploy the learned rule as a relaxation rule.

- To view or use learned data by using the command line interface

```
show appfw learningdata <profilename> creditCardNumber
rm appfw learningdata <profilename> -creditcardNumber <credit
card number> "<url>"
export appfw learningdata <profilename> creditCardNumber
```

- To view or use learned data by using the GUI
  1. Navigate to **Web App Firewall > Profiles**, highlight the target profile, and click **Edit**.
  2. In the **Advanced Settings** pane, click **Learned Rules**. You can select the Credit Card entry in the Learned Rules table and double-click it to access the learned rules. You can deploy the learned rules or edit a rule before deploying it as a relaxation rule. To discard a rule, you can select it and click the **Skip** button. You can edit only one rule at a time, but you can select multiple rules to deploy or skip.

You also have the option to show a summarized view of the learned relaxations by selecting the Credit Card entry in the Learned Rules table and clicking Visualizer to get a consolidated view of all the learned violations. The visualizer makes it very easy to manage the learned rules. It presents a comprehensive view of the data on one screen and facilitates taking action on a group of rules with one click. The biggest advantage of the visualizer is that it recommends regular expressions to consolidate multiple rules. You can select a subset of these rules, based on the delimiter and Action URL. You can display 25, 50, or 75 rules in the visualizer, by selecting the number from a drop-down list. The visualizer for learned rules offers the option to edit the rules and deploy them as relaxations. Or you can skip the rules to ignore them.

## Using the log feature with the credit card check

When the log action is enabled, the Credit Card security check violations are logged in the audit log as APPFW\_SAFECOMMERCE or APPFW\_SAFECOMMERCE\_XFORM violations. The Web App Firewall supports both Native and CEF log formats. You can also send the logs to a remote syslog server.

The default setting for doSecureCreditCardLogging is ON. If you change it to OFF, both credit card number and type are included in the log message.

Depending on the settings configured for the Credit Card checks, the application-firewall generated log messages might include the following information:

- Response was blocked or not blocked.
- Credit card numbers were transformed (X'd out). A separate log message is generated for each transformed credit card number, so multiple log messages might be generated during processing of a single response.
- Response contained the maximum number of potential credit card numbers.
- Credit card numbers and their corresponding types.
- To access the log messages by using the command line

Switch to the shell and tail the ns.logs in the /var/log/ folder to access the log messages pertaining to the Credit Card violations:

- Shell

---

```
tail -f /var/log/ns.log
```

```
grep SAFECOMMERCE
```

---

-

- To access the log messages by using the GUI
  1. The GUI includes a very useful tool (Syslog Viewer) for analyzing the log messages. You have a couple of options for accessing the Syslog Viewer: Navigate to the **target profile > Security Checks**. Highlight the Credit Card row and click Logs. When you access the logs directly from the Credit Card security check of the profile, it filters out the log messages and displays only the logs pertaining to these security check violations.
  2. You can also access the Syslog Viewer by navigating to **NetScaler > System > Auditing**. In the Audit Messages section, click the **Syslog messages** link to display the Syslog Viewer, which displays all log messages, including other security check violation logs. This is useful for debugging when multiple security check violations might be triggered during request processing.

The HTML based Syslog Viewer provides various filter options for selecting only the log messages that are of interest to you. To access Credit Card security check violation log messages, filter by selecting APPFW in the dropdown options for Module. The Event Type displays a rich set of options to further refine your selection. For example, if you select the APPFW\_SAFECOMMERCE and APPFW\_SAFECOMMERCE\_XFORM check boxes and click the Apply button, only log messages pertaining to the Credit Card security check violations appear in the Syslog Viewer.

If you place the cursor in the row for a specific log message, multiple options, such as Module and EventType, appear below the log message. You can select any of these options to highlight the corresponding information in the logs.

Example of a Native format log message when the response is not blocked

```

1 May 29 01:26:31 <local0.info> 10.217.31.98 05/29/2015:01:26:31 GMT ns
 0-PPE-0 :
2 default APPFW APPFW_SAFECOMMERCE 2181 0 : 10.217.253.62 1098-PPE0
3 4erNfkaHy0IeGP+nv2S9Rsdu77I0000 pr_ffc http://aaron.stratum8.net/FFC/
 CreditCardMind.html
4 Maximum number of potential credit card numbers seen <not blocked>

```

Example of a CEF format log message when the response is transformed

```

1 May 28 23:42:48 <local0.info> 10.217.31.98
2 CEF:0|Citrix|NetScaler|NS11.0|APPFW|APPFW_SAFECOMMERCE_XFORM|6|src
 =10.217.253.62
3 spt=25314 method=GET request=http://aaron.stratum8.net/FFC/
 CreditCardMind.html
4 msg=Transformed (xout) potential credit card numbers seen in server
 response
5 cn1=66 cn2=1095 cs1=pr_ffc cs2=PPE2 cs3=xzE7M0g9bovAtG/zLCrLd2zkVl80002
6 cs4=ALERT cs5=2015 act=transformed

```

Example of a CEF format log message when the response is blocked. The credit card number and type can be seen in the log, because the doSecureCreditCardLogging parameter is disabled.

```

1 May 28 23:42:48 <local0.info> 10.217.31.98
2 CEF:0|Citrix|NetScaler|NS11.0|APPFW|APPFW_SAFECOMMERCE|6|src
 =10.217.253.62
3 spt=25314 method=GET request=http://aaron.stratum8.net/FFC/
 CreditCardMind.html
4 msg=Credit Card number 4505050504030302 of type Visa is seen in
 response cn1=68
5 cn2=1095 cs1=pr_ffc cs2=PPE2 cs3=xzE7M0g9bovAtG/zLCrLd2zkVl80002 cs4=
 ALERT cs5=2015
6 act=blocked

```

## Statistics for the credit card violations

When the stats action is enabled, the corresponding counter for the Credit Card check is incremented when the Web App Firewall takes any action for this security check. The statistics are collected for Rate and Total count for Traffic, Violations, and Logs. The increment of the log counter can vary depending on the configured settings. For example, if the block action is enabled and the Max Allowed credit card setting is 0, the request for a page that contains 20 credit card numbers increments the stats counter by one when the page is blocked as soon as the first credit card number is detected. However, if block is disabled and transform is enabled, processing the same request increments the statistics counter for logs by 20, because each credit card transformation generates a separate log message.

- To display Credit Card statistics by using command line

At the command prompt, type:

```
sh appfw stats
```

To display stats for a specific profile, use the following command:

```
stat appfw profile <profile name>
```

To display Credit Card statistics by using GUI

1. Navigate to **System > Security > Web App Firewall**.
2. In the right pane, access the **Statistics** Link.
3. Use the scroll bar to view the statistics about Credit Card violations and logs. The statistics table provides real-time data and is updated every 7 seconds.

## Highlights

Note the following points about the Credit Card security check:

- The Web App Firewall enables you to protect credit card information and detect any attempts to access this sensitive data.
- To use the Credit Card protection check, you must specify at least one type of credit card and an action. The check is then applied to HTML, XML, and Web 2.0 profiles.

---

You can pipe the output of `sh appfw profile` command and `grep` for CreditCard to see all the Credit Card specific configuration. For example, `sh appfw profile my_profile`

`grep CreditCard` displays the configured settings of various parameters as well as the relaxation rules pertaining to the Credit Card check for the Web App Firewall profile named `my_profile`.

---

- You can exclude specific numbers from Credit Card inspection without bypassing the security check inspection for the rest of the credit card numbers.
- Relaxation is available for all Web App Firewall protected credit card patterns. In the GUI, you can use the visualizer to specify Add, Edit, Delete, Enable, or Disable operations on relaxation rules.
- The Web App Firewall learning engine can monitor the outgoing traffic to recommend rules based on observed violations. Visualizer support is also available for managing the learned credit card rules in the GUI. You can edit and deploy the learned rules, or skip them after careful inspection.
- The setting for number of allowed credit cards applies to each response. It does not pertain to the cumulative total of credit card numbers observed during the entire user session.
- The number of X'd out digits depends on the length of the credit card numbers. Ten digits are X'd out for credit cards that have 13 through 15 digits. Twelve digits are X'd out for credit cards that have 16 digits. If your application does not require sending the entire credit card number in the response, Citrix recommends that you enable this action to mask the digits in the credit card numbers.
- The X-out operation transforms all the credit cards and works independently of the configured settings for the maximum number of allowed credit cards. For example, if there are 4 credit cards in the response and the creditCardMaxAllowed parameter is set to 10, all 4 credit cards are X'd-out, but they are not blocked. If the credit card numbers are spread out in the document, a partial response with X'd-out numbers might be sent to the client before the response is blocked.
- Do not disable the doSecureCreditCardLogging parameter before due consideration. When this parameter is turned off, the credit card numbers are displayed and are accessible in the log messages. These numbers are not masked in the logs, even if the X-out action is enabled. If you are sending logs to a remote syslog server, and the logs are compromised, the credit card numbers can be exposed.
- When the response page is blocked because of a Credit Card violation, the Web App Firewall does not redirect to the error page.

## Safe object check

May 2, 2023

The Safe Object check provides user-configurable protection for sensitive business information, such as customer numbers, order numbers, and country-specific or region-specific telephone numbers or

postal codes. A user-defined regular expression or custom plug-in tells the Web App Firewall the format of this information and defines the rules to be used to protect it. If a string in a user request matches a safe object definition, the Web App Firewall either blocks the response, masks the protected information, or removes the protected information from the response before sending it to the user, depending on how you configured that particular safe object rule.

The Safe Object check prevents attackers from exploiting a security flaw in your web server software or on your website to obtain sensitive private information, such as company credit card numbers or social security numbers. If your websites do not have access to these types of information, you do not need to configure this check. If you have a shopping cart or other application that can access such information, or your websites have access to database servers that contain such information, you must configure protection for each type of sensitive private information that you handle and store.

**Note:**

A website that does not access an SQL database usually does not have access to sensitive private information.

The safe object check is unlike that for any other check. Each safe object expression that you create is the equivalent of a separate security check, similar to the credit card check, for that type of information.

## Configure the safe object check using the GUI

**Note**

You must configure the safe object check only using the GUI. The command-line interface is not supported.

To add a safe object security check using the GUI:

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. Select the required profile and click **Edit**.
3. In the **Advanced Settings** pane, click **Relaxation Rules**.
4. Select **Safe Object** and click **Edit**.
5. Click **Add** and configure the following:
  - **Safe Object Name.** A name for your new safe object. The name can begin with a letter, number, or the underscore symbol. The name can consist of one to 255 letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at sign (@), equals (=), colon (:), and underscore (\_) symbols.

- **Actions.** Enable or disable the **Block**, **Log**, and **Statistics** actions, and the following actions:
  - **X-Out.** Mask any information that matches the safe object expression with the letter “X”.
  - **Remove.** Remove any information that matches the safe object expression.
- **Regular Expression.** Enter a PCRE-compatible regular expression that defines the safe object. You can create the regular expression in one of following ways:
  - By typing the regular expression directly into the text box
  - By using the **Regex Tokens** menu to enter regular expression elements and symbols directly into the text box
  - By opening the Regular Expressions Editor and using it to construct the expression. The regular expression must consist of ASCII characters only. Do not cut and paste characters that are not part of the basic 128-character ASCII set. If you want to include non-ASCII characters, you must manually type those characters in PCRE hexadecimal character encoding format.

**Note:**

Do not use start anchors (^) at the beginning of Safe Object expressions, or end anchors (\$) at the end of Safe Object expressions. These PCRE entities are not supported in Safe Object expressions, and if used, causes your expression not to match what it was intended to match.

- **Maximum Match Length.** Enter a positive integer that represents the maximum length of the string that you want to match. For example, if you want to match U.S. social security numbers, enter the number 11 in this field. That allows your regular expression to match a string with nine numerals and two hyphens. If you want to match California driver’s license numbers, enter the number eight (8).

**Caution:**

If you do not maximum match length, the Web App Firewall uses the default value of one (1) when filtering for strings that match your safe object expressions. As a result, most safe object expressions fail to match their target strings.

You can modify an existing express by selecting the required expression, clicking **Open** and then configuring the expression in the **Modify Safe Object** dialog box.

Following are examples of Safe Object check regular expressions:

- Look for strings that appear to be U.S. social security numbers (SSN). The SSN consists of the following characters in the mentioned order:

- Three numerals (the first of which must not be zero)
- A hyphen
- Two more numerals
- A second hyphen
- A string of four more numerals

```
1 [1-9][0-9]{
2 3,3 }
3 -[0-9]{
4 2,2 }
5 -[0-9]{
6 4,4 }
```

- Look for strings that appear to be California driver's license IDs, which start with a letter and are followed by a string of exactly seven numerals:

```
1 [A-Za-z][0-9]{
2 7,7 }
```

- Look for strings that appear to be customer IDs. The customer IDs consist of the following in the mentioned order:
  - A string of five hexadecimal characters (all the numerals and the letters A through F)
  - A hyphen
  - A three-letter code
  - A second hyphen
  - A string of 10 numerals

```
1 [0-9A-Fa-f]{
2 5,5 }
3 -[A-Za-z]{
4 3,3 }
5 -[0-9]{
6 10,10 }
```

**Caution:**

Regular expressions are powerful. If you are less familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that the regular expression defines exactly the type of string you want to add as a safe object definition. Careless use of wildcards, and especially of the dot-asterisk (.) metacharacter/wildcard combination, can have results you did not want or expect, such as blocking access to web content that you did not intend to block.



## Advanced form protection checks

November 11, 2021

The advanced Form Protection checks examine web form data to prevent attackers from compromising your system by modifying the web forms on your websites or sending unexpected types and quantities of data to your website in a form.

**Note:**

SQL, cross-site scripting, FFC, and FieldFormat protection checks are applied if the **Exclude Upload Files From Security Checks** is unset.

A file upload is also a form element that has control-name **name** field that is submitted as part of form submission.

Refer to this page, for more information: [Forms](#)

**Note**

Form protections will close nested forms when any form based checks are enabled. This is to ensure [HTML Standard](#) is followed.

## Field formats check

June 12, 2024

The Field Formats check verifies the data that users send to your websites in web forms. It examines both the length and type of data to ensure that it is appropriate for the form field in which it appears. If the Web App Firewall detects inappropriate web form data in a user request, it blocks the request.

By preventing an attacker from sending inappropriate web form data to your website, the Field Formats check prevents certain types of attacks on your website and database servers. For example, if a particular field expects the user to enter a phone number, the Field Formats check examines the user-submitted input to ensure that the data matches the format of a phone number. If a particular field expects a first name, the Field Formats check ensures that the data in that field is of a type and length appropriate for a first name. It does the same thing for each form field that you configure it to protect.

This check applies to HTML requests only. It does not apply to XML requests. You can configure Field Format Checks in HTML profiles or Web 2.0 profiles to inspect HTML payload for protecting your applications. The Web App Firewall also supports Field Format Check protection for Google Web Toolkit (GWT) applications.

The Field Formats check requires that you enable one or more actions. The Web App Firewall examines the submitted inputs and applies the specified actions.

**Note**

Field format rules are tightening rules. Adding them to relaxation list from learned data acts as a blocking rule.

To relax field format rules, please remove particular “fieldname” from the fieldformat relaxations list.

You have the option to set the default field formats to specify Field Type and the minimum and maximum length of data expected in each form field on each web form that you want to protect. You can deploy relaxation rules to configure a Field Format for an individual field of a specific form. Multiple rules can be added to specify the field name, the action URL, and Field Formats. Specify Field Formats to accept different types of inputs in different form fields. The learning feature can provide recommendations for the relaxation rules.

**Field Format Actions**—You can enable Block, Log, Stats, and Learn actions. At least one of these actions must be enabled to engage the Field Format Check protection.

- **Block.** If you enable block, the block action is triggered if the input does not conform to the specified Field Format. If a rule was configured for the target field, the input is checked against the specified rule. Otherwise, it is checked against the default field format specification. Any mismatch in the Field Type or min/max length specification results in blocking the request.
- **Log.** If you enable the log feature, the Field Format check generates log messages indicating the actions that it takes. You can monitor the logs to determine whether responses to legitimate requests are getting blocked. A large increase in the number of log messages can indicate malicious attempts to launch an attack.
- **Stats.** If enabled, the stats feature gathers statistics about violations and logs. An unexpected surge in the stats counter might indicate that your application is under attack, or you might have to revisit the configuration to see if the specified field format is too restrictive.
- **Learn.** If you are not sure which Field Types or minimum and maximum length values might be ideally suited for your application, you can use the learn feature to generate recommendations based on the learned data. The Web App Firewall learning engine monitors the traffic and provides field format recommendations based on the observed values. To get optimal benefit without compromising performance, you might want to enable the learn option for a short time to get a representative sample of the rules, and then deploy the rules and disable learning.

Note: The Web App Firewall’s learning engine can distinguish only the first 128 bytes of the name. If a form has multiple fields with names that match for the first 128 bytes, the learning engine might not be able to distinguish between them. Similarly, the deployed relaxation rule might inadvertently relax all such fields.

**Default Field Format**—In addition to configuring the actions, you can configure the default Field

Format to specify the type of data expected in all the form fields for your application. A Field Type can be selected as the Field Format type. Minimum length and Maximum length parameters can be used to specify the length of the allowed inputs. As an alternative to Field Types, you can use Character Maps to specify what's allowed in a field (except in cluster deployments).

- **Field Type**—Field Types are named expressions to which you assign assigned priority values. Field Type expressions specify the allowed inputs and are matched against the submitted data to determine whether the received values are consistent with the allowed values. The Field Types are checked in the order of their priority numbers. A lower number indicates a higher priority. The Web App Firewall gives you the option to add your own Field Types and assign them the priorities you want. The priority value can range from 0 through 64000. The following built-in Field Types are provided to help simplify the configuration process:

```
1 > sh appfw fieldtype
2 1) Name: integer Regex: "[+-]?[0-9]+$"
3 Priority: 30 Comment: Integer
4 Builtin: IMMUTABLE
5 2) Name: alpha Regex: "[a-zA-Z]+$"
6 Priority: 40 Comment: "Alpha
7 characters"
8 Builtin: IMMUTABLE
9 3) Name: alphanumeric Regex: "[a-zA-Z0-9]+$"
10 Priority: 50 Comment: "Alpha-numeric
11 characters"
12 Builtin: IMMUTABLE
13 4) Name: nohtml Regex: "[^&<>]*$"
14 Priority: 60 Comment: "Not HTML"
15 Builtin: IMMUTABLE
16 5) Name: any Regex: ".*$"
17 Priority: 70 Comment: Anything
18 Builtin: IMMUTABLE
19 Done
20 >
```

**Note:** The built-in Field Types are IMMUTABLE. They cannot be modified or removed. Any Field Types that you add are MODIFIABLE. You can edit them or remove them.

Configuring a Field Type as a default Field Format might be useful when you have a PCRE expression that can identify the valid inputs in all or most of the form fields for your application and exclude the invalid inputs. For example, if all the inputs in your application forms are expected to contain only numbers and letters, you might want to use the built-in Field Type alphanumeric as the default Field Type. Any non-alphanumeric character such as a backslash () or semicolon ; in the input will trigger a violation. You can also add your own customized Field Types and use them to configure default Field Formats. For example, if you want to make the lowercase “x”, “y”, and “z” the only allowed alpha characters, you can configure a customized Field Type with regular expression “^[x-z]+\$”. You can assign it a higher priority (lower priority number) then

the built-in Field Types and use it as the default Field Type.

- **Minimum Length**—The default minimum data length assigned to form fields in web forms that do not have an explicit setting. This parameter is set to 0 by default, which allows the user to leave the field blank. Any higher setting forces users to fill in the field.

**Caution:** If the minimum length value is 0 but the Field Type is integer, alpha, or alphanumeric, a request is blocked if any input field is left empty, despite the minimum length setting. That is because the regEx for these Field Types contains a + character, which means one or more characters. Distinguishing an integer from an alpha character requires at least one character.

- **Maximum Length**—The default maximum data length assigned to form fields in web forms that do not have an explicit setting. This parameter is set to 65535 by default.

**Note:**

Characters vs bytes. The minimum and the maximum lengths for the field formats represent the number of bytes, not the number of characters. Languages that have greater than one-byte character representation can cause the limit to be exceeded with fewer characters than the number configured for the maximum value. For example, with double-byte character representation, the maximum value of 9 allows no more than 4 characters. The GUI allows you to cut and paste UTF-8 characters directly into the GUI without having to convert them to hex.

- **Maximum Name Occurrences** - Maximum number of form field name instances allowed in a request. The default value is 65535.
- **Character Maps:** In addition to recommending the Field Types, the Web App Firewall learning engine offers you an additional option, Use Character Maps, to deploy the Format Check rules. A Character Map is a set of all the characters allowed in a particular form field. You can fine tune the Field format specification to allow or disallow specific characters by using Character Maps. A separate Character Map is generated for each form field. The alpha and numeric characters are treated differently in Character Maps. If any alpha character is seen in the input, all alpha characters [A-Za-z] will be allowed by the recommended PCRE expression in the Character Map. Similarly, if any digit is included, all digits [0-9] will be allowed. Non-printable characters are specified by using the x construct. Only single Byte characters with values between 0-255 are considered for Character Map recommendations.

A Character Map can be more specific than the corresponding Field Type recommendation. In some situations, Character Maps might be a better option, because they give you tighter control over the set of characters allowed as inputs. The deployed character maps are displayed as strings that start with prefix “CM” followed by digits. The priority for the Character Maps starts at 10000. As with user-added Field Types, you can add, edit or remove a Character Map. Character Maps that are currently used in deployed rules cannot be modified or removed.

**Notes:**

- Character Maps are not supported in cluster deployments.
- When you use character map instead of a built-in field type and save a field formats rule with it, the rule does not save the changes and continues to display the field type.
- When the character map matches one of the built-in type, the field type is reused instead of creating a new character map.

**Configure the field format check using the CLI**

In the command line interface, you can use the `add appfw fieldtype` command to add a new Field Type. You can use either the `set appfw profile` command or the `add appfw profile` command to configure the Field Format check and specify which actions to perform. You can use the `unset appfw profile` command to revert the configured settings back to their defaults. To specify a Field Format rule, use the `bind appfw` command to bind a Field Type to a form Field and the action URL, along with the minimum and maximum length specifications.

**To add, remove or view a Field Type by using the CLI:**

Use the `add` command to add a Field Type. You must specify the Name, Regular expression and Priority when adding a new Field Type. You also have the option to add a Comment. You can use the `show` command to display the configured Field Types. You can also delete a Field Type by using the `remove` command, which requires only the Name of the Field Type.

```
add [appfw] fieldType <name> <regex> <priority> [-comment <string>]
```

where:

<regex> is a regular expression

<priority> is a positive\_integer

Example:

```

1 add fieldType "Cust_Zipcode" "[0-9]{
2 5 }
3 [-][0-9]{
4 4 }
5 $" 4
6
7 - show [appfw] fieldType [<name>]
8
9 Example: sh fieldType
10
11 sh appfw fieldType
12
13 sh appfw fieldType cust_zipcode
14
```

```

15 - `rm [appfw] fieldType <name>`
16
17 Example: rm fieldType cust_ziPcode
18
19 `rm appfw fieldType cust_ziPcode`

```

**Note:**

As shown in the example, use of `appfw` in the command is optional. For example, `Add FieldType` or `Add appfw fieldType` are valid options. The names of the field types are case insensitive due to normalization. As shown in the examples, `Cust_Zipcode`, `cust_zipcode`, and `cUSt_ziPcode` refer to the same field type.

To configure a Field Format check by using the command line

Use either the `set appfw profile` command or the `add appfw profile` command, as follows:

- `set appfw profile <name> -fieldFormatAction ([[block] [learn] [log] [stats]])| [none])`
- `set appfw profile <name>-defaultFieldType <string>`
- `set appfw profile <name> -defaultFieldFormatMinLength <integer>`
- `set appfw profile <name> -defaultFieldFormatMaxLength <integer>`
- `set appfw profile <name> -defaultFieldFormatMaxOccurrences <integer>`

To configure a Field Format relaxation rule by using the command line

```

1 bind appfw profile <name> (-fieldFormat <string> <formActionURL> <
 fieldType>
2 [-fieldFormatMinLength <positive_integer>] [-fieldFormatMaxLength <
 positive_integer>]
3 [-isRegex (REGEX | NOTREGEX)])

```

Example:

```

1 bind appfw profile pr_ffc -fieldFormat "login_name" ".*\/login.php"
 integer -fieldformatMinLength 3 -FieldformatMaxlength 6

```

**Configure the field formats security check using the GUI**

In the GUI, you can manage the Field Types. You can also configure the Field Formats security check in the pane for the profile associated with your application.

To add, modify or remove a Field Type using the GUI

1. Navigate to Application Firewall node. In the Settings, click **Manage Field Types** to display the Configure Application Firewall Field Type dialogue box.
2. Click **Add** to add a new Field Type. Follow the instructions in this pane and click Create. You can also edit or delete any user-added Field Type if it is currently not being used by a deployed rule.

To add or modify the Field Formats security check by using the GUI

1. Navigate to **Application Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Security Checks**.

The security check table displays the currently configured action settings for all the security checks. You have 2 options for configuration:

- a) If you just want to enable or disable **Block, Log, Stats**, and **Learn** actions for Field Formats, you can select or clear check boxes in the table, click **OK**, and then click **Save and Close** to close the Security Check pane.
- b) If you want to configure additional options for this security check, double click Field Formats, or select the row and click Action Settings, to display the following options for **Default Field Format**:

- **Field Type**—Select the Field Type that you want to configure as the default Field Type. You can select the built-in and user-defined Field Types. The deployed Character Maps are also included in the list and can be selected.
  - **Minimum Length**—Specify the minimum number of characters that must be in each field. Possible values: 0-65535.
  - **Maximum Length**—Specify the maximum number of characters that must be in each field. Possible values: 1-65535.
  - **Maximum Name Occurrences** - Specify the maximum number of form field name instances in a request. Possible values: 0-65535.
- You can also edit the **Block, Log, Stats** and **Learn** actions in the Field Formats Settings pane.

After making any of the above changes, click **OK** to save the changes and return to the Security Checks table. You can proceed to configure other security checks if needed. Click **OK** to save all the changes you have made in the Security Checks section, and then click **Save and Close** to close the Security Check pane.

Configure a Field Formats relaxation rule by using the GUI

1. Navigate to **Application Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Relaxation Rules**. The Relaxation Rules table has a Field Formats entry. You can double click, or select this row and click the Edit button, to access the Field Formats Relaxation Rules dialogue. You can perform **Add, Edit, Delete, Enable, or Disable** operations for relaxation rules.

For a consolidated view of all the relaxation rules, you can highlight the Field Formats row and click Visualizer. The visualizer for deployed relaxations offers you the option to Add a new rule or Edit an existing one. You can also Enable or Disable a group of rules by selecting a node and clicking the corresponding buttons in the relaxation visualizer.

## Using the learn feature with the Field Formats Check

When the learn action is enabled, the Web App Firewall learning engine monitors the traffic and learns the triggered violations. You can periodically inspect these learned rules. After due consideration, you can deploy the learned rule as a Field Format relaxation rule.

**Field formats learning enhancement**—An Web App Firewall learning enhancement was introduced in release 11.0. In the previous releases, once the learned field format recommendation is deployed, the Web App Firewall learning engine stops monitoring the valid requests for the purpose of recommending new rules on the basis of the new data points. This limits the configured security protection, because the learning database does not include any representations of the new data seen in the valid requests processed by the security check.

Violations are no longer coupled with learning. The learning engine learns and makes recommendations for the field formats regardless of the violations. In addition to checking the blocked requests to determine whether the current field format is too restrictive and needs to be relaxed, the learning engine also monitors the allowed requests to determine whether the current field format is too permissive, and allows elevating the security by deploying a more restrictive rule.

Following is a summary of the Field Formats learning behavior:

**No Field format is bound**—The behavior remains unchanged in this scenario. All learn data is sent to the aslearn engine. The learning engine suggests a field format rule based on the data set.


**Field format is bound:** In the previous releases, observed data is sent to the aslearn engine only in the case of a violation. The learning engine suggests a field format rule based on the data set. In the 11.0 release, all data is sent to aslearn engine even if no violation is triggered. The learning engine suggests a field format rule based on the entire data set of all received inputs.

### Use Case for learning enhancement:

If the initial field format learned rules are based on a small sample of data, a few non typical values might result in a recommendation that is too lenient for the target field. The ongoing learning allows the Web App Firewall to observe data points from every request to collect a representative sample for the learned recommendations. This is helpful in further tightening the security to deploy the optimal input format with an adequate range value.



## HOW FIELD FORMAT RULES ARE SUGGESTED

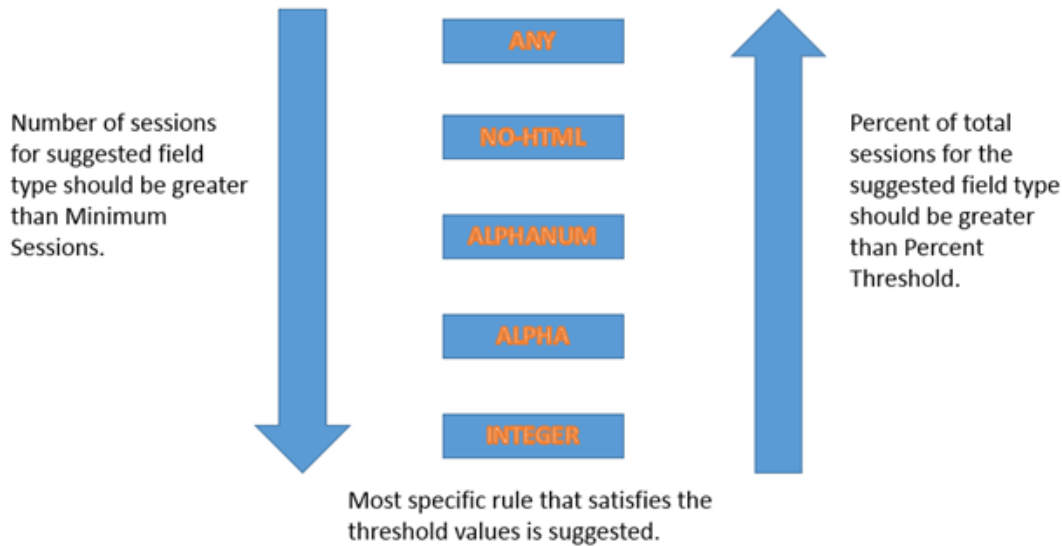

The field format learning makes use of the priority of the Field Types as well as the configured settings of the following learning thresholds:

- **FieldFormatMinThreshold**—Minimum number of times a specific form field must be observed before a learned relaxation is generated. Default: 1.
- **FieldFormatPercentThreshold**—Percentage of times a form field matched a particular Field Type, before a learned relaxation is generated. Default: 0.

The field format rule recommendations are based on the following criteria:

- **Field Type recommendations**—The Field Type recommendations are determined by the assigned priorities of the existing Field Types and the specified Field Format thresholds. The priorities determine the order in which the Field Types are matched against the inputs. A lower number specifies a higher priority. For example, Field Type integer has the higher priority (30) and is therefore evaluated before Field Type alphanumeric (50). The thresholds determine the number of inputs evaluated to collect a representative sample for the data point. Assigning the right priority to the configured Field Types, and configuring an appropriate **learningsetting** value for the **fieldFormatPercentThreshold** and **fieldFormatMinThreshold** parameters, is essential for getting the correct Field Format recommendation. The Field Type with the highest priority, based on the configured thresholds, is matched first against the inputs. If there is a match, this Field Type is suggested without considering the other Field Types. For example, three default Field Types, integer, alphanumeric, and any will match if all the inputs contain only numbers. However, integer will be recommended since it has the highest priority.
- **Minimum and Maximum length recommendations**—Calculations for the minimum and max-

imum lengths for the Field Format are done independently of the determination for the Field Type. The field format length calculations are based on the average length of all the observed inputs. Half of this calculated average is suggested as the min value, and twice the value of this average is suggested as the max value. The range for the Minimum Length is 0-65535 and the range for the Maximum Length is 1-65535. The configured value for the minimum length cannot exceed the maximum length.

- **Handling of space character**—The Field Format check counts every space character when checking for the Field Formats length. Leading or trailing spaces are not stripped, and multiple consecutive spaces in the middle of the input string are no longer consolidated to a single space during input processing.

Example to illustrate the Field Format recommendations:

```

1 Total requests: 100
2 Number of Req with Field Type:
3 Int : 22 (22 int values) - 22%
4 Alpha : 44 (44 alpha values) - 44%
5 Alphanum: 14 (14 + 44 + 22 = 80 alphanum values) = 80%
6 noHTML: 10 (80 + 10 = 90 noHTML values) = 90%
7 any : 10 (90 + 10 = 100 any values) = 100%
8
9 % threshold Suggested Field Type
10 0-22 int
11 23-44 alpha
12 45-80 alphanum
13 81-90 noHTML
14 91-100 any

```

To view or use learned data by using the command line interface

```

1 show appfw learningdata <profilename> FieldFormat
2 rm appfw learningdata <profilename> -fieldFormat <string> <
 formActionURL>
3 export appfw learningdata <profilename> FieldFormat

```

To view or use learned data by using the GUI

1. Navigate to **Application Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Learned Rules**. You can select the Field Formats entry in the Learned Rules table and double-click it to access the learned rules. You can deploy the learned rules or edit a rule before deploying it as a relaxation rule. To discard a rule, you can select it and click the **Skip** button. You can edit only one rule at a time, but you can select multiple rules to deploy or skip.

You also have the option to show a summarized view of the learned relaxations by selecting the Field Formats entry in the Learned Rules table and clicking Visualizer to get a consolidated view of all the learned violations. The visualizer makes it very easy to manage the learned rules.

It presents a comprehensive view of the data on one screen and facilitates taking action on a group of rules with one click. The biggest advantage of the visualizer is that it recommends regular expressions to consolidate multiple rules. You can select a subset of these rules, based on the delimiter and Action URL. You can display 25, 50, or 75 rules in the visualizer, by selecting the number from a drop-down list. The visualizer for learned rules offers the option to edit the rules and deploy them as relaxations. Or you can skip the rules to ignore them.

## Using the log feature with the field formats check

When the log action is enabled, the Field Formats security check violations are logged in the audit log as APPFW\_FIELDFORMAT violations. The Web App Firewall supports both Native and CEF log formats. You can also send the logs to a remote syslog server.

To access the log messages by using the command line

Switch to the shell and tail the ns.logs in the /var/log/ folder to access the log messages pertaining to the Field Formats violations:

- `Shell`
- `tail -f /var/log/ns.log | grep APPFW_FIELDFORMAT`

To access the log messages by using the GUI

The GUI includes a very useful tool (Syslog Viewer) for analyzing the log messages. You have multiple options for accessing the Syslog Viewer:

- Navigate to the **Application Firewall > Profiles**, select the target profile, and click **Security Checks**. Highlight the Field Formats row and click **Logs**. When you access the logs directly from the **Field Formats security** check of the profile, it filters out the log messages and displays only the logs pertaining to these security check violations.
- You can also access the Syslog Viewer by navigating to **NetScaler > System > Auditing**. In the **Audit Messages** section, click the **Syslog messages** link to display the **Syslog Viewer**, which displays all log messages, including other security check violation logs. This is useful for debugging when multiple security check violations might be triggered during request processing.
- Navigate to **Application Firewall > policies > Auditing**. In the **Audit Messages** section, click the Syslog messages link to display the Syslog Viewer, which displays all log messages, including other security check violation logs.

The HTML based Syslog Viewer provides various filter options for selecting only the log messages that are of interest to you. To access Field Formats security check violation log messages, filter by selecting APPFW in the dropdown options for Module. The Event Type displays a rich set of options to further refine your selection. For example, if you select the **APPFW\_FIELDFORMAT**

check box and click the **Apply** button, only log messages pertaining to the Field Formats security check violations appear in the Syslog Viewer.

If you place the cursor in the row for a specific log message, multiple options, such as Module and EventType, appear below the log message. You can select any of these options to highlight the corresponding information in the logs.

Example of a Native format log message when the request is not blocked

```

1 Jun 10 22:32:26 <local0.info> 10.217.31.98 06/10/2015:22:32:26 GMT ns
 0-PPE-0 :
2 default APPFW APPFW_FIELDFORMAT 97 0 : 10.217.253.62 562-PPE0
3 x1MV+YnNGzQFM3Bsy2wti4bhXio0001 pr_ffc http://aaron.stratum8.net/FFC/
 login_post.php
4 Field format check failed for field passwd="65568888sz-*_" <not blocked
 >
5 Example of a CEF format log message when the request is blocked
6 Jun 11 00:03:51 <local0.info> 10.217.31.98
7 CEF:0|Citrix|NetScaler|NS11.0|APPFW|APPFW_FIELDFORMAT|6|src
 =10.217.253.62 spt=27076
8 method=POST request=http://aaron.stratum8.net/FFC/maxlen_post.php msg=
 Field format check
9 failed for field text_area="" cn1=108 cn2=644 cs1=pr_ffc cs2=PPE0
10 cs3=GaUR0fl1Nx1jJTvja5twH5BBqI0000 cs4=ALERT cs5=2015 act=blocked

```

## Statistics for the field formats violations

When the stats action is enabled, the corresponding counter for the Field Formats check is incremented when the Web App Firewall takes any action for this security check. The statistics are collected for Rate and Total count for Traffic, Violations, and Logs. The increment of the log counter can vary depending on the configured settings. For example, if the block action is enabled, the request for a page that contains 3 Field Format violations increments the stats counter by one, because the page is blocked as soon as the first Field Formats violation is detected. However, if block is disabled, processing the same request increments the statistics counter for violations and the logs by 3, because each Field Formats violation generates a separate log message.

To display Field Formats statistics by using command line

At the command prompt, type:

```
sh appfw stats
```

To display stats for a specific profile, use the following command:

```
stat appfw profile <profile name>
```

To display Field Formats statistics by using GUI

1. Navigate to **System > Security > Application Firewall**.

2. In the right pane, access the Statistics Link.
3. Use the scroll bar to view the statistics about Field Formats violations and logs. The statistics table provides real-time data and is updated every 7 seconds.

### Deployment Tip

- Enable Field format actions log, learn and stats.
- After running a representative sample of the traffic to your application, review the learned recommendations.
- If a Field Type is recommended by most of the learned rules, configure that Field Type as the Default Field Type. For minimum and maximum lengths, use the widest range suggested by these rules.
- Deploy rules for other fields for which different Field Types or different minimum/maximum lengths are better suited.
- Enable blocking and disable learning.
- Monitor stats and logs. If a significant number of violations are still being triggered, you might want to review the log messages to confirm that the violations represent malicious requests that must have been blocked. If valid requests are being flagged as violations, you can either edit the configured Field Format rule to further relax it or enable learning again to get recommendations based on the new data points.

**Note:** You can fine tune your configuration by getting new learning recommendations.

### Highlights

Note the following points about the Field Format security check:

- **Protection**—By configuring optimal field format rules, you can protect against many attacks. For example, if you specify that a field can only have integers, hackers will not be able to launch SQL Injection or cross-site scripting attacks by using this field, because the inputs required to launch such attacks will not meet the configured field format requirement.
- **Performance**—You can limit the minimum and the maximum allowed length for the inputs in the field format rules. This can prevent a malicious user from entering excessively large input strings in an attempt to add processing overhead to the server, or worse, cause the server to dump core because of stack overflow. By limiting the input size, you can shorten the time required for processing legitimate requests.
- **Configuring Field Formats**—You must enable one of the actions (block, log, stats, learn) to engage the field Format protection. You can also specify the Field format rules to identify the allowed inputs in your form fields.

- **Selecting Character Maps vs. Field Types**—Both Character Maps and Field Types use regular expressions. However, a Character Map provides a more specific expression by narrowing down the list of allowed characters. For example, for an input such as `janedoe@citrix.com`, the learning engine might recommend the Field Type `nohtml` but the Character Map `[@-Za-z]` might be more specific, because it narrows down the allowed set of non-alpha characters. The Character Map option allows, in addition to alpha characters, only two non-alpha characters: period (.) and at (@).
- **Ongoing Learning**—The Web App Firewall monitors and takes into account all the incoming data (violations as well as allowed inputs) to build a learning table for recommending rules. The rules are revised and updated as new incoming data arrives. New field format rules are suggested for a field even if it already has a bound field format rule. If the configured Field Formats are too restrictive and are blocking the valid requests, you can deploy a more relaxed Field Format. Similarly, if the current Field Formats are too generic, you can further refine and tighten the security by deploying a more restrictive Field Format.
- **Overwriting Rules**—If a rule has already been deployed for a field/URL combination, the GUI allows the user to update the field format. A dialog box asks for confirmation to replace the existing rule. If you are using the command line interface, you have to explicitly unbind the previous binding and then bind the new rule.
- **Multiple match**—If multiple field formats match a given field name and its action URL, the Web App Firewall arbitrarily selects one of them to apply.
- **Buffer boundary**—If a field value extends across multiple streaming buffers, and the format for these two parts of the field value is different, a field format corresponding to “any” is sent to the learn database.
- **Field Format vs. Field Consistency Check**—Both the Field Format check and the Field Consistency check are form-based protection checks. The Field Formats check provides a different type of protection than does the Form Field Consistency check. The Form Field Consistency check verifies that the structure of the web forms returned by users is intact, that data format restrictions configured in the HTML are respected, and that data in hidden fields has not been modified. It can do this without any specific knowledge about your web forms other than what it derives from the web form itself. The Field Formats check verifies that the data in each form field matches the specific formatting restrictions that you configured manually, or that the learning feature generated and you approved. In other words, the Form Field Consistency check enforces general web form security, while the Field Formats check enforces the specific rules for the allowed inputs for your web forms.

## Form field consistency check

December 4, 2020

The Form Field Consistency check examines the web forms returned by users of your website, and verifies that web forms were not modified inappropriately by the client. This check applies only to HTML requests that contain a web form, with or without data. It does not apply to XML requests.

The Form Field Consistency check prevents clients from making unauthorized changes to the structure of the web forms on your website when they fill out and submit a form. It also ensures that the data a user submits meets the HTML restrictions for length and type, and that data in hidden fields is not modified. This prevents an attacker from tampering with a web form and using the modified form to gain unauthorized access to website, redirect the output of a contact form that uses an insecure script and thereby send unsolicited bulk email, or exploit a vulnerability in your web server software to gain control of the web server or the underlying operating system. Web forms are a weak link on many websites and attract a wide range of attacks.

The Form Field Consistency check verifies all of the following:

- If a field is sent to the user, the check ensures that it is returned by the user.
- The check enforces HTML field lengths and types.

**Note:**

- The Form Field Consistency check enforces HTML restrictions on data type and length but does not otherwise validate the data in web forms. You can use the Field Formats check to set up rules that validate data returned in specific form fields on your web forms.
- The Form Field Consistency protection inserts a hidden field “as\_fid” in the response forms which are sent to the client. The same hidden field will be stripped by ADC when the client submits the form. If there is any client-side javascript doing checksum computation on the form fields and verifying the same checksum at the backend may cause application breakage. In this scenario, it is recommended to relax the application firewall form field consistency hidden field “as\_fid” from client-side javascript checksum computation.

- If your web server does not send a field to the user, the check does not allow the user to add that field and return data in it.
- If a field is a read-only or hidden field, the check verifies that the data has not changed.
- If a field is a list box or radio button field, the check verifies that the data in the response corresponds to one of the values in that field.

If a web form returned by a user violates one or more of the Form Field consistency checks, and you have not configured the Web App Firewall to allow that web form to violate the Form Field Consistency checks, the request is blocked.

If you use the wizard or the GUI, in the Modify Form Field Consistency Check dialog box, on the General tab you can enable or disable the Block, Log, Learn, and Statistics actions.

You also configure Sessionless Field Consistency in the General tab. If Sessionless Field Consistency is enabled, the Web App Firewall checks only the web form structure, dispensing with those parts of the Form Field Consistency check that depend upon maintaining session information. This can speed the Form Field Consistency check with little security penalty for websites that use many forms. To use Sessionless Field Consistency on all web forms, select On. To use it only for forms submitted with the HTTP POST method, select postOnly

If you use the command-line interface, you can enter the following command to configure the Form Field Consistency Check:

- `set appfw profile <name> -fieldConsistencyAction [**block**] [**learn**] [**log**] [**stats**] [**none**]`

To specify relaxations for the Form Field Consistency check, you must use the GUI. On the Checks tab of the Modify Form Field Consistency Check dialog box, click Add to open the Add Form Field Consistency Check Relaxation dialog box, or select an existing relaxation and click Open to open the Modify Form Field Consistency Check Relaxation dialog box. Either dialog box provides the same options for configuring a relaxation, as described in [Manual Configuration By Using the GUI](#).

Following are examples of Form Field Consistency check relaxations:

#### Form Field Names:

- Choose form fields with the name UserType:

```
1 ^UserType$
```

- Choose form fields with names that begin with UserType\_ and are followed by a string that begins with a letter or number and consists of from one to twenty-one letters, numbers, or the apostrophe or hyphen symbol:

```
1 ^UserType_[0-9A-Za-z][0-9A-Za-z' -]{
2 0,20 }
3 $
```

- Choose form fields with names that begin with Turkish-UserType\_ and are otherwise the same as the previous expression, except that they can contain Turkish special characters throughout:

```
1 ^T\xC3\xBCrk\xC3\xA7e-UserType_([0-9A-Za-z]|\x[0-9A-Fa-f][0-9A-
Fa-f])+$
```

#### Note:



See [PCRE Character Encoding Format](#) for a complete description of supported special characters and how to encode them properly.

- Choose form field names that begin with a letter or number, consist of a combination of letters and/or numbers only, and that contain the string Num anywhere in the string:

```
1 ^[0-9A-Za-z]*Num[0-9A-Za-z]*$
```

### Form Field Action URLs:

- Choose URLs beginning with `http://www.example.com/search.pl?` and containing any string after the query except for a new query:

```
1 ^http://www[.]example[.]com/search[.]pl?[^\?]*$
```

- Choose URLs that begin with `http://www.example-español.com` and have paths and filenames that consist of upper-case and lower-case letters, numbers, non-ASCII special characters, and selected symbols in the path. The ñ character and any other special characters are represented as encoded UTF-8 strings containing the hexadecimal code assigned to each special character in the UTF-8 charset:

```
1 ^http://www[.]example-españ\xC3\xB1o[.]com/((([0-9A-Za-z] | \\x[0-9A-
-Fa-f] [0-9A-Fa-f])
2 ([0-9A-Za-z_-] | \\x[0-9A-Fa-f] [0-9A-Fa-f]) */)* ([0-9A-Za-z] | \\x[0-9
A-Fa-f] [0-9A-Fa-f])
3 ([0-9A-Za-z_-] | \\x[0-9A-Fa-f] [0-9A-Fa-f]) * [.] (asp|htp|php|s?html
?)$
```

- Choose all URLs that contain the string `/search.cgi?`:

```
1 ^[^\<>]*\/search[.]cgi\?[^\<>]*$
```

### Caution:

Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the URL you want to add as an exception, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (\*) metacharacter/wildcard combination, can have results you do not want or expect, such as blocking access to web content that you did not intend to block or allowing an attack that the Cookie Consistency check would otherwise have blocked.

## CSRF form tagging check

May 2, 2023

The Cross Site Request Forgery (CSRF) Form Tagging check tags each web form sent by a protected website to users with a unique and unpredictable FormID, and then examines the web forms returned by users to ensure that the supplied FormID is correct. This check protects against cross-site request forgery attacks. This check applies only to HTML requests that contain a web form, with or without data. It does not apply to XML requests.

The CSRF Form Tagging check prevents attackers from using their own web forms to send high volume form responses with data to your protected websites. This check requires relatively little CPU processing capacity compared to certain other security checks that analyze web forms in depth. It is therefore able to handle high volume attacks without seriously degrading the performance of the protected website or the Web App Firewall itself.

Before you enable the CSRF Form Tagging check, you must be aware of the following:

- You need to enable form tagging. The CSRF check depends on form tagging and does not work without it.
- You must disable the NetScaler Integrated Caching feature for all web pages containing forms that are protected by that profile. The Integrated Caching feature and CSRF form tagging are not compatible.
- You must consider enabling Referrer checking. Referrer checking is part of the Start URL check, but it prevents cross-site request forgeries, not Start URL violations. Referrer checking also puts less load on the CPU than does the CSRF Form Tagging check. If a request violates Referrer checking, it is immediately blocked, so the CSRF Form Tagging check is not invoked.
- The CSRF Form Tagging check does not work with web forms that use different domains in the form-origin URL and form-action URL. For example, CSRF Form Tagging cannot protect a web form with a form-origin URL of <http://www.example.com> and a form action URL of <http://www.example.org/form.pl>, because example.com and example.org are different domains.

If you use the wizard or the GUI, in the Modify CSRF Form Tagging Check dialog box, on the General tab you can enable or disable the Block, Log, Learn and Statistics actions.

If you use the command-line interface, you can enter the following command to configure the CSRF Form Tagging Check:

- `set appfw profile <name> -CSRFTagAction [**block**] [**log**] [**learn**] [**stats**] [**none**]`

To specify relaxations for the CSRF Form Tagging check, you must use the GUI. On the Checks tab of the Modify CSRF Form Tagging Check dialog box, click Add to open the Add CSRF Form Tagging Check Relaxation dialog box, or select an existing relaxation and click Open to open the Modify CSRF Form Tagging Check Relaxation dialog box. Either dialog box provides the same options for configuring a relaxation.

An alert is generated when you set the NetScaler Web App Firewall session limit to a value of 0 or lower, because such a setting affects advanced protection check functionality that requires a properly functioning Web App Firewall session.

Following are examples of CSRF Form Tagging check relaxations:

**Note:** The following expressions are URL expressions that can be used in both the Form Origin URL and Form Action URL roles.

- Choose URLs beginning with `http://www.example.com/search.pl?` and containing any string after the query, except for a new query:

```
1 ^http://www[.]example[.]com/search[.]pl?[^\?]*$
```

- Choose URLs that begin with `http://www.example-español.com` and have paths and filenames that consist of upper-case and lower-case letters, numbers, non-ASCII special characters, and selected symbols in the path. The ñ character and any other special characters are represented as encoded UTF-8 strings containing the hexadecimal code assigned to each special character in the UTF-8 charset:

```
1 ^http://www[.]example-espa\xC3\xB1o\xE1[.]com/(([0-9A-Za-z]|\x[0-9A-
 Fa-f][0-9A-Fa-f])
2 ([0-9A-Za-z_-]|\x[0-9A-Fa-f][0-9A-Fa-f])*/)*([0-9A-Za-z]|\x[0-9A-Fa-f]
 [0-9A-Fa-f])([0-9A-Za-z_-]|\x[0-9A-Fa-f][0-9A-Fa-f])*[.](asp|http|
 php|s?html?)$
```

- Choose all URLs that contain the string `/search.cgi?`:

```
1 ^[^\?<>]*/search[.]cgi\?[^\?<>]*$
```

### Important

Regular expressions are powerful. If you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the URL that you want to add as an exception, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (.) metacharacter/wildcard combination, can have results you do not want, such as blocking access to web content that you did not intend to block or allowing an attack that the check would otherwise have blocked.

### Tip

When `enableValidate referrer header` is enabled under the Start URL Action, ensure that the Referrer Header URL is added to StartURL as well.

### Note

When NetScaler reaches the `appfw_session_limit` and CSRF checks are enabled, the web application freezes.

To prevent web application freeze, decrease the session timeout and increase the session limit by using the following commands:

From CLI: > set appfw settings –sessiontimeout 300

From shell: root@ns# nsapimgr\_wr.sh -s appfw\_session\_limit=200000

Logging and generating SNMP alarms when appfw\_session\_limit is reached assists you in troubleshooting and debugging issues.

## Managing CSRF form tagging check relaxations

May 2, 2023

You configure an exception (or relaxation) to the CSRF Form Tagging security check in the Add Cross-Site Request Forgery Tagging Check Relaxation dialog box or the Modify Cross-Site Request Forgery Tagging Check Relaxation dialog box.

### To configure a CSRF form tagging check relaxation by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the **Profiles** pane, select the profile you want to configure, and then click **Open**.
3. In the **Configure Web App Firewall Profile** dialog box, click the **Security Checks** tab. The **Security Checks** tab contains the list of Web App Firewall security checks.
4. To add or modify a CSRF relaxation, do one of the following:
  - To add a new relaxation, click **Add**.
  - To modify an existing relaxation, select the relaxation that you want to modify, and then click **Open**.

The **Add Cross-Site Request Forgery Tagging Check Relaxation** or **Modify Cross-Site Request Forgery Tagging Check Relaxation** dialog box is displayed. Except for the title, these dialog boxes are identical.

5. Fill in the dialog box as described below.
  - **Enabled check box**—Select to place this relaxation or rule in active use; clear to deactivate it.
  - **Form Origin URL**—In the text area, enter a PCRE-format regular expression that defines the URL that hosts the form.

- **Form Action URL**—In the text area, enter a PCRE-format regular expression that defines the URL to which data entered into the form is delivered.
- **Comments**—In the text area, type a comment. Optional.

**Note:**

For any element that requires a regular expression, you can type the regular expression, use the **Regex Tokens** menu to insert regular expression elements and symbols directly into the text box, or click **Regex Editor** to open the **Add Regular Expression** dialog box, and use it to construct the expression.

6. Click **OK**. The **Add Cross-Site Request Forgery Tagging Check Relaxation** or **Modify Cross-Site Request Forgery Tagging Check Relaxation** dialog box closes and you return to the **Modify Cross-Site Request Forgery Tagging Check** dialog box.
7. To remove a relaxation or rule, select it, and then click **Remove**.
8. To enable a relaxation or rule, select it, and then click **Enable**.
9. To disable a relaxation or rule, select it, and then click **Disable**.
10. To configure the settings and relationships of all existing relaxations in an integrated interactive graphic display, click **Visualizer**, and use the display tools.
11. To review and configure learned rules for the CSRF check, click **Learning** and perform the steps in [To configure and use the Learning feature](#).
12. Click **OK**.

## URL protection checks

December 4, 2020

The URL Protection checks examine request URLs to prevent attackers from aggressively attempting to access multiple URLs (forceful browsing) or using a URL to trigger a known security vulnerability in web server software or website scripts.

### Start URL check

December 4, 2020

The Start URL check examines the URLs in incoming requests and blocks the connection attempt if the URL does not meet the specified criteria. To meet the criteria, the URL must match an entry in the Start URL list, unless the Enforce URL Closure parameter is enabled. If you enable this parameter, a user who clicks a link on your website is connected to the target of that link.

The primary purpose of the Start URL check is to prevent repeated attempts to access random URLs on a website, (forceful browsing) through bookmarks, external links, or jumping to pages by manually typing in the URLs to skip the pages required to reach that part of the website. Forceful browsing can be used to trigger a buffer overflow, find content that users were not intended to access directly, or find a back door into secure areas of your Web server. The Web App Firewall enforces a website's given traversal or logic path by allowing access to only the URL's that are configured as start URLs.

If you use the wizard or the GUI, in the Modify Start URL Check dialog box, on the General tab you can enable or disable Block, Log, Statistics, Learn actions, and the following parameters:

- **Enforce URL Closure.** Allow users to access any web page on your website by clicking a hyper-link on any other page on your website. Users can navigate to any page on your website that can be reached from the home page or any designated start page by clicking hyperlinks.  
**Note:** The URL closure feature allows any query string to be appended to and sent with the action URL of a web form submitted by using the HTTP GET method. If your protected websites use forms to access an SQL database, make sure that you have the SQL injection check enabled and properly configured.
- **Sessionless URL Closure.** From the client's point of view, this type of URL closure functions in exactly the same way as standard, session-aware URL Closure, but uses a token embedded in the URL instead of a cookie to track the user's activity, which consumes considerably fewer resources. When sessionless URL closure is enabled, the Web App Firewall appends a "as\_url\_id" tag to all the URL's that are in URL closure.  
**Note:** When enabling sessionless (Sessionless URL Closure), you must also enable regular URL closure (Enforce URL Closure) or sessionless URL closure does not work.
- **Validate Referrer Header.** Verify that the Referrer header in a request that contains web form data from your protected website instead of another website. This action verifies that your website, not an outside attacker, is the source of the web form. Doing so protects against cross-site request forgeries (CSRF) without requiring form tagging, which is more CPU-intensive than header checks. The Web App Firewall can handle the HTTP Referrer header in one of the following four ways, depending on which option you select in the drop-down list:
  - **Off**—Do not validate the Referrer header.
  - **If-Present**—Validate the Referrer header if a Referrer header exists. If an invalid Referrer header is found, the request generates a referer-header violation. If no Referrer header exists, the request does not generate a referer-header violation. This option enables the Web App Firewall to perform Referrer header validation on requests that contain a Referrer

header, but not block requests from users whose browsers do not set the Referer header or who use web proxies or filters that remove that header.

- **Always Except Start URLs**—Always validate the Referer header. If there is no Referer header and the requested URL is not exempted by the startURL relaxation rule, the request generates a referer-header violation. If the Referer header is present but it is invalid, the request generates a referer-header violation.
- **Always Except First Request**—Always validate the referer header. If there is no referer header, only the URL that is accessed first is allowed. All other URL's are blocked without a valid referer header. If the Referer header is present but it is invalid, the request generates a referer-header violation.

One Start URL setting, **Exempt Closure URLs from Security Checks**, is not configured in the Modify Start URL Check dialog box, but is configured in the Settings tab of the Profile. If enabled, this setting directs the Web App Firewall not to run further form based checks (such as Cross-Site Scripting and SQL Injection inspection) on URLs that meet the URL Closure criteria.

#### Note

Although the referer header check and Start URL security check share the same action settings, it is possible to violate the referer header check without violating the Start URL check. The difference is visible in the logs, which log referer header check violations separately from Start URL check violations.

The Referer header settings (OFF, if-Present, AlwaysExceptStartURLs, and AlwaysExceptFirstRequest) are arranged in order of least restrictive to most restrictive and work as follows:

#### OFF:

- Referer Header Not checked.

#### If-Present:

- Request has no referer header -> Request is allowed.
- Request has referer header and the referer URL is in URL closure -> Request is allowed.
- Request has referer header and the referer URL is **not** in URL closure -> Request is blocked.

#### AlwaysExceptStartURLs:

- Request has no referer header and the request URL is a start URL -> Request is allowed.
- Request has no referer header and the request URL is not a start URL -> Request is blocked.
- Request has referer header and the referer URL is in URL closure -> Request is allowed.
- Request has referer header and the referer URL is **not** in URL closure -> Request is blocked.

#### AlwaysExceptFirstRequest:

- Request has no referer header and is the first request URL of the session -> Request is allowed.

- Request has no referer header and is **not** the first request URL of the session -> Request is blocked.
- Request has referer header and is either the first request URL of the session or is in URL closure -> Request is allowed.
- Request has referer header and is neither the first request URL of the session nor is in URL closure -> Request is blocked.

If you use the command-line interface, you can enter the following commands to configure the Start URL Check:

- `set appfw profile <name> -startURLAction [block] [learn] [log] [stats] [none]`
- `set appfw profile <name> -startURLClosure ([ON] | [OFF])`
- `set appfw profile <name> -sessionlessURLClosure ([ON] | [OFF])`
- `set appfw profile <name> -exemptClosureURLsFromSecurityChecks ([ON] | [OFF])`
- `set appfw profile <name> -RefererHeaderCheck ([OFF] | [if-present] | [AlwaysExceptStartURLs] | [AlwaysExceptFirstRequest])`

To specify relaxations for the Start URL check, you must use the GUI. On the Checks tab of the Modify Start URL Check dialog box, click Add to open the Add Start URL Check Relaxation dialog box, or select an existing relaxation and click Open to open the Modify Start URL Check Relaxation dialog box. Either dialog box provides the same options for configuring a relaxation.

Following are examples of Start URL check relaxations:

- Allow users to access the home page at `www.example.com`:

```
1 ^http://www[.]example[.]com$
```

- Allow users to access all static HTML (.htm and .html), server-parsed HTML (.htp and .shtml), PHP (.php), and Microsoft ASP (.asp) format web pages at `www.example.com`:

```
1 ^http://www[.]example[.]com/([0-9A-Za-z][0-9A-Za-z_-]*/)*
2 [0-9A-Za-z][0-9A-Za-z_.-]*[.](asp|htp|php|s?html?)$
```

- Allow users to access web pages with pathnames or file names that contain non-ASCII characters at `www.example-español.com`:

```
1 ^http://www[.]example-espaxC3xB1o1[.]com/(([0-9A-Za-z]|x[0-9A-Fa-f]
2 ([0-9A-Za-z]|x[0-9A-Fa-f][0-9A-Fa-f])([0-9A-Za-z_-]|x[0-9A-Fa-f]
[0-9A-Fa-f])*[.](asp|htp|php|s?html?)$
```

**Note:** In the above expression, each character class has been grouped with the string `x[0-9A-Fa-f][0-9A-Fa-f]`, which matches all properly-constructed character encoding strings but



does not allow stray backslash characters that are not associated with a UTF-8 character encoding string. The double backslash () is an escaped backslash, which tells the Web App Firewall to interpret it as a literal backslash. If you included only one backslash, the Web App Firewall would instead interpret the following left square bracket ([]) as a literal character instead of the opening of a character class, which would break the expression.

- Allow users to access all GIF (.png), JPEG (.jpg and .jpeg), and PNG (.png) format graphics at [www.example.com](http://www.example.com):

```
1 ^http://www[.]example[.]com/([0-9A-Za-z][0-9A-Za-z_-]*/)*
2 [0-9A-Za-z][0-9A-Za-z_.-]*[.](gif|jpe?g|png)$
```

- Allow users to access CGI (.cgi) and PERL (.pl) scripts, but only in the CGI-BIN directory:

```
1 ^http://www[.]example[.]com/CGI-BIN/[0-9A-Za-z][0-9A-Za-z_
.-]*[.](cgi|pl)$
```

- Allow users to access Microsoft Office and other document files in the docsarchive directory:

```
1 ^http://www[.]example[.]com/docsarchive/[0-9A-Za-z][0-9A-Za-z_
.-]*[.](doc|xls|pdf|ppt)$
```

#### Note

By default, all Web App Firewall URLs are considered to be regular expressions.

**Caution:** Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions that you write. Make sure that they define exactly the URL you want to add as an exception, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (.\*\*) metacharacter/wildcard combination, can have results you do not want, such as blocking access to web content that you did not intend to block or allowing an attack that the Start URL check would otherwise have blocked.

#### Tip

You can add the *-and-* to the allowed list of SQL keywords for URL naming scheme. For example, example <https://FQDN/bread-and-butter>.

## Deny URL check

February 9, 2024

The Deny URL check examines and blocks connections to URLs that are commonly accessed by hackers and malicious code. This check contains a list of URLs that are common targets of hackers or malicious code and that rarely if ever appear in legitimate requests. You can also add URLs or URL patterns to the list. The Deny URL check prevents attacks against various security weaknesses known to exist in web server software or on many websites.

The Deny URL check takes priority over the Start URL check, and thus denies malicious connection attempts even when a Start URL relaxation would normally allow a request to proceed.

In the Modify Deny URL Check dialog box, on the General tab you can enable or disable the Block, Log, and Statistics actions.

If you use the command-line interface, you can enter the following command to configure the Deny URL Check:

```
1 set appfw profile <name> -denyURLAction [**block**] [**log**] [**stats**] [**none**]
```

You can create and configure your own deny URLs only in the NetScaler GUI.

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. Select a profile for which you want to add a deny URL and click **Edit**.
3. In the **NetScaler Web App Firewall Profile** page, select **Relaxation Rules** from the **Advanced Settings** section.
4. Select **Deny URL** and click **Edit**.
5. In the **Deny URL Rules** page, click **Add**.
6. Specify the following details and click **Create**.
  - **Deny URL** - A regular expression to define a deny URL.
  - **Comments** - Description for the expression.
  - **Resource ID** - Unique ID to identify the deny URL rule.

### Deny URL Rule

Enabled

Deny URL\*

^http://images[.]example[.]com\$

[RegEx Editor](#)

Comments

Do not allow users to access the image server at images.example.com directly.

Resource Id

0001

7. Click **Close**.

8. In the **NetScaler Web App Firewall Profile** page, click **Done**.

Following are examples of Deny URL expressions:

- Do not allow users to access the image server at images.example.com directly:

```
1 ^http://images[.]example[.]com$
```

- Do not allow users to access CGI (.cgi) or PERL (.pl) scripts directly:

```
1 ^http://www[.]example[.]com/([0-9A-Za-z][0-9A-Za-z_-]*/)*
2 [0-9A-Za-z][0-9A-Za-z_.-]*[.](cgi|pl)$
```

- Here is the same deny URL, modified to support non-ASCII characters:

```
1 ^http://www[.]example[.]com/((([0-9A-Za-z]|x[0-9A-Fa-f][0-9A-Fa-f
2 ([0-9A-Za-z_-]|x[0-9A-Fa-f][0-9A-Fa-f)]*/)*([0-9A-Za-z]|x[0-9A-Fa-f
3 ([0-9A-Za-z_-]|x[0-9A-Fa-f][0-9A-Fa-f)]*.[.](cgi|pl)$
```

#### Caution:

Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the URL or pattern that you want to block, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (.) metacharacter/wildcard combination, can have results that

you do not want, such as blocking access to web content that you did not intend to block.

## XML protection checks

December 4, 2020

The XML Protection checks examine requests for XML-based attacks of all types.

### Caution:

The XML security checks apply only to content that is sent with an HTTP content-type header of text/xml. If the content-type header is missing, or is set to a different value, all XML security checks are bypassed. If you plan to protect XML or Web 2.0 web applications, the webmasters of each web server that hosts those applications must ensure that the proper HTTP content-type header is sent.

## XML format check

September 21, 2020

The XML Format check examines the XML format of incoming requests and blocks those requests that are not well formed or that do not meet the criteria in the XML specification for properly-formed XML documents. Some of those criteria are:

- An XML document must contain only properly-encoded Unicode characters that match the Unicode specification.
- No special XML syntax characters—such as <, > and &—can be included in the document except when used in XML markup.
- All begin, end, and empty-element tags must be correctly nested, with none missing or overlapping.
- XML element tags are case-sensitive. All beginning and end tags must match exactly.
- A single root element must contain all the other elements in the XML document.

A document that does not meet the criteria for well-formed XML does not meet the definition of an XML document. Strictly speaking, it is not XML. However, not all XML applications and web services enforce the XML well-formed standard, and not all handle poorly-formed or invalid XML correctly. Inappropriate handling of a poorly-formed XML document can cause security breaches. The purpose of the XML Format check is to prevent a malicious user from using a poorly-formed XML request to breach security on your XML application or web service.

If you use the wizard or the GUI, in the Modify XML Format Check dialog box, on the General tab you can enable or disable the Block, Log, and Statistics actions.

If you use the command-line interface, you can enter the following command to configure the XML Format Check:

- `set appfw profile <name> -xmlFormatAction [**block**] [**log**] [**stats**] [**none**]`

You cannot configure exceptions to the XML Format check. You can only enable or disable it.

## XML Denial-of-Service check

September 24, 2020

The XML Denial of Service (XML DoS or XDoS) check examines incoming XML requests to determine whether they match the characteristics of a denial-of-service (DoS) attack. If there is a match, blocks those requests. The purpose of the XML DoS check is to prevent an attacker from using XML requests to launch a denial-of-service attack on your web server or website.

If you use the wizard or the GUI, in the Modify XML Denial-of-Service Check dialog box, on the **General** tab you can enable or disable the Block, Log, Statistics, and Learn actions:

If you use the command-line interface, you can enter the following command to configure the XML Denial-of-Service check:

- `set appfw profile <name> -xmlDoSAction [**block**] [**log**] [**learn**] [**stats**] [**none**]`

To configure individual XML Denial-of-Service rules, you must use the GUI. On the **Checks** tab of the **Modify XML Denial-of-Service Check** dialog box, select a rule and click **Open** to open the **Modify XML Denial-of-Service** dialog box for that rule. The individual dialog boxes differ for the different rules but are simple. Some only allow you to enable or disable the rule; others allow you to modify a number by typing a new value in a text box.

### Note:

The expected behavior of Learning engine for denial-of-service attack is based on the configured action. If the action is set as “Block”, the engine learns the configured bind value +1 and the XML parsing stops when there is a violation. If the configured action is not set as “Block”, the engine learns the actual incoming violation length value.

The individual XML Denial-of-Service rules are:

- **Maximum Element Depth.** Restrict the maximum number of nested levels in each individual element to 256. If this rule is enabled, and the Web App Firewall detects an XML request with an element that has more than the maximum number of allowed levels, it blocks the request. You can modify the maximum number of levels to any value from one (1) to 65,535.
- **Maximum Element Name Length.** Restrict the maximum length of each element name to 128 characters. This includes the name within the expanded namespace, which includes the XML path and element name in the following format:

```
1 {
2 http://prefix.example.com/path/ }
3 target_page.xml
```

The user can modify the maximum name length to any value between one (1) character and 65,535.

- **Maximum # Elements.** Restrict the maximum number of any one type of element per XML document to 65,535. You can modify the maximum number of elements to any value between one (1) and 65,535.
- **Maximum # Element Children.** Restrict the maximum number of children (including other elements, character information, and comments) each individual element is allowed to have to 65,535. You can modify the maximum number of element children to any value between one (1) and 65,535.
- **Maximum # Attributes.** Restrict the maximum number of attributes each individual element is allowed to have to 256. You can modify the maximum number of attributes to any value between one (1) and 256.
- **Maximum Attribute Name Length.** Restrict the maximum length of each attribute name to 128 characters. You can modify the maximum attribute name length to any value between one (1) and 2,048.
- **Maximum Attribute Value Length.** restrict the maximum length of each attribute value to 2048 characters. You can modify the maximum attribute name length to any value between one (1) and 2,048.
- **Maximum Character Data Length.** Restrict the maximum character data length for each element to 65,535. You can modify the length to any value between one (1) and 65,535.
- **Maximum File Size.** Restrict the size of each file to 20 MB. You can modify the maximum file size to any value.
- **Minimum File Size.** Require that each file is least 9 bytes in length. You can modify the minimum file size to any positive integer representing various bytes.
- **Maximum # Entity Expansions.** Limit the number of entity expansions allowed to the specified number. Default: 1024.

- **Maximum Entity Expansion Depth.** Restrict the maximum number of nested entity expansions to no more than the specified number. Default: 32.
- **Maximum # Namespaces.** Limit the number of namespace declarations in an XML document to no more than the specified number. Default: 16.
- **Maximum Namespace URI Length.** Limit the URL length of each namespace declaration to no more than the specified number of characters. Default: 256.
- **Block Processing Instructions.** Block any special processing instructions included in the request. This rule has no user-modifiable values.
- **Block DTD.** Block any document type definitions (DTD) included with the request. This rule has no user-modifiable values.
- **Block External Entities.** Block all references to external entities in the request. This rule has no user-modifiable values.
- **SOAP Array Check.** Enable or disable the following SOAP array checks:
  - **Maximum SOAP Array Size.** The maximum total size of all SOAP arrays in an XML request before the connection is blocked. You can modify this value. Default: 20000000.
  - **Maximum SOAP Array Rank.** The maximum rank or dimensions of any single SOAP array in an XML request before the connection is blocked. You can modify this value. Default: 16.

## XML cross-site scripting check

May 2, 2023

The XML Cross-Site Scripting check examines the user requests for possible cross-site scripting attacks in the XML payload. If it finds a possible cross-site scripting attack, it blocks the request.

To prevent misuse of the scripts on your protected web services to breach security on your web services, the XML Cross-Site Scripting check blocks scripts that violate the same origin rule, which states that scripts must not access or modify content on any server but the server on which they are located. Any script that violates the same origin rule is called a cross-site script, and the practice of using scripts to access or modify content on another server is called cross-site scripting. The reason cross-site scripting is a security issue is that a web server that allows cross-site scripting can be attacked with a script that is not on that web server, but on a different web server, such as one owned and controlled by the attacker.

The Web App Firewall offers various action options for implementing XML Cross-Site Scripting protection. You have the option to configure **Block**, **Log**, and **Stats** actions.

The Web App Firewall XML cross-site scripting check is performed on the payload of the incoming requests and attack strings are identified even if they are spread over multiple lines. The check looks for cross-site scripting attack strings in the **element** and the **attribute** values. You can apply relaxations to bypass security check inspection under specified conditions. The logs and statistics can help you identify needed relaxations.

The CDATA section of the XML payload might be an attractive area of focus for the hackers because the scripts are not executable outside the CDATA section. A CDATA section is used for content that is to be treated entirely as character data. HTML mark up tag delimiters `<`, `>`, and `/>` will not cause the parser to interpret the code as HTML elements. The following example shows a CDATA Section with cross-site scripting attack string:

```
1 <![CDATA[
2 <script language="Javascript" type="text/javascript">alert ("Got
3 you")</script>
]]>
```

## Action Options

An action is applied when the XML Cross-Site Scripting check detects an cross-site scripting attack in the request. The following options are available for optimizing XML Cross-Site Scripting protection for your application:

- **Block**—Block action is triggered if the cross-site scripting tags are detected in the request.
- **Log**—Generate log messages indicating the actions taken by the XML Cross-Site Scripting check. If block is disabled, a separate log message is generated for each location (ELEMENT, ATTRIBUTE) in which the cross-site scripting violation is detected. However, only one message is generated when the request is blocked. You can monitor the logs to determine whether responses to legitimate requests are getting blocked. A large increase in the number of log messages can indicate attempts to launch an attack.
- **Stats**—Gather statistics about violations and logs. An unexpected surge in the stats counter might indicate that your application is under attack. If legitimate requests are getting blocked, you might have to revisit the configuration to see if you need to configure new relaxation rules or modify the existing ones.

## Relaxation Rules

If your application requires you to bypass the Cross-Site Scripting check for a specific ELEMENT or ATTRIBUTE in the XML payload, you can configure a relaxation rule. The XML Cross-Site Scripting check relaxation rules have the following parameters:



- **Name**—You can use literal strings or regular expressions to configure the name of the ELEMENT or the Attribute. The following expression exempts all ELEMENTS beginning with the string name\_ followed by a string of uppercase or lowercase letters, or numbers, that is at least two and no more than fifteen characters long:

```
^name_[0-9A-Za-z]{ 2,15 } $
```

**Note**

The names are case sensitive. Duplicate entries are not allowed, but you can use capitalization of the names and differences in location to create similar entries. For example, each of the following relaxation rules is unique:

1. XMLcross-site scripting: ABC IsRegex: NOTREGEX  
Location: ATTRIBUTE State: ENABLED
2. XMLcross-site scripting: ABC IsRegex: NOTREGEX  
Location: ELEMENT State: ENABLED
3. XMLcross-site scripting: abc IsRegex: NOTREGEX  
Location: ELEMENT State: ENABLED
4. XMLcross-site scripting: abc IsRegex: NOTREGEX  
Location: ATTRIBUTE State: ENABLED

- **Location**—You can specify the Location of the Cross-site Scripting Check exception in your XML payload. The option ELEMENT is selected by default. You can change it to ATTRIBUTE.
- **Comment**—This is an optional field. You can use up to a 255 character string to describe the purpose of this relaxation Rule.

**Warning**

Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the name that you want to add as an exception, and nothing else. Careless use of Regular Expressions can have results that you do not want, such as blocking access to web content that you did not intend to block or allowing an attack that the XML Cross-Site Scripting check would otherwise have blocked.

## Using the Command Line to Configure the XML Cross-Site Scripting check

To configure XML Cross-Site Scripting check actions and other parameters by using the command line

If you use the command-line interface, you can enter the following commands to configure the XML Cross-Site Scripting Check:

```
> set appfw profile <name> -XMLcross-site scriptingAction (([block] [log] [stats])| [none])
```

To configure a XML Cross-Site Scripting check relaxation rule by using the command line

You can add relaxation rules to bypass inspection of cross-site scripting script attack inspection in a specific location. Use the bind or unbind command to add or delete the relaxation rule binding, as follows:

```
> bind appfw profile <name> -XMLcross-site scripting <string> [isRegex (REGEX | NOTREGEX)] [-location (ELEMENT | ATTRIBUTE)] -comment <string> [-state (ENABLED | DISABLED)]
> unbind appfw profile <name> -XMLcross-site scripting <String>
```

#### Example:

```
> bind appfw profile test_pr -XMLcross-site scripting ABC
```

After executing the above command, the following relaxation rule is configured. The rule is enabled, the name is treated as a literal (NOTREGEX), and ELEMENT is selected as the default location:

```
1 1) XMLcross-site scripting: ABC IsRegex: NOTREGEX
2
3 Location: ELEMENT State: ENABLED
4
5 `> unbind appfw profile test_pr -XMLcross-site scripting abc`
6
7 ERROR: No such XMLcross-site scripting check
8
9 `> unbind appfw profile test_pr -XMLcross-site scripting ABC`
10
11 Done
```

## Using the GUI to configure the XML Cross-Site scripting check

In the GUI, you can configure the XML Cross-Site scripting check in the pane for the profile associated with your application.

To configure or modify the XML Cross-Site Scripting check by using the GUI

1. Navigate to **Web App Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the Advanced Settings pane, click **Security Checks**.

The security check table displays the currently configured action settings for all the security checks. You have 2 options for configuration:

a) If you just want to enable or disable **Block**, **Log**, and **Stats** actions for the **XML Cross-Site Scripting check**, you can select or clear check boxes in the table, click **OK**, and then click Save and Close to close the Security Check pane.

b) You can double click **XML Cross-Site Scripting**, or select the row and click **Action Settings**, to display the action options. After changing any of the action settings, click **OK** to save the changes and return to the Security Checks table.

You can proceed to configure other security checks if needed. Click **OK** to save all the changes you have made in the Security Checks section, and then click **Save and Close** to close the Security Check pane.

To configure a XML Cross-Site Scripting relaxation rule by using the GUI

1. Navigate to **Web App Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Relaxation Rules**.
3. In the Relaxation Rules table, double-click the **XML Cross-Site Scripting** entry, or select it and click **Edit**.
4. In the **XML Cross-Site Scripting Relaxation Rules** dialogue box, perform **Add**, **Edit**, **Delete**, **Enable**, or **Disable** operations for relaxation rules.

To manage XML Cross-Site Scripting relaxation rules by using the visualizer

For a consolidated view of all the relaxation rules, you can highlight the **XML Cross-Site Scripting** row in the Relaxation Rules table, and click **Visualizer**. The visualizer for deployed relaxations offers you the option to **Add** a new rule or **Edit** an existing one. You can also **Enable** or **Disable** a group of rules by selecting a node and clicking the corresponding buttons in the relaxation visualizer.

To view or customize the Cross-Site Scripting patterns by using the GUI

You can use the GUI to view or customize the default list of cross-site scripting allowed attributes or allowed tags. You can also view or customize the default list of cross-site scripting denied Patterns.

The default lists are specified in **Web App Firewall > Signatures > Default Signatures**. If you do not bind any signature object to your profile, the default cross-site scripting Allowed and Denied list specified in the Default Signatures object will be used by the profile for the Cross-Site Scripting security check processing. The Tags, Attributes, and Patterns, specified in the default signatures object, are read-only. You cannot edit or modify them. If you want to modify or change these, make a copy of the Default Signatures object to create a User-Defined signature object. Make changes in the Allowed or Denied lists in the new user-defined signature object and use this signature object in the profile that is processing the traffic for which you want to use these customized allowed and denied lists.

For more information about signatures, see <http://support.citrix.com/proddocs/topic/ns-security-10-map/appfw-signatures-con.html>.

#### **To view default cross-site scripting patterns:**

1. Navigate to **Web App Firewall > Signatures**, select **\*Default Signatures**, and click **Edit**. Then click **Manage SQL/cross-site scripting Patterns**.

The **Manage SQL/cross-site scripting Paths** table shows following three rows pertaining to cross-site scripting :

|   |                       |
|---|-----------------------|
| 1 | xss/allowed/attribute |
| 2 |                       |
| 3 | xss/allowed/tag       |
| 4 |                       |
| 5 | xss/denied/pattern    |

Select a row and click **Manage Elements** to display the corresponding cross-site scripting Elements (Tag, Attribute, Pattern) used by the Web App Firewall **Cross-Site Scripting** check.

**To customize cross-site scripting Elements:** You can edit the user-defined signature object to customize the allowed Tag, allowed Attributes and denied Patterns. You can add new entries or remove the existing ones.

1. **Navigate to Web App Firewall > Signatures**, highlight the target user-defined signature, and click **Edit**. Click **Manage SQL/cross-site scripting Patterns** to display the **Manage SQL/cross-site scripting paths** table.
2. Select the target cross-site scripting row.

a) Click **Manage Elements**, to **Add**, **Edit** or **Remove** the corresponding cross-site scripting element.

b) Click **Remove** to remove the selected row.

#### Warning

Be very careful when you remove or modify any default cross-site scripting element, or delete the cross-site scripting path to remove the entire row. The signatures, HTML Cross-Site Scripting security check, and XML Cross-Site Scripting security check rely on these Elements for detecting attacks to protect your applications. Customizing the cross-site scripting Elements can make your application vulnerable to Cross-Site Scripting attacks if the required pattern is removed during editing.

## Using the log feature with the XML cross-site scripting check

When the log action is enabled, the XML Cross-Site Scripting security check violations are logged in the audit log as **APPFW\_XML\_cross-site scripting** violations. The Web App Firewall supports both Native and CEF log formats. You can also send the logs to a remote syslog server.

To access the log messages by using the command line

Switch to the shell and tail the ns.logs in the /var/log/ folder to access the log messages pertaining to the XML Cross-Site Scripting violations:

```
1 > **Shell**
2
```

```
3 > **tail -f /var/log/ns.log | grep APPFW_XML_cross-site scripting**
```

### Example of a XML Cross-Site Scripting security check violation log message in Native log format showing <bblocked> action

```
1 Oct 7 01:44:34 <local0.warn> 10.217.31.98 10/07/2015:01:44:34 GMT ns
0-PPE-1 : default APPFW APPFW_XML_cross-site scripting 1154 0 :
10.217.253.69 3466-PPE1 - owa_profile http://10.217.31.101/FFC/login
.html Cross-site script check failed for field script="Bad tag:
script" <**blocked**>
```

### Example of a XML Cross-Site Scripting security check violation log message in CEF log format showing <not blocked> action

```
1 Oct 7 01:46:52 <local0.warn> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
.0|APPFW|APPFW_XML_cross-site scripting|4|src=10.217.30.17
geolocation=Unknown spt=33141 method=GET request=http://
10.217.31.101/FFC/login.html msg=Cross-site script check failed for
field script="Bad tag: script" cn1=1607 cn2=3538 cs1=owa_profile cs2
=PPE0 cs4=ERROR cs5=2015 act=**not blocked**
```

To access the log messages by using the GUI

The GUI includes a useful tool (**Syslog Viewer**) for analyzing the log messages. You have multiple options for accessing the Syslog Viewer:

- Navigate to the **Web App Firewall > Profiles**, select the target profile, and click **Security Checks**. Highlight the **XML Cross-Site Scripting** row and click **Logs**. When you access the logs directly from the XML Cross-Site Scripting check of the profile, the GUI filters out the log messages and displays only the logs pertaining to these security check violations.
- You can also access the Syslog Viewer by navigating to **NetScaler > System > Auditing**. In the Audit Messages section, click the Syslog messages link to display the Syslog Viewer, which displays all log messages, including other security check violation logs. This is useful for debugging when multiple security check violations might be triggered during request processing.
- Navigate to **Web App Firewall > policies > Auditing**. In the **Audit Messages** section, click the **Syslog messages** link to display the Syslog Viewer, which displays all log messages, including other security check violation logs.

The XML based Syslog Viewer provides various filter options for selecting only the log messages that are of interest to you. To select log messages for the **XML Cross-Site Scripting** check, filter by selecting **APPFW** in the dropdown options for **Module**. The **Event Type** list offers a rich set of options to further refine your selection. For example, if you select the **APPFW\_XML\_cross-site scripting** check box and click the **Apply** button, only log messages pertaining to the XML Cross-Site Scripting security check violations appear in the Syslog Viewer.

If you place the cursor in the row for a specific log message, multiple options, such as **Module, Event**

**Type**, **Event ID**, **Client IP** and so forth. appear below the log message. You can select any of these options to highlight the corresponding information in the log message.

## Statistics for the XML cross-site scripting violations

When the stats action is enabled, the counter for the XML Cross-Site Scripting check is incremented when the Web App Firewall takes any action for this security check. The statistics are collected for Rate and Total count for Traffic, Violations, and Logs. The size of an increment of the log counter can vary depending on the configured settings. For example, if the block action is enabled, a request for a page that contains three XML Cross-Site Scripting violations increments the stats counter by one, because the page is blocked as soon as the first violation is detected. However, if block is disabled, processing the same request increments the statistics counter for violations and the logs by three, because each violation generates a separate log message.

To display XML Cross-Site Scripting check statistics by using the command line

At the command prompt, type:

```
> **sh appfw stats**
```

To display stats for a specific profile, use the following command:

```
> **stat appfw profile** <profile name>
```

To display XML Cross-Site Scripting statistics by using the GUI

1. Navigate to **System > Security > Web App Firewall**.
2. In the right pane, access the **Statistics** Link.
3. Use the scroll bar to view the statistics about XML Cross-Site Scripting violations and logs. The statistics table provides real-time data and is updated every 7 seconds.

## XML SQL injection check

May 2, 2023

The XML SQL injection check examines the user requests for possible XML SQL Injection attacks. If it finds injected SQL in XML payloads, it blocks the requests.

A XML SQL attack can inject source code into a web application such that it can be interpreted and run as a valid SQL query to perform a database operation with malicious intent. For example, XML SQL attacks can be launched to gain unauthorized access to the contents of a database or to manipulate the stored data. XML SQL Injection attacks are not only common, but can also be very harmful and costly.

Compartmentalizing the privileges of the database users can assist in protecting the database to some extent. All database users must be given only the required privileges to complete their intended tasks, so that they cannot run SQL queries to perform other tasks. For example, a read-only user must not be allowed to write or manipulate data tables. The Web App Firewall XML SQL Injection check inspects all XML requests to provide special defenses against injection of unauthorized SQL code that might break security. If the Web App Firewall detects unauthorized SQL code in any XML request of any user, it can block the request.

The NetScaler Web App Firewall inspects the presence of SQL keywords and special characters to identify the XML SQL Injection attack. A default set of keywords and special characters provides known keywords and special characters that are commonly used to launch XML SQL attacks. The Web App Firewall considers three characters, single straight quote (‘), backslash (\), and semicolon (;) as special characters for SQL security check processing. You can add new patterns, and you can edit the default set to customize the XML SQL check inspection.

The Web App Firewall offers various action options for implementing XML SQL Injection protection. You can **Block** the request, **Log** a message in the ns.log file with details regarding the observed violations, and collect **Stats** to keep track of the number of observed attacks.

In addition to actions, there are several parameters that can be configured for XML SQL injection processing. You can check for **SQL wildcard characters**. You can change the XML SQL Injection type and select one of the 4 options (**SQLKeyword**, **SQLSplChar**, **SQLSplCharANDKeyword**, **SQLSplCharORKeyword**) to indicate how to evaluate the SQL keywords and SQL special characters when processing the XML payload. The XML **SQL Comments Handling** parameter gives you an option to specify the type of comments that need to be inspected or exempted during XML SQL Injection detection.

You can deploy relaxations to avoid false positives. The Web App Firewall XML SQL check is performed on the payload of the incoming requests, and attack strings are identified even if they are spread over multiple lines. The check looks for SQL Injection strings in the **element** and the **attribute** values. You can apply relaxations to bypass security check inspection under specified conditions. The logs and statistics can help you identify needed relaxations.

## Action options

An action is applied when the XML SQL Injection check detects an SQL Injection attack string in the request. The following actions are available for configuring an optimized XML SQL Injection protection for your application:

**Block**—If you enable block, the block action is triggered only if the input matches the XML SQL injection type specification. For example, if **SQLSplCharANDKeyword** is configured as the XML SQL injection type, a request is not blocked if it does not contain any key words, even if SQL special char-

acters are detected in the payload. Such a request is blocked if the XML SQL injection type is set to either **SQLSplChar**, or **SQLSplCharORKeyword**.

**Log**—If you enable the log feature, the XML SQL Injection check generates log messages indicating the actions that it takes. If block is disabled, a separate log message is generated for each location (**ELEMENT**, **ATTRIBUTE**) in which the XML SQL violation was detected. However, only one message is generated when the request is blocked. You can monitor the logs to determine whether responses to legitimate requests are getting blocked. A large increase in the number of log messages can indicate attempts to launch an attack.

**Stats**—If enabled, the stats feature gathers statistics about violations and logs. An unexpected surge in the stats counter might indicate that your application is under attack. If legitimate requests are getting blocked, you might have to revisit the configuration to see if you need to configure new relaxation rules or modify the existing ones.

## XML SQL parameters

In addition to the block, log and stats actions, you can configure the following parameters for XML SQL Injection check:

**Check for XML SQL wildcard Characters**—Wild card characters can be used to broaden the selections of a structured query language (SQL-SELECT) statement. These wild card operators can be used in conjunction with **LIKE** and **NOT LIKE** operators to compare a value to similar values. The percent (%), and underscore (\_) characters are frequently used as wild cards. The percent sign is analogous to the asterisk (\*) wildcard character used with MS-DOS and to match zero, one, or multiple characters in a field. The underscore is similar to the MS-DOS question mark (?) wildcard character. It matches a single number or character in an expression.

For example, you can use the following query to do a string search to find all customers whose names contain the D character.

```
SELECT * from customer WHERE name like "%D%"
```

The following example combines the operators to find any salary values that have 0 as the second and third character.

```
SELECT * from customer WHERE salary like '_00%'
```

Different DBMS vendors have extended the wildcard characters by adding extra operators. The NetScaler Web App Firewall can protect against attacks that are launched by injecting these wildcard characters. The 5 default Wildcard characters are percent (%), underscore (\_), caret (^), opening square bracket ([), and closing square bracket (]). This protection applies to both HTML and XML profiles.

The default wildcard chars are a list of literals specified in the **\*Default Signatures**:



```
1 - <wildchar type= " LITERAL " >%</wildchar>
2 - <wildchar type= " LITERAL " >_</wildchar>
3 - <wildchar type= " LITERAL " >^</wildchar>
4 - <wildchar type= " LITERAL " >[</wildchar>
5 - <wildchar type= " LITERAL " >]</wildchar>
```

Wildcard characters in an attack can be PCRE, like `[^A-F]`. The Web App Firewall also supports PCRE wildcards, but the literal wildcard chars above are sufficient to block most attacks.

#### Note

The XML SQL **wildcard character** check is different from the XML SQL **special character** check. This option must be used with caution to avoid false positives.

**Check Request Containing SQL Injection Type**—The Web App Firewall provides 4 options to implement the desired level of strictness for SQL Injection inspection, based on the individual need of the application. The request is checked against the injection type specification for detecting SQL violations. The 4 SQL injection type options are:

- **SQL Special Character and Keyword**—Both an SQL keyword and an SQL special character must be present in the inspected location to trigger SQL violation. This least restrictive setting is also the default setting.
- **SQL Special Character**—At least one of the special characters must be present in the processed payload string to trigger SQL violation.
- **SQL keyword**—At least one of the specified SQL keywords must be present in the processed payload string to trigger an SQL violation. Do not select this option without due consideration. To avoid false positives, make sure that none of the keywords are expected in the inputs.
- **SQL Special Character or Keyword**—Either the keyword or the special character string must be present in the payload to trigger the security check violation.

#### Tip

If you select the SQL Special Character option, the Web App Firewall skips strings that do not contain any special characters. Since most SQL servers do not process SQL commands that are not preceded by a special character, enabling this option can significantly reduce the load on the Web App Firewall and speed up processing without placing your protected websites at risk.

**SQL comments handling**—By default, the Web App Firewall parses and checks all comments in XML data for injected SQL commands. Many SQL servers ignore anything in a comment, even if preceded by an SQL special character. For faster processing, if your XML SQL server ignores comments, you can configure the Web App Firewall to skip comments when examining requests for injected SQL. The XML SQL comments handling options are:

- **ANSI**—Skip ANSI-format SQL comments, which are normally used by UNIX-based SQL databases.

- **Nested**—Skip nested SQL comments, which are normally used by Microsoft SQL Server.
- **ANSI/Nested**—Skip comments that adhere to both the ANSI and nested SQL comment standards. Comments that match only the ANSI standard, or only the nested standard, are still checked for injected SQL.
- **Check all Comments**—Check the entire request for injected SQL, without skipping anything. This is the default setting.

### Tip

In most cases, you must not choose the Nested or the ANSI/Nested option unless your back-end database runs on Microsoft SQL Server. Most other types of SQL server software do not recognize nested comments. If nested comments appear in a request directed to another type of SQL server, they might indicate an attempt to breach security on that server.

## Relaxation rules

If your application requires you to bypass the XML SQL Injection inspection for a specific ELEMENT or ATTRIBUTE in the XML payload, you can configure a relaxation rule. The XML SQL Injection inspection relaxation rules have the following parameters:

- **Name:** You can use literal strings or regular expressions to configure the name of the **ELEMENT** or the **ATTRIBUTE**. The following expression exempts all **ELEMENTS** beginning with the string **PurchaseOrder\_** followed by a string of numbers that is at least two and no more than ten characters long:

Comment: “Exempt XML SQL Check for Purchase Order Elements”

```

1 XMLSQLInjection: "PurchaseOrder_[0-9A-Za-z]{
2 2,10 }
3 "
4
5 IsRegex: REGEX Location: ELEMENT
6
7 State: ENABLED

```

**Note:** The names are case sensitive. Duplicate entries are not allowed, but you can use capitalization of the names and differences in location to create similar entries. For example, each of the following relaxation rules is unique:

```

1 1) XMLSQLInjection: XYZ IsRegex: NOTREGEX
2
3 Location: ELEMENT State: ENABLED
4
5 2) XMLSQLInjection: xyz IsRegex: NOTREGEX
6
7 Location: ELEMENT State: ENABLED

```

```

8
9 3) XMLSQLInjection: xyz IsRegex: NOTREGEX
10
11 Location: ATTRIBUTE State: ENABLED
12
13 4) XMLSQLInjection: XYZ IsRegex: NOTREGEX
14
15 Location: ATTRIBUTE State: ENABLED

```

- **Location:** You can specify the Location of the XML SQL Inspection exception in your XML payload. The option **ELEMENT** is selected by default. You can change it to **ATTRIBUTE**.
- **Comment:** This is an optional field. You can use up to a 255 character string to describe the purpose of this relaxation Rule.

### Warning

Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the name that you want to add as an exception, and nothing else. Careless use of Regular Expressions can have results that you do not want, such as blocking access to web content that you did not intend to block or allowing an attack that the XML SQL Injection inspection would otherwise have blocked.

## Using the command line to configure the XML SQL Injection Check

### To configure XML SQL Injection actions and other parameters by using the command line:

In the command line interface, you can use either the **set appfw profile** command or the **add appfw profile** command to configure the XML SQL Injection protections. You can enable the block, log, and stats action(s). Select the type of SQL attack pattern (key words, wildcard characters, special strings) you want to detect in the payloads. Use the **unset appfw profile** command to revert the configured settings back to their defaults. Each of the following commands sets only one parameter, but you can include multiple parameters in a single command:

- `set appfw profile <name> **-XMLSQLInjectionAction** ([[block] [log] [stats]]) | [none])`
- `set appfw profile <name> -XMLSQLInjectionCheckSQLWildChars (ON | OFF)`
- `set appfw profile <name> -XMLSQLInjectionType ([SQLKeyword] | [SQLSplChar] | [SQLSplCharANDKeyword] | [SQLSplCharORKeyword])`
- `set appfw profile <name> -XMLSQLInjectionParseComments ([checkall] | [ansi|nested] | [ansinested])`

To configure a SQL Injection relaxation rule by using the command line

Use the bind or unbind command to add or delete relaxation rules, as follows:

```
1 - bind appfw profile <name> -XMLSQLInjection <string> [isRegex (REGEX
 | NOTREGEX)] [-location (ELEMENT | ATTRIBUTE)] -comment <string>
 [-state (ENABLED | DISABLED)]
2 - unbind appfw profile <name> -XMLSQLInjection <String>
```

**Example:**

```
1 > bind appfw profile test_profile -XMLSQLInjection "PurchaseOrder_[0-9A
 -Za-z]{
2 2,15 }
3 " -isregex REGEX -location ATTRIBUTE
4
5 > unbind appfw profile test_profile -XMLSQLInjection "PurchaseOrder_
 [0-9A-Za-z]{
6 2,15 }
7 " -location ATTRIBUTE
```

## Using the GUI to configure the XMLSQL injection security check

In the GUI, you can configure the XML SQL Injection security check in the pane for the profile associated with your application.

To configure or modify the XML SQL Injection check by using the GUI

1. Navigate to **Web App Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the Advanced Settings pane, click **Security Checks**.

The security check table displays the currently configured action settings for all the security checks. You have 2 options for configuration:

- a. If you just want to enable or disable Block, Log, and Stats actions for XML SQL Injection, you can select or clear check boxes in the table, click OK, and then click Save and Close to close the Security Check pane.
- b. If you want to configure additional options for this security check, double click XML SQL Injection, or select the row and click **Action Settings**, to display the following options:

Check for SQL Wildcard Characters—Consider SQL Wildcard characters in the payload to be attack patterns.

Check Request Containing—Type of SQL injection (SQLKeyword, SQLSplChar, SQLSplCharANDKeyword, or SQLSplCharORKeyword) to check.

SQL Comments Handling—Type of comments (Check All Comments, ANSI, Nested, or ANSI/Nested) to check.

After changing any of the above settings, click **OK** to save the changes and return to the Security Checks table. You can proceed to configure other security checks if needed. Click **OK** to save all the changes you have made in the Security Checks section, and then click **Save** and **Close** to close the Security Check pane.

To configure a XML SQL Injection relaxation rule by using the GUI

1. Navigate to **Web App Firewall > Profiles**, highlight the target profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Relaxation Rules**.
3. In the Relaxation Rules table, double-click the **XML SQL Injection** entry, or select it and click **Edit**.
4. In the **XML SQL Injection Relaxation Rules** dialogue box, perform **Add**, **Edit**, **Delete**, **Enable**, or **Disable** operations for relaxation rules.

To manage XML SQL Injection relaxation rules by using the visualizer

For a consolidated view of all the relaxation rules, you can highlight the **XML SQL Injection** row in the Relaxation Rules table, and click **Visualizer**. The visualizer for deployed relaxations offers you the option to **Add** a new rule or **Edit** an existing one. You can also **Enable** or **Disable** a group of rules by selecting a node and clicking the corresponding buttons in the relaxation visualizer.

#### **To view or customize the SQL Injection patterns by using the GUI:**

You can use the GUI to view or customize the SQL patterns.

The default SQL patterns are specified in **Web App Firewall > Signatures > \*Default Signatures**. If you do not bind any signature object to your profile, the default SQL patterns specified in the Default Signatures object will be used by the profile for XML SQL Injection security check processing. The rules and patterns in the Default Signatures object are read-only. You cannot edit or modify them. If you want to modify or change these patterns, create a user-defined signature object by making a copy of the Default Signatures object and changing the SQL patterns. Use the user-defined signature object in the profile that processes the traffic for which you want to use these customized SQL patterns.

For more information, see [Signatures](#).

#### **To view default SQL patterns:**

- a. Navigate to **Web App Firewall > Signatures**, select **\*Default Signatures**, and click **Edit**. Then click **Manage SQL/cross-site scripting Patterns**.

The Manage SQL/cross-site scripting Paths table shows following four rows pertaining to SQL Injection:

```
1 Injection (not_alphanum, SQL)/ Keyword
2
3 Injection (not_alphanum, SQL)/ specialstring
4
5 Injection (not_alphanum, SQL)/ transformrules/transform
```

```
6
7 Injection (not_alphanum, SQL)/ wildchar
```

b. Select a row and click **Manage Elements** to display the corresponding SQL patterns (keywords, special strings, transformation rules or the wildcard characters) used by the Web App Firewall SQL injection check.

**To customize SQL Patterns:** You can edit a user-defined signature object to customize the SQL key words, special strings, and wildcard characters. You can add new entries or remove the existing ones. You can modify the transformation rules for the SQL special strings.

a. Navigate to **Web App Firewall > Signatures**, highlight the target user-defined signature, and click **Edit**. Click **Manage SQL/cross-site scripting Patterns** to display the **Manage SQL/cross-site scripting paths** table.

b. Select the target SQL row.

i. Click **Manage Elements**, to **Add**, **Edit** or **Remove** the corresponding SQL element.

ii. Click **Remove** to remove the selected row.

#### Warning

You must be very careful when removing or modifying any default SQL element, or deleting the SQL path to remove the entire row. The signature rules as well as the XML SQL Injection security check rely on these elements for detecting SQL Injection attacks to protect your applications. Customizing the SQL patterns can make your application vulnerable to XML SQL attacks if the required pattern is removed during editing.

## Using the log feature with the XML SQL injection check

When the log action is enabled, the **XML SQL Injection** security check violations are logged in the audit log as **APPFW\_XML\_SQL** violations. The Web App Firewall supports both Native and CEF log formats. You can also send the logs to a remote syslog server.

### To access the log messages by using the command line:

Switch to the shell and tail the ns.logs in the /var/log/ folder to access the log messages pertaining to the XML Cross-Site Scripting violations:

```
1 > Shell
2
3 > tail -f /var/log/ns.log | grep APPFW_XML_SQL
```

To access the log messages by using the GUI

The GUI includes a useful tool (Syslog Viewer) for analyzing the log messages. You have multiple options for accessing the Syslog Viewer:

- Navigate to **Web App Firewall > Profiles**, select the target profile, and click **Security Checks**. Highlight the **XML SQL Injection** row and click **Logs**. When you access the logs directly from the XML SQL Injection check of the profile, the GUI filters out the log messages and displays only the logs pertaining to these security check violations.
- You can also access the Syslog Viewer by navigating to **System > Auditing**. In the Audit Messages section, click the **Syslog messages** link to display the Syslog Viewer, which displays all log messages, including other security check violation logs. This is useful for debugging when multiple security check violations might be triggered during request processing.
- Navigate to **Web App Firewall > Policies > Auditing**. In the Audit Messages section, click the **Syslog messages** link to display the **Syslog Viewer**, which displays all log messages, including other security check violation logs.

The XML based Syslog Viewer provides various filter options for selecting only the log messages that are of interest to you. To select log messages for the **XML SQL Injection** check, filter by selecting **APPFW** in the dropdown options for **Module**. The **Event Type** list offers a rich set of options to further refine your selection. For example, if you select the **APPFW\_XML\_SQL** check box and click the **Apply** button, only log messages pertaining to the **XML SQL Injection** security check violations appear in the Syslog Viewer.

If you place the cursor in the row for a specific log message, multiple options, such as **Module**, **Event Type**, **Event ID**, and **Client IP** appear below the log message. You can select any of these options to highlight the corresponding information in the log message.

### Statistics for the XML SQL injection violations

When the stats action is enabled, the counter for the **XML SQL Injection** check is incremented when the Web App Firewall takes any action for this security check. The statistics are collected for Rate and Total count for Traffic, Violations, and Logs. The size of an increment of the log counter can vary depending on the configured settings. For example, if the block action is enabled, a request for a page that contains three **XML SQL Injection** violations increments the stats counter by one, because the page is blocked as soon as the first violation is detected. However, if block is disabled, processing the same request increments the statistics counter for violations and the logs by three, because each violation generates a separate log message.

To display XML SQL Injection check statistics by using the command line

At the command prompt, type:

```
> sh appfw stats
```

To display stats for a specific profile, use the following command:

```
> stat appfw profile <profile name>
```

To display XML SQL Injection statistics by using the GUI

1. Navigate to **System > Security > Web App Firewall**.
2. In the right pane, access the **Statistics** Link.
3. Use the scroll bar to view the statistics about **XML SQL Injection** violations and logs. The statistics table provides real-time data and is updated every 7 seconds.

## XML attachment check

September 21, 2020

The XML Attachment check examines incoming requests for malicious attachments, and it blocks those requests that contain attachments that might breach applications security. The purpose of the XML Attachment check is to prevent an attacker from using an XML attachment to breach security on your server.

If you use the wizard or the GUI, in the Modify XML Attachment Check dialog box, on the General tab you can enable or disable the Block, Learn, Log, Statistics, and Learn actions:

If you use the command-line interface, you can enter the following command to configure the XML Attachment Check:

- `set appfw profile <name> -xmlAttachmentAction [block] [learn] [log] [stats] [none]`

You must configure the other XML Attachment check settings in the GUI. In the [Modify XML Attachment](#) Check dialog box, on the Checks tab, you can configure the following settings:

- **Maximum Attachment Size.** Allow attachments that are no larger than the maximum attachment size you specify. To enable this option, first select the Enabled check box, and then type the maximum attachment size in bytes in the [Size](#) text box.
- **Attachment Content Type.** Allow attachments of the specified content type. To enable this option, first select the Enabled check box, and then enter a regular expression that matches the Content-Type attribute of the attachments that you want to allow.
  - You can type the URL expression directly in the text window. If you do so, you can use the [Regex Tokens](#) menu to enter a number of useful regular expressions at the cursor instead of typing them manually.
  - You can click [Regex Editor](#) to open the [Add Regular Expression](#) dialog box and use it to construct the URL expression.



## Web services interoperability check

December 4, 2020

The Web Services Interoperability (WS-I) check examines both requests and responses for adherence to the WS-I standard, and blocks those requests and responses that do not adhere to this standard. The purpose of the WS-I check is to block requests that might not interact with other XML appropriately. An attacker can use inconsistencies in interoperability to launch an attack on your XML application.

If you use the wizard or the GUI, in the Modify Web Services Interoperability Check dialog box, on the General tab you can enable or disable the Block, Log, Statistics, and Learn actions.

If you use the command-line interface, you can enter the following command to configure the Web Services Interoperability check:

- `set appfw profile <name> -xmlWSIAction [block] ][log] [learn] [stats] [none]`

To configure individual Web Services Interoperability rules, you must use the GUI. On the Checks tab of the Modify Web Services Interoperability Check dialog box, select a rule and click Enable or Disable to enable or disable the rule. You can also click Open to open the Web Services Interoperability Detail message box for that rule. The message box displays read-only information about the rule. You cannot modify or make other configuration changes to any of these rules.

The WS-I check uses the rules listed in WS-I Basic Profile 1.0. WS-I delivers best practices for developing interoperable Web Services solutions. WS-I checks are performed only on SOAP Messages.

Description of each WSI standard rule is provided below:

---

| Rule   | Description                                                                                                                                  |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------|
| BP1201 | Message body should be a soap:envelope with namespace.                                                                                       |
| R1000  | When an ENVELOPE is a Fault, the soap:Fault element MUST NOT have element children other than faultcode, faultstring, faultactor and detail. |
| R1001  | When an ENVELOPE is a Fault, the element children of the soap:Fault element MUST be unqualified.                                             |

---

| Rule  | Description                                                                                                                                                                                                                                                                                                             |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| R1003 | A RECEIVER MUST accept fault messages that have any number of qualified or unqualified attributes, including zero, appearing on the detail element. The namespace of qualified attributes can be anything other than the namespace of the qualified document element Envelope.                                          |
| R1004 | When an ENVELOPE contains a faultcode element, the content of that element must be either one of the fault codes defined in SOAP 1.1 (supplying additional information if necessary in the detail element), or a QName whose namespace is controlled by the fault's specifying authority (in that order of preference). |
| R1005 | An ENVELOPE MUST NOT contain soap:encodingStyle attribute on any of the elements whose namespace is the same as the namespace of the qualified document element Envelope.                                                                                                                                               |
| R1006 | An ENVELOPE MUST NOT contain soap:encodingStyle attributes on any element that is a child of soap:Body.                                                                                                                                                                                                                 |
| R1007 | An ENVELOPE described in an rpc-literal binding MUST NOT contain soap:encodingStyle attribute on any element that is a grandchild of soap:Body.                                                                                                                                                                         |
| R1011 | An ENVELOPE MUST NOT have any element children of soap:Envelope following the soap:Body element.                                                                                                                                                                                                                        |
| R1012 | A MESSAGE MUST be serialized as either UTF-8 or UTF-16.                                                                                                                                                                                                                                                                 |
| R1013 | An ENVELOPE containing a soap:mustUnderstand attribute MUST only use the lexical forms 0 and 1.                                                                                                                                                                                                                         |
| R1014 | The children of the soap:Body element in an ENVELOPE MUST be namespace qualified.                                                                                                                                                                                                                                       |

| Rule  | Description                                                                                                                                                             |
|-------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| R1015 | A RECEIVER MUST generate a fault if they encounter an envelope whose document element is not soap:Envelope.                                                             |
| R1031 | When an ENVELOPE contains a faultcode element the content of that element must NOT use of the SOAP 1.1 dot notation to refine the meaning of the fault.                 |
| R1032 | The soap:Envelope, soap:Header, and soap:Body elements in an ENVELOPE MUST NOT have attributes in the same namespace as that of the qualified document element Envelope |
| R1033 | An ENVELOPE SHOULD NOT contain the namespace declaration: <code>xmlns:xml=http://www.w3.org/XML/1998/namespace</code> .                                                 |
| R1109 | The value of the SOAPAction HTTP header field in a HTTP request MESSAGE MUST be a quoted string.                                                                        |
| R1111 | An INSTANCE SHOULD use a 200 OK HTTP status code on a response message that contains an envelope that is not a fault.                                                   |
| R1126 | An INSTANCE MUST return a 500 Internal Server Error HTTP status code if the response envelope is a Fault.                                                               |
| R1132 | A HTTP request MESSAGE MUST use the HTTP POST method.                                                                                                                   |
| R1140 | A MESSAGE SHOULD be sent using HTTP/1.1.                                                                                                                                |
| R1141 | A MESSAGE MUST be sent using either HTTP/1.1 or HTTP/1.0.                                                                                                               |
| R2113 | An ENVELOPE MUST NOT include the soapenc:arrayType attribute.                                                                                                           |
| R2211 | An ENVELOPE described with an rpc-literal binding MUST NOT have the xsi:nil attribute with a value of 1 or true on the part accessors.                                  |
| R2714 | For one-way operations, an INSTANCE MUST NOT return a HTTP response that contains an envelope. Specifically, the HTTP response entity-body must be empty.               |

---

| Rule  | Description                                                                                                                                                                                                    |
|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| R2729 | An ENVELOPE described with an rpc-literal binding that is a response MUST have a wrapper element whose name is the corresponding wsdl:operation name suffixed with the stringResponse.                         |
| R2735 | An ENVELOPE described with an rpc-literal binding MUST place the part accessor elements for parameters and return value in no namespace.                                                                       |
| R2738 | An ENVELOPE MUST include all soapbind:headers specified on a wsdl:input or wsdl:output of a wsdl:operation of a wsdl:binding that describes it.                                                                |
| R2740 | A wsdl:binding in a DESCRIPTION SHOULD contain a soapbind:fault describing each known fault.                                                                                                                   |
| R2744 | A HTTP request MESSAGE MUST contain a SOAPAction HTTP header field with a quoted value equal to the value of the soapAction attribute of soapbind:operation, if present in the corresponding WSDL description. |

---

## XML message validation check

September 21, 2020

The XML Message Validation check examines requests that contain XML messages to ensure that they are valid. If a request contains an invalid XML message, the Web App Firewall blocks the request. The purpose of the XML Validation check is to prevent an attacker from using specially constructed invalid XML messages to breach the security of your application.

If you use the wizard or the GUI, in the Modify XML Message Validation Check dialog box, on the General tab you can enable or disable the Block, Log, and Statistics actions.

If you use the command-line interface, you can enter the following command to configure the XML Message Validation Check:

- `set appfw profile <name> -xmlValidationAction [**block**] [**log**] [**stats**] [**none**]`

You must use the GUI to configure the other XML Validation check settings. In the Modify XML Message Validation Check dialog box, on the Checks tab, you can configure the following settings:

- **XML Message Validation.** Use one of the following options to validate the XML message:
  - **SOAP Envelope.** Validate only the SOAP envelope of XML messages.
  - **WSDL.** Validate XML messages by using an XML SOAP WSDL. If you choose WSDL validation, in the WSDL Object drop-down list you must choose a WSDL. If you want to validate against a WSDL that has not already been imported to the Web App Firewall, you can click the Import button to open the Manage WSDL Imports dialog box and import your WSDL. See [WSDL](#) for more information.
    - \* If you want to validate the entire URL, leave the Absolute radio button in the End Point Check button array selected. If you want to validate only the portion of the URL after the host, select the Relative radio button.
    - \* If you want the Web App Firewall to enforce the WSDL strictly, and not allow any additional XML headers not defined in the WSDL, you must clear the Allow additional headers not defined in the WSDL check box.  
Caution: If you uncheck the Allow Additional Headers not defined in the WSDL check box, and your WSDL does not define all XML headers that your protected XML application or Web 2.0 application expects or that a client sends, you may block legitimate access to your protected service.
  - **XML Schema.** Validate XML messages by using an XML schema. If you choose XML schema validation, in the XML Schema Object drop-down list you must choose an XML schema. If you want to validate against an XML schema that has not already been imported to the Web App Firewall, you can click the Import button to open the Manage XML Schema Imports dialog box and import your WSDL. See [WSDL](#) for more information.
- **Response Validation.** By default, the Web App Firewall does not attempt to validate responses. If you want to validate responses from your protected application or Web 2.0 site, select the Validate Response check box. When you do, the Reuse the XML Schema specified in request validation check box and the XML Schema Object drop-down list are activated.
  - Check the Reuse XML Schema check box to use the schema you specified for request validation to do response validation as well.  
Note: If you check this check box, the XML Schema Object drop-down list is grayed out.

- If you want to use a different XML schema for response validation, use the XML Schema Object drop-down list to select or upload that XML schema.

## XML SOAP fault filtering check

September 21, 2020

The XML SOAP fault filtering check examines responses from your protected web services and filters out XML SOAP faults. This prevents leaking of sensitive information to attackers.

If you use the wizard or the GUI, in the Modify XML SOAP Fault Filtering Check dialog box, on the **General** tab you can enable or disable the Block, Log, and Statistics actions, and the Remove action, which removes SOAP faults before forwarding the response to the user.

If you use the command-line interface, you can enter the following command to configure the XML SOAP Fault Filtering Check:

```
set appfw profile <name> -XMLSOAPFaultAction [block] [log] [stats] [none]
```

You cannot configure exceptions to the XML SOAP Fault Filtering check. You can only enable or disable it.

## JSON Protection Checks

May 2, 2023

NetScaler Web App Firewall protects your JSON applications from content-level DoS, SQL, or cross-site scripting attacks. When a JSON request has a DoS, SQL, or cross-site scripting attack, you must protect your application by configuring limits on JSON structures such as arrays and strings.

### Note:

The JSON security checks apply only to content that is sent with a JSON content-type header. If the content-type header is missing, or is set to a different value, all JSON security checks are bypassed. If you want to protect your JSON applications, the webmasters of each web server that hosts those applications must ensure a proper JSON content-type header is sent.

The learning feature is not support for JSON SQL, cross-site scripting, DOS content types.

## JSON Denial-of-Service protection check

February 9, 2024

The JSON denial-of-service (DoS) check examines an incoming JSON request and validates if there is any data that matches the characteristics of a DoS attack. If the request had JSON violations, the appliance blocks the request, logs the data, sends an SNMP alert, and also displays a JSON error page. The purpose of the JSON DoS check is to prevent an attacker from sending JSON request to launch DoS attacks on your JSON applications or website.

When a client sends a request to a NetScaler appliance, the JSON parser parses the request payload and if a violation is observed, the appliance enforces constraints on the JSON structure. The constraint enforces a size limit on the JSON request. As a result, if any JSON violation was observed, the appliance applies an action and responds with the JSON error page.

### JSON DoS rules

When the appliance receives a JSON request, The JSON DOS protection enforces size limit on the following DoS parameters in the request payload.

1. **maximum depth:** Maximum nesting (depth) of JSON document. This check protects against documents that have excessive depth of hierarchy.
2. **maximum document length:** Maximum document length of JSON document.
3. **maximum array length:** Maximum array length in the any of JSON object. This check protects against arrays having large lengths.
4. **maximum string length:** Maximum string length in the JSON. This check protects against strings that have large length.
5. **maximum object key count:** Maximum key count in the any of JSON object. This check protects against objects that have large number of keys.
6. **maximum object key length:** Maximum key length in the any of JSON object. This check protects against objects that have large keys.

Following is a list of JSON DoS rules validated during JSON parsing.

1. **JSONMaxContainerDepth.** This check can be enabled by configuring the JSONMaxContainerDepth check and by default the option is OFF.
2. **JSONMaxContainerDepth.** This check can be enabled/disabled by configurable option JSONMaxContainerDepthCheck and default value can be changed by option JSONMaxContainerDepth. However, you can vary the maximum levels to a value ranging from 1 to 127. Default value: 5, Minimum value: 1, Maximum value: 127

3. JSONMaxDocumentLength. This check can be enabled by configuring the JSONMaxDocumentLength check and the default option is OFF.
4. JSONMaxDocumentLength. This check can be enabled by configuring the JSONMaxDocumentLength check and the default length is set to 2000000 bytes. Minimum value: 1, Maximum value: 2147483647
5. JSONMaxObjectKeyCount. The rule validates if the JSON maximum object key count check is turned on or off. Possible values: ON, OFF, Default value: OFF
6. JSONMaxObjectKeyCount. This check can be enabled by configuring the JSONMaxObjectKeyCount check. The check protects against objects that have large number of keys and the default value is set to 1000 bytes. Minimum value: 0, Maximum value: 2147483647
7. JSONMaxObjectKeyLength. This check can be enabled by configuring the JSONMaxObjectKeyLength check. The rule validates if the JSON maximum object key length check is turned on or off. By default it is turned OFF.
8. JSONMaxObjectKeyLength. The check protects against objects that have large key length. Default value: 128. Minimum value: 1, Maximum value: 2147483647
9. JSONMaxArrayLength. The rule validates if the JSON maximum array length check is ON or OFF. By default it is turned off.
10. JSONMaxArrayLength. The check protects against arrays that has large lengths. By default, the value is set to 10000. Minimum value: 1, Maximum value: 2147483647
11. JSONMaxStringLength. This check can be enabled by configuring the JSONMaxStringLength check. The check validates if the JSON maximum string length is ON or OFF. By default it is turned off.
12. JSONMaxStringLength. The check protects against strings that has large length. By default, it is set to 1000000. Minimum value: 1, Maximum value: 2147483647

### **Configure JSON DoS protection check**

For configure JSON DoS protection, you must complete the following steps:

1. Add application firewall profile for JSON.
2. Set application firewall profile for JSON DoS settings.
3. Configure JSON DoS variables by binding the application firewall profile.

### **Add application firewall profile for JSON DoS protection**

You must first create a profile that specifies how the application firewall must protect your JSON web content from JSON DoS attack.



At the command prompt, type:

```
add appfw profile <name> -type (HTML | XML | JSON)
```

*Note:*

When you set the profile type as JSON, other checks such as HTML or XML will not be applicable.

**Example** `add appfw profile profile1 -type JSON`

### Set application firewall profile for JSON DoS protection

You must configure the profile for one or more JSON DoS actions and JSON DoS error object to be set on the application firewall profile.

At the command prompt, type:

```
set appfw profile <name> -JSONDoSAction [block] | [log] | [stats] | [none]
```

Block - Block connections that violate this security check.

Log - Log violations of this security check.

Stats - Generate statistics for this security check.

None - Disable all actions for this security check.

*Note:*

To enable one or more actions, type “set appfw profile -JSONDoSAction” followed by the actions to be enabled.

**Example** `set appfw profile profile1 -JSONDoSAction block log stat`

### Configure DoS variables by binding application firewall profile

To provide JSON DoS protection, you must bind the application firewall profile with JSON DoS settings.

At the command prompt, type:

```
bind appfw profile <name> -JSONDoSURL <expression> [-JSONMaxContainerDepthCheck (ON | OFF) [-JSONMaxContainerDepth <positive_integer>]] [-JSONMaxDocumentLength (ON | OFF) [-JSONMaxDocumentLength <positive_integer>]] [-JSONMaxObjectKeyCount (ON | OFF) [-JSONMaxObjectKeyCount <positive_integer>]] [-JSONMaxObjectKeyLength (ON | OFF) [-JSONMaxObjectKeyLength <positive_integer>]] [-JSONMaxArrayLength (ON | OFF) [-JSONMaxArrayLength <positive_integer>]] [-JSONMaxStringLengthCheck (ON | OFF) [-JSONMaxStringLength <positive_integer>]]
```

**Example** `bind appfw profile profile1 -JSONDoSURL “.*” -JSONMaxContainerDepthCheck ON`

*Note:*

The JSON DoS checks will be applicable only if the profile type is selected as JSON. Also, the SQL, cross-site scripting, Field format and Form field signatures are applied on Query parameters in cases of JSON profile.

### Import JSON errorpage

If an incoming request had a DoS attack and when you block the request, the appliance displays an error message. For doing this, you must import the JSON error page.

At the command prompt, type:

```
import appfw jsonerrorpage <src> <name> [-comment <string>] [-overwrite]
```

Where,

src. URL (protocol, host, path, and name) for the location at which to store the imported JSON error object.

*Note:*

The import fails if the object to be imported is on an HTTPS server that requires client certificate authentication for access. This is a mandatory argument. Maximum Length: 2047.

Name. Name to assign to the JSON error object on the NetScaler. This is a mandatory argument.

Maximum Length: 31

Comment. Any comments to preserve information about the JSON error object. Maximum Length: 255

Overwrite. Overwrite any existing JSON error object of the same name.

#### Sample configuration

```
1 Add appfw prof profjson -type JSON
2 Bind appfw prof profjson -JSONDoSURL “.*” -
 JSONMaxDocumentLengthCheck ON -JSONMaxDocumentLength 30 -
 JSONMaxContainerDepthCheck ON -JSONMaxContainerDepth 3
 JSONMaxObjectKeyCountCheck ON -JSONMaxObjectKeyCount 4 -
 JSONMaxObjectKeyLengthCheck ON -JSONMaxObjectKeyLength 10 -
 JSONMaxArrayLengthCheck ON -JSONMaxArrayLength 5 -
 JSONMaxStringLengthCheck ON -JSONMaxStringLength 30
```

#### Sample Payloads, Log Messages and Counters:

**JSONMaxDocumentLength Violation** JSONMaxDocumentLength: 30

Payload: {"a": "A", "b": "B", "c": "C", "d": "D", "e": "E"}

**Log Message:**

```
1 Document Length exceeds 20000000 May 29 20:23:32 <local0.info>
 10.217.31.243 05/29/2019:20:23:32 GMT 0-PPE-0 : default APPFW
 APPFW_JSON_DOS_MAX_DOCUMENT_LENGTH 136 0 : 10.217.32.134 114-PPE0 -
 profjson http://10.217.30.120/forms/login.html Document exceeds
 maximum document length (30). cn1=30467 cn2=115 cs1=profjson cs2=
 PPE0 cs4=ALERT cs5=2019 act=blocked
```

**Counters:**

```
1 1 0 6 as_viol_json_dos
2 2 0 3 as_viol_json_dos_max_document_length
3 3 0 6 as_log_json_dos
4 4 0 3 as_log_json_dos_max_document_length
5 5 0 6 as_viol_json_dos_profile appfw__(profile1)
6 6 0 3 as_viol_json_dos_max_document_length_profile appfw__(profile1)
7 7 0 6 as_log_json_dos_profile appfw__(profile1)
8 8 0 3 as_log_json_dos_max_document_length_profile appfw__(profile1)
```

**JSONMaxContainerDepth Violation** JSONMaxContainerDepth: 3

Payload: {"a": {"b": {"c": {"d": {"e": "f"}}}}}

**Log Message:**

```
1 May 29 19:33:59 <local0.info> 10.217.31.243 05/29/2019:19:33:59 GMT 0-
 PPE-1 : default APPFW APPFW_JSON_DOS_MAX_CONTAINER_DEPTH 4626 0 :
 10.217.31.247 22-PPE1 - profjson http://10.217.30.120/forms/login.
 html Document at offset (15) exceeds maximum container depth (3).
 cn1=30466 cn2=113 cs1=profjson cs2=PPE0 cs4=ALERT cs5=2019 act=
 blocked
```

**Counters:**

```
1 36 20999 7 1 0 as_viol_json_dos
2 37 0 6 1 0 as_viol_json_dos_max_container_depth
3 38 0 7 1 0 as_log_json_dos
4 39 0 6 1 0 as_log_json_dos_max_container_depth
5 40 0 7 1 0 as_viol_json_dos_profile appfw__(profile1)
6 41 0 6 1 0 as_viol_json_dos_max_container_depth_profile appfw__(
 profile1)
7 42 0 7 1 0 as_log_json_dos_profile appfw__(profile1)
8 43 0 6 1 0 as_log_json_dos_max_container_depth_profile appfw__(profile1
)
```

**JSONMaxObjectKeyCount Violation** JSONMaxObjectKeyCount: 4

Payload: {"a": "A", "b": "B", "c": "C", "d": "D", "e": "E"}

**Log Message:**

```
1 May 30 19:42:41 <local0.info> 10.217.31.243 05/30/2019:19:42:41 GMT 0-
PPE-1 : default APPFW APPFW_JSON_DOS_MAX_OBJECT_KEY_COUNT 457 0 :
10.217.32.134 219-PPE1 - profjson http://10.217.30.120/forms/login.
html Object at offset (41) that exceeds maximum key count (4). cn1
=30468 cn2=118 cs1=profjson cs2=PPE0 cs4=ALERT cs5=2019 act=blocked
```

**Counters:**

```
1 94 119105 15 1 0 as_viol_json_dos
2 95 0 4 1 0 as_viol_json_dos_max_object_key_count
3 96 0 15 1 0 as_log_json_dos
4 97 0 4 1 0 as_log_json_dos_max_object_key_count
5 98 0 15 1 0 as_viol_json_dos_profile appfw__(profile1)
6 99 0 4 1 0 as_viol_json_dos_max_object_key_count_profile appfw__(
profile1)
7 100 0 15 1 0 as_log_json_dos_profile appfw__(profile1)
8 101 0 4 1 0 as_log_json_dos_max_object_key_count_profile appfw__(
profile1)
```

**JSONMaxObjectKeyLength Violation** JSONMaxObjectKeyLength: 10

Payload: {"a": "A", "b1234567890": "B", "c": "C", "d": "D", "e": "E"}

**Log Message:**

```
1 May 31 20:26:10 <local0.info> 10.217.31.243 05/31/2019:20:26:10 GMT 0-
PPE-1 : default APPFW APPFW_JSON_DOS_MAX_OBJECT_KEY_LENGTH 102 0 :
10.217.32.134 89-PPE1 - profjson http://10.217.30.120/forms/login.
html Object key(b1234567890) at offset (12) exceeds maximum key
length (10). cn1=30469 cn2=118 cs1=profjson cs2=PPE0 cs4=ALERT cs5
=2019 act=blocked
```

**Counters:**

```
1 242172 6 1 0 as_viol_json_dos
2 0 1 1 0 as_viol_json_dos_max_object_key_length
3 10 0 5 1 0 as_log_json_dos
4 11 0 1 1 0 as_log_json_dos_max_object_key_length
5 12 0 6 1 0 as_viol_json_dos_profile appfw__(profile1)
6 13 0 1 1 0 as_viol_json_dos_max_object_key_length_profile appfw__(
profile1)
7 14 0 5 1 0 as_log_json_dos_profile appfw__(profile1)
8 15 0 1 1 0 as_log_json_dos_max_object_key_length_profile appfw__(
profile1)
```

**JSONMaxArrayLength Violation** JSONMaxArrayLength: 5

Payload: {"a": "A", "c":["d","e","f","g","h","i"],"e":["E","e"]}

**Log Message:**

```
1 May 29 20:58:39 <local0.info> 10.217.31.243 05/29/2019:20:58:39 GMT 0-
PPE-1 : default APPFW APPFW_JSON_DOS_MAX_ARRAY_LENGTH 4650 0 :
10.217.32.134 153-PPE1 -profjson http://10.217.30.120/forms/login.
html Array at offset (37) that exceeds maximum array length (5). cn1
=30469 cn2=120 cs1=profjson cs2=PPE0 cs4=ALERT cs5=2019 act=blocked
```

**Counters:**

```
1 36 182293 10 1 0 as_viol_json_dos
2 37 0 1 1 0 as_viol_json_dos_max_array_length
3 38 0 10 1 0 as_log_json_dos 39 0 1 1 0 as_log_json_dos_max_array_length
4 40 0 10 1 0 as_viol_json_dos_profile appfw__(profile1)
5 41 0 1 1 0 as_viol_json_dos_max_array_length_profile appfw__(profile1)
6 42 0 10 1 0 as_log_json_dos_profile appfw__(profile1)
7 43 0 1 1 0 as_log_json_dos_max_array_length_profile appfw__(profile1)
```

**JSONMaxStringLength Violation** JSONMaxStringLength: 10

Payload: {"a": "A", "c": "CcCcCcCcCcCcCcCcCcCc", "e": ["E", "e"]}

**Log Message:**

```
1 May 29 20:05:02 <local0.info> 10.217.31.243 05/29/2019:20:05:02 GMT 0-
PPE-0 : default APPFW APPFW_JSON_DOS_MAX_STRING_LENGTH 134 0 :
10.217.32.134 80-PPE0 - profjson http://10.217.30.120/forms/login.
html String(CcCcCcCcCcCcCc) at offset (27) that exceeds maximum
string length (10). n1=30470 cn2=122 cs1=profjson cs2=PPE0 cs4=ALERT
cs5=2019 act=blocked
```

**Counters:**

```
1 44 91079 3 1 0 as_viol_json_dos
2 45 0 1 1 0 as_viol_json_dos_max_string_length
3 46 0 3 1 0 as_log_json_dos
4 47 0 1 1 0 as_log_json_dos_max_string_length
5 48 0 3 1 0 as_viol_json_dos_profile appfw__(profile1)
6 49 0 1 1 0 as_viol_json_dos_max_string_length_profile appfw__(profile1)
7 50 0 3 1 0 as_log_json_dos_profile appfw__(profile1)
8 51 0 1 1 0 as_log_json_dos_max_string_length_profile appfw__(profile1)
```

**Configure JSON DoS protection by using GUI**

Follow the procedure below to set the JSON DoS protection settings.

1. On the navigation pane, navigate to **Security > Profiles**.
2. In the **Profiles** page, click **Add**.

3. In the **NetScaler Web App Firewall Profile** page, click **Security Checks under Advanced Settings**.
4. In the **Security Checks** section, go to **JSON Denial of Service** settings.
5. Click the executable icon near the checkbox.
6. Click **Action Settings** to access the **JSON Denial of Service Settings** page.
7. Select the JSON DoS action.
8. Click **OK**.
9. In the **NetScaler Web App Firewall Profile** page, click **Relaxation Rules under Advanced Settings**.
10. In **Relaxation Rules** section, select **JSON Denial of Service** settings and click **Edit**.
11. In the **Application Firewall JSON Denial of Service Check** set the JSON DoS validation values.
12. Click **OK**.

| Application Firewall JSON Denial of Service Check |                                                                                            |             |
|---------------------------------------------------|--------------------------------------------------------------------------------------------|-------------|
| Check Name                                        | Enabled                                                                                    | Check Value |
| Max Array Length                                  | <input checked="" type="checkbox"/> jsonmaxarraylengthcheckjsonmaxarraylengthcheck         | 10000       |
| Max Container Depth                               | <input checked="" type="checkbox"/> jsonmaxcontainerdepthcheckjsonmaxcontainerdepthcheck   | 5           |
| Max Document Length                               | <input checked="" type="checkbox"/> jsonmaxdocumentlengthcheckjsonmaxdocumentlengthcheck   | 20000000    |
| Max Object Key Count                              | <input checked="" type="checkbox"/> jsonmaxobjectkeycountcheckjsonmaxobjectkeycountcheck   | 10000       |
| Max Object Key Length                             | <input checked="" type="checkbox"/> jsonmaxobjectkeylengthcheckjsonmaxobjectkeylengthcheck | 128         |
| Max String Length                                 | <input checked="" type="checkbox"/> jsonmaxstringlengthcheckjsonmaxstringlengthcheck       | 1000000     |

13. In the **NetScaler Web App Firewall Profile** page, click **Profile Settings under Advanced Settings**.
14. In the **Profile Settings** section, go to **JSON Error Settings** sub section to set **JSON DoS error** page.

The screenshot shows the 'Profile Settings' configuration page. It includes sections for 'Redirect URL' (with a text input containing '/'), 'Verbose Log Level' (with a dropdown menu set to 'Pattern'), 'Content Type', and 'Inspected Content Types' (with three checked checkboxes: 'application/x-www-form-urlencoded', 'multipart/form-data', and 'text/x-gwt-rpc'). The 'JSON Settings' section is highlighted with a red border and contains a dropdown menu and an 'Add' button.

15. In the **JSON Error Page Import Object** page, set the following parameters:

- a) Import from. Import the error page as text, file or URL.
- b) URL. URL to redirect the user to the error page.  
1 File. Select a file to be imported as JSON DoS error file.
- c) Text. Enter the JSON file contents.
- d) Click Continue.
- e) File. Enter the file name.
- f) File Content. Add the error file content.
- g) Click **OK**.

The screenshot shows the 'JSON Error Page Import Object' configuration page. The 'Import JSON Error Page' section is highlighted. It includes the 'Import From\*' section with three radio buttons: 'URL' (selected), 'File', and 'Text'. Below this is the 'URL\*' section with a text input field.

- 16. Click **OK**.
- 17. Click **Done**.

## JSON SQL Injection protection check

February 9, 2024

An incoming JSON request can have SQL injection in the form of partial SQL query strings or unauthorized commands in the code. This leads to stealing of data from the JSON database of your web servers. On receiving such request, the appliance blocks such request to protect your data.

Consider a scenario, where a client sends a JSON SQL request to a NetScaler appliance, the JSON parser parses the request payload and if an SQL Injection is observed, the appliance enforces constraints on the JSON SQL content. The constraint enforces a size limit on the JSON SQL request. As a result, if any JSON SQL Injection is observed, the appliance applies an action and responds with the JSON SQL error page.

### Configure JSON SQL Injection protection

For configure JSON SQL protection, you must complete the following steps:

1. Add application firewall profile as JSON.
2. Set application firewall profile for JSON SQL Injection settings
3. Configure JSON SQL action by binding the application firewall profile.

### Add application firewall profile of type JSON

You must first create a profile that specifies how the application firewall must protect your JSON web content from JSON SQL Injection attack.

At the command prompt, type:

```
add appfw profile <name> -type (HTML | XML | JSON)
```

*Note:*

When you set the profile type as JSON, other checks such as HTML or XML will not be applicable.

### Example

```
add appfw profile profile1 -type JSON
```



## Configure JSON SQL Injection action

You must configure one or more JSON SQL Injection actions to protection your application from JSON SQL injection attacks.

At the command prompt, type:

```
set appfw profile <name> - JSOJSONInjectionAction [block] [log] [stats] [none]
```

SQL Injection actions are:

Block - Block connections that violate this security check.

Log - Log violations of this security check.

Stats - Generate statistics for this security check.

None - Disable all actions for this security check.

## Configure JSON SQL Injection type

To configure the JSON SQL Injection type on an application firewall profile, at the command prompt, type:

```
set appfw profile <name> - JSOJSONInjectionType <JSOJSONInjectionType >
```

### Example

```
set appfw profile profile1 -JSOJSONInjectionType SQLKeyword
```

Where the available SQL Injection types are:

Available SQL injection types.

SQLSplChar. Checks for SQL Special Characters,

SQLKeyword. Checks for SQL Keywords.

SQLSplCharANDKeyword. Checks for both and blocks if found.

SQLSplCharORKeyword. . Blocks if SQL special character or spl keyword is found.

Possible values: SQLSplChar, SQLKeyword, SQLSplCharORKeyword, SQLSplCharANDKeyword.

#### Note:

To enable one or more actions, type “set appfw profile - JSOJSONInjectionAction” followed by the actions to be enabled.

### Example

```
set appfw profile profile1 -JSOJSONInjectionAction block log stat
```

The following example shows a sample payload, its corresponding log message and statistics counters:

```

1 Payload:
2 =====
3 {
4
5 "test": "data",
6 "username": "waf",
7 "password": "select * from t1;",
8 "details": {
9
10 "surname": "test",
11 "age": "23"
12 }
13
14 }
15
16
17 Log Message:
18 =====
19 08/19/2019:08:49:46 GMT pegasus121 Informational 0-PPE-0 : default
 APPFW APPFW_JSON_SQL 6656 0 : 10.217.32.165 18402-PPE0 - profjson
 http://10.217.32.147/test.html SQL Keyword check failed for object
 value(with violation="select(;)") starting at offset(52) <blocked>
20 Counters:
21 =====
22 1 441083 1 as_viol_json_sql
23 3 0 1 as_log_json_sql
24 5 0 1 as_viol_json_sql_profile appfw__(profjson)
25 7 0 1 as_log_json_sql_profile appfw__(profjson)

```

### Configure JSON SQL Injection protection by using GUI

Follow the procedure below to set the JSON SQL Injection protection settings.

1. On the navigation pane, navigate to **Security > Profiles**.
2. In the **Profiles** page, click **Add**.
3. In the **NetScaler Web App Firewall Profile** page, click **Security Checks** under **Advanced Settings**.
4. In the **Security Checks** section, go to **JSON SQL Injection** settings.
5. Click the executable icon near the check box.
6. Click **Action Settings** to access the **JSON SQL Injection Settings** page.
7. Select the **JSON SQL Injection** actions.
8. Click **OK**.


9. In the **NetScaler Web App Firewall Profile** page, click **Relaxation Rules** under **Advanced Settings**.
10. In **Relaxation Rules** section, select **JSON SQL Injection** settings and click **Edit**.
11. In the JSON SQL Injection Relaxation Rule page, enter the URL to which the request has to be sent. All requests sent to this URL will not be blocked.
12. Click **Create**.

[JSON SQL Injection Relaxation Rules](#) / JSON SQL Injection Relaxation Rule

## JSON SQL Injection Relaxation Rule


Enabled

URL\*

true 

[RegEx Editor](#)

Comments

SQL Injection rule 

[Create](#) [Close](#)

### Configure fine grain relaxation for JSON SQL injection protection

The Web App Firewall gives you an option to relax a specific JSON key or value from the JSON based SQL Injection inspection check. You can configure multiple options to relax JSON payloads using fine grain relaxation rules.

Previously, the only way to configure relaxations for JSON protection checks is to specify the entire URL and that would bypass the verification of the entire URL.

The JSON based SQL security protection provides relaxation for the following:

- Key names
- Key values

JSON based SQL protection check enables you to configure relaxations that allow specific patterns and block the rest. For example, the Web App Firewall currently has a default set of more than 100 SQL keywords. Because hackers can use these keywords in SQL Injection attacks, the Web App Firewall flags all as potential threats. If you want to relax one or more keywords that are considered safe

for the specific location, you can configure a relaxation rule that can bypass the security check and block the rest. The commands used in relaxations have optional parameters for Value Type and Value Expression. You can specify whether the value expression is a regular expression or a literal string. The value type can be left blank, or you have an option to select Keyword or Special String.

**Note:**

Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the URL that you want to add as an exception, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (.) metacharacter or wildcard combination, can have results that you do not want, such as blocking access to web content that you did not intend to block or allowing an attack that the JSON SQL Injection check would otherwise have blocked.

**Points to Consider**

- Value expression is an optional argument. A field name might not have any value expression.
- A key name can be bound to multiple value expressions.
- Value expressions must be assigned a value type. The value type can be: 1) Keyword, 2) Special-String.
- You can have multiple relaxation rules per key name or URL combination.

**Configure JSON fine grain relaxation for command injection attacks using command interface**

To configure JSON file grain relaxation rule, you must bind the fine grain relaxation entities to the Web App Firewall profile.

At the command prompt, type:

```
1 bind appfw profile <profile name> -jsoncmdURL <URL> -key <key name> -
 isregex <REGEX/NOTREGEX> -valueType <keyword/SpecialString> <value
 Expression> -isvalueRegex <REGEX/NOTREGEX>
```

**Example:**

```
1 bind appfw profile appprofile1 -jsonsqlurl www.example.com -key
 stn_name -isRegex NOTREGEX -valueType Keyword "union" -
 isvalueRegex NOTREGEX
```

To configure fine grain relaxation rule for JSON-based command injection attacks by using the GUI

1. Navigate to **Application Firewall > Profiles**, select a profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Relaxation Rules**.
3. In the **Relaxation Rules** section, select a **JSON SQL Injection** record and click **Edit**.

4. In the **JSON SQL Injection Relaxation Rule** slider, click **Add**.
5. In the **JSON SQL Injection Relaxation Rule** page, set the following parameters.
  - a) Enabled
  - b) Is Name Regex
  - c) Key Name
  - d) URL
  - e) Value Type
  - f) Comments
  - g) Resource ID
6. Click **Create**.

## JSON Cross-Site Scripting protection check

February 9, 2024

If an incoming JSON payload has a malicious cross-site scripting data, WAF blocks the request. The following procedures explain how you can configure this through CLI and GUI interfaces.

### Configure JSON Cross-Site Scripting protection

For configure JSON cross-site scripting protection, you must complete the following steps:

1. Add application firewall profile as JSON.
2. Configure JSON cross-site scripting action to block cross-site scripting malicious payload

### Add application firewall profile of type JSON

You must first create a profile that specifies how the application firewall must protect your JSON web content from JSON cross-site scripting attack.

At the command prompt, type:

```
add appfw profile <name> -type (HTML | XML | JSON)
```

**Note:**

When you set the profile type as JSON, other checks such as HTML or XML will not applicable.

**Example**

```
add appfw profile profile1 -type JSON
```

Sample output for JSON cross-site scripting violation

```

1 JSONcross-site scriptingAction: block log stats
2 Payload: {
3 "username": ">X","password":"xyz" }
4
5
6 Log message: Aug 19 06:57:33 <local0.info> 10.106.102.21
 08/19/2019:06:57:33 GMT 0-PPE-0 : default APPFW APPFW_JSON_cross-
 site scripting 58 0 : 10.102.1.98 12-PPE0 - profjson http://
 10.106.102.24/ Cross-site script check failed for object value(with
 violation="Bad URL: jAvAsCrIpT:alert(1)") starting at offset(12). <
 blocked>
7
8 Counters
9 1 357000 1 as_viol_json_xss
10 3 0 1 as_log_json_xss
11 5 0 1 as_viol_json_xss_profile appfw__(
 profjson)
12 7 0 1 as_log_json_xss_profile appfw__(
 profjson)

```

**Configure JSON Cross-Site Scripting action**

You must configure one or more JSON cross-site scripting actions to protection your application from JSON Cross-Site Scripting attacks.

At the command prompt, type:

```
set appfw profile <name> - JSONcross-site scriptingAction [block] [
log] [stats] [none]
```

**Example**

```
set appfw profile profile1 -JSONcross-site scriptingAction block
```

The available Cross-Site Scripting actions are:

Block - Block connections that violate this security check.

Log - Log violations of this security check.

Stats - Generate statistics for this security check.

None - Disable all actions for this security check.

**Note:**

To enable one or more actions, type “set appfw profile - JSONcross-site scriptingAction “followed by the actions to be enabled.

**Example**

```
set appfw profile profile1 -JSONSQLInjectionAction block log stat
```

**Configure JSON Cross Site Scripting (cross-site scripting) protection by using GUI**

Follow the procedure below to set the Cross Site Scripting (cross-site scripting) protection settings.

1. On the navigation pane, navigate to **Security > Profiles**.
2. In the **Profiles** page, click **Add**.
3. In the **NetScaler Web App Firewall Profile** page, click **Security Checks** under **Advanced Settings**.
4. In the **Security Checks** section, go to **JSON Cross-Site Scripting (cross-site scripting)** settings.
5. Click the executable icon near the checkbox.
6. Click **Action Settings** to access the **JSON Cross-Site Scripting Settings** page.
7. Select the JSON cross-site scripting actions.
8. Click **OK**.
9. In the **NetScaler Web App Firewall Profile** page, click **Relaxation Rules** under **Advanced Settings**.
10. In **Relaxation Rules** section, select JSON Cross-Site Scripting settings and click **Edit**.
11. In the **JSON Cross-Site Scripting Relaxation Rule** page, click **Add** to add a JSON Cross-Site Scripting relaxation rule.
12. Enter the URL to which the request has to be sent. All requests sent to this URL will not be blocked.
13. Click **Create**.

**Configure fine grained relaxation for JSON-based cross-site scripting**

The Web App Firewall gives you an option to relax a specific JSON key or value from the JSON based cross-site scripting (XSS) inspection check. You can configure multiple options to relax JSON payloads using fine grain relaxation rules.

Previously, the only way to configure relaxations for JSON protection checks is to specify the entire URL and that would bypass the verification of the entire URL.

The JSON based SQL security protection provides relaxation for the following:

- Key names
- Key values

JSON based cross-site scripting (XSS) protection enables you to configure relaxations that allow specific patterns and block the rest. For example, the Web App Firewall currently has a default set of more than 100 SQL keywords. Because hackers can use these keywords in SQL Injection attacks, the Web App Firewall flags all as potential threats. If you want to relax one or more keywords that are considered safe for the specific location, you can configure a relaxation rule that can bypass the security check and block the rest. The commands used in relaxations have optional parameters for Value Type and Value Expression. You can specify whether the value expression is a regular expression or a literal string. The value type can be left blank, or you have an option to select Keyword or Special String.

**Note:**

Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the URL that you want to add as an exception, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (.) metacharacter or wildcard combination, can have results that you do not want, such as blocking access to web content that you did not intend to block or allowing an attack that the JSON SQL Injection check would otherwise have blocked.

**Points to Consider**

- Value expression is an optional argument. A field name might not have any value expression.
- A key name can be bound to multiple value expressions.
- Value expressions must be assigned a value type. The value types are tag, attribute, and pattern.
- You can have multiple relaxation rules per key name/URL combination.

**Configure JSON fine grain relaxation for cross-site scripting (XSS) injection attacks using command interface**

To configure JSON file grain relaxation rule, you must bind the fine grain relaxation entities to the Web App Firewall profile.

At the command prompt, type:

```
1 bind appfw profile <profile name> -jsonxssURL <URL> -key <key name> -
 isregex <REGEX/NOTREGEX> -valueType <keyword/SpecialString> <value
 Expression> -isvalueRegex <REGEX/NOTREGEX>
```

**Example:**

```
1 bind appfw profile appprofile1 -jsonxssurl www.example.com -key name -
 isRegex NOTREGEX -valueType Tag "sname" -isvalueRegex NOTREGEX
```



To configure an JSON based cross-site scripting (XSS) Injection fine grain relaxation rule by using the GUI

1. Navigate to **Application Firewall > Profiles**, select a profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Relaxation Rules**.
3. In the **Relaxation Rules** section, select a JSON SQL Injection record and click **Edit**.
4. In the **JSON Cross-Site Scripting Relaxation Rules** slider, click **Add**.
5. In the **JSON Cross-Site Scripting Relaxation Rule** page, set the following parameters.
  - a) Enabled
  - b) Is Name Regex
  - c) Key Name
  - d) URL
  - e) Value Type
  - f) Comments
  - g) Resource ID
6. Click **Create**.

## JSON Cross-Site Scripting Relaxation Rule

Enabled

Is Name Regex

Key Name

email

[RegEx Editor](#)

URL\*

https://example.org

[RegEx Editor](#)

Value Type

Tag

Is Value Expression Regex

Value Expression

username@email.com

[RegEx Editor](#)

Comments

fine grain relaxation rules for JSON XSS injection

Resource Id

ADD88Y6092880

## JSON command injection protection check

May 8, 2024

The JSON command injection check examines the incoming JSON traffic for unauthorized commands that break the system security or modify the system. When examining the traffic, if any malicious commands are detected, the appliance blocks the request or performs the configured action.

In a command injection attack, the attacker aims to run unauthorized commands on the NetScaler operating system or the back-end server. To achieve this, the attacker injects operating system commands using a vulnerable application. The back-end application is vulnerable to injection attacks if the appliance simply forwards a request without any security check. Therefore, it is highly important to configure a security check, so the NetScaler appliance can protect your web application by blocking unsafe data.

## How command injection protection works

1. For an incoming JSON request, WAF examines the traffic for keywords or special characters. If the JSON request has no patterns that match any of the denied keywords or special characters, the request is allowed. Otherwise, the request is blocked, dropped, or redirected based on the configured action.
2. If you prefer to exempt a keyword or a special character from the list, you can create a relaxation rule to bypass the security check under specific conditions.
3. You can enable logging to generate log messages. You can monitor the logs to determine whether responses to legitimate requests are getting blocked. A large increase in the number of log messages can indicate attempts to launch an attack.
4. You can also enable the statistics feature to gather statistical data about violations and logs. An unexpected surge in the stats counter might indicate that your application is under attack. If legitimate requests are getting blocked, you might have to revisit the configuration to see if you must configure the new relaxation rule or modify the existing one.

## Keywords and special characters denied for command injection check

To detect and block JSON command injection attacks, the appliance has a set of patterns (keywords and special characters) defined in the default signature file. Following is a list of keywords blocked during command injection detection.

```
1 <commandinjection>
2 <keyword type="LITERAL" builtin="ON">7z</keyword>
3 <keyword type="LITERAL" builtin="ON">7za</keyword>
4 <keyword type="LITERAL" builtin="ON">7zr</keyword>
5 ...
6 </commandinjection>
```

Special characters defined in the signature file are:

```
| ; & $ > < ' \ ! >> #
```

### Note:

You can find the list of keywords and patterns in the `/netscaler/default_signatures.xml` file.

## Configuring JSON command injection check by using the CLI

You can use either the `set appfw profile` command or add an `appfw profile` command to configure the JSON command injection settings. You can enable the block, log, and stats actions. You must also set the command injection type such as key words and string characters that you want to detect in the payloads.

At the command prompt, type:

```
set appfw profile <profile-name> -cmdInjectionAction <action-name> -
CMDInjectionType <CMDInjectionType>]
```

**Note:**

By default, the command injection action is set as **Block, Log, and Stats**. Also, the default command injection type is set as **CmdSpLCharANDKeyWord**. After an upgrade, the existing Web app Firewall profiles have the action set as **None**..

**Example:**

```
set appfw profile profile1 -JSONCMDInjectionAction block -JSONCMDInjectionType
CmdSpLChar
```

Where, the available JSON command injection actions are:

None - Disable command injection protection.

Log - Log command injection violations for the security check.

Block - blocks traffic that violates the command injection security check.

Stats - Generates statistics for command injection security violations.

Where, the available JSON command injection types are:

**Cmd SpLChar** - Checks special characters

**CmdKeyWord** - Checks command injection Keywords

**CmdSpLCharANDKeyWord** - This is the default action. The action checks special characters and command injection. Keywords and blocks only if both are present.

**CmdSpLCharORKeyWord** - Checks special characters and command injection Keywords and blocks if either of them is found.

## Configuring relaxation rules for JSON command injection protection check

If your application requires you to bypass the JSON command injection inspection for a specific ELEMENT or ATTRIBUTE in the payload, you can configure a relaxation rule.

The JSON command Injection inspection relaxation rules have the following syntax.

```
bind appfw profile <profile name> -JSONCMDURL <expression> -comment
<string> -isAutoDeployed (AUTODEPLOYED | NOTAUTODEPLOYED)-state (
ENABLED | DISABLED)
```

**Example for relaxation rule for Regex in header**

```
bind appfw profile abc_json -jsoncmDURL http://1.1.1.1/hello.html
```

Whereas, the following relaxes requests from all URLs hosted on 1.1.1.1:

```
bind appfw profile abc_json -jsoncmDURL http://1.1.1.1/*
```

To remove the relaxation, use 'unbind'.

```
unbind appfw profile abc_json -jsoncmDURL " http://1.1.1.1/*"
```

### Configure JSON command injection check by using the GUI

Complete the following steps to configure the JSON command injection check.

1. Navigate to **Security > NetScaler Web App Firewall and Profiles**.
2. On the **Profiles** page, select a profile and click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, go to **Advanced Settings** section and click **Security Checks**.
4. In **Security Checks** section, select **JSON Command Injection** and click **Action** settings.
5. In the **JSON Command Injection Settings** page, set the following parameters
  - a) Actions. Select one or more actions to perform for JSON command injection security check.
  - b) Check Request Containing. Select a command injection pattern to check if the incoming request has the pattern.
6. Click **OK**.

### Viewing command injection traffic and violation statistics

The **NetScaler Web App Firewall Statistics** page shows security traffic and security violation details in a tabular or graphical format.

To view security statistics by using the command interface.

At the command prompt, type:

```
stat appfw profile profile1
```

---

| Appfw profile Traffic Statistics | Rate (/s) | Total |
|----------------------------------|-----------|-------|
| Requests                         | 0         | 0     |
| Request Bytes                    | 0         | 0     |
| Responses                        | 0         | 0     |

| Appfw profile Traffic Statistics | Rate (/s) | Total |
|----------------------------------|-----------|-------|
| Response Bytes                   | 0         | 0     |
| Aborts                           | 0         | 0     |
| Redirects                        | 0         | 0     |
| Long Term Ave Response Time (ms) | –         | 0     |
| Recent Ave Response Time (ms)    | –         | 0     |

---

HTML/XML/JSON Violation

| Statistics                     | Rate (/s) | Total |
|--------------------------------|-----------|-------|
| Start URL                      | 0         | 0     |
| Deny URL                       | 0         | 0     |
| Referer header                 | 0         | 0     |
| Buffer overflow                | 0         | 0     |
| Cookie consistency             | 0         | 0     |
| Cookie hijacking               | 0         | 0     |
| CSRF form tag                  | 0         | 0     |
| HTML Cross-site scripting      | 0         | 0     |
| HTML SQL injection             | 0         | 0     |
| Field format                   | 0         | 0     |
| Field consistency              | 0         | 0     |
| Credit card                    | 0         | 0     |
| Safe object                    | 0         | 0     |
| Signature Violations           | 0         | 0     |
| Content Type                   | 0         | 0     |
| JSON Denial of Service         | 0         | 0     |
| JSON SQL injection             | 0         | 0     |
| JSON Cross-Site Scripting      | 0         | 0     |
| File Upload Types              | 0         | 0     |
| Infer Content Type XML Payload | 0         | 0     |

HTML/XML/JSON Violation

| Statistics                    | Rate (/s) | Total |
|-------------------------------|-----------|-------|
| HTML CMD Injection            | 0         | 0     |
| XML Format                    | 0         | 0     |
| XML Denial of Service (XDoS)  | 0         | 0     |
| XML Message Validation        | 0         | 0     |
| Web Services Interoperability | 0         | 0     |
| XML SQL Injection             | 0         | 0     |
| XML Cross-Site Scripting      | 0         | 0     |
| XML Attachment                | 0         | 0     |
| SOAP Fault Violations         | 0         | 0     |
| XML Generic Violations        | 0         | 0     |
| Total Violations              | 0         | 0     |

| HTML/XML/JSON Log Statistics             | Rate (/s) | Total |
|------------------------------------------|-----------|-------|
| Start URL logs                           | 0         | 0     |
| Deny URL logs                            | 0         | 0     |
| Referer header logs                      | 0         | 0     |
| Buffer overflow logs                     | 0         | 0     |
| Cookie consistency logs                  | 0         | 0     |
| Cookie hijacking logs                    | 0         | 0     |
| CSRF from tag logs                       | 0         | 0     |
| HTML cross-site scripting logs           | 0         | 0     |
| HTML cross-site scripting transform logs | 0         | 0     |
| HTML SQL Injection logs                  | 0         | 0     |
| HTML SQL transform logs                  | 0         | 0     |
| Field format logs                        | 0         | 0     |
| Field consistency logs                   | 0         | 0     |
| Credit cards                             | 0         | 0     |

| HTML/XML/JSON Log Statistics     | Rate (/s) | Total |
|----------------------------------|-----------|-------|
| Credit card transform logs       | 0         | 0     |
| Safe object logs                 | 0         | 0     |
| Signature logs                   | 0         | 0     |
| Content Type logs                | 0         | 0     |
| JSON Denial of Service logs      | 0         | 0     |
| JSON SQL injection logs          | 0         | 0     |
| JSON Cross-Site Scripting logs   | 0         | 0     |
| File upload types logs           | 0         | 0     |
| Infer Content Type XML Payload L | 0         | 0     |
| JSON CMD Injection               | 0         | 0     |
| HTML Command Injection logs      | 0         | 0     |
| XML Format logs                  | 0         | 0     |
| XML Denial of Service(XDoS) logs | 0         | 0     |
| XML Message Validation logs      | 0         | 0     |
| WSI logs                         | 0         | 0     |
| XML SQL Injection logs           | 0         | 0     |
| XML cross-site scripting logs    | 0         | 0     |
| XML Attachment logs              | 0         | 0     |
| SOAP Fault logs                  | 0         | 0     |
| XML Generic logs                 | 0         | 0     |
| Total log messages               | 0         | 0     |

---

| Server Error Response         |           |       |
|-------------------------------|-----------|-------|
| Statistics                    | Rate (/s) | Total |
| HTTP Client Errors (4xx Resp) | 0         | 0     |
| HTTP Server Errors (5xx Resp) | 0         | 0     |

---



| HTML/XML/JSON Log Statistics | Rate (/s) | Total |
|------------------------------|-----------|-------|
| JSON Command Injection logs  | 0         | 0     |
| XML format logs              | 0         | 0     |

### Viewing JSON command injection statistics by using the NetScaler GUI

Complete the following steps to view the command injection statistics:

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select a Web App Firewall profile and click **Statistics**.
3. The **NetScaler Web App Firewall Statistics** page displays the JSON command injection traffic and violation details.
4. You can select **Tabular View** or switch to **Graphical View** to display the data in a tabular or graphical format.

#### JSON command injection traffic statistics

HTML/XML/JSON Log Statistics

|                                     | Rate (/s) | Total |
|-------------------------------------|-----------|-------|
| Start URL logs                      | 0         | 0     |
| Deny URL logs                       | 0         | 0     |
| Field consistency logs              | 0         | 0     |
| Credit cards                        | 0         | 0     |
| Credit card transform logs          | 0         | 0     |
| Safe object logs                    | 0         | 0     |
| Signature logs                      | 0         | 0     |
| Content Type logs                   | 0         | 0     |
| JSON Denial of Service logs         | 0         | 0     |
| JSON SQL injection logs             | 0         | 0     |
| JSON Cross-Site Scripting logs      | 0         | 0     |
| JSON CMD injection logs             | 0         | 0     |
| File upload types logs              | 0         | 0     |
| Infer Content Type XML Payload Logs | 0         | 0     |

**JSON CMD injection logs:** X  
 Number of JSON Command Injection security check log messages generated by the Application Firewall.

#### JSON command injection violation statistics

Application Firewall (per Profile) Graphical View Summary Default Group Refresh

Application Firewall (per Profile) Statistics [ json\_profile ]

**Appfw profile Traffic Statistics**

|                                  | Rate (/s) | Total |
|----------------------------------|-----------|-------|
| Requests                         | 0         | 0     |
| Request Bytes                    | 0         | 0     |
| Responses                        | 0         | 0     |
| Response Bytes                   | 0         | 0     |
| Aborts                           | 0         | 0     |
| Redirects                        | 0         | 0     |
| Long Term Ave Response Time (ms) | -         | 0     |
| Recent Ave Response Time (ms)    | -         | 0     |

NO DATA TO CHART

**HTML/XML/JSON Violation Statistics**

|                                | Rate (/s) | Total |    |
|--------------------------------|-----------|-------|----|
| Field consistency              | 0         | 0     | 0% |
| Credit card                    | 0         | 0     | 0% |
| Safe object                    | 0         | 0     | 0% |
| Signature logs                 | 0         | 0     | 0% |
| Content Type                   | 0         | 0     | 0% |
| JSON Denial of Service         | 0         | 0     | 0% |
| JSON SQL injection             | 0         | 0     | 0% |
| JSON Cross-Site Scripting      | 0         | 0     | 0% |
| <b>JSON CMD injection</b>      | 0         | 0     | 0% |
| File Upload Types              | 0         | 0     | 0% |
| Infer Content Type XML Payload | 0         | 0     | 0% |
| HTML CMD Injection             | 0         | 0     | 0% |
| XML Format                     | 0         | 0     | 0% |

### Configure fine grain relaxation for JSON command injection

The Web App Firewall gives you an option to relax a specific JSON key or value from the JSON based command injection check. You can completely bypass the inspection for one or more fields by configuring the fine grain relaxation rules.

Previously, the only way to configure relaxations for JSON protection checks is to specify the entire URL and that would bypass the verification of the entire URL.

The JSON based command injection security protection provides relaxation for the following:

- Key names
- Key values

JSON based command injection protection enables you to configure relaxations that allow specific patterns and block the rest. For example, the Web App Firewall currently has a default set of more than 100 SQL keywords. Because hackers can use these keywords in command injection attacks, the Web App Firewall flags all as potential threats. If you want to relax one or more keywords that are considered safe for the specific location, you can configure a relaxation rule that can bypass the security check and block the rest. The commands used in relaxations have optional parameters for Value Type and Value Expression. You can specify whether the value expression is a regular expression or a literal string. The value type can be left blank, or you have an option to select Keyword or Special String.

**Note:**

Regular expressions are powerful. Especially if you are not thoroughly familiar with PCRE-format regular expressions, double-check any regular expressions you write. Make sure that they define exactly the URL that you want to add as an exception, and nothing else. Careless use of wildcards, and especially of the dot-asterisk (.) metacharacter or wildcard combination, can have results that you do not want, such as blocking access to web content that you did not intend to block or allowing an attack that the JSON SQL Injection check would otherwise have blocked.

**Points to Consider**

- Value expression is an optional argument. A field name might not have any value expression.
- A key name can be bound to multiple value expressions.
- Value expressions must be assigned a value type. The value type can be: 1) Keyword, 2) Special-String.
- You can have multiple relaxation rules per key name/URL combination.

**Configure JSON fine grain relaxation for command injection attacks using command interface**

To configure JSON file grain relaxation rule, you must bind the fine grain relaxation entities to the Web App Firewall profile.

At the command prompt, type:

```
1 bind appfw profile <profile name> -jsoncmdURL <URL> -key <key name> -
valueType <keyword/SpecialString> <value Expression>
```

**Example:**

```
bind appfw profile appprofile1 -jsoncmdurl www.example.com -key
blg_cnt -isRegex NOTREGEX -valueType Keyword "cat" -isvalueRegex
NOTREGEX
```

To configure fine grain relaxation rule for JSON-based command injection attacks by using the GUI

1. Navigate to **Application Firewall > Profiles**, select a profile, and click **Edit**.
2. In the **Advanced Settings** pane, click **Relaxation Rules**.
3. In the **Relaxation Rules** section, select a **JSON Command Injection** record and click **Edit**.
4. In the **JSON Command Injection Relaxation Rule** slider, click **Add**.
5. In the **JSON Command Injection Relaxation Rule** page, set the following parameters.
  - a) Enabled
  - b) Is Name Regex
  - c) Key Name
  - d) URL
  - e) Value Type
  - f) Comments
  - g) Resource ID
6. Click **Create**.

### JSON Command Injection Relaxation Rule

Enabled

Is Name Regex

Key Name

RegEx Editor

URL\*

RegEx Editor

Value Type

Is Value Expression Regex

Value Expression

RegEx Editor

Comments

Resource Id

## Managing content types

June 19, 2023

Web servers add a Content-Type header with a MIME/type definition for each content type. Web servers serve many different types of content. For example, standard HTML is assigned the “text/html” MIME type. JPG images are assigned the “image/jpeg” or “image/jpg” content type. A normal web server can serve different types of content, all defined in the Content Type header by the assigned MIME/type.

Many Web App Firewall filtering rules are designed to filter a specific content type. The filtering rules apply to one type of content such as HTML and are often inappropriate when filtering a different type of content (such as images). As a result, the Web App Firewall attempts to determine the content type of requests and responses before it filters them. If a web server or browser does not add a Content-Type header to a request or response, the Web App Firewall applies a default content type and filters content accordingly.

The default content type is usually “application/octet-stream” with the most generic MIME/type definition. The MIME/type is appropriate for any content type a web server is likely to serve. But does not provide much information to the Web App Firewall to allow it to choose appropriate filtering. If a protected web server is configured to add accurate content type headers, you can then create a profile for the web server and assign a default content type to it. This is done to improve both the speed and the accuracy of filtering.

You can also configure a list of allowed request content types for a specific profile. When this feature is configured, if the Web App Firewall filters a request that does not match one of the allowed content types, it blocks the request.

Requests must always be of either the “application/x-www-form-urlencoded”, “multipart/form-data,” or “text/x-gwt-rpc” types. The Web App Firewall blocks any request that has any other content type designated.

### Note

You cannot include the “application/x-www-form-urlencoded” or “multipart/form-data” content types on the allowed response content types list.

### To set the default request content type by using the command line interface

At the command prompt, type the following commands:

- `set appfw profile <name> -requestContentType <type>`
- `save ns config`

### Example

The following example sets the “text/html” content type as the default for the specified profile:

```
1 set appfw profile profile1 -requestContentType "text/html"
2 save ns config
```

### To remove the user-defined default request content type by using the command line interface

At the command prompt, type the following commands:

- `unset appfw profile <name> -requestContentType <type>`
- `save ns config`

### Example

The following example unsets the default content type of “text/html” for the specified profile, allowing the type to revert to “application/octet-stream”:

```
1 unset appfw profile profile1 -requestContentType "text/html"
2 save ns config
```

#### Note

Always use last content-type header for processing and remove remaining content-type headers if any that ensures that the back-end server receives a request with only one content-type.

To block requests that can be bypassed, add a Web App Firewall policy with rule as HTTP.REQ.HEADER (“content-type”).COUNT.GT(1) and profile as *appfw\_block*.

If a request is received without a Content-Type header or if the request has Content-Type header without any value, Web App Firewall applies the configured **RequestContentType** value and processes the request accordingly.

### To set the default response content type by using the command line interface

At the command prompt, type the following commands:

- `set appfw profile <name> -responseContentType <type>`
- `save ns config`

**Example**

The following example sets the “text/html” content type as the default for the specified profile:

```
1 set appfw profile profile1 -responseContentType "text/html"
2 save ns config
```

**To remove the user-defined default response content type by using the command line interface**

At the command prompt, type the following commands:

- `unset appfw profile <name> -responseContentType <type>`
- `save ns config`

**Example**

The following example unsets the default content type of “text/html” for the specified profile, allowing the type to revert to “application/octet-stream”:

```
1 unset appfw profile profile1 -responseContentType "text/html"
2 save ns config
```

**To add a content type to the allowed content types list by using the command line interface**

At the command prompt, type the following commands:

- `bind appfw profile <name> -ContentType <contentTypeName>`
- `save ns config`

**Example**

The following example adds the “text/shtml” content type to the allowed content types list for the specified profile:

```
1 bind appfw profile profile1 -contentType "text/shtml"
2 save ns config
```

## To remove a content type from the allowed content types list by using the command line interface

At the command prompt, type the following commands:

- `unbind appfw profile <name> -ContentType <contentTypeName>`
- `save ns config`

### Example

The following example removes the “text/shtml” content type from the allowed content types list for the specified profile:

```
1 unbind appfw profile profile1 -contentType "text/shtml"
2 save ns config
```

## Manage urlencoded and multipart-form content types

The NetScaler Web App Firewall now enables you to configure Urlencoded and Multipart-Form content types for forms. The content type configuration is similar to XML and JSON list. Based on the configuration, Web App Firewall classifies the requests and inspects for urlencoded or multipart-form content type.

To configure Web App Firewall profile with Urlencoded and Multipart-Form content types  
At the command prompt, type:

```
bind appfw profile p2 -contentType <string>
```

### Example:

```
bind appfw profile p2 -contentType UrlencodedFormContentType
bind appfw profile p2 -ContentType appfwmultipartform
```

## To manage the default and allowed content types by using the GUI

1. Navigate to **Security > Web App Firewall > Profiles**.
2. In the details pane, select the profile that you want to configure, and then click **Edit**. The **Configure Web App Firewall Profile** dialog box is displayed.
3. The **Configure Web App Firewall Profile** dialog box, click the **Settings** tab.
4. On the **Settings** tab, scroll down about halfway to the Content Type area.
5. In the Content Type area, configure the default request or response content type:



- To configure the default request content type, type the MIME/type definition of the content type you want to use in the Default Request text box.
  - To configure the default response content type, type the MIME/type definition of the content type you want to use in the Default Response text box.
  - To create a new allowed content type, click **Add**. The **Add Allowed Content Type** dialog box is displayed.
  - To edit an existing allowed content type, select that content type, and then click **Open**. The **Modify Allowed Content Type** dialog box is displayed.
6. To manage the allowed content types, click Manage Allowed Content Types.
  7. To add a new content type or modify an existing content type, click Add or Open, and in the **Add Allowed Content Type** or **Modify Allowed Content Type** dialog box, do the following steps.
    - a) Select/clear the Enabled check box to include the content type in, or exclude it from, the list of allowed content types.
    - b) In the Content Type text box, type a regular expression that describes the content type that you want to add, or change the existing content type regular expression.

Content types are formatted exactly as MIME type descriptions are.

**Note:**  
You can include any valid MIME type on the allowed contents type list. Since many types of document can contain active content and therefore can potentially contain malicious content, you must exercise caution when adding MIME types to this list.
    - c) Provide a short description that explains the reason for adding this particular MIME type to the allowed contents type list.
    - d) Click **Create** or **OK** to save your changes.
  8. Click **Close** to close the Manage Allowed Content Types dialog box and return to the **Settings** tab.
  9. Click **OK** to save your changes.

### To manage Urlencoded and Multipart-form content types by using the NetScaler GUI

1. Navigate to **Security > Web App Firewall > Profiles**.
2. In the details pane, select the profile that you want to configure, and then click **Edit**.
3. In the **Configure Web App Firewall Profile** page, select the **Profile Settings** in the **Advanced Settings** section.
4. Under **Inspected Content Type** section, set the following parameters:
  - a) application/x-www-form-urlencoded. Select the checkbox to inspect Urlencoded content type.

- b) multipart/form-data. Select the check to inspect Multipart-form content type.
5. Click **OK**.

## Profiles

April 17, 2024

A profile is a collection of security settings that are used to protect specific types of web content or specific parts of your website. In a profile, you determine how the Web App Firewall applies each of its filters (or checks) to requests to your websites, and responses from them. The Web App Firewall supports two types of profile: four built-in (default) profiles that do not require further configuration, and user-defined profiles that do require further configuration.

### Built-in profiles

The four Web App Firewall built-in profiles provide simple protection for applications and websites that either do not require protection, or that must not be directly accessed by users at all. These profile types are:

- **APPFW\_BYPASS:** Skips all Web App Firewall filtering and sends the unmodified traffic to the protected application or website, or to the client.
- **APPFW\_RESET:** Resets the connection, requiring that the client re-establish his or her session by visiting a designated start page.
- **APPFW\_DROP:** Drops all traffic to or from the protected application or website, and sends no response of any kind to the client.
- **APPFW\_BLOCK:** Blocks traffic to or from the protected application or website.
- **ns-aaa-default-appfw-profile:** Protects the authentication virtual servers and ensures that network traffic is secure and compliant with the API specifications.
- **ns-aaatm-default-appfw-profile:** Protects the traffic management virtual servers and ensures that network traffic is secure and compliant with the API specifications.
- **ns-vpn-default-appfw-profile:** Protects the VPN virtual servers and ensures that network traffic is secure and compliant with the API specifications.

You use the built-in profiles exactly as you do user-defined profiles, by configuring a policy that selects the traffic to which you want to apply the profile and then associating the profile with your policy. Since you do not have to configure a built-in policy, it provides a quick way to allow or block specified types of traffic or traffic that is sent to specific applications or websites.

## User-defined profiles

User-defined profiles are profiles that are build and configured by users. Unlike the default profiles, you must configure a user-defined profile before it will be of use filtering traffic to and from your protected applications.

There are three types of user-defined profile:

- **HTML.** Protects HTML-based web pages.
- **XML.** Protects XML-based web services and websites.
- **Web 2.0.** Protects Web 2.0 content that combines HTML and XML content, such as ATOM feeds, blogs, and RSS feeds.

The Web App Firewall has a number of security checks, all of which can be enabled or disabled, and configured in a number of ways in each profile. Each profile also has a number of settings that control how it handles different types of content. Finally, rather than manually configuring all of the security checks, you can enable and configure the learning feature. This feature observes normal traffic to your protected websites for a period of time, and uses those observations to provide you with a tailored list of recommended exceptions (*relaxations*) to some security checks, and additional rules for other security checks.

During initial configuration, whether by using the Web App Firewall Wizard or manually, you normally create one general purpose profile to protect all content on your websites that is not covered by a more specific profile. After that, you can create as many specific profiles as you want to protect more specialized content.

The Profiles pane consists of a table that contains the following elements:

**Name.** Displays all the Web App Firewall profiles configured in the appliance.

**Bound signature.** Displays the signatures object that is bound to the profile in the previous column, if any.

**Policies.** Displays the Web App Firewall policy that invokes the profile in the leftmost column of that row, if any.

**Comments.** Displays the comment associated with the profile in the leftmost column of that row, if any.

**Profile Type.** Displays the type of profile. Types are Built-In, HTML, XML, and Web 2.0.

Above the table is a row of buttons and a drop-down list that allow you to create, configure, delete, and view information about your profiles:

- **Add.** Add a new profile to the list.
- **Edit.** Edit the selected profile.
- **Delete.** Delete the selected profile from the list.

- **Statistics.** View the statistics for the selected profile.
- **Action.** Drop-down list that contains additional commands. Currently allows you to import a profile that was exported from another Web App Firewall configuration.

## Creating Web App Firewall profiles

February 9, 2024

You can create a Web App Firewall profile in one of two ways: by using the command line, and by using the GUI. Creating a profile by using the command line requires that you specify options on the command line. The process is similar to that of [configuring a profile](#), and with a few exceptions the two commands take the same parameters.

### Note

**Core profile:** This profile is available in the build 33.x and later. It contains limited but fundamental security checks enabled by default whereas the basic and advanced profiles have many other security checks enabled by default. The core profile contains the following security checks:

- Grammar-based SQL injection
- Grammar-based CMD injection
- Cross-site scripting
- Buffer overflow
- Block keywords

**CVE profile:** This profile is available in the build 42.x and later. Use this profile to only add and bind a signature. It disables all checks from the NetScaler Web App Firewall except the CVE check.

When creating a profile, specify one of these options: basic, advanced, core, or CVE. The default configuration for the various security checks and settings that are part of that profile are applied. You can also, optionally, add a comment. After you create the profile, you must then configure it by selecting it in the data pane, and then clicking **Edit**.

If you plan to use the learning feature or to enable and configure many advanced protections, you must choose advanced defaults. In particular, if you plan to configure either of the SQL injection checks, either of the cross-site scripting checks, any check that provides protection against Web form attacks, or the cookie consistency check, you must plan to use the learning feature. Unless you include the proper exceptions for your protected websites when configuring these checks, they can block legitimate traffic. Anticipating all exceptions without creating any that is too broad is difficult. The learning feature makes this task much easier. Otherwise, basic defaults are quick and must provide the protection that your web applications need.

There are three profile types:

- **HTML.** Protects standard HTML-based websites.
- **XML.** Protects XML-based web services and websites.
- **Web 2.0 (HTML XML).** Protects websites that contain both HTML and XML elements, such as ATOM feeds, blogs, and RSS feeds.

There are also a few restrictions on the name that you can give to a profile. A profile name cannot be the same as the name assigned to any other profile or action in any feature on the NetScaler appliance. Certain action or profile names are assigned to built-in actions or profiles, and can never be used for user profiles. A complete list of disallowed names can be found in the [Web App Firewall Profile Supplemental Information](#). If you attempt to create a profile with a name that has already been used for an action or a profile, an error message is displayed and the profile is not created.

### To create a Web App Firewall profile by using the command line interface

At the command prompt, type the following commands:

- `add appfw profile <name> [-defaults ( basic | advanced | core | cve)]`
- `set appfw profile <name> -type ( HTML | XML | HTML XML )`
- `set appfw profile <name> -comment "<comment>"`
- `save ns config`

#### Example

The following example adds a profile named `pr-basic`, with basic defaults, and assigns a profile type of HTML. This is the appropriate initial configuration for a profile to protect an HTML website.

```
1 add appfw profile pr-basic -defaults basic -comment "Simple profile for
 websites."
2 set appfw profile pr-basic -type HTML
3 save ns config
```

### To create a Web App Firewall profile by using the GUI

Complete the following procedure to create a Web App Firewall profile:

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, click **Add**.
3. In the **Create Web App Firewall Profile** page, set the following basic parameters:

- a) Name
  - b) Profile Type
  - c) Comments
  - d) Defaults
  - e) Description
4. Click **OK**.
  5. Select the profile that you created and click **Edit**.
  6. In the **Advanced Settings** section, complete the following configurations:
    - a) Security Checks
    - b) Profile Settings
    - c) Dynamic Profiling
    - d) Relaxation Rules
    - e) Deny Rules
    - f) Learned Rule
    - g) Extended Logging
  7. In the **Security Checks** section, select a security protection and click **Action Settings**.
  8. In the security check page, set the parameters.

**Note:**

The **Active Rule** setting is available only for **HTML SQL Injection** check to activate relaxation rule or deny rule for SQL injection check. For more information, see [Relaxation and Deny Rules](#) topic.

9. Click **OK** and **Close**.
10. In the **Profile Settings** section, set the profile parameters. For more information, see [Configure Web App Firewall Profile settings](#) topic.
11. In the **Dynamic Profiling** section, select a security check to add dynamic profile settings. For more information, see [Dynamic Profile](#) topic.
12. In the **Relaxation Rules** section, click **Edit** to add a relaxation rule for a security check. For more information, see [Relaxation Rule](#) for details.
13. In the **Deny Rules** section, add a deny rule for the HTML SQL Injection check. For more information, see [HTML Deny Rules](#) topic.
14. In the **Learnt Rule** section, set the learning settings. For more information, see [Web App Firewall Learning](#) topic.
15. In the **Extended logging** section, click **Add** for masking sensitive data. For more information, see [Extended logging](#) topic.

16. Click **Done**, and then click **Close**.

## Configure fake account detection rules

Fake account creation is an automated process of creating many user accounts that are not associated to a real person or creating user accounts with the real person's details without their consent. Fake accounts that non-legitimate users create use registration details that do not correspond to a person's true identify. These accounts are created to abuse services offered by a web application for non-legitimate purposes such as phishing attacks, spreading of fake news, scalping and so forth. Most often, these accounts are created by bots run by malicious users.

The NetScaler appliance is enhanced to detect fake accounts by binding fake account detection rules to a Web App Firewall profile. The rule consists of form URLs and form parameters for each URL. If an incoming request matches an expression or form URL (sign up pages) configured for a fake account detection rule, the evaluation is true for a suspicious sign-up attempt and the request data is sent to the ADM server for further inspection.

Complete the following steps to configure fake account detection by using the command interface:

1. Enable fake account detection feature
2. Bind fake account rules

### Enable fake account detection feature

At the command prompt, type:

```
add/set appfw profile <name> -FakeAccountDetection (ON | OFF)
```

#### Example:

```
add appfw profile profile1 -FakeAccountDetection ON
```

### Bind fake account rules

At the command prompt, type:

```
bind appfw profile <name> -FakeAccount (string|expression)isFieldNameRegex
(ON|OFF)-tag <TagExpression> ([-formUrl <FormURL>] | [-formExpression
<FormExpression>])]-state (ENABLED|DISABLED)
```

Where,

- `formUrl`: HTTP form action URL.
- `formExpression`: Form expression to be evaluated.

- **fakeaccount**: Name of the fake account.  
tag: Tag expression.
- **isFieldNameRegex**: Specifies whether the fieldName is regex. Default value OFF.

**Example:**

```
bind appfw profile profile1 -FakeAccount john -formURL "/signup.php"-tag "smith"
```

```
bind appfw profile profile2 -FakeAccount Will -formExpression "HTTP.REQ.HEADER(\"Authorization\").CONTAINS(\"/test_accounts\").NOT && HTTP.REQ.URL.CONTAINS(\"/login.php\")"-fieldName -tag "smith"
```

Example input for an HTTP post request for `example.com` signup page.

| S.no | Input                                      | Example                                                                                                                   |
|------|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| 1    | Signup HTTP POST request endpoint URL      | <a href="https://webapi.example.com/account/api/v1.0/contacts/">https://webapi.example.com/account/api/v1.0/contacts/</a> |
| 2    | Email Field name in HTTP post request      | Email address                                                                                                             |
| 3    | First name Field name in HTTP post request | First name                                                                                                                |
| 4    | Last name Field name in HTTP post request  | Last name                                                                                                                 |

**Configure Web App Firewall fake account detection rule by using the GUI**


Complete the following steps to configure the fake account detection rule by using the GUI.

1. Navigate to **Configuration > Security > NetScaler Web App Firewall > Profile**.
2. Select a profile and click **Edit**.
3. In the **NetScaler Web App Firewall Profile** page, click **Security Checks** from **Advanced Settings**.
4. In the **Checks Integrated with Citrix Cloud** section, select a fake account rule and click **Edit**.
5. In the **AppFirewall Fake Account Binding** slider, select a rule to edit or click **Add**.
6. In the **Fake Account rule** page, set the following parameters:
  - a) **Enabled**. Select to activate the fake account rule.
  - b) **Fake Account Name**. Name of the fake account rule.



- c) **Tag.** First name in the fake account registration form.
- d) **Is Field Name Regex?** Select if the form field is a regular expression.
- e) **Form Expression.** Regular expression that defines the fake account.
- f) **Form URL.** Enter the fake account detection URL.
- g) **Comments.** A brief description about the fake account detection rule.

7. Click **Create**.

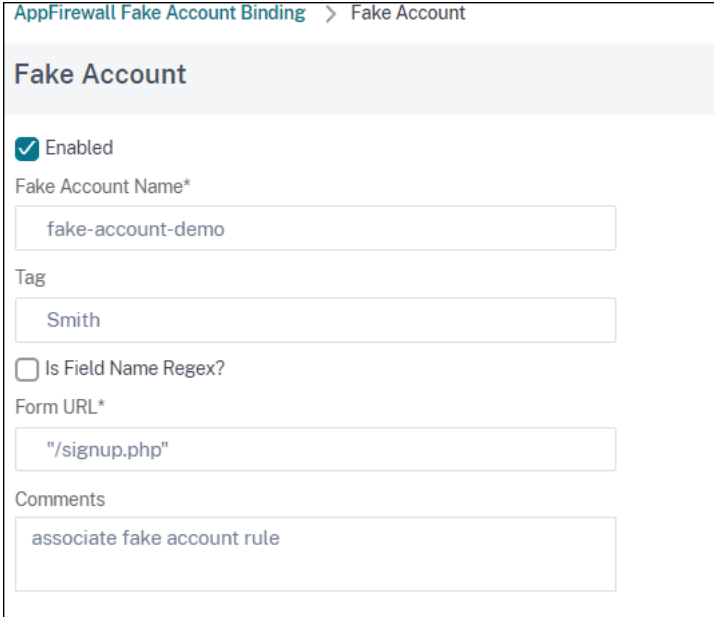

The screenshot shows the configuration page for a Fake Account Binding in NetScaler. The breadcrumb path is "AppFirewall Fake Account Binding > Fake Account". The page title is "Fake Account". The configuration is as follows:

- Enabled
- Fake Account Name\*: fake-account-demo
- Tag: Smith
- Is Field Name Regex?
- Form URL\*: "/signup.php"
- Comments: associate fake account rule

## Enforce HTTP RFC compliance

May 2, 2023

NetScaler Web App Firewall inspects the incoming traffic for HTTP RFC compliance and drops any request that has RFC violations by default. However, there are certain scenarios, where the appliance might have to bypass or block a non-RFC compliance request. In such cases, you can configure the appliance to bypass or block such requests at global or profile level.

### Block or bypass non-RFC compliant requests at global level

The HTTP module identifies a request as invalid if it is incomplete and such requests cannot be processed by WAF. For example, an incoming HTTP request having a host header missing. To block or bypass such invalid requests, you must configure the `malformedReqAction` option in the application firewall global settings.

The 'malformedReqAction' parameter validates the incoming request for invalid content length, invalid chunked request, no HTTP version, and incomplete header.

**Note:**

If you disable the block option in the `malformedReqAction` parameter, the appliance bypasses the entire app firewall processing for all non-RFC compliance requests and forwards the requests to the next module.

**To block or bypass invalid non-RFC complaint HTTP requests by using the command line interface**

To block or bypass invalid requests, enter the following command:

```
set appfw settings -malformedreqaction <action>
```

**Example:**

```
set appfw settings -malformedReqAction block
```

**To display malformed request action settings**

To display malformed request action settings, enter the following command:

```
show appfw settings
```

**Output:**

```
1 DefaultProfile: APPFW_BYPASS UndefAction: APPFW_BLOCK SessionTimeout:
 900 LearnRateLimit: 400 SessionLifetime: 0
 SessionCookieName: citrix_ns_id ImportSizeLimit: 134217728
 SignatureAutoUpdate: OFF SignatureUrl:"https://s3.amazonaws.com/
 NSAppFwSignatures/SignaturesMapping.xml" CookiePostEncryptPrefix:
 ENC GeoLocationLogging: OFF CEFLogging: OFF EntityDecoding:
 OFF UseConfigurableSecretKey: OFF SessionLimit: 100000
 MalformedReqAction: block log stats
2 Done
```

**To block or bypass invalid non-RFC complaint HTTP requests by using the NetScaler GUI**

1. Navigate to **Security > NetScaler Web App Firewall**.
2. In the **NetScaler Web App Firewall** page, click **Change Engine Settings** under **Settings**.
3. In the **Configure NetScaler Web App Firewall Settings** page, select the **Log Malformed Request** option as Block, Log, or Stats.
4. Click **OK** and **Close**.

**Note:**

If you unselect the block action or do not select any malformed request action, the appliance bypasses the request without intimating the user.

**Block or bypass non-RFC compliant requests at profile level**

Other non-RFC compliant requests can be configured to block or bypass at profile level. You must configure the RFC profile either in Block or Bypass mode. By doing this configuration, any invalid traffic that matches the Web App Firewall profile is either bypassed or blocked accordingly. The RFC profile validates the following security checks:

- Invalid GWT-RPC requests
- Invalid content type headers
- Invalid Multipart requests
- Invalid JSON requests
- Duplicate cookie name value pair checks

**Note:**

When you set the RFC profile in “Bypass” mode, you must make sure you disable the transformation option in the **HTML Cross-Site Scripting Settings** and in the **HTML SQL Injection Settings** sections. If you enable and set the RFC profile in Bypass mode, the appliance displays a warning message, “Transform cross-site scripts” and “Transform SQL special characters” are both currently ON. Recommend turning it off when used with APPFW\_RFC\_BYPASS.

**Important:**

Also, the appliance displays a warning note, “Appfw Security checks enabled might not be applicable to requests which violates RFC checks when this profile is set. Enabling any transformation setting is not recommended as requests might be partially transformed that contains RFC violations.”

**To configure an RFC profile in the Web App Firewall profile by using the command line interface**

At the command prompt, type the following commands:

```
set appfw profile <profile_name> -rfcprofile <rfcprofile_name>
```

**Example**

```
set appfw profile P1 -rfcprofile APPFW_RFC_BLOCK
```

**Note:**

By default, the [RFC](#) profile is bound to the Web App Firewall profile in Block mode.

**To configure an RFC profile in the Web App Firewall profile by using the GUI**

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the **Profiles** page, select a profile and click **Edit**.
3. In the **Web App Firewall Profile** page, click **Profile settings** from the **Advanced Settings** section.
4. In the **HTML Settings** section, set the [RFC](#) profile in `APPFW_RFC_BYPASS` mode.  
The system displays a warning message, “Appfw Security checks enabled might not be applicable to requests which violates RFC checks when this profile is set. Enabling any transformation setting is not recommended as requests might be partially transformed that contains RFC violations”.

**Configuring Web App Firewall profiles**

February 9, 2024

To configure a user-defined Web App Firewall profile, first configure the security checks, which are called *deep protections* or *advanced protections* in the Web App Firewall wizard. Certain checks require configuration if you are to use them at all. Others have default configurations that are safe but limited in scope; your websites might need or benefit from a different configuration that takes advantage of more features of certain security checks.

After you have configured the security checks, you can also configure some other settings that control the behavior, not of a single security check, but the Web App Firewall feature. The default configuration is sufficient to protect most websites, but you must review them to make sure that they are right for your protected websites.

**Note:**

The profile name length and all import object name length can be set up to 127 characters.

For more information about the Web App Firewall security checks, see [Advanced Protections](#).

**To configure a Web App Firewall profile by using the command line**

At the command prompt, type the following commands:

- `set appfw profile <name> <arg1> [<arg2> ...]`

where:

- `<arg1>` = a parameter and any associated options.
- `<arg2>` = a second parameter and any associated options.
- ... = additional parameters and options.

For descriptions of the parameters to use when configuring specific security checks, see [Advanced Protections](#).

- `save ns config`

### Example

The following example shows how to enable blocking for the HTML SQL Injection and HTML Cross-Site Scripting checks in a profile named `pr-basic`. This command enables blocking for those actions while making no other changes to the profile.

```
1 set appfw profile pr-basic -crossSiteScriptingAction block -
 SQLInjectionAction block
```

### Bind relaxation rule to a Web App Firewall profile

When a Web App Firewall detects a violation, the user has the ability to bypass the action applied through relaxation rules. Relaxation rule is an exception applied to the detected security violation. For example, the Start URL relaxation rules protect against forceful browsing. Known web server vulnerabilities that are exploited by hackers can be detected and blocked by enabling a set of default Deny URL rules. Commonly launched attacks, such as Buffer Overflow, SQL, or Cross-site scripting can also be easily detected.

### To bind security exemption or relaxation rules by using the CLI

At the command prompt, type:

```
1 bind appfw profile <name> ((-startURL <expression> [-resourceId <
 string>]) | -denyURL <expression> | (-fieldConsistency <string> <
 formActionURL> [-isRegex (REGEX | NOTREGEX)]) | (-
 cookieConsistency <string> [-isRegex (REGEX | NOTREGEX)]) | (-
 SQLInjection <string> <formActionURL> [-isRegex (REGEX | NOTREGEX)
] [-location <location>] [-valueType <valueType> <valueExpression
 >....
```

### To bind security exemption or relaxation rules by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select a profile and click **Edit**.
3. In the **NetScaler Web App Firewall Profile** page, click **Relaxation Rules** from the **Advanced Setting** section.
4. In the **Relaxation Rules** section, click **StartURL** and click **Edit**.
5. In the **Start URL Relaxation Rules** page, click **Add**.
6. In the **Start URL Relaxation Rule** page, set the following parameters:
  - a) Enabled. Select the check box to enable the relaxation rule
  - b) Start URL. Enter the regular expression value
  - c) Comments. Provide a short description about the relaxation rule.
7. Click **Create** and **Close**.

### To configure a Web App Firewall profile by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select the profile that you want to configure, and then click **Edit**.
3. In the **Configure Web App Firewall Profile** dialog box, on the **Security Checks** tab, configure the security checks.
  - To enable or disable an action for a check, in the list, select or clear the check box for the action.
  - To configure the parameters for the security checks in the list, select the check box and click **Active Settings**.
  - To review log entries for the selected security check, select the check box and click **Logs**. You can use this information to determine the security checks that match attacks, so that you can block the traffic for the security checks. You can also use the information to determine the checks that match legitimate traffic, so that you can configure an appropriate exemption to allow those legitimate connections. For more information about the logs, see [Logs, Statistics, and Reports](#).
  - To completely disable a check, in the list, clear all of the check boxes to the right of that check.
4. On the **Settings** tab, configure the profile settings.

- To associate the profile with the set of signatures that you previously created and configured, under Common Settings, choose that set of signatures in the **Signatures** drop-down list.

**Note:**

You must use the scroll bar on the right of the dialog box to scroll down to display the Common Settings section.

- To configure an HTML or XML Error Object, select the object from the appropriate drop-down list.

**Note:**

You must first upload the error object that you want to use in the Imports pane. For more information about importing error objects, see [Imports](#).

- To configure the default XML Content Type, type the content type string directly into the Default Request and Default Response text boxes, or click Manage Allowed Content Types to manage the list of allowed content types. [»More...](#)
5. If you want to use the learning feature, click Learning, and configure the learning settings for the profile, as described in [Configuring and Using the Learning Feature](#).
  6. Click **OK** to save your changes and return to the **Profiles** pane.

## Confidential fields in WAF profile

**Note**

This feature is available in release 13.1 build 27.x and later.

You can now add confidential fields in a WAF profile. These fields are masked and not captured in the ADC logs when a violation occurs. Earlier you could add these fields using settings only. For more information about adding confidential fields using settings, see [Confidential fields](#).

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. Select a profile and click **Edit**.
3. In **Advanced Settings**, click **Confidential Fields**.
4. Click **Add**.
5. Enter values for the following parameters:
  - Form Field Name\*
  - Action URL\*
  - CommentsA \* indicates a mandatory field

6. Click **Create**.
7. Click **Done**.

## Web Application Firewall profile settings

June 7, 2024

Following are the profile settings that you must configure on the appliance.

At the command prompt, type:

```

1 add appfw profile <name> [-invalidPercentHandling <
 invalidPercentHandling>] [-checkRequestHeaders (ON | OFF)] [-
 URLDecodeRequestCookies (ON | OFF)] [-optimizePartialReqs (ON |
 OFF)] [-errorURL <expression>] [-logEveryPolicyHit (ON | OFF)]
 [-stripHtmlComments <stripHtmlComments>] [-stripXmlComments (none |
 all)] [-postBodyLimitSignature <positive_integer>][-
 fileUploadMaxNum <positive_integer>][-canonicalizeHTMLResponse (ON
 | OFF)][-percentDecodeRecursively (ON | OFF)] [-
 multipleHeaderAction <multipleHeaderAction> ...][-
 inspectContentTypes <inspectContentTypes> ...][-
 semicolonFieldSeparator (ON | OFF)] [-fieldScan (ON | OFF)] [-
 fieldScanLimit <positive_integer>] [-JSONFieldScan (ON | OFF)] [-
 JSONFieldScanLimit <positive_integer>] [-messageScan (ON | OFF)]
 [-messageScanLimit <positive_integer>] [-JSONMessageScan (ON | OFF
)] [-JSONMessageScanLimit
2 <positive_integer>] [-messageScanLimitContentTypes <
 messageScanLimitContentTypes>]

```

**invalidPercentHandling** - Configure the method for handling percent-encoded names and values.

asp\_mode - Strips and Parses Invalid Percent for Parsing.

Example:- `curl -v "http://<vip>/forms/login.html?field=sel%zzect ->`  
 Invalid percent encoded char(%zz) is stripped of and the rest of the content is inspected and action taken for the SQLInjection check.

secure\_mode - We detect the invalid percent coded value and ignore it.

Example:- `curl -v "http://<vip>/forms/login.html?field=sel%zzect ->`  
 Invalid percent encoded char(%zz) is detected, counters are incremented and content is passed as is to the server.

apache\_mode - This mode works similar to secure mode.

### Note:

Starting from release 13.1 build 45.x, the `apache_mode` function is deprecated.



Possible values: apache\_mode, asp\_mode, secure\_mode

Default value: secure\_mode

**Example:**

```
add appfw profile profile1 [-invalidPercentHandling secure_mode] [-
checkRequestHeaders ON] [-URLDecodeRequestCookies OFF] [-optimizePartialReqs
OFF]
```

**optimizePartialReqs** - When OFF/ON (without safe object), a NetScaler appliance sends the partial request to the back-end server. This partial response sent back to the client. OptimizePartialReqs makes sense when the Safe object is configured. The appliance sends requests for full response from the server when OFF, requests only partial response when ON.

ON - Partial requests by the client result in partial requests to the back-end server.

OFF - Partial requests by the client are changed to full requests to the back-end server.

Possible values: ON, OFF

Default value: ON

**URLDecodeRequestCookies**. When `checkRequestHeaders` is enabled, cookies are inspected for security checks (SQL, cross-site, cmd injection). If `URLDecodeRequestCookies` is enabled, the cookies are URL decoded and then inspected.

Possible values: ON, OFF

Default value: OFF

**Signature Post Body Limit (Bytes)**. Limits the request payload (in bytes) inspected for signatures with the location specified as 'HTTP\_POST\_BODY'.

Default value: 8096

Minimum value: 0

Maximum Value: 4294967295

**Post Body Limit (Bytes)**. Limits the request payload (in bytes) inspected by Web Application Firewall.

Default value: 20000000

Minimum value: 0

Maximum Value: 10 GB

For more information about the Security setting and its GUI procedure, see [Configure Web App Firewall Profile](#) topic.

**postBodyLimitAction**. PostBodyLimit honors error settings when you specify the maximum size of HTTP body to be allowed. To honor error settings you must configure one or more Post Body Limit actions. The configuration is also applicable for requests where the transfer encoding header is chunked.

```
set appfw profile <profile_name> -PostBodyLimitAction block log stats
```

Where,

**Block** - This action blocks connection that violates the security check and it is based on the maximum size of the configured HTTP body (post body limit). You must always enable the option.

**Log** - Log violations of this security check.

**Stats** - Generate statistics for this security check.

**Note:**

The log format for post body limit action is now changed to follow the standard audit logging format, for example:

```
ns.log.4.gz:Jun 25 1.1.1.1. <local0.info> 10.101.10.100 06/25/2020:10:10:28
GMT 0-PPE-0 : default APPFW APPFW_POSTBODYLIMIT 1506 0 : <Netscaler
IP> 4234-PPE0 - testprof ><URL> Request post body length(<Post
Body Length>)exceeds post body limit.
```

**inspectQueryContentTypes** Inspect request query and web forms for injected SQL and cross-site scripts for the following content types.

```
set appfw profile p1 -inspectQueryContentTypes HTML XML JSON OTHER
```

Possible values: HTML, XML, JSON, OTHER

By default, this parameter is set as “InspectQueryContentTypes: HTML JSON OTHER”for both basic and advanced appfw profiles.

**Example for inspect query content type as XML:**

```
1 > set appfw profile p1 -type XML
2 Warning: HTML, JSON checks except “InspectQueryContentTypes” & “
 Infer Content-Type XML Payload Action” will not be applicable when
 profile type is not HTML or JSON respectively.
```

**Example for inspect query content type as HTML:**

```
1 > set appfw profile p1 -type HTML
2 Warning: XML, JSON checks except “InspectQueryContentTypes” & “Infer
 Content-Type XML Payload Action” will not be applicable when
 profile type is not XML or JSON respectively
3 Done
```

**Example for inspect query content type as JSON:**

```
1 > set appfw profile p1 -type JSON
2 Warning: HTML, XML checks except “InspectQueryContentTypes” & “Infer
 Content-Type XML Payload Action will not be applicable when profile
 type is not HTML or XML respectively
```

3 Done

**errorURL expression.** The URL that the NetScaler Web App Firewall uses as an error URL. Maximum Length: 2047.

**Note:**

For blocking violations in a requested URL, if the error URL is similar to the signature URL the appliance resets the connection.

**logEveryPolicyHit** - Log every profile match, regardless of security checks results.

Possible values: ON, OFF.

Default value: OFF.

**stripXmlComments** - Strip XML comments before forwarding a webpage sent by a protected website in response to a user request.

Possible values: none, all, exclude\_script\_tag.

Default value: none

**postBodyLimitSignature** - Maximum allowed HTTP post body size for signature inspection for location HTTP\_POST\_BODY in the signatures, in bytes.

The changes in value can impact CPU and latency profile.

Default value: 2048.

Minimum value: 0

Maximum Value: 4294967295

**fileUploadMaxNum** - Maximum allowed number of file uploads per form-submission request. The maximum setting (65535) allows an unlimited number of uploads.

Default value: 65535

Minimum value: 0

Maximum value: 65535

**fieldScan** - Inspect the configured limit for each field value in the HTML requests.

**fieldScanLimit** - Enter the number of bytes that the Web App Firewall inspects for each field value in HTML requests.

- 1 Default Value: 2 KB
- 2 Maximum Limit - 8 KB

**JSONFieldScan** - Inspect the configured limit for each field value in JSON requests.

**JSONFieldScanLimit** - Enter the number of bytes that the Web App Firewall inspects for each field value in JSON requests.

- 1 Default Value: 2 KB
- 2 Maximum Limit - 8 KB

**messageScan** - Inspect the configured limit for each payload in the HTML requests.

**messageScanLimit** - Enter the number of bytes that the Web App Firewall inspects for each payload in the HTML requests.

- 1 Default Value: 1 MB
- 2 Maximum Limit - 8 MB

**JSONMessageScan** - Inspect the configured limit for each payload in the JSON requests.

**JSONMessageScanLimit** - Enter the number of bytes that the Web App Firewall inspects for each payload in the JSON requests.

- 1 Default Value: 1 MB
- 2 Maximum Limit - 8 MB

**messageScanLimitContentTypes** –Select any one of the following:

- 1 - Form-Data - Select to inspect the payload **for** the HTML requests.
- 2
- 3 - Json - Select to inspect the payload **for** the JSON requests.

**canonicalizeHTMLResponse** - Perform HTML entity encoding for any special characters in responses sent by your protected websites.

Possible values: ON, OFF

Default value: ON

**percentDecodeRecursively** - Configure whether the application firewall should use percentage recursive decoding.

Possible values: ON, OFF

Default value: ON

**multipleHeaderAction** - One or more multiple header actions. Available settings function as follows:

- Block. Block connections that have multiple headers.
- Log. Log connections that have multiple headers.
- KeepLast. Keep only the last header when multiple headers are present.

**inspectContentTypes** –One or more InspectContentType lists.

- application/x-www-form-urlencoded
- multipart/form-data
- text/x-gwt-rpc

Possible values: none, application/x-www-form-urlencoded, multipart/form-data, text/x-gwt-rpc

**semicolonFieldSeparator** - Allow ';' as a form field separator in URL queries and POST form bodies.

Possible values: ON, OFF

Default value: OFF

## Changing an Web App Firewall profile type

May 2, 2023

If you chose the wrong profile type for an Web App Firewall profile, or the type of content on the protected website has changed, you can change the profile type.

**Note** When you change the profile type, you lose all configuration settings and learned relaxations or rules for the features that the new profile type does not support. For example, if you change the profile type from Web 2.0 to XML, you lose any configuration options for Start URL, Form Field Consistency Check, and the other HTML-specific security checks. The configuration for any options that is supported by both the old and the new profile types remains unchanged.

### To change an Web App Firewall profile type by using the command line interface

At the command prompt, type the following commands:

- `set appfw profile <name> -type ( **HTML** | **XML** | **HTML XML** )`
- `save ns config`

### Example

The following example changes the type of a profile named pr-basic, from HTML to HTML XML, which is equivalent to the Web 2.0 type in the GUI.

```
1 set appfw profile pr-basic -type HTML XML
2 save ns config
```

### To change an Web App Firewall profile type by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Policies**.
2. In the details pane, click **Action**, and then **Change Profile Type**.
3. In the **Change Web App Firewall Profile Type** dialog box, **Profile Type** drop-down list, select a new profile type.
4. Click **OK** to save your changes and return to the **Profiles** pane.

## Exporting and importing an Web App Firewall profile

December 4, 2020

You can replicate the entire configuration of an Web App Firewall profile (including all bound objects, such as HTML error object, XML error object, WSDL or XML schema, signatures, and so on) across multiple appliances. You can select a target profile and export the configuration to save it in your computer's local file system, or you can transfer the archived configuration to store it on a server. Similarly, you can browse your computer's local file system or import the archive from the server to select a previously exported profile and import it into your NetScaler appliance.

The option to export the entire profile configuration and then import it into another appliance can be useful in various use cases. For example, you might want to configure an Web App Firewall profile in a test bed set-up to test and validate that it is working as expected. Once you are satisfied, you can export the profile and import the profile configuration to your production NetScaler appliances. This functionality is also useful for backing up your configuration. You can export the profile before making changes, so that you can easily roll back the configuration to a known state if necessary.

### Note

Web App Firewall profiles that are exported and archived from one build cannot be restored to a system running a different build, because changes introduced in the newer releases can lead to compatibility issues. If you attempt to restore an archived profile to a different build than the one from which it was exported, an error message is logged in ns.log.

The export and import profile functionality is available in both the GUI (GUI) and the command line interface (CLI). The GUI is recommended, because it offers easy to use **Action** options. With a click of a button you can **Export** or **Import** the entire configuration of a profile.

### Exporting Web App Firewall profiles with the CLI

If you use CLI to **export** a profile, you must **archive** the configuration and then **export** it. To **import** a profile, you must **import** the archive into the NetScaler appliance and then run the **restore** command to extract the configuration. The following set of CLI commands can be used for exporting, importing and managing the profile configurations.

#### CLI commands to export archives:

- `archive appfw profile <name> <archivename> [-comment <string>]`
- `export appfw archive <name> <target>`

#### CLI commands to import archives:

- `import appfw archive <src> <name> [-comment <string>]`
- `restore appfw profile <archivename>`

**CLI commands to manage archives:**

- `show appfw archive`
- `rm appfw archive <name>`

Exporting a profile from one appliance and importing it to another requires five steps in CLI. The first 3 steps are performed on the source appliance on which profile configuration is originally created, and the next 2 steps are performed on the target appliance on which the profile configuration is to be replicated.

**Export profile from the source NetScaler appliance:**

**Step 1:** Create an archive of the configured profile.

**Step 2:** Export the archive to the NetScaler file system.

**Step 3:** Use a file transfer utility such as scp to transfer the exported archive file from NetScaler appliance A to the target NetScaler appliance.

**Import profile to the target NetScaler appliance:**

**Step 4:** Run the import command to import the archived file. You can import the archive from your NetScaler's local file system, or you can use HTTP or HTTPS protocol to import the archive from a server by using the URL.

**Step 5:** Run the restore command to restore the profile configuration from the imported archive

**To export an Web App Firewall profile by using the command line interface:**

First, **archive** the profile's configuration, and then **export** the archive to a target location. At the command prompt, type the following commands:

```
archive appfw profile <profileName> <archiveName>
```

where:

- `<profileName>` is the name of the profile to archive.
- `<archiveName>` is the name of the archive file to create.

Execution of the above command creates 2 instances of the archive file. One in `/var/tmp` folder and another in the `/var/archive/appfw` folder.

```
export appfw archive <archiveName> <target>
```

where:

- `<archiveName>` is the name of the archive to export. (The same name as in the previous command.)

- `<target>` is a file path starting with `local:` as the prefix, followed by `<archiveName>`.

Execution of the `export` command saves the exported archive file on the file system of your NetScaler appliance in the `/var/tmp` folder.

**Examples:**

```
> archive appfw profile test_pr archived_test_pr
```

```
> export appfw archive archived_test_pr local:dutA_test_pr
```

After the above two commands are run, the `/var/tmp` folder contains the `archived_test_pr` file and the exported copy, `dutA_test_pr`, which are identical in size. From the CLI, you can drop into the shell to navigate to the folder to verify that these files are there.

After exporting the archive file, you can use **scp** or some other such file transfer utility to transfer a copy of the archive file from the NetScaler appliance on which they were created to your target NetScaler appliance.

**Importing Web App Firewall Profiles with the CLI**

After you have successfully `scp`'d the archived file from the source appliance to the target appliance, you are ready to **import** the profile's archive, and then run the **restore** command to replicate the profile's configuration on the target appliance.

Log onto the target appliance. Drop into the shell and `cd` to the `/var/tmp` folder to verify that the size of the `scp`'d file on this appliance matches the size of the original archived file on the source appliance. Exit the shell to return to the command line.

**To import a profile by using the CLI:**

At the command prompt, type the following commands:

```
import appfw archive <src> <name> [-comment <string>]
```

where

- `<src>` is the location of the archive file after it has been transferred from the source appliance on which it was created. You can use a local file system and file name. If you have placed the archive on a server, you can use a URL to import the archived file. If the path or file name contains spaces, enclose the URL in straight double quotation marks.
- `<name>` is the name of the archive file to be imported.
- `<string>` is an optional description of the purpose of the Archive.

```
restore appfw profile <archiveName>
```

**Examples:****A. Import from local file followed by restore:**



```
> import appfw archive local:dutA_test_pr dut2_test_pr
> restore appfw profile dut2_test_pr
```

**B. Import from URL followed by restore:**

```
import appfw archive http://10.217.30.16/FFC/Profile_ImportExport
/dutA_test_pr.tgz my_archive
restore appfw profile my_archive
```

This example restores the test\_pr profile along with all bound objects (such as signatures, html error page, relaxation rules and so on) on the target NetScaler appliance.

You can use the following CLI commands to access man pages for additional details.

- man archive appfw profile
- man export appfw archive
- man import appfw archive
- man restore appfw profile
- man show appfw archive
- man rm appfw archive

## Exporting and Importing Web App Firewall Profiles with the GUI

The GUI is easier to use than the CLI. The utility performs both archive and export operations when you click **Export**. Similarly it runs both import and restore when you click **Import**. The GUI can access the local file system of the computer from which you access the utility. You can export a copy of the archive and save it on your local computer. You can then import this copy directly in the target appliance without having to manually transfer the archive file from one appliance to the other(s).

**To export an Web App Firewall profile by using the GUI:**

1. Navigate to **Configuration > Security > Web App Firewall > Profiles**.
2. In the details pane, select a profile to export. Click **Actions** and select **Export** to download and save a copy in your computer's local file system.

**To import an Web App Firewall profile by using the GUI:**

1. Navigate to **Configuration > Security > Web App Firewall > Profiles**.
2. In the details pane, click **Actions** and select **Import**. In the Import Web App Firewall Profile pane, the Import From\* selection box gives you 2 options:

**URL:** You can choose to import an archive by specifying a **URL**. When this option is selected, you must provide an absolute path for the archived file in the **URL** input box.

**File:** You can choose to import an archive from the local **File**. When this option is selected, a **Local File** selection field is displayed. You can browse your computer's local files to select the target archive file.

Click **Create** to import the specified archive. Successful completion of the import operation creates the profile configuration on the target appliance.

## Highlights

- You can replicate the entire configuration (including all import objects as well as configured relaxation rules for the profile) on multiple appliances, without needing to repeat configuration steps, by using export and import profile functionality.
- The imported objects, such as signatures, WSDL, Schema, error page and so on, are included in the archived tar file and replicated on the target appliance.
- Customized field types are included in the archived tar file and replicated on the target appliance.
- The policy bindings of the archived profile are not replicated when the configuration is restored. You must configure the policy and bind it to the profile after importing the profile to the appliance.
- The name of the archive file can be up to 31 character long. As with profile names, an archive name must begin with an alphanumeric character or underscore and contain only alphanumeric and underscore (`_`), number (`#`), period (`.`), space (), colon (`:`), at (`@`), equals (`=`) or hyphen (`-`) characters.
- Comments associated with the archive must be descriptive enough to convey the purpose of the archived configuration. The maximum allowed length for a comment is 255 characters.
- The `clear config -force basic` command does not remove the archived profiles.
- The import and export profile functionality is supported in high availability (HA) deployments.

## Debugging Tips

- Monitor the `/var/log/ns.log` during command executions to see if there are any ERROR messages.
- Additional logs (`_restore.log`, `remove.log`, `import.log`) are generated in the `/var/tmp/` folder. They can help debug issues during the corresponding operations. When these logs reach one MB in size, the log messages are purged to shrink the log file to one fourth of the original size.
- If the import command fails when you are using the URL option instead of the local file system, verify that DNS name server and route settings are accurately configured.
- If you are using the HTTPS protocol to import the archive, the command might fail if the HTTPS server requires client certificate authentication.

## Ease of troubleshooting with Web Application Firewall logs

May 2, 2023

When there is a security attack, it is important to capture detailed WAF logging on the appliance. For this, you can configure the “VerboseLogLevel” parameter on an Application Firewall profile.

Consider a web traffic having a security attack. When the appliance receives the traffic, violation details such as HTTP header details, log pattern, and pattern payload information are logged and sent to the ADM server. The ADM server monitors the detailed logs and displays it on the Security Insight page for monitoring and tracking purpose.

### Configuring verbose log level by using the command interface

To capture detailed WAF logs, configure the following command.

At the command interface, type:

```
set appfw profile <profile_name> -VerboseLogLevel (pattern|patternPayload
|patternPayloadHeader)
```

#### Example

```
set appfw profile profile1 -VerboseLogLevel patternPayloadHeader
```

The available log levels are:


1. Pattern. Logs only violation pattern.
2. Pattern payload. Logs violation pattern and 150 bytes of extra field element payload.
3. Pattern payload header. Logs violation pattern, 150 bytes of extra field element payload and HTTP header information.

### Configuring verbose log level by using the NetScaler GUI

Complete the following procedure to configure the verbose log level in the WAF profile.

1. On the navigation pane, navigate to **Security > Profiles**.
2. In the **Profiles** page, click **Add**.
3. In the **NetScaler Web App Firewall Profile** page, click **Profile Settings** under **Advanced Settings**.
4. In the **Profile Settings** section, select the detailed WAF log level in the Verbose Log Level field.

5. Click **OK** and **Done**.

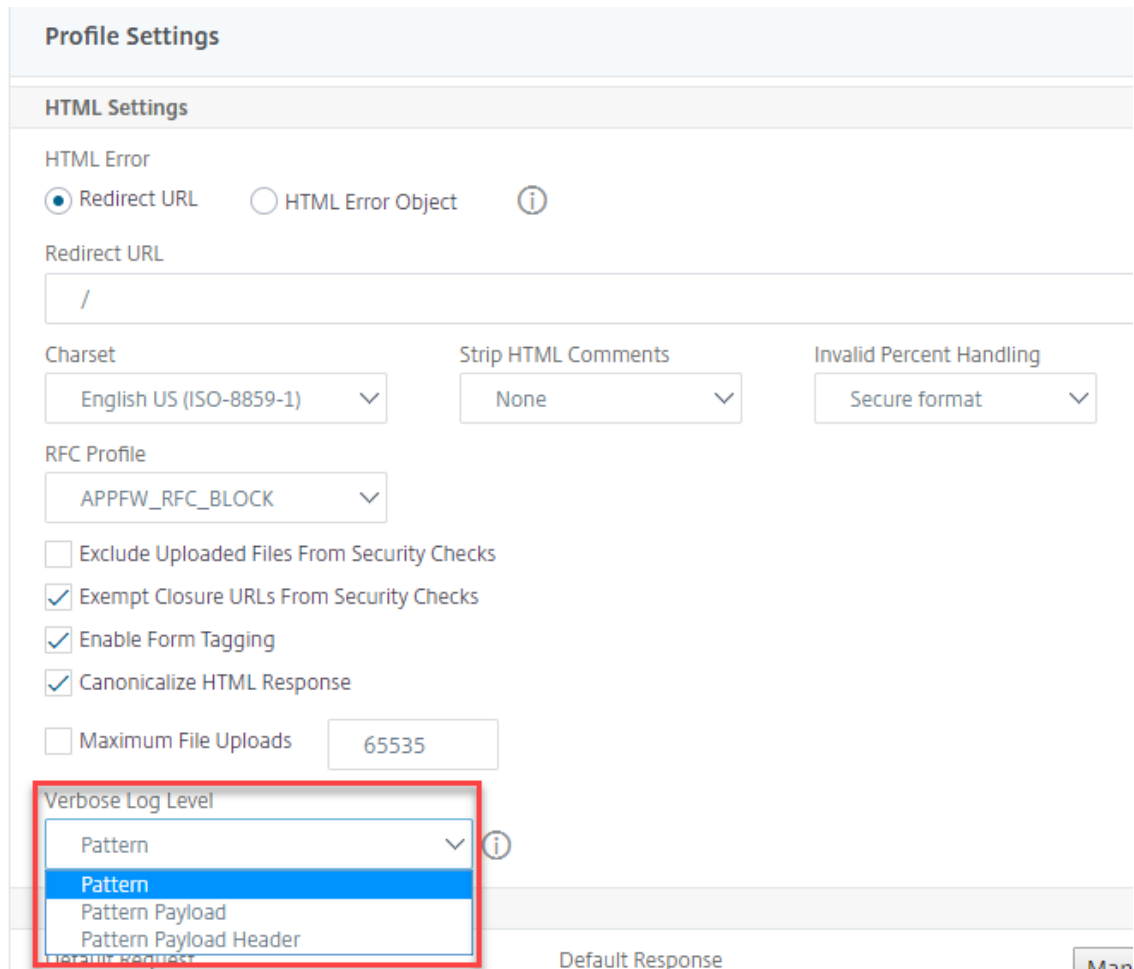

### Verbose logging for JSON security checks (SQL, CMD, and cross-site scripting)

When an incoming request type is of JSON, you can configure the verbose log level parameter to capture detailed violation logs such as pattern, pattern payload, and HTTP header information. The log details are then sent to the NetScaler Console server for monitoring and troubleshooting JSON violations. The verbose log message is not stored in the ns.log file.

Verbose logging for JSON content type security protection can be configured for the following violation types:

- SQL Injection
- Cross-site scripting
- Command Injection

## Configure verbose logging for JSON security protection by using the CLI

To capture detailed HTTP header information as logs, you can configure the verbose logging parameter in the Web App Firewall profile. At the command prompt, type:

```
1 set appfw profile <profile_name> -VerboseLogLevel (pattern |
 patternPayload | patternPayloadHeader)
```

### Example:

```
set appfw profile profile1 -VerboseLogLevel patternPayloadHeader
```

The available log levels are:

Pattern. Logs only violation pattern.

Pattern payload. Logs violation pattern and 150 bytes of extra JSON payload.

Pattern payload header. Logs violation pattern, 150 bytes of extra JSON payload and HTTP header information.

## Configuring verbose log level by using the NetScaler GUI

Follow the procedure below to configure the verbose log level for JSON security protection.

1. On the navigation pane, navigate to **Security > Profiles**.
2. In the **Profiles** page, click **Add**.
3. In the **NetScaler Web App Firewall Profile** page, click **Security Checks** under **Advanced Settings**.
4. In the **Security Checks** section, select **JSON** and click **Action Settings**.
5. In the **JSON Security Settings** page, set the **Verbose log level** parameter.
6. Click **OK** and **Done**.

Based on the details captured by NetScaler WAF JSON verbose logging, the following violation details can be inspected on the NetScaler Console server.

| Violation Information    |                              |                                                                                                                                                                                                                                       |
|--------------------------|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Violation Information    |                              |                                                                                                                                                                                                                                       |
| Attack Time              | Oct 07 04:56 PM              |                                                                                                                                                                                                                                       |
| Signature Category       | -NA-                         |                                                                                                                                                                                                                                       |
| Violation Name           | x                            |                                                                                                                                                                                                                                       |
| Violation Value          | FROM                         |                                                                                                                                                                                                                                       |
| Security Check Violation | SQL Injection Grammar        |                                                                                                                                                                                                                                       |
| Violation Category       | Injection                    |                                                                                                                                                                                                                                       |
| Threat Index             | 6                            |                                                                                                                                                                                                                                       |
| Severity                 | Critical                     |                                                                                                                                                                                                                                       |
| Action Taken             | Not Blocked                  |                                                                                                                                                                                                                                       |
| URL                      | http://[REDACTED]/index.html |                                                                                                                                                                                                                                       |
| Found In                 | Form Field                   |                                                                                                                                                                                                                                       |
| Client IP                | [REDACTED]                   |                                                                                                                                                                                                                                       |
| Location                 | -NA-                         |                                                                                                                                                                                                                                       |
| Total Attacks            | 1                            |                                                                                                                                                                                                                                       |
| LOG EXPRESSION NAME      | LOG EXPRESSION COMMENT       | LOG EXPRESSION VALUE                                                                                                                                                                                                                  |
| TX_ATTACK_PAYLOAD        |                              | PAYLOAD_OFFSET 2 FIELDNAME: x ATTACK_PATTERN:1; <b>select</b>                                                                                                                                                                         |
| TX_HEADERS               |                              | POST /index.html HTTP/1.1<br>User-Agent: curl/7.24.0 (amd64-portbld-freebsd8.4) libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3<br>Host: [REDACTED]<br>Accept: /*/*<br>Content-Length: 21<br>Content-Type: application/x-www-form-urlencoded |

## File upload protection

February 13, 2024

Many attackers try to upload malicious code, virus, or malware as file attachments during multi-form submission. It is important to protect our network and overcome such threats. To prevent such malicious file uploads, a NetScaler admin configures a set of allowable file upload formats in the WAF profile. By doing this, you restrict file uploads to specific formats and protect the appliance against malicious file uploads. The protection works only when you disable the `ExcludeFileUploadFormChecks` option in the WAF profile.

### How file upload works

When you configure allowable file upload formats, the component interaction is as follows:

- Client request has a form submission with a file upload type, for example PDF.
- As part of the security check, WAF inspects the request payload and validates the file type (based on magic signature numbers).

- If the file type is not in a supported format, the corresponding action based on file type binding is applied.
- To validate the file type the appliance inspects the payload and checks for the known magic numbers at known offsets. Each file type has a sequence of magic numbers that validates the file type.

## Configure file type upload by using NetScaler CLI

To configure allowable file formats, the appliance uses a WAF profile that is bound to file upload parameters.

1. Configure Web Application Firewall profile

At the command prompt, type:

```
set appfw profile <profile_name> [-fileUploadTypesAction <fileUploadTypesAction>] <fileUploadTypesAction> = (none | block | log | stats)
```

### Example

```
set appfw profile profile1 -fileUploadTypesAction block
```

1. Bind Web Application Firewall profile with file upload parameters. The command binds the specified exemption (relaxation) or rule to the specified application firewall profile.

At the command prompt, type:

```
bind appfw profile <profile_name> - fileUploadType <form_field > <form_action_url> [-isNameRegex (REGEX | NOTREGEX)] -fileType < fileType> (pdf | msdoc | text | image | any)
```

#### Note:

The form field name is a regular expression type. The default value is NOTREGEX.

### Example

```
> bind appfw profile test -fileuploadType thefile "http://10.10.10.10/fileupload_sample/upload.php"-isNameRegex NOTREGEX -filetype image
→
```

### Configure file upload security protection by using NetScaler GUI

1. In the navigation pane, navigate to **Security > Profiles**.
2. In the Profiles page, click **Add**.
3. In the **NetScaler Web App Firewall Profile** page, click **Security Checks** under **Advanced Settings**.
4. In the **Security Checks** section, select **File Upload Types** and click **Action Settings**.
5. In the **File Upload Types Settings** page, set the file upload action.
6. Click **OK**.
7. In the **NetScaler Web App Firewall Profile** page, click **OK** and **Done**.

### Configure file upload relaxation rule by using NetScaler GUI

You can relax a file upload security protection to avoid false positives. For example, the appliance might block file uploads but you can add a relaxation rule to allow file uploads from specific websites. By doing this, the appliance bypasses security inspection for the specified form field and allow users to upload files from the website mentioned in the action URL.

**Note:**

The file upload validation fails if the **File Upload Types Relaxation Rule** is not enabled.

Perform the following steps to create a relaxation rule.

1. In the navigation pane, navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the Profiles page, click **Add**.
3. In the **NetScaler Web App Firewall Profile** page, click **Relaxation Rules** under **Advanced Settings**.
4. In the **Relaxation Rules** section, select **File Upload Types** and click **Edit**.

| Relaxation Rules                                      |            |
|-------------------------------------------------------|------------|
| NAME                                                  | CHECK TYPE |
| <input type="checkbox"/> Start URL                    | Common     |
| <input type="checkbox"/> Deny URL                     | Common     |
| <input type="checkbox"/> Cookie Consistency           | Common     |
| <input type="checkbox"/> Credit Card                  | Common     |
| <input type="checkbox"/> Content-type                 | Common     |
| <input type="checkbox"/> Safe Object                  | Common     |
| <input checked="" type="checkbox"/> File Upload Types | HTML       |



5. In the **File Upload Types Relaxation Rules** page, click **Add**.
6. In the **File Upload Types Relaxation Rule** page, set the following parameters:
  - a) Enabled - Select to enable the relaxation rule.
  - b) Is Form Field Name Regex - Select to update a regex pattern for the form field name.
  - c) Form Field Name - Enter the file name that does not require a security check.
  - d) Action URL - The form submission URL that must be exempted from security checks.
  - e) File Type - Supported file format that can be uploaded.
  - f) Comments - A brief description about the file upload.
7. Click **Create**.

The screenshot shows the configuration interface for a File Upload Types Relaxation Rule. The title is "File Upload Types Relaxation Rule". The configuration includes the following elements:

- Enabled:** A checked checkbox.
- Is Form Field Name Regex:** A checked checkbox.
- Form Field Name:** A text input field containing the value "Resume".
- Action URL\*:** A text input field containing the value "www.example.com".
- RegEx Editor:** A section with no visible content.
- File Type:** A group of radio buttons with the following options:
  - PDF (with an information icon)
  - Microsoft Word Document
  - Text
  - Image
  - Any
- Comments:** A text area containing the text "File upload valication is relaxed to allow PDF uploads." (Note the typo "valication").

8. In the **NetScaler Web App Firewall Profile** page, click **OK** and **Done**.

## Configuring and using the Learning feature

March 6, 2024

The learning feature is a repetitive pattern filter that observes activity on a website or application protected by the Web App Firewall, to determine what constitutes normal activity on that website or application. It then generates a list of up to 2,000 suggested rules or exceptions (relaxations) for each security checks that include support for the learning feature. Users normally find it easier to configure relaxations by using the learning feature than by entering the necessary relaxations manually.

The security checks that support the learning feature are:

- Start URL check
- Cookie Consistency check
- Form Field Consistency check
- Field Formats check
- CSRF Form Tagging check
- HTML SQL Injection check
- HTML Cross-Site Scripting check
- XML Denial-of-Service check
- XML Attachment check
- Web Services Interoperability check

You perform two different types of activities when using the learning feature. First, you enable and configure the feature to use it. You can learn all traffic to your protected web applications, or you can configure a list of IP addresses (called the *Add Trusted Learning Clients* list) from which the learning feature can generate recommendations. Second, after the feature has been enabled and has processed a certain amount of traffic to your protected websites, you review the list of suggested rules and relaxations (learned rules) and mark each with one of the following designations:

- **Edit & Deploy.** The rule is pulled into the Edit dialog box so that you can modify it, and the modified form is deployed.
- **Deploy.** The unmodified learned rule is placed on the list of rules or relaxations for this security check.
- **Skip.** The learned rule is placed on a list of rules or relaxations that are not deployed. The learned rule is removed when skipped. However, as they are not added to relaxations, they might get learned again.

Learning is not performed only when relaxations are in place, except for field format rules. When rules are skipped, they are only removed from the learned database. As relaxations are not added, they might get learned again. When the rules are deployed, they are removed from learned database and also relaxations are added for the rules. As relaxations are added, they would not be learned again. For field format protection, learning is performed irrespective of relaxations.

Although you can use the command line interface for basic configuration of the learning feature, the feature is designed primarily for configuration through the Web App Firewall wizard or the GUI. You can perform only limited configuration of the learning feature by using the command line.

The wizard integrates configuration of learning features with configuration of the Web App Firewall as a whole, and is therefore the easiest method for configuring this feature on a new NetScaler appliance or when managing a simple Web App Firewall configuration. The GUI visualizer and manual interface both provide direct access to all learned rules for all security checks, and are therefore often preferable when you must review learned rules for many security checks.

The learning database is limited to 20 MB in size, which is reached after approximately 2,000 learned rules or relaxations are generated per security check for which learning is enabled. If you do not regularly review and either approve or ignore learned rules and this limit is reached, an error is logged to the NetScaler log and no more learned rules are generated until you review the existing learned rules and relaxations.

If learning stops because the database has reached its size limit, you can restart learning either by reviewing the existing learned rules and relaxations or by resetting the learning data. After learned rules or relaxations are approved or ignored, they are removed from the database. After you reset the learning data, all existing learning data is removed from the database and it is reset to its minimum size. When the database falls below 20 MB in size, learning restarts automatically.

We recommend that you enable learning in the staging environment and not in the production environment.

### **To configure the learning settings by using the command line interface**

Specify the Web App Firewall profile to be configured and, for each security check that you want to include in that profile, specify the minimum threshold or the percent threshold. The minimum threshold is an integer representing the minimum number of user sessions that the Web App Firewall must process before it learns a rule or relaxation (default: 1). The percent threshold is an integer representing the percentage of user sessions in which the Web App Firewall must observe a particular pattern (URL, cookie, field, attachment, or rule violation) before it learns a rule or relaxation (default: 0). Use the following commands:

- `set appfw learningsettings <profileName> [-startURLMinThreshold <positive_integer>] [-startURLPercentThreshold <positive_integer>] [-cookieConsistencyMinThreshold <positive_integer>] [-cookieConsistencyPercentThreshold <positive_integer>] [-CSRFtagMinThreshold <positive_integer>] [-CSRFtagPercentThreshold <positive_integer>] [-fieldConsistencyMinThreshold <positive_integer>] [-fieldConsistencyPercentThreshold <positive_integer>] [-crossSiteScriptingMinThreshold <positive_integer>] [-crossSiteScriptingPercentThreshold <positive_integer>] [-SQLInjectionMinThreshold <positive_integer>] [-SQLInjectionPercentThreshold <positive_integer>] [-fieldFormatMinThreshold <positive_integer>] [-fieldFormatPercentThreshold <positive_integer>] [-XMLWSIMinThreshold <positive_integer>] [-XMLWSIPercentThreshold <positive_integer>] [-XMLAttachmentMinThreshold <positive_integer>] [-XMLAttachmentPercentThreshold <positive_integer>]`
- `save ns config`

**Example**

The following example enables and configures the learning settings in the profile for the HTML SQL Injection security check. This is an appropriate initial test bed learning configuration, where you have complete control over the traffic that is sent to the Web App Firewall.

```
1 set appfw learningsettings pr-basic -SQLInjectionMinThreshold 10
2 set appfw learningsettings pr-basic -SQLInjectionPercentThreshold 70
3 save ns config
```

**To reset learning settings to their defaults by using the command line interface**

To remove any custom configuration of the learning settings for the specified profile and security check, and return the learning settings to their defaults, at the command prompt type the following commands:

- `unset appfw learningsettings <profileName> [-startURLMinThreshold ] [-startURLPercentThreshold] [-cookieConsistencyMinThreshold ] [-cookieConsistencyPercentThreshold] [-CSRFtagMinThreshold ] [-CSRFtagPercentThreshold ] [-fieldConsistencyMinThreshold ] [-fieldConsistencyPercentThreshold ] [-crossSiteScriptingMinThreshold ] [-crossSiteScriptingPercentThreshold ] [-SQLInjectionMinThreshold ] [-SQLInjectionPercentThreshold ] [-fieldFormatMinThreshold ] [-fieldFormatPercentThreshold ] [-XMLWSIMinThreshold ] [-XMLWSIPercentThreshold ] [-XMLAttachmentMinThreshold ] [-XMLAttachmentPerco ]`
- `save ns config`

**To display the learning settings for a profile by using the command line interface**

At the command prompt, type the following command:

```
show appfw learningsettings <profileName>
```

**To display unreviewed learned rules or relaxations for a profile by using the command line interface**

At the command prompt, type the following command:

```
show appfw learningdata <profileName> <securityCheck>
```

## To remove specific unreviewed learned rules or relaxations from the learning database by using the command line interface

At the command prompt, type the following command:

```
rm appfw learningdata <profileName> (-startURL <expression> | -
cookieConsistency <string> | (-fieldConsistency <string> <formActionURL
>)| (-crossSiteScripting <string> <formActionURL>)| (-SQLInjection <
string> <formActionURL>)| (-fieldFormat <string><formActionURL>)| (-
CSRFTag <expression> <CSRFFormOriginURL>)| -XMLDoSCheck <expression
> | -XMLWSICheck <expression> | -XMLAttachmentCheck <expression>)[-
TotalXMLRequests]
```

### Example

The following example removes all unreviewed learned relaxations for the profile, HTML SQL Injection security check, that apply to the **LastName form** field.

```
1 rm appfw learningdata pr-basic -SQLInjection LastName
```

## To remove all unreviewed learned data by using the command line interface

At the command prompt, type the following command:

```
reset appfw learningdata
```

## To export learning data by using the command line interface

At the command prompt, type the following command:

```
export appfw learningdata <profileName> <securitycheck>[-target <
string>]
```

### Example

The following example exports learned relaxations for the profile and the HTML SQL Injection security check to a comma-separated values (CSV) format file in the `/var/learned_data/` directory under the file name specified in the `-target` parameter.

```
1 export appfw learningdata pr-basic SQLInjection -target sql_i_ld
```

## To configure the Learning feature by using the GUI

1. Navigate to **Security > Web App Firewall > Profiles**.
2. In the **Profiles** pane, select the profile, and then click **Edit**.
3. Click **Learnt Rules** under **Advanced Settings** section.
4. In the **Learnt Rules** section, select a security check and click **Settings**.
5. In the **Security Check Settings** page, set the following parameters:
  - a) **Minimum number threshold.** Depending on which security check’s learning settings you are configuring, the minimum number threshold might refer to the minimum number of total user sessions that must be observed, the minimum number of requests that must be observed, or the minimum number of times a specific form field must be observed, before a learned relaxation is generated. Default: 1
  - b) **Percentage of times threshold.** Depending on which security check’s learning settings you are configuring, the percentage of times threshold might refer to the percentage of total observed user sessions that violated the security check, the percentage of requests, or the percentage of times a form field matched a particular field type, before a learned relaxation is generated. Default: 0
6. Click **OK** and **Close**.

**Dynamic Profiling & Learning Rules Settings Page**

**Start URLs Learning Thresholds**

Minimum number of sessions:  ⓘ

Percentage of sessions URL has been seen:

Start URL Auto Deploy Grace Period  
Time to auto-deploy

days  hours  minutes

**Cookie Learning Thresholds**

Minimum number of sessions:

Percentage of sessions field has been seen:

Cookie Learning Auto Deploy Grace Period  
Time to auto-deploy

days  hours  minutes

**Content Type Learning Thresholds**

Minimum number of sessions:

Percentage of sessions field has been seen:

7. Click **Remove All Learned Data** to remove all learned data and reset the learning feature, so that it must start its observations again from the beginning.

**Note:**

This button removes only learned recommendations that have not been reviewed and either approved or skipped. It does not remove learned relaxations that have been accepted and deployed.

8. To restrict the learning engine to traffic from a specific set of IPs, click **Trusted Learning Clients**, and add the IP addresses that you want to use to the list.
  - a) To add an IP address or IP address range to the Trusted Learning Clients list, click **Add**.
  - b) In the **Add Trusted Learning Clients** dialog box, Trusted Clients IP list box, type the IP address or an IP address range in CIDR format.
  - c) In the Comments text area, type a comment that describes this IP address or range.
  - d) Click **Create** to add your new IP address or range to the list.
  - e) To modify an existing IP address or range, click the IP address or range, and then click **Open**. Except for the name, the dialog box that appears is identical to the **Add Trusted Learning Clients** dialog box.
  - f) To disable or enable an IP address or range, but leave it on the list, click the IP address or range, and then click **Disable or Enable**, as appropriate.
  - g) To remove an IP address or range completely, click the IP address or range, and then click **Remove**.
9. Click **Close** to return to the Configure Web App Firewall Profile page.
10. Click **Done**.

**To review learned rules or relaxations by using the GUI**

1. Navigate to **Security > Web App Firewall > Profiles**.
2. In the **Profiles** pane, select the profile, and then click **Edit**.
3. Click **Learnt Rules** under **Advanced Settings** section.
4. In the **Learnt Rules** section, select a security check and click **Settings**.
5. To review the learned data hierarchically as a branching tree, enabling you to choose general patterns that match many of the learned patterns, click **Visualizer**.
6. If you have chosen to review actual learned patterns, perform the following steps.
7. Select the first learned relaxation and choose how to handle it.
  - a) To modify and then accept the relaxation, click **Edit & Deploy**, edit the relaxation regular expression, and then click **OK**.
  - b) To accept the relaxation without modifications, click **Deploy**.

- c) To remove the relaxation from the list without deploying it, click **Skip**.
  - d) Repeat the previous step to review each additional learned relaxation.
8. Click **Close** to return to the **Manage Learned Rules** dialog box.
  9. Click **Done**.

## Dynamic profiling

February 13, 2024

The learning feature is a pattern filter that observes and learns activities on the back-end server. Based on the observation, the learning engine generates up to 2000 rules or exceptions (relaxations) for each security check. To automate the process and auto deploy the relaxation rules, NetScaler appliance uses dynamic profiling.

With dynamic profiling, the appliance records the learnt data for a pre-defined threshold and sends an SNMP alert to the user. If the user does not skip the data within a grace period, the appliance auto deploys it as a relaxation rule. Earlier, the user had to manually deploy the relaxation rules. Currently, dynamic profiling is available only for the follow security checks:

1. HTML SQL injection
2. HTML Cross Site scripting
3. Field format
4. Start URL
5. Content-type
6. Field formats
7. CSRF form tagging
8. Cookie consistency
9. Deny URL
10. Buffer Overflow
11. Credit Card
12. Content-type protection
13. JSON Cmd Injection protection

For example, consider the HTML SQL Injection security check enabled with dynamic profiling. You can use learning for a list of IPs (called the Trusted Learning Clients list) from which the learning feature must generate recommendations. To configure a list of trusted clients, see Learning Trusted Clients topic. If the incoming traffic has violations, it is recorded as a learnt data. If the learned data is recorded in the learning engine, the appliance sends an SNMP alert to the user. If the user does not



recognize a false positive and does not skip the learnt data within a grace period, the appliance auto deploys it as a relaxation rule.

**Note:**

After you configure the dynamic profile, you must periodically review the appliance configuration for the auto-deployment of the relaxation rules and save it on the appliance.

## Configure dynamic profiling by using the NetScaler command interface

Dynamic profiling is available for Start URL, HTML Cross-Site Scripting, Field Format, or HTML SQL Injection security checks. To configure dynamic profiling, you must complete the following steps.

1. Configure dynamic learning
2. Configure auto deployment grace period

### Configure dynamic learning

As a first step, you must configure dynamic learning on your appliance. At the command prompt, type:

```
set appfw profile <profile_name> dynamicLearning <security_checks>
```

**Example** `set appfw profile test1 dynamicLearning SQLInjection CrossSiteScripting fieldFormat startURL`

### Configure auto deployment grace period

Once you enable the feature on specific security checks, you must configure the grace period for the auto deployment.

```
set appfw learningsettings <profile name> -crossSiteScriptingAutoDeployGracePeriod <seconds>
```

```
set appfw learningsettings <profile name> fieldFormatAutoDeploymentGracePeriod <seconds>
```

```
set appfw learningsettings <profile name> SQLInjectionAutoDeploymentGracePeriod <seconds>
```

```
set appfw learningsettings <profile name> -startURLAutoDeployGracePeriod <seconds>
```

```
Example set appfw learningsettings test1 -crossSiteScriptingAutoDeployGracePer
30
set appfw learningsettings test1 -startURLAutoDeployGracePeriod 7
set appfw learningsettings test1 -fieldFormatAutoDeploymentGracePeriod
10
set appfw learning settings test1 -SQLInjectionAutoDeploymentGracePeriod
12
```

**Note:**

Here, the auto deployment grace period is in minutes.

### Configuring dynamic profiling by using the NetScaler GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profile**.
2. In the details pane, select a profile and click **Edit**.
3. In the **Citrix Web App Profile** page, click **Dynamic Profiling** under **Advanced Settings**.
4. In the **Dynamic Profiling** section, select a security check and click **Edit**.
5. In the **Dynamic Profiling and Learning Settings** page, set the grace period the security check.

| Dynamic Profiling & Learning Rules Settings Page                       |                                                  |
|------------------------------------------------------------------------|--------------------------------------------------|
| <b>Start URLs learning thresholds</b>                                  |                                                  |
| Minimum number of sessions<br>1                                        | Percentage of sessions URL has been seen<br>0    |
| <b>Cookie learning thresholds</b>                                      |                                                  |
| Minimum number of sessions<br>1                                        | Percentage of sessions field has been seen<br>0  |
| <b>Content Type learning thresholds</b>                                |                                                  |
| Minimum number of sessions<br>1                                        | Percentage of sessions field has been seen<br>0  |
| <b>Form Field Consistency learning thresholds</b>                      |                                                  |
| Minimum number of sessions<br>1                                        | Percentage of sessions field has been seen<br>0  |
| <b>Field Formats learning thresholds</b>                               |                                                  |
| Minimum number of times field has been seen<br>1                       | Percentage of times field matched a format<br>0  |
| <b>Dynamic Profiling</b>                                               |                                                  |
| Time to auto-deploy<br>7 days 0 hours 0 minutes                        |                                                  |
| <b>CSRF Form Tagging learning thresholds</b>                           |                                                  |
| Minimum number of sessions<br>1                                        | Percentage of sessions field has been seen<br>0  |
| <b>HTML Cross-Site Scripting learning thresholds</b>                   |                                                  |
| Minimum number of sessions<br>1                                        | Percentage of sessions field has been seen<br>0  |
| <b>Dynamic Profiling</b>                                               |                                                  |
| Time to auto-deploy<br>7 days 0 hours 0 minutes                        |                                                  |
| <b>HTML SQL Injection learning thresholds</b>                          |                                                  |
| Minimum number of sessions<br>5                                        | Percentage of sessions field has been seen<br>0  |
| <b>Dynamic Profiling</b>                                               |                                                  |
| Time to auto-deploy<br>0 days 0 hours 5 minutes                        |                                                  |
| <b>Credit Card Number URLs learning thresholds</b>                     |                                                  |
| Minimum number of Credit Card Numbers<br>1                             | Percentage of Credit Card Numbers been seen<br>0 |
| <input type="button" value="OK"/> <input type="button" value="Close"/> |                                                  |

6. Click **OK** and **Done**.

## Export and import of relaxation rules

When you enable dynamic profiling, the learnt data is auto deployed as relaxation rules. Along with this, the appliance also enables you to export the dynamic profiling based relaxation rules and regular relaxation rules. You can export the rules from staging environment and import it to the production environment.

### Note:

When you import rules to the production environment, you must ensure the process is additive and does not override the existing configuration.

## How to export and import relaxation rules

To export and import the relaxation rules, you must complete the following steps:

1. You must first export the dynamic profiling-based data. For this, the export option is available for the relaxation rules in the WAF profile. When you select this option, you export the dynamic

profiling relaxation rules and regular relaxation rules. You can use the export option to download the configuration as a compressed bundle on the appliance.

2. Once you have exported the data from the staging environment, you must import it to another NetScaler appliance. For this, you must use the import option available in the relaxation rules of the WAF profile. When you select this option, the appliance imports the specified relaxation rules bundled and restores it to the WAF profile of the selected appliance.

**Note:**

If you are going to import relaxation rules in a WAF profile, there are two types of action:

Augment –This action ensures import is additive, thus not overriding any existing configuration.

Overwrite –This action overwrites the existing configuration with configuration present in the compressed export bundle.”

**Import archived relaxation rules file by using CLI**

To import the relaxation rules, you must import the archive into the NetScaler appliance and then run the restore command to extract the configuration. The following set of CLI commands can be used for exporting, importing, and managing the configurations.

To import the archived file from the specific location and restore, at the command prompt, type:

```
import appfw archive <src> <name> [-comment <string>]
```

Where,

“src”: Indicates the source of the tar archive file in the form, <protocol>://<host>[:<port>][/<path>]

“name”: Indicates name of archive.

“comment”: Comments associated with this archive.

```
restore appfw profile <archivename> [-relaxationRules] [-importProfileName <string>] [-matchUrlString <string>] [-replaceUrlString <string>] [-overwrite] [-augment]
```

Where,

**archivename**: Indicates source for tar archive. This is a mandatory argument.

“relaxationRules”: Option to import all appfw relaxation rules.

**importProfileName**: Indicates profile name created or updated to associate the relaxation rules during restore operation.

“matchUrlString”: Indicates action URL string to match in archived relaxation rules.

**replaceUrlString**: Indicates string to replace in action URL while restoring relaxation rules.

**overwrite**: Existing rules action to purge existing relaxation rules and replace during import.

`augment`: Existing rules action to augment relaxation rules during import.

**Example:**

```
import appfw archive local: dutA_test_pr.tgz demo
restore appfw profile dutA_test_pr
```

**Export the archived file to the selected appliance by using the CLI**

If you use CLI to export the appfw relaxation rules, you must archive the configuration and then export it.

To archive and export the archived file, at the command prompt, type:

```
archive appfw profile <name> <archivename> [-comment <string>]
```

Where,

`archive name`: Indicates source for tar archive. This is a mandatory argument.

`name`: Indicates the appfw profile name containing the relaxation rules to export

```
export appfw archive <name> <target>
```

Where,

Name. Name of tar archive. This is a mandatory argument. Maximum Length: 31

Target. Path to the file to be exported. This is a mandatory argument. Maximum Length: 2047

**Example:**

```
> archive appfw profile test_pr archived_test_pr
> export appfw archive archived_test_pr local:dutA_test_pr
```

**To export relaxation rules by using NetScaler GUI**

Follow the steps given below to export relaxation rules:

1. Navigate to **Security > NetScaler Web App Firewall**.
2. In the details page, click **NetScaler Web App Firewall Profiles** link under **Configuration Summary** section.
3. In the **NetScaler Web App Firewall Profile** page, click the **Relaxation Rules** link under **Advanced Settings** section.
4. In the **Relaxation Rules** section, click **Export All Relaxation Rules**. The action applies to all security checks and on the ones which dynamic learning is enabled on that profile.

| Relaxation Rules                    |                                           |                                                            |                                                            |
|-------------------------------------|-------------------------------------------|------------------------------------------------------------|------------------------------------------------------------|
| <input type="button" value="Edit"/> | <input type="button" value="Visualizer"/> | <input type="button" value="Export All Relaxation Rules"/> | <input type="button" value="Import All Relaxation Rules"/> |
| <input type="checkbox"/>            | NAME                                      | CHECK TYPE                                                 |                                                            |
| <input type="checkbox"/>            | Start URL                                 | Common                                                     |                                                            |
| <input type="checkbox"/>            | Deny URL                                  | Common                                                     |                                                            |
| <input type="checkbox"/>            | Cookie Consistency                        | Common                                                     |                                                            |

### To import relaxation rules by using NetScaler GUI

Complete the steps to import relaxation rules:

1. Navigate to **Security > NetScaler Web App Firewall**.
2. In the details page, click the **NetScaler Web App Firewall Profiles** link under **Configuration Summary** section.
3. In the **NetScaler Web App Firewall Profile** page, click the **Relaxation Rules** link under **Advanced Settings** section.
4. In the **Relaxation Rules** section, click **Import All Relaxation Rules**.
5. In the **Configure NetScaler Web App Firewall Profile** page, set the following parameters:
  - a) Local file. Name of the compressed archived file containing the relaxation rules.
  - b) Profile Name. Name of the profile to which the relaxation rules are bound.
  - c) Matching URL String. Portion of the URL that matches.
  - d) Replace URL String. Portion of the URL that replaces the URL string.
  - e) Existing Rule Action. Select if the rule must overwrite existing rules or augment the existing rules.
6. Click **OK**.

## Supplemental Information about profiles

May 2, 2023

Following is supplemental information about particular aspects of Web App Firewall profiles. This information explains how to include special characters in a security check rule or relaxation, and how to use variables when configuring profiles.

## Configuration variable support

Instead of using static values, to configure the Web App Firewall's security checks and settings, you can now use standard NetScaler named variables. By creating variables, you can more easily export and then import configurations to new NetScaler appliances, or update existing NetScaler appliances from a single set of configuration files. This simplifies updates when you use a test bed setup to develop a complex Web App Firewall configuration that is tuned for your local network and servers and then transfer that configuration to your production NetScaler appliances.

You create Web App Firewall configuration variables in the same manner as you do any other NetScaler named variables, following standard NetScaler conventions. You can create a named expression variable using the NetScaler command line or GUI.

The following URLs and expressions can be configured with variables instead of static values:

- **Start URL** (-starturl)
- **Deny URL** (-denyurl)
- **Form Action URL** for *Form Field Consistency Check* (-fieldconsistency)
- **Action URL** for *XML SQL Injection Check* (-xmlSQLInjection)
- **Action URL** for *XML Cross-Site Scripting Check* (-xmlcross-site scripting)
- **Form Action URL** for *HTML SQL Injection Check* (-sqlInjection)
- **Form Action URL** for *Field Format Check* (-fieldFormat)
- **Form Origin URL** and **Form Action URL** for *Cross-Site Request Forgery (CSRF) Check* (-csrfTag)
- **Form Action URL** for *HTML Cross-Site Scripting Check* (-crossSiteScripting)
- **Safe Object** (-safeObject)
- **Action URL** for *XML Denial-of-Service (XDoS) check* (-XMLDoS)
- **URL** for *Web Services Interoperability check* (-XMLWSIURL)
- **<URL** for *XML Validation check* (-XMLValidationURL)
- **URL** for *XML Attachment check* (-XMLAttachmentURL)

For more information, see [Policies and Expressions](#).

To use a variable in the configuration, you enclose the variable name between two at (@) symbols and then use it exactly as you would the static value that it replaces. For example, if you are configuring the Deny URL check by using the GUI and want to add the named expression variable myDenyURL to the configuration, you would type @myDenyURL@ into the Add Deny URL dialog box, Deny URL text area. To do the same task by using the NetScaler command line, you would type add appfw profile <name> -denyURLAction @myDenyURL@.

## PCRE character encoding format

The NetScaler operating system supports direct entry of characters in the printable ASCII character set only—characters with hexadecimal codes between HEX 20 (ASCII 32) and HEX 7E (ASCII 127). To

include a character with a code outside that range in your Web App Firewall configuration, you must enter its UTF-8 hexadecimal code as a PCRE regular expression.

A number of character types require encoding using a PCRE regular expression if you include them in your Web App Firewall configuration as a URL, form field name, or Safe Object expression. They include:

- **Upper-ASCII characters.** Characters with encodings from HEX 7F (ASCII 128) to HEX FF (ASCII 255). Depending on the character map used, these encodings can refer to control codes, ASCII characters with accents or other modifications, non-Latin alphabet characters, and symbols not included in the basic ASCII set. These characters can appear in URLs, form field names, and safe object expressions.
- **Double-Byte characters.** Characters with encodings that use two 8-byte words. Double-byte characters are used primarily for representing Chinese, Japanese, and Korean text in electronic format. These characters can appear in URLs, form field names, and safe object expressions.
- **ASCII control characters.** Non-printable characters used to send commands to a printer. All ASCII characters with hexadecimal codes less than HEX 20 (ASCII 32) fall into this category. These characters must never appear in a URL or form field name, however, and would rarely if ever appear in a safe object expression.

The NetScaler appliance does not support the entire UTF-8 character set, but only the characters found in the following eight charsets:

- **English US (ISO-8859-1).** Although the label reads, “English US,” the Web App Firewall supports all characters in the ISO-8859-1 character set, also called the Latin-1 character set. This character set fully represents most modern western European languages and represents all but a few uncommon characters in the rest.
- **Chinese Traditional (Big5).** The Web App Firewall supports all characters in the BIG5 character set, which includes all of the Traditional Chinese characters (ideographs) commonly used in modern Chinese as spoken and written in Hong Kong, Macau, Taiwan, and by many people of Chinese ethnic heritage who live outside of mainland China.
- **Chinese Simplified (GB2312).** The Web App Firewall supports all characters in the GB2312 character set, which includes all of the Simplified Chinese characters (ideographs) commonly used in modern Chinese as spoken and written in mainland China.
- **Japanese (SJIS).** The Web App Firewall supports all characters in the Shift-JIS (SJIS) character set, which includes most characters (ideographs) commonly used in modern Japanese.
- **Japanese (EUC-JP).** The Web App Firewall supports all characters in the EUC-JP character set, which includes all characters (ideographs) commonly used in modern Japanese.
- **Korean (EUC-KR).** The Web App Firewall supports all characters in the EUC-KR character set, which includes all characters (ideographs) commonly used in modern Korean.



- **Turkish (ISO-8859-9).** The Web App Firewall supports all characters in the ISO-8859-9 character set, which includes all letters used in modern Turkish.
- **Unicode (UTF-8).** The Web App Firewall supports certain additional characters in the UTF-8 character set, including those used in modern Russian.

When configuring the Web App Firewall, you enter all non-ASCII characters as PCRE-format regular expressions using the hexadecimal code assigned to that character in the UTF-8 specification. Symbols and characters within the normal ASCII character set, which are assigned single, two-digit codes in that character set, are assigned the same codes in the UTF-8 character set. For example, the exclamation point (!), which is assigned hex code 21 in the ASCII character set, is also hex 21 in the UTF-8 character set. Symbols and characters from another supported character set have a paired set of hexadecimal codes assigned to them in the UTF-8 character set. For example, the letter a with an acute accent (á) is assigned UTF-8 code C3 A1.

The syntax you use to represent these UTF-8 codes in the Web App Firewall configuration is “xNN” for ASCII characters; “\xNN\xNN” for non-ASCII characters used in English, Russian, and Turkish; and “\xNN\xNN\xNN” for characters used in Chinese, Japanese, and Korean. For example, if you want to represent a ! in an Web App Firewall regular expression as a UTF-8 character, you would type \x21. If you want to include an á, you would type \xC3\xA1.

**Note:**

Normally you do not need to represent ASCII characters in UTF-8 format, but when those characters might confuse a web browser or an underlying operating system, you can use the character’s UTF-8 representation to avoid this confusion. For example, if a URL contains a space, you might want to encode the space as x20 to avoid confusing certain browsers and web server software.

Below are examples of URLs, form field names, and safe object expressions that contain non-ASCII characters that must be entered as PCRE-format regular expressions to be included in the Web App Firewall configuration. Each example shows the actual URL, field name, or expression string first, followed by a PCRE-format regular expression for it.

- A URL containing extended ASCII characters.

Actual URL: <http://www.josénuñez.com>

Encoded URL: `^http://www\[.\]jos\xC3\xA9nu\xC3\xB1ez\[.\]com$`

- Another URL containing extended ASCII characters.

Actual URL: <http://www.example.de/trömsö.html>

Encoded URL: `^http://www\[.\]example\[.\]de/tr\xC3\xB6msö\[.\]html$`

- A form field name containing extended ASCII characters.

Actual Name: `nome_do_usuario`

Encoded Name: `^nome_do_usu\xC3\xA1rio$`

- A safe object expression containing extended ASCII characters.

Unencoded Expression `[A-Z]{3,6}¥[1-9][0-9]{6,6}`

Encoded Expression: `[A-Z]{3,6}\xC2\xA5[1-9][0-9]{6,6}`

You can find a number of tables that include the entire Unicode character set and matching UTF-8 encodings on the Internet. A useful website that contains this information is located at the following URL:

<http://www.utf8-chartable.de/unicode-utf8-table.pl>

For the characters in the table on this website to display correctly, you must have an appropriate Unicode font installed on your computer. If you do not, the visual display of the character may be in error. Even if you do not have an appropriate font installed to display a character, however, the description and the UTF-8 and UTF-16 codes on this set of web pages will be correct.

## Inverted PCRE Expressions

In addition to matching content that contains a pattern, you can match content that does not contain a pattern by using an inverted PCRE expression. To invert an expression, you simply include an exclamation point (!) followed by white space as the first character in the expression.

**Note:** If an expression consists only of an exclamation point with nothing following, the exclamation point is treated as a literal character, not syntax indicating an inverted expression.

The following Web App Firewall commands support inverted PCRE expressions:

- Start URL (URL)
- Deny URL (URL)
- Form Field Consistency (form action URL)
- Cookie Consistency (form action URL)
- Cross Site Request Forgery (CSRF) (form action URL)
- HTML Cross-site Scripting (form action URL)
- Field Format (form action URL)
- Field Type (type)
- Confidential Field (URL)

Note: If the security check contains an isRegex flag or check box, it must be set to YES or checked to enable regular expressions in the field. Otherwise the contents of that field are treated as literal and no regular expressions (inverted or not) are parsed.

## Disallowed Names for Web App Firewall Profiles

The following names are assigned to built-in actions and profiles on the NetScaler appliance, and cannot be used as names for a user-created Web App Firewall profile.

- AGRESSIVE
- ALLOW
- BASIC
- CLIENTAUTH
- COMPRESS
- CSSMINIFY
- DEFLATE
- DENY
- DNS-NOP
- DROP
- GZIP
- HTMLMINIFY
- IMGOPTIMIZE
- JSMINIFY
- MODERATE
- NOCLIENTAUTH
- NOCOMPRESS
- NONE
- NOOP
- NOREWRITE
- RESET
- SETASLEARNNSLOG\_ACT
- SETNSLOGPARAMS\_ACT
- SETSYSLOGPARAMS\_ACT
- SETTMESSPARAMS\_ACT
- SETVPNPARAMS\_ACT
- SET\_PREAUTHPARAMS\_ACT
- default\_DNS64\_action
- dns\_default\_act\_Cachebypass
- dns\_default\_act\_Drop
- nshttp\_default\_profile
- nshttp\_default\_strict\_validation
- nstcp\_default\_Mobile\_profile
- nstcp\_default\_XA\_XD\_profile
- nstcp\_default\_profile

- nstcp\_default\_tcp\_interactive\_stream
- nstcp\_default\_tcp\_lan
- nstcp\_default\_tcp\_lan\_thin\_stream
- nstcp\_default\_tcp\_lfp
- nstcp\_default\_tcp\_lfp\_thin\_stream
- nstcp\_default\_tcp\_lnp
- nstcp\_default\_tcp\_lnp\_thin\_stream
- nstcp\_internal\_apps

## Custom error status and message for HTML, XML, and JSON error object

May 2, 2023

When the NetScaler Web App Firewall detects a violation, the appliance handles the error scenario using either a redirect URL or the error object (imported into the profile and enabled). If the scenario is handled using an error object configuration, the WAF profile provides a custom response status code and message. You can customize the response error details for an HTML, XML, or JSON error object in the WAF profile.

**Note:**

By default, the error code and error message are set as “200” and “OK” if error object settings are configured.

When handling error scenarios, it is important for the appliance to respond with appropriate HTTP response status code and message for resolving issues. By providing a custom error status message and custom error status code, the appliance can provide better user intervention to resolve a problem when a violation occurs. For example, if you set the response error code to “404” and the status message to “Not Found”, the user can inspect the response status code and message to check if a violation has occurred. This can help the user to filter responses that contain the error object

### Configure custom status code and message for HTML error object in a WAF profile by using the CLI

At the command prompt, type:

```
1 set appfw profile <profile-name> -HTMLErrorStatusCode <value> -
HTMLErrorStatusMessage <value> -useHTMLErrorObject ON
```

**Example:**

```
set appfw profile profile_1 -HTMLErrorStatusCode 404 -HTMLErrorStatusMessage
"Not Found" -useHTMLErrorObject ON
```

### Configure custom status code and message for XML error object in a WAF profile by using the CLI

At the command prompt, type:

```
1 set appfw profile <profile-name> -XMLErrorStatusCode <value> -
XMLErrorStatusMessage <value>
```

#### Example:

```
set appfw profile profile_1 -XMLErrorStatusCode 406 - XMLErrorStatusMessage
"Not Acceptable"
```

### Configure custom status code and message for JSON error object in a WAF profile by using the CLI

At the command prompt, type:

```
1 set appfw profile <profile-name> -JSONErrorStatusCode <value> -
JSONErrorStatusMessage <value>
```

#### Example:

```
set appfw profile profile_1 -JSONErrorStatusCode 500 - JSONErrorStatusMessage
"Internal Server Error"
```

### Configure custom status code and message for HTML, JSON, or XML error object in a WAF profile by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, click **Edit**.
3. In the **Create Web App Firewall Profile** page, click **Profile Settings** from the **Advanced Settings** section.
4. In the **Profile settings** section, set the following parameters.
  - a. HTML Error Object. Select the option for handling error scenarios using an HTML error object. Import the error object from a URL, file, or text.
  - b. HTML Error Status Code. Provide a custom error status code.
  - c. HTML Error Status Message. Provide a customer error message.

5. Click **OK** and **Done**.

**Note:**

The same procedure is applicable for JSON and XML custom error object settings.

The screenshot shows the 'Profile Settings' page with the 'HTML Settings' section expanded. Under 'HTML Error', the 'HTML Error Object' radio button is selected. Below this, a red box highlights the configuration for the selected object: 'HTML Error Object\*' is set to 'html\_error\_object', there is an 'Add' button, the 'HTML Error Status Code' is '404', and the 'HTML Error Status Message' is 'Not Found'. Other settings like 'Charset' (English US), 'Strip HTML Comments' (None), and 'Invalid Percent Handling' (Secure format) are visible below.

## Policy labels

May 2, 2023

A policy label consists of a set of policies, other policy labels, and virtual server-specific policy banks. The Web App Firewall evaluates each policy bound to the policy label in order of priority. If the policy matches, it filters the connection as specified in the associated profile. Then it does whatever the Goto parameter specifies, which can be to terminate policy evaluation, go to the next policy, or go to the policy with the specified priority. If the Invoke parameter is set, it terminates processing of the current policy label and begins to process the specified policy label or virtual server.

### To create an Web App Firewall policy label by using the command line

At the command prompt, type the following commands:

- `add appfw policylabel <labelName> http_req`
- `save ns config`

### Example

The following example creates a policy label named `policylabel1`.

```
1 add appfw policylabel policylabel1 http_req
2 save ns config
```

## To bind a policy to a policy label by using the command line

At the command prompt, type the following commands:

- `bind appfw policylabel <labelName> <policyName> <priority> [<gotoPriorityExpression>] [-invoke (<labelType> <labelName>)]`
- `save ns config`

### Example

The following example binds the policy1 to the policy label policylbl1 with a priority of 1.

```
1 bind appfw policylabel policylbl1 policy1 1
2 save ns config
```

## To configure an Web App Firewall policy label by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Policy Labels**.
2. In the details pane, do one of the following:
  - To add a new policy label, click **Add**.
  - To configure an existing policy label, select the policy label and the click **Open**.

The **Create Web App Firewall Policy Label** or the **Configure Web App Firewall Policy Label** dialog box opens. The dialog boxes are nearly identical.

3. If you are creating a new policy label, in the Create Web App Firewall Policy Label dialog box, type a name for your new policy label.

The name can begin with a letter, number, or the underscore symbol, and can consist of from one to 127 letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), colon (:), and underscore (\_) symbols.

4. Select **Insert Policy** to insert a new row and display a drop-down list with all existing Web App Firewall policies.
5. Select the policy you want to bind to the policy label, or select New Policy to create a new policy and follow the instructions in [To create and configure a policy by using the GUI](#). The policy that you selected or created is inserted into the list of globally bound Web App Firewall policies.
6. Make any additional adjustments.
  - To modify the policy priority, click the field to enable it, and then type a new priority. You can also select Regenerate Priorities to renumber the priorities evenly.

- To modify the policy expression, double click that field to open the Configure Web App Firewall Policy dialog box, where you can edit the policy expression.
  - To set the Goto Expression, double click field in the Goto Expression column heading to display the drop-down list, where you can choose an expression.
  - To set the Invoke option, double click field in the Invoke column heading to display the drop-down list, where you can choose an expression
7. Repeat steps 5 through 7 to bind any additional Web App Firewall policies you want to the policy label.
  8. Click **Create** or **OK**, and then click **Close**. A message appears in the status bar, stating that you have successfully created or modified the policy label.

## Policies

May 2, 2023

The Web App Firewall uses two types of policies: firewall policies and auditing policies. Firewall policies control which traffic is sent to the Web App Firewall. Auditing policies control the log server to which Web App Firewall logs are sent.

Firewall policies can be complex because the policy rule can consist of multiple expressions in the NetScaler expressions language, which is a full-fledged object oriented programming language capable of defining with extreme precision exactly which connections to filter. Because firewall policies operate within the context of the Web App Firewall, they must meet certain criteria that are connected to how the Web App Firewall functions and what traffic is appropriately filtered by it. As long as you keep these criteria in mind, however, firewall policies are similar to policies for other NetScaler features. The instructions here do not attempt to cover all aspects of writing firewall policies, but only provide an introduction to policies and cover those criteria that are unique to the Web App Firewall.

Auditing policies are simple because the policy rule is always `ns_true`. You need only specify the log server that you want to send logs to, the logging levels that you want to use, and a few other criteria that are explained in detail.

## Web App Firewall Policies

August 23, 2024

A firewall policy is a rule associated with a profile. The rule is an expression or group of expressions that define the types of request/response pairs that the Web App Firewall is to filter by applying the



profile. Firewall policy expressions are written in the NetScaler expressions language, an object-oriented programming language with special features to support specific NetScaler functions. The profile is the set of actions that the Web App Firewall is to use to filter request/response pairs that match the rule.

Firewall policies enable you to assign different filtering rules to different types of web content. Not all web content is alike. A simple website that uses no complex scripting and accesses and handles no private data might require only the level of protection provided by a profile created with basic defaults. Web content that contains JavaScript-enhanced web forms or accesses an SQL database probably requires more tailored protection. You can create a different profile to filter that content and create a separate firewall policy that can determine which requests are attempting to access that content. You then associate the policy expression with a profile you created and globally bind the policy to put it into effect.

The Web App Firewall processes only HTTP connections, and therefore uses a subset of the overall NetScaler expressions language. The information here is limited to topics and examples that are likely to be useful when configuring the Web App Firewall. Following are links to additional information and procedures for firewall policies:

- For procedures that explain how to create and configure a policy, see [Creating and Configuring Web App Firewall Policies](#).
- For a procedure that explains in detail how to create a policy rule (expression), see [To create or configure an Web App Firewall rule \(expression\)](#).
- For a procedure that explains how to use the Add Expression dialog box to create a policy rule, see [To add a firewall rule \(expression\) by using the Add Expression dialog box](#).
- For a procedure that explains how to view the current bindings for a policy, see [Viewing a Firewall Policy's Bindings](#).
- For procedures that explain how to bind an Web App Firewall policy, see [Binding Web App Firewall Policies](#).
- For detailed information about the NetScaler expressions language, see [Policies and Expressions](#).

**Note**

Web App Firewall evaluates the policies based on the configured priority and goto expressions. At the end of the policy evaluation, the last policy that evaluates to true is used and the security configuration of the corresponding profile is invoked for processing the request.

For example, Consider a scenario where there are 2 policies.

- Policy\_1 is a generic policy with Expression=true and has a corresponding profile\_1 which is a basic profile. The priority is set to 100.
- Policy\_2 is more specific with Expression=HTTP.REQ.URL.CONTAINS("XYZ") and has a cor-

responding profile\_2 which is an advance profile. The GoTo Expression is set to NEXT and the priority is set to 95 which is a higher priority compared to Policy\_1.

In this scenario, if the target string “XYZ” is detected in the URL of the processed request, Policy\_2 match is triggered as it has a higher priority even though Policy\_1 is also a match. However, as per the GoTo expression configuration of Policy\_2, the policy evaluation continues and the next policy\_1 is also processed. At the end of the policy evaluation, Policy\_1 evaluates as true and the basic security checks configured in Profile\_1 are invoked.

If the Policy\_2 is modified and the GoTo Expression is changed from **NEXT** to **END**, the processed request that has the target string “XYZ”, triggers the Policy\_2 match due to priority consideration and as per the GoTo expression configuration, the policy evaluation ends at this point. Policy\_2 evaluates as true and the advanced security checks configured in Profile\_2 are invoked.

#### **NEXT**

#### **END**

Policy evaluation is completed in one pass. Once the policy evaluation is completed for the request and the corresponding profile actions are invoked, the request does not go through another round of policy evaluation.

## Creating and configuring Web App Firewall policies

May 2, 2023

A firewall policy consists of two elements: a *rule*, and an associated *profile*. The rule selects the HTTP traffic that matches the criteria that you set, and sends that traffic to the Web App Firewall for filtering. The profile contains the filtering criteria that the Web App Firewall uses.

The policy rule consists of one or more expressions in the NetScaler expressions language. The NetScaler expressions syntax is a powerful, object-oriented programming language that enables you to precisely designate the traffic that you want to process with a specific profile. For users who are not familiar with the NetScaler expressions language syntax, or who prefer to configure their NetScaler appliance by using a web-based interface, the GUI provides two tools: the **Prefix** menu and the **Add Expression** dialog box. Both help you to write expressions that select exactly the traffic that you want to process. Experienced users who are thoroughly familiar with the syntax may prefer to use the NetScaler command line to configure their NetScaler appliances.

#### **Note:**

In addition to the default expressions syntax, for backward compatibility the NetScaler operating system supports the NetScaler classic expressions syntax on NetScaler Classic and nCore

appliances and virtual appliances. Classic expressions are not supported on NetScaler Cluster appliances and virtual appliances. Current NetScaler users who want to migrate existing configurations to the NetScaler Cluster must migrate any policies that contain classic expressions to the default expressions syntax.

For detailed information about the NetScaler expressions languages, see [Policies and Expressions](#).

You can create a firewall policy by using the GUI or the NetScaler command line.

## To create and configure a policy by using the command line interface

At the command prompt, type the following commands:

- `add appfw policy <name><rule> <profileName>`
- `save ns config`

### Example

The following example adds a policy named pl-blog, with a rule that intercepts all traffic to or from the host blog.example.com, and associates that policy with the profile pr-blog. This is an appropriate policy to protect a blog hosted on a specific host name.

```
1 add appfw policy pl-blog "HTTP.REQ.HOSTNAME.DOMAIN.EQ("blog.example.com")" pr-blog
```

## To create and configure a policy by using the GUI

1. Navigate to **Security > Web App Firewall > Policies**.
2. In the details pane, do one of the following:
  - To create a firewall policy, click **Add**. The **Create Web App Firewall Policy** is displayed.
  - To edit an existing firewall policy, select the policy, and then click **Edit**.

The **Create Web App Firewall Policy** or **Configure Web App Firewall Policy** is displayed.

3. If you are creating a firewall policy, in the **Create Web App Firewall Policy** dialog box, Policy Name text box, type a name for your new policy.

The name can begin with a letter, number, or the underscore symbol, and can consist of from one to 128 letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), colon (:), and underscore (\_) symbols.

If you are configuring an existing firewall policy, this field is read-only. You cannot modify it.

4. Select the profile that you want to associate with this policy from the Profile drop-down list. You can create a profile to associate with your policy by clicking **New**, and you can modify an existing profile by clicking **Modify**.
5. In the Expression text area, create a rule for your policy.
  - You can type a rule directly into the text area.
  - You can click **Prefix** to select the first term for your rule, and follow the prompts.
  - You can click **Add** to open the Add Expression dialog box, and use it to construct the rule.
6. Click **Create** or **OK**, and then click **Close**.

### To create or configure a Web App Firewall rule (expression)

The policy rule, also called the *expression*, defines the web traffic that the Web App Firewall filters by using the profile associated with the policy. Like other NetScaler policy rules (or *expressions*), the Web App Firewall rules use NetScaler expressions syntax. This syntax is powerful, flexible, and extensible. It is too complex to describe completely in this set of instructions. You can use the following procedure to create a simple firewall policy rule, or you can read it as an overview of the policy creation process.

1. If you have not already done so, navigate to the appropriate location in the **Web App Firewall** wizard or the NetScaler GUI to create your policy rule:
  - If you are configuring a policy in the **Web App Firewall** wizard, in the navigation pane, click **Web App Firewall**, then in the details pane click **Web App Firewall Wizard**, and then navigate to the **Specify Rule** screen.
  - If you are configuring a policy manually, in the navigation pane, expand **Web App Firewall**, then **Policies**, and then **Firewall**. In the details pane, to create a policy, click **Add**. To modify an existing policy, select the policy, and then click **Open**.
2. On the **Specify Rule** screen, the **Create Web App Firewall Profile** dialog box, or the **Configure Web App Firewall Profile** dialog box, click **Prefix**, and then choose the prefix for your expression from the drop-down list. Your choices are:
  - **HTTP**. Choose an HTTP protocol if you want to examine some aspect of the request that pertains to the protocol.
  - **SYS**. Choose protected websites if you want to examine some aspect of the request that pertains to the recipient of the request.
  - **CLIENT**. Choose a client that sent the request. Choose this if you want to examine some aspect of the sender of the request.
  - **SERVER**. Choose a client to which the request was sent and if you want to examine some aspect of the recipient of the request.

After you choose a prefix, the Web App Firewall displays a two-part prompt window that displays the possible next choices at the top, and a brief explanation of what the selected choice means at the bottom.

3. Choose your next term.

If you chose the HTTP protocol as your prefix, your only choice is REQ, which specifies the Request/Response pair. (The Web App Firewall operates on the request and response as a unit instead of on each separately.) If you chose another prefix, your choices are more varied. For help on a specific choice, click that choice once to display information about it in the lower prompt window.

When you have decided which term you want, double-click it to insert it into the **Expression** window.

4. Type a period after the term you just chose. You are then prompted to choose your next term, as described in the previous step. When a term requires that you type a value, fill in the appropriate value. For example, if you choose HTTP.REQ.HEADER(""), type the header name between the quotation marks.

5. Continue choosing terms from the prompts and filling in any values that are needed, until your expression is finished.

Following are some examples of expressions for specific purposes.

- **Specific web host.** To match traffic from a particular web host:

```
1 HTTP.REQ.HEADER("Host").EQ("shopping.example.com")
```

For `shopping.example.com`, substitute the name of the web host that you want to match.

- **Specific web folder or directory.** To match traffic from a particular folder or directory on a Web host:

```
1 HTTP.REQ.URL.STARTSWITH("https://www.example.com/folder")
```

For `www.example.com`, substitute the name of the web host. For the folder, substitute the folder or path to the content that you want to match. For example, if your shopping cart is in a folder called `/solutions/orders`, you substitute that string for folder.

- **Specific type of content: GIF images.** To match GIF format images:

```
1 HTTP.REQ.URL.ENDSWITH(".png")
```

To match other format images, substitute another string in place of `.png`.

- **Specific type of content: scripts.** To match all CGI scripts located in the CGI-BIN directory:

```
1 HTTP.REQ.URL.STARTSWITH("https://www.example.com/CGI-BIN")
```

To match all JavaScript with .js extensions:

```
1 HTTP.REQ.URL.ENDSWITH(".js")
```

For more information about creating policy expressions, see [Policies and Expressions](#).

**Note:**

If you use the command line to configure a policy, remember to escape any double quotation marks within NetScaler expressions. For example, the following expression is correct if entered in the GUI:

```
1 HTTP.REQ.HEADER("Host").EQ("shopping.example.com")
```

If entered at the command line, however, you must type the following command instead:

```
1 HTTP.REQ.HEADER("Host").EQ("shopping.example.com")
```

## To add a firewall rule (expression) by using the Add Expression dialog box

The **Add Expression** dialog box (also referred to as the Expression Editor) helps users who are not familiar with the NetScaler expressions language to construct a policy that matches the traffic that they want to filter.

1. If you have not already done so, navigate to the appropriate location in the **Web App Firewall** wizard or the NetScaler GUI:
  - If you are configuring a policy in the **Web App Firewall** wizard, in the navigation pane, click **Web App Firewall**, then in the details pane click **Web App Firewall Wizard**, and then navigate to the **Specify Rule** screen.
  - If you are configuring a policy manually, in the navigation pane, expand **Web App Firewall**, then **Policies**, and then **Firewall**. In the details pane, to create a policy, click **Add**. To modify an existing policy, select the policy, and then click **Open**.
2. On the **Specify Rule** screen, in the **Create Web App Firewall Profile** dialog box, or in the **Configure Web App Firewall Profile** dialog box, click **Add**.
3. In the **Add Expression dialog** box, in the Construct Expression area, in the first list box, choose one of the following prefixes:
  - **HTTP**. Choose HTTP protocol if you want to examine some aspect of the request that pertains to the HTTP protocol. The default choice.
  - **SYS**. Choose protected websites if you want to examine some aspect of the request that pertains to the recipient of the request.

- **CLIENT.** Choose the computer that sent the request if you want to examine some aspect of the sender of the request.
  - **SERVER.** Choose the computer to which the request was sent and to examine some aspect of the recipient of the request.
4. In the second list box, choose your next term. The available terms differ depending on the choice you made in the previous step, because the dialog box automatically adjusts the list to contain only those terms that are valid for the context. For example, if you selected HTTP in the previous list box, the only choice is REQ, for requests. Because the Web App Firewall treats requests and associated responses as a single unit and filters both, you do not need to specify responses separately. After you choose your second term, a third list box appears to the right of the second. The Help window displays a description of the second term, and the **Preview Expression** window displays your expression.
  5. In the third list box, choose the next term. A new list box appears to the right, and the Help window changes to display a description of the new term. The **Preview Expression** window updates to display the expression as you have specified it to that point.
  6. Continue choosing terms, and when prompted filling in arguments, until your expression is complete. If you make a mistake or want to change your expression after you have already selected a term, you can simply choose another term. The expression is modified, and any arguments or more terms that you added after the term that you modified are cleared.
  7. When you have finished constructing your expression, click **OK** to close the **Add Expression** dialog box. Your expression is inserted into the **Expression** text area.

## Binding Web App Firewall policies

September 19, 2023

After you have configured your Web App Firewall policies, you bind them to Global or a bind point to put them into effect. After binding, any request or response that matches an Web App Firewall policy is transformed by the profile associated with that policy.

When you bind a policy, you assign a priority to it. The priority determines the order in which the policies you define are evaluated. You can set the priority to any positive integer. In the NetScaler OS, policy priorities work in reverse order - the higher the number, the lower the priority.

Because the Web App Firewall feature implements only the first policy that a request matches, not any additional policies that it might also match, policy priority is important for achieving the results that you intend. If you give your first policy a low priority (such as 1000), you configure the Web App Firewall to perform it only if other policies with a higher priority do not match a request. If you give your first policy a high priority (such as 1), you configure the Web App Firewall to perform it first, and

skip any other policies that might also match. You can leave yourself plenty of room to add other policies in any order, without having to reassign priorities, by setting priorities with intervals of 50 or 100 between each policy when you bind your policies.

For more information about binding policies on the NetScaler appliance, see [“Policies and Expressions.”](#)

## To bind an Web App Firewall policy by using the command line interface

At the command prompt, type the following commands:

- `bind appfw global <policyName>`
- `bind appfw profile <profile_name> -crossSiteScripting data`

### Example

The following example binds the policy named pl-blog and assigns it a priority of 10.

```
1 bind appfw global pl-blog 10
2 save ns config
```

## Configure log expressions

The log expression support for binding Web App Firewall is added to log HTTP header information when violations occur.

Log expression is bound to the Web App Firewall profile. This log expression is evaluated and sent to the logging framework when a violation occurs.

The Web App Firewall violation log record with HTTP header information is recorded. You can specify a custom log expression and that helps in analysis and diagnosis when violations are generated for the current flow (request/response).

### Example configuration

```
1 bind appfw profile <profile> -logexpression <string> <expression>
2 add policy expression headers "\" HEADERS(100):\"+HTTP.REQ.FULL_HEADER"
3 add policy expression body_100 "\"BODY:\"+HTTP.REQ.BODY(100)"
4 bind appfw profile test -logExpression log_body body_100
5 bind appfw profile test -logExpression log_headers headers
6 bind appfw profile test -logExpression "\"URL:\"+HTTP.REQ.URL+\" IP:\"+
 CLIENT.IP.SRC"
```



## Example logs

```
1 Dec 8 16:55:33 <local0.info> 10.87.222.145 CEF:0|Citrix|NetScaler|NS12
.1|APPFW|APPFW_LOGEXPRESSION|6|src=10.217.222.128 spt=26409 method=
POST request=http://10.217.222.44/test/credit.html msg= HEADERS(100)
:POST /test/credit.html HTTP/1.1^M User-Agent: curl/7.24.0 (amd64-
portbld-freebsd8.4) libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3^M Host:
10.217.222.44^M Accept: /^M Content-Length: 33^M Content-Type:
application/x-www-form-urlencoded^M ^M cn1=58 cn2=174 cs1=test cs2=
PPE1 cs4=ALERT cs5=2017 act=not blocked
```

```
1 Dec 8 16:55:33 <local0.info> 10.87.222.145 CEF:0|Citrix|NetScaler|NS12
.1|APPFW|APPFW_LOGEXPRESSION|6|src=10.217.222.128 spt=26409 method=
POST request=http://10.217.222.44/test/credit.html msg=BODY:ata\=
asdadasdasdasdddddddddddddddddd cn1=59 cn2=174 cs1=test cs2=PPE1 cs4=
ALERT cs5=2017 act=not blocked
```

```
1 Dec 8 16:55:33 <local0.info> 10.87.222.145 CEF:0|Citrix|NetScaler|NS12
.1|APPFW|APPFW_LOGEXPRESSION|6|src=10.217.222.128 spt=26409 method=
POST request=http://10.217.222.44/test/credit.html msg=URL:/test/
credit.html IP:10.217.222.128 cn1=60 cn2=174 cs1=test cs2=PPE1 cs4=
ALERT cs5=2017 act=not blocked
```

```
1 Other violation logs
2 Dec 8 16:55:33 <local0.info> 10.87.222.145 CEF:0|Citrix|NetScaler|NS12
.1|APPFW|APPFW_STARTURL|6|src=10.217.222.128 spt=26409 method=POST
request=http://10.217.222.44/test/credit.html msg=Disallow Illegal
URL. cn1=61 cn2=174 cs1=test cs2=PPE1 cs4=ALERT cs5=2017 act=not
blocked
```

```
1 Dec 8 16:55:33 <local0.info> 10.87.222.145 CEF:0|Citrix|NetScaler|NS12
.1|APPFW|APPFW_SAFECOMMERCE|6|src=10.217.222.128 spt=26409 method=
POST request=http://10.217.222.44/test/credit.html msg=Maximum
number of potential credit card numbers seen cn1=62 cn2=174 cs1=test
cs2=PPE1 cs4=ALERT cs5=2017 act=not blocked
```

### Note

1. Only auditlog support is available. Support for logstream and visibility in security insight would be added in future release versions.
2. If auditlogs are generated, then only 1024 bytes of data can be generated per log message.
3. If log streaming is used, then the limits are based on maximum supported size of log stream/ipfix protocol size limitations. Maximum support size for log stream is larger than 1024 bytes.

## To bind an Web App Firewall policy by using the GUI

1. Do one of the following:
  - Navigate to **Security > Web App Firewall**, and in the details pane, click Web App Firewall policy manager.
  - Navigate to **Security > Web App Firewall > Policies > Firewall Policies**, and in the details pane, click **Policy Manager**.
2. In the **Web App Firewall Policy Manager** dialog, choose the bind point to which you want to bind the policy from the drop-down list. The choices are:
  - **Override Global** - Policies that are bound to this bind point process traffic from all interfaces on the NetScaler appliance, and are applied before any other policies.
  - **VPN Virtual Server** - Policies that are bound to a VPN virtual server are applied to the processed traffic or a specific web app in the policy expression. After selecting the VPN virtual server, you must also select the specific VPN virtual server to which you want to bind this policy.

By binding a security policy to the VPN virtual server, you can protect all the applications behind it.
  - **LB Virtual Server**. Policies that are bound to a load balancing virtual server are applied only to traffic that is processed by that load balancing virtual server, and are applied before any Default Global policies. After selecting LB Virtual Server, you must also select the specific load balancing virtual server to which you want to bind this policy.
  - **CS Virtual Server**. Policies that are bound to a content switching virtual server are applied only to traffic that is processed by that content switching virtual server, and are applied before any Default Global policies. After selecting CS Virtual Server, you must also select the specific content switching virtual server to which you want to bind this policy.
  - **Default Global**. Policies that are bound to this bind point process all traffic from all interfaces on the NetScaler appliance.
  - **Policy Label**. Policies that are bound to a policy label process traffic that the policy label routes to them. The policy label controls the order in which policies are applied to this traffic.
  - **None**. Do not bind the policy to any bind point.
3. Click **Continue**. A list of existing Web App Firewall policies appears.
4. Select the policy you want to bind by clicking it.
5. Make any additional adjustments to the binding.
  - To modify the policy priority, click the field to enable it, and then type a new priority. You can also select Regenerate Priorities to renumber the priorities evenly.
  - To modify the policy expression, double click that field to open the **Configure Web App Firewall Policy** dialog box, where you can edit the policy expression.

- To set the Goto Expression, double click **field** in the Goto Expression column heading to display the drop-down list, where you can choose an expression.
  - To set the Invoke option, double click field in the Invoke column heading to display the drop-down list, where you can choose an expression
6. Repeat steps 3 through 6 to add any additional Web App Firewall policies you want to globally bind.
  7. Click **OK**. A message appears in the status bar, stating that the policy has been successfully bound.

## Viewing a policy bindings

May 2, 2023

You can quickly check to determine what bindings are in place for any firewall policy by viewing the bindings in the GUI.

### To view bindings for an Web App Firewall policy

1. Navigate to **Security > NetScaler Web App Firewall > Policies > Firewall Policies**
2. In the details pane, select the policy that you want to check, and then click Show Bindings. The Binding Details for Policy: Policy message box is displayed, with a list of bindings for the selected policy.
3. Click **Close**.

## Supplemental information about Web App Firewall policies

June 26, 2024

Following is supplemental information about particular aspects of Web App Firewall policies that system administrators who manage the Web App Firewall might need to know.

### Correct but unexpected behavior

Web application security and modern websites are complex. In a number of scenarios, a NetScaler policy might cause the Web App Firewall to behave differently in certain situations than a user who

is familiar with policies would normally expect. Following are a number of cases where the Web App Firewall may behave in an unexpected fashion.

- **Request with a missing HTTP Host header and an absolute URL.** When a user sends a request, in the majority of cases the request URL is relative. That is, it takes as its starting point the Referer URL, the URL where the user's browser is located when it sends the request. If a request is sent without a Host header, and with a relative URL, the request is normally blocked both because it violates the HTTP specification and because a request that fails to specify the host can under some circumstances constitute an attack. If a request is sent with an absolute URL, however, even if the host header is present, the Web App Firewall picks up the domain from the absolute URL and does an inspection.

## Auditing policies

February 13, 2024

Auditing policies determine the messages generated and logged during a Web App Firewall session. The messages are logged in SYSLOG format to the local NSLOG server or to an external logging server. Different types of messages are logged based on the level of logging selected.

To create an auditing policy, you must first create either an NSLOG server or a SYSLOG server. And then you create the policy and specify log type and the server to which logs are sent.

### To create an auditing server by using the command line interface

You can create two different types of auditing server: an NSLOG server or a SYSLOG server. The command names are different, but the parameters for the commands are the same.

To create an auditing server, at the command prompt, type the following commands:

- `add audit syslogAction <name> <serverIP> [-serverPort <port>] -logLevel <logLevel> ... [-dateFormat ( MMDDYYYY | DDMMYYYY )] [-logFacility <logFacility>] [-tcp ( NONE | ALL )] [-acl ( ENABLED | DISABLED )] [-timeZone ( GMT_TIME | LOCAL_TIME )] [-userDefinedAuditlog ( YES | NO )] [-appflowExport ( ENABLED | DISABLED )]`
- `save ns config`

### Example

The following example creates a syslog server named `syslog1` at IP `10.124.67.91`, with log levels of emergency, critical, and warning, log facility set to `LOCAL1`, that logs all TCP connections:

```
1 add audit syslogAction syslog1 10.124.67.91 -logLevel emergency
 critical warning -logFacility
2 LOCAL1 -tcp ALL
3 save ns config
```

### To modify or remove an auditing server by using the command line interface

- To modify an auditing server, type the `set audit <type>` command, the name of the auditing server, and the parameters to be changed, with their new values.
- To remove an auditing server, type the `rm audit <type>` command and the name of the auditing server.

### Example

The following example modifies the syslog server named `syslog1` to add errors and alerts to the log level:

```
1 set audit syslogAction syslog1 10.124.67.91 -logLevel emergency
 critical warning alert error
2 -logFacility LOCAL1 -tcp ALL
3 save ns config
```

### To create or configure an auditing server by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Policies > Auditing > Nslog**.
2. In the Nslog Auditing page, click **Servers** tab.
3. Do one of the following:
  - To add a new auditing server, click **Add**.
  - To modify an existing auditing server, select the server, and then click **Edit**.
4. In the **Create Auditing Server** page, set the following parameters:
  - Name
  - Server Type
  - IP Address
  - Port
  - Log Levels

- Log Facility
- Date Format
- Time Zone
- TCP Logging
- ACL Logging
- User Configurable Log Messages
- AppFlow Logging
- Large Scale NAT Logging
- ALG messages logging
- Subscriber logging
- SSL Interception
- URL Filtering
- Content Inspection Logging

5. Click **Create** and **Close**.

### To create an auditing policy by using the command line interface

You can create an NSLOG policy or a SYSLOG policy. The type of policy must match the type of server. The command names for the two types of policy are different, but the parameters for the commands are the same.

At the command prompt, type the following commands:

- `add audit syslogPolicy <name> <-rule > <action>`
- `save ns config`

### Example

The following example creates a policy named syslogP1 that logs Web App Firewall traffic to a syslog server named syslog1.

```
add audit syslogPolicy syslogP1 rule "ns_true"action syslog1
save ns config
```

### To configure an auditing policy by using the command line interface

At the command prompt, type the following commands:

- `set audit syslogPolicy <name> [-rule <expression>] [-action <string>]`
- `save ns config`

## Example

The following example modifies the policy named syslogP1 to log Web App Firewall traffic to a syslog server named syslog2.

```
set audit syslogPolicy syslogP1 rule "ns_true"action syslog2
save ns config
```

## To configure an auditing policy by using the GUI

1. Navigate to **Security > NetScaler Web App Firewall > Policies**.
2. In the details pane, click **Audit Nslog Policy**.
3. In the Nslog Auditing page, click **Policies** tab and do one of the following:
  - To add a new policy, click **Add**.
  - To modify an existing policy, select the policy, and then click **Edit**.
4. In the **Create Auditing Nslog Policy** page, set the following parameters:
  - Name
  - Auditing Type
  - Expression Type
  - Server
5. Click **Create**.

## Imports

April 15, 2024

Several Web App Firewall features make use of external files that you upload to the Web App Firewall when configuring it. Using the GUI, you manage those files in the Imports pane, which has four tabs corresponding to the four types of files you can import: HTML error objects, XML error objects, XML schemas, and Web Services Description Language (WSDL) files. Using the NetScaler command line, you can import these types of files, but you cannot export them.

### HTML error object

When a user's connection to an HTML or Web 2.0 page is blocked, or a user asks for a non-existent HTML or Web 2.0 page, the Web App Firewall sends an HTML-based error response to the user's

browser. When configuring which error response the Web App Firewall must use, you have two choices:

- You can configure a redirect URL, which can be hosted on any Web server to which users also have access. For example, if you have a custom error page on your Web server, 404.html, you can configure the Web App Firewall to redirect users to that page when a connection is blocked.
- You can configure an HTML error object, which is an HTML-based Web page that is hosted on the Web App Firewall itself. If you choose this option, you must upload the HTML error object to the Web App Firewall. You do that in the Imports pane, on the HTML Error Object tab.

The error object must be a standard HTML file that contains no non-HTML syntax except for Web App Firewall error object customization variables. It cannot contain any CGI scripts, server-parsed code, or PHP code. The customization variables enable you to embed troubleshooting information in the error object that the user receives when a request is blocked. While most requests that the Web App Firewall blocks are illegitimate, even a properly configured Web App Firewall can occasionally block legitimate requests, especially when you first deploy it or after you make significant changes to your protected websites. By embedding information in the error page, you provide the user with the information that he or she needs to give to the technical support person so that any issues can be fixed.

The Web App Firewall error page customization variables are:

- `#{NS_TRANSACTION_ID}`. The transaction ID that the Web App Firewall assigned to this transaction.
- `#{NS_APPFW_SESSION_ID}`. The Web App Firewall session ID.
- `#{NS_APPFW_VIOLATION_CATEGORY}`. The specific Web App Firewall security check or rule that was violated.
- `#{NS_APPFW_VIOLATION_LOG}`. The detailed error message associated with the violation.
- `#{COOKIE}` The contents of the specified cookie. For `<CookieName>`, substitute the name of the specific cookie that you want to display on the error page. If you have multiple cookies whose contents you want to display for troubleshooting, you can use multiple instances of this customization variable, each with the appropriate cookie name.

**Note:** If you have blocking enabled for the Cookie Consistency Check, any blocked cookies are not displayed on the error page because the Web App Firewall blocks them.

To use these variables, you embed them in the HTML or XML of the error page object as if they were an ordinary text string. When the error object is displayed to the user, for each customization variable the Web App Firewall substitutes the information to which the variable refers. An example HTML error page that uses custom variables is shown below.

```
1 <!doctype html public "-//w3c//dtd html 4.0//en"> <html> <head> <
 title>Page Not Accessible</title> </head> <body> <h1>Page Not
 Accessible</h1> <p>The page that you accessed is not available. You
```



```

 can:</p> return to the home page
, re-establish your session, and try again, or,
report this incident to the help desk via <a href="mailto:[
helpDeskEmailAddress]">email or by calling [
helpDeskPhoneNumber]. <p>If you contact the help desk,
please provide the following information:</p> <table cellpadding=8
width=80%> <tr><th align="right" width=30%>Transaction ID:</th><td
align="left" valign="top" width=70%>${
2 NS_TRANSACTION_ID }
3 </td></tr> <tr><th align="right" width=30%>Session ID:</th><td align=
"left" valign="top" width=70%>${
4 NS_APPFW_SESSION_ID }
5 </td></tr> <tr><th align="right" width=30%>Violation Category:</th><
td align="left" valign="top" width=70%>${
6 NS_APPFW_VIOLATION_CATEGORY }
7 </td></tr> <tr><th align="right" width=30%>Violation Log:</th><td
align="left" valign="top" width=70%>${
8 NS_APPFW_VIOLATION_LOG }
9 </td></tr> <tr><th align="right" width=30%>Cookie Name:</th><td align
="left" valign="top" width=70%>${
10 COOKIE("[cookieName]") }
11 </td></tr> </table> <body> <html>

```

To use this error page, copy it into a text or HTML editor. Substitute the appropriate local information for the following variables, which are enclosed in square brackets to distinguish them from the NetScaler variables. (Leave those unchanged.):

- [homePage]. The URL for your website's home page.
- [helpDeskEmailAddress]. The email address that you want users to use to report blocking incidents.
- [helpDeskPhoneNumber]. The phone number that you want users to call to report blocking incidents.
- [cookieName]. The name of the cookie whose contents you want to display on the error page.

## XML error object

When a user's connection to an XML page is blocked, or a user asks for a nonexistent XML application, the Web App Firewall sends an XML-based error response to the user's browser. You configure the error response by uploading an XML-based error page to the Web App Firewall in the Imports Pane, on the XML Error Object tab. All XML error responses are hosted on the Web App Firewall. You cannot configure a redirect URL for XML applications.

### Note:

You can use the same customization variables in an XML error object as in an HTML error object.

## XML Schema

When the Web App Firewall performs a validation check on a user's request for an XML or Web 2.0 application, it can validate the request against the XML schema or design type document (DTD) for that application and reject any request that does not follow the schema or DTD. Both an XML schema and a DTD are standard XML configuration files that describe the structure of a specific type of XML document.

## WSDL

When the Web App Firewall performs a validation check on a user's request for an XML SOAP-based web service, it can validate the request against the web services type definition (WSDL) file for that web service. A WSDL file is a standard XML SOAP configuration file that defines the elements of a specific XML SOAP web service.

## API Specification Import Object

API specification defines the design of an API, including endpoints, methods, parameters, and data formats. The import API specification capability allows you to import the open API specification, which is generally used to describe the REST API. When the Web App Firewall performs a validation check on a user's request for an API-based web service, it validates the request against the schema specified in the API specification file for that web service. NetScaler supports schema validations for a REST API with payload being application JSON and ProtoBuf for gRPC API requests.

NetScaler supports the following specification formats:

- Open API - Swagger 2.0, OAS 3.0,3.1
- ProtoBuf - v3 and v2

For more information, see [API Specification Import](#).

## Import and export files

April 15, 2024

You can import HTML or XML error objects, XML schemas, DTDs, and WSDLs to the Web App Firewall by using the GUI or the command line. You can edit any of these files in a web-based text area after importing them, to make small changes directly on the NetScaler instead of having to make them on your computer and then reimport them. Finally, you can export any of these files to your computer, or delete any of these files, by using the GUI.

**Note:**

You cannot delete or export an imported file by using the command line.

**To import a file by using the command line interface**

At the command prompt, type the following commands:

- `import appfw htmlerrorpage <src> <name>`
- `<save> ns config`

**Example**

The following example imports an HTML error object from a file named error.html and assigns it the name HTMLError.

```
1 import htmlerrorpage error.html HTMLError
2 save ns config
```

**To import a file by using the GUI**

Before you attempt to import an XML schema, DTD, or WSDL file, or an HTML or XML error object from a network location, verify that the NetScaler can connect to the Internet or LAN computer where the file is located. Otherwise, you cannot import the file or object.

1. Navigate to **Security > NetScaler Web App Firewall > Imports**.
2. Navigate to **Application Firewall > Imports**.
3. In the **Application Firewall Imports** pane, select the tab for the type of file you want to import, and then click **Add**.

The tabs are HTML Error Page, XML Error Page, XML Schema or WSDL. The upload process is identical on all four tabs from the user point of view.

4. Fill in the dialog fields.
  - **Name**—A name for the imported object.
  - **Import From**—Choose the location of the HTML file, XML file, XML schema or WSDL that you want to import in the drop-down list:
    - **URL:** A web URL on a website accessible to the appliance.
    - **File:** A file on a local or networked hard disk or other storage device.
    - **Text:** Type or paste the text of the custom response directly into a text field in the GUI.

The third text box changes to the appropriate value. The three possible values are provided below.

- **URL**—Type the URL into the text box.
  - **File**—Type the path and filename to the HTML file directly, or click Browse and browse to the HTML file.
  - **Text**—The third field is removed, leaving a blank space.
5. Click **Continue**. The File Contents dialog is displayed. If you chose URL or File, the File Contents text box contains the HTML file that you specified. If you chose Text, the File Contents text box is empty.
  6. If you chose Text, type or copy and paste the custom response HTML that you want to import.
  7. Click **Done**.
  8. To delete an object, select the object, and then click **Delete**.

### To export a file by using the GUI

Before you attempt to export an XML schema, DTD, or WSDL file, or an HTML or XML error object, verify that the Web App Firewall appliance can access the computer where the file is to be saved. Otherwise, you cannot export the file.

1. Navigate to **Security > Web App Firewall > Imports**.
2. In the **Web App Firewall Imports** pane, select the tab for the type of file you want to export.  
The export process is identical on all four tabs from the user point of view.
3. Select the file that you want to export.
4. Expand the Action drop-down list, and select **Export**.
5. In the dialog box, choose **Save File** and click **OK**.
6. In the **Browse** dialog box, navigate to the local file system and directory where you want to save the exported file, and click **Save**.

### To edit an HTML or XML Error Object in the GUI

You edit the text of HTML and XML error objects in the GUI without exporting and then reimporting them.

1. Navigate to **Security > NetScaler Web App Firewall > Imports**, and then select the tab for the type of file that you want to modify.

2. Navigate to **Application Firewall > Imports**, and then select the tab for the type of file that you want to modify.
3. Select the file that you want to modify, and then click **Edit**.

The text of the HTML or XML error object is displayed in a browser text area. You can modify the text by using the standard browser-based editing tools and methods for your browser.

Note: The edit window is designed to allow you to make minor changes to your HTML or XML error object. To make extensive changes, you may prefer to export the error object to your local computer and use standard HTML or XML web page editing tools.

4. Click **OK**, and then click **Close**.

## Global configuration

December 4, 2020

The Web App Firewall global configuration affects all profiles and policies. The Global Configuration items are:

- **Engine Settings.** A collection of global settings—session cookie name, session time-out, maximum session lifetime, logging header name, undefined profile, default profile, and import size limit—that pertain to all connections that the Web App Firewall processes, rather than to a specific subset of connections.
- **Confidential Fields.** A set of form fields in web forms that contain sensitive information that must not be logged to the Web App Firewall logs. Form fields such as password fields on a logon page or credit card information on a shopping cart checkout form are normally designated as confidential fields.
- **Field Types.** The list of web form field types used by the Field Formats security check. Each of these field types is defined by a PCRE-compliant regular expression that defines the type of data and the minimum/maximum length of data that must be allowed in that type of form field.
- **XML Content Types.** The list of content types recognized as XML and subjected to XML-specific security checks. Each of these content types is defined by a PCRE-compliant regular expression that defines the exact MIME type assigned to that content.
- **JSON Content Types.** The list of content types recognized as JSON and subjected to JSON-specific security checks. Each of these content types is defined by a PCRE-compliant regular expression that defines the exact MIME type assigned to that content.

## Engine settings

May 2, 2023

The engine settings affect all requests and responses that the NetScaler Web App Firewall processes. Following are the settings:

- **Cookie name**—The name of the cookie that stores the NetScaler session ID.
- **Session timeout**—The maximum inactive period allowed. If a user session shows no activity for this length of time, the session is terminated and the user is required to reestablish it by visiting a designated start page.
- **Cookie post-encrypts prefix**—The string that precedes the encrypted portion of any encrypted cookies.
- **Maximum session lifetime**—The maximum amount of time, in seconds, that a session is allowed to remain live. After this period is reached, the session is terminated and the user is required to reestablish it by visiting a designated start page. This setting cannot be less than the session timeout. To disable this setting, so that there is no maximum session lifetime, set the value to zero (0).
- **Logging header name**—The name of the HTTP header that holds the Client IP, for logging.
- **Undefined profile**—The profile applied when the corresponding policy action evaluates as undefined.
- **Default profile**—The profile applied to connections that do not match a policy.
- **Import size limit**—The maximum byte count of all files imported to the appliance, including signatures, WSDLs, schemas, HTML, and XML error pages. During an import, if the size of the imported object causes the cumulative count of all imported files to exceed the configured limit, the import operation fails. And the appliance displays the following error message: *“ERROR: Import failed - exceeding the configured total size limit on the imported objects”*.
- **Learn message rate limit**—The maximum number of requests and responses per second that the learning engine is to process. Any additional requests or responses over this limit are not sent to the learning engine.
- **Proxy Server** - A proxy server is an intermediate server that retrieves data from the internet on behalf of the user. It provides as an additional layer of security for your appliance. The NetScaler appliance that has proxy authentication enabled authenticates itself with the proxy server before downloading the updates from the internet. This way, it protects the appliances from malicious downloads. Configure the following parameters:
  - **Proxy Server** –The IP address of the proxy server from which the latest AWS signatures are downloaded.
  - **Proxy Port** - The port number of the proxy server from which the latest AWS signatures are downloaded.

- **Proxy Username** - The port number of the proxy server from which the latest AWS signatures are downloaded.
- **Proxy Password** - Password to authenticate to the proxy server for downloading signature updates.
- **Entity decoding**—Decode HTML entities when running Web App Firewall checks.
- **Log malformed request**—Enable logging of malformed HTTP requests.
- **Use configurable secret key**—Use a configurable secret key for Web App Firewall operations. This secret key is used for signing and verifying data. When “useConfigurableSecretKey” is turned ON, you must use the key enabled in the “set ns encryptionParams” parameter.
- **Reset learned data**—Remove all learned data from the Web App Firewall. Restarts the learning process by collecting fresh data.

Two settings, *Reset Learned Data* and *Signatures Auto-Update*, are found in different places depending on whether you use the command interface or the NetScaler GUI to configure your NetScaler Web App Firewall. When using the command interface, you configure Reset Learned Data by using the `reset appfw learning data` command. This takes no parameters and has no other functions. You can configure the signature auto-Update in the `set appfw settings` command. The `-signatureAutoUpdate` parameter enables or disables auto-updating of the signatures, and `-signatureUrl` configures the URL which hosts the updated signatures file.

When using the NetScaler GUI, you configure Reset Learned Data in **Security > NetScaler Web App Firewall > Engine Settings**. The **Reset Learned Data** option is at the bottom of the dialog box. You configure Signatures Auto-Update for each set of signatures in **Security > NetScaler Web App Firewall > Signatures**, by selecting the signatures file, clicking the right mouse button and selecting **Auto Update Settings**.

Normally, the default values for the **Web App Firewall** settings are correct. If the default settings cause a conflict with other servers or cause premature disconnection of your users, however, you have to modify them.

The **Web App Firewall** session limit is configurable using the following command:

```
1 > set appfw settings -sessionLimit 500000
2
3 Done
4
5 Default value:100000 Max value:500000 per PE
```

## To configure engine settings by using the command line interface

At the command prompt, type the following commands:

- `set appfw settings [-sessionCookieName <name>] [-sessionTimeout <positiveInteger> ] [-sessionLifetime <positiveInteger>] [-`

```
clientIPLoggingHeader <headerName>] [-undefaction <profileName>]
[-defaultProfile <profileName>] [-importSizeLimit <positiveInteger
>] [-logMalformedReq (ON | OFF)] [-signatureAutoUpdate (ON |
OFF)] [-signatureUrl <expression>] [-cookiePostEncryptPrefix <
string>] [-entityDecoding (ON | OFF)] [-useConfigurableSecretKey
(ON | OFF)][--learnRateLimit <positiveInteger>] [--proxyServer <
proxy server ip>] [--proxyPort <proxy server port>] [--proxyUsername
<username>] [--proxyPassword <password>]
```

- save ns config

### Example

```
1 set appfw settings -sessionCookieName citrix-appfw-id -sessionTimeout
3600
2 -sessionLifetime 14400 -clientIPLoggingHeader NS-AppFW-Client-IP -
undefaction APPFW_RESET
3 -defaultProfile APPFW_RESET -importSizeLimit 4096 -proxyServer
10.102.30.112 -proxyPort 3128 -proxyUsername defaultusername -
proxyPassword defaultpassword
4 save ns config
```

### To configure engine settings by using the NetScaler GUI

1. Navigate to **Security > NetScaler Web App Firewall**
2. In the details pane, click **Change Engine Settings** under **Settings**.
3. In the **Web App Firewall Engine Settings** dialog box, set the following parameters:
  - Cookie Name
  - Session Timeout
  - Cookie Post Encrypt Prefix
  - Maximum Session Lifetime
  - Logging Header Name
  - Undefined Profile
  - Default Profile
  - Import Size Limit
  - Learn Messages Rate Limit
  - Proxy Server
  - Proxy Port
  - Proxy Username
  - Proxy Password



- Entity Decoding
- Log Malformed Request
- Use Secret Key
- Learn Message Rate Limit
- Signatures Auto Update

4. Click **OK**.

The screenshot shows the 'Configure NetScaler Web App Firewall Settings' page. The settings are as follows:

|                                                                                                                                                       |                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| Cookie Name*<br>citrix_ns.cit                                                                                                                         | Session Time-out (seconds)*<br>900                   |
| Cookie Post Encrypt Prefix*<br>ENC                                                                                                                    | Maximum Session Lifetime (seconds)<br>0              |
| Logging Header Name<br>[Empty]                                                                                                                        | Undefined profile<br>APPFW_BLOCK                     |
| Import Size Limit (bytes)<br>134217728                                                                                                                | Default profile<br>APPFW_BYPASS                      |
| Learn Messages Rate Limit (messages/second)<br>400                                                                                                    | Session Limit*<br>100000                             |
| Proxy Server<br>[Empty]                                                                                                                               | Proxy Port<br>8080                                   |
| Proxy Username<br>[Empty]                                                                                                                             | Proxy Password<br>[Empty]                            |
| <input type="checkbox"/> CEF logging                                                                                                                  | <input type="checkbox"/> Geo-Location Logging        |
| <input type="checkbox"/> Entity Decoding                                                                                                              | <input type="checkbox"/> Use Configurable Secret Key |
| <input type="checkbox"/> Enable Centralized Learning                                                                                                  |                                                      |
| Malformed Request Action: <input checked="" type="checkbox"/> Block <input checked="" type="checkbox"/> Log <input checked="" type="checkbox"/> Stats |                                                      |
| <input type="button" value="Reset Learned Data"/>                                                                                                     |                                                      |

## Confidential fields

May 2, 2023

You can designate web-form fields as confidential to protect the information users type into them. Normally, any information a user types into a web form on one of your protected web servers is logged in the NetScaler logs. The information typed into a web-form field designated as confidential, however, is not logged. That information is saved only where the website is configured to save such data, normally in a secure database.

Common types of information that you may want to protect with a confidential field designation include:

- Passwords
- Credit card numbers, validation codes, and expiration dates
- Social security numbers

- Tax ID numbers
- Home addresses
- Private telephone numbers

In addition to being good practice, proper use of confidential field designations may be necessary for PCI-DSS compliance on ecommerce servers, HIPAA compliance on servers that manage medical information in the United States, and compliance with other data protection standards.

**Important:**

In the following two cases, the Confidential Field designation does not function as expected:

- If a Web form has either a confidential field or an action URL longer than 256 characters, the field or action URL is truncated in the NetScaler logs.
- With certain SSL transactions, the logs are truncated if either the confidential field or the action URL is longer than 127 characters.

In either of these cases, the Web App Firewall masks a fifteen-character string with the letter “x,” instead of the normal eight character string. To ensure that any confidential information is removed, the user must use form field name and action URL expressions that match the first 256, or (in cases where SSL is used) the first 127 characters.

To configure your Web App Firewall to treat a web-form field on a protected website as confidential, you add that field to the Confidential Fields list. You can enter the field name as a string, or you can enter a PCRE-compatible regular expression specifying one or more fields. You can enable the confidential-field designation when you add the field, or you can modify the designation later.

**Note**

From release 13.1 build 27.x, confidential fields are also supported in WAF profiles. For more information, see [Confidential fields in WAF profile](#).

**To add a confidential field by using the command line interface**

At the command prompt, type the following commands:

- `add appfw confidField <fieldName> <url> [-isRegex ( REGEX | NOTREGEX )] [-comment "<string>"] [-state ( ENABLED | DISABLED )]`
- `save ns config`

**Example**

The following example adds all web form fields whose names begin with Password to the confidential fields list.

```
1 add appfw confidField Password "https?://www[.]example[.]com/[^<>]*[^a-z]password[0-9a-z._-]*[.](asp|cgi|htm|html|http|js|php)" -isRegex REGEX -state ENABLED
2 save ns config
```

## To modify a confidential field by using the command line interface

At the command prompt, type the following commands:

- `set appfw confidField <fieldName> <url> [-isRegex ( REGEX | NOTREGEX )][-comment "<string>"] [-state ( ENABLED | DISABLED )]`
- `save ns config`

### Example

The following example modifies the confidential field designation to add a comment.

```
1 set appfw confidField Password "https?://www[.]example[.]com/[^<>]*[^a-z]password[0-9a-z._-]*[.](asp|cgi|htm|html|http|js|php)" -comment "Protect password fields." -isRegex REGEX -state ENABLED
2 save ns config
```

## To remove a confidential field by using the command line interface

At the command prompt, type the following commands:

- `rm appfw confidField <fieldName> <url>`
- `save ns config`

## To configure a confidential field by using the GUI

1. Navigate to **Security > Application Firewall**.
2. In the details pane, under **Settings**, click **Manage Confidential Fields**.
3. In the Manage Confidential Fields dialog box, do one of the following:
  - To add a new form field to the list, click **Add**.
  - To change an existing confidential field designation, select the field, and then click **Edit**. The **Web App Firewall Confidential Fields** dialog box appears.

#### Note:

If you select an existing confidential field designation and then click **Add**, the **Create Confidential Form Field** dialog box displays the information for that confidential

field. You can modify that information to create your new confidential field.

4. In the dialog box, fill out the elements. They are:
  - **Enabled check box.** Select or clear to enable/disable this confidential field designation.
  - **Is form field name a regular expression check box.** Select or clear to enable PCRE-format regular expressions in the form field name.
  - **Field Name.** Enter a literal string or PCRE-format regular expression that either represents a specific field name or that matches multiple fields with names that follow a pattern.
  - **Action URL.** Enter a literal URL or a regular expression that defines one or more URLs of the web page(s) on which the web form(s) that contains the confidential field are located.
  - **Comments.** Enter a comment. Optional.
5. Click **Create** or **OK**.
6. To remove a confidential field designation from the confidential fields list, select the confidential field listing you want to remove, then click **Remove** to remove it, and then click **OK** to confirm your choice.
7. When you have finished adding, modifying, and removing confidential field designations, click **Close**.

## Examples

Following are some regular expressions that define form field names that you might find useful:

- `^passwd_` (Applies confidential-field status to all field names that begin with the “passwd\_” string.)
- `^((\[0-9a-zA-Z._-]*|\x[0-9A-Fa-f][0-9A-Fa-f])+-)?passwd_` (Applies confidential-field status to all field names that begin with the string passwd\_, or that contain the string -passwd\_ after another string that might contain non-ASCII special characters.)

Following are some regular expressions that define specific URL types that you might find useful. Substitute your own web host(s) and domain(s) for those in the examples.

- If the web form appears on multiple web pages on the web host `www.example.com`, but all of those web pages are named `login.pl?`, you can use the following regular expression:

```
1 https?://www[.]example[.]com/([0-9A-Za-z][0-9A-Za-z_.-]*)*login[.]pl\?
```

- If the web form appears on multiple web pages on the web host `www.example-español.com`, which contains the n-tilde (ñ) special character, you can use the following regular expression,

which represents the n-tilde special character as an encoded UTF-8 string containing C3 B1, the hexadecimal code assigned to that character in the UTF-8 charset:

```
1 https?://www[.]example-espaxC3xB1o1[.]com/([0-9A-Za-z][0-9A-Za-z_-.]*)*logon[.]pl\?
```

- If the web form containing query.pl appears on multiple web pages on different hosts within the example.com domain, you can use the following regular expression:

```
1 https?://([0-9A-Za-z][0-9A-Za-z_-.]*)*[.]example[.]com/([0-9A-Za-z][0-9A-Za-z_-.]*)*logon[.]pl\?
```

- If the web form containing query.pl appears on multiple web pages on different hosts in different domains, you can use the following regular expression:

```
1 https?://([0-9A-Za-z][0-9A-Za-z_-.]*)*[0-9A-Za-z][0-9A-Za-z_-.]+[.][a-z]{
2 2,6 }
3 /([0-9A-Za-z][0-9A-Za-z_-.]*)*logon[.]pl\?
```

- If the web form appears on multiple web pages on the web host www.example.com, but all of those web pages are named logon.pl?, you can use the following regular expression:

```
1 https?://www[.]example[.]com/([0-9A-Za-z][0-9A-Za-z_-.]*)*logon[.]pl\?
```

## Field types

December 4, 2020

A field type is a PCRE-format regular expression that defines a particular data format and minimum/-maximum data lengths for a form field in a web form. Field types are used in the Field Formats check.

The Web App Firewall comes with several default field types, which are:

- integer. A string of any length consisting of numbers only, without a decimal point, and with an optional preceding minus sign (-).
- alpha. A string of any length consisting of letters only.
- alphanum. A string of any length consisting of letters and/or numbers.
- nohtml. A string of any length consisting of characters, including punctuation and spaces, that does not contain HTML symbols or queries.
- any. Anything at all.

**Important:**

Assigning the any field type as the default field type, or to a field, allows active scripts, SQL commands, and other possibly dangerous content to be sent to your protected websites and applications in that form field. You must use the any type sparingly, if you use it at all.

You can also add your own field types to the Field Types list. For example, you might want to add a field type for a social security number, postal code, or phone number in your country. You might also want to add a field type for a customer identification number or store credit card number.

To add a field type to the Field Types list, you enter the field name as a literal string or PCRE-format regular expression.

**To add a field type by using the command line interface**

At the command prompt, type the following commands:

- `add appfw fieldType <name> <regex> <priority> [-comment "<string>"]`
- `save ns config`

**Example**

The following example adds a field type named SSN that matches US Social Security numbers to the Field Types list, and sets its priority to 1.

```
1 add appfw fieldType SSN "^[1-9][0-9]{
2 2,2 }
3 -[0-9]
4 {
5 2,2 }
6 -[0-9]{
7 4,4 }
8 $" 1
9 save ns config
```

**To modify a field type by using the command line interface**

At the command prompt, type the following commands:

- `set appfw fieldType <name> <regex> <priority> [-comment "<string>"]`
- `save ns config`

## Example

The following example modifies the field type to add a comment.

```
1 set appfw fieldType SSN "[1-9][0-9]{
2 2,2 }
3 -[0-9]
4 {
5 2,2 }
6 -[0-9]{
7 4,4 }
8 $" 1 -comment "US Social Security Number"
9 save ns config
```

## To remove a field type by using the command line interface

At the command prompt, type the following commands:

- `>rm appfw fieldType <name>`
- `save ns config`

## To configure a field type by using the GUI

1. Navigate to Security > Application Firewall.
2. In the details pane, under **Settings**, click **Manage Field Types**.
3. In the **Manage Field Types** dialog box, do one of the following:
  - To add a new field type to the list, click **Add**.
  - To change an existing field type, select the field type, and then click **Edit**.  
The **Configure Field Type** dialog box appears.

### Note:

If you select an existing field type designation and then click **Add**, the dialog box displays the information for that field type. You can modify that information to create your new field type.

4. In the dialog box, fill out the elements. They are:
  - Name
  - Regular Expression
  - Priority
  - Comment

5. Click Create or OK.
6. To remove a field type from the Field Types list, select the field type listing you want to remove, then click **Remove** to remove it, and then click **OK** to confirm your choice.
7. When you have finished adding, modifying, and removing field types, click **Close**.

## Examples

Following are some regular expressions for field types that you might find useful:

`^[1-9][0-9]{ 2,2 } -[0-9 ] { 2,2 } -[0-9]{ 4,4 } $` U.S. Social Security numbers

`^[A-C\\]\\[0-9\\]{ 7,7 } $` California driver's license numbers

`^[+][0-9]{ 1,3 } [0-9()-]{ 1,40 } $` International phone numbers with country codes

`^[0-9]{ 5,5 } -[0-9]{ 4,4 } $` U.S. ZIP code numbers

`^[0-9A-Za-z][0-9A-Za-z.+_-]{ 0,25 } @[0-9A-Za-z][0-9A-Za-z_-]*[.]{ 1,4 } [A-Za-z]{ 2,6 } $` Email addresses

## XML content types

January 11, 2021

By default, the Web App Firewall treats files that follow certain naming conventions as XML. You can configure the Web App Firewall to examine web content for additional strings or patterns that indicate that those files are XML files. This can ensure that the Web App Firewall recognizes all XML content on your site, even if certain XML content does not follow normal XML naming conventions, ensuring that XML content is subjected to XML security checks.

To configure the XML content types, you add the appropriate patterns to the XML Content Types list. You can enter a content type as a string, or you can enter a PCRE-compatible regular expression specifying one or more strings. You can also modify the existing XML content types patterns.

### To add an XML content type pattern by using the command line interface

At the command prompt, type the following commands:

- `add appfw XMLContentType <XMLContenttypevalue> [-isRegex ( REGEX | NOTREGEX )]`
- `save ns config`



## Example

The following example adds the pattern `.*/xml` to the XML Content Types list and designates it as a regular expression.

```
1 add appfw XMLContentType ".*/xml" -isRegex REGEX
```

## To remove an XML content type pattern by using the command line interface

At the command prompt, type the following commands:

- `rm appfw XMLContentType <XMLContenttypevalue>`
- `save ns config`

## To configure the XML content type list by using the GUI

1. Navigate to **Security > Web App Firewall**.
2. In the details pane, under **Settings**, click **Manage XML Content Types**.
3. In the **Manage XML Content Types** dialog box, do one of the following:
  - To add a new XML content type, click **Add**.
  - To modify an existing XML content type, select that type and then click **Edit**.  
The Configure Web App Firewall XML Content Type dialog appears. Note: If you select an existing XML content type pattern and then click **Add**, the dialog box displays the information for that XML content type pattern. You can modify that information to create your new XML content type pattern.
4. In the dialog box, fill out the elements. They are:
  - **IsRegex**. Select or clear to enable PCRE-format regular expressions in the form field name.
  - **XML Content Type** Enter a literal string or PCRE-format regular expression that matches the XML content type pattern that you want to add.
5. Click **Create**.
6. To remove an XML content type pattern from the list, select it, then click **Remove** to remove it, and then click **OK** to confirm your choice.
7. When you have finished adding and removing XML content type patterns, click **Close**.

## JSON content types

January 11, 2021

By default, the Web App Firewall treats files with the content type “application/json” as JSON files. The default setting enables the Web App Firewall to recognize JSON content in requests and responses, and to handle that content appropriately.

You can configure the Web App Firewall to examine web content for additional strings or patterns that indicate that those files are JSON files. This can ensure that the Web App Firewall recognizes all JSON content on your site, even if certain JSON content does not follow normal JSON naming conventions, ensuring that JSON content is subjected to JSON security checks.

To configure the JSON content types, you add the appropriate patterns to the JSON Content Types list. You can enter a content type as a string, or you can enter a PCRE-compatible regular expression specifying one or more strings. You can also modify the existing JSON content types patterns.

### To add a JSON content type pattern by using the command line interface

At the command prompt, type the following commands:

- `add appfw JSONContentType <JSONContenttypevalue> [-isRegex ( REGEX | NOTREGEX )]`
- `save ns config`

#### Example

The following example adds the pattern `*/json` to the JSON Content Types list and designates it as a regular expression.

```
1 add appfw JSONContentType ".*/*json" -isRegex REGEX
```

### To configure the JSON content type list by using the GUI

1. Navigate to **Security > Application Firewall**.
2. In the details pane, under **Settings**, click **Manage JSON Content Types**.
3. In the Manage JSON Content Types dialog box, do one of the following:
  - To add a new JSON content type, click **Add**.
  - To modify an existing JSON content type, select that type and then click **Edit**.  
The Configure Web App Firewall JSON Content Type dialog appears.  
**Note:** If you select an existing JSON content type pattern and then click **Add**, the dialog box displays the information for that JSON content type pattern. You can modify that information to create your new JSON content type pattern.
4. In the dialog box, fill out the elements. They are:

- **IsRegex.** Select or clear to enable PCRE-format regular expressions in the form field name.
  - **JSON Content Type** Enter a literal string or PCRE-format regular expression that matches the JSON content type pattern that you want to add.
5. Click **Create** or **OK**.
  6. To remove a JSON content type pattern from the list, select it, then click **Remove** to remove it, and then click **OK** to confirm your choice.
  7. When you have finished adding and removing XML content type patterns, click **Close**.

## Statistics and reports

June 12, 2024

The information maintained in the logs and statistics, and displayed in the reports, provides important guidance for configuring and maintaining the Web App Firewall.

### The Web App Firewall statistics

When you enable the statistics action for Web App Firewall signatures or security checks, the Web App Firewall maintains information about connections that match that signature or security check. You can view the accumulated statistics information on the

**Monitoring** tab by selecting one of the following choices in the Select Group list box:

- **Web App Firewall.** A summary of all statistics information gathered by your Web App Firewall appliance for all profiles.
- **Web App Firewall (per profile).** The same information, but displayed per-profile rather than summarized.

You can use this information to monitor how your Web App Firewall is operating and determine whether there is any abnormal activity or abnormal amounts of hits on a signature or security check. If you see such a pattern of abnormal activity, you can check the logs for that signature or security check to diagnose and take corrective action.

### Relaxation hit statistical counter

Based on the relaxation that is applied on the violated traffic, you can also display statistical details such as the number of times a violation is occurring on the appliance, number of relaxation rules applied at the time of violation, and its last applied timestamp. By performing this, the centralized learning engine can automatically delete unused or redundant relaxation bindings. For more information, see [WAF Learn Engine](#) topic.

The relaxation hit statistical counter is available only for the following security checks.

- Cross-site scripting
- SQL Injection
- Cookie consistency
- JSON SQL
- JSON Cross-site scripting
- JSON DoS
- JSON CMD injection
- Cross-Site request forgery
- Field format
- Starturl
- Denyurl
- Content-Type protection

### To display statistics for relaxation rule hit counters by using the CLI

At the command prompt, type:

```
stat appfw profile p1
```

#### Example:

```
stat appfw profile p1 -fullvalues
```

Starturl Rules Statistics

---

| Rule         | hits | Rate | last hit time |
|--------------|------|------|---------------|
| 87a4...51177 | 0    | 0    | Thu ...1970   |
| 5b83...dc12a | 0    | 0    | Thu ...1970   |
| 12345        | 0    | 0    | Thu ...1970   |

---

### To display statistics for relaxation rule hit counters by using the GUI

Complete the following steps to view the relaxation rule hit counter statistics:

1. Navigate to **Security > NetScaler Web App Firewall > Profiles**.
2. In the details pane, select a **Web App Firewall profile** and click **Statistics**.
3. The **NetScaler Web App Firewall Statistics** page displays the statistics details.
4. You can select Tabular View or switch to Graphical View to display the data in a tabular or graphical format.

## The Web App Firewall Reports

The Web App Firewall reports provide information about your Web App Firewall configuration and how it is handling traffic for your protected websites.

### The PCI DSS report

The Payment Card Industry (PCI) Data Security Standard (DSS), version 4.0, consists of 12 security criteria that most credit card companies require businesses that accept online payments through credit and debit cards to meet. The criteria are designed to prevent identity theft, hacking, and other types of fraud. If an ISP does not meet the PCI DSS criteria, the ISP or merchant might lose authorization to accept credit card payments through the website.

ISPs and online merchants prove that they are in compliance with PCI DSS by having an audit conducted by a PCI DSS Qualified Security Assessor (QSA) Company. The PCI DSS report is designed to assist them both before and during the audit. Before the audit, it shows which Web App Firewall settings are relevant to PCI DSS, how they must be configured, and (most important) whether your current Web App Firewall configuration meets the standard. During the audit, the report can be used to demonstrate compliance with a relevant PCI DSS criteria.

The PCI DSS report consists of a list of those criteria that are relevant to your Web App Firewall configuration. Under each criterion, it lists your current configuration options, indicates whether your current configuration complies with the PCI DSS criterion, and explains how to configure the Web App Firewall so that your protected websites are in compliance with the criterion.

The PCI DSS report is located under **System > Reports**. To generate the report as an Adobe PDF file, click **Generate PCI DSS Report**. Depending on your browser settings, the report is displayed in the pop-up window or you are prompted to save it to your hard disk.

**Note:**

To view this and other reports, you must have the Adobe Reader program installed on your computer.

The PCI DSS report consists of the following sections:

- **Description.** A description of the PCI DSS Compliance Summary report.
- **Firewall License and Feature Status.** Tells you whether the Web App Firewall is licensed and enabled on your NetScaler appliance.
- **Executive Summary.** A table that lists the PCI DSS criteria and tells you which of those criteria are relevant to the Web App Firewall.

- **Detailed PCI DSS Criteria Information.** For each PCI DSS criterion that is relevant to your Web App Firewall configuration, the PCI DSS report provides a section that contains information about whether your configuration is in compliance and, if it is not, how to bring it into compliance.
- **Configuration.** Data for individual profiles, which you access either by clicking Web App Firewall Configuration at the top of the report, or directly from the Reports pane. The Web App Firewall Configuration report is the same as the PCI DSS report, with the PCI DSS-specific summary omitted.

### The Web App Firewall configuration report

The Web App Firewall Configuration report is located under **System > Reports**. To display it, click **Generate Web App Firewall Configuration Report**. Depending on your browser settings, the report is displayed in the pop-up window or you are prompted to save it to your hard disk.

The Web App Firewall Configuration report starts with a Summary page, which consists of the following sections:

- **Web App Firewall Policies.** A table that lists your current Web App Firewall policies, showing the policy name, the content of the policy, the action (or profile) it is associated with, and global binding information.
- **Web App Firewall Profiles.** A table that lists your current Web App Firewall profiles and indicates which policy each profile is associated with. If a profile is not associated with a policy, the table displays INACTIVE in that location.

To download all report pages for all policies, at the top of the Profiles Summary page click **Download All Profiles**. You display the report page for each individual profile by selecting that profile in the table at the bottom of the screen. The Profile page for an individual profile shows whether each check action is enabled or disabled for each check, and the other configuration settings for the check.

To download a PDF file containing the PCI DSS report page for the current profile, click **Download Current Profile** at the top of the page. To return to the Profiles Summary page, click **Web App Firewall Profiles**. To go back to the main page, click **Home**. You can refresh the PCI DSS report at any time by clicking **Refresh** in the upper right corner of the browser.

## Web App Firewall logs

December 30, 2024

The Web App Firewall generates log messages for tracking configuration, policy invocation, and security check violation details.

When you enable the log action for security checks or signatures, the resulting log messages provide information about the requests and responses that the Web App Firewall has observed when protecting your websites and applications. The most important information is the action taken by the Web App Firewall when a signature or a security check violation was observed. For some security checks, the log message can provide useful information, such as, user location or detected pattern that triggered a violation. An excessive increase in the number of violation messages in the logs can indicate a surge in malicious requests. The message alerts you that your application might be under attack to exploit a specific vulnerability that is detected and thwarted by Web App Firewall protections.

**Note:**

If you want to segregate NetScaler Web App Firewall logs from the System Logs, you must use an external SYSLOG server.

## NetScaler (Native) format logs

The Web App Firewall uses the NetScaler format logs (also called native format logs) by default. These logs have the same format as those generated by other NetScaler features. Each log contains the following fields:

- **Timestamp.** Date and time when the connection occurred.
- **Severity.** Severity level of the log.
- **Module.** NetScaler module that generated the log entry.
- **Event Type.** Type of event, such as signature violation or security check violation.
- **Event ID.** ID assigned to the event.
- **Client IP.** IP address of the user whose connection was logged.
- **Transaction ID.** ID assigned to the transaction that caused the log.
- **Session ID.** ID assigned to the user session that caused the log.
- **Message.** The log message. Contains information identifying the signature or security check that triggered the log entry.

You can search for any of these fields, or any combination of information from different fields. Your selection is limited only by the capabilities of the tools you use to view the logs. You can observe the Web App Firewall log messages in the GUI by accessing the NetScaler syslog viewer, or you can manually connect to the NetScaler appliance and access logs from the command line interface, or you can drop into the shell and tail the logs directly from the `/var/log/` folder.

Example of a native format log message

```
1 Jun 22 19:14:37 <local0.info> 10.217.31.98 06/22/2015:19:14:37 GMT ns
0-PPE-1 :
```

```
2 default APPFW APPFW_cross-site scripting 60 0 : 10.217.253.62 616-PPE1
 y/3upt2K8ySwwId3Kavbxyni7Rw0000
3 pr_ffc http://aaron.stratum8.net/FFC/login.php?login_name=abc&passwd=
4 12345&drinking_pref=on&text_area=%3Cscript%3E%0D%0A&loginButton=
 ClickToLogin&as_sfId=
5 AAAAAAWEXcNQLlSokNmqaYF6dvfqlChNzSMsdy09JX0Jomm2v
6 BwAM0qZiChv21EcgbC3rexIUcfm0vckKlsgo0eC_BARx1Ic4NLxxkWMtrJe4H7S0fkiv9NL7AG4juPIan
7 %3D&as_fid=feeec8758b41740eedeeb6b35b85dfd3d5def30c Cross-site script
 check failed for
8 field text_area="Bad tag: script" <blocked>
```

## Common Event Format (CEF) logs

The Web App Firewall also supports CEF logs. CEF is an open log management standard that improves the interoperability of security-related information from different security and network devices and applications. CEF enables customers to use a common event log format so that data can be easily collected and aggregated for analysis by an enterprise management system. The log message is broken into different fields so that you can easily parse the message and write scripts to identify important information.

### Analyzing the CEF Log Message

In addition to date, timestamp, client IP, log format, appliance, company, build version, module, and security check information, Web App Firewall CEF log messages include the following details:

- src –source IP address
- spt –source port number
- request –request URL
- act –action (for example blocked, transformed)
- msg –message (Message regarding the observed security check violation)
- Offset - represents the bytes from the beginning of the file.
- cn1 –event ID
- cn2 –HTTP Transaction ID
- cs1 –profile name
- cs2 –PPE ID (for example PPE1)
- cs3 - Session ID
- cs4 –Severity (for example INFO, ALERT)
- cs5 –event year
- cs6 - Signature Violation Category
- method –Method (for example GET/POST)

For example, consider the following CEF format log message, which was generated when a Start URL violation was triggered:



```

1 Jun 12 23:37:17 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
 .0
2 |APPFW|APPFW_STARTURL|6|src=10.217.253.62 spt=47606 method=GET
3 request=http://aaron.stratum8.net/FFC/login.html msg=Disallow Illegal
 URL. cn1=1340
4 cn2=653 cs1=pr_ffc cs2=PPE1 cs3=EsdGd3VD00aaURLcZnj05Y6D0mE0002 cs4=
 ALERT cs5=2015
5 act=blocked

```

The above message can be broken down into different components. Refer to the [CEF log components table](#).

Example of a request check violation in CEF log format: request is not blocked

```

1 Jun 13 00:21:28 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
 .0|APPFW|
2 APPFW_FIELDCONSISTENCY|6|src=10.217.253.62 spt=761 method=GET request=
3 http://aaron.stratum8.net/FFC/login.php?login_name=abc&passwd=
4 123456789234&drinking_pref=on&text_area=&loginButton=ClickToLogin&
 as_sfid
5 =
 AAAAAAWIahZuYoIFbjBhYMP05mJLTwEfIY0a7AKGMg3jIBaKmwT4t7M7Lnx0gj7Gmd3SZc8KUj6CF
6 7W5kIWRHN8PtK1Zc-txHkHNx1WknuG9DzTuM7t1THhLuevXu9I4kp8%3D&as_fid=
 feec8758b4174
7 0eedeeb6b35b85dfd3d5def30c msg=Field consistency check failed for field
 passwd cn1=1401
8 cn2=707 cs1=pr_ffc cs2=PPE1 cs3=Ycby5IvjL6FoVa6Ah94QFTIUpC80001 cs4=
 ALERT cs5=2015 act=
9 not blocked

```

Example of a response check violation in CEF format: response is transformed

```

1 Jun 13 00:25:31 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
 .0|APPFW|
2 APPFW_SAFECOMMERCE|6|src=10.217.253.62 spt=34041 method=GET request=
3 http://aaron.stratum8.net/FFC/CreditCardMind.html msg=Maximum number of
 potential credit
4 card numbers seen cn1=1470 cn2=708 cs1=pr_ffc cs2=PPE1
5 cs3=Ycby5IvjL6FoVa6Ah94QFTIUpC80001 cs4=ALERT cs5=2015 act=transformed

```

Example of a request side signature violation in CEF format: request is blocked

```

1 Jun 13 01:11:09 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
 .0|APPFW|
2 APPFW_SIGNATURE_MATCH|6|src=10.217.253.62 spt=61141 method=GET request=
3 http://aaron.stratum8.net/FFC/wwwboard/passwd.txt msg=Signature
 violation rule ID 807:
4 web-cgi /wwwboard/passwd.txt access cn1=140 cn2=841 cs1=pr_ffc cs2=
 PPE0
5 cs3=0yTgjbXBqcpBFeENKdlde30kMQ00001 cs4=ALERT cs5=2015 cs6=web-cgi act=
 blocked

```

Example of a response check violation in CEF format for an Offset:

```
1 Jan 24 10:00:00 <local0.warn> 10.175.4.47 CEF:0|Citrix|NetScaler|NS13
.0|APPFW|APPFW_XML_ERR_NOT_WELLFORMED|4|src=5.31.100.129 spt=20644
method=GET request=https://wifiuae.duwifi.ae/publishApplications/en
/5dafe3e74fa8015599009bc1/images/fallback_photo.svg msg=XML Format
check failed: Message is not a well-formed XML.Error string is '
unclosed token'. Offset:-517597 cn1=547290214 cn2=974226675 cs1=
WIFI_UAE_AppFw cs2=PPE0 cs4=ERROR cs5=2023 act=blocked
```

In this example, the XML\_ERR\_NOT\_WELLFORMED violation occurred because of `unclosed token`. This violation is at 517597 location from the beginning of the file.

## Log geolocation in the Web App Firewall violation messages

The log details identify the location from which requests originate, and help you configure the Web App Firewall for the optimal level of security. To bypass security implementations such as rate limiting, which rely on the IP addresses of the clients, malware or rogue computers can keep changing the source IP address in requests. Identifying the specific region from where requests are coming can help determine whether the requests are from a valid user or a device attempting to launch cyberattacks. For example, if an excessively large number of requests are received from a specific area, it is easy to determine whether they are being sent by users or a rogue machine. Geolocation analysis of the received traffic can be useful in deflecting attacks such as denial of service (DoS) attacks.

The Web App Firewall offers you the convenience of using the built-in NetScaler database for identifying the locations corresponding to the IP addresses from which malicious requests are originating. You can then enforce a higher level of security for requests from those locations. NetScaler default syntax (PI) expressions give you the flexibility to configure location based policies that can be used with the built-in location database to customize firewall protection, bolstering your defense against coordinated attacks launched from rogue clients in a specific region.

You can use the NetScaler built-in database, or you can use any other database. If the database does not have any location information for the particular client IP address, the CEF log shows the geolocation as an Unknown geolocation.

### Note:

Geolocation logging uses the Common Event Format (CEF). By default, `CEF logging` and `GeoLocationLogging` are OFF. You must explicitly enable both parameters.

Example of a CEF log message showing geolocation information

```
1 June 8 00:21:09 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
.0|APPFW|
2 APPFW_STARTURL|6|src=10.217.253.62 geolocation=NorthAmerica.US.Arizona.
Tucson.*.*
```

```
3 spt=18655 method=GET request=http://aaron.stratum8.net/FFC/login.html
4 msg=Disallow Illegal URL. cn1=77 cn2=1547 cs1=test_pr_adv cs2=PPE1
5 cs3=KDynjg1pbFtfhC/nt0rBU1o/Tyg0001 cs4=ALERT cs5=2015 act=not blocked
```

Example of a log message showing geolocation= Unknown

```
1 June 9 23:50:53 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
 .0|
2 APPFW|APPFW_STARTURL|6|src=10.217.30.251 geolocation=Unknown spt=5086
3 method=GET request=http://aaron.stratum8.net/FFC/login.html msg=
 Disallow Illegal URL.
4 cn1=74 cn2=1576 cs1=test_pr_adv cs2=PPE2 cs3=
 PyR0e0EM4gf6GJiTyauIHByL88E0002
5 cs4=ALERT cs5=2015 act=not blocked
```

## Configure log action and other log parameters using command interface

To configure the log action for a security check of a profile by using the command line

At the command prompt, type one of the following commands:

- `set appfw profile <name> SecurityCheckAction ([[log] | [none]])`
- `unset appfw profile <name> SecurityCheckAction`

Examples

```
set appfw profile pr_ffc StartURLAction log
```

```
unset appfw profile pr_ffc StartURLAction
```

To configure CEF logging by using the command line

The CEF logging is disabled by default. At the command prompt, type one of the following commands to change or display the current setting:

- `set appfw settings CEFLogging on`
- `unset appfw settings CEFLogging`
- `sh appfw settings | grep CEFLogging`

To configure the logging of the credit card numbers by using the command line

At the command prompt, type one of the following commands:

- `set appfw profile <name> -doSecureCreditCardLogging ([ON] | [OFF])`
- `unset appfw profile <name> -doSecureCreditCardLogging`

To configure Geolocation logging by using the command line

1. Use the set command to enable GeoLocationLogging. You can enable the CEF logging at the same time. Use the unset command to disable geolocation logging. The show command shows the current settings of all the Web App Firewall parameters, unless you include the grep command to show the setting for a specific parameter.

- `set appfw settings GeoLocationLogging ON [CEFLogging ON]`
- `unset appfw settings GeoLocationLogging`
- `sh appfw settings | grep GeoLocationLogging`

2. Specify the database

```
add locationfile /var/netscaler/inbuilt_db/Citrix_netscaler_InBuilt_GeoIP_
.csv
```

or

```
add locationfile <path to database file>
```

### Customize Web App Firewall logs

Default format (PI) expressions give you the flexibility to customize the information included in the logs. You have the option to include the specific data that you want to capture in the Web App Firewall generated log messages. For example, if you are using AAA-TM authentication along with the Web App Firewall security checks, and would like to know the accessed URL that triggered the security check violation, the name of the user who requested the URL, the source IP address, and the source port from which the user sent the request, you can use the following commands to specify customized log messages that include all the data:

```
1 > sh version
2 NetScaler NS12.1: Build 50.0013.nc, Date: Aug 28 2018, 10:51:08 (64-
 bit)
3 Done
```

```
1 > add audit messageaction custom1 ALERT 'HTTP.REQ.URL + " " + HTTP.REQ.
 USER.NAME + " " + CLIENT.IP.SRC + ":" + CLIENT.TCP.SRCPORT'
2 Warning: HTTP.REQ.USER has been deprecated. Use AAA.USER instead.
3 Done
```

```
1 > add appfw profile test_profile
2 Done
```

```
1 > add appfw policy appfw_pol true test_profile -logAction custom1
2 Done
```

## Configure Syslog policy to segregate Web App Firewall logs

The Web App Firewall offers you an option to isolate and redirect the Web App Firewall security log messages to a different log file. This might be desirable if the Web App Firewall is generating many logs, making it difficult to view other NetScaler log messages. You can also use this option when you are interested only in viewing the Web App Firewall log messages and do not want to see the other log messages.

To redirect the Web App Firewall logs to a different log file, configure a syslog action to send the Web App Firewall logs to a different log facility. You can use this action when configuring the syslog policy, and bind it globally for use by Web App Firewall.

### Notes:

- To globally bind Web App Firewall policies, you can configure the global binding parameter, “APPFW\_GLOBAL” in the “bind audit syslogGlobal” and “bind audit nslogGlobal” commands. The global bound audit log policies can evaluate log messages in the Web App Firewall logging context.
- You cannot segregate Web Application Firewall logs from a local audit or SYSLOG server running on NetScaler. Using the local2 log facility results in receiving both Web Application Firewall and IP Reputation logs in the same log file.

### Example:

1. Switch to the shell and use an editor such as vi to edit the /etc/syslog.conf file. Add a new entry to use local2.\* to send logs to a separate file as shown in the following example:

```
local2.* /var/log/ns.log.appfw
```

2. Restart the syslog process. You can use the grep command to identify the syslog process ID (PID), as shown in the following example:

```
root@ns\# **ps -A | grep syslog**
1063 ?? Ss 0:03.00 /usr/sbin/syslogd -b 127.0.0.1 -n -v -v -8 -C
root@ns# **kill -HUP** 1063
```

3. From the command line interface, configure either advanced or classic SYSLOG policy with action and bind it as a global Web App Firewall policy. Citrix recommends you to configure the advanced SYSLOG policy.

Advanced SYSLOG policy configuration

```
add audit syslogAction sysact1 1.1.1.1 -logLevel ALL -logFacility LOCAL2
add audit syslogPolicy syspol1 true sysact1
```

```
bind audit syslogGlobal -policyName syspol1 -priority 100 -
globalBindType APPFW_GLOBAL
```

Classic SYSLOG policy configuration

```
add audit syslogAction sysact1 1.1.1.1 -logLevel ALL -logFacility
LOCAL2
```

```
add audit syslogPolicy syspol1 ns_true sysact1
```

```
bind appfw global syspol1 100
```

4. All Web App Firewall security check violations will now be redirected to the `/var/log/ns.log.appfw` file. You can tail this file to view the Web App Firewall violations that are getting triggered during the processing of the ongoing traffic.

```
root@ns# tail -f ns.log.appfw
```

**Notes:**

- If you want to send logs to a different log file on the local NetScaler appliance, you can create a syslog server on that local NetScaler appliance. Add `syslogaction` to its own IP, and configure the ADC as you would configure an external server. The ADC acts as the server to store your logs. Two actions cannot be added with the same IP and port. In the `syslogaction`, by default, the value of IP is set to `127.0.0.1` and the value of port is set to `514`.
- If you have configured the syslog policy to redirect the logs to a different log facility, the Web App Firewall log messages no longer appear in the `/var/log/ns.log` file.

## Send the Application Firewall messages to an external SYSLOG server

**Prerequisite:**

A utility to open an SSH connection to the appliance, such as PuTTY.

Perform the following steps:

1. Log on to the external Syslog server.
2. Open the `syslog.conf` file and add the following line in the file.  

```
local5.* /var/log/appfw.log
```
3. Restart the server.
4. Run the following command from the NetScaler CLI to add a syslog action with the external syslog server IP address.

```
add audit syslogAction sysact1 127.0.0.1 -logLevel ALL -logFacility LOCAL5
```

5. Add an advanced policy (syslog1) to the syslog action (Sysact1).

```
add audit syslogPolicy syspol1 true sysact1
```

6. Bind the advanced Syslog policy as a global Web App Firewall policy:

```
bind audit syslogGlobal -policyName syspol1 -priority 100 -globalBindType APPFW_GLOBAL
```

All the Application Firewall security check violations are redirected to the `/var/log/appfw.log` file and will no longer appear in the `ns.log` file. You can now run the `tail` command and view the latest entries in the `/var/log/appfw.log` file.

## View Web App Firewall logs

You can view the logs by using the syslog viewer, or by logging on to the NetScaler appliance, opening a UNIX shell, and using the UNIX text editor of your choice.

To access the log messages by using the command line

Switch to the shell and tail the `ns.logs` in the `/var/log/` folder to access the log messages pertaining to the **Web App Firewall security** check violations:

- `Shell`
- `tail -f /var/log/ns.log`

You can use the `vi` editor, or any Unix text editor or text search tool, to view and filter the logs for specific entries. For example, you can use the `grep` command to access the log messages pertaining to the Credit Card violations:

- `tail -f /var/log/ns.log | grep SAFECOMMERCE`

To access the log messages by using the GUI

The GUI includes a useful tool (Syslog Viewer) for analyzing the log messages. You have multiple options for accessing the Syslog Viewer:

- To view log messages for a specific security check of a profile, navigate to **Web App Firewall > Profiles**, select the target profile, and click Security Checks. Highlight the row for the target security check and click Logs. When you access the logs directly from the selected security check of the profile, it filters out the log messages and displays only the logs pertaining to the violations for the selected security check. Syslog viewer can display Web App Firewall logs in the Native format and the CEF format. However, for the syslog viewer to filter out the target profile specific log messages, the logs must be in the CEF log format when accessed from the profile.

- You can also access the Syslog Viewer by navigating to **NetScaler > System > Auditing**. In the Audit Messages section, click the Syslog messages link to display the Syslog Viewer, which displays all log messages, including all Web App Firewall security check violation logs for all profiles. The log messages are useful for debugging when multiple security check violations might be triggered during request processing.
- Navigate to **Web App Firewall > policies > Auditing**. In the Audit Messages section, click the Syslog messages link to display the Syslog Viewer, which displays all log messages, including all security check violation logs for all profiles.

The HTML based Syslog Viewer provides the following filter options for selecting only the log messages that are of interest to you:

- **File**—The current `/var/log/ns.log` file is selected by default, and the corresponding messages appear in the Syslog Viewer. A list of other log files in the `/var/log` directory is available in a compressed `.gz` format. To download and uncompress an archived log file, select the log file from the drop-down list option. The log messages pertaining to the selected file are then displayed in the syslog viewer. To refresh the display, click the Refresh icon (a circle of two arrows).
- **Module list box**—You can select the NetScaler module whose logs you want to view. You can set it to APPFW for Web App Firewall logs.
- **Event Type list box**—This box contains a set of check boxes for selecting the type of event you are interested in. For example, to view the log messages pertaining to the signature violations, you can select the **APPFW\_SIGNATURE\_MATCH** check box. Similarly, you can select a check box to enable the specific security check that is of interest to you. You can select multiple options.
- **Severity**—You can select a specific severity level to show just the logs for that severity level. Leave all the check boxes blank if you want to see all the logs.

To access the Web App Firewall security check violation log messages for a specific security check, filter by selecting **APPFW** in the drop-down list options for Module. The Event Type displays a rich set of options to further refine your selection. For example, if you select the **APPFW\_FIELDFORMAT** check box and click the Apply button, only log messages pertaining to the Field Formats security check violations appear in the Syslog Viewer. Similarly, if you select the **APPFW\_SQL** and **APPFW\_STARTURL** check boxes and click the **Apply** button, only log messages pertaining to these two security check violations appear in the syslog viewer.

If you place the cursor in the row for a specific log message, multiple options, such as **Module**, **Event-Type**, **EventID**, or **Message** are displayed below the log message. You can select any of these options to highlight the corresponding information in the logs.



## Highlights

- **CEF Log Format support**—The CEF log format option provides a convenient option to monitor, parse, and analyze the Web App Firewall log messages to identify attacks, fine-tune configured settings to decrease false positives, and gather statistics.
- **Option to customize log message**—You can use advanced PI expressions to customize log messages and include the data you want to see in the logs.
- **Segregate Web App Firewall specific logs**—You have an option to filter and redirect application-firewall specific logs to a separate log file.
- **Remote Logging**—You can redirect the log messages to a remote syslog server.
- **Geolocation Logging**—You can configure the Web App Firewall to include the geolocation of the area from where the request is received. A built-in geolocation database is available, but you have the option to use an external geolocation database. The NetScaler appliance supports both IPv4 and IPv6 static geolocation databases.
- **Information rich log message**—Following are some examples of the type of information that can be included in the logs, depending on the configuration:
  - A Web App Firewall policy was triggered.
  - A security check violation was triggered.
  - A request was considered to be malformed.
  - A request or the response was blocked or not blocked.
  - Request data (such as SQL or cross-site scripting special characters) or response data (such as Credit card numbers or safe object strings) was transformed.
  - The number of credit cards in the response exceeded the configured limit.
  - The credit card number and type.
  - The log strings configured in the signature rules, and the signature ID.
  - Geolocation information about the source of the request.
  - Masked (X'd out) user input for protected confidential fields.

## Mask sensitive data using regex pattern

The `REGEX_REPLACE` advanced policy (PI) function in a log expression (bound to a Web Application Firewall (WAF) profile) enables you to mask sensitive data in WAF logs. You can use the option to mask data using a regex pattern and provide a character or a string pattern to mask the data. Also, you can configure the PI function to replace the first occurrence or all occurrences of the regex pattern.

By default the GUI interface provides the following mask:

- SSN
- Credit Card
- Password

- User name

### Mask sensitive data in Web Application Firewall logs

You can mask sensitive data in WAF logs by configuring the `REGEX_REPLACE` advanced policy expression in the log expression bound to a WAF profile.

To mask sensitive data, you must complete the following steps:

1. Add a Web Application Firewall profile
2. Bind a log expression to the WAF profile

**Add a Web Application Firewall profile** At the command prompt, type:

```
add appfw profile <name>
```

**Example:**

```
Add appfw profile testprofile1
```

**Bind a log expression with the Web Application Firewall profile** At the command prompt, type:


```
bind appfw profile <name> -logExpression <string> <expression> -
comment <string>
```

**Example:**

```
bind appfw profile testProfile -logExpression "MaskSSN""HTTP.REQ.BODY
(10000).REGEX_REPLACE(re!\b\d{ 3 } -\d{ 2 } -\d{ 4 } \b!, "xxx", ALL)
"-comment "SSN Masked"
```

### Mask sensitive data in Web Application Firewall logs by using NetScaler GUI

1. On the navigation pane, expand **Security > NetScaler Web App Firewall > Profiles**.
2. On the **Profiles** page, click **Edit**.
3. On the **NetScaler Web App Firewall Profile** page, navigate to **Advanced Settings** section and click **Extended Logging**.
4. In the **Extended Logging** section, click **Add**.

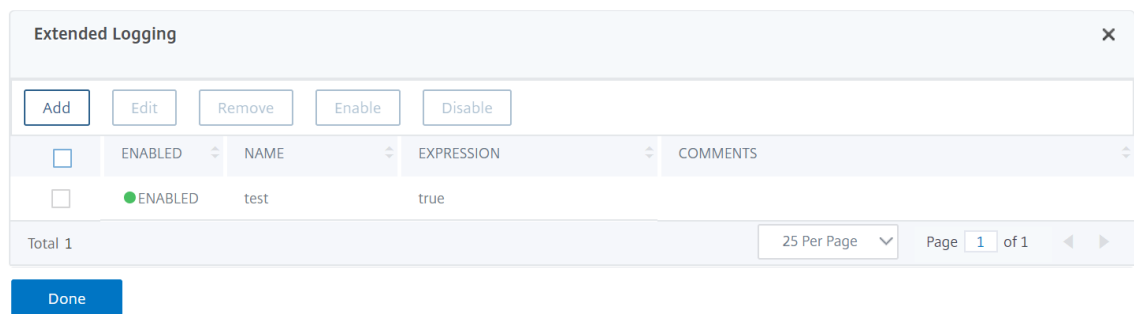

5. On the **Create NetScaler Web App Firewall Extended Log Binding** page, set the following parameters:
  - a) Name. Name of the log expression.
  - b) Enabled. Select this option to mask sensitive data.
  - c) Log mask. Select the data to be masked.
  - d) Expression. Enter the advanced policy expression that enables you to mask sensitive data in WAF logs
  - e) Comments. Brief description about the masking sensitive data.
  
6. Click **Create** and **Close**.

## Appendices

September 21, 2020

The following supplemental material provides additional detail about complex or peripheral Web App Firewall tasks.

### PCRE character encoding format

May 2, 2023

The **NetScaler operating system supports direct** entry of characters in the printable ASCII character set only—characters with hexadecimal codes between HEX 20 (ASCII 32) and HEX 7E (ASCII 127). To include a character with a code outside that range in your Web App Firewall configuration, you must enter its UTF-8 hexadecimal code as a PCRE regular expression.

Many character types require encoding using a PCRE regular expression if you include them in your Web App Firewall configuration as a URL, form field name, or Safe Object expression. They include:

- **Upper-ASCII characters.** Characters with encodings from HEX 7F (ASCII 128) to HEX FF (ASCII 255). Depending on the character map used, these encodings can refer to control codes, ASCII characters with accents or other modifications, non-Latin alphabet characters, and symbols not included in the basic ASCII set. These characters can appear in URLs, form field names, and safe object expressions.
- **Double-Byte characters.** Characters with encodings that use two 8-byte words. Double-byte characters are used primarily for representing Chinese, Japanese, and Korean text in electronic format. These characters can appear in URLs, form field names, and safe object expressions.

**ASCII control characters.** Non-printable characters used to send commands to a printer. All ASCII characters with hexadecimal codes less than HEX 20 (ASCII 32) fall into this category. These characters must never appear in a URL or form field name, however, and would rarely if ever appear in a safe object expression.

The NetScaler appliance does not support the entire UTF-8 character set, but only the characters found in the following eight charsets:

- **English US (ISO-8859-1).** Although the label reads, “English US,” the Web App Firewall supports all characters in the ISO-8859-1 character set, also called the Latin-1 character set. This character set fully represents most modern western European languages and represents all but a few uncommon characters in the rest.
- **Chinese Traditional (Big5).** The Web App Firewall supports all characters in the BIG5 character set, which includes all of the Traditional Chinese characters (ideographs) commonly used in modern Chinese as spoken and written in Hong Kong, Macau, Taiwan, and by many people of Chinese ethnic heritage who live outside of mainland China.
- **Chinese Simplified (GB2312).** The Web App Firewall supports all characters in the GB2312 character set, which includes all of the Simplified Chinese characters (ideographs) commonly used in modern Chinese as spoken and written in mainland China.
- **Japanese (SJIS).** The Web App Firewall supports all characters in the Shift-JIS (SJIS) character set, which includes most characters (ideographs) commonly used in modern Japanese.
- **Japanese (EUC-JP).** The Web App Firewall supports all characters in the EUC-JP character set, which includes all characters (ideographs) commonly used in modern Japanese.
- **Korean (EUC-KR).** The Web App Firewall supports all characters in the EUC-KR character set, which includes all characters (ideographs) commonly used in modern Korean.
- **Turkish (ISO-8859-9).** The Web App Firewall supports all characters in the ISO-8859-9 character set, which includes all letters used in modern Turkish.
- **Unicode (UTF-8).** The Web App Firewall supports certain more characters in the UTF-8 character set, including those used in modern Russian.

When configuring the Web App Firewall, you enter all non-ASCII characters as PCRE-format regular expressions using the hexadecimal code assigned to that character in the UTF-8 specification. Symbols and characters within the normal ASCII character set, which is assigned single, two-digit codes in that character set, are assigned the same codes in the UTF-8 character set. For example, the exclamation point (!), which is assigned hex code 21 in the ASCII character set, is also hex 21 in the UTF-8 character set. Symbols and characters from another supported character set have a paired set of hexadecimal codes assigned to them in the UTF-8 character set. For example, the letter a with an acute accent (á) is assigned UTF-8 code C3 A1.

The syntax you use to represent these UTF-8 codes in the Web App Firewall configuration is “\xNN” for ASCII characters; “\xNN\xNN” for non-ASCII characters used in English, Russian, and Turkish; and “\xNN\xNN\xNN” for characters used in Chinese, Japanese, and Korean. For example, if you want to represent a ! in a Web App Firewall regular expression as a UTF-8 character, you would type \x21. If you want to include an á, you would type \xC3\xA1.

**Note:**

Normally you do not need to represent ASCII characters in UTF-8 format, but when those characters might confuse a web browser or an underlying operating system, you can use the character’s UTF-8 representation to avoid this confusion. For example, if a URL contains a space, you might want to encode the space as \x20 to avoid confusing certain browsers and web server software.

Below are examples of URLs, form field names, and safe object expressions that contain non-ASCII characters that must be entered as PCRE-format regular expressions to be included in the Web App Firewall configuration. Each example shows the actual URL, field name, or expression string first, followed by a PCRE-format regular expression for it.

- A URL containing extended ASCII characters.

Actual URL: <http://www.josénuñez.com>

Encoded URL: `^http://www\[.\]jos\xC3\xA9nu\xC3\xB1ez\[.\]com$`

- Another URL containing extended ASCII characters.

Actual URL: <http://www.example.de/trömsö.html>

Encoded URL: `^http://www\[.\]example\[.\]de/tr\xC3\xB6msö\[.\]html$`

A form field name containing extended ASCII characters.

Actual Name: nome\_do\_usuário

Encoded Name: `^nome_do_usu\xC3\xA1rio$`

- A safe object expression containing extended ASCII characters.

Unencoded Expression `[A-Z]{3,6}¥[1-9][0-9]{6,6}`

Encoded Expression: `[A-Z]{3,6}\xC2\xA5[1-9][0-9]{6,6}`

You can find several tables that include the entire Unicode character set and matching UTF-8 encodings on the Internet. A useful website that contains this information is available in the following table.

<http://www.utf8-chartable.de/unicode-utf8-table.pl>

For the characters in the table on this website to display correctly, you must have an appropriate Unicode font installed on your computer. If you do not, the visual display of the character may be in error. Even if you do not have an appropriate font installed to display a character, however, the description and the UTF-8 and UTF-16 codes on this set of webpages are correct.

## Whitehat WASC signature types for WAF use

May 2, 2023

The NetScaler Web App Firewall accepts and generates blocking rules for all vulnerability types that the Whitehat scanners generate. However, certain vulnerabilities are most applicable to a web App Firewall. Following are lists of those vulnerabilities, categorized by whether they are addressed by WASC 1.0, WASC 2.0, or best practices signature types.

### WASC 1.0 signature types

- HTTP Request Smuggling
- HTTP Response Splitting
- HTTP Response Smuggling
- Null Byte Injection
- Remote File Inclusion
- URL Redirector Abuse

### WASC 2.0 signature types

- Abuse of Functionality
- Brute Force
- Content Spoofing
- Denial of Service
- Directory Indexing
- Information Leakage
- Insufficient Anti-automation
- Insufficient Authentication

- Insufficient Authorizatio
- Insufficient Session Expiration
- LDAP Injection
- Session Fixation

## Best Practices

- Autocomplete Attribute
- Insufficient Cookie Access Control
- Insufficient Password Strength
- Invalid HTTP Method Usage
- Non-HttpOnly Session Cookie
- Persistent Session Cookie
- Personally Identifiable Information
- Secured Cachable HTTP Messages
- Unsecured Session Cookie

## Streaming support for request processing

May 2, 2023

NetScaler Web App Firewall supports request side streaming to provide a significant performance boost. Instead of buffering a request, the appliance examines the incoming traffic for security violation such as SQL, cross-site scripting, field consistency, field formats. When the appliance completes processing data for a field, the request is forwarded to the back-end server while the appliance continues to evaluate other fields. This data processing significantly improves the processing time in handling forms have many fields.

Citrix recommends you to enable streaming for payload content greater than 20MB. Also, the back-end server must accept the chunked requests if streaming is enabled.

### Note:

Post Body Limit action is always set to block and is applicable for both streaming and non-streaming modes. If the incoming traffic is greater than 20MB, Citrix recommends you configure the `PostBodyLimit` to the expected value.

Although the streaming process is transparent to the users, minor configuration adjustments are required due to the following changes:

**RegEx Pattern Match:** RegEx pattern match is now restricted to 4K for contiguous character string match.

**Field Name Match:** The Web App Firewall learning engine can only distinguish the first 128 bytes of the name. If a form has multiple fields with names that have an identical string match for the first 128 bytes, the learning engine does not distinguish them. Similarly, the deployed relaxation rule might inadvertently relax all such fields.

Removal of white spaces, percent decoding, Unicode decoding, and charset conversion are done during canonicalization to provide security check inspection. The 128 byte limit is applicable for the canonicalized representation of the field name in UTF-8 character format. The ASCII characters are 1 byte in length but the UTF-8 representation of the characters in some international languages might range from 1 byte to 4 bytes. If each character in a name takes 4 bytes for converting to UTF-8 format, only the first 32 characters in the name might be distinguished by the learned rule.

**Field Consistency Check:** When you enable Field Consistency, all the forms in the session are stored based on the “as\_fid” tag inserted by the Web App Firewall without considering the “action\_url.”

- **Mandatory Form tagging for Form Field consistency:** When the field consistency check is enabled, the form tag must be enabled also. The Field Consistency protection might not work if form tagging is turned off.
- **Sessionless Form Field Consistency:** The Web App Firewall no longer carries out the “GET” to “POST” conversion of forms when the sessionless field consistency parameter is enabled. The form tag is required for sessionless field consistency also.
- **Tampering of as\_fid:** If a form is submitted after tampering as\_fid, it triggers field consistency violation even if no field was tampered. In non-streaming requests, this was allowed because the forms can be validated using the “action\_url” stored in the session.

**Signatures:** The signatures now have the following specifications:

- **Location:** It is now a mandatory requirement that location must be specified for each pattern. All patterns in the rule **MUST** have a <Location> tag.
- **Fast Match:** All signature rules must have a fast match pattern. If there is no fast match pattern, an attempt is made to select one if possible. Fast match is a literal string but PCRE can be used for fast match if they contain a usable literal string.
- **Deprecated Locations:** Following locations are no longer supported in signature rules.
  - HTTP\_ANY
  - HTTP\_RAW\_COOKIE
  - HTTP\_RAW\_HEADER
  - HTTP\_RAW\_RESP\_HEADER
  - HTTP\_RAW\_SET\_COOKIE



**cross-site scripting/SQL Transform:** Raw data is used for transformation because the SQL special characters such as single quote ('), backslash (\), and semicolon (;), and cross-site scripting tags are the same and do not require canonicalization of data. Representation of special characters such as HTML entity encoding, percent encoding, or ASCII are evaluated for transform operation.

The Web App Firewall no longer inspects both the attribute name and value for the cross-site scripting transform operation. Now only cross-site scripting attribute names are transformed when streaming is engaged.

**Processing cross-site scripting Tags:** As part of the streaming changes in NetScaler 10.5.e build and later, the processing of the cross-site scripting tags has changed. In earlier releases, the presence of either open bracket (<), or close bracket (>), or both open and close brackets (<>) was flagged as cross-site scripting Violation. The behavior has changed in 10.5.e build onwards. Presence of only the open bracket character (<), or only the close bracket character (>) is no longer considered as an attack. This is when an open bracket character (<) is followed by a close bracket character (>), the Cross-site scripting attack gets flagged. Both characters must be present in the right order (< followed by >) to trigger the Cross-site scripting violation.

**Note:**

**Change in SQL violation log Message:** As part of the streaming changes in the NetScaler release 10.5.e onwards, we now process the input data in blocks. RegEx pattern matching is now restricted to 4K for contiguous character string matching. With this change, the SQL violation log messages might include different information compared to the earlier builds. The keyword and special character in the input are separated by many bytes. The appliance has a track of the SQL keywords and special strings when processing the data, instead of buffering the entire input value. In addition to the field name, the log message includes the SQL keyword, SQL special character, or both the SQL keyword and the SQL special character. The rest of the input is no longer included in the log message, as shown in the following example:

**Example:**

In 10.5, when the Web App Firewall detects the SQL violation, the entire input string might be included in the following log message:

```
SQL Keyword check failed for field text="select a name from testbed1;\(\;)"*<blocked>
```

In 11.0, we log only the field name, keyword, and special character (if applicable) in the following log message.

```
SQL Keyword check failed for field text="select(;"<blocked>
```

This change is applicable to requests that contain **application/x-www-form-urlencoded**, or **multipart/form-data**, or **text/x-gwt-rpc** content-types. Log messages generated during processing of **JSON** or **XML** payloads are not affected in this change.

**RAW POST Body:** The security check inspections are always done on the RAW POST body.

**Form ID:** The Web App Firewall inserted “as\_fid” tag, which is a computed hash of the form is longer unique for the user session. It is an identical value for a specific form irrespective of the user or the session.

**Charset:** If a request does not have a charset, the default charset specified in the application profile is used when processing the request.

**Counters:**

Counters with a prefix “se” and “appfwreq” are added to track the streaming engine and streaming engine request counters.

```
nsconsmg -d statswt0 -g se_err_
```

```
nsconsmg -d statswt0 -g se_tot_
```

```
nsconsmg -d statswt0 -g se_cur_
```

```
nsconsmg -d statswt0 -g appfwreq_err_
```

```
nsconsmg -d statswt0 -g appfwreq_tot_
```

```
nsconsmg -d statswt0 -g appfwreq_cur_
```

`_err` counters: indicate the rare event which must have succeeded but failed due to either memory allocation problem or some other resource crunch.

`_tot` counters: ever increasing counters.

`_cur` counters: counters indicating current values that keep changing based on usage from current transactions.

**Tips:**

- The Web App Firewall security checks must work the same as before.
- There is no set ordering for the processing of the security checks.
- The response side processing is not affected and remains unchanged.
- Streaming is not engaged if clientless VPN is used.

**Important:**

**Calculating the Cookie length:** In release 10.5.e in addition to NetScaler release 11.0 (in builds before 65.x), Web App Firewall way of processing the cookie header was changed. The appliance evaluated the cookie individually, and if the length of a cookie in the cookie header exceeded the configured length, the Buffer Overflow violation was triggered. As a result, requests blocked in the NetScaler 10.5 version or earlier releases might be allowed. The length of the entire cookie header is not calculated for determining the cookie length. In some situations, the total cookie size might be larger than the accepted value, and the server might respond with “400 Bad Re-

quest”.

**Note:**

The change has been reverted. The behavior in NetScaler version 10.5.e to version 59.13xx.e and its subsequent builds is similar to the non-enhancement builds of release 10.5. The entire raw Cookie header is now considered when calculating the length of the cookie. Surrounding spaces and the semicolon (;) characters separating the name-value pairs are also included in determining the cookie length.

## Trace HTML requests with security logs

May 2, 2023

**Note:**

This feature is available in NetScaler release 10.5.e.

Troubleshooting requires analysis of data received in the client request and can be challenging. Especially if there is heavy traffic flowing through the appliance. Diagnosing issues might affect the functionality or application security might require a quick response.

The NetScaler isolates traffic for a Web App Firewall profile and collects `nstrace` for the HTML requests. The `nstrace` collected in appfw mode includes request details with log messages. You can use “Follow TCP stream” in the trace to view the details of the individual transaction including headers, payload, and the corresponding log message in the same screen.

This gives you a comprehensive overview regarding your traffic. Having a detailed view of the request, payload, and associated log records can be useful to analyze security check violation. You can easily identify the pattern that is triggering the violation. If the pattern must be allowed, you can take a decision to modify the configuration or add a relaxation rule.

### Benefits

1. **Isolate traffic for specific profile:** This enhancement is useful when you isolate traffic for only one profile or specific transactions of a profile for troubleshooting. You no longer have to skim through the entire data collected in the trace or need special filters to isolate requests interest you which can be tedious with heavy traffic. You can view the data that you prefer.
2. **Collect data for specific requests:** The trace can be collected for a specified duration. You can collect trace for only a couple of requests to isolate, analyze, and debug specific transactions if needed.

3. **Identify resets or aborts:** Unexpected closing of connections is not easily visible. The trace collected in `-appfw` mode captures a reset or an abort, triggered by the Web App Firewall. This allows a quicker isolation of an issue when you do not see a security check violation message. Malformed requests or other non-RFC compliant requests terminated by Web App Firewall will now be easier to identify.
4. **View decrypted SSL traffic:** HTTPS traffic is captured in plain text to allow for easier troubleshooting.
5. **Provides comprehensive view:** Allows you to look at the entire request at the packet level, check the payload, look at the logs to check what security check violation is being triggered and identify the match pattern in the payload. If the payload consists of any unexpected data, junk strings, or non-printable characters (null character, `\r` or `\n` and so forth), they are easy to discover in the trace.
6. **Modify configuration:** The debugging can provide useful information to decide if the observed behavior is the correct behavior or the configuration must be modified.
7. **Expedite response time:** Faster debugging on target traffic can improve the response time to provide explanations or root cause analysis by the NetScaler engineering and support team.

For more information, see [Manual Configuration by using the command line interface](#) topic.

To configure debug tracing for a profile by using the command line interface

Step 1. Enable ns trace.

You can use the `show` command to verify the configured setting.

- `set appfw profile <profile> -trace ON`

Step 2. Collect trace. You can continue to use all the options which are applicable for the `nstrace` command.

- `start nstrace -mode APPFW`

Step 3. Stop trace.

- `stop nstrace`

**Location of the trace:** The `nstrace` is stored in a time-stamped folder which is created in the `/var/nstrace` directory and can be viewed using `wireshark`. You can tail the `/var/log/ns.log` to see the log messages providing details regarding the location of the new trace.

**Tips:**

- When the `appfw` mode option is used, the `nstrace` will only collect the data for one or more profiles for which the “nstrace” was enabled.
- Enabling the trace on the profile will not automatically start collecting the traces until you explicitly run the “start ns trace” command to collect the trace.

- Although enabling trace on a profile may not have any adverse effect on the performance of the Web App Firewall but you may want to enable this feature only for the duration for which you want to collect the data. It is recommended that you turn the `-trace` flag off after you have collected the trace. The option prevents the risk of inadvertently getting data from profiles for which you had enabled this flag in the past.
- The block or log action must be enabled for the security check for the transaction record to be included in the `nstrace`.
- Resets and aborts are logged independently of security checks actions when trace is “On” for the profiles.
- The feature is only applicable for troubleshooting the requests received from the client. The traces in `-appfw` mode do not include the responses received from the server.
- You can continue to use all the options which are applicable for the `nstrace` command. For example,

```
start nstrace -tcpdump enabled -size 0 -mode appFW
```
- If a request triggers multiple violations, the `nstrace` for that record includes all the corresponding log messages.
- CEF log message format is supported for this functionality.
- Signature violations triggering block or log action for request side checks will also be included in the trace.
- Only HTML (non-XML) requests are collected in the trace.

## Web App Firewall support for cluster configurations

May 2, 2023

**Note:**

NetScaler Web App Firewall for striped and partially striped configurations was introduced in NetScaler 11.0 version.

A cluster is a group of NetScaler appliances configured and managed as a single system. Each appliance in the cluster is called a node. Depending on the number of nodes the configurations are active on, cluster configurations are referred to as striped, partially striped, or spotted configurations. The Web App Firewall is fully supported in all configurations.

The two main advantages of striped and partially striped virtual server support in cluster configurations are the following:

1. Session failover support—striped and partially striped virtual server configurations support session failover. The advanced Web App Firewall security features, such as Start URL closure and the Form Field Consistency check, maintain, and use sessions during transaction processing. In a high availability configuration, or in a spotted cluster configuration, when the node that is processing the Web App Firewall traffic fails, all the session information is lost and the user has to re-establish the session. In striped virtual server configurations, user sessions are replicated across multiple nodes. If a node goes down, a node running the replica becomes the owner. Session information is maintained without any visible impact to the user.
2. Scalability—Any node in the cluster can process the traffic. Multiple nodes of the cluster can process the incoming requests served by the striped virtual server. This improves the Web App Firewall's ability to handle multiple simultaneous requests, thereby improving the overall performance.

Security checks and signature protections can be deployed without the need for any additional cluster-specific Web App Firewall configuration. You can do the usual Web App Firewall configuration on the configuration coordinator (CCO) node for propagation to all the nodes.

**Note:**

The session information is replicated across multiple nodes, but not across all the nodes in the striped configuration. Therefore, failover support accommodates a limited number of simultaneous failures. If multiple nodes fail simultaneously, the Web App Firewall might lose the session information if a failure occurs before the session is replicated on another node.

## Highlights

- Web App Firewall offers scalability, high throughput, and session failover support in cluster deployments.
- All Web App Firewall security checks and signature protections are supported in all cluster configurations.
- Character-maps are not yet supported for a cluster. The learning engine recommends Field-Types in learned rules for the Field Format security check.
- Stats and learned rules are aggregated from all the nodes in a cluster.
- Distributed Hash Table (DHT) provides the caching of the session and offers the ability to replicate session information across multiple nodes. When a request comes to the virtual server, the NetScaler appliance creates Web App Firewall sessions in the DHT, and can also retrieve the session information from the DHT.
- Clustering is licensed with the Advanced and Premium licenses. This feature is not available with the Standard license.

## Debugging and troubleshooting

September 21, 2020

Refer to the following troubleshooting and debugging information related to each of the Web App Firewall functionality:

- [Application Firewall - High CPU](#)
- [Memory](#)
- [Large File Upload Failure](#)
- [Learning](#)
- [Signatures](#)
- [Trace log](#)
- [Miscellaneous](#)

### High CPU

May 2, 2023

Following are some of the functionality and high CPU related debugging issues encountered and the best practices to follow when working with Web App Firewall:

#### **Check Policy hits, Bindings, Network configuration, Web App Firewall configuration:**

- Identify misconfiguration
- Identify *vserver* that is serving the affected traffic

#### **Inspect logs in the following log files for security violations and recent configuration changes:**

- `/var/log/ns.log`
- `/var/nslog/import.log`
- `/var/nslog/aslearn.log`
- `tail -f /var/log/ns.log | grep APPFW_SIGNATURE_MATCH`

Example:

```
1 Jun 13 01:11:09 <local0.info> 10.217.31.98 CEF:0|Citrix|NetScaler|NS11
 .0|APPFW| APPFW_SIGNATURE_MATCH|6|src=10.217.253.62 spt=61141 method
 =GET request= http://aaron.stratum8.net/FFC/wwwboard/passwd.txt msg=
 Signature violation rule ID 807: web-cgi /wwwboard/passwd.txt access
 cn1=140 cn2=841 cs1=pr_ffc cs2=PPE0 cs3=
 OyTgjbXBqcpBFeENKDLde30kMQ00001 cs4=ALERT cs5=2015 cs6=web-cgi act=
 not blocked
```

**Isolate the traffic that is effected:**

- Isolate the profile
- Isolate the security check
- Isolate the URL, virtual server and traffic parameters

**Conditional profile level trace helps identify the traffic and violation records:**

- `set appfw profile <profile> -trace ON`
- `start nstrace -mode APPFW -size 0`
- `stop nstrace`

Note: Ensure that the trace is collected with -size 0 option.

**Check appfw, dht, IP reputation activity counters:**

- `nsconmsg -g as_ -g appfwreq_ -g iprep -d current`

**Monitor window size for resets in connection:**

Appfw sets the window size to 9845 when NetScaler resets the connection due to an invalid http message.

**Examples:**

- Malformed request received - connection reset
- High CPU related issues
- Check data sheets for system limits
- Inspect for cpu usage, appfw, DHT and memory related activity. Monitor appfw sessions
- `nsconmsg -g cc_cpu_use -g appfwreq -g as -g dht -g mem_AS_OBJ -g mem_AS_COMPONENT -d current`

**Monitor memory allocated and freed from Web App Firewall components and objects during the target time period.** It helps in isolating the protection leading to high CPU usage.

- Profiler output
- Observe logs

**Isolate appfw check leading to high CPU:**

- startURLClosure
- Formfiledconsistency
- CSRF
- Cookie protections
- Referer header check

**Ascertain that autoupdate of signatures is not leading to high CPU (Disable to confirm).**



## Memory

September 21, 2020

Following are some of the best practices to follow when encountered with Web App Firewall usage memory related issues:

### **nsconmsg command usage:**

- Look for global memory statistics to ascertain that there is enough memory in the system and there are no memory allocation failures by executing the following command:

```
* *- nsconmsg -d memstats
```

- Observe current allocated and maximum memory limits for appsecure, IP reputation, cache and compression by executing the following command:

```
nsconmsg -d memstats | egrep -i APPSECURE|IPREP|CACHE|CMP
```

- Check appfw, DHT, IP reputation activity counters by executing the following command:

```
nsconmsg -g as -g appfwreq_ -g iprep -d current
```

- Check all Web App Firewall error counters by executing the following command:

```
nsconmsg -g as_ -g appfwreq_ -g iprep_ -d stats | grep err
```

- Check all system error counters by executing the following command:

```
nsconmsg -g err -d current
```

- Inspect for CPU, APPFWREQ, AS and DHT counters by executing the following command:

```
nsconmsg -g cc_cpu_use -g appfwreq -g as -g dht -d current
```

- Check the configured Cache memory by executing the following command:

- `show cacheparameter`

- Check the configured memory by executing the following command:

```
nsconmsg -d memstats | egrep -i CACHE
```

- Identify distribution of memory in Web App Firewall components and objects:

### **Display AS\_OBJ\_memory:**

```
nsconmsg -K newslog -d stats | grep AS_OBJ | egrep -v AppFW_cpu0|total | sort -k3
```

### **Display AS\_COMPONENT\_memory:**

```
nsconmsg -K newslog -d stats | grep AS_COMPONENT | egrep -v AppFW_cpu0
|total | sort -k3
```

Check for number of alive sessions by executing the following command:

**Monitor/plot active session counts:**

```
nsconmsg -g as_alive_sessions -d current
```

**Monitor/plot total allocated, free, updated sessions:**

- `nsconmsg -g as_tot_alloc_sessions -g as_tot_free_sessions -d current`
- `nsconmsg -g as_tot_update_sessions -d current`

If required, reduce session timeout to ensure that session limits are not used by executing the following command:

```
set appfwsettings -sessionTimeout <300>
```

If required, set maximum lifetime of session by executing the following command:

```
set appfwsettings -sessionLifetime <7200>
```

## Checking allocated and used memory

To check the total allocated memory and used memory:

- Use the `nsconmsg -d memstats` command. Observe the **MEM\_APPSECURE** field.
- Use the `stat appfw` command to obtain memory consumption information.

Web App Firewall does not automatically delete the logs after certain period of time or size.

- All AppFw logs are archived in the `*/var/log/ns.log*` file. The `ns.log` file performs the rollover task.

For more information, refer to the following link: <http://support.citrix.com/article/CTX121898>

## Increasing Web App Firewall memory:

- There is no CLI option to increase Web App Firewall memory. Web App Firewall memory is platform-specific.
- You may use the `nsapimgr` option to increase memory but it is not recommended.

The max allowed memory for Web App Firewall is determined by the platform and disabling IC does not impact memory allocation.

## Large file upload failures

October 13, 2023

When you encounter large file upload failures, ensure that you check the following:

- Misconfigured application firewall postbody limit.
- Enabled file upload scanning leading to increased processing time.
- Hitting system limits.

For payloads greater than 19 MB, we recommend you to enable streaming on the application firewall profile. Ensure that the back-end server supports chunked requests before enabling streaming.

## Learning

November 20, 2024

Following are some of the best practices recommended when encountered with Learning functionality issues:

### Aslearn process:

- Verify that the process *aslearn* is running.
- Check top command output
- Check output of ps command by executing the following command:

```
ps -ax | grep aslearn | grep -v "grep"
```

### Example:

```
1 root@ns\# ps -ax | grep aslearn | grep -v "grep"
2 1439 ?? Ss 0:03.86 /netScaler/aslearn -start -f /netScaler/
 aslearn.conf
```

- Identify recent configuration commands ran prior to the observed problem by verifying the *ns.log* file:

```
/var/log/ns.log
```

- Inspect aslearn logs to check for aslearn messages:

```
/var/nslog/aslearn.log
```

- Isolate the profile and security check that is effected

- Identify the GUI and CLI command which is failing by executing the following command:

```
show appfw learningdata <profileName> <securityCheck>
```

**Examples:**

- show learningdata test\_profile starturl
- show learningdata test\_profile crosssiteScripting
- show learningdata test\_profile sqlInjection
- show learningdata test\_profile csRFtag
- show learningdata test\_profile fieldformat
- show learningdata test\_profile fieldconsistency

- Perform integrity check of sqlite from bsd shell prompt:

```
1 nsshell # sqlite3 /var/nslog/asl/<profile_name_in_lowercase>.db '
 pragma integrity_check;`
```

**Examples:**

```
1 root@ns# sqlite3 /var/nslog/asl/tsk0247284.db 'pragma
 integrity_check;'
2 ok
```

- Deploy or remove rules to start learning again:
  - If 2000 learn items (per protection) are reached, you cannot start learning any more for that protection
  - If 20 MB size is reached for the database, stop learning for all protections
  - Restart aslearn process

```
/netscaler/aslearn -start -f /netscaler/aslearn.conf
```

- Check the space in the /var folder by executing the following:

```
df -h
```

- Check the learning threshold limits by executing the following command:

```
show appfwlearninThankgsettings <profile_name> <securityCheck>
```

- Collect learned data by executing the following command:

```
export appfwlearningdata <profile_name> <securityCheck>
```

- Ascertain that learned data is uploaded in the collector.

## Signatures

September 21, 2020

### Getting started with signatures

To add signature:

1. Select the **Default**-signature and click **add** to make a copy.
2. Give a meaningful name. The new sig object is added as a User-Defined object.
3. Enable the target rules that are pertinent to your specific need.
  - The rules are disabled by default.
  - more rules require more processing
4. Configure the actions:

Block and Log actions are enabled by default. Stats is another option
5. Set the signature to be used by your profile.

### Tips for Using Signatures

- Optimize the processing overhead by enabling only those signatures that are applicable for protecting your application.
- Every pattern in the rule must match to trigger a signature match.
- You can add your own customized rules to inspect incoming requests to detect various types of attacks, such as SQL injection or cross-site scripting attacks.
- You can also add rules to inspect the responses to detect and block leakage of sensitive information such as credit card numbers.
- Add multiple security check conditions to create your own customized check.

### Best Practices for Using Signatures

Following are some of the best practices you can follow when encountered with issues related to Signatures:

- Verify that the import command has succeeded on primary as well as secondary.

- Verify that CLI and GUI outputs are consistent.
- Check ns.log to identify any errors during signature import and auto update.
- Check if the DNS name server is configured properly.
- Check schema version incompatibility.
- Check if the device is unable to access the Signature Update URL hosted on AWS for auto-update.
- Check for the version mismatch between Default signature and user-added ones.
- Check for version mismatch between signature objects on the primary and secondary nodes.
- Monitor for High CPU Utilization (disable auto-update to rule out issue with signature update).

## Trace Log

September 21, 2020

To record trace logs:

1. Enable tracing for the profile. You can use the show command to verify the configured setting.

```
set appfw profile <profile> -trace ON
```

1. Start collecting trace. You can continue to use all the options which are applicable for the nstrace command.

```
start nstrace -mode APPFW
```

1. Stop collecting the trace

```
stop nstrace
```

Location of the trace: The nstrace is stored in a time-stamped folder which is created in the `/var/nstrace` directory and can be viewed using wireshark. You can tail the `/var/log/ns.log` file to see the log messages providing details regarding the location of the new trace.

Advantages of trace logs:

- Isolate traffic for specific profile
- Collect data for specific requests
- Identify resets or aborts
- View decrypted SSL traffic: HTTPS traffic is captured in plain text to allow for easier troubleshooting.

- Provides comprehensive view: Allows you to look at the entire request at the packet level, check the payload, view logs to check what security check violation is being triggered and identify the match pattern in the payload. If the payload consists of any unexpected data, junk strings, or non-printable characters (null character, \r or \n etc), they are easy to discover in the trace.
- Expedite response time: Faster debugging on target traffic to do root cause analysis.

## Miscellaneous

December 4, 2020

Following are the resolutions for some of the issues that you might encounter when using Web App Firewall.

- Web App Firewall sets window size to 9845 when resetting connection for invalid http messages.
  - Malformed request received - connection reset [Client/Server sending invalid content-length header]
  - Unknown content-type in request headers
- System Limit: the application appears frozen
  - Occurs when maximum session limit is reached. (100K)
  - Less system memory for operation.
    - IP Reputation feature not working
      - The iprep process takes about five minutes to start after you enable the reputation feature. The IP reputation feature might not work for that duration.
- Unexpected Web App Firewall violations being triggered
  - Session timeout has a default value of 900 seconds. If session timeout is set to a low value, browser may trigger false positives for checks which rely on sessionization (e.g CSRF, FFC). Check for session timeout and look at the session ID (cs3 in CEF logs). If the sessionID is different, the session timeout might be the reason.
  - If form is dynamically generated by javascript, it may trigger false FFC violations.
- Empty field name in FFC violation logs (prior to 11.0 release)

This may be seen in scenarios where we come across a form field which is not in the forms in our session.

Scenarios where this may occur:

  - The session has timed out from when the form was sent to the client and when it was received.
  - The form was generated on the client side using a java script.

## References

May 2, 2023

Refer to the following more resources for information about Web App Firewall features.

- [How NetScaler Web App Firewall modifies application data traffic.](#)
- [Trace and how HTML requests with Web App Firewall security violation logs on NetScaler appliance](#)
- [Top level protection](#)
- [Security relaxations](#)
- Information about configuring and deploying an application:
  - [Application](#)
  - [Firewall](#)
  - [Logs](#)
- [Signature update articles](#)
- [Bot Management](#)

## Use case - Binding Web App Firewall policy to a VPN virtual server

February 13, 2024

NetScaler provides a solution to protect multiple applications that are managed by the VPN virtual server. By binding application security policies to the VPN virtual server, you can protect all the applications behind it.

The following are the ways to deploy application security at a VPN virtual server:

- Protect all the applications behind the VPN virtual server with a single Web App Firewall profile
- Protect each application behind the VPN virtual server with a different Web App Firewall profile

### **Protect all the applications behind the VPN virtual server with a single Web App Firewall profile**

To protect all your applications that are behind the VPN virtual server with a single Web App Firewall policy, you must create a Web App Firewall policy and bind it to a VPN virtual server.



**Example:**

A company hosts three critical applications - SAP, Workday, and Tally - on a VPN virtual server. As a network administrator, you decide to protect these applications against the OWASP Top 10 security risks.

To achieve this use case, perform the following operations:

1. Create the Web App Firewall profile with appropriate checks for OSWAP Top 10 security risks.

```
add appfw profile pr-basic -crossSiteScriptingAction block -
SQLInjectionAction block
```

For more information on configuring OSWAP Top 10 security risks, see [Add security protection](#).

2. Add the app firewall policy and associate that policy with the profile pr-basic.

```
add appfw policy owasp_policy true pr-basic
```

3. Bind the Web App Firewall policy to the VPN virtual server.

```
bind appfw vpn vserver vserver10 -policy owasp_policy -priority
10
```

**Protect each application behind VPN virtual server with a different Web App Firewall profile**

To perform specific security checks based on the Web App Firewall architecture (server, OS, JavaScript library, and so on.), individual security checks might be required for each web application. In such scenarios, multiple Web App Firewall policies can be configured.

**Example:**

A company hosts three critical applications (SAP, Workday, and Tally) behind a VPN virtual server. As a network administrator, you decide to create a unique Web App Firewall policy for optimal protection for each application.

To achieve this use case, perform the following operations:

1. Create multiple profiles based on the required application. Configure the profile with the necessary security checks based on the application's need.

```
1 add appfw profile pr-basic1 -crossSiteScriptingAction block -
SQLInjectionAction block
2 add appfw profile pr-basic 2-crossSiteScriptingAction block -
SQLInjectionAction block
3 add appfw profile pr-basic 3 -crossSiteScriptingAction block -
SQLInjectionAction block
```

2. Add the app firewall policies that are applicable for each application and associate the policy with the profile.

```
1 add appfw policy sap_policy true HTTP.REQ.URL.CONTAINS (" sap.com ")
 pr-basic1
2 add appfw policy workday_policy true HTTP.REQ.URL.CONTAINS ("
 workday.com ") pr-basic2
3 add appfw policy tally_policy true HTTP.REQ.URL.CONTAINS (" tally.
 com ") pr-basic3
```

1. Bind the created policy to VPN vserver1

```
1 . bind appfw vpn vserver vserver1 -policy sap_policy -priority 10
2 . bind appfw vpn vserver vserver1 -policy workday_policy -priority 20
3 . bind appfw vpn vserver vserver1 -policy tally_policy -priority 30
```

For more information on the following topics:

- Configuring the Web App Firewall policy, see [Creating and configuring Web App Firewall policies](#).
- Binding the Web App Firewall policy, see [Binding Web App Firewall policies](#).
- Configuring VPN virtual servers, see [Create virtual servers](#).

## Signature alert Articles

May 2, 2023

NetScaler Web App Firewall (WAF) announces signature updates that you can download and apply on your appliance. When you detect a security attack, you will receive an email notification about the new signature update. You can download the signature and apply it on your appliance.

### How to receive signature alert notification

This article explains how to subscribe to RSS feeds to receive notifications for new signature updates. Once subscribed, you receive regular RSS feeds whenever new signatures are available for download.

#### Note:

- To get updates about Web App Firewall signatures, you must configure the signature auto-update feature. For more information, see [Signature Auto Update](#) topic.
- To get updates about new bot signatures, you must configure the bot signature auto-update

feature. For more information, see [Bot Signature Auto Update](#) topic.

**To subscribe to RSS feeds for new signature updates, follow the steps given below:**

1. Open the [Signature alert article document history](#) topic on a web browser.
2. On the top right of the page, click the RSS button and copy the [RSS feed URL](#).
3. Add the copied [RSS feed URL](#) to a desired RSS feed reader.

## Signature update version 143

January 7, 2025

New signatures rules are generated for the vulnerabilities identified in the week 2025-01-07. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 143 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

**Note**

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| Signature rule | CVE ID        | Description                                                                                              |
|----------------|---------------|----------------------------------------------------------------------------------------------------------|
| 998366         | CVE-2024-8529 | WEB-WORDPRESS WordPress Plugin LMS Plugin Prior To 4.2.7.1 - SQL Injection Vulnerability (CVE-2024-8529) |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                      |
|-----------------------|----------------|-------------------------------------------------------------------------------------------------------------------------|
| 998367                | CVE-2024-8522  | WEB-WORDPRESS WordPress Plugin LMS Plugin Prior To 4.2.7.1 - SQL Injection Vulnerability via rest_route (CVE-2024-8522) |
| 998368                | CVE-2024-8522  | WEB-WORDPRESS WordPress Plugin LMS Plugin Prior To 4.2.7.1 - SQL Injection Vulnerability (CVE-2024-8522)                |
| 998369                | CVE-2024-53961 | WEB-MISC Adobe ColdFusion Multiple Versions - Path Traversal Vulnerability (CVE-2024-53961)                             |
| 998370                | CVE-2024-51568 | WEB-MISC CyberPanel Prior to 2.3.5 - Unauthenticated OS Command Injection Vulnerability (CVE-2024-51568)                |
| 998371                | CVE-2024-51567 | WEB-MISC CyberPanel Prior to 2.3.8 - Unauthenticated OS Command Injection Vulnerability (CVE-2024-51567)                |
| 998372                | CVE-2024-51378 | WEB-MISC CyberPanel Prior to 2.3.8 - Unauthenticated OS Command Injection Vulnerability (CVE-2024-51378)                |
| 998373                | CVE-2024-46938 | WEB-MISC SiteCore Up To 10.4 - Arbitrary File Read Vulnerability via sitecore_speak (CVE-2024-46938)                    |
| 998374                | CVE-2024-46938 | WEB-MISC SiteCore Up To 10.4 - Arbitrary File Read Vulnerability via speak (CVE-2024-46938)                             |
| 998375                | CVE-2024-43436 | WEB-MISC Moodle Multiple Versions - SQL Injection Vulnerability (CVE-2024-43436)                                        |

| Signature rule | CVE ID         | Description                                                                                       |
|----------------|----------------|---------------------------------------------------------------------------------------------------|
| 998376         | CVE-2024-42327 | WEB-MISC Zabbix - API SQL Injection Vulnerability (CVE-2024-42327)                                |
| 998377         | CVE-2024-37397 | WEB-MISC Ivanti Endpoint Manager Multiple Versions - XXE Injection Vulnerability (CVE-2024-37397) |

## Signature update version 142

December 11, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-12-09. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 142 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                     |
|----------------|----------------|---------------------------------------------------------------------------------|
| 998378         | CVE-2024-52301 | WEB-MISC Laravel PHP Framework - Security Bypass Vulnerability (CVE-2024-52301) |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                             |
|-----------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|
| 998379                | CVE-2024-50340 | WEB-MISC Symphony PHP Framework - Security Bypass Vulnerability (CVE-2024-50340)                                               |
| 998380                | CVE-2024-45767 | WEB-MISC Dell OpenManage Enterprise Prior to 4.2 - SQL Injection Vulnerability Via ReportDefs (CVE-2024-45767)                 |
| 998381                | CVE-2024-45767 | WEB-MISC Dell OpenManage Enterprise Prior to 4.2 - SQL Injection Vulnerability Via Reports (CVE-2024-45767)                    |
| 998382                | CVE-2024-45216 | WEB-MISC Apache Solr Prior to 9.7.0 or 8.11.4 - Authentication Bypass Vulnerability (CVE-2024-45216)                           |
| 998383                | CVE-2024-43425 | WEB-MISC Moodle Multiple Versions - Remote Code Execution Vulnerability (CVE-2024-43425)                                       |
| 998384                | CVE-2024-10924 | WEB-WORDPRESS Really Simple Security Plugin Prior to 9.2 - Authentication Bypass Vulnerability Via rest_route (CVE-2024-10924) |
| 998385                | CVE-2024-10924 | WEB-WORDPRESS Really Simple Security Plugin Prior to 9.2 - Authentication Bypass Vulnerability (CVE-2024-10924)                |
| 998386                | CVE-2024-10781 | WEB-WORDPRESS WordPress Plugin Anti-Spam by CleanTalk Prior To 6.45 - Authorization Bypass Vulnerability (CVE-2024-10781)      |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                        |
|-----------------------|----------------|---------------------------------------------------------------------------------------------------------------------------|
| 998387                | CVE-2024-10542 | WEB-WORDPRESS WordPress Plugin Anti-Spam by CleanTalk Prior To 6.44 - Authorization Bypass Vulnerability (CVE-2024-10542) |

---

## Signature update version 141

November 20, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-11-19. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 141 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b> | <b>Description</b>                                                                                                      |
|-----------------------|---------------|-------------------------------------------------------------------------------------------------------------------------|
| 998388                | CVE-2024-9634 | WEB-WORDPRESS WordPress Plugin GiveWP Prior To 3.16.4 - Deserialization of Untrusted Data Vulnerability (CVE-2024-9634) |

---

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                               |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------------------------------------|
| 998389                | CVE-2024-9634  | WEB-WORDPRESS WordPress Plugin GiveWP Prior To 3.16.4 - Deserialization of Untrusted Data Vulnerability Via Ajax (CVE-2024-9634) |
| 998390                | CVE-2024-9264  | WEB-MISC Apache Grafana 11.x - Command Injection And Local File Inclusion Vulnerability via SQL Expressions (CVE-2024-9264)      |
| 998391                | CVE-2024-5488  | WEB-WORDPRESS WordPress Plugin SEOPress Prior To 7.9 - Authorization Bypass Vulnerability Via rest_route (CVE-2024-5488)         |
| 998392                | CVE-2024-5488  | WEB-WORDPRESS WordPress Plugin SEOPress Prior To 7.9 - Authorization Bypass Vulnerability (CVE-2024-5488)                        |
| 998393                | CVE-2024-47949 | WEB-MISC JetBrains TeamCity Prior to 2024.07.3 - Path Traversal Vulnerability (CVE-2024-47949)                                   |
| 998394                | CVE-2024-47011 | WEB-MISC Ivanti Avalanche Prior to 6.4.5 - Path Traversal Vulnerability (CVE-2024-47011)                                         |
| 998395                | CVE-2024-47010 | WEB-MISC Ivanti Avalanche Prior to 6.4.5 - Authentication Bypass Vulnerability (CVE-2024-47010)                                  |
| 998396                | CVE-2024-47009 | WEB-MISC Ivanti Avalanche Prior to 6.4.5 - Authentication Bypass Vulnerability (CVE-2024-47009)                                  |



---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                          |
|-----------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|
| 998397                | CVE-2024-43363 | WEB-MISC Cacti Prior to 1.2.28 - Code Injection Vulnerability Via path_stderrlog (CVE-2024-43363)                           |
| 998398                | CVE-2024-43363 | WEB-MISC Cacti Prior to 1.2.28 - Code Injection Vulnerability Via path_cactilog (CVE-2024-43363)                            |
| 998399                | CVE-2024-41874 | WEB-MISC Adobe ColdFusion Multiple Versions - Remote Code Execution Vulnerability (CVE-2024-41874)                          |
| 998400                | CVE-2024-27956 | WEB-WORDPRESS ValvePress Automatic Plugin Prior to 3.92.1 - Unauthenticated SQL Injection Vulnerability (CVE-2024-27956)    |
| 998401                | CVE-2024-27954 | WEB-WORDPRESS ValvePress Automatic Plugin Prior to 3.92.1 - Unauth Path Traversal and SSRF Vulnerabilities (CVE-2024-27954) |

---

## Signature update version 140

October 25, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-10-24. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 140 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

**Note**

Enabling Post body and Response body signature rules might affect NetScaler CPU.

**Common Vulnerability Entry (CVE) insight**

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b> | <b>Description</b>                                                                                                            |
|-----------------------|---------------|-------------------------------------------------------------------------------------------------------------------------------|
| 998402                | CVE-2024-9465 | WEB-MISC Palo Alto Expedition Prior to 1.2.96 - Unauthenticated SQL Injection Vulnerability (CVE-2024-9465)                   |
| 998403                | CVE-2024-9464 | WEB-MISC Palo Alto Expedition Prior to 1.2.96 - OS Command Injection Vulnerability Via start_date (CVE-2024-9464)             |
| 998404                | CVE-2024-9464 | WEB-MISC Palo Alto Expedition Prior to 1.2.96 - OS Command Injection Vulnerability Via start_time (CVE-2024-9464)             |
| 998405                | CVE-2024-8353 | WEB-MISC WordPress Plugin GiveWP Prior To 3.16.2 - Deserialization of Untrusted Data Vulnerability (CVE-2024-8353)            |
| 998406                | CVE-2024-8353 | WEB-MISC WordPress Plugin GiveWP Prior To 3.16.2 - Deserialization of Untrusted Data Vulnerability Via Ajax (CVE-2024-8353)   |
| 998407                | CVE-2024-7781 | WEB-WORDPRESS Artbees Jupiter X Core Plugin Prior to 4.7.8 - Authentication Bypass Vulnerability Via Facebook (CVE-2024-7781) |

---

| <b>Signature rule</b> | <b>CVE ID</b> | <b>Description</b>                                                                                                          |
|-----------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------|
| 998408                | CVE-2024-7781 | WEB-WORDPRESS Artbees Jupiter X Core Plugin Prior to 4.7.8 - Authentication Bypass Vulnerability Via Google (CVE-2024-7781) |
| 998409                | CVE-2024-7772 | WEB-WORDPRESS Artbees Jupiter X Core Plugin Prior to 4.6.6 - Arbitrary File Upload Vulnerability (CVE-2024-7772)            |
| 998410                | CVE-2024-5932 | WEB-MISC WordPress Plugin GiveWP Prior To 3.14.2 - Deserialization of Untrusted Data Vulnerability (CVE-2024-5932)          |
| 998411                | CVE-2024-5932 | WEB-MISC WordPress Plugin GiveWP Prior To 3.14.2 - Deserialization of Untrusted Data Vulnerability Via Ajax (CVE-2024-5932) |
| 998412                | CVE-2024-5910 | WEB-MISC Palo Alto Expedition Prior to 1.2.92 - Missing Authentication for Critical Function Vulnerability (CVE-2024-5910)  |
| 998413                | CVE-2024-5019 | WEB-MISC WhatsUp Gold Prior To 2023.1.3 - Unauthenticated File Disclosure Vulnerability (CVE-2024-5019)                     |
| 998414                | CVE-2024-5018 | WEB-MISC WhatsUp Gold Prior To 2023.1.3 - Unauthenticated File Disclosure Vulnerability (CVE-2024-5018)                     |
| 998415                | CVE-2024-5017 | WEB-MISC WhatsUp Gold Prior To 2023.1.3 - Path Traversal Vulnerability (CVE-2024-5017)                                      |

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                   |
|-----------------------|----------------|------------------------------------------------------------------------------------------------------|
| 998416                | CVE-2024-47374 | WEB-MISC WordPress Plugin LiteSpeed Cache Prior To 6.5.1 - Stored XSS Vulnerability (CVE-2024-47374) |
| 998417                | CVE-2024-38653 | WEB-MISC Ivanti Avalanche Up to 6.3.1 - SmartDeviceServer XXE Vulnerability (CVE-2024-38653)         |

## Signature update version 139

October 3, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-10-02. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 139 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                |
|-----------------------|----------------|-------------------------------------------------------------------------------------------------------------------|
| 998418                | CVE-2024-7591  | WEB-MISC Progress LoadMaster Prior To 7.2.60.1 - Authenticated OS Command Injection Vulnerability (CVE-2024-7591) |
| 998419                | CVE-2024-6658  | WEB-MISC Progress LoadMaster Prior To 7.2.60.1 - OS Command Injection Vulnerability (CVE-2024-6658)               |
| 998420                | CVE-2024-5015  | WEB-MISC WhatsUp Gold Prior To 2023.1.3 - SSRF Vulnerability (CVE-2024-5015)                                      |
| 998421                | CVE-2024-45507 | WEB-MISC Apache Ofbiz Prior to 18.12.16 - SSRF Vulnerability (CVE-2024-45507)                                     |
| 998422                | CVE-2024-45195 | WEB-MISC Apache Ofbiz Prior to 18.12.16 - Direct Request (‘Forced Browsing’) vulnerability (CVE-2024-45195)       |
| 998423                | CVE-2024-29824 | WEB-MISC Ivanti Endpoint Manager Prior To v2022 SU5 - SQL Injection RCE Vulnerability (CVE-2024-29824)            |
| 998424                | CVE-2024-2448  | WEB-MISC Progress LoadMaster - OS Command Injection Vulnerability (CVE-2024-2448)                                 |
| 998425                | CVE-2024-1212  | WEB-MISC Progress LoadMaster - Unauthenticated OS Command Injection Vulnerability via accessv2 (CVE-2024-1212)    |
| 998426                | CVE-2024-1212  | WEB-MISC Progress LoadMaster - Unauthenticated OS Command Injection Vulnerability via access (CVE-2024-1212)      |

---

## Signature update version 138

September 19, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-09-18. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 138 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID        | Description                                                                                                                   |
|----------------|---------------|-------------------------------------------------------------------------------------------------------------------------------|
| 998427         | CVE-2024-7591 | WEB-MISC Progress LoadMaster Prior To 7.2.60.1 - Unauthenticated OS Command Injection Vulnerability Via token (CVE-2024-7591) |
| 998428         | CVE-2024-7591 | WEB-MISC Progress LoadMaster Prior To 7.2.60.1 - Unauthenticated OS Command Injection Vulnerability Via pass (CVE-2024-7591)  |
| 998429         | CVE-2024-7591 | WEB-MISC Progress LoadMaster Prior To 7.2.60.1 - Unauthenticated OS Command Injection Vulnerability Via user (CVE-2024-7591)  |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                           |
|-----------------------|----------------|--------------------------------------------------------------------------------------------------------------|
| 998430                | CVE-2024-6670  | WEB-MISC WhatsUp Gold Prior To 2023.1.3 - Unauthenticated SQL Injection (CVE-2024-6670)                      |
| 998431                | CVE-2024-4884  | WEB-MISC WhatsUp Gold Prior To 2023.1.3 - Command Execution Vulnerability (CVE-2024-4884)                    |
| 998432                | CVE-2024-44000 | WEB-MISC WordPress Plugin LiteSpeed Cache Prior To 6.5.0.1 - Account Takeover Vulnerability (CVE-2024-44000) |
| 998433                | CVE-2024-42362 | WEB-MISC Apache HertzBeat Prior to 1.6.0 - Remote Code Execution Vulnerability (CVE-2024-42362)              |
| 998434                | CVE-2024-42361 | WEB-MISC Apache HertzBeat 1.6.0 - SQL Injection Vulnerability Via label(CVE-2024-42361)                      |
| 998435                | CVE-2024-42361 | WEB-MISC Apache HertzBeat 1.6.0 - SQL Injection Vulnerability Via history(CVE-2024-42361)                    |
| 998436                | CVE-2023-51389 | WEB-MISC Apache HertzBeat Prior to 1.5.0 - Remote Code Execution Vulnerability (CVE-2023-51389)              |

---

## Signature update version 137

September 10, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-09-06. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

## Signature version

Signature version 137 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

## Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| Signature rule | CVE ID        | Description                                                                                                                    |
|----------------|---------------|--------------------------------------------------------------------------------------------------------------------------------|
| 998437         | CVE-2024-7297 | WEB-MISC Langflow Prior to 1.0.13 - Privilege Escalation Vulnerability (CVE-2024-7297)                                         |
| 998438         | CVE-2024-6172 | WEB-WORDPRESS Email Subscribers by Icegram Express Plugin Before 5.7.26 - SQLi Vulnerability unsubscribe_lists (CVE-2024-6172) |
| 998439         | CVE-2024-6172 | WEB-WORDPRESS Email Subscribers by Icegram Express Plugin Before 5.7.26 - SQLi Vulnerability Via db (CVE-2024-6172)            |
| 998440         | CVE-2024-5932 | WEB-MISC WordPress Plugin GiveWP Prior To 3.14.2 - Deserialization of Untrusted Data Vulnerability (CVE-2024-5932)             |
| 998441         | CVE-2024-5932 | WEB-MISC WordPress Plugin GiveWP Prior To 3.14.2 - Deserialization of Untrusted Data Vulnerability Via Ajax (CVE-2024-5932)    |



| <b>Signature rule</b> | <b>CVE ID</b>                     | <b>Description</b>                                                                                                    |
|-----------------------|-----------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| 998442                | CVE-2024-33536                    | WEB-MISC Zimbra Collaboration - XSS Vulnerability via res (CVE-2024-33536)                                            |
| 998443                | CVE-2024-33533,<br>CVE-2024-33535 | WEB-MISC Zimbra Collaboration - Local File Inclusion and XSS Vulnerabilities (CVE-2024-33533, CVE-2024-33535)         |
| 998444                | CVE-2024-22263                    | WEB-MISC Spring Cloud Data Flow Prior To 2.11.3 - Unauthenticated Arbitrary File Write Vulnerability (CVE-2024-22263) |

## Signature update version 136

August 22, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-08-20. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 136 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>                     | <b>Description</b>                                                                                                     |
|-----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------------------------|
| 998445                | CVE-2024-4885                     | WEB-MISC WhatsUp Gold Prior To 2023.1.3 - Unauthenticated Remote Code Execution Vulnerability (CVE-2024-4885)          |
| 998446                | CVE-2024-41667                    | WEB-MISC OpenAM Prior to 15.0.4 - Template Injection Vulnerability (CVE-2024-41667)                                    |
| 998447                | CVE-2024-38856                    | WEB-MISC Apache Ofbiz Prior to 18.12.15 - Incorrect Authorization Vulnerability in EntitySQLProcessor (CVE-2024-38856) |
| 998448                | CVE-2024-38856                    | WEB-MISC Apache Ofbiz Prior to 18.12.15 - Incorrect Authorization Vulnerability in ProgramExport (CVE-2024-38856)      |
| 998449                | CVE-2024-34693                    | WEB-MISC Apache Superset Multiple Versions - Improper Input Validation Vulnerability (CVE-2024-34693)                  |
| 998450                | CVE-2024-32113,<br>CVE-2024-36104 | WEB-MISC Apache Ofbiz Prior to 18.12.14 - Path Traversal Vulnerability (CVE-2024-32113, CVE-2024-36104)                |
| 998451                | CVE-2024-31460                    | WEB-MISC Cacti Prior To 1.2.27 - Stored SQL Injection Vulnerability Via field (CVE-2024-31460)                         |
| 998452                | CVE-2024-31445                    | WEB-MISC Cacti Prior To 1.2.27 - SQL Injection Vulnerability Via filter (CVE-2024-31445)                               |
| 998453                | CVE-2024-28147                    | WEB-MISC Edu-Sharing - Arbitrary File Upload Vulnerability via node (CVE-2024-28147)                                   |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                         |
|-----------------------|----------------|--------------------------------------------------------------------------------------------|
| 998454                | CVE-2024-28147 | WEB-MISC Edu-Sharing - Arbitrary File Upload Vulnerability via collection (CVE-2024-28147) |

---

## Signature update version 135

August 1, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-07-31. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 135 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>                                        | <b>Description</b>                                                                                                         |
|-----------------------|------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| 998455                | CVE-2024-38094,<br>CVE-2024-38024,<br>CVE-2024-38023 | WEB-MISC Microsoft SharePoint Server 2016 and 2019 - Remote Code Execution Vulnerability (CVE-2024-38094, 38024 and 38023) |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                          |
|-----------------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|
| 998456                | CVE-2024-36401 | WEB-MISC GeoServer Multiple Versions - Unauthenticated Remote Code Execution Vulnerability Via TestWfsPost (CVE-2024-36401) |
| 998457                | CVE-2024-36401 | WEB-MISC GeoServer Multiple Versions - Unauthenticated Remote Code Execution Vulnerability Via HTTP Params (CVE-2024-36401) |
| 998458                | CVE-2024-36401 | WEB-MISC GeoServer Multiple Versions - Unauthenticated Remote Code Execution Vulnerability (CVE-2024-36401)                 |
| 998459                | CVE-2024-3246  | WEB-MISC WordPress Plugin LiteSpeed Cache Prior To 6.3.0 - Cross-Site Request Forgery Vulnerability (CVE-2024-3246)         |
| 998460                | CVE-2024-30043 | WEB-MISC Microsoft SharePoint Server 2016 and 2019 - XXE Injection Vulnerability Via upload.aspx (CVE-2024-30043)           |
| 998461                | CVE-2024-30043 | WEB-MISC Microsoft SharePoint Server 2016 and 2019 - XXE Injection Vulnerability (CVE-2024-30043)                           |
| 998462                | CVE-2023-46816 | WEB-MISC SugarCRM Prior to 12.0.4 and 13.0.2 - Server Side Template Injection Vulnerability (CVE-2023-46816)                |
| 998463                | CVE-2023-3162  | WEB-WORDPRESS Stripe Payment Plugin for WooCommerce Prior to 3.7.8 - Authentication Bypass Vulnerability (CVE-2023-3162)    |

---

## Signature update version 134

July 23, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-07-19. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 134 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                                                                     |
|----------------|----------------|---------------------------------------------------------------------------------------------------------------------------------|
| 998464         | CVE-2024-34102 | WEB-MISC Adobe Magento - XML External Entity Vulnerability (CVE-2024-34102)                                                     |
| 998465         | CVE-2024-2782  | WEB-WORDPRESS Contact Form by Fluent Forms before 5.1.17 - Missing Authentication Vulnerability Via POST (CVE-2024-2782)        |
| 998466         | CVE-2024-2782  | WEB-WORDPRESS Contact Form by Fluent Forms before 5.1.17 - Missing Authentication Vulnerability global-settings (CVE-2024-2782) |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                           |
|-----------------------|----------------|------------------------------------------------------------------------------------------------------------------------------|
| 998467                | CVE-2024-2771  | WEB-WORDPRESS Contact Form by Fluent Forms before 5.1.17 - Missing Authentication Vulnerability Via DELETE (CVE-2024-2771)   |
| 998468                | CVE-2024-2771  | WEB-WORDPRESS Contact Form by Fluent Forms before 5.1.17 - Missing Authentication Vulnerability Via POST (CVE-2024-2771)     |
| 998469                | CVE-2024-2771  | WEB-WORDPRESS Contact Form by Fluent Forms before 5.1.17 - Missing Authentication Vulnerability Via managers (CVE-2024-2771) |
| 998470                | CVE-2024-20759 | WEB-MISC Adobe Magento - Stored XSS Vulnerability (CVE-2024-20759)                                                           |
| 998471                | CVE-2024-20179 | WEB-MISC Adobe Magento - Stored XSS Vulnerability (CVE-2024-20179)                                                           |

---

## Signature update version 133

July 2, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-07-02. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 133 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

**Note**

Enabling Post body and Response body signature rules might affect NetScaler CPU.

**Common Vulnerability Entry (CVE) insight**

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                        |
|-----------------------|----------------|-----------------------------------------------------------------------------------------------------------|
| 998472                | CVE-2024-5806  | WEB-MISC Progress MOVEit Transfer - Authentication Bypass Vulnerability Via Log Poisoning (CVE-2024-5806) |
| 998473                | CVE-2024-5276  | WEB-MISC Fortra FileCatalyst Workflow Prior to 5.1.6.139 - SQL Injection Vulnerability (CVE-2024-5276)    |
| 998474                | CVE-2024-31982 | WEB-MISC XWiki Multiple Versions - Unauthenticated Remote Code Execution Vulnerability (CVE-2024-31982)   |

---

**Signature update version 132**

June 28, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-06-27. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

**Signature version**

Signature version 132 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

**Note**

Enabling Post body and Response body signature rules might affect NetScaler CPU.

**Common Vulnerability Entry (CVE) insight**

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                              |
|-----------------------|----------------|---------------------------------------------------------------------------------------------------------------------------------|
| 998475                | CVE-2024-4295  | WEB-WORDPRESS Icegram Express Email Subscribers Prior to 5.7.21 - SQL Injection Vulnerability (CVE-2024-4295)                   |
| 998476                | CVE-2024-37393 | WEB-MISC SecurEnvoy MFA Prior to 9.4.514 - Unauthenticated LDAP Injection Vulnerability Via USERID or MEMBEROF (CVE-2024-37393) |
| 998477                | CVE-2024-36680 | WEB-MISC Prestashop Promokit Facebook Module Up to 1.0.1 - SQL Injection Vulnerability (CVE-2024-36680)                         |
| 998478                | CVE-2024-28995 | WEB-MISC SolarWinds Serv-U Prior to 15.4.2 HF 2 - Directory Traversal Vulnerability (CVE-2024-28995)                            |
| 998479                | CVE-2024-27349 | WEB-MISC Apache HugeGraph-Server Prior to 1.3.0 - Authentication Bypass Vulnerability (CVE-2024-27349)                          |
| 998480                | CVE-2024-27348 | WEB-MISC Apache HugeGraph-Server Prior to 1.3.0 - Remote code Execution Vulnerability (CVE-2024-27348)                          |

---



## Signature update version 131

June 14, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-06-14. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 131 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID        | Description                                                                                                         |
|----------------|---------------|---------------------------------------------------------------------------------------------------------------------|
| 998481         | CVE-2024-4956 | WEB-MISC Sonatype Nexus Repository Prior to 3.68.1 - Unauthenticated Path Traversal Vulnerability (CVE-2024-4956)   |
| 998482         | CVE-2024-4577 | WEB-MISC PHP Prior to 8.1.29, 8.2.20 and 8.3.8 - Command Injection Vulnerability (CVE-2024-4577)                    |
| 998483         | CVE-2024-4358 | WEB-MISC Progress Telerik Report Server - Authentication Bypass Vulnerability (CVE-2024-4358)                       |
| 998484         | CVE-2024-2879 | WEB-WORDPRESS Wordpress plugin LayerSlider Versions 7.9.11 and 7.10.0 - SQL Injection Vulnerability (CVE-2024-2879) |

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                    |
|-----------------------|----------------|-------------------------------------------------------------------------------------------------------|
| 998485                | CVE-2024-23917 | WEB-MISC JetBrains TeamCity Prior to 2023.11.3 - Authentication Bypass Vulnerability (CVE-2024-23917) |
| 998486                | CVE-2024-21683 | WEB-MISC Atlassian Confluence Prior to 8.9.1 - Remote Code Execution Vulnerability (CVE-2024-21683)   |
| 998487                | CVE-2024-0507  | WEB-MISC GitHub Enterprise Server - Command Injection Vulnerability (CVE-2024-0507)                   |
| 998488                | CVE-2023-46729 | WEB-MISC Sentry Next.JS Prior to 7.77.0 - SSRF Via SDK Tunnel Vulnerability (CVE-2023-46729)          |

## Signature update version 130

May 31, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-05-30. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 130 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                      |
|-----------------------|----------------|---------------------------------------------------------------------------------------------------------|
| 998489                | CVE-2024-4434  | WEB-WORDPRESS LearnPress Prior To 4.2.6.6 - Unauthenticated SQL Injection Vulnerability (CVE-2024-4434) |
| 998490                | CVE-2024-4397  | WEB-WORDPRESS LearnPress Prior To 4.2.6.6 - Arbitrary File Upload Vulnerability (CVE-2024-4397)         |
| 998491                | CVE-2024-30163 | WEB-MISC Invision Community Prior to 4.7.16 - SQL Injection Vulnerability (CVE-2024-30163)              |

## Signature update version 129

May 14, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-05-14. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 129 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                            |
|-----------------------|----------------|-------------------------------------------------------------------------------------------------------------------------------|
| 998492                | CVE-2024-31136 | WEB-MISC JetBrains TeamCity Prior to 2024.03 - Two-Factor Authentication Bypass Vulnerability (CVE-2024-31136)                |
| 998493                | CVE-2024-25600 | WEB-WORDPRESS Bricks Builder Prior to 1.9.6.1 - RCE Vulnerability Via AJAX content parameter (CVE-2024-25600)                 |
| 998494                | CVE-2024-25600 | WEB-WORDPRESS Bricks Builder Prior to 1.9.6.1 - RCE Vulnerability Via AJAX element and elements parameters (CVE-2024-25600)   |
| 998495                | CVE-2024-25600 | WEB-WORDPRESS Bricks Builder Prior to 1.9.6.1 - RCE Vulnerability Via REST API render_element Via rest_route (CVE-2024-25600) |
| 998496                | CVE-2024-25600 | WEB-WORDPRESS Bricks Builder Prior to 1.9.6.1 - RCE Vulnerability Via REST API render_element (CVE-2024-25600)                |
| 998497                | CVE-2023-46302 | WEB-MISC Apache Submarine Prior To 0.8.0 - Deserialization of Untrusted Data Vulnerability (CVE-2023-46302)                   |

---

## Signature update version 128

April 29, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-04-26. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

## Signature version

Signature version 128 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

## Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID                            | Description                                                                                                 |
|----------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------|
| 998498         | CVE-2024-4040                     | WEB-MISC CrushFTP Prior to 10.7.1 and 11.1.0 - Server Side Template Injection Vulnerability (CVE-2024-4040) |
| 998499         | CVE-2024-30162                    | WEB-MISC Invision Community - Arbitrary File Upload Vulnerability (CVE-2024-30162)                          |
| 998500         | CVE-2024-23538,<br>CVE-2024-23539 | WEB-MISC Apache Fineract Prior to 1.9 - SQL Injection Vulnerabilities (CVE-2024-23538,CVE-2024-23539)       |
| 998501         | CVE-2024-23538,<br>CVE-2024-23539 | WEB-MISC Apache Fineract Prior to 1.9 - SQL Injection Vulnerabilities (CVE-2024-23538,CVE-2024-23539)       |
| 998502         | CVE-2024-20767                    | WEB-MISC Adobe ColdFusion Multiple Versions - Improper Access Control Vulnerability (CVE-2024-20767)        |
| 998503         | CVE-2024-1981                     | WEB-WORDPRESS WordPress Plugin WPVivid Backup & Migration - SQLi Vulnerability (CVE-2024-1981)              |
| 998504         | CVE-2023-6019                     | WEB-MISC Anyscale Ray - OS Command Injection Vulnerability (CVE-2023-6019)                                  |

---

| <b>Signature rule</b> | <b>CVE ID</b>                     | <b>Description</b>                                                                                                      |
|-----------------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| 998505                | CVE-2023-44092                    | WEB-MISC Pandora FMS Prior to 776 - Remote Code Execution Vulnerability (CVE-2023-44092)                                |
| 998506                | CVE-2023-40000                    | WEB-WORDPRESS LiteSpeed Cache Prior To 5.7.0.1 - Stored Cross Site Scripting Vulnerability (CVE-2023-40000)             |
| 998507                | CVE-2023-40000                    | WEB-WORDPRESS LiteSpeed Cache Prior To 5.7.0.1 - Stored Cross Site Scripting Vulnerability (CVE-2023-40000)             |
| 998508                | CVE-2023-37679,<br>CVE-2023-43208 | WEB-MISC NextGen Mirth Connect < 4.4.1 - Unauthenticated RCE Vulnerability Via /server (CVE-2023-37679, CVE-2023-43208) |
| 998509                | CVE-2023-37679,<br>CVE-2023-43208 | WEB-MISC NextGen Mirth Connect < 4.4.1 - Unauthenticated RCE Vulnerability Via /users (CVE-2023-37679, CVE-2023-43208)  |
| 998510                | CVE-2023-25196                    | WEB-MISC Apache Fineract Prior to 1.8.4 - SQL Injection Vulnerabilities (CVE-2023-25196)                                |
| 998511                | CVE-2023-25195                    | WEB-MISC Apache Fineract Prior to 1.8.4 - Server-Side Request Forgery Vulnerability (CVE-2023-25195)                    |

---

## Signature update version 127

April 5, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-04-04. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 127 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                                                 |
|----------------|----------------|-------------------------------------------------------------------------------------------------------------|
| 998512         | CVE-2024-25153 | WEB-MISC Fortra FileCatalyst Workflow Prior to 5.1.6 - Arbitrary File Upload Vulnerability (CVE-2024-25153) |
| 998513         | CVE-2024-24401 | WEB-MISC NagiosXI Up To 2024R1.01 - SQL Injection Vulnerability (CVE-2024-24401)                            |
| 998514         | CVE-2024-21726 | WEB-MISC Joomla! Prior to 5.0.3 and 4.4.3 - XSS Vulnerability via forceLanguage parameter (CVE-2024-21726)  |
| 998515         | CVE-2024-21726 | WEB-MISC Joomla! Prior to 5.0.3 and 4.4.3 - XSS Vulnerability via forcedItemType parameter (CVE-2024-21726) |

| <b>Signature rule</b> | <b>CVE ID</b> | <b>Description</b>                                                                                                 |
|-----------------------|---------------|--------------------------------------------------------------------------------------------------------------------|
| 998516                | CVE-2024-2055 | WEB-MISC Artica Proxy Prior to 4.50 - Authentication Bypass Vulnerability (CVE-2024-2055)                          |
| 998517                | CVE-2024-2054 | WEB-MISC Artica Proxy Prior to 4.50 - Unauthenticated PHP Object Deserialization Vulnerability (CVE-2024-2054)     |
| 998518                | CVE-2024-2053 | WEB-MISC Artica Proxy Prior to 4.50 - Unauthenticated Arbitrary File Inclusion Vulnerability (CVE-2024-2053)       |
| 998519                | CVE-2023-6063 | WEB-WORDPRESS WP Fastest Cache Plugin Prior to 1.2.2 - Unauthenticated SQL Injection Vulnerability (CVE-2023-6063) |
| 998520                | CVE-2023-3550 | WEB-MISC MediaWiki Prior to 1.41 - Stored XSS Vulnerability (CVE-2023-3550)                                        |

## Signature update version 126

March 15, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-03-15. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 126 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.



## Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                                                                 |
|----------------|----------------|-----------------------------------------------------------------------------------------------------------------------------|
| 998521         | CVE-2024-27198 | WEB-MISC JetBrains TeamCity Prior to 2023.11.4 - Authentication Bypass Vulnerability (CVE-2024-27198)                       |
| 998522         | CVE-2024-25065 | WEB-MISC Apache Ofbiz Prior 18.12.12 - Authentication Bypass Vulnerability (CVE-2024-25065)                                 |
| 998523         | CVE-2024-20738 | WEB-MISC Adobe Framemaker Publishing Server Prior to 2022 Update 2 - Authentication Bypass Via /doxserver/ (CVE-2024-20738) |
| 998524         | CVE-2024-20738 | WEB-MISC Adobe Framemaker Publishing Server Prior to 2022 Update 2 - Authentication Bypass Via /server/ (CVE-2024-20738)    |
| 998525         | CVE-2024-1708  | WEB-MISC ConnectWise ScreenConnect Prior to 23.9.8 - Path Traversal Vulnerability via ZipSlip Attack (CVE-2024-1708)        |
| 998526         | CVE-2024-1071  | WEB-WORDPRESS Ultimate Member From 2.1.3 To 2.8.2 - SQL Injection Vulnerability (CVE-2024-1071)                             |
| 998527         | CVE-2023-5204  | WEB-WORDPRESS AI ChatBot Up To 4.8.9 - SQL Injection Vulnerability (CVE-2023-5204)                                          |
| 998528         | CVE-2023-44313 | WEB-MISC Apache ServiceComb Service-Center Prior to 2.2.0 - Server-Side Request Forgery Vulnerability (CVE-2023-44313)      |

| Signature rule | CVE ID         | Description                                                                                                         |
|----------------|----------------|---------------------------------------------------------------------------------------------------------------------|
| 998529         | CVE-2023-41474 | WEB-MISC Ivanti Avalanche Up to 6.3.4.153 - Path Traversal Vulnerability (CVE-2023-41474)                           |
| 998530         | CVE-2023-41474 | WEB-MISC Ivanti Avalanche Up to 6.3.4.153 - Path Traversal Vulnerability (CVE-2023-41474)                           |
| 998531         | CVE-2023-40597 | WEB-MISC Splunk Enterprise Prior to 8.2.12 9.0.6 and 9.1.1 - Absolute Path Traversal Vulnerability (CVE-2023-40597) |

## Signature update version 125

February 28, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-02-26. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 125 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                    |
|-----------------------|----------------|-----------------------------------------------------------------------------------------------------------------------|
| 998532                | CVE-2024-24830 | WEB-MISC OpenObserve Prior to 0.8.0 - Privilege Escalation (CVE-2024-24830)                                           |
| 998533                | CVE-2024-25106 | WEB-MISC OpenObserve Prior to 0.8.0 - Unauthorized Access Vulnerability (CVE-2024-25106)                              |
| 998534                | CVE-2024-24747 | WEB-MISC MinIO Prior to RELEASE.2024-01-31T20-20-33Z - Improper Privilege Management Vulnerability (CVE-2024-24747)   |
| 998535                | CVE-2024-1709  | WEB-MISC ConnectWise ScreenConnect Prior to 23.9.8 - Authentication Bypass Vulnerability (CVE-2024-1709)              |
| 998536                | CVE-2024-1207  | WEB-WORDPRESS WP Booking Calendar Plugin Prior to 9.9.1 - Unauthenticated SQL Injection Vulnerability (CVE-2024-1207) |
| 998537                | CVE-2024-0221  | WEB-WORDPRESS Photo Gallery Up To 1.8.19 - Directory Traversal Vulnerability (CVE-2024-0221)                          |
| 998538                | CVE-2024-0221  | WEB-WORDPRESS Photo Gallery Up To 1.8.19 - Directory Traversal Vulnerability (CVE-2024-0221)                          |
| 998539                | CVE-2023-46266 | WEB-MISC Ivanti Avalanche Prior to 6.4.2 - Authentication Bypass Vulnerability (CVE-2023-46266)                       |
| 998540                | CVE-2023-46264 | WEB-MISC Ivanti Avalanche Prior to 6.4.2 - Arbitrary File Upload Vulnerability (CVE-2023-46264)                       |

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                        |
|-----------------------|----------------|-----------------------------------------------------------------------------------------------------------|
| 998541                | CVE-2023-46263 | WEB-MISC Ivanti Avalanche Prior to 6.4.2 - Arbitrary File Upload Vulnerability (CVE-2023-46263)           |
| 998542                | CVE-2023-46214 | WEB-MISC Splunk Enterprise Prior to 9.0.7 and 9.1.2 - Insecure XML Parsing Vulnerability (CVE-2023-46214) |
| 998543                | CVE-2021-22962 | WEB-MISC Ivanti Avalanche Prior to 6.4.2 - Authentication Bypass vulnerability (CVE-2021-22962)           |

## Signature update version 124

February 15, 2024

New signature rules are generated for the vulnerabilities identified in the week 2024-02-14. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 124 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                            |
|-----------------------|----------------|---------------------------------------------------------------------------------------------------------------|
| 998544                | CVE-2024-21893 | WEB-MISC Ivanti Connect Secure Multiple Versions - Server Side Request Forgery vulnerability (CVE-2024-21893) |
| 998545                | CVE-2024-21893 | WEB-MISC Ivanti Connect Secure Multiple Versions - Server Side Request Forgery vulnerability (CVE-2024-21893) |
| 998546                | CVE-2023-7028  | WEB-MISC GitLab CE/EE Multiple Versions - Improper Access Control Vulnerability (CVE-2023-7028)               |
| 998547                | CVE-2023-50721 | WEB-MISC xWiki Platform Multiple Versions - Code Injection Vulnerability (CVE-2023-50721)                     |

---

## Signature update version 123

January 25, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-01-25. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 123 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

## Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID                         | Description                                                                                                                   |
|----------------|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| 998548         | CVE-2024-21650                 | WEB-MISC xWiki Platform Prior Multiple Versions - Remote Code Execution Vulnerability (CVE-2024-21650)                        |
| 998549         | CVE-2023-6875, CVE-2023-7027   | WEB-WORDPRESS POST SMTP Plugin Prior to 2.8.8 - Missing Authorization/XSS Vulnerability (CVE-2023-6875, CVE-2023-7027)        |
| 998550         | CVE-2023-51409                 | WEB-WORDPRESS AI Engine Plugin Prior To 1.9.99 - Unauthenticated Arbitrary File Upload (CVE-2023-51409)                       |
| 998551         | CVE-2023-46805, CVE-2024-21887 | WEB-MISC Ivanti Connect Secure Multiple Versions - Remote Code Execution vulnerability (CVE-2023-46805, CVE-2024-21887)       |
| 998552         | CVE-2023-46805, CVE-2024-21887 | WEB-MISC Ivanti Connect Secure Multiple Versions - Remote Code Execution vulnerability (CVE-2023-46805, CVE-2024-21887)       |
| 998553         | CVE-2023-22527                 | WEB-MISC Atlassian Confluence Server and Data Center Multiple Versions - Remote Code Execution Vulnerability (CVE-2023-22527) |

## Signature update version 122

January 17, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-01-17. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 122 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                                          |
|----------------|----------------|------------------------------------------------------------------------------------------------------|
| 998554         | CVE-2023-51467 | WEB-MISC Apache Ofbiz Multiple Versions - Server-Side Request Forgery Vulnerability (CVE-2023-51467) |
| 998555         | CVE-2023-50968 | WEB-MISC Apache Ofbiz Multiple Versions - Server-Side Request Forgery Vulnerability (CVE-2023-50968) |

## Signature update version 121

January 10, 2024

New signatures rules are generated for the vulnerabilities identified in the week 2024-01-09. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

## Signature version

Signature version 121 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

## Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| Signature rule | CVE ID         | Description                                                                                                              |
|----------------|----------------|--------------------------------------------------------------------------------------------------------------------------|
| 998556         | CVE-2023-6553  | WEB-WORDPRESS Backup Migration Plugin Up to 1.3.7 - Remote Code Execution Vulnerability (CVE-2023-6553)                  |
| 998557         | CVE-2023-48777 | WEB-WORDPRESS Elementor Plugin Prior to 3.18.1 - File Upload/Remote Code Execution Vulnerability Via ID (CVE-2023-48777) |
| 998558         | CVE-2023-44350 | WEB-MISC Adobe ColdFusion Multiple Versions - Remote Code Execution Vulnerability (CVE-2023-44350)                       |

---

## Signature update version 120

December 19, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-12-19. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.



## Signature version

Signature version 120 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

## Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                                                         |
|----------------|----------------|---------------------------------------------------------------------------------------------------------------------|
| 998559         | CVE-2023-50164 | WEB-STRUTS Apache Struts Prior to 6.3.0.2 - Path Traversal Vulnerability (CVE-2023-50164)                           |
| 998560         | CVE-2023-49105 | WEB-MISC ownCloud Prior to 10.13.1 - Access Control Bypass Vulnerability (CVE-2023-4105)                            |
| 998561         | CVE-2023-49103 | WEB-MISC ownCloud Multiple Versions - Information Disclosure Vulnerability (CVE-2023-49103)                         |
| 998562         | CVE-2023-47246 | WEB-MISC SysAid Server On-Premise Prior to 23.3.36 - Path Traversal Vulnerability (CVE-2023-47246)                  |
| 998563         | CVE-2023-46509 | WEB-MISC Contec SolarView Compact 6.0 and Prior - OS Command Injection Vulnerability (CVE-2023-46509)               |
| 998564         | CVE-2023-44450 | WEB-MISC NETGEAR ProSAFE Network Management System Prior to 1.7.0.31 - SQL Injection Vulnerability (CVE-2023-44450) |
| 998565         | CVE-2023-44449 | WEB-MISC NETGEAR ProSAFE Network Management System Prior to 1.7.0.31 - SQL Injection Vulnerability (CVE-2023-44449) |

---

| <b>Signature rule</b> | <b>CVE ID</b>                     | <b>Description</b>                                                                                                                       |
|-----------------------|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| 998566                | CVE-2023-44351,<br>CVE-2023-44353 | WEB-MISC Adobe ColdFusion -<br>Deserialization of Untrusted<br>Data Vulnerability<br>(CVE-2023-44351,<br>CVE-2023-44353)                 |
| 998567                | CVE-2023-43177                    | WEB-MISC CrushFTP Prior to<br>10.5.1 - Improper Control of<br>Dynamically-Managed Code<br>Resources Vulnerability<br>(CVE-2023-43177)    |
| 998568                | CVE-2023-40062                    | WEB-MISC SolarWinds Orion<br>Prior to 2023.4.0 - Improper<br>Input Validation Vulnerability<br>Via TestAction<br>(CVE-2023-40062)        |
| 998569                | CVE-2023-40062                    | WEB-MISC SolarWinds Orion<br>Prior to 2023.4.0 - Improper<br>Input Validation Vulnerability<br>Via /api/WriteToFile/<br>(CVE-2023-40062) |
| 998570                | CVE-2023-40055                    | WEB-MISC SolarWinds NCM<br>Prior to 2023.4.1 - Directory<br>Traversal Vulnerability Via<br>SaveResultsToFile<br>(CVE-2023-40055)         |
| 998571                | CVE-2023-40054                    | WEB-MISC SolarWinds NCM<br>Prior to 2023.4.1 - Directory<br>Traversal Vulnerability Via<br>txtConfigTemplate<br>(CVE-2023-40054)         |
| 998572                | CVE-2023-40054                    | WEB-MISC SolarWinds NCM<br>Prior to 2023.4.1 - Directory<br>Traversal Vulnerability Via<br>txtPath (CVE-2023-40054)                      |
| 998573                | CVE-2023-39912                    | Zoho ADManager Plus Prior to<br>7203 - Directory traversal<br>Vulnerability (CVE-2023-39912)                                             |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                     |
|-----------------------|----------------|------------------------------------------------------------------------------------------------------------------------|
| 998574                | CVE-2023-35150 | WEB-MISC XWiki Multiple Versions - Arbitrary Code Injection Vulnerability (CVE-2023-35150)                             |
| 998575                | CVE-2023-32707 | WEB-MISC Splunk Enterprise - Escalation of Privileges Vulnerability (CVE-2023-32707)                                   |
| 998576                | CVE-2023-30943 | WEB-MISC Moodle Prior to 4.1.3 - TinyMCE Loaders Stored Cross-Site Scripting Vulnerability Via loader (CVE-2023-30943) |
| 998577                | CVE-2023-30943 | WEB-MISC Moodle Prior to 4.1.3 - TinyMCE Loaders Stored Cross-Site Scripting Vulnerability Via lang (CVE-2023-30943)   |
| 998578                | CVE-2023-2943  | WEB-MISC OpenEMR Prior to 7.0.1 - HTML Code Injection Vulnerability (CVE-2023-2943)                                    |

---

## Signature update version 119

November 24, 2023

New signature rules are generated for the vulnerabilities identified in the week 2023-11-23. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 119 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

**Note**

Enabling Post body and Response body signature rules might affect NetScaler CPU.

**Common Vulnerability Entry (CVE) insight**

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                                                        |
|----------------|----------------|--------------------------------------------------------------------------------------------------------------------|
| 998579         | CVE-2023-40934 | WEB-MISC NagiosXI Prior to 5.11.2 - SQL Injection Vulnerability (CVE-2023-40934)                                   |
| 998580         | CVE-2023-40932 | WEB-MISC NagiosXI Prior to 5.11.2 - XSS Vulnerability (CVE-2023-40932)                                             |
| 998581         | CVE-2023-40045 | WEB-MISC Progress WS_FTP Server Prior to 8.7.4 and 8.8.2 - Ad Hoc Cross-Site Scripting Vulnerability               |
| 998582         | CVE-2023-37265 | WEB-MISC CasaOS Prior To 0.4.4 - Remote Code Execution Vulnerability via apps_restart (CVE-2023-37265)             |
| 998583         | CVE-2023-37265 | WEB-MISC CasaOS Prior To 0.4.4 - Remote Code Execution Vulnerability via /app_management/compose (CVE-2023-37265)  |
| 998584         | CVE-2023-3256  | WEB-MISC Advantech R-SeeNet Prior to 2.4.23 - Use of Hard-Coded Credentials Vulnerability (CVE-2023-3256)          |
| 998585         | CVE-2023-28323 | WEB-MISC Ivanti Endpoint Manager Up to 2022 Su3 - Deserialization of Untrusted Data Vulnerability (CVE-2023-28323) |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                                  |
|-----------------------|----------------|-------------------------------------------------------------------------------------------------------------------------------------|
| 998586                | CVE-2023-1669  | WEB-WORDPRESS WP<br>SEOPress Plugin Prior To<br>6.5.0.3 - PHP Object Injection<br>Vulnerability (CVE-2023-1669)                     |
| 998587                | CVE-2022-3214  | WEB-MISC Delta Electronics<br>DIAEnergie - Unauthenticated<br>Arbitrary File Upload Via<br>HandlerUploadCalendar<br>(CVE-2022-3214) |
| 998588                | CVE-2022-3214  | WEB-MISC Delta Electronics<br>DIAEnergie - Unauthenticated<br>Arbitrary File Upload Via<br>HandlerUploadTag<br>(CVE-2022-3214)      |
| 998589                | CVE-2022-3214  | WEB-MISC Delta Electronics<br>DIAEnergie - Unauthenticated<br>Arbitrary File Upload Via<br>HandlerUploadCarbon<br>(CVE-2022-3214)   |
| 998590                | CVE-2022-27665 | WEB-MISC Progress WS_FTP<br>Server 8.6.0 - Cross-Site<br>Scripting Vulnerability<br>(CVE-2022-27665)                                |

---

## Signature update version 118

November 13, 2023

New signature rules are generated for the vulnerabilities identified in the week 2023-11-10. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

## Signature version

Signature version 118 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

## Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| Signature rule | CVE ID         | Description                                                                                                          |
|----------------|----------------|----------------------------------------------------------------------------------------------------------------------|
| 998591         | CVE-2023-39968 | WEB-MISC Jupyter Server Prior to 2.7.2 - Open Redirect Vulnerability (CVE-2023-39968)                                |
| 998592         | CVE-2023-38743 | WEB-MISC Zoho ManageEngine ADManager Plus Prior to 7200 - Remote Code Execution Vulnerability (CVE-2023-38743)       |
| 998593         | CVE-2023-22518 | WEB-MISC Confluence Data Center and Server Multiple Versions - Improper Authorization Vulnerability (CVE-2023-22518) |
| 998594         | CVE-2023-20890 | WEB-MISC VMware Aria Operations for Networks - Arbitrary File Write Vulnerability (CVE-2023-20890)                   |
| 998595         | CVE-2023-20889 | WEB-MISC VMware Aria Operations for Networks - Command Injection Vulnerability (CVE-2023-20889)                      |
| 998596         | CVE-2023-20273 | WEB-MISC Cisco IOS XE Software - Command Injection Vulnerability (CVE-2023-20273)                                    |

---

## Signature update version 117

November 1, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-11-01. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 117 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                           |
|----------------|----------------|---------------------------------------------------------------------------------------|
| 998597         | CVE-2023-20198 | WEB-MISC Cisco IOS XE Software - Authentication Bypass Vulnerability (CVE-2023-20198) |

## Signature update version 116

October 16, 2023

Updated signatures rule is generated for the vulnerabilities identified in the week 2023-10-16. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

## Signature version

Signature version 116 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

## Common Vulnerability Entry (CVE) insight

Following is the updated signature rule, CVE ID, and its description.

---

| Signature rule | CVE ID         | Description                                                                                                     |
|----------------|----------------|-----------------------------------------------------------------------------------------------------------------|
| 998599         | CVE-2023-22515 | WEB-MISC Atlassian Confluence Server - Broken Access Control Vulnerability via /setup/*.action (CVE-2023-22515) |

---

## Signature update version 115

October 16, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-10-14. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

## Signature version

Signature version 115 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.



## Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| Signature rule | CVE ID         | Description                                                                                                         |
|----------------|----------------|---------------------------------------------------------------------------------------------------------------------|
| 998598         | CVE-2023-24955 | WEB-MISC Microsoft SharePoint Server - Remote Code Execution Vulnerability (CVE-2023-24955)                         |
| 998599         | CVE-2023-22515 | WEB-MISC Atlassian Confluence Server - Broken Access Control Vulnerability via /setup/*.action (CVE-2023-22515)     |
| 998600         | CVE-2023-22515 | WEB-MISC Atlassian Confluence Server - Broken Access Control Vulnerability via /server-info.action (CVE-2023-22515) |

---

## Signature update version 114

October 5, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-10-05. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 114 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect Citrix ADC CPU.

## Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                                                |
|----------------|----------------|------------------------------------------------------------------------------------------------------------|
| 998601         | CVE-2023-42793 | WEB-MISC JetBrains TeamCity Prior to 2023.05.4 - Authentication Bypass Vulnerability (CVE-2023-42793)      |
| 998602         | CVE-2023-40931 | WEB-MISC NagiosXI Prior to 5.11.2 - SQL Injection Vulnerability (CVE-2023-40931)                           |
| 998603         | CVE-2023-40044 | WEB-MISC Progress WS_FTP Server - Deserialization of Untrusted Data Vulnerability (CVE-2023-40044)         |
| 998604         | CVE-2023-39362 | WEB-MISC Cacti Prior To 1.2.25 - OS Command Injection Vulnerability (CVE-2023-39362)                       |
| 998605         | CVE-2023-39361 | WEB-MISC Cacti Prior to 1.2.25 - SQL Injection Vulnerability (CVE-2023-39361)                              |
| 998606         | CVE-2023-39359 | WEB-MISC Cacti Prior to 1.2.25 - SQL Injection Vulnerability (CVE-2023-39359)                              |
| 998607         | CVE-2023-39358 | WEB-MISC Cacti Prior to 1.2.25 - SQL Injection Vulnerability via reports_admin (CVE-2023-39358)            |
| 998608         | CVE-2023-39358 | WEB-MISC Cacti Prior to 1.2.25 - SQL Injection Vulnerability via reports_user (CVE-2023-39358)             |
| 998609         | CVE-2023-35813 | WEB-MISC Sitecore Through 10.3 - Remote Code Execution Vulnerability (CVE-2023-35813)                      |
| 998610         | CVE-2023-20890 | WEB-MISC VMware Aria Operations for Networks - Path Traversal Vulnerability Via infra API (CVE-2023-20890) |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                |
|-----------------------|----------------|-------------------------------------------------------------------------------------------------------------------|
| 998611                | CVE-2023-20890 | WEB-MISC VMware Aria Operations for Networks - Path Traversal Vulnerability Via data-sources API (CVE-2023-20890) |
| 998612                | CVE-2022-43719 | WEB-MISC Apache Superset Multiple Versions - CSRF Vulnerability (CVE-2022-43719)                                  |
| 998613                | CVE-2022-40881 | WEB-MISC Contec SolarView Compact Prior to 7.21 - OS Command Injection Vulnerability (CVE-2022-40881)             |

---

## Signature update version 113

September 22, 2023

New signature rules are generated for the vulnerabilities identified in the week 2023-09-22. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 113 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect Citrix ADC CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>                     | <b>Description</b>                                                                                                             |
|-----------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| 998614                | CVE-2023-38035                    | WEB-MISC Ivanti Sentry Up To 9.18.0 - Incorrect Authorization Vulnerability via /asproxy/services/ (CVE-2023-38035)            |
| 998615                | CVE-2023-38035                    | WEB-MISC Ivanti Sentry Up To 9.18.0 - Incorrect Authorization Vulnerability via /mics/services/ (CVE-2023-38035)               |
| 998616                | CVE-2023-36846                    | WEB-MISC Juniper JunOS SRX - Missing Authentication for Critical Function Vulnerability Via webauth_operation (CVE-2023-36846) |
| 998617                | CVE-2023-3486                     | WEB-MISC PaperCut NG Prior to 22.1.3 - Unrestricted File Upload Vulnerability (CVE-2023-3486)                                  |
| 998618                | CVE-2023-34468,<br>CVE-2023-40037 | WEB-MISC Apache NiFi Multiple Versions - Command Injection Vulnerability (CVE-2023-34468, CVE-2023-40037)                      |
| 998619                | CVE-2023-33653                    | WEB-MISC Sitecore - Remote Code Execution Vulnerability (CVE-2023-33653)                                                       |
| 998620                | CVE-2023-33224,<br>CVE-2023-23843 | WEB-MISC SolarWinds Orion Platform Prior to 2023.3 - Remote Code Execution Vulnerability (CVE-2023-33224, CVE-2023-23843)      |
| 998621                | CVE-2023-32566                    | WEB-MISC Ivanti Avalanche - SecureFilter Authentication Bypass Vulnerability (CVE-2023-32566)                                  |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                      |
|-----------------------|----------------|---------------------------------------------------------------------------------------------------------|
| 998622                | CVE-2023-32562 | WEB-MISC Ivanti Avalanche Prior to 6.4.1 - Unrestricted File Upload Vulnerability (CVE-2023-32562)      |
| 998623                | CVE-2023-32315 | WEB-MISC Ignite Realtime Openfire - Path Traversal Vulnerability (CVE-2023-32315)                       |
| 998624                | CVE-2023-28128 | WEB-MISC Ivanti Avalanche Prior to 6.4.0 - Unrestricted Upload Vulnerability (CVE-2023-28128)           |
| 998625                | CVE-2023-27066 | WEB-MISC Sitecore Up To 10.2 - Path Traversal Vulnerability (CVE-2023-27066)                            |
| 998626                | CVE-2022-23333 | WEB-MISC Contec SolarView Compact Prior to 7.21 - OS Command Injection Vulnerability (CVE-2022-23333)   |
| 998627                | CVE-2022-37044 | WEB-MISC Zimbra Collaboration Suite Prior to 8.8.15 P33 - XSS Vulnerability via onload (CVE-2022-37044) |
| 998628                | CVE-2022-37044 | WEB-MISC Zimbra Collaboration Suite Prior to 8.8.15 P33 - XSS Vulnerability via extra (CVE-2022-37044)  |
| 998629                | CVE-2022-37044 | WEB-MISC Zimbra Collaboration Suite Prior to 8.8.15 P33 - XSS Vulnerability via title (CVE-2022-37044)  |
| 998630                | CVE-2022-24086 | WEB-MISC Adobe Magento - Arbitrary Code Execution Vulnerability Via wishlist (CVE-2022-24086)           |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                            |
|-----------------------|----------------|-----------------------------------------------------------------------------------------------|
| 998631                | CVE-2022-24086 | WEB-MISC Adobe Magento - Arbitrary Code Execution Vulnerability via checkout (CVE-2022-24086) |

---

## Signature update version 112

September 21, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-08-30. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 112 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect Citrix ADC CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                       |
|-----------------------|----------------|--------------------------------------------------------------------------------------------------------------------------|
| 998632                | CVE-2023-39526 | WEB-MISC PrestaShop Prior to 8.0.5, 8.1.1 and 1.7.8.10 - Arbitrary File Write Vulnerability via OUTFILE (CVE-2023-39526) |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                         |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------------------------------|
| 998633                | CVE-2023-39526 | WEB-MISC PrestaShop Prior to 8.0.5, 8.1.1 and 1.7.8.10 - Arbitrary File Write Vulnerability via DUMPFILER (CVE-2023-39526) |
| 998634                | CVE-2023-39143 | WEB-MISC PaperCut NG/MF Prior to 22.1.3 - Path Traversal Vulnerability in CustomReportExampleServlet (CVE-2023-39143)      |
| 998635                | CVE-2023-37979 | WEB-WORDPRESS Ninja Forms Contact Form Plugin Up to 3.6.25 - Cross-Site Scripting Vulnerability (CVE-2023-37979)           |
| 998636                | CVE-2023-33652 | WEB-MISC Sitecore - Remote Code Execution Vulnerability (CVE-2023-33652)                                                   |
| 998637                | CVE-2023-32563 | WEB-MISC Ivanti Avalanche Prior to 6.4.1 - Arbitrary File Upload Vulnerability (CVE-2023-32563)                            |
| 998638                | CVE-2023-29357 | WEB-MISC Microsoft SharePoint Server - Elevation of Privilege Vulnerability via access_token/prooftoken (CVE-2023-29357)   |
| 998639                | CVE-2023-29357 | WEB-MISC Microsoft SharePoint Server - Elevation of Privilege Vulnerability via Authorization Header (CVE-2023-29357)      |
| 998640                | CVE-2023-22480 | WEB-MISC KubeOperator Prior to 3.16.4 - Improper Authorization Vulnerability (CVE-2023-22480)                              |

---

## Signature update version 111

September 21, 2023

New signature rules are generated for the vulnerabilities identified in the week 2023-08-04. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 111 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect Citrix ADC CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

| Signature rule | CVE ID         | Description                                                                                   |
|----------------|----------------|-----------------------------------------------------------------------------------------------|
| 998641         | CVE-2023-37580 | WEB-MISC Zimbra Collaboration Suite Multiple Versions - XSS Vulnerability (CVE-2023-37580)    |
| 998642         | CVE-2023-35082 | WEB-MISC MobileIron Core (Ivanti EPMM) prior to 11.2 - Authentication Bypass (CVE-2023-35082) |
| 998643         | CVE-2023-35078 | WEB-MISC Ivanti EndPoint Manager Mobile - Authentication Bypass (CVE-2023-35078)              |
| 998644         | CVE-2023-34192 | WEB-MISC Zimbra Collaboration Suite Multiple Versions - XSS Vulnerability (CVE-2023-34192)    |



---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                |
|-----------------------|----------------|---------------------------------------------------------------------------------------------------|
| 998645                | CVE-2023-29382 | WEB-MISC Zimbra Collaboration Suite Multiple Versions - RCE Via sfdc_preauth.jsp (CVE-2023-29382) |

---

## Signature update version 110

September 21, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-07-25. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 110 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect Citrix ADC CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                             |
|-----------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------|
| 998646                | CVE-2023-35036 | WEB-MISC Progress MOVEit Transfer - Authenticated SQL Injection Vulnerability Via X-siLock-FolderID Smuggling (CVE-2023-35036) |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                   |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------------------------|
| 998647                | CVE-2023-35036 | WEB-MISC Progress MOVEit Transfer - Authenticated SQL Injection Vulnerability Via X-siLock-FolderID (CVE-2023-35036) |
| 998648                | CVE-2023-3460  | WEB-WORDPRESS Ultimate Member Wordpress plugin before 2.6.7 Improper Privilege Management (CVE-2023-3460)            |
| 998649                | CVE-2023-33651 | WEB-MISC Sitecore - Authorization Rules Bypass Vulnerability Via MVC Device Simulator (CVE-2023-33651)               |
| 998650                | CVE-2023-33157 | WEB-MISC Microsoft SharePoint - Remote Code Execution Vulnerability (CVE-2023-33157)                                 |
| 998651                | CVE-2023-30777 | WEB-WORDPRESS WordPress Plugin Advanced Custom Fields Up to 6.1.5 - Reflected XSS Vulnerability (CVE-2023-30777)     |
| 998652                | CVE-2023-30545 | WEB-MISC PrestaShop Prior to 8.0.4 and 1.7.8.9 - Arbitrary File Read Vulnerability via LOAD_FILE (CVE-2023-30545)    |
| 998653                | CVE-2023-2986  | WEB-WORDPRESS Abandoned Cart Lite for WooCommerce plugin up to 5.14.2 Authentication Bypass (CVE-2023-2986)          |
| 998654                | CVE-2023-2982  | WEB-WORDPRESS Wordpress Plugin Social Login and Register prior to 7.6.4 - Authentication Bypass (CVE-2023-2982)      |
| 998655                | CVE-2023-29489 | WEB-MISC cPanel prior to 11.102.0.31 - XSS Vulnerability (CVE-2023-29489)                                            |

---

| <b>Signature rule</b> | <b>CVE ID</b>                                        | <b>Description</b>                                                                                                                          |
|-----------------------|------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| 998656                | CVE-2023-29300,<br>CVE-2023-38203,<br>CVE-2023-38204 | WEB-MISC Adobe ColdFusion -<br>Deserialization of Untrusted<br>Data Vulnerability<br>(CVE-2023-29300,<br>CVE-2023-38203,<br>CVE-2023-38204) |
| 998657                | CVE-2023-29298,<br>CVE-2023-38205                    | WEB-MISC Adobe ColdFusion<br>Multiple Versions - Access<br>Control Bypass Vulnerability via<br>restplay (CVE-2023-29298,CVE-<br>2023-38205) |
| 998658                | CVE-2023-29298,<br>CVE-2023-38205                    | WEB-MISC Adobe ColdFusion<br>Multiple Versions - Access<br>Control Bypass Vulnerability via<br>cfide (CVE-2023-29298,CVE-<br>2023-38205)    |
| 998659                | CVE-2023-28121                                       | WEB-WORDPRESS WordPress<br>Plugin WooCommerce<br>Payments Up to 5.6.1 - Privilege<br>Elevation Vulnerability<br>(CVE-2023-28121)            |
| 998660                | CVE-2023-27372                                       | WEB-MISC SPIP up to 3.2.17,<br>4.0.0 to 4.0.9, 4.1.0 to 4.1.7,<br>4.2.0 Remote Code Execution<br>(CVE-2023-27372)                           |
| 998661                | CVE-2023-27372                                       | WEB-MISC SPIP up to 3.2.17,<br>4.0.0 to 4.0.9, 4.1.0 to 4.1.7,<br>4.2.0 Remote Code Execution<br>(CVE-2023-27372)                           |
| 998662                | CVE-2023-27350                                       | WEB-MISC PaperCut NG -<br>Authentication Bypass<br>Vulnerability (CVE-2023-27350)                                                           |
| 998663                | CVE-2023-27067                                       | WEB-MISC Sitecore Up To 10.2 -<br>Path Traversal Vulnerability<br>(CVE-2023-27067)                                                          |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                      |
|-----------------------|----------------|-------------------------------------------------------------------------------------------------------------------------|
| 998664                | CVE-2023-26360 | WEB-MISC Adobe ColdFusion 2018 prior to update 16 and 2021 prior to update 6 - Improper Access Control (CVE-2023-26360) |
| 998665                | CVE-2023-26262 | WEB-MISC Sitecore - Unrestricted Language File Upload Vulnerability (CVE-2023-26262)                                    |
| 998666                | CVE-2023-2611  | WEB-MISC Advantech R-SeeNet Prior to 2.4.23 - Use of Hard-Coded Credentials Vulnerability (CVE-2023-2611)               |
| 998667                | CVE-2023-25804 | WEB-MISC Roxy-WI Prior to 6.3.6.0 - Path Traversal Vulnerability (CVE-2023-25804)                                       |
| 998668                | CVE-2023-2575  | WEB-MISC Advantech EKI-15XX - Stack-based Buffer Overflow Vulnerability (CVE-2023-2575)                                 |
| 998669                | CVE-2023-2574  | WEB-MISC Advantech EKI-15XX - OS Command Injection Vulnerability (CVE-2023-2574)                                        |
| 998670                | CVE-2023-2573  | WEB-MISC Advantech EKI-15XX - OS Command Injection Vulnerability (CVE-2023-2573)                                        |
| 998671                | CVE-2023-25690 | WEB-MISC Apache HTTP Server 2.4.0 Through 2.4.55 - Request Smuggling Vulnerability Via Line Feed (CVE-2023-25690)       |
| 998672                | CVE-2023-25690 | WEB-MISC Apache HTTP Server 2.4.0 Through 2.4.55 - Request Smuggling Vulnerability Via Carriage Return (CVE-2023-25690) |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                           |
|-----------------------|----------------|------------------------------------------------------------------------------------------------------------------------------|
| 998673                | CVE-2023-23489 | WEB-WORDPRESS Wordpress plugin Easy Digital Downloads prior to v3.1.0.2 - SQL Injection Vulnerability (CVE-2023-23489)       |
| 998674                | CVE-2023-20887 | WEB-MISC VMware Aria Operations for Networks - Command Injection Vulnerability (CVE-2023-20887)                              |
| 998675                | CVE-2023-1671  | WEB-MISC Sophos Web Appliance prior to 4.3.10.4 - Command Injection (CVE-2023-1671)                                          |
| 998676                | CVE-2023-1196  | WEB-WORDPRESS WordPress plugin Advanced Custom Fields prior to 5.12.5 and 6.1.0 - Untrusted Deserialization (CVE-2023-1196)  |
| 998677                | CVE-2023-1138  | WEB-MISC Delta Electronics InfraSuite Device Master Prior to 1.0.5 - Information Disclosure Via Report (CVE-2023-1138)       |
| 998678                | CVE-2023-1138  | WEB-MISC Delta Electronics InfraSuite Device Master Prior to 1.0.5 - Information Disclosure Via ModuleConfig (CVE-2023-1138) |
| 998679                | CVE-2023-1137  | WEB-MISC Delta Electronics InfraSuite Device Master Prior to 1.0.5 - Information Disclosure Vulnerability (CVE-2023-1137)    |
| 998680                | CVE-2023-0255  | WEB-WORDPRESS Wordpress plugin Enable Media Replace prior to 4.0.2 - Arbitrary File Upload Vulnerability (CVE-2023-0255)     |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                  |
|-----------------------|----------------|---------------------------------------------------------------------------------------------------------------------|
| 998681                | CVE-2022-36963 | WEB-MISC SolarWinds Platform Prior to 2023.2 - Command Injection Vulnerability Via TestCredentials (CVE-2022-36963) |
| 998682                | CVE-2022-29303 | WEB-MISC Contec SolarView Compact Prior to 7.21 - OS Command Injection Vulnerability (CVE-2022-29303)               |
| 998683                | CVE-2022-2185  | WEB-MISC GitLab Multiple Versions Prior to 14.10.5 and 15.1.1 - Remote Execution Vulnerability (CVE-2022-2185)      |
| 998684                | CVE-2020-5284  | WEB-MISC Next.js Prior to 9.3.2 - Path Traversal Vulnerability (CVE-2020-5284)                                      |

---

## Signature update version 109

September 21, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-07-14. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 109 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect Citrix ADC CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| Signature rule | CVE ID         | Description                                                                                            |
|----------------|----------------|--------------------------------------------------------------------------------------------------------|
| 998685         | CVE-2023-36933 | WEB-MISC Progress MOVEit Transfer Multiple Versions - Denial Of Service Vulnerability (CVE-2023-36933) |

---

### Signature update version 108

September 21, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-07-12. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 108 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect Citrix ADC CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| Signature rule | CVE ID         | Description                                                                                        |
|----------------|----------------|----------------------------------------------------------------------------------------------------|
| 998686         | CVE-2023-36934 | WEB-MISC Progress MOVEit Transfer Multiple Versions - SQL Injection Vulnerability (CVE-2023-36934) |

---

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                         |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------------------------------|
| 998687                | CVE-2023-36932 | WEB-MISC Progress MOVEit Transfer Multiple Versions - SQL Injection Vulnerability Via folderlistrecursive (CVE-2023-36932) |

---

## Signature update version 107

September 21, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-06-16. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 107 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                 |
|-----------------------|----------------|--------------------------------------------------------------------------------------------------------------------|
| 998688                | CVE-2023-35708 | WEB-MISC Progress MOVEit Transfer Multiple Versions - Unauthenticated SQL Injection Vulnerability (CVE-2023-35708) |



---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                 |
|-----------------------|----------------|--------------------------------------------------------------------------------------------------------------------|
| 998689                | CVE-2023-35036 | WEB-MISC Progress MOVEit Transfer Multiple Versions - Unauthenticated SQL Injection Vulnerability (CVE-2023-35036) |

---

## Signature update version 106

September 21, 2023

New signatures rules are generated for the vulnerabilities identified in the week 2023-06-16. You can download and configure these signature rules to protect your appliance from security vulnerable attacks.

### Signature version

Signature version 106 applicable for NetScaler 11.1, NetScaler 12.0, Citrix ADC 12.1, Citrix ADC 13.0, NetScaler 13.1, NetScaler 14.1 platforms.

#### Note

Enabling Post body and Response body signature rules might affect NetScaler CPU.

### Common Vulnerability Entry (CVE) insight

Following is a list of signature rules, CVE IDs, and its description.

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                 |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------|
| 998690                | CVE-2023-34362 | WEB-MISC Progress MOVEit Transfer Multiple Versions - SQL Injection Vulnerability (CVE-2023-34362) |

---

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                              |
|-----------------------|----------------|---------------------------------------------------------------------------------------------------------------------------------|
| 998691                | CVE-2023-32243 | WEB-WORDPRESS WordPress Plugin Essential Addons for Elementor Up to 5.7.1 - Privilege Escalation Vulnerability (CVE-2023-32243) |
| 998692                | CVE-2023-29084 | WEB-MISC Zoho ManageEngine ADManager Plus Prior to 7181 - OS Command Injection Vulnerability (CVE-2023-29084)                   |
| 998693                | CVE-2023-29004 | WEB-MISC Roxy-WI Prior to 6.3.9.0 - Absolute Path Traversal Vulnerability (CVE-2023-29004)                                      |
| 998694                | CVE-2023-27351 | WEB-MISC PaperCut NG - Authentication Bypass Vulnerability Via /autosetup/setStatus (CVE-2023-27351)                            |
| 998695                | CVE-2023-27351 | WEB-MISC PaperCut NG - Authentication Bypass Vulnerability vi /register or /registerCreate (CVE-2023-27351)                     |
| 998696                | CVE-2023-27351 | WEB-MISC PaperCut NG - Authentication Bypass Vulnerability via /keepalive (CVE-2023-27351)                                      |
| 998697                | CVE-2023-27350 | WEB-MISC PaperCut NG - Authentication Bypass Vulnerability (CVE-2023-27350)                                                     |
| 998698                | CVE-2023-25812 | WEB-MISC MinIO Prior to RELEASE.2023-02-17T17-52-43Z - Improper Preservation of Permissions Vulnerability (CVE-2023-25812)      |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                         |
|-----------------------|----------------|----------------------------------------------------------------------------------------------------------------------------|
| 998699                | CVE-2023-25812 | WEB-MISC MinIO Prior to RELEASE.2023-02-17T17-52-43Z - Improper Preservation of Permissions Vulnerability (CVE-2023-25812) |
| 998700                | CVE-2023-25803 | WEB-MISC Roxy-WI Prior to 6.3.6.0 - Path Traversal Vulnerability (CVE-2023-25803)                                          |
| 998701                | CVE-2023-24031 | WEB-MISC Zimbra Collaboration Suite Prior to 9.0.0 P30 - XSS Vulnerability via clazz (CVE-2023-24031)                      |
| 998702                | CVE-2023-24031 | WEB-MISC Zimbra Collaboration Suite Prior to 9.0.0 P30 - XSS Vulnerability via altkey (CVE-2023-24031)                     |
| 998703                | CVE-2023-24031 | WEB-MISC Zimbra Collaboration Suite Prior to 9.0.0 P30 - XSS Vulnerability via title (CVE-2023-24031)                      |
| 998704                | CVE-2023-24031 | WEB-MISC Zimbra Collaboration Suite Prior to 9.0.0 P30 - XSS Vulnerability via counter (CVE-2023-24031)                    |
| 998705                | CVE-2023-2338  | WEB-MISC Pimcore prior to v10.5.21 - SQL Injection Vulnerability (CVE-2023-2338)                                           |
| 998706                | CVE-2023-2336  | WEB-MISC Pimcore prior to v10.5.21 - Path Traversal Vulnerability (CVE-2023-2336)                                          |
| 998707                | CVE-2023-22973 | WEB-MISC OpenEMR Prior to 7.0.0 - Local File Inclusion (LFI) (CVE-2023-22973)                                              |
| 998708                | CVE-2023-21742 | WEB-MISC Microsoft SharePoint - Remote Code Execution Vulnerability (CVE-2023-21742)                                       |

---

| <b>Signature rule</b> | <b>CVE ID</b>  | <b>Description</b>                                                                                                     |
|-----------------------|----------------|------------------------------------------------------------------------------------------------------------------------|
| 998709                | CVE-2023-20864 | WEB-MISC VMware Aria Operations for Logs 8.10.2 - Deserialization Vulnerability Via approveMembership (CVE-2023-20864) |
| 998710                | CVE-2023-20864 | WEB-MISC VMware Aria Operations for Logs 8.10.2 - Deserialization Vulnerability Via setToken (CVE-2023-20864)          |
| 998711                | CVE-2023-20864 | WEB-MISC VMware Aria Operations for Logs 8.10.2 - Deserialization Vulnerability Via applyMembership (CVE-2023-20864)   |
| 998712                | CVE-2023-1578  | WEB-MISC Pimcore prior to v10.5.19 - SQL Injection Vulnerability (CVE-2023-1578)                                       |
| 998713                | CVE-2023-1406  | WEB-WORDPRESS JetEngine Plugin Prior to 3.1.3.1 - Remote Code Execution Vulnerability (CVE-2023-1406)                  |
| 998714                | CVE-2023-0315  | WEB-MISC Froxlor Remote Code Execution (CVE-2023-0315)                                                                 |
| 998715                | CVE-2022-45030 | WEB-MISC rConfig 3.9.7 and Prior - SQL Injection Vulnerability (CVE-2022-45030)                                        |
| 998716                | CVE-2022-43396 | WEB-MISC Apache Kylin - Command Injection Vulnerability Via Configuration Overwrites (CVE-2022-43396)                  |
| 998717                | CVE-2022-31700 | WEB-MISC VMware Workspace ONE Access - Remote Code Execution Vulnerability via Multipart (CVE-2022-31700)              |

| <b>Signature rule</b> | <b>CVE ID</b>                               | <b>Description</b>                                                                                                          |
|-----------------------|---------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| 998718                | CVE-2022-31700                              | WEB-MISC VMware Workspace ONE Access - Remote Code Execution Vulnerability via JSON (CVE-2022-31700)                        |
| 998719                | CVE-2022-2884, CVE-2022-2992, CVE-2022-2865 | WEB-MISC GitLab Multiple Versions - Remote Code Execution Vulnerability (CVE-2022-2884, CVE-2022-2992, CVE-2022-2865)       |
| 998720                | CVE-2022-27926                              | WEB-MISC Zimbra Collaboration Suite Prior to 9.0.0 P24 - XSS Vulnerability (CVE-2022-27926)                                 |
| 998721                | CVE-2022-0824                               | WEB-CGI Improper Access Control to Remote Code Execution in WebMin prior to 1.990 using the Authentic-Theme (CVE-2022-0824) |

---

## Bot Management

May 2, 2023

Sometimes the incoming web traffic is comprised of bots and most organizations suffer from bot attacks. Web and mobile applications are significant revenue drivers for business and most companies are under the threat of advanced cyberattacks, such as bots.

A bot is a software program that automatically performs certain actions repeatedly at a much faster rate than a human. Bots can interact with webpages, submit forms, run actions, scan texts, or download content. They can access videos, post comments, and tweet on social media platforms. Some bots, known as chatbots, can hold basic conversations with human users.

A bot that performs a helpful service, such as customer service, automated chat, and search engine crawlers are good bots. At the same time, a bot that can scrape or download content from a website, steal user credentials, spam content, and perform other kinds of cyberattacks are bad bots.

With a good number of bad bots performing malicious tasks, it is essential to manage bot traffic and protect your web applications from bot attacks. By using NetScaler bot management, you can detect the incoming bot traffic and mitigate bot attacks to protect your web applications.

NetScaler bot management helps identify bad bots and protect your appliance from advanced security attacks. It detects good and bad bots and identifies if incoming traffic is a bot attack. By using bot management, you can mitigate attacks and protect your web applications.

NetScaler bot management provides the following benefits:


- **Defend against bots, scripts, and toolkits.** Provides real-time threat mitigation using static signature based defense and device fingerprinting.
- **Neutralize automated basic and advanced attacks.** Prevents attacks, such as App layer DDoS, password spraying, password stuffing, price scrapers, and content scrapers.
- **Protect your APIs and investments.** Protects your APIs from unwarranted misuse and protects infrastructure investments from automated traffic.

Some use cases where you can benefit by using the NetScaler bot management system are:

- **Brute force login.** A government web portal is constantly under attack by bots attempting to brute force user logins. The organization discovered the attack by looking through web logs and seeing specific users being select over and over again with rapid login attempts and passwords incrementing using a dictionary attack approach. By law, they must protect themselves and their users. By deploying the NetScaler bot management, they can stop brute force login using device fingerprinting and rate limiting techniques.
- **Block bad bots and device fingerprint unknown bots.** A web entity gets 100,000 visitors each day. They have to upgrade the underlying footprint and they are spending a fortune. In a recent audit, the team discovered that 40 percent of the traffic came from bots, scraping content, picking news, checking user profiles, and more. They want to block this traffic to protect their users and reduce their hosting costs. Using bot management, they can block known bad bots, and fingerprint unknown bots that are hammering their site. By blocking these bots, they can reduce bot traffic by 90 percent.


## What does NetScaler bot management do

The NetScaler bot management helps organizations protect their web applications and public assets from advanced security attacks. When an incoming traffic is a bot, the bot management system detects the bot type, assigns an action, and generates bot insights, as shown in the following diagram.

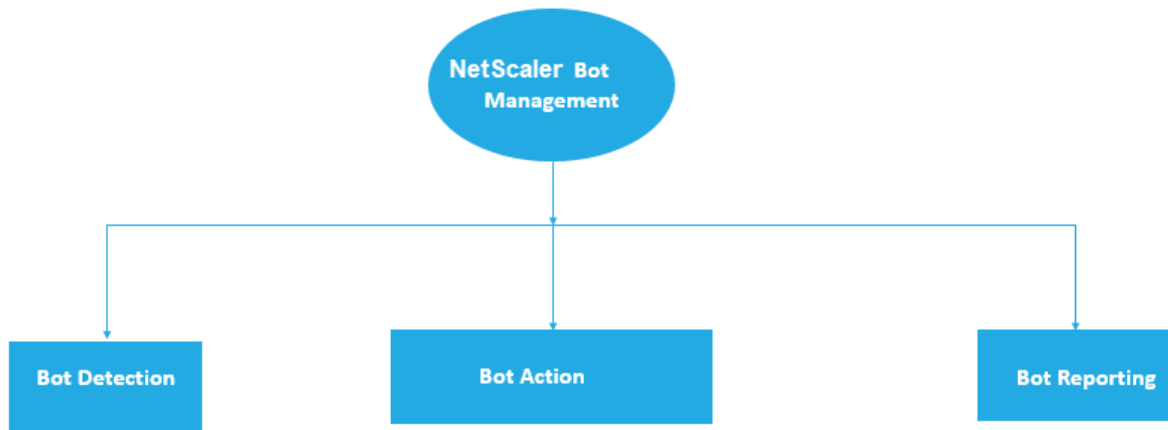

### How does NetScaler bot management work

The following diagram shows how the NetScaler bot management works. The process involves eight detection techniques that help in detecting the incoming traffic as a good or a bad bot. By default good bots detected by signatures are allowed and bad bots detected by signatures are dropped.

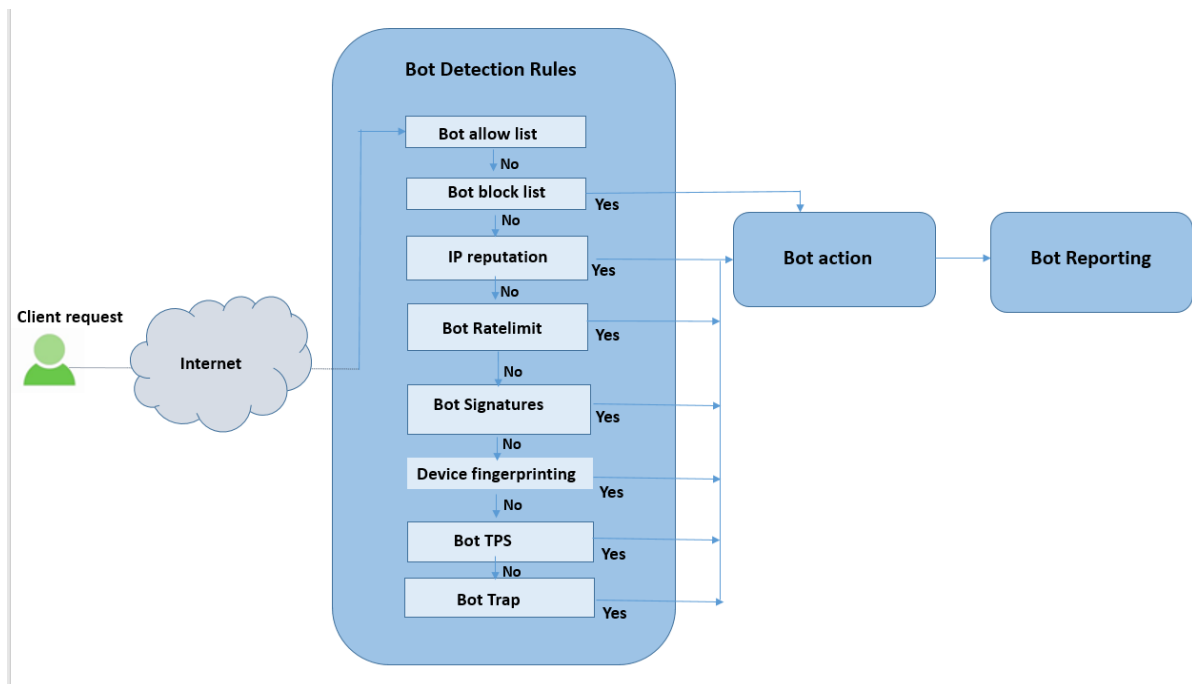

1. The process starts by enabling the bot management feature on the appliance.
2. When a client sends a request, the appliance evaluates the traffic using bot policy rules. If the incoming request is identified as a bot, the appliance applies a bot detection profile.
3. You must bind the default or custom bot signature file to the bot detection profile. The bot signature file has a list of bot signature rules for identifying the incoming bot type.

4. The bot detection rules are available under eight detection categories in the signature file. The categories are allow list, block list, static signature, IP reputation, device fingerprint, and rate limiting. Based on the bot traffic, the system applies a detection rule to the traffic.
5. If the incoming bot traffic matches an entry in the bot allow list, the system bypasses other detection techniques and the associated action logs the data.
6. For detection techniques other than bot allow list, if an incoming request matches a configured rule, the corresponding action is applied. The possible actions are drop, redirect, reset, mitigation, and log. CAPTCHA is a mitigation action which is supported for IP reputation, device fingerprinting, and TPS detection techniques.

## Bot Detection

August 13, 2024

The NetScaler bot management system uses various techniques to detect the incoming bot traffic. The techniques are used as detection rules to detect the bot type. The techniques are as follows:

### Note:

Bot management supports a maximum of 32 configuration entities for block list, allow list, and rate limiting techniques.

**Bot Allowed list** - A customized list of IP addresses (IPv4 and IPv6), subnets (IPv4 and IPv6), and policy expressions that can be bypassed as an allowed list.

**Bot Blocked list** - A customized list of IP addresses (IPv4 and IPv6), subnets (IPv4 and IPv6), and policy expressions that have to be blocked from accessing your web applications.

**IP reputation** - This rule detects if the incoming bot traffic is from a malicious IP address.

**Device fingerprint** - This rule detects if the incoming bot traffic has the device fingerprint ID in the incoming request header and browser attributes of an incoming client bot traffic.

### Limitation:

1. Java Script must be enabled in the client browser.
2. Does not work for XML responses.

**Bot log expression** - The detection technique enables you to capture additional information as log messages. The data can be the name of the user who requested the URL, the source IP address, and the source port from which the user sent the request or data generated from an expression.

**Rate limit** - This rule rate limits multiple requests coming from the same client.



**Bot trap** - Detects and blocks automated bots by advertising a trap URL in the client response. The URL appears invisible and not accessible if the client is a human user. The detection technique is effective in blocking attacks from automated bots.

**TPS** - Detects incoming traffic as bots if the maximum number of requests and percentage increase in requests exceeds the configured time interval.

**CAPTCHA** - This rule uses a CAPTCHA for mitigating bot attacks. A CAPTCHA is a challenge-response validation to determine if the incoming traffic is from a human user or an automated bot. The validation helps block automated bots that cause security violations to web applications. You can configure CAPTCHA as a bot action in IP reputation and device fingerprint detection techniques.

Now, let us see how you can configure each technique to detect and manage your bot traffic.

## How to upgrade your appliance to NetScaler CLI-based bot management configuration

If you are upgrading your appliance from an older version (NetScaler release 13.0 build 58.32 or earlier), you must first manually convert the existing bot management configuration to the NetScaler CLI based bot management configuration only once. Complete the following steps to manually convert your bot management configuration.

1. After upgrading to the latest version connect to the upgrade tool “upgrade\_bot\_config.py” by using the following command

At the command prompt, type:

```
shell "/var/python/bin/python /netscaler/upgrade_bot_config.py > /var/bot_upgrade_commands.txt"
```

2. Run the configuration using the following command.

At the command prompt, type:

```
batch -f /var/bot_upgrade_commands.txt
```

3. Save the upgraded configuration.

```
save ns config
```

## Configure NetScaler CLI-based bot management

The bot management configuration enables you to bind one or more bot detection techniques to a specific bot profile.

You must complete the following steps to configure NetScaler-based bot management:

1. Enable bot management

2. Import bot signature
3. Add bot profile
4. Bind bot profile
5. Add bot policy
6. Bind bot policy
7. Configure bot settings

**Note:**

If you are upgrading your appliance from an older version, you must first manually convert the existing bot management configuration. For more information, see [How to upgrade to NetScaler CLI-based bot management configuration](#) section.

**Enable bot management**

Before you can begin, ensure that the Bot Management feature is enabled on the appliance. If you have a new NetScaler or VPX, you must enable the feature before you configure it. If you are upgrading a NetScaler appliance from an earlier version to the current version, you must need to enable the feature before you configure it. At the command prompt, type:

```
enable ns feature Bot
```

**Import bot signature**

You can import the default signature bot file and bind it to the bot profile. At the command prompt, type:

```
import bot signature [<src>] <name> [-comment <string>] [-overwrite]
```

Where:

`src` - Local path name, or URL (protocol, host, path, and file name). Maximum Length: 2047.

> **Note:**

>

> The import fails if the object to be imported is on an HTTPS server that requires client certificate authentication for access.

`name` - Name of the bot signature file object. This is a mandatory argument. Maximum Length: 31.

`comment` - Description about the signature file object. Maximum Length: 255.

`overwrite` - Action that overwrites the existing file.

> **Note:**

>

> Use the `overwrite` option to update the content in the signature file. Alternately, use the `update bot signature <name>` command to update the signature file on the NetScaler appliance.

**Example** `import bot signature http://www.example.com/signature.json signaturefile -comment commentsforbot -overwrite`

**Note:**

You can use the `overwrite` option to update the content in the signature file. Also, you can use the `update bot signature <name>` command to update the signature file in the NetScaler appliance.

### Add bot profile

A bot profile is a collection of profile settings to configure bot management on the appliance. You can configure the settings to perform bot detection.

**Note:**

Starting from release 14.1 build 29.x, a new parameter `addCookieFlags` is added to the `add bot profile` and `set bot profile` commands.

At the command prompt, type:

```
add bot profile <name> [-signature <string>] [-errorURL <string>]
[-trapURL <string>] [-whiteList (ON | OFF)] [-blackList (ON |
OFF)] [-rateLimit (ON | OFF)] [-deviceFingerprint (ON | OFF)]
[-deviceFingerprintAction (none | log | drop | redirect | reset |
mitigation)] [-ipReputation (ON | OFF)] [-trap (ON | OFF)] [-
addCookieFlags (**none** | **httpOnly** | **secure** | **all
**)]]
```

Where:

`addCookieFlags` - Add flags to cookies during transformation. Specify any one of the following:

- **None** - Do not add flags to cookies.
- **HTTP only** - Add the `HttpOnly` flag to all cookies. With this flag set, browsers that support the `HttpOnly` flag prevent scripts from accessing cookies. The default.
- **Secure** - Add the `Secure` flag to cookies that are to be sent only over an SSL connection. Browsers that support the `secure` flag do not send the flagged cookies over an insecure connection.
- **All** - Add the `HttpOnly` flag to all cookies, and the `Secure` flag to cookies that are to be sent only over an SSL connection.

**Example:**

```
add bot profile profile1 -signature signature -errorURL http://www.example.com/error.html -trapURL /trap.html -whitelist ON -blacklist ON -ratelimit ON -deviceFingerprint ON -deviceFingerprintAction drop -ipReputation ON -trap ON -addCookieFlags secure
```

**Bind bot profile**

After you create a bot profile, you must bind the bot detection mechanism to the profile.

At the command prompt, type:

```
bind bot profile <name> | (-ipReputation [-category <ipReputationCategory>] [-enabled (ON | OFF)] [-action (none | log | drop | redirect | reset | mitigation)] [-logMessage <string>])
```

**Example:**

The following example is for binding the IP reputation detection technique to a specific bot profile.

```
bind bot profile profile5 -ipReputation -category BOTNET -enabled ON -action drop -logMessage message
```

**Add bot policy**

You must add the bot policy for evaluating bot traffic.

At the command prompt, type:

```
add bot policy <name> -rule <expression> -profileName <string> [-undefAction <string>] [-comment <string>] [-logAction <string>]
```

Where,

**Name**- Name for the bot policy. Must begin with a letter, number, or the underscore character (\_), and must contain only letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), colon (:), and underscore characters. Can be changed after the bot policy is added.

**Rule**- An expression that the policy uses to determine whether to apply the bot profile on the specified request. This is a mandatory argument. Maximum Length: 1499

**profileName**- Name of the bot profile to apply if the request matches this bot policy. This is a mandatory argument. Maximum Length: 127

**undefAction**- Action to perform if the result of policy evaluation is undefined (UNDEF). An UNDEF event indicates an internal error condition. Maximum Length: 127

**Comment**- Description about this bot policy. Maximum Length: 255

**logAction** - Name of the log action to use for requests that match this policy. Maximum Length: 127

**Example:**

```
add bot policy pol1 -rule "HTTP.REQ.HEADER(\"header\").CONTAINS(\"custom\")"- profileName profile1 -undefAction drop -comment commentforbotpolicy -logAction log1
```

### Bind bot policy global

At the command prompt, type:

```
bind bot global -policyName <string> -priority <positive_integer> [-gotoPriorityExpression <expression>][-type (REQ_OVERRIDE | REQ_DEFAULT)] [-invoke (-labelType (vserver | policylabel)-labelName <string>)]
```

**Example:**

```
bind bot global -policyName pol1 -priority 100 -gotoPriorityExpression NEXT -type REQ_OVERRIDE
```

### Bind bot policy to a virtual server

At the command prompt, type:

```
bind lb vserver <name>@ ((<serviceName>@ [-weight <positive_integer>]) | <serviceGroupName>@ | (-policyName <string>@ [-priority <positive_integer>] [-gotoPriorityExpression <expression>]
```

**Example:**

```
bind lb vserver lb-server1 -policyName pol1 -priority 100 -gotoPriorityExpression NEXT -type REQ_OVERRIDE
```

### Configure bot settings

You can customize the default settings if necessary.

At the command prompt, type:

---

```
1 set bot settings [-defaultProfile <string>] [-javaScriptName <string>]
 [-sessionTimeout <positive_integer>] [-sessionCookieName <string>]
 [-dfpRequestLimit <positive_integer>] [-signatureAutoUpdate (ON |
 OFF)] [-signatureUrl <URL>] [-proxyServer <ip_addr|ipv6_addr|*>] [-
 proxyPort <port|*>]
```

Where,

**defaultProfile** - Profile to use when a connection does not match any policy. Default setting is “”, which sends unmatched connections back to the NetScaler without attempting to filter them further. Maximum Length: 31

**javaScriptName** - Name of the JavaScript that the BotNet feature uses in response. Must begin with a letter or number, and can consist of from 1 to 31 letters, numbers, and the hyphen (-) and underscore (\_) symbols. The following requirement applies only to the NetScaler CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, “my cookie name” or ‘my cookie name’). Maximum Length: 31

**sessionTimeout** - Session times out, in seconds, after which a user session is terminated.

**Minimum value** - 1, **Maximum value**: 65535

**sessionCookieName** - Name of the SessionCookie that the BotNet feature uses it for tracking. Must begin with a letter or number, and can consist of from 1 to 31 letters, numbers, and the hyphen (-) and underscore (\_) symbols. The following requirement applies only to the NetScaler CLI: If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, “my cookie name” or ‘my cookie name’). Maximum Length: 31

**dfpRequestLimit** - Number of requests to allow without bot session cookie if device fingerprint is enabled. **Minimum value**: 1, **Maximum Value**: 4294967295

**signatureAutoUpdate** - Flag used to enable/disable bot auto update signatures. Possible values: ON, OFF.  
Default value: OFF

**signatureUrl** - URL to download the bot signature mapping file from the server. Default value: <https://nsbotsignatures.s3.amazonaws.com/BotSignatureMapping.json>. Maximum Length: 2047

**proxyServer** - Proxy Server IP to get updated signatures from AWS.

**proxyPort** - Proxy Server Port to get updated signatures from AWS. Default value: 8080

**proxyUsername** - User name to authenticate to the proxy server for downloading signature updates.



**proxyPassword** - Password to authenticate to the proxy server for downloading signature updates.

**Example:**

```
set bot settings -defaultProfile profile1 -javascriptName json.js -
sessionTimeout 1000 -sessionCookieName session -proxyServer 10.102.30.112
-proxyPort 3128 -proxyUsername defaultuser -proxyPassword defaultPassword
```

## Configuring bot management by using NetScaler GUI

You can configure NetScaler bot management by first enabling the feature on the appliance. Once you enable, you can create a bot policy to evaluate the incoming traffic as bot and send the traffic to the bot profile. Then, you create a bot profile and then bind the profile to a bot signature. As an alternative, you can also clone the default bot signature file and use the signature file to configure the detection techniques. After creating the signature file, you can import it into the bot profile.


NetScaler Bot Management  

**NetScaler Bot Management** mitigates automated threats and unwanted bot traffic against your public apps, APIs, and websites. If incoming traffic is determined to be a bot, the system takes an action assigned by the ADC administrator, and generates robust reporting for accountability and auditability.

**Bot Management** provides the following benefits:

- ✓ **Defend against bots, scripts, and toolkits** — Static-signature based defense and device fingerprinting provide threat mitigation against both basic and advanced bots.
- ✓ **Neutralize basic and advanced attacks** — Prevent attacks such as App layer DDoS, password spraying, password stuffing, price scrapers, content scrapers, and more.
- ✓ **Protect your APIs and investments** — Protect your APIs from misuse, probing, and data leaks, and protects infrastructure investments from unwanted traffic.

|                                                                                                                                                       |                                                                                        |
|-------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| <b>Configuration Summary</b><br>3 NetScaler Bot Management Profiles<br>No NetScaler Bot Management Policy<br>No NetScaler Bot Management Policy Label | <b>Signatures</b><br><a href="#">Import/Export NetScaler Bot Management Signatures</a> |
| <b>Policy Manager</b><br><a href="#">NetScaler Bot Management Policy Manager</a>                                                                      | <b>Settings</b><br><a href="#">Change NetScaler Bot Management Settings</a>            |
| <b>Statistics</b><br><a href="#">View NetScaler Bot Management Statistics</a>                                                                         |                                                                                        |



1. Enable bot management feature
2. Configure bot management settings
3. Clone NetScaler bot default signature
4. Import NetScaler bot signature
5. Configure bot profile and signature settings
6. Create bot profile
7. Create bot policy

### Enable bot management feature

Complete the following steps to enable bot management:

1. On the navigation pane, expand **System** and then click **Settings > Configure Advanced Features**.
2. On the **Configure Advanced Features** page, select the **NetScaler Bot Management** checkbox.
3. Click **OK**.

## Configure bot management settings

Complete the following step to configure the device fingerprint technique:

1. Navigate to **Security > NetScaler bot Management**.
2. In the details pane, under **Settings** click **Change NetScaler bot Management Settings**.
3. In the **Configure NetScaler bot Management Settings**, set the following parameters.
  - a) Default Profile. Select a bot profile.
  - b) JavaScript Name. Name of the JavaScript file that bot management uses in its response to the client.
  - c) Session Timeout. Timeout in seconds after which the user session is terminated.
  - d) Session Cookie. Name of the session cookie that the bot management system uses for tracking.
  - e) Device Fingerprint Request Limit. Number of requests to allow without a bot session cookie, if device fingerprint is enabled.
  - f) Proxy Server - Proxy server IP address from where the latest signatures are uploaded.
  - g) Proxy Port –Port number of machine from where the latest signatures are uploaded.
  - h) Proxy Username –User name for the authentication of the proxy server
  - i) Proxy Password - Password for the authentication of the proxy server.

**Note:**

Proxy User name and the Proxy Password fields are enabled if the Proxy Server and the Proxy Port fields are configured.

4. Click **OK**.

## Clone bot signature file

Complete the following step to clone the bot signature file:

1. Navigate to **Security > NetScaler Bot Management** and **Signatures**.
2. In the **NetScaler Bot Management Signatures** page, select the default bot signatures record and click **Clone**.
3. In the **Clone Bot Signature** page, enter a name and edit the signature data.
4. Click **Create**.



## Import bot signature file

If you have your own signature file, then you can import it as a file, text, or URL. Perform the following steps to import the bot signature file:

1. Navigate to **Security > NetScaler Bot Management and Signatures**.
2. On the **NetScaler Bot Management Signatures** page, import the file as URL, File, or text.
3. Click **Continue**.
4. On the Import NetScaler Bot Management Signature page, set the following parameters.
  - a) Name - Name of the bot signature file.
  - b) Comment - Brief description about the imported file.
  - c) Overwrite - Select the checkbox to allow overwriting of data during file update.
  - d) Signature Data - Modify signature parameters
5. Click **Done**.

## Configure IP reputation

The IP reputation bot technique uses Webroot's IP reputation database and cloud service provider database to verify if a client request is a malicious IP address or a public cloud IP address. As part of the bot categories is configured and then a bot action is associated to it. Complete the following steps to configure Webroot IP reputation and cloud service provider database categories.


1. Navigate to **Security > NetScaler bot Management and Profiles**.
2. On the **NetScaler bot Management Profiles** page, select a profile and click **Edit**.
3. On the **NetScaler bot Management Profile** page, go to the **Profile Settings** section and click **IP Reputation**.
4. On the **IP Reputation** section, set the following parameters:
  - a) Enabled. Select the checkbox to validate incoming bot traffic as part of the detection process.
  - b) Configure Categories. You can use the IP reputation technique for incoming bot traffic under different categories. Based on the configured category, you can drop or redirect the bot traffic. Click **Add** to configure a malicious bot category.
  - c) In the **Configure NetScaler bot Management Profile IP Reputation Binding** page, set the following parameters:
    - i. Category. Select a Webroot IP reputation bot category to validate a client request as a malicious IP address.

- A. IP\_BASED - This category checks whether the client IP address (IPv4 and IPv6) is malicious or not.
  - B. BOTNET - This category includes Botnet C&C channels, and infected zombie machines controlled by Bot master.
  - C. SPAM\_SOURCES - This category includes tunneling spam messages through a proxy, anomalous SMTP activities, and forum spam activities.
  - D. SCANNERS - This category includes all reconnaissance such as probes, host scan, domain scan, and password brute force attack.
  - E. DOS - This category includes DOS, DDOS, anomalous sync flood, and anomalous traffic detection.
  - F. REPUTATION - This category denies access from IP addresses (IPv4 and IPv6) currently known to be infected with malware. This category also includes IP addresses with average low Webroot Reputation Index score. Enabling this category prevents access from sources identified to contact malware distribution points.
  - G. PHISHING - This category includes IP addresses (IPv4 and IPv6) hosting phishing sites and other kinds of fraud activities such as ad click fraud or gaming fraud.
  - H. PROXY - This category includes IP addresses (IPv4 and IPv6) providing proxy services.
  - I. NETWORK - IPs providing proxy and anonymization services including The Onion Router aka TOR or dark net.
  - J. MOBILE\_THREATS - This category checks the client IP address (IPv4 and IPv6) with the list of addresses harmful for mobile devices.
- ii. Category. Select a Webroot public cloud service provider category to validate a client request is a public cloud IP address.
- A. AWS - This category checks client IP address with list of public cloud addresses from AWS.
  - B. GCP - This category checks client IP address with list of public cloud addresses from the Google Cloud Platform.
  - C. AZURE - This category checks client address with list of public cloud addresses from Azure.
  - D. ORACLE - This category checks client IP address with list of public cloud addresses from Oracle
  - E. IBM - This category checks client IP address with list of public cloud addresses from IBM.
  - F. SALESFORCE - This category checks client IP address with list of public cloud addresses from Salesforce.

Possible values for Webroot IP reputation bot category: IP, BOTNETS, SPAM\_SOURCES, SCANNERS, DOS, REPUTATION, PHISHING, PROXY, NETWORK, MOBILE\_THREATS.

Possible values for Webroot public cloud service provider category: AWS, GCP, AZURE, ORACLE, IBM, SALESFORCE.

- iii. Enabled. Select the checkbox to validate the IP reputation signature detection.
  - iv. Bot action. Based on the configured category, you can assign no action, drop, redirect, or mitigation action.
  - v. Log. Select the checkbox to store log entries.
  - vi. Log Message. Brief description of the log.
  - vii. Comments. Brief description about the bot category.
5. Click **OK**.
  6. Click **Update**.
  7. Click **Done**.

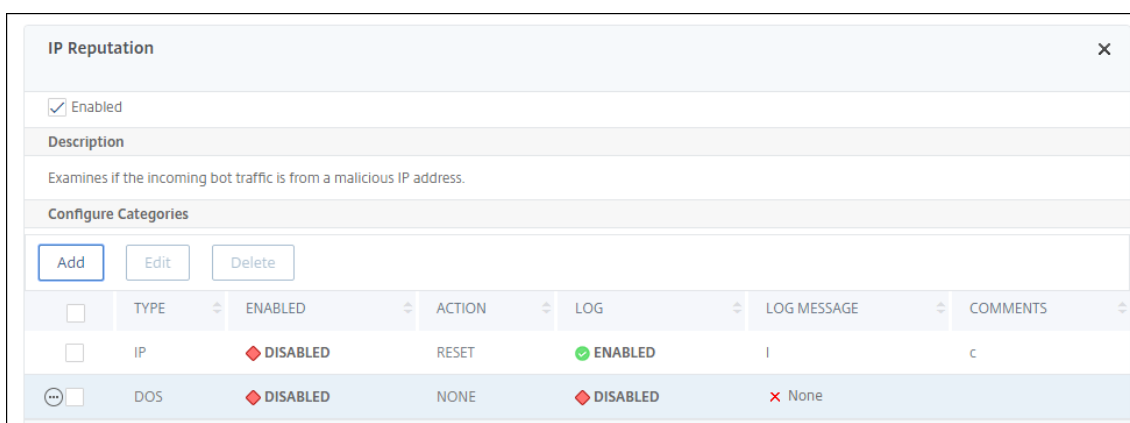

**Note**

If you disable **IP reputation**, ensure to stop its downloads. Complete the following steps to stop the IP reputation downloads:

1. Navigate to **Security > NetScaler bot Management > Change NetScaler bot Management Settings**
2. Change the **Default Nonintrusive Profile** to **BOT\_BYPASS**.


For more information on profile settings, see [Configure bot profile setting](#)

**Configure bot static signatures**

This detection technique enables you to identify the user agent info from the browser details. Based on user agent information, the bot is identified as a bad or a good bot and then you assign a bot action to it.

Perform the following the steps to configure the static signature technique:

1. On the navigation pane, expand **Security > NetScaler Bot Management > Signatures**.
2. On the **NetScaler Bot Management Signatures** page, select a signature file and click **Edit**.
3. On the **NetScaler Bot Management Signature** page, go to the **Signature Settings** section and click **Bot Signatures**.
4. In the **Bot Signatures** section, set the following parameters:
  - a) Configure Static Signatures. This section has a list of bot static signature records. You can select a record and click **Edit** to assign a bot action to it.
  - b) Click **OK**.
5. Click **Update Signature**.
6. Click **Done**.

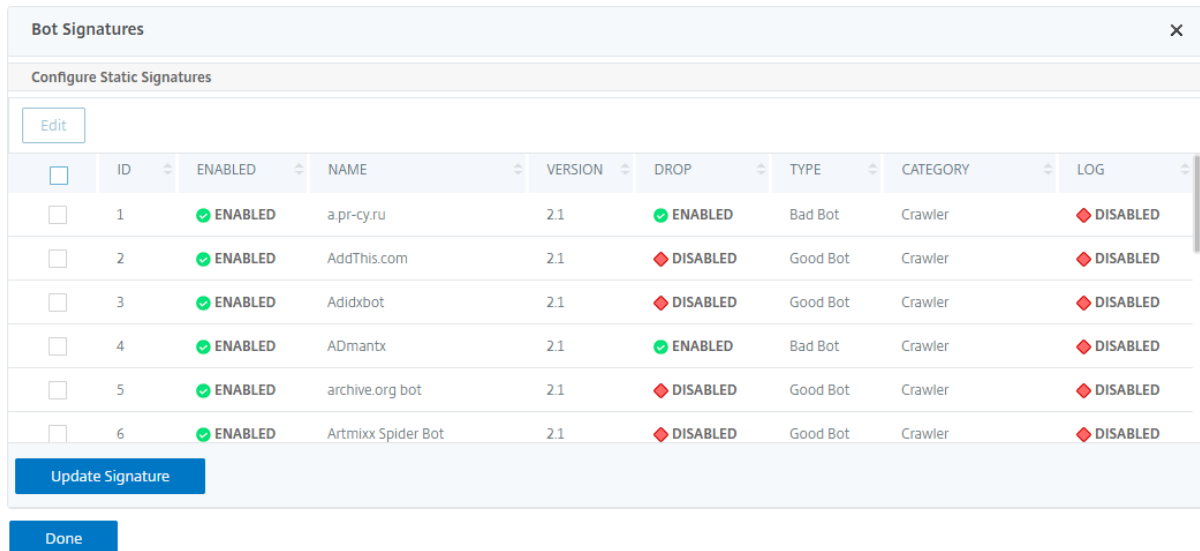

**Bot static signature delineation** NetScaler bot management protects your web application against bots. Bot static signatures help in identifying good and bad bots based on request parameters such as user-agent in the incoming request.

The list of signatures in the file is huge and also new rules get added and stale ones are removed periodically. As an administrator, you might want to search for a specific signature or list of signatures under a category. To filter signatures easily, the bot signature page provides an enhanced search capability. The search function enables you to find signature rules and configure its property based on one or more signature parameters like action, signature ID, developer, and signature name.

Action - Select a bot action that you prefer to configure for a specific category of signature rules. Following are the available action types:

- Enable Selected - Enable all the selected signature rules.
- Disable Selected - Disable all the selected signatures rules.

- Drop Selected - Select the “Drop” action to all the selected signature rules.
- Redirect Selected - Apply the “Redirect” action to all the selected signature rules.
- Reset Selected - Apply the “Reset” action to all the selected signature rules.
- Log Selected - Apply the “Log” action to all the selected signature rules.
- Remove Drop Selected - Unset the drop action to all the selected signature rules.
- Remove Redirect Selected - Unset the redirect action to all the selected signature rules.
- Remove Reset Selected - Unset the reset action to all the selected signature rules.
- Remove Log Selected - Unset the log action to all the selected signature rules.

Category - Select a category to filter signature rules accordingly. Following is the list of categories that are available for sorting signature rules.

- Action - Sort based on bot action.
- Category - Sort based on bot category.
- Developer - Sort based on the host company publisher.
- Enabled - Sort based on signature rules that are enabled.
- Id - Sort based on signature rule ID.
- Log - Sort based on signature rules that have logging enabled.
- Name - Sort based on signature rule name.
- Type - Sort based on signature type.
- Version - Sort based on signature rule version.

### **Search bot static signature rules based on action and category types by using the NetScaler GUI**

1. Navigate to **Security > NetScaler Bot Management > Signature**.
2. In the details page, click **Add**.
3. In the **NetScaler Bot Management Signatures** page, click edit in the **Static Signature** section.
4. In the **Configure Static Signature** section, select a signature action from the drop-down list.
5. Use the search function to select a category and filter the rules accordingly.
6. Click **Update**.

### **Edit the bot static signature rule property by using the NetScaler GUI**

1. Navigate to **Security > NetScaler Bot Management > Signature**.
2. In the details page, click **Add**.
3. In the **NetScaler Bot Management Signatures** page, click edit in the **Static Signature** section.
4. In the **Configure Static Signature** section, select an action from the drop-down list.
5. Use the search function to select a category and filter the rules accordingly.
6. From the static signature list, select a signature to modify its property.
7. Click **OK** to confirm.

For more information on profile settings, see [Configure bot signature setting](#)

### Create bot management profile

A bot profile is a collection of bot management settings that are used for detecting the bot type. In a profile, you determine how the Web App Firewall applies each of its filters (or checks) to bot traffic to your websites, and responses from them.

Complete the following steps to configure the bot profile:

1. Navigate to **Security > NetScaler Bot Management > Profiles**.
2. In the details pane, click **Add**.
3. In the **Create NetScaler Bot Management Profile** page, set the following parameters.
  - a) Name. Bot profile name.
  - b) Signature. Name of the bot signature file.
  - c) Error URL. URL for redirects.
  - d) Comment. Brief description about the profile.
4. Click **Create** and **Close**.

### Create bot policy

The bot policy controls the traffic going to the bot management system and also to control the bot logs sent to the auditlog server. Follow the procedure to configure the bot policy.

1. Navigate to **Security > NetScaler Bot Management > Bot Policies**.
2. In the details pane, click **Add**.
3. In the **Create NetScaler Bot Management Policy** page, set the following parameters.
  - a) Name. Name of the Bot policy.
  - b) Expression. Type the policy expression or rule directly in the text area.
  - c) Bot Profile. Bot profile to apply the bot policy.
  - d) Undefined Action. Select an action that you prefer to assign.
  - e) Comment. Brief description about the policy.
  - f) Log Action. Audit log message action for logging bot traffic. For more information about audit log action, see Audit logging topic.
4. Click **Create** and **Close**.

## **Request headers dropped by the NetScaler bot Management**

Many of the request headers related to caching is dropped to view every request within the context of a session. Similarly, if the request includes an encoding header to allow the web server to send compressed responses, the bot management deletes this header so that the contents in the uncompressed server response is inspected by the bot management to insert the JavaScript.

The bot management drops the following request headers:

Range - Used to recover from a failed or partial file transfers.

If-Range - Allows a client to retrieve a partial object when it contains a part of that object in its cache already (conditional GET).

If-Modified-Since - If the requested object is not modified since the time specified in this field, an entity is not returned from the server. You get an HTTP 304 not modified error.

If-None-Match - Allows efficient updates of cached information with a minimum amount of overhead.

Accept-Encoding - What encoding methods are allowed for a particular object, such as gzip.

## **Configure bot profile setting**

May 8, 2024

You can configure the following settings in the bot profile:

- Configure bot rate limit technique
- Configure bot log expression
- Configure bot trap technique
- Configure device fingerprint technique for mobile (Android) applications
- Bot detection based on mouse and keyboard dynamics
- Verbose logging for bot traffic
- Configure an action for spoofed bot requests

### **Configure bot rate limit technique**

The bot rate limit technique enables you to limit bot traffic within certain timeframe based on the user's geolocation, client IP address, session, cookie, or configured resource (URL).

By configuring the bot rate limit technique, you can ensure the following:

- Block malicious bot activity.
- Reduce traffic strain to web servers.

### Configure bot rate limit by using NetScaler CLI

At the command prompt, type:

```
1 bind bot profile <name>... -ratelimit -type <type> Geolocation -
 countryCode <countryName> -rate <positive_integer> -timeSlice <
 positive_integer> [-action <action> ...] [-limitType (BURSTY |
 SMOOTH)] [-condition <expression>] [-enabled (ON | OFF)]
```

Where,

- \*SOURCE\_IP - Rate-limiting based on the client IP address.
- \*SESSION - Rate-limiting based on the configured cookie name.
- \*URL - Rate-limiting based on the configured URL.
- \*GEOLOCATION - Rate-limiting based on the configured country name.

Possible values - SESSION, SOURCE\_IP, URL, GEOLOCATION

#### Example:

```
1 bind bot profile geo_prof -ratelimit -type Geolocation -countryCode IN
 -rate 100 -timeSlice 1000 -limitType SMOOTH -condition HTTP.REQ.
 HEADER("User-Agent").contains("anroid") -action log,drop -enabled
 on
```

### Configure bot rate limit by using NetScaler GUI

Complete the following steps to configure the bot rate limit detection technique:

1. Navigate to **Security > NetScaler Bot Management** and **Profiles**.
2. In the **NetScaler Bot Management Profiles** page, select a profile and click **Edit**.
3. In the **NetScaler Bot Management Profile** page, go to the **Profile Settings** section and click **Rate Limit**.
4. In the **Rate Limit** section, set the following parameters:
  - a) Enabled. Select the checkbox to validate the incoming bot traffic as part of the detection process.
  - b) Click **Add** to configure rate limit bindings.
5. In the **Configure NetScaler Bot Management Rate Limit** page, set the following parameters.



- a) Type - Rate limit bot traffic is based on the following parameters:
    - i. Geolocation - Rate limit based on the user's geographic location.
    - ii. Source\_IP - Rate limit traffic based on client IP address.
    - iii. Session - Rate limit bot traffic based on session or cookie name.
    - iv. URL - Rate limit bot traffic based on the configured URL.
  - b) Country - Select a geolocation as country or region.
  - c) Rate Limit Type –Limits the type of traffic based on the following types.
    - Bursty –Forward all requests that are within the set threshold and specified time period.
    - Smooth –Forward the requests evenly across the specified time period.
  - d) Rate Limit Connection - Allows you to create multiple rules for a condition.
  - e) Enabled - Select the checkbox to validate the incoming bot traffic.
  - f) Request Threshold - Maximum number of requests allowed within a certain timeframe.
  - g) Period - Timeframe in milliseconds.
  - h) Action - Select one of the following options:
    - i. None - Allows the request.
    - ii. Drop - Drop the request.
    - iii. Redirect - Redirect the request to the URL specified.
    - iv. Reset - Blocks the request and resets the connection.
    - v. Respond with status too many requests - Responds with an error message when the volume of incoming requests is high.
  - i) Log - Select to store the log entries.
  - j) Log Message - Brief description of the log.
  - k) Comments - Brief description about the bot category.
6. Click **OK**.
  7. Click **Update**.
  8. Click **Done**.

**Configure NetScaler Bot Management Signature Rate Limit Binding**

Type\*  
 ⓘ

Country\*

Rate Limit Type  
 Bursty  Smooth

Rate Limit Condition

RegEx Editor  
 Enabled

Request Threshold\*  
 Requests

Period\*  
 Milliseconds

Action\*  
 None  Drop  Redirect  Reset  Respond with status too many requests

Log  
 Log Message

Comments

## Configure bot log expression

If the client is identified as a bot, the NetScaler bot management enables you to capture additional information as log messages. The data can be the name of the user who requested the URL, the source IP address, and the source port from which the user sent the request or data generated from an expression. To perform custom logging, you must configure a log expression in the bot management profile.

## Bind the log expression in the bot profile by using the CLI

At the command prompt, type:

```
1 bind bot profile <name> (-logExpression -name <string> -expression <
 expression> [-enabled (ON | OFF)]) -comment <string>
```

### Example:

```
bind bot profile profile1 -logExpression exp1 -expression HTTP.REQ.
URL -enabled ON -comment "testing log expression"
```

## Bind log expression to bot profile by using the GUI

1. Navigate to **Security > NetScaler Bot Management > Profiles**.
2. On the **NetScaler Bot Management Profiles** page, select **Bot Log Expressions** from the **Profile Settings** section.

3. In the **Bot Log Expression Settings\*** section, click **\*\*Add**.
4. In the **Configure NetScaler Bot Management Profile Bot Log Expression Binding** page, set the following parameters.
  - a) Log Expression Name. Name of the log expression.
  - b) Expression. Enter the log expression.
  - c) Enabled. Enable or disable the log expression binding.
  - d) Comments. A brief description about the bot log expression binding.
5. Click **OK** and **Done**.

### Client IP policy expression for bot detection

The NetScaler bot management now enables you to configure an advanced policy expression to extract the client IP address from an HTTP request header, HTTP request body, HTTP request URL, or using an advanced policy expression. The extracted values are used by a bot detection mechanism (such as TPS, bot trap, or rate limit) to detect if the incoming request is a bot.

#### Note:

If you have not configured a client IP expression, the default or existing source client IP address is used for bot detection. If an expression is configured, then the evaluation result provides the client IP address that can be used for bot detection.

You can configure and use the client IP expression to extract the actual client IP address if the incoming request is coming through a proxy server and if the client IP address is present in the header. By adding this configuration, the appliance can use the bot detection mechanism in providing more security to software clients and servers.

**Configure client IP policy expression in bot profile by using the CLI** At the command prompt, type:

```
1 add bot profile <name> [-clientIPExpression <expression>]
```

#### Example:

```
add bot profile profile1 -clientIPExpression 'HTTP.REQ.HEADER("X-Forwarded-For")ALT CLIENT.IP.SRC.TYPECAST_TEXT_T'
```

```
add bot profile profile1 -clientIPExpression 'HTTP.REQ.HEADER("X-Forwarded-For")ALT CLIENT.IPv6.SRC.TYPECAST_TEXT_T'
```

### Configure client IP policy expression in bot profile by using the GUI

1. Navigate to **Security > NetScaler Bot Management > Profiles**.
2. In the details pane, click **Add**.
3. In the **Create NetScaler Bot Management Profile** page, set the Client IP Expression.
4. Click **Create** and **Close**.

### Configure bot trap technique

NetScaler bot trap technique randomly or periodically inserts a trap URL in the server response. You can also create a trap URL list and add URLs for that. The URL appears invisible and not accessible if the client is a human user. However, if the client is an automated bot, the URL is accessible and when accessed, the attacker is categorized as bot and any subsequent request from the bot is blocked. The trap technique is effective in blocking attacks from bots.

The trap URL is an alpha-numeric URL of configurable length and it is auto-generated at configurable interval. Also the technique allows you to configure a trap insertion URL for top visited websites or frequently visited websites. By doing this, you can mandate the purpose of inserting the bot trap URL for requests matching the trap insertion URL.

**Note:**

Although the bot trap URL is auto-generated, the NetScaler bot management still allows you to configure a customized trap URL in the bot profile. This is done to strengthen the bot detection technique and make it harder for attackers to access the trap URL.

To complete the bot trap configuration, you must complete the following steps.

1. Enable bot trap URL
2. Configure bot trap URL in bot profile
3. Bind bot trap insertion URL to bot profile
4. Configure bot trap URL length and interval in bot settings

### Enable bot trap URL protection

Before you can begin, you must ensure that the Bot trap URL protection is enabled on the appliance. At the command prompt, type:

```
enable ns feature Bot
```

### Configure bot trap URL in bot profile

You can configure the bot trap URL and specify a trap action in the bot profile.

At the command prompt, type:

```
add bot profile <name> -trapURL <string> -trap (ON | OFF)-trapAction <trapAction>
```

Where,

- `trapURL` is the URL that Bot protection uses as the Trap URL. Maximum Length: 127
- `trap` is to enable bot trap detection. Possible values: ON, OFF. Default value: OFF
- `trapAction` is an action to be taken based on bot detection. Possible values: NONE, LOG, DROP, REDIRECT, RESET, MITIGATION. Default value: NONE

#### Example:

```
add bot profile profile1 -trapURL www.bottrap1.com trap ON -trapAction RESET
```

### Bind bot trap insertion URL to bot profile

You can configure the bot trap insertion URL and bind it to the bot profile.

At the command prompt, type:

```
bind bot profile <profile_name> trapInsertionURL -url <url> -enabled ON|OFF -comment <comment>
```

Where,

URL - The request URL regex pattern for which the bot trap URL is inserted. Maximum Length: 127

#### Example:

```
bind bot profile profile1 trapInsertionURL -url www.example.com -enabled ON -comment insert a trap URL randomly
```

### Configure bot trap URL length and interval in bot settings

You can configure the bot trap URL length and also set the interval to auto generate the bot trap URL.

At the command prompt, type:

```
set bot settings -trapURLAutoGenerate (ON | OFF)-trapURLInterval <positive_integer> -trapURLLength <positive_integer>
```

Where,

- `trapURLInterval` is the time in seconds after which the bot trap URL is updated. Default value: 3600, Minimum value: 300, Maximum value: 86400
- `trapURLLength`. Length of the auto-generated bot trap URL. Default value: 32, Minimum value: 10, Maximum value: 255

**Example:**

```
set bot settings -trapURLAutoGenerate ON -trapURLInterval 300 -trapURLLength 60
```

**Configure bot trap URL by using the GUI**

1. Navigate to **Security > NetScaler Bot Management > Profiles**.
2. In the **NetScaler Bot Management Profiles** page, click **Edit** to configure the bot trap URL technique.
3. In the **Create NetScaler Bot Management Profile** page, edit basic settings to enter the trap URL and click **OK**.
4. In the **NetScaler Bot Management Profile** page, click **Bot Trap** under **Profile Settings**.
5. In the **Bot Trap** section, set the following parameters.
  - a) Enabled. Select the checkbox to enable bot trap detection.
  - b) Description. Brief description about the URL.
  - c) In the **Configure Action** section, set the following parameters.
    - Action. Action to be taken for bot detected by bot trap access.
    - Log. Enable or disable logging for bot trap binding.
  - d) In the **Configure Trap Insertion URLs** section, click **Add**.
  - e) In the **Configure NetScaler Bot Management Profile Bot Trap Binding** page, set the following parameters.
    - URL. Type the URL that you want to confirm as the bot trap insertion URL.
    - Enabled. Enable or disable bot trap insertion URL.
    - Comment. A brief description about the trap insertion URL.
  - f) Click **OK**.
6. Click **Update** and **Done**.

### **Configure bot trap URL settings**

Complete the following steps to configure bot trap URL settings:

1. Navigate to **Security > NetScaler Bot Management**.
2. In the details pane, under **Settings** click **Change NetScaler Bot Management Settings**.
3. In the **Configure NetScaler Bot Management Settings**, set the following parameters.
  - a) Trap URL Interval. Time in seconds after which the bot trap URL is updated.
  - b) Trap URL Length. Length of the auto-generated bot trap URL.
4. Click **OK** and **Done**.

### **Configure device fingerprint technique for mobile (Android) applications**

Device fingerprint technique detects an incoming traffic as a bot by inserting a JavaScript script in the HTML response to the client. The JavaScript script when invoked by the browser, it collects browser and client attributes and sends a request to the appliance. The attributes are examined to determine whether the traffic is a Bot or a human.

The detection technique is further extended to detect bots on a mobile (Android) platform. Unlike web applications, in mobile (Android) traffic, bot detection based on JavaScript script do not apply. To detect bots in a mobile network, the technique uses a bot mobile SDK which is integrated with mobile applications on the client-side. The SDK intercepts the mobile traffic, collects device details, and sends the data to the appliance. On the appliance side, the detection technique examines the data and determines whether the connection is from a Bot or a human.

### **How the device fingerprint technique for the mobile application works**

The following steps explain the bot detection workflow to detect if a request from a mobile device is from a human or a bot.

1. When a user interacts with a mobile application, the bot mobile SDK records the device's behavior.
2. Client sends a request to NetScaler appliance.
3. When sending the response, the appliance inserts a bot session cookie with session details, and parameters to collect client parameters.
4. When the mobile application receives the response, the NetScaler bot SDK that is integrated with the mobile application validates the response, retrieves the recorded device fingerprint parameters, and sends it to the appliance.

5. The device fingerprint detection technique on the appliance side validates the device details and updates the bot session cookie if it is a suspected bot or not.
6. When the cookie is expired or device fingerprint protection prefers to validate and collect device parameters periodically, the whole procedure or challenge is repeated.

**Pre-requisite** To get started with the NetScaler device fingerprint detection technique for mobile applications, you must download and install the bot mobile SDK in your mobile application.

### Configure fingerprint detection technique for mobile (Android) applications by using the CLI

At the command prompt, type:


```
set bot profile <profile name> -deviceFingerprintMobile (NONE |
Android)
```

**Example:**

```
set bot profile profile 1 -deviceFingerprintMobile Android
```

### Configure device fingerprint detection technique for mobile (Android) applications by using the GUI

1. Navigate to **Security > NetScaler Bot Management and Profiles**.
2. On the **NetScaler Bot Management Profiles** page, select a file and click **Edit**.
3. On the **NetScaler Bot Management Profile** page, click **Device Fingerprint** under **Profile Settings**.
4. In the **Configure Bot Mobile SDK** section, select the mobile client type.
5. Click **Update** and **Done**.

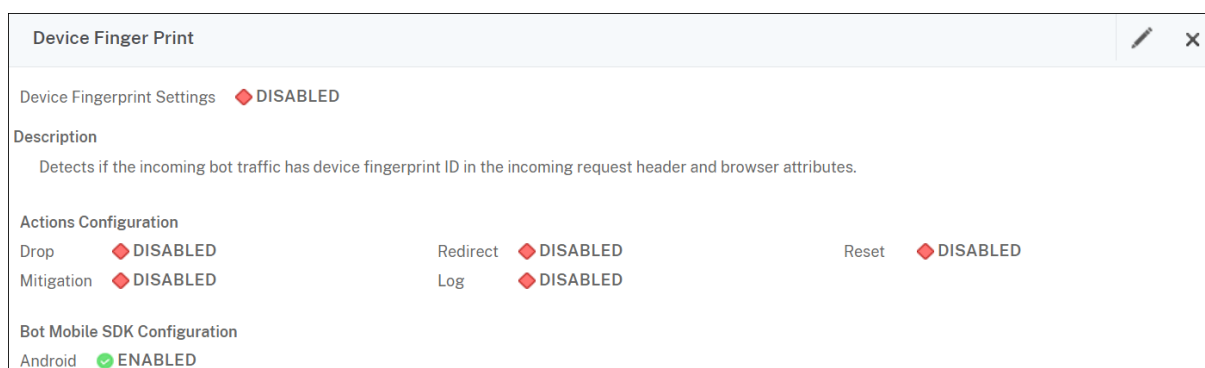

### Configure device fingerprint technique by using NetScaler GUI

This detection technique sends a Java script challenge to the client and extracts the device information. Based on device information, the technique drops or bypasses the bot traffic. Follow the steps



to configure the detection technique.

1. Navigate to **Security > NetScaler Bot Management** and **Profiles**.
2. On the **NetScaler Bot Management Profiles** page, select a signature file and click **Edit**.
3. On the **NetScaler Bot Management Profile** page, go to the **Signature Settings** section and click **Device Fingerprint**.

In the **Device Fingerprint** section, set the following parameters:

- a) Enabled - Select to enable the rule.
- b) Configuration - Select one of the following options:
  - i. None - Allows the traffic.
  - ii. Drop - Drop the traffic.
  - iii. Redirect - Redirects the traffic to an error URL.
  - iv. Mitigation, or CAPTCHA - Validates and allows the traffic.

**Note:**

During session replay attacks using the device fingerprint cookies, requests are dropped even if the device fingerprint configuration is set to **Mitigation**.

4. Click **Update**.
5. Click **Done**.

| Device Fingerprint                                                                                                                                           |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input checked="" type="checkbox"/> Enabled                                                                                                                  |
| <b>Description</b>                                                                                                                                           |
| Detects if the incoming bot traffic has device fingerprint ID in the incoming request header and browser attributes.                                         |
| <b>Configuration</b>                                                                                                                                         |
| <input type="radio"/> None <input type="radio"/> Drop <input checked="" type="radio"/> Redirect <input type="radio"/> Reset <input type="radio"/> Mitigation |
| <input checked="" type="checkbox"/> Log                                                                                                                      |

### Bot detection based on mouse and keyboard dynamics

To detect bots and mitigate web scraping anomalies, the NetScaler bot management uses an enhanced bot detection technique based on mouse and keyboard behavior. Unlike conventional bot techniques that require direct human interaction (for example, CAPTCHA validation), the enhanced technique passively monitors the mouse and the keyboard dynamics. The NetScaler appliance then collects the real-time user data and analyses the behavioral between a human and a bot.

The passive bot detection using mouse and keyboard dynamics has the following benefits over existing bot detection mechanisms:

- Provides continuous monitoring throughout the user session, and eliminates single checkpoint.
- Requires no human interaction and it is transparent to users.

### **How bot detection using mouse and keyboard dynamics works**

The bot detection technique using keyboard and mouse dynamics consists of two components, a webpage logger and bot detector. The webpage logger is a JavaScript that records keyboard and mouse movements when a user is performing a task on the webpage (for example, filling a registration form). The logger then sends the data in batches to the NetScaler appliance. The appliance then stores the data as a KM record and sends it to the bot detector on the NetScaler Console server, which analyses if the user is a human or bot.

The following steps explain how the components interact with each other:

1. The NetScaler admin configures policy expression through the ADM StyleBook, CLI, or NITRO or any other method.
2. The URL is set in the bot profile when the admin enables the feature on the appliance.
3. When a client sends a request, the NetScaler appliance tracks the session and all requests in the session.
4. The appliance inserts a JavaScript (webpage logger) in the response if the request matches the configured expression on the bot profile.
5. The JavaScript then collects all the keyboard, mouse activity and sends the KM data in a POST URL (transient).
6. The NetScaler appliance stores the data and sends it to the NetScaler Console server at the end of the session. Once the appliance receives the complete data of a POST request, the data is sent it to the ADM server.
7. The NetScaler Console Service analyses the data and based on the analysis, the result is available on the NetScaler Console service GUI.

The JavaScript logger records the following mouse and keyboard movements:

- Keyboard events –all events
- Mouse events - mouse move, mouse up, mouse down
- Clipboard events - paste
- Custom events - autofill, autofill cancel
- timestamp of each event

### **Configure bot detection using mouse and keyboard dynamics**

The NetScaler bot management configuration includes enabling or disabling the keyboard and mouse-based detection feature, and configures the JavaScript URL in the bot profile.

Complete the following steps to configure bot detection using mouse and keyboard dynamics:

1. Enable keyboard and mouse-based detection
2. Configure an expression to decide when the JavaScript can be injected in the HTTP response

**Enable keyboard mouse-based bot detection** Before you begin the configuration, ensure you have enabled the keyboard and mouse-based bot detection feature on the appliance.

At the command prompt, type:

```
1 add bot profile <name> -KMDetection (ON | OFF)
```

**Example:**

```
add bot profile profile1 -KMDetection ON
```

**Configure bot expression for JavaScript insertion** Configure bot expression to evaluate the traffic and insert JavaScript. The JavaScript is inserted only if the expression is evaluated as true.

At the command prompt, type:

```
1 bind bot profile <name> -KMDetectionExpr -name <string> -expression <
 expression> -enabled (ON | OFF) - comment <string>
```

**Example:**

```
bind bot profile profile1 -KMDetectionExpr -name test -expression
http.req.url.startswith("/testsite")-enabled ON
```

**Configure JavaScript file name inserted in the HTTP response for keyboard-mouse based bot detection** To collect the user action details, the appliance sends a JavaScript file name in the HTTP response. The JavaScript file collects all the data in a KM record and sends it to the appliance.

At the command prompt, type:

```
1 set bot profile profile1 - KMJavaScriptName <string>
```

**Example:**

```
set bot profile profile1 -KMJavaScriptName script1
```

**Configure behavior biometrics size** You can configure the maximum size of mouse and keyboard behavior data that can be sent as KM record to the appliance and processed by the ADM server.

At the command prompt, type:

```
1 set bot profile profile1 -KMEventsPostBodyLimit <positive_integer>
```

**Example:**

```
set bot profile profile1 - KMEventsPostBodyLimit 25
```

After you have configured the NetScaler appliance to configure the JavaScript and collect keyboard and mouse behavior biometrics, the appliance sends the data to the NetScaler Console server. For more information on how the NetScaler Console server detects bots from behavior biometrics, see [Bot Violations](#) topic.

**Configure keyboard and mouse bot expression settings by using the GUI**

1. Navigate to **Security > NetScaler Bot Management and Profiles**.
2. On the **NetScaler Bot Management Profiles** page, select a profile and click **Edit**.
3. In the **Keyboard and mouse based bot detection** section, set the following parameters:
  - a) Enable detection. Select the checkbox to detect the bot based keyboard and mouse dynamics behavior.
  - b) Event post body limit. Size of the keyboard and mouse dynamics data sent by the browser to be processed by the NetScaler appliance.
4. Click **OK**.
5. On the **NetScaler bot Management Profile** page, go to the **Profile Settings** section and click **Keyboard and Mouse Based Bot Expression Settings**.
6. In the **Keyboard and Mouse Based Bot Expression Settings** section, click **Add**.
7. In the **Configure NetScaler bot Management Profile Bot Keyboard and Mouse Expression Binding** page, set the following parameters:
  - a) Expression Name. Name of the bot policy expression for detection keyboard and mouse dynamics.
  - b) Expression. Bot policy expression.
  - c) Enabled. Select the checkbox to enable the keyboard and bot keyboard and mouse expression binding.
  - d) Comments. A brief description about the bot policy expression and its binding to the bot profile.
  - e) Click **OK** and **Close**.
8. In the **Keyboard and Mouse Based Bot Expression Settings** section, click **Update**.

## Verbose logging for bot traffic

When an incoming request is identified as a bot, the NetScaler appliance logs more HTTP header details for monitoring and troubleshooting. The bot verbose logging capability is similar to the verbose logging in the Web App Firewall module.

Consider an incoming traffic from a client. If the client is identified as a bot, the NetScaler appliance uses the verbose logging functionality to log full HTTP header information such as domain address, URL, user-agent header, cookie header. The log details are then sent to the ADM server for monitoring and troubleshooting the purpose. The verbose log message is not stored in the “ns.log” file.

### Configure bot verbose logging by using the CLI

To capture detailed HTTP header information as logs, you can configure the verbose logging parameter in the bot profile. At the command prompt, type:

```
1 set bot profile <name> [-verboseLogLevel (NONE | HTTP_FULL_HEADER)]
```

#### Example:

```
set bot profile p1 -verboseLogLevel HTTP_FULL_HEADER
```

### Configure bot verbose logging by using the NetScaler GUI

Follow the procedure to configure the verbose log level in the bot profile.

1. On the navigation pane, navigate to **Security > NetScaler Bot Management**.
2. In the **NetScaler Bot Management Profiles** page, click **Add**.
3. In the **Create NetScaler Bot Management Profile** page, select a verbose log level as **HTTP Full Header**.
4. Click **OK** and **Done**.

### Configure an action for spoofed bot requests

An attacker might attempt to impersonate a good bot and send requests to your application server. Such bots are identified as spoofed bots using the bot signature. Configure the following actions against spoofed bots to protect your application server:

- DROP
- NONE
- REDIRECT
- RESET

**Note:**

Requests identified as good bots are further evaluated for spoofing. Client IP addresses with RDNS errors during client host validation are treated as spoof requests.

### Configure an action for spoofed bot requests using CLI

Run the following command to configure an action for spoofed bot requests:

```
1 set bot profile <bot-profile-name> -spoofedReqAction <action> LOG
```

**Example:**

```
1 set bot profile bot_profile -spoofedReqAction DROP LOG
```

In this example, the requests from spoofed bots are dropped and logged in a NetScaler appliance.

**Tip**

To log events from the spoofed bots, specify `LOG` in the command.

### Configure an action for spoofed bot requests using GUI

Follow the steps to configure an action for the spoofed bot requests:

1. Navigate to **Security > NetScaler Bot Management**.
2. In the **NetScaler Bot Management Profiles** page, click **Add**.
3. Select an action from the **Spoofed Request Action** list.
4. Select **Log Spoofed Request**.  
This action logs the events from spoofed bots.
5. Click **Create**.

## Configure bot signature setting

February 14, 2024

You can configure the following settings in the bot signature settings:

- Configure bot allow list
- Configure bot block list

- Configure CAPTCHA for IP reputation
- Bot Transactions Per second (TPS)

### **Configure bot allow list by using NetScaler GUI**

This detection technique enables you to bypass the URLs that you configure as allowed URLs. Complete the following step to configure an allow list URL:

1. Navigate to **Security > NetScaler Bot Management** and **Profiles**.
2. On the **NetScaler Bot Management Profiles** page, select a file and click **Edit**.
3. On the **NetScaler Bot Management Profile** page, go to the **Signature Settings** section and click **Allow List**.
4. In the **Allow List** section, set the following parameters:
  - a) **Enabled**. Select the checkbox to validate the allow list URLs as part of the detection process.
  - b) **Configure Types**. Configure an allow list URL. The URL is bypassed during bot detection. Click **Add** to add a URL to the bot allow list.
  - c) In the **Configure NetScaler Bot Management Profile allowlist Binding** page, set the following parameters:
    - i. **Type**. URL type can be an IPv4 address, subnet IP address, or an IP address matching a policy expression.
    - ii. **Enabled**. Select the checkbox to validate the URL.
    - iii. **Value**. URL address.
    - iv. **Log**. Select the checkbox to store log entries.
    - v. **Log Message**. Brief description of the log.
    - vi. **Comments**. Brief description about the allow list URL.
    - vii. Click **OK**.

### Configure NetScaler Bot Management Profile allowlist Binding

Type\*

IPv4
▼
i

Enabled i

Value\*

1.1.1.1
i

Log i

Log Message

Update Log if bot detected by bot
i

Comments

Bot allow list detection
i

5. Click **Update**.

6. Click **Done**.

### Configure bot block list by using NetScaler GUI

This detection technique enables you to drop the URLs that you configure as blocked URLs. Complete the following step to configure a block list URL.

1. Navigate to **Security > NetScaler Bot Management** and **Profiles**.
2. On the **NetScaler Bot Management Profiles** page, select a signature file and click **Edit**.
3. On the **NetScaler Bot Management Profile** page, go to the **Signature Settings** section and click **Block List**.
4. In the **Block List** section, set the following parameters:
  - a) Enabled. Select the checkbox to validate block list URLs as part of the detection process.
  - b) Configure Types. Configure a URL to be part of the bot block list detection process. These URLs are dropped during bot detection. Click Add to add a URL to the bot block list
  - c) In the **Configure NetScaler Bot Management Profile Blocklist Binding** page, set the following parameters.
    - i. Type. URL type can be an IPv4 address, subnet IP address, or IP address.



- ii. Enabled. Select the checkbox to validate the URL.
- iii. Value. URL address.
- iv. Log. Select the checkbox to store log entries.
- v. Log Message. Brief description of the login.
- vi. Comments. Brief description about the block list URL.
- vii. Click **OK**.

**Configure NetScaler Bot Management Profile blocklist Binding**

Type\*

ⓘ

Enabled ⓘ

Value\*

ⓘ

Action

None    Drop    Redirect    Reset

Log ⓘ

Log Message

ⓘ

Comments

ⓘ

5. Click **Update**.

6. Click **Done**.

### Configure CAPTCHA for IP reputation

CAPTCHA helps to block automated bots that cause security violations to web applications. In the NetScaler, CAPTCHA uses the challenge-response module to identify if the incoming traffic is from a human user and not an automated bot.

## How CAPTCHA works in NetScaler bot management

In NetScaler bot management, CAPTCHA validation is configured as a policy action to be run after bot policy is evaluated. The CAPTCHA action is available only for IP reputation and device fingerprint detection techniques. Following are the steps to understand how CAPTCHA works:

1. If a security violation is observed during IP reputation or device fingerprint bot detection, the ADC appliance sends a CAPTCHA challenge.
2. The client sends the CAPTCHA response.
3. The appliance validates the CAPTCHA response and if the CAPTCHA is valid, the request is allowed and it is forwarded to the back-end server.
4. If the CAPTCHA response is invalid, the appliance sends a new CAPTCHA challenge until the maximum number of attempts is reached.
5. If the CAPTCHA response is invalid even after the maximum number of attempts, the appliance drops or redirects the request to the configured error URL.
6. If you have configured log action, then the appliance stores the request details in the ns.log file.

## Configure CAPTCHA settings by using the NetScaler GUI

The bot management CAPTCHA action is supported only for IP reputation and device fingerprint detection techniques. Complete the following steps to configure the **CAPTCHA** settings.

1. Navigate to **Security > NetScaler Bot Management and Profiles**.
2. On the **NetScaler Bot Management Profiles** page, select a profile and click **Edit**.
3. On the **NetScaler Bot Management Profile** page, go to the **Signature Settings** section and click **CAPTCHA**.
4. In the **CAPTCHA Settings** section, click **Add to configure CAPTCHA** settings to the profile:
5. In the **Configure NetScaler Bot Management CAPTCHA** page, set the following parameters.
  - a) URL. Bot URL for which the CAPTCHA action is applied during IP reputation and device fingerprint detection techniques.
  - b) Enabled. Set this option to enable CAPTCHA support.
  - c) Grace time. Duration until when no new CAPTCHA challenge is sent after the current valid CAPTCHA response is received.
  - d) Wait time. Duration taken for the ADC appliance to wait until the client sends the CAPTCHA response.
  - e) Mute Period. Duration for which the client which sent an incorrect CAPTCHA response must wait until allowed to try next. During this mute period, the ADC appliance does not allow any requests. Range: 60–900 seconds, Recommended: 300 seconds

- f) Request Length limit. Length of the request for which the CAPTCHA challenge is sent to the client. If the length is greater than the threshold value, the request is dropped. Default value is 10–3000 bytes.
  - g) Retry Attempts. Number of attempts the client is allowed to retry to solve the CAPTCHA challenge. Range: 1–10, Recommended: 5.
  - h) No Action/Drop/Redirect action to be taken if the client fails the CAPTCHA validation.
  - i) Log. Set this option to store request information from the client when response CAPTCHA fails. The data is stored in `ns.log` file.
  - j) Comment. A brief description about the CAPTCHA configuration.
6. Click **OK** and **Done**.
  7. Navigate to **Security > NetScaler Bot Management > Signatures**.
  8. On the **NetScaler Bot Management Signatures** page, select a signature file and click **Edit**.
  9. On the **NetScaler Bot Management Signature** page, go to the **Signature Settings** section and click **Bot Signatures**.
  10. In the **Bot Signatures** section, set the following parameters:
  11. Configure **Static Signatures**. Select a bot static signature record and click Edit to assign a bot action to it.
  12. Click **OK**.
  13. Click **Update Signature**.
  14. Click **Done**.

### Bot Transactions Per second (TPS)

The Transactions Per Second (TPS) bot technique detects incoming traffic as a bot if the number of requests per second (RPS) and percentage increase in RPS exceeds the configured threshold value. The detection technique protects your web applications from automated bots that can cause web scraping activities, brute forcing login, and other malicious attacks.

#### Note:

The bot technique detects an incoming traffic as bot only if both the parameters are configured and if both values increase beyond the threshold limit.

Let us consider a scenario, where the appliance receives many requests coming from a specific URL and you want the NetScaler bot management to detect if there is a bot attack. The TPS detection technique examines the number of requests (configured value) coming from the URL within 1 second and the percentage increase (configured value) in the number of requests re-

ceived within 30 minutes. If the values exceed the threshold limit, the traffic is considered as bot and the appliance runs the configured action.

To configure TPS, you must complete the following steps:

1. Enable bot TPS
2. Bind TPS settings to bot management profile

### Configure bot transactions per second (TPS) using CLI

**Enable bot transaction per second (TPS)** Before you can begin, you must ensure that the bot TPS feature is enabled on the appliance. At the command prompt, type:

```
set bot profile profile1 -enableTPS ON
```

**Bind TPS settings to bot management profile** Once you enable the bot TPS feature, you must bind the TPS settings to the bot management profile.

At the command prompt, type:

```
bind bot profile <name>... (-tps [-type (SourceIP | GeoLocation | RequestURL | Host)] [-threshold <positive_integer>] [-percentage <positive_integer>] [-action (none | log | drop | redirect | reset | mitigation)] [-logMessage <string>])
```

#### Example:

```
bind bot profile profile1 -tps -type RequestURL -threshold 1 -percentage 100000 -action drop -logMessage log
```

### Configure bot transactions per second (TPS) by using the NetScaler GUI

Complete the following steps to configure bot transactions per second:

1. Navigate to **Security > NetScaler Bot Management > Profiles**.
2. In the **NetScaler Bot Management Profiles** page, select a profile and click **Edit**.
3. In the **Create NetScaler Bot Management Profile** page, click **TPS** under **Signature Settings** section.
4. In the **TPS** section, enable the feature and click **Add**.
5. In **Configure NetScaler bot Management Profile TPS Binding** page, set the following parameters.

- a) Type - Input types allowed by the detection technique. Possible values: SOURCE IP, GEOLOCATION, HOST, URL.
    - SOURCE\_IP –TPS based on client IP address.
    - GEOLOCATION –TPS based on the client’s geographic location.
    - HOST - TPS based on client requests forwarded to a specific back-end server IP address.
    - URL –TPS based on client requests coming from a specific URL.
  - b) Fixed Threshold - Maximum number of requests allowed from a TPS input type within 1 second time interval.
  - c) Percentage Threshold - Maximum percentage increase in requests from a TPS input type within 30 minute time interval.
  - d) Action - Action to be taken for bot detected by TPS binding.
  - e) Log - Enable or disable logging for TPS binding.
  - f) Log Message. Message to log for bot detected by TPS binding. Maximum Length: 255.
  - g) Comments - A brief description about the TPS configuration. Maximum Length: 255
6. Click **OK** and then **Close**.

## Bot signature auto update

January 3, 2024

The bot static signature technique uses a signature lookup table with a list of good and bad bots. The bots are categorized based on user-agent string and domain names. If the user-agent string and domain name in incoming bot traffic matches a value in the lookup table, the configured bot action is applied.

The bot signature updates are hosted on the AWS cloud and the signature lookup table communicates with the AWS database for signature updates. The auto signature update scheduler runs every 1-hour to check the **AWS database** and updates the signature table in the NetScaler appliance.

The signature auto update URL to configure is, <https://nsbotsignatures.s3.amazonaws.com/BotSignatureMapping.json>


### Note:

You can also configure a proxy server and periodically update signatures from the AWS cloud to

the appliance through the proxy. For proxy configuration, you must set the proxy IP address and port address in the bot settings.

## How bot signature auto update works

The following diagram shows how the bot signatures are retrieved from the AWS cloud, updated on NetScaler, and viewed on NetScaler Console for signature update summary.

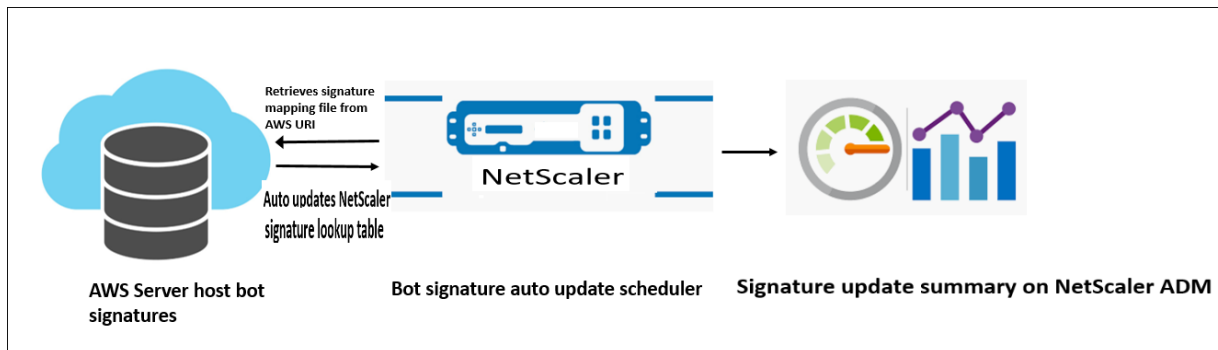

The bot signature auto-update scheduler does the following:

1. Retrieves the mapping file from the AWS URI.
2. Checks the latest signatures in the mapping file with the existing signatures in the ADC appliance.
3. Downloads the new signatures from AWS and verifies the signature integrity.
4. Updates the existing bot signatures with the new signatures in the bot signature file.
5. Generates an SNMP alert and sends the signature update summary to NetScaler Console.

## Configure bot signature auto update

For configuring bot signature auto update, complete the following steps:

### Enable bot signature auto update

You must enable the auto update option in the bot settings on the ADC appliance.

At the command prompt, type:

```
set bot settings -signatureAutoUpdate ON
```

### Configure proxy server settings (optional)

If you are accessing the AWS signature database through a proxy server, you must configure the proxy server and port.

```
set bot settings -proxyserver -proxyport
```

**Example:**

```
set bot settings -proxy server 1.1.1.1 -proxyport 1356
```

## Configure bot signature auto update using the NetScaler GUI

Complete the following steps to configure bot signature auto update:

1. Navigate to **Security > NetScaler Bot Management**.
2. In the details pane, under **Settings** click **Change NetScaler Bot Management Settings**.
3. In the **Configure NetScaler Bot Management Settings**, select the **Auto Update Signature** checkbox.
4. Click **OK** and **Close**.

““

## Bot Management

May 2, 2023

Following are some of the troubleshooting scenarios covered in NetScaler bot management.

1. How to handle false positive cases?  
You can use the bot allow list functionality to manage false positive cases and these transactions can be bypassed.
2. How to find more details about bad bot traffic?  
You can use the audit logging functionality to get details about the traffic classified as bad bots.
3. Why should you change the default signature name?  
You can change the default signature name if there are conflicts detected at the end point resources served by the NetScaler appliance.

## Bot Management

May 2, 2023

1. What is NetScaler bot management?

NetScaler bot management detects and distinguishes traffic from good bots, bad bots, and human clients. The bot management functionality protects your web applications from bad bots by applying a configured action on incoming requests.

2. Why NetScaler must manage bots for your web application?

Malicious bots constitute 30% of your internet traffic. Malicious bots impact web applications in various ways such as initiating a DoS attack, spamming email addresses, slowing down the application using downloader programs, downloading the content from websites and so forth. In addition, bots can easily bypass some of the well known detection mechanisms leading to loss of data, revenue, and reputation to your organization.

3. What are the techniques used for detecting an incoming bot?

The appliance uses detection techniques such as IP reputation, rate limiting, device fingerprinting, TPS, and Bot trap detection techniques. In addition, you can configure a customized block list on the NetScaler GUI to categorize organization specific bad bots.

4. What is a bot signature file and its purpose?

The bot signature file contains the footprint of known good and bad bots. The signature file is updated periodically to include the latest bot signatures for better bot protection.

5. What type of NetScaler license must I purchase?

Bot management is available with the ADC Premium license.

6. Where can I find bot logs for troubleshooting?

NetScaler audit logs provide detected bot details. For more information, see [Audit Logging](#) topic.

7. Is there an auto update functionality for the bot signature files?

Yes, NetScaler bot management supports auto update functionality.

8. Is there a pre-requisite for using the bot IP reputation technique?

Enable the IP reputation feature before enabling and configuring the IP reputation in the bot profile.

## Bot signature alert Articles

May 2, 2023



NetScaler bot management announces signature updates that you can download and apply on your appliance. When you detect a bot attack, you will receive an email notification about the new signature update. You can download the signature and apply it on your appliance.

To get updates about new bot signatures, you must configure the signature auto-update feature. For more information, see [Bot Signature Auto Update](#) topic.

## Bot signature update for November 2020

May 2, 2023

New signatures rules are generated for the bots identified in the week 2020-11-11. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 5 applicable for NetScaler 13.0 platform.

### New Bot signatures

Following is a list of bot signature rules, category, and its type.

---

| Category           | Bot Type | Signature Count |
|--------------------|----------|-----------------|
| Scrapper           | Good Bot | 3               |
| Marketing          | Good Bot | 23              |
| Feed Fetcher       | Good Bot | 2               |
| Tool               | Bad Bot  | 3               |
| Search Engine      | Good Bot | 34              |
| Crawler            | Good Bot | 6               |
| Uncategorized      | Bad Bot  | 6               |
| Virus Scanner      | Good Bot | 1               |
| Screenshot Creator | Good Bot | 7               |
| Scrapper           | Bad Bot  | 1               |
| Tool               | Good Bot | 7               |

---

## Bot signature update for January 2021

May 2, 2023

Some of existing bot signatures are updated. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 6 is applicable for NetScaler platforms with 13.0 61.x builds or later.

### Updated bot signatures

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 143                     | Crawler             | Good Bot        |
| 561                     | Scraper             | Good Bot        |
| 857                     | Site Monitor        | Good Bot        |
| 892                     | Site Monitor        | Bad Bot         |
| 894                     | Site Monitor        | Bad Bot         |
| 980                     | Scraper             | Bad Bot         |
| 1025                    | Site Monitor        | Bad Bot         |
| 1029                    | Feed Fetcher        | Bad Bot         |
| 1030                    | Screenshot Creator  | Bad Bot         |
| 1034                    | Tool                | Bad Bot         |
| 1039                    | Marketing           | Bad Bot         |
| 1042                    | Site Monitor        | Bad Bot         |
| 1047                    | Site Monitor        | Bad Bot         |
| 1053                    | Site Monitor        | Bad Bot         |
| 1072                    | Search Engine       | Bad Bot         |
| 1073                    | Feed Fetcher        | Bad Bot         |
| 1074                    | Uncategorized       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1078                    | Screenshot Creator  | Bad Bot         |
| 1109                    | Marketing           | Bad Bot         |
| 1132                    | Feed Fetcher        | Bad Bot         |
| 1138                    | Marketing           | Bad Bot         |
| 1150                    | Search Engine       | Bad Bot         |
| 1164                    | Search Engine       | Bad Bot         |
| 1167                    | Marketing           | Bad Bot         |
| 1173                    | Tool                | Bad Bot         |
| 1174                    | Marketing           | Bad Bot         |
| 1176                    | Search Engine       | Bad Bot         |
| 1178                    | Speed Tester        | Bad Bot         |
| 1185                    | Screenshot Creator  | Bad Bot         |
| 1209                    | Uncategorized       | Bad Bot         |
| 1244                    | Site Monitor        | Bad Bot         |
| 1251                    | Search Engine       | Bad Bot         |
| 1254                    | Site Monitor        | Bad Bot         |
| 1256                    | Uncategorized       | Bad Bot         |
| 1259                    | Tool                | Bad Bot         |
| 1287                    | Search Engine       | Bad Bot         |
| 1296                    | Search Engine       | Bad Bot         |
| 1312                    | Uncategorized       | Bad Bot         |
| 1316                    | Marketing           | Bad Bot         |
| 1322                    | Site Monitor        | Bad Bot         |
| 1325                    | Screenshot Creator  | Bad Bot         |
| 1328                    | Search Engine       | Bad Bot         |
| 1330                    | Marketing           | Bad Bot         |
| 1337                    | Tool                | Bad Bot         |
| 1360                    | Search Engine       | Bad Bot         |
| 1367                    | Search Engine       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1374                    | Tool                | Bad Bot         |
| 1380                    | Uncategorized       | Bad Bot         |
| 1388                    | Search Engine       | Bad Bot         |
| 1400                    | Feed Fetcher        | Bad Bot         |
| 1413                    | Uncategorized       | Bad Bot         |
| 1420                    | Feed Fetcher        | Bad Bot         |
| 1422                    | Site Monitor        | Bad Bot         |
| 1442                    | Uncategorized       | Bad Bot         |
| 1447                    | Search Engine       | Bad Bot         |
| 1460                    | Marketing           | Bad Bot         |
| 1467                    | Tool                | Bad Bot         |
| 1469                    | Tool                | Bad Bot         |
| 1471                    | Search Engine       | Bad Bot         |
| 1484                    | Uncategorized       | Bad Bot         |
| 1493                    | Marketing           | Bad Bot         |
| 1502                    | Site Monitor        | Bad Bot         |
| 1504                    | Uncategorized       | Bad Bot         |
| 1506                    | Uncategorized       | Bad Bot         |
| 1518                    | Uncategorized       | Bad Bot         |
| 1520                    | Search Engine       | Bad Bot         |
| 1531                    | Feed Fetcher        | Bad Bot         |
| 1533                    | Uncategorized       | Bad Bot         |
| 1540                    | Search Engine       | Bad Bot         |
| 1556                    | Marketing           | Bad Bot         |
| 1560                    | Uncategorized       | Bad Bot         |
| 1564                    | Tool                | Bad Bot         |
| 1570                    | Site Monitor        | Bad Bot         |
| 1575                    | Search Engine       | Bad Bot         |
| 1586                    | Virus Scanner       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1588                    | Uncategorized       | Bad Bot         |
| 1594                    | Tool                | Bad Bot         |
| 1619                    | Marketing           | Bad Bot         |
| 1623                    | Tool                | Bad Bot         |
| 1626                    | Search Engine       | Bad Bot         |
| 1632                    | Feed Fetcher        | Bad Bot         |
| 1648                    | Search Engine       | Bad Bot         |
| 1652                    | Marketing           | Bad Bot         |
| 1660                    | Marketing           | Bad Bot         |
| 1713                    | Tool                | Bad Bot         |
| 1719                    | Search Engine       | Bad Bot         |
| 1722                    | Uncategorized       | Bad Bot         |
| 1744                    | Uncategorized       | Bad Bot         |
| 1754                    | Uncategorized       | Bad Bot         |
| 1757                    | Uncategorized       | Bad Bot         |
| 1762                    | Uncategorized       | Bad Bot         |
| 1769                    | Uncategorized       | Bad Bot         |
| 1771                    | Marketing           | Bad Bot         |
| 1779                    | Tool                | Bad Bot         |
| 1782                    | Tool                | Bad Bot         |
| 1785                    | Speed Tester        | Bad Bot         |
| 1786                    | Tool                | Bad Bot         |
| 1792                    | Site Monitor        | Bad Bot         |
| 1869                    | Tool                | Bad Bot         |
| 1928                    | Marketing           | Bad Bot         |
| 1942                    | Site Monitor        | Bad Bot         |
| 1949                    | Marketing           | Bad Bot         |
| 1954                    | Marketing           | Bad Bot         |
| 1964                    | Uncategorized       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1969                    | Search Engine       | Bad Bot         |
| 2294                    | Search Engine       | Bad Bot         |
| 2303                    | Uncategorized       | Bad Bot         |
| 2308                    | Scrapper            | Bad Bot         |
| 2335                    | Marketing           | Bad Bot         |
| 2374                    | Uncategorized       | Bad Bot         |
| 2377                    | Uncategorized       | Bad Bot         |
| 2385                    | Tool                | Bad Bot         |
| 2389                    | Uncategorized       | Bad Bot         |
| 2414                    | Uncategorized       | Bad Bot         |
| 2421                    | Uncategorized       | Bad Bot         |
| 2424                    | Uncategorized       | Bad Bot         |
| 2427                    | Uncategorized       | Bad Bot         |
| 2429                    | Search Engine       | Bad Bot         |
| 2437                    | Uncategorized       | Bad Bot         |
| 2440                    | Search Engine       | Bad Bot         |
| 2443                    | Uncategorized       | Bad Bot         |
| 2453                    | Marketing           | Bad Bot         |
| 2472                    | Marketing           | Bad Bot         |
| 2474                    | Feed Fetcher        | Bad Bot         |
| 2482                    | Uncategorized       | Bad Bot         |
| 2500                    | Screenshot Creator  | Bad Bot         |
| 2503                    | Uncategorized       | Bad Bot         |
| 2507                    | Uncategorized       | Bad Bot         |
| 2516                    | Tool                | Bad Bot         |
| 2536                    | Marketing           | Bad Bot         |
| 2543                    | Tool                | Bad Bot         |
| 2548                    | Tool                | Bad Bot         |
| 2557                    | Marketing           | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 2561                    | Uncategorized       | Bad Bot         |
| 2572                    | Uncategorized       | Bad Bot         |
| 2578                    | Uncategorized       | Bad Bot         |
| 2584                    | Uncategorized       | Bad Bot         |
| 2588                    | Uncategorized       | Bad Bot         |
| 2592                    | Search Engine       | Bad Bot         |
| 2600                    | Tool                | Bad Bot         |
| 2606                    | Uncategorized       | Bad Bot         |
| 2611                    | Uncategorized       | Bad Bot         |
| 2622                    | Tool                | Bad Bot         |
| 2625                    | Tool                | Bad Bot         |
| 2631                    | Tool                | Bad Bot         |
| 2635                    | Tool                | Bad Bot         |
| 2637                    | Screenshot Creator  | Bad Bot         |
| 2641                    | Search Engine       | Bad Bot         |
| 2655                    | Uncategorized       | Bad Bot         |
| 2657                    | Marketing           | Bad Bot         |
| 2663                    | Uncategorized       | Bad Bot         |
| 2666                    | Tool                | Bad Bot         |
| 2672                    | Feed Fetcher        | Bad Bot         |
| 2674                    | Tool                | Bad Bot         |
| 2681                    | Search Engine       | Bad Bot         |
| 2684                    | Marketing           | Bad Bot         |
| 2690                    | Uncategorized       | Bad Bot         |
| 2704                    | Uncategorized       | Bad Bot         |
| 2707                    | Uncategorized       | Bad Bot         |
| 2714                    | Feed Fetcher        | Bad Bot         |
| 2722                    | Uncategorized       | Bad Bot         |
| 2726                    | Feed Fetcher        | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 2730                    | Screenshot Creator  | Bad Bot         |
| 2736                    | Uncategorized       | Bad Bot         |
| 2749                    | Uncategorized       | Bad Bot         |
| 2753                    | Tool                | Bad Bot         |
| 2756                    | Tool                | Bad Bot         |
| 2760                    | Speed Tester        | Bad Bot         |
| 2780                    | Tool                | Bad Bot         |
| 2785                    | Site Monitor        | Bad Bot         |
| 2789                    | Uncategorized       | Bad Bot         |
| 2797                    | Tool                | Bad Bot         |
| 2801                    | Tool                | Bad Bot         |
| 2808                    | Tool                | Bad Bot         |
| 2810                    | Uncategorized       | Bad Bot         |
| 2813                    | Uncategorized       | Bad Bot         |
| 2816                    | Uncategorized       | Bad Bot         |
| 2820                    | Link Checker        | Bad Bot         |
| 2824                    | Link Checker        | Bad Bot         |
| 2831                    | Screenshot Creator  | Bad Bot         |
| 2843                    | Tool                | Bad Bot         |
| 2846                    | Tool                | Bad Bot         |
| 2849                    | Marketing           | Bad Bot         |
| 2851                    | Uncategorized       | Bad Bot         |
| 2855                    | Uncategorized       | Bad Bot         |
| 2859                    | Tool                | Bad Bot         |
| 2873                    | Uncategorized       | Bad Bot         |
| 2875                    | Screenshot Creator  | Bad Bot         |
| 2879                    | Uncategorized       | Bad Bot         |
| 2881                    | Uncategorized       | Bad Bot         |
| 2886                    | Site Monitor        | Bad Bot         |



| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 2899                    | Uncategorized         | Bad Bot         |
| 2916                    | Uncategorized         | Bad Bot         |
| 2924                    | Tool                  | Bad Bot         |
| 2932                    | Marketing             | Bad Bot         |
| 2935                    | Link Checker          | Bad Bot         |
| 2939                    | Marketing             | Bad Bot         |
| 2942                    | Uncategorized         | Bad Bot         |
| 2955                    | Search Engine         | Bad Bot         |
| 2960                    | Tool                  | Bad Bot         |
| 2964                    | Uncategorized         | Bad Bot         |
| 2972                    | Marketing             | Bad Bot         |
| 2978                    | Vulnerability Scanner | Bad Bot         |
| 2980                    | Tool                  | Bad Bot         |
| 2985                    | Marketing             | Bad Bot         |
| 2993                    | Uncategorized         | Bad Bot         |
| 2999                    | Screenshot Creator    | Bad Bot         |
| 3003                    | Feed Fetcher          | Bad Bot         |
| 3005                    | Uncategorized         | Bad Bot         |
| 3013                    | Uncategorized         | Bad Bot         |
| 3016                    | Uncategorized         | Bad Bot         |
| 3021                    | Search Engine         | Bad Bot         |
| 3026                    | Uncategorized         | Bad Bot         |
| 3030                    | Marketing             | Bad Bot         |
| 3065                    | Marketing             | Bad Bot         |
| 3068                    | Uncategorized         | Bad Bot         |
| 3072                    | Marketing             | Bad Bot         |
| 3077                    | Marketing             | Bad Bot         |
| 3080                    | Uncategorized         | Bad Bot         |
| 3086                    | Scraper               | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3092                    | Search Engine       | Bad Bot         |
| 3100                    | Uncategorized       | Bad Bot         |
| 3104                    | Tool                | Bad Bot         |
| 3111                    | Uncategorized       | Bad Bot         |
| 3116                    | Site Monitor        | Bad Bot         |
| 3118                    | Tool                | Bad Bot         |
| 3120                    | Marketing           | Bad Bot         |
| 3122                    | Search Engine       | Bad Bot         |
| 3126                    | Marketing           | Bad Bot         |
| 3141                    | Tool                | Bad Bot         |
| 3143                    | Uncategorized       | Bad Bot         |
| 3145                    | Scraper             | Bad Bot         |
| 3150                    | Uncategorized       | Bad Bot         |
| 3173                    | Link Checker        | Bad Bot         |
| 3176                    | Uncategorized       | Bad Bot         |
| 3186                    | Speed Tester        | Bad Bot         |
| 3190                    | Scraper             | Bad Bot         |
| 3203                    | Search Engine       | Bad Bot         |
| 3216                    | Uncategorized       | Bad Bot         |
| 3220                    | Tool                | Bad Bot         |
| 3223                    | Link Checker        | Bad Bot         |
| 3241                    | Uncategorized       | Bad Bot         |
| 3245                    | Site Monitor        | Bad Bot         |
| 3285                    | Uncategorized       | Bad Bot         |
| 3304                    | Marketing           | Bad Bot         |
| 3307                    | Link Checker        | Bad Bot         |
| 3316                    | Tool                | Bad Bot         |
| 3326                    | Marketing           | Bad Bot         |
| 3333                    | Search Engine       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 3340                    | Search Engine         | Bad Bot         |
| 3344                    | Marketing             | Bad Bot         |
| 3350                    | Uncategorized         | Bad Bot         |
| 3355                    | Marketing             | Bad Bot         |
| 3365                    | Uncategorized         | Bad Bot         |
| 3378                    | Uncategorized         | Bad Bot         |
| 3388                    | Tool                  | Bad Bot         |
| 3396                    | Uncategorized         | Bad Bot         |
| 3400                    | Uncategorized         | Bad Bot         |
| 3421                    | Uncategorized         | Bad Bot         |
| 3439                    | Uncategorized         | Bad Bot         |
| 3447                    | Feed Fetcher          | Bad Bot         |
| 3451                    | Tool                  | Bad Bot         |
| 3459                    | Screenshot Creator    | Bad Bot         |
| 3469                    | Vulnerability Scanner | Bad Bot         |
| 3475                    | Uncategorized         | Bad Bot         |
| 3485                    | Search Engine         | Bad Bot         |
| 3493                    | Tool                  | Bad Bot         |
| 3502                    | Marketing             | Bad Bot         |
| 3507                    | Search Engine         | Bad Bot         |
| 3523                    | Uncategorized         | Bad Bot         |
| 3535                    | Speed Tester          | Bad Bot         |
| 3549                    | Uncategorized         | Bad Bot         |
| 3556                    | Uncategorized         | Bad Bot         |
| 3561                    | Uncategorized         | Bad Bot         |
| 3565                    | Uncategorized         | Bad Bot         |
| 3572                    | Search Engine         | Bad Bot         |
| 3578                    | Uncategorized         | Bad Bot         |
| 3610                    | Search Engine         | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3617                    | Uncategorized       | Bad Bot         |
| 3621                    | Marketing           | Bad Bot         |
| 3632                    | Tool                | Bad Bot         |
| 3635                    | Marketing           | Bad Bot         |
| 3653                    | Uncategorized       | Bad Bot         |
| 3661                    | Search Engine       | Bad Bot         |
| 3704                    | Uncategorized       | Bad Bot         |
| 3707                    | Uncategorized       | Bad Bot         |
| 3711                    | Uncategorized       | Bad Bot         |
| 3730                    | Search Engine       | Bad Bot         |
| 3740                    | Site Monitor        | Bad Bot         |
| 3759                    | Search Engine       | Bad Bot         |
| 3764                    | Uncategorized       | Bad Bot         |
| 3770                    | Uncategorized       | Bad Bot         |

---

## **Bot signature update for March 2021**

May 2, 2023

Some of existing bot signatures are updated. You can download and configure these signature rules to protect your appliance from bot attacks.

### **Bot signature version**

Signature version 7 is applicable for NetScaler platforms with 13.0 61.x builds or later.

### **Updated bot signatures**

Following is a list of bot signature rule IDs, category, and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 278                     | Scraper             | Good Bot        |
| 378                     | Scraper             | Good Bot        |
| 379                     | Scraper             | Good Bot        |
| 380                     | Scraper             | Good Bot        |
| 381                     | Scraper             | Good Bot        |
| 382                     | Scraper             | Good Bot        |
| 383                     | Scraper             | Good Bot        |
| 384                     | Scraper             | Good Bot        |
| 385                     | Scraper             | Good Bot        |
| 386                     | Scraper             | Good Bot        |
| 387                     | Scraper             | Good Bot        |
| 389                     | Scraper             | Good Bot        |
| 390                     | Scraper             | Good Bot        |
| 391                     | Scraper             | Good Bot        |
| 494                     | Scraper             | Good Bot        |
| 627                     | Search Engine       | Good Bot        |
| 660                     | Search Engine       | Good Bot        |
| 3840                    | Crawler             | Good Bot        |

---

## **Bot signature update for August 2021**

May 2, 2023

New signatures are added and some of existing bot signatures are updated. You can download and configure these signature rules to protect your appliance from bot attacks.

### **Bot signature version**

Signature version 8 is applicable for NetScaler platforms with 13.0 61.x builds or later.

**Updated bot signatures**

Following is a list of bot signature rule IDs, category, and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 236                     | Scraper             | Good Bot        |
| 378                     | Scraper             | Good Bot        |
| 381                     | Scraper             | Good Bot        |
| 382                     | Scraper             | Good Bot        |
| 390                     | Scraper             | Good Bot        |
| 544                     | Scraper             | Good Bot        |
| 702                     | Search Engine       | Good Bot        |
| 979                     | Scraper             | Bad Bot         |
| 3791                    | Speed Tester        | Good Bot        |
| 3797                    | Marketing           | Good Bot        |
| 3800                    | Marketing           | Good Bot        |
| 3824                    | Crawler             | Bad Bot         |
| 3833                    | Search Engine       | Good Bot        |
| 3849                    | Crawler             | Good Bot        |
| 3871                    | Marketing           | Good Bot        |
| 3963                    | Marketing           | Good Bot        |
| 4027                    | Search Engine       | Good Bot        |

---

**New bot signature**

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4028                    | Marketing           | Good Bot        |
| 4029                    | Tool                | Good Bot        |
| 4030                    | Scraper             | Good Bot        |
| 4031                    | Scraper             | Good Bot        |
| 4032                    | Uncategorized       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4033                    | Crawler               | Good Bot        |
| 4034                    | Crawler               | Good Bot        |
| 4035                    | Marketing             | Good Bot        |
| 4036                    | Vulnerability Scanner | Good Bot        |
| 4037                    | Vulnerability Scanner | Good Bot        |
| 4038                    | Uncategorized         | Bad Bot         |
| 4039                    | Tool                  | Good Bot        |
| 4040                    | Crawler               | Good Bot        |
| 4041                    | Tool                  | Good Bot        |
| 4042                    | Crawler               | Good Bot        |
| 4043                    | Screenshot Creator    | Good Bot        |
| 4044                    | Scrapper              | Bad Bot         |
| 4045                    | Scrapper              | Bad Bot         |
| 4046                    | Scrapper              | Bad Bot         |
| 4047                    | Uncategorized         | Bad Bot         |
| 4048                    | Feed Fetcher          | Good Bot        |
| 4049                    | Uncategorized         | Bad Bot         |
| 4050                    | Crawler               | Good Bot        |
| 4051                    | Crawler               | Good Bot        |
| 4052                    | Tool                  | Good Bot        |
| 4053                    | Tool                  | Good Bot        |
| 4054                    | Scrapper              | Bad Bot         |
| 4055                    | Uncategorized         | Good Bot        |
| 4056                    | Marketing             | Good Bot        |
| 4057                    | Screenshot Creator    | Good Bot        |
| 4058                    | Crawler               | Good Bot        |
| 4059                    | Uncategorized         | Bad Bot         |
| 4060                    | Search Engine         | Good Bot        |
| 4061                    | Search Engine         | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4062                    | Search Engine       | Good Bot        |
| 4063                    | Search Engine       | Good Bot        |
| 4064                    | Tool                | Good Bot        |
| 4065                    | Scrapper            | Good Bot        |
| 4066                    | Marketing           | Good Bot        |
| 4067                    | Marketing           | Good Bot        |
| 4068                    | Uncategorized       | Bad Bot         |
| 4069                    | Uncategorized       | Bad Bot         |
| 4070                    | Uncategorized       | Bad Bot         |
| 4071                    | Tool                | Good Bot        |
| 4072                    | Tool                | Bad Bot         |
| 4073                    | Uncategorized       | Bad Bot         |
| 4074                    | Uncategorized       | Bad Bot         |
| 4075                    | Tool                | Bad Bot         |
| 4076                    | Marketing           | Good Bot        |
| 4077                    | Scrapper            | Good Bot        |
| 4078                    | Crawler             | Good Bot        |
| 4079                    | Crawler             | Good Bot        |
| 4080                    | Tool                | Bad Bot         |
| 4081                    | Search Engine       | Good Bot        |
| 4082                    | Tool                | Good Bot        |
| 4083                    | Uncategorized       | Bad Bot         |
| 4084                    | Uncategorized       | Bad Bot         |
| 4085                    | Tool                | Good Bot        |
| 4086                    | Tool                | Good Bot        |
| 4087                    | Tool                | Bad Bot         |
| 4088                    | Search Engine       | Good Bot        |
| 4089                    | Marketing           | Good Bot        |
| 4090                    | Tool                | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4091                    | Tool                  | Good Bot        |
| 4092                    | Tool                  | Good Bot        |
| 4093                    | Tool                  | Good Bot        |
| 4094                    | Uncategorized         | Good Bot        |
| 4095                    | Site Monitor          | Good Bot        |
| 4096                    | Site Monitor          | Good Bot        |
| 4097                    | Site Monitor          | Good Bot        |
| 4098                    | Crawler               | Good Bot        |
| 4099                    | Search Engine         | Good Bot        |
| 4100                    | Search Engine         | Good Bot        |
| 4101                    | Search Engine         | Good Bot        |
| 4102                    | Search Engine         | Good Bot        |
| 4103                    | Marketing             | Good Bot        |
| 4104                    | Marketing             | Good Bot        |
| 4105                    | Marketing             | Good Bot        |
| 4106                    | Marketing             | Good Bot        |
| 4107                    | Marketing             | Good Bot        |
| 4108                    | Marketing             | Good Bot        |
| 4109                    | Search Engine         | Good Bot        |
| 4110                    | Crawler               | Good Bot        |
| 4111                    | Crawler               | Good Bot        |
| 4112                    | Crawler               | Good Bot        |
| 4113                    | Vulnerability Scanner | Good Bot        |
| 4114                    | Crawler               | Good Bot        |
| 4115                    | Tool                  | Good Bot        |
| 4116                    | Uncategorized         | Bad Bot         |
| 4117                    | Uncategorized         | Bad Bot         |
| 4118                    | Uncategorized         | Bad Bot         |
| 4119                    | Uncategorized         | Bad Bot         |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4120                    | Marketing           | Good Bot        |
| 4121                    | Marketing           | Good Bot        |
| 4122                    | Marketing           | Good Bot        |
| 4123                    | Marketing           | Good Bot        |
| 4124                    | Marketing           | Good Bot        |
| 4125                    | Marketing           | Good Bot        |
| 4126                    | Marketing           | Good Bot        |
| 4127                    | Marketing           | Good Bot        |
| 4128                    | Marketing           | Good Bot        |
| 4129                    | Marketing           | Good Bot        |
| 4130                    | Marketing           | Good Bot        |
| 4131                    | Tool                | Good Bot        |
| 4132                    | Marketing           | Good Bot        |
| 4133                    | Marketing           | Good Bot        |
| 4134                    | Tool                | Good Bot        |
| 4135                    | Marketing           | Good Bot        |
| 4136                    | Marketing           | Good Bot        |
| 4137                    | Marketing           | Good Bot        |
| 4138                    | Marketing           | Good Bot        |
| 4139                    | Marketing           | Good Bot        |
| 4140                    | Marketing           | Good Bot        |
| 4141                    | Marketing           | Good Bot        |
| 4142                    | Marketing           | Good Bot        |
| 4143                    | Marketing           | Good Bot        |
| 4144                    | Marketing           | Good Bot        |
| 4145                    | Search Engine       | Good Bot        |
| 4146                    | Search Engine       | Good Bot        |
| 4147                    | Search Engine       | Good Bot        |
| 4148                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4149                    | Search Engine       | Good Bot        |
| 4150                    | Search Engine       | Good Bot        |
| 4151                    | Search Engine       | Good Bot        |
| 4152                    | Search Engine       | Good Bot        |
| 4153                    | Search Engine       | Good Bot        |
| 4154                    | Search Engine       | Good Bot        |
| 4155                    | Search Engine       | Good Bot        |
| 4156                    | Screenshot Creator  | Good Bot        |
| 4157                    | Search Engine       | Good Bot        |
| 4158                    | Search Engine       | Good Bot        |
| 4159                    | Search Engine       | Good Bot        |
| 4160                    | Screenshot Creator  | Good Bot        |
| 4161                    | Search Engine       | Good Bot        |
| 4162                    | Search Engine       | Good Bot        |
| 4163                    | Tool                | Good Bot        |
| 4164                    | Search Engine       | Good Bot        |
| 4165                    | Marketing           | Good Bot        |
| 4166                    | Uncategorized       | Bad Bot         |
| 4167                    | Tool                | Bad Bot         |
| 4168                    | Speed Tester        | Good Bot        |
| 4169                    | Scraper             | Bad Bot         |
| 4170                    | Tool                | Good Bot        |
| 4171                    | Scraper             | Bad Bot         |
| 4172                    | Web Crawler         | Good Bot        |
| 4173                    | Tool                | Good Bot        |
| 4174                    | Crawler             | Good Bot        |
| 4175                    | Crawler             | Good Bot        |
| 4176                    | Tool                | Good Bot        |
| 4177                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4178                    | Tool                  | Good Bot        |
| 4179                    | Web Crawler           | Good Bot        |
| 4180                    | Tool                  | Good Bot        |
| 4181                    | Site Monitor          | Good Bot        |
| 4182                    | Site Monitor          | Good Bot        |
| 4183                    | Site Monitor          | Good Bot        |
| 4184                    | Site Monitor          | Good Bot        |
| 4185                    | Search Engine         | Good Bot        |
| 4186                    | Tool                  | Good Bot        |
| 4187                    | Tool                  | Good Bot        |
| 4188                    | Screenshot Creator    | Good Bot        |
| 4189                    | Marketing             | Good Bot        |
| 4190                    | Search Engine         | Good Bot        |
| 4191                    | Search Engine         | Good Bot        |
| 4192                    | Search Engine         | Good Bot        |
| 4193                    | Search Engine         | Good Bot        |
| 4194                    | Tool                  | Good Bot        |
| 4195                    | Search Engine         | Bad Bot         |
| 4196                    | Tool                  | Good Bot        |
| 4197                    | Tool                  | Good Bot        |
| 4198                    | Marketing             | Good Bot        |
| 4199                    | Marketing             | Good Bot        |
| 4200                    | Vulnerability Scanner | Good Bot        |
| 4201                    | Tool                  | Good Bot        |
| 4202                    | Tool                  | Good Bot        |
| 4203                    | Uncategorized         | Bad Bot         |
| 4204                    | Uncategorized         | Bad Bot         |
| 4205                    | Search Engine         | Good Bot        |
| 4206                    | Marketing             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4207                    | Marketing           | Good Bot        |
| 4208                    | Search Engine       | Good Bot        |
| 4209                    | Search Engine       | Good Bot        |
| 4210                    | Speed Tester        | Good Bot        |
| 4211                    | Tool                | Good Bot        |
| 4212                    | Feed Fetcher        | Good Bot        |
| 4213                    | Feed Fetcher        | Good Bot        |
| 4214                    | Scraper             | Bad Bot         |
| 4215                    | Tool                | Good Bot        |
| 4216                    | Tool                | Good Bot        |
| 4217                    | Tool                | Bad Bot         |
| 4218                    | Scraper             | Bad Bot         |
| 4219                    | Marketing           | Good Bot        |
| 4220                    | Tool                | Good Bot        |
| 4221                    | Tool                | Bad Bot         |
| 4222                    | Site Monitor        | Good Bot        |
| 4223                    | Marketing           | Good Bot        |
| 4224                    | Search Engine       | Good Bot        |
| 4225                    | Search Engine       | Good Bot        |
| 4226                    | Search Engine       | Good Bot        |
| 4227                    | Marketing           | Good Bot        |
| 4228                    | Marketing           | Good Bot        |
| 4229                    | Tool                | Good Bot        |
| 4230                    | Uncategorized       | Bad Bot         |
| 4231                    | Screenshot Creator  | Good Bot        |
| 4232                    | Tool                | Good Bot        |
| 4233                    | Site Monitor        | Good Bot        |
| 4234                    | Site Monitor        | Good Bot        |
| 4235                    | Site Monitor        | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4236                    | Site Monitor        | Good Bot        |
| 4237                    | Site Monitor        | Good Bot        |
| 4238                    | Site Monitor        | Good Bot        |
| 4239                    | Uncategorized       | Bad Bot         |
| 4240                    | Marketing           | Good Bot        |
| 4241                    | Marketing           | Good Bot        |
| 4242                    | Marketing           | Good Bot        |
| 4243                    | Marketing           | Good Bot        |
| 4244                    | Marketing           | Good Bot        |
| 4245                    | Marketing           | Good Bot        |
| 4246                    | Marketing           | Good Bot        |
| 4247                    | Search Engine       | Good Bot        |
| 4248                    | Search Engine       | Good Bot        |
| 4249                    | Screenshot Creator  | Good Bot        |
| 4250                    | Search Engine       | Good Bot        |
| 4251                    | Search Engine       | Good Bot        |
| 4252                    | Crawler             | Good Bot        |
| 4253                    | Crawler             | Good Bot        |
| 4254                    | Crawler             | Good Bot        |
| 4255                    | Tool                | Good Bot        |
| 4256                    | Uncategorized       | Good Bot        |
| 4257                    | Tool                | Good Bot        |
| 4258                    | Crawler             | Good Bot        |
| 4259                    | Crawler             | Good Bot        |
| 4260                    | Tool                | Good Bot        |
| 4261                    | Tool                | Good Bot        |
| 4262                    | Tool                | Good Bot        |
| 4263                    | Marketing           | Good Bot        |
| 4264                    | Crawler             | Bad Bot         |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4265                    | Search Engine       | Good Bot        |
| 4266                    | Uncategorized       | Good Bot        |
| 4267                    | Tool                | Good Bot        |
| 4268                    | Tool                | Good Bot        |
| 4269                    | Search Engine       | Good Bot        |
| 4270                    | Search Engine       | Good Bot        |
| 4271                    | Search Engine       | Good Bot        |
| 4272                    | Search Engine       | Good Bot        |
| 4273                    | Search Engine       | Good Bot        |
| 4274                    | Search Engine       | Good Bot        |
| 4275                    | Search Engine       | Good Bot        |
| 4276                    | Uncategorized       | Bad Bot         |
| 4277                    | Uncategorized       | Bad Bot         |
| 4278                    | Uncategorized       | Bad Bot         |
| 4279                    | Marketing           | Good Bot        |
| 4280                    | Crawler             | Good Bot        |
| 4281                    | Uncategorized       | Bad Bot         |
| 4282                    | Marketing           | Good Bot        |
| 4283                    | Marketing           | Good Bot        |
| 4284                    | Marketing           | Good Bot        |
| 4285                    | Marketing           | Good Bot        |
| 4286                    | Marketing           | Good Bot        |
| 4287                    | Marketing           | Good Bot        |
| 4288                    | Marketing           | Good Bot        |
| 4289                    | Marketing           | Good Bot        |
| 4290                    | Marketing           | Good Bot        |
| 4291                    | Marketing           | Good Bot        |
| 4292                    | Marketing           | Good Bot        |
| 4293                    | Marketing           | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4294                    | Marketing           | Good Bot        |
| 4295                    | Search Engine       | Good Bot        |
| 4296                    | Search Engine       | Good Bot        |
| 4297                    | Search Engine       | Good Bot        |
| 4298                    | Search Engine       | Good Bot        |
| 4299                    | Search Engine       | Good Bot        |
| 4300                    | Search Engine       | Good Bot        |
| 4301                    | Search Engine       | Good Bot        |
| 4302                    | Search Engine       | Good Bot        |
| 4303                    | Search Engine       | Good Bot        |
| 4304                    | Search Engine       | Good Bot        |
| 4305                    | Search Engine       | Good Bot        |
| 4306                    | Screenshot Creator  | Good Bot        |
| 4307                    | Search Engine       | Good Bot        |
| 4308                    | Search Engine       | Good Bot        |
| 4309                    | Search Engine       | Good Bot        |
| 4310                    | Search Engine       | Good Bot        |
| 4311                    | Screenshot Creator  | Good Bot        |
| 4312                    | Search Engine       | Good Bot        |
| 4313                    | Search Engine       | Good Bot        |
| 4314                    | Search Engine       | Good Bot        |
| 4315                    | Search Engine       | Good Bot        |
| 4316                    | Search Engine       | Good Bot        |
| 4317                    | Search Engine       | Good Bot        |
| 4318                    | Screenshot Creator  | Good Bot        |
| 4319                    | Screenshot Creator  | Good Bot        |
| 4320                    | Uncategorized       | Bad Bot         |
| 4321                    | Uncategorized       | Good Bot        |
| 4322                    | Crawler             | Good Bot        |



| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4323                    | Tool                  | Good Bot        |
| 4324                    | Tool                  | Good Bot        |
| 4325                    | Tool                  | Good Bot        |
| 4326                    | Scrapper              | Bad Bot         |
| 4327                    | Search Engine         | Good Bot        |
| 4328                    | Marketing             | Good Bot        |
| 4329                    | Uncategorized         | Bad Bot         |
| 4330                    | Site Monitor          | Good Bot        |
| 4331                    | Search Engine         | Good Bot        |
| 4332                    | Search Engine         | Good Bot        |
| 4333                    | Uncategorized         | Bad Bot         |
| 4334                    | Scrapper              | Good Bot        |
| 4335                    | Marketing             | Good Bot        |
| 4336                    | Marketing             | Good Bot        |
| 4337                    | Tool                  | Good Bot        |
| 4338                    | Tool                  | Good Bot        |
| 4339                    | Tool                  | Good Bot        |
| 4340                    | Crawler               | Good Bot        |
| 4341                    | Crawler               | Good Bot        |
| 4342                    | Vulnerability Scanner | Good Bot        |
| 4343                    | Vulnerability Scanner | Good Bot        |
| 4344                    | Scrapper              | Good Bot        |
| 4345                    | Marketing             | Good Bot        |
| 4346                    | Marketing             | Good Bot        |
| 4347                    | Marketing             | Good Bot        |
| 4348                    | Marketing             | Good Bot        |
| 4349                    | Marketing             | Good Bot        |
| 4350                    | Marketing             | Good Bot        |
| 4351                    | Marketing             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4352                    | Marketing           | Good Bot        |
| 4353                    | Marketing           | Good Bot        |
| 4354                    | Marketing           | Good Bot        |
| 4355                    | Search Engine       | Good Bot        |
| 4356                    | Search Engine       | Good Bot        |
| 4357                    | Search Engine       | Good Bot        |
| 4358                    | Search Engine       | Good Bot        |
| 4359                    | Search Engine       | Good Bot        |
| 4360                    | Search Engine       | Good Bot        |
| 4361                    | Search Engine       | Good Bot        |
| 4362                    | Search Engine       | Good Bot        |
| 4363                    | Search Engine       | Good Bot        |
| 4364                    | Search Engine       | Good Bot        |
| 4365                    | Screenshot Creator  | Good Bot        |
| 4366                    | Search Engine       | Good Bot        |
| 4367                    | Search Engine       | Good Bot        |
| 4368                    | Search Engine       | Good Bot        |
| 4369                    | Search Engine       | Good Bot        |
| 4370                    | Screenshot Creator  | Good Bot        |
| 4371                    | Search Engine       | Good Bot        |
| 4372                    | Search Engine       | Good Bot        |
| 4373                    | Search Engine       | Good Bot        |
| 4374                    | Search Engine       | Good Bot        |
| 4375                    | Search Engine       | Good Bot        |
| 4376                    | Screenshot Creator  | Good Bot        |
| 4377                    | Crawler             | Good Bot        |
| 4378                    | Crawler             | Good Bot        |
| 4379                    | Search Engine       | Good Bot        |
| 4380                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4381                    | Search Engine       | Good Bot        |
| 4382                    | Search Engine       | Good Bot        |
| 4383                    | Crawler             | Good Bot        |
| 4384                    | Search Engine       | Good Bot        |
| 4385                    | Tool                | Good Bot        |
| 4386                    | Uncategorized       | Good Bot        |
| 4387                    | Crawler             | Good Bot        |
| 4388                    | Crawler             | Good Bot        |
| 4389                    | Tool                | Good Bot        |
| 4390                    | Tool                | Good Bot        |
| 4391                    | Tool                | Good Bot        |
| 4392                    | Tool                | Good Bot        |
| 4393                    | Tool                | Good Bot        |
| 4394                    | Uncategorized       | Good Bot        |
| 4395                    | Tool                | Good Bot        |
| 4396                    | Site Monitor        | Good Bot        |
| 4397                    | Site Monitor        | Good Bot        |
| 4398                    | Tool                | Bad Bot         |
| 4399                    | Tool                | Bad Bot         |
| 4400                    | Tool                | Bad Bot         |
| 4401                    | Tool                | Bad Bot         |
| 4402                    | Tool                | Bad Bot         |
| 4403                    | Tool                | Bad Bot         |
| 4404                    | Search Engine       | Good Bot        |
| 4405                    | Search Engine       | Good Bot        |
| 4406                    | Search Engine       | Good Bot        |
| 4407                    | Uncategorized       | Good Bot        |

---

## Bot signature update for September 2021

May 2, 2023

New signatures added and some of existing bot signatures are updated. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 9 applicable for NetScaler platforms with 13.0 61.48 or later builds.

### Updated bot signatures

Following is a list of bot signature rule IDs, category, and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 2                       | Crawler             | Good Bot        |
| 5                       | Crawler             | Good Bot        |
| 9                       | Crawler             | Good Bot        |
| 45                      | Crawler             | Good Bot        |
| 46                      | Crawler             | Good Bot        |
| 48                      | Crawler             | Good Bot        |
| 52                      | Crawler             | Good Bot        |
| 60                      | Crawler             | Good Bot        |
| 61                      | Crawler             | Good Bot        |
| 63                      | Crawler             | Good Bot        |
| 67                      | Crawler             | Good Bot        |
| 71                      | Crawler             | Good Bot        |
| 74                      | Crawler             | Good Bot        |
| 75                      | Crawler             | Good Bot        |
| 76                      | Crawler             | Good Bot        |
| 78                      | Crawler             | Good Bot        |
| 79                      | Crawler             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 80                      | Crawler             | Good Bot        |
| 81                      | Crawler             | Good Bot        |
| 82                      | Crawler             | Good Bot        |
| 83                      | Crawler             | Good Bot        |
| 84                      | Crawler             | Good Bot        |
| 87                      | Crawler             | Good Bot        |
| 90                      | Crawler             | Good Bot        |
| 95                      | Crawler             | Good Bot        |
| 96                      | Crawler             | Good Bot        |
| 97                      | Crawler             | Good Bot        |
| 100                     | Crawler             | Good Bot        |
| 101                     | Crawler             | Good Bot        |
| 102                     | Crawler             | Good Bot        |
| 103                     | Crawler             | Good Bot        |
| 104                     | Crawler             | Good Bot        |
| 107                     | Crawler             | Good Bot        |
| 108                     | Crawler             | Good Bot        |
| 110                     | Crawler             | Good Bot        |
| 111                     | Crawler             | Good Bot        |
| 114                     | Crawler             | Good Bot        |
| 115                     | Crawler             | Good Bot        |
| 123                     | Crawler             | Good Bot        |
| 135                     | Crawler             | Good Bot        |
| 136                     | Crawler             | Good Bot        |
| 137                     | Crawler             | Good Bot        |
| 140                     | Crawler             | Good Bot        |
| 141                     | Crawler             | Good Bot        |
| 143                     | Crawler             | Good Bot        |
| 144                     | Crawler             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 145                     | Crawler             | Good Bot        |
| 146                     | Crawler             | Good Bot        |
| 147                     | Crawler             | Good Bot        |
| 149                     | Crawler             | Good Bot        |
| 152                     | Crawler             | Good Bot        |
| 155                     | Crawler             | Good Bot        |
| 156                     | Crawler             | Good Bot        |
| 157                     | Crawler             | Good Bot        |
| 158                     | Crawler             | Good Bot        |
| 159                     | Crawler             | Good Bot        |
| 160                     | Crawler             | Good Bot        |
| 161                     | Crawler             | Good Bot        |
| 162                     | Crawler             | Good Bot        |
| 163                     | Crawler             | Good Bot        |
| 164                     | Crawler             | Good Bot        |
| 165                     | Crawler             | Good Bot        |
| 166                     | Crawler             | Good Bot        |
| 167                     | Crawler             | Good Bot        |
| 172                     | Crawler             | Good Bot        |
| 173                     | Crawler             | Good Bot        |
| 174                     | Crawler             | Good Bot        |
| 176                     | Crawler             | Good Bot        |
| 177                     | Crawler             | Good Bot        |
| 180                     | Crawler             | Good Bot        |
| 187                     | Crawler             | Good Bot        |
| 197                     | Crawler             | Good Bot        |
| 201                     | Crawler             | Good Bot        |
| 202                     | Crawler             | Good Bot        |
| 203                     | Crawler             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 206                     | Crawler             | Good Bot        |
| 211                     | Feed Fetcher        | Bad Bot         |
| 217                     | Feed Fetcher        | Good Bot        |
| 219                     | Feed Fetcher        | Good Bot        |
| 229                     | Scraper             | Good Bot        |
| 235                     | Scraper             | Good Bot        |
| 236                     | Scraper             | Good Bot        |
| 237                     | Scraper             | Good Bot        |
| 248                     | Scraper             | Good Bot        |
| 250                     | Scraper             | Good Bot        |
| 260                     | Scraper             | Good Bot        |
| 263                     | Scraper             | Good Bot        |
| 265                     | Scraper             | Good Bot        |
| 267                     | Scraper             | Good Bot        |
| 268                     | Scraper             | Good Bot        |
| 271                     | Scraper             | Good Bot        |
| 272                     | Scraper             | Good Bot        |
| 276                     | Scraper             | Good Bot        |
| 277                     | Scraper             | Good Bot        |
| 278                     | Scraper             | Good Bot        |
| 279                     | Scraper             | Good Bot        |
| 280                     | Scraper             | Good Bot        |
| 281                     | Scraper             | Good Bot        |
| 283                     | Scraper             | Good Bot        |
| 285                     | Scraper             | Good Bot        |
| 286                     | Scraper             | Good Bot        |
| 287                     | Scraper             | Good Bot        |
| 290                     | Scraper             | Good Bot        |
| 292                     | Scraper             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 293                     | Scraper             | Good Bot        |
| 342                     | Scraper             | Good Bot        |
| 343                     | Scraper             | Good Bot        |
| 344                     | Scraper             | Good Bot        |
| 355                     | Scraper             | Good Bot        |
| 357                     | Scraper             | Good Bot        |
| 360                     | Scraper             | Good Bot        |
| 362                     | Scraper             | Good Bot        |
| 366                     | Scraper             | Good Bot        |
| 370                     | Scraper             | Good Bot        |
| 371                     | Scraper             | Good Bot        |
| 372                     | Scraper             | Good Bot        |
| 373                     | Scraper             | Good Bot        |
| 374                     | Scraper             | Good Bot        |
| 376                     | Scraper             | Good Bot        |
| 377                     | Scraper             | Good Bot        |
| 380                     | Scraper             | Good Bot        |
| 392                     | Scraper             | Good Bot        |
| 393                     | Scraper             | Good Bot        |
| 394                     | Scraper             | Good Bot        |
| 396                     | Scraper             | Good Bot        |
| 397                     | Scraper             | Good Bot        |
| 414                     | Scraper             | Good Bot        |
| 418                     | Scraper             | Good Bot        |
| 419                     | Scraper             | Good Bot        |
| 421                     | Scraper             | Good Bot        |
| 422                     | Scraper             | Good Bot        |
| 423                     | Scraper             | Good Bot        |
| 424                     | Scraper             | Good Bot        |



| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 425                     | Scraper             | Good Bot        |
| 426                     | Scraper             | Good Bot        |
| 427                     | Scraper             | Good Bot        |
| 428                     | Scraper             | Good Bot        |
| 430                     | Scraper             | Good Bot        |
| 432                     | Scraper             | Good Bot        |
| 433                     | Scraper             | Good Bot        |
| 434                     | Scraper             | Good Bot        |
| 435                     | Scraper             | Good Bot        |
| 441                     | Scraper             | Good Bot        |
| 445                     | Scraper             | Good Bot        |
| 446                     | Scraper             | Good Bot        |
| 451                     | Scraper             | Good Bot        |
| 452                     | Scraper             | Good Bot        |
| 454                     | Scraper             | Good Bot        |
| 455                     | Scraper             | Good Bot        |
| 456                     | Scraper             | Good Bot        |
| 457                     | Scraper             | Good Bot        |
| 458                     | Scraper             | Good Bot        |
| 461                     | Scraper             | Good Bot        |
| 465                     | Scraper             | Good Bot        |
| 466                     | Scraper             | Good Bot        |
| 469                     | Scraper             | Good Bot        |
| 473                     | Scraper             | Good Bot        |
| 474                     | Scraper             | Good Bot        |
| 476                     | Scraper             | Good Bot        |
| 477                     | Scraper             | Good Bot        |
| 484                     | Scraper             | Good Bot        |
| 485                     | Scraper             | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 487                     | Scraper             | Good Bot        |
| 488                     | Scraper             | Good Bot        |
| 489                     | Scraper             | Good Bot        |
| 490                     | Scraper             | Good Bot        |
| 493                     | Scraper             | Good Bot        |
| 494                     | Scraper             | Good Bot        |
| 495                     | Scraper             | Good Bot        |
| 497                     | Scraper             | Good Bot        |
| 498                     | Scraper             | Good Bot        |
| 499                     | Scraper             | Good Bot        |
| 500                     | Scraper             | Good Bot        |
| 505                     | Scraper             | Good Bot        |
| 506                     | Scraper             | Good Bot        |
| 507                     | Scraper             | Good Bot        |
| 512                     | Scraper             | Good Bot        |
| 513                     | Scraper             | Good Bot        |
| 514                     | Scraper             | Good Bot        |
| 527                     | Scraper             | Good Bot        |
| 533                     | Scraper             | Good Bot        |
| 539                     | Scraper             | Good Bot        |
| 540                     | Scraper             | Good Bot        |
| 542                     | Scraper             | Good Bot        |
| 544                     | Scraper             | Good Bot        |
| 545                     | Scraper             | Good Bot        |
| 546                     | Scraper             | Good Bot        |
| 547                     | Scraper             | Good Bot        |
| 548                     | Scraper             | Good Bot        |
| 551                     | Scraper             | Good Bot        |
| 552                     | Scraper             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 554                     | Scraper             | Good Bot        |
| 556                     | Scraper             | Good Bot        |
| 558                     | Scraper             | Good Bot        |
| 560                     | Scraper             | Good Bot        |
| 561                     | Scraper             | Good Bot        |
| 566                     | Scraper             | Good Bot        |
| 575                     | Scraper             | Good Bot        |
| 578                     | Scraper             | Good Bot        |
| 581                     | Scraper             | Good Bot        |
| 591                     | Scraper             | Good Bot        |
| 593                     | Scraper             | Good Bot        |
| 595                     | Scraper             | Good Bot        |
| 600                     | Scraper             | Good Bot        |
| 601                     | Scraper             | Good Bot        |
| 602                     | Scraper             | Good Bot        |
| 604                     | Scraper             | Good Bot        |
| 605                     | Scraper             | Good Bot        |
| 609                     | Scraper             | Good Bot        |
| 610                     | Scraper             | Good Bot        |
| 611                     | Scraper             | Good Bot        |
| 612                     | Scraper             | Good Bot        |
| 613                     | Scraper             | Good Bot        |
| 615                     | Scraper             | Good Bot        |
| 620                     | Search Engine       | Good Bot        |
| 622                     | Search Engine       | Good Bot        |
| 623                     | Search Engine       | Good Bot        |
| 624                     | Search Engine       | Good Bot        |
| 626                     | Search Engine       | Good Bot        |
| 627                     | Search Engine       | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 628                     | Search Engine       | Good Bot        |
| 629                     | Search Engine       | Good Bot        |
| 633                     | Search Engine       | Good Bot        |
| 634                     | Search Engine       | Good Bot        |
| 636                     | Search Engine       | Good Bot        |
| 637                     | Search Engine       | Good Bot        |
| 639                     | Search Engine       | Good Bot        |
| 640                     | Search Engine       | Good Bot        |
| 641                     | Search Engine       | Good Bot        |
| 642                     | Search Engine       | Good Bot        |
| 643                     | Search Engine       | Good Bot        |
| 647                     | Search Engine       | Good Bot        |
| 649                     | Search Engine       | Good Bot        |
| 650                     | Search Engine       | Good Bot        |
| 651                     | Search Engine       | Good Bot        |
| 654                     | Search Engine       | Good Bot        |
| 656                     | Search Engine       | Good Bot        |
| 657                     | Search Engine       | Good Bot        |
| 658                     | Search Engine       | Good Bot        |
| 659                     | Search Engine       | Good Bot        |
| 660                     | Search Engine       | Good Bot        |
| 663                     | Search Engine       | Good Bot        |
| 664                     | Search Engine       | Good Bot        |
| 665                     | Search Engine       | Good Bot        |
| 666                     | Search Engine       | Good Bot        |
| 667                     | Search Engine       | Good Bot        |
| 669                     | Search Engine       | Good Bot        |
| 670                     | Search Engine       | Good Bot        |
| 671                     | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 672                     | Search Engine       | Good Bot        |
| 673                     | Search Engine       | Good Bot        |
| 674                     | Search Engine       | Good Bot        |
| 675                     | Search Engine       | Good Bot        |
| 676                     | Search Engine       | Good Bot        |
| 677                     | Search Engine       | Good Bot        |
| 679                     | Search Engine       | Good Bot        |
| 680                     | Search Engine       | Good Bot        |
| 690                     | Search Engine       | Good Bot        |
| 693                     | Search Engine       | Good Bot        |
| 694                     | Search Engine       | Good Bot        |
| 697                     | Search Engine       | Good Bot        |
| 698                     | Search Engine       | Good Bot        |
| 703                     | Search Engine       | Good Bot        |
| 706                     | Search Engine       | Good Bot        |
| 712                     | Search Engine       | Good Bot        |
| 714                     | Search Engine       | Good Bot        |
| 715                     | Search Engine       | Good Bot        |
| 716                     | Search Engine       | Good Bot        |
| 721                     | Search Engine       | Good Bot        |
| 723                     | Search Engine       | Good Bot        |
| 725                     | Search Engine       | Good Bot        |
| 727                     | Search Engine       | Good Bot        |
| 728                     | Search Engine       | Good Bot        |
| 729                     | Search Engine       | Good Bot        |
| 730                     | Search Engine       | Good Bot        |
| 731                     | Search Engine       | Good Bot        |
| 732                     | Search Engine       | Good Bot        |
| 735                     | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 736                     | Search Engine       | Good Bot        |
| 740                     | Search Engine       | Good Bot        |
| 748                     | Search Engine       | Good Bot        |
| 749                     | Search Engine       | Good Bot        |
| 750                     | Search Engine       | Good Bot        |
| 751                     | Search Engine       | Good Bot        |
| 756                     | Search Engine       | Good Bot        |
| 757                     | Search Engine       | Good Bot        |
| 758                     | Search Engine       | Good Bot        |
| 759                     | Search Engine       | Good Bot        |
| 760                     | Search Engine       | Good Bot        |
| 761                     | Search Engine       | Good Bot        |
| 762                     | Search Engine       | Good Bot        |
| 763                     | Search Engine       | Good Bot        |
| 764                     | Search Engine       | Good Bot        |
| 765                     | Search Engine       | Good Bot        |
| 766                     | Search Engine       | Good Bot        |
| 767                     | Search Engine       | Good Bot        |
| 768                     | Search Engine       | Good Bot        |
| 769                     | Search Engine       | Good Bot        |
| 770                     | Search Engine       | Good Bot        |
| 771                     | Search Engine       | Good Bot        |
| 772                     | Search Engine       | Good Bot        |
| 773                     | Search Engine       | Good Bot        |
| 776                     | Search Engine       | Good Bot        |
| 777                     | Search Engine       | Good Bot        |
| 780                     | Search Engine       | Good Bot        |
| 781                     | Search Engine       | Good Bot        |
| 784                     | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 786                     | Search Engine       | Good Bot        |
| 787                     | Search Engine       | Good Bot        |
| 788                     | Search Engine       | Good Bot        |
| 789                     | Search Engine       | Good Bot        |
| 790                     | Search Engine       | Good Bot        |
| 791                     | Search Engine       | Good Bot        |
| 792                     | Search Engine       | Good Bot        |
| 795                     | Search Engine       | Good Bot        |
| 796                     | Search Engine       | Good Bot        |
| 798                     | Search Engine       | Good Bot        |
| 800                     | Search Engine       | Good Bot        |
| 801                     | Search Engine       | Good Bot        |
| 802                     | Search Engine       | Good Bot        |
| 803                     | Search Engine       | Good Bot        |
| 805                     | Search Engine       | Good Bot        |
| 806                     | Search Engine       | Good Bot        |
| 807                     | Search Engine       | Good Bot        |
| 809                     | Search Engine       | Good Bot        |
| 810                     | Search Engine       | Good Bot        |
| 811                     | Search Engine       | Good Bot        |
| 812                     | Search Engine       | Good Bot        |
| 814                     | Search Engine       | Good Bot        |
| 815                     | Search Engine       | Good Bot        |
| 816                     | Search Engine       | Good Bot        |
| 817                     | Search Engine       | Good Bot        |
| 818                     | Search Engine       | Good Bot        |
| 819                     | Search Engine       | Good Bot        |
| 820                     | Search Engine       | Good Bot        |
| 821                     | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 822                     | Search Engine       | Good Bot        |
| 823                     | Search Engine       | Good Bot        |
| 825                     | Search Engine       | Good Bot        |
| 827                     | Search Engine       | Good Bot        |
| 830                     | Search Engine       | Good Bot        |
| 831                     | Search Engine       | Good Bot        |
| 834                     | Search Engine       | Good Bot        |
| 837                     | Search Engine       | Good Bot        |
| 838                     | Search Engine       | Good Bot        |
| 849                     | Site Monitor        | Good Bot        |
| 850                     | Site Monitor        | Good Bot        |
| 851                     | Site Monitor        | Good Bot        |
| 853                     | Site Monitor        | Good Bot        |
| 857                     | Site Monitor        | Good Bot        |
| 858                     | Site Monitor        | Good Bot        |
| 859                     | Site Monitor        | Good Bot        |
| 860                     | Site Monitor        | Good Bot        |
| 861                     | Site Monitor        | Good Bot        |
| 862                     | Site Monitor        | Good Bot        |
| 863                     | Site Monitor        | Good Bot        |
| 864                     | Site Monitor        | Good Bot        |
| 865                     | Site Monitor        | Good Bot        |
| 866                     | Site Monitor        | Good Bot        |
| 867                     | Site Monitor        | Good Bot        |
| 868                     | Site Monitor        | Good Bot        |
| 869                     | Site Monitor        | Good Bot        |
| 870                     | Site Monitor        | Good Bot        |
| 871                     | Site Monitor        | Good Bot        |
| 872                     | Site Monitor        | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 873                     | Site Monitor        | Good Bot        |
| 874                     | Site Monitor        | Good Bot        |
| 875                     | Site Monitor        | Good Bot        |
| 876                     | Site Monitor        | Good Bot        |
| 877                     | Site Monitor        | Good Bot        |
| 880                     | Site Monitor        | Good Bot        |
| 883                     | Site Monitor        | Good Bot        |
| 885                     | Site Monitor        | Good Bot        |
| 886                     | Site Monitor        | Good Bot        |
| 888                     | Site Monitor        | Good Bot        |
| 889                     | Site Monitor        | Good Bot        |
| 895                     | Site Monitor        | Good Bot        |
| 896                     | Site Monitor        | Good Bot        |
| 897                     | Site Monitor        | Good Bot        |
| 898                     | Site Monitor        | Good Bot        |
| 900                     | Site Monitor        | Good Bot        |
| 901                     | Site Monitor        | Good Bot        |
| 904                     | Site Monitor        | Good Bot        |
| 906                     | Site Monitor        | Good Bot        |
| 908                     | Site Monitor        | Good Bot        |
| 909                     | Site Monitor        | Good Bot        |
| 910                     | Site Monitor        | Good Bot        |
| 911                     | Site Monitor        | Good Bot        |
| 912                     | Site Monitor        | Good Bot        |
| 913                     | Site Monitor        | Good Bot        |
| 917                     | Site Monitor        | Good Bot        |
| 918                     | Site Monitor        | Good Bot        |
| 919                     | Site Monitor        | Good Bot        |
| 920                     | Site Monitor        | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 921                     | Site Monitor        | Good Bot        |
| 924                     | Site Monitor        | Good Bot        |
| 926                     | Site Monitor        | Good Bot        |
| 927                     | Site Monitor        | Good Bot        |
| 928                     | Site Monitor        | Good Bot        |
| 929                     | Site Monitor        | Good Bot        |
| 930                     | Site Monitor        | Good Bot        |
| 931                     | Site Monitor        | Good Bot        |
| 938                     | Site Monitor        | Good Bot        |
| 939                     | Site Monitor        | Good Bot        |
| 943                     | Site Monitor        | Bad Bot         |
| 958                     | Site Monitor        | Good Bot        |
| 959                     | Site Monitor        | Good Bot        |
| 960                     | Site Monitor        | Good Bot        |
| 963                     | Site Monitor        | Good Bot        |
| 984                     | Scraper             | Good Bot        |
| 996                     | Scraper             | Good Bot        |
| 997                     | Scraper             | Good Bot        |
| 998                     | Scraper             | Good Bot        |
| 1002                    | Scraper             | Good Bot        |
| 1006                    | Scraper             | Good Bot        |
| 1588                    | Uncategorized       | Bad Bot         |
| 2561                    | Scraper             | Bad Bot         |
| 2810                    | Crawler             | Good Bot        |
| 3782                    | Marketing           | Good Bot        |
| 3783                    | Search Engine       | Good Bot        |
| 3788                    | Tool                | Good Bot        |
| 3789                    | Tool                | Good Bot        |
| 3790                    | Crawler             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3792                    | Tool                | Good Bot        |
| 3793                    | Tool                | Good Bot        |
| 3794                    | Crawler             | Good Bot        |
| 3796                    | Scrapper            | Good Bot        |
| 3798                    | Marketing           | Good Bot        |
| 3799                    | Marketing           | Good Bot        |
| 3801                    | Marketing           | Good Bot        |
| 3802                    | Screenshot Creator  | Good Bot        |
| 3803                    | Search Engine       | Good Bot        |
| 3804                    | Screenshot Creator  | Good Bot        |
| 3805                    | Search Engine       | Good Bot        |
| 3806                    | Tool                | Good Bot        |
| 3807                    | Crawler             | Good Bot        |
| 3808                    | Crawler             | Good Bot        |
| 3809                    | Tool                | Good Bot        |
| 3810                    | Scrapper            | Good Bot        |
| 3811                    | Tool                | Good Bot        |
| 3813                    | Tool                | Good Bot        |
| 3814                    | Crawler             | Good Bot        |
| 3815                    | Uncategorized       | Good Bot        |
| 3817                    | Tool                | Good Bot        |
| 3818                    | Tool                | Good Bot        |
| 3819                    | Tool                | Good Bot        |
| 3820                    | Crawler             | Good Bot        |
| 3821                    | Search Engine       | Good Bot        |
| 3822                    | Marketing           | Good Bot        |
| 3823                    | Uncategorized       | Good Bot        |
| 3831                    | Scrapper            | Good Bot        |
| 3834                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 3835                    | Search Engine         | Good Bot        |
| 3836                    | Uncategorized         | Good Bot        |
| 3837                    | Uncategorized         | Good Bot        |
| 3838                    | Uncategorized         | Good Bot        |
| 3839                    | Marketing             | Good Bot        |
| 3840                    | Crawler               | Good Bot        |
| 3842                    | Crawler               | Good Bot        |
| 3843                    | Crawler               | Good Bot        |
| 3844                    | Marketing             | Good Bot        |
| 3845                    | Marketing             | Good Bot        |
| 3846                    | Marketing             | Good Bot        |
| 3847                    | Marketing             | Good Bot        |
| 3848                    | Uncategorized         | Good Bot        |
| 3850                    | Tool                  | Good Bot        |
| 3851                    | Uncategorized         | Good Bot        |
| 3852                    | Tool                  | Good Bot        |
| 3853                    | Vulnerability Scanner | Good Bot        |
| 3854                    | Crawler               | Good Bot        |
| 3855                    | Crawler               | Good Bot        |
| 3856                    | Tool                  | Good Bot        |
| 3861                    | Marketing             | Good Bot        |
| 3862                    | Marketing             | Good Bot        |
| 3863                    | Marketing             | Good Bot        |
| 3864                    | Marketing             | Good Bot        |
| 3865                    | Marketing             | Good Bot        |
| 3866                    | Marketing             | Good Bot        |
| 3867                    | Marketing             | Good Bot        |
| 3868                    | Marketing             | Good Bot        |
| 3869                    | Tool                  | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3870                    | Marketing           | Good Bot        |
| 3872                    | Marketing           | Good Bot        |
| 3873                    | Search Engine       | Good Bot        |
| 3874                    | Search Engine       | Good Bot        |
| 3875                    | Search Engine       | Good Bot        |
| 3876                    | Search Engine       | Good Bot        |
| 3877                    | Screenshot Creator  | Good Bot        |
| 3878                    | Search Engine       | Good Bot        |
| 3879                    | Search Engine       | Good Bot        |
| 3880                    | Screenshot Creator  | Good Bot        |
| 3881                    | Screenshot Creator  | Good Bot        |
| 3882                    | Search Engine       | Good Bot        |
| 3883                    | Search Engine       | Good Bot        |
| 3884                    | Search Engine       | Good Bot        |
| 3885                    | Search Engine       | Good Bot        |
| 3886                    | Tool                | Good Bot        |
| 3887                    | Crawler             | Good Bot        |
| 3888                    | Crawler             | Good Bot        |
| 3889                    | Uncategorized       | Good Bot        |
| 3890                    | Marketing           | Good Bot        |
| 3893                    | Crawler             | Good Bot        |
| 3894                    | Tool                | Good Bot        |
| 3895                    | Tool                | Good Bot        |
| 3896                    | Search Engine       | Good Bot        |
| 3897                    | Tool                | Good Bot        |
| 3898                    | Tool                | Good Bot        |
| 3899                    | Uncategorized       | Good Bot        |
| 3901                    | Crawler             | Good Bot        |
| 3903                    | Tool                | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3904                    | Search Engine       | Good Bot        |
| 3905                    | Search Engine       | Good Bot        |
| 3906                    | Search Engine       | Good Bot        |
| 3912                    | Crawler             | Good Bot        |
| 3918                    | Crawler             | Good Bot        |
| 3919                    | Uncategorized       | Good Bot        |
| 3920                    | Uncategorized       | Good Bot        |
| 3921                    | Uncategorized       | Good Bot        |
| 3922                    | Uncategorized       | Good Bot        |
| 3923                    | Uncategorized       | Good Bot        |
| 3924                    | Uncategorized       | Good Bot        |
| 3925                    | Uncategorized       | Good Bot        |
| 3926                    | Marketing           | Good Bot        |
| 3927                    | Marketing           | Good Bot        |
| 3928                    | Marketing           | Good Bot        |
| 3929                    | Tool                | Good Bot        |
| 3930                    | Marketing           | Good Bot        |
| 3931                    | Uncategorized       | Good Bot        |
| 3932                    | Crawler             | Good Bot        |
| 3933                    | Marketing           | Good Bot        |
| 3934                    | Marketing           | Good Bot        |
| 3935                    | Scraper             | Good Bot        |
| 3936                    | Marketing           | Good Bot        |
| 3937                    | Scraper             | Good Bot        |
| 3938                    | Feed Fetcher        | Good Bot        |
| 3940                    | Search Engine       | Good Bot        |
| 3941                    | Crawler             | Good Bot        |
| 3942                    | Scraper             | Good Bot        |
| 3946                    | Feed Fetcher        | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3947                    | Crawler             | Good Bot        |
| 3950                    | Virus Scanner       | Good Bot        |
| 3951                    | Marketing           | Good Bot        |
| 3952                    | Marketing           | Good Bot        |
| 3953                    | Marketing           | Good Bot        |
| 3954                    | Marketing           | Good Bot        |
| 3955                    | Marketing           | Good Bot        |
| 3956                    | Marketing           | Good Bot        |
| 3957                    | Marketing           | Good Bot        |
| 3958                    | Marketing           | Good Bot        |
| 3959                    | Marketing           | Good Bot        |
| 3960                    | Marketing           | Good Bot        |
| 3961                    | Marketing           | Good Bot        |
| 3962                    | Marketing           | Good Bot        |
| 3964                    | Marketing           | Good Bot        |
| 3965                    | Marketing           | Good Bot        |
| 3966                    | Marketing           | Good Bot        |
| 3967                    | Marketing           | Good Bot        |
| 3968                    | Marketing           | Good Bot        |
| 3969                    | Marketing           | Good Bot        |
| 3970                    | Search Engine       | Good Bot        |
| 3971                    | Screenshot Creator  | Good Bot        |
| 3972                    | Screenshot Creator  | Good Bot        |
| 3973                    | Search Engine       | Good Bot        |
| 3974                    | Search Engine       | Good Bot        |
| 3975                    | Search Engine       | Good Bot        |
| 3976                    | Search Engine       | Good Bot        |
| 3977                    | Search Engine       | Good Bot        |
| 3978                    | Screenshot Creator  | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3979                    | Search Engine       | Good Bot        |
| 3980                    | Screenshot Creator  | Good Bot        |
| 3981                    | Search Engine       | Good Bot        |
| 3982                    | Search Engine       | Good Bot        |
| 3983                    | Search Engine       | Good Bot        |
| 3984                    | Search Engine       | Good Bot        |
| 3985                    | Search Engine       | Good Bot        |
| 3986                    | Search Engine       | Good Bot        |
| 3987                    | Screenshot Creator  | Good Bot        |
| 3988                    | Search Engine       | Good Bot        |
| 3989                    | Search Engine       | Good Bot        |
| 3990                    | Search Engine       | Good Bot        |
| 3991                    | Search Engine       | Good Bot        |
| 3992                    | Search Engine       | Good Bot        |
| 3993                    | Search Engine       | Good Bot        |
| 3994                    | Search Engine       | Good Bot        |
| 3995                    | Search Engine       | Good Bot        |
| 3996                    | Search Engine       | Good Bot        |
| 3997                    | Search Engine       | Good Bot        |
| 3998                    | Search Engine       | Good Bot        |
| 3999                    | Search Engine       | Good Bot        |
| 4000                    | Screenshot Creator  | Good Bot        |
| 4001                    | Search Engine       | Good Bot        |
| 4002                    | Search Engine       | Good Bot        |
| 4003                    | Search Engine       | Good Bot        |
| 4004                    | Search Engine       | Good Bot        |
| 4005                    | Screenshot Creator  | Good Bot        |
| 4006                    | Crawler             | Good Bot        |
| 4007                    | Marketing           | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4008                    | Marketing             | Good Bot        |
| 4011                    | Tool                  | Good Bot        |
| 4012                    | Crawler               | Good Bot        |
| 4013                    | Search Engine         | Good Bot        |
| 4014                    | Tool                  | Good Bot        |
| 4015                    | Crawler               | Good Bot        |
| 4016                    | Crawler               | Good Bot        |
| 4017                    | Tool                  | Good Bot        |
| 4018                    | Tool                  | Good Bot        |
| 4019                    | Tool                  | Good Bot        |
| 4020                    | Tool                  | Good Bot        |
| 4021                    | Marketing             | Good Bot        |
| 4024                    | Tool                  | Good Bot        |
| 4025                    | Search Engine         | Good Bot        |
| 4026                    | Search Engine         | Good Bot        |
| 4028                    | Marketing             | Good Bot        |
| 4029                    | Tool                  | Good Bot        |
| 4030                    | Scraper               | Good Bot        |
| 4031                    | Scraper               | Good Bot        |
| 4035                    | Marketing             | Good Bot        |
| 4037                    | Vulnerability Scanner | Good Bot        |
| 4042                    | Crawler               | Good Bot        |
| 4043                    | Screenshot Creator    | Good Bot        |
| 4048                    | Feed Fetcher          | Good Bot        |
| 4052                    | Tool                  | Good Bot        |
| 4055                    | Uncategorized         | Good Bot        |
| 4056                    | Marketing             | Good Bot        |
| 4057                    | Screenshot Creator    | Good Bot        |
| 4058                    | Crawler               | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4060                    | Search Engine       | Good Bot        |
| 4061                    | Search Engine       | Good Bot        |
| 4062                    | Search Engine       | Good Bot        |
| 4063                    | Search Engine       | Good Bot        |
| 4065                    | Scraper             | Good Bot        |
| 4066                    | Marketing           | Good Bot        |
| 4067                    | Marketing           | Good Bot        |
| 4071                    | Tool                | Good Bot        |
| 4076                    | Marketing           | Good Bot        |
| 4078                    | Crawler             | Good Bot        |
| 4079                    | Crawler             | Good Bot        |
| 4081                    | Search Engine       | Good Bot        |
| 4082                    | Tool                | Good Bot        |
| 4085                    | Tool                | Good Bot        |
| 4086                    | Tool                | Good Bot        |
| 4090                    | Tool                | Good Bot        |
| 4091                    | Tool                | Good Bot        |
| 4092                    | Tool                | Good Bot        |
| 4093                    | Tool                | Good Bot        |
| 4094                    | Uncategorized       | Good Bot        |
| 4095                    | Site Monitor        | Good Bot        |
| 4096                    | Site Monitor        | Good Bot        |
| 4097                    | Site Monitor        | Good Bot        |
| 4098                    | Crawler             | Good Bot        |
| 4099                    | Search Engine       | Good Bot        |
| 4100                    | Search Engine       | Good Bot        |
| 4101                    | Search Engine       | Good Bot        |
| 4102                    | Search Engine       | Good Bot        |
| 4103                    | Marketing           | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4104                    | Marketing             | Good Bot        |
| 4105                    | Marketing             | Good Bot        |
| 4106                    | Marketing             | Good Bot        |
| 4107                    | Marketing             | Good Bot        |
| 4108                    | Marketing             | Good Bot        |
| 4109                    | Search Engine         | Good Bot        |
| 4110                    | Crawler               | Good Bot        |
| 4111                    | Crawler               | Good Bot        |
| 4112                    | Crawler               | Good Bot        |
| 4113                    | Vulnerability Scanner | Good Bot        |
| 4114                    | Crawler               | Good Bot        |
| 4115                    | Tool                  | Good Bot        |
| 4120                    | Marketing             | Good Bot        |
| 4121                    | Marketing             | Good Bot        |
| 4122                    | Marketing             | Good Bot        |
| 4123                    | Marketing             | Good Bot        |
| 4124                    | Marketing             | Good Bot        |
| 4125                    | Marketing             | Good Bot        |
| 4126                    | Marketing             | Good Bot        |
| 4127                    | Marketing             | Good Bot        |
| 4128                    | Marketing             | Good Bot        |
| 4129                    | Marketing             | Good Bot        |
| 4130                    | Marketing             | Good Bot        |
| 4131                    | Tool                  | Good Bot        |
| 4132                    | Marketing             | Good Bot        |
| 4133                    | Marketing             | Good Bot        |
| 4134                    | Tool                  | Good Bot        |
| 4135                    | Marketing             | Good Bot        |
| 4136                    | Marketing             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4137                    | Marketing           | Good Bot        |
| 4138                    | Marketing           | Good Bot        |
| 4139                    | Marketing           | Good Bot        |
| 4140                    | Marketing           | Good Bot        |
| 4141                    | Marketing           | Good Bot        |
| 4142                    | Marketing           | Good Bot        |
| 4143                    | Marketing           | Good Bot        |
| 4144                    | Marketing           | Good Bot        |
| 4147                    | Search Engine       | Good Bot        |
| 4148                    | Search Engine       | Good Bot        |
| 4149                    | Search Engine       | Good Bot        |
| 4150                    | Search Engine       | Good Bot        |
| 4151                    | Search Engine       | Good Bot        |
| 4152                    | Search Engine       | Good Bot        |
| 4153                    | Search Engine       | Good Bot        |
| 4154                    | Search Engine       | Good Bot        |
| 4155                    | Search Engine       | Good Bot        |
| 4156                    | Screenshot Creator  | Good Bot        |
| 4157                    | Search Engine       | Good Bot        |
| 4158                    | Search Engine       | Good Bot        |
| 4159                    | Search Engine       | Good Bot        |
| 4160                    | Screenshot Creator  | Good Bot        |
| 4161                    | Search Engine       | Good Bot        |
| 4162                    | Search Engine       | Good Bot        |
| 4163                    | Tool                | Good Bot        |
| 4164                    | Search Engine       | Good Bot        |
| 4168                    | Speed Tester        | Good Bot        |
| 4170                    | Tool                | Good Bot        |
| 4172                    | Crawler             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4173                    | Tool                  | Good Bot        |
| 4174                    | Crawler               | Good Bot        |
| 4175                    | Crawler               | Good Bot        |
| 4176                    | Tool                  | Good Bot        |
| 4177                    | Search Engine         | Good Bot        |
| 4178                    | Tool                  | Good Bot        |
| 4179                    | Crawler               | Good Bot        |
| 4180                    | Tool                  | Good Bot        |
| 4181                    | Site Monitor          | Good Bot        |
| 4182                    | Site Monitor          | Good Bot        |
| 4183                    | Site Monitor          | Good Bot        |
| 4184                    | Site Monitor          | Good Bot        |
| 4185                    | Search Engine         | Good Bot        |
| 4186                    | Tool                  | Good Bot        |
| 4187                    | Tool                  | Good Bot        |
| 4190                    | Search Engine         | Good Bot        |
| 4191                    | Search Engine         | Good Bot        |
| 4192                    | Search Engine         | Good Bot        |
| 4193                    | Search Engine         | Good Bot        |
| 4194                    | Tool                  | Good Bot        |
| 4196                    | Tool                  | Good Bot        |
| 4197                    | Tool                  | Good Bot        |
| 4198                    | Marketing             | Good Bot        |
| 4199                    | Marketing             | Good Bot        |
| 4200                    | Vulnerability Scanner | Good Bot        |
| 4201                    | Tool                  | Good Bot        |
| 4202                    | Tool                  | Good Bot        |
| 4205                    | Search Engine         | Good Bot        |
| 4206                    | Marketing             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4207                    | Marketing           | Good Bot        |
| 4208                    | Search Engine       | Good Bot        |
| 4209                    | Search Engine       | Good Bot        |
| 4210                    | Speed Tester        | Good Bot        |
| 4211                    | Tool                | Good Bot        |
| 4212                    | Feed Fetcher        | Good Bot        |
| 4213                    | Feed Fetcher        | Good Bot        |
| 4215                    | Tool                | Good Bot        |
| 4216                    | Tool                | Good Bot        |
| 4219                    | Marketing           | Good Bot        |
| 4220                    | Tool                | Good Bot        |
| 4222                    | Site Monitor        | Good Bot        |
| 4223                    | Marketing           | Good Bot        |
| 4224                    | Search Engine       | Good Bot        |
| 4225                    | Search Engine       | Good Bot        |
| 4226                    | Search Engine       | Good Bot        |
| 4227                    | Marketing           | Good Bot        |
| 4228                    | Marketing           | Good Bot        |
| 4229                    | Tool                | Good Bot        |
| 4231                    | Screenshot Creator  | Good Bot        |
| 4232                    | Tool                | Good Bot        |
| 4233                    | Site Monitor        | Good Bot        |
| 4234                    | Site Monitor        | Good Bot        |
| 4235                    | Site Monitor        | Good Bot        |
| 4236                    | Site Monitor        | Good Bot        |
| 4237                    | Site Monitor        | Good Bot        |
| 4238                    | Site Monitor        | Good Bot        |
| 4240                    | Marketing           | Good Bot        |
| 4241                    | Marketing           | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4242                    | Marketing           | Good Bot        |
| 4243                    | Marketing           | Good Bot        |
| 4244                    | Marketing           | Good Bot        |
| 4245                    | Marketing           | Good Bot        |
| 4246                    | Marketing           | Good Bot        |
| 4247                    | Search Engine       | Good Bot        |
| 4248                    | Search Engine       | Good Bot        |
| 4249                    | Screenshot Creator  | Good Bot        |
| 4250                    | Search Engine       | Good Bot        |
| 4251                    | Search Engine       | Good Bot        |
| 4252                    | Crawler             | Good Bot        |
| 4253                    | Crawler             | Good Bot        |
| 4254                    | Crawler             | Good Bot        |
| 4255                    | Tool                | Good Bot        |
| 4256                    | Uncategorized       | Good Bot        |
| 4257                    | Tool                | Good Bot        |
| 4258                    | Crawler             | Good Bot        |
| 4259                    | Crawler             | Good Bot        |
| 4260                    | Tool                | Good Bot        |
| 4261                    | Tool                | Good Bot        |
| 4262                    | Tool                | Good Bot        |
| 4265                    | Search Engine       | Good Bot        |
| 4266                    | Uncategorized       | Good Bot        |
| 4267                    | Tool                | Good Bot        |
| 4268                    | Tool                | Good Bot        |
| 4269                    | Search Engine       | Good Bot        |
| 4270                    | Search Engine       | Good Bot        |
| 4271                    | Search Engine       | Good Bot        |
| 4272                    | Search Engine       | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4273                    | Search Engine       | Good Bot        |
| 4274                    | Search Engine       | Good Bot        |
| 4275                    | Search Engine       | Good Bot        |
| 4279                    | Marketing           | Good Bot        |
| 4280                    | Crawler             | Good Bot        |
| 4282                    | Marketing           | Good Bot        |
| 4283                    | Marketing           | Good Bot        |
| 4284                    | Marketing           | Good Bot        |
| 4285                    | Marketing           | Good Bot        |
| 4286                    | Marketing           | Good Bot        |
| 4287                    | Marketing           | Good Bot        |
| 4288                    | Marketing           | Good Bot        |
| 4289                    | Marketing           | Good Bot        |
| 4290                    | Marketing           | Good Bot        |
| 4291                    | Marketing           | Good Bot        |
| 4292                    | Marketing           | Good Bot        |
| 4293                    | Marketing           | Good Bot        |
| 4294                    | Marketing           | Good Bot        |
| 4295                    | Search Engine       | Good Bot        |
| 4296                    | Search Engine       | Good Bot        |
| 4297                    | Search Engine       | Good Bot        |
| 4298                    | Search Engine       | Good Bot        |
| 4299                    | Search Engine       | Good Bot        |
| 4300                    | Search Engine       | Good Bot        |
| 4301                    | Search Engine       | Good Bot        |
| 4302                    | Search Engine       | Good Bot        |
| 4303                    | Search Engine       | Good Bot        |
| 4304                    | Search Engine       | Good Bot        |
| 4305                    | Search Engine       | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4306                    | Screenshot Creator  | Good Bot        |
| 4307                    | Search Engine       | Good Bot        |
| 4308                    | Search Engine       | Good Bot        |
| 4309                    | Search Engine       | Good Bot        |
| 4310                    | Search Engine       | Good Bot        |
| 4311                    | Screenshot Creator  | Good Bot        |
| 4312                    | Search Engine       | Good Bot        |
| 4313                    | Search Engine       | Good Bot        |
| 4314                    | Search Engine       | Good Bot        |
| 4315                    | Search Engine       | Good Bot        |
| 4316                    | Search Engine       | Good Bot        |
| 4317                    | Search Engine       | Good Bot        |
| 4318                    | Screenshot Creator  | Good Bot        |
| 4319                    | Screenshot Creator  | Good Bot        |
| 4321                    | Uncategorized       | Good Bot        |
| 4322                    | Crawler             | Good Bot        |
| 4323                    | Tool                | Good Bot        |
| 4324                    | Tool                | Good Bot        |
| 4325                    | Tool                | Good Bot        |
| 4328                    | Marketing           | Good Bot        |
| 4330                    | Site Monitor        | Good Bot        |
| 4331                    | Search Engine       | Good Bot        |
| 4332                    | Search Engine       | Good Bot        |
| 4335                    | Marketing           | Good Bot        |
| 4336                    | Marketing           | Good Bot        |
| 4337                    | Tool                | Good Bot        |
| 4338                    | Tool                | Good Bot        |
| 4339                    | Tool                | Good Bot        |
| 4340                    | Crawler             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4341                    | Crawler               | Good Bot        |
| 4342                    | Vulnerability Scanner | Good Bot        |
| 4343                    | Vulnerability Scanner | Good Bot        |
| 4344                    | Scraper               | Good Bot        |
| 4345                    | Marketing             | Good Bot        |
| 4346                    | Marketing             | Good Bot        |
| 4347                    | Marketing             | Good Bot        |
| 4348                    | Marketing             | Good Bot        |
| 4349                    | Marketing             | Good Bot        |
| 4350                    | Marketing             | Good Bot        |
| 4351                    | Marketing             | Good Bot        |
| 4352                    | Marketing             | Good Bot        |
| 4353                    | Marketing             | Good Bot        |
| 4354                    | Marketing             | Good Bot        |
| 4355                    | Search Engine         | Good Bot        |
| 4356                    | Search Engine         | Good Bot        |
| 4357                    | Search Engine         | Good Bot        |
| 4358                    | Search Engine         | Good Bot        |
| 4359                    | Search Engine         | Good Bot        |
| 4360                    | Search Engine         | Good Bot        |
| 4361                    | Search Engine         | Good Bot        |
| 4362                    | Search Engine         | Good Bot        |
| 4363                    | Search Engine         | Good Bot        |
| 4364                    | Search Engine         | Good Bot        |
| 4365                    | Screenshot Creator    | Good Bot        |
| 4366                    | Search Engine         | Good Bot        |
| 4367                    | Search Engine         | Good Bot        |
| 4368                    | Search Engine         | Good Bot        |
| 4369                    | Search Engine         | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4370                    | Screenshot Creator  | Good Bot        |
| 4371                    | Search Engine       | Good Bot        |
| 4372                    | Search Engine       | Good Bot        |
| 4373                    | Search Engine       | Good Bot        |
| 4374                    | Search Engine       | Good Bot        |
| 4375                    | Search Engine       | Good Bot        |
| 4376                    | Screenshot Creator  | Good Bot        |
| 4377                    | Crawler             | Good Bot        |
| 4378                    | Crawler             | Good Bot        |
| 4379                    | Search Engine       | Good Bot        |
| 4380                    | Search Engine       | Good Bot        |
| 4381                    | Search Engine       | Good Bot        |
| 4382                    | Search Engine       | Good Bot        |
| 4383                    | Crawler             | Good Bot        |
| 4384                    | Search Engine       | Good Bot        |
| 4385                    | Tool                | Good Bot        |
| 4386                    | Uncategorized       | Good Bot        |
| 4387                    | Crawler             | Good Bot        |
| 4388                    | Crawler             | Good Bot        |
| 4389                    | Tool                | Good Bot        |
| 4390                    | Tool                | Good Bot        |
| 4391                    | Tool                | Good Bot        |
| 4392                    | Tool                | Good Bot        |
| 4393                    | Tool                | Good Bot        |
| 4394                    | Uncategorized       | Good Bot        |
| 4395                    | Tool                | Good Bot        |
| 4396                    | Site Monitor        | Good Bot        |
| 4397                    | Site Monitor        | Good Bot        |
| 4404                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4405                    | Search Engine       | Good Bot        |
| 4406                    | Search Engine       | Good Bot        |
| 4407                    | Uncategorized       | Good Bot        |

---

## Bot signature update for October 2021

May 2, 2023

New signatures added and some of existing bot signatures are updated. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 10 applicable for NetScaler NetScaler platforms with 13.0 76.31 or later builds.

### Updated bot signatures

Following is a list of bot signature rule IDs, category, and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 71                      | Crawler             | Good Bot        |
| 74                      | Crawler             | Good Bot        |
| 75                      | Crawler             | Good Bot        |
| 372                     | Scrapper            | Good Bot        |
| 373                     | Scrapper            | Good Bot        |
| 374                     | Scrapper            | Good Bot        |
| 375                     | Scrapper            | Good Bot        |
| 376                     | Scrapper            | Good Bot        |
| 377                     | Scrapper            | Good Bot        |
| 378                     | Scrapper            | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 379                     | Scraper             | Good Bot        |
| 380                     | Scraper             | Good Bot        |
| 381                     | Scraper             | Good Bot        |
| 382                     | Scraper             | Good Bot        |
| 383                     | Scraper             | Good Bot        |
| 384                     | Scraper             | Good Bot        |
| 385                     | Scraper             | Good Bot        |
| 386                     | Scraper             | Good Bot        |
| 387                     | Scraper             | Good Bot        |
| 389                     | Scraper             | Good Bot        |
| 390                     | Scraper             | Good Bot        |
| 391                     | Scraper             | Good Bot        |
| 639                     | Search Engine       | Good Bot        |
| 702                     | Search Engine       | Good Bot        |
| 703                     | Search Engine       | Good Bot        |
| 1173                    | Tool                | Good Bot        |
| 1174                    | Marketing           | Good Bot        |
| 1176                    | Search Engine       | Good Bot        |
| 1178                    | Speed Tester        | Good Bot        |
| 1185                    | Screenshot Creator  | Good Bot        |
| 1209                    | Uncategorized       | Good Bot        |
| 1531                    | Feed Fetcher        | Good Bot        |
| 2586                    | Uncategorized       | Good Bot        |
| 2674                    | Tool                | Good Bot        |
| 2756                    | Tool                | Good Bot        |
| 2758                    | Uncategorized       | Good Bot        |
| 2759                    | Tool                | Good Bot        |
| 2784                    | Tool                | Good Bot        |
| 2952                    | Tool                | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3163                    | Tool                | Good Bot        |
| 3554                    | Tool                | Good Bot        |
| 3782                    | Marketing           | Good Bot        |
| 3788                    | Tool                | Good Bot        |
| 3789                    | Tool                | Good Bot        |
| 3797                    | Marketing           | Good Bot        |
| 3798                    | Marketing           | Good Bot        |
| 3799                    | Marketing           | Good Bot        |
| 3800                    | Marketing           | Good Bot        |
| 3801                    | Marketing           | Good Bot        |
| 3802                    | Screenshot Creator  | Good Bot        |
| 3803                    | Search Engine       | Good Bot        |
| 3804                    | Screenshot Creator  | Good Bot        |
| 3805                    | Search Engine       | Good Bot        |
| 3861                    | Marketing           | Good Bot        |
| 3862                    | Marketing           | Good Bot        |
| 3863                    | Marketing           | Good Bot        |
| 3864                    | Marketing           | Good Bot        |
| 3865                    | Marketing           | Good Bot        |
| 3866                    | Marketing           | Good Bot        |
| 3867                    | Marketing           | Good Bot        |
| 3868                    | Marketing           | Good Bot        |
| 3869                    | Tool                | Good Bot        |
| 3871                    | Marketing           | Good Bot        |
| 3872                    | Marketing           | Good Bot        |
| 3873                    | Search Engine       | Good Bot        |
| 3874                    | Search Engine       | Good Bot        |
| 3875                    | Search Engine       | Good Bot        |
| 3876                    | Search Engine       | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3877                    | Screenshot Creator  | Good Bot        |
| 3878                    | Search Engine       | Good Bot        |
| 3879                    | Search Engine       | Good Bot        |
| 3880                    | Screenshot Creator  | Good Bot        |
| 3881                    | Screenshot Creator  | Good Bot        |
| 3882                    | Search Engine       | Good Bot        |
| 3883                    | Search Engine       | Good Bot        |
| 3884                    | Search Engine       | Good Bot        |
| 3885                    | Search Engine       | Good Bot        |
| 3963                    | Marketing           | Good Bot        |
| 4040                    | Crawler             | Good Bot        |
| 4041                    | Tool                | Good Bot        |
| 4120                    | Marketing           | Good Bot        |
| 4122                    | Marketing           | Good Bot        |
| 4123                    | Marketing           | Good Bot        |
| 4124                    | Marketing           | Good Bot        |
| 4125                    | Marketing           | Good Bot        |
| 4133                    | Marketing           | Good Bot        |
| 4134                    | Tool                | Good Bot        |
| 4135                    | Marketing           | Good Bot        |
| 4136                    | Marketing           | Good Bot        |
| 4137                    | Marketing           | Good Bot        |
| 4138                    | Marketing           | Good Bot        |
| 4139                    | Marketing           | Good Bot        |
| 4140                    | Marketing           | Good Bot        |
| 4141                    | Marketing           | Good Bot        |
| 4142                    | Marketing           | Good Bot        |
| 4143                    | Marketing           | Good Bot        |
| 4144                    | Marketing           | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4145                    | Search Engine       | Good Bot        |
| 4146                    | Search Engine       | Good Bot        |
| 4147                    | Search Engine       | Good Bot        |
| 4148                    | Search Engine       | Good Bot        |
| 4149                    | Search Engine       | Good Bot        |
| 4150                    | Search Engine       | Good Bot        |
| 4151                    | Search Engine       | Good Bot        |
| 4152                    | Search Engine       | Good Bot        |
| 4153                    | Search Engine       | Good Bot        |
| 4154                    | Search Engine       | Good Bot        |
| 4155                    | Search Engine       | Good Bot        |
| 4156                    | Screenshot Creator  | Good Bot        |
| 4157                    | Search Engine       | Good Bot        |
| 4158                    | Search Engine       | Good Bot        |
| 4159                    | Search Engine       | Good Bot        |
| 4160                    | Screenshot Creator  | Good Bot        |
| 4161                    | Search Engine       | Good Bot        |
| 4162                    | Search Engine       | Good Bot        |
| 4163                    | Tool                | Good Bot        |
| 4164                    | Search Engine       | Good Bot        |
| 4209                    | Search Engine       | Good Bot        |
| 4240                    | Marketing           | Good Bot        |
| 4241                    | Marketing           | Good Bot        |
| 4248                    | Search Engine       | Good Bot        |
| 4249                    | Screenshot Creator  | Good Bot        |
| 4250                    | Search Engine       | Good Bot        |
| 4251                    | Search Engine       | Good Bot        |
| 4282                    | Marketing           | Good Bot        |
| 4283                    | Marketing           | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4284                    | Marketing           | Good Bot        |
| 4285                    | Marketing           | Good Bot        |
| 4286                    | Marketing           | Good Bot        |
| 4287                    | Marketing           | Good Bot        |
| 4288                    | Marketing           | Good Bot        |
| 4289                    | Marketing           | Good Bot        |
| 4290                    | Marketing           | Good Bot        |
| 4291                    | Marketing           | Good Bot        |
| 4292                    | Marketing           | Good Bot        |
| 4293                    | Marketing           | Good Bot        |
| 4294                    | Marketing           | Good Bot        |
| 4295                    | Search Engine       | Good Bot        |
| 4296                    | Search Engine       | Good Bot        |
| 4297                    | Search Engine       | Good Bot        |
| 4298                    | Search Engine       | Good Bot        |
| 4299                    | Search Engine       | Good Bot        |
| 4300                    | Search Engine       | Good Bot        |
| 4301                    | Search Engine       | Good Bot        |
| 4302                    | Search Engine       | Good Bot        |
| 4303                    | Search Engine       | Good Bot        |
| 4304                    | Search Engine       | Good Bot        |
| 4305                    | Search Engine       | Good Bot        |
| 4306                    | Screenshot Creator  | Good Bot        |
| 4307                    | Search Engine       | Good Bot        |
| 4308                    | Search Engine       | Good Bot        |
| 4309                    | Search Engine       | Good Bot        |
| 4310                    | Search Engine       | Good Bot        |
| 4311                    | Screenshot Creator  | Good Bot        |
| 4312                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4313                    | Search Engine       | Good Bot        |
| 4314                    | Search Engine       | Good Bot        |
| 4315                    | Search Engine       | Good Bot        |
| 4316                    | Search Engine       | Good Bot        |
| 4317                    | Search Engine       | Good Bot        |
| 4318                    | Screenshot Creator  | Good Bot        |
| 4319                    | Screenshot Creator  | Good Bot        |
| 4337                    | Tool                | Good Bot        |
| 4338                    | Tool                | Good Bot        |
| 4345                    | Marketing           | Good Bot        |
| 4346                    | Marketing           | Good Bot        |
| 4347                    | Marketing           | Good Bot        |
| 4348                    | Marketing           | Good Bot        |
| 4349                    | Marketing           | Good Bot        |
| 4350                    | Marketing           | Good Bot        |
| 4351                    | Marketing           | Good Bot        |
| 4352                    | Marketing           | Good Bot        |
| 4353                    | Marketing           | Good Bot        |
| 4354                    | Marketing           | Good Bot        |
| 4355                    | Search Engine       | Good Bot        |
| 4356                    | Search Engine       | Good Bot        |
| 4357                    | Search Engine       | Good Bot        |
| 4358                    | Search Engine       | Good Bot        |
| 4359                    | Search Engine       | Good Bot        |
| 4360                    | Search Engine       | Good Bot        |
| 4361                    | Search Engine       | Good Bot        |
| 4362                    | Search Engine       | Good Bot        |
| 4363                    | Search Engine       | Good Bot        |
| 4364                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4365                    | Screenshot Creator  | Good Bot        |
| 4366                    | Search Engine       | Good Bot        |
| 4367                    | Search Engine       | Good Bot        |
| 4368                    | Search Engine       | Good Bot        |
| 4369                    | Search Engine       | Good Bot        |
| 4370                    | Screenshot Creator  | Good Bot        |
| 4371                    | Search Engine       | Good Bot        |
| 4372                    | Search Engine       | Good Bot        |
| 4373                    | Search Engine       | Good Bot        |
| 4374                    | Search Engine       | Good Bot        |
| 4375                    | Search Engine       | Good Bot        |
| 4376                    | Screenshot Creator  | Good Bot        |

---

## **Bot signature update for November 2021**

May 2, 2023

New signatures added and some of existing bot signatures are updated. You can download and configure these signature rules to protect your appliance from bot attacks.

### **Bot signature version**

Signature version 11 applicable for NetScaler NetScaler platforms with 13.0 76.31 or later builds.

### **New bot signatures**

Following is a list of bot signature rule IDs, category, and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4408                    | Scrapper            | Good Bot        |

---

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4409                    | Crawler             | Bad Bot         |
| 4411                    | Marketing           | Good Bot        |
| 4412                    | Marketing           | Good Bot        |
| 4413                    | Marketing           | Good Bot        |
| 4421                    | Screenshot Creator  | Good Bot        |
| 4422                    | Crawler             | Good Bot        |
| 4423                    | Tool                | Bad Bot         |
| 4424                    | Site Monitor        | Good Bot        |
| 4425                    | Marketing           | Good Bot        |
| 4426                    | Crawler             | Bad Bot         |
| 4427                    | Scraper             | Good Bot        |
| 4428                    | Scraper             | Good Bot        |
| 4429                    | Screenshot Creator  | Good Bot        |
| 4430                    | Virus Scanner       | Good Bot        |
| 4431                    | Site Monitor        | Good Bot        |
| 4432                    | Tool                | Good Bot        |
| 4433                    | Search Engine       | Good Bot        |
| 4434                    | Search Engine       | Good Bot        |
| 4435                    | Search Engine       | Good Bot        |
| 4436                    | Marketing           | Good Bot        |
| 4437                    | Marketing           | Good Bot        |
| 4438                    | Scraper             | Good Bot        |
| 4439                    | Scraper             | Good Bot        |
| 4440                    | Scraper             | Good Bot        |
| 4441                    | Feed Fetcher        | Good Bot        |
| 4442                    | Marketing           | Good Bot        |
| 4443                    | Scraper             | Good Bot        |
| 4445                    | Uncategorized       | Bad Bot         |
| 4446                    | Scraper             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4450                    | Screenshot Creator  | Good Bot        |
| 4451                    | Speed Tester        | Good Bot        |
| 4452                    | Search Engine       | Good Bot        |
| 4466                    | Uncategorized       | Good Bot        |
| 4467                    | Screenshot Creator  | Good Bot        |
| 4468                    | Tool                | Good Bot        |
| 4469                    | Uncategorized       | Good Bot        |
| 4470                    | Tool                | Good Bot        |
| 4472                    | Scraper             | Good Bot        |
| 4473                    | Uncategorized       | Good Bot        |
| 4474                    | Marketing           | Good Bot        |
| 4476                    | Crawler             | Good Bot        |
| 4477                    | Crawler             | Good Bot        |
| 4478                    | Crawler             | Good Bot        |
| 4479                    | Crawler             | Good Bot        |
| 4480                    | Crawler             | Good Bot        |
| 4481                    | Crawler             | Good Bot        |
| 4482                    | Crawler             | Good Bot        |
| 4483                    | Crawler             | Good Bot        |
| 4484                    | Crawler             | Good Bot        |
| 4485                    | Crawler             | Good Bot        |
| 4486                    | Scraper             | Good Bot        |
| 4487                    | Scraper             | Good Bot        |
| 4488                    | Scraper             | Good Bot        |
| 4489                    | Search Engine       | Good Bot        |
| 4491                    | Tool                | Good Bot        |
| 4492                    | Uncategorized       | Bad Bot         |
| 4493                    | Crawler             | Good Bot        |
| 4494                    | Tool                | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4496                    | Tool                | Good Bot        |
| 4497                    | Crawler             | Good Bot        |
| 4498                    | Uncategorized       | Bad Bot         |
| 4499                    | Uncategorized       | Bad Bot         |
| 4501                    | Marketing           | Good Bot        |
| 4502                    | Marketing           | Good Bot        |
| 4503                    | Marketing           | Good Bot        |
| 4508                    | Uncategorized       | Good Bot        |
| 4509                    | Uncategorized       | Good Bot        |
| 4510                    | Uncategorized       | Good Bot        |
| 4511                    | Uncategorized       | Good Bot        |
| 4512                    | Tool                | Good Bot        |
| 4513                    | Tool                | Good Bot        |
| 4514                    | Tool                | Good Bot        |
| 4515                    | Tool                | Good Bot        |
| 4516                    | Uncategorized       | Good Bot        |
| 4518                    | Scraper             | Bad Bot         |
| 4519                    | Screenshot Creator  | Good Bot        |
| 4520                    | Marketing           | Good Bot        |
| 4521                    | Uncategorized       | Good Bot        |
| 4522                    | Tool                | Good Bot        |
| 4523                    | Uncategorized       | Bad Bot         |
| 4524                    | Uncategorized       | Bad Bot         |
| 4525                    | Crawler             | Good Bot        |
| 4526                    | Crawler             | Good Bot        |
| 4527                    | Crawler             | Good Bot        |
| 4528                    | Crawler             | Good Bot        |
| 4529                    | Crawler             | Good Bot        |
| 4530                    | Uncategorized       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4531                    | Marketing           | Good Bot        |
| 4532                    | Marketing           | Good Bot        |
| 4533                    | Marketing           | Good Bot        |
| 4534                    | Marketing           | Good Bot        |
| 4535                    | Marketing           | Good Bot        |
| 4541                    | Marketing           | Good Bot        |
| 4552                    | Uncategorized       | Good Bot        |
| 4553                    | Tool                | Bad Bot         |
| 4554                    | Tool                | Bad Bot         |
| 4555                    | Tool                | Good Bot        |
| 4556                    | Tool                | Good Bot        |
| 4558                    | Scrapper            | Good Bot        |
| 4559                    | Crawler             | Good Bot        |
| 4560                    | Crawler             | Good Bot        |
| 4561                    | Site Monitor        | Good Bot        |
| 4562                    | Search Engine       | Good Bot        |
| 4563                    | Search Engine       | Good Bot        |
| 1000000                 | Browser             | Good Bot        |
| 1000001                 | Scrapper            | Bad Bot         |
| 1000002                 | Application         | Bad Bot         |
| 1000003                 | Browser             | Good Bot        |
| 1000004                 | Scrapper            | Good Bot        |
| 1000005                 | Scrapper            | Good Bot        |
| 1000006                 | Crawler             | Bad Bot         |
| 1000007                 | Browser             | Bad Bot         |
| 1000008                 | Uncategorized       | Bad Bot         |
| 1000009                 | Browser             | Good Bot        |
| 1000010                 | Scrapper            | Bad Bot         |
| 1000011                 | Browser             | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000012                 | Browser             | Good Bot        |
| 1000013                 | Browser             | Bad Bot         |
| 1000014                 | Scrapper            | Good Bot        |
| 1000015                 | Scrapper            | Bad Bot         |
| 1000016                 | Scrapper            | Bad Bot         |
| 1000017                 | Browser             | Good Bot        |
| 1000018                 | Browser             | Bad Bot         |
| 1000019                 | Uncategorized       | Bad Bot         |
| 1000020                 | Scrapper            | Good Bot        |
| 1000021                 | Browser             | Bad Bot         |
| 1000022                 | Scrapper            | Good Bot        |
| 1000023                 | Scrapper            | Good Bot        |
| 1000024                 | Crawler             | Good Bot        |
| 1000025                 | Browser             | Bad Bot         |
| 1000026                 | Analyzer            | Good Bot        |
| 1000027                 | Analyzer            | Good Bot        |
| 1000028                 | Analyzer            | Good Bot        |
| 1000029                 | Analyzer            | Good Bot        |
| 1000030                 | Analyzer            | Good Bot        |
| 1000031                 | Browser             | Good Bot        |
| 1000032                 | Analyzer            | Good Bot        |
| 1000033                 | Analyzer            | Good Bot        |
| 1000034                 | Browser             | Bad Bot         |
| 1000035                 | Scrapper            | Good Bot        |
| 1000036                 | Scrapper            | Good Bot        |
| 1000037                 | Analyzer            | Good Bot        |
| 1000038                 | Analyzer            | Good Bot        |
| 1000039                 | Analyzer            | Good Bot        |
| 1000040                 | Analyzer            | Good Bot        |



| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000041                 | Scrapper            | Good Bot        |
| 1000042                 | Analyzer            | Good Bot        |
| 1000043                 | Analyzer            | Good Bot        |
| 1000044                 | Crawler             | Good Bot        |
| 1000045                 | Browser             | Bad Bot         |
| 1000046                 | Browser             | Bad Bot         |
| 1000047                 | Scrapper            | Good Bot        |
| 1000048                 | Browser             | Bad Bot         |
| 1000049                 | Analyzer            | Good Bot        |
| 1000050                 | Browser             | Bad Bot         |
| 1000051                 | Browser             | Good Bot        |
| 1000052                 | Browser             | Bad Bot         |
| 1000053                 | Scrapper            | Good Bot        |
| 1000054                 | Browser             | Good Bot        |
| 1000055                 | Browser             | Good Bot        |
| 1000056                 | Scrapper            | Bad Bot         |
| 1000057                 | Crawler             | Bad Bot         |
| 1000058                 | Scrapper            | Bad Bot         |
| 1000059                 | Analyzer            | Good Bot        |
| 1000060                 | Browser             | Bad Bot         |
| 1000061                 | Browser             | Bad Bot         |
| 1000062                 | Browser             | Bad Bot         |
| 1000063                 | Scrapper            | Bad Bot         |
| 1000064                 | Scrapper            | Bad Bot         |
| 1000065                 | Scrapper            | Bad Bot         |
| 1000066                 | Application         | Bad Bot         |
| 1000067                 | Scrapper            | Bad Bot         |
| 1000068                 | Browser             | Bad Bot         |
| 1000069                 | Scrapper            | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000070                 | Scraper             | Good Bot        |
| 1000071                 | Browser             | Good Bot        |
| 1000072                 | Browser             | Good Bot        |
| 1000073                 | Browser             | Bad Bot         |
| 1000074                 | Browser             | Bad Bot         |
| 1000075                 | Application         | Bad Bot         |
| 1000076                 | Scraper             | Bad Bot         |

---

### Updated bot signatures

Following is a list of bot signature rule IDs, category, and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 2                       | Crawler             | Good Bot        |
| 5                       | Crawler             | Good Bot        |
| 9                       | Crawler             | Good Bot        |
| 30                      | Crawler             | Bad Bot         |
| 45                      | Crawler             | Good Bot        |
| 46                      | Crawler             | Good Bot        |
| 48                      | Crawler             | Good Bot        |
| 52                      | Crawler             | Good Bot        |
| 60                      | Crawler             | Good Bot        |
| 61                      | Crawler             | Good Bot        |
| 63                      | Crawler             | Good Bot        |
| 67                      | Crawler             | Good Bot        |
| 76                      | Crawler             | Good Bot        |
| 78                      | Crawler             | Good Bot        |
| 79                      | Crawler             | Good Bot        |
| 80                      | Crawler             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 81                      | Crawler             | Good Bot        |
| 82                      | Crawler             | Good Bot        |
| 83                      | Crawler             | Good Bot        |
| 84                      | Crawler             | Good Bot        |
| 87                      | Crawler             | Good Bot        |
| 90                      | Crawler             | Good Bot        |
| 95                      | Crawler             | Good Bot        |
| 96                      | Crawler             | Good Bot        |
| 97                      | Crawler             | Good Bot        |
| 100                     | Crawler             | Good Bot        |
| 101                     | Crawler             | Good Bot        |
| 102                     | Crawler             | Good Bot        |
| 103                     | Crawler             | Good Bot        |
| 104                     | Crawler             | Good Bot        |
| 107                     | Crawler             | Good Bot        |
| 108                     | Crawler             | Good Bot        |
| 110                     | Crawler             | Good Bot        |
| 111                     | Crawler             | Good Bot        |
| 114                     | Crawler             | Good Bot        |
| 115                     | Crawler             | Good Bot        |
| 123                     | Crawler             | Good Bot        |
| 135                     | Crawler             | Good Bot        |
| 136                     | Crawler             | Good Bot        |
| 137                     | Crawler             | Good Bot        |
| 140                     | Crawler             | Good Bot        |
| 141                     | Crawler             | Good Bot        |
| 143                     | Crawler             | Good Bot        |
| 144                     | Crawler             | Good Bot        |
| 145                     | Crawler             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 146                     | Crawler             | Good Bot        |
| 147                     | Crawler             | Good Bot        |
| 149                     | Crawler             | Good Bot        |
| 152                     | Crawler             | Good Bot        |
| 155                     | Crawler             | Good Bot        |
| 156                     | Crawler             | Good Bot        |
| 157                     | Crawler             | Good Bot        |
| 158                     | Crawler             | Good Bot        |
| 159                     | Crawler             | Good Bot        |
| 160                     | Crawler             | Good Bot        |
| 161                     | Crawler             | Good Bot        |
| 162                     | Crawler             | Good Bot        |
| 163                     | Crawler             | Good Bot        |
| 164                     | Crawler             | Good Bot        |
| 165                     | Crawler             | Good Bot        |
| 166                     | Crawler             | Good Bot        |
| 167                     | Crawler             | Good Bot        |
| 172                     | Crawler             | Good Bot        |
| 173                     | Crawler             | Good Bot        |
| 174                     | Crawler             | Good Bot        |
| 176                     | Crawler             | Good Bot        |
| 177                     | Crawler             | Good Bot        |
| 180                     | Crawler             | Good Bot        |
| 182                     | Crawler             | Good Bot        |
| 187                     | Crawler             | Good Bot        |
| 197                     | Crawler             | Good Bot        |
| 201                     | Crawler             | Good Bot        |
| 202                     | Crawler             | Good Bot        |
| 203                     | Crawler             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 206                     | Crawler             | Good Bot        |
| 217                     | Feed Fetcher        | Good Bot        |
| 219                     | Feed Fetcher        | Good Bot        |
| 229                     | Scraper             | Good Bot        |
| 235                     | Scraper             | Good Bot        |
| 236                     | Scraper             | Good Bot        |
| 237                     | Scraper             | Good Bot        |
| 248                     | Scraper             | Good Bot        |
| 250                     | Scraper             | Good Bot        |
| 252                     | Scraper             | Good Bot        |
| 260                     | Scraper             | Good Bot        |
| 263                     | Scraper             | Good Bot        |
| 265                     | Scraper             | Good Bot        |
| 267                     | Scraper             | Good Bot        |
| 268                     | Scraper             | Good Bot        |
| 271                     | Scraper             | Good Bot        |
| 272                     | Scraper             | Good Bot        |
| 276                     | Scraper             | Good Bot        |
| 277                     | Scraper             | Good Bot        |
| 278                     | Scraper             | Good Bot        |
| 279                     | Scraper             | Good Bot        |
| 280                     | Scraper             | Good Bot        |
| 281                     | Scraper             | Good Bot        |
| 283                     | Scraper             | Good Bot        |
| 285                     | Scraper             | Good Bot        |
| 286                     | Scraper             | Good Bot        |
| 287                     | Scraper             | Good Bot        |
| 290                     | Scraper             | Good Bot        |
| 292                     | Scraper             | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 293                     | Scraper             | Good Bot        |
| 338                     | Scraper             | Good Bot        |
| 342                     | Scraper             | Good Bot        |
| 343                     | Scraper             | Good Bot        |
| 344                     | Scraper             | Good Bot        |
| 351                     | Scraper             | Good Bot        |
| 352                     | Scraper             | Good Bot        |
| 353                     | Scraper             | Good Bot        |
| 355                     | Scraper             | Good Bot        |
| 357                     | Scraper             | Good Bot        |
| 360                     | Scraper             | Good Bot        |
| 362                     | Scraper             | Good Bot        |
| 366                     | Scraper             | Good Bot        |
| 370                     | Scraper             | Good Bot        |
| 371                     | Scraper             | Good Bot        |
| 392                     | Scraper             | Good Bot        |
| 393                     | Scraper             | Good Bot        |
| 394                     | Scraper             | Good Bot        |
| 396                     | Scraper             | Good Bot        |
| 397                     | Scraper             | Good Bot        |
| 414                     | Scraper             | Good Bot        |
| 418                     | Scraper             | Good Bot        |
| 419                     | Scraper             | Good Bot        |
| 421                     | Scraper             | Good Bot        |
| 422                     | Scraper             | Good Bot        |
| 423                     | Scraper             | Good Bot        |
| 424                     | Scraper             | Good Bot        |
| 425                     | Scraper             | Good Bot        |
| 426                     | Scraper             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 427                     | Scraper             | Good Bot        |
| 428                     | Scraper             | Good Bot        |
| 430                     | Scraper             | Good Bot        |
| 432                     | Scraper             | Good Bot        |
| 433                     | Scraper             | Good Bot        |
| 434                     | Scraper             | Good Bot        |
| 435                     | Scraper             | Good Bot        |
| 441                     | Scraper             | Good Bot        |
| 445                     | Scraper             | Good Bot        |
| 446                     | Scraper             | Good Bot        |
| 451                     | Scraper             | Good Bot        |
| 452                     | Scraper             | Good Bot        |
| 454                     | Scraper             | Good Bot        |
| 455                     | Scraper             | Good Bot        |
| 456                     | Scraper             | Good Bot        |
| 457                     | Scraper             | Good Bot        |
| 458                     | Scraper             | Good Bot        |
| 461                     | Scraper             | Good Bot        |
| 465                     | Scraper             | Good Bot        |
| 466                     | Scraper             | Good Bot        |
| 469                     | Scraper             | Good Bot        |
| 473                     | Scraper             | Good Bot        |
| 474                     | Scraper             | Good Bot        |
| 476                     | Scraper             | Good Bot        |
| 477                     | Scraper             | Good Bot        |
| 484                     | Scraper             | Good Bot        |
| 485                     | Scraper             | Good Bot        |
| 487                     | Scraper             | Good Bot        |
| 488                     | Scraper             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 489                     | Scraper             | Good Bot        |
| 490                     | Scraper             | Good Bot        |
| 493                     | Scraper             | Good Bot        |
| 494                     | Scraper             | Good Bot        |
| 495                     | Scraper             | Good Bot        |
| 497                     | Scraper             | Good Bot        |
| 498                     | Scraper             | Good Bot        |
| 499                     | Scraper             | Good Bot        |
| 500                     | Scraper             | Good Bot        |
| 505                     | Scraper             | Good Bot        |
| 506                     | Scraper             | Good Bot        |
| 507                     | Scraper             | Good Bot        |
| 512                     | Scraper             | Good Bot        |
| 513                     | Scraper             | Good Bot        |
| 514                     | Scraper             | Good Bot        |
| 527                     | Scraper             | Good Bot        |
| 533                     | Scraper             | Good Bot        |
| 539                     | Scraper             | Good Bot        |
| 540                     | Scraper             | Good Bot        |
| 542                     | Scraper             | Good Bot        |
| 544                     | Scraper             | Good Bot        |
| 545                     | Scraper             | Good Bot        |
| 546                     | Scraper             | Good Bot        |
| 547                     | Scraper             | Good Bot        |
| 548                     | Scraper             | Good Bot        |
| 551                     | Scraper             | Good Bot        |
| 552                     | Scraper             | Good Bot        |
| 554                     | Scraper             | Good Bot        |
| 556                     | Scraper             | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 558                     | Scraper             | Good Bot        |
| 560                     | Scraper             | Good Bot        |
| 561                     | Scraper             | Good Bot        |
| 566                     | Scraper             | Good Bot        |
| 575                     | Scraper             | Good Bot        |
| 578                     | Scraper             | Good Bot        |
| 581                     | Scraper             | Good Bot        |
| 582                     | Scraper             | Good Bot        |
| 591                     | Scraper             | Good Bot        |
| 593                     | Scraper             | Good Bot        |
| 595                     | Scraper             | Good Bot        |
| 600                     | Scraper             | Good Bot        |
| 601                     | Scraper             | Good Bot        |
| 602                     | Scraper             | Good Bot        |
| 604                     | Scraper             | Good Bot        |
| 605                     | Scraper             | Good Bot        |
| 609                     | Scraper             | Good Bot        |
| 610                     | Scraper             | Good Bot        |
| 611                     | Scraper             | Good Bot        |
| 612                     | Scraper             | Good Bot        |
| 613                     | Scraper             | Good Bot        |
| 615                     | Scraper             | Good Bot        |
| 620                     | Search Engine       | Good Bot        |
| 622                     | Search Engine       | Good Bot        |
| 623                     | Search Engine       | Good Bot        |
| 624                     | Search Engine       | Good Bot        |
| 626                     | Search Engine       | Good Bot        |
| 627                     | Search Engine       | Good Bot        |
| 628                     | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 629                     | Search Engine       | Good Bot        |
| 633                     | Search Engine       | Good Bot        |
| 634                     | Search Engine       | Good Bot        |
| 636                     | Search Engine       | Good Bot        |
| 637                     | Search Engine       | Good Bot        |
| 640                     | Search Engine       | Good Bot        |
| 641                     | Search Engine       | Good Bot        |
| 642                     | Search Engine       | Good Bot        |
| 643                     | Search Engine       | Good Bot        |
| 647                     | Search Engine       | Good Bot        |
| 649                     | Search Engine       | Good Bot        |
| 650                     | Search Engine       | Good Bot        |
| 651                     | Search Engine       | Good Bot        |
| 654                     | Search Engine       | Good Bot        |
| 656                     | Search Engine       | Good Bot        |
| 657                     | Search Engine       | Good Bot        |
| 658                     | Search Engine       | Good Bot        |
| 659                     | Search Engine       | Good Bot        |
| 660                     | Search Engine       | Good Bot        |
| 663                     | Search Engine       | Good Bot        |
| 664                     | Search Engine       | Good Bot        |
| 665                     | Search Engine       | Good Bot        |
| 666                     | Search Engine       | Good Bot        |
| 667                     | Search Engine       | Good Bot        |
| 669                     | Search Engine       | Good Bot        |
| 670                     | Search Engine       | Good Bot        |
| 671                     | Search Engine       | Good Bot        |
| 672                     | Search Engine       | Good Bot        |
| 673                     | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 674                     | Search Engine       | Good Bot        |
| 675                     | Search Engine       | Good Bot        |
| 676                     | Search Engine       | Good Bot        |
| 677                     | Search Engine       | Good Bot        |
| 679                     | Search Engine       | Good Bot        |
| 680                     | Search Engine       | Good Bot        |
| 690                     | Search Engine       | Good Bot        |
| 693                     | Search Engine       | Good Bot        |
| 694                     | Search Engine       | Good Bot        |
| 697                     | Search Engine       | Good Bot        |
| 698                     | Search Engine       | Good Bot        |
| 702                     | Search Engine       | Good Bot        |
| 706                     | Search Engine       | Good Bot        |
| 712                     | Search Engine       | Good Bot        |
| 713                     | Search Engine       | Good Bot        |
| 714                     | Search Engine       | Good Bot        |
| 715                     | Search Engine       | Good Bot        |
| 716                     | Search Engine       | Good Bot        |
| 721                     | Search Engine       | Good Bot        |
| 723                     | Search Engine       | Good Bot        |
| 725                     | Search Engine       | Good Bot        |
| 727                     | Search Engine       | Good Bot        |
| 728                     | Search Engine       | Good Bot        |
| 729                     | Search Engine       | Good Bot        |
| 730                     | Search Engine       | Good Bot        |
| 731                     | Search Engine       | Good Bot        |
| 732                     | Search Engine       | Good Bot        |
| 735                     | Search Engine       | Good Bot        |
| 736                     | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 740                     | Search Engine       | Good Bot        |
| 748                     | Search Engine       | Good Bot        |
| 749                     | Search Engine       | Good Bot        |
| 750                     | Search Engine       | Good Bot        |
| 751                     | Search Engine       | Good Bot        |
| 756                     | Search Engine       | Good Bot        |
| 757                     | Search Engine       | Good Bot        |
| 758                     | Search Engine       | Good Bot        |
| 759                     | Search Engine       | Good Bot        |
| 760                     | Search Engine       | Good Bot        |
| 761                     | Search Engine       | Good Bot        |
| 762                     | Search Engine       | Good Bot        |
| 763                     | Search Engine       | Good Bot        |
| 764                     | Search Engine       | Good Bot        |
| 765                     | Search Engine       | Good Bot        |
| 766                     | Search Engine       | Good Bot        |
| 767                     | Search Engine       | Good Bot        |
| 768                     | Search Engine       | Good Bot        |
| 769                     | Search Engine       | Good Bot        |
| 770                     | Search Engine       | Good Bot        |
| 771                     | Search Engine       | Good Bot        |
| 772                     | Search Engine       | Good Bot        |
| 773                     | Search Engine       | Good Bot        |
| 776                     | Search Engine       | Good Bot        |
| 777                     | Search Engine       | Good Bot        |
| 780                     | Search Engine       | Good Bot        |
| 781                     | Search Engine       | Good Bot        |
| 784                     | Search Engine       | Good Bot        |
| 786                     | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 787                     | Search Engine       | Good Bot        |
| 788                     | Search Engine       | Good Bot        |
| 789                     | Search Engine       | Good Bot        |
| 790                     | Search Engine       | Good Bot        |
| 791                     | Search Engine       | Good Bot        |
| 792                     | Search Engine       | Good Bot        |
| 795                     | Search Engine       | Good Bot        |
| 796                     | Search Engine       | Good Bot        |
| 798                     | Search Engine       | Good Bot        |
| 800                     | Search Engine       | Good Bot        |
| 801                     | Search Engine       | Good Bot        |
| 802                     | Search Engine       | Good Bot        |
| 803                     | Search Engine       | Good Bot        |
| 805                     | Search Engine       | Good Bot        |
| 806                     | Search Engine       | Good Bot        |
| 807                     | Search Engine       | Good Bot        |
| 809                     | Search Engine       | Good Bot        |
| 810                     | Search Engine       | Good Bot        |
| 811                     | Search Engine       | Good Bot        |
| 812                     | Search Engine       | Good Bot        |
| 814                     | Search Engine       | Good Bot        |
| 815                     | Search Engine       | Good Bot        |
| 816                     | Search Engine       | Good Bot        |
| 817                     | Search Engine       | Good Bot        |
| 818                     | Search Engine       | Good Bot        |
| 819                     | Search Engine       | Good Bot        |
| 820                     | Search Engine       | Good Bot        |
| 821                     | Search Engine       | Good Bot        |
| 822                     | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 823                     | Search Engine       | Good Bot        |
| 825                     | Search Engine       | Good Bot        |
| 827                     | Search Engine       | Good Bot        |
| 830                     | Search Engine       | Good Bot        |
| 831                     | Search Engine       | Good Bot        |
| 834                     | Search Engine       | Good Bot        |
| 837                     | Search Engine       | Good Bot        |
| 838                     | Search Engine       | Good Bot        |
| 849                     | Site Monitor        | Good Bot        |
| 850                     | Site Monitor        | Good Bot        |
| 851                     | Site Monitor        | Good Bot        |
| 853                     | Site Monitor        | Good Bot        |
| 857                     | Site Monitor        | Good Bot        |
| 858                     | Site Monitor        | Good Bot        |
| 859                     | Site Monitor        | Good Bot        |
| 860                     | Site Monitor        | Good Bot        |
| 861                     | Site Monitor        | Good Bot        |
| 862                     | Site Monitor        | Good Bot        |
| 863                     | Site Monitor        | Good Bot        |
| 864                     | Site Monitor        | Good Bot        |
| 865                     | Site Monitor        | Good Bot        |
| 866                     | Site Monitor        | Good Bot        |
| 867                     | Site Monitor        | Good Bot        |
| 868                     | Site Monitor        | Good Bot        |
| 869                     | Site Monitor        | Good Bot        |
| 870                     | Site Monitor        | Good Bot        |
| 871                     | Site Monitor        | Good Bot        |
| 872                     | Site Monitor        | Good Bot        |
| 873                     | Site Monitor        | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 874                     | Site Monitor        | Good Bot        |
| 875                     | Site Monitor        | Good Bot        |
| 876                     | Site Monitor        | Good Bot        |
| 877                     | Site Monitor        | Good Bot        |
| 880                     | Site Monitor        | Good Bot        |
| 881                     | Site Monitor        | Good Bot        |
| 883                     | Site Monitor        | Good Bot        |
| 885                     | Site Monitor        | Good Bot        |
| 886                     | Site Monitor        | Good Bot        |
| 888                     | Site Monitor        | Good Bot        |
| 889                     | Site Monitor        | Good Bot        |
| 895                     | Site Monitor        | Good Bot        |
| 896                     | Site Monitor        | Good Bot        |
| 897                     | Site Monitor        | Good Bot        |
| 898                     | Site Monitor        | Good Bot        |
| 900                     | Site Monitor        | Good Bot        |
| 901                     | Site Monitor        | Good Bot        |
| 904                     | Site Monitor        | Good Bot        |
| 906                     | Site Monitor        | Good Bot        |
| 908                     | Site Monitor        | Good Bot        |
| 909                     | Site Monitor        | Good Bot        |
| 910                     | Site Monitor        | Good Bot        |
| 911                     | Site Monitor        | Good Bot        |
| 912                     | Site Monitor        | Good Bot        |
| 913                     | Site Monitor        | Good Bot        |
| 917                     | Site Monitor        | Good Bot        |
| 918                     | Site Monitor        | Good Bot        |
| 919                     | Site Monitor        | Good Bot        |
| 920                     | Site Monitor        | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 921                     | Site Monitor        | Good Bot        |
| 924                     | Site Monitor        | Good Bot        |
| 926                     | Site Monitor        | Good Bot        |
| 927                     | Site Monitor        | Good Bot        |
| 928                     | Site Monitor        | Good Bot        |
| 929                     | Site Monitor        | Good Bot        |
| 930                     | Site Monitor        | Good Bot        |
| 931                     | Site Monitor        | Good Bot        |
| 934                     | Site Monitor        | Good Bot        |
| 938                     | Site Monitor        | Good Bot        |
| 939                     | Site Monitor        | Good Bot        |
| 958                     | Site Monitor        | Good Bot        |
| 959                     | Site Monitor        | Good Bot        |
| 960                     | Site Monitor        | Good Bot        |
| 963                     | Site Monitor        | Good Bot        |
| 984                     | Scraper             | Good Bot        |
| 991                     | Scraper             | Bad Bot         |
| 996                     | Scraper             | Good Bot        |
| 997                     | Scraper             | Good Bot        |
| 998                     | Scraper             | Good Bot        |
| 1002                    | Scraper             | Good Bot        |
| 1006                    | Scraper             | Good Bot        |
| 1622                    | Screenshot Creator  | Good Bot        |
| 2810                    | Crawler             | Good Bot        |
| 3432                    | Uncategorized       | Bad Bot         |
| 3783                    | Search Engine       | Good Bot        |
| 3784                    | Scraper             | Bad Bot         |
| 3788                    | Tool                | Good Bot        |
| 3790                    | Crawler             | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3791                    | Speed Tester        | Good Bot        |
| 3792                    | Tool                | Good Bot        |
| 3793                    | Tool                | Good Bot        |
| 3794                    | Crawler             | Good Bot        |
| 3796                    | Scraper             | Good Bot        |
| 3797                    | Marketing           | Good Bot        |
| 3799                    | Marketing           | Good Bot        |
| 3800                    | Marketing           | Good Bot        |
| 3806                    | Tool                | Good Bot        |
| 3807                    | Crawler             | Good Bot        |
| 3808                    | Crawler             | Good Bot        |
| 3809                    | Tool                | Good Bot        |
| 3810                    | Scraper             | Good Bot        |
| 3811                    | Tool                | Good Bot        |
| 3812                    | Crawler             | Good Bot        |
| 3813                    | Tool                | Good Bot        |
| 3814                    | Crawler             | Good Bot        |
| 3815                    | Uncategorized       | Good Bot        |
| 3817                    | Tool                | Good Bot        |
| 3818                    | Tool                | Good Bot        |
| 3819                    | Tool                | Good Bot        |
| 3820                    | Crawler             | Good Bot        |
| 3821                    | Search Engine       | Good Bot        |
| 3822                    | Marketing           | Good Bot        |
| 3823                    | Uncategorized       | Good Bot        |
| 3831                    | Scraper             | Good Bot        |
| 3833                    | Search Engine       | Good Bot        |
| 3834                    | Search Engine       | Good Bot        |
| 3835                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 3836                    | Uncategorized         | Good Bot        |
| 3838                    | Uncategorized         | Good Bot        |
| 3839                    | Marketing             | Good Bot        |
| 3840                    | Crawler               | Good Bot        |
| 3842                    | Crawler               | Good Bot        |
| 3843                    | Crawler               | Good Bot        |
| 3844                    | Marketing             | Good Bot        |
| 3845                    | Marketing             | Good Bot        |
| 3846                    | Marketing             | Good Bot        |
| 3847                    | Marketing             | Good Bot        |
| 3848                    | Uncategorized         | Good Bot        |
| 3849                    | Crawler               | Good Bot        |
| 3850                    | Tool                  | Good Bot        |
| 3851                    | Uncategorized         | Good Bot        |
| 3852                    | Tool                  | Good Bot        |
| 3853                    | Vulnerability Scanner | Good Bot        |
| 3854                    | Crawler               | Good Bot        |
| 3855                    | Crawler               | Good Bot        |
| 3856                    | Tool                  | Good Bot        |
| 3871                    | Marketing             | Good Bot        |
| 3886                    | Tool                  | Good Bot        |
| 3887                    | Crawler               | Good Bot        |
| 3888                    | Crawler               | Good Bot        |
| 3889                    | Uncategorized         | Good Bot        |
| 3890                    | Marketing             | Good Bot        |
| 3893                    | Crawler               | Good Bot        |
| 3894                    | Tool                  | Good Bot        |
| 3895                    | Tool                  | Good Bot        |
| 3896                    | Search Engine         | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3897                    | Tool                | Good Bot        |
| 3898                    | Tool                | Good Bot        |
| 3899                    | Uncategorized       | Good Bot        |
| 3901                    | Crawler             | Good Bot        |
| 3902                    | Tool                | Good Bot        |
| 3903                    | Tool                | Good Bot        |
| 3904                    | Search Engine       | Good Bot        |
| 3905                    | Search Engine       | Good Bot        |
| 3906                    | Search Engine       | Good Bot        |
| 3907                    | Search Engine       | Good Bot        |
| 3912                    | Crawler             | Good Bot        |
| 3917                    | Uncategorized       | Good Bot        |
| 3918                    | Crawler             | Good Bot        |
| 3919                    | Uncategorized       | Good Bot        |
| 3920                    | Uncategorized       | Good Bot        |
| 3921                    | Uncategorized       | Good Bot        |
| 3922                    | Uncategorized       | Good Bot        |
| 3923                    | Uncategorized       | Good Bot        |
| 3924                    | Uncategorized       | Good Bot        |
| 3925                    | Uncategorized       | Good Bot        |
| 3926                    | Marketing           | Good Bot        |
| 3927                    | Marketing           | Good Bot        |
| 3928                    | Marketing           | Good Bot        |
| 3929                    | Tool                | Good Bot        |
| 3930                    | Marketing           | Good Bot        |
| 3931                    | Uncategorized       | Good Bot        |
| 3932                    | Crawler             | Good Bot        |
| 3933                    | Marketing           | Good Bot        |
| 3934                    | Marketing           | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3935                    | Scraper             | Good Bot        |
| 3936                    | Marketing           | Good Bot        |
| 3937                    | Scraper             | Good Bot        |
| 3938                    | Feed Fetcher        | Good Bot        |
| 3940                    | Search Engine       | Good Bot        |
| 3941                    | Crawler             | Good Bot        |
| 3942                    | Scraper             | Good Bot        |
| 3946                    | Feed Fetcher        | Good Bot        |
| 3947                    | Crawler             | Good Bot        |
| 3950                    | Virus Scanner       | Good Bot        |
| 3951                    | Marketing           | Good Bot        |
| 3952                    | Marketing           | Good Bot        |
| 3953                    | Marketing           | Good Bot        |
| 3954                    | Marketing           | Good Bot        |
| 3955                    | Marketing           | Good Bot        |
| 3956                    | Marketing           | Good Bot        |
| 3957                    | Marketing           | Good Bot        |
| 3958                    | Marketing           | Good Bot        |
| 3959                    | Marketing           | Good Bot        |
| 3960                    | Marketing           | Good Bot        |
| 3961                    | Marketing           | Good Bot        |
| 3962                    | Marketing           | Good Bot        |
| 3963                    | Marketing           | Good Bot        |
| 3964                    | Marketing           | Good Bot        |
| 3965                    | Marketing           | Good Bot        |
| 3966                    | Marketing           | Good Bot        |
| 3967                    | Marketing           | Good Bot        |
| 3968                    | Marketing           | Good Bot        |
| 3969                    | Marketing           | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3970                    | Search Engine       | Good Bot        |
| 3971                    | Screenshot Creator  | Good Bot        |
| 3972                    | Screenshot Creator  | Good Bot        |
| 3973                    | Search Engine       | Good Bot        |
| 3974                    | Search Engine       | Good Bot        |
| 3975                    | Search Engine       | Good Bot        |
| 3976                    | Search Engine       | Good Bot        |
| 3977                    | Search Engine       | Good Bot        |
| 3978                    | Screenshot Creator  | Good Bot        |
| 3979                    | Search Engine       | Good Bot        |
| 3980                    | Screenshot Creator  | Good Bot        |
| 3981                    | Search Engine       | Good Bot        |
| 3982                    | Search Engine       | Good Bot        |
| 3983                    | Search Engine       | Good Bot        |
| 3984                    | Search Engine       | Good Bot        |
| 3985                    | Search Engine       | Good Bot        |
| 3986                    | Search Engine       | Good Bot        |
| 3987                    | Screenshot Creator  | Good Bot        |
| 3988                    | Search Engine       | Good Bot        |
| 3989                    | Search Engine       | Good Bot        |
| 3990                    | Search Engine       | Good Bot        |
| 3991                    | Search Engine       | Good Bot        |
| 3992                    | Search Engine       | Good Bot        |
| 3993                    | Search Engine       | Good Bot        |
| 3994                    | Search Engine       | Good Bot        |
| 3995                    | Search Engine       | Good Bot        |
| 3996                    | Search Engine       | Good Bot        |
| 3997                    | Search Engine       | Good Bot        |
| 3998                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3999                    | Search Engine       | Good Bot        |
| 4000                    | Screenshot Creator  | Good Bot        |
| 4001                    | Search Engine       | Good Bot        |
| 4002                    | Search Engine       | Good Bot        |
| 4003                    | Search Engine       | Good Bot        |
| 4004                    | Search Engine       | Good Bot        |
| 4005                    | Screenshot Creator  | Good Bot        |
| 4006                    | Crawler             | Good Bot        |
| 4007                    | Marketing           | Good Bot        |
| 4008                    | Marketing           | Good Bot        |
| 4011                    | Tool                | Good Bot        |
| 4012                    | Crawler             | Good Bot        |
| 4013                    | Search Engine       | Good Bot        |
| 4014                    | Tool                | Good Bot        |
| 4015                    | Crawler             | Good Bot        |
| 4016                    | Crawler             | Good Bot        |
| 4017                    | Tool                | Good Bot        |
| 4018                    | Tool                | Good Bot        |
| 4019                    | Tool                | Good Bot        |
| 4020                    | Tool                | Good Bot        |
| 4021                    | Marketing           | Good Bot        |
| 4024                    | Tool                | Good Bot        |
| 4025                    | Search Engine       | Good Bot        |
| 4026                    | Search Engine       | Good Bot        |
| 4027                    | Search Engine       | Good Bot        |
| 4028                    | Marketing           | Good Bot        |
| 4029                    | Tool                | Good Bot        |
| 4030                    | Scrapper            | Good Bot        |
| 4031                    | Scrapper            | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4033                    | Crawler               | Good Bot        |
| 4034                    | Crawler               | Good Bot        |
| 4035                    | Marketing             | Good Bot        |
| 4036                    | Vulnerability Scanner | Good Bot        |
| 4037                    | Vulnerability Scanner | Good Bot        |
| 4038                    | Uncategorized         | Bad Bot         |
| 4039                    | Tool                  | Good Bot        |
| 4042                    | Crawler               | Good Bot        |
| 4043                    | Screenshot Creator    | Good Bot        |
| 4048                    | Feed Fetcher          | Good Bot        |
| 4050                    | Crawler               | Good Bot        |
| 4051                    | Crawler               | Good Bot        |
| 4052                    | Tool                  | Good Bot        |
| 4053                    | Tool                  | Good Bot        |
| 4055                    | Uncategorized         | Good Bot        |
| 4056                    | Marketing             | Good Bot        |
| 4057                    | Screenshot Creator    | Good Bot        |
| 4058                    | Crawler               | Good Bot        |
| 4060                    | Search Engine         | Good Bot        |
| 4061                    | Search Engine         | Good Bot        |
| 4062                    | Search Engine         | Good Bot        |
| 4063                    | Search Engine         | Good Bot        |
| 4064                    | Tool                  | Good Bot        |
| 4065                    | Scraper               | Good Bot        |
| 4066                    | Marketing             | Good Bot        |
| 4067                    | Marketing             | Good Bot        |
| 4071                    | Tool                  | Good Bot        |
| 4076                    | Marketing             | Good Bot        |
| 4077                    | Scraper               | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4078                    | Crawler             | Good Bot        |
| 4079                    | Crawler             | Good Bot        |
| 4081                    | Search Engine       | Good Bot        |
| 4082                    | Tool                | Good Bot        |
| 4085                    | Tool                | Good Bot        |
| 4086                    | Tool                | Good Bot        |
| 4087                    | Tool                | Bad Bot         |
| 4088                    | Search Engine       | Good Bot        |
| 4089                    | Marketing           | Good Bot        |
| 4090                    | Tool                | Good Bot        |
| 4091                    | Tool                | Good Bot        |
| 4092                    | Tool                | Good Bot        |
| 4093                    | Tool                | Good Bot        |
| 4094                    | Uncategorized       | Good Bot        |
| 4095                    | Site Monitor        | Good Bot        |
| 4096                    | Site Monitor        | Good Bot        |
| 4097                    | Site Monitor        | Good Bot        |
| 4098                    | Crawler             | Good Bot        |
| 4099                    | Search Engine       | Good Bot        |
| 4100                    | Search Engine       | Good Bot        |
| 4101                    | Search Engine       | Good Bot        |
| 4102                    | Search Engine       | Good Bot        |
| 4103                    | Marketing           | Good Bot        |
| 4104                    | Marketing           | Good Bot        |
| 4105                    | Marketing           | Good Bot        |
| 4106                    | Marketing           | Good Bot        |
| 4109                    | Search Engine       | Good Bot        |
| 4110                    | Crawler             | Good Bot        |
| 4111                    | Crawler             | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4112                    | Crawler               | Good Bot        |
| 4113                    | Vulnerability Scanner | Good Bot        |
| 4114                    | Crawler               | Good Bot        |
| 4115                    | Tool                  | Good Bot        |
| 4121                    | Marketing             | Good Bot        |
| 4126                    | Marketing             | Good Bot        |
| 4127                    | Marketing             | Good Bot        |
| 4128                    | Marketing             | Good Bot        |
| 4129                    | Marketing             | Good Bot        |
| 4130                    | Marketing             | Good Bot        |
| 4131                    | Tool                  | Good Bot        |
| 4132                    | Marketing             | Good Bot        |
| 4165                    | Marketing             | Good Bot        |
| 4168                    | Speed Tester          | Good Bot        |
| 4170                    | Tool                  | Good Bot        |
| 4172                    | Crawler               | Good Bot        |
| 4173                    | Tool                  | Good Bot        |
| 4174                    | Crawler               | Good Bot        |
| 4175                    | Crawler               | Good Bot        |
| 4176                    | Tool                  | Good Bot        |
| 4177                    | Search Engine         | Good Bot        |
| 4178                    | Tool                  | Good Bot        |
| 4179                    | Crawler               | Good Bot        |
| 4180                    | Tool                  | Good Bot        |
| 4181                    | Site Monitor          | Good Bot        |
| 4182                    | Site Monitor          | Good Bot        |
| 4183                    | Site Monitor          | Good Bot        |
| 4184                    | Site Monitor          | Good Bot        |
| 4185                    | Search Engine         | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4186                    | Tool                  | Good Bot        |
| 4187                    | Tool                  | Good Bot        |
| 4188                    | Screenshot Creator    | Good Bot        |
| 4189                    | Marketing             | Good Bot        |
| 4190                    | Search Engine         | Good Bot        |
| 4191                    | Search Engine         | Good Bot        |
| 4192                    | Search Engine         | Good Bot        |
| 4193                    | Search Engine         | Good Bot        |
| 4194                    | Tool                  | Good Bot        |
| 4196                    | Tool                  | Good Bot        |
| 4197                    | Tool                  | Good Bot        |
| 4198                    | Marketing             | Good Bot        |
| 4199                    | Marketing             | Good Bot        |
| 4200                    | Vulnerability Scanner | Good Bot        |
| 4201                    | Tool                  | Good Bot        |
| 4202                    | Tool                  | Good Bot        |
| 4205                    | Search Engine         | Good Bot        |
| 4209                    | Search Engine         | Good Bot        |
| 4210                    | Speed Tester          | Good Bot        |
| 4211                    | Tool                  | Good Bot        |
| 4212                    | Feed Fetcher          | Good Bot        |
| 4213                    | Feed Fetcher          | Good Bot        |
| 4215                    | Tool                  | Good Bot        |
| 4216                    | Tool                  | Good Bot        |
| 4219                    | Marketing             | Good Bot        |
| 4220                    | Tool                  | Good Bot        |
| 4222                    | Site Monitor          | Good Bot        |
| 4223                    | Marketing             | Good Bot        |
| 4224                    | Search Engine         | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4225                    | Search Engine       | Good Bot        |
| 4226                    | Search Engine       | Good Bot        |
| 4227                    | Marketing           | Good Bot        |
| 4228                    | Marketing           | Good Bot        |
| 4229                    | Tool                | Good Bot        |
| 4231                    | Screenshot Creator  | Good Bot        |
| 4232                    | Tool                | Good Bot        |
| 4233                    | Site Monitor        | Good Bot        |
| 4236                    | Site Monitor        | Good Bot        |
| 4242                    | Marketing           | Good Bot        |
| 4243                    | Marketing           | Good Bot        |
| 4244                    | Marketing           | Good Bot        |
| 4245                    | Marketing           | Good Bot        |
| 4246                    | Marketing           | Good Bot        |
| 4247                    | Search Engine       | Good Bot        |
| 4252                    | Crawler             | Good Bot        |
| 4253                    | Crawler             | Good Bot        |
| 4254                    | Crawler             | Good Bot        |
| 4255                    | Tool                | Good Bot        |
| 4256                    | Uncategorized       | Good Bot        |
| 4257                    | Tool                | Good Bot        |
| 4258                    | Crawler             | Good Bot        |
| 4259                    | Crawler             | Good Bot        |
| 4260                    | Tool                | Good Bot        |
| 4261                    | Tool                | Good Bot        |
| 4262                    | Tool                | Good Bot        |
| 4263                    | Marketing           | Good Bot        |
| 4265                    | Search Engine       | Good Bot        |
| 4266                    | Uncategorized       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4267                    | Tool                  | Good Bot        |
| 4268                    | Tool                  | Good Bot        |
| 4269                    | Search Engine         | Good Bot        |
| 4270                    | Search Engine         | Good Bot        |
| 4271                    | Search Engine         | Good Bot        |
| 4272                    | Search Engine         | Good Bot        |
| 4273                    | Search Engine         | Good Bot        |
| 4274                    | Search Engine         | Good Bot        |
| 4275                    | Search Engine         | Good Bot        |
| 4279                    | Marketing             | Good Bot        |
| 4280                    | Crawler               | Good Bot        |
| 4321                    | Uncategorized         | Good Bot        |
| 4322                    | Crawler               | Good Bot        |
| 4323                    | Tool                  | Good Bot        |
| 4324                    | Tool                  | Good Bot        |
| 4325                    | Tool                  | Good Bot        |
| 4327                    | Search Engine         | Good Bot        |
| 4328                    | Marketing             | Good Bot        |
| 4330                    | Site Monitor          | Good Bot        |
| 4331                    | Search Engine         | Good Bot        |
| 4334                    | Scraper               | Good Bot        |
| 4335                    | Marketing             | Good Bot        |
| 4336                    | Marketing             | Good Bot        |
| 4339                    | Tool                  | Good Bot        |
| 4340                    | Crawler               | Good Bot        |
| 4341                    | Crawler               | Good Bot        |
| 4342                    | Vulnerability Scanner | Good Bot        |
| 4343                    | Vulnerability Scanner | Good Bot        |
| 4344                    | Scraper               | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4377                    | Crawler             | Good Bot        |
| 4378                    | Crawler             | Good Bot        |
| 4379                    | Search Engine       | Good Bot        |
| 4380                    | Search Engine       | Good Bot        |
| 4381                    | Search Engine       | Good Bot        |
| 4382                    | Search Engine       | Good Bot        |
| 4383                    | Crawler             | Good Bot        |
| 4384                    | Search Engine       | Good Bot        |
| 4385                    | Tool                | Good Bot        |
| 4386                    | Uncategorized       | Good Bot        |
| 4387                    | Crawler             | Good Bot        |
| 4388                    | Crawler             | Good Bot        |
| 4389                    | Tool                | Good Bot        |
| 4390                    | Tool                | Good Bot        |
| 4391                    | Tool                | Good Bot        |
| 4392                    | Tool                | Good Bot        |
| 4393                    | Tool                | Good Bot        |
| 4394                    | Uncategorized       | Good Bot        |
| 4395                    | Tool                | Good Bot        |
| 4396                    | Site Monitor        | Good Bot        |
| 4397                    | Site Monitor        | Good Bot        |
| 4404                    | Search Engine       | Good Bot        |
| 4405                    | Search Engine       | Good Bot        |
| 4406                    | Search Engine       | Good Bot        |
| 4407                    | Uncategorized       | Good Bot        |

---

## Bot signature update for March 2022

May 2, 2023

New signatures added and some of existing bot signatures are updated. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 12 applicable for NetScaler platforms with 13.0 76.31 or later builds.

### New bot signatures

Following is a list of bot signature rule IDs, category, and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4564                    | Marketing           | Good Bot        |
| 4565                    | Marketing           | Good Bot        |
| 4566                    | Marketing           | Good Bot        |
| 4567                    | Marketing           | Good Bot        |
| 4568                    | Marketing           | Good Bot        |
| 4569                    | Uncategorized       | Bad Bot         |
| 4570                    | Uncategorized       | Bad Bot         |
| 4571                    | Crawler             | Good Bot        |
| 4572                    | Crawler             | Good Bot        |
| 4573                    | Uncategorized       | Bad Bot         |
| 4574                    | Uncategorized       | Bad Bot         |
| 4575                    | Marketing           | Good Bot        |
| 4576                    | Marketing           | Good Bot        |
| 4577                    | Marketing           | Good Bot        |
| 4578                    | Marketing           | Good Bot        |
| 4579                    | Marketing           | Good Bot        |
| 4580                    | Marketing           | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4581                    | Marketing           | Good Bot        |
| 4582                    | Marketing           | Good Bot        |
| 4583                    | Screenshot Creator  | Good Bot        |
| 4584                    | Search Engine       | Good Bot        |
| 4585                    | Search Engine       | Good Bot        |
| 4586                    | Screenshot Creator  | Good Bot        |
| 4587                    | Uncategorized       | Good Bot        |
| 4588                    | Speed Tester        | Good Bot        |
| 4589                    | Crawler             | Good Bot        |
| 4590                    | Tool                | Good Bot        |
| 4591                    | Tool                | Good Bot        |
| 4592                    | Crawler             | Bad Bot         |
| 4593                    | Search Engine       | Good Bot        |
| 4594                    | Search Engine       | Good Bot        |
| 4595                    | Search Engine       | Good Bot        |
| 4596                    | Marketing           | Good Bot        |
| 4597                    | Tool                | Good Bot        |
| 4598                    | Search Engine       | Good Bot        |
| 4599                    | Marketing           | Good Bot        |
| 4600                    | Marketing           | Good Bot        |
| 4601                    | Marketing           | Good Bot        |
| 4602                    | Search Engine       | Good Bot        |
| 4603                    | Uncategorized       | Good Bot        |
| 4604                    | Marketing           | Good Bot        |
| 4605                    | Marketing           | Good Bot        |
| 4606                    | Uncategorized       | Bad Bot         |
| 4607                    | Uncategorized       | Bad Bot         |
| 4608                    | Tool                | Good Bot        |
| 4609                    | Uncategorized       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4610                    | Tool                  | Good Bot        |
| 4611                    | Tool                  | Good Bot        |
| 4612                    | Scrapper              | Good Bot        |
| 4613                    | Uncategorized         | Good Bot        |
| 4614                    | Uncategorized         | Good Bot        |
| 4615                    | Site Monitor          | Good Bot        |
| 4616                    | Crawler               | Good Bot        |
| 4617                    | Site Monitor          | Good Bot        |
| 4618                    | Search Engine         | Good Bot        |
| 4619                    | Marketing             | Good Bot        |
| 4620                    | Marketing             | Good Bot        |
| 4621                    | Search Engine         | Good Bot        |
| 4622                    | Crawler               | Good Bot        |
| 4623                    | Crawler               | Good Bot        |
| 4624                    | Crawler               | Good Bot        |
| 4625                    | Scrapper              | Good Bot        |
| 4626                    | Crawler               | Good Bot        |
| 4627                    | Vulnerability Scanner | Good Bot        |
| 4628                    | Tool                  | Good Bot        |
| 4629                    | Uncategorized         | Bad Bot         |
| 4630                    | Uncategorized         | Bad Bot         |
| 4631                    | Tool                  | Good Bot        |
| 4632                    | Feed Fetcher          | Good Bot        |
| 4633                    | Crawler               | Bad Bot         |
| 4634                    | Uncategorized         | Good Bot        |
| 4635                    | Feed Fetcher          | Good Bot        |
| 4636                    | Uncategorized         | Good Bot        |
| 4637                    | Tool                  | Good Bot        |
| 4638                    | Tool                  | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4639                    | Scraper             | Bad Bot         |
| 4640                    | Uncategorized       | Bad Bot         |
| 4641                    | Tool                | Good Bot        |
| 4642                    | Crawler             | Bad Bot         |
| 4643                    | Site Monitor        | Good Bot        |
| 4644                    | Site Monitor        | Good Bot        |
| 4645                    | Search Engine       | Good Bot        |
| 4646                    | Search Engine       | Good Bot        |
| 4647                    | Search Engine       | Good Bot        |
| 4648                    | Search Engine       | Good Bot        |
| 4649                    | Search Engine       | Bad Bot         |
| 4650                    | Uncategorized       | Good Bot        |

---

### Updated bot signatures

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 2554                    | Uncategorized       | Bad Bot         |
| 3835                    | Search Engine       | Good Bot        |
| 4027                    | Search Engine       | Good Bot        |
| 4038                    | Uncategorized       | Bad Bot         |
| 4085                    | Tool                | Good Bot        |
| 4098                    | Crawler             | Good Bot        |
| 4100                    | Search Engine       | Good Bot        |
| 4220                    | Tool                | Good Bot        |
| 4224                    | Search Engine       | Good Bot        |
| 4281                    | Uncategorized       | Bad Bot         |
| 4412                    | Marketing           | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4425                    | Marketing           | Good Bot        |
| 4429                    | Screenshot Creator  | Good Bot        |
| 4430                    | Virus Scanner       | Good Bot        |
| 4483                    | Crawler             | Good Bot        |
| 4552                    | Uncategorized       | Good Bot        |
| 4562                    | Search Engine       | Good Bot        |
| 1000000                 | Browser             | Good Bot        |
| 1000003                 | Browser             | Good Bot        |
| 1000004                 | Scraper             | Good Bot        |
| 1000005                 | Google_Crawler      | Bad Bot         |
| 1000006                 | Browser             | Bad Bot         |
| 1000007                 | Bot                 | Bad Bot         |
| 1000008                 | Browser             | Bad Bot         |
| 1000009                 | Browser             | Good Bot        |
| 1000010                 | Bot                 | Bad Bot         |
| 1000011                 | Browser             | Bad Bot         |
| 1000012                 | Scraper             | Good Bot        |
| 1000013                 | Scraper             | Bad Bot         |
| 1000014                 | Scraper             | Bad Bot         |
| 1000015                 | Browser             | Good Bot        |
| 1000016                 | Bot                 | Bad Bot         |
| 1000017                 | Browser             | Bad Bot         |
| 1000018                 | Browser             | Good Bot        |
| 1000019                 | Scraper             | Good Bot        |
| 1000020                 | Scraper             | Good Bot        |
| 1000021                 | Scraper             | Good Bot        |
| 1000022                 | Google_Crawler      | Good Bot        |
| 1000023                 | Browser             | Bad Bot         |
| 1000024                 | Analyzer            | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>        | <b>Bot Type</b> |
|-------------------------|----------------------------|-----------------|
| 1000025                 | Analyzer                   | Good Bot        |
| 1000026                 | Analyzer                   | Good Bot        |
| 1000027                 | Analyzer                   | Good Bot        |
| 1000028                 | Analyzer                   | Good Bot        |
| 1000029                 | Browser                    | Good Bot        |
| 1000030                 | Analyzer                   | Good Bot        |
| 1000031                 | Analyzer                   | Good Bot        |
| 1000032                 | Browser                    | Bad Bot         |
| 1000033                 | Analyzer                   | Good Bot        |
| 1000034                 | Browser                    | Bad Bot         |
| 1000035                 | Scraper                    | Good Bot        |
| 1000036                 | Scraper                    | Good Bot        |
| 1000037                 | Browser                    | Good Bot        |
| 1000038                 | Analyzer                   | Good Bot        |
| 1000039                 | Analyzer                   | Good Bot        |
| 1000040                 | Analyzer                   | Good Bot        |
| 1000041                 | Analyzer                   | Good Bot        |
| 1000042                 | Analyzer                   | Good Bot        |
| 1000043                 | Analyzer                   | Good Bot        |
| 1000044                 | Analyzer                   | Good Bot        |
| 1000045                 | Google_App_Engine_Software | Good Bot        |
| 1000046                 | Google_Crawler             | Good Bot        |
| 1000047                 | Browser                    | Bad Bot         |
| 1000048                 | Browser                    | Bad Bot         |
| 1000049                 | Analyzer                   | Good Bot        |
| 1000050                 | Browser                    | Bad Bot         |
| 1000051                 | Browser                    | Good Bot        |
| 1000052                 | Browser                    | Bad Bot         |
| 1000053                 | Scraper                    | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000054                 | Google_Crawler      | Bad Bot         |
| 1000055                 | Scraper             | Bad Bot         |
| 1000056                 | Analyzer            | Good Bot        |
| 1000057                 | Browser             | Bad Bot         |
| 1000058                 | Browser             | Bad Bot         |
| 1000059                 | Browser             | Bad Bot         |
| 1000060                 | Scraper             | Bad Bot         |
| 1000061                 | Application         | Bad Bot         |
| 1000062                 | Scraper             | Bad Bot         |
| 1000063                 | Scraper             | Bad Bot         |
| 1000064                 | Scraper             | Good Bot        |
| 1000065                 | Scraper             | Bad Bot         |
| 1000066                 | Scraper             | Bad Bot         |
| 1000067                 | Browser             | Bad Bot         |
| 1000068                 | Scraper             | Bad Bot         |
| 1000069                 | Browser             | Bad Bot         |
| 1000070                 | Scraper             | Bad Bot         |
| 1000071                 | Application         | Bad Bot         |

---

## **Bot signature update for August 2022**

May 2, 2023

New signatures added and some of existing bot signatures are updated. You can download and configure these signature rules to protect your appliance from bot attacks.

### **Bot signature version**

Signature version 13 applicable for NetScaler platforms with 13.0 76.31 or later builds.

**New bot signatures**

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4651                    | Marketing           | Good Bot        |
| 4652                    | Uncategorized       | Bad Bot         |
| 4653                    | Search Engine       | Good Bot        |
| 4654                    | Tool                | Good Bot        |
| 4655                    | Crawler             | Good Bot        |
| 4656                    | Marketing           | Good Bot        |
| 4657                    | Scraper             | Good Bot        |
| 4658                    | Feed Fetcher        | Good Bot        |
| 4659                    | Uncategorized       | Bad Bot         |
| 4660                    | Tool                | Good Bot        |
| 4661                    | Tool                | Good Bot        |
| 4662                    | Uncategorized       | Bad Bot         |
| 4663                    | Uncategorized       | Bad Bot         |
| 4664                    | Marketing           | Good Bot        |
| 4665                    | Uncategorized       | Good Bot        |
| 4666                    | Uncategorized       | Good Bot        |
| 4667                    | Feed Fetcher        | Good Bot        |
| 4668                    | Uncategorized       | Good Bot        |
| 4669                    | Tool                | Good Bot        |
| 4670                    | Tool                | Good Bot        |
| 4671                    | Search Engine       | Good Bot        |
| 4672                    | Tool                | Good Bot        |
| 4673                    | Uncategorized       | Good Bot        |
| 4674                    | Uncategorized       | Good Bot        |
| 4675                    | Uncategorized       | Good Bot        |
| 4676                    | Marketing           | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4677                    | Scraper             | Good Bot        |
| 4678                    | Marketing           | Good Bot        |
| 4679                    | Crawler             | Bad Bot         |
| 4680                    | Uncategorized       | Good Bot        |
| 4681                    | Uncategorized       | Good Bot        |
| 4682                    | Site Monitor        | Good Bot        |
| 4683                    | Site Monitor        | Good Bot        |
| 4684                    | Search Engine       | Good Bot        |
| 4685                    | Search Engine       | Good Bot        |
| 4686                    | Search Engine       | Good Bot        |
| 4687                    | Search Engine       | Good Bot        |
| 4688                    | Search Engine       | Good Bot        |
| 4689                    | Search Engine       | Good Bot        |
| 4690                    | Search Engine       | Good Bot        |
| 4691                    | Search Engine       | Good Bot        |
| 4692                    | Search Engine       | Good Bot        |
| 4693                    | Uncategorized       | Good Bot        |
| 4694                    | Uncategorized       | Bad Bot         |
| 4695                    | Crawler             | Good Bot        |
| 4696                    | Crawler             | Good Bot        |
| 4697                    | Crawler             | Good Bot        |
| 4698                    | Search Engine       | Good Bot        |
| 4699                    | Search Engine       | Good Bot        |
| 4700                    | Search Engine       | Good Bot        |
| 4701                    | Tool                | Bad Bot         |
| 4702                    | Uncategorized       | Good Bot        |
| 4703                    | Tool                | Good Bot        |
| 4704                    | Tool                | Good Bot        |
| 4705                    | Crawler             | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4706                    | Site Monitor          | Good Bot        |
| 4707                    | Search Engine         | Good Bot        |
| 4708                    | Tool                  | Good Bot        |
| 4709                    | Vulnerability Scanner | Good Bot        |
| 4710                    | Vulnerability Scanner | Good Bot        |
| 4711                    | Crawler               | Good Bot        |
| 4712                    | Crawler               | Good Bot        |
| 4713                    | Crawler               | Good Bot        |
| 4714                    | Scraper               | Good Bot        |
| 4715                    | Tool                  | Good Bot        |
| 4716                    | Tool                  | Good Bot        |
| 4717                    | Search Engine         | Bad Bot         |
| 4718                    | Uncategorized         | Good Bot        |
| 4719                    | Tool                  | Good Bot        |
| 4720                    | Marketing             | Good Bot        |
| 4721                    | Marketing             | Good Bot        |
| 4722                    | Search Engine         | Good Bot        |
| 4723                    | Uncategorized         | Bad Bot         |
| 4724                    | Tool                  | Good Bot        |
| 4725                    | Search Engine         | Good Bot        |
| 4726                    | Search Engine         | Good Bot        |
| 4727                    | Tool                  | Good Bot        |
| 4728                    | Uncategorized         | Bad Bot         |
| 4729                    | Site Monitor          | Good Bot        |
| 4730                    | Search Engine         | Good Bot        |
| 4731                    | Search Engine         | Good Bot        |
| 4732                    | Search Engine         | Good Bot        |
| 4733                    | Search Engine         | Good Bot        |
| 4734                    | Tool                  | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4735                    | Tool                | Bad Bot         |
| 4736                    | Tool                | Good Bot        |
| 4737                    | Marketing           | Good Bot        |
| 4738                    | Tool                | Good Bot        |
| 4739                    | Feed Fetcher        | Good Bot        |
| 4740                    | Search Engine       | Good Bot        |
| 4741                    | Uncategorized       | Bad Bot         |
| 4742                    | Search Engine       | Good Bot        |
| 4743                    | Crawler             | Good Bot        |
| 4744                    | Tool                | Good Bot        |
| 4745                    | Tool                | Good Bot        |
| 4746                    | Marketing           | Good Bot        |
| 4747                    | Uncategorized       | Bad Bot         |
| 4748                    | Search Engine       | Good Bot        |
| 4749                    | Search Engine       | Good Bot        |
| 4750                    | Search Engine       | Good Bot        |
| 4751                    | Search Engine       | Good Bot        |
| 4752                    | Search Engine       | Good Bot        |

---

### **Updated bot signatures**

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3796                    | Scrapper            | Good Bot        |
| 3835                    | Search Engine       | Good Bot        |
| 3935                    | Scrapper            | Good Bot        |
| 4027                    | Search Engine       | Good Bot        |
| 4061                    | Search Engine       | Good Bot        |

---



---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4100                    | Search Engine       | Good Bot        |
| 4451                    | Speed Tester        | Good Bot        |
| 4562                    | Search Engine       | Good Bot        |
| 4575                    | Marketing           | Good Bot        |
| 4577                    | Marketing           | Good Bot        |
| 4578                    | Marketing           | Good Bot        |
| 4579                    | Marketing           | Good Bot        |
| 4580                    | Marketing           | Good Bot        |
| 4583                    | Screenshot Creator  | Good Bot        |
| 4584                    | Search Engine       | Good Bot        |
| 4585                    | Search Engine       | Good Bot        |
| 4597                    | Tool                | Good Bot        |
| 4599                    | Marketing           | Good Bot        |
| 4601                    | Marketing           | Good Bot        |
| 4623                    | Crawler             | Good Bot        |
| 4630                    | Uncategorized       | Bad Bot         |
| 4647                    | Search Engine       | Good Bot        |
| 1000000                 | Browser             | Good Bot        |
| 1000001                 | Application         | Bad Bot         |
| 1000002                 | Browser             | Good Bot        |
| 1000003                 | Scraper             | Good Bot        |
| 1000004                 | Browser             | Good Bot        |
| 1000005                 | Browser             | Bad Bot         |
| 1000006                 | Google Crawler      | Bad Bot         |
| 1000007                 | Scraper             | Bad Bot         |
| 1000008                 | Scraper             | Good Bot        |
| 1000009                 | Browser             | Bad Bot         |
| 1000010                 | Bot                 | Bad Bot         |
| 1000011                 | Bot                 | Bad Bot         |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000012                 | Scraper             | Bad Bot         |
| 1000013                 | Scraper             | Bad Bot         |
| 1000014                 | Browser             | Bad Bot         |
| 1000015                 | Browser             | Good Bot        |
| 1000016                 | Browser             | Bad Bot         |
| 1000017                 | Scraper             | Good Bot        |
| 1000018                 | Scraper             | Bad Bot         |
| 1000019                 | Scraper             | Bad Bot         |
| 1000020                 | Scraper             | Bad Bot         |
| 1000021                 | Browser             | Good Bot        |
| 1000022                 | Scraper             | Good Bot        |
| 1000023                 | Browser             | Bad Bot         |
| 1000024                 | Bot                 | Bad Bot         |
| 1000025                 | Analyzer            | Good Bot        |
| 1000026                 | Scraper             | Good Bot        |
| 1000027                 | Browser             | Bad Bot         |
| 1000028                 | Browser             | Bad Bot         |
| 1000029                 | Scraper             | Good Bot        |
| 1000030                 | Google Crawler      | Good Bot        |
| 1000031                 | Browser             | Bad Bot         |
| 1000032                 | Analyzer            | Good Bot        |
| 1000033                 | Bot                 | Bad Bot         |
| 1000034                 | Analyzer            | Good Bot        |
| 1000035                 | Analyzer            | Good Bot        |
| 1000036                 | Analyzer            | Good Bot        |
| 1000037                 | Analyzer            | Good Bot        |
| 1000038                 | Scraper             | Good Bot        |
| 1000039                 | Analyzer            | Good Bot        |
| 1000040                 | Browser             | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000041                 | Browser             | Bad Bot         |
| 1000042                 | Scrapper            | Good Bot        |
| 1000043                 | Browser             | Good Bot        |
| 1000044                 | Analyzer            | Good Bot        |
| 1000045                 | Analyzer            | Good Bot        |
| 1000046                 | Analyzer            | Good Bot        |
| 1000047                 | Analyzer            | Good Bot        |
| 1000048                 | Analyzer            | Good Bot        |
| 1000049                 | Browser             | Bad Bot         |
| 1000050                 | Google Crawler      | Good Bot        |
| 1000051                 | Browser             | Bad Bot         |
| 1000052                 | Browser             | Bad Bot         |
| 1000053                 | Analyzer            | Good Bot        |
| 1000054                 | Browser             | Good Bot        |
| 1000055                 | Scrapper            | Good Bot        |
| 1000056                 | Browser             | Good Bot        |
| 1000057                 | Analyzer            | Good Bot        |
| 1000058                 | Google Crawler      | Bad Bot         |
| 1000059                 | Scrapper            | Bad Bot         |
| 1000060                 | Browser             | Bad Bot         |
| 1000061                 | Browser             | Good Bot        |
| 1000062                 | Browser             | Bad Bot         |
| 1000063                 | Browser             | Bad Bot         |
| 1000064                 | Browser             | Bad Bot         |
| 1000065                 | Scrapper            | Bad Bot         |
| 1000066                 | Application         | Bad Bot         |
| 1000067                 | Scrapper            | Bad Bot         |
| 1000068                 | Scrapper            | Bad Bot         |
| 1000069                 | Browser             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000070                 | Application         | Bad Bot         |

---

## Bot signature update for April 2023

May 3, 2023

New signatures added and some of existing bot signatures are updated. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 14 applicable for NetScaler platforms with 13.0 76.31 or later builds.

### New bot signatures

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4753                    | Tool                | Bad Bot         |
| 4754                    | Uncategorized       | Bad Bot         |
| 4755                    | Scraper             | Good Bot        |
| 4756                    | Marketing           | Good Bot        |
| 4757                    | Marketing           | Good Bot        |
| 4758                    | Marketing           | Good Bot        |
| 4759                    | Marketing           | Good Bot        |
| 4760                    | Marketing           | Good Bot        |
| 4761                    | Marketing           | Good Bot        |
| 4762                    | Marketing           | Good Bot        |
| 4763                    | Marketing           | Good Bot        |
| 4764                    | Marketing           | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4765                    | Scraper               | Bad Bot         |
| 4766                    | Scraper               | Bad Bot         |
| 4767                    | Tool                  | Good Bot        |
| 4768                    | Scraper               | Bad Bot         |
| 4769                    | Tool                  | Good Bot        |
| 4770                    | Scraper               | Bad Bot         |
| 4771                    | Scraper               | Bad Bot         |
| 4772                    | Scraper               | Bad Bot         |
| 4773                    | Scraper               | Bad Bot         |
| 4774                    | Scraper               | Bad Bot         |
| 4775                    | Crawler               | Good Bot        |
| 4776                    | Marketing             | Good Bot        |
| 4777                    | Tool                  | Good Bot        |
| 4778                    | Tool                  | Good Bot        |
| 4779                    | Crawler               | Good Bot        |
| 4780                    | Site Monitor          | Good Bot        |
| 4781                    | Site Monitor          | Good Bot        |
| 4782                    | Site Monitor          | Good Bot        |
| 4783                    | Uncategorized         | Good Bot        |
| 4784                    | Tool                  | Good Bot        |
| 4785                    | Tool                  | Good Bot        |
| 4786                    | Vulnerability Scanner | Good Bot        |
| 4787                    | Tool                  | Good Bot        |
| 4788                    | Marketing             | Good Bot        |
| 4789                    | Marketing             | Good Bot        |
| 4790                    | Marketing             | Good Bot        |
| 4791                    | Uncategorized         | Good Bot        |
| 4792                    | Uncategorized         | Good Bot        |
| 4793                    | Uncategorized         | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4794                    | Uncategorized         | Bad Bot         |
| 4795                    | Tool                  | Good Bot        |
| 4796                    | Site Monitor          | Good Bot        |
| 4797                    | Site Monitor          | Good Bot        |
| 4798                    | Uncategorized         | Good Bot        |
| 4799                    | Search Engine         | Good Bot        |
| 4800                    | Search Engine         | Good Bot        |
| 4801                    | Search Engine         | Good Bot        |
| 4802                    | Uncategorized         | Good Bot        |
| 4803                    | Tool                  | Bad Bot         |
| 4804                    | Scraper               | Good Bot        |
| 4805                    | Marketing             | Good Bot        |
| 4806                    | Crawler               | Good Bot        |
| 4807                    | Crawler               | Good Bot        |
| 4808                    | Vulnerability Scanner | Bad Bot         |
| 4809                    | Vulnerability Scanner | Good Bot        |
| 4810                    | Tool                  | Good Bot        |
| 4811                    | Tool                  | Good Bot        |
| 4812                    | Uncategorized         | Good Bot        |
| 4813                    | Uncategorized         | Good Bot        |
| 4814                    | Site Monitor          | Good Bot        |
| 4815                    | Scraper               | Bad Bot         |
| 4816                    | Search Engine         | Good Bot        |
| 4817                    | Uncategorized         | Good Bot        |
| 4818                    | Site Monitor          | Good Bot        |
| 4819                    | Search Engine         | Good Bot        |
| 4820                    | Search Engine         | Good Bot        |
| 4821                    | Search Engine         | Good Bot        |
| 4822                    | Search Engine         | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4823                    | Search Engine       | Good Bot        |
| 4824                    | Uncategorized       | Good Bot        |
| 4825                    | Marketing           | Good Bot        |
| 4826                    | Scraper             | Good Bot        |
| 4827                    | Screenshot Creator  | Good Bot        |
| 4828                    | Uncategorized       | Bad Bot         |
| 4829                    | Uncategorized       | Bad Bot         |
| 4830                    | Uncategorized       | Bad Bot         |
| 4831                    | Uncategorized       | Good Bot        |
| 4832                    | Uncategorized       | Bad Bot         |
| 4833                    | Search Engine       | Good Bot        |
| 4834                    | Search Engine       | Good Bot        |
| 4835                    | Uncategorized       | Good Bot        |
| 4836                    | Search Engine       | Good Bot        |
| 4837                    | Tool                | Good Bot        |
| 4838                    | Marketing           | Good Bot        |
| 4839                    | Tool                | Good Bot        |
| 4840                    | Scraper             | Good Bot        |
| 4841                    | Search Engine       | Good Bot        |
| 4842                    | Site Monitor        | Good Bot        |
| 4843                    | Uncategorized       | Bad Bot         |
| 4844                    | Search Engine       | Good Bot        |
| 4845                    | Search Engine       | Good Bot        |
| 4846                    | Crawler             | Good Bot        |
| 4847                    | Marketing           | Good Bot        |
| 4848                    | Tool                | Good Bot        |
| 4849                    | Crawler             | Good Bot        |
| 4850                    | Crawler             | Good Bot        |
| 4851                    | Uncategorized       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4852                    | Search Engine       | Good Bot        |
| 4853                    | Uncategorized       | Good Bot        |
| 4854                    | Uncategorized       | Good Bot        |
| 4855                    | Site Monitor        | Good Bot        |
| 4856                    | Tool                | Good Bot        |
| 4857                    | Tool                | Good Bot        |
| 4858                    | Scrapper            | Bad Bot         |
| 4859                    | Screenshot Creator  | Good Bot        |
| 4860                    | Site Monitor        | Good Bot        |
| 4861                    | Site Monitor        | Good Bot        |
| 4862                    | Crawler             | Good Bot        |
| 4863                    | Search Engine       | Good Bot        |
| 4864                    | Search Engine       | Good Bot        |
| 4865                    | Search Engine       | Good Bot        |
| 4866                    | Search Engine       | Good Bot        |
| 4867                    | Search Engine       | Good Bot        |
| 4868                    | Marketing           | Good Bot        |
| 4869                    | Marketing           | Good Bot        |
| 4870                    | Search Engine       | Good Bot        |
| 4871                    | Uncategorized       | Bad Bot         |
| 4872                    | Uncategorized       | Bad Bot         |
| 4873                    | Uncategorized       | Bad Bot         |
| 4874                    | Uncategorized       | Bad Bot         |
| 4875                    | Uncategorized       | Bad Bot         |
| 4876                    | Uncategorized       | Bad Bot         |
| 4877                    | Uncategorized       | Bad Bot         |
| 4878                    | Uncategorized       | Bad Bot         |
| 4879                    | Uncategorized       | Bad Bot         |
| 4880                    | Uncategorized       | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b>   | <b>Bot Type</b> |
|-------------------------|-----------------------|-----------------|
| 4881                    | Search Engine         | Good Bot        |
| 4882                    | Uncategorized         | Good Bot        |
| 4883                    | Tool                  | Good Bot        |
| 4884                    | Tool                  | Good Bot        |
| 4885                    | Tool                  | Good Bot        |
| 4886                    | Site Monitor          | Good Bot        |
| 4887                    | Site Monitor          | Good Bot        |
| 4888                    | Scraper               | Bad Bot         |
| 4889                    | Marketing             | Good Bot        |
| 4890                    | Uncategorized         | Bad Bot         |
| 4891                    | Search Engine         | Good Bot        |
| 4892                    | Search Engine         | Good Bot        |
| 4893                    | Marketing             | Good Bot        |
| 4894                    | Uncategorized         | Bad Bot         |
| 4895                    | Uncategorized         | Bad Bot         |
| 4896                    | Vulnerability Scanner | Good Bot        |
| 4897                    | Uncategorized         | Bad Bot         |
| 4898                    | Uncategorized         | Bad Bot         |
| 4899                    | Uncategorized         | Bad Bot         |
| 4900                    | Crawler               | Good Bot        |
| 4901                    | Crawler               | Good Bot        |
| 4902                    | Vulnerability Scanner | Good Bot        |
| 4903                    | Tool                  | Good Bot        |
| 4904                    | Feed Fetcher          | Good Bot        |
| 4905                    | Tool                  | Good Bot        |
| 4906                    | Crawler               | Good Bot        |
| 4907                    | Uncategorized         | Good Bot        |
| 4908                    | Uncategorized         | Bad Bot         |
| 4909                    | Uncategorized         | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4910                    | Search Engine       | Good Bot        |
| 4911                    | Search Engine       | Good Bot        |
| 4912                    | Uncategorized       | Good Bot        |
| 4913                    | Search Engine       | Good Bot        |
| 4914                    | Crawler             | Good Bot        |

---

### Updated bot signatures

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3935                    | Scrapper            | Good Bot        |
| 4012                    | Crawler             | Good Bot        |
| 4013                    | Search Engine       | Good Bot        |
| 4027                    | Search Engine       | Good Bot        |
| 4038                    | Uncategorized       | Bad Bot         |
| 4071                    | Tool                | Good Bot        |
| 4100                    | Search Engine       | Good Bot        |
| 4220                    | Tool                | Good Bot        |
| 4425                    | Marketing           | Good Bot        |
| 4441                    | Feed Fetcher        | Good Bot        |
| 4451                    | Speed Tester        | Good Bot        |
| 4563                    | Search Engine       | Good Bot        |
| 4575                    | Marketing           | Good Bot        |
| 4577                    | Marketing           | Good Bot        |
| 4578                    | Marketing           | Good Bot        |
| 4579                    | Marketing           | Good Bot        |
| 4580                    | Marketing           | Good Bot        |
| 4583                    | Screenshot Creator  | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4584                    | Search Engine       | Good Bot        |
| 4585                    | Search Engine       | Good Bot        |
| 4586                    | Screenshot Creator  | Good Bot        |
| 4593                    | Search Engine       | Good Bot        |
| 4597                    | Tool                | Good Bot        |
| 4599                    | Marketing           | Good Bot        |
| 4600                    | Marketing           | Good Bot        |
| 4601                    | Marketing           | Good Bot        |
| 4618                    | Search Engine       | Good Bot        |
| 4633                    | Crawler             | Bad Bot         |
| 4639                    | Scrapers            | Bad Bot         |
| 4647                    | Search Engine       | Good Bot        |
| 4651                    | Marketing           | Good Bot        |
| 4660                    | Tool                | Good Bot        |
| 4687                    | Search Engine       | Good Bot        |
| 4717                    | Search Engine       | Bad Bot         |
| 4730                    | Search Engine       | Good Bot        |
| 1000000                 | Browser             | Good Bot        |
| 1000001                 | Application         | Bad Bot         |
| 1000002                 | Browser             | Good Bot        |
| 1000003                 | Scrapers            | Good Bot        |
| 1000004                 | Browser             | Good Bot        |
| 1000005                 | Browser             | Bad Bot         |
| 1000006                 | Google_Crawler      | Bad Bot         |
| 1000007                 | Scrapers            | Bad Bot         |
| 1000008                 | Scrapers            | Good Bot        |
| 1000009                 | Browser             | Bad Bot         |
| 1000010                 | Bot                 | Bad Bot         |
| 1000011                 | Bot                 | Bad Bot         |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000012                 | Scraper             | Bad Bot         |
| 1000013                 | Scraper             | Bad Bot         |
| 1000014                 | Browser             | Bad Bot         |
| 1000015                 | Browser             | Good Bot        |
| 1000016                 | Browser             | Bad Bot         |
| 1000017                 | Scraper             | Good Bot        |
| 1000018                 | Scraper             | Bad Bot         |
| 1000019                 | Scraper             | Bad Bot         |
| 1000020                 | Scraper             | Bad Bot         |
| 1000021                 | Browser             | Good Bot        |
| 1000022                 | Scraper             | Good Bot        |
| 1000023                 | Browser             | Bad Bot         |
| 1000024                 | Bot                 | Bad Bot         |
| 1000025                 | Analyzer            | Good Bot        |
| 1000026                 | Scraper             | Good Bot        |
| 1000027                 | Browser             | Bad Bot         |
| 1000028                 | Browser             | Bad Bot         |
| 1000029                 | Scraper             | Good Bot        |
| 1000030                 | Google_Crawler      | Good Bot        |
| 1000031                 | Browser             | Bad Bot         |
| 1000032                 | Analyzer            | Good Bot        |
| 1000033                 | Bot                 | Bad Bot         |
| 1000034                 | Analyzer            | Good Bot        |
| 1000035                 | Analyzer            | Good Bot        |
| 1000036                 | Analyzer            | Good Bot        |
| 1000037                 | Analyzer            | Good Bot        |
| 1000038                 | Scraper             | Good Bot        |
| 1000039                 | Analyzer            | Good Bot        |
| 1000040                 | Browser             | Bad Bot         |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000041                 | Browser             | Bad Bot         |
| 1000042                 | Scrapper            | Good Bot        |
| 1000043                 | Browser             | Good Bot        |
| 1000044                 | Analyzer            | Good Bot        |
| 1000045                 | Analyzer            | Good Bot        |
| 1000046                 | Analyzer            | Good Bot        |
| 1000047                 | Analyzer            | Good Bot        |
| 1000048                 | Analyzer            | Good Bot        |
| 1000049                 | Browser             | Bad Bot         |
| 1000050                 | Google_Crawler      | Good Bot        |
| 1000051                 | Browser             | Bad Bot         |
| 1000052                 | Browser             | Bad Bot         |
| 1000053                 | Analyzer            | Good Bot        |
| 1000054                 | Browser             | Good Bot        |
| 1000055                 | Scrapper            | Good Bot        |
| 1000056                 | Browser             | Good Bot        |
| 1000057                 | Analyzer            | Good Bot        |
| 1000058                 | Google_Crawler      | Bad Bot         |
| 1000059                 | Scrapper            | Bad Bot         |
| 1000060                 | Browser             | Bad Bot         |
| 1000061                 | Browser             | Good Bot        |
| 1000062                 | Browser             | Bad Bot         |
| 1000063                 | Browser             | Bad Bot         |
| 1000064                 | Browser             | Bad Bot         |
| 1000065                 | Scrapper            | Bad Bot         |
| 1000066                 | Application         | Bad Bot         |
| 1000067                 | Scrapper            | Bad Bot         |
| 1000068                 | Scrapper            | Bad Bot         |
| 1000069                 | Browser             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000070                 | Application         | Bad Bot         |

---

## Bot signature update for May 2023

March 14, 2024

New signature rules are generated for the bots identified in the week 2023-05-15. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 15 applicable for Netscaler platforms with 13.0 76.31 or later builds.

### New bot signatures in this version

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 2000002                 | Browser             | Good Bot        |
| 2000008                 | Scraper             | Good Bot        |
| 2000009                 | Browser             | Bad Bot         |
| 2000012                 | Scraper             | Bad Bot         |
| 2000017                 | Scraper             | Good Bot        |
| 2000018                 | Scraper             | Bad Bot         |
| 2000019                 | Scraper             | Bad Bot         |
| 2000020                 | Scraper             | Bad Bot         |
| 2000024                 | Bot                 | Bad Bot         |
| 2000027                 | Browser             | Bad Bot         |
| 2000028                 | Browser             | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 2000031                 | Browser             | Bad Bot         |
| 2000032                 | Analyzer            | Good Bot        |
| 2000033                 | Bot                 | Bad Bot         |
| 2000034                 | Analyzer            | Good Bot        |
| 2000040                 | Browser             | Bad Bot         |
| 2000041                 | Browser             | Bad Bot         |
| 2000047                 | Analyzer            | Good Bot        |
| 2000048                 | Analyzer            | Good Bot        |
| 2000049                 | Browser             | Bad Bot         |
| 2000050                 | Google_Crawler      | Good Bot        |
| 2000051                 | Browser             | Bad Bot         |
| 2000054                 | Browser             | Good Bot        |
| 2000055                 | Scraper             | Good Bot        |
| 2000057                 | Analyzer            | Good Bot        |
| 2000061                 | Browser             | Good Bot        |
| 2000064                 | Browser             | Bad Bot         |
| 2000069                 | Browser             | Good Bot        |

---

### **Updated bot signatures in this version**

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 71                      | Crawler             | Good Bot        |
| 74                      | Crawler             | Good Bot        |
| 75                      | Crawler             | Good Bot        |
| 372                     | Scraper             | Good Bot        |
| 373                     | Scraper             | Good Bot        |
| 374                     | Scraper             | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 375                     | Scraper             | Good Bot        |
| 376                     | Scraper             | Good Bot        |
| 377                     | Scraper             | Good Bot        |
| 378                     | Scraper             | Good Bot        |
| 379                     | Scraper             | Good Bot        |
| 380                     | Scraper             | Good Bot        |
| 381                     | Scraper             | Good Bot        |
| 382                     | Scraper             | Good Bot        |
| 383                     | Scraper             | Good Bot        |
| 384                     | Scraper             | Good Bot        |
| 385                     | Scraper             | Good Bot        |
| 386                     | Scraper             | Good Bot        |
| 387                     | Scraper             | Good Bot        |
| 389                     | Scraper             | Good Bot        |
| 390                     | Scraper             | Good Bot        |
| 391                     | Scraper             | Good Bot        |
| 702                     | Search Engine       | Good Bot        |
| 703                     | Search Engine       | Good Bot        |
| 1173                    | Tool                | Good Bot        |
| 1174                    | Marketing           | Good Bot        |
| 1176                    | Search Engine       | Good Bot        |
| 1178                    | Speed Tester        | Good Bot        |
| 1185                    | Screenshot Creator  | Good Bot        |
| 1209                    | Uncategorized       | Good Bot        |
| 1531                    | Feed Fetcher        | Good Bot        |
| 2586                    | Uncategorized       | Good Bot        |
| 2674                    | Tool                | Good Bot        |
| 2756                    | Tool                | Good Bot        |
| 2758                    | Uncategorized       | Good Bot        |



---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 2759                    | Tool                | Good Bot        |
| 2784                    | Tool                | Good Bot        |
| 2952                    | Tool                | Good Bot        |
| 3163                    | Tool                | Good Bot        |
| 3554                    | Tool                | Good Bot        |
| 3782                    | Marketing           | Good Bot        |
| 3788                    | Tool                | Good Bot        |
| 3797                    | Marketing           | Good Bot        |
| 3798                    | Marketing           | Good Bot        |
| 3799                    | Marketing           | Good Bot        |
| 3800                    | Marketing           | Good Bot        |
| 3801                    | Marketing           | Good Bot        |
| 3802                    | Screenshot Creator  | Good Bot        |
| 3803                    | Search Engine       | Good Bot        |
| 3804                    | Screenshot Creator  | Good Bot        |
| 3805                    | Search Engine       | Good Bot        |
| 3861                    | Marketing           | Good Bot        |
| 3862                    | Marketing           | Good Bot        |
| 3863                    | Marketing           | Good Bot        |
| 3864                    | Marketing           | Good Bot        |
| 3865                    | Marketing           | Good Bot        |
| 3866                    | Marketing           | Good Bot        |
| 3867                    | Marketing           | Good Bot        |
| 3868                    | Marketing           | Good Bot        |
| 3871                    | Marketing           | Good Bot        |
| 3872                    | Marketing           | Good Bot        |
| 3873                    | Search Engine       | Good Bot        |
| 3874                    | Search Engine       | Good Bot        |
| 3875                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3876                    | Search Engine       | Good Bot        |
| 3877                    | Screenshot Creator  | Good Bot        |
| 3878                    | Search Engine       | Good Bot        |
| 3879                    | Search Engine       | Good Bot        |
| 3880                    | Screenshot Creator  | Good Bot        |
| 3881                    | Screenshot Creator  | Good Bot        |
| 3882                    | Search Engine       | Good Bot        |
| 3883                    | Search Engine       | Good Bot        |
| 3884                    | Search Engine       | Good Bot        |
| 3885                    | Search Engine       | Good Bot        |
| 3963                    | Marketing           | Good Bot        |
| 3970                    | Search Engine       | Good Bot        |
| 3973                    | Search Engine       | Good Bot        |
| 3974                    | Search Engine       | Good Bot        |
| 3975                    | Search Engine       | Good Bot        |
| 3976                    | Search Engine       | Good Bot        |
| 3977                    | Search Engine       | Good Bot        |
| 3979                    | Search Engine       | Good Bot        |
| 3981                    | Search Engine       | Good Bot        |
| 3982                    | Search Engine       | Good Bot        |
| 3983                    | Search Engine       | Good Bot        |
| 3984                    | Search Engine       | Good Bot        |
| 3985                    | Search Engine       | Good Bot        |
| 3986                    | Search Engine       | Good Bot        |
| 3988                    | Search Engine       | Good Bot        |
| 3989                    | Search Engine       | Good Bot        |
| 3990                    | Search Engine       | Good Bot        |
| 3991                    | Search Engine       | Good Bot        |
| 3992                    | Search Engine       | Good Bot        |

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 3993                    | Search Engine       | Good Bot        |
| 3994                    | Search Engine       | Good Bot        |
| 3995                    | Search Engine       | Good Bot        |
| 3996                    | Search Engine       | Good Bot        |
| 3997                    | Search Engine       | Good Bot        |
| 3998                    | Search Engine       | Good Bot        |
| 3999                    | Search Engine       | Good Bot        |
| 4001                    | Search Engine       | Good Bot        |
| 4002                    | Search Engine       | Good Bot        |
| 4003                    | Search Engine       | Good Bot        |
| 4004                    | Search Engine       | Good Bot        |
| 4040                    | Crawler             | Good Bot        |
| 4041                    | Tool                | Good Bot        |
| 4120                    | Marketing           | Good Bot        |
| 4122                    | Marketing           | Good Bot        |
| 4123                    | Marketing           | Good Bot        |
| 4124                    | Marketing           | Good Bot        |
| 4125                    | Marketing           | Good Bot        |
| 4133                    | Marketing           | Good Bot        |
| 4134                    | Tool                | Good Bot        |
| 4135                    | Marketing           | Good Bot        |
| 4136                    | Marketing           | Good Bot        |
| 4137                    | Marketing           | Good Bot        |
| 4138                    | Marketing           | Good Bot        |
| 4139                    | Marketing           | Good Bot        |
| 4140                    | Marketing           | Good Bot        |
| 4141                    | Marketing           | Good Bot        |
| 4142                    | Marketing           | Good Bot        |
| 4143                    | Marketing           | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4144                    | Marketing           | Good Bot        |
| 4145                    | Search Engine       | Good Bot        |
| 4146                    | Search Engine       | Good Bot        |
| 4147                    | Search Engine       | Good Bot        |
| 4148                    | Search Engine       | Good Bot        |
| 4149                    | Search Engine       | Good Bot        |
| 4150                    | Search Engine       | Good Bot        |
| 4151                    | Search Engine       | Good Bot        |
| 4152                    | Search Engine       | Good Bot        |
| 4153                    | Search Engine       | Good Bot        |
| 4154                    | Search Engine       | Good Bot        |
| 4155                    | Search Engine       | Good Bot        |
| 4156                    | Screenshot Creator  | Good Bot        |
| 4157                    | Search Engine       | Good Bot        |
| 4158                    | Search Engine       | Good Bot        |
| 4159                    | Search Engine       | Good Bot        |
| 4160                    | Screenshot Creator  | Good Bot        |
| 4161                    | Search Engine       | Good Bot        |
| 4162                    | Search Engine       | Good Bot        |
| 4163                    | Tool                | Good Bot        |
| 4164                    | Search Engine       | Good Bot        |
| 4209                    | Search Engine       | Good Bot        |
| 4240                    | Marketing           | Good Bot        |
| 4241                    | Marketing           | Good Bot        |
| 4247                    | Search Engine       | Good Bot        |
| 4248                    | Search Engine       | Good Bot        |
| 4249                    | Screenshot Creator  | Good Bot        |
| 4250                    | Search Engine       | Good Bot        |
| 4251                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4282                    | Marketing           | Good Bot        |
| 4283                    | Marketing           | Good Bot        |
| 4284                    | Marketing           | Good Bot        |
| 4285                    | Marketing           | Good Bot        |
| 4286                    | Marketing           | Good Bot        |
| 4287                    | Marketing           | Good Bot        |
| 4288                    | Marketing           | Good Bot        |
| 4289                    | Marketing           | Good Bot        |
| 4290                    | Marketing           | Good Bot        |
| 4291                    | Marketing           | Good Bot        |
| 4292                    | Marketing           | Good Bot        |
| 4293                    | Marketing           | Good Bot        |
| 4294                    | Marketing           | Good Bot        |
| 4295                    | Search Engine       | Good Bot        |
| 4296                    | Search Engine       | Good Bot        |
| 4297                    | Search Engine       | Good Bot        |
| 4298                    | Search Engine       | Good Bot        |
| 4299                    | Search Engine       | Good Bot        |
| 4300                    | Search Engine       | Good Bot        |
| 4301                    | Search Engine       | Good Bot        |
| 4302                    | Search Engine       | Good Bot        |
| 4303                    | Search Engine       | Good Bot        |
| 4304                    | Search Engine       | Good Bot        |
| 4305                    | Search Engine       | Good Bot        |
| 4306                    | Screenshot Creator  | Good Bot        |
| 4307                    | Search Engine       | Good Bot        |
| 4308                    | Search Engine       | Good Bot        |
| 4309                    | Search Engine       | Good Bot        |
| 4310                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4311                    | Screenshot Creator  | Good Bot        |
| 4312                    | Search Engine       | Good Bot        |
| 4313                    | Search Engine       | Good Bot        |
| 4314                    | Search Engine       | Good Bot        |
| 4315                    | Search Engine       | Good Bot        |
| 4316                    | Search Engine       | Good Bot        |
| 4317                    | Search Engine       | Good Bot        |
| 4318                    | Screenshot Creator  | Good Bot        |
| 4319                    | Screenshot Creator  | Good Bot        |
| 4345                    | Marketing           | Good Bot        |
| 4346                    | Marketing           | Good Bot        |
| 4347                    | Marketing           | Good Bot        |
| 4348                    | Marketing           | Good Bot        |
| 4349                    | Marketing           | Good Bot        |
| 4350                    | Marketing           | Good Bot        |
| 4351                    | Marketing           | Good Bot        |
| 4352                    | Marketing           | Good Bot        |
| 4353                    | Marketing           | Good Bot        |
| 4354                    | Marketing           | Good Bot        |
| 4355                    | Search Engine       | Good Bot        |
| 4356                    | Search Engine       | Good Bot        |
| 4357                    | Search Engine       | Good Bot        |
| 4358                    | Search Engine       | Good Bot        |
| 4359                    | Search Engine       | Good Bot        |
| 4360                    | Search Engine       | Good Bot        |
| 4361                    | Search Engine       | Good Bot        |
| 4362                    | Search Engine       | Good Bot        |
| 4363                    | Search Engine       | Good Bot        |
| 4364                    | Search Engine       | Good Bot        |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 4365                    | Screenshot Creator  | Good Bot        |
| 4366                    | Search Engine       | Good Bot        |
| 4367                    | Search Engine       | Good Bot        |
| 4368                    | Search Engine       | Good Bot        |
| 4369                    | Search Engine       | Good Bot        |
| 4370                    | Screenshot Creator  | Good Bot        |
| 4371                    | Search Engine       | Good Bot        |
| 4372                    | Search Engine       | Good Bot        |
| 4373                    | Search Engine       | Good Bot        |
| 4374                    | Search Engine       | Good Bot        |
| 4375                    | Search Engine       | Good Bot        |
| 4376                    | Screenshot Creator  | Good Bot        |
| 4379                    | Search Engine       | Good Bot        |
| 4380                    | Search Engine       | Good Bot        |
| 4381                    | Search Engine       | Good Bot        |
| 4412                    | Marketing           | Good Bot        |
| 4421                    | Screenshot Creator  | Good Bot        |
| 4450                    | Screenshot Creator  | Good Bot        |
| 4452                    | Search Engine       | Good Bot        |
| 4503                    | Marketing           | Good Bot        |
| 4541                    | Marketing           | Good Bot        |
| 4584                    | Search Engine       | Good Bot        |
| 4585                    | Search Engine       | Good Bot        |
| 4602                    | Search Engine       | Good Bot        |
| 1000003                 | Scraper             | Good Bot        |

---

### **Deleted bot signatures in this version**

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1000002                 | Browser             | Good Bot        |
| 1000008                 | Scraper             | Good Bot        |
| 1000009                 | Browser             | Bad Bot         |
| 1000012                 | Scraper             | Bad Bot         |
| 1000017                 | Scraper             | Good Bot        |
| 1000018                 | Scraper             | Bad Bot         |
| 1000019                 | Scraper             | Bad Bot         |
| 1000020                 | Scraper             | Bad Bot         |
| 1000024                 | Bot                 | Bad Bot         |
| 1000027                 | Browser             | Bad Bot         |
| 1000028                 | Browser             | Bad Bot         |
| 1000031                 | Browser             | Bad Bot         |
| 1000032                 | Analyzer            | Good Bot        |
| 1000033                 | Bot                 | Bad Bot         |
| 1000034                 | Analyzer            | Good Bot        |
| 1000040                 | Browser             | Bad Bot         |
| 1000041                 | Browser             | Bad Bot         |
| 1000047                 | Analyzer            | Good Bot        |
| 1000048                 | Analyzer            | Good Bot        |
| 1000049                 | Browser             | Bad Bot         |
| 1000050                 | Google_Crawler      | Good Bot        |
| 1000051                 | Browser             | Bad Bot         |
| 1000054                 | Browser             | Good Bot        |
| 1000055                 | Scraper             | Good Bot        |
| 1000057                 | Analyzer            | Good Bot        |
| 1000061                 | Browser             | Good Bot        |
| 1000064                 | Browser             | Bad Bot         |
| 1000069                 | Browser             | Good Bot        |

---



## Bot signature update for March 2024

March 14, 2024

Updated signature rules are generated for the bots identified in the week 2024-03-06. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 16 applicable for Netscaler platforms with 13.0 76.31 or later builds.

### Updated bot signatures in this version

Following is a list of bot signature rule IDs, category and its type.

---

| Bot signature ID | Bot Category  | Bot Type |
|------------------|---------------|----------|
| 382              | Scraper       | Good Bot |
| 628              | Search Engine | Good Bot |

---

## Bot signature update for June 2024

June 20, 2024

Updated signature rules are generated for the bots identified in the week 2024-06-18. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 17 applicable for Netscaler platforms with 13.0 76.31 or later builds.

### Updated bot signatures in this version

Following is a list of bot signature rule IDs, category and its type.

---

| Bot signature ID | Bot Category | Bot Type |
|------------------|--------------|----------|
| 913              | Site Monitor | Good Bot |

---

### Bot signature update for July 2024

August 1, 2024

Updated signatures rules are generated for the bots identified in the week 2024-07-31. You can download and configure these signature rules to protect your appliance from bot attacks.

### Bot signature version

Signature version 18 applicable for Netscaler platforms with 13.0 76.31 or later builds.

### Updated bot signatures in this version

Following is a list of bot signature rule IDs, category and its type.

---

| Bot signature ID | Bot Category | Bot Type |
|------------------|--------------|----------|
| 4605             | Marketing    | Good Bot |

---

### Bot signature update for September 2024

September 18, 2024

Updated signatures rules are generated for the bots identified in the week 2024-09-12. You can download and configure these signature rules to protect your appliance from bot attacks.

**Bot signature version**

Signature version 19 applicable for Netscaler platforms with 13.0 76.31 or later builds.

**Updated bot signatures in this version**

Following is a list of bot signature rule IDs, category and its type.

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 23                      | Crawler             | Bad Bot         |
| 74                      | Crawler             | Good Bot        |
| 236                     | Scrapper            | Good Bot        |
| 252                     | Scrapper            | Good Bot        |
| 293                     | Scrapper            | Good Bot        |
| 372                     | Scrapper            | Good Bot        |
| 375                     | Scrapper            | Good Bot        |
| 376                     | Scrapper            | Good Bot        |
| 377                     | Scrapper            | Good Bot        |
| 378                     | Scrapper            | Good Bot        |
| 379                     | Scrapper            | Good Bot        |
| 424                     | Scrapper            | Good Bot        |
| 425                     | Scrapper            | Good Bot        |
| 451                     | Scrapper            | Good Bot        |
| 580                     | Scrapper            | Bad Bot         |
| 627                     | Search Engine       | Good Bot        |
| 681                     | Search Engine       | Bad Bot         |
| 784                     | Search Engine       | Good Bot        |
| 1173                    | Tool                | Good Bot        |
| 1174                    | Marketing           | Good Bot        |
| 1176                    | Search Engine       | Good Bot        |
| 1185                    | Screenshot Creator  | Good Bot        |
| 1328                    | Search Engine       | Bad Bot         |

---

| <b>Bot signature ID</b> | <b>Bot Category</b> | <b>Bot Type</b> |
|-------------------------|---------------------|-----------------|
| 1460                    | Marketing           | Bad Bot         |
| 1928                    | Marketing           | Bad Bot         |
| 2516                    | Tool                | Bad Bot         |
| 2637                    | Screenshot Creator  | Bad Bot         |
| 2935                    | Link Checker        | Bad Bot         |
| 3535                    | Tool                | Good Bot        |
| 3788                    | Tool                | Good Bot        |
| 3918                    | Crawler             | Good Bot        |
| 4012                    | Crawler             | Good Bot        |
| 4193                    | Search Engine       | Good Bot        |
| 4339                    | Tool                | Good Bot        |
| 4412                    | Marketing           | Good Bot        |
| 4496                    | Tool                | Good Bot        |
| 4522                    | Tool                | Good Bot        |
| 4654                    | Tool                | Good Bot        |
| 2000055                 | Scaper              | Good Bot        |

---

## Cache Redirection

May 2, 2023

In a typical deployment, different clients ask web servers for the same content repeatedly. To relieve the origin web server of processing each request, a NetScaler appliance with cache redirection enabled can serve this content from a cache server instead of from the origin server.

The NetScaler appliance analyzes incoming requests, sends requests for cacheable data to cache servers, and sends non-cacheable requests and dynamic HTTP requests to origin servers.

Cache redirection is a policy-based feature. By default, requests that match a policy are sent to the origin server, and all other requests are sent to a cache server. For testing or maintenance, you might want to skip policy evaluation and direct all requests to the cache or to the origin server.

You can combine content switching with cache redirection to cache selective content and serve content from specific cache servers for specific types of requested content.

A NetScaler appliance configured for cache redirection can be deployed at the edge of a network, in front of the origin server, or anywhere along the network backbone. In an edge deployment, commonly used by Internet Service Providers (ISPs), cable companies, content delivery distribution networks, and enterprise networks, the NetScaler appliance resides directly in front of the clients. In a server-side deployment, the NetScaler appliance is closer to the origin servers.

Cache redirection is used most commonly with the HTTP service type, but it also supports the secure HTTPS protocol.

## Cache redirection policies

May 2, 2023

A cache redirection virtual server applies cache redirection policies to each incoming request. By default, if a request matches one of the configured policies, it is considered non-cacheable, and the NetScaler appliance sends it to the origin server. Other requests are sent to a cache server. This behavior can be reversed, so that requests that match configured cache redirection policies are sent to cache servers.

The appliance provides a set of policies for cache redirection. If these built-in policies are not adequate for your deployment, you can configure user-defined cache redirection policies.

**Note:** Once you have determined which built-in cache redirection policies to use, or have created user-defined policies, proceed with configuring cache redirection. To use this feature, you must configure at least one cache redirection virtual server, and, for normal operation, you must bind at least one cache redirection policy to that virtual server.

## Built-in cache redirection policies

June 13, 2024

The NetScaler appliance provides built-in cache redirection policies that handle typical cache requests. These policies are based on HTTP methods, the URL or URL tokens of the incoming request, the HTTP version, or the HTTP headers and their values in the request.

Built-in cache redirection policies can be directly bound to a virtual server and do not need further configuration.

## Built-in Advanced policy cache redirection policies

Built-in cache redirection policies based on Advanced policy expressions are called *Advanced policy cache redirection policies*. For a complete description of Advanced policy expressions and how to configure them, see [Policies and Expressions](#).

In addition to the same types of evaluations done by classic cache redirection policies, Advanced policy cache redirection policies enable you to analyze more data (for example, the body of an HTTP request) and to configure more operations in the policy rule (for example, directing the request to either cache or origin server).

NetScaler appliances provide the following two built-in actions for the Advanced policy cache redirection policies:

- CACHE
- ORIGIN

As implied by their names, they direct the request to the cache server or the origin server, respectively.

**Note:** If you are using the built-in Advanced policy cache redirection policy, you cannot modify the action.

The NetScaler appliance provides the following built-in Advanced policy cache redirection policies:

---

| Built-In Policy Name     | Description                                                                                                                                                                                                                                                               |
|--------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| bypass-non-get_adv       | Bypass the cache if the request uses an HTTP method other than GET.                                                                                                                                                                                                       |
| bypass-cache-control_adv | Bypass the cache if the request header contains a Cache-Control: no-cache or Cache-Control: no-store header, or if the HTTP request contains a pragma header.                                                                                                             |
| bypass-dynamic-url_adv   | Bypass the cache if the URL suggests that the content is dynamic, as indicated by the presence of any of the following extensions: cgi, asp, exe, cfm, ex, shtml, or htx. Also bypass the cache if the URL starts with any of the following: /cgi-bin/, /bin/, or /exec/. |
| bypass-urltokens_adv     | Bypass the cache because the request is dynamic, as indicated by one of the following tokens in the URL: ?, !, or =.                                                                                                                                                      |

| Built-In Policy Name | Description                                                                                     |
|----------------------|-------------------------------------------------------------------------------------------------|
| bypass-cookie_adv    | Bypass the cache for any URL that has a cookie header and an extension other than .png or .jpg. |

## Display the built-in cache redirection policies

You can display the available cache redirection policies by using the command line interface or the configuration utility.

### Display the built-in cache redirection policies by using the CLI

At the command prompt, type:

```
show cr policy [<policyName>]
```

#### Example:

```

1 > show cr policy
2 1)
3 Policy: bypass-non-get-adv Rule: HTTP.REQ.METHOD.EQ(GET).NOT
 Action: ORIGIN
4 Hits: 0
5 2)
6 Policy: bypass-cache-control-adv Rule: ((HTTP.REQ.CACHE_CONTROL.
 IS_NO_STORE) || (HTTP.REQ.CACHE_CONTROL.IS_NO_CACHE) || (HTTP.
 REQ.HEADER("Pragma").CONTAINS("no-cache")))
7 ction : ORIGIN
8 Hits: 0
9 3)
10 Policy: bypass-dynamic-url-adv Rule: (HTTP.REQ.URL.ENDSWITH_ANY(
 "ns_cr_dynamic_ext") || (HTTP.REQ.URL.PATH.STARTSWITH_ANY("
 ns_cr_dynamic_path"))) Action: ORIGIN
11 Hits: 0
12 4)
13 Policy: bypass-urltokens-adv Rule: HTTP.REQ.URL.REGEX_MATCH(re
 /[?!=]/) Action: ORIGIN
14 Hits: 0
15 5)
16 Policy: bypass-cookie-adv Rule: ((HTTP.REQ.HEADER("Cookie").
 EXISTS) && (!(HTTP.REQ.URL.ENDSWITH(".png"))) && (!(HTTP.REQ.URL
 .ENDSWITH(".jpeg")))) Action: ORIGIN
17 Hits: 0
18 Done

```

## Display the built-in cache redirection policies by using the GUI

1. Navigate to Traffic Management > Cache Redirection > Policies. The configured cache redirection policies appear in the details pane.
2. Select one of the configured policies to view details.

## Configure a cache redirection policy

June 14, 2024

A cache redirection policy includes an expression (also called a *rule*). The expression represents a condition that is evaluated when the client request is compared to the policy.

You do not explicitly configure actions for cache redirection policies.

A cache redirection policy has a name and includes an Advanced policy expression, or a set of Advanced policy expression clauses that are combined by using logical operators, and the following built-in actions:

- CACHE
- ORIGIN

For more information about Advanced policy expressions, see [Policies and Expressions](#).

## Add a cache redirection policy by using the CLI

At the command prompt, type the following commands to add a cache redirection policy and verify the configuration:

```
1 - add cr policy <policyName> **-rule** <expression> -action<string> [-logAction<string>]
2
3 - show cr policy [<policyName>]
```

### Examples:

Policy with a simple expression:

```
1 > add cr policy crpol1 -rule !(HTTP.REQ.URL.ENDSWITH(".jpeg")) -action origin
2 Done
3 > show cr policy crpoll
4 Policy: crpol1 Rule: !(HTTP.REQ.URL.ENDSWITH(".jpeg")) Action: ORIGIN
5 Hits: 0
```



```
6 Done
```

Policy with a compound expression:

```
1 > add cr policy crpol11 -rule 'http.req.method.eq(post) && (HTTP.REQ.
 URL.ENDSWITH(".png") || HTTP.REQ.URL.ENDSWITH(".cgi"))' -action
 cache
2 Done
3 > show cr policy crpol11
4 Policy: crpol11 Rule: http.req.method.eq(post) && (HTTP.REQ.URL.
 ENDSWITH(".png") || HTTP.REQ.URL.ENDSWITH(".cgi")) Action:
 CACHE
5 Hits: 0
6 Done
```

Policy that evaluates a header:

```
1 > add cr policy crpol12 -rule http.req.header("If-Modified-Since").
 exists -action origin
2 Done
3 > show cr policy crpol12
4 Policy: crpol12 Rule: http.req.header("If-Modified-Since").
 exists Action: ORIGIN
5 Hits: 0
6 Done
```

## Modify or remove a cache redirection policy by using the CLI

- To modify a cache redirection policy, use the `set cr policy` command, which is just like `add cr policy` command, except that you enter the name of an existing policy and you only have to provide the parameters that you want to modify.
- To remove a policy, use the `rm cr policy` command, which accepts only the `<name>` argument. If the policy is bound to a virtual server, you have to unbind the policy, before you can remove it.

For the details of unbinding a cache redirection policy, see [Unbind a policy from a cache redirection virtual server](#).

## Configure a cache redirection policy with a simple expression by using the GUI

1. Navigate to **Traffic Management > Cache Redirection > Policies**.
2. In the details pane, click **Add**.
3. In the **Create Cache Redirection Policy** dialog box, in the **Name** text box, type the name of the policy.

4. Select the appropriate action **CACHE** or **ORIGIN** from the **Action** drop-down list.
5. In the **Log Action** area, click **Add**. Type a name in the **Create Audit Message Action** dialog box.
  - Configure **Log Level** by choosing the appropriate value from the drop-down list:
    - **EMERGENCY**
    - **ALERT**
    - **CRITICAL**
    - **ERROR**
    - **WARNING**
    - **NOTICE**
    - **INFORMATIONAL**
    - **DEBUG**
  - Enter the expression in the **Expression** area. Configure an advanced expression. For more information, see [Policy Expressions](#).
  - Click **Create**.
6. Configure the rule using the advanced expression. For more information see [Policy Expressions](#).
7. When you are finished entering the expression, click **Create**.

The screenshot shows a web interface for creating a policy. At the top, there is a back arrow and the title "Create Cache Redirection Policy". Below this, there are several input fields and buttons:

- Name\***: A text input field containing "example".
- Action**: A dropdown menu with "CACHE" selected.
- Log Action**: A dropdown menu with "example" selected, followed by "Add" and "Edit" buttons.
- Expression\***: A section with three dropdown menus: "Select", "Select", and "HTTP.REQ.URL-Is a Pattern pr". Below these is a text area containing the expression "HTTP.REQ.URL\_PATH\_AND\_QUERY.CONTAINS(".jpeg")". To the right of the text area is an "Expression Editor" link and a green circular icon. Below the text area is an "Evaluate" link.

At the bottom of the form, there are two buttons: "Create" (a dark blue button) and "Close" (a light blue button).

## Cache redirection configurations

May 2, 2023

Depending on your deployment and network topology, you can configure one of the following types of cache redirection:

- **Transparent.** A transparent cache can reside on a variety of points along a network backbone to alleviate traffic along the delivery route. In transparent mode, the cache redirection virtual server intercepts all traffic flowing to the NetScaler appliance and applies cache redirection policies to determine whether content should be served from the cache or from the origin server.
- **Forward proxy.** A forward proxy cache server resides on the edge of an enterprise LAN and faces the WAN. In the forward proxy mode, the cache redirection virtual server resolves the hostname of the incoming request by using a DNS server and forwards requests for non-cacheable content to the resolved origin servers. Cacheable requests are sent to the configured cache servers.
- **Reverse proxy.** Reverse proxy caches are configured for specific origin servers. Incoming traffic directed to the reverse proxy, can either be served from a cache server or be sent to the origin server with or without modification to the URL.

## Configure transparent redirection

May 2, 2023

When you configure transparent cache redirection, the NetScaler appliance evaluates all traffic it receives, to determine whether it is cacheable. This mode alleviates traffic along the delivery route and is often used when the cache server resides on the backbone of an ISP or carrier.

By default, cacheable requests are sent to a cache server, and non-cacheable requests to the origin server. For example, when the NetScaler appliance receives a request that is directed to a web server, it compares the HTTP headers in the request with a set of policy expressions. If the request does not match the policy, the appliance forwards the request to a cache server. If the request does match a policy, the appliance forwards the request, unchanged, to the web server.

For details on how to modify this default behavior, see [Direct policy hits to the cache instead of the origin](#).

To configure transparent redirection, first enable cache redirection and load balancing, and configure edge mode. Then, create a cache redirection virtual server with a wildcard IP address (\*), so that this virtual server can receive traffic coming to the appliance on any IP address the appliance owns. To this virtual server, bind cache redirection policies that describe the types of requests that should not be cached. Then, create a load balancing virtual server that will receive traffic from the cache redirection virtual server for cacheable requests. Finally, create a service that represents a physical cache server and bind it to the load balancing virtual server.

## Enable cache redirection and load balancing

July 22, 2021

The appliance cache redirection and load balancing features are not enabled by default. They must be enabled before any cache redirection configuration can take effect.

### Enable cache redirection and load balancing by using the CLI

At the command prompt, type the following command to enable cache redirection and load balancing and verify the settings:

```
1 - enable ns feature cr lb
2 - show ns feature
```

#### Example:

```
1 > enable ns feature cr lb
2 Done
3 > show ns feature
4
5 Feature Acronym Status
6 ----- -
7 1) Web Logging WL ON
8 2) Surge Protection SP ON
9 3) Load Balancing LB ON
10 4) Content Switching CS ON
11 5) Cache Redirection CR ON
12
13 ...
14 ...
15 ...
16 23) appliance Push push OFF
17 Done
```

### Enable cache redirection and load balancing by using the GUI

1. In the navigation pane, expand **System**, and then click **Settings**.
2. To enable cache redirection, in the details pane, under **Modes and Features**, click **Configure Advanced Features**.
  - a) In **Configure Advanced Features** dialog box, select the check box next to the **Cache Redirection**, and then click **OK**.
  - b) In Enable/Disable Features? dialog box, click Yes.

3. To enable load balancing, in the details pane, under **Modes and Features**, click **Configure Basic Features**.
  - a) In **Configure Basic Features** dialog box, select the check box next to the Load Balancing, and then click **OK**.
  - b) In Enable/Disable Features? dialog box, click Yes.

## Configure edge mode

May 2, 2023

When deployed at the edge of a network, the NetScaler appliance dynamically learns about the servers on that network. Edge mode enables the appliance to dynamically learn about up to 40,000 HTTP servers and proxy TCP connections for these servers.

This mode turns on the collection of statistics for the dynamically learned services and is typically used in transparent deployments for cache redirection.

### Enable edge mode by using the CLI

At the command prompt, type the following commands to enable edge mode and verify the setting:

```
1 - enable ns mode Edge
2 - show ns mode
```

#### Example:

```
1 > enable ns mode edge
2 Done
3
4 > show ns mode
5
6 Mode Acronym Status
7 -----
8 ...
9 ...
10 ...
11 6) MAC-based forwarding MBF ON
12 7) Edge configuration Edge ON
13 8) Use Subnet IP USNIP OFF
14 ...
15 ...
16 ...
17 16) Bridge BPDUs BridgeBPDUs OFF
18 Done
```

## Enable edge mode by using the GUI

1. In the navigation pane, expand System, and then click Settings.
2. In the details pane, under Modes and Features, click Configure modes.
3. In Configure Modes dialog box, select the check box next to the Edge Configuration, and then click OK.
4. In Enable/Disable Feature(s)? dialog box, click Yes.

## Configure a cache redirection virtual server

October 16, 2023

By default, a cache redirection virtual server forwards cacheable requests to the load balancing virtual server for the cache, and forwards non-cacheable requests to the origin server (except in a reverse proxy configuration, in which non-cacheable requests are sent to a load balancing virtual server). There are three types of cache redirection virtual servers: transparent, forward proxy, and reverse proxy.

A transparent cache redirection virtual server uses an IP address of \* and a port number, usually 80, that can accept HTTP traffic sent to any IP address that the appliance represents. As a result, you can configure only one transparent cache redirection virtual server. Any additional cache redirection virtual servers that you configure must be forward proxy or reverse proxy redirection servers.

## Add a cache redirection virtual server in transparent mode by using the CLI

At the command prompt, type the following commands to add a cache redirection virtual server and verify the configuration:

```
1 - add cr vserver <name> <serviceType> [<IPAddress> <port>] [-
 cacheType <cacheType>] [-redirect <redirect>]
2 - show cr vserver [<name>]
```

### Example:

```
1 add cr vserver Vserver-CRD-1 HTTP * 80 -cacheType TRANSPARENT -redirect
 POLICY
2 > show cr vserver Vserver-CRD-1
3 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
4 State: UP ARP:DISABLED
5 Client Idle Timeout: 180 sec
6 Down state flush: ENABLED
7 Disable Primary Vserver On Down : DISABLED
```

|    |                         |                          |                  |
|----|-------------------------|--------------------------|------------------|
| 8  | Default:                | Content Precedence: RULE | Cache:           |
|    | TRANSPARENT             |                          |                  |
| 9  | On Policy Match: ORIGIN | L2Conn: OFF              | OriginUSIP: OFF  |
| 10 | Redirect: POLICY        | Reuse: ON                | Via: ON ARP: OFF |
| 11 | Done                    |                          |                  |

## Modify or remove a cache redirection virtual server by using the CLI

- To modify a virtual server, use the `set cr vservice` command, which is like using the `add cr vservice` command, except that you enter the name of an existing virtual server.
- To remove a virtual server, use the `rm cr vservice` command, which accepts only the `<name>` argument.

## Add a cache redirection virtual server in transparent mode by using the GUI

1. Navigate to **Traffic Management > Cache Redirection > Virtual Servers**.
2. In the details pane, click **Add**.
3. In **Create Virtual Server (Cache Redirection)**, specify the required parameter values.
4. In **Protocol**, select a supported protocol (for example, **HTTP**). If the virtual server is to receive traffic on a port other than the standard port for the selected protocol, enter a new value in the **Port** field.
5. Click the **Advanced** tab.
6. Verify that **Cache Type** is set to **TRANSPARENT** and **Redirect** is set to **POLICY**.
7. Click **Create**, and then click **Close**. The Cache Redirection Virtual Servers pane displays the new virtual server.
8. Select the new cache redirection virtual server to display the details of its configuration.

## Bind policies to the cache redirection virtual server

September 21, 2020

Cache redirection policies are not automatically bound to the cache redirection virtual server. A policy based cache redirection virtual server cannot function unless you bind at least one policy to it.

## Bind policies to a cache redirection virtual server by using the CLI

At the command prompt, type:

```
1 - bind cr vserver <name> -policyName <string>
2 - show cr vserver [<name>]
```

### Example:

```
1 > bind cr vserver Vserver-CRD-1 -policyName bypass-cache-control
2 Done
3 > bind cr vserver Vserver-CRD-1 -policyName bypass-dynamic-url
4 Done
5 > bind cr vserver Vserver-CRD-1 -policyName bypass-urltokens
6 Done
7 > bind cr vserver Vserver-CRD-1 -policyName bypass-cookie
8 Done
9
10 > show cr vserver Vserver-CRD-1
11 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
12 State: UP ARP:DISABLED
13 Client Idle Timeout: 180 sec
14 Down state flush: ENABLED
15 Disable Primary Vserver On Down : DISABLED
16 Default: Content Precedence: RULE Cache:
17 TRANSPARENT
18 On Policy Match: ORIGIN L2Conn: OFF OriginUSIP: OFF
19 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
20 1) Cache bypass Policy: bypass-cache-control
21 2) Cache bypass Policy: bypass-dynamic-url
22 3) Cache bypass Policy: bypass-urltokens
23 4) Cache bypass Policy: bypass-cookie
24 Done
```

## Bind a user-defined policy to a cache redirection virtual server by using the GUI

1. Navigate to Traffic Management > Cache Redirection > Virtual Servers.
2. Click the virtual server that you want to configure, and click Open.
3. On the Policies tab, select type of the policy and then click Insert Policy.
4. Under Policy Name column, select the policy that you want to bind.
5. Click OK.

## Unbind a policy from a cache redirection virtual server

May 2, 2023



When you unbind a policy from the cache redirection virtual server, the NetScaler appliance no longer applies the policy when evaluating client requests.

### Unbind a policy from a cache redirection virtual server by using the command CLI

At the command prompt, type:

```
1 - unbind cr vserver <name> -policyName <string>
2 - show cr vserver [<name>]
```

#### Example:

```
1 unbind cr vserver Vserver-CR-1 -policyName bypass-non-get
2 > show cr vserver Vserver-CRD-1
3 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
4 State: UP ARP:DISABLED
5 Client Idle Timeout: 180 sec
6 Down state flush: ENABLED
7 Disable Primary Vserver On Down : DISABLED
8 Default: Content Precedence: RULE Cache:
9 On Policy Match: ORIGIN L2Conn: OFF OriginUSIP: OFF
10 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
11
12 1) Cache bypass Policy: bypass-cache-control
13 Done
```

### Unbind a user-defined policy from a cache redirection virtual server by using the GUI

1. Navigate to Traffic Management > Cache Redirection > Virtual Servers.
2. Click the virtual server that you want to configure, and then click Open.
3. On the Policies tab, under Policy Name, select the policy that you want to unbind.
4. Click Unbind Policy, and then click OK.

### Create a load balancing virtual server

May 2, 2023

The cache redirection virtual server on the NetScaler appliance can send requests to either a cache server farm, if the request is cacheable, or to the origin server farm if the request is not cacheable.

Each cache server is represented on the appliance by a service, which is bound to a load balancing virtual server that receives requests from the cache redirection virtual server and forwards those requests to the servers.

For details on configuring load balancing virtual servers and other configuration options, see [Load Balancing](#).

## Create a load balancing virtual server by using the CLI

At the command prompt, type the following commands to create a load balancing virtual server and verify the configuration:

```
1 - add lb vserver <name> <serviceType> [<IPAddress>] [<port>]
2 - show lb vserver [<name>]
```

### Example:

```
1 > add lb vserver Vserver-LB-CR HTTP 10.102.20.30 80
2 Done
3 > show lb vserver Vserver-LB-CR
4 Vserver-LB-CR (10.102.20.30:80) - HTTP Type: ADDRESS
5 State: DOWN
6 Last state change was at Fri Jul 2 08:47:52 2010
7 Time since last state change: 0 days, 00:00:08.470
8 Effective State: DOWN
9 Client Idle Timeout: 180 sec
10 Down state flush: ENABLED
11 Disable Primary Vserver On Down : DISABLED
12 Port Rewrite : DISABLED
13 No. of Bound Services : 0 (Total) 0 (Active)
14 Configured Method: LEASTCONNECTION
15 Mode: IP
16 Persistence: NONE
17 Vserver IP and Port insertion: OFF
18 Push: DISABLED Push VServer:
19 Push Multi Clients: NO
20 Push Label Rule: none
21 Done
```

## Create a load balancing virtual server by using the GUI

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, click Add.
3. In the Create Virtual Server (Load Balancing) dialog box, specify values for the following parameters as shown:
  - Name\*-name
  - IP Address\*- IPAddress
  - Port\*-port

\*A required parameter

4. In the Protocol list, select a supported protocol (for example, **HTTP**). If the virtual server is to receive traffic on a port other than the well-known port for the selected protocol, enter a new value in the Port field.
5. Click Create, and then click Close. The Load Balancing Virtual Servers pane displays the new virtual server.

## Configure an HTTP service

May 2, 2023

On the NetScaler appliance, a service represents a physical server on the network. In the transparent cache redirection configuration, the service represents the cache server. Cacheable requests are sent by the cache redirection virtual server to the load balancing virtual server, which in turn forwards each request to the correct service, which passes it on to the cache server.

### Configure an HTTP service by using the CLI

At the command prompt, type the following commands to create an HTTP service and verify the configuration:

```
1 - add service <name> <IP> <serviceType> <port> -cacheType <cacheType>
2 - show service [<name>]
```

#### Example:

```
1 > add service Service-HTTP-1 10.102.29.40 HTTP 80 -cacheType
 TRANSPARENT
2 Done
3 > show service Service-HTTP-1
4 Service-HTTP-1 (10.102.29.40:80) - HTTP
5 State: DOWN
6 Last state change was at Fri Jul 2 09:14:17 2010
7 Time since last state change: 0 days, 00:00:13.820
8 Server Name: 10.102.29.40
9 Server ID : 0 Monitor Threshold : 0
10 Max Conn: 0 Max Req: 0 Max Bandwidth: 0 kbits
11 Use Source IP: NO
12 Client Keepalive(CKA): NO
13 Access Down Service: NO
14 TCP Buffering(TCPB): NO
15 HTTP Compression(CMP): YES
16 Idle timeout: Client: 180 sec Server: 360 sec
```

```
17 Client IP: DISABLED
18 Cache Type: TRANSPARENT Redirect Mode:
19 Cacheable: NO
20 SC: OFF
21 SP: ON
22 Down state flush: ENABLED
23
24 1) Monitor Name: tcp-default
25 State: DOWN Weight: 1
26 Probes: 3 Failed [Total: 3 Current: 3]
27 Last response: Failure - Time out during TCP connection
28 establishment stage
29 Response Time: N/A
29 Done
```

## Modify or remove a service by using the CLI

- To modify a service, use the `set service` command, which is just like using the `add service` command, except that you enter the name of an existing service.
- To remove a service, use the `rm service` command, which accepts only the `<name>` argument.

## Add an HTTP service by using the GUI

1. Navigate to Traffic Management > Load Balancing > Services
  2. In the details pane, click Add.
  3. In the Create Service dialog box, specify values for the following parameters as shown:
    - Service Name\*—name
    - Server\*—IP
    - Port\*—port
- \*A required parameter
4. In the Protocol\* drop-down list, select a supported protocol (for example, **HTTP**).
  5. Click Create, and then click Close.

## Bind/unbind a service to/from a load balancing virtual server

September 21, 2020

You must bind a service to the load balancing virtual server. This enables the load balancer to forward the request to the server that the service represents. If your configuration changes, you can unbind a service from the load balancing virtual server.

### Bind a service to a load balancing virtual server by using the CLI

At the command prompt, type:

```
1 - bind lb vserver <name> <serviceName>
2 - show lb vserver [<name>]
```

#### Example:

```
1 > bind lb vserver vserver-LB-CR service-HTTP-1
2 Done
3 > show lb vserver Vserver-LB-CR
4 Vserver-LB-CR (10.102.20.30:80) - HTTP Type: ADDRESS
5 State: DOWN
6 Last state change was at Fri Jul 2 08:47:52 2010
7 Time since last state change: 0 days, 00:42:25.610
8 Effective State: DOWN
9 Client Idle Timeout: 180 sec
10 Down state flush: ENABLED
11 Disable Primary Vserver On Down : DISABLED
12 Port Rewrite : DISABLED
13 No. of Bound Services : 1 (Total) 0 (Active)
14 Configured Method: LEASTCONNECTION
15 Mode: IP
16 Persistence: NONE
17 Vserver IP and Port insertion: OFF
18 Push: DISABLED Push VServer:
19 Push Multi Clients: NO
20 Push Label Rule: none
21
22 1) Service-HTTP-1 (10.102.29.40: 80) - HTTP State: DOWN Weight: 1
23 Done
```

### Unbind a service from a load balancing virtual server by using the CLI

To unbind a service, use the `unbind lb vserver` command instead of `bind lb vserver`.

### Bind/unbind a service from a load balancing virtual server by using the GUI

1. Navigate to Traffic Management > Load Balancing > Virtual Servers
2. In the details pane, select the virtual server from which you want to bind/unbind the service, and then click Open.

3. On the Services tab, in the Active column, select/clear the check box next to the Service Name.
4. Click OK.

## Disable the use the proxy port setting for transparent caching

May 2, 2023

If the use source IP (USIP) option is disabled on a cache service configured on the NetScaler appliance, the appliance forwards client requests to the cache service by using a appliance-owned subnet IP (SNIP) address or mapped IP (MIP) address as the source IP address and a random port as the source port. The randomly selected port is called the proxy port.

However, if you want to configure a fully transparent cache (a cache configuration in which the cache service receives the client's IP address and port number), you must not only enable the USIP option, either globally or on the cache service, but also disable the Use Proxy Port setting, either globally or on the cache service. Disabling the Use Proxy Port setting enables the appliance to use the client's source port as the source port when it connects to the cache service, and ensures a fully transparent cache configuration.

For more information about configuring the Use Proxy Port option globally or on a service, see [Configuring the Source Port for Server-Side Connections](#).

## Assign a port range to the NetScaler appliance

May 2, 2023

Sharing of the client IP address may create a conflict that makes network devices, such as routers, cache servers, origin servers, and other NetScaler appliances, unable to determine the appliance, and therefore the client, to which the response should be sent.

A method to solve this problem is to assign a source port range to the NetScaler appliance. This allotment enables network devices to unambiguously identify the NetScaler appliance that sent the request.

### Assign a source port range to a NetScaler appliance by using the CLI

At the command prompt, type:

```
set ns param -crPortRange <startPortNumber-endPortNumber>
```

## Assign a source port range to a NetScaler appliance by using the appliance GUI

1. In the navigation pane, click System, and then click Settings.
2. In the Settings group, click the Change global system settings link.
3. In the Cache Redirection Port Range group, specify the port range for the appliance by typing a port number for Start Port and a port number for End Port.
4. Click OK.

## Enable load balancing virtual servers to redirect requests to cache

May 2, 2023

If a load balancing virtual server is configured to listen on a particular IP address and port combination, it takes precedence over the cache redirection virtual server for any requests destined for that address-port combination. Therefore, the cache redirection virtual server does not process those requests.

If you want to override this functionality and let the cache redirection virtual server decide whether the request should be served from the cache or not, configure the particular load balancing virtual server to be cacheable.

Such a configuration is typically used when an ISP uses a NetScaler appliance at the edge of its network and all traffic flows through the appliance.

## Enable load balancing virtual servers to redirect requests to the cache by using the CLI

At the command prompt, type:

```
1 - set lb vserver <name> [-cacheable (YES | NO)]
2 - show lb vserver [<name>]
```

### Example:

```
1 set lb vserver Vserver-LB-CR - cacheable YES
2 > show lb vserver vserver-LB-CR
3 Vserver-LB-CR (10.102.20.30:80) - HTTP Type: ADDRESS
4 State: DOWN
5 Last state change was at Fri Jul 2 08:47:52 2010
6 Time since last state change: 0 days, 01:05:51.510
7 Effective State: DOWN
8 Client Idle Timeout: 180 sec
9 Down state flush: ENABLED
10 Disable Primary Vserver On Down : DISABLED
11 Port Rewrite : DISABLED
12 No. of Bound Services : 1 (Total) 0 (Active)
```

```
13 Configured Method: LEASTCONNECTION
14 Mode: IP
15 Persistence: NONE
16 Cacheable: YES PQ: OFF SC: OFF
17 Vserver IP and Port insertion: OFF
18 Push: DISABLED Push VServer:
19 Push Multi Clients: NO
20 Push Label Rule: none
21
22 1) Service-HTTP-1 (10.102.29.40: 80) - HTTP State: DOWN Weight: 1
23 Done
```

For transparent cache redirection, the appliance intercepts all traffic and evaluates every request to determine whether it is cacheable. Non-cacheable requests are sent unchanged to the origin server.

When using transparent cache redirection, you may want to turn off cache redirection for load balancing virtual servers that always direct traffic to origin servers.

### Turn off caching for a load balancing virtual server by using the CLI

To turn off caching for a load balancing virtual, use the `unset lb vserver` command instead of `set lb vserver`. Specify a value of `NO` value for the **cacheable** parameter.

### Enable or disable load balancing virtual servers to redirect requests to the cache by using the GUI

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, select the virtual server from which you want to enable/disable the caching, and then click Open.
3. On the Advanced tab, select/clear Cache Redirection check box.
4. Click OK.

## Configure forward proxy redirection

May 2, 2023

A forward proxy is a single point of contact for a client or group of clients. In this configuration, the NetScaler appliance redirects non-cacheable requests to an origin server and redirects cacheable requests to either a forward proxy cache or a transparent cache.

When the appliance is configured as a forward proxy, users must modify their browsers so that the browser sends requests to the forward proxy instead of the destination servers.



A forward proxy cache redirection virtual server on the appliance compares the request with a policy for caching. If the request is not cacheable, the appliance queries a DNS load balancing virtual server for resolution of the destination, and then sends the request to the origin server. If the request is cacheable, the appliance forwards the request to a load balancing virtual server for the cache.

The appliance relies on a host domain name or IP address in the request's HOST header to determine the requested destination. If there is no HOST header in the request, the appliance inserts a HOST header based on the destination IP address in the request.

Typically, the NetScaler appliance acts as a forward proxy in an enterprise LAN. In such a configuration, the appliance resides at the edge of an enterprise LAN and intercepts client requests before they are fanned out to the WAN. Configuring the appliance in the forward proxy mode reduces traffic on the WAN.

To configure forward proxy cache redirection, first enable load balancing and cache redirection on the appliance. Then, configure a DNS load balancing virtual server and associated services. Also configure a load balancing virtual server and bind to it appropriate services for the cache. Configure a forward proxy cache redirection virtual server and bind the DNS and load balancing virtual servers to it. You must also configure caching policies and bind them to the cache redirection virtual server. To complete the setup, configure the client browsers to use the forward proxy.

For details on how to enable cache redirection and load balancing on the appliance, see [Enable cache redirection and load balancing](#).

For details on how to create a load balancing virtual server, see [Create a load balancing virtual server](#).

For details on how to configure services that represent the cache server, see [Configure an HTTP service](#).

For details on how to bind the service to a virtual server, see [Bind/unbind a service to/from a load balancing virtual server](#).

For details on how to create a forward proxy cache redirection server, see [Configure a cache redirection virtual server](#), and create a virtual server of type TRANSPARENT or FORWARD.

For details on binding cache redirection policies to the cache redirection virtual server, see [Configure a cache redirection policy](#).

## Create a DNS service

May 2, 2023

A DNS service is a representation, on the NetScaler appliance, of a physical DNS server in the network. A DNS load balancing virtual server sends DNS requests to the DNS server in the network through such a service.

### Create a DNS service by using the CLI

At the command line, type the following commands to create a DNS service and verify the configuration:

```
1 - add service <name> <IP> <serviceType> <port>
2 - show service [<name>]
```

#### Example:

```
1 add service Service-DNS-1 10.102.29.41 DNS 53
2 show service Service-DNS-1
3 Service-DNS-1 (10.102.29.41:53) - DNS
4 State: DOWN
5 Last state change was at Fri Jul 2 10:14:32 2010
6 Time since last state change: 0 days, 00:00:13.550
7 Server Name: 10.102.29.41
8 Server ID : 0 Monitor Threshold : 0
9 Max Conn: 0 Max Req: 0 Max Bandwidth: 0 kbits
10 Use Source IP: NO
11 Client Keepalive(CKA): NO
12 Access Down Service: NO
13 TCP Buffering(TCPB): NO
14 HTTP Compression(CMP): NO
15 Idle timeout: Client: 120 sec Server: 120 sec
16 Client IP: DISABLED
17 Cacheable: NO
18 SC: OFF
19 SP: OFF
20 Down state flush: ENABLED
21
22 1) Monitor Name: ping-default
23 State: DOWN Weight: 1
24 Probes: 3 Failed [Total: 3 Current: 3]
25 Last response: Failure - Probe timed out.
26 Response Time: 2000.0 millisec
27 Done
```

### Add a DNS service by using the GUI

1. Navigate to Traffic Management > Load Balancing > Services.
2. In the details pane, click Add.
3. In the Create Service dialog box, specify values for the following parameters as shown:

- Service Name\*—name
- Server\*—IP
- Port\*—port

\*A required parameter

1. In the Protocol\* drop down list, select a supported protocol (for example, **DNS**).
2. Click Create, and then click Close.

## Create a DNS load balancing virtual server

September 21, 2020

The DNS virtual server enables the forward proxy to perform DNS resolution before forwarding a client request to an origin server. The DNS load balancing virtual server is associated with the DNS service that represents the physical DNS server on the network.

### Create a DNS load balancing virtual server by using the CLI

At the command line, type the following commands to create a DNS load balancing virtual server and verify the configuration:

```
1 - add lb vserver <name> <serviceType>
2 - show lb vserver [<name>]
```

#### Example:

```
1 > add lb vserver Vserver-DNS-1 DNS
2 Done
3 > show lb vserver Vserver-DNS-1
4 Vserver-DNS-1 (0.0.0.0:0) - DNS Type: ADDRESS
5 State: DOWN
6 Last state change was at Fri Jul 2 10:32:28 2010
7 Time since last state change: 0 days, 00:00:08.10
8 Effective State: DOWN ARP:DISABLED
9 Client Idle Timeout: 120 sec
10 Down state flush: ENABLED
11 Disable Primary Vserver On Down : DISABLED
12 No. of Bound Services : 0 (Total) 0 (Active)
13 Configured Method: LEASTCONNECTION
14 Mode: IP
15 Persistence: NONE
16 Done
```

## Create a DNS load balancing virtual server by using the GUI

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, click Add.
3. In the Create Virtual Server (Load Balancing) dialog box, in the Name box, type a name for the virtual server.
4. In the Protocol\* drop down list, select a supported protocol (for example, **DNS**).
5. Click Create, and then click Close. The DNS Virtual Servers pane displays the new virtual server.

## Bind the DNS service to the virtual server

September 21, 2020

For the DNS server to respond to DNS requests, the service representing the DNS server must be bound to the DNS virtual server.

## Bind the DNS service to the load balancing virtual server by using the CLI

At the command prompt, type the following commands to bind the DNS service to the load balancing virtual server and verify the configuration:

```
1 - bind lb vserver <name> <serviceName>
2 - show lb vserver <name>
```

### Example:

```
1 > bind lb vserver Vserver-DNS-1 Service-DNS-1
2 Done
3 > show lb vserver Vserver-DNS-1
4 Vserver-DNS-1 (0.0.0.0:0) - DNS Type: ADDRESS
5 State: DOWN
6 Last state change was at Fri Jul 2 10:32:28 2010
7 Time since last state change: 0 days, 00:12:16.80
8 Effective State: DOWN ARP:DISABLED
9 Client Idle Timeout: 120 sec
10 Down state flush: ENABLED
11 Disable Primary Vserver On Down : DISABLED
12 No. of Bound Services : 1 (Total) 0 (Active)
13 Configured Method: LEASTCONNECTION
14 Mode: IP
15 Persistence: NONE
16
17 1) Service-DNS-1 (10.102.29.41: 53) - DNS State: DOWN Weight: 1
18 Done
19 >
```

## Unbind a DNS service from the load balancing virtual server by using the CLI

Use the `unbind lb vserver` command instead of `bind lb vserver`.

## Bind/Unbind a DNS service to/from a load balancing virtual server by using the GUI

1. Navigate to Traffic Management > Load Balancing > Virtual Servers
2. In the details pane, select the virtual server to/from which you want to bind/unbind the DNS service, and then click Open.
3. On the Services tab, in the Active column, select/clear the check box next to the Service Name.
4. Click OK.

## Configure a client web browser to use a forward proxy

May 2, 2023

When you configure the NetScaler appliance as forward proxy cache redirection virtual server in the network, you must configure the client Web browser to send requests to the forward proxy. Typically, when you use a forward proxy, the only route to the servers in the network is through the forward proxy.

Refer the documentation for your browser to configure the browser to use a forward proxy. Specify the IP address and port number of the forward proxy cache redirection virtual server for this configuration.

## Configure reverse proxy redirection

February 14, 2023

A reverse proxy resides in front of one or more web servers and shields the origin server from client requests. Often, a reverse proxy cache is a front-end for all client requests to a server. An administrator assigns a reverse proxy cache to a specific origin server. The reverse proxy cache is unlike transparent and forward proxy caches, which cache frequently requested content for all requests to any origin server, and the choice of a server is based on the request.

Unlike a transparent proxy cache, the reverse proxy cache has its own IP address and can replace destination domains and URLs in a non-cacheable request with new destination domains and URLs.

You can deploy reverse proxy cache redirection at the origin-server side or at the edge of a network. When deployed at the origin server, the reverse proxy cache redirection virtual server is a front-end for all requests to the origin server.

In the reverse proxy mode, when the appliance receives a request, the cache redirection virtual server evaluates the request and forwards it to either a load balancing virtual server for the cache or a load balancing virtual server for the origin. The incoming request can be transformed by changing the host header or the host URL before it is sent to the back-end server.

To configure reverse proxy cache redirection, first enable cache redirection and load balancing. Then, configure a load balancing virtual server and services to send cacheable requests to the cache servers. Also configure a load balancing virtual server and associated services for the origin servers. Then, configure a reverse proxy cache redirection virtual server and bind relevant cache redirection policies to it. Finally, configure mapping policies and bind them to the reverse proxy cache redirection virtual server.

The mapping policies have an associated action that enables the cache redirection virtual server to forward any non-cacheable request to the load balancing virtual server for the origin.

Be sure to create the default cache server destination.

For details on how to enable cache redirection and load balancing on the appliance, see [Enable cache redirection and load balancing](#).

For details on how to create a load balancing virtual server, see [Create a load balancing virtual server](#).

For details on how to configure services that represent the cache server, see [Configure an HTTP service](#).

For details on how to bind the service to a virtual server, see [Bind/unbind a service to/from a load balancing virtual server](#).

For details on how to create a reverse proxy cache redirection server, see [Configure a cache redirection virtual server](#), and create a virtual server of type REVERSE.

For details on binding built-in cache redirection policies to the cache redirection virtual server, see [Bind policies to the cache redirection virtual server](#).

## **Configure mapping policies**

If an incoming request is non-cacheable, the reverse-proxy cache redirection virtual server replaces the domain and URL in the request with the domain and URL of a target origin server and forwards the request to the load balancing virtual server for the origin.

A mapping policy enables the reverse proxy cache redirection virtual server to replace the destination domain and URL and forward the request to the load balancing virtual server for the origin.

A mapping policy must first translate the domain and the URL, and then pass the request on to the origin load balancing virtual server.

A mapping policy can map a domain, a URL prefix, and a URL suffix, as follows:

- **Domain mapping:** You can map a domain without a prefix or suffix. The domain mapping is the default mapping for the virtual server (for example, mapping `www.mycompany.com` to `www.myrealcompany.com`).
- **Prefix mapping:** You can replace a specified pattern prefixed as part of the URL (for example, mapping `www.mycompany.com/sports/index.html` to `www.mycompany.com/news/index.html`).
- **Suffix mapping:** You can replace the file suffix in the URL (for example, mapping `www.mycompany.com/sports/index.html` to `www.mycompany.com/sports/index.asp`).

The source and the destination strings being mapped must be similar. If you specify a source domain, you must specify a destination domain, and if you specify a source suffix, you must specify a destination suffix. Similarly, if you specify an exact URL from the source, the target URL must also be an exact URL.

Once you configure mapping policies for the reverse proxy mode, you must bind them to the cache redirection virtual server.

You can use combinations of the source URL, target URL, and source and target domains to configure all three types of domain mapping.

### Configure a mapping policy for reverse proxy mode by using the CLI

At the command prompt, type the following command to add a policy map and verify the configuration:

```
1 - add policy map <mapPolicyName> -sd <string> [-su <string>] [-td <string>] [-tu <string>]
2 - show policy map [<mapPolicyName>]
```

#### Example:

The following command maps a domain in a client request to a target domain:

```
1 > add policy map myMappingPolicy -sd www.mycompany.com -td www.myrealcompany.com
2 Done
3 > show policy map myMappingPolicy
4 1) Name: myMappingPolicy
5 Source Domain: www.mycompany.com Source Url:
6 Target Domain: www.myrealcompany.com Target Url:
7 Done
```

Following is an example of mapping a URL suffix to a different URL suffix:

```

1 > add policy map myOtherMappingPolicy -sd www.mycompany.com -td www.
 myrealcompany.com -su /news.html -tu /realnews.html
2 Done
3 > show policy map myOtherMappingPolicy
4 1) Name: myOtherMappingPolicy
5 Source Domain: www.mycompany.com Source Url: /news.html
6 Target Domain: www.myrealcompany.com Target Url: /realnews.
 html
7 Done

```

### Configure a mapping policy for reverse proxy mode by using the GUI

1. Navigate to **Traffic Management > Cache Redirection > Map Policies**.
2. In the details pane, click Add.
3. In the Create Map Policy dialog box, specify values for the following parameters as shown:

- Name\*- mapPolicyName
- Source Domain\*-sd
- Target Domain\*-td
- Source URL-su
- Target URL-tu

\*A required parameter

4. Click Create, and then click Close. The Map pane displays the new mapping policy.

### Bind the mapping policy to the cache redirection virtual server by using the CLI

At the command prompt, type the following commands to bind the mapping policy to the cache redirection virtual server and verify the configuration:

```

1 - bind cr vserver <name> -policyName <string> [<targetVserver>]
2 - show cr vserver <name>

```

#### Example:

```

1 > bind cr vserver Vserver-CRD-3 -policyName myMappingPolicy Vserver-LB-
 CR
2 Done
3 > show cr vserver Vserver-CRD-3
4 Vserver-CRD-3 (10.102.29.50:88) - HTTP Type: CONTENT
5 State: UP
6 Client Idle Timeout: 180 sec
7 Down state flush: ENABLED
8 Disable Primary Vserver On Down : DISABLED

```



|    |                         |                          |                     |
|----|-------------------------|--------------------------|---------------------|
| 9  | Default: Vserver-LB-CR  | Content Precedence: RULE | Cache:              |
|    | REVERSE                 |                          |                     |
| 10 | On Policy Match: ORIGIN | L2Conn: OFF              | OriginUSIP: OFF     |
| 11 | Redirect: POLICY        | Reuse: ON                | Via: ON ARP: OFF    |
| 12 |                         |                          |                     |
| 13 | 1) Policy:              | Target: Vserver-LB-CR    | Priority: 0 Hits: 0 |
| 14 | 1) Map: myMappingPolicy | Target: Vserver-LB-CR    |                     |
| 15 | Done                    |                          |                     |

### Bind the mapping policy to the cache redirection virtual server by using the GUI

1. Navigate to **Traffic Management > Cache Redirection > Virtual Servers**.
2. In the details pane, select the virtual server from which you want to bind the mapping policy, and then click **Open**.
3. In the **Configure Virtual Server**(Cache Redirection), on the **Policies** tab, select **Map**, and then click **Insert Policy**.
4. In the **Policy Name** column, select the policy from the drop-down list.
5. In the **Target** column, click the down arrow, and then select the virtual server from the drop-down list.
6. Click **OK**.

## Selective cache redirection

May 2, 2023

Selective cache redirection sends requests for particular types of content, for example, images, to one cache server or group of cache servers and sends other types of content to a different cache server or group of cache servers. You can configure advanced cache redirection in transparent, reverse proxy, or forward proxy modes.

In selective cache redirection, the NetScaler appliance intercepts a client request and forwards non-cacheable requests to the original destination in the client request. For cacheable requests, the appliance sends the requests to the destination cache server that can serve content of a specific content type.

Selective cache redirection involves configuring content switching policies in addition to cache redirection policies. The appliance first evaluates the cache redirection policies that are bound to the cache redirection virtual server. If a request matches a cache redirection policy, the cache redirection virtual server sends the request to the origin server or a load balancing virtual server for the origin. If no cache redirection policies match the request, the appliance evaluates the content switching policies bound to the cache redirection virtual server. If a content switching policy matches the request,

the cache redirection virtual server redirects the request to a load balancing virtual server for the cache.

To configure selective cache redirection, first enable cache redirection, load balancing, and content switching on the NetScaler appliance. Then, configure a load balancing virtual server for the cache and an associated HTTP service. After this, configure a cache redirection virtual server and bind both the cache redirection and content switching policies to it. Once you have bound the policies, you can configure the virtual server to give precedence to either rule based or URL based content-switching policies.

When configured for transparent mode cache redirection in an edge deployment topology, the appliance sends all cacheable HTTP traffic to a transparent cache farm. Clients access the Internet through the appliance, which is configured as a Layer 4 switch that receives traffic on port 80.

The appliance can direct requests for images (for example, .png and .jpg files) to one server in the transparent cache farm, and all other requests for static content to other servers in the farm. For this configuration, you configure content switching policies to send images to the image cache and send all other cacheable content to a default cache.

**Note:** The configuration described here is for transparent selective cache redirection. Therefore, it does not require a load balancing virtual server for the origin, as would a reverse proxy configuration.

To configure this type of selective cache redirection, first enable cache redirection, load balancing, and content switching. Then, configure a load balancing virtual server for the cache and configure an associated HTTP service. Then, configure a cache redirection virtual server and create and bind both cache redirection and content switching policies to this virtual server.

For details on how to enable cache redirection and load balancing on the appliance, see [Enable cache redirection and load balancing](#).

## Enable content switching

June 29, 2021

To configure selective cache redirection, after you enable both the load balancing and cache redirection features on the appliance, you must enable content switching.

### Enable content switching by using the CLI

At the command prompt, type:

```

1 - enable ns feature CS
2
3 - show ns feature

```

**Example:**

```

1 > enable ns feature cs
2 Done
3 > show ns feature
4
5 Feature Acronym Status
6 ----- -
7 1) Web Logging WL ON
8 2) Surge Protection SP ON
9 3) Load Balancing LB ON
10 4) Content Switching CS ON
11 5) Cache Redirection CR ON
12 ...
13 ...
14 ...
15 23) appliance Push push OFF
16 Done

```

**Enable cache redirection and load balancing by using the GUI**

1. In the navigation pane, expand **System**, and then click **Settings**.
2. In the details pane, under Modes and Features, click **Configure Basic Features**.
3. In **Configure Basic Features** dialog box, select the check box next to the **Content Switching**, and then click **OK**.
4. In Enable/Disable Features? dialog box, click Yes.

**Configure a load balancing virtual server for the cache**

May 2, 2023

Create a load balancing virtual server and an HTTP service for each type of cache server that will be used. For example, if you want to serve JPEG files from one cache server and GIF files from another cache server, and use a third cache server for the rest of the content, create an HTTP service and virtual server for each of the three types of cache servers. Then bind each service to its respective virtual server.

For details on how to create a load balancing virtual server, see [Create a load balancing virtual server](#).

For details on how to configure services that represent the cache server, see [Configure an HTTP service](#).

For details on how to bind the service to a virtual server, see [Bind/unbind a service to/from a load balancing virtual server](#).

For details on how to create a transparent proxy cache redirection server, see [Configure a cache redirection virtual server](#), and create a virtual server of type TRANSPARENT.

For details on binding built-in cache redirection policies to the cache redirection virtual server, see [Bind policies to the cache redirection virtual server](#).

### **Configure a cache redirection policy for a specific type of content**

To identify requests that contain a .png or .jpeg extension as cacheable, you configure a cache redirection policy and bind it to the cache redirection virtual server.

**Note:** If a request matches a policy, the NetScaler appliance forwards it to the origin server. As a result, in the following procedure, you configure policies to match requests that do *not* have “.png” or “.jpeg” extensions.

To configure cache redirection for a specific type of content, configure a policy that uses a simple expression, as described in [Configure a cache redirection policy](#).

### **Configure policies for content switching**

October 16, 2023

You must create a content switching policy to identify specific types of content to be directed to one server or farm and identify other types of content to serve from another cache server or farm. For example, you can configure a policy to determine the location for image files with .png and .jpeg extensions.

Before creating the content switching policy you must define a content switching action to describe which load balancing virtual server to select. This action is used in the content switching policy.

After defining the content switching policy, you bind it to a content switching virtual server and specify a load balancing virtual server. Requests that match the policy are forwarded to the named load balancing virtual server. Requests that do not match the content switching policy are forwarded to the default load balancing virtual server for the cache.

For more details about the content switching feature and configuring content switching policies, see [Content switching](#).

You must first create the content switching policy and then bind it to the content switching virtual server.

### Create a content switching policy by using the command CLI

At the command line, type:

```
1 - add cs action <name> [-targetLBVserver <string> | -targetVserver <string> | -targetVserverExpr <expression>]
2 - add cs policy <policyName> -rule <expression> [-action <string>]
3 - show cs policy [<policyName>]
```

### Examples:

```
1 > add cs action action-CS-JPEG -targetLBVserver lbcachejpeg
2 Done
3 > show cs action action-CS-JPEG
4 Name: action-CS-JPEG
5 Target LB Vserver: lbcachejpeg
6 Hits: 0
7 Undef Hits: 0
8 Action Reference Count: 0
9 Done
10
11 > add cs policy policy-CS-JPEG -rule 'HTTP.REQ.URL.SUFFIX == "jpeg"' -
 action action-CS-JPEG
12 Done
13 > show cs policy policy-CS-JPEG
14 Policy: policy-CS-JPEG Rule: HTTP.REQ.URL.SUFFIX == "jpeg"
15 Action: action-CS-JPEG
16
17 HITS: 0
18 Done
19 >
20
21 > add cs action action-CS-GIF -targetLBVserver lbcachegif
22 Done
23 > show cs action action-CS-GIF
24 Name: action-CS-GIF
25 Target LB Vserver: lbcachegif
26 Hits: 0
27 Undef Hits: 0
28 Action Reference Count: 0
29
30 Done
31 >
32 > add cs policy policy-CS-GIF -rule 'HTTP.REQ.URL.SUFFIX == "gif"' -
 action action-CS-GIF
33 Done
34 > show cs policy policy-CS-GIF
35 Policy: policy-CS-GIF Rule: HTTP.REQ.URL.SUFFIX == "gif"
```

```
36 Action: action-CS-GIF
37
38 Hits: 0
39 Done
```

## Create a rule-based content switching policy by using the GUI

1. Navigate to **Traffic Management > Content Switching > Policies**.
2. In the details pane, click **Add**.
3. In the **Create Content Switching Policy** dialog box, in the **Name** text box, type a name for the policy.
4. Click **Add** in the **Action** tab to create a content switch action. Or select the available action from the drop-down list.
  - Type a name for the content switch action in the **Name** tab.
  - Choose the virtual server or Expression from the drop-down list:
    - **Loadbalancing Virtual Server**
    - **Global Server Loadbalancing Virtual Server**
    - **Authentication Virtual Server**
    - **NetScaler Gateway Virtual Server**
    - **Expression**
  - Click **Add** or **Edit** to configure the **Target Load Balancing Virtual Server**.
5. Click **Add** in the **Log Action** tab to create an audit message action. Or select the available audit message action from the drop-down list.
6. In the **Expression** area, select the required type of expression.
7. In the **Expression Editor** dialog box, choose the expression syntax that you want to use.

In the **Expression** area click **Evaluate** to evaluate an expression evaluator. The evaluator evaluates the expression that you entered, to verify that it is valid, and displays an analysis of the expression's effect in the **Result** area.
8. Enter your policy expressions.

For information about using the advanced syntax, see [Configure advanced policy expression: Get started](#).
9. Click **Create**. The policy you created appears in the **Content Switching Policies** pane.

## Bind the content switching policy to a cache redirection virtual server by using the CLI

At the command prompt, type the following commands to bind the content switching policy to a cache redirection virtual server and verify the configuration:

```

1 - bind cs vserver <name> (-lbvserver <string> | -vServer <string> (-
 policyName <string> [-targetLBVserver <string>] [-priority<
 positive_integer>] [-gotoPriorityExpression <expression>] [-type <
 type>] [-invoke (<labelType> <labelName>)])
2
3 - show cs vserver [<name>]

```

### Example:

```

1 > bind cs vserver Vserver-CR-1 -policyName Policy-CS-JPEG -priority 100
2 Done
3 > bind cs vserver Vserver-CR-1 -policyName Policy-CS-GIF -priority 200
4 Done
5 > show cs vserver Vserver-CR-1
6 Vserver-CR-1 (10.102.29.60:80) - HTTP Type: CONTENT
7 State: UP
8 Last state change was at Fri Jul 2 12:53:45 2010
9 Time since last state change: 0 days, 00:00:58.920
10 Client Idle Timeout: 180 sec
11 Down state flush: ENABLED
12 Disable Primary Vserver On Down : DISABLED
13 Appflow loggig: ENABLED
14 Port Rewrite : DISABLED
15 State Update: DISABLED
16 Default: Content Precedence: RULE
17 Cacheable: YES
18 Vserver IP and Port insertion: OFF
19 L2Conn: OFF Case Sensitivity: ON
20 Authentication: OFF
21 401 Based Authentication: OFF
22 Push: DISABLED Push VServer:
23 Push Label Rule: none
24 HTTP Redirect Port: 0 Dtls: OFF
25 Persistence: NONE
26 Listen Policy: NONE
27 IcmpResponse: PASSIVE
28 RHlstate: PASSIVE
29 Traffic Domain: 0
30
31 1) Content-Switching Policy: Policy-CS-JPEG Priority: 100 Hits
32 : 0
33 2) Content-Switching Policy: Policy-CS-GIF Priority: 200 Hits:
34 0
35 Done
36 >

```

## Bind the content switching policy to a cache redirection virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**.
2. In the details pane, select the virtual server for which you want to bind the policy (for example, **Vserver-CS-1**), and then click **Edit**.
3. In the **Content Switching Virtual Server** dialog box, on the **Policies** tab under **Advanced Settings**, click **Add** icon, and then choose policy and choose type from **Choose Policy** and **Choose Type** drop-down list.
4. Click **Continue**.
5. In the **Policy Binding** tab, select the available policies from the list and then click **Select** or click **Add** to create a new policy and then click **Create**.
6. Click **Bind** to bind the content switching policy to the virtual server.
7. Click **Done**

## Configure precedence for policy evaluation

September 21, 2020

You can configure a content switching policy based on either a rule, which is a generic configuration to accommodate various content types, or a URL, which is more specific and defines exactly the type of content that has to be sent to a particular cache server. Essentially, the same content can be defined by either a rule based policy or a URL based policy.

Once you bind content switching policies of either type to a cache redirection virtual server, you can configure the virtual server to give precedence to either rule based or URL based policies. This will, in turn, decide which servers the particular requests are directed to.

To configure precedence for policy evaluation, use the precedence parameter, which specifies the type of policy (URL or RULE) that takes precedence on the content redirection virtual server.

Possible values: RULE, URL

Default value: RULE

## Configure precedence for policy evaluation by using the CLI

At the command prompt, type the following commands to configure precedence for policy evaluation and verify the configuration:



```
1 - set cr vserver <name> [-precedence (RULE | URL)]
2 - show cr vserver <name>
```

**Example:**

```
1 > set cr vserver Vserver-CRD-1 -precedence URL
2 Done
3 > show cr vserver Vserver-CRD-1
4 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
5 State: UP ARP:DISABLED
6 Client Idle Timeout: 180 sec
7 Down state flush: ENABLED
8 Disable Primary Vserver On Down : DISABLED
9 Default: Content Precedence: URL Cache: TRANSPARENT
10 On Policy Match: ORIGIN L2Conn: OFF OriginUSIP: OFF
11 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
12
13 1) Cache bypass Policy: bypass-cache-control
14 2) Cache bypass Policy: Policy-CRD
15 Done
16 >
```

**Configure precedence for policy evaluation by using the GUI**

1. Navigate to Traffic Management > Content Switching > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure precedence, (for example, **Vserver-CS-1**), and then click Open.
3. In the Configure Virtual Server (Content Switching) dialog box, on the Advanced tab, next to Precedence, click Rule or URL, and then click OK.

**Administer a cache redirection virtual server**

September 21, 2020

To administer a cache redirection virtual server, you need to view cache redirection statistics. You might need to enable or disable cache redirection servers, or direct policy hits to the cache instead of the origin. Administrative tasks also include backing up a cache redirection virtual server and managing client connections.

## View cache redirection virtual server statistics

September 21, 2020

You can view properties of a cache redirection virtual server and statistics on the traffic that has passed through a cache redirection virtual server. You can also view the cache redirection virtual servers and policies that you have bound to load balancing virtual servers.

To view statistics for a specific cache redirection virtual servers, use the name parameter to specify the name of the virtual server for which statistics will be displayed. Otherwise, statistics for all cache redirection virtual servers are displayed. Maximum Length: 127

### View statistics for a cache redirection virtual server by using the CLI

At the command prompt, type:

```
stat cr vserver [<name>]
```

#### Example:

```

1 > stat cr vserver Vserver-CRD-1
2
3 Vserver Summary
4
5 Vserver Summary
6
7 VServer Stats:
8
9 Requests
10 Responses
11 Request bytes
12 Response bytes
13
14 Done
15 >

```

|                 | IP      | port | Protocol | State |
|-----------------|---------|------|----------|-------|
| Vserver Summary | 0.0.0.0 | 80   | HTTP     | UP    |

|                | Rate (/s) |
|----------------|-----------|
| Requests       | 0         |
| Responses      | 0         |
| Request bytes  | 0         |
| Response bytes | 0         |

### View statistics for a cache redirection virtual server by using the GUI

1. Navigate to Traffic Management > Cache Redirection > Virtual Servers
2. In the details pane, select the virtual server for which you want to view statistics, (for example, **Vserver-CRD-1**), and then click Statistics.

Omit the server name to display basic statistics for all cache redirection virtual servers. Include the server name to display detailed statistics for that virtual server, including number and size of requests and responses that pass through the virtual server

### **View the statistics of a cache redirection virtual server by using the monitoring and dashboard utilities**

1. To view the statistics by using the monitoring utilities, click the Monitoring tab.
2. In the Select Group drop-down menu, choose CR Virtual Servers. A list of cache redirection virtual servers appears.
3. To view the statistics by using the dashboard utilities, click the Dashboard tab.
4. Click Applet Client or Web Start Client next to Statistical Utility.
5. In the Select Group drop-down menu, choose CR Virtual Servers. The dashboard displays summary statistics for the cache redirection virtual servers.
6. To see a chart of virtual server activity, click Chart. A graphical representation of the virtual server statistics appears.

### **Enable or disable a cache redirection virtual server**

May 2, 2023

When you create a cache redirection virtual server, it is enabled by default. If you disable a cache redirection virtual server, its state changes to OUT OF SERVICE and it stops redirecting cacheable client requests. However, the NetScaler appliance continues to respond to ARP and ping requests for the IP address of this virtual server.

### **Enable or disable a cache redirection virtual server by using the CLI**

At the command line, type one of the following commands:

```
1 - enable cr vserver <name>
2 - show cr vserver <name>
3 - disable cr vserver <name>
4 - show cr vserver <name>
```

#### **Examples:**

```
1 > enable cr vserver Vserver-CRD-1
2 Done
3 > show cr vserver Vserver-CRD-1
4 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
```

```
5 State: UP ARP:DISABLED
6 Client Idle Timeout: 180 sec
7 Down state flush: ENABLED
8 Disable Primary Vserver On Down : DISABLED
9 Default: Content Precedence: URL Cache: TRANSPARENT
10 On Policy Match: ORIGIN L2Conn: OFF OriginUSIP: OFF
11 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
12
13 1) Cache bypass Policy: bypass-cache-control
14 2) Cache bypass Policy: Policy-CRD
15 Done
16 >
17
18 > disable cr vsver Vserver-CRD-1
19 Done
20 > show cr vsver Vserver-CRD-1
21 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
22 State: OUT OF SERVICE ARP:DISABLED
23 Client Idle Timeout: 180 sec
24 Down state flush: ENABLED
25 Disable Primary Vserver On Down : DISABLED
26 Default: Content Precedence: URL Cache: TRANSPARENT
27 On Policy Match: ORIGIN L2Conn: OFF OriginUSIP: OFF
28 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
29
30 1) Cache bypass Policy: bypass-cache-control
31 2) Cache bypass Policy: Policy-CRD
32 Done
33 >
```

## Enable or disable a cache redirection virtual server by using the GUI

1. Navigate to Traffic Management > Cache Redirection > Virtual Servers.
2. In the navigation pane, expand Cache Redirection, and then click Virtual Servers.
3. In the details pane, select the virtual server that you want to enable or disable, (for example, **Vserver-CRD-1**), and then click Statistics.
4. In the Proceed dialog box, click Yes.

## Direct policy requests to cache instead of origin web server

May 2, 2023

By default, when a request matches a policy, the NetScaler appliance forwards the request either to the origin server directly, or to a load balancing virtual server for the origin, depending on how you have configured cache redirection.

You can change the default behavior so that when a request matches a policy, the request is forwarded to a load balancing virtual server for the cache.

To change the destination for a policy request to the origin or the cache, use the `onPolicyMatch` parameter, which specifies where to send requests that match the cache redirection policy.

The valid options are:

1. `CACHE` - Directs all matching requests to the cache.
2. `ORIGIN` - Directs all matching requests to the origin server.

**Note:**

For this option to work, you must select the cache redirection type as `POLICY`.

Possible values: `CACHE`, `ORIGIN`

Default value: `ORIGIN`

### Change the destination for a policy request to the origin or the cache by using the CLI

At the command prompt, type the following commands to change the destination for a policy hit and verify the configuration:

```
1 set cr vserver <name> [-onPolicyMatch (ORIGIN | CACHE)]
```

```
1 show cr vserver <name>
```

**Example:**

```
1 > set cr vserver Vserver-CRD-1 -onPolicyMatch CACHE
2 Done
3 > show cr vserver Vserver-CRD-1
4 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
5 State: UP ARP:DISABLED
6 Client Idle Timeout: 180 sec
7 Down state flush: ENABLED
8 Disable Primary Vserver On Down : DISABLED
9 Default: Content Precedence: URL Cache: TRANSPARENT
10 On Policy Match: CACHE L2Conn: OFF OriginUSIP: OFF
11 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
12
13 1) Cache bypass Policy: bypass-cache-control
14 2) Cache bypass Policy: Policy-CRD
15 Done
```

### Change the destination for a policy hit to the origin or the cache by using the GUI

1. Navigate to **Traffic Management > Cache Redirection > Virtual Servers**.

2. In the details pane, select the virtual server for which you want to change the destination for a policy request, (for example, **Vserver-CRD-1**), and then click Open.
3. In the **Configure Virtual Server (Cache Redirection)** dialog box, click **Advanced**.
4. Select **CACHE** or **ORIGIN** from the **Redirect To** drop-down list.
5. Click **OK**.

## Back up a cache redirection virtual server

March 1, 2021

Cache redirection can fail if the primary virtual server fails, or if it is unable to handle excessive traffic. You can specify a backup virtual server to take over the processing of traffic when the primary virtual server fails.

To specify a backup cache redirection virtual server, use the backupVServer parameter, which specifies Backup Virtual Server. Maximum Length: 127

### Specify a backup cache redirection virtual server by using the CLI

At the command prompt, type the following commands to specify a backup cache redirection virtual server and verify the configuration:

```
1 - set cr vserver <name> [-backupVServer <string>]
2 - show cr vserver <name>
```

#### Example:

```
1 > set cr vserver Vserver-CRD-1 -backupVServer Vserver-CRD-2
2 Done
3 > show cr vserver Vserver-CRD-1
4 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
5 State: UP ARP:DISABLED
6 Client Idle Timeout: 180 sec
7 Down state flush: ENABLED
8 Disable Primary Vserver On Down : DISABLED
9 Default: Content Precedence: URL Cache: TRANSPARENT
10 On Policy Match: CACHE L2Conn: OFF OriginUSIP: OFF
11 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
12 Backup: Vserver-CRD-2
13
14 1) Cache bypass Policy: bypass-cache-control
15 2) Cache bypass Policy: Policy-CRD
16 Done
```

## Specify a backup cache redirection virtual server by using the GUI

1. Navigate to **Traffic Management > Cache Redirection > Virtual Servers**.
2. In the details pane, select the virtual server for which you want to change the destination for a policy request, (for example, **Vserver-CRD-1**), and then click Open.
3. In the Configure Virtual Server (Cache Redirection) dialog box, select the Advanced tab.
4. In the Backup Virtual Server drop-down list, select the virtual server.
5. Click OK.

## Manage client connections for a virtual server

May 2, 2023

You can configure timeouts on a cache redirection virtual server so that client connections are not kept open indefinitely. You can also insert Via headers in requests. To possibly reduce network congestion, you can reuse open TCP connections. You can enable or disable delayed cleanup of cache redirection virtual server connections.

You can configure the appliance to send ICMP responses to PING requests according to your settings. On the IP address corresponding to the virtual server, set the ICMP RESPONSE to VSVR\_CNTRL, and on the virtual server, set the ICMP VSERVER RESPONSE.

The following settings can be made on a virtual server:

- When you set ICMP VSERVER RESPONSE to PASSIVE on all virtual servers, appliance always responds.
- When you set ICMP VSERVER RESPONSE to ACTIVE on all virtual servers, appliance responds even if one virtual server is UP.
- When you set ICMP VSERVER RESPONSE to ACTIVE on some and PASSIVE on others, appliance responds even if one virtual server set to ACTIVE is UP.

This document includes the following information:

- Configure client timeout
- Insert Via headers in the requests
- Reuse TCP connections
- Configure delayed connection cleanup

## Configure client timeout

You can specify expiration of client requests by setting a timeout value for the cache redirection virtual server. The timeout value is the number of seconds for which the cache redirection virtual server waits to receive a response for the client request.

To configure a time-out value, use the `cltTimeout` parameter, which specifies the time, in seconds, after which the NetScaler appliance closes any idle client connections. The default value is 180sec for HTTP/SSL-based services and 9000sec for TCP-based services.

### Configure client timeout by using the CLI

At the command prompt, type the following commands to configure client timeout and verify the configuration:

```
1 - set cr vserver <name> [-cltTimeout <secs>]
2 - show cr vserver <name>
```

#### Example:

```
1 > set cr vserver Vserver-CRD-1 -cltTimeout 6000
2 Done
3 > show cr vserver Vserver-CRD-1
4 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
5 State: UP ARP:DISABLED
6 Client Idle Timeout: 6000 sec
7 Down state flush: ENABLED
8 Disable Primary Vserver On Down : DISABLED
9 Default: Content Precedence: URL Cache: TRANSPARENT
10 On Policy Match: CACHE L2Conn: OFF OriginUSIP: OFF
11 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
12 Backup: Vserver-CRD-2
13
14 1) Cache bypass Policy: bypass-cache-control
15 2) Cache bypass Policy: Policy-CRD
16 Done
```

### Configure client timeout by using the GUI

1. Navigate to Traffic Management > Cache Redirection > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure client timeout, (for example, **Vserver-CRD-1**), and then click Open.
3. In Configure Virtual Server (Cache Redirection) dialog box, select the Advanced tab.
4. In the Client Time-out(secs) text box, enter the time-out value in seconds.
5. Click OK.



## Insert Via headers in the requests

A Via header lists the protocols and recipients between the start and end points for a request or a response and informs the server of proxies through which the request was sent. You can configure the cache redirection virtual server to insert a Via header in each HTTP request. The via parameter is enabled by default when you create a cache redirection virtual server.

To enable or disable Via-header insertion in client requests, use the via parameter, which specifies the state of the system in inserting a Via header in the HTTP requests.

Possible values: ON, OFF

Default value: ON

## Enable or disable Via-header insertion in client requests by using the CLI

At the command prompt, type:

```
1 - set cr vserver <name> [-via (ON|OFF)]
2 - show cr vserver <name>
```

### Example:

```
1 > set cr vserver Vserver-CRD-1 -via ON
2 Done
3 > show cr vserver Vserver-CRD-1
4 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
5 State: UP ARP:DISABLED
6 Client Idle Timeout: 6000 sec
7 Down state flush: ENABLED
8 Disable Primary Vserver On Down : DISABLED
9 Default: Content Precedence: URL Cache: TRANSPARENT
10 On Policy Match: CACHE L2Conn: OFF OriginUSIP: OFF
11 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
12 Backup: Vserver-CRD-2
13
14 1) Cache bypass Policy: bypass-cache-control
15 2) Cache bypass Policy: Policy-CRD
16 Done
17 >
```

## Enable or disable Via-header insertion in client requests by using the GUI

1. Navigate to Traffic Management > Cache Redirection > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure client timeout, (for example, **Vserver-CRD-1**), and then click Open.
3. In Configure Virtual Server (Cache Redirection) dialog box, select the Advanced tab.

4. Select the Via check box.
5. Click OK.

## Reuse TCP connections

You can configure the NetScaler appliance to reuse TCP connections to the cache and origin servers across client connections. This can improve performance by saving the time required to establish a session between the server and the appliance. The reuse option is enabled by default when you create a cache redirection virtual server.

To enable or disable the reuse of TCP connections, use the reuse parameter, which specifies the state of reuse of TCP connections to the cache or origin servers across client connections.

Possible values: ON, OFF

Default value: ON

## Enable or disable the reuse of TCP connections by using the CLI

At the command prompt, type:

```
1 - set cr vserver <name> [-reuse (ON|OFF)]
2 - show cr vserver <name>
```

### Example:

```
1 > set cr vserver Vserver-CRD-1 -reuse ON
2 Done
3 > show cr vserver Vserver-CRD-1
4 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
5 State: UP ARP:DISABLED
6 Client Idle Timeout: 6000 sec
7 Down state flush: ENABLED
8 Disable Primary Vserver On Down : DISABLED
9 Default: Content Precedence: URL Cache: TRANSPARENT
10 On Policy Match: CACHE L2Conn: OFF OriginUSIP: OFF
11 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
12 Backup: Vserver-CRD-2
13
14 1) Cache bypass Policy: bypass-cache-control
15 2) Cache bypass Policy: Policy-CRD
16 Done
```

## Enable or disable the reuse of TCP connections by using the GUI

1. Navigate to Traffic Management > Cache Redirection > Virtual Servers.

2. In the details pane, select the virtual server for which you want to configure client timeout, (for example, **Vserver-CRD-1**), and then click Open.
3. In Configure Virtual Server (Cache Redirection) dialog box, select the Advanced tab.
4. Select the Reuse check box.
5. Click OK.

## Configure delayed connection cleanup

The down state flush option performs delayed cleanup of connections on a cache redirection virtual server. The down state flush option is enabled by default when you create a cache redirection virtual server.

To enable or disable the down state flush option, set the `downStateFlush` parameter.

Possible values: ENABLED, DISABLED

Default value: ENABLED

## Enable or disable the down state flush option by using the CLI

At the command prompt, type the following commands to configure delayed connection clean up and verify the configuration:

```
1 - set cr vserver <name> [-downStateFlush (ENABLED | DISABLED)]
2 - show cr vserver <name>
```

### Example:

```
1 > set cr vserver Vserver-CRD-1 -downStateFlush ENABLED
2 Done
3 > show cr vserver Vserver-CRD-1
4 Vserver-CRD-1 (*:80) - HTTP Type: CONTENT
5 State: UP ARP:DISABLED
6 Client Idle Timeout: 6000 sec
7 Down state flush: ENABLED
8 Disable Primary Vserver On Down : DISABLED
9 Default: Content Precedence: URL Cache: TRANSPARENT
10 On Policy Match: CACHE L2Conn: OFF OriginUSIP: OFF
11 Redirect: POLICY Reuse: ON Via: ON ARP: OFF
12 Backup: Vserver-CRD-2
13
14 1) Cache bypass Policy: bypass-cache-control
15 2) Cache bypass Policy: Policy-CRD
16 Done
```

### Enable or disable the reuse of TCP connections by using the GUI

1. Navigate to Traffic Management > Cache Redirection > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure client timeout, (for example, **Vserver-CRD-1**), and then click Open.
3. In Configure Virtual Server (Cache Redirection) dialog box, click Advanced tab.
4. Select the Down state flush check box.
5. Click OK.

### Enable external health check for UDP and non-HTTP TCP virtual servers

September 6, 2023

In public clouds, you can use the NetScaler appliance as a second-tier load balancer when the native load balancer is used as a first tier. The native load balancer can be an application load balancer (ALB) or a network load balancer (NLB). Most of the public clouds do not support UDP health probes in their native load balancers. Hence, if these servers are down their actual status might not be updated. As a result, traffic is sent unconditionally to NetScaler, even if the request cannot be serviced.

To monitor the health of such applications, NetScaler supports HTTP and TCP health checks.

An HTTP or TCP listener is created for a content switching virtual server when both the `probeProtocol` and `probePort` parameters are configured. The listener reflects the status of the virtual server. The `ProbeSuccessResponseCode` parameter applies only to HTTP and returns the configured string when the probe is successful.

### To enable external health check for UDP and non-HTTP TCP virtual servers by using CLI

At the command prompt, type:

```
1 add cr vserver <name> <serviceType> -ProbeProtocol <Http/TCP> -
 ProbePort <port-num> -ProbeSuccessResponseCode<http-code>
```

#### Example:

```
1 add cr vserver Vserver-CR-1 HTTP -ProbeProtocol HTTP -probeport 5000 -
 probesuccessResponseCode 200OK
```

## To enable external health check for UDP and non-HTTP TCP virtual servers by using GUI

1. Navigate to **Traffic Management > Cache Redirection > Virtual Servers**, and then create a virtual server.
2. Click **Add** to create a virtual server.
3. In the **Basic Settings** pane, update the following details:
  - a) Probe Protocol—Select the protocol (HTTP or TCP) of the probe for external health check of the virtual server.
  - b) Probe Success Response Code—Enter the response string for a successful probe. This parameter is applicable only for the HTTP protocol.
    - Default Value: 200ok
    - Maximum Length: 63
  - c) Probe Port—Enter the port number for HTTP or TCP monitoring.
4. Click **OK**.

## N-Tier cache redirection

May 2, 2023

To efficiently handle large amounts of cached data, typically several gigabytes per second, an Internet Service Provider (ISP) deploys several dedicated cache servers. The cache redirection feature of the NetScaler appliance can help load balance the cache servers, but a single appliance or a couple of appliances might not efficiently handle the large volume of traffic.

You can solve the problem by deploying the NetScaler appliances in two tiers (layers), where the appliances in the upper tier load balance those in the lower tier and the appliances in the lower tier load balance the cache servers. This arrangement is called *n-tier cache redirection*.

For purposes such as auditing and security, an ISP has to track client details such as the IP address, information provided, and the time of the interaction. Therefore, client connections through a NetScaler appliance have to be fully transparent. However, if you configure transparent cache redirection, with the NetScaler appliances deployed in parallel, the IP address of the client has to be shared among all the appliances. Sharing of the client IP address creates a conflict that makes network devices, such as routers, cache servers, origin servers, and other NetScaler appliances, unable to determine the appliance, and therefore the client, to which the response should be sent.

## How N-tier cache redirection is implemented

To solve the problem, appliance n-tier cache redirection splits the source port range among the appliances in the lower tier and includes the client IP address in the request sent to the cache servers. The upper-tier NetScaler appliances are configured to do sessionless load balancing in order to avoid unnecessary load on the appliances.

When the lower-tier NetScaler appliance communicates with a cache server, it uses a mapped IP address (MIP) to represent the source IP address. Therefore, the cache server can identify the appliance from which it received the request and send the response to the same appliance.

The lower-tier NetScaler appliance inserts the client IP address into the header of the request sent to the cache server. The client IP in the header helps the appliance to determine the client to which the packet should be forwarded when it receives the response from a cache server, or the origin server in case of a cache miss. The origin server determines the response to be sent according to the client IP inserted in the request header.

The origin server sends the response to an upper-tier appliance, including the source port number from which the origin server received the request. The entire source port range, 1024 to 65535, is distributed among the lower-tier NetScaler appliances. Each lower-tier appliance is exclusively assigned a group of addresses within the range. This allotment enables the upper-tier appliance to unambiguously identify the lower-tier NetScaler appliance that sent the request to the origin server. The upper-tier appliance can therefore forward the response to the correct lower-tier appliance.

The upper-tier NetScaler appliances are configured to do policy-based routing, and the routing policies are defined to determine the IP address of the destination appliance from the source port range.

## Setup necessary for configuring N-Tier CRD

The following setup is necessary for the functioning of n-tier cache redirection:

For each upper-tier NetScaler appliance:

- Enable Layer 3 mode.
- Define policies for policy-based routes (PBRs) so that traffic is forwarded according to the range of the destination port.
- Configure a load balancing virtual server.
- Configure the virtual server to listen to all the traffic coming from the client. Set the Service Type/Protocol to be ANY and IP Address as asterisk (\*).
- Enable sessionless load balancing with MAC-based redirection mode to avoid unnecessary load on the upper-tier NetScaler appliances.
- Make sure that the Use Proxy Port option is enabled.

- Create a service for each lower-tier appliance and bind all the services to the virtual server.


For each lower-tier NetScaler appliance,

- Configure the cache redirection port range on the appliance. Assign an exclusive range to each lower-tier appliance.
- Configure a load balancing virtual server and enable MAC-based redirection.
- Create a service for each cache server that is to be load balanced by this appliance. When creating the service, enable insertion of client IP in the header. Then, bind all the services to the load balancing virtual server.
- Configure a transparent mode cache redirection virtual server with the following settings:
  - Enable the Origin USIP option.
  - Add a source IP expression to include the client IP in the header.
  - Enable the Use Port Range option.

### **How N-tier cache redirection works during a cache hit**

The following figure shows how cache redirection works when a client request is cacheable and the response is sent from a cache server.

Figure 1. Cache Redirection in Case of a Cache Hit

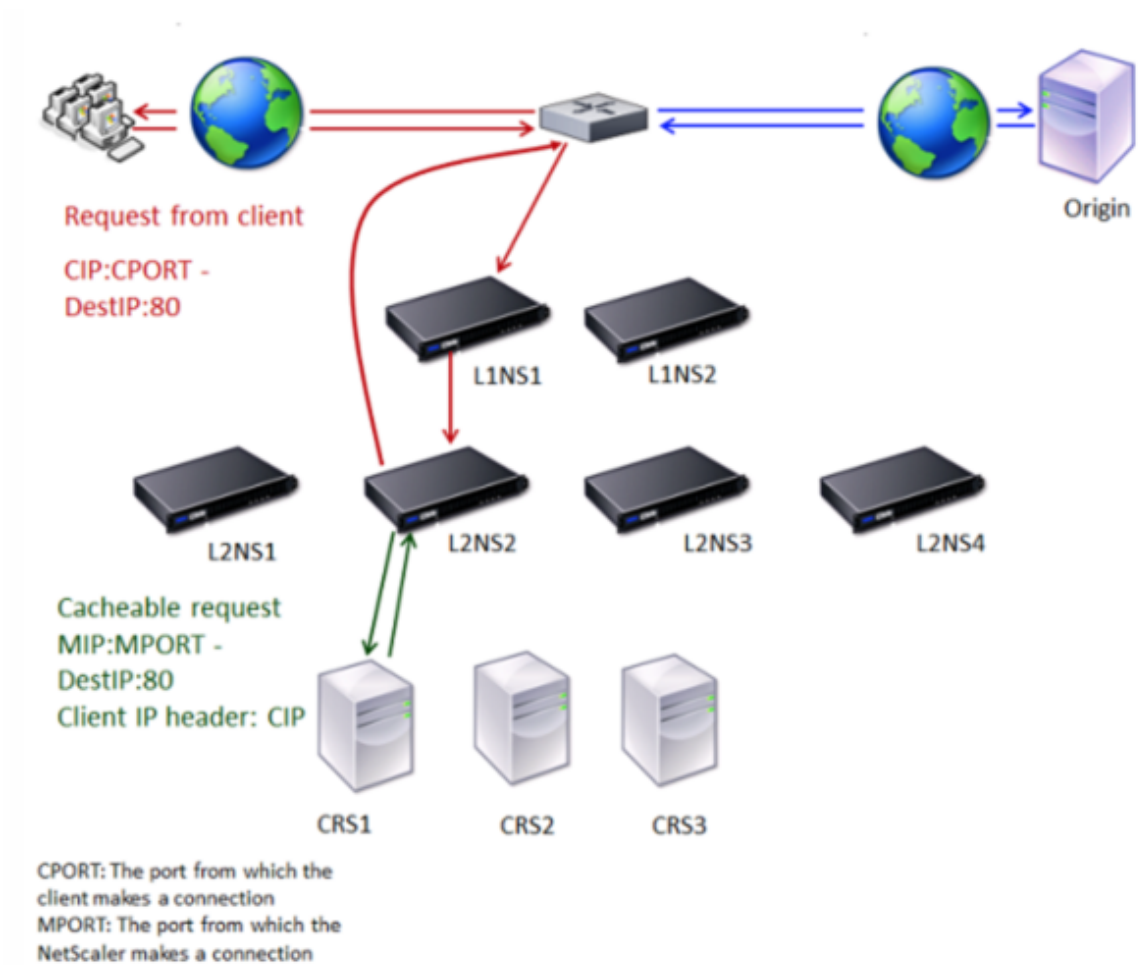

Two NetScaler appliances, L1NS1 and L1NS2, are deployed in the upper tier, and four NetScaler appliances, L2NS1, L2NS2, L2NS3, and L2NS4, are deployed in the lower tier. Client A sends a request, which is forwarded by the router. Cache servers CRS1, CRS2, and CRS3 service the cache requests. Origin Server O services the uncached requests.

**Traffic flow**

1. Client sends a request, and the router forwards it to L1NS1.
2. L1NS1 load balances the request to L2NS2.
3. L2NS2 load balances the request to the cache server CRS1, and the request is cacheable. L2NS2 includes the client IP in the request header.
4. CRS1 sends the response to L2NS2 because L2NS2 used its MIP as the source IP address when connecting to CRS1.
5. With the help of the client IP address in the request header, L2NS2 identifies the client from which the request came. L2NS2 directly sends the response to the router, avoiding unnecessary load on the appliance in the upper tier.




- The router forwards the response to Client A.

### How N-tier cache redirection works during a cache bypass

The following figure shows how cache redirection works when a client request is sent to an origin server for a response.

Figure 2. Cache Redirection in Case of a Cache Bypass

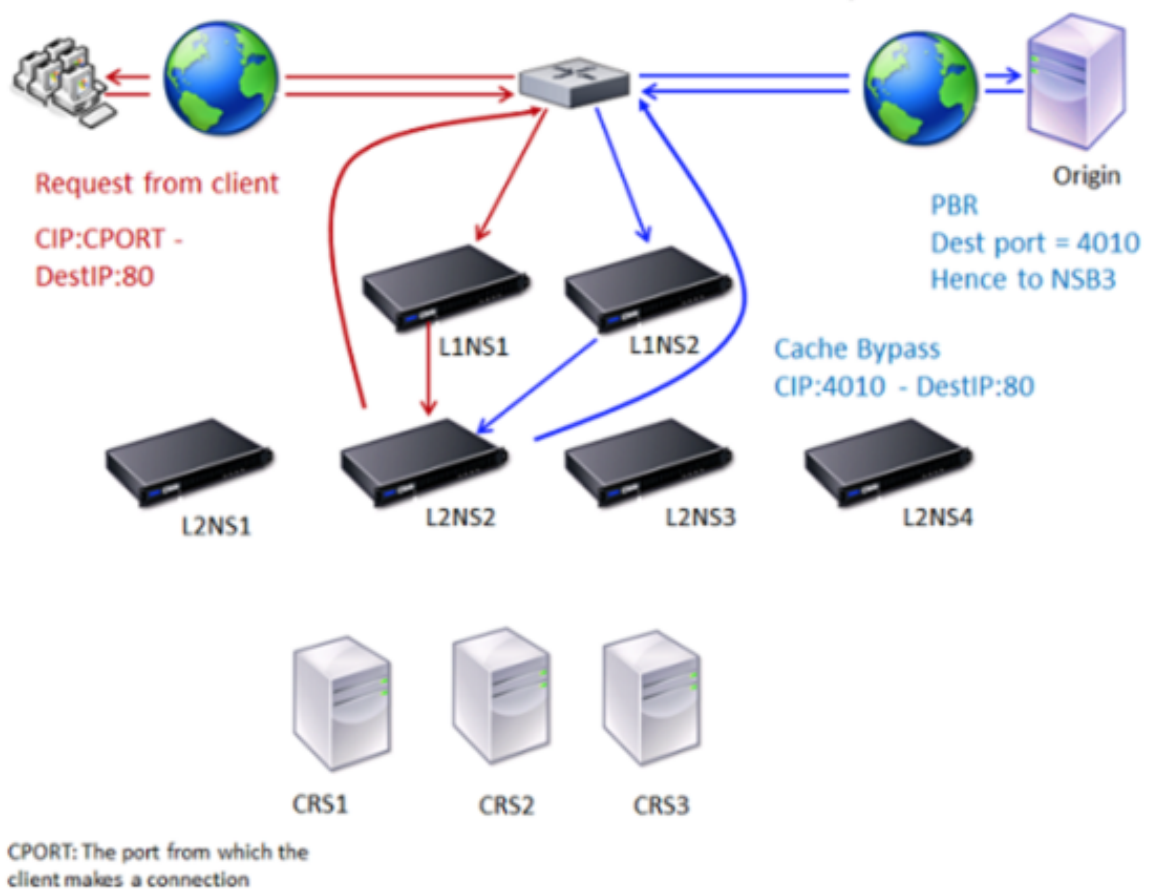

Two NetScaler appliances, L1NS1 and L1NS2, are deployed in the upper tier, and four NetScaler appliances, L2NS1, L2NS2, L2NS3, and L2NS4, are deployed in the lower tier. Client A sends a request, which is forwarded by the router. Cache servers CRS1, CRS2, and CRS3 service the cache requests. Origin Server O services the uncached requests.

#### Traffic flow


- Client sends a request, and the router forwards it to L1NS1.
- L1NS1 load balances the request to L2NS2.

3. The request is uncacheable (cache bypass). Therefore, L2NS2 sends the request to the origin server through the router.
4. The origin server sends the response to an upper-tier appliance, L1NS2.
5. According to the PBR policies, L1NS2 forwards the traffic to the appropriate appliance in the lower tier, L2NS2.
6. L2NS2 uses the client IP address in the request header to identify the client from which the request came and sends the response directly to the router, avoiding unnecessary load on the appliance in the upper tier.
7. The router forwards the response to Client A.

### How N-tier cache redirection works during a cache miss

The following figure shows how cache redirection works when a client request is not cached.

Figure 3. Cache Redirection in Case of a Cache Miss

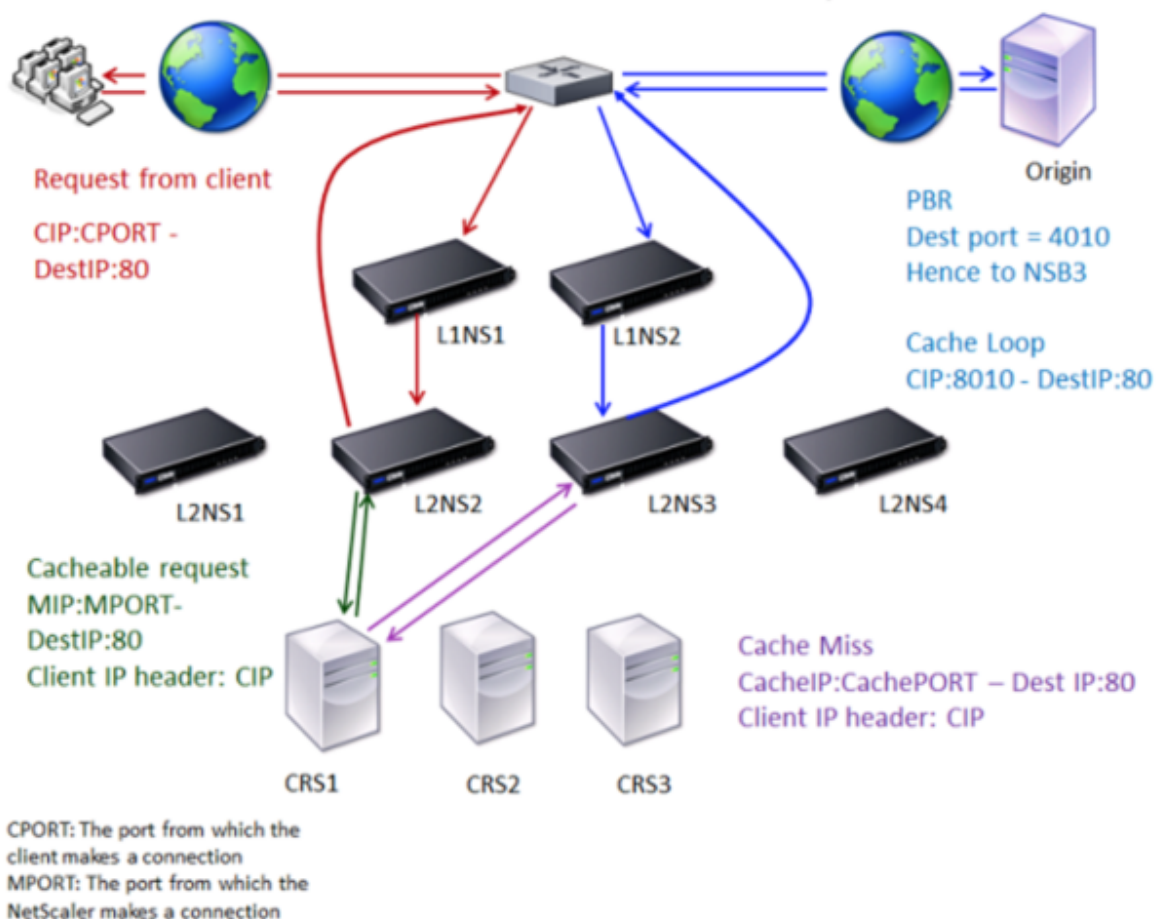

Two NetScaler appliances, L1NS1 and L1NS2, are deployed in the upper tier, and four NetScaler appliances, L2NS1, L2NS2, L2NS3, and L2NS4, are deployed in the lower tier. Client A sends a request,

which is forwarded by the router. Cache servers CRS1, CRS2, and CRS3 service the cache requests. Origin Server O services the uncached requests.

### Traffic flow

1. Client sends a request, and the router forwards it to L1NS1.
2. L1NS1 load balances the request to L2NS2.
3. L2NS2 load balances the request to the cache server CRS1 because the request is cacheable.
4. CRS1 does not have the response (cache miss). CRS1 forwards the request to the origin server through the appliance in the lower tier. L2NS3 intercepts the traffic.
5. L2NS3 takes the client IP from the header and forwards the request to the origin server. The source port included in the packet is the L2NS3 port from which the request is sent to the origin server.
6. The origin server sends the response to an upper-tier appliance, L1NS2.
7. According to the PBR policies, L1NS2 forwards the traffic to the appropriate appliance in the lower tier, L2NS3.
8. L2NS3 forwards the response to the router.
9. The router forwards the response to Client A.

## Configure the upper-tier NetScaler appliances

October 16, 2023

Configure each of the upper-tier NetScaler appliances as follows.

### Configure an upper-tier appliance for n-tier cache redirection by using the command CLI

At the command prompt, type the following commands:

- `add service <name>@ <serviceIP> <serviceType> <port>`

Run this command for each service to be added.

- `add lb vserver <name>@ ANY * <port> -persistenceType <persistenceMethod> -lbMethod <lbMethod> -m MAC -sessionless ENABLED -cltTimeout <client_timeout_value>`
- `bind lb vserver <name>@ <serviceName>`

Run this command for each service to be bound.

- `enable ns mode l3`
- `add ns pbr <name> <action> -srcPort <sourcePortNumber> -destPort <startPortNumber-endPortNumber> -nextHop <serviceIpAddress> -protocol TCP`
- `apply ns pbrs`

Run this command after adding all the necessary PBRs.

## Configure an upper-tier appliance for n-tier cache redirection by using the GUI

1. Enable L3 mode:
  - a) In the navigation pane, click **System**, and then click **Settings**.
  - b) In **Settings**, click **Configure modes**.
  - c) Select **Layer 3 Mode (IP Forwarding)**.
  - d) Click **OK**.
2. Configure policy-based routing (PBR):
  - a) Navigate to **System > Network > PBRs**.
  - b) In the **Policy-Based Routing (PBRs)** pane, click **Add**.
  - c) Type a name for the PBR.
  - d) Select the action as **Allow**.
  - e) In **Next Hop**, type the IP address of the service, which represents a lower-tier appliance.
  - f) In **Protocol**, select **TCP**.
  - g) Type the source port and the range of the destination port corresponding to the lower-tier appliance being added.
  - h) Click **Create**.
  - i) In the details pane, select the PBR and click **Apply**.
  - j) Repeat these steps for each lower-tier appliance.
3. Create a service for each lower-tier appliance:
  - a) Navigate to **Traffic Management > Load Balancing > Services**.
  - b) In the details pane, click **Add**.
  - c) Specify the name, protocol, IP address, and port. The protocol should be **ANY**.
  - d) Click **Create**.
4. Configure a load balancing virtual server:
  - a) Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
  - b) In the details pane, click **Add**.

- c) Specify the name, protocol, IP address, and port. The protocol should be ANY and the IP address should be \*.
- d) In **Services**, select the services that represent the lower-tier NetScaler appliances.
- e) In **Advanced**, select **Redirection Mode** as **MAC Based** and select **Sessionless**.
- f) Click **Create**.

## Configure the lower-tier NetScaler appliances

May 2, 2023

Configure each of the lower-tier NetScaler appliances as follows.

### Configure a lower-tier appliance for n-tier cache redirection by using the CLI

At the command prompt, type the following commands:

- `add service <name>@ <cacheServiceIP> <serviceType> <port> -cip ENABLED "ClientIP"-cachetype transparent`

Repeat for each cache server.

- `add lb vserver <name>@ <serviceType> -m MAC`
- `bind lb vserver <name>@ <cacheServiceName>`

Repeat for each cache server.

- `add cr vserver <name> <serviceType> * <port> -srcIPExpr "HTTP.REQ.HEADER("ClientIP")"-originusip ON -usePortRange ON`
- `set ns param-crPortRange <startPortNumber-endPortNumber>`

### Configure a lower-tier appliance for n-tier cache redirection by using the GUI

1. Create a service for each cache server. To create a service:
  - a) Navigate to Traffic Management > Load Balancing > Services.
  - b) In the details pane, click Add, and specify the name and protocol. Clear the Directly Addressable check box.
  - c) In the Advanced tab, select the Override Global check box and the Client IP check box, and then in the Header box, type ClientIP.
  - d) In the Cache Type box, select Transparent Cache.

- e) Click Create.
2. Configure a load balancing virtual server:
    - a) Navigate to Traffic Management > Load Balancing > Virtual Services.
    - b) In the details pane, click Add and specify the name, protocol, IP address, and port. The IP address should be an asterisk (\*).
    - c) In the Services tab, select the services that represent the cache servers.
    - d) In the Advanced tab, for Redirection Mode, select MAC Based.
    - e) Click Create.
  3. Configure a cache redirection virtual server:
    - a) Navigate to Traffic Management > Load Balancing > Virtual Services.
    - b) In the details pane, click Add and specify the name, protocol, IP address, and port. The IP address should be \*.
    - c) For Cache Type, select Transparent.
    - d) On the Advanced tab, in the Cache Server box, select the new load balancing virtual server and check the Origin USIP and Use Port Range check boxes. In the Source IP Expression box, type HTTP.REQ.HEADER("ClientIP").
    - e) Click Create.
  4. Assign a source port range for the appliance:
    - a) In the navigation pane, click System, and then click Settings.
    - b) In the Settings group, click the Change global system settings link.
    - c) In the Cache Redirection Port Range group, specify the port range for the appliance by typing a port number for Start Port and a port number for End Port.
    - d) Click OK.

## **Translate destination IP address of a request to origin IP address**

May 2, 2023

You can configure the forward proxy cache redirection virtual server on the NetScaler appliance to translate the destination IP address of the request landing on the cache redirection virtual server to the origin server IP address. This translation occurs irrespective of whether the request is sent to the cached servers or the origin server.

Previously, forward proxy cache redirection virtual server in service provider environment could not be effectively used to send traffic across firewall because of the limitations in cache redirection using content switching policies. The cache redirection virtual server did not translate the origin IP address

into the destination IP when the packet was sent to cache. The destination IP address was that of the origin server only when the requests were served from cached server.


**Note:** Translation of destination IP address of a request to origin IP address is not supported for a transparent cache redirection virtual server. For a transparent cache redirection virtual server, this option must be set to OFF.

### Use case

In a deployment that has NetScaler appliance configured for forward proxy cache redirection, firewall, and reused client IP addresses, firewall cannot distinguish/use the reused IP addresses. Therefore, these reused IP addresses must be translated to different IP addresses. To translate the reused IP addresses, the NetScaler appliance must perform the following:

1. Query a DNS load balancing virtual server for resolution of the destination.
2. Update the origin IP address and port number in the destination.
3. Send the request back to the firewall.

Consider the following deployment that has a NetScaler appliance configured for forward proxy cache redirection, firewall, two routers (Router 1 and Router 2). Network traffic flows to Internet 1 through Router 1 and to Internet 2 through Router 2 respectively.

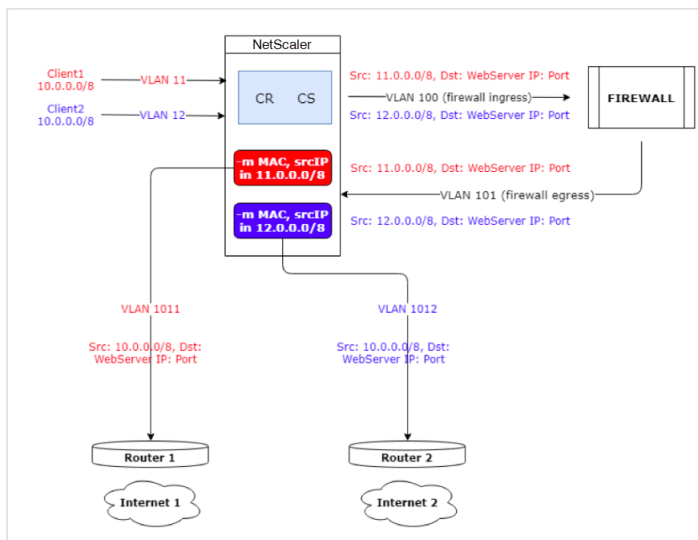

In this example, input requests from clients come from two different VLANs, VLAN11 or VLAN12. The client IP address (10.0.0.0) is reused.

Based on the cache redirection and content switching policies, the request can go directly to the origin server or to the firewall.

- If the request has to bypass the firewall and go to the internet, then based on the input request VLAN, either Router 1 or Router 2 is selected and the request is sent to Internet 1 or Internet 2.

- If the request has to go through the firewall, then the source IP of the request must be translated to specific IP address. The translated IP address can be used to identify the VLAN through which request has come. For example, if the input request is coming from VLAN11, then the source IP address is translated to 11.x.x.x. If the request is coming from VLAN12, then the source IP address is translated to 12.x.x.x.

After the firewall processes the request, the request is sent back to the appliance. Using the combination of listen policy and net profiles, the appliance then translates the source IP address back to the original IP address and sends the request to Router 1 or Router 2 based on the input VLAN ID.

**Note:** The mode of the load balancing virtual server that is bound to the cache must always be set to MAC mode. Though IP mode for this feature is not blocked, setting to IP mode leads to unexpected behavior.

### To translate the destination IP address and port number of the request to origin IP address by using the CLI

At the command prompt, type;

```
1 set cr vsrv <vsname> -useoriginIpPortForCache <YES|NO>
```

#### Example:

```
1 set cr vsrv cvsrv1 -useoriginIpPortForCache YES
```

When useoriginIpPortForCache is set to Yes and if the request must be served from the cached servers, then the request's destination IP is translated to the origin server IP address.

**Note:** If useoriginIpPortForCache is enabled, always set the load balancing virtual server that is bound to the cache to MAC mode.

### To translate the destination IP address and port of the request to origin IP address by using the GUI

1. Navigate to **Traffic Management > Cache Redirection > Virtual Servers** and click **Add**.
2. Specify the details of the cache redirection virtual server.
3. Select **Use Origin IP Port** for cache to enable translation of the destination IP address of the request to origin IP address.
4. Click **OK**.



## Clustering

May 2, 2023

### Note

This feature is available with a NetScaler Advanced or Premium edition license.

A NetScaler cluster is a group of nCore appliances working together as a single system image. Each appliance of the cluster is called a node. The cluster can have one appliance or as many as 32 NetScaler nCore hardware or virtual appliances as nodes.

The client traffic is distributed between the nodes to provide high availability, high throughput, and scalability.

To create a cluster, you must perform the following steps:

- Add the appliances as cluster nodes.
- Set up communication between the nodes.
- Set up links to the client and server networks.
- Configure the appliances, and configure the distribution of client and server traffic.

## Supportability matrix for NetScaler cluster

May 2, 2023

Clustering in the NetScaler appliance supports a wide-spread of features in NetScaler configurations.

The following table lists the NetScaler features and provides the supportability status across different NetScaler releases of cluster setups. The supportability status of some NetScaler features in a NetScaler BLX cluster is different than a NetScaler non-BLX (MPX, or VPX, SDX ADC) cluster.

### Important

The “Node-level” entry in the table indicates that the feature is supported only on individual cluster nodes.

## NetScaler 14.1

| NetScaler features                                  | NetScaler 12.1 | NetScaler 13.0 | NetScaler BLX 13.0 | NetScaler 13.1 | NetScaler BLX 13.1 | NetScaler 14.1 | NetScaler BLX 14.1 |
|-----------------------------------------------------|----------------|----------------|--------------------|----------------|--------------------|----------------|--------------------|
| SSL FIPS                                            | No             | No             | No                 | No             | No                 | No             | No                 |
| SSL Certificate Bundle                              | No             | No             | No                 | No             | No                 | No             | No                 |
| SSL interception                                    | No             | No             | No                 | No             | No                 | No             | No                 |
| Content switching actions                           | Yes            | Yes            | Yes                | Yes            | Yes                | Yes            | Yes                |
| Policy-based logging for content switching policies | Yes            | Yes            | Yes                | Yes            | Yes                | Yes            | Yes                |
| Rate limiting                                       | Yes            | Yes            | Yes                | Yes            | Yes                | Yes            | Yes                |
| Action analytics                                    | Yes            | Yes            | No                 | Yes            | No                 | Yes            | No                 |
| GSLB                                                | Yes            | Yes            | Yes                | Yes            | Yes                | Yes            | Yes                |
| RTSP                                                | Yes            | Yes            | Yes                | Yes            | Yes                | Yes            | Yes                |
| DNSSEC                                              | No             | No             | No                 | No             | No                 | No             | No                 |
| DNS64                                               | No             | No             | No                 | No             | No                 | No             | No                 |
| FTP                                                 | Yes            | Yes            | No                 | Yes            | No                 | Yes            | No                 |
| TFTP                                                | Yes            | Yes            | Yes                | Yes            | Yes                | Yes            | Yes                |
| Connection mirroring                                | No             | No             | No                 | No             | No                 | No             | No                 |
| Integrated caching                                  | Node-Level     | Node-Level     | No                 | Node-Level     | No                 | Node-Level     | No                 |
| Large shared cache                                  | Node-Level     | Node-Level     | No                 | Node-Level     | No                 | Node-Level     | No                 |

## NetScaler 14.1

| NetScaler features                        | NetScaler 12.1                                                     | NetScaler 13.0                                                     | NetScaler BLX 13.0                                                 | NetScaler 13.1                                                     | NetScaler BLX 13.1                                                 | NetScaler 14.1                                                     | NetScaler BLX 14.1                                                 |
|-------------------------------------------|--------------------------------------------------------------------|--------------------------------------------------------------------|--------------------------------------------------------------------|--------------------------------------------------------------------|--------------------------------------------------------------------|--------------------------------------------------------------------|--------------------------------------------------------------------|
| Front end optimization                    | Node-Level                                                         | Node-Level                                                         | No                                                                 | Node-Level                                                         | No                                                                 | Node-Level                                                         | No                                                                 |
| Application firewall                      | Yes                                                                | Yes                                                                | No                                                                 | Yes                                                                | No                                                                 | Yes                                                                | No                                                                 |
| HTTP Denial-of-Service Protection (HDOSP) | Deprecated                                                         | Deprecated                                                         | Deprecated                                                         | Removed                                                            | Deprecated                                                         | Removed                                                            | Deprecated                                                         |
| Priority queuing (PQ)                     | Node-Level                                                         | Node-Level                                                         | Deprecated                                                         | Removed                                                            | Deprecated                                                         | Removed                                                            | Deprecated                                                         |
| Sure connect (SC)                         | Node-Level                                                         | Node-Level                                                         | Deprecated                                                         | Removed                                                            | Deprecated                                                         | Removed                                                            | Deprecated                                                         |
| AppQoE                                    | Yes                                                                | Yes                                                                | No                                                                 | Yes                                                                | No                                                                 | Yes                                                                | No                                                                 |
| Surge protection                          | Node-Level                                                         | Node-Level                                                         | Yes                                                                | Node-Level                                                         | Yes                                                                | Node-Level                                                         | Yes                                                                |
| MPTCP                                     | Yes                                                                | Yes                                                                | No                                                                 | Yes                                                                | No                                                                 | Yes                                                                | No                                                                 |
| Striped SNIPs                             | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. |

| NetScaler features           | NetScaler 12.1                                                       | NetScaler 13.0                                                       | NetScaler BLX 13.0                                                   | NetScaler 13.1                                                       | NetScaler BLX 13.1                                                   | NetScaler 14.1                                                       | NetScaler BLX 14.1                                                   |
|------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------|
| MSR                          | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. |
| IS-IS (IPv4 and IPv6)        | Yes                                                                  | Yes                                                                  | No                                                                   | Yes                                                                  | No                                                                   | Yes                                                                  | No                                                                   |
| Jumbo Frames                 | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | No                                                                   | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | No                                                                   | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | No                                                                   |
| IP-IP tunneling              | Yes                                                                  | Yes                                                                  | No                                                                   | Yes                                                                  | No                                                                   | Yes                                                                  | No                                                                   |
| Link load balancing          | Yes                                                                  | Yes                                                                  | Yes                                                                  | Yes                                                                  | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. | Yes                                                                  | Yes; Note: Sup-ported in L2 clusters. Not sup-ported in L3 clusters. |
| FIS (Failover Interface Set) | Yes                                                                  | Yes                                                                  | No                                                                   | Yes                                                                  | No                                                                   | Yes                                                                  | No                                                                   |

## NetScaler 14.1

| NetScaler features   | NetScaler 12.1                                                     | NetScaler 13.0                                                     | NetScaler BLX 13.0 | NetScaler 13.1                                                     | NetScaler BLX 13.1 | NetScaler 14.1                                                     | NetScaler BLX 14.1 |
|----------------------|--------------------------------------------------------------------|--------------------------------------------------------------------|--------------------|--------------------------------------------------------------------|--------------------|--------------------------------------------------------------------|--------------------|
| Link redundancy (LR) | Yes                                                                | Yes                                                                | No                 | Yes                                                                | No                 | Yes                                                                | No                 |
| NAT46                | No                                                                 | Yes                                                                | Yes                | Yes                                                                | Yes                | Yes                                                                | Yes                |
| NAT64                | No                                                                 | Yes                                                                | Yes                | Yes                                                                | Yes                | Yes                                                                | Yes                |
| RNAT6                | Yes                                                                | Yes                                                                | Yes                | Yes                                                                | Yes                | Yes                                                                | Yes                |
| LSN/CGNAT            | Yes                                                                | Yes                                                                | No                 | Yes                                                                | No                 | Yes                                                                | No                 |
| IPv6                 | Yes                                                                | Yes                                                                | No                 | Yes                                                                | No                 | Yes                                                                | No                 |
| ReadyL-ogo           |                                                                    |                                                                    |                    |                                                                    |                    |                                                                    |                    |
| Traffic domains      | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | No                 | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | No                 | Yes; Note: Supported in L2 clusters. Not supported in L3 clusters. | No                 |
| Route monitor        | Yes                                                                | Yes                                                                | Yes                | Yes                                                                | Yes                | Yes                                                                | Yes                |
| GRE tunneling (CB)   | No                                                                 | No                                                                 | No                 | No                                                                 | No                 | No                                                                 | No                 |
| Layer 2 mode         | Yes                                                                | Yes                                                                | No                 | Yes                                                                | No                 | Yes                                                                | No                 |
| Net profiles         | Yes                                                                | Yes                                                                | No                 | Yes                                                                | No                 | Yes                                                                | No                 |
| HTTPS callout        | Yes                                                                | Yes                                                                | Yes                | Yes                                                                | Yes                | Yes                                                                | Yes                |
| AAA-TM               | Yes                                                                | Yes                                                                | No                 | Yes                                                                | No                 | Yes                                                                | No                 |
| AppFlow              | Node-Level                                                         | Node-Level                                                         | No                 | Node-Level                                                         | No                 | Node-Level                                                         | No                 |
| Web Insight          | Yes                                                                | Yes                                                                | No                 | Yes                                                                | No                 | Yes                                                                | No                 |

## NetScaler 14.1

| NetScaler features                  | NetScaler 12.1 | NetScaler 13.0 | NetScaler BLX 13.0 | NetScaler 13.1 | NetScaler BLX 13.1 | NetScaler 14.1 | NetScaler BLX 14.1 |
|-------------------------------------|----------------|----------------|--------------------|----------------|--------------------|----------------|--------------------|
| HDX Insight                         | Yes            | Yes            | No                 | Yes            | No                 | Yes            | No                 |
| VMAC/VRRP                           | Yes            | Yes            | No                 | Yes            | No                 | Yes            | No                 |
| NetScaler Push                      | No             | No             | No                 | No             | No                 | No             | No                 |
| Stateful Connection Failover        | No             | No             | No                 | No             | No                 | No             | No                 |
| Graceful Shutdown                   | Yes            | Yes            | Yes                | Yes            | Yes                | Yes            | Yes                |
| DBS Autoscale                       | No             | Yes            | Yes                | Yes            | Yes                | Yes            | Yes                |
| DSR using TOS                       | No             | No             | Yes                | Yes            | Yes                | Yes            | Yes                |
| Finer Startup-RR Control            | Node-Level     | Node-Level     | No                 | Node-Level     | No                 | Node-Level     | No                 |
| XML XSM                             | No             | No             | No                 | No             | No                 | No             | No                 |
| DHCP RA                             | No             | No             | No                 | Yes            | No                 | Yes            | No                 |
| Bridge Group                        | Yes            | Yes            | No                 | Yes            | No                 | Yes            | No                 |
| Network Bridge                      | No             | No             | No                 | No             | No                 | No             | No                 |
| Web Interface on NetScaler (WIonNS) | Yes            | Yes            | No                 | Yes            | No                 | Yes            | No                 |
| EdgeSight Monitoring                | Deprecated     | Deprecated     | No                 | Deprecated     | No                 | Deprecated     | No                 |

## NetScaler 14.1

| NetScaler features                                                  | NetScaler 12.1 | NetScaler 13.0 | NetScaler BLX 13.0 | NetScaler 13.1 | NetScaler BLX 13.1 | NetScaler 14.1 | NetScaler BLX 14.1 |
|---------------------------------------------------------------------|----------------|----------------|--------------------|----------------|--------------------|----------------|--------------------|
| Metrics tables -                                                    | No             | No             | No                 | No             | No                 | No             | No                 |
| Local DNS Caching                                                   | Node-Level     | Node-Level     | Node-Level         | Node-Level     | Node-Level         | Node-Level     | Node-Level         |
| Call Home                                                           | Node-Level     | Node-Level     | No                 | Node-Level     | No                 | Node-Level     | No                 |
| NetScaler Gateway ICA Proxy mode                                    | Yes            | Yes            | No                 | Yes            | No                 | Yes            | No                 |
| NetScaler Gateway (SSL VPN / full VPN and clientless VPN)           | Node-Level     | Node-Level     | No                 | Node-Level     | No                 | Node-Level     | No                 |
| Citrix Cloud-Bridge Connector                                       | Yes            | Yes            | No                 | Yes            | No                 | Yes            | No                 |
| Policy Based Routing (PBR/PBR6)                                     | Yes            | Yes            | No                 | Yes            | No                 | Yes            | No                 |
| IPv4 Policy Based Routing (PBR) with LLB virtual server as next hop | No             | Yes            | No                 | Yes            | No                 | Yes            | No                 |

## NetScaler 14.1

| NetScaler features                                                                      | NetScaler 12.1                                             | NetScaler 13.0                                             | NetScaler BLX 13.0 | NetScaler 13.1                                             | NetScaler BLX 13.1 | NetScaler 14.1                                             | NetScaler BLX 14.1 |
|-----------------------------------------------------------------------------------------|------------------------------------------------------------|------------------------------------------------------------|--------------------|------------------------------------------------------------|--------------------|------------------------------------------------------------|--------------------|
| IPv6 Policy Based Routing (PBR6) with LLB virtual server as next hop                    | No                                                         | No                                                         | No                 | No                                                         | No                 | No                                                         | No                 |
| Subscriber aware-ness                                                                   | No                                                         | No                                                         | No                 | No                                                         | No                 | No                                                         | No                 |
| Dynamic Routing                                                                         | Yes with v6 protocols (ospfv3, RIPng, ISIS6, BGP6) support | Yes with v6 protocols (ospfv3, RIPng, ISIS6, BGP6) support | Yes                | Yes with v6 protocols (ospfv3, RIPng, ISIS6, BGP6) support | Yes                | Yes with v6 protocols (ospfv3, RIPng, ISIS6, BGP6) support | Yes                |
| SYSLOG-TCP, load balancing of syslog servers, SNIP support, and FQDN support for syslog | Yes                                                        | Yes                                                        | Yes                | Yes                                                        | Yes                | Yes                                                        | Yes                |
| Bot management                                                                          | No                                                         | Yes                                                        | No                 | Yes                                                        | No                 | Yes                                                        | No                 |
| VXLAN                                                                                   | No                                                         | No                                                         | No                 | No                                                         | No                 | No                                                         | No                 |
| NSVLAN                                                                                  | Yes                                                        | Yes                                                        | No                 | Yes                                                        | Yes                | Yes                                                        | Yes                |

Also, the following NetScaler configurations are supported:



Load balancing, load balancing persistency, DNS load balancing, SIP, maxClient, Spillover (connection and dynamic). Spillover based on bandwidth, DataStream, Compression control, Content filtering, TCP buffering, Cache redirection, distributed denial-of-service (DDoS). Client Keep-alive, Basic networking (IPv4 and IPv6), OSPF (IPv4 and IPv6), RIP (IPv4 and IPv6), RIP (IPv4 and IPv6). VLAN, ICMP, Fragmentation, MBF, ACL, Simple ACL, MSR, Path MTU discovery, IP-IP, SNMP, Policies (classic and advanced). Rewrite, Responder, HTTP callout, Web server logging, Audit logging (NSLOG and syslog). USIP, Location commands, NITRO API, AppExpert, KRPC.

## Prerequisites

July 4, 2024

NetScaler appliances (MPX, VPX, SDX ADC, BLX) that are to be added to a cluster must meet the following prerequisites:

- All appliances must have the same software version and build.
- All appliances must be of the same platform type. This means that a cluster must have either all hardware appliances (NetScaler MPX) or all NetScaler VPX appliances, or all NetScaler BLX appliances, or all NetScaler SDX ADC instances.

### Note:

- For a cluster of hardware appliances (MPX), the appliances must be of the same model type.
  - For the formation of the heterogeneous cluster, all appliances must be of MPX platform type.
  - For a cluster of virtual appliances (VPX), the appliances must be deployed on the following hypervisors: XenServer, Hyper-V, VMware ESX, and KVM.
  - For setting up a cluster of SDX NetScaler instances, see [Set up a cluster of NetScaler instances](#).
  - Jumbo frames are supported on a NetScaler cluster that is made up of NetScaler SDX instances.
  - You can create L3 clusters of SDX instances.
  - For information about setting up a NetScaler BLX cluster, see [NetScaler BLX cluster](#).
- Appliances can belong to different networks.
  - Be initially configured and connected to a common client-side and server-side network.
  - For a cluster of virtual appliances (NetScaler VPX, or NetScaler BLX, or NetScaler SDX ADC instance), that has large configurations, it is recommended to use 6 GB RAM for each node of the cluster.

- NetScaler VPX instances hosted on NetScaler SDX appliance must be provisioned with a dedicated core.

## Cluster overview


May 2, 2023

A NetScaler cluster is formed by grouping NetScaler appliances together. Based on the network location of the NetScaler appliances that you intend to add the cluster, you must be aware of the following cluster setups:

### Note

Unless specified otherwise, cluster features and configurations are the same for L2 and L3 clusters.

- **L2 cluster:** In this cluster deployment, all cluster nodes belong to the same network.

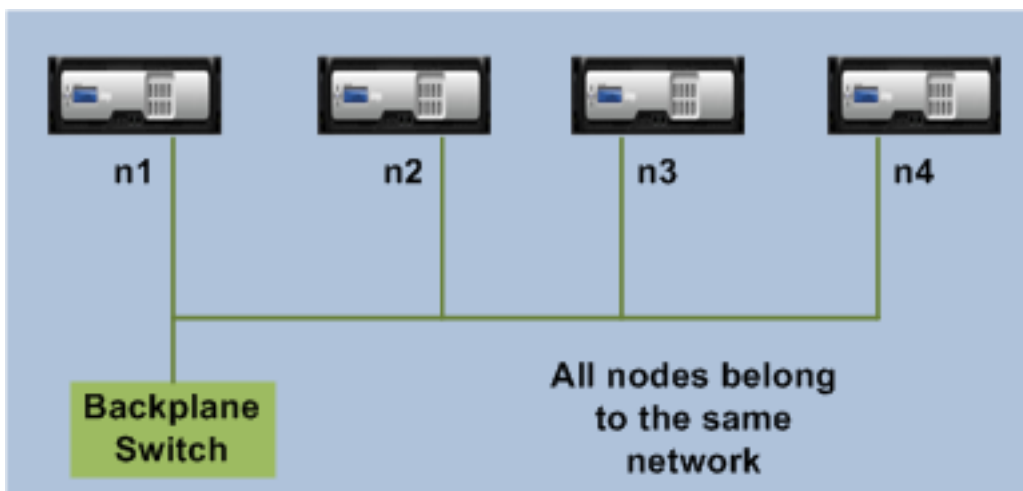


- **L3 cluster (also referred to as ‘cluster in INC mode’):** In this cluster deployment, cluster nodes can belong to different networks. The cluster nodes from a specific network must be grouped into node groups that include only nodes from that network. From the following figure, we see that nodes n1, n2, n3 are in the same network and are grouped into Nodegroup1.

Similarly, the case for nodes n4 and n5, that are grouped in Nodegroup2. In the third network, there are two node groups. Nodegroup3 includes n6 and n7 and Nodegroup4 includes n8 and n9.

### Note

Supported from NetScaler 11.0 onwards.

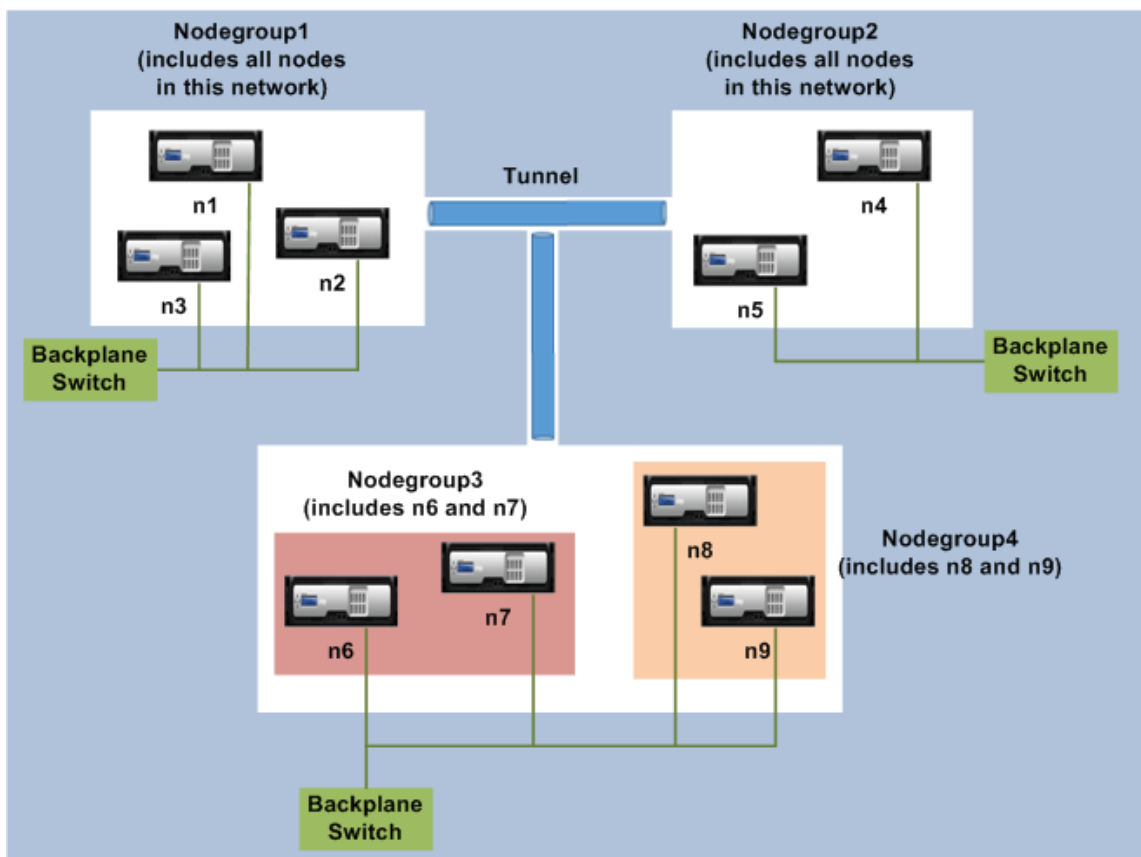


- **Sync State:** The **show cluster** command displays the status of the cluster node. The following are the Sync States for the **show cluster node** command:
  - **Enable:** This state shows that the node has the capability to do a configuration sync from other nodes.
  - **In-progress:** This is a temporary state which is displayed when the node is syncing configurations from other nodes.
  - **Success:** This state represents the status of the last sync that has happened on this node.

## Synchronization across cluster nodes

May 2, 2023

All configurations on a NetScaler cluster are performed on the cluster IP address, which is the management address of the cluster. The cluster node owns the cluster IP address that is referred to as the cluster configuration coordinator (CCO) as shown in the following figure:

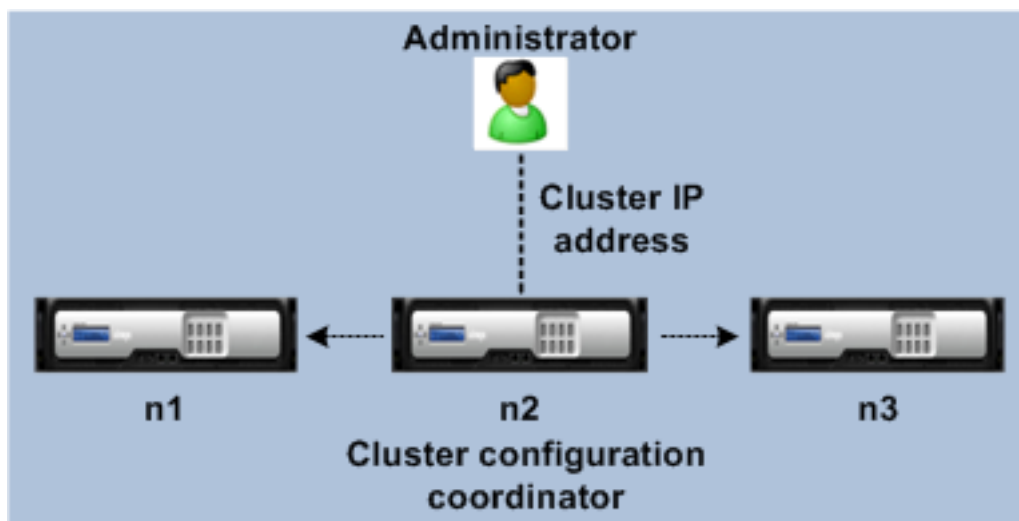

The configurations that are available on the CCO are automatically propagated to the other cluster nodes and therefore all cluster nodes have the same configurations.

- NetScaler allows only a few configurations to be performed on individual cluster nodes through their NSIP address. In these cases, you must ensure configuration consistency manually across all nodes in the cluster. These configurations are not propagated across the other cluster nodes. For more information on operations supported on each cluster node, see [Operations Supported on Individual Cluster Nodes](#).
- The following commands when ran on the cluster IP address are not propagated to other cluster nodes:
  - **shutdown**. Shuts down only the configuration coordinator.
  - **reboot**. Reboots only the configuration coordinator.
  - **rm cluster instance**. Removes the cluster instance from the node that you are running the command on.
- For a command to propagate to other cluster nodes:
  - The quorum must be configured on the cluster instance.
  - Most the cluster quorum with  $(n/2 + 1)$  of the cluster nodes must be active for the cluster to be operational.
  - A cluster can run with a minimum number of nodes when the majority rule  $(n/2 + 1)$  is relaxed.

When a node is added to a cluster, the configurations and the files (SSL certificates, licenses, DNS, and so on) that are available on the CCO are synchronized to the newly added cluster node. When an existing cluster node, that was intentionally disabled or that had failed, is once again added, the cluster compares the configurations available on the node with the configurations available on the CCO. If there is a mismatch in configurations, the node is synchronized by using one of the following:

- **Full synchronization.** If the difference between configurations exceeds 255 commands, all the configurations of the CCO are applied to the node that is rejoining the cluster. The node remains operationally unavailable during the synchronization.
- **Incremental Synchronization.** If the difference between configurations is less than or equal to 255 commands, only the configurations that are not available are applied to the node that is rejoining the cluster. The operational state of the node remains unaffected.

#### Note

You can also manually synchronize the configurations and files. For more information, see [Synchronizing Cluster Configurations](#) and [Synchronizing Cluster Files](#).

## Striped, partially striped, and spotted configurations

December 15, 2023

By virtue of command propagation, all nodes in a cluster have the same configurations. However, you might want some configurations to be available only on certain cluster nodes. While you cannot restrict the nodes on which the configurations are available, you can specify the nodes on which the configurations are active.


For example, you can:

- define a SNIP address to be active on only one node, or
- define a SNIP address to be active on all nodes, or
- define a VIP address to be active on only one node, or
- define a VIP address to be active on all nodes, or
- define a VIP address to be active only on two nodes of a 3-node cluster

Depending on the number of nodes the configurations are active on, cluster configurations are referred to as striped, partially striped, or spotted configurations.

Figure 1. Three-node cluster with striped, partially striped, and spotted configurations

**NetScaler Cluster**

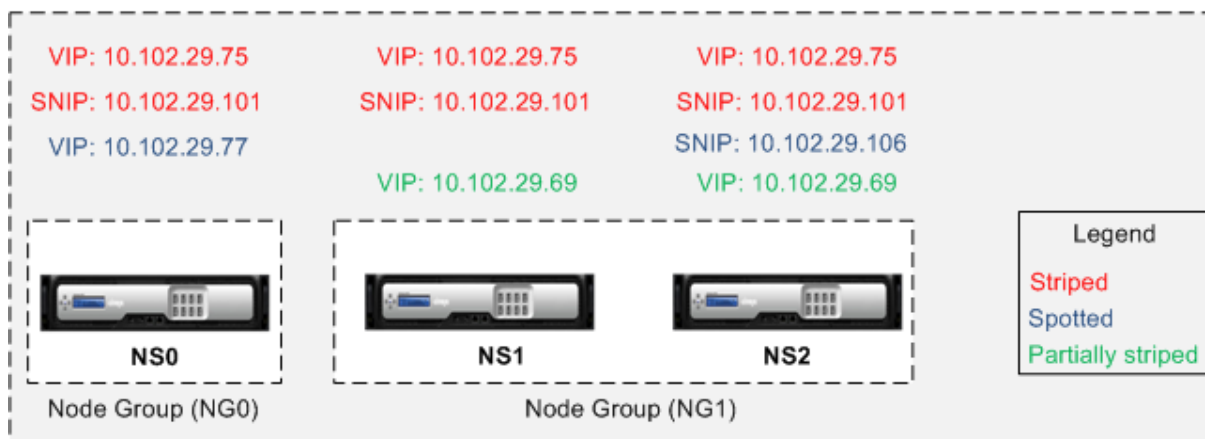

The following table provides more details on the types of configurations:

| Configuration Type              | Active on                 | Applicable to                           | Configurations                                                                                                                                                 |
|---------------------------------|---------------------------|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Striped configuration           | All the cluster nodes     | All entries                             | No specific configuration required to make an entity striped. By default, all entities defined on a cluster IP address are striped on all the cluster nodes.   |
| Partially striped configuration | A subset of cluster nodes | See <a href="#">Cluster Node groups</a> | Bind the entities that you want to be partially striped, to a node group. The configuration is active only on the cluster nodes that belong to the node group. |

| Configuration Type    | Active on           | Applicable to                     | Configurations                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------|---------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Spotted configuration | Single cluster node | See List of spotted configuration | <p>A spotted configuration can be defined using one of two approaches. <b>SNIP address</b> When creating the SNIP address, specify the node on which you want the SNIP address to be active, as the owner node. <b>Example</b>,<br/> <pre>add ns ip 10.102.29.106 255.255.255.0 - type SNIP - ownerNode 2</pre>                     (assuming node NS2 ID is 2). <b>Note:</b> You cannot change the ownership of a spotted SNIP address at run time. To change the ownership, you must first delete the SNIP address and add it again by specifying the new owner. <b>Entities that can be bound to a node group.</b> By binding the entity to a single-member node group.</p> |

**Note**

- When you disable USIP, we recommend you to use spotted SNIP addresses. You can use striped SNIP addresses only if there is a shortage of IP addresses. The use of striped IP

addresses can result in ARP flux issues if no spotted IP addresses are present in the same subnet for ARP resolution.

- When you enable USIP, we recommend you to use striped SNIP addresses as a gateway for server initiated traffic.

## List of spotted configuration

- IPv4 addresses
- IPv6 addresses
- ARP entries
- Interface settings
- IPv6 Static Routes (Route6)
- IP tunnel
- IPv6 tunnel
- Reverse network address translation (RNAT)
- Policy-based routes for IPv4 (PBR)
- Policy-based routes for IPv6 (PBR6)
- Cluster LAG
- Neighbor discovery protocol (ND6) entries
- Failover interface set (FIS)
- Linksets
- SNMP MIB/engine ID
- Diameters
- NetScaler VPX param
- Hostname

## ARP owner support for striped IP

In a cluster setup, you can configure a specific node to respond to the ARP request for a striped IP. The configured node responds to the ARP traffic.

A new parameter “arpOwner” is introduced in the “add, set, and unset IP” commands.

To enable the ARP owner on a node by using the CLI.

At the command prompt, type:

```
add ns ip <ip_address> -arpOwner <node_id>
```

### Note

The ARP owner parameter is supported only in the L2 cluster.



## Neighbor discovery owner support for striped IPv6 address

In a cluster setup, you can configure a specific node as neighbor discovery (ND) owner for the striped IPv6 address to determine the link-layer address. A client sends a Neighbor Solicitation (NS) message to all the nodes in the cluster setup. The ND owner responds with a Neighbor Advertisement (NA) message with the link-layer address for the striped IPv6 address, and serves traffic.

### To enable ND owner on a node by using the CLI

At the command prompt, type:

```
1 add ns ip6 <IPv6Address> -ndOwner <node id>
2
3 set ns ip6 <IPv6Address> -ndOwner <node id>
```

### Example:

```
1 add ns ip6 2001::21/64 -ndOwner 1
2
3 set ns ip6 2001::21/64 -ndOwner 1
```

### To enable ND owner on a node by using the GUI

1. Navigate to **System > Network > IPs**.
2. In the **IPs** page, go to the **IPv6s** tab and click **Add**.
3. In the **Create IPv6** page, select one of the node IDs listed in the **NdOwner in Cluster** drop-down menu.

#### Note


The ND owner parameter is supported only in the L2 cluster.

## Communication in a cluster setup

May 2, 2023

The interfaces of NetScaler appliances that are added to a cluster are prefixed with a node ID. It helps identify the cluster node to which the interface belongs. Therefore, the interface identifier *c/u*, where *c* is the controller number and *u* is the unit number, now becomes *n/c/u*, where *n* is the node ID. For example, in the following figure, interface 1/2 of node n1 is represented as 0/1/2, interface 1/1 of node n2 is represented as 1/1/1, and interface 1/4 of node n3 is represented as 2/1/4.

Figure 1. Interface naming convention in a cluster

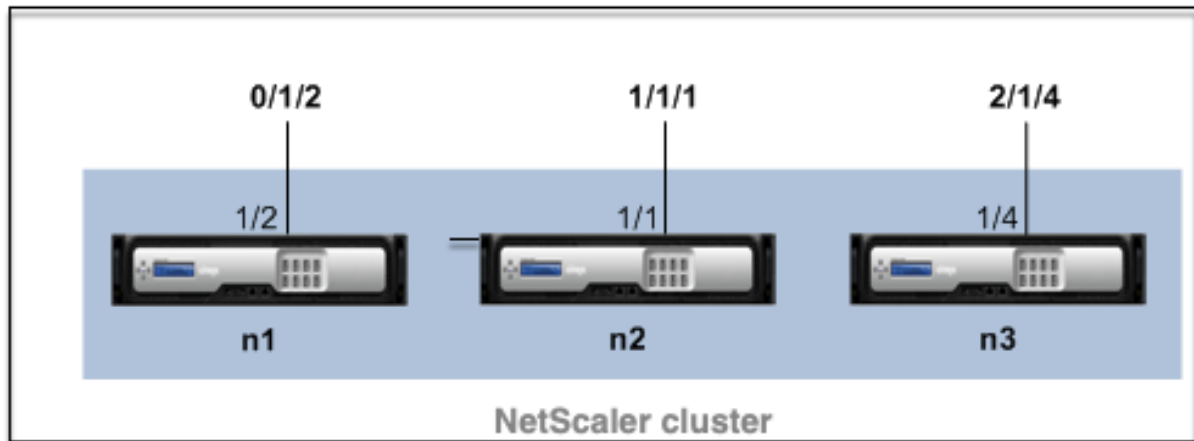

- **Server communication-**

The cluster communicates with the server through the physical connections between the cluster node and the server-side connecting device. The logical grouping of these physical connections is called the server data plane.

- **Client communication-** The cluster communicates with the client through the physical connections between the cluster node and the client-side connecting device. The logical grouping of these physical connections is called the client data plane.
- **Inter-node communication-** The cluster nodes can also communicate with each other. The manner in which they communicate depends on whether the node exists on the same network or across networks.

- Cluster nodes within the same network communicate with each other by using the cluster backplane. The backplane is a set of interfaces in which one interface of each node is connected to a common switch, which is called the cluster backplane switch. The different types of traffic that goes through the backplane, which is used by internode communication are:
  - \* Node to Node Messaging (NNM)
  - \* Steered traffic
  - \* Configuration propagation and synchronization
- Each node of the cluster uses a special MAC cluster backplane switch address to communicate with other nodes through the backplane. The cluster special MAC is of the form: `0x02 0x00 0x6F <cluster_id> <node_id> <reserved>`, where `cluster_id` is the cluster instance ID, `node_id` is the node number of the NetScaler appliance that is added to a cluster.

The following figures shows the communication interfaces in L2 clusters and L3 clusters.

Figure 2. Cluster communication interfaces - L2 cluster


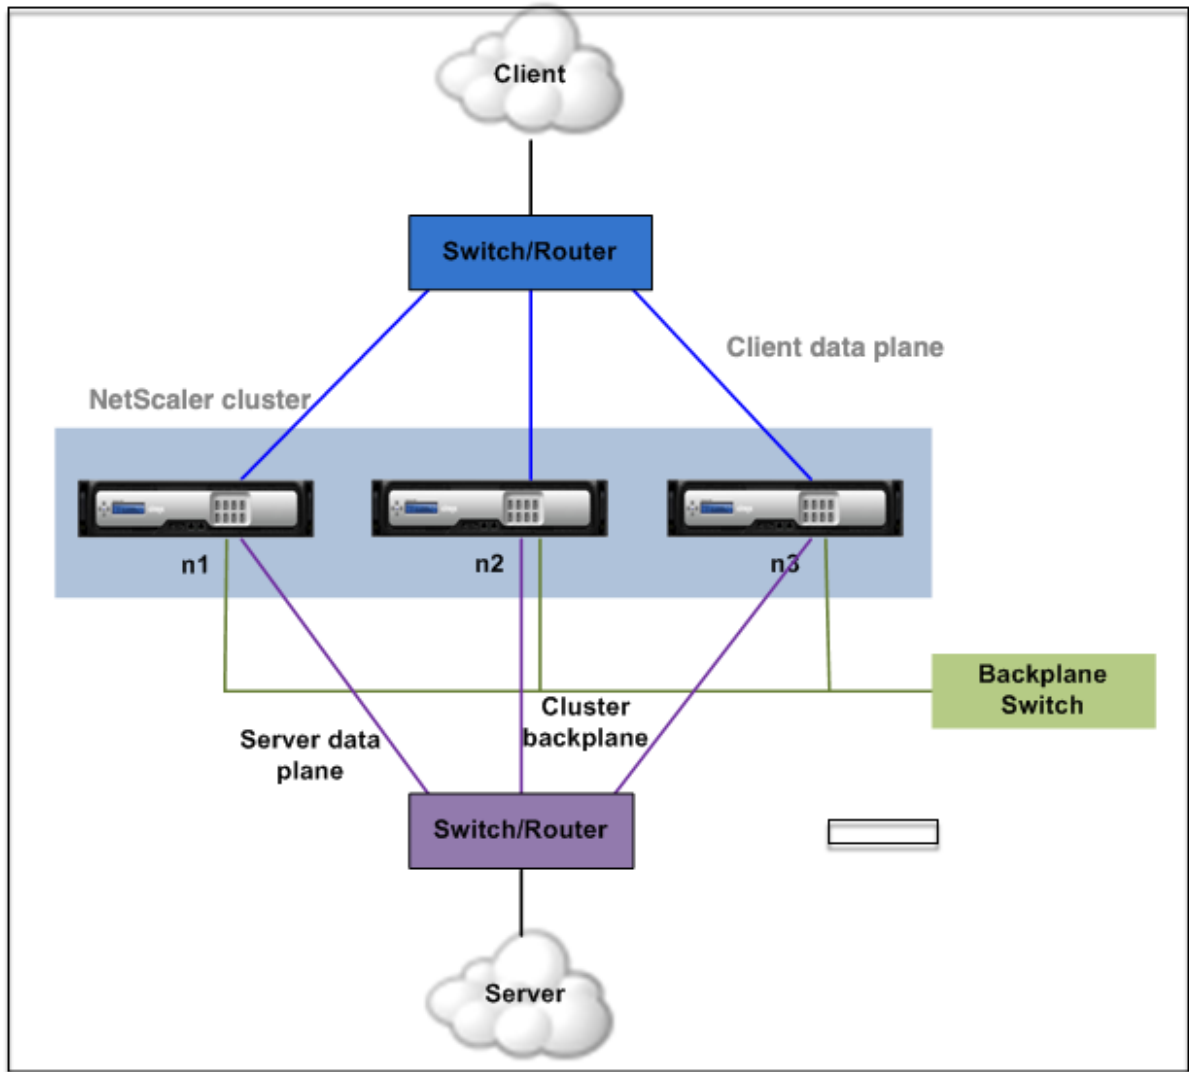


Figure 3. Cluster communication interfaces - L3 cluster

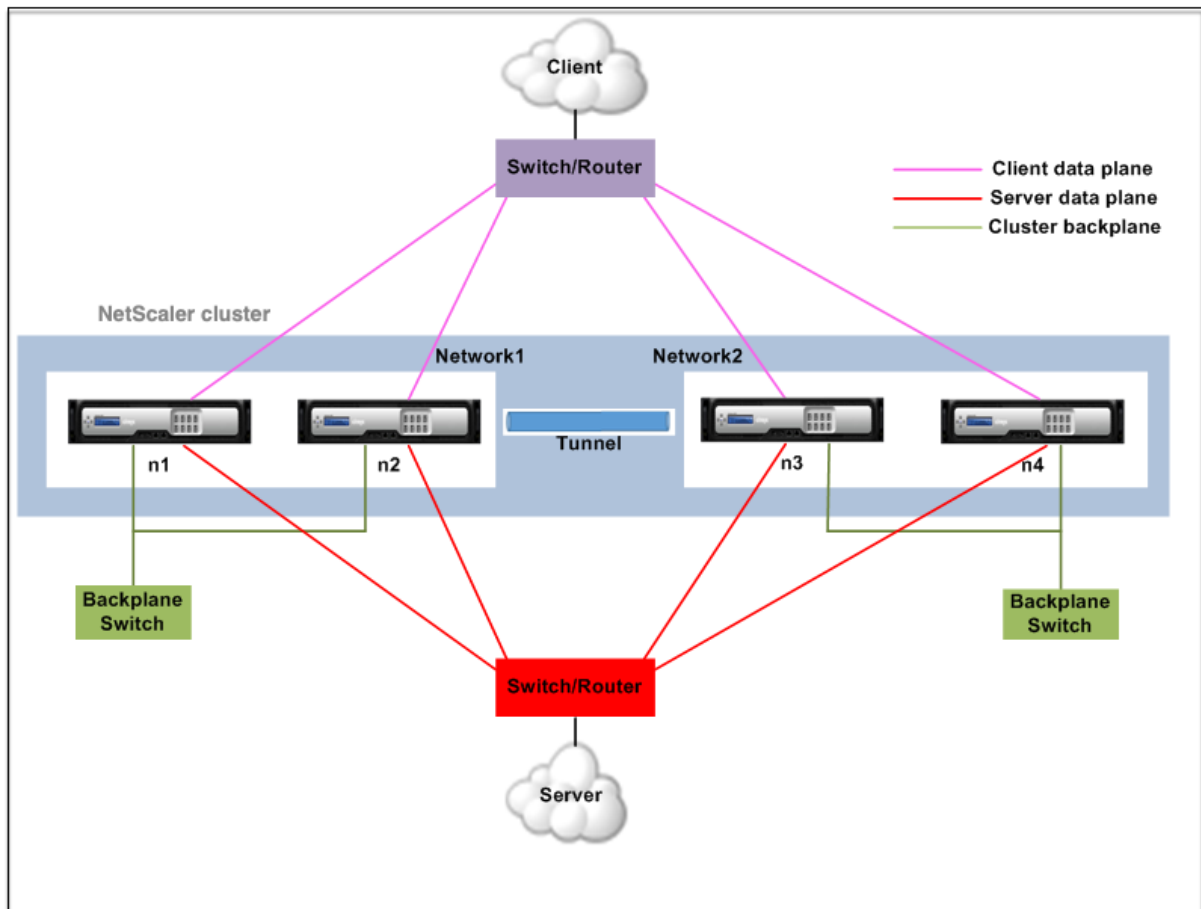

## Traffic distribution in a cluster setup

March 26, 2024

In a cluster setup, external networks view the collection of NetScaler appliances as a single entity. So, the cluster must select a single node that must receive the traffic. The cluster does this selection by using the Equal Cost Multiple Path (ECMP) or cluster link aggregation traffic distribution mechanism. The selected node is called the flow receiver.

### Note

For an L3 cluster (nodes across different networks), only the ECMP traffic distribution can be used.


The flow receiver gets the traffic and then, using internal cluster logic determines the node that must process the traffic. This node is called the flow processor. The flow receiver steers the traffic to the flow processor over the backplane if the flow receiver and the flow processor are on the same network.

The traffic is steered through the tunnel if the flow receiver and the flow processor are on different networks.

**Note**

- The flow receiver and flow processor must be nodes capable of serving traffic.
- From NetScaler 11 onwards, you can disable steering on the cluster backplane. For more information, see [Disabling Steering on the Cluster Backplane](#).

Figure 1. Traffic distribution in a cluster

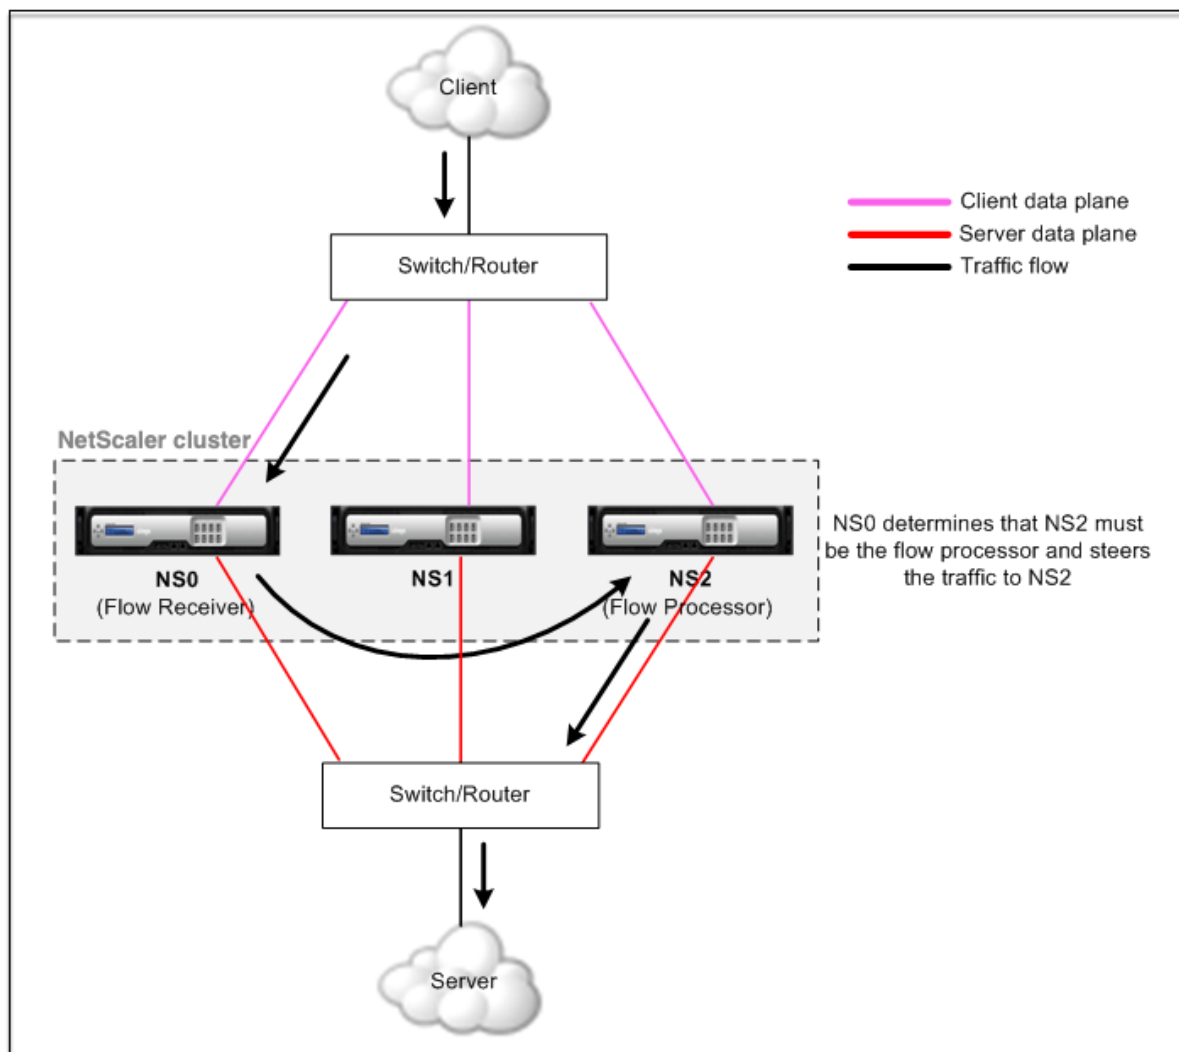

The preceding figure shows a client request flowing through the cluster. The client sends a request to a virtual IP (VIP) address. A traffic distribution mechanism configured on the client data plane selects one of the cluster nodes as the flow receiver. The flow receiver receives the traffic, determines the node that must process the traffic, and steers the request to that node (unless the flow receiver selects itself as the flow processor).

The flow processor establishes a connection with the server. The server processes the request and sends the response to the subnet IP (SNIP) address that sent the request to the server.

- If the SNIP address is a striped or partially striped IP address, the traffic distribution mechanism configured on the server data plane selects one of the cluster nodes as the flow receiver. The flow receiver receives the traffic, determines the flow processor, and steers the request to the flow processor through the cluster backplane.
- If the SNIP address is a spotted IP address, the node that owns the SNIP address receives the response from the server.

## Cluster node groups


May 2, 2023

### Note

Node groups are supported from NetScaler 10.1 onwards.

As the name indicates, a cluster node group is a group of cluster nodes.

Figure 1. NetScaler cluster with node groups

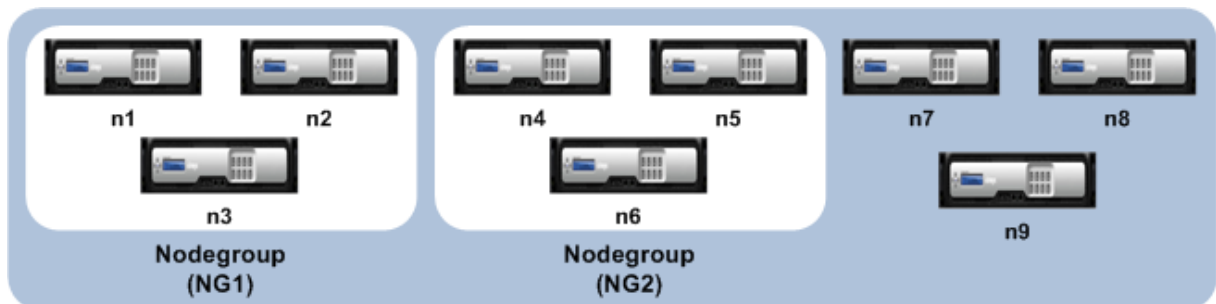

The preceding figure shows a cluster which has node groups NG1 and NG2 that include 3 cluster nodes each. The cluster also has 3 nodes that are not part of any node group.

A node group can be configured for the following:

- To define spotted and partially striped configurations. For more information, see [Node groups for Spotted and Partially Striped Configurations](#).
- To configure redundancy of node groups. For more information, see [Configuring Redundancy for Node groups](#).

Note: Supported from NetScaler 10.5 Build 52.1115.e onwards.

- To define an L3 cluster (also called a cluster in INC mode). In an L3 cluster, cluster nodes can be from different networks. You must group nodes that belong to a network in a single node group.

For example, if n1, n2, n3 are in network1 and n4, n5, n6 are in network2, then NG1 must include nodes of network1 and NG2 must include nodes of network2. For setting up an L3 cluster, see [Creating a NetScaler cluster](#).

**Note**

- Supported from NetScaler 11 onwards.
- The preceding functions of a node group are mutually exclusive. It means that a node group can provide only one of the preceding mentioned functionalities.

## Cluster and node states

December 7, 2020

For a cluster to be functional, most of the nodes ( $n/2 + 1$ ) must be operationally active (operational state is ACTIVE).

**Important**

From NetScaler release 10.5, you can configure the cluster to be functional even when the majority criteria is not satisfied. This configuration must be performed when creating a cluster.

For more information on states of a cluster node, refer to [States of a cluster node](#).

## Routing in a cluster

May 2, 2023

Routing in a cluster works in much the same way as routing in a standalone system. A few points to note:

- All routing configurations must be performed from the cluster IP address and the configurations are propagated to the other cluster nodes.
- Routes are limited to the maximum number of ECMP routes supported by the upstream router.
- Node-specific routing configurations must be performed by using the owner-node argument as follows:

```
1 router ospf
2 owner-node 0
```

```
3 ospf router-id 97.131.0.1
4 exit-owner-node
5 !
```

The following command displays the consolidated cluster configuration for all nodes in VTYSH.

```
show cluster-config
```

The following command displays the cluster status on each node.

```
show cluster node
```

## IPv4 routing in L2 cluster

The following section contains sample configurations that help you to configure IPv4 OSPF and BGP routing in the L2 cluster.

### Adding spotted SNIP address and enabling dynamic routing

In the following configuration, OSPF, and BGP routing are enabled. Also, spotted SNIP addresses are added and dynamic routing is enabled on these SNIP addresses.

```
1 en ns fea ospf bgp
2 add vlan 10
3 add ns ip 10.10.10.1 255.255.255.0 -dynamicrouting enabled -ownernode 1
4 add ns ip 10.10.10.2 255.255.255.0 -dynamicrouting enabled -ownernode 2
5 add ns ip 10.10.10.3 255.255.255.0 -dynamicrouting enabled -ownernode 3
6 bind vlan 10 -ipaddress 10.10.10.1 255.255.255.0
```

## VTYSH IPv4 OSPF configuration

For configuring IPv4 OSPF in the L2 cluster, you must:

- Set the priority to zero.
- Configure the Router-id as a spotted configuration.

### Note

The OSPF configuration guidelines for the L2 cluster are applicable for OSPFv3 also.

In the following sample configuration IPv4 OSPF is configured.

```
1 interface vlan10
2 IP OSPF PRIORITY 0
3 !
4 router ospf
```



```
5 owner-node 1
6 ospf router-id 97.131.0.1
7 exit-owner-node
8 owner-node 2
9 ospf router-id 97.131.0.2
10 exit-owner-node
11 owner-node 3
12 ospf router-id 97.131.0.3
13 exit-owner-node
14 network 10.10.10.0/24 area 0
15 redistribute kernel
16 !
```

### VTYSH IPv4 BGP configuration

In the following VTYSH sample configuration, IPv4 BGP is configured.

```
1 router bgp 100
2 neighbor 10.10.10.10 remote-as 200
3 owner-node 1
4 neighbor 10.10.10.10 update-source 10.10.10.1
5 exit-owner-node
6 owner-node 2
7 neighbor 10.10.10.10 update-source 10.10.10.2
8 exit-owner-node
9 owner-node 3
10 neighbor 10.10.10.10 update-source 10.10.10.3
11 exit-owner-node
12 redistribute kernel
13 !
```

#### Note

The update-source command is used for each neighbor with the owner-node argument in the following configuration to connect with proper source IP.

### IPv6 routing in L2 cluster

The following section contains sample configurations that help you to configure IPv6 OSPF and BGP routing in the L2 cluster.

#### Enable IPv6 routing

Before configuring IPv6 routing in a L2 cluster, you must enable the IPv6 feature.

To enable IPv6 routing by using the CLI,

At the command prompt, type:

- `enable ns fea ipv6pt`

### **Adding spotted SNIP6 address and enabling dynamic routing**

In the following configuration, OSPF, and BGP routing are enabled. Also, spotted SNIP6 addresses are added and dynamic routing is enabled on these SNIP6 addresses.

```
1 add ns ip6 3ffa::1/64 -dynamicrouting enabled -ownernode 1
2 add ns ip6 3ffa::2/64 -dynamicrouting enabled -ownernode 2
3 add ns ip6 3ffa::3/64 -dynamicrouting enabled -ownernode 3
4 add vlan 10
5 bind vlan 10 -ipaddress 3ffa::1/64
```

### **VTYSH IPv6 BGP configuration**

In the following VTYSH sample configuration, IPv6 BGP is configured.

```
1 router bgp 100
2 neighbor 3ffa::10 remote-as 200
3 owner-node 1
4 neighbor 3ffa::10 update-source 3ffa::1
5 exit-owner-node
6 owner-node-2
7 neighbor 3ffa::10 update-source 3ffa::2
8 exit-owner-node
9 owner-node-3
10 neighbor 3ffa::10 update-source 3ffa::3
11 exit-owner-node
12 no neighbor 3ffa::10 activate
13 address-family ipv6
14 redistribute kernel
15 neighbor 3ffa::10 activate
16 exit-address-family
17 !
```

### **Install IPv6 learned routes**

The NetScaler cluster can use routes learned by various routing protocols after you install the routes in the NetScaler cluster routing table.

To install IPv6 learned routes to the internal routing table by using the CLI:

At the command prompt, type:

- `ns route-install ipv6 bgp`
- `ns route-install ipv6 ospf`

- `ns route-install default`

**Note**

- If you have to exchange IPv4 routes on a IPv6 neighbor, you must remove the `no neighbor 3ffa::10 active` VTYSH command from the earlier configuration.
- The `update-source` VTYSH command must be used for each owner node to specify the right IPv6 source IP while connecting to the BGP peer as given in the BGP IPv4 configuration.

## Routing in a L3 cluster

The routing in a L3 cluster works only when the following configurations are done on the NetScaler appliance.

- Enable the dynamic routing for a VLAN.


```
1 set vlan <id> -dynamicrouting enabled
```

- To reach all cluster nodes, the VIP, CLIP, and NetScaler IP (NSIP) must be advertised by routing protocols along with the `set vlan` command.

## Deployment scenario for BGP in L3 cluster

Consider an example where all the cluster nodes are grouped in the AS 100 network, and the upstream routers are in a different AS 200.

The following figure depicts the AS 100 and AS 200 deployment in a cluster setup.

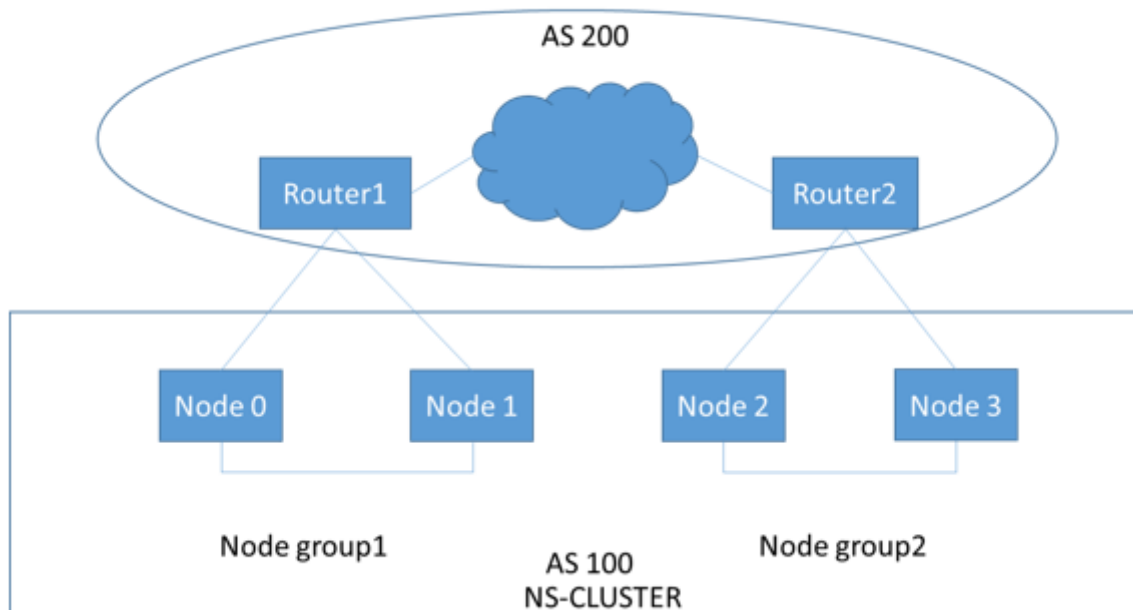

In this deployment, CLIP advertises CCO to upstream routers. Some cluster nodes drop the advertised traffic, as an AS loop is detected.

To overcome the issue, configure the following command in VTYSH BGP router mode for each neighbor.

At the VTYSH command prompt, type:

```
neighbor <peer_ip> allowas-in 1
```

As a best practice, Citrix recommends you to configure any one of the following:

- Configure route-maps to learn only desired networks such as; default route, NetScaler IP (NSIP), and NSIP subnets on cluster nodes.
- Configure upstream routes to advertise only desired networks such as; CLIP and NetScaler IP (NSIP) in cluster.

## IP addressing for a cluster

May 2, 2023

In addition to the standard types of NetScaler-owned IP addresses—NetScaler NSIP, Virtual IP (VIP), and Subnet IP (SNIP)—a clustered NetScaler appliance can have a cluster management IP (CLIP) address. It can also have striped and spotted IP addresses.

- **CLIP address.** An IP address owned by the cluster coordinator node (CCO). The CLIP address can float between different nodes in a cluster setup. If the CLIP is moved to a different node of the cluster, that node becomes the CCO. The CCO is the NetScaler appliance that is responsible for management tasks in the cluster. A network administrator uses the CLIP address to connect to the cluster to perform configuration and management tasks, such as accessing the unified GUI, reporting, tracing packet flow, and collecting logs. You can add multiple CLIP addresses in a cluster on the same or different networks. Only configurations performed on the CCO through the cluster IP address are propagated to other nodes in the cluster.
- **Striped IP address.** A logical IP address available on all nodes of the cluster, it can be either a VIP or SNIP address.
- **Spotted IP address.** A logical IP (preferably SNIP address) is available only on one node. A spotted IP address has visibility on only that node. To minimize traffic-steering overhead, Citrix recommends that you use a spotted SNIP address for back-end communication with the server.

The following table provides the details of the configurations.

| IP Address | NSIP | VIP | SNIP |
|------------|------|-----|------|
| Spotted    | Yes  | Yes | Yes  |
| Striped    | No   | Yes | Yes  |

For example, in a four-node cluster group, you must configure each node with a spotted SNIP address. For more information on how to configure a spotted IP configuration, see [Striped, Partially Striped, and Spotted Configurations](#).

You can define a SNIP address to be active on only one node, or active on all nodes. If the virtual IP address and subnet IP address are available only on a specific node, it is of spotted configuration. The configuration is defined as striped if the subnet IP address and virtual server IP address are available on all nodes. Spotted SNIP addresses help in reducing the steering and backplane traffic.

## Best practices for VLAN bindings and route configuration while joining a node to the cluster

### VLAN IP bindings

When you bind a VLAN with the spotted IP address, the NetScaler cluster must be configured with the spotted IP addresses in the same subnet on all the nodes. For example, in a two-node cluster with Node 0 and Node 1, you can have the following configuration:

```
1 add ns ip 192.254.101.101 255.255.255.0 -vServer DISABLED -
 dynamicRouting ENABLED -ownerNode 1
2 add ns ip 192.254.101.102 255.255.255.0 -vServer DISABLED -
 dynamicRouting ENABLED -ownerNode 0
3 add vlan 100
4 bind vlan 100 -IPAddress 192.254.101.101 255.255.255.0
```

## Routing configuration

When routing configuration is required with the spotted IP address as the default gateway, then the ADC cluster must be configured with the spotted IP addresses in the same subnet on all the nodes. For example, in a two-node cluster with Node 0 and Node 1, you can have the following configuration:

```
1 add ns ip 192.254.101.101 255.255.255.0 -vServer DISABLED -
 dynamicRouting ENABLED -ownerNode 1
2 add ns ip 192.254.101.102 255.255.255.0 -vServer DISABLED -
 dynamicRouting ENABLED -ownerNode 0
3
4 add route 192.254.102.0 255.255.255.0 192.254.101.103
```

### Note

In an L3 cluster setup, only spotted SNIP configuration is supported.

## Configuring layer 3 clustering

August 12, 2024

### Understanding the L3 cluster

The demand to expand the high availability deployment and increase the scalability of the client traffic across different networks guided to establish the L3 cluster. The L3 cluster lets you group NetScaler appliances across individual subnets (L2 cluster).

L3 cluster is also referred to as “cluster in Independent Network Configuration (INC) mode”. In L3 cluster deployment, the cluster nodes in the same network are grouped to form a Node group. L3 cluster uses GRE tunneling to steer the packets across networks. The heartbeat messages across the L3 clusters are routed.

## Architecture

The L3 cluster architecture comprises the following components:

- **Nodegroup** - The cluster nodes from each network (n1, n2) and (n3, n4), as shown in the following figure, are grouped to form a Node group. These Node groups are terminated to the layer 3 switch on either side of the network.
  - The cluster communicates with the client through the physical connections between the cluster node and the client-side connecting device. The logical grouping of these physical connections is called the client data plane.
  - The cluster communicates with the server through the physical connections between the cluster node and the server side connecting device. The logical grouping of these physical connections is called the server data plane.
- **Backplane Switch** - Cluster nodes within the same network communicate with each other by using the cluster backplane. The backplane is a set of interfaces in which one interface of each node is connected to a common switch, which is called the cluster backplane switch.
- **Tunnel** - By default, the packets between nodes in a L3 cluster are exchanged over an unencrypted GRE tunnel that uses the NSIP addresses of the source and destination nodes for routing. The steering mechanism changes for nodes belonging to the different network. The packets are steered through a GRE tunnel to the node on the other subnet, instead of rewriting the MAC.

**Note:**


For a new deployment, we recommend using the UDP tunnel to steer the packets across nodes in different networks. The advantages of using a UDP tunnel are:

- The steering between the packet engines is based on 4-tuple, which provides better distribution.
- You can avoid the skewness in CPU utilization.
- Starting from the 14.1-29.x release, jumbo frames are now supported for UDP tunnels. For UDP tunnels, an extra 42 bytes of overhead are required for steering. To avoid fragmentation among cluster nodes, make sure that the data interface MTU size is between 9198 and 9215 bytes.

Refer to the following table to understand how packets are steered in different tunnel modes.

| Tunnel mode | Same network                            | Different network                        |
|-------------|-----------------------------------------|------------------------------------------|
| None        | Backplane is used to steer the packets. | GRE tunnel is used to steer the traffic. |

| Tunnel mode | Same network                             | Different network                        |
|-------------|------------------------------------------|------------------------------------------|
| GRE         | GRE tunnel is used to steer the packets. | GRE tunnel is used to steer the packets. |
| UDP         | UDP tunnel is used to steer the packets. | UDP tunnel is used to steer the packets. |

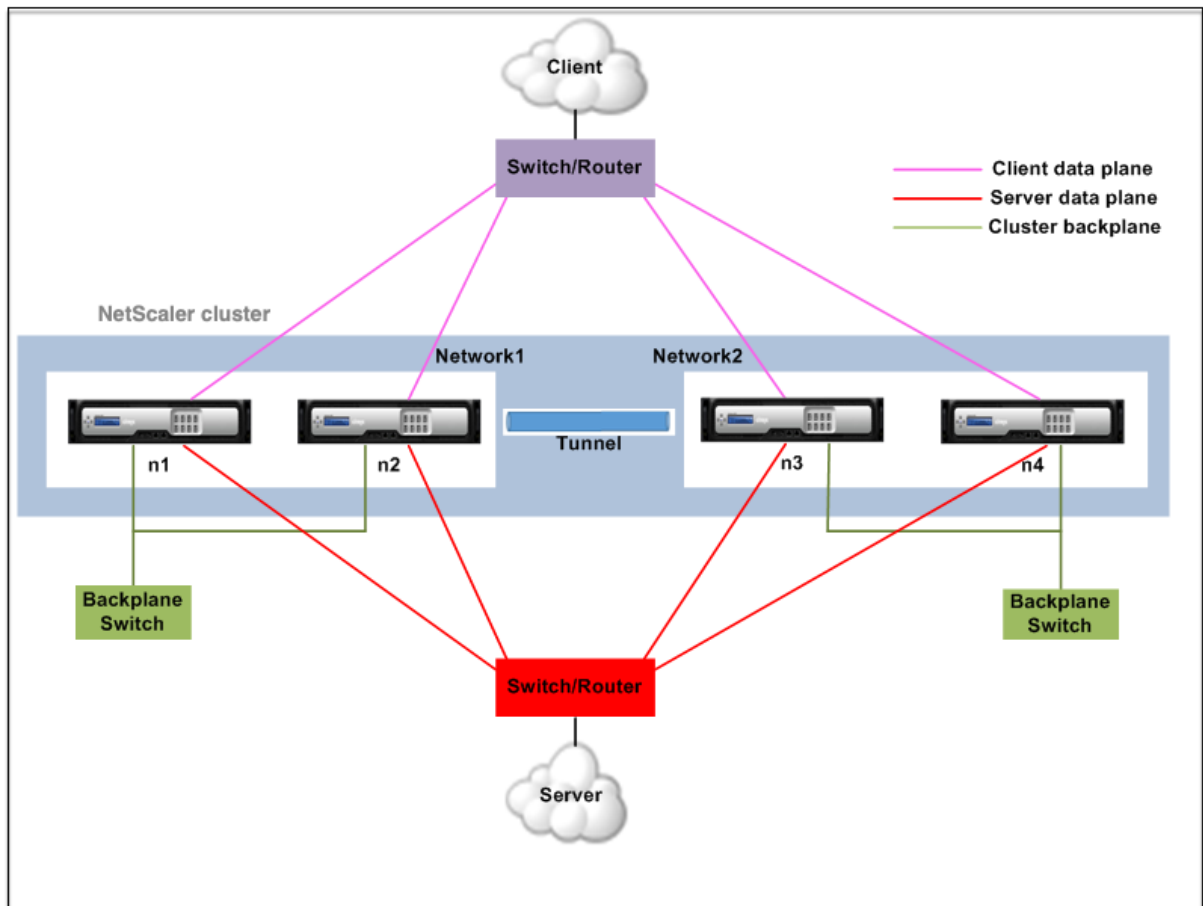


### Example

Consider an example of an L3 cluster deployment consisting of the following:

- Three NetScaler appliances (n1, n2, and n3) nodes are grouped into Nodegroup1.
- Similarly, the nodes n4 and n5 are grouped in Nodegroup2. In the third network, there are two node groups. Nodegroup3 includes n6 and n7 and Nodegroup4 includes n8 and n9.
- The NetScaler appliances that belong to the same network are combined to form a node group.



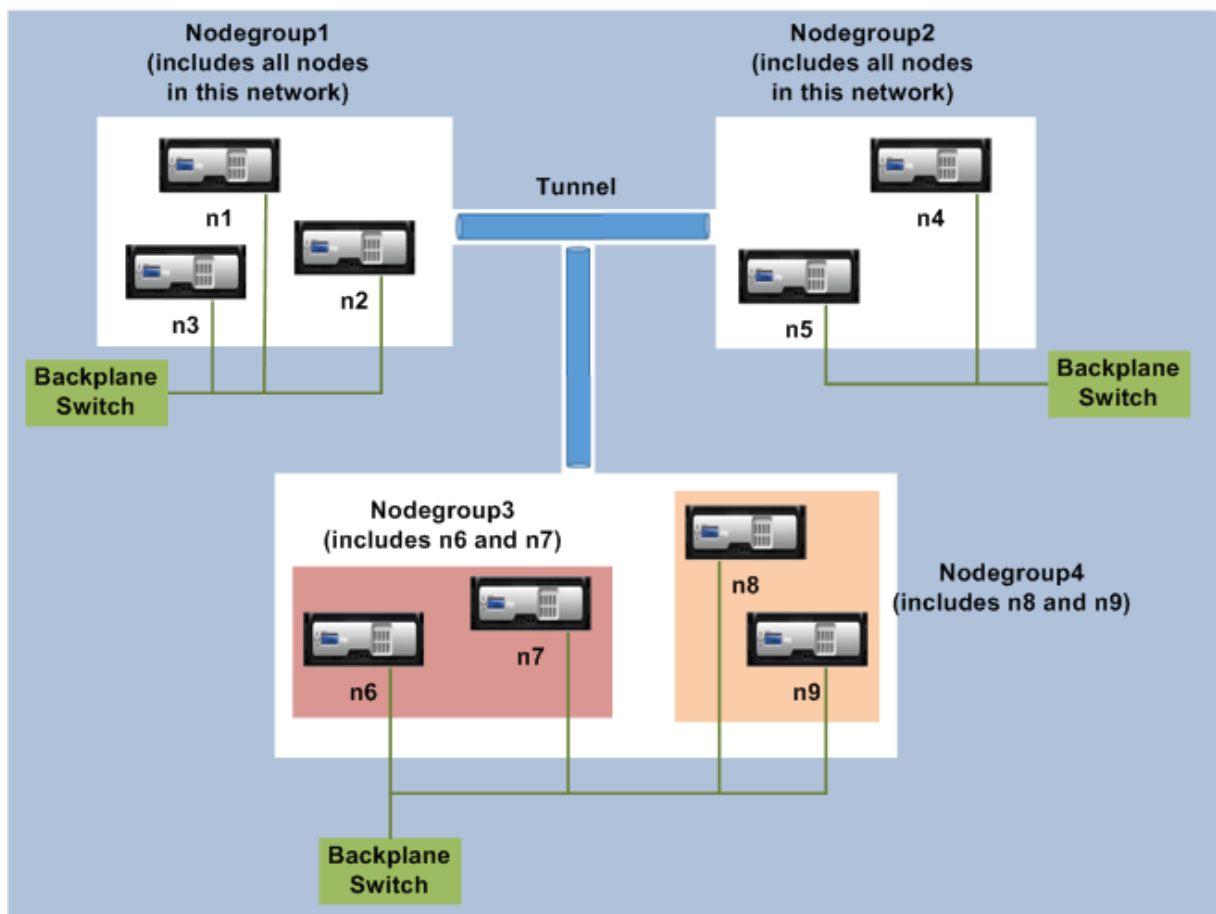

### Points to consider before configuring the L3 cluster

Consider the following points before configuring the L3 cluster on a NetScaler appliance:

- The backplane is not mandatory while configuring L3 subnets. If the backplane is not specified, the node does not go to the backplane fail state.

**Note:**

If you have more than one node in the same L2 network, it is mandatory to define the backplane interface. If the backplane interface is not mentioned, the nodes go to the backplane fail state.

- L2 features and striped SNIPs are not supported in the L3 cluster.
- The external traffic distribution in the L3 cluster supports only Equal Cost Multiple Path (ECMP).
- The ICMP errors and fragmentation are not processed when steering is disabled in an L3 cluster deployment:

- The networking entities (`route`, `route6`, `pbr`, and `pbr6`) must be bound to the configuration node group.
- VLAN, RNAT, and IP tunnel cannot be bound to a configuration node group.
- Configuration node group must always have property STRICT “YES.”
- The cluster nodes must not be added to a config node group via “add cluster node” command.
- The `add cluster instance -INC enabled` command clears the networking entities (`route`, `route6`, `PBR`, `pb6`, `RNAT`, `IP tunnel`, `ip6tunnel`).
- The `clear config extended+` command does not clear the entities (`route`, `route6`, `PBR`, `pb6`, `RNAT`, `IP tunnel`, `ip6tunnel`) in an L3 cluster.

## Configuring the L3 cluster

In an L3 cluster configuration, the cluster command has different attributes to configure that is based on nodes, and node groups. The L3 cluster configuration also includes an IPv6 profile apart from IPv4 profiles.

Configuring an L3 cluster on a NetScaler appliance consists of the following tasks:

- Create a cluster instance
- Create a node group in L3 cluster
- Add a NetScaler appliance to the cluster and group with node group
- Add cluster IP address to the node
- Enable the cluster instance
- Save the configuration
- Add a node to an existing node group
- Create a node group in L3 cluster
- Group new nodes to the newly created node group
- Join the node to the cluster

## Configuring the following by using the CLI

- **To create a cluster instance**

```
add cluster instance <clid> -inc <ENABLED|DISABLED> -processLocal
<ENABLED|DISABLED>
```

**Note:**

The “inc” parameter must be ENABLED for an L3 cluster.

- **To create a nodegroup in L3 cluster**

```
add cluster nodegroup <name>
```

- **To add a NetScaler appliance to the cluster and to associate with nodegroup**

```
add cluster node <nodeid> <nodeip> -backplane <interface_name>
nodegroup <ng> -tunnelmode UDP
```

- **To add the cluster IP address on this node**

```
add ns ip <IPAddress> <netmask> -type clip
```

- **Enable the cluster instance**

```
enable cluster instance <clId>
```

- **Save the configuration**

```
save ns config
```

- **Warm reboot the appliance**

```
reboot -warm
```

- **To add a new node to an existing nodegroup**

```
add cluster node <nodeid> <nodeip> -nodegroup <ng> -tunnelmode
UDP
```

- **To create a new nodegroup in L3 cluster**

```
add cluster nodegroup <ng>
```

- **To group new nodes to the newly created nodegroup**

```
add cluster node <nodeid> <nodeip> -nodegroup <ng> -tunnelmode
UDP
```

- **To join the node to the cluster**

```
join cluster -clip <ip_addr> -password <password>
```

```
1 Example: The following is an example configuration for nodegroup1 and
2 nodegroup2.
3 > add cluster instance 1 -inc ENABLED -processLocal ENABLED
4
5 Done
6
7 > add cluster nodegroup ng1
8
9 Done
10
11 > add cluster node 0 1.1.1.1 -state ACTIVE -backplane 0/1/1 -
nodegroup ng1 -tunnelmode UDP
```

```
12
13 Done
14
15 > add ns ip 1.1.1.100 255.255.255.255 -type clip
16
17 Done
18
19 > enable cluster instance 1
20
21 Done
22
23 > save ns config
24
25 Done
26
27 > add cluster node 1 1.1.1.2 - state ACTIVE - nodegroup ng1 -
 tunnelmode UDP
28
29 Done
30
31 > add cluster nodegroup ng2
32
33 Done
34
35 > add cluster node 4 2.2.2.1 - state ACTIVE - nodegroup ng2 -
 tunnelmode UDP
36
37 Done
38
39 > add cluster node 5 2.2.2.2 - state ACTIVE - nodegroup ng2 -
 tunnelmode UDP
40
41 Done
42
43 > join cluster -clip 1.1.1.100 -password nsroot
```

### Advertising cluster IP address of a L3 cluster

Configure the cluster IP address to be advertised to the upstream router to make the cluster configuration accessible from any subnet. The cluster IP address is advertised as a kernel route by the dynamic routing protocols configured on a node.

Advertising the cluster IP address consists of the following tasks:

- **Enable the host route option of the cluster IP address.** The host route option pushes the cluster IP address to a ZebOS routing table for kernel route redistribution through dynamic routing protocols.
- **Configuring a dynamic routing protocol on a node.** A dynamic routing protocol advertises the cluster IP address to the upstream router. For more information on configuring a dynamic

routing protocol, see [Configuring Dynamic Routes](#).

### To enable the host route option of the cluster IP address by using the CLI

At the command prompt, type:

- `add nsip <IPAddress> <netmask> -hostRoute ENABLED`
- `show nsip <IPAddress>`

```
1 > add ns ip 10.102.29.60 255.255.255.255 -hostRoute ENABLED
2
3 > Done
```

### Spotted, partially striped configurations on L3 cluster

The spotted and partially striped configurations on the L3 cluster slightly differ from the L2 cluster. The configuration might differ from node to node as the nodes reside on different subnets. The network configurations can be node specific in the L3 cluster, hence you have to configure the spotted or partially striped configurations based on the below-mentioned parameters.

To configure spotted, partially striped configurations on a NetScaler appliance over the L3 cluster, perform the following tasks:

- Add a cluster owner group to an IPv4 static routing table
- Add a cluster owner group to an IPv6 static routing table
- Add a cluster owner group to an IPv4 policy based routing (PBR)
- Add a cluster owner group to an IPv6 PBR
- Add a VLAN
- Bind a VLAN to a specific owner group of cluster node group

### Configuring the following by using the CLI

- **To add a cluster ownergroup to an IPv4 static route table of the NetScaler appliance**

```
add route <network> <netmask> <gateway> -owner group <ng>
```

- **To add a cluster ownergroup to an IPv6 static route table of the NetScaler appliance**

```
add route6 <network> -owner group <ng>
```

- **To add a cluster ownergroup to an IPv4 PBR**

```
add pbr <name> <action> -owner group <ng>
```

- **To add a cluster ownergroup to an IPv6 PBR**

```
add pbr6 <name> <action> -owner group <ng>
```

- **To add a VLAN**

```
add vlan <id>
```

- **To bind a VLAN to a specific ownergroup of cluster nodegroup**

```
bind vlan <id> -ifnum - [IPAddress <ipv4_addr | ipv6_addr> [-
owner group <ng>]
```

The following commands are sample examples of spotted and partially striped configurations which can be configured by using the CLI.

```
1 > add route 10.102.29.0 255.255.255.0 10.102.29.2 -ownergroup ng2
2
3 Done
4
5 > add route6 fe80::9404:60ff:fedd:a464/64 -ownergroup ng1
6
7 Done
8
9 > add pbr pbr1 allow -ownergroup ng1
10
11 Done
12
13 > add pbr6 pbr2 allow -ownergroup ng2
14
15 Done
16
17 > add vlan 2
18
19 Done
20
21 > bind vlan 2 -ifnum 1/2 - [IPAddress 10.102.29.80 | fe80::9404:60
22 ff:fedd:a464/64-ownergroup ng1
23
24 Done
```

### Configure node group

In an L3 cluster, to replicate the same set of configurations on more than one node group, the following commands are used:

### Configuring the following by using the CLI

- **To add an IPv4 static route to the routing table of the NetScaler appliance**

```
add route <network> <netmask> <gateway> -ownerGroup <ng>
```

**Sample Configuration:**

```
1 add route 0 0 10.102.53.1 - ownerGroup ng1
2
3 add route 0 0 10.102.53.1 - ownerGroup ng2
```

You define a new node group ‘all’ to support the preceding configuration, and have to configure the following commands:

**Configuring the following by using the CLI**

- **To add a new nodegroup to cluster with strict parameter**

```
add cluster node group <name> -strict <YES | NO>
```

- **To bind a cluster node or an entity to the given nodegroup**

```
bind cluster nodegroup <name> -node <nodeid>
```

- **To add IPv4 static route to all ownergroup**

```
add route <network> <netmask> <gateway> -ownerGroup <ng>
```

**Sample configuration:**

```
1 add cluster nodegroup all -strict YES
2
3 bind cluster nodegroup all -node 1
4
5 bind cluster nodegroup all -node 2
6
7 add route 0 0 10.102.53.1 -ownerGroup all
```

**Traffic distribution in a L3 cluster**

In a cluster setup, external networks view the collection of NetScaler appliances as a single entity. So, the cluster must select a single node that must receive the traffic. In the L3 cluster this selection is done using the ECMP. The selected node is called the flow receiver.

**Note**

For an L3 cluster (nodes across different networks), only the ECMP traffic distribution can be used.

The flow receiver gets the traffic and then, using internal cluster logic determines the node that must process the traffic. This node is called the flow processor. The flow receiver steers the traffic to the

flow processor over the backplane if the flow receiver and the flow processor are on the same network. The traffic is steered through the tunnel if the flow receiver and the flow processor are on different networks.

**Note**

- The flow receiver and flow processor must be nodes capable of serving traffic.
- From NetScaler 11 onwards, you can disable steering on the cluster backplane. For more information, see [Disabling steering on the cluster backplane](#).

The preceding figure shows a client request flowing through the cluster. The client sends a request to a virtual IP (VIP) address. A traffic distribution mechanism configured on the client data plane selects one of the cluster nodes as the flow receiver. The flow receiver receives the traffic, determines the node that must process the traffic, and steers the request to that node (unless the flow receiver selects itself as the flow processor). If the flow processor and flow receiver are in the same node group, the packet is steered over the backplane. And if the flow processor and flow receiver are in different node groups, then the packet is steered through the tunnel over the routed path.

The flow processor establishes a connection with the server. The server processes the request and sends the response to the subnet IP (SNIP) address that sent the request to the server. Since in the L3 cluster the SNIP is always a spotted SNIP, the node that owns the SNIP address receives the response from the server.

## Setting up a NetScaler cluster

May 2, 2023

NetScaler appliances that you want to add to the cluster must satisfy the criteria specified in [Prerequisites for Cluster Nodes](#). Before actually setting up a cluster, you must be aware of cluster basics. For information, see [Cluster Overview](#).

Forming a cluster requires you to set up inter-node communication, create the cluster (by adding the first NetScaler appliance), and then add the other cluster nodes. Each of these steps is explained with relevant details in subsequent topics.

**Note**

While there are some differences in setting up an L2 and L3 cluster, there are many similarities too. The subsequent topics explain the setup for both cluster types while highlighting the configurations that are specific to L3 clusters.



## Setting up inter-node communication

October 18, 2024

The nodes in a cluster setup communicate with one another using the following inter-node communication mechanisms:

- Nodes that are within the network (the same subnet) communicate with each other through the cluster backplane. The backplane must be explicitly set up. The following are the detailed steps.
- Across networks, steering of packets is done through a GRE tunnel and other node-to-node communication is routed across nodes as required.

### Important:

- From Release 11.0 all builds, a cluster can include nodes from different networks.
- From Release 13.0 build 58.3, GRE steering is supported on Fortville NICs in an L3 cluster.

### To set up the cluster backplane, do the following for every node

1. Identify the network interface that you want to use for the backplane.
2. Connect an Ethernet or optical cable from the selected network interface to the cluster backplane switch.

For example, to use interface 1/2 as the backplane interface for node 4, connect a cable from the 1/2 interface of node 4 to the backplane switch.

### Important points to note when setting up the cluster backplane

- Do not use the appliance's management interface (0/x) as the backplane interface. In a cluster, the interface 0/1/x is read as:  
0 -> node ID 0  
1/x -> NetScaler interface
- Do not use the backplane interfaces for the client or server data planes.
- Citrix recommends using the link aggregate (LA) channel for the cluster backplane.

#### Note:

After you unbind an interface from the LA channel, ensure that you set an appropriate MTU size for the unbound interface.

- In a two-node cluster, where the backplane is connected back-to-back, the cluster is operationally DOWN under any of the following conditions:
  - One of the nodes is rebooted.
  - The backplane interface of one of the nodes is disabled.

Therefore, Citrix recommends that you dedicate a separate switch for the backplane, so that the other cluster node and traffic are not impacted. You cannot scale out the cluster with a back-to-back link. You might encounter a downtime in the production environment when you scale out the cluster nodes.

- Backplane interfaces of all nodes of a cluster must be connected to the same switch and bound to the same L2 VLAN.
- If you have multiple clusters with the same cluster instance ID, make sure that the backplane interfaces of each cluster are bound to a different VLAN.
- The backplane interface is always monitored, regardless of the HA monitoring settings of that interface.
- The state of MAC spoofing on the different virtualization platforms can affect the steering mechanism on the cluster backplane. Therefore, make sure that the appropriate state is configured:
  - XenServer - Disable MAC spoofing
  - Hyper-V - Enable MAC spoofing
  - VMware ESX - Enable MAC spoofing (also make sure “Forged Transmits” is enabled)
- The Maximum Transmission Unit (MTU) value for the cluster backplane is automatically updated. However, if jumbo frames are configured on the cluster, the MTU of the cluster backplane must be explicitly configured.

The configured MTU value must be the same across all nodes in the cluster for the following:

- ```
1 - Server data plane (X)
2 - Client data plane (Y)
3 - Backplane: The configured MTU value must be set to 78 +
    maximum of X and Y.
```

Note:

The MTU values for the server data plane (X) and client data plane (Y) do not need to be the same.

For example, if the MTU of a server data plane is 7500 and of the client data plane is 8922 across the cluster, then the MTU of a cluster backplane must be set to $78 + 8922 = 9000$ across the cluster.

To set this MTU, use the following command:

```
> set interface <backplane_interface> -mtu <value>
```

- The MTU for the interfaces of the backplane switch must be specified to be greater than or equal to 1,578 bytes. It is applicable if the cluster has features like MBF, L2 policies, ACLs, routing in CLAG deployments, and vPath.

Note:

The default MTU size for a backplane interface is 1578. To reset the MTU size to the default value, you must use the `unset interface <backplane_interface> -mtu` command.

UDP based tunnel support for L2 and L3 cluster

Starting from NetScaler release 13.0 build 36.x, NetScaler L2 and L3 cluster can steer the traffic using UDP based tunneling. It is defined for the inter-node communications of two nodes in a cluster. By using the “tunnel mode” parameter, you can set GRE or UDP tunnel mode from the add and set cluster node command.

In an L3 cluster deployment, packets between NetScaler nodes are exchanged over an unencrypted GRE tunnel that uses the NSIP addresses of the source and destination nodes for routing. When this exchange occurs over the internet, in the absence of an IPsec tunnel, the NSIPs are exposed on the internet, and might result in security issues.

Important:

Citrix recommends customers to establish their own IPsec solution when using a L3 cluster.

The following table helps you to categorize the tunnel support based on different deployments.

Steering Types	AWS	Microsoft Azure	On -premises
MAC	Not supported	Not supported	Supported
GRE tunnel	Supported	Not supported	Supported
UDP tunnel	Supported	Supported	Supported

Important:

In a L3 cluster, the tunnel mode is set to GRE by default.

Configuring a UDP based tunnel

You can add a cluster node by setting the parameters of node ID and mention the state. Configure the backplane by providing the interface name, and select the tunnel mode of your choice (GRE or

UDP).

Note:

You must configure the tunnel mode from the Cluster IP address.

CLI procedures To enable the UDP tunnel mode by using the CLI.

At the command prompt, type:

- `add cluster node <nodeId>@ [-state <state>] [-backplane <interface_name >] [-tunnelmode <tunnelmode>]`
- `set cluster node <nodeId>@ [-state <state>] [-tunnelmode <tunnelmode >]`

Note:

Possible values for tunnel mode are NONE, GRE, UDP.

Example

- `add cluster node 1 -state ACTIVE -backplane 1/1/1 -tunnelmode UDP`
- `set cluster node 1 -state ACTIVE -tunnelmode UDP`

GUI procedures To enable the UDP tunnel mode by using the GUI.

1. Navigate to **System > Cluster > Nodes**.
2. In the **Cluster Nodes** page, click **Add**.
3. In the **Create Cluster Node**, set the **Tunnel Mode** parameter to UDP and click **Create**.

← Create Cluster Node

Node id	<input type="text" value="1"/>
NetScaler IP address	<input type="text" value="1 . 1 . 1 . 1"/>
Backplane interface	<input type="text" value="1/1/1"/>
State*	<input type="text" value="PASSIVE"/> ⓘ
Node Group	<input type="text" value="DEFAULT_NG"/> ⓘ
Priority	<input type="text" value="31"/>
Tunnel Mode	<input type="text" value="UDP"/> ⓘ
<input checked="" type="checkbox"/> Execute join command and reboot the remote system	

4. Click **Close**.

Creating a NetScaler cluster

May 2, 2023

To create a cluster, start by taking one of the NetScaler appliances that you want to add to the cluster. On this node, you must create the cluster instance and define the cluster IP address. This node is the first cluster node and is called the cluster configuration coordinator (CCO). All configurations that are performed on the cluster IP address are stored on this node and then propagated to the other cluster nodes.

The responsibility of CCO in a cluster is not fixed to a specific node. It can change over time depending on the following factors:

- The priority of the node. The node with the highest priority (lowest priority number) is made the CCO. Therefore, if a node with a priority number lower than the existing CCO is added, the

new node takes over as the CCO.

- If the current CCO goes down, the node with the next lowest priority number takes over as the CCO. If the priority is not set or if there are multiple nodes with the lowest priority number, the CCO is selected from one of the available nodes.

Note:

The configurations of the appliance (including SNIP addresses and VLANs) are cleared by implicitly running the `clear ns config extended` command. However, the default VLAN and NSVLAN are not cleared from the appliance. Therefore, if you want the NSVLAN on the cluster, make sure it is created before the appliance is added to the cluster. For an L3 cluster (cluster nodes on different networks), networking configurations are not cleared from the appliance.

Important:

HA Monitor (HAMON) on a cluster setup is used to monitor the health of an interface on each node. The HAMON parameter must be enabled on each node to monitor the state of the interface. If the operational state of the HAMON enabled interface goes down due to any reason, the respective cluster node is marked as unhealthy (NOT UP) and that node cannot serve traffic.

Create a cluster by using the command line interface

- Log on to a NetScaler appliance (for example, appliance with NSIP address 10.102.29.60) that you want to add to the cluster.
- Add a cluster instance.

```
1 add cluster instance <clId> -quorumType <NONE | MAJORITY> -inc <
  ENABLED | DISABLED> -backplanebasedview <ENABLED | DISABLED>
```

- The `-dfdretainl2params` option enables you to add the extended L2 headers for the backplane traffic.

At the command prompt, type:

```
add cluster instance 1 -dfdretainl2params <ENABLED|DISABLED>
```

The following command displays the status of the `-dfdretainl2params`:

```
show cluster instance <clusterid>
```

Use the following command to enable or disable the `-dfdretainl2params`:

```
set cluster instance 1 -dfdretainl2params <ENABLED|DISABLED>
```

- The `-proxyarpstatus` option enables or disables the proxy arp functionality for cluster.

At the command prompt, type:

```
add cluster instance 1 -proxyarpstatus <ENABLED|DISABLED>
```

The following command displays the status of the `proxyarpstatus`:

```
show cluster instance <clusterid>
```

You can use the following command to enable or disable the `proxyarpstatus`:

```
set cluster instance 1 -proxyarpstatus <ENABLED|DISABLED>
```

Note:

- The cluster instance ID must be unique within a LAN.
- The `-quorumType` parameter must be set to MAJORITY and not NONE in the following scenarios:
 - Topologies which do not have redundant links between cluster nodes. These topologies might be prone to network partition due to a single point of failure.
 - During any cluster operations such as node addition or removal.
- For an L3 cluster, make sure the `-inc` parameter is set to ENABLED. The `-inc` parameter must be disabled for an L2 cluster.
- When the `-backplanebasedview` parameter is enabled, the operational view (set of nodes that serve traffic) is decided based on heartbeats received only on the backplane interface. By default, this parameter is disabled. When this parameter is disabled, a node does not depend on the heartbeat reception only on the backplane.

1. [Only for an L3 cluster] Create a node group. In the next step, the newly added cluster node must be associated with this node group.

Note:

This node group includes all or a subset of the NetScaler appliances that belong to the same network.

```
1 add cluster nodegroup <name>
```

2. Add the NetScaler appliance to the cluster.

```
1 add cluster node <nodeId> <IPAddress> -state <state> -backplane <interface_name> -nodegroup <name>
```

Note:

For an L3 cluster:

- The node group parameter must be set to the name of the node group that is created.
- The backplane parameter is mandatory for nodes that are associated with a node group that has more than one node, so that the nodes within the network can com-

communicate with each other.

Example:

Adding a node for an L2 cluster (all cluster nodes are in the same network).

```
1 add cluster node 0 10.102.29.60 -state PASSIVE -backplane 0/1/1
```

Adding a node for an L3 cluster which includes a single node from each network. Here, you do not have to set the backplane.

```
1 add cluster node 0 10.102.29.60 -state PASSIVE -nodegroup ng1
```

Adding a node for an L3 cluster which includes multiple nodes from each network. Here, you have to set the backplane so that nodes within a network can communicate with each other.

```
1 add cluster node 0 10.102.29.60 -state PASSIVE -backplane 0/1/1  
-nodegroup ng1
```

3. Add the cluster IP address (for example, 10.102.29.61) on this node.

```
1 add ns ip <IPAddress> <netmask> -type clip
```

Example

```
1 add ns ip 10.102.29.61 255.255.255.255 -type clip
```

4. Enable the cluster instance.

```
1 enable cluster instance <clId>
```

5. Save the configuration.

```
1 save ns config
```

6. Warm reboot the appliance.

```
1 reboot -warm
```

Verify the cluster configurations by using the show cluster instance command. Verify that the output of the command displays the NSIP address of the appliance as a node of the cluster.

7. After the node is UP, login to the CLIP and change RPC credentials for both cluster IP address and Node IP address. For more information about changing an RPC node password, see [Change an RPC node password](#).

To create a cluster by using the GUI

1. Log on to an appliance (for example, an appliance with NSIP address 10.102.29.60) that you intend to add to the cluster.

2. Navigate to **System > Cluster**.
3. In the details pane, click the **Manage Cluster** link.
4. In the Cluster Configuration dialog box, set the parameters required to create a cluster. For a description of a parameter, hover the mouse cursor over the corresponding text box.
5. Click **Create**.
6. In the Configure cluster instance dialog box, select the Enable cluster instance check box.
7. In the Cluster Nodes pane, select the node and click **Open**.
8. In the Configure Cluster Node dialog box, set the State.
9. Click **OK**, and then click **Save**.
10. Warm reboot the appliance.
11. After the node is UP, login to the CLIP and change RPC credentials for both cluster IP address and Node IP address. For more information about changing an RPC node password, see [Change an RPC node password](#).

Strict mode support for sync status of the cluster

You can now configure a cluster node to view errors when applying the configuration. A new parameter, “syncStatusStrictMode” is introduced in both the add and set cluster instance command to track the status of each node in a cluster. By default, the `syncStatusStrictMode` parameter is disabled.

To enable the strict mode by using the CLI

At the command prompt, type:

```
1 set cluster instance <clID> [-syncStatusStrictMode (ENABLED | DISABLED)]
```

Example:

```
1 set cluster instance 1 - syncStatusStrictMode ENABLED
```

To view the status of strict mode by using the CLI

```
1 >show cluster instance
2 1) Cluster ID: 1
3     Dead Interval: 3 secs
4     Hello Interval: 200 msec
5     Preemption: DISABLED
6     Propagation: ENABLED
7     Quorum Type: MAJORITY
8     INC State: DISABLED
```

```

9      Process Local: DISABLED
10     Retain Connections: NO
11     Heterogeneous: NO
12     Backplane based view: DISABLED
13     Cluster sync strict mode: ENABLED
14     Cluster Status: ENABLED(admin), ENABLED(operational), UP
15
16     WARNING(s):
17     (1) - There are no spotted SNIPs configured on the cluster.
18           Spotted SNIPs can help improve cluster performance
19
20     Member Nodes:
21     Node ID      Node IP      Health      Admin State  Operational
22     State
23     -----      -
24     1)          1           192.0.2.20  UP           ACTIVE       ACTIVE (
25           Configuration Coordinator)
26     2)          2           192.0.2.21  UP           ACTIVE       ACTIVE
27     3)          3           192.0.2.19* UP           ACTIVE       ACTIVE

```

To view the sync failure reason of a cluster node by using the GUI

1. Navigate to **System > Cluster > Cluster Nodes**.
2. In the **Cluster Nodes** page, scroll to the extreme right to view the details of the synchronization failure reason of the cluster nodes.

Add a node to the cluster

December 20, 2024

You can seamlessly scale the size of a cluster to include a maximum of 32 nodes. When a NetScaler appliance is added to the cluster, the configurations from that appliance are cleared (by internally running the clear ns config -extended command). The SNIP addresses, **MTU** settings of the backplane interface, and all VLAN configurations (except the default VLAN and NSVLAN) are also cleared from the appliance.

The cluster configurations are then synchronized on this node. There can be an intermittent drop in traffic while the synchronization is in progress.

Important:
 Before you add a NetScaler appliance to a cluster:

- Set up the backplane interface for the node. Check the preceding topic.
- Check if the licenses that are available on the appliance match that are available on the configuration coordinator. The appliance is added only if the licenses match.
- If you want the NSVLAN on the cluster, make sure that the NSVLAN is created on the appliance before it is added to the cluster.
- Citrix recommends that you add the node as a passive node. Then, after joining the node to the cluster, complete the node specific configuration from the cluster IP address. Run the force cluster sync command if the cluster has only spotted IP addresses. And which has L3 VLAN binding, or has static routes.
- When an appliance with a preconfigured link aggregate (LA) channel is added to a cluster, the LA channel continues to exist in the cluster environment. The LA channel is renamed from LA/x to nodeId/LA/x, where LA/x is the LA channel identifier.

Add a node to the cluster by using the CLI

Note:

When you add a node to a cluster setup, make sure that the default static route configured in the node is present in the cluster coordinator node (CCO). If the node has a static route not present in the CCO, the command fails with the following error.

Node cannot join cluster as **static default** gateway route is not present in CCO

1. Log on to the cluster IP address, at the command prompt, do the following:

- Add the appliance (for example, 10.102.29.70) to the cluster.

Note:

For an L3 cluster:

- The node group parameter must be set to a node group that has nodes of the same network.
- If this node belongs to the same network as the first node that was added, then configure the node group that was used for that node.
- If this node belongs to a different network, then create a node group and bind this node to the node group.
- The backplane parameter is mandatory for nodes that are associated with a node group that has more than one node, so that the nodes within the network can communicate with each other.

```
1 add cluster node <nodeId> <IPAddress> -state <state> -backplane <
  interface_name> -nodegroup <name>
```

```

2
3 Example:
4
5 add cluster node 1 10.102.29.70 -state PASSIVE -backplane 1/1/1
6 Warning: Add spotted configurations using the cluster IP for this
   addresses, ARP entries, interface settings, route6s, IP tunnel,
   IPv6 tunnels, RNATs, PBRs, PBR6, Cluster LAGs, ND6s entries,
   FISs, linksets, SNMP MIB / engine ID, diameters, Citrix ADC VPX
   param, and hostname. If a backup is taken using the
   spottedconfig script for this node, apply it using the cluster
   IP after the node has joined the setup.
7 Done

```

- Save the configuration.

```
1 save ns config
```

2. Log on to the newly added node (for example, 10.102.29.70) and join the node to the cluster.

```

1 join cluster -clip <ip_addr> -password <password>
2
3 Example:
4
5 join cluster -clip 10.102.29.61 -password nsroot

```

3. Configure the following commands on the CLIP.

- Bind VLAN to an interface

```
1 bind vlan <id> -ifnum <interface_name>
```

Example:

```
1 bind vlan 1 -ifnum 2/1/2
```

- Add spotted IP address to the newly added node

```
1 add ns ip <IpAddress> <netmask> -ownerNode <positive_integer>
```

Example:

```
1 add ns ip 97.131.0.3 255.0.0.0 -ownerNode 2
```

- Verify VLAN on NSIP

```
1 show vlan <id>
```

Example:

```
1 show vlan 1
```

4. Perform the following configurations:

- If the node is added to a cluster that has only spotted IPs, the configurations are synchronized before the spotted IP addresses are assigned to that node. In such cases, L3 VLAN bindings can be lost. To avoid this loss, either add a striped IP or add the L3 VLAN bindings.
- Define the required spotted configurations.
- Set the MTU for the backplane interface.

5. Save the configuration.

```
1 save ns config
```

6. Warm reboot the appliance.

```
1 reboot -warm
```

7. After the node is UP and sync is successful, change the RPC credentials for the node from the cluster IP address. For more information about changing an RPC node password, see [Change an RPC node password](#).

```
1 set rpcNode <node-NSIP> -password <passwd>
2
3 Example:
4
5 set rpcNode 192.0.2.4 -password mypassword
```

8. Set the cluster node to Active.

```
1 set cluster node <nodeID> -state active.
2
3 Example:
4
5 set cluster node 1 -state active
```

Add a node to the cluster by using the GUI

1. Log on to the cluster IP address.
2. Navigate to **System > Cluster > Nodes**.
3. In the details pane, click **Add** to add the new node (for example, 10.102.29.70).
4. In the **Create Cluster Node** dialog box, we recommend to configure the new node in a PASSIVE state. For a description of a parameter, hover the mouse cursor over the corresponding text box.
5. Click **Create**. When prompted to perform a warm reboot, click **Yes**.
6. After the node is UP and sync is successful:

- a) Change RPC credentials for the node from the cluster IP address. For more information about changing an RPC node password, see [Change an RPC node password](#).
 - b) Ensure that you configure the necessary spotted configuration on the cluster nodes. For more information on the list of spotted configuration, see [List of spotted configuration](#) and [Supportability matrix for NetScaler cluster](#).
 - c) Go to **Configuration > System > Cluster** and click **Force cluster sync** to avoid any configuration inconsistencies.
7. Navigate to **System > Cluster > Nodes > Edit**.
 8. Modify the State to **ACTIVE** and confirm.

Join a previously added node to the cluster by using the GUI

If you have used the CLI to add a node to the cluster, but have not joined the node to the cluster, you can use the following procedure.

Note:

When a node joins the cluster, it takes over its share of traffic from the cluster and hence an existing connection can get terminated.

1. Log on to the node that you want to join to the cluster (for example, 10.102.29.70).
2. Navigate to **System > Cluster**.
3. In the details pane, under Get Started, click the Join Cluster link.
4. In the Join to existing cluster dialog box, set the cluster IP address and the `nsroot` password of the configuration coordinator. For a description of a parameter, hover the mouse cursor over the corresponding text box.
5. Click **OK**.

Viewing the details of a cluster

December 20, 2024

You can view the details of the cluster instance and the cluster nodes by logging on to the cluster IP address.

View details of a cluster instance by using the CLI

Log on to the cluster IP address and at the command prompt, type:

```
1 show cluster instance <clId>
```

Note:

When the preceding command is run from the NSIP address of the non-CCO node, the command displays the status of the cluster on this node.

View details of a cluster node by using the CLI

Log on to the cluster IP address and at the command prompt, type:

```
1 show cluster node <nodeId>
```

View details of an interface by using the CLI

Log on to the cluster IP address and at the command prompt, type:

```
1 show interface <interfaceId>
```

Note:

Starting from 14.1-34.x, NetScaler displays the passive or spare node's information.

View details of a cluster instance by using the GUI

1. Log on to the cluster IP address.
2. Navigate to **System > Cluster**.
3. In the details pane, under **Get Started**, click the **Manage Cluster** link to view the details of the cluster.

To view details of a cluster node by using the GUI

1. Log on to the cluster IP address.
2. Navigate to **System > Cluster > Nodes**.
3. In the details pane, click the node for which you want to view the details.

Distributing traffic across cluster nodes

May 2, 2023

After you have created the NetScaler cluster and performed the required configurations, you must deploy Equal Cost Multiple Path (ECMP) or cluster Link Aggregation (LA) on the client data plane (for client traffic) or server data plane (for server traffic). These mechanisms distribute external traffic across the cluster nodes.

Policy-based backplane steering

The policy-based backplane steering (PBS) is a mechanism in cluster deployment, which steers the traffic across cluster nodes based on the hash method defined for the flow. The flow is defined by a combination of L2 and L3 parameters similar to the Access Control List (ACL).

The PBS supports both IPv4 and IPv6 traffic. In the case of IPv6 deployments, the steering supports an extra option [`dfdprefix <positive_integer>`]. It provides the flexibility to choose the same flow processor for the same IP prefix. The prefix option is supported for source IP or destination IP hash methods only.

Note

If the PBS mechanism is not used to steer the traffic, the traffic is steered through the default method.

To configure the new ACL attributes, at the CLI, type the following commands:

CLI commands for IPv4

- `add ns acl <aclname> <aclaction> [-type (classic | dfd)] [-dfdhash <dfdhash>]`
- `set ns acl <aclname> <aclaction> [-dfdhash <dfdhash>]`
- `show ns acl [<aclname>][-type (classic | DFD)]`
- `apply ns acls [-type (classic | DFD)]`
- `clear ns acls [-type (classic | DFD)]`
- `renumber ns acls [-type (classic | DFD)]`

CLI commands for IPv6

- `add ns acl6 <acl6name> <acl6action> [-type (classic | dfd)][-dfdhash <dfdhash>][-dfdprefix <positive_integer>]`

- `set ns acl6 <acl6name> <acl6action> [-dfdhash <dfdhash>][-dfdprefix <positive_integer>]`
- `show ns acl6 [<acl6name>][-type (classic | DFD)]`
- `apply ns acls6 [-type (classic | DFD)]`
- `clear ns acls6 [-type (classic | DFD)]`
- `renumber ns acls6 [-type (classic | DFD)]`

The following are the different types of hash methods that you can specify to steer the packet to the flow processor:

- SIP-SPORT-DIP-DPORT
- SIP
- DIP
- SIP-DIP
- SIP-SPORT

Limitations

1. The traffic flow distribution across the cluster nodes is not ensured, as the flow processor is decided by the admin configured rules.
2. L2 mode is not supported.
3. The node groups and striped SNIPs are not supported, as there is no deployment scenarios.
4. MPTCP is not supported.
5. Support only for TCP, UDP, and ICMP traffic.
6. Cluster over L3 mode is not supported.
7. Process local at service level is not supported.

Using the Equal Cost Multiple Path (ECMP)

December 20, 2024

By using the Equal Cost Multiple Path (ECMP) mechanism on a cluster deployment, active cluster nodes advertise the virtual server IP addresses. The cluster node which receives the advertised traffic steers the traffic to the node that must process the traffic. There can be redundant steering in spotted and partially striped virtual servers. Therefore, from NetScaler 11 onwards, spotted and partially striped virtual server IP addresses advertise the owner nodes, which reduce the redundant steering.

You must have detailed knowledge of routing protocols to use ECMP. For more information, see [Configuring Dynamic Routes](#). For more information on routing in a cluster, see [Routing in a Cluster](#).

To use ECMP, you must first perform the following:


- Enable the required routing protocol (OSPF, RIP, BGP, or ISIS) on the cluster IP address.
- Bind the interfaces and the spotted IP address (with dynamic routing enabled) to a VLAN.
- Configure the selected routing protocol and redistribute the kernel routes on the ZebOS by using the VTYSH shell.

Perform similar configurations on the cluster IP address and on the external connecting device.

Note:

- Make sure that the licenses on the cluster support dynamic routing, otherwise ECMP does not work.
- ECMP is not supported for wildcard virtual servers since RHI needs a VIP address to advertise to a router and wildcard virtual servers. As they do not have associated VIP addresses.

Figure 1. ECMP topology

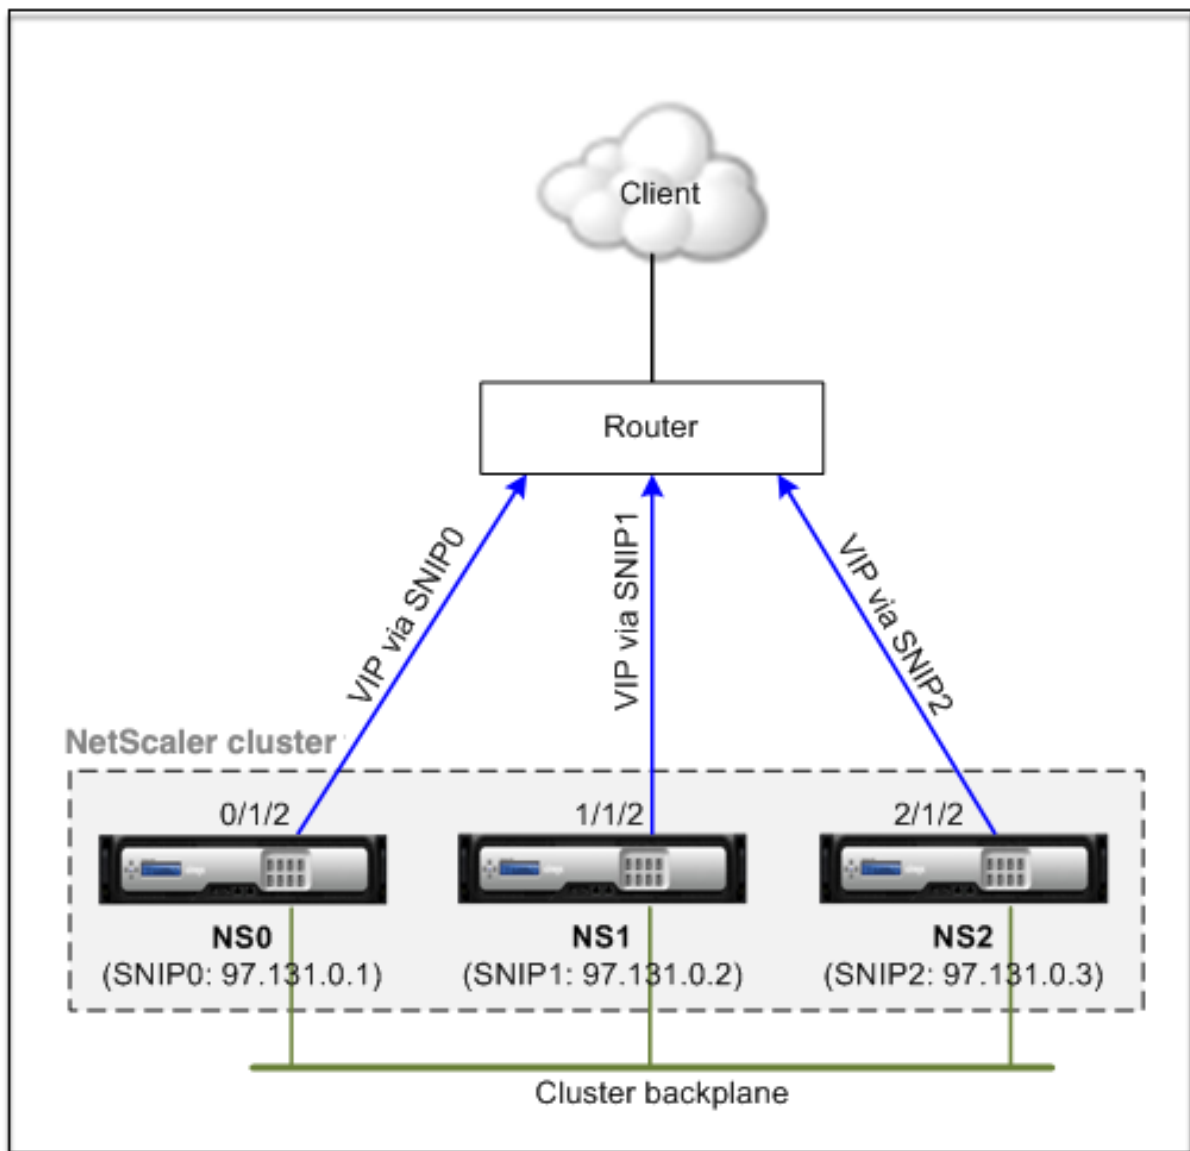

When you use the ECMP mechanism for traffic distribution on a cluster deployment, the active cluster nodes advertise the virtual server IP addresses to the upstream router. The ECMP router can reach the VIP address via SNIP0, SNIP1, or SNIP2. The traffic flow in the Figure 1 is described as follows:

1. The client sends a request to the VIP hosted on the cluster.
2. The upstream router, based on the learned routes of the VIP, forwards the packet to any one of the nodes. Let's say NS1. The node NS1 is the flow receiver.
3. The flow receiver (NS1) determines the node that must process the traffic, which is called the flow processor. For example, Node NS2 is the flow processor.
4. The flow receiver (NS1) with SNIP1 (97.131.0.2) steers the request to the flow processor (NS2) with SNIP2 (97.131.0.3).
5. The flow processor (NS2) establishes a connection with the server.

6. The server processes the request and sends the response to the SNIP address that sent the request to the server.

Notes:

- Only ACTIVE nodes advertise VIP routes.
- INACTIVE nodes do not advertise VIP routes.
- All ACTIVE nodes advertise striped VIPs.
- Only ACTIVE owner nodes advertise spotted or partially striped VIPs.

To configure ECMP on the cluster by using the command line interface

1. Log on to the cluster IP address.
2. Enable the routing protocol.

```
1 enable ns feature <feature>
```

Example: To enable the OSPF routing protocol.

```
1 enable ns feature ospf
```

3. Add a VLAN.

```
1 add vlan <id>
```

Example

```
1 add vlan 97
```

4. Bind the interfaces of the cluster nodes to the VLAN.

```
1 bind vlan <id> -ifnum <interface_name>
```

Example

```
1 bind vlan 97 -ifnum 0/1/2 1/1/2 2/1/2
```

5. Add a spotted SNIP address for each node and enable dynamic routing on it.

```
1 add ns ip <SNIP> <netmask> -ownerNode <positive_integer> -  
dynamicRouting ENABLED
```

Example

```
1 add ns ip 97.131.0.1 255.0.0.0 -ownerNode 0 -dynamicRouting  
ENABLED -type SNIP  
2 add ns ip 97.131.0.2 255.0.0.0 -ownerNode 1 -dynamicRouting  
ENABLED -type SNIP
```

```
3 add ns ip 97.131.0.3 255.0.0.0 -ownerNode 2 -dynamicRouting
   ENABLED -type SNIP
```

6. Bind one of the spotted SNIP addresses to the VLAN. When you bind one spotted SNIP address to a VLAN, all other spotted SNIP addresses defined on the cluster in that subnet are automatically bound to the VLAN.

```
1 bind vlan <id> -IPAddress <SNIP> <netmask>
```

Example

```
1 bind vlan 97 -ipAddress 97.131.0.1 255.0.0.0
```

Note

You can use NSIP addresses of the cluster nodes instead of adding SNIP addresses. If so, you do not have to perform steps 3–6.

7. Configure the routing protocol on ZebOS using the VTYSH shell.

Example:

To configure an OSPF routing protocol on node IDs 0, 1, and 2.

```
1 vtysh
2 ! interface vlan97 !
3 router ospf owner-node 0
4 ospf router-id 97.131.0.1 exit-owner-node
5 owner-node 1 ospf router-id 97.131.0.2
6 exit-owner-node
7 owner-node 2
8 ospf router-id 97.131.0.3 exit-owner-node redistribute kernel
   network 97.0.0.0/8 area 0 !
```

Note:

For VIP addresses to be advertised, RHI setting is done by using the vserverRHILevel parameter as follows:

```
1 add ns ip <IPAddress> <netmask> -type VIP -vserverRHILevel <
   vserverRHILevel>
```

For OSPF specific RHI settings, there are more settings that can be done as follows:

```
1 add ns ip <IPAddress> <netmask> -type VIP -ospfLSAType \( TYPE1 |
   TYPE5 ) -ospfArea <positive\_integer>
```

Use the add ns ip6 command to perform the preceding commands on IPv6 addresses.

8. Configure ECMP on the external switch. The following sample configurations are provided for the Cisco® Nexus 7000 C7010 Release 5.2(1) switch. Similar configurations must be performed

on other switches.

```

1 //For OSPF (IPv4 addresses) Global config: Configure terminal
  feature ospf      Interface config: Configure terminal
  interface Vlan10  no shutdown      ip address 97.131.0.5/8
  Configure terminal router ospf 1 network 97.0.0.0/8 area
  0.0.0.0 -----
2
3 //For OSPFv3 (IPv6 addresses) Global config: Configure terminal
  feature ospfv3    Configure terminal interface Vlan10    no
  shutdown         ipv6 address use-link-local-only        ipv6 router
  ospfv3 1 area 0.0.0.0  Configure terminal router ospfv3 1

```

Router monitoring cluster nodes in ECMP deployment

In a cluster setup, on an owner node that has a spotted SNIP address configuration, you can now disable the ownerDownResponse option. By default, the option is enabled, allowing the node to respond to an ICMP/ARP/ICMP6/ND6 request coming from the upstream router. You can now disable this option to allow the router to monitor if a cluster node is active or inactive. When the router sends a request, if the option is disabled, it identifies the owner node to be inactive and unavailable for traffic distribution.

To configure ECMP for static routes traffic distribution by using the command line interface

```

1 add ns ip <ipaddress> <netmask> -ownernode <node-id> - ownerDownResponse
  disable

```

Use Case: ECMP with BGP routing

December 21, 2020

To configure ECMP with BGP routing protocol, perform the following steps:

1. Log on to the cluster IP address.
2. Enable BGP routing protocol.

```

1 > enable ns feature bgp

```

3. Add VLAN and bind the required interfaces.

```

1 > add vlan 985
2 > bind vlan 985 -ifnum 0/0/1 1/0/1

```

4. Add the spotted IP address and bind them to the VLAN.

```
1 > add ns ip 10.100.26.14 255.255.255.0 -ownerNode 1 -  
    dynamicRouting ENABLED  
2 > add ns ip 10.100.26.15 255.255.255.0 -ownerNode 2 -  
    dynamicRouting ENABLED  
3 > bind vlan 985 -ipAddress 10.100.26.10 255.255.255.0
```

5. Configure BGP routing protocol on ZebOS using the VTYSH shell.

```
1 > vtysh conf t router bgp 65535 neighbor 10.100.26.1 remote-as  
    65535
```

6. Configure BGP on the external switch. The following sample configurations are provided for the Cisco® Nexus 7000 C7010 Release 5.2(1) switch. Similar configurations must be performed on other switches.

```
1 > router bgp 65535 no synchronization  
2   bgp log-neighbor-changes neighbor 10.100.26.14 remote-as 65535  
    neighbor 10.100.26.15 remote-as 65535 no auto-summary  
3   dont-capability-negotiate  
4   dont-capability-negotiate  
5   no dynamic-capability
```

Configuration of cluster ECMP by using Cisco Nexus 7000 switch with routing Protocol

May 2, 2023


With ECMP over a cluster setup, a NetScaler appliance is able to handle the traffic through a routing protocol. The ECMP mechanism helps in advertising the virtual server IP addresses through all active cluster nodes.

To use ECMP, you must first enable the BGP protocol on the cluster IP address. Bind the interfaces and the spotted IP address (with dynamic routing enabled) to a VLAN. Configure the selected routing protocol and redistribute the kernel routes on the ZebOS by using the VTYSH shell.

Use Case: Cluster ECMP by using Cisco Nexus 7000 switch with routing Protocol

Consider an example of a cluster deployment with a Cisco Nexus 7000 switch:

- Two NetScaler appliances (Node 1 and Node 2), connected to the Nexus switch (upstream).
- Two Cisco Nexus 7000 switch.
- Client and server (drawing HTTP traffic through the Nexus switch). With Hot Standby Router Protocol (HSRP) enabled on the client-side.

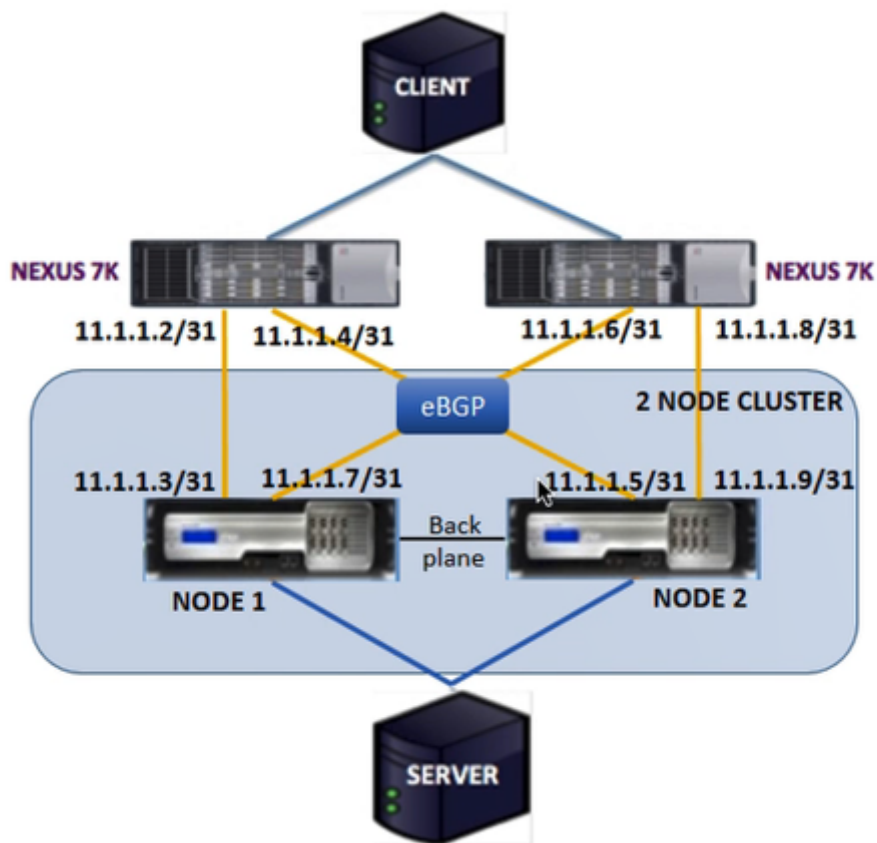

Prerequisites

Consider the following points before configuring cluster nodes on a NetScaler appliance.

1. All appliances must be of the same platform type.
2. Border Gateway Protocol (BGP) must be enabled on the cluster nodes.

Configuring by using the CLI on a NetScaler appliance

1. Log on to an appliance (for example, appliance with NSIP address 1.1.1.1)
2. To add a cluster node.

```
1 add cluster node 0 1.1.1.2 - state ACTIVE - backplane 0/10/8
```

3. To add the cluster IP address

```
1 add ns ip 1.1.1.10 255.255.255.254 - type clip
```

4. Save the configuration


```
1 save ns config
```

5. Warm reboot the appliance

```
1 reboot -warm
```

6. To add node 1 using CLIP

```
1 add cluster node 1 2.2.2.2 -state ACTIVE -backplane 1/10/8
```

7. To join a node to the cluster

```
1 join cluster -clip 1.1.1.10 -password nsroot
```

8. Perform the following configuration on CLIP

- `enable ns feature bgp ospf DYNAMICROUTING`
- `add ns ip 11.1.1.3 255.255.255.254 -dynamicRouting ENABLED -ownerNode 0`
- `add ns ip 11.1.1.7 255.255.255.254 -dynamicRouting ENABLED -ownerNode 0`
- `add ns ip 11.1.1.5 255.255.255.254 -dynamicRouting ENABLED -ownerNode 1`
- `add ns ip 11.1.1.9 255.255.255.254 -dynamicRouting ENABLED -ownerNode 1`

On the Cisco Nexus router (11.1.1.2/31 and 11.1.1.4/31), you must perform the following configurations by using the command line:

- `feature ospf`
- `feature bgp`
- `feature interface-vlan`
- `feature hsrp`

```
1 > interface vlan100
2   no shutdown
3   ip address 50.1.1.1/8
4   hsrp 50
5     ip 50.50.50.50
6
7 > interface Ethernet 4/15
8   ip address 11.1.1.2/31
9   no shutdown
10
```

```
11 > interface Ethernet 4/19
12     ip address 11.1.1.4/31
13     no shutdown
14
15 > interface Ethernet 4/22
16     switchport
17     switchport access vlan 100
```

On the Cisco Nexus router (11.1.1.6/31 and 11.1.1.8/31), you must perform the following configurations by using the command line:

- feature ospf
- feature bgp
- feature **interface-vlan**
- feature hsrp

```
1 > interface vlan100
2     no shutdown
3     no ip redirects
4     ip address 50.1.1.2/8
5     hsrp 50
6     ip 50.50.50.50
7
8 > interface Ethernet 4/13
9     ip address 11.1.1.6/31
10    no shutdown
11
12 > interface Ethernet 4/15
13    ip address 11.1.1.8/31
14    no shutdown
15
16 > interface Ethernet 4/22
17    switchport
18    switchport access vlan 100
```

For the BGP protocol, you must perform the following configurations on CLIP of the NetScaler appliance:

```
1 > vtysh
2 ns# router bgp 1
3 redistribute kernel
4 owner-node 0
5 neighbor 11.1.1.2 remote-as 2
6 neighbor 11.1.1.2 as-origination-interval 1
7 neighbor 11.1.1.2 advertisement-interval 0
8 neighbor 11.1.1.6 remote-as 2
9 neighbor 11.1.1.6 as-origination-interval 1
10 neighbor 11.1.1.6 advertisement-interval 0
11 owner-node 1
12 neighbor 11.1.1.4 remote-as 2
```

```
13 neighbor 11.1.1.4 as-origination-interval 1
14 neighbor 11.1.1.4 advertisement-interval 0
15 neighbor 11.1.1.8 remote-as 2
16 neighbor 11.1.1.8 as-origination-interval 1
17 neighbor 11.1.1.8 advertisement-interval 0
18 exit-owner-node
```

Perform the following configurations on the Cisco Nexus router (11.1.1.3 and 11.1.1.5)

```
1 > ip access-list acl1
2 10 permit ip 50.0.0.0/8 any
3 route-map test permit
4 match ip address acl1
5 router bgp 2
6 address-family ipv4 unicast
7 redistribute direct route-map test
8 maximum-paths 2
9 neighbor 11.1.1.3 remote-as 1
10 address-family ipv4 unicast
11 neighbor 11.1.1.5 remote-as 1
12 address-family ipv4 unicast
```

Perform the following configurations on the Cisco Nexus router (11.1.1.7 and 11.1.1.9)

```
1 > ip access-list acl1
2 10 permit ip 50.0.0.0/8 any
3 route-map test permit 1
4 match ip address acl1
5 router bgp 2
6 address-family ipv4 unicast
7 redistribute direct route-map test
8 maximum-paths 2
9 neighbor 11.1.1.7 remote-as 1
10 address-family ipv4 unicast
11 neighbor 11.1.1.9 remote-as 1
12 address-family ipv4 unicast
```

For the OSPF protocol, you must perform the following configurations on CLIP of the NetScaler appliance:

```
1 > vtysh
2 ns# router ospf 1
3 redistribute kernel
4 owner-node 0
5 network 15.1.1.2/31 area 0
6 network 15.1.1.6/31 area 0
7 exit-owner-node
8
9 owner-node 1
10 network 15.1.1.4/31 area 0
11 network 15.1.1.8/31 area 0
12 exit-owner-node
13
```

```
14 route-map map2 permit 1
15 set metric 10
```

On the Cisco Nexus router (11.1.1.2/31 and 11.1.1.4/31), you must perform the following configurations by using the command line:

```
1 > route-map- map2 permit 1
2   set metric 10
3
4 interface Ethernet4/15
5   ip address 15.1.1.2/31
6   ip router ospf 1 area 0.0.0.0
7   no shutdown
8
9 interface Ethernet4/19
10  ip address 15.1.1.4/31
11  ip router ospf 1 area 0.0.0.0
12  no shutdown
13
14  router ospf 1
15  router-id 1.1.1.1
16  redistribute direct route-map map2
```

On the Cisco Nexus router (11.1.1.7/31 and 11.1.1.9/31), you must perform the following configurations by using the command line:

```
1 > route-map- map2 permit 1
2   set metric 10
3
4 interface Ethernet4/13
5   ip address 15.1.1.6/31
6   ip router ospf 1 area 0.0.0.0
7   no shutdown
8
9 interface Ethernet4/15
10  ip address 15.1.1.8/31
11  ip router ospf 1 area 0.0.0.0
12  no shutdown
13
14  router ospf 1
15  router-id 1.1.1.2
16  redistribute direct route-map map2
```

Using cluster link aggregation

September 30, 2024

Cluster link aggregation (CLA) is a group of interfaces of cluster nodes. It is an extension of NetScaler

link aggregation. The only difference is that, while link aggregation requires the interfaces to be from the same device, in CLA, the interfaces are from different nodes of the cluster. For more information about link aggregation, see [Configuring Link Aggregation](#).

Points to consider


- CLA is supported for a cluster of hardware (MPX) appliances.
- CLA is supported for a cluster of virtual (VPX) appliances that are deployed on ESX, KVM, and SDX hypervisors, with the following restrictions:
 - Dedicated interfaces must be used. It means that the interfaces must not be shared with other virtual machines.
 - If the CLA member interfaces are manually disabled or if the CLA itself is manually disabled, then the interface power down capability is achieved only by the LACP timeout mechanism.
- When a node becomes inactive:
 - For dynamic CLA, the corresponding CLA interface LACP is turned off but the link remains active.
 - For static CLA, the interfaces are powered off.
- When a node becomes active:
 - For dynamic CLA, the corresponding cluster LA interfaces' LACP is turned on, link remains active when the node becomes active. If a node becomes passive, then only LACP is turned off.
 - For static CLA, the interfaces are marked as power-on.
- The number of interfaces that can be bound to CLA is 16 from each node. The maximum number of interfaces in CLA can be $(16 * n)$, where n is the number of nodes in a cluster. The total number of interfaces in CLA depends on the number of interfaces for every port channel on the upstream switch.
- If a NetScaler appliance uses Intel Fortville interfaces, the switchover of a cluster node to passive mode might cause a few seconds of outage with CLAG. The issue occurs because LACP is enabled for CLAG to function properly, and the outage time depends on NIC LACP timers.

Note:

CLA is not supported on VPX appliances that are deployed on XenServer, AWS, and Hyper-V.

For example, consider a three-node cluster where all three nodes are connected to the upstream switch. A cluster LA channel (CLA/1) is formed by binding interfaces 0/1/2, 1/1/2, and 2/1/2.


Figure 1. Cluster Link Aggregation topology

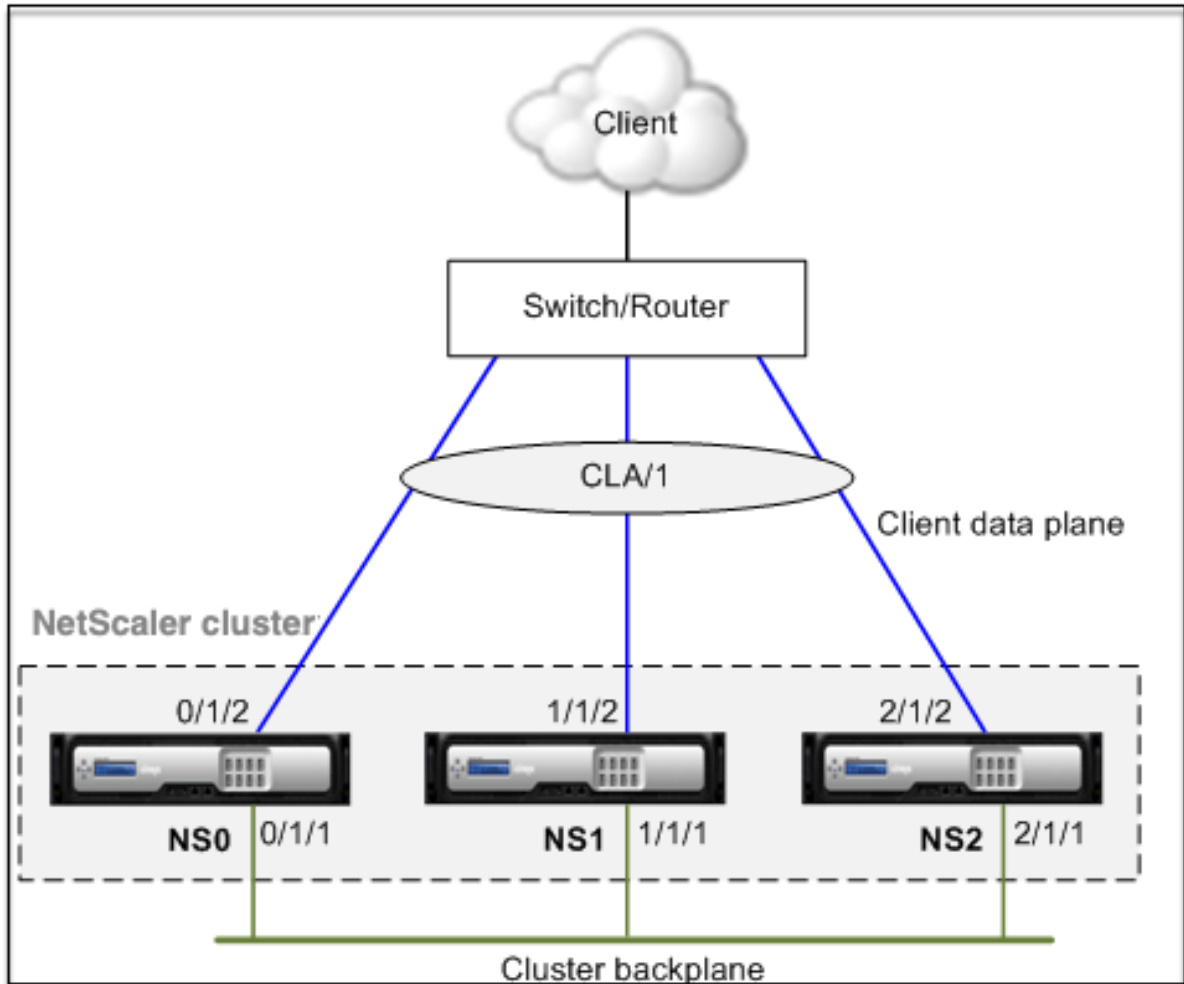

A CLA channel has the following attributes:

- Each channel has a unique MAC agreed upon by cluster nodes.
- The channel can bind both local and remote nodes' interfaces.
- A maximum of four CLA channels are supported in a cluster.
- Backplane interfaces cannot be part of a CLA channel.
- When an interface is bound to a CLA channel, the channel parameters have precedence over the network interface parameters. A network interface can be bound to one channel only.
- Management access to a cluster node must not be configured on a cluster LA channel (for example, CLA/1) or its member interfaces. When the node is INACTIVE, the corresponding CLA interface is marked as power-down and loses management access.

Figure 2. Traffic distribution flow using CLA

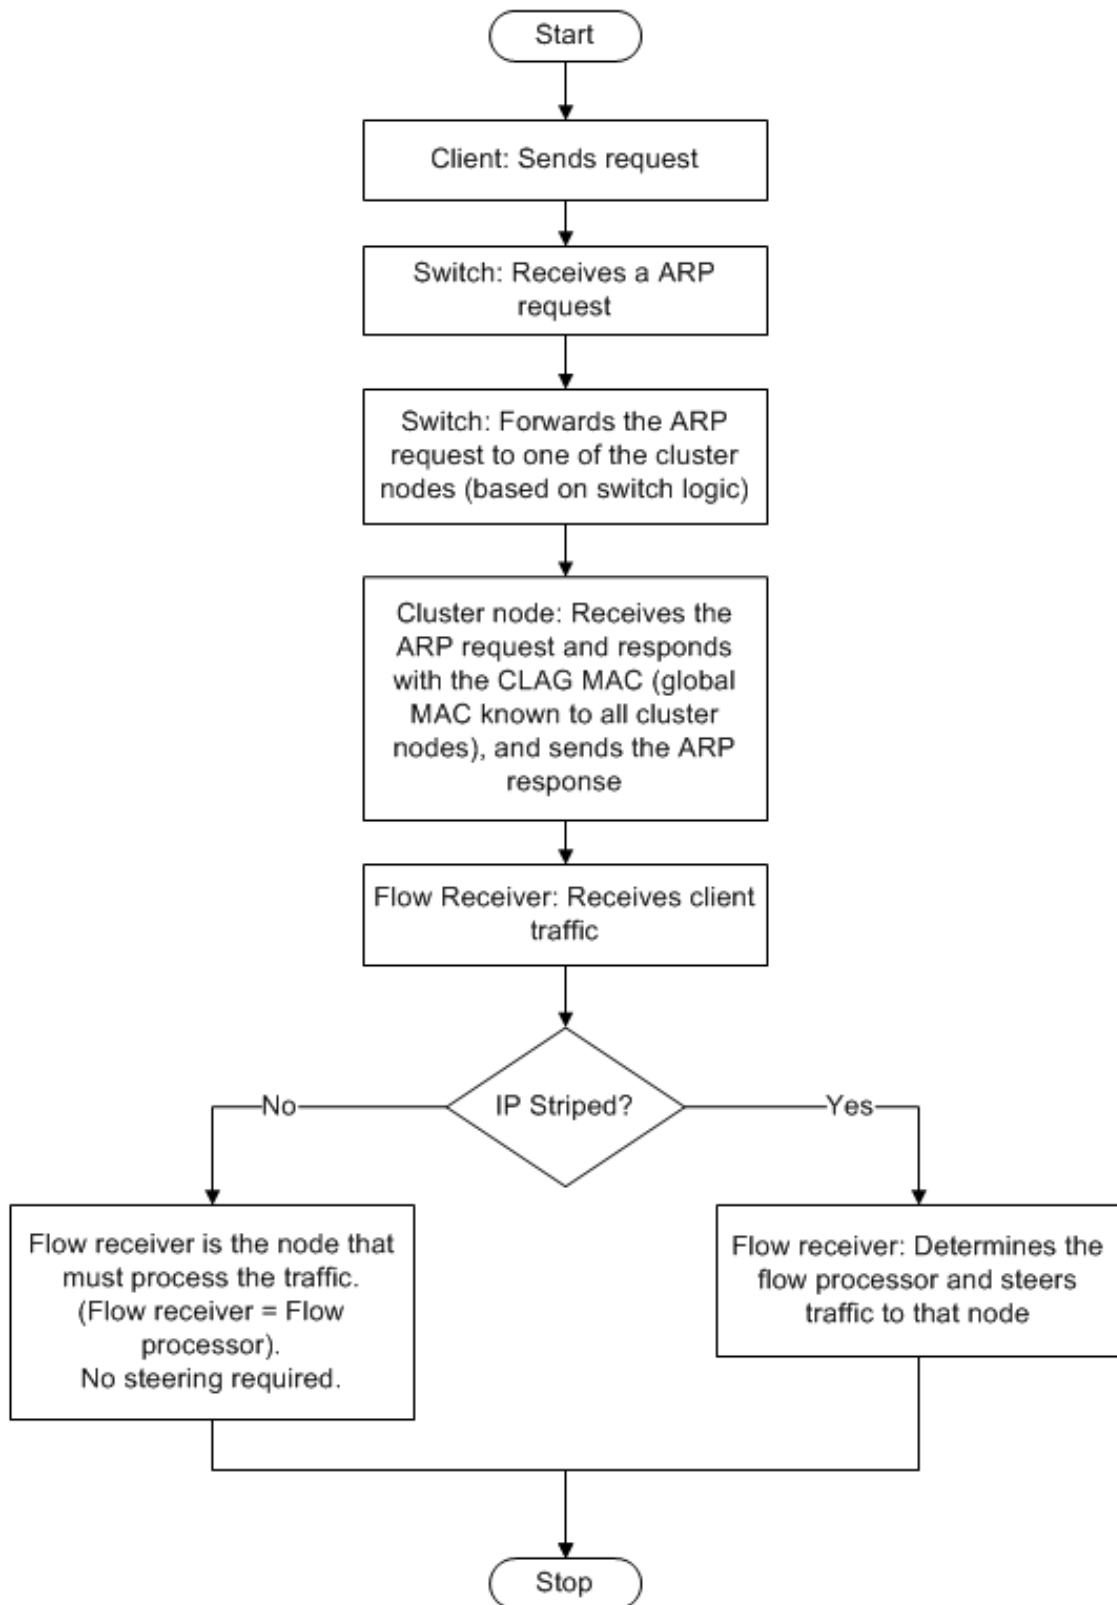

Backup and restore support of cluster LA on NetScaler MPX

You can backup and restore the cluster setup of LA on NetScaler MPX. The CLA MAC address is independent of the physical interface MAC address of the cluster nodes, and can change after the backup and restore process. The CLA can serve the traffic after a cluster restore process is complete. For more information about backup and restore, see [Backup and restore of cluster setup](#)

Static cluster link aggregation

December 20, 2024

You must configure a static cluster LA channel on the cluster IP address and on the external connecting device. If possible, configure the upstream switch to distribute traffic based on IP address or port instead of MAC address.

To configure a static cluster LA channel by using the CLI

1. Log on to the cluster IP address.

Note:

Make sure that you configure the cluster LA channel on the cluster IP address before configuring link aggregation on the external switch. Otherwise, the switch forwards traffic to the cluster even though the cluster LA channel is not configured. It can lead to loss of traffic.

2. Create a cluster LA channel.

```
1 add channel <id> -speed <speed>
```

Example

```
1 add channel CLA/1 -speed 1000
```

Note:

You must not specify the speed as AUTO. Rather, you must explicitly specify the speed as 10, 100, 1000, or 10000. Only interfaces that have the speed matching the <speed> attribute in the cluster LA channel are added to the active distribution list.

3. Bind the required interfaces to the cluster LA channel. Make sure that the interfaces are not used for the cluster backplane.

```
1 bind channel <id> <ifnum>
```


Example

```
1 bind channel CLA/1 0/1/2 1/1/2 2/1/2
```

4. Verify the configurations.

```
1 show channel <id>
```

Example

```
1 show channel CLA/1
```

Note:

You can bind the cluster LA channel to a VLAN by using the `bind vlan` command. The interfaces of the channel are automatically bound to the VLAN.

5. Configure static LA on the external switch. The following sample configurations are provided for the Cisco® Nexus 7000 C7010 Release 5.2(1). Similar configurations must be performed on other switches.

```
1 Global config:
2 Configure terminal
3
4 Interface level config:
5
6 interface Ethernet2/47
7 switchport
8 switchport access vlan 10
9 channel-group 7 mode on
10 no shutdown
11
12 interface Ethernet2/48
13 switchport
14 switchport access vlan 10
15 channel-group 7 mode on
16 no shutdown
```

Dynamic cluster link aggregation

October 4, 2024

Dynamic cluster link aggregation (DCLA) channel uses the Link Aggregation Control Protocol (LACP).

You must perform similar configurations on the cluster IP address and on the external connecting device. If possible, configure the upstream switch to distribute traffic based on IP address or port instead of MAC address.

Points to remember

- Enable LACP by specifying the LACP mode as either ACTIVE or PASSIVE. Make sure that the LACP mode is not set as PASSIVE on both the NetScaler cluster and the external connecting device.
- Specify the same LACP key on each interface that you want to be the part of the channel. For creating a CLA channel, the LACP key can have a value from 5 through 8. For example, if you set the LACP key on interfaces 0/1/2, 1/1/2, and 2/1/2 to 5, CLA/1 is created. The interfaces 0/1/2, 1/1/2, and 2/1/2 are automatically bound to CLA/1. Similarly, if you set the LACP key to 6, the CLA/2 channel is created.
- Specify the LAG type as Cluster.
- When a node becomes inactive, the corresponding LA interfaces' LACP is turned off such that the partner device stops sending traffic to the inactive node. The link remains active.
- When a node becomes active, the corresponding LA interfaces' LACP is turned on. The link remains active.

Configure a DCLA channel by using the CLI

On the cluster IP address, for each interface that you want to add to the CLA channel, type:

```
set interface <id> -lacpMode <lacpMode> -lacpKey <positive_integer> -lagType CLUSTER
```

Example:

To configure a CLA channel CLA/1 of 3 interfaces.

```
1 > set interface 0/1/2 -lacpMode active -lacpKey 5 -lagType Cluster
2 > set interface 1/1/2 -lacpMode active -lacpKey 5 -lagType Cluster
3 > set interface 2/1/2 -lacpMode active -lacpKey 5 -lagType Cluster
```

Note:

Optionally, you can enable [Link Redundancy in a Cluster with LACP](#).

Similarly, configure dynamic LA on the external switch. The following sample configurations are provided for the Cisco® Nexus 7000 C7010 Release 5.2(1). Similar configurations must be performed on other switches.

```
1 Global config:
2 Configure terminal
3 feature lacp
4 Interface level config:
5
6 interface Ethernet2/47
```


```
7 switchport
8 switchport access vlan 10
9 channel-group 7 mode active
10 no shutdown
11
12 interface Ethernet2/48
13 switchport
14 switchport access vlan 10
15 channel-group 7 mode active
16 no shutdown
```

Link redundancy in a cluster with LACP

December 20, 2024

A NetScaler cluster provides link redundancy for LACP to ensure that all nodes have the same partner key.

To understand the need for link redundancy, let us consider the example of the following cluster setup along with the accompanying cases (with attention to case 3):

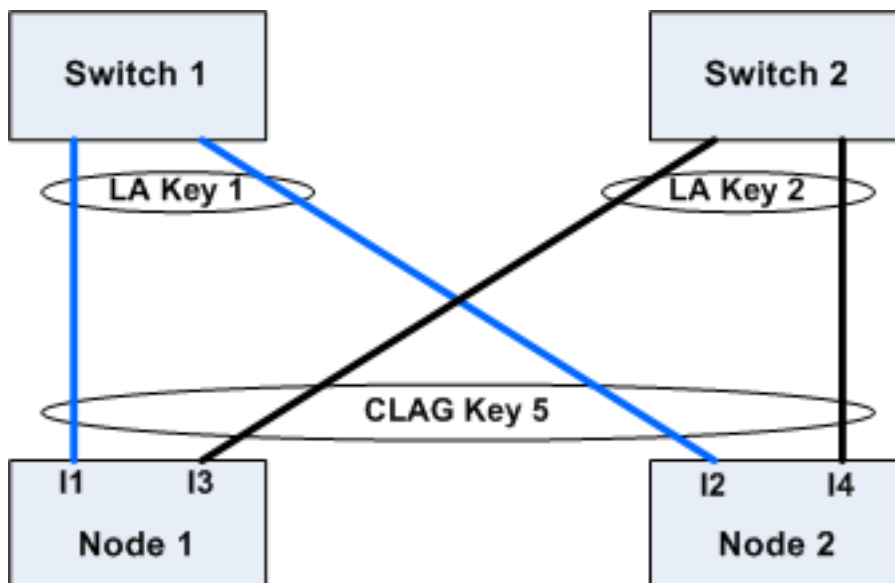

In this setup, interfaces I1, I2, I3, and I4 are bound to the LACP channel with KEY 5. On the partner side, I1 and I2 are connected to Switch 1 to form a single LA channel with KEY 1. Similarly, I3 and I4 are connected to Switch 2 to form a single LA channel with KEY 2.

Now let us consider the following cases to understand the need for link redundancy:

- **Case 1: Switch 1 is up and Switch 2 is down**

In this case, cluster LA on both the nodes would stop receiving LACPDU from Key2 and would start receiving LACPDUs from Key1. On both the nodes, cluster LA is connected to KEY 1 and I1 and I2 is UP and the channel on both the nodes would be UP.

- **Case 2: Switch1 goes down and Switch2 becomes UP**

In this case, cluster LA on both the nodes would stop receiving LACPDUs from Key1 and would start receiving LACPDUs from Key2. On both the nodes, cluster LA is connected to Key2 and I3 and I4 is UP and the channel on both the nodes would be UP.

- **Case 3: Both Switch1 and Switch2 are UP**

In this case, it is possible that cluster LA on node1 chooses Key1 as its partner and cluster LA on node2 chooses Key2 as its partner. It means that I1 on node1 and I4 on node2 are receiving traffic which is undesirable. It can happen because the LACP state machine is node-level and chooses its partners on first-come first-serve basis.

To solve these concerns, link redundancy of dynamic cluster LA is supported. To configure link redundancy on a channel or interface, you must enable it and optionally specify the threshold throughput as follows:

```
set channel CLA/1 -linkRedundancy ON -lrMinThroughput <positive_integer>
```

The throughput of the partner channels is checked against the configured threshold throughput. The partner channel that satisfies the threshold throughput is selected in a first-in-first-out (FIFO) manner. If none of the partner channel meets the threshold, or if threshold throughput is not configured, the partner channel with the maximum number of links is selected.

Note:

The threshold throughput can be configured from NetScaler 11 onwards.

Using USIP mode in cluster

December 20, 2024

In use source IP (USIP) mode, the cluster, or NetScaler appliance forwards each packet to the appropriate back-end server with the client IP address.

USIP mode traffic distribution

The USIP mode behavior differs traffic distribution across client data plane and server data plane in ECMP and CLAG deployment. The following section provides more information about USIP mode

behavior. For more information related to CLAG on USIP mode, see [Using cluster link aggregation](#).

USIP mode

The cluster uses the client IP to open the server-side connection. The source port may or might not be preserved based on the `useproxyport` setting.

USIP `useproxyport` scenarios

The USIP `useproxyport` is ON for the traffic flow, the source port is selected in a way that the reverse traffic hashes to the flow processor. It ensures single steering on the server side.

The USIP `useproxyport` is OFF for the traffic flow, the source port is preserved and hence there is double steering on the server side.

Important:

- When USIP is ON, the client IP is used in back end server connection, and traffic distribution for response is needed across cluster nodes. You can use ECMP or CLAG deployment for traffic distribution on the server side. In the absence of traffic distribution on the server side, the whole return traffic might land on a single cluster node, resulting in congestion.
- The `set rsskeytype -rsskey symmetric` command is used to reduce double steering to single steering of traffic in the `useproxyport` off deployments. Where the 4-tuple for the connection remains the same for the server and client side. For example, wildcard MAC mode virtual server.

Limitations

The USIP does not work when the process local is disabled.

USIP mode deployment

The following figure depicts a USIP mode deployment in a cluster setup.

Configure the following using CLI

1. Enable the routing protocol.

```
1 enable ns feature <feature>
```

Example:

```
1 enable ns feature ospf
```

2. Add a spotted SNIP address for each node and enable dynamic routing on it.

```
1 add ns ip <SNIP> <netmask> -dynamicRouting \( ENABLED | DISABLED )
   - ownerNode <positive\_interger> - ownerdownResponse \( YES |
   NO )
```

Example

```
1 - add ns ip 192.0.2.1 255.255.255.0 -dynamicRouting ENABLED -
   ownerNode 0 - ownerDownResponse NO
2 - add ns ip 192.0.2.2 255.255.255.0 -dynamicRouting ENABLED -
   ownerNode 1 - ownerDownResponse NO
3 - add ns ip 192.0.2.3 255.255.255.0 -dynamicRouting ENABLED -
   ownerNode 2 - ownerDownResponse NO
```

3. Add a VLAN.

```
1 add vlan <id>
```

Example

```
1 add vlan 300
```

4. Bind the interfaces of the cluster nodes to the VLAN.

```
1 bind vlan <id> -ifnum <interface_name>
```

Example

```
1 bind vlan 300 -ifnum 0/1/2 1/1/2 2/1/2
```

5. Bind one of the spotted SNIP addresses to the VLAN. When you bind one spotted SNIP address to a VLAN, all other spotted SNIP addresses defined on the cluster in that subnet are automatically bound to the VLAN.

```
1 bind vlan <id> -IPAddress <ip\_addr | ipv6\_addr> -netmask
```

Example

```
1 bind vlan 300 -IPAddress 192.0.2.1 255.255.255.0
```

6. Configure the routing protocol on ZebOS using the VTYSH shell. Configure OSPF routing protocol on node IDs 0, 1, and 2.

```
1 vtysh
2 configure terminal
3 ns block-sec-rtadv
4 router ospf
5 owner -node 0
```

```
6 router-id 192.0.2.1
7 exit-owner-node
8 owner-node 1
9 router-id 192.0.2.2
10 exit-owner-node
11 owner-node 2
12 router-id 192.0.2.3
13 exit-owner-node
14 network 192.0.2.0/24 area 0
15
16 default-information originate always
```

7. Perform the following configurations on the Cisco 3750 router by using the CLI.

```
1 Configure terminal
2 feature ospf
3 interface vlan300
4 no shutdown
5 ip address 192.0.2.100/24
6 Configure terminal
7 router ospf 1
8 router-id 192.0.2.100
9 network 192.0.2.0 0.0.0.255 area 0
```

Notes:

- Traffic distribution on client and server need not be the same. For example, you can configure ECMP on the client side and CLAG on the server side or the opposite way.
- Plan for extra capacity of the backplane as there is more steering overhead in the USIP deployment.
- The Configuration related to CLAG and Monitor Static Route (MSR) must remain the same on the server side.
- Traffic steering is more in the USIP mode deployments.

Managing the NetScaler cluster

May 2, 2023

After you have created a cluster and configured the required traffic distribution mechanism, the cluster is able to serve traffic. During the lifetime of the cluster, you can perform the following cluster tasks:

- Configuring node groups
- Disabling nodes of a cluster

- Discovering NetScaler appliances
- Viewing statistics
- Synchronizing cluster configurations, and cluster files
- Synchronizing the time across the nodes
- Upgrading or downgrading the software of cluster nodes

Configuring linksets

December 24, 2020

Linkset is a group of interfaces of cluster nodes that belong to the same broadcast domain. In linksets, each node has the information about which interfaces of other nodes are connected to the same broadcast domain.

Note

Linksets are a mandatory configuration in the following scenarios:

- For deployments that require MAC-Based Forwarding (MBF).
- For “-m MAC” mode that is enabled at the virtual server along with MBF mode enabled globally.
- To improve the manageability of ACL and L2 policies involving interfaces. You define a linkset of the interfaces and add ACL and L2 policies based on linksets.

In a cluster setup, the following features use MBF internally.

- Forwarding session
- L2Conn
- MAC mode virtual server
- Transparent monitor
- LLB

Linksets must be configured only through the cluster IP address.

Consider an example with a three node cluster. In the following figure, the interfaces 0/1/2, 1/1/2, and 2/1/2 are in the same broadcast domain and therefore can be configured as linkset (LS/1).

Figure 1. Linksets topology


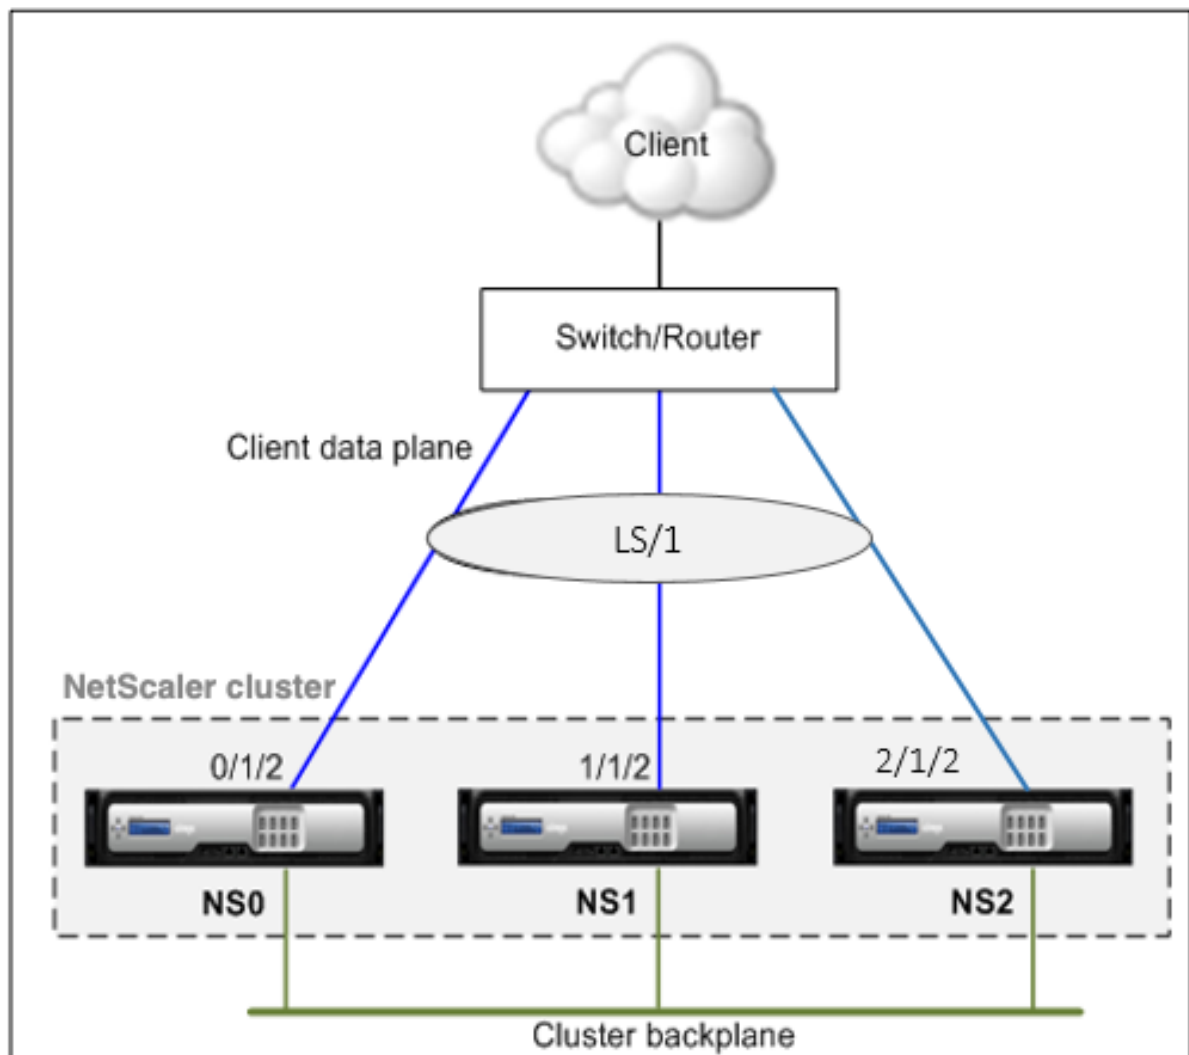


Figure 2. Traffic distribution flow using linksets

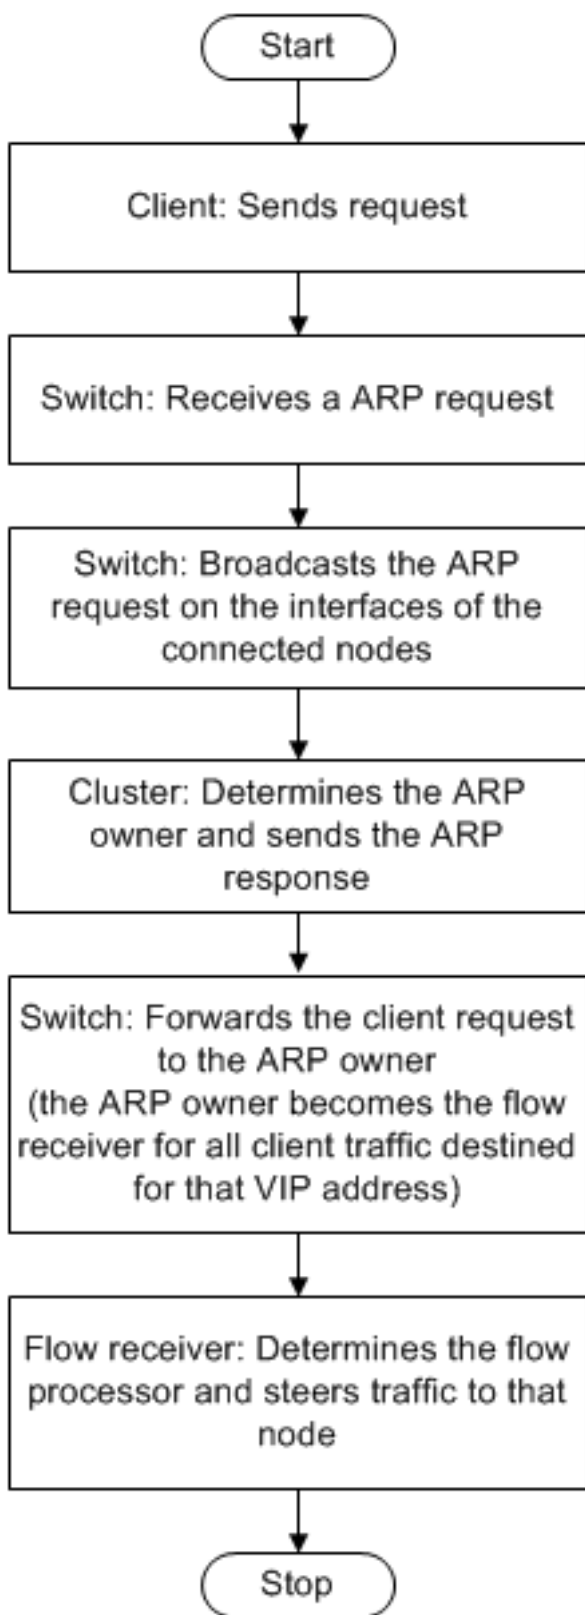

To configure a linkset by using the CLI

1. Log on to the cluster IP address.

2. Create a linkset.

```
add linkset <id>
```

Example

```
add linkset LS/1
```

3. Bind the required interfaces to the linkset. Make sure the interfaces are not used for the cluster backplane.

```
bind linkset <id> -ifnum <interface_name> ...
```

Example

```
bind linkset LS/1 -ifnum 0/1/2 1/1/2 2/1/2
```

4. Verify the linkset configurations.

```
show linkset <id>
```

Example

```
show linkset LS/1
```

Note

You can bind the linkset to a VLAN by using the `bind vlan` command. The interfaces of the linkset are automatically bound to the VLAN.

To configure a linkset by using the GUI

1. Log on to the cluster IP address.
2. Navigate to **System > Network > Linksets**.
3. In the details pane, click **Add**.
4. In the **Create Linkset** dialog box:
 - Specify the name of the linkset by setting the Linkset parameter.
 - Specify the Interfaces to be added to the linkset and click Add. Repeat this step for each interface you want to add to the linkset.
5. Click **Create**, and then click **Close**.

Node groups for spotted and partially striped configurations

May 2, 2023


By virtue of the default cluster behavior, all configurations performed on the cluster IP address are available on all nodes of the cluster. However, there might be cases where you need some configurations to be available only on specific cluster nodes.

You can achieve this requirement by defining a node group that includes the specific cluster nodes, and then binding the configuration to that node group. It ensures that the configuration is active only on those cluster nodes. These configurations are called partially striped or spotted (if active only on a single node). For more information, see [Striped, Partially Striped, and Spotted Configurations](#).

For example, consider a cluster with three nodes. You create a node group NG0 that includes node n1 and another node group NG1 that includes n2 and n3. Bind load balancing virtual servers 0.77 to NG0 and load balancing virtual server 0.69 to NG1.

It means that virtual server 0.77 is active only on n1 and therefore only n1 receives the traffic that is directed to 0.77. Similarly, virtual server 0.69 is active only on nodes n2 and n3 and therefore only n2 and n3 receives traffic that is directed to 0.69.

Figure 1. NetScaler cluster with node groups configured for spotted and partial-striped configurations

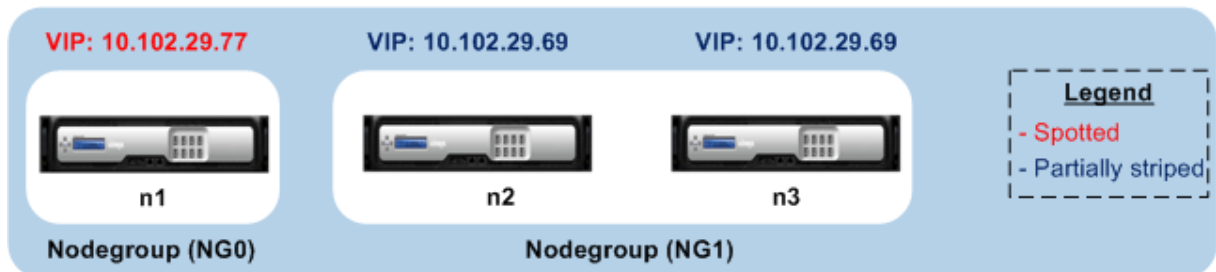

The entities or configurations that you can bind to a node group are:

- Load balancing, content switching, cache redirection, authentication, authorization, and auditing virtual servers

Note

FTP load balancing virtual servers cannot be bound to node groups.

- VPN virtual server (Supported from NetScaler 10.5 Build 50.10 onwards)
- Global Server Load Balancing (GSLB) sites and other GSLB entities (Supported from NetScaler 10.5 Build 52.11 onwards)
- Limit identifiers and stream identifiers

Behavior of node groups

May 2, 2023

Due to the interoperability of node groups with different NetScaler features and entities, there are some behavioral aspects to be noted. Nodes in a node group can also be backed up. Read on for more information.

General behavior of a cluster node group

- A node group that has entities bound to it cannot be removed.
- A cluster node that belongs to a node group with entities bound to it, cannot be removed.
- A cluster instance that has node groups with entities bound to it, cannot be removed.
- You cannot add an entity that has a dependency on another entity. It must not be a part of the node group. If you must do so, first remove the dependency. Then, add both the entities to the node group and reassociate the entities.

Examples:

- Assume you have a virtual server, VS1, whose backup is virtual server VS2. To add VS1 to a node group, first make sure that VS2 is removed as the backup server of VS1. Then, bind each server individually to the node group, and then configure VS2 as the backup for VS1.
 - Assume you have a content switching virtual server, CSVS1, whose target load balancing virtual server is LBVS1. To add CSVS1 to a node group, first remove LBVS1 as the target. Then, bind each server individually to the node group, and then configure LBVS1 as the target.
 - Assume you have a load balancing virtual server, LBVS1, that has a policy which invokes another load balancing virtual server, LBVS2. To add either one of the virtual servers, first remove the association. Then, bind each server individually to the node group, and then reassociate the virtual servers.
- You cannot bind an entity to a node group. It has no nodes and that has the strict option enabled. Therefore, you cannot unbind the last node of a node group that has entities bound to it and that has the strict option enabled.
 - The strict option cannot be modified for a node group that has no nodes but has entities bound to it.

Backing up nodes in a node group

By default, a node group is designed to provide back up nodes for members of a node group. If a node group member goes down, a cluster node that is not a member of the node group dynamically replaces the failed node. This node is called the replacement node.

Note

For a single-member node group, a backup node is automatically preselected when an entity is bound to the node group.

When the original member of the node group comes up, the replacement node, by default, is replaced by the original member node.

From NetScaler 10.5 Build 50.10 onwards, however, the NetScaler allows you to change this replacement behavior. When you enable the sticky option, the replacement node is retained even after the original member node comes up. The original node takes over only when the replacement node goes down.

You can also disable the backup functionality. To do it, you must enable the strict option. In this scenario, when a node group member goes down, no other cluster node is picked up as a backup node. The original node continues being part of the node group when it comes up. This option ensures that entities bound to a node group are active only on node group members.

Note

The strict and sticky option can be set only when creating a node group.

Configuring node groups for spotted and partially striped configurations

May 2, 2023

To configure a node group for spotted and partially striped configurations you must first create a node group and then bind the required nodes to the node group. You then associate the required entities to that node group. The entities that are bound to the node group are of the following:

- **Spotted** - If bound to a node group that has a single node.
- **Partially Striped** - If bound to a node group that has more than one node.

Some points to remember:

- GSLB is supported on a cluster only when GSLB sites are bound to node groups that have a single cluster node. For more information, see [Setting Up GSLB in a Cluster](#).
- NetScaler Gateway is supported on a cluster only when the VPN virtual servers are bound to node groups that have a single cluster node. The sticky option must be enabled on the node group.
- For versions prior to NetScaler 11, the application firewall is supported only on individual cluster nodes (spotted configuration). Application firewall profiles can be associated only with virtual servers that are bound to node groups that have a single cluster node. It means that application you are not allowed to do the following:
 - Bind application firewall profiles to striped or partially striped virtual servers.
 - Bind the policy to a global bind point or to user-defined policy labels.
 - Unbind, from a node group, a virtual server that has application firewall profiles.
- NetScaler 11 introduced application firewall support for striped and partially striped configurations. For more information, see [Application Firewall Support for Cluster Configurations](#).

Check [NetScaler Features Supported in a Cluster](#) to see the NetScaler versions from which GSLB, NetScaler Gateway, and application firewall are supported in a cluster.

To configure a node group by using the command line interface

1. Log on to the cluster IP address.
2. Create a node group. Type:

```
add cluster nodegroup <name> -strict (YES | NO)
```

Example

```
1 add cluster nodegroup NG0 -strict YES
```

3. Bind the required nodes to the node group. Type the following command for each member of the node group:

```
bind cluster nodegroup <name> -node <nodeId>
```

Example

To bind nodes with IDs 1, 5, and 6.

```
1 > bind cluster nodegroup NG0 -node 1
2 > bind cluster nodegroup NG0 -node 5
3 > bind cluster nodegroup NG0 -node 6
```

4. Bind the entity to the node group. Type the following command once for every entity that you want to bind:

```
bind cluster nodegroup <name> (-vServer <string> | -identifierName  
<string> | -gslbSite <string> -service <string>)
```

Note

The gslbSite and service parameters are available from NetScaler 10.5 onwards.

Example

To bind virtual servers VS1 and VS2 and rate limit identifier named identifier1.

```
1 > bind cluster nodegroup NG0 -vServer VS1  
2 > bind cluster nodegroup NG0 -vServer VS2  
3 > bind cluster nodegroup NG0 -identifierName identifier1
```

5. Verify the configurations by viewing the details of the node group. Type:

```
show cluster nodegroup <name>
```

Example

```
1 > show cluster nodegroup NG0
```

To configure a node group by using the configuration utility

1. Log on to the cluster IP address.
2. Navigate to **System > Cluster > Node Groups**.
3. In the details pane, click **Add**.
4. In the **Create Node Group** dialog box, configure the node group:
 - a) Under **Cluster Nodes**, click the **Add** button.
 - The Available list displays the nodes that you can bind to the node group and the Configured list displays the nodes that are bound to the node group.
 - Click the + sign in the Available list to bind the node. Similarly, click the - sign in the Configured list to unbind the node.
 - b) Under **Virtual Servers**, select the tab corresponding to the type of virtual server that you want to bind to the node group. Click the **Add** button.
 - The Available list displays the virtual servers that you can bind to the node group and the Configured list displays the virtual servers that are bound to the node group.
 - Click the + sign in the Available list to bind the virtual server. Similarly, click the - sign in the Configured list to unbind the virtual server.

Configuring redundancy for node groups

May 2, 2023

Note

Supported from NetScaler 10.5 Build 52.1115.e onwards.

Node groups can be configured such that when one node group goes down, another node group can take over and process traffic. For example, when a node group NG1 goes down, NG2 takes over.

Note

This functionality can be used to configure data center redundancy where each node group is configured as a data center.


To achieve this use case, cluster nodes must be logically grouped into node groups, where some node groups must be configured as ACTIVE and others as SPARE. The active node group with the highest priority (that is, the lowest priority number) is made operationally active and therefore serves traffic. When a node from this operationally active node group goes down, the node count of this node group is compared with the node count of the other active node groups in order of their priority. If a node group has a higher or equal node count, that node group is made operationally active. Else, the spare node groups are checked.

Note

- Only one state-specific node group can be active at a given point in time.
- A cluster node inherits the state of the node group. So, if a node with “SPARE” state is added to the node group with state as “ACTIVE”, the node automatically behaves as an active node.
- The pre-emption parameter that is defined for the cluster instance decides whether the initial active node group takes the control when it comes up again.
- A spare node group can take up a node group and host active traffic when an active node group goes down.

The following figure shows a node group setup that has node group redundancy defined. NG1 is initially the active node group. When it loses one of the nodes, the spare node group (NG3) with the highest priority starts serving traffic.

Figure 1. NetScaler cluster with node group redundancy configured.

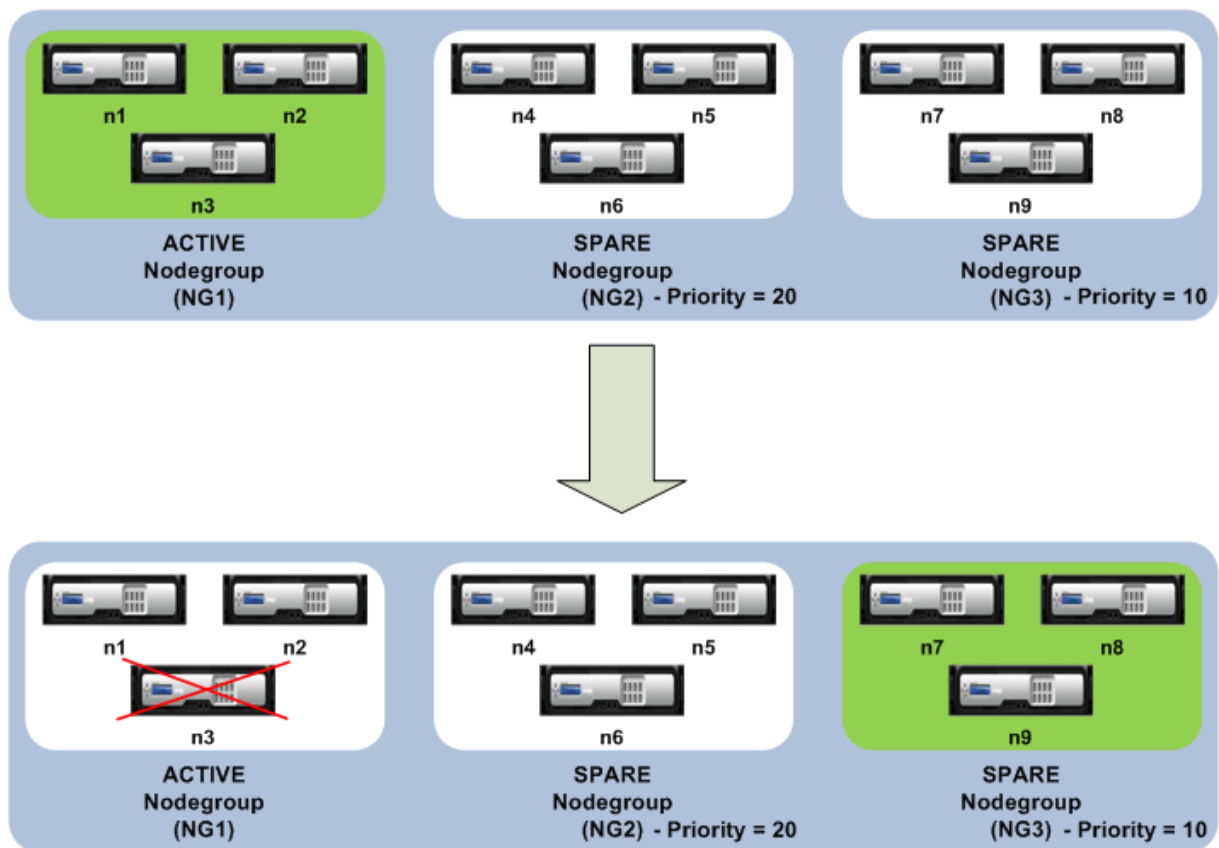

Configuring redundancy for node groups

1. Log on to the cluster IP address.
2. Create the active node group and bind the required cluster nodes.

```

1 > add cluster nodegroup NG1 -state ACTIVE
2 > bind cluster nodegroup NG1 -node n1
3 > bind cluster nodegroup NG1 -node n2
4 > bind cluster nodegroup NG1 -node n3
    
```

3. Create the spare node group and bind the requisite nodes.

```

1 > add cluster nodegroup NG2 -state SPARE -priority 20
2 > bind cluster nodegroup NG2 -node n4
3 > bind cluster nodegroup NG2 -node n5
4 > bind cluster nodegroup NG2 -node n6
    
```

4. Create another spare node group and bind the requisite nodes.

```

1 > add cluster nodegroup NG3 -state SPARE -priority 10
2 > bind cluster nodegroup NG3 -node n7
3 > bind cluster nodegroup NG3 -node n8
4 > bind cluster nodegroup NG3 -node n9
    
```

Disabling steering on the cluster backplane

May 2, 2023

Note

Supported from NetScaler 11 onwards.

The default behavior of a NetScaler cluster is to direct the traffic that it receives (flow receiver) to another node (flow processor). The flow processor must then process the traffic. This process of directing the traffic from flow receiver to flow processor occurs over the cluster backplane and is called steering.

If necessary, you can disable steering so that the process becomes local to the flow receiver and therefore makes the flow receiver as the flow processor. Such a configuration setup can come handy when you have a high latency link.

Note

This configuration is applicable only for striped virtual servers.

- For partially striped virtual servers, if the flow receiver is a non-owner node, the traffic is steered to an owner node. If however, the flow receiver is an owner node, then steering is disabled.
- For spotted virtual servers, the flow receiver is the flow processor, and hence there is no need for steering.

Some points to remember when disabling the steering mechanism:

- Striped SNIPs are not supported as steering is disabled.
- MPTCP and FTP do not work.
- L2 mode must be disabled.
- If USIP is enabled, traffic might not reach back to the same node as the steering is disabled.
- Traffic that is directed to the cluster IP address is steered to the configuration coordinator.
- When a node joins or leaves a cluster, it is possible that more than 1/N connections are affected. It is because a change in the nodes available, might cause the routes to be reshaped. As a result, the traffic is routed to another node and due to the non-availability of steering, the traffic is not processed.

Steering can be disabled at the individual virtual server level or at the global level. The global configuration takes precedence over the virtual server setting.

- Disabling backplane steering for all striped virtual servers

Configured at cluster instance level. Traffic meant for any striped virtual server is not steered on the cluster backplane.

```
add cluster instance \<clId\> -processLocal ENABLED
```

- Disabling backplane steering for a specific striped virtual server

Configured on a striped virtual server. Traffic meant for the virtual server is not steered on the cluster backplane.

```
add lb vserver <name> <serviceType> -processLocal ENABLED
```

Synchronizing cluster configurations

May 2, 2023

NetScaler configurations that are available on the configuration coordinator are synchronized to the other nodes of the cluster when:

- A node joins the cluster
- A node rejoins the cluster
- A new command is run through the cluster IP address

Also, you can forcefully synchronize the configurations that are available on the configuration coordinator (full synchronization) to a specific cluster node. Make sure you synchronize one cluster node at a time, otherwise the cluster can get affected.

To synchronize cluster configurations by using the CLI:

At the command prompt of the appliance on which you want to synchronize the configurations, type:

```
1 force cluster sync
```

To synchronize cluster configurations by using the GUI:

1. Log on to the appliance on which you want to synchronize the configurations.
2. Navigate to **System > Cluster**.
3. In the details pane, under **Utilities**, click Force cluster sync.
4. Click **OK**.

Display list of commands failed during cluster config synchronization

In a cluster setup, with sync status strict mode `syncStatusStrictMode` enabled, you can display the list of commands failed during a cluster synchronization on a non-CCO node.

You can determine the cluster synchronization state of a non-CCO node by running the `show node` operation. `PARTIAL SUCCESS` Synchronization state indicates that some commands failed on the non-CCO node during the cluster synchronization.

To view the list of commands failed on a node during the cluster synchronization by using CLI:

- `show cluster syncFailures`

Sample configuration

```
1 > show cluster node
2
3 1) Node ID: 1
4     IP: 10.102.201.24
5     Backplane: 1/1/1
6     Health: UP
7     Admin State: ACTIVE
8     Operational State: ACTIVE(Configuration Coordinator)
9     Sync State: ENABLED
10    Priority: 31
11    Tunnel Mode: NONE
12    Node Group: DEFAULT_NG
13 2) Node ID: 2
14     IP: 10.102.201.62*
15     Backplane: 2/1/1
16     Health: UP
17     Admin State: ACTIVE
18     Operational State: ACTIVE
19     Sync State: PARTIAL SUCCESS
20    (Refer the files clus_sync_batch_status.log, sync_route_status.log
21     and sync_clusdiff_status.log in /var/nssynclog directory for
22     list of commands failed)
23     Priority: 31
24     Tunnel Mode: NONE
25     Node Group: DEFAULT_NG
26 3) Node ID: 3
27     IP: 10.102.201.64
28     Backplane: 3/1/1
29     Health: UP
30     Admin State: ACTIVE
31     Operational State: ACTIVE
32     Sync State: PARTIAL SUCCESS
33    (Refer the files clus_sync_batch_status.log, sync_route_status.log
34     and sync_clusdiff_status.log in /var/nssynclog directory for
35     list of commands failed)
36     Priority: 31
37     Tunnel Mode: NONE
38     Node Group: DEFAULT_NG
39 Done
40 > show cluster syncFailures
```

```
38
39   exec: add system user nsroot "*****" -encrypted -externalAuth
      ENABLED -timeout 900 -logging ENABLED -maxsession 20 -
      allowedManagementInterface CLI API -devno 32768
40   ERROR: Resource already exists
41   --
42   exec: set interface 2/LO/1 -autoneg ENABLED -haMonitor OFF -
      haHeartbeat OFF -mtu 1500 -ringtype Elastic -tagall OFF -
      trunkmode OFF -state ENABLED -lagtype NODE -lacpPriority 32768 -
      lacpTimeout LONG -throughput 0 -linkRedundancy OFF -
      bandwidthHigh 0 -bandwidthNormal 0 -intftype Loopback -svmCmd 0
      -ifnum 2/LO/1 -lldpmode NONE -lrsetPriority 1024
43   ERROR: Operation not allowed on loopback interface.
```

Synchronizing time across cluster nodes

December 21, 2020

The cluster uses a Precision Time Protocol (PTP) to synchronize the time across cluster nodes. PTP uses multicast packets to synchronize the time. If there are some issues in time synchronization, you must disable PTP and configure Network Time Protocol (NTP) on the cluster.

To enable/disable PTP by using the command line interface

At the command prompt of the cluster IP address, type:

```
1 set ptp -state disable
```

To enable/disable PTP by using the configuration utility

1. Log on to the cluster IP address.
2. Navigate to **System > Cluster**.
3. In the details pane, under **Utilities**, click **Configure PTP Settings**.
4. In the **Enable/Disable PTP** dialog box, select whether you want to enable or disable PTP.
5. Click **OK**.

Synchronizing cluster files

June 29, 2021

The files available on the configuration coordinator are called cluster files. These files are automatically synchronized on the other cluster nodes when the node is added to the cluster and periodically, during the lifetime of the cluster. Also, you can manually synchronize the cluster files.

Important: Removing any certificate or key files in a cluster environment restricts further configuration on the ADC appliance. Add the files back at the same location to make any configuration changes.

The directories and files from the configuration coordinator that are synchronized are:

- /nsconfig/ssl/
- /var/netscaler/ssl/
- /var/vpn/bookmark/
- /nsconfig/dns/
- /nsconfig/monitors/
- /nsconfig/nstemplates/
- /nsconfig/ssh/
- /nsconfig/rc.netscaler
- /nsconfig/resolv.conf
- /nsconfig/inetd.conf
- /nsconfig/syslog.conf
- /nsconfig/snmpd.conf
- /nsconfig/ntp.conf
- /nsconfig/httpd.conf
- /nsconfig/sshd_config
- /nsconfig/hosts
- /nsconfig/enckey
- /var/nslw.bin/etc/krb5.conf
- /var/nslw.bin/etc/krb5.keytab
- /var/lib/likewise/db/
- /var/download/
- /var/wi/tomcat/webapps/
- /var/wi/tomcat/conf/Catalina/localhost/
- /var/wi/java_home/lib/security/cacerts
- /var/wi/java_home/jre/lib/security/cacerts
- /nsconfig/license/
- /nsconfig/rc.conf

Tip

Files (certificates and key files) that are copied to the cluster configuration coordinator manually (or through the shell) are not automatically available on the other cluster nodes. Run the “sync

cluster files”command from the cluster IP address before running a command that depends on these files.

To synchronize cluster files by using the command line interface

At the command prompt of the cluster IP address, type:

```
1 sync cluster files <mode>
```

To synchronize cluster files by using the configuration utility

1. Log on to the cluster IP address.
2. Navigate to **System > Cluster**.
3. In the details pane, under **Utilities**, click Synchronize cluster files.
4. In the **Synchronize** cluster files dialog box, select the files to be synchronized in the Mode drop-down list.
5. Click **OK**.

Viewing the statistics of a cluster

December 21, 2020

You can view the statistics of a cluster instance and cluster nodes to evaluate the performance or to troubleshoot the operation of the cluster.

To view the statistics of a cluster instance by using the command line interface

At the command prompt of the cluster IP address, type:

```
1 stat cluster instance <clId>
```

To view the statistics of a cluster node by using the command line interface

At the command prompt of the cluster IP address, type:

```
1 stat cluster node <nodeid>
```


Note

The `stat cluster node <nodeid>` command displays the cluster level statistics when you run the command from the cluster IP address. However, when you run from the NSIP address of a cluster node, the command displays node level statistics.

To view the statistics of a cluster instance by using the configuration utility

1. Log on to the cluster IP address.
2. Navigate to **System > Cluster**.
3. In the details pane, in the center of the page, click **Statistics**.

To view the statistics of a cluster node by using the configuration utility

1. Log on to the cluster IP address.
2. Navigate to **System > Cluster > Nodes**.
3. In the details pane, select a node and click **Statistics** to view the statistics of the node. To view the statistics of all the nodes, click **Statistics** without selecting a specific node.

Discovering NetScaler appliances

May 2, 2023

You can discover the appliances present in the same subnet as the current node. The required discovered appliances can then be selectively added to the cluster. This operation can be performed to either create a cluster or to add nodes to an existing cluster.

Note

- The discover operation can be performed only through the configuration utility.
- This operation cannot discover NetScaler appliances from different networks.
- When performing this operation to add nodes to an existing cluster, the L3 VLAN configurations are cleared from the node. You make sure to define these configurations once the appliance is added to the cluster.

To discover appliances by using the GUI

1. Log on to the cluster IP address.
2. Navigate to **System > Cluster > Nodes**.

3. In the details pane, at the bottom of the page, click **Discover NetScalers**.
4. In the **Discover NetScalers** dialog box, set the following parameters:
 - **IP address range** - Specify the range of IP addresses within which you want to discover appliances. For example, you can search for all NSIP addresses between 10.102.29.4 to 10.102.29.15 by specifying this option as 10.102.29.4 - 15.
 - **Backplane interface** - Specify the interfaces to be used as the backplane interface. It is an optional parameter. If you do not specify this parameter, you must update it after the node is added to the cluster.
5. Click **OK**.
6. Select the appliances that you want to add to the cluster.
7. Click **OK**.

Disabling a cluster node

December 21, 2020

You can temporarily remove a node from a cluster by disabling the cluster instance on that node. A disabled node is not synchronized with the cluster configurations. When the node is enabled again, the cluster configurations are automatically synchronized on it. For more information, see [Synchronization across cluster nodes](#).

A disabled node cannot serve traffic and all existing connections on this node are terminated.

Note

If the configurations of a disabled non-configuration coordinator node are modified (through the NSIP address of the node), the configurations are not automatically synchronized on that node. You can manually synchronize the configurations as described in [Synchronizing Cluster Configurations](#).

To disable a cluster node by using the command line interface

At the command prompt of the node that you want to disable, type:

```
1 disable cluster instance <clId>
```

Note

To disable the cluster, run the `disable cluster instance` command on the cluster IP address.

To disable a cluster node by using the configuration utility

1. On the node that you want to disable, navigate to **System > Cluster**, and click **Manage Cluster**.
2. In the **Configure** cluster instance dialog box, unselect the **Enable** cluster instance check box.

Note

To disable the cluster instance on all the nodes, perform the preceding procedure on the cluster IP address.

Removing a cluster node

September 26, 2023

When a node is removed from the cluster, the cluster configurations are cleared from the node (by internally running the `clear ns config -extended` command). The SNIP addresses, **MTU** settings of the backplane interface, and all VLAN configurations (except the default VLAN and NSVLAN) are also cleared from the appliance.

Note:

- If the deleted node was the cluster configuration coordinator (CCO), another node is automatically selected as the CCO, and the cluster IP address is assigned to that node. All the current cluster IP address sessions are invalid and you have to start a new session.
- To delete the whole cluster, you must remove each node individually. When you remove the last node, the cluster IP addresses are deleted.
- When an active node is removed, the traffic serving capability of the cluster is reduced by one node. Existing connections on this node are terminated.
- You can list the spotted configuration of a cluster node using the `shell spottedconfig <nodeID>` command and take a backup before removing the node from the cluster.

To remove a cluster node by using the CLI

1. Log on to the cluster IP address and at the command prompt, type:

```
1 rm cluster node <nodeId>
2
3 Example:
4
5 rm cluster node 1
```

```
6 All spotted configurations will be lost. Take a backup of the
   spotted configurations for node ID 1 using the command `shell
   spottedconfig 1`.
7 Are you sure you want to remove the cluster node (Y/N)? [N]:Y
8 Done
9
10 save ns config
```

2. Log on to the removed node, NSIP address, and at the command prompt, type:

```
1 save ns config
```

Note:

If the cluster IP address is unreachable from the node, run the `rm cluster instance` command on the NSIP address of that node itself.

To remove a cluster node by using the GUI

On the cluster IP address, navigate to **System > Cluster > Nodes**, select the node you want to remove and click **Remove**.

Removing a node from a cluster deployed using cluster link aggregation

September 20, 2023

To remove a node from a cluster that uses cluster link aggregation as the traffic distribution mechanism, you must make sure that the node is made passive so that it does not receive any traffic and then, on the upstream switch, remove the corresponding interface from the channel.

For detailed information on cluster link aggregation, see [Using Cluster Link Aggregation](#).

To remove a node from a cluster that uses cluster link aggregation as the traffic distribution mechanism

1. Log on to the cluster IP address.
2. Set the state of the cluster node that you want to remove to PASSIVE.

```
1 set cluster node <nodeId> -state PASSIVE
```

3. On the upstream switch, remove the corresponding interface from the channel by using switch-specific commands.

Note:

You do not have to manually remove the nodes interface on the cluster link aggregation channel. It is automatically removed when the node is deleted in the next step.

4. Remove the node from the cluster.**Note:**

You can list the spotted configuration of a cluster node using the `shell spottedconfig <nodeID>` command and take a backup before removing the node from the cluster.

```
1  rm cluster node <nodeId>
2
3  Example:
4
5  rm cluster node 1
6  All spotted configurations will be lost. Take a backup of the
   spotted configurations for node ID 1 using the command `shell
   spottedconfig 1`.
7  Are you sure you want to remove the cluster node (Y/N)? [N]:Y
8  Done
```

Detecting jumbo probe on a cluster

October 21, 2024

If a jumbo frame is enabled on a cluster interface, the backplane interface must be large enough to support the all packets in the jumbo frame. It is achieved by setting the Maximum Transmission Unit (MTU) of the backplane.

The configured MTU value must be the same across all nodes in the cluster for the following:

- Server data plane (X)
- Client data plane (Y)
- Backplane: The configured MTU value must be set to $78 + \text{a maximum of X and Y}$.

Note:

The MTU values for the server data plane (X) and client data plane (Y) need not be the same.

For example, if the MTU of a server data plane is 7500 and of the client data plane is 8922 across the cluster, then the MTU of a cluster backplane must be set to $78 + 8922 = 9000$ across the cluster.

To verify the preceding configuration, you must send a jumbo probe (of the preceding computational size) to all the peer nodes of a cluster setup. If the probe does not succeed, the appliance displays a warning message in the output of the `show cluster instance` command.

In the command interface mode, type the following command:

```

1      > show cluster instance
2      Cluster ID: 1
3      Dead Interval: 3 secs
4      Hello Interval: 200 msec
5      Preemption: DISABLED
6      Propagation: ENABLED
7      Quorum Type: MAJORITY
8      INC State: DISABLED
9      Process Local: DISABLED
10     Cluster Status: ENABLED(admin),      ENABLED(operational), UP

```

Warning:

The MTU for a backplane interface must be large enough to handle all packets in the frame. It must be equal to `<MTU__VAL>`. If the recommended value is not user configurable, you must review the MTU value of jumbo interfaces.

Sl. no	Member Nodes	Health	Admin State	Operation State
1	Node ID: 1; Node IP: 10.102.53.167	UP	Active	ACTIVE (Configuration Coordinator)
2	Node ID: 2; Node IP: 10.102.53.168	UP	Active	Active

Route monitoring for dynamic routes in cluster

December 21, 2020

You can use a route monitor to make a cluster node dependent on the internal routing table whether it contains or does not contain a dynamically learned route. A route monitor on each node checks the internal routing table to ensure there is a route entry for reaching a particular network is always present. If the route entry is not present, the state of the route monitor changes to DOWN.

In a cluster deployment, if the client-side or server side-link of a node goes down, traffic is steered to this node through the peer nodes for processing. The steering of traffic is implemented by configuring

dynamic routing and adding static ARP entries, pointing to the special MAC address of each node, on all the nodes. If there are many nodes in a cluster deployment, adding and managing static ARP entries with special MAC addresses on all the nodes is a cumbersome task. Now, nodes implicitly use special MAC addresses for steering packets. Therefore, static ARP entries pointing to special MAC addresses are no longer required to be added to the cluster nodes.

To bind a cluster node using the CLI

At the command prompt, type:

```
1 bind cluster node <nodeId> \(-routeMonitor <ip\_addr|ipv6\_addr|\*> \[<netmask>])
2 unbind cluster node <nodeId> \(-routeMonitor <ip\_addr|ipv6\_addr|\*> \[<netmask>])
```

Consider a scenario where Node 1 is bound to route monitor 1.1.1.0 255.255.255.0. When a dynamic route fails, Node 1 become INACTIVE. The health status is available in the `show cluster node` command by node id as per following.

```
1 Node ID: 1
2 IP: 10.102.169.96
3 Backplane: 1/1/2
4 Health: NOT UP
5 Reason(s): Route Monitor(s) of the node have failed
6 Route Monitor - Network: 1.1.1.0 Netmask: 255.255.255.0 State: DOWN
```

Monitoring cluster setup using SNMP MIB with SNMP link

May 2, 2023

SNMP MIB is device specific information that is configured on the SNMP agent for identifying a NetScaler appliance. It can identify information such as, appliance name, administrator, and location. In a cluster setup, you can now configure the SNMP MIB in any node by including the “ownerNode” parameter in the set SNMP MIB command. Without this parameter, the set SNMP MIB command applies only to the Cluster Coordinator (CCO) node.

To display the MIB configuration for a cluster node other than the CCO, include the “ownerNode” parameter in the show SNMP MIB command.

Configuring SNMP MIB on CLIP

To configure and view MIB configuration on CLIP by using the command line interface.

```
1 set snmp mib [-contact <string>] [-name <string>] [-location <string>]
2     [-customID <string>] [-ownerNode <positive_integer>]
3 Done
4 show snmp mib [-ownerNode <positive_integer>]
5
6 > set mib -contact John -name NS59 -location San Jose -customID 123 -
   ownerNode 3
7 Done
8 > sh mib -ownerNode 3
9
10     -----
11     Cluster Node ID: 3
12     -----
13     NetScaler system MIB:
14     sysDescr:    NetScaler NS11.1: Build 46.4.a.nc, Date: Jun  7
15                 2016, 10:27:29
16     sysUpTime:   124300
17     sysObjectID: .1.3.6.1.4.1.5951.1.1
18     sysContact:  John
19     sysName:     NS59
20     sysLocation: San Jose
21     sysServices: 72
22     Custom ID: 123
23 Done
24
25 > unset mib -contact -name -location -customID -ownerNode 3
26 Done
27 > sh mib -ownerNode 3
28
29     -----
30     Cluster Node ID: 3
31     -----
32     NetScaler system MIB:
33     sysDescr:    NetScaler NS11.1: Build 46.4.a.nc, Date: Jun 7
34                 2016, 10:27:29
35     sysUpTime:   146023
36     sysObjectID: .1.3.6.1.4.1.5951.1.1
37     sysContact:  WebMaster (default)
38     sysName:     NetScaler
39     sysLocation: POP (default)
40     sysServices: 72
41     Custom ID: Default
42 Done
```

Cluster SNMP trap messages

In cluster setup, the SNMP trap alarm configurations must be done from the CLIP. The commands are propagated to each of the nodes.

For more information on configuring SNMP, see [Configuring the NetScaler to generate SNMP traps](#).

The following are the cluster specific traps that are available:


```
1 >sh snmp alarm | grep cluster
2 CLUSTER-BACKPLANE-HB-MISSING N/A N/A 86400 ENABLED - ENABLED
3 CLUSTER-CCO-CHANGE N/A N/A N/A ENABLED - ENABLED
4 CLUSTER-NODE-HEALTH N/A N/A 86400 ENABLED - ENABLED
5 CLUSTER-NODE-QUORUM N/A N/A 86400 ENABLED - ENABLED
6 CLUSTER-OVS-CHANGE N/A N/A N/A ENABLED - ENABLED
7 CLUSTER-PROP-FAILURE N/A N/A N/A ENABLED - ENABLED
8 CLUSTER-SYNC-FAILURE N/A N/A N/A ENABLED - ENABLED
9 CLUSTER-SYNC-PARTIAL-SUCCESS N/A N/A N/A ENABLED - ENABLED
10 CLUSTER-VERSION-MISMATCH N/A N/A 86400 ENABLED - ENABLED
```

Monitoring command propagation failures in a cluster deployment

May 2, 2023

In a cluster deployment, you can use the new command “show prop status” for faster monitoring and troubleshooting of issues. The issues related to command-propagation failure on non-CCO nodes. This command displays up to 20 of the most recent command propagation failures on all non-CCO nodes. You can use either the NetScaler appliance CLI or GUI to perform this operation. You can access them through the CLIP address or through the NSIP address of any node in the cluster deployment.

Graceful shutdown of nodes

June 20, 2024

In a cluster setup, some of the existing connections (1/Nth connections, where N is the cluster size) at the cluster level or specific virtual server level are lost. This behavior is observed if a node leaves or joins the system. To address the loss, you must gracefully handle the existing connections. Graceful handling is done by configuring the `retain connections on cluster` option in the CLIP address and specifying a timeout interval in the node’s NSIP.

Graceful handling of connections is applicable in two scenarios:

1. Cluster upgrade
2. New node addition

Graceful handling of Nodes in cluster upgrade

To upgrade a cluster, you must upgrade one node at a time. Before upgrading a node, you must set it to passive state and then set it to active state after the upgrade. To avoid terminating existing connec-

tions when upgrading the node, shut it down gracefully with a configured timeout interval. Otherwise, 1/Nth (where N is the cluster size) of the cluster's connections are terminated.

Note:

- If existing sessions are not completed within the configured timeout interval, they get terminated after the grace time.
- To check the timeout interval, you must use the CLIP or NSIP address of the node, which is set to passive.

Following are the steps to gracefully handle nodes in a cluster upgrade scenario:

1. Consider a cluster setup of five nodes (n0, n1, n2, n3, n4).
2. Before you shut down a node, you must configure the `retainConnectionsOnCluster` option. It helps to retain all existing connections of this node at the cluster level or virtual server level for a specific time interval.

Example

On CLIP

```
set cluster instance <clusterID> -retainConnectionsOnCluster YES
```

OR

```
set lb vserver <vserver name> -retainConnectionsOnCluster Yes
```

3. Log on to the NSIP address of node n3 and set the node n3 to PASSIVE with a timeout interval.

Example

```
1 set cluster node n3 - state PASSIVE - delay 60
2 saveconfig
```

4. After the grace period expires, close all connections, shut down n3 and reboot the NetScaler appliance.
5. Upgrade the appliance. Then, with the CLI connected to the appliance's NSIP address, set the node to ACTIVE.

Example

```
1 set cluster node n3 - state ACTIVE
2 saveconfig
```

6. Repeat steps 3–6 for all nodes in the cluster.
7. After all nodes are upgraded and set to ACTIVE, reset the `retainConnectionsOnCluster` option from the CLIP address.

Example

```
set cluster instance <clusterID> -retainConnectionsOnCluster NO
```

OR

```
1 set lb vserver <vserver name> -retainConnectionsOnCluster NO
2 saveconfig
```

Note:

If there is a version mismatch when upgrading a cluster, cluster propagation is automatically disabled and no commands are allowed on the CLIP.

Graceful handling of nodes during a new node addition

The graceful handling of nodes describes how a new node can be added to the existing NetScaler cluster. Consider you have a NetScaler cluster that is already serving traffic. And you want to add an extra appliance as a node to the cluster without terminating its existing connections. To accomplish the preceding scenario, set the option to retain existing connections either at a Global level or at a specific virtual server level. Once done, save the configuration. Now set the option to retain connections to NO, to allow existing connections from other nodes to be reassigned to the new node.

Following are the steps to gracefully handle nodes if a node newly added:

1. Save the existing configuration that has the `retainConnectionsOnCluster` option enabled. By doing so, you can retain all existing connections of this node at the cluster level or virtual server level for a specific time interval.

On CLIP

```
1 set cluster instance x - retainConnectionsOnCluster YES
```

OR

```
1 set lb vserver xxxx - retainConnectionsOnCluster Yes
```

2. Add a node n5 to the cluster setup.
3. Disable the `retainConnectionOnCluster` option to NO for distributing existing connections from other nodes to the newly added node n5.

On CLIP

```
1 set cluster instance x - retainConnectionsOnCluster NO
```

OR

```
1 set lb vserver xxxx - retainConnectionsOnCluster NO
```

Note:

The backplane steering depends on the type of traffic distribution mechanism (ECMP, CLAG, and USIP) on a cluster setup. The increase in backplane steering is based on the traffic type.

Configuring graceful shutdown of nodes in a cluster

To configure graceful shutdown of nodes in a cluster, do the following:

1. Configure the `retainConnectionsOnCluster` option at Global (cluster) level.
2. Configure the `retainConnectionsOnCluster` option at the virtual server level.
3. Set the node (leaving the system) to the passive state with a graceful timeout interval specified in the node's NSIP address.
4. Monitor the existing connections to make sure all transactions are completed within the grace period.

To retain existing connections at the global (cluster) level by using the CLI

You can retain existing connections either at a global level or at a specific virtual server level. This option is configured to retain all existing connections at the global level. By default, this option is disabled.

At the command prompt type:

```
1 - set cluster instance <clusterID> - retainConnectionsOnCluster YES
2
3 - set cluster instance 60 - retainConnectionsOnCluster YES
```

To retain existing connections of a specific virtual server in the cluster by using the CLI

This option is configured to retain existing connections specific to a load balancing virtual server. To retain those connections, we enable this option at the virtual server level. By default, this option is disabled.

At the command prompt, type:

```
1 - set lb vserver <clusterID> - retainConnectionsOnCluster Yes
2
3 - set lb vserver v1 - retainConnectionsOnCluster Yes
```

To set a cluster node to passive state by using the CLI

To set a cluster node to passive state with a graceful timeout interval. This setting is performed in the node's NSIP as propagation is disabled during cluster upgrade.

At the command prompt, type:

```
1 - set cluster node <clusterID> -state passive
2 -backplane <interface_name>@
3 -priority <positive_integer>
4 -delay <mins>
5
6 - set cluster node 4 - state PASSIVE -delay 60
7
8 - set cluster instance 60 - retainConnectionsOnCluster YES
9 - set lb vserver v1 - retainConnectionsOnCluster Yes
10 - set cluster node 4 - state PASSIVE -delay 60
```

Note:

You might observe the following behavior on a cluster node when it is set to passive with a delay option configured from a CLIP:

- After the timeout, the node shows as passive from the NSIP of the node.
- The **show cluster instance** command on CLIP displays the node as active from the CLIP. Whereas the **show cluster node** command on the CLIP displays the node as passive.

To configure graceful shutdown of nodes by using the GUI

1. Navigate to **Configuration > System > Cluster** and click **Manage Cluster**.
2. On the **Manage Cluster** page, select **Retain Connections on Cluster** option.
3. Click **OK**, and then click **Done**.

Graceful shutdown of services

May 2, 2023

Starting with NetScaler 12.1 build 49.xx, NetScaler clusters support graceful shutdown of services. To gracefully shut down the services, you can perform one of the following tasks.

- Explicitly disable the service, and
 - Set a delay (in seconds).
 - Enable graceful shutdown.

- Add a TROFS code or string to the monitor.

For more details, see [Graceful shutdown of services](#).

To configure graceful shutdown for a service by using the CLI

Disable with graceful option only:

At the command prompt, type:

```
1 disable service <name> [-graceFul (YES|NO)]
2
3 show service <name>
```

Example

```
1 disable service svc1 -graceFul YES
2 Done
3 sh service svc1
4          svc1 (10.102.225.11:80) - HTTP
5          State: GOING OUT OF SERVICE   Graceful (number of
6          active clients: 1)
7          Last state change was at Wed Jul 25 10:46:29 2018
8          Time since last state change: 0 days, 00:00:02.680
9          .....
10         Traffic Domain: 0
11
12 1)          Monitor Name: tcp-default
13             State: UP                               Weight: 1
14             Passive: 0
15             Probes: 26                               Failed [Total: 0]
16             Current: 0]
17             Last response: Success - TCP syn+ack
18             received.
19             Response Time: 0.0 millisec
```

Disable with timeout and graceful option:

At the command prompt, type:

```
1 disable service <name> [<delay>] [-graceFul (YES|NO)]
2
3 show service <name>
```

Example

```
1 disable service svc1 2000 -graceFul YES
2
3 Done
4 > sh service svc1
5          svc1 (10.102.225.11:80) - HTTP
```

```

6          State: GOING OUT OF SERVICE (Graceful (number of active
7             clients: 1), Out Of Service in 1998 seconds)
8          Last state change was at Wed Jul 25 10:49:08 2018
9          Time since last state change: 0 days, 00:00:01.710
10         .....
11         .....
12         Traffic Domain: 0
13 1)      Monitor Name: tcp-default
14             State: UP                Weight: 1
15             Passive: 0
16             Probes: 57                Failed [Total: 0
17             Current: 0]
18             Last response: Success - TCP syn+ack
19             received.
20             Response Time: 0.0 millisec
21 Done

```

Disable service group with timeout and graceful option:

At the command prompt, type:

```

1 disable serviceGroup <serviceName>@ [<serverName>@ <port>] [-delay
2 <secs>] [-graceful ( YES | NO )]
3 Show service group <serviceName>

```

Example:

```

1 disable servicegroup sg -delay 2000 -graceful yes
2 sh servicegroup sg
3     sg - HTTP
4     State: DISABLED                Effective State: OUT OF
5     SERVICE Monitor Threshold : 0
6     Max Conn: 0                    Max Req: 0                Max Bandwidth: 0
7     kbits
8     Use Source IP: NO
9     Client Keepalive(CKA): NO
10    .....
11    .....
12    1)  200.200.10.21:80            Server Name: server3
13        Server ID: None Weight: 1
14        State: GOING OUT OF SERVICE (learnt
15        from node:2 ) Graceful (number
16        of active clients: 6), Out Of
17        Service in 1993 seconds
18        Last state change was at Mon Aug 13
19        15:15:11 2018
20        .....
21    2)  200.200.10.22:80            Server Name: server4
22        Server ID: None Weight: 1
23        State: GOING OUT OF SERVICE (learnt

```

```

19 from node:2 ) Graceful (number
of active clients: 7), Out Of
Service in 1993 seconds
Last state change was at Mon Aug 13
15:15:11 2018

```

Note

CLIP displays the aggregated value of all active clients connections from all cluster nodes.

To configure graceful shutdown for a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Open the service, and from the Action list, click **Disable**. Enter a wait time, and select Graceful.

To configure a TROFS code or string in a monitor by using the CLI

At the command prompt, type one of the following commands:

```

1 add lb monitor <monitor-name> HTTP -trofsCode <respcode>
2 add lb monitor <monitor-name> HTTP-ECV -trofsString <resp string>
3 add lb monitor <monitor-name> TCP-ECV -trofsString <resp string>

```

To configure a TROFS code or string in a monitor by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. On the Monitors pane, click Add, and do one of the following steps:
 - Select Type as HTTP, and specify a TROFS Code.
 - Select Type as HTTP-ECV or TCP-ECV, and specify a TROFS String.

IPv6 ready logo support for clusters

December 21, 2020

You can test clustered appliances for IPv6 Ready Logo certification. Modified commands for testing IPv6 core protocols, such as for ND test cases, Router Solicitation processing, and sending route advertisement and router redirection messages are available in a clustered setup. Following are the IPv6 functionalities available for testing the IPv6 core protocols.

Following are the modified functionalities available to pass IPv6 core protocols, such as ND test cases, Router Solicitation processing and sending Route advertisement and router redirection messaging in the IPv6readylogo phase2 test suite.

- Link Local SNIPs
- Address Resolution and Neighbor Unreachability
- Router and Prefix Discovery
- Router Redirection
- DoDAD

With these modified commands, the following configurations are supported in a clustered appliance.

Supportable configurations for testing IPv6 core protocols

For a clustered setup to pass IPv6 Ready Logo test cases, you can run the following configurations on the Cluster Management IP address (CLIP).

- global IPv6 configuration
- basic IPv6 configuration
- more IPv6 configurations

Global configuration

A global IPv6 configuration enables you to set the global IPv6 parameters (such as relearning, routeRedirection, ndBasereachTime, nRetransmissionTime, natprefix, td, and doodad) to run the basic IPv6 configuration.

At the command prompt, type the following:

```
1 set ipv6 \[-relearning \(\ ENABLED | DISABLED \)\] \[-routerRedirection \(\
  ENABLED | DISABLED \)\] \[-ndBasereachTime<positive\_integer>\]\[-
  ndRetransmissionTime <positive\_integer>\] \[-natprefix <ipv6\_addr
  \|\*\>\[-td<positive\_integer>\]\] \[-doDAD \(\ ENABLED | DISABLED \)\]
```

Basic IPv6 configuration

The basic IPv6 configuration enables you to create an IPv6 address and bind to a VLAN interface. You can perform the following configurations to test the IPv6 core protocols.

To add a VLAN to the clustered setup by using the CLI

At the command prompt, type:

```
1 add vlan <id>
```

To add another VLAN to the clustered setup by using the CLI

At the command prompt, type:

```
1 add vlan <id>
```

To bind an interface to a VLAN by using the CLI

At the command prompt, type:

```
1 bind vlan <id> -ifnum <interface_name>
```

To bind an interface to a VLAN by using the CLI

This command adds the global prefix as on-link prefix into RA information for subsequent Router Advertisements. At the command prompt, type:

```
1 bind vlan <id> -ifnum <interface_name>
```

To add the IPv6 SNIP address on a VLAN by using the CLI

At the command prompt, type the following:

```
1 add ns ip6 <IPv6Address>@ \[-scope \( global | link-local )\]\[-type <type>
```

To add the IPv6 address on VLAN by using the CLI

At the command prompt, type the following:

```
1 add ns ip6 <IPv6Address>@ \[-scope \( global | link-local )\]\[-type <type>
```

To bind IPv6 address to VLAN by using the CLI

At the command prompt, type the following:

```
1 bind vlan <id> \[-ifnum <interface\_name> \[-tagged]]\[-IPAddress <ip\_addr|ipv6\_addr|
```

To bind the IPv6 address to VLAN by using the CLI

At the command prompt, type the following:

```
1 bind vlan <id> \[-ifnum <interface\_name> \[-tagged]]\[-IPAddress <ip\_addr|ipv6\_addr|
```

To display the link local IPv6 address attached to VLAN by using the CLI

At the command prompt, type the following:

```
1 sh VLAN
```

Example 1

```
1 add vlan 2
2 add vlan 3
3 bind vlan 2 -ifnum 1/2
4 bind vlan 3 -ifnum 1/3
5 add ip6 fe80::9404:60ff:fedd:a464/64 -vlan 2 -scope link-local -type
  SNIP
6 add ip6 fe80::c0ee:7bff:fede:263f/64 -vlan 3 -scope link-local -type
  SNIP
7 add ip6 3ffe:501:ffff:100:9404:60ff:fedd:a464/64 -vlan 2
8 add ip6 3ffe:501:ffff:101:c0ee:7bff:fede:263f/64 -vlan 3
9 bind vlan 2 -ipAddress 3ffe:501:ffff:100:9404:60ff:fedd:a464/64
10 bind vlan 3 -ipAddress 3ffe:501:ffff:101:c0ee:7bff:fede:263f/64
```

Example 2

```
1 sh vlan
2 1)      VLAN ID: 2      VLAN Alias Name:
3         Interfaces : 1/6
4         IPs :
5             3ffe:501:ffff:100:2e0:edff:fe15:ea2a/64
6 3)      VLAN ID: 3      VLAN Alias Name:
7         Link-local IPv6 addr: fe80::9404:60ff:fedd:a464/64
8         Interfaces : 1/5
9         IPs :
10            3ffe:501:ffff:101:2e0:edff:fe15:ea2b/64
11 Done
```

More IPv6 cluster configuration

To test IPv6 core protocols, you can use the following new or modified IPv6 configurations.

To set VLAN specific Router Advertisement parameters by using the CLI

At the command prompt, type:

```
1 set nd6RAvariables -vlan <positive\_integer> \[-ceaseRouterAdv \(\ YES |
  NO)\] \[-sendRouterAdv \(\ YES | NO )\] \[-srcLinkLayerAddrOption \(\
  YES | NO )\]\[-onlyUnicastRtAdvResponse \(\ YES | NO )\] \[-
  managedAddrConfig \(\ YES | NO)\] \[-otherAddrConfig \(\ YES | NO )\]
  \[-currHopLimit <positive\_integer>\]\[-maxRtAdvInterval <positive\_
  integer>\] \[-minRtAdvInterval<positive\_integer>\] \[-linkMTU <
  positive\_integer>\] \[-reachableTime<positive\_integer>\] \[-
  retransTime <positive\_integer>\] \[-defaultLifeTime<integer>]
```

To set an on-link global prefix's configurable parameters by using the CLI

At the command prompt, type:

```
1 set onLinkIPv6Prefix <ipv6Prefix> \[-onlinkPrefix \(\ YES | NO \)\]\[-
  autonomusPrefix \(\ YES | NO \)\] \[-depricatePrefix \(\ YES | NO \)\]\[-
  decrementPrefixLifeTimes \(\ YES | NO \)\] \[-prefixValideLifeTime <
  positive\_integer>] \[-prefixPreferredLifeTime <positive\_integer>]
```

To add configurable parameters to an on-link global prefix by using the CLI

At the command prompt, type:

```
1 add onLinkIPv6Prefix <ipv6Prefix> \[-onlinkPrefix \(\ YES | NO \)\]\[-
  autonomusPrefix \(\ YES | NO \)\] \[-depricatePrefix \(\ YES | NO \)\]\[-
  decrementPrefixLifeTimes \(\ YES | NO \)\]-prefixValideLifeTime <
  positive\_integer>]\[-prefixPreferredLifeTime <positive\_integer>]
```

To set an on-link link to the IPv6 prefix's configurable parameters by using the CLI

At the command prompt, type the following:

```
1 help set onLinkIPv6Prefix
```

To bind an on-link link to the IPv6 prefix's configurable parameters by using the CLI

At the command prompt, type:

```
1 help bind nd6RAvariables
```

To show nd6RAvariables by using the CLI

At the command prompt, type:

```
1 help sh nd6RAvariables
```

Example

```
1 > sh nd6RAvariables
2 1) Vlan : 1
3   SendAdvert      : NO   CeaseAdv          : NO   SourceLLAddress:
4     YES
5   UnicastOnly    : NO   ManagedFlag      : NO   OtherConfigFlag:
6     NO
7   CurHopLimit    : 64   MaxRtrAdvInterv : 600  MinRtrAdvInterv:
8     198
9   LinkMTU        : 0    ReachableTime    : 0    RetransTimer   :
10    0
11  DefaultLifetime: 1800 LastRASentTime   : 0    NextRAdelay    :
12    0
13 2) Vlan : 2
```

```

10   SendAdvert      : NO   CeaseAdv         : NO   SourceLLAddress:
      YES
11   UnicastOnly    : NO   ManagedFlag     : NO   OtherConfigFlag:
      NO
12   CurHopLimit    : 64   MaxRtrAdvInterv: 600   MinRtrAdvInterv:
      198
13   LinkMTU        : 0    ReachableTime   : 0    RetransTimer    :
      0
14   DefaultLifetime: 1800 LastRAsentTime  : 0    NextRAdelay     :
      0
15 Done
16 >
17 > sh nd6Rvariables - vlan 2
18 1) Vlan : 2
19   SendAdvert      : NO   CeaseAdv         : NO   SourceLLAddress:
      YES
20   UnicastOnly    : NO   ManagedFlag     : NO   OtherConfigFlag:
      NO
21   CurHopLimit    : 64   MaxRtrAdvInterv: 600   MinRtrAdvInterv:
      198
22   LinkMTU        : 0    ReachableTime   : 0    RetransTimer    :
      0
23   DefaultLifetime: 1800 LastRAsentTime  : 0    NextRAdelay     :
      0
24   Prefix :
25 3ffe:501:ffff:100::/64
26 Done

```

Managing cluster heartbeat messages

May 2, 2023

Managing heartbeat messages in a cluster is similar to managing them in a high availability (HA) configuration. Nodes can send and receive heartbeat messages to and from each other on all interfaces that are enabled. To avoid increased traffic resulting from heartbeat messages, you can now disable the heartbeat option on node interfaces. However, the heartbeat option on the backplane interface cannot be disabled, because it is required for maintaining connectivity among the cluster nodes.

For more information about managing heart messages, see [Managing High Availability Heartbeat Messages on a NetScaler Appliance](#).

To manage heartbeat messages on a node interface by using the NetScaler CLI

At the command prompt, type:

```
1 set interface <ID> \[-HAHeartBeat \((ON | OFF)\]
```

```
2 Show interface <ID>
```

Configure secure heartbeats

November 28, 2023

The secure heartbeats feature provides protection against network attacks such as tampering and replay attacks. When you enable the secure heartbeats in a cluster setup, NetScaler authenticates the heartbeat packets and checks for packet integrity to protect against network attacks. If the authentication or packet integrity check fails, NetScaler drops the heartbeat packets.

You can enable or disable the secure heartbeats using the `secureHeartbeats` parameter of the `set cluster` command.

Note:

- Secure heartbeats must be configured from the cluster IP address.
- Ensure that all the cluster nodes are running release 14.1 build 12.30 or later.

Configure secure heartbeats using the CLI

Log in to the cluster IP address and perform the following steps to enable or disable secure heartbeats.

To enable the secure heartbeats:

1. Enable the secure heartbeats.

```
set cluster instance <clId> secureHeartbeats ENABLED
```

2. Save the configuration.

```
save ns config
```

3. Verify the configuration.

```
sh cluster instance <clid>
```

Example configuration:

```
1 > set cluster instance 1 secureHeartbeats ENABLED
2 Warning: [The Secure Heartbeats feature must be set in the cluster IP (
  CLIP) address.]
3 Done
4 > save ns config
5 Done
```

```

6 > sh cluster instance 1
7 1) Cluster ID: 1
8     Dead Interval: 3 secs
9     Hello Interval: 200 msec
10    Preemption: DISABLED
11    Propagation: ENABLED
12    Quorum Type: MAJORITY
13    INC State: DISABLED
14    Process Local: DISABLED
15    Retain Connections: NO
16    Heterogeneous: NO
17    Backplane based view: DISABLED
18    Cluster sync strict mode: DISABLED
19    DFD Retain L2 Params: DISABLED
20    Cluster Proxy Arp Status: ENABLED
21    Secure Heartbeats: ENABLED
22    Cluster Status: ENABLED(admin), ENABLED(operational), UP
23
24    WARNING(s):
25    (1) - There are no spotted SNIPs configured on the
26         cluster. Spotted SNIPs can help improve cluster
27         performance.
28
29    Member Nodes:
30    Node ID      Node IP          Health      Admin State
31    Operational State
32    -----
33    1) 1         10.102.58.124   UP          ACTIVE      ACTIVE
34    2) 2         10.102.58.125   UP          ACTIVE      ACTIVE
35    3) 0         10.102.58.123*  UP          ACTIVE      ACTIVE (
36         Configuration Coordinator)
37
38    Done

```

To disable the secure heartbeats:

Run the following commands to disable secure heartbeats.

1. `set cluster instance <clId> secureHeartbeats DISABLED`
2. `save ns config`

Configure secure heartbeats using the GUI

Log in to the cluster IP address and perform the following steps to enable or disable secure heartbeats.

To enable the secure heartbeats:

1. Navigate to **System > Cluster**.
2. In the details pane, click the **Manage Cluster** link.

3. In the **Configure cluster instance** page, select the **Secure Heartbeats** checkbox.
4. Click **Save**, and then click **Yes**.

To disable the secure heartbeats:

In the **Configure cluster instance** page, clear the **Secure Heartbeats** checkbox.

Configuring owner node response status

May 2, 2023

You can configure the `ownerDownResponse` option on a node which has a spotted SNIP address. By default, the option is enabled. It allows the spotted IP address to respond to PING or ARP requests (coming from the upstream router) when the node is inactive. If you disable the option, the IP address cannot respond to the router requests when the owner node is inactive.

To know how this feature is used for monitoring static routes in ECMP deployment, see [Using Equal Cost Multiple Path \(ECMP\)](#) topic.

To set owner node response status by using the NetScaler CLI

At the command prompt, type:

```
1 add ns ip <IPAddress> \[-ownerNode <positive\_integer>] \[-ownerDownResponse \ (YES | NO ) ] \[-td <positive\_integer>]
```

Example

```
1 add ns ip 2.2.2.2 255.255.255.0 -ownernode 6 - ownerdownResponse YES
```

To set owner node response status by using the NetScaler GUI

1. Navigate to **System > Network > IPs** and click **Add** to create a spotted SNIP address.
2. On the **Create IP Address** page, select, or clear the **ownerDownResponse** check box.

To edit owner node response status by using the NetScaler GUI

Navigate to **System > Network > IPs**, select an IP address, and click **Edit** to select or clear the **ownerDownResponse** check box.

Monitor static route (MSR) support for inactive nodes in a spotted cluster configuration

December 21, 2020

In a cluster set up with the MSR option enabled on the route, only active nodes can probe to a static route. It can reach a network while inactive and spare nodes have no link to the route and cannot probe to it. You can now configure an inactive or spare node to send PING and ARP probe to IPv4 route and send ping6 and nd6 probe to IPv6 route. You can perform this only in a spotted cluster configuration in which the SNIP address is active and owned exclusively only by one node.

VRRP interface binding in a single node active cluster

May 2, 2023

When you migrate a high availability (HA) setup to a cluster setup, all configurations must be compatible and must be supportable in the cluster. To achieve this, you can now configure virtual router IDs (VRIDs and VRID6s) on a node interface.

Important

Currently, only a single-node active cluster system supports VRIDs and VRID6s.

For instructions for configuring VRIDs and VRID6s, see [Configuring Virtual MAC Addresses](#).

To configure a virtual router ID on a single-node active cluster, add the VRID or VRID6 and bind it to the cluster-node interface.

To add a VRID by using the NetScaler CLI

At the command prompt, type:

```
1 add vrid <ID>
```

To bind a VRID to the cluster-node interface by using the NetScaler CLI

At the command prompt, type:

```
1 Bind vrid <ID> -ifnum <interface\_name> | -trackifNum <interface\_name>
2
3 Add vrid 100
4 Bind vrid 100 -ifnum 1/1 1/2
5 done
```

To add a VRID6 by using the NetScaler CLI

At the command prompt, type:

```
1 add vrid6 <ID>
```

To bind a VRID6 to a cluster node interface by using the CLI

At the command prompt, type:

```
1 bind vrid6 <ID> -ifnum <interface\_name> | -trackifNum <interface\_name>
  >
2
3 Add vrid6 100
4 Bind vrid6 100 -ifnum 1/1 1/2
5 Done
```

Cluster setup and usage scenarios

May 2, 2023

This section explains some scenarios in which the NetScaler cluster can be set up, and configured for different features and network topologies. Provide feedback if you want any other scenarios to be documented.

Creating a two-node cluster

December 21, 2020

A two-node cluster is an exception to the rule that a cluster is functional only when a minimum of $(n/2 + 1)$ nodes, where n is the number of cluster nodes, are able to serve traffic. If the same formula is applied to a two-node cluster, the cluster would fail if one node went down ($n/2 + 1 = 2$).

A two-node cluster is functional even if only one node is able to serve traffic.

Creating a two node cluster is the same as creating any other cluster. You add a one node as the configuration coordinator and the other node as the other cluster node.

Note

Incremental configuration synchronization is not supported in a two-node cluster. Only full synchronization is supported.

Migrating an HA setup to a cluster setup

August 12, 2024

Migrating an existing high availability (HA) setup to a cluster setup requires you to first remove the two NetScaler instances from the HA setup and create a backup of the HA configuration file. You can then use these instances to create a cluster and apply the backed-up configuration to the cluster.

Note

- Before applying the configuration from the backed-up HA configuration file to the cluster, you must modify it to make it cluster compatible.

The preceding approach is a basic migration solution which results in downtime for the deployed application. As such, it must be used only in deployments where there is no consideration of application availability.

However, in most deployments, the availability of the application is of paramount importance. For such cases, you must use the approach where an HA setup can be migrated to a cluster setup with minimal downtime. In this approach, an existing HA setup is migrated to a cluster setup by first removing the secondary instance and using that instance to create a single-node cluster. After the cluster becomes operational and serves traffic, the primary instance of the HA setup is added to the cluster.

To convert an HA setup to a cluster setup by using the CLI

Let us consider the example of a HA setup with primary instance (NS1) - 198.51.100.131 and secondary instance (NS2) - 198.51.100.132.

1. Make sure that the configuration of the HA pair is stable.
2. Log on to the secondary instance, go to the shell, and create a copy of the ns.conf file (for example, `/nsconfig/ns_backup.conf`). For the list of backup files supported in cluster, see [Back up a cluster setup](#)
3. Log on to the secondary instance, NS2, and clear the configuration. This operation removes NS2 from the HA setup and makes it a standalone instance.

```
1 > clear ns config full
```

Note

- This step is required to make sure that NS2 does not start owning VIP addresses, now

that it is a standalone instance.

- At this stage, the primary instance, NS1, is still active and continues to serve traffic.

4. Create a cluster on NS2 (now no longer a secondary instance) and configure it as a PASSIVE node.

```

1 > add cluster instance 1
2
3 > add cluster node 0 198.51.100.132 -state PASSIVE -backplane
    0/1/1
4
5 > add ns ip 198.51.100.133 255.255.255.255 -type CLIP
6
7 > enable cluster instance 1
8
9 > save ns config
10
11 > reboot -warm

```

5. Modify the backed-up configuration file as follows:

- (Optional) Remove the features that are not supported on a cluster. For the list of unsupported features, see [NetScaler Features Supported by a Cluster](#). If you do not perform this step, the unsupported commands might fail when you apply the configuration from the backed-up file.
- Remove the configuration that have interfaces, or update the interface names from the c/u convention to the n/c/u convention.

Example

```
1 > add vlan 10 -ifnum 0/1
```

must be changed to

```
1 > add vlan 10 -ifnum 0/0/1 1/0/1
```

- The backup configuration file can have SNIP addresses. These addresses are striped on all the cluster nodes. It is recommended that you add spotted IP addresses for each node.

Example

```

1 > add ns ip 1.1.1.1 255.255.255.0 -ownerNode 0
2
3 > add ns ip 1.1.1.2 255.255.255.0 -ownerNode 1

```

- Update the host name to specify the owner node.

Example

```

1 > set ns hostname ns0 -ownerNode 0
2

```

```
3 > set ns hostname ns1 -ownerNode 1
```

- e) Change all other relevant networking configuration that depends on spotted IP addresses. For example, L3 VLAN, RNAT configuration which uses SNIPs as NATIP, INAT rules that refers to SNIPs/MIPs).

6. On the cluster, do the following:

- a) Make the topological changes to the cluster by connecting the cluster backplane, the cluster link aggregation channel, and so on.
- b) Apply configuration from the modified file to the configuration coordinator through the cluster IP address.

```
1 > batch -f /nsconfig/ns_backup.conf -o /nsconfig/batch_output  
> **Note:** > > The output of the commands is saved in the  
> `batch_output` file. You must review the output file to  
> ensure that the necessary commands are run without errors.
```

- c) Configure external traffic distribution mechanisms like ECMP or cluster link aggregation.

Note:

Ensure that you configure the necessary spotted configuration on the cluster nodes. For more information on the list of spotted configuration, see [List of spotted configuration](#) and [Supportability matrix for NetScaler cluster](#).

7. Switch the traffic from the HA setup to the cluster.

- a) Log on to the primary instance, NS1, and disable all the data interfaces on it.

```
1 > disable interface <interface_id>
```

- b) Log on to the cluster IP address and configure NS2 as an ACTIVE node.

```
1 > set cluster node 0 -state ACTIVE
```

Note

There might be a minimal downtime between disabling the interfaces and making the cluster node active.

8. Ensure that the cluster and all the services are up.

9. Log on to the primary instance, NS1, and remove it from the HA setup.

- a) Clear the configuration. This operation removes NS1 from the HA setup and makes it a standalone instance.

```
1 > clear ns config full
```

- b) Enable all the data interfaces.

```
1 > enable interface <interface_id>
```

10. Add NS1 to the cluster.

- a) Log on to the cluster IP address and add NS1 to the cluster.

```
1 > add cluster node 1 198.51.100.131 -state PASSIVE -backplane  
1/1/1
```

- b) Log on to NS1 and join it to the cluster by sequentially running the following commands:

```
1 > join cluster -clip 198.51.100.133 -password nsroot  
2  
3 > save ns config  
4  
5 > reboot -warm
```

11. Log on to NS1 and perform the required topological and configuration changes.

Note:

Ensure that you configure the necessary spotted configuration on the cluster nodes. For more information on the list of spotted configuration, see [List of spotted configuration](#) and [Supportability matrix for NetScaler cluster](#).

12. Log on to the cluster IP address and set NS1 as an ACTIVE node.

```
1 > set cluster node 1 -state ACTIVE
```

To convert an HA setup to a cluster setup by using the GUI

Let us consider the example of an HA setup with primary instance (NS1) and secondary instance (NS2).

1. Make sure that the configuration of the HA pair is stable.
2. Log on to the secondary instance NS2. Go to **Configuration > Diagnostics** and click the **Save configuration** link. To take back up of a configuration, create a copy of the `ns.conf` file. (For example, `/nsconfig/ns_backup.conf`). For the list of backup files supported in cluster, see [Back up a cluster setup](#).
3. Click **Clear configuration**. On the **Clear Configuration** page, select the **Configuration Level** as **Full** and click **Clear**.

This operation removes NS2 from the HA setup and makes it a standalone instance.

4. Create a cluster on NS2, which is no longer a secondary instance, and configure it as a PASSIVE node. To create a cluster by using the GUI mode, see [To create a cluster by using the GUI](#).
 - a) Go to **Configuration > Cluster** and click **Manage cluster**.
 - b) Provide the cluster id configuration and Cluster IP[CLIP] configuration. CLIP is the management IP for the cluster.
 - c) Provide Node configuration. Backplane Interface is used for inter node communication. Keep the **State** value as **PASSIVE**.
The system reboots.
5. After the reboot, go to **Configuration > Cluster** to verify the node. At this point, there is no application configuration.
6. To restore the configuration from the backup file that was created, first modify the backup file of the `ns.conf` and make it cluster compatible. For making the configuration file cluster compatible, see the steps specified under the step Modify the backed-up configuration file of [To convert an HA setup to a cluster setup by using the CLI](#).
Ensure that you configure the necessary spotted configuration on the cluster nodes. For more information on the list of spotted configuration, see [List of spotted configuration](#) and [Supportability matrix for NetScaler cluster](#).
7. Make the topological changes to the cluster by connecting the cluster backplane, the cluster link aggregation channel, and so on.
8. Go to **Configuration > Diagnostics** and click **Batch configuration** to apply the modified backed-up configuration file. After applying the configuration file, to verify that the appropriate configuration is applied, see IPs and Interfaces tabs in the **Configuration > Network** menu.
9. Configure external traffic distribution mechanisms such as Equal-cost multi-path (ECMP) or cluster link aggregation.
10. As the NS2 instance from the cluster is now ready to handle the incoming traffic, switch traffic from NS1 node in HA to NS2 node in Cluster
 - a) Stop the traffic from the NS1 node in HA. To disable all the data interfaces, go to **Network > Interfaces**. Select the interfaces and then select **Disable** from the drop-down list.
 - b) Go to **Configuration > Cluster > Nodes**. Select the node, click **Edit**, and change its **State** from **PASSIVE** to **ACTIVE**.
 - c) Make sure that the node is now handling traffic and is working as expected.
11. To add the NS1 instance to the cluster, do the following steps:
 - a) Clear the full configuration as per the step3 for NS1.
 - b) Enable the data interfaces. To enable all the data interfaces, go to **Network > Interfaces**. Select the interfaces and then select **Enable** from the drop-down list.

- c) Add the NS1 node to the cluster. For more information, see [To add a node to the cluster by using the GUI](#).
12. Login to NS1 to perform the required topological and configuration changes
 - a) Ensure that you configure the necessary spotted configuration on the cluster nodes. For more information on the list of spotted configuration, see [List of spotted configuration](#) and [Supportability matrix for NetScaler cluster](#).
 - b) Go to **Configuration > System > Cluster** and click **Force cluster sync** to avoid any configuration inconsistencies.
13. Make an NS1 instance as ACTIVE from Cluster IP. Now both nodes are capable of taking traffic.

Transitioning between a L2 and L3 Cluster

May 2, 2023

Note

Supported from NetScaler 11 onwards.

An L2 cluster is one where all the nodes are from the same network and an L3 cluster is one that can include nodes from different networks. You can seamlessly transition from one type of cluster to the other without any downtime for the applications that are deployed on the NetScaler.

Transitioning a cluster from L2 to L3

You can transition to an L3 cluster when you want the cluster to include nodes from other networks.

On the cluster IP address, do the following:

1. Create a node group.

Example

```
1 > add cluster nodegroup NG0
```

This node group is used in the next step to group all the nodes from the existing L2 cluster.

2. Transition the L2 cluster to an L3 cluster.

Example

```
1 > set cluster instance 1 -inc ENABLED -nodegroup NG0
```


This command achieves the dual purpose of transitioning to the L3 cluster and also adding all the nodes of the L2 cluster to the node group.

3. Now, you can add more nodes to the cluster as explained in [Adding a Node to the Cluster](#).

Transitioning a cluster from L3 to L2

You can transition to an L2 cluster when you want to retain nodes that belong to a single network.

On the cluster IP address, do the following:

1. Remove the cluster nodes from the networks that you do not want to retain.

Example

```
1 > rm cluster node <nodeId>
```

2. Transition the L3 cluster to a L2 cluster.

Example

```
1 > set cluster instance 1 -inc DISABLED
```

The cluster now includes nodes only of a single network.

Setting up GSLB in a cluster

December 21, 2020

Note

Supported from NetScaler 10.5 Build 52.11 onwards.

To set up GSLB in a cluster you must bind the different GSLB entities to a node group. The node group must have a single member node.

Notes

- If you have configured the static proximity GSLB method, make sure that the static proximity database is present on all the cluster nodes. It happens by default if the database file is available at the default location. However, if the database file is maintained in a directory other than `/var/netscaler/locdb/`, you must manually sync the file to all the cluster nodes.
- The `show gslb domain` command is not supported in a cluster setup.

To set up GSLB in a cluster by using the CLI:

Log on to the cluster IP address and perform the following operations at the command prompt:

1. Configure the different GSLB entities. For information, see [GSLB Configuration Entities](#).

Note

When creating the GSLB site, make sure that you specify the cluster IP address and public cluster IP address. The public cluster IP address is needed only when the cluster is deployed behind a NAT device. While configuring a GSLB site, you must use the cluster IP address of the same site. These parameters are required to ensure the availability of the GSLB auto-sync functionality.

```
add gslb site <siteName> <siteType> <siteIPAddress> -publicIP <ip_addr> -clip <ip_addr> <publicCLIP>
```

2. Create a cluster node group.

```
add cluster nodegroup <name> <name>@ [-strict ( YES | NO )] [-sticky ( YES | NO )] [-state <state>] [-priority <positive_integer>]
```

Note

Enable the sticky option if you want to set up GSLB based for VPN users.

3. Bind a single cluster node to the node group.

```
bind cluster nodegroup <name> -node <nodeId>
```

4. Bind the local GSLB site to the node group.

```
bind cluster nodegroup <name> -gslbSite <string>
```

Note

Make sure that the IP address of the local GSLB site IP address is striped (available across all cluster nodes).

5. Bind the ADNS (or ADNS-TCP) service or the DNS (or DNS-TCP) load balancing virtual server to the node group.

To bind the ADNS service:

```
bind cluster nodegroup <name> -service <string>
```

To bind the DNS load balancing virtual server:

```
bind cluster nodegroup <name> -vServer <string>
```

6. Bind the GSLB virtual server to the node group.

```
bind cluster nodegroup <name> -vServer <string>
```

7. [Optional] To set up GSLB based on VPN users, bind the VPN virtual server to the GSLB node group.

```
bind cluster nodegroup <name> -vServer <string>
```

8. Verify the configurations.

```
show gslb runningConfig
```

To set up GSLB in a cluster by using the GUI:

Log on to the cluster IP address and perform the following operations in the Configuration tab:

1. Configure the GSLB entities.

Navigate to **Traffic Management > GSLB** to perform the required configurations.

2. Create a node group and perform other node group related configurations.

Navigate to **System > Cluster > Node Groups** to perform the required configurations.

For the detailed configurations to be performed, see the description provided in the preceding CLI procedure.

Support for GSLB parent-child topology in a cluster

Starting with NetScaler 12.1 build 49.xx, GSLB parent-child topology is supported in cluster.

For more information about the parent-child topology, see [Parent-child topology deployment using the MEP protocol](#).

To set up GSLB parent-child topology in a cluster by using the CLI

Parent site Perform the following configuration:

1. Create a cluster node group.

```
add cluster nodegroup <name>
```

Example:

```
add cluster nodegroup parentng
```

2. Bind a single cluster node to the node group.

```
bind cluster nodegroup <name> -node <nodeId>
```

Example:

```
bind cluster nodegroup parentng -node n2
```

3. Bind the local GSLB site to the node group.

```
bind cluster nodegroup <name> -gslbSite <string>
```

Example:

```
bind cluster nodegroup parentng -gslbSite site1
```

4. Bind the ADNS (or ADNS-TCP) service or the DNS (or DNS-TCP) load balancing virtual server to the node group.

```
bind cluster nodegroup <name> -service <string>
```

Example:

```
bind cluster nodegroup parentng - service ADNS
```

5. Bind the GSLB virtual server to the node group.

```
bind cluster nodegroup <name> -vServer <string>
```

Example:

```
bind cluster nodegroup parentng -vService gslbvs1
```

Child site Perform the following configuration:

1. Create a cluster node group.

```
add cluster nodegroup <name>
```

Example:

```
add cluster nodegroup childng
```

2. Bind a single cluster node to the node group.

```
bind cluster nodegroup <name> -node <nodeId>
```

Example:

```
bind cluster nodegroup childng -node -n3
```

3. Bind the local GSLB site to the node group.

```
bind cluster nodegroup <name> -gslbSite <string>
```

Example:

```
bind cluster nodegroup childng -gslbSite site1
```

Note

For parent and child sites to exchange aggregated statistics in metric-based load balancing methods, you must add local GSLB services on the child site. The metric-based load balancing methods are least connection, least bandwidth, and least packets.

To set up GSLB parent-child topology in a cluster by using the GUI

1. Configure the GSLB entities.

Navigate to **Traffic Management > GSLB** to perform the required configurations.

2. Create a node group.

Navigate to **System > Cluster > Node Groups** to perform the required configurations.

3. In the Node Group page, select the node group to which you want to bind a node, click **Edit**, and perform the following tasks. You can also perform these tasks when adding a node group.

- Bind a node to the node group.

In **Advance Settings**, click **Cluster Nodes** and perform the following tasks:

- In **Cluster Nodes** section, click **No Cluster Node**.
- In **Select Cluster Node**, click > and select the node that you want to bind to the node group. You can also add a cluster node.

- Bind the local GSLB site to the node group.

In Advance Settings, click GSLB Sites and perform the following tasks:

- In the **GSLB Sites** section, click No GSLB Site.
- In the **Select GSLB Site**, click > and select the GSLB site that you want to bind to the node group. You can also add a GSLB site.

- Bind the GSLB virtual server to the node group.

In **Advance Settings**, click **Virtual Servers** and perform the following task:

- In the **Virtual Servers** pane, click +.
- In **Choose Virtual Server**, select the server that you want to bind to the node group.

- Bind the ADNS (or ADNS-TCP) service or the DNS (or DNS-TCP) load balancing virtual server to the node group.

In **Advance Settings**, click **Services** and perform the following tasks:

- In **Services** section, click **No Service**.
- In **Select Service**, select the service that you want to bind to the node group. You can also add a service.

Note

For child sites, you only have to bind the cluster node and local GSLB site to the node group.

Using cache redirection in a cluster

May 2, 2023

Cache redirection in a cluster works in the same way as it does on a standalone NetScaler appliance. The only difference is that the configurations are done on the cluster IP address. For more information on cache redirection, see [Cache Redirection](#).

Points to remember when using cache redirection in transparent mode on a cluster:

- Before configuring cache redirection, make sure that you have connected all nodes to the external switch and that you have linksets configured. Otherwise, client requests are dropped.
- When MAC mode is enabled on a load balancing virtual server, make sure MBF mode is enabled on the cluster by using the `enable ns mode MBF` command. Otherwise, the requests are sent to origin server directly instead of being sent to the cache server.

Using L2 mode in a cluster setup

September 21, 2020

Note

Supported from NetScaler 10.5 and later releases.

To use L2 mode in a cluster setup, you must make sure of the following:

- Spotted IP addresses must be available on all the nodes as required.
- Linksets must be used to communicate with the external network.
- Asymmetric topologies or asymmetric cluster LA groups are not supported.
- Cluster LA group is recommended.
- Traffic is distributed between the cluster nodes only for deployments where services exist.

Using cluster LA channel with linksets

March 26, 2024

In an asymmetric cluster topology, some cluster nodes are not connected to the upstream network. In such a case, you must use linksets. To optimize the performance, you can bind the interfaces that are connected to the switch as a cluster LA channel and then bind the channel to a linkset.

Note:


We do not recommend using an asymmetric cluster topology.

To understand how a combination of cluster LA channel and linksets can be used, consider a three-node cluster for which the upstream switch has only two ports available. You can connect two of the cluster nodes to the switch and leave the other node unconnected.

Note

Similarly, you can also use a combination of ECMP and linksets in an asymmetric topology.

Figure 1. Linksets and cluster LA channel topology

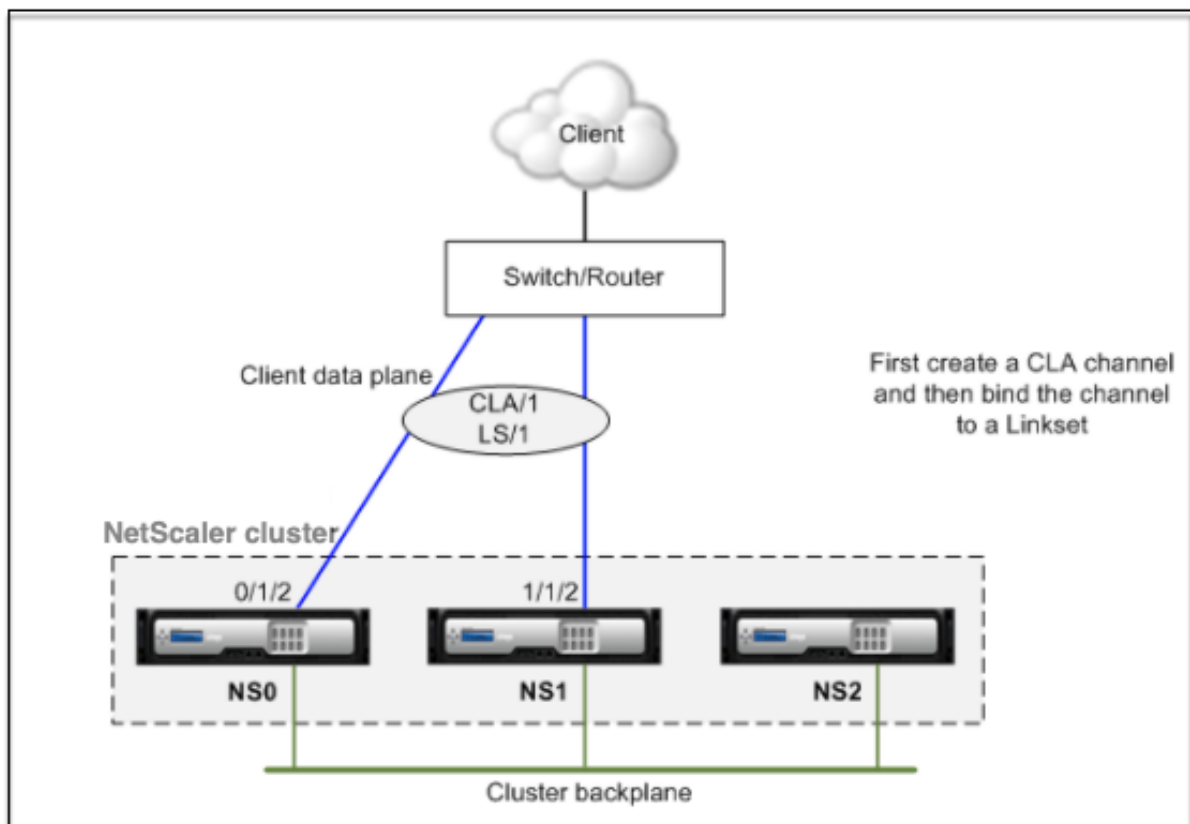

To configure cluster LA channel and linksets by using the CLI

1. Log on to the cluster IP address.
2. Bind the connected interfaces to a cluster LA channel.

```
1 add channel CLA/1 -ifnum 0/1/2 1/1/2
```


3. Bind the cluster LA channel to the linkset.

```
1 add linkset LS/1 -ifnum CLA/1
```

Backplane on LA channel

December 21, 2020

In this deployment, LA channels are used for the cluster backplane.

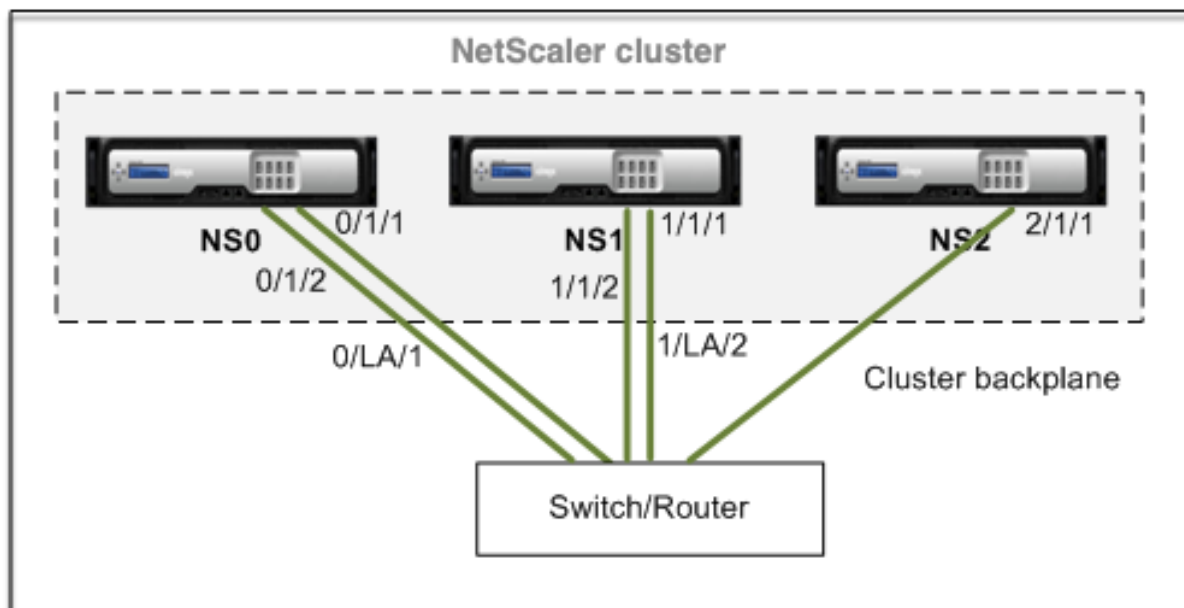

- NS0 - nodeId: 0, NSIP: 10.102.29.60
- NS1 - nodeId: 1, NSIP: 10.102.29.70
- NS2 - nodeId: 2, NSIP: 10.102.29.80

To deploy a cluster with the backplane interfaces as LA channels

1. Create a cluster of nodes NS0, NS1, and NS2.

- a) Log on to the first node that you want to add to the cluster and do the following:

```
1 > create cluster instance 1
2 > add cluster node 0 10.102.29.60 -state ACTIVE
3 > enable cluster instance 1
4 > add ns ip 10.102.29.61 255.255.255.255 -type CLIP
5 > save ns config
6 > reboot -warm
```

- b) Log on to the cluster IP address and do the following:

```
1 > add cluster node 1 10.102.29.70 -state ACTIVE
2 > add cluster node 2 10.102.29.80 -state ACTIVE
```

- c) Log on to the nodes 10.102.29.70 and 10.102.29.80 to join the nodes to the cluster.

```
1 > join cluster -clip 10.102.29.61 -password nsroot
2 > save ns config
3 > reboot -warm
```

As seen in the preceding commands, the interfaces 0/1/1, 1/1/1, and 2/1/1 are configured as the backplane interfaces of the three cluster nodes.

2. Log on to the cluster IP address and do the following:

- a) Create the LA channels for nodes NS0 and NS1.

```
1 > add channel 0/LA/1 -ifnum 0/1/1 0/1/2
2 > add channel 1/LA/2 -ifnum 1/1/1 1/1/2
```


- b) Configure the backplane for the cluster nodes.

```
1 > set cluster node 0 -backplane 0/LA/1
2 > set cluster node 1 -backplane 1/LA/2
3 > set cluster node 2 -backplane 2/1/1
```

Common interfaces for client and server and dedicated interfaces for backplane

May 2, 2023

It is a one-arm deployment of the NetScaler cluster. In this deployment, the client and server networks use the same interfaces to communicate with the cluster. The cluster backplane uses dedicated interfaces for inter-node communication.

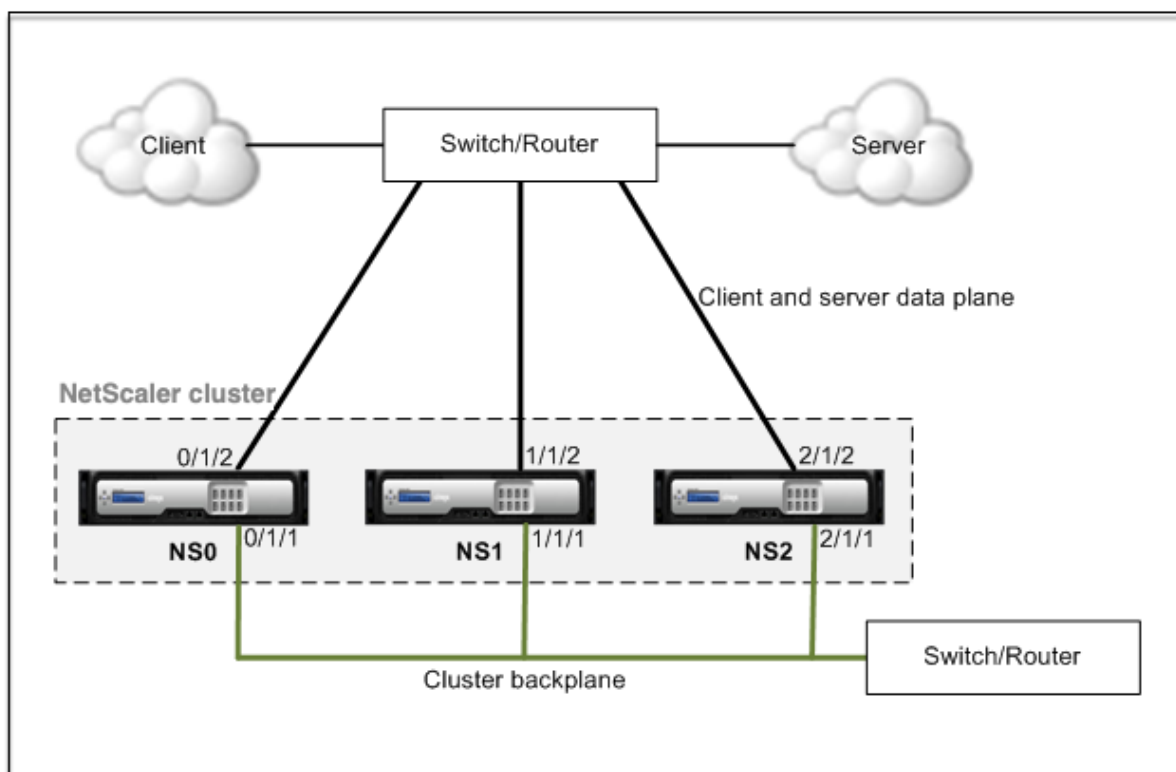

- NS0 - nodeId: 0, NSIP: 10.102.29.60
- NS1 - nodeId: 1, NSIP: 10.102.29.70
- NS2 - nodeId: 2, NSIP: 10.102.29.80

To deploy a cluster with a common interface for the client and server and a different interface for the cluster backplane

1. Create a cluster of nodes NS0, NS1, and NS2.
2. Log on to the first node that you want to add to the cluster and do the following:

```

1 > create cluster instance 1
2 > add cluster node 0 10.102.29.60 -state ACTIVE -backplane
    0/1/1
3 > enable cluster instance 1
4 > add ns ip 10.102.29.61 255.255.255.255 -type CLIP
5 > save ns config
6 > reboot -warm
    
```

3. Log on to the cluster IP address and do the following:

```

1 > add cluster node 1 10.102.29.70 -state ACTIVE -backplane
    1/1/1
2 > add cluster node 2 10.102.29.80 -state ACTIVE -backplane
    2/1/1
    
```

4. Log on to the nodes 10.102.29.70 and 10.102.29.80 to join the nodes to the cluster.

```
1 > join cluster -clip 10.102.29.61 -password nsroot
2 > save ns config
3 > reboot -warm
```

As seen in the preceding commands, the interfaces 0/1/1, 1/1/1, and 2/1/1 are configured as the backplane interfaces of the three cluster nodes.

1. On the cluster IP address, create VLANs for the backplane interfaces and for the client and server interfaces.

//For the backplane interfaces

```
1 > add vlan 10
2 > bind vlan 10 0/1/1 1/1/1 2/1/1
```

//For the interfaces that are connected to the client and server networks.

```
1 > add vlan 20
2 > bind vlan 20 0/1/2 1/1/2 2/1/2
```

2. On the switch, create VLANs for the interfaces corresponding to the backplane interfaces and the client and server interfaces. The following sample configurations are provided for the Cisco® Nexus 7000 C7010 Release 5.2(1) switch. Similar configurations must be performed on other switches.

//For the backplane interfaces. Repeat for each interface...

```
1 > interface Ethernet2/47
2   switchport access vlan 100
3   switchport mode access
4   end
```


//For the interfaces connected to the client and server networks. Repeat for each interface...

```
1 > interface Ethernet2/47
2   switchport access vlan 200
3   switchport mode access
4   end
```

Common switch for client, server, and backplane

May 2, 2023

In this deployment, the client, server, and backplane use dedicated interfaces on the same switch to communicate with the NetScaler cluster.

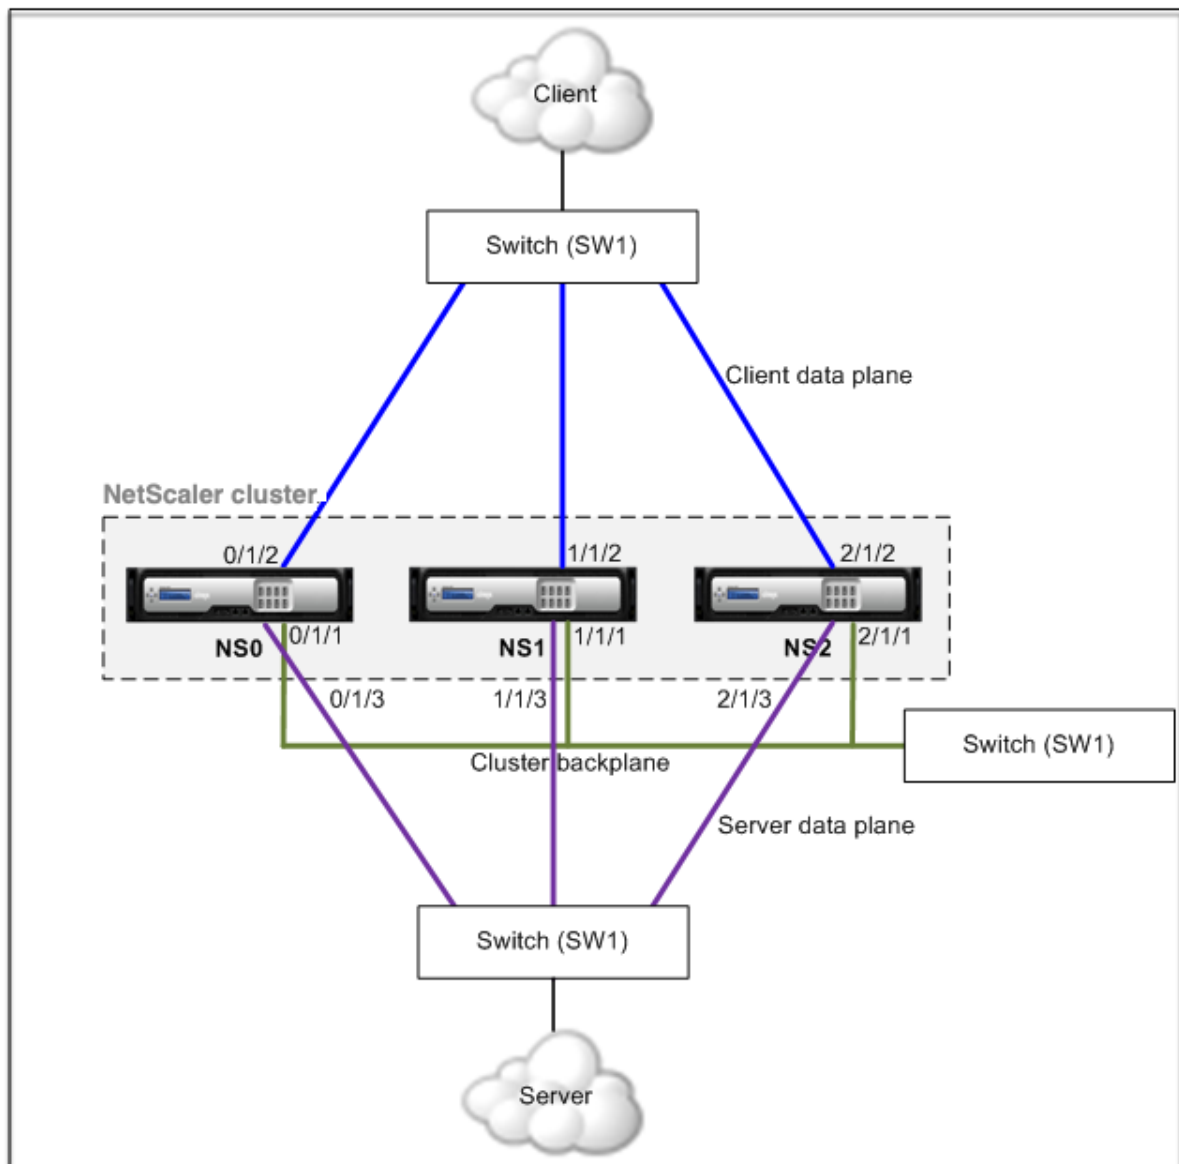

- NS0 - nodeId: 0, NSIP: 10.102.29.60
- NS1 - nodeId: 1, NSIP: 10.102.29.70
- NS2 - nodeId: 2, NSIP: 10.102.29.80

To deploy a cluster with a common switch for the client, server, and backplane

1. Create a cluster of nodes NS0, NS1, and NS2.
2. Log on to the first node that you want to add to the cluster and do the following:

```

1 > create cluster instance 1
2 > add cluster node 0 10.102.29.60 -state ACTIVE -backplane
    0/1/1
3 > enable cluster instance 1
    
```

```

4 > add ns ip 10.102.29.61 255.255.255.255 -type CLIP
5 > save ns config
6 > reboot -warm

```

3. Log on to the cluster IP address and do the following:

```

1 > add cluster node 1 10.102.29.70 -state ACTIVE -backplane
    1/1/1
2 > add cluster node 2 10.102.29.80 -state ACTIVE -backplane
    2/1/1

```

4. Log on to the nodes 10.102.29.70 and 10.102.29.80 to join the nodes to the cluster.

```

1 > join cluster -clip 10.102.29.61 -password nsroot
2 > save ns config
3 > reboot -warm

```

As seen in the preceding commands, the interfaces 0/1/1, 1/1/1, and 2/1/1 are configured as the backplane interfaces of the three cluster nodes.

1. On the cluster IP address, create VLANs for the backplane, client, and server interfaces.

//For the backplane interfaces

```

1 > add vlan 10
2 > bind vlan 10 0/1/1 1/1/1 2/1/1

```

//For the client-side interfaces

```

1 > add vlan 20
2 > bind vlan 20 0/1/2 1/1/2 2/1/2

```

//For the server-side interfaces

```

1 > add vlan 30
2 > bind vlan 30 0/1/3 1/1/3 2/1/3

```

2. On the switch, create VLANs for the interfaces corresponding to the backplane interfaces and the client and server interfaces. The following sample configurations are provided for the Cisco® Nexus 7000 C7010 Release 5.2(1) switch. Similar configurations must be performed on other switches.

//For the backplane interfaces. Repeat for each interface...

```

1 > interface Ethernet2/47
2   switchport access vlan 100
3   switchport mode access
4   end

```

//For the client interfaces. Repeat for each interface...

```
1 > interface Ethernet2/48
2   switchport access vlan 200
3   switchport mode access
4   end
```


//For the server interfaces. Repeat for each interface...

```
1 > interface Ethernet2/49
2   switchport access vlan 300
3   switchport mode access
4   end
```

Common switch for client and server and dedicated switch for backplane

May 2, 2023

In this deployment, the clients and servers use different interfaces on the same switch to communicate with the NetScaler cluster. The cluster backplane uses a dedicated switch for inter-node communication.

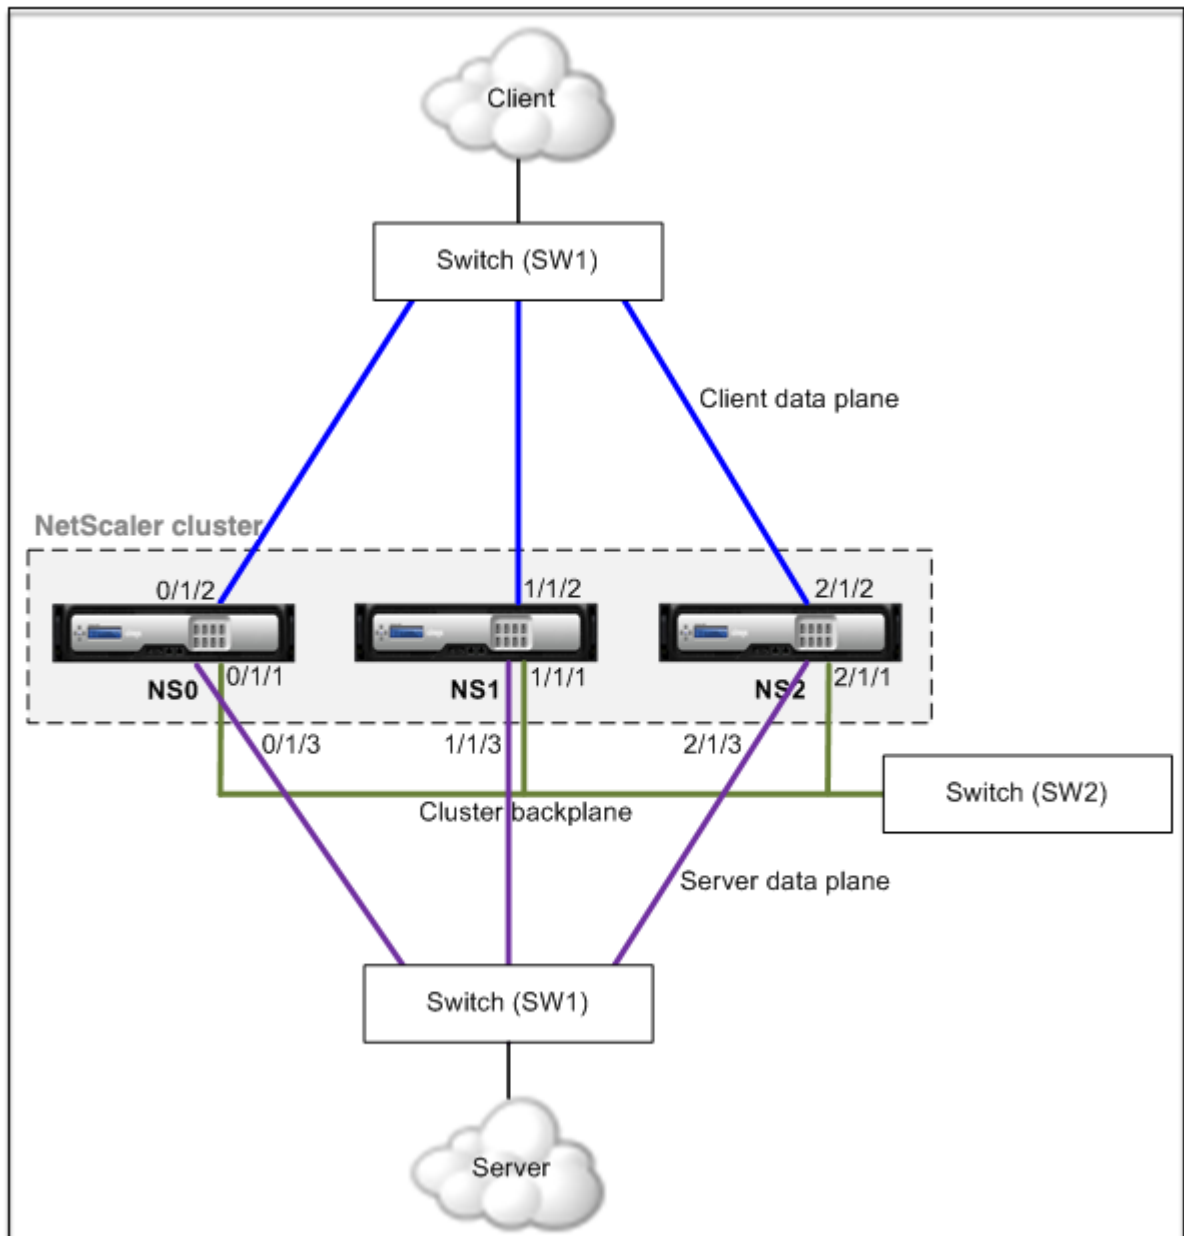

- NS0 - nodeId: 0, NSIP: 10.102.29.60
- NS1 - nodeId: 1, NSIP: 10.102.29.70
- NS2 - nodeId: 2, NSIP: 10.102.29.80

To deploy a cluster with the same switch for the clients and servers and a different switch for the cluster backplane

1. Create a cluster of nodes NS0, NS1, and NS2.
 - Log on to the first node that you want to add to the cluster and do the following:

```

1 > create cluster instance 1
2 > add cluster node 0 10.102.29.60 -state ACTIVE -backplane
    0/1/1
3 > enable cluster instance 1
4 > add ns ip 10.102.29.61 255.255.255.255 -type CLIP
5 > save ns config
6 > reboot -warm

```

- Log on to the cluster IP address and do the following:

```

1 > add cluster node 1 10.102.29.70 -state ACTIVE -backplane
    1/1/1
2 > add cluster node 2 10.102.29.80 -state ACTIVE -backplane
    2/1/1

```

- Log on to the nodes 10.102.29.70 and 10.102.29.80 to join the nodes to the cluster.

```

1 > join cluster -clip 10.102.29.61 -password nsroot
2 > save ns config
3 > reboot -warm

```

As seen in the preceding commands, the interfaces 0/1/1, 1/1/1, and 2/1/1 are configured as the backplane interfaces of the three cluster nodes.

2. On the cluster IP address, create VLANs for the backplane, client, and server interfaces.

//For the backplane interfaces

```

1 > add vlan 10
2 > bind vlan 10 0/1/1 1/1/1 2/1/1

```

//For the client-side interfaces

```

1 > add vlan 20
2 > bind vlan 20 0/1/2 1/1/2 2/1/2

```

//For the server-side interfaces

```

1 > add vlan 30
2 > bind vlan 30 0/1/3 1/1/3 2/1/3

```

3. On the switch, create VLANs for the interfaces corresponding to the backplane interfaces and the client and server interfaces. The following sample configurations are provided for the Cisco® Nexus 7000 C7010 Release 5.2(1) switch. Similar configurations must be performed on other switches.

//For the backplane interfaces. Repeat for each interface...

```

1 > interface Ethernet2/47
2 > switchport access vlan 100
3 > switchport mode access

```



```
4 > end
```

//For the client interfaces. Repeat for each interface...

```
1 > interface Ethernet2/48
2 > switchport access vlan 200
3 > switchport mode access
4 > end
```


//For the server interfaces. Repeat for each interface...

```
1 > interface Ethernet2/49
2 > switchport access vlan 300
3 > switchport mode access
4 > end
```

Different switch for every node

December 7, 2020

In this deployment, each cluster node is connected to a different switch and trunk links are configured between the switches.

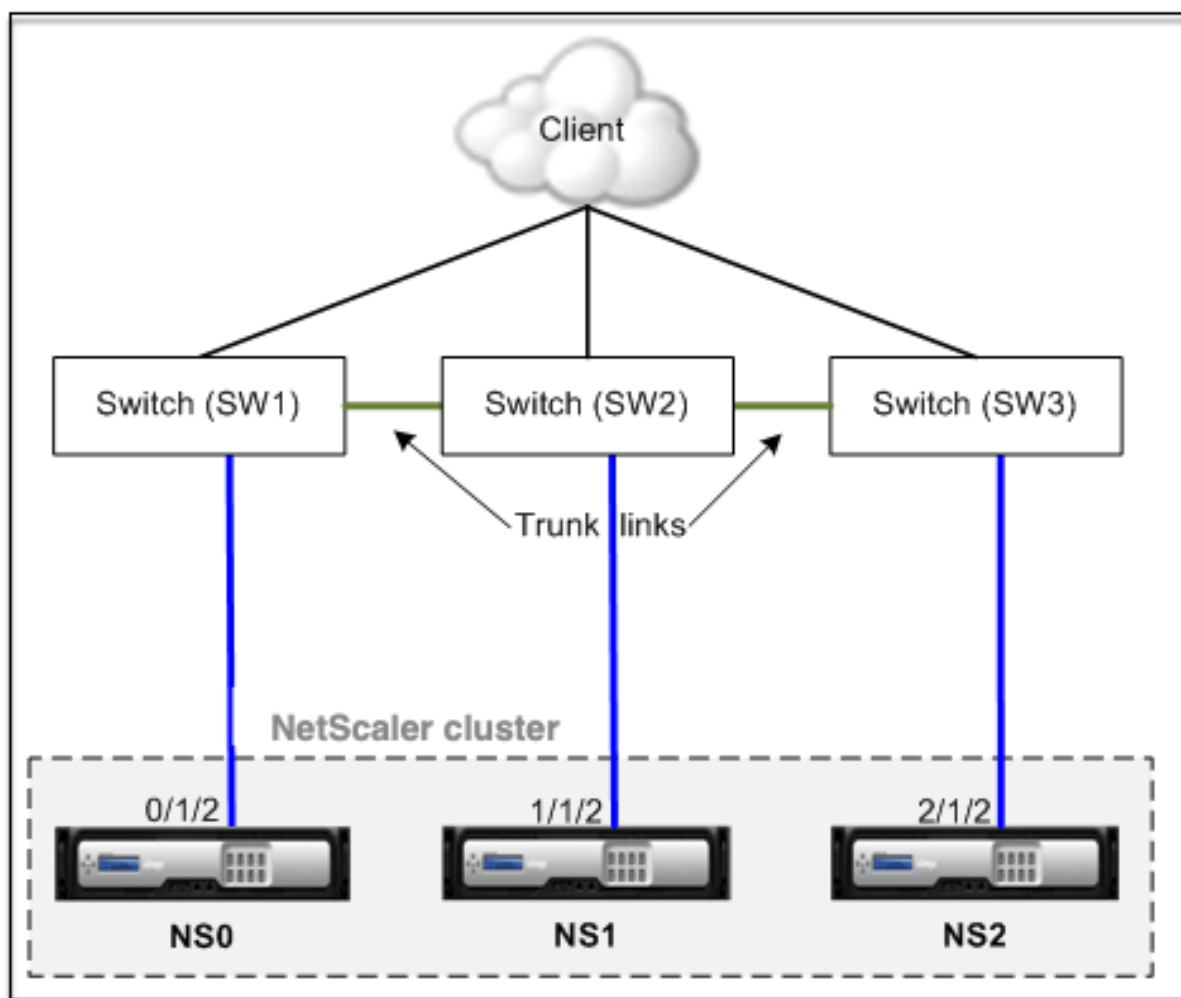

The cluster configurations are the same as the other deployments scenarios. Most of the client-side configurations is done on the client-side switches.

Sample cluster configurations

May 2, 2023

The following example can be used to configure a four-node cluster with ECMP, cluster LA, or Linksets.

1. Create the cluster.
 - Log on to the first node.
 - Add the cluster instance.

```
1 > add cluster instance 1
```

- Add the first node to the cluster.

```
1 > add cluster node 0 10.102.33.184 -backplane 0/1/1
```

- Enable the cluster instance.

```
1 > enable cluster instance 1
```

- Add the cluster IP address.

```
1 > add ns ip 10.102.33.185 255.255.255.255 -type CLIP
```

- Save the configurations.

```
1 > save ns config
```

- Warm reboot the appliance.

```
1 > reboot -warm
```

2. Add the other three nodes to the cluster.

- Log on to cluster IP address.
- Add the second node to the cluster.

```
1 > add cluster node 1 10.102.33.187 -backplane 1/1/1
```

- Add the third node to the cluster.

```
1 > add cluster node 2 10.102.33.188 -backplane 2/1/1
```

- Add the fourth node to the cluster.

```
1 > add cluster node 3 10.102.33.189 -backplane 3/1/1
```

3. Join the added nodes to the cluster. This step is not applicable for the first node.

- Log on to each newly added node.
- Join the node to the cluster.

```
1 > join cluster -clip 10.102.33.185 -password nsroot
```

- Save the configuration.

```
1 > save ns config
```

- Warm reboot the appliance.

```
1 > reboot -warm
```

4. Configure the NetScaler cluster through the cluster IP address.

// Enable load balancing feature

```
1 > enable ns feature lb
```

// Add a load balancing virtual server

```
1 > add lb vserver first_lbvserver http
2 ....
3 ....
```

5. Configure any one of the following (ECMP, cluster LA, or Linkset) traffic distribution mechanisms for the cluster.

ECMP

- Log on to the cluster IP address.
- Enable the OSPF routing protocol.

```
1 > enable ns feature ospf
```

- Add a VLAN.

```
1 > add vlan 97
```

- Bind the interfaces of the cluster nodes to the VLAN.

```
1 > bind vlan 97 -ifnum 0/1/4 1/1/4 2/1/4 3/1/4
```

- Add a spotted SNIP on each node and enable dynamic routing on it.

```
1 > add ns ip 1.1.1.10 255.255.255.0 -ownerNode 0 -
dynamicRouting ENABLED
2 > add ns ip 1.1.1.11 255.255.255.0 -ownerNode 1 -
dynamicRouting ENABLED
3 > add ns ip 1.1.1.12 255.255.255.0 -ownerNode 2 -
dynamicRouting ENABLED
4 > add ns ip 1.1.1.13 255.255.255.0 -ownerNode 3 -
dynamicRouting ENABLED
```

- Bind one of the SNIP addresses to the VLAN.

```
1 > bind vlan 97 -ipAddress 1.1.1.10 255.255.255.0
```

- Configure the routing protocol on ZebOS by using the VTYSH shell.

Static cluster LA

- Log on to the cluster IP address.
- Add a cluster LA channel.

```
1 > add channel CLA/1 -speed 1000
```

- Bind the interfaces to the cluster LA channel.

```
1 > bind channel CLA/1 0/1/5 1/1/5 2/1/5 3/1/5
```

- Perform an equivalent configuration on the switch.

Dynamic cluster LA

- * Log on to the cluster IP address.
- * Add the interfaces to the cluster LA channel.

```
1 > set interface 0/1/5 -lacpmode active -lacpkey 5 -
lagtype cluster
2 > set interface 1/1/5 -lacpmode active -lacpkey 5 -
lagtype cluster
3 > set interface 2/1/5 -lacpmode active -lacpkey 5 -
lagtype cluster
4 > set interface 3/1/5 -lacpmode active -lacpkey 5 -
lagtype cluster
```

- * Perform an equivalent configuration on the switch.

Linksets. Assume that the node with nodeId 3 is not connected to the switch. You must configure a linkset so that the unconnected node can use the other node interfaces to communicate with the switch.

- a) Log on to the cluster IP address.
- b) Add a linkset.

```
1 > add linkset LS/1
```

- c) Bind the connected interfaces to the linkset.

```
1 > bind linkset LS/1 -ifnum 0/1/6 1/1/6 2/1/6
```

6. Update the state of the cluster nodes to ACTIVE.

```
1 > set cluster node 0 -state ACTIVE
2 > set cluster node 1 -state ACTIVE
3 > set cluster node 2 -state ACTIVE
4 > set cluster node 3 -state ACTIVE
```

Using VRRP in a cluster setup

September 21, 2020

Virtual Router Redundancy Protocol (VRRP) is supported in a cluster setup for both IPv4 and IPv6. The two VRRP features supported in a cluster setup are Interface based VRRP and IP based VRRP.

IP based VRRP

In IP based VRRP, striped VIP addresses bound to the same VRID are configured on all nodes of a cluster setup. These VIP addresses are active on all the nodes

One of the cluster nodes acts as the VRID owner and sends out the VRRP advertisement to other nodes. If there is failure of the VRID owner node, another node in the cluster assumes the ownership of the VRID and starts sending VRRP advertisements. You can also assign a specific cluster node as the owner of the VRID.

Note

Citrix recommends you to use IP based method for VRRP deployment in cluster.

Configuring IP based VRRP for IPv4

Perform the following tasks on a cluster setup for configuring IP based VRRP for IPv4:

- **Add a VRID.** A VRID is an integer used by the Cluster setup to form a virtual MAC address. The generic VMAC address is in the form of 00:00:5e:00:02:<VRID>.
- **(Optional) Assign a node as the owner of the virtual MAC address.** You can set the owner node parameter (while adding or modifying VRID6) to the ID of the cluster node to assign it as the owner of the virtual MAC address. If the assigned owner node fails, one of the UP cluster nodes is dynamically elected as the owner of the virtual MAC address. You can set the owner node using the `set vrid <id> -ownerNode <positive_integer>` command.
- **Bind the VRID to the VIP address of the nodes.** Bind the created VRID to the striped VIP address.

To add a VRID by using the CLI

At the command prompt, type:

```
1 - add vrid <ID> [-ownerNode <positive_integer>]
2 - show vrid <ID>
```

To bind the VRID to VIP address by using the CLI

At the command prompt, type:

- `set ns ip <IPv4Address> -vrid <ID>`
- `show vrid <ID>`

To add a VRID by using the GUI

1. Navigate to **System > Network > VMAC** and, on the **VMAC** tab, click **Add**.
2. On the Create **VMAC** page, specify a value in the **Virtual Router ID** field and then click **Create**.

To bind the VRID to a VIP address by using the GUI

1. Navigate to **System > Network > IPs**, on the **IPV4s** tab, select a VIP address and click **Edit**.
2. Set the **Virtual Router ID** parameter while editing the VIP configuration.

```
1 > add vrid 90
2 Done
3 > set ns ip 192.0.2.90 -vrid 90
4 Done
```

Configuring IP based VRRP for IPv6

Perform the following tasks on a cluster setup for configuring IP based VRRP for IPv6:

- **Add a VRID6.** A VRID6 is an integer used by the Cluster setup to form a virtual MAC6 address. The generic VMAC6 address is in the form of 00:00:5e:00:02:<VRID6>.
- **(Optional) Assign a node as the owner of the virtual MAC6 address.** You can set the owner node parameter (while adding or modifying VRID6) to the ID of the cluster node to assign it as the owner of the virtual MAC6 address. If the assigned owner node fails, one of the UP cluster nodes is dynamically elected as the owner of the virtual MAC6 address.
- **Bind the VRID6 to the VIP6 address of the nodes.** Bind the created VRID6 to the striped VIP6 address.

To add a VRID6 by using the CLI

At the command prompt, type:

- `add vrid6 <ID> [-ownerNode <positive_integer>]`
- `show vrid6 <ID>`

To bind the VRID6 to VIP6 address by using the CLI

At the command prompt, type:

- `set ns ip6 <IPv6Address> -vrid6 <ID>`
- `show vrid6 <ID>`

To add a VRID6 by using the GUI

1. Navigate to **System > Network > VMAC** and, on the **VMAC6** tab, click **Add**.
2. On the **Create virtual MAC6** page, specify a value in the **Virtual Router ID** field and then click **Create**.

To bind the VRID6 to a VIP6 address by using the GUI

1. Navigate to **System > Network > IPs**, on the **IPV6s** tab, select a VIP address and click **Edit**.
2. Set the **Virtual Router ID** parameter while editing the VIP6 configuration.

```
1 > add vrid6 90
2 Done
3 > set ns ip6 2001:db8::5001 - vrid6 90
4 Done
```

Interface based VRRP

In the interface based VRRP feature, the same virtual MAC address is configured on both the nodes of the cluster. This virtual MAC address is used in GARP advertisements and ARP responses for the IP addresses configured on a node. This feature is useful in an active-spare two-node cluster setup that has external devices/routers that do not accept GARP advertisements.

Note

The interface based VRRP feature is applicable only to a two-node cluster with one node in active state and the other node serving as a spare.

With the same virtual MAC address on both cluster nodes, when the active node goes down and the spare node takes over as active, the MAC address for the IP addresses on the new active node remain unchanged and the ARP tables on the external devices/routers do not need to be updated.

Configuring interface based VRRP for IPv4

Perform the following tasks on a cluster setup to configure interface based VRRP for IPv4:

- **Add a VRID.** A VRID is an integer used by the Cluster setup to form a virtual MAC address.
- **Bind the VRID to node interfaces.** Bind the interfaces to the created VRID. The bound interfaces (in the current active node) use the virtual MAC address in GARP advertisements and ARP responses for its IPv4 addresses. You must associate the VRID to the interfaces of both nodes of the active-spare cluster setup. This is because unlike in a high availability setup, interface IDs differ in a cluster setup.

To add a VRID by using the CLI

At the command prompt, type:

```
1 - add vrid <ID>
2 - show vrid <ID>
```

To bind the VRID to an interface by using the CLI

At the command prompt, type:

```
1 - bind vrid <ID> -ifnum <interface_name>
2 - show vrid <ID>
```

To add a VRID and bind it to interfaces by using the GUI

1. Navigate to **System > Network > VMAC** and, on the **VMAC** tab, click **Add**.
2. On the **Create virtual MAC** page, specify a value in the **Virtual Router ID*** field, bind interfaces in the **Associate Interfaces** section, and then click **Create**.

```
1 > add vrid 300
2 Done
3 > bind vrid 300 -ifnum 1/1/2 2/1/3
4 Done
```

Configuring interface based VRRP for IPv6

Perform the following tasks on a cluster setup to configure interface based VRRP for IPv6:

- **Add a VRID6.** A VRID6 is an integer used by the Cluster setup to form a virtual MAC6 address. The generic VMAC6 address is in the form of 00:00:5e:00:01:<VRID6>.

- **Bind the VRID6 to node interfaces.** Bind the interfaces to the created VRID6. The bound interfaces (in the current active node) use the virtual MAC6 address in GARP advertisements and ARP responses for its IPv6 addresses. You must associate the VRID6 to the interfaces of both nodes of the active-spare cluster setup. This is because unlike in a high availability setup, interface IDs differ in a cluster setup.

To add a VRID6 by using the CLI

At the command prompt, type:

```
1 - add vrid6 <ID>
2 - show vrid6 <ID>
```

To bind the VRID6 to an interface by using the CLI

At the command prompt, type:

- `bind vrid6 <ID> -ifnum <interface_name>`
- `show vrid6 <ID>`

To add a VRID6 and bind it to interfaces by using the GUI

1. Navigate **System > Network > VMAC** and, on the **VMAC6** tab, click **Add**.
2. On the **Create virtual MAC6** page, specify a value in the **Virtual Router ID** field, bind interfaces in the **Associate Interfaces** section, and then click **Create**.

```
1 > add vrid6 100
2 Done
3 > bind vrid6 100 -ifnum 0/1/1 1/1/2 2/1/3
4 Done
```

Monitoring services in a cluster using path monitoring

May 2, 2023

In a cluster setup, ownership for monitoring services is distributed among the nodes. Therefore, different nodes monitor different services. The node that monitors a service is called the service owner. Only the service owner probes the server to monitor the status of the services assigned to it. It further

communicates the status of the services to all other nodes within the cluster. The drawback with distributed monitoring is that the network connectivity and link state between all nodes and the server is not determined. To overcome this drawback, you can use path monitoring.


Note

You cannot select a node to monitor a service. The selection of nodes to monitor a service is done through an internal mechanism. You can see the owner node to monitor services by using the `show service <service name>` and `show serviceGroup <service group name>` command.

Path monitoring checks the network connectivity and link state between a node and the service provided by the server. A node sends ICMP pings to verify whether the server is reachable or not.

How path monitoring works

Consider an example of a NetScaler cluster consisting of three nodes N1, N2, and N3. N2 is the service owner that monitors the state of HTTP services (S1). It advertises the service state to other nodes in the cluster. Path monitoring is enabled on all nodes in the cluster, for all the services. Each node sends only an ICMP ping to the server. The service owner sends both the HTTP service request and an ICMP ping. Each node reports its path monitoring state to the service owner.

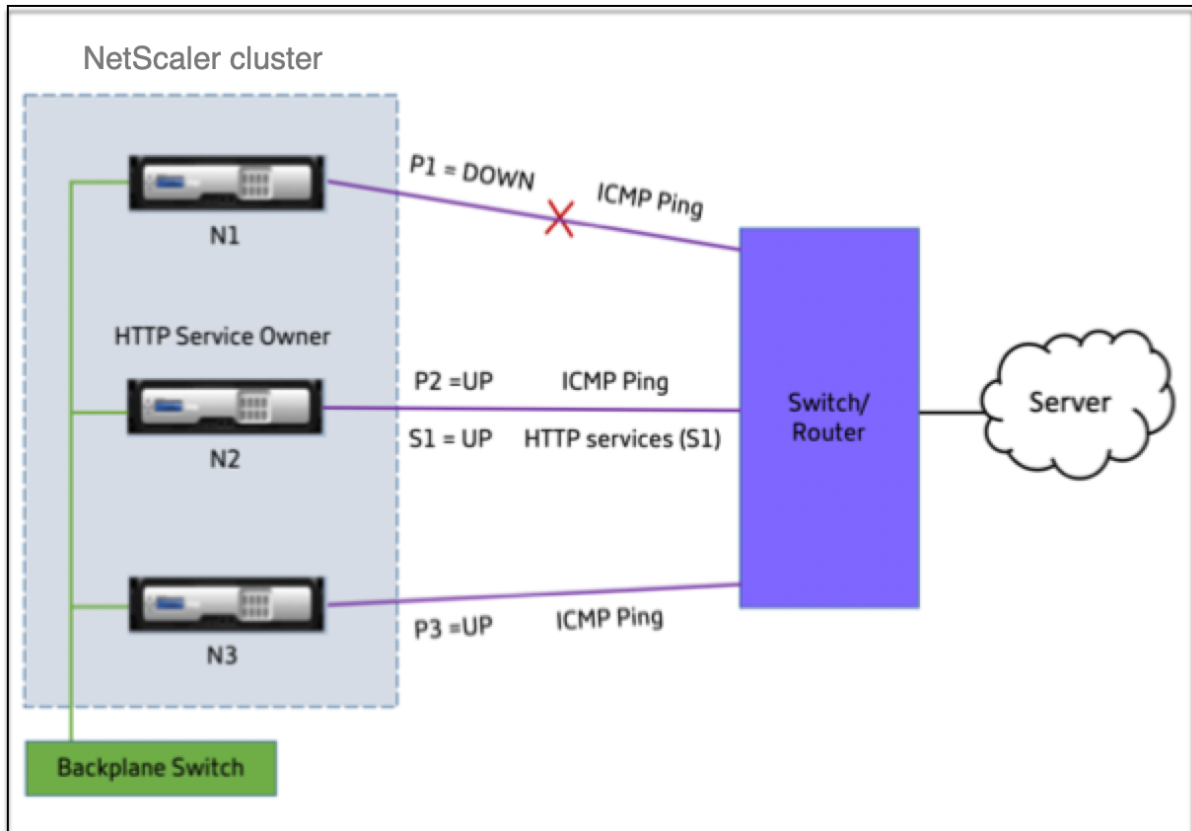

The following two parameters determine the service state of a node:

- S = service state advertised by the service owner
- P = path monitoring state of each node

Whether a node can reach a server or not, determines the path monitoring state for that node.

The following table shows the service state set based on the path monitoring state, when the pathMonitorIndv parameter is enabled or disabled.

Parameter	Path monitoring state	Service state
pathMonitorIndv = NO; Is the default configuration.	P1 = DOWN	S1 = DOWN
	P2 = UP	S1 = DOWN
	P3 = UP	S1 = DOWN
pathMonitorIndv = YES	P1 = DOWN	S1 = DOWN
	P2 = UP	S1 = UP
	P3 = UP	S1 = UP

In this example, the service owner decides the service state for all the nodes based on the node whose path monitoring state is set to DOWN. If the path monitoring state for any of the nodes is DOWN, then the service owner sets the service state for all the nodes as DOWN. The service state for all the nodes is set to UP only if the path monitoring state for each of the node is UP.

You can use path monitoring for individual nodes by enabling the pathMonitorIndv parameter. This parameter enables the service owner to set the service state for each node based on the path monitoring state of that respective node.

Note

If the pathMonitorIndv parameter is set, some features like persistence might break.

Configuring path monitoring

Path monitoring is applicable for all the services and service groups. Path monitoring parameter is disabled by default.

To enable path monitoring for services/service groups by using the CLI

At the command prompt, type:

```
1 add service <service name> <IP address> <service type> <port> [-  
  pathMonitor <YES | NO>] [-pathMonitorIndv <YES | NO>]  
2  
3 add servicegroup <servicegroup name> <service type> [-pathMonitor <YES  
  | NO>] [-pathMonitorIndv <YES | NO>]
```

Example:

```
1 add service s1 1.1.1.1 HTTP 80 -pathMonitor YES  
2 add servicegroup sg_1 HTTP -pathMonitor YES  
3  
4 add service s1 1.1.1.1 HTTP 80 -pathMonitor YES -pathMonitorIndv YES  
5 add servicegroup sg_1 HTTP -pathMonitor YES -pathMonitorIndv YES
```

You can also set the path monitoring parameter from the set command, as follows:

```
1 set service <service name> [-pathMonitor <YES | NO>] [-pathMonitorIndv  
  <YES | NO>]  
2 set servicegroup <servicegroup name> [-pathMonitor <YES | NO>] [-  
  pathMonitorIndv <YES | NO>]
```

Example:

```
1 set service s1 -pathMonitor YES  
2 set servicegroup sg_1 -pathMonitor YES  
3  
4  
5 set service s1 -pathMonitorIndv YES  
6 set servicegroup sg_1 -pathMonitorIndv NO
```

To enable path monitoring for services/service groups by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.

For service groups, navigate to **Traffic Management > Load Balancing > Service Groups**.

2. In the **Services/Service Groups** pane, select a service/service group from the list, and then double-click to open it.
3. On the **Service Settings** tab, click **Edit**.
4. Select **Path Monitoring**.
5. Select **Individual Path Monitoring**, if you want to apply it, and then click **OK**.

Note

You can enable Individual Path Monitoring only if you enable Path Monitoring.

Backup and restore of cluster setup

May 2, 2023

You can back up the current state of a NetScaler cluster node. Later, you can use the backed-up files to restore the node to the same cluster state. As a precautionary measure, you must use this feature before performing an upgrade on the cluster nodes.

Back up a cluster Setup

You can take a basic or full backup depending on the following:

- Type of data to be backed up.
- Frequency at which you create a backup.
- **Basic back up.** Backs up only configuration files. You might want to perform this type of backup frequently, because the files it backs up change constantly. The files that are backed up are listed in the table.

Directory

Sub-Directory or Files

/nsconfig/

- ns.conf
- ZebOS.conf
- rc.netscaler
- snmpd.conf
- nsbefore.sh
- nsafter.sh
- inetd.conf
- ntp.conf
- syslog.conf
- newsyslog.conf
- crontab
- host.conf
- hosts
- ttys
- sshd_config
- httpd.conf
- monitrc

- rc.conf
- ssh_config
- local time
- issue
- issue.net

/var/

- download/*
- log/wicmd.log
- wi/tomcat/webapps/*
- wi/tomcat/logs/*
- wi/tomcat/conf/catalina/localhost/*
- nslw.bin/etc/krb.conf
- nslw.bin/etc/krb.keytab
- netscaler/locdb/*
- lib/likewise/db/*
- vpn/bookmark/*
- netscaler/crl
- nstemplates/*
- learnt_data/*

/netscaler/

- custom.html
- vsr.html
- **Full back up.** Apart from the files that are backed up by a basic backup, a full backup backs up some less frequently updated files. The files that are backed up when using the full backup option are listed in the table.

Directory

Sub-Directory or Files

/nsconfig/

- ssl/*
- license/*
- fips/*

/var/

- netscaler/ssl/*
- wi/java_home/jre/lib/security/cacerts/*

- `wi/java_home/lib/security/cacerts/*`

Important

The backup and restore do not work if CLAG is configured on an SDX cluster setup.

The backup is stored as a compressed TAR file in the `/var/ns_sys_backup/` directory. To avoid issues due to non-availability of disk space, you can store a maximum of 50 backup files in this directory. You can use the `rm system backup` command to delete existing backup files so that you can create more backups.

When you perform the back-up operation on a CLIP of a cluster setup, back up files are created on each of the cluster nodes.

How to back up a cluster setup

To back up the cluster setup on CLIP by using the NetScaler CLI.

At the command prompt, do the following:

- Save the configuration.

```
save ns config
```

- Create the backup file (basic or full).

```
create system backup [<filename>][-level (basic | full)][-comment  
<string>]
```

Example

```
create system backup cluster-backup-1 -level basic
```

The preceding command creates a back-up TAR file on each of the cluster node with the specified file name. For example, the `CLUSTER-backup-1.tgz` file is created on each of the cluster node.

Note

If the file name is not specified, back up TAR files are created on each of the cluster nodes with the following naming convention:

- `backup_<level>_<nsip_address of the cluster node 0>_<date-timestamp>.tgz`
- `backup_<level>_<nsip_address of the cluster node 1>_<date-timestamp>.tgz`

For example, on a three node cluster setup,

- `backup_<level>_<nsip_address of the cluster node 0>_<date-timestamp>.tgz` is created on node0
- `backup_<level>_<nsip_address of the cluster node 1>_<date-timestamp>.tgz` is created on node1
- `backup_<level>_<nsip_address of the cluster node 2>_<date-timestamp>.tgz` is created on node2

- Verify the created backup files on CLIP.

```
show system backup
```

Restore a cluster setup

When a cluster node becomes faulty, you can replace this node with a new node. You can set the new node for a cluster, using a backup file of the faulty node.

For example, in a three-node cluster setup, if node1 becomes faulty, you can replace this faulty node with a new node as node1. Using the restore operation, you can restore one of the faulty node's backup files on the new node.

Note

The restore operation does not succeed if the backup file is renamed or if the contents of the file are modified.

How to restore a cluster node

To restore a cluster node by using the CLI At the command prompt, do the following:

- Obtain a list of the backup files available on CLIP.

```
show system backup
```

- Copy the backup tar file to the `/var/ns_sys_backup` directory of the cluster node, which is to be restored.
- Add the backup tar file to the cluster node memory by running the following command on the cluster node.

```
add system backup <filename>
```

Example

```
add system backup CLUSTER-BACKUP-1.tgz
```

Note

The command must be run on the cluster node to be restored.

- Restore the cluster node by specifying the backup file.

```
restore system backup <filename>
```

Example

```
restore system backup CLUSTER-BACKUP-1.tgz
```

Note

The command must be run on the cluster node to be restored.

- Reboot the cluster node.

```
reboot
```

Note

The command must be run on the cluster node to be restored.

Upgrading or downgrading the NetScaler cluster

August 29, 2024

All the nodes of a NetScaler cluster must be running the same software version. Therefore, to upgrade or downgrade the cluster, you must upgrade or downgrade each NetScaler appliance of the cluster, one node at a time.

A node that is being upgraded or downgraded is not removed from the cluster. The node serves traffic uninterrupted, except for the downtime when the node reboots after it's upgraded or downgraded.

When you upgrade or downgrade the first cluster node, configuration propagation is disabled automatically when there is a cluster version mismatch among the cluster nodes. Configuration propagation is enabled only after you upgrade or downgrade all the cluster nodes. You cannot perform any configuration through the cluster IP address when configuration propagation is disabled.

The following table explains when the configuration propagation is disabled during the upgrade or downgrade of the first cluster node.

Upgrade/Downgrade	From version	To version	Description
Upgrade	13.1 Build 21.50 or earlier	14.1 Build 4.42 or later	Configuration propagation is disabled on the cluster after the cluster node reboots and comes up. Note: You must not perform any configurations through the cluster IP address while the node reboots.
Upgrade	13.1 Build 24.38 or later	14.1 Build 4.42 or later	Configuration propagation is disabled on the cluster just before the node reboots.
Downgrade	14.1 Build 4.42 or later	13.1 Build 21.50 or earlier	Configuration propagation is disabled on the cluster after the cluster node reboots and comes up. Note: You must not perform any configurations through the cluster IP address while the node reboots.
Downgrade	14.1 Build 4.42 or later	13.1 Build 24.38 or later	Configuration propagation is disabled on the cluster just before the node reboots.

You can also verify the status of command propagation using the following command:

```
1 show cluster instance
```

Notes:

- In a cluster setup with a maximum connection (maxConn) global parameter set to a non-zero value, CLIP connections might fail if any of the following conditions is met:
 - Upgrading the setup from NetScaler 13.0 76.x build to NetScaler 13.0 79.x build.
 - Restarting the CCO node in a cluster setup running NetScaler 13.0 76.x build.

Workarounds:

- Before upgrading a cluster setup from NetScaler 13.0 76.x build to NetScaler 13.0 79.x build, the maximum connection (maxConn) global parameter must be set to zero. After upgrading the setup, you can set the maxConn parameter to a required value and then save the configuration.
 - NetScaler 13.0 76.x build is not suitable for cluster setups. Citrix recommends not to use the NetScaler 13.0 76.x build for a cluster setup.
- In a cluster setup, a NetScaler appliance might crash, when:
 - upgrading the setup from NetScaler 13.0 47.x or 13.0 52.x build to a later build, or
 - upgrading the setup to NetScaler 13.0 47.x or 13.0 52.x build

Workaround: During the upgrade process, perform the following steps:

- Disable all cluster nodes and then upgrade each cluster node.
- Enable all cluster nodes after all the nodes are upgraded.

Points to note before upgrading or downgrading the cluster

- **IMPORTANT:**

It's important that both the upgrade changes and your customizations are applied to an upgraded NetScaler appliance. So, if you have customized configuration files in the `/etc` directory, see [Upgrade considerations for customized configuration files](#) before you proceed with the upgrade.

- You can't add cluster nodes while upgrading or downgrading the cluster software version.
- You can perform node-level configurations through the NSIP address of individual nodes. Make sure to perform the same configurations on all the nodes to maintain them in sync.
- You can't run the `start nstrace` command from the cluster IP address when the cluster is being upgraded. However, you can get the trace of individual nodes by performing this operation on individual cluster nodes using their NSIP address.
- NetScaler 13.0 76.x build isn't suitable for cluster setups. Citrix recommends not to use the NetScaler 13.0 76.x build for a cluster setup.

- NetScaler 13.0 47.x and 13.0 52.x builds aren't suitable for a cluster setup. It is because the inter-node communications aren't compatible in these builds.
- When a cluster is being upgraded, it's possible that the upgraded nodes have some additional features activated that are unavailable on the nodes that aren't yet upgraded. It results in a license mismatch warning while the cluster is being upgraded. This warning is automatically resolved when all the cluster nodes are upgraded.
- When you downgrade the cluster nodes configured with secure heartbeats to release 14.1 Build 8.50 or earlier, you must disable the secure heartbeats and then downgrade the cluster nodes.

Important

- Citrix recommends that you wait for the previous node to become active before upgrading or downgrading the next node.
- Citrix recommends that the cluster configuration node must be upgraded/downgraded last to avoid multiple disconnects of cluster IP sessions.

To upgrade or downgrade the software of the cluster nodes

1. Make sure that the cluster is stable and the configurations are synchronized on all the nodes.
2. Access each node through its NSIP address and perform the following:
 - Upgrade or downgrade the cluster node. For detailed information about upgrading and downgrading the software of an appliance, see [Upgrade and downgrade a NetScaler appliance](#).
 - Save the configurations.
 - Reboot the appliance.
3. Repeat step 2 for each of the other cluster nodes.

Operations supported on individual cluster nodes

May 2, 2023

As a rule, NetScaler appliances that are a part of a cluster cannot be individually configured from their NSIP address. However, there are some operations that are an exception to this rule. These operations, when run from the NSIP address, are not propagated to other cluster nodes.

The operations are:

cluster instance (set rm enable disable)

-
-

cluster node (set rm)

-
-

ns trace (start show stop)

-
-

interface (set enable disable)

-
-

route (add rm set unset)

-
-

ARP (add rm send -all)

-
- force cluster sync
- sync cluster files
- disable NTP sync
- save ns config
- reboot
- shutdown

For example, when you run the command `disable interface 1/1/1` from the NSIP address of a cluster node, the interface is disabled only on that node. Since the command is not propagated, the interface 1/1/1 remains enabled on all the other cluster nodes.

Support for heterogeneous cluster

October 22, 2024

NetScaler supports a heterogeneous cluster in a cluster deployment. A heterogeneous cluster spans nodes of different NetScaler hardware and you can have a combination of different platforms in the same cluster.

Important:

The formation or supportability of a heterogeneous cluster is possible and limited only to MPX hardware platforms.

The supportability and formation of the heterogeneous cluster depend on certain NetScaler models. The following table lists the platforms that are supported in the formation of a heterogeneous cluster, with an equal number of packet engines.

Number of Packet Engines	MPX Hardware Platforms	Supported MPX Hardware Platforms to form Heterogeneous Cluster
5	MPX 11500	MPX 14020
7	MPX 11515	MPX 14040
9	MPX 11530	MPX 14060

For more information on how to form a heterogeneous cluster deployment of NetScaler MPX appliances with the different number of packet engines across different SSL chipsets, see the **Heterogeneous cluster deployments** section in [SSL offloading configuration](#).

Note:

Before release 13.0 build 47.x, if you run the `join cluster` command from the node that has an unequal number of packet engines, the following error message appears: “Mismatch in the number of active PPEs between CCO and local node”.

Points to note

1. The extra management CPU setting must be the same on all the cluster nodes.
2. The newly added node must have the same capacity on the data planes and backplane as that of existing cluster nodes.
3. If there are mixed platform devices supporting different ciphers, the cluster agrees upon a common cipher list.

FAQs

October 10, 2023

A list of the FAQ about clustering.

How many NetScaler appliances can be included in a single NetScaler cluster?

A NetScaler cluster can include one appliance or as many as 32 NetScaler nCore hardware or virtual appliances. Each of these nodes must satisfy the criteria specified in [Prerequisites for Cluster Nodes](#).

Can a NetScaler appliance be a part of multiple clusters?

No. A NetScaler appliance can belong to one cluster only.

What is a cluster IP address? What is its subnet mask?

The cluster IP address is the management address of a NetScaler cluster. All cluster configurations must be performed by accessing the cluster through this address. The subnet mask of the cluster IP address is fixed at 255.255.255.255.

How can I make a specific cluster node as the cluster configuration coordinator?

To manually set a specific node as the cluster configuration coordinator, you must set the priority of that node to the lowest numeric value (highest priority). To understand, let us consider a cluster with three nodes that have the following priorities:

n1 - 29, n2 - 30, n3 - 31

Here, n1 is the configuration coordinator. If you want to make n2 the configuration coordinator, you must set its priority to a value that is lower than n1, for example, 28. On saving the configuration, n2 becomes the configuration coordinator.

Note

n2 with its original priority value of 30 becomes the configuration coordinator when n1 goes down. The node with the next lowest priority value is selected in case the configuration coordinator goes down.

Why are the network interfaces of a cluster represented in 3-tuple (n/u/c) notation instead of the regular 2-tuple (u/c) notation?

When a NetScaler appliance is part of a cluster, you must be able to identify the node to which the interface belongs. Therefore, the network interface naming convention for cluster nodes is modified from u/c to n/u/c, where n denotes the node Id.

How can I set the host name for a cluster node?

The host name of a cluster node must be specified by running the **set ns hostname** command through the cluster IP address. For example, to set the host name of the cluster node with ID 2, the command is:

```
set ns hostname hostName1 -ownerNode 2
```

Can I automatically detect NetScaler appliances so that I can add them to a cluster?

Yes. The configuration utility allows you to discover appliances that are present in the same subnet as the NSIP address of the configuration coordinator. For more information, see [Discovering NetScaler Appliances](#).

Is the traffic serving capability of a cluster affected if a node is removed or disabled or reboot or shutdown or made inactive?

Yes. When any of these operations are performed on an active node of the cluster, the cluster has one less node to serve traffic. Also, existing connections on this node are terminated.

I have multiple standalone appliances, each of which has different configurations. Can I add them to a single cluster?

Yes. You can add appliances that have different configurations to a single cluster. However, when the appliance is added to the cluster, the existing configurations are cleared. To use the configurations that are available on each of the individual appliances, you must:

1. Create a single *.conf file for all the configurations.
2. Edit the configuration file to remove features that are not supported in a cluster environment.
3. Update the naming convention of interfaces from 2-tuple (u/c) format to 3-tuple (n/u/c) format.
4. Apply the configurations to the configuration coordinator node of the cluster by using the batch command.

Can I migrate the configurations of a standalone NetScaler appliance or an HA setup to the clustered setup?

No. When a node is added to a clustered setup, its configurations are implicitly cleared by using the **clear ns config** command (with the **extended** option). In addition, the SNIP addresses and all VLAN configurations (except default VLAN and NSVLAN) are cleared. Therefore, it is recommended that you back up the configurations before adding the appliance to a cluster. Before using the backed-up configuration file for the cluster, you must:

1. Edit the configuration file to remove features that are not supported in a cluster environment.
2. Update the naming convention of interfaces from two-tuple (x/y) format to three-tuple (x/y/z) format.
3. Apply the configurations to the configuration coordinator node of the cluster by using the **batch** command.

Is backplane interfaces part of the L3 VLANs?

Yes, by default, backplane interfaces have presence on all the L3 VLANs that are configured on the cluster.

How can I configure a cluster that includes nodes from different networks?

Note

Supported from NetScaler 11.0 onwards.

A cluster that includes nodes from different networks is called a L3 cluster (sometimes referred to as a cluster in INC mode). In an L3 cluster, all nodes that belong to a single network must be grouped in a single node group. Therefore, if a cluster includes two nodes each from three different networks, you have to create 3 node groups (one for each network) and associate each of these node groups with the nodes that belong to that network. For configuration information, see the steps to set up a cluster.

How can I configure/un-configure the NSVLAN on a cluster?

Do either one of the following:

- To make the NSVLAN available in a cluster, make sure that each appliance has the same NSVLAN configured before it is added to a cluster.
- To remove the NSVLAN from a cluster node, first remove the node from the cluster and then delete the NSVLAN from the appliance.

I have a cluster set up where some NetScaler nodes are not connected to the external network. Can the cluster still function normally?

Yes. The cluster supports a mechanism called linksets, which allows unconnected nodes to serve traffic by using the interfaces of connected nodes. The unconnected nodes communicate with the connected nodes through the cluster backplane. For more information, see [Using Linksets](#).

How can deployments that require MAC-Based Forwarding (MBF) be supported in a clustered setup?

Deployments that use MBF must use linksets. For more information, see [Using Linksets](#).

Can I run commands from the NSIP address of a cluster node?

No. Access to individual cluster nodes through the NSIP addresses is read-only. Therefore, when you log on to the NSIP address of a cluster node you can only view the configurations and the statistics. You cannot configure anything. However, there are some operations you can run from the NSIP address of a cluster node. For more information, see [Operations Supported on Individual Nodes](#).

Can I disable configuration propagation among cluster nodes?

No, you cannot explicitly disable the propagation of cluster configurations among cluster nodes. However, during a software upgrade or downgrade, a version mismatch error can automatically disable configuration propagation.

Can I change the NSIP address or change the NSVLAN of a NetScaler appliance when it is a part of the cluster?

No. To make such changes you must first remove the appliance from the cluster, perform the changes, and then add the appliance to the cluster.

Does the NetScaler cluster support L2 and L3 VLANs?

Yes. A cluster supports VLANs between cluster nodes. The VLANs must be configured on the cluster IP address.

- **L2 VLAN.** You can create a layer2 VLAN by binding interfaces that belong to different nodes of the cluster.

- **L3 VLAN.** You can create a layer3 VLAN by binding IP addresses that belong to different nodes of the cluster. The IP addresses must belong to the same subnet. Make sure that one of the following criteria is satisfied. Otherwise, the L3 VLAN bindings can fail.
 - All nodes have an IP address on the same subnet as the one bound to the VLAN.
 - The cluster has a striped IP address and the subnet of that IP address is bound to the VLAN.

When you add a node to a cluster that has only spotted IPs, the sync happens before spotted IP addresses are assigned to that node. In such cases, L3 VLAN bindings can be lost. To avoid this loss, either add a striped IP or add the L3 VLAN bindings on the NSIP of the newly added node.

How can I configure SNMP on a NetScaler cluster?

SNMP monitors the cluster, and all the nodes of the cluster, in the same way that it monitors a stand-alone appliance. The only difference is that SNMP on a cluster must be configured through the cluster IP address. When generating hardware specific traps, two more varbinds are included to identify the node of the cluster: node ID and NSIP address of the node.

What details must I have available when I contact technical support for cluster-related issues?

The NetScaler appliance provides a **show techsupport -scope cluster** command that extracts configuration data, statistical information, and logs of all the cluster nodes. Run this command on the cluster IP address.

The output of this command is saved in a file named *collector_cluster_<nsip_CCO>_P_<date-timestamp>.tar.gz* which is available in the */var/tmp/support/cluster/* directory of the configuration coordinator.

Send this archive to the technical support team to debug the issue.

Can I use striped IP addresses as the default gateway of servers?

In cluster deployments, make sure the default gateway of the server points to a striped IP address (if you are using a NetScaler-owned IP address). For example, in the case of LB deployments with USIP enabled, the default gateway must be a striped SNIP address.

Can I view the routing configurations of a specific cluster node from the cluster IP address?

Yes. You can view and clear the configurations specific to a node by specifying the owner node while entering the VTYSH shell.

For example, to view the output of a command on nodes 0 and 1, the command is as follows:

```
1 \> vtysh
2 ns# owner-node 0 1
3 ns(node-0 1)\# show cluster state
4 ns(node-0 1)\# exit-cluster-node
5 ns\#
```

How can I specify the node for which I want to set the LACP system priority?

Note

Supported from NetScaler 10.1 onwards.

In a cluster, you must set that node as the owner node by using the **set lacp** command.

For example: To set the LACP system priority for a node with ID 2:

```
set lacp -sysPriority 5 -ownerNode 2
```

How are IP tunnels configured in a cluster setup?

Note

Supported from NetScaler 10.1 onwards.

Configuring IP tunnels in a cluster is the same as on a standalone appliance. The only difference is that in a cluster setup, the local IP address must be a striped SNIP address.

How can I add a failover interface set (FIS) on the nodes of a NetScaler cluster?

Note

Supported from NetScaler 10.5 onwards.

On the cluster IP address, specify the ID of the cluster node on which the FIS must be added, using the command as follows:

```
add fis <name> -ownerNode <nodeId>
```

Notes

- The FIS name for each cluster node must be unique.
- A cluster LA channel can be added to a FIS. You make sure that the cluster LA channel has a local interface as a member interface.

For more information on FIS, see [Configuring failover interface set](#).

How are net profiles configured in a cluster setup?

Note

Supported from NetScaler 10.5 onwards.

You can bind spotted IP addresses to a net profile. This net profile can then be bound to a spotted load balancing virtual server or service (that is defined using a node group). The following recommendations must be followed, failing which, the net profile configurations are not honored and the USIP/USNIP settings are used:

Note

- If the **strict** parameter of the node group is set to **Yes**, the net profile must contain a minimum of one IP address from each node group member.
- If the **strict** parameter of the node group is set to **No**, the net profile must include at least one IP address from each of the cluster nodes.

How can I configure WlonNS in a cluster setup?

Note

Supported from NetScaler 11.0 Build 62.x onwards.

To use WlonNS on a cluster, you must do the following:

1. Make sure that the Java package and the WI package are present in the same directory on all the cluster nodes.
2. Create a load balancing virtual server that has persistency configured.
3. Create services with IP addresses as the NSIP address of each of the cluster nodes that you want to serve WI traffic. This step can only be configured using the NetScaler CLI.
4. Bind the services to the load balancing virtual server.

Note

If you are using WlonNS over a VPN connection, make sure that the load balancing virtual server is set as WIHOME.

Can the cluster LA channel be used for management access?

No. Management access to a cluster node, must not be configured on a cluster LA channel (for example, CLA/1) or its member interfaces. It is because when the node is INACTIVE, the corresponding cluster LA interface is marked as power down, and therefore loses management access.

How cluster nodes communicate to each other and what are the different types of traffic that goes through the backplane?

A backplane is a set of interfaces in which one interface of each node is connected to a common switch, which is called the cluster backplane switch. The different types of traffic that goes through a backplane, which is used by internode communication are:

- Node to Node Messaging (NNM)
- Steered traffic
- Configuration propagation and synchronization

Each node of the cluster uses a special MAC cluster backplane switch address to communicate with other nodes through the backplane. The cluster special MAC is of the form: **0x02 0x00 0x6F <cluster_id> <node_id> <reserved>**, where <cluster_id> is the cluster instance ID. The <node_id> is the node number of the NetScaler appliance that is added to a cluster.

Note

The amount of traffic that is handled by a backplane has negligible CPU overhead.

What gets routed over the GRE tunnel for the Layer 3 cluster?

Only steered data traffic goes over the GRE tunnel. The packets are steered through the GRE tunnel to the node on the other subnet.

How Node to Node Messaging (NNM) and heartbeat messages are exchanged, and how are they routed?

The NNM, heartbeat messages, and cluster protocol are non-steering traffic. These messages are not sent through the tunnel, but they are routed directly.

What are the MTU recommendations for layer 3 cluster tunneled traffic?

The following are the layer 3 cluster recommendations of Jumbo MTU over GRE tunnel:

- The Jumbo MTU can be configured among cluster nodes across the L3 path to accommodate GRE tunnel overhead.
- The fragmentation does not happen for full sized packets which must be steered.
- Steering of traffic continues to work even if Jumbo frames are not allowed, but with more overhead due to fragmentation.

How the global hash key is generated and shared across all nodes?

The `rsskey` for a standalone appliance is generated at the boot time. In a cluster setup, the first node holds the `rsskey` of the cluster. Every new node joining to the cluster synchronizes the `rsskey`.

What is the need of set `rsskeytype –rsskey symmetric` command for `*:*`, `USIP on`, `useproxyport off`, `topologies`?

It is not specific to a cluster, applies to a standalone appliance as well. With USIP ON, and use proxy port disabled, symmetric `rsskey` reduces both Core to Core (C2C) steering and node to node steering.

What are the factors that contribute to change the CCO node?

The first node added to form a cluster setup becomes the configuration coordinator (CCO) node. The following factors contribute to change the CCO node in the cluster setup:

- When the current CCO node is removed from the cluster setup
- When the current CCO node crashes
- When the priority of the non-CCO node is changed (lower priority has higher precedence)
- In dynamic conditions like, network reachability between the nodes
- When there is change in node states –active, spare, and passive. Active nodes are preferred as CCO.
- When there is a change in configuration, and the node having the latest configuration is preferred as CCO.

Can I form a cluster with nodes of different hardware platforms?

Yes. NetScaler appliance supports a heterogeneous cluster. A heterogeneous cluster can have a combination of different platforms in the same cluster. For more information, see [Support for heteroge-](#)

[neous cluster](#).

Troubleshooting the NetScaler cluster

May 2, 2023

If a failure occurs in a NetScaler cluster, the first step in troubleshooting is to get information on the cluster instance. You can get the information by running the `show cluster instance clId` and `show cluster node nodeId` commands on the cluster nodes respectively.

If you are not able to find the issue by using the above two approaches, you can use one of the following:

- **Isolate the source of the failure.** Try bypassing the cluster to reach the server. If the attempt is successful, the problem is probably with the cluster setup.
- **Check the commands recently executed.** Run the history command to check the recent configurations performed on the cluster. You can also review the `ns.conf` file to verify the configurations that have been implemented.
- **Check the `ns.log` files.** Use the log files, available in the `/var/log/` directory of each node, to identify the commands run, the status of commands, and the state changes.
- **Check the `newslog` files.** Use the `newslog` files, available in the `/var/nslog/` directory of each node, to identify the events that have occurred on the cluster nodes. You can view multiple `newslog` files as a single file, by copying the files to a single directory, and then running the following command:

```
1 nsconmsg -K newslog-node<id> -K newslog.node<id> -d current
```

If you still cannot resolve the issue, you can try tracing the packets on the cluster or use the `show techsupport -scope cluster` command. You can use the command to send the report to the technical support team.

Tracing the packets of a NetScaler cluster

May 2, 2023

The NetScaler operating system provides a utility called `ns trace` to get a dump of the packets that are received and sent out by an appliance. The utility stores the packets in trace files. You can use these

files to debug problems in the flow of packets to the cluster nodes. The trace files must be viewed with the Wireshark application.

Some salient aspects of the ns trace utility are:

- Can be configured to trace packets selectively by using classic expressions and default expressions.
- Can capture the trace in multiple formats: ns trace format (.cap) and TCP dump format (.pcap).
- Can aggregate the trace files of all cluster nodes on the configuration coordinator.
- Can merge multiple trace files into a single trace file (only for .cap files).

You can use the ns trace utility from the NetScaler command line or the NetScaler shell.

To trace packets of a standalone appliance

Run the start ns trace command on the appliance. The command creates trace files in the /var/nstrace/<date-timestamp> directory. The trace file names are of the form nstrace<id\ >.cap.

You can view the status by running the show ns trace command. You can stop tracing the packets by running the stop ns trace command.

Note


You can also run the ns trace utility from the NetScaler shell by running the nstrace.sh file. However, it is recommended that you use the ns trace utility through the NetScaler command line interface.

To trace packets of a cluster

You can trace the packets on all the cluster nodes and obtain all the trace files on the configuration coordinator.

Run the start ns trace command on the cluster IP address. The command is propagated and run on all the cluster nodes. The trace files are stored in individual cluster nodes in the /var/nstrace/<date-timestamp> directory. The trace file names are of the form nstrace<id>_node<id\ >.cap.

You can use the trace files of each node to debug the nodes operations. But if you want the trace files of all cluster nodes in one location, you must run the stop ns trace command on the cluster IP address. The trace files of all the nodes are downloaded on the cluster configuration coordinator in the /var/nstrace/<date-timestamp> directory as follows:

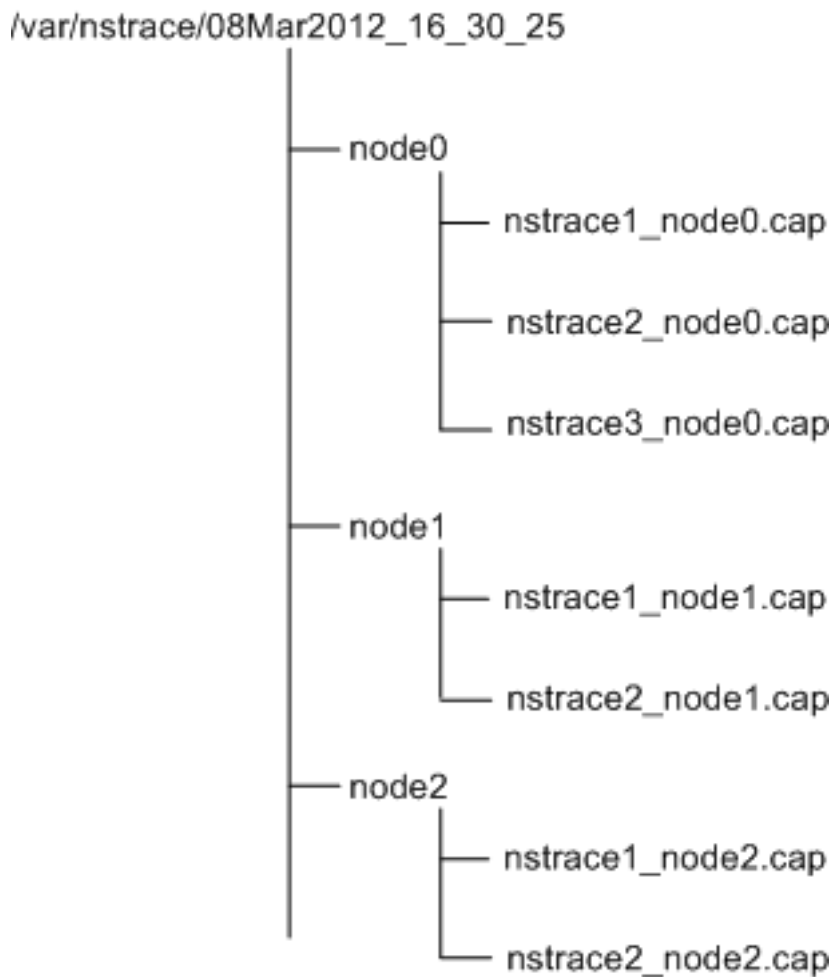

Merge multiple trace files

You can prepare a single file from the trace files (supported only for .Cap files) obtained from the cluster nodes. The single trace files give you a cumulative view of the trace of the cluster packets. The trace entries in the single trace file are sorted based on the time the packets were received on the cluster.

To merge the trace files, at the NetScaler shell, type:

```
1 > nstracemerge.sh -srcdir \<DIR\> -dstdir \<DIR\> -filename \<name\> -  
    filesize \<num\>
```

Where,

- `srcdir` is the directory from which the trace files are merged. All trace files within this directory are merged into a single file.
- `dstdir` is the directory where the merged trace file is created.
- `Filename` is the name of the trace file that is created.

- `Filesize` is the size of the trace file.

Examples

Following are some examples of using the `ns trace` utility to filter packets.

- To trace the packets on the backplane interfaces of three nodes:

Using classic expressions:

```
1 > start nstrace -filter "INTF == 0/1/1 && INTF == 1/1/1 && INTF == 2/1/1"
```

Using default expressions:

```
1 > start nstrace -filter "CONNECTION.INTF.EQ("0/1/1") && CONNECTION.INTF.EQ("1/1/1") && CONNECTION.INTF.EQ("2/1/1")"
```

- To trace the packets from a source IP address 10.102.34.201 or from a system whose source port is greater than 80 and the service name is not “s1”:

Using classic expressions

```
1 > start nstrace -filter "\"SOURCEIP == 10.102.34.201 \\\| \|(SVCNAME != s1 && SOURCEPORT > 80)\""
```

Using default expressions

```
1 > start nstrace -filter "\"CONNECTION.SRCIP.EQ(10.102.34.201) \\\| \|(CONNECTION.SVCNAME.NE(\"s1\") && CONNECTION.SRCPORT.GT(80))\""
```

Note

For more information about filters used in `ns trace`, see [ns trace](#).

Capturing SSL Session Keys During a Trace

When you run the “start ns trace” command, you can set the new `capsslkeys` parameter to capture the SSL master keys for all SSL sessions. If you include this parameter, a file named `nstrace.sslkeys` is generated along with the packet trace. This file can be imported into Wireshark to decrypt the SSL traffic in the corresponding trace file.

This functionality is similar to web browsers exporting session keys that can later be imported into Wireshark for decrypting SSL traffic.

Advantages of using SSL session keys

Following are the advantages of using SSL session keys:

1. Generates smaller trace files that do not include the extra packets created by the SSLPLAIN mode of capturing.
2. Provides the ability to view plaintext [SP(1)] from the trace and choose whether to share the master keys file or protect sensitive data by not sharing it.

Limitations of using SSL session keys

Following are the limitations of using SSL session keys:

1. SSL sessions cannot be decrypted if the initial packets of the session are not captured.
2. SSL sessions cannot be captured if the Federal Information Processing Standard (FIPS) mode is enabled.

To capture SSL session keys by using the command line interface (CLI) At the command prompt, type the following commands to enable or disable SSL session keys in a trace file and verify trace operation.

```

1 > start nstrace -capsslkeys ENABLED
2 > show nstrace
3 Example
4 > start nstrace -capsslkeys ENABLED
5 > show nstrace
6     State:  RUNNING           Scope:  LOCAL           TraceLocation:
7         "/var/nstrace/04May2016_17_51_54/..."
8     Nf:    24                 Time:   3600           Size:   164
9         Mode:  TXB NEW_RX
10    Traceformat: NSCAP       PerNIC:  DISABLED      FileName:  04
11         May2016_17_51_54 Link:  DISABLED
12    Merge:  ONSTOP           Doruntimecleanup:  ENABLED TraceBuffers:
13         5000           SkipRPC:  DISABLED
14    SkipLocalSSH:  DISABLED  Capsslkeys:  ENABLED   InMemoryTrace:
15         DISABLED
16 Done

```

To configure SSL session keys by using the NetScaler GUI

1. Navigate to **Configuration > System > Diagnostics > Technical Support Tools** and click **Start new Trace** to start tracing encrypted packets on an appliance.
2. On the **Start Trace** page, select the **Capture SSL Master Keys** check box.
3. Click **OK** and **Done**.

To import the SSL Master Keys into Wireshark

On the Wireshark GUI, navigate to **Edit > Preferences > Protocols > SSL > (Pre)-Master-Secret log filename** and specify the master key files obtained from the appliance.

Troubleshooting common issues

December 21, 2020

While joining a node to the cluster, I get the following message, “ERROR: Invalid interface name/number.”What must I do to resolve this error?

The said error occurs if you provided an invalid or incorrect backplane interface while using the add cluster node command to add the node. To resolve this error, verify the interface you provided while adding the node. Make sure that you have not specified the appliance’s management interface as the backplane interface, and that the <nodeId> bit of the interface is the same as the node’s Id. For example, if the nodeId is 3, the backplane interface must be 3/<c>/<u>.

While joining a node to the cluster, I get the following message, “ERROR: Clustering cannot be enabled, because the local node is not a member of the cluster.”What must I do to resolve this error?

This error occurs when you try to join a node without adding the node’s NSIP to the cluster. To resolve this error, you must first add the node’s NSIP address to the cluster by using the **add cluster node** command and then run the **join cluster** command.

While joining a node to the cluster, I get the following message, “ERROR: Connection refused.”What must I do to resolve this error?

This error can occur due to the following reasons:

- **Connectivity problems.** The node cannot connect to the cluster IP address. Try pinging the cluster IP address from the node that you are trying to join.
- **Duplicate cluster IP address.** Check to see if the cluster IP address exists on some non-cluster node. If it does, create a cluster IP address and try rejoining the cluster.

While joining a node to the cluster, I get the following message, “ERROR: License mismatch between the configuration coordinator and the local node.”What must I do to resolve this error?

The appliance that you are joining to the cluster must have the same licenses as the configuration coordinator. This error occurs when the licenses on the node you are joining do not match the licenses on the configuration coordinator. To resolve this error, run the following commands on both the nodes and compare the outputs.

From the command line:

- `show ns hardware`
- `show ns license`

From the shell:

- `nsconmsg -g feature -d stats`
- `ls /nsconfig/license`
- View the contents of the `/var/log/license.log` file

What must I do when the configurations of a cluster node are not in synchronize with the cluster configurations?

Usually, the configurations are automatically synchronized between all the cluster nodes. However, if you feel that the configurations are not synchronized on a specific node, you must force the synchronization by running the force cluster sync command from the node that you want to synchronize. For more information, see [Synchronizing Cluster Configurations](#).

When configuring a cluster node, I get the following message, “ERROR: Session is read-only; connect to the cluster IP address to modify the configuration.”

All configurations on a cluster must be done through the cluster IP address and the configurations are propagated to the other cluster nodes. All sessions established through the NSIP address of individual nodes are read-only.

Why does the node state show “INACTIVE”when the node health shows “UP”?

A healthy node can be in the INACTIVE state for various reasons. A scan of the ns.log or error counters can help you determine the exact reason.

How can I resolve the health of a node when its health shows “NOT UP”?

Node health “**Not UP**” indicates that there are some issues with the node. To know the root cause, you must run the **show cluster node** command. This command displays the node properties and the reason for the node failure.

What must I do when the health of a node shows as “NOT UP” and the reason indicates that configuration commands have failed on a node?

This issue arises when some commands are not run on the cluster nodes. In such cases, you must make sure that the configurations are synchronized using one of the following options:

- If some of the cluster nodes are in this state, you must perform the force cluster synchronization operation on those nodes. For more information, see [Synchronizing Cluster Configurations](#).
- If all cluster nodes are in this state, you must disable and then enable the cluster instance on all the cluster nodes.

When I run the set virtual server command, I get the following message, “No such resource.” What must I do to resolve this issue?

The **set vsrver** command is not supported in clustering. The **unset vsrver**, **enable vsrver**, **disable vsrver**, and **rm vsrver** commands are also not supported. However, the **show vsrver** command is supported.

I cannot configure the cluster over a Telnet session. What must I do?

Over a telnet session, the cluster IP address can be accessed only in read-only mode. Therefore, you cannot configure a cluster over a telnet session.

I notice a significant time difference across the cluster nodes. What must I do to resolve this issue?

When PTP packets are dropped due to the backplane switch or if the physical resources are over-committed in a virtual environment, the time will not get synchronized.

To synchronize the times, you must do the following on the cluster IP address:

1. Disable PTP.

set ptp -state disable

2. Configure Network Time Protocol (NTP) for the cluster. For more information, see [Setting up Clock Synchronization](#).

What must I do, if there is no connectivity to the cluster IP address and the NSIP address of a cluster node?

If you cannot access to the cluster IP address or the NSIP of a cluster node, you must access the appliance through the serial console. If the NSIP address is reachable, you can SSH to the cluster IP address from the shell by running the following command at the shell prompt:

```
# ssh nsroot@<cluster IP address>
```

What must I do to recover a cluster node that has connectivity issues?

To recover a node that has connectivity issues:

1. Disable the cluster instance on that node (since you cannot run commands from the NSIP of a cluster node).
2. Run the commands required to recover the node.
3. Enable the cluster instance on that node.

Some nodes of the cluster have two default routes. How can I remove the second default route from the cluster node?

To delete the additional default route, do the following on each node that has the extra route:

1. Disable the cluster instance.

```
disable cluster instance <clId>
```
2. Remove the route.

```
rm route <network> <netmask> <gateway>
```
3. Enable the cluster instance.

```
enable cluster instance <clId>
```

The cluster functionality gets affected when an existing cluster node comes online. What must I do to resolve this issue?

If the RPC password of a node is changed from the cluster IP address when that node is out of the cluster, then, when the node comes online, there is a mismatch in RPC credentials and can affect

cluster functionality. To solve this issue, use the `set ns rpcNode` command to update the password on the NSIP of the node which has come online.

Content Switching

May 2, 2023

In today's complex websites, you might want to present different content to different users. For example, you might want to allow users from the IP range of a customer or partner to have access to a special Web portal. You might want to present content relevant to a specific geographical area to users from that area. You might want to present content in different languages to the speakers of those languages. You might want to present content tailored to specific devices, such as smartphones, to them who use the devices. The NetScaler content switching feature enables the appliance to distribute client requests across multiple servers based on specific content that you want to present to those users.

To configure content switching, first create a basic content switching setup, and then customize it to meet your needs. This entails enabling the content switching feature, setting up load balancing for the server or servers that host each version of the content that is being switched, creating a content switching virtual server, creating policies to choose which requests are directed to which load balancing virtual server, and binding the policies to the content switching virtual server. You can then customize the setup to meet your needs by setting precedence for your policies, protecting your setup by configuring a backup virtual server, and improving the performance of your setup by redirecting requests to a cache.

How Content Switching Works

Content Switching enables the NetScaler appliance to direct requests sent to the same Web host to different servers with different content. For example, you can configure the appliance to direct requests for dynamic content (such as URLs with a suffix of `.asp`, `.dll`, or `.exe`) to one server and requests for static content to another server. You can configure the appliance to perform content switching based on TCP/IP headers and payload.

You can also use content switching to configure the appliance to redirect requests to different servers with different content based on various client attributes. Some of those client attributes are:


- **Device Type.** The appliance examines the user agent or custom HTTP header in the client request for the type of device from which the request originated. Based on the device type, it directs the request to a specific Web server. For example, if the request came from a cell phone, the request is directed to a server, capable of serving content that the user can view on the cell

phone. A request from a computer is directed to a different server, capable of serving content designed for a computer screen.

- **Language.** The appliance examines the Accept-Language HTTP header in the client request and determines the language used by the client’s browser. The appliance then sends the request to a server that serves content in that language. For example, using content switching based on language, the appliance can send someone whose browser is configured to request content in French to a server with the French version of a newspaper. It can send someone else whose browser is configured to request content in English to a server with the English version.
- **Cookie.** The appliance examines the HTTP request headers for a cookie that the server set previously. If it finds the cookie, it directs requests to the appropriate server, which hosts custom content. For example, if a cookie is found that indicates that the client is a member of a customer loyalty program, the request is directed to a faster server or one with special content. If it does not find a cookie, or if the cookie indicates that the user is not a member, the request is directed to a server for the general public.
- **HTTP Method.** The appliance examines the HTTP header for the method used, and sends the client request to the right server. For example, GET requests for images can be directed to an image server, while POST requests can be directed to a faster server that handles dynamic content.
- **Layer 3/4 Data.** The appliance examines requests for the source or destination IP, source or destination port, or any other information present in the TCP or UDP headers, and directs the client request to the right server. For example, requests from source IPs that belong to customers can be directed to a custom web portal on a faster server, or one with special content.

A typical content switching deployment consists of the entities described in the following diagram.

Figure 1. Content Switching Architecture

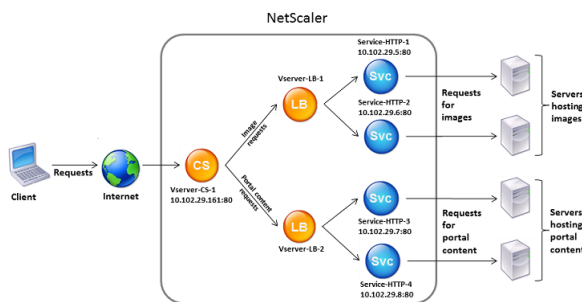

A content switching configuration consists of a content switching virtual server, a load balancing setup consisting of load balancing virtual servers and services, and content switching policies. To configure content switching, you must configure a content switching virtual server and associate it with policies and load balancing virtual servers. This process creates a *content group*—a group of all virtual servers and policies involved in a particular content switching configuration.

Content switching can be used with HTTP, HTTPS, TCP, and UDP connections. For HTTPS, you must

enable SSL Offload.

When a request reaches the content switching virtual server, the virtual server applies the associated content switching policies to that request. The priority of the policy defines the order in which the policies bound to the content switching virtual server are evaluated. If you are using Advanced policy policies, when you bind a policy to the content switching virtual server, you must assign a priority to that policy. If you are using NetScaler classic policies, you can assign a priority to your policies, but are not required to do so. If you assign priorities, the policies are evaluated in the order that you set. If you do not, the NetScaler appliance evaluates your policies in the order in which they were created.

In addition to configuring policy priorities, you can manipulate the order of policy evaluation by using Goto expressions and policy bank invocations. For more details about Advanced policy configuration, see [Configuring Advanced policy Policies](#).

After it evaluates the policies, the content switching virtual server routes the request to the appropriate load balancing virtual server, which sends it to the appropriate service.

Content switching virtual servers can only send requests to other virtual servers. If you are using an external load balancer, you must create a load balancing virtual server for it and bind its virtual server as a service to the content switching virtual server.

Configure basic content switching


June 21, 2024

Before you configure content switching, you must understand how content switching is set up and how the services and virtual servers are connected.

To configure a basic, functional content switching setup, first enable the content switching feature. Then, create at least one content group. For each content group, create a content switching virtual server to accept requests to a group of websites that use content switching. Also create a load balancing setup, which includes a group of load balancing virtual servers to which the content switching virtual server directs requests. To specify which requests to direct to which load balancing virtual server, create at least two content switching policies, one for each type of request that is to be redirected. When you have created the virtual servers and policies, bind the policies to the content switching virtual server. You can also bind a policy to multiple content switching virtual servers. When you bind a policy, you specify the load balancing virtual server to which requests that match the policy are to be directed.

In addition to binding individual policies to a content switching virtual server, you can bind policy labels. If you create more content groups, you can bind a policy or policy label to more than one of the content switching virtual servers.

The following figure illustrates the steps involved in content switching configuration.

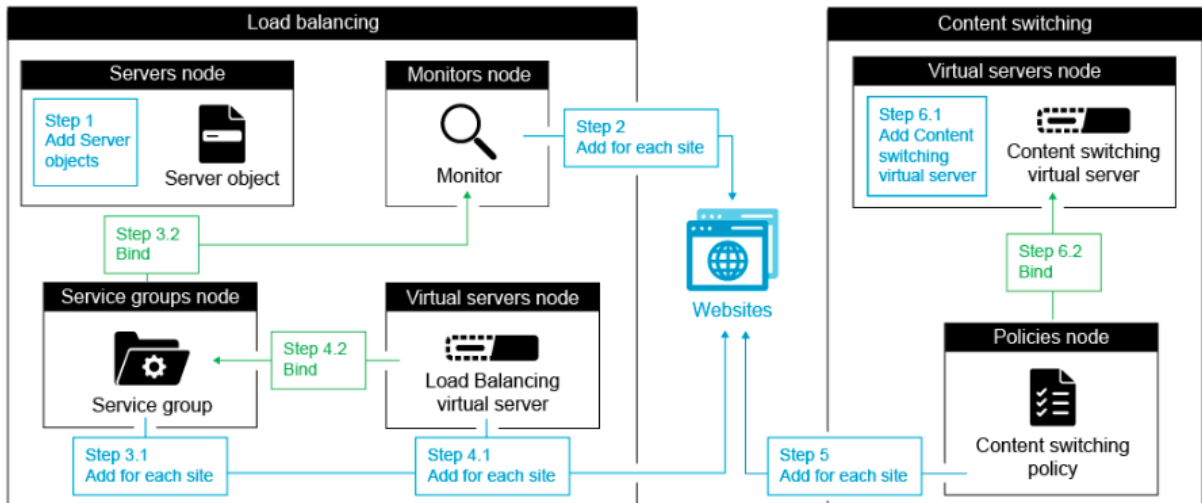

Note

After creating a content group, you can modify its content switching virtual server to customize the configuration.

Enable content switching

To use the content switching feature, you must enable content switching. You can configure content switching entities even though the content switching feature is disabled. However, the entities do not work.

Enable content switching by using the CLI

At the command prompt, type the following commands to enable content switching and verify the configuration:

```

1 enable ns feature CS
2
3 show ns feature
    
```

Example:

```

1 > enable feature ContentSwitch
2 Done
3 > show feature
4
5 Feature                Acronym      Status
6 -----                -
7 1) Web Logging         WL           OFF
8 2) Surge Protection    SP           ON
    
```

9	3)	Load Balancing	LB	ON
10	4)	Content Switching	CS	ON
11	.			
12	.			
13	.			
14	22)	Responder	RESPONDER	ON
15	23)	HTML Injection	HTMLInjection	ON
16	24)	NetScaler Push	push	OFF
17	Done			

Enable content switching by using the GUI

Navigate to **System > Settings** and, in the **Modes and Features** group, select **Configure Basic Features**, and select **Content Switching**.

Create content switching virtual servers

You can add, modify, and remove content switching virtual servers. The state of a virtual server is DOWN when you create it, because the load balancing virtual server is not yet bound to it.

Create a virtual server by using the CLI

At the command prompt, type:

```
1 add cs vserver <name> <protocol> <IPAddress> <port>
```

Example:

```
1 add cs vserver Vserver-CS-1 HTTP 10.102.29.161 80
```

Add a content switching virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and add a virtual server.
2. Specify a name for the content switching virtual server.

Note

There is a different Content Switching virtual server for each protocol. (For example, HTTP and SSL).

3. Populate the relevant fields and click **OK**.

Content switching virtual server statistics

The content switching virtual server statistics display information such as virtual server select, request bytes, response bytes, total packets received, total packets sent, spillover threshold, spillover select, current client established connections, and virtual server down backup select.

The content switching virtual server statistics also display the summary details of the bound default load balancing virtual server.

View statistics of content switching virtual server by using the CLI

At the command prompt, type:

```
1 stat cs vserver <name>
```

Example:

```
1 stat cs vserver CS_stats
```

View statistics of content switching virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**.
2. Select the virtual server and click **Statistics**.

Configure a load balancing setup for content switching

The content switching virtual server redirects all requests to a load balancing virtual server. You must create one load balancing virtual server for each version of the content that is being switched. It is true even when your setup has only one server for each version of the content, and you are therefore not doing any load balancing with those servers. You can also configure actual load balancing with multiple load-balanced servers that mirror each version of the content. In either scenario, the content switching virtual server needs to have a specific load balancing virtual server assigned to each version of the content that is being switched.

The load balancing virtual server then forwards the request to a service. If it has only one service bound to it, it selects that service. If it has multiple services bound to it, it uses its configured load balancing method to select a service for the request, and forwards that request to the service that it selected.

To configure a basic load balancing setup, you need to perform the following tasks:

- Create load balancing virtual servers

- Create services
- Bind services to the load balancing virtual server

For more information on load balancing, see [How load balancing works](#). For detailed instructions on setting up a basic load balancing configuration, see [Set up basic load balancing](#).

Configure a content switching action

You specify the target load balancing virtual server for a content switching policy when binding the policy to the content switching virtual server. Therefore, you have to configure one policy for each load balancing virtual server to which to direct traffic.

However, if your content switching policy uses a default syntax rule, you can configure an action for the policy. In the action, you can specify the name of the target load balancing virtual server, or you can configure a request-based expression that, at run time, computes the name of the load balancing virtual server to which to send the request. The action expression must be specified in the default syntax.

The expression option can drastically reduce the size of your content switching configuration, because you need only one policy per content switching virtual server. Content switching policies that use an action can also be bound to multiple content switching virtual servers, because the target load balancing virtual server is no longer specified in the content switching policy. The ability to bind a single policy to multiple content switching virtual servers helps to further reduce the size of your content switching configuration.

After you create an action, you create a content switching policy and specify the action in the policy, so that the action is performed when that policy matches a request.

Note

You can also, for a content switching policy that uses a default syntax rule, specify the target load balancing virtual server when binding the policy to a content switching virtual server, instead of using a separate action. For domain-based policies, URL-based policies, and rule-based policies that use classic expressions, an action is not available. So, for these types of policies, you specify the name of the target load balancing virtual server when binding the policy to a content switching virtual server.

Configure an action that specifies the name of the target load balancing virtual server

If you choose to specify the name of the target load balancing virtual server in a content switching action, you need as many content switching policies as you have target load balancing virtual servers. Content switching decisions, in this case, are based on the rules in the content switching policy, and

the action merely specifies the target load balancing virtual server. When a request matches the policy, the request is forwarded to the specified load balancing virtual server.

Create and verify a content switching action that specifies the name of the target load balancing virtual server, by using the CLI

At the command prompt, type:

```
1 add cs action <name> -targetLBVserver <string> [-comment <string>]
2
3 show cs action <name>
```

Example:

```
1 > add cs action mycsaction -targetLBVserver mylbvserver -comment "
   Forwards requests to mylbvserver."
2 Done
3 > show cs action mycsaction
4 Name: mycsaction
5 Target LB Vserver: mylbvserver
6 Hits: 0
7 Undef Hits: 0
8 Action Reference Count: 0
9 Comment: "Forwards requests to mylbvserver."
10
11 Done
12 >
```

Configure a content switching action that specifies the name of the target load balancing virtual server, by using the GUI

1. Navigate to **Traffic Management > Content Switching > Actions**.
2. Configure a content switching action, and specify the name of the target load balancing virtual server.

Configure an action that specifies an expression for selecting the target at run time

If you choose to configure a request-based expression that can dynamically compute the name of the target load balancing virtual server, you need to configure only one content switching policy to select the appropriate virtual server. The rule for the policy can be a simple TRUE (the policy matches all requests) because, in this case, content switching decisions are based on the expression in the action. By configuring an expression in an action, you can drastically reduce the size of your content switching configuration.

If you choose to configure a request-based expression for computing the name of the target load balancing virtual server at run time, you must carefully consider how to name the load balancing virtual servers in the configuration. You must be able to derive their names by using the request-based policy expression in the action.

For example, if you are switching requests based on the URL suffix (extension of the requested resource), when naming the load balancing virtual servers, you can follow the convention of appending the URL suffix to a predetermined string, such as `mylb_`. For example, load balancing virtual servers for HTML pages and PDF files can be named `mylb_html` and `mylb_pdf`, respectively. In that case, the rule that you can use in the content switching action, to select the appropriate load balancing virtual server, is `"mylb_" + HTTP.REQ.URL.SUFFIX`. If the content switching virtual server receives a request for an HTML page, the expression returns `mylb_html`, and the request is switched to the virtual server `mylb_html`.

Create a content switching action that specifies an expression, by using the CLI

At the command line, type the following commands to create a content switching action that specifies an expression and verify the configuration:

```
1 add cs action <name> -targetVserverExpr <expression>) [-comment <string>]
2
3 show cs action <name>
```

Example:

```
1 > add cs action mycsaction1 -targetvserverExpr '"mylb_" + HTTP.REQ.URL.SUFFIX'
2 Done
3 > show cs action mycsaction1
4 Name: mycsaction1
5 Target Vserver Expression: "mylb_" + HTTP.REQ.URL.SUFFIX
6 Target LB Vserver: No_Target
7
8 Done
9 >
```

Configure a content switching action that specifies an expression by using the GUI

1. Navigate to **Traffic Management > Content Switching > Actions**.
2. Configure a content switching action, and specify an expression that will dynamically compute the name of the target load balancing virtual server.

Configure content switching policies

A content switching policy defines a type of request that is to be directed to a load balancing virtual server. These policies are applied in the order of the priorities assigned to them.

The NetScaler compares incoming data to expressions specified in the policies. You create the policies by using a default syntax expression.

Note:

A rule-based policy can be configured with an optional action. A policy with an action can be bound to multiple virtual servers or policy labels.

If you set a priority when binding your policies to the content switching virtual server, the policies are evaluated in the order of priority. If you do not set specific priorities when binding your policies, the policies are evaluated in the order in which they were created.

Create a content switching policy by using the CLI

At the command prompt, type:

```
1 add cs policy <policyName> -rule <expression> [-action <string>] [-logAction <string>]
```

Example:

```
1 add cs policy Policy-CS-1 -rule "CLIENT.IP.SRC.SUBNET(24).EQ  
  (10.217.84.0)"  
2  
3 add cs policy Policy-CS-2 -rule "SYS.TIME.BETWEEN(GMT 2009 Nov,GMT 2009  
  Dec)"  
4  
5 add cs policy Policy-CS-3 -rule "http.req.method.eq(GET)" -action act1
```

Rename a content switching policy by using the CLI

At the command prompt, type:

```
1 rename cs policy <policyName> <newName>
```

Example:

```
1 rename cs policy myCSPolicy myCSPolicy1
```

Rename a content switching policy by using the GUI

Navigate to **Traffic Management > Content Switching > Policies**, select a policy and, in the Action list, select **Rename**.

Create a content switching policy by using the GUI

1. Navigate to **Traffic Management > Content Switching > Policies**, and click **Add**.
2. Populate the relevant fields and click **Create**.

Configure content switching policy labels

A policy label is a user-defined bind point to which policies are bound. When a policy label is invoked, all the policies bound to it are evaluated in the order of the priority that you assigned to them. A policy label can include one or more policies, each of which can be assigned its own result. A match on one policy in the policy label can result in proceeding to the next policy, invoking a different policy label or appropriate resource, or an immediate end to policy evaluation and return of control to the policy that invoked the policy label. You can create policy labels for default syntax policies only.

A content switching policy label consists of a name, a label type, and a list of policies bound to the policy label. The policy label type specifies the protocol that was assigned to the policies bound to the label. It must match the service type of the content switching virtual server to which the policy that invokes the policy label is bound. For example, you can bind TCP Payload policies to a policy label of type TCP only. Binding TCP Payload policies to a policy label of type HTTP is not supported.

Each policy in a content switching policy label is associated with either a target (which is equivalent to the action that is associated with other types of policies, such as rewrite and responder policies) or a gotoPriorityExpression option and an invoke option. That is, for a given policy in a content switching policy label, you can specify a target, or you can set the gotoPriorityExpression option and the invoke option. Also, if multiple policies evaluate to true, only the target of the last policy that evaluates to true is considered.

You can use either the NetScaler CLI or the GUI to configure content switching policy labels. In the NetScaler CLI, you first create a policy label by using the add cs policy label command. Then, you bind policies to the policy label, one policy at a time, by using the bind cs policy label command. In the NetScaler GUI, you perform both tasks in a single dialog box.

Create a content switching policy label by using the CLI

At the command prompt, type:

```
1 add cs policylabel <labelName> <cpolicylabelType>`
```

Example:

```
1 add cs policylabel testpollab http
```

Rename a content switching policy label by using the CLI

At the command prompt, type:

```
1 rename cs policylabel <labelName> <newName>`
```

Example:

```
1 rename cs policylabel oldPolicyLabelName newPolicyLabelName
```

Rename a content switching policy label by using the GUI

Navigate to **Traffic Management > Content Switching > Policy Labels**, select a policy label and, in the Action list, select **Rename**.

Bind a policy to a content switching policy label by using the CLI

At the command prompt, type the following commands to bind a policy to a policy label and verify the configuration:

```
1 bind cs policylabel <labelName> <policyName> <priority>[-targetVserver  
  <string>] | [-gotoPriorityExpression <expression>] | [-invoke <  
  labeltype> <labelName>] ]  
2  
3 show cs policylabel <labelName>
```

Example:

```
1 bind cs policylabel testpollab test_Pol 100 -targetVserver LBVIP  
2 show cs policylabel testpollab  
3     Label Name: testpollab  
4     Label Type: HTTP  
5     Number of bound policies: 1  
6     Number of times invoked: 0  
7     Policy Name: test_Pol  
8     Priority: 100  
9     Target Virtual Server: LBVIP
```

Note

If a policy is configured with an action, the target virtual server (targetVserver), go to priority expression (gotoPriorityExpression), and invoke (invoke) parameters are not required. If a policy is not configured with an action, you need to configure at least one of the following parameters: targetVserver, gotoPriorityExpression, and invoke.

Unbind a policy from a policy label by using the CLI

At the command prompt, type the following commands to unbind a policy from a policy label and verify the configuration:

```
1 unbind cs policylabel <labelName> <policyName>
2
3 show cs policylabel <labelName>
```

Example:

```
1 unbind cs policylabel testpollab test_Pol
2 show cs policylabel testpollab
3     Label Name: testpollab
4     Label Type: HTTP
5     Number of bound policies: 0
6     Number of times invoked: 0
```

Remove a policy label by using the CLI

At the command prompt, type:

```
1 rm cs policylabel <labelName>
```

Manage a content switching policy label by using the GUI

Navigate to **Traffic Management > Content Switching > Policy Labels**, configure a policy label, bind policies to the label, and optionally specify a priority, gotoPriority expression, and an invoke option.

Bind policies to a Content Switching virtual server

After you create your content switching virtual server and policies, you bind each policy to the content switching virtual server. When binding the policy to the content switching virtual server, you specify the target load balancing virtual server.

Note

If your content switching policy uses a default syntax rule, you can configure a content switching action for the policy. If you configure an action, you must specify the target load balancing virtual server when you are configuring the action, not when you are binding the policy to the content switching virtual server. For more information about configuring a content switching action, see [Configuring a Content Switching Action](#) section.

Bind a policy to a content switching virtual server and select a target load balancing virtual server by using the CLI

At the command prompt, type:

```
1 bind cs vserver <name>[-lbvserver<string> -targetLBVServer<string> -
  policyname <string> -priority <positive_integer>] [-
  gotoPriorityExpression <expression>] [-type ( REQUEST | RESPONSE )]
  [-invoke (<labelType> <labelName>)]
```

Example:

```
1 bind cs vserver csw-vip2 -policyname csw-ape-policy2 -priority 14 -
  gotoPriorityExpression NEXT
2
3 bind cs vserver csw-vip3 -policyname rewrite-policy1 -priority 17 -
  gotoPriorityExpression
4 'q.header("a").count' -flowtype REQUEST -invoke policylabel label1
5
6 bind cs vserver Vserver-CS-1 Vserver-LB-1 -policyname Policy-CS-1 -
  priority 20
```

Note

The parameters, target load balancing virtual server (targetVserver), go to priority expression (gotoPriorityExpression), and the invoke method (invoke) cannot be used if a policy has an action.

Bind a policy to a content switching virtual server and select a target load balancing virtual server by using the GUI

Navigate to **Traffic Management > Content Switching > Virtual Servers**, open a virtual server and, in the

Content Switching Policy Binding section, bind a policy to the virtual server, and specify a target load balancing virtual server.

Configure policy-based logging for content switching

You can configure policy-based logging for a content switching policy. Policy-based logging enables you to specify a format for the log messages. The contents of the log message are defined by using a default syntax expression in the content switching policy. When the content switching action specified in the policy is performed, NetScaler constructs the log message from the expression and writes the message to the log file. Policy-based logging is useful if you want to test and troubleshoot a configuration in which content switching actions identify the target load balancing virtual server at run time.

Note

If multiple policies bound to a given virtual server evaluate to TRUE and are configured with an audit message action, NetScaler does not perform all the audit message actions. It performs only the audit message action that is configured for the policy whose content switching action is performed.

To configure policy-based logging for a content switching policy, you must first configure an audit message action. For more information about configuring an audit message action, see [Configuring NetScaler for audit logging](#). After you configure the audit message action, you specify the action in a content switching policy.

Configure policy-based logging for a content switching policy by using the CLI

At the command line, type the following commands to configure policy-based logging for a content switching policy and verify the configuration:

```
1 set cs policy <policyName> -logAction <string>
2
3 show cs policy <policyName>
```

Example:

```
1 > set cs policy cspol1 -logAction csLogAction
2 Done
3 > show cs policy cspol1
4
5 Policy: cspol1 Rule: TRUE Action: csact1
6 LogAction: csLogAction
7 Hits: 0
8
9 1) CS Vserver: csvs1
10 Priority: 10
11 Done
12 >
```


Configure policy-based logging for a content switching policy by using the GUI

Navigate to **Traffic Management > Content Switching > Policies**, open a policy and, in the Log Action list, select a log action for the policy.

Verify the configuration

To verify that your content switching configuration is correct, you need to view the content switching entities. To verify proper operation after your content switching configuration has been deployed, you can view the statistics that are generated as the servers are accessed.

View the properties of content switching virtual servers

You can view the properties of content switching virtual servers that you have configured on NetScaler. You can use the information to verify whether the virtual server is correctly configured and, if necessary, to troubleshoot. In addition to details such as name, IP address, and port, you can view the various policies bound to a virtual server, and its traffic-management settings.

The content switching policies are displayed in the order of their priority. If more than one policy has the same priority, they are shown in the order in which they are bound to the virtual server.

Note

If you have configured the content switching virtual server to forward traffic to a load balancing virtual server, you can also view the content switching policies by viewing the properties of the load balancing virtual server.

View the properties of content switching virtual servers by using the CLI

To list basic properties of all content switching virtual servers in your configuration, or detailed properties of a specific content switching virtual server, at the command prompt, type one of the following commands:

```
1 show cs vserver
2
3 show cs vserver <name>
```

Example

```
1 1.
2 show cs vserver Vserver-CS-1
3 Vserver-CS-1 (10.102.29.161:80) - HTTP Type: CONTENT
4 State: UP
5 Last state change was at Thu Jun 30 10:48:59 2011
```

```
6 Time since last state change: 6 days, 20:03:00.760
7 Client Idle Timeout: 180 sec
8 Down state flush: ENABLED
9 Disable Primary Vserver On Down : DISABLED
10 Appflow logging: DISABLED
11 Port Rewrite : DISABLED
12 State Update: DISABLED
13 Default: Content Precedence: RULE
14 Vserver IP and Port insertion: OFF
15 Case Sensitivity: ON
16 Push: DISABLED Push VServer:
17 Push Label Rule: none
18
19 ...
20 1) Policy : __ESNS_PREBODY_POLICY Priority:0
21 2) Policy : __ESNS_POSTBODY_POLICY Priority:0
22
23 1) Compression Policy Name: __ESNS_CMP_POLICY Priority: 2147483647
24 GotoPriority Expression: END
25 Flowtype: REQUEST
26
27 2) Rewrite Policy Name: __ESNS_REWRITE_POLICY Priority: 2147483647
28 GotoPriority Expression: END
29 Flowtype: REQUEST
30
31 3) Cache Policy Name: dfbx Priority: 10
32 GotoPriority Expression: END
33 Flowtype: REQUEST
34
35 4) Responder Policy Name: __ESNS_RESPONDER_POLICY Priority: 2147483647
36 GotoPriority Expression: END
37
38 1) Policy: wiki Target: LBVIP2 Priority: 25 Hits: 0
39 2) Policy: plain Target: LBVIP1 Priority: 90 Hits: 0
40 3) Policy: DispOrderTest2 Target: KerbAuthLBVS Priority: 91 Hits: 0
41 4) Policy: test_Pol Target: LBVIP1 Priority: 92 Hits: 0
42 5) Policy: PolicyNameTesting Target: LBVIP1 Priority: 100 Hits: 0
43 Done
44 >
45
46 show cs vserver
47 1) Vserver-CS-1 (10.102.29.161:80) - HTTP Type: CONTENT
48 State: UP
49 ...
50 Appflow logging: DISABLED
51 Port Rewrite : DISABLED
52 State Update: DISABLED
53
54 2) apubendpt (10.111.111.1:80) - HTTP Type: CONTENT
55 State: UP
56 ...
57 Client Idle Timeout: 180 sec
58 Down state flush: DISABLED
```

```
59 ...
60
61 3) apubendpt1 (10.111.111.2:80) - HTTP Type: CONTENT
62 State: UP
63 ...
64 Disable Primary Vserver On Down : DISABLED
65 Appflow logging: DISABLED
66 Port Rewrite : DISABLED
67 State Update: DISABLED
68 ...
```

View content switching policies

You can view the properties of the content switching policies that you defined, such as the name, domain, and URL or expression, and use the information to find any mistakes in the configuration, or to troubleshoot if something is not working as it must.

View the properties of content switching policies by using the CLI

To view the content switching policies configuration details, type one of the following commands:

```
1 show cs policy
2
3 show cs policy <PolicyName>
```

Example:

```
1 show cs policy
2
3 show cs policy Policy-CS-1
```

View the properties of content switching policies by using the GUI

Navigate to **Traffic Management > Content Switching > Policies**, select a policy and, in the Action list, select **Show Bindings**.

View a content switching virtual server configuration by using the visualizer

The Content Switching Visualizer is a tool that you can use to view a content switching configuration in graphical format. You can use the visualizer to view the following configuration items:

- A summary of the load balancing virtual servers to which the content switching virtual server is bound.

- All services and service groups that are bound to the load balancing virtual server and all monitors that are bound to the services.
- The configuration details of any displayed element.
- Any policies bound to the content switching virtual server. These policies need not be content switching policies. Rewrite policies can also be bound to a content switching virtual server.

After you complete the content switching and load balancing configuration, you can export the entire configuration to an application template file.

Note

The Visualizer requires a graphical interface, so it is available only through the GUI.

View a content switching configuration by using the Visualizer in the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**.
2. In the details pane, select the virtual server that you want to view, and then click **Visualizer**.
3. In the **Content Switching Visualizer** window, you can adjust the viewable area as follows:
 - Click the **Zoom In** and **Zoom Out** icons to increase or decrease the viewable area.
 - Click the **Save Image** icon to save the graph as an image file.
 - In the Search in text field, begin typing the name of the item you are looking for. When you have typed enough characters to identify the item, its location is highlighted. To restrict the search, click the drop-down menu and select the type of element that you want to search for.
4. To view configuration details for entities that are bound to this virtual server, you can do the following:
 - To view policies that are bound to the virtual server, in the tool bar at the top of the dialog box select one or more feature-specific policy icons. If policy labels are configured, they appear in the main view area.
 - To view the configuration details for a bound service or service group, click the icon for the service, click the Related Tasks tab, and then click Show Member Services.
 - To view the configuration details for a monitor, click the icon for the monitor, click the **Related Tasks** tab, and then click **View Monitor**.
5. To view statistics for any virtual server in the content switching configuration, click the virtual server for which you want to view statistics, then click the Related Tasks tab, and then click **Statistics**.

6. To view a comparative list of the parameters whose values either differ or are not defined across service containers for a load balancing virtual server, click the icon for a container, click the **Related Tasks** tab, and then click **Service Attributes Diff**.
7. To view monitor binding details for the services in a container, in the Service Attributes Diff dialog box, in the Group column for the container, click **Details**. This comparative list helps you determine which service container has the configuration you want to apply to all the service containers.
8. To view the number of requests received per second at a given point in time by the virtual servers in the configuration, and the number of select per second at a given point in time for rewrite, responder, and cache policies, click Show Stats. The statistical information is displayed on the respective nodes in the Visualizer. This information is not updated in real time. It is refreshed manually. To refresh the information, click Refresh Stats.

Note

This option is available only on NetScaler nCore builds.

9. To copy configuration details for an element to a document or spreadsheet, click the icon for that element, click Related Tasks, click Copy Properties, and then paste the information into a document.
10. To export the entire configuration that is displayed in the Visualizer to an application template file, click the icon for the content switching virtual server, click Related Tasks, and then click Create Template. When creating the application template, you can configure variables in some policy expressions and actions. For more information, see [AppExpert](#).

Customizing the basic content switching configuration

October 18, 2023

After you configure a basic content switching setup, you might need to customize it to meet your requirements. You can configure HTTP and SSL content switching virtual servers to listen on multiple ports instead of creating separate virtual servers. If you want to configure content switching for a specific virtual LAN, you can configure a content switching virtual server with a listen policy.

Support for Multiple Ports for HTTP and SSL Type Content Switching Virtual Servers

You can configure the NetScaler so that HTTP and SSL content switching virtual servers listen on multiple ports, without having to configure separate virtual servers. This feature is especially useful if you

want to base a content switching decision on a part of the URL and other L7 parameters. Instead of configuring multiple virtual servers with the same IP address and different ports, you can configure one IP address and specify the port as *. As a result, the configuration size is also reduced.

To configure an HTTP or SSL content switching virtual server to listen on multiple ports by using the command line

At the command prompt, type:

```
add cs vserver <name> <serviceType> <IPAddress> Port *
```

Example

```
1 > add cs vserver cs1 HTTP 10.102.92.215 *
2   Done
3 > sh cs vserver cs1
4     cs1 (10.102.92.215:*) - HTTP      Type: CONTENT
5     State: UP
6     Last state change was at Tue May 20 01:15:49 2014
7     Time since last state change: 0 days, 00:00:03.270
8     Client Idle Timeout: 180 sec
9     Down state flush: ENABLED
10    Disable Primary Vserver On Down : DISABLED
11    Appflow logging: ENABLED
12    Port Rewrite : DISABLED
13    State Update: DISABLED
14    Default:          Content Precedence: RULE
15    Vserver IP and Port insertion: OFF
16    L2Conn: OFF      Case Sensitivity: ON
17    Authentication: OFF
18    401 Based Authentication: OFF
19    Push: DISABLED  Push VServer:
20    Push Label Rule: none
21    IcmpResponse: PASSIVE
22    RHlstate:  PASSIVE
23    TD: 0
24   Done
```

To configure an HTTP or SSL content switching virtual server to listen on multiple ports by using the configuration utility

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and create a virtual server of type HTTP or SSL.
2. Use an asterisk (*) to specify the port.

Configuring per-VLAN Wildcard Virtual Servers

If you want to configure content switching for traffic on a specific VLAN, you can create a wildcard virtual server with a listen policy that restricts it to processing traffic only on the specified VLAN.

To configure a wildcard virtual server that listens to a specific VLAN by using the command line interface

At the command prompt, type:

```
1 add cs vserver <name> <serviceType> IPAddress `* Port *` -listenpolicy
   <expression> [-listenpriority <positive_integer>]
```

Example:

```
1 add cs vserver Vserver-CS-vlan1 ANY * *
2 -listenpolicy "CLIENT.VLAN.ID.EQ(2)" -listenpriority 10
```

To configure a wildcard virtual server that listens to a specific VLAN by using the configuration utility

Navigate to **Traffic Management > Content Switching > Virtual Servers**, and configure a virtual server. Specify a listen policy that restricts it to processing traffic only on the specified VLAN.

After you have created this virtual server, you bind it to one or more services as described in [Setup basic load balancing](#).

Configuring the Microsoft SQL Server Version Setting

You can specify the version of Microsoft® SQL Server® for a content switching virtual server that is of type MSSQL. The version setting is recommended if you expect some clients to not be running the same version as your Microsoft SQL Server product. The version setting provides compatibility between the client-side and server-side connections by ensuring that all communication conforms to the server's version.

To set the Microsoft SQL Server version parameter by using the command line interface

At the command prompt, type the following commands to set the Microsoft SQL Server version parameter for a content switching virtual server and verify the configuration:

- `set cs vserver <name> -mssqlServerVersion <mssqlServerVersion>`
- `show cs vserver <name>`

Example

```
1 > set cs vserver myMSSQLcsvip -mssqlServerVersion 2008R2 Done > show cs
  vserver myMSSQLcsvip myMSSQLcsvip (192.0.2.13:1433) - MSSQL Type:
  CONTENT State: UP . . . . . Mssql Server Version: 2008R2 . . . . .
  . Done >
```

To set the Microsoft SQL Server version parameter by using the configuration utility

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, configure a virtual server, and specify the protocol as MSSQL.
2. In **Advanced Settings**, specify the **Server Version**.

Enable external health check for UDP and non-HTTP TCP virtual servers

In public clouds, you can use the NetScaler appliance as a second-tier load balancer when the native load balancer is used as a first tier. The native load balancer can be an application load balancer (ALB) or a network load balancer (NLB). Most of the public clouds do not support UDP health probes in their native load balancers. Hence, if these servers are down their actual status might not be updated. As a result, traffic is sent unconditionally to NetScaler, even if the request cannot be serviced. To monitor the health of such applications, NetScaler supports HTTP and TCP health checks.

An HTTP or TCP listener is created for a content switching virtual server when both the `probeProtocol` and `probePort` parameters are configured. The listener reflects the status of the virtual server. The `ProbeSuccessResponseCode` parameter applies only to HTTP and returns the configured string when the probe is successful.

To enable external health check for UDP and non-HTTP TCP virtual servers by using CLI

At the command prompt, type the following command to enable an external TCP health check with the `tcpProbePort` option:

```
1 add cs vserver <name> <protocol> <IPAddress> <port> -ProbeProtocol <
  Http/TCP> -ProbePort <port-num> -ProbeSuccessResponseCode<http-code>
```

Example:

```
1 add cs vserver Vserver-CS-1 HTTP 10.102.29.161 5002 -ProbeProtocol HTTP
  -probeport 5000 -probesuccessResponseCode 200OK
```


To enable external health check for UDP and non-HTTP TCP virtual servers by using GUI


1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and then create a virtual server.
2. Click **Add** to create a virtual server.
3. In the **Basic Settings** pane, update the following details:
 - a) Probe Protocol –Select the protocol (HTTP or TCP) of the probe for an external health check of the virtual server.
 - b) Probe Success Response Code –Enter the response string for a successful probe. This parameter is applicable only for the HTTP protocol.
 - Default Value: 200ok
 - Maximum Length: 63
 - c) Probe Port –Enter the port number for HTTP or TCP monitoring.
4. Click **OK**.

Content Switching for Diameter Protocol

May 2, 2023

For Diameter-protocol traffic, you can configure the NetScaler appliance (or virtual appliance) to act as a relay agent that load balances and forwards a packet to the appropriate destination on the basis of the message content (AVP value in the message). Since the appliance does not perform any application-level processing, it provides relaying services for all diameter applications as specified by the configured content switching policies. Therefore, the appliance advertises the Relay Application ID in the capability exchange answer (CEA) message when the client establishes a diameter connection. You must configure a content switching virtual server, load balancing virtual servers, and services to represent the diameter nodes. When a request reaches the content switching virtual server, the virtual server applies the content switching policies associated with that type of request. After evaluating the policies, the content switching virtual server routes the request to the appropriate load balancing virtual server, which sends it to the appropriate service.

A diameter interface provides a connection between the different diameter nodes. The following sample deployment uses Cx and Rx interfaces. A Cx interface provides a connection between a CSCF and an HSS. An Rx interface provides a connection between a CSCF and a PCRF. All the messages reach the NetScaler appliance. Depending on whether the message is for a Cx or an Rx interface, and on the content switching policies defined, the NetScaler selects an appropriate load balancing server pool.

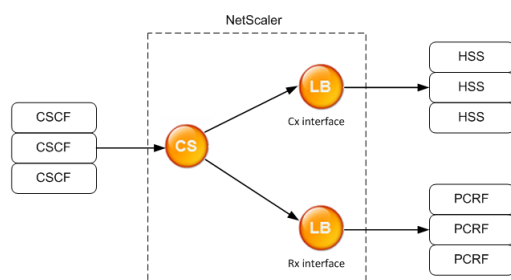

CSCF=Call Session Control Function
HSS=Home Subscriber Server
PCRF=Policy and Charging Rules Function

Sample Configuration

1. For each entity, create a service, a load balancing server, and bind the service to the virtual server.

```

1 add service svc_pcrf[1-3] 1.1.1.1[1-3] DIAMETER 3868
2 add service svc_hss[1-3] 1.1.1.2[1-3] DIAMETER 3868
3 add lb vserver vs_rx DIAMETER -persistenceType DIAMETER -
  persistavpno 263
4 add lb vserver vs_cx DIAMETER -persistenceType DIAMETER -
  persistavpno 263
5 bind lb vserver vs_rx svc_pcrf[1-3]
6 bind lb vserver vs_cx svc_hss[1-3]

```

2. Create a content switching virtual server and two actions (one for each load balancing virtual server). Create two content switching policies and bind these policies to the content switching virtual server, specifying a priority for each policy.

```

1 add cs vserver cs_diameter DIAMETER 10.1.1.10 3868
2 add cs action cx_action -targetLBVserver vs_cx
3 add cs action rx_action -targetLBVserver vs_rx
4 add cs policy cx_policy -rule "DIAMETER.REQ.AUTH_APPLICATION_ID.EQ
  (16777216)" -action cx_action
5 add cs policy rx_policy -rule "DIAMETER.REQ.AUTH_APPLICATION_ID.EQ
  (16777236)" -action rx_action
6 bind cs vserver cs_diameter -policyName rx_policy -priority 100
7 bind cs vserver cs_diameter -policyName cx_policy -priority 110

```

Protecting the content switching setup against failure

October 18, 2023

Content switching might fail when the content switching virtual server goes DOWN or fails to handle excessive traffic, or for other reasons. To reduce the chances of failure, you can take the following

measures to protect the content switching setup against failure:

Configuring a backup virtual server

If the primary content switching virtual server is marked DOWNS or DISABLED, the NetScaler appliance can direct requests to a backup content switching virtual server. It can also send a notification message to the client regarding the site outage or maintenance. The backup content switching virtual server is a proxy and is transparent to the client.

When configuring the backup virtual server, you can specify the configuration parameter `Disable Primary When Down` to ensure that, when the primary virtual server comes back up, it remains the secondary until you manually force it to take over as the primary. It is useful if you want to ensure that any updates to the database on the server for the backup are preserved, enabling you to synchronize the databases before restoring the primary virtual server.

You can configure a backup content switching virtual server when you create a content switching virtual server or when you change the optional parameters of an existing content switching virtual server. You can also configure a backup content switching virtual server for an existing backup content switching virtual server, thus creating cascaded backup content switching virtual servers. The maximum depth of cascaded backup content switching virtual servers is 10. The appliance searches for a backup content switching virtual server that is up and accesses that content switching virtual server to deliver the content.

Note

If a content switching virtual server is configured with both a backup content switching virtual server and a redirect URL, the backup content switching virtual server takes precedence over the redirect URL. The redirect is used when the primary and backup virtual servers are down.

To set up a backup content switching virtual server by using the CLI

At the command prompt, type:

```
1 set cs vserver <name> -backupVserver <string> -disablePrimaryOnDown (ON | OFF)
```

Example

```
1 set cs vserver Vserver-CS-1 -backupVserver Vserver-CS-2 -  
  disablePrimaryOnDown ON
```

To set up a backup content switching virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, configure a virtual server, and specify the protocol as MySQL.
2. In **Advanced Settings**, select **Protection**, and specify a **Backup Virtual Server**.

Diverting excess traffic to a backup virtual server

The spillover option diverts new connections arriving at a content switching virtual server to a backup content switching virtual server when the number of connections to the content switching virtual server exceeds the configured threshold value. The threshold value is dynamically calculated, or you can set the value. The number of established connections (in TCP) at the virtual server is compared with the threshold value. When the number of connections reaches the threshold, new connections are diverted to the backup content switching virtual server.

If the backup content switching virtual servers reach the configured threshold and are unable to take the load, the primary content switching virtual server diverts all requests to the redirect URL. If a redirect URL is not configured on the primary content switching virtual server, subsequent requests are dropped.

To configure a content switching virtual server to divert new connections to a backup virtual server by using the CLI

At the command prompt, type:

```
1 set cs vserver <name> -soMethod <methodType> -soThreshold <
  thresholdValue> -soPersistence <persistenceValue> -
  soPersistenceTimeout <timeoutValue>
```

Example

```
1 set cs vserver Vserver-CS-1 -soMethod Connection -soThreshold 1000 -
  soPersistence enabled -soPersistenceTimeout 2
```

To set a content switching virtual server to divert new connections to a backup virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, configure a virtual server, and specify the protocol as MySQL.
2. In **Advanced Settings**, select **Protection**, and configure spillover.

Configuring a redirection URL

You can configure a redirect URL to communicate the status of the NetScaler appliance if a content switching virtual server of type HTTP or HTTPS is DOWN or DISABLED. This URL can be local or remote.

Redirect URLs can be absolute URLs or relative URLs. If the configured redirect URL contains an absolute URL, the HTTP redirect is sent to the configured location, regardless of the URL specified in the incoming HTTP request. If the configured redirect URL contains only the domain name (relative URL), the HTTP redirect is sent to a location after appending the incoming URL to the domain configured in the redirect URL.

Citrix recommends using an absolute URL. That is, a URL ending in /, for example www.example.com/ instead of a relative URL. A relative URL redirection might result in the vulnerability scanner reporting a false positive.

Note

If a content switching virtual server is configured with both a backup virtual server and a redirect URL, the backup virtual server takes precedence over the redirect URL. A redirect URL is used when the primary and backup virtual servers are down.

When redirection is configured and the content switching virtual server is unavailable, the appliance issues an HTTP 302 redirect to the user's browser.

To configure a redirect URL for when the content switching virtual server is unavailable by using the CLI

At the command prompt, type:

```
1 set cs vservers <name> -redirectURL <URLValue>
```

Example

```
1 set cs vservers Vserver-CS-1 -redirectURL http://www.newdomain.com/
mysite/maintenance
```

To configure a redirect URL for when the content switching virtual server is unavailable by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, configure a virtual server, and specify the protocol as MySQL.
2. In **Advanced Settings**, select **Protection**, and specify a Redirect URL.

Configuring the state update option

The content switching feature enables the distribution of client requests across multiple servers based on the specific content presented to the users. For efficient content switching, the content switching virtual server distributes the traffic to the load balancing virtual servers according to the content type, and the load balancing virtual servers distribute the traffic to the physical servers according to the specified load balancing method.

For smooth traffic management, it is important for the content switching virtual server to know the status of the load balancing virtual servers. The state update option helps to mark the content switching virtual server DOWN if the load balancing virtual server bound to it is marked DOWN. A load balancing virtual server is marked DOWN if all the physical servers bound to it are marked DOWN.

When State Update is disabled:

The status of the content switching virtual server is marked as UP. It remains UP even if there is no bound load balancing virtual server that is UP.

When State Update is enabled:

When you add a content switching virtual server, initially, its status is shown as DOWN. When you bind a load balancing virtual server whose status is UP, the status of the content switching virtual server becomes UP.

If more than one load balancing virtual server is bound and if one of them is specified as the default, the status of the content switching virtual server reflects the status of the default load balancing virtual server.

If more than one load balancing virtual server is bound without any of them being specified as the default, the status of the content switching virtual server is marked UP only if all the bound load balancing virtual servers are UP.

To configure the state update option by using the CLI

At the command prompt, type:

```
1 add cs vserver <name> <protocol> <ipAddress> <port> -stateUpdate  
   ENABLED
```

Example

```
1 add cs vserver csw_vserver HTTP 10.18.250.154 80 -stateupdate ENABLED  
   -cltTimeout 180
```

To configure the state update option by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, configure a virtual server, and specify the protocol as MySQL.
2. In **Advanced Settings**, select **Traffic Settings**, and then select **State Update**.

Flushing the surge queue

When a physical server receives a surge of requests, it becomes slow to respond to the clients that are currently connected to it, which leaves users dissatisfied and disgruntled. Often, the overload also causes clients to receive error pages. To avoid such overloads, the NetScaler appliance provides features such as surge protection, which controls the rate at which new connections to a service can be established.

The appliance does connection multiplexing between clients and physical servers. When it receives a client request to access a service on a server, the appliance looks for an already established connection to the server that is free. If it finds a free connection, it uses that connection to establish a virtual link between the client and the server. If it does not find an existing free connection, the appliance establishes a new connection with the server, and establishes a virtual link between the client and the server. However, if the appliance cannot establish a new connection with the server, it sends the client request to a surge queue. If all the physical servers bound to the load balancing or content switching virtual server reach the upper limit on client connections (max client value, surge protection threshold or maximum capacity of the service), the appliance cannot establish a connection with any server. The surge protection feature uses the surge queue to regulate the speed at which connections are opened with the physical servers. The appliance maintains a different surge queue for each service bound to the virtual server.

The length of a surge queue increases whenever a request comes for which the appliance cannot establish a connection, and the length decreases whenever a request in the queue gets sent to the server or a request gets timed out and is removed from the queue.

If the surge queue for a service or service group becomes too long, you might want to flush it. You can flush the surge queue of a specific service or service group, or of all the services and service groups bound to a load balancing virtual server. Flushing a surge queue does not affect the existing connections. Only the requests present in the surge queue get deleted. For those requests, the client has to make a fresh request.

You can also flush the surge queue of a content switching virtual server. If a content switching virtual server forwards some requests to a particular load balancing virtual server, and the load balancing virtual server also receives some other requests, when you flush the surge queue of the content switching virtual server, only the requests received from this content switching virtual server are flushed. The other requests in the surge queue of the load balancing virtual server are not flushed.

Note

You cannot flush the surge queues of cache redirection, authentication, VPN, or GSLB virtual servers or GSLB services.

Do not use the Surge Protection feature if Use Source IP (USIP) is enabled.

To flush a surge queue by using the CLI

The flush ns surgeQ command works in the following manner:

- You can specify the name of a service, service group, or virtual server whose surge queue has to be flushed.
- If you specify a name while running the command, the surge queue of the specified entity is flushed. If more than one entity has the same name, the appliance flushes the surge queues of all those entities.
- If you specify the name of a service group, and a server name and port while running the command, the appliance flushes the surge queue of only the specified service group member.
- You cannot directly specify a service group member (<serverName> and <port>) without specifying the name of the service group (<name>) and you cannot specify <port> without a <serverName>. Specify the <serverName> and <port> if you want to flush the surge queue for a specific service group member.
- If you run the command without specifying any names, the appliance flushes the surge queues of all the entities present on the appliance.
- If a service group member is identified with a server name, you must specify the server name in this command; you cannot specify its IP address.

At the command prompt, type:

```
1 flush ns surgeQ [-name <name>] [-serverName <serverName> <port>].
```

Examples

```
1 1. flush ns surgeQ - name SVC1ANZGB - serverName 10.10.10.1 80
2 The above command flushes the surge queue of the service or virtual
   server that is named SVC1ANZGB and has IP address as 10.10.10
3
4 2. flush ns surgeQ
5 The above command flushes all the surge queues on the appliance.
```

To flush a surge queue by using the GUI

Navigate to **Traffic Management > Content Switching > Virtual Servers**, select a virtual server and, in the Action list, select **Flush Surge Queue**.

Managing a content switching setup

June 21, 2024

After a content switching setup is configured, it might require periodic changes. When operating systems or software is updated, or hardware wears out and is replaced, you might need to take down your setup. Load on your setup might increase, requiring more resources. You might also modify the configuration to improve performance.

These tasks might require unbinding policies from the content switching virtual server, or disabling or removing content switching virtual servers. After you have changed your setup, you might need to re-enable servers and rebind policies. You might also want to rename your virtual servers.

Unbinding policies from the content switching virtual server

When you unbind a content switching policy from its virtual server, the virtual server no longer includes that policy when determining where to direct requests.

To unbind a policy from a content switching virtual server by using the CLI

At the command prompt, type:

```
unbind cs vserver <name> -policyname <string>
```

Example:

```
unbind cs vserver Vserver-CS-1 -policyname Policy-CS-1
```

To unbind a policy from a content switching virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and open the virtual server.
2. Click **Policies** section, select the policy, and click **Unbind**.

Removing Content Switching Virtual Servers

You normally remove a content switching virtual server only when you no longer require the virtual server. When you remove a content switching virtual server, the NetScaler appliance first unbinds all policies from the content switching virtual server, and then removes it.

To remove a content switching virtual server by using the CLI

At the command prompt, type:

```
rm cs vserver <name>
```

Example:

```
rm cs vserver Vserver-CS-1
```

To remove a content switching virtual server by using the GUI

Navigate to **Traffic Management > Content Switching > Virtual Servers**, select a virtual server, and click **Delete**.

Disabling and Re-Enabling Content Switching Virtual Servers

Content switching virtual servers are enabled by default when you create them. You can disable a content switching virtual server for maintenance. If you disable the content switching virtual server, the state of the content switching virtual server changes to Out of Service. While out of service, the content switching virtual server does not respond to requests.

To disable or re-enable a virtual server by using the CLI

At the command prompt, type one of the following commands:

- `disable cs vserver <name>`
- `enable cs vserver <name>`

Example:

```
disable cs vserver Vserver-CS-1  
enable cs vserver Vserver-CS-1
```

To disable or re-enable a virtual server by using the GUI

Navigate to **Traffic Management > Content Switching > Virtual Servers**, select a virtual server and, in the **Action** list, select **Enable** or **Disable**.

Renaming Content Switching Virtual Servers

You can rename a content switching virtual server without unbinding it. The new name is propagated automatically to all affected parts of the NetScaler configuration.

To rename a virtual server by using the CLI

At the command prompt, type:

```
rename cs vserver <name> <newName>
```

Example:

```
1 `rename cs vserver Vserver-CS-1 Vserver-CS-2`
```

To rename a virtual server by using the GUI

Navigate to **Traffic Management > Content Switching > Virtual Servers**, select a virtual server and, in the **Action** list, select **Rename**.

Managing content switching policies

You can modify an existing policy by configuring the rules or changing the URL of the policy, or you can remove a policy. You can also rename an existing advanced content switching policy. You can create different policies based on the URL. URL-based policies can be of different types, as described in the following table.

For more information, see [Examples of URL-Based Policies](#).

Note

You can configure rule-based content switching using classical policy expressions or advanced policy expressions.

To modify, remove, or rename a policy by using the CLI

At the command prompt, type one of the following commands:

- `set cs policy <policyName> [-rule <expression>] [-action <string>] [-logAction <string>]`
- `rm cs policy <policyName>`
- `rename cs policy <policyName> <newPolicyName>`

Example:

```
1 set cs policy-CS-1 -domain "www.domainxyz.com"
2
3 set cs policy-CS-1 -rule "CLIENT.IP.SRC.SUBNET(22).EQ(10.100.148.0)"
4
5 set cs policy-CS-2 -rule "SYS.TIME.BETWEEN(GMT 2010 Jun,GMT 2010 Jul)"
```

```
6
7 set cs policy-CS-1 -rule http.req.url.startswith ("/sports/")
8
9 rename cs policy-CS-1 Policy-CS-11
10
11 rm cs policy-CS-1
```

To modify, remove, or rename a policy by using the GUI

1. Navigate to **Traffic Management > Content Switching > Policies**.
2. Select the policy, and either delete it, edit it or, in the **Action** list, click **Rename**.

Managing client connections

October 18, 2023

To ensure efficient management of client connections, you can configure the content switching virtual servers on the NetScaler appliance to use the following features:

- **Configuring the ICMP Response.** You can configure the NetScaler appliance to send ICMP responses to PING requests according to your settings. On the IP address corresponding to the virtual server, set the ICMP RESPONSE to VSVR_CNTRLD, and on the virtual server, set the ICMP virtual server RESPONSE.

The following settings can be made on a virtual server:

- When you set ICMP virtual server RESPONSE to PASSIVE on all virtual servers, the NetScaler appliance always responds.
- When you set ICMP virtual server RESPONSE to ACTIVE on all virtual servers, the ADC appliance responds even if one virtual server is UP.
- When you set ICMP virtual server RESPONSE to ACTIVE on some and PASSIVE on others, the ADC appliance responds even if one virtual server set to ACTIVE is UP.

Redirecting Client Requests to a Cache

The NetScaler cache redirection feature redirects HTTP requests to a cache. You can significantly reduce the burden of responding to HTTP requests and improve your website performance through proper implementation of the cache redirection feature.

A cache stores frequently requested HTTP content. When you configure cache redirection on a virtual server, the NetScaler appliance sends cacheable HTTP requests to the cache and non-cacheable

HTTP requests to the origin Web server. For more information on cache redirection, see “[Cache Redirection](#).”

To configure cache redirection on a virtual server by using the CLI

At the command prompt, type:

```
set cs vserver <name> -cacheable <Value>
```

Example `set cs vserver Vserver-CS-1 -cacheable yes`

To configure cache redirection on a virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and open a virtual server.
2. In **Advanced Settings**, select **Traffic Settings**, and select **Cacheable**.

Enabling Delayed Cleanup of Virtual Server Connections

Under certain conditions, you can configure the down state flush setting to terminate existing connections when a service or a virtual server is marked DOWN. Terminating existing connections frees resources and in certain cases speeds recovery of overloaded load balancing setups.

To configure the down state flush setting on a virtual server by using the CLI

At the command prompt, type:

```
set cs vserver <name> -downStateFlush <Value>
```

Example

```
1 set cs vserver Vserver-CS-1 -downStateFlush enabled
```

To configure the down state flush setting on a virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and open a virtual server.
2. In **Advanced Settings**, select **Traffic Settings**, and then select **Down State Flush**.

Rewriting Ports and Protocols for Redirection

Virtual servers and the services that are bound to them might use different ports. When a service responds to an HTTP connection with a redirect, you might need to configure the NetScaler appliance to modify the port and the protocol to ensure that the redirection goes through successfully. You do it by enabling and configuring the `redirectPortRewrite` setting.

To configure HTTP redirection on a virtual server by using the CLI

At the command prompt, type:

```
set cs vserver <name> -redirectPortRewrite <Value>
```

Example

```
1 set cs vserver Vserver-CS-1 -redirectPortRewrite enabled
```

To configure HTTP redirection on a virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and open a virtual server.
2. In **Advanced Settings**, select **Traffic Settings**, and select **Rewrite**.

Inserting the IP Address and Port of a Virtual Server in the Request Header

If you have multiple virtual servers that communicate with different applications on the same service, you must configure the NetScaler appliance to add the IP address and port number of the appropriate virtual server to the HTTP requests that are sent to that service. This setting allows applications running on the service to identify the virtual server that sent the request.

If the primary virtual server is down and the backup virtual server is up, the configuration settings of the backup virtual server are added to the client requests. If you want the same header tag to be added, regardless of whether the requests are from the primary virtual server or backup virtual server, you must configure the required header tag on both virtual servers.

Note

This option is not supported for wildcard virtual servers or dummy virtual servers.

To insert the IP address and port of the virtual server in the client requests by using the CLI

At the command prompt, type:

```
set cs vserver <name> -insertVserverIPPort <vServerIPPORT>
```

Example

```
1 set cs vserver Vserver-CS-1 -insertVserverIPPort 10.201.25.136:80
```

To insert the IP address and port of the virtual server in the client requests by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and open a virtual server.
2. In **Advanced Settings**, select **Traffic Settings** and, in the Virtual Server IP Port Insertion list, select VIPADDR or V6TOV4MAPPING, and specify a port header in the virtual server IP Port Insertion Value.

Setting a Time-out Value for Idle Client Connections

You can configure a virtual server to terminate any idle client connections after a configured time-out period elapses. When you configure this setting, the NetScaler appliance waits for the time you specify and, if the client is idle after that time, it closes the client connection.

To set a time-out value for idle client connections by using the CLI

At the command prompt, type:

```
set cs vserver <name> -cltTimeout <Value>
```

Example

```
1 set cs vserver Vserver-CS-1 -cltTimeout 100
```

To set a time-out value for idle client connections by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and open a virtual server.
2. In **Advanced Settings**, select **Traffic Settings**, and specify a **Client Idle Time-Out** value.

Identifying Connections with the 4-tuple and Layer 2 Connection Parameters

You can now set the L2Conn option for a content switching virtual server. With the L2Conn option set, connections to the content switching virtual server are identified by the combination of the 4-tuple (<source IP>:<source port>::<destination IP>:<destination port>) and Layer 2 connection parameters. The Layer 2 connection parameters are the MAC address, VLAN ID, and channel ID.

To set the L2Conn option for a content switching virtual server by using the CLI

At the command line, type the following commands to configure the L2Conn parameter for a content switching virtual server and verify the configuration:

```
1 - set cs vserver <name> -l2Conn (**ON** | **OFF**)  
2 - show cs vserver <name>
```

Example

```
1 > set cs vserver mycsvserver -l2Conn ON  
2 Done  
3 > show cs vserver mycsvserver  
4     mycsvserver (192.0.2.56:80) - HTTP   Type: CONTENT  
5     State: UP  
6         . . .  
7         . . .  
8     L2Conn: ON Case Sensitivity: ON  
9         . . .  
10        . . .  
11 Done  
12 >
```

To set the L2Conn option for a content switching virtual server by using the GUI

1. Navigate to **Traffic Management > Content Switching > Virtual Servers**, and open a virtual server.
2. In **Advanced Settings**, select **Traffic Settings**, and then select **Layer 2 Parameters**.

Persistence support for content switching virtual server

August 30, 2024

Applications are moving from monolithic architectures toward microservices architecture. Different versions of the same application can co-exist in the microservices architecture. NetScaler appliance must support continuous deployment of applications. It is achieved by platforms that perform Canary deployments (such as Spinnaker). In a continuous deployment setup, a newer version of an application is deployed automatically and exposed to client traffic in stages until the application is stable to take complete traffic. Also, there must be uninterrupted services to the client.

The NetScaler content switching feature enables NetScaler the appliance to distribute client requests across multiple load balancing virtual servers based on the policies bound to the content switching virtual server.

For continuous deployments, content switching is used to select the load balancing virtual server serving various versions of an application.

In content switching, the selection of a load balancing virtual server for a specific application version changes at runtime because of the change in the content switching policies. During this transition, if some sessions are present with older versions of the application, such traffic must continue to be served by older versions only. To support the requirement, the NetScaler appliance maintains persistence across multiple load balancing groups behind a content switching virtual server. Persistence for content switching virtual server enables seamless transition of clients from one version to another.

Supported persistence types on content switching virtual server

The following persistence types are supported on content switching virtual servers.

Persistence type	Description
Source IP	SOURCEIP. Connections from the same client IP address are parts of the same persistence session. For more details, see Source IP address persistence.
HTTP Cookie	COOKIEINSERT. Connections that have the same HTTP Cookie header are parts of the same persistence session. The format of the cookie that the NetScaler appliance inserts is: **NSC_** where NSC_XXXX is the virtual server ID that is derived from the virtual server name. For more details, see HTTP cookie persistence.
SSL Session ID	SSLSESSION. Connections that have the same SSL Session ID are parts of the same persistence session. For more details, see SSL session ID persistence.

You can configure a timeout value for persistence that is based on HTTP cookies. If you set the timeout value to 0, the ADC appliance does not specify the expiration time, regardless of the HTTP cookie version used. The expiration time then depends on the client software, and such cookies are valid only if the software is running.

Depending on the type of persistence that you have configured, the virtual server can support either 250,000 simultaneous persistent connections or any number of persistent connections up to the limits

imposed by the amount of memory on your NetScaler appliance. The following table shows which types of persistence fall into each category.

Persistence type	Number of simultaneous persistent connections supported
Source IP, SSL Session ID	250,000
HTTP Cookie	Memory limit. In CookieInsert, if the timeout is not 0, the number of connections is limited by memory.

Some types of persistence are specific to particular types of virtual server. The following table lists each type of persistence and indicates which types of persistence are supported on which types of virtual server.

Persistence type	HTTP	HTTPS	TCP	UDP/IP	SSL_BridgeSSL_TCP	RTSP	SIP_UDP
SOURCEIP	Yes	Yes	Yes	Yes	Yes	No	No
COOKIEINSERT	Yes	Yes	No	No	No	No	No
SSLSESSION	No	Yes	No	No	Yes	No	No

Backup persistence support

You can configure the content switching virtual server to use the source IP persistence type as the backup persistence type when the cookie persistence type fails. It is useful for canary deployments in the microservices architecture.


When the cookie persistence type fails, the appliance falls back to source IP based persistence only when the client browser does not return any cookie in the request. However, if the browser returns a cookie (not necessarily the persistence cookie) it is assumed that the browser supports cookies and hence backup persistence is not triggered.

You can also set a timeout value for backup persistence. Timeout is the time period for which a persistence session is in effect.


How persistence on content switching virtual server works

Scenario 1: A content switching virtual server without persistence

The following example illustrates the deployment of multiple versions of an application with a content switching virtual server without persistence.

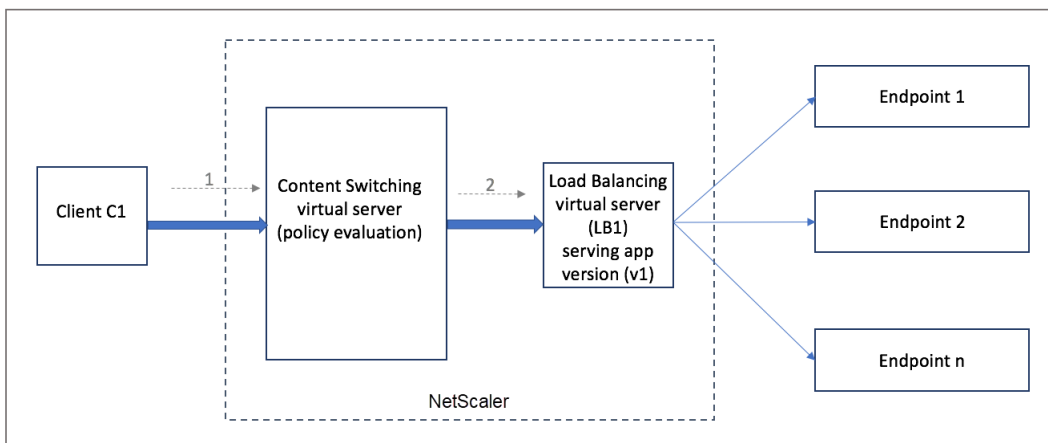

When client C1 sends a request to the application, the request is sent to the content switching virtual server in the NetScaler appliance. The content switching virtual server evaluates the policy and forwards the request to the load balancing virtual server (LB1) that is serving version v1 of the application.

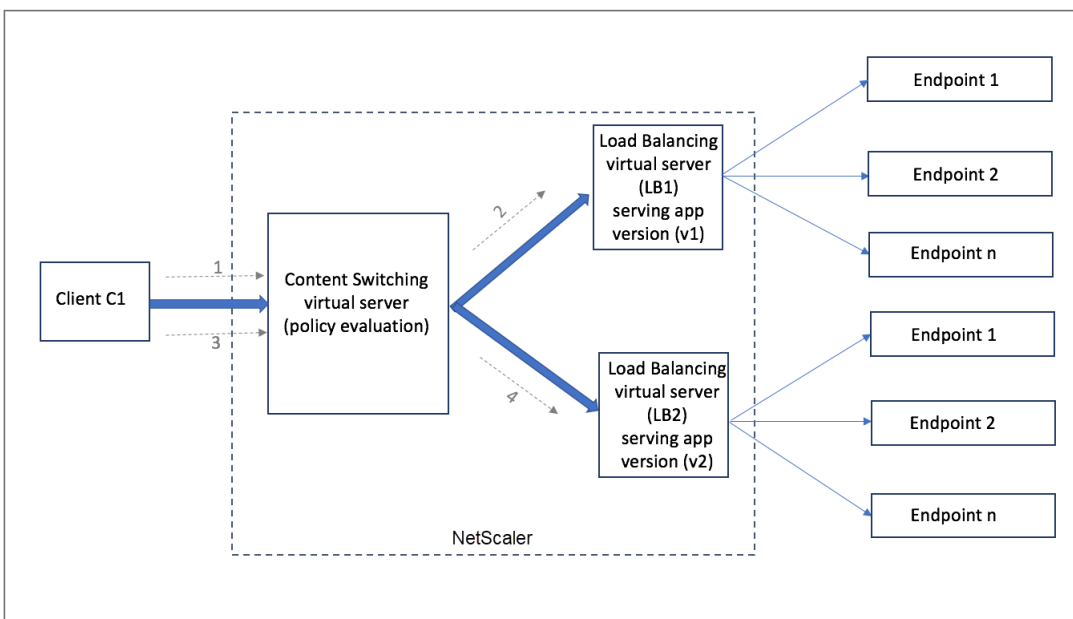


Consider a new version v2 of the application is deployed and has to be exposed to a subset of users. The new load balancing virtual server (LB2) serving the v2 version is bound to the content switching virtual server by the appropriate content switching policy.


When client C1 sends a new request, the policy is evaluated again and the request is forwarded to the load balancing virtual server LB2. Thus, the transactions for stateful applications fail if multiple versions of the application are deployed.

Scenario 2: Content switching virtual server with persistence

The following example illustrates the deployment of multiple versions of the application with a content switching virtual server with persistence.

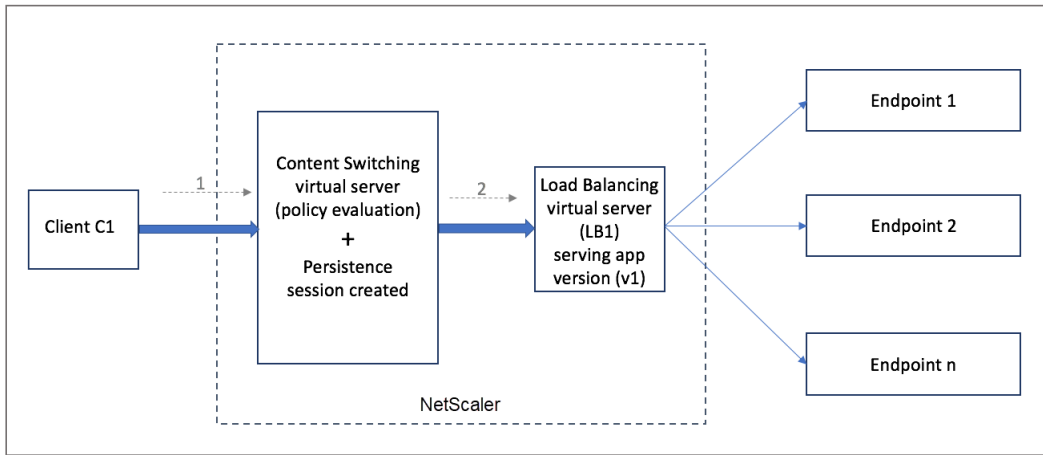


When client C1 sends a request to the application, the request is sent to the content switching virtual server in the NetScaler appliance. The content switching virtual server evaluates the policy, creates a persistence session entry, and forwards the request to the load balancing virtual server LB1 that is serving version v1 of the application.

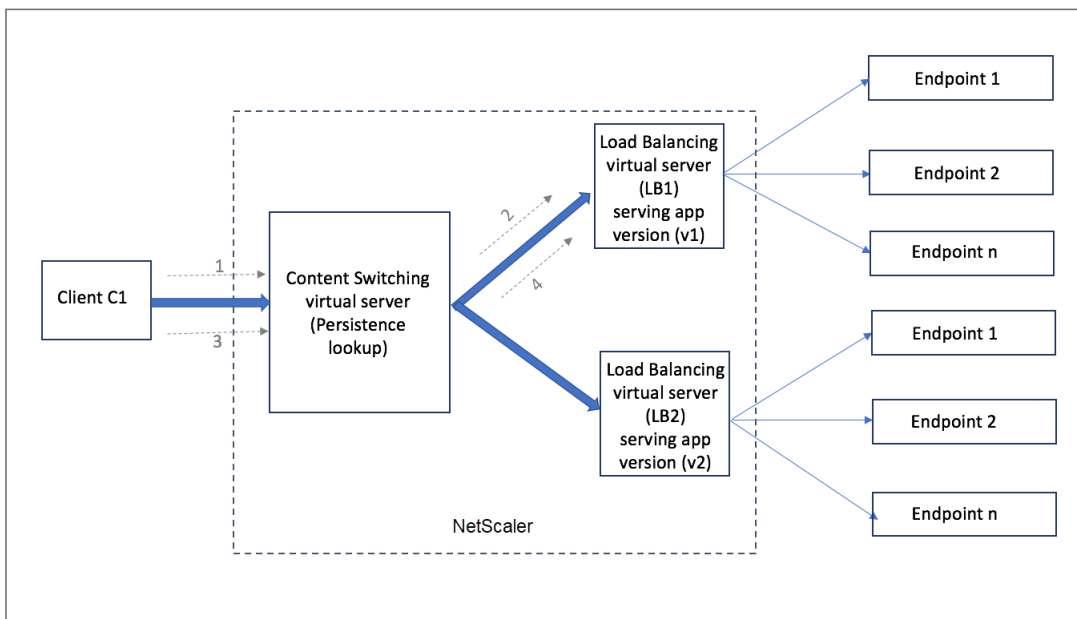

The same client C1 requests again for the application, and the request is sent to the content switching virtual server in the NetScaler appliance. A lookup for the persistence session is performed. Since an existing entry is found, the load balancing virtual server LB1 is selected from the existing persistence session, and the request is forwarded to LB1. Therefore, CS policy evaluation is not performed in this scenario. No breakage of the existing transaction happens with this solution; thus, maintaining the

stateful nature of the application.

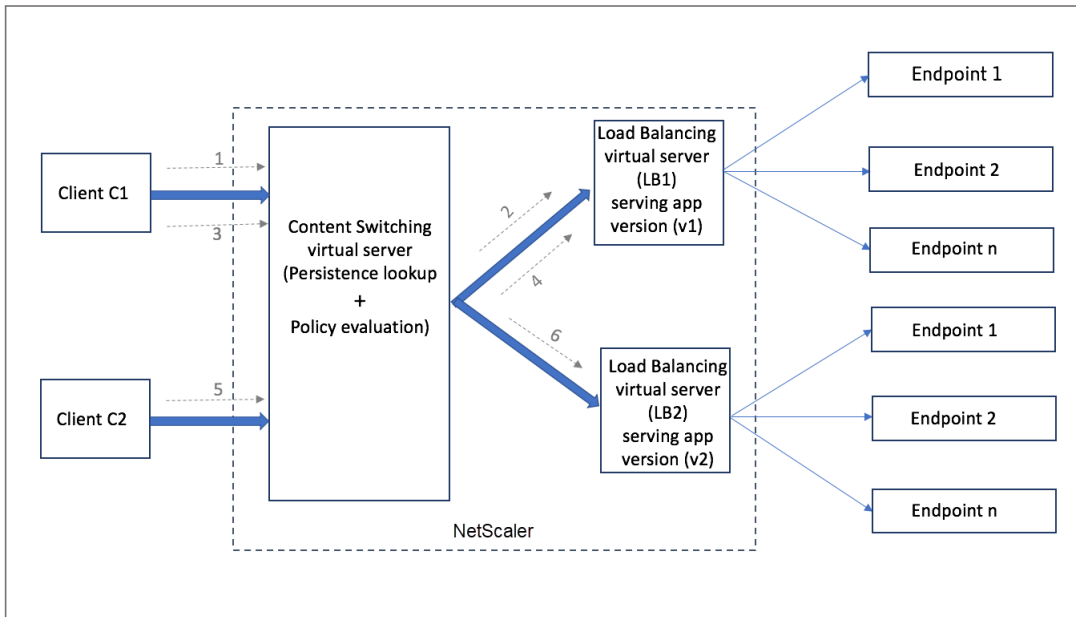

Let's consider a new client C2. The new request C2 is sent to the newer version of the application through policy evaluation as there is no existing persistence session for this client. It results in a successful rollout of the newer version of the application without breaking its statefulness.

Because of the persistence support, customers can deploy multiple content or different versions of the application seamlessly without impacting the existing transactions, specifically for stateful applications. It is not possible without persistence in the picture.

Configure persistence type on content switching virtual server by using the CLI

At the command prompt, type:

```
1 set cs vserver <name> -PersistenceType <type> [-timeout <integer>]
```

Example:

```
1 set cs vserver Vserver-CS-1 -persistenceType SOURCEIP -timeout 60
```

Configure persistence type on content switching virtual server by using the GUI

1. Navigate to **Traffic Management** > **Content Switching** > **Virtual Servers** and click **Add**.
2. In **Basic Settings**, configure the persistence details.

Troubleshooting

September 6, 2023

If the content switching feature does not work as expected after you have configured it, you can use some common tools to access NetScaler resources and diagnose the problem.

Resources for troubleshooting content switching

For best results, use the following resources to troubleshoot a content switching issue on a NetScaler appliance:

- Configuration file
- `newslog` file generated when the issue occurred
- Trace files
- Network topology diagram for the network setup of the customer
- NetScaler documentation, such as release notes, Knowledge Center articles, and Product documentation.

In addition to the preceding resources, the following tools expedite troubleshooting:

- The `iehttpheaders` or a similar utility
- The Wireshark application customized for the NetScaler trace files
- An SSH utility for command line access
- A HyperTerminal utility to access the console

Troubleshooting content switching issues

The most common content switching issues involve the content switching feature not working at all, or working only intermittently, and Service Unavailable responses.

- **Issue**

The content switching feature is not functioning.

- **Resolution**

Check the configuration as follows:

- Verify that the appliance is licensed for content switching.
- Verify that the feature is enabled.
- From the configuration file, verify that valid content switching policies are correctly bound to the load balancing virtual servers.

- **Issue**

Client receives a 503 - Service Unavailable response.

Resolution

- Verify the URL and policy bindings. The client receives the 503 response when none of the policies you have configured is evaluated and no default load balancing virtual server is defined and bound to the content switching virtual server.
- From the configuration, verify the policies and the URL is accessed by the client.
- Verify that for every type of request the respective policy is evaluated. If the policy is not evaluated, check the policy expression and update it if necessary.
- Verify the URL and HTTP request and response headers. To do so, record an [HTTPHeader](#) trace and, if necessary, record the packet traces on the appliance and the client.

- **Issue**

Intermittently, the content switching feature is not working as expected.

Resolution

- Study the network topology diagram, if available, of the setup to understand the various devices installed between the client and the servers.
- Verify the configuration and policy bindings. Make sure that the URL in the policy expression matches to the one in the client request.
- Verify that appropriate priorities are assigned to the policies. An incorrect precedence or priority assigned to a policy can cause a problem.
- Run the following commands to verify the bindings and the values of the policy select counters in the output of the commands:

```
show cs vserver \<CS VServer\>
```

```
show cs policy \<CS Policy\>
```

```
stat cs vserver \<CS VServer\>
```

- Using [iehttpheaders](#) or a similar utility, determine whether the HTTP headers for the requests or responses provide any pointers to the issue.
- Check the release notes and Knowledge Center articles.
- If the issue is still not resolved, contact Citrix technical support with appropriate data for further investigation.

DataStream

May 2, 2023

The NetScaler DataStream feature provides an intelligent mechanism for request switching at the database layer by distributing requests based on the SQL query being sent.

When deployed in front of database servers, a NetScaler appliance ensures optimal distribution of traffic from the application servers and Web servers. Administrators can segment traffic according to information in the SQL query and based on database names, user names, character sets, and packet size.

You can configure load balancing to switch requests based on load balancing algorithms. Alternately, you can elaborate the switching criteria by configuring content switching to make a decision based on an SQL query parameter. You can further configure monitors to track the state of database servers.

Note


NetScaler DataStream is supported only for MySQL and MS SQL databases. For information about the supported protocol version, character sets, special queries, and transactions, see DataStream Reference.

How DataStream works

In DataStream, the ADC appliance is placed in-line between the application or Web servers and the database servers. On the appliance, the database servers are represented by services.

A typical DataStream deployment consists of the entities described in the following diagram.

Figure 1. DataStream Entity Model

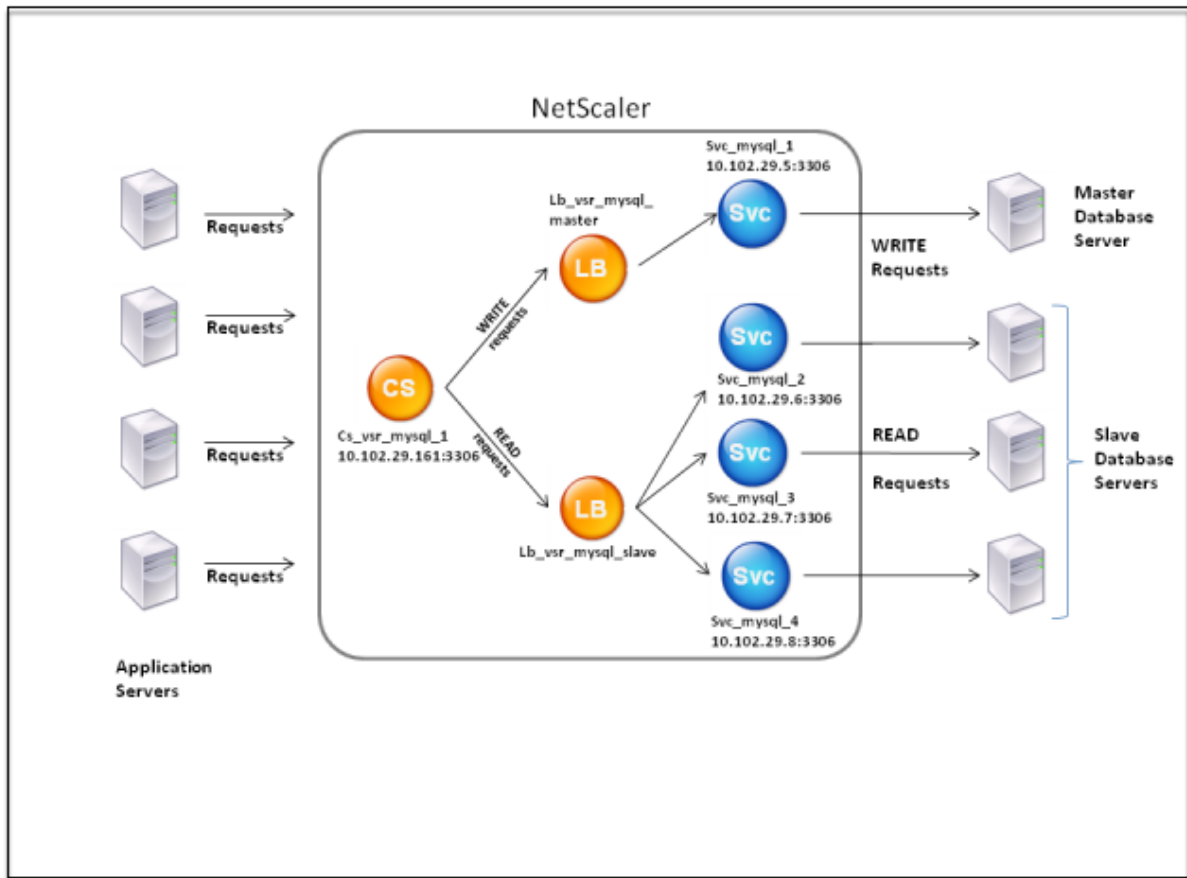

As shown in this figure, a DataStream configuration can consist of:

- An optional content switching virtual server (CS).
- A load balancing setup consisting of load balancing virtual servers (LB1 and LB2).
- Services (Svc1, Svc2, Svc3, and Svc4).
- Content switching policies (optional).

The clients (application or Web servers) send requests to the IP address of a content switching virtual server (CS) configured on the NetScaler appliance. The appliance, then, authenticates the clients using the database user credentials configured on the appliance. The content switching virtual server (CS) applies the associated content switching policies to the requests. After evaluating the policies, the content switching virtual server (CS) routes the requests to the appropriate load balancing virtual server (LB1 or LB2). Then, the load balancing virtual server distributes the requests to the appropriate database servers (represented by services on the appliance) based on the load balancing algorithm. The NetScaler appliance uses the same database user credentials to authenticate the connection with the database server.

If a content switching virtual server is not configured on the appliance, the clients (application or Web servers) send their requests to a load balancing virtual server configured on the appliance. The NetScaler appliance authenticates the client by using the database user credentials configured on

the appliance, and then uses the same credentials to authenticate the connection with the database server. The load balancing virtual server distributes the requests to the database servers according to the load balancing algorithm. The most effective load balancing algorithm for database switching is the least connection method.

DataStream uses connection multiplexing to enable multiple client-side requests to be made over the same server-side connection. The following connection properties are considered:

- User name
- Database name
- Packet size
- Character set

Configure database users

January 20, 2021

In databases, a connection is always stateful, which means that when a connection is established, it must be authenticated.

Configure your database user name and password on the NetScaler appliance. For example, if you have a user John configured on the database, you need to configure the user John on the ADC too. Adding database user names and passwords on the ADC adds them to the `nsconfig` file.

Note

Names are case sensitive.

The ADC uses these user credentials to authenticate the clients, and then authenticate the server connections with the database servers.

Add a database user by using the CLI

At the command prompt, type

```
add db user <username> - password <password>
```

Example:

```
1 add db user nsdbuser -password dd260427edf
```

Add a database user by using the GUI

Navigate to **System > User Administration > Database Users**, and configure a database user.

If you have changed the password of the database user on the database server, you must reset the password of the corresponding user configured on the ADC appliance.

Reset the password of a database user by using the CLI

At the command prompt, type

```
1 set db user <username> -password <password>
```

Example:

```
1 set db user nsdbuser -password dd260538abs
```

Reset the password of database users by using the GUI

Navigate to **System > User Administration > Database Users**, select a user, and enter new values for the password.

If a database user no longer exists on the database server, you can remove the user from the ADC appliance. However, if the user continues to exist on the database server and you remove the user from the ADC appliance, any request from the client with this user name does not get authenticated. As a result, the request is not routed to the database server.

Remove a database user by using the CLI

At the command prompt, type

```
1 rm db user <username>
```

Example:

```
1 rm db user nsdbuser
```

Remove a database user by using the GUI

Navigate to **System > User Administration > Database Users**, select a user, and click **Delete**.

Configure a database profile

January 20, 2021

A database profile is a named collection of parameters that is configured once but applied to multiple virtual servers that require those particular parameter settings. After creating a database profile, you bind it to load balancing or content switching virtual servers. You can create as many profiles as you need.

Create a database profile by using the CLI

At the command line, type the following commands to create a database profile and verify the configuration:

```
1 add db dbProfile <name> [-interpretQuery ( YES | NO )] [-stickiness (
   YES | NO )] [-kcdAccount <string>]
2
3 show db dbProfile
```

Example:

```
1 > add dbProfile myDBProfile -interpretQuery YES -stickiness YES -
   kcdAccount mykcdacct
2 Done
3 > show dbProfile myDBProfile
4 Name: myDBProfile
5 Interpret Query: YES
6 Stickyness: YES
7 KCD Account: mykcdacct
8 Reference count: 0
9
10 Done
11 >
```

Create a database profile by using the GUI

Navigate to **System > Profiles** and, on the **Database Profiles** tab, configure a database profile.

Bind a database profile to a load balancing or content switching virtual server by using the CLI

At the command line, type:

```
1 set (lb | cs) vserver <name> -dbProfileName <string>
```

Bind a database profile to a load balancing or content switching virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** or **Traffic Management > Content Switching > Virtual Servers**, and open a virtual server.
2. In **Advanced Settings**, select **Profiles** and, in the **DB Profile** list, select a profile to bind to the virtual server. To create a profile, click plus (+).

Configure load balancing for DataStream

May 2, 2023

Before configuring a load balancing setup, you must enable the load balancing feature. Then, begin by creating at least one service for each database server in the load balancing group. With the services configured, you are ready to create a load balancing virtual server and bind the services to the virtual server.

Note:

For databases, the load balancing can only occur on homogenous database servers (database servers that contain the exact same databases). For a configuration that contains unique databases on different servers, you must use content switching. If some of your database servers host identical content, you can use load balancing on those servers only. You can then use content switching policies to send requests to the load balancing virtual server that manages load balancing for those databases.

The NetScaler appliance currently stores the database name and login information during the database session. When a query is made to the database, it uses that information to connect to the specific database server.

Parameter values specific to DataStream

- Protocol

Use the MYSQL protocol type for MySQL databases and MSSQL protocol type for MS SQL databases while configuring virtual servers and services. The MySQL and TDS protocols are used by the clients to communicate with the respective database servers by using SQL queries. For information about the MySQL protocol, see <http://dev.mysql.com/doc/internals/en/client-server-protocol.html>. For information about the TDS protocol, see [http://msdn.microsoft.com/en-us/library/dd304523\(v=prot.13\).aspx](http://msdn.microsoft.com/en-us/library/dd304523(v=prot.13).aspx).

- Port

Port on which the virtual server listens for client connections. Use port 3306 for MySQL database servers.

- Method

It is recommended that you use the Least Connection method for better load balancing and lower server load. However, other methods, such as Round Robin, Least Response Time, Source IP Hash, Source IP Destination IP Hash, Least Bandwidth, Least Packets, and Source IP Source Port Hash, are also supported.

Note: URL Hash method is not supported for DataStream.

- MS SQL Server version

If you are using the Microsoft SQL Server, and you expect some clients running a different version from your Microsoft SQL Server product, set the Server Version parameter for the load balancing virtual server. The version setting provides compatibility between the client-side and server-side connections by ensuring that all communication conforms to the server's version. For more information about setting the Server Version parameter, see [Configuring the MySQL and Microsoft SQL server version setting](#).

- MySQL Server version

If you are using the MySQL Server, and you expect some clients running a different version from your MySQL Server product, set the Server Version parameter for the load balancing virtual server. The version setting provides compatibility between the client-side and server-side connections by ensuring that all communication conforms to the server's version. For more information about setting the Server Version parameter, see [Configuring the MySQL and Microsoft SQL server version setting](#).

Configure content switching for DataStream

May 2, 2023

You can segment traffic according to information in the SQL query, based on database names, user names, character sets, and packet size.

You can configure content switching policies with Advanced policy expressions to switch content based on connection properties. For example, user name and database name, command parameters, and the SQL query to select the server.

The Advanced policy expressions evaluate traffic associated with MYSQL and MS SQL database servers. Use request-based expressions in Advanced policy policies to make request switching decisions at the

content switching virtual server bind point. Use response-based expressions (expressions that begin with MYSQL.RES) to evaluate server responses to user-configured health monitors.

For information about Advanced policy expressions, see [Advanced policy Expressions: DataStream](#).

Note:

For databases, the load balancing can only occur on homogenous database servers (database servers that contain the exact same databases). For a configuration that contains unique databases on different servers, you must use content switching. If some of your database servers host identical content, you can use load balancing on those servers only. You can then use content switching policies to send requests to the load balancing virtual server that manages load balancing for those databases.

The NetScaler appliance currently stores the database name and login information during the database session. When a query is made to the database, it uses that information to connect to the specific database server.

Parameter values specific to DataStream

- Protocol

Use the MYSQL protocol type for MySQL databases and MSSQL protocol type for MS SQL databases while configuring virtual servers and services. The MySQL and TDS protocols are used by the clients to communicate with the respective database servers by using SQL queries. For information about the MySQL protocol, see <http://dev.mysql.com/doc/internals/en/client-server-protocol.html>. For information about the TDS protocol, see [http://msdn.microsoft.com/en-us/library/dd304523\(v=prot.13\).aspx](http://msdn.microsoft.com/en-us/library/dd304523(v=prot.13).aspx).

- Port

Port on which the virtual server listens for client connections. Use port 3306 for MySQL database servers.

- MS SQL Server Version

If you use Microsoft SQL Server, and expect some clients running a different version from your Microsoft SQL Server product, set the Server Version parameter for the content switching virtual server. The version setting provides compatibility between the client-side and server-side connections by ensuring that all communication conforms to the server's version. For more information about setting the Server Version parameter, see [Configuring the Microsoft SQL Server Version Setting](#).

Configure monitors for DataStream

January 20, 2021

To track the state of each load balanced database server in real time, you need to bind a monitor to each service. The monitor is configured to test the service by sending periodic probes to the service, sometimes referred to as performing a health check. If the monitor receives a timely response to its probes, it marks the service as UP. If it does not receive a timely response to the designated number of probes, it marks the service as DOWN.

For DataStream, you need to use the built-in monitors: MYSQL-ECV and MSSQL-ECV. Using this monitor you can send an SQL request and parse the response for a string.

Before configuring monitors for DataStream, you must add database user credentials to your NetScaler appliance. For information about configuring monitors, see [Configure monitors in a load balancing setup](#).

When you create a monitor, a TCP connection is established with the database server, and the connection is authenticated by using the user name provided while creating the monitor. You can then run an SQL query to the database server and evaluate the server response to check whether it matches the configured rule.

The following examples are for MYSQL servers.

Examples:

In the following example, the value of the error message is evaluated to determine the state of the server.

```
1 add lb monitor lb_mon1 MYSQL-ECV -sqlQuery "select * from
2 table2;" -evalrule "mysql.res.error.message.contains("Invalid
3 User")"-database "NS" -userName "user1"
```

In the following example, the number of rows in the response is evaluated to determine the state of the server.

```
1 add lb monitor lb_mon4 MYSQL-ECV -sqlQuery "select * from
2 table4;" -evalrule "mysql.res.atleast_rows_count(7)" -database "NS" -
  userName "user2"
```

In the following example, the value of a particular column is evaluated to determine the state of the server.

```
1 add lb monitor lb_mon3 MYSQL-ECV
2 -sqlQuery "select * from ABC;" -evalrule "mysql.res.row(1).double_elem
  (2) == 345.12"
3 -database "NS" -userName "user3"
```


The following examples are for MSSQL servers.

Examples:

In the following example, the value of the error message is evaluated to determine the state of the server.

```
1 add lb monitor lb_mon1 MSSQL-ECV -sqlQuery "select * from
2 table2;" -evalrule "mssql.res.error.message.contains("Invalid
3 User")"-database "NS" -userName "user1"
```

In the following example, the number of rows in the response is evaluated to determine the state of the server.

```
1 add lb monitor lb_mon4 MSSQL-ECV -sqlQuery "select * from
2 table4;" -evalrule "mssql.res.atleast_rows_count(7)" -database "NS" -
  userName "user2"
```

In the following example, the value of a particular column is evaluated to determine the state of the server.

```
1 add lb monitor lb_mon3 MSSQL-ECV
2 -sqlQuery "select * from ABC;" -evalrule "mssql.res.row(1).double_elem
  (2) == 345.12"
3 -database "NS" -userName "user3"
```

Use Case 1: Configure DataStream for a primary/secondary database architecture


May 2, 2023

A commonly used deployment scenario is the primary/secondary database architecture where the primary database replicates all information to the secondary databases.

For primary/secondary database architecture, you might want all WRITE requests to be sent to the primary database and all READ requests to the secondary databases.

The following figure shows the entities and the values of the parameters that you need to configure on the appliance.

Figure 1. DataStream Entity Model for Primary/Secondary Database Setup

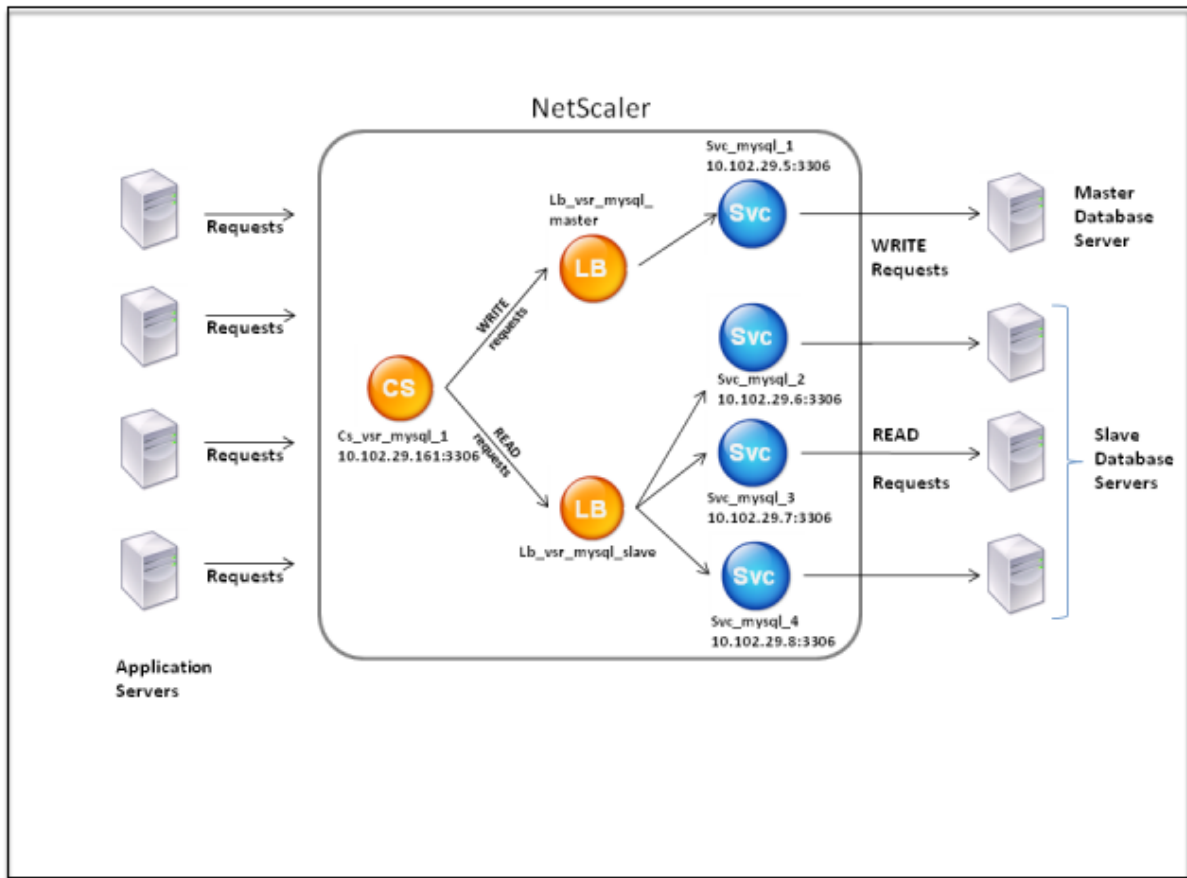

In this example scenario, a service (Svc_mysql_1) is created to represent the primary database and is bound to a load balancing virtual server (Lb_vsr_mysql_primary). Three more services (Svc_mysql_2, Svc_mysql_3, and Svc_mysql_4) are created to represent the three secondary databases, and they are bound to another load balancing virtual server (Lb_vsr_mysql_secondary).

A content switching virtual server (Cs_vsr_mysql_1) is configured with associated policies to send all WRITE requests to the load balancing virtual server, Lb_vsr_mysql_primary. All READ requests are sent to the load balancing virtual server, Lb_vsr_mysql_secondary.

When a request reaches the content switching virtual server, the virtual server applies the associated content switching policies to that request. After evaluating the policies, the content switching virtual server routes the request to the appropriate load balancing virtual server, which sends it to the appropriate service.

The following table lists the names and values of the entities and the policy configured on the NetScaler appliance.

Entity Type	Name	IP Address	Protocol	Port	Expression
Services	Svc_mysql_1	198.51.100.5	MYSQL	3306	NA

Entity Type	Name	IP Address	Protocol	Port	Expression
	Svc_mysql_2	198.51.100.6	MYSQL	3306	NA
	Svc_mysql_3	198.51.100.7	MYSQL	3306	NA
	Svc_mysql_4	198.51.100.8	MYSQL	3306	NA
Monitor	lb_mon1	NA	MYSQL-ECV	NA	mysql.res.atleast_rows_co
Load balancing virtual servers	Lb_vsr_mysql_pri	198.51.100.201	MYSQL	3306	NA
	Lb_vsr_mysql_sec	198.51.100.202	MYSQL	3306	NA
Content switching virtual server	Cs_vsr_mysql_1	198.51.100.161	MYSQL	3306	NA
Content switching policy	Cs_select	NA	NA	NA	MYSQL.REQ. QUERY. COMMAND. contains(" select")

Table 1. Entity and Policy Names and Values

To configure DataStream for a primary/secondary database setup by using the command line interface

At the command prompt, type

```

1 add db user user1 -password user1
2
3 add service Svc_mysql_1 198.51.100.5 mysql 3306
4
5 add service Svc_mysql_2 198.51.100.6 mysql 3306
6
7 add service Svc_mysql_3 198.51.100.7 mysql 3306
8
9 add service Svc_mysql_4 198.51.100.8 mysql 3306
10
11 add lb monitor lb_mon1 MYSQL-ECV -sqlQuery "select * from table1;" -
    evalrule "mysql.res.atleast_rows_count(1)" -database "NS" -userName
    "user1"
12
13 add lb vserver Lb_vsr_mysql_primary mysql 198.51.100.201 3306
14
```

```
15 add lb vserver Lb_vsr_mysql_secondary mysql 198.51.100.202 3306
16
17 bind lb vserver Lb_vsr_mysql_primary svc_mysql_1
18
19 bind lb vserver Lb_vsr_mysql_secondary svc_mysql_2
20
21 bind lb vserver Lb_vsr_mysql_secondary svc_mysql_3
22
23 bind lb vserver Lb_vsr_mysql_secondary svc_mysql_4
24
25 add cs vserver Cs_vsr_mysql_1 mysql 198.51.100.161 3306
26
27 add cs policy Cs_select -rule "MYSQL.REQ.QUERY.COMMAND.contains(\"
    select\")"
28
29 bind cs vserver Cs_vsr_mysql_1 Lb_vsr_mysql_primary
30
31 bind cs vserver Cs_vsr_mysql_1 Lb_vsr_mysql_secondary -policy
    Cs_select -priority 10
32
33 bind service Svc_mysql_1 -monitorName lb_mon1
34
35 bind service Svc_mysql_2 -monitorName lb_mon1
36
37 bind service Svc_mysql_3 -monitorName lb_mon1
38
39 bind service Svc_mysql_4 -monitorName lb_mon1
```

Use Case 2: Configure the token method of load balancing for DataStream

May 2, 2023

You can configure the token method of load balancing for DataStream to base the selection of database servers on the value of the token extracted from the client (application or web server) requests. These tokens are defined by using SQL expressions. For subsequent requests with the same token, the NetScaler appliance sends the requests to the same database server that handled the initial request. Requests with the same token are sent to the same database server until the maximum connection limit is reached or the session entry has aged out.


You can use the following sample SQL expressions to define tokens:

MySQL	MS SQL
MYSQL.REQ.QUERY.TEXT	MSSQL.REQ.QUERY.TEXT

MySQL	MS SQL
MYSQL.REQ.QUERY.TEXT(n)	MSSQL.REQ.QUERY.TEXT(n)
MYSQL.REQ.QUERY.COMMAND	MSSQL.REQ.QUERY.COMMAND
MYSQL.CLIENT.USER	MSSQL.CLIENT.USER
MYSQL.CLIENT.DATABASE	MSSQL.CLIENT.DATABASE
MYSQL.CLIENT.CAPABILITIES	

The following example shows how the NetScaler DataStream feature works when you configure the token method of load balancing.

Figure 1. DataStream and the Token Method of Load Balancing

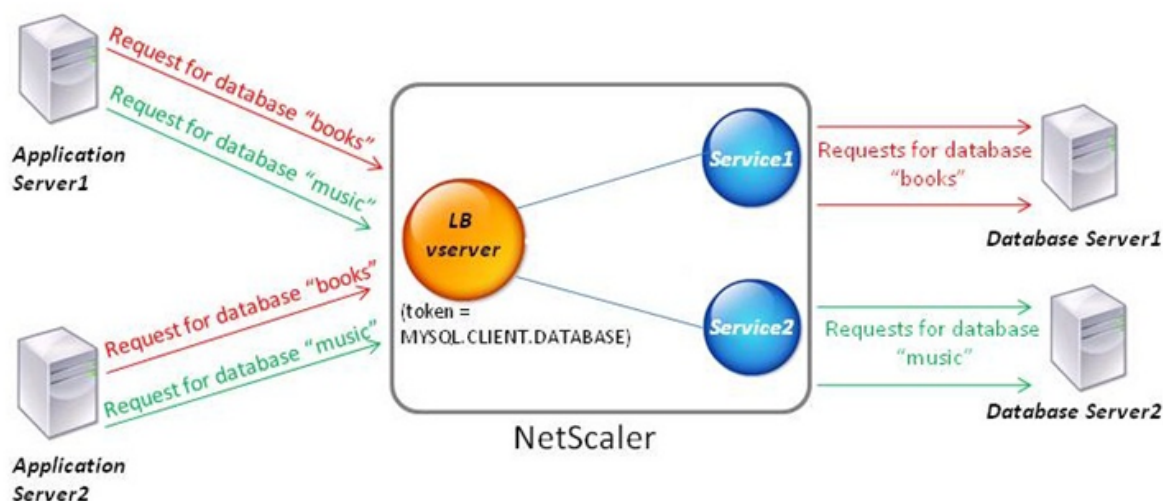

In this example, the token is the name of the database. A request with token books is sent to Database Server1 and a request with token music is sent to Database Server2. All subsequent requests with token books are sent to Database Server1 and requests with token music are sent to Database Server2. This configuration provides pseudo persistence with the database servers.

Configure this example by using the CLI

At the command prompt, type:

```

1 add service Service1 192.0.2.9 MYSQL 3306
2
3 add service Service2 192.0.2.11 MYSQL 3306
4

```

```
5 add lb vserver token_lb_vserver MYSQL 192.0.2.15 3306 -lbmethod token -  
   rule MYSQL.CLIENT.DATABASE  
6  
7 bind lb vserver token_lb_vserver Service1  
8  
9 bind lb vserver token_lb_vserver Service2
```

Configure this example by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, configure a virtual server, and specify the protocol as **MYSQL**.
2. Click in the **Service** section, and configure two services specifying the protocol as **MYSQL**. Bind these services to the virtual server.
3. In **Advanced Settings**, click **Method** and, in the **Load Balancing Method** list, select **TOKEN** and specify the expression as **MYSQL.CLIENT.DATABASE**.

Use Case 3: Log MSSQL transactions in transparent mode

May 2, 2023

You can configure the NetScaler appliance to operate transparently between MSSQL clients and servers, and to only log or analyze details of all client-server transactions. Transparent mode is designed so that the NetScaler appliance only forwards MSSQL requests to the server, and then relays the server's responses to the clients. As the requests and responses pass through the appliance, the appliance logs information gathered from them, as specified by the audit logging or AppFlow configuration, or collects statistics, as specified by the Action Analytics configuration. You do not have to add database users to the appliance.

When operating in transparent mode, the NetScaler appliance does not perform load balancing, content switching, or connection multiplexing for the requests. However, it responds to a client's pre-login packet on behalf of the server so that it can prevent encryption from being agreed upon during the pre-login handshake. The login packet and subsequent packets are forwarded to the server.

Summary of configuration tasks

For logging or analyzing MSSQL requests in transparent mode, you have to do the following:

- Configure the NetScaler appliance as the default gateway for both clients and servers.
- Do one of the following on the NetScaler appliance:

- **Configure the use source IP address (USIP) option globally:** Create a load balancing virtual server with a wildcard IP address and the port number on which the MSSQL servers listen for requests (a port-specific wildcard virtual server). Then, enable the USIP option globally. If you configure a port-specific wildcard virtual server, you do not have to create MSSQL services on the appliance. The appliance discovers the services based on the destination IP address in the client requests.
 - **If you do not want to configure the USIP option globally:** Create MSSQL services with the USIP option enabled on each of them. If you configure services, you do not have to create a port-specific wildcard virtual server.
- Configure audit logging, AppFlow, or Action Analytics to log or collect statistics about the requests. If you configure a virtual server, you can bind your policies either to the virtual server or to the global bind point. If you do not configure a virtual server, you can bind your policies to only the global bind point.

Configure transparent mode by using a wildcard virtual server

You can configure transparent mode by configuring a port-specific wildcard virtual server and enabling Use Source IP (USIP) mode globally. When a client sends its default gateway (the NetScaler appliance) a request with the IP address of an MSSQL server in the destination IP address header, the appliance checks whether the destination IP address is available. If the IP address is available, the virtual server forwards the request to the server. Otherwise, it drops the request.

Create a wildcard virtual server by using the CLI

At the command prompt, type the following commands to create a wildcard virtual server and verify the configuration:

```
1 add lb vserver <name> <serviceType> <IPAddress> <port>
2
3 show lb vserver <name>
```

Example:

```
1 > add lb vserver wildcardLbVs MSSQL * 1433
2 Done
3 > show lb vserver wildcardLbVs
4   wildcardLbVs (*:1433) - MSSQL   Type: ADDRESS
5   State: UP
6   . . .
7
8 Done
9 >
```

Create a wildcard virtual server by using the GUI

Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and create a virtual server. Specify MSSQL as the protocol and * as the IP address.

Enable Use Source IP (USIP) mode globally by using the CLI

At the command prompt, type the following commands to enable USIP mode globally and verify the configuration:

```
1 enable ns mode USIP
2
3 show ns mode
```

Example:

```
1 > enable ns mode USIP
2 Done
3 > show ns mode
4
5 Mode                               Acronym
6   Status                               -----
7   . . .
8 3) Use Source IP                       USIP                                ON
9   . . .
10 Done
11 >
```

Enable USIP mode globally by using the GUI

1. Navigate to **System > Settings** and, in Modes and Features, select **Configure Modes**.
2. Select **Use Source IP**.

Configure transparent mode by using MSSQL services

You can configure transparent mode by configuring MSSQL services and enabling USIP on each service. When a client sends its default gateway (the NetScaler appliance) a request with the IP address of an MSSQL server in the destination IP address header, the appliance forwards the request to the destination server.

Create an MSSQL service and enable USIP mode on the service by using the CLI

At the command prompt, type the following commands to create an MSSQL service, with USIP enabled, and verify the configuration:

```
1 add service <name> (<IP> | <serverName>) <serviceType> <port> -usip YES
2
3 show service <name>
```

Example

```
1 > add service myDBservice 192.0.2.0 MSSQL 1433 -usip YES
2 Done
3 > show service myDBservice
4 myDBservice (192.0.2.0:1433) - MSSQL
5 State: UP
6 . . .
7 Use Source IP: YES Use Proxy Port: YES
8 . . .
9 Done
10 >
```

Create an MSSQL service, with USIP enabled, by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and configure a service.
2. Specify the protocol as **MSSQL** and, in **Settings**, select **Use Source IP**.

Use Case 4: Database specific load balancing

November 3, 2023

A database server farm must be load balanced not only based on the states of the servers, but also based on the availability of the database on each server. A service might be up, and a load balancing device might show it as being in the UP state, but the requested database might be unavailable on that service. The request isn't served if a query is forwarded to a service on which the database is unavailable. Therefore, a load balancing device must be aware of the availability of a database on each service. And when making a load balancing decision, it must consider only those services on which the database is available.

As an example, consider that database servers server1, server2, and server3 host databases mydatabase1 and mydatabase2. If mydatabase1 becomes unavailable on server2, the load balancing device must be aware of that change in state. It must load balance requests for mydatabase1 across only

server1 and server3. After mydatabase1 becomes available on server2, the load balancing device must include server2 in load balancing decisions. Similarly, if mydatabase2 becomes unavailable on server3, the device must load balance requests for mydatabase2 across only server1 and server2. It must include server3 in its load balancing decisions only when mydatabase2 becomes available. This load balancing behavior must be consistent across all the databases that are hosted on the server farm.

The NetScaler appliance implements this behavior by retrieving a list of all the databases that are active on a service. To retrieve the list of active databases, the appliance uses a monitor that is configured with an appropriate SQL query. If the requested database is unavailable on a service, the appliance excludes the service from load balancing decisions until it becomes available. This behavior ensures uninterrupted service to clients.

Note

Database specific load balancing is supported for only MS SQL and MySQL service types. This support is also available for MS SQL Server configured in Always On high availability groups. For more information, see [Supported database versions, protocols, and authentication methods](#).

To set up database specific load balancing, you must configure the following:

- Enable the load balancing feature, and configure a load balancing virtual server of type MSSQL or MySQL.
- Configure the services that host the database, and bind the services to the virtual server. The monitor needs valid user credentials to log on to the database server, so you must configure a database user account on each of the servers and then add the user account to the NetScaler appliance.
- Then, you configure an MSSQL-ECV or MYSQL-ECV monitor and bind the monitor to each service.
- Finally, you must test the configuration to ensure that it's working as intended. Before you perform these configuration tasks, make sure you understand how database specific load balancing works.

How database specific load balancing works

For database specific load balancing, you configure a monitor that periodically queries each database server for the names of all the active databases on it. The NetScaler appliance stores the results, and regularly updates the records based on the information retrieved through monitoring. When a client queries a particular database, the appliance uses the configured load balancing method to select a service, and then checks its records to determine whether the database is available on that service. If the records indicate that the database isn't available, it uses the configured load balancing method to select the next available service, and then repeats the check. The appliance forwards the query to the first available service on which the database is active.

Enable load balancing

You can configure load balancing entities such as services and virtual servers when the load balancing feature is disabled. The entities do not function until you enable the feature.

Enable load balancing by using the CLI

At the command prompt, type the following command to enable load balancing and verify the configuration:

```
1 enable ns feature LB
2
3 show ns feature
```

Example:

```
1 > enable ns feature LoadBalancing
2 Done
3 > show ns feature
4
5 Feature Acronym Status
6 -----
7 1) Web Logging WL OFF
8 2) Surge Protection SP ON
9 3) Load Balancing LB ON
10 .
11 .
12 .
13 24) NetScaler Push push OFF
14 Done
```

Enable load balancing by using the GUI

Navigate to **System > Settings** and, in **Configure Basic Features**, select **Load Balancing**.

Configure a load balancing virtual server for database specific load balancing

To configure a virtual server to load balance databases based on availability, you enable the database specific load balancing parameter on the virtual server. Enabling the parameter modifies the load balancing logic so that the NetScaler appliance refers the results of the monitoring probe sent to the selected service, before forwarding the query to that service.

Configure a load balancing virtual server for database specific load balancing using the CLI

At the command prompt, type the following command to configure a load balancing virtual server for database specific load balancing and verify the configuration:

```
1 add lb vserver <name> <serviceType> <ipAddress> <port> -dbsLb ENABLED
2
3 show lb vserver <name>
```

Configure services

After you enable the load balancing feature, you must create at least one service for each application server that is to be included in your load balancing setup. The services that you configure provide the connections between the NetScaler appliance and the load balanced servers. Each service has a name and specifies an IP address, a port, and the type of data that is served.

If you create a service without first creating a server object, the IP address of the service is also the name of the server that hosts the service. If you prefer to identify servers by name rather than IP address, you can create server objects and then specify a server's name instead of its IP address when you create a service.

Configure database users

In databases, a connection is always stateful, which means that when a connection is established, it must be authenticated.

Configure your database user name and password on the NetScaler. For example, if you have a user John configured on the database, you need to configure the user John on the ADC too. Database user names and passwords added to the ADC are added to the `nsconfig` file.

Note

Names are case sensitive.

The ADC uses these user credentials to authenticate the clients, and then authenticate the server connections with the database servers.

Add a database user by using the CLI

At the command prompt, type

```
1 add db user <username> - password <password>
```

Example:

```
1 add db user nsdbuser -password dd260427edf
```

Add a database user by using the GUI

Navigate to **System > User Administration > Database Users**, and configure a database user.

If you've changed the password of the database user on the database server, you must reset the password of the corresponding user configured on the NetScaler appliance.

Reset the password of a database user by using the CLI

At the command prompt, type

```
1 set db user <username> -password <password>
```

Example:

```
1 set db user nsdbuser -password dd260538abs
```

Reset the password of database users by using the GUI

Navigate to **System > User Administration > Database Users**, select a user, and enter new values for the password.

If a database user no longer exists on the database server, you can remove the user from the NetScaler appliance. However, if the user continues to exist on the database server and you remove the user from the ADC appliance, any request from the client with this user name does not get authenticated. Therefore, the user name does not get routed to the database server.

Remove a database user by using the CLI At the command prompt, type

```
1 rm db user <username>
```

Example:

```
1 rm db user nsdbuser
```

Remove a database user by using the GUI

Navigate to **System > User Administration > Database Users**, select a user, and click **Delete**.

Configure a monitor to retrieve the names of active databases

You can create a monitor to retrieve the list of all active databases on a database instance. The monitor logs on to the database server by using a valid user credentials and runs an appropriate SQL query. The SQL query you need to use depends on your SQL server deployment. For example, in an MSSQL database mirroring setup, you can use the following query to retrieve a list of active databases available on a server instance.

```
1 select name from sys.databases where state=0
```

In a MySQL database setup you can use the following queries to retrieve a list of active databases available on a server instance.

Show databases:

You also configure the monitor to evaluate the response for an error condition, and to store the results if there's no error. If the response contains an error, the monitor marks the service as DOWN. The appliance excludes the service from load balancing decisions until an error is no longer returned.

Note

The database specific load balancing feature is supported only for the MSSQL and MySQL service types. Therefore, the monitor type must be MSSQL-ECV or MYSQL-ECV.

Configure a monitor to retrieve the names of all the active databases hosted on a service by using the CLI

At the command prompt, type the following commands to retrieve the names of all the active databases hosted on a service and verify the configuration:


```
1 add lb monitor <monitorName> <type> -userName <string> -sqlQuery <text>
   -evalRule <expression> -storedb ENABLED
2
3 show lb monitor <monitorName>
```

Configure a monitor to retrieve the names of all the active databases hosted on a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors** and configure a monitor of type MSSQL-ECV or MYSQL-ECV.
2. In **Special Parameters**, specify a user name, query, and a rule. For example, for MSSQL-ECV, the query must be “select name from sys.databases where state=0”), and a rule must be MSSQL.RES.TYPE.NE(ERROR). For MYSQL-ECV, the query must be “show databases” and a rule must be MYSQL.RES.TYPE.NE(ERROR).

Availability groups deployment support for MSSQL

Consider the following scenario in which database specific load balancing is configured in a high availability group deployment. S1 through S5 are the services on the ADC appliance. DB1 through DB4 are the databases on the servers represented by the services S1 through S5. AV1 and AV2 are the availability groups. Each availability group contains up to one primary database server instance and up to four secondary database server instances. A service, representing the servers in the availability group, can be primary for one availability group and secondary for another availability group. Each availability group contains different databases and one listener, which is a service. All requests arrive on the listener service that resides on the primary database. AV1 contains databases DB1 and DB2. AV2 contains databases DB3 and DB4. L1 and L2 are the listeners on AV1 and AV2 respectively. S1 is the primary service for AV1 and S2 is the primary service for AV2.

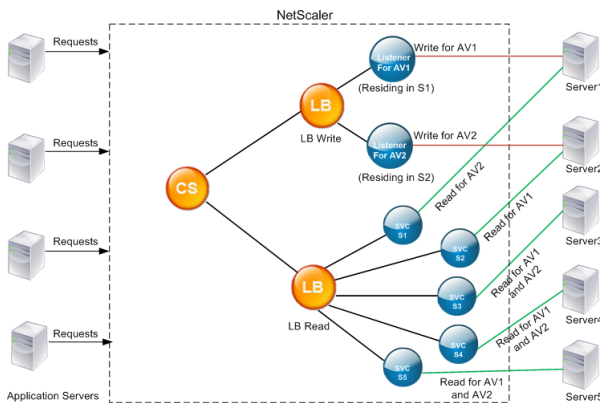

Service	List of Active Databases on the Service
S1	DB1, DB2, DB3, DB4
S2	DB3, DB4
S3	DB3, DB4
S4	DB1, DB2
S5	DB1, DB2

Availability Group	Databases	Services representing the Servers in the Availability Group
AV1	DB1, DB2	S1, S4, S5
AV2	DB3, DB4	S1, S2, S3

The queries flow as follows:

1. A READ query for AV1 is load balanced between S4 and S5. S1 is the primary for AV1.
2. A WRITE query for AV1 is directed to L1.
3. A READ query for AV2 is load balanced between S1 and S3. S2 is the primary for AV2.
4. A WRITE query for AV1 is directed to L2.

Sample configuration

1. Configure load balancing and content switching virtual servers.
 - `add lb vserver lbwrite -dbslb enabled`
 - `add lbvserver lbread MSSQL -dbslb enabled`
 - `add csvserver csv MSSQL 1.1.1.10 1433`
2. Configure two listener services, one for each availability group, and five services S1 through S5 representing databases DB1 through DB4.
 - `add service L1 1.1.1.11 MSSQL 1433`
 - `add service L2 1.1.1.12 MSSQL 1433`
 - `add service s1 1.1.1.13 MSSQL 1433`
 - `add service s2 1.1.1.14 MSSQL 1433`
 - `add service s3 1.1.1.15 MSSQL 1433`
 - `add service s4 1.1.1.16 MSSQL 1433`
 - `add service s5 1.1.1.17 MSSQL 1433`
3. Bind the services to the load balancing virtual servers.
 - `bind lbvserver lbwrite L1`
 - `bind lbvserver lbwrite L2`
 - `bind lbvserver lbread s1`
 - `bind lbvserver lbread s2`
 - `bind lbvserver lbread s3`
 - `bind lbvserver lbread s4`
 - `bind lbvserver lbread s5`
4. Configure database users.
 - `add db user nsdbuser1 -password dd260427edf`
 - `add db user nsdbuser2 -password ccd1234xyzw`
5. Configure two monitors, monitor_L1 and monitor_L2 for each listener service, to retrieve the list of active databases in that availability group. Add a monitor, monitor1 to retrieve the list of databases for the secondary database server instance.

- `add lb monitor monitor_L1 MSSQL-ECV -userName user1 -sqlQuery "SELECT name FROM sys.databases a INNER JOIN sys.dm_hadr_availability_b ON a.replica_id=b.replica_id INNER JOIN sys.availability_group_list c on b.group_id = c.group_id INNER JOIN sys.availability_group_listen d on c.listener_id = d.listener_id WHERE b.role = 1 and d.ip_address like '1.1.1.11'"-evalRule "MSSQL.RES.TYPE.NE(ERROR)" -storedb ENABLED`
- `add lb monitor monitor_L2 MSSQL-ECV -userName user1 -sqlQuery "SELECT name FROM sys.databases a INNER JOIN sys.dm_hadr_availability_b ON a.replica_id=b.replica_id INNER JOIN sys.availability_group_list c on b.group_id = c.group_id INNER JOIN sys.availability_group_listen d on c.listener_id = d.listener_id WHERE b.role = 1 and d.ip_address like '1.1.1.12'"-evalRule "MSSQL.RES.TYPE.NE(ERROR)" -storedb ENABLED`
- `add lb monitor monitor1 MSSQL-ECV -userName user1 -sqlQuery "SELECT name FROM sys.databases a INNER JOIN sys.dm_hadr_availability_b ON a.replica_id=b.replica_id WHERE b.role = 2"-evalRule "MSSQL.RES.TYPE.NE(ERROR)" -storedb ENABLED`

6. Configure read and write policies.

- `add cs policy pol_write -rule "MSSQL.REQ.QUERY.TEXT.CONTAINS("insert")"`
- `add cs policy pol_read -rule "MSSQL.REQ.QUERY.TEXT.CONTAINS("select")"`

7. Bind the policies to the content switching virtual server.

- `bind csvserver csv -targetLBVserver lbwrite -policyName pol_write -priority 11`
- `bind csvserver csv -targetLBVserver lbread -policyName pol_read -priority 12`

8. Bind monitors to the services. Bind monitors to services L1 and L2 to get the list of active databases for the availability group for which it is the listener. Bind monitors to all the services that are bound to the read-only virtual server.

- `bind service L1 -monitorName monitor_L1`
- `bind service L2 -monitorName monitor_L2`
- `bind service s1 -monitorName monitor1`
- `bind service s2 -monitorName monitor1`
- `bind service s3 -monitorName monitor1`
- `bind service s4 -monitorName monitor1`

- `bind service s5 -monitorName monitor1`

Configuration examples for MSSQL virtual server

To configure a load balancing virtual server for database specific load balancing:

```

1 add lb vserver DBSpecificLB1 MSSQL 192.0.2.10 1433 -dbsLb ENABLED
2
3 Done
4
5 show lb vserver DBSpecificLB1
6
7 DBSpecificLB1 (192.0.2.10:1433) - MSSQL Type: ADDRESS
8 . . .
9 DBS_LB: ENABLED
10
11 Done

```

To configure services:

add service msservice1 5.5.5.5 MSSQL 1433

To configure a monitor to retrieve the names of all the active databases hosted on a service by using the command line:

```

1 add lb monitor mssql-monitor1 MSSQL-ECV -userName user1 -sqlQuery "
   select name from sys.databases where state=0" -evalRule "MSSQL.RES.
   TYPE.NE(ERROR)" -storedb EN
2
3 Done
4
5 show lb monitor mssql-monitor1
6
7 1) Name.....: mssql-monitor1    Type.....: MSSQL-ECV
8
9 ...
10
11 Special parameters: Database.....:""
12
13 User name.....:"user1"
14
15 Query...:select name from sys.databases where state=0 EvalRule...:MSSQL.
   RES.TYPE.NE(ERROR)
16
17 Version...:70 STORE_DB...:ENABLED
18
19 Done

```

Configuration examples for MySQL virtual server

To configure a load balancing virtual server for database specific load balancing:

```
1 add lb vserver DBSpecificLB1 MYSQL 192.0.2.10 3306 -dbsLb ENABLED
2
3 Done
4
5 show lb vserver DBSpecificLB1
6
7 DBSpecificLB1 (192.0.2.10:3306) - MYSQL Type: ADDRESS
8
9 . . .
10
11 DBS_LB: ENABLED
12
13 Done
```

To configure services:

```
1 add service msservice1 5.5.5.5 MYSQL 3306
```

To configure a monitor to retrieve the names of all the active databases hosted on a service by using the command line:

```
1 add lb monitor mysql-monitor1 MYSQL-ECV -userName user1 -sqlQuery "show
   databases" -evalRule "MYSQL.RES.TYPE.NE(ERROR)" -storedb ENABLED
2
3 Done
4
5 show lb monitor mysql-monitor1
6
7 1)      Name.....: mysql-monitor1  Type.....: MYSQL-ECV  State.....:
   ENABLED
8
9 ...
10
11 Special parameters: Database.....:""
12
13 User name.....:"user1"  Query...:show databases
14
15 EvalRule...:MYSQL.RES.TYPE.NE(ERROR)  STORE_DB...:ENABLED
16
17 Done
```

DataStream reference

February 13, 2024

This reference describes the MySQL and TDS protocols, the database versions, the authentication methods, and the character sets supported by the DataStream feature. It also describes how the NetScaler handles transaction requests and special queries that modify the state of a connection.

You can also configure the NetScaler appliance to generate audit log messages for the DataStream feature.

Supported database versions, protocols, and authentication methods

	MySQL Database	MS SQL Database
Database Versions	MySQL database versions 4.1, 5.0, 5.1, 5.4, 5.5, 5.6, and 5.7. MySQL database versions 8.0, 8.1, and 8.2 are supported only when native authentication is enabled for the database user.	MS SQL database versions 70, 2000, 2000SP1, 2005, 2008, 2008R2, 2012, 2014 (Kerberos Authentication support). You can configure the backend MS SQL server with TDS 7.4 on 2016, 2017, 2019, and 2022 by configuring NetScaler parameter <code>-mssqlServerVersion 2014</code> . Always On availability group is supported only in MS SQL versions 2012 and 2014.
Protocols	MySQL protocol version 10. For information about the MySQL protocol, see MySQL Client/Server Protocol	Tabular Data Stream (TDS) protocol version 7.1 to 7.4. For information about the TDS protocol, see Tabular Data Stream Protocol
Authentication Methods	MySQL native authentication is supported.	SQL server authentication and Windows Authentication (Kerberos/NTLM) are supported.

Character sets

The DataStream feature supports only the UTF-8 charset.

The character set used by the client while sending a request might be different from the character set used in the database server responses. Although the charset parameter is set during the connection

establishment, it can be changed at any time by sending an SQL query. The character set is associated with a connection, and therefore, requests on connections with one character set can't be multiplexed onto a connection with a different character set.

The NetScaler appliance parses the queries sent by the client and the responses sent by the database server.

The character set associated with a connection can be changed after the initial handshake by using the following two queries:

```
1 SET NAMES <charset> COLLATION <collation>
2
3 SET CHARACTER SET <charset>
```

Transactions

In MySQL, transactions are identified by using the connection parameter AUTOCOMMIT or the BEGIN:COMMIT queries. The AUTOCOMMIT parameter can be set during the initial handshake, or after the connection is established by using the query SET AUTOCOMMIT.

The NetScaler appliance explicitly parses each query to determine the beginning and end of a transaction.

In the MySQL protocol, the response contains two flags to indicate whether the connection is a transaction: the TRANSACTION and AUTOCOMMIT flags.

If the connection is a transaction, the TRANSACTION flag is set. Or, if the AutoCommit mode is OFF, the AUTOCOMMIT flag isn't set. The ADC appliance parses the response, and if either the TRANSACTION flag is set or the AUTOCOMMIT flag isn't set, it does not do connection multiplexing. When these conditions are no longer true, the ADC appliance begins connection multiplexing.

Note

Transactions are also supported for MS SQL.

Special queries

There are special queries, such as SET and PREPARE, that modify the state of the connection and might break request switching, and therefore, these queries need to be handled differently.

On receiving a request with special queries, the NetScaler appliance sends an OK response to the client and also, stores the request in the connection.

When a non-special query, such as INSERT and SELECT, is received along with a stored query, the ADC appliance looks for the server-side connection on which the stored query has already been sent to the

database server. If no such connections exist, the ADC appliance creates a connection, and sends the stored query first, and then, sends the request with the non-special query.

In SET, USE db, and INIT_DB special queries, the appliance modifies a field in the server side connection corresponding to the special query. This modification results in better reuse of the server side connection.

Only 16 queries are stored in each connection.

The following is a list of the special queries for which the ADC appliance has a modified behavior.

- SET query

The SET SQL queries define variables that are associated with the connection. These queries are also used to define global variables, but as of now, the ADC appliance is unable to differentiate between local and global variables. For this query, the ADC appliance uses the ‘store and forward’ mechanism.

- USE <db> query

Using this query, the user can change the database associated with a connection. In this case, the ADC appliance parses the <db> value sent and modifies a field in the server side connection to reflect the new database to be used.

- INIT_DB command

Using this query, the user can change the database associated with a connection. In this case, the ADC appliance parses the <init_db> value sent and modifies a field in the server side connection to reflect the new database to be used.

- COM_PREPARE

The ADC appliance stops request switching on receiving this command.

- PREPARE query

This query is used to create prepared statements that are associated with a connection. For this query, the ADC appliance uses the ‘store and forward’ mechanism.

Audit log message support

You can now configure the NetScaler appliance to generate audit log messages for the DataStream feature. Audit log messages are generated when client-side and server-side connections are established, closed, or dropped. The categories of messages that you can log and view are ERROR and INFO. Error messages for client-side connections begin with “CS” and error messages for server-side connections begin with “SS.” Additional information is provided where necessary. For example, log messages for closed connections (CS_CONN_CLOSED) include only the connection ID. However, log

messages for established connections (CS_CONN_ESTD) include information such as the user name, database name, and the client IP address in addition to the connection ID.

Domain Name System

May 2, 2023

Note: From release 13.0 build 41.x, the NetScaler appliance in ADNS and proxy mode is fully compliant with DNS flag day 2019.

You can configure the NetScaler appliance to function as an authoritative domain name server (ADNS server) for a domain. Add the DNS resource records that belong to the domain for which the appliance is authoritative and configure resource record parameters. You can also configure the appliance as a proxy DNS server that load balances a farm of DNS name servers that are either within or outside your network. Configure the appliance as an end resolver and forwarder. You can configure DNS suffixes that enable name resolution when fully qualified domain names are not configured. The appliance also supports the DNS ANY query that retrieves all the records that belong to a domain.

You can configure the appliance to concurrently function as an authoritative DNS server for one domain and a DNS proxy server for another domain. When you configure the appliance as the authoritative DNS server or DNS proxy server for a zone, you can enable the appliance to use the TCP for response sizes that exceed the size limit specified for the User Datagram Protocol (UDP).

How DNS Works on the NetScaler

You can configure the NetScaler appliance to function as an ADNS server, DNS proxy server, end resolver, and forwarder. You can add DNS resource records on the NetScaler appliance, including the following records:

- Service (SRV) records
- IPv6 (AAAA) records
- Address (A) records
- Mail exchange (MX) records
- Canonical name (CNAME) records
- Pointer (PTR) records
- Start of authority (SOA) records
- Text (TXT) records
- Name Authority Pointer (NAPTR) records
- DNSKEY records
- Certificate Authority Authorization (CAA) records

Also, you can configure the NetScaler to load balance external DNS name servers.


The NetScaler appliance can be configured as the authority for a domain. Add valid SOA and NS records for the domain.

An ADNS server is a DNS server that contains complete information about a zone.

To configure the NetScaler appliance as an ADNS server for a zone, you must add an ADNS service, and then configure the zone. To do so, you add valid SOA and NS records for the domain. When a client sends a DNS request, the NetScaler appliance searches the configured resource records for the domain name. You can configure the ADNS service to be used with the NetScaler Global Server Load Balancing (GSLB) feature.

You can delegate a subdomain, by adding NS records for the subdomain to the zone of the parent domain. You can then make the NetScaler authoritative for the subdomain, by adding a “glue record” for each of the subdomain name servers. If GSLB is configured, the NetScaler makes a GSLB load balancing decision based on its configuration and replies with the IP address of the selected virtual server. The following figure shows the entities in an ADNS GSLB setup and a DNS proxy setup.

Figure 1. DNS Proxy Entity Model

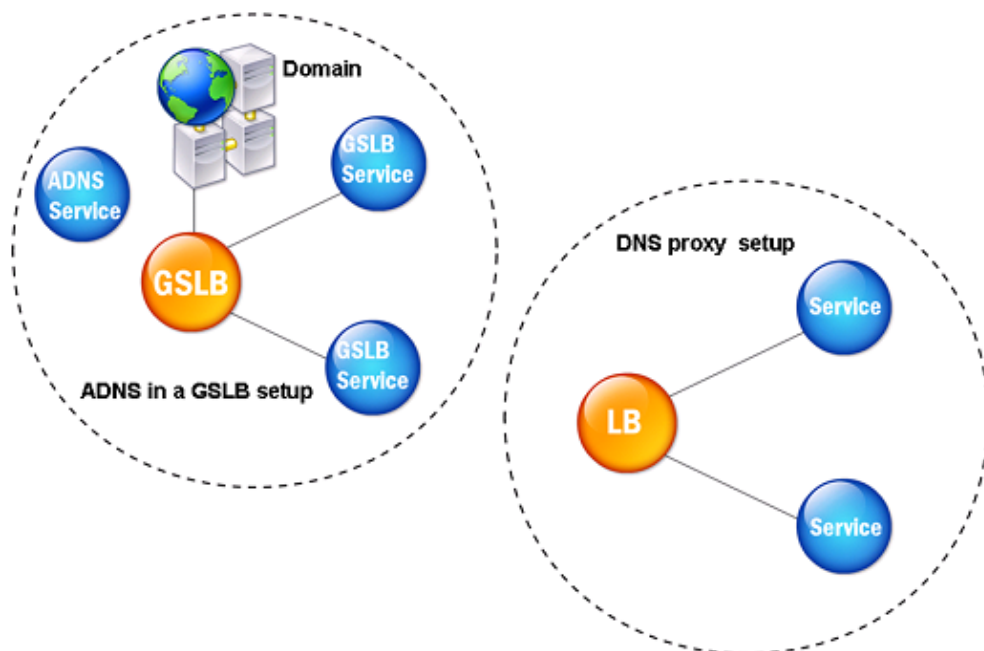

The NetScaler appliance can function as a DNS proxy. Caching of DNS records, which is an important function of a DNS proxy, is enabled by default on the NetScaler appliance. Caching enables the

NetScaler appliance to provide quick responses for repeated translations. Create a load balancing DNS virtual server, and DNS services, and then bind these services to the virtual server.

The NetScaler provides two options, minimum time to live (TTL) and maximum TTL for configuring the lifetime of the cached data. The cached data times out as specified by your settings for these two options. The NetScaler checks the TTL of the DNS record coming from the server. If the TTL is less than the configured minimum TTL, it is replaced with the configured minimum TTL. If the TTL is greater than the configured maximum TTL, it is replaced with the configured maximum TTL.

The NetScaler also allows caching of negative responses for a domain. A negative response indicates that information about a requested domain does not exist, or that the server cannot provide an answer for the query. The storage of this information is called *negative caching*. Negative caching helps speed up responses to queries on a domain, and can optionally provide the record type.

A negative response can be one of the following:

- NXDOMAIN error message - If a negative response is present in the local cache, the NetScaler returns an error message (NXDOMAIN). If the response is not in the local cache, the query is forwarded to the server, and the server returns an NXDOMAIN error to the NetScaler. The NetScaler caches the response locally, then returns the error message to the client.
- NODATA error message - The NetScaler sends a NODATA error message, if the domain name in query is valid but records of the given type are not available.

The NetScaler supports recursive resolution of DNS requests. In recursive resolution, the resolver (DNS client) sends a recursive query to a name server for a domain name. If the queried name server is authoritative for the domain, it responds with the requested domain name. Otherwise, the NetScaler queries the name servers recursively until the requested domain name is found.

Before you can apply the recursive query option, you must first enable it. You can also set the number of times the DNS resolver must send a resolution request (DNS retries) if a DNS lookup fails.

You can configure the NetScaler as a DNS forwarder. A forwarder passes DNS requests to external name servers. The NetScaler allows you to add external name servers and provides name resolution for domains outside the network. The NetScaler also allows you to set the name lookup priority to DNS or Windows Internet Name Service (WINS).

Enable the ADC appliance to use DNS to resolve the host name to its respective IP address

Note: You require an SSH utility to access the command line interface (CLI) of the appliance.

By default, the ADC appliance cannot resolve the host name to its respective IP address. Complete the following tasks to enable the name resolution on the appliance:

1. Define name servers.

2. Define a DNS suffix.

Points to note

Perform the DNS lookup from the CLI. DNS lookups from the shell prompt of the FreeBSD operating system fail because the entry in the `/etc/resolv.conf` file points to the 127.0.0.2 IP address.

The following commands are replaced with the `drill` command in the FreeBSD CLI of the appliance reachable with the `shell` command:

```
1 - host
2 - dig
3 - getent/MIP
4 - nslookup
```

For example, instead of running `dig www.google.com @8.8.8.8` to query the “A” record “www.google.com” at the name server “8.8.8.8”, you can run `drill www.google.com @8.8.8.8` command. The `drill` command performs exactly the same as the `dig` command does.

```
1 root@lab# drill www.google.com @8.8.8.8
2 ;; ->>HEADER<<- opcode: QUERY, rcode: NOERROR, id: 57980
3 ;; flags: qr rd ra ; QUERY: 1, ANSWER: 1, AUTHORITY: 0, ADDITIONAL: 0
4 ;; QUESTION SECTION:
5 ;; www.google.com. IN A
6
7 ;; ANSWER SECTION:
8 www.google.com. 300 IN A 142.250.187.196
9
10 ;; AUTHORITY SECTION:
11
12 ;; ADDITIONAL SECTION:
13
14 ;; Query time: 53 msec
15 ;; SERVER: 8.8.8.8
16 ;; WHEN: Thu Jun 9 11:04:55 2022
17 ;; MSG SIZE rcvd: 48
```

If the appliance cannot ping the DNS server on its SNIP address, the server status shows as down. Successful ping is important when the appliance is behind a firewall.

CLI configuration

At the command prompt, type:

```
1 add dns nameServer <Name_Server_IP_Address>
2 add dns suffix <DNS_Suffix>
```

To verify the configuration, type:

```
1 show dns nameServer
2 show dns suffix
```

To test DNS resolution, type:

```
1 show dns addrec <Host_Name>
```

GUI configuration

1. Navigate to **Traffic Management > DNS > Names Servers > Add**.
2. In the **Create Name Server** dialog box enter the name server IP Address and click **Create**.
3. Navigate to **Traffic Management > DNS > DNS Suffix > Add**.
4. In the **Create DNS Suffix** dialog box, enter the DNS Suffix, such as example.com, to be used for all host queries and click **Create**.

Round Robin DNS

When a client sends a DNS request to find the DNS resource record, it receives a list of IP addresses resolving to the name in the DNS request. The client then uses one of the IP addresses in the list, generally, the first record or IP address. Hence, a single server is used for the total TTL of the cache and is overloaded when many requests arrive.

When the NetScaler receives a DNS request, it responds by changing the order of the list of DNS resource records in a round robin method. This feature is called *round robin DNS*. Round robin distributes the traffic equally between data centers. The NetScaler performs this function automatically. You do not have to configure this behavior.

Functional Overview

If the NetScaler is configured as an ADNS server, it returns the DNS records in the order in which the records are configured. When the NetScaler is configured as a DNS proxy, it returns the DNS records in the order in which it receives the records from the server. The order of the records present in the cache matches the order in which records are received from the server.

The NetScaler then changes the order in which records are sent in the DNS response in a round robin method. The first response contains the first record in sequence, the second response contains the second record in sequence, and the order continues in the same sequence. Thus, clients requesting the same name can connect to different IP addresses.

Round Robin DNS Example As an example of round robin DNS, consider DNS records that have been added as follows:

```
1 add dns addRec ns1 1.1.1.1 add dns addRec ns1 1.1.1.2 add dns
  addRec ns1 1.1.1.3 add dns addRec ns1 1.1.1.4
```

The domain, abc.com is linked to an NS record as follows:

```
1 add dns nsrec abc.com. ns1
```

When the NetScaler receives a query for the A record of ns1, the Address records are served in a round robin method as follows. In the first DNS response, 1.1.1.1 is served as the first record:

```
1 ns1.          1H IN A      1.1.1.1 ns1.
                1H IN A      1.1.1.2 ns1.
                1H IN A      1.1.1.3 ns1.
                1H IN A      1.1.1.4
```

In the second DNS response, the second IP address, 1.1.1.2 is served as the first record:

```
1 ns1.          1H IN A      1.1.1.2 ns1.
                1H IN A      1.1.1.3 ns1.
                1H IN A      1.1.1.4 ns1.
                1H IN A      1.1.1.1
```

In the third DNS response, the third IP address, 1.1.1.3 is served as the first record:

```
1 ns1.          1H IN A      1.1.1.3 ns1.
                1H IN A      1.1.1.4 ns1.
                1H IN A      1.1.1.1 ns1.
                1H IN A      1.1.1.2
```

Configure DNS resource records

May 2, 2023

You configure resource records on the Citrix® ADC appliance when you configure the appliance as an ADNS server for a zone. You can also configure resource records on the appliance if the resource records belong to a zone for which the appliance is a DNS proxy server. On the appliance, you can configure the following record types:

- Service records
- AAAA records
- Address records
- Mail Exchange records
- Name Server records

- Canonical records
- Pointer records
- NAPTR records
- Start of Authority records
- Text records
- Certificate Authority Authorization (CAA) records

The following table lists the record types that you can configure for a domain name record on the NetScaler appliance. For example, you can configure a maximum of 25 IP addresses for one record.

Table 1. Record Type and Number Configurable

Record Type	Number of Records
Address (A)	25
IPv6 (AAAA)	5
Mail exchange (MX)	12
Name server (NS)	16
Service (SRV)	8
Pointer (PTR)	20
Canonical name (CNAME)	1
Start of Authority (SOA)	1
Text (TXT)	20
Naming Authority Pointer (NAPTR)	20
Certificate Authority Authorization (CAA)	20

Note:

The maximum number of IP addresses for a specific host name is 25. However, the number of different address records can be more than 25.

Create SRV records for a service

May 2, 2023

The SRV record provides information about the services available on the NetScaler appliance. An SRV record contains the following information:

- Name of the service and the protocol
- Domain name
- TTL
- DNS class
- Priority of the target
- Weight of records with the same priority
- Port of the service
- Host name of the service.

The NetScaler chooses the SRV record that has the lowest priority setting first. If a service has multiple SRV records with the same priority, clients use the weight field to determine which host to use.

Add an SRV record by using the CLI

At the command prompt, type the following commands to add an SRV record and verify the configuration:

```
1 - add dns srvRec <domain> <target> -priority <positive_integer> -  
    weight <positive_integer> -port <positive_integer> [-TTL <secs>]  
2 - sh dns srvRec <domain>
```

Example:

```
1 > add dns srvRec _http._tcp.example.com nameserver1.com -priority 1 -  
    weight 1 -port 80  
2 Done  
3 > show dns srvRec _http._tcp.example.com  
4 1) Domain Name : _http._tcp.example.com  
5 Target Host : nameserver1.com  
6 Priority : 1 Weight : 1  
7 Port : 80 TTL : 3600 secs  
8 Done
```

Modify or remove an SRV record by using the CLI

- To modify an SRV record, type:
 - The `set dns srvRec` command
 - The name of the domain for which the SRV record is configured
 - The name of the target host that hosts the associated service
 - The parameters to be changed, with their new values
- To remove an SRV record, type:
 - The `rm dns srvRec` command

- The name of the domain for which the SRV record is configured
- The name of the target host that hosts the associated service

Configure an SRV record by using the GUI

Navigate to **Traffic Management > DNS > Records > SRV Records** and create an SRV record.

Create AAAA records for a domain name

January 6, 2021

An AAAA resource record stores a single IPv6 address.

Add an AAAA record by using the CLI

At the command prompt, type the following commands to add an AAAA record and verify the configuration:

```
1 - add dns aaaaRec <hostName> <IPv6Address> ... [-TTL <secs>]
2 - show dns aaaaRec <hostName>
```

Example:

```
1 > add dns aaaaRec www.example.com 2001:0db8:0000:0000:0000:0000:1428:57
   ab
2 Done
3 > show dns aaaaRec www.example.com
4 1)      Host Name : www.example.com
5         Record Type : ADNS                TTL : 5 secs
6         IPV6 Address : 2001:db8::1428:57ab
7 Done
```

To remove an AAAA record and all the IPv6 addresses associated with the domain name, type the `rm dns aaaaRec` command and the domain name for which the AAAA record is configured. To remove only a subset of the IPv6 addresses associated with the domain name in an AAAA record, type the following:

- `rm dns aaaaRec` command
- The domain name for which the AAAA record is configured
- The IPv6 addresses that you want to remove

Add an AAAA record by using the GUI

Navigate to **Traffic Management > DNS > Records > AAAA Records** and create an AAAA record.

Create address records for a domain name

May 2, 2023

Address (A) records are DNS records that map a domain name to an IPv4 address.

You cannot delete Address records for a host participating in global server load balancing (GSLB). However, the NetScaler deletes Address records added for GSLB domains when you unbind the domain from a GSLB virtual server. Only user-configured records can be deleted manually. You cannot delete a record for a host referenced by records such as NS, MX, or CNAME.

Add an Address record by using the CLI

At the command prompt, type the following commands to add an Address record and verify the configuration:

```
1 - add dns addRec <hostName> <IPAddress> [-TTL <secs>]
2 - show dns addRec <hostName>
```

Example:

```
1 > add dns addRec ns.example.com 192.0.2.0
2 Done
3 > show dns addRec ns.example.com
4 1)      Host Name : ns.example.com
5         Record Type : ADNS                      TTL : 5 secs
6         IP Address : 192.0.2.0
7 Done
```

To remove an Address record and all the IP addresses associated with the domain name, type the `rm dns addRec` command and the domain name for which the Address record is configured. To remove only a subset of the IP addresses associated with the domain name in an Address record, type the following:

- `rm dns addRec` command
- The domain name for which the Address record is configured
- The IP addresses that you want to remove

Add an Address record by using the GUI

Navigate to **Traffic Management > DNS > Records > Address Records** and create an Address record.

Create MX records for a mail exchange server

January 6, 2021

Mail Exchange (MX) records are used to direct email messages across the Internet. An MX record contains an MX preference that specifies the MX server to be used. The MX preference values range from 0 through 65536. An MX record contains a unique MX preference number. You can set the MX preference and the TTL values for an MX record.

When an email message is sent through the Internet, a mail transfer agent sends a DNS query requesting the MX record for the domain name. This query returns a list of host names of mail exchange servers for the domain, along with a preference number. If there are no MX records, the request is made for the Address record of that domain. A single domain can have multiple mail exchange servers.

Add an MX record by using the CLI

At the command prompt, type the following commands to add an MX record and verify the configuration:

```
1 - add dns mxRec <domain> -mx <string> -pref <positive_integer> [-TTL <secs>]
2 - show dns mxRec <domain>
```

Example:

```
1 > add dns mxRec example.com -mx mail.example.com -pref 1
2 Done
3 > show dns mxRec example.com
4 1)      Domain : example.com      MX Name : mail.example.com
5        Preference : 1             TTL : 5 secs
6 Done
```

Modify or remove an MX record by using the CLI

- To modify an MX record, type the `set dns mxRec` command, the name of the domain for which the MX record is configured, the name of the MX record, and the parameters to be changed,

with their new values.

- To set the TTL parameter to its default value, type the `unset dns mxRec` command, the name of the domain for which the MX record is configured, the name of the MX record, and -TTL without any TTL value. You can use the `unset dns mxRec` command to unset only the TTL parameter.
- To remove an MX record, type the `rm dns mxRec` command, the name of the domain for which the MX record is configured, and the name of the MX record.

Add an MX record by using the GUI

Navigate to **Traffic Management > DNS > Records > Mail Exchange Records** and create an MX record.

Create NS Records for an authoritative server

January 6, 2021

Name Server (NS) records specify the authoritative server for a domain. You can configure a maximum of 16 NS records. You can use an NS record to delegate the control of a subdomain to a DNS server.

Create an NS record by using the CLI

At the command prompt, type the following commands to create an NS record and verify the configuration:

```
1 - add dns nsRec <domain> <nameServer> [-TTL <secs>]
2 - show dns nsRec <domain>
```

Example:

```
1 > add dns nsRec example.com nameserver1.example.com
2 Done
3 > show dns nsRec example.com
4 1)      Domain : example.com      NameServer : nameserver1.example.com
5        TTL : 5 sec
6 Done
```

To remove an NS record, type the `rm dns nsRec` command, the name of the domain to which the NS record belongs, and the name of the name server.

Create an NS record by using the GUI

Navigate to **Traffic Management > DNS > Records > Name Server Records** and create an NS record.

Create CNAME records for a subdomain

May 2, 2023

A canonical name record (CNAME record) is an alias for a DNS name. These records are useful when multiple services query the DNS server. The host that has an address (A) record cannot have a CNAME record.

Sometimes, a NetScaler appliance in proxy mode requests an address record from the cache instead of the server.

Add a CNAME record by using the CLI

At the command prompt, type the following commands to create a CNAME record and verify the configuration:

```
1 - add dns cnameRec <aliasName> <canonicalName> [-TTL <secs>]
2 - show dns cnameRec <aliasName>
```

Example:

```
1 > add dns cnameRec www.example.com www.examp1enw.com
2 Done
3 > show dns cnameRec www.example.com
4      Alias Name      Canonical Name  TTL
5 1)      www.example.com      www.examp1enw.com      5 secs
6 Done
```

To remove a CNAME record for a given domain, type the `rm dns cnameRec` command and the alias of the domain name.

Add a CNAME record by using the GUI

Navigate to **Traffic Management > DNS > Records > Canonical Records** and create a CNAME record.

Cache CNAME records

When deployed in a proxy mode, the ADC appliance does not always send the query for an address record to the back-end server. This behavior occurs when for an answer to a query for an address record, a partial CNAME chain is present in the cache. There are few conditions in which the ADC caches the partial CNAME record and serves the query from the cache. Following are the conditions:

- NetScaler must be deployed in a proxy mode.
- The response from the back-end server must have a CNAME chain, for which the record type of the last entry in the answer section must be a CNAME and the question type not a CNAME.
- The response from the back-end server cannot be a No-data or NX-Domain.
- The response from the back-end server has to be an authoritative response.

Create NAPTR records for telecommunications domain

May 2, 2023

NAPTR (Naming Address Pointer) is one of the most commonly used DNS records in the telecommunications domain. NAPTR records map the Internet telephony address space to the Internet address space. They therefore enable a mobile device to send a request to the correct server. The combination of NAPTR records with Service Records (SRV) allows the chaining of multiple records to form complex rewrite rules that produce new domain labels or uniform resource identifiers (URIs). The DNS code for NAPTR is 35.

NetScalers support NAPTR in two modes: ADNS mode and proxy mode. In proxy mode, the ADC caches the response from the servers and uses the cached records to server future queries. A maximum of 20 NAPTR records can be added for a particular domain in NetScaler. NetScaler caches the reply to a DNS NAPTR record query. Any subsequent requests for the NAPTR record are served from the cache.

Create a NAPTR record by using CLI

At the command prompt, type the following commands to add a NAPTR record and verify the configuration:

```
add dns naptrRec <order> <preference>[flags<string>][services<string>]  
>)(regexp<expressions>|-replacement<string>)[-TTL<secs>]
```

Remove a NAPTR record by using CLU

```
rm dns naptrRec<domain> (<order> <preference> [-flags <string>] [-services <string>] (-regexp <expression> | -replacement <string>)) | -recordId <positive_integer>@)
```

Configure a NAPTR record using GUI

Navigate to **Traffic Management > DNS > Records > NAPTR Records** and create an NAPTR record.

Create PTR records for IPv4 and IPv6 addresses

January 6, 2021

A pointer (PTR) record translates an IP address to its domain name. IPv4 PTR records are represented by the octets of an IP address in reverse order with the string “in-addr.arpa.” appended at the end. For example, the PTR record for the IP address 1.2.3.4 is 4.3.2.1.in-addr.arpa.

IPv6 addresses are reverse mapped under the domain IP6.ARPA. IPv6 reverse-maps use a sequence of nibbles separated by dots with the suffix “.IP6.ARPA” as defined in RFC 3596. For example, the reverse lookup domain name corresponding to the address, 4321:0:1:2:3:4:567:89ab would be b.a.9.8.7.6.5.0.4.0.0.0.3.0.0.0.2.0.0.0.1.0.0.0.0.0.0.1.2.3.4.IP6.ARPA.

Add a PTR record by using the CLI

At the command prompt, type the following commands to add a PTR record and verify the configuration:

```
1 - add dns ptrRec <reverseDomain> <domain> [-TTL <secs>]
2 - show dns ptrRec <reverseDomain>
```

Example:

```
1 > add dns ptrRec 0.2.0.192.in-addr.arpa example.com
2 Done
3 > show dns ptrRec 0.2.0.192.in-addr.arpa
4 1)      Reverse Domain Name : 0.2.0.192.in-addr.arpa
5         Domain Name : example.com                TTL : 3600 secs
6 Done
```

To remove a PTR record, type the `rm dns ptrRec` command and the reverse domain name associated with the PTR record

Add a PTR record by using the GUI

Navigate to **Traffic Management > DNS > Records > PTR Records** and create a PTR record.

Create SOA records for authoritative information

January 6, 2021

A Start of Authority (SOA) record is created only at the zone apex and contains information about the zone. The record includes, among other parameters, the primary name server, contact information (email), and default (minimum) time-to-live (TTL) values for records.

Create an SOA record by using the CLI

At the command prompt, type the following commands to add an SOA record and verify the configuration:

```
1 - add dns soaRec <domain> -originServer <originServerName> -contact <
    contactName>
2 - sh dns soaRec <do main>
```

Example:

```
1 > add dns soaRec example.com -originServer nameserver1.example.com -
    contact admin.example.com
2 Done
3 > show dns soaRec example.com
4 1)      Domain Name : example.com
5         Origin Server : nameserver1.example.com
6         Contact : admin.example.com
7         Serial No. : 100          Refresh : 3600 secs      Retry : 3 secs
8         Expire : 3600 secs       Minimum : 5 secs      TTL : 3600 secs
9 Done
```

Modify or remove an SOA record by using the CLI

- To modify an SOA record, type the `set dns soaRec` command, the name of the domain for which the record is configured, and the parameters to be changed, with their new values.
- To remove an SOA record, type the `rm dns soaRec` command and the name of the domain for which the record is configured.

Configure an SOA record by using the GUI

Navigate to **Traffic Management > DNS > Records > SOA Records** and create an SOA record.

Create TXT records for holding descriptive text

May 2, 2023

Domain hosts store TXT records for informative purposes. A TXT record's RDATA component, which consists of one or more character strings of variable length, can store practically any information that a recipient might need to know about the domain. It can also include information about the service provider, contact person, email addresses, and associated details. SPF (Sender Policy Framework) protection has been the most prominent use case for the TXT record.

All configuration types (authoritative DNS, DNS proxy, end resolver, and forwarder configurations) on the NetScaler appliance support TXT records. You can add a maximum of 20 TXT resource records to a domain. Each resource record is stored with a unique, internally generated record ID. A TXT resource record can contain up to six strings, each of which can contain up to 255 characters. You can view the ID of a record and use it to delete the record. However, you cannot modify a TXT resource record.

Create a TXT resource record by using the CLI

At the command prompt, type the following commands to create a TXT resource record and verify the configuration:

```
1 - add dns txtRec <domain> <string> ... [-TTL <secs>]
2 - show dns txtRec [<domain> | -type <type>]
```

Example:

```
1 > add dns txtRec www.example.com "Contact: Mark" "Email: mark@example.com" -TTL 36000
2 Done
3 > show dns txtRec www.example.com
4 1) Domain : www.example.com      Record id: 13783      TTL : 36000 secs
      Record Type : ADNS
5      "Contact: Mark"
6      "Email: mark@example.com"
7 Done
```

Split the string in a TXT resource record using CLI

If you have a string that is more than 255 characters, you can split the strings, considering the six string limit. Each string can be of length 254 bytes.

```
1 add dns txtrec domain.com "string1" "string2" string3 "string4"
```

Example:

```
1 add dns txtrec exampledomain.com "Contact: Evan" "Email: evan@example.com" "Contact: Mark" "Email: mark1@example.com"
```

Remove a TXT resource record by using the CLI

At the command prompt, type the following commands to remove a TXT resource record and verify the configuration:

```
1 - rm dns txtRec <domain> (<string> ... | -recordId <positive_integer>)
2 - show dns txtRec [<domain> | -type <type>]
```

Example:

You can use the `show dns txtRec` command first to view the record ID of the TXT resource record that you want to remove, as shown:

```
1 > show dns txtRec www.example.com
2 1) Domain : www.example.com      Record id: 36865      TTL : 36000 secs
   Record Type : ADNS
3     "Contact: Evan"
4     "Email: evan@example.com"
5 2) Domain : www.example.com      Record id: 14373      TTL : 36000 secs
   Record Type : ADNS
6     "Contact: Mark"
7     "Email: mark1@example.com"
8 Done
```

The simpler method of deleting a TXT record is to use the record ID. If you want to provide the strings, enter them in the order in which they are stored in the record. In the following example, the TXT record is deleted by using its record ID.

```
1 >rm dns txtRec www.example.com -recordID 36865
2 Done
3 > show dns txtRec www.example.com
4 1) Domain : www.example.com      Record id: 14373      TTL : 36000 secs
   Record Type : ADNS
5     "Contact: Mark"
6     "Email: mark1@example.com"
7 Done
```


Configure a TXT record by using the GUI

Navigate to **Traffic Management > DNS > Records > TXT Records** and create a TXT record.

Create CAA records for a domain name

May 2, 2023

Certificate Authority Authorization (CAA) is a type of DNS record that allows the domain owners to specify which Certificate Authority (CA) can issue SSL certificates for the domain.

A secure connection to a service requires SSL/TLS certificates to ensure the identity of the host and establish a secure channel. Not having CAA records can cause a security risk as anybody can generate a Certificate Signing Request (CSR) for the domain and get the certificate signed by any CA.

CAA records provide an extra layer of protection to your web presence by allowing the domain owner to declare which certificate authorities are allowed to issue a certificate for the domain. If there is a request for a certificate from a non-authorized CA, then the CAA record notifies the domain owner about the same. If a CAA record is not present for a domain, any CA is allowed to issue the certificate for that domain.

The NetScaler appliance supports DNS CAA records in the following modes:

- **Proxy:** The appliance caches CAA record response from back-end servers and responds to further queries of the same type from the cache.
- **ADNS:** The appliance responds to the CAA record type DNS queries from the configured DNS records.

Note:

- You can add a maximum of 20 CAA records per domain name.
- Recursive resolver and forwarder modes are not supported.

Add a CAA record using the CLI

At the command prompt, type the following command:

```
1 add dns caaRec <domain> <issuer-string> -tag <tag-string> -flag [None | Critical] [-TTL <secs>]
```

Example:

```
1 > add dns caaRec newdomain string1 -tag Issue -flag None [-TTL 3600]
```

Show command details

```
1 > show dns caaRec
2
3 1) Domain : newdomain ECS Subnet : None Record id: 39423 TTL :
   3600 secs Record Type : ADNS
4
5 Value: string1
6
7 Tag: issue
8
9 Flag: NONE
10
11 2) Domain : test.com ECS Subnet : None Record id: 2572 TTL : 5
   secs Record Type : ADNS
12
13 Value: ca1.test.com
14
15 Tag: issue
16
17 Flag: NONE
```

To remove a CAA record, type the following command at the command prompt:

```
1 rm dns caaRec <domain> <issuer-string> -tag <tag-string> | -recordId <
  positive_integer>@)
```

Example:

```
1 rm dns caaRec newdomain -recordId 39423
```

Note:

-recordId @ is not supported in a cluster.

Add a CAA record using the GUI

Navigate to **Traffic Management > DNS > Records > CAA Records** and create an Address record.

View DNS statistics

May 2, 2023

You can view the DNS statistics generated by the NetScaler appliance. The DNS statistics include run-time, configuration, and error statistics.

View DNS records statistics by using the CLI

At the command prompt, type:

```
stat dns
```

Example:

```
1 > stat dns
2 DNS Statistics
3
4 Runtime Statistics
5 Dns queries                21
6 NS queries                 8
7 SOA queries                18
8 .
9 .
10 .
11 Configuration Statistics
12 AAAA records              17
13 A records                 36
14 MX records                9
15 .
16 .
17 .
18 Error Statistics
19 Nonexistent domain        17
20 No AAAA records           0
21 No A records              13
22 .
23 .
24 .
25 Done
```

View DNS records statistics by using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, click **Statistics**.

Configure a DNS zone

May 2, 2023

A DNS zone entity on the NetScaler appliance facilitates the ownership of a domain on the appliance. A zone on the appliance also enables you to implement DNS Security Extensions (DNSSEC) for the zone, or to offload the zone's DNSSEC operations from the DNS servers to the appliance. DNSSEC

sign operations are performed on all the resource records in a DNS zone. Therefore, if you want to sign a zone, or if you want to offload DNSSEC operations for a zone, you must first create the zone on the NetScaler appliance.

Create a DNS zone on the appliance in the following scenarios:

- The NetScaler appliance owns all the records in a zone, that is, the appliance is operating as the authoritative DNS server for the zone. The zone must be created with the proxyMode parameter set to NO.
- The NetScaler appliance owns only a subset of the records in a zone. All the other resource records in the zone are hosted on a set of back-end name servers. The appliance is configured as a DNS proxy server for these back-end servers. A typical configuration where the NetScaler appliance owns only a subset of the resource records in the zone is a global server load balancing (GSLB) configuration. The NetScaler appliance owns only the GSLB domain names, while the back-end name servers own all the other records. The zone must be created with the proxyMode parameter set to YES.
- You want to offload DNSSEC operations for a zone from your authoritative DNS servers to the appliance. The zone must be created with the proxyMode parameter set to YES. You might have to configure more settings for the zone.

The current topic describes how to create a zone for the first two scenarios. For more information about how to configure a zone for offloading DNSSEC operations to the appliance, see [Offload DNSSEC operations to the NetScaler appliance](#).

Note

If the ADC appliance is operating as the authoritative DNS server for a zone, you must create the Start of Authority (SOA) and name server (NS) records for the zone before you create the zone. If the NetScaler is operating as the DNS proxy server for a zone, SOA and NS records must not be created on the NetScaler appliance. For more information about creating SOA and NS records, see [Configure DNS resource records](#).

When you create a zone, all existing domain names and resource records that end with the name of the zone are automatically treated as a part of the zone. Also, any new resource records created with a suffix that matches the name of the zone are implicitly included in the zone.

Create a DNS zone on the NetScaler appliance by using the CLI

At the command prompt, type the following command to add a DNS zone to the NetScaler appliance and verify the configuration:

```
1 - add dns zone <zoneName> -proxyMode ( YES | NO )
2 - show dns zone [<zoneName> | -type <type>]
```

Example:

```
1 > add dns zone example.com -proxyMode Yes
2 Done
3 > show dns zone example.com
4     Zone Name : example.com
5     Proxy Mode : YES
6 Done
```

Modify or remove a DNS zone by using the CLI

- To modify a DNS zone, type the `set dns zone` command, the name of the DNS zone, and the parameters to be changed, with their new values.
- To remove a DNS zone, type the `rm dns zone` command and the name of the DNS zone.

Configure a DNS zone by using the GUI


Navigate to **Traffic Management > DNS > Zones** and create a DNS zone.

Configure the NetScaler as an ADNS server

November 28, 2023

You can configure the ADC appliance to function as an authoritative domain name server (ADNS) for a domain. As an ADNS server for a domain, the NetScaler resolves DNS requests for all types of DNS records that belong to the domain. To configure the NetScaler to function as an ADNS server for a domain, you must create an ADNS service and configure NS and Address records for the domain on the NetScaler. The ADNS service can be configured using the subnet IP address (SNIP) or a separate IP address. The following topology diagram shows a sample configuration and the flow of requests and responses.

Figure 1. NetScaler as an ADNS

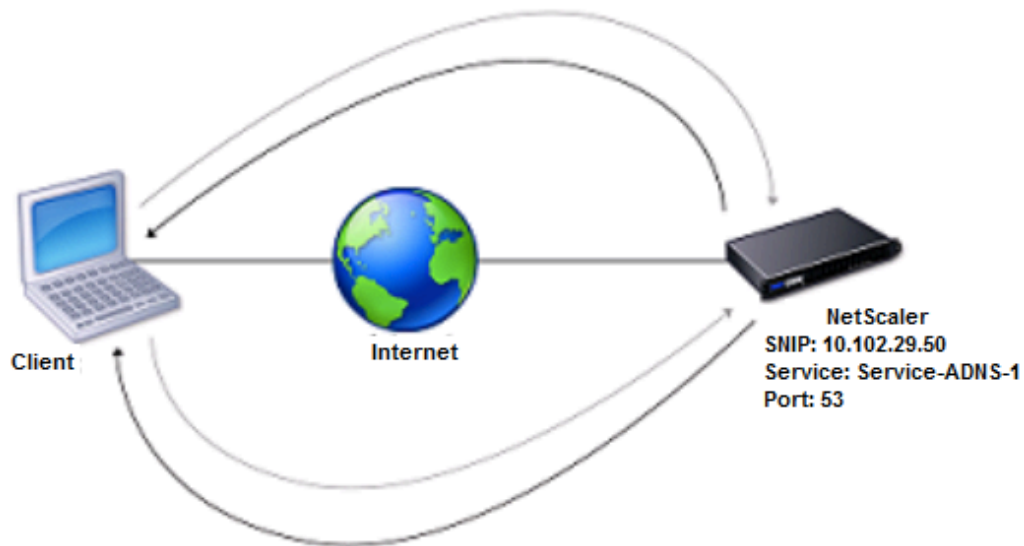

The following table shows the parameters that are configured for the ADNS service illustrated in the preceding topology diagram.


Entity type	Name	IP address	Type	Port
ADNS Service	Service-ADNS-1	10.102.29.51	ADNS	53

Table 1. Example of ADNS Service Configuration

To configure an ADNS setup, you must configure the ADNS service. For instructions on configuring the ADNS service, see [Load balancing](#).

During DNS resolution, the ADNS server directs the DNS proxy or local DNS server to query the NetScaler for the IP address of the domain. Because the NetScaler is authoritative for the domain, it sends the IP address to the DNS proxy or local DNS server. The following diagram describes the placement and role of the ADNS server in a GSLB configuration.

Figure 2. GSLB Entity Model

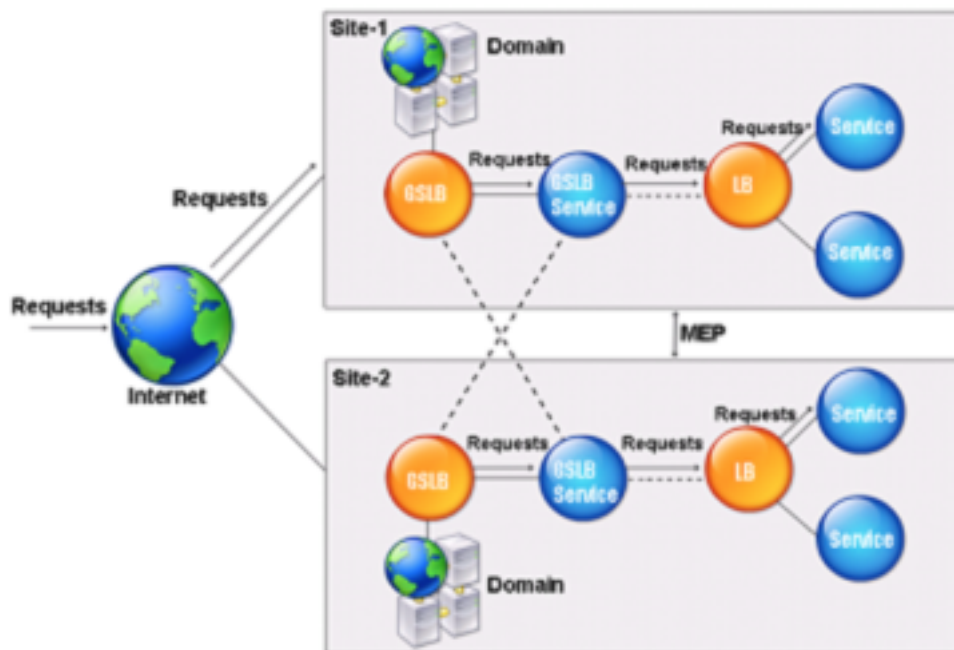

Note: In ADNS mode, if you remove SOA and ADNS records, the following do not function for the domain hosted by the NetScaler: ANY query (for more information about the ANY query, see [DNS ANY query](#)), and negative responses, such as NODATA and NXDOMAIN.

Create an ADNS service

An ADNS service is used for global service load balancing. For more information about creating a GSLB setup, see [Global server load balancing](#). You can add, modify, enable, disable, and remove an ADNS service. For instructions on creating an ADNS service, see [Configure services](#).

Notes:

- You can configure the ADNS service to use SNIP or any new IP address.
- You can configure the ADNS DOT service to encrypt the DNS traffic for the ADNS server.

When you create an ADNS service, the NetScaler responds to DNS queries on the configured ADNS service IP and port.

When you create an ADNS DOT service, NetScaler sends an encrypted DNS response.

You can verify the configuration by viewing the properties of the ADNS service. You can view properties such as name, state, IP address, port, protocol, and maximum client connections.

Configure the ADNS setup to use TCP

By default, some clients use the User Datagram Protocol (UDP) for DNS, which specifies a limit of 512 bytes for the payload length of UDP packets. To handle payloads that exceed 512 bytes in size, the client must use TCP. To enable DNS communications over TCP, you must configure the NetScaler appliance to use the TCP protocol for DNS. The NetScaler then sets the truncation bit in the DNS response packets. The truncation bit specifies that the response is too large for UDP and that the client must send the request over a TCP connection. The client then uses the TCP protocol on port 53 and opens a new connection to the NetScaler. The NetScaler listens on port 53 with the IP address of the ADNS service to accept the new TCP connections from the client.

To configure the NetScaler to use the TCP protocol, you must configure an ADNS_TCP service. For instructions on creating an ADNS_TCP service, see [Load balancing](#).

Important

To configure the NetScaler to use UDP for DNS and use TCP only when the payload length of UDP exceeds 512 bytes, you need to configure the ADNS and ADNS_TCP services. The IP address of the ADNS_TCP service must be the same as the IP address of the ADNS service.

Add DNS resource records

After you create an ADNS service, you can add DNS records. For instructions on adding DNS records, see [Configure DNS resource records](#).

Remove ADNS services

For instructions on removing services, see [Load balancing](#)

Configure domain delegation

Domain delegation is the process of assigning responsibility for a part of the domain space to another name server. Therefore, during domain delegation, the responsibility for responding to the query is delegated to another DNS server. Delegation uses NS records.

In the following example, sub1.abc.com is the subdomain for abc.com. The procedure describes the steps to delegate the subdomain to the name server ns2.sub1.abc.com and add an Address record for ns2.sub1.abc.com.

To configure domain delegation, you need to perform the following tasks, which are described in the sections that follow:

1. Create an SOA record for a domain.

2. Create an NS record to add a name server for the domain.
3. Create an Address record for the name server.
4. Create an NS record to delegate the subdomain.
5. Create a glue record for the name server.

Create an SOA record

For instructions on configuring SOA records, see [Create SOA records for authoritative information](#).

Create an NS record for a name server

For instructions on configuring an NS record, see [Create NS records for an authoritative server](#). In the **Name Server** list, select the primary authoritative name server, for example, ns1.abc.com.

Create an address record

For instructions on configuring Address records, see [Create address records for a domain name](#). In the Host Name and IP address text boxes, type the domain name for the DNS Address record and the IP address, for example, ns1.abc.com and 10.102.11.135, respectively.

Create an NS record for domain delegation

For instructions on configuring NS records, see [Create NS records for an authoritative server](#). In the **Name Server** list, select the primary authoritative name server, for example, ns2.sub1.abc.com.

Create a glue record

NS records are typically defined immediately after the SOA record (not a restriction.) A domain must have at least two NS records. If an NS record is defined within a domain, it must have a matching Address record. This Address record is referred to as a glue record. Glue records speed up DNS queries.

For instructions on adding glue records for a subdomain, see the procedure for adding an Address (A) record, [Configure DNS resource records](#).


For instructions on configuring Address records, see [Create address records for a domain name](#). In the Host Name and IP address text boxes, type the domain name for the DNS Address record and the IP address, for example, ns2.sub1.abc.com and 10.102.12.135, respectively.

Configure the NetScaler appliance as a DNS proxy server

June 7, 2024

As a DNS proxy server, the ADC appliance can function as a proxy for either a single DNS server or a group of DNS servers. The flow of requests and responses is illustrated in the following sample topology diagram.

Figure 1. NetScaler as DNS proxy

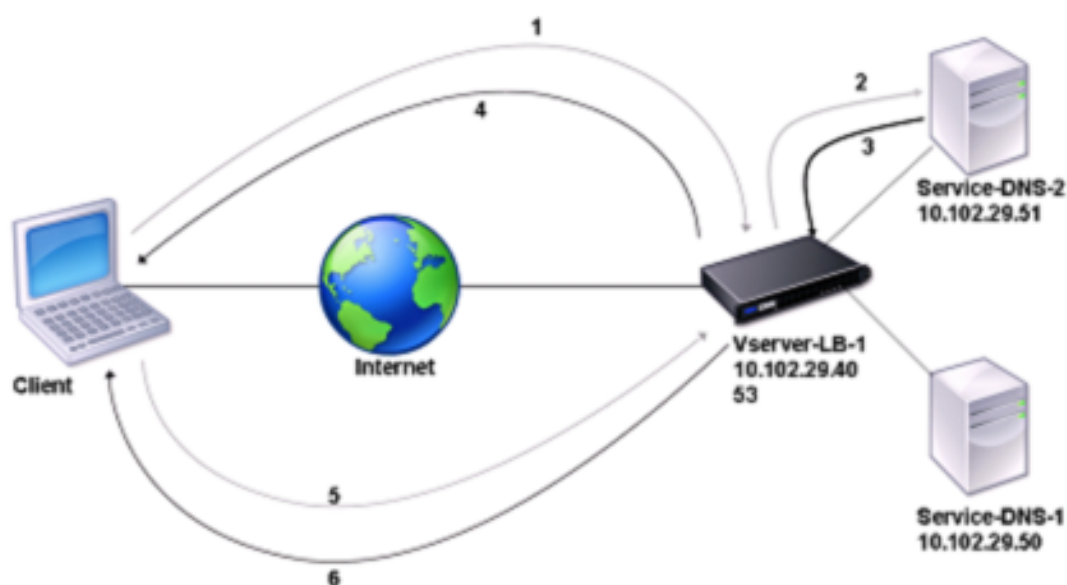

By default, the NetScaler appliance caches responses from DNS name servers. When the appliance receives a DNS query, it checks for the queried domain in its cache. If the address for the queried domain is present in its cache, the NetScaler returns the corresponding address to the client. Otherwise, it forwards the query to a DNS name server that checks for the availability of the address and returns it to the NetScaler. The NetScaler then returns the address to the client.

For requests for a domain that has been cached earlier, the NetScaler serves the Address record of the domain from the cache without querying the configured DNS server.

For the DOT request for a domain, if the cached information is not encrypted, NetScaler forwards the query to a DNS name server that checks for the availability of the address and returns it to NetScaler. NetScaler encrypts the address and response to the client. It also caches the records with a secure option. For the UDP or TCP request for a domain that has a secure option enabled, NetScaler serves the address record of the domain from the cache without querying the configured DNS server.

The appliance discards a record stored in its cache when the time-to-live (TTL) value of the record

reaches the configured value. A client that requests an expired record has to wait until the NetScaler retrieves the record from the server and updates its cache. To avoid this delay, the NetScaler proactively updates the cache by retrieving the record from the server before the record expires.


The following table lists sample names and the values of the entities that need to be configured on the NetScaler.

Table 1. Example of DNS Proxy Entity Configuration

Entity type	Name	IP address	Type	Port
LB virtual server	Vserver-DNS-1	10.102.29.40	DNS	53
Services	Service-DNS-1	10.102.29.50	DNS	53
Services	Service-DNS-2	10.102.29.51	DNS	53

The following diagram shows the entities of a DNS Proxy and the values of the parameters to be configured on the NetScaler.

Figure 2. DNS Proxy Entity Model

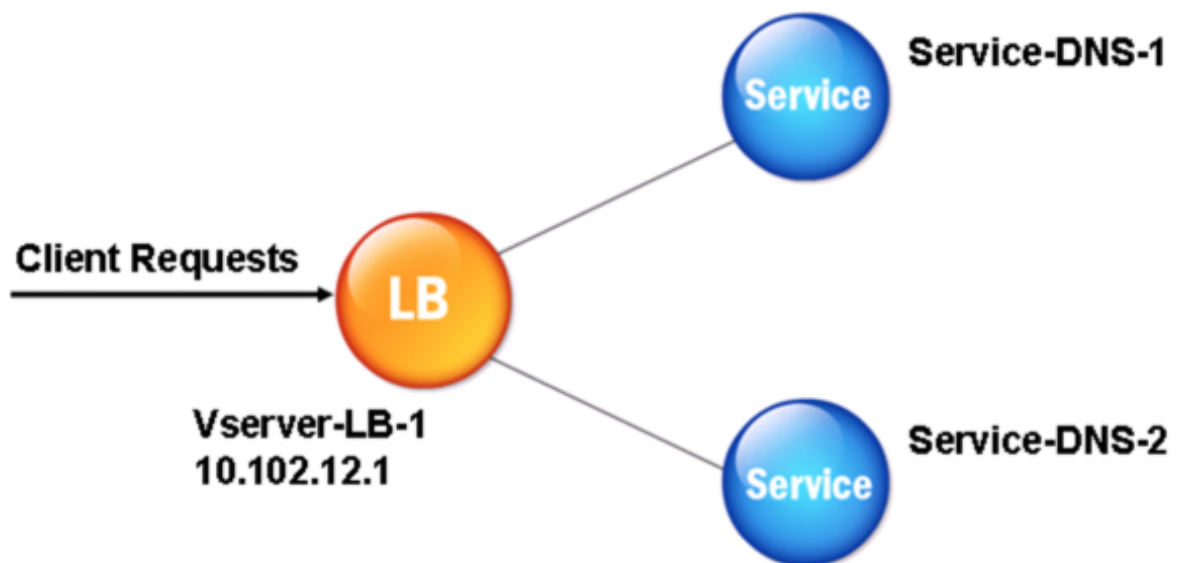

Note

To configure the DNS proxy feature, you need to know how to configure load balancing services and virtual servers.

Create a load balancing virtual server

To configure a DNS Proxy on the NetScaler, configure a load balancing virtual server of type DNS. To configure a DNS virtual server to load balance a set of DNS servers that support recursive queries, you must set the Recursion Available option. With this option, the RA bit is set to ON in the DNS replies from the DNS virtual server.

For instructions on creating a load balancing virtual server, see [Load Balancing](#).

Create DNS services

After creating a load balancing virtual server of type DNS, you must create DNS services. You can add, modify, enable, disable, and remove a DNS service. For instructions on creating a DNS service, see [Load Balancing](#).

Bind a load balancing virtual server to DNS services

To complete the DNS Proxy configuration, you must bind the DNS services to the load balancing virtual server. For instructions on binding a service to a load balancing virtual server, see [Load Balancing](#).

Configure the DNS proxy setup to use TCP

Some clients use the User Datagram Protocol (UDP) for DNS communications. However, UDP specifies a maximum packet size of 512 bytes. When payload lengths exceed 512 bytes, the client must use TCP. When a client sends the NetScaler appliance a DNS query, the appliance forwards the query to one of the name servers. If the response is too large for a UDP packet, the name server sets the truncation bit in its response to the NetScaler. The truncation bit indicates that the response is too large for UDP and that the client must send the query over a TCP connection. The ADC appliance relays the response to the client with the truncation bit intact. It waits for the client to initiate a TCP connection with the IP address of the DNS load balancing virtual server, on port 53. The client sends the request over a TCP connection. The NetScaler appliance then forwards the request to the name server and relays the response to the client.

To configure the NetScaler to use the TCP protocol for DNS, you must configure a load balancing virtual server and services, both of type DNS_TCP. You can configure monitors of type DNS_TCP to check the state of the services. For instructions on creating DNS_TCP virtual servers, services, and monitors, see [Load Balancing](#).

For updating the records proactively, the NetScaler uses a TCP connection to the server to retrieve the records.

Important

To configure the NetScaler to use UDP for DNS and use TCP only when the payload length of UDP exceeds 512 bytes, you need to configure both DNS and DNS_TCP services. The IP address of the DNS_TCP service must be the same as the IP address of the DNS service.

Configure time-to-live values for DNS entries

The TTL is the same for all DNS records with the same domain name and record type. If the TTL value is changed for one of the records, the new value is reflected in all records of the same domain name and type. The default TTL value is 3600 seconds. The minimum is 0, and the maximum is 604800. If a DNS entry has a TTL value less than the minimum or greater than the maximum, it is saved as the minimum or maximum TTL value, respectively.

Specify the minimum and maximum TTL by using the CLI

At the NetScaler command prompt, type the following commands to specify the minimum and maximum TTL and verify the configuration:

```
1 - set dns parameter [-minTTL <secs>] [-maxTTL <secs>]
2 - show dns parameter
```

Example:

```
1 > set dns parameter -minTTL 1200 -maxTTL 1800
2 Done
3 > show dns parameter
4     DNS parameters:
5     DNS retries: 5
6     Minimum TTL: 1200           Maximum TTL: 1800
7     .
8     .
9     .
10 Done
11 >
```

Specify the minimum and maximum TTL by using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, under Settings, click Change DNS settings.
3. In the Configure DNS Parameters dialog box, in TTL, in the Minimum and Maximum text boxes, type the minimum and maximum time to live (in seconds), respectively, and then click OK.

Note: When the TTL expires, the record is deleted from the cache. The NetScaler proactively contacts the servers and obtains the DNS record just before the DNS record expires.

Flush DNS records

You can delete all DNS records present in the cache. For example, you might want to flush DNS records when a server is restarted after modifications are made.

Delete all proxy records by using the CLI

At the NetScaler command prompt, type:

```
flush dns proxyRecords
```

Delete all proxy records by using the GUI

1. Navigate to **Traffic Management > DNS > Records**.
2. In the details pane, click Flush Proxy Records.

Add DNS resource records

You can add DNS records to a domain for which the NetScaler appliance is configured as a DNS proxy server. For information about adding DNS records, see [Configuring DNS Resource Records](#).

Remove a load balancing DNS virtual server

For information about removing a load balancing virtual server, see [Load Balancing](#).

Limit the number of concurrent DNS requests on a client connection

You can limit the number of concurrent DNS requests on a single client connection, which is identified by the `<clientip:port>-<vserver ip:port>` tuple. Concurrent DNS requests are those requests that the NetScaler appliance has forwarded to the name servers and for which the appliance is awaiting responses. Limiting the number of concurrent requests on a client connection enables you to protect the name servers when a hostile client attempts a Distributed Denial of Service (DDoS) attack by sending a flood of DNS requests. When the limit for a client connection is reached, subsequent DNS requests on the connection are dropped until the outstanding request count goes below the limit. This limit does not apply to the requests that the NetScaler appliance serves out of its cache.

The default value for this parameter is 255. This default value is sufficient in most scenarios. If the name servers serve many concurrent DNS requests under normal operating conditions, you can specify either a large value or a value of zero (0). A value of 0 disables this feature and specifies that there is no limit to the number of DNS requests that are allowed on a single client connection. This parameter is a global parameter and applies to all the DNS virtual servers that are configured on the NetScaler appliance.

The default value for this parameter is 255. This default value is sufficient in most scenarios. If the name servers serve many concurrent DNS requests under normal operating conditions, you can specify either a large value or a value of zero (0). A value of 0 disables this feature and specifies that there is no limit to the number of DNS requests that are allowed on a single client connection. This parameter is a global parameter and applies to all the DNS virtual servers that are configured on the NetScaler appliance.

The default value for this parameter is 255. This default value is sufficient in most scenarios. If the name servers serve many concurrent DNS requests under normal operating conditions, you can specify either a large value or a value of zero (0). A value of 0 disables this feature and specifies that there is no limit to the number of DNS requests that are allowed on a single client connection. This parameter is a global parameter and applies to all the DNS virtual servers that are configured on the NetScaler appliance.

Specify the maximum number of concurrent DNS requests allowed on a single client connection by using the CLI

At the command prompt, type the following commands to specify the maximum number of concurrent DNS requests allowed on a single client connection and verify the configuration:

```
1 - set dns parameter -maxPipeline <positive_integer>
2 - show dns parameter
```

Example:

```
1 > set dns parameter -maxPipeline 1000
2 Done
3 > show dns parameter
4     DNS parameters:
5     DNS retries: 5
6     .
7     .
8     .
9     Max DNS Pipeline Requests: 1000
10 Done
```

Specify the maximum number of concurrent DNS requests allowed on a single client connection by using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, click Change DNS settings.
3. In the Configure DNS Parameters dialog box, specify a value for Max DNS Pipeline Requests.
4. Click OK.

DNS ECS Insertion Support

The DNS server response time can be improved by including the ECS in the DNS query. This enables the DNS server to redirect requests to the appropriate geographical location. Depending on the client IP address and a subnet mask, you can include an Extended Client Subnet (ECS) option in proxied DNS queries.

Configure the ECS parameter using CLI

At the command prompt, type:

```
add dns profile <profilename> -insertECS <ENABLED|DISABLED> -replaceECS  
<ENABLED|DISABLED> -maxCacheableECSPrefixLength <0-32> -maxCacheableECSPrefix  
<0-128>
```

- `insertECS` - When enabled, DNS requests proxied through a load balancing virtual server with the DNS profile will have an ECS option based on the client IP address. By default, this parameter is DISABLED.
- `replaceECS` -when enabled, DNS requests proxied through a load balancing virtual server with the DNS profile ECS option is replaced with a new ECS based on the client IP address. By default, this parameter is DISABLED.
- `maxCacheableECSPrefixLength` - Specifies the maximum prefix length of the network mask used for the ECS option for IPv4 addresses. Valid values: 0-32 Default value: 32
- `maxCacheableECSPrefixLength6` - Specifies the maximum prefix length of the network mask used for the ECS option for IPv6 addresses. Valid values: 0-128 Default value: 128.

Configure the ECS parameter using GUI

1. Navigate to **System > Profiles > DNS Profile**, and create the DNS profile.
2. Enable **Insert ECS** or **Replace ECS**.
3. Enter the prefix length for IPv4 and IPv6.
4. Click **OK**.

Configure the NetScaler as an end resolver


May 2, 2023

A resolver is a procedure that is invoked by an application program that translates a domain/host name to its resource record. The resolver interacts with the LDNS, which looks up the domain name to obtain its IP address. The NetScaler can provide end-to-end resolution for DNS queries.

In recursive resolution, the NetScaler appliance queries different name servers recursively to access the IP address of a domain. When the NetScaler receives a DNS request, it checks its cache for the DNS record. If the record is not present in the cache, it queries the root servers configured in the ns.conf file. The root name server reports back with the address of a DNS server that has detailed information about the second-level domain. The process is repeated until the required record is found.

When you start the NetScaler appliance for the first time, 13 root name servers are added to the ns.conf file. The NS and Address records for the 13 root servers are also added. You can modify the ns.conf file, but the NetScaler does not allow you to delete all 13 records. At least one name server entry is required for the appliance to perform name resolution. The following diagram illustrates the process of name resolution.

Figure 1. Recursive resolution

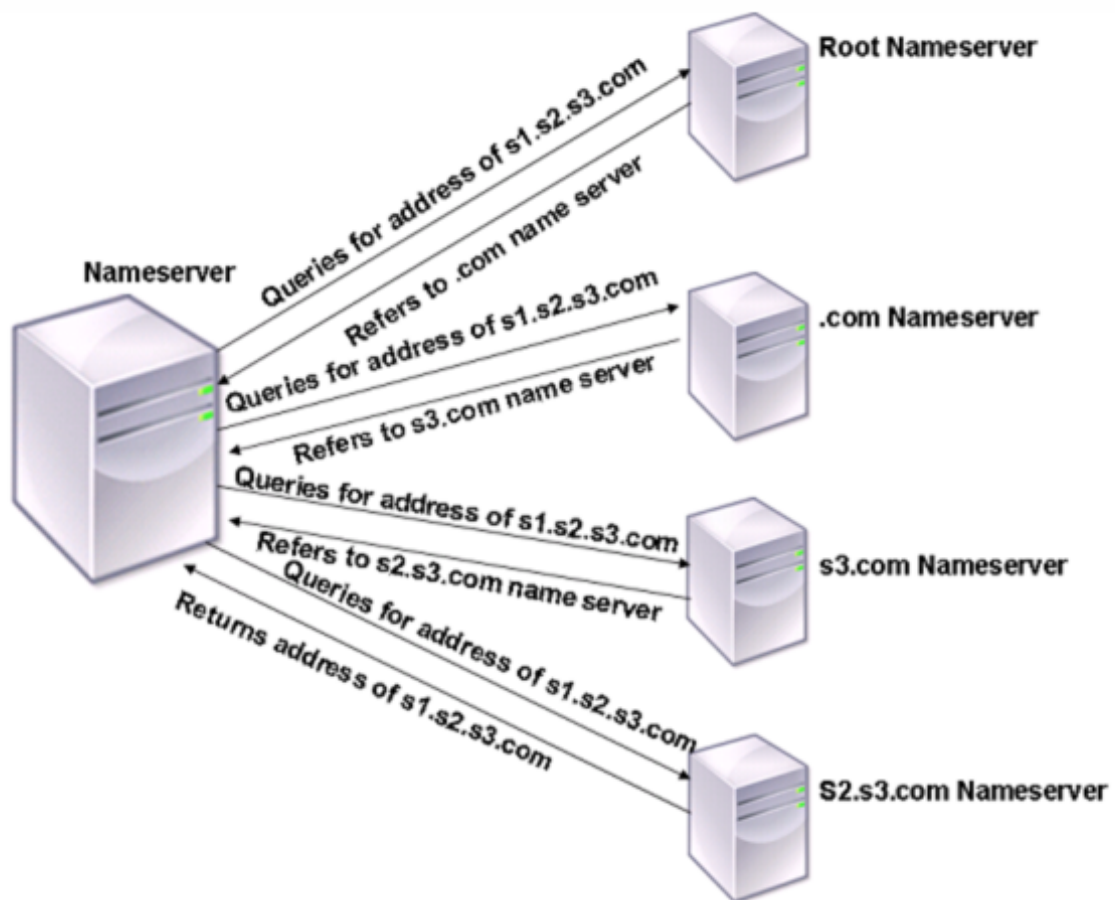

In the process shown in the diagram, when the name server receives a query for the address of s1.s2.s3.com, it first checks the root name servers for s1.s2.s3.com. A root name server reports back with the address of the .com name server. If the address of s1.s2.s3.com is found in the name server, it responds with a suitable IP address. Otherwise, it queries other name servers for s3.com, then for s2.s3.com to retrieve the address of s1.s2.s3.com. In this way, resolution always starts from root name servers and ends with the domain's authoritative name server.

Note

For recursive resolution functionality, caching must be enabled.

Enable recursive resolution

To configure the NetScaler appliance to function as an end resolver, you must enable recursive resolution on the appliance. You must also add a DNS name server with the local option for the feature to work.

Enable recursive resolution by using the CLI

At the command prompt, type the following commands to enable recursive resolution and verify the configuration:

```
1 - set dns parameter -recursion ENABLED
2 - show dns parameter
```

Example:

```
1 > set dns parameter -recursion ENABLED
2 Done
3 > show dns parameter
4     DNS parameters:
5         .
6         .
7         .
8     Recursive Resolution : ENABLED
9         .
10        .
11        .
12 Done
```

Enable recursive resolution by using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, under Settings, click Change DNS settings.
3. In the Configure DNS Parameters dialog box, select the Enable recursion check box, and then click OK.

Add a name server (when the NetScaler appliance acts as a resolver) by using the CLI

At the command prompt, type:

```
1 add dns nameServer ((<IP> [-local]) | <dnsVserverName>)
```

Example:

```
1 add dns nameServer 10.102.9.19 -local
2 show dns nameServer
3 1) 10.102.9.19 LOCAL - State: UP Protocol: UDP
4 Done
```

Local - Mark the IP address as one that belongs to a local recursive DNS server on the NetScaler appliance. The appliance recursively resolves queries received on an IP address that is marked as being local.

For recursive resolution to work, the global DNS parameter, `recursion`, must also be set. If no name server is marked as being local, the appliance functions as a stub resolver and load balances the name servers.

Add a name server by using the GUI

Navigate to **Traffic Management > DNS > Name Servers** and create a name server.

Enable DNS root referral

DNS root referral is disabled by default. When enabled, the ADC appliance responds with the root referral records.

Send a root referral if a client queries a domain name that is unrelated to the domains configured/cached on the NetScaler appliance. If the setting is disabled, the appliance sends a blank response instead of a root referral. Applicable to domains for which the appliance is authoritative. Disable the parameter when the appliance is under attack from a client that is sending a flood of queries for unrelated domains.

Enable root referral by using the CLI

At the command prompt, type the following commands to enable recursive resolution and verify the configuration:

```
1 - set dns parameter -dnsrootReferral ENABLED
2 - show dns parameter
```

Example:

```
1 > set dns parameter -recursion ENABLED
2 Done
3 > show dns parameter
4     DNS parameters:
5     .
6     .
7     .
8     DNS Root Referral : ENABLED
9     .
10    .
11    .
12 Done
```

Enable root referral by using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, under **Settings**, click **Change DNS settings**.
3. In the **Configure DNS Parameters** dialog box, select the **Enable Root Referral** check box, and then click **OK**.

Set the Number of Retries

Configure the ADC appliance to make a preconfigured number of attempts (called DNS retries) when it does not receive a response from the server to which it sends a query. By default, the number of DNS retries is set to 5.

Set the number of DNS retries by using the CLI

At the command prompt, type the following commands to set the number of retries and verify the configuration:

```
1 - set dns parameter -retries <positive_integer>
2 - show dns parameter
```

Example:

```
1 > set DNS parameter -retries 3
2 Done
3 > show dns parameter
4     DNS parameters:
5     DNS retries: 3
6     .
7     .
8     .
9 Done
```

Set the number of retries by using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, under **Settings**, click **Change DNS settings**.
3. In the **Configure DNS Parameters** dialog box, in the **DNS Retries** text box, type the DNS resolver request retry count, and then click **OK**.

Configure the NetScaler appliance as a forwarder

May 2, 2023

A forwarder is a server that forwards DNS queries to DNS servers that are outside the forwarder server's network. Queries that cannot be resolved locally are forwarded to other DNS servers. A forwarder accumulates external DNS information in its cache as it resolves DNS queries. To configure the NetScaler appliance as a forwarder, you must add an external name server.

The NetScaler appliance allows you to add external name servers to which it can forward the name resolution queries that cannot be resolved locally. To configure the NetScaler appliance as a forwarder, you must add the name servers to which it must forward name resolution queries. You can specify the lookup priority to specify the name service that the NetScaler appliance must use for name resolution.

For information on how to configure the NetScaler appliance as a forwarder, see [Add a name server \(when the NetScaler appliance acts as a forwarder\) by using the CLI](#).

Note:

The NetScaler appliance in forwarder mode supports TCP, UDP, and UDP-TCP name servers.

- If you have configured a TCP name server, then the NetScaler appliance sends the DNS request over TCP.
- If you have configured a UDP name server, then the NetScaler appliance sends the DNS request over UDP.
- If you have configured a UDP-TCP name server, then the NetScaler appliance sends the DNS request over UDP. However if the truncated bit is set in the DNS response, the appliance sends such DNS requests over TCP.

Add a name server

You can create a name server by specifying its IP address or by configuring an existing virtual server as the name server.

- **IP address-based name server** - An external name server to contact for domain name resolution. If multiple IP address-based name servers are configured on the appliance, and the local parameter is not set on any of them, incoming DNS queries are load balanced across all the name servers, in round robin fashion.
- **Virtual server-based name server** - A DNS virtual server configured in the NetScaler. For more fine-grained control on how external DNS name servers are load balanced (for example, you want a load balancing method other than round robin), do the following:

- Configure a DNS virtual server on the appliance
- Bind the external name servers as its services
- Specify the name of the virtual server in this command.

To verify the configuration, you can use the `show dns nameServer` command.

To remove a name server, at the NetScaler CLI, type the `rm dns nameServer` command followed by the IP address of the name server.

To view the details of the DNS nameserver, at the NetScaler CLI, type the `show dns nameServer` command followed by the IP address of the name server.

Add a name server (when the NetScaler appliance acts as a forwarder) by using the CLI

At the command prompt, type;

```
1 add dns nameServer ((<IP> | <dnsVserverName>)
```

Or

```
1 add dns nameServer ((<IP> | <dnsVserverName>) [-type <type>]
```

Examples:

```
1 add dns nameServer dnsVirtualNS
2
3 add dns nameServer 192.0.2.11 -type TCP
4
5 add dns nameServer 192.0.2.12 -type UDP_TCP
6
7
8 add dns nameServer 192.0.2.10
9 show dns nameServer 192.0.2.10
10
11 1) 192.0.2.10 - State: UP Protocol: UDP
12 Done
```

Note:

If the name server type is not specified, a UDP name server is created by default. To create a name server of type TCP or UDP_TCP, you must specify the type.

When you specify the type as UDP_TCP, two name servers (one UDP name server and one TCP name server) are created for the given IP address.

Add a name server (when the NetScaler appliance acts as a resolver) by using the CLI

Specify the `local` parameter for a recursive resolver. Enable recursion using the `set dns parameter` command.

At the command prompt, type:

```
1 add dns nameServer ((<IP> [-local]) | <dnsVserverName>)
2 show dns nameServer
3 set dns parameter -recursion ENABLED
4 show dns parameter
```

Example:

```
1 add dns nameServer 10.102.9.19 -local
2 show dns nameServer
3 1) 10.102.9.19 LOCAL - State: UP Protocol: UDP
4 Done
5 set dns parameter -recursion ENABLED
6 Done
7 show dns parameter
8     DNS parameters:
9     .
10    .
11    .
12    Recursive Resolution : ENABLED
13    .
14    .
15    .
16 Done
```

Local - Mark the IP address as one that belongs to a local recursive DNS server on the NetScaler appliance. The appliance recursively resolves queries received on an IP address that is marked as being local.

For recursive resolution to work, the global DNS parameter, `recursion`, must also be set.

If no name server is marked as being local, the appliance functions as a stub resolver and load balances the name servers.

Add a name server by using the GUI

Navigate to **Traffic Management > DNS > Name Servers** and create a name server.

Set DNS lookup priority

You can set the lookup priority to either DNS or WINS. This option is used in the SSL VPN mode of operation.

Set the lookup priority to DNS by using the CLI

At the command prompt, type the following commands to set the lookup priority to DNS and verify the configuration:

```
1 - set dns parameter -nameLookupPriority (DNS | WINS)
2 - show dns parameter
```

Example:

```
1 > set dns parameter -nameLookupPriority DNS
2 Done
3 > show dns parameter
4
5      .
6      .
7      Name lookup priority : DNS
8      .
9      .
10     .
11 Done
```

Set lookup priority to DNS by using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, under **Settings**, click **Change DNS settings**.
3. In the **Configure DNS Parameters** dialog box, under **Name Lookup Priority**, select DNS or WINS, and then click **OK**.

Note

If the DNS virtual server that you have configured is DOWN and if you set the `-nameLookupPriority` to DNS, the NetScaler does not attempt WINS lookup. Therefore, if a DNS virtual server is not configured or is disabled, set the `-nameLookupPriority` to WINS.

Disable and enable name servers

The following procedure describes the steps to enable or disable an existing name server.

Enable or disable a name server by using the CLI

At the command prompt, type the following commands to enable or disable a name server and verify the configuration:

```
1 - (enable | disable) dns nameServer <IPAddress>
2 - show dns nameServer <IPAddress>
```

Example:

```
1 > disable dns nameServer 10.102.9.19
2 Done
3 > show dns nameServer 10.102.9.19
4 1)      10.102.9.19: LOCAL - State: OUT OF SERVICE
5 Done
```

Enable or disable a name server by using the GUI

1. Navigate to **Traffic Management > DNS > Name Servers**.
2. In the details pane, select the name server that you want to enable or disable.
3. Click **Enable** or **Disable**. If a name server is enabled, the **Disable** option is available. If a name server is disabled, the **Enable** option is available.

Configure NetScaler as a non-validating security aware stub-resolver

May 2, 2023

Starting with NetScaler 12.1 build 49.xx, NetScaler acts as a non-validating security aware stub-resolver. To enable this support, the AD bit is set in the DNS header and the DO bit is unset in the OPT header. When the AD bit is set and the DO bit is unset, the upstream recursive resolver validates the DNSSEC response. If the validation is successful, the recursive resolver responds without DNSSEC RRs. If the DNSSEC validation fails, then the recursive resolver returns with a SERVFAIL response.

Important:

The AD bit is set by default in the ADC forwarder. The AD bit is not set for DBS initiated queries.

Jumbo frames support for DNS to handle responses of large sizes

May 2, 2023

Starting with NetScaler 12.1 build 49.xx, DNS supports jumbo frames for handling UDP responses greater than 1,280 bytes. Previously, the NetScaler appliance only supported UDP packet size only up to 1,280 bytes.

You can set the maximum UDP packet size that the appliance can handle in proxy, ADNS, and forwarder modes by configuring the Maximum UDP Packet Size parameter value. For example, if the Maximum UDP Packet Size parameter value is set to 4096, the appliance can handle DNS response of size 4,096 bytes.

Important

- In proxy mode, the least size between the client request OPT payload size and the Maximum UDP Packet Size value is considered for sending DNS queries to the back end. For example, if the client request OPT payload size is 3000, and the Maximum UDP Packet Size value is 4096, 3,000 bytes DNS queries are sent to the back end.

Also, from the back end, the appliance can receive responses of large sizes and process responses of large sizes.
- In forwarder mode, the appliance sets the OPT payload size equal to the UDP packet size parameter value.
- If the DNS records are local to the appliance, then the appliance can compose response sizes as large as the Maximum UDP Packet Size parameter value. This setting is applicable for ADNS, proxy, and recursive resolvers.

To configure the maximum UDP packet size using the CLI

At the command prompt, type:

```
1 set dns parameter [-maxUDPPacketSize <positive_integer>]
```

Example:

```
1 set dns parameter -maxUDPPacketSize 10000
```

Note:

The minimum and maximum value that you can set for the Maximum UDP Packet Size parameter is 512 and 16384 respectively. Default value is 1280.

To configure the maximum UDP packet size using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, click **Change DNS settings**.
3. In Maximum UDP Packet Size, specify the maximum UDP packet size.
4. Click **OK**.

Configure DNS logging

December 18, 2024

You can configure the NetScaler appliance to log the DNS requests and responses that it handles. The appliance logs the DNS requests and responses in SYSLOG format. You can choose to log either DNS requests or DNS responses, or both, and send the syslog messages to a remote log server. The log messages can be used to:

- Audit the DNS responses to the client
- Audit DNS clients
- Detect and prevent DNS attacks
- Troubleshoot

A NetScaler appliance can log the following sections in the DNS request or response, based on your configuration:

- Header Section
- Questions Section
- Answer Section
- Authority Section
- **Additional** Section

DNS profiles

You can use a DNS profile to configure the various DNS parameters that you want the DNS endpoint to apply to the DNS traffic. In the profile, you can enable logging, caching, and negative caching.

Important: From the NetScaler 11.0 release, enabling DNS caching using global DNS parameters have been deprecated. You can enable or disable DNS caching using DNS profiles. You can now enable DNS caching for an individual virtual server by enabling DNS caching in a DNS profile and setting the DNS profile to the individual virtual server.

DNS profiles support the following types of DNS logging:

- DNS Query Logging
- DNS Answer Section Logging
- DNS Extended Logging
- DNS Error Logging

DNS query logging

You can configure a NetScaler appliance to log only the DNS queries that are received by the DNS endpoints on the appliance.

Note: If errors occur during processing of a query, they are logged if this option is set in the DNS profile.

Following is an example of a query log message:

```
1 DNS DNS_QUERY 143 0 : U:10.102.27.70#61297:10.102.27.73#53/22142/Q/  
2 (RD)/NO/1/0/0/0#test.com./1#
```

DNS answer section logging

You can configure a NetScaler appliance to log all the **Answer** sections in the DNS responses that the appliance sends to the client. DNS Answer Section logging is useful when the NetScaler is configured as a DNS resolver, or in GLSB use cases.

Following is an example of a DNS answer section log:

```
1 DNS DNS_RESPONSE 6678 0 : U:100.100.100.210#32776:100.100.100.10#  
2 53/61373/Q/(RD,AA,RA,R)/NO/1/1/2/4#n1.citrix.com1./  
3 28#ANS#AAAA/120/1111:2345:6789:ffab:abcd:effa:1234:3212##
```

DNS extended logging

To configure a NetScaler appliance to log Authority and **Additional** sections in the DNS responses, enable Extended logging with Answer Section logging.

Note: If errors occur during processing of either queries or responses, the errors are logged if this option is set in the DNS profile.

Following is an example of a message logged when the cache lookup is completed and the response is embedded in the packet:

```
1 DNS DNS_RESPONSE 2252 0 : T:100.100.100.118#21411:100.100.100.10  
2 #53/48537/Q/(RD,AA,CD,RA,R)/NO/1/1/2/6#a1.citrix.com1./1#ANS#A/  
3 120/1.1.1.1##AUTH#citrix.com1/NS/120/n2.citrix.com1#n1.citrix.com1##ADD  
4 #n1.citrix.com1  
5 /A/120/1.1.1.1#1.1.1.2##n1.citrix.com1/AAAA/120/  
6 1111:2345:6789:ffab:abcd:effa:1234:3212##n2.citrix.com1/A/120/2.1.1.2  
7 ##n2.citrix.com1/AAAA/120/2222:faff:3212:8976:123:1241:64:ff9b##OPT  
8 /0/1280/DO##
```

DNS error logging

You can configure a NetScaler appliance to log the errors or failures that occur when it processes a DNS query or response. For these errors, the appliance logs the DNS header, **Question** sections and OPT records.

Following is an example of a message logged when an error occurs during processing of a DNS request or response:

```
1 DNS DNS_ERROR 149 0 : U:10.102.27.70#27832:10.102.27.73#53/61153/Q/
2 (RD)/NO/1/0/0/0#test.com./1140#Packet Dropped
```

Policy-based logging

You can configure custom logging based on DNS expressions by configuring the logAction on DNS policies, Rewrite, or Responder policies. You can specify that logging occurs only when a particular DNS policy evaluates to true. For more information, see [Configure policy based logging for DNS](#).

Understand the NetScaler syslog log message format

NetScaler appliance log DNS requests and responses in the following Syslog format:

```
1 <transport> :<client IP>#<client ephemeral port>:<DNS endpoint IP>#<
  port>
2 : <query id> /opcode/header flags/rcode/question section count/answer
  section count
3 / auth section count / additional section count #<queried domain name>
4 /<queried type>#...
```

- **<transport>:**
 - T = TCP
 - U = UDP
- **<client IP>#< client ephemeral port >:** DNS client IP address and port number
- **<DNS endpoint IP>#<port>:** NetScaler DNS endpoint IP address and port number
- **<query id>:**
Query ID
- **<opcode>:** Operation code. Supported Values:
 - Q: query
 - I: inverse query
 - S: status

- X0: unassigned
- N: notify
- U: update
- X1-10: unassigned values

- **<header flags>**: Flags. Supported Values:
 - RD: recursion desired
 - TC: truncated
 - AA: authoritative response
 - CD: check disabled
 - AD: authenticated data
 - Z: unassigned
 - RA: recursion available
 - R: response

- **<rcode>**: Response Code. Supported Values:
 - NO: no error
 - F format error
 - S: server failure
 - NX: non-existent domain
 - NI: not implemented
 - R: query refused
 - YX: Name Exists when it must not
 - YXR: RR Set Exists when it must not
 - NXR: RR Set that must exist does not
 - NAS: Server Not Authoritative for zone
 - NA: Not Authorized
 - NZ: Name not contained in zone
 - X1-5: unassigned

- **/question section count/answer section count/auth section count/additional section count**: Question section, Authority section count, and **Additional** section count in the DNS request

- **<queried domain name>/<queried type>**: Queried domain and queried type in the DNS request

- **#ANS#<record type>/<ttd>/.. #AUTH#<domain name>/<record type>/<ttd>.. #ADD#<domain name>/<record type>/<ttd>...:**
In DNS responses:

Answer Section is logged if answer section logging is enabled in the DNS profile. Authority and **Additional** sections are logged if extended logging is enabled in the DNS profile. The log format would differ depending on the type of record. For more information see Understanding the Record Logging Format.

- ANS: answer section
 - AUTH: authority
 - ADD: **Additional** section
- **OPT/<edns version>/UDP max payload size/DO**: OPT record format in the DNS log
 - **OPT/<EDNS version>/<UDP payload size>/<“DO” or empty based on whether DNSSEC OK bit is set or not>/<value of RDLEN>/ECS/<Q/R>/<option length>/<Family>/<Source Prefix-Length>/<Scope Prefix-Length>/<ECS Address>**:

If the DNS query or response includes the EDNS Client Subnet (ECS) option, then that is also logged in the OPT record format in the DNS log file.

When a DNS query with an ECS option that includes either an IPv4 or IPv6 address is sent, the ECS option is logged with either of the following options;

- “ECS/Q” indicating that the values in the log are from the query
- “ECS/R” indicating that the values in the log are from the response.

The value of Scope Prefix-Length is also set appropriately. In the DNS Query, it is set to zero, and for response, it is set to the calculated value.

The following table describes the logged details in various scenarios:

Scenario	ECS option set in the DNS Query	ECS option set in the DNS Response	Logged Details
Both query logging and extended logging enabled	Yes	Yes	ECS option is logged with the string “ECS/R/” and the Scope Prefix-Length is set to the calculated value.
Both query logging and extended logging enabled	Yes	No	ECS option is logged with the string “ECS/Q” and the Scope Prefix-Length is set to zero.

Scenario	ECS option set in the DNS Query	ECS option set in the DNS Response	Logged Details
Query logging is enabled, but extended logging is not enabled	Yes	Yes	ECS option is logged with the string “ECS/Q/” and the Scope Prefix-Length is set to zero.
Query logging & extended logging are not enabled	Yes	Yes	ECS option is not logged.
Query logging is enabled, but extended logging is not enabled	Yes	No	ECS option is logged with the string “ECS/Q/” and the Scope Prefix-Length is set to zero.
Query logging is not enabled, but extended logging is enabled	Yes	Yes	ECS option is logged with the string “ECS/R/” and the Scope Prefix-Length is set to the calculated value.
Query logging is not enabled, but extended logging is enabled	Yes	No	ECS option is not logged.

Understand the record logging format

Following is an example of the record logging format in a Syslog message:

```
1 <domainname>/<record type>/ <record ttl> / <resource record data>#<
  resource record data>#.....##
```

Where:

Record Type	Sample Format	Resource Record Data / Format
Address (A) record	A/5/1.1.1.1#1.1.1.2#1.1.1.3##	IPv4 address
AAAA record	AAAA/5/1::1#1::2#1::3##	IPv6 address

Record Type	Sample Format	Resource Record Data / Format
SOA record	SOA/3600/ns1.dnslogging.test./root.dnslogging.test.10.10.10.3600/3/3600/5##	Origin logging test.10.10.10.3600 other details. Resource record format is: #####
NS record	NS/5/ns1.dnslogging.test	Host name of the nameserver.
MX record	#MX/5/10/host1.dnslogging.test.#1/#host1.dnslogging.test##	exchange server host name
CNAME record logging	CNAME/5/host1.dnslogging.test.##	Canonical name
SRV record	SRV/5/1/2/3/host1.dnslogging.test#4/5/6/host2.dnslogging.test.##	
TXT record	TXT/5/dns+logging##	Data comprises all the texts.
NAPTR record	NAPTR/5/10/11////dnslogging#20/21/22/23/24/25/26/27/28/29/30/31/32/33/34/35/36/37/38/39/40/41/42/43/44/45/46/47/48/49/50/51/52/53/54/55/56/57/58/59/60/61/62/63/64/65/66/67/68/69/70/71/72/73/74/75/76/77/78/79/80/81/82/83/84/85/86/87/88/89/90/91/92/93/94/95/96/97/98/99/100/101/102/103/104/105/106/107/108/109/110/111/112/113/114/115/116/117/118/119/120/121/122/123/124/125/126/127/128/129/130/131/132/133/134/135/136/137/138/139/140/141/142/143/144/145/146/147/148/149/150/151/152/153/154/155/156/157/158/159/160/161/162/163/164/165/166/167/168/169/170/171/172/173/174/175/176/177/178/179/180/181/182/183/184/185/186/187/188/189/190/191/192/193/194/195/196/197/198/199/200/201/202/203/204/205/206/207/208/209/210/211/212/213/214/215/216/217/218/219/220/221/222/223/224/225/226/227/228/229/230/231/232/233/234/235/236/237/238/239/240/241/242/243/244/245/246/247/248/249/250/251/252/253/254/255/256/257/258/259/260/261/262/263/264/265/266/267/268/269/270/271/272/273/274/275/276/277/278/279/280/281/282/283/284/285/286/287/288/289/290/291/292/293/294/295/296/297/298/299/300/301/302/303/304/305/306/307/308/309/310/311/312/313/314/315/316/317/318/319/320/321/322/323/324/325/326/327/328/329/330/331/332/333/334/335/336/337/338/339/340/341/342/343/344/345/346/347/348/349/350/351/352/353/354/355/356/357/358/359/360/361/362/363/364/365/366/367/368/369/370/371/372/373/374/375/376/377/378/379/380/381/382/383/384/385/386/387/388/389/390/391/392/393/394/395/396/397/398/399/400/401/402/403/404/405/406/407/408/409/410/411/412/413/414/415/416/417/418/419/420/421/422/423/424/425/426/427/428/429/430/431/432/433/434/435/436/437/438/439/440/441/442/443/444/445/446/447/448/449/450/451/452/453/454/455/456/457/458/459/460/461/462/463/464/465/466/467/468/469/470/471/472/473/474/475/476/477/478/479/480/481/482/483/484/485/486/487/488/489/490/491/492/493/494/495/496/497/498/499/500/501/502/503/504/505/506/507/508/509/510/511/512/513/514/515/516/517/518/519/520/521/522/523/524/525/526/527/528/529/530/531/532/533/534/535/536/537/538/539/540/541/542/543/544/545/546/547/548/549/550/551/552/553/554/555/556/557/558/559/560/561/562/563/564/565/566/567/568/569/570/571/572/573/574/575/576/577/578/579/580/581/582/583/584/585/586/587/588/589/590/591/592/593/594/595/596/597/598/599/600/601/602/603/604/605/606/607/608/609/610/611/612/613/614/615/616/617/618/619/620/621/622/623/624/625/626/627/628/629/630/631/632/633/634/635/636/637/638/639/640/641/642/643/644/645/646/647/648/649/650/651/652/653/654/655/656/657/658/659/660/661/662/663/664/665/666/667/668/669/670/671/672/673/674/675/676/677/678/679/680/681/682/683/684/685/686/687/688/689/690/691/692/693/694/695/696/697/698/699/700/701/702/703/704/705/706/707/708/709/710/711/712/713/714/715/716/717/718/719/720/721/722/723/724/725/726/727/728/729/730/731/732/733/734/735/736/737/738/739/740/741/742/743/744/745/746/747/748/749/750/751/752/753/754/755/756/757/758/759/760/761/762/763/764/765/766/767/768/769/770/771/772/773/774/775/776/777/778/779/780/781/782/783/784/785/786/787/788/789/790/791/792/793/794/795/796/797/798/799/800/801/802/803/804/805/806/807/808/809/810/811/812/813/814/815/816/817/818/819/820/821/822/823/824/825/826/827/828/829/830/831/832/833/834/835/836/837/838/839/840/841/842/843/844/845/846/847/848/849/850/851/852/853/854/855/856/857/858/859/860/861/862/863/864/865/866/867/868/869/870/871/872/873/874/875/876/877/878/879/880/881/882/883/884/885/886/887/888/889/890/891/892/893/894/895/896/897/898/899/900/901/902/903/904/905/906/907/908/909/910/911/912/913/914/915/916/917/918/919/920/921/922/923/924/925/926/927/928/929/930/931/932/933/934/935/936/937/938/939/940/941/942/943/944/945/946/947/948/949/950/951/952/953/954/955/956/957/958/959/960/961/962/963/964/965/966/967/968/969/970/971/972/973/974/975/976/977/978/979/980/981/982/983/984/985/986/987/988/989/990/991/992/993/994/995/996/997/998/999/1000/1001/1002/1003/1004/1005/1006/1007/1008/1009/1010/1011/1012/1013/1014/1015/1016/1017/1018/1019/1020/1021/1022/1023/1024/1025/1026/1027/1028/1029/1030/1031/1032/1033/1034/1035/1036/1037/1038/1039/1040/1041/1042/1043/1044/1045/1046/1047/1048/1049/1050/1051/1052/1053/1054/1055/1056/1057/1058/1059/1060/1061/1062/1063/1064/1065/1066/1067/1068/1069/1070/1071/1072/1073/1074/1075/1076/1077/1078/1079/1080/1081/1082/1083/1084/1085/1086/1087/1088/1089/1090/1091/1092/1093/1094/1095/1096/1097/1098/1099/1100/1101/1102/1103/1104/1105/1106/1107/1108/1109/1110/1111/1112/1113/1114/1115/1116/1117/1118/1119/1120/1121/1122/1123/1124/1125/1126/1127/1128/1129/1130/1131/1132/1133/1134/1135/1136/1137/1138/1139/1140/1141/1142/1143/1144/1145/1146/1147/1148/1149/1150/1151/1152/1153/1154/1155/1156/1157/1158/1159/1160/1161/1162/1163/1164/1165/1166/1167/1168/1169/1170/1171/1172/1173/1174/1175/1176/1177/1178/1179/1180/1181/1182/1183/1184/1185/1186/1187/1188/1189/1190/1191/1192/1193/1194/1195/1196/1197/1198/1199/1200/1201/1202/1203/1204/1205/1206/1207/1208/1209/1210/1211/1212/1213/1214/1215/1216/1217/1218/1219/1220/1221/1222/1223/1224/1225/1226/1227/1228/1229/1230/1231/1232/1233/1234/1235/1236/1237/1238/1239/1240/1241/1242/1243/1244/1245/1246/1247/1248/1249/1250/1251/1252/1253/1254/1255/1256/1257/1258/1259/1260/1261/1262/1263/1264/1265/1266/1267/1268/1269/1270/1271/1272/1273/1274/1275/1276/1277/1278/1279/1280/1281/1282/1283/1284/1285/1286/1287/1288/1289/1290/1291/1292/1293/1294/1295/1296/1297/1298/1299/1300/1301/1302/1303/1304/1305/1306/1307/1308/1309/1310/1311/1312/1313/1314/1315/1316/1317/1318/1319/1320/1321/1322/1323/1324/1325/1326/1327/1328/1329/1330/1331/1332/1333/1334/1335/1336/1337/1338/1339/1340/1341/1342/1343/1344/1345/1346/1347/1348/1349/1350/1351/1352/1353/1354/1355/1356/1357/1358/1359/1360/1361/1362/1363/1364/1365/1366/1367/1368/1369/1370/1371/1372/1373/1374/1375/1376/1377/1378/1379/1380/1381/1382/1383/1384/1385/1386/1387/1388/1389/1390/1391/1392/1393/1394/1395/1396/1397/1398/1399/1400/1401/1402/1403/1404/1405/1406/1407/1408/1409/1410/1411/1412/1413/1414/1415/1416/1417/1418/1419/1420/1421/1422/1423/1424/1425/1426/1427/1428/1429/1430/1431/1432/1433/1434/1435/1436/1437/1438/1439/1440/1441/1442/1443/1444/1445/1446/1447/1448/1449/1450/1451/1452/1453/1454/1455/1456/1457/1458/1459/1460/1461/1462/1463/1464/1465/1466/1467/1468/1469/1470/1471/1472/1473/1474/1475/1476/1477/1478/1479/1480/1481/1482/1483/1484/1485/1486/1487/1488/1489/1490/1491/1492/1493/1494/1495/1496/1497/1498/1499/1500/1501/1502/1503/1504/1505/1506/1507/1508/1509/1510/1511/1512/1513/1514/1515/1516/1517/1518/1519/1520/1521/1522/1523/1524/1525/1526/1527/1528/1529/1530/1531/1532/1533/1534/1535/1536/1537/1538/1539/1540/1541/1542/1543/1544/1545/1546/1547/1548/1549/1550/1551/1552/1553/1554/1555/1556/1557/1558/1559/1560/1561/1562/1563/1564/1565/1566/1567/1568/1569/1570/1571/1572/1573/1574/1575/1576/1577/1578/1579/1580/1581/1582/1583/1584/1585/1586/1587/1588/1589/1590/1591/1592/1593/1594/1595/1596/1597/1598/1599/1600/1601/1602/1603/1604/1605/1606/1607/1608/1609/1610/1611/1612/1613/1614/1615/1616/1617/1618/1619/1620/1621/1622/1623/1624/1625/1626/1627/1628/1629/1630/1631/1632/1633/1634/1635/1636/1637/1638/1639/1640/1641/1642/1643/1644/1645/1646/1647/1648/1649/1650/1651/1652/1653/1654/1655/1656/1657/1658/1659/1660/1661/1662/1663/1664/1665/1666/1667/1668/1669/1670/1671/1672/1673/1674/1675/1676/1677/1678/1679/1680/1681/1682/1683/1684/1685/1686/1687/1688/1689/1690/1691/1692/1693/1694/1695/1696/1697/1698/1699/1700/1701/1702/1703/1704/1705/1706/1707/1708/1709/1710/1711/1712/1713/1714/1715/1716/1717/1718/1719/1720/1721/1722/1723/1724/1725/1726/1727/1728/1729/1730/1731/1732/1733/1734/1735/1736/1737/1738/1739/1740/1741/1742/1743/1744/1745/1746/1747/1748/1749/1750/1751/1752/1753/1754/1755/1756/1757/1758/1759/1760/1761/1762/1763/1764/1765/1766/1767/1768/1769/1770/1771/1772/1773/1774/1775/1776/1777/1778/1779/1780/1781/1782/1783/1784/1785/1786/1787/1788/1789/1790/1791/1792/1793/1794/1795/1796/1797/1798/1799/1800/1801/1802/1803/1804/1805/1806/1807/1808/1809/1810/1811/1812/1813/1814/1815/1816/1817/1818/1819/1820/1821/1822/1823/1824/1825/1826/1827/1828/1829/1830/1831/1832/1833/1834/1835/1836/1837/1838/1839/1840/1841/1842/1843/1844/1845/1846/1847/1848/1849/1850/1851/1852/1853/1854/1855/1856/1857/1858/1859/1860/1861/1862/1863/1864/1865/1866/1867/1868/1869/1870/1871/1872/1873/1874/1875/1876/1877/1878/1879/1880/1881/1882/1883/1884/1885/1886/1887/1888/1889/1890/1891/1892/1893/1894/1895/1896/1897/1898/1899/1900/1901/1902/1903/1904/1905/1906/1907/1908/1909/1910/1911/1912/1913/1914/1915/1916/1917/1918/1919/1920/1921/1922/1923/1924/1925/1926/1927/1928/1929/1930/1931/1932/1933/1934/1935/1936/1937/1938/1939/1940/1941/1942/1943/1944/1945/1946/1947/1948/1949/1950/1951/1952/1953/1954/1955/1956/1957/1958/1959/1960/1961/1962/1963/1964/1965/1966/1967/1968/1969/1970/1971/1972/1973/1974/1975/1976/1977/1978/1979/1980/1981/1982/1983/1984/1985/1986/1987/1988/1989/1990/1991/1992/1993/1994/1995/1996/1997/1998/1999/2000/2001/2002/2003/2004/2005/2006/2007/2008/2009/2010/2011/2012/2013/2014/2015/2016/2017/2018/2019/2020/2021/2022/2023/2024/2025/2026/2027/2028/2029/2030/2031/2032/2033/2034/2035/2036/2037/2038/2039/2040/2041/2042/2043/2044/2045/2046/2047/2048/2049/2050/2051/2052/2053/2054/2055/2056/2057/2058/2059/2060/2061/2062/2063/2064/2065/2066/2067/2068/2069/2070/2071/2072/2073/2074/2075/2076/2077/2078/2079/2080/2081/2082/2083/2084/2085/2086/2087/2088/2089/2090/2091/2092/2093/2094/2095/2096/2097/2098/2099/2100/2101/2102/2103/2104/2105/2106/2107/2108/2109/2110/2111/2112/2113/2114/2115/2116/2117/2118/2119/2120/2121/2122/2123/2124/2125/2126/2127/2128/2129/2130/2131/2132/2133/2134/2135/2136/2137/2138/2139/2140/2141/2142/2143/2144/2145/2146/2147/2148/2149/2150/2151/2152/2153/2154/2155/2156/2157/2158/2159/2160/2161/2162/2163/2164/2165/2166/2167/2168/2169/2170/2171/2172/2173/2174/2175/2176/2177/2178/2179/2180/2181/2182/2183/2184/2185/2186/2187/2188/2189/2190/2191/2192/2193/2194/2195/2196/2197/2198/2199/2200/2201/2202/2203/2204/2205/2206/2207/2208/2209/2210/2211/2212/2213/2214/2215/2216/2217/2218/2219/2220/2221/2222/2223/2224/2225/2226/2227/2228/2229/2230/2231/2232/2233/2234/2235/2236/2237/2238/2239/2240/2241/2242/2243/2244/2245/2246/2247/2248/2249/2250/2251/2252/2253/2254/2255/2256/2257/2258/2259/2260/2261/2262/2263/2264/2265/2266/2267/2268/2269/2270/2271/2272/2273/2274/2275/2276/2277/2278/2279/2280/2281/2282/2283/2284/2285/2286/2287/2288/2289/2290/2291/2292/2293/2294/2295/2296/2297/2298/2299/2300/2301/2302/2303/2304/2305/2306/2307/2308/2309/2310/2311/2312/2313/2314/2315/2316/2317/2318/2319/2320/2321/2322/2323/2324/2325/2326/2327/2328/2329/2330/2331/2332/2333/2334/2335/2336/2337/2338/2339/2340/2341/2342/2343/2344/2345/2346/2347/2348/2349/2350/2351/2352/2353/2354/2355/2356/2357/2358/2359/2360/2361/2362/2363/2364/2365/2366/2367/2368/2369/2370/2371/2372/2373/2374/2375/2376/2377/2378/2379/2380/2381/2382/2383/2384/2385/2386/2387/2388/2389/2390/2391/2392/2393/2394/2395/2396/2397/2398/2399/2400/2401/2402/2403/2404/2405/2406/2407/2408/2409/2410/2411/2412/2413/2414/2415/2416/2417/2418/2419/2420/2421/2422/2423/2424/2425/2426/2427/2428/2429/2430/2431/2432/2433/2434/2435/2436/2437/2438/2439/2440/2441/2442/2443/2444/2445/2446/2447/2448/2449/2450/2451/2452/2453/2454/2455/2456/2457/2458/2459/2460/2461/2462/2463/2464/2465/2466/2467/2468/2469/2470/2471/2472/2473/2474/2475/2476/2477/2478/2479/2480/2481/2482/2483/2484/2485/2486/2487/2488/2489/2490/2491/2492/2493/2494/2495/2496/2497/2498/2499/2500/2501/2502/2503/2504/2505/2506/2507/2508/2509/2510/2511/2512/2513/2514/2515/2516/2517/2518/2519/2520/2521/2522/2523/2524/2525/2526/2527/2528/2529/2530/2531/2532/2533/2534/2535/2536/2537/2538/2539/2540/2541/2542/2543/2544/2545/2546/2547/2548/2549/2550/2551/2552/2553/2554/2555/2556/2557/2558/2559/2560/2561/2562/2563/2564/2565/2566/2567/2568/2569/2570/2571/2572/2573/2574/2575/2576/2577/2578/2579/2580/2581/2582/2583/2584/2585/2586/2587/2588/2589/2590/2591/2592/2593/2594/2595/2596/2597/2598/2599/2600/2601/2602/2603/2604/2605/2606/2607/2608/2609/2610/2611/2	

- DNS proactive update requests or responses are logged according to the settings in the default profile.
- On the virtual server, if the sessionless option and response logging is enabled, L3/L4 parameters, DNS Header, and DNS Question section are logged instead of the response.
- The maximum size of the syslog message is 1024 bytes.
- If you have set a DNS profile for a DNS policy with action type Rewrite Response, the NetScaler appliance does not log the query or the manipulated responses. To log the required information you must use an audit message action in the DNS policy.
- DNS transactions that are due to DNS monitoring traffic are not logged.

Configuring DNS logging

Following is an overview of configuring DNS logging:

1. Create a Syslog action and enable DNS in the action.
2. Create a Syslog policy and specify the Syslog action in the policy.
3. Globally bind the Syslog policy to enable logging of all NetScaler system events. Or, bind the Syslog policy to a specific load balancing virtual server.
4. Create a DNS profile and define any of the following types of logging that you want to enable:
 - DNS Query Logging
 - DNS Answer Section Logging
 - DNS Extended Logging
 - DNS Error Logging
5. Configure any of the following, based on your requirement:
 - DNS service and virtual server for DNS
 - ADNS service
 - NetScaler as a forwarder
 - NetScaler as a resolver
6. Set the created DNS profile to one of the DNS entities.

Configure DNS logging for NetScaler configured as DNS Proxy by using the CLI

1. Add a syslog action and enable DNS in the action. At the command prompt, type:

```

1 add audit syslogAction <name> (<serverIP> | -lbVserverName <string
>) [-serverPort <port>] -logLevel <logLevel> ... [-dateFormat <
dateFormat>] [-logFacility <logFacility>] [-tcp ( NONE | ALL )]
[-acl ( ENABLED | DISABLED )] [-timeZone ( GMT_TIME |
LOCAL_TIME )] [-userDefinedAuditlog ( YES | NO )] [-
appflowExport ( ENABLED |DISABLED )] [-lsn ( ENABLED | DISABLED
)] [-alg ( ENABLED | DISABLED )] [-transport ( TCP | UDP )] [-
tcpProfileName <string>] [-maxLogDataSizeToHold <
positive_integer>] [-dns ( ENABLED | DISABLED)]

```

Example:

```

add audit syslogAction nssyslogact1 10.102.151.136 -logLevel
CRITICAL ERROR WARNING NOTICE INFORMATIONAL DEBUG -logFacility
LOCAL4 -timeZone LOCAL_TIME -dns ENABLED

```

2. Create a syslog policy and specify the created syslog action in the policy. At the command prompt, type:

```

add audit syslogPolicy <name> <rule> <action>

```

Example:

```

add audit syslogPolicy syslogpol1 true nssyslogact1

```

3. Bind the syslog policy globally. At the command prompt, type:

```

bind audit syslogGlobal -policyName <string> [-priority <positive_integer
>]

```

Example:

```

bind audit syslogGlobal syslogpol1

```

4. Create a DNS profile and enable any of the following type of logs that you want to configure:

- DNS Query Logging
- DNS Answer Section Logging
- DNS Extended Logging
- DNS Error Logging

At the command prompt, type:

```

add dns profile <dnsProfileName> [-dnsQueryLogging ( ENABLED |
DISABLED )] [-dnsAnswerSecLogging ( ENABLED | DISABLED )] [-
dnsExtendedLogging (ENABLED | DISABLED )] [-dnsErrorLogging (
ENABLED | DISABLED )] [-cacheRecords ( ENABLED | DISABLED )] [-
cacheNegativeResponses ( ENABLED | DISABLED )]

```

Example:

```

add dns profile dnsprofile1 -dnsQueryLogging ENABLED

```

5. Configure a service of type DNS. At the command prompt, type:

```
add service <name> <serverName> <serviceType> <port>
```

Example:

```
add service svc1 10.102.84.140 dns 53
```

6. Configure a load balancing virtual server of service type DNS.

```
add lb vserver <name> <serviceType> <ip> <port>
```

Example:

```
add lb vserver lb1 dns 100.100.100.10 53
```

7. Bind the service to the virtual server. At the command prompt, type:

```
bind lb vserver <name> <serviceName>
```

Example:

```
bind lb vserver lb1 svc1
```

8. Set the created DNS profile to the virtual server. At the command prompt, type:

```
set lb vserver <name> [ - dnsProfileName <string>]
```

Example:

```
set lb vserver lb1 -dnsProfileName dnsprofile1
```

Sample DNS logging configuration for NetScaler appliance configured as DNS proxy

```
1 > add audit syslogAction nssyslogact1 10.102.151.136 -logLevel
2 CRITICAL ERROR WARNING NOTICE INFORMATIONAL DEBUG -logFacility LOCAL4 -
  timeZone
3 LOCAL_TIME -dns ENABLED
4 Done
5 > add audit syslogPolicy syslogpol1 true nssyslogact1
6 Done
7 > bind audit syslogGlobal syslogpol1
8 Done
9 > add dns profile dnsprofile1 -dnsqueryLogging ENABLED
10 Done
11 > add lb vserver lb1 dns 100.100.100.10 53 -dnsProfileName dnsprofile1
12 Done
13 > add service svc1 10.102.84.140 dns 53
14 Done
15 > bind lb vserver lb1 svc1
16 Done
```

Sample DNS logging configuration for NetScaler appliance configured as ADNS

```
1 > add audit syslogAction nssyslogact1 10.102.151.136 -logLevel CRITICAL
2 ERROR WARNING NOTICE INFORMATIONAL DEBUG -logFacility LOCAL4 -timeZone
   LOCAL_TIME
3 -dns ENABLED
4 Done
5 > add audit syslogPolicy syslogpol1 true nssyslogact1
6 Done
7 > bind audit syslogGlobal syslogpol1
8 Done
9 > add dns profile dnsprofile1 -dnsqueryLogging ENABLED
10 Done
11 > add lb vserver lb1 dns 100.100.100.10 53 -dnsProfileName dnsprofile1
12 Done
13 > add service svc1 10.102.84.140 dns 53
14 Done
15 > bind lb vserver lb1 svc1
16 Done
```

Sample DNS logging configuration for NetScaler appliance configured as a forwarder

```
1 > add audit syslogAction nssyslogact1 10.102.151.136 -logLevel CRITICAL
2 ERROR WARNING NOTICE INFORMATIONAL DEBUG -logFacility LOCAL4 -timeZone
   LOCAL_TIME
3 -dns ENABLED
4 Done
5 > add audit syslogPolicy syslogpol1 true nssyslogact1
6 Done
7 > bind audit syslogGlobal syslogpol1
8 Done
9 > add dns profile dnsprofile1 -dnsqueryLogging ENABLED
10 Done
11 > add dns nameserver 8.8.8.8 -dnsProfileName dnsprofile1
12 Done
```

Sample DNS logging configuration for a NetScaler appliance configured as a resolver

```
1 > add audit syslogAction nssyslogact1 10.102.151.136
2 -logLevel CRITICAL ERROR WARNING NOTICE INFORMATIONAL DEBUG -
   logFacility LOCAL4
3 -timeZone LOCAL_TIME -dns ENABLED
4 Done
5 > add audit syslogPolicy syslogpol1 true nssyslogact1
6 Done
7 > bind audit syslogGlobal syslogpol1
8 Done
9 > add dns profile dnsprofile1 -dnsqueryLogging ENABLED
10 Done
```

```
11 > set dns parameter -recursion enABLED
12 Done
13 > add nameserver 1.1.1.100 -local dnsProfileName dnsprofile1
14 Done
```

Configure policy based logging for DNS

Policy based logging enables you to specify a format for log messages. The contents of a log message are defined by using an Advanced policy expression. When the message action specified in the policy is performed, the NetScaler appliance constructs the log message from the expression and writes the message to the log file. You can configure the appliance to log only when a particular DNS policy evaluates to True.

Note

If you have set a DNS policy with a DNS profile for the request side, the NetScaler appliance logs only the query.

To configure policy based logging for a DNS policy, you must first configure an audit message action. For more information about configuring an audit message action, see [Configure the NetScaler appliance for audit logging](#). After configuring the audit message action, specify the message action in a DNS policy.

Configure policy based logging for a DNS policy by using the CLI

At the command prompt, type the following commands to configure policy based logging for a DNS policy and verify the configuration:

```
1 - add dns action <actionName> <actionType> [-IPAddress <ip_addr|
    ipv6_addr> ... | -viewName <string> | -preferredLocList <string>
    ...] [-TTL <secs>] [-dnsProfileName <string>]
2 - set dns policy <name> [<rule>] [-actionName <string>] [-logAction <
    string>]
3 - show dns policy [<name>]
```

Example 1:

In a GSLB deployment, if you want to respond with different IP addresses to the client requests coming from a particular subnet, instead of responding with IP addresses used for general purposes (such as the IP addresses of internal users), you can configure a DNS policy with the action type as DNS view. In this case, you can configure DNS logging on the specified DNS action such that you can log the specific responses.

```
1 > add dns profile dns_prof1 -dnsqueryLogging enABLED -
    dnsanswerSecLogging enABLED
```

```

2 Done
3 > add dns view dns_view1
4 Done
5 > add dns action dns_act1 viewName -view dns_view1 -dnsprofilename
  dns_prof1
6 Done
7 > add dns policy dns_pol1 "CLIENT.IP.SRC.APPLY_MASK(255.255.255.0).EQ
  (100.100.100.0) "
8 dns_act1
9 Done
10 > bind dns global dns_pol1 100 -gotoPriorityExpression END -type
  REQ_DEFAULT
11 Done
12 > bind gslb service site_1_svc -viewName dns_view1 123.1.1.1
13 Done
14 > bind gslb service site_5_svc -view dns_view1 132.1.1.1
15 Done

```

Note:

In the preceding configuration, if you query for the domain configured on a GSLB virtual server, for example, *sampletest.com*, all the internal users of subnet 100.100.100.0/24 are served with the DNS view IP addresses, and the responses are logged. Client requests for other subnets are not logged.

Example 2:

If you want to log only the queries for the domain *example.com*, you can create a DNS profile with query logging enabled and set the DNS profile to a DNS action with the action type

NOOP, and then create a DNS policy and set the DNS action. For example:

```

1 >add dns profile query_logging -dnsqueryLogging ENABLED
2 Done
3 >add dns action dns_act1 NOOP -dnsprofileName query_logging
4 Done
5 >add dns policy dns_pol1 DNS.REQ.QUESTION.DOMAIN.EQ("example.com")
  dns_act1
6 Done

```

Configure log action for the DNS policy to log client IP address

Logging action can be used to log the source IPs for the DNS queries using the following expression and use it as part of the log action in the DNS policy.

```

1 > add audit messageaction log_act_custom INFORMATIONAL "\"ClientIP:\"
  CLIENT.IP.SRC\" ECS IP:\"+((DNS.REQ.OPT.ECS.IP).typecast_text_t ALT
  \\"NONE\\")"
2 Done

```


The earlier expression captures both the source IP as in the IP header and the ECS IP from the DNS ECS option, and either of it can be excluded as required.

Sample DNS logging configuration for a NetScaler appliance to log client IP address

If you want to sample the logging of the DNS queries, it can be done using the following expression. This logs one out of 10 queries.

```
1 > add audit messageaction log_action_srcip_1of10 INFORMATIONAL "\"
   OneOf10: Source IP : \"+client.ip.src"
2 Done
3 > add responder policy logsrcip_1of10 "sys.random.mul(10).lt(1)" NOOP -
   logAction log_action_srcip_1of10
4 Done
```

Configuring DNS suffixes

May 2, 2023

You can configure DNS suffixes that enable the NetScaler appliance to complete non-fully qualified domain names during name resolution. For example, while resolving a not fully qualified domain name `abc`, if a DNS suffix `example.com` is configured, the appliance appends the suffix to the domain name. Then it resolves the domain name. In this case, it would resolve `abc.example.com`. If DNS suffixes are not configured, the appliance appends a period to the non-fully qualified domain names and resolves the domain name.

Create DNS suffixes

DNS suffixes have significance and are valid only when the NetScaler is configured as an end resolver or forwarder. You can specify a suffix of up to 127 characters.

Notes:

- The order of DNS suffixes is important. The ADC appliance tries the configured suffixes in a serial order and stops when it gets a successful response for a suffix.
- At a time only one domain name is processed. All the available suffixes are appended with the domain name until a successful response is received.

For Example: If the domain name is `www` and the suffixes are `abc.com` and `abc`. The NetScaler appliance tries `www.abc.com` first and if that does not return a successful response, then the appliance tries `www.abc`. If `www.abc.com` returns a successful

- response, then the appliance will not try with the next suffix.
- The appliance uses all the suffixes in the order in which they are added until it receives a successful response.

Create DNS suffixes by using the CLI

At the command prompt, type the following commands to create a DNS suffix and verify the configuration:

```
1 - add dns suffix <dnsSuffix>
2 - show dns suffix <dnsSuffix>
```

Example:

```
1 > add dns suffix example.com
2 Done
3 > show dns suffix example.com
4 1)      Suffix: example.com
5 Done
```

To remove a DNS suffix by using the NetScaler command line, at the command prompt, type the `rm dns suffix` command and the name of the DNS suffix.

Create DNS suffixes by using the GUI

Navigate to **Traffic Management > DNS > DNS Suffix** and create DNS suffixes.

DNS ANY query

May 2, 2023

An ANY query is a type of DNS query that retrieves all records available for a domain name. The ANY query must be sent to a name server that is authoritative for a domain.

Behavior in ADNS mode

In the ADNS mode, the NetScaler appliance returns the records held in its local cache. If there are no records in the cache, the appliance returns the NXDOMAIN (negative) response.

If the NetScaler can match the domain delegation records, it returns the NS records. Otherwise, it returns the NS records of the root domain.

Behavior in DNS proxy mode

In proxy mode, the NetScaler appliance checks its local cache. If there are no records in the cache, the appliance passes the query to the server.

Behavior for Global Server Load Balancing (GSLB) domains

If a GSLB domain is configured on the ADC appliance and an ANY query is sent for the GSLB (site) domain, the appliance returns the IP address of the GSLB service. It selects this service through a load balancing decision. If the multiple IP response (MIR) option is enabled, the IP addresses of all GSLB services are sent.

For the NetScaler to return these records when it responds to the ANY query, all records corresponding to a GSLB domain must be configured on the NetScaler.

Note

If records for a domain are distributed between the NetScaler and a server, only records configured on the NetScaler are returned.

The NetScaler provides the option to configure DNS views and DNS policies. These views and policies are used for performing global server load balancing. For more information, see [Global Server Load Balancing](#).

Configure negative caching of DNS records

May 2, 2023

The NetScaler appliance supports caching of negative responses for a domain. A negative response indicates that information about a requested domain does not exist, or that the server cannot provide an answer for the query. The storage of this information is called negative caching. Negative caching helps speed up responses to queries about a domain.

Note:

Negative caching is supported only when the back-end server is configured as an authoritative DNS (ADNS) server for the queried domain.

A negative response can be one of the following:

- NXDOMAIN error message —The authoritative DNS servers respond with the NXDOMAIN error message when the queried domain name does not have any records configured on the server. This message implies that the queried domain is an invalid or a non-existent domain name.

- NODATA error message —If the domain name in the query is valid but records of the given type are not available, the appliance sends a NODATA error message.

When negative caching is enabled, the appliance caches the negative response from the DNS server and serves the future requests from the cache only. This action helps speed up responses to queries and also to reduce the back-end DNS traffic. Negative caching can be used in all deployments, that is, when a NetScaler appliance is serving as a proxy, as an end resolver, or as a forwarder.

You can enable or disable negative caching using a DNS profile, for more information see, [DNS profiles](#). By default, negative caching is enabled in the default DNS profile (**default-dns-profile**) that are bound by default to a DNS virtual server or in the newly created DNS profile.

Enable or disable negative caching by using the CLI

At the command prompt, type the following commands to enable or disable negative caching and verify the configuration:

```
1 - add dns profile <dnsProfileName> [-cacheRecords ( ENABLED | DISABLED
    )] [-cacheNegativeResponses (ENABLED | DISABLED )]
2 - show dns profile [<dnsProfileName>]
```

Example of a default DNS profile:

```
1 > sh dns profile default-dns-profile
2 1) default-dns-profile
3 Query logging : DISABLED Answer section logging :
  DISABLED
4 Extended logging : DISABLED Error logging : DISABLED
5 Cache Records : ENABLED Cache Negative Responses: ENABLED
6 Done
```

Example of a newly created DNS profile:

```
1 > add dnsprofile dns_profile1 -cacheRecords ENABLED -
  cacheNegativeResponses ENABLED
2 Done
3 > show dns profile dns_profile1
4 1) dns_profile1
5 Query logging : DISABLED Answer section logging :
  DISABLED
6 Extended logging : DISABLED Error logging : DISABLED
7 Cache Records : ENABLED Cache Negative Responses: ENABLED
8 Done
```

Specify service or virtual server level DNS parameters by using the CLI

At the command prompt, perform the following:

1. Configure the DNS profile.

```
add dns profile <dnsProfileName> [-cacheRecords ( ENABLED |  
DISABLED )] [-cacheNegativeResponses (ENABLED | DISABLED )]
```

2. Bind the DNS profile to the service or virtual server.

To bind the DNS profile to the service:

```
set service <name> [-dnsProfileName <string>]
```

Example:

```
1 >set service service1 -dnsProfileName dns_profile1  
2 Done
```

To bind the DNS profile to the virtual server:

```
set lb vserver <name> [-dnsProfileName <string>]
```

Example:

```
1 >set lb vserver lbvserver1 -dnsProfileName dns_profile1  
2 Done
```

Specify service or virtual server level DNS parameters by using the GUI

1. Configure the HTTP profile.

Navigate to **System > Profiles > DNS Profile**, and create the DNS profile.

2. Bind the HTTP profile to the service or virtual server.

Navigate to **Traffic Management > Load Balancing > Services/Virtual Servers**, and create the DNS profile, that must be bound to the service or the virtual server.

Rate limiting negative response served by the appliance

You can set a threshold for negative responses being served by the NetScaler appliance from the cache. When the threshold is set, the appliance serves the response from the cache until the threshold is reached. Once the threshold is reached, the appliance drops the requests instead of responding with an NXDOMAIN response.

Setting a rate limit for negative responses has the following advantages.

- Save the resources on the NetScaler appliance.
- Prevent any malicious queries for non-existent domain names.

Note: You can set a threshold for negative responses only for the domains for which the ADC appliance is configured as an authoritative domain name server. You cannot set a threshold for cached records received from the authoritative back-end name servers.

Rate limiting negative response served by the cache by using the CLI

At the command prompt, type

```
1 set dns parameter -NXDOMainRateLimitThreshold <positive-integer>
```

Example:

```
1 set dns parameter -NXDOMainRateLimitThreshold 1000
```

NXDOMainRateLimitThreshold: When this parameter is set to a positive integer value, responses are served from the cache until this threshold (in seconds) is reached. Once the threshold exceeds, the requests are dropped. The threshold configured is per packet engine.

Rate limiting negative response served by the cache by using the GUI

1. Navigate to **Traffic Management > DNS** and click **Change DNS Settings**.
2. In the **Configure DNS parameters** page, in the **NXDOMAIN Rate Limit Threshold** field, enter the threshold value until which the responses must be served from the cache.

Note: The value in the **NXDOMAIN Threshold Crossed** displays the number of times the requests are dropped after the threshold is reached.

Cache EDNS0 client subnet data when the NetScaler appliance is in proxy mode

December 4, 2023

In NetScaler Proxy mode, if a back-end server that supports an EDNS0 Client Subnet (ECS) sends a response containing the ECS option, the NetScaler appliance does the following:

- It forwards the response as-is to the client and
- Stores the response in the cache, along with the client subnet information.

DNS requests that are from the same subnet of the same domain, and for which the server would send the same response, are then served from the cache.

Note:

- ECS caching is disabled by default. Enable caching of EDNS0 client-subnet data in the associated DNS profile.
- The number of subnets that you can cache for a domain is limited to the available subnet IDs, that is, 1270 in the NetScaler appliance. Optionally, you can set the limit to a lower number (minimum value: 1 ipv4/ipv6).

Enable caching of ECS responses by using the CLI

At the command prompt, type:


```
set dns profile <dnsProfileName> -cacheECSResponses ( ENABLED |  
DISABLED )
```

Limit the number of subnets that can be cached per domain by using the CLI

At the command prompt, type:

```
set dns profile <dnsProfileName> -maxSubnetsPerDomain <positive_integer  
>
```

Example:

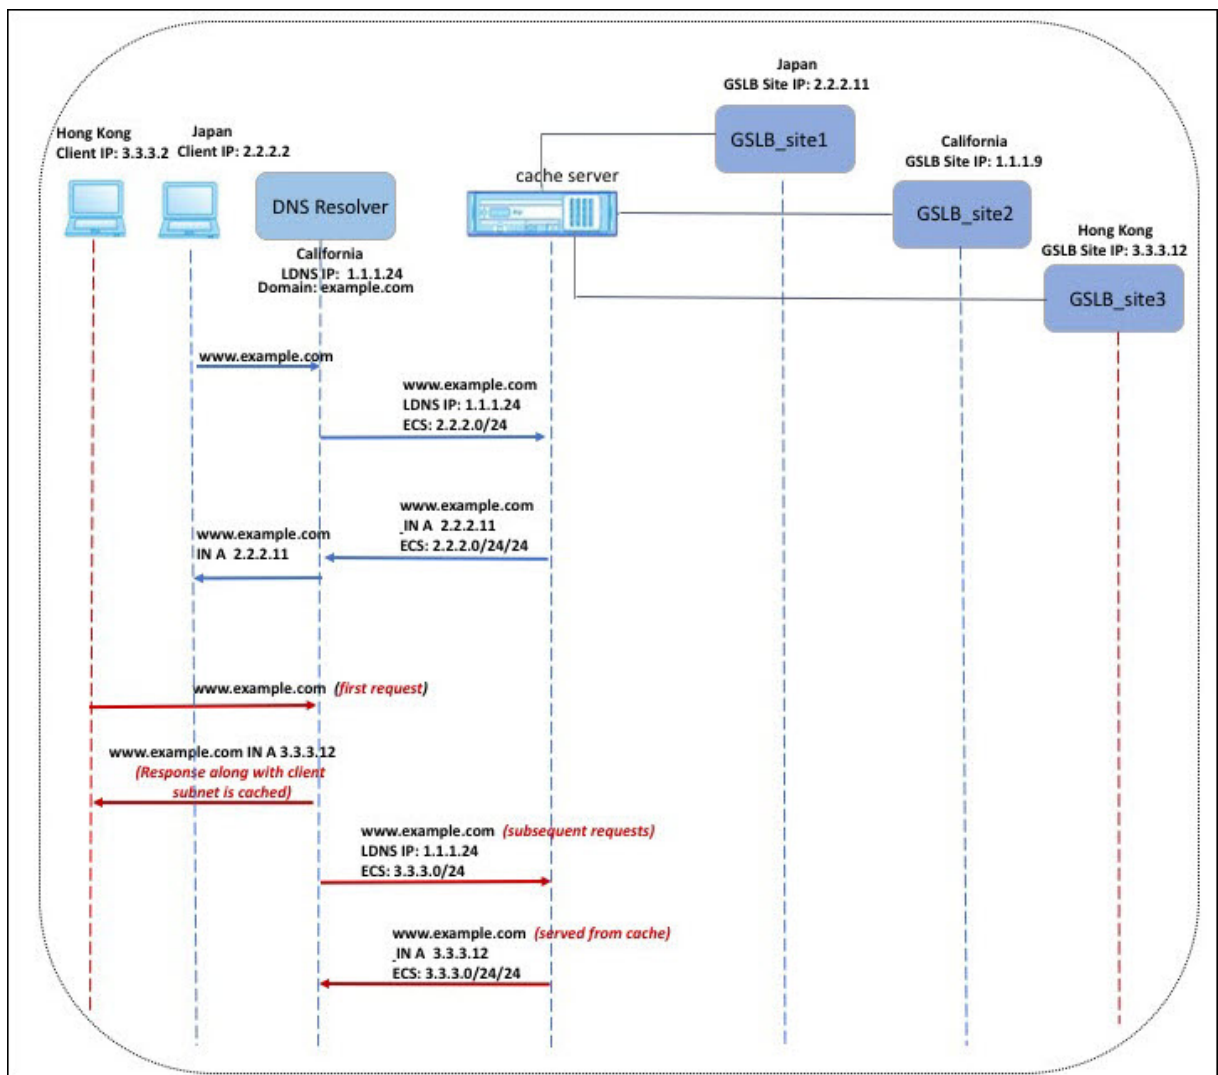

In the example shown in the preceding figure, the client at IP address 2.2.2.2 sends a query for www.example.com to the DNS resolver. The DNS resolver sends the following response:

www.example.com IN A, IP is 2.2.2.11, and ECS 2.2.2.0/24/24

At this point, the response and the client-subnet identifier (2.2.2.0/24) are cached. Further requests from the same subnet and domain are served from the cache.

For example, if the client’s IP address is 2.2.2.100 and the query is for www.example.com, the query is served from the cache instead of being sent to the back-end server.

Domain name system security extensions

May 2, 2023

DNS Security Extensions (DNSSEC) is an Internet Engineering Task Force (IETF) standard. It aims to provide data integrity and data origin authentication in communications between name servers and clients while still transmitting UDP responses in clear text. DNSSEC specifies a mechanism that uses asymmetric key cryptography and a set of new resource records that are specific to its implementation.

The DNSSEC specification is described in:

- RFC 4033, “DNS Security Introduction and Requirements”
- RFC 4034, “Resource Records for the DNS Security Extensions”
- RFC 4035, “Protocol Modifications for the DNS Security Extensions”

The operational aspects of implementing DNSSEC within DNS are discussed in RFC 4641, “DNSSEC Operational Practices.”

You can configure DNSSEC on the NetScaler. You can generate and import keys for signing DNS zones. You can configure DNSSEC for zones for which the NetScaler is authoritative. You can configure the ADC as a DNS proxy server for signed zones hosted on a farm of back-end name servers. If the ADC is authoritative for a subset of the records belonging to a zone for which the ADC is configured as a DNS proxy server, you can include the subset of records in the DNSSEC implementation.

Configure DNSSEC

November 28, 2023

Perform the following steps to configure DNSSEC:

1. Enable DNSSEC on the NetScaler appliance.
2. Create a zone signing key and a key signing key for the zone.
3. Add the two keys to the zone.
4. Sign the zone with the keys.

The NetScaler appliance does not act as a DNSSEC resolver. DNSSEC on the ADC is supported only in the following deployment scenarios:

1. ADNS—NetScaler is the ADNS and generates the signatures itself.
2. Proxy—NetScaler acts as a DNSSEC proxy. It is assumed that the NetScaler is placed in front of the ADNS/LDNS servers in a trusted mode. The ADC acts only as a proxy caching entity and does not validate any signatures.

Enable and disable DNSSEC

Enable DNSSEC on the NetScaler for the ADC to respond to DNSSEC-aware clients. By default, DNSSEC is enabled.

You can disable the DNSSEC feature if you do not want the NetScaler to respond to clients with DNSSEC-specific information.

Enable or disable DNSSEC by using the CLI

At the command prompt, type the following commands to enable or disable DNSSEC and verify the configuration:

```
1 - set dns parameter -dnssec ( ENABLED | DISABLED )
2 - show dns parameter
```

Example:

```
1 > set dns parameter -dnssec ENABLED
2 Done
3 > show dns parameter
4     DNS parameters:
5     DNS retries: 5
6     .
7     .
8     .
9     DNSEC Extension: ENABLED
10    Max DNS Pipeline Requests: 255
11 Done
```

Enable or disable DNSSEC by using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, click Change DNS settings.
3. In the **Configure DNS Parameters** dialog box, select or clear the **Enable DNSSEC Extension** check box.

Create DNS keys for a zone

For each DNS zone that you want to sign, you must create two pairs of asymmetric keys. One pair, called the zone signing key (ZSK), is used to sign all the resource record sets in the zone. The second pair is called the key signing key (KSK) and is used to sign only the DNSKEY resource records in the zone.

When the ZSK and the KSK are created, the `suffix.key` is appended to the names of the public components of the keys. The `suffix.private` is appended to the names of their private components. The appending happens automatically.

The NetScaler also creates a Delegation Signer (DS) record and appends the suffix `.ds` to the name of the record. If the parent zone is a signed zone, you must publish the DS record in the parent zone to establish the chain of trust.

When you create a key, the key is stored in the `/nsconfig/dns/` directory, but it is not automatically published in the zone. After you create a key by using the `create dns key` command, you must explicitly publish the key in the zone by using the `add dns key` command. The process of generating a key is separate from the process of publishing the key in a zone to enable you to use alternative means to generate keys. For example, you can import keys generated by other key-generation programs (such as `bind-keygen`) by using the Secure FTP (SFTP) and then publish the keys in the zone. For more information about publishing a key in a zone, see [Publish a DNS key in a zone](#).

Perform the steps described in this topic to create a zone signing key and then repeat the steps to create a key signing key. The example that follows the command syntax first creates a zone signing key pair for the zone `example.com`. The example then uses the command to create a key signing key pair for the zone.

From release 13.0 build 61.x, the NetScaler appliance now supports stronger crypto algorithms, such as RSASHA256 and RSASHA512, to authenticate a DNS zone. Previously, only the RSASHA1 algorithm was supported.

Create a DNS key by using the CLI

At the command prompt, type:

```
create dns key -zoneName <string> -keyType <keyType> -algorithm <algorithm> -keySize <positive_integer> -fileNamePrefix <string>
```

Example:

```
1 > create dns key -zoneName example.com -keyType zsk -algorithm
   RSASHA256 -keySize 1024 -fileNamePrefix example.com.zsk.rsasha1.1024
2 File Name: /nsconfig/dns/example.com.zsk.rsasha1.1024.key (public); /
   nsconfig/dns/example.com.zsk.rsasha1.1024.private (private); /
   nsconfig/dns/example.com.zsk.rsasha1.1024.ds (ds)
3 This operation may take some time, Please wait...
4 Done
5 > create dns key -zoneName example.com -keyType ksk -algorithm
   RSASHA512 -keySize 4096 -fileNamePrefix example.com.ksk.rsasha1.4096
6 File Name: /nsconfig/dns/example.com.ksk.rsasha1.4096.key (public); /
   nsconfig/dns/example.com.ksk.rsasha1.4096.private (private); /
   nsconfig/dns/example.com.ksk.rsasha1.4096.ds (ds)
7 This operation may take some time, Please wait...
```

Create a DNS key by using the GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details area, click **Create DNS Key**.
3. Enter values for the different parameters and click **Create**.

← Create DNS Key

Zone Name*

Type*

Algorithm*

 ⓘ

Size*

File Name Prefix*

 ⓘ

Passphrase For Encrypted Keys

 ⓘ

Create

Note: To modify the file name prefix of an existing key:

- Click the arrow next to the **Browse** button.
- Click either **Local** or **Appliance** (depending on whether the existing key is stored on your local computer or in the `/nsconfig/dns/` directory on the appliance)
- Browse to the location of the key, and then double-click the key.
The **File Name Prefix** box is populated with only the prefix of the existing key. Modify the prefix accordingly.

Publish a DNS key in a zone

A key (zone signing key or key signing key) is published in a zone by adding the key to NetScaler. A key must be published in a zone before you sign the zone.

Before you publish a key in a zone, the key must be available in the `/nsconfig/dns/` directory. If you created the DNS key on another computer (for example, by using the `bind-keygen` program), ensure that the key is added to the `/nsconfig/dns/` directory. Then publish the key in the zone. Use the ADC GUI to add the key to the `/nsconfig/dns/` directory. Or, use some other program to import the key to the directory, such as the Secure FTP (SFTP).

Use the `add dns key` command for each public-private key pair that you want to publish in a given zone. If you created a ZSK pair and a KSK pair for a zone, use the `add dns key` command to first publish one of the key pairs in the zone. Repeat the command to publish the other key pair. For each key that you publish in a zone, a DNSKEY resource record is created in the zone.

The example that follows the command syntax first publishes the zone signing key pair (that was created for the `example.com` zone) in the zone. The example then uses the command to publish the key signing key pair in the zone.

Publish a key in a zone by using the CLI

At the command prompt, type the following command to publish a key in a zone and verify the configuration:

```
1 - add dns key <keyName> <publickey> <privatekey> [-expires <
    positive_integer> [<units>]] [-notificationPeriod <positive_integer>
    [<units>]] [-TTL <secs>]
2 - show dns zone [<zoneName> | -type <type>]
```

Example:

```
1 > add dns key example.com.zsk example.com.zsk.rsasha1.1024.key example.
    com.zsk.rsasha1.1024.private -expires 121 -TTL 5
2 Done
```

```

3 > add dns key example.com.ksk example.com.ksk.rsasha1.4096.key example.
   com.ksk.rsasha1.4096.private -expires 121 -TTL 5
4 Done
5 > show dns zone example.com
6     Zone Name : example.com
7     Proxy Mode : NO
8     Domain Name : example.com
9         Record Types : NS SOA DNSKEY
10    Domain Name : ns1.example.com
11        Record Types : A
12    Domain Name : ns2.example.com
13        Record Types : A
14 Done

```

Publish a key in a DNS zone by using the GUI

Navigate to **Traffic Management > DNS > Keys**.

Note: For Public Key and Private Key, to add a key that is stored on your local computer, click the arrow next to the **Browse** button, click **Local**, browse to the location of the key, and then double-click the key.

Configure a DNS key

You can configure the parameters of a key that has been published in a zone. You can modify the key's expiry time period, notification period, and time-to-live (TTL) parameters. If you change the expiry time period of a key, the appliance automatically re-signs all the resource records in the zone with the key. The re-signing happens if the zone is signed with the particular key.

Configure a key by using the CLI

At the command prompt, type the following command to configure a key and verify the configuration:

```

1 - set dns key <keyName> [-expires <positive_integer> [<units>]] [-
   notificationPeriod <positive_integer> [<units>]] [-TTL <secs>]
2 - show dns key [<keyName>]

```

Example:

```

1 > set dns key example.com.ksk -expires 30 DAYS -notificationPeriod 3
   DAYS -TTL 3600
2 Done
3 > show dns key example.com.ksk
4 1) Key Name: example.com.ksk
5 Expires: 30 DAYS Notification: 3 DAYS TTL: 3600

```

```

6      Public Key File: example.com.ksk.rsasha1.4096.key
7      Private Key File: example.com.ksk.rsasha1.4096.private
8      Done

```

Configure a key by using the GUI

1. Navigate to **Traffic Management > DNS > Keys**.
2. In the details pane, click the key that you want to configure, and then click Open.
3. In the Configure DNS Key dialog box, modify the values of the following parameters as shown:
 - Expires—expires
 - Notification Period—notificationPeriod
 - TTL—TTL
4. Click OK.

Sign and unsign a DNS zone

To secure a DNS zone, you must sign the zone with the keys that have been published in the zone. When you sign a zone, the NetScaler creates a Next Secure (NSEC) resource record for each owner name. Then, it uses the key signing key to sign the DNSKEY resource record set. Finally, it uses the ZSK to sign all the resource record sets in the zone, including the DNSKEY resource record sets and NSEC resource record sets. Each sign operation results in a signature for the resource record sets in the zone. The signature is captured in a new resource record called the RRSIG resource record.

After you sign a zone, save the configuration.

Sign a zone by using the CLI

At the command prompt, type the following command to sign a zone and verify the configuration:

```

1 - sign dns zone <zoneName> [-keyName <string> ...]
2 - show dns zone [<zoneName> | -type (ADNS | PROXY | ALL)]
3 - save config

```

Example:

```

1 > sign dns zone example.com -keyName example.com.zsk example.com.ksk
2 Done
3 > show dns zone example.com
4     Zone Name : example.com
5     Proxy Mode : NO
6     Domain Name : example.com
7     Record Types : NS SOA DNSKEY RRSIG NSEC

```

```
8      Domain Name : ns1.example.com
9          Record Types : A RRSIG NSEC
10     Domain Name : ns2.example.com
11          Record Types : A RRSIG
12     Domain Name : ns2.example.com
13          Record Types : RRSIG NSEC
14 Done
15 > save config
16 Done
```

Unsign a zone by using the CLI

At the command prompt, type the following command to unsign a zone and verify the configuration:

```
1 -  unsign dns zone <zoneName> [-keyName <string> ...]
2 -  show dns zone [<zoneName> | -type (ADNS | PROXY | ALL)]
```

Example:

```
1 > unsign dns zone example.com -keyName example.com.zsk example.com.ksk
2 Done
3 > show dns zone example.com
4     Zone Name : example.com
5     Proxy Mode : NO
6     Domain Name : example.com
7         Record Types : NS SOA DNSKEY
8     Domain Name : ns1.example.com
9         Record Types : A
10    Domain Name : ns2.example.com
11        Record Types : A
12 Done
```

Sign or unsign a zone by using the GUI

1. Navigate to **Traffic Management > DNS > Zones**.
2. In the details pane, click the zone that you want to sign, and then click Sign/Unsign.
3. In the Sign/Unsign DNS Zone dialog box, do one of the following:
 - To sign the zone, select the check boxes for the keys (zone signing key and key signing key) with which you want to sign the zone.
You can sign the zone with more than one zone signing key or key signing key pair.
 - To unsign the zone, clear the check boxes for the keys (zone signing key and key signing key) with which you want to unsign the zone.
You can unsign the zone with more than one zone signing key or key signing key pair.
4. Click OK.

View the NSEC records for a given record in a zone

You can view the NSEC records that the NetScaler automatically creates for each owner name in the zone.

View the NSEC record for a given record in a zone by using the CLI

At the command prompt, type the following command to view the NSEC record for a given record in a zone:

```
show dns nsecRec [<hostName> | -type (ADNS | PROXY | ALL)]
```

Example:

```
1 > show dns nsecRec example.com
2 1)      Domain Name : example.com
3         Next Nsec Name: ns1.example.com
4         Record Types : NS SOA DNSKEY RRSIG NSEC
5 Done
```

View the NSEC record for a given record in a zone by using the GUI

1. Navigate to **Traffic Management > DNS > Records > Next Secure Records**.
2. In the details pane, click the name of the record for which you want to view the NSEC record. The NSEC record for the record you select is displayed in the Details area.

Remove a DNS key

Remove a key from the zone in which it is published when the key has expired or if the key has been compromised. When you remove a key from the zone, the zone is automatically unsigned with the key. Removing the key with this command does not remove the key files present in the `/nsconfig/dns/` directory. If the key files are no longer needed, they have to be explicitly removed from the directory.

Remove a key from the NetScaler by using the CLI

At the command prompt, type the following command to remove a key and verify the configuration:

```
1 - rm dns key <keyName>
2 - show dns key <keyName>
```

Example:

```
1 > rm dns key example.com.zsk
2 Done
3 > show dns key example.com.zsk
4 ERROR: No such resource [keyName, example.com.zsk]
```

Remove a key from the NetScaler by using the GUI

1. Navigate to **Traffic Management > DNS > Keys**.
2. In the details pane, click the name of the key that you want to remove from the ADC, and then click Remove.

Revoke a DNS key

Although the key rollover is usually scheduled in advance, sometimes it becomes necessary to roll over the key immediately if the key is suspected to be compromised. In such cases, the compromised key must be phased out quickly before the new key can be activated. To ensure a smooth transition, it is recommended to keep a secondary key in a ready state, which can be activated immediately in case the key is compromised. By using the revoke key method, you can save time in activating the secondary key and removing the compromised key.

Note:

If you revoke the key it will remain in the system unless you explicitly delete it. Since the auto-rollover option is set, the system will auto-rollover the key after the configured expiration date if you do not delete it manually. During the auto-rollover process, a new key will be created for you to use based on your needs.

Enable revoke using CLI

At the command prompt type:

```
set dns key <keyName> [-revoke]
```

Example:

```
Set dns key secure.example.zsk -revoke
```

Enable revoke using GUI

1. Navigate to **Traffic Management > DNS > Keys**.
2. In the details pane, click the key that you want to configure, and then click **Open**.
3. In the **Configure DNS Key** page, select or clear **Revoke**.

4. Click **Ok**.

Automatic key rollover

In NetScaler, you can automate the key rollover process based on the configured frequency period. By automating the rollover process, you can rule out the chances of missing the rollover of keys. NetScaler takes care of creating keys, publishing, activating, signing, and un-signing the key, and removing the old key automatically if the automatic rollover option is enabled. Also, SNMP notification about the addition, activation, and removal of the old key is sent.

Note:

If the zone transfer parameter is enabled in GSLB sites, the rollover keys are transferred to all the GSLB sites.

If you are upgrading from a build that doesn't support the zone transfer to one that supports it, enable the rollover feature for an existing key. Before enabling the key rollover option, ensure that the key has not expired.

Configure automatic key rollover using CLI

At the command prompt, type:

```
1 set dns key <keyName> [-autoRollover (ENABLED | DISABLED)] [-RolloverMethod <PrePublication | DoubleSignature | DoubleRRset>]
```

Example:

```
Set dns key secure.example.zsk - autoRollover Enabled -RolloverMethod Prepublication
```

Configure automatic key rollover using GUI

1. Navigate to **Traffic Management > DNS > Keys**.
2. In the details pane, click the key that you want to configure, and then click Open.
3. In the **Configure DNS Key** page, update the following parameters:
 - Auto Rollover - Enable the option to automate the key rollover.
 - Rollover Method - Select a rollover method.
4. Click Ok.

SNMP Alarm

you can enable the SNMP alarm for the DNSSEC keys events when auto-rollover is enabled. When you enable an SNMP alarm, NetScaler generates a corresponding alarm (DNSSEC-KEY-AUTOMGMT-STATUS-SUCCESS or DNSSEC-KEY-AUTOMGMT-STATUS-FAILURE) based on whether the event is successful or a failure. For example, when you create a DNSSEC Key and the create event is successful, a DNSSEC-KEY-AUTOMGMT-STATUS-SUCCESS alarm is generated.

For more information on SNMP alarm, see [Configuring the NetScaler to generate SNMP traps] (/en-us/citrix-adc/current-release/system/snmp/generating-snmp-traps-on-citrix-adc.html)

DNS Zone Transfer

To synchronize the DNSSEC keys with other DNS servers, you must enable the Zone Transfer parameter. Synchronizing the keys from one DNS server to other DNS servers in the GSLB site is possible only if the AutomaticConfigSync option is enabled. For more information on real-time synchronization, see Real-time synchronization between sites participating in GSLB.

The DNS zone transfer is possible in Netscaler where GSLB is configured for each DNS server in a different location.

For more information on synchronization, see [Synchronize the configuration in a GSLB setup](#).

The DNS zone transfer is possible in NetScaler where GSLB is configured. Ensure you configure GSLB for each DNS server in a different location.

Enable or disable zone transfer using CLI

At the command prompt, type:

```
set dns parameter - ZoneTransfer (ENABLED | DISABLED)
```

Example:

```
1 set dns parameter - ZoneTransfer ENABLED
2
3 Done
```

Enable or disable zone transfer using GUI

1. Navigate to **Traffic Management > DNS**.
2. In the details pane, under **Settings**, click **Change DNS settings**.
3. In the **Configure DNS Parameters** page, select or clear **Zone Transfer**.

Configure DNSSEC when the NetScaler is authoritative for a zone

May 2, 2023

When the NetScaler is authoritative for a given zone, all the resource records in the zone are configured on the ADC. To sign the authoritative zone, you must create the zone signing and the key signing keys for the zone, add the keys to the ADC, and then sign the zone. For more information, see:

- [Create DNS keys for a zone](#)
- [Publish a DNS key in a zone](#)
- [Sign and unsign a DNS zone.](#)

If any GSLB domains configured on the ADC belong to the zone being signed, the GSLB domain names are signed along with the other records that belong to the zone.

After you sign a zone, responses to requests from DNSSEC-aware clients include the RRSIG resource records along with the requested resource records. DNSSEC must be enabled on the ADC. For more information about enabling DNSSEC, see [Enable and disable DNSSEC](#).

Finally, after you configure DNSSEC for the authoritative zone, you must save the NetScaler configuration.

Configure DNSSEC for a zone for which the NetScaler is a DNS proxy server

May 2, 2023

The procedure for signing a zone for which the NetScaler is configured as a DNS proxy server depends on whether the ADC owns a subset of the zone information owned by the back-end name servers. If it does, the configuration is considered a partial zone ownership configuration. If the ADC does not own a subset of the zone information, the NetScaler configuration for managing the back-end servers is considered a zone-less DNS proxy server configuration. The basic DNSSEC configuration tasks for both NetScaler configurations are the same. However, signing the partial zone on the NetScaler requires some additional configuration steps.

Note: The terms zone-less proxy server configuration and partial zone are used only in the context of the NetScaler appliance.

Important: When configured in proxy mode, the ADC does not perform signature verification on DNSSEC responses before updating the cache.

If you configure the ADC as a DNS proxy to load balance DNSSEC aware resolvers (servers), you must set the Recursion Available option while configuring the DNS virtual server. If a DNSSEC query arrives with Checking Disabled (CD) bit set, the query is passed on to the server with the CD bit retained. The response from the server is not cached.

Configure DNSSEC for a zone-less DNS proxy server configuration

For a zone-less DNS proxy server configuration, zone signing must be performed on the back-end name servers. On the NetScaler, you configure the ADC as a DNS proxy server for the zone. Create a load balancing virtual server of protocol type DNS. Configure services on the ADC to represent the name servers. Then bind the services to the load balancing virtual server. For more information about these configuration tasks, see [Configure the NetScaler as a DNS proxy server](#).

When a client sends the ADC a DNS request with the DNSSEC OK (DO) bit set, the ADC checks its cache for the requested information. If the resource records are not available in its cache, the ADC forwards the request to one of the DNS name servers. Then, it relays the response from the name server to the client. Also, the ADC caches the RRSIG resource records along with the response from the name server. Subsequent requests from DNSSEC-aware clients are served from the cache (including the RRSIG resource records), subject to the time-to-live (TTL) parameter. If a client sends a DNS request without setting the DO bit, the ADC responds with only the requested resource records. It does not include the RRSIG resource records that are specific to DNSSEC.

Configure DNSSEC for a partial zone ownership configuration

In some ADC configurations, even though the authority for a zone lies with the back-end name servers, a subset of the resource records belonging to the zone might be configured on the ADC. The ADC owns (or is authoritative for) only this subset of records. Such a subset of records can be considered to constitute a *partial zone* on the ADC. The ADC owns the partial zone. All other records are owned by the back-end name servers.

A typical partial zone configuration on the NetScaler is seen when:

- Global Server Load Balancing (GSLB) domains are configured on the ADC
- The GSLB domains are a part of a zone for which the back-end name servers are authoritative.

Signing a zone that includes only a partial zone on the ADC involves:

- Including the partial zone information in the back-end name server zone files
- Signing the zone on the back-end name servers
- Signing the partial zone on the ADC.

The same key set must be used to sign the zone on the name servers and the partial zone on the ADC.

Sign the zone on the back-end name servers

1. Include the resource records that are contained in the partial zone, in the zone files of the name servers.
2. Create keys and use the keys to sign the zone on the back-end name servers.

Sign the partial zone on the NetScaler

1. Create a zone with the name of the zone owned by the back-end name servers. When configuring the partial zone, set the proxyMode parameter to YES. This zone is the partial zone that contains the resource records owned by the ADC.

For example, if the name of the zone that is configured on the back-end name servers is example.com, you must create a zone named example.com on the ADC. Set the proxyMode parameter to YES. For more information about adding a zone, see [Configure a DNS zone](#).

Note

Do not add SOA and NS records for the zone. These records must exist on the ADC for a zone for which the ADC is authoritative.

2. Import the keys (from one of the back-end name servers) to the ADC and then add them to the /nsconfig/dns/ directory. For more information about how you can import a key and add it to the ADC, see [Publish a DNS key in a zone](#).
3. Sign the partial zone with the imported keys. When you sign the partial zone with the keys, the ADC generates RRSIG and NSEC records for the resource record sets and individual resource records in the partial zone, respectively. For more information about signing a zone, see [sign and unsign a DNS zone](#).

Configure DNSSEC for global server load balancing (GSLB) domain names

May 2, 2023

If GSLB is configured on the NetScaler and the ADC is authoritative for the zone to which the GSLB domain names belong, all GLSB domain names are signed when the zone is signed. For more information about signing a zone for which the ADC is authoritative, see [Configure DNSSEC when the NetScaler appliance is authoritative for a zone](#).

If the GSLB domains belong to a zone for which the back-end name servers are authoritative, you must:

- First sign the zone on the name servers.
- Then sign the partial zone on the ADC to complete the DNSSEC configuration for the zone.

For more information, see [Configure DNSSEC for a partial zone ownership configuration](#).

Zone maintenance

November 28, 2023

From a DNSSEC perspective, zone maintenance involves rolling over Zone Signing Keys and Key Signing Keys when key expiry is imminent. These zone maintenance tasks can be performed manually or you can automate the process by enabling the auto rollover feature. When automated, the zone is re-signed automatically. However, manual intervention is required to update the DS record in the parent zone.

Re-sign an updated zone

When a zone is updated (add a record or modify an existing record), the appliance automatically re-signs the new (or modified) record. If a zone contains multiple zone signing keys, the appliance re-signs the new (or modified) record with the key used to sign the zone.

Zone Transfer in GSLB

Updating a DNS key in all the GSLB sites can be a time-consuming process, and there is a possibility of missing an update in one or more GSLB sites. To prevent this occurrence, you can use the zone transfer option to synchronize the DNS keys in other GSLB sites after updating it in one DNS server. When the zone transfer is enabled, all the DNS configuration records related to all the zones are synced to other GSLB sites.

Note:

Zone or DNSSEC setting is optional for GSLB domains.

To configure the zone transfer, see [Configure DNSSEC](#).

Roll over DNSSEC keys

Note: Manually or automatically roll over the DNSSEC keys (KSK, ZSK) before they expire.

On the NetScaler, you can use the prepublish and double signature methods to perform a rollover of the Zone Signing Key and Key Signing Key. More information about these two rollover methods is available in RFC 4641, “DNSSEC Operational Practices.”

The following topics map commands on the ADC to the steps in the rollover procedures discussed in RFC 4641.

The key expiry notification is sent through an SNMP trap called `dnskeyExpiry`. Three MIB variables, `dnskeyName`, `dnskeyTimeToExpire`, and `dnskeyUnitsOfExpiry` are sent along with the `dnskeyExpiry` SNMP trap. For more information, see *NetScaler SNMP OID Reference* at [NetScaler 12.0 SNMP OID Reference](#). This SNMP alarm is sent only when automatic key rollover option is not enabled.

Automatic key rollover

Automating the key rollover eliminates the need to keep track of the key expiry date and the chances of missing the rollover of keys. When creating a new key, you can automate the key rollover process on a scheduled date.

To configure an automatic key rollover, see [Configure DNSSEC](#).

Prepublish key rollover

RFC 4641, “DNSSEC Operational Practices” defines four stages for the prepublish-key rollover method: initial, new DNSKEY, new RRSIGs, and DNSKEY removal. Each stage is associated with a set of tasks that you must perform on the ADC. Following are the descriptions of each stage and the tasks that you must perform. The rollover procedure described here can be used for both Key Signing Keys and Zone Signing Keys.

- **Stage 1: Initial.** The zone contains only those key sets with which the zone has currently been signed. The state of the zone in the initial stage is the state of the zone just before you begin the key rollover process.

Example:

Consider the key, `example.com.zsk1`, with which the zone `example.com` is signed. The zone contains only those RRSIGs generated by the `example.com.zsk1` key, which is due for expiry. The Key Signing Key is `example.com.ksk1`.

- **Stage 2: New DNSKEY.** A new key is created and published in the zone. That is, the key is added to the ADC, but the zone is not signed with the new key until the pre-roll phase is complete. In this stage, the zone contains the old key, the new key, and the RRSIGs generated by the old key. Publishing the new key for the complete duration of the pre-roll phase gives the DNSKEY resource record corresponding to the new key time to propagate to the secondary name servers.

Example:

A new key `example.com.zsk2` is added to the `example.com` zone. The zone is not signed with `example.com.zsk2` until the pre-roll phase is complete. The `example.com` zone contains DNSKEY resource records for both `example.com.zsk1` and `example.com.zsk2`.

NetScaler commands:

Perform the following tasks on NetScaler:

- Create a DNS key by using the `create dns key` command.
For more information about creating a DNS key, including an example, see [Create DNS keys for a zone](#).
- Publish the new DNS key in the zone by using the `add dns key` command.
For more information about publishing the key in the zone, including an example, see [Publish a DNS key in a zone](#).

- **Stage 3: New RRSIGs.** The zone is signed with the new DNS key and then unsigned with the old DNS key. The old DNS key is not removed from the zone and remains published until the RRSIGs generated by the old key expire.

Example:

The zone is signed with `example.com.zsk2` and then unsigned with `example.com.zsk1`. The zone continues to publish `example.com.zsk1` until the RRSIGs generated by `example.com.zsk1` expire.

NetScaler commands:

Perform the following tasks on NetScaler:

- Sign the zone with the new DNS key by using the `sign dns zone` command.
- Unsign the zone with the old DNS key by using the `unsign dns zone` command.

For more information about signing and unsigned a zone, including examples, see [Sign and unsign a DNS zone](#).

- **Stage 4: DNSKEY Removal.** When the RRSIGs generated by the old DNS key expire, the old DNS key is removed from the zone.

Example:

The old DNS key `example.com.zsk1` is removed from the `example.com` zone.

NetScaler commands

On the ADC, you remove the old DNS key by using the `rm dns key` command. For more information about removing a key from a zone, including an example, see [Remove a DNS key](#).

Double signature key rollover

RFC 4641, “DNSSEC Operational Practices” defines three stages for double signature key rollover: initial, new DNSKEY, and DNSKEY removal. Each stage is associated with a set of tasks that you must perform on the ADC. Following are the descriptions of each stage and the tasks that you must perform. The rollover procedure described here can be used for both Key Signing Keys and Zone Signing Keys.

- **Stage 1: Initial.** The zone contains only those key sets with which the zone has currently been signed. The state of the zone in the initial stage is the state of the zone just before you begin the key rollover process.

Example:

Consider the key, `example.com.zsk1`, with which the zone `example.com` is signed. The zone contains only those RRSIGs generated by the `example.com.zsk1` key, which is due for expiry. The Key Signing Key is `example.com.ksk1`.

- **Stage 2: New DNSKEY.** The new key is published in the zone and the zone is signed with the new key. The zone contains the RRSIGs that are generated by the old and the new keys. The minimum duration for which the zone must contain both sets of RRSIGs is the time required for all the RRSIGs to expire.

Example:

A new key `example.com.zsk2` is added to the `example.com` zone. The zone is signed with `example.com.zsk2`. The `example.com` zone now contains the RRSIGs generated from both keys.

NetScaler commands

Perform the following tasks on NetScaler:

- Create a DNS key by using the `create dns key` command.
For more information about creating a DNS key, including an example, see [Create DNS keys for a zone](#).
 - Publish the new key in the zone by using the `add dns key` command.
For more information about publishing the key in the zone, including an example, see [Publish a DNS key in a zone](#).
 - Sign the zone with the new key by using the `sign dns zone` command.
For more information about signing a zone, including examples, see [Sign and unsign a DNS zone](#).
- **Stage 3: DNSKEY Removal.** When the RRSIGs generated by the old DNS key expire, the old DNS key is removed from the zone.

Example:

The old DNS key `example.com.zsk1` is removed from the `example.com` zone.

NetScaler commands:

On NetScaler, you remove the old DNS key by using the `rm dns key` command.

For more information about removing a key from a zone, including an example, see [Remove a DNS key](#).

Double-RRset

RFC 7583, “DNSSEC Key Rollover Timing Considerations” defines three stages for double rreset rollover: initial, new DNSKEY, and DNSKEY removal. Each stage is associated with a set of tasks that you must perform on NetScaler. Following are the descriptions of each stage and the tasks that you must perform. The rollover procedure described here is used for Key Signing Keys.

- **Stage 1: Initial.** The zone contains only those key sets and records with which the zone has currently been signed. The state of the zone in the initial stage is the state of the zone just before you begin the key rollover process.

Example:

Consider the key, `example.com.zsk1`, and `key.example.com.ksk1`, with which the zone `example.com` and DNSSEC Key are signed respectively. The zone contains only those DNSKEY RRSIGs generated by the `example.com.ksk1` key, that are due for expiry.

- **Stage 2: New DNSKEY.** New DNSKEY. The new KSK key is created, and published in the zone. Two DNSSEC Keys and RRSig are available in the zone, one created by old key and one by new key. Update the new DS record in the parent zone. Now, the parent zone has two DS records one for the newly created key and one for the old key.

Note:

It might take some time for the DS record to become available in the parent zone.

The zone contains the RRSIGs that are generated by the old and the new keys. In order for the zone to contain both sets of RRSIGs, it is necessary to wait for the expiry of all RRSIGs, which is the TTL value for the DNSKEY record. Additionally, you must consider the propagation delay in the case of DNS hierarchy.

Example:

```
1 A new key example.com.ksk2 is added to the example.com zone. The zone
  is signed with example.com.ksk2. The example.com zone now contains
  the RRSIGs generated from both keys.
2
```

```
3  **NetScaler commands**
4
5  Perform the following tasks on NetScaler:
6
7  - Create a DNS key by using the `create dns key` command.
8
9      For more information about creating a DNS key, including an example
      , see [Create DNS keys for a zone](/en-us/citrix-adc/current-
      release/dns/dnssec/configure-dnssec.html).
10
11 - Publish the new key in the zone by using the `add dns key` command.
12
13     For more information about publishing the key in the zone,
     including an example, see [Publish a DNS key in a zone](/en-us/
     citrix-adc/current-release/dns/dnssec/configure-dnssec.html).
14
15 - Sign the zone with the new key by using the `sign dns zone` command.
16
17     For more information about signing a zone, including examples, see
     [Sign and unsign a DNS zone](/en-us/citrix-adc/current-release/
     dns/dnssec/configure-dnssec.html).
```

- **Stage 3: Unsign zone with old key.**

Once sufficient time has elapsed for the new DNSSEC key to be cached in resolvers, zone can be unsigned with old key.

Unsign the zone with the old key by using the `unsign dns zone` command.

For more information about unsigned a zone, including examples, see [Sign and unsign a DNS zone](#).

- **Stage 4: DNSKEY Removal.** When the RRSIGs generated by the old DNS key expire, the old DNS key is removed from the zone.

Note:

Ensure that you have unsigned the zone before deleting the key.

```
1  **Example:**
2
3  The old DNS key example.com.ksk1 is removed from the example.com zone.
4
5  **NetScaler commands:**
6
7  On the ADC, you remove the old DNS key by using the `rm dns key`
     command. For more information about removing a key from a zone,
     including an example, see [Remove a DNS key](/en-us/citrix-adc/
     current-release/dns/dnssec/configure-dnssec.html).
```

Offload DNSSEC operations to the NetScaler

May 2, 2023

For DNS zones for which your DNS servers are authoritative, DNSSEC operations can be offloaded to the ADC appliance. In a DNSSEC offloading deployment, a DNS server sends unsigned responses. The ADC signs the response dynamically before relaying it to the client. The ADC also caches the signed response. Apart from reducing the load on the DNS servers, offloading DNSSEC operations to the ADC gives you the following benefits:

- You can sign records that the DNS servers generate programmatically. Such records cannot be signed by routine zone signing operations performed on the DNS servers.
- You can serve signed responses to clients even if you have not implemented DNSSEC on your servers.

For setting up DNSSEC offloading, you must configure a DNS load balancing virtual server, configure services that represent the DNS servers, and then bind the services to the virtual server. For information about configuring a DNS load balancing virtual server, configuring services, and binding the services to the virtual server, see [Configure a DNS zone](#).

Create a zone entity on the ADC for each DNS zone whose DNSSEC operations you want to offload. For each DNS zone, you must enable the Proxy Mode and DNSSEC Offload parameters. You can optionally configure NSEC record generation for an offloaded zone. To create a DNS zone entity for DNSSEC offloading, follow the instructions in this topic.

To complete the configuration, you must generate DNS keys for the zone, add the keys to the zone, and then sign the zone with the keys. This process is the same as for normal DNSSEC. For information about creating keys, adding keys to a zone, and signing the zone, see [Domain name system security extensions](#).

After you configure DNS offloading, you must flush the DNS cache on the NetScaler. Flushing the DNS cache ensures that any unsigned records in the cache are removed and then replaced by signed records. For information about flushing the DNS cache, see [Flush DNS records](#).

Enable DNSSEC offloading for a zone by using the CLI

At the command line, type the following commands to enable DNSSEC offloading for a zone and verify the configuration:

```
1 - add dns zone <zoneName> -proxyMode YES -dnssecOffload ENABLED [-nsec
    ( ENABLED | DISABLED )
2 - show dns zone
```

Example:

```
1 > add dns zone example.com -proxyMode YES -dnssecOffload ENABLED nsec
  ENABLED
2 Done
3 > show dns zone example.com
4     Zone Name : example.com
5     Proxy Mode : YES
6     DNSSEC Offload: ENABLED      NSEC: ENABLED
7 Done
```

Enable DNSSEC offloading for a zone by using the GUI

1. Navigate to **Traffic Management > DNS > Zones**.
2. In the details pane, do one of the following:
 - To create a zone on the NetScaler, click Add.
 - To configure DNSSEC offloading for an existing zone, double-click the zone.
3. In the Create DNS Zone or Configure DNS Zone dialog box, select the Proxy Mode and DNSSEC Offload check boxes.
4. Optionally, if you want the NetScaler to generate NSEC records for the zone, select the NSEC check box.

Admin partition support for DNSSEC

May 2, 2023

In a partitioned NetScaler appliance, the DNS keys that are generated are stored in the following locations:

- Default partition: /nsconfig/dns/
- Non-default partition: /nsconfig/partitions/<partitionname>/dns/

You can now add a password to the DNS key. To add a password to the DNS key, you must first add the password in the `create dns key` command. Then provide the same password in the `add dns key` command when adding the DNS key to the ADC appliance. For example:

```
create dns key -zoneName com -keytype kSK -algorithm rsASHA1 -keysize
4096 - fileNamePrefix com.ksk.rsasha1.4096 -password 1jsfd3Wa
add dns key com.zsk.4096 /nsconfig/dns/com.zsk.rsasha1.4096.private -
password 1jsfd3Wa
```

Note:

- For a default partitioned environment, the keys are read from the default location/nsconfig/dns/. However, if the keys are stored in a different location, the path name has to be provided in the `add dns key -private` command. Example, `add dns key -private <path name>`.
- For a non-default partitioned environment, the keys are read from the default location /nsconfig/partitions/<partitionname>/dns/.

Supporting wildcard DNS domains

May 2, 2023

Wildcard DNS domains are used to handle requests for nonexistent domains and subdomains. In a zone, use wildcard domains to redirect queries for all nonexistent domains or subdomains to a particular server, instead of creating a separate Resource Record (RR) for each domain. The most common use of a wildcard DNS domain is to create a zone that can be used to forward mail from the internet to some other mail system.

In DNS resolution, wildcard RRs support the wildcard domain. The wildcard RRs are used to synthesize the responses to queries for a nonexistent domain name. For example, if you queried `http://image.example.com`, and the subdomain “image” did not exist, you might be redirected to `example.com`.

A wildcard record has an asterisk (*) character as the leftmost label of a domain name. For example, `*.example.com`. An asterisk at any other place in the domain name does signify a wildcard DNS record. For example, `new.*.example.com` is not a valid wildcard DNS record.

Note

- Wildcard domain is supported only when the NetScaler appliance is authoritative for the zone and is configured as an ADNS or a DNS proxy server.
- Wildcard domain is not supported for NS and SOA records.
- Wildcard domain cannot be applied when the query is in another zone.
- Wildcard domain cannot be applied when the QNAME or a name between the wildcard domain and the QNAME is known to exist.

Example configuration

```
1 add dns soaRec example.com -originServer n1.example.com -contact admin.  
  example.com  
2  
3 add dns nsRec example.com n1.example.com
```



```
4
5 add dns nsRec example.com n2.example.com
6
7 add dns zone example.com -proxyMode no
8
9 add dns addrec www.example.com 2.2.2.2
10
11 add dns addrec *.example.com 10.10.10.10
12
13 add dns addrec *.example.com 10.10.10.11
14
15 add dns aaaarec *.example.com 2001::1
```

In the example, a wildcard domain name is added for an A and AAAA record.

When a query is received for a domain name that exists in the zone, the NetScaler appliance responds with the corresponding response. For example, for `www.example.com`, the appliance responds with 2.2.2.2 in the example.

For a nonexistent domain name that matches with a wildcard type, a synthesized response is delivered.

In the example, the NetScaler appliance responds with 10.10.10.10 and 10.10.10.11 for a domain name `nonexist.example.com` or `xyz.example.com`.

Wildcard synthesis is not applicable for a domain name that exists in the zone.

For example, for the query `www.example.com` and type AAAA, the NetScaler appliance does not synthesize with wildcard, because `www.example.com` exists with type A. In the example, the NetScaler appliance responds with a NODATA response.

For a query say `abc.example.com` and type AAAA, the NetScaler appliance responds with a synthesized response. For example, for `www.example.com`, the appliance responds with 2001::1 in the example.

Mitigate DNS DDoS attacks

May 2, 2023

DNS servers are one of the most critical components of a network, and they must be defended against attacks. One of the most basic types of DNS attacks is the DDoS attack. Attacks of this type are on the rise and can be destructive. You can do the following to mitigate DDoS attacks:

- Flush negative records.
- Restrict the time to live (TTL) of negative records.
- Preserve NetScaler memory by limiting the memory consumed by the DNS cache.

- Retain DNS records in the cache.
- Enable DNS cache bypass.

Flush negative records

A DNS attack fills the cache with negative records (NXDOMAIN and NODATA). As a result, responses to legitimate requests are not cached, so new requests are sent to a back-end server for DNS resolution. Responses are therefore delayed.

You can now flush the negative DNS records from the NetScaler appliance's DNS cache.

Flush negative cache records by using the CLI

At the command prompt, type:

```
flush dns proxyrecords -type (dnsRecordType | negRecType)NXDOMAIN | NODATA
```

Example:

```
flush dns proxyrecords -negRecType NODATA
```

Flush of negative cache records by using the GUI

1. Navigate to **Configuration > Traffic Management > DNS > Records**.
2. In the details pane, click **Flush Proxy Records**.
3. In the **Flush Type** box, select **Negative Records**.
4. In the **Negative Records Type** box, select either **NXDOMAIN** or **NODATA**.

Protection against random subdomain and NXDOMAIN attacks

To prevent random subdomain and NXDOMAIN attacks, you can restrict the DNS cache memory, and you can adjust the TTL values for negative records.

To limit the amount of memory consumed by the DNS cache, specify the maximum cache size (in MB), and also the cache size (in MB) for storing negative responses. When either limit is reached, no more entries are added to the cache. Also, syslog messages are logged and, if you have configured SNMP traps, SNMP traps are generated. If these limits are not set, caching continues until the system memory is exhausted.

A higher TTL value for negative records can result in storing records that are not valuable for a long time. A lower TTL value results in sending more requests to the back-end server.

The TTL of the negative record is set to a value that can be the lesser of the TTL value or the "Expires" value of the SOA record.

Note:

- This limitation is added per packet engine. For example, if the maxCacheSize is set to 5 MB and the appliance has 3 packet engines, the total cache size is 15 MB.
- The cache size for the negative records must be less than or equal to the maximum cache size.
- If you reduce the DNS cache memory limit to a value lower than the amount of data already cached, the cache size remains above the limit until the data ages out. That is, exceeds its TTL0 or is flushed (`flush dns proxyrecords` command, or Flush Proxy Records in the NetScaler GUI).
- To configure SNMP traps, see [Configuring the NetScaler to Generate SNMP Traps](#).

Limit the memory consumed by the DNS Cache by using the CLI

At the command prompt, type:

```
set dns parameter -maxCacheSize <MBytes> -maxNegativeCacheSize <MBytes>
```

Example:

```
set dns parameter - maxCacheSize 100 -maxNegativeCacheSize 25
```

Limit the memory consumed by the DNS Cache by using the GUI

Navigate to **Configuration > Traffic Management > DNS**, click **Change DNS Settings**, and set the following parameters:

- Max Cache Size in MB
- Max Negative Cache Size in MB

Restrict the TTL of negative records by using the CLI

At the command prompt, type:

```
set dns parameter -maxnegcacheTTL <secs>
```

Example:

```
set dns parameter -maxnegcacheTTL 360
```

Restrict the TTL of negative records by using the GUI

1. Navigate to **Configuration > Traffic Management > DNS**.
2. Click **Change DNS Settings** and set the **Max Negative Cache TTL in sec** parameter.

Retain DNS records in the cache

An attack can flood the DNS cache with non-important entries but can cause flushing of the already cached legitimate records to make room for the new entries. To prevent attacks from filling the cache with invalid data, you can retain the legitimate records even after they exceed their TTL values.

If you enable the `cacheNoExpire` parameter, the records currently in the cache are retained until you disable the parameter.

Note:

- This option can be used only when the maximum cache size is specified (`maxCacheSize` parameter).
- If `maxnegcacheTTL` is configured and `cacheNoExpire` is enabled, `cacheNoExpire` takes priority.

Retain DNS records in the cache by using the CLI

At the command prompt, type:

```
set dns parameter -cacheNoExpire ( ENABLED | DISABLED)
```

Example:

```
set dns parameter -cacheNoExpire ENABLED
```

Retain DNS records in the cache by using the GUI

1. Navigate to **Configuration > Traffic Management > DNS** and click **Change DNS Settings**.
2. Select **Cache No Expire**.

Enable DNS cache bypass

For greater visibility and control of DNS requests, set the `cacheHitBypass` parameter to forward all requests to the back-end servers and allow the cache to be built but not used. After the cache is built, you can disable the parameter so that requests are served from the cache.

Enable DNS cache bypass by using the CLI

At the command prompt, type:

```
set dns parameter -cacheHitBypass ( ENABLED | DISABLED )
```

Example:

```
set dns parameter -cacheHitBypass ENABLED
```

Enable DNS cache bypass by using the GUI

1. Navigate to **Configuration > Traffic Management > DNS** and click **Change DNS Settings**.
2. Select **Cache Hit Bypass**.

Prevent the Slowloris attack

A DNS query spanning multiple packets, presents the potential threat of a [Slowloris](#) attack. The NetScaler appliance can silently drop DNS queries that are split into multiple packets.

You can set the `splitPktQueryProcessing` parameter to ALLOW or DROP a DNS query if the query is split into multiple packets.

Note: This setting is applicable only for DNS TCP.

Limit the DNS queries to a single packet by using the CLI

At the command prompt, type:

```
set dns parameter -splitPktQueryProcessing ( ALLOW | DROP )
```

Example:

```
set dns parameter -splitPktQueryProcessing DROP
```

Limit DNS queries to a single packet by using the GUI

1. Navigate to **Configuration > Traffic Management > DNS** and click **Change DNS Settings**.
2. In the **Split Packet Query Processing** box, choose **ALLOW** or **DROP**.

Collect statistics of the DNS responses served from the cache

You can collect statistics of the DNS responses served from the cache. Then use these statistics to create a threshold beyond which more DNS traffic is dropped, and enforce this threshold with a bandwidth based policy. Previously, bandwidth calculation for a DNS load balancing virtual server was not accurate, because the number of requests served from the cache was not reported.

In proxy mode, the statistics for Request bytes, Response bytes, Total Packets received, and Total Packets sent statistics are continuously updated. Previously, these statistics were not always updated, particularly for a DNS load balancing virtual server.

Proxy mode also now enables you to determine the number of DNS responses served from the cache. To collect these statistics, the following options have been added to the `stat lb vserver <DNSvirtualServerName>` command:

- **Requests** –Total number of requests received by the DNS or DNS_TCP virtual server. Includes the requests forwarded to the back end and the requests answered from the cache.
- **Vserver hits** –Total number of requests forwarded to the back end. The number of requests served from the cache is the difference between the total number of requests and the number of requests served from the virtual server.
- **Responses** –Total number of responses sent by this virtual server. For example, if a DNS LB virtual server received 5 DNS requests, forwarded 3 of them to the back end, and served 2 of them from the cache, the corresponding value of each of these statistics would be as follows:
 - **Vserver hits:** 3
 - **Requests:** 5
 - **Responses:** 5

Use case: Configure the automatic DNSSEC key management feature

February 27, 2024

Use the following steps to enable the auto rollover feature on a non-GSLB site.

Note

Use this procedure if you have a DNS deployment on a NetScaler and not required to replicate it on other devices.

In this example, we have used the following details:

- Domain name: example.com

- Origin Server: nameserver1.example.com
- NameServer: nameserver2.example.com
- Contact: admin.example.com
- Keys: Key 1 for ZSK and Key 2 for KSK

1. Create SOA and NS record (name is to be the same as zone name)

At the command prompt, type:

```
1 add dns soaRec example.com -originServer nameserver1.example.com -
  contact admin.example.com
```

2. Create a DNS zone record. Set the proxy mode to No for authoritative zones.

```
1 add dns zone example.com -proxyMode no
```

3. Create DNS keys

Note:

The command creates three files in the system with the filename prefix: private, key, and ds.

```
1 create dns key -zoneName example.com -fileNamePrefix Key1.zsk -
  keytype zsk -keysize 1024 -algorithm rsASHA256
2 create dns key -zoneName example.com -fileNamePrefix Key2.ksk -
  keytype ksk -keysize 1024 -algorithm rsASHA256
```

4. Publish the keys in the zone.

Note:

Enable the automatic rollover option and specify the expiration date, along with the notification period. A warning message is displayed regarding the activation of the key.

```
1 add dns key Key1.zsk Key1.zsk.key Key1.zsk.private -autoRollover
  enABLED -expires 30 days -notificationPeriod 7 days -
  rolloverMethod doublesignature
2
3 Warning: The key should be in an activated state for rollover.
  Please use sign DNS zone operation to activate the key
4 Done
5
6 add dns key Key2.ksk Key2.ksk.key Key2.ksk.private -autoRollover
  enABLED -expires 120 days -notificationPeriod 15 days -
  rolloverMethod doublerrSet
7
8 Warning: The key should be in an activated state for rollover.
  Please use sign DNS zone operation to activate the key
9 Done
```

5. Activate the key using the sign zone command.

```
sign dns zone example.com -keyName Key1.zsk Key2.ksk
```

6. Update the DS record for the new key in the parent zone.

7. Enable the auto-save key option in DNS parameters.

```
set dns parameter -autosaveKeyOps enABLED
```

Note:

To ensure timely monitoring of all key activity, an SNMP alarm is sent. The SNMP alarms are sent for newly generated keys once the active keys are deleted.

Use case: Configure the automatic DNSSEC key management on GSLB deployment

February 27, 2024

Perform the following steps to enable the auto rollover feature on a GSLB site. If you want a secondary DNS resolver and want to duplicate the DNS configuration and DNS keys, ensure to have the following configurations:

- Basic GSLB sites
- License for GSLB
- Firewall policies

Note

Once the setup is completed, the main primary GSLB does the key rollover operations and synchronization to the subordinates' sites.

In this example, we have used the following details:

- Domain name: example.com
- Origin Server: nameserver1.example.com
- NameServer: nameserver2.example.com
- Contact: admin.example.com
- Keys: Key 1 for ZSK and Key 2 for KSK

1. Enable the `gslbautomaticConfigSync` and `gslbsyncsaveConfig` parameters.

At the command prompt, type:


```
1 set gslb parameter -automaticConfigSync enabled -gslbsyncsaveConfig
  enabled
2
3 Warning: The Saveconfig command might not get applied to GSLB sites
  that are down during the sync operation, so it is recommended to
  apply saveconfig on the master node again when down GSLB site comes
  up.
4 Done
```

1. Enable DNS zone transfer in DNS parameters.

At the command prompt, type:

```
1 set dns parameter -zoneTransfer enABLED
2 Done
```

2. Create SOA and NS record (name should be the same as zone name).

At the command prompt, type:

```
1 add dns soaRec example.com -originServer nameserver1.example.com -
  contact admin.example.com
2 Done
3 add dns nsrec example.com nameserver2.example.com
4 Done
```

3. Create a DNS zone record. Set Proxy mode as No for authoritative zones.

```
1 add dns zone example.com -proxyMode no
```

4. Create DNS keys

Note:

The command creates three files in the system with the filename prefix: private, key, and ds.

```
1 create dns key -zoneName example.com -fileNamePrefix Key1.zsk -
  keytype zsk -keysize 1024 -algorithm rsASHA256
2 create dns key -zoneName example.com -fileNamePrefix Key2.ksk -
  keytype ksk -keysize 1024 -algorithm rsASHA256
```

5. Publish the keys in the zone.

Note:

Enable the automatic rollover option and specify the expiration date, along with the notification period. A warning message is displayed regarding the activation of the key.

```
1 add dns key Key1.zsk Key1.zsk.key Key1.zsk.private -autoRollover
  enABLED -expires 30 days -notificationPeriod 7 days -
  rolloverMethod doublesignature
2
3 Warning: The key should be in an activated state for rollover.
  Please use sign DNS zone operation to activate the key
4 Done
5
6 add dns key Key2.ksk Key2.ksk.key Key2.ksk.private -autoRollover
  enABLED -expires 120 days -notificationPeriod 15 days -
  rolloverMethod doublerrSet
7
8 Warning: The key should be in an activated state for rollover.
  Please use sign DNS zone operation to activate the key
9 Done
```

6. Activate the key using the sign zone command.

```
1 sign dns zone example.com -keyName Key1.zsk Key2.ksk
```

7. Enable the auto-save key option in DNS parameters.

```
1 set dns parameter -autosaveKeyOps enabled
```

8. Run the show DNS key command.

The show command lists the following details:

- Key state - The state of an existing key.
- Expiry date - The date when the current key expires.
- Notification period - This parameter defines the number of days before the key expires that a notification should be sent.
In case auto rollover is enabled, a successor key is created at this period before expiry.
- Key Tag - Unique identifier for a key.
- Automatic rollover status - The current state of the automatic rollover.
- Rollover method - Rollover method for the specified key.

““

```
show dns key
```

```
1) Key Name: test1.zsk Key Tag: 33216 Key Type: ZSK
Zone Name: test1.com Key State: Activated
Expires: 30 DAYS Notification: 7 DAYS TTL: 5
Automatic Rollover: ENABLED Rollover Method: DoubleSignature
Public Key File: test1.zsk.key
Private Key File: test1.zsk.private
Create Time: Wed Oct 11 04:30:40 2023
Activation Time: Wed Oct 11 04:32:05 2023
```

Deactivation Time: Fri Nov 10 04:31:05 2023
Deletion Time: Fri Nov 10 04:33:05 2023
2) Key Name: test1.ksk Key Tag: 5554 Key Type: KSK
Zone Name: test1.com Key State: Activated
Expires: 120 DAYS Notification: 15 DAYS TTL: 5
Automatic Rollover: ENABLED Rollover Method: DoubleRRSet
Public Key File: test1.ksk.key
Private Key File: test1.ksk.private
Create Time: Wed Oct 11 04:31:44 2023
Activation Time: Wed Oct 11 04:32:05 2023
Deactivation Time: Thu Feb 8 04:31:05 2024
Deletion Time: Thu Feb 8 04:33:05 2024
Done

Use case: How to revoke a compromised active key

February 27, 2024

Perform the following procedure to revoke the compromised active key.

Point to note:

- **Overlap period:** To facilitate a smooth transition, we recommend you to have an overlapping time during which both old and new keys are active.
- **DNSKEY TTL values:** TTL determines the duration DNS records are cached. Set appropriate TTL values to allow for new key activation.
- **Propagation time:** When planning to revoke a compromised key, make sure to consider the time needed for the new key to be updated on all GSLB sites before it can be used.
- **Delay in updating parent zone:** When updating DS records in the parent zone, be aware of potential delays. These delays can impact your domain's security and reliability. Registrars have specific timelines and requirements for updating DS records in the parent zone.

In this use case, the existing keys are key 1 and key 2. Key 1 is active and is used to sign the DNSKEY RRSET. Key 2 is the stand-by key, it is in the DNSKEY RRSet but was not used to sign the RRSet. When the active key (key 1) is compromised, perform the following:

1. Create a key 3

At the command prompt, type:

```
1 create dns key -zoneName example.com -fileNamePrefix Key3.ksk -  
keytype ksk -keysize 1024 -algorithm rsASHA256
```

1. Activate the key 2 using the sign zone command.

At the command prompt, type:

```
1 sign dns zone example.com -keyName Key2.ksk
2 Done
```

1. Update the DS record for the new key in the parent zone.
2. Verify whether the new key is updated in all GSLB sites.
3. Revoke the compromised active key (key 1)

At the command prompt, type:

```
set dns key Key1.ksk -revoke
```

4. Monitor the DNSSEC key status
5. Delete the compromised key (key 1)

Note:

If you revoke the key (key 1), it remains in the system unless you explicitly delete it. When the auto-rollover option is set, the system auto-rollovers the key after the configured expiration date if you do not delete it manually. During the auto-rollover process, a new key is created for you to use based on your needs.

At the command prompt, type:

```
rm dns key Key 1
```

Key 2 is now the active key and key 3 is the stand-by key

Note:

The revoke procedure is the same for ZSK keys, except for updating the parent zone after deleting the key.

Federal Information Processing Standards

September 16, 2024

Federal Information Processing Standards (FIPS) is a set of standards developed by the National Institute of Standards and Technology (NIST) for the use of Defence, Federal, and State Government organizations. The FIPS systems provide security, compliance, interoperability, and best practices. In the financial services industry, FIPS compliance is essential for protecting sensitive customer information

and ensuring the integrity of financial transactions. In the healthcare industry, FIPS compliance is critical for safeguarding patient data and ensuring the privacy of medical records. By implementing FIPS standards, financial services and healthcare organizations can enhance their security posture, reduce the risk of data breaches, and maintain compliance with regulatory requirements.

FIPS employs a secure cryptographic module as a core component to ensure data protection. There are standards that define the security requirements for cryptographic modules. FIPS 140-2 and FIPS 140-3 define the stringent security requirements for cryptographic modules, comprising algorithm selection, key management procedures, access controls, physical security measures, and operational environment specifications. These modules, which are the core components ensuring data protection within FIPS, can be implemented at various security levels depending on the intended use case and the organization's specific security needs.

The security levels are defined as follows:

- **Level 1:** Provides a foundational level of security, ensuring the correct implementation of cryptographic algorithms.
- **Level 2:** Builds upon Level 1 by incorporating tamper-evident mechanisms to detect unauthorized physical access or modifications.
- **Level 3:** Focuses on preventing physical tampering through robust protective measures, making it significantly more difficult for attackers to gain unauthorized access to sensitive information.
- **Level 4:** Offers the highest level of security, employing sophisticated countermeasures to protect against highly skilled and well-equipped adversaries.

NetScaler FIPS compliance levels are as follows:

- **NetScaler VPX:** NetScaler VPX, a software-based virtual system, typically achieves FIPS Level 1 compliance for both FIPS 140-2/FIPS-140-3.
- **NetScaler MPX:** NetScaler MPX, due to its hardware-based security measures, can achieve FIPS 140-2/FIPS 140-3 Level 2. This is because the physical security mechanisms inherent in hardware devices offer a higher degree of tamper resistance and protection against unauthorized access, aligning with the more stringent requirements of Level 2.

For more information about the NetScaler specific FIPS appliances, see [VPX FIPS appliances](#) and [MPX FIPS appliances](#).

MPX 14000 FIPS appliances

September 12, 2024

Important:

- The MPX 9700/10500/12500/15500 FIPS platform has reached end of life.
- Configuration steps for NetScaler MPX 14000 FIPS and NetScaler MPX 9700/10500/12500/15500 FIPS appliances are different. MPX 14000 FIPS appliances do not use firmware v2.2. A FIPS key created on the Hardware Security Module (HSM) of the MPX 9700 platform cannot be transferred to the HSM of the MPX 14000 platform. The other way round is also not supported. However, if you have imported an RSA key as a FIPS key, you can copy the RSA key to the MPX 14000 platform. Then import it as a FIPS key. Only 2048-bit and 3072-bit keys are supported.
- The firmware versions listed under “NetScaler Release 12.1-FIPS” and “NetScaler Release 12.1-NDcPP” in the NetScaler downloads page are not supported on the MPX 14000 FIPS or SDX 14000 FIPS platforms. These platforms can use other latest NetScaler firmware versions available on the downloads page.

A FIPS appliance is equipped with a tamper-proof (tamper-evident) cryptographic module—a Cavium CNN3560-NFBE-G—designed to comply with the FIPS 140-2 Level-3 specifications. The Critical Security Parameters (CSPs), primarily the server’s private-key, are securely stored and generated inside the cryptographic module, also referred to as the HSM. The CSPs are never accessed outside the boundaries of the HSM. Only the superuser (`nsroot`) can perform operations on the keys stored inside the HSM.

Before configuring a FIPS appliance, you must check the state of the FIPS card and then initialize the card. Create a FIPS key and server certificate, and add any additional SSL configuration.

For information about the FIPS ciphers supported, see [FIPS Approved Algorithms and Ciphers](#).

For information about configuring FIPS appliances in an HA setup, see [Configure FIPS on appliances in an HA setup](#).

Limitations

1. SSL renegotiation using the SSLv3 protocol is not supported on the back end of an MPX FIPS appliance.
2. 1024-bit and 4096-bit keys and exponent value of 3 aren’t supported.
3. 4096-bit server certificate isn’t supported.
4. 4096-bit client certificate isn’t supported (if client authentication is enabled on the back-end server).

Configure the HSM

Before configuring the HSM on an MPX 14000 FIPS appliance, check the state of your FIPS card to verify that the driver loaded correctly. Then initialize the card.

At the command prompt, type:

```
1 show fips
2
3 FIPS Card is not configured
```

The message “ERROR: Operation not permitted - no FIPS card present in the system” appears if the driver is not loaded correctly.

Initialize the FIPS card

The appliance must be restarted three times for proper initialization of the FIPS card.

Important

- Verify that the `/nsconfig/fips` directory has been successfully created on the appliance.
- Do not save the configuration before you restart the appliance for the third time.

Perform the following steps to initialize the FIPS card:

1. Reset the FIPS card (`reset fips`).
2. Restart the appliance (`reboot`).
3. Set the security officer password for partitions 0 and 1, and the user password for partition (`set fips -initHSM Level-2 <soPassword> <oldsoPassword> <userPassword> -hsmLabel NSFIPS`).

Note: The set or reset command takes more than 60 seconds to run.

4. Save the configuration (`saveconfig`).
5. Verify that the password-encrypted key for the main partition (`master_pek.key`) has been created in the `/nsconfig/fips/` directory.
6. Restart the appliance (`reboot`).
7. Verify that the password-encrypted key for the default partition (`default_pek.key`) has been created in the `/nsconfig/fips/` directory.
8. Restart the appliance (`reboot`).
9. Verify that the FIPS card is UP (`show fips`).

Initialize the FIPS card by using the CLI The `set fips` command initializes the Hardware Security Module (HSM) on the FIPS card and sets a new security officer password and user password.

Caution: This command erases all data on the FIPS card. You are prompted before proceeding with the command execution. A restart is required before and after running this command for the changes to apply. Save the configuration after running this command and before restarting the appliance.

At the command prompt, type the following commands:

```
1 reset fips
2
3 reboot
4
5 set fips -initHSM Level-2 so12345 so12345 user123 -hsmLabel NSFIPS
6
7 This command will erase all data on the FIPS card. You must save the
  configuration (saveconfig) after executing this command. Do you want
  to continue?(Y/N)y
```

Note: The following message appears when you run the `set fips` command:

```
1 This command will erase all data on the FIPS card. You must save the
  configuration (saveconfig) after executing this command. [Note: On
  MPX/SDX 14xxx FIPS platform, the FIPS security is at Level-3 by
  default, and the -initHSM Level-2 option is internally converted to
  Level-3] Do you want to continue?(Y/N)y
2
3 saveconfig
4
5 reboot
6
7 reboot
8
9 show fips
10
11          FIPS HSM Info:
12              HSM Label           : NetScaler FIPS
13              Initialization       : FIPS-140-2 Level-3
14              HSM Serial Number    : 3.1G1836-ICM000136
15              HSM State            : 2
16              HSM Model            : NITROX-III CNN35XX-NFBE
17              Hardware Version     : 0.0-G
18              Firmware Version     : 1.0
19              Firmware Build       : NFBE-FW-1.0-48
20              Max FIPS Key Memory  : 102235
21              Free FIPS Key Memory  : 102231
22              Total SRAM Memory    : 557396
23              Free SRAM Memory     : 262780
24              Total Crypto Cores   : 63
25              Enabled Crypto Cores : 63
```


Create a FIPS key

You can create a FIPS key on your MPX 14000 FIPS appliance or import an existing FIPS key to the appliance. The MPX 14000 FIPS appliance supports only 2048-bit and 3072-bit keys and an exponent value of F4 (whose value is 65537). For PEM keys, an exponent is not required. Verify that the FIPS key is created correctly. Create a certificate signing request and a server certificate. Finally, add the certificate-key pair to your appliance.

Specify the key type (RSA or ECDSA). For ECDSA keys, specify only the curve. ECDSA key creation with curve P_256 and P_384 are supported.

Note:

1024-bit and 4096-bit keys and an exponent value of 3 are not supported.

Create a FIPS key by using the CLI

At the command prompt, type:

```
1 create ssl fipsKey <fipsKeyName> -keytype ( RSA | ECDSA ) [-exponent (
  3 | F4 )] [-modulus <positive_integer>] [-curve ( P_256 | P_384 )]
```

Example1:

```
1 create fipsKey f1 -keytype RSA -modulus 2048 -exponent F4
2
3
4 show ssl fipskey f1
5
6 FIPS Key Name: f1 Key Type: RSA Modulus: 2048 Public Exponent: F4 (
  Hex: 0x10001)
```

Example2:

```
1 > create fipskey f2 -keytype ECDSA -curve P_256
2
3
4 > sh fipskey f2
5 FIPS Key Name: f2 Key Type: ECDSA Curve: P_256
```

Create a FIPS key by using the GUI

1. Navigate to **Traffic Management > SSL > FIPS**.
2. In the details pane, on the FIPS Keys tab, click **Add**.
3. In the Create FIPS Key dialog box, specify values for the following parameters:

- FIPS Key Name*—fipsKeyName
- Modulus*—modulus
- Exponent*—exponent

*A required parameter

4. Click **Create**, and then click **Close**.
5. On the FIPS Keys tab, verify that the settings displayed for the FIPS key that you created are correct.

Import a FIPS key

To use an existing FIPS key with your FIPS appliance, you need to transfer the FIPS key from the hard disk of the appliance into its HSM.

Note: To avoid errors when importing a FIPS key, ensure that the name of the key imported is the same as the original key name when it was created.

Import a FIPS key by using the CLI

At the command prompt, type:

```
1 import ssl fipskey <fipsKeyName> -key <string> [-inform <inform>] [-wrapKeyName <string>] [-iv<string>] -exponent F4 ]
```

Example:

```
1 import fipskey Key-FIPS-2 -key Key-FIPS-2.key -inform SIM -exponent F4
2
3
4 import fipskey Key-FIPS-2 -key Key-FIPS-2.key -inform PEM
```

Verify that the FIPS key is created or imported correctly by running the `show fipskey` command.

```
1 show fipskey
2 1)      FIPS Key Name: Key-FIPS-2
```

Import a FIPS key by using the GUI

1. Navigate to **Traffic Management > SSL > FIPS**.
2. In the details pane, on the FIPS Keys tab, click **Import**.
3. In the Import as a FIPS Key dialog box, select FIPS key file and set values for the following parameters:

- FIPS Key Name*
- Key File Name* —To put the file in a location other than the default, specify the complete path or click **Browse** and navigate to a location.
- Exponent*

*A required parameter

4. Click **Import**, and then click **Close**.
5. On the FIPS Keys tab, verify that the settings displayed for the FIPS key that you imported are correct.

Export a FIPS key

Citrix recommends that you create a backup of any key created in the FIPS HSM. If a key in the HSM is deleted, you cannot create the same key again, and all the certificates associated with it are rendered useless.

In addition to exporting a key as a backup, you might need to export a key for transfer to another appliance.

The following procedure provides instructions on exporting a FIPS key to the `/nsconfig/ssl` folder on the appliance's CompactFlash and securing the exported key by using a strong asymmetric key encryption method.

Export a FIPS key by using the CLI

At the command prompt, type:

```
1 export ssl fipsKey <fipsKeyName> -key <string>
```

Example:

```
1 export fipskey Key-FIPS-1 -key Key-FIPS-1.key
```

Export a FIPS key by using the GUI

1. Navigate to **Traffic Management > SSL > FIPS**.
2. In the details pane, on the FIPS Keys tab, click **Export**.
3. In the Export FIPS key to a file dialog box, specify values for the following parameters:
 - FIPS Key Name*—fipsKeyName

- File Name*—key (To put the file in a location other than the default, you can either specify the complete path or click the Browse button and navigate to a location.)

*A required parameter

4. Click **Export**, and then click **Close**.

Import an external key

You can transfer FIPS keys that are created within the NetScaler appliance's HSM. You can also transfer external private keys (such as keys created on a standard NetScaler, Apache, or IIS) to a NetScaler FIPS appliance. External keys are created outside the HSM, by using a tool such as OpenSSL. Before importing an external key into the HSM, copy it to the appliance's flash drive under `/nsconfig/ssl`.

On the MPX 14000 FIPS appliances, the `-exponent` parameter in the `import ssl fipskey` command is not required while importing an external key. The correct public exponent is detected automatically when the key is imported, and the value of the `-exponent` parameter is ignored.

The NetScaler FIPS appliance does not support external keys with a public exponent other than 3 or F4.

You do not need a wrap key on the MPX 14000 FIPS appliances.

You cannot import an external, encrypted FIPS key directly to an MPX 14000 FIPS appliance. To import the key you need to first decrypt the key, and then import it. To decrypt the key, at the shell prompt, type:

```
1 openssl rsa -in <EncryptedKey.key> > <DecryptedKey.out>
```

Note: If you import an RSA key as a FIPS key, Citrix recommends that you delete the RSA key from the appliance for security purposes.

Import an external key as a FIPS key by using the CLI

1. Copy the external key to the appliance's flash drive.
2. If the key is in .pfx format, you must first convert it to PEM format. At the command prompt, type:

```
1 convert ssl pkcs12 <output file> -import -pkcs12File <input .pfx  
file name> -password <password>
```

3. At the command prompt, type the following commands to import the external key as a FIPS key and verify the settings:

```
1 import ssl fipsKey <fipsKeyName> -key <string> -informPEM
2 show ssl fipskey<fipsKeyName>
```

Example:

```
1 convert ssl pkcs12 iis.pem -password 123456 -import -pkcs12File iis.pfx
2
3 import fipskey Key-FIPS-2 -key iis.pem -inform PEM
4
5 show ssl fipskey key-FIPS-2
6
7 FIPS Key Name: Key-FIPS-2 Modulus: 0 Public Exponent: F4 (Hex value 0
  x10001)
```

Import an external key as a FIPS key by using the GUI

1. If the key is in .pfx format, you must first convert it to PEM format.
 - a) Navigate to **Traffic Management > SSL**.
 - b) In the details pane, under Tools, click **Import PKCS#12**.
 - c) In the Import PKCS12 File dialog box, set the following parameters:
 - Output File Name*
 - PKCS12 File Name*—Specify the .pfx file name.
 - Import Password*
 - Encoding Format*A required parameter
2. Navigate to **Traffic Management > SSL > FIPS**.
3. In the details pane, on the FIPS Keys tab, click **Import**.
4. In the Import as a FIPS Key dialog box, select PEM file, and set values for the following parameters:
 - FIPS Key Name*
 - Key File Name*—To put the file in a location other than the default, you can either specify the complete path or click Browse and navigate to a location.*A required parameter
5. Click **Import**, and then click **Close**.
6. On the FIPS Keys tab, verify that the settings displayed for the FIPS key that you imported are correct.

Configure FIPS on appliances in an HA setup

You can configure two appliances in an HA pair as FIPS appliances.

Prerequisites

- The Hardware Security Module (HSM) must be configured on both the appliances. For more information, see [Configure the HSM](#).
- When using the GUI, ensure that the appliances are already in an HA setup. For more information about configuring an HA setup, see [High availability](#).

Note:

Citrix recommends that you use the configuration utility (GUI) for this procedure. If you use the command line (CLI), make sure that you carefully follow the steps as listed in the procedure. Changing the order of steps or specifying an incorrect input file might cause an inconsistency that requires an appliance restart. In addition, if you use the CLI, the `create ssl fipskey` command is not propagated to the secondary node. When you run the command with the same input values for modulus size and exponent on two different FIPS appliances, the keys generated are not the same. Create the FIPS key on one of the nodes and then transfer it to the other node. But if you use the configuration utility to configure FIPS appliances in an HA setup, the FIPS key that you create is automatically transferred to the secondary node. The process of managing and transferring the FIPS keys is known as secure information management (SIM).

Important: The HA setup must be completed within six minutes. If the procedure fails at any step, do the following:

1. Restart the appliance or wait for 10 minutes.
2. Remove all the files created by the procedure.
3. Repeat the HA setup procedure.


Do not reuse existing file names.

In the following procedure, appliance A is the primary node and appliance B is the secondary node.

Configure FIPS on appliances in an HA setup by using the CLI

The following diagram summarizes the transfer process on the CLI.

Figure 1. Transfer the FIPS key-summary

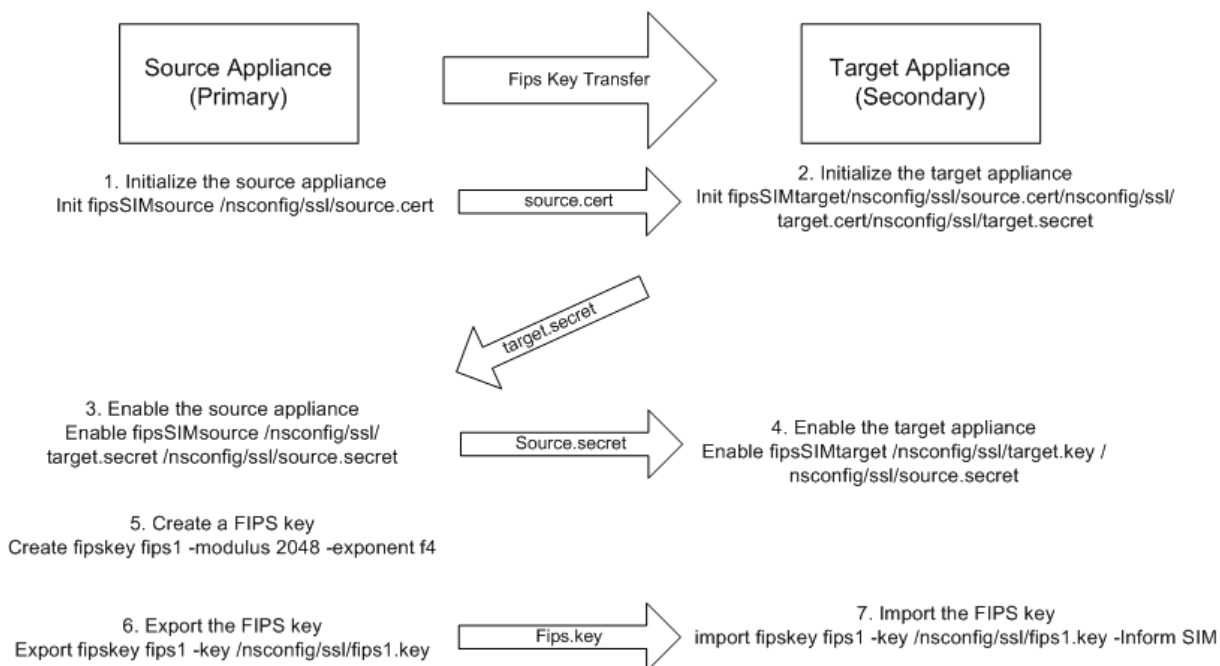

1. **On appliance A**, open an SSH connection to the appliance by using an SSH client, such as PuTTY.
2. Log on to the appliance, using the administrator credentials.
3. Initialize appliance A as the source appliance. At the command prompt, type:

```
1 init ssl fipsSIMsource <certFile>
```

Example:

```
init fipsSIMsource /nsconfig/ssl/nodeA.cert
```

4. Copy this <certFile> file to appliance B, in the /nconfig/ssl folder.

Example:

```
scp /nsconfig/ssl/nodeA.cert nsroot@198.51.100.10:/nsconfig/ssl
```

5. **On appliance B**, open an SSH connection to the appliance by using an SSH client, such as PuTTY.
6. Log on to the appliance, using the administrator credentials.
7. Initialize appliance B as the target appliance. At the command prompt, type:

```
1 init ssl fipsSIMtarget <certFile> <keyVector> <targetSecret>
```

Example:

```
init fipsSIMtarget /nsconfig/ssl/nodeA.cert /nsconfig/ssl/nodeB.key /nsconfig/ssl/nodeB.secret
```

8. Copy this <targetSecret> file to appliance A.

Example:

```
scp /nsconfig/ssl/fipslbdal0801b.secret nsroot@198.51.100.20:/nsconfig/ssl
```

9. **On appliance A**, enable appliance A as the source appliance. At the command prompt, type:

```
1 enable ssl fipsSIMSource <targetSecret> <sourceSecret>
```

Example:

```
enable fipsSIMsource /nsconfig/ssl/nodeB.secret /nsconfig/ssl/nodeA.secret
```

10. Copy this <sourceSecret> file to appliance B.

Example:

```
scp /nsconfig/ssl/fipslbdal0801b.secret nsroot@198.51.100.10:/nsconfig/ssl
```

11. **On appliance B**, enable appliance B as the target appliance. At the command prompt, type:

```
1 enable ssl fipsSIMtarget <keyVector> <sourceSecret>
```

Example:

```
enable fipsSIMtarget /nsconfig/ssl/nodeB.key /nsconfig/ssl/nodeA.secret
```

12. **On appliance A**, create a FIPS key, as described in Create a FIPS key.
13. Export the FIPS key to the appliance's hard disk, as described in Export a FIPS key.
14. Copy the FIPS key to the hard disk of the secondary appliance by using a secure file transfer utility, such as SCP.
15. **On appliance B**, import the FIPS key from the hard disk into the HSM of the appliance, as described in Import a FIPS key.

Configure FIPS on appliances in an HA setup by using the GUI

1. On the appliance to be configured as the source (primary) appliance, navigate to **Traffic Management > SSL > FIPS**.
2. In the details pane, on the FIPS Info tab, click **Enable SIM**.
3. In the **Enable SIM for HA Pair** dialog box, in the **Certificate File Name** text box, type the file name. The file name must contain the path to the location at which the FIPS certificate must be stored on the source appliance.
4. In the **Key Vector File Name** text box, type the file name. The file name must contain the path to the location at which the FIPS key vector must be stored on the source appliance.

5. In the **Target Secret File Name** text box, type the location for storing the secret data on the target appliance.
6. In the **Source Secret File Name** text box, type the location for storing the secret data on the source appliance.
7. Under **Secondary System Login Credential**, enter the values for **User Name** and **Password**.
8. Click **OK**. The FIPS appliances are now configured in HA mode.

Note: After configuring the appliances in HA, create a FIPS key, as described in Create a FIPS key. The FIPS key is automatically transferred from the primary to the secondary appliance.

Create a certificate signing request by using the CLI

At the command prompt, type:

```

1 create ssl certReq <reqFile> (-keyFile <input_filename> | -fipsKeyName
  <string>) [-keyform ( DER | PEM ) {
2   -PEMPassPhrase  }
3   ] -countryName <string> -stateName <string> -organizationName<string>
  [-organizationUnitName <string>] [-localityName <string>] [-
  commonName <string>] [-emailAddress <string>] {
4   -challengePassword  }
5   [-companyName <string>] [-digestMethod ( SHA1 | SHA256 )]
```

Example:

```

1 >create certreq f1.req - fipsKeyName f1 -countryName US -stateName CA
  -organizationName Citrix -companyName Citrix -commonName ctx -
  emailAddress test@example.com
2 Done
```

Create a server certificate by using the CLI

At the command prompt, type:

```

1 create ssl cert <certFile> <reqFile> <certType> [-keyFile <
  input_filename>] [-keyform ( DER | PEM ) {
2   -PEMPassPhrase  }
3   ] [-days <positive_integer>] [-certForm ( DER | PEM )] [-CAcert <
  input_filename>] [-CAcertForm ( DER | PEM )] [-CAkey <
  input_filename>][-CAkeyForm ( DER | PEM )] [-CAserial <
  output_filename>]
```

Example:

```

1 create cert f1.cert f1.req SRVR_CERT -CAcert ns-root.cert -CAkey ns-
  root.key -CAserial ns-root.srl -days 1000
2 Done
```

The preceding example creates a server certificate using a local root CA on the appliance.

Add a certificate-key pair by using the CLI

At the command prompt, type:

```
1 add ssl certKey <certkeyName> (-cert <string> [-password]) [-key <string> | -fipsKey <string> | -hsmKey <string>] [-inform <inform>] [-expiryMonitor ( ENABLED | DISABLED ) [-notificationPeriod <positive_integer>]] [-bundle ( YES | NO )]
```

Example:

```
1 add certkey cert1 -cert f1.cert -fipsKey f1
```

After creating the FIPS key and server certificate, you can add the generic SSL configuration. Enable the features that are required for your deployment. Add servers, services, and SSL virtual servers. Bind the certificate-key pair and the service to the SSL virtual server. Save the configuration.

```
1 enable ns feature SSL LB
2
3 add server s1 10.217.2.5
4
5 add service sr1 s1 HTTP 80
6
7 add lb vserver v1 SSL 10.217.2.172 443
8
9 bind ssl vserver v1 -certkeyName cert1
10
11 bind lb vserver v1 sr1
12
13 saveconfig
```

The basic configuration of your MPX 14000 FIPS appliance is now complete.

For information about configuring secure HTTPS, click [Configure FIPS](#).

For information about configuring secure RPC, click [Configure FIPS for the first time](#).

Update the license on an MPX 14000 FIPS appliance

Any update to the license on this platform requires two reboots.

1. Update the license in the `/nsconfig/license` folder.
2. Restart the appliance.
3. Log on to the appliance.

- Restart the appliance again.

Note: Do not add new commands, save the config, or check the system state before the second reboot.

- Log on to the appliance and ensure that FIPS is initialized by running the `show ssl fips` command.

Support for hybrid FIPS mode on the MPX 14000 FIPS and SDX 14000 FIPS platforms

Note:

This feature is supported only on the new MPX/SDX 14000 FIPS platform containing one primary FIPS card and one or more secondary cards. It is not supported on a VPX platform or a platform containing only one type of hardware card.

On a FIPS platform, the asymmetric and symmetric encryption and decryption are performed on the FIPS card for security reasons. However, you can perform part of this activity (asymmetric) on a FIPS card and offload the bulk encryption and decryption (symmetric) to another card without compromising the security of your keys.

The new MPX/SDX 14000 FIPS platform contains one primary card and one or more secondary cards. If you enable the hybrid FIPS mode, the pre-master secret decryption commands are run on the primary card because the private key is stored on this card. However, the bulk encryption and decryption is offloaded to the secondary card. This offload significantly increases the bulk encryption throughput on an MPX/SDX 14000 FIPS platform as compared to non-hybrid FIPS mode and the existing MPX 9700/10500/12500/15000 FIPS platform. Enabling the hybrid FIPS mode also improves the SSL transaction per second on this platform.

Notes:

- The hybrid FIPS mode is disabled by default to meet the strict certification requirements where all the crypto computation must be done inside a FIPS certified module. Enable the hybrid mode to offload the bulk encryption and decryption to the secondary card.
- On an SDX 14000 FIPS platform, you must first assign an SSL chip to the VPX instance before you enable the hybrid mode.

Enable hybrid FIPS mode by using the CLI

At the command prompt, type:

```
1 set SSL parameter -hybridFIPSMODE {
2   ENABLED|DISABLED }
3
4
```

```

5 Arguments
6
7 hybridFIPSMODE
8
9 When this mode is enabled, system will use additional crypto hardware
  to accelerate symmetric crypto operations.
10
11 Possible values: ENABLED, DISABLED
12
13 Default value: DISABLED

```

Example:

```

1 set SSL parameter -hybridFIPSMODE ENABLED
2 show SSL parameter
3 Advanced SSL Parameters
4 -----
5 . . . . .
6 Hybrid FIPS Mode : ENABLED
7 . . . . .

```

Enable hybrid FIPS mode by using the GUI

1. Navigate to **Traffic Management > SSL**.
2. In the details pane, under **Settings**, click **Change advanced SSL settings**.
3. In the **Change Advanced SSL Settings** dialog box, select **Hybrid FIPS Mode**.

Limitations:

1. Renegotiation is not supported.
2. The `stat ssl parameter` command on an SDX 14000 platform does not display the correct secondary card utilization percentage. It always displays 0.00% utilization.

```

1 stat ssl
2
3 SSL Summary
4 # SSL cards present 1
5 # SSL cards UP 1
6 # Secondary SSL cards present 4
7 # Secondary SSL cards UP 4
8 SSL engine status 1
9 SSL sessions (Rate) 963
10 Secondary card utilization (%) 0.00

```

SDX 14000 FIPS appliances

September 12, 2024

Note

The firmware versions listed under “NetScaler Release 12.1-FIPS” and “NetScaler Release 12.1-NDcPP” in the NetScaler downloads page are not supported on the MPX 14000 FIPS or SDX 14000 FIPS platforms. These platforms can use other latest NetScaler firmware versions available on the downloads page.

A NetScaler SDX appliance is a multitenant platform on which you can provision and manage multiple virtual NetScaler instances. The SDX appliance addresses cloud computing and multitenancy requirements by allowing a single administrator to configure and manage the appliance and delegate the administration of each hosted instance to tenants.

A NetScaler SDX 14030/14060/14080 FIPS appliance provides the capabilities of an SDX appliance with FIPS functionality. It is equipped with a tamper-proof (tamper-evident) cryptographic module—a Cavium CNN3560-NFBE-G—designed to comply with the FIPS 140-2 Level-3 specifications. The Critical Security Parameters (CSPs), primarily the server’s private-key, are securely stored and generated inside the cryptographic module. This module is also referred to as the Hardware Security Module (HSM). The CSPs are never accessed outside the boundaries of the HSM. Only the superuser (`nsroot`) can perform operations on the keys stored inside the HSM.

A NetScaler SDX 14030/14060/14080 FIPS appliance contains one FIPS HSM module with 63 cores. The FIPS HSM module can be partitioned up to a maximum of 32 partitions. The SDX administrator can assign dedicated key storage, cryptographic resources, and number of crypto SSL FIPS cores to each partition. Keys and resources allocated to a partition are dedicated and secure and any other partition cannot access or share them.

The FIPS HSM partition that you create can be assigned or attached to a VPX instance at the time of provisioning the instance, or later by editing the instance. The FIPS partition created and attached to an instance acts like a virtual HSM module for that instance.

The VPX instances on an SDX 14030/14060/14080 FIPS appliance are assigned a FIPS virtual function (VF) partition, which is treated as an isolated FIPS virtual card or HSM. Therefore, the steps to configure a FIPS partition inside a VPX instance are similar to the steps to configure an MPX FIPS appliance. For compliance details, see the security policy details on the U.S. National Institute of Standards and Technology (NIST) website.

For information about configuring FIPS appliances in a high availability setup, see [Configure FIPS appliances in an HA setup](#).

Important

Each key includes a private and a public key. As a result, it occupies two key spaces. Therefore, the maximum number of keys is limited to one less than half the key store size.

The SDX 14000 FIPS platform supports a hybrid FIPS mode. This mode allows you to offload part of the encryption and decryption activity to a non-FIPS card. For more information, see [Hybrid FIPS mode](#).

Limitations

September 12, 2024

1. SSL renegotiation using the SSLv3 protocol is not supported on the back end of an SDX FIPS appliance.
2. 1024-bit and 4096-bit keys and an exponent value of 3 are not supported.
3. Backup and restore are not supported.
4. Cluster and administrative domains are not supported.
5. You can attach only one FIPS partition to an instance.
6. An instance with a FIPS partition can be assigned only one CPU core.
7. You can assign either a FIPS partition or an SSL core to an instance, but not both.
8. 4096-bit server certificate is not supported.
9. 4096-bit client certificate is not supported (if client authentication is enabled on the back-end server).

Terminology

September 12, 2024

Zeroize: Reset the HSM. All the data on the HSM is deleted. This step is mandatory before the HSM is initialized.

Initialize: Set the HSM capabilities. The NetScaler SDX FIPS appliance complies with FIPS-140-2 level 2. You can create partitions after you initialize the chip.

Key store size: Number of keys that can be stored on a partition. A maximum of 102235 keys can be specified. The maximum number of keys that can be stored is one less than half the number specified. For example, if you specify 100, you can create only 49 keys because one of the keys is the RSA key pair that consumes 2 key stores.

Crypto Core Capacity: Number of crypto cores assigned to a partition. A maximum of 63 cores are available.

SSL Context: Number of concurrent SSL connections that can be created on a partition.

Initialize the HSM

September 12, 2024

Before initializing the HSM, you must first zeroize it.

Zeroize the HSM by using the Management Service

1. Open a browser and log on to the appliance.
2. On the **Configuration** tab, navigate to **System > HSM Administration**, and in the details plane, click **Zeroize**.


All data is wiped from the FIPS chip, and the state appears as “Zeroized.” Any HSM partitions created earlier are deleted.

The screenshot shows the NetScaler SDX configuration interface for HSM Administration. At the top, the breadcrumb navigation reads "NetScaler SDX > System > HSM Administration". Below this, there are three buttons: "Initialize", "Zeroize", and "Upgrade". The "Zeroize" button is highlighted. Below the buttons is a table of HSM details:

State	● Zeroized
Model	NITROX-III CNN35XX-NFBE
Label	
Firmware Version	CNN35XX-NFBE-FW-1.0-48
Build	48
Part Number	CNN3560-NFBE-G
Serial Number	3.0G1444-ICM000023

Initialize the HSM by using the Management Service

1. On the **Configuration** tab, navigate to **System > HSM Administration**, and in the details plane, click **Initialize**.
2. Type a new user name, specify a password, and click **OK**.

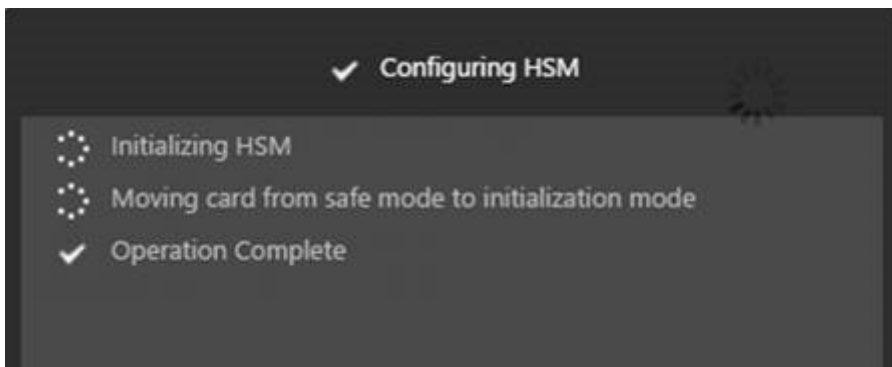

The card state appears as “Initialized.”

NetScaler SDX > System > **HSM Administration**

State	● Initialized
Model	NITROX-III CNN35XX-NFBE
Label	cavium
Firmware Version	CNN35XX-NFBE-FW-1.0-48
Build	48
Part Number	CNN3560-NFBE-G
Serial Number	3.0G1444-ICM000023

Create partitions

September 12, 2024

Create partitions for different tenants and specify the cryptographic resources for each partition. Each instance is assigned one partition, and a partition can be assigned to only one instance. Deleting an instance deletes the partition assigned to the instance. As a result, the partition data is also deleted and not left unsecured or accessible later. Number of keys and SSL context assignment depends on your application. For information about the number of cores to assign, see the NetScaler data sheet.

Important

After you assign a key store size and cores to an HSM partition, you cannot change them at run time. First detach the partition from the instance.

Create a partition by using the Management Service

1. On the Configuration tab, navigate to **System > HSM Administration > Partitions**, and in the details plane, click **Add**.
2. Specify a name for the partition, and the resources to be assigned to this partition.
3. Click **OK**.

The summary page displays all the partitions that were created. Some partitions are assigned an instance while some are free partitions.

NetScaler SDX > System > HSM Administration > Partitions ↻					
Total Keys	Available Keys	Total Crypto Cores	Available Crypto Cores	Total SSL Contexts	Available SSL Contexts
102,235	97,035	63	23	1,000,000	610,000
<input type="button" value="Add"/> <input type="button" value="Edit"/> <input type="button" value="Delete"/>					
Name	Key Store Size	Crypto Core Capacity	SSL Core Contexts	Instance Name	
Part-3	2000	8	10000		
Part-4	200	2	10000		
Partition-1234	100	4	20000		
Partition-12345	300	4	20000		
Partition-5	300	8	100000		
Part-6	200	8	200000		
Part-1	100	2	10000	NSVPX-1-10.217.202.35	
Part-2	2000	4	20000	NSVPX-2-10.217.202.36	

Provision a new instance or modify an existing instance and assign a partition

September 12, 2024

After creating the partitions, you must assign them to instances.

Important:

- You can attach only one FIPS partition to an instance.
- An instance with a FIPS partition can be assigned only one CPU core.

Provision a new instance or modify an existing instance

1. On the Configuration tab, navigate to **NetScaler > Instances**, and add or modify an instance.
2. Select **Enable FIPS**, and from the **Partitions** list, select a partition to attach to this instance.

You can verify that the partition is attached to an instance by using either the GUI or the CLI.

In the GUI, navigate to **System > HSM Administration > Partitions**. The instance name attached to the partition is displayed.

To unassign a FIPS partition, navigate to **NetScaler > Instances**. Edit the instance and clear the **Enable FIPS** check box.

In the CLI, at the command prompt, type the following commands:

```
1 show fips
2
3 FIPS Card is not configured
4 Done
```

If you see the following output, see the troubleshooting section for debugging.

ERROR: Operation not permitted - no FIPS card present in the system

Note

When a partition is detached from any of the existing VPX instances, the data on the partition is cleared. As a result, any current configuration (for example FIPS keys) is lost. After a partition is detached or reattached to a new or previously bound VPX instance, it must be initialized as per the instructions in [Configure the HSM](#) before you can use the partition for any secure connections.

During this time (after the partition is detached or reattached), the corresponding VPX instance can be accessed through the GUI using HTTP and through the CLI using SSH.

Configure the HSM for an instance on an SDX 14030/14060/14080 FIPS appliance

September 12, 2024

First check the state of your FIPS card to verify that the driver loaded correctly, and then initialize the card.

At the command prompt, type:

```
1 show fips
2
3 FIPS Card is not configured
4
5 Done
```

If the driver is not loaded correctly, the message “ERROR: Operation not permitted - no FIPS card present in the system” appears.

Initialize the FIPS card

Important:

Verify that the `/nsconfig/fips` directory has successfully been created on the appliance.

Do not save the configuration before you restart the appliance for the third time.

Perform the following steps to initialize the FIPS card:

1. Reset the FIPS card (`reset fips`).
2. Restart the appliance (`reboot`).
3. Set the security officer password for partitions 0 and 1, and the user password for partition (`set fips -initHSM Level-2 <soPassword> <oldsoPassword> <userPassword> -hsmLabel NSFIPS`).

Note: The set or reset command takes more than 60 seconds to run.

4. Save the configuration (`saveconfig`).
5. Verify that the password encrypted key for the main partition (`master_pek.key`) has been created in the `/nsconfig/fips/` directory.

- Restart the appliance (`reboot`).
- Verify that the FIPS card is UP (`show fips`).

Initialize the FIPS card by using the CLI

At the command prompt, type the following commands:

```
1 reset fips
2
3 reboot
4
5 set fips -initHSM Level-2 <soPassword> <oldsoPassword> <userPassword> -
   hsmLabel <string>
```

Note: The following message appears when you run the `set fips` command:

```
1 This command will erase all data on the FIPS card. You must save the
   configuration (saveconfig) after executing this command. [Note: On
   MPX/SDX 14xxx FIPS platform, the FIPS security is at Level-3 by
   default, and the -initHSM Level-2 option is internally converted to
   Level-3] Do you want to continue?(Y/N)y
2
3 saveconfig
4
5 reboot
6
7 show fips
```

Example:

```
1 reset fips
2
3 Done
4
5 reboot
6
7 set fips -initHSM Level-2 so12345 so12345 user123 -hsmLabel NSFIPS
8
9 This command will erase all data on the FIPS card. You must save the
   configuration (saveconfig) after executing this command. [Note: On
   MPX/SDX 14xxx FIPS platform, the FIPS security is at Level-3 by
   default, and the -initHSM Level-2 option is internally converted to
   Level-3] Do you want to continue?(Y/N)y
10
11 Done
12
13 saveconfig
14
15 Done
16
```

```
17 reboot
18
19 show fips
20
21     FIPS HSM Info:
22     HSM Label : NSFIPS
23     Initialization : FIPS-140-2 Level-2
24     HSM Serial Number : 3.0G1532-ICM000228
25     HSM State : 2
26     HSM Model : NITROX-III CNN35XX-NFBE
27     Hardware Version : 0.0-G
28     Firmware Version : 1.0
29     Firmware Build : NFBE-FW-1.0-48
30     Max FIPS Key Memory : 1000
31     Free FIPS Key Memory : 1000
32     Total SRAM Memory : 557396
33     Free SRAM Memory : 238088
34     Total Crypto Cores : 4
35     Enabled Crypto Cores : 4
36 Done
```

Create a FIPS key for an instance on an SDX 14030/14060/14080 FIPS appliance

September 12, 2024

You can create a FIPS key on your instance or import an existing FIPS key into the instance. An SDX 14030/14060/14080 FIPS appliance supports only 2048-bit and 3072-bit keys and an exponent value of F4. For PEM keys, an exponent is not required. Verify that the FIPS key is created correctly. Create a certificate signing request and a server certificate. Finally, add the certificate-key pair to your instance.

Note:

1024-bit and 4096-bit keys and an exponent value of 3 are not supported.

Create a FIPS key by using the CLI

At the command prompt, type:

```
1 create ssl fipsKey <fipsKeyName> -keytype ( RSA | ECDSA ) [-exponent (3
    | F4 )] [-modulus <positive_integer>] [-curve ( P_256 | P_384 )]
```

Example:

```

1 create fipsKey f1 -keytype RSA -modulus 2048 -exponent F4
2
3 Done
4
5 show ssl fipskey ddvws
6
7 FIPS Key Name: f1 Key Type: RSA Modulus: 2048 Public Exponent: F4 (
  Hex: 0x10001)
8
9 Done

```

Import a FIPS key by using the CLI

At the command prompt, type:

```

1 import ssl fipsKey <fipsKeyName> -key <string> [-inform <inform>] [-
  wrapKeyName <string>] [-iv<string>] [-exponent F4 ]

```

Example:

```

1 import fipskey Key-FIPS-2 -key Key-FIPS-2.key -inform SIM -exponent F4
2 Done
3 import fipskey Key-FIPS-2 -key Key-FIPS-2.key -inform PEM
4 Done

```

Verify that the FIPS key is created or imported correctly by running the **show fipskey** command.

```

1 show fipskey
2 1) FIPS Key Name: Key-FIPS-2
3 Done

```

Create a certificate signing request by using the CLI

At the command prompt, type:

```

1 create ssl certReq <reqFile> (-keyFile <input_filename> | -fipsKeyName
  <string>) [-keyform ( DER | PEM ) {
2   -PEMPassPhrase }
3 ] -countryName <string> -stateName <string> -organizationName<string>
  [-organizationUnitName <string>] [-localityName <string>] [-
  commonName <string>] [-emailAddress <string>] {
4   -challengePassword }
5   [-companyName <string>] [-digestMethod ( SHA1 | SHA256 )]

```

Example:

```

1 create certreq f1.req - fipsKeyName f1 -countryName US -stateName CA -
  organizationName Citrix -companyName Citrix -commonName ctx -
  emailAddress test@example.com`

```

```
2 ` Done
```

Create a server certificate by using the CLI

At the command prompt, type:

```
1 create ssl cert <certFile> <reqFile> <certType> [-keyFile <
  input_filename>] [-keyform ( DER | PEM ) {
2 -PEMPassPhrase }
3 ] [-days <positive_integer>] [-certForm ( DER | PEM )] [-CAcert <
  input_filename>] [-CAcertForm ( DER | PEM )] [-CAkey <
  input_filename>] [-CAkeyForm ( DER | PEM )] [-CAserial <
  output_filename>]
```

Example:

```
1 create cert f1.cert f1.req SRVR_CERT -CAcert ns-root.cert -CAkey ns-
  root.key -CAserial ns-root.srl -days 1000
2 Done
```

The preceding example creates a server certificate using a local root CA on the appliance.

Add a certificate-key pair by using the CLI

At the command prompt, type:

```
1 add ssl certKey <certkeyName> (-cert <string> [-password]) [-key <
  string> | -fipsKey <string> | -hsmKey <string>] [-inform <inform>]
  [-expiryMonitor ( ENABLED | DISABLED ) [-notificationPeriod <
  positive_integer>]] [-bundle ( YES | NO )]
```

Example:

```
1 add certkey cert1 -cert f1.cert -fipsKey f1
2 Done
```

After creating the FIPS key and server certificate, you can add the generic SSL configuration. Enable the features that are required for your deployment. Add servers, services, and SSL virtual servers. Bind the certificate-key pair and the service to the SSL virtual server, and save the configuration.

```
1 enable ns feature SSL LB
2 Done
3 add server s1 10.217.2.5
4 Done
5 add service sr1 s1 HTTP 80
6 Done
7 add lb vserver v1 SSL 10.217.2.172 443
8 Done
```

```
9 bind ssl vserver v1 -certkeyName cert1
10 Done
11 bind lb vserver v1 sr1
12 Done
13 saveconfig
14 Done
```

For information about configuring secure HTTPS and secure RPC, click [here](#).

Upgrade the FIPS HSM firmware on a VPX instance

September 12, 2024


Note

This upgrade applies to the FIPS card on the SDX 14000 appliance.

FIPS HSM firmware updates are released from time to time. Download the latest firmware from the NetScaler download page and upload it to the appliance. The upgrade process might take up to 10 minutes to complete. The instance is restarted after the upgrade.

Upgrade the FIPS HSM firmware

1. Navigate to **System > HSM Administration > Firmware Images**.
2. Select **Upload**.
3. Navigate to the folder that contains the firmware image and select the file.
4. Navigate to **System > HSM Administration**, and select **Upgrade Firmware**.
5. Select the firmware image to upgrade to, and click **OK**.

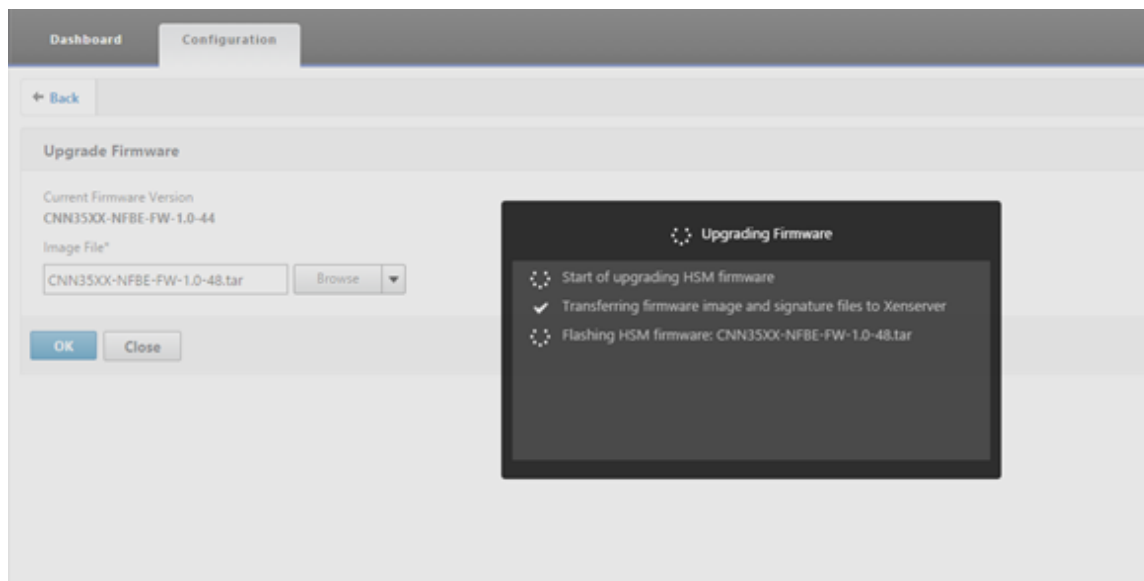

Support for Thales Luna Network hardware security module

December 13, 2024

A non-FIPS NetScaler appliance stores the server's private key on the hard disk. On a FIPS appliance, the key is stored in a cryptographic module known as a hardware security module (HSM). Storing a key in the HSM protects it from physical and software attacks. In addition, the keys are encrypted with special FIPS approved ciphers.

Only the NetScaler MPX and NetScaler SDX 14000 FIPS appliances support a FIPS card. Support for FIPS card is not available on other NetScaler MPX/NetScaler SDX appliances, or on NetScaler VPX. This limitation is addressed by supporting a Thales Luna network HSM on all NetScaler VPX, NetScaler MPX, NetScaler SDX appliances, and NetScaler MPX/NetScaler VPX FIPS certified platforms except the NetScaler MPX and NetScaler SDX 14000 FIPS appliances.

Note

Support for the appliances listed in [Support for Intel Coletto and Intel Lewisburg SSL chip-based platforms](#) is available in release 13.1 build 33.x and later.

A Thales Luna network HSM is designed to protect critical cryptographic keys and to accelerate sensitive cryptographic operations across a wide range of security applications.

Supported versions matrix

NetScaler Version	Software Appliance		
	Version	Firmware Version	Client Version
11.1, 12.0, 12.1	5.2.3-1	6.2.1	6.0.0
11.1, 12.0, 12.1	6.2.2-5	6.10.9	6.2.2
13.0	7.2.0-220	7.0.3	7.2.2 (7.2.0-220)
13.1	7.2.0-220	7.0.3	10.3.0
14.1	7.2.0-220	7.0.3	10.3.0

Prerequisites

November 15, 2024

Before you can use a Thales Luna network HSM with a NetScaler, make sure that the following prerequisites are met:

- A Thales Luna network HSM is installed in the network, ready to use, and accessible to the NetScaler. That is, the NSIP address or the SNIP address is added as an authorized client on the HSM.
- Licenses are available to support the required number of partitions on the HSM.
- The Thales Luna network HSM and the NetScaler can initiate connections with each other through port 1792.
- You are using NetScaler release 11.1 or later.
- The NetScaler appliance does not contain a FIPS card.

Important

Thales Luna network HSMs are not supported on the NetScaler MPX 14000 FIPS and NetScaler SDX 14000 FIPS appliances.

Configure a Thales Luna client on the ADC

September 12, 2024

After you have configured the Thales Luna HSM and created the required partitions, you must create clients and assign them to partitions. Begin by configuring the Thales Luna clients on the NetScaler

and setting up the network trust links (NTLs) between the Thales Luna clients and the Thales Luna HSM. A sample configuration is given in the [Appendix](#).

Note

If you upgrade to software version 14.1, you must install the Thales Luna client version 10.3.0 and perform the following steps.

1. Change the directory to `/var/safenet` and install the Thales Luna client. At the shell prompt, type:

```
1 cd /var/safenet
```

To install Thales Luna client version 6.0.0, type:

```
1 install_client.sh -v 600
```

To install Thales Luna client version 6.2.2, type:

```
1 install_client.sh -v 622
```

To install Thales Luna client version 7.2.2, type:

```
1 install_client.sh -v 722
```

To install Thales Luna client version 10.3.0, type:

```
1 install_client.sh -v 1030
```

2. Configure the NTLs between Thales Luna client (ADC) and HSM.

After the `/var/safenet/` directory is created, perform the following tasks on the ADC.

- a) Change the directory to `/var/safenet/config/` and run the `safenet_config` script. At the shell prompt, type:

```
1 cd /var/safenet/config
2
3 sh safenet_config
```

This script copies the “Chrystoki.conf” file into the `/etc/` directory. It also generates a symbolic link `libCryptoki2_64.so` in the `/usr/lib/` directory.

- b) Create and transfer a certificate and key between the ADC and the Thales Luna HSM.

To communicate securely, the ADC and the HSM must exchange certificates. Create a certificate and key on the ADC and then transfer it to the HSM. Copy the HSM certificate to the ADC.

- i) Change directory to `/var/safenet/safenet/lunaclient/bin`.

- ii) Create a certificate on the ADC. At the shell prompt, type:

```
1 ./vtl createCert -n <ip address of NetScaler>
```

This command also adds the certificate and key path to the “/etc/Chrystoki.conf”file.

iii) Copy this certificate to the HSM. At the shell prompt, type:

```
1 scp /var/safenet/safenet/lunaclient/cert/client/<ip address of NS
>.pem <LunaSA_HSM account>@<IP address of Luna SA>
```

iv) Copy the HSM certificate to the NetScaler. At the shell prompt, type:

```
1 scp <HSM account>@<HSM IP>:server.pem /var/safenet/safenet/
lunaclient/server_<HSM ip>.pem
```

3. Register the NetScaler as a client and assign it a partition on the Thales Luna HSM.

Log on to the HSM and create a client. Enter the NSIP as the client IP. This address must be the IP address of the ADC from which you transferred the certificate to the HSM. After the client is successfully registered, assign a partition to it. Run the following commands on the HSM.

a) Use SSH to connect to the Thales Luna HSM and enter the password.

b) Register the NetScaler on the Thales Luna HSM. The client is created on the HSM. The IP address is the client’s IP address. That is, the NSIP address.

At the prompt, type:

```
1 client register -client <client name> -ip <NetScaler ip>
```

c) Assign the client a partition from the partition list. To view the available partitions, type:

```
1 <luna_sh> partition list
```

Assign a partition from this list. Type:

```
1 <lunash:> client assignPartition -client <Client Name> -par <
Partition Name>
```

4. Register the HSM with its certificate on the NetScaler.

On the ADC, change the directory to “/var/safenet/safenet/lunaclient/bin”and, at the shell prompt, type:

```
1 ./vtl addserver -n <IP addr of HSM> -c /var/safenet/safenet/
lunaclient/server_<HSM_IP>.pem
```

To remove the HSM that is enrolled on the ADC, type:

```
1 ./vtl deleteServer -n <HSM IP> -c <cert path>
```

To list the HSM servers configured on the ADC, type:

```
1 ./vtl listServer
```

Note:

Before removing the HSM by using `vtl`, make sure all the keys for that HSM are manually removed from the appliance. HSM keys cannot be deleted after the HSM server is removed.

5. Verify the network trust links (NTLs) connectivity between the ADC and HSM. At the shell prompt, type:

```
1 ./vtl verify
```

If verification fails, review all the steps. Errors are due to an incorrect IP address in the client certificates.

6. Save the configuration.

The preceding steps update the “`/etc/Chrystoki.conf`” configuration file. This file is deleted when the ADC is started. Copy the configuration to the default configuration file, which is used when an ADC is restarted.

At the shell prompt, type:

```
1 root@ns# cp /etc/Chrystoki.conf /var/safenet/config/
```

Recommended practice is to run this command every time there is a change to the Thales Luna related configuration.

7. Start the Thales Luna gateway process.

At the shell prompt, type:

```
1 sh /var/safenet/gateway/start_safenet_gw
```

8. Configure automatic start of the gateway daemon at boot time.

Create the “`safenet_is_enrolled`” file, which indicates that Thales Luna HSM is configured on this ADC. Whenever the ADC restarts and this file is found, the gateway is automatically started.

At the shell prompt, type:

```
1 touch /var/safenet/safenet_is_enrolled
```

9. Restart the NetScaler appliance. At the command prompt, type:

```
1 reboot
```

Configure Thales Luna HSMs in a high availability setup on the ADC

September 12, 2024

Configuring Thales Luna HSMs in a high availability (HA) ensures uninterrupted service even if all, but one of the devices, are unavailable. In an HA setup, each HSM joins an HA group in active-active mode. Thales Luna HSMs in an HA setup provide load balancing of all the group members to increase performance and response time while providing the assurance of high availability service. For more information, contact Thales Luna Sales and Support.

Prerequisites:

- Minimum two Thales Luna HSM devices. All the devices in an HA group must have either PED (trusted path) authentication or password authentication. A combination of trusted path authentication and password authentication in an HA group is not supported.
- Partitions on each HSM device must have the same password even if the label (name) is different.
- All partitions in HA must be assigned to the client (NetScaler appliance).

After configuring a Thales Luna client on the ADC as described in [Configure a Thales Luna client on the ADC](#), perform the following steps to configure Thales Luna HSMs in HA:

1. On the NetScaler shell prompt, launch `lunacm (/usr/safenet/lunaclient/bin)`

Example:

```
1 root@ns# cd /var/safenet/safenet/lunaclient/bin/  
2  
3 root@ns# ./lunacm
```

2. Identify the slot IDs of the partitions. To list the available slots (partitions), type:

```
1 lunacm:> slot list
```

Example:

```
1 Slot Id -> 0  
2 HSM Label -> trinity-p1  
3 HSM Serial Number -> 481681014  
4 HSM Model -> LunaSA 6.2.1  
5 HSM Firmware Version -> 6.10.9  
6 HSM Configuration -> Luna SA Slot (PED) Signing With  
Cloning Mode  
7 HSM Status -> OK  
8  
9 Slot Id -> 1  
10 HSM Label -> trinity-p2  
11 HSM Serial Number -> 481681018  
12 HSM Model -> LunaSA 6.2.1  
13 HSM Firmware Version -> 6.10.9  
14 HSM Configuration -> Luna SA Slot (PED) Signing With  
Cloning Mode  
15 HSM Status -> OK  
16
```

```

17 Slot Id -> 2
18 HSM Label -> neo-p1
19 HSM Serial Number -> 487298014
20 HSM Model -> LunaSA 6.2.1
21 HSM Firmware Version -> 6.10.9
22 HSM Configuration -> Luna SA Slot (PED) Signing With
    Cloning Mode
23 HSM Status -> OK
24
25 Slot Id -> 3
26 HSM Label -> neo-p2
27 HSM Serial Number -> 487298018
28 HSM Model -> LunaSA 6.2.1
29 HSM Firmware Version -> 6.10.9
30 HSM Configuration -> Luna SA Slot (PED) Signing With
    Cloning Mode
31 HSM Status -> OK
32
33 Slot Id -> 7
34 HSM Label -> hsmha
35 HSM Serial Number -> 1481681014
36 HSM Model -> LunaVirtual
37 HSM Firmware Version -> 6.10.9
38 HSM Configuration -> Luna Virtual HSM (PED) Signing With
    Cloning Mode
39 HSM Status -> N/A - HA Group
40
41 Slot Id -> 8
42 HSM Label -> newha
43 HSM Serial Number -> 1481681018
44 HSM Model -> LunaVirtual
45 HSM Firmware Version -> 6.10.9
46 HSM Configuration -> Luna Virtual HSM (PED) Signing With
    Cloning Mode
47 HSM Status -> N/A - HA Group
48
49 Current Slot Id: 0

```

3. Create the HA group. The first partition is called the primary partition. You can add more than one secondary partitions.

```

1 lunacm:> hagroup createGroup -slot <slot number of primary
    partition> -label <group name> -password <partition password >
2
3 lunacm:> hagroup createGroup -slot 1 -label gp12 -password *****

```

4. Add the secondary members (HSM partitions). Repeat this step for all partitions to be added to the HA group.

```

1 lunacm:> hagroup addMember -slot <slot number of secondary
    partition to be added> -group <group name> -password <partition
    password>

```

Code:

```
1 lunacm:> hgroup addMember -slot 2 -group gp12 -password *****
```

5. Enable HA only mode.

```
1 lunacm:> hgroup HAOnly -enable
```

6. Enable active recovery mode.

```
1 lunacm:.>hgroup recoveryMode -mode active
```

7. Set auto recovery interval time (in seconds). Default is 60 seconds.

```
1 lunacm:.>hgroup interval -interval <value in seconds>
```

Example:

```
1 lunacm:.>hgroup interval -interval 120
```

8. Set recovery retry count. A value of -1 allows an infinite number of retries.

```
1 lunacm:> hgroup retry -count <xxx>
```

Example:

```
1 lunacm:> hgroup retry -count 2
```

9. Copy the configuration from `Chrystoki.conf` to the SafeNet configuration directory.

```
1 cp /etc/Chrystoki.conf /var/safenet/config/
```

10. Restart the ADC appliance.

```
1 reboot
```

After configuring Thales Luna HSM in HA, see [Other ADC configuration](#) for further configuration on the ADC.

Other ADC configuration

September 12, 2024

1. Generate a key on the HSM.

Use third party tools to create keys on the HSM.

2. Add an HSM key on the ADC.

Important! The # character is not supported in a key name. If the key name includes this character, the load key operation fails.

To add a Thales Luna HSM key by using the CLI:

At the command prompt, type:

```
1 add ssl hsmkey <KeyName> -hsmType SAFENET -serialNum <serial #> -password
```

where:

-keyName is the key created on the HSM by using third party tools.

-serialNum is the serial number of the partition on the HSM on which the keys are generated.

Note: For HSM in a high availability setup, use the serial number of the high availability group.

-password is the password of the partition on which the keys are present.

To add a Thales Luna HSM key by using the GUI:

Navigate to **Traffic Management > SSL > HSM** and add an HSM key. You must specify the HSM Type as **SAFENET**.

3. Add a certificate-key pair on the ADC. First use a third party tool to generate a certificate associated with the key. Then, copy the certificate to the /nsconfig/ssl/ directory on the ADC.

Note: The key must be an HSM key.

To add a certkey pair on the ADC by using the CLI:

At the command prompt, type:

```
1 add ssl certkey <CertkeyName> -cert <cert name> -hsmkey <KeyName>
```

To add a certkey pair on the ADC by using the GUI:

- a) Navigate to **Traffic Management > SSL**.
- b) In **Getting Started**, select **Install Certificate (HSM)** and create a certificate-key pair using an HSM key.

4. Create a virtual server and bind the certificate-key pair to this virtual server.

For information about creating a virtual server, click [SSL virtual server configuration](#).

For information about adding a certificate-key pair, click [Add or update a certificate-key pair](#).

For information about binding a certificate-key pair to an SSL virtual server, click [Bind the certificate-key pair to the SSL virtual server](#).

NetScaler appliances in a high availability setup

September 12, 2024

You can configure a high availability (HA) setup on the NetScaler appliances with a Thales Luna HSM configuration in either of the following two ways:

- First, configure a Thales Luna HSM on the two nodes, using the same HSM and partition. Then create an HA pair. Finally, add the NetScaler configuration, such as keys, certificate-key pairs, and virtual servers, on the primary node.
- If a Thales Luna HSM is already configured on one node with the NetScaler configuration, add a similar configuration on the other node. Copy “/var/safenet/sfgw_ident_file” from the first node to the other and restart the safenet_gw binary. After the gateway is up and running, add the nodes in an HA setup.

Limitations

September 12, 2024

1. For any changes to the HSM-related configuration in an existing setup, such as adding or removing an HSM, or creating an HA setup, copy ‘/etc/Chrystoki.conf’ to ‘/var/safenet/config’.
2. After adding, removing, or restarting an HSM, you must restart the ‘/var/safenet/gateway/safenet_gw’ binary. If you don’t restart the gateway binary, the HSM will not serve any traffic after it is added back or after it restarts.
3. To reboot or stop the current ‘/var/safenet/gateway/safenet_gw’ binary, use

```
1 kill -SIGTERM <PID>
2 kill -SIGINT <PID>
```

Important! Do not use `kill -9 <PID>` or `kill -6 <PID>`

4. Before removing an existing HSM from the ADC, remove, from the ADC, all the keys and certificate-key pairs that are associated with that HSM. You can’t delete these files from the ADC after you remove the HSM.
5. On a standalone NetScaler appliance, Thales Luna HSMs in HA are supported for Luna version 6.2 and later.
6. EXPORT ciphers are not supported.
7. Update certificate-key pair operation is not supported.

8. When you generate an HSM key on a third-party tool, the private and public key names must be the same. When you add the HSM key on the appliance, provide this name as the key name.
9. The # character is not supported in a key name and partition password.
10. Cluster and admin partitions are not supported.

Appendix

September 12, 2024

Sample commands with their outputs:

Run the script

```
1 root@ns# pwd
2 /var/safenet/config
3 root@ns# sh safenet_config
```

Create a certificate

```
1 root@ns# cd /var/safenet/safenet/lunaclient/bin
2 root@ns# ./vtl createcert -n 10.102.59.175
3 Private Key created and written to: /var/safenet/safenet/lunaclient
  /cert/client/10.102.59.175Key.pem
4 Certificate created and written to: /var/safenet/safenet/lunaclient
  /cert/client/10.102.59.175.pem
```

Copy the certificate to the HSM

```
1 root@ns# scp /var/safenet/safenet/lunaclient/cert/client
  /10.102.59.175.pem admin@10.217.2.7:
2 admin@10.217.2.7's password:
3
4 10.102.59.175.pem          100% 818      0.8KB/s   00:00
```

Copy the certificate and key from the HSM to the NetScaler appliance

```
1 root@ns# scp admin@10.217.2.7:server.pem /var/Thales Luna/safenet/
  lunaclient/server.2.7.pem
2 admin@10.217.2.7's password:
```

```
3
4  server.pem          100% 1164    1.1KB/s   00:01
```

Use SSH to connect to the Thales Luna HSM

```
1  ssh admin@10.217.2.7
2  Connecting to 10.217.2.7:22...
3  Connection established.
4  To escape to local shell, press 'Ctrl+Alt+]'.
5
6  Last login: Thu Jun 23 02:20:29 2016 from 10.252.243.11
7
8  Luna SA 5.2.3-1 Command Line Shell - Copyright (c) 2001-2014
   SafeNet, Inc. All rights reserved.
9
10 [Safenet1] lunash:>hsm login
11
12
13     Please enter the HSM Administrators'password:
14     > ****
15
16     'hsm login' successful.
17
18
19     Command Result : 0 (Success)
20 [Safenet1] lunash:>
```

Register the NetScaler on the Thales Luna HSM

```
1  [Safenet1] lunash:>client register -client ns175 -ip 10.102.59.175
2
3  'client register' successful.
4
5
6  Command Result : 0 (Success)
7  [Safenet1] lunash:>
```

Assign the client a partition from the partition list

```
1  [Safenet1] lunash:>client assignPartition -client ns175 -partition
   p2
2
3  'client assignPartition' successful.
4
5
6  Command Result : 0 (Success)
7  [Safenet1] lunash:>
```

Register the HSM with its certificate on the NetScaler

```
1 root@ns# ./vtl addserver -n 10.217.2.7 -c /var/safenet/safenet/
  lunaclient/server.2.7.pem
2
3 New server 10.217.2.7 successfully added to server list.
```

Verify the network trust links (NTLs) connectivity between the ADC and HSM

```
1 root@ns# ./vtl verify
2
3 The following Luna SA Slots/Partitions were found:
4
5 Slot          Serial #          Label
6 ----          -
7 0             477877010        p2
```

Save the configuration

```
1 root@ns# cp /etc/Chrystoki.conf /var/safenet/config/
```

Configure automatic start of the gateway daemon at boot time

```
1 touch /var/safenet/safenet_is_enrolled
```

FAQ

September 12, 2024

- **How do I check that the Thales Luna process is running?**

At the NetScaler shell prompt, type:

```
1 ps -aux | grep safenet_gw
```

- **How do I verify the network trust links (NTLs) connectivity between the ADC and HSM?**

After configuring Thales Luna, change the directory to “/var/safenet/safenet/lunaclient/bin” and type:

```
1 ./vtl verify
```

Support for Azure Key Vault

September 12, 2024

The NetScaler appliance integrates with external HSMs (SafeNet and Thales) for on-premises deployments. For cloud deployments, the ADC appliance integrates with Azure Key Vault. The appliance stores its private keys in the Key Vault for ease of management and security of the private key in the public cloud domain. You no longer have to store and manage keys in different locations for ADC appliances deployed across multiple data centers and cloud providers.

Using ADC with the Azure Key Vault Premium pricing tier, which provided HSM backed keys, provides FIPS 140-2 level 2 compliance.

Azure Key Vault is a standard offering from Microsoft. For more information about Azure Key Vault, see the Microsoft Azure documentation.


Note:

The NetScaler integration with Azure Key Vault is supported with the TLS 1.3 protocol.


Architecture overview

Azure Key Vault is a service for storing secrets securely in the Azure cloud. By storing your keys in the Azure Key Vault, you reduce the chances of keys being stolen. Once the Key Vault is set up, you can store your keys in it. Configure virtual servers on the ADC appliance to perform private key operations in the Key Vault. The ADC appliance accesses the key for each SSL handshake.

The following diagram illustrates the process to get an access token from the Azure Active Directory after authentication. This token is used with REST API calls for crypto operations using private keys.

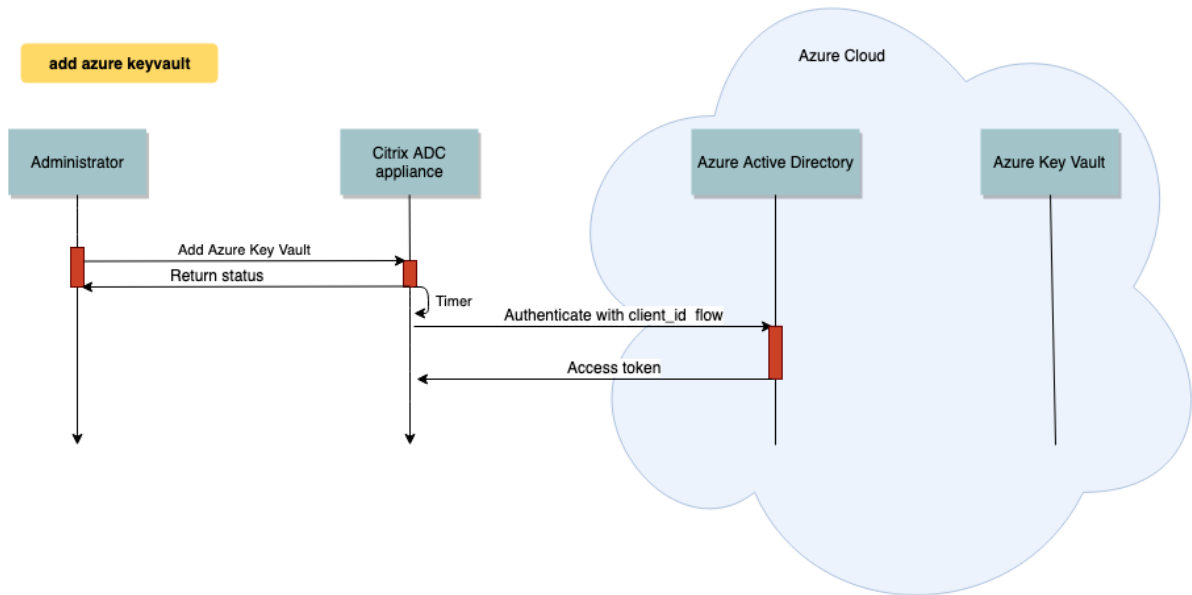

The following diagram shows a typical RSA handshake. The client key exchange (CKE) message that is encrypted using the public key is decrypted using the private key stored in the Key Vault.

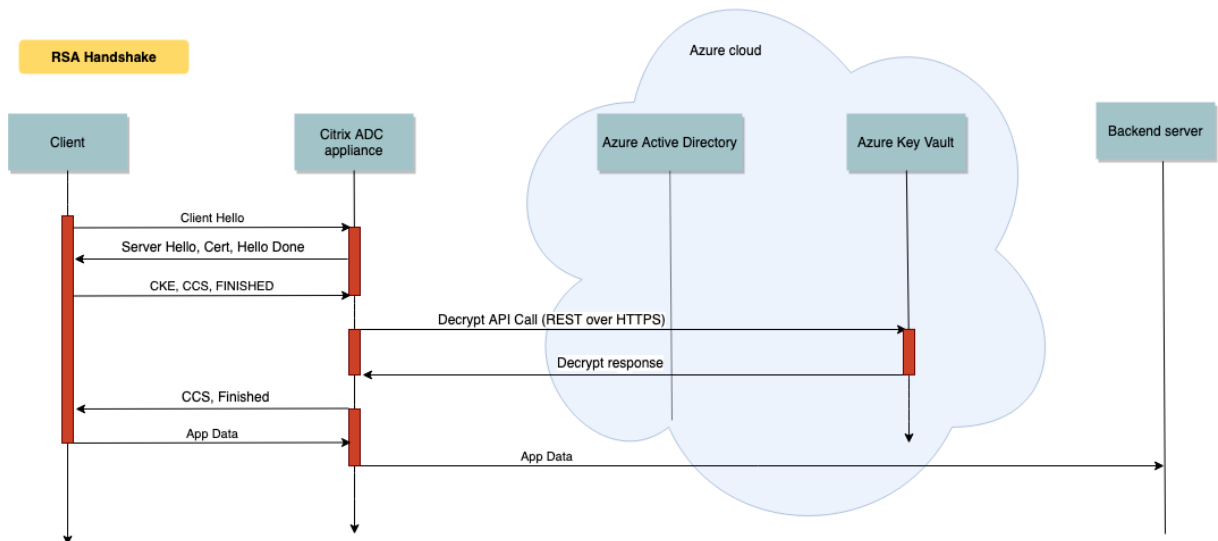

In an ECDHE handshake, the server key exchange (SKE) message sent by the NetScaler appliance is signed by using the private key stored in the Key Vault.

Prerequisites

1. You must have an Azure subscription.


2. (Optional) Install Azure CLI on a Linux machine. For instructions, see the Azure documentation <https://docs.microsoft.com/en-us/cli/azure/install-azure-cli-apt?view=azure-cli-latest>.
3. Complete the configuration on the Azure portal before configuring entities on the ADC appliance.

Configure the ADC Azure Key Vault integration

First perform the configuration on the Azure portal followed by the configuration on the ADC appliance.

Perform the following steps on the Azure portal

The following flowchart shows the high-level flow for configuration required on the Azure portal.

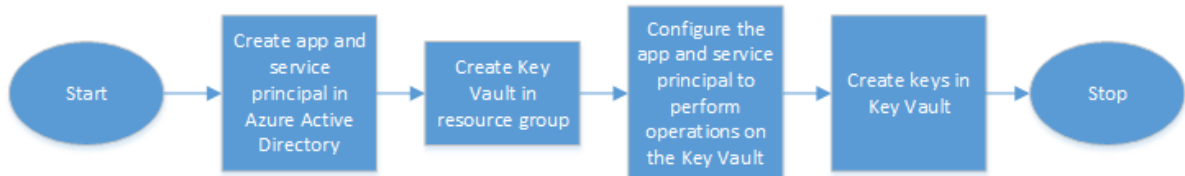


1. Create app and service principal in Azure Active Directory.
2. Create Key Vault in a resource group.
3. Configure the app and service principal to perform sign and decrypt operations on the Key Vault.
4. Create keys in the Key Vault using one of the following ways:
 - a) By importing a key file.
 - b) By generating a certificate.

For information about the commands to configure the preceding steps, see the Azure documentation at <https://docs.microsoft.com/en-us/azure/active-directory/develop/app-objects-and-service-principals>.

Perform the following steps on the ADC appliance

The following flowchart shows the high-level flow for configuration required on the ADC appliance.

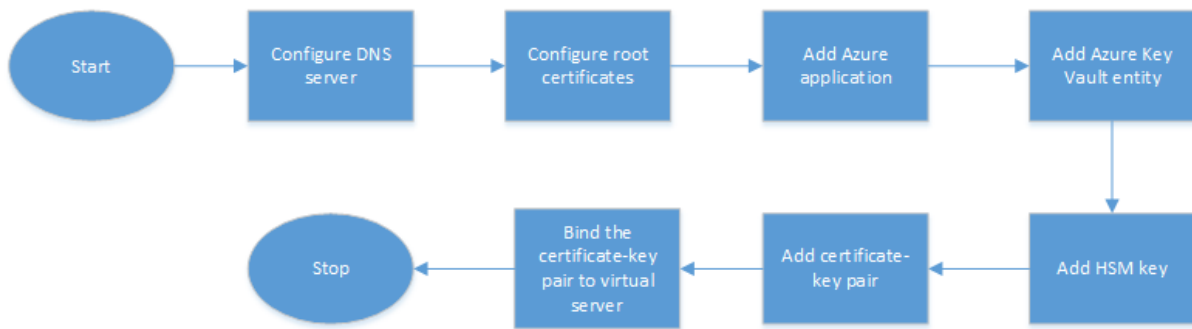

1. Configure a DNS server.
2. Configure root certificates to verify the certificates presented by Azure.
3. Create an Azure application.
4. Create an Azure Key Vault entity.
5. Create an HSM key.
6. Create a certificate-key pair.
7. Bind the certificate-key pair to a virtual server.

Configure a DNS server A DNS server is required for the name resolution of Key Vault host and Azure Active Directory end point.

To configure a DNS server by using the CLI

At the command prompt, type:

```
1 add dns nameserver <IP address>
```

Example:

```
1 add dns nameserver 192.0.2.150
```

To configure a DNS server by using the GUI

1. Navigate to **Traffic Management > DNS > Name Servers**. Click **Add**.
2. Enter values for the following parameters:
 - IP Address - IP address of an external name server or, if the Local parameter is set, IP address of a local DNS server (LDNS).
 - Protocol - Protocol used by the name server. UDP_TCP is not valid if the name server is a DNS virtual server configured on the appliance.
3. Click **Create**.

Add and bind a root certificate Download the root certificates of the certificate presented by Azure Key Vault https://<vault_name>.vault.azure.net and Azure Active Directory (AAD) https://<aad_name>.aad.azure.net

[//login.microsoftonline.com](https://login.microsoftonline.com) and load it on the ADC appliance. These certificates are required to validate the certificate presented by Azure Key Vault and AAD. Bind one or more certificates to the CA certificate group `ns_callout_certs`.

To add a root certificate by using the CLI

At the command prompt, type:

```
1 add ssl certkey <certkeyname> -cert <certname>
2 bind ssl caCertGroup <caCertGroupName> <certkeyName>
```


Example:

In the following example, the root certificate presented by Azure Key Vault and AAD is the same.

```
1 add ssl certKey rootcert -cert RootCyberTrustRoot.crt
2 bind ssl cacertGroup ns_callout_certs rootcert
```

To add a root certificate by using the GUI

1. Navigate to **Traffic Management > SSL > Certificates > CA Certificates**.
2. Enter values for the following parameters:
 - Certificate-key pair name
 - Certificate file name

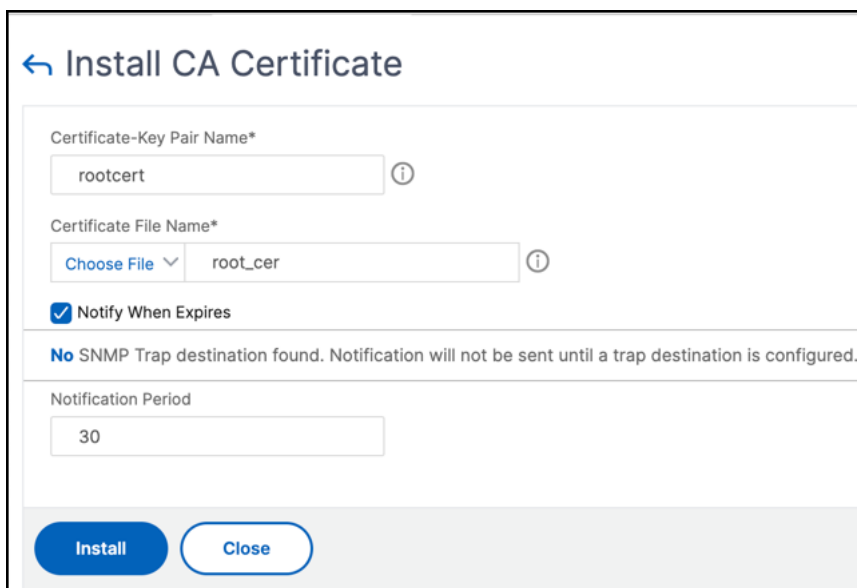

3. Click **Install**.
4. Navigate to **Traffic Management > SSL > CA Certificates Group**.
5. Select `ns_callout_certs` and click **Show Bindings**.
6. Click **Bind**.

7. Select the CA certificate created earlier and click **Select**.
8. Click **Bind**, and then click **Close**.

Configure an Azure application

The Azure application entity contains the credentials required to authenticate to Azure Active Directory and obtain the access token. That is, to get authorization access to Key Vault resources and APIs, add the Azure Application ID, secret (password) and tenant ID on the ADC appliance.

When configuring the Azure Application entity using the CLI, you must enter the password. If you use the GUI, the Azure application entity contains the credentials required to authenticate to Azure Active Directory and obtain the access token.

To configure an Azure application by using the CLI

Use the parameter, `vaultResource`, in the `add azure application` command to get the domain of the resource group before the access token is granted to the application. This parameter is added because the domain name might be different for different regions. For example, the domain might be `vault.azure.net` or `vault.usgov.net`.

At the command prompt, type:

```
1 add azure application <name> -clientID <string> -clientSecret -tenantID
  <string> -vaultResource <string> [-tokenEndpoint <URL>]
2 show azure application
```

Example:

```
1 add azure application app10 -clientid 12345t23aaa5 -clientsecret
  csHz0oEzmuY= -vaultResource example.vault.azure.net -tenantID 33583
  ee9ca5b
2 Done
3 > sh azure application app10
4 1) Name: app10 ClientID: 12345t23aaa5
5 TokenEndpoint: "https://login.microsoftonline.com/33583ee9ca5b/"
6 TenantID: 33583ee9ca5b VaultResource: example.vault.azure.net
7 Done
```

To configure an Azure application by using the GUI

1. Navigate to **Traffic Management > SSL > Azure > Application**.
2. In the details pane, click **Add**.
3. Enter values for the following parameters:
 - Name –Name for the application object on the NetScaler appliance.
 - Client ID –Application ID that is generated when an application is created in Azure Active Directory using either the Azure CLI or the Azure portal (GUI).

- Client Secret –Password for the application configured in Azure Active Directory. The password is specified in the Azure CLI or generated in the Azure portal (GUI).
- Tenant ID –ID of the directory inside Azure Active Directory in which the application was created.
- Vault Resource - Vault resource for which access token is granted. Example `vault.azure.net`.
- Token End point –URL from where the access token can be obtained. If the token end point is not specified, the default value is `https://login.microsoftonline.com/<tenant id>`.

← Create Azure Application

Name*
app10

Client ID*
12345t23aaa5

Client Secret*
csHzOoEzmuY=

Tenant ID*
33583ee9ca5b

Vault Resource*
example.vault.azure.net

Token End Point
https://login.microsoftonline.com/

Create Close

Configure Azure Key Vault Create an Azure Key Vault object on the ADC appliance.

To configure Azure Key Vault by using the CLI

At the command prompt, type:

```
1 add azure keyVault <name> -azureVaultName <string> -azureApplication
2     <string>
3 show azure keyvault
```

Example:

```
1 add azure keyvault kv1 -azureapplication app10 -azurevaultName pctest.
  vault.azure.net
2 > sh azure keyVault
```

```

3 1) Name: kv1 AzureVaultName: pctest.vault.azure.net
4   AzureApplication: app10 State: "Access token obtained"
5   Done

```

The following table lists the different values that the state of the Azure Key Vault can take along with a brief description about each state.

State	Description
Created	Initial state of the Key Vault object. Authentication has not been attempted.
Could not reach token end point	Indicates one of the following: DNS server not configured, issuer certificate not bound to a CA certificate group, or network issues.
Authorization failed	Incorrect application credentials.
Token parse error	Response from Azure Active Directory is not in the expected format.
Access token obtained	Successfully authenticated by Azure Active Directory.

To configure the Azure Key Vault by using the GUI

1. Navigate to **Traffic Management > SSL > Azure > Key Vault**.
2. Enter values for the following parameters:
 - Name - Name for the Key Vault.
 - Azure Key Vault Name - Name of the Key Vault configured in Azure cloud using either the Azure CLI or the Azure portal (GUI) with domain name.
 - Azure Application Name - Name of the Azure Application object created on the ADC appliance. The Azure Application object with this name is used for authentication with Azure Active Directory.

Create Azure KeyVault

Name*

Azure Vault Name

Azure Application
 ▼

Add HSM key Storing your private key in the HSM provides FIPS 140-2 level 2 compliance.

To add an HSM key by using the CLI

At the command prompt, type:

```

1 add ssl hsmKey <hsmKeyName> [-hsmType <hsmType>] [-key <string> |
2     -serialNum <string>] {
3     -password }
4     [-keystore <string>]
```

Example:

```

1 add ssl hsmKey h1 -keystore kv1 -key san15key -hsmType KEYVAULT
2
3
4 > sh ssl hsmKey h1
5     HSM Key Name: h1           Type: KEYVAULT
6     Key: san15key
7     Key store: kv1
8     State: " Created "
9 Done
```

The following table lists the different values that the state of an HSM key can take along with a brief description about each state.

State	Description
Created	The HSM key is added on the ADC appliance. A key operation is not yet attempted.
Access token unavailable	Access token not available when key operation was attempted.
Unauthorized	Configured Azure application does not have permission to perform the key operation.
Does not exist	The key does not exist in the Azure Key Vault.
Unreachable	The Key Vault host is not reachable on the network.
Marked down	The HSM key is marked DOWN on the ADC appliance due to threshold errors during key operation.
Key operations successful	Success response received from the Key Vault for key operation.
Key operations failed	Failure response received from Key Vault for key operation.
Key operation throttled	The key operation request is throttled by the Key Vault.

To add an HSM key by using the GUI

1. Navigate to **Traffic Management > SSL > HSM**.
2. Enter values for the following parameters.
 - HSM key name - Name of the key.
 - HSM type - Type of HSM.
 - Key store - Name of key store object representing HSM where the key is stored. For example, name of Key Vault object or Azure Key Vault authentication object. Applies only to [KEYVAULT](#) type HSM.

← Install HSM Key

HSM Key Name*

HSM Type*

HSM Key File Name

Serial Number of the Safenet HSM

Password for the Partition on HSM

Key Store

3. Click **Add**

Add a certificate-key pair Add a certificate-key pair using the HSM key created earlier.

To add a certificate-key pair by using the CLI

At the command prompt, type:

```
1 add ssl certKey <certkeyName> (-cert <string> [-password]) -hsmKey <
  string>]
2 show ssl certkey
```

Example:

```
1 add ssl certKey serverrsa_2048 -cert /nsconfig/ssl/san_certs/san15.pem
  -hsmKey h1
2 > sh ssl certkey serverrsa_2048
3   Name: serverrsa_2048           Status: Valid,   Days to expiration
   :9483
4   Version: 3
5   Serial Number: F5CFF9EF1E246022
6   Signature Algorithm: sha256WithRSAEncryption
7   Issuer: C=in,0=citrix,CN=ca
8   Validity
9     Not Before: Mar 20 05:42:57 2015 GMT
10    Not After : Mar 12 05:42:57 2045 GMT
11    Certificate Type: "Server Certificate"
12    Subject: C=in,0=citrix
13    Public Key Algorithm: rsaEncryption
```




```

14     Public Key size: 2048
15     Ocspl Response Status: NONE
16     Done
  
```

To add a certificate-key pair by using the GUI

1. Navigate to **Traffic Management > SSL > Install Certificate (HSM)**.
2. Enter values for the following parameters:
 - Certificate-Key Pair Name
 - Certificate File Name
 - HSM Key

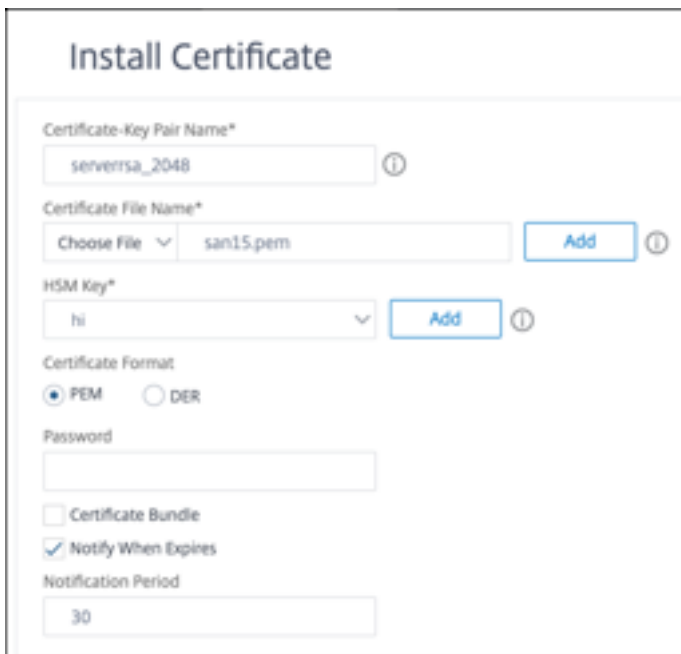

3. Click **Install**.

Bind the certificate-key pair to a virtual server The certificate used for processing SSL transactions must be bound to the virtual server that receives the SSL data.

To bind the SSL certificate-key pair to a virtual server by using the CLI

At the command prompt, type:

```

1 bind ssl vserver <vServerName> -certkeyName <certificate-KeyPairName>
2 show ssl vserver <vServerName>
  
```

Example:


```

1 bind ssl vserver v1 -certkeyName serverrsa_2048
2
  
```

```
3 sh ssl vserver v1
4
5     Advanced SSL configuration for VServer v1:
6     DH: DISABLED
7     DH Private-Key Exponent Size Limit: DISABLED     Ephemeral RSA:
8         ENABLED     Refresh Count: 0
9     Session Reuse: ENABLED     Timeout: 120 seconds
10    Cipher Redirect: DISABLED
11    ClearText Port: 0
12    Client Auth: DISABLED
13    SSL Redirect: DISABLED
14    Non FIPS Ciphers: DISABLED
15    SNI: DISABLED
16    OCSP Stapling: DISABLED
17    HSTS: DISABLED
18    HSTS IncludeSubDomains: NO
19    HSTS Max-Age: 0
20    HSTS Preload: NO
21    SSLv3: ENABLED  TLSv1.0: ENABLED  TLSv1.1: ENABLED  TLSv1.2:
22        ENABLED  TLSv1.3: DISABLED
23    Push Encryption Trigger: Always
24    Send Close-Notify: YES
25    Strict Sig-Digest Check: DISABLED
26    Zero RTT Early Data: DISABLED
27    DHE Key Exchange With PSK: NO
28    Tickets Per Authentication Context: 1
29
30    ECC Curve: P_256, P_384, P_224, P_521
31
32
33
34    1) Cipher Name: DEFAULT
35        Description: Default cipher list with encryption strength >= 128bit
36    Done
```

To bind an SSL certificate-key pair to a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and open an SSL virtual server. Click inside the Certificate section.

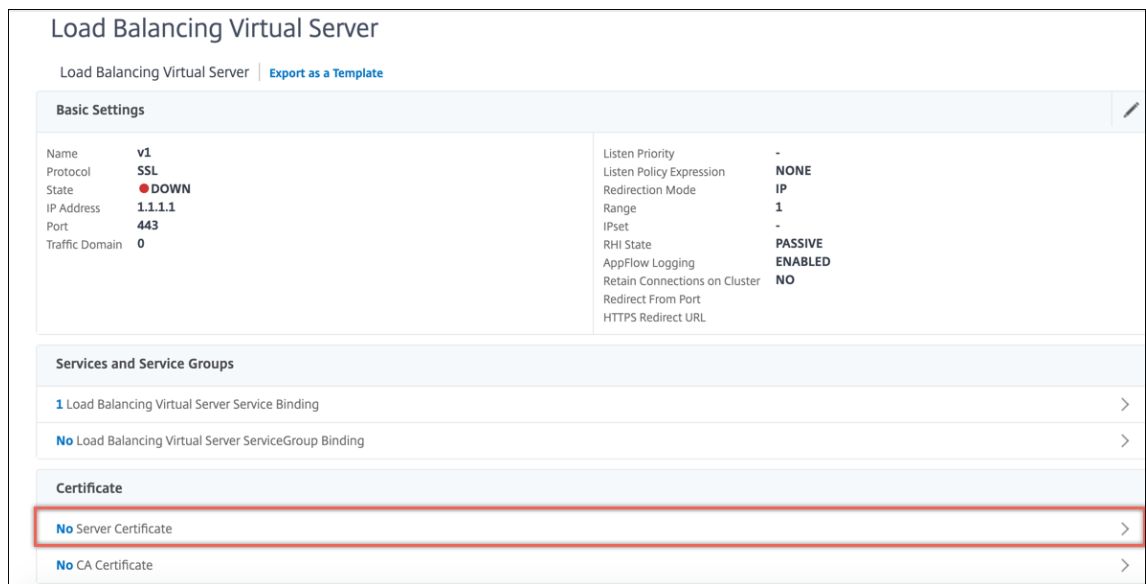

2. Click the arrow to select the certificate-key pair.
3. Select the certificate-key pair from the list.
4. Bind the certificate-key pair to the virtual server.

Limitations

- The number of concurrent calls to the Azure Key Vault for key operations is limited. Performance of the ADC appliance depends on the Key Vault limits. For more information see, [Microsoft Azure Key Vault documentation](#).
- EC keys are not supported.
- EDT and DTLS protocols are not supported.
- ADC appliances with Intel Coletto SSL chips are not supported.
- Clustering and admin partitions are not supported.
- You cannot update the Azure Application entity, the Azure Key Vault object, and the HSM certificate-key pair after you have added them to the ADC appliance.
- A certificate bundle with HSM keys is not supported.
- An error does not appear if the HSM key and certificate do not match. While adding a certificate-key pair, ensure that the HSM key and certificate match.
- You cannot bind an HSM key to a DTLS virtual server.
- You cannot sign OCSP requests using a certificate-key pair that is created using an HSM key.
- You cannot bind a certificate-key pair to an SSL service if the certificate-key pair is created using an HSM key.

FAQ

When integrated with Azure Key Vault, are private keys stored in the ADC appliance memory?

No, private keys are not be stored in ADC appliance memory. For each SSL transaction, the appliance sends a request to Key Vault.

Is the integration FIPS 140-2 level 2 compliant?

Yes, the integrated solution provides FIPS 140-2 Level 2 support.

Which key types are supported?

Only RSA key types are supported.

What key sizes are supported?

1024-bit, 2048-bit, and 4096-bit RSA keys are supported.

Which ciphers are supported?

All ciphers supported on the ADC appliance, including TLSv1.3 ciphers with ECDHE and SHA256 are supported.

Are transactions logged?

The ADC appliance logs each transaction it makes with the Key Vault. Details such as, time, vault IP address, port, success or failure of connection, and errors are logged.

The following is a sample SSL log output.

```
1 Apr 9 16:35:30 <local0.debug> 10.102.57.30 04/09/2019:16:35:30 GMT
  0-PPE-0 : default SSLLOG SSL_HANDSHAKE_SUCCESS 896 0 :
  Backend SPCBId 30894 - ServerIP 104.211.224.186 - ServerPort 443
  - ProtocolVersion TLSv1.2 - CipherSuite "ECDHE-RSA-AES256-GCM-
  SHA384 TLSv1.2 Non-Export 256-bit" - Session New -
  SERVER_AUTHENTICATED -SerialNumber "200005
  A75B04365827852D630000000005A75B" - SignatureAlgorithm "
  sha256WithRSAEncryption" - ValidFrom "Mar 17 03:28:42 2019 GMT"
  - ValidTo "Mar 17 03:28:42 2021 GMT" - HandshakeTime 40 ms
2 Apr 9 16:35:30 <local0.debug> 10.102.57.30 04/09/2019:16:35:30 GMT
  0-PPE-0 : default SSLLOG SSL_HANDSHAKE_ISSUENAME 897 0 :
  SPCBId 30894 - IssuerName " C=US,ST=Washington,L=Redmond,O=
```

```
Microsoft Corporation,OU=Microsoft IT,CN=Microsoft IT TLS CA 2"  
3 Apr 9 16:35:30 <local0.debug> 10.102.57.30 04/09/2019:16:35:30 GMT  
0-PPE-0 : default SSLLOG SSL_HANDSHAKE_SUBJECTNAME 898 0 :  
SPCBIId 30894 - SubjectName " CN=vault.azure.net"
```

NetScaler FIPS FAQ

September 13, 2024

General Overview

What is the Federal Information Processing Standard (FIPS)?

FIPS is a standard and guideline for federal computer systems that are developed by the National Institute of Standards and Technology (NIST) in accordance with the Federal Information Security Management Act (FISMA) and approved by the Secretary of Commerce. These standards and guidelines are developed when there are no acceptable industry standards or solutions for a particular government requirement. Although FIPS is developed for use by the federal government, many organizations and companies voluntarily use these standards.

The Federal Information Processing Standard (140-2, 140-3) specifies the security requirements that will be satisfied by a cryptographic module, providing four increasing, qualitative levels intended to cover a wide range of potential applications and environments. The areas covered, related to the secure design and implementation of a cryptographic module, include specification, ports and interfaces, roles, services, and authentication, finite state model, physical security, operational environment, cryptographic key management, electromagnetic interference/electromagnetic compatibility (EMI/EMC), self-tests, design assurance, and mitigation of other attacks.

For more information, see <https://www.nist.gov/standardsgov/compliance-faqs-federal-information-processing-standards-fips>.

What is the difference between compliant and validated?

A FIPS validated or certified solution is one that has undergone a thorough testing process conducted by one of a handful of independent laboratories to ensure that all pieces of the product meet FIPS requirements.

A FIPS compliant solution is one where likely only a portion of the product has been fully verified. In the case of the first two generations of NetScaler FIPS appliances, Citrix leveraged a Hardware Security Module that is fully validated as a way to provide the additional security requirements to meet

FIPS level compliance. In the current generation of appliances, NetScaler has worked on getting the specific components validated directly, resulting in an ADC that is now fully validated to meet FIPS requirements.

Form factor and series options

What are the current FIPS options for NetScaler?

Currently, NetScaler appliances are available in validated and compliant versions against FIPS 140-2. FIPS 140-3 validation is currently “Module In Process”(MIP) for 13.1 FIPS-based appliances. For more information on this process available here (search the page for NetScaler): <https://csrc.nist.gov/projects/cryptographic-module-validation-program/modules-in-process/modules-in-process-list>.

The following tables list the available options for FIPS 140-2 appliances:

FIPS category	Platform	Supported OS	CPU	Memory	Interfaces/Hypervisor
140-2/Level-2	MPX 8900 FIPS	12.1-FIPS (Cert #4043)	8-core	32 GB	4x10G SFP+; 6x10/100/100
140-3/Level-2		13.1-FIPS			(8x10G; 4x40G)
140-2/Level-2	MPX 15000-50G FIPS	12.1-FIPS (Cert #4043) 13.1-FIPS (MIP)	8-core	128 GB	4x 50G E QSFP 28 8x 10G SFP+ (16x10G, 2*40G)
140-3/Level-2	MPX 9100 FIPS	13.1-FIPS (MIP)/14.1- FIPS	10-Core	64 GB	8 x 25GE SFP28 (8x10G, 4x40G)
140-2/Level-1	VPX-FIPS	12.-FIPS (Cert. #4098)	n-Core	From 1 GB	VMware vSphere, Microsoft Hyper-V, Citrix XenServer, ASW, GCP, Azure, KVM, Oracle Virtual Box, OpenStack, Nutanix AHV

Notes:

12.1-FIPS is 140-2 - Validated on MPX 8900 FIPS, MPX 15000-50G FIPS

*13.1-FIPS is 140-3 - Module In Process

**MPX FIPS 9100 will only support from 13.1-FIPS and future 14.1-FIPS

MPX 14000-FIPS is not validated but a FIPS compliant platform.

See the [NetScaler ADC Product Matrix](#) for the updated list of platforms.

Which NetScaler appliances are FIPS validated?

The NetScaler MPX 8900 FIPS and MPX 15000-50G FIPS validated appliances ([Cert #4043](#)) have been tested by a third-party laboratory for the security requirements of FIPS 140-2 Level 2.

The NetScaler VPX FIPS appliance is validated for FIPS 140-2 Level 1 ([Cert. #3732](#)). The module is available as a software package that includes both the application software and the operating system. After purchasing the NetScaler VPX FIPS license, get the latest NetScaler VPX FIPS 12.1 image from the Citrix website <https://www.citrix.com/downloads/> and deploy it to a host with appropriate hardware.

More information about the FIPS 140-2 standard and validation program is available on the National Institute of Standards and Technology (NIST) and the Canadian Center for Cyber Security (CCCS) Cryptographic Module Validation Program (CMVP) website at <https://csrc.nist.gov/projects/cryptographic-module-validation-program>.

Why did NetScaler develop its own cryptographic modules for FIPS validation?

NetScaler decided to discontinue using third-party Hardware Security Modules in the FIPS ADC appliances to have deeper control over the overall architecture of the appliances. The benefits of this change come in the following areas:

- Instead of only being able to offer FIPS ADC appliances in hardware form, the purpose-built firmware is now also packaged and licensed as a virtual appliance and this offers customers more flexibility in how they deploy ADCs.
- There is no longer a dependency on a third-party company to provide the add-on hardware or the firmware that it runs. This ensures better availability of components.
- By architecting and developing all of the software in-house, NetScaler is able to overcome performance limitations that existed due to the communication with the add-on hardware components. The result for customers is being able to deploy FIPS appliances that perform better.

- The most significant benefit may be that NetScaler customers are now able to deploy FIPS Validated appliances as opposed to FIPS compliant appliances.

Is FIPS 140-3 level 2 more secure than FIPS 140-2 Level 3?

Any level 3 device provides stronger physical security. Level 2 satisfies the tamper evident physical security. The primary distinction between them is the physical security requirement.

Is NetScaler trading off security over performance by having MPX 9100 at Level 2?

No, we are not trading off security over performance. Providing an additional layer of physical security is not the only way to protect sensitive data. MPX 9100 FIPS leverages the latest version of 140-3 standards and processor technology with robust cryptographic capabilities. MPX 9100 FIPS provides a stronger alternative to HSM. In fact, the software-based key management optimizes the performance without compromising the security needs.

FIPS Encryption/Ciphers

Which ciphers are supported on NetScaler MPX 8900/15000-50G FIPS and VPX FIPS?

For information on supported ciphers, see <https://docs.netScaler.com/en-us/citrix-adc/downloads/cipher-support-on-netScaler-mpx-vpx-fips-certified-appliance.pdf>

What key sizes are supported in the VPX FIPS and MPX 8900/15000-50G FIPS series?

Customers can use key sizes of 2048 bits, 3072 bits, and 4096 bits, although only key sizes of 2048 bits and 3072 bits can be generated directly on the FIPS appliances with `ssl-keygen`.

What happens if I try to add non-compliant ciphers to my virtual servers that are using a certificate to enable FIPS encryption?

An error message appears because non-compliant ciphers are not supported on NetScaler.

Features and Functions

Does NetScaler FIPS include all the standard NetScaler functionality?

Yes. However, the following limitations apply:

- For NetScaler MPX FIPS, TACACS authentication is not supported on the MPX FIPS validated appliances. For more information, see [Limitation](#).
- For NetScaler VPX FIPS, TACACS authentication is not supported on the VPX FIPS validated appliance. For more information, see [VPX FIPS Limitations](#).

Upgrading NetScaler firmware

One of the most important aspects of running a NetScaler is ensuring that you keep the firmware up-to-date with a compatible version. The information in this section is intended to help you understand which firmware is compatible with the particular NetScaler FIPS appliance that you have so that you can select an appropriate firmware when upgrades are necessary.

How do I know which firmware is compatible with my NetScaler?

NetScaler appliances run either a general firmware or FIPS firmware depending on the specific model. The naming convention for firmware indicates whether it is a FIPS firmware by including FIPS in the name. Also, the naming convention always provides information on the version and the build numbers as well. The specific model of NetScaler determines which firmware type is used. Here are some naming examples:

- Example of naming of a general firmware, version 13.1, build 49.13:
 - NetScaler Release (Maintenance Phase) 13.1 Build 49.13
 - Citrix ADC Release (Maintenance Phase) 13.1 Build 49.13
- Example of naming of a FIPS firmware, version 13.1, build 37.159
 - NetScaler FIPS Release 13.1 Build 37.159
 - Citrix ADC FIPS Release 13.1 Build 37.159

NetScaler appliances can be upgraded to newer builds within a specific version. For example, upgrading from an older build of 12.1 FIPS to a newer build of 12.1 FIPS is supported. While it is also possible to move from a later build to an earlier build within a major version, or even move from a later version to an earlier version of compatible firmware, you must understand the risks and implications of doing so as certain features in newer versions might not be available in older versions.

The following table can be used as a guide in determining which major firmware versions are compatible based on the NetScaler model.

NetScaler Models	Firmware Type	Compatible Firmware
VPX FIPS, MPX8900 FIPS, MPX15000-50G FIPS	FIPS	12.1 FIPS or 13.1 FIPS
MPX9100 FIPS	FIPS	13.1 FIPS

For more information, see [MPX Hardware-Software Compatibility Matrix](#) and [SDX Hardware-Software Compatibility Matrix](#).

For more information about SDX Single Bundle Upgrade (including minimum 12.1 version requirements to upgrade to 13.0 and later), see [SDX Single bundle upgrade](#).

Contact Citrix Support for help with upgrading and unsupported software version.

Can I upgrade to a FIPS validated version firmware from a non-FIPS version of firmware?

No. FIPS validated firmware is a separate image. Software version upgrade from non-FIPS version to FIPS version is not supported. Also, the FIPS software version cannot be downgraded or upgraded to a non-FIPS software version. There is no option to “convert” between a FIPS and non-FIPS validated appliance through license or firmware changes. Any appliance that was not purchased as FIPS validated remains non-validated and must not be operated in a manner compliant with FIPS.

How do I upgrade firmware on my FIPS validated appliances?

The upgrade process is identical to that of the non-FIPS firmware appliances except that the FIPS-validated firmware is required (standard firmware cannot be used).

Can VPX FIPS be installed on NetScaler SDX or NetScaler SDX FIPS appliances?

No. VPX FIPS image is not supported on a NetScaler SDX or NetScaler SDX FIPS appliance.

Can we upgrade or downgrade VPX to VPX FIPS or vice versa?

No. VPX FIPS is a separate image and cannot be upgraded or downgraded to the VPX firmware. Also, we cannot upgrade or downgrade VPX to VPX FIPS firmware.

Firmware information and differences

Can the FIPS validated build be installed on the MPX series other than MPX 8900 series FIPS and MPX 15000-50G series FIPS?

No. FIPS validated build is only qualified to run on MPX 8900 series FIPS and MPX 15000-50G series FIPS appliances.

Can I deploy NetScaler FIPS appliances in a high-availability deployment?

Yes. For FIPS validated MPX and VPX appliances, the HA configuration steps are the same as for non-FIPS appliances.

Before getting started with HA configuration, for MPX 8900 FIPS series and MPX 15000-50G FIPS series, see [Configuration](#) and for VPX FIPS, see [VPX FIPS Configuration](#).

For the MPX/SDX 14000 series FIPS, see [Configure FIPS on appliances in an HA setup](#).

Can I deploy a NetScaler FIPS Cluster

Yes. Configuration steps for NetScaler VPX FIPS, NetScaler MPX 8900 FIPS, and MPX 15000-50G FIPS are the same as for non-FIPS appliances. For more information, see <https://docs.netScaler.com/en-us/citrix-adc/12-1/clustering.html>.

Will the NetScaler MPX 14000 FIPS commands work on NetScaler MPX 8900/15000-50G FIPS appliances?

No. The NetScaler MPX 14000 FIPS-specific commands will not work on the latest NetScaler MPX 8900/15000-50G appliances. For more information, see <https://docs.netScaler.com/en-us/citrix-adc/12-1/ssl/citrix-adc-mpx-fips-certified-appliance.html>.

Do VPX FIPS and MPX 8900/15000-50G series FIPS support Admin Partitions? Are there any differences from non-FIPS appliances?

Yes. The FIPS series support Admin Partitions.

Which NetScaler appliances require specific firmware, and why?

The NetScaler VPX FIPS and NetScaler MPX 8900/9100/15000-50G FIPS appliances use FIPS-validated firmware. These series meet specific design and build specifications to support the FIPS-validated

firmware to achieve FIPS validated status. In the case of the MPX FIPS appliances listed here, they must run the FIPS-validated firmware to achieve the FIPS-validated status as they do not use a Hardware Security Module as previous appliances had used.

All other appliances, including the MPX/SDX 14000 FIPS, use standard firmware.

Pooled Licensing

Is Pooled licensing supported on NetScaler MPX 8900/9100/15000-50G and NetScaler VPX FIPS appliances?

Yes. For NetScaler MPX FIPS, following the purchase of the Zero-capacity FIPS hardware model, the appliance bandwidth capacity can be configured.

For NetScaler VPX FIPS, the appliance needs a VPX FIPS instance license to be uploaded to NetScaler Console after which the instance capacity can be configured.

Can a common license pool be used for NetScaler FIPS and non-FIPS appliances?

Yes. A common bandwidth pool can be shared between FIPS and non-FIPS appliances.

For NetScaler MPX FIPS, a Zero-capacity FIPS hardware appliance is required.

For NetScaler VPX FIPS, the appliance needs a VPX FIPS instance license to be uploaded to NetScaler Console after which the instance capacity can be configured.

Contact your NetScaler Sales for detailed information around this topic.

Can an existing NetScaler FIPS appliance be transitioned from perpetual to pooled license?

Yes. NetScaler FIPS appliances can be migrated from perpetual to pooled licensing. See the following topics for details:

- [Upgrade a perpetual license in NetScaler VPX to NetScaler pooled capacity](#)
- [Upgrading a perpetual license in NetScaler MPX to NetScaler pooled capacity](#)

VPX FIPS

Which hypervisors are supported for NetScaler VPX FIPS?

NetScaler VPX FIPS is a software appliance with an overall security level of FIPS 140-2 Level 1. It runs as a virtual appliance, and was tested and found compliant on the following platforms with Intel CPU supporting RDRAND and RDSEED instruction sets:

Hypervisor: VMware ESXi, KVM, Microsoft Hyper-V, Citrix Hypervisor, Microsoft Azure, AWS, and GCP.

What are the prerequisites to run a NetScaler VPX FIPS appliance?

See the [Prerequisites](#).

How is NetScaler VPX FIPS packaged?

The FIPS module is available as a software package that includes both the application software and the operating system. After purchasing the NetScaler VPX FIPS license, get the latest NetScaler VPX FIPS image from the Citrix website <https://www.citrix.com/downloads/>.

Where can I find NetScaler FIPS documentation?

The following documents contain information about the supported NetScaler FIPS appliances:

FIPS Compliant Series

- [MPX 14000 FIPS appliances](#)
- [SDX 14000 FIPS appliances](#)

FIPS Validated Series

- [NetScaler VPX FIPS validated appliances](#)
- [NetScaler MPX 8900 FIPS and MPX 15000-50G FIPS validated appliances](#)

SDX FIPS (14000 family of appliances)

On a NetScaler SDX FIPS appliance, are all instances automatically FIPS compliant?

No. SDX 14000 FIPS is not fully FIPS compliant. Only the SVM is FIPS compliant. Running a VPX on top of the SDX 14000 FIPS will not make it FIPS Compliant.

Are there advantages to operating an instance in non-FIPS mode on a NetScaler SDX FIPS appliance?

Achieving FIPS encryption standards for specific traffic requires a more intensive encrypt/decrypt process to ensure that the keys are maintained at the correct level of security integrity. If an instance operates any of its virtual servers without leveraging the FIPS encryption process specifically, the SSL transactions per second that are achievable are higher.

Performance

Why are instances or appliances configured to use FIPS mode not able to achieve the same TPS rates for SSL traffic as the non-FIPS counterparts?

Achieving FIPS encryption standards for specific traffic requires a more intensive encrypt/decrypt process to ensure that the keys are maintained at the correct level of security integrity. When an instance or appliance is using the FIPS mode of encryption, it increases the amount of time required to run an encrypt or decrypt action and this reduces the total amount of TPS that can be achieved.

The more recent FIPS appliances (VPX FIPS and MPX 8900/15000-50G FIPS) are able to operate at throughput rates that are much closer to their non-FIPS counterparts due to the architecture that NetScaler chose when designing these appliances. NetScaler no longer uses a third-party Hardware Security Module and has been able to create an appliance that offers better FIPS-encrypted throughput as a result.

Cloud

How do I get FIPS compliance in the Azure cloud?

There are two ways to achieve FIPS compliance or validation when using NetScaler VPX on Azure. One way is to directly deploy a NetScaler VPX FIPS on Azure, and leverage its design and built-in ability to provide FIPS 140-2 Level 1 validation.

The second option available is to deploy a standard NetScaler VPX and connect it to the Azure Key Vault, allowing to achieve FIPS 140-2 Level 2 and Level 3 compliance.

NetScaler VPX is also supported on Azure Government and similar options are available.

How can I tell if my NetScaler appliance is operating in FIPS mode?

If you access the appliance via SSH, you can run the command `show fipsstatus` at the prompt. If the appliance is operating in FIPS mode, you receive the following response.

```
1  FipsStatus: System is operating in FIPS mode
2  Done
```

If you do not see this message, refer [Troubleshooting](#).

Note:

- 13.1 FIPS is currently Module in Process. It can be used in production if there is no requirement/dependency on Compliance or validation.

- NetScaler SDX 14000 FIPS appliances are compatible with only non-FIPS firmware, including VPX instances.

Firewall Load Balancing

May 2, 2023

Firewall load balancing distributes traffic across multiple firewalls, providing fault tolerance and increased throughput. Firewall load balancing protects your network by:

- Dividing the load between the firewalls, which eliminates a single point of failure and allows the network to scale.
- Increasing high availability.

Configuring a NetScaler appliance for firewall load balancing is similar to configuring load balancing, with the exception that the recommended service type is ANY, recommended monitor type is PING, and the load balancing virtual server mode is set to MAC.

You can set up firewall load balancing in a sandwich, an enterprise, or multiple-firewall environment configuration. The sandwich environment is used for load balancing traffic entering the network from outside and traffic leaving the network to the internet and involves configuring two NetScaler appliances, one on each side of a set of firewalls. You configure an enterprise environment for load balancing traffic leaving the network to the internet. The enterprise environment involves configuring a single NetScaler appliance between the internal network and the firewalls that provide access to the Internet. The multiple-firewall environment is used for load balance traffic coming from another firewall. Having firewall load balancing enabled on both the sides of NetScaler appliance improves the traffic flow in both the egress and ingress direction and ensures faster processing of the traffic. The multiple-firewall environment involves configuring a NetScaler appliance sandwiched between two firewalls.

Important: If you configure static routes on the NetScaler appliance for the destination IP address and enable L3 mode, the NetScaler appliance uses its routing table to route the traffic instead of sending the traffic to the load balancing vserver.

Note: For FTP to work, an additional virtual server or service should be configured on the NetScaler appliance with IP address and port as * and 21 respectively, and the service type specified as FTP. In this case, the NetScaler appliance manages the FTP protocol by accepting the FTP control connection, modifying the payload, and managing the data connection, all through the same firewall.

Firewall Load Balancing supports only some of the load balancing methods supported on the NetScaler appliance. Also, you can configure only a few types of persistence and monitors.

Firewall Load Balancing Methods

The following load balancing methods are supported for firewall load balancing.

- Least Connections
- Round Robin
- Least Packets
- Least Bandwidth
- Source IP Hash
- Destination IP Hash
- Source IP Destination IP Hash
- Source IP Source Port hash
- Least Response Time Method (LRTM)
- Custom Load

Firewall Persistence

Only SOURCEIP, DESTIP, and SOURCEIPDESTIP based persistence are supported for firewall load balancing.

Firewall Server Monitoring

Only PING and transparent monitors are supported in firewall load balancing. You can bind a PING monitor (default) to the backend service that represents the firewall. If a firewall is configured not to respond to ping packets, you can configure transparent monitors to monitor hosts on the trusted side through individual firewalls.

Sandwich Environment

May 2, 2023

A NetScaler deployment in a sandwich mode can load balance network traffic through firewalls in both directions: ingress (traffic entering the network from the outside, such as the internet) and egress (traffic leaving the network to the internet).


In this setup, a NetScaler is located on each side of a set of firewalls. The NetScaler placed between the firewalls and the Internet, called the external NetScaler that handles ingress traffic selects the best firewall, based on the configured method. The NetScaler between the firewalls and the private network,

called the internal NetScaler tracks the firewall from which the initial packet for a session is received. It then makes sure that all subsequent packets for that session are sent to the same firewall.

The internal NetScaler can be configured as a regular traffic manager to load balance traffic across the private network servers. This configuration also allows traffic originating from the private network (egress) to be load balanced across the firewalls.

The following diagram shows the sandwich firewall load balancing environment.

Figure 1. Firewall Load Balancing (Sandwich)

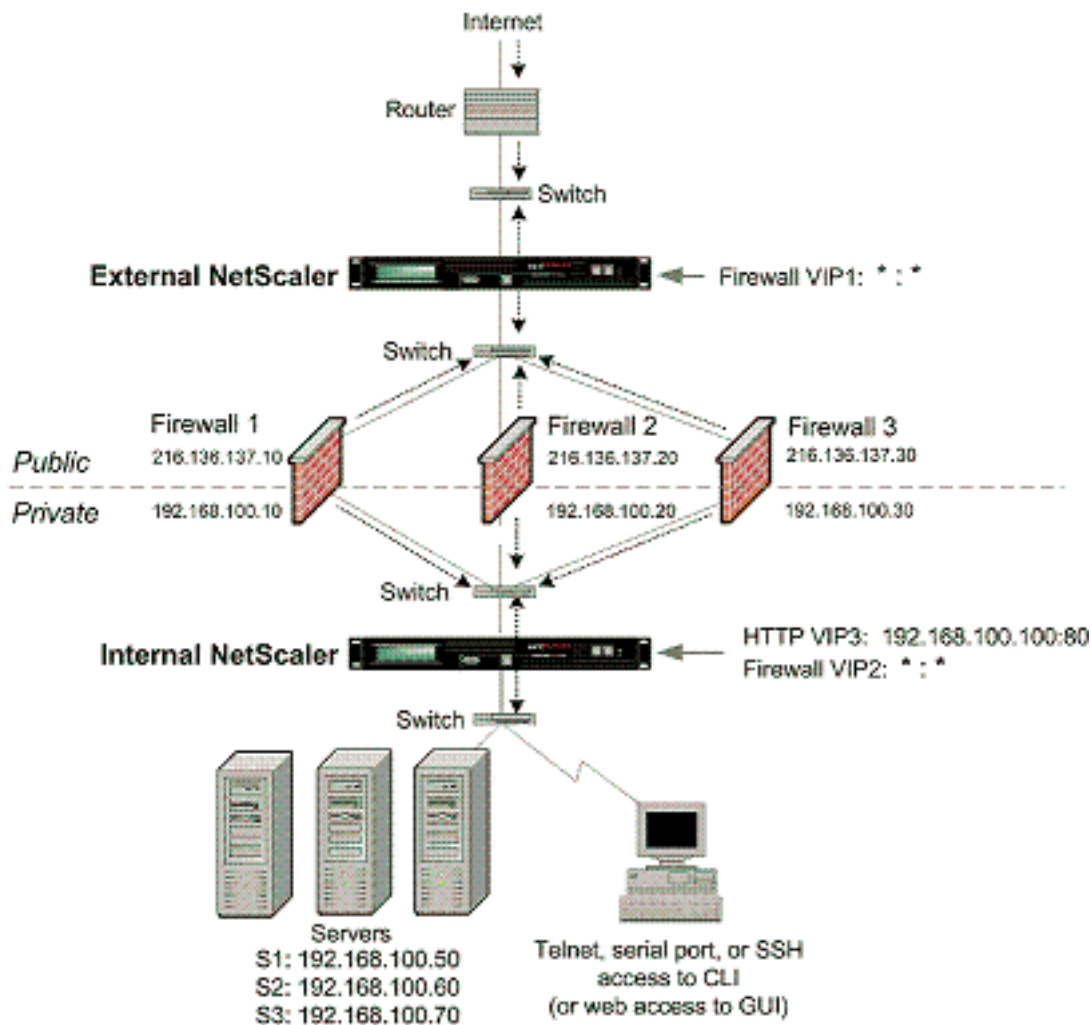

The service type ANY configures the NetScaler to accept all traffic.

To avail benefits related to HTTP and TCP, configure the service and virtual server with type HTTP or TCP. For FTP to work, configure the service with type FTP.

Configuring the External NetScaler in a Sandwich Environment

Perform the following tasks to configure the external NetScaler in a sandwich environment

- Enable the load balancing feature.
- Configure a wildcard service for each firewall.
- Configure a monitor for each wildcard service.
- Configure a wildcard virtual server for traffic coming from the Internet.
- Configure the virtual server in MAC rewrite mode.
- Bind services to the wildcard virtual server.
- Save and Verify the Configuration.

Enable the load balancing feature

To enable load balancing by using the command line interface At the command prompt, type the following command to enable load balancing and verify the configuration:

```
1 enable ns feature LB
2 show ns feature
```

Example:

```
1 > enable ns feature LoadBalancing
2 Done
3 > show ns feature
4
5         Feature                Acronym        Status
6         -----                -
7 1)    Web Logging              WL             OFF
8 2)    Surge Protection         SP             ON
9 3)    Load Balancing          LB             ON
10 .
11 .
12 .
13 24)   NetScaler Push          push           OFF
14 Done
```

To enable load balancing by using the configuration utility Navigate to **System > Settings** and, in **Configure Basic Features**, select **Load Balancing**.

Configure a wildcard service for each firewall

To configure a wildcard service for each firewall by using the command line interface At the command prompt, type:

```
1 add service <name> <serverName> ANY *
```

Example:

```
1 add service Service-HTTP-1 10.102.29.5 ANY *
```

To configure a wildcard service for each firewall by using the configuration utility Navigate to **Traffic Management > Load Balancing > Services** and add a service. Specify **ANY** in the **Protocol** field and ***** in the Port field.

Configure a monitor for each wildcard service

A PING monitor is bound by default to the service. You need to configure a transparent monitor to monitor hosts on the trusted side through individual firewalls. You can then bind the transparent monitor to services. The default PING monitor monitors the connectivity only between the NetScaler appliance and the upstream device. The transparent monitor monitors all the devices existing in the path from the appliance to the device that owns the destination IP address specified in the monitor. If a transparent monitor is not configured and the status of the firewall is UP but one of the next hop devices from that firewall is down, the appliance includes the firewall while performing load balancing and forwards the packet to the firewall. However, the packet is not delivered to the final destination because one of the next hop devices is down. By binding a transparent monitor, if any of the devices (including the firewall) are down, the service is marked as DOWN and the firewall is not included when the appliance performs firewall load balancing.

Binding a transparent monitor overrides the PING monitor. To configure a PING monitor in addition to a transparent monitor, after you create and bind a transparent monitor, you need to bind a PING monitor to the service.

To configure a transparent monitor by using the command line interface At the command prompt, type the following commands to configure a transparent monitor and verify the configuration:

```
1 add lb monitor <monitorName> <type> [-destIP <ip_addr|ipv6_addr|*>] [-transparent (YES | NO )]
2 bind lb monitor <monitorName> <serviceName>
```

Example:

```
1 add monitor monitor-HTTP-1 HTTP -destip 10.10.10.11 -transparent YES
2 bind monitor monitor-HTTP-1 fw-svc1
3 To bind a PING monitor, type the following command:
4 bind monitor PING fw-svc1
```

To create and bind a transparent monitor by using the configuration utility Navigate to **Traffic Management > Load Balancing > Monitors**, and then create and bind a transparent monitor.

Configure a wildcard virtual server for traffic coming from the Internet

To configure a wildcard virtual server for traffic coming from the Internet by using the command line interface At the command prompt, type:

```
1 add lb vserver <name> ANY * *
```

Example:

```
1 add lb vserver Vserver-LB-1 ANY * *
```

To configure a wildcard virtual server for traffic coming from the Internet by using the configuration utility Navigate to **Traffic Management > Load Balancing > Virtual Servers** and create a wildcard virtual server. Specify **ANY** in the **Protocol** field and ***** in the Port field.

Configure the virtual server in MAC rewrite mode

To configure the virtual server in MAC rewrite mode by using the command line interface At the command prompt, type:

```
1 set lb vserver <name>@ -m <RedirectionMode>
```

Example:

```
1 set lb vserver Vserver-LB-1 -m MAC
```

To configure the virtual server in MAC rewrite mode by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and select the virtual server for which you want to configure the redirection mode (for example, Vserver-LB-1).
2. Edit the **Basic Settings** section, and click **more**.
3. From the **Redirection Mode** drop-down list, select **MAC Based**.

Bind services to the wildcard virtual server

To bind a service to the wildcard virtual server by using the command line interface At the command prompt, type:

```
1 bind lb vserver <name> <serviceName>
```

Example:

```
1 bind lb vserver Vserver-LB-1 Service-HTTP-1
```

To bind a service to the wildcard virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and select the virtual server for which you want to bind the service.
2. Click in the **Services** section and select a service to bind.

Save and Verify the Configuration

When you've finished the configuration tasks, be sure to save the configuration. Ensure that the settings are correct.

To save and verify the configuration by using the command line interface At the command prompt, type the following commands to configure a transparent monitor and verify the configuration:

```
1 save ns config
2 show vservers
```

Example:

```
1 save config
2 sh lb vservers FWLBVIP1
3 FWLBVIP1 (*:*) - ANY      Type: ADDRESS
4     State: UP
5     Last state change was at Mon Jun 14 06:40:14 2010
6     Time since last state change: 0 days, 00:00:11.240
7     Effective State: UP  ARP:DISABLED
8     Client Idle Timeout: 120 sec
9     Down state flush: ENABLED
10    Disable Primary Vserver On Down : DISABLED
11    No. of Bound Services : 2 (Total)          2 (Active)
12    Configured Method: SRCIPDESTIPHASH
13    Mode: MAC
14    Persistence: NONE
15    Connection Failover: DISABLED
16
17 1) fw_svc_1 (10.102.29.251: *) - ANY State: UP  Weight: 1
18 2) fw_svc_2 (10.102.29.18: *) - ANY State: UP  Weight: 1
19 Done
20 show service fw-svc1
21     fw-svc1 (10.102.29.251:*) - ANY
22     State: DOWN
23     Last state change was at Thu Jul  8 10:04:50 2010
24     Time since last state change: 0 days, 00:00:38.120
25     Server Name: 10.102.29.251
26     Server ID : 0      Monitor Threshold : 0
27     Max Conn: 0      Max Req: 0      Max Bandwidth: 0 kbits
28     Use Source IP: NO
29     Client Keepalive(CKA): NO
```

```
30      Access Down Service: NO
31      TCP Buffering(TCPB): YES
32      HTTP Compression(CMP): NO
33      Idle timeout: Client: 120 sec   Server: 120 sec
34      Client IP: DISABLED
35      Cacheable: NO
36      SC: OFF
37      SP: OFF
38      Down state flush: ENABLED
39
40 1)      Monitor Name: monitor-HTTP-1
41          State: DOWN      Weight: 1
42          Probes: 5        Failed [Total: 5 Current: 5]
43          Last response: Failure - Time out during TCP connection
44          establishment stage
45          Response Time: 2000.0 millisec
46 2)      Monitor Name: ping
47          State: UP        Weight: 1
48          Probes: 3        Failed [Total: 0 Current: 0]
49          Last response: Success - ICMP echo reply received.
50          Response Time: 1.415 millisec
51 Done
```

Configuring the Internal NetScaler in a Sandwich Environment

Perform the following tasks to configure the internal NetScaler in a sandwich environment

For traffic from the server (egress)

- Enable the load balancing feature.
- Configure a wildcard service for each firewall.
- Configure a monitor for each wildcard service.
- Configure a wildcard virtual server to load balance the traffic sent to the firewalls.
- Configure the virtual server in MAC rewrite mode.
- Bind firewall services to the wildcard virtual server.

For traffic across private network servers

- Configure a service for each virtual server.
- Configure a monitor for each service.
- Configure an HTTP virtual server to balance traffic sent to the servers.
- Bind HTTP services to the HTTP virtual server.
- Save and Verify the Configuration.

Enable the load balancing feature

You can configure load balancing entities such as services and virtual servers when the load balancing feature is disabled. But they will not function until you enable the feature.

To enable load balancing by using the command line interface At the command prompt, type the following command to enable load balancing and verify the configuration:

```
1 enable ns feature LB
2 show ns feature
```

Example:

```
1 > enable ns feature LoadBalancing
2 Done
3 > show ns feature
4
5         Feature                Acronym        Status
6         -----                -
7 1)    Web Logging              WL             OFF
8 2)    Surge Protection         SP             ON
9 3)    Load Balancing          LB             ON
10 .
11 .
12 .
13 24)   NetScaler Push          push           OFF
14 Done
```

To enable load balancing by using the configuration utility Navigate to **System > Settings** and, in Configure Basic Features, select **Load Balancing**.

Configure a wildcard service for each firewall

To configure a wildcard service for each firewall by using the command line interface At the command prompt, type:

```
1 add service <name> <serverName> ANY *
```

Example:

```
1 add service Service-HTTP-1 10.102.29.5 ANY *
```

To configure a wildcard service for each firewall by using the configuration utility Navigate to **Traffic Management > Load Balancing > Services** and add a service. Specify **ANY** in the **Protocol** field and ***** in the **Port** field.

Configure a monitor for each wildcard service

A PING monitor is bound by default to the service. You need to configure a transparent monitor to monitor hosts on the trusted side through individual firewalls. You can then bind the transparent monitor to services. The default PING monitor monitors the connectivity only between the NetScaler appliance and the upstream device. The transparent monitor monitors all the devices existing in the path from the appliance to the device that owns the destination IP address specified in the monitor. If a transparent monitor is not configured and the status of the firewall is UP but one of the next hop devices from that firewall is down, the appliance includes the firewall while performing load balancing and forwards the packet to the firewall. However, the packet is not delivered to the final destination because one of the next hop devices is down. By binding a transparent monitor, if any of the devices (including the firewall) are down, the service is marked as DOWN and the firewall is not included when the appliance performs firewall load balancing.

Binding a transparent monitor overrides the PING monitor. To configure a PING monitor in addition to a transparent monitor, after you create and bind a transparent monitor, you need to bind a PING monitor to the service.

To configure a transparent monitor by using the command line interface At the command prompt, type the following commands to configure a transparent monitor and verify the configuration:

```
1 add lb monitor <monitorName> <type> [-destIP <ip_addr|ipv6_addr|*>] [-transparent (YES | NO )]
2 bind lb monitor <monitorName> <serviceName>
```

Example:

```
1 add monitor monitor-HTTP-1 HTTP -destip 10.10.10.11 -transparent YES
2 bind monitor monitor-HTTP-1 fw-svc1
```

To create and bind a transparent monitor by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Monitors** and create a monitor.
2. In the **Create Monitor** dialog box, enter the required parameters, and select **Transparent**.

Configure a wildcard virtual server to load balance the traffic sent to the firewalls

To configure a wildcard virtual server to load balance the traffic sent to the firewalls by using the command line interface At the command prompt, type:

```
1 add lb vservers <name> ANY * *
```


Example:

```
1 add lb vserver Vserver-LB-1 ANY * *
```

To configure a wildcard virtual server for traffic coming from the Internet by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and create a wildcard virtual server.
2. Specify **ANY** in the Protocol field and ***** in the Port field.

To configure a wildcard virtual server to load balance the traffic sent to the firewalls by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, click Add.
3. In the Create Virtual Server (Load Balancing) dialog box, specify values for the following parameters as shown:
 - Name—name
4. In Protocol, select ANY, and in IP Address and Port, select *.
5. Click Create, and then click Close. The virtual server you created appears in the Load Balancing Virtual Servers pane.

Configure the virtual server in MAC rewrite mode

To configure the virtual server in MAC rewrite mode by using the command line interface At the command prompt, type:

```
1 set lb vserver <name>@ -m <RedirectionMode>
```

Example:

```
1 set lb vserver Vserver-LB-1 -m MAC
```

To configure the virtual server in MAC rewrite mode by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and select the virtual server for which you want to configure the redirection mode (for example, Vserver-LB-1).
2. Edit the **Basic Settings** section, and click **more**.
3. From the **Redirection Mode** drop-down list, select **MAC Based**.

Bind firewall services to the wildcard virtual server

To bind firewall services to the wildcard virtual server by using the command line interface At the command prompt, type:

```
1 bind lb vserver <name> <serviceName>
```

Example:

```
1 bind lb vserver Vserver-LB-1 Service-HTTP-1
```

To bind firewall services to the wildcard virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and select a virtual server.
2. Click in the Service section, and select a service to bind.

Note: You can bind a service to multiple virtual servers.

Configure a service for each virtual server

To configure a service for each virtual server by using the command line interface At the command prompt, type:

```
1 add service <name> <serverName> HTTP <port>
```

Example:

```
1 add service Service-HTTP-1 10.102.29.5 HTTP 80
```

To configure a service for each virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Services**, and configure a service for each virtual server.
2. Specify **HTTP** in the **Protocol** field, and select **HTTP** under **Available Monitors**.

To configure a service for each virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. In the details pane, click Add.
3. In the Create Service dialog box, specify values for the following parameters as shown:
 - Service Name—name
 - Server—serverName

- Port—port
4. In Protocol, specify HTTP. Under Available Monitors, select HTTP.
 5. Click Create, and then click Close. The service you created appears in the Services pane.

Configure a monitor for each service

To bind a monitor to a service by using the command line interface At the command prompt, type:

```
1 bind lb monitor <monitorName> <ServiceName>
```

Example:

```
1 bind mon monitor-HTTP-1 Service-HTTP-1
```

To bind a monitor to a service by using the configuration utility Navigate to **Traffic Management > Load Balancing > Services**, double-click a service, and add a monitor.

Configure an HTTP virtual server to balance traffic sent to the servers

To configure an HTTP virtual server to balance traffic sent to the servers by using the command line interface At the command prompt, type:

```
1 add lb vservers <name> HTTP <ip> <port>
```

Example:

```
1 add lb vservers Vserver-LB-1 HTTP 10.102.29.60 80
```

To configure an HTTP virtual server to balance traffic sent to the servers by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Services**, and configure an HTTP virtual server.
2. Specify **HTTP** in the **Protocol** field.

To configure an HTTP virtual server to balance traffic sent to the servers by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, click Add.

3. In the Create Virtual Server (Load Balancing) dialog box, specify values for the following parameters as shown:
 - Name—name
 - IP Address—IP Address
Note: If the virtual server uses IPv6, select the IPv6 check box and enter the address in IPv6 format (for example, **1000:0000:0000:0000:0005:0600:700a:888b**).
 - Port—port
4. Under Protocol, select HTTP.
5. Click Create, and then click Close. The virtual server you created appears in the Load Balancing Virtual Servers pane.

Save and Verify the Configuration

When you've finished the configuration tasks, be sure to save the configuration. You should also check to make sure that the settings are correct.

To save and verify the configuration by using the command line interface At the command prompt, type the following commands to configure a transparent monitor and verify the configuration:

- `save ns config`
- `show vservers`

Example:

```
1 save config
2 show lb vservers FWLBVIP2
3     FWLBVIP2 (*:*) - ANY      Type: ADDRESS
4     State: UP
5     Last state change was at Mon Jun 14 07:22:54 2010
6     Time since last state change: 0 days, 00:00:32.760
7     Effective State: UP
8     Client Idle Timeout: 120 sec
9     Down state flush: ENABLED
10    Disable Primary Vserver On Down : DISABLED
11    No. of Bound Services : 2 (Total)      2 (Active)
12    Configured Method: LEASTCONNECTION
13    Current Method: Round Robin, Reason: A new service is bound
14    Mode: MAC
15    Persistence: NONE
16    Connection Failover: DISABLED
17
18 1) fw-int-svc1 (10.102.29.5: *) - ANY State: UP Weight: 1
```

```
19 2) fw-int-svc2 (10.102.29.9: *) - ANY State: UP Weight: 1
20   Done
21 show service fw-int-svc1
22     fw-int-svc1 (10.102.29.5:*) - ANY
23     State: DOWN
24     Last state change was at Thu Jul  8 14:44:51 2010
25     Time since last state change: 0 days, 00:01:50.240
26     Server Name: 10.102.29.5
27     Server ID : 0   Monitor Threshold : 0
28     Max Conn: 0     Max Req: 0       Max Bandwidth: 0 kbits
29     Use Source IP: NO
30     Client Keepalive(CKA): NO
31     Access Down Service: NO
32     TCP Buffering(TCPB): NO
33     HTTP Compression(CMP): NO
34     Idle timeout: Client: 120 sec   Server: 120 sec
35     Client IP: DISABLED
36     Cacheable: NO
37     SC: OFF
38     SP: OFF
39     Down state flush: ENABLED
40
41 1)   Monitor Name: monitor-HTTP-1
42     State: DOWN   Weight: 1
43     Probes: 9     Failed [Total: 9 Current: 9]
44     Last response: Failure - Time out during TCP connection
45     establishment stage
46     Response Time: 2000.0 millisec
46 2)   Monitor Name: ping
47     State: UP     Weight: 1
48     Probes: 3     Failed [Total: 0 Current: 0]
49     Last response: Success - ICMP echo reply received.
50     Response Time: 1.275 millisec
51   Done
```

To save and verify the configuration by using the configuration utility

1. In the **Details** pane, click **Save**.
2. In the **Save Config** dialog box, click **Yes**.
3. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
4. In the **Details** pane, select the virtual server that you created in step 5.
5. Verify that the settings displayed in the **Details** pane are correct.
6. Navigate to **Traffic Management > Load Balancing > Services**.
7. In the **Details** pane, select the services that you created in step 5.
8. Verify that the settings displayed in the **Details** pane are correct.

Monitoring a Firewall Load Balancing Set up in a Sandwich Environment

After the configuration is up and running, you should view the statistics for each service and virtual server to check for possible problems.

Viewing the Statistics of a Virtual Server

To evaluate the performance of virtual servers or to troubleshoot problems, you can display details of the virtual servers configured on the NetScaler appliance. You can display a summary of statistics for all the virtual servers, or you can specify the name of a virtual server to display the statistics only for that virtual server. You can display the following details:

- Name
- IP address
- Port
- Protocol
- State of the virtual server
- Rate of requests received
- Rate of hits

To display virtual server statistics by using the command line interface To display a summary of the statistics for all the virtual servers currently configured on the NetScaler, or for a single virtual server, at the command prompt, type:

```
1 stat lb vserver [-detail] [<name>]
```

Example:

```
1 >stat lb vserver -detail
2 Virtual Server(s) Summary
3
4      vsvrIP  port  Protocol  State  Req/s
5      Hits/s
6 One          *    80      HTTP     UP     5/s
7          0/s
8 Two          *     0      TCP      DOWN   0/s
9          0/s
10 Three       *  2598    TCP      DOWN   0/s
11          0/s
12 dnsVirtualNS 10.102.29.90  53      DNS      DOWN   0/s
13          0/s
14 BRVSRV      10.10.1.1    80      HTTP     DOWN   0/s
15          0/s
16 LBVIP       10.102.29.66 80      HTTP     UP     0/s
17          0/s
18 Done
```

To display virtual server statistics by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers > Statistics**.
2. If you want to display the statistics for only one virtual server, in the details pane, select the virtual server, and click **Statistics**.

Viewing the Statistics of a Service

You can view the rate of requests, responses, request bytes, response bytes, current client connections, requests in surge queue, current server connections, and so forth using the service statistics.

To view the statistics of a service by using the command line interface At the command prompt, type:

```
1 stat service <name>
```

Example:

```
1 stat service Service-HTTP-1
```

To view the statistics of a service by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Services > Statistics**.
2. If you want to display the statistics for only one service, select the service, and click **Statistics**.


Enterprise Environment

May 2, 2023

In the enterprise setup, the NetScaler is placed between the firewalls connecting to the public Internet and the internal private network and handles egress traffic. The NetScaler selects the best firewall based on the configured load balancing policy.

The following diagram shows the enterprise firewall load balancing environment

Figure 1. Firewall Load Balancing (Enterprise)

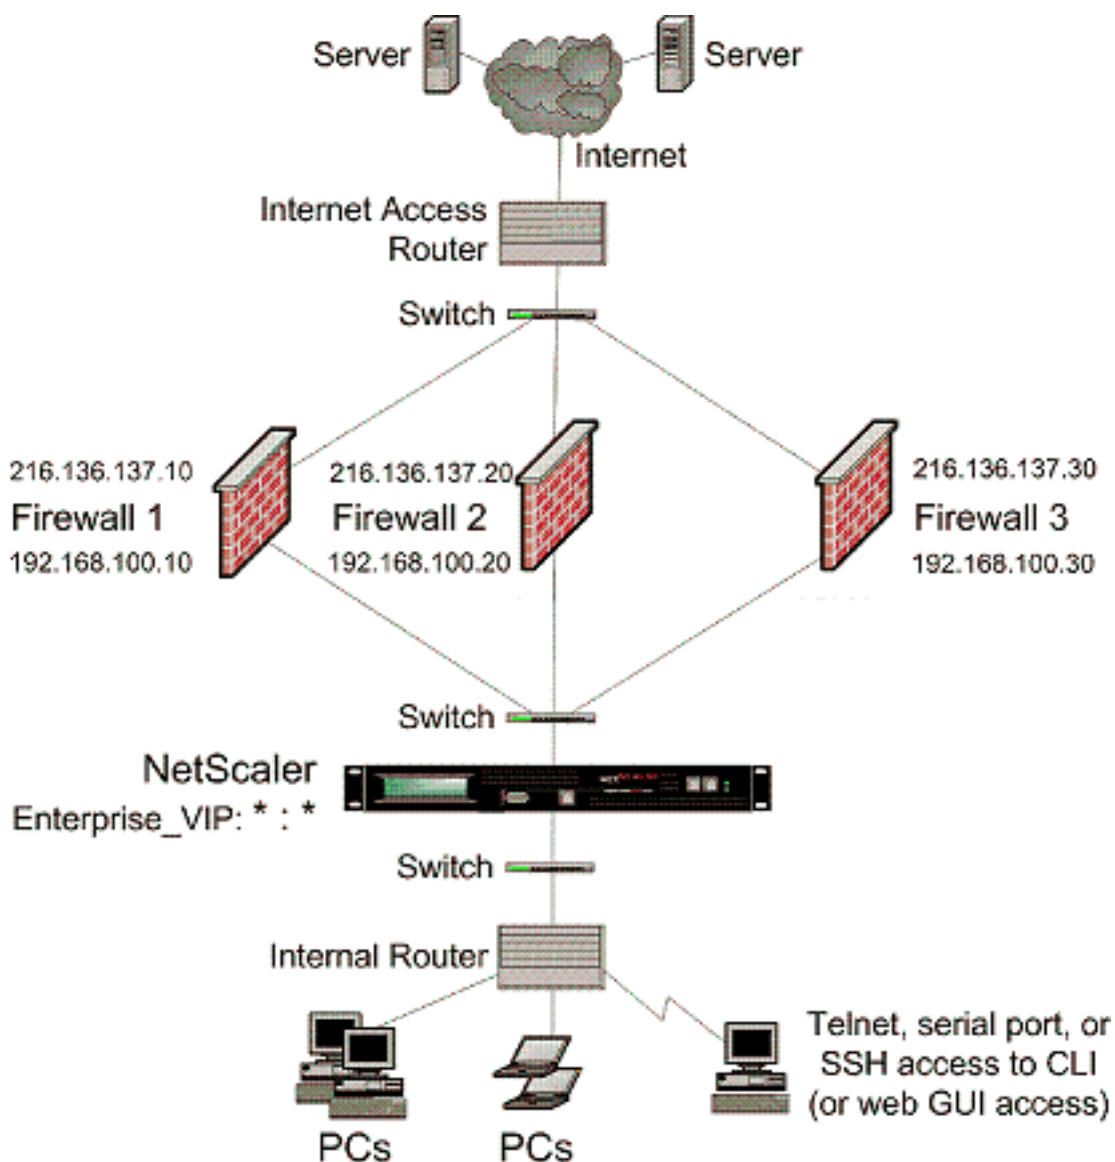

The service type ANY configures the NetScaler to accept all traffic.

To avail benefits related to HTTP and TCP, configure the service and vserver with type HTTP or TCP. For FTP to work, configure the service with type FTP.

Configuring the NetScaler in an Enterprise Environment

Perform the following tasks to configure a NetScaler in an enterprise environment.

For traffic from the server (egress)

- Enable the load balancing feature.
- Configure a wildcard service for each firewall.
- Configure a monitor for each wildcard service.

- Configure a wildcard virtual server to load balance the traffic sent to the firewalls.
- Configure the virtual server in MAC rewrite mode.
- Bind firewall services to the wildcard virtual server.

For traffic across private network servers

- Configure a service for each virtual server.
- Configure a monitor for each service.
- Configure an HTTP virtual server to balance traffic sent to the servers.
- Bind HTTP services to the HTTP virtual server.
- Save and Verify the Configuration.

In the below configuration example, one of the firewall servers is shown in the network topology diagram (Figure 1) is considered.

Enable the load balancing feature

You can configure load balancing entities such as services and virtual servers when the load balancing feature is disabled, but they will not function until you enable the feature.

To enable load balancing by using the command line interface At the command prompt, type the following command to enable load balancing and verify the configuration:

- enable ns feature LB
- show ns feature

Example:

```

1 > enable ns feature LoadBalancing
2 Done
3 > show ns feature
4
5         Feature                Acronym        Status
6         -----                -
7 1)    Web Logging              WL             OFF
8 2)    Surge Protection         SP             ON
9 3)    Load Balancing          LB             ON
10 .
11 .
12 .
13 24)   NetScaler Push          push           OFF
14 Done

```

To enable load balancing by using the configuration utility Navigate to System > Settings and, in Configure Basic Features, select Load Balancing.

Configure a wildcard service for each firewall

To configure a wildcard service for each firewall by using the command line interface At the command prompt, type:

```
1 add service <name> <serverName> ANY *
```

Example:

```
1 add service Service-HTTP-1 192.168.100.10 ANY *
```

To configure a wildcard service for each firewall by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Services.
2. In the details pane, click Add.
3. In the Create Service dialog box, specify values for the following parameters as shown:
 - Service Name—name
 - Server—serverName
4. In Protocol, select ANY, and in Port, select *.
5. Click Create, and then click Close. The service you created appears in the Services pane.

Configure a monitor for each wildcard service

A PING monitor is bound by default to the service. You will need to configure a transparent monitor to monitor hosts on the trusted side through individual firewalls. You can then bind the transparent monitor to services. The default PING monitor monitors the connectivity only between the NetScaler appliance and the upstream device. The transparent monitor monitors all the devices existing in the path from the appliance to the device that owns the destination IP address specified in the monitor. If a transparent monitor is not configured and the status of the firewall is UP but one of the next hop devices from that firewall is down, the appliance includes the firewall while performing load balancing and forwards the packet to the firewall. However, the packet is not delivered to the final destination because one of the next hop devices is down. By binding a transparent monitor, if any of the devices (including the firewall) are down, the service is marked as DOWN and the firewall is not included when the appliance performs firewall load balancing.

Binding a transparent monitor will override the PING monitor. To configure a PING monitor in addition to a transparent monitor, after you create and bind a transparent monitor, you need to bind a PING monitor to the service.

To configure a transparent monitor by using the command line interface At the command prompt, type the following commands to configure a transparent monitor and verify the configuration:

```
1 add lb monitor <monitorName> <type> [-destIP <ip_addr|ipv6_addr|*>] [-transparent (YES | NO )]
2 bind lb monitor <monitorName> <serviceName>
```

Example:

```
1 add monitor monitor-HTTP-1 HTTP -destip 10.10.10.11 -destport 80 -transparent YES
2 bind monitor monitor-HTTP-1 fw-svc1
```

To create and bind a transparent monitor by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Monitors.
2. In the details pane, click Add.
3. In the Create Monitor dialog box, specify values as shown:
 - Name*
 - Type*—type
 - Destination IP
 - Transparent

-* A required parameter
4. Click Create, and then click Close. In the Monitors pane, select the monitor that you just configured and verify that the settings displayed at the bottom of the screen are correct.

Configure a wildcard virtual server to load balance the traffic sent to the firewalls

The traffic passing through firewalls is meant for different proxies or servers that are placed behind the firewalls. These proxies or servers can have different IP addresses and ports. For the traffic to pass transparently through the firewalls, the IP address and port of the virtual server load balancing the firewalls must be set as * to accept traffic for any IP address and port.

To configure a wildcard virtual server to load balance the traffic sent to the firewalls by using the command line interface At the command prompt, type:

```
1 add lb vservers <name> ANY * *
```

Example:

```
1 add lb vserver Vserver-LB-1 ANY * *
```

To configure a wildcard virtual server to load balance the traffic sent to the firewalls by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, click Add.
3. In the Create Virtual Server (Load Balancing) dialog box, specify values for the following parameters as shown:
 - Name—name
4. In Protocol, select ANY, and in IP Address and Port, select *.
5. Click Create, and then click Close. The virtual server you created appears in the Load Balancing Virtual Servers pane.

Configure the virtual server in MAC rewrite mode

To configure the virtual server in MAC rewrite mode by using the command line interface At the command prompt, type:

```
1 set lb vserver <name>@ -m <RedirectionMode>
```

Example:

```
1 set lb vserver Vserver-LB-1 -m MAC
```

To configure the virtual server in MAC rewrite mode by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure the redirection mode (for example, Vserver-LB-1), and then click Open.
3. On the Advanced tab, under Redirection Mode, click MAC-Based.
4. Click OK.

Bind firewall services to the wildcard virtual server

To bind firewall services to the wildcard virtual server by using the command line interface At the command prompt, type:

```
1 bind lb vserver <name> <serviceName>
```

Example:

```
1 bind lb vserver Vserver-LB-1 Service-HTTP-1
```

To bind firewall services to the wildcard virtual server by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Virtual Servers, and select a virtual server.
2. Click in the Service section, and select a service to bind.

Note: You can bind a service to multiple virtual servers.

Configure a service for each virtual server

To configure a service for each virtual server by using the command line interface At the command prompt, type:

```
1 add service <name> <serverName> HTTP <port>
```

Example:

```
1 add service Service-HTTP-1 192.168.100.10 HTTP 80
```

To configure a service for each virtual server by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Services.
2. In the details pane, click Add.
3. In the Create Service dialog box, specify values for the following parameters as shown:
 - Service Name—name
 - Server—serverName
 - Port—port
4. In Protocol, specify HTTP. Under Available Monitors, select HTTP.
5. Click Create, and then click Close. The service you created appears in the Services pane.

Configure a monitor for each service

To bind a monitor to a service by using the command line interface At the command prompt, type:

```
1 bind lb monitor <monitorName> <ServiceName>
```

Example:

```
1 bind mon monitor-HTTP-1 Service-HTTP-1
```

To bind a monitor to a service by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Services.
2. Open the service, and add a monitor.

Configure an HTTP virtual server to balance traffic sent to the servers

To configure an HTTP virtual server to balance traffic sent to the servers by using the command line interface At the command prompt, type:

```
1 add lb vserver <name> HTTP <ip> <port>
```

Example:

```
1 add lb vserver Vserver-LB-1 HTTP 10.102.29.60 80
```

To configure an HTTP virtual server to balance traffic sent to the servers by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, click Add.
3. In the Create Virtual Server (Load Balancing) dialog box, specify values for the following parameters as shown:
 - Name—name
 - IP Address—IPAddress
Note: If the virtual server uses IPv6, select the IPv6 check box and enter the address in IPv6 format (for example, **1000:0000:0000:0000:0005:0600:700a:888b**).
 - Port—port
4. Under Protocol, select HTTP.
5. Click Create, and then click Close. The virtual server you created appears in the Load Balancing Virtual Servers pane.

Bind HTTP services to the HTTP virtual server

To bind HTTP services to the wildcard virtual server by using the command line interface At the command prompt, type:

```
1 bind lb vserver <name> <serviceName>
```

Example:

```
1 bind lb vserver Vserver-LB-1 Service-HTTP-1
```

To bind HTTP services to the wildcard virtual server by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Virtual Servers, and select a virtual server.
2. Click in the Service section, and select a service to bind.

Note: You can bind a service to multiple virtual servers.

Save and Verify the Configuration

When you've finished the configuration tasks, be sure to save the configuration. You should also check to make sure that the settings are correct.

To save and verify the configuration by using the command line interface At the command prompt, type the following commands to configure a transparent monitor and verify the configuration:

- save ns config
- show vserver

Example:

```
1 save config
2 show lb vserver FWLBVIP2
3     FWLBVIP2 (*:*) - ANY      Type: ADDRESS
4     State: UP
5     Last state change was at Mon Jun 14 07:22:54 2010
6     Time since last state change: 0 days, 00:00:32.760
7     Effective State: UP
8     Client Idle Timeout: 120 sec
9     Down state flush: ENABLED
10    Disable Primary Vserver On Down : DISABLED
11    No. of Bound Services : 2 (Total)      2 (Active)
12    Configured Method: LEASTCONNECTION
13    Current Method: Round Robin, Reason: A new service is bound
14    Mode: MAC
15    Persistence: NONE
16    Connection Failover: DISABLED
17
18 1) fw-int-svc1 (192.168.100.10: *) - ANY State: UP Weight: 1
19 Done
20 show service fw-int-svc1
21     fw-int-svc1 (192.168.100.10:*) - ANY
22     State: UP
23     Last state change was at Thu Jul  8 14:44:51 2010
24     Time since last state change: 0 days, 00:01:50.240
```

```
25     Server Name: 192.168.100.10
26     Server ID : 0   Monitor Threshold : 0
27     Max Conn: 0     Max Req: 0       Max Bandwidth: 0 kbits
28     Use Source IP: NO
29     Client Keepalive(CKA): NO
30     Access Down Service: NO
31     TCP Buffering(TCPB): NO
32     HTTP Compression(CMP): NO
33     Idle timeout: Client: 120 sec   Server: 120 sec
34     Client IP: DISABLED
35     Cacheable: NO
36     SC: OFF
37     SP: OFF
38     Down state flush: ENABLED
39
40 1)     Monitor Name: monitor-HTTP-1
41         State: UP       Weight: 1
42         Probes: 9       Failed [Total: 0 Current: 0]
43         Last response: Success - HTTP response code 200
44         received
45         Response Time: 100.0 millisec
46 2)     Monitor Name: ping
47         State: UP       Weight: 1
48         Probes: 3       Failed [Total: 0 Current: 0]
49         Last response: Success - ICMP echo reply received.
50         Response Time: 1.275 millisec
51 Done
```

To save and verify the configuration by using the configuration utility

1. In the details pane, click Save.
2. In the Save Config dialog box, click Yes.
3. Navigate to Traffic Management > Load Balancing > Virtual Servers.
4. In the details pane, select the virtual server that you created in step 5 and verify that the settings displayed in the Details pane are correct.
5. Navigate to Traffic Management > Load Balancing > Services.
6. In the details pane, select the service that you created in step 5 and verify that the settings displayed in the Details pane are correct.

Monitoring a Firewall Load Balancing Setup in an Enterprise Environment

After the configuration is up and running, you should view the statistics for each service and virtual server to check for possible problems.

Viewing the Statistics of a Virtual Server

To evaluate the performance of virtual servers or to troubleshoot problems, you can display details of the virtual servers configured on the NetScaler appliance. You can display a summary of statistics for all the virtual servers, or you can specify the name of a virtual server to display the statistics only for that virtual server. You can display the following details:

- Name
- IP address
- Port
- Protocol
- State of the virtual server
- Rate of requests received
- Rate of hits

To display virtual server statistics by using the command line interface To display a summary of the statistics for all the virtual servers currently configured on the NetScaler appliance, or for a single virtual server, at the command prompt, type:

```
1 stat lb vsrver [-detail] [<name>]
```

Example:

```
1 >stat lb vsrver -detail
2 Virtual Server(s) Summary
3
4      vsvrIP  port  Protocol  State  Req/s
5      Hits/s
6 One          *    80      HTTP    UP     5/s
7          0/s
8 Two          *     0      TCP     DOWN   0/s
9          0/s
10 Three        *  2598    TCP     DOWN   0/s
11          0/s
12 dnsVirtualNS 10.102.29.90  53      DNS     DOWN   0/s
13          0/s
14 BRVSRV       10.10.1.1    80      HTTP    DOWN   0/s
15          0/s
16 LBVIP        10.102.29.66 80      HTTP    UP     0/s
17          0/s
18 Done
```

To display virtual server statistics by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Virtual Servers > Statistics.
2. If you want to display the statistics for only one virtual server, in the details pane, select the virtual server, and click Statistics.

Viewing the Statistics of a Service

Updated: 2013-08-28

You can view the rate of requests, responses, request bytes, response bytes, current client connections, requests in surge queue, current server connections, and so forth using the service statistics.

To view the statistics of a service by using the command line interface At the command prompt, type:

```
1 stat service <name>
```

Example:

```
1 stat service Service-HTTP-1
```

To view the statistics of a service by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Services > Statistics.
2. If you want to display the statistics for only one service, select the service, and click Statistics.


Multiple-Firewall Environment

May 2, 2023

In a multiple-firewall environment, the NetScaler appliance is placed between two sets of firewalls, the external set connecting to the public Internet, and the internal set connecting to the internal private network. The external set typically handles the egress traffic. These firewalls mainly implement access control lists to allow or deny access to external resources. The internal set typically handles the ingress traffic. These firewalls implement security to safeguard the intranet from malicious attacks apart from load-balancing the ingress traffic. The multiple-firewall environment allows you to load-balance traffic coming from another firewall. By default, the traffic coming from a firewall is not load balanced on the other firewall across a NetScaler appliance. Having firewall load balancing enabled on both the sides of NetScaler improves the traffic flow in both the egress and ingress direction and ensures faster processing of the traffic.

The following figure shows a multiple-firewall load balancing environment

Figure 1. Firewall Load Balancing (multiple-firewall)

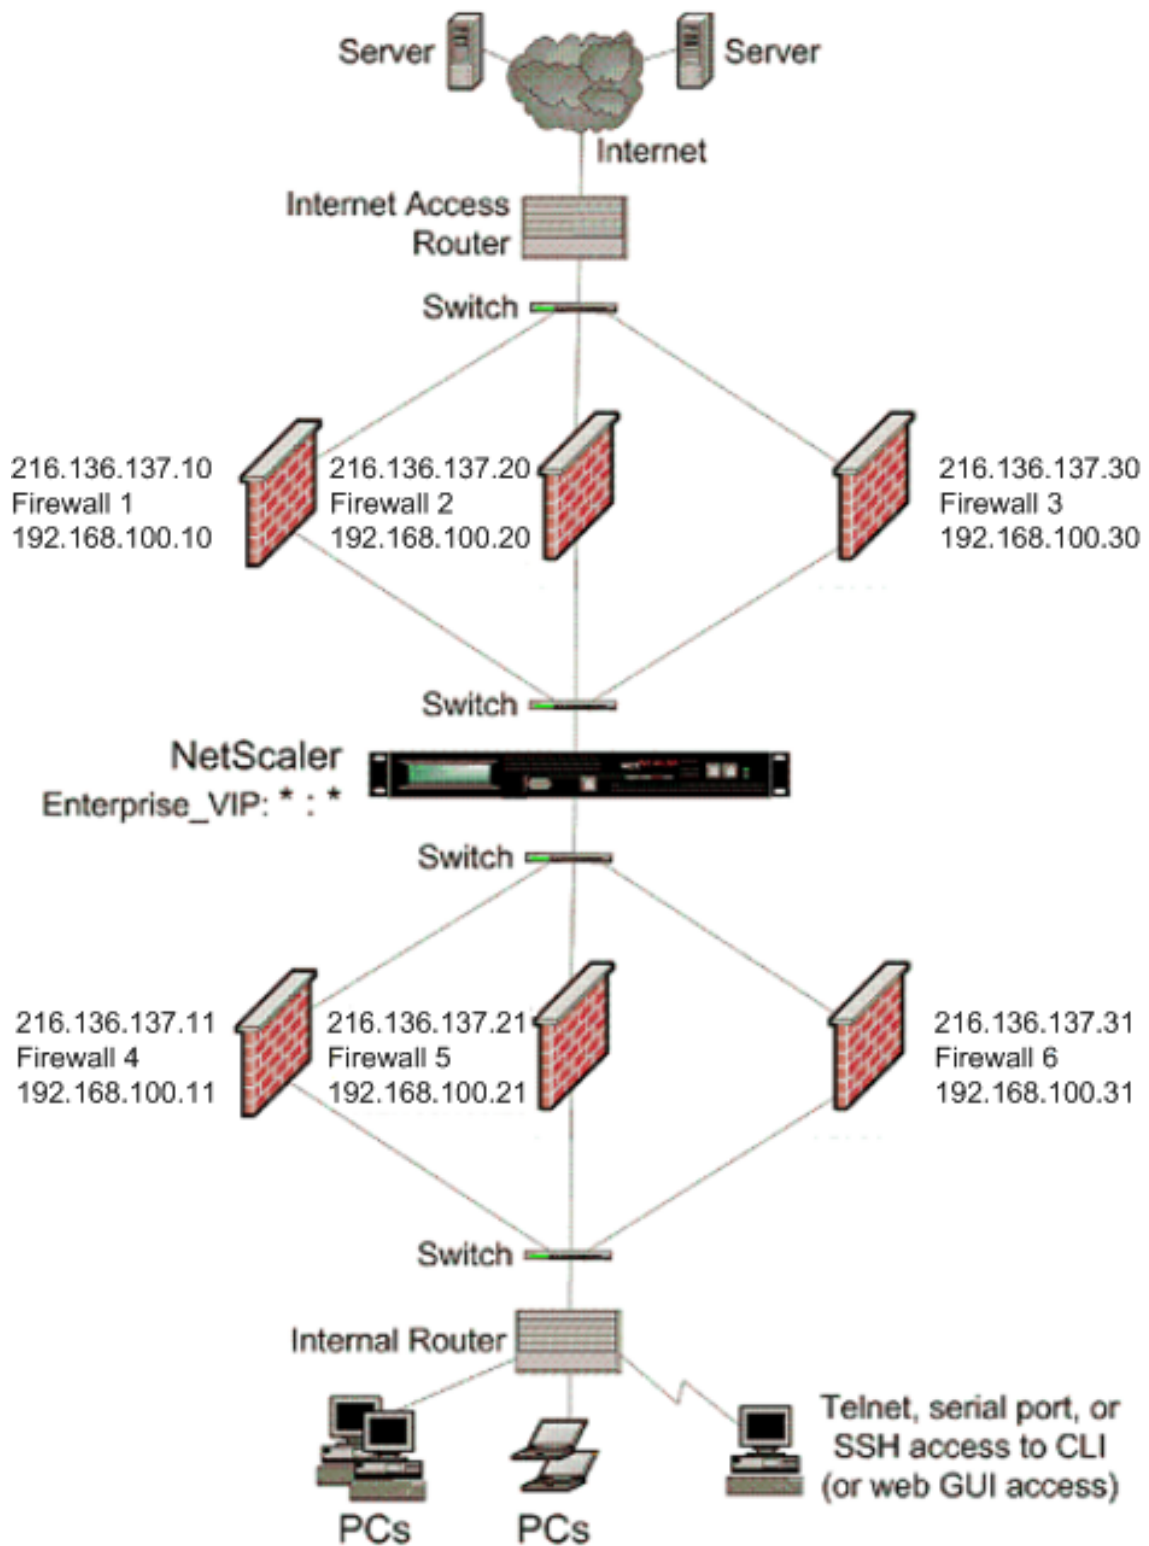

With a configuration like the one shown in Figure 1, you can configure the NetScaler to load balance the traffic through the an internal firewall even if it is load balanced by an external firewall. For example,

with this feature configured, the traffic coming from the external firewalls (firewalls 1, 2, and 3) is load balanced on the internal firewalls (firewalls 4, 5, and 6) and vice versa.

Firewall load balancing is supported only for MAC mode LB virtual server.

The service type ANY configures the NetScaler to accept all traffic.

To avail benefits related to HTTP and TCP, configure the service and virtual server with type HTTP or TCP. For FTP to work, configure the service with type FTP.

Configuring the NetScaler in a Multiple-Firewall Environment

To configure a NetScaler appliance in a multiple-firewall environment, you have to enable the load balancing feature, configure a virtual server to load balance the egress traffic across the external firewalls, configure a virtual server to load balance the ingress traffic across the internal firewalls, and enable firewall load balancing on the NetScaler appliance. To configure a virtual server to load balance traffic across a firewall in the multiple-firewall environment, you need to:

1. Configure a wildcard service for each firewall
2. Configure a monitor for each wildcard service
3. Configure a wildcard virtual server to load balance the traffic sent to the firewalls
4. Configure the virtual server in MAC rewrite mode
5. Bind firewall services to the wildcard virtual server

Enabling the load balancing feature

To configure and implement load balancing entities such as services and virtual servers, you need to enable the load balancing feature on the NetScaler device.

To enable load balancing by using the CLI:

At the command prompt, type the following command to enable load balancing and verify the configuration:

```
1 enable ns feature <featureName>
2 show ns feature
```

Example:

```
1 enable ns feature LoadBalancing
2 Done
3 show ns feature
4 Feature Acronym Status
5 -----
6 1) Web Logging WL OFF
7 2) Surge Protection SP ON
```

```
8 3) Load Balancing LB ON
9 .
10 .
11 .
12 24) NetScaler Push push OFF
13 Done
```

To enable load balancing by using the GUI:

1. In the navigation pane, expand System, and then click Settings.
2. In the Settings pane, under Modes and Features, click Change basic features.
3. In the Configure Basic Features dialog box, select the Load Balancing check box, and then click Ok.

Configuring a wildcard service for each firewall

To accept traffic from all the protocols, you need to configure wildcard service for each firewall by specifying support for all the protocols and ports.

To configure a wildcard service for each firewall by using the CLI:

At the command prompt, type the following command to configure support for all the protocols and ports:

```
1 add service <name>@ <serverName> <serviceType> <port_number>
```

Example:

```
1 add service fw-svc1 10.102.29.5 ANY *
```

To configure a wildcard service for each firewall by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Services.
2. In the details pane, click Add.
3. In the Create Services dialog box, specify values for the following parameters as shown:
 - Service Name—name
 - Server—serverName

-* A required parameter
4. In Protocol, select Any and in Port, select *.
5. Click Create, and then click Close. The service you created appears in the Services pane.

Configuring a monitor for each service

A PING monitor is bound by default to the service. You will need to configure a transparent monitor to monitor hosts on the trusted side through individual firewalls. You can then bind the transparent monitor to services. The default PING monitor monitors the connectivity only between the NetScaler appliance and the upstream device. The transparent monitor monitors all the devices existing in the path from the appliance to the device that owns the destination IP address specified in the monitor. If a transparent monitor is not configured and the status of the firewall is UP but one of the next hop devices from that firewall is down, the appliance includes the firewall while performing load balancing and forwards the packet to the firewall. However, the packet is not delivered to the final destination because one of the next hop devices is down. By binding a transparent monitor, if any of the devices (including the firewall) are down, the service is marked as DOWN and the firewall is not included when the appliance performs firewall load balancing.

Binding a transparent monitor will override the PING monitor. To configure a PING monitor in addition to a transparent monitor, after you create and bind a transparent monitor, you need to bind a PING monitor to the service.

To configure a transparent monitor by using the CLI:

At the command prompt, type the following commands to configure a transparent monitor and verify the configuration:

```
1 add lb monitor <monitorName> <type> [-destIP <ip_addr|ipv6_addr|*>] [-transparent (YES | NO )]
2 bind lb monitor <monitorName> <serviceName>
```

Example:

```
1 add monitor monitor-HTTP-1 HTTP -destip 10.10.10.11 -transparent YES
2 bind monitor monitor-HTTP-1 fw-svc1
```

The NetScaler appliance learns the server L2 parameters from the monitor that is bound to the service. For UDP-ECV monitors, configure a receive string to enable the appliance to learn the L2 parameters of the server. If the receive string is not configured and the server does not respond, then the appliance does not learn the L2 parameters but the service is set to UP. The traffic for this service is blackholed.

To configure a receive string by using the CLI:

At the command prompt, type the following command:

```
1 add lb monitor <monitorName> <type> [-destIP <ip_addr|ipv6_addr|*>] [-transparent (YES | NO )] [-send <string>] [-recv <string>]
```

Example:

```
1 add lb monitor monitor-udp-1 udp-ecv -destip 10.10.10.11 -transparent YES - send "test message" - recv "site_is_up"
```

To create and bind a transparent monitor by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Monitors.
 2. In the details pane, click Add.
 3. In the Create Monitor dialog box, specify values for the following parameters as shown:
 - Name*
 - Type*—type
 - Destination IP
 - Transparent
- * A required parameter
4. Click Create, and then click Close. In the Monitors pane, select the monitor that you just configured and verify that the settings displayed at the bottom of the screen are correct.

Configuring a virtual server to load balance the traffic sent to the firewalls

To load balance any kind of traffic, you need to configure a wildcard virtual server specifying the protocol and port as any value.

To configure a virtual server to load balance the traffic sent to the firewalls by using the CLI:

At the command prompt, type the following command:

```
1 add lb vserver <name>@ <serviceType> <IPAddress> <port_number>
```

Example:

```
1 add lb vserver Vserver-LB-1 ANY * *
```

To configure a virtual server to load balance the traffic sent to the firewalls by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, click Add.
3. In Protocol, select Any, and in IP Address and Port, select *.
4. Click Create, and then click Close. The virtual server you created appears in the Load Balancing Virtual Servers pane.

Configuring the virtual server to MAC rewrite mode

To configure the virtual server to use MAC address for forwarding the incoming traffic, you need to enable the MAC rewrite mode.

To configure the virtual server in MAC rewrite mode by using the CLI:

At the command prompt, type the following command:

```
1 set lb vserver <name>@ -m <RedirectionMode>
```

Example:

```
1 set lb vserver Vserver-LB-1 -m MAC
```

To configure the virtual server in MAC rewrite mode by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure the redirection mode (for example, Vserver-LB1), and then click Open.
3. On the Advanced tab, under the Redirection Mode mode, click Open.
4. Click Ok.

Binding firewall services to the virtual server

To access a service on NetScaler appliance, you need to bind it to a wildcard virtual server.

To bind firewall services to the virtual server by using the CLI:

At the command prompt, type the following command:

```
1 bind lb vserver <name>@ <serviceName>
```

Example:

```
1 bind lb vserver Vserver-LB-1 Service-HTTP-1
```

To bind firewall services to the virtual server by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure the redirection mode (for example, Vserver-LB1), and then click Open.
3. In the Configure Virtual Server (Load Balancing) dialog box, on the Services tab, select the Active check box next to the service that you want to bind to the virtual server (for example, Service-HTTP-1).
4. Click Ok.

Configuring the multiple-firewall load balancing on the NetScaler appliance

To load balance traffic on both the sides of a NetScaler using firewall load balancing, you need to enable multiple-firewall load balancing by using the vServerSpecificMac parameter.

To configure multiple-firewall load balancing by using the CLI:

At the command prompt, type the following command:

```
1 set lb parameter -vServerSpecificMac <status>
```

Example:

```
1 set lb parameter -vServerSpecificMac ENABLED
```

To configure multiple-firewall load balancing by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the details pane, select the virtual server for which you want to configure the redirection mode (for example, Configure Load Balancing parameters).
3. In the Set Load Balancing Parameters dialog box, select the Virtual Server Specific MAC check box.
4. Click Ok.

Saving and Verifying the Configuration

When you've finished the configuration tasks, be sure to save the configuration. You should also check to make sure that the settings are correct.

To save and verify the configuration by using the CLI:

At the command prompt, type the following commands to configure a transparent monitor and verify the configuration:

- save ns config
- show vserver

Example:

```
1 save config
2 show lb vserver FWLBVIP2
3     FWLBVIP2 (*:*) - ANY      Type: ADDRESS
4     State: UP
5     Last state change was at Mon Jun 14 07:22:54 2010
6     Time since last state change: 0 days, 00:00:32.760
7     Effective State: UP
8     Client Idle Timeout: 120 sec
9     Down state flush: ENABLED
10    Disable Primary Vserver On Down : DISABLED
11    No. of Bound Services : 2 (Total)      2 (Active)
12    Configured Method: LEASTCONNECTION
13    Current Method: Round Robin, Reason: A new service is bound
14    Mode: MAC
15    Persistence: NONE
16    Connection Failover: DISABLED
17
```

```
18 1) fw-int-svc1 (10.102.29.5: *) - ANY State: UP Weight: 1
19 2) fw-int-svc2 (10.102.29.9: *) - ANY State: UP Weight: 1
20 Done
21 show service fw-int-svc1
22     fw-int-svc1 (10.102.29.5:*) - ANY
23     State: DOWN
24     Last state change was at Thu Jul  8 14:44:51 2010
25     Time since last state change: 0 days, 00:01:50.240
26     Server Name: 10.102.29.5
27     Server ID : 0   Monitor Threshold : 0
28     Max Conn: 0     Max Req: 0       Max Bandwidth: 0 kbits
29     Use Source IP: NO
30     Client Keepalive(CKA): NO
31     Access Down Service: NO
32     TCP Buffering(TCPB): NO
33     HTTP Compression(CMP): NO
34     Idle timeout: Client: 120 sec   Server: 120 sec
35     Client IP: DISABLED
36     Cacheable: NO
37     SC: OFF
38     SP: OFF
39     Down state flush: ENABLED
40
41 1)     Monitor Name: monitor-HTTP-1
42         State: DOWN   Weight: 1
43         Probes: 9     Failed [Total: 9 Current: 9]
44         Last response: Failure - Time out during TCP connection
45         establishment stage
46         Response Time: 2000.0 millisec
46 2)     Monitor Name: ping
47         State: UP     Weight: 1
48         Probes: 3     Failed [Total: 0 Current: 0]
49         Last response: Success - ICMP echo reply received.
50         Response Time: 1.275 millisec
51 Done
```

To save and verify the configuration by using the GUI:

1. In the details pane, click Save.
2. In the Save Config dialog box, click Yes.
3. Navigate to Traffic Management > Load Balancing > Virtual Servers.
4. In the details pane, select the virtual server that you created in step 5 and verify that the settings displayed in the Details pane are correct.
5. Navigate to Traffic Management > Load Balancing > Services.
6. In the details pane, select the service that you created in step 5 and verify that the settings displayed in the Details pane are correct.

Monitoring a Firewall Load Balancing Setup in a Multiple-Firewall Environment

After the configuration is up and running, you should view the statistics for each service and virtual server to check for possible problems.

Viewing the Statistics of a Virtual Server

To evaluate the performance of virtual servers or to troubleshoot problems, you can display details of the virtual servers configured on the NetScaler appliance. You can display a summary of statistics for all the virtual servers, or you can specify the name of a virtual server to display the statistics only for that virtual server. You can display the following details:

- Name
- IP address
- Port
- Protocol
- State of the virtual server
- Rate of requests received
- Rate of hits

To display virtual server statistics by using the command line interface To display a summary of the statistics for all the virtual servers currently configured on the NetScaler appliance, or for a single virtual server, at the command prompt, type:

```
1 stat lb vserver [-detail] [<name>]
```

Example:

```
1 >stat lb vserver -detail
2 Virtual Server(s) Summary
3
4      vsvrIP  port  Protocol  State  Req/s
5      Hits/s
6 One          *    80      HTTP     UP     5/s
7          0/s
8 Two          *    0       TCP     DOWN   0/s
9          0/s
10 Three        * 2598    TCP     DOWN   0/s
11          0/s
12 dnsVirtualNS 10.102.29.90 53      DNS     DOWN   0/s
13          0/s
14 BRVSRV       10.10.1.1   80      HTTP     DOWN   0/s
15          0/s
16 LBVIP        10.102.29.66 80      HTTP     UP     0/s
17          0/s
18 Done
```

To display virtual server statistics by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Virtual Servers > Statistics.
2. If you want to display the statistics for only one virtual server, in the details pane, select the virtual server, and click Statistics.

Viewing the Statistics of a Service

You can view the rate of requests, responses, request bytes, response bytes, current client connections, requests in surge queue, current server connections, and so forth using the service statistics.

To view the statistics of a service by using the CLI:

At the command prompt, type:

```
1 stat service <name>
```

Example:

```
1 stat service Service-HTTP-1
```

To view the statistics of a service by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Services > Statistics.
2. If you want to display the statistics for only one service, select the service, and click Statistics.

Global Server Load Balancing

May 2, 2023

Notes:

- From release 13.0 build 41.x, global server load balancing (GSLB) deployments using the NetScaler appliance are fully compliant with DNS flag day 2019.
- The GSLB feature is included with the NetScaler Advance and Premium edition licenses. The NetScaler option license is supported with the Standard edition.

NetScaler appliances configured for GSLB provide disaster recovery and ensure continuous availability of applications by protecting against points of failure in a WAN. GSLB balances the load across data centers by directing client requests to the closest or best performing data center, or to surviving data centers if there is an outage.

In a typical configuration, a local DNS server sends client requests to a GSLB virtual server, to which are bound GSLB services. A GSLB service identifies a load balancing or content switching virtual server, which can be at the local site or a remote site. If the GSLB virtual server selects a load balancing or content switching virtual server at a remote site, it sends the virtual server's IP address to the DNS server. The DNS server sends it to the client. The client then resends the request to the new virtual server at the new IP.

The GSLB entities that you must configure are the GSLB sites, the GSLB services, the GSLB virtual servers, load balancing or content switching virtual servers, and authoritative DNS (ADNS) services. You must also configure MEP. You can also configure DNS views to expose different parts of your network to clients accessing the network from different locations.

Note:

To take full advantage of GSLB features, use ADC appliances for load balancing or content switching at each data center, so that your GSLB configuration can use the proprietary MEP to exchange site metrics.

How GSLB works


With ordinary DNS, when a client sends a domain name system (DNS) request, it receives a list of IP addresses of the domain or service. Generally, the client chooses the first IP address in the list and initiates a connection with that server. The DNS server uses a technique called DNS round robin to rotate through the IPs on the list. It sends the first IP address to the end of the list and promotes the others after it responds to each DNS request. This technique ensures equal distribution of the load, but it does not support disaster recovery, load balancing based on load or proximity of servers, or persistency.

When you configure GSLB on ADC appliances and enable MEP, the DNS infrastructure is used to connect the client to the data center that best meets the set criteria. The criteria can designate the following:

- Least loaded data center
- Closest data center
- Data center that responds most quickly to requests from the client's location
- A combination of those metrics and SNMP metrics.

An appliance tracks the location, performance, load, and availability of each data center. It uses these factors to select the data center to send the client request.

The following figure illustrates a basic GSLB topology.

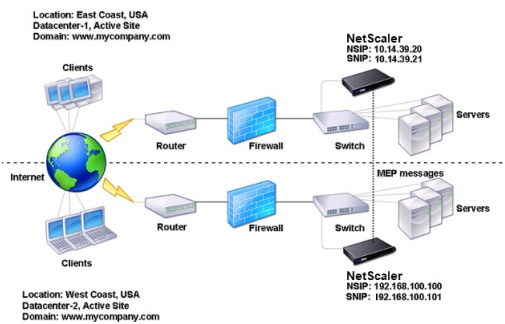

A GSLB configuration consists of a group of GSLB entities on each appliance in the configuration. These entities include GSLB sites, GSLB services, GSLB service groups, GSLB virtual servers, load balancing servers, content switching servers, and ADNS services.

GSLB deployment types

May 2, 2023

NetScaler appliances configured for global server load balancing (GSLB) provide for disaster recovery and ensure continuous availability of applications by protecting against points of failure in a wide area network (WAN). GSLB can balance the load across data centers by directing client requests to the closest or best performing data center, or to surviving data centers in the event of an outage.

The following are some of the typical GSLB deployment types:

- [Active-active site deployment](#)
- [Active-passive site deployment](#)
- [Parent-child topology deployment](#)

Active-active site deployment

May 2, 2023

An active-active site consists of multiple active data centers. Client requests are load balanced across active data centers. This deployment type can be used when you have a need for global distribution of traffic in a distributed environment.

All the sites in an active-active deployment are active, and all the services for a particular application/domain are bound to the same GSLB virtual server. Sites exchange metrics through the Metrics Exchange Protocol (MEP). Site metrics exchanged between the sites include the status of each load

balancing and content switching virtual server, current number of connections, current packet rate, and current bandwidth usage. The NetScaler appliance needs this information to perform load balancing across the sites.

An active-active deployment can include a maximum of 32 GSLB sites, because MEP cannot synchronize more than 32 sites. No backup sites are configured in this deployment type.

The NetScaler appliance sends client requests to the appropriate GSLB site as determined by the GSLB method specified in the GSLB configuration.

For an active-active deployment, you can configure the following GSLB methods.


- Round Robin
- Least Connections
- Least Response Time
- Least Bandwidth
- Least Packets
- Source IP Hash
- Custom Load
- Round Trip Time (RTT)
- Static Proximity

Note:

- If MEP is disabled, the following GSLB methods default to the Round Robin method.
 - RTT
 - Least Connections
 - Least Bandwidth
 - Least Packets
 - Least Response Time
- In the static proximity GLSB method, the appliance sends the request to the IP address of the site that best matches the proximity criteria.
- In the Round Trip Time method, the dynamic round trip time (RTT) values are to select the IP address of the best performing site. RTT is a measure of the delay in the network between the client's local DNS server and a data resource.

GSLB active-active data center topology

In the diagram, Site 1 and Site 2 are active GLSB sites.

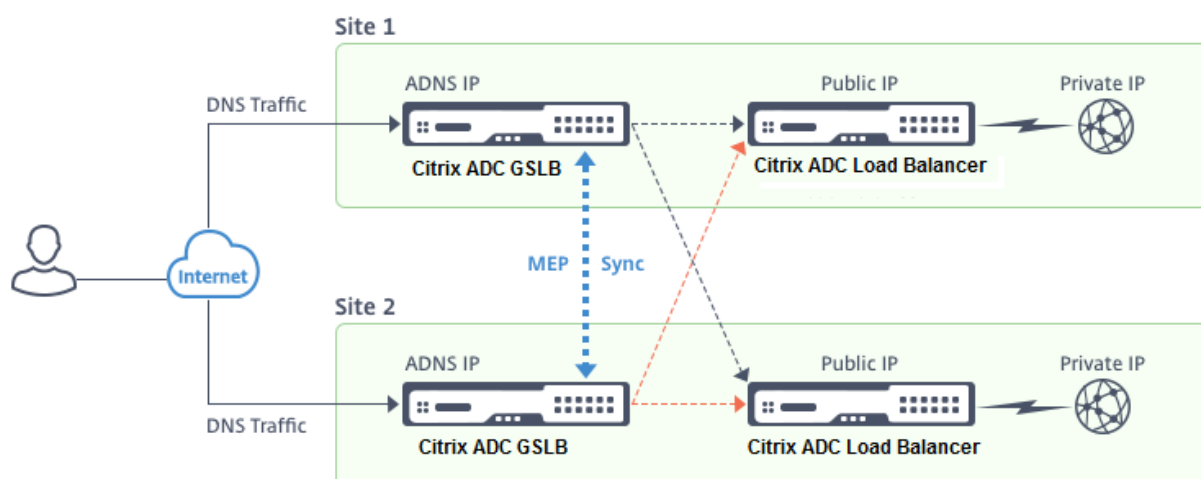

When the client sends a DNS request, it lands in one of the active sites.

If Site 1 receives the client request, the GSLB virtual server in Site 1 selects a load balancing or content switching virtual server and sends the virtual server's IP address to the DNS server, which sends it to the client. The client then resends the request to the new virtual server at the new IP address.

As both sites are active, the GSLB algorithm evaluates the services at both sites when making a selection as determined by the configured GSLB method.

Active-passive site deployment

September 21, 2020

An active-passive site consists of an active and a passive data center. This deployment type is ideal for disaster recovery.

In this type of deployment, some of the sites (remote sites) are reserved only for disaster recovery. These sites do not participate in any decision making until all the active sites are DOWN. A passive site does not become operational unless a disaster event triggers a failover.

Once you have configured the primary data center, replicate the configuration for the backup data center and designate it as the passive GSLB site by designating a GSLB virtual server at that site as the backup virtual server.

An active-passive deployment can include a maximum of 32 GSLB sites, because MEP cannot synchronize more than 32 sites.

For an active-passive deployment, you can configure the following GSLB methods.

- Round Robin
- Least Connections


- Least Response Time
- Least Bandwidth
- Least Packets
- Source IP Hash
- Custom Load
- Round Trip Time (RTT)
- Static Proximity

Note:

- If MEP is disabled, the following algorithm methods default to Round Robin.
 - RTT
 - Least Connections
 - Least Bandwidth
 - Least Packets
 - Least Response Time
- In the static proximity GLSB method, the appliance sends the request to the IP address of the site that best matches the proximity criteria.
- In the Round Trip Time method, the dynamic round trip time (RTT) values are used to select the IP address of the best performing site. RTT is a measure of the delay in the network between the client's local DNS server and a data resource.

GSLB active-passive datacenter topology

In the diagram, Site 1 is an active site and Site 2 is a passive site, which has the same configuration as that of Site 1.

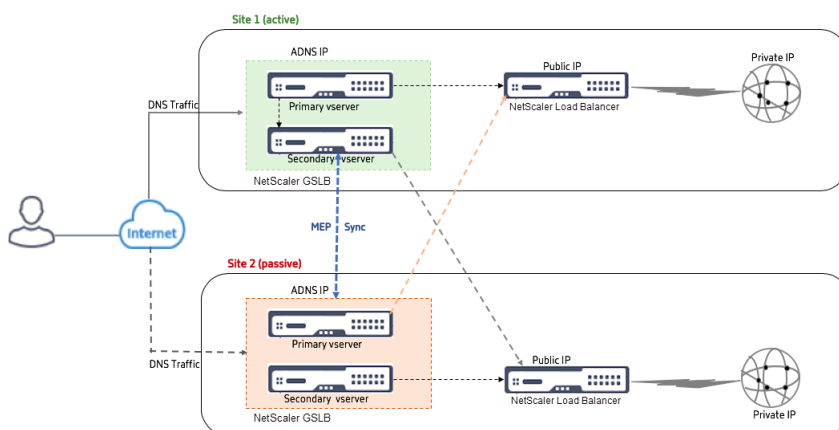

If Site 1 goes DOWN, Site 2 becomes operational.

When the client sends a DNS request, the request can land in any of the sites. However, the services are selected only from the active site (Site1) as long as it is UP.

Services from the passive site (Site 2) are selected only if the active site (Site 1) is DOWN.

Parent-child topology deployment using the MEP protocol

August 16, 2024

NetScaler GSLB provides global server load balancing and disaster recovery by creating mesh connections between all the involved sites and making intelligent load balancing decisions. Each site communicates with the others to exchange server and network metrics through the Metric Exchange Protocol (MEP), at regular intervals. However, with the increase in the number of peer sites, the volume of MEP traffic increases exponentially because of the mesh topology. To overcome this, you can use a parent-child topology. The parent-child topology also supports larger deployments. In addition to the 32 parent sites, you can configure 1024 child sites.

The GSLB parent-child topology is a two-level hierarchical design with the following characteristics:

- At the top level are parent sites, which have peer relationships with other parents.
- Each parent can have multiple child sites.
- Each parent site exchanges health information with its child sites and with other parent sites.
- A child site communicates only with its parent site.
- In a parent-child relationship for GSLB, only the parent site responds to ADNS queries. The child sites act as normal load balancing sites.
- Configure an ADNS service or DNS load balancing virtual server only in the parent site.
- A parent site can have a normal GSLB configuration, that is, services from local and all remote sites, but a child site can have local services only. Also, only the parent sites have GSLB virtual servers configured.

Note


- In a parent-child topology, the exchange of site metrics is initiated from the lower of two IP addresses. However, from NetScaler release 11.1 build 51.x, the parent sites initiate connections to the child sites, and not the opposite way. Because the parent sites have information about all the child sites in the GSLB setup.
- In a parent-parent connection, the exchange of site metrics is still initiated from the lower IP of two IP addresses.
- In a parent-child topology, GSLB services are not always required to be configured on a child site. However, if you have more configuration such as client authentication, client IP address

insertion, or other SSL-specific requirement, you must add an explicit GSLB service on the child site and configure it accordingly.

- In a parent-child topology, the parent site and the child site can be on different NetScaler software versions. However, to use the GSLB automaticConfigSync option to synchronize the configuration across the parent sites, all parent sites must be on the same NetScaler software versions. If you are not using the automaticConfigSync option, then the parent site and the child site can be on different NetScaler software versions but make sure that you are not using any of the new features in the latest release. This is also applicable, in general, to two NetScaler nodes participating in GSLB.

Basic parent-child topology


In the diagram, SiteP1 and SiteP2 are parent sites in a peer relationship. Site P1C1 and P2C1 are the child sites of P1 and P2 respectively.

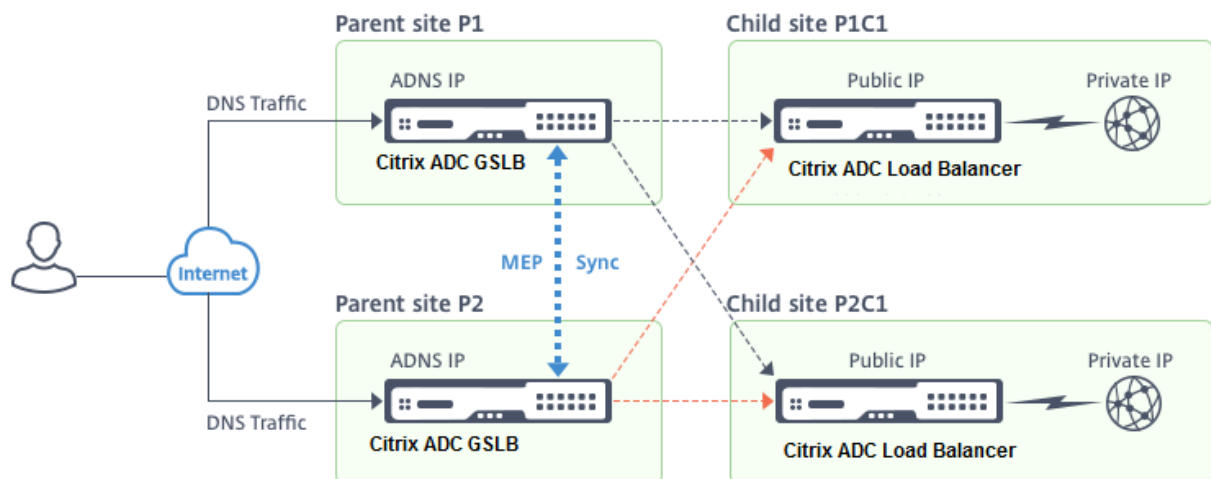

Setting up a parent-child configuration for GSLB

If you have a firewall configured at a GSLB site, make sure that port 3011 is open.

The following diagram displays a sample parent-child configuration.

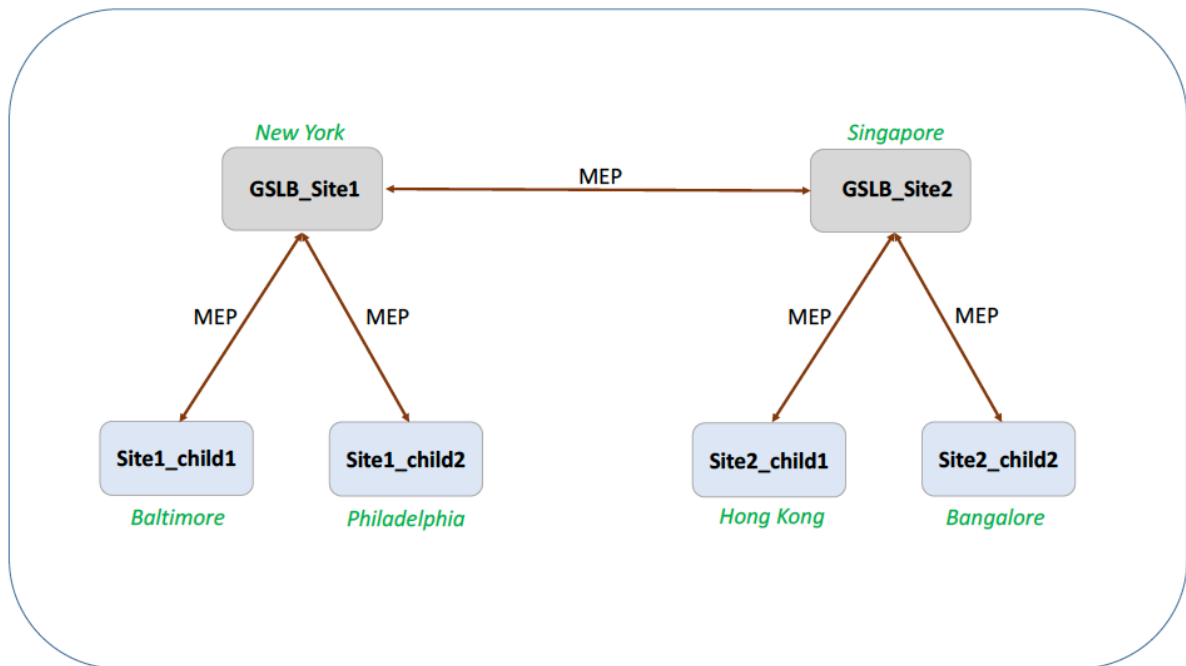

- The configuration of a child site includes the child site and its parent site, but no other parent or child sites.
- Network metrics, such as RTT and persistence session information, are synchronized only across the parent sites. Therefore, parameters such as `nwMetricExchange` and `sessionExchange` are disabled by default on all the child sites.
- To verify the correct parent-child configuration, check the states of all the GSLB services bound to the parent sites.

To set up a parent-child configuration for GSLB by using the CLI:

1. On each parent site, configure all its child sites, its peer parent sites, and the child sites associated with the peer sites:

Use the following command while adding a parent site:

```
1 add gslb site <siteName> <siteIPAddress> [-publicIP <ip_addr | ipv6_addr|*>]
```

Use the following command while adding a child site:

```
1 add gslb site <siteName> <siteIPAddress> [-publicIP <ip_addr | ipv6_addr|*>] [-parentSite <string>]
```

2. On the child sites, configure the child site and also associate the child site with its parent:

Note:
Configure the parent site and child site association correctly. For example, you must con-

figure Site1_child1 with GSLB_Site1. You cannot configure Site1_child1 with GSLB_Site2.

Use the following command to configure the parent site with which the child site is associated:

```
1 add gslb site <siteName> <siteIPAddress> [-publicIP <ip_addr |
  ipv6_addr|*>]
```

Use the following command to add a child site and associate it with its parent site:

```
1 add gslb site <siteName> <siteIPAddress> [-publicIP <ip_addr |
  ipv6_addr|*>] [-parentSite <string>]
```

For a complete example of a parent-child configuration, using the command line interface, see [Example of a Complete Parent-Child Configuration, Using the CLI](#).

Note

If the load balancing virtual server IP address is a private IP address and the public IP address is different from this IP address, you need to configure a GSLB service for the local load balancing virtual server on the child site. This is required for statistics collection between the parent and the child site.

On the child site, at the command prompt, type:

```
add gslb service <name> <private IP/lb vserver IP> http 80 -
  sitename <childsitename> -publicip <public IP of LB vserver>
```

Example:

```
add gslb service Service-GSLB 192.168.1.3 http 80 -GSLB_Site11
  site 11_lb1 172.16.1.1
```

Where 192.168.1.3 is a private IP address of the load balancing virtual server and 172.16.1.1 is a public IP address of the load balancing virtual server.

Backing up a parent site

Note: This feature was introduced in NetScaler release 11.1 build 51.x. To use the backup parent site topology, make sure that the parent site and the child sites are on NetScaler 11.1 build 51.x and later.

The backup parent site topology is useful in scenarios wherein many child sites are associated with a parent site. If this parent site goes DOWN, all of its child sites become unavailable. To prevent this, you can now configure a backup parent site to which the child sites can connect if the original parent site is DOWN. The parent site sends the backup parent list to the child sites through the MEP messages.

When a parent site is DOWN, the other parent sites in the GSLB get to know that a particular parent site is DOWN through MEP because MEP to that parent site is DOWN. The other parent sites in the

GSLB setup look up the backup chain of the peer parent. The parent site with the highest preference adopts the child sites of the parent that went DOWN. The new parent then initiates a connection with the child site. A child site can accept or reject the connection after evaluating its existing connections and the information in the backup list. It takes a few seconds for the backup parent to adopt the child sites.

When the original parent site is back UP, it tries to establish connections with its child sites that have migrated to a different parent. When a connection attempt is successful, the child site is reassigned to its original parent site.


Note:

- Only parent sites can be configured as backups, and this configuration can only be done at the parent site.
- All child sites use the backup parent set.
- Synchronization is done only on the parent sites. GSLB child sites' configuration is not affected by synchronization. This is because the parent site and the child site configurations are not identical. The child sites configuration consists only of its own and its parent site's details. Also, GSLB services are not always required to be configured in the child sites.

Consider the configuration shown in the following figure, in which:

- SiteP1, SiteP2, and SiteP3 are the parent sites.
- Child_site1, Child_site2, and Child_site3 are the child sites of SiteP1, SiteP2, and SiteP3 respectively.
- Backup parent sites;
 - SiteP1 backup parents - SiteP2 (higher preference) and SiteP3
 - SiteP2 backup parents –SiteP3 (higher preference) and SiteP1
 - SiteP3 backup parents –SiteP1 (higher preference) and SiteP2

Note: For illustration purposes, the figure shows only one backup parent for each parent site.

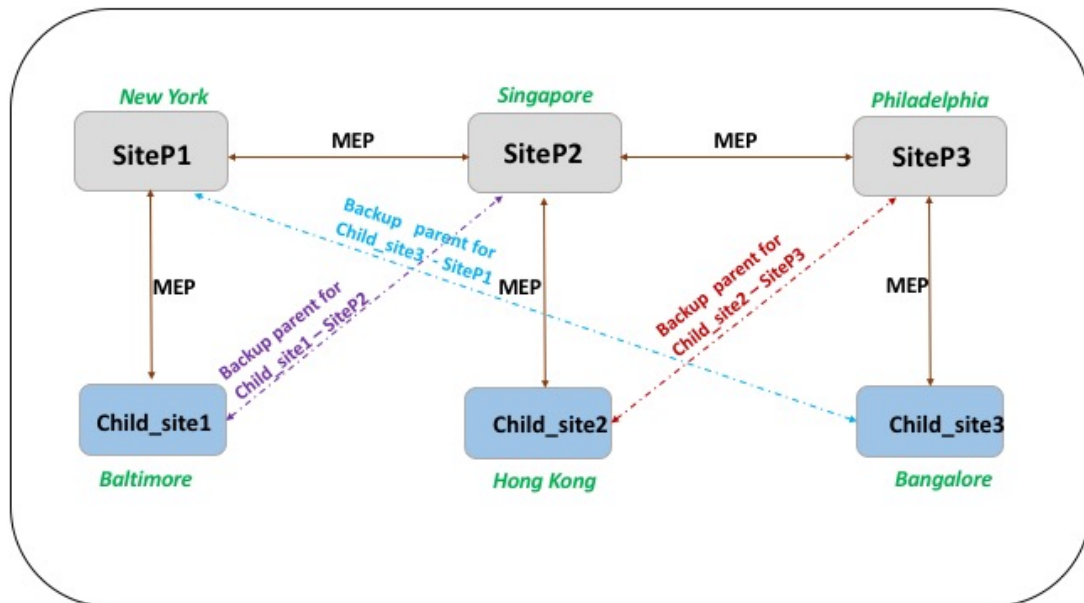

The following list summarizes the behavior of the parent and child sites under various scenarios:

- Scenario 1: SiteP1 goes DOWN.
 - SiteP2 and SiteP3 detect that SiteP1's MEP connection is DOWN. SiteP2 is higher in the preference list of backup parents for SiteP1, so it tries to initiate a connection to Child_site1. SiteP3 assumes that Child_site1 is now the child site of parent SiteP2.
 - SiteP2 sends Child_Site1 the list of SiteP1's backup parents (SiteP2 and SiteP3) to Child_site1. Child_site1 uses the list to decide whether to accept or reject the connection from SiteP2. It accepts the connection and becomes a child of SiteP2.
 - When SiteP1 is back UP, it sends Child_site1 a connection request. The new request takes precedence and Child_site 1 migrates to SiteP1.
- Scenario 2: Only the MEP connection between SiteP1 and SiteP2 has gone DOWN. Child_site1 rejects SiteP2's connection request, because its parent, SiteP1, is still UP.
- Scenario 3: SiteP3 and Child_Site1 detect that SiteP1 is DOWN, and the MEP connection between SiteP3 and SiteP2 is also DOWN. However, SiteP2 detects that SiteP1 is UP, and the MEP connection between SiteP1 and SiteP2 is UP.
 - SiteP2 does not take any action.
 - SiteP3 checks SiteP1's backup list and finds that SiteP2 has a higher preference than SiteP3. But SiteP2 is DOWN, so SiteP3 tries to establish a connection with Child_site1. Child_site1 has detected that SiteP1 is DOWN, so it accepts SiteP3's connection request.
 - Now the connection between SiteP1 and SiteP2 goes DOWN. SiteP2 checks SiteP1's backup list and finds itself as the most preferred backup, so it tries to connect to

Child_site1. Child_site1 evaluates the new connection request based on SiteP1's list and finds SiteP2 as the most preferred backup, so it migrates to SiteP2 from SiteP3.

To configure a backup parent site by using the command line interface

At the command prompt type:

```
1 set gslb site <sitename> -backupParentlist <bkp_site1> <bkp_site2> ... <bkp_site5>
```

<sitename> is the current parent site.

Example:

For the parent site (SiteP1), the sites (SiteP2 and SiteP3) are configured as the backup parent sites.

```
1 set gslb site SiteP1 -backupParentlist SiteP2 SiteP3
```

Note:

- You cannot add a new site as a backup parent. You must first add all the sites, and then configure the site as a backup parent.
- To remove a backup parent, you must use the unset command, which unsets all the sites that were previously configured as backup parent sites.

To configure a backup parent site by using the GUI

1. Navigate to **Configuration > Traffic Management > GSLB > Sites**.
2. Add a new site or select an existing site.
3. Choose the **Backup Parent Sites** option box while creating or configuring the GSLB site.

To change the parent site by using the CLI

At the command prompt type:

```
1 set gslb site <sitename> -parentSite <new_parentsitename>
```

Example:

```
1 set gslb site SiteP1 -parentSite SiteP5
```

To change the parent site by using the GUI

1. Navigate to **Configuration > Traffic Management > GSLB > Sites**.

2. Select the existing site and click **Edit**.
3. In the **Configure GSLB Site** page, select the new **Parent Site Name** and then click **OK**.

GSLB configuration entities

May 2, 2023

A GSLB configuration consists of a group of GSLB entities on each appliance in the configuration. These entities include the following:

- GSLB Sites
- GSLB Services
- GSLB Virtual Servers
- Load Balancing or Content Switching Virtual Servers
- ADNS Services
- DNS VIPs

GSLB Sites

A typical GSLB setup consists of data centers, each of which has various network appliances that may or may not be NetScaler appliances. The data centers are called GSLB sites. Each GSLB site is managed by a NetScaler appliance that is local to that site. Each of these appliances treats its own site as the local site and all other sites, managed by other appliances, as remote sites.

If the appliance that manages a site is the only NetScaler appliance in that data center, the GSLB site hosted on that appliance acts as a bookkeeping placeholder for auditing purposes, because no metrics can be collected. Typically, this happens when the appliance is used only for GSLB, and other products in the data center are used for load balancing or content switching.

Relationships among GSLB Sites

The concept of sites is central to NetScaler GSLB implementations. Unless otherwise specified, sites form a peer relationship among themselves. This relationship is used first to exchange health information and then to distribute load as determined by the selected algorithm. In many situations, however, a peer relationship among all GSLB sites is not desirable. Reasons for not having an all-peer implementation could be;

- To clearly separate GSLB sites. For example, to separate sites that participate in resolving DNS queries from the traffic management sites.

- To reduce the volume of Metric Exchange Protocol (MEP) traffic, which increases exponentially with an increasing number of peer sites.

These goals can be achieved by using parent and child GSLB sites.

GSLB Services

A GSLB service is usually a representation of a load balancing or content switching virtual server, although it can represent any type of virtual server. The GSLB service identifies the virtual server's IP address, port number, and service type. GSLB services are bound to GSLB virtual servers on the NetScaler appliances managing the GSLB sites. A GSLB service bound to a GSLB virtual server in the same data center is local to the GSLB virtual server. A GSLB service bound to a GSLB virtual server in a different data center is remote from that GSLB virtual server.

Note

Sites and services are inherently linked to indicate proximity between the two. That is, all services must belong to a site, and are assumed to be in the same location as the GSLB site for proximity purposes. Likewise, services and virtual servers are linked, so that the logic is linked to the resources that are available.

GSLB Virtual Servers

A GSLB virtual server has one or more GSLB services bound to it, and load balances traffic among those services. It evaluates the configured GSLB methods (algorithms) to select the appropriate service to which to send a client request. Because the GSLB services can represent either local or remote servers, selecting the optimal GSLB service for a request has the effect of selecting the data center that should serve the client request.

The domain for which global server load balancing is configured must be bound to the GSLB virtual server, because one or more services bound to the virtual server will serve requests made for that domain.

Unlike other virtual servers configured on a NetScaler appliance, a GSLB virtual server does not have its own virtual IP address (VIP).

Load Balancing or Content Switching Virtual Servers

A load balancing or content switching virtual server represents one or many physical servers on the local network. Clients send their requests to the load balancing or content switching virtual server's virtual IP (VIP) address, and the virtual server balances the load across the physical servers. After a

GSLB virtual server selects a GSLB service representing either a local or a remote load balancing or content switching virtual server, the client sends the request to that virtual server's VIP address.

For more information about load balancing or content switching virtual servers and services, see [Load Balancing](#) or [Content Switching](#).

ADNS Services

An ADNS service is a special kind of service that responds only to DNS requests for domains for which the NetScaler appliance is authoritative. When an ADNS service is configured, the appliance owns the ADNS service IP address and advertises it. Upon reception of a DNS request by an ADNS service, the appliance checks for a GSLB virtual server bound to that domain. If a GSLB virtual server is bound to the domain, it is queried for the best IP address to which to send the DNS response.

DNS VIPs

A DNS virtual IP is a virtual IP (VIP) address that represents a load balancing DNS virtual server on the NetScaler appliance. DNS requests for domains for which the NetScaler appliance is authoritative can be sent to a DNS VIP.

GSLB methods

December 9, 2024

Unlike traditional DNS servers that simply respond with the IP addresses of the configured servers, NetScaler configured for GSLB responds with the IP addresses of the services, as determined by the configured GSLB method. By default, the GSLB virtual server is set to the least connection method. If all GSLB services are down, the appliance responds with the IP addresses of all the configured GSLB services.

Note:

By default, the Empty-Down-Response feature is disabled, causing NetScaler to respond with the IP addresses of all services that are down.

GSLB methods are algorithms that the GSLB virtual server uses to select the best-performing GSLB service. After the host name in the Web address is resolved, the client sends traffic directly to the resolved service IP address.

NetScaler provides the following GSLB methods:

- Round Robin
- Least Connections
- Least Response Time
- Least Bandwidth
- Least Packets
- Source IP Hash
- Custom Load
- Round Trip Time (RTT)
- Static Proximity

For GSLB methods to work with a remote site, either MEP must be enabled or explicit monitors must be bound to the remote services. If MEP is disabled, RTT, Least Connections, Least Bandwidth, Least Packets, and Least Response Time methods default to Round Robin.

The Static Proximity and RTT load balancing methods are specific to GSLB.

Specifying a GSLB method other than static proximity or dynamic RTT

For information about the Round Robin, Least Connections, Least Response Time, Least Bandwidth, Least Packets, Source IP Hash, or Custom Load method, see [Load Balancing](#).

To change the GSLB method by using the CLI

At the command prompt, type:

```
1 set gslb vserver <name> -lbMethod GSLBMethod
```

Example:

```
1 set gslb vserver Vserver-GSLB-1 -lbMethod ROUNDROBIN
```

To change the GSLB method by using the GUI

1. Navigate to **Traffic Management > GSLB > Virtual Servers**.
2. In the details pane, select a GSLB virtual server and click **Open**.
3. In the Configure GSLB Virtual Server dialog box, on the Method and Persistence tab, under Method, select a method from the Choose Method list.
4. Click **OK**, and verify that the method you selected appears under Details at the bottom of the screen.

GSLB algorithms

May 2, 2023

The following algorithms are supported for GSLB.

- **Round Robin:** When a GSLB virtual server is configured to use the round robin method, it continuously rotates a list of the services that are bound to it. When the virtual server receives a request, it assigns the connection to the first service in the list, and then moves that service to the bottom of the list.
- **Least Response Time:** When the GSLB virtual server is configured to use the least response time method, it selects the service with the lowest value. Where, lowest value = current active connections X average response time.

You can configure this method for HTTP and Secure Sockets Layer (SSL) services only. The response time (also called Time to First Byte, or TTFB) is the time interval between sending a request packet to a service and receiving the first response packet from the service. The NetScaler appliance uses response code 200 to calculate TTFB.

- **Least Connections:** When a GSLB virtual server is configured to use the least connection GSLB algorithm (or method), it selects the service with the fewest active connections. This is the default method, because, in most circumstances, it provides the best performance.
- **Least Bandwidth:** A GSLB virtual server configured to use the least bandwidth method selects the service that is currently serving the least amount of traffic, measured in megabits per second (Mbps).
- **Least Packets:** A GSLB virtual server configured to use the least packets method selects the service that has received the fewest packets in the last 14 seconds.
- **Source IP Hash:** A GSLB virtual server configured to use the source IP hash method uses the hashed value of the client IPv4 or IPv6 address to select a service. To direct all requests from source IP addresses that belong to a particular network to a specific destination server, you must mask the source IP address. For IPv4 addresses, use the netMask parameter. For IPv6 addresses, use the v6NetMaskLength parameter.
- **Custom Load:** Custom load balancing is performed on server parameters such as CPU usage, memory, and response time. When using the custom load method, the NetScaler appliance usually selects a service that is not handling any active transactions. If all of the services in the GSLB setup are handling active transactions, the appliance selects the service with the smallest load. A special type of monitor, known as a load monitor, calculates the load on each service in the network. The load monitors do not mark the state of a service, but they do take services out of the GSLB decision when those services are not UP.

- **Static Proximity:** GSLB uses an IP-address based static proximity database to determine the proximity between the client's local DNS server and the GSLB sites. The NetScaler appliance responds with the IP address of a site that best matches the proximity criteria.
- **Round Trip Time:** RTT is a measure of time or delay in the network between the client's local DNS server and a data resource. The NetScaler appliance probes the client's local DNS server and gathers RTT metric information. The appliance then uses this metric to make its load balancing decision. Global server load balancing monitors the real-time status of the network and dynamically directs the client request to the data center with the lowest RTT value.
- **API Method:** GSLB uses a REST API to determine the best performing GSLB service. In the API method, when GSLB receives a DNS request from a client, it evaluates the request against the specified rule.

For more details, see [Load Balancing](#).

Static proximity

May 2, 2023

The static proximity method for GSLB uses an IP-address based static proximity database to determine the proximity between the client's local DNS server and the GSLB sites. The NetScaler appliance responds with the IP address of a site that best matches the proximity criteria.

If two or more GSLB sites at different geographic locations serve the same content, the NetScaler appliance maintains a database of IP address ranges and uses the database for decisions about the GSLB sites to which to direct incoming client requests.

For the static proximity method to work, you must either configure the NetScaler appliance to use an existing static proximity database populated through a location file or add custom entries to the static proximity database. After adding custom entries, you can set their location qualifiers. After configuring the database, you are ready to specify static proximity as the GSLB method.

For details about configuring static proximity, see [Configuring Static Proximity](#).

Dynamic round trip time method

May 2, 2023

Dynamic round trip time (RTT) is a measure of time or delay in the network between the client's local DNS server and a data resource. To measure dynamic RTT, the NetScaler appliance probes the client's

s local DNS server and gathers RTT metric information. The appliance then uses this metric to make its load balancing decision. Global server load balancing monitors the real-time status of the network and dynamically directs the client request to the data center with the lowest RTT value.

When a client's DNS request for a domain comes to the NetScaler appliance configured as the authoritative DNS for that domain, the appliance uses the RTT value to select the IP address of the best performing site to send it as a response to the DNS request.

The NetScaler appliance uses different mechanisms, such as ICMP echo request or reply (PING), UDP, and TCP to gather the RTT metrics for connections between the local DNS server and participating sites. The appliance first sends a ping probe to determine the RTT. If the ping probe fails, a DNS UDP probe is used. If that probe also fails, the appliance uses a DNS TCP probe.

These mechanisms are represented on the NetScaler appliance as Load Balancing Monitors and are easily identified due to their use of the "ldns" prefix. The three monitors, in their default order, are:

- `ldns-ping`
- `ldns-dns`
- `ldns-tcp`

These monitors are built into the appliance and are set to safe defaults. But they are customizable like any other monitor on the appliance.

You can change the default order by setting it explicitly as a GSLB parameter. For example, to set the order to be the DNS UDP query followed by the PING and then TCP, type the following command:

```
1 set gslb parameter -ldnsprobeOrder DNS PING TCP
```

Unless they have been customized, the NetScaler appliance performs UDP and TCP probing on port 53, however unlike regular load balancing monitors the probes need not be successful to provide valid RTT information. ICMP port unavailable messages, TCP Resets and DNS error responses, which would usually constitute a failure are all acceptable for calculating the RTT value.

Once the RTT data has been compiled, the appliance uses the proprietary metrics exchange protocol (MEP) to exchange RTT values between participating sites. After calculating RTT metrics, the appliance sorts the RTT values to identify the data center with the best (smallest) RTT metric.”

If RTT information is not available (for example, when a client's local DNS server accesses the site for the first time), the NetScaler appliance selects a site by using the round robin method and directs the client to the site.

To configure the dynamic method, you configure the site's GSLB virtual server for dynamic RTT. You can also set the interval at which local DNS servers are probed to a value other than the default.

Configure a GSLB virtual server for dynamic RTT

To configure a GSLB virtual server for dynamic RTT, you specify the RTT load balancing method.

The NetScaler appliance regularly validates the timing information for a given local server. If a change in latency exceeds the configured tolerance factor, the appliance updates its database with the new timing information and sends the new value to other GSLB sites by performing a MEP exchange. The default tolerance factor is 5 milliseconds (ms).

The RTT tolerance factor must be the same throughout the GSLB domain. If you change it for a site, you must configure identical RTT tolerance factors on all NetScaler appliances deployed in the GSLB domain.

To configure a GSLB virtual server for dynamic RTT by using the command line interface

At the command prompt, type:

```
1 set gslb vserver <name> -lbMethod RTT -tolerance <value>
```

Example:

```
1 set gslb vserver Vserver-GSLB-1 -lbMethod RTT -tolerance 10
```

To configure a GSLB virtual server for dynamic RTT by using the configuration utility

Navigate to **Traffic Management > GSLB > Virtual Servers** and double-click the virtual server.

Set the probing interval of local DNS servers

The NetScaler appliance uses different mechanisms, such as ICMP echo request or reply (PING), TCP, and UDP to obtain RTT metrics for connections between the local DNS server and participating GSLB sites. By default, the appliance uses a ping monitor and probes the local DNS server every 5 seconds. The appliance then waits 2 seconds for the response. If a response is not received in that time, it uses the TCP DNS monitor for probing.

However, you can modify the time interval for probing the local DNS server to accommodate your configuration.

To modify the probing interval by using the command line interface

At the command prompt, type:


```
1 set lb monitor <monitorName> <type> -interval <integer> <units> -
  resptimeout <integer> <units>
```

Example:

```
1 set lb monitor ldns-tcp LDNS-TCP -interval 10 sec -resptimeout 5 sec
```

To modify the probing interval by using the configuration utility

Navigate to **Traffic Management > Load Balancing > Monitors**, and double-click the monitor that you want to modify (for example, ping).

API method

May 15, 2023

You can use the API method to determine the best performing GSLB service. The API method for GSLB uses a REST API to determine the best performing GSLB service.

In the API method, when GSLB receives a DNS request from a client, it evaluates the request against the specified rule. If GSLB encounters the HTTP callout expression, SYS.HTTP_CALLOUT(<name>), it invokes a REST API request to an HTTP callout agent. GSLB uses the response from the HTTP callout agent to decide the best performing service. In the DNS response, GSLB returns the IP address of the best performing service, back to the client.

To configure a GSLB API method by using the CLI

Perform the following to configure the GSLB API method:

1. Configure an HTTP callout.

For more information, see [Configuring an HTTP callout](#).

At the command prompt, type:

```
1 add policy httpCallout <name> [-IPAddress <ip_addr|ipv6_addr>] [-
  port <port>] [-vServer <string>] [-returnType <returnType>] [-
  httpMethod (GET | POST)] [-hostExpr <string>] [-urlStemExpr <
  string>] [-headers <name(value)> ...] [-parameters <name(value)
  > ...] [-bodyExpr <string>] [-fullReqExpr <string>] [-scheme (
  http | https)] [-resultExpr <string>] [-cacheForSecs <secs>] [-
  comment <string>]
```

Example:

```
1 add policy httpCallout GSLB_Method_API -IPAddress 208.111.39.237 -
  port 443 -returnType TEXT -hostExpr "\ hopx.gslb.com\ " -
  urlStemExpr "\ /zones/1/customers/92395/apps/6/decision\ "
  -headers Authorization(" Basic 19fbe6db-4332-4e3f-a8bc-
  ee47bdc726f8") -parameters ip(DNS.REQ.OPT.ECS.IP.
  TYPECAST_TEXT_T ALT CLIENT.IP.SRC.TYPECAST_TEXT_T) -scheme
  https -resultExpr " HTTP.RES.BODY(HTTP.RES.CONTENT_LENGTH).
  XPATH_JSON(xp%/providers/Val[1]/provider%) " -cacheForSecs 30
```

2. Specify the API method for load balancing. GSLB evaluates the DNS request against the specified rule.

At the command prompt, type:

```
1 add gslb vserver <name> <serviceType> [-lbMethod <lbMethod>] [-
  backupLBMethod <backupLBMethod>] -rule <expression>
```

Example:

```
1 add gslb vserver vs1 HTTP -lbMethod API -backupLBMethod ROUNDROBIN
  -rule " sys.http_callout(GSLB_Method_API) "
```

Sample configuration for integrating GSLB and ITM using API as the LB method

This configuration allows GSLB to use the internet visibility aspects of the Citrix intelligent traffic management (ITM) to determine the best performing GSLB service.

```
1 /* Enable ns features */
2
3 enable ns feature lb gslb cs
4
5 /* This is a named expression that is used in the HTTP callout, used
   for result expression. */
6
7 add policy expression exp1 "HTTP.RES.BODY(HTTP.RES.CONTENT_LENGTH).
  XPATH_JSON(xp%/providers/Val[1]/provider%)"
8
9 /* This is a named expression that is used in HTTP callout, used for
   host expression. */
10
11 add policy expression exp2 "\"hopx.cedexis.com\""
12
13 /* This is the HTTP callout configured to request the ITM for the GSLB
   decision. */
14
15 add policy httpCallout ITM_OpenMix_API -IPAddress 208.111.39.237 -port
  80 -returnType TEXT -hostExpr exp2 -urlStemExpr "\ /zones/1/
  customers/61770/apps/3/decision\" -headers Authorization("Basic
  a310697a-1d69-48bf-8f36-55742a8e894e") -parameters ip(DNS.REQ.OPT.
```

```
ECS.IP.TYPECAST_TEXT_T ALT CLIENT.IP.SRC.TYPECAST_TEXT_T) -scheme
http -resultExpr exp1 -cacheForSecs 30
16
17 /* Add service 1 */
18 add service sg1 98.136.103.24 HTTP 80 -gslb NONE -maxClient 0 -maxReq 0
    -cip DISABLED -usip NO -useproxyport YES -sp OFF -cltTimeout 180 -
    svrTimeout 360 -CKA NO -TCPB NO -CMP NO
19
20 /* Add service 2 */
21 add service sg2 172.217.194.113 HTTP 80 -gslb NONE -maxClient 0 -maxReq
    0 -cip DISABLED -usip NO -useproxyport YES -sp OFF -cltTimeout 180
    -svrTimeout 360 -CKA NO -TCPB NO -CMP NO
22
23 /* Add ADNS service */
24
25 add service adns1 10.102.217.106 ADNS 53 -gslb NONE -maxClient 0 -
    maxReq 0 -cip DISABLED -usip NO -useproxyport NO -sp OFF -cltTimeout
    120 -svrTimeout 120 -CKA NO -TCPB NO -CMP NO
26
27 /* Add lb vserver 1 for service 1 */
28 add lb vserver lbvs1 HTTP 10.102.217.116 80 -persistenceType NONE -
    cltTimeout 180
29
30 /* Add lb vserver 2 for service 2 */
31 add lb vserver lbvs2 HTTP 10.102.217.117 80 -persistenceType NONE -
    cltTimeout 180
32
33 /* Bind service 1 to lb vserver 1 */
34
35 bind lb vserver lbvs1 sg1
36
37 /* Bind service 2 to lb vserver 2 */
38
39 bind lb vserver lbvs2 sg2
40
41 /* Configure API GSLB method on GSLB virtual server to call the HTTP
    callout. This HTTP callout requests the ITM for the GSLB decision
    and returns GSLB service name, which should serve the request. */
42
43 add gslb vserver vs1 HTTP -lbMethod API -backupLBMethod ROUNDROBIN -
    rule "sys.http_callout(ITM_OpenMix_API)" -tolerance 0 -ECS ENABLED
44
45 /* Add GSLB site */
46
47 add gslb site site1 10.102.217.106 -publicIP 10.102.217.106
48
49 /* Add GSLB service 1 */
50
51 add gslb service aws_ec2_ap_south_1_asia_pacific_mumbai_1
    10.102.217.116 HTTP 80 -publicIP 10.102.217.116 -publicPort 80 -
    maxClient 0 -siteName site1 -sitePersistence HTTPRedirect -
    sitePrefix gs2. -cltTimeout 180 -svrTimeout 360 -downStateFlush
    ENABLED
```

```
52
53 /* Add GSLB service 2 */
54
55 add gslb service aws_ec2_ap_south_1_asia_pacific_mumbai 10.102.217.117
    HTTP 80 -publicIP 10.102.217.117 -publicPort 80 -maxClient 0 -
    siteName site1 -sitePersistence HTTPRedirect -sitePrefix gsl. -
    cltTimeout 180 -svrTimeout 360 -downStateFlush ENABLED
56
57 /* Bind the GSLB service 1 to GSLB server 1 */
58 bind gslb vserver vs1 -serviceName
    aws_ec2_ap_south_1_asia_pacific_mumbai_1
59
60 /* Bind the GSLB service 2 to GSLB server 2 */
61 bind gslb vserver vs1 -serviceName
    aws_ec2_ap_south_1_asia_pacific_mumbai
62
63 /* Bind a domain name to the GSLB virtual server */
64 bind gslb vserver vs1 -domainName testruchit104.com -TTL 5
```

Configure static proximity

May 2, 2023

For the static proximity method to work, you must either configure the NetScaler appliance to use an existing static proximity database populated through a location file or add custom entries to the static proximity database. After adding custom entries, you can set their location qualifiers. After configuring the database, you are ready to specify static proximity as the GSLB method.

This document includes the following information:

- [Adding a Location File to Create a Static Proximity Database](#)
- [Adding Custom Entries to a Static Proximity Database](#)
- [Setting the Location Qualifiers](#)
- [Specifying the Proximity Method](#)
- [Synchronizing GSLB Static Proximity Database](#)

Add a location file to create a static proximity database

December 27, 2024

A static proximity database is a UNIX-based ASCII file. Entries added to this database from a location file are called static entries. Only one location file can be loaded on a NetScaler appliance. Adding a new location file overrides the existing file. The number of entries in the static proximity database is limited by the configured memory in the NetScaler appliance.

The static proximity database can be created in the default format or in a format derived from commercially configured third party databases (such as www.maxmind.com and www.ip2location.com).

The NetScaler appliance includes the following two IP geolocation database files. These are GeoLite2 files, published by MaxMind.

- Citrix_Netscaler_InBuilt_GeoIP_DB_IPv4
- Citrix_Netscaler_InBuilt_GeoIP_DB_IPv6

These database files are available in a format supported by the NetScaler appliance in the directory `/var/netscaler/inbuilt_db`.

You can use these IP geolocation databases as the location file for the static proximity based GSLB method, or in location based policies.

These databases vary in the details that they provide. There is no strict enforcement of the database file format, except that the default file has format tags. The database files are ASCII files that use a comma as the field delimiter. There are differences in the structure of fields and the representation of IP addresses in the locations.

The format parameter describes the structure of the file to the NetScaler appliance. Specifying an incorrect value for the format option can corrupt the internal data.

NetScaler can continue using the existing location database file until the new location file is fully implemented. This enhancement ensures uninterrupted services and significantly reduces the risk of disruptions. To monitor the status of the location database file, use the `Show locationfile` command, which provides real-time information about the location database file state.

Notes:

- After an upgrade, if the `/var/netscaler/inbuilt_db/` directory contains the database file (Citrix_Netscaler_InBuilt_GeoIP_DB.csv) from the earlier NetScaler software versions, the file is retained.
- The default location of the database file is `/var/netscaler/locdb`, and on a high availability (HA) setup, an identical copy of the file must be present in the same location on both NetScaler appliances.
- If the location file is stored in a location other than the default location, then specify the path of location database file including directory name. For example, `var/netscaler/inbuilt_db/Citrix_Netscaler_InBuilt_GeoIP_DB_IPv6`.

- For admin partitions, the default path is: `/var/partitions/<partitionName>/netscaler/locdb`.
- Some databases provide short country names according to ISO-3166 and long country names as well. The NetScaler uses short names when storing and matching qualifiers.
- To create a static proximity database, log on to the UNIX shell of the NetScaler appliance and use an editor to create a file with the location details in one of the NetScaler supported formats.
- NetScaler appliance is shipped with the GeoLite2 database (IPv4 and IPv6) but NetScaler does not maintain or update the MaxMind GeoLite2 database regularly. If necessary, you can get the GeoLite2 database from <https://www.maxmind.com> and convert it to NetScaler database format. For more information, see [Script to convert MaxMind GeoLite2 database format to NetScaler database format](#).

To add a static location file by using the CLI

At the command prompt, type:

```
1 add locationFile <locationFile> [-format <format>]
2 - show locationFile
```

Example:

```
1 add locationFile /var/netscaler/locdb/nsgeo1.0 -format netscaler
2 Done
3
4 show locationFile
5 Location File: /var/netscaler/locdb/nsgeo1.0
6 Format: netscaler
7 Done
8 >
```

Example:

```
1 add locationFile /var/netscaler/inbuilt_db/
   Citrix_Netscaler_InBuilt_GeoIP_DB_IPv4 -format netscaler
2
3 add locationFile6 /var/netscaler/inbuilt_db/
   Citrix_Netscaler_InBuilt_GeoIP_DB_IPv6 -format netscaler
```

When replacing the existing location database file with the new one, the `show location file` command displays the status of the new location database file along with the status of the existing location database file. In the preceding example, the new `Citrix_Netscaler_InBuilt_GeoIP_DB_IPv6_1` location database file replaces the existing `Citrix_Netscaler_InBuilt_GeoIP_DB_IPv6` location database file.

Example:

```
1 add locationFile6 /var/netscaler/inbuilt_db/
   Citrix_Netscaler_InBuilt_GeoIP_DB_IPv6_1 -format netscaler
```

```

2 Done
3
4 show locationfile
5
6 Location File IPv6: Citrix_Netscaler_InBuilt_GeoIP_DB_IPv6
7 Location File Format: netscaler
8 Status: In Progress
9
10 Previous Location File IPv4: Citrix_Netscaler_InBuilt_GeoIP_DB_IPv4
11 Previous File Format: netscaler
12 Status: Active
13 Done

```

To add a static location file by using the GUI:

1. Navigate to **AppExpert > Location**, click the **Static Database** tab.
2. Click **Add** to add a static location file.

You can view an imported location file database by using the **View Database** dialog box in the configuration utility. There is no CLI equivalent.

To view a static location file by using the GUI:

1. Navigate to **AppExpert > Location**, click the **Static Database** tab.
2. Select a static location file, and from the **Action** list, click **View Database**.

To convert a location file into the NetScaler format:

By default, when you add a location file, it is saved in the NetScaler format. You can convert a location file of other formats into the NetScaler format.

Note:

The `nsmmap` option can be accessed only from the command line interface. The conversion is possible only into the NetScaler format.

To convert the static database format, at the CLI prompt, type the following command:

```
1 nsmmap -f <inputFileFormat> -o <outputFileName> <inputFileName>
```

Example:

```
1 nsmmap -f ip-country-region-city -o nsfile.ns ip-country-region-city.
   CSV
```

Script to convert MaxMind GeoLite2 database format to NetScaler database format

MaxMind GeoIP database cannot be used directly in NetScaler. The MaxMind GeoIP database must be converted into NetScaler format and then loaded for IP location detection in the GSLB static proximity

method and other features like policies.

You can use a script to convert the GeoLite2 database format to NetScaler database format. This script can be used to convert both IPv4 and IPv6 files.

The script is available in the location: <https://github.com/citrix/MaxMind-GeoIP-Database-Conversion-Citrix-ADC-Format>

Steps to convert GeoIP2 database to NetScaler format

1. Download the GeoLite2 City or GeoLite2 Country database in .csv format from <https://dev.maxmind.com/geoip/geoip2/geolite2/>.

2. Copy the file in a NetScaler directory (say /var). Unzip the file using the following shell command, which would create a directory with the same name.

```
tar -xf <filename>
```

3. Download the script Convert_GeoIPDB_To_Netscaler_Format.pl from <https://github.com/citrix/MaxMind-GeoIP-Database-Conversion-Citrix-ADC-Format> and copy it to the directory created in step #2.

4. To check the acceptable options for the script execution, run the following command:

```
perl Convert_GeoIPDB_To_Netscaler_Format.pl -help
```

Various options available are:

- `<filename>` IPv4 output file. Default output file name: Netscaler_Maxmind_GeoIP_DB_IPv4.csv
- `-p <filename>` IPv6 output file. Default output file name: Netscaler_Maxmind_GeoIP_DB_IPv6.csv
- `-logfile <filename>` File containing list of events/messages
- `-debug` Prints all the messages to STDOUT

5. Run the following command to convert the GeoLite2 database format to NetScaler database format.

```
perl Convert_GeoIPDB_To_Netscaler_Format.pl
```

Note:

The operation can take up to 5 minutes.

The default file names used in the script are that of the MaxMind GeoLite2 City based database. If you have downloaded the GeoLite2 Country database, you must provide the input file names accordingly as listed.

- `-b <filename>` name of IPv4 block file to be converted. Default file name: GeoLite2-City-Blocks-IPv4.csv

- `-i <filename>` name of IPv6 block file to be converted. Default file name: GeoLite2-City-Blocks-IPv6.csv
- `-l <filename>` name of location file to be converted. Default file name: GeoLite2-City-Locations-en.csv

Example:

```
1 perl Convert_GeoIPDB_To_Netscaler_Format.pl -b GeoLite2-City-Blocks-IPv4.csv -i GeoLite2-City-Blocks-IPv6.csv -l GeoLite2-City-Locations-en.csv
```

The following are the output files generated after running the script.

- Netscaler_Maxmind_GeoIP_DB_IPv4.csv
 - Netscaler_Maxmind_GeoIP_DB_IPv6.csv
6. Once the conversion of the database into NetScaler format is complete, use the following command to start using it.

```
add locationFile <locationFile>
```

Add a third-party static database file on a NetScaler appliance

Perform the following steps to add a third-party static database file on a NetScaler appliance.

1. Obtain the location database file from a third-party vendor, such as www.maxmind.com.

Notes:

If you download the location database file from www.maxmind.com, you can use the readily available script to convert it into NetScaler database format. For information on using the script, see [Script to convert MaxMind GeoLite2 database format to NetScaler database format](#).

For location databases downloaded from other third-party vendors, you must convert them to NetScaler database format before adding them to NetScaler.

2. Run the following command to add a static location file:

```
1 add location file <locationfile Name>
```

Notes:

- If the location database file is not placed in the default `/var/netscaler/locdb` location, then the `<locationfile Name>` must contain the location of the file along with the file name.
- Before you run the `add location file <locationfile Name>` command:

- Make sure that the location database file is present in one of the directories of NetScaler.
- Run the `sync HA files` command on the high availability setup and the `sync cluster files` command in a cluster setup. These commands ensure that the location database file is copied to the secondary appliance of the high availability pair and peer nodes of the cluster.

3. Run the following command to ensure that the location database is loaded:

```
1 show locationParameter
```

This command displays location parameters related to static proximity-based load balancing. A maximum of 10M entries can be loaded. When the database loading is in progress, the command displays `Loading: In progress`. After the loading is completed, the command displays `Loading: Idle`.

4. Run the following command to view the location of the GSLB site:

```
1 show gslb service
```

Note

- If the database is loaded correctly, the location of the GSLB sites is automatically populated in the database.
- You can specify only one location file in the configuration on the appliance.
- If no match is found for an incoming IP address, the request is processed using the Round Robin method.

5. Run the following command to configure the GSLB method on the appliance:

```
1 set gslb vserver GSLBVserverName -lbMethod MethodType
```

Add custom entries to a static proximity database

February 17, 2023

Custom entries take precedence over static entries in the proximity database. You can add a maximum of 3000 custom entries. For a custom entry, denote all omitted qualifiers with an asterisk (*) and, if qualifiers have a period or space in the name, enclose the parameter in double quotation marks. The first 31 characters are evaluated for each qualifier. You can also provide the longitude and latitude of the geographical location of the IP address-range for selecting a service with the static proximity GSLB method.

To add custom entries by using the command line interface

At the command prompt, type the following commands to add a custom entry to the static proximity database and verify the configuration.

```
1 add location < IPfrom> < IPto> <preferredLocation> [-longitude <integer>
  >[-latitude <integer>]]
2 show location
```

Example:

```
1 > add location 192.168.100.1 192.168.100.100 *.us.ca.mycity
2 Done
```

```
1 > show location
2 1) IP from 192.168.100.1      IP to 192.168.100.100
3 Continent.Country.REgion.City.ISP.Organization =
4 North America.us.ca.mycity.*.
5 Coordinated: Not specified
6 Done
```

Parameters for adding custom entries

- **From IP Address:** First IP address in the range that is in dotted decimal notation.
This is a mandatory argument.
- **To IP Address:** Last IP address in the range that is in dotted decimal notation.
This is a mandatory argument.
- **Location Name:** String of qualifiers that is in dotted notation describes the geographical location of the IP address range. Each qualifier is more specific than the one that precedes it, as in continent.country.region.city.isp.organization. For example, "NA.US.CA.San Jose.ATT.citrix".
This is a mandatory argument. Maximum Length: 197

Note:

A qualifier that includes a dot (.) or space () must be enclosed in double quotation marks.

- **longitude:** Numerical value that is in degrees specifies the longitude of the geographical location of the IP address-range.
Maximum value: 180
- **latitude:** Numerical value that is in degrees specifies the latitude of the geographical location of the IP address-range.
Maximum value: 180

Note:

Longitude and latitude parameters are used for selecting a service with the static proximity GSLB method. If they are not specified, selection is based on the qualifiers specified for the location.

To add custom entries by using the configuration utility

Navigate to **AppExpert > Location**, click the **Custom Entries** tab, and add the custom entries.

Set location qualifiers

May 2, 2023

The database used to implement static proximity has the location of the GSLB sites. Each location has an IP address range and up to six qualifiers for that range. The qualifiers are literal strings and are compared in a prescribed order at run time. Every location must have at least one qualifier. The qualifier labels define the meaning of the qualifiers (context), which are user defined. NetScaler has two built-in contexts:

Geographic context, which has the following qualifier labels:

- Qualifier 1 –“Continent”
- Qualifier 2 –“Country”
- Qualifier 3 –“State”
- Qualifier 4 –“City”
- Qualifier 5 –“ISP”
- Qualifier 6 –“Organization”

Custom entries, which have the following qualifier labels:

- Qualifier 1 –“Qualifier 1”
- Qualifier 2 –“Qualifier 2”
- Qualifier 3 –“Qualifier 3”
- Qualifier 4 –“Qualifier 4”
- Qualifier 5 –“Qualifier 5”
- Qualifier 6 –“Qualifier 6”

If the geographic context is set with no Continent qualifier, Continent is derived from Country. Even the built-in qualifier labels are based on the context, and the labels can be changed. These qualifier labels specify the locations mapped with the IP addresses used to make static proximity decisions.

To perform a static proximity-based decision, the NetScaler appliance compares the location attributes (qualifiers) derived from the IP address of the local DNS server resolver with the location attributes of the participating sites. If only one site matches, the appliance returns the IP address of that site. If there are multiple matches, the site selected is the result of a round robin on the matching GSLB sites. If there is no match, the site selected is a result of a round robin on all configured sites. A site that does not have any qualifiers is considered a match.

The GEO rules for location-based policy expression allow you to check wildcard matches. This feature checks whether wildcard qualifiers match any other qualifier including non-wildcard or not. The wildcard match is done by using the `matchWildcardtoany` attribute that is added to the `set locationParameter` command.

The `matchWildcardtoany` attribute can be set to the following values:

- **Yes:** Wildcard qualifiers match any other qualifiers.
- **No:** Wildcard qualifiers do not match non-wildcard qualifiers but match other wildcard qualifiers. The default option is **No**.
- **Expression:** Wildcard qualifiers in an expression match any qualifier in an LDNS location but wildcard qualifiers in the LDNS location do not match non-wildcard qualifiers in an expression.

Example:

```
1 add dns policy1 "CLIENT.IP.SRC.MATCHES_LOCATION(\"Continent.country
  *.*.*.* \")" <action>
```

To set the location parameters by using the CLI

At the command prompt, type:

```
1 set locationparameter -context <context> -q1label <string> [-q2label <
  string>] [-q3label <string>] [-q4label <string>] [-q5label <string>]
  [-q6label <string>] -matchWildcardtoany [Yes | No | Expression]
```

Example:

```
1 set locationparameter -context custom -q1label asia -matchWildcardtoany
  Yes
```

To set the location parameters by using the GUI

1. Navigate to **Traffic Management > GSLB > Database and Entries**.
2. Under **Settings**, click **Change Location Parameters**.
3. In the **Configure Location Parameters** page, set the location parameters.

Configuration example (using CLI)

Consider the following network setup:

- GSLB virtual server name: gv1
- GSLB virtual server IP address: 1.1.1.2
- GSLB Service: gsvc1 bound to gv1
- Location DB file name: sample.csv
- Geolocation qualifiers: Qualifiers 1 and 2 are configured. Rest is set to match the wildcard.
 - Qualifier 1–Asia
 - Qualifier 2–IR
 - Qualifier 3-*
 - Qualifier 4-*
 - Qualifier 5-*
 - Qualifier 6-*
- DNS Policy-The policy, pol1, is set to drop the packets in if there is a match.

Set the location parameter and configure the DNS policy as follows:

```

1 set locationParameter -q2label Country_Code -q3label Subdivision_1_Name
   -q4label Subdivision_2_Name -q5label City
2
3 add locationFile "/var/netscaler/inbuilt_db/sample.csv"
4
5 add gslb vserver gv1 HTTP -backupLBMethod ROUNDROBIN -tolerance 0
6
7 add dns policy pol1 "CLIENT.IP.SRC.MATCHES_LOCATION(\"Asia.IR
   *.*.*.*\")||CLIENT.IP.SRC.MATCHES_LOCATION(\"Asia.SY.*.*.*\")||
   CLIENT.IP.SRC.MATCHES_LOCATION(\"Asia.SD.*.*.*\")||CLIENT.IP.SRC.
   MATCHES_LOCATION(\"Asia.KP.*.*.*\")||CLIENT.IP.SRC.
   MATCHES_LOCATION(\"North America.CU.*.*.*\")||CLIENT.IP.SRC.
   MATCHES_LOCATION(\"Europe.UA.Crimea.*.*.*\")" dns_default_act_Drop
8
9 bind dns global pol1 1 -gotoPriorityExpression 65535 -type REQ_DEFAULT
10
11 add gslb service gsvc1 1.1.1.2 HTTP 80 -publicIP 1.1.1.2 -publicPort 80
   -maxClient 0 -healthMonitor NO -siteName s1 -cltTimeout 180 -
   svrTimeout 360 -downStateFlush ENABLED
12
13 bind gslb vserver gv1 -serviceName gsvc1
14
15 bind gslb vserver gv1 -domainName www.gslbnew.com -TTL 5

```

Add the following client entries in the location DB file. In this example, the location DB file name is sample.csv:

```

1 10.106.24.170,10.106.24.190,,,,,,8.0000,47.0000

```

```

2
3 10.102.82.170,10.102.82.190,Asia,,,,,-73.9924,40.7553
4
5 10.106.24.140,10.106.24.150,,IR,,,,,51.4231,35.6961

```

According to the preceding configuration, the clients between 10.106.24.170 and 10.106.24.190 do not have any wildcard qualifiers defined. The clients between 10.106.24.140 and 10.106.24.150, have qualifier 2 as IR.

Set the match wildcard qualifier to NO:

```
1 set locationparameter -matchWildcardtoany no
```

When the match wildcard qualifier is set to NO, the wildcard qualifiers match only the defined wildcard qualifiers. It does not match any other non-wildcard qualifier.

- The DNS queries coming 10.106.24.147 match the defined wildcard qualifier (qualifier 2 = IR). Therefore, the DNS policy comes into effect and drops the queries.

When you run the `dig @10.102.82.13 www.gslbnew.com` command on the 10.106.24.147 client, the output shows that servers were not reachable.

```

1 root@ns# dig @10.102.82.13 www.gslbnew.com
2
3 ; <<>> DiG 9.11.23 <<>> @10.102.82.13 www.gslbnew.com
4 ; (1 server found)
5 ;; global options: +cmd
6 ;; connection timed out; no servers could be reached

```

- The DNS queries coming from 10.106.24.180, do not match the defined qualifiers. The DNS policy does not come into effect and the queries are processed.

Run the `dig @10.102.82.13 www.gslbnew.com` command on the 10.106.24.180 client. The output shows the GSLB virtual server's IP address.

```

1 root@ns# dig @10.102.82.13 www.gslbnew.com
2
3 ; <<>> DiG 9.11.23 <<>> @10.102.82.13 www.gslbnew.com
4 ; (1 server found)
5 ;; global options: +cmd
6 ;; Got answer:
7 ;; ->>HEADER<<- opcode: QUERY, status: NOERROR, id: 64265
8 ;; flags: qr aa rd ad; QUERY: 1, ANSWER: 1, AUTHORITY: 0,
9 ;; ADDITIONAL: 1
10 ;; WARNING: recursion requested but not available
11 ;; OPT PSEUDOSECTION:
12 ;; EDNS: version: 0, flags:; udp: 1280
13 ;; QUESTION SECTION:
14 ;;www.gslbnew.com. IN A
15

```

```

16  ;; ANSWER SECTION:
17  www.gslbnew.com.      5   IN   A    1.1.1.2
18
19  ;; Query time: 12 msec
20  ;; SERVER: 10.102.82.13#53(10.102.82.13)
21  ;; WHEN: Tue Mar 29 22:46:40 UTC 2022
22  ;; MSG SIZE rcvd: 60

```

Set the match wildcard qualifier to Yes:

```
1 set locationparameter -matchWildcardtoany yes
```

When the match wildcard qualifier is set to yes, the wildcard qualifiers match any wildcard qualifier (defined and non-wildcard qualifier).

- The DNS queries coming 10.106.24.147 match the defined qualifier (qualifier 2 = IR). Therefore, the DNS policy comes into effect and drops the queries.

Run the `dig @10.102.82.13 www.gslbnew.com` command on the 10.106.24.147 client. The output shows that servers were not reachable.

```

1  root@ns# dig @10.102.82.13 www.gslbnew.com
2
3  ; <<>> DiG 9.11.23 <<>> @10.102.82.13 www.gslbnew.com
4  ; (1 server found)
5  ;; global options: +cmd
6  ;; connection timed out; no servers could be reached

```

- The queries coming from 10.106.24.180, match the non-wildcard qualifiers. Therefore the DNS policy comes into effect and drops the queries.

Run the `dig @10.102.82.13 www.gslbnew.com` command on the 10.106.24.180 client. The output shows that servers were not reachable.

```

1  root@ns# dig @10.102.82.13 www.gslbnew.com
2
3  ; <<>> DiG 9.11.23 <<>> @10.102.82.13 www.gslbnew.com
4  ; (1 server found)
5  ;; global options: +cmd
6  ;; connection timed out; no servers could be reached

```

Set the match wildcard qualifier to Expression:

```
1 set locationparameter -matchWildcardtoany expression
```

When the match wildcard qualifier is set to expression, the wildcard qualifiers match either the qualifier available in the DNS policy or the qualifiers available in the location DB file.

- The DNS queries coming 10.106.24.147 match the defined wildcard qualifiers in the DNS policy. Therefore, the DNS policy comes into effect and drops the queries.

Run the `dig @10.102.82.13 www.gslbnew.com` command on the 10.106.24.147 client. The output shows that servers were not reachable.

```
1 root@ns# dig @10.102.82.13 www.gslbnew.com
2
3 ; <<>> DiG 9.11.23 <<>> @10.102.82.13 www.gslbnew.com
4 ; (1 server found)
5 ;; global options: +cmd
6 ;; connection timed out; no servers could be reached
```

- The queries coming from 10.106.24.180 do not match the qualifiers in the DNS policy. Therefore, the DNS policy does not come into effect and the queries are processed.

Run the `dig @10.102.82.13 www.gslbnew.com` command on the 10.106.24.180 client. The output shows the GSLB virtual server's IP address.

```
1 root@ns# dig @10.102.82.13 www.gslbnew.com
2
3 ; <<>> DiG 9.11.23 <<>> @10.102.82.13 www.gslbnew.com
4 ; (1 server found)
5 ;; global options: +cmd
6 ;; Got answer:
7 ;; ->HEADER<<- opcode: QUERY, status: NOERROR, id: 64265
8 ;; flags: qr aa rd ad; QUERY: 1, ANSWER: 1, AUTHORITY: 0,
9   ADDITIONAL: 1
10 ;; WARNING: recursion requested but not available
11 ;; OPT PSEUDOSECTION:
12 ; EDNS: version: 0, flags;; udp: 1280
13 ;; QUESTION SECTION:
14 ;www.gslbnew.com. IN A
15
16 ;; ANSWER SECTION:
17 www.gslbnew.com. 5 IN A 1.1.1.2
18
19 ;; Query time: 12 msec
20 ;; SERVER: 10.102.82.13#53(10.102.82.13)
21 ;; WHEN: Tue Mar 29 22:46:40 UTC 2022
22 ;; MSG SIZE rcvd: 60
```

Specify proximity method

September 21, 2020

When you have configured the static proximity database, you are ready to specify static proximity as the GLSB method.

To specify static proximity by using the command line interface

At the command prompt, type the following commands to configure static proximity and verify the configuration:

```
1 set gslb vserver <name> -lbMethod STATICPROXIMITY
2 show gslb vserver <name>
```

Example:

```
1 set gslb vserver Vserver-GSLB-1 -lbMethod STATICPROXIMITY
2 show gslb vserver
```

To specify static proximity by using the configuration utility

1. Navigate to Traffic Management > GSLB > Virtual Servers and double-click the virtual server.
2. Click the **Method** section and from the **Choose Method** drop-down list, select **STATICPROXIMITY**.

Synchronize GSLB static proximity database

December 20, 2024

Synchronizing a global server load balancing (GSLB) static proximity database requires that one of the sites be identified as the parent GSLB node. Any site in the topology can be designated as the parent node. The rest of the GSLB nodes are automatically designated as child nodes.

Synchronizing GSLB static proximity databases synchronizes the files in the `/var/netscaler/locdb` directory across the child nodes. During the synchronization process, the parent node fetches the running configuration from each of the child nodes and compares it to the configuration on the parent node. The parent GSLB node uses the `rsync` program to synchronize the static proximity database across the child nodes. To speed up the synchronization process, the `rsync` program makes only enough changes to eliminate the differences between the two files. The synchronization process cannot be rolled back.

The following example synchronizes Site2, which is a child site, to parent site Site1. The administrator enters the **sync gslb config** command on Site1:

```
1 sync gslb config -nowarn
2 Sync Time: Dec 19 2024 8:55:8
3 Retrieving local site info: ok
4 Retrieving all participating gslb sites info: ok
5 gslb_site1[Master]:
```

```
6      Getting Config: ok
7  gslb_site2[Slave]:
8      Getting Config: ok
9      Comparing config: ok
10     Syncing gslb static proximity database: ok
11     Syncing inbuilt gslb static proximity database: ok
12     Applying changes: ok
13 Done
```

Configure site-to-site communication

December 19, 2024

GSLB site-to-site communication is between the remote procedure call (RPC) nodes that are associated with the communicating sites. A parent GSLB site establishes connections with child sites to synchronize GSLB configuration information and to exchange site metrics.

An RPC node is created automatically when a GSLB site is created, and is assigned an internally generated user name and password. The NetScaler appliance uses this user name and password to authenticate itself to remote GSLB sites during connection establishment. No configuration steps are necessary for an RPC node, but you can specify a password of your choice, enhance security by encrypting the information that GSLB sites exchange, and specify a source IP address for the RPC node.

The appliance needs a NetScaler owned IP address to use as the source IP address when communicating with other GSLB sites. By default, the RPC nodes use either a subnet IP (SNIP) address, but you might want to specify an IP address of your choice.

The following topics describe the behavior and configuration of RPC nodes on the NetScaler appliance:

Changing the password of an RPC node

Citrix recommends you to secure the communication between sites in your GSLB setup by changing the password of each RPC node. After you change the password for the RPC node of the local site, you must manually propagate the change to the RPC node at each of the remote sites.

The password is stored in encrypted form. You can verify that the password has changed by using the `show rpcNode` command to compare the encrypted form of the password before and after the change.

Note: GSLB uses internal user account. For enhanced security, Citrix recommends that you change the internal user account password as well. Internal user account password is changed

through RPC node password.

To change the password of an RPC node by using the command line interface

At the command line, type the following commands to change the password of an RPC node:

```
1 set ns rpcNode <IPAddress> {
2   -password }
3
4 show ns rpcNode
```

Example:

```
1 > set rpcNode 192.0.2.4 -password mypassword
2   Done
3 > show rpcNode
4   .
5   .
6   .
7 2) IPAddress: 192.0.2.4 Password: d336004164d4352ce39e
8     SrcIP: *           Secure: OFF
9   Done
10 >
```

To unset the password of an RPC node by using the command line interface

To unset the password of an RPC node by using the CLI, type the unset rpcNode command, the IP address of the RPC node, and the password parameter, without a value.

To change the password of an RPC node by using the configuration utility

Navigate to System > Network > RPC, select the RPC node, and change the password.

Encrypt the exchange of site metrics

You can secure the information that is exchanged between GSLB sites by setting the secure option for the RPC nodes in the GSLB setup. With the secure option set, the NetScaler appliance encrypts all communication sent from the node to other RPC nodes.

To encrypt the exchange of site metrics by using the command line interface

At the command prompt, type the following commands to encrypt the exchange of site metrics and verify the configuration:

```
1 set ns rpcNode <IPAddress> [-secure ( YES | NO )]  
2 show rpcNode
```

Example:

```
1 > set rpcNode 192.0.2.4 -secure YES  
2 Done  
3 >  
4 > show rpcNode  
5 .  
6 .  
7 .  
8 3) IPAddress: 192.0.2.4 Password: d336004164d4352ce39e SrcIP:  
    192.0.2.3      Secure: ON  
9 Done  
10 >
```

To unset the secure parameter by using the command line interface

To unset the secure parameter by using the CLI, type the unset rpcNode command, the IP address of the RPC node, and the secure parameter, without a value.

To encrypt the exchange of site metrics by using the NetScaler configuration utility

1. Navigate to System > Network > RPC and double-click a RPC node.
2. Select the **Secure** option, and click **OK**.

Configure source IP address for an RPC node

By default, the NetScaler appliance uses a NetScaler owned subnet IP (SNIP) address as the source IP address for an RPC node, but you can configure the appliance to use a specific SNIP address. If a SNIP address is not available, the GSLB site cannot communicate with other sites. In such a scenario, you must configure either the NSIP address or a virtual IP (VIP) address as the source IP address for an RPC node. A VIP address can be used as the source IP address of an RPC node only if the RPC node is a remote node. If you configure a VIP address as the source IP address and remove the VIP address, the appliance uses a SNIP address.

Note

From NetScaler 11.0.64.x release onwards, you can configure the appliance to use GSLB Site IP address as the source IP address for an RPC node.

To specify a source IP address for an RPC node by using the command line interface

At the command prompt, type the following commands to change the source IP address for an RPC node and verify the configuration:

```
1 set ns rpcNode <IPAddress> [-srcIP <ip_addr|ipv6_addr|*>]
2 show ns rpcNode
```

Example:

```
1 set rpcNode 192.0.2.4 -srcIP 192.0.2.3
2 Done
3 show rpcNode
```

```
1 IPAddress: 192.0.2.4 Password: d336004164d4352ce39e SrcIP: 192.0.2.3
   Secure: OFF
2 Done
```

To unset the source IP address parameter by using the command line interface

To unset the source IP address parameter by using the CLI, type the unset rpcNode command, the IP address of the RPC node, and the srcIP parameter, without a value.

To specify a source IP address for an RPC node by using the NetScaler configuration utility

1. Navigate to System > Network > RPC and double-click a RPC node.
2. In the Source IP Address field, enter the IP address that you want the RPC node to use as the source IP address and click OK.

Important

The source IP address cannot be synchronized across the sites participating in GSLB because the source IP address for a RPC node is specific to each NetScaler appliance. Therefore, after you force a synchronization (using the sync gslb config –forceSync command or by selecting the ForceSync option in the GUI), you have to manually change the source IP addresses on the other NetScaler appliances.

Configure metrics exchange protocol

August 18, 2023

The data centers in a GSLB setup exchange metric with each other through the metrics exchange protocol (MEP), which is a proprietary protocol for NetScaler appliance. The exchange of the metric information begins when you create a GSLB site. These metrics comprise load, network, and persistence information.

MEP is required for health checking of data centers to ensure their availability. A connection for exchanging network metric (round-trip time) can be initiated by either of the data centers involved in the exchange, but a connection for exchanging site metrics is always initiated by the data center with the lower IP address. By default, the data center uses a subnet IP address (SNIP) to establish a connection to the IP address of a different data center. However, you can configure a specific SNIP, virtual IP (VIP) address, or the NSIP address, as the source IP address for metrics exchange. The communication process between GSLB sites uses TCP port 3011 or 3009, so this port must be open on firewalls that are between the NetScaler appliances.

Note: You can configure a SNIP or a GSLB site IP address as the source IP address for metrics exchange. For more information, see [Configure source IP address for an RPC node](#).

If the source and target sites (the site that initiates a MEP connection and the site that receives the connection request, respectively) have both private and public IP addresses configured, the sites exchange MEP information by using the public IP addresses.

You can also bind monitors to check the health of remote services as described in “[Monitoring GSLB Services](#).” When monitors are bound, metric exchange does not control the state of the remote service. If a monitor is bound to a remote service and metric exchange is enabled, the monitor controls the health status. Binding the monitors to the remote service enables the NetScaler appliance to interact with a non-NetScaler load balancing device. The NetScaler appliance can monitor non-NetScaler devices but cannot perform load balancing on them unless monitors are bound to all GSLB services and only static load balancing methods (such as the round robin, static proximity, or hash-based methods) are used.

With NetScaler release 11.1.51.x or later, to avoid unnecessary disruption of services, you can set a time delay for marking GSLB services as DOWN when a MEP connection goes DOWN.

MEP state in a high availability setup

In a high availability setup, the primary node establishes connections with the remote sites and the MEP state is not synchronized from the primary node to secondary nodes. Therefore, the MEP state in secondary node remains DOWN. When the secondary node becomes primary, it establishes MEP connections with the new GSLB site and updates the MEP state accordingly.

Enable site metrics exchange

Site metrics exchanged between the GSLB sites include the status of each load balancing, or content switching virtual server, the current number of connections, the current packet rate, and current bandwidth usage information.

The NetScaler appliance needs this information to perform load balancing between the sites. The site metric exchange interval is 1 second. A remote GSLB service must be bound to a local GSLB virtual server to enable the exchange of site metrics with the remote service.

To enable or disable site metrics exchange by using the command line interface

At a command prompt, type the following commands to enable or disable site metric exchange and verify the configuration:

```
1 set gslb site <siteName> -metricExchange (ENABLED|DISABLED)
2 show gslb site** <siteName>
```

Example:

```
1 set gslb site Site-GSLB-East-Coast -metricExchange ENABLED
2 set gslb site Site-GSLB-East-Coast -metricExchange DISABLED
3 show gslb site Site-GSLB-East-Coast
```

To enable or disable site metric exchange by using the GUI

1. Navigate to **Traffic Management > GSLB > Sites**, and select the site.
2. In the **Configure GSLB Site** dialog box, select the **Metric Exchange** option.

Enable network metric exchange

If your GSLB sites use the round-trip time (RTT) load balancing method, you can enable or disable the exchange of RTT information about the client's local DNS service. This information is exchanged every 5 seconds.

For details about changing the GSLB method to a method based on RTT, see [GSLB Methods](#).

To enable or disable network metric information exchange by using the command line interface

At the command prompt, type the following commands to enable or disable network metric information exchange and verify the configuration:


```
1 set gslb site <siteName> -nwmetricExchange (ENABLED|DISABLED)
2 show gslb site <<siteName>
```

Example:

```
1 set gslb site Site-GSLB-East-Coast -nwmetricExchange ENABLED
2 set gslb site Site-GSLB-East-Coast -nwmetricExchange DISABLED
3 show gslb site Site-GSLB-East-Coast
```

To enable or disable network metric information exchange by using the GUI

1. Navigate to **Traffic Management > GSLB > Sites**.
2. In the **Configure GSLB Site** dialog box, select the **Network Metric Exchange** option.

Configuring a time delay for the GSLB services to be marked as DOWN when a MEP connection goes DOWN

If the status of a MEP connection to a remote site changes to DOWN, the status of every GSLB service on that remote site is marked as DOWN, although the site might not actually be DOWN.

You can now set a delay to allow some time for reestablishment of the MEP connection before the site is marked as DOWN. If the MEP connection is back UP before the delay expires, the services are not affected.

For example, if you set the delay to 10, the GSLB services remain UP until the MEP connection has been DOWN for 10 seconds. After this duration, the GSLB services are marked as DOWN. However, if the MEP connection is back UP within the 10 seconds, the GSLB services remain in the UP state.

Note:

This delay is applicable only for services that are not bound to a monitor. The delay does not affect the trigger monitors.

To set a time delay by using the command line interface

At the command prompt, type the following command:

```
1 set gslb parameter** - GSLBSvcStateDelayTime <sec>
```

Example:

set gslb parameter - GSLBSvcStateDelayTime 10

Note

In a hierarchical deployment (parent-child topology), if you configure the GSLB service on both the parent and child sites, set the GSLB parameter on both the parent and child sites. If you do not configure the GSLB service on the child site, set the GSLB parameter only on the parent site.

To set a time delay by using the GUI

1. Navigate to **Configuration > Traffic Management > GSLB > Change GSLB Settings**.
2. In the **GSLB Service State Delay Time (secs)** box, type the time delay in seconds.

Configure a learning time for GSLB services when MEP connection status comes up to avoid flaps on GSLB services

When a node reboots or during HA failover, the system is initialized. Then, the node must learn current information about the configured local and child services to communicate the service state to remote nodes through MEP. The node takes some time to learn the correct information. Meanwhile, if a peer node connects to this node and requests for an update, the node might send an incorrect service state and statistics. This incorrect information might cause service flap and other functionality related issues on the remote peer nodes. To avoid this scenario, you can now set a learning time for the local and child GSLB service.

When a learning timeout is configured, the GSLB site gets some buffer time (learning timeout) to learn the correct statistics about its local and child services. When a service is in a learning phase, the remote GSLB site gets this information in MEP update, and does not honor the primary site state and statistics received through MEP for that service.

GSLB services enter the learning phase in any of the following scenarios.

- NetScaler appliance is rebooted
- High availability failover has occurred
- Owner node in a cluster GSLB setup is changed
- MEP is enabled on a local node
- GSLB site comes out of island scenario. A GSLB Site becomes island when it is not connected to any other site.

In a parent-child deployment, the backup parent (if configured) selectively moves the adopted child site's GSLB services to the learning phase when the primary parent goes DOWN.

To set a service state learning time by using the CLI

At the command prompt, type the following command:

```
1 set gslb parameter - SvcStateLearningTime <sec>
```

You can set “SvcStateLearningTime” in seconds. Default value is 0 and maximum value is 3600. This parameter is applicable only if monitors are not bound to GSLB services.

Example:

```
1 set gslb parameter - SvcStateLearningTime 10
```

To set a service state learning time by using the GUI

1. Navigate to **Configuration > Traffic Management > GSLB > Dashboard > Change GSLB Settings**.

The **Set GSLB Parameters** page appears.

2. In the **GSLB Service State Learning Time (secs)** field, type the learning time in seconds.

Enable persistence information exchange

You can configure NetScaler appliance to provide persistent connections, so that a client transmission to any virtual server in a group can be directed to a server that has received previous transmissions from the same client.

You can enable or disable the exchange of persistence information at each site. This information is exchanged once every 5 seconds between NetScaler appliances participating in GSLB.

For details about configuring persistence, see [Configuring Persistent Connections](#).

To enable or disable persistence information exchange by using the command line interface

At the command prompt, type the following commands to enable or disable persistence-information exchange and verify the configuration:

```
1 set gslb site <siteName> -sessionExchange (ENABLED|DISABLED)
2 show gslb site** <siteName>
```

Example:

```
1 set gslb site Site-GSLB-East-Coast -sessionExchange ENABLED
2 set gslb site Site-GSLB-East-Coast -sessionExchange DISABLED
3 show gslb site Site-GSLB-East-Coast
```

To enable or disable persistence information exchange by using the GUI

1. Navigate to **Traffic Management > GSLB > Sites**, and double-click the site.
2. In the **Configure GSLB Site** dialog box, select, or clear the **Persistence Session Entry Exchange** check box.

Configure GSLB by using a wizard

September 21, 2020

You can now use a wizard to configure the GSLB deployment types: active-active, active-passive, and parent-child.

This wizard is available in the GUI. To access the wizard, navigate to **Configuration > Traffic Management > GSLB** and click **Get Started**.

You can also access this wizard from the GSLB dashboard. Navigate to **Configuration > Traffic Management > GSLB > Dashboard** and click **Configure GSLB**.

Note: You can also configure the GSLB entities individually.

- [Active-Active Site Configuration](#)
- [Active-Passive Site Configuraiton](#)
- [Parent-Child Topology Configuration](#)


Important

This feature is supported in High Availability deployment and not in Admin Partition and Cluster deployments.

Configure active-active site

May 2, 2023

The following figure shows the workflow involved in a GSLB active-active site configuration.

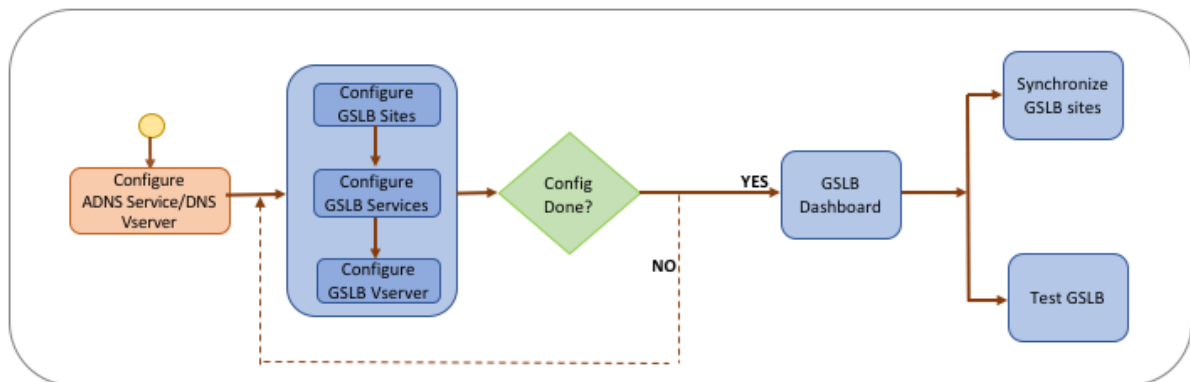

Before you begin configuring an active-active site, make sure you have configured a standard load balancing setup for each server farm or data center.

Also, for synchronizing the GSLB configuration across the GSLB sites in the deployment, make sure that:

- Local GLSB Sites are configured on all the appliances in the GSLB configuration.
- You have enabled management access on all the GSLB Sites in the configuration.
- You have configured the firewall to accept the auto synchronization and MEP connections.
- The master and slave NetScaler appliances are running the same NetScaler software versions.
- All the NetScaler appliances participating as sites should have the same NetScaler software version (the sites are not in a master-slave relationship).
- The RPC node password is same across all the GSLB sites in the GSLB configuration.

To configure an active-active site by using the wizard

On the Configuration tab, do the following:

1. Navigate to **Traffic Management > GSLB**, and then click **Get Started**.
2. If you have not configured an ADNS service or a DNS virtual server for the site, you can do it now.
 - a) Click **View** and then click **Add**.
 - b) Enter the service name, IP address and select the protocol (ADNS/ADNS_TCP) through which the data is exchanged with the service.
3. Select **Active-Active Site**.
4. Enter the fully qualified domain name and specify the time period for which the record must be cached by DNS proxies.
5. Configure the GSLB sites. Each site must be configured with a local GSLB site, and each site's configuration must include all the other sites as remote GSLB sites. There can be only one local site and all other sites are remote sites.
 - a) Enter the site details, such as the site name and site IP address.


- b) Select either REMOTE or LOCAL site type.
 - c) Optionally, change the RPC password and, if necessary, secure it.
 - d) If a monitor is to be bound to the GSLB service, select the condition under which the monitor is to monitor the service. This will be effective only after a monitor is bound to the services. The possible conditions are:
 - **ALWAYS**. Monitor the GSLB service at all times.
 - **MEP Fails**. Monitor the GSLB service only when the exchange of metrics through MEP fails.
 - **MEP Fails and Service ID Down**. Exchange of metrics through MEP is enabled but the status of the service, updated through metrics exchange, is DOWN.
6. Configure the GSLB services. To create an active-active site you must add at least two GSLB services.
- a) Enter the service details, such as service name, service type, and port number.
 - b) Associate the service with a site (local or remote) by selecting the GSLB site where the GSLB service belongs.
 - c) Select the monitor that must be bound to the service when MEP fails, if required. The service can be an existing server, or you can create a new server or a virtual server.
 - d) To associate an existing server, select the server name. The service IP address is automatically populated.
 - If the public IP address is different from the server IP, which can happen in a NAT environment, enter the public IP address and the port number of the public port.
 - To associate a new server, create a server by entering the server IP details and its public IP address and the public port number.
 - To associate a virtual server, select an already existing virtual server, or click + and add a new virtual server. This vserver is the load balancing vserver with which this GSLB service will be associated.
7. Configure the GSLB virtual servers.
- a) Enter the name of the GSLB virtual server name and select the DNS record type.
 - b) Click > in the **Select Service** box and choose the GSLB services to be bound to the GSLB virtual server.
 - c) Click > in the **Domain Binding** box to select the domain to be bound to this GSLB virtual server.
 - d) Choose the GSLB method for selecting the best-performing GSLB service. The default values for GSLB method, backup method, and dynamic weight are auto-populated, by default. You can change them if required.
 - If you choose the **Algorithm based** method, select the primary and backup methods and also specify the dynamic weight option.

- If you choose the **Static Proximity** method, select the backup method and the dynamic weight method. Also, provide the location of the database file by clicking the > icon or add a new location by clicking + in the Select a location database box.
 - If you choose the **Dynamic Proximity (RTT)** method, select the backup method and specify the dynamic weight option and the round-trip time value based on which the best-performing service is to be selected.
8. Click **Done** if the configuration is complete. The GSLB dashboard appears.
 9. If you have modified the GSLB site configuration, click **Auto Synchronize GSLB** in the dashboard to synchronize the configuration to other sites in the GSLB setup.
 - Before synchronization, make sure that the local site's configuration includes information about the remote sites. Also, for the synchronization to be successful, the local site must be configured on the other NetScaler appliances.
 - If real-time synchronization is enabled, you do not have to click **Auto Synchronize GSLB**. The synchronization happens automatically. To enable real time synchronization, do the following:
 - a) Navigate to **Traffic Management > GSLB > Dashboard** and click **Change GSLB Settings**.
 - b) Select the **Automatic Config Sync** check box.
 10. Click **Test GSLB Setup** to make sure that the ADNS services or the DNS servers are responding with the correct IP address for the domain name that is configured in the GSLB setup.

Configure active-passive site

May 2, 2023

The following figure shows the workflow involved in the active-passive site configuration.

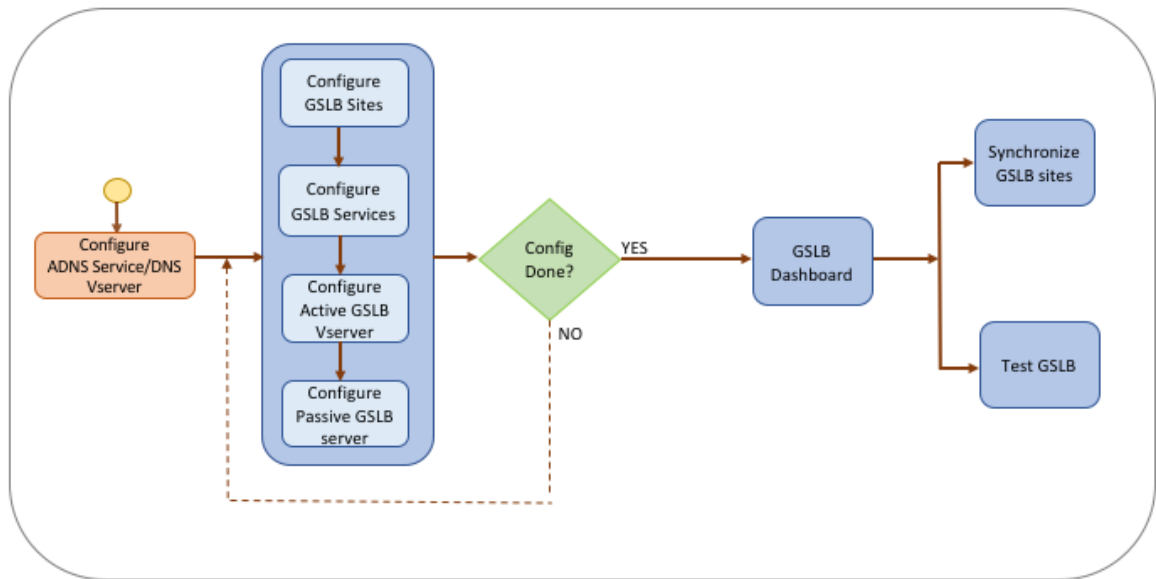

Before you begin configuring an active-passive site, make sure you have configured a standard load balancing setup for each server farm or data center.

Also, for synchronizing the GSLB configuration across the GSLB sites in the deployment, make sure that:

- Local GLSB Sites are configured on all the appliances in the GSLB configuration.
- You have enabled management access on all the GSLB Sites in the configuration.
- You have configured the firewall to accept the auto synchronization and MEP connections.
- The master and slave NetScaler appliances are running the same NetScaler software versions.
- All the NetScaler appliances participating as sites should have the same NetScaler software version (the sites are not in a master-slave relationship).
- The RPC node password is same across all the GSLB sites in the GSLB configuration.

To configure an active-passive site by using the wizard

On the Configuration tab, do the following:

1. Navigate to **Traffic Management > GSLB**, and then click **Get Started**.
2. If you have not configured an ADNS service or a DNS virtual server for the site, you can do it now.
 - a) Click **View** and then click **Add**.
 - b) Enter the service name, IP address and select the protocol (ADNS/ADNS_TCP) through which the data is exchanged with the service.
3. Select **Active-Passive Site**.
4. Enter the fully qualified domain name and specify the time period for which the record must be cached by DNS proxies.

5. Configure the GSLB sites. Each site must be configured with a local GSLB site, and each site's configuration must include all the other sites as remote GSLB sites. There can be only one local site and all other sites are remote sites.
 - a) Enter the site details, such as the site name and site IP address.
 - b) Select either REMOTE or LOCAL site type.
 - c) Optionally, change the RPC password and, if necessary, secure it.
 - d) If a monitor is to be bound to the GSLB service, select the condition under which the monitor is to monitor the service. This will be effective only after a monitor is bound to the services. The possible conditions are:
 - **ALWAYS.** Monitor the GSLB service at all times.
 - **MEP Fails.** Monitor the GSLB service only when the exchange of metrics through MEP fails.
 - **MEP Fails and Service ID Down.** Exchange of metrics through MEP is enabled but the status of the service, updated through metrics exchange, is DOWN.
6. Configure the GSLB services.
 - a) Enter the service details, such as service name, service type, and port number.
 - b) Associate the service with a site (local or remote) by selecting the GSLB site where the GSLB service belongs.
 - c) Select the monitor that must be bound to the service when MEP fails, if required. The service can be an existing server, or you can create a new server or a virtual server.
 - d) To associate an existing server, select the server name. The service IP address is automatically populated.
 - If the public IP address is different from the server IP, which can happen in a NAT environment, enter the public IP address and the port number of the public port.
 - To associate a new server, create a server by entering the server IP details and its public IP address and the public port number.
 - To associate a virtual server, select an already existing virtual server, or click **+** and add a new virtual server. This vserver is the load balancing vserver with which this GSLB service will be associated.
7. Configure the GSLB backup virtual servers. The GSLB backup virtual servers become operational only when the primary GSLB virtual servers is inaccessible or it is marked DOWN for any reason.
 - a) Enter the name of the GSLB virtual server name and select the DNS record type.
 - b) Click **>** in **Service Binding**, and choose the GSLB services that must be bound to the GSLB virtual server.
 - c) Choose the GSLB method for selecting the best-performing GSLB service. The default values for GSLB method, backup method, and dynamic weight are auto-populated, by default. You can change them if required.

- If you choose the **Algorithm based** method, select the primary and backup methods.
 - If you choose the **Static Proximity** method, select the backup method and provide the location of the database file.
 - If you choose the **Dynamic Proximity (RTT)** method, select the backup method and specify the service weight and the RTT value based on which the best-performing service is to be selected.
8. Configure the GSLB virtual servers.
- a) Enter the name of the GSLB virtual server name and select the DNS record type.
 - b) Click **>** in the **Select Service** box and choose the GSLB services to be bound to the GSLB virtual server.
 - c) Click **>** in the **Domain Binding** box to select the domain to be bound to this GSLB virtual server.
 - d) Choose the GSLB method for selecting the best-performing GSLB service. The default values for GSLB method, backup method, and dynamic weight are auto-populated, by default. You can change them if required.
 - If you choose the **Algorithm based** method, select the primary and backup methods and also specify the dynamic weight option.
 - If you choose the **Static Proximity** method, select the backup method and the dynamic weight method. Also, provide the location of the database file by clicking the **>** icon or add a new location by clicking **+** in the Select a location database box.
 - If you choose the **Dynamic Proximity (RTT)** method, select the backup method and specify the dynamic weight option and the round-trip time value based on which the best-performing service is to be selected.
9. Click **Done** if the configuration is complete. The GSLB dashboard appears.
10. If you have modified the GSLB site configuration, click **Auto Synchronize GSLB** in the dashboard to synchronize the configuration to other sites in the GSLB setup.
- Before synchronization, make sure that the local site's configuration includes information about the remote sites. Also, for the synchronization to be successful, the local site must be configured on the other NetScaler appliances.
 - If real-time synchronization is enabled, you do not have to click **Auto Synchronize GSLB**. The synchronization happens automatically. To enable real time synchronization, do the following:
 - a) Navigate to **Traffic Management > GSLB > Dashboard** and click **Change GSLB Settings**.
 - b) Select the **Automatic Config Sync** check box.
11. Click **Test GSLB Setup** to make sure that the ADNS services or the DNS servers are responding with the correct IP address for the domain name that is configured in the GSLB setup.

Note


For details about configuring GSLB entities of an active-passive GSLB setup for disaster recovery, see [Configuring GSLB for Disaster Recovery](#).

Configure parent-child topology

May 2, 2023

In a parent-child topology, at the top level are parent sites, which have peer relationships with other parents. Each parent can have multiple child sites, and each parent site exchanges health information with its child sites and with other parent sites. However, a child site communicates only with its parent site.

The following figure shows the workflow involved in a GSLB parent-child topology configuration.

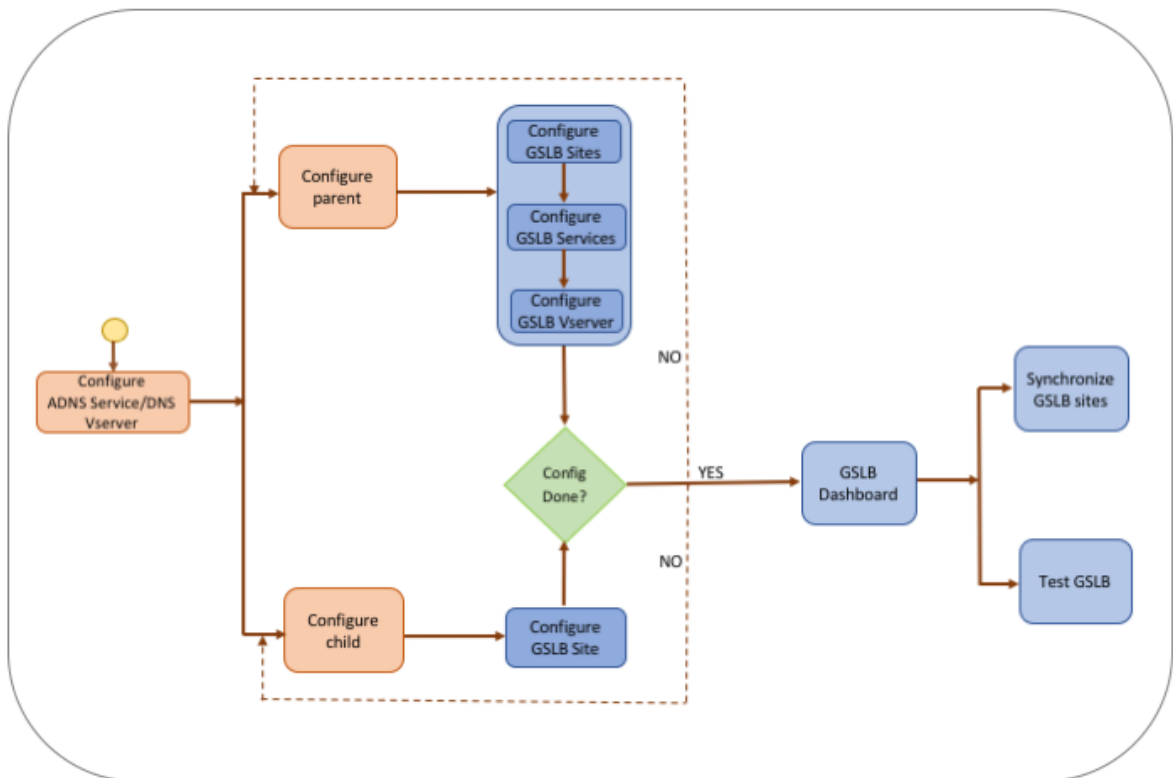

Before you begin configuring the parent-child topology deployment, make sure you have configured a standard load balancing setup for each server farm or data center.

Also, for synchronizing the GSLB configuration across the GSLB sites in the deployment, make sure that:

- Local GSLB Sites are configured on all the appliances in the GSLB configuration.
- You have enabled management access on all the GSLB Sites in the configuration.
- You have configured the firewall to accept the auto synchronization and MEP connections.
- All the NetScaler appliances participating as sites should have the same NetScaler software version (the sites are not in a master-slave relationship).
- The RPC node password is same across all the GSLB sites in the GSLB configuration.

To configure a parent-child deployment by using the wizard

On the Configuration tab, do the following:

1. Navigate to **Traffic Management > GSLB**, and then click **Get Started**.
2. If you have not configured an ADNS server or a DNS virtual server for the site, you can do it now.
 - a) Click **View** and then click **Add**.
 - b) Enter the service name, IP address and select the protocol (ADNS/ADNS_TCP) through which the data is exchanged with the service.
3. Select **Parent-Child Topology**.
4. In the Select the site type field, choose;
 - **Parent** –When configuring the parent site, you must configure its associated child sites and also configure the other parent sites in the GSLB setup.
 - **Child** –When configuring the child site, you must configure only the child site and its parent site.

To configure a parent site

1. Enter the fully qualified domain name and specify the time period for which the record must be cached by DNS proxies.
2. Configure the GSLB sites. Each site must be configured with a local GSLB site, and each site's configuration must include all the other sites as remote GSLB sites. There can be only one local site. All other sites are remote sites. If the specified site IP address is owned by the appliance (for example, a MIP address or SNIP address), the site is a local site. Otherwise, it is a remote site.
3. Enter the site details, such as the site name and site IP address.
 - a) Select the site type.
 - b) Optionally, change the RPC password and, if necessary, secure it.
 - c) If a monitor is to be bound to the GSLB service, select the condition under which the monitor is to monitor the service. This will be effective only after a monitor is bound to the services. The possible conditions are:

- **Always.** Monitor the GSLB service at all times.
- **MEP Fails.** Monitor the GSLB service only when the exchange of metrics through MEP fails.
- **MEP Fails and Service is DOWN.** Exchange of metrics through MEP is enabled but the status of the service, updated through metrics exchange, is DOWN.

4. Configure the GSLB services.

- Enter the service details such as service name, service type, and port number.
- Associate the service with a site (local or remote) by selecting the GSLB site to which the GSLB service belongs.
- Select the monitor that must be bound to the service when MEP fails, if required. The service can be an existing server, or you can create a new server or a virtual server.
 - To associate an existing server, select the server name. The service IP address is auto-populated.
 - To associate a new server, create a server by entering the server IP details and its public IP address and the public port number.
 - To associate a virtual server, select an already existing virtual server or click **+** and add a new virtual server. This vserver is the load balancing vserver to which this GSLB service will be associated. If the public IP address is different from the server IP, which can happen in a NAT environment, enter the public IP address and the public port number.

5. Configure the GSLB virtual servers.

- Enter the name of the GSLB virtual server name and select the DNS record type.
- Click **>** in the **Select Service** box and choose the GSLB services to be bound to the GSLB virtual server.
- Click **>** in the **Domain Binding** box to view the domain name that is bound to the GSLB virtual server.
- Choose the GSLB method for selecting the best-performing GSLB service. The default values for GSLB method, backup method, and dynamic weight are automatically populated by default. You can change them if required.
 - If you choose the **Algorithm based** method, select the primary and backup methods and also specify the dynamic weight option.
 - If you choose the **Static Proximity** method, select the backup method and the dynamic weight method. Also, provide the location of the database file by clicking the **>** icon or add a new location by clicking **+** in the Select a location database box.
 - If you choose the **Dynamic Proximity (RTT)** method, select the backup method and specify the service weight and the RTT value based on which the best-performing service is to be selected.

6. Click **Done** if the configuration is complete. The GSLB dashboard appears.
7. If you have modified the GSLB parent-site configuration, click **Auto Synchronize GSLB** to synchronize the configuration to the other parent sites in the GSLB setup. In a parent-child topology, synchronization for the child sites is skipped.
 - Before synchronization, make sure that the local site's configuration includes information about the remote sites.
 - If real-time synchronization is enabled, you do not have to click **Auto Synchronize GSLB**. The synchronization happens automatically. To enable real time synchronization, do the following:
 - a) Navigate to **Traffic Management > GSLB > Dashboard** and click **Change GSLB Settings**.
 - b) Select the **Automatic Config Sync** check box.
8. Click **Test GSLB Setup** to make sure that the ADNS services or the DNS servers are responding with the correct IP address for the domain name that is configured in the GSLB setup.

To configure a child site


1. Configure the GSLB sites.
 - a) Enter the site details, such as the site name and site IP address.
 - b) Select the site type.
 - c) Optionally, change the RPC password and, if necessary, secure it. 4. If a monitor is bound to the GSLB service, select the condition under which the monitor is to monitor the service. The possible conditions are:
 - **Always**. Monitor the GSLB service at all times.
 - **MEP Fails**. Monitor the GSLB service only when the exchange of metrics through MEP fails.
 - **MEP Fails and Service is DOWN**. Exchange of metrics through MEP is enabled but the status of the service, updated through metrics exchange, is DOWN.
2. Click **Done** if the configuration is complete. The GSLB dashboard appears.
3. Click **Test GSLB Setup** to make sure that the ADNS services or the DNS servers are responding with the correct IP address for the domain name that is configured in the GSLB setup.

Configure GSLB entities individually

May 2, 2023

Global server load balancing is used to manage traffic flow to a web site hosted on two separate server farms that ideally are in different geographic locations. For example, consider a Web site, www.mycompany.com, which is hosted on two geographically separated server farms or data centers. Both server farms use NetScaler appliances. The NetScaler appliances in these server farms are set up in one-arm mode and function as authoritative DNS servers for the www.mycompany.com domain. The following figure illustrates this configuration.

Figure 1. Basic GSLB Topology

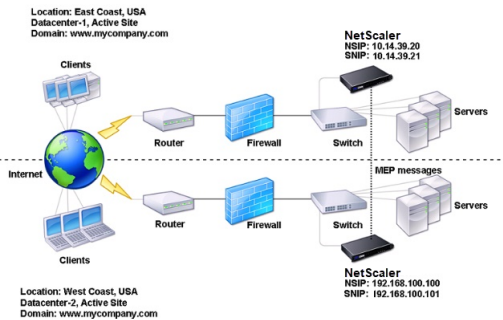

To configure such a GSLB setup, you must first configure a standard load balancing setup for each server farm or data center. This enables you to balance load across the different servers in each server farm. Then, configure both NetScaler appliances as authoritative DNS (ADNS) servers. Next, create a GSLB site for each server farm, configure GSLB virtual servers for each site, create GSLB services, and bind the GSLB services to the GSLB virtual servers. Finally, bind the domain to the GSLB virtual servers. The GSLB configurations on the two appliances at the two different sites are identical, although the load-balancing configurations for each site is specific to that site.

Note: To configure a GSLB site in a NetScaler cluster setup, see [Setting Up GSLB in a Cluster](#).

Configuring a Standard Load Balancing Setup

A load balancing virtual server balances the load across different physical servers in the data center. These servers are represented as services on the NetScaler appliance, and the services are bound to the load balancing virtual server.

For details on configuring a basic load balancing setup, see [Load Balancing](#).

Configure an authoritative DNS service

May 2, 2023

When you configure the NetScaler appliance as an authoritative DNS server, it accepts DNS requests from the client and responds with the IP address of the data center to which the client should send requests.

Note: For the NetScaler appliance to be authoritative, you must also create SOA and NS records. For more information about SOA and NS records, see [Domain Name System](#).

To create an ADNS service by using the command line interface

At the command prompt, type the following commands to create an ADNS service and verify the configuration:

```
1 add service <name> <IP>@ ADNS <port>
2
3 show service <name>
```

Example:

```
1 add service Service-ADNS-1 10.14.39.21 ADNS 53
2
3 show service Service-ADNS-1
```

To modify an ADNS service by using the command line interface

At the command prompt, type the following command:

```
1 set service <name> <IPAddress> ADNS <port>
```

Example:

```
1 set service Service-ADNS-1 10.14.39.21 ADNS 53
```

To remove an ADNS service by using the command line interface

At the command prompt, type the following command:

```
1 rm service <name>
```

Example:

```
1 rm service Service-ADNS-1
```


To configure an ADNS service by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Add a new ADNS service, or select an existing service and edit its settings.

Configure a basic GSLB site

August 16, 2024

A GSLB site is a representation of a data center in your network and is a logical grouping of GSLB virtual servers, services, and other network entities. Typically, in a GSLB setup, there are many GSLB sites that are equipped to serve the same content to a client. These are usually geographically separated to ensure that the domain is active even if one site goes down completely. All of the sites in the GSLB configuration must be configured on every NetScaler appliance hosting a GSLB site. In other words, at each site, you configure the local GSLB site and each remote GSLB site.

Once GSLB sites are created for a domain, the NetScaler sends client requests to the appropriate GSLB site as determined by the GSLB algorithms configured.

Starting from NetScaler release 14.1 build 21.x, site password parameter is added that replaces the RPC node password. If GSLB synchronization is enabled, this password is updated on all the GSLB sites.

Create a GSLB site using the CLI

At the command prompt, type the following commands to create a GSLB site and verify the configuration:

```
1 add gslb site <siteName> <siteIPAddress>
2 show gslb site <siteName>
```

Example:

```
1 add gslb site Site-GSLB-East-Coast 10.14.39.21
2 show gslb site Site-GSLB-East-Coast
```

Modify or remove a GSLB Site using the CLI

- To modify a GSLB site, use the `set gslb site` command, which is just like using the `add gslb site` command, except that you enter the name of an existing GSLB Site.

- To unset a site parameter, use the `unset gslb site` command, followed by the `siteName` value and the name of the parameter to be reset to its default value.
- To remove a GSLB site, use the `rm gslb site` command, which accepts only the `<name>` argument.

Configure a basic GSLB site using the GUI

1. Navigate to **Traffic Management > GSLB > Sites**.
2. Add a new GSLB site, or select an existing GSLB site and edit its settings.

Change the site IP address using the CLI

At the command prompt, type:

```
1 set gslb site <siteName> -siteIPAddress <ip_addr|ipv6_addr|*>
```

Example:

```
1 set gslb site Site-GSLB-East-Coast -siteIPAddress 10.14.39.45
```

Change the site IP address using the GUI

1. Navigate to **Traffic Management > GSLB > Sites**.
2. Select an existing GSLB site and edit its settings.

View the statistics of a GSLB site using the CLI

At the command prompt, type:

```
1 stat gslb site <siteName>
```

Example:

```
1 stat gslb site Site-GSLB-East-Coast
```

View the statistics of a GSLB site using the GUI

1. Navigate to **Traffic Management > GSLB > Sites**.
2. Select the GSLB site and click **Statistics**.

Rename a GSLB site

Instead of deleting the sites and creating a one, you can rename the existing GSLB site and retain all the GSLB configuration entities related to the sites. Changing the name in the primary GSLB site automatically changes the GSLB name in the secondary site if the `automaticConfigSync` parameter is enabled.

Note: Performing multiple renaming operations for a single site leads to synchronization inconsistencies.

Rename a GSLB site using the CLI

At the command prompt, type:

```
rename gslb site <oldName> <newName>
```

Example:

```
rename gslb site Site-GSLB-East-Coast Site-GSLB-West-Coast
```

Rename a GSLB site using the GUI

1. Navigate to **Traffic Management > GSLB > Sites**.
2. Select the GSLB site and click Rename.

Configure a GSLB service

August 16, 2024

A GSLB service is a representation of a load balancing or content switching virtual server. A local GSLB service represents a local load balancing or content switching virtual server. A remote GSLB service represents a load balancing or content switching virtual server configured at one of the other sites in the GSLB setup. At each site in the GSLB setup, you can create one local GSLB service and any number of remote GSLB services.

Important

If the load balancing virtual server is either in a GSLB node itself or is in a child node (in parent-child deployment) and no monitors are bound to the GSLB service, then make sure the following:

The GSLB service IP address, port number, and protocol match the virtual server that the service is representing. Else, the service state is marked as DOWN.

To create a GSLB service by using the command line interface

At the command prompt, type the following commands to create a GSLB service and verify the configuration:

```
1 add gslb service <serviceName> <serverName | IP> <serviceType> <port>-  
  siteName <string>  
2 show gslb service <serviceName>
```

Example:

```
1 add gslb service Service-GSLB-1 10.14.39.14 HTTP 80 - siteName Site-  
  GSLB-East-Coast  
2 show gslb service Service-GSLB-1
```

To modify or remove a GSLB service by using the command line interface

- To modify a GSLB service, use the `set gslb service <serviceName>` command. For this command, specify the name of the GSLB service whose configuration you want to modify. You can change the existing values of the parameters either specified by you or set by default. You can change the value of more than one parameter in the same command. Refer to the `add gslb service` command for details about the parameters. Example

```
1 > set gslb service SKP_GSLB_NOTCNAME_SVC2 -maxBandwidth 25 -  
  maxClient 8  
2 Done  
3 > sh gslb service SKP_GSLB_NOTCNAME_SVC2  
4 SKP_GSLB_NOTCNAME_SVC2 (21.211.21.21: 80)- HTTP  
5 ...  
6 Max Conn: 8 Max Bandwidth: 25 kbits
```

- To reset a parameter to its default value, you can use the `unset gslb service <serviceName>` command and the parameters to be unset. Example

```
1 > unset gslb service SKP_GSLB_NOTCNAME_SVC2 maxBandwidth  
2 Done  
3 > sh gslb service SKP_GSLB_NOTCNAME_SVC2  
4 SKP_GSLB_NOTCNAME_SVC2 (21.211.21.21: 80)- HTTP  
5 ...  
6 Max Conn: 8 Max Bandwidth: 0 kbits
```

- To remove a GSLB service, use the `rm gslb service <serviceName>` command.

To create a GSLB service by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Services**.
2. Add a new GSLB service, or select an existing service and edit its settings.

To view the statistics of a GSLB service by using the command line interface

At the command prompt, type:

```
1 stat gslb service <serviceName>
```

Example:

```
1 stat gslb service Service-GSLB-1
```

To view the statistics of a GSLB service by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Services**.
2. Select the GSLB Service and click **Statistics**.

To change the GSLB site of a GSLB service using CLI

At the command prompt, type:

```
1 set gslb service <service_name> -siteName <new_site_name>
```

Example:

```
1 set gslb service Service-GSLB-1 -siteName Site-GSLB-West-Coast
```

To change the GSLB site of a GSLB service using GUI

1. Navigate to **Traffic Management > GSLB > Services**.
2. Select the service for which you want to change the site name.
3. Click **Edit**, In GSLB Service page, click **Edit**.
4. Select the new site name and click **OK**.

Configure a GSLB service group

August 16, 2024

Service group enables you to manage a group of services as easily as a single service. If you enable or disable any option for a service group, the option gets enabled or disabled for all the members of the service group. For example, you can apply this feature to options such as Compression, Health monitoring, and Graceful shutdown.

After creating a service group, you can do any of the following:

- Bind the service group to a virtual server.
- Add services to the service group.
- Bind monitors to the service groups.

Important

If the load balancing virtual server is either in a GSLB node itself or is in a child node (in parent-child deployment) and no monitors are bound to the GSLB service, then make sure the following:

The GLSB service group IP address, port number, and protocol match the virtual server that the service is representing. Else, the service state is marked as DOWN.

The NetScaler supports the following types of GSLB service groups.

- IP address based service groups
- Domain name based service groups
- Domain name based autoscale service groups

GSLB domain name based autoscale service groups

The NetScaler hybrid and multi-cloud global server load balancing (GSLB) solution enables customers to distribute application traffic across multiple data centers in hybrid clouds, multiple clouds, and on-premises. The NetScaler GSLB solution supports various load balancing solutions, such as the NetScaler load balancer, Elastic Load Balancing (ELB) for AWS, and other third-party load balancers. Also, the GSLB solution performs global load balancing even if the GSLB and load balancing layers are independently managed.

In cloud deployments, users are given a domain name as a reference when accessing the load balancing solution for management purposes. It is recommended that external entities do not use the IP addresses that these domain names resolve to. Also, the load balancing layers scale up or down based on the load, and the IP addresses are not guaranteed to be static. Therefore, it is recommended to use the domain name to refer to the load balancing endpoints instead of IP addresses. This requires the GSLB services to be referred using the domain name instead of IP addresses and it must consume all the IP addresses returned for the load balancing layer domain name and have a representation for the same in GSLB.

To use domain names instead of IP addresses when referring to the load balancing endpoints, you can use the domain name based service groups for GSLB.

Monitor GSLB domain name based service groups

The NetScaler appliance has two built-in monitors that monitor TCP-based applications; `tcp-default` and `ping-default`. The `tcp-default` monitor is bound to all TCP services and the `ping-default` monitor is bound to all non-TCP services. The built-in monitors are bound by default to the GSLB service groups. However, it is recommended to bind an application specific monitor to the GSLB service groups.

Recommendation for setting the trigger monitors option to MEPDOWN The Trigger Monitors option can be used to indicate if the GSLB site must use the monitors always, or use monitors when metrics exchange protocol (MEP) is DOWN.

The Trigger Monitors option is set to ALWAYS by default.

When the Trigger Monitors option is set to ALWAYS, each GSLB node triggers the monitors independently. If each GSLB node triggers the monitors independently, then each GSLB node might operate on different set of GSLB services. This might result in discrepancies in the DNS responses for the DNS requests landing on these GSLB nodes. Also, if each GSLB node is monitoring independently, then the number of monitor probes reaching the load balancer entity increases. The persistence entries also become incompatible across the GSLB nodes.

Therefore, it is recommended that the Trigger Monitors option on the GSLB site entity is set to MEPDOWN. When the Trigger Monitors option is set to MEPDOWN, the load balancing domain resolution and monitoring ownership lies with the local GSLB node. When the Trigger Monitors option is set to MEPDOWN, the load balancing domain resolution and subsequent monitoring is done by the local GSLB node of a GSLB service group. The results are then propagated to all other nodes participating in GSLB by using the metrics exchange protocol (MEP).

Also, whenever the set of IP addresses associated with a load balancing domain are updated, it is notified through MEP.

Limitations of GSLB service groups

- For a load balancing domain, the IP address that is returned in the DNS response is generally the public IP address. The private IP address cannot be applied dynamically when the load balancing domain is resolved. Therefore, public IP port and private IP port for the GSLB domain name based autoscale service groups IP port bindings are the same. These parameters cannot be set explicitly for the domain name based autoscale service groups.
- Site persistence, DNS views, and clustering are not supported for GSLB service groups.

Configure and manage GSLB service groups by using the CLI

To add a GSLB service group:

```
1 add gslb serviceGroup <serviceName>@ <serviceType> [-autoScale (
  DISABLED | DNS )] -siteName <string>
```

Example:

```
1 add gslb serviceGroup Service-Group-1 http -autoScale DNS -siteName
  Site1
```

To bind a GSLB service group to a virtual server:

```
1 bind gslb serviceGroup <serviceName> ((<IP>@ <port>) | <serverName
  >@ | (-monitorName <string>@))
```

Example:

```
1 bind gslb serviceGroup Service-Group-1 203.0.113.2
2 bind gslb serviceGroup Service-Group-1 S1 80
3 bind gslb serviceGroup** Service-Group-1 -monitorName Mon1
```

To unbind a GSLB service group to a virtual server:

```
1 unbind gslb serviceGroup <serviceName> ((<IP>@ <port>) | <
  serverName>@ | -monitorName <string>@)
```

Example:

```
1 unbind gslb serviceGroup Service-Group-1 -monitorName Mon1
```

To set parameters for a GSLB service group:

```
1 set gslb serviceGroup <serviceName>@ [(<serverName>@ <port> [-
  weight <positive_integer>] [-hashId <positive_integer>] [-publicIP <
  ip_addr|ipv6_addr|*>] [-publicPort <port>]) | -maxClient <
  positive_integer> | -cip ( ENABLED | DISABLED ) | <cipHeader> | -
  cltTimeout <secs> | -svrTimeout <secs> | -maxBandwidth <
  positive_integer> | -monThreshold <positive_integer> | -
  downStateFlush ( ENABLED | DISABLED )] [-monitorName <string> -
  weight <positive_integer>] [-healthMonitor ( YES | NO )] [-comment <
  string>] [-appflowLog ( ENABLED | DISABLED )]
```

To unset parameters from a GSLB service group:

```
1 unset gslb serviceGroup <serviceName>@ [<serverName>@ <port> [-
  weight] [-hashId] [-publicIP] [-publicPort]] [-maxClient] [-cip] [-
  cltTimeout] [-svrTimeout] [-maxBandwidth] [-monThreshold] [-
  appflowLog] [-monitorName] [-weight] [-healthMonitor] [-cipHeader]
  [-downStateFlush] [-comment]
```

To enable a GSLB service group


```
1 enable gslb serviceGroup <serviceName>@ [<serverName>@ <port>]
```

Example:

```
1 enable gslb serviceGroup SG1 S1 80
```

To disable a GSLB service group

```
1 disable gslb serviceGroup <serviceName>@ [<serverName>@ <port>] [-  
  delay <secs>] [-graceful ( YES /| NO )]
```

Example:

```
1 disable gslb serviceGroup SRG2 S1 80
```

Note

The service group that has to be disabled must be a DBS service group and not an autoscale service group.

To remove a GSLB service group:

```
1 rm gslb serviceGroup <serviceName>
```

Example:

```
1 rm gslb serviceGroup Service-Group-1
```

To view the statistics of a GSLB service group:

```
1 stat gslb serviceGroup [<serviceName>]
```

Example:

```
1 stat gslb serviceGroup Service-Group-1
```

To view the properties of a GSLB service group:

```
1 show gslb serviceGroup [<serviceName> -includeMembers]
```

Example:

```
1 show gslb serviceGroup SG1  
2 show gslb serviceGroup -includeMembers
```

Enable or disable GSLB service group members

You can selectively enable or disable an individual member of a GSLB (DNS-based) service group instead of enabling or disabling the entire service group. This feature is available in both autoscale

service groups and non-autoscale service groups. Therefore, managing a GSLB service group is made easier.

For example, you have a requirement to avoid traffic to a particular server on a GSLB site. Let's say, 10 GSLB services or servers (S1 to S10) are bound to a service group (SG1). You want to disable only service 5 (S5), that is avoid traffic to server 5. Without this feature, you have to separately bind services S1 to S4 and services S6 to S10. This process becomes tedious in a large GSLB service group where you have to disable or enable large number of services. With this feature, you can directly disable service 5 (S5) without impacting other services in the service group.

To enable a GSLB service group member by using CLI:

```
1 enable gslb serviceGroup <serviceName>@ [<serverName>@ <port>]
```

Note:

To enable a GSLB service group, provide only the service group name. To enable a member of a service group, in addition to the GSLB service group name, provide the name of the server that hosts the service, and the port number of the service.

Example:

```
1 enable gslb serviceGroup http_svc_group 10.102.27.153 80
```

To disable a GSLB service group or a member of the GSLB service group by using CLI:

```
1 disable gslb serviceGroup <serviceName>@ [<serverName>@ <port>]
```

Example:

```
1 disable gslb serviceGroup http_svc_group 10.102.27.153 80
```

Note:

To disable a GSLB service group, provide only the service group name. To disable a member of a service group, in addition to the GSLB service group name, provide the name of the server that hosts the service, and the port number of the service.

Changes to the existing GSLB CLI commands

The following are the changes that are done to the existing GSLB commands after the introduction of the GSLB service groups:

- `bind gslb vservers` - The service group name is added to the bind command.

Example:

```
1 bind gslb vserver <name> ((-serviceName <string> [-weight <
  positive_integer>] ) | <serviceName>@ | (-domainName <
  string> [-TTL <secs>] [-backupIP<ip_addr|ipv6_addr|*>] [-
  cookieDomain <string>] [-cookieTimeout <mins>][-sitedomainTTL
  <secs>]) | (-policyName <string>@ [-priority<positive_integer
  >] [-gotoPriorityExpression <expression>] [-type REQUEST |
  RESPONSE ])))
```

- `unbind gslb vserver` - The service group is added to the unbind command.

Example:

```
1 unbind gslb vserver <name> (-serviceName <string> <
  serviceName> @ /(-domainName <string> [-backupIP] [-
  cookieDomain]) | -policyName <string>@)
```

- `show gslb site` - When this command is run, the GSLB service groups are also displayed.
- `show gslb vs` - When this command is run, the GSLB service groups are displayed.
- `stat gslb vs` - When this command is run, the GSLB service groups statistics are also displayed.
- `show lb monitor bindings` - When this command is run, the GSLB service group bindings are also displayed.

Configure GSLB service groups by using the GUI

1. Navigate to **Traffic Management > GSLB > Service Groups**.
2. Create a service group and set the AutoScale mode to DNS.

Configure site persistence for the GSLB service groups

You can configure site persistence for the IP address based and domain name based service groups. Site persistence is not supported for domain name based autoscale service groups.

To set site persistence based on HTTP cookies by using the CLI

- For connection proxy persistence, you do not have to set the site prefix.

At the command prompt, type:

```
1 set gslb service group <serviceName> [-sitePersistence <
  sitePersistence>]
```

- For HTTP redirect persistence, you must first set the site prefix for a member of the service group and then set the `HTTPRedirect` persistence parameter for the service group.

At the command prompt, type:

```
1 set gslb servicegroup <serviceName> <serviceGroup member
   name|Ip> <port> [-sitePrefix <string>]
2
3 set gslb servicegroup <serviceName> [-sitePersistence <
   sitePersistence>]
```

Examples:

- Connection proxy persistence

```
1 set gslbservicegroup sg1 -sitePersistence connectionProxy
```

- HTTP Redirect persistence

```
1 set gslb servicegroup sg2 test1 80 -sitePrefix vserver-GSLB-1
2
3 set gslb servicegroup sg2 -sitePersistence HTTPRedirect
```

To set site persistence based on cookies by using the GUI

1. Navigate to **Traffic Management > GSLB > Service Groups** and select the service group that you want to configure for site persistence (for example, servicegroup-GSLB-1).
2. Click the **Site Persistence** section and set the persistence that meets your requirement.

Tip

For deployment scenario and example configuration of GSLB service groups, see the following topics:

- [Use Case: Deployment of Domain Name Based Autoscale Service Group](#)
- [Use Case: Deployment of IP Address Based Autoscale Service Group](#)

To change the GSLB site of a GSLB service group using CLI

At the command prompt, type:

```
1 set gslb serviceGroup <servicegroup_name> -siteName <new_site_name>
```

Example:

```
1 set gslb serviceGroup GSLB_SG1 -siteName Site-GSLB-West-Coast
```

To change the GSLB site of a GSLB service group using GUI

1. Navigate to **Traffic Management > GSLB > Service Groups**.
2. Select the service group for which you want to change the site name.
3. Click **Edit** and in **GSLB Service Group** page, click **Edit**.
4. Select the new site name, click **Continue** and click **OK**.

Configure a GSLB virtual server

May 2, 2023

A GSLB virtual server is an entity that represents one or more GSLB services and balances traffic between them. It evaluates the configured GSLB methods or algorithms to select a GSLB service to which to send the client request.

Note

A GSLB virtual server protocol requirement is mainly to create a relation between the virtual server and the services that are bound to the virtual server. This also keeps CLI/APIs consistent for other types of virtual servers. The Service Type parameter on a service or a virtual server is not used while serving the DNS requests. It is instead referenced during site persistence, monitoring, and for doing lookups via MEP.

To create a GSLB virtual server by using the command line interface

At the command prompt, type the following commands to add a GSLB virtual server and verify the configuration:

```
1 - add gslb vserver <name> <serviceType> -ipType (IPv4 | IPv6)
2 - show gslb vserver <name>
```

Example:

```
1 add gslb vserver Vserver-GSLB-1 HTTP -ipType IPv4
2 add gslb vserver Vserver-GSLB-2 HTTP -ipType IPv6
3 show gslb vserver Vserver-GSLB-1
4 show gslb vserver Vserver-GSLB-2
```

To modify or remove a GSLB virtual server by using the command line interface

- To modify a GSLB virtual server, use the `set gslb vserver` command. This command works similar to the `add gslb vserver` command, except that you enter the name of an

existing GSLB virtual server.

- To reset a parameter to its default value, you can use the `unset gslb vserver` command followed by the `vserverName` value and the name of the parameter to be unset.
- To remove a GSLB virtual server, use the `rm gslb vserver` command, which accepts only the name argument.

To configure a GSLB virtual server by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers**.
2. Add a new GSLB virtual server, or select an existing GSLB virtual server and edit its settings.

To view the statistics of a GSLB virtual server by using the command line interface

At the command prompt, type:

```
1 stat gslb vserver <name>
```

Example:

```
1 stat gslb vserver Vserver-GSLB-1
```

To view the statistics of a GSLB virtual server by using the configuration utility

Navigate to **Traffic Management > GSLB > Virtual Servers**, select the virtual server and click **Statistics**.

GSLB virtual server statistics

Starting from NetScaler version 12.1 build 51.xx and later, the GSLB virtual server statistics also display the following information in addition to details such as; virtual server hits, current persistence session, request bytes, response bytes, spillover threshold, spillover hits, current client established connections, and virtual server down backup hits.

- **Primary LB method failures:** Number of times the primary GSLB method has failed.
- **Backup LB method failures:** Number of times the backup GSLB method has failed.
- **Vserver persistence hits:** The number of times the request is served through the persistence sessions.

The GSLB virtual server statistics also display the statistics of the service group members bound to the virtual server.

Note:

The primary or the backup method can fail when the primary method is static proximity and the backup method is RTT. In this scenario, if there is no location corresponding to LDNS IP, the static proximity fails and the backup method is attempted. The statistics are updated based on the following:

- If the backup method is successful, only primary method failure statistics are incremented.
- If the RTT calculation is not successful, then the backup method also fails. In this case, both primary and backup method failure statistics are incremented.

When the backup method fails, the last resort method of round robin is used.

The following image is a sample of GSLB virtual server statistics from the CLI.

```
Gslb Vserver Summary
      Protocol      State  Health  actSvcs  inactSvc
gslbvip      HTTP      DOWN    0        0        0

VServer Stats:
                Rate (/s)                Total
Vserver hits                0                0
Primary LB Method Failures  --                0
Backup LB Method Failures  --                0
Current Persistence Sessions --                0
Vserver Persistence Hits   --                0
Request bytes                0                0
Response bytes               0                0
Current Client Est connections --                0
Spill Over Threshold        --                0
Spill Over Hits             --                0
Vserver Down Backup Hits    --                0

Note: The above counters are the sum of all bound GSLB services
Done
```

The following image is a sample of GSLB virtual server statistics from the GUI.

GSLB Virtual Servers
↕
Graphical View

GSLB Virtual Servers Statistics [stat]

Gslb Vserver Summary

Name	Vserver protocol
stat	HTTP

VServer Stats:

Vserver hits

Primary LB Method Failures

Backup LB Method Failures

Current Persistence Sessions

Vserver Persistence Hits

Request bytes

Response bytes

Current Client Est connections

Spill Over Threshold

Spill Over Hits

Vserver Down Backup Hits

GSLB service statistics

When you run the `stat gslb service` command from the command line or click the **Statistics link** from the configuration utility, the following details of the service are displayed:

- **Request bytes.** Total number of request bytes received on this service or virtual server.
- **Response bytes.** Number of response bytes received by this service or virtual server.
- **Current client established connections.** Number of client connections in ESTABLISHED state.
- **Current load on the service.** Load on the service (Calculated from the load monitor bound to the service).

The data of the number of requests and responses, and the number of current client and server connections may not be displayed or may not be synchronized with the data of the corresponding load balancing virtual server.

Clearing the GSLB virtual server or service statistics

Note: This feature is available in NetScaler release 10.5.e.

You can now clear the statistics of a GSLB virtual server and service. NetScaler provides the following two options to clear the statistics:

- **Basic:** Clears the statistics that are specific to the virtual server but retains the statistics that are contributed by the bound GLSB service.
- **Full:** Clears both the virtual server and the bound GSLB service statistics.

To clear the statistics of a GSLB virtual server by using the command line interface

At the command prompt, type:

```
1 stat gslb vserver <name> -clearstats <basic | full>
```

Example:

```
1 stat gslb vserver Vserver-GSLB-1 -clearstats basic
```

To clear the statistics of a GSLB service by using the command line interface

At the command prompt, type:

```
1 stat gslb service <name> -clearstats <basic | full>
```

Example:

```
1 stat gslb service service-GSLB-1 -clearstats basic
```

To clear the statistics of a GSLB virtual server by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers**.
2. Select the GSLB virtual server and, click **Statistics**, and then click **Clear**.
3. From the **Clear** drop-down list, select **Basic** or **Full**, and then click **OK**.

To clear the statistics of a GSLB service by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Services**.
2. Select the GSLB service and, click **Statistics**, and then click **Clear**.
3. From the **Clear** drop-down list, select **Basic** or **Full**, and then click **OK**.

Enabling and Disabling GSLB Virtual Servers

When you create a GSLB virtual server, it is enabled by default. If you disable the GSLB virtual server, upon receiving a DNS request, the NetScaler appliance does not make any GSLB decision based on the GSLB method that is configured. Instead, the response to the DNS query contains the IP addresses of all the services bound to the virtual server.

To enable or disable a GSLB virtual server by using the command line interface

At the command prompt, type one of the following commands:

```
1 enable gslb vserver <name>@
2
3 disable gslb vserver <name>@
```

Example:

```
1 enable gslb vserver Vserver-GSLB-1
2 disable gslb vserver Vserver-GSLB-1
```

To enable or disable a GSLB virtual server by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers**.
2. Select a virtual server and, from the **Action** list, select **enable** or **disable**.

Use cases - GSLB virtual server

The following are some of the use cases where you can configure GSLB virtual servers:

- [Configure GSLB virtual server to protect the GSLB setup against failure](#)
- [Configure persistence in GSLB](#)
- [Configure GSLB API method](#)

Bind GSLB services to a GSLB virtual server

September 21, 2020

Once the GSLB services and virtual server are configured, relevant GSLB services must be bound to the GSLB virtual server to activate the configuration.

To bind a GSLB service to a GSLB virtual server by using the command line interface

At the command prompt, type the following commands to bind a GSLB service to a GSLB virtual server and verify the configuration:

```
1 bind gslb vserver <name> -serviceName <string>
2
3 show gslb vserver <name>
```

Example:

```
1 bind gslb vserver Vserver-GSLB-1 -serviceName Service-GSLB-1
2 show gslb vserver Vserver-GSLB-1
```

To unbind a GSLB service from a GSLB virtual server by using the command line interface

At the command prompt, type:

```
1 unbind gslb vserver <name> -serviceName <string>
```

To bind GSLB services by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers** and double-click a virtual server.
2. Click in the **Domains** section, and configure a domain and bind the domain.

Bind a domain to a GSLB virtual server

May 2, 2023

To make a NetScaler appliance the authoritative DNS server for a domain, you must bind the domain to the GSLB virtual server. When you bind a domain to a GSLB virtual server, the NetScaler appliance adds an address record for the domain, containing the name of the GSLB virtual server. The start of authority (SOA) and name server (NS) records for the GSLB domain must be added manually.

For details on configuring SOA and NS records, see [Domain Name System](#).

To bind a domain to a GSLB virtual server by using the command line interface

At the command prompt, type the following commands to bind a domain to a GSLB virtual server and verify the configuration:

```
1 bind gslb vserver <name> -domainName <string>
2 show gslb vserver <name>
```

Example:

```
1 bind gslb vserver Vserver-GSLB-1 -domainName www.mycompany.com
2 show gslb vserver Vserver-GSLB-1
```

To unbind a GSLB domain from a GSLB virtual server by using the command line interface

At the command prompt, type:

```
1 unbind gslb vserver <name> -domainName <string>
```

To bind a domain to a GSLB virtual server by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers**.
 2. In GSLB Virtual Servers pane, select the GSLB Virtual Server to which you want to bind the domain (for example, Vserver-GSLB-1) and click **Open**.
 3. In the Configure GSLB Virtual Server dialog box, on the Domains tab, do one of the following:
 - To create a new Domain, click **Add**.
 - To modify an existing Domain, select the domain, and then click **Open**.
 4. In the Create GSLB Domain or Configure GSLB Domain dialog box, specify values for the following parameters as shown:
 - Domain Name*—domainName (for example, www.mycompany.com)
- * A required parameter
5. Click **Create**.
 6. Click **OK**.

To view the statistics of a domain by using the command line interface

At the command prompt, type:

```
1 stat gslb domain <name>
```

Example:

```
1 stat gslb domain www.mycompany.com
```

Note: To view statistics for a particular GSLB domain, enter the name of the domain exactly as it was added to the NetScaler appliance. If you do not specify the domain name, or if you specify an incorrect domain name, statistics for all configured GSLB domains are displayed.

To view the statistics of a domain by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers**.
2. In GSLB Virtual Servers pane, select the GSLB Virtual Server (for example, Vserver-GSLB-1) and click Open.
3. In the Configure GSLB Virtual Server dialog box, on the Domains tab, select the domain, and then click **Statistics**.

To view the configuration details of the entities bound to a GSLB domain using the command line

Note: This feature is available in NetScaler release 10.5.e.

At the command prompt, type:

```
1 show gslb domain <name>
```

Example:

```
1 show gslb domain gslb1.com
2     gslb1.com
3     gvs1 - HTTP      state: DOWN
4     DNS Record Type: A
5     Configured Method: LEASTCONNECTION
6     Backup Method: ROUNDROBIN
7     Persistence Type: NONE
8     Empty Down Response: DISABLED
9     Multi IP Response: DISABLED
10    Dynamic Weights: DISABLED
11
12    gsvc1 (10.102.239.165: 80)- HTTP State: DOWN   Weight: 1
13    Dynamic Weight: 0   Cumulative Weight: 1
14    Effective State: DOWN
15    Threshold : BELOW
16
17    Monitor Name : http
18    State: DOWN   Weight: 1
19    Probes: 144   Failed [Total: 144 Current: 144]
20    Last response: Failure - TCP syn sent, reset
21    Response Time: 2000 millisec
```

```
22
23     gsvc2 (10.102.239.179: 80)- HTTP State: DOWN   Weight: 1
24         Dynamic Weight: 0   Cumulative Weight: 1
25         Effective State: DOWN
26         Threshold : BELOW
27
28         Monitor Name : http-ecv
29             State: DOWN   Weight: 1
30             Probes: 141   Failed [Total: 141 Current: 141]
31             Last response: Failure - TCP syn sent, reset
32                 received.
33                 Response Time: 2000 millisec
33 Done
```

To view the configuration details of the entities bound to a GSLB domain by using the configuration utility

Note: This feature is available in NetScaler release 10.5.e.

1. Navigate to **Traffic Management > GSLB > Virtual Servers** and double-click a virtual server.
2. Click the field below the **Domains** pane.
3. In the **GSLB Virtual Server Domain Binding** dialog box, select a domain, and then click **Show Bindings**.

Example of a GSLB setup and configuration

November 5, 2024

An organization has a geographically dispersed network and has three data centers located in the United States, Mexico, and Colombia. In the configuration related to these locations, these are referred to as US, MX, and CO respectively. At each location, the company has a server farm, which provides the same content and the setup is working as expected. The NetScaler appliance at each location is configured through a virtual server with the HTTP protocol on port 80.

The organization has implemented the GSLB setup by adding a site identifier at each site. The site identifier includes a site name and an IP address that is owned by the NetScaler appliance and is used for the GSLB communications.

Each site has a site local to the appliance. Also, each site has two sites remote to the local appliance. On each site, a GSLB virtual server is created with the same name. This virtual server identifies the website of the organization globally and does not have any IP address associated with it.

The setup also has GSLB services configured that point to the load balancing virtual servers configured

on each GSLB site by specifying the IP address, protocol, and port number of the respective virtual server. These services are bound to the GSLB virtual server.

Note:

In the procedure, private IP addresses are used for the GSLB sites. For public sites and GSLB services, ensure that you use public IP addresses.

The following table lists the IP addresses and locations used in the example:

IP Address	Location
10.3.1.101	Site IP of local NetScaler.
172.16.1.101	Site IP of remote location site-MX.
192.168.1.101	Site IP of remote location site-CO.
172.16.1.100	Service IP of remote location site-MX.
10.3.1.100	Service IP of local NetScaler.
192.168.1.100	Service IP of remote location site-CO.

When adding a GSLB site, if the site communicates over the internet only then use the “Public IP” field. For example, when there is no site to site VPN connectivity between the GSLB sites.

To configure the GSLB setup with NetScaler appliances by using the CLI commands

1. Enable the GSLB feature, if not already done.

```
1 enable ns feature gslb
```

2. Identify a SNIP that for adding local GSLB site.
3. Add the GSLB site for the local NetScaler appliance.

```
1 add gslb site site-US 10.3.1.101
```

4. Add the GSLB sites for the remote NetScaler appliances.

```
1 add gslb site site-MX 172.16.1.101  
2 add gslb site site-CO 192.168.1.101
```

5. Add the GSLB virtual server that references a service being used in the GSLB setup:

```
1 add gslb vserver gslb-lb HTTP
```

6. Add the GSLB services for each site participating in the GSLB setup:

```
1 add gslb service gslb_SVC30 172.16.1.100 HTTP 80 -siteName site-MX
2 add gslb service gslb_SVC10 10.3.1.100 HTTP 80 -siteName site-US
3 add gslb service gslb_SVC20 192.168.1.100 HTTP 80 -siteName site-
  CO
```

7. Bind the GSLB services to the GSLB virtual server:

```
1 bind gslb vserver gslb-lb -serviceName gslb_SVC10
2 bind gslb vserver gslb-lb -serviceName gslb_SVC20
3 bind gslb vserver gslb-lb -serviceName gslb_SVC30
```

8. Bind the domain to the GSLB virtual server.

```
1 bind gslb vserver gslb-lb -domainName www.mycompany.com -TTL 30
```

9. Add an ADNS service that listens to the DNS queries.

```
1 add service Service-ADNS-1 10.14.39.21 ADNS 53
```

Synchronize the configuration in a GSLB setup

May 2, 2023

Typically, a GSLB setup has a few data centers with a GSLB site configured for each data center. In each NetScaler, participating in GSLB, configure one GSLB site as a local site and the others as remote sites. When you add another GSLB site at a later point, you must ensure that the configuration across all GSLB sites is identical. You can use the NetScaler's GSLB configuration synchronization option to synchronize the configuration across the GSLB sites.

The NetScaler appliance from which you use the synchronization option is referred to as the 'main site' and the GSLB sites on which the configuration is copied as the 'subordinate sites'. When you synchronize a GSLB configuration, the configurations on all the GSLB sites participating in the GSLB setup are made similar to the configuration on the main site.

Synchronization is done only on the parent sites. Synchronization does not affect GSLB child sites' configuration. This is because the parent site and the child site configurations are not identical. The child sites configuration consists only of its own and its parent site's details. Also, GSLB services are not always required to be configured in the child sites.

- The main node finds the differences between the configuration of the main node and subordinate node, and changes the configuration of the subordinate node to make it similar to the main node.

If you force a synchronization (use the 'force sync' option), the appliance deletes the GSLB configuration from the subordinate node and then configures the subordinate to make it similar to the main node.

- During synchronization, if a command fails, synchronization is not aborted and the error message are logged into a **.err** file in the **/var/netscaler/gslb** directory.
- Synchronization is done only on the parent sites. Synchronization does not affect the GSLB child sites' configuration. This is because the parent site and the child site configurations are not identical. The child sites configuration consists only of its own and its parent site's details. Also, GSLB services are not always required to be configured in the child sites.
- If you disable the internal user login, the GSLB auto sync uses the SSH keys to synchronize the configuration. But, to use GSLB auto sync in the partition environment, you must enable the internal user login and make sure that the partition user name in the local and remote GSLB sites is the same.

Note

- On the remote GSLB site RPC node, configure the firewall to accept auto-sync connections by specifying the remote site IP (cluster IP address for cluster setup) and port (3010 for RPC and 3008 for secure RPC). If the default route to reach the remote sites is in the management subnet, as in most cases, then NSIP is used as the source IP address.

To configure a different source IP address, you must have the GSLB site IP address and the SNIP in a different subnet. Also, you must have an explicit route defined to the remote site IP address through a GSLB site IP subnet.

For enhanced security, Citrix recommends that you change the internal user account and RPC node passwords. Internal user account password is changed through RPC node password. For details, see [Change an RPC node password](#).

If you use the saveconfig option, the sites that participate in the synchronization process automatically save their configuration, in the following way:

On the remote GSLB site RPC node, configure the firewall to accept auto-sync connections by specifying the remote site IP (cluster IP address for cluster setup) and port (3010 for RPC and 3008 for secure RPC). If the default route to reach the remote sites is in a management subnet, as in most cases, then NSIP is used as the source IP address.

To configure a different source IP address, you must have the GSLB site IP address and the SNIP in a different subnet. Also, you must have an explicit route defined to the remote site IP address through the GSLB site IP subnet. The source IP address cannot be synchronized across the sites participating in GSLB because the source IP address for an RPC node is specific to each NetScaler appliance. Therefore, after you force a synchronization (using the `sync gslb config -forceSync` command or by se-

lecting the ForceSync option in the GUI), you have to manually change the source IP addresses on the other NetScaler appliances. Port 22 is also required for synchronizing the database files to the remote site.

To improve the time taken for configuration synchronization on all GSLB sites

Configure the TCP profile settings at the command prompt as follows:

```
1 set tcpprofile nstcp_internal_apps -bufferSize 4194304 -sendBufferSize 4194304 -tcpmode ENDPOINT
```

Limitations of synchronization

- On the main site, the names of the remote GSLB sites must be identical to the names of sites configured on the NetScaler appliances hosting those sites.
- During the synchronization, traffic disruptions may occur.
- NetScaler is tested to synchronize up to 200,000 lines of the configuration.
- Synchronization may fail:
 - If the spill over method is changed from CONNECTION to DYNAMIC CONNECTION.
 - If you interchange the site prefix of the GSLB services bound to a GSLB virtual server on the main node and then try to synchronize.
 - If the RPC node passwords are different for NSIP and loopback IP address.
 - If you perform synchronization on GSLB sites that are configured in different partitions of the same NetScaler appliance.
- If you have configured the GSLB sites as High Availability (HA) pairs, the RPC node passwords of primary and secondary nodes must be the same.
- If you rename any GLSB entity that is part of your GSLB configuration (use the “show gslb runningConfig” command to display the GSLB configuration). You must use the force sync option to synchronize the configuration to other GSLB sites.

Note:

- In incremental synchronization, you don't have to use the force sync option to synchronize the configuration to other GSLB sites. This is applicable starting NetScaler release 13.0 build 79.x onwards.

Note: To overcome the limitations due to some settings in the GSLB configuration, you can use the force sync option. But, if you use the force sync option the GSLB entities are removed and readded to the configuration and the GSLB statistics are reset to zero. Hence the traffic is disrupted during the configuration change.

Points to note before starting the synchronization of a GSLB setup

Before you start the synchronization of a GSLB setup, make sure that:

- On all the GSLB sites including the main site, management access and SSH must be enabled for the IP address of the corresponding GSLB site. The IP address of a GSLB site must be an IP address owned by the NetScaler appliance. For more information about adding the GSLB site IP addresses and enabling Management Access, see “[Configuring a Basic GSLB Site](#)”.
- The GSLB configuration on the NetScaler appliance that is considered as the main site is complete and appropriate to be copied on all the sites.
- If you are synchronizing the GSLB configuration for the first time, all the sites participating in GSLB must have the GSLB site entity of their respective local sites.
- You are not synchronizing sites that, by design, do not have the same configuration.
- The main site and the subordinate sites run the same NetScaler versions. Starting from release 12.1, build 50.x, the appliance checks for the firmware version on main and subordinate sites before initiating synchronization. If the main and the subordinate sites run different versions, the synchronization is aborted for that remote site to avoid pushing any incompatible changes across the versions. Also, an error message displaying the site details on which the synchronization aborted appears.

The following figures display sample error messages from the CLI and the GUI.

```
> sh gslb syncStatus -summary
Displaying the status summary of the manual GSLB configuration synchronization:
```

Site Name	Status	Reason
s2	Failure	Error: Different netscaler release on the remote site. Local Site: 13.0, Remote Site: 12.1
s1	Success	All Done
s3	Success	All Done

Done
>

```
> sh gslb syncStatus -summary
Displaying the status summary of the manual GSLB configuration synchronization:
```

Site Name	Status	Reason
s2	Failure	Error: Different netscaler release on the remote site. Local Site: 13.0, Remote Site: 12.1
s1	Success	All Done
s3	Success	All Done

Done
>

Important

The following directories are synchronized as part of the GSLB configuration synchronization.

- /var/netscaler/locdb/
- /var/netscaler/ssl/
- /var/netscaler/inbuilt_db/

Manual synchronization between sites participating in GSLB

October 4, 2024

The manual synchronization of GSLB configuration across the master site and the slave sites is performed in the following manner:

- The master site detects the differences between the configuration of its own site and the slave site.
- The master site applies the difference in configuration to the slave site.
- The master site performs the configuration synchronization with all the slave sites in the GSLB setup, and completes the synchronization process.

Points to note

- After a GSLB configuration is synchronized, the configuration cannot be rolled back on any of the GSLB sites. Perform the synchronization only if you are sure that the synchronization process does not overwrite the configuration on the remote site. Site synchronization is undesirable when the local and remote sites have different configurations by design, which leads to site outage. If some commands fail and some commands succeed, the successful commands are not rolled back.
- If you force a synchronization (use the 'force sync' option), the NetScaler appliance deletes the GSLB configuration from the slave site. Then, master site configures the slave site to make it similar to its own site.
- During synchronization, if a command fails, synchronization is not aborted. The error messages are logged into an .err file in the /var/netscaler/gslb directory.
- If you use the `saveconfig` option, the sites participating in the synchronization process automatically save their configuration, in the following way:
 - The master site saves its configuration immediately before it initiates the synchronization process.

- The slave sites save their configuration after the process of synchronization is complete. A slave site saves its configuration only if the configuration difference was applied successfully on it. If synchronization fails on a slave site, you must manually investigate the cause of the failure and take corrective actions.

To synchronize a GSLB configuration by using the CLI:

At the command prompt, type the following commands to synchronize GSLB sites and verify the configuration:

```
1 sync gslb config [-preview | -forceSync <string> | -nowarn | -  
    saveconfig |] [-debug]  
2 show gslb syncStatus
```

Example:

```
1 sync gslb config  
2  
3 [WARNING]: Syncing config may cause configuration loss on other site.  
4  
5 Please confirm whether you want to sync-config (Y/N)? [N]:y  
6  
7 Sync Time: Dec 9 2011 10:56:9  
8  
9 Retrieving local site info: ok  
10  
11 Retrieving all participating gslb sites info: ok  
12  
13 Gslb_site1[Master]:  
14  
15 Getting Config: ok  
16  
17 Gslb_site2[Slave]:  
18  
19 Getting Config: ok  
20  
21 Comparing config: ok  
22  
23 Applying changes: ok  
24  
25 Done
```

To synchronize a GSLB configuration by using the GUI:

1. Navigate to **Traffic Management > GSLB > Dashboard**.
2. Click **Auto Synchronization GSLB** and select **ForceSyn**.
3. In **GSLB Site Name**, select the GSLB sites that are to be synchronized with the master node configuration.

Previewing GSLB synchronization

By previewing the GSLB synchronization operation, you can see the differences between the master node and each slave node. If there are any discrepancies, you can troubleshoot before synchronizing the GSLB configuration.

To preview the GSLB synchronization output by using the CLI:

At the command prompt, type the following command:

```
1 sync gslb config -preview
```

To preview the GSLB synchronization output by using the GUI:

1. Navigate to **Configuration > Traffic Management > GSLB > Dashboard**.
2. Click **Auto Synchronization GSLB** and select **Preview**.
3. Click **Run**.

A progress window displays any discrepancies in the configuration.

Debugging the commands triggered during synchronization process

You can view the status (success or failure) of each command triggered during the synchronization process and troubleshoot accordingly.

To debug the GSLB synchronization commands by using the CLI:

At the command prompt, type the following command:

```
1 sync gslb config -debug
```

To debug the GSLB synchronization commands by using the GUI:

1. Navigate to **Configuration > Traffic Management > GSLB > Dashboard**.
2. Click **Auto Synchronization GSLB** and select **Debug**.
3. Click **Run**. A progress window displays the status of each command triggered during synchronization.

GSLB location file synchronization

You can use the GSLB location file synchronization functionality using `GSLBSyncLocFile` parameter. During GSLB config synchronization, by default, the changes in the location database files are detected and automatically synchronized. Admins must manually copy the location DB files to the GSLB subordinate sites. Synchronizing location database files takes a long time. Therefore, avoiding it reduces the overall synchronization time.

To enable the GSLB location file synchronization using the CLI

At the command prompt, type the following command:

```
set gslb parameter -GSLBSyncLocFiles [ENABLED|DISABLED]
```

To enable the GSLB location file synchronization using the GUI

1. Navigate to **Configuration > Traffic Management > GSLB > Change GSLB Settings**.
2. In the **Set GSLB Parameters** page, select the **GSLB Sync Loc Files** check box. By default its enabled.

Real-time synchronization between sites participating in GSLB

October 6, 2023

You can use the `AutomaticConfigSync` parameter to automatically synchronize the real-time GSLB configuration of the main site to all the subordinate sites. You do not have to manually trigger the `AutoSync` option to synchronize the configuration.

You can automatically synchronize GSLB configuration of the main site to all the subordinate sites by using incremental synchronization or full synchronization. The `GSLBSyncMode` parameter allows you to choose the synchronization mode.

Note:

Starting from NetScaler release 13.0 build 79.x, incremental synchronization of GSLB synchronization is supported. By default, the synchronization is performed using incremental synchronization. Incremental synchronization can be performed by enabling the `IncrementalSync` parameter. For details, see [Incremental synchronization of GSLB configuration](#).

Best practices for using the real-time synchronization feature

- It is recommended that all the NetScaler appliances participating as sites have the same NetScaler software version.
- To change the RPC node password, first change the password on the subordinate site and then on the main site.
- Configure local GSLB sites on each site participating in GSLB.
- Enable `automaticConfigSync` on one of the sites where the configuration is performed. This site eventually gets synchronized to other GSLB sites.

- If there is a new configuration or changes are made to the existing configuration, make sure to check the status using the `show gslb syncStatus` command to confirm if the changes are synchronized across all sites or if there was any error.
- RSYNC port monitoring must be enabled.

To enable real-time synchronization by using the CLI

At the command prompt, type:

```
1 set gslb parameter [- automaticConfigSync (ENABLED | DISABLED)] [-
  MEPKeepAliveTimeout <secs>] [-GSLBSyncMode ( IncrementalSync |
  FullSync )] [-GSLBSyncLocFiles ( ENABLED | DISABLED)] [-
  GslbConfigSyncMonitor ( ENABLED | DISABLED )] [-GSLBSyncInterval <
  secs>] [-GSLBSyncSaveConfigCommand ( ENABLED | DISABLED )]
```

Example:

```
1 set gslb parameter - automaticConfigSync ENABLED
```

The real-time synchronization provides the following configurable parameters:

- **GSLBSyncMode**—Mode in which configuration is synchronized from main site to remote sites.
 - Possible values: IncrementalSync, FullSync
 - Default value: IncrementalSync
- **GSLBSyncLocFiles**—During GSLB config synchronization, by default, the changes in the location DB files are detected and automatically synchronized. Because the location DB directories do not change often, admins can disable automatically synchronizing the location DB files. Instead, admins must manually copy the location DB files to the GSLB subordinate sites. Synchronizing location DB files takes much time. Thus, avoiding it reduces the overall synchronization time.

Example to disable automatically synchronizing the location DB files:

```
1 set gslb parameter -GSLBSyncMode IncrementalSync -
  GSLBSyncLocFiles DISABLED
```

- **GslbConfigSyncMonitor**—Enable the GSLB Config Sync Monitor parameter to monitor the state of the subordinate sites' RSYNC port which is the SSH port 22 on remote GSLB site IP address. If the monitor shows the subordinate site state as DOWN, the RSYNC operation to that site is skipped. This reduces the synchronization delays caused by attempting to connect to the remote sites that are DOWN.

Example to enable RSYNC port monitoring in CLI:


```
1 set gslb parameter -GSLBSyncMode IncrementalSync -  
   GslbConfigSyncMonitor ENABLED
```

- **GSLBSyncInterval**—Set the time interval (in seconds) at which the GSLB configuration synchronization occurs. By default, the automatic GSLB configuration sync feature synchronizes the GSLB configuration automatically at every 10 seconds. You can change the time interval to any desired value. Refrain from setting this to a lower value, for example, not lesser than 5 seconds. Because synchronizing frequently might increase the management CPU consumption.

Note:

In an admin partition setup, the time interval can be set only in the default partition because it is a global parameter.

Example to set the sync interval:

```
1 set gslb parameter -AutomaticConfigSync ENABLED -GSLBSyncMode  
   IncrementalSync -GSLBSyncInterval 7
```

- **GSLBSyncSaveConfigCommand**—Enable this parameter to synchronize the `save ns config` command to subordinate sites, if the `AutomaticConfigSync` option is enabled.

Example to enable the synchronization of 'Save Config' Command:

```
1 set gslb parameter -AutomaticConfigSync ENABLED -  
   GSLBSyncSaveConfigCommand ENABLED
```

The `save ns config` command isn't synchronized to subordinate sites in certain scenarios as follows:

- Subordinate site is down or unreachable when config is saved on main site.
- Configuration has failed on a subordinate site.

To enable real-time synchronization by using the GUI

1. Navigate to **Configuration > Traffic Management > GSLB > Change GSLB Settings**.
2. In the **Set GSLB Parameters** page, you can perform the following:
 - To automatically synchronize the real-time GSLB configuration, select **Automatic Config-Sync**.

Note: This option must be enabled only in the site where the configuration is performed.

- To set the Automatic GSLB config sync interval, enter the time in seconds in the **GSLB Sync Interval** field.

- To enable RSYNC port monitoring, select the **GSLB Config Sync Monitor** check box.
- To disable automatically synchronizing the location DB files, clear the **GSLB Sync Loc Files** check box.
- To enable synchronizing of the `save ns config` command to the subordinate sites, select **Sync Save Config Command** check box.

← Set GSLB Parameters

RTT Tolerance (ms)**

LDNS Entry Timeout(secs)*

IPv4 LDNS Mask*

IPv6 LDNS Mask Length

GSLB Service State Delay Time (secs)

Undefaction

GSLB Service State Learning Time (secs)

Drop LDNS Requests

Automatic Config Sync

MEP Keep Alive Timeout

GSLB Sync Interval

GSLB Sync Mode

Override Persistency for Order

GSLB Sync Loc Files

GSLB Config Sync Monitor

Sync Save Config Command

<input type="checkbox"/>	PROBE MONITORS	PROBE ORDER
<input checked="" type="checkbox"/>	PING	10
<input checked="" type="checkbox"/>	DNS	20
<input checked="" type="checkbox"/>	TCP	30

OK Close

For information on the following topics, see [Manual synchronization between sites participating in GSLB](#).

- [Previewing GSLB synchronization](#)
- [Debugging the commands triggered during the synchronization process](#)

Points to note

- The consolidated log file related to the real-time synchronization is stored in the `/var/netScaler/gslb/periodic_sync.log` directory.
- The default configuration file is stored in the `/var/netScaler/gslb_sync/` directory.
- The main site uses the following directory structure:
 - The main site stores all its files in the `/var/netScaler/gslb_sync/master` directory.
 - The main site stores its configuration file that must be synced to the subordinate sites, in the `/var/netScaler/gslb_sync/master/gslbconf/` directory.

- The status files pulled from all the subordinate sites are stored in the `/var/netscaler/gslb_sync/master/slave` directory.
- The subordinate site uses the following directory structure:
 - The subordinate site picks up the latest configuration file to be applied from the `/var/netscaler/gslb_sync/slave/gslbconf` directory.
 - The subordinate site stores its status file in the `/var/netscaler/gslb_sync/slave/gslbstatus` directory.
- In an admin partition setup, the same directory structure is maintained in the location: `/var/partitions/partition name/netscaler/gslb_sync`.
- The clocks on all the sites must be set accurately to a real-time standard like Coordinated Universal Time (UTC).

Incremental synchronization of GSLB configuration

The automatic GSLB configuration synchronization feature checks for the configuration changes on the main site at the interval of every 10 seconds, and performs a synchronization. This sync interval value is configurable.

In incremental synchronization, only the configurations that have changed on the main site between the last synchronization and the subsequent sync interval (10 secs) is synchronized across all the subordinate sites. Incremental synchronization is the default behavior. Pushing only the incremental configurations considerably reduces the configuration file size, and thus the synchronization time. If an incremental synchronization fails, the system automatically performs a full configuration synchronization.

Incremental synchronization is performed in the following manner:

- The main site pushes the configuration file comprising of only its latest changes to all the subordinate sites. The latest change refers to the configurations that has changed between the last synchronization and the subsequent sync interval (10 secs).
- Each subordinate site applies the latest change to its own site.
- Incremental synchronization is not attempted on the subordinate sites, which are in DOWN state. When the site comes back UP, again synchronization is performed.
- The subordinate site generates status logs at each step and copies them to a file at a specific location.
- The main site pulls the status log files from the specified location.
- The main site prepares a log file with logs combined from all the subordinate sites.
- This combined log file is stored in the `“/var/netscaler/gslb/periodic_sync.log”` file.

For more information on the directories where the configuration files are stored, see [Points to note](#) section.

To enable GSLB configuration incremental synchronization by using the CLI

```
1 set gslb parameter -AutomaticConfigSync (ENABLED | DISABLED) -
  GSLBSyncMode (IncrementalSync | FullSync) -GslbConfigSyncMonitor (
  ENABLED | DISABLED) -GSLBSyncInterval <secs> -GSLBSyncLocFiles (
  ENABLED | DISABLED)
```

Example:

```
1 set gslb parameter -AutomaticConfigSync ENABLED -GSLBSyncMode
  IncrementalSync
```

To enable GSLB incremental synchronization by using the GUI

1. Navigate to **Traffic Management > GSLB > Dashboard > Change GSLB settings**.
2. In the **Set GSLB Parameters** page, choose **IncrementalSync** from the **GSLB Sync Mode** drop-down menu.

Full synchronization of GSLB configuration

Whenever there is a configuration change in the main site, the complete GSLB running configuration on the main site is pushed to all the subordinate sites.

Even if incremental synchronization is configured, a full synchronization is performed when the main site does not know the configuration status of the subordinate site. Some of such scenarios are as follows:

- Enable the automatic GSLB configuration synchronization feature for the first time.
- Reboot the NetScaler appliance.
- GSLB deployment has multiple main sites, and another main site becomes the active main site.
- Add a new subordinate site to the GSLB deployment.

GSLB configuration full synchronization is performed in the following manner:

- The main site pushes its latest configuration file to all the subordinate sites.
- Each subordinate site compares its own configuration with the latest configuration file sent by the main site. The subordinate site identifies the difference in configuration, and applies the delta configuration for its own site.
- The subordinate site generates status logs at each step and copies them to a file at a specific location.
- The main site pulls the status log files from the specified location.
- The main site prepares a log file with logs combined from all the subordinate sites.
- This combined log file is stored in the “/var/netscaler/gslb/periodic_sync.log” file.

If you attempt to manually synchronize (with the `sync gslb config` command) a site while it is being autosynchronized, a “Sync in progress” error message appears. Autosynchronization cannot be triggered for a site that is in the process of being synchronized manually.

Note:

Starting with NetScaler 12.1 build 49.37, SNMP traps are generated when you synchronize the GSLB configuration. In real-time synchronization, the synchronization status in the first SNMP trap is captured as failure. You can ignore this status because a second SNMP trap is automatically generated immediately after the first trap with the actual synchronization status. However, if the synchronization failed in the second attempt also, SNMP trap is not generated because the synchronization status has not changed from the previous synchronization status.

For details on configuring NetScaler appliance to generate traps, see [Configuring the NetScaler to generate SNMP traps](#).

To enable GSLB full synchronization by using the CLI

```
1 set gslb parameter -GSLBSyncMode (IncrementalSync | FullSync)
```

Example:

```
1 set gslb parameter -GSLBSyncMode FullSync
```

To enable GSLB incremental synchronization by using the GUI:

1. Navigate to **Traffic Management > GSLB > Dashboard > Change GSLB settings**.
2. In the **Set GSLB Parameters** page, choose **FullSync** from the **GSLB Sync Mode** drop-down menu.

Multiple main sites in a GSLB deployment

The NetScaler appliance supports multiple main sites in an active-passive deployment. It is recommended to have two main sites in a GSLB deployment to cope against GSLB main site failure. Having two main sites can avoid single point of failure of GSLB configuration synchronization. At any time, only one main site can actively process the GSLB configuration from the user. If the configuration changes are performed simultaneously in more than one main site, it might lead to configuration inconsistency or configuration losses. Hence, it is recommended to perform configuration changes from only one main site at a time, and use the other main site as a backup when the active main site fails.

Note:

When multiple main sites are used in a GSLB deployment, RSYNC monitoring must be enabled.

To make a GSLB node as one of the main sites for GSLB configuration synchronization, run the following command:

```
1 set gslb parameter -automaticConfigSync Enabled
```

View GSLB synchronization status and summary

September 21, 2020

After the GSLB configuration is synchronized across the GSLB sites, you can view the detailed status and the summary of the last GSLB sync operation. This is applicable to both manual and real-time GSLB synchronization.

To view the GSLB synchronization status or summary by using the CLI

At the command prompt, type:

```
1 show gslb sync status
```

or

```
1 show gslb syncStatus -summary
```

Sample configuration output for GSLB manual synchronization

The following output displays the status of the manual GSLB configuration synchronization.

```

> sh gslb syncStatus
Displaying the status of the manual GSLB configuration synchronization:

gslb_site1[Master]:
  Getting Config: ok
gslb_site2[Slave]:
  Syncing gslb static proximity database: ok
  Syncing inbuilt gslb static proximity database : ok
  Getting Config: ok
  Comparing config: ok
  Applying changes: ok
gslb_natsite1[Slave]:
  Syncing gslb static proximity database: ok
  Syncing inbuilt gslb static proximity database : ok
  Getting Config: ok
  Comparing config: ok
  Applying changes: ok

Done
> █

```

The following output displays the status summary of the manual GSLB configuration synchronization.

```

> sh gslb syncStatus -summary
Displaying the status summary of the manual GSLB configuration synchronization:

-----
  Site Name      Status      Reason
-----
  gslb_site1     Success     All Done
  gslb_site2     Failure     Error executing command on gslb site...ERROR: Connection failed
  gslb_natsite1  Success     All Done
Done
>

```

Sample configuration output for GSLB real-time synchronization

The following output displays the status of the real-time GSLB configuration synchronization for the master site:

```
1 > sh gslb syncStatus
```

```
2 Displaying the status of the real time GSLB configuration
   synchronization as master node:
3
4 site2[Master]:
5     New GSLB configuration detected at Fri Jan 23 20:54:24
      2020
6     Fetching current configuration: Done
7     Updating default.conf file: Done
8 site1[Slave]:
9     Syncing gslb static proximity database to node site1:
      Done
10    Syncing inbuilt GSLB static proximity database to node
      site1: Done
11    Syncing ssl certificates, keys and CRLS to node site1:
      Done
12    Syncing current configuration to site1: Done
13    Pulling status files from site1: Status file not
      available yet(Sync in progress)
14    Pulling status files from site1: Done
15    site1 received new configuration from 10.102.217.205 in
      file 2JNSzClRHk5+pdek6szQ3g-default-10.102.217.210.
      conf
16    Firing set gslb parameter -startConfigSync ENABLED
      command: Done
17    Fetching running GSLB Config: Done
18    Comparing config: Done
19    Applying changes: Done
20    Firing set gslb parameter -startConfigSync DISABLED
      command: Done
21    Updating default.conf file: Done
22 Done
```

The following output displays the status of the real-time GSLB configuration synchronization for the slave site:

```
1 > sh gslb syncStatus
2 Displaying the status of the real time GSLB configuration
   synchronization as slave node:
3
4     site1 received new configuration from 10.102.217.205 in
      file 2JNSzClRHk5+pdek6szQ3g-default-10.102.217.210.
      conf
5     Firing set gslb parameter -startConfigSync ENABLED
      command: Done
6     Fetching running GSLB Config: Done
7     Comparing config: Done
8     Applying changes: Done
9     Firing set gslb parameter -startConfigSync DISABLED
      command: Done
10    Updating default.conf file: Done
11 Done
```

The following output displays the status summary of the real-time GSLB configuration synchroniza-

tion for the master site:

```

1 > sh gslb syncStatus -summary
2 Displaying the status summary of the real time GSLB configuration
  synchronization as master node:
3
4 -----
5           Site Name                Reason                Status
6 -----
7           site2                    All Done              Success
8           site1                    All Done              Success
9
10 Done
  
```

The following output displays the status summary of the real-time GSLB configuration synchronization for slave site:

```

1 > sh gslb syncStatus -summary
2 Displaying the status summary of the real time GSLB configuration
  synchronization as slave node:
3
4 -----
5           Site Name                Reason                Status
6 -----
7           site1                    All Done              Success
8
9 Done
  
```

To view the GSLB synchronization status or summary by using the GUI

1. Navigate to **Configuration > Traffic Management > GSLB > Dashboard**.
2. Click **View Synchronization Summary** or **View Synchronization Status**, as required.

SNMP traps for GSLB configuration synchronization

May 2, 2023

Starting with NetScaler 12.1 build 49.xx, the NetScaler appliance generates SNMP traps for both local and remote sites when you synchronize the GSLB configuration. SNMP traps are generated for both manual synchronization and real-time synchronization.

When you synchronize the GSLB configuration for the first time, SNMP traps are generated. In the subsequent synchronization attempts, the SNMP traps are generated only if there is a change in the synchronization status from the previous synchronization status. Also, the SNMP traps are generated only for sites for which the synchronization status changed from the previous state.

For example, consider that the first GSLB configuration synchronization is successful. When you synchronize the configuration for the second time and if the synchronization is successful again, then SNMP traps are not generated because the status is not changed. However, in the third attempt, if the synchronization fails for one of the sites, then SNMP trap is generated for that site alone.

In a high availability and a cluster setup, the appliance generates the SNMP traps when you synchronize the GSLB configuration from the new node irrespective of the previous synchronization status. Also, if SNMP trap option was previously disabled and then enabled, SNMP traps are generated from that point onwards irrespective of previous synchronization status.

The SNMP traps of GSLB configuration synchronization provide the following details:

- Name of the GSLB site for which the SNMP trap is sent.
- GSLB configuration synchronization status: Success or Failure.
- GSLB configuration synchronization mode: Incremental sync or Full sync.
- (Optional) Detailed information about the SNMP traps.

The SNMP traps are generated in the following scenarios:

- GSLB synchronization status for a GSLB site flips from Success to Failure, and conversely.
- GSLB synchronization mode changes from incremental synchronization to full synchronization, and conversely.

Note:

Even when incremental synchronization is enabled, if full synchronization is performed on a GSLB site for some reason, the reason for Full sync is mentioned in the “Detailed information” section of the trap message. For example, when a new GSLB site is added to the GSLB configuration.

Sample SNMP trap messages

The following figure displays a sample SNMP trap for `gslb_site2`, where the GSLB configuration synchronization is successful using the Full sync mode.

```
2021-03-18 18:18:58 <UNKNOWN> [UDP: [10.102.146.2]:3000]:
iso.3.6.1.2.1.1.3.0 = Timeticks: (667165) 1:51:11.65 iso.3.6.1.6.3.1.1.4.1.0 = OID: iso.3.6.1.4.1.5951.1.1.0.180 iso.3.6.1.4.1.5951.4.1.10.2.77.0 = STRING: "gslb_site2" iso.3.6.1.4.1.5951.4.1.10.2.78.0 = STRING: "GSLB Sync Success, Full Sync Mode, Switching to Inc Sync Mode" iso.3.6.1.4.1.5951.4.1.1.2.0 = IPAddress: 10.102.146.2
```

The following figure displays a sample SNMP trap for gslb_site2, where the GSLB configuration synchronization is successful using the incremental sync mode.

```
2021-03-18 18:24:18 <UNKNOWN> [UDP: [10.102.146.2]:3000]:
iso.3.6.1.2.1.1.3.0 = Timeticks: (699113) 1:56:31.13 iso.3.6.1.6.3.1.1.4.1.0 = OID: iso.3.6.1.4.1.5951.1.1.0.180 iso.3.6.1.4.1.5951.4.1.10.2.77.0 = STRING: "gslb_site2" iso.3.6.1.4.1.5951.4.1.10.2.78.0 = STRING: "GSLB Sync Success, Inc Sync Mode" iso.3.6.1.4.1.5951.4.1.1.2.0 = IPAddress: 10.102.146.2
```

The following figure displays a sample SNMP trap for gslb_site2, where the GSLB configuration synchronization using the incremental sync mode is failed. The error message indicates that you must manually fix the errors to complete the synchronization.

```
2021-03-18 18:17:34 <UNKNOWN> [UDP: [10.102.146.2]:3000]:
iso.3.6.1.2.1.1.3.0 = Timeticks: (658753) 1:49:47.53 iso.3.6.1.6.3.1.1.4.1.0 = OID: iso.3.6.1.4.1.5951.1.1.0.180 iso.3.6.1.4.1.5951.4.1.10.2.77.0 = STRING: "gslb_site2" iso.3.6.1.4.1.5951.4.1.10.2.78.0 = STRING: "GSLB Sync Failure, Inc Sync Mode, Site is not in sync, Incremental config application has failed, Switching to Full Sync Mode." iso.3.6.1.4.1.5951.4.1.1.2.0 = IPAddress: 10.102.146.2
2021-03-18 18:17:49 <UNKNOWN> [UDP: [10.102.146.2]:3000]:
iso.3.6.1.2.1.1.3.0 = Timeticks: (660256) 1:50:02.56 iso.3.6.1.6.3.1.1.4.1.0 = OID: iso.3.6.1.4.1.5951.1.1.0.180 iso.3.6.1.4.1.5951.4.1.10.2.77.0 = STRING: "gslb_site2" iso.3.6.1.4.1.5951.4.1.10.2.78.0 = STRING: "GSLB Sync Failure, Full Sync Mode, Site is not in sync, Full sync config application has failed, Please fix the errors." iso.3.6.1.4.1.5951.4.1.1.2.0 = IPAddress: 10.102.146.2
```

The following figure displays a sample SNMP trap for gslb_site2, where the GSLB configuration synchronization using the incremental sync mode is failed. It also indicates the reason for sync failure, that is the site monitor is DOWN.

```
2021-03-18 18:21:39 <UNKNOWN> [UDP: [10.102.146.2]:3000]:
iso.3.6.1.2.1.1.3.0 = Timeticks: (683289) 1:53:52.89 iso.3.6.1.6.3.1.1.4.1.0 = OID: iso.3.6.1.4.1.5951.1.1.0.180 iso.3.6.1.4.1.5951.4.1.10.2.77.0 = STRING: "gslb_site2" iso.3.6.1.4.1.5951.4.1.10.2.78.0 = STRING: "GSLB Sync Failure, Inc Sync Mode, Syncing current configuration to gslb_site2: Skipped, Site Monitor is down" iso.3.6.1.4.1.5951.4.1.1.2.0 = IPAddress: 10.102.146.2
```

GSLB dashboard

September 21, 2020

You can view the overall status of the GSLB sites participating in GSLB on the GSLB dashboard.

You can access the GSLB settings from the dashboard. You can also start the GSLB configuration wizard from the dashboard. Additionally, you can perform the synchronization and test the GSLB setup from the dashboard.

To access the GSLB dashboard, navigate to **Configuration > Traffic Management > GSLB > Dashboard**.

Monitor GSLB services

May 2, 2023

When you bind a remote service to a GSLB virtual server, the GSLB sites exchange metric information, including network metric information, which is the round-trip-time and persistence information.

If a metric exchange connection is momentarily lost between any of the participating sites, the remote site is marked as DOWN and load balancing is performed on the remaining sites that are UP. When metric exchange for a site is DOWN, the remote services belonging to the site are marked DOWN as well.

The NetScaler appliance periodically evaluates the state of the remote GSLB services by using either MEP or monitors that are explicitly bound to the remote services. Binding explicit monitors to local services is not required, because the state of the local GSLB service is updated by default using the MEP. However, you can bind explicit monitors to a remote service. When monitors are explicitly bound, the state of the remote service is not controlled by the metric exchange.

By default, when you bind a monitor to a remote GSLB service, the NetScaler appliance uses the state of the service reported by the monitor. However, you can configure the NetScaler appliance to use monitors to evaluate services in the following situations:

- Always use monitors (default setting).
- Use monitors when MEP is DOWN.
- Use monitors when remote services and MEP are DOWN.

The second and third of the above settings enable the appliance to stop monitoring when MEP is UP. For example, in a hierarchical GSLB setup, a GSLB site provides the MEP information about its child sites to its parent site. Such an intermediate site may evaluate the state of the child site as DOWN because of network issues, though the actual state of the site is UP. In this case, you can bind monitors to the services of the parent site and disable MEP to determine the actual state of the remote service. This option enables you to control the manner in which the states of the remote services are determined.

To use monitors, first create them, and then bind them to GSLB services.

Configure monitor trigger

You can configure a GSLB site to always use monitors (the default), use monitors when MEP is down, or use monitors when both the remote service and MEP are down. In the latter two cases, the NetScaler appliance stops monitoring when MEP returns to the UP state.

To configure monitor triggering by using the command line interface

At the command prompt, type:

```
1 set gslb site <siteName> -triggerMonitor (ALWAYS | MEPDOWN | MEPDOWN_SVCDOWN)
```

Example:

```
1 set gslb site Site-GSLB-North-America -triggerMonitor Always
```

To configure monitor triggering by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Sites**, and double-click the site.
2. In the **Trigger Monitors** drop-down list, select an option for when to trigger monitoring.

Add or remove monitors

To add a monitor, you specify the type and the port. You cannot remove a monitor that is bound to a service. You must first unbind the monitor from the service.

To add a monitor by using the command line interface

At the command prompt, type the following commands to create a monitor and verify the configuration:

```
1 add lb monitor <monitorName> -type <monitorType> -destPort <portNumber>
2
3 show lb monitor <monitorName>
```

Example:

```
1 add lb monitor monitor-HTTP-1 -type HTTP -destPort 80
2 show lb monitor monitor-HTTP-1
```

To remove a monitor by using the command line interface

At the command prompt, type:

```
1 rm lb monitor <monitorName>
```

To add a monitor by using the configuration utility

Navigate to

Traffic Management > Load Balancing > Monitors, and add or delete a monitor.

Bind monitors to a GSLB service

Once you create monitors, you must bind them to GSLB services. When binding monitors to the services, you can specify a weight for the monitor. After binding one or more weighted monitors, you can configure a monitor threshold for the service. This threshold takes the service down if the sum of the bound monitor weights falls below the threshold value.

Note: In the configuration utility, you can set both the weight and the monitoring threshold at the same time that you bind the monitor. When using the command line, you must issue a separate command to set the service's monitoring threshold.

To bind the monitor to the GSLB service by using the command line interface

At the command prompt, type:

```
1 bind monitor <name> <serviceName> [ -state (Enabled | Disabled) ] -  
weight <positiveInteger>
```

Example:

```
1 bind monitor monitor-HTTP-1 service-GSLB-1 -state enabled -weight 2
```

To set the monitoring threshold for a GSLB service by using the command line interface

At the command prompt, type:

```
1 set gslb service <ServiceName> -monThreshold <PositiveInteger>
```

Example:

```
1 set gslb service service-GSLB-1 -monThreshold 9
```

To bind the monitor to the GSLB service by using the configuration utility

1. Navigate to Traffic Management > GSLB > Services.
2. Click the **Monitor** section and bind the monitor to the GSLB service.

To set the monitoring threshold for a GSLB service by using the configuration utility


1. Navigate to Traffic Management > GSLB > Services.
2. Click the **Monitor Threshold** section and enter a threshold value.

How domain name system supports GSLB

May 2, 2023

The domain name system (DNS) is considered as a distributed database, which uses the Client/Server architecture. Name Servers are the servers in the architecture, and the resolvers are the clients that are library routines installed on an operating system that create and send queries across the network.

The logical hierarchy of the DNS is shown in the following diagram:

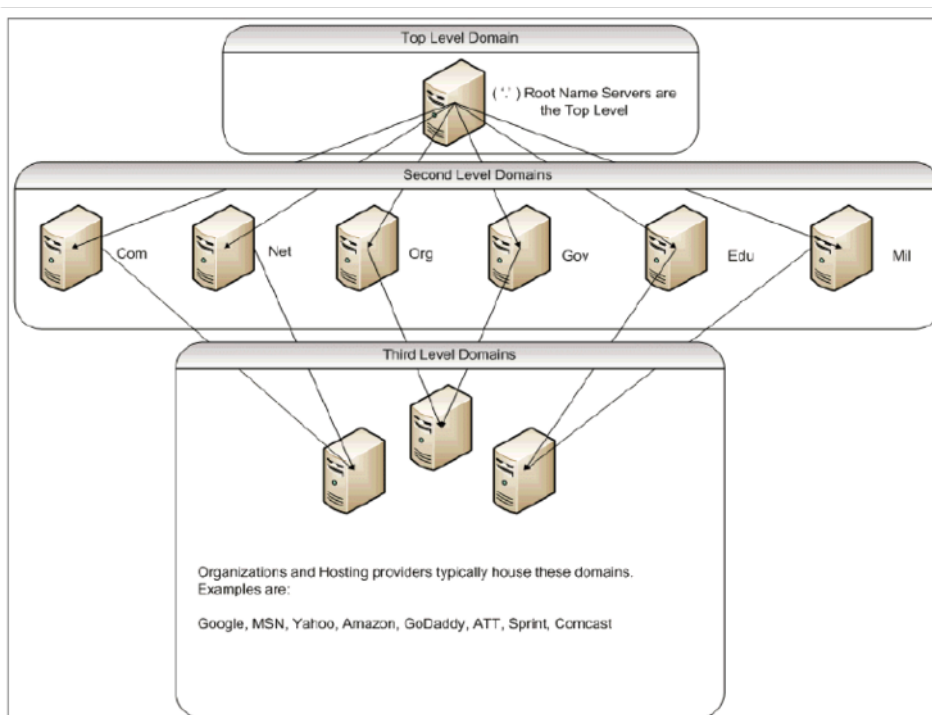

Note:

The second-level root servers are responsible for maintaining Name server to Address mappings for Name server delegations within the .com, .net, .org, .gov domains, and so on. Each domain within the second-level domains is responsible for maintaining Name Server to Address mappings for the lower-level organizational domains. At the organization level, the individual host addresses are resolved for www, FTP, and other service providing hosts.

Delegation

The main purpose of the current DNS topology is to ease the burden of maintaining all address records on one authority. This allows for delegation of an organization name space to that particular organization. The organization can then further delegate its space to subdomains within the organization. For

example, under `citrix.com` you can create subdomains called `sales.citrix.com`, `education.citrix.com`, and `support.citrix.com`. The corresponding departments can maintain their own set of Name servers that are authoritative for their subdomain, and then maintain their own set of host name to address mappings. No single department is responsible for maintaining all of Citrix address records. Each department can change addresses and modify topologies, and not impose more work at the higher-level domain or organization.

Benefits of the hierarchical topology

Some of the benefits of the hierarchical topology include:

- Scalability
- Adding caching functionality into Name servers at each level, where a DNS request is served by a host that is not authoritative for a particular domain but can contribute the answer to the query, and cut down on congestion and response time.
- Caching also creates redundancy and resiliency to server failure. If one name server fails, it is still possible that records can be served from other servers that have recent cached copies of the same records.

Resolvers

Resolvers are the client component in the DNS system. Programs that are running on a host that need information from the domain name space use the resolver. The resolver handles:


- Querying a name server.
- Interpreting responses (which might be resource records or an error).
- Returning the information to the programs that requested it.

The resolver is a set of library routines that are compiled into programs like telnet, FTP, and ping. They are not separate processes. The resolvers can put together a query, send it, and wait for an answer. And, send it again (possibly to a secondary Name Server) if it is not answered within a certain time. These types of resolvers are known as stub resolvers. Some resolvers have the added functionality to cache records, and honor time to live (TTL). In Windows, this functionality is available through the DNS Client service; viewable through the “services.msc” console.

Name Servers

Name Servers generally store complete information about a particular part of a domain name space (called a zone). The Name Server is then said to have authority for that zone. They can also be authoritative for multiple zones.

The difference between a domain and a zone is subtle. A domain is the full set of entities including its subdomains while a zone is only the information within a domain that is not delegated to another Name Server. An example of a zone is `citrix.com`, while `sales.citrix.com` is a separate zone if that zone is delegated to another Name Server within the subdomain. In this case, the primary Citrix zone can include `citrix.com`, `it.citrix.com`, and `support.citrix.com`. Because the `sales.citrix.com` is delegated, it is not part of the zone that the `citrix.com` Name Server is authoritative over. The following diagram shows the two zones.

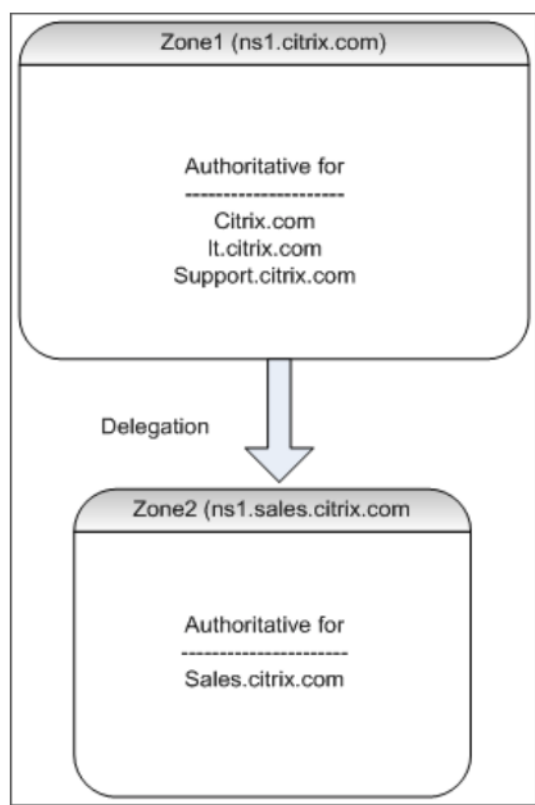


To properly delegate a subdomain, you must assign authority for the subdomain to different Name Servers. In the preceding example, the `ns1.citrix.com` does not contain information about the `sales.citrix.com` subdomain. Instead, it contains pointers to the Name servers that are authoritative for the `ns1.sales.citrix.com` subdomain.

Root name servers and query resolution

Root Name servers know the IP addresses of all the Name servers authoritative for the second-level domains. If a Name Server does not have information about a given domain in its own data files, then it only needs to contact a root server to begin traversing the proper branch of the **DNS** tree structure to eventually get to the given domain. This involves a series of requests to multiple Name servers to help with the tree traversal to find the next authoritative Name server, which needs to be contacted

for further resolution.

The following diagram shows a typical DNS request, assuming that there is no cached record for the requested name during the traversal. The following example uses a mock up of the Citrix domain.

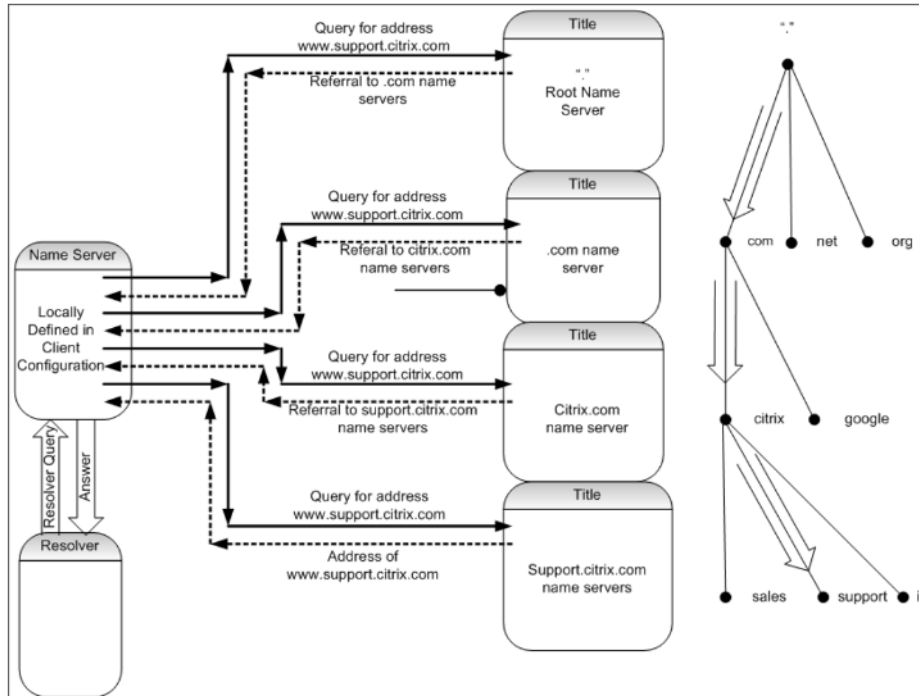

Recursive and non-recursive queries

The preceding example demonstrates the two types of queries that can occur.

- Recursive query: The query between the resolver and the locally configured Name server is recursive. This means that the Name server receives the query and does not respond to the resolver until the query is fully answered, or an error is returned. If the Name Server receives a referral to the query, then the Name server follows the referral until the Name server finally receives the answer (IP address) returned.
- Non-recursive query: The query that the locally configured Name server makes to the subsequent authoritative domain-level Name server is non-recursive (or iterative). Each request is immediately responded with either a referral to a lower-level authoritative server or the answer to the query, if the queried Name server contains the answer in its data files or its cache.

Caching

Although the resolution process is involved, and might potentially require small requests to several hosts, it is fast. One of the factors that increases the speed of DNS resolution is caching. Each time a

Name server receives a recursive query, it might have to communicate to other servers to eventually get to the proper authoritative server for the specific request. It stores all of the information that it receives for future reference. When the next client makes a similar request, such as a different host but in the same domain, it already knows the Name server that is authoritative for that domain, and can send a request directly there instead of starting at the root Name server.

Caching can occur for negative responses also, such as the queries for hosts that do not exist. In this case, the server must not query the authoritative Name server for the requested domain to figure out that the host does not exist. To save time, the Name server simply checks the cache and responds back with the negative record.

Name servers do not cache records indefinitely, or else you can never update the IP addresses. To avoid synchronization problems, DNS responses contain a time to live (TTL). This field describes the time interval for which the cache can store a record before it must discard it and check with the authoritative Name server for any updated records. If the records have not changed, the use of TTL also allows rapid dynamic responses from devices performing GSLB.

Resource record types

Various RFCs provide a comprehensive list of DNS resource record types and its description. The following table lists the common resource record types.

Resource record type	Description	RFC
A	A host address	RFC 1035
NS	An authoritative name server	RFC 1035
MD	A mail destination (Obsolete - use MX)	RFC 1035
MF	A mail forwarder (Obsolete - use MX)	RFC 1035
CNAME	The canonical name for an alias	RFC 1035
SOA	Marks the start of a zone of authority	RFC 1035
WKS	A well known service description	RFC 1035
PTR	A domain name pointer	RFC 1035
HINFO	Host information	RFC 1035
MINFO	Mailbox or mail list information	RFC 1035
MX	Mail exchange	RFC 1035

Resource record type	Description	RFC
TXT	Text strings	RFC 1035
AAAA	IP6 Address	RFC 3596
SRV	Server selection	RFC 2782]

How GSLB supports DNS

GSLB uses algorithms and protocols that decide which IP address must be sent for a DNS query. GSLB sites are geographically distributed and there is a DNS authoritative Name server at each site running as a service on the NetScaler appliance. All Name servers at the various sites involved are authoritative for the same domain. Each of the GSLB domains is a subdomain for which a delegation is configured. Therefore, the GSLB Name servers are authoritative and can use one of the various load balancing algorithms to decide which IP address to return.

A delegation is created by adding a Name server record for the GSLB domain in the parent domain database files and a subsequent address record for the Name servers that are used for the delegation. For example, if you want to use GSLB for www.citrix.com, then the following Bind SOA file can be used to delegate requests to www.citrix.com to Name Servers: Netscaler1 and Netscaler2.

```

1 #####
2 @ IN SOA citrix.com. hostmaster.citrix.com. (
3 1 ; serial
4 3h ; refresh
5 1h ; retry
6 1w ; expire
7 1h ) ; negative caching TTL
8 IN NS ns1
9 IN NS ns2
10 IN MX 10 mail
11
12 ns1 IN A 10.10.10.10
13 ns2 IN A 10.10.10.20
14 mail IN A 10.20.20.50
15
16 ### Old Configuration if www was not delegated to a GSLB name server
17 www IN A 10.20.20.50
18
19 ### Updated Configuration
20 Netscaler1 IN A xxx.xxx.xxx.xxx
21 Netscaler2 IN A yyy.yyy.yyy.yyy
22 www IN NS Netscaler1.citrix.com.
23 www IN NS Netscaler2.citrix.com.
24 ###
25 IN MX 20 mail2

```

```
26 mail2 IN A 10.50.50.20
27 #####
```

Understanding BIND is not a requirement for configuring DNS. All compliant DNS server implementations have a method of creating the equivalent delegation. Microsoft DNS servers can be configured for delegation using the instructions at [Create a zone delegation](#).

What makes GSLB on NetScaler appliance different from using the standard DNS service for distributing traffic is that the NetScaler GSLB sites exchange data using a proprietary protocol called Metric Exchange Protocol (MEP). With MEP, the GSLB sites are able to maintain information about all other sites. When a DNS request is received, the MEP considers the GSLB metrics to determine information such as the following:

- Site with the least number of current connections
- Site that is closest to the LDNS server, which sent the request based on round trip times (RTT).

There are several load balancing algorithms that can be used, but GSLB is a DNS with the brain underneath telling the Name Server (hosted on the NetScaler appliance) which address must be sent based on metrics of the participating sites.

Other benefits that GSLB provides are the ability to maintain persistence (or site affinity). Responses to the incoming DNS queries can be compared with the source IP address to determine if that address was directed to a particular site in the recent past. If so, then the same address is sent in the DNS response to ensure that the client session is maintained.

Another form of persistence is obtained at the site level by using HTTP redirects, or HTTP proxying. These forms of persistence occur after the DNS response occurs. Therefore, if you get an HTTP request at a site that contains a cookie to direct the request to a different participating site, then you can either respond with a redirect or proxy the request to the appropriate site.

Metric exchange protocol

Metric Exchange Protocol (MEP) is used to share the data used in GSLB calculations across sites. Using MEP connections, you exchange three types of data. These connections need not be secure over TCP port 3011 or can be secure using SSL over TCP port 3009.

The following three types of data are exchanged, and have their own intervals and exchange methods.

- **Site metric exchange:** This is a polling exchange model. For example, if site1 has a configuration for site2 services, then every second site1 asks site2 for the status of the GSLB services. Site2 responds with the state and other load details.

- **Network metric exchange:** This is the LDNS RTT information exchange, which is used in the dynamic proximity load balancing algorithm. This is a push exchange model. Every five seconds, each site pushes its data to other participating sites.
- **Persistency exchange:** This is for SOURCEIP persistency exchange. This is also a push exchange model. Every five seconds, each site pushes its data to other participating sites.

By default, site services are monitored over MEP based on polling information only. If you bind monitors based on monitor interval, the state is updated and you can control the frequency of the updates by setting the monitoring interval accordingly.

Priority order for GSLB services

October 8, 2023

The priority order for services feature enables you to prioritize the order for services or service groups based on the load balancing selection preferences. You can configure the priority order when you do the following:

- Bind a service to a GSLB virtual server.
- Bind a service group to a GSLB virtual server.
- Bind a service group member to the GSLB service group.

Currently, you can configure the priority order for services using the following approaches. However, these approaches have the following limitations:

- Configuring a backup virtual server chain: The number of configuration lines is high, and you must run the `show` command several times to know the state of all the GSLB services for each virtual server.
- Configuring the preferred location: You must create location entries for all your application endpoints.

The priority order for services feature addresses the preceding limitations with fewer configuration commands, and helps you to accomplish the preferred location configuration without the need of location representation of all GSLB services' IP addresses.

Configure priority order for GSLB services

To configure the priority order for GSLB services, the `-order <number>` parameter is added to the bind commands.

Note:

The lowest order number has the highest priority.

Command:

```
bind gslb vserver <vservname> -servicename/servicegroupname <
servicename/servicegroupname> -order <number>
```

For example, consider a set of services that are bound to a GSLB virtual server (gv1). Using the `- order <number>` parameter, you can prioritize the order of selection of services as follows:

- Set 1 (s1, s2) bound to gv1 –order 1
- Set 2 (s3, s4) bound to gv1 –order 2
- Set 3 (s5, s6) bound to gv1 –order 3

After you bind the services to gv1, and when gv1 receives the client traffic, the order of selection of services is as follows:

- The virtual server (gv1) selects the services in set 1 (s1 and s2) with order number 1, because this set is assigned the lowest order number. By default, the lowest order number has the highest priority.
- If all the services in set 1 are DOWN, gv1 selects set 2 (s3 and s4) with order number 2.
- If all the services in set 1 and set 2 are down, gv1 selects set 3 (s5 and s6) with order number 3.

Configure priority order for GSLB services using the CLI

To configure the priority order for the GSLB services, type the following commands at the command prompt:

1. Add GSLB sites.

```
add gslb site site1 1.1.1.1
add gslb site site2 1.1.1.2
```

2. Add a GSLB virtual server.

```
add gslb vserver gv1 HTTP
```

3. Add GSLB services.

```
add gslb service gsvc1 1.1.1.3 http 80 -sitename site1
add gslb service gsvc2 1.1.1.4 http 80 -sitename site2
add gslb service gsvc3 1.1.1.5 http 80 -sitename site1
add gslb service gsvc4 1.1.1.6 http 80 -sitename site2
```

```
add gslb service gsvc5 1.1.1.7 http 80 -sitename site1
add gslb service gsvc6 1.1.1.8 http 80 -sitename site2
```

4. Set the order number and bind the services to the GSLB virtual server.

```
bind gslb vserver gv1 gsvc1 -order 1
bind gslb vserver gv1 gsvc2 -order 1
bind gslb vserver gv1 gsvc3 -order 2
bind gslb vserver gv1 gsvc4 -order 2
bind gslb vserver gv1 gsvc5 -order 3
bind gslb vserver gv1 gsvc6 -order 3
```

Configure priority order for GSLB services using the GUI

Prerequisites:

- You have created GSLB sites.
- You have created a GSLB virtual server.
- You have created GSLB services.

To configure the priority order for GSLB services and bind them to the GSLB virtual server, do the following:

1. Navigate to **Traffic Management > GSLB > Virtual Servers** and double-click the GSLB virtual server.
2. In **GSLB Virtual Server**, under the **GSLB Services and GSLB Service Group Binding** section, click **GSLB Virtual Server to GSLB Service Bindings**.
3. In the **GSLB Services and GSLB Service Group Binding** dialog, click **Add Binding**.
4. In the **GSLB Service Binding** dialog box, select a service.
5. Type a number in the **Order** field to set the priority order for the service.

GSLB Service Binding

Service Name
site1_gsvc1

Binding Details

Weight
1 ⓘ

Dynamic Weight
0

Cumulative Weight
1

Order
1

6. Click **Bind**.
7. Repeat steps 1–6 to configure different priority order number for different services.

Configure priority order for GSLB services using LB policy commands

By default, the lowest order number has the highest priority. However, you can defer this default behavior using the new LB action and policy commands. You can configure the service selection order based on the incoming client traffic or client data.

For example, consider a set of services that are bound to a GSLB virtual server (gv1). Using the `-order <number>` parameter, you have configured the priority order for services as follows:

- Set 1 (s1, s2) bound to gv1 `-order 1`
- Set 2 (s3, s4) bound to gv1 `-order 2`
- Set 3 (s5, s6) bound to gv1 `-order 3`

By default, the lowest order number has the highest priority. Therefore, the default priority order of preference is 1, 2, and 3 for services in set 1, set2, and set3, respectively. However, for a specific client traffic, you want to change the priority order to 3, 1, and 2. To achieve this, you can add an LB policy and bind it to gv1.

An LB policy command consists of two elements: a rule, and an action. The rule is associated with an action, which is performed if a request matches the rule.

Note:

The LB policy commands are common for both LB and GSLB configuration and are applicable for the requests handled by the NetScaler appliance.

LB action

Expression:

```
add lb action <name> <type> <string>
```

Example:

```
add lb action act1 -type SELECTIONORDER -value 3 2 1
```

Parameters:

- `name`: Name of the action.
- `type`: Type of action.
- `string`: Value for the specified action.

LB policy

Expression:

```
add lb policy <name> <rule> <action> <undefaction>
```

Example:

```
add lb policy pol1 -rule CLIENT.IP.SRC.EQ(8.8.8.8)-action act1
```

Parameters:

- **name:** Name of the policy.
- **rule:** A rule consists of one or more expressions. The rule is associated with an action, which is performed if the request matches the rule.
- **action:** DROP, NOLBACTION, and RESET are supported.
- **undefaction:** The NetScaler appliance generates an undefined event (UNDEF event) when a request does not match a policy. You can use the `set lb param -undefAction <action>` command to set the undefined action. You can assign these actions to an undefined event: DROP, NOLBACTION, and RESET.

Let's consider an example where you add an LB action, LB policy, and bind the policy to a GSLB virtual server (gv1) as follows:

```
add lb action act1 -type SELECTIONORDER -value 3 1 2
add lb policy pol1 -rule CLIENT.IP.SRC.EQ(8.8.8.8)-action act1
bind gslb vserver gv1 -policyName pol1 -priority 20 - gotoPriorityExpression
END -type REQUEST
```

The rule selects the client traffic that matches the IP address, 8.8.8.8, and sends that traffic to gv1. The LB action type (`SELECTIONORDER`) defines the service selection order. After you bind the LB policy to gv1, and when gv1 receives the client traffic from the IP address 8.8.8.8, the services are selected in the following order:

1. The virtual server (gv1) selects services in set 3 (s5 and s6) with priority order 3.
2. If all the services in set 3 are DOWN, gv1 selects set 1 (s1 and s2) with priority order 2.
3. If all the services in set 3 and set 2 are down, the gv1 selects set 1 (s1 and s2) with order 1.

Configure priority order for GSLB services with LB policy commands using the CLI

To configure priority order for GSLB services using LB policy commands, type the following commands at the command prompt:

1. Add an LB action.

```
add lb action act1 -type SELECTIONORDER -value 3 1 2
```

2. Add an LB policy.

```
add lb policy pol1 -rule CLIENT.IP.SRC.EQ(8.8.8.8)-action act1
```

3. Add GSLB sites.

```
add gslb site site1 1.1.1.1
```

```
add gslb site site2 1.1.1.2
```

4. Add a GSLB virtual server.

```
add gslb vserver gv1 HTTP
```

5. Bind the LB policy to the GSLB virtual server.

```
bind gslb vserver gv1 -policyName pol1 -priority 20 - gotoPriorityExpressi  
END -type REQUEST
```

6. Add GSLB services.

```
add gslb service gsvc1 1.1.1.3 http 80 -sitename site1
```

```
add gslb service gsvc2 1.1.1.4 http 80 -sitename site2
```

```
add gslb service gsvc3 1.1.1.5 http 80 -sitename site1
```

```
add gslb service gsvc4 1.1.1.6 http 80 -sitename site2
```

```
add gslb service gsvc5 1.1.1.7 http 80 -sitename site1
```

```
add gslb service gsvc6 1.1.1.8 http 80 -sitename site2
```

7. Set the order and bind the services to the GSLB virtual server.

```
bind gslb vserver gv1 gsvc1 -order 1
```

```
bind gslb vserver gv1 gsvc2 -order 1
```

```
bind gslb vserver gv1 gsvc3 -order 2
```

```
bind gslb vserver gv1 gsvc4 -order 2
```

```
bind gslb vserver gv1 gsvc5 -order 3
```

```
bind gslb vserver gv1 gsvc6 -order 3
```

Configure priority order for GSLB services with the LB policy commands using the GUI

Prerequisites:

- You have created GSLB sites.
- You have created a GSLB virtual server.
- You have created services.

Step 1 - Create an LB Action:

1. Navigate to **AppExpert > LB > Actions**.
2. In **LB Actions**, click **Add**.
3. In the **Create LB Actions** dialog box, specify values for the following parameters:

- **Action Name**
- **Type**
- **Value**

Note:

The numbers in the **Value** field are separated by a space.

4. Click **Create**.

Step 2 - Create an LB Policy:

1. Navigate to **AppExpert > LB > Policies**.
2. In **LB Policies**, click **Add**.
3. In the **Create LB Policies** dialog box, specify values for the following parameters:

- **Name:** pol1
- **Action:** act1
- **Undefined-Result Action:** NOLBACTION
- **Expression:** CLIENT.IP.SRC.EQ(8.8.8.8)

The screenshot shows the 'Create LB Policies' dialog box. It has a title bar with a back arrow and the text 'Create LB Policies'. Below the title bar, there are several input fields and buttons. The 'Name*' field contains 'Policy1'. The 'Action*' field is a dropdown menu with 'RESET' selected, and it has 'Add' and 'Edit' buttons to its right. The 'Log Action' field is a dropdown menu with an empty selection, and it also has 'Add' and 'Edit' buttons to its right. The 'Undefined-Result Action*' field is a dropdown menu with 'NOLBACTION' selected. The 'Expression*' field is a large text area containing 'CLIENT.IP.SRC.EQ(8.8.8.8)'. To the right of this field is a blue 'Expression Editor' button. Below the expression field is a 'Comments' section with a text area containing 'Enter the description'. At the bottom of the dialog, there are two buttons: 'Create' and 'Close'.

4. Click **Create**.

Step 3 - Bind the LB policy to the GSLB virtual server:

1. Navigate to **Traffic Management >GSLB > Virtual Servers** and double-click the GSLB virtual server.
2. In **GSLB Virtual Server**, under the **Advanced Settings** section, click **Policies**.
3. In the **Policies** section, click **GSLB Virtual Server LB Policy Binding**.
4. In the **Policy Binding** dialog box, specify values for the following parameters:
 - **Select Policy:** pol 1
 - **Priority:** 10
 - **Goto Expression:** END

← LB Policy Label

Create LB Policylabel

Name Policy_label	Type HTTP
-----------------------------	---------------------

Policy Binding

Select Policy*

Policy1

>
Add
Edit
ⓘ

Binding Details

Priority*

Goto Expression*

END

v

Invoke LabelType*

PolicyLabel

v
ⓘ

LabelName*

Policy_label

>
Add
Edit
Bind
Close

5. Click **Bind**.

Step 4 - Configure priority order for GSLB services:

To configure priority order for GSLB, see the **Configure priority order for GSLB services using the GUI** procedure.

Persistence settings for services

If persistence is configured for a service, then the preference is always given to persistence, by default.

For example, consider a service with persistence configured and priority order 1. If a service with priority order 0 is UP, then preference is always given to the service with priority order 1.

However, you can override this default behavior with the following CLI command:

```
set gslb param -overridePersistencyforOrder<YES/NO>
```

Let's consider the following example:

A set of services is bound to a GSLB virtual server (gv1) with the following priority order:

- Set 1 (s1, s2) bound to gv1 – order 1
- Set 2 (s3, s4) bound to gv1 – order 2

Type the following command at the command prompt to override persistency:

```
set gslb parameter -overridePersistencyforOrder YES
```

If set 1 (services with persistence is configured) is DOWN, then set 2 services handle all the requests until set 1 services are UP. A persistence entry for priority 2 is created.

Let's assume that after some time, the set 1 services are UP. Now, both set 1 and set 2 services are UP to handle the requests. In this scenario, new load balancing decisions are made as higher order services are UP. The persistence entry is overridden with a new load balancing entry.

Priority toggle

With the priority toggle feature, you can toggle all the traffic to a low-priority service during version upgrade for a service with a higher priority order. You can use the following commands to toggle priority:

- `set gslb vserver -toggleorder <Ascending/Descending>`
- `set gslb vserver v1 -orderthreshold 80`

For example, let's consider that there are two services with the following priorities:

- Service 1- order 0
- Service 2 – order 1

By default, service 1 handles all the traffic. If service 1 needs to be upgraded, then the traffic needs to be rerouted to service 2.

At the command prompt, type the following commands to toggle priority:

```
set gslb vserver -toggleorder Descending
```

By default, 0 has higher priority. However, after priority toggling, 1 is considered as a higher priority. If persistence entry is present for the service, the persistence preference behavior is as explained in the **Persistence settings for services** section.

Upgrade recommendations for GSLB deployment

May 2, 2023

This section provides recommendations on the sequence in which GSLB nodes need to be upgraded in various GSLB setups. It also addresses a few FAQs.

Note: The NetScaler appliance from which the GSLB synchronization is started is referred to as the ‘main site’ and the GSLB sites on which the configuration is copied as the ‘subordinate sites’.

Before you start the upgrade process, read the prerequisites mentioned in the following topics:

- [Before you begin](#)
- [Upgrade a high availability pair.](#)
- [Upgrade a cluster.](#)

Points to note when upgrading GSLB setups

- In an HA setup, first upgrade the subordinate sites and then the main site.
- In an HA setup, service states might not propagate from an older build primary node to a newer build secondary node. However, if the builds are of different versions, but have the same HA version, the service state might still propagate.
- If GSLB is configured within a cluster, first upgrade the non-owner nodes, and then upgrade the owner node. If there is one site or multiple sites in a cluster, follow the same upgrade sequence in each of the site.
- Enable new GSLB features only after you upgrade all nodes to a newer build.
- Upgrade all GSLB nodes to the latest build. There is no functional impact on the available features when some of the GSLB nodes are using an older version and some of the GSLB nodes are upgraded to a newer version.

FAQs

- **Are GSLB service states propagated when instances run different software versions?**

GSLB MEP is functional when instances run on different versions and GSLB service states are propagated across GSLB sites. There is no impact on the MEP communication when instances run different versions after an upgrade.

- **Is it recommended to do configuration changes during an upgrade?**

In a GSLB setup, when a main site is being upgraded, it is not recommended to do configuration changes on any other GSLB nodes.

Related resources

The following resources provide information about upgrading a NetScaler instance using NetScaler Console:

- [10 ways NetScaler Console service supports easier NetScaler upgrades](#)
- [Use NetScaler Console service to upgrade NetScaler instances](#)
- [Use NetScaler Console software to upgrade NetScaler instances](#)

Use case: Deployment of domain name based autoscale service group

May 2, 2023

Tip

For information about the GSLB service groups, see [Configuring a GSLB Service Group](#)

Deployment scenario

Two datacenters are deployed in two AWS regions, one in Sydney and one in North Virginia. Another datacenter is deployed in Azure. An AWS ELB in each AWS region is used to load balance the application servers. ALB is used for Azure to load balancing the application server. The NetScaler appliances are configured for GSLB for the ELBs and ALB using GSLB domain name based autoscale service group.

Important

You must configure the required security groups in AWS and attach it to the GSLB instance. Port 53 must be allowed in the security group inbound and outbound rules. Also, ports (3009 or 3011 depending on secure MEP configuration) for MEP communication must be open. For application monitoring, the corresponding ports must be allowed in the security group outbound rules.

The configuration steps for the above deployment scenario and the corresponding CLI commands are as follows:

1. Create datacenters (represented by GSLB sites).

```
add gslb site aws-sydney 192.0.2.2
add gslb site aws-nvirginia 198.51.100.111
add gslb site alb-southindia 203.0.113.6
```


2. Add a name server with the DNS gateway IP address where the GSLB node is added. This must be done in all datacenters.

```
add dns nameServer 8.8.8.8
```

3. Add servers for ELB and ALB.

```
add server aws-sydney_server lb-sydney-1052691850.ap-southeast-2.elb.amazonaws.com
```

```
add server aws-nvirginia_server LB-nvirginia-860559595.us-east-1.elb.amazonaws.com
```

```
add server alb-southindia_server alb.southindia.cloudapp.azure.com
```

4. Add GSLB autoscale service groups for each ELB and ALB and bind each server to the respective service group.

```
add gslb serviceGroup aws-nvirginia_sg HTTP -autoScale DNS -siteName aws-nvirginia
```

```
add gslb serviceGroup aws-sydney_sg HTTP -autoScale DNS -siteName aws-sydney
```

```
add gslb serviceGroup alb-southindia_sg HTTP -autoScale DNS -siteName alb-southindia
```

```
bind gslb serviceGroup aws-nvirginia_sg aws-nvirginia_server 80
```

```
bind gslb serviceGroup aws-sydney_sg aws-sydney_server 80
```

```
bind gslb serviceGroup alb-southindia_sg alb-southindia_server 80
```

5. Add a GSLB virtual server and bind the application domain and the service groups to this virtual server.

```
add gslb vserver gv1 HTTP
```

```
bind gslb vserver gv1 -serviceName aws-nvirginia_sg
```

```
bind gslb vserver gv1 -serviceName aws-sydney_sg
```

```
bind gslb vserver gv1 -serviceName alb-southindia_sg
```

Use case: Deployment of IP address based GSLB service group

March 9, 2021

Tip

For information about the GSLB service groups, see [Configuring a GSLB Service Group](#).

Deployment scenario

If there are multiple applications hosted on the same application server, the GSLB should probe these applications to see if the applications are responding or not. If an application is not responding, the user must be directed to the server on which the application is UP. Also, if one of the applications is DOWN, then the server should not be marked DOWN, because the other applications are UP.

In the following example, multiple applications (HTTPS) are hosted on one server in each GSLB site and hence all these applications resolve to one IP address of the respective site.

Using the GSLB service groups, you can have the same server with an IP address and port bound to multiple service groups where each service group represents a different application.

An application specific monitor is bound to the service groups that marks the service group as DOWN if the application is DOWN. Thus, whenever an application is DOWN, only that application is taken out from the setup and not the server.

```
1  ````
2  add gslb serviceGroup app1_site1 HTTP -maxClient 0 -cip DISABLED -
   cltTimeout 180 -svrTimeout 360 -siteName s1
3
4  add gslb serviceGroup app2_site1 HTTP -maxClient 0 -cip DISABLED -
   cltTimeout 180 -svrTimeout 360 -siteName s1
5
6  add gslb serviceGroup app1_site2 HTTP -maxClient 0 -cip DISABLED -
   cltTimeout 180 -svrTimeout 360 -siteName s2
7
8  add gslb serviceGroup app2_site2 HTTP -maxClient 0 -cip DISABLED -
   cltTimeout 180 -svrTimeout 360 -siteName s2
9
10 add lb monitor http_app2 HTTP -respCode 200 -httpRequest "GET /testsite
   /app2.html"
11
12 add lb monitor http_app1 HTTP -respCode 200 -httpRequest "GET /testsite
   /app1.html"
13
14 bind gslb serviceGroup app1_site1 192.0.2.140 80
15
16 bind gslb serviceGroup app1_site1 -monitorName http_app1
17
18 bind gslb serviceGroup app2_site1 192.0.2.140 80
19
20 bind gslb serviceGroup app2_site1 -monitorName http_app2
21
22 bind gslb serviceGroup app1_site2 192.0.2.142 80
23
```

```
24 bind gslb serviceGroup app1_site2 -monitorName http_app1
25
26 bind gslb serviceGroup app2_site2 192.0.2.142 80
27
28 bind gslb serviceGroup app2_site2 -monitorName http_app2
29 ````
```

How-to articles

September 21, 2020

The GSLB how-to articles contain information about some of the important GSLB configurations such as customizing GSLB configuration, configuring persistent connections, disaster recovery, and so on.

[Customizing Your GSLB Configuration](#)

[Configuring Persistent Connections](#)

[Managing Client Connections](#)

[Configuring GSLB for Proximity](#)

[Protecting the GSLB Setup Against Failure](#)

[Configuring GSLB for Disaster Recovery](#)

[Overriding Static Proximity Behavior by Configuring Preferred Locations](#)

[Configuring GSLB Service Selection Using Content Switching](#)

[Configuring Global Server Load Balancing for DNS Queries with NAPTR records](#)

[Using the EDNS0 Client Subnet Option for Global Server Load Balancing](#)

[Example of a Complete Parent-Child Configuration Using the Metrics Exchange Protocol](#)

Customize your GSLB configuration

May 2, 2023

Once your basic GSLB configuration is operational, you can customize it by modifying the bandwidth of a GSLB service, configuring CNAME based GSLB services, static proximity, dynamic RTT, persistent connections, or dynamic weights for services, or changing the GSLB Method.

You can also configure monitoring for GSLB services to determine their states.

These settings depend on your network deployment and the types of clients you expect to connect to your servers.

Modify maximum connections or maximum bandwidth for a GSLB service

You can restrict the number of new clients that can simultaneously connect to a load balancing or content switching virtual server by configuring the maximum number of clients and/or the maximum bandwidth for the GSLB service that represents the virtual server.

To modify the maximum clients or bandwidth of a GSLB service by using the command line interface

At the command prompt, type the following command to modify the maximum number of client connections or the maximum bandwidth of a GSLB service and verify the configuration:

```
1 set gslb service <serviceName> [-maxClients <positive_integer>] [-maxBandwidth <positive_integer>]
2 show gslb service <serviceName>
```

Example:

```
1 set gslb service Service-GSLB-1 -maxBandwidth 100 -maxClients 100
2 show gslb service Service-GSLB-1
```

To modify the maximum clients or bandwidth of a GSLB service by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Services**, and double-click a service.
2. Click in the **Other Settings** section and set the following parameters:
 - Max Clients—maxClients
 - Max Bandwidth—maxBandwidth

Create CNAME-based GSLB services

To configure a GSLB service, you can use the IP address of the server or a canonical name of the server. If you want to run multiple services (like an FTP and a Web server, each running on different ports) from a single IP address or run multiple HTTP services on the same port, with different names, on the same physical host, you can use canonical names (CNAMES) for the services.

For example, you can have two entries in DNS as ftp.example.com and www.example.com for FTP services and HTTP services on the same domain, example.com. CNAME-based GSLB services are useful

in a multilevel domain resolver configuration or in multilevel domain load balancing. Configuring a CNAME-based GSLB service can also help if the IP address of the physical server is likely to change.

If you configure CNAME-based GSLB services for a GSLB domain, when a query is sent for the GSLB domain, the NetScaler appliance provides a CNAME instead of an IP address. If the A record for this CNAME record is not configured, the client must query the CNAME domain for the IP address. If the A record for this CNAME record is configured, the NetScaler appliance provides the CNAME with the corresponding A record (IP address). The NetScaler appliance handles the final resolution of the DNS query, as determined by the GSLB method. The CNAME records can be maintained on a different NetScaler appliance or on a third-party system.

In an IP-address-based GSLB service, the state of a service is determined by the state of the server that it represents. However, a CNAME-based GSLB service has its state set to UP by default; the virtual server IP (VIP) address or metric exchange protocol (MEP) are not used for determining its state. If a desktop-based monitor is bound to a CNAME-based GSLB service, the state of the service is determined according to the result of the monitor probes.

You can bind a CNAME-based GSLB service only to a GSLB virtual server that has the DNS Record Type as CNAME. Also, a NetScaler appliance can contain at most one GSLB service with a given CNAME entry.

The following are some of the features supported for a CNAME-based GSLB service:

- GSLB-policy based site affinity is supported, with the CNAME as the preferred location.
- Source IP persistence is supported. The persistency entry contains the CNAME information instead of the IP address and port of the selected service.

The following are the limitations of CNAME-based GSLB services:

- Site persistence is not supported, because the service referenced by a CNAME can be present at any third-party location.
- Multiple-IP-address response is not supported because one domain cannot have multiple CNAME entries.
- Source IP Hash and Round Robin are the only load balancing methods supported. The Static Proximity method is not supported because a CNAME is not associated with an IP address and static proximity can be maintained only according to the IP addresses.

Note: The Empty-Down-Response feature should be enabled on the GSLB virtual server to which you bind the CNAME-based GSLB service. If you enable the Empty-Down-Response feature, when a GSLB virtual server is DOWN or disabled, the response to a DNS query, for the domains bound to this virtual server, contains an empty record without any IP addresses, instead of an error code.

To create a CNAME-based GSLB service by using the command line interface

At the command prompt, type:

```
1 add gslb service <serviceName> -cnameEntry <string> -siteName <string>
```

Example:

```
1 add gslb service Service-GSLB-1 -cnameEntry transport.mycompany.com -
  siteName Site-GSLB-East-Coast
2 add gslb service Service-GSLB-2 -cnameEntry finance.mycompany.com -
  siteName Site-GSLB-West-Coast
```

To create a CNAME-based GSLB service by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Services**.
2. Create a service, and set the **Type to Canonical Name Based**.

Configure transition Out-Of-Service State (TROFS) in GSLB

When you configure persistence on a GSLB virtual server to which a service is bound, the service continues to serve requests from the client even after it is disabled, accepting new requests or connections only to honor persistence. After a configured period of time, known as the graceful shutdown period, no new requests or connections are directed to the service, and all of the existing connections are closed.

When disabling a service, you can specify a graceful shutdown period, in seconds, by using the delay argument. During the graceful shutdown period, if the service is bound to a virtual server, its state appears as Out of Service.

Configure dynamic weights for services

In a typical network, there are servers that have a higher capacity for traffic than others. However, with a regular load balancing configuration, the load is evenly distributed across all services even though different services represent servers with different capacities.

To optimize your GSLB resources, you can configure dynamic weights on a GSLB virtual server. The dynamic weights can be based on either the total number of services bound to the virtual server or the sum of the weights of the individual services bound to the virtual server. Traffic distribution is then based on the weights configured for the services.

When dynamic weights are configured on the GSLB virtual server, requests are distributed according to the load balancing method, the weight of the GSLB service, and the dynamic weight. The product of

the weight of the GSLB service and the dynamic weight is known as the cumulative weight. Therefore, when dynamic weight is configured on the GSLB virtual server, requests are distributed on the basis of the load balancing method and the cumulative weight.

When dynamic weight for a virtual server is disabled, the numerical value is set to 1. This ensures that the cumulative weight is a non-zero integer at all times.

Dynamic weight can be based on the total number of active services bound to load balancing virtual servers or on the weights assigned to the services.

Consider a configuration with two GSLB sites configured for a domain and each site has two services that can serve the client. If a service at either site goes down, the other server in that site has to handle twice as much traffic as a service at the other site. If dynamic weight is based on the number of active services, the site with both services active has twice the weight of the site with one service down and therefore receives twice as much traffic.

Alternatively, consider a configuration in which the services at the first site represent servers that are twice as powerful as servers at the second site. If dynamic weight is based on the weights assigned to the services, twice as much traffic can be sent to the first site as to the second.

Note: For details on assigning weights to load balancing services, see [Assigning Weights to Services](#).

As an illustration of how dynamic weight is calculated, consider a GSLB virtual server that has a GSLB service bound to it. The GSLB service represents a load balancing virtual server that in turn has two services bound to it. The weight assigned to the GSLB service is 3. The weights assigned to the two services are 1 and 2 respectively. In this example, when dynamic weight is set to:

- **Disabled:** The cumulative weight of the GSLB virtual server is the product of the dynamic weight (disabled = 1) and the weight of the GSLB service (3), so the cumulative weight is 3.
- **SERVICECOUNT:** The count is the sum of the number of services bound to the load balancing virtual servers corresponding to the GSLB service (2), and the cumulative weight is the product of the dynamic weight (2) and the weight of the GSLB service (3), which is 6.
- **SERVICEWEIGHT:** The dynamic weight is the sum of the weights of services bound to the load balancing virtual servers corresponding to the GSLB service (3), and the cumulative weight is the product of the dynamic weight (3) and the weight of the GSLB service (3), which is 9.

Note: Dynamic weights are not applicable when content switching virtual servers are configured.

To configure a GSLB virtual server to use dynamic weights by using the command line interface

At the command prompt, type:

```
1 set gslb vserver <name> -dynamicWeight SERVICECOUNT | SERVICEWEIGHT
```

Example:

```
1 set gslb vserver vserver-GSLB-1 -dynamicWeight SERVICECOUNT
```

To set GSLB virtual server to use dynamic weights by using the configuration utility

1. Navigate to Traffic Management > GSLB > Virtual Servers, double-click the GSLB virtual server whose method you want to change (for example, vserver-GSLB-1).
2. Click the **Method** section and, from the **Dynamic Weight** drop-down list, select **SERVICE-COUNT** or **SERVICEWEIGHT**.

How to configure persistence in GSLB

May 2, 2023

Persistence ensures that a series of client requests for a particular domain name is sent to the same data center instead of being load balanced. If persistence is configured for a particular domain, it takes precedence over the configured GSLB method. You can use persistence for deployments where an information related to a client transaction is stored locally on an instance, which has served the initial requests. For example, the deployments for e-commerce that uses a shopping cart, where the server needs to maintain the state of the connection to track the transaction. The NetScaler appliance selects a data center to process a client request. With persistence enabled, it forwards the same IP address of the selected data center for all subsequent Domain Name System (DNS) requests. If a persistence session points to a data center that is DOWN, the NetScaler appliance uses the configured GSLB method to select a new data center. It then becomes persistent for subsequent requests from the client.

For persistence in GSLB, the same set of persistence identifiers (persistID) must be configured on the GSLB virtual servers in all data centers. The GSLB module uses the persistence identifier to uniquely identify a GSLB virtual server. When Source IP persistence is enabled on the GSLB virtual server, the persistence sessions are also exchanged as part of the metrics exchange. For the NetScaler appliance to support persistence across sites, persistence related configuration must be done on all the participating GSLB sites. Citrix recommends persistence in GSLB for stateful applications, which requires clients to reconnect to the same application instance for the subsequent requests.

You can achieve persistence in GSLB by the following ways:

- Persistence on GSLB virtual server
- Site persistence on GSLB services

Persistence on GSLB virtual server

Persistence on GSLB virtual server is used during the DNS requests. The Source IP address of the DNS request is used to create persistence session between the client and the data center. DNS clients are generally the Local DNS (LDNS) or DNS gateways proxying a set of clients sitting behind them (in ISPs). Persistence on a GSLB virtual server is application protocol agnostic.

In general, multiple DNS gateways or Local Domain Name Servers (LDNS) are configured in the client network. Citrix recommends you to configure an appropriate persistence mask because for the subsequent DNS requests, irrespective of the upstream LDNS devices used to connect to the ADC appliance, the client is able to persist to the same data center, which had served the earlier requests. After the persistence session is created for an LDNS IP address, all the end clients connecting using that LDNS are given the same data center IP address.

Site persistence on GSLB services

Site persistence becomes effective while processing the application requests. Site persistence works only for HTTP and HTTPS traffic because the persistency is achieved using HTTP cookie. As cookies are maintained on HTTP clients (browsers), it gives visibility into the clients sitting behind the DNS gateways. When you use cookies to achieve persistency for clients, no resources are consumed on the ADC appliance for each incoming client. When you bring a GSLB service DOWN with a delay time, the service goes into the transition to out of service (TROFS) state. Persistence is supported as long as the service is in the UP or TROFS state. That is, if the same client sends a request for the same service within the specified delay time after a service is marked TROFS, the same GSLB site (data center) services the request.

If you access an application through an alias, ensure that the CNAME record is also configured on the NetScaler appliance. In a parent-child topology, site persistence does not work when you access an application through an alias.

Note

If the connection proxy is specified as the site persistence method and you also want to configure persistence on LB virtual servers, source IP persistence is not recommended. When the connection is proxied, an IP address owned by the ADC appliance is used, and not the actual IP address of the client.

Configure an appropriate persistence, which does not use source IP of the HTTP(S) request to identify the client, for example, cookie persistence or rule-based persistence.

Configure persistence based on source IP address

If source IP persistence is configured on GSLB virtual server, persistence sessions are created for the source IP address of the DNS request. Depending on the Extended Client Subnet (ECS) feature, the source IP address of the DNS request is taken from any of the following:

- The source IP in the IP header of the incoming DNS request packet
- The ECS option in the DNS request For more information on ECS, see [Use the EDNS0 client subnet option for Global Server Load Balancing](#).

Persistence sessions for a client last until the persistence timeout. After the timeout period expires, existing persistence sessions are cleared. For subsequent requests, a new GSLB decision is made and a different GSLB service IP address might be selected.

The source IP persistence on GSLB virtual server and site persistence on GSLB service complements each other. If source IP persistence is disabled on GSLB virtual server, the GSLB virtual server chooses a different GSLB service each time the DNS tries to do the resolution. The client also connects to a different GSLB service and the data center which receives the application request proxy the connection to the data center which served the client first. This might add some latency. So by enabling source IP persistence on GSLB virtual server can avoid frequent such multiple hops for application requests. If the source IP persistence session has expired and the client reconnects after that, the site persistence connects the client back to the data center, which had served the client initially. Also, if the client connects back through a DNS gateway, which does not fall within the persistence mask range configured, then as well site persistence helps clients stick to the data center that served the first request.

To configure persistence based on source IP address by using the CLI

At the command prompt, type:

```
1 set gslb vserver <name> -persistenceType (SOURCEIP|NONE) -persistenceId <positive_integer> [-persistMask <netmask>] - [timeout <mins>]
```

Example:

```
1 set gslb vserver vserver-GSLB-1 -persistenceType SOURCEIP - persistenceId 23 -persistMask 255.255.255.255 - timeout 2
```

To configure persistence based on source IP address by using the GUI

1. Navigate to **Traffic Management > GSLB > Virtual Servers** and double-click the GSLB virtual server whose method you want to change (for example, vserver-GSLB-1).
2. Click the **Persistence** section and, from the **Persistence** drop-down list, select **SOURCEIP** and set the following parameters:

- Persistence Id—persistenceID
- Time-out—timeout
- IPv4 Netmask or IPv6 Mask length—persistMask

Configure site persistence based on HTTP cookies

Site persistence is achieved using HTTP cookies (known as a “site cookie”) to reconnect the client to the same server. When the GSLB appliance responds to a client DNS request by sending the IP address of the selected GSLB site, the client sends an HTTP request to that GSLB site. Application endpoint in that GSLB site adds a site cookie to the HTTP header, and site persistence is in effect.

If the client sends a DNS query after the client cache is expired, the DNS request might be directed to a different GSLB site. The new GSLB site uses the site cookie present in the client request header to implement persistence. Site persistence feature becomes active under the following conditions:

- When the domain name in the host header matches one of the GSLB domains
- When site persistence is enabled on the GSLB service that represents the virtual server receiving the application traffic.

The site cookie contains information about the selected GSLB service on which the client has a persistent connection. If the GSLB service pointed by the cookie is DOWN or removed from the GSLB configuration, then the virtual server that receives the traffic continues to process the traffic. The cookie expiration is based on the cookie timeout configured on the NetScaler appliance. If the virtual server names are not identical on all the sites, you must use the persistence identifier. Cookies inserted are compliant with RFC 2109.

NetScaler supports two types of site persistence:

- Connection Proxy
- HTTP redirect

Connection Proxy

In the Connection Proxy mode of site persistence, the data center that receives the subsequent application request performs the following tasks to establish a connection:

1. Creates a connection to the GSLB site that inserted the site cookie.
2. Proxies the client request to the original site.

Note:

The proxy server establishes connection with the original site using the following details:

- The SNIP of the new site is the source IP address.

- The GSLB service public IP address of the original site is the destination IP address.
- An ephemeral port is the source port and GSLB service port is the destination port.
- Uses either HTTP or HTTPS protocols depending on the GSLB service type.

3. Receives a response from the original GSLB site.
4. Relays that response back to the client.
5. Closes the connection.

HTTP redirect

If the GSLB configuration uses HTTP redirect persistence, the new site redirects the request to the site that originally inserted the cookie. Domain name in the redirect URL is the site domain. Ensure that both cookies and SSL certificates are applicable to both GSLB domain and site domain. To apply cookies for both GSLB and site domain, the cookie domain must be the site to GSLB domain. To apply SSL certificates to both GSLB and site domain, certificate bound to the SSL virtual server must be a wildcard certificate.

Connection proxy occurs when the following conditions are satisfied:

- Requests are sent for a domain participating in GSLB. The domain is obtained from the URL/Host header.
- The local GSLB service has connection proxy enabled.
- The request includes a valid cookie that contains the IP address of an active remote GSLB service.

Note

In a GSLB parent-child configuration, the connection proxy works as intended even when a GSLB service is not configured on a child site. However, if you have extra configuration such as client authentication, client IP address insertion, or other SSL-specific requirement, you must add an explicit GSLB service on the site and configure it accordingly.

For more information about parent-child topology, see [Parent-Child Topology Deployment Using the MEP Protocol](#).

To set persistence based on HTTP cookies by using the CLI

At the command prompt, type:

```
1 set gslb service <serviceName> -sitePersistence (ConnectionProxy [-sitePrefix <prefix>] | HTTPRedirect -sitePrefix <prefix>)
```

Example:

```
1 set gslb service service-GSLB-1 -sitePersistence ConnectionProxy
2 set gslb service service-GSLB-1 -sitePersistence HTTPRedirect -
  sitePrefix vserver-GSLB-1
```

To set persistence based on cookies by using the GUI

1. Navigate to **Traffic Management > GSLB > Services** and select the service that you want to configure for site persistence (for example, service-GSLB-1).
2. Click the **Site Persistence** section and set persistence based on cookies.

Manage client connections

May 2, 2023

To facilitate management of client connections, you can enable delayed cleanup of connections to the virtual server. You can then manage local DNS traffic by configuring DNS policies.

Enable delayed cleanup of virtual server connections

The state of a virtual server depends on the states of the services bound to it, and the state of each service depends on the monitors bound to it. If a server is slow or down, the monitoring probes time out and the service that represents the server is marked as DOWN. A virtual server is marked as DOWN only when all services bound to it are marked as DOWN. You can configure services and virtual servers to either terminate all connections when they go down, or allow the connections to go through. The latter setting is for situations in which a service is marked as DOWN because of a slow server.

When you configure the down state flush option, the NetScaler appliance performs a delayed cleanup of connections to a GSLB service that is down.

To enable delayed cleanup of virtual server connections by using the command line interface

At the command prompt, type the following commands to configure delayed connection cleanup and verify the configuration:

```
1 set gslb service <name> -downStateFlush (ENABLED | DISABLED)
2 show gslb service <name>
```

Example:

```
1 set gslb service Service-GSLB-1 -downStateFlush ENABLED
2 Done
3
4 show gslb service Service-GSLB-1
5 Done
```

To enable delayed cleanup of virtual server connections by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Services** and double-click the service.
2. Click the **Other Settings** section and select the **Down State Flush** option.

Manage local DNS traffic by using DNS policies

You can use DNS policies to implement site affinity by directing traffic from the IP address of a local DNS resolver or network to a predefined target GSLB site. This is configured by creating DNS policies with DNS expressions and binding the policies globally on the NetScaler appliance.

DNS expressions

The NetScaler appliance provides certain predefined DNS expressions that can be used for configuring actions specific to a domain. Such actions can, for example, drop certain requests, select a specific view for a specific domain, or redirect certain requests to a specific location.

These DNS expressions (also called *rules*) are combined to create DNS policies that are then bound globally on the NetScaler appliance.

Following is the list of predefined DNS qualifiers available on the NetScaler appliance:

- CLIENT.UDP.DNS.DOMAIN.EQ("domainname")
- CLIENT.UDP.DNS.IS_AREC
- CLIENT.UDP.DNS.IS_AAAAREC
- CLIENT.UDP.DNS.IS_SRVREC
- CLIENT.UDP.DNS.IS_MXREC
- CLIENT.UDP.DNS.IS_SOAREC
- CLIENT.UDP.DNS.IS_PTRREC
- CLIENT.UDP.DNS.IS_CNAME
- CLIENT.UDP.DNS.IS_NSREC
- CLIENT.UDP.DNS.IS_ANYREC

The CLIENT.UDP.DNS.DOMAIN DNS expression can be used with string expressions. If you are using domain names as part of the expression, they must end with a period (.). For example, CLIENT.UDP.DNS.DOMAIN.ENDSWITH("abc.com.")

To create an expression by using the configuration utility

1. Click the icon next to the Expression text box. Click Add. (Leave the Flow Type and Protocol drop-down list boxes empty.) Follow these steps to create a rule.
2. In the Qualifier box, select a qualifier (for example, LOCATION).
3. In the Operator box, select an operator (for example, ==).
4. In the Value box, type a value (for example, Asia, Japan....).
5. Click OK. Click Create and click Close. The rule is created.
6. Click OK.

Configure DNS actions

A DNS policy includes the name of a DNS action to be performed when the policy rule evaluates to TRUE. A DNS action can do one of the following:

- Send the client an IP address for which you have configured a DNS view. For more information about DNS views, see [Adding DNS Views](#).
- Send the client the IP address of a GSLB service after referring to a list of preferred locations that overrides static proximity behavior. For more information about preferred locations, see [Overriding Static Proximity Behavior by Configuring Preferred Locations](#).
- Send the client a specific IP address as determined by the evaluation of the DNS query or response (DNS response rewrite).
- Forward a request to the name server without performing a lookup in the appliance's DNS cache.
- Drop a request.

You cannot create a DNS action for dropping a DNS request or for bypassing the DNS cache on the appliance. If you want to drop a DNS request, use the built-in action, `dns_default_act_Drop`. If you want to bypass the DNS cache, use the built-in action, `dns_default_act_Cachebypass`. Both actions are available along with custom actions in the Create DNS Policy and the Configure DNS Policy dialog boxes. These built-in actions cannot be modified or removed.

To configure a DNS action by using the command line interface At the command prompt, type the following commands to configure a DNS action and verify the configuration:

```
1 add dns action <actionName> <actionType> (-IPAddress <ip_addr |  
   ipv6_addr> ... | -viewName <string> | -preferredLocList <string>  
   ...) [-TTL <secs>]  
2  
3 show dns action [<actionName>]
```

Examples Example 1: Configuring DNS Response Rewrite. The following DNS action sends the client a preconfigured IP address when the policy to which the action is bound evaluates to true:

```

1 add dns action dns_act_response_rewrite Rewrite_Response -IPAddress
  192.0.2.20 192.0.2.56 198.51.100.10
2 Done
3
4 show dns action dns_act_response_rewrite
5 1) ActionName: dns_act_response_rewrite ActionType: Rewrite_Response
  TTL: 3600 IPAddress: 192.0.2.20 192.0.2.56
  198.51.100.10
6 Done

```

Example 2: Configuring a DNS-View Based Response. The following DNS action sends the client an IP address for which you have configured a DNS view:

```

1 add dns action send_ip_from_view_internal_ip ViewName -viewName
  view_internal_ip
2 Done
3
4 show dns action send_ip_from_view_internal_ip
5 1) ActionName: send_ip_from_view_internal_ip ActionType: ViewName
  ViewName: view_internal_ip
6 Done

```

Example 3: Configuring a Response Based on a Preferred Location List. The following DNS action sends the client the IP address that corresponds to the preferred location that it selects from the specified list of locations:

```

1 add dns action send_preferred_location GslbPrefLoc -preferredLocList NA
  .tx.ns1.*.*.* NA.tx.ns2.*.*.* NA.tx.ns3.*.*.*
2 Done
3
4 show dns action send_preferred_location
5 1) ActionName: send_preferred_location ActionType: GslbPrefLoc
  PreferredLocList: "NA.tx.ns1.*.*.*" "NA.tx.ns2.*.*.*" "NA.tx.ns3
  .*.*.*"
6 Done

```

To configure a DNS action by using the NetScaler configuration utility

1. Navigate to Traffic Management > DNS > Actions, create or edit a DNS action.
2. In the Create DNS Action or Configure DNS Action dialog box, set the following parameters:
 - Action Name (cannot be changed for an existing DNS action)
 - Type (cannot be changed for an existing DNS action)
 To set the Type parameter, do one of the following:

- To create a DNS action that is associated with a DNS view, select View Name. Then, from the View Name list, select the DNS view that you want to use in the action.
 - To create a DNS action with a preferred location list, select Preferred Location List. In Preferred Location, enter a location, and then click Add. Add as many DNS locations as you want.
 - To configure a DNS action for rewriting a DNS response on the basis of policy evaluation, select Rewrite Response. In IP Address, enter an IP address, and then click Add. Add as many IP addresses as you want.
- TTL (applicable only to the Rewrite Response action type)

Configure DNS policies

DNS policies operate on a location database that uses static and custom IP addresses. The attributes of the incoming local DNS request are defined as part of an expression, and the target site is defined as part of a DNS policy. While defining actions and expressions, you can use a pair of single quotation marks (") as a wildcard qualifier to specify more than one location. When a DNS policy is configured and a GSLB request is received, the custom IP address database is first queried for an entry that defines the location attributes for the source:

- When a DNS query comes from an LDNS, the characteristics of the LDNS are evaluated against the configured policies. If they match, an appropriate action (site affinity) is executed. If the LDNS characteristics match more than one site, the request is load balanced between the sites that match the LDNS characteristics.
- If the entry is not found in the custom database, the static IP address database is queried for an entry, and if there is a match, the above policy evaluation is repeated.
- If the entry is not found in either the custom or static databases, the best site is selected and sent in the DNS response on the basis of the configured load balancing method.

The following restrictions apply to DNS policies created on the NetScaler appliance.

- A maximum of 64 policies are supported.
- DNS policies are global to the NetScaler appliance and cannot be applied to a specific virtual server or domain.
- Domain or virtual server specific binding of policy is not supported.

You can use DNS policies to direct clients that match a certain IP address range to a specific site. For example, if you have a GSLB setup with multiple GSLB sites that are separated geographically, you can direct all clients whose IP address is within a specific range to a particular data center.

Both TCP-based and UDP-based DNS traffic can be evaluated. Policy expressions are available for UDP-based DNS traffic on the server and for both UDP-based DNS traffic and TCP-based DNS traffic

on the client side. Additionally, you can configure expressions to evaluate queries and responses that involve only the following DNS question types (or QTYPE values):

- A
- AAAA
- NS
- SRV
- PTR
- CNAME
- SOA
- MX
- ANY

The following response codes (RCODE values) are also supported:

- NOERROR - No error
- FORMERR - Format error
- SERVFAIL - Server failure
- NXDOMAIN - Non-existent domain
- NOTIMP - Query type not implemented
- REFUSED - Query refused

You can configure expressions to evaluate DNS traffic. A DNS expression begins with the DNS.REQ or DNS.RES prefixes. Functions are available for evaluating the queried domain, the query type, and the carrier protocol. For more information about DNS expressions, see “Expressions for Evaluating a DNS Message and Identifying Its Carrier Protocol” in “[Policy Configuration and Reference](#)”.

To add a DNS policy by using the command line interface At the command prompt, type the following commands to create a DNS policy and verify the configuration:

```
1 add dns policy <name> <rule> <actionName>
2 show dns policy <name>
```

Example:

```
1 > add dns policy-GSLB-1 'CLIENT.UDP.DNS.DOMAIN.EQ("domainname")'
   my_dns_action
2 Done
3 > show dns policy-GSLB-1
4 Name: policy-GSLB-1
5 Rule: CLIENT.UDP.DNS.DOMAIN.EQ("domainname")
6 Action Name: my_dns_action
7 Hits: 0
8 Undef Hits: 0
9
10 Done
```

To remove a configured DNS policy by using the command line interface At the command prompt, type:

```
1 rm dns policy <name>
```

To configure a DNS policy by using the NetScaler configuration utility

1. Navigate to Traffic Management > DNS > Policies and create a DNS policy.
2. In the Create DNS Policy or Configure DNS Policy dialog box, set the following parameters:

- Policy Name (cannot be changed for an existing policy)
- Action
- Expression

To specify an expression, do the following:

- a) Click Add, and then, in the drop-down box that appears, select the expression element with which you want to begin the expression. A second list appears. The list contains a set of expression elements that you can use immediately after the first expression element.
 - b) In the second list, select the expression element that you want, and then enter a period.
 - c) After each selection, if you enter a period, the next set of valid expression elements appear in a list. Select expression elements and fill in arguments to functions until you have the expression you want.
3. Click Create or OK, and then click Close.

Bind DNS policies

DNS policies are bound globally on the NetScaler appliance and are available for all configured GSLB virtual servers. Even though DNS policies are globally bound, policy execution can be limited to a specific GSLB virtual server by specifying the domain in the expression.

Note: Even though the `bind dns global` command accepts `REQ_OVERRIDE` and `RES_OVERRIDE` as valid bind points, those bind points are redundant, because DNS policies can be bound only globally. Bind your DNS policies only to the `REQ_DEFAULT` and `RES_DEFAULT` bind points.

To bind a DNS policy globally by using the command line interface At the command prompt, type the following commands to bind a DNS policy globally and verify the configuration:

```
1 bind dns global <policyName> <priority> [-gotoPriorityExpression <string>] [-type <type>]
2 show dns global -type <type>
```

Example:

```
1 bind dns global policy-GSLB-1 10 -gotoPriorityExpression END
2 Done
3 show dns global -type REQ_DEFAULT
4 1) Policy Name: policy-GSLB-1
5     Priority: 10
6     GotoPriorityExpression: END
7 Done
```

To bind a DNS policy globally by using the configuration utility

1. Navigate to Traffic Management > DNS > Policies.
2. In the details pane, click Global Bindings.
3. In the Bind/Unbind DNS Policy(s) to Global dialog box, click Insert Policy.
4. In the Policy Name column, select, from the list, the policy that you want to bind. Alternatively, in the list, click New Policy, and then create a DNS policy by setting parameters in the Create DNS Policy dialog box.
5. To modify a policy that is already bound globally, click the name of the policy, and then click Modify Policy. Then, in the Configure DNS Policy dialog box, modify the policy, and then click OK.
6. To unbind a policy, click the name of the policy, and then click Unbind Policy.
7. To modify the priority assigned to a policy, double-click the priority value, and then enter a new value.
8. To regenerate assigned priorities, click Regenerate Priorities. The priority values are modified to begin at 100, with increments of 10, without affecting the order of evaluation.
9. Click OK.

To view the global bindings of a DNS policy by using the command line interface At the command prompt, type:

```
show dns global
```

To view the global bindings of a DNS policy by using the configuration utility

1. Navigate to **Traffic Management > DNS > Policies**.
2. In the details pane, click **Global Bindings**. The global bindings of all DNS policies appear in this dialog box.

Adding DNS Views

You can configure DNS views to identify various types of clients and provide an appropriate IP address to a group of clients who query for the same GSLB domain. DNS views are configured by using DNS policies that select the IP addresses sent back to the client.

For example, if you have configured GSLB for your company's domain and have the server hosted in your company's network, clients querying for the domain from within your company's internal network can be provided with the server's internal IP address instead of the public IP address. Clients that query DNS for the domain from the Internet, on the other hand, can be provided the domain's public IP address.

To add a DNS view, you assign it a name of up to 31 characters. The leading character must be a number or letter. The following characters are also allowed: @ _ - . (period) : (colon) # and space (). After adding the view, you configure a policy to associate it with clients and a part of the network, and you bind the policy globally. To configure and bind a DNS policy, see **Managing Local DNS Traffic by Using DNS Policies**.

To add a DNS view by using the command line interface

At the command prompt, type the following commands to create a DNS view and verify the configuration:

```
1 add dns view <viewName>
2 show dns view <viewName>
```

Example:

```
1 add dns view PrivateSubnet
2 show dns view PrivateSubnet
```

To remove a DNS view by using the command line interface

At the command prompt, type:

```
1 rm dns view <viewName>
```

To add a DNS view by using the configuration utility

Navigate to Traffic Management > DNS > Views and add a DNS view.

For details on how to create a DNS policy and how to bind DNS policies globally, see **Managing Local DNS Traffic by Using DNS Policies**.

Configure GSLB for proximity

May 2, 2023

When you configure GSLB for proximity, client requests are forwarded to the closest data center. The main benefit of the proximity-based GSLB method is faster response times resulting from the selection of the closest available data center. Such a deployment is critical for applications that require fast access to large volumes of data.

You can configure GSLB for proximity based on the round trip time (RTT), static proximity, or a combination of the two.

Configure dynamic round trip time (RTT) method

Dynamic round trip time (RTT) is a measure of time or delay in the network between the client's local DNS server and a data resource. To measure dynamic RTT, the NetScaler appliance probes the client's local DNS server and gathers RTT metric information. The appliance then uses this metric to make its load balancing decision. Global server load balancing monitors the real-time status of the network and dynamically directs the client request to the data center with the lowest RTT value.

To configure GSLB for proximity with dynamic method, you must first configure the basic GSLB set up and then configure dynamic RTT.

First create two GSLB sites, local and remote. Then, for the local site, create a GSLB virtual server and GSLB services and bind the services to the virtual server. Then create ADNS services and bind the domain for which you are configuring GSLB to the GSLB virtual server at the local site. Finally, create a load balancing virtual server with the same virtual server IP address as the GSLB service.

For details on how to configure a basic GSLB setup, see [Configuring GSLB Entities Individually](#).

Once you have configured a basic GSLB setup, configure the dynamic RTT method.

For details on how to configure the GSLB virtual server to use the dynamic RTT method for load balancing, see [Configuring Dynamic RTT](#).

Configure static proximity

The static proximity method for GSLB uses an IP address-based static proximity database to determine the proximity between the client's local DNS server and the GSLB sites. The NetScaler appliance responds with the IP address of a site that best matches the proximity criteria.

If two or more GSLB sites at different geographic locations serve the same content, the NetScaler appliance maintains a database of IP address ranges and uses the database for decisions about the GSLB sites to which to direct incoming client requests.

To configure GSLB for proximity with static proximity, you must first configure the basic GSLB set up and then configure static proximity.

First create two GSLB sites, local and remote. Then, for the local site, create a GSLB virtual server and GSLB services and bind the services to the virtual server. Then create ADNS services and bind the domain for which you are configuring GSLB to the GSLB virtual server at the local site. Finally, create a load balancing virtual server with the same virtual server IP address as the GSLB service.

For details on how to configure a basic GSLB setup, see [Configuring GSLB Entities Individually](#).

Once you have configured a basic GSLB setup, configure static proximity.

For details on how to configure the GSLB virtual server to use static proximity for load balancing, see [Configuring Static Proximity](#).

Configure static proximity and dynamic RTT

You can configure the GSLB virtual server to use a combination of static proximity and dynamic RTT when you have some clients coming from an internal network like a branch office. You can configure GSLB such that the clients coming from the branch office or any other internal network are directed to a particular GSLB site that is geographically close to the client network. For all other requests, you can use dynamic RTT.

First create two GSLB sites, local and remote. Then, for the local site, create a GSLB virtual server and GSLB services and bind the services to the virtual server. Then create ADNS services and bind the domain for which you are configuring GSLB to the GSLB virtual server at the local site. Finally, create a load balancing virtual server with the same virtual server IP address as the GSLB service.

For details on how to configure a basic GSLB setup, see [Configuring GSLB Entities Individually](#).

Once you have configured a basic GSLB setup, configure the GSLB virtual server to use static proximity for all traffic originating from an internal network and then use dynamic RTT for all other traffic.

For details on how to configure static proximity, see [Configuring Static Proximity](#) and for details on how to configure dynamic RTT, see [Configuring Dynamic RTT](#).

Protect the GSLB setup against failure

May 2, 2023

You can protect your GSLB setup against failure of a GSLB site or a GSLB virtual server by configuring the following:

- A backup GSLB virtual server

- A NetScaler appliance to respond with multiple IP addresses
- A backup IP address for a GSLB domain

You can also divert excess traffic to a backup virtual server by using spillover.

Configure a backup GSLB virtual server

Configuring a backup entity for a GSLB virtual server ensures that DNS traffic to a site is not interrupted if the GSLB virtual server goes down. The backup entity can be another GSLB virtual server, or it can be a backup IP address. With a backup entity configured, if the primary GSLB virtual server goes down, the backup entity handles DNS requests. To specify what must happen when the primary GSLB virtual server comes back up again, you can configure the backup entity to continue handling traffic until you manually enable the primary virtual server to take over (using the `disablePrimaryOnDown` option).

Note: You can configure a single backup entity as backup for multiple GSLB virtual servers.

To configure a backup GSLB virtual server by using the command line interface

At the command prompt, type the following commands to configure a GSLB virtual server as backup virtual server and verify the configuration:

```
1 set gslb vserver <name> -backupVServer <name> [-disablePrimaryOnDown (
   ENABLED | DISABLED)]
2
3 show gslb vserver <name>
```

Example:

```
1 set gslb vserver vserver-GSLB-1 -backupVServer vserver-GSLB-2 -
   disablePrimaryOnDown ENABLED
2 show gslb vserver vserver-GSLB-1
```

To set GSLB virtual server as a backup virtual server by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers**, and double-click the GSLB virtual server.
2. Select the **Backup Virtual Server** section and choose the backup virtual server.

Configure a GSLB setup to respond with multiple IP addresses

A typical DNS response contains the IP address of the best performing GSLB service. However, if you enable multiple IP responses (MIR), the NetScaler appliance sends the best GSLB service as the first

record in the response and adds the remaining active services as extra records. If MIR is disabled (the default), the NetScaler appliance sends the best service as the only record in response.

To configure a GSLB virtual server for multiple IP responses by using the command line interface

At the command prompt, type the following commands to configure a GSLB virtual server for multiple IP responses and verify the configuration:

```
1 set gslb vserver<name> -MIR (ENABLED | DISABLED)
2 - show gslb vserver <name>
```

Example:

```
1 set gslb vserver vserver-GSLB-1 -MIR ENABLED
2 show gslb vserver <vserverName>
```

To set a GSLB virtual server for multiple IP responses by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers** and double-click the GSLB virtual server for which you want to configure a backup virtual server (for example, vserver-GSLB-1).
2. On the **Advanced** tab, under When this virtual server is “UP,” select the Send all “active” service IP in response (MIR) check box, and select **OK**.

Configuring a GSLB Virtual Server to Respond with an Empty Address Record When DOWN

A DNS response can contain either the IP address of the requested domain or an answer stating that the IP address for the domain is not known by the DNS server, in which case the query is forwarded to another name server. These are the only possible responses to a DNS query.

When a GSLB virtual server is disabled or in a DOWN state, the response to a DNS query for the GSLB domain bound to that virtual server contains the IP addresses of all the services bound to the virtual server. However, you can configure the GSLB virtual server to in this case send an empty down response (EDR). When this option is set, a DNS response from a GSLB virtual server that is in a DOWN state does not contain IP address records, but the response code is successful. This prevents clients from attempting to connect to GSLB sites that are down.

Note: You must configure this setting for each virtual server to which you want it to apply.

To configure a GSLB virtual server for empty down responses by using the command line interface

At the command prompt, type:

```
1 set gslb vserver<name> -EDR (ENABLED | DISABLED)
```

Example:

```
1 > set gslb vserver vserver-GSLB-1 -EDR ENABLED
2 Done
```

To set a GSLB virtual server for empty down responses by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers** and double-click the GSLB virtual server for which you want to configure a backup virtual server (for example, vserver-GSLB-1).
2. On the Advanced tab, under When this virtual server is “Down,” select the Do not send any service’s IP address in response (EDR) check box.
3. Click **OK**.

Configure a backup IP address for a GSLB domain

You can configure a backup site for your GSLB configuration. With this configuration in place, if all the primary sites go DOWN, the IP address of the backup site is provided in the DNS response.

Typically, if a GSLB virtual server is active, that virtual server sends a DNS response with one of the active site IP addresses as selected by the configured GSLB method. If all the configured primary sites in the GSLB virtual server are inactive (in the DOWN state), the authoritative domain name system (ADNS) server or DNS server sends a DNS response with the backup site’s IP address.

Note: When a backup IP address is sent, persistence is not honored.

To set a backup IP address for a domain by using the command line interface

At the command prompt, type the following commands to set a backup IP address and verify the configuration:

```
1 set gslb vserver <name> -domainName <string> -backupIP <IPAddress>
2 show gslb vserver <name>
```

Example:

```
1 set gslb vserver vserver-GSLB-1 -domainName www.abc.com -backupIP
  10.102.29.66
```

```
2 show gslb vserver vserver-GSLB-1
```

To set a backup IP address for a domain by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers** and double-click the GSLB virtual server to which you want to bind the backup domain (for example, vserver-GSLB-1).
2. Click the **Domains** section, configure the GSLB domain and specify the IP address of the backup domain in the **Backup IP** field.

Divert excess traffic to a backup virtual server

Once the number of connections to a primary GSLB virtual server exceeds the configured threshold value, you can use the spillover option to divert new connections to a backup GSLB virtual server. This threshold value can be calculated dynamically or set manually. Once the number of connections to the primary virtual server drops below the threshold, the primary GSLB virtual server resumes serving client requests.

You can configure persistence with spillover. When persistence is configured, new clients are diverted to the backup virtual server if that client is not already connected to a primary virtual server. When persistence is configured, connections that were diverted to the backup virtual server are not moved back to the primary virtual server after the number of connections to the primary virtual server drops below the threshold. Instead, the backup virtual server continues to process those connections until they are terminated by the user. Meanwhile, the primary virtual server accepts new clients.

The threshold can be measured by the number of connections, bandwidth, and health of the services.

If the backup virtual server reaches the configured threshold and is unable to take any additional load, the primary virtual server diverts all requests to the designated redirect URL. If a redirect URL is not configured on the primary virtual server, subsequent requests are dropped.

The spillover feature prevents the remote backup GSLB service (backup GSLB site) from getting flooded with client requests when the primary GSLB virtual server fails. This occurs when a monitor is bound to a remote GSLB service, and the service experiences a failure that causes its state to go DOWN. The monitor continues to keep the state of the remote GSLB service UP, however, because of the spillover feature.

As part of the resolution to this problem, two states are maintained for a GSLB service, the primary state and effective state. The primary state is the state of the primary virtual server and the effective state is the cumulative state of the virtual servers (primary and backup chain). The effective state is set to UP if any of the virtual servers in the chain of virtual servers is UP. A flag that indicates that the

primary VIP has reached the threshold is also provided. The threshold can be measured by either the number of connections or the bandwidth.

A service is considered for GSLB only if its primary state is UP. Traffic is directed to the backup GSLB service only when all the primary virtual servers are DOWN. Typically, such deployments have only one backup GSLB service.

Adding primary and effective states to a GSLB service has the following effects:

- When source IP persistence is configured, the local DNS is directed to the previously selected site only if the primary virtual server on the selected site is UP and below threshold. Persistence can be ignored in the round robin mode.
- If cookie-based persistence is configured, client requests are redirected only when the primary virtual server on the selected site is UP.
- If the primary virtual server has reached its saturation and the backup VIPs is absent or down, the effective state is set to DOWN.
- If external monitors are bound to an HTTP-HTTPS virtual server, the monitor decides the primary state.
- If there is no backup virtual server to the primary virtual server and the primary virtual server has reached its threshold, the effective state is set to DOWN.

To configure backup GSLB virtual server by using the command line interface

At the command prompt, type the following commands to configure backup GSLB virtual server and verify the configuration:

```
1 set gslb vserver <name> -soMethod <method> -soThreshold <threshold> -
   soPersistence ( **ENABLED** | **DISABLED** ) -soPersistenceTimeout <
   timeout>
2 show gslb vserver <name>
```

Example:

```
1 set gslb vserver Vserver-GSLB-1 -soMethod CONNECTION -soThreshold 1000
   -soPersistence ENABLED -soPersistenceTimeout 2
2 show gslb vserver Vserver-GSLB-1
```

To configure backup GSLB virtual server by using the configuration utility

1. Navigate to **Traffic Management > GSLB > Virtual Servers** and double-click the virtual server that you want to configure as backup (for example, Vserver-LB-1).
2. Click the **Spillover** section and set the following parameters:
 - Method—soMethod

- Threshold—soThreshold
 - Persistence Time-out (min) —soPersistenceTimeout
3. Select the Persistence option and click **OK**.

Configure GSLB for disaster recovery

May 2, 2023

Disaster recovery capability is critical, because downtime is costly. A NetScaler appliance configured for GSLB forwards traffic to the least-loaded or the best-performing data center. This configuration, referred to as an active-active setup, not only improves performance, but also provides immediate disaster recovery by routing traffic to other data centers if a data center that is part of the setup goes down. Alternatively, you can configure an active-standby GSLB setup for disaster recovery only.

Configure GSLB for disaster recovery in an active-standby data center setup

A conventional disaster recovery setup includes an active data center and a standby data center. The standby data center is a remote site. When a failover occurs as a result of a disaster event that causes the primary active data center to be inactive, the standby data center becomes operational.

Configuring disaster recovery in an active-standby data-center setup consists of the following tasks.

- Create the active data center.
 - Add a local GSLB site.
 - Add a GSLB vserver, which represents the active data center.
 - Bind the domain to the GSLB virtual server.
 - Add gslb services and bind the services to active GSLB virtual server.
- Create the standby data center.
 - Add a remote gslb site.
 - Add a gslb vserver, which represents standby data center.
 - Add gslb services which represents standby data center and bind the services to the standby gslb vserver.
 - Designate the standby data center by configuring the standby GSLB virtual server as the backup virtual server for the active GSLB virtual server.

Once you have configured the primary data center, replicate the configuration for the backup data center and designate it as the standby GSLB site by designating a GSLB virtual server at that site as the backup virtual server.

For details on how to configure a basic GSLB setup, see [Configuring GSLB Entities Individually](#).

To designate the standby GSLB site by using the command line interface

At both the active site and the remote site, at the command prompt, type:

```
1 set gslb vserver <name> -backupVserver <string>
```

Example:

```
1 set gslb vserver vserver-GSLB-1 -backupVServer vserver-GSLB-2
```

To configure the standby site by using the configuration utility

1. Navigate to Traffic Management > GSLB > Virtual Servers and double-click the GSLB virtual server for the primary site.
2. Click the **Backup Virtual Server** section and select a backup virtual server.

By default, once the primary virtual server becomes active, it starts receiving traffic. However, if you want the traffic to be directed to the backup virtual server even after the primary virtual server becomes active, use the 'disable primary on down' option.

Configure for disaster recovery in an active-active data center setup

An active-active GSLB deployment, in which both GSLB sites are active, removes any risk that may arise in having a standby data center. With such a setup, web or application content can be mirrored in geographically separate locations. This ensures that data is consistently available at each distributed data center.

To configure GSLB for disaster recovery in an active-active data center set up, you must first configure the basic GSLB setup on the first data center and then configure all other data centers.

First create at least two GSLB sites. Then, for the local site, create a GSLB virtual server and GSLB services and bind the services to the virtual server. Then create ADNS services and bind the domain for which you are configuring GSLB to the GSLB virtual server in the local site. Finally, at the local site, create a load balancing virtual server with the same virtual server IP address as the GSLB service.

Once you have configured the first data center, replicate the configuration for other data centers part of the setup.

For details on how to configure a basic GSLB setup, see [Configuring GSLB Entities Individually](#).

Configuring for Disaster Recovery with Weighted Round Robin

When you configure GSLB to use the weighted round robin method, weights are added to the GSLB services and the configured percentage of incoming traffic is sent to each GSLB site. For example, you can configure your GSLB setup to forward 80 percent of the traffic to one site and 20 percent of the traffic to another. After you do this, the NetScaler appliance will send four requests to the first site for each request that it sends to the second.

To set up the weighted round robin method, first create two GSLB sites, local and remote. Next, for the local site create a GSLB virtual server and GSLB services, and bind the services to the virtual server. Configure the GSLB method as round robin. Next, create ADNS services and bind the domain for which you are configuring GSLB to the GSLB virtual server. Finally, create a load balancing virtual server with the same virtual server IP address as the GSLB service.

Each service that represents a physical server in the network has weights associated with it. Therefore the GSLB service is assigned a dynamic weight that is the sum of weights of all services bound to it. Traffic is then split between the GSLB services based on the ratio of the dynamic weight of the particular service to the total weight. You can also configure individual weights for each GSLB service instead of the dynamic weight.

If the services do not have weights associated with them, you can configure the GSLB virtual server to use the number of services bound to it to calculate the weight dynamically.

For details on how to configure a basic GSLB setup, see [Configuring GSLB Entities Individually](#).

Once you configure a basic GSLB setup, you must configure the weighted round robin method such that the traffic is split between the configured GSLB sites according to the weights configured for the individual services.

To configure a virtual server to assign weights to services by using the command line interface

At the command prompt, type one of the following commands, depending upon whether you want to create a new load balancing virtual server or configure an existing one:

```
1 add lb vserver <name>@ -weight <WeightValue> <ServiceName>
2 set lb vserver <name>@ -weight <WeightValue> <ServiceName>
```

Example:

```
1 add lb vserver Vserver-LB-1 -weight 4 Service-HTTP-1
2 set lb vserver Vserver-LB-1 -weight 4 Service-HTTP-1
```

To set dynamic weight by using the command line interface

At the command prompt, type:

```
1 set gslb vserver <name> -dynamicWeight DynamicWeightType
```

Example:

```
1 set gslb vserver Vserver-GSLB-1 -dynamicWeight ServiceWeight
```

To add weights to the GSLB services by using the command line interface

At the command prompt, type:

```
1 set gslb vserver <name> -serviceName GSLBServiceName -weight  
WeightValue
```

Example:

```
1 set gslb vserver Vserver-GSLB-1 -serviceName Service-GSLB-1 -weight 1
```

To configure a virtual server to assign weights to services by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Virtual Servers and double-click the virtual server (for example, Vserver-LB-1).
2. Click the Services section and set the weight of a service.

To add weights to the GSLB services by using the configuration utility

1. Navigate to Traffic Management > GSLB > Virtual Servers and double-click the virtual server (for example, vserver-GSLB-1)
2. Click the Services section and set the weight of the service in the Weight field.

To set dynamic weight by using the configuration utility

1. Navigate to Traffic Management > GSLB > Virtual Servers and double-click the virtual server (for example, vserver-GSLB-1).
2. Click the **Method** section and, from the **Dynamic Weight** drop-down list select **SERVICEWEIGHT**.

Configuring for Disaster Recovery with Data Center Persistence

Data center persistence is required for web applications that require maintaining a connection with the same server instead of having the requests load balanced. For example, in an e-commerce portal,

maintaining a connection between the client and the same server is critical. For such applications, HTTP redirect persistence can be configured in an active-active setup.

To configure GSLB for disaster recovery with data center persistence, you must first configure the basic GSLB set up and then configure HTTP redirect persistence.

First create two GSLB sites, local and remote. Next, for the local site, create a GSLB virtual server and GSLB services and bind the services to the virtual server. Next, create ADNS services and bind the domain for which you are configuring GSLB to the GSLB virtual server at the local site. Next, create a load balancing virtual server with the same virtual server IP address as the GSLB service. Finally, duplicate the previous steps for the remote configuration, or configure the NetScaler appliance to autosynchronize your GSLB configuration.

For details on how to configure a basic GSLB setup, see [Configuring GSLB Entities Individually](#).

Once you have configured a basic GSLB setup, configure HTTP redirect precedence to enable data center persistence.

To configure HTTP redirect by using the command line interface

At the command prompt, type the following commands to configure HTTP redirect and verify the configuration:

```
1 set gslb service <serviceName> -sitePersistence <sitePersistence> -  
   sitePrefix <string>  
2 show gslb service <serviceName>
```

Example:

```
1 set gslb service Service-GSLB-1 -sitePersistence HTTPRedirect -  
   sitePrefix vserver-GSLB-1  
2 show gslb service Service-GSLB-1
```

To configure HTTP redirect by using the configuration utility

1. Navigate to Traffic Management > GSLB > Services and double-click the GSLB service to be configured.
2. Click the **Site Persistence** section, select the **HTTPRedirect** option, and in the **Site Prefix** text box, enter the site prefix (for example, vserver-GSLB-1).

Note

When site persistence is not configured and if a load balancing virtual server that is configured

as a local GSLB service is DOWN, the HTTP requests are redirected to other healthy GSLB sites using a 302 redirect.

Override static proximity behavior by configuring preferred locations

November 15, 2024

You might want to direct traffic from a local DNS (LDNS) server or network to a GSLB service other than the GSLB service that the static proximity method selects for that traffic. That is, you have a *preferred location* for that traffic. To override the static proximity method with preferred locations, you can do the following:

1. Configure a DNS action that consists of a list of preferred locations. For more information about configuring a DNS action, see [Configuring a DNS Action](#).
2. Configure a DNS policy to identify the traffic arriving from the LDNS server or network for which you want to override static proximity, and apply the action in the policy.
3. Bind the policy to the global request bind point.

Note:

- When configuring static proximity load balancing, if multiple GSLB services belong to the same location, then the round robin method is implemented for all the GSLB services associated with that location.
- When using a DNS-based preferred location policy in conjunction with round robin load balancing, the location policy overrides the round robin method if a match occurs.

In the DNS action, you can configure a list of up to 8 preferred locations. The locations must be provided in the dotted qualifier notation, which is the notation in which you add custom locations to the static proximity database. The locations can include wildcards for qualifiers that you want to omit. For information about the dotted qualifier notation for locations, see [Adding Custom Entries to a Static Proximity Database](#). When entering the preferred locations, you must enter them in the descending order of priority.

When a policy evaluates to

TRUE, the NetScaler appliance matches the preferred locations, in priority order, with the locations of GSLB services. Matches are of the following two types:

- If all the non-wildcard qualifiers in a preferred location match the corresponding qualifiers in the location of a GSLB service, the match is considered a perfect match. For example, a GSLB service location of *.UK.* or Europe.UK.* is a perfect match for the preferred location *.UK.*.

- If only a subset of the non-wildcard qualifiers match, the match is considered a partial match. For example, a GSLB service location of Europe.EG is a partial match for the preferred location Europe.UK.

When a DNS policy evaluates to

TRUE, the following algorithm is used to select a GSLB service:

1. The appliance evaluates the preferred location that has the highest priority and moves down the priority order until a perfect match is found between a preferred location and the location of a GSLB service.

If a perfect match is found, the appliance checks whether the corresponding GSLB service is up. If it is up, it returns the IP address of the GSLB service in the DNS response. If multiple perfect matches are found (which can happen when one or more wildcards are used in a preferred location), the appliance checks the state of each of the corresponding GSLB services and load balances the GSLB services that are up.

2. If a perfect match is not found for any of the preferred locations, the appliance returns to the preferred location that has the highest priority and moves down the priority order until a partial match is found between a preferred location and the location of a GSLB service.

If a partial match is found, the appliance checks whether the corresponding GSLB service is up. If it is up, it returns the IP address of the GSLB service in the DNS response. If multiple partial matches are found, the appliance checks the state of each of the corresponding GSLB services and load balances the GSLB services that are up.

3. If none of the perfect and partial matches are up, the appliance load balances all other available GSLB services.

In this way, the appliance implements a type of site affinity for traffic that matches the DNS policy.

Example

Consider a GSLB configuration that consists of the following eight GSLB services:

- Asia.IN
- Asia.JPN
- Asia.HK
- Europe.UK
- Europe.RU
- Europe.EG
- Africa.SD
- Africa.ZMB

Further consider the following DNS action and policy configuration:

```
1 > add dns action prefLoc11 GslbPrefLoc -preferredLocList "Asia.HK" "  
    Europe.UK"  
2 Done  
3 > add dns policy dnsPolPrefLoc "CLIENT.IP.SRC.MATCHES_LOCATION("*.ZMB  
    *.*.*")" prefLoc11  
4 Done
```

When the appliance receives a request from the location `.ZMB.*`, the preferred locations are evaluated as follows:

1. The appliance attempts to find a GSLB service whose location is a perfect match for `Asia.HK`, which is the preferred location that has the highest priority. It finds that the GSLB service at `Asia.HK` is a perfect match. If the GSLB service is up, it sends the client the IP address of the GSLB service.
2. If the GSLB service at `Asia.HK` is down, the appliance attempts to find a perfect match for the second preferred location, `Europe.UK`. It finds that the GSLB service at `Europe.UK` is a perfect match. If the GSLB service is up, it sends the client the IP address of the service.
3. If the GSLB service at `Europe.UK` is down, it returns to the preferred location that has the highest priority, `Asia.HK`, and looks for partial matches. For `Asia.HK`, it finds that `Asia.IN` and `Asia.JPN` are partial matches. If only one of the corresponding GSLB services is up, it sends the client the IP address of the service. If both locations are up, it load balances the two services.
4. If all partial matches for `Asia.HK` are down, the appliance looks for partial matches for `Europe.UK`. It finds that `Europe.RU` and `Europe.EG` are partial matches for the preferred location. If only one of the corresponding GSLB services is up, it sends the client the IP address of the service. If both locations are up, it load balances the two services.
5. If all partial matches for `Europe.UK` are down, the appliance load balances all other available GSLB services. In the current example, the appliance load balances `Africa.SD` and `Africa.ZMB` because the remaining six GSLB services have been found to be down.

Configure GSLB service selection using content switching

September 21, 2020

In a typical GSLB deployment, you can prioritize the selection of a set of GSLB services bound to a GSLB virtual server, but you cannot do the following:

- Restrict the selection of a GSLB service from a subset of GSLB services bound to a GSLB virtual server for the given domain.
- Apply different load balancing methods on the different subsets of GSLB services in the deployment.

- Apply spillover policies on a subset of GSLB services, and you cannot have a backup for a subset of GSLB services.
- Configure a subset of GSLB services to serve different content. That is, you cannot content switch between servers in different GSLB sites. The GSLB configuration assumes that the servers contain the same content.
- Define a subset GSLB service with different priorities and specify an order in which the services in the subset are applied to a request.

You can now configure a content switching (CS) policy to customize the GSLB deployment. First configure a set of GSLB services and bind it to a GSLB virtual server. Then, configure a CS virtual server of target type GSLB, define a CS policy and action with the GSLB virtual server as target virtual server, and bind the CS policy to CS virtual server.

Important

- Only CS policies with DNS based expressions can be bound to a CS virtual server of target type GSLB.
- If a GSLB service is bound to a CS virtual server through a GSLB virtual server, you cannot bind another GSLB virtual server bound with the same GSLB service to the CS virtual server.

Example

Consider a GSLB deployment that includes two GSLB sites. At each site, four GSLB services (S-1, S-2, S-3, and S-4) are bound to GSLB virtual server VS-1. You can configure a content switching (CS) virtual server of target type GSLB and define a CS policy and action with VS-1 as the target virtual server, so that requests for content in English are served only by S-1 and S-2, and requests for content in the local language are served only by S-3 and S-4.

You can give S-1 priority by configuring a backup virtual server to VS-1 and binding S-2 to the backup virtual server. S-1 serves the client requests. If the server S-1 represents goes down, S-2 serves the requests. If both S-1 and S-2 are down, clients receive an empty response.

To configure GSLB Service Selection using Content Switching:

1. Configure GSLB. For instructions, see [Configuring Global Server Load Balancing](#).
2. Configure a Content Switching (CS) virtual server of target type GSLB. For more information, see [Creating Content Switching Virtual Servers](#).
3. Configure Content Switching (CS) policies. For more information, see [Configuring Content Switching Policies](#).
4. Configure CS actions that designate a GSLB virtual server as the target virtual server. For more information, see [Configuring a Content Switching Action](#).
5. Bind the CS policies to the CS virtual server. For more information, see [Binding Policies to a Content Switching Virtual Server](#).
6. Bind the domain to the CS virtual server instead of the GSLB virtual server.

Sample Configuration

The following sample configuration sends requests from the client with IP address 5.5.5.5 to SERVICE_GSLB1 and SERVICE_GSLB2. SERVICE_GSLB1 has a higher priority than SERVICE_GSLB2, and SERVICE_GSLB2 serves the client requests only when SERVICE_GSLB1 is down. If both SERVICE_GSLB1 and SERVICE_GSLB2 are down, SERVICE_GSLB3 and service-GSLB4 are not considered, and a blank response is sent to the client.

```
1 add cs vs CSVSERVER_GSLB http -targettype GSLB
2 Done
3 add gslb vs VSERVER_GSLB1 http
4 Done
5 add gslb vs VSERVER_GSLB2 http
6 Done
7 add gslb vs VSERVER_GSLB_BACKUP1 http
8 Done
9 set gslb vs VSERVER_GSLB1 -backupvserver VSERVER_GSLB_BACKUP1
10 Done
11 add gslb service SERVICE_GSLB1 1.1.1.1 HTTP 80 -sitename site1
12 Done
13 add gslb service SERVICE_GSLB2 1.1.1.2 HTTP 80 -sitename site1
14 Done
15 add gslb service SERVICE_GSLB3 1.1.1.3 HTTP 80 -sitename site2
16 Done
17 add gslb service SERVICE_GSLB4 1.1.1.4 HTTP 80 -sitename site2
18 Done
19 bind gslb vs VSERVER_GSLB1 -servicename SERVICE_GSLB1
20 Done
21 bind gslb vs VSERVER_GSLB_BACKUP1 -servicename SERVICE_GSLB2
22 Done
23 bind gslb vs VSERVER_GSLB2 -servicename SERVICE_GSLB3
24 Done
25 bind gslb vs VSERVER_GSLB2 -servicename SERVICE_GSLB4
26 Done
27 add cs action a1 -targetvserver VSERVER_GSLB1
28 Done
29 add cs policy p1 -rule "CLIENT.IP.SRC.EQ(5.5.5.5)" -action a1
30 Done
31 bind cs vs CSVSERVER_GSLB -domainName www.abc.com
32 Done
33 bind cs vs CSVSERVER_GSLB -policyname p1 -priority 1
34 Done
35 add cs action a2 -targetvserver VSERVER_GSLB2
36 Done
37 add cs policy p2 -rule "CLIENT.IP.SRC.EQ(6.6.6.6)" -action a2
38 Done
39 bind cs vs CSVSERVER_GSLB -policyname p2 -priority 2
40 Done
```

Associate a target virtual server expression to a GSLB content switching action

You can now associate a target virtual server expression to a GSLB content switching action. This allows GSLB content switching virtual server to use policy expressions to compose the target GSLB virtual server name while processing the DNS requests.

To configure a content switching action that specifies an expression by using the CLI

At the command prompt, type the following command to configure the content switching action to retrieve the HTTP callout response.

```
1 add cs action <name> -targetVserverExpr <expression>
```

Example:

```
1 add cs action csact_GSLB_VServer -targetVserverExpr "SYS.HTTP_CALLOUT(  
GSLB_Method_API)"
```

To configure a content switching action that specifies an expression by using the GUI

1. Navigate to **Traffic Management > Content Switching > Actions**.
2. Configure a content switching action, and specify an **Expression** that dynamically computes the name of the target load balancing virtual server.

Configure GSLB for DNS queries with NAPTR records

May 2, 2023

In a typical Global Server Load Balancing (GSLB) deployment, the NetScaler appliance receives DNS queries for A/AAAA records, selects the most appropriate GSLB service according to the configured load balancing method, and returns the service's IP address as a reply to the DNS query. You can now configure the appliance to receive DNS queries for NAPTR records and respond with the list of services configured for a domain. The appliance also monitors the health of the services, and in the response it provides a list of only the services that are up.

Example:

In Telco deployments, you can configure a NetScaler appliance to receive DNS queries with NAPTR records from clients such as mobile management entities (MMEs), which play the role of a DNS resolver to discover all the services that are offered by the domain name. The appliance responds to the query with NAPTR records for all the services that are up. The MME can use this NAPTR response to run the

S-NAPTR procedure to select the nodes on the basis of the service offered, colocation, topological closeness, and so on.

If multiple nodes qualify for selection, the MME can use the preference field in the NAPTR record from the NetScaler appliance to determine the node.

NAPTR Record Format

While responding to a DNS query with NAPTR record, a NetScaler appliance constructs a response NAPTR record for each GSLB service.

The following table lists the files in the NAPTR record:

Field	
Domain	The GSLB domain
TTL	The amount of time for which the NAPTR record can be cached.
Class	The class of the record. By default, this value is set to IN.
Type	The DNS record type.
Order	Specifies the order in which the NAPTR record MUST be processed. You can specify the order in the GSLB service. Otherwise, it is set to 1.
Preference	Specifies the order in which NAPTR records with equal “order” values SHOULD be processed, low numbers being processed before high numbers. If the order is not specified in the GSLB service, it is set to 1.
Flags	Controls the aspects of the rewriting and interpretation of the fields in the record. The NetScaler appliance sets this value to A.
Service	Specifies the available service(s).
Regular Expression	Regular expressions are not supported, so this value is set to NULL.
Replacement	The domain name of the node that hosts the services.

Configuration procedure

For detailed GSLB configuration instructions, see [Configuring Global Server Load Balancing \(GSLB\)](#). Make sure that you do the following:

- Set the following parameters while adding the GSLB virtual server:
 - serviceType: ANY
 - dnsRecordType: NAPTR
 - lbMethod: CUSTOMLOAD

Example:

```
1 add gslb vserver gslb_vs ANY -dnsRecordType NAPTR -lbMethod CUSTOMLOAD
```

- While adding a GSLB site, set the *naptrReplacementSuffix* parameter to the domain name that you want to embed in the NAPTR records.

Example:

```
1 add gslb site site1 10.102.218.200 -naptrReplacementSuffix example.com
```

- Set the following parameters while adding the GSLB service:
 - naptrreplacement
 - naptrOrder
 - naptrServices
 - naptrDomainTTL
 - naptrPreference

Sample configuration

```
1 add gslb vserver gslb_vs ANY -dnsRecordType NAPTR -lbMethod CUSTOMLOAD
2
3 Done
4
5 add gslb site site1 10.102.218.200 -naptrReplacementSuffix example.com
6
7 Done
8
9 add gslb service sgw1 3.3.3.13 ANY * -siteName site1 -naptrreplacement
   sgw1.site1. -naptrOrder 2 -naptrServices x-3gpp-sgw:x-s5-gtp -
   naptrDomainTTL 20 -naptrPreference 200
10
11 Done
12
```

```
13 add gslb service sgw2 3.3.3.11 ANY * -siteName site1 -naptrreplacement
    sgw2.site1. -naptrOrder 5 -naptrServices x-3gpp-sgw:x-s5-gtp -
    naptrDomainTTL 20 naptrPreference 100
14
15 Done
16
17 add gslb service sgw3 3.3.3.12 ANY * -siteName site2 -naptrreplacement
    sgw3.site1. -naptrOrder 10 -naptrServices x-3gpp-sgw:x-s5-gtp -
    naptrDomainTTL 20 naptrPreference 300
18
19 bind gslb vserver gslb_vs -serviceName sgw1
20
21 Done
22
23 bind gslb vserver gslb_vs -serviceName sgw2
24
25 Done
26
27 bind gslb vserver gslb_vs -serviceName sgw3
28
29 Done
30
31 bind gslb service sgw1 -monitorName ping
32
33 Done
34
35 bind gslb service sgw2 -monitorName ping
36
37 Done
38
39 bind gslb service sgw3 -monitorName ping
40
41 Done
42
43 bind gslb vserver gslb_vs -domainName gslb.com -TTL 5
44
45 Done
```

Note

DNS queries with NAPTR records are not supported in parent-child configuration.

Configure GSLB for wildcard domain

June 24, 2022

You can bind a wildcard DNS domain to a GSLB virtual server. Users accessing the applications behind a wildcard domain are routed to the best optimal data center, which hosts those applications. The

wildcard domain handles requests for non-existent domains and subdomains. For more information about wildcard domains, see [Supporting wildcard DNS domains](#). For information about DNS zones, see [Configure a DNS zone](#).

To configure GSLB for a wildcard domain, you must first configure the basic GSLB setup. For details on how to configure a basic GSLB setup, see [Configuring GSLB Entities Individually](#).

To configure a GSLB setup for wildcard domain by using the CLI

Perform the following steps to configure a GSLB setup for wildcard domain:

1. Create the GSLB sites.

```
1 add gslb site site1 10.0.1.10
2 add gslb site site2 20.0.1.10
```

2. Add the GSLB services for each site participating in the GSLB setup.

```
1 add gslb service svc1 -sitename site1 10.0.1.10 http 80
2 add gslb service svc2 -sitename site1 10.0.1.10 http 80
3 add gslb service svc3 -sitename site2 20.0.1.10 http 80
4 add gslb service svc4 -sitename site2 20.0.1.10 http 80
```

3. Add the GSLB virtual server that references a service being used in the GSLB setup.

```
1 add gslb vserver gslb_vs http
```

4. Add an ADNS service that listens to the DNS queries.

```
1 add service adns_udp 10.14.39.21 ADNS 53
```

5. Bind the GSLB services to the GSLB virtual server.

```
1 bind gslb vserver gslb_vs -service svc1
2 bind gslb vserver gslb_vs -service svc2
3 bind gslb vserver gslb_vs -service svc3
4 bind gslb vserver gslb_vs -service svc4
```

6. Create a zone.

```
1 add dns soaRec test.com -originServer n1.test.com -contact n1.test.com
2 add dns nsrec test.com n1.test.com
3 add dns nsrec test.com n2.test.com
4 add dns zone test.com -proxymode no
```

7. Bind the domain name to the GSLB virtual server.

```
1 bind gslb vserver gslb_vs -domainName *.test.com
```

Use the EDNS0 client subnet option for Global Server Load Balancing

August 22, 2024

EDNS Client Subnet (ECS) is a Domain Name Server (DNS) header extension that provides the client subnet details. You can use these details to improve the accuracy of NetScaler Global Server Load Balancing (GSLB) by using the client network location rather than the DNS resolver location to determine the topological closeness of the client.

Note

NetScaler supports only EDNS0.

Important:

Make sure that the Local Domain Name Server (LDNS) in your deployment supports the EDNS0 Client Subnet so that the incoming DNS queries contain the EDNS0 Client Subnet option and the NetScaler appliance uses the ECS address while processing the DNS query.


The NetScaler appliance uses the LDNS IP address for determining the topological closeness of the client and performs GSLB, when you use proximity-based load balancing methods like static proximity or dynamic round-trip time (RTT). It happens in a typical GSLB deployment. But when a centralized DNS resolver, such as Google DNS or OpenDNS, is involved in the deployment, the NetScaler appliance sends the DNS request to a data center close to the centralized DNS resolver, which might not be close to the client. For example, in a typical NetScaler GSLB deployment using the static proximity load balancing method, an end-user request from Japan is sent to a data center in Japan and an end user request from California is sent to a data center in California. But if a centralized DNS resolver is involved, the NetScaler appliance might send a request from Japan to a data center in California.

You can use the ECS option in deployments that include the NetScaler appliance configured as an Authoritative DNS (ADNS) server for a GSLB domain. If you use static proximity as the load balancing method, you can use the IP subnet in the EDNS header instead of the LDNS IP address. This helps to determine the geographical proximity of the client. In proxy mode deployment, the NetScaler appliance forwards an ECS-enabled DNS query as-is to the back-end servers. The appliance does not cache ECS-enabled DNS responses.


Note

The ECS option is not applicable for all other deployment modes, such as ADNS mode for non-GSLB domains, resolver mode, and forwarder mode. The ECS option is ignored by the NetScaler appliance in the preceding mentioned modes. Also, by default, ECS is disabled for GSLB deployment.

Without EDNS0 Client Subnet Option

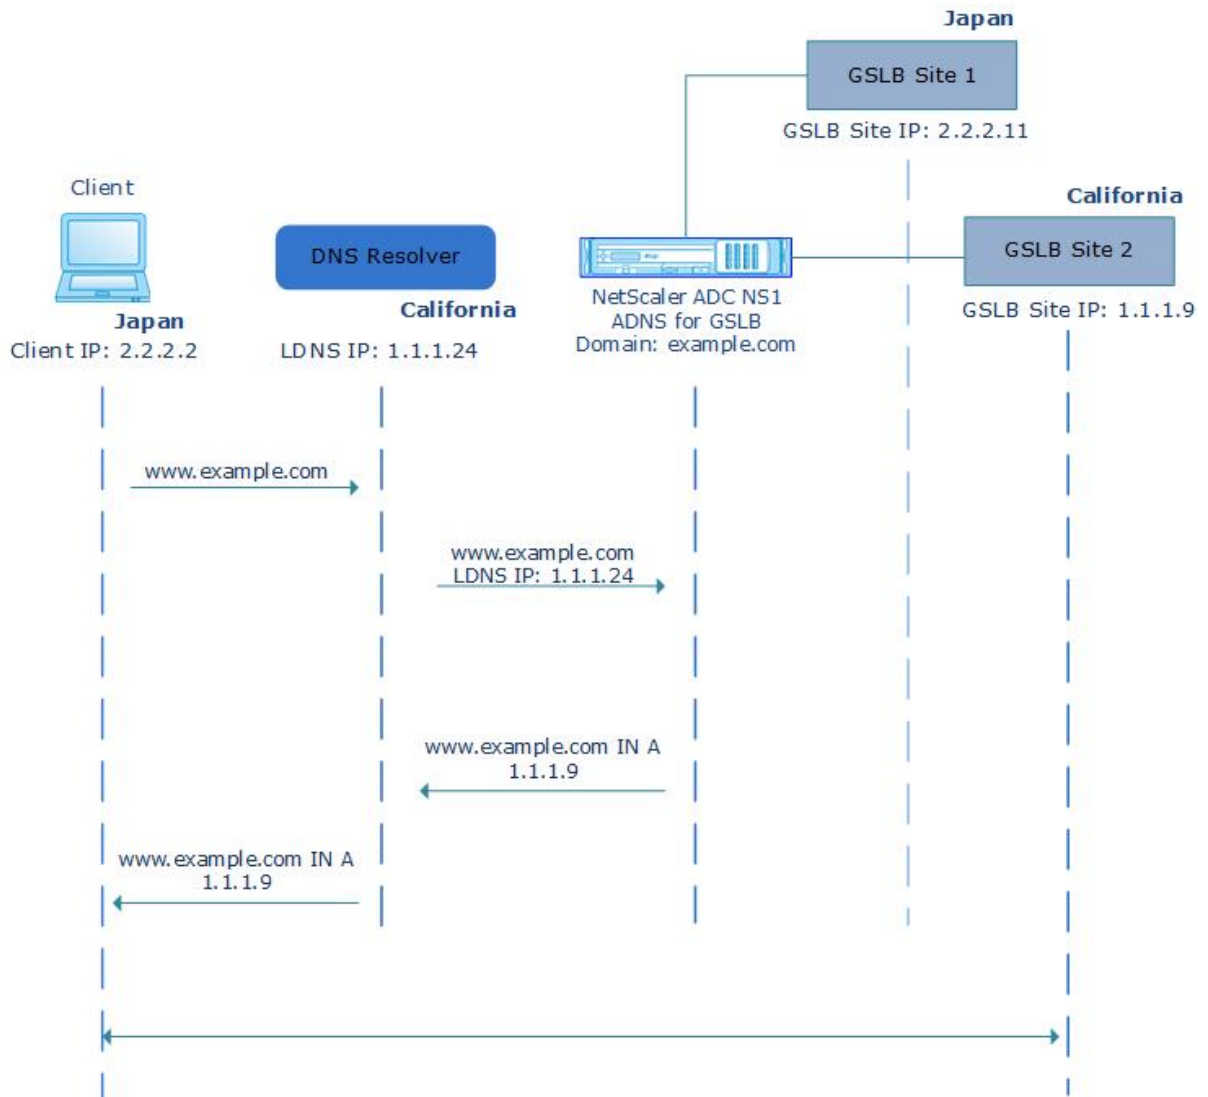

With EDNS0 Client Subnet Option

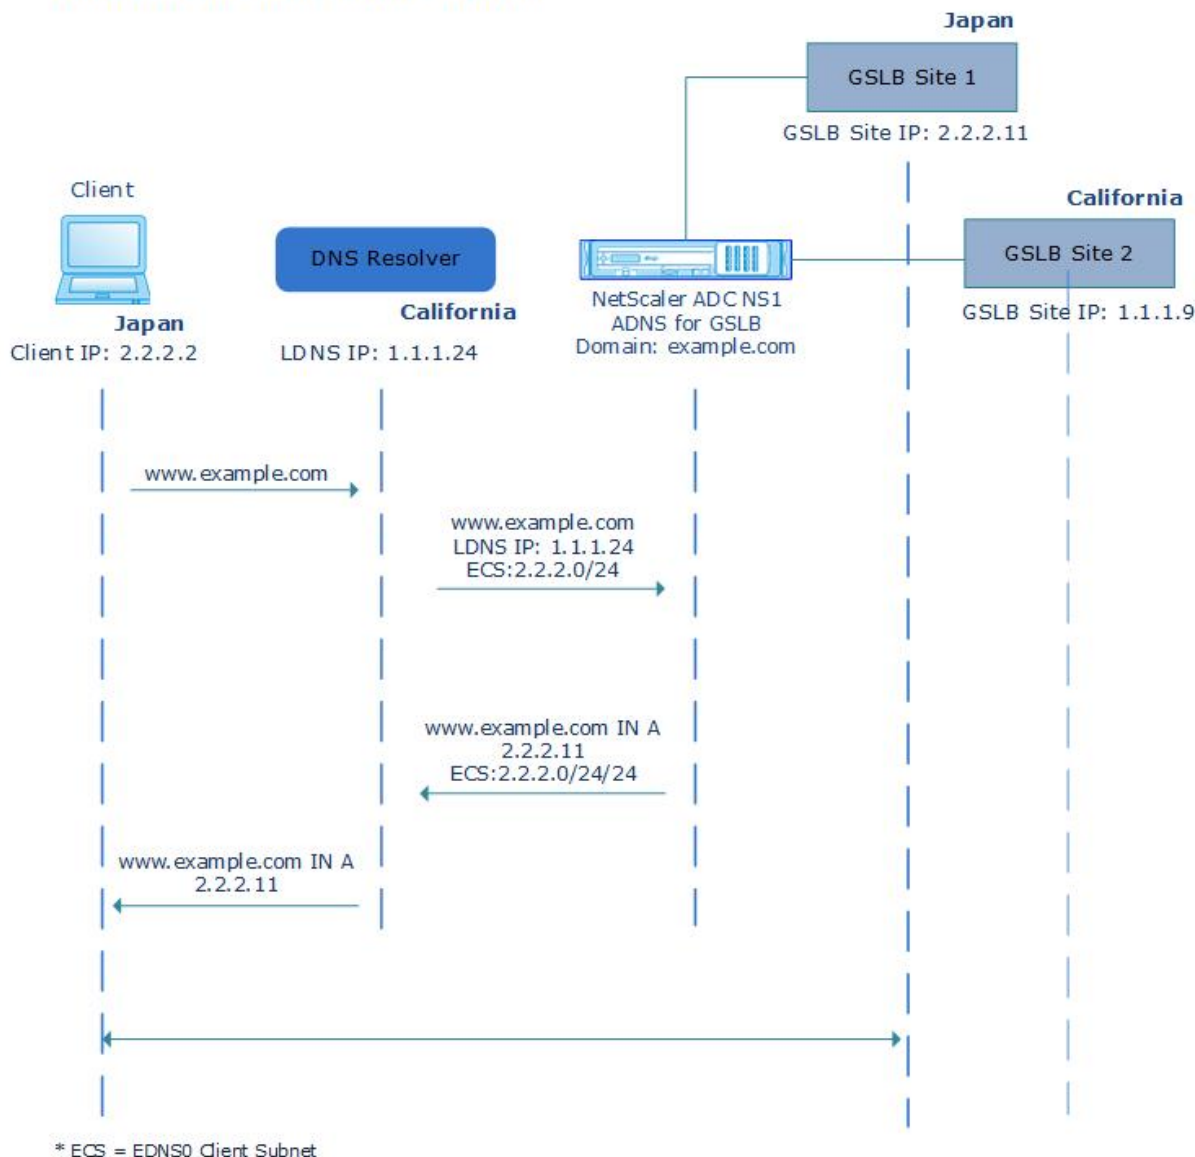

To enable the EDNS0 Client Subnet option by using the command line interface:

At the command prompt, type:

```

1 set gslb vserver <vserver_name> **-ECS ENABLED
2
3 set gslb vserver vserver-GSLB-1 -ECS ENABLED
    
```

Address validation

You can configure a GSLB virtual server to verify that the address returned by the EDNS0 Client Subnet (ECS) option of the DNS query is not a private or an unroutable IP address. With address validation

enabled, the NetScaler appliance ignores the ECS address in the DNS query if it is listed in the following table, and instead uses the LDNS IP address for global server load balancing.

Note

By default, address validation is disabled.

Address Type	Address	Description
IPv4	10.0.0.0/8	For private use
	172.16.0.0/12	For private use
	192.168.0.0/16	For private use
	0.0.0.0/8	Refers to the host on the network
	100.64.0.0/10	Shared address space
	127.0.0.0/8	Loopback address
	169.254.0.0/16	Link Local IPv4 address as defined in RFC 3927
	192.0.0.0/24	Used for IETF protocol assignments, includes the private space 192.168.0.0/16
	192.0.2.0/24	Used for documentation purposes
	192.88.99.0/24	Used for 6to4 Relay Anycast
	198.18.0.0/15	Used in Device benchmark testing
	198.51.100.0/24	Used for documentation purposes
	203.0.113.0/24	Used for documentation purposes
	240.0.0.0/4	Used as reserved
255.255.255.255/32	Used for broadcast	
IPv6	::1/128	loopback address
	::/128	unspecified address
	::ffff:0:0/96	IPv4-mapped address

Address Type	Address	Description
	100::/64	discard-only address block
	2001::/23	Used for IETF protocol assignments
	2001::/32	TEREDO
	2001:2::/48	Used for benchmarking
	2001:db8::/32	Used for documentation purposes
	2001:10::/28	ORCHID
	2002::/16	Used for 6to4 Relay Anycast
	fc00::/7	Unique-local
	fe80::/10	Link-local Unicast addresses

To enable address validation by using the command line interface

At the command prompt, type:


```
1 set gslb vserver <vserver_name> -ecsAddrValidation ENABLED
2
3 set gslb vserver vserver-GSLB-1 -ecsAddrValidation ENABLED
```

Example of a complete parent-child configuration using the metrics exchange protocol

April 27, 2021

Consider the following parent-child topology in which the GSLB sites are distributed globally.

- Site1 and Site2 are the parent sites.
- Site1_child1 and Site1_child2 are the child sites of Site1.
- Site2_child1 and Site2_child2 are the child sites of Site2.

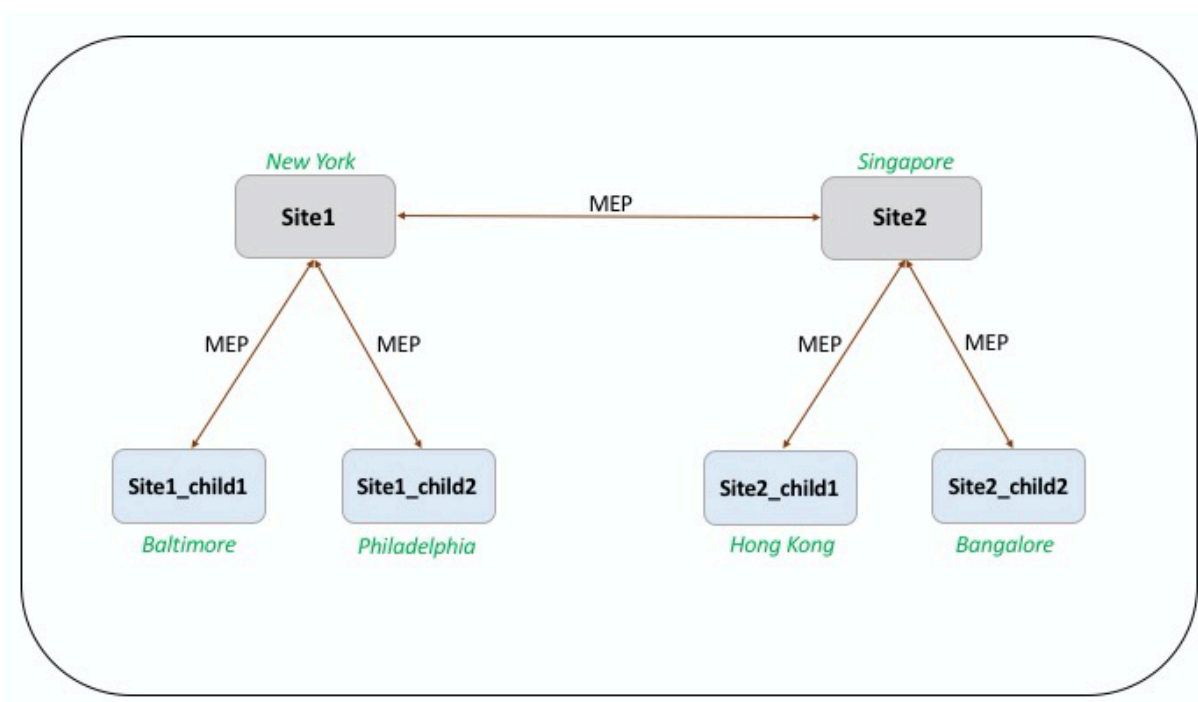

The following commands illustrate the complete configuration of the parent-child topology.

site1

```

1 add gslb site site1 10.102.82.164 -publicIP 10.102.82.164
2
3 add gslb site site2 10.106.24.164 -publicIP 10.106.24.164
4
5 add gslb site site1_child1 10.102.82.131 -publicIP 10.102.82.131 -
  nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
  site1
6
7 add gslb site site1_child2 10.102.82.67 -publicIP 10.102.82.67 -
  nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
  site1
8
9 add gslb site site2_child1 10.106.24.132 -publicIP 10.106.24.132 -
  nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
  site2
10
11 add gslb site site2_child2 10.106.24.67 -publicIP 10.106.24.67 -
  nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
  site2
12
13 add gslb service site1_child1_http_gsvc1 10.102.82.132 HTTP 80 -
  publicIP 10.102.82.132 -publicPort 80 -maxClient 0 -siteName
  site1_child1 -cltTimeout 180 -svrTimeout 360 -downStateFlush ENABLED
14
  
```

```
15 add gslb service site1_child2_http_gsvc1 10.102.82.68 HTTP 80 -publicIP
    10.102.82.68 -publicPort 80 -maxClient 0 -siteName site1_child2 -
    cltTimeout 180 -svrTimeout 360 -downStateFlush ENABLED
16
17 add gslb service site2_child1_http_gsvc1 10.106.24.134 HTTP 80 -
    publicIP 10.106.24.134 -publicPort 80 -maxClient 0 -siteName
    site2_child1 -cltTimeout 180 -svrTimeout 360 -downStateFlush ENABLED
18
19 add gslb service site2_child2_http_gsvc1 10.106.24.68 HTTP 80 -publicIP
    10.106.24.68 -publicPort 80 -maxClient 0 -siteName site2_child2 -
    cltTimeout 180 -svrTimeout 360 -downStateFlush ENABLED
20
21 add gslb vserver gv1 HTTP -backupLBMethod ROUNDROBIN -tolerance 0 -
    appflowLog DISABLED
22
23 bind gslb vserver gv1 -serviceName site1_child1_http_gsvc1
24
25 bind gslb vserver gv1 -serviceName site1_child2_http_gsvc1
26
27 bind gslb vserver gv1 -serviceName site2_child2_http_gsvc1
28
29 bind gslb vserver gv1 -serviceName site2_child1_http_gsvc1
30
31 bind gslb vserver gv1 -domainName www.gslb.com -TTL 5
```

site1_child1

```
1 add gslb site site1 10.102.82.164 -publicIP 10.102.82.164
2
3 add gslb site site1_child1 10.102.82.131 -publicIP 10.102.82.131 -
    nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
    site1
```

You can add the following commands for load balancing configuration:

```
1 add service svc1 10.102.82.25 HTTP 80 -gslb NONE -maxClient 0 -maxReq 0
    -cip DISABLED -usip NO -useproxyport YES -sp ON -cltTimeout 180 -
    svrTimeout 360 -CKA NO -TCPB NO -CMP NO
2
3 add lb vserver lb1 HTTP 10.102.82.132 80 -persistenceType NONE -
    cltTimeout 180
4
5 bind lb vserver lb1 svc1
```

site1_child2

```
1 add gslb site site1 10.102.82.164 -publicIP 10.102.82.164
2
```

```
3 add gslb site site1_child2 10.102.82.67 -publicIP 10.102.82.67 -
  nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
  site1
4
5 You can add the following commands for load balancing configuration:
6
7 add service svc1 10.102.82.25 HTTP 80 -gslb NONE -maxClient 0 -maxReq 0
  -cip DISABLED -usip NO -useproxyport YES -sp OFF -cltTimeout 180 -
  svrTimeout 360 -CKA NO -TCPB NO -CMP NO
8
9 add lb vserver lb1 HTTP 10.102.82.68 80 -persistenceType NONE -
  cltTimeout 180
10
11 bind lb vserver lb1 svc1
```

site2

```
1 add gslb site site1 10.102.82.164 -publicIP 10.102.82.164
2
3 add gslb site site2 10.106.24.164 -publicIP 10.106.24.164
4
5 add gslb site site1_child1 10.102.82.131 -publicIP 10.102.82.131 -
  nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
  site1
6
7 add gslb site site1_child2 10.102.82.67 -publicIP 10.102.82.67 -
  nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
  site1
8
9 add gslb site site2_child1 10.106.24.132 -publicIP 10.106.24.132 -
  nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
  site2
10
11 add gslb site site2_child2 10.106.24.67 -publicIP 10.106.24.67 -
  nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
  site2
12
13 add gslb service site1_child1_http_gsvc1 10.102.82.132 HTTP 80 -
  publicIP 10.102.82.132 -publicPort 80 -maxClient 0 -siteName
  site1_child1 -cltTimeout 180 -svrTimeout 360 -downStateFlush ENABLED
14
15 add gslb service site1_child2_http_gsvc1 10.102.82.68 HTTP 80 -publicIP
  10.102.82.68 -publicPort 80 -maxClient 0 -siteName site1_child2 -
  cltTimeout 180 -svrTimeout 360 -downStateFlush ENABLED
16
17 add gslb service site2_child1_http_gsvc1 10.106.24.134 HTTP 80 -
  publicIP 10.106.24.134 -publicPort 80 -maxClient 0 -siteName
  site2_child1 -cltTimeout 180 -svrTimeout 360 -downStateFlush ENABLED
18
19 add gslb service site2_child2_http_gsvc1 10.106.24.68 HTTP 80 -publicIP
  10.106.24.68 -publicPort 80 -maxClient 0 -siteName site2_child2 -
```

```
    cltTimeout 180 -svrTimeout 360 -downStateFlush ENABLED
20
21 add gslb vserver gv1 HTTP -backupLBMethod ROUNDROBIN -tolerance 0 -
    appflowLog DISABLED
22
23 bind gslb vserver gv1 -serviceName site1_child1_http_gsvc1
24
25 bind gslb vserver gv1 -serviceName site1_child2_http_gsvc1
26
27 bind gslb vserver gv1 -serviceName site2_child2_http_gsvc1
28
29 bind gslb vserver gv1 -serviceName site2_child1_http_gsvc1
30
31 bind gslb vserver gv1 -domainName www.gslb.com -TTL 5
```

site2_child1

```
1 add gslb site site2 10.106.24.164 -publicIP 10.106.24.164
2
3 add gslb site site2_child1 10.106.24.132 -publicIP 10.106.24.132 -
    nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
    site2
```

You can add the following commands for load balancing configuration:

```
1 add service svc1 10.102.82.25 HTTP 80 -gslb NONE -maxClient 0 -maxReq 0
    -cip DISABLED -usip NO -useproxyport YES -sp ON -cltTimeout 180 -
    svrTimeout 360 -CKA NO -TCPB NO -CMP NO
2
3 add lb vserver lb1 HTTP 10.106.24.134 80 -persistenceType NONE -
    cltTimeout 180
4
5 bind lb vserver lb1 svc1
```

site2_child2

```
1 add gslb site site2 10.106.24.164 -publicIP 10.106.24.164
2
3 add gslb site site2_child2 10.106.24.67 -publicIP 10.106.24.67 -
    nwMetricExchange DISABLED -sessionExchange DISABLED -parentSite
    site2
```

You can add the following commands for load balancing configuration:

```
1 add service svc1 10.102.82.25 HTTP 80 -gslb NONE -maxClient 0 -maxReq 0
    -cip DISABLED -usip NO -useproxyport YES -sp ON -cltTimeout 180 -
    svrTimeout 360 -CKA NO -TCPB NO -CMP NO
2
```

```
3 add lb vserver lb1 HTTP 10.106.24.68 80 -persistenceType NONE -  
   cltTimeout 180  
4  
5 bind lb vserver lb1 svc1
```

Link load balancing

May 2, 2023

Link load balancing (LLB) balances outbound traffic across multiple Internet connections provided by different service providers. LLB enables the NetScaler appliance to monitor and control traffic so that packets are transmitted seamlessly over the best possible link. Unlike with server load balancing, where a service represents a server, with LLB, a service represents a router or the next hop. A link is a connection between the NetScaler appliance and the router.

To configure link load balancing, many users begin by configuring a basic setup with default settings. A basic setup involves services, virtual servers, monitors, routes, an LLB method, and persistence (optional). Once a basic setup is operational, you can customize it for your environment.

Load balancing methods that are applicable to LLB are round robin, destination IP hash, least bandwidth, and least packets. You can optionally configure persistence for connections to be sustained on a specific link. The available persistence types are source IP address-based, destination IP address-based, and source IP and destination IP address-based. PING is the default monitor but configuring a transparent monitor is recommended.

You can customize your setup by configuring reverse NAT (RNAT) and backup links.

Configuring a Basic LLB Setup

May 2, 2023

To configure LLB, you first create services representing each router to the Internet Service Providers (ISPs). A PING monitor is bound by default to each service. Binding a transparent monitor is optional but recommended. Then, you create a virtual server, bind the services to the virtual server, and configure a route for the virtual server. The route identifies the virtual server as the gateway to the physical routers represented by the services. The virtual server selects a router by using the load balancing method that you specify. Optionally, you can configure persistence to make sure that all traffic for a particular session is sent over a specific link.

To configure a basic LLB setup, do the following:

- [Configure services](#)
- [Configure an LLB virtual server and binding a service](#)
- [Configure the LLB method and persistence](#)
- [Configure an LLB route](#)
- [Create and bind a transparent monitor](#)

Configure services

A default monitor (PING) is automatically bound to a service type of ANY when the service is created, but you can replace the default monitor with a transparent monitor, as described in [Creating and Binding a Transparent Monitor](#).

To create a service by using the command line interface

At the command prompt, type:

```
1 add service <name> <IP> <serviceType> <port>
2
3 show service <name>
```

Example:

```
1 add service ISP1R_svc_any 10.10.10.254 any *
2 show service ISP1R_svc_any
3     ISP1R_svc_any (10.10.10.254:*) - ANY
4     State: DOWN
5     Last state change was at Tue Aug 31 04:31:13 2010
6     Time since last state change: 2 days, 05:34:18.600
7     Server Name: 10.10.10.254
8     Server ID : 0   Monitor Threshold : 0
9     Max Conn: 0   Max Req: 0   Max Bandwidth: 0 kbits
10    Use Source IP: NO
11    Client Keepalive(CKA): NO
12    Access Down Service: NO
13    TCP Buffering(TCPB): YES
14    HTTP Compression(CMP): NO
15    Idle timeout: Client: 120 sec   Server: 120 sec
16    Client IP: DISABLED
17    Cacheable: NO
18    SC: OFF
19    SP: OFF
20    Down state flush: ENABLED
21
22 1)    Monitor Name: ping
23        State: UP   Weight: 1
24        Probes: 244705   Failed [Total: 0 Current: 0]
```

```
25          Last response: Success - ICMP echo reply received.  
26          Response Time: 1.322 millisec  
27 Done
```

To create services by using the configuration utility

Navigate to Traffic Management > Load Balancing > Services, and create a service.

To create services by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Services.
2. In the details pane, click Add.
3. In the Create Service dialog box, specify values for the following parameters:
 - Service Name*—name
 - Server—IP
 - Protocol*—serviceType (Select ANY from the drop-down list.)
 - Port*—port

A required parameter

1. Click Create.
2. Repeat Steps 2-4 to create another service.
3. Click Close.
4. In the Services pane, select the services that you just configured and verify that the settings displayed at the bottom of the screen are correct.

Configure an LLB virtual server and bind a service

After you create a service, create a virtual server and bind services to the virtual server. The default LB method of least connections is not supported in LLB. For information about changing the LB method, see [Configuring the LLB Method and Persistence](#).

To create a link load balancing virtual server and bind a service by using the command line interface

At the command prompt, type:

```

1 add lb vserver <name> <serviceType>
2
3 bind lb vserver < name> <serviceName>
4
5 show lb vserver < name>

```

Example:

```

1 add lb vserver LLB-vip any
2 bind lb vserver LLB-vip ISP1R_svc_any
3 sh lb vserver LLB-vip
4     LLB-vip (0.0.0.0:0) - ANY    Type: ADDRESS
5     State: DOWN
6     Last state change was at Thu Sep  2 10:51:32 2010
7     Time since last state change: 0 days, 17:51:46.770
8     Effective State: DOWN
9     Client Idle Timeout: 120 sec
10    Down state flush: ENABLED
11    Disable Primary Vserver On Down : DISABLED
12    No. of Bound Services :  1 (Total)      0 (Active)
13    Configured Method: ROUNDROBIN
14    Mode: IP
15    Persistence: NONE
16    Connection Failover: DISABLED
17
18 1) ISP1R_svc_any (10.10.10.254: *) - ANY State: DOWN    Weight: 1
19 Done

```

To create a link load balancing virtual server and bind a service by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and create a virtual server for link load balancing. Specify **ANY** in the **Protocol** field.
2. In the **IP Address Type** drop-down list, select the desired option. Select **Non Addressable** to create a virtual server that is not directly accessible.
3. Under the **Services** tab, in the **Active** column, select the check box for the service that you want to bind to the virtual server.

Configure the LLB method and persistence

By default, the NetScaler appliance uses the least connections method to select the service for redirecting each client request, but you should set the LLB method to one of the supported methods. You can also configure persistence, so that different transmissions from the same client are directed to the same server.

To configure the LLB method and/or persistence by using the command line interface

At the command prompt, type the following command:

```
1 set lb vserver <name> -lbMethod <lbMethod> -persistenceType <
   persistenceType>
2
3 show lb vserver <name>
```

Example:

```
1 set lb vserver LLB-vip -lbmethod ROUNDROBIN -persistencetype SOURCEIP
2
3 show lb vserver LLB-vip
4     LLB-vip (0.0.0.0:0) - ANY      Type: ADDRESS
5     State: DOWN
6     Last state change was at Fri Sep  3 04:46:48 2010
7     Time since last state change: 0 days, 00:52:21.200
8     Effective State: DOWN
9     Client Idle Timeout: 120 sec
10    Down state flush: ENABLED
11    Disable Primary Vserver On Down : DISABLED
12    No. of Bound Services : 0 (Total)      0 (Active)
13    Configured Method: ROUNDROBIN
14    Mode: IP
15    Persistence: SOURCEIP
16    Persistence Mask: 255.255.255.255      Persistence v6MaskLength:
17    128 Persistence Timeout: 2 min
     Connection Failover: DISABLED
```

To configure the link load balancing method and/or persistence by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Virtual Servers and select the virtual server for which you want to configure the load balancing method and/or persistence settings.
2. In the **Advanced Settings** section, select Method and configure the load balancing method.
3. In the **Advanced Settings** section, select **Persistence** and configure the persistence parameters.

Configure an LLB route

After configuring the IPv4 or IPv6 services, virtual servers, LLB methods, and persistence, you configure an IPv4 or IPv6 LLB route for the network specifying the LLB virtual server as the gateway. A route is a collection of links that are load balanced. Requests are sent to the LLB virtual server IP address that acts as the gateway for all outbound traffic and selects the router based on the LLB method configured.

To configure an IPv4 LLB route by using the command line interface

At the command prompt, type:

```
1 add lb route <network> <netmask> <gatewayName>
2
3 show lb route [<network> <netmask>]
```

Example:

```
1 add lb route 0.0.0.0 0.0.0.0 LLB-vip
2 show lb route 0.0.0.0 0.0.0.0
3      Network          Netmask          Gateway/VIP          Flags
4      -----          -
5 1)  0.0.0.0          0.0.0.0          LLB-vip              UP
```

To configure an IPv6 LLB route by using the command line interface

At the command prompt, type:

```
1 add lb route6 <network> <gatewayName>
2
3 show lb route6
```

Example:

```
1 add lb route6 ::/0 llb_vs show lb route6 Network VIP Flags -----
      ----- 1) ::/0 llb_vs UP
```

To configure an LLB route by using the configuration utility

Navigate to System > Network > Routes, and select **LLB**, and configure the LLB route.

Note: Select LLBV6 to configure an IPV6 route.

To configure an LLB route by using the configuration utility


1. Navigate to System > Network > Routes.
2. In the details pane, select one of the following:
 - Click LLB to configure an IPv4 route.
 - Click LLBV6 to configure an IPV6 route.
3. In the Create LB Route or Create LB IPV6 Routedialog box, set the following parameters:
 - Network*

- Netmask*—Required for IPV4 routes.
 - Gateway Name*—gatewayName
- *A required parameter

4. Click Create, and then click Close. The route that you just created appears on the LLB or the LLB6 tab in the Routes pane.

The following diagram shows a basic LLB setup. A service is configured for each of the two links (ISPs) and PING monitors are bound by default to these services. A link is selected based on the LLB method configured.

Figure 1. Basic LLB Setup

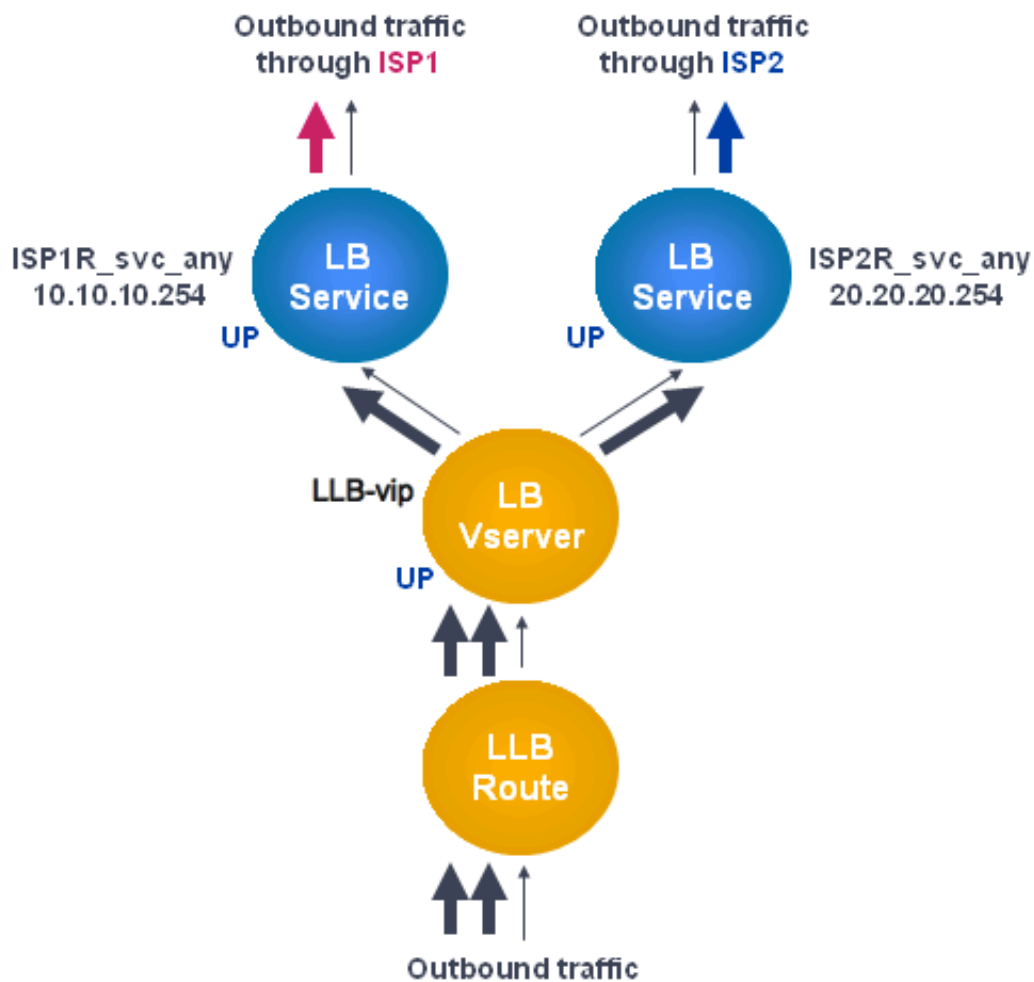

Note

If your Internet service provider has provided an IPv6 address, replace the IPv4 service with an

IPv6 service in the above figure.

Create and bind a transparent monitor

You create a transparent monitor to monitor the health of upstream devices, such as routers. You can then bind the transparent monitor to services. The default PING monitor monitors the connectivity only between the NetScaler appliance and the upstream device. The transparent monitor monitors all the devices existing in the path from the appliance to the device that owns the destination IP address specified in the monitor. If a transparent monitor is not configured and the status of the router is UP but one of the next hop devices from that router is down, the appliance includes the router while performing load balancing and forwards the packet to the router. However, the packet is not delivered to the final destination because one of the next hop devices is down. By binding a transparent monitor, if any of the devices (including the router) are down, the service is marked as DOWN and the router is not included when the appliance performs link load balancing.

To create a transparent monitor by using the command line interface

At the command prompt, type:

```
1 add lb monitor <monitorName> <type> -destIP <ip_addr|*> -transparent
  YES
2
3 show lb monitor [<monitorName>]
```

Example:

```
1 add lb monitor monitor-1 PING -destIP 10.10.10.11 -transparent YES
2 > show lb monitor monitor-1
3 1) Name.....: monitor-1 Type.....:      PING   State.....:
   ENABLED
4 Standard parameters:
5   Interval.....:          5 sec   Retries.....:
   3
6   Response timeout.:      2 sec   Down time.....:
   30 sec
7   Reverse.....:          NO     Transparent.....:
   YES
8   Secure.....:          NO     LRTM.....:
   ENABLED
9   Action.....:   Not applicable   Deviation.....:
   0 sec
10  Destination IP...:      10.10.10.11
11  Destination port.:   Bound service
12  Iptunnel.....:          NO
13  TOS.....:          NO     TOS ID.....:
```

14	SNMP Alert Retries:	0	Success Retries...
		1	
15	Failure Retries...	0	

To create a transparent monitor by using the configuration utility

Navigate to Traffic Management > Load Balancing > Monitors and configure a transparent monitor.

To create a transparent monitor by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Monitors.
2. In the Monitors pane, click Add.
3. In the Create Monitor dialog box, set the following parameters:
 - Name*
 - Type*
 - Destination IP
 - Transparent

*A required parameter
4. Click Create, and then click Close.
5. In the Monitors pane, select the monitor that you just configured and verify that the settings displayed in the Details pane are correct.

To bind a monitor to a service by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Services.
2. On the **Monitors** tab, under **Available**, select the monitor that you want to bind to the service, and then click **Add**.

To bind a monitor to a service by using the command line interface

At the command prompt, type:

```
1 bind lb monitor <monitorName> <serviceName>
2
3 show service <name>
```

Example:

```
1 bind lb monitor monitor-HTTP-1 ISP1R_svc_any
2 Done
3 > show service ISP1R_svc_any
4     ISP1R_svc_any (10.10.10.254:*) - ANY
5     State: UP
6     Last state change was at Thu Sep  2 10:51:07 2010
7     Time since last state change: 0 days, 18:41:55.130
8     Server Name: 10.10.10.254
9     Server ID : 0   Monitor Threshold : 0
10    Max Conn: 0     Max Req: 0       Max Bandwidth: 0 kbits
11    Use Source IP: NO
12    Client Keepalive(CKA): NO
13    Access Down Service: NO
14    TCP Buffering(TCPB): YES
15    HTTP Compression(CMP): NO
16    Idle timeout: Client: 120 sec   Server: 120 sec
17    Client IP: DISABLED
18    Cacheable: NO
19    SC: OFF
20    SP: OFF
21    Down state flush: ENABLED
22
23 1)    Monitor Name: monitor-HTTP-1
24       State: UP Weight: 1
25       Probes: 1256     Failed [Total: 0 Current: 0]
26       Last response: Success - ICMP echo reply received.
27       Response Time: 1.322 millisec
28 Done
```

To bind a monitor to a service by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Services.
2. In the details pane, select a service to which you want to bind a monitor, and then click Open.
3. In the Configure Service dialog box, on the Monitors tab, under Available, select the monitor that you want to bind to the service, and then click Add.
4. Click OK.
5. In the Services pane, select the service that you just configured and verify that the settings displayed in the Details pane are correct.


Configure RNAT with LLB

May 2, 2023

You can configure an LLB setup for reverse network address translation (RNAT) for outbound traffic. It

ensures that the return network traffic for a specific flow is routed through the same path. First configure basic LLB, as described in [Configuring a Basic LLB Setup](#), and then configure RNAT as described in [Configure RNAT](#). Then enable “use subnet IP (USNIP)” mode.

In the following diagram, the NetScaler appliance uses LLB to route outbound traffic to different links. During the RNAT operation, the ADC appliance replaces the source IP addresses of the outbound traffic with the public NAT IP address (198.141.23.1) to route the traffic through ISP-1. Similarly, the ADC appliance replaces the source IP addresses with 198.140.23.1 to route the traffic through ISP-2.

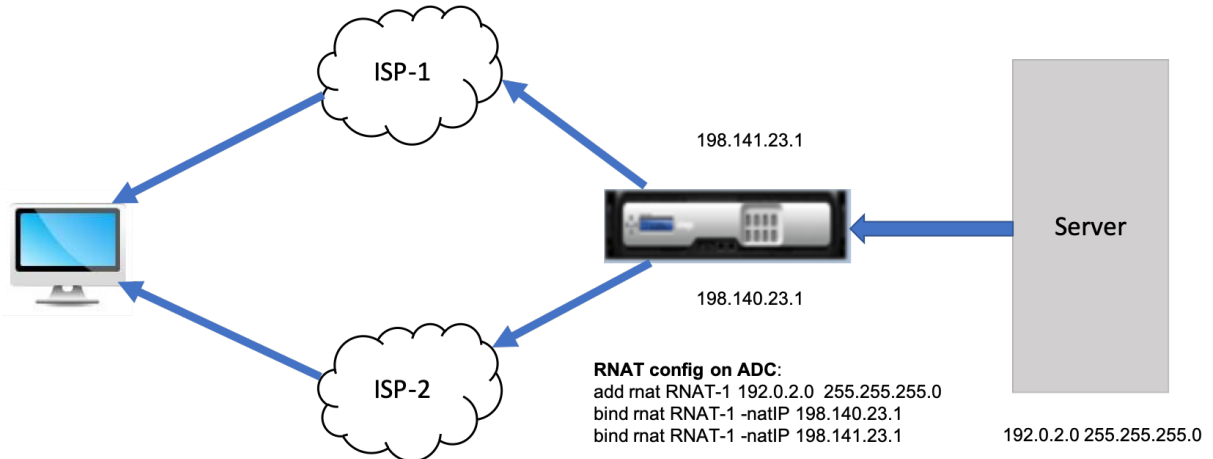

To add SNIPs for ISP routers by using the CLI

At the command prompt, type:

```

1 add NS IP <subnet of first ISP in the IP router> <subnet mask> -type
  SNIP
2
3 add NS IP <subnet of second ISP in the IP router> <subnet mask> -type
  SNIP
    
```

Example:

```

1 add ns ip 198.140.23.1 255.255.255.0 -type snip
2
3 add ns ip 198.141.23.1 255.255.255.0 -type snip
    
```

To configure RNAT by using the CLI

At the command prompt, type:

```

1 add rnat <name> (<network> | (<aclname> [-redirectPort <port>]))
2
3 bind rnat <name> <natIP>@ ...
4
    
```

```
5 show rnat <name>
```

Example:

```
1 add rnat RNAT-1 192.0.2.0 255.255.255.0
2 bind rnat RNAT-1 -natIP 198.140.23.1
3 bind rnat RNAT-1 -natIP 198.141.23.1
4
5 > show rnat RNAT-1
6     1) RNAT Name: RNAT-1      Network: 192.0.2.0      Netmask:
7         255.255.255.0      Traffic Domain: 0
8         UseProxyPort: ENABLED
9         NatIP: 198.140.23.1
10        NatIP: 198.141.23.1
```

To configure RNAT by using the GUI

1. Navigate to **System > Network > NATs**.
2. On the **RNAT** tab, click **Configure RNAT**.
3. Specify the network on which to perform RNAT.

Note

You can also configure RNAT by using Access Control Lists (ACLs). Refer [Configuring RNAT](#) for details.

To enable Use Subnet IP mode by using the CLI

At the command prompt, type:

```
1 enable ns mode USNIP
2
3 show ns mode
```

Example:

```
1 enable ns mode USNIP
2
3 show ns mode
4     Mode                Acronym        Status
5     -----            -
6     1) Fast Ramp        FR              ON
7     2) ...
8     8) Use Subnet IP    USNIP          ON
9     9) ...
```


To enable Use Subnet IP mode by using the GUI

1. Navigate to **System > Settings** and, under **Modes and Features**, click **Configure Modes**.
2. In the **Configure Modes** dialog box, select **Use Subnet IP**, and then click **OK**.


Configure a backup route

May 2, 2023

To prevent disruption in services when the primary route is down, you can configure a backup route. Once the backup route is configured, the NetScaler appliance automatically uses it when the primary route fails. First create a primary virtual server as described in [Configuring an LLB Virtual Server and Binding a Service](#). To configure a backup route, create a secondary virtual server similar to a primary virtual server and then designate this virtual server as a backup virtual server (route).

In the following diagram, **Router-vip** is the primary virtual server, and **Backup_Router-vip** is the secondary virtual server designated as the backup virtual server.


Figure 1. Backup Route Setup

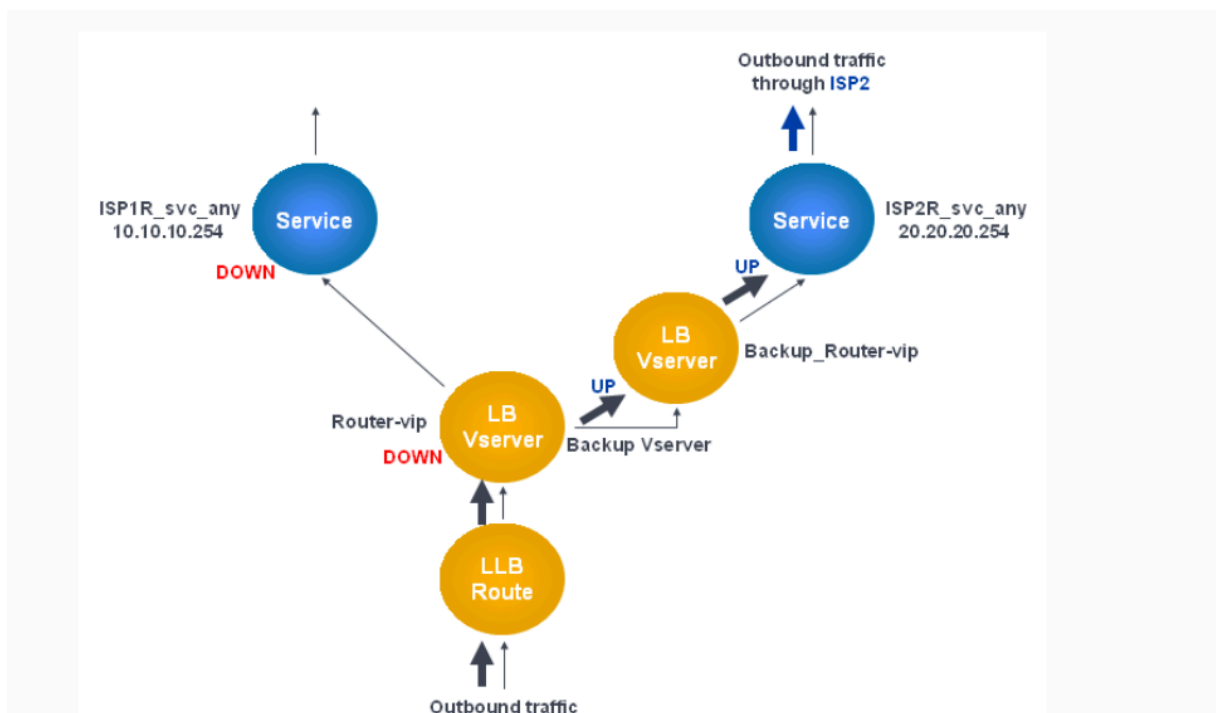

Note: If your ISP has provided an IPv6 address, replace the IPv4 service with an IPv6 service in the preceding figure.

By default, all traffic is sent through the primary route. However, when the primary route fails, all traffic is diverted to the backup route as shown in the following diagram.

Figure 2. Back up Routing in Operation

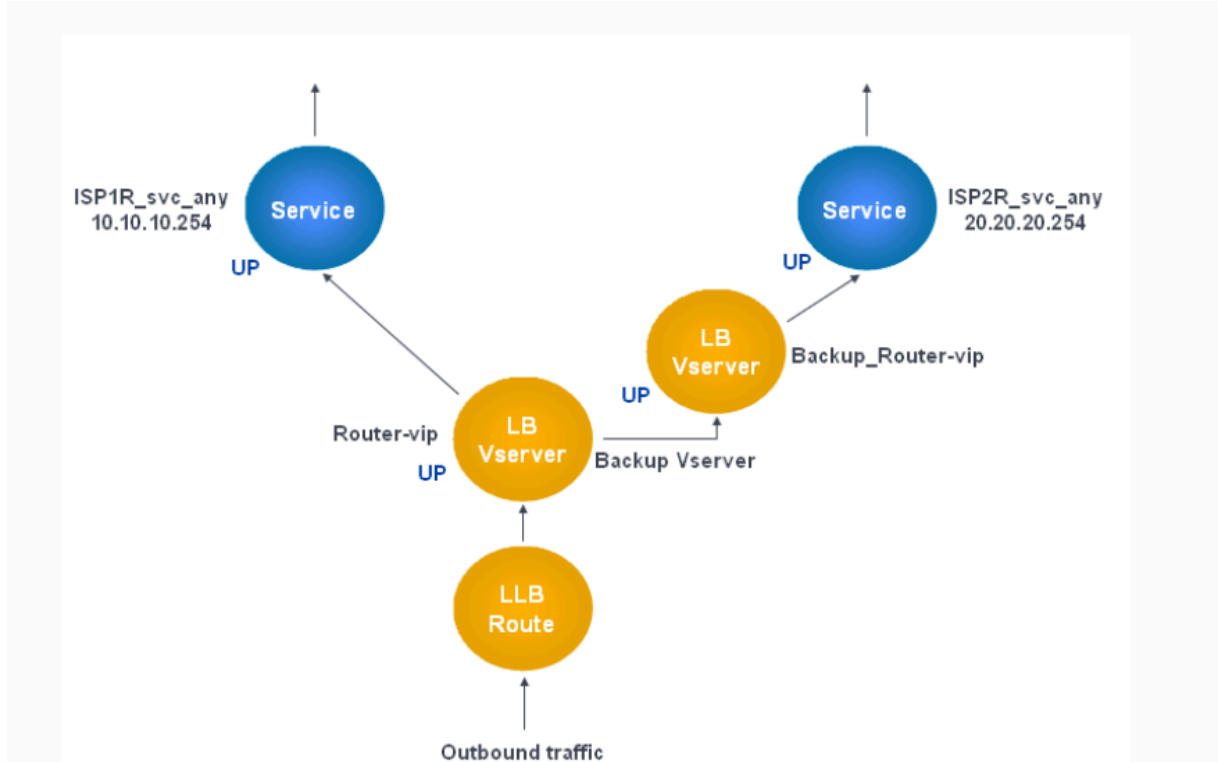

Note: If your ISP has provided an IPv6 address, replace the IPv4 service with an IPv6 service in the preceding figure.

To set the secondary virtual server as the backup virtual server by using the command line interface

At the command prompt, type:

```
1 set lb vserver <name> -backupVserver <string>
```

Example:

```
1 set lb vserver Router-vip -backupVServer Backup_Router-vip
2 > show lb vserver Router-vip
3 Router-vip (0.0.0.0:0) - ANY Type: ADDRESS
4 State: UP
5 Last state change was at Fri Sep 3 04:46:48 2010
6 Time since last state change: 0 days, 03:09:45.600
7 Effective State: UP
8 Client Idle Timeout: 120 sec
9 Down state flush: ENABLED
```

```
10      Disable Primary Vserver On Down : DISABLED
11      No. of Bound Services : 1 (Total)      1 (Active)
12      Configured Method: ROUNDROBIN
13      Mode: IP
14      Persistence: DESTIP      Persistence Mask: 255.255.255.255
           Persistence v6MaskLength: 128      Persistence Timeout: 2
           min
15      Backup: Router2-vip
16      Connection Failover: DISABLED
17      Done
```

To set the secondary virtual server as the backup virtual server by using the configuration utility


1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and select the secondary virtual server for which you want to configure the backup virtual server.
2. In the **Load Balancing Virtual Server** dialog box, under **Advanced**, select **Protection**.
3. In the **Backup Virtual Server** drop-down list, select the secondary backup virtual server, and then click **OK**.

Resilient LLB deployment scenario

January 7, 2021

In the following diagram, there are two networks: 30.30.30.0 and 30.30.31.0. Link load balancing is configured based on the destination IP address. Two routes are configured with gateways **Router1-vip** and **Router2-vip**, respectively. **Router1-vip** is configured as a backup to **Router2-vip** and the opposite way. All traffic with the destination IP specified as 30.30.30.30 is sent through **Router1-vip** and traffic with the destination IP specified as 30.30.31.31 is sent through **Router2-vip**.


Figure 1. Resilient LLB Deployment Setup

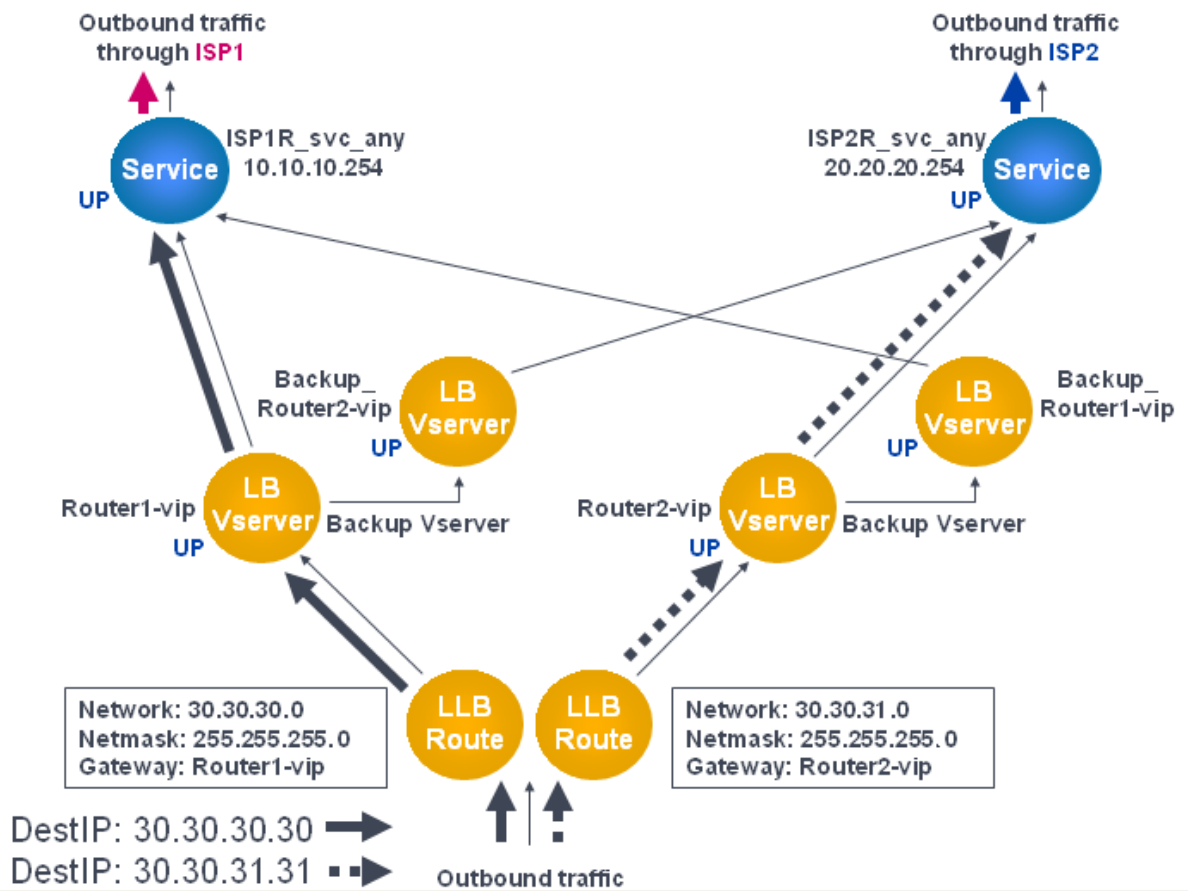

Note: If your ISP has provided an IPv6 address, replace the IPv4 service with an IPv6 service in the preceding figure.

However, if any one of the gateways (**Router1-vip** or **Router2-vip**) is DOWN, traffic is routed through the backup router. In the following diagram, **Router1-vip** for ISP1 is DOWN, so all traffic with the destination IP specified as 30.30.30.30 is also sent through ISP2.

Figure 2. Resilient LLB Deployment Scenario

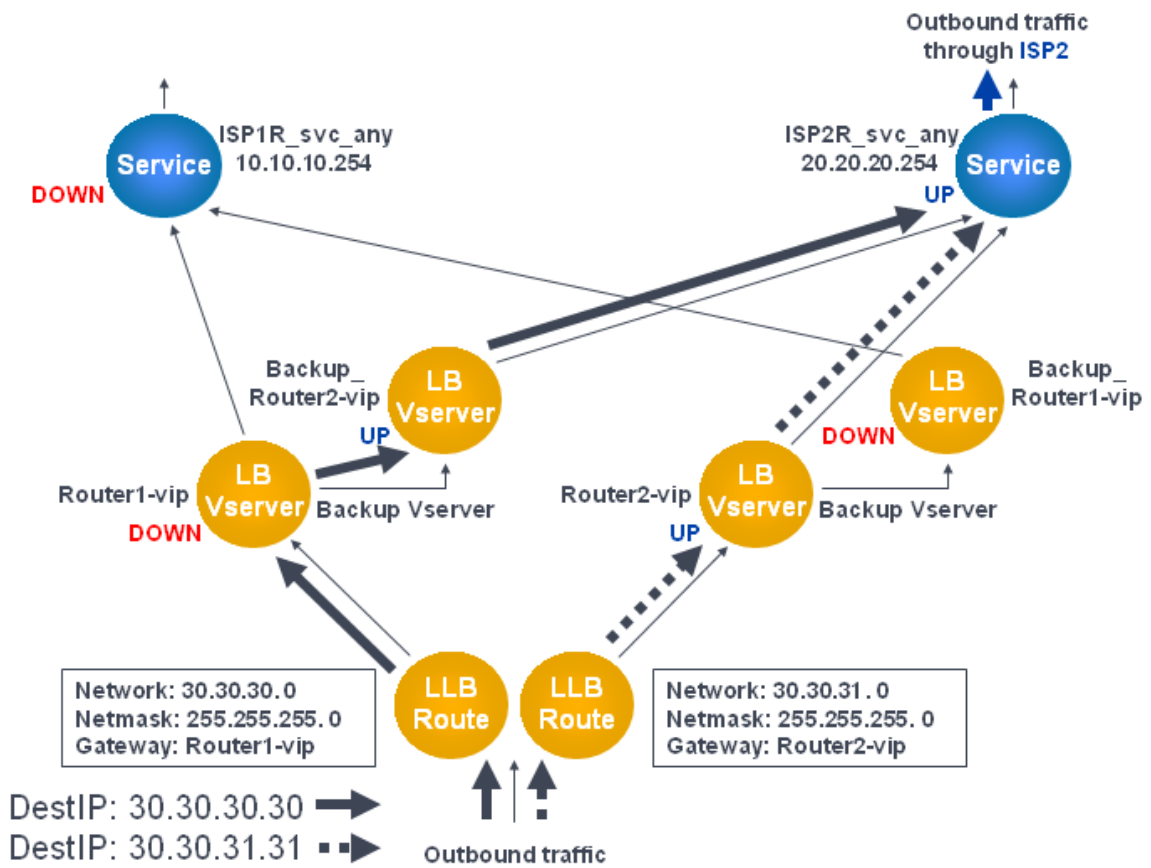

Note: If your ISP has provided an IPv6 address, replace the IPv4 service with an IPv6 service in the preceding figure.

Monitor an LLB setup

May 2, 2023

After the configuration is up and running, you can view the statistics for each service and virtual server to check for possible problems.

View the statistics of a virtual server

To evaluate the performance of virtual servers or to troubleshoot problems, you can display details of the virtual servers configured on the NetScaler appliance. You can display a summary of statistics for all the virtual servers. You can also specify the name of a virtual server to display the statistics only for that virtual server. You can display the following details:

- Name

- IP address
- Port
- Protocol
- State of the virtual server
- Rate of requests received
- [Rate of hits](#)

Display virtual server statistics by using the CLI

To display a summary of the statistics for all the virtual servers currently configured on the NetScaler, or for a single virtual server, at the command prompt, type:

```
1 stat lb vserver -detail] [<name>]
```

Example:

```
1 stat lb vserver -detail
2 Virtual Server(s) Summary
3
4      vsvrIP  port  Protocol  State  Req/s
5      Hits/s
6 One          *    80      HTTP     UP     5/s
7          0/s
8 Two          *    0       TCP     DOWN   0/s
9          0/s
10 Three       * 2598    TCP     DOWN   0/s
11          0/s
12 dnsVirtualNS 10.102.29.90 53      DNS     DOWN   0/s
13          0/s
14 BRVSRV       10.10.1.1   80      HTTP     DOWN   0/s
15          0/s
16 LBVIP        10.102.29.66 80      HTTP     UP     0/s
17          0/s
18 Done
```

Display virtual server statistics by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers > Statistics**.
2. If you want to display the statistics for only one virtual server, in the details pane, select the virtual server, and click Statistics.

View the statistics of a service

You can view the rate of requests, responses, request bytes, response bytes, current client connections, requests in the surge queue, current server connections, and so forth using the service statistics.

View the statistics of a service by using the CLI

At the command prompt, type:

```
1 stat service <name>
```

Example:

```
1 stat service Service-HTTP-1
```

View the statistics of a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services > Statistics**.
2. If you want to display the statistics for only one service, select the service, and click Statistics.

Load Balancing

May 2, 2023

The load balancing feature distributes user requests for webpages and other protected applications across multiple servers that all host (or mirror) the same content. You use load balancing primarily to manage user requests to heavily used applications, preventing poor performance and outages and ensuring that users can access your protected applications. Load balancing also provides fault tolerance. When one server that hosts a protected application becomes unavailable, the feature distributes user requests to the other servers that host the same application.

You can configure the load balancing feature to;

- Distribute all requests for a specific protected website, application, or resource between two or more identically configured servers.
- Use any of several different algorithms to determine which server must receive each incoming user request, basing the decision on different factors, such as which server has the fewest current user connections or which server has the lightest load.

The load balancing feature is a core feature of the NetScaler appliance. Most users first set up a working basic configuration and then customize various settings, including persistence for connections. In addition, you can configure features for protecting the configuration against failure, managing client traffic, managing and monitoring servers, and managing a large scale deployment.

How load balancing works


May 2, 2023

In a basic load balancing setup, clients send their requests to the IP address of a virtual server configured on the NetScaler appliance. The virtual server distributes them to the load-balanced application servers according to a preset pattern, called the load balancing algorithm. Sometimes, you might want to assign the load balancing virtual server a wildcard address instead of a specific IP address. For instructions about specifying a global HTTP port on the appliance, see **Global HTTP Ports**.

Load balancing basics

A load balancing setup includes a load-balancing virtual server and multiple load-balanced application servers. The virtual server receives incoming client requests, uses the load balancing algorithm to select an application server, and forwards the requests to the selected application server. The following conceptual drawing illustrates a typical load balancing deployment. Another variation involves assigning a global HTTP port.

Figure 1. Load Balancing Architecture

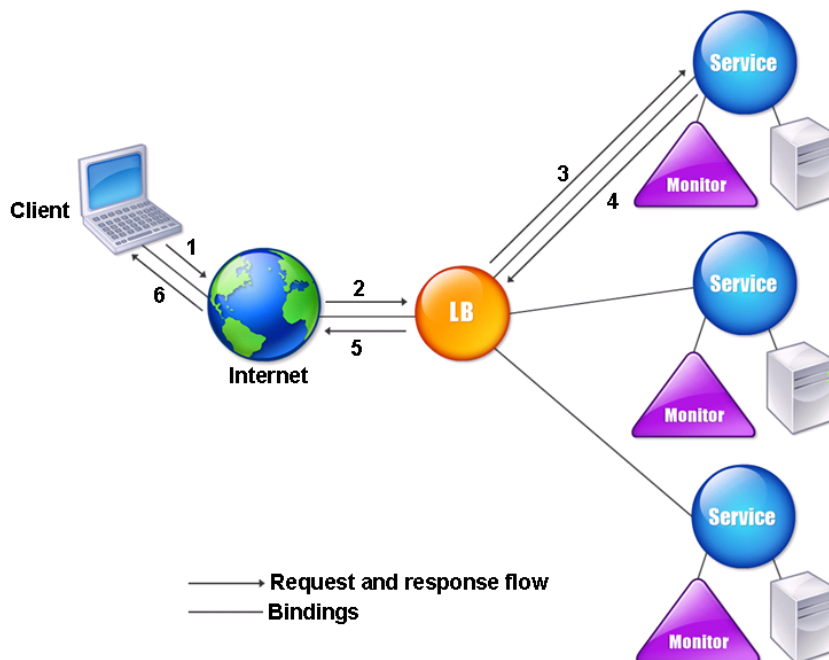

The load balancing virtual server can use several algorithms (or methods) to determine how to distribute load among the load-balanced servers that it manages. The default load balancing method is the least connection method, in which the NetScaler appliance forwards each incoming client connection to whichever load-balanced application server currently has the fewest active user connections.

The entities that you configure in a typical NetScaler load balancing setup are:

- **Load balancing virtual server.** The IP address, port, and protocol combination to which a client sends connection requests for a particular load-balanced website or application. If the application is accessible from the Internet, the virtual server IP (VIP) address is a public IP address. If the application is accessible only from the LAN or WAN, the VIP is usually a private (ICANN non-routable) IP address.
- **Service.** The IP address, port, and protocol combination used to route requests to a specific load-balanced application server. A service can be a logical representation of the application server itself, or of an application running on a server that hosts multiple applications. After creating a service, you bind it to a load balancing virtual server.
- **Server object.** A virtual entity that enables you to assign a name to a physical server instead of identifying the server by its IP address. If you create a server object, you can specify its name instead of the server's IP address when you create a service. Otherwise, you must specify the server's IP address when you create a service, and the IP address becomes the name of the server.
- **Monitor.** An entity on the NetScaler appliance that tracks a service and ensures that it is operating correctly. The monitor periodically probes (or performs a health check on) each service to which you assign it. If the service does not respond within the time specified by the time-out, and a specified number of health checks fail, that service is marked DOWN. The NetScaler appliance then skips that service when performing load balancing, until the issues that caused the service to quit responding are fixed.

The virtual server, services, and load balanced application servers in a load balancing setup can use either Internet Protocol version 4 (IPv4) or Internet Protocol version 6 (IPv6) IP addresses. You can mix IPv4 and IPv6 addresses in a single load balancing setup.


For variations in the load balancing setup, see the following use cases:

- [Configuring Load Balancing in Direct Server Return Mode](#)
- [Configuring LINUX Servers in DSR Mode](#)
- [Configuring DSR Mode When Using TOS](#)
- [Configuring Load Balancing in DSR Mode by Using IP Over IP](#)
- [Configuring Load Balancing in One-arm Mode](#)
- [Configuring Load Balancing in the Inline Mode](#)
- [Load Balancing of Intrusion Detection System Servers](#)
- [Load balance remote desktop protocol servers](#)

Understanding the topology

In a load balancing setup, the load balancing server is logically located between the client and the server farm, and manages traffic flow to the servers in the server farm. On the NetScaler appliance, the application servers are represented by virtual entities called services. The following diagram shows the topology of a basic load balancing configuration.

Figure 2. Basic Load Balancing Topology

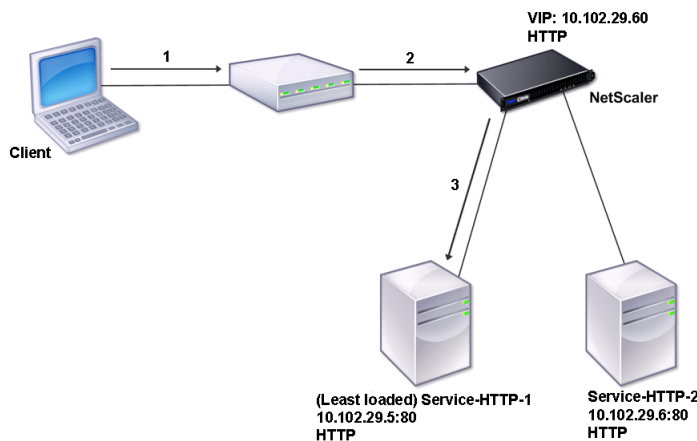


In the diagram, load balancing is used to manage traffic flow to the servers. The virtual server selects the service and assigns it to serve client requests. Consider a scenario where the services Service-HTTP-1 and Service-HTTP-2 are created and bound to the virtual server named Vserver-LB-1. Vserver-LB-1 forwards the client request to either Service-HTTP-1 or Service-HTTP-2. The NetScaler appliance uses the least connection load balancing method to select the service for each request. The following table lists the names and values of the basic entities that must be configured on the appliance.

Entity	Name	IPAddress	Port	Protocol
Virtual server	Vserver-LB-1	10.102.29.60	80	HTTP
Services	Service-HTTP-1	10.102.29.5	80	HTTP
	Service-HTTP-2	10.102.29.6	80	HTTP
Monitors	Default	None	None	None

The following diagram shows the load balancing sample values and mandatory parameters that are described in the preceding table.

Figure 3. Load Balancing Entity Model

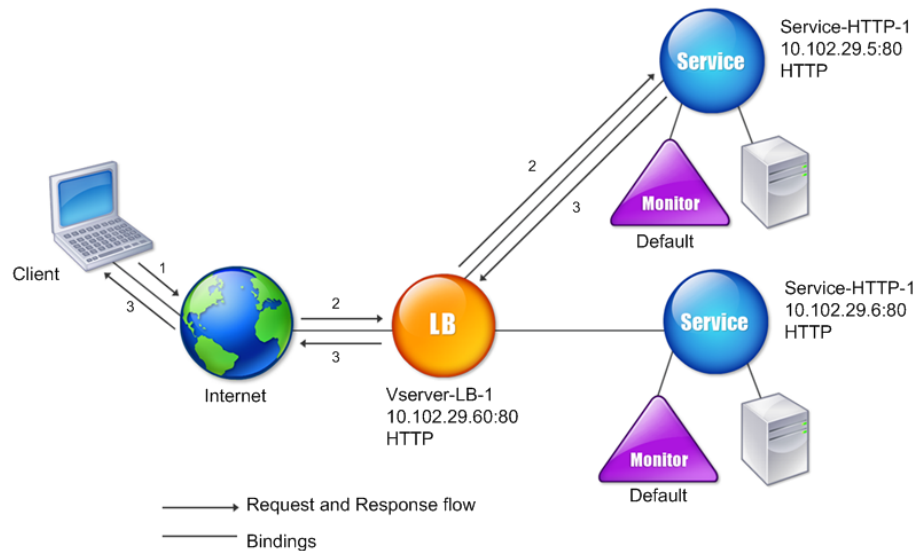

Use of wildcards instead of IP addresses and ports

Sometimes you might need to use a wildcard for the IP address or the port of a virtual server or for the port of a service. The following cases might require using a wildcard:

- If the NetScaler appliance is configured as a transparent pass through, which must accept all traffic that is sent to it regardless of the IP or port to which it is sent.
- If one or more services listen on ports that are not well known.
- If one or more services, over time, change the ports that they listen on.
- If you reach the limit for the number of IP addresses and ports that you can configure on a single NetScaler appliance.
- If you want to create virtual servers that listen for all traffic on a specific virtual LAN.

When a wildcard-configured virtual server or service receives traffic, the NetScaler appliance determines the actual IP address or port and creates records for the service and associated load balanced application server. These dynamically created records are called dynamically learned server and service records.

For example, a firewall load balancing configuration can use wildcards for both the IP address and port. If you bind a wildcard TCP service to this type of load balancing virtual server, the virtual server receives and processes all TCP traffic that does not match any other service or virtual server.

The following table describes some of the different types of wildcard configurations and when each must be used.

IP	Port	Protocol	Description
*	*	TCP	A general wildcard virtual server that accepts traffic sent to any IP address and port on the NetScaler appliance. When using a wildcard virtual server, the appliance dynamically learns the IP and port of each service and creates the necessary records as it processes traffic.
*	*	TCP	A firewall load balancing virtual server. You can bind firewall services to this virtual server, and the NetScaler appliance passes traffic through the firewall to the destination.

IP	Port	Protocol	Description
IP Address	*	TCP, UDP, and ANY	A virtual server that accepts all traffic that is sent to the specified IP address, regardless of the port. You must explicitly bind to this type of virtual server the services to which it will redirect traffic. It does not learn them dynamically.
*	port	SSL, SSL_TCP	A virtual server that accepts all traffic sent to any IP address on a specific port. Used for global transparent SSL offloading. All SSL, HTTP, and TCP processing that usually is performed for a service of the same protocol type is applied to traffic that is directed to this specific port. The appliance uses the port to dynamically learn the IP of the service it must use. If – cleartext is not specified, the NetScaler appliance uses end-to-end SSL.

IP	Port	Protocol	Description
*	port	Not applicable	All other virtual servers that can accept traffic to the port. You do not bind services to these virtual servers. The NetScaler appliance learns them dynamically.

Note: If you have configured your NetScaler appliance as a transparent pass through that uses global (wildcard) ports, you might want to turn on Edge mode.

For more information, see “[Configuring Edge Mode](#).”

The NetScaler appliance attempts to locate virtual servers and services by first attempting an exact match. If none is found, it continues to search for a match based on wildcards, in the following order:

1. Specific IP address and specific port number
2. Specific IP address and a * (wildcard) port
3. • (wildcard) IP address and a specific port
4. • (wildcard) IP address and a * (wildcard) port

If the appliance is unable to select a virtual server by IP address or port number, it searches for a virtual server based on the protocol used in the request, in the following order:

1. HTTP
2. TCP
3. ANY

Configuring global HTTP ports

You do not configure services or virtual servers for a global HTTP port. Instead, you configure a specific port by using the `set ns param` command. After configuring this port, the NetScaler appliance accepts all traffic that matches the port number, and processes it as HTTP traffic, dynamically learning and creating services for that traffic.

You can configure more than one port number as a global HTTP port. If you are specifying more than one port number in a single `set ns param` command, separate the port numbers by a single white space. If one or more ports have already been specified as global HTTP ports, and you want to add

one or more ports without removing the ports that are currently configured, you must specify all the port numbers, current and new, in the command. Before you add port numbers, use the `show ns param` command to view the ports that are currently configured.

To configure a global HTTP port by using the command line interface

At the command prompt, type the following commands to configure a global HTTP port and verify the configuration:

```
1 set ns param -httpPort <port>
2
3 show ns param
```

Example 1: Configuring a port as a global HTTP port In this example, port 80 is configured as a global HTTP port.

```
1 set ns param -httpPort 80
2 Done
3 show ns param
4     Global configuration settings:
5         HTTP port(s): 80
6         Max connections: 0
7         Max requests per connection: 0
8         Client IP insertion: DISABLED
9         Cookie version: 0
10        Persistence Cookie Secure Flag: ENABLED
11        ...
12        ...
```

Example 2: Adding ports when one or more global HTTP ports are already configured** In this example, port 8888 is added to the global HTTP port list. Port 80 is already configured as a global HTTP port.

```
1 > show ns param
2     Global configuration settings:
3         HTTP port(s): 80
4         Max connections: 0
5         Max requests per connection: 0
6         Client IP insertion: DISABLED
7         Cookie version: 0
8         Persistence Cookie Secure Flag: ENABLED
9         Min Path MTU: 576
10        ...
11        ...
12 Done
13 > set ns param -httpPort 80 8888
14 Done
```

```
15 > show ns param
16
17     Global configuration settings:
18         HTTP port(s): 80,8888
19         Max connections: 0
20         Max requests per connection: 0
21         Client IP insertion: DISABLED
22         Cookie version: 0
23         Persistence Cookie Secure Flag: ENABLED
24         Min Path MTU: 576
25
26     ...
27     ...
28 Done
29 >
```

To configure a global HTTP port by using the configuration utility

1. Navigate to **System > Settings > Change HTTP Parameters**, and then add an HTTP port number.

Set up basic load balancing

August 1, 2024

Before configuring your initial load balancing setup, enable the load balancing feature. Then begin by creating at least one service for each server in the load balancing group. With the services configured, you are ready to create a load balancing virtual server, and bind each service to the virtual server. That completes the initial setup. Before proceeding with further configuration, verify your configuration to make sure that each element was configured properly and is operating as expected.

Enable load balancing

You can configure load balancing entities such as services and virtual servers when the load balancing feature is disabled, but they will not function until you enable the feature.

To enable load balancing by using the CLI

At the command prompt, type the following command to enable load balancing and verify the configuration:

- enable ns feature LB
- show ns feature

Example

```

1    > enable ns feature LoadBalancing
2
3    Done
4
5    > show ns feature
6
7
8
9          Feature                               Acronym           Status
10         -----                               -
11
12
13    1)    Web Logging                            WL                OFF
14
15    2)    Surge Protection                       SP                ON
16
17    3)    Load Balancing LB ON
18
19    .
20
21    .
22
23    .
24
25    24)   NetScaler Push                         push              OFF
26
27    Done

```

To enable load balancing by using the GUI

Navigate to **System > Settings** and, in **Configure Basic Features**, select **Load Balancing**.

Configure a server object

Create an entry for your server on the NetScaler appliance. The NetScaler appliance supports IP address based servers and domain-based servers. If you create an IP address based server, you can specify the name of the server instead of its IP address when you create a service. For information about setting up DNS for a domain-based server, see [Domain Name System](#).

To create a server object by using the CLI

At the command prompt, type:

```
1 add server <name>@ <IPAddress>@ | <domain>
```

Example for adding IP address-based name server:

```
1 add server web_serv 10.102.27.150
```

Example for adding domain-based server:

```
1 add server web_serv test.com
```

To create a server object by using the GUI

Navigate to **Traffic Management > Load Balancing > Servers**, and add a server object.

Configure services

After you enable the load balancing feature, you must create at least one service for each application server that is to be included in your load balancing setup. The services that you configure provide the connections between the NetScaler appliance and the load balanced servers. Each service has a name and specifies an IP address, a port, and the type of data that is served.

If you create a service without first creating a server object, the IP address of the service is also the name of the server that hosts the service. If you prefer to identify servers by name rather than IP address, you can create server objects and then specify a server's name instead of its IP address when you create a service.

When you create a service that uses UDP as the transport layer protocol, a ping monitor is automatically bound to the service. A ping monitor is the most basic of the built-in monitors. When you create a service that uses TCP as the transport layer protocol, a TCP_default monitor is automatically bound to the service. When you develop a strategy for managing your load balancing setup, you might decide to bind a different type of monitor, or multiple monitors, to the service.

Create a Service

Before you create a service, you need to understand the different service types and how each is used. The following list describes the types of services supported on the NetScaler appliance.

- **HTTP**

Used for load-balanced servers that accept HTTP traffic, such as standard websites and web applications. The HTTP service type enables the NetScaler appliance to provide compression, content filtering, caching, and client keep-alive support for your Layer 7 web servers. This service type also supports virtual server IP port insertion, redirect port rewriting, Web 2.0 Push, and URL redirection support.

Because HTTP is a TCP-based application protocol, you can also use the TCP service type for web servers. If you do so, however, the NetScaler appliance is able to perform only Layer 4 load balancing. It cannot provide any of the Layer 7 supports described earlier.

- **SSL**

Used for servers that accept HTTPS traffic, such as ecommerce websites and shopping cart applications. The SSL service type enables the NetScaler appliance to encrypt and decrypt SSL traffic (perform SSL offloading) for your secure web applications. It also supports HTTP persistence, content switching, rewrite, virtual server IP port insertion, Web 2.0 Push, and URL redirection.

You can also use the SSL_BRIDGE, SSL_TCP, or TCP service types. If you do so, however, the appliance performs only Layer 4 load balancing. It cannot provide SSL offloading or any of the Layer 7 supports described.

- **FTP**

Used for servers that accept FTP traffic. The FTP service type enables the NetScaler appliance to support specific details of the FTP protocol.

You can also use TCP or ANY service type for FTP servers.

- **TCP**

Used for servers that accept many different types of TCP traffic, or that accept a type of TCP traffic for which a more specific type of service is not available.

You can also use the ANY service type for these servers.

- **SSL_TCP**

Used for servers that accept non-HTTP-based SSL traffic, to support SSL offloading.

You can also use the TCP service type for these services. If you do so, the NetScaler appliance performs both the Layer 4 load balancing and SSL offloading.

- **UDP**

Used for servers that accept UDP traffic. You can also use the ANY service type.

- **SSL_BRIDGE**

Used for servers that accept SSL traffic when you do not want the NetScaler appliance to perform SSL offloading. Alternatively, you can use the SSL_TCP service type.

- **NNTP**

Used for servers that accept Network News Transfer Protocol (NNTP) traffic, typically Usenet sites.

- **DNS**

Used for servers that accept DNS traffic, typically nameservers. With the DNS service type, the NetScaler appliance validates the packet format of each DNS request and response. It can also cache DNS responses. You can apply DNS policies to DNS services.

You can also use the UDP service type for these services. If you do, however, the NetScaler appliance can only perform Layer 4 load balancing. It cannot provide support for DNS-specific features.

- **ANY**

Used for servers that accept any type of TCP, UDP, or ICMP traffic. The ANY parameter is used primarily with firewall load balancing and link load balancing.

- **SIP-UDP**

Used for servers that accept UDP-based Session Initiation Protocol (SIP) traffic. SIP initiates, manages, and terminates multimedia communications sessions, and has emerged as the standard for Internet telephony (VoIP).

You can also use the UDP service type for these services. If you do, however, the NetScaler appliance performs only Layer 4 load balancing. It cannot provide support for SIP-specific features.

- **DNS-TCP**

Used for servers that accept DNS traffic, where the NetScaler appliance acts as a proxy for TCP traffic sent to DNS servers. With services of the DNS-TCP service type, the NetScaler appliance validates the packet format of each DNS request and response and can cache DNS responses, as with the DNS service type.

You can also use the TCP service type for these services. If you do, however, the NetScaler appliance only performs Layer 4 load balancing of external DNS name servers. It cannot provide support for any DNS-specific features.

- **RTSP**

Used for servers that accept Real Time Streaming Protocol (RTSP) traffic. RTSP provides delivery of multimedia and other streaming data. Select this type to support audio, video, and other types of streamed media.

You can also use the TCP service type for these services. If you do, however, the NetScaler appliance performs only Layer 4 load balancing. It cannot parse the RTSP stream or provide support for RTSPID persistence or RTSP NAT.

- **DHCPRA**

Used for servers that accept DHCP traffic. The DHCPRA service type can be used to relay DHCP requests and responses between VLANs.

- **DIAMETER**

Used for load balancing Diameter traffic among multiple Diameter servers. Diameter uses message-based load balancing.

- **SSL_DIAMETER**

Used for load balancing Diameter traffic over SSL.

Services are designated as DISABLED until the NetScaler appliance connects to the associated load-balanced server and verifies that it is operational. At that point, the service is designated as ENABLED. Thereafter, the NetScaler appliance periodically monitors the status of the servers, and places any that fail to respond to monitoring probes (called health checks) back in the DISABLED state until they respond.

Note:

You can create a range of services from a single CLI command or the same dialog box. The names in the range vary by a number used as a suffix/prefix. For example, service1, service2, and so on. From the GUI, you can specify a range only in the last octet of the IP address, which is the fourth in case of an IPv4 address and the eighth in an IPv6 address. From the command line, you can specify the range in any octet of the IP address.

- **QUIC**

Used by load balancing servers that accept UDP based QUIC video traffic. The service enables the NetScaler appliance to optimize encrypted ABR video traffic over the UDP protocol.

- **DNS over TLS (DOT)**

Used for the servers that accept DNS traffic. With the DOT service type, NetScaler validates the packet format of each DNS request, encrypts it, and responds to the client. It can also cache the encrypted DNS responses.

To create a service by using the CLI

At the command prompt, type:

```
1 add service <name> <serverName> <serviceType> <port>
2
3 add service Service-HTTP-1 192.0.2.5 HTTP 80
```

To create a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. In the details pane, click **Add**.
3. In the Create Service dialog box, specify values for the following parameters:
 - Service Name—name
 - Server—serverName
 - Protocol—serviceType
 - Port—port
4. Click **Create**, and then click **Close**. The service you created appears in the Services pane.

Create a virtual Server

After you create your services, you must create a virtual server to accept traffic for the load balanced websites, applications, or servers. Once load balancing is configured, users connect to the load-balanced website, application, or server through the virtual server's IP address or FQDN.

Notes:

- Virtual server names prefixed with “app_” do not appear in the GUI though they are present in the ns.conf file and are displayed when you run the show command. However, virtual server names prefixed with “app” are displayed in the GUI.
- The virtual server is designated as DOWN until you bind the services that you created to it, and until the NetScaler connects to those services and verifies that they are operational. After the verification, the virtual server is designated as UP.
- If you want the virtual server to listen to all the ports, use a wildcard (*) character instead of the specific port.

Example: `add lb vserver v1 TCP 1.11.1.1 *`

To create a virtual server by using the CLI

At the command prompt, type:

```
1 add lb vserver <name> <serviceType> <ip> <port>
2
3 add lb vserver Vserver-LB-1 HTTP 10.102.29.60 80
```

To create a virtual server by using the GUI

Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and then create a virtual server.

Bind services to the virtual server

Note:

A service can be bound to a maximum of 500 virtual servers.

After you have created services and a virtual server, you must bind the services to the virtual server. Usually, services are bound to virtual servers of the same type, but you can bind certain types of services to certain different types of virtual servers, as shown below.

Virtual Server Type	Service Type	Comment
HTTP	SSL	You would normally bind an SSL service to an HTTP virtual server to do encryption.
SSL	HTTP	You would normally bind an HTTP service to an SSL virtual server to do SSL offloading.
SSL_TCP	TCP	You would normally bind a TCP service to an SSL_TCP virtual server to do SSL offloading for other TCP (SSL decryption without content awareness).

The state of the services bound to a virtual server determines the state of the virtual server: if all of the bound services are DOWN, the virtual server is marked DOWN, and if any of the bound services is UP or OUT OF SERVICE, the state of the virtual server is UP.

To bind a service to a load balancing virtual server by using the CLI

At the command prompt, type:

```
1 bind lb vserver <name> <serviceName>
2
3 bind lb vserver Vserver-LB-1 Service-HTTP-1
```

To bind a service to a load balancing virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and select a virtual server.
2. Click in the **Service** section, and select a service to bind.

Note: You can bind a service to multiple virtual servers.

Verify the configuration

After finishing your basic configuration, you can view the properties of each service and load balancing virtual server in your load balancing setup to verify that each is configured correctly. After the configuration is up and running, you can view the statistics for each service and load balancing virtual server to check for possible problems.

View the properties of a server object

You can view properties such as the name, state, and IP address of any server object in your NetScaler appliance configuration.

To view the properties of server objects by using the CLI At the command prompt, type:

```
1 show server <serverName>
2
3 show server server-1
```

To view the properties of server objects by using the GUI Navigate to **Traffic Management > Load Balancing > Servers**. The parameter values of the available servers appear in the details pane.

View the properties of a virtual server

You can view properties such as the name, state, effective state, IP address, port, protocol, method, and number of bound services for your virtual servers. If you have configured more than the basic load balancing settings, you can view the persistence settings for your virtual servers, any policies that are bound to them, and any cache redirection and content switching virtual servers that have been bound to the virtual servers.

To view the properties of a load balancing virtual server by using the CLI At the command prompt, type:

```
1 show lb vserver <name>
2
3 show lb vserver Vserver-LB-1
```

To view the properties of a load balancing virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, click a virtual server to display its properties at the bottom of the details pane.
3. To view the cache redirection and content switching virtual servers that are bound to this virtual server, click **Show CS/CR Bindings**.

View the properties of a service

You can view the name, state, IP address, port, protocol, maximum client connection, maximum requests per connection, and server type of the configured services, and use this information to troubleshoot any mistake in the service configuration.

To view the properties of services by using the CLI At the command prompt, type:

```
1 show service <name>
2
3 show service Service-HTTP-1
```

To view the properties of services by using the GUI Navigate to **Traffic Management > Load Balancing > Services**. The details of the available services appear on the Services pane.

View the bindings of a service

You can view the list of virtual servers to which the service is bound. The binding information also provides the name, IP address, port, and state of the virtual servers to which the services are bound. You can use the binding information to troubleshoot any problem with binding the services to virtual servers.

To view the bindings of a service by using the CLI At the command prompt, type:

```
1 show service bindings <name>
2
3 show service bindings Service-HTTP-1
```

To view the bindings of a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. In the details pane, select the service whose binding information you want to view.
3. In the **Action** tab, click **Show Bindings**.

View the statistics of a virtual server

To evaluate the performance of virtual servers or to troubleshoot problems, you can display details of the virtual servers configured on NetScaler. You can display a summary of statistics for all the virtual servers, or you can specify the name of a virtual server to display the statistics only for that virtual server. You can display the following details:

- Name
- IP address
- Port
- Protocol
- State of the virtual server
- Rate of requests received
- Rate of hits

To display virtual server statistics by using the CLI To display a summary of the statistics for all the virtual servers currently configured on the appliance, or for a single virtual server, at the command prompt, type:

```
1 stat lb vserver [`<name>`]
```

Example:

```
1 stat lb vserver server-1
```

The following figure displays a sample statistic.

To display virtual server statistics by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. If you want to display the statistics for only one virtual server, in the details pane, select the virtual server whose statistics you want to display.
3. In the details pane, click **Statistics**.

View the statistics of a service

You can view the rate of requests, responses, request bytes, response bytes, current client connections, requests in the surge queue, current server connections, and so forth using the service statistics.

To view the statistics of a service by using the CLI At the command prompt, type:

```
1 stat service <name>
```

Example:

```
1 stat service Service-HTTP-1
```

To view the statistics of a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. In the details pane, select the service whose statistics you want to view (for example, Service-HTTP-1).
3. Click **Statistics**. The statistics appear in a new window.

Load balance virtual server and service states

April 5, 2021


A load balancing virtual server that does not have a backup virtual server can take the following states, depending on the states of the services bound to it and whether it is administratively disabled:

- **UP:** At least one of the services bound to the virtual server is UP.
- **DOWN:** All the services bound to the virtual server are DOWN, or the load balancing feature is not enabled.

- **Out of Service (OFS):** If you administratively disable the virtual server, it enters the OFS state but its effective state is DOWN. Administrator can control the transitioning to the OFS state from the DOWN or UP state, or to the DOWN or UP state from the OFS state.

The state and effective state of a virtual server are the same if a backup virtual server is not configured. However, if a backup virtual server or a chain of backup virtual servers is configured, the effective state is derived from the states of the services that are bound to the primary virtual server and the backup virtual servers. If any of the backup virtual servers in the chain is UP, the effective state of the primary virtual server is UP, even if all the services bound to the primary virtual server are DOWN.

The following diagrams show the conditions under which a virtual server transitions from one state to another.

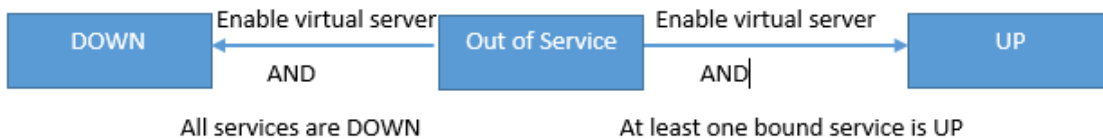

A service can take the following states:

- **UP:** If probes from all the monitors bound to the service are successful.
- **DOWN:** If monitoring probes to the service are not answered within the configured time limit.
- **OUT OF SERVICE:** If you administratively disable the service, or if you gracefully shut down the service and there are no active transactions to the service
- **GOING OUT OF SERVICE (TROFS):** If you administratively disable the service with delay, or gracefully shut down the service and there are active transactions to the service. For more in-

formation, see [Graceful Shut down of Services](#).


- **DOWN WHEN GOING OUT OF SERVICE (TROFS_DOWN)[[]]** A monitoring probe fails while the service is in the GOING OUT OF SERVICE state.




A service in the process of transitioning from UP to OFS is in the GOING OUT OF SERVICE state. A service transitioning from DOWN to OFS is in the DOWN WHEN GOING OUT OF SERVICE state. For example, if a service is DOWN and you disable it with delay, the service transitions to DOWN WHEN GOING OUT OF SERVICE and then to the OUT OF SERVICE state. If a service is UP and you disable it with delay, the service transitions to GOING OUT OF SERVICE. During this time, if a monitoring probe to the server fails, the service transitions to DOWN WHEN GOING OUT OF SERVICE and, after the delay time expires, enters the OFS state.

Note

You can configure spillover to a backup virtual server by setting the “healthThreshold” parameter to a non-zero positive value. Then, if a single service bound to the primary virtual server transitions to the DOWN WHEN GOING OUT OF SERVICE state and the health threshold is not reached, the primary virtual server is marked DOWN and new connections are directed to the backup virtual server.

The following diagrams show the conditions under which a service transitions from one state to another.

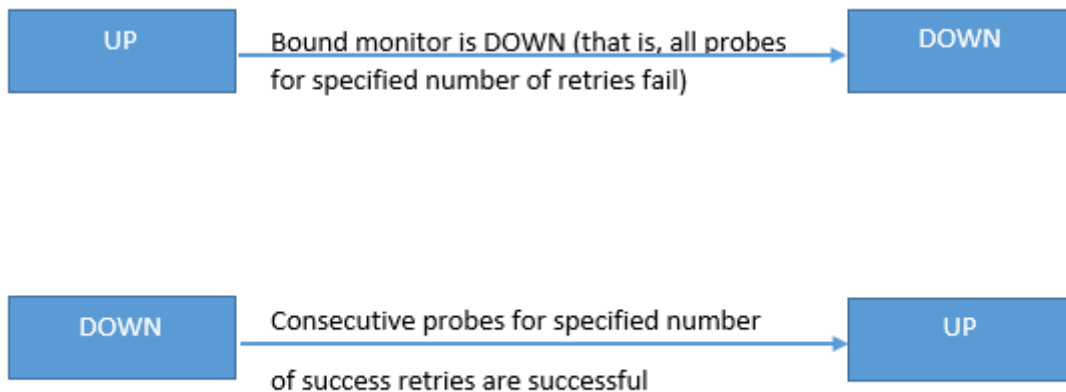

 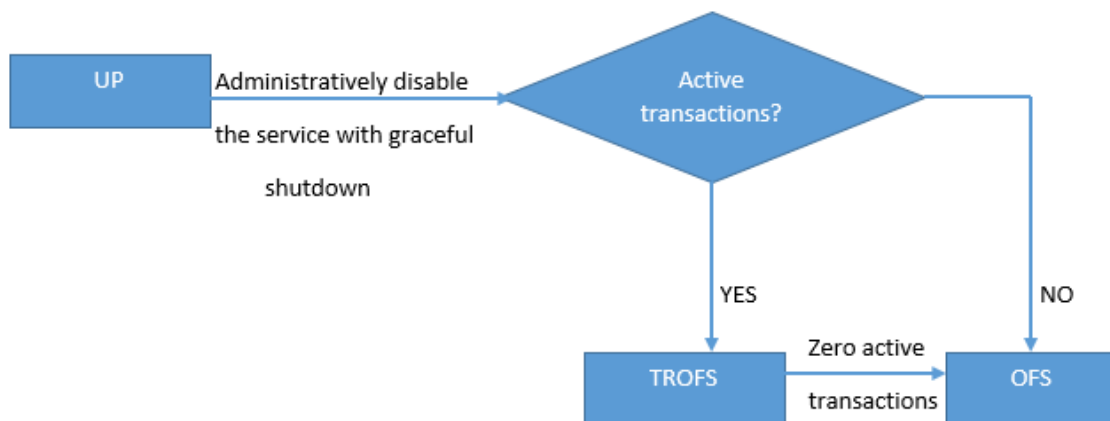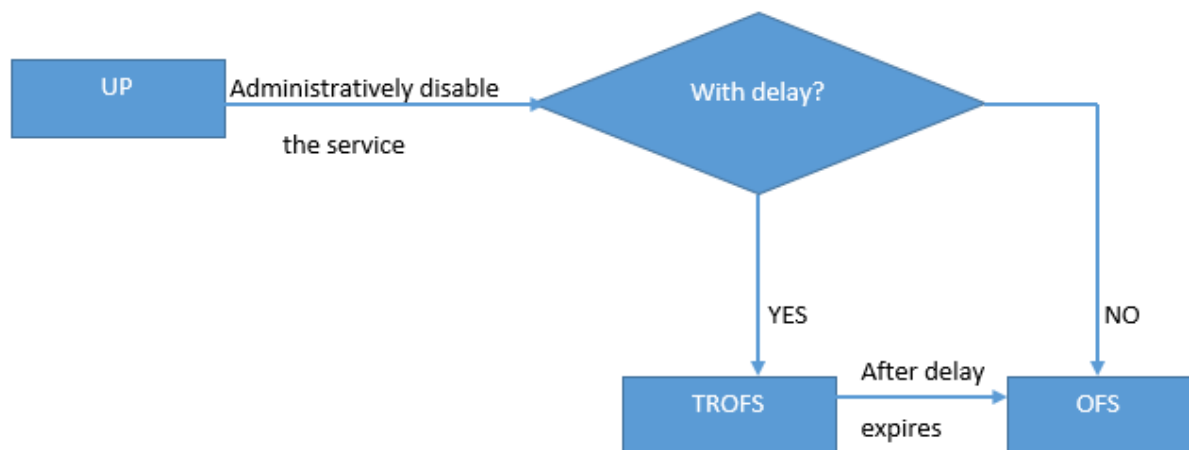

Support for load balancing profile

June 12, 2023

A load balancing configuration has many parameters, so setting the same parameters on several virtual servers can become tedious. From release 11.1, a load balancing (LB) profile makes this task

easier. You can now set load balancing parameters in a profile and associate this profile with virtual servers, instead of setting these parameters on each virtual server.

The following parameters are presently supported in an LB profile:

- `HTTPOnlyFlag`—Include the `HttpOnly` attribute in persistence cookies. The `HttpOnly` attribute limits the scope of a cookie to HTTP requests and helps mitigate the risk of cross-site scripting attacks.
- `UseSecuredPersistenceCookie`—Encrypt the persistence cookie values by using the SHA2 hash algorithm.
- `Cookiepassphrase`—Specify the passphrase used to generate a secured persistence cookie value.
- `DBS_LB`—Enable database specific load balancing for MySQL and MSSQL service types.
- `Cl_process_local`—Packets destined to a virtual server in a cluster are not steered. Enable the option for single packet request response mode or when the upstream device is performing a proper RSS for connection based distribution.
- `lbHashAlgorithm`—Specify the hashing algorithm to be used for the following hash-based load balancing methods:
 - URL hash method
 - Domain hash method
 - Destination IP hash method
 - Source IP hash method
 - Source IP Destination IP hash method
 - Source IP Source Port hash method
 - Call ID hash method
 - Token method

Possible values: DEFAULT, PRAC, JARH

Default value: DEFAULT

- `lbHashFingers`—Specify the number of fingers to be used in PRAC and JARH algorithms for hash-based LB methods. Increasing the number of fingers provides better distribution of traffic at the expense of additional memory.

Default value: 256

Minimum value: 1

Maximum value: 1024

- `proximityFromSelf`—Enable to use the Netscaler's loopback IP address instead of the client's IP address to fetch the closest server location for static proximity load balancing or GSLB decision.

Note

You can set DBS_LB and Cl_process_local parameters on a virtual server and in the profile. If you enable these parameters on a virtual server and then set a profile to this virtual server, the parameters appear as disabled in the output of the "`show lb vservers`" command for that virtual server. Check the profile to see the actual status of these parameters. In addition, if you set and then unset a profile to a virtual server, the parameters are set with default values for that virtual server.

To create an LB profile by using the CLI

At the command prompt, type:

```
1 add lb profile <lbprofilename> -dbsLb ( ENABLED | DISABLED ) -
  processLocal ( ENABLED | DISABLED ) -httpOnlyCookieFlag ( ENABLED |
  DISABLED ) -cookiePassphrase -useSecuredPersistenceCookie ( ENABLED |
  DISABLED ) -lbHashAlgorithm <lbHashAlgorithm> -lbHashFingers <
  positive_integer>- proximityFromSelf <NO/YES>
```

Example:

```
1 > sh lb profile p1
2 LB Profile name: p1
3 DBS LB : DISABLED Process Local: DISABLED
4 Persistence Cookie HttpOnly Flag: ENABLED
5 Use Encrypted Persistence Cookie: DISABLED
6 Proximity From Self: ENABLED
7 No of vservers bound: 0
8 Store MQTT clientid and username in transactional logs: NO
9 Hash LB algorithm used in LB decision: DEFAULT
10 Number of fingers for Hash LB algorithm: 256
11 Done
```

To create an LB profile by using the GUI

Navigate to **System > Profiles > LB Profile**, and add a profile.

To associate an LB profile with an LB virtual server by using the CLI

At the command prompt, type:

```
1 set lb vservers <name> -lbprofilename <string>
```

Example

```
1 set lbvserver lbvip1 -lbprofile p1
2
3 Done
4
5 sh lb vserver lbvip1
6
7 lbvip1 (203.0.113.1:80) - HTTP          Type: ADDRESS
8 State: UP
9 Last state change was at Wed May 25 12:36:20 2016
10 Time since last state change: 0 days, 00:01:26.140
11 Effective State: UP ARP:DISABLED
12 Client Idle Timeout: 180 sec
13 Down state flush: ENABLED
14 Disable Primary Vserver On Down : DISABLED
15 Appflow logging: ENABLED
16 Port Rewrite : DISABLED
17 No. of Bound Services : 2 (Total)      2 (Active)
18 Configured Method: LEASTCONNECTION    BackupMethod: ROUNDROBIN
19 Mode: IP
20 Persistence: NONE
21 Vserver IP and Port insertion: OFF
22 Push: DISABLED Push VServer:
23 Push Multi Clients: NO
24 Push Label Rule: none
25 L2Conn: OFF
26 Skip Persistency: None
27 Listen Policy: NONE
28 IcmpResponse: PASSIVE
29 RHlstate: PASSIVE
30 New Service Startup Request Rate: 0 PER_SECOND, Increment Interval: 0
31 Mac mode Retain Vlan: DISABLED
32 DBS_LB: DISABLED
33 Process Local: DISABLED
34 Traffic Domain: 0
35 LB Profile: p1
36 Done
```

To associate an LB profile with an LB virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select a virtual server, and click **Edit**.
3. In **Advanced Settings**, click **Profiles**.
4. In the **LB Profile** list, select the profile to associate with this virtual server.

To configure the Proximity from Self parameter in the load balancing profile by using the GUI

Configure the Proximity from Self parameter in the profile so that when the profile is attached to the entity the parameter is enabled for the entity.

1. Navigate to **System > Profile > LB Profile**.
2. Click **Add**.
3. Select **Proximity from Self**.
4. Click **OK**.

Load balancing algorithms

January 11, 2024

The load balancing algorithm defines the criteria that the NetScaler appliance uses to select the service to which to redirect each client request. Different load balancing algorithms use different criteria. For example, the least connection algorithm selects the service with the fewest active connections, while the round robin algorithm maintains a running queue of active services, distributes each connection to the next service in the queue, and then sends that service to the end of the queue.

Some load balancing algorithms are best suited to handling traffic on websites, others to managing traffic to DNS servers, and others to handling complex web applications used in e-commerce or on company LANs or WANs. The following table lists each load balancing algorithm that the NetScaler appliance supports, with a brief description of how each operates.

Name	Server selection based on
LEASTCONNECTION	Which service currently has the fewest client connections. This is the default load balancing algorithm.
ROUNDROBIN	Which service is at the top of a list of services. After that service is selected for a connection, it moves to the bottom of the list.
LEASTRESPONSETIME	Which load balanced server currently has the quickest response time.
URLHASH	A hash of the destination URL.
DOMAINHASH	A hash of the destination domain.
DESTINATIONIPHASH	A hash of the destination IP address.

Name	Server selection based on
SOURCEIPHASH	A hash of the source IP address.
SRCIPDESTIPHASH	A hash of the source and destination IP addresses.
CALLIDHASH	A hash of the call ID in the SIP header.
SRCIPSRCPORHASH	A hash of the client's IP address and port.
LEASTBANDWIDTH	Which service currently has the fewest bandwidth constraints.
LEASTPACKETS	Which service currently is receiving the fewest packets.
CUSTOMLOAD	Data from a load monitor.
TOKEN	The configured token.
LRTM	Fewest active connections and the lowest average response time.
Static Proximity	The service that best matches the proximity criteria.
Least Request	Which service currently has the fewest client request.

Depending on the protocol of the service that it is load balancing, the NetScaler appliance sets up each connection between client and server to last for a different time interval. This is called load balancing granularity, of which are three types: request-based, connection-based, and time-based granularity. The following table describes each type of granularity and when each is used.

Granularity	Types of Load Balanced Service	Specifies
Request -based	HTTP or HTTPS	A new service is chosen for each HTTP request, independent of TCP connections. As with all HTTP requests, after the Web server fulfills the request, the connection is closed.

Granularity	Types of Load Balanced Service	Specifies
Connection-based	TCP and TCP-based protocols other than HTTP	A service is chosen for every new TCP connection. The connection persists until terminated by either the service or the client.
Time-based	UDP and other IP protocols	A new service is chosen for each UDP packet. Upon selection of a service, a session is created between the service and a client for a specified period. When the time expires, the session is deleted and a new service is chosen for any additional packets, even if those packets come from the same client.

During startup of a virtual server, or whenever the state of a virtual server changes, the virtual server can initially use the round robin method to distribute the client requests among the physical servers. This type of distribution, referred to as *startup round robin*, helps prevent unnecessary load on a single server as the initial requests are served. After using the round robin method at the startup, the virtual server switches to the load balancing method specified on the virtual server.

The Startup RR Factor works in the following manner:

- If the Startup RR Factor is set to zero, the appliance switches to the specified load balancing method depending on the request rate.
- If the Startup RR Factor is any number other than zero, the appliance uses the round robin method for the specified number of requests before switching to the specified load balancing method.
- By default, the Startup RR Factor is set to zero.

Note: You cannot set the startup RR Factor for an individual virtual server. The value you specify applies to all the virtual servers on the NetScaler appliance.

To set the startup round-robin factor by using the CLI

At the command prompt, type:

```
set lb parameter -startupRRFactor <positive_integer>
```

Example

```
set lb parameter -startupRRFactor 25000
```

To set the startup round-robin factor by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Configure Load Balancing Parameters**, and set the Startup RR Factor.

Least connection method

October 9, 2024

When a virtual server is configured to use the least connection load balancing algorithm (or method), it selects the service with the fewest active connections. This is the default method, because, in most circumstances, it provides the best performance.

For TCP, HTTP, HTTPS, and SSL_TCP services, the NetScaler appliance includes the following connection types in its list of existing connections:

- **Active connections to a service.** Connections representing requests that a client has sent to the virtual server and that the virtual server has forwarded to a service. For HTTP and HTTPS services, active connections represent only those HTTP or HTTPS requests that have not yet received a response.
- **Waiting connections in the surge queue.** Any connections to the virtual server that are waiting in a surge queue and have not yet been forwarded to a service. Connections can build up in the surge queue at any time, for any of the following reasons:
 - Your services have connection limits, and all services in your load balancing configuration are at that limit.
 - The surge protection feature is configured and has been activated by a surge in requests to the virtual server.
 - The load-balanced server has reached an internal limit and therefore does not open any new connections. (For example, an Apache server's connection limit is reached.)

When a virtual server uses the least connection method, it considers the waiting connections as belonging to the specific service. Therefore, it does not open new connections to those services.

For UDP services, the connections that the least connection algorithm considers include all sessions between the client and a service. These sessions are logical, time-based entities. When the first UDP

packet in a session arrives, the NetScaler appliance creates a session between the source IP address and port and the destination IP address and port.


For Real-Time Streaming Protocol (RTSP) connections, the NetScaler appliance uses the number of active control connections to determine the lowest number of connections to an RTSP service.

The following example shows how a virtual server selects a service for load balancing by using the least connection method. Consider the following three services:

- Service-HTTP-1 is handling 3 active transactions.
- Service-HTTP-2 is handling 15 active transactions.
- Service-HTTP-3 is not handling any active transactions.

The following diagram illustrates how the NetScaler appliance forwards incoming requests when using the least connection method.

Figure 1. Mechanism of the Least Connections Load Balancing Method

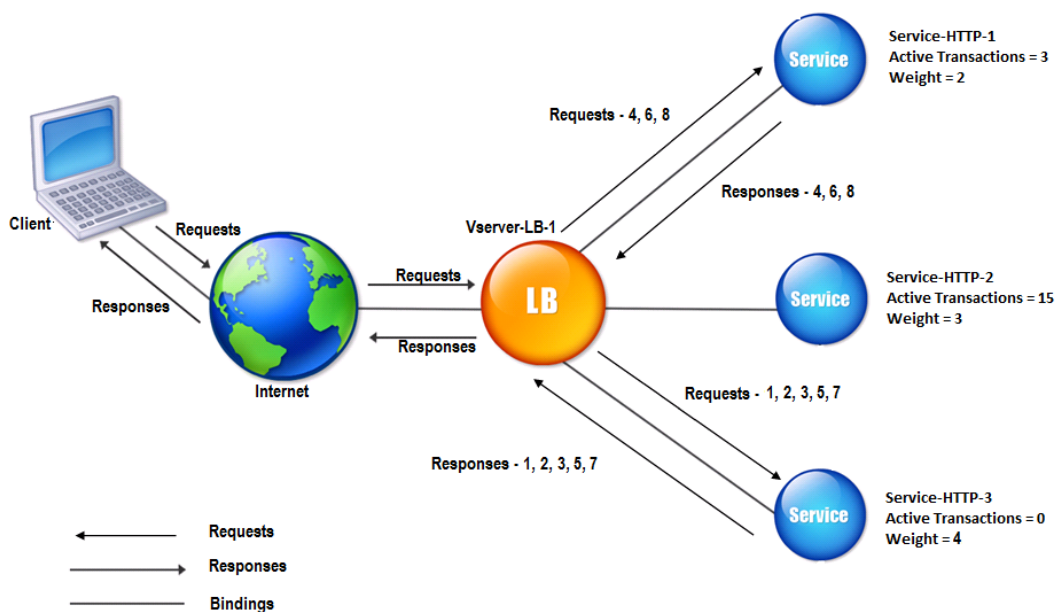

In this diagram, the virtual server selects the service for each incoming connection by choosing the server with the fewest active transactions.

Connections are forwarded as follows:

- Service-HTTP-3 receives the first request, because it is not handling any active transactions.

Note: The service with no active transaction is selected first.

- Service-HTTP-3 receives the second and third requests because the service has the next least number of active transactions.
- Service-HTTP-1 receives the fourth request because Service-HTTP-1 and Service-HTTP-3 have the same number of active transactions, the virtual server uses the round robin method to choose between them.
- Service-HTTP-3 receives the fifth request.
- Service-HTTP-1 receives the sixth request, and so on, until both Service-HTTP-1 and Service-HTTP-3 are handling the same number of requests as Service-HTTP-2. Then, the NetScaler appliance starts forwarding requests to Service-HTTP-2 when it is the least loaded service or its turn comes up in the round robin queue.

Note:

If connections to Service-HTTP-2 close, it might get new connections before each of the other two services has 15 active transactions.

The following table explains how connections are distributed in the three-service load balancing setup described earlier.

Incoming Connection	Service Selected	Current Number of Active Connections	Remarks
Request-1	Service-HTTP-3; (N = 0)	1	Service-HTTP-3 has the fewest active connections.
Request-2	Service-HTTP-3; (N = 1)	2	Service-HTTP-3 has the fewest active connections.
Request-3	Service-HTTP-3; (N = 2)	3	-
Request-4	Service-HTTP-1; (N = 3)	4	Service-HTTP-1 and Service-HTTP-3 have the same number of active connections.
Request-5	Service-HTTP-3; (N = 3)	4	Service-HTTP-1 and Service-HTTP-3 have the same number of active connections.
Request-6	Service-HTTP-1; (N = 4)	5	-
Request-7	Service-HTTP-3; (N = 4)	5	-
Request-8	Service-HTTP-1; (N = 5)	6	-

Service-HTTP-2 is selected for load balancing when it completes its active transactions and the current connections to it close, or when the other services (Service-HTTP-1 and Service-HTTP-3) have 15 or more connections each.

The NetScaler appliance can also use the least connection method when weights are assigned to services. It selects a service by using the value (Nw) of the following expression:

$$Nw = (\text{Number of active transactions}) * (10000 / \text{weight})$$

The following example shows how the NetScaler appliance selects a service for load balancing by using the least connection method when weights are assigned to services. In the preceding example, suppose Service-HTTP-1 is assigned a weight of 2, Service-HTTP-2 is assigned a weight of 3, and Service-HTTP-3 is assigned a weight of 4. Connections are forwarded as follows:

- Service-HTTP-3 receives the first because the service is not handling any active transactions.
 Note: If the services are not handling any active transactions, the NetScaler appliance uses the round robin method regardless of the weights assigned to each of the services.
- Service-HTTP-3 receives the second, third, fourth, fifth, and sixth requests because the service has the lowest Nw value.
- Service-HTTP-1 receives the seventh request. Because Service-HTTP-1 and Service-HTTP-3 now have the same Nw value, the appliance performs load balancing in a round robin manner. Therefore, Service-HTTP-3 receives the eighth request.

The following table explains how connections are distributed on the three-service load balancing setup that is described earlier.


Request Received	Service Selected	Current Nw (Number of active transactions) * (10000 / weight) value	Remarks
Request-1	Service-HTTP-3; (Nw = 0)	Nw = 2500	Service-HTTP-3 has the lowest Nw value.
Request-2	Service-HTTP-3; (Nw = 2500)	Nw = 5000	
Request-3	Service-HTTP-3; (Nw = 5000)	Nw = 7500	
Request-4	Service-HTTP-3; (Nw = 7500)	Nw = 10000	
Request-5	Service-HTTP-3; (Nw = 10000)	Nw = 12500	

Request Received	Service Selected	Current Nw (Number of active transactions) * (10000 / weight) value	Remarks
Request-6	Service-HTTP-3; (Nw = 12500)	Nw = 15000	
Request-7	Service-HTTP-1; (Nw = 15000)	Nw = 20000	Service-HTTP-1 and Service-HTTP-3 have the same Nw values
Request-8	Service-HTTP-3; (Nw = 15000)	Nw = 17500	

Service-HTTP-2 is selected for load balancing when it completes its active transactions or when the Nw value of other services (Service-HTTP-1 and Service-HTTP-3) is equal to 50000.

The following diagram illustrates how the NetScaler appliance uses the least connection method when weights are assigned to the services.

Figure 2. Mechanism of the Least Connections Load Balancing Method when Weights are Assigned

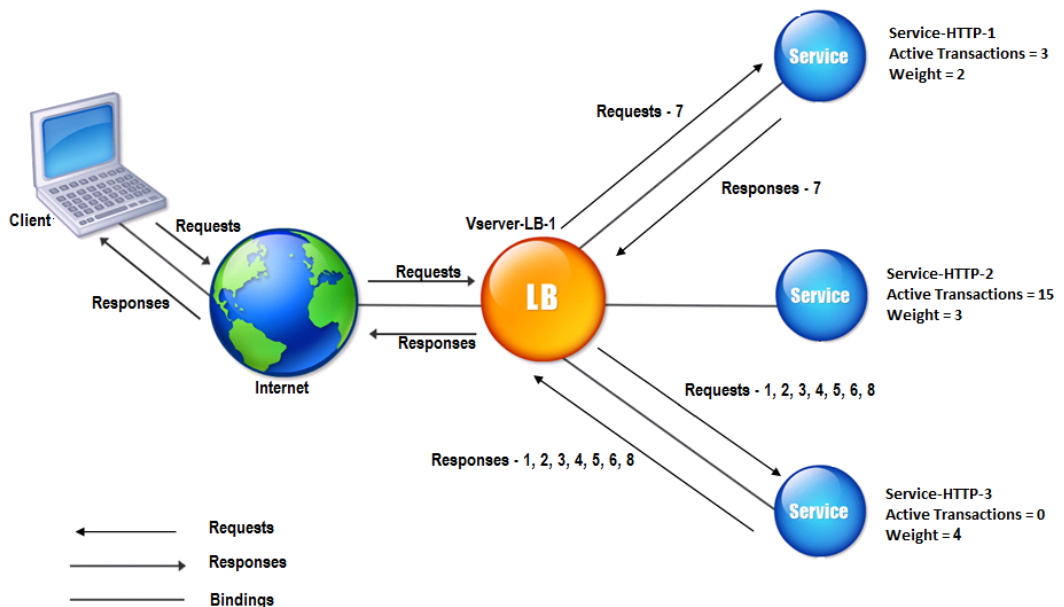

To configure the least connection method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).


Round robin method

May 2, 2023

When a load balancing virtual server is configured to use the round robin method, it continuously rotates a list of the services that are bound to it. When the virtual server receives a request, it assigns the connection to the first service in the list, and then moves that service to the bottom of the list.

The following diagram illustrates how the NetScaler appliance uses the round robin method with a load balancing setup that contains three load-balanced servers and their associated services.

Figure 1. How the Round Robin Load Balancing Method Works

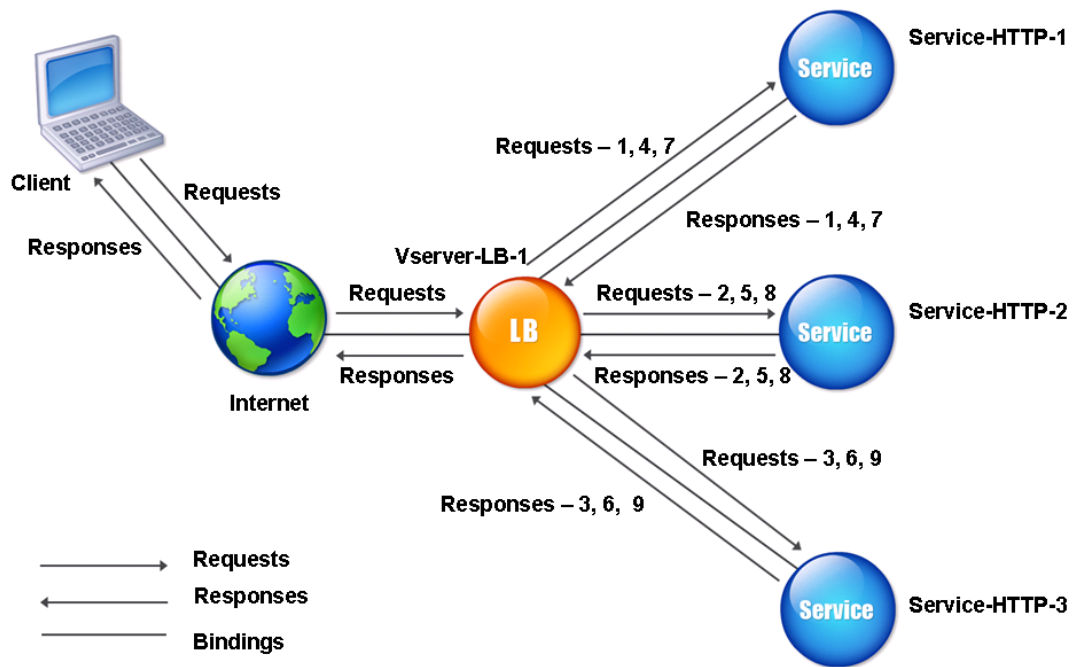

If you assign a different weight to each service, the NetScaler appliance performs the weighted round robin distribution of incoming connections. It does this by skipping the lower-weighted services at appropriate intervals.

For example, assume that you have a load balancing setup with three services. You set Service-HTTP-1 to a weight of 2, Service-HTTP-2 to a weight of 3, and Service-HTTP-3 to a weight of 4. The services are bound to Vserver-LB-1, which is configured to use the round robin method. With this setup, incoming requests are delivered as follows:

- Service-HTTP-1 receives the first request.
- Service-HTTP-2 receives the second request.
- Service-HTTP-3 receives the third request.
- Service-HTTP-1 receives the fourth request.
- Service-HTTP-2 receives the fifth request.
- Service-HTTP-3 receives the sixth request.
- Service-HTTP-2 receives the seventh request.
- Service-HTTP-3 receives both the eighth and the ninth requests.


Note:

You can also configure weights on services to prevent multiple services from using the same server and overloading the server.

A new cycle then begins, using the same pattern.

The following diagram illustrates the weighted round robin method.

Figure 2. How the Round Robin Load Balancing Method supports Weighted Services

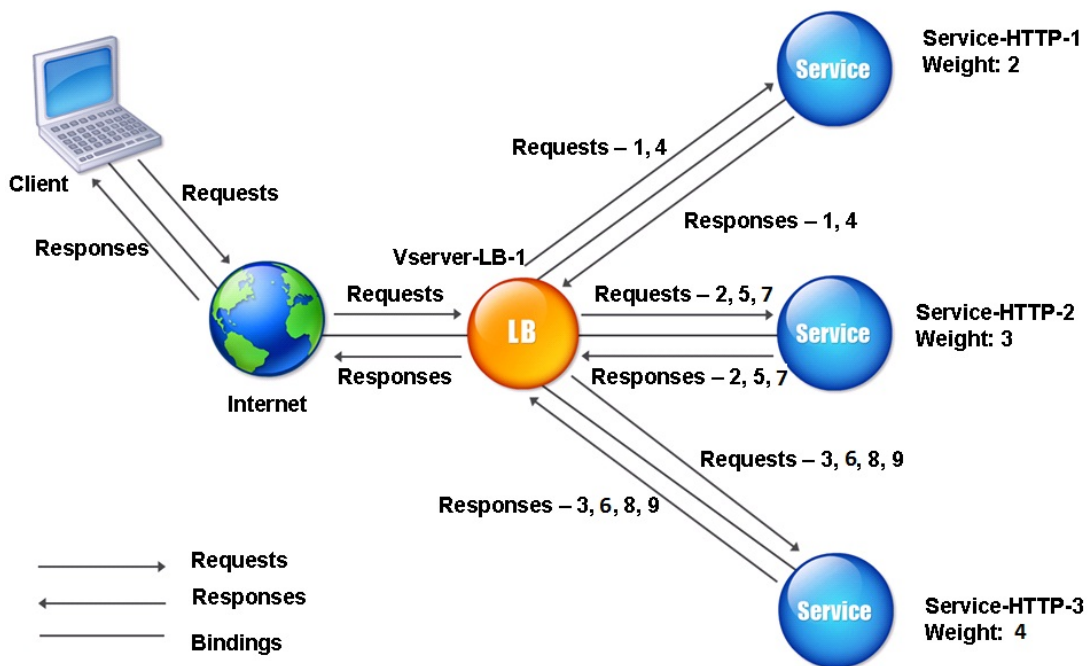

To configure the round robin method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

Least response time method

May 2, 2023


When the load balancing virtual server is configured to use the least response time method, it selects the service with the fewest active connections and the lowest average response time. You can configure this method for HTTP and Secure Sockets Layer (SSL) load balancing virtual servers only. The response time (also called Time to First Byte, or TTFB) is the time interval between sending a request packet to a service and receiving the first response packet from the service. The NetScaler appliance uses response code 200 to calculate TTFB.

The following example shows how a virtual server selects a service for load balancing by using the least response time method. Consider the following three services:

- Service-HTTP-1 is handling three active transactions and TTFB is two seconds.
- Service-HTTP-2 is handling seven active transactions and TTFB is one second.
- Service-HTTP-3 is not handling any active transactions and TTFB is two seconds.

The following diagram illustrates how the NetScaler appliance uses the least response time method to forward the connections.

Figure 1. How the Least Response Time Load Balancing Method Works

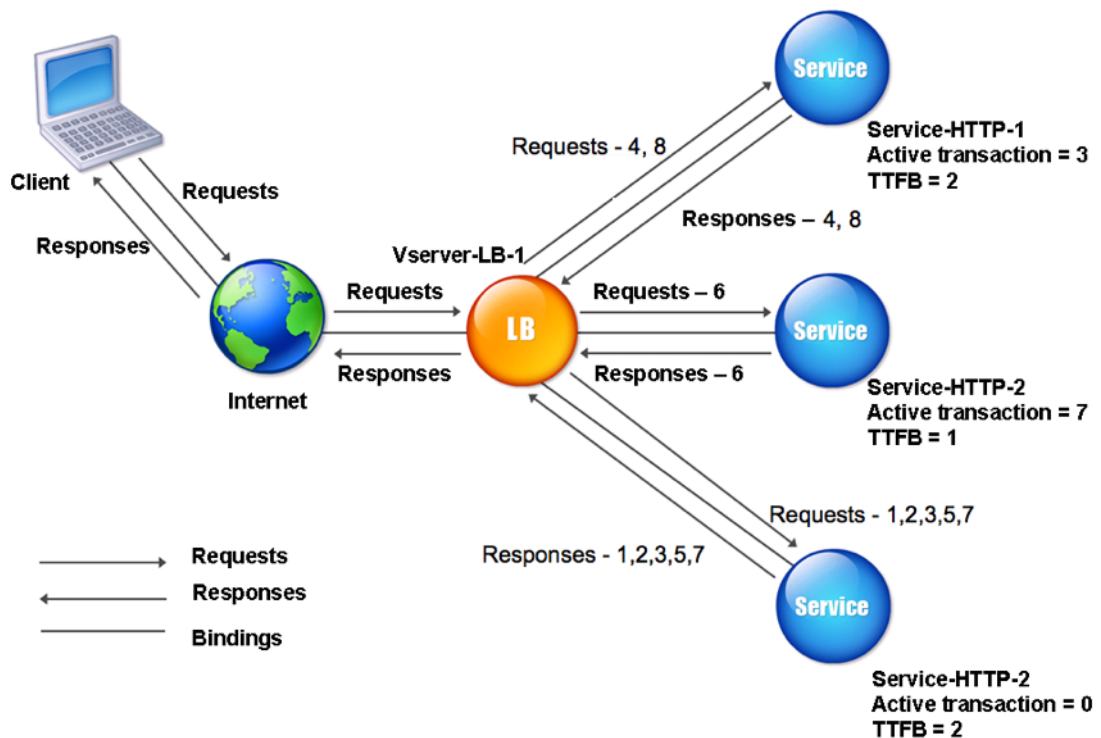

The virtual server selects a service by multiplying the number of active transactions by the TTFB for each service and then selecting the service with the lowest result. For the example shown above, the virtual server forwards requests as follows:

- Service-HTTP-3 receives the first request, because the service is not handling any active transactions.
- Service-HTTP-3 also receives the second and third requests, because the result is the lowest of the three services.
- Service-HTTP-1 receives the fourth request. Since Service-HTTP-1 and Service-HTTP-3 have the same result, the NetScaler appliance chooses between them by applying the Round Robin method.
- Service-HTTP-3 receives the fifth request.
- Service-HTTP-2 receives the sixth request, because at this point it has the lowest result.
- Because Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 all have the same result at this point, the appliance switches to the round robin method, and continues to distribute connections using that method.

The following table explains how connections are distributed in the three-service load balancing setup described earlier.


Request Received	Service Selected	Current N Value (Number of Active Transactions * TTFB)	Remarks
Request-1	Service-HTTP-3;(N = 0)	N = 2	Service-HTTP-3 has the lowest N value.
Request-2	Service-HTTP-3; (N = 2)	N = 4	Service-HTTP-3 has the lowest N value.
Request-3	Service-HTTP-3; (N = 4)	N = 6	Service-HTTP-3 has the lowest N value.
Request-4	Service-HTTP-1; (N = 6)	N = 8	Service-HTTP-1 and Service-HTTP-3 have the same N values. The appliance uses the round robin method to distribute the requests.
Request-5	Service-HTTP-3; (N = 6)	N = 8	Service-HTTP-1 and Service-HTTP-3 have the same N values.
Request-6	Service-HTTP-2; (N = 7)	N = 8	Service-HTTP-2 has the lowest N value.
Request-7	Service-HTTP-3; (N = 8)	N = 10	Service-HTTP-1, Service-HTTP-2 and Service-HTTP-3 have the same N values. The NetScaler appliance uses the round robin method to distribute the requests.
Request-8	Service-HTTP-1; (N = 8)	N = 10	Service-HTTP-1 and Service-HTTP-2 have the same N values, the appliance uses the round robin method to distribute the requests.

Service-HTTP-1 is again selected for load balancing when it completes its active transactions or when its N value is less than the other services (Service-HTTP-2 and Service-HTTP-3).

Selection of services when weights are assigned

The following diagram illustrates how the NetScaler appliance uses the least response time method when weights are assigned.

Figure 2. How the Least Response Time Load Balancing Method Works When Weights Are Assigned

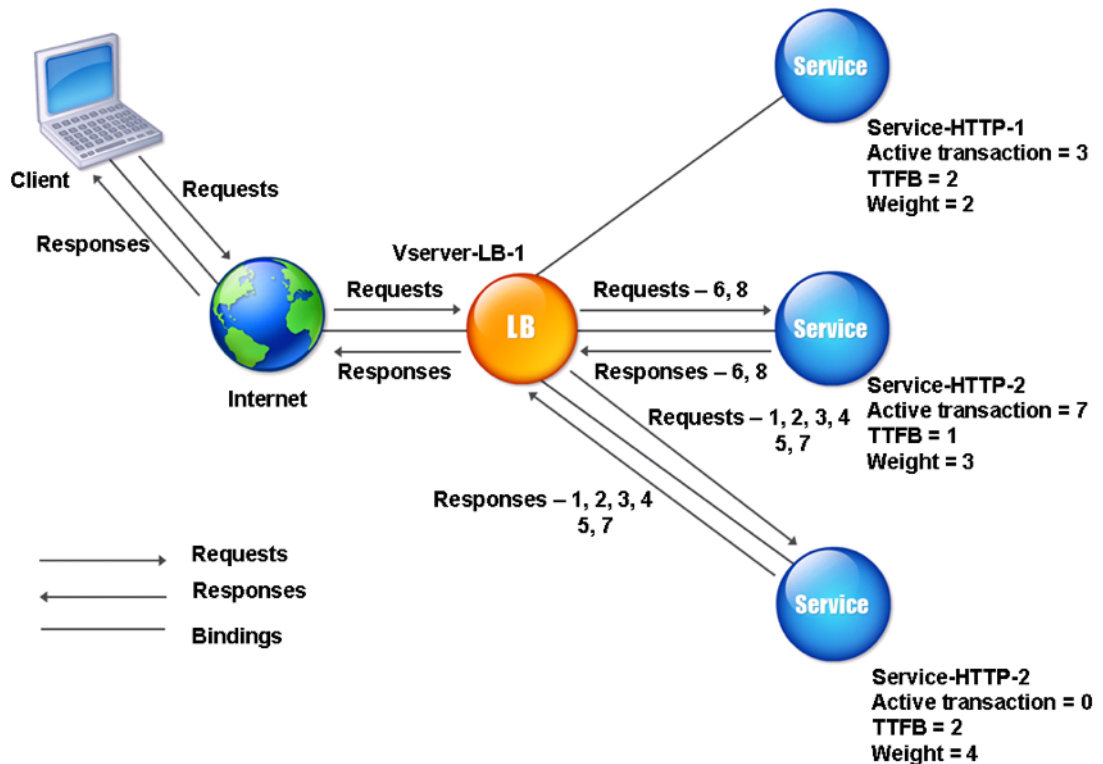

The virtual server selects a service by using the value (Nw) in the following expression:

$$Nw = (N) * (10000 / \text{weight}), \text{ where } N = (\text{number of active transactions} * \text{TTFB})$$

Suppose Service-HTTP-1 is assigned a weight of 2, Service-HTTP-2 is assigned weight of 3, and Service-HTTP-3 is assigned weight of 4.

The NetScaler appliance distributes requests as follows:

- Service-HTTP-3 receives the first request, because it is not handling any active transactions.
If the services are not handling any active transactions, the appliance selects them regardless of the weights assigned to them.
- Service-HTTP-3 receives the second, third, fourth, and fifth requests, because this service has the lowest Nw value.
- Service-HTTP-2 receives the sixth request, because this service has the lowest Nw value.

- Service-HTTP-3 receives the seventh request, because this service has the lowest Nw value.
- Service-HTTP-2 receives the eighth request, because this service has the lowest Nw value.

Service-HTTP-1 has the lowest weight and therefore the highest Nw value, so the virtual server does not select it for load balancing.

The following table explains how connections are distributed in the three-service load balancing setup described earlier.

Request Received	Service Selected	Current Nw Value = (N) * (10000 / Weight)	Remarks
Request-1	Service-HTTP-3; (Nw = 0)	Nw = 5000	Service-HTTP-3 has the lowest Nw value.
Request-2	Service-HTTP-3; (Nw = 5000)	Nw = 10000	Service-HTTP-3 has the lowest Nw value.
Request-3	Service-HTTP-3; (Nw = 10000)	Nw = 15000	Service-HTTP-3 has the lowest Nw value.
Request-4	Service-HTTP-3; (Nw = 15000)	Nw = 20000	Service-HTTP-3 has the lowest Nw value.
Request-5	Service-HTTP-3; (Nw = 20000)	Nw = 25000	Service-HTTP-3 has the lowest Nw value.
Request-6	Service-HTTP-2; (Nw = 23333.34)	Nw = 26666.67	Service-HTTP-2 has the lowest Nw value.
Request-7	Service-HTTP-3; (Nw = 25000)	Nw = 30000	Service-HTTP-3 has the lowest Nw value.
Request-8	Service-HTTP-2; (Nw = 26666.67)	Nw = 30000	Service-HTTP-2 has the lowest Nw value.

Service-HTTP-1 is selected for load balancing when it completes its active transactions or when its Nw value is less than other services (Service-HTTP-2 and Service-HTTP-3).

To configure the least response time load balancing method by using the CLI

At the command prompt type;

```
1 set lb vserver <name> -lbMethod LEASTRESPONSETIME
```

Example:

```
1 set lb vserver Vserver-LB-1 -lbMethod LEASTRESPONSETIME
```

To configure the least response time load balancing method by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In Advanced Settings, select **LEASTRESPONSETIME**.

For more information about configuring monitors, see [Configuring Monitors in a Load Balancing Setup](#).

LRTM method

May 2, 2023

Note: LRTM stands for Least response time method using monitors (LRTM).

When a load balancing virtual server is configured to use the LRTM method, it uses the existing monitoring infrastructure to get the fastest response time. The load balancing virtual server then selects the service with the smallest number of active transactions and lowest response time. Before you use the LRTM method, you must bind application-specific monitors to each service and enable LRTM mode on these monitors. The NetScaler appliance then makes load balancing decisions based on the response times it calculates from monitoring probes.

You can use the LRTM method to load balance non-HTTP and non-HTTPS services also. You can also use this method when several monitors are bound to a service. Each monitor determines the response time by using the protocol that it measures for the service that it is bound to. The virtual server then calculates an average response time for that service by averaging the results.

The following table summarizes how response times are calculated for the various monitors.

Monitor	Response time calculation
PING	Time difference between the ICMP ECHO request and the ICMP ECHO response.
TCP	Time difference between the SYN request and the SYN+ACK response.
HTTP	Time difference between the HTTP request (after the TCP connection is established) and the HTTP response.


Monitor	Response time calculation
TCP-ECV	Time difference between the time the data send string is sent and the data receive string is returned. A TCP-ECV monitor without the send and receive strings is considered to have an incorrect configuration.
HTTP-ECV	Time difference between the HTTP request and the HTTP response.
UDP-ECV	Time difference between the UDP's send string and the receive string. A UDP-ECV monitor without the receive string is considered to have an incorrect configuration.
DNS	Time difference between a DNS query and the DNS response.
TCPS	Time difference between a SYN request and the SSL handshake completion.
FTP	Time difference between the sending of the user name and the completion of user authentication.
HTTPS (monitors HTTPS requests)	Time difference is the same as for the HTTP monitor.
HTTPS-ECV (monitors HTTPS requests)	Time difference is the same as for the HTTP-ECV monitor
USER	Time difference between the time when a request is sent to the dispatcher and the time when the dispatcher response is received.

The following example shows how the NetScaler appliance selects a service for load balancing by using the LRTM method. Consider the following three services:

- Service-HTTP-1 is handling 3 active transactions and the response time is five seconds.
- Service-HTTP-2 is handling 7 active transactions and the response time is one second.
- Service-HTTP-3 is not handling any active transactions and the response time is two seconds.

The following diagram illustrates the process that the NetScaler appliance follows when it forwards requests.

Figure 1. How the LRTM Method Works

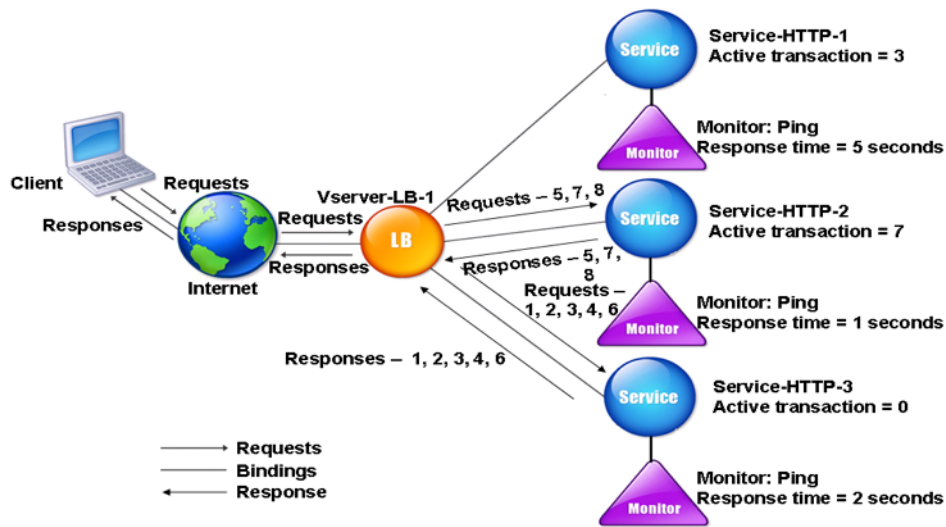

The virtual server selects a service by using the value (N) in the following expression:

$$N = (\text{Number of active transactions} * \text{Response time that is determined by the monitor})$$

The virtual server delivers requests as follows:

- Service-HTTP-3 receives the first request, because this service is not handling any active transaction.
- Service-HTTP-3 receives the second, third, and fourth requests, because this service has the lowest N value.
- Service-HTTP-2 receives the fifth request, because this service has the lowest N value.
- Since both Service-HTTP-2 and Service-HTTP-3 currently have the same N value, the NetScaler appliance switches to the round robin method. Therefore, Service-HTTP-3 receives the sixth request.
- Service-HTTP-2 receives the seventh and eighth requests, because this service has the lowest N value.

Service-HTTP-1 is not considered for load balancing, because it is more heavily loaded (has the highest N value) when compared to the other two services. However, if Service-HTTP-1 completes its active transactions, the NetScaler appliance again considers that service for load balancing.

The following table summarizes how N is calculated for the services.

Request Received	Service Selected	Current N Value (Number of Active Transactions * TTFB)	Remarks
Request-1	Service-HTTP-3;(N = 0)	N = 2	Service-HTTP-3 has the lowest N value.
Request-2	Service-HTTP-3; (N = 2)	N = 4	Service-HTTP-3 has the lowest N value.
Request-3	Service-HTTP-3; (N = 4)	N = 6	Service-HTTP-3 has the lowest N value.
Request-4	Service-HTTP-3; (N = 6)	N = 8	Service-HTTP-3 has the lowest N value.
Request-5	Service-HTTP-2; (N = 7)	N = 8	Service-HTTP-2 has the lowest N value.
Request-6	Service-HTTP-3; (N = 8)	N = 10	Service-HTTP-2 and Service-HTTP-3 have the same N values. NetScaler appliance switches to the round robin method and selects Service-HTTP-3
Request-7	Service-HTTP-2; (N = 8)	N = 9	Service-HTTP-2 has the lowest N value.
Request-8	Service-HTTP-2; (N = 9)	N = 10	Service-HTTP-2 has the lowest N value.

Service-HTTP-1 is again selected for load balancing when it completes its active transactions or when its N value is less than the other services (Service-HTTP-2 and Service-HTTP-3).

Selection of services when weights are assigned


The NetScaler appliance also performs load balancing by using the number of active transactions, response time, and weights if different weights are assigned to services. The NetScaler appliance selects the service by using the value (Nw) in the following expression:

$$Nw = (N) * (10000 / \text{weight})$$

Where N = (Number of active transactions * Response time that is determined by the monitor)

The following diagram illustrates how the virtual server uses the LRTM method when weights are assigned.

Figure 2. How the Least Response Time Load Balancing Method Works When Weights Are Assigned

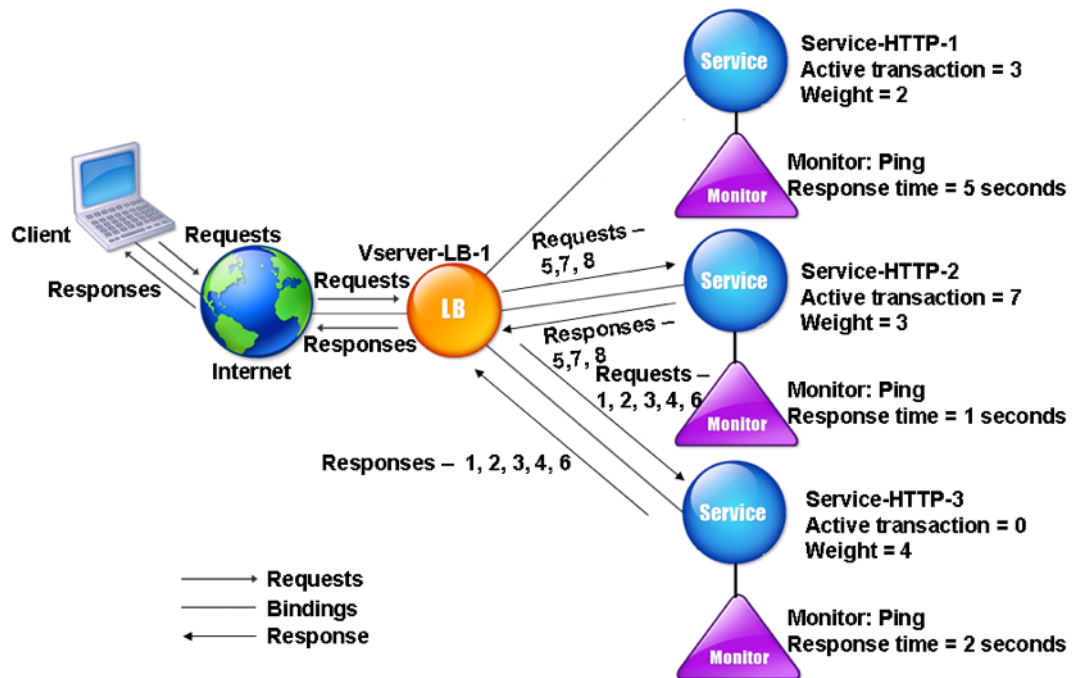

In this example, suppose Service-HTTP-1 is assigned a weight of 2, Service-HTTP-2 is assigned a weight of 3, and Service-HTTP-3 is assigned a weight of 4.

The NetScaler appliance delivers requests as follows:

- Service-HTTP-3 receives the first request, because it is not handling any active transactions.
- Service-HTTP-3 receives the second, third, fourth, and fifth requests, because this service has the lowest Nw value.
- Service-HTTP-2 receives the sixth request, because this service has the lowest Nw value.
- Service-HTTP-3 receives the seventh request, because this service has the lowest Nw value.
- Service-HTTP-2 receives the eighth requests, because this service has the lowest Nw value.

Service-HTTP-1 has the lowest weight and the highest Nw value, so the NetScaler appliance does not select it for load balancing.

The following table summarizes how Nw is calculated for various monitors.

Request Received	Service Selected	Current Nw Value (N) * (10000 / Weight)	Remarks
Request-1	Service-HTTP-3; (Nw = 0)	Nw = 5000	Service-HTTP-3 has the lowest Nw value.
Request-2	Service-HTTP-3; (Nw = 5000)	Nw = 10000	Service-HTTP-3 has the lowest Nw value.
Request-3	Service-HTTP-3; (Nw = 10000)	Nw = 15000	Service-HTTP-3 has the lowest Nw value.
Request-4	Service-HTTP-3; (Nw = 15000)	Nw = 20000	Service-HTTP-3 has the lowest Nw value.
Request-5	Service-HTTP-3; (Nw = 20000)	Nw = 25000	Service-HTTP-3 has the lowest Nw value.
Request-6	Service-HTTP-2; (Nw = 23333.34)	Nw = 26666.67	Service-HTTP-2 has the lowest Nw value.
Request-7	Service-HTTP-3; (Nw = 25000)	Nw = 30000	Service-HTTP-3 has the lowest Nw value.
Request-8	Service-HTTP-2; (Nw = 26666.67)	Nw = 30000	Service-HTTP-2 has the lowest Nw value.

Service-HTTP-1 is selected for load balancing when it completes its active transactions or when its Nw value is less than other services (Service-HTTP-2 and Service-HTTP-3).

To configure the LRTM load balancing method by using the CLI

At the command prompt type;

```
1 set lb vservers <name> [-lbMethod <lbMethod>]
```

Example:

```
1 set lb vservers Vserver-LB-1 -lbMethod LRTM
```

To configure the LRTM load balancing method by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In Advanced Settings, select **LRTM**.

To enable the LRTM option in monitors by using the CLI

At the command prompt type;

```
1 set lb monitor <monitorName> <type> [-LRTM ( ENABLED | DISABLED )]
```

Example:

```
1 set lb monitor monitor-HTTP-1 HTTP -LRTM ENABLED
```

To enable the LRTM option in monitors by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**, and open a monitor.
2. In Advanced Parameters, select **LRTM (Least Response Time using Monitoring)**.

For more information about configuring monitors, see [Configuring Monitors in a Load Balancing Setup](#).

Hashing methods

May 2, 2023

Load balancing methods based on hashes of certain connection information or header information constitute most the NetScaler appliance's load balancing methods. Hashes are shorter and easier to use than the information that they are based on, while retaining enough information to ensure that no two different pieces of information generate the same hash and are therefore confused with one another.

You can use the hashing load balancing methods in an environment where a cache serves a wide range of content from the Internet or specified origin servers. Caching requests reduces request and response latency, and ensures better resource (CPU) utilization, making caching popular on heavily used websites and application servers. Since these sites also benefit from load balancing, hashing load balancing methods are widely useful.

The NetScaler appliance provides the following hashing methods:

- URL hash method
- Domain hash method
- Destination IP hash method
- Source IP hash method
- Source IP Destination IP hash method
- Source IP Source Port hash method

- Call ID hash method
- Token method

Most of the hashing algorithms calculate two hash values:


- A hash of the service's IP address and port.
- A hash of the incoming URL, the domain name, the source IP address, the destination IP address, or the source and destination IP addresses, depending on the configured hash method.

The NetScaler appliance then generates a new hash value by using both of those hash values. Finally, it forwards the request to the service with the highest hash value. As the appliance computes a hash value for each request and selects the service that processes the request, it populates a cache. Subsequent requests with the same hash value are sent to the same service. The following flow chart illustrates this process.

Note

Starting from NetScaler release 13.0 build 79.x, Prime Re-Shuffled Assisted CARP (PRAC) and Jump table Assisted Ring Hash (JARH) consistent hashing algorithms are supported. The consistent hashing algorithms ensure minimal disruption when services are added to or deleted from your load balancing setup, or during a service flap event in load balancing setup. For more details, see [Consistent hashing algorithms](#).


Figure 1. How the Hashing Methods Distribute Requests

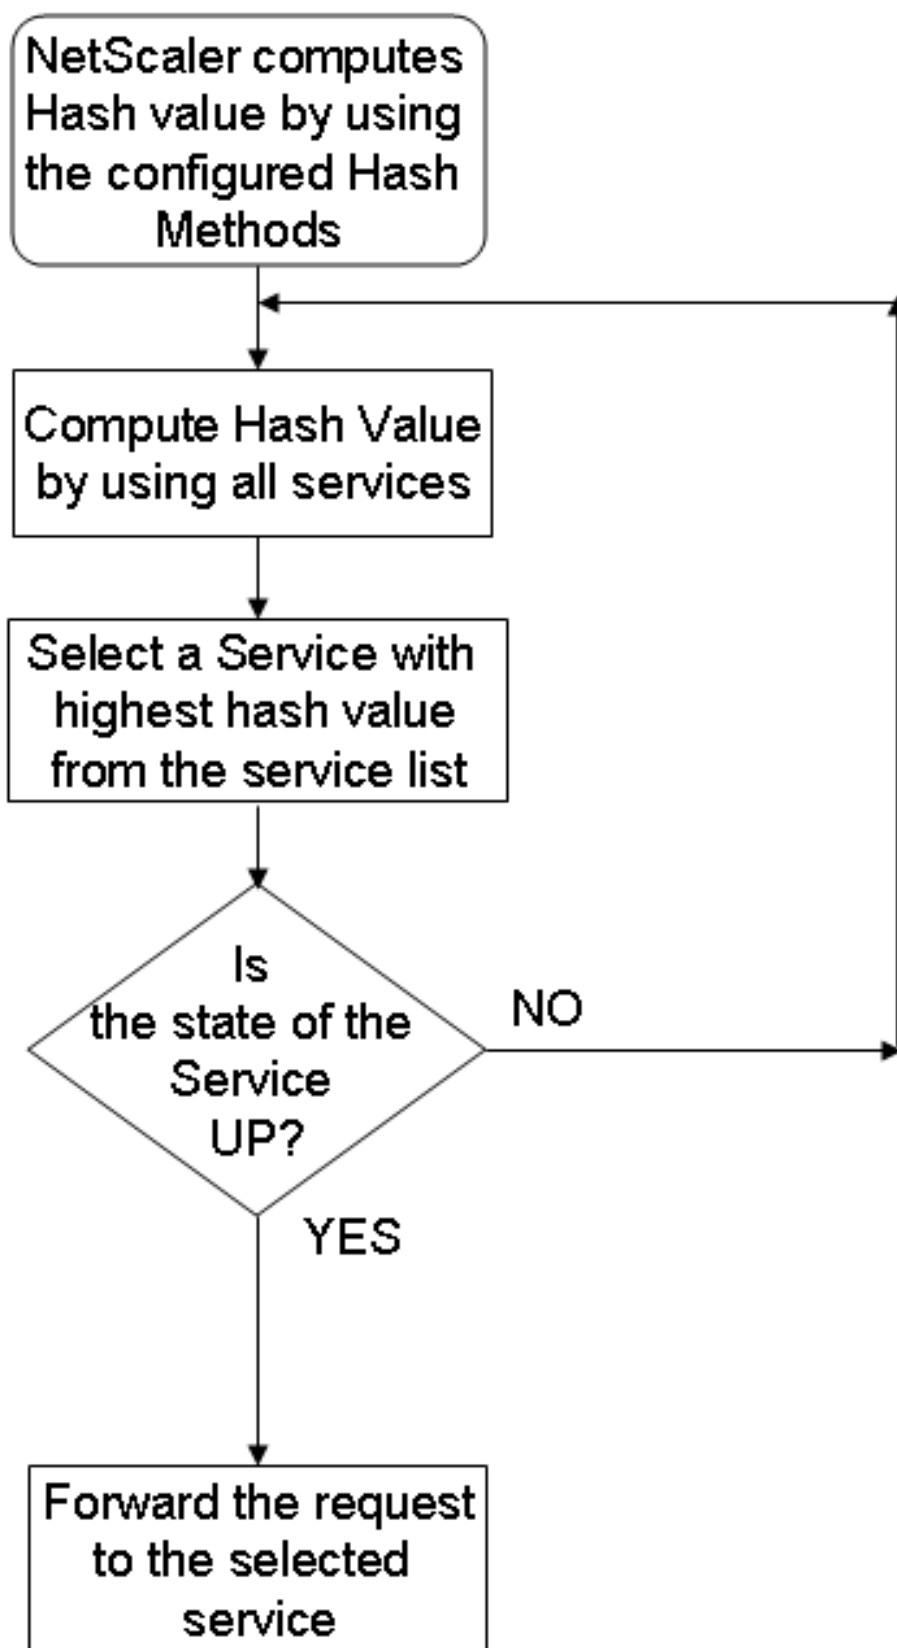

Hashing methods can be applied to IPv4 and IPv6 addresses.

Consider a scenario where three services (Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3) are bound to a virtual server, any hash method is configured, and the hash value is Hash1. When the configured services are UP, the request is sent to Service-HTTP-1. If Service-HTTP-1 is down, the NetScaler appliance calculates the hash value for the last log of the number of services. The appliance then selects the service with the highest hash value, such as Service-HTTP-2. The following diagram illustrates this process.

Figure 2. Entity Model for Hashing Methods

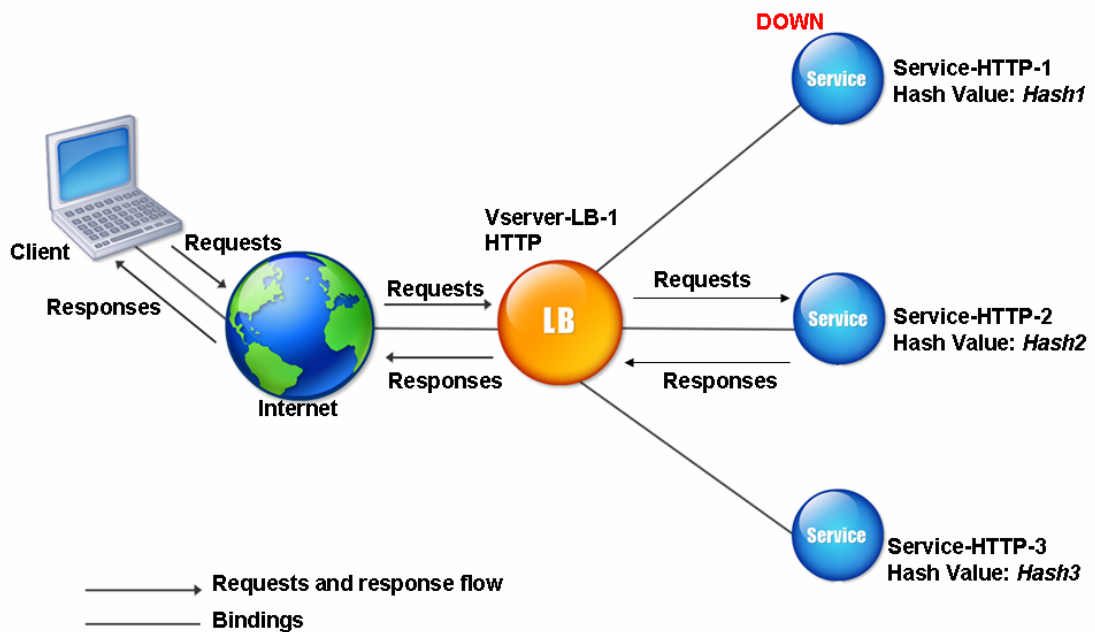

Note

If the NetScaler appliance fails to select a service by using a hashing method, it defaults to the least connection method to select a service for the incoming request. Adjust server pools by removing services during periods of low traffic to enable the caches to repopulate without affecting performance on your load balancing setup.

Consistent hashing algorithms

The consistent hashing algorithms are used to achieve stateless persistency. The hash-based LB methods use one of the following three consistent hashing algorithms:

- **Cache Array Routing Protocol (CARP)**

The CARP algorithm is used in load-balancing HTTP requests across multiple proxy cache servers. This algorithm is enabled by default.

- **Prime Re-Shuffled Assisted CARP (PRAC)**

The NetScaler appliance uses the proprietary PRAC algorithm to provide uniform traffic distribution.

- **Jump table Assisted Ring Hash (JARH)**

The NetScaler appliance uses the proprietary JARH algorithm to provide consistency and uniform distribution of the traffic. This algorithm uses hash fingers. Higher number of fingers provide better distribution of traffic. However, increasing the number of fingers increases the memory usage as well.

To choose the consistent hashing algorithm by using CLI

```
1 set lb parameter [-lbHashAlgorithm [DEFAULT|JARH|PRAC] [-lbHashFingers <positive_integer>]
```

Example:

```
1 set lb parameter -lbHashAlgorithm JARH -lbHashFingers 10
```

ARGUMENTS:

- **lbHashAlgorithm**-Specify the hashing algorithm to be used for the following hash-based load balancing methods:
 - URL hash method
 - Domain hash method
 - Destination IP hash method
 - Source IP hash method
 - Source IP Destination IP hash method
 - Source IP Source Port hash method
 - Call ID hash method
 - Token method

Possible values: DEFAULT, PRAC, JARH

Default value: DEFAULT

- **lbHashFingers**-Specify the number of fingers to be used in PRAC and JARH algorithms for hash-based LB methods. Increasing the number of fingers provides better distribution of traffic at the expense of extra memory.

Default value: 256

Minimum value: 1

Maximum value: 1024

To choose the consistent hashing algorithm by using GUI

1. Navigate to **Traffic Management > Load Balancing > Change Load Balancing parameters.**
2. In the **Configure Load Balancing Parameters** pane, enter appropriate values for the following fields based on your requirement:
 - LB Hash Fingers
 - In the **LB Hash Algorithm** field, choose the consistent hashing algorithm from the drop-down menu.

← Configure Load Balancing Parameters

Startup RR Factor
0 ⓘ

Connection Close for Monitor
 FIN RESET

Encode Persistence Cookie Values

Cookie Passphrase

Domain Based Service TTL
0

Undefaction
NOLBACTION ▾

Literal ADC Cookie Attribute

Computed ADC Cookie Attribute

ADC Cookie Attribute Warning Message

Override Persistency for Order
NO ▾

Max Pipeline Nat
255

LB Hash Fingers
9 ⓘ

LB Hash Algorithm
JARH ⓘ

Skip MaxClients for Monitoring Connections
 Include Port for Hash-Based Load Balancing Methods
 Use Consolidated Statistics
 Allow Bound Services/Service Groups Removal
 Store MQTT Client Id and User Name
 Drop MQTT Jumbo Message

Persistence Cookie HTTPOnly Flag
 Prefer Direct Route
 Virtual Server Specific MAC
 Retain Service State
 Proximity from Self ⓘ

OK Close

The URL Hash Method

When you configure the NetScaler appliance to use the URL hash method for load balancing the services, for selecting a service, the appliance generates a hash value of the HTTP URL present in the


incoming request. If the service selected by the hash value is DOWN, the algorithm has a method to select another service from the list of active services. The appliance caches the hashed value of the URL, and when it receives subsequent requests that use the same URL, it forwards them to the same service. If the appliance cannot parse an incoming request, it uses the round robin method for load balancing instead of the URL hash method.

For generating the hash value, the appliance uses a specific algorithm and considers a part of the URL. By default, the appliance considers the first 80 bytes of the URL. If the URL is of less than 80 bytes, the complete URL is used. You can specify a different length. The hash length can be from 1 byte to 4096 bytes. Generally, if long URLs are used where only a few characters are different, it is a good idea to make the hash length as high as possible to try to ensure a more even load distribution.

Consider a scenario where three services, Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3, are bound to a virtual server, and the load balancing method configured on the virtual server is the URL hash method. The virtual server receives a request and the hash value of the URL is U1. Appliance selects Service-HTTP-1. If Service-HTTP-1 is DOWN, the appliance selects Service-HTTP-2.

The following diagram illustrates this process.

Figure 3. How URL Hashing Operates

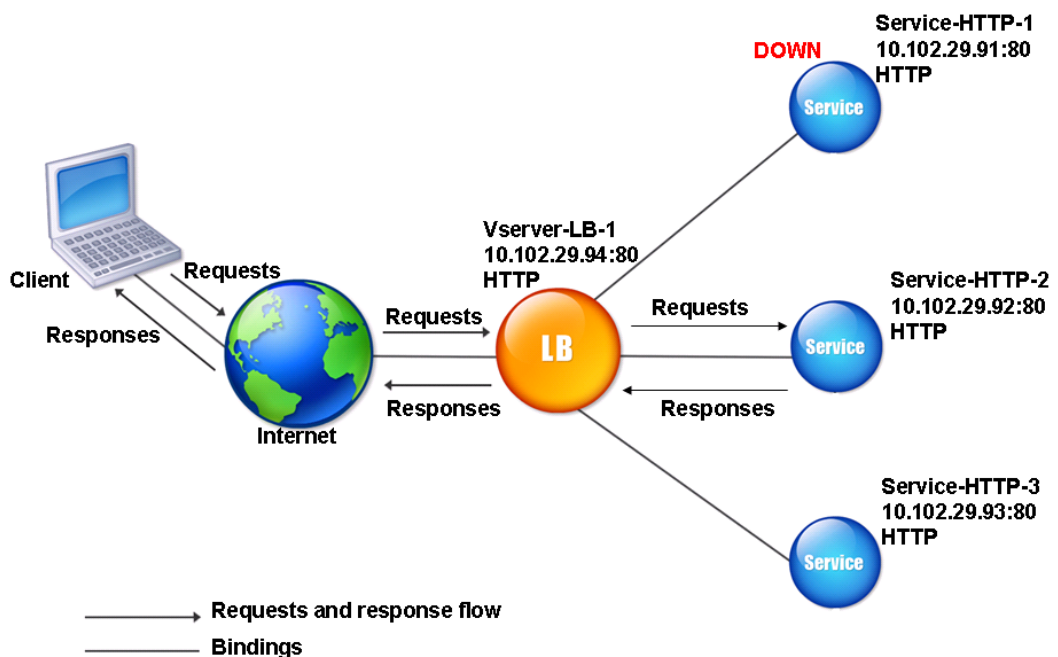

If both Service-HTTP-1 and Service-HTTP-2 are DOWN, the appliance sends requests with hash value

U1 to Service-HTTP-3.

If Service-HTTP-1 and Service-HTTP-2 are down, requests that generate the hash URL1 are sent to Service-HTTP-3. If these services are UP, the requests that generate the hash URL1 are distributed in the following manner:

- If the Service-HTTP-2 is up, the request is sent to Service-HTTP-2.
- If the Service-HTTP-1 is up, the request is sent to Service-HTTP-1.
- If Service-HTTP-1 and Service-HTTP-2 are up at the same time, the request is sent to Service-HTTP-1.

To configure the URL hash method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#). Select the load balancing method as URL Hash, and set the hash length to the number of bytes to be used for generating the hash value.

The Domain Hash Method

A load balancing virtual server configured to use the domain hash method uses the hashed value of the domain name in the HTTP request to select a service. The domain name is taken from either the incoming URL or the Host header of the HTTP request. If the domain name appears in both the URL and the Host header, the appliance gives preference to the URL.

If you configure domain name hashing, and an incoming HTTP request does not contain a domain name, the NetScaler appliance defaults to the round robin method for that request.

The hash-value calculation uses the name length or hash length value, whichever is smaller. By default, the NetScaler appliance calculates the hash value from the first 80 bytes of the domain name. To specify a different number of bytes in the domain name when calculating the hash value, you can set the hashLength parameter (Hash Length in the configuration utility) to a value of from 1 to 4096 (bytes).

To configure the domain hash method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

The Destination IP Hash Method

A load balancing virtual server configured to use the destination IP hash method uses the hashed value of the destination IP address to select a server. You can mask the destination IP address to specify which part of it to use in the hash value calculation, so that requests that are from different networks but destined for the same subnet are all directed to the same server. This method supports IPv4 and IPv6-based destination servers.

This load balancing method is appropriate for use with the cache redirection feature.

To configure the destination IP hash method for an IPv4 destination server, you set the netMask parameter. To configure this method for an IPv6 destination server, you use the v6NetMaskLen parameter. In the configuration utility, text boxes for setting these parameters appear when you select the **Destination IP Hash method**.

To configure the destination IP hash method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

The Source IP Hash Method

A load balancing virtual server configured to use the source IP hash method uses the hashed value of the client IPv4 or IPv6 address to select a service. To direct all requests from source IP addresses that belong to a particular network to a specific destination server, you must mask the source IP address. For IPv4 addresses, use the netMask parameter. For IPv6 addresses, use the v6NetMaskLength parameter.

To configure the source IP hash method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

The Source IP Destination IP Hash Method

A load balancing virtual server configured to use the source IP destination IP hash method uses the hashed value of the source and destination IP addresses (either IPv4 or IPv6) to select a service. Hashing is symmetric. The hash value is the same regardless of the order of the source and destination IPs. This ensures that all packets flowing from a particular client to the same destination are directed to the same server.

To direct all requests that belong to a particular network to a specific destination server, you must mask the source IP address. For IPv4 addresses, use the netMask parameter. For IPv6 addresses, use the v6NetMaskLength parameter.

To configure the source IP destination IP hash method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

The Source IP Source Port Hash Method

A load balancing virtual server configured to use the source IP source port hash method uses the hash value of the source IP (either IPv4 or IPv6) and the source port to select a service. This ensures that all packets on a particular connection are directed to the same service.

This method is used in connection mirroring and firewall load balancing. For more information about connection mirroring, see [Connection Failover](#).

To direct all requests that belong to a particular network to a specific destination server, you must mask the source IP address. For IPv4 addresses, use the `netMask` parameter. For IPv6 addresses, use the `v6NetMaskLength` parameter.

To configure the source IP source port hash method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

The Call ID Hash Method

A load balancing virtual server configured to use the call ID hash method uses the hash value of the call ID in the SIP header to select a service. Packets for a particular SIP session are therefore always directed to the same proxy server.

This method is applicable to SIP load balancing. For more information about SIP load balancing, see [Monitoring SIP Services](#).

To configure the call ID hash method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

Least bandwidth method

May 2, 2023


A load balancing virtual server configured to use the least bandwidth method selects the service that is currently serving the least amount of traffic, measured in megabits per second (Mbps). The following example shows how the virtual server selects a service for load balancing by using the least bandwidth method.

Consider three services, Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3.

- Service-HTTP-1 has 3 Mbps bandwidth.
- Service-HTTP-2 has 5 Mbps bandwidth.
- Service-HTTP-3 has 2 Mbps bandwidth.

The following diagram illustrates how the virtual server uses the least bandwidth method to forward requests to the three services.

Figure 1. How the Least Bandwidth Load Balancing Method Works

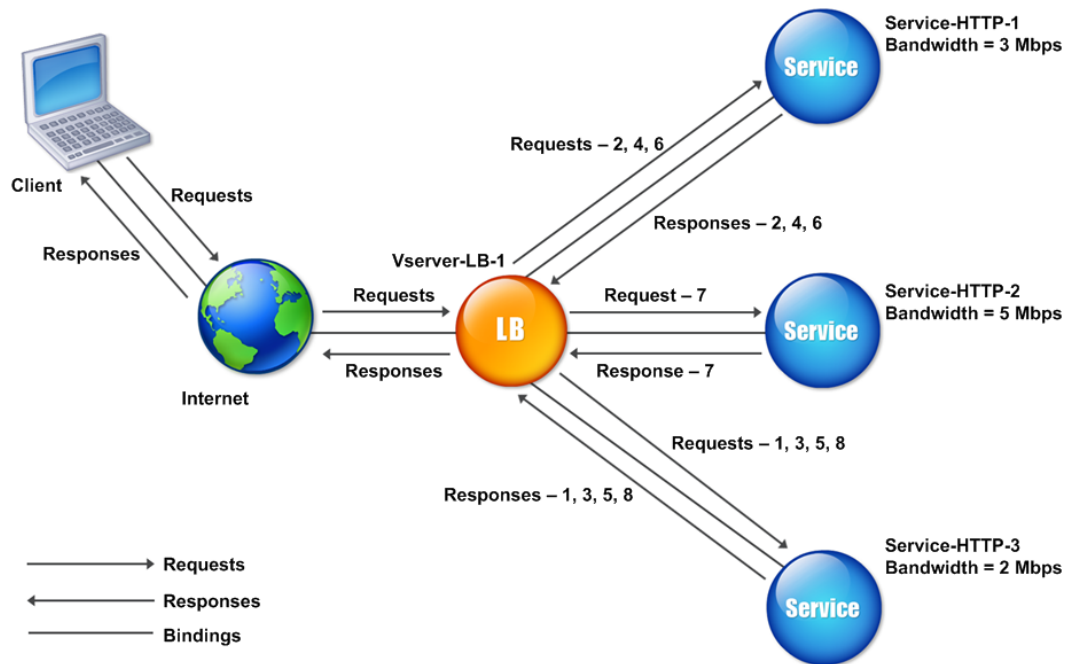

The virtual server selects the service by using the bandwidth value (N), which is the sum of the number of bytes transmitted and received over the previous 14 seconds. If each request requires 1 Mbps bandwidth, the NetScaler appliance delivers requests as follows:

- Service-HTTP-3 receives the first request, because this service has the lowest N value.
- Because Service-HTTP-1 and Service-HTTP-3 now have the same N value, the virtual server switches to the round robin method for these servers, alternating between them. Service-HTTP-1 receives the second request, Service-HTTP-3 receives the third request, Service-HTTP-1 receives the fourth request, Service-HTTP-3 receives the fifth request, and Service-HTTP-1 receives the sixth request.
- Since Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 now all have the same N value, the virtual server includes Service-HTTP-2 in the round robin list. Therefore, Service-HTTP-2 receives the seventh request, Service-HTTP-3 receives the eighth request, and so on.

The following table summarizes how N is calculated.

Request Received	Service Selected	Current N Value	Remarks
Request-1	Service-HTTP-3; (N = 2)	N = 3	Service-HTTP-3 has the lowest N value.

Request Received	Service Selected	Current N Value	Remarks
Request-2	Service-HTTP-1; (N = 3)	N = 4	Service-HTTP-1 and Service-HTTP-3 have the same N values.
Request-3	Service-HTTP-3;(N = 3)	N = 4	Service-HTTP-1 and Service-HTTP-3 have the same N values.
Request-4	Service-HTTP-1; (N = 4)	N = 5	-
Request-5	Service-HTTP-3; (N = 4)	N = 5	-
Request-6	Service-HTTP-1; (N = 5)	N = 6	Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 have the same N values.
Request-7	Service-HTTP-2; (N = 5)	N = 6	Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 have the same N values.
Request-8	Service-HTTP-3; (N = 5)	N = 6	-

Note: If you enable the RTSP NAT option on the virtual server, the NetScaler appliance uses the number of data and control bytes exchanged to determine the bandwidth usage for RTSP services. For more information about the RTSP NAT option, see [Managing RTSP Connections](#).

The NetScaler appliance also performs load balancing by using the bandwidth and weights if different weights are assigned to the services. It selects a service by using the value (Nw) in the following expression:

$$Nw = (N) * (10000 / \text{weight})$$

As in the preceding example, suppose Service-HTTP-1 is assigned a weight of 2, Service-HTTP-2 is assigned a weight of 3, and Service-HTTP-3 is assigned a weight of 4. The NetScaler appliance delivers requests as follows:


- Service-HTTP-3 receives the first second, third, fourth, and fifth requests, because this service has the lowest Nw value.
- Service-HTTP-1 receives the sixth request, because this service has the lowest Nw value.
- Service-HTTP-3 receives the seventh request, because this service has the lowest Nw value.
- Service-HTTP-2 receives the eighth request, because this service has the lowest Nw value.

The following table summarizes how Nw is calculated.

Request Received	Service Selected	Current Nw Value (Number of Active Transactions) * (10000 / Weight)	Remarks
Request-1	Service-HTTP-3; (Nw = 5000)	Nw = 5000	Service-HTTP-3 has the lowest Nw value.
Request-2	Service-HTTP-3; (Nw = 5000)	Nw = 7500	-
Request-3	Service-HTTP-3; (Nw = 7500)	Nw = 10000	-
Request-4	Service-HTTP-3; (Nw = 10000)	Nw = 12500	-
Request-5	Service-HTTP-3; (Nw = 12500)	Nw = 15000	-
Request-6	Service-HTTP-1; (Nw = 15000)	Nw = 20000	Service-HTTP-1 and Service-HTTP-3 have the same Nw value.
Request-7	Service-HTTP-3; (Nw = 15000)	Nw = 17500	Service-HTTP-1 and Service-HTTP-3 have the same Nw value.
Request-8	Service-HTTP-2; (Nw = 16666.67)	Nw = 20000	Service-HTTP-2 has the lowest Nw value.

The following diagram illustrates how the virtual server uses the least bandwidth method when weights are assigned to the services.

Figure 2. How the Least Bandwidth Load Balancing Method Works When Weights Are Assigned

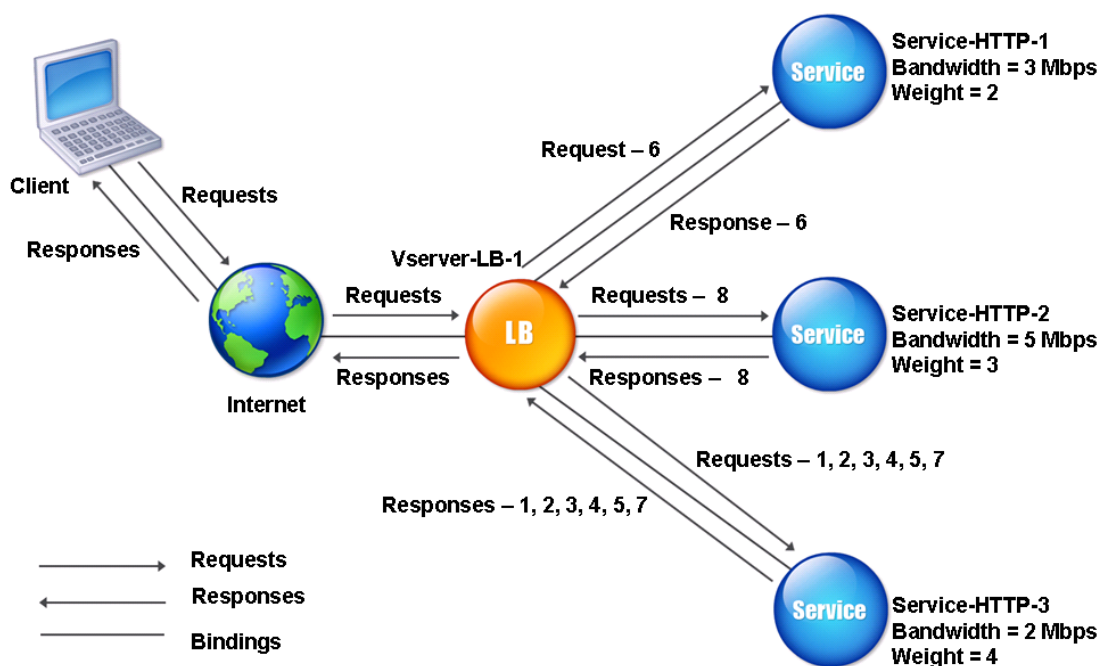

To configure the least bandwidth method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

Least packets method

May 2, 2023


A load balancing virtual server configured to use the least packets method selects the service that has received the fewest packets in the last 14 seconds.

For example, consider three services, Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3.

- Service-HTTP-1 has handled three packets in the last 14 seconds.
- Service-HTTP-2 has handled five packets in the last 14 seconds.
- Service-HTTP-3 has handled two packets in the last 14 seconds.

The following diagram illustrates how the NetScaler appliance uses the least packets method to choose a service for each request that it receives.

Figure 1. How the Least Packets Load Balancing Method Works

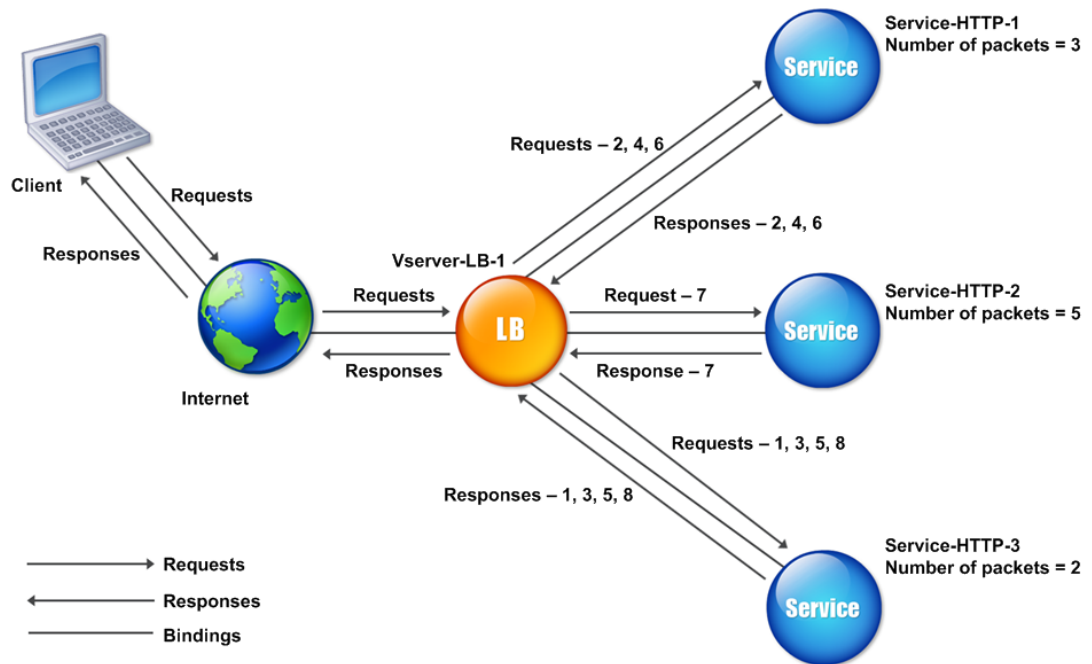

The NetScaler appliance selects a service by using the number of packets (N) transmitted and received by each service in the last 14 seconds. Using this method, it delivers requests as follows:

- Service-HTTP-3 receives the first request, because this service has the lowest N value.
- Since Service-HTTP-1 and Service-HTTP-3 now have the same N value, the virtual server switches to the round robin method. Service-HTTP-1 therefore receives the second request, Service-HTTP-3 receives the third request, Service-HTTP-1 receives the fourth request, Service-HTTP-3 receives the fifth request, and Service-HTTP-1 receives the sixth request.
- Since Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 all now have the same N value, the virtual server switches to the round robin method for Service-HTTP-2 as well, including it in the round robin list. Therefore, Service-HTTP-2 receives the seventh request, Service-HTTP-3 receives the eighth request, and so on.

The following table summarizes how N is calculated.

Request Received	Service Selected	Current N Value	Remarks
Request-1	Service-HTTP-3; (N = 2)	N = 3	Service-HTTP-3 has the lowest N value.

Request Received	Service Selected	Current N Value	Remarks
Request-2	Service-HTTP-1; (N = 3)	N = 4	Service-HTTP-1 and Service-HTTP-3 have the same N values.
Request-3	Service-HTTP-3; (N = 3)	N = 4	Service-HTTP-1 and Service-HTTP-3 have the same N values.
Request-4	Service-HTTP-1; (N = 4)	N = 5	-
Request-5	Service-HTTP-3; (N = 4)	N = 5	-
Request-6	Service-HTTP-1; (N = 5)	N = 6	Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 have the same N values.
Request-7	Service-HTTP-2; (N = 5)	N = 6	Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 have the same N values.
Request-8	Service-HTTP-3; (N = 5)	N = 6	-

Note: If you enable the RTSP NAT option on the virtual server, the appliance uses the number of data and control packets to calculate the number of packets for RTSP services. For more information about the RTSP NAT option, see [Managing RTSP Connections](#).

The NetScaler appliance also performs load balancing by using the number of packets and weights when a different weight is assigned to each service. It selects a service by using the value (Nw) in the following expression:

$$Nw = (N) * (10000 / \text{weight})$$

As in the preceding example, suppose Service-HTTP-1 is assigned a weight of 2, Service-HTTP-2 is assigned a weight of 3, and Service-HTTP-3 is assigned a weight of 4. The NetScaler appliance delivers requests as follows:


- Service-HTTP-3 receives the first second, third, fourth, and fifth requests, because this service has the lowest Nw value.
- Service-HTTP-1 receives the sixth request, because this service has the lowest Nw value.
- Service-HTTP-3 receives the seventh request, because this service has the lowest Nw value.
- Service-HTTP-2 receives the eighth request, because this service has the lowest Nw value.

The following table summarizes how Nw is calculated.

Request Received	Service Selected	Current Nw Value (Number of Active Transactions) * (10000 / weight)	Remarks
Request-1	Service-HTTP-3; (Nw = 5000)	Nw = 5000	Service-HTTP-3 has the lowest Nw value.
Request-2	Service-HTTP-3; (Nw = 5000)	Nw = 7500	-
Request-3	Service-HTTP-3;(Nw = 7500)	Nw = 10000	-
Request-4	Service-HTTP-3; (Nw = 10000)	Nw = 12500	-
Request-5	Service-HTTP-3; (Nw = 12500)	Nw = 15000	-
Request-6	Service-HTTP-1; (Nw = 15000)	Nw = 20000	Service-HTTP-1 and Service-HTTP-3 have the same Nw value.
Request-7	Service-HTTP-3; (Nw = 15000)	Nw = 17500	Service-HTTP-1 and Service-HTTP-3 have the same Nw value.
Request-8	Service-HTTP-2; (Nw = 16666.67)	Nw = 20000	Service-HTTP-2 has the lowest Nw value.

The following diagram illustrates how the virtual server uses the least packets method when weights are assigned.

Figure 2. How the Least Packets Method Works When Weights Are Assigned

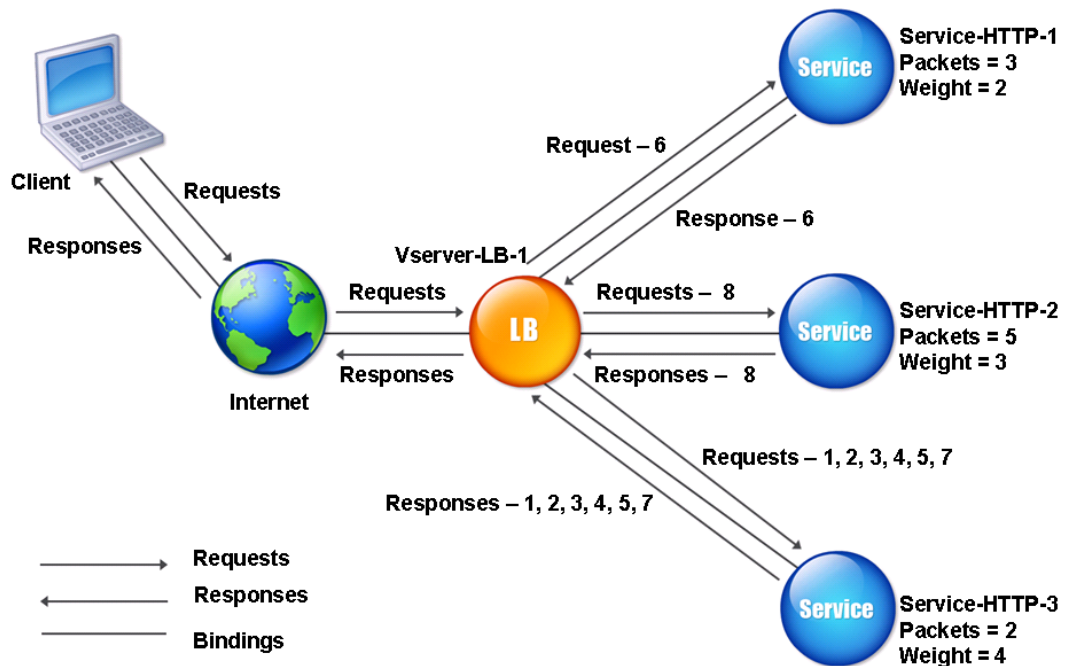

To configure the least packets method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).


Custom load method

May 2, 2023

Custom load balancing is performed on server parameters such as CPU usage, memory, and response time. When using the custom load method, the NetScaler appliance usually selects a service that is not handling any active transactions. If all the services in the load balancing setup are handling active transactions, the appliance selects the service with the smallest load. A special type of monitor, known as a load monitor, calculates the load on each service in the network. The load monitors do not mark the state of a service, but they do take services out of the load balancing decision when those services are not UP.

For more information about load monitors, see [Understanding Load Monitors](#). The following diagram illustrates how a load monitor operates.

Figure 1. How Load Monitors Operate

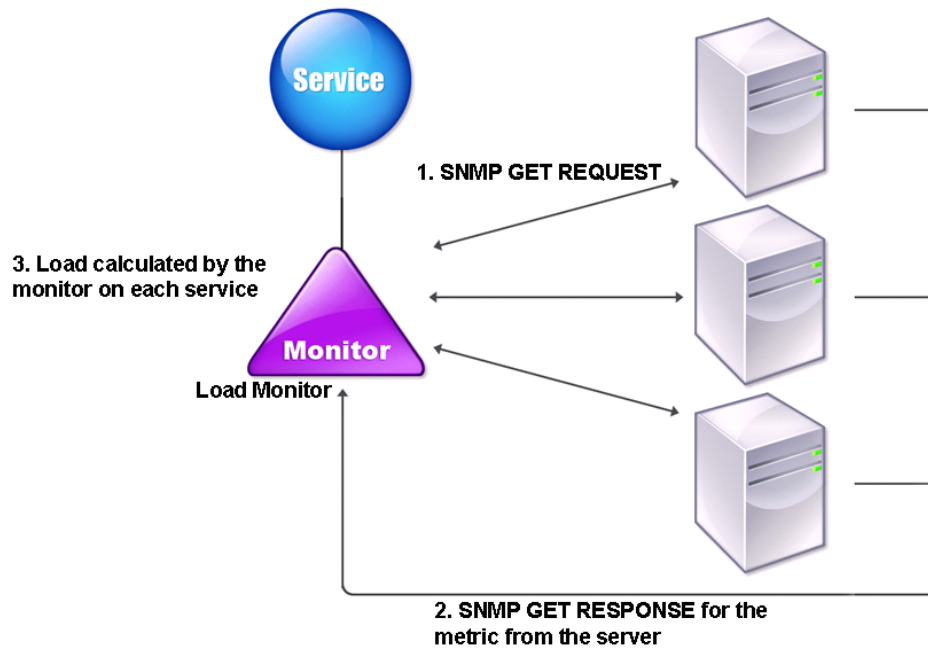

The load monitor uses SNMP probes to calculate the load on each service by sending an SNMP GET request to the service. This request contains one or more object IDs (OIDs). The service responds with an SNMP GET response, with metrics corresponding to the SNMP OIDs. The load monitor uses the response metrics to calculate the load on the service.

The load monitor calculates the load on a service by using the following parameters:

- Metrics values retrieved through SNMP probes that exist as tables in the NetScaler appliance.
- Threshold value set for each metric.
- Weight assigned to each metric.


For example, consider three services, Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3.

- Service-HTTP-1 is using 20 MB of memory.
- Service-HTTP-2 is using 70 MB of memory.
- Service-HTTP-3 is using 80 MB of memory.

The load balanced servers can export metrics such as CPU and memory usage to the services, which can in turn provide them to the load monitor. The load monitor sends an SNMP GET request containing the OIDs 1.3.6.1.4.1.5951.4.1.1.41.1.5, 1.3.6.1.4.1.5951.4.1.1.41.1.4, and 1.3.6.1.4.1.5951.4.1.1.41.1.3 to the services. SNMP OIDs of type STRING are not supported, because you cannot calculate the load by

using a STRING OID. Loads can be calculated by using other data types, such as INT and gauge32. The three services respond to the request. The NetScaler appliance compares the exported metrics, and then selects Service-HTTP-1 because it has more available memory. The following diagram illustrates this process.

Figure 2. How the Custom Load Method Works

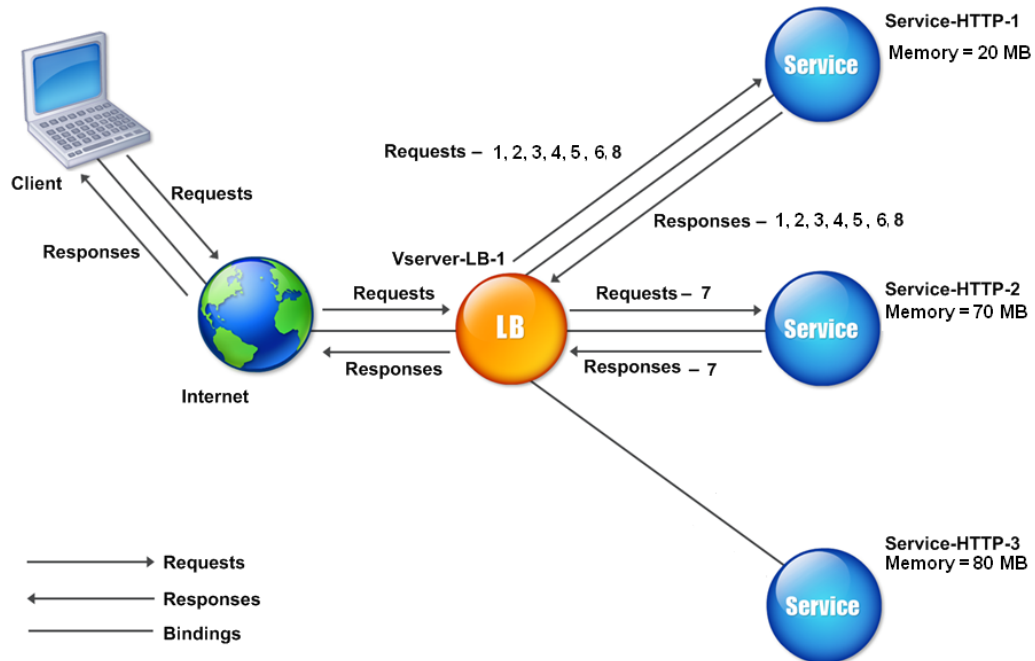

If each request uses 10 MB memory, the NetScaler appliance delivers requests as follows:

- Service-HTTP-1 receives the first, second, third, fourth, and fifth requests, because this service has the lowest N value.
- Service-HTTP-1 and Service-HTTP-2 now have the same load, so the virtual server reverts to the round robin method for these servers. Therefore, Service-HTTP-2 receives the sixth request, and Service-HTTP-1 receives the seventh request.
- Since Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 all now have the same load, the virtual server reverts to the round robin method for Service-HTTP-3 as well. Therefore, Service-HTTP-3 receives the eighth request.

The following table summarizes how N is calculated.

Request received	Service selected	Current N Value (Number of Active Transactions)	Remarks
Request-1	Service-HTTP-1; (N = 20)	N = 30	Service-HTTP-3 has the lowest N value.
Request-2	Service-HTTP-1; (N = 30)	N = 40	-
Request-3	Service-HTTP-1; (N = 40)	N = 50	-
Request-4	Service-HTTP-1; (N = 50)	N = 60	-
Request-5	Service-HTTP-1; (N = 60)	N = 70	-
Request-6	Service-HTTP-1; (N = 70)	N = 80	Service-HTTP-2 and Service-HTTP-3 have the same N values.
Request-7	Service-HTTP-2; (N = 70)	N = 80	Service-HTTP-3 have the same N values.
Request-8	Service-HTTP-1; (N = 80)	N = 90	Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 have the same N values.

If different weights are assigned to the services, the custom load algorithm considers both the load on each service and the weight assigned to each service. It selects a service by using the value (Nw) in the following expression:

$$Nw = (N) * (10000 / \text{weight})$$

As in the preceding example, suppose Service-HTTP-1 is assigned a weight of 4, Service-HTTP-2 is assigned a weight of 3, and Service-HTTP-3 is assigned a weight of 2. If each request uses 10 MB memory, the NetScaler appliance delivers requests as follows:

- Service-HTTP-1 receives the first, second, third, fourth, fifth, sixth, seventh, and eighth requests, because this service has the lowest Nw value.
- Service-HTTP-2 receives the ninth request, because this service has the lowest Nw value.

Service-HTTP-3 has the highest Nw value, and is therefore not considered for load balancing.


The following table summarizes how Nw is calculated.

Request received	Service selected	Current Nw Value (Number of Active Transactions) * (10000 / Weight)	Remarks
Request-1	Service-HTTP-1; (Nw = 50000)	Nw = 75000	Service-HTTP-1 has the lowest Nw value.
Request-2	Service-HTTP-1; (Nw = 5000)	Nw = 100000	-
Request-3	Service-HTTP-1; (Nw = 15000)	Nw = 125000	-
Request-4	Service-HTTP-1; (Nw = 20000)	Nw = 150000	-
Request-5	Service-HTTP-1; (Nw = 23333.34)	Nw = 175000	-
Request-6	Service-HTTP-1; (Nw = 25000)	Nw = 200000	-
Request-7	Service-HTTP-1; (Nw = 23333.34)	Nw = 225000	-
Request-8	Service-HTTP-1; (Nw = 25000)	Nw = 250000	-
Request-9	Service-HTTP-2; (Nw = 233333.34)	Nw = 266666.67	Service-HTTP-2 has the lowest Nw value.

Service-HTTP-1 is selected for load balancing when it completes its active transactions or when the Nw value of other services (Service-HTTP-2 and Service-HTTP-3) is equal to 400,000.

The following diagram illustrates how the NetScaler appliance uses the custom load method when weights are assigned.

Figure 3. How the Custom Load Method Works When Weights Are Assigned

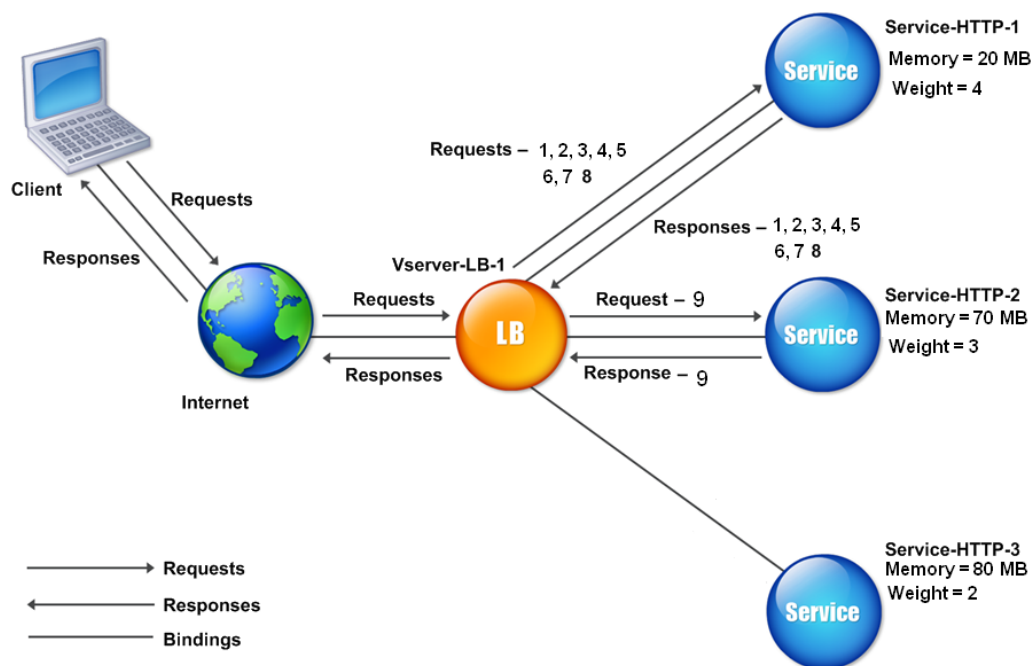

To configure the custom load method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

Static proximity method

June 12, 2023

When a virtual server is configured to use the static proximity method, it selects the service that best matches the proximity criteria.

For the static proximity method to work, you must either configure the NetScaler appliance to use an existing static proximity database populated through a location file or add custom entries to the static proximity database. After adding custom entries, you can set their location qualifiers. After configuring the database, you are ready to specify static proximity as the load balancing method.

For more details, see the following topics.

- [Adding a Location File to Create a Static Proximity Database](#)
- [Adding Custom Entries to a Static Proximity Database](#)

- [Setting the Location Qualifiers](#)
- Specifying the Static Proximity method

Specifying the Proximity Method

When you have configured the static proximity database, you are ready to specify static proximity as the GLSB method.

To specify static proximity by using the command line interface

At the command prompt, type the following commands to configure static proximity and verify the configuration:

```
1 set lb vserver <name> -lbMethod STATICPROXIMITY
2
3 show lb vserver <name>
```

Example:

```
1 set lb vserver Vserver-LB-1 -lbMethod STATICPROXIMITY
2
3 show lb vserver
```

To specify static proximity by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and select the virtual server.
2. Click **Edit** and expand the **Method** section.
3. In the **Load Balancing Method** list, select **STATICPROXIMITY**.

Note

Enable the `proximityFromSelf` parameter to use the Netscaler's loopback IP address instead of the client's IP address to fetch the closest server location for static proximity load balancing or GSLB decision.

Token method

August 13, 2024

A load balancing virtual server configured to use the token method bases its selection of a service on the value of a data segment extracted from the client request. The data segment is called the token. You configure the location and size of the token. For subsequent requests with the same token, the virtual server chooses the same service that handled the initial request.

This method is content aware. It operates differently for TCP, HTTP, and HTTPS connections. For HTTP or HTTPS services, the token is found in the HTTP headers, the URL, or the BODY. To locate the token, you specify or create a classic or advanced expression. For more information on classic or advanced expressions, see [Policy Configuration and Reference](#).

For HTTP services, the virtual server searches for the configured token in the first 24 kilobytes (KB) of the TCP payload. For non-HTTP (TCP, SSL, and SSL_TCP) services, the virtual server searches for the configured token in the first 16 packets if the total size of the 16 packets is less than 24 KB. But if the total size of the 16 packets is greater than 24 KB, the appliance searches for the token in the first 24 KB of payload. You can use this load balancing method across virtual servers of different types to make sure that requests presenting the same token are directed to appropriate services, regardless of the protocol used.


Note:

Starting from release 14.1 build 29.x, token method is supported for DNS, DNS_TCP, DOT, and UDP services.

For example, consider a load balancing setup consisting of servers that contain Web content. You want to configure the NetScaler appliance to search for a specific string (the token) inside the URL query portion of the request. Server-1 has two services, Service-HTTP-1 and Service-TCP-1, and Server-2 has two services, Service-HTTP-2 and Service-TCP-2. The TCP services are bound to Vserver-LB-2, and the HTTP services are bound to Vserver-LB-1.

If Vserver-LB-1 receives a request with the token AA, it selects the service Service-HTTP-1 (bound to server-1) to process the request. If Vserver-LB-2 receives a different request with the same token (AA), it directs this request to the service Service-TCP-1. The following diagram illustrates this process.

Figure 1. How the Token Method Works

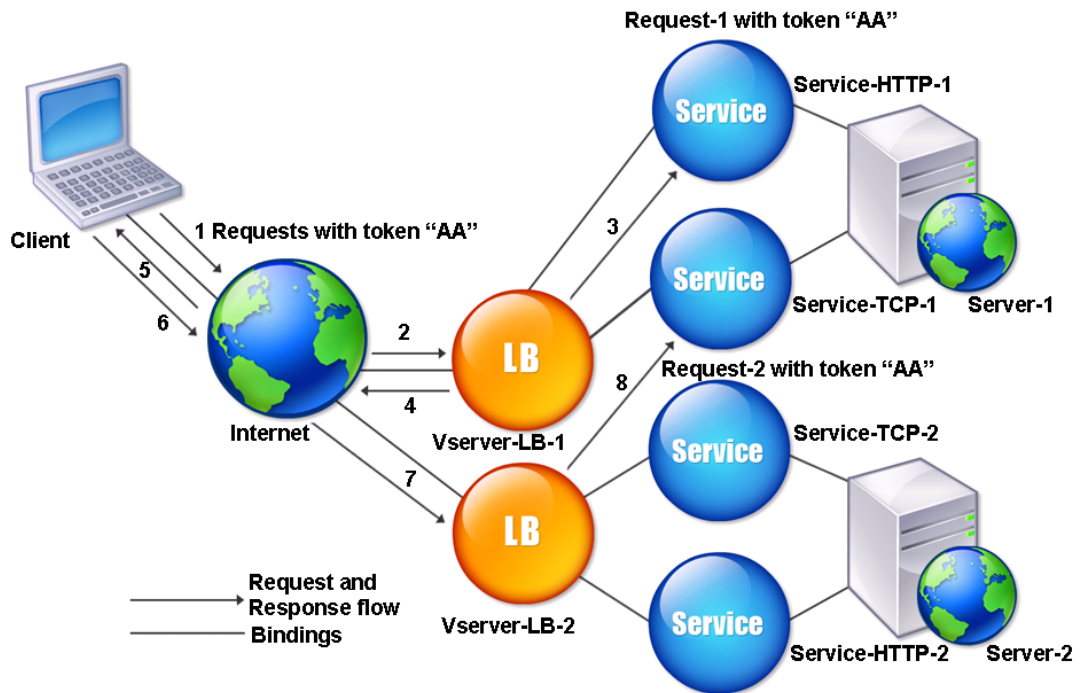

To configure the Token load balancing method by using the command line interface

At the command prompt, type the following commands to configure the token load balancing method and verify the configuration:

```
1 set lb vserver <name> -lbMethod TOKEN -rule <rule> -datalength <length>
   -dataoffset <offset>
2
3 show lb vserver <name>
```

Example:

```
1 set lb vserver LB-VServer-1 -lbMethod TOKEN -rule 'AA' -datalength 2 -
   dataoffset 25
2
3 show lb vserver LB-VServer-1
```

To configure the token load balancing method by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.

2. In Advanced Settings, click Method
3. In the Load Balancing Method list, select Token, and specify an expression.

Least requests method

January 16, 2024


A load balancing virtual server configured to use the least request method selects the service that has received the fewest requests.

For example, consider three services, Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3.

- Service-HTTP-1 is handling 3 requests.
- Service-HTTP-2 is handling 15 requests.
- Service-HTTP-3 is not handling any requests.

The following diagram illustrates how NetScaler uses the least requests method to choose a service for each request that it receives.

Figure 1. How the Least Request Load Balancing Method Works

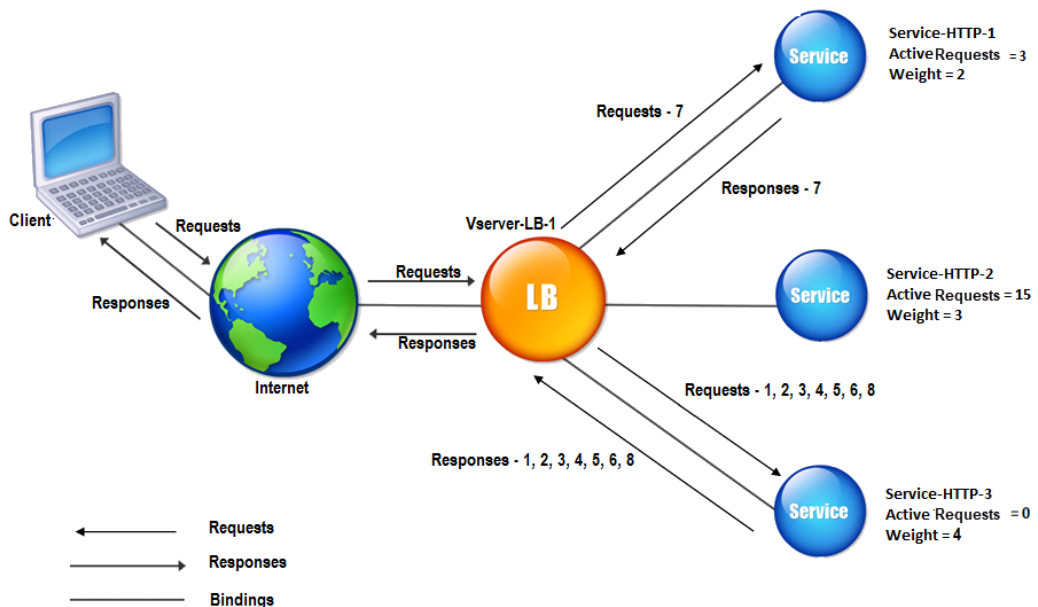

In this example, the virtual server selects the service for each incoming request by choosing the server with the fewest requests.

Requests are forwarded as follows:

- Service-HTTP-3 receives the first request, because it is not handling any request.
 Note: The service with no request is selected first.
- Service-HTTP-3 receives the second and third requests because the service has the next least number of requests.
- Service-HTTP-1 receives the fourth request because Service-HTTP-1 and Service-HTTP-3 have the same number of requests, the virtual server uses the round robin method to choose between them.
- Service-HTTP-3 receives the fifth request.
- Service-HTTP-1 receives the sixth request, and so on, until both Service-HTTP-1 and Service-HTTP-3 are handling the same number of requests as Service-HTTP-2. Then, NetScaler starts forwarding requests to Service-HTTP-2 when it is the least loaded service or its turn comes up in the round robin queue.

Note:

If requests to Service-HTTP-2 is completed, it might get new request before each of the other two services has 15 requests.

The following table explains how requests are distributed among the services in the load balancing setup.

Incoming requests	Service selected	Current number of requests	Remarks
Request-1	Service-HTTP-3; (N = 0)	1	Service-HTTP-3 has the fewest requests.
Request-2	Service-HTTP-3; (N = 1)	2	Service-HTTP-3 has the fewest requests.
Request-3	Service-HTTP-3; (N = 2)	3	-
Request-4	Service-HTTP-1; (N = 3)	4	Service-HTTP-1 and Service-HTTP-3 have the same number of requests.
Request-5	Service-HTTP-3; (N = 3)	4	Service-HTTP-1 and Service-HTTP-3 have the same number of requests.

Incoming requests	Service selected	Current number of requests	Remarks
Request-6	Service-HTTP-1;(N = 4)	5	-
Request-7	Service-HTTP-3; (N = 4)	5	-
Request-8	Service-HTTP-1; (N = 5)	6	-

Service-HTTP-2 is selected for load balancing when it completes all the requests, or when the other services (Service-HTTP-1 and Service-HTTP-3) have 15 or more requests each.

NetScaler can also use the least request method when weights are assigned to services. It selects a service by using the value (Nw) of the following expression:

$$Nw = (\text{Number of active requests}) * (10000 / \text{weight})$$

The following example shows how NetScaler selects a service for load balancing by using the least request method when weights are assigned to services. In the preceding example, suppose Service-HTTP-1 is assigned a weight of 2, Service-HTTP-2 is assigned a weight of 3, and Service-HTTP-3 is assigned a weight of 4. Requests are forwarded as follows:

- Service-HTTP-3 receives the first request because the service is not handling any requests.
 Note: If the services are not handling any requests, NetScaler uses the round robin method regardless of the weights assigned to each of the services.
- Service-HTTP-3 receives the second, third, fourth, fifth, and sixth requests because the service has the lowest Nw value.
- Service-HTTP-1 receives the seventh request. Because Service-HTTP-1 and Service-HTTP-3 now have the same Nw value, the appliance performs load balancing in a round robin manner. Therefore, Service-HTTP-3 receives the eighth request.

The following table explains how requests are distributed on the three-service load balancing setup that is described earlier.


Request Received	Service Selected	Current Nw (Number of requests) * (10000 / weight) value	Remarks
Request-1	Service-HTTP-3; (Nw = 0)	Nw = 2500	Service-HTTP-3 has the lowest Nw value.
Request-2	Service-HTTP-3; (Nw = 2500)	Nw = 5000	

Request Received	Service Selected	Current Nw (Number of requests) * (10000 / weight) value	Remarks
Request-3	Service-HTTP-3; (Nw = 5000)	Nw = 7500	
Request-4	Service-HTTP-3; (Nw = 7500)	Nw = 10000	
Request-5	Service-HTTP-3; (Nw = 10000)	Nw = 12500	
Request-6	Service-HTTP-3; (Nw = 12500)	Nw = 15000	
Request-7	Service-HTTP-1; (Nw = 15000)	Nw = 20000	Service-HTTP-1 and Service-HTTP-3 have the same Nw values
Request-8	Service-HTTP-3; (Nw = 15000)	Nw = 17500	

Service-HTTP-2 is selected for load balancing when it completes its requests or when the Nw value of other services (Service-HTTP-1 and Service-HTTP-3) is equal to 50000.

The following diagram illustrates how NetScaler uses the least request method when weights are assigned to the services.

Figure 2. Mechanism of the Least Requests Load Balancing Method when Weights are Assigned

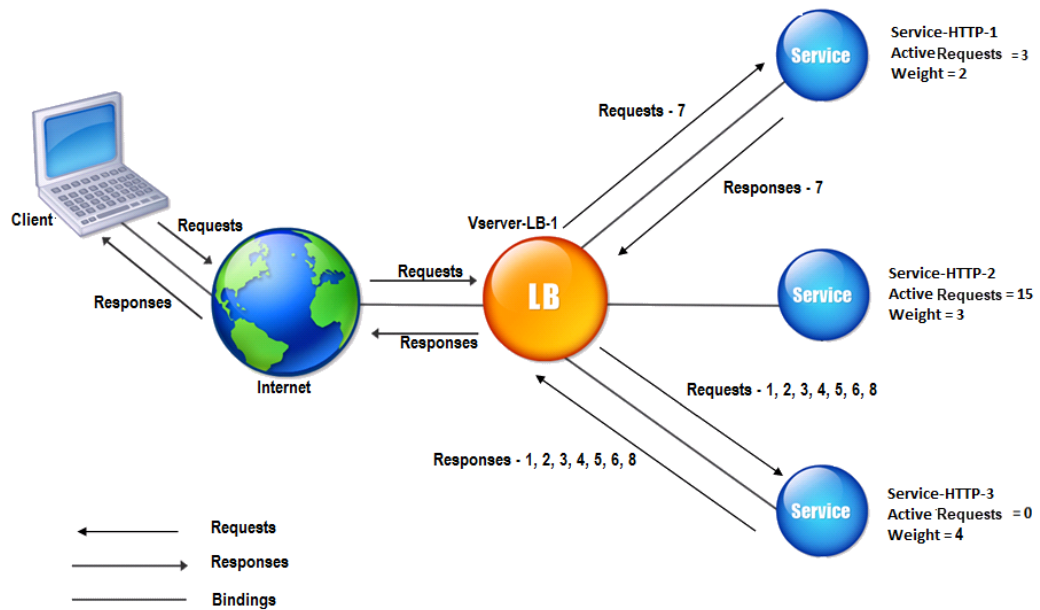

To configure the least request method, see [Configuring a Load Balancing Method that Does Not Include a Policy](#).

Configure a load balancing method that does not include a policy

May 2, 2023

After you select a load balancing algorithm for your load balancing setup, you must configure the NetScaler appliance to use that algorithm. You can configure it by using the CLI or by using the configuration utility.

Note:

The token method is policy based and requires more configuration than is described here. To configure the token method, see [Token method](#).

For some hash-based methods, you can mask an IP address to direct requests belonging to the same subnet to the same server. For more information, see [Hashing methods](#).

To set the load balancing method by using the command line interface

At the command prompt, type:

```
1 set lb vserver <name> -lbMethod <method>
```

Example:

```
1 set lb vserver Vserver-LB-1 -lbMethod LeastConnection
```

To set the load balancing method by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In Advanced Settings, click **Method**, and in the Load Balancing Method list, select a method.

Persistence and persistent connections

May 2, 2023

A load balancing stateless protocol, such as HTTP, disrupts the maintenance of state information about client connections if persistence is not configured. Different transmissions from the same client might be directed to different servers even though all the transmissions are part of the same session. You can configure persistence on a load balancing virtual server that handles certain types of Web applications, such as shopping cart applications.

Before you can configure persistence, you need to understand the different types of persistence, how they are used, and what their implications are. You then need to configure the NetScaler appliance to provide persistent connections for those websites and Web applications that require them.

You can also configure backup persistence, which takes effect if the primary type of persistence configured for a load balancing virtual server fails. You can configure persistence groups, so that a client transmission to any virtual server in a group can be directed to a server that has received previous transmissions from the same client.

For information about persistence with RADIUS load balancing, see [Configuring RADIUS Load Balancing with Persistence](#).

About Persistence

May 2, 2023

You can choose from among any of several types of persistence for a given load balancing virtual server, which then routes to the same service all connections from the same user to your shopping

cart application, web-based email, or other network application. The persistence session remains in effect for the time which you specify.

If a server participating in a persistence session goes DOWN, the load balancing virtual server uses the configured load balancing method to select a new service, and establishes a new persistence session with the server represented by that service. If the server goes OUT OF SERVICE, it continues to process existing persistence sessions, but the virtual server does not direct any new traffic to it. After the shutdown period elapses, the virtual server ceases to direct connections from existing clients to the service, closes existing connections, and redirects those clients to new services if necessary.

Depending on the persistence type you configure, the NetScaler appliance might examine the source IPs, destination IPs, SSL session IDs, Host or URL headers, or some combination of these things to place each connection in the proper persistence session. It might also base persistence on a cookie issued by the Web server, on an arbitrarily assigned token, or on a logical rule. Almost anything that allows the appliance to match connections with the proper persistence session and is used as the basis for persistence.

The following table summarizes the persistence types available on the NetScaler appliance.

Persistence Type	Description
Source IP	SOURCEIP. Connections from the same client IP address are parts of the same persistence session.
HTTP Cookie	COOKIEINSERT. Connections that have the same HTTP Cookie header are parts of the same persistence session.
SSL Session ID	SSLSESSION. Connections that have the same SSL Session ID are parts of the same persistence session.
URL Passive	URLPASSIVE. Connections to the same URL are treated as parts of the same persistence session.
Custom Server ID	CUSTOMSERVERID. Connections with the same HTTP HOST header are treated as parts of the same persistence session.
Destination IP	DESTIP. Connections to the same destination IP are treated as parts of the same persistence session.
Source and Destination IPs	SRCIPDESTIP. Connections that are both from the same source IP and to the same destination IP are treated as parts of the same persistence session.

Persistence Type	Description
SIP Call ID	CALLID. Connections that have the same call ID in the SIP header are treated as parts of the same persistence session.
RTSP Session ID	RTSPSID. Connections that have the same RTSP Session ID are treated as parts of the same persistence session.
User-Defined Rule	RULE. Connections that match a user-defined rule are treated as parts of the same persistence session.

Table 1. Types of Persistence

Depending on the type of persistence that you have configured, the virtual server can support either 250,000 simultaneous persistent connections or any number of persistent connections up to the limits imposed by the amount of RAM on your NetScaler appliance. The following table shows which types of persistence fall into each category.

Persistence Type	Number of Simultaneous Persistent Connections Supported
Source IP, SSL Session ID, Rule, destination IP, source IP/destination IP, SIP Call ID, RTSP Session ID	250 K
Cookie, URL Server ID, Custom Server ID	Memory limit. In CookieInsert, if timeout is not 0, the number of connections is limited by memory.

Table 2. Persistence Types and Numbers of Simultaneous Connections Supported

Some types of persistence are specific to particular types of virtual server. The following table lists each type of persistence and indicates which types of persistence are supported on which types of virtual server.

Persistence Type	HTTP	HTTPS	TCP	UDP/IP	SSL_Bridge	SSL_TCP	RTSP	SIP_UDP
SOURCEIP	YES	YES	YES	YES	YES	YES	NO	NO
COOKIEINSERT	YES	YES	NO	NO	NO	NO	NO	NO
SSLSESSION	NO	YES	NO	NO	YES	YES	NO	NO

Persistence								
Type	HTTP	HTTPS	TCP	UDP/IP	SSL_BridgeSSL_TCP	RTSP	SIP_UDP	
URLPASSIVES		YES	NO	NO	NO	NO	NO	NO
CUSTOMSERVERID		YES	NO	NO	NO	NO	NO	NO
RULE	YES	YES	YES	NO	NO		NO	NO
SRCIPDESTIPS		YES	YES	YES	YES	YES	NO	NO
DESTIP	YES	YES	YES	YES	YES	YES	NO	NO
CALLID	NO	NO	NO	NO	NO	NO	NO	YES
RTSPID	NO	NO	NO	NO	NO	NO	YES	NO

Table 3. Relationship of Persistence Type to Virtual Server Type

Source IP address persistence

May 2, 2023

When source IP persistence is configured, the load balancing virtual server uses the configured load balancing method to select a service for the initial request, and then uses the source IP address (client IP address) to identify subsequent requests from that client and send them to the same service. You can set a time-out value, which specifies the maximum inactivity period for the session. When the time-out value expires, the session is discarded, and the configured load balancing algorithm is used to select a new server.

Caution: In some circumstances, using persistence based on source IP address can overload your servers. All requests to a single website or application are routed through the single gateway to the NetScaler appliance, even though they are then redirected to multiple locations. In multiple proxy environments, client requests frequently have different source IP addresses even when they are sent from the same client, resulting in rapid multiplication of persistence sessions where a single session must be created. This issue is called the “Mega Proxy problem.” You can use HTTP cookie-based persistence instead of Source IP-based persistence to prevent this from happening.

To configure persistence based on Source IP Address, see [Configuring Persistence Types That Do Not Require a Rule](#).

Note: If all incoming traffic comes from behind a Network Address Translation (NAT) device or proxy, the traffic appears to the NetScaler appliance to come from a single source IP address. This prevents Source IP persistence from functioning properly. Where this is the case, you must select a different persistence type.

HTTP cookie persistence

November 4, 2024

When HTTP cookie persistence is configured, the NetScaler appliance sets a cookie in the HTTP headers of the initial client request. The cookie contains the IP address and port of the service selected by the load balancing algorithm. As with any HTTP connection, the client then includes that cookie with any subsequent requests.

When the NetScaler appliance detects the cookie, it forwards the request to the service IP and port in the cookie, maintaining persistence for the connection. You can use this type of persistence with virtual servers of type HTTP or HTTPS. This persistence type does not consume any appliance resources and therefore can accommodate an unlimited number of persistent clients.

Note: If the client's Web browser is configured to refuse cookies, HTTP cookie-based persistence does not work. It might be advisable to configure a cookie check on the website, and warn clients that do not appear to be storing cookies properly that they need to enable cookies for the website if they want to use it.

The format of the cookie that the NetScaler appliance inserts is:

```
NSC_XXXX=<ServiceIP ><ServicePort>
```

Where:

- NSC_XXXX is the virtual server ID that is derived from the virtual server name.
- ServiceIP and ServicePort are encoded representations of the service IP address and service port, respectively. The IP address and port are encoded separately.

You can set a time-out value for this type of persistence to specify an inactivity period for the session. When the connection has been inactive for the specified period, the NetScaler appliance discards the persistence session. Any subsequent connection from the same client results in a new server being selected based on the configured load balancing method, and a new persistence session being established.

Note: If you set the time-out value to 0, the NetScaler appliance does not specify an expiration time, but sets a session cookie that is not saved when the client's browser is shut down.

By default, the NetScaler appliance sets HTTP version 0 cookies for maximum compatibility with client browsers. (Only certain HTTP proxies understand version 1 cookies; most commonly used browsers do not.) You can configure the appliance to set HTTP version 1 cookies, for compliance with RFC2109. For HTTP version 0 cookies, the appliance inserts the cookie expiration date and time as an absolute Coordinated Universal Time (GMT). It calculates this value as the sum of the current GMT time on the appliance and the time-out value. For HTTP version 1 cookies, the appliance inserts a relative

expiration time by setting the “Max-Age” attribute of the HTTP cookie. In this case, the client’s browser calculates the actual expiration time.

To configure persistence based on a cookie inserted by the appliance, see [Configuring Persistence Types That Do Not Require a Rule](#).

In the HTTP cookie, the appliance by default sets the `HTTPOnly` flag to indicate that the cookie is nonscriptable and must not be revealed to the client application. Therefore, a client-side script cannot access the cookie, and the client is not susceptible to cross-site scripting.

Certain browsers, however, do not support the `HTTPOnly` flag and, therefore, might not return the cookie. As a result, persistence is broken. For browsers that do not support the flag, you can omit the `HTTPOnly` flag in the persistence cookie.

To change the `HTTPOnly` flag setting by using the CLI

At the command prompt, type:

```
1 set lb parameter -httpOnlyCookieFlag (ENABLED|DISABLED)
```

Example:

```
1 > set lb parameter -httpOnlyCookieFlag disabled
2   Done
3 > show lb parameter
4   Global LB parameters:
5       Persistence Cookie HttpOnly Flag: DISABLED
6       Use port for hash LB: YES
7   Done
```

To change the `HTTPOnly` flag setting by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Configure Load Balancing Parameters**, and select or clear the **Persistence Cookie HTTPOnly** flag.

Encrypting the Cookie

From release 10.5 build 55.8, you can encrypt the cookie in addition to any SSL encryption.

To encrypt the cookie by using the command line interface, at the command prompt, type

```
1 set lb parameter -UseEncryptedPersistenceCookie ENABLED -
   cookiePassphrase test
```

To encrypt the cookie by using the configuration utility

1. Navigate to **Traffic Management > Change Load Balancing Parameters**, and select **Encode Persistence Cookie Values** and enter a passphrase in **Cookie Passphrase**.

SSL session ID persistence

May 2, 2023

When SSL session ID persistence is configured, the NetScaler appliance uses the SSL session ID, which is part of the SSL handshake process, to create a persistence session before the initial request is directed to a service. The load balancing virtual server directs subsequent requests that have the same SSL session ID to the same service. This type of persistence is used for SSL bridge services.

Note:

There are two issues that users must consider before choosing this type of persistence. First, this type of persistence consumes resources on the NetScaler appliance, which limits the number of concurrent persistence sessions that it can support. If you expect to support multiple persistence sessions, you might want to choose another type of persistence.

Second, if the client and the load-balanced server must renegotiate the session ID during their transactions, persistence is not maintained, and a new persistence session is created when the client's next request is received. This might result in the client's activity on the website being interrupted and the client might be asked to reauthenticate or restart the session. It might also result in large numbers of abandoned sessions if the timeout is set to too large a value.

To configure persistence based on SSL session ID, see [Configuring Persistence Types That Do Not Require a Rule](#).

Note

SSL session ID persistence is not supported with session tickets.

Back up persistence support for SSL session ID

From NetScaler release 12.0 build 56.20, source IP persistence is supported as a backup persistence type for SSL session ID persistence. If the client and load-balanced server renegotiate the session, and source IP persistence is configured as the backup persistence, client requests are forwarded to the same server.

To support backup persistence for SSL session ID, the NetScaler appliance creates session entries for both source IP and SSL session ID when a client request is received for the first time. For the subsequent requests containing the same session ID, the SSL session ID is used. However, when the client and the load-balanced server renegotiate the session, the client request is forwarded to the same server by using the Source IP persistence and a new SSL Session ID persistence entry is created.

For information about configuring backup persistence, see [Configuring Backup Persistence](#).

Diameter AVP number persistence

May 2, 2023

You can use persistence based on the Attribute-Value Pair (AVP) number of a Diameter message to create persistent Diameter sessions. When the NetScaler appliance finds the AVP in the Diameter message, it creates a persistence session based on the value of the AVP. All subsequent messages that match the value of the AVP are directed to the previously selected server. If the value of the AVP does not match the persistence session, a new session is created for the new value.

Note: If the AVP number is not defined in Diameter base-protocol RFC 6733, and if the number is nested inside a grouped AVP, you must define a sequence of AVP numbers (maximum of 3) in parent-to-child order. For example, if the persist AVP number X is nested inside AVP Y, which is nested in Z, define the list as Z Y X.

To configure Diameter-based persistence on a virtual server by using the command line interface

At the command prompt, type the following command:

```
1 set lb vserver <name> -PersistenceType <type-> persistAVPno <
  positive_integer>
```

Example:

```
1 set lb vserver diameter_vs -persistenceType DIAMETER -persistAVPno 263
```

Custom server ID persistence

May 2, 2023

In the Custom Server ID persistence method, the Server ID specified in the client request is used to maintain persistence. For this type of persistence to work, you must first set a server ID on the services. The NetScaler appliance checks the URL of the client request and connects to the server associated with the specified server ID. The service provider must make sure that the users are aware of the server IDs to be provided in their requests for specific services.

For example, if your site provides different types of data, such as images, text, and multimedia, from different servers, you can assign each server a server ID. On the NetScaler appliance, you specify those server IDs for the corresponding services, and you configure custom server ID persistence on the corresponding load balancing virtual server. When sending a request, the client inserts the server ID into the URL indicating the required type of data.

To configure custom server ID persistence:

- In your load balancing setup, assign a server ID to each service for which you want to use the user-defined server ID to maintain persistence. Alphanumeric server IDs are allowed.
- Specify rules, in the default-syntax expression language, to examine the URL queries for the server ID and forward traffic to the corresponding server.
- Configure custom server ID persistence.

Note: The persistence time-out value does not affect the Custom Server ID persistence type. There is no limit on the maximum number of persistent clients because this persistence type does not store any client information.

Example:

In a load balancing setup with two services, assign server ID 2345-photo-56789 to Service-1, and server ID 2345-drawing-abb123 to Service-2. Bind these services to a virtual server named Web11.

```
1 set service Service-1 10.102.29.5 -CustomServerID 2345-photo-56789
2
3 set service Service-2 10.102.29.6 -CustomServerID 2345-drawing-abb123
```

On virtual server Web11, enable Custom Server ID persistence.

Create the following expression so that all URL queries containing the string “sid=” are examined.

```
HTTP.REQ.URL.AFTER_STR("sid=")
```

Example:

```
1 set lb vserver Web11 -persistenceType customserverID -rule "HTTP.REQ.
   URL.AFTER_STR("sid=")"
2
3 bind lb vserver Web11 Service-[1-2]
```

When a client sends a request with the following URL to the IP address of Web11, the appliance directs the request to Service-2 and honors persistence.

Example:

`http://www.example.com/index.asp?&sid=2345-drawing-abb123`

For more information about default-syntax policy expressions, see the [Policy Configuration and Reference](#).

To configure custom server ID persistence by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Open the service and set a server ID.
3. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
4. In Advanced Settings, select Persistence.
5. Select CUSTOMESERVERID, and specify an expression.

IP address persistence

May 2, 2023

You can base persistence on Destination IP addresses, or on both Source IP and Destination IP Addresses.

Persistence Based on Destination IP Addresses

With destination IP address-based persistence, when the NetScaler appliance receives a request from a new client, it creates a persistence session based on the IP address of the service selected by the virtual server (the destination IP address). Later, it directs requests to the same destination IP to the same service. This type of persistence is used with link load balancing. For more information about link load balancing, see [Link Load Balancing](#).

The time-out value for destination IP persistence is the same as that for source IP persistence, described in [Persistence Based on Source IP Address](#).

To configure persistence based on the destination IP address, see [Configuring Persistence Types That Do Not Require a Rule](#).

Persistence Based on Source and Destination IP Addresses

With source and destination IP address-based persistence, when the NetScaler appliance receives a request, it creates a persistence session based on both the IP address of the client (the source IP address)

and the IP address of the service selected by the virtual server (the destination IP address). Later, it directs requests from the same source IP and to the same destination IP to the same service.

The time-out value for destination IP persistence is the same as that for source IP persistence, described in [Persistence Based on Source IP Address](#).

To configure persistence based on both source and destination IP addresses, see [Configuring Persistence Types That Do Not Require a Rule](#).

SIP Call ID persistence

May 2, 2023

With SIP Call ID persistence, the NetScaler appliance chooses a service based on the call ID in the SIP header. This enables it to direct packets for a particular SIP session to the same service and, therefore, to the same load balanced server. This persistence type is applicable specifically to SIP load balancing. For more information about SIP load balancing, see [Monitoring SIP Services](#).

To configure persistence based on SIP Call ID, see [Configuring Persistence Types That Do Not Require a Rule](#).

RTSP session ID persistence

May 2, 2023

With RTSP Session ID persistence, when the NetScaler appliance receives a request from a new client, it creates a persistence session based on the Real-Time Streaming Protocol (RTSP) session ID in the RTSP packet header, and then directs the request to the RTSP service selected by the configured load balancing method. It directs subsequent requests that contain the same session ID to the same service. This persistence type is applicable specifically to SIP load balancing. For more information about SIP load balancing, see [Monitoring SIP Services](#).

Note: RTSP Session ID persistence is configured by default on RTSP virtual servers, and you cannot modify that setting.

Sometimes different RTSP servers issue the same session IDs. When this happens, unique sessions cannot be created between the client and the RTSP server by using only the RTSP session ID. If you have multiple RTSP servers that might issue the same session IDs, you can configure the appliance to append the server IP address and port to the session ID, creating a unique token that can be used to establish persistence. This is called session ID mapping.

To configure persistence based on RTSP Session IDs, see [Configuring Persistence Types That Do Not Require a Rule](#).

Important: If you need to use session ID mapping, you must set the following parameter when configuring each service within the load balancing setup. Also, make sure that no non-persistent connections are routed through the RTSP virtual server.

Configure URL passive persistence

October 8, 2023

With URL Passive persistence, when the NetScaler appliance receives a request from a client, it extracts the server IP address-port information (expressed as a single hexadecimal number) from the client request.

URL passive persistence requires configuring an advanced expression that specifies the query element that contains the server IP address-port information. For more information about classic and advanced policy expressions, see [Policies and Expressions](#).

The following expression configures the appliance to examine requests for URL queries that contain the string “urlp=”, extract the server IP address-port information, convert it from a hexadecimal string to an IP and port number, and forward the request to the service configured with this IP address and port number.

```
HTTP.REQ.URL.AFTER_STR("urlp=")
```

If URL passive persistence is enabled and the previous expression is configured, a request with the following URL and server IP address-port string is directed to 10.102.29.10:80.

```
http://www.example.com/index.asp?urlp=0A661D0A0050
```

The persistence time-out value does not affect this persistence type. Persistence is maintained as long as the server IP address-port information can be extracted from client requests. This persistence type does not consume any appliance resources, so it can accommodate an unlimited number of persistent clients.

To configure URL passive persistence, you first configure persistence as described in [Configuring Persistence Types That Do Not Require a Rule](#). You set the persistence type to URLPASSIVE. You then perform the following procedures.

To configure URL passive persistence by using the CLI

At the command prompt, type:

```
1 set lb vserver <vserverName> [-persistenceType <persistenceType>] [-rule <expression>]
```

Example:

```
1 set lb vserver LB-VServer-1 -persistenceType URLPASSIVE - rule HTTP.REQ.URL.AFTER_STR( " urlp= " )
```

To configure persistence on a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In the Persistence section, choose the persistence type that meets your requirement. The most suitable persistence type for the virtual server is available as option buttons. Other persistence types that are applicable to the specific virtual server type can be selected from the Others list.

Note:

Prior to NetScaler release 12.0 build 56.20, all persistence types are available in a single Persistence drop-down list without any option buttons.

Configure persistence based on user-defined rules

August 13, 2024

Warning:

The use of classic expressions for the persistence rule in the load balancing feature is removed and no longer available for the filter rule on the NetScaler appliance release 13.1 onwards. Citrix recommends that you do not use these policy expressions through the NetScaler command line interface, NetScaler GUI, or Nitro automation. For more information, see Table 1 and Table 2 in the [Classic Policy Deprecation FAQ](#) page.

When rule based persistence is configured, the NetScaler appliance creates a persistence session based on the contents of the matched rule before directing the request to the service selected by the configured load balancing method. Later, it directs all requests that match the rule to the same service. You can configure rule based persistence for services of type HTTP, SSL, RADIUS, ANY, TCP, and SSL_TCP.

Note:

Starting from release 14.1 build 29.x, you can configure rule based persistence for services of type DNS, DNS_TCP, DOT, and UDP services.

Rule based persistence requires a classic or Advanced policy expression. You can use a classic expression to evaluate request headers, or you can use a Advanced policy expression to evaluate request headers, Web form data in a request, response headers, or response bodies. For example, you can use a classic expression to configure persistence based on the contents of the HTTP Host header. You can also use a Advanced policy expression to configure persistence based on application session information in a response cookie or custom header. For more information on creating and using classic and Advanced policy expressions, see [Policies and Expressions](#).

The expressions that you can configure depend on the type of service for which you are configuring rule based persistence. For example, certain RADIUS-specific expressions are not allowed for protocols other than RADIUS, and TCP-option based expressions are not allowed for service types other than the ANY type. For TCP and SSL_TCP service types, you can use expressions that evaluate TCP/IP protocol data, Layer 2 data, TCP options, and TCP payloads.

Note: For a use case that involves configuring rule based persistence based on Financial Information eXchange (“FIX”) Protocol data transmitted over TCP, see [Configuring Rule Based Persistence Based on a Name-Value Pair in a TCP Byte Stream](#).

Rule based persistence can be used for maintaining persistence with entities such as Citrix SD-WAN appliances, Citrix SD-WAN plug-ins, cache servers, and application servers.

Note: On an ANY virtual server, you cannot configure rule-based persistence for the responses.

To configure persistence based on a user-defined rule, you first configure persistence as described in [Configuring Persistence Types That Do Not Require a Rule](#), and set the persistence type to RULE. You can then perform the following procedures. You can configure rule based persistence by using the configuration utility or the CLI.

To configure persistence based on user-defined rules by using the CLI

At the command prompt, type:

```
1 set lb vsver <vsverName> [-rule <expression>][-resRule <expression >]
```

Example:

```
1 set lb vsver vsvr_name - rule http.req.header("cookie").value(0).  
   typecast_nvlist_t('=';').value("server")  
2
```

```
3 set lb vserver vsvr_name -resrule http.res.header("set-cookie").value  
   (0).typecast_nvlist_t('=',';').value("server")
```

To configure persistence based on user-defined rules by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In the Persistence section, choose the persistence type that meets your requirement. The most suitable persistence type for the virtual server is available as option buttons. Other persistence types that are applicable to the specific virtual server type can be selected from the Others list.

Note

Prior to NetScaler release 12.0 build 56.20, all persistence types are available in a single Persistence drop-down list without any option buttons.

Example: Classic Expression for a Request Payload

The following classic expression creates a persistence session based on the presence of a User-Agent HTTP header that contains the string, “MyBrowser”, and directs any subsequent client requests that contain this header and string to the same server that was selected for the initial request.

```
1 http header User-Agent contains MyBrowser
```

Example: Advanced policy Expression for a Request Header

The following Advanced policy expression does the same thing as the previous classic expression.

```
HTTP.REQ.HEADER("User-Agent").CONTAINS ("MyBrowser")
```

Example: Advanced policy Expression for a Response Cookie

The following expression examines responses for “server” cookies, and then directs any requests that contain that cookie to the same server that was selected for the initial request.

```
HTTP.RES.HEADER("SET-COOKIE").VALUE(0).TYPECAST_NVLIST_T('=',';').VALUE("server")
```

Configure persistence types that do not require a rule

October 8, 2023

To configure persistence, you must first set up a load balancing virtual server, as described in [Setting Up Basic Load Balancing](#). You then configure persistence on the virtual server.

To configure persistence on a virtual server by using the CLI

At the command prompt, type the following commands to configure persistence and verify the configuration:

```
1 set lb vserver <name> -PersistenceType <type> [-timeout <integer>]
2
3 show lb vserver
```

Example:

```
1 set lb vserver Vserver-LB-1 -persistenceType SOURCEIP -timeout 60
2
3 show lb vserver
```

Timeout is the time period for which a persistence session is in effect. The timeout default and minimum values (in minutes) vary based on the persistence type as listed in the following table.

persistence type	Default value	Minimum value	Maximum value
Cookie insert/group cookie insert	2	0	1440
Other persistence types	2	2	1440

Note

- Group cookie insert persistence type can be set on the load balancing group.
- For IP-based persistence, you can also set the persistMask parameter.
- The persistence type by default is set to NONE.

To configure persistence on a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In the Persistence section, choose the persistence type that meets your requirement. The most suitable persistence type for the virtual server is available as option buttons. Other persistence types that are applicable to the specific virtual server type can be selected from the **Others** list.

Note Prior to NetScaler release 12.0 build 56.20, all persistence types are available in a single Persistence drop-down list without any option buttons.

Configure backup persistence

April 19, 2021

You can configure a virtual server to use the source IP persistence type when the primary persistence type fails.

The following table describes the combinations of primary and secondary backup persistence types, and the conditions when the backup persistence is used.

Primary persistence	Backup persistence	When the primary persistence lookup fails...
Cookie Insert	Source IP	The appliance falls back to source-IP based persistence only when the client browser does not return any cookie in the request. However, if the browser returns a cookie (not necessarily the persistence cookie) it is assumed that the browser supports cookies and hence backup persistence is not triggered.
Rule	Source IP	The appliance uses source-IP based persistence when the parameter specified in the rule is missing in the incoming request.

Note

- If the primary persistence type is HTTP-cookie based persistence, and the backup persistence type is Source IP-based, you can set a timeout value for backup persistence. For instructions, see [Setting a Timeout Value for Idle Client Connections](#).
- You cannot set a timeout value for backup persistence when the primary persistence is rule

based, because in that case the timeout value for secondary persistence must be the same as for the primary persistence. Therefore, the primary and secondary expire at the same time.

To set backup persistence for a virtual server by using the command line interface

At the command prompt, type:

```
1 set lb vserver <name> -persistenceType <PersistenceType> -  
   persistenceBackup <BackupPersistenceType>
```

Example:

```
1 set lb vserver Vserver-LB-1 -persistenceType CookieInsert -  
   persistenceBackup SourceIP  
2  
3 set lb vserver Vserver-LB-1 -persistenceType sslsession -  
   persistenceBackup SourceIP  
4  
5 set lb vserver Vserver-LB-1 - persistenceType RULE - rule http.req.  
   header("User-Agent").value(0).contains("MyBrowser") -  
   persistenceBackup SOURCEIP  
6  
7 set lb vserver Vserver-LB-1 -persistenceType sslsession -  
   persistenceBackup SourceIP
```

To set backup persistence for a virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In **Advanced Settings**, select **Persistence**, and specify a backup persistence type.

Note: The primary persistence must be set to COOKIEINSERT, RULE, or SSLSESSION.

Configure persistence groups

September 21, 2020

When you have load-balanced servers that handle several different types of connections (such as Web servers that host multimedia), you can configure a virtual server group to handle these connections. To create a virtual server group, you bind different types of virtual servers, one for each type of connection that your load balanced servers accept, into a single group. You then configure a persistence type for the entire group.

You can configure either source IP-based persistence or HTTP cookie-based persistence for persistence groups. After you set persistence for the entire group, you cannot change it for individual virtual servers in the group. If you configure persistence on a group and then add a new virtual server to the group, the persistence of the new virtual server is changed to match the persistence setting of the group.

When persistence is configured on a group of virtual servers, persistence sessions are created for initial requests, and subsequent requests are directed to the same service as initial request, regardless of the virtual server in the group that receives each client request.

When you add a virtual server that has persistence sessions to a load balancing group with a different persistence type, the existing persistent sessions specific to an old persistence type are deleted. The persistent sessions decide whether the traffic must go to the same virtual server or to a different server. Therefore, existing established connections are not impacted.

The persistence type of a load balancing group is applied to all the virtual servers bound to that group, irrespective of the virtual servers' protocol type. A load balancing group supports the following persistence types:

- SourceIP
- CookieInsert
- Rule

Some virtual servers support only certain persistence types. For example, a virtual server of type SSL_BRIDGE can use only SourceIP persistence type for an LB group.

If you configure HTTP cookie-based persistence, the domain attribute of the HTTP cookie is set. This setting causes the client software to add the HTTP cookie into client requests if different virtual servers have different public host names. For more information about CookieInsert persistence type, see [Persistence Based on HTTP Cookies](#).

To create a virtual server persistency group by using the command line interface

At the command prompt, type:

```
1 bind lb group <vServerGroupName> <vServerName> -persistenceType <PersistenceType>
```

Example:

```
1 bind lb group Vserver-Group-1 Vserver-LB-1 -persistenceType CookieInsert
```

To modify a virtual server group by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Persistency Groups**, create a persistency group, and specify the virtual servers that must be part of this group.

To modify a virtual server group by using the command line interface

At the command prompt, type:

```
1 set lb group <vServerGroupName> -PersistenceBackup <BackupPersistenceType> -persistMask <SubnetMaskAddress>
```

Example:

```
1 set lb group vserver-Group-1 -PersistenceBackup SourceIP -persistMask 255.255.255.255
```

Share persistent sessions between virtual servers

May 2, 2023

In some customer environments (telecom and ISP), a single server handles both control and data traffic. For a given client IP address, both control and data traffic have to be directed to the same back-end server. For this, one virtual server is required for handling client authentication traffic, and usually rule based persistency is configured on it. For example, Radius.req.avp(8).value.typecast_text_t'. The second virtual server for handling data traffic. Usually, SourceIP persistence is configured on it.

Previously, persistence entries were local to the virtual server. If you had to apply persistence across multiple virtual servers, you had to add the virtual server to a load balancing group and then apply a common persistence type to the group. This requirement cannot be achieved, because all the virtual servers bound to a load balancing group inherited the persistency configured on the group.

With the persistency sharing between virtual server feature, you can set the new `useVserverPersistency` parameter for a load balancing group to allow the virtual server in the group to use their own persistency parameters instead of inheriting them from the group settings. You can configure separate rule-based persistency on each virtual server.

Optionally, you can also designate one of the virtual servers in the group as a main virtual server. When a virtual server is designated as a main virtual server, only that virtual server creates the persistence entries, which are used by all the virtual server in the group. If the main virtual server is down, the NetScaler appliance does not create any persistence entries.

Note: Persistence sharing across the virtual servers is supported only for rule based persistency methods. Configure compatible rule based persistence parameters on the member virtual servers.

Example:

Assume v1 and v2 are bound to a load balancing group, v1 is a RADIUS type virtual server and v2 is an HTTP type virtual server. 'Radius.req.avp(8).value.typecast_text_t' persistency is configured on v1 and 'client.ip.src' is configured on v2.

When traffic flows through the RADIUS virtual server v1, it creates a persistent entry based on the evaluated rule string. Later, when traffic reaches the HTTP type virtual server v2, v2 checks for the persistence entries on the load balancing group and uses the same persistence session to direct traffic to the same back-end server.

Configuring Sharing of Persistent Sessions

To share persistency parameters across the virtual server in a load balancing group, you must first enable the useVserverPersistency parameter and then designate one of the virtual servers in the group as a main server.

To enable the useVserverPersistency parameter by using the command line interface

At the command prompt, type:

```
1 set lb group <name> -useVserverPersistency ( ENABLED)
```

Example:

```
1 set lb group lb_grp1 -useVserverPersistency ENABLED
```

To enable the useVserverPersistency parameter by using the GUI

1. Navigate to **Configuration > Traffic Management > Load Balancing > Persistency Groups**.
2. Click **Add** to add a new group or select an existing group and click **Edit**.
3. Select **Use Vserver Persistence**.

To designate a virtual server as a main virtual server by using the command line interface

At the command prompt, type:

```
1 set lb group <name> -useVserverPersistency ( ENABLED ) -masterVserver <string>
```

Example:

```
1 set lb group lb_grp1 -useVserverPersistency ENABLED -masterVserver vs1
```

To designate a virtual server as a main virtual server by using the GUI

1. Navigate to **Configuration > Traffic Management > Load Balancing > Persistency Groups**.
2. Click **Add** to add a new group or select an existing group and click **Edit**.
3. Select **Use Vserver Persistence**.
4. In the **Virtual Server Name** box, click **+** to add the virtual server to the group. You can select the available virtual server or create a virtual server.
5. Click **Create** if you are adding a new group or **Close** if you are modifying an existing group.
6. Select the group for which you have enabled the useVserverPersistency parameter and click **Edit** to set a virtual server as a main to create persistence entries.
7. From the **Master vServer** list, select the virtual server that has to be designated as a main virtual server.

Arguments

useVserverPersistency

Allow the virtual servers in a group to use their own persistency parameters to create persistent sessions, instead of inheriting the persistency settings from the group settings. When this parameter is enabled, persistence cannot be set on the load balancing group.

When this parameter is disabled, the group's virtual servers inherit the persistency parameters from the group settings.

When this parameter is toggled on the load balancing group, the NetScaler appliance flushes all the corresponding persistence entries of the group and the member virtual servers.

Possible values: ENABLED, DISABLED

Default: DISABLED

Example:

```
1 set lb group lb_grp1 -useVserverPersistency ENABLED
```

masterVserver

Designate a virtual server as a main virtual server in its load balancing group. Once designated, only the main virtual server can create the persistent entries used by the group.

Note: This parameter can be set only if the useVserverPersistency parameter is enabled.

Example:

```
1 set lb group lb_grp1 -masterVserver vs1
```

Example Configuration of Sharing Persistent Sessions by Using the Command Line Interface

The virtual servers are created

```
1 add lb vs vs1 http 10.1.10.11 80 -persistence rule -rule 'client.ip.  
src '  
2  
3 add lb vs vs2 radius 10.2.2.2 1812 -persistenceType rule -rule '  
Radius.req.avp(8).value.typecast_text_t '
```

The groups are created.

```
1 add lb group lb_grp1 -persistenceType NONE -useVserverPersistency  
ENABLED
```

A virtual server in a group is designated as the main virtual server.

```
1 set lb group lb_grp1 -masterVserver vs1
```

The virtual servers are bound to the group.

```
1 bind lb group lb_grp1 vs1  
2 bind lb group lb_grp1 vs2
```

For more details, see [Setting Up Basic Load Balancing](#) and [Configuring Persistence Groups](#).

Configure RADIUS load balancing with persistence

May 2, 2023

Today's complex networking environment often requires coordinating a high-volume, high-capacity load balancing configuration with robust authentication and authorization. Application users might connect to a VPN through mobile access points such as consumer-grade DSL or Cable connections, WiFi, or even dial-up nodes. Those connections usually use dynamic IPs, which can change during the connection.

If you configure RADIUS load balancing on the NetScaler appliance to support persistent client connections to RADIUS authentication servers, the appliance uses the user logon or the specified RADIUS attribute instead of the client IP as the session ID, directing all connections and records associated

with that user session to the same RADIUS server. Users are therefore able to log on to your VPN from mobile access locations without experiencing disconnections when the client IP or WiFi access point changes.

To configure RADIUS load balancing with persistence, you must first configure RADIUS authentication for your VPN. For information and instructions, see the Authentication, Authorization, Auditing (AAA) chapter in [AAA Application Traffic](#). Also choose either the Load Balancing or Content Switching feature as the basis for your configuration, and make sure that the feature you chose is enabled. The configuration process with either feature is almost the same.

Then, you configure either two load balancing, or two content switching, virtual servers, one to handle RADIUS authentication traffic and the other to handle RADIUS accounting traffic. Next, you configure two services, one for each load balancing virtual server, and bind each load balancing virtual server to its service. Finally, you create a load balancing persistency group and set the persistency type to RULE.

Enabling the Load Balancing or Content Switching Feature

To use the Load Balancing or Content Switching feature, you must first ensure that the feature is enabled. If you are configuring a new NetScaler appliance that has not previously been configured, both of these features are already enabled, so you can skip to the next section. If you are configuring a NetScaler appliance with a previous configuration on it, and you are not certain that the feature you use is enabled, you must do that now.

- For instructions on enabling the load balancing feature, see [Enabling Load Balancing](#).
- For instructions on enabling the content switching feature, see [Enabling Content Switching](#)

Configuring Virtual Servers

After enabling the load balancing or content switching feature, you must next configure two virtual servers to support RADIUS authentication:

- **RADIUS authentication virtual server.** This virtual server and its associated service handles authentication traffic to your RADIUS server. Authentication traffic consists of connections associated with users logging onto your protected application or virtual private network (VPN).
- **RADIUS accounting virtual server.** This virtual server and its associated service handles accounting connections to your RADIUS server. Accounting traffic consists of connections that track an authenticated user's activities on your protected application or VPN.

Important: You must create either a pair of load balancing virtual servers or a pair of content switching virtual servers to use in your RADIUS persistence configuration. You cannot mix virtual server types.

To configure a load balancing virtual server by using the command line interface

At the command prompt type the following commands to create a load balancing virtual server and verify the configuration:

```
1 add lb vserver <name> RADIUS <IP address> <port> -lbmethod TOKEN -rule
  <rule>
2
3 show lb vserver <name>
```

To configure an existing load balancing virtual server, replace the preceding `add lb virtual server` command with the `set lb vserver` command, which takes the same arguments.

To configure a content switching virtual server by using the command line interface

At the command prompt type the following commands to create a content switching virtual server and verify the configuration:

```
1 add cs vserver <name> RADIUS <IP address> <port> -lbmethod TOKEN -rule
  <rule>
2
3 show cs vserver <name>
```

To configure an existing content switching virtual server, replace the preceding `add cs vserver` command with the `set cs vserver` command, which takes the same arguments.

Example:

```
1 add lb vserver radius_auth_vs1 RADIUS 192.168.46.33 1812 -lbmethod
  TOKEN -rule CLIENT.UDP.RADIUS.USERNAME
2
3 add lb vserver radius_acct_vs1 RADIUS 192.168.46.34 1813 -lbmethod
  TOKEN -rule CLIENT.UDP.RADIUS.USERNAME
4
5 set lb vserver radius_auth_vs1 RADIUS 192.168.46.33 1812 -lbmethod
  TOKEN -rule CLIENT.UDP.RADIUS.USERNAME
6
7 set lb vserver radius_auth_vs1 RADIUS 192.168.46.34 1813 -lbmethod
  TOKEN -rule CLIENT.UDP.RADIUS.USERNAME
```

To configure a load balancing or content switching virtual server by using the configuration utility

Navigate to **Traffic Management > Load Balancing > Virtual Servers** or navigate to **Traffic Management > Content Switching > Virtual Servers**», and configure a virtual server.

Configuring Services

After configuring your virtual servers, you must next configure two services, one for each of the virtual servers that you created.

Note: Once configured, these services are in the DISABLED state until the NetScaler appliance can connect to your RADIUS server's authentication and accounting IPs and monitor their status. For instructions, see [Configuring Services](#).

Binding Virtual Servers to Services

After configuring your services, you must next bind each of the virtual servers that you created to the appropriate service. For instructions, see [Binding Services to the Virtual Server](#).

Configuring a Persistency Group for Radius

After binding your load balancing virtual servers to the corresponding services, you must set up your RADIUS load balancing configuration to support persistence. To do so, you configure a load balancing persistency group that contains your RADIUS load balancing virtual servers and services, and configure that load balancing persistency group to use rule-based persistence. A persistency group is required because the authentication and accounting virtual servers are different and both the authentication & accounting message for a single user should reach the same RADIUS server. Persistency group enables to use the same session for both virtual servers. For instructions, see [Configuring Persistence Groups](#).

Configuring RADIUS Shared Secret

From release 12.0, a NetScaler appliance supports RADIUS shared secret. A RADIUS client and server communicate with each other by using a shared secret that is configured on the client and on the server. Transactions between a RADIUS client and server are authenticated by using a shared secret. This secret is also used to encrypt some of the information in the RADIUS packet.

RADIUS shared secret key validation scenarios

The validation of the **RADIUS shared secret** key happens in the following scenarios:

- **RADIUS shared secret key is configured for both the radius client and the radius server:**
The NetScaler appliance uses the RADIUS secret key for both the client side and the server side. If the verification succeeds, the appliance allows the RADIUS message to go through. Otherwise, it drops the RADIUS message.

- **RADIUS shared secret key is not configured for either the radius client or the radius server:** The NetScaler appliance drops the RADIUS message, because shared-secret-key validation cannot be performed on a node that has no radkey configured.
- **RADIUS shared secret key is not configured for both the RADIUS client and the RADIUS server:** The NetScaler appliance bypasses the RADIUS secret key validation and allows the RADIUS messages to go through.

You can configure a default RADIUS shared secret or configure on a per client or a subnet basis. It is recommended to add a RADIUS shared secret key for all deployments with RADIUS policy configured. The appliance uses the source IP address of the RADIUS packet to decide which shared secret to use. You might configure a RADIUS client and server and the corresponding shared secret as follows:

At the CLI prompt, type:

```
1 add radiusNode <clientPrefix/Subnet> -radKey <Shared_secret_key>
```

Arguments

IPaddress IP address or subnet of the RADIUS client in CIDR format. The appliance uses the source IP address of an incoming request packet to match the client IP address. Instead of configuring a client IP address, you can configure the client network address. Longest prefix is matched to identify the shared secret for an incoming client request.

Radkey Shared secret between the client, NetScaler appliance, and the server. Maximum length: 31.

```
1 add lb vserver radius_auth_vs1 RADIUS 192.168.46.33 1812 -lbmethod
  TOKEN -rule CLIENT.UDP.RADIUS.USERNAME
2
3 add lb vserver radius_acct_vs1 RADIUS 192.168.46.34 1813 -lbmethod
  TOKEN -rule CLIENT.UDP.RADIUS.USERNAME
4
5 add service radius_auth_service1 192.168.41.68 RADIUS 1812
6
7 add service radius_acct_service1 192.168.41.70 RADIUS 1813
8
9 bind lb vserver radius_auth_vs1 radius_auth_service1
10
11 bind lb vserver radius_acct_vs1 radius_acct_service[1-3]
12
13 add radiusNode 192.168.41.0/24 -radKey serverkey123
14
15 add radiusNode 203.0.113.0/24 -radkey clientkey123
```

A shared secret must be configured both for a RADIUS client and server. The command is the same. The subnet determines whether the shared secret is for a client or for a server.

For example, if the subnet specified is a client subnet, the shared secret is for the client. If the subnet specified is a server subnet (192.168.41.0/24 in the earlier example), the shared secret is for the server.

A subnet of 0.0.0.0/0 implies that it is the default shared secret for all clients and servers.

Note:

Only the PAP and CHAP authentication methods are supported with RADIUS shared secret.

View persistence sessions

May 2, 2023

You can view the different persistence sessions that are in effect globally or for a particular virtual server.

Note: A NetScaler nCore appliance uses multiple CPU cores for packet handling. The CPU core owns every session on the appliance. If the appliance receives a request for which a session does not exist, a session is created, and one of the cores is designated as the owner of that session.

Subsequent requests that belong to that session might not always arrive at and be handled by the owner core. In that case, inter-core messaging ensures that the session information on the owner core is always current.

However, when a core receives a request that belongs to a persistence session owned by another core, the inter-core messaging does not refresh the timeout value for the persistence session.

Therefore, in the output of successively run `show lb persistentSessions` commands, which display timeout values from owner cores only, the timeout value for a persistence session might diminish to 0 (zero), even if the persistence session remains active.

To view persistence sessions by using the command line interface

At the command prompt, to view persistence sessions related to all virtual servers, type:

```
1 show lb persistentSessions [<vServer>]
```

At the command prompt, to view persistence sessions related a virtual server, type:

```
1 show lb persistentSessions <vServername>
```

Example:

```
1 show lb persistentSessions myVserver
```

To view persistence sessions by using the GUI

Navigate to **Traffic Management > Virtual server persistent sessions**.

Clear persistence sessions

May 2, 2023

You might need to clear persistence sessions from the NetScaler appliance if sessions fail to time out. You can do one of the following:

- Clear all sessions for all virtual servers at once.
- Clear all sessions for a given virtual server at once.
- Clear a particular session that is associated with a given virtual server.

To clear a persistence session by using the command line interface

At the command prompt, type the following commands to clear persistence sessions and verify the configuration:

```
1 clear lb persistentSessions [<vServer> [-persistenceParam <string>]]
2
3 show persistentSessions <vServer>
```

Examples:

Example 1 clears all persistence sessions for load balancing virtual server lbvip1.

Example 2 first displays the persistence sessions for load balancing virtual server lbvip1, clears the session with the persistence parameter xls, and then displays the persistence sessions to verify that the session was cleared.

Example 1:

```
1 > clear persistentSessions lbvip1
2 Done
3 > show persistentSessions
4 Done
5 >
```

Example 2:

```
1 > show persistentSessions lbvip1
2 Type          SRC-IP      ...  PERSISTENCE-PARAMETER
3 RULE          0.0.0.0    ...  xls
```

```
4 RULE      0.0.0.0 ... txt
5 RULE      0.0.0.0 ... html
6 Done
7 > clear persistentSessions lbvip1 -persistenceParam xls
8 Done
9 > show persistentSessions lbvip1
10 Type      SRC-IP ... PERSISTENCE-PARAMETER
11 RULE      0.0.0.0 ... txt
12 RULE      0.0.0.0 ... html
13 Done
14 >
```

To clear persistence sessions by using the configuration utility

1. Navigate to **Traffic Management > Clear Persistent Sessions**.

Override persistence settings for overloaded services

May 2, 2023

When a service is loaded or is otherwise unavailable, service to clients is degraded. In this case, you might have to configure the NetScaler appliance to temporarily forward to other services the requests that would otherwise be included in the persistence session that is associated with the overloaded service. In other words, you might have to override the persistence setting that is configured for the load balancing virtual server. You can achieve this functionality by setting the `skippersistency` parameter. When this `skippersistency` parameter is set, and if the virtual server receives new connections for an overloaded service, the following happens.

- The virtual server disregards any existing persistence sessions that are associated with that service, until the service returns to a state at which it can accept requests.
- Persistence sessions associated with other services are not affected.

This functionality is available for only virtual servers whose type is ANY or UDP.

In Branch Repeater load balancing configurations, you must also configure a load monitor and bind it to the service. The monitor takes the service out of subsequent load balancing decisions until the load on the service is brought below the configured threshold. For information about configuring a load monitor for your virtual server, see [Understanding Load Monitors](#).

You can configure the virtual server to perform one of the following actions with the requests that would otherwise form a part of the persistence session:

- **Send each request to one of the other services.** The virtual server takes a load balancing decision and sends each request to one of the other services based on the load balancing method. If all the services are overloaded, requests are dropped until a service becomes available.

Both wildcard and IP address–based virtual servers support this option. This action is appropriate for all deployments, including deployments in which the virtual server is load balancing Branch Repeater appliances or firewalls.

- **Bypass the virtual server-service configuration.** The virtual server does not take a load balancing decision. Instead, it simply bridges each request through to a physical server based on the destination IP address in the request.

Only wildcard virtual servers of type ANY and UDP support the bypass option. Wildcard virtual servers have a : IP and port combination. This action is appropriate for deployments in which you are using the virtual server to load balance Branch Repeater appliances or firewalls. In these deployments, the NetScaler appliance first forwards a request to a Branch Repeater appliance or firewall, and then forwards the processed response to a physical server. The virtual server sends requests directly to their destination IP addresses in the following conditions.

- You configure the virtual server to bypass the virtual server–service configuration for overloaded services.
- The Branch Repeater appliance or firewall gets overloaded.

The virtual server sends requests directly to their destination IP addresses until the Branch Repeater appliance or firewall can accept requests.

To override persistence settings for overloaded services by using the CLI

At the command prompt, type the following commands to override persistence settings for overloaded services and verify the configuration:

```
1 set lb vservice <name> -skippersistency <skippersistency>
2
3 show lb vservice <name>
```

Example

```
1 > set lb vservice mylbvservice -skippersistency ReLb
2 Done
3 > show lb vservice mylbvservice
4 mylbvservice (*:*) - ANY Type: ADDRESS
5 . . .
6 . . .
7 Skip Persistency: ReLb
8 . . .
```

9 Done
10 >

To override persistence settings for overloaded services by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and select the virtual server of type UDP or ANY.
2. In the Advanced Settings pane, select Traffic Settings, and specify the type of Skip Persistency.

Troubleshooting

May 2, 2023

- **The statistics from the NetScaler VPX appliance indicate that the appliance has reached the session persistence limit. As a result, persistence sessions are failing. Is possible to increase the session persistence limit?**

Cause: The NetScaler appliance has the system limit of 250,000 persistence session for a core.

Resolution: To resolve this issue, you can perform any of the following tasks:

- Reduce the time-out value for persistence
- Increase the number of cores for the appliance

- **After configuring Cookie Insert persistence on the NetScaler appliance, the users report that the connections work fine for some time, but then start getting disconnected. What best practice should I follow when configuring persistence?**

Cause: By default, the time-out value for Cookie Insert persistence is 120 seconds.

Resolution: When you configure persistence for applications for which idle time cannot be determined, set the Cookie Insert persistence time-out value to 0. With this setting, the connection does not time out.

- **After configuring an HTTP virtual server on the NetScaler appliance, I need to make sure that a user always connects to the same server for the requested content, so I configured SourceIP persistence. Now, increasing the time-out value for persistence introduces latency. How can I increase the timeout value without affecting performance?**

Resolution: Consider using Cookie Insert persistence with the time-out value set to 0. This setting enables long-duration persistence settings, because the appliance does not specify a time for expiring the cookie.

- **After configuring Cookie Insert persistence on the NetScaler appliance, it works as expected when clients from the same time zone access the content. However, when a client from another time zone makes an attempt to connect, the connection is immediately timed out.**

Cause: Time based Cookie Insert persistence works as expected when a client from the same time zone makes a connection. However, when the client machine and NetScaler appliance are in different time zones, the cookie is not valid. For example, when a client in the EST time zone sends a cookie at 11:00 AM EST to a NetScaler appliance in the PST time zone, the appliance receives the cookie at 2:00 PM PST. As a result of the difference in time, the cookie is not valid, and the connection is immediately timed-out.

Resolution: Set the time-out value for Cookie Insert persistence to 0.

- **A NetScaler appliance is used to load balance application servers, such as Oracle Weblogic server. To make sure that clients get persistent connections to these servers, SourceIP persistence is configured. It works as expected when a connection is made from a computer. However, when thin clients attempt a connection through a terminal server and, as a result, the appliance receives requests from multiple clients from the same IP address (the terminal server IP address). Therefore, the connections from all thin clients are directed to the same application server. Is it possible to configure persistency for requests from individual thin clients based on the client IP address?**

Cause: The NetScaler appliance receives requests from the terminal server and the source IP address of the request remains the same. As a result, the appliance cannot distinguish among the requests received from the thin clients and provide persistence according to the requests from thin clients.

Resolution: To avoid this problem, you can configure Rule persistence based on some unique parameter value for each thin client.

- **The NetScaler appliance is used to load balance Web Interface servers. When accessing the servers, the user receives the “State Error” error message. Additionally, when one of the Web Interface servers is shut down or not available, some of the users receive an error message.**

Cause: Lack of persistence to the Web Interface servers can result in error messages when a user attempts to connect to the server.

Resolution: Citrix recommends that you specify the Cookie Insert persistence method on the NetScaler appliance when load balancing Web Interface servers.

Insert cookie attributes to ADC generated cookies

October 8, 2023

The web administrators can insert other cookie attributes to the cookies generated by the NetScaler appliance. These additional cookie attributes help in enforcing the required policies for the ADC generated cookies based on the application access pattern.

The following features use the ADC generated cookies to achieve persistency.

- Load balancing cookie persistence
- Load balancing group cookie persistence
- GSLB site persistence
- Content switching cookie persistence

You can insert other cookie attributes to the ADC generated cookies using the following parameters:

- **LiteralADCCookieAttribute:** Append other cookie attributes to the ADC generated cookie, as a string.
- **ComputedADCCookieAttribute:** Use an ADC ns variable to conditionally append cookie attributes to the ADC generated cookie, based on the client or server attributes, for example, user agent version.

Note

You cannot configure both Literal ADC Cookie Attribute and Computed ADC Cookie Attribute, simultaneously on the load balancing parameter or in a single load balancing profile.

Use case: Configure SameSite cookie attribute

Every cookie has a domain associated with it. When a cookie's domain matches the website domain in the user's address bar, this is considered a same-site (or first party) context. If the domain associated with a cookie matches an external service and not the website in the user's address bar, this is considered a cross-site (or third party) context.

The **SameSite** attribute indicates the browser whether the cookie can be used for cross-site context or only for same-site context. Also, if an application intends to be accessed in the cross-site context then it can do so only via the HTTPS connection. For details, see [RFC6265](#).

Until Feb 2020, the **SameSite** property was not explicitly set in NetScaler. The browser took the default value as None, and did not impact the NetScaler deployments.

However with certain browsers upgrade, such as Google Chrome 80, there is a change in the default cross-domain behavior of cookies. The **SameSite** attribute can be set to one of the following values. Default value for Google Chrome is set to Lax.

- **None:** Indicates the browser to use a cookie in cross-site context only on secure connections.
- **Lax:** Indicates the browser to use a cookie for requests in the same-site context. In the cross-site context, only safe HTTP methods like GET request can use the cookie.
- **Strict:** Use the cookie only in the same-site context.

If there is no SameSite attribute in the cookie, the Google Chrome assumes the functionality of SameSite=Lax.

Note

For certain version of other browsers, the default value for the SameSite attribute might be set to **None**. In some browser versions, “SameSite = none” can be treated differently. For example, the following browsers reject a cookie with “SameSite = none”:

- Versions of Chrome from Chrome 51 to Chrome 66 (inclusive on both ends)
- Versions of UC browser on Android earlier to version 12.13.2

Configure ADC generated cookies

To configure ADC generated cookie attributes, you must perform the following:

1. Create a load balancing virtual server
2. Set the ADC Cookie attributes for the load balancing virtual server, either through LB parameters or LB profile.
3. If you use an LB profile, set the LB profile to a load balancing virtual server.
4. If you choose to use the Computed ADC Cookie Attribute, configure the related rewrite policy.

Note

If an LB profile is bound to an LB virtual server, then the profile parameter configuration is considered instead of the global LB parameter configuration.

You can set the ADC generated cookie attributes by the following methods:

- Setting the ADC cookie attributes in load balancing parameters
- Setting the ADC cookie attributes in the load balancing profile

Setting the ADC cookie attributes in the load balancing parameters by using the CLI

To apply a policy uniformly to ADC generated cookies of all applications configured on the NetScaler appliance, you can set the ADC cookie attribute in the global LB parameters.

The **Literal ADC Cookie Attribute** setting allows you to unconditionally insert the cookie attributes to the ADC generated cookie.

At the command prompt, type:

```
1 set lb parameter -LiteralADCCookieAttribute <string>
```

Example:

```
1 set lb parameter -LiteralADCCookieAttribute SameSite=None
```

The **Computed ADC Cookie Attribute** setting allows you to conditionally insert the cookie attributes, based on the client or server attributes, to the ADC generated cookie.

At the command prompt, type:

```
1 set lb parameter -ComputedADCCookieAttribute <ns variable>
```

Example:

```
1 add ns variable cookieattribute_var -type "text(100)" -scope
  transaction
2 set lb parameter -ComputedADCCookieAttribute "$cookieattribute_var"
3 add ns assignment samesiteassign -variable "$cookieattribute_var" -set
  "\"SameSite=None\""
4
5 add policy expression pol_iphone "(HTTP.REQ.HEADER(\"User-Agent\").
  CONTAINS(\"iP\") && (HTTP.REQ.HEADER(\"User-Agent\").REGEX_SELECT(re
  /OS \\d+\\_/.).REGEX_SELECT(re/\\d+/.).TYPECAST_NUM_T(DECIMAL).EQ(12).
  typecast_text_t ALT \"false\").eq(\"true\"))"
6 add policy expression pol_chrome "(HTTP.REQ.HEADER(\"User-Agent\").
  CONTAINS(\"Chrom\") && (HTTP.REQ.HEADER(\"User-Agent\").REGEX_SELECT
  (re/Chrom.*\\d+/.).REGEX_SELECT(re/\\d+/.).TYPECAST_NUM_T(DECIMAL).
  BETWEEN(51,66).typecast_text_t ALT \"false\").eq(\"true\"))"
7 add rewrite policy exception_samesite_attribute "pol_iphone ||
  pol_chrome " NOREWRITE
8 add rewrite policy append_samesite_attribute true samesiteassign
9
10 bind rewrite global exception_samesite_attribute 90 110 -type
  RES_OVERRIDE
11 bind rewrite global append_samesite_attribute 100 110 -type
  RES_OVERRIDE
```

Configure variables by using the GUI

1. Navigate to **AppExpert > Variables**, and click **Add**.
2. In the **Create Variable** page, select **Scope** as **Transaction** and **Type** as **text** from the drop-down menu.

← Create Variable

Name*

 ⓘ

Scope*

 ▼ ⓘ

Type*

 ▼ ⓘ

Value Length*

If Value is too Big*

 ▼

If no Value*

 ▼

Init Value

Comments

Create **Close**

3. Enter other details, and click **Create**.

Create an assignment by using the GUI

After configuring a variable, you can assign a value or specify the operation to be performed on the variable by creating an assignment.

1. Navigate to **AppExpert > Assignments**, and click **Add**.
2. In the **Create Assignment** page, enter the details, and click **Create**.

Setting the ADC cookie attributes in load balancing parameters by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Change Load Balancing parameters**.

Load Balancing

The load balancing feature distributes user requests for applications among multiple servers that all host (or mirror) the same content. You use load balancing primarily to manage user requests to heavily used applications, preventing poor performance and outages, and ensuring that users can seamlessly access your applications. Load balancing also provides fault tolerance: when a server that hosts an application becomes unavailable, the feature distributes user requests to the other servers that host the same application.

To set up load balancing:

- Configure a virtual server.
- Configure a service representing the application running on the server.
- Bind the service to the virtual server.
- Optionally, configure a monitor and bind it to the service.
- Optionally, configure persistence and a load balancing method.

Settings

- [Change SIP settings](#)
- [Change Load Balancing parameters](#)
- [Change SMPP Parameters](#)

Configuration Summary

- No Load Balancing Virtual Server
- No Service
- No Service Group
- 28 Monitors
- 6 Metric Tables
- No Server
- No Persistency Group

2. In the **Configure Load Balancing Parameters** pane, enter appropriate values for either one of the fields based on your requirement:

- **Literal ADC Cookie Attribute**
- **Computed ADC Cookie Attribute**

← Configure Load Balancing Parameters

Startup RR Factor
 ⓘ

Connection Close for Monitor
 FIN RESET

Encode Persistence Cookie Values

Cookie Passphrase

Domain Based Service TTL

Undefaction
 ▾

Literal ADC Cookie Attribute

Computed ADC Cookie Attribute
 ⓘ

ADC Cookie Attribute Warning Message

Override Persistency for Order
 ▾

Max Pipeline Nat

LB Hash Fingers

LB Hash Algorithm
 ▾

Skip MaxClients for Monitoring Connections

Include Port for Hash-Based Load Balancing Methods

Use Consolidated Statistics

Allow Bound Services/Service Groups Removal

Store MQTT Client Id and User Name

Drop MQTT Jumbo Message

Persistence Cookie HTTPOnly Flag

Prefer Direct Route

Virtual Server Specific MAC

Retain Service State

Proximity from Self

3. Click **OK**.

Setting the ADC cookie attributes in the load balancing profile by using the CLI

To apply a policy for a specific application that is configured on the NetScaler appliance, you can set the cookie attribute parameters in the LB profile bound to the application-specific LB virtual server.

The **Literal ADC Cookie Attribute** setting in the LB profile allows you to unconditionally insert the cookie attributes to the ADC generated cookie that is specific to a virtual server.

At the command prompt, type:

```
1 add lb profile <profile name> -LiteralADCCookieAttribute <string>
```

Example:

```
1 add lb profile LB-Vserver-Profile-1 -LiteralADCCookieAttribute SameSite=
None
2 add lb vserver LB-VServer-1 SSL 10.102.148.37 443 -persistenceType
COOKIEINSERT -lbprofilename LB-Vserver-Profile-1
```

The **Computed ADC Cookie Attribute** setting in the LB profile allows you to conditionally insert the cookie attributes based on the client or server attributes, to the ADC generated cookie. Then, set this LB profile to an LB virtual server.

At the command prompt, type:

```
1 add lb profile <profile name> -ComputedADCCookieAttribute <ns variable>
```

Example:


```
1 add ns variable cookieattribute_var -type "text(100)" -scope
transaction
2 add ns assignment samesiteassign -variable "$cookieattribute_var" -set
"\SameSite=None\"
3 add lb profile LB-Vserver-Profile-1 -ComputedADCCookieAttribute "
$cookieattribute_var"
4
5 add policy expression pol_iphone "(HTTP.REQ.HEADER(\"User-Agent\").
CONTAINS(\"iP\") && (HTTP.REQ.HEADER(\"User-Agent\").REGEX_SELECT(re
/OS \\d+\\_/.).REGEX_SELECT(re/\\d+/.).TYPECAST_NUM_T(DECIMAL).EQ(12).
typecast_text_t ALT \"false\").eq(\"true\"))"
6 add policy expression pol_chrome "(HTTP.REQ.HEADER(\"User-Agent\").
CONTAINS(\"Chrom\") && (HTTP.REQ.HEADER(\"User-Agent\").REGEX_SELECT
(re/Chrom.*\\d+/.).REGEX_SELECT(re/\\d+/.).TYPECAST_NUM_T(DECIMAL).
BETWEEN(51,66).typecast_text_t ALT \"false\").eq(\"true\"))"
7 add rewrite policy exception_samesite_attribute "pol_iphone ||
pol_chrome " NOREWRITE
8 add rewrite policy append_samesite_attribute true samesiteassign
9
```

```

10 add lb vserver LB-VServer-1 SSL 10.102.148.37 443 -persistenceType
    COOKIEINSERT -lbprofilename LB-Vserver-Profile-1
11 bind lb vserver LB-VServer-1 -policyName exception_samesite_attribute -
    priority 90 -gotoPriorityExpression 110 -type RESPONSE
12 bind lb vserver LB-VServer-1 -policyName append_samesite_attribute -
    priority 100 -gotoPriorityExpression 110 -type RESPONSE
    
```


Setting the ADC Cookie attributes in the load balancing profile by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual servers**.
2. Select a virtual server and click **Edit**.
3. Under **Advanced Settings** section, click **Add profiles**.

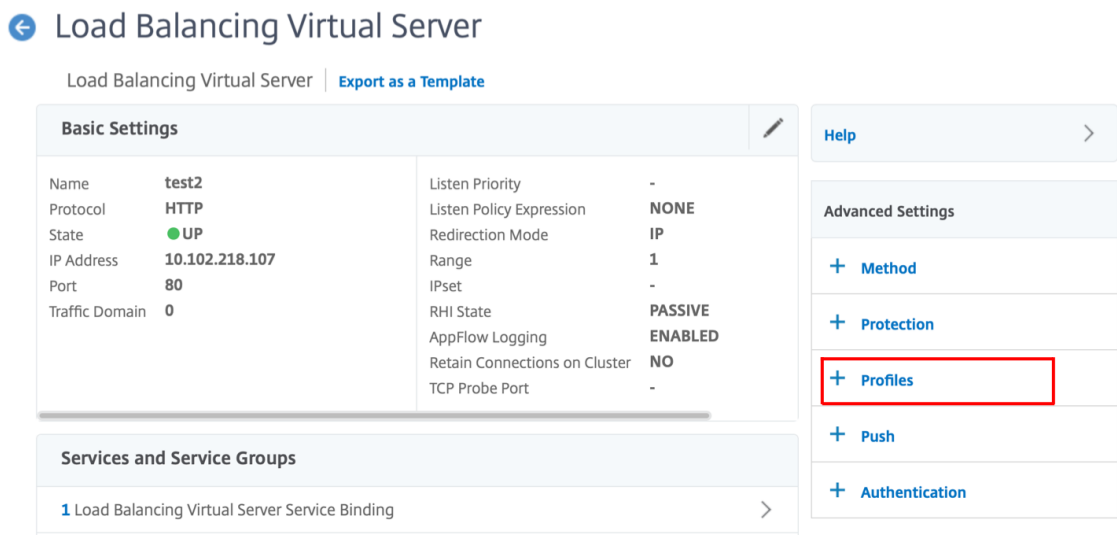

4. In the **Profiles** section, click **Add** to create an LB Profile.

If you have already created a profile, choose it from the **LB Profile** drop-down menu.

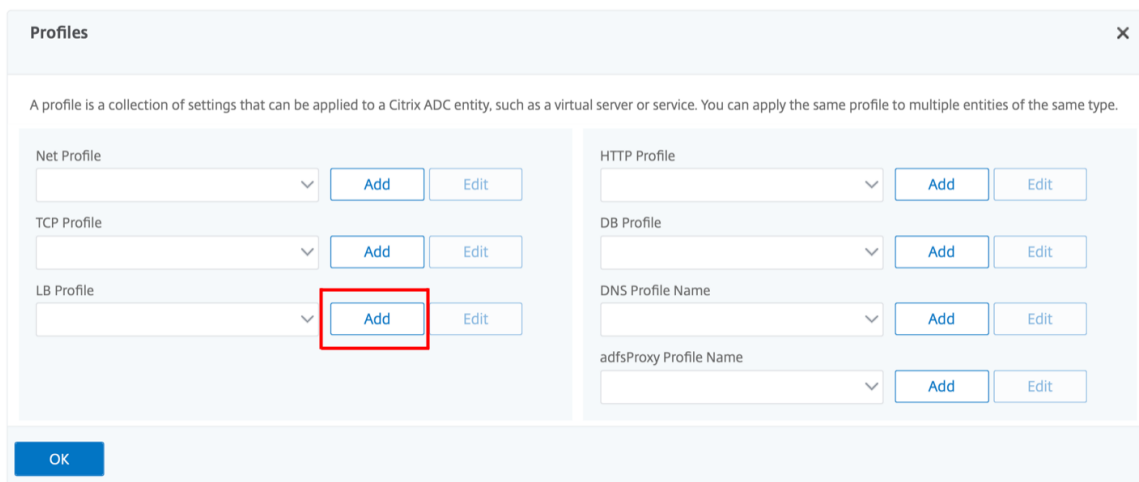

5. In the **LB Profile** pane, enter appropriate values for either one of the fields based on your requirement:

- **Literal ADC Cookie Attribute**
- **Computed ADC Cookie Attribute**

The screenshot shows the NetScaler Configuration page for the 'LB Profile' pane. The page has a dark header with 'Dashboard', 'Configuration', and 'Rep' tabs. Below the header, there is a back arrow and the title 'LB Profile'. The main content area contains several configuration fields: 'LB Profile Name' (text box with 'lbprof1'), 'DBS LB' (checkbox), 'Process Local' (checkbox), 'Persistence Cookie HttpOnly Flag' (checkbox), 'Encode Persistence Cookie Values' (checkbox), 'Cookie Passphrase' (text box), 'Literal ADC Cookie Attribute' (text box, highlighted with a red box), and 'Computed ADC Cookie Attribute' (text box with 'S1bvar'). At the bottom, there are 'OK' and 'Close' buttons.

1. Click **OK**.
2. Set the created LB profile to the LB virtual server created in **Step 1**.

Verify ns variable configuration

To verify that the ADC ns variable is configured appropriately in LB parameters or LB profile, use the show lb parameter or show lb profile commands.

The following table lists the various warning messages and its cause, when the ns variable is not correctly configured.

Warning message	Reasons
NS Variable is not configured. Configure it with type text() and scope transaction for variable	NS variable is not yet configured.
Scope of configured NS variable is not transaction.	Variable is configured but scope is not set to "transaction."
Type of variable is not Text().	Variable is configured but type is not set to "Text".
Configured value-max-size for the NS Variable is greater than 255.	The value configured for the NS variable is greater than 255 characters. Note: A maximum length of 255 characters can be appended to an ADC generated cookie. The characters that exceed the maximum length are truncated.

Sample output

In the following example, the warning message is displayed when the ns variable is not configured.

```

1 set lb parameter -ComputedADCCookieAttribute "$lbvar"
2
3 Warning: NS Variable is not configured. Please configure it with type
  text() and scope transaction
4 Done

```

The warning message is displayed in the following output of the `show lb parameter` command.

```

1 show lb parameter
2
3 Global LB parameters:
4 Persistence Cookie HttpOnly Flag: ENABLED
5 Use Encrypted Persistence Cookie: DISABLED
6 Use Port For Hash LB: YES
7 Prefer direct route: YES
8 Retain Service State: OFF
9 Start RR Factor: 0
10 Skip Maxclient for Monitoring: DISABLED
11 Monitor Connection Close: FIN
12 Use consolidated stats for LeastConnection: YES
13 Allow mac mode based vserver to pick the return traffic from services:
  DISABLED
14 Allow bound service removal: ENABLED
15 TTL for Domain Based Server: 0 secs

```

```

16
17 NetScaler Cookie Variable Name: $lbvar(NS Variable is not configured.
    Please configure it with type text() and scope transaction)
18
19 Done

```

Sample configuration for inserting cookie attributes in GSLB deployment

The following sample configuration applies to site persistence configured on GSLB services corresponding to an LB virtual server. To append some additional cookie attributes to the GSLB cookies, perform the following configuration.

- Set the ADC cookie attributes in the LB profile (LB-Vserver-Profile-1).
- Set the Literal ADC Cookie Attribute value, for example “SameSite=None”, in the LB profile.
- Set the LB profile to the load balancing virtual server (LB-VServer-1), which represents the GSLB service.

```

1 add gslb vserver GSLB-VServer-1 SSL -backupLBMethod ROUNDROBIN -
  tolerance 0 -appflowLog DISABLED
2 add gslb site site1 10.102.148.4 -publicIP 10.102.148.4
3 add gslb service site1_gsvc1 10.102.148.35 SSL 443 -publicIP
  10.102.148.35 -publicPort 443 -maxClient 0 -siteName site1 -
  sitePersistence HTTPRedirect -sitePrefix ssl -cltTimeout 180 -
  svrTimeout 360 -downStateFlush ENABLED
4
5 bind gslb vserver GSLB-VServer-1 -serviceName site1_gsvc1
6 bind gslb vserver GSLB-VServer-1 -domainName www.gslb.com -TTL 5
7
8 add service service-1 10.102.84.140 SSL 443
9
10 add lb profile LB-Vserver-Profile-1 -LiteralADCCookieAttribute SameSite
  =None
11 add lb vserver LB-VServer-1 SSL 10.102.148.37 443 -persistenceType
  COOKIEINSERT -lbprofilename LB-Vserver-Profile-1
12
13 bind lb vserver LB-VServer-1 service-1

```

Note

You can also conditionally insert the cookie attributes using the Computed ADC Cookie Attribute.

Sample configuration for inserting cookie attribute in content switching deployment

The following sample configuration applies when multiple applications are hosted behind a content switching virtual server. To apply the same policy to all the applications, bind the rewrite policies to content switching virtual server instead of LB virtual server, as follows:

- Set the ADC cookie attributes in the LB parameters.

Note:

You can set the ADC cookie attributes in the LB profile as well.

- Configure the ns variable (cookieattribute_var) of Type set to Text and Scope set to Transaction.
- Set the Computed ADC Cookie Attribute in the global LB parameters using the ns variable.
- Set the rewrite policies (exception_samesite_attribute and append_samesite_attribute) to the content switching virtual servers for inserting the cookie attributes.

```

1 add ns variable cookieattribute_var -type "text(100)" -scope
  transaction
2 set lb parameter -ComputedADCCookieAttribute "$cookieattribute_var"
3 add ns assignment samesiteassign -variable "$cookieattribute_var" -set
  "\"SameSite=None\""
4
5 add policy expression pol_iphone "(HTTP.REQ.HEADER(\"User-Agent\").
  CONTAINS(\"iP\") && (HTTP.REQ.HEADER(\"User-Agent\").REGEX_SELECT(re
  /OS \\d+\\_/.).REGEX_SELECT(re/\\d+/.).TYPECAST_NUM_T(DECIMAL).EQ(12).
  typecast_text_t ALT \"false\").eq(\"true\"))"
6 add policy expression pol_chrome "(HTTP.REQ.HEADER(\"User-Agent\").
  CONTAINS(\"Chrom\") && (HTTP.REQ.HEADER(\"User-Agent\").REGEX_SELECT
  (re/Chrom.*\\d+/.).REGEX_SELECT(re/\\d+/.).TYPECAST_NUM_T(DECIMAL).
  BETWEEN(51,66).typecast_text_t ALT \"false\").eq(\"true\"))"
7 add rewrite policy exception_samesite_attribute "pol_iphone ||
  pol_chrome " NOREWRITE
8 add rewrite policy append_samesite_attribute true samesiteassign
9
10 add lb vserver LB-VServer-1 SSL 10.102.148.35 443
11 add lb vserver LB-VServer-2 SSL 10.102.148.36 443
12
13 add cs vserver CS-VServer-1 SSL 10.102.148.42 443 -persistenceType
  COOKIEINSERT
14
15 add cs action act1 -targetLBVserver v1
16 add cs action act2 -targetLBVserver v2
17 add cs policy CS-policy-1 -rule "HTTP.REQ.URL.CONTAINS(\"file1.html\")"
  -action act1
18 add cs policy CS-policy-2 -rule "HTTP.REQ.URL.CONTAINS(\"file2.html\")"
  -action act2
19
20 bind cs vserver CS-VServer-1 -policyName CS-policy-1 -priority 1
21 bind cs vserver CS-VServer-1 -policyName CS-policy-2 -priority 2
22
23 bind cs vserver -policyname exception_samesite_attribute 90 110 -type
  RES_OVERRIDE
24 bind cs vserver -policyname append_samesite_attribute 100 110 -type
  RES_OVERRIDE

```

Customize a load balancing configuration

May 2, 2023

After you configure a basic load balancing setup, you can make several modifications to it so that it distributes the load exactly as you need. The load balancing feature is complex. You can modify the basic elements by doing one or more of the following:

- Changing the load balancing algorithm
- Configuring load balancing groups and using them to create your load balancing configuration
- Configuring persistent client-server connections
- Configuring the redirection mode
- Assigning different weights to different services that have different capacities.

The default load balancing algorithm on the NetScaler appliance is the least connection method. In the least connection method, the appliance sends each incoming connection to the service that is currently handling the fewest connections. You can specify different load balancing algorithms, each of which is suited to different conditions.

To accommodate applications such as shopping carts, which require that all requests from the same user be directed to the same server, you can configure the appliance to maintain persistent connections between clients and servers. You can also specify persistence for a group of virtual servers. Persistence lets the appliance to direct individual client requests to the same service regardless of which virtual server in the group receives the client request.

You can enable and configure the redirection mode that the appliance uses when redirecting user requests, choosing between IP-based and MAC-based forwarding. You can also assign weights to different services, specifying what percentage of incoming load must be directed to each service. Assigning weights enable you to include servers with different capacities in the same load balancing setup without;

- overloading the lower-capacity servers or
- allowing the higher-capacity servers to sit idle.

Customize the hash algorithm for persistence across virtual servers

May 2, 2023

The NetScaler appliance uses hash-based algorithms for maintaining persistence across virtual servers. By default, the hash-based load balancing method uses a hash value of the IP address and

port number of the service. If a service is made available at different ports on the same server, the algorithm generates different hash values. Therefore, different load balancing virtual servers might send requests for the same application to different services, breaking the pseudo-persistence.

As an alternative to using the port number to generate the hash value, you can specify a unique hash identifier for each service. For a service, the same hash identifier value must be specified on all the virtual servers. If a physical server serves more than one type of application, each application type should have a unique hash identifier.

The algorithm for computing the hash value for a service works as follows:

- By default, a global setting specifies the use of port number in a hash calculation.
- If you configure a hash identifier for a service, it is used, and the port number is not, regardless of the global setting.
- If you do not configure a hash identifier, but change the default value of the global setting so that it does not specify use of the port number, the hash value is based only on the IP address of the service.
- If you do not configure a hash identifier or change the default value of the global setting to use the port number, the hash value is based on the IP address and the port number of the service.

You can also specify hash identifiers when using the CLI to bind services to a service group. In the configuration utility, you can open a service group and add hash identifiers on the Members tab.

To change the use-port-number global setting by using the CLI

At the command prompt, type:

```
set lb parameter -usePortForHashLb (YES          NO)
```

Example:

```
1 > set lb parameter -usePortForHashLb NO
2   Done
3 > show lb parameter
4 Global LB parameters:
5     Persistence Cookie HttpOnly Flag: DISABLED
6     Use port for hash LB: NO
7   Done
```

To change the use-port-number global setting by using the GUI

1. Navigate to Traffic Management > Load Balancing > Configure Load Balancing parameters.
2. Select or clear Use Port for Hash Based LB Methods.

To create a new service and specify a hash identifier for a service by using the CLI

At the command prompt, type the following commands to set the hash ID and verify the setting:

```
add service < name > (< ip >                < serverName >) < serviceType > < port > -hashId
                                             < positive_integer >
```

```
1 show service <name>
```

Example:

```
1 > add service flbkng 10.101.10.1 http 80 -hashId 12345
2 Done
3 >show service flbkng
4     flbkng (10.101.10.1:80) - HTTP
5     State: DOWN
6     Last state change was at Thu Nov  4 10:14:52 2010
7     Time since last state change: 0 days, 00:00:15.990
8     Server Name: 10.101.10.1
9     Server ID : 0   Monitor Threshold : 0
10
11     Down state flush: ENABLED
12     Hash Id: 12345
13
14 1)     Monitor Name: tcp-default
15         State: DOWN   Weight: 1
16
17 Done
```

To specify a hash identifier for an existing service by using the CLI

Type the set service command, the name of the service, and **-hashID** followed by the ID value.

To specify a hash identifier while adding a service group member

To specify a hash identifier for each member to be added to the group and verify the setting, at the command prompt, type the following commands (Be sure to specify a unique hashID for each member.):

```
1 bind servicegroup <serviceName> <memberName> <port> -hashId <
  positive_integer>
2
3 show servicegroup <serviceName>
```

Example:

```
1 bind servicegroup http_svc_group 10.102.27.153 80 -hashId 2222222
2
3 >show servicegroup SRV
4     SRV - HTTP
5     State: ENABLED  Monitor Threshold : 0
6     ...
7
8     1)           1.1.1.1:80  State: DOWN      Server Name: 1.1.1.1
9                Server ID: 123  Weight: 1
10               Hash Id: 32211
11
12                Monitor Name: tcp-default      State: DOWN
13               ...
14
15     2)           2.2.2.2:80  State: DOWN      Server Name: 2.2.2.2
16                Server ID: 123  Weight: 1
17               Hash Id: 12345
18
19                Monitor Name: tcp-default      State: DOWN
20               ...
21 Done
```

To specify a hash identifier for a service by using the GUI

1. Navigate to Traffic Management > Load Balancing > Services.
2. Create a new service, or open an existing service and specify the hash ID.

To specify a hash identifier for an already configured service group member by using the GUI

1. Navigate to Traffic Management > Load Balancing > Service Groups.
2. Open a member and type a unique hash ID.

Configure the redirection mode

May 2, 2023

The redirection mode configures the method used by a virtual server to determine where to forward incoming traffic. The NetScaler appliance supports the following redirection modes. Before forwarding the request to a server, the redirection modes function as follows:

- IP-Based forwarding (the default): The destination IP address is changed to the server's IP address.

- **MAC-Based forwarding:** The destination MAC address is changed to the server's MAC address. However, the destination IP address is not changed. MAC-based redirection mode is used mostly in firewall load balancing deployments.
- **IP TUNNEL Based:** An IP-in-IP encapsulation is performed for the client IP packets. In the outer IP headers, the destination IP address is set to the IP address of the server and the source IP address is set to the subnet IP (SNIP). The client IP packets are not modified. This is applicable to both IPv4 and IPv6 packets.
- **TOS ID Based:** The virtual server's TOS ID is encoded in the TOS field of the IP header.

You can use either the IP TUNNEL or the TOS option to implement Direct Server Return (DSR). For more information see:

- [Configure DSR mode when using TOS](#)
- [Configure load balancing in DSR mode for IPv6 networks by using the TOS field](#)
- [Configure load balancing in DSR mode by using IP Over IP](#)

You can configure MAC-Based forwarding on networks that use DSR topology, link load balancing, or firewall load balancing. For more information on MAC-Based forwarding for load balancing, see [Configure MBF for load balancing configuration](#).

To configure the redirection mode by using the CLI

At the command prompt, type:

```
1 set lb vserver <name> -m <RedirectionMode>
```

Example:

```
1 set lb vserver Vserver-LB-1 -m MAC
```

Note

For a service that is bound to a virtual server on which the `-m MAC` option is enabled, you must bind a non-user monitor.

To configure the redirection mode by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open a virtual server and select the redirection mode.

Configure per-VLAN wildcarded virtual servers

September 21, 2020

If you want to configure load balancing for traffic on a specific virtual local area network (VLAN), you can create a wildcarded virtual server with a listen policy that restricts it to processing traffic only on the specified VLAN.

To configure a wildcarded virtual server that listens to a specific VLAN by using the CLI

At the command prompt, type the following commands to configure a wildcarded virtual server that listens to a specific VLAN and verify the configuration:

```
1 add lb vserver <name> <serviceType> IPAddress * Port * -listenpolicy <
   expression> [-listenpriority <positive_integer>]
2
3 show vserver
```

Example:

```
1 add lb vserver Vserver-LB-vlan1 ANY -listenpolicy "CLIENT.VLAN.ID.EQ(2)
   " -listenpriority 10
2
3 show vserver Vserver-LB-vlan1
```

To configure a wildcarded virtual server that listens to a specific VLAN by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Create a new virtual server or open an existing virtual server.
3. Specify a listen policy priority and expression.

After you have created this virtual server, you bind it to one or more services as described in [Setting Up Basic Load Balancing](#).

Assign weights to services

January 16, 2024

In a load balancing configuration, you assign weights to services to indicate the percentage of traffic that should be sent to each service. Services with higher weights can handle more requests; services with lower weights can handle fewer requests. Assigning weights to services allows the NetScaler

appliance to determine how much traffic each load balanced server can handle, and therefore more effectively balance load.

Note: If you use a load balancing method that supports weighting of services (for example, the round robin method), you can assign a weight to the service.

The following table describes the load balancing methods that support weighting, and briefly describes the manner in which weighting affects how a service is selected for each one.

Load Balancing Methods	Service Selection with Weights
Round Robin	The virtual server prioritizes the queue of available services such that services with the highest weights come to the front of the queue more frequently than those with the lowest weights and receive proportionately more traffic. For a complete description, see The Round Robin Method .
Least Connection	The virtual server selects the service with the best combination of fewest active transactions and highest weight. For a complete description, see The Least Connection Method .
Least Response Time and Least Response Time Method using Monitors	The virtual server selects the service with the best combination of fewest active transactions and fastest average response time. For a complete description, see The Least Response Time Method .
Least Bandwidth	The virtual server selects the service with the best combination of least traffic and highest bandwidth. For a complete description, see The Least Bandwidth Method .
Least Packets	The virtual server selects the service with the best combination of fewest packets and highest weight. For a complete description, see The Least Packets Method .
Custom Load	The virtual server selects the service with the best combination of lowest load and highest weight. For a complete description, see The Custom Load Method .
Hashing methods, Static proximity and Token method	Weighting is not supported by these load balancing methods.

Load Balancing Methods**Service Selection with Weights**

Least Request

The virtual server selects the service with the combination of fewest active requests and highest weight. For a complete description, see [The Least Request Method](#).

To configure a virtual server to assign weights to services by using the CLI

At the command prompt, type:

```
1 set lb vserver <name> -weight <Value> <ServiceName>
```

Example:

```
1 set lb vserver Vserver-LB-1 -weight 10 Service-HTTP-1
```

To configure a virtual server to assign weights to services by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open the virtual server, and then click in the **Services** section.
3. In the weight column for the service, assign a weight to the service.

Configure the MySQL and Microsoft SQL server version setting

September 21, 2020

You can specify the version of Microsoft® SQL Server® and the MySQL server for a load balancing virtual server that is of type MSSQL and MySQL respectively. The version setting is recommended if you expect some clients to not be running the same version as your MySQL or Microsoft SQL Server product. The version setting provides compatibility between the client-side and server-side connections by ensuring that all communication conforms to the server's version.

To set the Microsoft SQL server version parameter by using the CLI

At the command prompt, type the following commands to set the Microsoft SQL Server version parameter for a load balancing virtual server and verify the configuration:

```
1 set lb vserver <name> -mssqlServerVersion <mssqlServerVersion>
2
3 show lb vserver <name>
```

Example

```
1 > set lb vserver myMSSQLvip -mssqlServerVersion 2008R2
2 Done
3 > show lb vserver myMSSQLvip
4 myMSSQLvip (190.0.2.12:1433) - MSSQL Type: ADDRESS
5 . . .
6 . . .
7 Mssql Server Version: 2008R2
8 . . .
9 . . .
10 Done
11 >
```

To set the MySQL server version parameter by using the CLI

At the command prompt, type the following commands to set the MySQL Server version parameter for a load balancing virtual server and verify the configuration:

```
1 set lb vserver <name> -mysqlServerVersion <string>
2
3 show lb vserver <name>
```

Example

```
1 > set lb vserver mysqlsvr -mysqlserverversion 5.5.30
2 Done
3 > sh lb vserver mysqlsvr
4 mysqlsvr (2.22.2.222:3306) - MYSQL Type: ADDRESS
5 . . .
6 . . .
7 Mysql Server Version: 5.5.30
8 . . .
9 . . .
10 Done
11 >
```

To set the MySQL or Microsoft SQL server version parameter by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.

2. Open a virtual server of type MySQL or MSSQL, and set the server version.

Multi-IP virtual servers

May 2, 2023

The NetScaler supports creating a single load balancing virtual server with multiple non-consecutive/consecutive IPv4 and IPv6 addresses of type VIP. Each VIP address bound to a virtual server is treated as an individual virtual server. These virtual servers have the same protocol and other virtual server level settings. A virtual server with multiple VIP addresses is also called multi-IP virtual server.

The following are some advantages of using multi-IP virtual servers:

- A multi-IP virtual server offloads the work of creating many virtual servers with the same settings and service bindings.
- Multi-IP virtual servers effectively reduces the possibility of reaching the maximum limit on virtual server entities.
- One multi-IP virtual server can be used for clients in different subnets to connect to the same set of servers.
- Only one multi-IP virtual server can be used for IPv6 and IPv4 clients to connect to the same set of servers.

Configure a multi-IP virtual server

Configuring a multi-IP virtual server consists of the following tasks:

- Create an IPset and bind multiple IP addresses to it.
- Bind the IPset to load balancing virtual servers.

Note the following points related to IPset configuration:

- An IPset can have:
 - non-consecutive/consecutive IPv4 addresses and IPv6 addresses
 - combinations of IPv4 and IPv6 addresses.
- All IPv4/IPv6 addresses to be associated with virtual servers using IPset must be of type VIP.
- A single IPset can be bound to multiple virtual servers.
- IPv4/IPv6 addresses can be bound/unbound to/from IPset irrespective any existing IPset bindings to virtual servers.
- You must unset the IPset binding to a virtual server before binding a new IPset to it.

To add an IPset and bind multiple VIP addresses to it by using the CLI

At the command prompt, type:

```
1 add ipset <name>
2
3 bind ipset <name> <IPaddress1 ...>
4
5 bind ipset <name> <IPaddress2...>
6
7 show ipset <name>
```

To bind the IPset to a virtual server by using the CLI

At the command prompt, type:

```
1 set lb vserver <name> -ipset <ipset name>
2
3 show lb vserver <name>
```

To add an IPset and bind multiple VIP addresses to it by using the GUI

Navigate to **System > Network > IPSets**, and create an IPset with multiple VIP addresses.

To bind the IPset to a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server to which you want to bind the created IPset.
2. In **Basic Settings**, set the **IPset** parameter to the name of the created IPset.

```
1 > add ipset IPSET-1
2
3
4 Done
5
6 > bind ipset IPSET-1 9.9.9.10
7
8
9 Done
10
11 > bind ipset IPSET-1 1000::20
12
13
14 Done
15
16 > add lb vserver LBVS-1 HTTP 8.8.8.10 80 -ipset IPSET-1
```

```
17
18
19 Done
20
21 > add service SVC-1 3.3.3.10 HTTP 80
22
23
24 Done
25
26 > add service SVC-2 3.3.3.100 HTTP 80
27
28
29 Done
30
31 > bind lb vserver LBVS-1 SVC-1
32
33
34 Done
35
36 > bind lb vserver LBVS-1 SVC-2
37
38
39 Done
```

GSLB support for multi-IP virtual servers

Floating IP addresses are required for the high availability deployments. Cloud deployments do not support floating IP addresses. So, the IP set feature helps you support high availability in cloud deployments. With the IP set feature, you can associate a private IP address to each of the primary and secondary instances. One of the private IP addresses is added when creating the virtual server. The other IP address is bound to an IP set. The IP set is then associated with the virtual server. Typically a public IP address is mapped to one of the private IP addresses based on which appliance is taking the traffic. During failover, this mapping changes dynamically to route the traffic to the new primary.

In GSLB deployments, the GSLB service represents the virtual server and it requires both the private and public IP address of the virtual server. In cloud deployments, there are multiple private IP addresses represented as an IP set but the GSLB service can accept only one private IP address. So while configuring the GSLB service it is recommended to give the IP address that is configured while adding the virtual server or one of the IP addresses in the IP set. You need not configure the IP set feature on the GSLB service. The IP set configured on the load balancing virtual server associated with the GSLB service is sufficient.

In GSLB Parent-child topology, the load balancing virtual servers on the child sites can have the IP set associated with it. The GSLB service corresponding to this topology carries the public IP address and one of the private IP addresses. The private IP address can be an IP address in the IP set or the one configured while adding the virtual server on the child site. Communication between the parent and

the child sites is always using the public IP address and the public port of the GSLB service.

Also, with IP set support, you can have a single virtual server endpoint for both IPv4 and IPv6 traffic. Previously, you had to configure different virtual servers for IPv4 and IPv6 traffic. With IP set support, you can associate IPv4 and IPv6 IP addresses to the same IP set. You can add different GSLB services representing the IPv4 and IPv6 endpoints.

Limit the number of concurrent requests on a client connection

May 2, 2023

You can limit the number of concurrent requests on a single client connection. You can protect the servers from security vulnerabilities by limiting the number of concurrent requests. When the client connection reaches the specified maximum limit, the NetScaler appliance drops subsequent requests on the connection until the outstanding request count goes below the limit.

You can configure the `maxPipelineNat` parameter to limit the number of concurrent requests on a single client connection. This parameter is applicable only to the following service types and when “`svrTimeout`” is set to zero:

- ANY
- All UDP service types except DNS

The default value of `maxPipelineNat` parameter is 255. A value of zero (0) applies no limit to the number of concurrent requests. When no limit is set, the NetScaler appliance executes all requests.

Note

If you set `MaxpipelineNAT` to a higher value, then the probability of spoofing attack can be higher. Hence, it is recommended to set `MaxpipelineNAT` to a lower value.

To limit the number of concurrent connections for a client by using the CLI

At the command prompt, type:

```
1 set lb parameter -maxPipelineNat <positive_integer>
```

Example:

```
1 set lb parameter -maxPipelineNat 199
```


To limit the number of concurrent connections for a client by using the GUI

Navigate to **Traffic Management > Load Balancing > Configure Load Balancing Parameters**, specify a value for Max Pipeline NAT requests.

Configure diameter load balancing


September 27, 2023

The Diameter protocol is a next generation Authentication, Authorization, and Accounting (AAA) signaling protocol used mainly on mobile devices such as laptops and mobile phones. It is a peer-to-peer protocol, as opposed to the traditional client-server model used by most other protocols. However, in most Diameter deployments, the clients originates the request and the server responds to the request.

When Diameter messages are exchanged, the Diameter server usually does much more processing than does the Diameter client. With the increase in control plane signaling volume, the Diameter server becomes a bottleneck. Therefore, Diameter messages must be load balanced to multiple servers. A virtual server performing load balancing of Diameter messages provides the following benefits:

- Lighter load on Diameter servers, which translates to faster response time to end users.
- Server health monitoring and better failover capabilities.
- Better scalability in terms of server addition without changing client configuration.
- High availability.
- SSL-Diameter offloading.

The following figure shows a Diameter system in a NetScaler deployment:

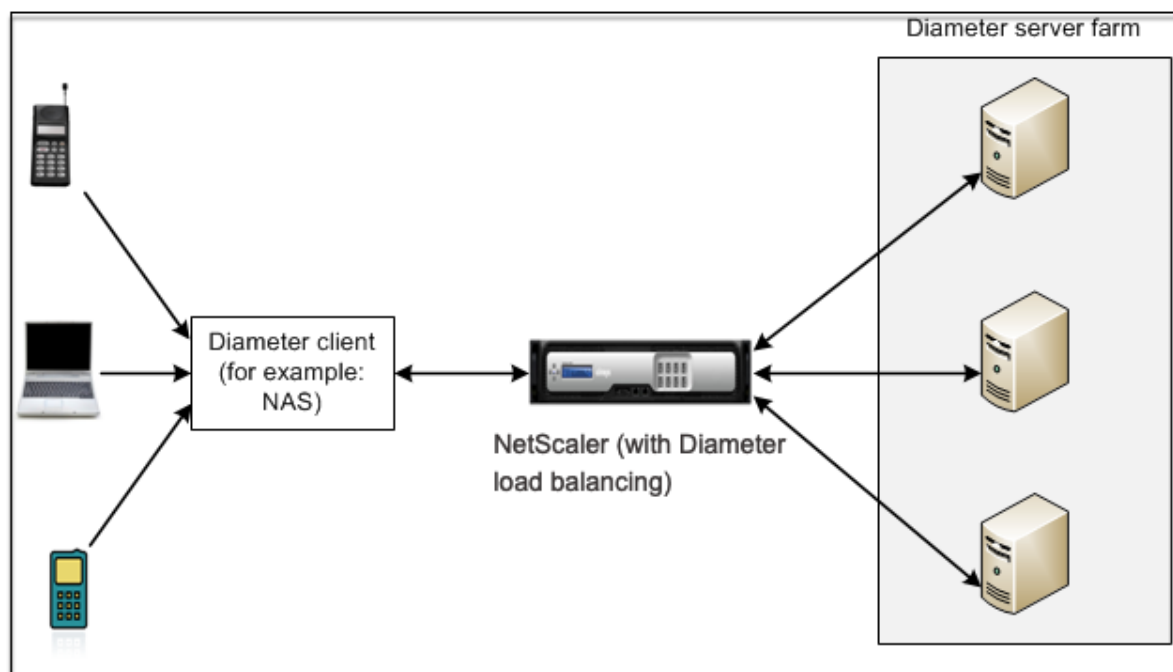

A Diameter system has the following components:

- **Diameter client.** Supports Diameter client applications in addition to the base protocol. Diameter clients are often implemented in devices at the edge of a network and provide access control services for that network. Typical examples of Diameter clients are a Network Access Server (NAS) and the Mobile IP Foreign Agent (FA).
- **Diameter agent.** Provides relay, proxy, redirect, or translation services. The NetScaler appliance (configured with a Diameter load balancing virtual server) plays the role of a Diameter agent.
- **Diameter server.** Handles the authentication, authorization, and accounting requests for a particular realm. A Diameter server must support Diameter server applications in addition to the base protocol.

In a typical Diameter topology, when an end-user device (such as a mobile phone) needs a service, it sends a request to a Diameter client. Each Diameter client establishes a single connection (TCP connection—SCTP is not yet supported) with a Diameter server as specified by the Diameter base-protocol RFC 6733. The connection is long-lived and all messages between the two Diameter nodes (client and server) are exchanged over this connection. The NetScaler uses message based load balancing.

Example:

A mobile service provider uses Diameter for its billing system. When a subscriber uses a prepaid number, the Diameter client repeatedly sends requests to the server to check the available balance. The Diameter protocol establishes a connection between the client and the server, and all requests are exchanged over that connection. Connection based load balancing would be pointless, because there

is only one connection. However, with the large number of messages on the connection, message based load balancing expedites the process of billing the prepaid mobile subscriber.

How diameter load balancing works

A Diameter client opens a connection to the NetScaler appliance and sends a Diameter Capability Exchange Request (CER) message. The NetScaler selects a diameter server, opens a connection to the server, and forwards the CER message to the server. The server reads the client identity and determines that it is directly connected to the client.

The Diameter server prepares the Diameter handshake reply and sends it to the NetScaler appliance. The appliance modifies the handshake and inserts its own identity. At this point, the Diameter client determines that it is directly connected to the NetScaler (the agent).

Note:

All Diameter request messages from the client are queued on the selected server until the Diameter handshake is complete. The packets are forwarded to the server when the handshake is complete.

Load balancing diameter traffic

When a client sends a request to the NetScaler appliance, the appliance parses the request and contextually load balances it to a Diameter server based on a persist AVP. The appliance has advertised the client identity to the server, so it does not add route entries, because the server is expecting messages directly from client.

Server initiated requests are not as frequent as client requests. Server initiated requests are similar to client initiated requests, except:

- Since messages are received from multiple servers, the appliance maintains the transaction state by adding a unique Hop by Hop (HbyH) number to each forwarded request message. When the message response arrives (with same HbyH number), the appliance translates this HbyH number to the HbyH number that was received on the server when the request arrived.
- The NetScaler appliance adds a route entry by putting its identity, because the client sees the appliance as a relay agent.

Note: If a Diameter message spans more than one packet, the appliance accumulates the packets in an incomplete header queue and forwards them to the server when the full message is accumulated. Similarly, if a single packet contains more than one Diameter message, the appliance splits the packet and forwards the messages to servers as determined by the load balancing virtual server.

Disconnect a session

A Disconnect Peer Request (DPR) indicates the peer's intention of closing the connection, with the reason for closing the connection. The peer replies with a DPA (TCP always provides successful DPA).

- When the NetScaler appliance receives a DPR from the client, it broadcasts the DPR to all servers and immediately replies with a DPA to the client. The servers reply with DPAs, but the appliance ignores them. The client sends a FIN, which the appliance broadcasts to all servers.
- When the appliance receives a DPR from the server, it replies with a DPA to that server alone, and does not remove the server from the reuse pool. When the server sends a FIN, the appliance replies with FIN/ACK and removes connections from the reuse pool.
- If the appliance receives a FIN from the client, it sends the client a FIN/ACK, broadcasts the FIN, and immediately removes the server connection from the reuse pool.
- If the appliance receives a FIN from the server, it sends a FIN/ACK and removes it from reuse pool. Any new message for this server is sent on a new connection.

Configure load balancing for diameter traffic

To configure the NetScaler appliance to load balance diameter traffic, you must first set the Diameter parameters on the appliance, then add the diameter monitor, add the diameter services, bind the services to the monitor, add the diameter load balancing virtual server, and bind the services to the virtual server.

To configure load balancing for diameter traffic by using the command line interface

Configure the diameter parameters.

```
1 set ns diameter -identity <string> -realm <string> -  
serverClosePropagation <YES|NO>
```

Example:

```
1 set ns diameter -identity mydomain.org -realm org -  
serverClosePropagation YES
```

Add a Diameter monitor.

```
1 add lb monitor <monitorName> DIAMETER -originHost <string> -originRealm  
<string>
```

Example:

```
1 add lb monitor diameter_mon DIAMETER -originHost mydomain.org -  
originRealm org
```

Create the Diameter services.

```
1 add service <name> <IP> DIAMETER <port>
```

Example:

```
1 add service diameter_svc0 10.102.82.86 DIAMETER 3868
2
3 add service diameter_svc1 10.102.82.87 DIAMETER 3868
4
5 add service diameter_svc2 10.102.82.88 DIAMETER 3868
6
7 add service diameter_svc3 10.102.82.89 DIAMETER 3868
```

Bind the Diameter services to the Diameter monitor.

```
1 bind service <name>@ monitorName <monitorName>
```

Example:

```
1 bind service diameter_svc0 -monitorName diameter_mon
2
3 bind service diameter_svc1 -monitorName diameter_mon
4
5 bind service diameter_svc2 -monitorName diameter_mon
6
7 bind service diameter_svc3 -monitorName diameter_mon
```

Add a Diameter load balancing virtual server with Diameter persistence.

```
1 add lb vserver <name> DIAMETER <IPAddress> <port> -persistenceType
   DIAMETER -persistAVPno <positive_integer>
```

Example:

```
1 add lb vserver diameter_vs DIAMETER 10.102.112.152 3868 -
   persistenceType DIAMETER -persistAVPno 263
```

Bind the Diameter services to the Diameter load balancing virtual server.

```
1 bind lb vserver <name> <serviceName>
```

Example:

```
1 bind lb vserver diameter_vs diameter_svc0
2
3 bind lb vserver diameter_vs diameter_svc1
4
5 bind lb vserver diameter_vs diameter_svc2
6
7 bind lb vserver diameter_vs diameter_svc3
```

Save the configuration.

```
1 save ns config
```

Note: You can also configure load balancing of Diameter traffic over SSL by using the **SSL_DIAMETER** service type.

To configure load balancing for Diameter traffic by using the configuration utility

1. Navigate to **System > Settings > Change Diameter Parameters** and set the diameter parameters.
2. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and create a load balancing virtual server of type Diameter.
3. Create a service of type Diameter.
4. Create a monitor of type Diameter. In Special parameters, set the origin host and origin realm.
5. Bind the monitor to the service, and bind the service to the Diameter virtual server.
6. In Advanced Settings, click **Persistence**, specify the diameter, and enter a persistence AVP number.
7. Click **Save**, and click **Done**.

Configure FIX load balancing

May 2, 2023

Financial Information eXchange (FIX) protocol is an open message standard used in the financial industry for electronic exchange of information related to securities transaction between trading partners. FIX/SSL_FIX protocol is used extensively by buy-side and sell-side firms, trading platforms, and regulators for communicating trade information.


This feature enables you to configure a FIX or SSL_FIX load balancing virtual server to distribute incoming FIX messages and provide security in FIX messaging. NetScaler supports FIX message based load balancing (MLB) for FIX 4.1, FIX 4.2, FIX 4.3, and FIX 4.4 versions.

FIX MLB on a NetScaler appliance provides the following benefits:

1. Efficient management of FIX or SSL_FIX servers with superior HA and health monitoring.
2. SYN protection to all FIX or SSL_FIX servers.
3. FIX session persistence.

How FIX load balancing works

A FIX MBLB setup includes a FIX load-balancing virtual server and multiple load-balanced FIX servers. The FIX virtual server receives incoming client traffic, parses the incoming traffic into FIX messages, selects a FIX server for each FIX message, and forwards the message to the selected FIX server. The following conceptual drawing illustrates a typical FIX load balancing setup.

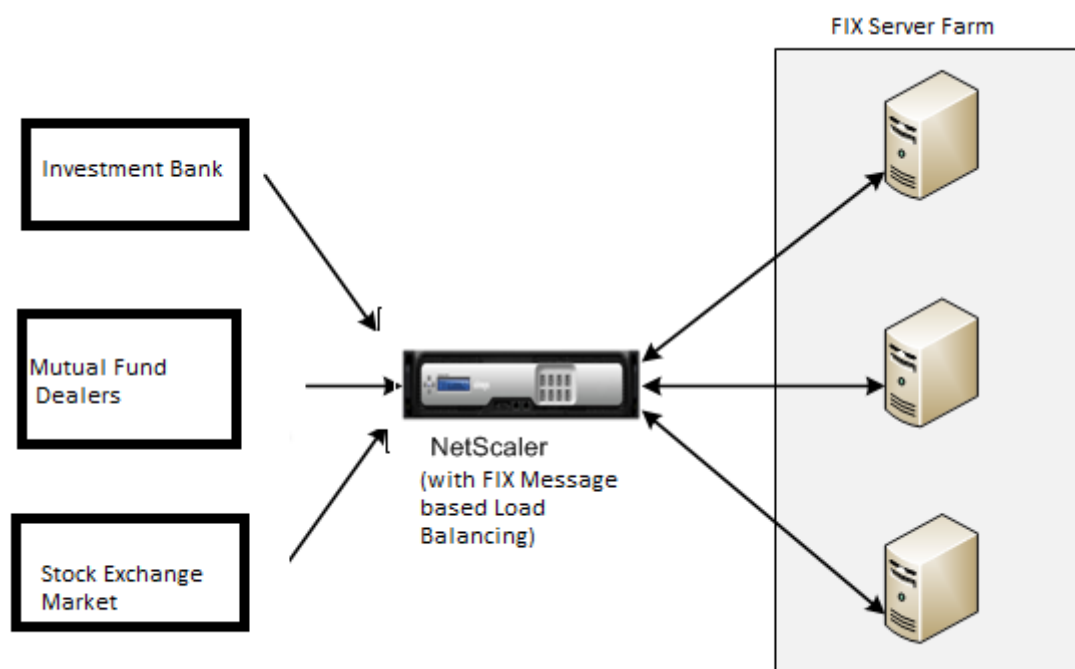

In a basic FIX MBLB setup, the FIX virtual server distributes FIX messages coming from clients to the load-balanced FIX servers using the round robin load-balancing method. With persistence of type FIXSESSION enabled, the FIX virtual server selects the same server for different FIX messages belonging to the same FIX session. The FIX session is determined based on the values of the **FIX** fields Sender-CompID (tag 49) and TargetCompID (tag 56).

Configure and monitor load balancing for FIX traffic

Following are the configurations that you must do to load balance FIX message traffic:

1. Configuring FIX load balancing virtual server
2. Configuring SSL_FIX load balancing virtual server
3. Configuring FIX load balancing service
4. Configuring SSL_FIX load balancing service
5. Configuring FIXSESSION persistence
6. Setting persistence timeout
7. Displaying FIX/SSL_FIX stats

8. Monitoring FIX/SSL_FIX persistent sessions

To configure a FIX load balancing server by using the command line interface

At the command prompt, type:

```
1 add lb vserver <name> FIX <IP> <PORT>
```

Example

```
1 add lb vserver vs1 FIX 10.102.82.86 3868
```

To configure a SSL_FIX load balancing virtual server by using the command line interface

At the command prompt, type:

```
1 add lb vserver <name> SSL_FIX <IP> <PORT>
```

Example

```
1 add lb vserver vs1 SSL_FIX 10.102.82.86 3868
```

To configure a FIX service by using the command line interface

At the command prompt, type:

```
1 add service <name> <ip-addr> FIX <port>
```

Example

```
1 add service_svc1 10.102.82.86 FIX 3868
```

To configure a SSL_FIX service by using the command line interface

At the command prompt, type:

```
1 add service <name> <ip-addr> SSL_FIX <port>
```

Example

```
1 add service svc1 10.102.82.86 SSL_FIX 3868
```


To configure FIXSESSION persistence by using the command line interface

At the command prompt, type:

```
1 set lb vserver <name> -persistenceType FIXSESSION
```

Example

```
1 set lb vserver vs1 -persistenceType FIXSESSION
```

To set persistence timeout by using the command line interface

At the command prompt, type:

```
1 set lb vserver <name> -timeout <value>
```

Example

```
1 set lb vserver vs1 -timeout 2
```

To display FIX stats by using the command line interface

At the command prompt, type:

```
1 stat lb vserver <name>
```

Example

```
1 stat lb vserver_svc1
```

To bind FIX service to FIX virtual server by using the command line interface

At the command prompt, type:

```
1 bind lb vserver <name> <service name>
```

Example

```
1 bind lb vserver vs1 svc1
```

To display FIX persistent sessions by using the command line interface

At the command prompt, type:

```
1 show lb persistentSessions <name>
```

Example

```
1 show lb persistentSessions vs1
```

Note

Note: You can now configure the load balancing of FIX traffic over SSL by using the SSL_FIX service type. This service provides secured communication for FIX messages.

To configure FIX load balancing virtual server by using the GUI

1. Navigate to the **Configuration > Traffic Management > Load Balancing > Virtual Servers** page and click **Add** to create a FIX Load Balancing virtual server.
2. On the **Load Balancing Virtual Server** page, set the server parameters:
 - a) Virtual Server Name
 - b) Protocol type as “FIX”
 - c) Server IP Address Type
 - d) Server IP Address
 - e) Server Port Number
3. Click **OK** and **Continue** to set other parameters.
4. In the **Services** section, select or add a new FIX load balancing virtual service, and bind it to the FIX server.
5. In the **Persistence** section, set the following parameters:
 - a) Persistence type as ‘FIXSESSION’
 - b) Time-out interval
6. Click **OK** and then **Done**.

To edit a FIX load balancing virtual server by using the GUI

Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers** page, select a FIX server and click **Edit**.

To delete a FIX load balancing virtual server by using the GUI

Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers** page, select a FIX server, and click **Delete**.

To configure FIX Load Balancing Virtual Service by using the GUI

1. Navigate to **Configuration > Traffic Management > Load Balancing > Services** page and click **Add** to create a FIX Load Balancing virtual service.
2. On the **Services** page, set the following parameters. You can click the 'More' arrow to set other parameters such as Traffic Domain, Hash ID, Server ID, Cache Type, and Number of Active Connections.
 - a) Service Name –FIX Virtual Service Name
 - b) Choose Virtual Server type as (New or Existing)
 - c) Protocol –Protocol Type as 'FIX'
 - d) Server –Virtual Server IP address
 - e) Port –Server Port Number
3. Click **OK** and **Continue** to set other parameters such as Monitors, Threshold & Timeout, Profiles, and Policies.
4. Click **OK** and then **Done**.

To edit a FIX load balancing virtual service by using the GUI

Navigate to **Configuration > Traffic Management > Load Balancing > Services** page, select a **FIX service** and click **Edit**.

To delete a FIX load balancing virtual service by using the GUI

Navigate to **Configuration > Traffic Management > Load Balancing > Services** page, select a FIX service, and click **Delete**.

To display FIX load balancing server statistics

Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers** page and then click **Statistics** to display the FIX server statistics.

To display Persistent sessions for a FIX server by using the GUI

Navigate to **Configuration > Traffic Management** page and, under **Monitor Sessions** click **Virtual Server Persistent Sessions**.

To clear Persistent sessions for a FIX server by using the GUI

1. Navigate to **Configuration > Traffic Management** page and, under **Monitor Sessions** click **Clear Persistent Sessions**.
2. On the **Clear Persistent Sessions** page, set the following parameters:
 - a) Virtual Server –Choose a FIX virtual server
 - b) Persistence Parameter –Choose a FIX persistence parameter
3. Click **OK**.

MQTT load balancing

May 2, 2023


The Message Queuing Telemetry Transport (MQTT) is an OASIS standard messaging protocol for the Internet of Things (IoT). MQTT is a flexible and easy-to-use technology that provides effective communication within an IoT system. MQTT is a broker-based protocol and is widely used to facilitate the exchange of messages between clients and broker.

The following key benefits of MQTT make it a well-suited option for your IoT device:

- Reliability
- Fast response time
- Capability to support unlimited devices
- Publish/subscribe messaging that is perfect for many-to-many communication

IoT is the network of interconnected devices that are embedded with sensors, software, network connectivity, and necessary electronics. The embedded components enable IoT devices to collect and exchange data. The increase in use of IoT devices brings in multiple challenges for network infrastructure, with Scale being the prominent one. In a large scale deployment of IoT devices, the data generated by each IoT device needs to be analyzed swiftly. To achieve the scale requirement and efficient usage of resources, the load on the broker pool must be distributed evenly. With the support of the MQTT protocol, you can use the NetScaler appliance in IoT deployments to load balance the MQTT traffic.

The following figure depicts the MQTT architecture using a NetScaler appliance to load balance the MQTT traffic.

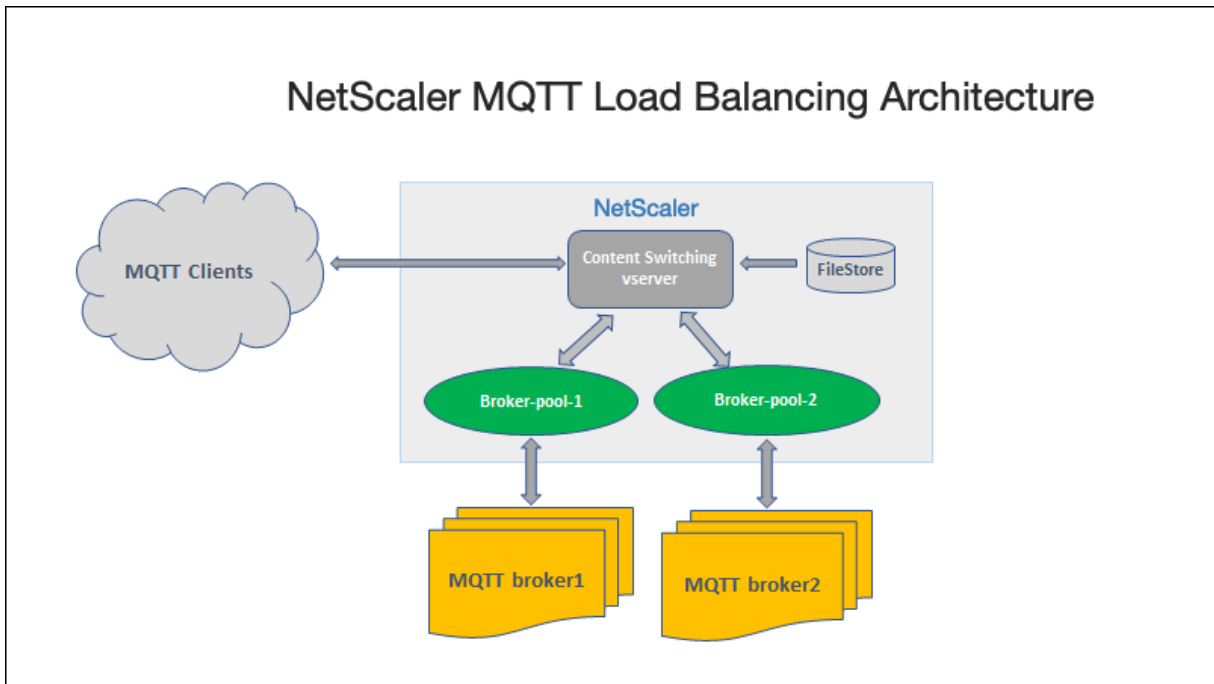

An IoT deployment with MQTT protocol has the following components:

- **MQTT broker.** A server that receives all messages from the clients and then routes the messages to the appropriate destination clients. The broker is responsible for receiving all messages, filtering the messages, determining who is subscribed to each message, and sending the message to these subscribed clients. The broker is the central hub through which every message must pass.
- **MQTT client.** Any device, from a micro controller up to a full-fledged server, which runs an MQTT library and connects to an MQTT broker over a network. Both publishers and subscribers are MQTT clients. The publisher and subscriber labels refer to whether the client is publishing messages or subscribed to receive messages.
- **MQTT load balancer.** The NetScaler appliance is configured with an MQTT load balancing virtual server to load balance MQTT traffic.

In a typical IoT deployment, the broker (cluster of servers) manages the group of IoT devices (IoT clients). The NetScaler appliance load balances the MQTT traffic to the brokers based on various parameters, such as Client ID, topic, and user name.

Configure load balancing for MQTT traffic

For the NetScaler appliance to load balance MQTT traffic, perform the following configuration tasks:

1. Configure MQTT/MQTT_TLS services or service groups.
2. Configure MQTT/MQTT_TLS load balancing virtual server.

3. Bind the MQTT/MQTT_TLS services to the MQTT/MQTT_TLS load balancing virtual server.
4. Configure MQTT/MQTT_TLS content switching virtual server.
5. Configure a content switching action that specifies the target load balancing virtual server
6. Configure a content switching policy.
7. Bind the content switching policy to a content switching virtual server that is already configured to redirect to the specific load balancing virtual server.
8. Save the configuration.

To configure load balancing for MQTT traffic by using the CLI

Configure MQTT/MQTT_TLS services or service groups.

```
1 add service <name> <IP> <protocol> <port>
2 add servicegroup <ServiceGroupName> <Protocol>
3 bind servicegroup <serviceGroupName> <IP> <port>
```

Example:

```
1 add service srvcl 10.106.163.3 MQTT 1883
2 add servicegroup srvcg1 MQTT
3 bind servicegroup srvcg1 10.106.163.3 1883
```

Configure MQTT/MQTT_TLS load balancing virtual server.

```
1 add lb vserver <name> <protocol> <IPAddress> <port>
```

Example:

```
1 add lb vserver lb1 MQTT 10.106.163.9 1883
```

Bind the MQTT/MQTT_TLS services or service groups to the MQTT load balancing virtual server.

```
1 bind lb vserver <name> <serviceName>
2 bind lb vserver <name> <servicegroupName>
```

Example:

```
1 bind lb vserver lb1 srvcl
2 bind lb vserver lb1 srvcg1
```

Configure MQTT/MQTT_TLS content switching virtual server.

```
1 add cs vserver <name> <protocol> <IPAddress> <port>
```

Example:

```
1 add cs vserver cs1 MQTT 10.106.163.13 1883
```

Configure a content switching action that specifies the target load balancing virtual server.

```
1 add cs action <name> -targetLBVserver <string> [-comment <string>]
```

Example:

```
1 add cs action act1 -targetlbvserver lbv1
```

Configure a content switching policy.

```
1 add cs policy <policyName> [-url <string> | -rule <expression>] -
  action <actName>
```

Example:

```
1 add cs policy cspol1 -rule "MQTT.COMMAND.EQ(CONNECT) && MQTT.CONNECT
  .FLAGS.QOS.eq(2)" -action act1
```

Bind the content switching policy to a content switching virtual server that is already configured to redirect to the specific load balancing virtual server.

```
1 bind cs vserver <virtualServerName> -policyName <policyName> -priority
  <positiveInteger>
```

Example:

```
1 bind cs vserver cs1 -policyName cspol1 -priority 20
```

Save the configuration.

```
1 save ns config
```

To configure load balancing for MQTT traffic by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and create a load balancing virtual server of type **MQTT** or **MQTT_TLS**.
2. Create a service or service group of type MQTT.
3. Bind the service to the MQTT virtual server.
4. Click **Save**.

MQTT message length limit

The NetScaler appliance treats the messages with message length greater than 65536 bytes as jumbo packets, and discard them by default. The `dropmqttjumbomessage` lb parameter decides whether to process the jumbo packets or not. This parameter is by default set to **YES**, which implies that the jumbo MQTT packets are dropped by default. If this parameter is set to **NO**, the ADC appliance handles even the packets with message length greater than 65536 bytes.

To configure the ADC appliance to handle jumbo packets by using CLI:

```
1 Set lb parameter - dropMqttJumboMessage [YES | NO]
```

Example:

```
1 set lb parameter - dropMqttJumboMessage no
```

Protect a load balancing configuration against failure

May 2, 2023

When a load balancing virtual server fails, or when the virtual server is unable to handle excessive traffic, the load balancing setup can fail. You can protect your load balancing setup against failure by configuring;

- the NetScaler appliance to redirect excess traffic to an alternate URL,
- a backup load balancing virtual server, and
- a stateful connection failover.

Redirect client requests to an alternate URL

October 8, 2023

You can redirect requests to an alternate URL by using an HTTP 302 redirect if a load balancing virtual server of type HTTP or HTTPS goes DOWN or is disabled. The alternate URL can provide information about the status of the server. The configured redirect URL is specified in the location header of the HTTP response. The exact URL specified in the response depends on the following configuration options:

- If the configured redirect URL contains only the domain name, such as <http://www.sample1.example.com>, the redirect URL specified in the HTTP response appends the Uniform Resource Identifier (URI). It is specified in the HTTP request to the configured domain name. For example, if the request contains the GET http://www.sample2.example.com/images/site_nav.png header, then the location header in the redirect response specifies the location: http://www.sample1.example.com/images/site_nav.png header.

Note

The domain names in the request and response can differ. In this topic, the two domains

are referred to as `sample1.example.com` and `sample2.example.com` to explain the concept.

- If the configured redirect URL contains a complete path, then the redirect response specifies the complete configured URL, irrespective of the URI in the request. For example, the following are such URLs:
 - Requested URL - <http://www.redirect.com/en/index.html>
 - Redirect URL - http://www.redirect.com/en/site_down.html

The following table lists the preceding configuration options:

Configured Redirect URL	URL in HTTP Request	Header
http://www.sample1.example.com	http://www.sample2.example.com/en/index.html	http://v
http://www.sample1.example.com/en/error.html	http://www.sample2.example.com/en/index.html	http://v

Note

- When configuring a redirect URL, the <http://example.com> URL is not the same as the <http://example.com/> URL, because the latter contains the complete path to the Webroot path, `/.`
- If a load balancing virtual server is configured with both a backup virtual server and a redirect URL, the backup virtual server takes precedence over the redirect URL. A redirect is used only when both the primary and backup virtual servers are DOWN.

To configure a virtual server to redirect the client request to a URL by using the CLI

1. Create a load balancing virtual server.


```
set lb vserver -redirect url
```
2. Verify that the redirect URL option is working as expected. Disable the virtual server.


```
disable vserver <vserver_name>
```
3. Access the website URL from a web browser to verify that the request is redirected as expected. You might have to clear the web browser cache and make a new connection before accessing the website.
4. Enable virtual server.


```
enable vserver <vserver_name>
```

To configure a virtual server to redirect the client request to a URL by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, to add a new virtual server, click **Add**.
3. To edit an existing virtual server, select the virtual server from the list and click **Edit**.
4. On the **Advanced Settings** tab, click **Protection**. In the **Redirect URL** field, type the redirect URL (for example, <http://www.newdomain.com/mysite/maintenance>).
5. Click **OK**.

Configure a backup load balancing virtual server

June 7, 2023

You can configure the NetScaler appliance to direct requests to a backup virtual server when the primary load balancing virtual server is DOWN or unavailable. The backup virtual server is a proxy and is transparent to the client. The appliance can also send a notification message to the client regarding the site outage.

The backup load balancing virtual server ensures minimal disruption when the primary method is unavailable, increasing the availability and reliability of the load balanced environment.

Note:

The backup virtual server continues to handle the existing connections, even after the primary virtual server is deleted or disabled.

You can configure a backup load balancing virtual server when you create it, or you can change the optional parameters of an existing virtual server. You can also configure a backup virtual server for an existing backup virtual server, thus creating cascading backup virtual servers. The maximum depth of cascading backup virtual servers is 10.

If you have multiple virtual servers that connect to two servers, you have a choice for what happens if the primary virtual server goes DOWN and then comes back up. The default behavior is for the primary virtual server to resume its role as primary. However, you can configure the backup virtual server to remain in control when it takes over. For example, you can sync the updates on the backup virtual server to the primary virtual server and then manually force the original primary server to resume its role. In this case, you can designate the backup virtual server to remain in control when the primary virtual server goes DOWN and then comes back up.

You can configure a redirect URL on the primary load balancing virtual server as a fallback when both the primary and the backup virtual servers are DOWN or have reached their threshold for handling

requests. When services bound to virtual servers are OUT OF SERVICE, the appliance uses the redirect URL.

Backup LB Method is displayed if the following load balancing methods are selected:

- Least connection
- Least response time
- Round robin
- Least bandwidth
- Least packets
- Custom load
- Least request
- Static proximity

Note

If a load balancing virtual server is configured with both a backup virtual server and a redirect URL, then the backup virtual server takes precedence over the redirect URL. A redirect is used only when the primary and backup virtual servers are down.

To set a backup virtual server by using the CLI

At the command prompt, type:

```
1 set lb vserver <vServerName> -backupVserver <BackupVServerName> [-  
  disablePrimaryOnDown]
```

Example:

```
1 set lb vserver Vserver-LB-1 -backupVserver Vserver-LB-2 -  
  disablePrimaryOnDown
```

To set a backup virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In Advanced Settings, click **Protection**, and select a backup virtual server.
3. If you want the backup virtual server to remain in control until you manually enable the primary virtual server even if the primary virtual server comes back up, select **Disable Primary When Down**.

Note: Starting from NetScaler version 12.1 build 51.xx, the GUI displays the effective state of that server indicating if the backup is active or not.

The effective state of the current server can be one of the following:

- **UP** –Indicates that the server is UP
- **DOWN** –Indicates that the server is DOWN
- **UP (Backup Active)** –Indicates that either the primary or the secondary virtual server is UP and traffic is directed to the backup virtual server.
- **DOWN (Backup Active)** –Indicates that both the primary and the backup virtual servers are down and traffic is routed to the backup virtual server.

When the **Disable Primary When Down** option is enabled on the primary virtual server and the primary server goes DOWN and is back UP again, the traffic is still served by the backup virtual server until the primary virtual server is re-enabled explicitly. You can use the command `enable lb vserver <vserver_name>` command to re-enable the primary virtual server.

Configure spillover

May 2, 2023

A spillover configuration on the appliance consists of a primary virtual server that is configured with a spillover method, a spillover threshold, and a backup virtual server. Backup virtual servers can also be configured for spillover, creating a chain of backup virtual servers.

The spillover method specifies the operational condition on which you want to base your spillover configuration (for example, the number of established connections, bandwidth, or combined health of the server farm). When a new connection arrives, the appliance verifies that the primary virtual server is up and compares the operational condition with the configured spillover threshold. If the threshold is reached, the spillover feature diverts new connections to the first available virtual server in the backup chain. The backup virtual server manages the connections it receives until the load on the primary falls below the threshold.

If you configure spillover persistence, the backup virtual server continues to process the connections it received, even after the load on the primary falls below the threshold. If you configure spillover persistence and a spillover persistence timeout, the backup virtual server processes connections for only the specified period after the load on the primary falls below the threshold.

Note: Usually, spillover is triggered if the value associated with the spillover method exceeds the threshold (for example, number of connections). However with the server-health spillover method, spillover is triggered if the health of the server farm falls below the threshold.

You can configure spillover in one of the following ways:

- Specify a predefined spillover method. Four predefined methods are available, and they fulfill common spillover requirements.
- Configure policy based spillover. In policy based spillover, you use a NetScaler rule to specify the conditions for spillover to occur. NetScaler rules give you the flexibility to configure spillover for various operational conditions.

Use policy based spillover if a predefined method does not satisfy your requirements. If you configure both for a primary virtual server, the policy based spillover configuration takes precedence over the predefined method.

First, you create the primary virtual server and the virtual servers that you need for the backup chain. You set up the backup chain by specifying one virtual server as the backup for the primary (that is, you create a secondary virtual server), a virtual server as the backup for the secondary (that is, you create a tertiary virtual server), and so on. Then, you configure spillover by either specifying a predefined spillover method or creating and binding spillover policies.

For instructions for assigning a virtual server as the backup for another virtual server, see [Configuring a Backup Load Balancing Virtual Server](#).

Configure a predefined spillover method

Predefined spillover methods fulfill some of the more common spillover requirements. To use one of the predefined spillover methods, you configure spillover parameters on the primary virtual server. To create a chain of backup virtual servers, you also configure spillover parameters on backup virtual servers.

If the backup virtual servers reach their own threshold values, and the service type is TCP, the NetScaler appliance sends clients a TCP reset. For service types HTTP, SSL, and RTSP, it diverts new requests to the redirect URL configured for the primary virtual server. A redirect URL can be specified for only HTTP, SSL, and RTSP virtual servers. If a redirect URL is not configured, the NetScaler appliance sends clients a TCP reset (if the virtual server is of type TCP) or an HTTP 503 response (if the virtual server is of type HTTP or SSL).

Note: With RTSP virtual servers, the NetScaler appliance uses only data connections for spillover. If the backup RTSP virtual server is not available, the requests are redirected to an RTSP URL and an RTSP redirect message is sent to the client.

To configure a predefined spillover method for a virtual server by using the command line interface

At the command prompt, type:

```
1 set lb vserver <vServerName> -soMethod <spilloverType> -soThreshold <
  positiveInteger> -soPersistence ENABLED -soPersistenceTimeout <
  positiveInteger>
```

Example

```
1 set lb vserver Vserver-LB-1 -soMethod Connection -soThreshold 1000 -
  soPersistence enabled -soPersistenceTimeout 2
```

To configure a predefined spillover method for a virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In Advanced Settings, click **Protection**, and set the spillover parameters.

Configure policy based spillover

Spillover policies, which are based on rules (expressions), enable you to configure the appliance for a wider range of spillover scenarios. For example, you can configure spillover based on the virtual server's response time, or based on the number of connections in the virtual server's surge queue.

To configure policy based spillover, first create a spillover action. You then select the expression that you want to use in the spillover policy, configure the policy, and associate the action with it. Finally, you bind the spillover policy to a load balancing, content switching, or global server load balancing virtual server. You can bind multiple spillover policies to a virtual server, with priority numbers. The appliance evaluates the spillover policies in ascending order of priority numbers and performs the action associated with the last policy to evaluate to TRUE.

A virtual server can also have a backup action. The backup action is performed if the virtual server does not have one or more backup virtual servers, or if all backup virtual servers are DOWN, disabled, or have reached their own spillover limits.

When a spillover policy results in an UNDEF condition (an exception thrown when the result of policy evaluation is undefined), an UNDEF action is performed. The UNDEF action is always ACCEPT. You cannot specify an UNDEF action of your choice.

Configuring a Spillover Action

A spillover action is performed when the spillover policy with which it is associated evaluates to TRUE. Currently, SPILLOVER is the only supported spillover action.

To configure policy based spillover by using the command line interface At the command prompt, type the following commands to configure a spillover policy and verify the configuration:

```
1 add spillover action <name> -action SPILLOVER
2
3 show spillover action <name>
```

Example

```
1 add spillover action mySoAction -action SPILLOVER
2 Done
```

```
1 show spillover action mySoAction
2 1) Name: mySoAction Action: SPILLOVER
3 Done
```

Selecting an Expression for the Spillover Policy

In the policy expression, you can use any virtual-server based expression that returns a Boolean value. For example, you can use one of the following expressions:

```
1 SYS.VSERVER("vserver").RESPTIME.GT(<int>)
2 SYS.VSERVER("vserver").STATE.EQ(" <string> "), and
3 SYS.VSERVER("vserver").THROUGHPUT.LT (<int>)
```

In addition to the existing functions such as RESPTIME, STATE, and THROUGHPUT, you can use the following virtual server based functions that have been introduced with this feature:

Averagesurgecount Returns the average number of requests in the surge queues of active services. Returns 0 (zero) if there are no active services. Raises an UNDEF condition if used with a content switching or global server load balancing virtual server.

Activeservices Returns the number of active services. Raises an UNDEF condition if used with a content switching or global server load balancing virtual server.

Activetransactions Returns the value of the virtual-server-level counter for current active transactions.

is_dynamic_limit_reached Returns a Boolean TRUE if the number of connections that the virtual server manages is equal to the dynamically calculated threshold. The dynamic threshold is the sum of the maximum client (Max Clients) settings of the bound services that are UP.

You can use a policy expression to implement any of the predefined spillover methods. The following table maps the predefined spillover methods to the expressions you can use to implement them:

Table 1. Converting predefined spillover methods to policy expressions

Predefined spillover method	Corresponding expression
CONNECTION	SYS.VSERVER("<vserver-name>").CONNECTIONS, used with the GT(int) arithmetic function.
BANDWIDTH	SYS.VSERVER("<vserver-name>").THROUGHPUT, used with the GT(int) arithmetic function.
HEALTH	SYS.VSERVER("<vserver-name>").HEALTH, used with the LT(int) arithmetic function.
DYNAMICCONNECTION	SYS.VSERVER("<vserver-name>").IS_DYNAMIC_LIMIT_REACHED Note: If you implement policy based spillover by using the IS_DYNAMIC_LIMIT_REACHED function, you must also configure the predefined DYNAMICCONNECTION method for the virtual server, so that the statistics required for spillover to work are collected.

Configuring a Spillover Policy

A spillover policy uses a Boolean expression as a rule to specify the conditions that must be met for spillover to occur.

To configure a spillover policy by using the command line interface At the command prompt, type the following commands to configure a spillover policy and verify the configuration:

```
1 add spillover policy <name> -rule <expression> -action <string> [-
  comment <string>]
2
3 show spillover policy <name>
```

Example

```
1 > add spillover policy mySoPolicy -rule SYS.VSERVER("v1").RESPTIME.GT
  (50) -action mySoAction -comment "Triggers spillover when the
  vserver's response time is greater than 50 ms."
2 Done
```



```

3
4 > show spillover policy mySoPolicy
5
6 1) Name: mySoPolicy Rule: "SYS.VSERVER("v1").RESPTIME.GT(50)" Action:
   mySoAction Hits: 0 ActivePolicy: 0
7 Comment: "Triggers spillover when the vserver's response time is
   greater than 50 ms."
8 Done
9 >

```

Binding a Spillover Policy to a Virtual Server

You can bind a spillover policy to load balancing, content switching, or global server load balancing virtual servers). You can bind multiple policies to a virtual server, with Goto expressions controlling the flow of evaluation.

To bind a spillover policy to a virtual server by using the command line interface At the command prompt, type the following commands to bind a spillover policy to a load balancing, content switching, or global server load balancing virtual server and verify the configuration:

```

1 bind (lb | cs | gslb) vserver <name> -policyName <string> -priority <
   positive_integer> [-gotoPriorityExpression <expression>]
2
3 show (lb | cs | gslb) vserver <name>

```

Example

```

1 > bind lb vserver vserver1 -policyName mySoPolicy -priority 5
2 Done
3 > show lb vserver vserver1
4 vserver1 (2.2.2.12:80) - HTTP Type: ADDRESS
5 . . .
6
7 1) Spillover Policy Name: mySoPolicy Priority: 5
8 GotoPriority Expression: END
9 Flowtype: REQUEST
10 Done
11 >

```

Configuring a Backup Action for a Spillover Event

A backup action specifies what to do when the spillover threshold is reached but one or more backup virtual servers are either not configured or are down, disabled, or have reached their own thresholds.

Note: For the predefined spillover methods that are configured directly on the virtual server (as values of the Spillover Method parameter), the backup action is not configurable. By default, the appliance

sends clients a TCP reset (if the virtual server is of type TCP) or an HTTP 503 response (if the virtual server is of type HTTP or SSL).

The backup action is configured on the virtual server. You can configure the virtual server to accept requests (after the threshold specified by the policy is reached), redirect clients to a URL, or simply drop requests even before establishing TCP or SSL connections until the number of requests falls below the threshold. Therefore, lesser memory resources are utilized as the connections are reset even before allocating any data structures.

To configure a backup action for spillover by using the CLI At the command prompt, type the following commands to configure a backup action and verify the configuration:

```
1 set lb vsrver <name> -soBackupAction <soBackupAction>
2
3 show lb vsrver <name>
```

Example:

```
1 set lb vsrver vs1 -soBackupAction REDIRECT -redirectURL `http://www.
   mysite.com/maintenance`
2 Done
3 > show lb vsrver vs1
4 vs1 (10.102.29.76:80) - HTTP Type: ADDRESS
5 State: UP
6 . . .
7 Redirect URL: `http://www.mysite.com/maintenance`
8 . . .
9 Done
```

To configure a backup action for spillover by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In Advanced Settings, click **Protection**, and then specify a spillover backup action.

Connection failover

July 5, 2024

Connection failover helps prevent disruption of access to applications deployed in a distributed environment. In a NetScaler High Availability (HA) setup, *connection failover* (or *connection mirroring-CM*) refers to keeping active an established TCP or UDP connection when a failover occurs. The new primary NetScaler appliance has information about the connections established before the failover

and continues to serve those connections. After failover, the client remains connected to the same physical server. The new primary appliance synchronizes the information with the new secondary appliance. If the L2Conn parameter is set, Layer 2 connection parameters are also synchronized with the secondary.

Note:

Consider a HA setup, where a client establishes a session with the primary node, which in turn establishes a session with the back end server. When a failover is triggered in this state, the packets received on a new primary from the existing client and server nodes are treated as stale packets, and the client and server connections are reset. Whereas if stateless connection failover is enabled (USIP is ON), after the failover, the connections are not reset when you receive packets from client or server nodes. Instead, the client and server connections are created dynamically.

You can set up connection failover in either stateless or stateful mode. In the stateless connection failover mode, the HA nodes do not exchange any information about the connections that are failed over. This method has no runtime overhead.

In the stateful connection failover mode, the primary appliance synchronizes the data of the failed-over connections with the new secondary appliance.

Connection failover is helpful if your deployment has long lasting connections. For example, if you are downloading a large file over FTP and a failover occurs during the download, the connection breaks and the download is aborted. However, if you configure the connection failover in stateful mode, the download continues even after the failover.

How connection failover works on NetScaler appliances

In a stateless connection failover, the new primary appliance tries to re-create the packet flow according to the information contained in the packets it receives.


In stateful failover, to maintain current information about the mirrored connections, the primary appliance sends messages to the secondary appliance. The secondary appliance maintains the data related to the packets but uses it only in the event of a failover. If a failover occurs, the new primary (old secondary) appliance starts using the stored data about the mirrored connections and accepting traffic. During the transition period, the client and server might experience a brief disruption and retransmissions.

Note:

Verify that the primary appliance is able to authorize itself on the secondary appliance. To verify the correct configuration of the passwords, use the show `rpcnode` command from the command line or use the RPC option of the **Network** menu in the GUI.

A basic HA configuration with connection failover contains the entities shown in the following figure.

Figure 1. Connection Failover Entity Diagram

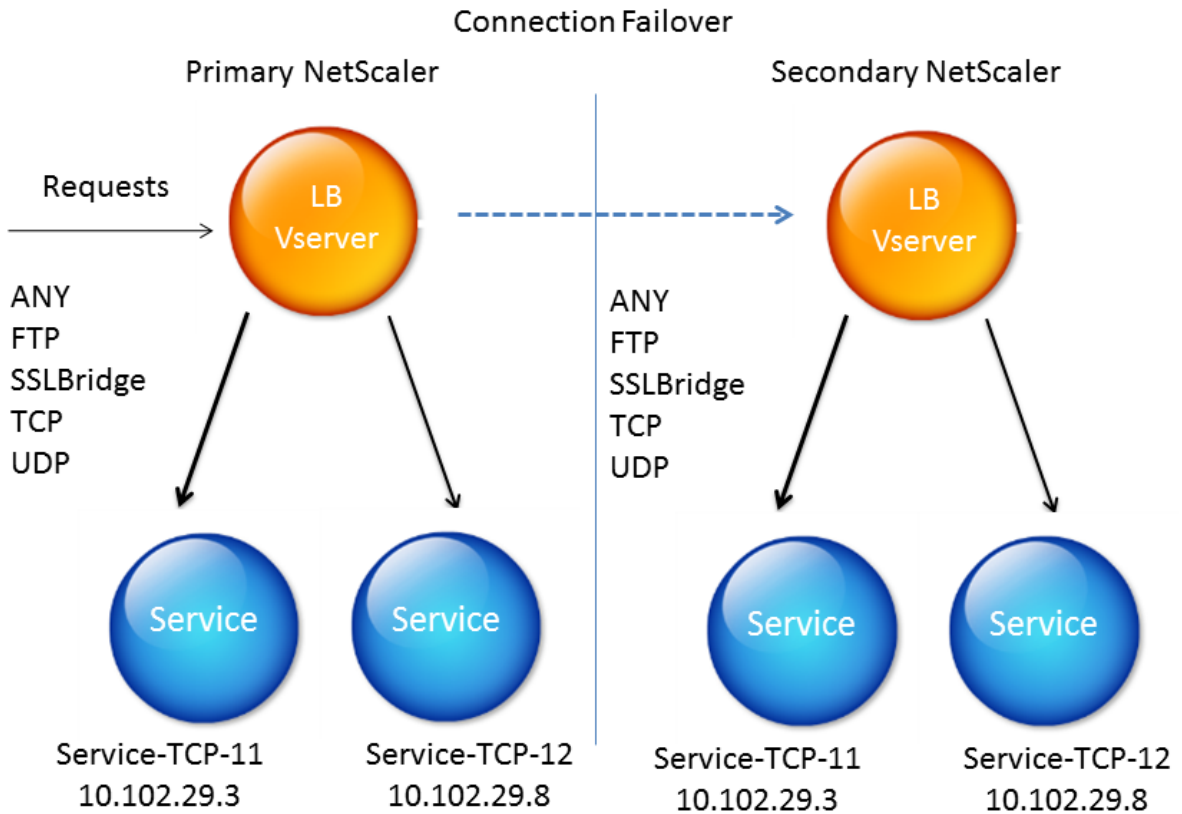

Note

Connection failover is not supported after either of the following events:

- An upgrade to a later release.
- An upgrade to a later build within the same release, if the new build uses a different HA version.

Supported setup

Connection failover can be configured only on load balancing virtual servers. It cannot be configured on content switching virtual servers. If you enable connection failover on load balancing virtual servers that are attached to a content switching virtual server, connection failover does not work because the load balancing virtual servers do not initially accept the traffic.

The following table describes the setup supported for connection failover.

Table 1. Connection Failover - Supported Setup

Setting	Stateless	Stateful
Service type	ANY.	ANY, UDP, TCP, FTP, SSL_BRIDGE.
Load balancing methods	All methods supported for the service type ANY. However, if Source IP persistence is not set, the SRCIPSRCPORHASH method must be used.	All methods applicable to the supported service types.
Persistence types	SOURCEIP persistence.	All types applicable to the supported service types are supported.
USIP	Must be ON.	No restriction. It can be ON or OFF.
Service bindings	Service can be bound to only one virtual server.	Service can be bound to one or more virtual servers.
Internet Protocol (IP) versions	IPv4 and IPv6	IPV4 and IPV6
Redundancy support	Clustering and high availability	High availability
INC mode	Not supported	Supported when virtual server service type is ANY, mode is DSR (MAC, IPTUNNEL, TOS), and USIP is enabled on the services bound to the virtual server.

Notes:

- Stateful connection failover is supported only for connection-based switching services, for example, TCP. Because HTTP uses request-based switching, it does not support connection failover. In SSL, the existing connections are reset after the failover.
- When you configure the rewrite policy on a virtual server with the connection failover stateful option, the connection will fail after the failover.

Features affected by connection failover

The following table lists the features affected if connection failover is configured.

Table 2. How Connection Failover Affects NetScaler Features

Feature	Impact of Connection Failover
SYN protection	For any connection, if a failover occurs after the appliance issues SYN-ACK but before it receives the final ACK, the connection is not supported by the connection failover. The client must reissue the request to establish the connection.
Surge protection	If the failover occurs before a connection with the server is established, the new primary appliance tries to establish the connection with the server. It also retransmits all the packets held during surge protection.
Access down	If enabled, the access-down functionality takes precedence over the connection failover.
Application firewall	The Application firewall feature is not supported.
INC	Independent network configuration (INC) is supported in the high availability mode only when the virtual server service type is ANY, mode is DSR (MAC, IPTUNNEL, TOS), and USIP is enabled on the services bound to the virtual server. In all other scenarios, INC is not supported.
TCP buffering	TCP buffering is not compatible with connection mirroring.
Close on response	After failover, the NATPCBs might not be closed on response.

To configure connection failover by using GUI

Navigate to **Traffic Management > Load Balancing > Virtual Servers**. Open the virtual server, and in **Advanced Settings**, click **Protection**, and select **Connection Failover** as **Stateful**.

To configure connection failover by using CLI

At the command prompt:

```
1 set lb vserver <vServerName> -connFailover <Value>
2 show lb vserver <vServerName>
```

Example:

```
1 set lb vserver Vserver-LB-1 -connFailover stateful
2 Done
```

When connection failover is disabled on a virtual server, the resources allocated to the virtual server are freed.

To disable connection failover by using CLI

At the command prompt:

```
1 set lb vserver <vServerName> -connFailover <Value>
2 show lb vserver <vServerName>
```

Example:

```
1 set lb vserver Vserver-LB-1 -connFailover disable
2 Done
```

To disable connection failover by using GUI

Navigate to **Traffic Management > Load Balancing > Virtual Servers**. Open the virtual server, in **Protection**, select **Connection Failover** as Disabled.

Flush the surge queue

May 2, 2023

When a physical server receives a surge of requests, it becomes slow to respond to the clients that are currently connected to it, which leaves users dissatisfied and disgruntled. Often, the overload also causes clients to receive error pages. The NetScaler appliance provides features such as surge protection, which controls the rate at which new connections to a service can be established and thus avoid overloads.

The appliance does connection multiplexing between clients and physical servers. When it receives a client request to access a service on a server, the appliance looks for an already established connection to the server that is free. If it finds a free connection, it uses that connection to establish a virtual link between the client and the server. If it does not find an existing free connection, the appliance establishes a new connection with the server, and establishes a virtual link between the client and the server. However, if the appliance cannot establish a new connection with the server, it sends

the client request to a surge queue. If all the physical servers bound to the load balancing or content switching virtual server reach the upper limit on client connections (max client value, surge protection threshold or maximum capacity of the service), the appliance cannot establish a connection with any server. The surge protection feature uses the surge queue to regulate the speed at which connections are opened with the physical servers. The appliance maintains a different surge queue for each service bound to the virtual server.

The length of a surge queue increases whenever a request comes for which the appliance cannot establish a connection. The length of a surge queue decreases in any of the following conditions:

- A request in the queue gets sent to the server.
- A request gets timed out and is removed from the queue.

If the surge queue for a service or service group becomes too long, you might want to flush it. You can flush the surge queue of a specific service or service group, or of all the services and service groups bound to a load balancing virtual server. Flushing a surge queue does not affect the existing connections. Only the requests present in the surge queue get deleted. For those requests, the client has to make a fresh request.

You can also flush the surge queue of a content switching virtual server. If a content switching virtual server forwards some requests to a particular load balancing virtual server, and the load balancing virtual server also receives some other requests, when you flush the surge queue of the content switching virtual server, only the requests received from this content switching virtual server are flushed. The other requests in the surge queue of the load balancing virtual server are not flushed.

Note: You cannot flush the surge queues of cache redirection, authentication, VPN, or GSLB virtual servers or GSLB services.

Note: Do not use the Surge Protection feature if Use Source IP (USIP) is enabled.

To flush a surge queue by using the CLI

The flush ns surgeQ command works in the following manner:

- You can specify the name of a service, service group, or virtual server whose surge queue has to be flushed.
- If you specify a name while running the command, the surge queue of the specified entity is flushed. If more than one entity has the same name, the appliance flushes the surge queues of all those entities.
- If you specify the name of a service group, and a server name and port while running the command, the appliance flushes the surge queue of only the specified service group member.
- You cannot directly specify a service group member (<serverName> and <port>) without specifying the name of the service group (<name>) and you cannot specify <port> without

a `<serverName>`. Specify the `<serverName>` and `<port>` if you want to flush the surge queue for a specific service group member.

- If you run the command without specifying any names, the appliance flushes the surge queues of all the entities present on the appliance.
- If a service group member is identified with a server name, you must specify the server name in this command; you cannot specify its IP address.

At the command prompt, type:

```
1 flush ns surgeQ [-name <name>] [-serverName <serverName> <port>]
```

Examples

```
1 flush ns surgeQ - name SVC1ANZGB - serverName 10.10.10.1 80
```

The previous command flushes the surge queue of the service or virtual server that is named SVC1ANZGB and has IP address as 10.10.10

```
1 flush ns surgeQ
```

The previous command flushes all the surge queues on the appliance.

To flush a surge queue by using the GUI

Navigate to **Traffic Management > Content Switching > Virtual Servers**, select a virtual server and, in the Action list, select **Flush Surge Queue**.

Manage a load balancing setup

May 2, 2023

An existing Load Balancing setup does not require a great deal of work to maintain as long as it is unchanged, but most do not remain unchanged for long. Increasing load requires new load-balanced servers and eventually new NetScaler appliances, which must be configured and added to the existing setup. Old servers wear out and must be replaced, requiring removal of some servers and addition of others. Upgrades to your networking equipment or changes to topology might also require modifications to your load balancing setup. Therefore, you need to perform operations on server objects, services, and virtual servers. The Visualizer can display your configuration graphically, and you can perform operations on the entities in the display. You can also take advantage of other features that facilitate management of the traffic through your load balancing setup.

Manage server objects

May 2, 2023

During basic load balancing setup, when you create a service, a server object with the IP address of the service is created, if one does not exist. If you prefer for your service objects named with domain names rather than IP addresses, you might also have created one or more server objects manually. You can enable, disable, or remove any server object.

When you enable or disable a server object, you enable or disable all services associated with the server object. When you refresh the NetScaler appliance after disabling a server object, the state of its service appears as OUT OF SERVICE. If you specify a wait time when disabling a server object, the server object continues to handle established connections for the specified amount of time, but rejects new connections. If you remove a server object, the service to which it is bound is also deleted.

To enable a server by using the CLI

At the command prompt, type:

```
1 enable server <name>
```

Example:

```
1 enable server 10.102.29.5
```

To enable or disable a server object by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Servers**.
2. Select the server and, in the Action list, select **Enable** or **Disable**.

To disable a server object by using the CLI

At the command prompt, type:

```
1 disable server <name> <delay>
```

Example:

```
1 disable server 10.102.29.5 30
```

To remove a server object by using the CLI

At the command prompt, type:

```
1 rm server <name>
```

Example:

```
1 rm server 10.102.29.5
```

To remove a server object by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Servers**.
2. Select a server, and click **Remove**.

Manage services

May 2, 2023

Services are enabled by default when you create them. You can disable or enable each service individually. When disabling a service, you normally specify a wait time during which the service continues to handle established connections, but rejects new ones, before shutting down. If you do not specify a wait time, the service shuts down immediately. During the wait time, the service's state is OUT OF SERVICE.

You can remove a service when it is no longer used. When you remove a service, it is unbound from its virtual server and deleted from the NetScaler configuration.

To enable or disable a service by using the CLI

At the command prompt, type:

```
1 enable service <name>
2
3 disable service <name> <DelayInSeconds>
```

Examples:

```
1 enable service Service-HTTP-1
2 disable service Service-HTTP-1 30
```


To enable or disable a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Open a service and, in the **Action** list, select **Enable** or **Disable**.

Identify the cause for the service state marked DOWN by using the GUI


Starting from NetScaler version 13.0 build 41.20, you can view the monitor probe information on the GUI for the services that are DOWN without navigating to the monitor binding interface. The value in the **Server State** column of the Services page is clickable. You can click **DOWN** to identify the root cause because of which the service is marked DOWN.

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Click **DOWN** in the **Server State** column corresponding to the service that is DOWN.

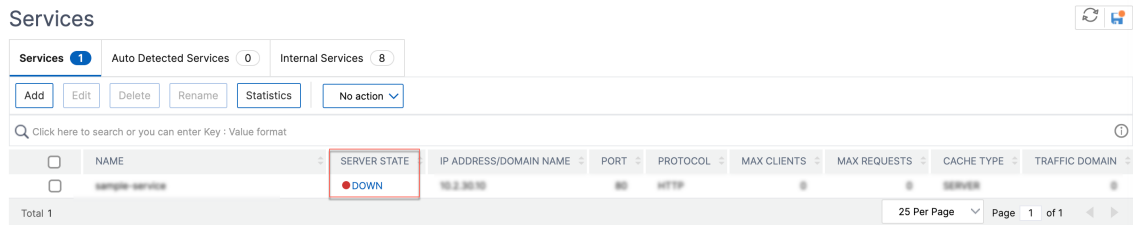

The Service to Load Balancing Monitor Binding page appears.

The **Last Response** column displays the reason because of which the service is marked DOWN.

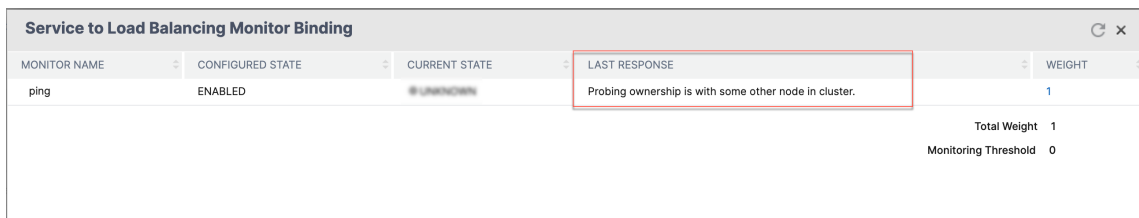

Manage a load balancing virtual server

May 2, 2023

Virtual servers are enabled by default when you create them. You can disable and enable virtual servers manually. If you disable a virtual server, the virtual service’s state appears as OUT OF SERVICE. When this happens, the virtual server terminates all connections, either immediately or after

allowing existing connections to complete, depending on the setting of the `downStateFLush` parameter. If `downStateFLush` is `ENABLED` (default), all the connections are flushed. If `DISABLED`, the virtual server continues to serve requests on existing connections.

You remove a virtual server only when you no longer require the virtual server. Before you remove it, you must unbind all services from it.

To enable or disable a virtual server by using the CLI

At the command prompt, type:

```
1 enable lb vserver <name>
```

```
1 disable lb vserver <name>
```

Examples:

```
1 enable lb vserver Vserver-LB-1
2 disable lb vserver Vserver-LB-1
```

To enable or disable a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select a virtual server, and in the **Action** list, select **Enable** or **Disable**.

To unbind a service from a virtual server by using the CLI

At the command prompt, type:

```
1 unbind lb vserver <name> <serviceName>
```

Example:

```
1 unbind lb vserver Vserver-LB-1 Service-HTTP-1
```


To unbind a service from a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open a virtual server, and click in the **Services** section.
3. Select a service and click **Unbind**.

Identify the cause for the virtual server state marked DOWN by using the GUI

Starting from NetScaler version 13.0 build 41.20, you can view the monitor probe information on the GUI for the virtual servers that are DOWN without navigating to the monitor binding interface. The value in the **% HEALTH** column of the Virtual Server page is clickable. You can click the value in the **% HEALTH** column to identify the root cause because of which the virtual server is marked DOWN.

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Click the value in the **% HEALTH** column corresponding to the virtual server that is down.

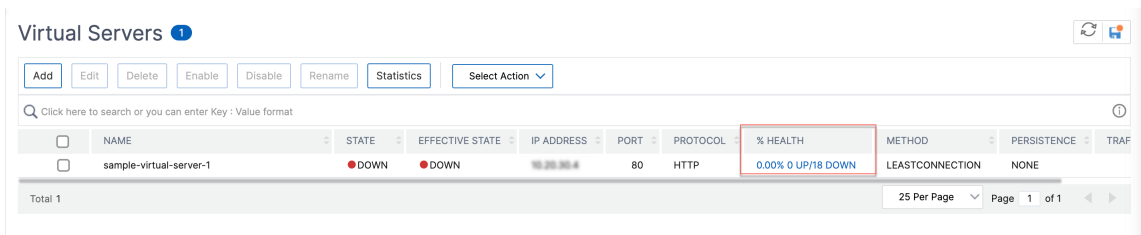


The Service and Service Group Monitor page appears. The services and service groups bound to this virtual server are displayed in the respective tabs.

If you are using services bound to load balancing virtual, perform the following:

In the **Services** tab, click **DOWN** corresponding to the service that is down.

The **Last Response** column in the Service to Load Balancing Monitor Binding page displays the reason because of which the virtual server is marked down.

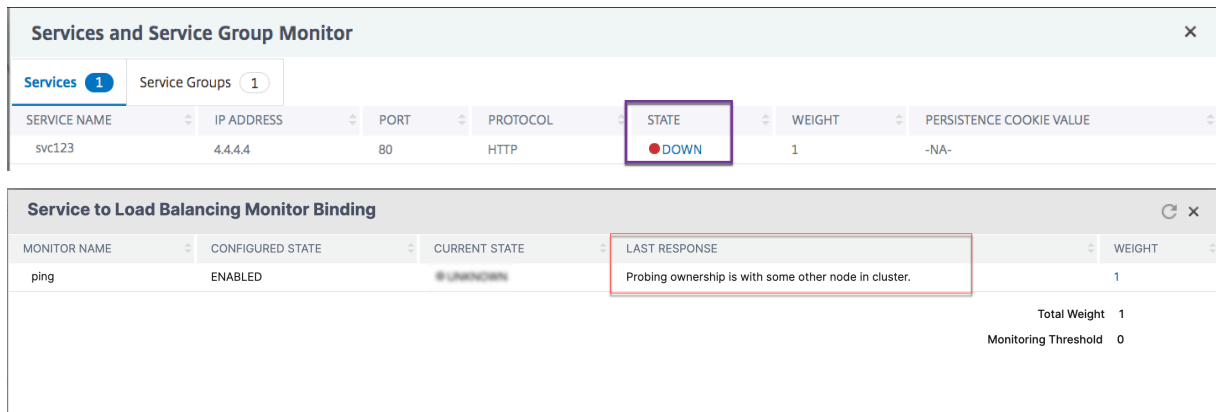

If you are using service groups bound to load balancing virtual, perform the following:

In the **Service Groups** tab, Click **DOWN** in the Services and Service Group Monitor page and then click **DOWN** in the Service Group Member page.

The **Last Response** column in the Service Groups Member Monitors page displays the reason because of which the virtual server is marked down.

Services and Service Group Monitor

Services 1 **Service Groups** 1

SERVICE GROUP NAME	STATE	EFFECTIVE STATE	TRAFFIC DOMAIN
svg-10a	● ENABLED	● DOWN 1	0

[Services and Service Group Monitor](#) / [Service Group Member](#)

Service Group Member ×

IP ADDRESS	SERVER NAME	PORT	WEIGHT	SERVER ID	HASH ID	STATE	SERVICE STATE
4.4.4.4	4.4.4.4	99	1	None	--	ENABLED	● DOWN 2

[Services and Service Group Monitor](#) / [Service Group Member](#) / [Service Groups Member Monitors](#)

Service Groups Member Monitors ×

TOTAL PROBES	TOTAL FAILED PROBES	TOTAL CURRENT FAILED PROBES	LAST RESPONSE
12	12	12	● 3 Failure - No SNIP available to send the monitor probe.

Load balancing visualizer

October 8, 2023

The Load Balancing Visualizer is a tool that you can use to view and modify the load balancing configuration in a graphical format. Following is an example of the Visualizer display.

You can use the visualizer to view the following:

- The services and service groups that are bound to a virtual server.
- The monitors that are bound to each service.
- The policies that are bound to the virtual server.
- The policy labels, if configured.
- Configuration details of any displayed element.

You can also use the Visualizer to add and bind new objects, modify existing ones, and enable or disable objects. Most configuration elements displayed in the Visualizer appear under the same names as in other parts of the configuration utility. However, unlike the rest of the configuration utility, the Visualizer groups services that have the same configuration details and monitor bindings into an entity called a service container.

A service container is set of similar services and service groups that are bound to a single load balancing virtual server. The services in the container have the same properties, except for the name, IP address, and port, and their monitor bindings must have the same weight and binding state. When you bind a new service to a virtual server, it is placed into an existing container if its configuration and monitor bindings match those of other services. Otherwise, it is placed in its own container.

The following procedures provide only the basic steps for using the Visualizer. Because the Visualizer duplicates functionality in other areas of the Load Balancing feature, other methods of viewing or configuring all the settings that can be configured in the Visualizer are provided throughout the Load Balancing documentation.

Note: The Visualizer requires a graphic interface, so it is available only through the configuration utility.

To view load balancing virtual server properties by using the Visualizer

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, select the virtual server that you want to view, and then click **Visualizer**.

To view configuration details for services, service groups, and monitors by using the Visualizer

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, select the virtual server that you want to view, and then click **Visualizer**.
3. In the Load Balancing Visualizer dialog box, double-click the entity to view the configuration details of the entity that is bound to this virtual server, you can do the following:

To view configuration details for policies and policy labels by using the Visualizer in the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, select the virtual server that you want to view, and then click Visualizer.
3. In the Load Balancing Visualizer dialog box, double-click the policies entity to view the policies that are bound to this virtual server.

To modify a resource in a load balancing configuration by using the Visualizer

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, select the virtual server that you want to configure, and then click Visualizer.

3. In the Load Balancing Visualizer dialog box, on the Visualizer image, double-click the resource that you want to modify.

To add a load balancing configuration by using the Visualizer

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the details pane, select the virtual server that you want to configure, and then click Visualizer.
3. In the Load Balancing Visualizer dialog box, click **+** to add the resource.

Manage client traffic

May 2, 2023

Managing client connections properly helps to ensure that your applications remain available to users even when your NetScaler appliance is experiencing high loads. Various load balancing features and other features available on the appliance can be integrated into a load balancing setup to process load more efficiently, divert it when necessary, and prioritize the tasks that the appliance must perform:

- **Sessionless load balancing.** You can configure sessionless load balancing virtual servers and perform load balancing without creating sessions in configurations that use DSR or intrusion detection systems (IDS).
- **Integrated caching.** You can redirect HTTP requests to a cache.
- **Delayed cleanup.** You can configure delayed cleanup of virtual server connections to prevent the cleanup process from using CPU cycles during periods when the NetScaler appliance is experiencing high loads.
- **Rewrite.** You can use the Rewrite feature to modify port and protocol when performing HTTP redirection, or insert the virtual server IP address and port into a custom Request header.
- **RTSP NAT.**
- **Rate-based monitoring.** You can enable rate-based monitoring to divert excess traffic.
- **Layer 2 Parameters.** You can configure a virtual server to use the L2 parameters to identify a connection.
- **ICMP Response.** You can configure the appliance to send ICMP responses to PING requests according to your settings. On the IP address corresponding to the virtual server, set the ICMP RESPONSE to VSVR_CNTRLD, and on the virtual server, set the **ICMP VSERVER RESPONSE**. The following settings can be made on a virtual server:
 - When you set **ICMP VSERVER RESPONSE** to PASSIVE on all virtual servers, the appliance always responds.

- When you set `ICMP VSERVER RESPONSE` to `ACTIVE` on all virtual servers, the appliance responds even if one virtual server is UP.
- When you set `ICMP VSERVER RESPONSE` to `ACTIVE` on some and `PASSIVE` on others, the appliance responds even if one virtual server set to `ACTIVE` is UP.

Configure sessionless load balancing virtual servers

May 2, 2023

When the NetScaler appliance performs load balancing, it creates and maintains sessions between clients and servers. The maintenance of session information places a significant load on the appliance resources, and sessions might not be needed in scenarios such as a direct server return (DSR) setup and the load balancing of intrusion detection systems (IDS). To avoid creating sessions when they are not necessary, you can configure a virtual server on the appliance for sessionless load balancing. In sessionless load balancing, the appliance carries out load balancing on a per-packet basis.

Sessionless load balancing can operate in MAC-based forwarding mode or IP-based forwarding mode.

For MAC-based forwarding, the IP address of the sessionless virtual server must be specified on all the physical servers to which the traffic is forwarded.

For IP-based forwarding in sessionless load balancing, the IP address and port of the virtual server need not be specified on the physical servers, because this information is included in the forwarded packets. When forwarding a packet from the client to the physical server, the appliance leaves client details such as IP address and port unchanged and adds the IP address and port of the destination.

Supported setup

NetScaler sessionless load balancing supports the following service types and load balancing methods:

Service Types

- ANY for MAC-based redirection
- ANY, DNS, and UDP for IP-based redirection

Load Balancing Methods

- Round Robin

- Least Bandwidth
- LRTM (Least response time method)
- Source IP Hash
- Destination IP Hash
- Source IP Destination IP Hash
- Source IP Source Port Hash
- Custom Load

Limitations

Sessionless load balancing has the following limitations:

- The appliance must be deployed in two-arm mode.
- A service must be bound to only one virtual server.
- Sessionless load balancing is not supported for service groups.
- Sessionless load balancing is not supported for domain based services (DBS services).
- Sessionless load balancing in the IP mode is not supported for a virtual server that is configured as a backup to a primary virtual server.
- You cannot enable spillover mode.
- For all the services bound to a sessionless load balancing virtual server, the Use Source IP (USIP) option must be enabled.
- For a wildcard virtual server or service, the destination IP address is not changed.

Note:

- While configuring a virtual server for sessionless load balancing, explicitly specify a supported load balancing method. The default method, Least Connection, cannot be used for sessionless load balancing.
- To configure sessionless load balancing in MAC-based redirection mode on a virtual server, the MAC-based forwarding option must be enabled on the NetScaler appliance.

To add a sessionless virtual server by using the CLI

At the command prompt, type the following commands to add a sessionless virtual server and verify the configuration:

```
1 add lb vserver <name>@ <serviceType> <IPAddress>@ <port> -m <
  redirectionMode> -sessionless <(ENABLED|DISABLED)> -lbMethod <
  load_balancing_method>
2
3 show lb vserver <name>
```

Example:

```

1  add lb vserver sesslessv1 any 11.11.12.123 54 -sessionless ENABLED -
    lbMethod roundrobin -m ip
2      Done
3  show lb vserver sesslessv1
4      sesslessv1 (11.11.12.123:54) - ANY Type: ADDRESS
5      State: DOWN
6      ...
7      Effective State: DOWN
8      Client Idle Timeout: 120 sec
9      Down state flush: ENABLED
10     ...
11     Persistence: NONE
12     Sessionless LB: ENABLED
13     Connection Failover: DISABLED
14     L2Conn: OFF
15     1) Policy : cmp_text Priority:8680 Inherited
16     2) Policy : cmp_nocmp_ie60 Priority:8690 Inherited

```

To configure sessionless load balancing on an existing virtual server

At the command prompt, type:

```

1  set lb vserver <name>@ -m <redirectionMode> -sessionless <(ENABLED|
    DISABLED)> -lbMethod <load_balancing_method>

```

Example

```

1  set lb vserver sesslessv1 -m mac -sessionless ENABLED -lbmethod lrtm
2      Done

```

Note

For a service that is bound to a virtual server on which the `-m MAC` option is enabled, you must bind a non-user monitor.

To configure a sessionless virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open the virtual server, and in Advanced Settings, click Traffic Settings, and then select Sessionless Load Balancing.

Redirect HTTP requests to a cache

May 2, 2023

The NetScaler cache redirection feature redirects HTTP requests to a cache. You can significantly reduce the impact of responding to HTTP requests and improve your website performance through proper implementation of the cache redirection feature.

A cache stores frequently requested HTTP content. When you configure cache redirection on a virtual server, the NetScaler appliance sends cacheable HTTP requests to the cache, and non-cacheable HTTP requests to the origin Web server.

To configure cache redirection on a virtual server by using the CLI

At the command prompt, type:

```
1 set lb vserver <name> -cacheable <Value>
```

Example:

```
1 set lb vserver Vserver-LB-1 -cacheable yes
```

To configure cache redirection on a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In Advanced Settings, click Traffic Settings, and select Cacheable.

Enable cleanup of virtual server connections

May 2, 2023

Under certain conditions, you can configure the `downStateFlush` setting to immediately terminate existing connections when a service or a virtual server is marked DOWN. Terminating existing connections frees resources, and in certain cases speeds recovery of overloaded load balancing setups.

The state of a virtual server depends on the states of the services bound to it. The state of each service depends on the responses of the load balanced servers to probes and health checks sent by the monitors that are bound to that service. Sometimes the load balanced servers do not respond. If a server is

slow or busy, monitoring probes can time out. If repeated monitoring probes are not answered within the configured timeout period, the service is marked DOWN.

A virtual server is marked DOWN only when all services bound to it are marked DOWN. When a virtual server goes DOWN, it terminates all connections, either immediately or after allowing existing connections to complete.

Do not enable the `downStateFlush` setting on those application servers that must complete their transactions. You can enable this setting on Web servers whose connections can safely be terminated when they marked DOWN.

The following table summarizes the effect of this setting on an example configuration consisting of a virtual server, `Vserver-LB-1`, with one service bound to it, `Service-TCP-1`. In the table, E and D denote the state of the `downStateFlush` setting: E means Enabled, and D means Disabled.

Vserver-LB-1	Service-TCP-1	State of connections
E	E	Both client and server connections are terminated.
E	D	For some service types, such as TCP, for which the NetScaler appliance does not support connection reuse, both client and server connections are terminated. For service types, such as HTTP, for which the appliance supports connection reuse, both client and server connections are terminated only if a transaction is active on those connections. If a transaction is not active, only client connections are terminated.

Vserver-LB-1	Service-TCP-1	State of connections
D	E	For some service types, such as TCP, for which the NetScaler appliance does not support connection reuse, both client and server connections are terminated. For service types, such as HTTP, for which the appliance supports connection reuse, both client and server connections are terminated only if a transaction is active on those connections. If a transaction is not active, only server connections are terminated.
D	D	Neither client nor server connections are terminated.

If you want to disable a service only when all the established connections are closed by the server or the client, you can use the graceful shutdown option. For information about the graceful shutdown of a service, see [Graceful Shutdown of Services](#).

To configure the down state flush setting on a virtual server by using the CLI

At the command prompt, type:

```
1 set lb vserver <name> -downStateFlush <Value>
```

Example:

```
1 set lb vserver Vserver-LB-1 -downStateFlush enabled
```

To configure the down state flush setting on a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In Advanced Settings, click Traffic Settings, and select Down State Flush.

Rewrite ports and protocols for HTTP redirection

May 2, 2023

Virtual servers and the services that are bound to them might use different ports. When a service responds to an HTTP connection with a redirect, you might need to configure the NetScaler appliance to modify the port and the protocol to make sure that the redirection goes through successfully. You do this by enabling and configuring the `redirectPortRewrite` setting.

This setting affects only HTTP and HTTPS traffic. If this setting is enabled on a virtual server, the virtual server rewrites the port on redirects, replacing the port used by the service with the port used by the virtual server.

If the virtual server or service is of type SSL, you must enable SSL redirect on the virtual server or service. If both the virtual server and service are of type SSL, enable SSL redirect on the virtual server.

The `redirectPortRewrite` setting can be used in the following scenarios:

- The virtual server is of type HTTP and the services are of type SSL.
- The virtual server is of type SSL and the services are of type HTTP.
- The virtual server is of type HTTP and the services are of type HTTP.
- The virtual server is of type SSL and the services are of type SSL.

Scenario 1: The virtual server is of type HTTP and services are of type SSL. SSL redirect, and optionally port rewrite, is enabled on the service. If port rewrite is enabled, the port of HTTPS URLs is rewritten. HTTP URLs from the server are sent as is to the client.

Only SSL redirect is enabled. The virtual server can be configured on any port. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	http://domain.com/
http://domain.com:8080/	http://domain.com:8080/
https://domain.com/	https://domain.com/
https://domain.com:444/	https://domain.com:444/

SSL redirect and port rewrite are enabled. The virtual server is configured on port 80. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	http://domain.com/
http://domain.com:8080/	http://domain.com:8080/
https://domain.com/	https://domain.com/
https://domain.com:444/	https://domain.com/

SSL redirect and port rewrite are enabled. Virtual server is configured on port 8080. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	http://domain.com/
http://domain.com:8080/	http://domain.com:8080/
https://domain.com/	http://domain.com:8080/
https://domain.com:444/	http://domain.com:8080/

Scenario 2: The virtual server is of type SSL and services are of type HTTP. If port rewrite is enabled, only the port of HTTP URLs is rewritten. HTTPS URLs from the server are sent as is to the client.

SSL redirect is enabled on the virtual server. The virtual server can be configured on any port. See the following table.

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	https://domain.com/
http://domain.com:8080/	https://domain.com:8080/
https://domain.com/	https://domain.com/
https://domain.com:444/	https://domain.com:444/

SSL redirect and port rewrite are enabled on the virtual server. The virtual server is configured on port 443. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	https://domain.com/

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com:8080/	https://domain.com/
https://domain.com/	https://domain.com/
https://domain.com:444/	https://domain.com:444/

SSL redirect and port rewrite are enabled. The virtual server is configured on port 444. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	https://domain.com:444/
http://domain.com:8080/	https://domain.com:444/
https://domain.com/	https://domain.com/
https://domain.com:445/	https://domain.com:445/

Scenario 3: The virtual server and service are of type HTTP. Port rewrite must be enabled on the virtual server. Only the port of HTTP URLs is rewritten. HTTPS URLs from the server are sent as is to the client.

The virtual server is configured on port 80. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	http://domain.com/
http://domain.com:8080/	http://domain.com/
https://domain.com/	https://domain.com/
https://domain.com:444/	https://domain.com:444/

The virtual server is configured on port 8080. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	http://domain.com:8080/
http://domain.com:8080/	http://domain.com:8080/
https://domain.com/	https://domain.com/

Redirect URL from the Server	Redirect URL sent to the Client
https://domain.com:445/	https://domain.com:445/

Scenario 4: The virtual server and service are of type SSL. If port rewrite is enabled, only the port of HTTPS URLs is rewritten. HTTP URLs from the server are sent as is to the client.

SSL redirect is enabled on the virtual server. The virtual server can be configured on any port. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	http://domain.com/
http://domain.com:8080/	http://domain.com:8080/
https://domain.com/	https://domain.com/
https://domain.com:444/	https://domain.com:444/

SSL redirect and port rewrite are enabled on the virtual server. The virtual server is configured on port 443. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	http://domain.com/
http://domain.com:8080/	http://domain.com:8080/
https://domain.com/	https://domain.com/
https://domain.com:444/	https://domain.com/

SSL redirect and port rewrite are enabled on the virtual server. The virtual server is configured on port 444. See the following table:

Redirect URL from the Server	Redirect URL sent to the Client
http://domain.com/	http://domain.com/
http://domain.com:8080/	http://domain.com:8080/
https://domain.com/	https://domain.com:444/
https://domain.com:445/	https://domain.com:444/

To configure HTTP redirection on a virtual server by using the CLI

At the command prompt, type:

```
1 set lb vserver <name> -redirectPortRewrite (ENABLED | DISABLED)
```

Example:

```
1 set lb vserver Vserver-LB-1 -redirectPortRewrite enabled
```

To configure HTTP redirection on a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open the virtual server, and in the Advanced Settings pane, click Traffic Settings, and then select Rewrite.

To configure SSL Redirect on an SSL virtual server or service by using the CLI

At the command prompt, type:

```
1 set ssl vserver <vServerName> - sslRedirect (ENABLED | DISABLED)
2
3 set ssl service <serviceName> - sslRedirect (ENABLED | DISABLED)
```

Example:

```
1 set ssl vserver Vserver-SSL-1 -sslRedirect enabled
2
3 set ssl service service-SSL-1 -sslRedirect enabled
```

To configure SSL redirection and SSL port rewrite on an SSL virtual server or service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In Advanced Settings, click SSL Parameters, and select SSL Redirect.

Insert IP address and port of a virtual server in the request header

May 2, 2023

If you have multiple virtual servers that communicate with different applications on the same service, you must do the following:

Configure the NetScaler appliance to add the IP address and port number of the appropriate virtual server to the HTTP requests that are sent to that service. This setting allows applications running on the service to identify the virtual server that sent the request.

If the primary virtual server is down and the backup virtual server is up, the configuration settings of the backup virtual server are added to the client requests. If you want the same header tag to be added, regardless of whether the requests are from the primary virtual server or backup virtual server, then you must configure the required header tag on both virtual servers.

Note: This option is not supported for wild card virtual servers or dummy virtual servers.

To insert the IP address and port of the virtual server in the client requests by using the CLI

At the command prompt, type:

```
1 set lb vsriver <name> -insertVserverIPPort <insertVserverIPPort> [<vipHeader>]
```

Example:

```
1 set lb vsriver Vserver-LB-1 -insertVserverIPPort VipAddr
```

To insert the IP address and port of the virtual server in the client requests by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open the virtual server, and in the Advanced Settings pane, click **Traffic Settings**, and then select Virtual Server IP Port Insertion and specify a virtual server IP port header.

Use a specified source IP for back-end communication

December 31, 2024

For communication with the physical servers or other peer devices, NetScaler uses an IP address owned by it as the source IP address. NetScaler maintains a pool of its IP addresses, and dynamically selects an IP address while connecting with a server. Depending on the subnet in which the physical

server is placed, the appliance decides which IP address to use. This address pool is used for sending traffic and monitor probes.

In many situations, you might want the appliance to use a specific IP address or any IP address from a specific set of IP addresses for back-end communications. The following are a few examples:

- A server can distinguish monitor probes from traffic if the source IP address used for monitor probes belongs to a specific set.
- To improve server security, a server might be configured to respond to requests from a specific set of IP addresses or, sometimes, from a single specific IP address. In such a case, the appliance can use only the IP addresses accepted by the server as the source IP address.
- The appliance can manage its internal connections efficiently if it can distribute its IP addresses into IP sets and use an address from a set only for connecting to a specific service.

To configure the appliance to use a specified source IP address, create net profiles (network profiles) and configure the appliance entities to use the profile. A net profile can be bound to load balancing or content switching virtual servers, NetScaler Gateway VPN virtual servers, services, service groups, or monitors. A net profile has NetScaler owned IP addresses (SNIPs and VIPs) that can be used as the source IP address. It can be a single IP address or a set of IP addresses, referred to as an IP set. If a net profile has an IP set, the appliance dynamically selects an IP address from the IP set at the time of connection. If a profile has a single IP address, the same IP address is used as the source IP.

If a net profile is bound to a load balancing or content switching virtual server, the profile is used for sending traffic to all the services bound to it. If a net profile is bound to a service group, the appliance uses the profile for all the members of the service group. If a net profile is bound to a monitor, the appliance uses the profile for all the probes sent from the monitor.

Note:

- When NetScaler uses a VIP address to communicate with a server, it uses session entries to identify whether the traffic destined to the VIP address is a response from a server or a request from a client.
- You can bind a net profile to NetScaler Gateway VPN virtual servers. However, you need to note some points when binding a net profile. For more information, see [Points to note when binding a net profile to VPN virtual server](#).
- The net profile IPs bound to a service or service group are not only used for sending traffic towards the corresponding back-end servers, but also for the DNS requests that are triggered by any unresolved back-end FQDN.

Usage of a net profile for sending traffic

If the Use Source IP Address (USIP) option is enabled, the appliance uses the IP address of the client and ignores all the net profiles. If the USIP option is not enabled, the appliance selects the source IP in the following manner:

- If there is no net profile on the virtual server or the service or service group, the appliance uses the default method.
- If there is a net profile only on the service or service group, the appliance uses that net profile.
- If there is a net profile only on the virtual server, the appliance uses the net profile.
- If there is a net profile both on the virtual server and service or service group, the appliance uses the net profile bound to the service or service group.

Usage of a net profile for sending monitor probes:

For monitor probes, the appliance selects the source IP in the following manner:

- If there is a net profile bound to the monitor, the appliance uses the net profile of the monitor. It ignores the net profiles bound to the virtual server or service or service group.
- If there is no net profile bound to the monitor,
 - If there is a net profile on the service or service group, the appliance uses the net profile of the service or service group.
 - If there is no net profile even on the service or service group, the appliance uses the default method of selecting a source IP address.
 - If there is no net profile configured on the service or service group but configured on the virtual server, the appliance will not use the virtual server's net profile. Instead, it uses the default method of selecting a source IP address.

Note:

If there is no net profile bound to a service, the appliance looks for a net profile on the service group if the service is bound to a service group.

To use a specified source IP address for communication, go through the following steps:

1. Create IP sets from the pool of SNIPs and VIPs owned by the NetScaler appliance. An IP set can consist of both SNIP and VIP addresses. For instructions, see [Creating IP Sets](#).
2. Create net profiles. For instructions, see [Creating a Net Profile](#).
3. Bind the net profiles to the appliance entities. For instructions, see [Binding a Net Profile to a NetScaler Entity](#).

Note:

- A net profile can have only the IP addresses specified as SNIP and VIP on the NetScaler appliance.
- Source IP persistence is not honored for NetScaler initiated packets.

Manage net profiles

A net profile (or network profile) contains an IP address or an IP set. During communication with physical servers or peers, the NetScaler appliance uses the addresses specified in the profile as the source IP address.

- For instructions on creating a network profile, see [Creating a Network Profile](#).
- For instructions on binding a network profile to a NetScaler entity, see [Binding a Net Profile to a NetScaler Entity](#).

Create an IP set

An IP set is a set of IP addresses, which are configured on the NetScaler appliance as Subnet IP addresses (SNIPs) or Virtual IP addresses (VIPs). An IP set is identified with a meaningful name that helps in identifying the usage of the IP addresses contained in it. To create an IP set, add an IP set, and bind NetScaler owned IP addresses to it. SNIP addresses and VIP addresses can be present in the same IP set.

To create an IP set by using the CLI

At the command prompt, type the following commands:

```
1 add ipset <name>
2
3 bind ipset <name> <IPAddress>
```

Or

```
1 bind ipset <name> <IPAddress>
2
3 show ipset [<name>]
```

The preceding command shows the names of all the IP sets on the appliance if you do not pass any name. It shows the IP addresses bound to the specified IP set if you pass a name.

Examples

```
1 1.
2 > add ipset skpnwipset
3 Done
4 > bind ipset skpnwipset 21.21.20.1
5 Done
6
7 2.
8 > add ipset testnwipset
9 Done
10 > bind ipset testnwipset 21.21.21.[21-25]
11 IPAddress "21.21.21.21" bound
12 IPAddress "21.21.21.22" bound
13 IPAddress "21.21.21.23" bound
14 IPAddress "21.21.21.24" bound
15 IPAddress "21.21.21.25" bound
16 Done
17
18 3.
19 > bind ipset skipipset 11.11.11.101
20 ERROR: Invalid IP address
21 [This IP address could not be added because this is not an IP address
22 owned by the NetScaler appliance]
23 > add ns ip 11.11.11.101 255.255.255.0 -type SNIP
24 ip "11.11.11.101" added
25 Done
26 > bind ipset skipipset 11.11.11.101
27 IPAddress "11.11.11.101" bound
28 Done
29
30 4.
31 > sh ipset
32 1) Name: ipset-1
33 2) Name: ipset-2
34 3) Name: ipset-3
35 4) Name: skpnewipset
36 Done
37
38 5.
39 > sh ipset skpnewipset
40 IP:21.21.21.21
41 IP:21.21.21.22
42 IP:21.21.21.23
43 IP:21.21.21.24
44 IP:21.21.21.25
45 Done
```

To create an IP set by using the GUI

Navigate to **System > Network > IP Sets**, and create an IP set.

Create a net profile

A net profile (network profile) consists of one or more SNIP or VIP addresses of the NetScaler appliance.

To create a net profile by using the CLI

At the command prompt, type:

```
1 add netprofile <name> [-srcIp <srcIpVal>]
```

If the srcIpVal is not provided in this command, it can be provided later by using the `set netprofile` command.

Examples

```
1 add netprofile skpnetprofile1 -srcIp 21.21.20.1
2 Done
3
4 add netprofile baksnp -srcIp bakipset
5 Done
6
7 set netprofile yahnp -srcIp 12.12.23.1
8 Done
9
10 set netprofile citkbnp -srcIp citkbipset
11 Done
```

Bind a net profile to a NetScaler entity

A net profile can be bound to a load balancing virtual server, service, service group, or a monitor.

Note: You can bind a net profile at the time of creating a NetScaler entity or bind it to an existing entity.

To bind a net profile to a server by using the command line interface

You can bind a net profile to load balancing virtual servers and content switching virtual servers. Specify the appropriate virtual server.

At the command prompt, type:

```
1 set lb vserver <name> -netProfile <net_profile_name>
```

Or

```
1 set cs vserver <name> -netProfile <net_profile_name>
```

Examples

```
1 set lb vserver skpnwvs1 -netProfile gtnp
2 Done
3 set cs vserver mmdcsv -netProfile mmdnp
4 Done
```

To bind a net profile to a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In Advanced Settings, click **Profiles**, and set a net profile.

To bind a net profile to a service by using the CLI

At the command prompt, type:

```
1 set service <name> -netProfile <net_profile_name>
```

Example

```
1 set service brnssvc1 -netProfile brnsnp
2 Done
```

To bind a net profile to a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, click **Profiles**, and set a net profile.

To bind a net profile to a service group by using the CLI

At the command prompt, type:

```
1 set servicegroup <serviceName> -netProfile <net_profile_name>
```

Example

```
1 set servicegroup ndhsvcgrp -netProfile ndhnp
2 Done
```

To bind a net profile to a service group by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Service Groups**, and open a service group.

2. In Advanced Settings, click **Profiles**, and set a net profile.

To bind a net profile to a monitor by using the CLI

At the command prompt, type:

```
set monitor <monitor_name> -netProfile <net_profile_name>
```

Example

```
1 set monitor brnsecvmon1 -netProfile brnsmonnp
2 Done
```

To bind a net profile to a monitor by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Open a monitor, and set the net profile.

Set a time-out value for idle client connections

May 2, 2023

You can configure a virtual server to terminate any idle client connections after a configured time-out period (in seconds) elapses. When you configure this setting, the NetScaler appliance waits for the time you specify and, if the client is idle after that time, it closes the client connection. By default, the client idle time-out value is set to 180 seconds.

To set a time-out value for idle client connections by using the CLI

At the command prompt, type:

```
1 set lb vserver <name> -cltTimeout <Value>
```

Example:

```
1 set lb vserver Vserver-LB-1 -cltTimeout 100
```

To set a time-out value for idle client connections by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In **Advanced Settings**, click **Traffic Settings**, and set the client idle time-out value in seconds.

Manage RTSP connections

May 2, 2023

The NetScaler appliance can use either of two topologies—NAT-on mode or NAT-off mode—to load balance RTSP servers. In NAT-on mode, Network Address Translation (NAT) is enabled and configured on the appliance. RTSP requests and responses both pass through the appliance. You must therefore configure the appliance to perform network address translation (NAT) to identify the data connection.

For more information about enabling and configuring NAT, see [IP Addressing](#).

In NAT-off mode, NAT is not enabled and configured. The appliance receives RTSP requests from the client and routes them to the service that it selects using the configured load balancing method. The load balanced RTSP servers send their responses directly to the client, bypassing the appliance. You must therefore configure the appliance to use Direct Server Return (DSR) mode, and assign publicly accessible FQDNs in DNS to your load balanced RTSP servers.

For more information about enabling and configuring DSR mode, see [Configuring Load Balancing in Direct Server Return Mode](#). For more information about configuring DNS, see [Domain Name System](#). In either case, when you configure RTSP load balancing, you must also configure `rtspNat` to match the topology of your load balancing setup.

To configure RTSP NAT by using the CLI

At the command prompt, type:

```
1 set lb vserver <name> - RTSPNAT <ValueOfRTSPNAT>
```

Example:

```
1 set lb vserver vserver-LB-1 - RTSPNAT ON
```

To configure RTSP NAT by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server of type RTSP.
2. In Advanced Settings, click **Traffic Settings**, and select **RTSP Natting**.

Manage client traffic based on traffic rate

May 2, 2023

You can monitor the rate of traffic that flows through load balancing virtual servers and control the behavior of the NetScaler appliance based on the traffic rate. For example:

- Throttle the traffic flow if it is too high.
- Cache information based on the traffic rate.
- If the traffic rate is too high, redirect excess traffic to a different load balancing virtual server.
- Apply rate-based monitoring to HTTP and Domain Name System (DNS) requests.

For more information on rate-based policies, see [Rate Limiting](#).

Identify a connection with layer 2 parameters

May 2, 2023

Generally, to identify a connection, the NetScaler appliance uses the 4-tuple of client IP address, client port, destination IP address, and destination port. When you enable the L2 Connection option, the Layer 2 parameters of the connection (channel number, MAC address, and VLAN ID) are used in addition to the normal 4-tuple.

Enabling the L2Conn parameter for a load balancing virtual server allows multiple TCP and non-TCP connections with the same 4-tuple (<source IP>:<source port>::<destination IP>:<destination port>) to co-exist on the NetScaler appliance. The appliance uses both the 4-tuple and the Layer 2 parameters to identify TCP and non-TCP connections.

You can enable the L2Conn option in the following scenarios:

- Multiple VLANs are configured on the NetScaler appliance, and a firewall is set up for each VLAN.
- You want the traffic originating from the servers in one VLAN and bound for a virtual server in another VLAN to pass through the firewalls configured for both VLANs.

Therefore, when an nCore NetScaler appliance on which the l2Conn parameter is set for one or more load balancing virtual servers is downgraded to a Classic build or to an nCore build that does not support the l2Conn parameter, the load balancing configurations that use the l2Conn parameter become ineffective.

To configure the L2 connection option by using the CLI

At the command prompt, type:

```
1 add lb vserver <name> <serviceType> <IPAddress>@ <port> -l2Conn ON
```

Example

```
1 add lb vserver LB-VIP1 HTTP 10.1.1.254 80 -l2Conn ON
```

To configure the L2 connection option by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In Advanced Settings, select Traffic Settings, and select Layer 2 Parameters.

Configure the Prefer Direct Route option

May 2, 2023

On a wildcard load balancing virtual server if you explicitly configure a route to a destination, by default, the NetScaler appliance forwards traffic according to the configured route. If you want the appliance to not look up for the configured route, you can set the Prefer Direct Route option to NO.

If a device is directly connected to a NetScaler appliance, the appliance directly forwards traffic to the device. For example, if the destination of a packet is a firewall, the packet need not be routed through another firewall. However, sometimes, you might want the traffic to go through the firewall even if the device is directly connected to it. In such cases, you can set the Prefer Direct Route Option to NO.

Note: The preferDirectRoute setting is applicable to all the wildcard virtual servers on the NetScaler appliance.

To set the Prefer Direct Route option by using the CLI

At the command prompt, type:

```
1 set lb parameter -preferDirectRoute (YES | NO)
```

Example:

```
1 set lb parameter -preferDirectRoute YES
```

To set the Prefer Direct Route option by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Configure Load Balancing parameters**.
2. Select Prefer Direct Route.

Use a source port from a specified port range for back-end communication

May 2, 2023

By default, for configurations with USIP option disabled or with USIP and use proxy port options enabled, the NetScaler appliance communicates to the servers from a random source port (greater than 1024).

The appliance supports using a source port from a specified port range for communicating to the servers. One of the use cases of this feature is for servers that are configured to identify received traffic belonging to a specific set based on the source port for logging and monitoring purposes. For example, identifying internal and external traffic for logging purpose.

Configuring the NetScaler appliance to use a source port from a port range for communicating to the servers consists of the following tasks:

- **Create a net profile and set the source port range parameter.** A source port range parameter specifies one or more port ranges. The appliance randomly selects one of the free ports from the specified port ranges and used it as the source port for each connection to servers.
- **Bind the net profile to load balancing virtual servers, services, or service groups:** A net profile with source port range setting can be bound to a virtual server, service, or a service group of a load balancing configuration. For a connection to a virtual server, the appliance randomly selects one of the free ports from the specified port ranges of a net profile and use this port as the source port for connecting to one of the bound servers.

To specify a source port range or ranges by using the CLI

At the command prompt, type:

```
1 bind netProfile <name> (-srcPortRange <int[-int]> ...)  
2  
3 show netprofile <name>
```


To specify a source port range or ranges by using the GUI

1. Navigate to **System > Network > Net Profiles**.
2. Set the **Source Port Range** parameter while adding or modifying NetProfiles.

Sample Configuration

In the following sample configuration, net profile PARTIAL-NAT-1 has partial NAT settings and is bound to load balancing virtual server LBVS-1, which is of type ANY. For packets received on LBVS-1 from 192.0.0.0/8, the NetScaler appliance translates the last octet of the packet's source IP address to 100. For example, a packet with source IP address 192.0.2.30 received on LBVS-1, the NetScaler appliance translates the source IP address to 100.0.2.30 before sending it one of the bound servers.

```
1  ````
2  > add netprofile CUSTOM-SRCPORT-NP-1
3  Done
4  > bind netprofile CUSTOM-SRCPRT-NP-1 - srcportrange 2000-3000
5
6  Done
7  > bind netprofile CUSTOM-SRCPRT-NP-1 - srcportrange 5000-6000
8
9  Done
10 > add lb vserver LBVS-1 ANY 203.0.113. 61 * -netprofile PARTIAL-NAT-1
11
12 Done
13  ````
```

Configure source IP persistency for back-end communication

May 2, 2023

By default, for a load balancing configuration with the USIP option disabled and a net profile bound to a virtual server or services or service groups, the NetScaler appliance uses the round robin algorithm to select an IP address from the net profile for communicating with the servers. Because of this selection method, the IP address selected can be different for different sessions of a specific client.

Some situations require that the NetScaler appliance route all of a specific client's traffic from the same IP address when sending the traffic to servers. The servers can then, for example, identify traffic belonging to a specific set for logging and monitoring purposes.

The source IP persistency option of a net profile enables the NetScaler appliance to use the same address, specified in the net profile, to communicate with servers about all sessions initiated from a specific client to a virtual server.

To enable source IP persistency in a net profile by using the CLI

To enable source IP persistency while adding a net profile, at the command prompt, type:

```
1 add netProfile <name> -srcippersistency ( ENABLED | DISABLED )
2
3 show netprofile <name>
```

To enable source IP persistency in an existing net profile, at the command prompt, type:

```
1 set netProfile <name> -srcippersistency ( ENABLED | DISABLED )
2
3 show netprofile <name>
```

To enable source IP persistency in a net profile by using the GUI

1. Navigate to **System > Network > Net Profiles**.
2. Select **Source IP Persistency** while adding or modifying a net profile.

Example

In the following sample configuration, net profile NETPROFILE-IPPRSTNCY-1 has the source IP persistency option enabled and is bound to load balancing virtual server LBVS-1.

The NetScaler appliance always uses the same IP address (in this example, 192.0.2.11) to communicate with servers bound to LBVS-1, for all sessions initiated from a specific client to the virtual server.

```
1  ``
2  > add ipset IPSET-1
3
4  Done
5  > bind ipset IPSET-1 192.0.2.[11-15]
6  IPAddress "192.0.2.11" bound
7  IPAddress "192.0.2.12" bound
8  IPAddress "192.0.2.13" bound
9  IPAddress "192.0.2.14" bound
10  IPAddress "192.0.2.15" bound
11  Done
12  > add netprofile NETPROFILE-IPPRSTNCY-1 -srcIp IPSET-1 -
    srcippersistency ENABLED
13
14  Done
15  > set lb vserver LBVS-1 -netprofile NETPROFILE-IPPRSTNCY-1
16
17  Done
18  ``
```

Use IPv6 link local addresses on the server side of a load balancing setup

May 2, 2023

IPv6 link local address is supported for services, service groups, and servers of a load balancing configuration. You can specify a link local IPv6 address along with the associated VLAN ID in services, service groups, and servers configurations. The NetScaler appliance uses the link local SNIP6 address from the same VLAN as specified in the services, service groups, and servers configurations to communicate with them.

A link local IPv6 address and the associated VLAN ID are specified in the following format in services, service groups, and servers configurations: `<IPv6_Addrs>%<vlan_id>`

For example, `fe80:123:4567::a%2048`, `fe80:123:4567::a` is the link local address AND 2048 is the VLAN ID.

```
1 > add service SERVICE-1 fe80:123:4567::a%2048 HTTP 80
2
3 Done
4 > bind servicegroup SERVICE-GROUP-1 fe80::1%24 80
5
6 Done
7 > add server SERVER-1 fe80:b:c:d::e:f:a/64%1028
8
9 Done
```

Advanced load balancing settings

April 8, 2021

In addition to configuring virtual servers, you can configure advanced settings for services.

To configure advanced load balancing settings, see the following sections:

- [Gradually step up the load on a new service with virtual server-level slow start](#)
- [The no-monitor option for services](#)
- [Protect applications on protected servers against traffic surges](#)
- [Enable cleanup of virtual server and service connections](#)
- [Graceful shutdown of services](#)
- [Enable or disable persistence session on TROFS services](#)
- [Direct requests to a custom webpage](#)

- [Enable access to services when down](#)
- [Enable TCP buffering of responses](#)
- [Enable compression](#)
- [Maintain client connection for multiple client requests](#)
- [Insert IP address of the client in the request header](#)
- [Retrieve location details from user IP address using geolocation database](#)
- [Use the source IP address of the client when connecting to the server](#)
- [Configure the source port for server-side connections](#)
- [Set a limit on the number of client connections](#)
- [Set a limit on the number of requests per connection to the server](#)
- [Set a threshold value for the monitors bound to a service](#)
- [Set a timeout value for idle client connections](#)
- [Set a timeout value for idle server connections](#)
- [Set a limit on the bandwidth usage by clients](#)
- [Redirect client requests to a cache](#)
- [Retain the VLAN identifier for VLAN transparency](#)
- [Configure automatic state transition based on percentage health of bound services](#)

Gradually step up the load on a new service with virtual server–level slow start

May 2, 2023

You can configure the NetScaler appliance to gradually increase the load on a service (the number of requests that the service receives per second) immediately after the service is either added to a load balancing configuration or has a state change from DOWN to UP (in this document, the term “new service” is used for both situations). You can either increase the load manually with load values and intervals of your choice (manual slow start) or configure the appliance to increase the load at a specified interval (automated slow start) until the service is receiving as many requests as the other services in the configuration. During the ramp-up period for the new service, the appliance uses the configured load balancing method.

This functionality is not available globally. It has to be configured for each virtual server. The functionality is available only for virtual servers that use one of the following load balancing methods:

- Round robin
- Least connection
- Least response time
- Least bandwidth

- Least packets
- LRTM (Least Response Time Method)
- Custom load

For this functionality, you need to set the following parameters:

- The new service request rate, which is the amount by which to increase the number or percentage of requests sent to a new service each time the rate is incremented. That is, you specify the size of the increment in terms of either the number of requests per second or the percentage of the load being borne, at the time, by the existing services. If this value is set to 0 (zero), slow start is not performed on new services.

Note: In an automated slow start mode, the final increment is smaller than the specified value if the specified value would place a heavier load on the new service than on the other services.

- The increment interval, in seconds. If this value is set to 0 (zero), the load is not incremented automatically. You have to increment it manually.

With an automated slow start, a service is taken out of the slow start phase when one of the following conditions applies:

- The actual request rate is less than the new service request rate.
- The service does not receive traffic for three successive increment intervals.
- The request rate has been incremented 200 times.
- The percentage of traffic that the new service must receive is greater than or equal to 100.

With manual slow start, the service remains in the slow start phase until you take it out of that phase.

Manual slow start

If you want to manually increase the load on a new service, do not specify an increment interval for the load balancing virtual server. Specify only the new service request rate and the units. With no interval specified, the appliance does not increment the load periodically. It maintains the load on the new service at the value specified by the combination of the new service request rate and units until you manually modify either parameter. For example, if you set the new service request rate and unit parameters to 25 and “per second,” respectively, the appliance maintains the load on the new service at 25 requests per second until you change either parameter. When you want the new service to exit the slow start mode and receive as many requests as the existing services, set the new service request rate parameter to 0.

As an example, assume that you are using a virtual server to load balance 2 services, Service1 and Service2, in round robin mode. Further assume that the virtual server is receiving 240 requests per second, and that it is distributing the load evenly across the services. When a new service, Service3, is added to the configuration, you might want to increase the load on it manually through values of 10,

20, and 40 requests per second before sending it its full share of the load. The following table shows the values to which you set the three parameters.

Table 1. Parameter Values

Parameter	Value
Interval in seconds	0
New service request rate	10, 20, 40, and 0, at intervals that you choose
Units for the new service request rate	Requests per second

When you set the new service request rate parameter to 0, Service3 is no longer considered a new service, and receives its full share of the load.

Assume that you add another service, Service4, during the ramp-up period for Service3. In this example, Service4 is added when the new service request rate parameter is set to 40. Therefore, Service4 begins receiving 40 requests per second.

The following table shows the load distribution on the services during the period described in this example.

Table 2. Load Distribution on Services when Manually Stepping Up the Load

	new service request rate = 10 req/sec (Service3added)	new service request rate = 20 req/sec	new service request rate = 40 req/sec (Service4added)	new service request rate = 0 req/sec (new services exit slow start mode)
Service1	115	110	80	60
Service2	115	110	80	60
Service3	10	20	40	60
Service4	-	-	40	60
Total req/sec (load on the virtual server)	240	240	240	240

Automated slow start

If you want the appliance to increase the load on a new service automatically at specified intervals until the service can be considered capable of handling its full share of the load, set the new service

request rate parameter, the units parameter, and the increment interval. When all the parameters are set to values other than 0, the appliance increments the load on a new service by the value of the new service request rate, at the specified interval, until the service is receiving its full share of the load.

As an example, assume that four services, Service1, Service2, Service3, and Service4, are bound to a load balancing virtual server, vserver1. Further assume that vserver1 receives 100 requests per second, and that it distributes the load evenly across the services (25 requests per second per service). When you add a fifth service, Service5, to the configuration, you might want the appliance to send the new service 4 requests per second for the first 10 seconds, 8 requests per second for the next 10 seconds, and so on, until it is receiving 20 requests per second. For this requirement, the following table shows the values to which you set the three parameters:

Table 3. Parameter Values

Parameter	Value
Interval in seconds	10
Increment value	4
Units for the new service request rate	Requests per second


With this configuration, the new service begins receiving as many requests as the existing services 50 seconds after it is added or its state has changed from DOWN to UP. During each interval in this period, the appliance distributes to the existing servers the excess of requests that would have been sent to the new service in the absence of stepwise increments. For example, in the absence of stepwise increments, each service, including Service5, would have received 20 requests each per second. With stepwise increments, during the first 10 seconds, when Service5 receives only 4 requests per second, the appliance distributes the excess of 16 requests per second to the existing services, resulting in the distribution pattern shown in the following table and figure over the 50-second period. After the 50-second period, Service5 is no longer considered a new service, and it receives its normal share of traffic.

Table 4. Load Distribution Pattern on All Services for the 50-second Period Immediately after Service5 is Added

	0 sec	10 sec	20 sec	30 sec	40 sec	50 sec
Req/sec for Service1	25	24	23	22	21	20

	0 sec	10 sec	20 sec	30 sec	40 sec	50 sec
Req/sec forService2	25	24	23	22	21	20
Req/sec forService3	25	24	23	22	21	20
Req/sec forService4	25	24	23	22	21	20
Req/sec forService5	0	4	8	12	16	20
Total req/sec (load on the virtual server)	100	100	100	100	100	100

Figure 1. A Graph of the Load Distribution Pattern on All Services for the 50-second Period Immediately after Service5 is Added

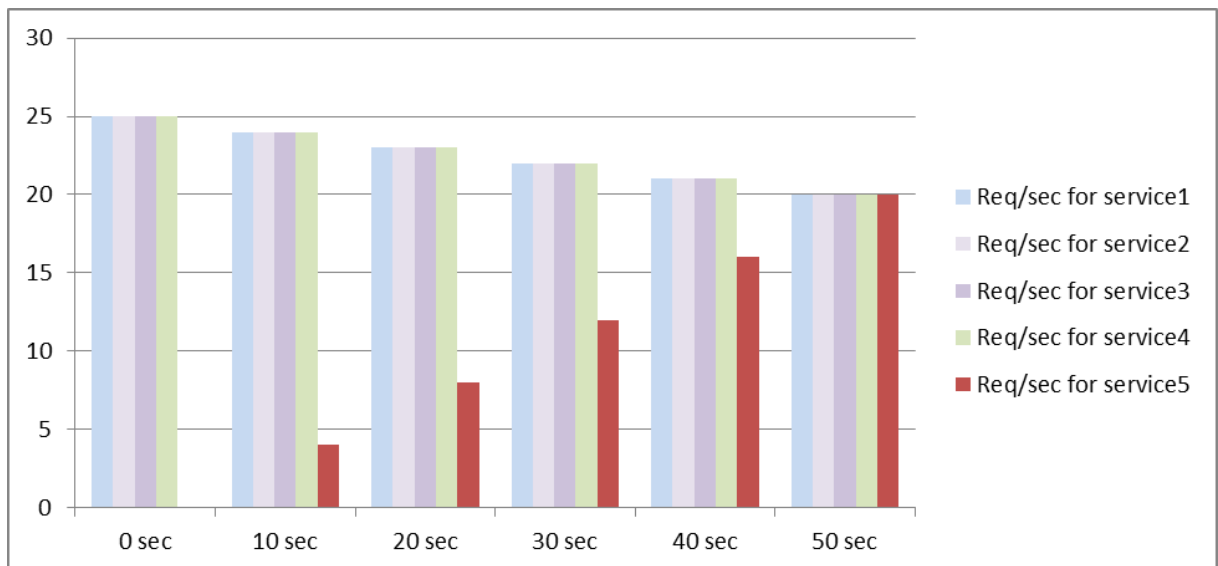

An alternative requirement might be for the appliance to send Service5 25% of the load on the existing services in the first 5 seconds, 50% in the next 5 seconds, and so on, until it is receiving 20 requests

per second. For this requirement, the following table shows the values to which you set the three parameters.

Table 5. Parameter Values

Parameter	Value
Interval in seconds	5
Increment value	25
Units for the new service request rate	Percent

With this configuration, the service begins receiving as many requests as the existing services 20 seconds after it is added or its state has changed from DOWN to UP. The traffic distribution during the ramp-up period for the new service is identical to the one described earlier, where the unit for the step increments was “requests per second.”

Set the slow start parameters

You set the slow start parameters by using either the `set lb vserver` or the `add lb vserver` command. The following command is for setting slow start parameters when adding a virtual server.

To configure stepwise load increments for a new service by using the command line interface

At the command prompt, type the following commands to configure stepwise increments in the load for a service and verify the configuration:

```
1 add lb vserver <name> <serviceType> <IPAddress> <port> [-
  newServiceRequest <positive_integer>] [<newServiceRequestUnit>] [-
  newServiceRequestIncrementInterval <positive_integer>]
2
3 show lb vserver <name>
```

Example

```
1 set lb vserver BR_LB -newServiceRequest 5 PER_SECOND -
  newServiceRequestIncrementInterval 10
2 Done
3
4 show lb vserver BR_LB
5 BR_LB (192.0.2.33:80) - HTTP Type: ADDRESS
6 State: UP
7 ...
8 ...
```

```
9 New Service Startup Request Rate: 5 PER_SECOND, Increment Interval: 10
10 ...
11 ...
12 Done
```

To configure stepwise load increments for a new service by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In Advanced Settings, select Method, and set the following slow start parameters:
 - New Service Startup Request Rate.
 - New Service Request Unit.
 - Increment Interval.

The no-monitor option for services

May 2, 2023

If you use an external system to perform health checks on the services and do not want the NetScaler appliance to monitor the health of a service, you can set the no-monitor option for the service. If you do so, the appliance does not send probes to check the health of the service but shows the service as UP. Even if the service goes DOWN, the appliance continues to send traffic from the client to the service as specified by the load balancing method.

The monitor can be in the ENABLED or DISABLED state when you set the no-monitor option, and when you remove the no-monitor option, the earlier state of the monitor is resumed.

You can set the no-monitor option for a service when creating the service. You can also set the no-monitor option on an existing service.

The following are the consequences of setting the no-monitor option:

- If a service for which you enabled the no-monitor option goes down, the appliance continues to show the service as UP and continues to forward traffic to the service. A persistent connection to the service can worsen the situation. In that case, or if many services shown as UP are actually DOWN, the system may fail. To avoid such a situation, when the external mechanism that monitors the services reports a service as DOWN, remove the service from the NetScaler configuration.
- If you configure the no-monitor option on a service, you cannot configure load balancing in the Direct Server Return (DSR) mode. For an existing service, if you set the no-monitor option, you cannot configure the DSR mode for the service.

To set the no-monitor option for a new service by using the CLI

At the command prompt, type the following commands to create a service with the health monitor option, and verify the configuration:

```
1 add service <serviceName> <IP | serverName> <serviceType> <port> -  
   healthMonitor (YES|NO)
```

Example:

```
1 add service nomonsrvc 10.102.21.21 http 80 -healthMonitor no  
2 Done  
3  
4 show service nomonsrvc  
5 nomonsrvc (10.102.21.21:80) - HTTP  
6 State: UP  
7 Last state change was at Mon Nov 15 22:41:29 2010  
8 Time since last state change: 0 days, 00:00:00.970  
9 Server Name: 10.102.21.21  
10 Server ID : 0 Monitor Threshold : 0  
11 ...  
12 Access Down Service: NO  
13 ...  
14 Down state flush: ENABLED  
15 Health monitoring: OFF  
16  
17 1 bound monitor:  
18 1) Monitor Name: tcp-default  
19 State: UNKNOWN Weight: 1  
20 Probes: 3 Failed [Total: 3 Current: 3]  
21 Last response: Probe skipped - Health monitoring is turned off.  
22 Response Time: N/A  
23 Done
```

To set the no-monitor option for an existing service by using the CLI

At the command prompt, type the following command to set the health monitor option:

```
1 set service <name> -healthMonitor (YES|NO)
```

Example:

```
1 By default, the state of a service and the state of the corresponding  
   monitor are UP.  
2 >show service LB-SVC1  
3 LB-SVC1 (10.102.29.5:80) - HTTP  
4 State: UP  
5  
6  
7 1) Monitor Name: http-ecv  
8 State: UP Weight: 1
```

```
9 Probes: 99992 Failed [Total: 0 Current: 0]
10 Last response: Success - Pattern found in response.
11 Response Time: 3.76 millisec
12 Done
13
14 When the no-monitor option is set on a service, the state of the
    monitor changes to UNKNOWN.
15 set service LB-SVC1 -healthMonitor NO
16 Done
17
18 show service LB-SVC1
19 LB-SVC1 (10.102.29.5:80) - HTTP
20 State: UP
21 Last state change was at Fri Dec 10 10:17:37 2010.
22 Time since last state change: 5 days, 18:55:48.710
23 Health monitoring: OFF
24
25 1) Monitor Name: http-ecv
26     State: UNKNOWN Weight: 1
27     Probes: 100028 Failed [Total: 0 Current: 0]
28     Last response: Probe skipped - Health monitoring is turned off.
29     Response Time: 0.0 millisec
30 Done
31 When the no-monitor option is removed, the earlier state of the monitor
    is resumed.
32 > set service LB-SVC1 -healthMonitor YES
33 Done
34 >show service LB-SVC1
35 LB-SVC1 (10.102.29.5:80) - HTTP
36 State: UP
37 Last state change was at Fri Dec 10 10:17:37 2010
38 Time since last state change: 5 days, 18:57:47.880
39 1) Monitor Name: http-ecv
40     State: UP Weight: 1
41     Probes: 100029 Failed [Total: 0 Current: 0]
42     Last response: Success - Pattern found in response.
43     Response Time: 5.690 millisec
44 Done
```

To set the no-monitor option for a service by using the GUI

1. Navigate to Traffic Management > Load Balancing > Services.
2. Open the service, and clear Health Monitoring.

Protect applications on protected servers against traffic surges

May 2, 2023

The NetScaler appliance provides the surge protection option to maintain the capacity of a server or cache. The appliance regulates the flow of client requests to servers and controls the number of clients that can simultaneously access the servers. The appliance blocks any surges passed to the server, thus preventing overloading of the server.

For surge protection to function correctly, you must enable it globally. For more information about surge protection, see [Surge Protection](#).

To set surge protection on the service by using the CLI

At the command prompt, type:

```
1 set service <name> -sp <Value>
```

Example:

```
1 set service Service-HTTP-1 -sp ON
```

To set surge protection on the service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a source.
2. In Advanced Settings, select **Traffic Settings**, and select **Surge Protection**.

Enable cleanup of virtual server and service connections

May 2, 2023

The state of a virtual server depends on the states of the services bound to it. The state of each service depends on the responses of the load balanced servers to probes or health checks sent by the monitors that are bound to that service. Sometimes the load balanced servers do not respond. If a server is slow or busy, monitoring probes can time out. If repeated monitoring probes are not answered within the configured timeout period, the service is marked DOWN. If a service or virtual server is marked DOWN, the server and client side connections must be flushed. Terminating existing connections frees resources, and in certain cases speeds recovery of overloaded load balancing setups.

Under certain conditions, you can configure the **downStateFlush** setting to immediately terminate existing connections when a service or a virtual server is marked DOWN. Do not enable the downStateFlush setting on those application servers that must complete their transactions. You can enable this setting on Web servers whose connections can safely be terminated when they marked DOWN.

The following table summarizes the effect of this setting on an example configuration consisting of a virtual server, Vserver-LB-1, with one service bound to it, Service-1. In the table, E and D denote the state of the downStateFlush setting: E means Enabled, and D means Disabled.

Vserver-LB-1	Service-1	State of Connections
E	E	Both client and server connections are terminated.
E	D	For some service types, such as TCP, for which the NetScaler appliance does not support connection reuse, both client and server connections are terminated. For service types, such as HTTP, for which the appliance supports connection reuse, both client and server connections are terminated only if a transaction is active on those connections. If a transaction is not active, only client connections are terminated.
D	E	For some service types, such as TCP, for which the NetScaler appliance does not support connection reuse, both client and server connections are terminated. For service types, such as HTTP, for which the appliance supports connection reuse, both client and server connections are terminated only if a transaction is active on those connections. If a transaction is not active, only server connections are terminated.
D	D	Neither client nor server connections are terminated.

If you want to disable a service only when all the established connections are closed by the server or the client, you can use the graceful shutdown option. For information about the graceful shutdown of a service, see [Graceful Shutdown of Services](#).

To set down state flush on the service by using the CLI

At the command prompt, type:

```
1 set service <name> -downStateFlush (ENABLED | DISABLED )
```

Example:

```
1 set service Service-HTTP-1 -downStateFlush enabled
```

To set down state flush on the service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Traffic Settings**, and select **Down State Flush**.

To set down state flush on the virtual server by using the CLI

At the command prompt, type:

```
1 set lb vserver <name> -downStateFlush (ENABLED | DISABLED )
```

Example:

```
1 set lb vserver vsvr1 -downStateFlush enabled
```

To set down state flush on the virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In Advanced Settings, select **Traffic Settings**, and select **Down State Flush**.

Graceful shutdown of services

May 2, 2023

During scheduled network outages such as system upgrades or hardware maintenance, you may have to close or disable some services. You can later enable the service by using the “enable service <name>” command.

To avoid disrupting established sessions, you can place a service in the Transition Out of Service (TROFS) state by doing one of the following:

- Adding a TROFS code or string to the monitor—Configure the server to send a specific code or string in response to a monitor probe.
- Explicitly disable the service and:
 - Set a delay (in seconds).
 - Enable graceful shutdown.

Adding a TROFS Code or String

If you bind only one monitor to a service, and the monitor is TROFS-enabled, it can place the service in the TROFS state on the basis of the server’s response to a monitor probe. This response is compared with the value in the trofsCode parameter for an HTTP monitor or the trofsString parameter for an HTTP-ECV or TCP-ECV monitor. If the code matches, the service is placed in the TROFS state. In this state, it continues to honor the persistent connections.

If multiple monitors are bound to a service, the effective state of the service is calculated on the basis of the state of all the monitors that are bound to the service. Upon receiving a TROFS response, the state of the TROFS-enabled monitor is considered as UP for the purpose of this calculation. For more information about how a NetScaler appliance designates a service as UP, see [Setting a Threshold Value for the Monitors Bound to a Service](#).

Important:

- You can bind multiple monitors to a service, but must not TROFS-enable more than one of them.
- You can convert a TROFS-enabled monitor to a monitor that is not TROFS-enabled, but not vice versa.

To configure a TROFS code or string in a monitor by using the command line interface

At the command prompt, type one of the following commands:

```
1 add lb monitor <monitor-name> HTTP -trofsCode <respcode>
2
3 add lb monitor <monitor-name> HTTP-ECV -trofsString <resp string>
4
5 add lb monitor <monitor-name> TCP-ECV -trofsString <resp string>
```


To modify the TROFS code or string by using the command line interface

At the command prompt, type one of the following commands:

```
1 set lb monitor <trofs monitorname> HTTP -trofscode <newcode>
2
3 set lb monitor <trofs monitorname> HTTP-ECV -trofsstring <new string>
4
5 set lb monitor <trofs monitorname> TCP-ECV -trofsstring <new string>
```

Note: You can use the set command only if a TROFS-enabled monitor was added earlier. You cannot use this command to set the TROFS code or string for a monitor that is not TROFS-enabled.

To configure a TROFS code or string in a monitor by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Monitors.
2. On the Monitors pane, click Add, and do one of the following:
 - Select Type as HTTP, and specify a TROFS Code.
 - Select Type as HTTP-ECV or TCP-ECV, and specify a TROFS String.

Disabling a Service

Often, however, you cannot estimate the amount of time needed for all the connections to a service to complete the existing transactions. If a transaction is unfinished when the wait time expires, shutting down the service may result in data loss. In this case, you can specify graceful shutdown for the service, so that the service is disabled only when all the current active client connections are closed by either the server or the client. See the following table for behavior if you specify a wait time in addition to graceful shutdown.

Persistence is maintained according to the specified method even if you enable graceful shutdown. The system continues to serve all the persistent clients, including new connections from the clients, unless the service is marked DOWN during the graceful shutdown state as a result of the checks made by a monitor.

The following table describes the graceful shutdown options.

State	Results
Graceful shutdown is enabled and a wait time is specified.	Service is shut down after the last of the current active client connections is served, even if the wait time has not expired. The appliance checks the status of the connections once every second. If the wait time expires, any open sessions are closed.
Graceful shutdown is disabled and a wait time is specified.	Service is shut down only after the wait time expires, even if all established connections are served before expiration.
Graceful shutdown is enabled and no wait time is specified.	Service is shut down only after the last of the previously established connections is served, regardless of the time taken to serve the last connection.
Graceful shutdown is disabled and no wait time is specified.	No graceful shutdown. Service is shut down immediately after the disable option is chosen or the disable command is issued. (The default wait time is zero seconds.)

To terminate existing connections when a service or a virtual server is marked DOWN, you can use the Down State Flush option. For more information, see [Enabling Cleanup of Virtual Server Connections](#).

To configure graceful shutdown for a service by using the command line interface

At the command prompt, type the following commands to shut down a service gracefully and verify the configuration:

```
1  disable service <name> [<delay>] [-graceFul (YES|NO)]
2
3  show service <name>
```

Example:

```
1  > disable service svc1 6000 -graceFul YES
2  Done
3  >show service svc1
4  svc1 (10.102.80.41:80) - HTTP
5  State: GOING OUT OF SERVICE (Graceful, Out Of Service in 5998 seconds)
6  Last state change was at Mon Nov 15 22:44:15 2010
7  Time since last state change: 0 days, 00:00:01.160
8  ...
```

```
9 Down state flush: ENABLED
10
11 1 bound monitor:
12 1) Monitor Name: tcp-default
13 State: UP Weight: 1
14 Probes: 13898 Failed [Total: 0 Current: 0]
15 Last response: Probe skipped - live traffic to service.
16 Response Time: N/A
17 Done
18
19 >show service svc1
20 svc1 (10.102.80.41:80) - HTTP
21 State: OUT OF SERVICE
22 Last state change was at Mon Nov 15 22:44:19 2010
23 Time since last state change: 0 days, 00:00:03.250
24 Down state flush: ENABLED
25
26 1 bound monitor:
27 1) Monitor Name: tcp-default
28 State: UNKNOWN Weight: 1
29 Probes: 13898 Failed [Total: 0 Current: 0]
30 Last response: Probe skipped - service state OFS.
31 Response Time: N/A
32 Done
```

To configure graceful shutdown for a service by using the configuration utility

1. Navigate to Traffic Management > Load Balancing > Services.
2. Open the service, and from the Action list, click Disable. Enter a wait time, and select Graceful.

Enable or disable persistence session on TROFS services

April 19, 2021

You can set the `trofsPersistence` flag to specify whether a service in the transition out of service (TROFS) state must maintain persistent sessions. When a monitor is TROFS enabled, it can place a service in the TROFS state on the basis of the server's response to a monitor probe. This response is compared with the value in the `trofsCode` parameter for an HTTP monitor or the `trofsString` parameter for an HTTP-ECV or TCP-ECV monitor. If the code matches, the service is placed in the TROFS state. In this state, it continues to honor the active client connections. In some cases, the honored active sessions might have to include persistent sessions. But in other cases, especially those involving long-lived persistence sessions or persistence methods such as custom server ID, honoring the persistent sessions can prevent the service from transitioning to the out-of-service state.

If you set the `trofsPersistence` flag to `ENABLED`, persistent sessions are honored. If you set it to `DISABLED`, they are not.

To set the `trofsPersistence` flag by using the command line interface

At the command prompt, type one of the following commands to set the `trofsPersistence` flag for a new virtual server or an existing virtual server, or to return the setting to its default value:

```
1 add lb vserver <name> [-trofsPersistence ( ENABLED | DISABLED )]
2
3 set lb vserver <name> [-trofsPersistence ( ENABLED | DISABLED )]
4
5 unset lb vserver <name> [-trofsPersistence]
```

Argument

trofsPersistence. Honor current active client connections and new requests on persistence sessions when the service is in TROFS state.

Possible values: `ENABLED`, `DISABLED`. Default: `ENABLED`.

Examples:

```
1 add lb vserver v1 http 10.102.217.42 80 -persistencetype SOURCEIP -
   trofsPersistence ENABLED
2
3 set lb vserver v1 -trofsPersistence DISABLED
4
5 unset lb vserver v1 -trofsPersistence
```

Direct requests to a custom webpage

May 2, 2023

Warning

SureConnect (SC) is deprecated from NetScaler 12.0 build 56.20 onwards and as an alternative, Citrix recommends you to use the AppQoE feature. For more information, see [AppQoE](#).

For SureConnect to function correctly, you must set it globally. The NetScaler provides the SureConnect option to ensure the response from an application.

To set SureConnect on the service by using the CLI

At the command prompt, type:

```
1 set service <name> -sc <Value>
```

Example:

```
1 set service Service-HTTP-1 -sc ON
```

To set SureConnect on the service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select Traffic Settings, and select **Sure Connect**.

Enable access to services when down

May 2, 2023

You can enable access to a service when it is disabled or in a DOWN state by configuring the NetScaler appliance to use Layer 2 mode to bridge the packets sent to the service. Normally, when requests are forwarded to services that are DOWN, the request packets are dropped. When you enable the **Access Down** setting, however, these request packets are sent directly to the load balanced servers.

For more information about Layer 2 and Layer 3 modes, see [IP Addressing](#).

For the appliance to bridge packets sent to the DOWN services, enable Layer 2 mode with the access-Down parameter.

To enable access down on a service by using the CLI

At the command prompt, type:

```
1 set service <name> -accessDown <Value>
```

Example:

```
1 set service Service-HTTP-1 -accessDown YES
```

To enable access down on a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Traffic Settings**, and select **Access Down**.

Enable TCP buffering of responses

May 2, 2023

The NetScaler appliance provides a TCP buffering option that buffers only responses from the load balanced server. This enables the appliance to deliver server responses to the client at the maximum speed that the client can accept them. The appliance allocates from 0 through 4095 MB (MB) of memory for TCP buffering, and from 4 through 20480 kilobytes (KB) of memory per connection.

Note: TCP buffering set at the service level takes precedence over the global setting. For more information about configuring TCP buffering globally, see [TCP Buffering](#).

To enable TCP Buffering on a service by using the CLI

At the command prompt, type:

```
1 set service <name> -TCPB <Value>
```

Example:

```
1 set service Service-HTTP-1 -TCPB YES
```

To enable TCP Buffering on a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Traffic Settings**, and select **TCP Buffering**.

Enable compression

May 2, 2023

The NetScaler appliance provides a compression option to transparently compress HTML and text files by using a set of built-in compression policies. Compression reduces bandwidth requirements and

can significantly improve server responsiveness in bandwidth-constrained setups. The compression policies are associated with services bound to the virtual server. The policies determine whether a response can be compressed and send compressible content to the appliance, which compresses it and sends it to the client.

Note: For compression to function correctly, you must enable it globally. For more information about configuring compression globally, see [Compression](#).

To enable compression on a service by using the CLI

At the command prompt, type:

```
1 set service <name> -CMP <YES | NO>
```

Example:

```
1 set service Service-HTTP-1 -CMP YES
```

To enable compression on a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Traffic Settings**, and select **Compression**.

Enable external health check for UDP and non-HTTP virtual servers

September 6, 2023

In public clouds, you can use the NetScaler appliance as a second-tier load balancer when the native load balancer is used as the first tier. The native load balancer can be an application load balancer (ALB) or a network load balancer (NLB). Most of the public clouds do not support UDP health probes in their native load balancers. Hence, if these servers are down their actual status might not be updated. As a result, traffic is sent unconditionally to NetScaler, even if the request cannot be serviced.

To monitor the health of such applications, NetScaler supports HTTP and TCP health checks.

An HTTP or TCP listener is created for a content switching virtual server when both the `probeProtocol` and `probePort` parameters are configured. The listener reflects the status of the virtual server. The `ProbeSuccessResponseCode` parameter applies only to HTTP and returns the configured string when the probe is successful.

To enable external health check for UDP and non-HTTP TCP virtual servers by using CLI

At the command prompt, type:

```
1 add lb vserver <name> <serviceType> <IPAddress> <port> -ProbeProtocol <
  HTTP/TCP> -ProbePort <port-num> -ProbeSuccessResponseCode<http-code>
```

Example:

```
1 add lb vserver Vserver-UDP-1 HTTP 10.102.29.60 80 -ProbeProtocol TCP -
  probeport 5000 -probesuccessResponseCode 200ok
```

To enable external health check for UDP and non-HTTP TCP virtual servers by using GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and then create a virtual server.
2. Click **Add** to create a virtual server.
3. In the **Basic Settings** pane, update the following details:
 - a) Probe Protocol –Select the protocol (HTTP or TCP) of the probe for external health check of the virtual server.
 - b) Probe Success Response Code –Enter the response string for a successful probe. This parameter is applicable only for the HTTP protocol.
 - Default Value: 200ok
 - Maximum Length: 63
 - c) Probe Port –Enter the port number for HTTP or TCP monitoring.
4. Click **OK**.

Maintain client connection for multiple client requests

May 2, 2023

You can set the client keep-alive parameter to configure an HTTP or SSL service to keep a client connection to a website open across multiple client requests. If client keep-alive is enabled, even when the load balanced Web server closes a connection, the NetScaler appliance keeps the connection between the client and itself open. This setting allows services to serve multiple client requests on a single client connection.

If you do not enable this setting, the client opens a new connection for every request that it sends to the website. The client keep-alive setting saves the packet round trip time required to establish and

close connections. This setting also reduces the time to complete each transaction. Client keep-alive can be enabled only on HTTP or SSL service types.

Client keep-alive set at the service level takes precedence over the global client keep-alive setting. For more information about client keep-alive, see [Client Keep-Alive](#).

To enable the client keep-alive on a service by using the CLI

At the command prompt, type:

```
1 set service <name> -CKA <Value>
```

Example:

```
1 set service Service-HTTP-1 -CKA YES
```

To enable the client keep-alive on a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Traffic Settings**, and select **Client Keep-Alive**.

Insert the IP address of the client in the request header

May 2, 2023

A NetScaler uses the subnet IP (SNIP) address to connect to the server. The server need not be aware of the client.

However, in some situations, the server needs to be aware of the client it has to serve. When you enable the client IP setting, the appliance inserts the client's IPv4 or IPv6 address while forwarding the requests to the server. The server inserts this client IP in the header of the responses. The server is thus aware of the client.

Note: To insert multiple headers, you need to perform one of the following:

- Add rewrite policies to check CLIENT.IS_SSL and insert appropriate header.
- Bind the appropriate rewrite policy for each virtual server based on the type.

To insert the client IP address in the client request by using the CLI

At the command prompt, type:

```
1 set service <name> -CIP <Value> <cipHeader>
```

Example:

```
1 set service Service-HTTP-1 -CIP enabled X-Forwarded-For
```

To insert the client IP address in the client request by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and edit a service.
2. In the **Service Settings** pane, click the **edit icon**.
3. In the **Load Balancing Service** pane, select the **Insert Client IP Address** check box.

Retrieve location details from user IP address using geolocation database

May 2, 2023

Note This feature is available from NetScaler release 12.1 build 50.x and later.

The NetScaler appliance can get user location details like continent, county, and city. For any public IP address from a geo location database. It is performed using the advanced policy infrastructure. The retrieved location details are then used in a rewrite action or a responder action for performing the following use cases.

- Insert an HTTP header with user location details (such as country, city information) when sending the client request to the back-end server.
- Add country name in the HTML page response for an invalid user.

The appliance can also log the location details using the audit logging mechanism.

Getting user location details using geolocation functions

The components interact as per the following:

1. User sends a client request from a particular geographic location.
2. The NetScaler appliance looks for the user IP address from the client request and retrieves the geo location details. The details include continent, country, region, city, ISP, organization, or custom details from a geolocation database.

3. Once the location details are retrieved, the appliance uses either a responder policy or a rewrite policy to evaluate the request.
4. In a rewrite policy, the appliance adds a header with the geo location details and sends it to the back-end server. For example, insert a custom HTTP header with country information.
5. In a responder policy, the appliance evaluates the HTTP request and based on policy evaluation, allows access to the users or redirects the user to an error page. It states the region from where they are accessing the application does not have access.

Setting up geolocation database

As a pre-requisite, you must have a geolocation database to run on the NetScaler appliance. The geolocation database files are available with NetScaler firmware. To download the database files from a vendor, convert it into NetScaler format and import it into your appliance.

For more information about the geolocation database, see [Add a location file to create static proximity database](#) topic.

Geolocation functions

The following table gives a list of geolocation functions that retrieves location details of any public IP address. These functions can be used in rewrite or responder policies.

Geolocation function	Example
CLIENT.IP.SRC.LOCATION	Asia.In.Karnataka.Bangalore
CLIENT.IP.SRC.LOCATION.GET (1).LOCATION_LONG	India
CLIENT.IP.SRC.LOCATION(3)	Asia.In.Karnataka
CLIENT.IP.SRC.LAT_LONG	12,77
CLIENT.IPV6.SRC.LOCATION	North America.US.California.Santa Clara.Verizon.Citrix
CLIENT.IPV6.SRC.LOCATION(3)	North America.US.California
CLIENT.IPV6.SRC.LOCATION.GET(1).LOCATION_LONG	United States
CLIENT.IPV6.SRC.LOCATION.GET(3)	California
CLIENT.IPV6.SRC.LAT_LONG	36, -119

Configuring geolocation functions

To configure geolocation functions using advanced policy infrastructure, you must enable the load balancing, rewrite, and responder features and then complete the following use cases.

Enable load balancing, responder, rewrite features

If you want the NetScaler appliance to authorize user access from a particular geo location, you must enable the load balancing, rewrite, and responder features.

```
1 enable ns feature loadbalancing rewrite responder
```

Use case 1: Configuring geolocation function for redirecting invalid users outside geo location

When a user from India is requesting access to a webpage, block the request and respond with an HTML page with country name.

The following steps help you to complete the configuration of this use case.

- Add responder action
- Add responder policy
- Bind responder policy to load balancing server

For more information about the GUI procedures for rewrite action and rewrite policy configuration, see [Responder](#) topic

Add responder action Add a responder action to respond with HTML page with country name.

At the command prompt, type:

```
1 add responder action <name> <type> (<target> | <htmlpage>) [-comment <string>] [-statusCode <positive_integer>] [-reasonPhrase <string>]
```

Example:

```
1 add responder action responder_act respondwith "HTTP.REQ.VERSION + \"  
304 Requested Page not allowed in your country - \" + CLIENT.IP.SRC.  
LOCATION.GET (1).LOCATION_LONG + \"\r\n\""
```

Add audit log message action You can configure audit message actions to log messages at various log levels, either in syslog format only or in both syslog and `newslog` formats. Audit-message actions use expressions to specify the format of the audit messages.

To create an audit message action by using the command line interface

At the command prompt, type:

```
add audit messageaction <name> <logLevel> <stringBuilderExpr> [-logtoNewslog (YES|NO)]
```

Example:

```
1 add audit messageaction msg1 DEBUG "\"Request Location: \"+CLIENT.IP.SRC.LOCATION"
```

Add responder policy Add a responder policy to identify requests coming from India and associate the responder action to this policy.

At the command prompt, type:

```
1 add responder policy <name> <rule> <action> [<undefAction>] [-comment <string>] [-logAction <string>] [-appflowAction <string>]
```

Example:

```
1 add responder policy responder_pol CLIENT.IP.SRC.MATCHES_LOCATION("Asia.India.*.*.*") responder_act -logaction msg1
```

Bind responder policy to load balancing server Bind the responder policy to a load balancing virtual server of type HTTP/SSL.

At the command prompt, type:

```
1 bind lb vserver <vserver name> -policyName < policy_name > -priority <> -type <L7InlineREQUEST | L4Inline-REQUEST>
```

Example:

```
1 bind lb vserver http_vserver -policyName responder_pol -priority 100 -type REQUEST
```

Use case 2: Configuring geolocation function for inserting new HTTP header with location details for back-end to respond

Consider a scenario, where a NetScaler appliance must insert the user location in the HTTP header of a request sent to the application server so that the server can use the information for some business logic.

The following steps help you to complete the configuration of this use case.

- Add rewrite action
- Add rewrite policy
- Bind rewrite policy to load balancing

For more information about the GUI procedures for rewrite action and rewrite policy configuration, see [Responder](#) topic.

Add rewrite action Add a rewrite action to insert a custom HTTP header with user geolocation details in the request and send it back-end servers.

At the command prompt, type:

```
1 add rewrite action <name> <type> <target> [<stringBuilderExpr>] [-
  search <expression>] [-refineSearch <string>][-comment <string>]
```

Example:

```
1 add rewrite action rewrite_act insert_http_header "User_location"
  CLIENT.IP.SRC.LOCATION
```

Add rewrite policy Add a rewrite policy to evaluate if the rewrite action must be run. In this case, all requests going to the application server must have a custom HTTP header, so the rule can be “true.”

At the command prompt, type:

```
1 add rewrite policy <name> <rule> <action> [<undefAction>] [-comment <
  string>] [-logAction <string>]
```

Example:

```
1 add rewrite policy rewrite_pol true rewrite_act -logaction log_act
```

Bind rewrite policy to load balancing Bind the rewrite policy to the required load balancing virtual server of type HTTP/SSL.

At the command prompt, type:

```
1 bind lb vserver <vserver name> -policyName < policy_name > -priority
  <> -type <L7InlineREQUEST | L4Inline-REQUEST>
```

Example:

```
1 bind lb vserver http_vserver -policyName rewrite_pol -priority 100 -
  type REQUEST
```

Syslog support for logging geolocation details (optional)

If you prefer to log the user’s geolocation details, you must specify the SYSLOG action to be performed when a request matches the policy. The appliance stores the details as a log message in the ns.log file. For more information about SYSLOG and NSLOG auditing, see [Audit logging](#) topic.

Output for user geolocation details

The following output is logged in the appliance using the SYSLOG or `newslog` action if you try to access an application from the Bangalore location and if the appliance uses the geolocation function, “CLIENT.IP.SRC.LOCATION”.

```
1 Asia.India.Karnataka.Banglore
```

Sample output log:

```
1 07/23/2018:19:03:54 GMT Debug 0-PPE-0 : default REWRITE Message 22 0 :  
    "Request Location: asia.in.karnataka.bangalore.*.*"  
2 07/23/2018:19:23:55 GMT Debug 0-PPE-0 : default RESPONDER Message 32 0  
3 Done
```

Use the source IP address of the client when connecting to the server

May 2, 2023

You can configure the NetScaler appliance to forward packets from the client to the server without changing the source IP address. This is useful when you cannot insert the client IP address into a header, such as when working with non-HTTP services.

For more information about configuring USIP globally, see [Enabling Use Source IP Mode](#).

To enable USIP mode for a service by using the CLI

At the command prompt, type:

```
1 set service <name> -usip (YES | NO)
```

Example:

```
1 set service Service-HTTP-1 -usip YES
```

To enable USIP mode for a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, in the Service Settings section, select **Use Source IP Address**.

Use client source IP address for back end communication in a v4-v6 load balancing configuration

May 2, 2023

In a v4-to-v6 load balancing configuration, for services with USIP disabled, the NetScaler appliance communicates to the related servers from one of the configured IPv6 SNIP (SNIP6) addresses.

For services with USIP enabled, you must set the global USIP NAT prefix parameter for making the related servers aware of the client's IP address of the request packets. USIP NAT prefix is a global IPv6 prefix of length 32/40/48/56/64/96 bits configured on the NetScaler appliance.

For a load balancing service that has USIP enabled, the appliance translates the IPv4 request packet to an IPv6 packet and sets the source IP address of the translated IPv6 packet to a concatenation of:

- the USIP NAT prefix of length of 32/40/48/56/64/96 bits.
- zeros padded if the USIP NAT prefix length is less than 96 bits. Number of bits padded with zeros = 96-USIP NAT prefix length. For example, if the USIP NAT prefix length is 64, then the number of bits padded with zeros = 96-64 = 32.
- the IPv4 source address [32 bits] that was received in the request packet. In other words, the last 32 bits of the source IPv6 address is set to the IPv4 address of the client.

On receiving an IPv6 response packet from the server, the NetScaler appliance translates the IPv6 packet to an IPv4 packet and sets the destination IP address of the translated IPv4 packet to the last 32 bits of the destination IP address of the IPv6 packet.

Note: This feature is not supported for NetScaler Gateway configuration and, content switching and cache redirection load balancing configurations.

Configuration Steps

Configuring USIP for a v4-to-v6 load balancing configuration consists of the following tasks:

- **Add global USIP NAT prefix.** It is a global IPv6 prefix of length 32/40/48/56/64/96 bits to be configured on the appliance.
- **Enable global USIP mode.** For more information, see [Enable Use Source IP Mode](#).
- **Enable USIP mode for load balancing services.** For more information, see [Use source IP address of the client when connecting to the server](#).

To add a global USIP NAT prefix by using the CLI:

- `set ipv6 -usipnatprefix <prefix/prefix_length>`
- `show ipv6`

To add a global USIP NAT prefix by using the GUI:

1. Navigate to **System > Network**, and click **Change IPv6 Settings**.
2. On the **Configure Configuration for IPV6** screen, set the **USIP NAT Prefix** parameter.

Sample configuration

```
1 > set ipv6 -usipnatprefix 2001:DB8:90::/64
2 Done
3
4 > enable ns mode USIP
5 Done
6
7 > add lb vserver LBVS-1 HTTP 203.0.113.90 80
8 Done
9
10 > add service SVC-1 2001:DB8:5001::30 HTTP 80 -usip yes
11 Done
12
13 > add service SVC-2 2001:DB8:5001::60 HTTP 80 -usip yes
14 Done
15
16 > bind lb vserver LBVS-1 SVC-1
17 Done
18
19 > bind lb vserver LBVS-1 SVC-2
20 Done
```

Configure the source port for server-side connections

May 2, 2023

When the NetScaler appliance connects to a physical server, it can use the source port from the client's request, or it can use a proxy port as the source port for the connection. You can set the Use Proxy Port parameter to YES to handle situations such as the following scenario:

- The NetScaler appliance is configured with two load balancing virtual servers, LBVS1 and LBVS2.
- Both the virtual servers are bound to the same service, S-ANY.
- Use (the client's) source IP address (USIP) is enabled on the service.
- Client C1 sends two requests, Req1 and Req2, for the same service.
- LBVS1 receives Req1 and LBVS2 receives Req2.
- LBVS1 and LBVS2 forward the request to S-ANY, and when S-ANY sends the response, LBVS1 and LBVS2 forward the response to the client.
- Consider two cases:

- Use the client port. When the appliance uses the client port, both the virtual servers use the client's IP address (because USIP is ON) and the client's port when connecting to the server. Therefore, when the service sends the response, the appliance cannot determine which virtual server must receive the response.
- Use proxy port. When the appliance uses a proxy port, the virtual servers use the client's IP address (because USIP is ON), but different ports when connecting to the server. Therefore, when the service sends the response, the port number identifies the virtual server that must receive the response.

However, if you require a fully transparent configuration, such as a fully transparent cache redirection configuration, you must disable the Use Proxy port Setting so that the NetScaler appliance can use the source port from the client's request.

The Use Proxy Port option becomes relevant if the use source IP (USIP) option is enabled. For TCP-based service types, such as TCP, HTTP, and SSL, the option is enabled by default. For UDP-based service types, such as UDP and DNS, including ANY, the option is disabled by default. For more information about the USIP option, see ["Enabling Use Source IP Mode."](#)

You can configure the **Use Proxy Port** setting either globally or on a given service.

Configure the use proxy port setting on a service

You configure the **Use ProxyPort** setting on the service if you want to override the global setting.

To configure the Use Proxy Port setting on a service by using the CLI

At the command prompt, type:

```
1 set service <name> -useProxyPort (YES | NO)
```

Example:

```
1 set service svc1 -useproxyport YES
2 Done
3
4 show service svc1
5 svc1 (10.102.29.30:80) - HTTP
6 State: UP
7 . . .
8 Use Source IP: YES Use Proxy Port: YES
9 . . .
10 Done
```

To configure the Use Proxy Port setting on a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select Traffic Settings, and select **Use Proxy Port**.

Configure the use proxy port setting globally

You configure the **Use Proxy Port** setting globally if you want to apply the setting to all the services on the NetScaler appliance. The service-specific **Use Proxy Port** settings overrides the global setting.

To configure the Use Proxy Port setting globally by using the CLI

At the command prompt, type the following commands to configure the **Use Proxy Port** setting globally and verify the configuration:

```
1 set ns param -useproxyport ( ENABLED | DISABLED )`  
2 show ns param`
```

Example:

```
1 set ns param -useproxyport ENABLED  
2  
3 Done  
4  
5 show ns param  
6 Global configuration settings:  
7 . . .  
8 Use Proxy Port: ENABLED  
9 Done
```

To configure the Use Proxy Port setting globally by using the GUI

Navigate to **System > Settings > Change global system** settings, and select or clear Use Proxy Port.

Set a limit on the number of client connections

May 2, 2023

You can specify a maximum number of client connections that each load balanced server can handle. The NetScaler appliance then opens client connections to a server only until this limit is reached. When the load balanced server reaches its limit, monitor probes are skipped, and the server is not used for load balancing until it has finished processing existing connections and frees up capacity.

For more information on the **Maximum Client** setting, see [Load Balancing Domain-Name Based Services](#).

Note: Connections that are in the process of closing are not considered for this limit.

To set a limit to the number of client connections by using the CLI

At the command prompt, type:

```
1 set service <name> -maxclient <Value>
```

Example:

```
1 set service Service-HTTP-1 -maxClient 1000
```

To set a limit to the number of client connections by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Thresholds & Timeouts**, and select **Maximum Clients**.

Set a limit on the number of requests per connection to the server

May 2, 2023

The NetScaler appliance can be configured to reuse connections to improve performance. In some scenarios, however, load balanced Web servers might have issues when connections are reused for too many requests. For HTTP or SSL services, use the max request option to limit the number of requests sent through a single connection to a load balanced Web server.

Note: You can configure the max request option for HTTP or SSL services only.

To limit the number of client requests per connection by using the CLI

At the command prompt, type:

```
1 set service <ServiceName> -maxReq <Value>
```

Example:

```
1 set service Service-HTTP-1 -maxReq 100
```

To limit the number of client requests per connection by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Thresholds & Timeouts**, and select **Maximum Requests**.

Set a threshold value for the monitors bound to a service

May 2, 2023

The NetScaler appliance designates a service as UP only when the sum of the weights of all monitors bound to it and that are UP is equal to or greater than the threshold value configured on the service. The weight for a monitor specifies how much that monitor contributes to designating the service to which it is bound as UP.

By default, the monitor threshold is set to 0 and monitor weights are set to 1. All monitors have equal weightage then and a service can go DOWN when any one of the monitors goes DOWN.

For example, assume that three monitors, named Monitor-HTTP-1, Monitor-HTTP-2, and Monitor-HTTP-3 respectively, are bound to Service-HTTP-1, and that the threshold configured on the service is three. Suppose the following weights are assigned to each monitor:

- The weight of Monitor-HTTP-1 is 1.
- The weight of Monitor-HTTP-2 is 3.
- The weight of Monitor-HTTP-3 is 1.

The service is marked UP only when one of the following is true:

- Monitor-HTTP-2 is UP.
- Monitor-HTTP-2 and Monitor-HTTP-1 or Monitor-HTTP-3 are UP
- All three monitors are UP.

To set the monitor threshold value on a service by using the CLI

At the command prompt, type:

```
1 set service <name> -monThreshold <Value>
```

Example:

```
1 set service Service-HTTP-1 -monThreshold 100
```

To set the monitor threshold value on a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Thresholds & Timeouts**, and select **Monitor Threshold**.

Set a timeout value for idle client connections

May 2, 2023

You can configure the service with a time-out value to terminate any idle client connections when the configured time elapses. If the client is idle during the configured time, the NetScaler appliance closes the client connection.

To set a timeout value for idle client connections by using the CLI

At the command prompt, type:

```
1 set service <name> -cltTimeout <Value>
```

Example:

```
1 set service Service-HTTP-1 -cltTimeout 100
```

To set a timeout value for idle client connections by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Thresholds & Timeouts**, and select **Client Idle Time-out**.

Set a timeout value for idle server connections

May 2, 2023

You can configure a service with a timeout value to terminate any idle server connections when the configured time (in seconds) elapses. If the server is idle for the configured amount of time, the NetScaler appliance closes the server connection.

To set a timeout value for idle server connections by using the CLI

At the command prompt, type:

```
1 set service <name> -svrTimeout <Value>
```

Example:

```
1 set service Service-HTTP-1 -svrTimeout 100
```

To set a timeout value for idle server connections by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Thresholds & Timeouts**, and select **Server Idle Time-out**.

Set a limit on the bandwidth usage by clients

May 2, 2023

Sometimes, servers might have limited bandwidth to handle client requests and might become overloaded. To prevent overloading a server, you can specify a maximum limit on the bandwidth, in Kbps, processed by the server. The NetScaler appliance forwards requests to a load balanced server only until this limit is reached.

To set a maximum bandwidth limit on a service by using the CLI

At the command prompt, type:

```
1 set service <name> -maxBandwidth <Value>
```

Example:

```
1 set service Service-HTTP-1 -maxBandwidth 100
```

To set a maximum bandwidth limit on a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service.
2. In Advanced Settings, select **Thresholds & Timeouts**, and select **Maximum Bandwidth**.

Redirect client requests to a cache

April 19, 2021

You can configure a service to redirect client requests to a cache, and forward the non-cacheable requests to a service chosen by the configured load balancing method.

To set cache redirection on a service by using the CLI

At the command prompt, type:

```
1 set service <name> -cacheable <Value>
```

Example:

```
1 set service Service-HTTP-1 -cacheable YES
```

To set cache redirection on a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Open a service, and set the Cache Type.

Retain the VLAN identifier for VLAN transparency

April 19, 2021

You can configure a load balancing virtual server to retain the client's VLAN identifier in packets that are to be forwarded to servers. The virtual server must be a wildcard virtual server of type ANY, and must be functioning in MAC mode.

To configure a load balancing virtual server to retain the client VLAN ID by using the CLI

At the command prompt, type the following command to configure a load balancing virtual server to retain the client VLAN ID and verify the configuration:

```
1 set lb vserver <name> -m MAC -macmodeRetainvlan ENABLED
2
3 show lb vserver <name>
```


Note

For a service that is bound to a virtual server on which the `-m MAC` option is enabled, you must bind a non-user monitor.

To configure a load balancing virtual server to retain the client VLAN ID by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In Advanced Settings, select **Traffic Settings**, and select **Retain VLAN ID**.

Configure automatic state transition based on percentage health of bound services

May 2, 2023

You can configure a load balancing virtual server to automatically transition from the UP state to the DOWN state if the percentage of active services falls below a configured threshold. For example, if you bind 10 services to a load balancing virtual server and configure a threshold of 50% for that virtual server, it transitions from UP to DOWN if six or more services are DOWN. When the percentage health rises above the threshold value, the virtual server returns to the UP state.

You can also enable an SNMP alarm called ENTITY-STATE if you want the NetScaler appliance to notify you when the percentage health of bound services causes a virtual server to change state.

To configure percentage based automatic state transition by using the CLI

At the command prompt, type the following commands to configure an automatic state transition for a virtual server and verify the configuration:

```
1 set lb vservice <name> -healthThreshold <positive_integer>
2
3 show lb vservice <name>
```

To configure percentage based automatic state transition by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In Advanced Settings, select **Traffic Settings**, and set a **Health Threshold**.

To enable the ENTITY-STATE alarm by using the CLI

At the command prompt, type the following commands to enable the ENTITY-STATE SNMP alarm and verify the configuration:

```
1 enable snmp alarm ENTITY-STATE
2
3 show snmp alarm
```

To enable the ENTITY-STATE alarm by using the GUI

1. Navigate to **System > SNMP > Alarms**.
2. Select **ENTITY-STATE** and, in the Action list, select **Enable**.

Static proximity based on NetScaler location

June 12, 2023

Note

The proximity from self parameter is available from release 13.1 build 48.x onwards.

When you configure the static proximity load balancing method, a server is chosen based on the client IP address instead of the NetScaler loopback IP address. As a result, the response time might be higher. The parameter proximity from self when enabled, ensures that the request is sent to a server that is closest to the NetScaler by using the NetScaler loopback IP address. Setting this parameter to YES accelerates the response time if the servers are located closer to the NetScaler as compared to the client.

Prerequisite

Select static proximity as the load balancing method

To configure the proximityFromSelf parameter by using the CLI

At the command prompt, type the following commands to configure proximityFromSelf parameter and verify the configuration

```
1 set lbparameter -proximityFromSelf <NO/YES>
2 show lbparameter
```

Example:

```
1 set lbparameter -proximityFromSelf Yes
```

To configure the Proximity from Self parameter by using the GUI

1. Navigate to **Traffic Management > Load Balancing**.
2. In the Load Balancing page under the **Settings** section, click **Change Load Balancing Parameters**.
3. Select **Proximity from Self**.
4. Click **OK**.

Built-in monitors

May 2, 2023

The NetScaler appliance contains various built-in monitors that you can use to monitor your services. These built-in monitors handle most of the common protocols. They provide options to modify some parameters, such as interval, response time-out to meet your requirements. However, you cannot modify the monitor name and protocol. For more information, see [Modifying Monitors](#). You can also bind a built-in monitor to a service and unbind it from the service.

Note

You can create a custom monitor based on a built-in monitor. To learn how to create custom monitors, see [Configuring Monitors in a Load Balancing Setup](#).

TCP-based application monitoring

May 2, 2023

The NetScaler appliance has two built-in monitors that monitor TCP-based applications: **tcp-default** and **ping-default**. When you create a service, the appropriate default monitor is bound to it automatically, so that the service can be used immediately if it is UP. The tcp-default monitor is bound to all TCP services. The ping-default monitor is bound to all non-TCP services.

You can't delete or modify default monitors. When you bind any other monitor to a TCP service, the default monitor is unbound from the service. The following table lists the monitor types, and the parameters and monitoring processes associated with each type.

Monitor type	Specific parameters	Process
tcp	Not applicable	The NetScaler appliance establishes a 3-way handshake with the monitor destination, and then closes the connection. If the appliance observes TCP traffic to the destination, it does not send TCP monitoring requests. This occurs if LRTM is disabled. By default, LRTM is disabled on this monitor.
http	httprequest ["HEAD /"] - HTTP request that is sent to the service. respcode [200] - A set of HTTP response codes are expected from the service.	The NetScaler appliance establishes a 3-way handshake with the monitor destination. After the connection is established, the appliance sends HTTP requests, and then compares the response code with the configured set of response codes.
tcp-ecv	send [""] - is the data that is sent to the service. The maximum permissible length of the string is 512 bytes. recv [""] - expected response from the service. The maximum permissible length of the string is 128 bytes. The last character is NULL termination.	The NetScaler appliance establishes a 3-way handshake with the monitor destination. When the connection is established, the appliance uses the send parameter to send specific data to the service and expects a specific response through the receive parameter. Different servers send different sizes of segments. However, the pattern must be within 16 TCP segments.

Monitor type	Specific parameters	Process
http-ecv	send [""'] - HTTP data that is sent to the service; recv [""'] - the expected HTTP response data from the service	The NetScaler appliance establishes a 3-way handshake with the monitor destination. When the connection is established, the appliance uses the send parameter to send the HTTP data to the service and expects the HTTP response that the receive parameter specifies. (HTTP body part without including HTTP headers). Empty response data matches any response. Expected data might be anywhere in the first 24 K bytes of the HTTP body of the response.
ping	Not Applicable	The NetScaler appliance sends an ICMP echo request to the destination of the monitor and expects an ICMP echo response.

To configure built-in monitors for TCP-based applications, see [Configuring Monitors in a Load Balancing Setup](#).

To configure TCP-based monitors by using CLI

Type the following command:

```
1 add lb monitor <monitorName> <type> -respCode <int[-int]> -httpRequest
  <string> -resptimeout <integer> [<units>] -retries <integer> -
  downTime <integer> [<units>] -action <action>
```

Example for TCP monitor type:

```
1 add lb monitor Exch2010-RPC-AddressBook TCP -LRTM ENABLED -interval 10
  -resptimeout 5 -destPort 59601
```

Example for HTTP monitor type:

```
1 add lb monitor Mon_S4B_FE_2 HTTP -respCode 200 -httpRequest "GET /
Autodiscover/XFrame/XFrame.html" -LRTM ENABLED -retries 10 -secure
YES
```

Example for HTTP-ECV monitor type:

```
1 add lb monitor STM_EXC2016_SSLBridge_MON HTTP-ECV -send "GET /owa/
healthcheck.htm" -recv "200 OK" -LRTM ENABLED -destPort 443 -secure
YES
```

Example for PING monitor type:

```
1 add lb monitor lbmon-localhost-ping PING -LRTM DISABLED -destIP
127.0.0.1
```

SSL service monitoring

October 10, 2023

The NetScaler appliance has built-in secure monitors, TCPS, and HTTPS. You can use the secure monitors to monitor HTTP and non-HTTP traffic. To configure a secure HTTP monitor, select the monitor type as HTTP, and set the secure flag. To configure a secure TCP monitor, select the monitor type as TCP, and set the secure flag. The secure monitors work as follows:

- **Secure TCP monitoring.** The NetScaler appliance establishes a TCP connection. After the connection is established, the appliance performs an SSL handshake with the server. After the handshake is over, the appliance closes the connection.
- **Secure HTTP monitoring.** The NetScaler appliance establishes a TCP connection. After the connection is established, the appliance performs an SSL handshake with the server. When the SSL connection is established, the appliance sends HTTP requests over the encrypted channel and checks the response codes.

The following table describes the available built-in monitors for monitoring SSL services.

Monitor type	Probe	Success criteria (Direct condition)
TCP	TCP connection; SSL handshake	Successful TCP connection established and successful SSL handshake.

Monitor type	Probe	Success criteria (Direct condition)
HTTP	TCP connection; SSL handshake; Encrypted HTTP request	Successful TCP connection is established, successful SSL handshake is performed, and expected HTTP response code in server HTTP response is encrypted.
TCP-ECV	TCP connection. SSL handshake (Data sent to a server is encrypted.)	Successful TCP connection is established, successful SSL handshake is performed, and expected TCP data is received from the server.
HTTP-ECV	TCP connection; SSL handshake (Encrypted HTTP request)	Successful TCP connection is established, successful SSL handshake is performed, and expected HTTP data is received from the server.

Sample configuration for HTTP-ECV health check monitor

HTTP services have predefined monitors capable of Extended Content Verification (ECV). These monitors are used when a validation is required beyond a successful TCP connection. These monitors validate the service as UP, when all the following criteria are met:

- A successful TCP connection.
- A particular type of request must be generated.
- A specific message is expected in reply from the **Receive String**.

For these monitors, a request string is configured along with a reply string. If the reply string received by the NetScaler monitor matches the configured string, then the service is marked UP.

Bind a monitor to a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, create a service, and specify the protocol as **SSL**. Click **OK**.
2. Click in the **Service to Load Balancing Monitor Binding** pane, and click **Add Binding**.
3. Choose the monitor type as **HTTP-ECV** and click **Edit**.

4. In the **Configure Monitor** pane under **Basic Parameters** tab, enter values for the following parameters:
 - **Send String** –The string that the monitor must send to the service.
 - **Receive String** –The string that the monitor must receive to mark the service as UP.
5. Click **OK** to complete the monitor configuration.
6. Click **Select**.
7. Click **Bind** to bind the **HTTP-ECV** monitor to the service.
8. Click **Close**.

Create and bind a monitor to a service by using the CLI

At the command prompt, type:

```
1 add lb monitor <monitor-name> http-ecv
2 bind service <servicename> -monitorName <monitor-name>
```

Example:

```
1 add lb monitor monitor-1 http-ecv
2 bind service services1 -monitorName monitor-1
```

HTTP/2 service monitoring

May 2, 2023

NetScaler appliance supports HTTP/2 monitors for monitoring the health status of HTTP/2 services.

HTTP/2 monitor can be configured in two different ways. Depending on the traffic type, you can configure an HTTP/2 monitor.

- **HTTP/2 Direct.** You can configure HTTP/2 Direct for monitoring non-secure HTTP/2 services.
- **HTTP/2 SSL.** You can configure HTTP/2 SSL for monitoring secure traffic over SSL. Enable the secure flag parameter in the HTTP/2 to monitor the SSL traffic.

The http2direct and http2ssl are the two different built-in monitors that are supported for the HTTP/2 protocol.

The following table lists the configuration types, and monitoring processes associated with each type.

Configuration type	Probe	Success criteria
HTTP/2 Direct	TCP Connection; HTTP2 Connection preface & Settings Negotiation; HTTP2 Request	HTTP/2 response status code must match the configured response code.
HTTP/2 SSL	TCP Connection; SSL Handshake; HTTP2 Connection preface & Settings Negotiation; HTTP2 Request	The server must always select ALPN with the HTTP/2 protocol and the HTTP/2 response status code must match the configured response code.

Bind the HTTP/2 monitor to a service by using the CLI

At the command prompt, type:

- `bind service <servicename> -monitorName <name>`
- `bind service <servicename> -monitorName <name>`

Example:

- `bind service s1 -monitorName http2direct`
- `bind service s2 -monitorName http2ssl`

Proxy protocol service monitoring

May 2, 2023

NetScaler appliance with a proxy protocol supports monitor check. The monitor check ensures that the back end server also supports the proxy protocol. The NetScaler appliance has four built-in monitor types for HTTP or TCP related services: HTTP, HTTPS, HTTP-ECV, and TCP-ECV.

The following table lists the monitor types, and the parameters and monitoring processes associated with each type.

Configuration type	Probe	Success criteria
HTTP	<code>httprequest ["HEAD /"]</code> - HTTP request that is sent to the service. <code>respcode [200]</code> - A set of HTTP response codes are expected from the service.	The NetScaler appliance establishes a 3-way handshake with the monitor destination. After the connection is established, the appliance sends HTTP requests, and then compares the response code with the configured set of response codes.
HTTPS	<code>httprequest ["HEAD /"]</code> - HTTPS request that is sent to the service. <code>respcode [200]</code> - A set of HTTPS response codes are expected from the service.	The NetScaler appliance establishes a 3-way handshake with the monitor destination. After the connection is established, the appliance sends HTTPS requests, and then compares the response code with the configured set of response codes.
HTTP-ECV	<code>send ["]</code> - HTTP data that is sent to the service. <code>Received ["]</code> - the expected HTTP response data from the service	The NetScaler appliance establishes a 3-way handshake with the monitor destination. When the connection is established, the appliance uses the <code>send</code> parameter to send the HTTP data to the service and expects the HTTP response that the <code>receive</code> parameter specifies. (HTTP body part without including HTTP headers). Empty response data matches any response. Expected data might be anywhere in the first 24 K bytes of the HTTP body of the response.

Configuration type	Probe	Success criteria
TCP-ECV	send [""'] - is the data that is sent to the service. The maximum permissible length of the string is 512 K bytes. received [""'] - the expected response from the service. The maximum permissible length of the string is 128 K bytes.	The NetScaler appliance establishes a 3-way handshake with the monitor destination. When the connection is established, the appliance uses the send parameter to send specific data to the service and expects a specific response through the receive parameter. Different servers send different sizes of segments. However, the pattern must be within 16 TCP segments.

You can configure the proxy protocol monitor using [netprofile](#).

Configure proxy protocol monitor by using the CLI

At the command prompt, type:

1. Add net profile with proxy protocol enabled

```
add netprofile <name> -proxyProtocol ( ENABLED | DISABLED )
```

Example:

```
1 add netprofile profile1 -proxyProtocol ENABLED
```

1. Bind the net profile to a service.

```
set service <name> -netprofile <netprofile-name>
```

Example:

```
1 set service S1 -netprofile profile1
```

Note

You can run the preceding command if you want net profile to bound to a service.

1. Bind the net profile to a monitor.

```
set lb monitor <monitor-name> <type> -netprofile <netprofile-name>
```

Example:

```
1 set lb monitor http1 HTTPS -netprofile profile1
```

Note

- You can run the preceding command if you want the net profile to bound to a monitor.
- You can select a monitor type of your choice. It can be HTTP, HTTPS, TCP-ECV, or HTTP-ECV.

Important

- In a general case, the net profile (proxy protocol enabled) bound to a service is considered.
- If the net profile is bound to both monitor and service, the net profile bound to monitor is considered. The net profile bound to service is ignored.

FTP service monitoring

May 2, 2023

To monitor FTP services, the NetScaler appliance opens two connections to the FTP server. It first connects to the control port, which is used to transfer commands between a client and an FTP server. After it receives the expected response, it connects to the data port, which is used to transfer files between a client and an FTP server. Only when the FTP server responds as expected, on both the connections, it is marked UP.

Note: Monitor probes originate from the NSIP address.

The NetScaler appliance has two built-in monitors for FTP services: the FTP monitor and the FTP-EXTENDED monitor. The FTP-EXTENDED monitor is a scriptable monitor. It uses the nsftp.pl script. The FTP-EXTENDED monitor script is enhanced to send secure probes to FTP services. You can create a monitor of type FTP-EXTENDED. The nsftp.pl script is automatically taken from the default directory.

To send secure FTP probes to FTP services by using the CLI

At the command prompt, type:

```
1 add lb monitor <monitorName> <type> -username <string> -password <string> -filename <filename>
```

Example

```
1 add monitor mon1 FTP-EXTENDED -username root -password freebsd -
  filename fsdf
```

To send secure FTP probes to FTP services by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Specify the monitor type as **FTP-EXTENDED**, and set the parameters.
3. In **Special Parameters**, specify a **File Name**, **User Name**, and **Password**.

To configure built-in monitors to check the state of FTP services, see [Configuring Monitors in a Load Balancing Setup](#).

Secure monitoring of servers by using SFTP

May 2, 2023

A user script 'nssftp.pl' is added to support SSH File Transfer Protocol (SFTP) monitoring. It is available in the current list of in-built NetScaler user monitors and is located in the /netscaler/monitors directory. The SFTP monitor uses the specified user name and password to check if the file is present on the server.

To configure secure monitoring using SFTP by using the CLI

At the command prompt, type:

```
1 add lb monitor <monitorName> <type> -scriptName <string> -scriptArgs <
  string> -secure ( YES | NO )
```

Example:

```
1 add monitor SFTP_MON USER -scriptname nssftp.pl -scriptargs "file=
  example.txt;user=sam;password=sam_passwd"
```

To configure secure monitoring using SFTP by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors** and in **Type** specify **USER**.
2. In **Special Parameters**, in **Script Name**, select nssftp.pl.
3. Specify the **Script Arguments**.

Set SSL parameters on a secure monitor

April 19, 2021

Important

This feature is supported only on the new Default profiles. For more information about these profiles, see [Enhanced SSL Profiles Infrastructure Overview](#).

A monitor inherits either the global settings or the settings of the service to which it is bound. If a monitor is bound to a non-SSL or non-SSL_TCP service, such as SSL_BRIDGE, you cannot configure it with SSL settings such as the protocol version or the ciphers to be used. Therefore, if your deployment requires SSL-based monitoring of the back-end servers, the monitoring is ineffective.

You can have more control over SSL-based monitoring of back-end servers, by binding an SSL profile to a monitor. An SSL profile contains SSL parameters, cipher bindings, and ECC bindings. For example, you can set server authentication, ciphers, and protocol version in an SSL profile and bind the profile to a monitor. To perform server authentication, you must also bind a CA certificate to a monitor. To perform client authentication, you must bind a client certificate to the monitor. New parameters for the “bind lb monitor” command enable you to do so.

Note

The SSL settings take effect only if you add a secure monitor. Also, the SSL profile type must be **BackEnd**.

Monitor Types that Support SSL Profiles

SSL profiles can be bound to the following monitor types:

- HTTP
- HTTP-ECV
- TCP
- TCP-ECV
- HTTP-INLINE

To specify an SSL profile while adding a monitor by using the command line

At the command prompt, type:

```
1 add lb monitor <monitorName> <type> -secure YES -sslprofile <string>
2
3 set lb monitor <monitorName> <type> -secure YES -sslprofile <string>
```

Example:

```

1 add ssl profile prof1 -sslProfileType BackEnd
2
3 add lb monitor mon1 HTTP -secure YES -sslprofile prof1

```

To bind a certificate-key pair to a monitor by using the command line

At the command prompt, type:

```

1 bind monitor <monitor name> -certkeyName <string> [(-CA [-crlCheck (
Mandatory | Optional )] | -ocspCheck ( Mandatory | Optional )])

```

SIP service monitoring

August 23, 2024

A NetScaler has two built-in monitors that you can use to monitor SIP services: the **SIP-UDP** and **SIP-TCP** monitors. A SIP monitor periodically checks the SIP service to which the SIP monitor is bound, by sending SIP request methods to the SIP service. If the SIP service replies with a response code, the monitor marks the service as UP. If the SIP service does not respond, or responds incorrectly, it is marked as DOWN.

Parameter	Specifies
sipURI	SIP addressing schema of the SIP server.
sipmethod	Type of SIP request used to probe the SIP service. Specify one of the following methods: INVITE, OPTION (the default), REGISTER
respcode	SIP response code with which the SIP service responds the probe request. Default: 200.

To configure SIP service monitoring using the CLI

At the command prompt, type:

```
add lb monitor <Monitor Name> <type> -respcode -sipMethod -sipURI
```

Example:

```
add lb monitor sip_mon1 -TCP -respcode 200 -sipMethod REGISTER -
sipURI sip:mon@test.com
```

To configure SIP service monitoring using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Click **Add** and create a monitor of type that meets your requirement.
3. Update the parameters and click **Create**.

To configure the built-in SIP monitor, see [Configuring Monitors in a Load Balancing Setup](#).

RADIUS service monitoring

May 2, 2023

The NetScaler appliance RADIUS monitor periodically checks the state of the RADIUS service to which it is bound by sending an authentication request to the service. The RADIUS server authenticates the RADIUS monitor and sends a response. By default, the monitor expects to receive a response code of 2, the default Access-Accept response, from the RADIUS server. As long as the monitor receives the appropriate response, it marks the service UP.

Note: RADIUS monitor supports only PAP type authentication.

- If the client authenticated successfully, the RADIUS server sends an Access-Accept response. The default access-accept response code is 2, and this is the code that the appliance uses.
- If the client fails to authenticate successfully (such as when there is a mismatch in the user name, password, or secret key), the RADIUS server sends an Access-Reject response. The default access-reject response code is 3, and this is the code that the appliance uses.

Parameter	Specifies
<code>userName</code>	User name on the RADIUS/NNTP/FTP/FTP-EXTENDED/MYSQL/POP3 server. This user name is used in the probe.
<code>password</code>	Password used in monitoring RADIUS/NNTP/FTP/FTP-EXTENDED/MYSQL/POP3/LDAP servers.
<code>radKey</code>	Shared secret key value that the RADIUS server uses during client authentication.
<code>radNASid</code>	NAS-ID that is encapsulated in the payload when an access request is made.

Parameter	Specifies
radNASip	The IP address that is encapsulated in the payload when an access-request is made. When radNASip is not configured, the NetScaler appliance sends the mapped IP address (MIP) to the RADIUS server as the NAS IP address.

To monitor a RADIUS service, you must configure the RADIUS server to which it is bound as follows:

1. Add the user name and password of the client that the monitor uses for authentication to the RADIUS authentication database.
2. Add the IP address and secret key of the client to the appropriate RADIUS database.
3. Add the IP addresses that the appliance uses to send RADIUS packets to the RADIUS database. If the NetScaler appliance has more than one mapped IP address, or if a subnet IP address (SNIP) is used, you must add the same secret key for all the IP addresses.

Caution: If the IP address used by the appliance is not added to the RADIUS database, the RADIUS server discards all packets.

To configure built-in monitors to check the state of the RADIUS server, see [Configuring Monitors in a Load Balancing Setup](#).

Monitor accounting information delivery from a RADIUS server

May 2, 2023

You can configure a monitor called a *RADIUS accounting* monitor to determine whether the RADIUS server used for Authentication, Authorization, and Accounting (NetScaler AAA) is delivering accounting information as expected. The monitor is of type RADIUS_ACCOUNTING. The probe is generated by a Perl script called nsbmradius.pl, which is located in the /nsconfig/monitors/ directory. The script sends successive accounting request probes to the RADIUS server. The probe is considered successful only if the RADIUS accounting server responds with a packet whose Code field is set to 5, which, according to RFC 2866, indicates an Accounting-Response packet.

When configuring a RADIUS accounting monitor, you must specify a secret key. You can specify optional parameters, each of which represents a RADIUS attribute, such as Acct-Status-Type and Framed-IP-Address. For information about these attributes, see RFC 2865, “Remote Authentication Dial In User Service (RADIUS),” and RFC 2866, “RADIUS Accounting.”

To configure a RADIUS accounting monitor by using the command line interface

At the command prompt, type the following commands to configure a RADIUS accounting monitor and verify the configuration:

```
1 add lb monitor <monitorName> RADIUS_ACCOUNTING [-userName <string>] {
2   -password }
3   {
4   -radKey }
5   [-radNASip <ip_addr>] [-radAccountType <positive_integer>] [-
      radFramedIP <ip_addr>] [-radAPN <string>] [-radMSISDN <string>] [-
      radAccountSession <string>]
6
7 show lb monitor <monitorName>
```

Example

```
1 add lb monitor radAccntMon RADIUS_ACCOUNTING -radKey "8d#>9jr4rV)L7%a2-
  zW13sM"
```

DNS and DNS-TCP service monitoring

May 2, 2023

The NetScaler appliance has two built-in monitors that can be used to monitor DNS services: DNS and DNS-TCP. When bound to a service, either monitor periodically checks the state of that DNS service by sending a DNS query to it. The query resolves to an IPv4 or IPv6 address. That IP address is then checked against the list of test IP addresses that you configure. The list can contain up to five IP addresses. If the resolved IP address matches at least one IP address on the list, the DNS service is marked as up. If the resolved IP does not match any IP addresses on the list, the DNS service is marked as down.

Parameter	Description
query	<p>The DNS query (domain name) sent to the DNS service that is being monitored. Default value: “</p> <p>query</p> <p>The DNS query (domain name) sent to the DNS service that is being monitored. Default value: “\007”If the DNS query succeeds, the service is marked as UP. Otherwise, it is marked as DOWN. For a reverse monitor, if the DNS query succeeds, the service is marked as UP. Otherwise, it is marked as DOWN. For a reverse monitor, if the DNS query succeeds, the service is marked as DOWN. Otherwise, it is marked as UP. If no response is received, the service is marked as DOWN.</p>
queryType	<p>The type of DNS query that is sent. Possible values: Address, Zone.</p>
IPAddress	<p>List of IP addresses that are checked against the response to the DNS monitoring probe.</p>

Parameter	Description
IPv6	Select this check box if the IP address uses the IPv6 format.

To configure the built-in DNS or DNS-TCP monitors, see [Configuring Monitors in a Load Balancing Setup](#).

LDAP service monitoring

May 2, 2023

The NetScaler appliance has one built-in monitor that can be used to monitor LDAP services: the LDAP monitor. It periodically checks the LDAP service to which it is bound by authenticating and sending a search query to it. If the search is successful, the service is marked UP. If the LDAP server does not locate the entry, a failure message is sent to the LDAP monitor, and the service is marked DOWN.

Configure the LDAP monitor to define the search that it must perform when sending a query. You can use the Base DN parameter to specify a location in the directory hierarchy where the LDAP server must start the test query. You can use the Attribute parameter to specify an attribute of the target entity.

Note: Monitor probes originate from the NSIP address.

Parameter	Specifies
baseDN	Base name for the LDAP monitor from where the LDAP search must start. If the LDAP server is running locally, the default value of base is <code>dc=netScaler,dc=com</code> .
bindDN	BDN name for the LDAP monitor.
filter	Filter for the LDAP monitor. Use the filter parameter in a query to limit the number of results. If you do not specify this parameter in the query, the filter applies for the entire object class, which might be a costly operation, such as a high CPU usage.
password	Password used in monitoring LDAP servers.

Parameter	Specifies
attribute	Attribute for the LDAP monitor.

To configure the built-in LDAP monitor, see [Configuring Monitors in a Load Balancing Setup](#).

MySQL service monitoring

May 2, 2023

The NetScaler appliance has one built-in monitor that can be used to monitor MySQL services: the MySQL monitor. It periodically checks the MySQL service to which it is bound by sending a search query to it. If the search is successful, the service is marked UP. If the MySQL server does not respond or the search fails, a failure message is sent to the MySQL monitor, and the service is marked DOWN.

Note: Monitor probes originate from the NSIP address.

Parameter	Specifies
database	Database that is used for the MySQL monitor.
sqlQuery	SQL query that is used for the MySQL monitor.

To configure a built-in MySQL monitor, see [Configuring Monitors in a Load Balancing Setup](#).

To configure MySQL monitors by using CLI

Type the following command:

```
1 add lb monitor <monitorName> <type> -scriptName <string> -scriptArgs <string>
```

Example:

```
1 add lb monitor mysql1 USER -scriptName nsmysql.pl -scriptArgs "database=cloud;user=cloud;password=password;query=show tables from cloud"
```

SNMP service monitoring

May 2, 2023

The NetScaler appliance has one built-in monitor that can be used to monitor SMNP services: the SNMP monitor. It periodically checks the SNMP agent on the service to which it is bound by sending a query for the enterprise identification ID (OID) that you configure for monitoring. If the query is successful, the service is marked UP. If the SNMP service finds the OID that you specified, the query succeeds and the SNMP monitor marks the service UP. If it does not find the OID, the query fails and the SNMP monitor marks service DOWN.

Note: Monitor probes originate from the NSIP address.

Parameter	Specifies
SNMPOID	OID that is used for the SNMP monitor.
snmpCommunity	Community that is used for the SNMP monitor.
snmpThreshold	Threshold that is used for the SNMP monitor.
snmpVersion	SNMP version that is used for load monitoring. Possible Values: V1, V2.

To configure the built-in SNMP monitor, see [Configuring Monitors in a Load Balancing Setup](#).

NNTP service monitoring

May 2, 2023

The NetScaler appliance has one built-in monitor that can be used to monitor NNTP services: the NNTP monitor. It periodically checks the NNTP service to which it is bound by connecting to the service and checking for the existence of the newsgroup that you specify. If the newsgroup exists, the search is successful and the service is marked UP. If the NNTP service does not respond or the search fails, the service is marked DOWN.

Note: Monitor probes originate from the NSIP address.

The NNTP monitor can optionally be configured to post a test message to the newsgroup as well.

Parameter	Specifies
<code>userName</code>	User name on the RADIUS/NNTP/FTP/FTP-EXTENDED/MYSQL/POP3 server. This user name is used in the probe.
<code>password</code>	Password used in monitoring RADIUS/NNTP/FTP/FTP-EXTENDED/MYSQL/POP3/LDAP servers.
<code>group</code>	Group name to be queried for NNTP monitor.

To configure the built-in NNTP monitor, see [Configuring Monitors in a Load Balancing Setup](#).

POP3 service monitoring

May 2, 2023

The NetScaler appliance has one built-in monitor that can be used to monitor POP3 services: the POP3 monitor. It periodically checks the POP3 service to which it is bound by opening a connection with a POP3 server. If the POP3 server responds with the correct response codes within the configured time period, it marks the service UP. If the POP3 service does not respond, or responds incorrectly, it marks the service DOWN.

Note: Monitor probes originate from the NSIP address.

Parameter	Specifies
<code>userName</code>	User name POP3 server. This user name is used in the probe.
<code>password</code>	Password used in monitoring POP3 servers.
<code>scriptName</code>	The path and name of the script to execute.
<code>dispatcherIP</code>	The IP address of the dispatcher to which the probe is sent.
<code>dispatcherPort</code>	The port of the dispatcher to which the probe is sent.

To configure the built-in POP3 monitor, see [Configuring Monitors in a Load Balancing Setup](#).

To configure POP3 monitors by using CLI

Type the following command:

```
1 add lb monitor <monitorName> <type> -scriptName <string> -scriptArgs <string>
```

Example:

```
1 add lb monitor pop31 USER -scriptName nspop3.pl -scriptArgs "user=test@lbmon1.net;password=Freebsd123"
```

SMTP service monitoring

May 2, 2023

The NetScaler appliance has a built-in monitor that can be used to monitor SMTP services: the SMTP monitor. The monitor checks the SMTP service to which it is bound by opening a connection with it and conducting a series of handshakes to ensure that the server is operating correctly. If the SMTP service completes the handshakes properly, the monitor marks the service UP. Else, if the SMTP service does not respond, or responds incorrectly, it marks the service DOWN.

Note: Monitor probes originate from the NSIP address.

Parameter	Specifies
scriptName	The path and name of the script to run.
dispatcherIP	The IP Address of the dispatcher to which the probe is sent.
dispatcherPort	The port of the dispatcher to which the probe is sent.

To configure the built-in SMTP monitor, see [Configuring Monitors in a Load Balancing Setup](#).

RTSP service monitoring

May 2, 2023


The NetScaler appliance has one built-in monitor that can be used to monitor RTSP services: the RTSP monitor. It periodically checks the RTSP service to which it is bound by opening a connection with the

load balanced RTSP server. The type of connection that it opens, and the response that it expects, differs depending upon the network configuration. If the RTSP service responds as expected within the configured time period, it marks the service UP. If the service does not respond, or responds incorrectly, it marks the service DOWN.

The NetScaler appliance can be configured to load balance RTSP servers using two topologies: NAT-off and NAT-on. RTSP servers send their responses directly to the client, bypassing the appliance. The appliance must be configured to monitor RTSP services differently depending upon which topology your network uses. The appliance can be deployed either in inline or non-inline mode in both NAT-off and NAT-on mode.

In NAT-off mode, the appliance operates as a router: it receives RTSP requests from the client and routes them to the service that it selects using the configured load balancing method. If your load balanced RTSP servers are assigned publicly accessible FQDNs in DNS, the load balanced servers send their responses directly to the client, bypassing the appliance. The following figure demonstrates this configuration.

Figure 1. RTSP in NAT-off Mode

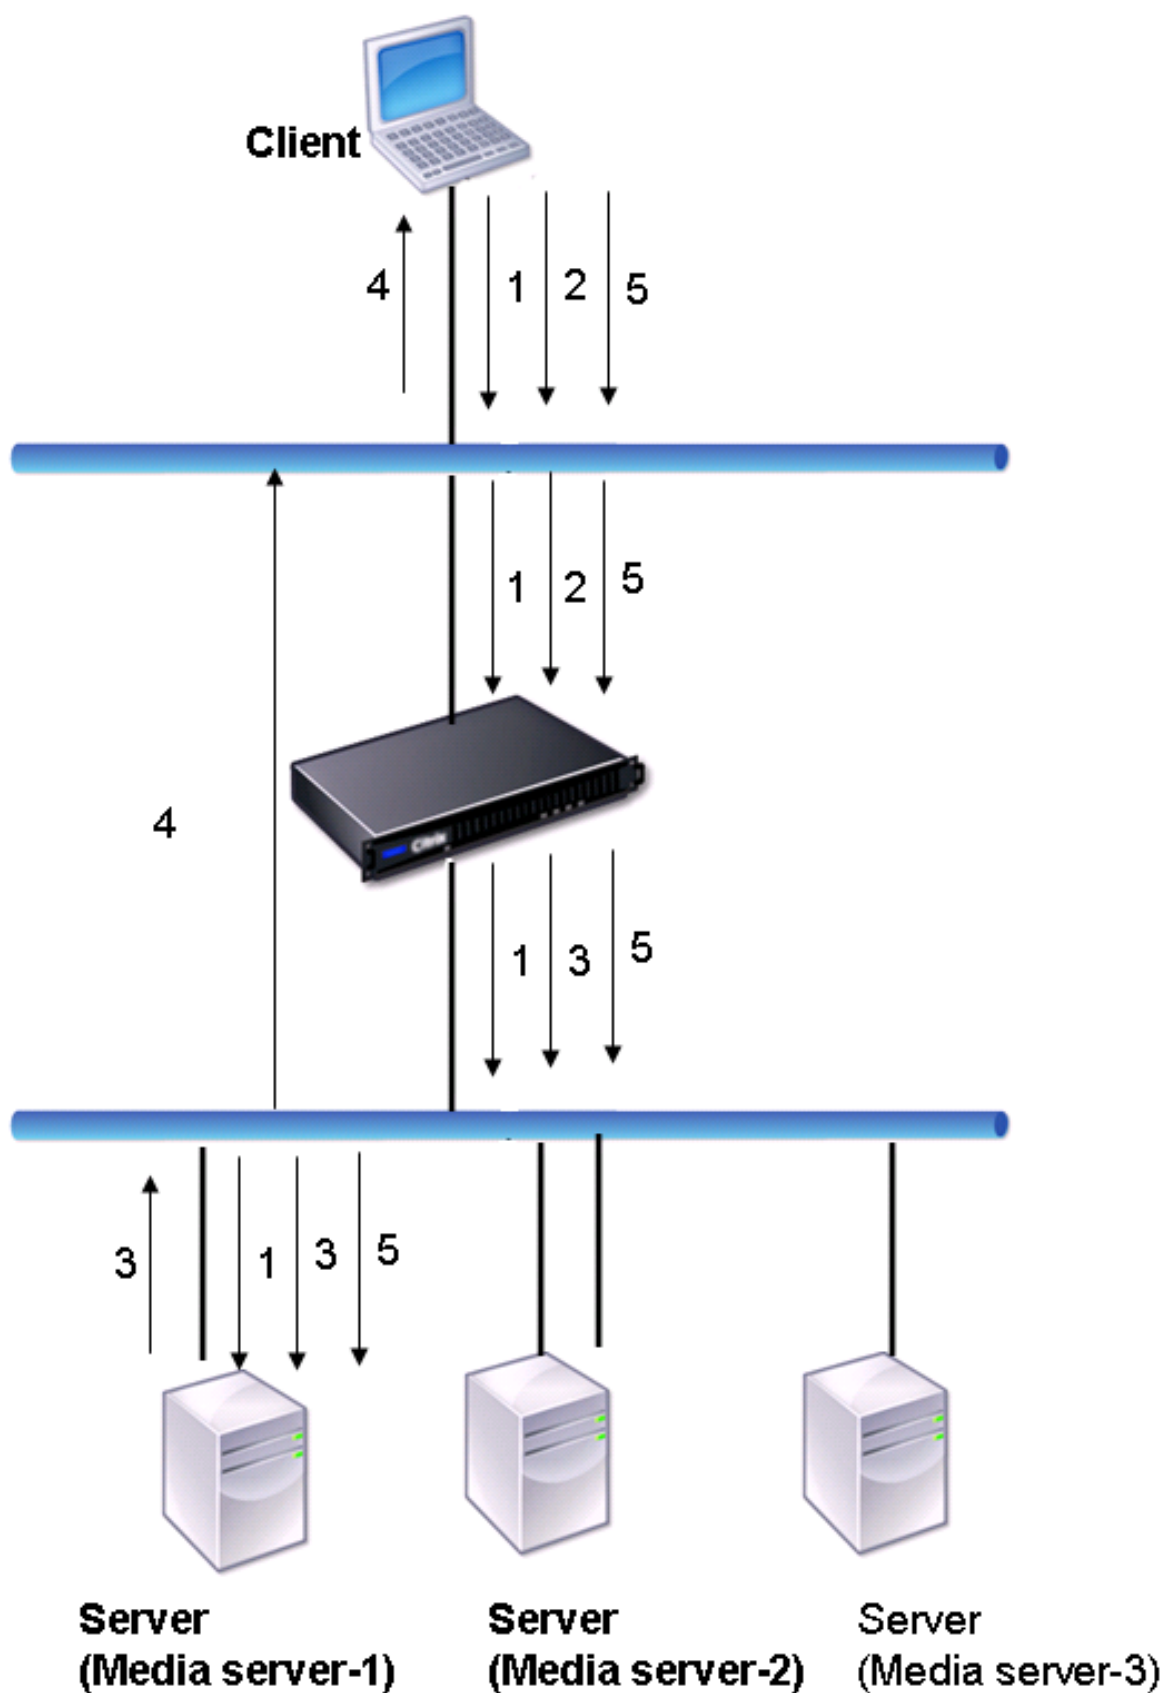


The flow of requests and responses in this scenario is as follows:

1. The client sends a DESCRIBE request to the appliance. The appliance uses the configured load balancing method to choose a service, and routes the request to Media Server-1.
2. The client sends a SETUP request to the appliance. If the RTSP session ID is exchanged in the DESCRIBE request, the appliance, using RTSPSID persistence, routes the request to Media Server-1. If the RTSP session ID is exchanged in the SETUP request, the appliance does one of the following:
 - If the RTSP request comes on the same TCP connection, it routes the request to Media Server-1, maintaining persistence.
 - If the request arrives on a different TCP connection, it uses the configured load balancing method to choose a service, and sends the request to that service, not maintaining persistence. This means that the request might be sent to a different service.
3. Media Server-1 receives the SETUP request from the appliance, allocates resources to process the RTSP request, and sends the appropriate session ID to the client.

Note: The appliance does not perform NAT to identify the RTSP connection, because the RTSP connections bypass it.
4. For subsequent requests, the client then uses the session ID to identify the session and send control messages to the media server. Media Server-1 performs the requested actions, such as play, forward, or rewind.

In NAT-on mode, the appliance receives RTSP requests from the client and routes those requests to the appropriate media server using the configured load balancing method. The media server then sends its responses to the client through the appliance, as illustrated in the following diagram.

Figure 2. RTSP in NAT-on Mode

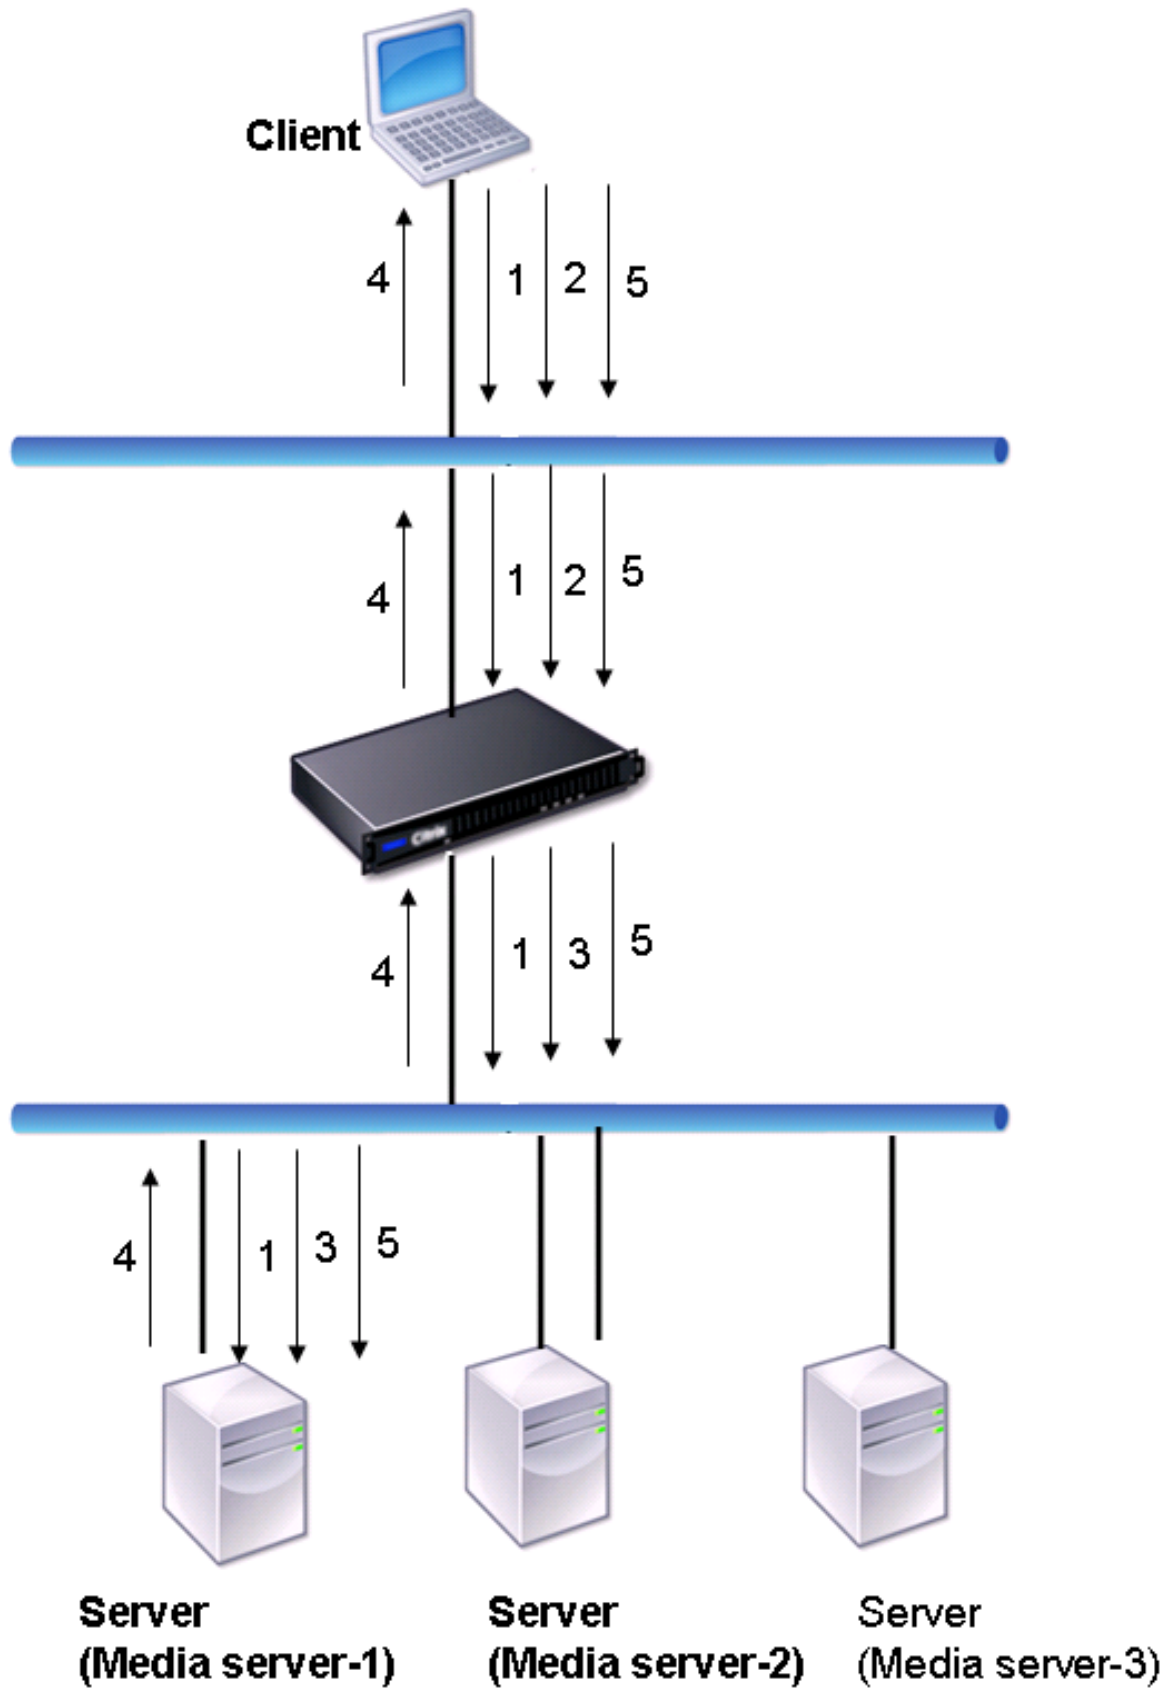

The flow of requests and responses in this scenario is as follows:

1. The client sends a DESCRIBE request to the appliance. The appliance uses the configured load balancing method to choose a service, and routes the request to Media Server-1.
2. The client sends a SETUP request to the appliance. If the RTSP session ID is exchanged in the DESCRIBE request, the appliance, using the RTSPSID persistence, routes the request to Media Server-1. If the RTSP session ID is exchanged in the SETUP request, the appliance does one of the following:
 - If the RTSP request comes on the same TCP connection, it routes the request to Media Server-1, maintaining persistence.
 - If the request arrives on a different TCP connection, it uses the configured load balancing method to choose a service, and sends the request to that service, not maintaining persistence. This means that the request might be sent to a different service.
3. Media Server-1 receives the SETUP request from the appliance, allocates resources to process the RTSP request, and sends the appropriate session ID to the client.
4. The appliance performs NAT to identify the client for RTSP data connections, and the RTSP connections pass through the appliance and are routed to the correct client.
5. For subsequent requests, the client then uses the session ID to identify the session and send control messages to the appliance. The appliance uses RTSPSID persistence to identify the appropriate service, and routes the request to Media Server-1. Media Server-1 performs the requested action, such as play, forward, or rewind.

The RTSP monitor uses the RTSP protocol to evaluate the state of the RTSP services. The RTSP monitor connects to the RTSP server and conducts a sequence of handshakes to ensure that the server is operating correctly.

Parameter	Specifies
rtspRequest	The RTSP request string that is sent to the RTSP server (for example, OPTIONS *). The default value is 07. The length of the request must not exceed 163 characters.
respCode	Set of response codes that are expected from the service.

For instructions on configuring an RTSP monitor, see [Configuring Monitors in a Load Balancing Setup](#).

ARP request monitoring

May 2, 2023

The NetScaler appliance has one built-in monitor that can be used to monitor ARP requests: the ARP monitor. This monitor periodically sends an ARP request to the service to which it is bound, and listens for the expected response. If it receives the expected response, it marks the service UP. If it receives no response or the wrong response, it marks the service DOWN.

ARP locates a hardware address for a load balanced server when only the network layer address is known. ARP is compatible with IPv4 to translate IP addresses to Ethernet MAC addresses. ARP monitoring is not relevant to IPv6 networks, and is therefore not supported on those networks.

There are no special parameters for the ARP monitor.

For instructions on configuring an ARP monitor, see [Configuring Monitors in a Load Balancing Setup](#).

Citrix Virtual Desktops Delivery Controller service monitoring

May 2, 2023

In desktop virtualization, the NetScaler appliance can be used to load balance the Citrix Virtual Desktops Delivery Controller servers deployed by the Citrix Virtual Desktops environment. The NetScaler appliance provides a built-in monitor, `CITRIX-XD-DDC` monitor, which monitors the Citrix Virtual Desktops Delivery Controller servers. In addition to the health check, you can also verify whether the probe is sent by a valid user of the Citrix Virtual Desktops Delivery Controller server.

The monitor sends a probe to the Citrix Virtual Desktops Delivery Controller server in the form of an XML message. If the server responds to the probe with the identity of the server farm, the probe is considered to be successful and the server's status is marked as UP. If the HTTP response does not have a success code or the identity of the server farm is not present in the response, the probe is considered to be a failure and the server's status is marked as DOWN.

The Validate Credentials option determines the probe to be sent by the monitor to the Citrix Virtual Desktops Delivery Controller server, that is, whether to request only the server name or to also validate the login credentials.

Note: Regardless of whether the user credentials (user name, password, and domain) are specified on the

`CITRIX-XD-DDC` monitor, the Citrix Virtual Desktops Delivery Controller server validates the user credentials only if the option to validate credentials is enabled on the monitor.

If you use the wizard for configuring the load balancing of the Citrix Virtual Desktops servers, the `CITRIX-XD-DDC` monitor is automatically created and bound to the Citrix Virtual Desktops Delivery Controller services.

To add an XD-DDC monitor with the validate credentials option by using the command line interface

At the command prompt, type the following commands to add an XD-DDC monitor and verify the configuration:

```
1 add lb monitor <monitorName> <monitorType> -userName <userName> -
   password <password> -domain <domain_name> -validateCred YES
2
3 show lb monitor <monitorName>
```

Example:

```
1 > add lb monitor xdddcmon Citrix-xd-ddc -userName Administrator -
   password E12Dc35450a1 -domain dhop -validateCred YES
2 Done
3 > show lb monitor xdddcmon
4 1) Name.....:xdddcmon Type.....:CITRIX-XD-DDC State.....: ENABLED
5
6 Standard parameters:
7 Interval.....:5 sec...Retries.....:3
8 Response timeout.....:2 sec...Down time.....:30 sec
9 Reverse.....:NO...Transparent.....:NO
10 Secure.....:NO...LRTM.....:ENABLED
11 Action.....:Not applicable...Deviation.....:0 sec
12 Destination IP.....:Bound service
13 Destination port.....:Bound service
14 Iptunnel.....:NO
15 TOS.....:NO...TOS ID.....:0
16 SNMP Alert Retries.....:0...Success Retries.....:1
17 Failure Retries.....:0
18
19 Special parameters:
20 User Name.....:"Administrator"
21 Password.....:*****
22 DDC Domain.....: "dhop"
23 Done
```

To specify the validate credentials option on an XD-DDC monitor by using the command line interface

At the command prompt, type:

```
1 set lb monitor <monitorName> <monitorType> -userName -password -domain  
   <domain_name> -validateCred YES
```

Example:

```
1 set lb monitor XD_DDC_21.21.21.22_443_mn CITRIX-xd-ddc -userName  
   Administrator -password D123S1R2A123 -domain dhop -validateCred YES  
2 Done
```

To configure an XD-DDC monitor with the validate credentials option by using the configuration utility

Navigate to **Traffic Management > Load Balancing > Monitors**, and create a monitor of type [Citrix -XD-DDC](#).

Citrix StoreFront stores monitoring

August 8, 2023

You can configure a user monitor for a Citrix StoreFront store. The monitor determines the state of the StoreFront store by successively probing the account service, discovery service, and authentication endpoint (if the Citrix StoreFront Store is an authenticated store). If any of those services do not respond to the probe, the monitor probe fails, and the StoreFront store is marked as DOWN. The monitor sends probes to the IP address and port of the bound service. For more information, see [Citrix StoreFront Store Services API](#).

Note: Monitor probes originate from the NSIP address. However, if the subnet of a StoreFront server is different from that of the appliance, then the subnet IP (SNIP) address is used.

You can also bind a StoreFront monitor to a service group. A monitor is bound to each member of the service group and probes are sent to the IP address and port of the bound member (service). Also, because each member of a service group is now monitored by using the member's IP address, you can now use the StoreFront monitor to monitor StoreFront cluster nodes that are added as members of the service group.

In earlier releases, the StoreFront monitor tried to authenticate anonymous stores. As a result, a service can be marked as DOWN and you cannot launch Citrix Virtual Apps and Citrix Virtual Desktops by using the URL of the load balancing virtual server.

The probe order has changed. The monitor now determines the state of the StoreFront store by successively probing the account service, the discovery document, and then the authentication service, and skips authentication for anonymous stores.

The host name parameter for StoreFront monitors is deprecated. The secure parameter is now used to determine whether to use HTTP (the default) or HTTPS to send monitor probes.

To use HTTPS, set the secure option to Yes.

Create a StoreFront monitor by using the CLI

At the command prompt, type the following commands to configure a StoreFront monitor and verify the configuration:

```
1 add lb monitor <monitorName> STOREFRONT <string> -storeName <string> [-  
    storefrontacctservice ( YES | NO )] -secure ( YES | NO )  
2  
3 show lb monitor <monitorName>
```

Example

```
1 add lb monitor storefront_ssl STOREFRONT -storename myStore -  
    storefrontacctservice YES -secure YES
```

Create a StoreFront monitor by using the GUI

Navigate to **Traffic Management > Load Balancing > Monitors**, and create a monitor of type **STOREFRONT**.

Basic parameter settings:

- Interval: The time interval between two successive probes. The default time interval is 5 seconds.
- Response Time-out: The duration for which NetScaler waits before it marks a probe as FAILED. The default duration is 2 seconds.
- Store Name: The StoreFront store that must be monitored. By default, the user monitor uses the /Citrix/StoreWeb store for monitoring.
- StoreFront Account Service: Enable or disable probing for the StoreFront account service.
- Check Backend Services: This option enables the monitoring of services running on the StoreFront server.
- Secure: Enable this option if you are using HTTPS.

← Create Monitor

Name*

 ⓘ

Type*

 > ⓘ

Basic Parameters

Interval

 ▾

Response Time-out

 ▾

Store Name

 ⓘ

StoreFront Account Service

Check Backend Services

Secure

▶ Advanced Parameters

Note

For more information about the StoreFront monitors, see [StoreFront documentation](#).

Extended StoreFront monitor

NetScaler introduces an extended StoreFront monitor that can simulate the authentication and app enumeration on the Citrix StoreFront store on behalf of a test user account. You must pre-configure and enable the test user account on StoreFront for monitoring. Provide the test user credentials, store name, and the **nssf_extend.pl** script to use the functionalities of this monitor.

If the StoreFront monitor is bound to a service group, it uses the user credentials to monitor all the members of the service group. Therefore, we recommend that you provide the test user credentials in the Active Directory of all the service group members. Ensure that the test user credentials do not expire if the monitor is active and that at least one app is authorized for the test user.

Configure the extended StoreFront monitor by using the GUI

- Navigate to **Traffic Management > Load Balancing > Monitors** and click **Add**.
- Select the type as **USER**.
- In the **Basic Parameters** section, provide the following details:
 - **Secure Arguments:** Provide the username, password, and the store name in this field. The details must be in the format `user=<DomainName\username>;password=<password>;store=/Citrix/StoreWeb`. If the store name is not provided, the default store `/Citrix/StoreWeb` is used for monitoring.
 - **Script name:** Select the `nssf_extend.pl` script.
 - **Interval** and **Response Time-Out:** Set the time interval and response to greater values, preferably in minutes. This ensures the completion of the monitor probe as the StoreFront monitor makes multiple HTTP/HTTPS calls.

Configure the extended StoreFront monitor by using the CLI

Use the following command to configure the extended StoreFront monitor on the CLI:

```
add lb monitor <monitorName> USER -scriptName nssf_extend.pl -secureArgs  
"user=<DomainName\username>;password=<password>;store=/Citrix/StoreWeb  
;" -interval 2 Min -resptimeout 1 Min
```

Note:

For authentication, use the Secure Arguments parameter instead of the Script Arguments parameter. The Secure Arguments parameter saves the user credentials in an encrypted format.

Error messages

The following table describes the error messages that are displayed when the monitor probing fails. Refer to the **Description** column for details about the error.

Error	Description
Insufficient number of arguments	The admin must provide the user name and password in the Secure Arguments parameter.
Invalid argument format	The admin must provide the secure arguments in the correct format - “ <code>user=<DomainName><username>;password=<password>;store=/Citrix/Storeweb or user=<DomainName><username>;password=<password></code> ”
ASP.NET_SessionId or CsrfToken are not generated	The <code>CSRF</code> token or <code>ASP.NET_SessionId</code> cookies were not found in the response from StoreFront.
Unable to get client configuration	The monitor is unable to fetch the client configuration settings from StoreFront.
CtxsDeviceId cookie is missing	The <code>CtxsDeviceId</code> cookie was not found in the response from StoreFront.
Unable to fetch API endpoint for authentication methods	The StoreFront monitor is unable to fetch the API endpoint to get the list of the configured authentication methods.
Login with username/password is not supported	The username and password method is disabled on StoreFront. It must be enabled on StoreFront.
Unable to fetch Authentication endpoint	The endpoint for authentication is not reachable from the monitor.
Incorrect username or password	The test user credentials configured for the StoreFront monitor are invalid.
Incorrect Domain name Configured	The domain name configured for the StoreFront monitor is incorrect.
Authentication unsuccessful	Authentication has failed on StoreFront.
Authorization cookie is not generated	The authorization cookie was not found in response from StoreFront.
Enumeration doesn't have all the required fields	No apps were enumerated or the app enumeration was incomplete.
App Enumeration Failure	The enumeration of apps from StoreFront has failed.
Logout Unsuccessful	The logoff of the session is unsuccessful. It might result in a build-up of unexpired sessions on StoreFront.

In the outputs of the `show service <name>` and `show servicegroup <name>` commands, you can view the status of the monitor probing on the `Last response` field.

Example 1:

```
1 show service svc
2 State: UP
3 Last state change was at Wed Aug 2 08:53:37 2023
4 Time since last state change: 0 days, 00:00:21.900
5
6 ...
7
8 Monitor Name: extended_monitor
9 State: DOWN Weight: 1 Passive: 0
10 Probes: 3 Failed [Total: 3 Current: 3]
11 Last response: Failure - Authorization cookie is not generated
12 Response Time: 5000.000 millisec
```

Example 2:

```
1 show servicegroup sg_ext_monitor
2 sg_ext_monitor - HTTP
3 State: ENABLED Effective State: PARTIAL-UP Monitor Threshold : 0
4 Max Conn: 0 Max Req: 0 Max Bandwidth: 0 kbits
5
6 ...
7
8 1) Monitor Name: extended_monitor State: ENABLED Weight: 1 Passive: 0
9 1) 10.106.44.33:80 State: UP Server Name: 10.106.44.33 Server ID:
   None Weight: 1 Order: Default
10
11 ...
12
13 Monitor Name: extended_monitor State: UP Passive: 0
14 Probes: 4 Failed [Total: 0 Current: 0]
15 Last response: Success - Probe succeeded.
16 Response Time: 1.039 millisec
17 2) 10.106.44.34:80 State: DOWN Server Name: 10.106.44.34 Server ID:
   None Weight: 1 Order: Default
18
19 ...
20
21 Monitor Name: extended_monitor State: DOWN Passive: 0
22 Probes: 4 Failed [Total: 4 Current: 4]
23 Last response: Failure - Authorization cookie is not generated
```

Oracle ECV service monitoring

June 12, 2023

The Extended Content Verification (ECV) monitor on a NetScaler can be used to monitor Oracle databases. To track the state of each load balanced database server in real time, you need to bind a Oracle ECV monitor to each service. The monitor tests the service by sending periodic probes to the service in the form of an SQL Query, sometimes referred to as performing a health check. If the Oracle ECV monitor receives a timely response to its probes and the configured expression evaluates to true , it marks the service as UP. If it does not receive a timely response to the designated number of probes or the configured expression evaluates to false, it marks the service as DOWN.

The Netscaler Oracle ECV monitoring supports all Oracle versions up to 21c and all password based authentication protocols.

Unsupported security features

The NetScaler Oracle ECV monitor supports only password-based authentication. It doesn't support all security related features and capabilities.

The following security features are not supported:

- Data encryption (SQLNET.ENCRYPTION_SERVER=required)
- Data integrity (SQLNET.CRYPTO_CHECKSUM_SERVER=required)
- Long identifiers (O8L_LI)
- TLS authentication/Encryption
- External authentication services, such as Kerberos and Radius
- Compression
- Oracle wallet

Custom monitors

May 2, 2023

In addition to built-in monitors, you can use custom monitors to check the state of your services. The NetScaler appliance provides several types of custom monitors based on scripts that are included with the NetScaler operating system. The scripts can be used to determine the state of services based on the load on the service or network traffic sent to the service. Custom monitors are the inline monitors, user monitors, and load monitors.

With these types of monitors, you can use the supplied functionality, or you can create your own scripts and use those scripts to determine the state of the service to which the monitor is bound.

Configure HTTP-inline monitors

May 2, 2023

Inline monitors analyze and probe the responses from the services to which they are bound only when those services receive client requests. The inline monitor is of type HTTP-INLINE and can only be configured with HTTP and HTTPS services. An inline monitor determines that the service to which it is bound is UP by checking its responses to the requests that are sent to it. When no client requests are sent to the service, the inline monitor probes the service by using the configured URL.

Note: Inline monitors cannot be bound to HTTP or HTTPS Global Server Load Balancing (GSLB) remote or local services because these services represent virtual servers rather than actual load balanced Web servers.

Inline monitors have a time-out value and a retry count when probes fail. You can select any of the following action types for the NetScaler appliance to take when a failure occurs:

- **NONE.** No explicit action is taken. You can view the service and monitor, and the monitor indicates the number of current contiguous error responses and cumulative responses checked.
- **LOG.** Logs the event in ns/syslog and displays the counters.
- **DOWN.** Marks the service down and does not direct any traffic to the service. This setting breaks any persistent connections to the service. This action also logs the event and displays counters.

After the service is down, the service remains DOWN for the configured downtime. After the downtime elapses, the inline monitor uses the configured URL to probe the service to see if it is available again. If the probe succeeds, the state of the service is changed to UP. Traffic is directed to the service, and monitoring resumes as before.

To configure inline monitors, see [Configuring Monitors in a Load Balancing Setup](#).

To configure HTTP-inline monitors by using CLI

Type the following command:

```
1 add lb monitor <monitorName> <type> -respCode <int[-int]> -httpRequest <string> -resptimeout <integer> [<units>] -retries <integer> -downTime <integer> [<units>] -action <action>
```

Example:


```
1 add lb monitor http_inline HTTP-INLINE -respCode 200 304 -httpRequest "HEAD /var/static/empty.htm" -resptimeout 4 -retries 1 -downTime 2 -action NONE
```

Understand user monitors

August 11, 2023

User monitors extend the scope of custom monitors. You can create user monitors to track the health of customized applications and protocols that the NetScaler appliance does not support. The following diagram illustrates how a user monitor works.

Figure 1. User Monitors

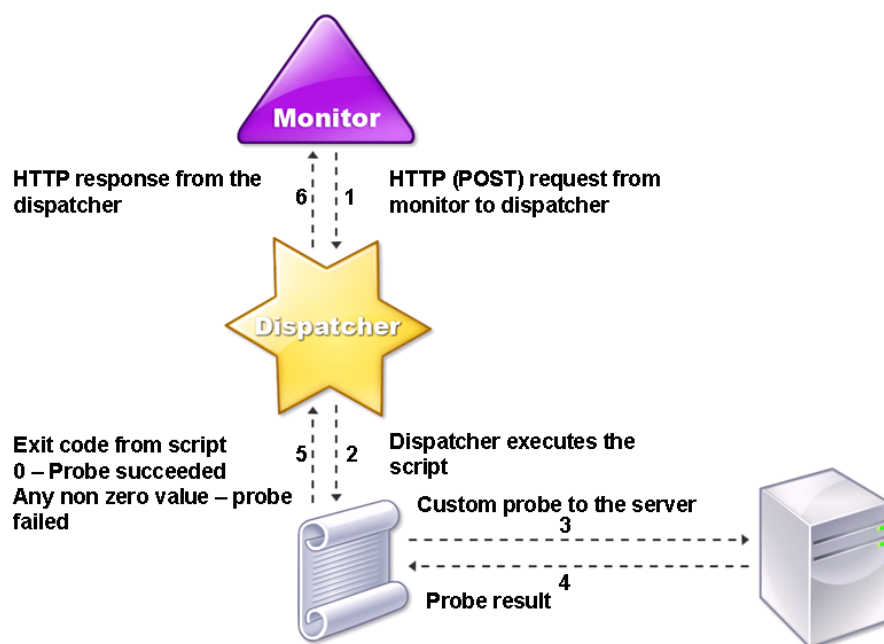

A user monitor requires the following components.

Dispatcher. A process, on the appliance, that listens to monitoring requests. A dispatcher can be on the loopback IP address (127.0.0.1) and port 3013. Dispatchers are also known as internal dispatchers. A dispatcher can also be a web server that supports the Common Gateway Interface (CGI). Such dispatchers are also known as external dispatchers. They are used for custom scripts that do not run on the FreeBSD environment, such as .NET scripts.

Note:

You can configure the monitor and the dispatcher to use HTTPS instead of HTTP by enabling the

“secure” option on the monitor, and configure it as an external dispatcher. However, an internal dispatcher understands only HTTP, and cannot use HTTPS.

In a HA setup, the dispatcher runs on both the primary and secondary NetScaler appliances. The dispatcher remains inactive on the secondary appliance.

Script. The script is a program that sends custom probes to the load balanced server and returns the response code to the dispatcher. The script can return any value to the dispatcher, but if a probe succeeds, the script must return a value of zero (0). The dispatcher considers any other value as probe failure.

The NetScaler appliance is bundled with sample scripts for commonly used protocols. The scripts exist in the `/nsconfig/monitors` directory. If you want to add a script, add it there. To customize an existing script, create a copy with a new name and modify it.

Important:

- Starting with NetScaler release 13.0 build 41.20, you can use the `nsntlm-lwp.pl` script to create a monitor for monitoring a secure NTLM server.
- Starting with release 10.1 build 122.17, the script files for user monitors are in a new location.

If you upgrade an MPX or VPX virtual appliance to release 10.1 build 122.17 or later, the changes are as follows:

- A new directory named `conflicts` is created in `/nsconfig/monitors/` and all the built-in scripts of the previous builds are moved to this directory.
- All new built-in scripts are available in the `/netscaler/monitors/` directory. All custom scripts are available in the `/nsconfig/monitors/` directory.
- Save a new custom script in the `/nsconfig/monitors/` directory.
- After the upgrade is completed, if a custom script is created and saved in the `/nsconfig/monitors/` directory, with the same name as the built-in script, the script in the `/netscaler/monitors/` directory takes priority. The custom script does not run.

If you provision a virtual appliance with release 10.1 build 122.17 or later, the changes are as follows:

- All built-in scripts are available in the `/netscaler/monitors/` directory.
- The `/nsconfig/monitors/` directory is empty.
- If you create a custom script, you must save it in the `/nsconfig/monitors/` directory.

For the scripts to function correctly:

- The maximum number of characters in the name of the script must not exceed 63.
- The maximum number of script arguments that can be provided to a script must not exceed 512.

- The maximum number of characters that can be provided in the parameter script arguments must not exceed 639.

To debug the script, you must run it by using the `nsumon-debug.pl` script from the CLI. You use the script name (with its arguments), IP address, and the port as the arguments of the `nsumon-debug.pl` script. Users must use the script name, IP address, port, time-out, and the script arguments for the `nsumon-debug.pl` script.

At the CLI, type:

```
1 nsumon-debug.pl <scriptname> <IP> <port> <timeout> <partitionID> [  
    scriptarguments] [is_secure]
```

Important: Starting with release 10.5 build 57.x, the 11.0 script files for user monitors support IPv6 addresses and include the following changes:

- For the following protocols, new `pm files` have been included for IPv6 support.
 - RADIUS
 - NNTP
 - POP3
 - SMTP
- The following sample scripts in `/netscaler/monitors/` has been updated for IPv6 support:
 - `nsbmradius.pl`
 - `nsldap.pl`
 - `nsnntp.pl`
 - `nspop3 nssf.pl`
 - `nssnmp.pl`
 - `nswi.pl`
 - `nstftp.pl`
 - `nssmtp.pl`
 - `nsrdp.pl`
 - `nsntlm-lwp.pl`
 - `nsftp.pl`
 - `nsappc.pl`

After upgrading to release 10.5 build 57.x, or 11.0, if you want to use your existing custom scripts with IPv6 services, make sure that you update the existing custom scripts with the changes provided in the updated sample scripts in `/netscaler/monitors/`.

Note:

The sample script `nsmysql.pl` does not support the IPv6 address. If an IPv6 service is bound to a user monitor that uses `nsmysql.pl`, the probe fails.

- The following LB monitor types have been updated to support IPv6 addresses:
 - USER
 - SMTP
 - NNTP
 - LDAP
 - SNMP
 - POP3
 - FTP_EXTENDED
 - StoreFront
 - APPC
 - CITRIX_WI_EXTENDED

If you are creating a custom script that uses one of these LB monitors types, ensure to include IPv6 support in the custom script. Refer to the associated sample script in `/netscaler/monitors/` for the changes that you have to make in the custom script for IPv6 support.

To track the status of the server, the monitor sends an HTTP POST request to the configured dispatcher. This POST request contains the IP address and port of the server, and the script that must be run. The dispatcher runs the script as a child process, with user-defined parameters (if any). Then, the script sends a probe to the server. The script sends the status of the probe (response code) to the dispatcher. The dispatcher converts the response code to an HTTP response and sends it to the monitor. Based on the HTTP response, the monitor marks the service as up or down.

The NetScaler appliance logs the error messages to the `/var/nslog/nsumond.log` file when user monitor probes fail. These detailed error messages are displayed in the GUI, and in the CLI for the `show service/service group` commands.

The following table lists the user monitors and the possible reasons for failure.

User monitor type	Probe failure reasons
SMTP	Monitor fails to establish a connection to the server.

User monitor type	Probe failure reasons
NNTP	<p>Monitor fails to establish a connection to the server.</p> <p>Missing or invalid script arguments, which can include an invalid number of arguments or argument format.</p> <p>Monitor fails to find the NNTP group.</p>
LDAP	<p>Monitor fails to establish a connection to the server.</p> <p>Missing or invalid script arguments, which can include an invalid number of arguments or argument format.</p> <p>Monitor fails to bind to the LDAP server.</p> <p>Monitor fails to locate an entry for the target entity in the LDAP server.</p>
FTP	<p>The connection to the server times out.</p> <p>Missing or invalid script arguments, which can include an invalid number of arguments or argument format.</p> <p>Logon fails.</p>
POP3	<p>Monitor fails to find the file on the server.</p> <p>Monitor fails to establish a connection to the database.</p> <p>Missing or invalid script arguments, which can include an invalid number of arguments or argument format.</p> <p>Logon fails.</p> <p>Preparation of the SQL query fails.</p> <p>Execution of the SQL query fails.</p>
SNMP	<p>Monitor fails to establish a connection to the database.</p> <p>Missing or invalid script arguments, which can include an invalid number of arguments or argument format.</p> <p>Logon fails.</p>

User monitor type	Probe failure reasons
RDP (Windows Terminal Server)	<ul style="list-style-type: none">Monitor fails to create the SNMP session.Monitor fails to find the object identifier.The monitor threshold value setting is greater than or equal to the actual threshold of the monitor.Missing or invalid script arguments, which can include an invalid number of arguments or argument format.Monitor fails to create a socket.Mismatch in versions.Monitor fails to confirm connection.

You can view the log file from the CLI by using the following commands:

```
1 > shell
2 root@ns# cat /var/nslog/nsumond.log
3 root@ns# exit
4 >
```

The command opens a BSD shell, displays the log file on the screen, closes the BSD shell, and returns you to the CLI.

Before NetScaler release 13.0 build 52.X, the `show service/service group` command displayed a generic error message saying “probe failed” as the cause for the user monitor probe failure.

Example:

```
1 show service ftp
2
3 Monitor Name: mon2
4 State: UNKNOWN Weight: 1 Passive: 0
5 Probes: 3 Failed [Total: 0 Current: 0]
6 Last response: Failure - Probe failed.
7 Response Time: 1071.838 millisec
```

From NetScaler release 13.0 build 52.X onwards, the `show service/service group` command displays the actual cause for the user monitor probe failure.

Example:

```
1 show service ftp
2
```

```
3 Monitor Name: mon2
4 State: DOWN   Weight: 1   Passive: 0
5 Probes: 729   Failed [Total: 726 Current: 726]
6 Last response: Failure - Login failed.
7 Response Time: 8000.0 millisec
```

User monitors also have a time-out value and a retry count for probe failures. You can use user monitors with non-user monitors. During high CPU utilization, a non-user monitor enables faster detection of a server failure.

If the user monitor probe times out during high CPU usage, the state of the service remains unchanged.

Example1:

```
1 add lb monitor <name> USER - scriptname <script-name> -resptimeout 5
   seconds
```

Note

For scriptable monitors, the response timeout must be configured to a value equal to the expected timeout + 1 second. For example, if you expect the timeout to be 4 seconds, configure the response timeout as 5 seconds.

Example2:

```
1 add lb monitor <name> USER - scriptname <script-name> -scriptargs <
   Arguments> -secureargs <Arguments>
```

Note:

We recommend that you use the `secureargs` parameter instead of the `scriptargs` parameter for any sensitive data that is related to the scripts.

How to use a user monitor to check websites

August 29, 2023

You can configure a user monitor to check for specific website problems that are reported by HTTP servers using specific HTTP codes. The following table lists the HTTP response codes that this user monitor expects.

HTTP response code	Meaning
200 - success	Probe success.
503 - service unavailable	Probe failure.
404 - not found	Script not found or cannot run.
500 - Internal server error	Internal error/resource constraints in dispatcher (out of memory, too many connections, unexpected system error, or too many processes). The service is not marked DOWN.
400 - bad request	Error parsing HTTP request.
502 - bad gateway	Error decoding script's response.

Configure the user monitor for HTTP by using the following parameters.

Parameter	Specifies
scriptName	The path and name of the script to run.
scriptArgs	The strings that are added in the POST data. A backslash (\) character in the scriptArgs parameter must be escaped with an additional backslash character for the parameter to work as intended. For example, use \\n instead of \n.
dispatcherIP	The IP address of the dispatcher to which the probe is sent.
dispatcherPort	The port of the dispatcher to which the probe is sent.
localfileName	The name of a monitor script file on the local system.
destPath	A particular location on the NetScaler appliance where the uploaded local file is stored.


To create a user monitor to monitor HTTP, see [Configuring Monitors in a Load Balancing Setup](#).

Understand the internal dispatcher

May 2, 2023

You can use a custom user monitor with the internal dispatcher. Consider a case where you need to track the health of a server based on the presence of a file on the server. The following diagram illustrates this scenario.


Figure 1. Using a user monitor with the internal dispatcher

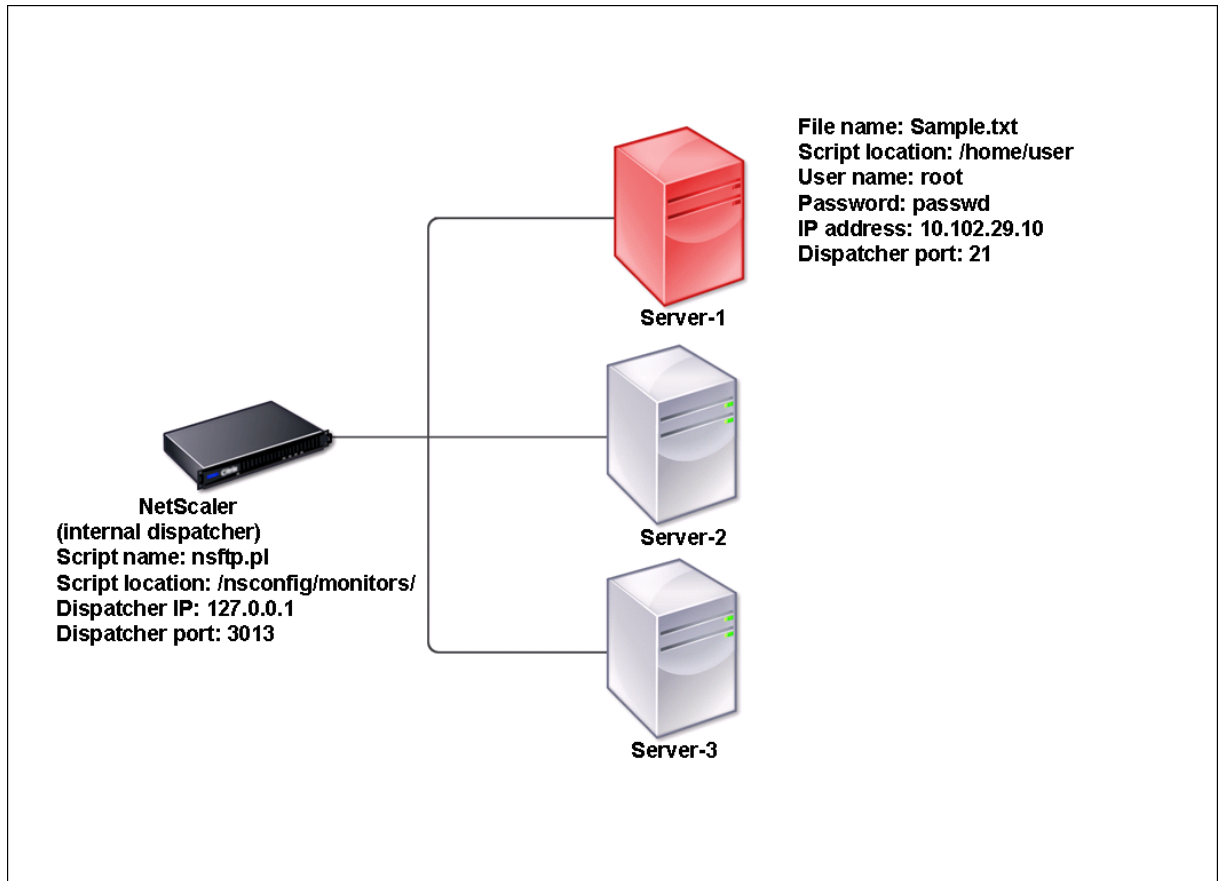

A possible solution is to use a Perl script that initiates an FTP session with the server and checks for the presence of the file. You can then create a user monitor that uses the Perl script. The NetScaler appliance includes such a Perl script (nsftp.pl), in the /nsconfig/monitors/ directory.

You can use a user monitor with an external dispatcher. Consider a case where you must track the health of a server based on the state of an SMTP service on another server. This scenario is illustrated in the following diagram.

Figure 2. Using a user monitor with an external dispatcher

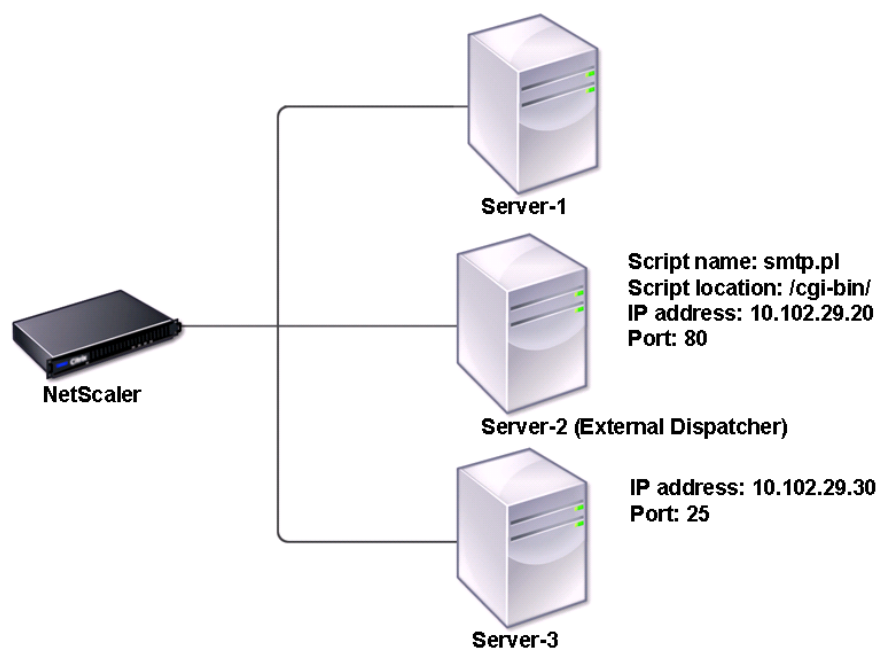

A possible solution would be to create a Perl script that checks the state of the SMTP service on the server. You can then create a user monitor that uses the Perl script.

Configure user monitor

May 2, 2023

User monitors track the health of custom applications and protocols that a NetScaler appliance does not support. This is an extended scope of custom monitors. To configure a user monitor, you must perform the following steps:

- Write a script that can monitor the services bound to it.
- Upload the script to the `/nsconfig/monitors` directory on the NetScaler appliance.
- Provide executable permission to the script.

If the monitor type is a protocol that the appliance does not support, only then you must use a monitor of type **USER**. User monitors support only Perl and Bash type scripts. They do not support Python scripts.

Note

Monitor probes originate from the NSIP address. The `scriptargs` configured for the monitor type **USER** is displayed in the running configuration and `ns.conf` files.

For more information about monitors, see [Configure monitors](#).

To configure a user monitor by using the CLI

At the command prompt, type:

```
1 add lb monitor <monitorName> USER -scriptname <NameOfScript> -
  scriptargs <Arguments> -secureargs <Arguments>
```

Example1:

```
1 add monitor Monitor-User-1 USER -scriptname nsftp.pl -scriptargs "file
  =/home/user/
2 sample.txt;user=root;password=passwd"
```

Example2:

```
1 add monitor Monitor-User-1 USER -scriptname nsftp.pl -scriptargs "file
  =/home/user/
2 sample.txt -secureargs "user=root;password=passwd"
```

Note

The `secureargs` parameter stores the script arguments in an encrypted format instead of the plain text format. Citrix recommends you use the `secureargs` parameter instead of the `scriptargs` parameter for any sensitive data that is related to the scripts, for example, user name and password. If you choose to use both the parameters together, the script specified in `-scriptname` must accept the arguments in the order: `<scriptargs>` `<secureargs>`. Specify the first few arguments in the `<scriptargs>` parameter; and the rest of the arguments in the `<secureargs>` parameter. That is, maintain the order defined for the arguments. Secure arguments are applicable only for the internal dispatcher. If you want to use an external dispatcher, Citrix recommends securing the vulnerable data in your scripts.

Example 3:

Let's say you have already configured the `scriptargs` parameter with the arguments: "a=b;c=d;e=f".

```
1 add monitor mon1 USER -scriptargs "a=b;c=d;e=f"
```

If you want to use the `secureargs` parameter instead of `scriptargs` parameter, do the following:

- Nullify the `scriptargs` parameter.
- Provide all the arguments under `secureargs` parameter.

```
1 set monitor mon1 USER -scriptargs "" -secureargs "a=b;c=d;e=f"
```

To configure a user monitor by using the GUI

1. Navigate to **Traffic Management> Load Balancing> Monitors**, click **Add**.
2. In the **Create monitor** page, do the following:
 - Select the monitor type as **USER**.
 - Choose the script from the drop-down menu or upload your own script.
 - Enter appropriate values for the **Script Arguments** and **Secure Arguments** fields.
 - Click **Create**.

A user monitor is created.


Understand load monitors

May 2, 2023

Load monitors use SNMP polled OIDs to calculate load. The load monitor uses the IP address of the service to which it is bound (the destination IP address) for polling. It sends an SNMP query to the service, specifying the OID for a metric. The metrics can be CPU, memory, or number of server connections. The server responds to the query with a metric value. The metric value in the response is compared with the threshold value. The NetScaler appliance considers the service for load balancing only if the metric is less than the threshold value. The service with the lowest load value is considered first.

The following diagram illustrates a load monitor configured for the services described in the basic load balancing setup discussed in [Setting Up Basic Load Balancing](#).

Figure 1. Operation of Load Monitors

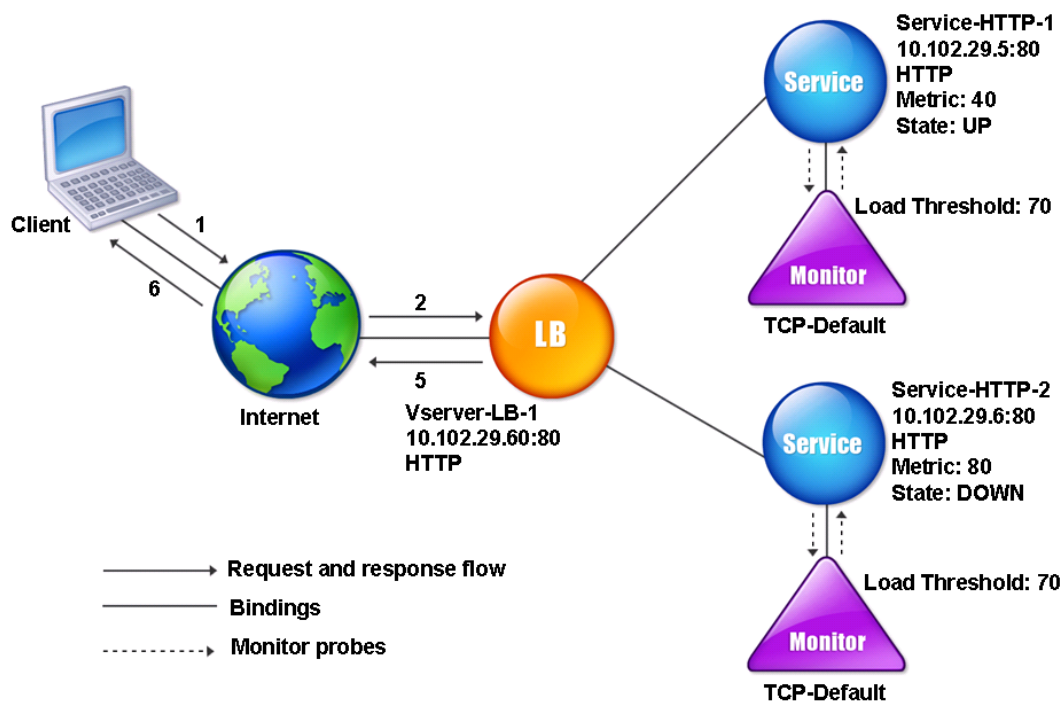

Note: The load monitor does not determine the state of the service. It only enables the appliance to consider the service for load balancing.

After you configure the load monitor, you must then configure the metrics that the monitor will use. For load assessment, the load monitor considers server parameters known as metrics, which are defined within the metric tables in the appliance configuration. Metric tables can be of two types:

- **Local.** By default, this table exists in the appliance. It consists of four metrics: connections, packets, response time, and bandwidth. The appliance specifies these metrics for a service, and SNMP queries are not originated for these services. These metrics cannot be changed.
- **Custom.** A user-defined table. Each metric is associated with an OID.

By default, the appliance generates the following tables:

- NetScaler
- RADWARE
- CISCO-CSS
- LOCAL
- FOUNDRY
- ALTEON

You can either add the appliance-generated metric tables, or you can add tables of your own choosing, as shown in the following table. The values in the metric table are provided only as examples. In an actual scenario, consider the real values for the metrics.

Metric name	OIDs	Weight	Threshold
CPU	1.2.3.4	2	70
Memory	4.5.6.7	3	80
Connections	5.6.7.8	4	90

To calculate the load for one or more metrics, you assign a weight to each metric. The default weight is 1. The weight represents the priority given to each metric. If the weight is high, the priority is high. The appliance chooses a service based on the SOURCEIPDESTIP hash algorithm.

You can also set the threshold value for each metric. The threshold value enables the appliance to select a service for load balancing if the metric value for the service is less than the threshold value. The threshold value also determines the load on each service.

Configure load monitors

February 27, 2023

To configure a load monitor, first create the load monitor. For instructions on creating a monitor, see [Creating Monitors](#). Next, select, or create the metric table to define a set of metrics that determine the state of the server, and (if you create a metric table) bind each metric to the metric table.

To create a metric table by using the command line interface

At the command prompt, type the following commands:

```
1 add lb metricTable <metricTableName>
2
3 bind lb metricTable <metricTableName> <metric> <SNMPOID>
```

Example:

```
1 add lb metricTable Table-Custom-1
2
3 bind lb metricTable Table-Custom-1 1.3.6.1.4.1.5951.4.1.1.41.1.5 11
```

To create a metric table and bind metrics to it by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Metric Tables** and create a metric table.
2. To bind metrics, click **Bind** and specify a metric and an SNMP OID.

Unbind metrics from a metrics table

September 21, 2020

You can unbind metrics from a metrics table if the metrics need to be changed, or if you want to remove the metrics table entirely.

To unbind metrics from a metric table by using the command line interface

At the command prompt, type:

```
1 unbind lb metricTable <metricTable> <metric>
```

Example:

```
1 unbind metricTable Table-Custom-1 1.3.6.1.4.1.5951.4.1.1.41.1.5
```

To unbind metrics from a metric table by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Metric Tables**.
2. Open a metric table, select a metric, and click **Delete**.

You can view the detail of all configured metric tables, such as name and type, to determine whether the metric table is internal or created and configured.

Configure reverse monitoring for a service

May 2, 2023

A reverse monitor marks a service as DOWN if the probe criteria are satisfied and UP if they are not satisfied. For example, if you want a backup service to receive traffic only when the primary service is DOWN, you can bind a reverse monitor to the secondary service but configure it to probe the primary service.

The NetScaler appliance supports the following reverse monitors:

- HTTP
- ICMP
- TCP (from release 11.1 build 49.x)

Configuring HTTP Reverse Monitoring for a Service

The following table describes the conditions of HTTP direct and reverse monitoring for a service:

Condition	Direct	Reverse
Connection not established.	Fail	Fail
HTTP response code matches the probe's specifications.	Success	Fail
HTTP response code does not match the probe's specifications.	Fail	Success
Probe timed out.	Fail	Fail

To configure HTTP reverse monitoring for a service by using the CLI

At the command prompt, type:

```
1 add lb monitor <Monitor_Name> HTTP -respCode 200 -httpRequest "HEAD /"
   -destIP <Primary_Service_IP_Address> -destPort 80 -reverse YES
2
3 bind service <Secondary_Service_Name> -monitorname <Monitor_Name>
```

Configuring ICMP Reverse Monitoring for a Service

The following table describes the conditions of ICMP direct and reverse monitoring for a service:

Condition	Direct	Reverse
ICMP echo reply is received.	Success	Fail
Probe timed out.	Fail	Success

To configure ICMP reverse monitoring for a service by using the CLI

At the command prompt, type:

```
1 add lb monitor <Monitor_Name> PING -destIP <Primary_Service_IP_Address>
   -reverse YES
2
3 bind service <Secondary_Service_Name> -monitorname <Monitor_Name>
```

Configuring TCP Reverse Monitoring for a Service

If a direct TCP monitor receives a RESET in response to a monitor probe, the service is marked DOWN. However, if a reverse TCP monitor receives a RESET response, the probe is considered successful, and the service is marked UP.

The following table describes the conditions of TCP reverse monitoring for a service:

Condition	Direct	Reverse
TCP connection is established.	Success	Fail
Probe timed out.	Fail	Fail
Response to probe is RESET.	Fail	Success

To configure TCP reverse monitoring for a service by using the CLI

At the command prompt, type:

```
1 add lb monitor <Monitor_Name> TCP - destip <Primary_Service_IP_Address>
   -destport <primary_service_port> - reverse YES
2
3 bind service <Secondary_Service_Name> -monitorname <Monitor_Name>
```

To configure reverse monitoring by using the GUI


1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Create an HTTP, ICMP, or TCP monitor and select **Reverse**.

Configure monitors in a load balancing setup

April 8, 2021

To configure monitors on a website, you first decide whether to use a built-in monitor or create your own monitor. If you create a monitor, you can choose between creating a monitor based on a built-in monitor, or creating a custom monitor that uses a script that you write to monitor the service. For more information about creating custom monitors, see [Custom Monitors](#). Once you have chosen or created a monitor, you then bind it to the appropriate service. The monitor names can be up to 255 characters in length. The following conceptual diagram illustrates a basic load balancing setup with monitors.

Figure 1. How monitors operate

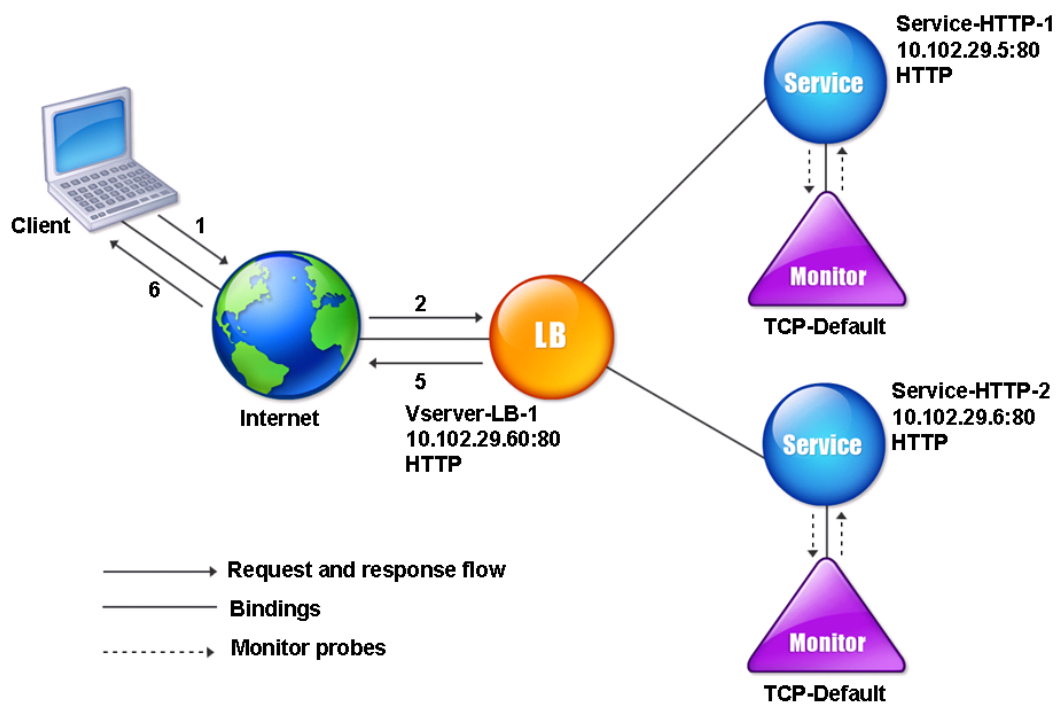

As shown, each service has a monitor bound to it. The monitor probes the load balanced server via its service. As long as the load balanced server responds to the probes, the monitor marks it UP. If the load balanced server fails to respond to the designated number of probes within the designated time period, the monitor marks it DOWN.

This section includes the following details:

- [Creating Monitors](#)
- [Configuring Monitoring Parameters to Determine the Service Health](#)
- [Binding Monitors to Services](#)
- [Modifying Monitors](#)

- [Enabling and Disabling Monitors](#)
- [Unbinding Monitors](#)
- [Removing Monitors](#)
- [Viewing Monitors](#)
- [Closing Monitor Connections](#)
- [Ignoring the Upper Limit on Client Connections for Monitor Probes](#)

Create monitors

May 2, 2023

The NetScaler appliance provides a set of built-in monitors. It also allows you to create custom monitors, either based on the built-in monitors or from scratch.

To create a monitor by using the CLI

At the command prompt, type:

```
1 add lb monitor <monitorName> <monitorType> [<interval>]
2
3 add lb mon monitor-HTTP-1 HTTP
4
5 add lb mon monitor-HTTP-2 TCP 2
```

To create a monitor by using the GUI

1. Navigate to **Traffic Management> Load Balancing> Monitors**.
2. Click **Add** and create a monitor type that meets your requirement.

The Create Monitor screen contains two sections, **Basic Parameters** and **Advanced Parameters**.

Depending on the monitor type, the **Basic Parameters** section contains the parameters that must be set for each monitor. The **Advanced Parameters** section contains the parameters that can be used in advanced use cases.

The following figure is a sample of a Create Monitor page of the ARP monitor type.

← Create Monitor

Name*
 ⓘ

Type*
 > ⓘ

Basic Parameters

Interval

Response Time-out

Advanced Parameters

Destination IP

Destination Port

Down Time

TROFS Code

TROFS String

Dynamic Time-out

Deviation

Dynamic Interval

Retries

Resp Time-out Threshold

SNMP Alert Retries

Success Retries

Failure Retries

Net Profile

TOS

TOS ID

Enabled
 Reverse
 Transparent
 LRTM (Least Response Time using Monitoring)
 IP Tunnel

▲ Advanced Parameters

Note

Prior to NetScaler release 12.0 build 56.20, Basic Parameters and Advanced Parameters are named Standard Parameters and Special Parameters respectively.

Configure monitor parameters to determine the service health

May 2, 2023

You can configure the following monitoring parameters to mark a service as DOWN based on the monitoring probes.

Retries

Maximum number of probes to send to establish the state of a service for which a monitoring probe fails.

failureRetries

Number of retries that must fail, out of the number specified for the Retries parameter, for a service to be marked as DOWN. For example, if the Retries parameter is set to 10 and the Failure Retries parameter is set to 6, out of the 10 probes sent, at least six probes must fail if the service is to be marked as DOWN.

alertRetries

Number of consecutive probe failures after which the appliance generates an SNMP trap called monProbeFailed.

Setting alertRetries to a value higher than the Retries value

The alertRetries parameter, which specifies the maximum number of consecutive monitoring-probe failures after which the NetScaler appliance generates an SNMP trap called monProbeFailed, can now be set to a value higher than the Retries value (which specifies the maximum number of probes to send to establish the state of a service for which a monitoring probe failed). If the alertRetries value is higher than the Retries value, the SNMP trap is not sent until after the service is DOWN.

For example, if you set Retries to 3, alertRetries to 12, and the time interval to 5 seconds, the service is marked DOWN after 15 seconds (35), *but no alert is generated*. If the monitor probes are still failing after 60 seconds (125), the NetScaler appliance generates a monProbeFailed trap. If a probe succeeds at some time between 15 and 60 seconds, the service is marked UP and no alert is generated.

Setting the alertRetries value to a value higher than the Retries value helps in generating only genuine alerts and avoid false positives during scheduled restarts.

To set the alertRetries parameter value to a higher value than the Retries value by using the command line interface At the command prompt, type:

```
1 add lb monitor <monitorName> [-retries <integer>] [-alertRetries <integer>]
```

Example:

```
add lb monitor monitor-HTTP-1 HTTP -retries 3 -alertRetries 12
```

To set the alertRetries parameter value to a higher value than the Retries value by using the GUI

1. Navigate to **Configuration > Traffic Management > Load Balancing > Monitors**.
2. Click **Add** to add a new monitor or select an existing monitor and click **Edit**.
3. In the **Retries** box, type the value for the Retries parameter.
4. In the **SNMP Alert Retries** box, type the value for the `alertRetries` parameter.

Bind monitors to services

May 2, 2023

After creating a monitor, you bind it to a service. You can bind one or multiple monitors to a service. If you bind one monitor to a service, that monitor determines whether the service is marked UP or DOWN.

If you bind multiple monitors to a service, the NetScaler appliance checks the state of all the monitors and then decides the state of the service. You can configure different weights to a monitor. The weight of a monitor specifies how much that monitor contributes to designating the service as UP or DOWN. A monitor with a greater weight has a higher preference in marking the service UP or DOWN. Default weight is 1. Therefore, even if one of the monitors fails, the service is marked as DOWN. For more information, see [Set a threshold value for the monitors bound to a service](#).

Note: The destination IP address of a monitor probe can be different than the server IP address and port.

To bind a monitor to a service by using the CLI

At the command prompt, type:

```
1 bind service <name> (-monitorName <string>)
```

Example:

```
1 bind service s1 -monitorName tcp
```

To bind a monitor to a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Open the service, and add a monitor.

Modify monitors

April 19, 2021

You can modify the settings for any monitor that you created.

Note: Two sets of parameters apply to monitors: those that apply to all monitors, regardless of type, and those that are specific to a monitor type. For information on parameters for a specific monitor type, see the description for that type of monitor.

To modify an existing monitor by using the CLI

At the command prompt, type:

```
1 set lb monitor <monitorName> <type> -interval <interval> -resptimeout <resptimeout>
```

Example:

```
1 set mon monitor-HTTP-1 HTTP -interval 50 milli
2 -resptimeout 20 milli
```

To modify an existing monitor by using the GUI

Navigate to **Traffic Management > Load Balancing > Monitors**, and open a monitor to modify.

Enable and disable monitors

September 17, 2024

By default, monitors bound to services and service groups are enabled. When you enable a monitor, the monitor begins probing the services to which it is bound. If you disable a monitor bound to a service, the state the service is determined using the other monitors bound to the service. If the service is bound to only one monitor, and if you disable the monitor, the state of the service is determined using the default monitor.

To enable a monitor by using the CLI

At the command prompt, type:

```
1 set lb monitor <monitor_name> <type> -state ENABLED
```

Example:

```
1 set lb monitor monitor-1 http -state ENABLED
```

To enable a monitor by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Select a monitor, and from the Action list, select Enable.

To disable a monitor by using the CLI

At the command prompt, type:

```
1 set lb monitor <monitor_name> <type> -state DISABLED
```

Example:

```
1 set lb monitor monitor-1 http -state DISABLED
```

Unbind monitors

April 19, 2021

You can unbind monitors from a service and service group. When you unbind a monitor from the service group, the monitors are unbound from the individual services that constitute the service group. When you unbind a monitor from a service or a service group, the monitor does not probe the service or the service group.

Note: When you unbind all user-configured monitors from a service or a service group, the default monitor is bound to the service and the service group. The default monitors then probes the service or the service groups.

To unbind a monitor from a service by using the CLI

At the command prompt, type:

```
1 unbind lb monitor <monitorName>
```

Example:

```
1 unbind mon monitor-HTTP-1 Service-HTTP-1
```

To unbind a monitor from a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open a service to modify.
2. Click in the Monitors section, select a monitor, and click **Unbind**.

Remove monitors

May 2, 2023

After you unbind a monitor that you created from its service, you can remove that monitor from the NetScaler configuration. (If a monitor is bound to a service, it cannot be removed.)

Note: When you remove monitors bound to a service, the default monitor is bound to the service. You cannot remove default monitors.

To remove a monitor by using the CLI

At the command prompt, type:

```
1 rm lb monitor <monitorName> <type>
```

Example:


```
1 rm lb monitor monitor-HTTP-1 HTTP
```

To remove a monitor by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Select a monitor, and click **Delete**.

View monitors

May 2, 2023

You can view the services and service groups that are bound to a monitor. You can verify the settings of a monitor to troubleshoot your NetScaler configuration. The following procedure describes the steps to view the bindings of a monitor to the services and service groups.

To view monitor bindings by using the CLI

At the command prompt, type:

```
1 show lb monbindings <MonitorName>
```

Example:

```
1 show lb monbindings monitor-HTTP-1
```

To view monitor bindings by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Select a monitor, and in the Action list, click **Show Bindings**.

To view monitors by using the CLI

At the command prompt, type:

```
1 show lb monitor <monitorName>
```

Example:

```
1 show lb mon monitor-HTTP-1
```

To view monitors by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**. The details of the available monitors appear in the Monitors pane.

Close monitor connections

May 2, 2023

The NetScaler appliance sends probes to the services through the monitors bound to the services. By default, the monitor on the appliance and the physical server follow the complete handshake procedure even for monitor probes. However, this procedure adds overhead to the monitoring process and might not be always necessary.

For the TCP type monitor, you can configure the appliance to close a monitor-probe connection after receiving SYN-ACK from the service. To do so, set the value of the `monitorConnectionClose` parameter to `RESET`. If you want the monitor-probe connection to go through the complete procedure, set the value to `FIN`.

Note: The `monitorConnectionClose` setting is applicable only for type TCP and TCP-Default monitors.

To configure monitor-connection closure by using the command line interface:

At the command prompt, type:

```
1 set lb parameter -monitorConnectionClose <monitor_conn_close_option>
```

Example

```
1 set lb parameter -monitorConnectionClose RESET
```

To configure monitor-connection closure by using the configuration utility:

1. Navigate to **Traffic Management > Load Balancing > Configure Load Balancing Parameters**.
2. Select **FIN** or **Reset**.

Closing Monitor Connections at the Service or Service Group Level

You can also configure the appliance to close a monitor-probe connection at the service and service group level by setting the `monConnectionClose` parameter. If this parameter is not set, the monitor connection is closed by using the value set in the global load balancing parameters. If this parameter is set at the service or service group level, the monitor connection is closed by sending a connection termination message, with the `FIN` or `RESET` bit set, to the service or service group.

To configure monitor-connection closure at the service level by using the CLI

At the command prompt, type:

```
1 set service <service_name> -monConnectionClose ( RESET | FIN )
```

To configure monitor-connection closure at the service group level by using the CLI

At the command prompt, type:

```
1 set serviceGroup <service_name> -monConnectionClose ( RESET | FIN )
```

To configure monitor-connection closure at the service level by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Add or edit a service, and in **Basic Settings**, set the **Monitoring Connection Close Bit**.

To configure monitor-connection closure at the service group level by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Add or edit a service group, and in **Basic Settings**, set the **Monitoring Connection Close Bit**.

Note: For closing a monitor-probe connection using global load balancing parameters, you can configure `monitorConnectionClose` to FIN or RESET. When you configure the `monitorConnectionClose` parameter to;

- FIN: The appliance performs a complete TCP handshake.
- RESET: The appliance closes the connection after receiving the SYN-ACK from the service.

In the lighter version of NetScaler CPX, the `monitorConnectionClose` parameter value is set to RESET by default and cannot be changed to FIN at the global level. However, you can change the `monitorConnectionClose` parameter to FIN at the service level.

Ignore the upper limit on client connections for monitor probes

May 2, 2023

Depending on considerations such as the capacity of a physical server, you can specify a limit on the maximum number of client connections made to any service. If you have set such a limit on a service,

the NetScaler appliance stops sending requests to the service when the threshold is reached and resumes sending connections to the service after the number of existing connections falls to within the limits. You can configure the appliance to skip this check when it sends monitor-probe connections to a service.

Note: You cannot skip the maximum-client-connections check for an individual service. If you specify this option, it applies to all the monitors bound to all the services configured on the NetScaler appliance.

To set the Skip MaxClients for Monitor Connections option by using the CLI

At the command prompt, type:

```
1 set lb parameter -monitorSkipMaxClient (ENABLED|DISABLED)
```

Example:

```
1 set lb parameter -monitorSkipMaxClient enabled
```

To set the Skip MaxClients for Monitor Connections option by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Configure Load Balancing Parameters**.
2. Select **Skip MaxClients for Monitoring Connections**.

Manage a large scale deployment

May 2, 2023

The NetScaler appliance contains several features that are helpful when you are configuring a large load balancing deployment. Instead of configuring virtual servers and services individually, you can create groups of virtual servers and services. You can also create a range of virtual servers and services, and you can translate or mask virtual server and service IP addresses.

You can set persistence for a group of virtual servers. You can bind monitors to a group of services. Creating a range of virtual servers and services of identical type allows you to set up and configure those servers in a single procedure. This significantly shortens the time required to configure those virtual servers and services.

By translating or masking IP addresses, you can take down virtual servers and services. You can then make changes to your infrastructure, without extensive reconfiguration of your service and virtual server definitions.

Ranges of virtual servers and services

April 19, 2021

When you configure load balancing, you can create ranges of virtual servers and services, eliminating the need to configure virtual servers and services individually. For example, you can use a single procedure to create three virtual servers with three corresponding IP addresses. When more than one argument uses a range, the ranges must be of the same size.

The following are the types of ranges you can specify when adding services and virtual servers to your configuration:

- **Numeric ranges.** Instead of typing a single number, you can specify a range of consecutive numbers.

For example, you can create a range of virtual servers by specifying a starting IP address, such as 10.102.29.30, and then typing a value for the last byte that indicates the range, such as 34. In this example, five virtual servers are created with IP addresses that range between 10.102.29.30 and 10.102.29.34.

Note: The IP addresses of the virtual servers and services must be consecutive.

- **Alphabetic ranges.** Instead of typing a literal letter, you can substitute a range for any single letter, for example, [C-G]. This results in all letters in the range being included, in this case C, D, E, F, and G.

For example, if you have three virtual servers named `Vserver-x`, `Vserver-y`, and `Vserver-z`, instead of configuring them separately, you can type `vserver [x-z]` to configure them all.

Creating a range of virtual servers

To create range of virtual servers by using the CLI

At the command prompt, type one of the following commands:

```
1 add lb vserver <name>@ <protocol> -range <rangeValue> <IPAddress> [<
  port>]
2
3 add lb vserver <name>@[<rangeValue>]> <protocol> <IPAddress[<rangeValue
  >]> [<port>]
```

Example:

```
1 add lb vserver Vserver-LB-2 http -range 6 10.102.29.30 80
```

OR

```
1 add lb vserver vserver[P-R] http 10.102.29.[26-28] 80
2
3 vserver "vserverP" added
4
5 vserver "vserverQ" added
6
7 vserver "vserverR" added
8
9 Done
```

To create range of virtual servers by using the CLI

At the command prompt, type one of the following commands:

```
1 add lb vserver <name>@ <protocol> -range <rangeValue> <IPAddress> [<
  port>]
2
3 add lb vserver <name>@**[**<rangeValue>**]** <protocol> <IPAddress[<
  rangeValue>]> [<port>]
```

Example:

```
1 add lb vserver Vserver-LB-2 http -range 6 10.102.29.30 80
```

OR

```
1 add lb vserver vserver[P-R] http 10.102.29.[26-28] 80
2 vserver "vserverP" added
3 vserver "vserverQ" added
4 vserver "vserverR" added
5 Done
```

To create range of virtual servers by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Add a virtual server, and specify a range.

Creating a range of services

If you specify a range for the service name, specify a range for the IP address too.

To create range of services by using the CLI

At the command prompt, type the command:

```
1 add service <name>@ <IP>@ <protocol> <port>
```

Example:

```
1 > add service serv[1-3] 10.102.29.[102-104] http 80
2 service "serv1" added
3 service "serv2" added
4 service "serv3" added
5 Done
```

Configure service groups

May 2, 2023

Configuring a service group enables you to manage a group of services as easily as a single service. For example, if you enable or disable any option, such as compression, health monitoring, or graceful shutdown, for a service group, the option gets enabled for all the members of the service group.

After creating a service group, you can bind it to a virtual server, and you can add services to the group. You can also bind monitors to service groups.

Note

You cannot bind a service and service group having the same IP address and port to the same virtual server.

The members of a service group are identified by IP address or server name.

Using domain-name based service (DBS) group members is advantageous because you need not re-configure the member on the NetScaler appliance if the IP address of the member changes. The appliance automatically senses such changes through the configured name server. This feature is useful in cloud scenarios, where the service provider can change a physical server or change the IP address for a service. If you specify a DBS group member, the appliance learns the IP address dynamically.

You can bind both IP-based and DBS members to the same service group.

Note: If you use DBS service group members, make sure that either a name server is specified or a DNS server is configured on the NetScaler appliance. A domain name is resolved into an IP address only if the corresponding address record is present on the appliance or the name server.

Create service groups

You can configure up to 8192 service groups on the NetScaler appliance.

To create a service group by using the command line

At the command prompt, type:

```
1 add servicegroup <ServiceGroupName> <Protocol>
```

Example:

```
1 add servicegroup Service-Group-1 HTTP
```

To create a service group by using the configuration utility

Navigate to **Traffic Management > Load Balancing > Service Groups**, and add a service group.

Bind a service group to a virtual server

When you bind a service group to a virtual server, the member services are bound to the virtual server.

To bind a service group to a virtual server by using the command line interface

At the command prompt, type:

```
1 bind lb vserver <name>@ <serviceGroupName>
```

Example:

```
1 bind lb vserver Vserver-LB-1 Service-Group-1
```

To bind a service group to a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In Advanced Settings, select **Service Groups**.

Bind a member to a service group

Adding services to a service group enables the service group to manage the servers. You can add the servers to a service group by specifying the IP addresses or the names of the servers.

In the GUI, if you want to add a domain-name based service group member, select **Server Based**.

With this option, you can add any server that has been assigned a name, regardless of whether the name is an IP address or a user-assigned name.

To add members to a service group by using the command line interface

To configure a service group, at the command prompt, type:

```
1 bind servicegroup <serviceGroupName> (<IP>@ | <serverName>) <port>
```

Examples:

```
1 bind servicegroup Service-Group-1 10.102.29.30 80
2
3 bind servicegroup Service-Group-2 1000:0000:0000:0000:0005:0600:700a
   :888b 80
4
5 bind servicegroup CitrixEdu s1.citrite.net
```

To add members to a service group by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Service Groups** and open a service group.
2. Click in the Service Group section, and do one of the following:
 - To add an IP based service group member, select IP Based.
 - To add a server-name based service group member, select Server Based.

If you want to add a domain-name based service group member, select **Server Based**. With this option, you can add any server that has been assigned a name, regardless of whether the name is an IP address or a user-assigned name.

3. If adding a new IP based member, in the IP Address text box, type the IP address. If the IP address uses IPv6 format, select the IPv6 check box and then enter the address in the IP Address text box

Note: You can add a range of IP addresses. The IP addresses in the range must be consecutive. Specify the range by entering the starting IP address in the IP Address text box (for example, 10.102.29.30). Specify the end byte of the IP address range in the text box under Range (for example, 35). In the Port text box type the port (for example, 80), and then click Add.

4. Click Create.

Bind a monitor to a service group

When you create a service group, the default monitor of the type appropriate for the group is automatically bound to it. Monitors periodically probe the servers in the service group to which they are bound and update the state of the service groups.

You can bind a different monitor of your own choice to the service group.

To bind a monitor to a service group by using the command line interface

At the command prompt, type:

```
1 bind serviceGroup <serviceName> -monitorName <string> -monState (
    ENABLED | DISABLED)
```

Example:

```
1 bind serviceGroup Service-Group-1 -monitorName monitor-HTTP-1
```

To a bind monitor to a service group by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Open a service group and, in Advanced Settings, click **Monitors**.

Retain the original state of a service group member after disabling and enabling a virtual server

From build 64.x, a new global option, `-retainDisableServer`, enables you to retain a service-group member's state when a server is disabled and reenabled.

Previously, a member's state would change from DISABLED to ENABLED under the following set of conditions:

- Two applications are deployed on the same port on a virtual server.
- Two service groups with a common member are bound to this virtual server, and the common member is enabled in one group and disabled in the other.
- The server is disabled and then reenabled.

Under these conditions, disabling the server disables all the service group members, and reenabling the server enables all the members, by default, regardless of their earlier states. To bring the members back to the original states, you must manually disable those members in the service group. This is a cumbersome task and prone to errors.

Manage service groups

May 2, 2023

You can change the settings of the services in a service group, and you can perform tasks such as enabling, disabling, and removing service groups. You can also unbind members from a service group. For more information about service groups, see [Configure service groups](#).

Modify a service group

You can modify the attributes of service group members. You can set several attributes of the service group, such as maximum client, and compression. The attributes are set on the individual servers in the service group. You cannot set parameters on the service group such as transport information (IP address and port), weight, and server ID.

Note: A parameter you set for a service group is applied to the member servers in the group, not to individual services.

To modify a service group by using the command line interface

At the command prompt, type the following command with one or more of the optional parameters:

```
1 set servicegroup <serviceName> [-type <type>] [-maxClient <maxClient>] [-maxReq <maxReq>] [-cacheable (YES|NO)] [-cip (ENABLED|DISABLED)] [-cipHeader <cipHeader>] [-usip (YES|NO)] [-sc (ON|OFF)] [-sp (ON|OFF)] [-cltTimeout <cltTimeout>] [-svrTimeout <svrTimeout>] [-cka (YES|NO)] [-TCPB (YES|NO)] [-CMP (**YES**|**NO**)] [-maxBandwidth <maxBandwidth>] [-maxThreshold <maxThreshold>] [-state (ENABLED|DISABLED)] [-downStateFlush (ENABLED|DISABLED)]
```

Example:

```
1 set servicegroup Service-Group-1 -type TRANSPARENT
2
3 set servicegroup Service-Group-1 -maxClient 4096
4
5 set servicegroup Service-Group-1 -maxReq 16384
6
7 set servicegroup Service-Group-1 -cacheable YES
```

To modify a service group by using the configuration utility

Navigate to **Traffic Management > Load Balancing > Service Groups**, and open the service group to modify.

Remove a service group

When you remove a service group, the servers bound to the group retain their individual settings and continue to exist on the NetScaler appliance.

To remove a service group by using the command line interface

At the command prompt, type:

```
1 rm servicegroup <ServiceGroupName>
```

Example:

```
1 rm servicegroup Service-Group-1
```

To remove a service group by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Select a service group, and click **Delete**.

Unbind a member from a service group

When you unbind a member from the service group, the attributes set on the service group no longer apply to the member that you unbound. The member services retain its individual settings, however, and continue to exist on the NetScaler appliance.

To unbind members from a service group by using the command line interface

At the command prompt, type:

```
1 unbind servicegroup <serviceGroupName> <IP>@ [<port>]
```

Example:

```
1 unbind servicegroup Service-Group-1 10.102.29.30 80
```

To unbind members from a service group by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Open a service group, and click in the Service Group Members section.
3. Select a service group member, and click **Unbind**.

Unbind a service group from a virtual server

When you unbind a service group from a virtual server, the member services are unbound from the virtual server and continue to exist on the NetScaler appliance.

To unbind a service group from a virtual server by using the command line interface

At the command prompt, type:

```
1 unbind lb vserver <name>@ <ServiceGroupName>
```

Example:

```
1 unbind lb vserver Vserver-LB-1 Service-Group-1
```

To unbind a service group from a virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open the virtual server, and click in the Service Group section.
3. Select the service group, and click **Unbind**.

Unbind monitors from service groups

When you unbind a monitor from a service group, the monitor that you unbound no longer monitors the individual services that constitute the group.

To unbind a monitor from a service group using the command line interface

At the command prompt, type:

```
1 unbind serviceGroup <serviceGroupName> -monitorName <string>
```

Example:

```
1 unbind serviceGroup Service-Group-1 -monitorName monitor-HTTP-1
```

To unbind a monitor from a service group by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Open a service group, and click in the Monitors section.
3. Select a monitor, and click **Unbind**.

Enable or Disable a service group

When you enable a service group and the servers, the services belonging to the service group are enabled. Similarly, when a service belonging to a service group is enabled, the service group and the service are enabled. By default, service groups are enabled.

After disabling an enabled service, you can view the service using the configuration utility or the command line to see the amount of time that remains before the service goes DOWN.

To disable a service group by using the command line interface

At the command prompt, type:

```
1 disable servicegroup <ServiceGroupName>
```

Example:

```
1 disable servicegroup Service-Group-1
```

To disable a service group by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Select a service group, and in the Action list, click **Disable**.

To enable a service group by using the command line interface

At the command prompt, type:

```
1 enable servicegroup <ServiceGroupName>
```

Example:

```
1 enable servicegroup Service-Group-1
```

To enable a service group by using the configuration utility


1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Select a service group, and in the Action list, click **Enable**.

View the status of service groups members

Navigate to **Traffic Management > Load Balancing > Service Groups**.

In the Service Groups page, the **Effective State** column displays the status of the service groups. Status UP/DOWN in the **Effective State** column is clickable. You can click the status and get the list of members along with their status in the same view. Select a member and click the **Monitor Details** button to view the reason for the status being DOWN.

Note: Before NetScaler release 12.0 build 56.20, the status in the **Effective State** column was not clickable.

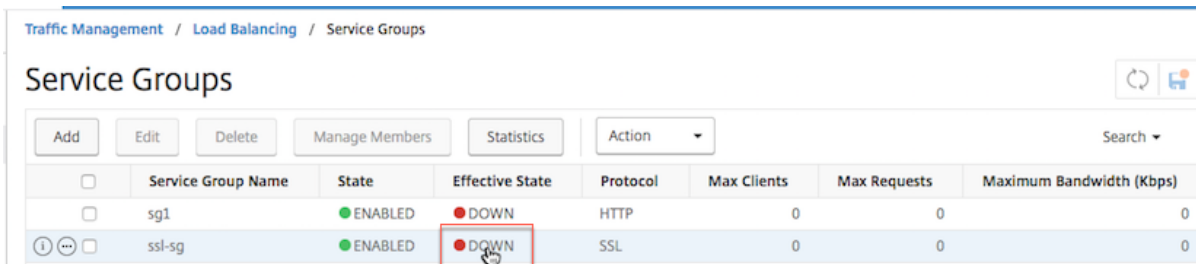

	Service Group Name	State	Effective State	Protocol	Max Clients	Max Requests	Maximum Bandwidth (Kbps)
<input type="checkbox"/>	sg1	ENABLED	DOWN	HTTP	0	0	0
<input type="checkbox"/>	ssl-sg	ENABLED	DOWN	SSL	0	0	0

Viewing the properties of a service group

You can view the following settings of the configured service groups:

- Name
- IP address
- State
- Protocol
- Maximum client connections
- Maximum requests per connection
- Maximum bandwidth
- Monitor threshold

Viewing the details of the configuration can be helpful for troubleshooting your configuration.

To view the properties of a service group by using the command line interface

At the command prompt, type one of the following commands to display the group properties or the properties and the group members:

```
1 show servicegroup <ServiceGroupName>
2
3 show servicegroup <ServiceGroupName> -includemembers
```

Example:

```
1 show servicegroup Service-Group-1
```

To view the properties of a service group by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Click the arrow next to the service group.

Viewing service group statistics

You can view service-group statistical data, such as rate of requests, responses, request bytes, and response bytes. The NetScaler appliance uses the statistics of a service group to balance the load on the services.

To view the statistics of a service group by using the command line interface

At the command prompt, type:

```
1 stat servicegroup <ServiceGroupName>
```

Example:

```
1 stat servicegroup Service-Group-1
```

To view the statistics of a service group by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Select a service group, and click **Statistics**.

Load balancing virtual servers bound to a service group

In large-scale deployments, the same service group can be bound to multiple load balancing virtual servers. In such a case, instead of viewing each virtual server to see the service group it is bound to, you can view a list of all the load balancing virtual servers bound to a service group. You can view the following details of each virtual server:

- Name
- State
- IP address
- Port

To display the virtual servers bound to a service group by using the command line interface

At the command prompt, type the following command to display the virtual servers bound to a service group:

```
1 show servicegroupbindings <serviceGroupName>
```

Example:


```
1 > show servicegroupbindings SVCGRPDTLS
2 SVCGRPDTLS - State :ENABLED
3 1) Test-pers (10.10.10.3:80) - State : DOWN
4 2) BRVSEV (10.10.1.1:80) - State : DOWN
5 3) OneMore (10.102.29.136:80) - State : DOWN
6 4) LBVIP1 (10.102.29.66:80) - State : UP
7 Done
8 >
```

To display the virtual servers bound to a service group by using the configuration utility

1. Navigate to **Traffic Management** > **Load Balancing** > **Service Groups**.
2. Select a service group, and in the Action list, click **Show Bindings**.

Configure a desired set of service group members for a service group in one NITRO API call

October 8, 2023

Support is added to configure a desired set of service group members for a service group in one NITRO API call. A new API, Desired State API, is added to support this configuration. Using Desired State API, you can:

- Provide a list of service group members in a single PUT request on “servicegroup_servicegroupmemberlist_b resource.
- Provide their weight and state (optional) in that PUT request.
- Effectively synchronize the appliance configuration with deployment changes around application servers.

The NetScaler appliance compares the requested desired member set with the configured member set. Then, it automatically binds the new members and unbinds the members that are not present in the request.

Note:

- This feature is supported only for service groups of type [API](#).
- You can only bind IP address based services using Desired State API, domain name based services are not allowed.
- Previously, only one service group member can be bound in a NITRO call.

Important

Desired State API for ServiceGroup membership is supported in NetScaler cluster deployment.

Use case: Synchronize deployment changes to NetScaler appliance in large scale deployments, such as Kubernetes

In large scale and highly dynamic deployments (for example Kubernetes), the challenge is to keep the appliance configuration up-to-date with the rate of change of deployments to accurately serve the application traffic. In such deployments, controllers (Ingress or E-W Controller) are responsible for updating ADC configuration. Whenever there are changes to deployment, `kube-api server` sends the effective set of endpoints through 'Endpoints event' to the controller. The controller uses the Read-Delta-Modify approach where it performs the following:

- Fetches the currently configured endpoint set (service group member set of a service group) for the service from ADC appliance.
- Compares the configured endpoint set with the set in the received event.
- Binds the new endpoints (service group members) or unbinds the deleted endpoints.

Because the rate of change and the size of services is high in this environment, this configuration method is not efficient and might delay configuration updates.

Desired State API solves the problem by accepting the intended member set for a service group in a single API, and effectively updates the configuration.

Create a service group of type API by using the CLI

At the command prompt, type;

```
1 add serviceGroup <serviceName>@ <serviceType> [-autoScale <autoScale>]
```

Example:

```
1 add serviceGroup svg1 HTTP -autoScale API
```

You can configure the `autoDisablegraceful` and `autoDisabledelay` and `autoScale` parameters by using `add serviceGroup` or `set serviceGroup` command.

```
1 add serviceGroup <serviceName>@ <serviceType> \[-autoScale <autoScale>] \[-autoDisablegraceful \(( YES | NO))\] \[-autoDisabledelay <secs>]
2
3 add serviceGroup <serviceName>@ <serviceType> \[-autoScale \((API | CLOUD | DISABLED| DNS | POLICY))\]
```

```
4
5 set serviceGroup <serviceName> \[-autoDisablegraceful \{ YES | NO\}
   \[-autoDisabledelay <secs>]
6
7 set serviceGroup <serviceName> \[-autoScale \{API | CLOUD | DISABLED
   | DNS | POLICY\}
```

Example:

```
1 add serviceGroup svg1 HTTP autoDisablegraceful YES -autoDisabledelay
   100
2
3 add serviceGroup svg1 HTTP -autoScale API
4
5 set serviceGroup svg1 -autoDisablegraceful YES -autoDisabledelay 100
6
7 set serviceGroup svg1 -autoScale API
```

Arguments

autoDisablegraceful Indicates graceful shutdown of the service. If this option is enabled, the appliance waits for all outstanding connections to this service to be closed before deleting the service. For clients that already have a persistent session on the system, new connections or requests continue to be sent to this service. The service member is deleted only if there are no outstanding connections. Default value: NO

autoDisabledelay Indicates the time allowed (in seconds) for a graceful shutdown. During this period new connections or requests continue to be sent to this service for clients that already have a persistent session on the system. Connections or requests from new clients that do not have persistence sessions on the system are not sent to the service. Instead, they are load balanced among other available services. After the delay time expires, the service member is deleted.

Autoscale API The Autoscale API argument enables using the Desired State API for binding the member set to an intended service group. You can set the service group from non-autoscale to Autoscale type of Desired State API, if all provided conditions match.

The desired state API checks if the IP address of the service group member is associated with any existing server. If the IP address matches with an existing server, the API reuses the existing server's IP address and name. If the IP address does not match with any existing server, the API creates a server and assigns the IP address itself as the server name.

Example:

Consider a server with IP address 2.2.2.2 and name as myserver that exists in a NetScaler appliance. Using the desired state API, you bind a set of service group members whose IP address ranges from 2.2.2.1 to 2.2.2.3.

As the IP address 2.2.2.2 is associated with an existing server, the API reuses the IP address and name (2.2.2.2 and myserver). As there are no existing servers with IP addresses, 2.2.2.1, 2.2.2.3, the API creates servers with these IP addresses. The API assigns the IP address itself as the server's name.

If the IP address provided in the desired state command conflicts with other NetScaler entities such as CS virtual server, then a conflict occurs. An error message gets displayed that contains the reason for failure. The IP address of the first service group member among the list of failed members is displayed in the error message.

Example:

Consider a server with IP address 2.2.2.8 which is used as an LB server. Using the desired state API, you try to bind a set of service group members whose IP address ranges from 2.2.2.2 - 2.2.2.11.

As 2.2.2.8 is already in use for LB service, a conflict occurs. The following error message is displayed that contains the reason for failure and the failed member bindings:

```
1 {
2   "errorcode": 304, "message": "Address already in use", "severity": "
      ERROR", "servicegroup_servicegroupmemberlist_binding": {
3     "servicegroupname": "sg1", "failedmembers": [ {
4       "ip": "2.2.2.8", "port": 80   }
5     , {
6       "ip": "2.2.2.9", "port": 80   }
7     ] }
8   }
```

The error code 304 displays the first service group member among the list of failed members, which is 2.2.2.8.

The `set serviceGroup Autoscale` command might fail if the existing member bindings meet any of these conditions:

- If the server bound to the service group is either a name server or a domain-based server.
- If the loopback server name is anything other than 127.0.0.1 or 0000:0000:0000:0000:0000:0000:0000:0001.
- If you choose different types of Autoscale (Cloud, API, DNS, and Policy) in a set serviceGroup command and add serviceGroup command.

Important:

- The autoDisablegraceful and autoDisabledelay parameters are applicable only for the service groups of Autoscale type “API” and “CLOUD.”
- If the autoDisablegraceful or the autoDisabledelay parameters are not configured, then service members are deleted immediately.

Unbind a service group member gracefully

If any of the service group members is not in the desired state list, those members are gracefully unbound based on the `autoDisablegraceful` or `autoDisabledelay` parameter configuration.

- If one of these parameters is set, then the service group member is unbound gracefully.
- If none of these parameters are set, then the service group member is unbound immediately.

Note:

- Service group members identified for graceful unbind are displayed only when the `show service group` command is run.
- You cannot perform any operation (such as `set`, `unset`) on the service group member identified for graceful unbind.

The following figure displays a sample `show service group` command.

```
sh servicegroup sg1
sg1 - HTTP
State: ENABLED Effective State: OUT OF SERVICE Monitor Threshold : 0
Max Conn: 0 Max Req: 0 Max Bandwidth: 0 kbits
Use Source IP: NO
Client Keepalive(CKA): NO
TCP Buffering(TCPB): NO
HTTP Compression(CMP): NO
Idle timeout: Client: 180 sec Server: 360 sec
Client IP: DISABLED
Cacheable: NO
SC: OFF
SP: OFF
Down state flush: ENABLED
Monitor Connection Close : NONE
Appflow logging: ENABLED
Autoscale mode: API
ContentInspection profile name: ???
Process Local: DISABLED
Traffic Domain: 0
Unbind Graceful: NO
Unbind Delay: 1000
```

Create a service group of type API by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Service Groups**, and click **Add**.
2. In **AutoScale Mode**, select **API**.

Configure graceful shutdown or a time delay for an API type service group by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. In **AutoScale Mode**, select **API**.
3. In **Auto Disable Graceful**, select **YES**.
4. In **Auto Disable Delay**, enter the wait time for a graceful shutdown.

Note: The **Auto Disable Graceful** or **Auto Display Delay** fields are enabled only if you select **API** or **CLOUD** in **AutoScale Mode**.

Configure automatic domain based service group scaling

May 2, 2023

A domain based service group consists of members whose IP addresses are obtained by resolving the domain names of servers that are bound to the service group. The domain names are resolved by a name server whose details you configure on the appliance. A domain based service group can also include IP-address based members.

The process of name resolution for a domain based server might return more than one IP address. The number of IP addresses in the DNS response is determined by the number of address (A) records configured for the domain name, on the name server. Even if the name resolution process returns multiple IP addresses, only one IP address is bound to the service group. To scale up or scale down a service group, you need to manually bind and unbind other domain based servers to and from the service group, respectively.

However, you can configure a domain based service group to scale automatically based on the complete set of IP addresses returned by a DNS name server for a domain based server. To configure automatic scaling, when binding a domain based server to a service group, enable the automatic scaling option. Following are the steps for configuring a domain based service group that scales automatically:

- Add a name server for resolving domain names. For more information about configuring a name server on the appliance, see [Adding a Name Server](#).
- Add a domain-based server. For information about adding a domain-based server, see [Configuring a server object](#).
- Add a service group and associate the domain based server to the service group, with the Autoscale option set to DNS. For information about adding a service group, see [Configuring Service Groups](#).

When a domain based server is bound to a service group and the automatic scaling option is set on the binding, a UDP monitor and a TCP monitor are automatically created and bound to the domain based server. The two monitors function as resolvers. The TCP monitor is disabled by default, and the appliance uses the UDP monitor to send DNS queries to the name server to resolve the domain name. If the DNS response is truncated (has the TC flag set to 1), the appliance falls back to TCP and uses the TCP monitor to send the DNS queries over TCP. Thereafter, the appliance continues to use only the TCP monitor.

The DNS response from the name server might contain multiple IP addresses for the domain name. With the automatic scaling option set, the appliance polls each of the IP addresses by using the default monitor, and then includes in the service group only those IP addresses that are up and available. After the IP address records expire, as defined by their time-to-live (TTL) values, the UDP monitor (or the TCP monitor, if the appliance has fallen back to using the TCP monitor) queries the name server for domain resolution and includes any new IP addresses in the service group. If an IP address that is part of the service group is not present in the DNS response, the appliance removes that address from the service group after gracefully closing existing connections to the group member, a process during which it does not allow any new connections to be established with the member. If a domain name that resolved successfully in the past results in an NXDOMAIN response, all the service group members associated with that domain are removed.

Static (IP-address based) members and dynamically scaling domain based members can coexist in a service group. You can also bind members with different domain names to a service group with the automatic scaling option set. However, each domain name associated with a service group must be unique within the service group. You must enable the automatic scaling option for each domain based server that you want to use for automatic service group scaling. If an IP address is common to one or more domains, the IP address is added to the service group only once.

Important

- DNS Autoscale is supported in a cluster deployment.
- Path monitoring for Autoscale service groups is not supported in cluster deployment.

To configure a service group to scale automatically by using the command line interface

At the command prompt, type the following commands to configure the service group and verify the configuration:

```
1 add servicegroup <serviceName> <serviceType> -autoscale DNS
```

Example

In the following example, server1 is a domain based server. The DNS response contains multiple IP addresses. Five addresses are available and are added to the service group.

```
1 > add serviceGroup servGroup -autoScale YES
2 Done
3 > sh servicegroup servGroup
4     servGroup - HTTP
5     State: ENABLED Monitor Threshold : 0
6         . . .
7         . . .
8     1) 192.0.2.31:80 State: UP Server Name: server1 (Auto
          scale) Server ID: None Weight: 1
9
10         Monitor Name: tcp-default State: UP
11         Probes: 2 Failed [Total: 0 Current: 0]
12         Last response: Success - TCP syn+ack received.
13
14     2) 192.0.2.32:80 State: UP Server Name: server1 (Auto
          scale) Server ID: None Weight: 1
15
16         Monitor Name: tcp-default State: UP
17         Probes: 2 Failed [Total: 0 Current: 0]
18         Last response: Success - TCP syn+ack received.
19
20     3) 192.0.2.36:80 State: UP Server Name: server1 (Auto
          scale) Server ID: None Weight: 1
21
22         Monitor Name: tcp-default State: UP
23         Probes: 2 Failed [Total: 0 Current: 0]
24         Last response: Success - TCP syn+ack received.
25
26     4) 192.0.2.55:80 State: UP Server Name: server1 (Auto
          scale) Server ID: None Weight: 1
27
28         Monitor Name: tcp-default State: UP
29         Probes: 2 Failed [Total: 0 Current: 0]
30         Last response: Success - TCP syn+ack received.
31
32     5) 192.0.2.80:80 State: UP Server Name: server1 (Auto
          scale) Server ID: None Weight: 1
33
34         Monitor Name: tcp-default State: UP
35         Probes: 2 Failed [Total: 0 Current: 0]
36         Last response: Success - TCP syn+ack received.
37 Done
```

To configure a service group to scale automatically by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.

2. Create a service group, and set the Autoscale mode to DNS.

Overwriting TTL values

Note:

This option is supported from NetScaler 12.1 build 51.xx and later.

NetScaler appliance is configured to periodically query the DNS server for any update in the SRV record associated with the application during application startup. By default, the periodicity for this query depends on the TTL published in the SRV record. In microservice or cloud world application, deployments change more dynamically. As a result, proxies have to be quicker in absorbing any changes to application deployment. Therefore, users are recommended to set the domain based service TTL parameter explicitly to a value that is lower than the SRV record TTL and is optimal for your deployment. You can overwrite the TTL value by two methods:

- While binding a member to the service group
- Setting the TTL value globally by using the set lb parameter command.

In case the TTL value is configured both while binding the service group member and also globally, then the TTL value specified while binding the service group member takes precedence.

If the TTL value is not specified either while binding a service group member or at the global level, the DBS monitor interval is derived from the TTL value in the DNS response.

Overwriting the TTL values using the CLI

- To overwrite the TTL value while binding, at the command prompt, type:

```
1 bind serviceGroup <serviceName> (<serverName> [-dbsTTL <secs>])
```

Example:

```
1 bind servicegroup svc_grp_1 web_serv -dbsTTL 10
```

- To overwrite the TTL value globally, at the command prompt, type:

```
1 set lb parameter [-dbsTTL <secs>]
```

Example:

```
1 set lb parameter -dbsTTL 15
```

Overwriting the TTL values using the GUI

To overwrite the TTL value while binding:

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. In **Service Groups** page, select the service group that you have created and click **Edit**.
3. In **Load Balancing Service Groups** page, click **Service Group Members**.
4. In **Service Group Members Binding** page, select the server that you have created and click **Edit**.
5. In **Domain Based Service TTL**, enter the TTL value.

To overwrite the TTL value at the global level:

1. Navigate to **Traffic Management > Load Balancing > Change Load Balancing Parameters**.
2. In **Domain Based Service TTL**, enter the TTL value.

Note:

If the domain based server TTL value is set to 0, then the TTL value from the data packet is used.

Specifying different name servers for service group and domain name bindings

Note:

This option is supported from NetScaler 12.1 build 51.xx and later.

You can configure different name servers for different domain names in a specific group. Setting the nameServer parameter is optional while binding a DBS server to the service group. When a name-server is not specified while binding a member to the service group, the globally configured name-server is considered.

Specifying name servers while binding a server to service groups using the CLI At the command prompt, type:

```
1 bind serviceGroup <serviceGroupName> (<serverName> [-nameServer <ip_addr>] [-dbsTTL <secs>])
```

Example:

```
1 bind servicegroup svc_grp_1 web_serv -ns.nameserver.com 10.102.27.155 -dbsTTL 10
```

Specifying name servers while binding a server to service groups using the GUI

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. In **Service Groups** page, select the service group that you have created and click **Edit**.
3. In **Load Balancing Service Groups** page, click **Service Group Members**.
4. In **Service Group Members Binding** page, select the server that you have created and click **Edit**.
5. In **Name Server**, specify the nameserver name to which the query for the bound domain must be sent.

Auto delayed TROFS

You can configure graceful movement of members in a service group to the TROFS state when IP addresses are removed from the DNS response. When the auto delayed TROFS option is enabled, NetScaler waits for the highest response timeout across all monitors attached to the service group before moving the members to TROFS state.

This option is useful when a new set of IP addresses replaces the existing ones completely and the connectivity must be verified before adding the new IP addresses.

Note:

The `-autoDelayedTrofs` option is supported from NetScaler 13.1 build 37.xx and later.

Configure auto delayed TROFS using the CLI

At the command prompt, type the following command:

```
1 add serviceGroup <serviceName>@ <serviceType> [-autoScale <
  autoScale>] [-autoDelayedTrofs ( YES | NO)]
```

Example

```
1 > add serviceGroup sg1 HTTP -autoScale DNS -autoDelayedTrofs YES
```

Configure auto delayed TROFS using the GUI

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. In **AutoScale Mode**, select **DNS**.
3. In **Auto Delayed Trofs**, select **YES**.

Note:

The Auto Delayed Trofs option is enabled only if you select DNS in AutoScale Mode.

← Load Balancing Service Group

Basic Settings

Name*
sample-service-group ⓘ

Protocol*
HTTP ▾

Traffic Domain
▾ [Add](#) [Edit](#)

Cache Type*
SERVER ▾

Auto Scale Mode
DNS ▾ ⓘ

Auto Disable Graceful
NO

Auto Delayed Trofs
YES ▾ ⓘ

Auto Disable Delay
▾

Cacheable
 State
 Health Monitoring
 AppFlow Logging

Monitoring Connection Close Bit
▾

Service discovery using DNS SRV records

October 8, 2023

An SRV record (service record) is a specification of data in the Domain Name System that defines the location, that is the host name and the port number of servers for specified services. The record also defines the weight and priority of each server.

Example of an SRV record:

```
_http._tcp.example.com. 100 IN SRV 10 60 5060 a.example.com.
```

The following table describes each item in an SRV record:

Service	Protocol	Name	TTL	Class	SRV	Priority	Weight	Port	Target
HTTP	TCP	example.com	100	IN	SRV	10	60	5060	a.example.com

You can use the DNS SRV records to discover the service endpoints. NetScaler appliance is configured to periodically query the DNS servers with the SRV record associated with a service. On receiving the SRV record, each of the target host published in the SRV record is bound to a service group associated with the service. Each of the bindings inherits the port, priority, and weight from the SRV record. For each service deployment the user has to configure the NetScaler appliance once while bringing it up, thus making it a single touch deployment for applications.

Important: The weight of dynamically learned service group members cannot be modified using the CLI or the GUI.

Use case: Load balancing microservices

Applications are moving toward microservice architecture from monolithic architectures. Movement to microservice architecture along with back-end server autoscale solution, is making application deployment more dynamic. To support such a dynamic deployment, the proxies or ADC must be able to dynamically detect the back-end application or service instances and absorb them into the proxy configuration.

The service discovery using DNS SRV records feature aids configuration of the NetScaler appliance in such a dynamic deployment scenario. Application developers can use some of the orchestration platforms to deploy the application. Orchestration platforms while instantiating containers during application deployment, might not assign the protocol specific standard port for each of these containers. In such scenarios, discovering the port information becomes the key to configuring the NetScaler appliance. SRV records are helpful in such a scenario. SRV record parameters such as the priority and weight can be used for better load balancing of applications.

- Priority parameter can be used to dictate the priority of the server pool.
- Weight parameter can be used to dictate the capacity of the back-end service instances and hence can be used for weighted load balancing.
- Whenever there is a change in the back-end server pool, for example a back-end instance is

removed from the pool, the instance is removed gracefully only after all the existing client connections are honored.

Note:

- An A/AAAA records based service discovery, all resolved IP addresses have the same weight because you assign the weight to the domain being resolved.
- If the weight in SRV response is greater than 100, then services are not created.

Priority based load balancing using SRV records

You can use SRV records to perform priority-based load balancing. The priority based server pool can be an alternative for the backup virtual servers. The ns.conf file requires minimal configuration compared to the backup virtual servers.

In priority based load balancing using SRV records, a priority number is assigned to each of the server pool. The least number has the highest priority. One of the servers in the highest priority pool is selected for load balancing based on the server's health and availability. If all the servers in the highest priority server pool are down, then the servers that have the next highest priority are selected for load balancing. However, if the servers in the highest priority server pool are up again, then the servers are selected from the highest priority pool again.

Switching from one priority server pool to another server pool occurs gracefully by bleeding the existing client transactions. Therefore, the current clients do not see any break in the application access.

To enable querying for SRV records using the CLI

Perform the following tasks to enable querying for SRV records:

1. Create a server by specifying the query type parameter as SRV.

At the command prompt, type:

```
1 add server <name> <domain> [-queryType <queryType>])
```

Example:

```
1 add server web_serv example.com -queryType SRV
```

Note:

- By default, IPv4 queries are sent. To send IPv6 queries, you must enable the IPv6 domain.
- The SRV target domain name must not exceed 127 characters.

2. Create a service group with the autoscale mode as DNS.

At the command prompt, type:

```
1 add serviceGroup <serviceName> <serviceType> [-autoScale <autoScale>]
```

Example:

```
1 add servicegroup svc_grp_1 http -autoscale dns
```

3. Bind the server created in step 1 to the service group as a member.

At the command prompt, type:

```
1 bind serviceGroup <serviceName> <serverName>
```

Example:

```
1 bind servicegroup svc_grp_1 web_serv
```

Note:

- When binding servers to service group members, you do not have to enter the port number for SRV server types. In case you specify a port number for SRV server type, an error message appears.
- You can optionally specify a name server and a TTL value while binding a server to the service group.

To enable querying for SRV records using the GUI

Create a server

1. Navigate to **Traffic Management > Load Balancing > Servers** and click **Add**.
2. In **Create Server** page, select domain name.
3. Enter the details of all the required parameters.
4. In **Query Type**, select **SRV**.
5. Click **Create**.

Create a service group with autoscale mode as DNS

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. In **Load Balancing Service Group** page, enter details of all the required parameters.

3. In **AutoScale Mode**, select **DNS**.
4. Click **OK**.

Bind server to the service group member

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. In **Service Groups** page, select the service group that you have created and click **Edit**.
3. In **Load Balancing Service Groups** page, click **Service Group Members**.
4. In **Service Group Members Binding** page, select the server that you have created and click **Close**.

Note:

- While binding, you do not have to enter the port number for SRV server types. In case you enter a port number for SRV server type, an error message appears.
- You can optionally specify a name server and a TTL value while binding a server to the service group.

Overwriting TTL values

NetScaler appliance is configured to periodically query the DNS server for any update in the SRV record associated with the application during application startup. By default, the periodicity for this query depends on the TTL published in the SRV record. In microservice or cloud world application, deployments change more dynamically. As a result, proxies have to be quicker in absorbing any changes to application deployment. Therefore, users are recommended to set the domain based service TTL parameter explicitly to a value that is lower than the SRV record TTL and is optimal for your deployment. You can overwrite the TTL value by two methods:

- While binding a member to the service group
- Setting the TTL value globally by using the set lb parameter command.

In case the TTL value is configured both while binding the service group member and also globally, then the TTL value specified while binding the service group member takes precedence.

If the TTL value is not specified either while binding a service group member or at the global level, the DBS monitor interval is derived from the TTL value in the DNS response.

Overwriting the TTL values using the CLI

- To overwrite the TTL value while binding, at the command prompt, type:


```
1 bind serviceGroup <serviceName> (<serverName> [-dbsTTL <secs>])
```

Example:

```
1 bind servicegroup svc_grp_1 web_serv -dbsTTL 10
```

- To overwrite the TTL value globally, at the command prompt, type:

```
1 set lb parameter [-dbsTTL <secs>]
```

Example:

```
1 set lb parameter -dbsTTL 15
```

Overwriting the TTL values using the GUI

To overwrite the TTL value while binding:

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. In **Service Groups** page, select the service group that you have created and click **Edit**.
3. In **Load Balancing Service Groups** page, click **Service Group Members**.
4. In **Service Group Members Binding** page, select the server that you have created and click **Edit**.
5. In **Domain Based Service TTL**, enter the TTL value.

To overwrite the TTL value at the global level:

1. Navigate to **Traffic Management > Load Balancing > Change Load Balancing Parameters**.
2. In **Domain Based Service TTL**, enter the TTL value.

Note: If the domain based server TTL value is set to 0, then the TTL value from the data packet is used.

Specifying different name servers for service group and domain name bindings

You can configure different name servers for different domain names in a specific group. Setting the nameServer parameter is optional while binding a DBS server to the service group. When a name-server is not specified while binding a member to the service group, the globally configured name-server is considered.

Specifying name servers while binding a server to service groups using the CLI

At the command prompt, type:

```
1 bind serviceGroup <serviceGroupName> (<serverName> [-nameServer <ip_addr>] [-dbsTTL <secs>])
```

Example:

```
1 bind servicegroup svc_grp_1 web_serv -ns.nameserver.com 10.102.27.155 -dbsTTL 10
```

Specifying name servers while binding a server to service groups using the GUI

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. In **Service Groups** page, select the service group that you have created and click **Edit**.
3. In **Load Balancing Service Groups** page, click **Service Group Members**.
4. In **Service Group Members Binding** page, select the server that you have created and click **Edit**.
5. In **Name Server**, specify the nameserver name to which the query for the bound domain must be sent.

Translate the IP address of a domain-based server

May 2, 2023

To simplify maintenance on the NetScaler appliance and on the domain-based servers that are connected to it, you can configure IP address masks and translation IP addresses. These functions work together to parse incoming DNS packets and substitute a new IP address for a DNS-resolved IP address.

When configured for a domain-based server, IP address translation enables the appliance to locate an alternate server IP address when you take the server down for maintenance or if you make any other infrastructure changes that affect the server.

When configuring the mask, you must use standard IP mask values (a power of two, minus one) and zeros, for example, 255.255.0.0. Non-zero values are only permitted in the starting octets.

When you configure a translation IP for a server, you create a 1:1 correspondence between a server IP address and an alternate server that shares leading or trailing octets in its IP address. The mask blocks particular octets in the original server's IP address. The DNS-resolved IP address is transformed to a new IP address by applying the translation IP address and the translation mask.

For example, you can configure a translation IP address of 10.20.0.0 and a translation mask of 255.255.0.0. If a DNS-resolved IP address for a server is 40.50.27.3, this address is transformed to 10.20.27.3. In this case, the translation IP address supplies the first two octets of the new address, and the mask passes through the last two octets from the original IP address. The reference to the original IP address, as resolved by DNS, is lost. Monitors for all services to which the server is bound also report on the transformed IP address.

When configuring a translation IP address for a domain-based server, you specify a mask and an IP address to which the DNS-resolved IP address is to be translated.

Note: Translation of the IP address is only possible for domain-based servers. You cannot use this feature for IP-based servers. The address pattern can be based on IPv4 addresses only.

To configure a translation IP address for a server by using the command line interface

At the command prompt, type:

```
1 add server <name>@ <serverDomainName> -translationIp <
  translationIPAddress> -translationMask <netMask> -state <ENABLED|
  DISABLED>
```

Example:

```
1 add server myMaskedServer www.example.com -translationIp 10.10.10.10 -
  translationMask
2 255.255.0.0 -state ENABLED
```

To configure a translation IP address for a server by using the configuration utility

Navigate to **Traffic Management > Load Balancing > Servers**, create a domain-based server, and specify a translation IP address.

Mask a virtual server IP address

May 2, 2023

You can configure a mask and a pattern instead of a fixed IP address for a virtual server. This enables traffic that is directed to any of the IP addresses that match the mask and pattern to be rerouted to a particular virtual server. For example, you can configure a mask that allows the first three octets of an IP address to be variable, so that traffic to 111.11.11.198, 22.22.22.198, and 33.33.33.198 is all sent to the same virtual server.

By configuring a mask for a virtual server IP address, you can avoid reconfiguration of your virtual servers due to a change in routing or another infrastructure change. The mask allows the traffic to continue to flow without extensive reconfiguration of your virtual servers.

The mask for a virtual server IP address works differently from an IP pattern definition for a server described in [Translating the IP Address of a Domain-Based Server](#). For a virtual server IP address mask, a non-zero mask is interpreted as an octet that is considered. For a service, the non-zero value is blocked.

Also, for a virtual server IP address mask, either leading or trailing values can be considered. If the virtual server IP address mask considers values from the left of the IP address, this is known as a forward mask. If the mask considers the values to the right side of the address, this is known as a reverse mask.

Note: The NetScaler appliance evaluates all forward mask virtual servers before evaluating reverse mask virtual servers.

When masking a virtual server IP address, you also need to create an IP address pattern for matching incoming traffic with the correct virtual server. When the appliance receives an incoming IP packet, it matches the destination IP address in the packet with the bits that are considered in the IP address pattern, and after it finds a match, it applies the IP address mask to construct the final destination IP address.

Consider the following example:

- Destination IP address in the incoming packet: 10.102.27.189
- IP address pattern: 10.102.0.0
- IP mask: 255.255.0.0
- Constructed (final) destination IP address: 10.102.27.189.

In this case, the first 16 bits in the original destination IP address match the IP address pattern for this virtual server, so this incoming packet is routed to this virtual server.

If a destination IP address matches the IP patterns for more than one virtual server, the longest match takes precedence. Consider the following example:

- Virtual Server 1: IP pattern 10.10.0.0, IP mask 255.255.0.0
- Virtual Server 2: IP pattern 10.10.10.0, IP mask 255.255.255.0
- Destination IP address in the packet: 10.10.10.45.
- Selected virtual server: Virtual Server 2.

The pattern associated with Virtual Server 2 matches more bits than that associated with Virtual Server 1, so IPs that match it is sent to Virtual Server 2.

Note: Ports are also considered if a tie-breaker is required.

To configure a virtual server IP address mask by using the command line interface

At the command prompt, type:

```
1 add lb vserver <name>@ http -ipPattern <ipAddressPattern> -ipMask <ipMask> <listenPort>
```

Example:

Pattern matching based on prefix octets:

```
1 add lb vserver myLBVserver http -ippattern 10.102.0.0 -ipmask 255.255.0.0 80
```

Pattern matching based on trailing octets:

```
1 add lb vserver myLBVserver1 http -ippattern 0.0.22.74 -ipmask 0.0.255.255 80
```

Modify a pattern-based virtual server:

```
1 set lb vserver myLBVserver1 -ippattern 0.0.22.74 -ipmask 0.0.255.255
```

If you configure the Virtual Server 1 as follows:

```
1 add lb vserver vs1 HTTP -ippattern 100.1.1.0 -ipmask 255.255.255.0 80
```

The NetScaler appliance will not respond to an ARP request on all the IP addresses. However, it responds to the virtual server traffic routed to all the IP addresses in that pattern.

To configure a virtual server IP address mask by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the Address Type list, select IP Pattern, and specify an IP pattern and IP mask.

Configure load balancing for commonly used protocols

May 2, 2023

In addition to websites and web-based applications, other types of network-deployed applications that use other common protocols often receive large amounts of traffic and therefore benefit from load balancing. Several of these protocols require specific configurations for load balancing to work properly. Among them are FTP, DNS, SIP, and RTSP.

If you configure your NetScaler appliance to use domain names for your servers rather than IPs, you might also need to set up IP translation and masking for those servers.


Load balance a group of FTP servers

May 2, 2023

The NetScaler appliance can be used to load balance FTP servers. FTP requires that the user initiate two connections on two different ports to the same server: the control connection, through which the client sends commands to the server, and the data connection, through which the server sends data to the client. When the client initiates an FTP session by opening a control connection to the FTP server, the appliance uses the configured load balancing method to select an FTP service, and forwards the control connection to it. The load balanced FTP server then opens a data connection to the client for information exchange.

The following diagram describes the topology of a load balancing configuration for a group of FTP servers.

Figure 1. Basic Load Balancing Topology for FTP Servers

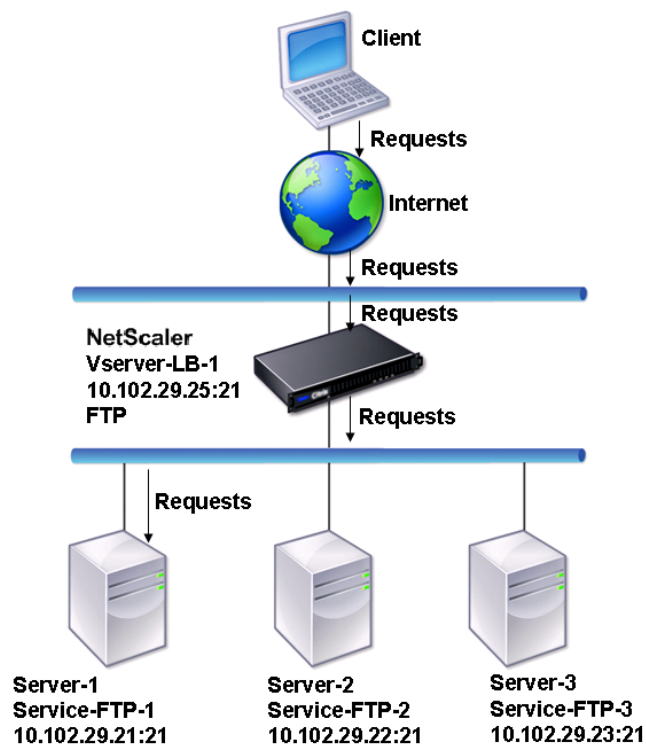

In the diagram, the services Service-FTP-1, Service-FTP-2, and Service-FTP-3 are bound to the virtual server Vserver-LB-1. Vserver-LB-1 forwards the client's connection request to one of the services using the least connection load balancing method. Subsequent requests are forwarded to the service that


the appliance initially selected for load balancing.

The following table lists the names and values of the basic entities configured on the appliance.

Entity type	Name	IP address	Port	Protocol
Vserver	Vserver-LB-1	10.102.29.25	21	FTP
Services	Service-FTP-1	10.102.29.21	21	FTP
	Service-FTP-2	10.102.29.22	21	FTP
	Service-FTP-3	10.102.29.23	21	FTP
Monitors	FTP	None	None	None

The following diagram shows the load balancing entities, and the values of the parameters that need to be configured on the appliance.

Figure 2. Load Balancing FTP Servers Entity Model

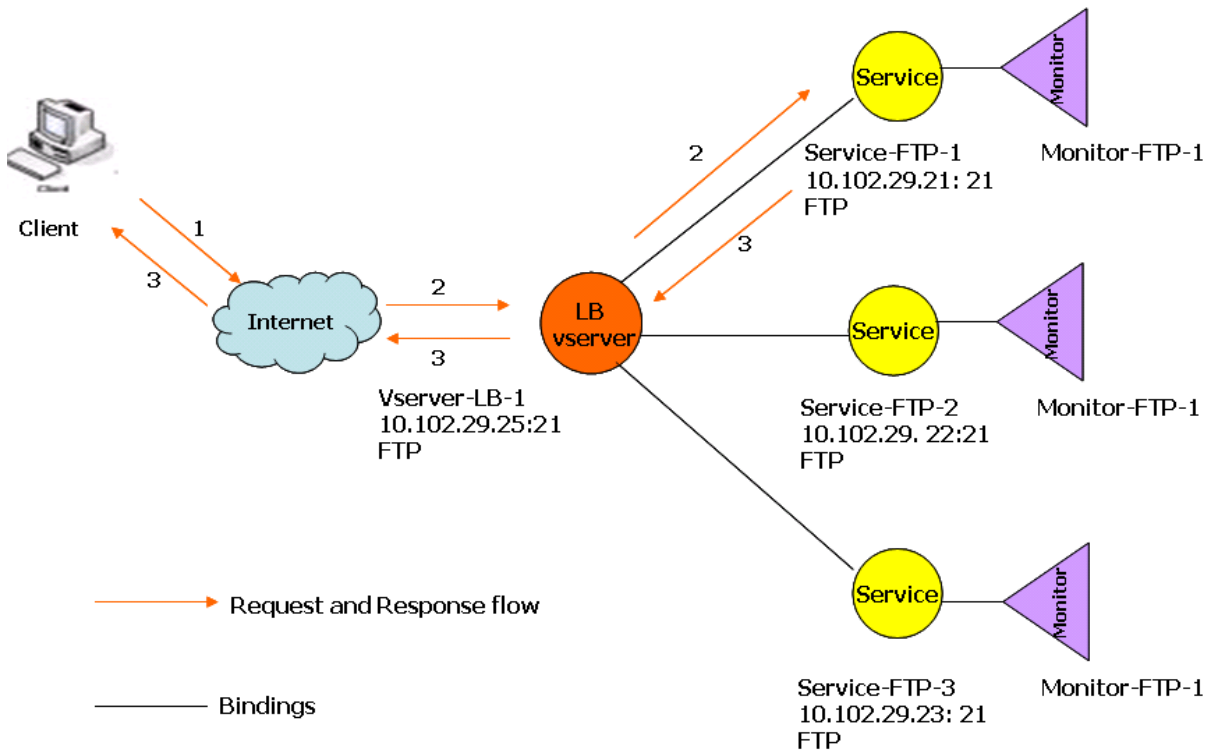

The appliance can also provide a passive FTP option to access FTP servers from outside of a firewall. When a client uses the passive FTP option and initiates a control connection to the FTP server, the FTP server also initiates a control connection to the client. It then initiates a data connection to transfer a file through the firewall.

To create services and virtual servers of type FTP, see [Setting Up Basic Load Balancing](#). Name the entities and set the parameters to the values described in the columns of the previous table. When you configure a basic load balancing setup, a default monitor is bound to the services.

Next, bind the FTP monitor to the services by following the procedure described in the section [Binding Monitors to Services](#).

To create FTP monitors by using the CLI

At the command prompt, type:

```
1 add lb monitor <MonitorName> FTP -interval <Interval> -userName <
  UserName> -password <Password>
```

Example:

```
1 add lb monitor monitor-FTP-1 FTP -interval 360 -userName User -password
  User
```

To create FTP monitors by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Create a monitor of type FTP, and in Special Parameters, specify a user name and password.


Load balance DNS servers

May 2, 2023

When you request DNS resolution of a domain name, the NetScaler appliance uses the configured load balancing method to select a DNS service. The DNS server to which the service is bound then resolves the domain name and returns the IP address as the response. The appliance can also cache DNS responses and use the cached information to respond to future requests for resolution of the same domain name. Load balancing DNS servers improve DNS response times.

The following diagram describes the topology of a load balancing configuration that load balances a group of DNS services.

Figure 1. Basic Load Balancing Topology for DNS Servers

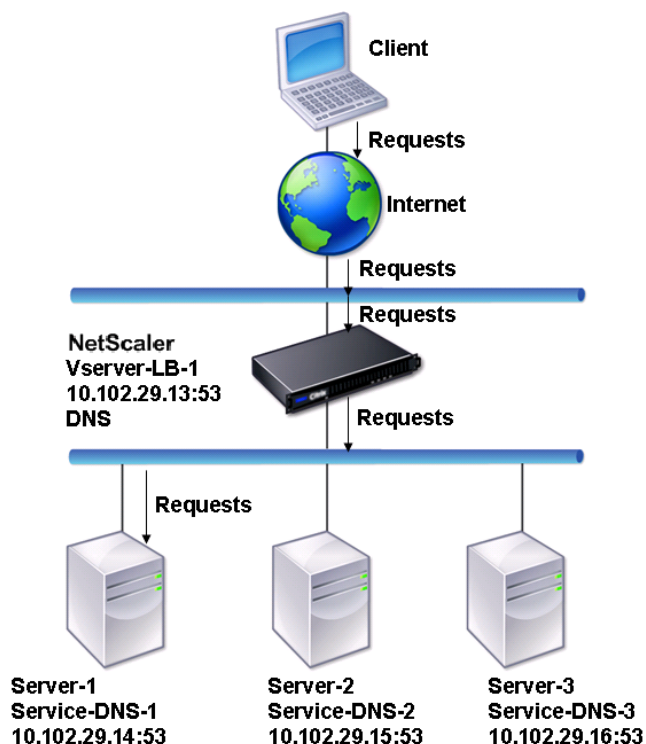


In the diagram, the services Service-DNS-1, Service-DNS-2, and Service-DNS-3 are bound to the virtual server Vserver-LB-1. The virtual server Vserver-LB-1 forwards client requests to a service using the least connection load balancing method. The following table lists the names and values of the basic entities configured on the appliance.

Entity type	Name	IP address	Port	Protocol
Virtual Server	Vserver-LB-1	10.102.29.13	53	DNS
Services	Service-DNS-1	10.102.29.14	53	DNS
	Service-DNS-2	10.102.29.15	53	DNS
	Service-DNS-3	10.102.29.16	53	DNS
Monitors	monitor-DNS-1	None	None	None

The following diagram shows the load balancing entities and the values of the parameters that need to be configured on the appliance.

Figure 2. Load Balancing DNS Servers Entity Model

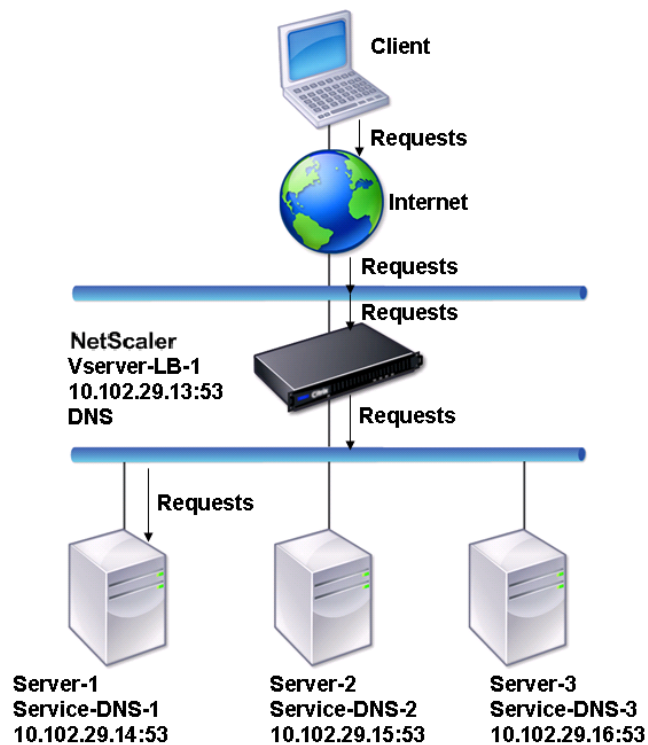

To configure a basic DNS load balancing setup, see [Setting Up Basic Load Balancing](#). Follow the procedures to create services and virtual servers of type DNS, naming the entities and setting the parameters using the values described in the previous table. When you configure a basic load balancing setup, the default ping monitor is bound to the services. For instructions on binding a DNS monitor to DNS services, you can also see [Binding Monitors to Services](#).

The following procedure describes the steps to create a monitor that maps a domain name to the IP address based on a query.

To configure DNS monitors by using the CLI

At the command prompt, type:

```
1 add lb monitor <monitorName> DNS -query <domainName> -queryType <
  Address|ZONE> -IPAddress <ipAddress>
```

Example:

```
1 add lb monitor monitor-DNS-1 DNS -query www.citrix.com -queryType
  Address -IPAddress 10.102.29.66
2
```

```
3 add lb monitor monitor-DNS-2 DNS -query www.citrix2.com -queryType
  Address -IPAddress
4 1000:0000:0000:0000:0005:0600:700a::888b-888d
```

To configure DNS monitors by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Create a monitor of type DNS, and in Special Parameters, specify a query and query type.

Load balance domain-name based services

May 2, 2023

When you create a service for load balancing, you can provide an IP address. Alternatively, you can create a server using a domain name. The server name (domain name) can be resolved using an IPv4 or IPv6 name server, or by adding an authoritative DNS record (A record for IPv4 or AAAA record for IPv6) to the NetScaler configuration.

When you configure services with domain names instead of IP addresses, and if the name server resolves the domain name to a new IP address, the monitor bound to the service runs a health check on the new IP address, and updates the service IP address only when the IP address is found to be healthy. The monitor can be the default monitor bound to the service or you can bind any other supported monitor. It probes the service at regular intervals defined in the monitor parameters. If the domain name resolves to a new IP address, the monitor sends a fresh probe to check the health of the service. All subsequent probes are at the predefined interval.

Note: When you change the IP address of a server, the corresponding service is marked down for the first client request. The name server resolves the service IP address to the changed IP address for the next request, and the service is marked UP.


Domain-name based services have the following restrictions:

- The maximum domain name length is 255 characters.
- The Maximum Client parameter is used to configure a service that represents the domain name-based server. For example, a maxClient of 1000 is set for the services bound to a virtual server. When the connection count at the virtual server reaches 2000, the DNS resolver changes the IP address of the services. However, because the connection counter on the service is not reset, the virtual server cannot take any new connections until all the old connections are closed.
- When the IP address of the service changes, persistence is difficult to maintain.
- If the domain name resolution fails due to a timeout, the appliance uses the old information (IP address).

- When monitoring detects that a service is down, the appliance performs a DNS resolution on the service (representing the domain name-based server) to obtain a new IP address.
- Statistics are collected on a service and are not reset when the IP address changes.
- If a DNS resolution returns a code of “name error”(3), the appliance marks the service down and changes the IP address to zero.

When the appliance receives a request for a service, it selects the target service. This way, the appliance balances the load on your services. The following diagram describes the topology of a load balancing configuration that load balances a group of domain-name based servers (DBS).

Figure 1. Basic Load Balancing Topology for DBS Servers

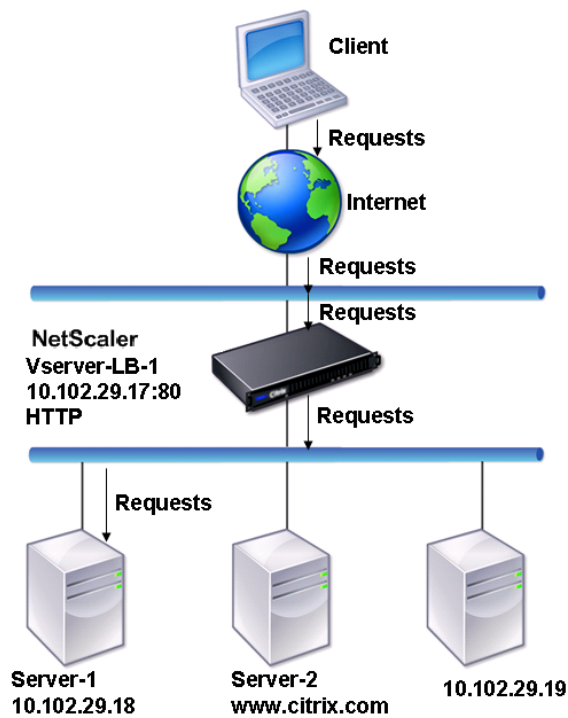

The services Service-HTTP-1, Service-HTTP-2, and Service-HTTP-3 are bound to the virtual server Vserver-LB-1. The virtual server Vserver-LB-1 uses the least connection load balancing method to choose the service. The IP address of the service is resolved using the name server Vserver-LB-2.


The following table lists the names and values of the basic entities configured on the appliance.

Entity type	Name	IP address	Port	Protocol
Virtual Server	Vserver-LB-1	10.102.29.17	80	HTTP

Entity type	Name	IP address	Port	Protocol
	Vserver-LB-2	10.102.29.20	53	DNS
Servers	server-1	10.102.29.18	80	HTTP
	server-2	www.citrix.com	80	HTTP
Services	Service-HTTP-1	server-1	80	HTTP
	Service-HTTP-2	server-2	80	HTTP
	Service-HTTP-2	10.102.29.19	80	HTTP
Monitors	Default	None	None	None
Name Server	None	10.102.29.19	None	None

The following diagram shows the load balancing entities and the values of the parameters that need to be configured on the appliance.

Figure 2. Load Balancing DBS Servers Entity Model

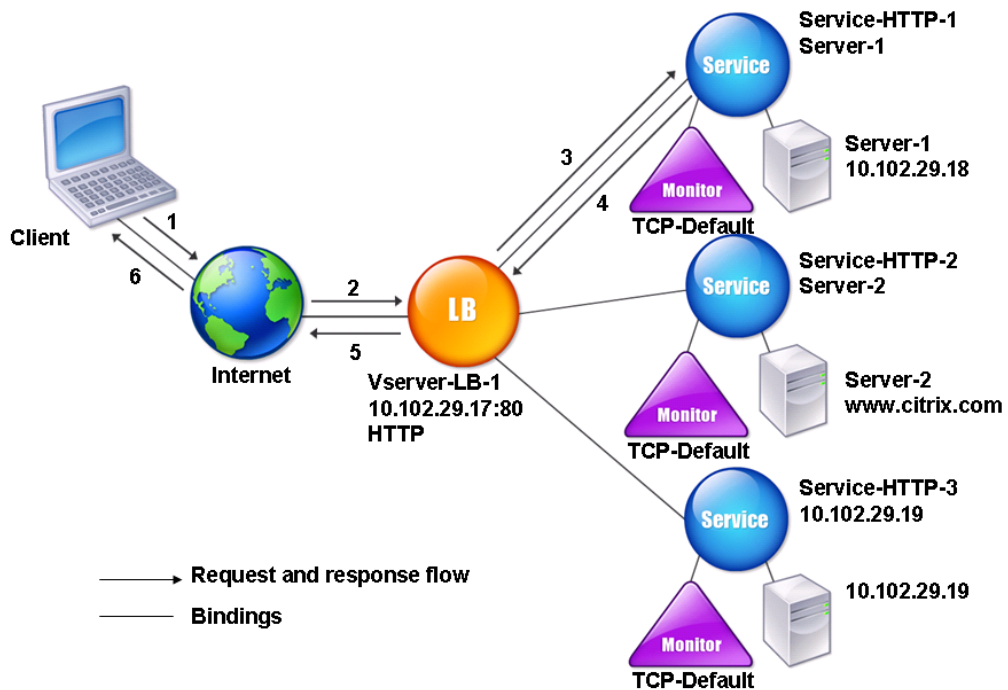

To configure a basic load balancing setup, see [Setting Up Basic Load Balancing](#). Create the services

and virtual servers of type HTTP, and name the entities and set the parameters using the values described in the previous table.

You can add, remove, enable, and disable external name servers. You can create a name server by specifying its IP address, or you can configure an existing virtual server as the name server.

To add a name server by using the command line interface

At the command prompt, type:

```
1 add dns nameServer <dnsVserverName>
```

Example:

```
1 add dns nameServer Vserver-LB-2
```

To add a name server by using the configuration utility

1. Navigate to **Traffic Management > DNS > Name Servers**.
2. Create a DNS name server of type DNS Virtual Server, and select a server from the DNS Virtual Server list.

You can also add an authoritative name server that resolves the domain name to an IP address.

Note

You can add a name server of type TCP, UDP, or UDP_TCP to resolver DBS probes. However, if TCP and UDP name servers coexists, and a UDP name server receives a response with the truncated bit, this response is not retried over the TCP name server.


Load balance a group of SIP servers

May 2, 2023

The Session Initiation Protocol (SIP) is designed to initiate, manage, and terminate multimedia communications sessions. It has emerged as the standard for Internet telephony (VoIP). SIP messages can be transmitted over TCP or UDP. SIP messages are of two types: request messages and response messages.

The traffic in a SIP based communication system is routed through dedicated devices and applications (entities). In a multimedia communication session, these entities exchange messages. The following figure shows a basic SIP based communication system:

Figure 1. SIP Based Communication System

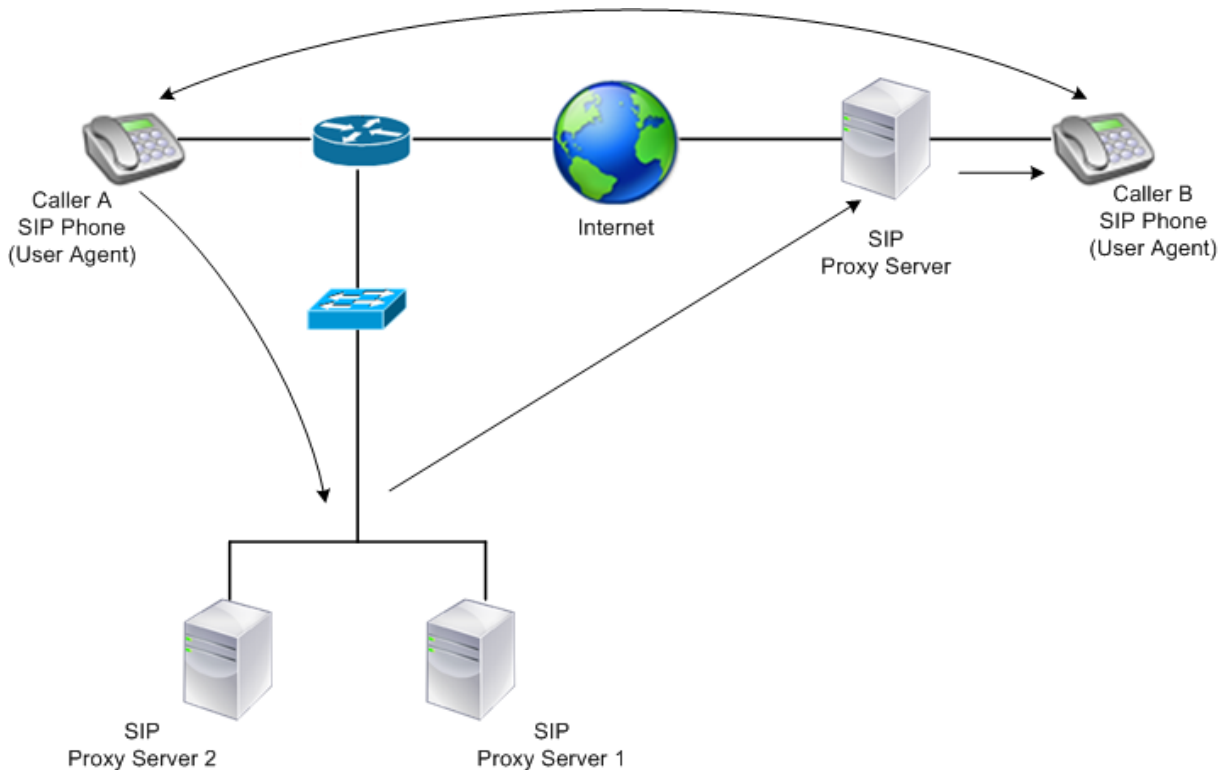

A NetScaler enables you to load balance SIP messages over UDP or over TCP (including TLS). You can configure the NetScaler to load balance SIP requests to a group of SIP proxy servers. To do so, you create a load balancing virtual server with the load balancing method and the type of persistence set to one of the following combinations:

- Call-ID hash load balancing method with no persistence setting
- Call-ID based persistence with least connection or round robin load balancing method
- Rule based persistence with least connection or round robin load balancing method

Also, by default, the NetScaler appends RPORT via the header of the SIP request, so that the server sends the response back to the source IP address and port from which the request originated.

Note: For load balancing to work, you must configure the SIP proxies so that they do not add private IP addresses or private domains to the SIP header/payload. SIP proxies must add to the SIP header a domain name that resolves to the IP address of the SIP virtual server. Also, the SIP proxies must communicate with a common database to share registration information.

Server Initiated Traffic

For SIP-server initiated outbound traffic, configure RNAT on the NetScaler so that the private IP addresses used by the clients are translated into public IP addresses.

If you have configured SIP parameters that include the RNAT source or destination port, the appliance compares the values of the source and destination ports of the request packets with the RNAT source port and RNAT destination port. If one of the values matches, the appliance updates the VIA header with RPORT. The SIP response from the client then traverses the same path as the request.

For server-initiated SSL traffic, the NetScaler uses a built-in certificate-key pair. If you want to use a custom certificate-key pair, bind the custom certificate-key pair to the NetScaler internal service named **nsrnatsip-127.0.0.1-5061**.

Support for Policies and Expressions

The NetScaler default expressions language contains several expressions that operate on Session Initiation Protocol (SIP) connections. These expressions can be bound only to SIP based (sip_udp, sip_tcp or sip_ssl) virtual servers, and to global bind points. You can use these expressions in content switching, rate limiting, responder, and rewrite policies.


Configuring Load Balancing for SIP Signaling Traffic over TCP or UDP

The NetScaler can load balance SIP servers that send requests over UDP or TCP, including TCP traffic secured by TLS. The ADC provides the following service types to load balance the SIP servers:

- SIP_UDP –Used when SIP servers send SIP messages over UDP.
- SIP_TCP –Used when SIP servers send SIP messages over TCP.
- SIP_SSL –Used to secure SIP signaling traffic over TCP by using SSL or TLS. The NetScaler supports the following modes:
 - End-to-end TLS connection between the client, the ADC, and the SIP server.
 - TLS connection between the client and the ADC, and TCP connection between the ADC and the SIP server.
 - TCP connection between the client and the ADC, and TLS connection between the ADC and the SIP server.

The following figure shows the topology of a setup configured to load balance a group of SIP servers sending SIP messages over TCP or UDP.

Figure 2. SIP Load Balancing Topology

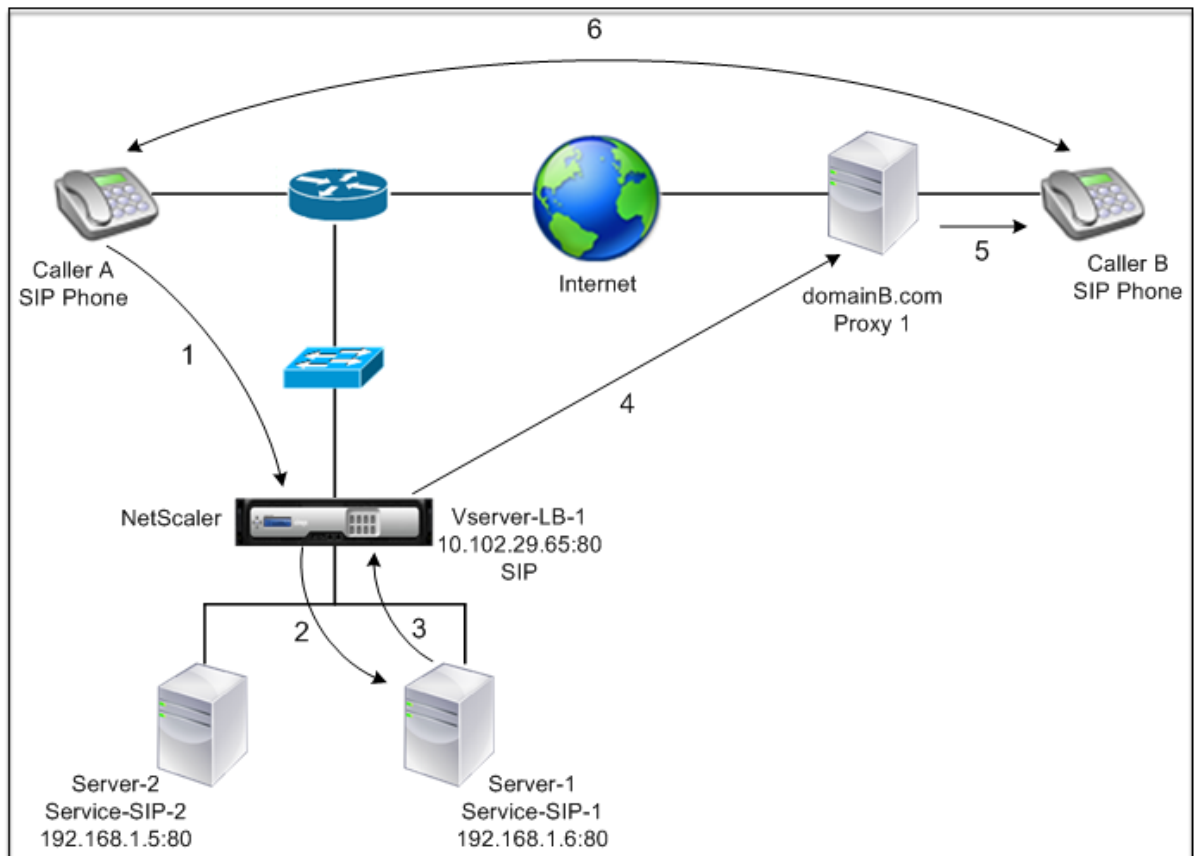

Entity type	Name	IP address	Port	Service type / Protocol
Virtual Server	Vserver-LB-1	10.102.29.65	80	SIP_UDP / SIP_TCP / SIP_SSL
Services	Service-SIP-1	192.168.1.6	80	SIP_UDP / SIP_TCP / SIP_SSL
	Service-SIP-2	192.168.1.5	80	SIP_UDP / SIP_TCP / SIP_SSL
Monitors	Default	None	80	SIP_UDP / SIP_TCP / SIP_SSL

Following is an overview of configuring basic load balancing for SIP traffic:

1. Configure services, and configure a virtual server for each type of SIP traffic that you want to load balance:

- **SIP_UDP** –If you are load balancing the SIP traffic over UDP.
- **SIP_TCP** –If you are load balancing the SIP traffic over TCP.
- **SIP_SSL** –If you are load balancing and securing the SIP traffic over TCP.

Note: If you use SIP_SSL, be sure to create an SSL certificate-key pair. For more information, see Adding a Certificate Key Pair.

2. Bind the services to the virtual servers.
3. If you want to monitor the states of the services with a monitor other than the default (**tcp-default**), create a custom monitor and bind it to the services. The NetScaler provides two custom monitor types, **SIP_UDP** and **SIP_TCP**, for monitoring SIP services.
4. If using a SIP_SSL virtual server, bind an SSL certificate-key pair to the virtual server.
5. If you are using the NetScaler as the gateway for the SIP servers in your deployment, configure RNAT.
6. If you want to append RPORT to the SIP messages that are initiated from the SIP server, configure the SIP parameters.

To configure a basic load balancing setup for SIP traffic by using the command line interface

Create one or more services. At the command prompt, type:

```
1 add service <name> <serverName> (SIP_UDP | SIP_TCP | SIP_SSL) <port>
```

Example:

```
1 add service Service-SIP-UDP-1 192.0.2.5 SIP_UDP 80
```

Create as many virtual servers as necessary to handle the services that you created. The virtual server type must match the type of services that you bind to it. At the command prompt, type:

```
1 add lb vserver <name> <serverName> (SIP_UDP | SIP_TCP | SIP_SSL) <port>
```

Example:

```
1 add lb vserver Vserver-LB-1 SIP_UDP 10.102.29.60 80
```

Bind each service to a virtual server. At the command prompt, type:

```
1 bind lb vserver <name> <serverName>
```

Example:

```
1 bind lb vserver Vserver-LB-1 Service-SIP-UDP-1
```

(Optional) Create a custom monitor of type SIP-UDP or SIP-TCP, and bind the monitor to the service. At the command prompt, type:

```
1 add lb monitor <monitorName> <monitorType> [<interval>]
2
3 bind lb monitor <monitorName> <ServiceName>
```

Example:

```
1 add lb monitor mon1 sip-UDP -sipMethod REGISTER -sipURI sip:mon@test.
  com -sipregURI sip:mon@test.com -respcode 200
2
3 bind monitor mon1 Service-SIP-UDP-1
```

If you created a SIP_SSL virtual server, bind an SSL certificate key pair to the virtual server. At the command prompt, type: At the command prompt, type:

```
1 bind ssl vserver <vServerName> -certkeyName <certificate-KeyPairName> -
  CA - skipCAName
```

Example:

```
1 bind ssl vserver Vserver-LB-1 -certkeyName CertKey-SSL-1
```

Configure RNAT as required by your network topology. At the command prompt, type one of the following commands to create, respectively, an RNAT entry that uses a network address as the condition and SNIP as the NAT IP address, an RNAT entry that uses a network address as the condition and a unique IP address as the NAT IP address, an RNAT entry that uses an ACL as the condition and a SNIP as the NAT IP address, or an RNAT entry that uses an ACL as a condition and a unique IP address as the NAT IP address:

```
1 add rnat <name> (<network> | (<aclname> [-redirectPort <port>]))
2
3 bind rnat <name> <natIP>@ ...
4
5 show rnat
```

Example:

```
1 add rnat RNAT-1 192.168.1.0 255.255.255.0
2
3 bind rnat RNAT-1 -natip 10.102.29.50
```

If you want to use a custom certificate-key pair, bind the custom certificate-key pair to the NetScaler internal service named nsrnatsip-127.0.0.1-5061.

```
1 add ssl certKey <certkeyName> -cert <string> [-key <string>]
2
3 bind ssl service <serviceName> -certkeyName <string>
```

Example:

```
1 add ssl certKey c1 -cert cert.epm -key key.ky
2
3 bind ssl service nsrnatsip-127.0.0.1-5061 -certkeyName c1
```

If you want to append RPORT to the SIP messages that the SIP server initiates, type the following command at the command prompt:

```
1 set lb sipParameters -rnatSrcPort <rnatSrcPort> -rnatDstPort<
  rnatDstPort> -retryDur <integer> -addRportVip <addRportVip> -
  sip503RateThreshold <sip503_rate_threshold_value>
```

Sample Configuration for load balancing the SIP traffic over UDP

```
1 add service service-UDP-1 10.102.29.5 SIP_UDP 80
2
3 Done
4
5 add lb vserver vserver-LB-1 SIP_UDP 10.102.29.60 80
6
7 Done
8
9 bind lb vserver vserver-LB-1 service-UDP-1
10
11 Done
12
13 add lb mon mon1 sip-udp -sipMethod REGISTER -sipURI sip:mon@test.com -
  sipregURI sip:mon@test.com -respcode 200
14
15 Done
16
17 bind mon mon1 service-UDP-1
18
19 Done
20
21 add rnat RNAT-1 192.168.1.0 255.255.255.0
22
23 Done
24
25 set lb sipParameters -rnatSrcPort 5060 -rnatDstPort 5060 -retryDur 1000
  -addRportVip ENABLED -sip503RateThreshold 1000
26
27 Done
```

Sample Configuration for load balancing the SIP traffic over TCP

```
1 add service service-TCP-1 10.102.29.5 SIP_TCP 80
2
```

```
3 Done
4
5 add lb vserver vserver-LB-1 SIP_TCP 10.102.29.60 80
6
7 Done
8
9 bind lb vserver vserver-LB-1 service-TCP-1
10
11 Done
12
13 add lb mon mon1 sip-tcp -sipMethod REGISTER -sipURI sip:mon@test.com -
    sipregURI sip:mon@test.com -respcode 200
14
15 Done
16
17 bind mon mon1 service-TCP-1
18
19 Done
20
21 add rnat RNAT-1 192.168.1.0 255.255.255.0
22
23 Done
24
25 set lb sipParameters -rnatSrcPort 5060 -rnatDstPort 5060 -retryDur 1000
    -addRportVip ENABLED -sip503RateThreshold 1000
26
27 Done
```

Sample Configuration for load balancing and securing SIP traffic over TCP

```
1 add service service-SIP-SSL-1 10.102.29.5 SIP_SSL 80
2
3 Done
4
5 add lb vserver vserver-LB-1 SIP_SSL 10.102.29.60 80
6
7 Done
8
9 bind lb vserver vserver-LB-1 service-SIP-SSL
10
11 Done
12
13 add lb mon mon1 sip-tCP -sipMethod REGISTER -sipURI sip:mon@test.com -
    sipregURI sip:mon@test.com -respcode 200
14
15 Done
16
17 bind mon mon1 service-SIP-SSL
18
19 Done
20
```

```
21 bind ssl vserver Vserver-LB-1 -certkeyName CertKey-SSL-1
22
23 Done
24
25 add rnat RNAT-1 192.168.1.0 255.255.255.0
26
27 Done
28
29 set lb sipParameters -rnatSrcPort 5060 -rnatDstPort 5060 -retryDur 1000
    -addRportVip ENABLED -sip503RateThreshold 1000
30
31 Done
```

To configure a basic load balancing setup for SIP traffic by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and add a virtual server of type SIP_UDP, SIP_TCP, or SIP_SSL.
2. Click the **Service** section, and add a service of type SIP_UDP, SIP_TCP, or SIP_SSL.
3. (Optional) Click the **Monitor** section, and add a monitor of the type: SIP-UDP or SIP-TCP.
4. Bind the monitor to the service, and bind the service to the virtual server.
5. If you created a SIP_SSL virtual server, bind an SSL certificate key pair to the virtual server. Click the Certificates section, and bind a certificate key pair to the virtual server.
6. Configure RNAT as required by your network topology. To configure RNAT:
 - a) Navigate to **System > Network > Routes**.
 - b) On the Routes page, click the **RNAT** tab.
 - c) In the details pane, click **Configure RNAT**.
 - d) In the Configure RNAT dialog box, do one of the following:
 - If you want to use the network address as a condition for creating an RNAT entry, click **Network** and set the following parameters:
 - Network
 - Netmask
 - If you want to use an extended ACL as a condition for creating an RNAT entry, click **ACL** and set the following parameters:
 - ACL Name
 - Redirect Port
 - e) To set a SNIP address as a NAT IP address, skip to step 7.
 - f) To set a unique IP address as a NAT IP, in the Available NAT IP (s) list, select the IP address that you want to set as the NAT IP, and then click Add. The NAT IP you selected appears in the Configured NAT IPs' list.

g) Click Create, and then click Close.

If you want to use a custom certificate-key pair, bind the custom certificate-key pair to the NetScaler internal service named **nsrnatsip-127.0.0.1-5061**. To bind the pair:

- a) Navigate to **Traffic Management > Load Balancing > Services** and click the Internal Services tab.
 - b) Select nsrnatsip-127.0.0.1-5061 and click **Edit**.
 - c) Click the **Certificates** section and bind a certificate key pair to the internal service.
7. If you want to append RPORT to the SIP messages that the SIP server initiates, configure the SIP parameters. Navigate to **Traffic Management > Load Balancing** and click Change SIP settings, set the various SIP parameters.

SIP Expression and Policy Example: Compression Enabled in Client Requests

A NetScaler cannot process compressed client SIP requests, so the client SIP request fails.

You can configure a responder policy that intercepts the SIP NEGOTIATE message from the client and looks for the compression header. If the message includes a compression header, the policy responds with “400 Bad Request,” so that the client resends the request without compressing it.

At the command prompt, type the following commands to create the responder policy:


```
1 add responder action sipaction1 respondwith q{
2   "SIP/2.0 400 Bad Request\r\n" }
3
4
5 Done
6
7 add responder policy sippol1
8
9 add responder policy sippol1 "SIP.REQ.METHOD.EQ("NEGOTIATE")&&SIP.REQ.
   HEADER("Compression").EXISTS" sipaction1
```

Load balance RTSP servers

May 2, 2023

The NetScaler appliance can balance the load on RTSP servers to improve the performance of audio and video streams over networks. The following diagram describes the topology of a load balancing setup configured to load balance a group of RTSP servers.

Figure 1. Load Balancing Topology for RTSP

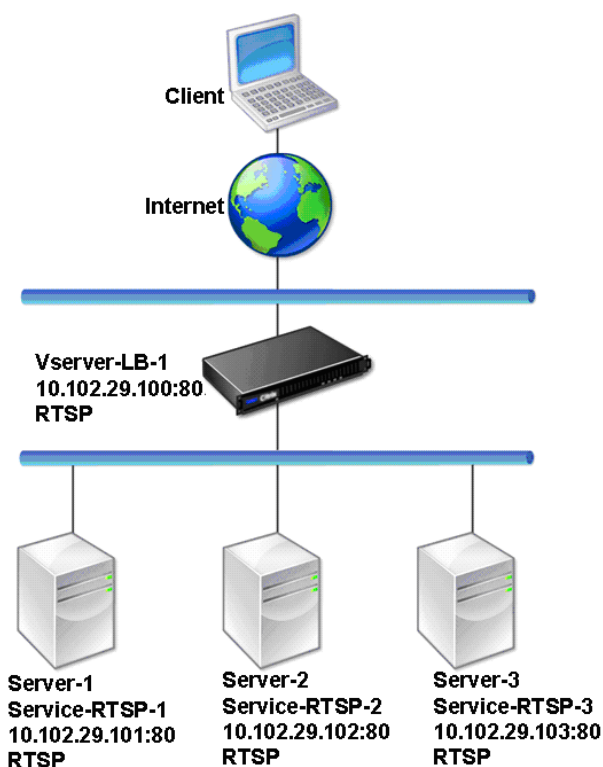


In the example, the services Service-RTSP-1, Service-RTSP-2, and Service-RTSP-3 are bound to the virtual server Vserver-LB-1. The following table lists the names and values of the example entities.

Entity type	Name	IP address	Port	Protocol
Virtual Server	Vserver-LB-1	10.102.29.100	554	RTSP
Services	Service-RTSP-1	10.102.29.101	554	RTSP
	Service-RTSP-2	10.102.29.102	554	RTSP
	Service-RTSP-3	10.102.29.103	554	RTSP
Monitors	Monitor-RTSP-1	None	554	RTSP

The following diagram shows the load balancing entities used in the RTSP configuration.

Figure 2. Load Balancing RTSP Servers Entity Model

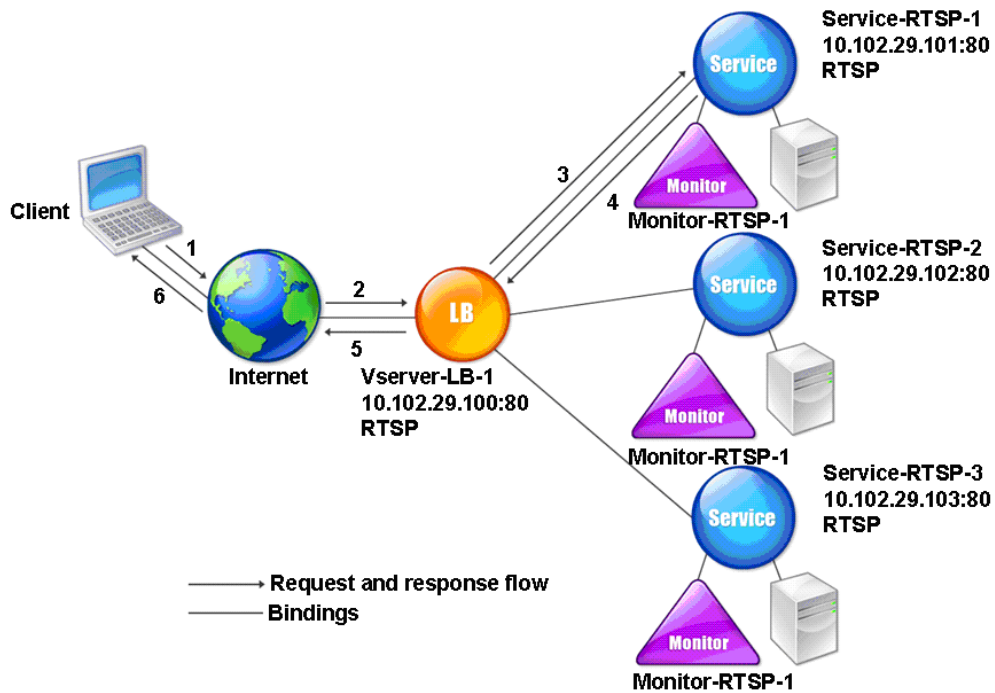

To configure a basic load balancing setup for RTSP servers, see [Setting Up Basic Load Balancing](#). Create services and virtual servers of type RTSP. When you configure a basic load balancing setup, the default TCP-default monitor is bound to the services. To bind an RTSP monitor to these services, see [Binding Monitors to Services](#). The following procedure describes how create a monitor that checks RTSP servers.

To configure RTSP monitors by using the CLI

At the command prompt, type:

```
1 add lb monitor <monitorName> <type>
```

Example:

```
1 add lb monitor Monitor-RTSP-1 RTSP
```

To configure RTSP monitors by using the GUI

Navigate to Traffic Management > Load Balancing > Monitors, and create a monitor of type RTSP.

Priority order for load balancing services

October 8, 2024

The priority order for services feature enables you to prioritize the order for services or service groups based on the load balancing selection preferences. You can configure the priority order when you do the following:

- Bind a service to a load balancing virtual server.
- Bind a service group to a load balancing virtual server.
- Bind a service group member to the load balancing service group.

Currently, you can configure the priority order for services using the following approaches. However, these approaches have the following limitations:

- Configuring a backup virtual server chain: The number of configuration lines is high, and you must run the `show` command several times to know the state of all the LB services for each virtual server.
- Configuring the preferred location: You must create location entries for all your application endpoints.

The priority order for services feature addresses the preceding limitations with fewer configuration commands, and helps you to accomplish the preferred location configuration without the need of location representation of all load balancing services' IP addresses.

Configure priority order for load balancing services

To configure the priority order for load balancing services, the `-order <number>` parameter is added to the bind commands.

Note:

The lowest order number has the highest priority.

Command:

```
bind lb vserver <servername> <servicename/servicegroupname> -order <number>
```

For example, consider a set of services that are bound to a load balancing virtual server (vs1). Using the

- `order <number>` parameter, you can prioritize the order of selection of services as follows:

- Set 1 (s1, s2) bound to vs1 –order 1
- Set 2 (s3, s4) bound to vs1 –order 2
- Set 3 (s5, s6) bound to vs1 –order 3

After you bind the services to vs1, and when vs1 receives the client traffic, the order of selection of services is as follows:

- The virtual server (vs1) first selects the services in set 1 (s1 and s2) with order number 1, because this set is assigned the lowest order number. By default, the lowest order number has the highest priority.
- If all the services in set 1 are DOWN, vs1 selects set 2 (s3 and s4) with order number 2.
- If all the services in set 1 and set 2 are down, vs1 selects set 3 (s5 and s6) with order number 3.

Configure priority order for load balancing services using the CLI

To configure the priority order for the load balancing services, type the following commands at the command prompt:

1. Add an LB virtual server.

```
add lb vserver vs1 HTTP 1.1.1.1 80
```

2. Add LB services.

```
add service s[1-6] 2.2.2.[1-6] HTTP 80
```

3. Set the order number and bind the services to the LB virtual server.

```
bind lb vserver vs1 s1 -order 1
```

```
bind lb vserver vs1 s2 -order 1
```

```
bind lb vserver vs1 s3 -order 2
```

```
bind lb vserver vs1 s4 -order 2
```

```
bind lb vserver vs1 s5 -order 3
```

```
bind lb vserver vs1 s6 -order 3
```

Configure priority order for load balancing services using the GUI

Prerequisites:

- You have created a load balancing virtual server.
- You have created services.

To configure the priority order for load balancing services and bind them to the virtual server, do the following:

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and double-click the load balancing virtual server.
2. In **Load Balancing Virtual Server**, under the **Services and Service Groups** section, click **Load Balancing Virtual Server Service Binding**.
3. In the **Load Balancing Virtual Server Service Binding** dialog box, click **Add Binding**.
4. In the **Service Binding** dialog box, select a service.
5. Type a number in the **Order** field to set the priority order for the service.
6. Click **Bind**.
7. Repeat steps 1–6 to configure different priority order number for different services.

Configure priority order for load balancing services using LB policy commands

By default, the lowest order number has the highest priority. However, you can defer this default behavior using the new LB action and policy commands. You can configure the service selection order based on the incoming client traffic or client data.

For example, consider a set of services that are bound to a virtual server (vs1). Using the `- order <number>` parameter, you have configured the priority order for services as follows:

- Set 1 (s1, s2) bound to vs1 –order 1
- Set 2 (s3, s4) bound to vs1 –order 2
- Set 3 (s5, s6) bound to vs1 –order 3

By default, the lowest order number has the highest priority. Therefore, the default priority order of preference is 1, 2, and 3 for services in set 1, set2, and set3, respectively. However, for a specific client traffic, you want to change the priority order to 3, 1, and 2. To achieve this, you can add an LB policy and bind it to vs1.

An LB policy command consists of two elements: a rule, and an action. The rule is associated with an action, which is performed if a request matches the rule.

Note:

The LB policy commands are common for both LB and GSLB configuration and are applicable for the requests handled by the NetScaler appliance.

LB action**Expression:**

```
add lb action <name> <type> <string>
```

Example:

```
add lb action act1 -type SELECTIONORDER -value 3 2 1
```

Parameters:

- **name:** Name of the action.
- **type:** Type of action.
- **string:** Value for the specified action.

LB policy**Expression:**

```
add lb policy <name> <rule> <action> <undefaction>
```

Example:

```
add lb policy pol1 -rule CLIENT.IP.SRC.EQ(8.8.8.8)-action act1
```

Parameters:

- **name:** Name of the policy.
- **rule:** A rule consists of one or more expressions. The rule is associated with an action, which is performed if the request matches the rule.
- **action:** DROP, NOLBACTION, and RESET are supported.
- **undefaction:** The NetScaler appliance generates an undefined event (UNDEF event) when a request does not match a policy. You can use the `set lb param -undefAction <action>` command to set the undefined action. You can assign these actions to an undefined event: DROP, NOLBACTION, and RESET.

Let's consider an example where you add an LB action, LB policy, and bind the policy to a load balancing virtual server (vs1) as follows:

```
add lb action act1 -type SELECTIONORDER -value 3 1 2
add lb policy pol1 -rule CLIENT.IP.SRC.EQ(8.8.8.8)-action act1
bind lb vserver vs1 -policyName pol1 -priority 10
```

The rule selects the client traffic that matches the IP address, 8.8.8.8, and sends that traffic to vs1. The LB action type ([SELECTIONORDER](#)) defines the service selection order. After you bind the LB policy to vs1, and when vs1 receives the client traffic from the IP address 8.8.8.8, the services are selected in the following order:

1. The virtual server (vs1) selects services in set 3 (s5 and s6) with priority order 3.
2. If all the services in set 3 are DOWN, vs1 selects set 1 (s1 and s2) with priority order 2.
3. If all the services in set 3 and set 2 are down, the vs1 selects set 1 (s1 and s2) with order 1.

Configure priority order for load balancing services with LB policy commands using the CLI

To configure priority order for load balancing services using LB policy commands, type the following commands at the command prompt:

1. Add an LB action.

```
add lb action act1 -type SELECTIONORDER -value 3 1 2
```

2. Add an LB policy.

```
add lb policy pol1 -rule CLIENT.IP.SRC.EQ(8.8.8.8)-action act1
```

3. Add an LB virtual server.

```
add lb vserver vs1 HTTP 1.1.1.1 80
```

4. Bind the LB policy to the LB virtual server.

```
bind lb vs vs1 -policyName pol1 -priority 10
```

5. Add LB services.

```
add service s[1-6] 2.2.2.[1-6] HTTP 80
```

6. Set the order and bind the services to the LB virtual server.

```
bind lb vserver vs1 s1 -order 1
```

```
bind lb vserver vs1 s2 -order 1
```

```
bind lb vserver vs1 s3 -order 2
```

```
bind lb vserver vs1 s4 -order 2
```

```
bind lb vserver vs1 s5 -order 3
```

```
bind lb vserver vs1 s6 -order 3
```

Configure priority order for load balancing services with the LB policy commands using the GUI

Prerequisites:

- You have created a load balancing virtual server.
- You have created services.

Step 1 - Create an LB Action:

1. Navigate to **AppExpert > LB > Actions**.
2. In **LB Actions**, click **Add**.
3. In the **Create LB Actions** dialog box, specify values for the following parameters:

- **Action Name**
- **Type**
- **Value**

Note:

The numbers in the **Value** field are separated by a space.

4. Click **Create**.

Step 2 - Create an LB Policy:

1. Navigate to **AppExpert > LB > Policies**.
2. In **LB Policies**, click **Add**.
3. In the **Create LB Policies** dialog box, specify values for the following parameters:

- **Name:** pol1
- **Action:** act1
- **Undefined-Result Action:** NOLBACTION
- **Expression:** CLIENT.IP.SRC.EQ(8.8.8.8)

The screenshot shows the 'Create LB Policies' dialog box. It contains the following fields and controls:

- Name:** A text input field containing 'pol1'.
- Action:** A dropdown menu with 'RESET' selected, and 'Add' and 'Edit' buttons.
- Log Action:** A dropdown menu with an empty selection, and 'Add' and 'Edit' buttons.
- Undefined-Result Action:** A dropdown menu with 'NOLBACTION' selected.
- Expression:** A text input field containing 'CLIENT.IP.SRC.EQ(8.8.8.8)'. To the right of the field is an 'Expression Editor' icon.
- Comments:** A text input field with the placeholder text 'Enter the description'.
- Buttons:** 'Create' and 'Close' buttons at the bottom left.

4. Click **Create**.

Step 3 - Bind the LB policy to the LB virtual server:

1. Navigate to **Traffic Management > LB > Virtual Servers** and double-click the virtual server.
2. In **Advanced Settings**, click **Policies**.
3. In the **Policies** section, click the plus (+) icon.
4. In the **Choose Type** dialog box, specify values for the following parameters:
 - **Choose Policy:** LB
 - **Choose Type:** Request
5. Click **Add Binding**.
6. In the **Policy Binding** dialog box, specify values for the following parameters:
 - **Select Policy**
 - **Priority**
 - **Goto Expression**
 - **Invoke LabelType**
7. Click **Bind**.

Step 4 - Configure priority order for load balancing services:

To configure priority order for load balancing services, see the **Configure priority order for load balancing services using the GUI** procedure.

Persistence settings for services

If persistence is configured for a service, then preference is always given to persistence, by default.

For example, consider a service with persistence configured and priority order 1. Even if a service with priority order 0 is UP, the preference is always given to the service with priority order 1 because of the persistence configuration.

However, you can override this default behavior with the following CLI command:

```
set lb param -overridePersistencyforOrder <YES/NO>
```

Let's consider the following example:

A set of services is bound to a virtual server (vs1) with the following priority order:

- Set 1 (s1, s2) bound to vs1 – order 1
- Set 2 (s3, s4) bound to vs1 – order 2

Type the following command at the command prompt to override persistency:

```
set lb parameter -overridePersistencyforOrder YES
```

If set 1 (services with persistence is configured) is DOWN, then set 2 services handle all the requests until set 1 services are UP. A persistence entry for priority 2 is created.

Let's assume that after some time, the set 1 services are UP. Now, both set 1 and set 2 services are UP to handle the requests. In this scenario, new load balancing decisions are made as higher order services are UP. The persistence entry is overridden with a new load balancing entry.

Priority toggle

With the priority toggle feature, you can toggle all the traffic to a low-priority service during version upgrade for a service with a higher priority order. You can use the following commands to toggle priority:

- `set lb vserver -toggleorder<Ascending/Descending>`
- `set lb vserver v1 -orderthreshold 80`

For example, let's consider that there are two services with the following priorities:

- Service 1- order 0
- Service 2 – order 1

By default, service 1 handles all the traffic. If service 1 needs to be upgraded, then the traffic needs to be rerouted to service 2.

At the command prompt, type the following commands to toggle priority:

```
set lb vserver -toggleorder Descending
```

By default, 0 has higher priority. However, after priority toggling, 1 is considered as a higher priority. If persistence entry is present for the service, the persistence preference behavior is as explained in the **Persistence settings for services** section.

Use case 1: SMPP load balancing

May 2, 2023

Millions of short messages are exchanged daily between individuals and value-added service providers, such as banks, advertisers, and directory services, by using the short message peer to peer (SMPP) protocol. Often, message delivery is delayed because servers are overloaded and traffic is not optimally distributed among the servers. The NetScaler supports SMPP load balancing and provides optimal distribution of messages across your servers, preventing poor performance and outages.

The NetScaler performs load balancing on the server side when messages are received from clients and on the client side when messages are received from servers.


Load balancing of SMPP messages by the NetScaler provides the following benefits:

- Better load distribution on servers, which translates to faster response time to end users
- Server health monitoring and better failover capabilities
- Quick and easy addition of new servers (message centers) without changing the client configuration
- High availability

Introduction to SMPP

SMPP is an application layer protocol for the transfer of short messages between External Short Message Entities (ESME), Routing Entities (RE) and Message Centers (MC) over long-lived TCP connections. It is used for sending short message service (SMS) messages between friends, contacts, and third parties such as banks (mobile banking), advertisers (mobile commerce), and directory services. Messages from an ESME (non-mobile entity) arrive at the MC, which distributes them to short message entities (SMEs) such as mobile phones. SMPP is also used by SMEs to send short messages to third parties (for example, for purchase of products, bill payment, and funds transfer). These messages arrive at the MC and are forwarded to the destination MC or ESME.

The following diagram shows the different SMPP entities: ESMEs, REs, and MCs, in a mobile network.

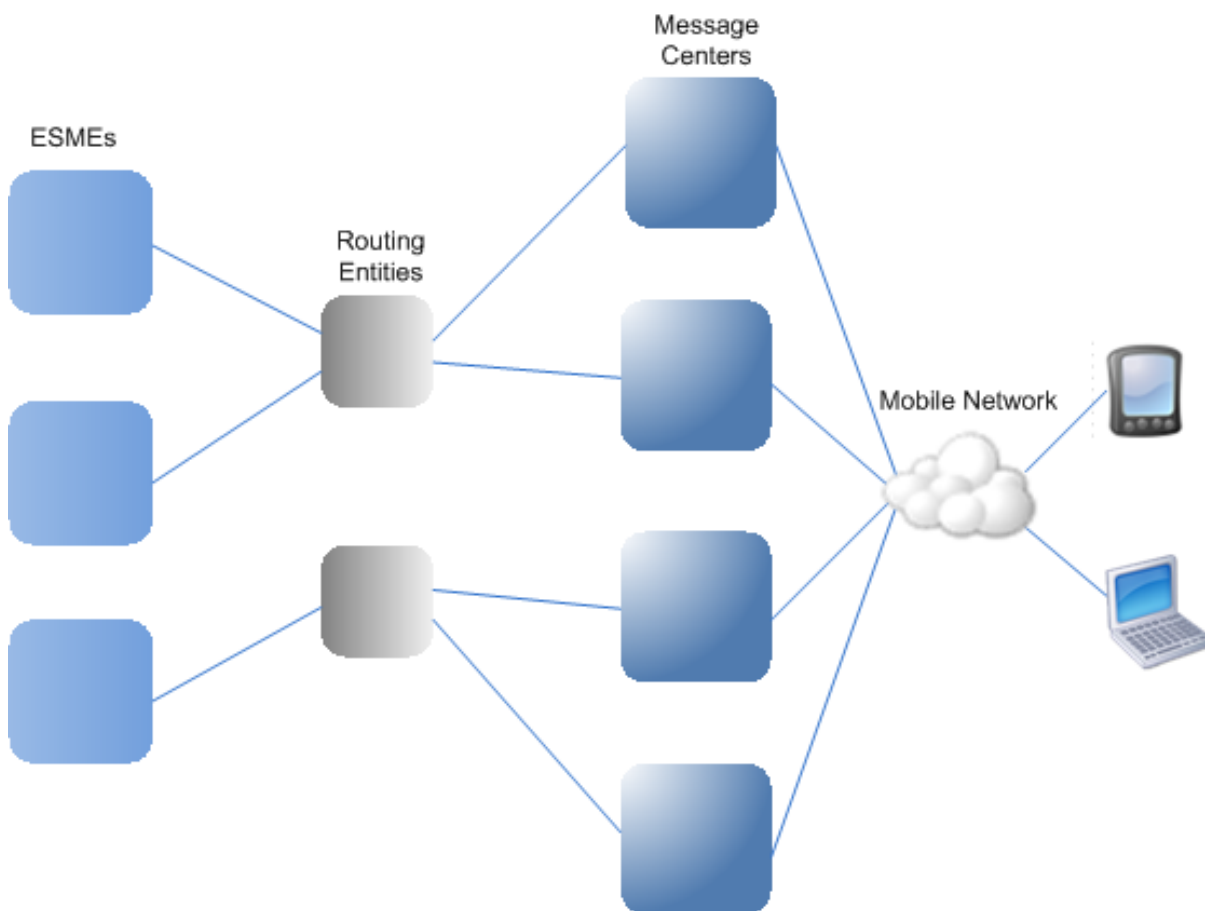

Architecture Overview of the Different SMPP Entities in a Mobile Network

Note: The terms client and ESME are used interchangeably throughout the document.

An ESME (client) opens a connection to the MC in one of the three modes: as a transmitter, a receiver, or a transceiver. As a transmitter, it can only submit messages for delivery. As a receiver, it can only receive messages. As a transceiver, the ESME can both submit and receives messages. The ESME sends the MC one of the three messages (also known as PDUs): `bind_transmitter`, `bind_receiver`, or `bind_transceiver`. The MC responds with a `bind_transmitter_resp`, `bind_receiver_resp`, or `bind_transceiver_resp`, as appropriate for the request.


After the connection is established, the ESME can, depending on the mode in which it is bound to the MC, send a `submit_sm` or `data_sm` message, receive a `deliver_sm` or `data_sm` message, or send and receive any of these types of messages. The ESME can also send ancillary messages, such as `query_sm`, `replace_sm`, and `cancel_sm`, to query the status of an earlier message delivery, replace an earlier message with a new message, or cancel an undelivered message.

If a message is not delivered because an ESME is not available or a mobile subscriber is not online, the message is queued. Later, when the MC detects that the mobile subscriber is now reachable, it sends

an alert_notification PDU to the ESME over a receiver or transceiver session, requesting delivery of any queued messages.

Each request PDU has a unique sequence number. The response PDU has the same sequence number as the original request. Because message exchange over SMPP can be in asynchronous mode, an ESME or an MC can send multiple requests at a time. The sequence number plays a crucial role in returning the response in the same SMPP session. In other words, the sequence number makes request and response matching possible.

The following diagram shows how the traffic flow uses the various PDUs when the ESME binds as a transceiver.

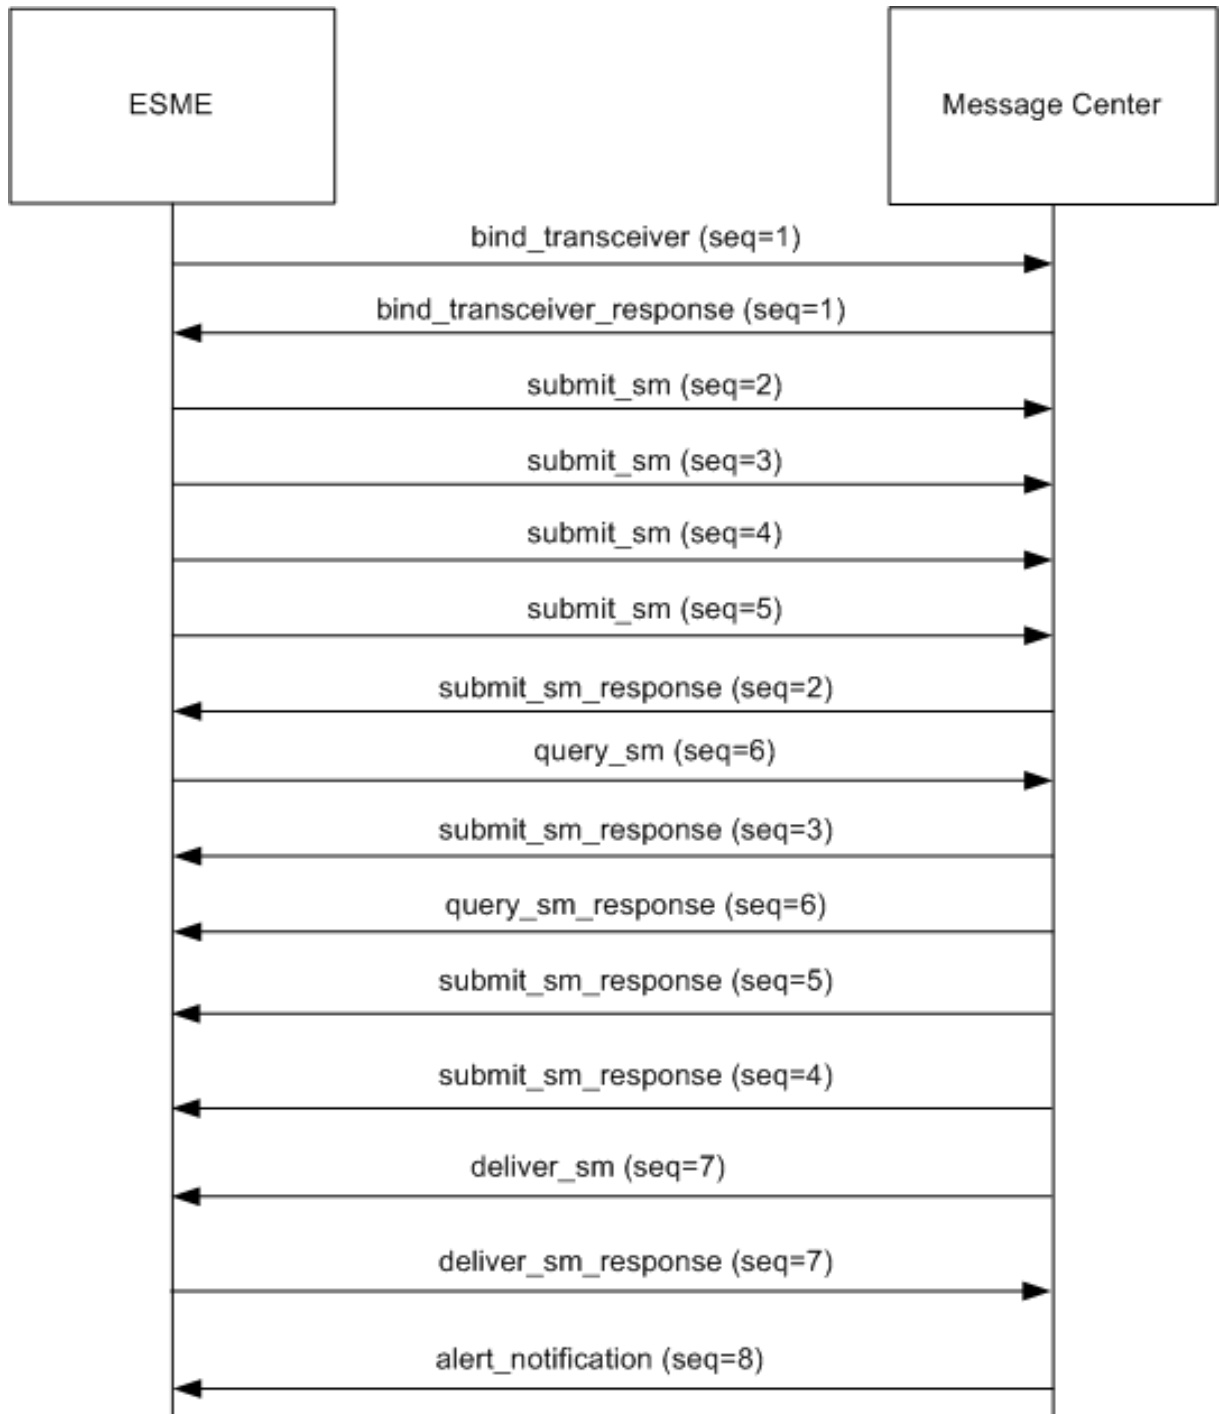

Limitation:

The NetScaler appliance does not support out bound operations. That is, a message center cannot initiate an SMPP session with an ESME through the NetScaler appliance.

How SMPP Load Balancing Works on the NetScaler

An ESME (client) sends a bind message to open a connection to the NetScaler. The ADC authenticates each ESME and, if successful, responds with an appropriate message. The NetScaler establishes a connection with each message center and load balances all the messages among these message centers. When the ADC receives a message from a client, it reuses an open connection to the message center or sends a bind request to a message center if an open connection is not available.

The ADC can load balance messages originating from the clients and from the servers. It can monitor the health of the message centers and handle concatenated messages. It also provides content switching support for the message centers.

Messages Originating from the ESMEs

Each ESME must be added as a user on the NetScaler for authentication. The client establishes a TCP connection with an SMPP virtual server configured on the ADC by sending a bind request. The ADC authenticates the client and, if successful, parses the bind message. The ADC then sends the request to the message center selected by the configured load balancing method. If a connection to the message center is not available for reuse, the ADC opens a TCP connection with the message center by sending a new bind request to the message center.

Before forwarding the response (`submit_sm_resp` or `data_sm_resp`) from the message center to the client, the ADC adds a custom server ID to the message ID to identify the message center for ancillary operations, such as query, replace, or cancel requests for a message, by the client. Requests from other clients are load balanced in the same way.


In the original bind request, a client specifies the address range that it can serve. This range is used for forwarding `deliver_sm` or `data_sm` messages from the message centers to the clients.

Messages Originating from a Message Center

ESMEs that can handle a specific address range are grouped into a cluster. All the nodes in a cluster provide the same credentials. Within a cluster, only the round robin method is used for load balancing. To deliver mobile originated (MO) messages, the message center sends a `deliver_sm` message to the NetScaler. If a cluster that can serve the destination address range (for example, numbers starting with 998) is bound to the ADC, it selects that cluster, and then load balances the message among the ESME nodes in that cluster.

If an ESME that can serve `deliver_sm` messages for the address range is not bound to the ADC, and message queuing is enabled, the message is queued until such a client binds to the ADC in a receiver or transceiver mode. You can specify the size of the queue.

The following diagram illustrates the internal flow of PDUs between ESMEs, NetScaler, and the message centers. For simplicity, only two ESMEs and two message centers are shown.

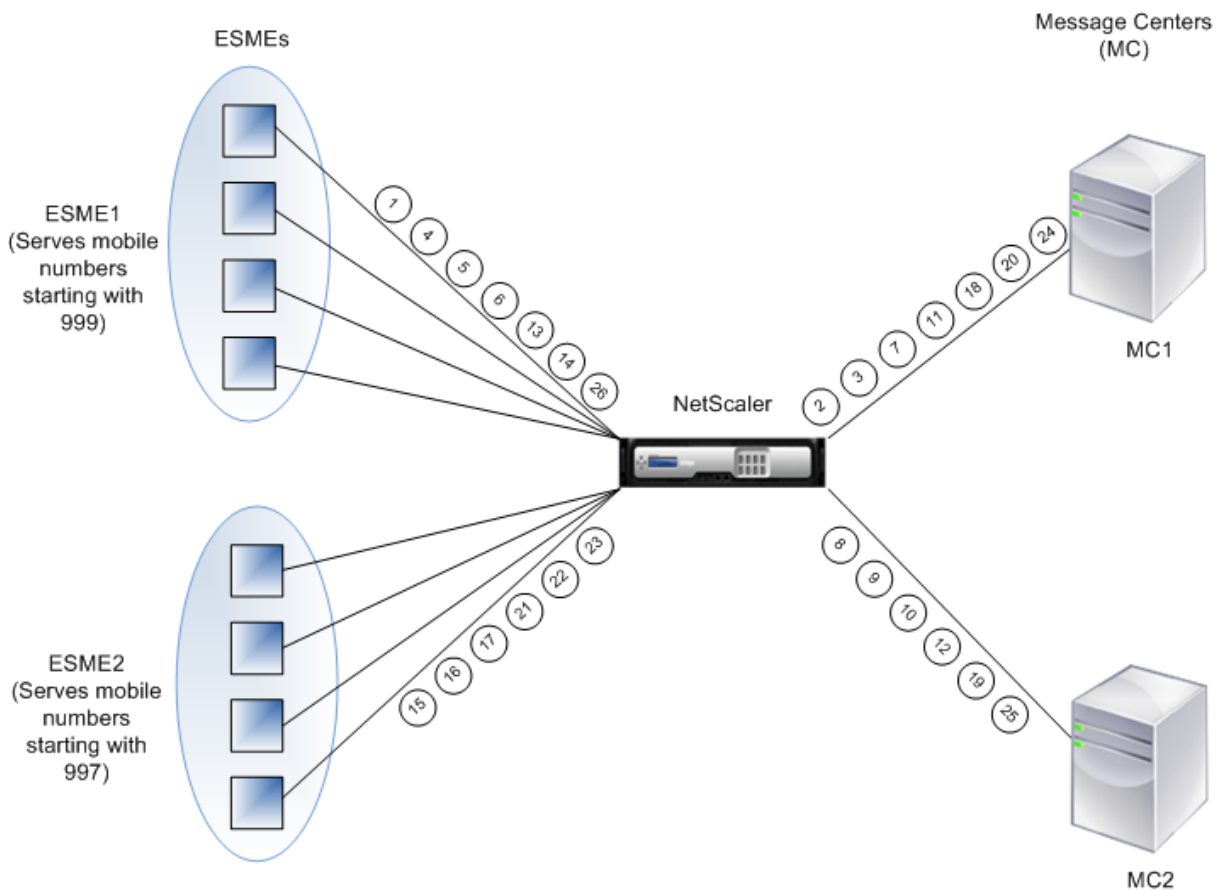

Flow of messages (PDUs):

1. ESME1 sends bind request to NetScaler
2. NetScaler sends bind request to MC1
3. MC1 sends bind response to NetScaler
4. NetScaler sends bind response to ESME1
5. ESME1 sends submit_sm(1) to NetScaler
6. ESME1 sends submit_sm(2) to NetScaler
7. NetScaler forwards submit_sm(1) to MC1
8. NetScaler sends bind request to MC2
9. MC2 sends bind response to NetScaler
10. NetScaler forwards submit_sm(2) to MC2
11. MC1 sends submit_sm_resp(1) to NetScaler
12. MC2 sends submit_sm_resp(2) to NetScaler
13. NetScaler forwards submit_sm_resp(1) to ESME1
14. NetScaler forwards submit_sm_resp(2) to ESME1
15. ESME2 sends bind request to NetScaler

16. NetScaler sends bind response to ESME2
17. ESME2 sends submit_sm(3) to NetScaler
18. NetScaler forwards submit_sm(3) to MC1
19. MC2 sends deliver_sm to NetScaler (ESME2 serves the address range specified in the message)
20. MC1 sends submit_sm_resp(3) to NetScaler
21. NetScaler forwards submit_sm_resp(3) to ESME2
22. NetScaler forwards deliver_sm to ESME2
23. ESME2 sends deliver_sm_resp to NetScaler
24. MC1 sends alert_notification to NetScaler (ESME1 serves the address range specified in the message)
25. NetScaler forwards deliver_sm_resp to MC2
26. NetScaler forwards the alert_notification to ESME1

Health Monitoring of Message Centers

By default, a TCP_default monitor is bound to an SMPP service, but you can bind a custom monitor of type SMPP. The custom monitor opens a TCP connection to the message center and sends an enquire_link packet. Depending on the success or failure of the probe, the service is marked UP or DOWN.

Content Switching on Message Centers

Message centers can accept multiple connections (or bind requests) from ESMEs. You can configure the NetScaler to content switch these requests based on the SMPP bind parameters. Following are some common expressions for configuring methods to select a message center:

- Based on the address range: In the following sample expression, the ADC selects a specific message center if the address range starts at 988.

Example:

```
SMPP.BINDINFO.ADDRESS_RANGE.CONTAINS("^988")
```

- Based the ESME ID: In the following sample expression, the ADC selects a specific message center if the ESME ID equals ESME1.

Example:

```
SMPP.BINDINFO.SYSTEM_ID.EQ("ESME1")
```

- Based on the ESME type: In the following sample expression, the ADC selects a specific message center if the ESME type is VMS. VMS stands for voice mail system.

Example:

SMPP.BINDINFO.SYSTEM_TYPE.EQ("VMS")

- Based on the type of number (TON) of the ESME: In the following sample expression, the ADC selects a specific message center if TON equals 1 (1 stands for an international number.)

Example:

SMPP.BINDINFO.ADDR_TON.EQ(1)

- Based on the number plan indicator (NPI) of the ESME: In the following sample expression, the ADC selects a specific message center if NPI equals 0 (0 stands for an unknown connection.)

Example:

SMPP.BINDINFO.ADDR_NPI.EQ(0)

- Based on the bind type: In the following sample expression, the ADC selects a specific message center if the bind type is TRANSCEIVER. (A transceiver can send and receive messages.)

Example:

SMPP.BINDINFO.TYPE.EQ(TRANSCEIVER)

Concatenated Message Handling

An SMS can hold a maximum of 140 bytes. Longer messages must be broken down into smaller parts. If the destination mobile is capable, the messages are combined and delivered as one long SMS. The NetScaler forwards the fragments of a message to the same message center. Each message contains a reference number, a sequence number, and the total number of fragments. The reference number is the same for each fragment of a long message. The sequence number specifies that position of the particular fragment in the complete message. After all the fragments are received, the ESME combines the fragments into one long message and delivers the message to the mobile subscriber.

If a client disconnects from an active connection, the connection to the message center is not closed. It is reused for requests from other clients.

Limitation

Message IDs, from the message center, longer than 59 bytes are not supported. If the message ID length returned by the message center is more than 59 bytes, ancillary operations fail and the NetScaler responds with an error message.

Configuring SMPP Load Balancing on the NetScaler

Perform the following tasks to configure SMPP load balancing on the ADC:

1. Add an SMPP user. The ADC authenticates the user before it accepts a bind request from the user. The user is typically an ESME.
2. Add a load balancing virtual server, specifying the protocol as SMPP.
3. Add a service, specifying the protocol as SMPP, and a custom server ID that is unique for each server. Bind the service to the load balancing virtual server created earlier.
4. Optionally, create a service group and add services to the service group.
5. Optionally, add a monitor of type SMPP-ECV and bind it to the service. A TCP-default monitor is bound by default.
6. Set the SMPP parameters, such as client mode and message queue.

To configure SMPP load balancing by using the command line

At the command prompt, type:

```
1 add smpp user <username> -password <password>
2 add service <name> <IP> SMPP <port> - customserverID <customserverID>
3 add lb vserver <name> <IP> SMPP <port>
4 bind lb vserver <name> <service name>
5 set smpp param
```

Example

```
1 add smpp user smppclient1 -password c03ebb540695b6110eb31172f32245a1 -
  encrypted -encryptmethod ENCMTHD_2
2 add smpp user smppclient2 -password c03ebb540695b6110eb31172f32245a1 -
  encrypted -encryptmethod ENCMTHD_2
3 add service smmpsvc 10.102.84.140 SMPP 2775 -gslb NONE -maxClient 0 -
  maxReq 0 -cip DISABLED -usip NO -useproxyport YES -sp ON -cltTimeout
  180 -svrTimeout 360 -CustomServerID ab -CKA NO -TCPB NO -CMP NO
4 add service smmpsvc2 10.102.81.175 SMPP 2775 -gslb NONE -maxClient 0 -
  maxReq 0 -cip DISABLED -usip NO -useproxyport YES -sp ON -cltTimeout
  180 -svrTimeout 360 -CustomServerID xy -CKA NO -TCPB NO -CMP NO
5 add lb vserver smppvs SMPP 10.102.239.179 2775 -persistenceType NONE -
  cltTimeout 180
6 bind lb vserver smppvs smmpsvc2
7 bind lb vserver smppvs smmpsvc
8 set smpp param -addrange "d*"
```

To configure SMPP load balancing by using the configuration utility

1. Navigate to **System > User Administration > SMPP Users**, and add an SMPP user.

2. Navigate to **Traffic Management > Load Balancing > Configure SMPP Parameters**, and set the parameters as required by your deployment.
3. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and add a virtual server of type SMPP.
4. Click in the Service section, add a service of type SMPP, and specify a Server ID.

Use case 2: Configure rule based persistence based on a name-value pair in a TCP byte stream

May 2, 2023

Some protocols transmit name-value pairs in a TCP byte stream. The protocol in the TCP byte stream in this example is the Financial Information eXchange (FIX) protocol. In non-XML implementation, the FIX protocol enables two hosts communicating over a network to exchange business or trade-related information as a list of name-value pairs (called “FIX fields”). The field format is `<tag>=<value><delimiter>`. This traditional tag-value format makes the FIX protocol ideal for the use case.

The tag in a FIX field is a numeric identifier that indicates the meaning of the field. In the example;

- The tag 35 indicates the message type.
- The value after the equal sign holds a specific meaning for the given tag and is associated with a data type. A value of A for the tag 35 indicates that the message is a logon message.
- The delimiter is the nonprinting “Start of Header”(SOH) ASCII character (0x01), which is the caret symbol (^).
- Each field is also assigned a name. The field with tag 35 is the msgType field.

Following is an example of a logon message.

```
8=FIX.4.1 9=61 35=A 49=INVMGR 56=BRKR 34=1 52=20000426-12:05:06 98=0 108=30 10=157
```

Your choice of persistence type for a tag-value list such as the one shown above is determined by the options that are available to you for extracting a particular string from the list. Token-based persistence methods require you to specify the offset and length of the token that you want to extract from the payload. The FIX protocol does not allow you to do that, because the offset of a given field and the length of its value can vary from one message to another. This variation depends on the message type, the preceding fields, and the lengths of the preceding values. It also varies based on the implementation from one to another, depending on whether custom fields have been defined. Such variations make it impossible to predict the exact offset of a given field or to specify the length of the value that is to be extracted as the token. In this case, therefore, rule based persistence is the preferred persistence type.

Assume that a virtual server fixlb1 is load balancing TCP connections to a farm of servers hosting instances of a FIX-enabled application. You want to configure persistence for connections on the basis of the value of the SenderCompID field, which identifies the firm sending the message. The tag for this FIX field is 49 (shown in the earlier logon message example).

To configure rule based persistence for the load balancing virtual server, set the persistence type for the load balancing virtual server to RULE and configure the rule parameter with an expression. The expression must be one that extracts the portion of the TCP payload in which you expect to find the SenderCompID field, typecasts the resulting string to a name-value list based on the delimiters, and then extracts the value of the SenderCompID field (tag 49), as follows:

```
set lb vserver fixlb1 -persistenceType RULE -rule "CLIENT.TCP.PAYLOAD(300).TYPECAST_NVLIST_T('=', '^').VALUE("\49\"")"
```

Note: Backslash characters have been used in the expression because this is a CLI command. If you are using the configuration utility, do not enter the backslash characters.

If the client sends a FIX message that contains the name-value list in the earlier logon message example, the expression extracts the value INVMGR, and the NetScaler appliance creates a persistence session based on this value.

The argument to the PAYLOAD() function can be as large as you deem is necessary to include the SenderCompID field in the string extracted by the function. Optionally, you can use the SET_TEXT_MODE(IGNORECASE) function if you want the appliance to ignore the case when extracting the value of the field, and the HASH function to create a persistence session based on a hash of the extracted value. The following expression uses the SET_TEXT_MODE(IGNORECASE) and HASH functions:

```
CLIENT.TCP.PAYLOAD(500).TYPECAST_NVLIST_T('=', '^').SET_TEXT_MODE(IGNORECASE).VALUE("49").HASH
```

Following are more examples of rules that you can use to configure persistence for FIX connections (replace <tag> with the tag of the field whose value you want to extract):

- To extract the value of any FIX field in the first 300 bytes of the TCP payload, you can use the expression CLIENT.TCP.PAYLOAD(300).BEFORE_STR("^").AFTER_STR("<tag>=").
- To extract a string that is 20 bytes long at offset 80, cast the string to a name-value list, and then extract the value of the field that you want, use the expression CLIENT.TCP.PAYLOAD(100).SUBSTR(80,20).TYPECAST_NVLIST_T('=', '^').VALUE("<tag>").
- To extract the first 100 bytes of the TCP payload, cast the string to a name-value list, and extract the value of the third occurrence of the field that you want, use the expression CLIENT.TCP.PAYLOAD(100).TYPECAST_NVLIST_T('=', '^').VALUE("<tag>;2).

Note: If the second argument that is passed to the VALUE() function is n, the appliance extracts the value of the

(n+1)
th instance of the field because the count starts from zero (0).

Following are more examples of rules that you can use to configure persistence. Only the payload-based expressions can evaluate data being transmitted through the FIX protocol. The other expressions are more general expressions for configuring persistence based on lower networking protocols.

- CLIENT.TCP.PAYLOAD(100)
- CLIENT.TCP.PAYLOAD(100).HASH
- CLIENT.TCP.PAYLOAD(100).SUBSTR(5,10)
- CLIENT.TCP.SRCPORT
- CLIENT.TCP.DSTPORT
- CLIENT.IP.SRC
- CLIENT.IP.DST
- CLIENT.IP.SRC.GET4
- CLIENT.IP.DST.GET4
- CLIENT.ETHER.SRCMAC.GET6
- CLIENT.ETHER.DSTMAC.GET5
- CLIENT.VLAN.ID

Use case 3: Configure load balancing in direct server return mode

May 2, 2023

Load balancing in direct server return (DSR) mode allows the server to respond to clients directly by using a return path that does not flow through the NetScaler appliance. In DSR mode, however, the appliance can continue to perform health checks on services. In a high-data volume environment, sending server traffic directly to the client in DSR mode increases the overall packet handling capacity of the appliance because the packets do not flow through the appliance.

DSR mode has the following features and limitations:

- It supports one-arm mode and inline mode.
- The appliance ages out sessions based on idle timeout.
- Because the appliance does not proxy TCP connections (that is it does not send SYN-ACK to the client), it does not shut out SYN attacks. By using the SYN packet rate filter, you can control the rate of SYNs to the server. To control the rate of SYNs, set a threshold for the rate of SYNs. To get protection from SYN attacks, you must configure the appliance to proxy TCP connections. However, that requires the reverse traffic to flow through the appliance.


- In a DSR configuration, the NetScaler appliance does not replace the load balancing virtual server’s IP address with the destination server’s IP address. Instead, it forwards packets to a service by using the server’s MAC address. The VIP must be configured on the server and ARP must be disabled for the VIP which is configured on the server. Doing so prevents the client request from bypassing the appliance when it is configured in one-arm mode. For example, a user must configure VIP in the loopback interface and disable the ARP for the same VIP.
- The appliance obtains the server’s MAC address from the monitor bound to the service. However, custom user monitors (monitors of type USER), which use scripts stored on the NetScaler appliance, do not learn a server’s MAC address. If you use only custom monitors in a DSR configuration, for each request the virtual server receives, the appliance attempts to resolve the destination IP address to a MAC address (by sending ARP requests). Because the destination IP address is a virtual IP address owned by the NetScaler appliance, the ARP requests always resolve to the MAC address of the NetScaler interface. Therefore, all traffic received by the virtual server is looped back to the appliance. If you use user monitors in a DSR configuration, you must also configure another monitor of a different type (for example, a PING monitor) for the services, ideally with a longer interval between probes, so that the MAC address of the servers can be learned.
- The NetScaler appliance learns the server L2 parameters from the monitor that is bound to the service. For UDP-ECV monitors, configure a receive string to enable the appliance to learn the L2 parameters of the server. If the receive string is not configured and the server does not respond, then the appliance does not learn the L2 parameters but the service is set to UP. The traffic for this service is blackholed.

In the example scenario, the services Service-ANY-1, Service-ANY-2, and Service-ANY-3 are created and bound to the virtual server Vserver-LB-1. The virtual server load balances the client request to a service, and the service responds to clients directly, bypassing the NetScaler appliance. The following table lists the names and values of the entities configured on the NetScaler appliance in DSR mode.

Entity type	Name	IP address	Protocol
Virtual server	Vserver-LB-1	10.102.29.94	ANY
Services	Service-ANY-1	10.102.29.91	ANY
	Service-ANY-2	10.102.29.92	ANY
	Service-ANY-3	10.102.29.93	ANY
Monitors	TCP	None	None

The following diagram shows the load balancing entities and values of the parameters to be configured on the appliance.

Figure 1. Entity Model for Load Balancing in DSR Model

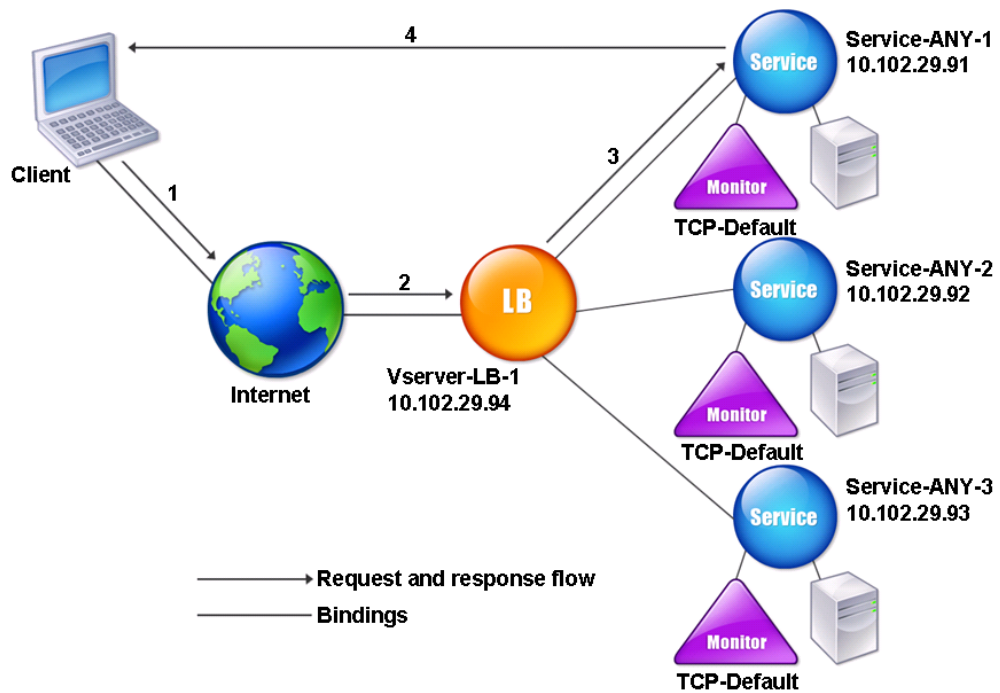

For the appliance to function correctly in DSR mode, the destination IP in the client request must be unchanged. Instead, the appliance changes the destination MAC to that of the selected server. This setting enables the server to determine the client MAC address for forwarding requests to the client while bypassing the server.

Next, you configure a basic load balancing setup as described in [Setting Up Basic Load Balancing](#), naming the entities and setting the parameters using the values described in the previous table.

After you configure the basic load balancing setup, you must customize it for DSR mode. To do this, you configure a supported load balancing method, such as the Source IP Hash method with a sessionless virtual server. You also need to set the redirection mode to allow the server to determine the client MAC address for forwarding responses and bypass the appliance.

After you configure the load balancing method and redirection mode, you need to enable the USIP mode on each service. The service then uses the source IP address when forwarding responses.

To configure the load balancing method and redirection mode for a sessionless virtual server by using the command line interface

At the command prompt, type:

```
1 set lb vserver <vServerName> -lbMethod <LBMethodOption> -m <
  RedirectionMode> -sessionless <Value>
```

Example

```
1 set lb vserver Vserver-LB-1 -lbMethod SourceIPHash -m MAC -sessionless
  enabled
```

Note

For a service that is bound to a virtual server on which -m MAC option is enabled, you must bind a non-user monitor.

To configure the load balancing method and redirection mode for a sessionless virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open a virtual server, select Redirection Mode as MAC Based, and method as SOURCEIPHASH.
3. In Traffic Settings, select Sessionless Load Balancing.

To configure a service to use source IP address by using the command line interface

At the command prompt, type:

```
1 set service <ServiceName> -usip <Value>
```

Example:

```
1 set service Service-ANY-1 -usip yes
```

To configure a service to use source IP address by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Open a service, and in Traffic Settings, select **Use Source IP Address**.

Some additional steps are required in certain situations, which are described in the succeeding sections.

Use case 4: Configure LINUX servers in DSR mode

May 2, 2023

The LINUX operating system requires that you set up a loopback interface with the NetScaler appliance virtual IP address (VIP) on each load balanced server in the DSR cluster.

To configure LINUX server in DSR mode

To create a loop back interface with the NetScaler appliance's VIP on each load balanced server, at the Linux OS prompt type the following commands:

```
1 ifconfig dummy0 up
2
3 ifconfig dummy0:0 inet <netscaler vip> netmask 255.255.255.255 up
4
5 echo 1 > /proc/sys/net/ipv4/conf/dummy0/arp_ignore
6
7 echo 2 > /proc/sys/net/ipv4/conf/dummy0/arp_announce
```

Then, run the software that remaps the TOS id to VIP.

Note: Add the correct mappings to the software before running it. In the preceding commands, the LINUX server uses dummy0 to connect to the network. When you use this command, type the name of the interface that your LINUX server uses to connect to the network.


Use case 5: Configure DSR mode when using TOS

May 2, 2023

Differentiated services (DS), also known as TOS (Type of Service), is a field that is part of the IPv4 packet header. The equivalent field in the IPv6 header is Traffic Class. TOS is used by upper layer protocols for optimizing the path for a packet. The TOS information encodes the NetScaler appliance virtual IP address (VIP), and the load balanced servers extract the VIP from it.

In the following scenario, the appliance adds the VIP to the **TOS** field in the packet and then forwards the packet to the load balanced server. The load balanced server then responds directly to the client, bypassing the appliance, as illustrated in the following diagram.

Figure 1. The NetScaler appliance in DSR mode with TOS

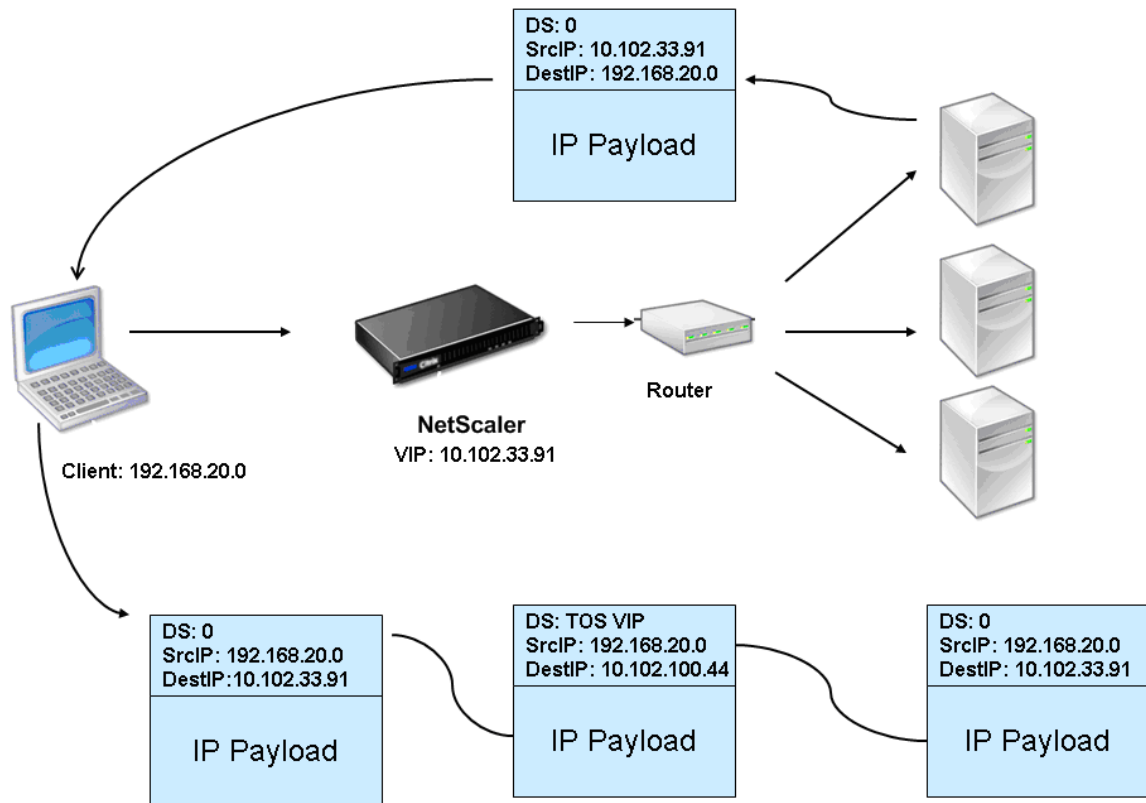

The TOS feature is customized for a controlled environment as follows:

- The environment must not have any stateful devices, such as stateful firewall and TCP gateways, in the path between the appliance and the load balanced servers.
- Routers at all the entry points to the network must remove the TOS field from all incoming packets to make sure that the load balanced server does not confuse another TOS field with that added by the appliance.
- Each server can have only 63 VIPs.
- The intermediate router must not send out ICMP error messages regarding fragmentation. The client does not understand the message, as the source IP address is the IP address of the load balanced server and not the NetScaler VIP.
- TOS is valid only for IP-based services. You cannot use domain name based services with TOS.

In the example, Service-ANY-1 is created and bound to the virtual server Vserver-LB-1. The virtual server load balances the client request to the service, and the service responds to clients directly, bypassing the appliance. The following table lists the names and values of the entities configured on the appliance in DSR mode.

Entity Type	Name	IP Address	Protocol
Virtual server	Vserver-LB-1	10.102.33.91	ANY
Services	Service-ANY-1	10.102.100.44	ANY
Monitors	PING	None	None

DSR with TOS requires that load balancing is set up on layer 3. To configure a basic load balancing setup for Layer 3, see [Setting Up Basic Load Balancing](#). Name the entities and set the parameters using the values described in the previous table.

After you configure the load balancing setup, you must customize the load balancing setup for DSR mode by configuring the redirection mode to allow the server to decapsulate the data packet and then respond directly to the client and bypass the appliance.

After specifying the redirection mode, you can optionally enable the appliance to transparently monitor the server. This enables the appliance to transparently monitor the load balanced servers.

To configure the redirection mode for the virtual server by using the command line interface

At the command prompt, type:

```
1 set lb vserver <vServerName> -m <Value> -tosId <Value>
```

Example:

```
1 set lb vserver Vserver-LB-1 -m TOS -tosId 3
```

To configure the redirection mode for the virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open a virtual server, and in Redirect Mode, select TOS ID.

To configure the transparent monitor for TOS by using the command line interface

At the command prompt, type:

```
1 add monitor <MonitorName> <Type> -destip <DestinationIP> -tos <Value> -
  tosId <Value>
```

Example:

```
1 add monitor mon1 PING -destip 10.102.33.91 -tos Yes -tosId 3
```

To create the transparent monitor for TOS by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Create a monitor, select TOS, and type the TOS ID that you specified for the virtual server.

Wildcard TOS Monitors

In a load balancing configuration in DSR mode using TOS field, monitoring its services requires a TOS monitor to be created and bound to these services. A separate TOS monitor is required for each load balancing configuration in DSR mode using the TOS field, because a TOS monitor requires the VIP address and the TOS ID to create an encoded value of the VIP address. The monitor creates probe packets in which the **TOS** field is set to the encoded value of the VIP address. It then sends the probe packets to the servers represented by the services of a load balancing configuration.

With many load balancing configurations, creating a separate custom TOS monitor for each configuration is a significant, cumbersome task. Managing these TOS monitors is also a significant task. Now, you can create wildcard TOS monitors. Create only one wildcard TOS monitor for all load balancing configurations that use the same protocol (for example, TCP or UDP).

A wildcard TOS monitor has the following mandatory settings:

- Type = <protocol>
- TOS = Yes

The following parameters can be set to a value or can be left blank:

- Destination IP
- Destination Port
- TOS ID

A wildcard TOS monitor (with destination IP, Destination port, and TOS ID not set) bound to a DSR service automatically learns the TOS ID and the VIP address of the load balancing virtual server. The monitor creates probe packets with the TOS field set to the encoded VIP address and then sends the probe packets to the server represented by the DSR service.

To create a wildcard TOS monitor by using the CLI

At the command prompt, type:

```
1 add lb monitor <monitorName> <Type> -tos YES
2
3 show lb monitor <monitorName>
```

To bind a wildcard TOS monitor to a service by using the CLI

At the command prompt, type:

```
1 bind lb monitor <monitorName> <serviceName>
2
3 show lb monitor <monitorName>
```

To create a wildcard TOS monitor by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Add a monitor with the following parameter settings:
 - Type = `<protocol>`
 - TOS = YES

To bind a wildcard TOS monitor to a service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Open a service and bind a wildcard TOS monitor to it.

In the following sample configuration, V1, V2, and V3 are load balancing virtual servers of type ANY and has TOS ID set to 1, 2, and 3 respectively. S1, S2, S3, S4, and S5 are services of type ANY. S1 and S2 are bound to both V1 and V2. S3, S4, and S5 and bound to both V1 and V3. WLCD-TOS-MON is a wildcard TOS monitor with type TCP and is bound to S1, S2, S3, S4, and S5.

WLCD-TOS-MON automatically learns the TOD ID and VIP address of virtual servers bound to S1, S2, S3, S4, and S5.

Because S1 is bound to V1 and V2, WLCD-TOS-MON creates two types of probe packets for S1, one with the **TOS** field set to the encoded VIP address (203.0.113.1) of V1 and the other with the VIP address (203.0.113.2) of V2. The NetScaler then sends these probe packets to the server represented by S1. Similarly, WLCD-TOS-MON creates probe packets for S2, S3, S4, and S5.

```
1 add lb monitor WLCD-TOS-MON TCP -tos YES
2
3 Done
4
5 add lb vservice V1 ANY 203.0.113.1 * -m TOS -tosID 1
6
```

```
7 Done
8
9 add lb vserver V2 ANY 203.0.113.2 * -m TOS - tosID 2
10
11 Done
12
13 add lb vserver V3 ANY 203.0.113.3 * -m TOS - tosID 3
14
15 Done
16
17 add service S1 198.51.100.1 ANY *
18
19 Done
20
21 add service S2 198.51.100.2 ANY *
22
23 Done
24
25 add service S3 198.51.100.3 ANY *
26
27 Done
28
29 add service S4 198.51.100.4 ANY *
30
31 Done
32
33 add service S5 198.51.100.5 ANY *
34
35 Done
36
37 bind lb monitor WLCD-TOS-MON S1
38
39 Done
40
41 bind lb monitor WLCD-TOS-MON S2
42
43 Done
44
45 bind lb monitor WLCD-TOS-MON S3
46
47 Done
48
49 bind lb monitor WLCD-TOS-MON S4
50
51 Done
52
53 bind lb monitor WLCD-TOS-MON S5
54
55 Done
56
57 bind lb vserver V1 S1, S2, S3, S4, S5
58
59 Done
```

```
60
61 bind lb vserver V2, S1, S2
62
63 Done
64
65 bind lb vserver V3 S3, S4, S5
66
67 Done
```

Use case 6: Configure load balancing in DSR mode for IPv6 networks by using the TOS field


May 2, 2023

You can configure load balancing in Direct Server Return (DSR) mode for IPv6 networks by using the Type of Service (TOS) field when the NetScaler appliance and the servers are in different networks.

Note: The TOS field is also called the Traffic Class field.

In DSR mode, when a client sends a request to a VIP6 address on a NetScaler appliance, the appliance forwards this request to the server by changing the destination IPv6 address of the packet to the IPv6 address of the server and sets an encoded value of the VIP6 address in the TOS (also called traffic class) field of the IPv6 header. You can configure the server to use the information in the TOS field to derive the VIP6 address from the encoded value, which is then used as source IP address in response packets. Response traffic directly goes to the client, bypassing the appliance.

Consider an example where a load balancing virtual server LBVS1, configured on a NetScaler appliance NS1, is used to load balance traffic across servers S1, S2, and S3. The NetScaler appliance NS1 and the servers S1, S2, and S3 are in different networks so router R1 is deployed between NS1 and the servers.

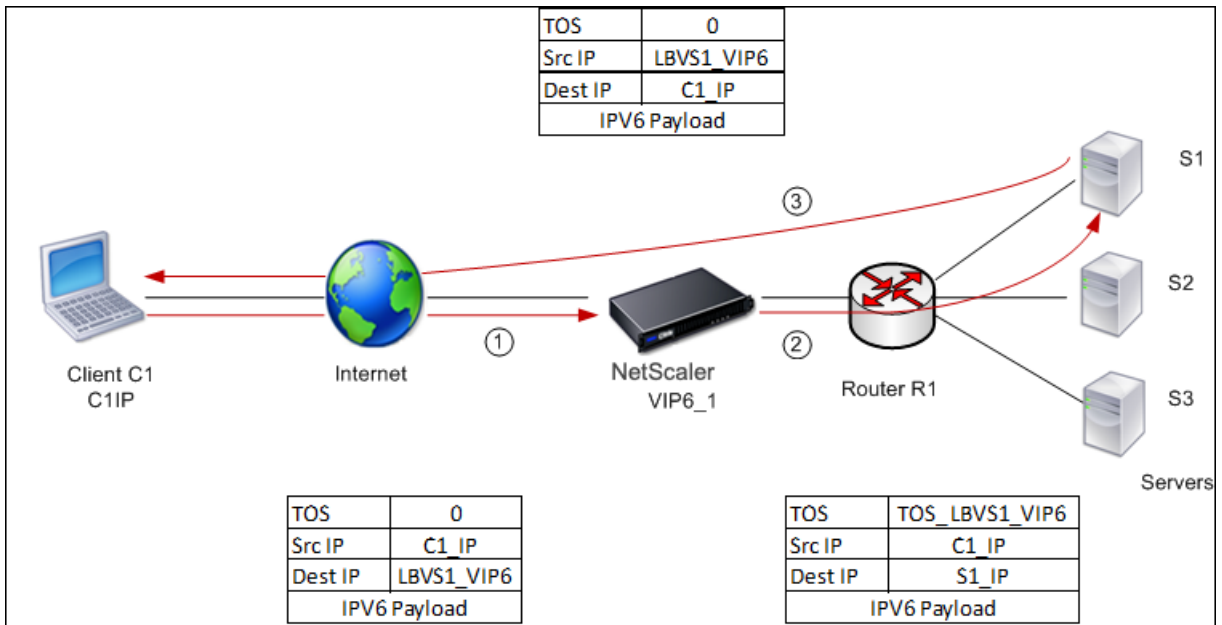

The following table lists the settings used in this example.

Entities	Name
IPv6 address of client C1	C1_IP (for reference purposes only)
Load balancing virtual server on NS1	LBVS1
IPv6 address of LBVS1	LBVS1_VIP6 (for references purpose only)
TOS value	TOS_LBVS1_VIP6 (for references purpose only)
Service for server S1 on NS1	SVC_S1
IPv6 address for server S1	S1_IP (for references purpose only)
Service for server S2 on NS1	SVC_S2
IPv6 address for server S1	S2_IP (for references purpose only)
Service for server S3 on NS1	SVC_S3
IPv6 address for server S1	S3_IP (for references purpose only)

Following is the traffic flow in the example scenario:

1. Client C1 sends a request to virtual server LBVS1.
2. LBVS1's load balancing algorithm selects server S1 and the appliance opens a connection to S1. NS1 sends the request to S1 with:
 - TOS field set to TOS_LBVS1_VIP6.
 - Source IP address as C1_IP.

3. The server S1, on receiving the request, uses the information in the TOS field to derive the LBVS1_VIP6 address, which is the IP address of the virtual server LBVS1 on NS1. The server directly sends the response to C1, bypassing the appliance, with:
 - Source IP address set to the derived LBVS1_VIP6 address so that the client communicates to the virtual server LBVS1 on NS1 and not to server S1.

To configure load balancing in DSR Mode using TOS, perform the following steps on the appliance

1. Enable USIP mode globally.
2. Add the servers as services.
3. Configure a load balancing virtual server with a TOS value.
4. Bind the services to the virtual server.

To configure load balancing in DSR Mode using TOS by using the command line interface

At the command prompt, type:

```
1 enable ns mode USIP
2
3 add service <serviceName> <IP> <serviceType> <port>
```

Repeat the earlier command as many times as necessary to add each server as a service on the NetScaler appliance.

```
1 add lb vserver <name> <serviceType> <ip> <port> -m <redirectionMode> -
  tosId <positive_integer>
2
3 bind lb vserver <vserverName> <serviceName>
```

To enable USIP mode by using the configuration utility

Navigate to **System > Settings > Configure Modes**, and select **Use Source IP Address**.

To create services by using the configuration utility

Navigate to **Traffic Management > Load Balancing > Services**, and create a service.

To create a load balancing virtual server and bind services by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and create a virtual server.
2. Click in the Service section to bind a service to this virtual server.

Use case 7: Configure load balancing in DSR mode by using IP Over IP

May 2, 2023

You can configure a NetScaler appliance to use direct server return (DSR) mode across Layer 3 networks by using IP tunneling, also called *IP over IP* configuration. As with standard load balancing configurations for DSR mode, this allows servers to respond to clients directly instead of using a return path through the NetScaler appliance. This improves response time and throughput. As with standard DSR mode, the NetScaler appliance monitors the servers and performs health checks on the application ports.

With IP over IP configuration, the NetScaler appliance and the servers do not need to be on the same Layer 2 subnet. Instead, the NetScaler appliance encapsulates the packets before sending them to the destination server. After the destination server receives the packets, it decapsulates the packets, and then sends its responses directly to the client. This is often referred to as L3DSR.

To configure L3-DSR mode on your NetScaler appliance:

- [Create a load balancing virtual server](#). Set the mode to IPTUNNEL and enable sessionless tracking.
- [Create services](#). Create a service for each back-end application and bind the services to the virtual server.
- [Configure for decapsulation](#). Configure either a NetScaler appliance or a back-end server to act as a decapsulator.

Note:

When you use a NetScaler appliance, the decapsulation setup is an IP tunnel between the ADC appliances with the back end doing L2DSR to the real servers.

Configure a load balancing virtual server

Configure a virtual server to handle requests to your applications. Assign the service type that matches the service, or use a type of ANY for multiple services.

Set the forwarding method to IPTUNNEL and enable the virtual server to operate in sessionless mode. Configure any load balancing method that you want to use.

To create and configure a load balancing virtual server for IP over IP DSR by using the command line interface

At the command prompt type the following command to configure a load balancing virtual server for IP over IP DSR and verify the configuration:

```
1 add lb vserver <name> serviceType <serviceType> IPAddress <ip> Port <
  port> -lbMethod <method> -m <ipTunnelTag> -sessionless [ENABLED |
  DISABLED]
2
3 show lb vserver <name>
```

Example:

In the following example, we have selected the load balancing method as sourceIPHash and configured sessionless load balancing.

```
1 add lb vserver Vserver-LB-1 ANY 1.1.1.80 * -lbMethod SourceIPHash -m
  IPTUNNEL -sessionless ENABLED
```

To create and configure a load balancing virtual server for IP over IP DSR by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Create a virtual server, and specify Redirection Mode as **IP Tunnel Based**.

Configure services for IP over IP DSR

After creating your load-balanced server, configure one service for each of your applications. The service handles traffic from the NetScaler appliance to those applications, and allows the NetScaler appliance to monitor the health of each application.

Assign the services to use USIP mode and bind a monitor of type IPTUNNEL to the service for tunnel-based monitoring.

To create and configure a service for IP over IP DSR by using the command line interface

At the command prompt, type the following commands to create a service and optionally, create a monitor and bind it to the service:

```
1 add service <serviceName> <serverName> <serviceType> <port> -usip <usip
  >
2
3 add monitor <monitorName> <monitorType> -destip <ip> -iptunnel <
  iptunnel>
4
5 bind service <serviceName> -monitorName <monitorName>
```

Example:

In the following example, a monitor of type IPTUNNEL is created.

```
1 add monitor mon_DSR PING -destip 1.1.1.80 -iptunnel yes
2 add service svc_DSR01 2.2.2.100 ANY * -usip yes
3 bind service svc_DSR01 -monitorName mon_DSR
```

An alternative approach to simplify the routing at both the server and the ADC appliance is to setup both the ADC and server to use an IP from the same subnet. Doing so ensures that any traffic with a destination of a tunnel endpoint is sent over the tunnel. In the example, 10.0.1.0/30 is used.

Note:

The purpose of the monitor is to ensure that the tunnel is active by reaching the loopback of each server through the IP tunnel. If the service is not up, verify whether the outer IP routing between ADC and server is good. Also verify whether the inner IP addresses are reachable through the IP tunnel. Routes might be required on the server, or PBR is added to ADC depending on the chosen implementation.

Example:

```
1 add ns ip 10.0.1.2 255.255.255.252 -vServer DISABLED
2 add netProfile netProfile_DSR -srcIP 10.0.1.2
3 add lb monitor mon_DSR PING -LRTM DISABLED -destIP 1.1.1.80 -ipTunnel
  YES -netProfile netProfile_DSR
```

To configure a monitor by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Create a monitor, and select **IP Tunnel**.

To create and configure a service for IP over IP DSR by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Create a service and, in **Settings** tab, select **Use Source IP Address**.

To bind a service to a load balancing virtual server by using the command line interface

At the command prompt type the following command:

```
1 bind lb vserver <name> <serviceName>
```

Example:

```
1 bind lb vserver Vserver-LB-1 Service-DSR-1
```

To bind a service to a load balancing virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open a virtual server, and click in the **Services** section to bind a service to the virtual server.

Using the client IP address in the Outer header of tunnel packets

The NetScaler supports using the client-source IP address as the source IP address in the outer header of tunnel packets related to direct server return mode using IP tunneling. This feature is supported for DSR with IPv4 and DSR with IPv6 tunneling modes. For enabling this feature, enable the **use client source IP address** parameter for IPv4 or IPv6. This setting is applied globally to all the DSR configurations that use IP tunneling.

To use a client-source IP address as the source IP address by using the CLI

At the command prompt, type:

- `set iptunnelparam -useclientsourceip [YES | NO]`
- `show iptunnelparam`

To use client source IP address as the source IP address by using the GUI

1. Navigate to **System > Network**.
2. In **Settings** tab, click **IPv4 Tunnel Global Settings**.
3. In the **Configure IPv4 Tunnel Global Parameters** page, select **Use Client Source IP** check box.
4. Click **OK**.

To use client source IP address as the source IP address by using the CLI

At the command prompt, type:

- `set ip6tunnelparam -useclientsourceip [YES | NO]`
- `show ip6tunnelparam`

To use client source IP address as the source IP address by using the GUI

1. Navigate to **System > Network**.
2. In **Settings** tab, click **IPv6 Tunnel Global Settings**.
3. In the **Configure IPv6 Tunnel Global Parameters** page, select **Use Client Source IP** check box.
4. Click **OK**.

Decapsulation configuration

You can configure either a NetScaler appliance or a back-end server as a decapsulation.

NetScaler decapsulation


When a NetScaler appliance is used as a decapsulation, an IP tunnel must be created in the NetScaler appliance. For more details, see [Configuring IP Tunnels](#).

The NetScaler decapsulation setup consists of the following two virtual servers:

- The first virtual server receives the encapsulated packet and removes the outer IP encapsulation.
- The second virtual server has the IP of the original service on the front-end ADC and uses MAC translation to forward the packet towards the back end by using the MAC address of the bound services. This setup is typically known as L2DSR. Ensure to disable ARP on this virtual server.

Example setup:

The following illustration shows a decapsulation setup using the ADC appliances.

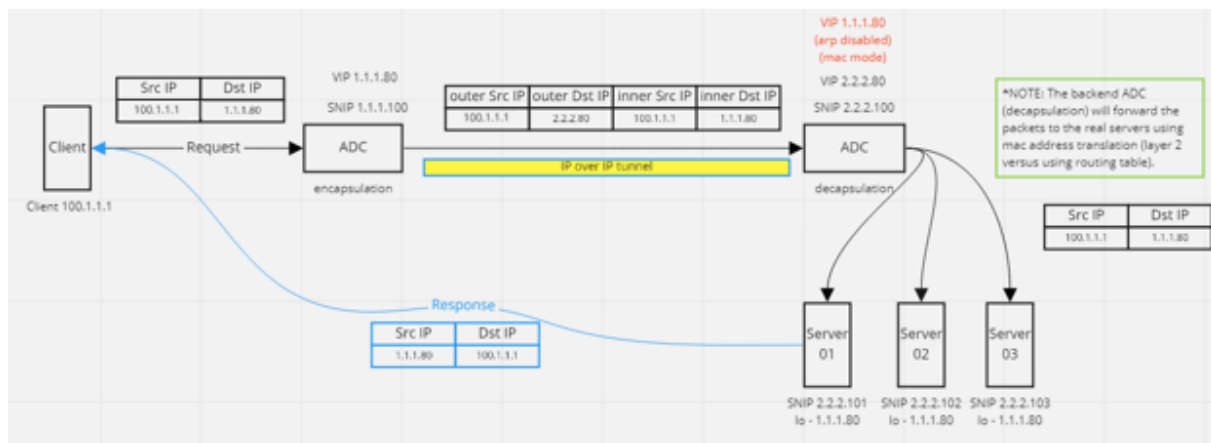

The complete configuration required for the setup is as follows.

Front-end ADC configuration:

```

1 add service svc_DSR01 2.2.2.80 ANY * -usip YES -useproxyport NO
2 add lb vserver vip_DSR_ENCAP ANY 1.1.1.80 * -lbMethod SOURCEIPHASH -m
  IPTUNNEL -sessionless ENABLED
3 bind lb vserver vip_DSR_ENCAP svc_DSR01

```

Back-end ADC configuration:

```

1 add ipTunnel DSR-IPIP 1.1.1.100 255.255.255.255 *
2
3 add service svc_DSR01_01 2.2.2.101 ANY * -usip YES -useproxyport NO
4 add service svc_DSR01_02 2.2.2.102 ANY * -usip YES -useproxyport NO
5 add service svc_DSR01_03 2.2.2.103 ANY * -usip YES -useproxyport NO
6
7 add lb vserver vs_DSR_DECAP ANY 2.2.2.80 * -lbMethod SOURCEIPHASH -m
  IPTUNNEL -sessionless ENABLED -netProfile netProf_DSR_MBF_noIP
8
9 add ns ip 1.1.1.80 255.255.255.255 -type VIP -arp DISABLED -snmp
  DISABLED
10 add lb vserver vs_DSR_Relay ANY 1.1.1.80 * -lbMethod SOURCEIPHASH -m
  MAC -sessionless ENABLED
11
12 bind lb vserver vs_DSR_DECAP svc_DSR01_01
13 bind lb vserver vs_DSR_DECAP svc_DSR01_02
14 bind lb vserver vs_DSR_DECAP svc_DSR01_03
15
16 bind lb vserver vip_DSR_Relay svc_DSR01_01
17 bind lb vserver vip_DSR_Relay svc_DSR01_02
18 bind lb vserver vip_DSR_Relay svc_DSR01_03
19
20 add netProfile netProf_DSR_MBF_noIP -MBF ENABLED
21 add lb monitor mon_DSR_MAC PING -netProfile netProf_DSR_MBF_noIP
22 bind service svc_DSR01_01 -monitorName mon_DSR_MAC
23 bind service svc_DSR01_02 -monitorName mon_DSR_MAC
24 bind service svc_DSR01_03 -monitorName mon_DSR_MAC

```

The following example shows a testing setup using Ubuntu and Red Hat servers running apache2. These commands are set up on each back-end server.

```

1 sudo ip addr add 1.1.1.80 255.255.255.255 dev lo
2 sudo sysctl net.ipv4.conf.all.arp_ignore=1
3 sudo sysctl net.ipv4.conf.all.arp_announce=2
4 sudo sysctl net.ipv4.conf.eth4.rp_filter=2 (The interface has the
  external IP with route towards the ADC)
5 sudo sysctl net.ipv4.conf.all.forwarding=1
6 sudo ip link set dev lo arp on

```

Back-end server decapsulation


When you use the back-end servers as a decapsulation, the back-end configuration varies depending upon the server OS type. You can configure a back-end server as a decapsulation by following these steps:

1. Configure a loop back interface with IP for service IP.
2. Create a tunnel interface.
3. Add a route through tunnel interface.
4. Configure interface settings as required for traffic.

Note:

Windows OS servers cannot do IP tunneling natively, so the commands are provided as examples for Linux based systems. Third-party plug-ins are available for Windows OS servers, however, that is outside the scope of this example.

The following illustration shows a decapsulation setup using the back-end servers.

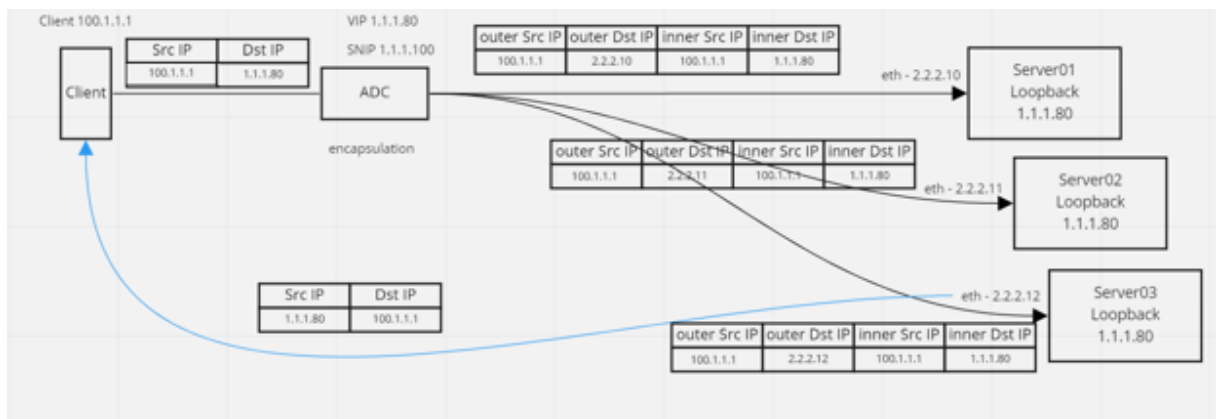

Example configuration:

In this example, 1.1.1.80 is the NetScaler virtual IP (VIP) address and 2.2.2.10-2.2.2.12 are the back-end server IP addresses. The VIP address is configured in the loopback interface, and a route is added through the tunnel interface. The monitors use the server IP, and tunnel the monitor packets over the IP tunnel using the tunnel endpoints.

The complete configuration required for the setup is as follows.

Front-end ADC configuration:

The following configuration creates a monitor that uses the tunnel endpoint as source. Then, send pings over tunnel to service IP address.

```
1 add ns ip 10.0.1.2 255.255.255.252 -vServer DISABLED
2 add netProfile netProfile_DSR -srcIP 10.0.1.2
```



```
3 add lb monitor mon_DSR PING -LRTM DISABLED -destIP 1.1.1.80 -ipTunnel
  YES -netProfile netProfile_DSR
```

The following configuration creates a VIP for service that uses the original source IP address. Then, forwards traffic over IP tunnel to back-end servers.

```
1 add service svc_DSR01 2.2.2.10 ANY * -usip YES -useproxyport NO
2 bind service svc_DSR01 -monitorName mon_DSR
3
4 add service svc_DSR02 2.2.2.11 ANY * -usip YES -useproxyport NO
5 bind service svc_DSR02 -monitorName mon_DSR
6
7 add service svc_DSR03 2.2.2.12 ANY * -usip YES -useproxyport NO
8 bind service svc_DSR03 -monitorName mon_DSR
9
10 add lb vserver vip_DSR_ENCAP ANY 1.1.1.80 * -lbMethod SOURCEIPHASH -m
    IPTUNNEL -sessionless ENABLED
11 bind lb vserver vip_DSR_ENCAP svc_DSR01
12 bind lb vserver vip_DSR_ENCAP svc_DSR02
13 bind lb vserver vip_DSR_ENCAP svc_DSR03
```

Back-end server configuration of each server:

The following commands are required for the back-end server to receive the IPIP packet, remove the outer encapsulation, then respond from the loopback to the original client IP. Doing so ensures the IP addresses in the packet received by the client match the IP addresses in the original request.

```
1 modprobe ipip
2 sudo ip addr add 1.1.1.80 255.255.255.255 dev lo
3 nmcli connection add type ip-tunnel ip-tunnel.mode ipip con-name tun0
4 ifname tun0 remote 198.51.100.5 local 203.0.113.10
5 nmcli connection modify tun0 ipv4.addresses '10.0.1.1/30'
6 nmcli connection up tun0
7 sudo sysctl net.ipv4.conf.all.arp_ignore=1
8 sudo sysctl net.ipv4.conf.all.arp_announce=2
9 sudo sysctl net.ipv4.conf.tun0.rp_filter=2
10 sudo sysctl net.ipv4.conf.all.forwarding=1
11 sudo ip link set dev lo arp off
```


Use case 8: Configure load balancing in one-arm mode

May 2, 2023

In a one-arm setup, you connect the NetScaler appliance to the network through a single VLAN. The appliance receives the request from the client on a single VLAN and it sends the request to the server on the same VLAN. This is one of the simplest deployment scenarios, where the router, the servers and

the appliance are all connected to the same switch. Client requests at the switch are forwarded to the appliance, and the appliance uses the configured load balancing method to select the service.

Figure 1. Load balancing in one-arm mode

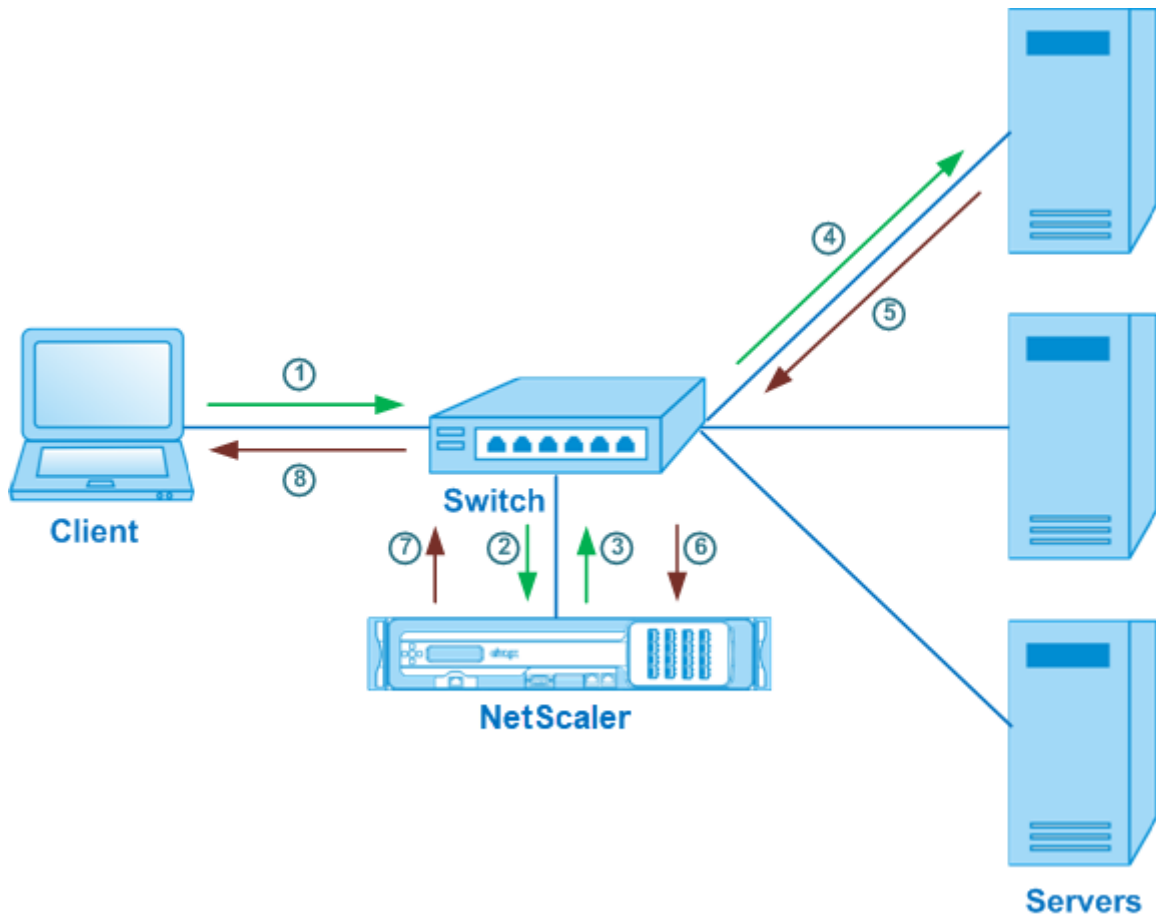

In the example scenario, the services Service-ANY-1, Service-ANY-2, and Service-ANY-3 are created and bound to the virtual server Vserver-LB-1. The virtual server load balances the client request to a service. The following table lists the names and values of the entities configured on the appliance in one-arm mode.


Entity type	Name	IP address	Protocol
Virtual server	Vserver-LB-1	10.102.29.94	ANY
Services	Service-ANY-1	10.102.29.91	ANY
	Service-ANY-2	10.102.29.92	ANY
	Service-ANY-3	10.102.29.93	ANY
Monitors	TCP	None	None

To configure a load balancing setup in one-arm mode, see [Setting Up Basic Load Balancing](#).

Use case 9: Configure load balancing in the inline mode

May 2, 2023

In an inline mode (also called two-arm mode) setup, you connect the NetScaler appliance to the network through multiple VLANs. The appliance receives the request from the client on one VLAN and it sends the request to the server on another VLAN. In the two-arm setup, the appliance is connected between the servers and the client. Client requests at the switch are forwarded to the appliance, and the appliance uses the configured load balancing method to select the service.

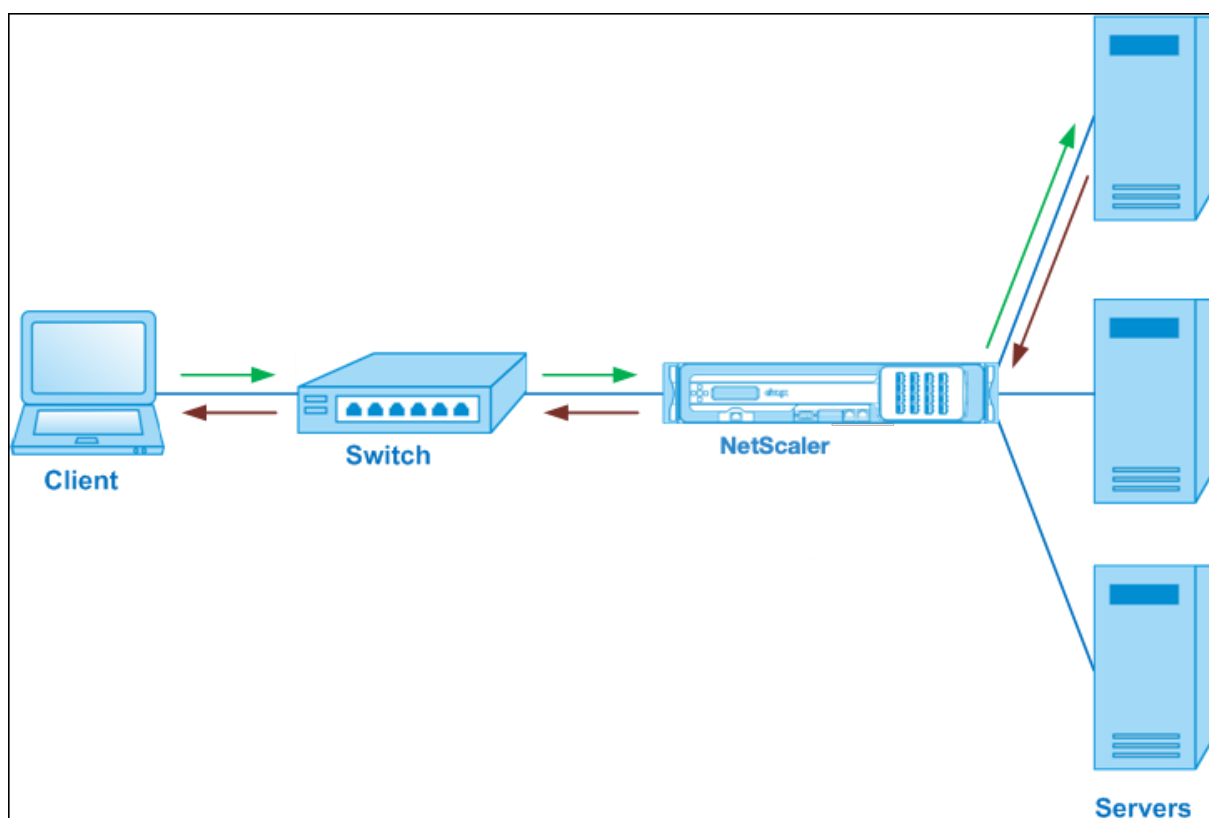


The configuration and the entity diagram for inline mode are the same as described in [Configuring Load Balancing in One-arm Mode](#).

Use case 10: Load balancing of intrusion detection system servers

May 2, 2023

To enable the NetScaler appliance to support load balancing of intrusion detection system (IDS) servers, the IDS servers and clients must be connected through a switch that has port mirroring enabled. The client sends a request to the server. Because port mirroring is enabled on the switch, the request packets are copied or sent to the NetScaler appliance virtual server port. The appliance then uses the configured load balancing method to select an IDS server, as shown in the following diagram.

Figure 1. Topology of Load Balanced IDS Servers

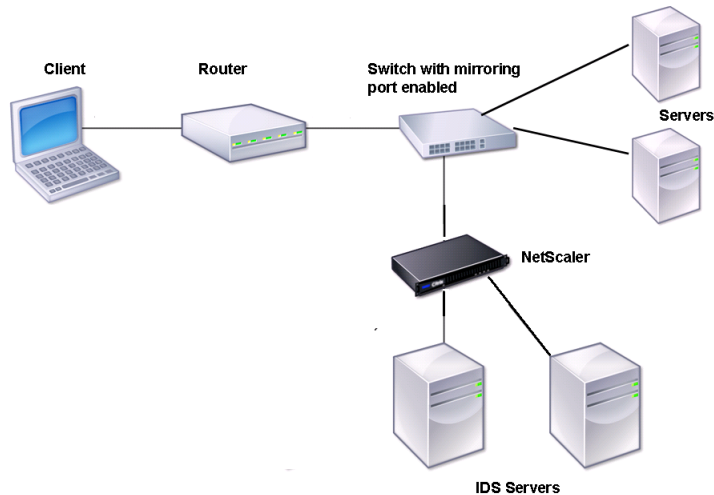

Note: Currently, the appliance supports load balancing of passive IDS devices only.

As illustrated in the preceding diagram, the IDS load balancing setup functions as follows:

1. The client request is sent to the IDS server, and a switch with a mirroring port enabled forwards these packets to the IDS server. The source IP address is the IP address of the client, and the destination IP address is the IP address of the server. The source MAC address is the MAC address of the router, and the destination MAC address is the MAC address of the server.
2. The traffic that flows through the switch is mirrored to the appliance. The appliance uses the layer 3 information (source IP address and destination IP address) to forward the packet to the selected IDS server without changing the source IP address or destination IP address. It modifies the source MAC address and the destination MAC address to the MAC address of the selected IDS server.

Note: When load balancing IDS servers, you can configure the SRCIPHASH, DESTIPHASH, or SRCIPDESTIPHASH load balancing methods. The SRCIPDESTIPHASH method is recommended because packets flowing from the client to a service on the appliance must be sent to a single IDS server.

Suppose Service-ANY-1, Service-ANY-2, and Service-ANY-3 are created and bound to Vserver-LB-1. The


virtual server balances the load on the services. The following table lists the names and values of the entities configured on the appliance.

Entity type	Name	IP address	Port	Protocol
Virtual server	Vserver-LB-1	*	*	ANY
Services	Service-ANY-1	10.102.29.101	*	ANY
	Service-ANY-2	10.102.29.102	*	ANY
	Service-ANY-3	10.102.29.103	*	ANY
Monitors	Ping	None	None	None

Note: You can use inline mode or one-arm mode for an IDS load balancing setup.

The following diagram shows the load balancing entities and values of the parameters to be configured on the appliance.

Figure 2. Entity Model for Load Balancing IDS Servers

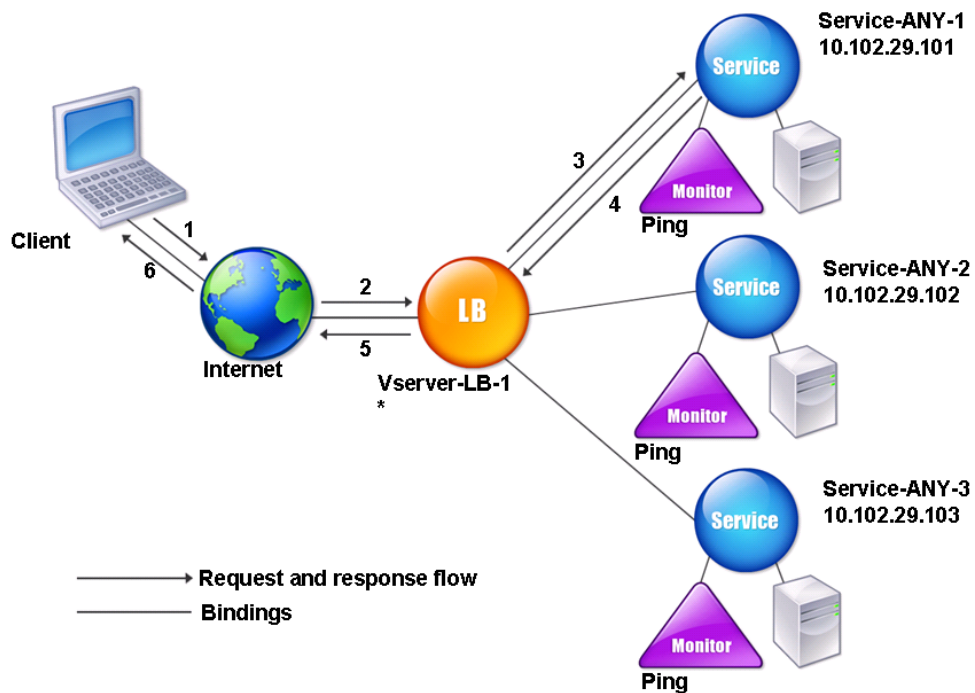

To configure an IDS load balancing setup, you must first enable MAC-based forwarding. Also disable layer 2 and layer 3 modes on the appliance.

To enable MAC-based forwarding by using the command line interface

At the command prompt, type:

```
1 enable ns mode <ConfigureMode>
```

Example:

```
1 enable ns mode MAC
```

To enable MAC-based forwarding by using the configuration utility

Navigate to **System > Settings > Configure Modes**, and select **MAC Based Forwarding**.

Next, see “[Setting Up Basic Load Balancing](#)”, to configure a basic load balancing setup.

After you configure the basic load balancing setup, you must customize it for IDS by configuring a supported load balancing method (such as the SRCIPDESTIP Hash method on a sessionless virtual server) and enabling MAC mode. The appliance does not maintain the state of the connection and only forwards the packets to the IDS servers without processing them. The destination IP address and port remains unchanged because the virtual server is in the MAC mode.

To configure a load balancing method and redirection mode for a sessionless virtual server by using the command line interface

At the command prompt, type:

```
1 set lb vserver <vServerName> -lbMethod <LBMethodOption> -m <
  RedirectionMode> -sessionless <Value>
```

Example:

```
1 set lb vserver Vserver-LB-1 -lbMethod SourceIPDestIPHash -m MAC -
  sessionless enabled
```

Note

For a service that is bound to a virtual server on which the -m MAC option is enabled, you must bind a non-user monitor.

To configure a load balancing method and redirection mode for a sessionless virtual server by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.

2. Open a virtual server and, in Redirection Mode, select MAC Based.
3. In Advanced Settings, click Methods, and select SRCIPDESTIPHASH. Click Traffic Settings, and select Sessionless Load Balancing.

To set a service to use the source IP address by using the command line interface

At the command prompt, type:

```
1 set service <ServiceName> -usip <Value>
```

Example:

```
1 set service Service-ANY-1 -usip yes
```

To set a service to use the source IP address by using the configuration utility

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Open a service, and in Settings select **Use Source IP Address**.

For USIP to function correctly, you must set it globally. For more information about configuring USIP globally, see [IP Addressing](#).

Use case 11: Isolating network traffic using listen policies

May 2, 2023

Note

The traffic isolation solution using shadow virtual servers to simulate multitenant isolation is no more recommended. Alternatively, Citrix recommends you to use the NetScaler Admin Partitioning feature for such deployments. For more information, see [Admin Partitioning](#).

A common security requirement in a data center is to maintain network path isolation between the traffic of various applications or tenants. One application or tenant's traffic must be isolated from the traffic of other applications or tenants. For example, a financial services company would want to keep the traffic of its insurance department's applications separate from that of its financial services applications. In the past, this was easily achieved through physical separation of network service devices such as firewalls, load balancers, and IdP, and network monitoring and logical separation in the switching fabric.

As data center architectures evolve toward multitenant virtualized data centers, networking services in the aggregation layer of a data center are getting consolidated. This development has made network path isolation a critical component for network service devices and is driving the requirement for ADCs to be able to isolate traffic at the L4 to L7 levels. Furthermore, all the traffic of a particular tenant must go through a firewall before reaching the service layer.

To address the requirement of isolating the network paths, a NetScaler appliance identifies the network domains and controls the traffic across the domains. The NetScaler solution has two main components: listen policies and shadow virtual servers.

Each network path to be isolated is assigned a virtual server on which a listen policy is defined so that the virtual server listens to traffic only from a specified network domain.

To isolate the traffic, listen policies can be based on several client parameters or their combinations, and the policies can be assigned priorities. The following table lists the parameters that can be used in listen policies for identifying the traffic.

Category	Parameters
Ethernet protocol	Source MAC address, destination MAC address
Network interface	Network ID, receiving throughput, sending throughput, transmission throughput
IP protocol	Source IP address, destination IP address
IPv6 protocol	Source IPv6 address, destination IPv6 address
TCP protocol	Source port, destination port, maximum segment size, payload, and other options
UDP protocol	Source port, destination port
VLAN	ID

Table 1. Client Parameters Used to Define Listen Policies


On the NetScaler appliance, a virtual server is configured for each domain, with a listen policy specifying that the virtual server is to listen only to traffic for that domain. Also configured for each domain is a shadow load balancing virtual server, which listens to traffic destined for any domain. Each of the shadow load balancing virtual servers has a wildcard (*) IP address and port, and its service type is set to ANY.

In each domain, a firewall for the domain is bound as a service to the shadow load balancing virtual server, which forwards all traffic through the firewall. Local traffic is forwarded to its destination, and traffic destined for another domain is forwarded to the firewall for that domain. The shadow load balancing virtual servers are configured for MAC mode redirection.

How network paths are isolated

The following figure shows a typical traffic flow across domains. Consider the traffic flow within Network Domain 1, and between Network Domain 1 and Network Domain 2.

Figure 1. Isolating Network Path

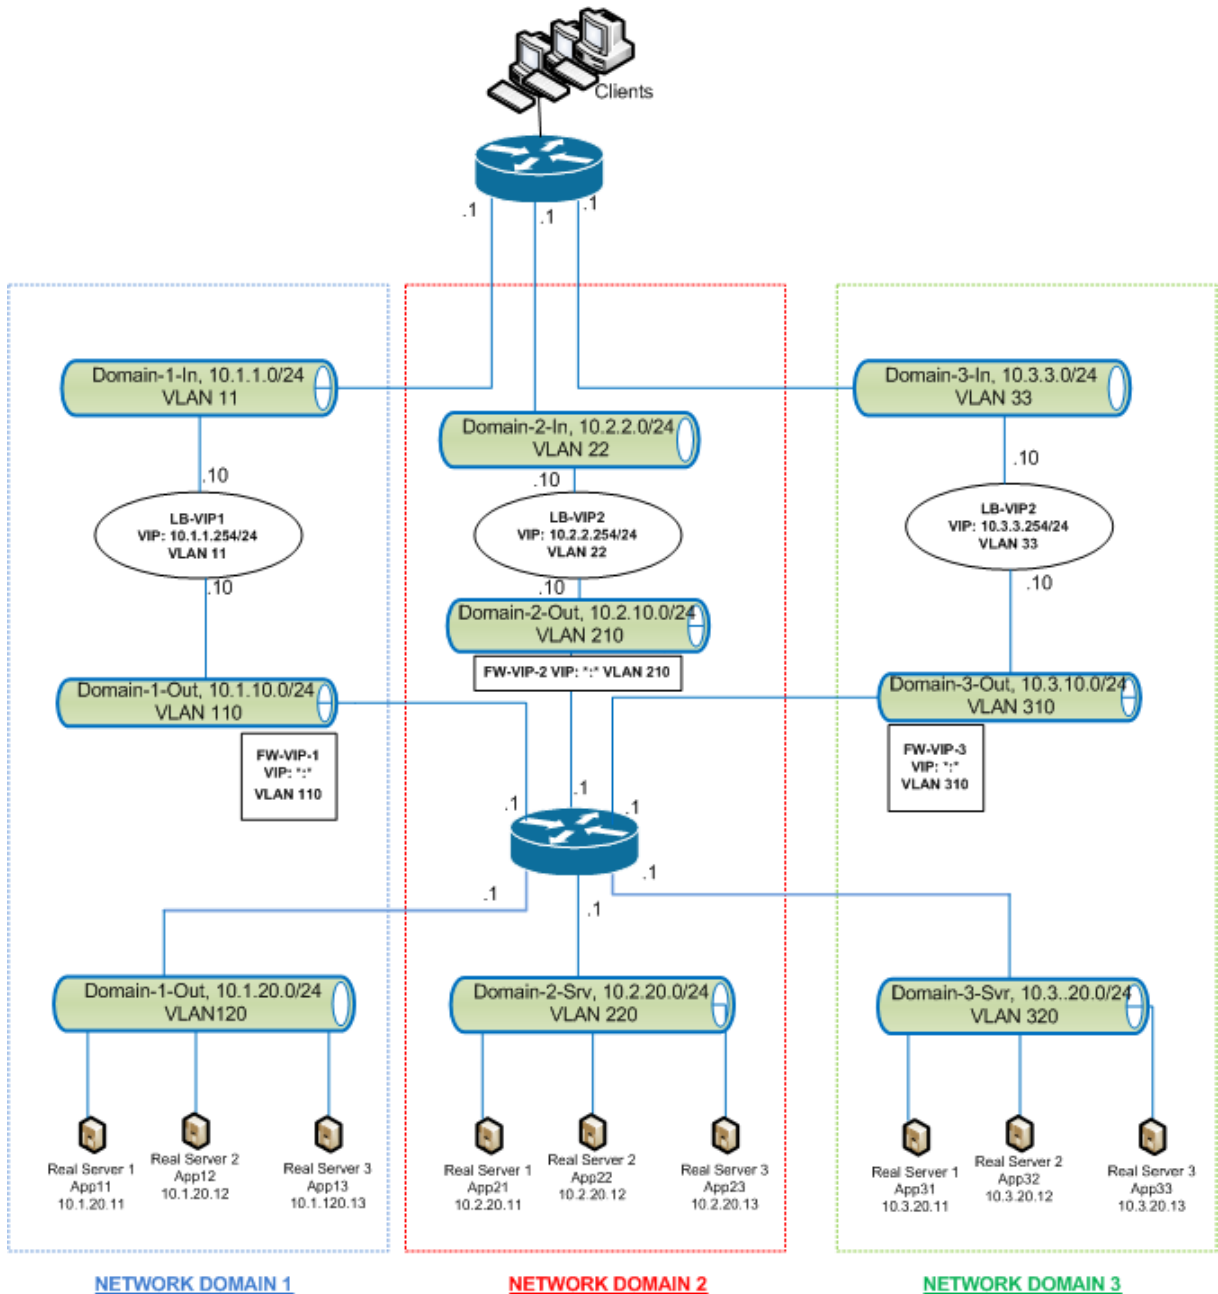

Traffic within network domain 1

Network Domain 1 has three VLANs: VLAN 11, VLAN110, and VLAN120. The following steps describe the traffic flow.

- A client from VLAN 11 sends a request for a service available from the service pool in VLAN 120.
- The load balancing virtual server LB-VIP1, which is configured to listen to traffic from VLAN 11, receives the request and forwards the request to VLAN 110. The virtual server in VLAN 110 forwards the request to shadow load balancing virtual server FW-VIP-1.
- FW-VIP-1, which is configured to listen to traffic from VLAN 110, receives the request and forwards it to VLAN 120.
- The load balancing virtual server in VLAN 120 load balances the request to one of the physical servers, App11, App12, or App13.
- The response sent by the physical server returns by the same path to the client in VLAN 11.

This configuration ensures that traffic is always segregated inside the NetScaler for all the traffic that originates from a client.

Traffic between network domain 1 and network domain 2

Network Domain 1 has three VLANs: VLAN 11, VLAN 110, and VLAN 120. Network Domain 2 also has three VLANs: VLAN 22, VLAN 210, and VLAN 220. The following steps describe the traffic flow from VLAN 11 to VLAN 22.

- A client from VLAN 11, which belongs to Network Domain 1, sends a request for a service available from the service pool in VLAN 220, which belongs to the Network Domain 2.
- In Network Domain 1, the load balancing virtual server LB-VIP1, which is configured to listen to traffic from VLAN 11, receives the request and forwards the request to VLAN 110.
- Shadow load balancing virtual server FW-VIP-1, which is configured to listen to VLAN 110 traffic destined to any other domain, receives the request and forwards it to firewall virtual server FW-VIP-2 because the request is destined to a physical server in Network Domain 2.
- In Network Domain 2, FW-VIP-2 forwards the request to VLAN 220.
- The load balancing virtual server in VLAN 220 load balances the request to one of the physical servers, App21, App22, or App23.
- The response sent by the physical server returns by the same path through the firewall in Network Domain 2 and then to Network Domain 1 to reach the client in VLAN 11.

Configuration Steps

To configure network path isolation by using listen policies, do the following:

- Add listen policy expressions. Each expression specifies a domain to which traffic is destined. You can use the VLAN ID or other parameters to identify the traffic.
- For each network domain, configure two virtual servers as follows:
 - Create a load balancing virtual server for which you specify a listen policy that identifies the traffic destined for this domain. You can specify the name of an expression created earlier, or you can create an expression while creating the virtual server.
 - Create another load balancing virtual server, referred to as shadow virtual server, for which you specify a listen policy expression that applies to traffic destined for any domain. On this virtual server, set the service type to ANY and the IP address and port to an asterisk (*). Enable MAC-based forwarding on this virtual server.
 - Enable the L2 Connection option on both the virtual servers.
Generally, to identify a connection, the NetScaler appliance uses the 4-tuple of client IP address, client port, destination IP address, and destination port. When you enable the L2 Connection option, the Layer 2 parameters of the connection (channel number, MAC address, and VLAN ID) are used in addition to the normal 4-tuple.
- Add services representing the server pools in the domain, and bind them to the virtual server.
- Configure the firewall for each domain as a service, and bind all the firewall services to the shadow virtual server.

To isolate network traffic by using the command line interface

At the command prompt, type the following commands:

```
1 add policy expression <expressionName> <listenPolicyExpression>
2
3 add lb vserver <name> <serviceType> <ip> <port> -l2conn ON -
  listenPolicy <expressionName>
```

Add a load balancing virtual server for each domain. This virtual server is for traffic of the same domain.

```
1 add lb vserver <name> ANY * * -l2conn ON -m MAC -listenPolicy <
  expressionName>
```

Add a shadow load balancing virtual server for each domain. This virtual server is for traffic of other domains.

Example:

```
1 add policy expression e110 client.vlan.id==110
2 add policy expression e210 client.vlan.id==210
3 add policy expression e310 client.vlan.id==310
4 add policy expression e11 client.vlan.id==11
```

```
5 add policy expression e22 client.vlan.id==22
6 add policy expression e33 client.vlan.id==33
7
8 add lb vserver LB-VIP1 HTTP 10.1.1.254 80 -persistenceType NONE -
  listenPolicy e11
9 -cltTimeout 180 -l2Conn ON
10
11 add lb vserver LB-VIP2 HTTP 10.2.2.254 80 -persistenceType NONE -
  listenPolicy e22
12 -cltTimeout 180 -l2Conn ON
13
14 add lb vserver LB-VIP3 HTTP 10.3.3.254 80 -persistenceType NONE -
  listenPolicy e33
15 -cltTimeout 180 -l2Conn ON
16
17
18 add lb vserver FW-VIP-1 ANY * * -persistenceType NONE -lbMethod
  ROUNDROBIN - listenPolicy e110 -Listenpriority 1 -m MAC -cltTimeout
  120
19
20 add lb vserver FW-VIP-2 ANY * * -persistenceType NONE -lbMethod
  ROUNDROBIN - listenPolicy e210 -Listenpriority 2 -m MAC -cltTimeout
  120
21
22 add lb vserver FW-VIP-3 ANY * * -persistenceType NONE -lbMethod
  ROUNDROBIN - listenPolicy e310 -Listenpriority 3 -m MAC -cltTimeout
  120
23
24
25 add service RD-1 10.1.1.1 ANY * -gslb NONE -maxClient 0 -maxReq 0 -cip
  DISABLED
26 -usip NO -useproxyport NO -sp ON -cltTimeout 120 -svrTimeout 120 -CKA
  NO -TCPB NO -CMP NO
27
28 add service RD-2 10.2.2.1 ANY * -gslb NONE -maxClient 0 -maxReq 0 -cip
  DISABLED
29 -usip NO -useproxyport NO -sp ON -cltTimeout 120 -svrTimeout 120 -CKA
  NO -TCPB NO -CMP NO
30
31 add service RD-3 10.3.3.1 ANY * -gslb NONE -maxClient 0 -maxReq 0 -cip
  DISABLED
32 -usip NO -useproxyport NO -sp ON -cltTimeout 120 -svrTimeout 120 -CKA
  NO -TCPB NO -CMP NO
33
34
35 bind lb vserver FW-VIP-1 RD-1
36
37 bind lb vserver FW-VIP-2 RD-2
38
39 bind lb vserver FW-VIP-3 RD-3
```

To isolate network traffic by using the configuration utility

1. Add services representing the servers, as described in [Creating a Service](#).
2. Add each firewall as a service:
 - a) Navigate to **Traffic Management > Load Balancing > Services**.
 - b) Create a service, specifying the protocol as ANY, server as firewall's IP address, and port as 80.
3. Configure a load balancing virtual server.
4. Configure the shadow load balancing virtual server.
5. For each network domain, repeat steps 3 and 4.
6. From the Load Balancing Virtual Servers pane, open the virtual servers that you created and verify the settings.

Use case 12: Configure Citrix Virtual Desktops for load balancing

May 2, 2023

For an improved performance in the delivery of virtual desktop applications, you can integrate the NetScaler appliance with Citrix Virtual Desktops and use the NetScaler load balancing feature to distribute the load across the Desktop Delivery Controller (DDC) servers.


Generally, you use Citrix Virtual Desktops in situations where applications are not compatible with running on a terminal server or virtual apps, or if each virtual desktop has unique requirements. In such cases, you need one desktop host for each user that connects. However, the hosts can be pooled so that you need only one host for each currently connected user.

The core application service deployed for Citrix Virtual Desktops is the Desktop Delivery Controller (DDC). The DDC is installed on a server, and its main function is to register desktop hosts and broker client connections to them.

The DDC also authenticates users and manages the assembly of the users' virtual desktop environments by controlling the state of the desktops, and starting and stopping the desktops.

Generally, multiple DDCs are installed to enhance availability.

The following figure shows the topology of a NetScaler appliance working with Citrix Virtual Desktops.

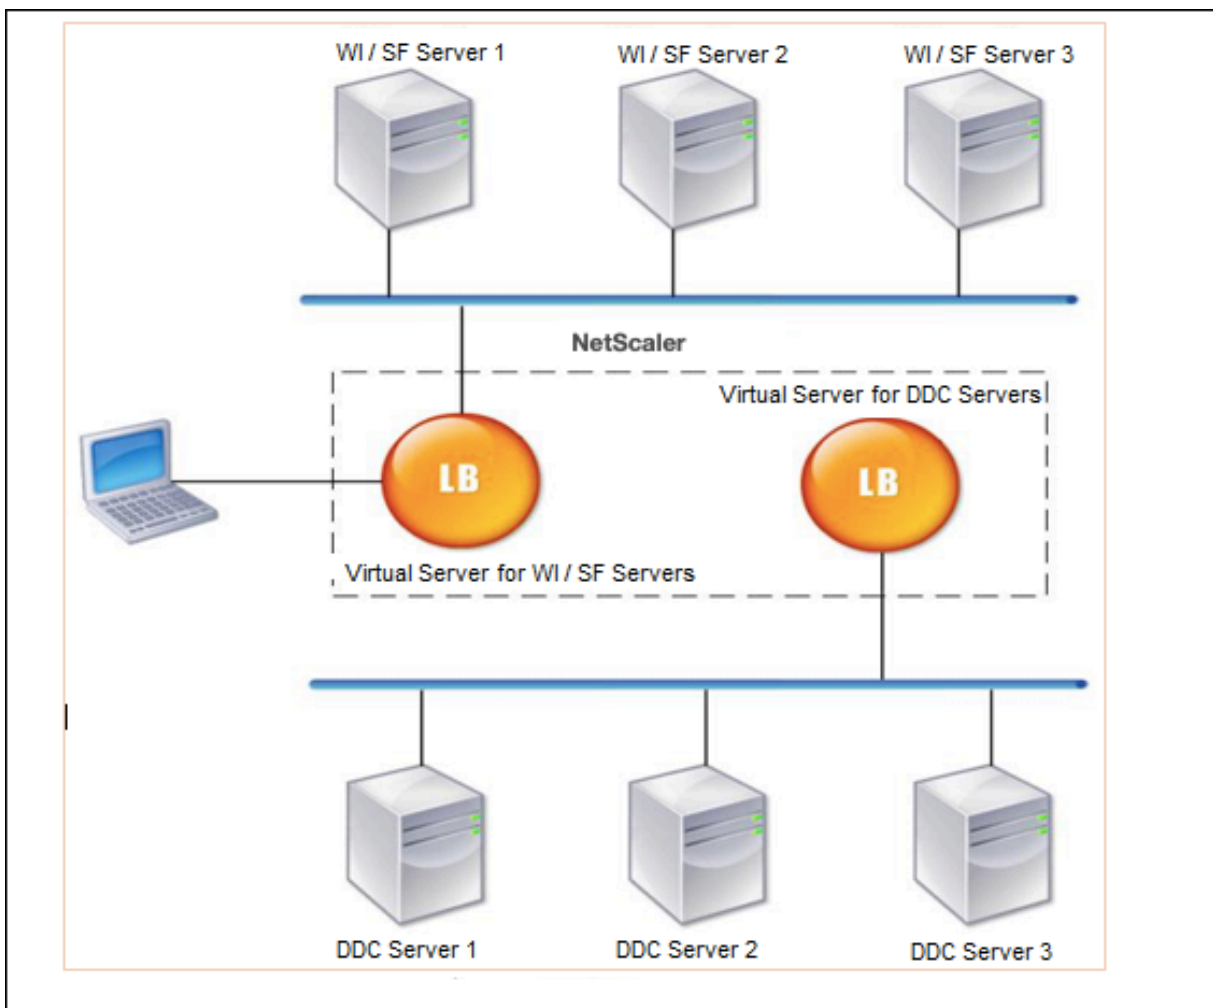**Note:**

Although you can use the HTTP protocol, we recommend that you use SSL for communication between the client and the NetScaler appliance. You can use the HTTP protocol for communication between the NetScaler and the DDC servers even though you use the SSL protocol for communication with the client.

To configure load balancing for Citrix Virtual Desktops by using the GUI

1. Create a service.
 - a) Navigate to **Configuration > Traffic Management > Load Balancing > Services** and click **Add**.
 - b) Create a service by specifying a name, an IP address, a port, and a protocol type and then click **OK**.
2. Create a load balancing virtual server.

- a) Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers** and click **Add**.
 - b) Create a virtual server by specifying a name, an IP address, a port, and a protocol type and then click **OK**.
3. Bind the service to the load balancing virtual server.
 4. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers** and select a server.
 - a) Click **Edit**.
 - b) In the **Services and Service Groups**, click **>** and click **Add Binding**.
 - c) Select the service that you want to bind and enter the weight value.
 - d) Click **Bind**.

To configure load balancing for Citrix Virtual Desktops by using the command line interface

- To create a service, at the command prompt, type:

```
1 add service <name> <serverName> <serviceType> <port>
```

Example:

```
1 add service Service-HTTP-1 192.0.2.5 HTTP 80
```

- To create a virtual server, at the command prompt, type:

```
1 add lb vserver <name> <serviceType> <ip> <port>
```

Example:

add lb vserver Vserver-LB-1 HTTP 10.102.29.60 80

- To bind a service to a load balancing virtual server, at the command prompt, type:

```
1 bind lb vserver <name> <serviceName>
```


Example:

```
1 bind lb vserver Vserver-LB-1 Service-HTTP-1
```

Use case 13: Configure Citrix Virtual Apps for load balancing

May 2, 2023

For efficient delivery of applications, you can integrate the NetScaler appliance with Citrix Virtual Apps and use the NetScaler load balancing feature to distribute the load across the Citrix Virtual Apps server farms. The following figure is a topology diagram of such a setup.

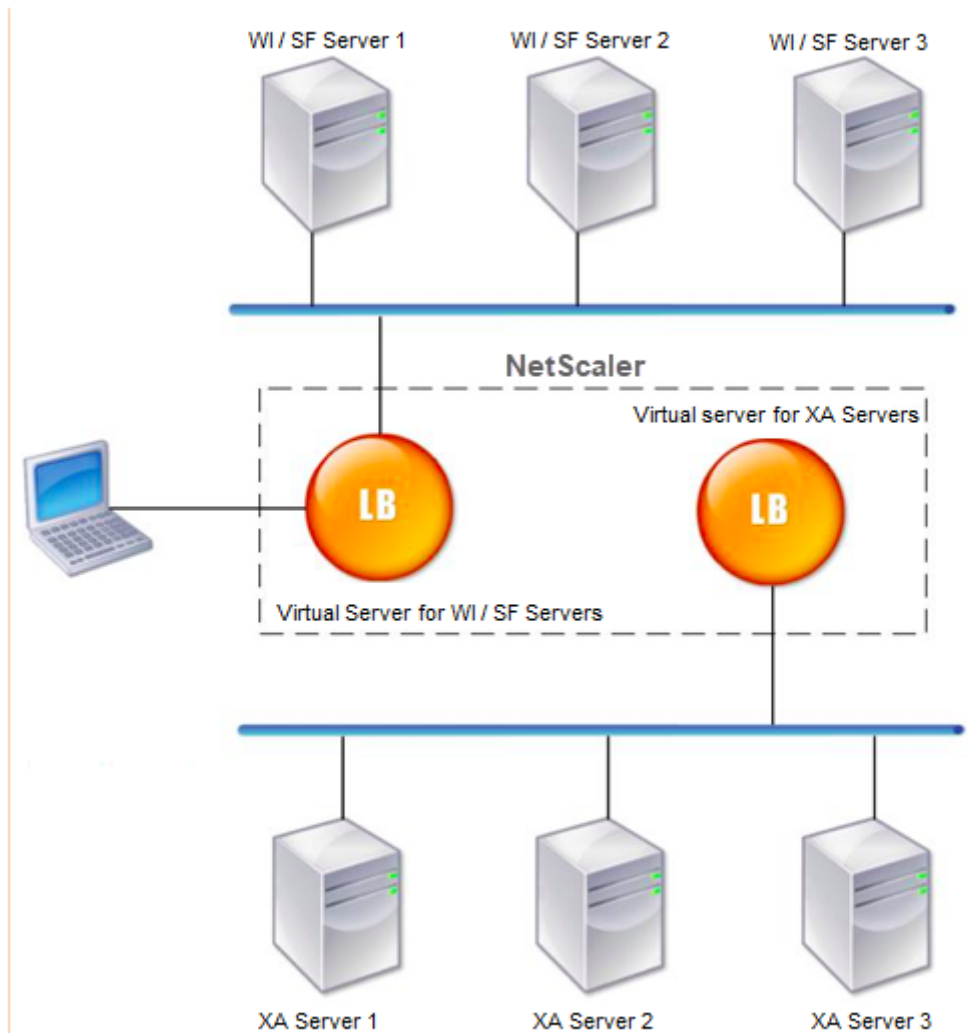

The Web Interface servers provide secure access to Citrix Virtual Apps application resources through the user’s Web browser. The Web Interface client presents to the users all the resources, such as applications, content, and desktops that are made available in the Citrix Virtual Apps server farms. Users can access the published resources through a standard Web browser or through the Citrix online plug-in.

The Web browser on the user’s device sends information to the Web server, which communicates with the servers on the server farm to provide the user with access to the resources.

The Web Interface and the XML Broker are complementary services. The Web Interface provides users with access to applications, and the XML Broker evaluates the user’s permissions to determine which

applications appear in the Web Interface.

The XML service is installed on all the servers in the server farm. The XML service specified in the Web Interface functions as an XML broker. Based on the user credentials passed by the Web Interface server, the XML Broker server sends a list of applications accessible to the user.

In large enterprises where multiple Web Interface servers and XML Broker servers are deployed, Citrix recommends load balancing these servers by using the NetScaler appliance. Configure one virtual server to load balance the Web Interface servers and another for the XML Broker servers. The load balancing method and other features can be configured on the virtual server as required.

Note

Although you can use the HTTP protocol, Citrix recommends that you use SSL for communication between the client and the NetScaler. You can use the HTTP protocol for communication between the NetScaler and the WI servers even though you use the SSL protocol for communication with the client.

To configure load balancing for Citrix Virtual Apps by using the GUI

1. Create a service.
 - a) Navigate to **Configuration > Traffic Management > Load Balancing > Services** and click **Add**.
 - b) Create a service by specifying a name, an IP address, a port, and a protocol type and then click **OK**.
2. Create a load balancing virtual server.
 - a) Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers** and click **Add**.
 - b) Create a virtual server by specifying a name, an IP address, a port, and a protocol type and then click **OK**.
3. Bind the service to the load balancing virtual server.
4. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers** and select a server.
 - a) Click **Edit**.
 - b) In the **Services and Service Groups**, click **>** and click **Add Binding**.
 - c) Select the service you want to bind and enter the weight value.
 - d) Click **Bind**.

To configure load balancing for Citrix Virtual Apps by using the command line interface

- To create a service, at the command prompt, type:

```
1 add service <name> <serverName> <serviceType> <port>
```

Example:

```
1 add service Service-HTTP-1 192.0.2.5 HTTP 80
```

- To create a virtual server, at the command prompt, type:

```
1 add lb vserver <name> <serviceType> <ip> <port>
```

Example:

```
1 add lb vserver Vserver-LB-1 HTTP 10.102.29.60 80
```

- To bind a service to a load balancing virtual server, at the command prompt, type:

```
1 bind lb vserver <name> <serviceName>
```

Example:

```
1 bind lb vserver Vserver-LB-1 Service-HTTP-1
```


Use case 14: ShareFile wizard for load balancing Citrix ShareFile

May 2, 2023

You can configure load balancing for Citrix ShareFile using the wizard. The Citrix ShareFile wizard helps in setting up the load balancing configuration for the ShareFile site based on the type of content requested. The content switching server directs the request based on whether it is a StorageZone, CIFS, or a SharePoint request. The content switching is based on policies. The wizard auto generates the policies to identify whether the request is for StorageZone, CIFS, or SharePoint. The content switching virtual server uses these policies to direct the request to the correct load balancing server.

A typical data flow can be depicted as shown in the following diagram.

Figure 1. ShareFile Data Load Balancing

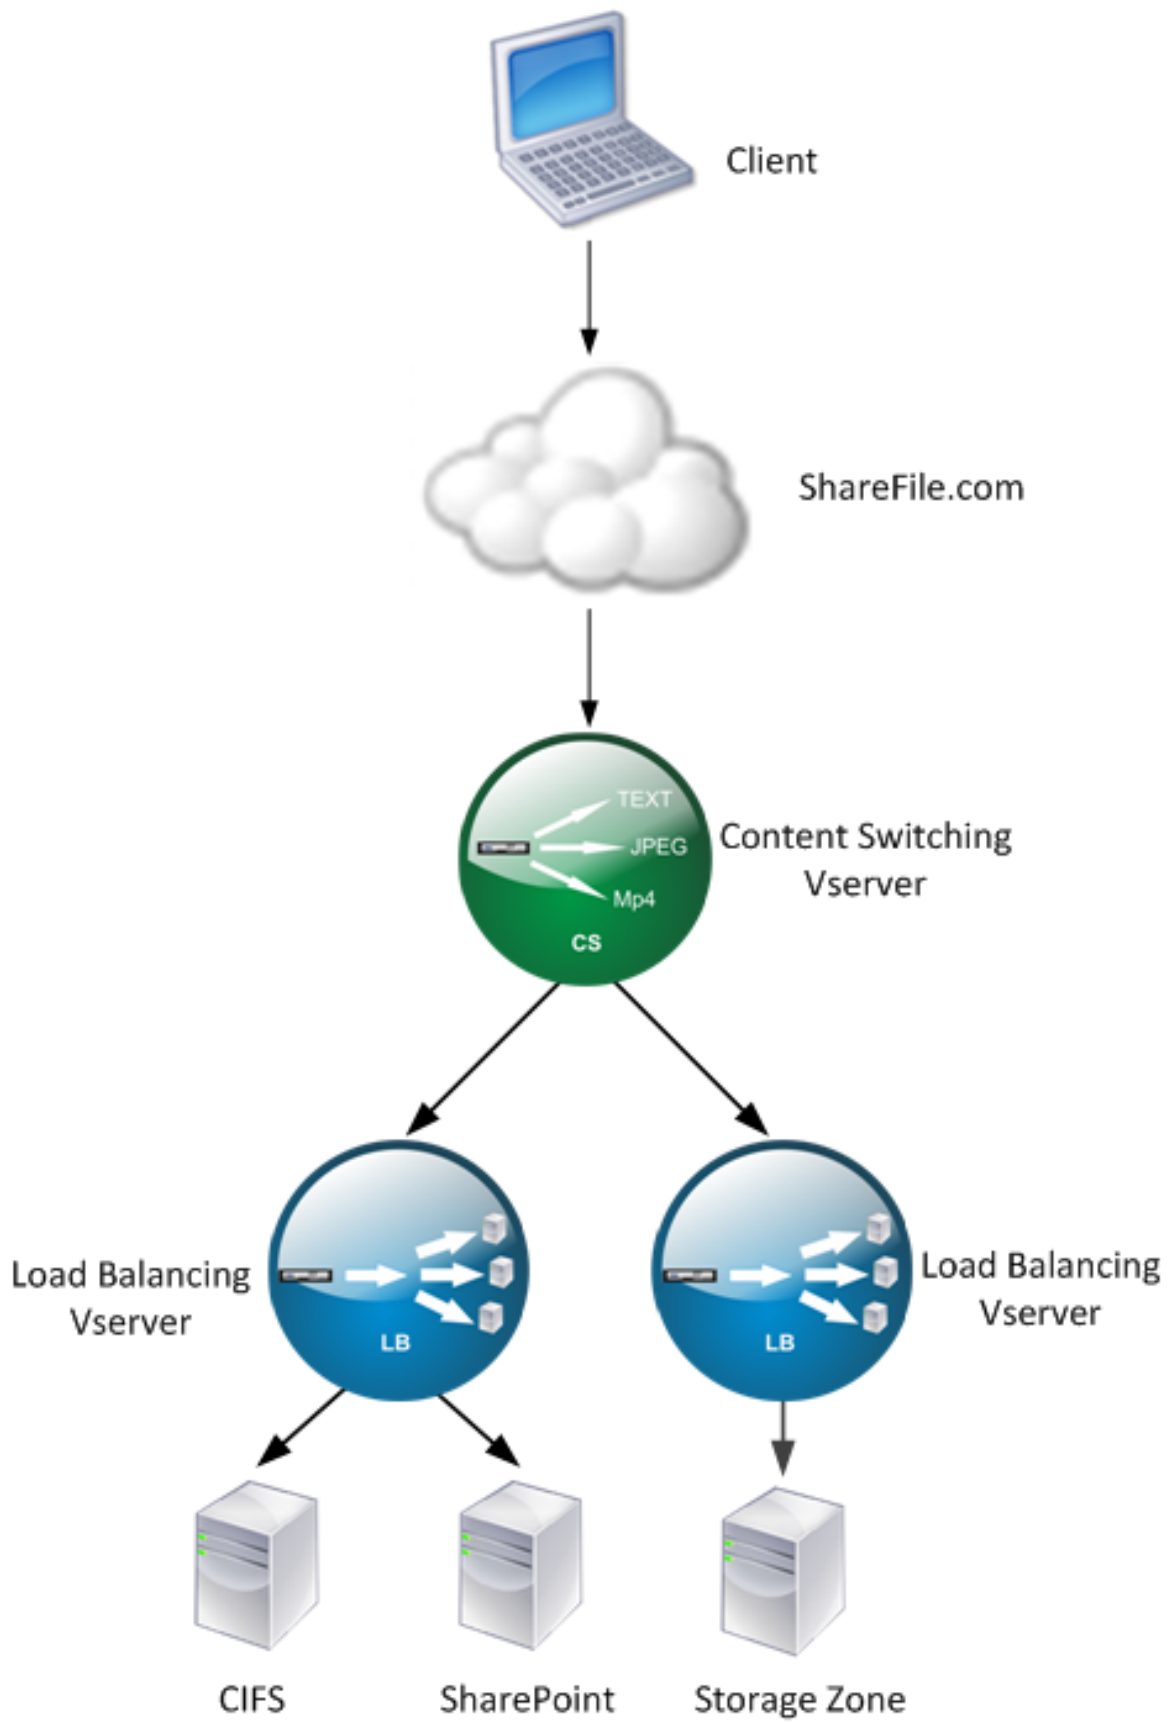

You can view the load balancing virtual servers that the ShareFile wizard creates by navigating to **Traffic Management > Virtual Servers** and **Services > Virtual Servers**. You cannot manually remove the virtual servers created using the ShareFile wizard. Use the wizard to remove the virtual servers.

NetScaler uses the LDAP authentication for SharePoint or CIFS request. Hash authentication is used for authenticating requests for StorageZones.

To configure a NetScaler appliance for load balancing Citrix ShareFile

1. In the navigation pane, click **Traffic Management**.
2. Under **Citrix ShareFile** section, click **Setup NetScaler for ShareFile**.
3. On the **Setup Content Switching for ShareFile** page, provide the following information:
 - IP Address: IP address of the content switching virtual server.
 - Name: Name of the content switching virtual server.
 - If you want to set up load balancing for CIFS or SharePoint, click the **StorageZone Connector for Network File Shares/SharePoint** check box and then click **Continue**. By default, the **ShareFile Data** check box is selected.

← Setup Content Switching for ShareFile

Load Balancing Virtual Server Configuration

Enter a public IP address and a name for the content switching virtual server.

IP Address*

 ⓘ

Name*

ShareFile Data

StorageZones Connector for network file shares and SharePoint

Continue **Cancel**


4. Provide a valid certificate. If you have a certificate, click **Choose Certificate** and from the drop-down list select the certificate. If you have to install a certificate, click **Install Certificate** and pro-



vide the Certificate-Key pair.

5. Click **Continue**.
6. In the **Add New StorageZone Controller** dialog box, specify the values of the following parameters:

- StorageZone Controller IP Address—IP address
- Port—Port number. The default value is 443.
- Protocol—Select from HTTPS or HTTP

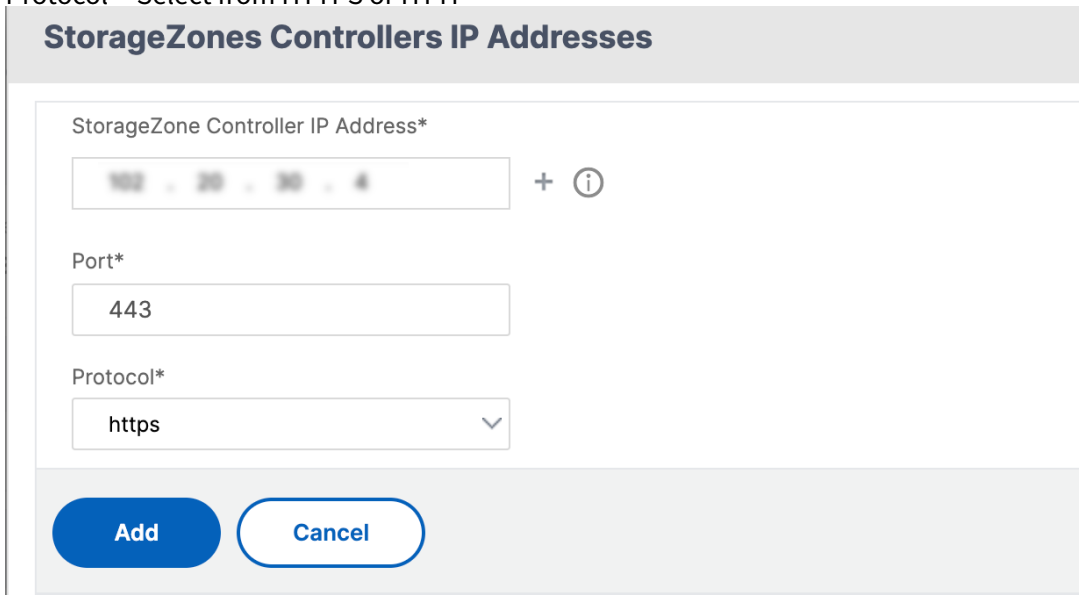

7. Click **Create** and then click **Done**. The wizard automatically creates a service and autogenerates the name of the service.
8. If you chose load balancing for CIFS or SharePoint in step 4.c, then specify the values for LDAP Authentication Settings:

- NetScaler AAA virtual server IP Address—IP address of NetScaler AAA virtual server
- LDAP Server IP Address—IP Address of the LDAP server
- Port—Port number. The default value is 389
- Timeout—The time-out value in minutes
- Single sign-on Domain—Single sign-on domain name
- Base DN—Base domain name
- Administrator Bind DN—LDAP account name with the domain name, for example, admin-

strator@domainname.com

- Logon Name—Logon name is the sAMAccountName
- Password and Confirm Password—Enter the password and confirm the password

LDAP Authentication Settings

Configure New

AAA Virtual Server IP Address*

LDAP Server IP Address*

Port*

Time out*

Single Sign-on Domain*

Base DN (location of users)*

Administrator Bind DN*

Logon Name*

Password*

Confirm Password*
 ⓘ

9. Click **Continue** and then click **Done**.

To remove load balancing configuration for ShareFile

1. In the navigation pane, click **Traffic Management**.
2. Under **Citrix ShareFile** section, click **Remove ShareFile Configuration**.

Use case 15: Configure layer 4 load balancing on the NetScaler appliance

October 8, 2023

The layer 4 load balancer (TCP and UDP ports) uses information provided in the networking transport layer for routing client requests across the server groups.

When a layer 4 connection is established between a client and a server, it has a packet view of traffic exchanged between them. The layer 4 load balancer makes its routing decisions based on the address information extracted from the first few packets in the TCP stream, and doesn't inspect the packet content. Therefore, the layer 4 load balancing is also called as connection-based load balancing.

The layer 4 load balancer monitors the health of a server. Traffic is not routed to the server if it is DOWN.

The layer 4 load balancing is useful for various applications that uses TCP or UDP payloads. Such protocols exchange data as TCP payload and don't have a specific structure to follow.

To configure layer 4 load balancing using the command line interface

At the command prompt, type:

```
1 add service <name> <serverName> <serviceType> <port>
2 add lb vserver <name> <serviceType> <ip> <port>
3 bind lb vserver <name> <serviceName>
```

Example:

```
1 add service TCPservice 192.0.2.3 TCP 1
2 add lb vserver TCPserver TCP 192.0.2.4 1
3 bind lb vserver TCPserver TCPservice
```


To configure layer 4 load balancing using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Click **Add** to create a service.
3. Specify the required details in **Service Name** and **IP Address**.
4. Select either **TCP** or **UDP** in **Protocol**.
5. Click **OK**.
6. Click **Done**.

A service is created.

When you create a service using UDP as the transport layer protocol, a ping monitor (built-in monitor) is automatically bound to the service. When you create a service using TCP as the transport layer protocol, a **tcp_default** monitor is automatically bound to the service.

For the load balancing setup, you can bind your service to a different type of monitor or multiple monitors. For advance monitoring requirements you can use the **tcp-ecv** monitor and configure the request and response messages.

7. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
 8. Click **Add** to create a new virtual server.
- When the load balancing is configured, you can connect to the load-balanced website, application, or server through the virtual server's IP address or FQDN.
9. Specify the required details in **Name**, **IP Address Type**, and **IP Address**.
 10. Select either **TCP** or **UDP** in **Protocol**.
 11. Type a port number (0–1023 based on the type of service) in **Port**.
 12. Click **OK**.

13. Click **No Load Balancing Virtual Server Service Binding** in **Services and Service Groups**.
14. In the **Service Binding** page, select **Click to Select** in **Select Service**.
15. Select the service to be bound and click **Select**.
16. Click **Bind** to bind the service to the virtual server.
17. Click **Continue**.
18. Click **Done**.

The layer 4 load balancing virtual server configuration is completed.

Troubleshooting

May 2, 2023

If the load balancing does not work as expected after you have configured it, you can use some common tools to access NetScaler resources and diagnose the problem.

Resources for Troubleshooting Load Balancing

For best results, use the following resources to troubleshoot a content switching issue on a NetScaler appliance:

- Latest ns.conf file
- Relevant `newslog` files
- Ethereal packet traces recorded on the appliance and relevant client, if possible
- The ns.log file

In addition to the above resources, the following tools expedite troubleshooting:

- A browser add-on tool that can display HTTP headers. This can be used to troubleshoot persistence related issues.
- The Wireshark application customized for the NetScaler trace files.

Troubleshooting Load Balancing Issues

- **Issue**

CPU usage reaches 100% when a user monitor is bound to a service that is bound to a virtual server on which the -m MAC option is enabled.

- **Resolution**

Bind a non-user monitor to the service.

- **Issue**

I created a user script for monitoring, but it is not working.

- **Resolution**

Check the number of arguments in the script. The limit is 512. A script with more than 512 arguments might not work properly. Use the nsumon-debug.pl script from the CLI to debug the script.

- **Issue**

I see a lot of monitor probes, and they seem to be increasing the network traffic unnecessarily. Is there a way to off the monitor probes?

Resolution

You can set off the monitor probe connections, by disabling the monitor or setting the value of the healthMonitor parameter in the set service command to NO. With the NO option, the appliance shows the service as UP at all times.

- **Issue**

I have set up monitors for services, but connections are still directed to servers that are DOWN.

Resolution

You probably need to decrease the monitor probe intervals. The NetScaler appliance does not detect the DOWN state until the monitor sends a probe.

- **Issue**

A metric bound to the monitor is present in the local and custom metric tables.

Resolution

Add the local prefix to the metric name if the metric is chosen from the local metric table. However, if the metric is chosen from the custom table, you don't need to add any prefix.

- **Issue**

The monitor probes to a service are not reaching the service.

Resolution

Check whether you have set a limit on the number of connections for a service. If yes, exempt monitor-probe connections from this limit by setting the monitorSkipMaxClient parameter to ENABLED.

- **Issue**

I am able to ping the servers, but the state of the services is always shown as DOWN.

Resolution

Check the type of monitors configured. For example, if a server is not configured for SSL and you use an HTTPS monitor, the state of the service is marked as DOWN. In this case using a TCP monitor must change the state of the service to UP.

- **Issue**

Setting a weight for load monitors does not help in deciding the state of the service.

Resolution

Load monitors cannot decide the state of the service. Therefore, setting a weight on the load monitors is inappropriate.

- **Issue**

A service is not stable.

Resolution

Consider troubleshooting the following components:

- Verify that a correct server is bound to the service.
- Verify the type of monitor bound to the service.
- Verify the reasons for the monitor failures. You can open a service from the Services page and verify the details for the number of probes, failures, and last response status for the monitor in the Monitors tab of the Configure service dialog box. To display the details, click the monitor configured.
- If it is a custom monitor, bind a TCP or ping monitor to the service and verify the status of the monitor. If this resolves the issue, there is some problem with the custom monitor and the monitor requires further investigation.
- You can record packet traces on the NetScaler appliance and verify the monitor probes and server response for further investigation.

- **Issue**

The virtual IP (VIP) address is not stable or its status is displayed as DOWN.

Resolution

Consider troubleshooting the following components:

- Verify that the load balancing feature is licensed.
- Verify that the feature is enabled.
- Verify that an appropriate service is bound to the virtual server.
- If the status of the VIP address is displayed as DOWN, verify that an administrator has enabled the service. If it is not, the status of the service must be Out-Of-Service. In such a case, you must enable the service and verify if the issue is resolved.
- Verify the service(s) bound to the virtual server and complete the troubleshooting steps mentioned for service not stable issue.
- If the VIP address is not stable, all the services bound to the virtual server must fail. Therefore, verify if all the services are failing at the same time. If it is so, there is a network issue between the NetScaler appliance and the servers.

- **Issue**

The site is experiencing uneven load balancing.

Resolution

Consider troubleshooting the following components:

- Verify the load balancing method configured on the appliance.
- Verify weights associated with the services are as expected.
- If the load balancing method is other than round robin, verify the number of connections to the server logged in the `newslog` file. You can run the following command to verify the number on the `newslog` file:

```
# nsconmsg -K <newslog_file> -s ConLb=2 -d oldconmsg
```

Verify the services for the specific virtual server and check for the Response time, Open Established connections (OE), number of requests, Persistent requests and persistent rate (P) to troubleshoot the issue further.

- If the load balancing method is round robin, verify the persistent requests as mentioned in the preceding step. Additionally, verify if the service is not stable. If it is not, complete the troubleshooting steps mentioned for service not stable issue
- Verify if persistency is configured on the appliance.
- Verify if any service is not stable. If yes, complete the troubleshooting steps mentioned for service not stable issue.

• Issue

The service status is displayed as DOWN.

Resolution

Consider troubleshooting the following components:

- Verify whether a SNIP address is configured.
- Verify that appropriate monitors are bound to the service.
- If custom monitors are bound to the service, bind a TCP or ping monitor to the service and verify the status of the monitor. If this resolves the issue, there is some problem with the custom monitor and the monitor requires further investigation.
- Verify if the status of service is displayed as DOWN for the server that is in another subnet. If yes, verify if Use Subnet IP (USNIP) resolves the issue because this can be due to the MIP address being unable to communicate to the server.

• Issue

There is an issue with the response time.

Resolution

Consider troubleshooting the following components:

- Verify the server response time from the service stats either by running the following command:

```
# nsconmsg -K <newslog_file> -s ConLb=2 -d oldconmsg
```

- Check for service not stable and service status being displayed as DOWN issues.

- **Issue**

One of the servers is serving more requests than the other load balanced servers.

Resolution

Consider troubleshooting the following components:

- Verify the load balancing method. Use the round robin method to distribute the client request equally regardless of the load on the servers.
- Determine whether persistence is enabled for the load balancing configuration. If persistence is enabled, a given server might be carrying a heavier load to maintain its session, especially if the persistence sessions are long.
- Verify whether weights are assigned to each service. Assigning proper weights helps in proper load distribution.

- **Issue**

Connections to a specific load balanced server are stalled. For example, all connections to one Outlook server might be stalled.

Resolution

Consider troubleshooting the following components:

- Verify the load balance method. If it is round robin, consider changing the method to least connections.
- Consider reducing the monitor time-out period. A shorter timeout period helps in marking a service as DOWN sooner, which would help in directing the traffic to the server which is functional.
- If the connections are stalled for a long period, a surge queue might build. Consider flushing the surge queue to avoid a sudden spike in load on the server.
- If the servers are working at their maximum level, consider adding a new server for better performance.

- **Issue**

A majority of the connections are directed to a particular server, even when the least connections method for load balancing is configured.

Resolution

Determine whether persistence is configured and is of type source IP. If source IP persistence is configured even with the least connections method, the requests go to a specific server. The server's IP address is required for maintaining the session information. Consider using HTTP Cookies based persistence.

- **Troubleshooting Tips**

For other issues, consider the following tips to troubleshoot an issue not listed above:

- If multiple load monitors are bound to a service, the load on the service is the sum of all the values on the load monitors bound to it. For load balancing to work properly, you must bind the same set of monitors to all the services.
- If you disable a load monitor bound to the service and the service is bound to a virtual server, the virtual server uses the round robin method for load balancing.
- When you bind a service to a virtual server where the load balancing method is CUSTOMLOAD and the service status is UP, the virtual server uses the initial round robin method for load balancing. It continues to be in round robin if the service has no custom load monitors, or if the status of at least one of the custom load monitors is not UP.
- All the services that are bound to a virtual server where the load balancing method is CUSTOMLOAD, the services must have load monitors bound to them.
- The CUSTOMLOAD load balancing method also follows the startup round robin.
- If you disable a metric-based binding and this is the last active metric, the specific virtual server uses the round robin method for load balancing. A metric is disabled by setting the metric threshold to zero.
- When a metric bound to a monitor crosses the threshold value, that particular service is not considered for load balancing. If all the services have reached the threshold, the virtual server uses the round robin method for load balancing and an error message “5xx - server busy error” is displayed.
- A maximum of 10 metrics from a custom table can be bound to the monitor.
- The OIDs must be scalar variables.
- For successful load balancing, the interval must be as low as possible. If the interval is high, the time period for retrieving the load value increases. As a result, load balancing takes place using improper values.
- A user cannot modify the local table.

Load balancing FAQs

May 2, 2023

What are the various load balancing policies I can create on the NetScaler appliance

You can create the following types of load balancing policies on the NetScaler appliance:

- Least Connections
- Round Robin
- Least response time
- Least bandwidth
- Least packets
- URL hashing
- Domain name hashing
- Source IP address hashing
- Destination IP address hashing
- Source IP - Destination IP hashing
- Token
- LRTM

Can I achieve the Web farm security by implementing load balancing using the NetScaler appliance?

Yes. You can achieve Web farm security by implementing load balancing using the NetScaler appliance. NetScaler appliance enables you to implement the following options of the load balancing feature:

- **IP Address hiding:** Enables you to install the actual servers to be on private IP address space for security reasons and for IP address conservation. This process is transparent to the end-user because the NetScaler appliance accepts requests on behalf of the server. While in the address hiding mode, the appliance completely isolates the two networks. Therefore, a client can access a service running on the private subnet, such as FTP or a Telnet server, through a different VIP on the appliance for that service.
- **Port Mapping:** Enables the actual TCP services to be hosted on non-standard ports for security reasons. This process is transparent to the end-user as the NetScaler appliance accepts requests on behalf of the server on the standard advertised IP address and port number.

What are the various devices that I can use to load balance with a NetScaler appliance?

You can load balance the following devices with a NetScaler appliance:

- Server farms
- Caches or Reverse Proxies
- Firewall devices

- Intrusion detection systems
- SSL offload devices
- Compression devices
- Content Inspection servers

Why do I implement the load balancing feature for the website?

You can implement the Load balancing feature for the website to take the following advantages:

- Reduce the response time: When you implement the load balancing feature for the website, one of the major benefits is the boost you can look forward to in load time. With two or more servers sharing the load of the web traffic, each of the servers runs less traffic load than a single server alone. This means there are more resources available to fulfill the client requests. This results in a faster website.
- Redundancy: Implementing the load balancing feature introduces a bit of redundancy. For example, if the website is balanced across three servers and one of them does not respond at all, the other two can keep running and the website visitors do not even notice any downtime. Any load balancing solution immediately stops sending traffic to the back-end server that is not available.

Why do I need to disable the Mac Based Forwarding (MBF) option for Link Load Balancing (LLB)?

- If you enable the MBF option, the NetScaler appliance considers that the incoming traffic from the client and the outgoing traffic to the same client flow through the same upstream router. However, the LLB feature requires the best path to be chosen for the return traffic.
- Enabling the MBF option breaks this topology design by sending the outgoing traffic through the router that forwarded the incoming client traffic.

Networking

May 2, 2023

The following topics provide a conceptual reference and instructions for configuring the various networking components on the NetScaler appliance.

IP Addressing	Learn the various types of NetScaler owned IP addresses and how to create, customize, and remove them.
Interfaces	Configure some of the basic network configurations that must be done to get started.
Access Control Lists (ACLs)	Configure the different types of Access Control Lists and how to create, customize, and remove them.
IP Routing	Learn and configure the routing functionality of the NetScaler appliance, both static and dynamic.
Internet Protocol version 6 (IPv6)	Learn how the NetScaler appliance supports IPv6.
Traffic Domains	Learn and configure traffic domains to segment network traffic for different applications.
VXLAN	Learn and configure VXLANs to meet the scalability needs in your datacenter.

IP Addressing

May 2, 2023

Before you can configure the NetScaler appliance, you must assign the NSIP address, also known as the Management IP address. You can also create other NetScaler-owned IP addresses for abstracting servers and establishing connections with the servers. In this type of configuration, the appliance serves as a proxy for the abstracted servers. You can also proxy connections by using network address translations (INAT and RNAT). When proxying connections, the appliance can behave either as a bridging (Layer 2) device or as a packet forwarding (Layer 3) device. To make packet forwarding more efficient, you can configure static ARP entries. For IPv6, you can configure neighbor discovery (ND).

Configuring NetScaler-owned IP addresses

May 2, 2023

The NetScaler-owned IP addresses—NSIP address, Virtual IP Addresses (VIPs), Subnet IP Addresses (SNIPs), and Global Server Load Balancing Site IP Addresses (GSLBIPs)—exist only on the NetScaler appliance. The NSIP uniquely identifies the NetScaler on your network, and it provides access to the appliance. A VIP is a public IP address to which a client sends requests. The NetScaler terminates the client connection at the VIP and initiates a connection with a server. This new connection uses a SNIP or a MIP as the source IP address for packets forwarded to the server. If you have multiple data centers that are geographically distributed, each data center can be identified by a unique GSLBIP. You can configure some NetScaler-owned IP addresses to provide access for management applications.

Configuring the NSIP address

May 2, 2023

The NSIP address is the IP address at which you access the NetScaler appliance for management purposes. The appliance can have only one NSIP, which is also called the management IP address. You must add this IP address when you configure the NetScaler for the first time. You cannot remove an NSIP address. For security reasons, the NSIP should be a non-routable IP address on your organization's LAN.

If you modify this address, you must reboot the NetScaler appliance. If the subnet address of the new NSIP address is different from the previous one, you must add a default route for this subnet so that the new NSIP address becomes reachable from other networks on the LAN.

Important

Configuring the NSIP address is mandatory.

Changing the NSIP address of a NetScaler appliance consists of the following tasks:

- Change the NSIP address.
- Add a default route for the subnet address of the NSIP address, if one is not present.
- Save the configuration.
- Restart the appliance.

Command Line Procedures

To change the NSIP address by using the CLI:

At the command prompt, type:

- **set ns config -IPAddress** <ip_addr> **-netmask** <netmask>
- **show ns config**

To add a default route by using the CLI:

At the command prompt, type:

- **add route 0 0** <gateway IP address>
- **show route**

To save the configuration by using the CLI:

At the command prompt, type:

- **save config**

To restart the NetScaler appliance by using the CLI:

At the command prompt, type:

- **reboot**

GUI Procedures

To configure the NSIP address by using the GUI:

1. Click the gear icon in the top-right corner of the **Configuration** page.
2. Click the **NSIP address** pane.
3. On the **NSIP address** page, set the following parameters, and then click **Done**:
 - NSIP address
 - Netmask

To add a default route by using the GUI:

Navigate to **System > Network > Routes** and, on the **Basic** tab, add a default route with the following parameter settings, and then click **Create**.

- Network (set to zero)
- Netmask (set to zero)
- Gateway (IP address of the gateway)

To restart the NetScaler by using the GUI:

1. On the **System Information** tab page of the **System** node, click **Reboot**.
2. When prompted to reboot, select **Save Configuration** to make sure that you do not lose any configurations.

Sample configuration

In the following example, the NSIP address of a NetScaler appliance is changed to 192.0.2.90, which has a different subnet address (192.0.2.0/24) than the previous NSIP address. Therefore, a default route is added for this subnet, so that the new NSIP address becomes reachable from other networks.

```
1 > set nsconfig -ipAddress 192.0.2.90 -netmask 255.255.255.0
2
3   Warning: The configuration must be saved and the system rebooted for
      these settings to take effect
4 > add route 0 0 192.0.2.1
5
6   Warning: The configuration must be saved and the system rebooted for
      these settings to take effect
7 > save config
8
9   Done
10 > reboot
```

Configuring and Managing Virtual IP (VIP) Addresses

May 2, 2023

Configuration of a virtual server IP (VIP) address is not mandatory during initial configuration of the NetScaler. When you configure load balancing, you assign VIP addresses to virtual servers.

For more information about configuring a load balancing setup, see [Load Balancing](#).

In some situations, you need to customize VIP attributes or enable or disable a VIP address. A VIP address is usually associated with a virtual server, and some of the VIP attributes are customized to meet the requirements of the virtual server. You can host the same virtual server on multiple NetScaler appliances residing on the same broadcast domain, by using ARP and ICMP attributes. After you add a VIP (or any IP address), the appliance sends, and then responds to, ARP requests. VIPs are the only NetScaler-owned IP addresses that can be disabled. When a VIP address is disabled, the virtual server using it goes down and does not respond to ARP, ICMP, or L4 service requests. As an alternative to creating VIP addresses one at a time, you can specify a consecutive range of VIP addresses.

To create a VIP address by using the CLI:

At the command prompt, type:

- `add ns ip <IPAddress> <netmask> -type <type>`
- `show ns ip <IPAddress>`

Example:

```
1 > add ns ip 10.102.29.59 255.255.255.0 -type VIP
2 Done
```

To create a range of VIP addresses by using the CLI:

At the command prompt, type:

- add ns ip <IPAddress> <netmask> -type <type>
- show ns ip <IPAddress>

Example:

```
1 > add ns ip 10.102.29.[60-64] 255.255.255.0 -type VIP
2 ip "10.102.29.60" added
3 ip "10.102.29.61" added
4 ip "10.102.29.62" added
5 ip "10.102.29.63" added
6 ip "10.102.29.64" added
7 Done
```

To enable or disable an IPv4 VIP address by using the CLI:

At the command prompt, type one of the following sets of commands to enable or disable a VIP and verify the configuration:

- enable ns ip <IPAddress>
- show ns ip <IPAddress>
- disable ns ip <IPAddress>
- show ns ip <IPAddress>

Example:

```
1 > enable ns ip 10.102.29.79
2 Done
3 > show ns ip 10.102.29.79
4
5 IP: 10.102.29.79
6 Netmask: 255.255.255.255
7 Type: VIP
8 state: Enabled
9 arp: Enabled
10 icmp: Enabled
11 vserver: Enabled
12 management access: Disabled
13 telnet: Disabled
14 ftp: Disabled
15 ssh: Disabled
16 gui: Disabled
17 snmp: Disabled
18 Restrict access: Disabled
```

```
19         dynamic routing: Disabled
20         hostroute: Disabled
21     Done
22 > disable ns ip 10.102.29.79
23     Done
24 > show ns ip 10.102.29.79
25
26     IP: 10.102.29.79
27     Netmask: 255.255.255.255
28     Type: VIP
29     state: Disabled
30     arp: Enabled
31     icmp: Enabled
32     vserver: Enabled
33     management access: Disabled
34         telnet: Disabled
35         ftp: Disabled
36         ssh: Disabled
37         gui: Disabled
38         snmp: Disabled
39     Restrict access: Disabled
40     dynamic routing: Disabled
41     hostroute: Disabled
42
43     Done
```

To configure a VIP address by using the GUI:

Navigate to **System > Network > IPs > IPV4s**, and add a new IP address or edit an existing address.

To create a range of VIP addresses by using the GUI:

1. Navigate to **System > Network > IPs > IPV4s**.
2. In the **Action** list, select **Add Range**.

To enable or disable a VIP address by using the GUI:

1. Navigate to **System > Network > IPs > IPV4s**.
2. Do one of the following:
 - Select a VIP address.
 - Hold down the **Ctrl** key and select multiple server address entries.
 - Hold down the **Shift** key and select a range of server address entries.
 - Select all the addresses by selecting the checkbox on the left side of the header row.
3. From the **Action** list, select **Disable** or **Enable**.

Detecting a NetScaler Appliance in a UDP Load Balancing Setup through TTL Updates

The following table displays how a NetScaler appliance handles the TTL value of received packets in different functionalities.

Functionality	TTL value
Virtual Server	TTL is set to 255 when forwarding the request to the backend servers. TTL is decremented by 1 when forwarding the response to the client.
L2 Mode	TTL is not changed.
L3 Mode	TTL is set to 255.
INAT	TTL is set to 255 when forwarding the request to the backend server. TTL is decremented by 1 when forwarding the response to the client.

Some enterprises/scenarios running a monitoring application requires the NetScaler appliance of a load balancing setup to be detected as one of the hop in a traceroute. A NetScaler appliance of a load balancing setup is not detected in a traceroute because the appliance, by default, sets the TTL value to 255 instead of decrementing it when forwarding the request to a backend server.

To meet this requirement, **Decrement TTL** parameter of a VIP address can be used. This parameter applies to all UDP virtual servers using this VIP.

When you enable the **Decrement TTL** parameter of a VIP, the NetScaler appliance decrements the TTL value by 1 instead of setting it to 255 when forwarding requests, which are received on the UDP virtual servers that uses this VIP.

Monitoring applications using traceroute data can now detect the presence of a NetScaler appliance of a UDP load balancing setup.

Before You Begin

Before you begin configuring a NetScaler appliance to be detected in a traceroute of a load balancing setup, note the following points:

- Decrement TTL parameter is supported only for UDP load balancing virtual servers.
- Decrement TTL parameter is supported for IPv4 VIP as well as IPv6 VIP (VIP6) addresses.
- Decrement TTL parameter is supported for standalone NetScaler appliances as well as for high availability (HA) and cluster setups.

Configuration Steps

Configuring a NetScaler appliance to be detected in a traceroute of a UDP load balancing setup consists of the following tasks:

- Create a UDP load balancing configuration
- Enable the Decrement TTL parameter for the VIP address

CLI Procedures

To enable the decrement TTL option for a VIP address by using the CLI:

- To enable the decrement TTL option for a VIP address while adding the VIP address, at the command prompt, type:
 - **add ns ip** <ip> <mask> **-type VIP -decrementTTL ENABLED**
 - **show ns ip** <VIP address>
- To enable the decrement TTL option for an existing VIP address, at the command prompt, type:
 - **set ns ip** <ip> <mask> **-decrementTTL ENABLED**
 - **show ns ip** <VIP address>

To enable the decrement TTL option for a VIP6 address by using the CLI:

- To enable the decrement TTL option for a VIP6 address while adding the VIP6 address, at the command prompt, type:
 - **add ns ip6** <IP6/prefix> <mask> **-type VIP -decrementTTL ENABLED**
 - **show ns ip6** <VIP6/prefix>
- To enable the decrement TTL option for an existing VIP6 address, at the command prompt, type:
 - **set ns ip6** <ip6/prefix> <mask> **-decrementTTL ENABLED**
 - **show ns ip6** <VIP6 address>

```
1 > add ns ip 203.0.113.30 -type VIP -decrementTTL ENABLED
2   Done
3
4 > add ns ip6 2001:DB8:5001::30 -type VIP -decrementTTL ENABLED
5   Done
```

GUI Procedures

To enable the decrement TTL option for a VIP address by using the GUI:

Navigate to **System > Network > IPs > IPv4s**, and enable the **Decrement TTL** parameter while adding a new VIP address or editing an existing address.

To enable the decrement TTL option for a VIP6 address by using the GUI:

Navigate to **System > Network > IPs > IPv6s**, and enable the **Decrement TTL** parameter while adding a new VIP6 address or editing an existing address.

Configuring ARP response Suppression for Virtual IP addresses (VIPs)

May 2, 2023

You can configure the NetScaler appliance to respond or not respond to ARP requests for a Virtual IP (VIP) address on the basis of the state of the virtual servers associated with that VIP.

For example, if virtual servers V1, of type HTTP, and V2, of type HTTPs, share VIP address 10.102.29.45 on a NetScaler appliance, you can configure the appliance to not respond to any ARP request for VIP 10.102.29.45 if both V1 and V2 are in the DOWN state.

The following three options are available for configuring ARP-response suppression for a virtual IP address.

- **NONE.** The NetScaler appliance responds to any ARP request for the VIP address, irrespective of the state of the virtual servers associated with the address.
- **ONE VSERVER.** The NetScaler appliance responds to any ARP request for the VIP address if at least one of the associated virtual servers is in UP state.
- **ALL VSERVER.** The NetScaler appliance responds to any ARP request for the VIP address if all of the associated virtual servers are in UP state.

Following table shows the sample behavior of NetScaler appliance for a VIP configured with two virtual servers:

Associated virtual servers for a VIP	STATE 1	STATE 2	STATE 3	STATE 4
NONE				
V1	UP	UP	DOWN	DOWN
V2	UP	DOWN	UP	DOWN
Respond to an ARP request for this VIP?	Yes	Yes	Yes	Yes
ONE VSERVER				


Associated virtual servers for a VIP	STATE 1	STATE 2	STATE 3	STATE 4
V1	UP	UP	DOWN	DOWN
V2	UP	DOWN	UP	DOWN
Respond to an ARP request for this VIP?	Yes	Yes	Yes	No
ALL VSERVER				
V1	UP	UP	DOWN	DOWN
V2	UP	DOWN	UP	DOWN
Respond to an ARP request for this VIP?	Yes	No	No	No

Consider an example where you want to test the performance of two virtual servers, V1 and V2, which have the same VIP address but are of different types and are each configured on NetScaler appliances NS1 and NS2. Let's call the shared VIP address *VIP1*.

V1 load balances servers S1, S2, and S3. V2 load balances servers S4 and S5.

On both NS1 and NS2, for VIP1, the ARP suppression parameter is set to ALL_VSERVER. If you want to test the performance of V1 and V2 on NS1, you must manually disable V1 and V2 on NS2, so that NS2 does not respond to any ARP request for VIP1.

Figure 1.

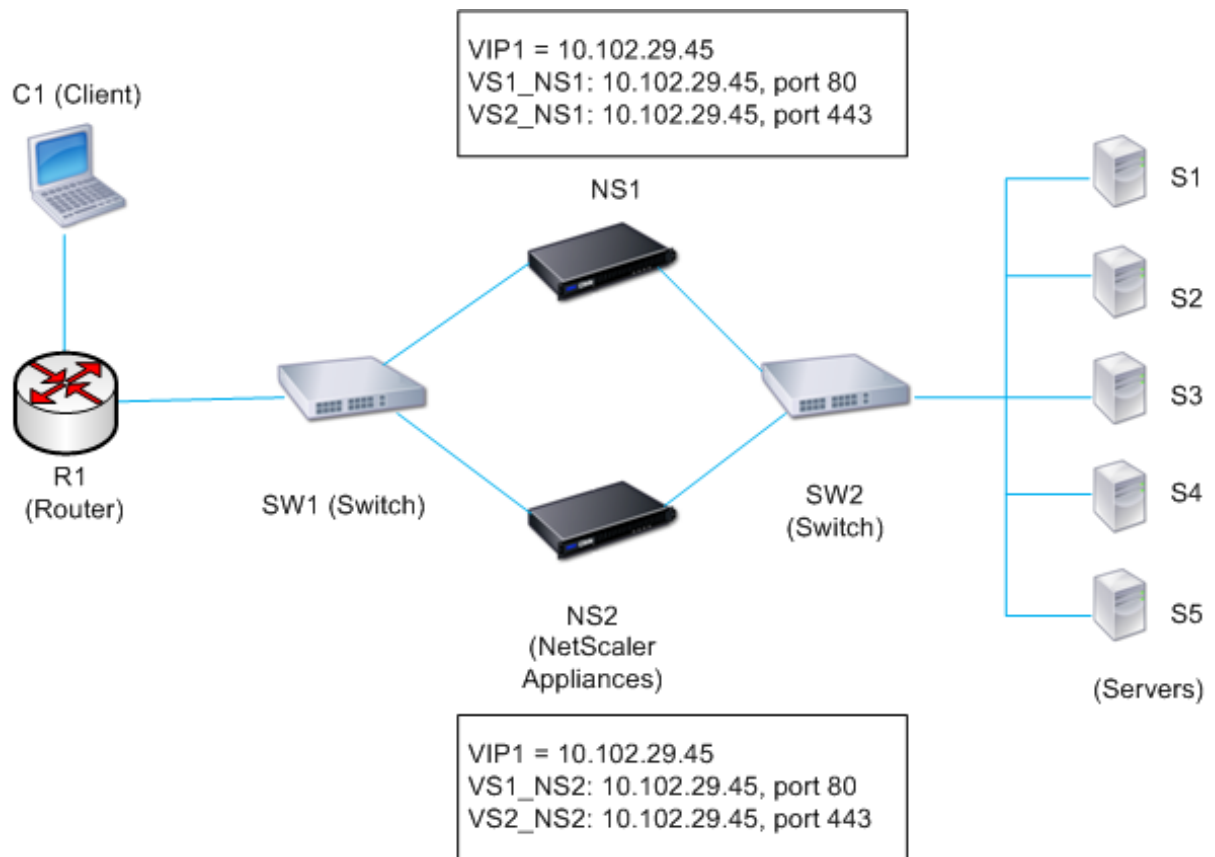

The execution flow is as follows:

1. Client C1 sends a request to V1. The request reaches R1.
2. R1 does not have an APR entry for the IP address (VIP1) of V1, so R1 broadcasts an ARP request for VIP1.
3. NS1 replies with source MAC address MAC1 and source IP address VIP1. NS2 does not reply to the ARP request.
4. SW1 learns the port for VIP1 from the ARP reply and updates its bridge table, and R1 updates the ARP entry with MAC1 and VIP1.
5. R1 forwards the packet to address VIP1 on NS1.
6. NS1's load balancing algorithm selects server S2, and NS1 opens a connection between one of its SNIP addresses and S2. When S2 sends a response to the client, the response returns by the same path.
7. Now you want to test the performance of V1 and V2 on NS2, so you enable V1 and V2 on NS2 and disable them on NS1. NS2 now broadcasts an ARP message for VIP1. In the message, MAC2 is the source MAC address and VIP1 is the source IP address.
8. SW1 learns the port number for reaching MAC2 from the ARP broadcast and updates its bridge table to send subsequent client requests for VIP1 to NS2. R1 updates its ARP table.
9. Now suppose the ARP entry for VIP1 times out in the ARP table of R1, and client C1 sends a request for V1. Because R1 does not have an APR entry for VIP1, it broadcasts an ARP request

for VIP1.

10. NS2 replies with a source MAC address and VIP1 as the source IP address. NS1 does not reply to the ARP request.

To configure ARP response suppression by using the CLI:

At the command prompt, type:

- **set ns ip -arpResponse** <arpResponse>]
- **sh ns ip** <IPAddress>

Example:

```
1 > set ns ip 10.102.29.96 -arpResponse ALL_VSERVERS
2 Done
```

To configure ARP response suppression by using the GUI:

1. Navigate to **System > Network > IPs > IPV4s**.
2. Open an IP address entry and select the type of ARP Response.

Configuring Subnet IP Addresses (SNIPs)

May 2, 2023

A subnet IP address (SNIP) is a NetScaler owned IP address that is used by the NetScaler to communicate with the servers.

The NetScaler uses the subnet IP address as a source IP address to proxy client connections to servers. It also uses the subnet IP address when generating its own packets, such as packets related to dynamic routing protocols, or to send monitor probes to check the health of the servers. Depending on your network topology, you might have to configure one or more SNIPs for different scenarios.

To configure a SNIP address on a NetScaler, you add the SNIP address and then enable global Use Subnet IP (USNIP) mode. As an alternative to creating SNIPs one at a time, you can specify a consecutive range of SNIPs.

To configure a SNIP address by using the CLI:

At the command prompt, type:

- **add ns ip** <IPAddress> <netmask> -type SNIP
- **show ns ip** <IPAddress>

Example:

```
1 > add ns ip 10.102.29.203 255.255.255.0 -type SNIP
2 Done
```

To create a range of SNIP addresses by using the CLI:

At the command prompt, type:

- add ns ip <IPAddress> <netmask> -type SNIP
- show ns ip <IPAddress>

Example:

```
1 > add ns ip 10.102.29.[205-209] 255.255.255.0 -type SNIP
2 ip "10.102.29.205" added
3 ip "10.102.29.206" added
4 ip "10.102.29.207" added
5 ip "10.102.29.208" added
6 ip "10.102.29.209" added
7 Done
```

To enable or disable USNIP mode by using the CLI:

At the command prompt, type one of the following commands:

- enable ns modeUSNIP
- disable ns modeUSNIP

To configure a SNIP address by using the GUI:

Navigate to System > Network > IPs > IPV4s, and add a new SNIP address or edit an existing address.

To create a range of SNIP addresses by using the GUI:

1. Navigate to System > Network > IPs > IPV4s.
2. In the Action list, select Add Range.

To enable or disable USNIP mode by using the CLI:

At the command prompt, type one of the following commands:

- enable ns mode USNIP
- disable ns mode USNIP

To enable or disable USNIP mode by using the GUI:

1. Navigate to System > Settings, in Modes and Features group, click Change modes.
2. Select or clear the Use Subnet IP option.

Using SNIPs for a Directly Connected Server Subnet


To enable communication between the NetScaler and a server that is either connected directly to the NetScaler or connected through only an L2 switch, you must configure a subnet IP address that belongs to the subnet of the server. You must configure at least one subnet IP address for each directly connected subnet, except for the directly connected management subnet that is connected through NSIP.

Consider an example of a load balancing setup in which load balancing virtual server LBVS1 on NetScaler NS1 is used to load balance servers S1 and S2, which are connected to NS1 through L2 switch SW1. S1 and S2 belong to the same subnet.

SNIP address SNIP1, which belongs to the same subnet as S1 and S2, is configured on NS1. As soon as SNIP1 is configured, NS1 broadcasts ARP packets for SNIP1.

Services SVC-S1 and SVC-S2 on NS1 represent S1 and S2. As soon as these services are configured, NS1 broadcasts ARP requests for S1 and S2 to resolve IP-to-MAC mapping. After S1 and S2 respond, NS1 sends them monitoring probes at regular intervals, from address SNIP1, to check their health.

For more information about configuring load balancing on a NetScaler, see [Load Balancing](#).

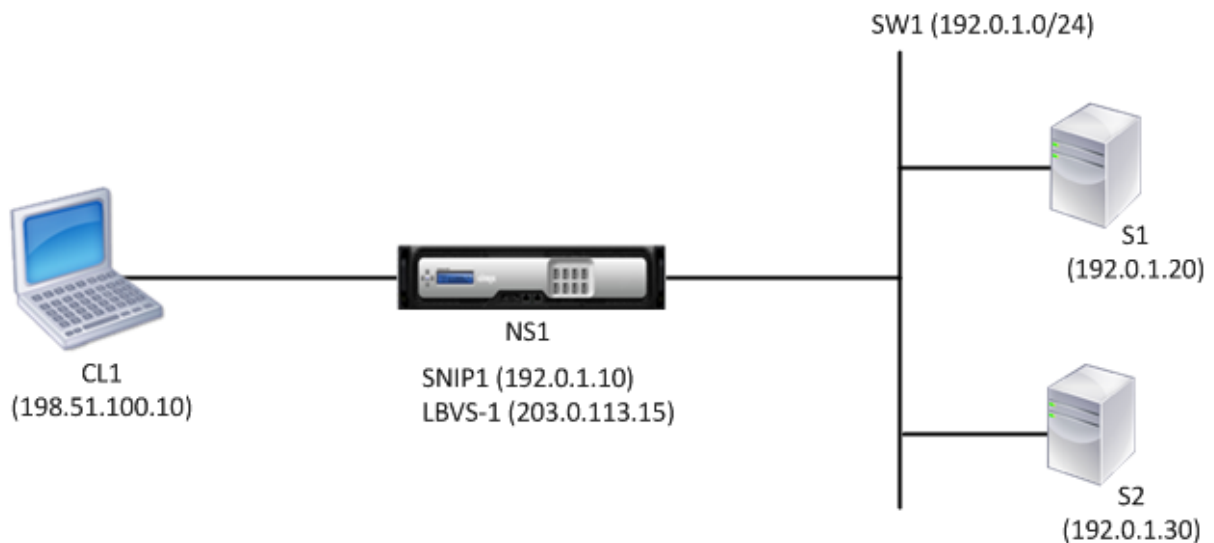

Following is the traffic flow in this example:

1. Client C1 sends a request packet to LBVS-1. The request packet has:
 - Source IP = IP address of the client (198.51.100.10)
 - Destination IP = IP address of LBVS-1 (203.0.113.15)
2. LBVS1 of NS1 receives the request packet.
3. LBVS1's load balancing algorithm selects server S2.
4. Because S2 is directly connected to NS1, and SNIP1 (192.0.1.10) is the only IP address on NS1 that belongs to the same subnet as S2, NS1 opens a connection between SNIP1 and S2.

5. NS1 sends the request packet to S2 from SNIP1. The request packet has:
 - Source IP = SNIP1 (192.0.1.10)
 - Destination IP = IP address of S2 (192.0.1.30)
6. S2's response returns by the same path.

Using SNIPs for Server Subnets Connected through a Router

To enable communication between the NetScaler and servers in subnets connected through a router, you must configure at least one subnet IP address that belongs to the subnet of the directly connected interface to the router. The ADC uses this subnet IP address to communicate with servers in subnets that can be reached through the router.

Consider an example of a load balancing setup in which load balancing virtual server LBVS1 on NetScaler NS1 is used to load balance servers S1, S2, S3, and S4, which are connected to NS1 through router R1.

S1 and S2 belong to same subnet, 192.0.2.0/24, and are connected to R1 through L2 switch SW1. S3 and S4 belong to a different subnet, 192.0.3.0/24, and are connected to R1 through L2 switch SW2.

NetScaler NS1 is connected to router R1 through subnet 192.0.1.0/24. SNIP address SNIP1, which belongs to the same subnet as the directly connected interface to the router (192.0.1.0/24), is configured on NS1. NS1 uses this address to communicate with servers S1 and S2, and with servers S3 and S4.


For more information about configuring load balancing on a NetScaler, see [Load Balancing](#).

As soon as address SNIP1 is configured, NS1 broadcasts ARP announcement packets for SNIP1.

NS1's routing table consists of route entries for S1, S2, S3, and S4 through R1. These route entries are either static route entries or advertised by R1 to NS1, using dynamic routing protocols.

Services SVC-S1, SVC-S2, SVC-S3, and SVC-S4 on NS1 represent servers S1, S2, S3, and S4. NS1 finds, in its routing tables, that these servers are reachable through R1. NS1 sends them monitoring probes at regular intervals, from address SNIP1, to check their health.

For more information about IP routing on a NetScaler, see [IP Routing](#).

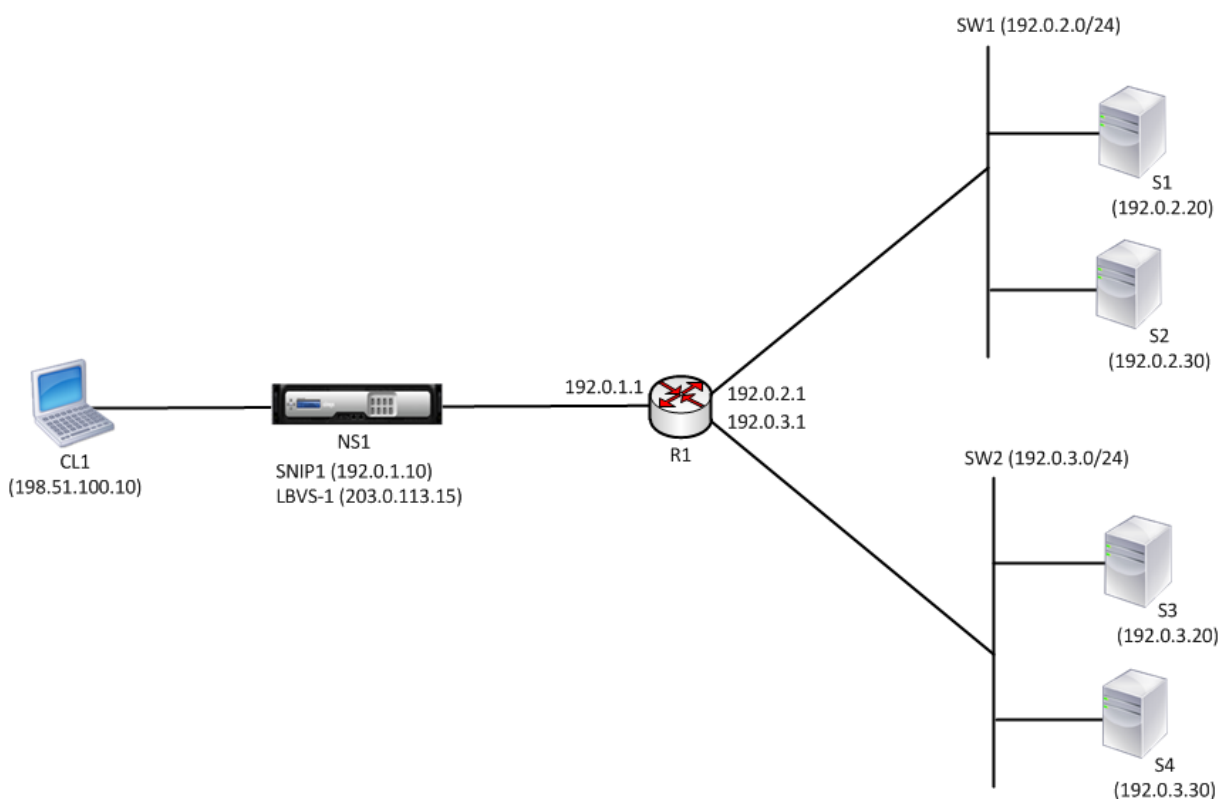

Following is the traffic flow in this example:

1. Client C1 sends a request packet to LBVS-1. The request packet has:
 - Source IP = IP address of the client (198.51.100.10)
 - Destination IP = IP address of LBVS-1 (203.0.113.15)
2. LBVS1 of NS1 receives the request packet.
3. LBVS1's load balancing algorithm selects server S3.
4. NS1 checks its routing table and finds that S3 is reachable through R1. SNIP1 (192.0.1.10) is the only IP address on NS1 that belongs to the same subnet as router R1, NS1 opens a connection between SNIP1 and S3 through R1.
5. NS1 sends the request packet to R1 from SNIP1. The request packet has:
 - Source IP address = SNIP1 (192.0.1.10)
 - Destination IP address = IP address of S3 (192.0.3.20)
6. The request reaches R1, which checks its routing table and forwards the request packet to S3.
7. S3's response returns by the same path.

Using SNIPs for Multiple Server Subnets (VLANs) on an L2 Switch

When you have multiple server subnets (VLANs) on an L2 switch that is connected to a NetScaler, you must configure at least one SNIP address for each of the server subnets, so that the NetScaler can

communicate with these server subnets.


Consider an example of a load balancing setup in which load balancing virtual server LBVS1 on NetScaler NS1 is used to load balance servers S1 and S2, which are connected to NS1 through L2 switch SW1. S1 and S2 belong to different subnets and are part of VLAN 10 and VLAN20, respectively. The link between NS1 and SW1 is a trunk link and is shared by VLAN10 and VLAN20.

For more information about configuring load balancing on a NetScaler, see [Load Balancing](#).

Subnet IP addresses SNIP1 (for reference purposes only) and SNIP2 (for reference purposes only) are configured on NS1. NS1 uses SNIP1 (on VLAN 10) to communicate with server S1, and SNIP2 (on VLAN 20) to communicate with S2. As soon as SNIP1 and SNIP2 are configured, NS1 broadcasts ARP announcement packets for SNIP1 and SNIP2.

For more information about configuring VLANs on a NetScaler, see [Configuring a VLAN](#).

Services SVC-S1 and SVC-S2 on NS1 represent servers S1 and S2. As soon as these services are configured, NS1 broadcasts ARP requests for them. After S1 and S2 respond, NS1 sends them monitoring probes at regular intervals to check their health. NS1 sends monitoring probes to S1 from address SNIP1, and to S2 from address SNIP2.

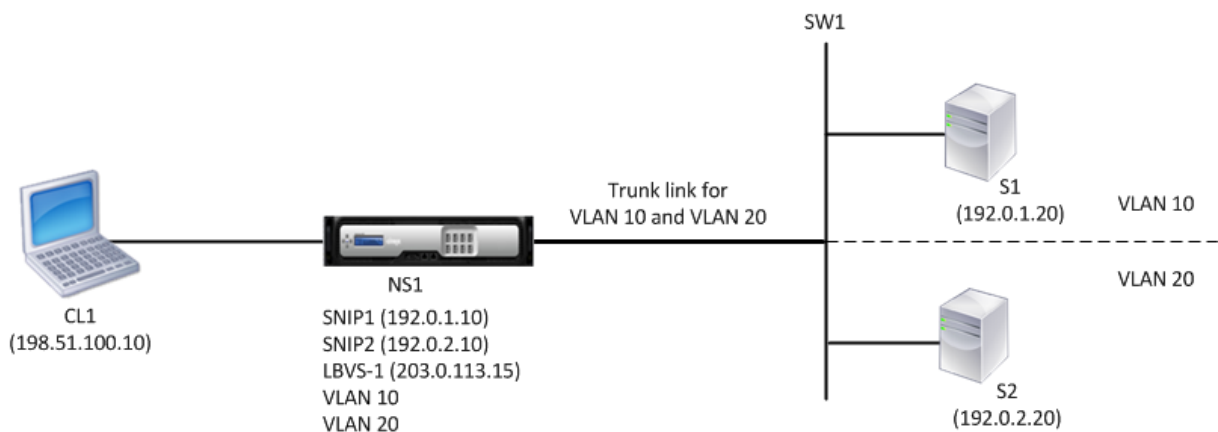

Following is the traffic flow in this example:

1. Client C1 sends a request packet to LBVS-1. The request packet has:
 - Source IP = IP address of the client (198.51.100.10)
 - Destination IP = IP address of LBVS-1 (203.0.113.15)
2. LBVS1 of NS1 receives the request packet.
3. LBVS1's load balancing algorithm selects server S2.
4. Because S2 is directly connected to NS1, and SNIP2 (192.0.2.10) is the only IP address on NS1 that belongs to the same subnet as S2, NS1 opens a connection between SNIP2 and S2.

Note: If S1 is selected, NS1 opens a connection between SNIP1 and S1.
5. NS1 sends the request packet to S2 from SNIP2. The request packet has:

- Source IP = SNIP1 (192.0.2.10)
 - Destination IP = IP address of S2 (192.0.2.20)
6. S2's response returns by the same path.

Configuring GSLB Site IP Addresses (GSLBIP)

May 2, 2023

A GSLB site IP (GSLBIP) address is an IP address associated with a GSLB site. It is not mandatory to specify a GSLBIP address when you initially configure the NetScaler appliance. A GSLBIP address is used only when you create a GSLB site.

For more information about creating a GSLB site IP address, see [Global Server Load Balancing](#).

Removing a NetScaler-owned IP address

May 2, 2023

You can remove any IP address except the NSIP. The following table provides information about the processes you must follow to remove the various types of IP addresses. Before removing a VIP, remove the associated virtual server.

IP address type	Implications
Subnet IP address (SNIP)	If IP address being removed is the last IP address in the subnet, the associated route is deleted from the route table. If the IP address being removed is the gateway in the corresponding route entry, the gateway for that subnet route is changed to another NetScaler-owned IP address.
Virtual Server IP address (VIP)	Before removing a VIP, you must first remove the virtual server associated with it. For information about removing the virtual server, see Load Balancing .

IP address type	Implications
GSLB-Site-IP address	Before removing a GSLB site IP address, you must remove the site associated with it. For information about removing the site, see Global Server Load Balancing .

To remove an IP address by using the CLI:

At the command prompt, type:

```
rm ns ip <IPAddress>
```

Example:

```
1 > rm ns ip 10.102.29.54
2 Done
```

To remove an IP address by using the GUI:

Navigate to **System > Network > IPs > IPV4s**, delete the IP address.

Configuring Application Access Controls

May 2, 2023

Application access controls, also known as management access controls, form a unified mechanism for managing user authentication and implementing rules that determine user access to applications and data. You can configure SNIPs to provide access for management applications. Management access for the NSIP is enabled by default and cannot be disabled. You can, however, control it by using ACLs.

For information about using ACLs, see [Access Control Lists \(ACLs\)](#).

The NetScaler appliance does not support management access to VIPs.

The following table provides a summary of the interaction between management access and specific service settings for Telnet.

Management Access	Telnet (State Configured on the NetScaler)	Telnet (Effective State at the IP Level)
Enable	Enable	Enable

Management Access	Telnet (State Configured on the NetScaler)	Telnet (Effective State at the IP Level)
Enable	Disable	Disable
Disable	Enable	Disable
Disable	Disable	Disable

The following table provides an overview of the IP addresses used as source IP addresses in outbound traffic.

Application/ IP	NSIP	SNIP	VIP
ARP	Yes	Yes	No
Server side traffic	No	Yes	No
RNAT	No	Yes	Yes
ICMP PING	Yes	Yes	No
Dynamic routing	Yes	Yes	Yes

The following table provides an overview of the applications available on these IP addresses.

Application/ IP	NSIP	SNIP	VIP
SNMP	Yes	Yes	Yes
System access	Yes	Yes	No

You can access and manage the NetScaler by using applications such as Telnet, SSH, GUI, and FTP.

Note: Telnet and FTP are disabled on the NetScaler for security reasons. To enable them, contact the customer support. After the applications are enabled, you can apply the controls at the IP level.

To configure the NetScaler to respond to these applications, you need to enable the specific management applications. If you disable management access for an IP address, existing connections that use the IP address are not terminated, but no new connections can be initiated.

Also, the non-management applications running on the underlying FreeBSD operating system are open to protocol attacks, and these applications do not take advantage of the NetScaler appliance's attack prevention capabilities.

You can block access to these non-management applications on a SNIP or NSIP. When access is blocked, a user connecting to a NetScaler by using the SNIP or NSIP is not be able to access the non-management applications running on the underlying operating system.

To configure management access for an IP address by using the CLI:

At the command prompt, type:

```
**set ns ip** <IPAddress> -mgmtAccess <value> -**telnet** <value> -**ftp** <value> -**gui** <value>
-**ssh** <value> -**snmp** <value> -**restrictAccess** (**ENABLED** | **DISABLED**)
```

Example:

```
1 > set ns ip 10.102.29.54 -mgmtAccess enabled -restrictAccess ENABLED
2 Done
```

To enable management access for an IP address by using the GUI:

1. Navigate to **System > Network > IPs > IPV4s**.
2. Open an IP address entry, and select the **Enable Management Access control** to support the listed applications option.

Enable secure access to NetScaler GUI using a subnet IP address(SNIP)

Secure access to NetScaler GUI is enabled by default for the NetScaler IP (NSIP). You can also enable secure access to the NetScaler appliance by using a subnet IP address of the appliance.

After configuring an SNIP address for secure access to a high availability pair, the secure access is available to the primary appliance, if you access the SNIP address.

NetScaler CLI procedure

To enable secure access to NetScaler GUI using a subnet IP address(SNIP) by using the CLI:

At the command prompt, type:

```
set ns ip <SNIP_Address> -type SNIP -gui SECUREONLY -mgmtAccess ENABLED
```

Example:

```
1 > set ns ip 203.0.113.99 -mgmtAccess enabled -restrictAccess ENABLED
2
3 Done
```

How the NetScaler Proxies Connections

May 2, 2023

When a client initiates a connection, the NetScaler appliance terminates the client connection, initiates a connection to an appropriate server, and sends the packet to the server. The appliance does not perform this action for service type UDP or ANY.

For more information about service types, see [Load Balancing](#).

You can configure the NetScaler to process the packet before initiating the connection with a server. The default behavior is to change the source and destination IP addresses of a packet before sending the packet to the server. You can configure the NetScaler to retain the source IP address of the packets by enabling Use Source IP mode.

How the Destination IP Address Is Selected

Traffic sent to the NetScaler appliance can be sent to a virtual server or to a service. The appliance handles traffic to virtual servers and services differently. The NetScaler terminates traffic received at a virtual server IP (VIP) address and changes the destination IP address to the IP address of the server before forwarding the traffic to the server, as shown in the following diagram.

Figure 1. Proxying Connections to VIPs



Svr: Server
NS: NetScaler
NSVIP: NetScaler VIP
MIP: NetScaler Mapped IP

Packets destined for a service are sent directly to the appropriate server, and the NetScaler does not modify the destination IP addresses. In this case, the NetScaler functions as a proxy.

How the Source IP Address Is Selected

When the NetScaler appliance communicates with the physical servers or peer devices, by default, it does not use the IP address of the client. NetScaler maintains a pool of subnet IP addresses (SNIPs), and selects an IP address from this pool to use as the source IP address of a connection to the physical server. Depending on the subnet in which the physical server is placed, NetScaler selects a specific SNIP address.

Note: If the Use Source IP (USIP) option is enabled, appliance uses the IP address of the client.

Enable Use Source IP Mode

May 2, 2023

When the NetScaler appliance communicates with the physical servers or peer devices, by default, it uses one of its own IP addresses as the source IP. The appliance maintains a pool of subnet IP addresses (SNIPs), and selects an IP address from this pool to use as the source IP address for a connection to the physical server. The decision of selecting a SNIP address depends on the subnet in which the physical server resides.

If necessary, you can configure the NetScaler appliance to use the client's IP address as source IP. Some applications need the actual IP address of the client. The following use cases are a few examples:

- Client's IP address in the web access log is used for billing purposes or usage analysis.
- Client's IP address is used to determine the country of origin of the client or the originating ISP of the client. For example, many search engines such as Google provide content relevant to the location to which the user belongs.
- The application must know the client's IP address to verify that the request is from a trustworthy source.
- Sometimes, even though an application server does not need the client's IP address, a firewall placed between the application server and the NetScaler may need the client's IP address for filtering the traffic.

Enable Use Source IP mode (USIP) mode if you want the NetScaler to use the client's IP address for communication with the servers.

The following figure shows how the appliance uses IP addresses in USIP mode.



Before you begin

Before you enable USIP mode, note the following points:

- Enable USIP in the following situations:
 - Load balancing of Intrusion Detection System (IDS) servers
 - SMTP load balancing
 - Stateless connection failover
 - Sessionless load balancing
 - If you use the Direct Server Return (DSR) mode
- The USIP global setting applies only to services that are created after the USIP global setting is made. In other words, the USIP global setting does not apply to the existing services when the USIP global setting is made. For example, Disabling USIP globally does not disable USIP on the existing services. But it stops the subsequently created services from having USIP enabled automatically.

To enable or disable USIP on a set of existing services, you need to enable or disable USIP on each of these services.

- When USIP is enabled, you must set server's gateway to one of the NetScaler owned IP addresses (of type Subnet IP (SNIP)) so that server's response always go through the NetScaler appliance.
- If you enable USIP, set the idle timeout for server connections to a value lower than the default value, so that idle connections are cleared quickly on the server side.
- For transparent cache redirection, if you enable USIP, enable L2CONN also.
- Because HTTP connections are not reused when USIP is enabled, a large number of server-side connections may accumulate. Idle server connections can block connections for other clients. Therefore, set limits on maximum number of connections to a service. Citrix also recommends setting the HTTP server time-out value, for a service on which USIP is enabled, to a value lower than the default, so that idle connections are cleared quickly on the server side.
- As an alternative to USIP mode, you have the option of inserting the client's IP address (CIP) in the request header of the server-side connection for an application server that needs the client's IP address.
- In earlier NetScaler releases, USIP mode had the following source-port options for server-side connections:
 - **Use the client's port.** With this option, connections cannot be reused. For every request from the client, a new connection is made with the physical server.

- **Use proxy port.** With this option, connection reuse is possible for all requests from the same client.

In the later NetScaler releases, if USIP is enabled, the default is to use a proxy port for server-side connections and not reuse connections. Not reusing connections may not affect the speed of establishing connections.

By default, the Use Proxy Port option is enabled if the USIP mode is enabled.

Note: If you enable the USIP mode, it is recommended to enable the Use Proxy Port option.

For more information about the Use Proxy Port option, see [Configure the source port for server-side connections](#).

Configuration Steps

Enable Use Source IP mode (USIP) mode if you want NetScaler to use the client's IP address for communication with the servers. By default, USIP mode is disabled. USIP mode can be enabled globally on the NetScaler or on a specific service. If you enable it globally, USIP is enabled by default for all subsequently created services. If you enable USIP for a specific service, the client's IP address is used only for the traffic directed to that service.

CLI procedures

To globally enable or disable USIP mode by using the CLI:

At the command prompt, type one of the following commands:

- **enable ns mode USIP**
- **disable ns mode USIP**

To enable USIP mode for a service by using the CLI:

At the command prompt, type:

```
**set service** <name>@ -**usip** (**YES** | **NO**)
```

Example:

```
1 > set service Service-HTTP-1 -usip YES
2 Done
```

GUI procedures

To globally enable USIP mode by using the GUI:

1. Navigate to **System > Settings**, in **Modes and Features** group, click **Change Modes**.
2. Select the **Use Source IP** option.

To enable USIP mode for a service by using the GUI:

1. Navigate to **Traffic Management > Load Balancing > Services**, and edit a service.
2. In **Advanced Settings**, select **Service Settings**, and select **Use Source IP Address**.

Configuring Network Address Translation

May 2, 2023

Network address translation (NAT) involves modification of the source and/or destination IP addresses and/or the TCP/UDP port numbers of IP packets that pass through the NetScaler appliance. Enabling NAT on the appliance enhances the security of your private network, and protects it from a public network such as the Internet, by modifying your networks source IP addresses when data passes through the NetScaler. Also, with the help of NAT entries, your entire private network can be represented by a few shared public IP addresses. The NetScaler supports the following types of network address translation:

- **Inbound NAT (INAT).** The NetScaler replaces the destination IP address in the packets generated by the client with the private IP address of the server.
- **Reverse NAT (RNAT).** The NetScaler replaces the source IP address in the packets generated by the servers with the public NAT IP addresses.

Inbound Network Address Translation

December 14, 2024

When a client sends a packet to a NetScaler appliance that is configured for Inbound Network Address Translation (INAT), the appliance translates the packet's public destination IP address to a private destination IP address and forwards the packet to the server at that address.

The following configurations are supported:

- **IPv4-IPv4 Mapping:** A public IPv4 address on the NetScaler appliance listens to connection requests on behalf of a private IPv4 server. The NetScaler appliance translates the packet's public destination IP address to the destination IP address of the server. Then the appliance forwards the packet to the server at that address.

- **IPv4-IPv6 Mapping:** A public IPv4 address on the NetScaler appliance listens to connection requests on behalf of a private IPv6 server. The NetScaler appliance creates an IPv6 request packet with the IP address of the IPv6 server as the destination IP address.
- **IPv6-IPv4 Mapping:** A public IPv6 address on the NetScaler appliance listens to connection requests on behalf of a private IPv4 server. The NetScaler appliance creates an IPv4 request packet with the IP address of the IPv4 server as the destination IP address.
- **IPv6-IPv6 Mapping:** A public IPv6 address on the NetScaler appliance listens to connection requests on behalf of a private IPv6 server. The NetScaler appliance translates the packet's public destination IP address to the destination IP address of the server. Then the appliance forwards the packet to the server at that address.

When the appliance forwards a packet to a server, the source IP address assigned to the packet is determined as follows:

- If use subnet IP (USNIP) mode is enabled and use source IP (USIP) mode is disabled, the appliance uses a subnet IP address (SNIP) as the source IP address.
- If USIP mode is enabled, and USNIP mode is disabled the appliance uses the client IP (CIP) address as the source IP address.
- If both USIP and USNIP modes are enabled, USIP mode takes precedence.
- You can also configure the NetScaler to use a unique IP address as the source IP address, by setting the proxyIP parameter.
- If none of the above modes are enabled and a unique IP address has not been specified, the NetScaler attempts to use a MIP as the source IP address.
- If both USIP and USNIP modes are enabled and a unique IP address has been specified, the order of precedence is as follows: USIP-unique IP-USNIP-MIP-Error.

To protect the NetScaler from DoS attacks, you can enable a TCP proxy. However, if other protection mechanisms are used in your network, you can disable them.

Configure INAT rules

You can create, modify, or remove an INAT entry.

CLI procedures

To create an INAT entry by using the CLI:

At the command prompt, type the following commands to create an INAT entry and verify its configuration:

- **add inat** <name> <publicIP> <privateIP> [-**tcpproxy** (**ENABLED** | **DISABLED**)] [-**ftp** (**ENABLED** | **DISABLED**)] [-**usip** (**ON** | **OFF**)] [-**usnip** (**ON** | **OFF**)] [-**proxyIP** <**ip_addr**> **ip6_addr**>]
- **show inat** [<name>]

Example:

```
1 > add inat ip4-ip4 172.16.1.2 192.168.1.1 -proxyip 10.102.29.171
2 Done
```

To modify an INAT entry by using the CLI:

To modify an INAT entry, type the `set inat` command, the name of the entry, and the parameters to be changed, with their new values.

To remove an INAT configuration by using the CLI:

At the command prompt, type:

- **rm inat** <name>

Example:

```
1 > rm inat ip4-ip4
2 Done
```

GUI procedures

To configure an INAT entry by using the GUI:

Navigate to **System > Network > NATs > INAT**, and add an INAT entry or edit an existing INAT entry.

To remove an INAT configuration by using the GUI:

Navigate to **System > Network > NATs > INAT**, delete the INAT configuration.

Connection failover for INAT rules

Connection failover or connection mirroring enables the primary node to duplicate connection and persistence information to the secondary node in a high availability. The state information of the connection is shared with the secondary node regularly when connection mirroring is enabled.

Enabling connection failover provides more reliability but it comes at the cost of some system time being used up for sharing the state information. The connection data is synchronized to the standby unit with every packet or flow state update. Hence, it must be used only at places where connection level reliability is of prime importance.

NetScaler appliance high availability setups support connection failover for INAT connections. The primary node sends INAT mappings and other INAT-related connection information to the secondary node at regular intervals. The secondary appliance uses the mapping and connection information only in the event of a failover.

When a failover occurs, the new primary node has information about the INAT connections established before the failover. Hence, it continues to serve those connections even after the failover.

From the client's perspective the failover is transparent. During the transition period, the client and server might experience a brief disruption and retransmissions. Connection failover can be enabled per INAT rule.

For enabling connection failover on an INAT rule, you enable the `connFailover` parameter of that specific RNAT rule by using CLI.

CLI procedure

To enable connection failover for an INAT rule by using the CLI:

To enable connection failover while adding an INAT rule, at the command prompt, type:

- `add inat <name> <publicIP> <privateIP> [-tcpproxy (**ENABLED** | **DISABLED**)] [-ftp (**ENABLED** | **DISABLED**)] [-usip (**ON** | **OFF**)] [-usnip (**ON** | **OFF**)] [-proxyIP <ip_addr|ipv6_addr>] -connfailover (**ENABLED** | **DISABLED**)`
- `show inat <name>`

To enable connection failover while modifying an existing INAT rule, at the command prompt, type:

```
-----  
set inat -connfailover (ENABLED  DISABLED)  
-----
```

-
- `show inat <name>`

Coexistence of INAT and Virtual Servers

May 2, 2023

If both INAT and RNAT are configured, the INAT rule takes precedence over the RNAT rule. If RNAT is configured with a network address translation IP (NAT IP) address, the NAT IP address is selected as the source IP address for that RNAT client.

The default public destination IP in an INAT configuration is the virtual IP (VIP) address of the NetScaler device. Virtual servers also use VIPs. When both INAT and a virtual server use the same IP address, the Vserver configuration overrides the INAT configuration.

Following are a few sample configuration setup scenarios and their effects.

Case	Result
You have configured a virtual server and a service to send all data packets received on a specific NetScaler port to the server directly. You have also configured INAT and enabled TCP. Configuring INAT in this manner sends all data packets received through a TCP engine before sending them to the server.	All packets received on the NetScaler, except those received on the specified port, pass through the TCP engine.
You have configured a virtual server and a service to send all data packets of service type TCP, that are received on a specific port on the NetScaler, to the server after passing through the TCP engine. You have also configured INAT and disabled TCP. Configuring INAT in this manner sends the data packets received directly to the server.	Only packets received on the specified port pass through the TCP engine.
You have configured a virtual server and a service to send all data packets received to either of two servers. You are attempting to configure INAT to send all data packets received to a different server.	The INAT configuration is not allowed.
You have configured INAT to send all received data packets directly to a server. You are attempting to configure a virtual server and a service to send all data packets received to two different servers.	The vserver configuration is not allowed.

Stateless NAT46

May 2, 2023

The stateless NAT46 feature enables communication between IPv4 and IPv6 networks through IPv4 to IPv6 packet translation, and vice versa, without maintaining any session information on the NetScaler appliance.

For a stateless NAT46 configuration, the appliance translates an IPv4 packet to IPv6 or an IPv6 packet to IPv4 as defined in RFCs 6145 and 2765.

A stateless NAT46 configuration on the NetScaler appliance has the following components:


- **IPv4-IPv6 INAT entry.** An INAT entry defining a 1:1 relationship between an IPv4 address and an IPv6 address. In other words, an IPv4 address on the appliance listens to connection requests on behalf of an IPv6 server. An IPv4 request packet for this IPv4 address is translated into an IPv6 packet, and then the IPv6 packet is sent to the IPv6 server.

The appliance translates an IPv6 response packet into an IPv4 response packet with its source IP address field set as the IPv4 address specified in the INAT entry. The translated packet is then sent to the client.

- **NAT46 IPv6 prefix.** A global IPv6 prefix of length 96 bits (128-32=96) configured on the appliance. During IPv4 packet to IPv6 packet translation, the appliance sets the source IP address of the translated IPv6 packet to a concatenation of the NAT46 IPv6 prefix [96 bits] and the IPv4 source address [32 bits] that was received in the request packet.

During IPv6 packet to IPv4 packet translation, the appliance sets the destination IP address of the translated IPv4 packet to the last 32 bits of the destination IP address of the IPv6 packet.

Consider an example in which an enterprise hosts site www.example.com on server S1, which has an IPv6 address. To enable communication between IPv4 clients and IPv6 server S1, NetScaler appliance NS1 is deployed with a stateless NAT46 configuration that includes an IPv4-IPv6 INAT entry for server S1, and a NAT46 Prefix. The INAT entry includes an IPv4 address at which the appliance listens to connection requests from IPv4 clients on behalf of the IPv6 server S1.

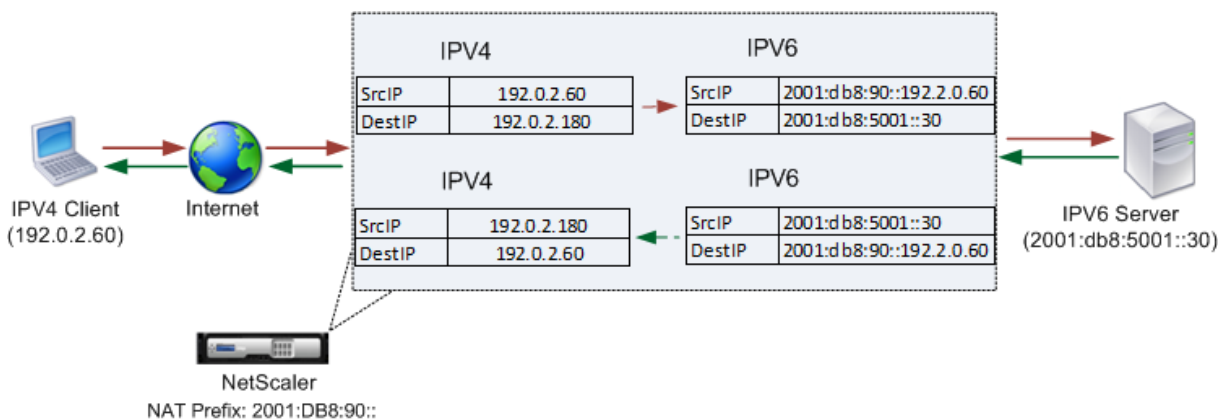

The following table lists the settings used in this example:

Entities	Name	Value
IP address of the client	Client_IPv4 (for reference purposes only)	192.0.2.60
IPv6 address of the server	Sevr_IPv6 (for reference purposes only)	2001:DB8:5001::30
IPv4 address defined in the INAT entry for IPv6 server S1	Map-Sevr-IPv4 (for reference purposes only)	192.0.2.180
IPv6 prefix for NAT 46 translation	NAT46_Prefix (for reference purposes only)	2001:DB8:90:

Following is the traffic flow in this example:

1. IPv4 Client CL1 sends a request packet to the Map-Sevr-IPv4 (192.0.2.180) address on the NetScaler appliance.
2. The appliance receives the request packet and searches the NAT46 INAT entries for the IPv6 address mapped to the Map-sevr-IPv4 (192.0.2.180) address. It finds the Sevr-IPv6 (2001:DB8:5001::30) address.
3. The appliance creates a translated IPv6 request packet with:
 - Destination IP address field = Sevr-IPv6 = 2001:DB8:5001::30
 - Source IP address field = Concatenation of NAT Prefix (First 96 bits) and Client_IPv4 (last 32 bits) = 2001:DB8:90::192.0.2.60
4. The appliance sends the translated IPv6 request to Sevr-IPv6.
5. The IPv6 server S1 responds by sending an IPv6 packet to the NetScaler appliance with:
 - Destination IP address field = Concatenation of NAT Prefix (First 96 bits) and Client_IPv4 (last 32 bits)= 2001:DB8:90::192.0.2.60
 - Source IP address field = Sevr-IPv6 = 2001:DB8:5001::30
6. The appliance receives the IPv6 response packet and verifies that its destination IP address matches the NAT46 prefix configured on the appliance. Because the destination address matches the NAT46 prefix, the appliance searches the NAT46 INAT entries for the IPv4 address associated with the Sevr-IPv6 address (2001:DB8:5001::30). It finds the Map-Sevr-IPv4 address (192.0.2.180).
7. The appliance creates an IPv4 response packet with:
 - Destination IP address field = The NAT46 prefix stripped from the destination address of the IPv6 response = Client_IPv4 (192.0.2.60)
 - Source IP address field = Map-Sevr-IPv4 address (192.0.2.180)
8. The appliance sends the translated IPv4 response to client CL1.

Limitations of Stateless NAT46

The following limitations apply to stateless NAT46:

- Translation of IPv4 options is not supported.
- Translation of IPv6 routing headers is not supported.
- Translation of hop-by-hop extension headers of IPv6 packets is not supported.
- Translation of ESP and EH headers of IPv4 packets is not supported.
- Translation of multicast packets is not supported.
- Translation of destination option headers and source routing headers is not supported.
- Translation of fragmented IPv4 UDP packets that do not contain UDP checksum is not supported.

Configure Stateless NAT46

Creating the required entities for stateless NAT46 configuration on the NetScaler appliance involves the following procedures:

1. Create an IPv4-IPv6 mapping INAT entry with stateless mode enabled.
2. Create a NAT46 IPv6 prefix.

CLI procedures

To configure an INAT mapping entry by using the CLI:

At the command prompt, type:

- `add inat <name> <publicIPv4> <privateIPv6> -mode STATELESS`
- `show inat <name>`

To create an NAT46 prefix by using the CLI:

At the command prompt, type:

```
set inatparam -nat46v6Prefix <ipv6_addr      *>
```

-
- `show inatparam`

Example:

```
1 > add inat exmpl-com-stls-nat46 192.0.2.180
2 2001:DB8:5001::30 -mode stateless
3 Done
4
5 > set inatparam -nat46v6Prefix 2001:DB8:90::/96
6 Done
```

GUI procedures

To create an INAT mapping entry by using the GUI:

1. Navigate to System > Network > Routes > INAT.
2. Add a new INAT entry, or edit an existing INAT entry.
3. Set the following parameters:
 - Name*
 - Public IP Address*
 - Private IP Address* (Select the IPv6 check box and enter the address in IPv6 format.)
 - Mode (Select Stateless from the drop down list.)

* A required parameter

To create a NAT46 prefix by using the GUI:

Navigate to **System > Network**, in the **Settings** group, click **Configure INAT Parameters**, and set the **Prefix** parameter.

Setting Global Parameters for Stateless NAT46

The appliance provides some optional global parameters for stateless NAT46 configurations.

To set global parameters for stateless NAT46 by using the CLI:

At the command prompt, type:

```
set inatparam [-nat46IgnoreTOS ( YES NO )] [-nat46ZeroChecksum ( ENABLED DISABLED )] [-nat46v6Mtu
```

-
- **show inatparam**

Example:

```
1 > set inatparam -nat46IgnoreTOS YES -nat46ZeroChecksum DISABLED -  
  nat46v6Mtu 1400 -nat46FragHeader DISABLED  
2 Done
```

To set global parameters for stateless NAT46 by using the GUI:

Navigate to **System > Network**, in the **Settings** group, click **Configure INAT Parameters**.

DNS64

May 2, 2023

The NetScaler DNS64 feature responds with a synthesized DNS AAAA record to an IPv6 client sending an AAAA request for an IPv4-only domain. The DNS64 feature is used with the NAT64 feature to enable seamless communication between IPv6-only clients and IPv4-only servers. DNS64 enables discovery of the IPv4 domain by the IPv6 only clients, and NAT64 enables communication between the clients and servers.

For synthesizing an AAAA record, the NetScaler appliance fetches a DNS A record from a DNS server. The DNS64 prefix is a 96-bit IPv6 prefix configured on the NetScaler appliance. The NetScaler appliance synthesizes the AAAA record by concatenation of the DNS64 Prefix (96 bits) and the IPv4 address (32 bits).

For enabling communication between IPv6 clients and IPv4 servers, a NetScaler appliance with DNS64 and NAT64 configuration can be deployed either on the IPv6 client side or on the IPv4 server side. In both cases, the DNS64 configuration on the NetScaler appliance is similar and includes a load balancing virtual server acting as a proxy server for DNS servers. If the NetScaler appliance is deployed on the client side, the load balancing virtual server must be specified, on the IPv6 client, as the nameserver for a domain.

Consider an example where a NetScaler appliance with DNS64 and NAT64 configuration is configured on the IPv4 side. In this example, an enterprise hosts site `www.example.com` on server S1, which has an IPv4 address. To enable communication between IPv6 clients and IPv4 server S1, NetScaler appliance NS1 is deployed with a DNS64 and stateful NAT64 configuration.

The DNS64 configuration includes DNS load balancing virtual server LBVS-DNS64-1, on which the DNS64 option is enabled. A DNS64 policy named DNS64-Policy-1, and an associated DNS64 action named DNS64-Action-1, are also configured on NS1, and DNS64-Policy-1 is bound to LBVS-DNS64-1. LBVS-DNS64-1 acts as a DNS proxy server for DNS servers DNS-1 and DNS-2.

When traffic arriving at LBVS-DNS64-1 matches the conditions specified in DNS64-Policy-1, the traffic is processed according to the settings in DNS64-Action-1. DNS64-Action-1 specifies the DNS64 prefix used, with the A record received from a DNS server, to synthesize an AAAA record.

The global DNS parameter `cacherecords` is enabled on the NetScaler appliance, so the appliance caches DNS records. This setting is necessary for the DNS64 to work properly.

The following table lists the settings used in the above example: [DNS64 example settings](#).

Following is the traffic flow in this example:

1. IPv6 client CL1 sends a DNS AAAA request for the IPv6 address of the site `www.example.com`.
2. The request is received by the DNS load balancing virtual server LBVS-DNS64-1 on NetScaler appliance NS1.
3. NS1 checks its DNS cache records for the requested AAAA record and finds that AAAA record for the site `www.example.com` does not exist in the DNS cache.
4. LBVS-DNS64-1's load balancing algorithm selects DNS server DNS-1 and forwards the AAAA request to it.
5. Because the site `www.example.com` is hosted on an IPv4 server, the DNS server DNS-1 does not have any AAAA record for the site `www.example.com`.
6. DNS-1 sends either an empty DNS AAAA response or an error message to LBVS-DNS64-1.
7. Because DNS64 option is enabled on LBVS-DNS64-1 and the AAAA request from CL1 matches the condition specified in DNS64-Policy-1, NS1 sends a DNS A request to DNS-1 for the IPv4 address of `www.example.com`.
8. DNS-1 responds by sending the DNS A record for `www.example.com` to LBVS-DNS64-1. The A record includes the IPv4 address for `www.example.com`.
9. NS1 synthesizes an AAAA record for the site `www.example.com` with:
 - IPv6 address for site `www.example.com` = Concatenation of DNS64 Prefix (96 bits) specified in the associated DNS64action, and IPv4 address of DNS A record (32 bits) = `2001:DB8:300::192.0.2.60`
10. NS1 sends the synthesized AAAA record to IPv6 client CL1. NS1 also caches the A record into its memory. NS1 uses the cached A record to synthesize AAAA records for subsequent AAAA requests.

Points to Consider for a DNS64 Configuration

Before configuring DNS64 on a NetScaler appliance, consider the following points:

- The DNS64 feature of the NetScaler appliance is compliant with RFC 6174.
- The DNS64 feature of the NetScaler appliance does not support DNSSEC. The NetScaler appliance does not synthesize an AAAA record from a DNSSEC response received from a DNS server. A response is classified as a DNSSEC response, only if it contains RRSIG records.
- The NetScaler appliance supports DNS64 prefix of length of only 96 bits.

- Though the DNS64 feature is used with the NAT64 feature, the DNS64 and NAT64 configurations are independent on the NetScaler appliance. For a particular flow, you must specify the same IPv6 prefix value for the DNS64 prefix and the NAT64 prefix parameters, so that the synthesized IPv6 addresses received by the client are routed to the particular NAT64 configuration. For more information on configuring NAT64 on a NetScaler appliance, see [Stateful NAT64](#).
- The following are the different cases of DN64 processing by the NetScaler appliance:
 - If the AAAA response from the DNS server includes AAAA records, then each record in the response is checked for the set of exclusion rule configured on the NetScaler appliance for the particular DNS64 configuration. The NetScaler removes the IPv6 addresses, whose prefix matches the exclusion rule, from the response. If the resulting response includes at least one IPv6 record, the NetScaler appliance forwards this response to the client, else, the appliance synthesizes a AAAA response from the A record of the domain and sends it to the IPv6 client.
 - If the AAAA response from the DNS server is an empty answer response, the appliance requests for A resource records with the same domain name or searches in its own records if the appliance is an authentic domain name server for the domain. If the request results in an empty answer or error, the same is forwarded to the client.
 - If the response from the DNS server includes RCODE=1 (format error), the NetScaler appliance forwards the same to the client. If there is no response before the timeout, the NetScaler appliance sends a response with RCODE=2 (server failure) to the client.
 - If the response from the DNS server includes a CNAME, the chain is followed until the terminating A or AAAA record is reached. If the CNAME does not have any AAAA resource records, the NetScaler appliance fetches the DNS A record to be used for synthesizing AAAA record. The CNAME chain is added to the answer section along with the synthesized AAAA record and then sent to the client.
- The DNS64 feature of the NetScaler appliance also supports responding to PTR request. When a PTR request for a domain of an IPv6 address is received on the appliance and the IPv6 address matches any of the configured DNS64 prefix, the appliance creates a CNAME record mapping the IP6-ARPA domain into the corresponding IN-ADDR.ARPA domain and the newly formed IN-ADDR.ARPA domain is used for resolution. The appliance searches the local PTR records and if the records are not present, the appliance sends a PTR request for IN-ADDR.ARPA domain to the DNS server. The NetScaler appliance uses the response from the DNS server to synthesize response for the initial PTR request.

Configuration Steps

Creating the required entities for stateful NAT64 configuration on the NetScaler appliance involves the following procedures:

- **Add DNS services.** DNS services are logical representation of DNS servers for which the NetScaler appliance acts as a DNS proxy server. For more information on setting optional parameters of a service, see [Load Balancing](#).
- **Add DNS64 action and DNS64 policy and then bind the DNS64 action to the DNS64 policy.** A DNS64 policy specifies conditions to be matched against traffic for DNS64 processing according to the settings in the associated DNS64 action. The DNS64 action specifies the mandatory DNS64 prefix and the optional exclude rule and mapped rule settings.
- **Create a DNS load balancing virtual server and bind the DNS services and the DNS64 policy to it.** The DNS load balancing virtual server acts as a DNS proxy server for DNS servers represented by the bound DNS services. Traffic arriving at the virtual server is matched against the bound DNS64 policy for DNS64 processing. For more information on setting optional parameters of a load balancing virtual server, see [Load Balancing](#).

Note: The CLI has separate commands for these two tasks, but the GUI combines them in a single dialog box.

Enable caching of DNS records. Enable the global parameter for the NetScaler appliance to cache DNS records, which are obtained through DNS proxy operations. For more information on enabling caching of DNS records, see [Domain Name System](#).

CLI procedures

To create a service of type DNS by using the CLI:

At the command prompt, type:

- `add service <name> <IP> <serviceType> <port> ...`

To create a DNS64 action by using the CLI:

At the command prompt, type:

- `add dns action64 <actionName> -Prefix <ipv6_addr|*> [-mappedRule <expression>] [-excludeRule <expression>]`

To create a DNS64 policy by using the CLI:

At the command prompt, type:

- `add dns policy64 <name> -rule <expression> -action <string>`

To create a DNS load balancing virtual server by using the CLI:

At the command prompt, type:

- add lb vserver <name> DNS <IPAddress> <port> -dns64 (ENABLED | DISABLED) [-bypassAAAA (YES | NO)] ...

To bind the DNS services and the DNS64 policy to the DNS load balancing virtual server by using the CLI:

At the command prompt, type:

- bind lb vserver <name> <serviceName> ...
- bind lb vserver <name> -policyName <string> -priority <positive_integer> ...

GUI procedures

To create a service of type DNS by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Services, and add a new service.
2. Set the following parameters:
 - Service Name*
 - Server*
 - Protocol* (Select DNS from the drop down list.)
 - Port*

To create a DNS64 action by using the GUI:

Navigate to Traffic Management > DNS > Actions, on the DNS Actions64 tab, add a new DNS64 action.

To create a DNS64 policy by using the GUI:

Navigate to Traffic Management > DNS > Policies, on the DNS Policies64 tab, add a new DNS64 policy.

To create a DNS load balancing virtual server and bind the DNS services and the DNS64 policy to it by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Virtual Servers, and add a new virtual server.
2. Set the following parameters:
 - Name*
 - IP Address*
 - Protocol* (Select DNS from the drop down list.)
 - Port*
3. Select the Enable DNS64 option.

4. In the Services pane, bind the service to the virtual server.
5. In the Policies pane, bind the policy to the virtual server.

Sample Configuration

```
1 > add service SVC-DNS-1 203.0.113.50 DNS 53
2 Done
3
4 > add service SVC-DNS-2 203.0.113.60 DNS 53
5 Done
6
7 > add dns Action64 DNS64-Action-1 -Prefix 2001:DB8:300::/96
8 Done
9
10 > add dns Policy64 DNS64-Policy-1 -rule "CLIENT.IPv6.SRC.IN_SUBNET
11 (2001:DB8:5001::/64)"
12 -action DNS64-Action-1
13 Done
14
15 > add lb vserver LBVS-DNS64-1 DNS 2001:DB8:9999::99 53 -dns64 ENABLED
16 Done
17
18 > bind lb vserver LBVS-DNS64-1 SVC-DNS-1
19 Done
20
21 > bind lb vserver LBVS-DNS64-1 SVC-DNS-2
22 Done
23
24 > bind lb vserver LBVS-DNS64-1 -policyname DNS64-Policy-1 -priority 2
25 Done
```

Stateful NAT64 Translation

May 2, 2023

The stateful NAT64 feature enables communication between IPv6 clients and IPv4 servers through IPv6 to IPv4 packet translation, and vice versa, while maintaining session information on the NetScaler appliance.

A stateful NAT64 configuration on the NetScaler appliance has the following components:

- **NAT64 rule**—An entry consisting of an ACL6 rule and a netprofile, which consists of a pool of NetScaler owned SNIP Addresses.
- **NAT64 IPv6 Prefix**—A global IPv6 prefix of length 96 bits (128-32=96) configured on the appliance.

Note: Currently the NetScaler appliance supports only one prefix to be used commonly with all NAT 64 rules.


The NetScaler appliance considers an incoming IPv6 packet for NAT64 translation when all of the following conditions are met:

- The incoming IPv6 packet matches the ACL6 rule bound to a NAT64 rule.
- The destination IP address of the IPv6 packet matches the NAT64 IPv6 prefix.

When an IPv6 request packet received by the NetScaler appliance matches an ACL6 defined in a NAT64 rule and the destination IP of the packet matches the NAT64 IPv6 prefix, the NetScaler appliance considers the IPv6 packet for translation.

The appliance translates this IPv6 packet to an IPv4 packet with a source IP address matching one of the IP address bound to the netprofile defined in the NAT64 rule, and a destination IP address consisting of the last 32 bits of the destination IPv6 address of the IPv6 request packet. The NetScaler appliance creates a NAT64 session for this particular flow and forwards the packet to the IPv4 server. Subsequent responses from the IPv4 server and requests from the IPv6 client are translated accordingly by the appliance, on the basis of information in the particular NAT64 session.

Consider an example in which an enterprise hosts site www.example.com on server S1, which has an IPv4 address. To enable communication between IPv6 clients and IPv4 server S1, NetScaler appliance NS1 is deployed with a stateful NAT64 configuration that includes a NAT64 rule and a NAT64 prefix. A mapped IPv6 address of server S1 is formed by concatenating the NAT64 IPv6 prefix [96 bits] and the IPv4 source address [32 bits]. This mapped IPv6 address is then manually configured in the DNS servers. The IPv6 clients get the mapped IPv6 address from the DNS servers to communicate with IPv4 server S1.

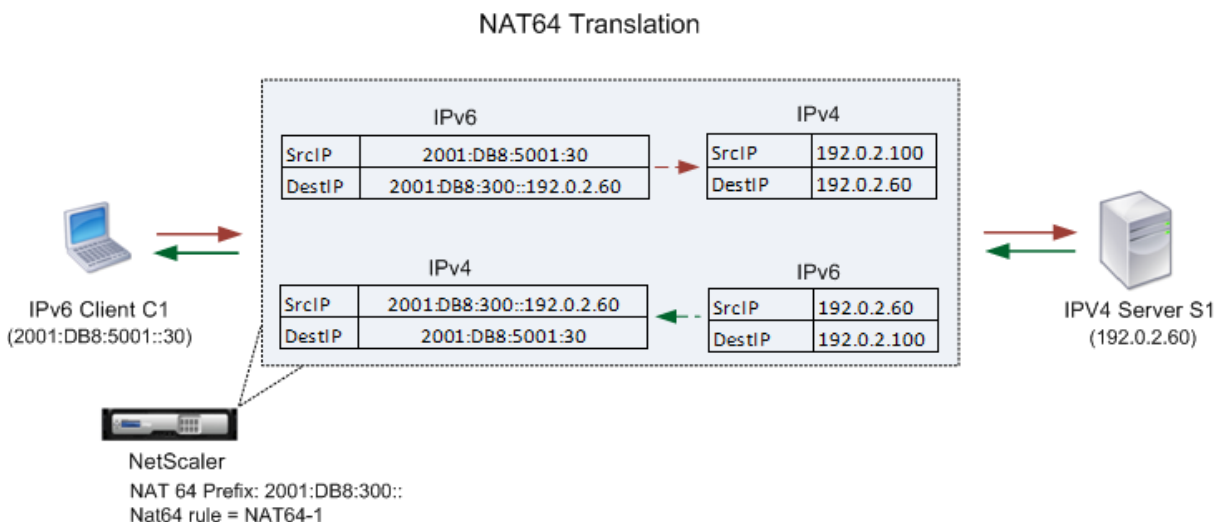

The following table lists the settings used in this example: [Stateful NAT64 translation example settings](#).

Following is the traffic flow in this example:

1. IPv6 client CL1 sends a request packet to Map-Sevr-IPv6 (2001:DB8:300::192.0.2.60) address.
2. The NetScaler appliance receives the request packet. If the request packet matches the ACL6 defined in the NAT64 rule, and the destination IP address of the packet matches the NAT64 IPv6 prefix, the NetScaler considers the IPv6 packet for translation.
3. The appliance creates a translated IPv4 request packet with:
 - Destination IP address field containing the NAT64 prefix stripped from the destination address of the IPv6 request (Sevr_IPv4 = 192.0.2.60)
 - Source IP address field containing one of the IPv4 address bound to Netprofile-1(in this case, 192.0.2.100)
4. The NetScaler appliance creates a NAT64 session for this flow and sends the translated IPv4 request to server S1.
5. IPv4 server S1 responds by sending an IPv4 packet to the NetScaler appliance with:
 - Destination IP address field containing 192.0.2.100
 - Source IP address field containing the address ofSevr_IPv4(192.0.2.60)
6. The appliance receives the IPv4 response packet, searches all the session entries, and finds that the IPv4 response packet matches the NAT64 session entry created in step 4. The appliance considers the IPv4 packet for translation.
7. The appliance creates a translated IPv6 response packet with:
 - Destination IP address field=Client_IPv6=2001:DB8:5001::30
 - Source IP address field = Concatenation of NAT64 Prefix (First 96 bits) and Sevr_IPv4 (last 32 bits) =2001:DB8:300::192.0.2.60
8. The appliance sends the translated IPv6 response to client CL1.

Limitations of Stateful NAT64

The following limitations apply to stateful NAT64:

- Translation of IPv4 options is not supported.
- Translation of IPv6 routing headers is not supported.
- Translation of hop-by-hop extension headers of IPv6 packets is not supported.
- Translation of ESP and EH headers of IPv6 packets is not supported.
- Translation of multicast packets is not supported.
- Packets of Stream Control Transmission Protocol (SCTP), Datagram Congestion Control Protocol (DCCP), and IPSec, are not translated.

Configuring Stateful NAT64

Creating the required entities for stateful NAT64 configuration on the NetScaler appliance involves the following procedures:

1. Add an ACL6 rule with action ALLOW.
2. Add an ipset, which binds multiple IP addresses.
3. Add a netprofile and bind the ipset to it. If you want to bind only one IP address, you need not create an ipset entity. In that case, bind the IP address directly to the netprofile.
4. Add a NAT64 rule, which includes binding the ACL6 rule and the netprofile to the NAT 64 rule.
5. Add a NAT64 IPv6 prefix.

CLI procedures

To add an ACL6 rule by using the CLI:

At the command prompt, type:

- `add ns acl6 <acl6name> <acl6action> ...`

To add an IPset and bind multiple IPs to it by using the CLI:

At the command prompt, type:

- `add ipset <name>`
- `bind ipset <name> <IPaddress ...>`

To add a netprofile by using the CLI:

At the command prompt, type:

- `add netprofile <name> -srcIP <IPaddress or IPset>`

To add a NAT64 rule by using the CLI:

At the command prompt, type:

- `add nat64 <name> <acl6name> -netProfile <string>`

To add a NAT64 prefix by using the CLI:

At the command prompt, type:

```
set ipv6 -natprefix <ipv6_addr                *>
```

•

Example:

```
1 > add acl6 ACL6-1 ALLOW -srcIPv6 2001:DB8:5001::30
2 Done
3
4 > apply acls6
5 Done
6
7 > add ip 192.0.2.100 255.255.255.0 - type SNIP
8 Done
9
10 > add ip 192.0.2.102 255.255.255.0 - type SNIP
11 Done
12
13 > add ipset IPset-1
14 Done
15
16 > bind ipset IPset-1 192.0.2.100 192.0.2.102
17 IPAddress "192.0.2.100" bound
18 IPAddress "192.0.2.102" bound
19 Done
20
21 > add netprofile Netprofile-1 -srcIP IPset-1
22 Done
23
24 > add nat64 NAT64-1 ACL6-1 -netprofile Netprofile-1
25 Done
26
27 > set ipv6 -natprefix 2001:DB8:300::/96
28 Done
```

GUI procedures

To add a NAT64 rule by using the GUI:

Navigate to System > Network > Routes > NAT64, and add a new NAT64 rule, or edit an existing rule.

To add a NAT64 prefix by using the GUI:

Navigate to System > Network, in the Settings group, click Configure INAT Parameters, and set the Prefix parameter.

RNAT

May 2, 2023

In Reverse Network Address Translation (RNAT), the NetScaler appliance replaces the source IP addresses in the packets generated by the servers with public NAT IP addresses. By default, the appli-

ance uses a SNIP address as the NAT IP address. You can also configure the appliance to use a unique NAT IP address for each subnet. You can also configure RNAT by using Access Control Lists (ACLs). Use Source IP (USIP), Use Subnet IP (USNIP), and Link Load Balancing (LLB) modes affect the operation of RNAT. You can display statistics to monitor RNAT.


Note: The ephemeral port range for RNAT on the NetScaler appliance is 1024-65535.

You can use either a network address or an extended ACL as the condition for an RNAT entry:

- **Using a Network address.** When you use a network address, RNAT processing is performed on all of the packets coming from the specified network.
- **Using Extended ACLs.** When you use ACLs, RNAT processing is performed on all packets that match the ACLs. To configure the NetScaler appliance to use a unique IP address for traffic that matches an ACL, you must perform the following three tasks:
 1. Configure the ACL.
 2. Configure RNAT to change the source IP address and Destination Port.
 3. Apply the ACL.

The following diagram illustrates RNAT configured with an ACL.

Figure 1. RNAT with an ACL

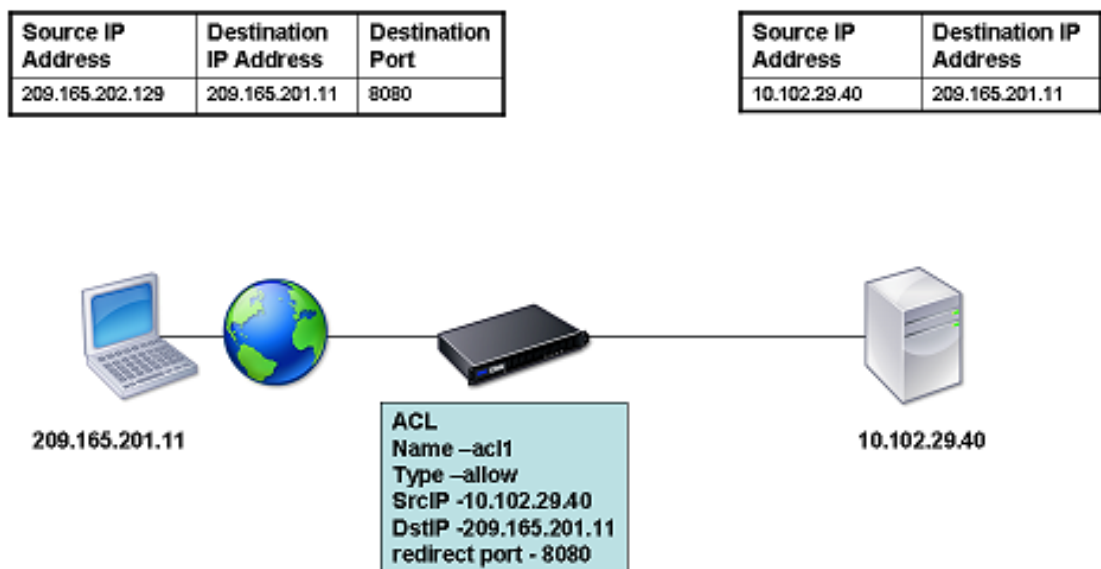

You have the following basic choices for the type of NAT IP address:


- **Using a SNIP as the NAT IP Address.** When using a SNIP as the NAT IP address, the NetScaler appliance replaces the source IP addresses of server-generated packets with the a SNIP. There-

fore, the SNIP address must be a public IP address. If Use Subnet IP (USNIP) mode is enabled, the NetScaler can use a subnet IP address (SNIP) as the NAT IP address.

- **Using a Unique IP Address as the NAT IP Address.** When using a unique IP address as the NAT IP address, the NetScaler appliance replaces the source IP addresses of server-generated packets with the unique IP address specified. The unique IP address must be a public NetScaler-owned IP address. If multiple NAT IP addresses are configured for a subnet, NAT IP selection uses the round robin algorithm.

This configuration is illustrated in the following diagram.

Figure 2. Using a Unique IP Address as the NAT IP Address

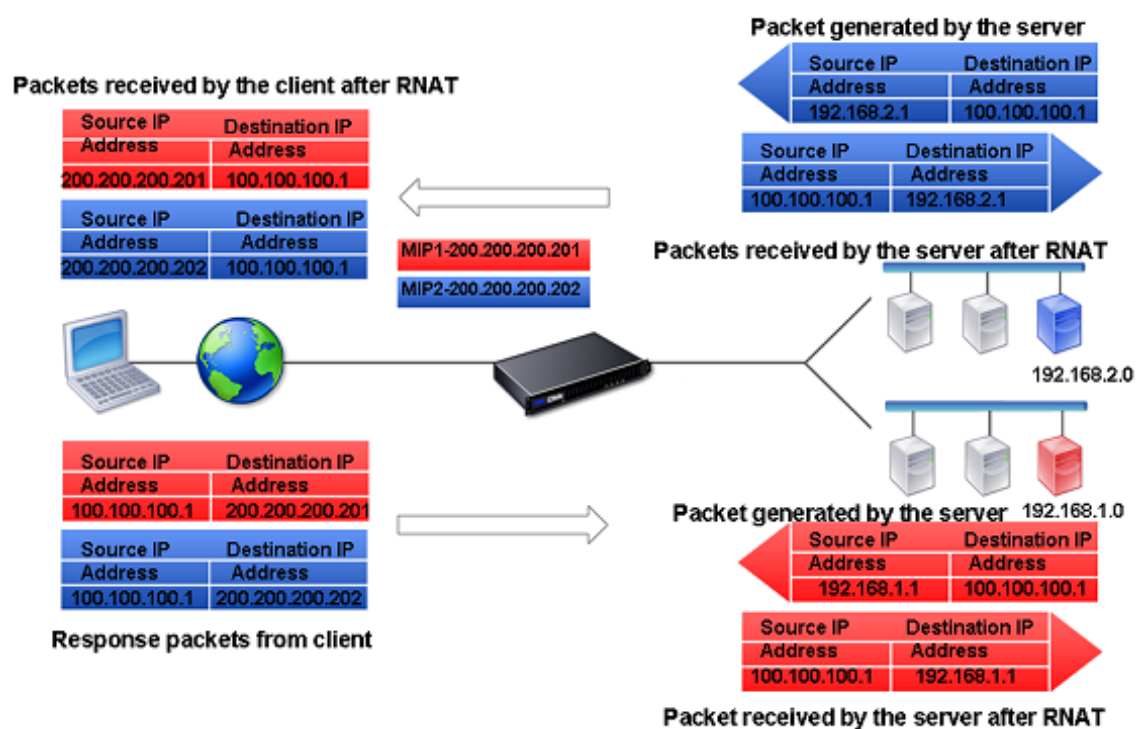

Before you begin

Before configuring a RNAT rule, consider the following points:

- When RNAT and Use Source IP (USIP) are both configured on the NetScaler appliance, RNAT takes precedence. In other words, the source IP address of the packets, which matches a RNAT rule, is replaced according to the setting in the RNAT rule.
- In a topology where the NetScaler appliance performs both Link Load Balancing (LLB) and RNAT for traffic originating from the server, the appliance selects the source IP address based on the router. The LLB configuration determines selection of the router. For more information about LLB, see [Link Load Balancing](#).

Configure RNAT

The following instructions provide separate command-line procedures for creating RNAT entries that use different conditions and different types of NAT IP addresses. In the GUI, all of the variations can be configured in the same dialog box, so there is only one procedure for GUI users.

CLI procedures

To create an RNAT rule by using the CLI:

At the command prompt, to create the rule and verify the configuration, type:

- `add rnat <name> (<network> | (<aclname> [-redirectPort <port>]))`
- `bind rnat <name> <natIP>@ ...`
- `show rnat`

To modify or remove an RNAT rule by using the CLI:

- To modify an RNAT rule:
`set rnat <name> (<aclname> [-redirectPort <port>])`
- To remove an RNAT rule, type the command.
`rm rnat <name>`

Use the following command to verify the configuration:

- `show rnat`

Examples:

```
1 A network address as the condition and a SNIP address as the NAT IP
  address:
2
3 > add rnat RNAT-1 192.168.1.0 255.255.255.0
4 Done
5
6 A network address as the condition and a unique IP address as the NAT
  IP address:
7
8 > add rnat RNAT-2 192.168.1.0 255.255.255.0
9 Done
10
11 > bind rnat RNAT-2 -natip 10.102.29.50
12 Done
13
14 If instead of a single NAT IP address you specify a range, RNAT entries
    are created with all the NetScaler-owned IP addresses, except the
    NSIP, that fall within the range specified:
```

```
15
16 > add rnat RNAT-3 192.168.1.0 255.255.255.0
17 Done
18
19 > bind rnat RNAT-3 -natip 10.102.29.[50-110]
20 Done
21
22
23 An ACL as the condition and a SNIP address as the NAT IP address:
24
25 > add rnat RNAT-4 acl1
26 Done
27
28 An ACL as a condition and a unique IP address as the NAT IP address:
29
30 > add rnat RNAT-4 acl1
31 Done
32
33 > bind rnat RNAT-4 -natip 10.102.29.50
34 Done
35
36 If instead of a single NAT IP address you specify a range, RNAT entries
    are created with all the NetScaler-owned IP addresses, except the
    NSIP, that fall within the range specified:
37
38 > add rnat RNAT-5 acl1
39 Done
40
41 > bind rnat RNAT-5 -natip 10.102.29.[50-70]
42 Done
```

GUI procedures

To create an RNAT entry by using the GUI:

Navigate to **System > Network > NATs**, click the **RNAT** tab, and add a new RNAT rule, or edit an existing rule.

Monitor RNAT

You can display RNAT statistics to troubleshoot issues related to IP address translation.

The following table describes the statistics associated with RNAT and RNAT IP.

Statistic	Description
Bytes received	Bytes received during RNAT sessions

Statistic	Description
Bytes sent	Bytes sent during RNAT sessions
Packets received	Packets received during RNAT sessions
Packets sent	Packets sent during RNAT sessions
Syn sent	Requests for connections sent during RNAT sessions
Current sessions	Currently active RNAT sessions

To view RNAT statistics by using the CLI:

At the command prompt, type:

- **stat rnat**

Example:

```

1 > stat rnat
2
3 RNAT summary
4
5           Rate (/s)           Total
6 Bytes Received                0           0
7 Bytes Sent                    0           0
8 Packets Received              0           0
9 Packets Sent                  0           0
10 Syn Sent                     0           0
11 Current RNAT sessions        --           0
12 Done
13 >

```

To monitor RNAT by using the GUI:

Navigate to **System > Network > NATs**, click the **RNAT** tab, and then click **Statistics**.

Configure RNAT6

Reverse Network Address Translation (RNAT) rules for IPv6 packets are called RNAT6s. When an IPv6 packet generated by a server matches the conditions specified in the RNAT6 rule, the appliance replaces the source IPv6 address of the IPv6 packet with a configured NAT IPv6 address before forwarding it to the destination. The NAT IPv6 address is one of the NetScaler owned SNIP6 or VIP6 addresses.

When configuring an RNAT6 rule, you can specify either an IPv6 prefix or an ACL6 as the condition:

- **Using a IPv6 network address.** When you use an IPv6 prefix, the appliance performs RNAT processing on those IPv6 packets whose IPv6 address matches the prefix.
- **Using ACL6s.** When you use an ACL6, the appliance performs RNAT processing on those IPv6 packets that match the conditions specified in the ACL6.

You have one of the following options to set the NAT IP address:

- Specify a set of NetScaler owned SNIP6 and VIP6 addresses for an RNAT6 rule. The NetScaler appliance uses any one of the IPv6 addresses from this set as a NAT IP address for each session. The selection is based on the round robin algorithm and is done for each session.
- Do not specify any NetScaler owned SNIP6 or VIP6 address for an RNAT6 rule. The NetScaler appliance uses any one of the NetScaler owned SNIP6 or VIP6 addresses as a NAT IP address. The selection is based on the next hop network to which an IPv6 packet that matches the RNAT rule is destined.

CLI procedures

To create an RNAT6 rule by using the CLI:

At the command prompt, to create the rule and verify the configuration, type:

- **add rnat6** <name> (<network> | (<acl6name> [-<redirectPort> <port>]))
- **bind rnat6** <name> <natIP6>@ ...
- **show rnat6**

To modify or remove an RNAT6 rule by using the CLI:

- To modify an RNAT6 rule whose condition is an ACL6, type the **set rnat6** <name> command, followed by a new value for the **redirectPort** parameter.
- To remove an RNAT6 rule, type the **clear rnat6** <name> command.

GUI procedures

To configure an RNAT6 rule by using the GUI:

Navigate to **System > Network > NATs**, click the **RNAT6** tab, and add a new RNAT6 rule, or edit an existing rule.

Monitor RNAT6

You can display statistics related to the RNAT6 feature to monitor the performance or to troubleshoot problems related to RNAT6 feature. You can display a summary of statistics of the RNAT6 rules or of

a particular RNAT6 rule. The statistical counters reflect events since the NetScaler appliance was last restarted. All these counters are reset to 0 when the NetScaler appliance is restarted.

The following lists some of the statistics counters associated with the RNAT6 feature:

- **Bytes received** - Total bytes received during RNAT6 sessions.
- **Bytes sent** - Total number of bytes sent during RNAT6 sessions.
- **Packets received** - Total number of packets received during RNAT6 sessions.
- **Packets sent** - Total number of packets sent during RNAT6 sessions.
- **Syn sent** - Total number of requests for connections sent during RNAT6 sessions
- **Current sessions** - Currently active RNAT6 sessions

To display a summarized statistics of all RNAT6 rules by using the CLI:

At the command prompt, type:

- **stat rnat6**

To display statistics for a specified RNAT6 rule by using the CLI:

At the command prompt, type:

- **stat rnat6** [<rnat6 rule name>]

To display RNAT6 statistics by using the GUI:

Navigate to **System > Network > NATs**, click the **RNAT6** tab, and then click **Statistics**.

```

1 > stat rnat6
2
3 RNAT6 summary
4
5           Rate (/s)           Total
6
7 Bytes Received           178           20644
8
9 Bytes Sent               178           20644
10
11 Packets Received         5             401
12
13 Packets Sent             5             401
14
15 Syn Sent                 0             2
16
17 Current RNAT6 sessions  --            1
18
19 Done

```

Log Start Time and Connection Closure Reasons in RNAT Log Entries

For diagnosing or troubleshooting problems related to RNAT, the NetScaler appliance logs RNAT sessions whenever they are closed.

A log message for an RNAT session consists of the following information:

- NetScaler owned IP address (NSIP address or SNIP address) from which the log message is sourced
- Time stamp of log creation
- Protocol of the RNAT session
- Source IP address
- RNAT IP address
- Destination IP address
- Start time of the RNAT session
- Closing time of the RNAT session
- Total bytes sent by the NetScaler appliance for this RNAT session
- Total bytes received by the NetScaler appliance for this RNAT session
- Reason for closure of the RNAT session. The NetScaler appliance logs closure reason for TCP RNAT sessions that do not use the TCP proxy (TCP proxy disabled) of the appliance. The following are the type of closure reasons that are logged for TCP RNAT sessions:
 - **TCP FIN.** The RNAT session was closed because of a TCP FIN sent by either the source or destination device.
 - **TCP RST.** The RNAT session was closed because of a TCP Reset that was sent by either the source or destination device.
 - **TIMEOUT.** The RNAT session timed out.

The following table shows some sample log entries for RNAT sessions.

Type of Entry	Sample Log Entry
Sample log entry for UDP RNAT session	Dec 1 15:28:12 10.102.53.114 12/01/2015:15:28:12 GMT 0-PPE-0 : default UDP NAT_OTHERCONN_DELINK 154 0 : Source 1.2.2.5:23431 - Destination 192.168.123.122:22 - NatIP 192.168.123.1:4045 - Destination 192.168.123.122:22 - Start Time 12/01/2015:15:26:58 GMT - Delink Time 12/01/2015:15:28:12 GMT - Total_bytes_send 2511 - Total_bytes_rcv 3725

Type of Entry	Sample Log Entry
Sample log entry for TCP RNAT session. The log entry shows that the session closed because of TCP Reset	Dec 1 15:29:59 10.102.53.114 12/01/2015:15:27:59 GMT 0-PPE-0 : default TCP NAT_OTHERCONN_DELINK 152 0 : Source 1.2.2.5:33826 - Destination 192.168.123.122:22 - NatIP 192.168.123.1:2384 - Destination 192.168.123.122:22 - Start Time 12/01/2015:15:27:40 GMT - Delink Time 12/01/2015:15:27:59 GMT - Total_bytes_send 2147 - Total_bytes_recv 3257 - Closure Reason TCP RST
Sample log entry for TCP RNAT session. The log entry shows that the session timed out	Dec 1 15:30:12 10.102.53.114 12/01/2015:15:30:12 GMT 0-PPE-0 : default TCP NAT_OTHERCONN_DELINK 155 0 : Source 1.2.2.5:64976 - Destination 192.168.123.115:22 - NatIP 192.168.123.1:19636 - Destination 192.168.123.115:22 - Start Time 12/01/2015:15:27:25 GMT - Delink Time 12/01/2015:15:30:12 GMT - Total_bytes_send 0 - Total_bytes_recv 0 - Closure Reason TIMEOUT

Stateful Connection Failover for RNAT

Connection failover helps prevent disruption of access to applications deployed in a distributed environment. The NetScaler appliance now supports stateful connection failover for connections related to RNAT rules in a NetScaler High Availability (HA) setup. In an HA setup, connection failover (or connection mirroring) refers to the process of keeping an established TCP or UDP connection active when a failover occurs.

The primary appliance sends messages to the secondary appliance to synchronize current information about the RNAT connections. The secondary appliance uses this connection information only in the event of a failover. When a failover occurs, the new primary NetScaler appliance has information about the connections established before the failover and hence continues to serve those connections even after the failover. From the client’s perspective this failover is transparent. During the transition period, the client and server may experience a brief disruption and retransmissions.

Connection failover can be enabled per RNAT rule. For enabling connection failover on an RNAT rule, you enable the connFailover (Connection Failover) parameter of that specific RNAT rule by using either CLI or GUI.

To enable connection failover for a RNAT rule by using the CLI:

At the command prompt, type:

- `set rnat <name> -connfailover (ENABLED | DISABLED)`
- `show rnat`

To enable connection failover for a RNAT rule by using the GUI:

1. Navigate to **System > Network > NATs**, and then click the **RNAT** tab.
2. Select **Connection Failover** while adding a new RNAT rule, or while editing an existing rule.

Reserving the source port for RNAT connections to servers

For a request hitting an RNAT configuration that has one or more RNAT IP addresses and Use Proxy port parameter disabled, the NetScaler appliance uses one of the RNAT IP address and the source port of the RNAT request for connecting to servers. Prior to the 13.0 47.x build, RNAT connection (using the RNAT client's source port) to the server fails if the same source port is already been used in some other connections.

- **Source port less than 1024.** By default, the NetScaler appliance reserves the first 1024 ports of any NetScaler owned IP address (including RNAT IP addresses). Prior to 13.0 47.x build, RNAT connection (using the RNAT client's source port) to the server fails if the source port of the RNAT request is less than or equal to 1024. With the 13.0 47.x build, RNAT connection (using the RNAT client's source port) to the server succeeds even if the source port of the RNAT request is less than or equal to 1024.
- **Source port greater than 1024.** Prior to the 13.0 47.x build, RNAT connection (using the RNAT client's source port) to the server fails if the same source port is already been used in some other connections. With 13.0 47.x build, you can specify a range of RNAT client source ports in the [Retain Source Port range](#) (`retainsourceportrange`) parameter as part of an RNAT configuration. The NetScaler appliance reserves these RNAT client source ports on the RNAT IP address to be used only for RNAT connection to servers.

Removing RNAT Sessions

You can remove any unwanted or inefficient RNAT sessions from the NetScaler appliance. The appliance immediately releases resources (such as the port of the NAT IP address, and memory) allocated for these sessions, making the resources available for new sessions. The appliance also drops all the subsequent packets related to these removed sessions. You can remove all or selected RNAT sessions from the NetScaler appliance.

To clear all RNAT sessions by using the CLI:

At the command prompt, type:

- **flush rnatsession**

To clear selective RNAT sessions by using the CLI:

At the command prompt, type:

- **flush rnatsession** ((-**network** <ip_addr> -**netmask** <netmask>)|-**natIP** <ip_addr> | -**aclname** <string>)

To clear all or selective RNAT sessions by using the GUI:

1. Navigate to **System > Network > NATs**, and then click the **RNAT** tab.
2. In the **Actions** Menu, click **Flush RNAT Sessions** to remove all or selective RNAT sessions (for example, removing RNAT sessions with a specific RNAT IP, or belonging to a specific Network or ACL based RNAT rule).

Sample Configurations:

```
1      Clear all RNAT sessions existing on a NetScaler appliance
2
3      > flush rnatsession
4
5      Done
6
7      Clear all RNAT sessions belonging to network based RNAT rules that
8          has 203.0.113.0/24 network as the matching condition.
9
10     > flush rnatsession -network 203.0.113.0 -netmask 255.255.255.0
11
12     Done
13
14     Clear all RNAT sessions with RNAT IP 192.0.2.90.
15
16     > flush rnatsession -natIP 192.0.2.90
17
18     Done
19
20     Clear all RNAT sessions belonging to ACL based RNAT rules that has
21         ACL-RNAT-1 as the matching condition.
22
23     > flush rnatsession -aclname ACL-RNAT-1
24
25     Done
```

Configuring Prefix-Based IPv6-IPv4 Translation


May 2, 2023

Prefix-based translation is a process of translating packets sent from private IPv6 servers into IPv4 packets, using an IPv6 prefix configured in the NetScaler appliance. This prefix has a length of 96 bits (128-32=96). The IPv6 servers embed the destination IP address of the IPv4 servers or hosts in the last 32 bits of the destination IP address field of the IPv6 packets. The first 96 bits of the destination IP address field are set as the IPv6 NAT prefix.

The NetScaler appliance compares the first 96 bits of the destination IP address of all the incoming IPv6 packets to the configured prefix. If there is a match, the NetScaler appliance generates an IPv4 packet and sets the destination IP address as the last 32 bits of the destination IP address of the matched IPv6 packet. IPv6 packets addressed to this prefix have to be routed to the NetScaler so that the IPv6-IPv4 translation is done by the NetScaler.

In the following diagram, 3ffe::/96 is configured as the IPv6 NAT prefix on NetScaler NS1. The IPv6 host sends an IPv6 packet with destination IP address 3ffe::74.125.91.105. NS1 compares the first 96 bits of the destination IP address of all the incoming IPv6 packets to the configured prefix, and they match. NS1 then generates an IPv4 packet and sets the destination IP address as 74.125.91.105.

Figure 1. IPv6-IPv4 Prefix-Based Translation

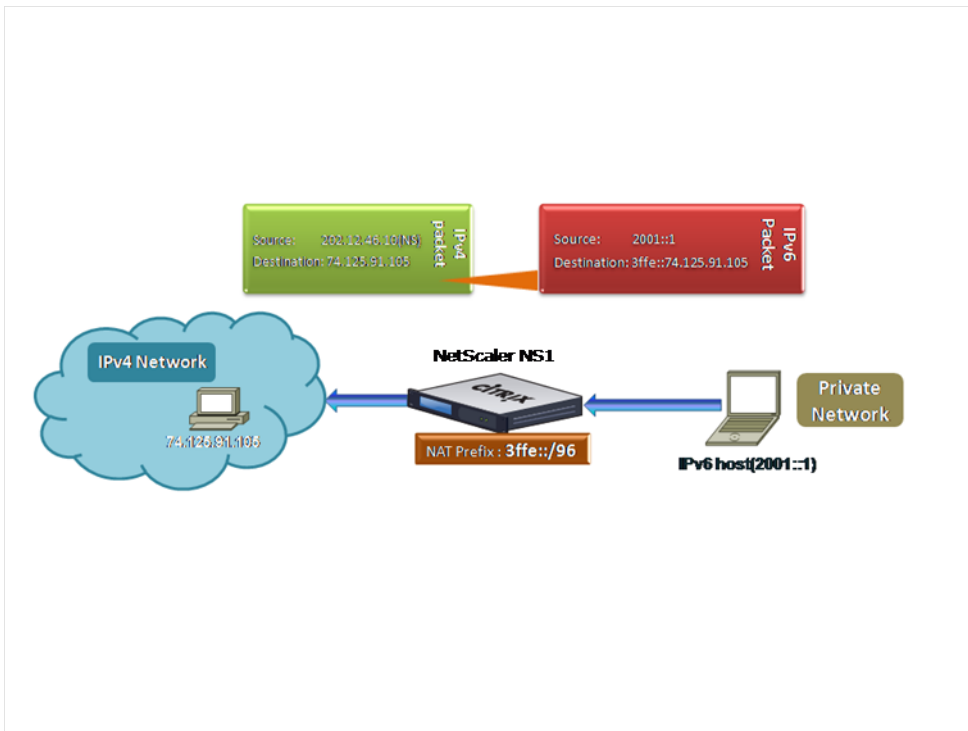

To configure prefix-based IPv6-IPv4 translation by using the CLI:

At the command prompt, type:

```
set ipv6 [-natprefix <ipv6_addr *>]
```

-
- show ipv6

Example:

```
1 > set ipv6 -natprefix 3ffe::/96
2 Done
```

To configure prefix-based IPv6-IPv4 translation by using the GUI:

Navigate to System > Network, in the Settings group, click Configure INAT Parameters, and set the Prefix parameter.

IP Prefix NAT

May 2, 2023

The NetScaler appliance supports translating a part of the source IP address instead of the complete address of packets received on the appliance. IP prefix NAT includes changing one or more octets or bits of the source IP address.

The NetScaler appliance supports IP prefix NAT for load balancing configurations of the following types: ANY, UDP, DNS, TCP, and HTTP.

Use Case: Zonification of Clients for a Deployment of a NetScaler appliance and an Optimization Device

IP prefix NAT is very useful in a deployment that includes a NetScaler appliance and an optimization device (for example, Citrix ByteMobile). This type of deployment has different geographically located client networks, which share the same network address. The NetScaler appliance must send the traffic received from each of the client networks to the optimization device before forwarding to the destination.

The device sends the optimized traffic back to the NetScaler appliance. Because the optimization requirement is different for traffic from each client network, the optimization device must recognize the client network of each packet that it receives. The solution is to segregate traffic from each client

network into a different zone by using VLANs. IP prefix NAT with a different setting is configured for each zone. The NetScaler appliance translates the last octet of the source IP address of every packet, and the translated octet value is different for each zone.

Consider an example of two zones, Z1 and Z2, sharing network address 192.0.2.0/24. On the NetScaler appliance, IP prefix NAT entities named natrule-1 and natrule-2 are configured for these two zones. Before the appliance forwards a packet from Z1, natrule-1 translates the last octet of the packet's source IP address to 100. Similarly, for packets from Z2, natrule-2 translates the last octet of the source IP address to 200. For two clients, CL1-Z1 in zone Z1 and CL1-Z2 in zone Z2, each with IP address 192.0.2.30, the NetScaler appliance translates the source IP address of CL1-Z1's packets to 100.0.2.30 and of CL1-Z2's packets to 200.0.2.30. The optimization device to which the NetScaler appliance sends the translated packets is configured to use a packet's source IP address to recognize the zone, so it applies the appropriate optimization configured for the zone from which the packet originated.

Configuration Steps

Configuring IP prefix NAT consists of the following steps:

- **Create a net profile and set the NAT Rule parameter of a net profile.** A NAT rule specifies two IP addresses and a net mask. The first IP address (specified by IP Address parameter) is the source IP address that is to be translated with the second one (specified by IP Rewrite parameter). The net mask specifies the part of the source IP address that is to be translated with the same part of the second IP address.
- **Bind the net profile to load balancing virtual servers or services.** A net profile with NAT rule setting can be bound to a virtual server or service of type ANY, UDP, DNS, TCP, and HTTP. After binding a net profile to a virtual server or service, the NetScaler appliance matches the source IP address of the incoming packets related to the virtual server or service with the NAT rule setting. The NetScaler then performs IP prefix NAT for packets that match the NAT rule.

To configure IP prefix NAT translation by using the command line:

At the command prompt, type:

- **bind netProfile** <name> (-**natRule** <ip_addr> <netmask> <rewritelp>)
- **show netprofile** <name>

To configure IP prefix NAT by using the GUI:

1. Navigate to **System > Network > Net Profiles**.
2. Set the following parameters under NAT Rules while adding or modifying NetProfiles.
 - IP Address
 - Netmask

- Rewrite IP

Sample configuration

In the following sample configuration, net profile PARTIAL-NAT-1 has IP prefix NAT settings and is bound to load balancing virtual server LBVS-1, which is of type ANY. For packets received on LBVS-1 from 192.0.0.0/8, the NetScaler appliance translates the last octet of the packet's source IP address to 100. For example, a packet with source IP address 192.0.2.30 received on LBVS-1, the NetScaler appliance translates the source IP address to 100.0.2.30 before sending it one of the bound servers.

```
1 > add netprofile PARTIAL-NAT-1
2 Done
3
4 > bind netprofile PARTIAL-NAT-1 -natrule 192.0.0.0 255.0.0.0 100.0.0.0
5 Done
6
7 > add lb vserver LBVS-1 ANY 203.0.113. 61 * -netprofile PARTIAL-NAT-1
8 Done
```

Static ARP

May 2, 2023

You can add static ARP entries to and remove static ARP entries from the ARP table. After adding an entry, you should verify the configuration. If the IP address, port, or MAC address changes after you create a static ARP entry, you must remove or manually adjust the static entry. Therefore, creating static ARP entries is not recommended unless necessary.

To add a static ARP entry by using the CLI:

At the command prompt, type:

- **add arp -IPAddress** <ip_addr> **-mac**<mac_addr> **-ifnum** <interface_name>
- **show arp** <IPAddress>

Example:

```
1 > add arp -ip 10.102.29.6 -mac 00:24:e8:73:ca:ec -ifnum 1/1
2 Done
```

To remove a static ARP entry by using the CLI:

At the command prompt, type the **rm arp** command and the IP address.

To add a static ARP entry by using the GUI:

Navigate to **System > Network > ARP Table**, and add a static ARP entry.

Specify a VLAN in a Static ARP Entry

In a static ARP entry, you can specify the VLAN through which the destination device is accessible. This feature is useful when the interface specified in the static ARP entry is part of multiple tagged VLANs and the destination is accessible through one of the VLANs. The NetScaler appliance includes the specified VLAN ID in the outgoing packets matching the static ARP entry. If you don't specify a VLAN ID in an ARP entry, and the specified interface is part of multiple tagged VLANs, the appliance assigns the interface's native VLAN to the ARP entry.

For example, say NetScaler interface 1/2 is part of native VLAN 2 and of tagged VLANs 3 and 4, and you add a static ARP entry for network device A, which is part of VLAN 3 and is accessible through interface 1/2. You must specify VLAN 3 in the ARP entry for network device A. The NetScaler appliance then includes tagged VLAN 3 in all the packets destined to network device A, and sends them from interface 1/2.

If you don't specify a VLAN ID, the NetScaler appliance assigns native VLAN 2 for the ARP entry. Packets destined to device A are dropped in the network path, because they do not specify tagged VLAN 3, which is the VLAN for device A.

To specify a VLAN in a static ARP entry by using the CLI:

At the command prompt, type:

- **add arp -IPAddress** <ip_addr> **-mac**<mac_addr> **-ifnum** <interface_name> [**-vlan** <positive_integer>]
- **show arp** <IPAddress>

Example:

```
1 > add arp -ip 198.51.100.91 -mac 36:db:4b:f6:12:15 -ifnum 1/2 -vlan 3
2 Done
```

Set the Timeout for Dynamic ARP Entries

September 21, 2020

You can globally set an aging time (time-out value) for dynamically learned ARP entries. The new value applies only to ARP entries that are dynamically learned after the new value is set. Previously existing ARP entries expire after the previously configured aging time. You can specify an ARP time-out value of from 1 through 1200 seconds.

To set the time-out for dynamic ARP entries by using the CLI:

At the command prompt, type:

- **set arpparam -timeout** <positive_integer>]
- **show arpparam**

Example:

```
1 > set arpparam -timeout 500
2 Done
```

To set the time-out for dynamic ARP entries to its default value by using the CLI:

At the command prompt, type:

- **unset arpparam**
- **show arpparam**

Example:

```
1 > unset arpparam
2 Done
```

To set the time-out for dynamic ARP entries by using the GUI:

Navigate to **System > Network**, in the **Settings** group, click **Configure ARP Global Parameters**, and set the **ARP Table Entry Timeout** parameter.

Neighbor Discovery

May 2, 2023

Neighbor discovery (ND) is one of the most important protocols of IPv6. It is a message-based protocol that combines the functionality of the Address Resolution Protocol (ARP), Internet Control Message Protocol (ICMP), and Router Discovery. ND allows nodes to advertise their link layer addresses and obtain the MAC addresses or link layer addresses of the neighboring nodes. This process is performed by the Neighbor Discovery protocol (ND6).

Neighbor discovery can perform the following functions:

- **Router Discovery:** Enables a host to discover the local routers on an attached link and automatically configure a default router.
- **Prefix Discovery:** Enables the host to discover the network prefixes for local destinations.

Note: The NetScaler appliance does not support Prefix Discovery.

- **Parameter Discovery:** Enables a host to discover additional operating parameters, such as MTU and the default hop limit for outbound traffic.
- **Address Autoconfiguration:** Enables hosts to automatically configure IP addresses for interfaces both with and without stateful address configuration services such as DHCPv6. The NetScaler does not support Address Autoconfiguration for Global IPv6 addresses.
- **Address Resolution:** Equivalent to ARP in IPv4, enables a node to resolve a neighboring node's IPv6 address to its link-layer address.
- **Neighbor Unreachability Detection:** Enables a node to determine the reachability state of a neighbor.
- **Duplicate Address Detection:** Enables a node to determine whether an NSIP address is already in use by a neighboring node.
- **Redirect:** Equivalent to the IPv4 ICMP Redirect message, enables a router to redirect the host to a better first-hop IPv6 address to reach a destination.

Note: The NetScaler appliance does not support IPv6 Redirect.

Configuration Steps

Configuring neighbor discovery consists of the following tasks:

- Adding IPv6 neighbors
- (Optional) Removing IPv6 neighbors

CLI procedures

To add an IPv6 neighbor by using the CLI:

At the command prompt, type:

- **add nd6** <neighbor> <mac> <ifnum> [-vlan <integer>]
- **sh nd6**

Example:

```

1 > add nd6 2001::1 00:04:23:be:3c:06 1/1 -vlan 1
2   Done
3
4 > show nd6
5   Neighbor                               MAC-Address(Vlan, Interface)      State
6   -----                               -
   
```


7	1)	::1	00:d0:68:0b:58:da(1,	LO/1)	REACHABLE
		PERMANENT				
8	2)	fe80::2d0:68ff:fe0b:58da	00:d0:68:0b:58:da(1,	LO/1)	REACHABLE
		PERMANENT				
9	3)	2001::1	00:04:23:be:3c:06(1,	1/1)	REACHABLE
		STATIC				
10	Done					

To remove a neighbor discovery entry by using the CLI:

At the command prompt, type:

- **rm nd6** <Neighbor> -vlan <VLANID>

Example:

```
1 rm nd6 3ffe:100:100::1 -vlan 1
```

To remove all neighbor discovery entries by using the CLI:

At the command prompt, type:

- **clear nd6**

GUI procedures

To add an IPv6 neighbor by using the GUI:

Navigate to **System > Network > IPv6 Neighbors**, and add a new IPv6 neighbor.

To remove a neighbor discovery entry by using the GUI:

Navigate to **System > Network > IPv6 Neighbors**, delete the IPv6 neighbor.

To remove all neighbor discovery entries by using the GUI:

Navigate to **System > Network > IPv6 Neighbors**, and click **Clear**.

IP Tunnels

May 2, 2023

An IP Tunnel is a communication channel, that can be created by using encapsulation technologies, between two networks that do not have a routing path. Every IP packet that is shared between the two networks is encapsulated within another packet and then sent via the tunnel.

The NetScaler appliance implements IP Tunneling in the following ways:

- **NetScaler as an Encapsulator (Load Balancing with DSR Mode):** Consider an organization that has multiple data centers across different countries, where the NetScaler maybe at one location and the back-end servers are located in a different country. In essence, the NetScaler and the back-end servers are on different networks and are connected via a router.

When you configure Direct Server Return (DSR) on this NetScaler, the packet sent from the source subnet is encapsulated by the NetScaler and sent via a router and tunnel to the appropriate back-end server. The back-end server decapsulates the packet and responds directly to the client, without allowing the packet to pass via the NetScaler.

- **NetScaler as a Decapsulator:** Consider an organization having multiple data centers each having NetScalers and back-end servers. When a packet is sent from data center A to data center B it is usually sent via an intermediary, say a router or another NetScaler. The NetScaler processes the packet and then forwards the packet to the back-end server. However, if an encapsulated packet is sent, the NetScaler must be able to decapsulate the packet before sending it to the back-end servers. To enable the NetScaler to function as a decapsulator, a tunnel is added between the router and the NetScaler. When the encapsulated packet, with additional header information, reaches the NetScaler, the data packet is decapsulated i.e. the additional header information is removed, and the packet is then forwarded to the appropriate back-end servers.

The NetScaler can also be used as a decapsulator for the Load Balancing feature, specifically in scenarios when the number of connections on a vserver exceeds a threshold value and all the new connections are then diverted to a back-up vserver.

The IP Tunnel feature is available with a NetScaler Premium edition license. For more information about NetScaler edition licenses and NetScaler features matrix, see [NetScaler Editions data sheet](#).

Configure IP Tunnels

Configuring IP tunnels on a NetScaler appliance consists of creating IP tunnel entities. An IP tunnel entity specifies the local and remote tunnel end-point IP addresses and the protocol to be used for the IP tunnel.

Note: While configuring an IP tunnel in a cluster setup, the local IP address must be a striped SNIP address.

CLI procedures

To create an IP tunnel by using the CLI:

At the command prompt type:

- `add iptunnel <name> <remote> <remoteSubnetMask> <local> -type -protocol
(ipoverip | GRE)`

- **show iptunnel**

To remove an IP tunnel by using the CLI:

To remove an IP tunnel, type the **rm iptunnel** command and the name of the tunnel.

To create an IPv6 tunnel by using the CLI:

At the command prompt type:

- **add ip6tunnel** <name> <remotelp> <local>
- **show ip6tunnel**

To remove an IPv6 tunnel by using the CLI:

To remove an IPv6 tunnel, type the **rm ip6tunnel** command and the name of the tunnel.

GUI procedures

To create an IP Tunnel by using the GUI:

Navigate to **System > Network > IP Tunnels**, add a new IP tunnel.

To create an IPv6 Tunnel by using the GUI:

Navigate to **System > Network > IP Tunnels > IPv6 Tunnels**, and add a new IPv6 tunnel.

Customizing IP Tunnels Globally

By globally specifying the source IP address, you can assign a common source IP address across all tunnels. Also, because fragmentation is CPU-intensive, you can globally specify that the NetScaler appliance drop any packet that requires fragmentation. Alternatively, if you would like to fragment all packets as long as a CPU threshold value is not reached, you can globally specify the CPU threshold value.

CLI procedures

To globally customize IP tunnels by using the CLI:

At the command prompt, type:

- **set ipTunnelParam** **-srcIP** <sourceIPAddress> **-srcIPRoundRobin** (**YES** | **NO**) **-dropFrag** [**YES** | **NO**] **-dropFragCpuThreshold** <Positive integer>
- **show ipTunnelParam**

Example:

```
1 > set iptunnelparam -srcIP 12.12.12.22 -dropFrag Yes -
   dropFragCpuThreshold 50
2 Done
3
4 > set iptunnelparam -srcIPRoundRobin YES -dropFrag Yes -
   dropFragCpuThreshold 50
5 Done
```

To globally customize IPv6 tunnels by using the CLI:

At the command prompt, type:

- **set ip6tunnelparam** -srcIP <IPv6Address> -srcIPRoundRobin (YES | NO) -dropFrag [YES | NO] -dropFragCpuThreshold <Positive integer>
- **show ip6tunnelparam**

GUI procedures

To globally customize IP tunnels by using the GUI:

Navigate to **System > Network**, in the Settings group, click **IPv4 Tunnel Global Settings**.

1. Navigate to **System > Network**, in the **Settings** group, click **IPv6 Tunnel Global Settings**.
2. In the **Configure IP Tunnel Global Parameters** dialog box, set the parameters.

To globally customize IPv6 tunnels by using the GUI:

1. Navigate to **System > Network**, in the **Settings** group, click **IPv6 Tunnel Global Settings**.
2. In the **Configure IP Tunnel Global Parameters** dialog box, set the parameters.

GRE Payload Options in a GRE IP Tunnel

For a configured GRE IP tunnel, the NetScaler appliance encapsulates the entire Layer 2 packet, including the Ethernet header and the VLAN header (dot1q VLAN tag). IP GRE tunnels between NetScaler appliances and some 3rd party devices might not be stable, because these 3rd party devices are not programmed to process some or the Layer 2 packet headers. To configure a stable IP GRE tunnel between a NetScaler appliance and a 3rd party device, you can use the GRE payload parameter of the GRE IP tunnel command set. GRE payload setting can also be applied to a GRE with IPsec tunnel.

You can set the GRE payload parameter to do one of the following before the packet is sent through the GRE tunnel:

- **Ethernet with DOT1Q.** Carry the Ethernet header as well the VLAN header. This is the default setting. For a tunnel bound to a netbridge, inner Ethernet header and VLAN header contains

information from the ARP and bridge table of the NetScaler appliance. For a tunnel set as a next hop to a PBR rule, Inner Ethernet destination MAC address is set to zero and the VLAN header specifies the default VLAN. The encapsulated (GRE) packet sent from the NetScaler tunnel end point has the following format:

Outer Ethernet Header	Outer IP Header	GRE Header	Inner Ethernet	Inner VLAN header	Inner IP/IPv6/ARP header	Inner TCP/UDP Header	Payload
------------------------------	------------------------	-------------------	-----------------------	--------------------------	---------------------------------	-----------------------------	----------------

- **Ethernet.** Carry the Ethernet header but drop the VLAN header. Because the packets do not carry any VLAN information in the tunnel, for a tunnel with this setting and bound to a netbridge, you must bind an appropriate VLAN to the netbridge so that on receiving any packets on the tunnel, the NetScaler can forward these packet to the specified VLAN. If the tunnel is set as a next hop in a PBR rule, the NetScaler routes the packets that are received on the tunnel. The encapsulated (GRE) packet sent from the NetScaler tunnel end point has the following format:

Outer Ethernet header	Outer IP header	GRE Header	Inner Ethernet header	Inner IP/IPv6/ARP header	Inner TCP/UDP header	Payload
------------------------------	------------------------	-------------------	------------------------------	---------------------------------	-----------------------------	----------------

- **IP.** Drop the Ethernet header as well as the VLAN header. Because tunnels with this setting do not carry Layer 2 headers, these tunnels cannot be bound to a netbridge but can be set as a next hop in a PBR rule. The peer tunnel endpoint device on receiving the packet either consumes or routes it. The encapsulated (GRE) packet sent from the NetScaler tunnel end point has the following format:

Outer Ethernet header	Outer IP header	GRE header	Inner IP/IPv6 header	Inner TCP/UDP header	Payload
------------------------------	------------------------	-------------------	-----------------------------	-----------------------------	----------------

To drop Layer 2 headers of packets in a GRE IP tunnel by using the CLI:

- **add iptunnel** <name> <remote> <remoteSubnetMask> <local> [-**protocol** <GRE> [-**vlan** <positive_integer>]] [-**greypayload** <greypayload>] [-**ipsecProfileName** <string>]
- **show iptunnel** <tunnelname>

Example:

```

1 > add iptunnel IPTUNNEL-1 203.0.113.133 255.255.255.0 198.51.100.15 -
    protocol GRE -greypayload Ethernet -ipsecProfileName IPTUNNEL-IPSEC
    -1
2 Done

```

IPv6 Traffic through GRE IPv4 Tunnels

The NetScaler appliance supports transferring IPv6 traffic through an IPv4 GRE tunnel. This feature can be used for enabling communication between isolated IPv6 networks without upgrading the IPv4 infrastructure between them.

For configuring this feature, you associate a PBR6 rule with the configured IPv4 GRE tunnel through which you want the NetScaler to send and receive IPv6 traffic. The source IPv6 address and destination IPv6 address parameters of the PBR6 rule specify the IPv6 networks whose traffic is to traverse the IPv4 GRE tunnel.

Note: IPsec protocol is not supported on GRE IPv4 tunnels that are configured to transfer IPv6 packets.

To create a GRE IPv4 tunnel by using the CLI:

At the command prompt, type:

- **add ipTunnel** <name> <remote> <remoteSubnetMask> <local> **-protocol GRE**
- **show ipTunnel** <name>

To associate a PBR6 rule with a GRE IPv4 tunnel by using the CLI:

- **add ns pbr6** <pbrName> **ALLOW -srcIPv6** <network-range> **-dstIPv6** <network-range> **-ipTunnel** <tunnelName>
- **show pbr**

Sample configuration

In the following sample configuration, GRE IP tunnel TUNNEL-V6onV4 is created with remote tunnel endpoint IP address 10.10.6.30 and local tunnel endpoint IP address 10.10.5.30. The tunnel is then bound to pbr6 PBR6-V6onV4. The srcIPv6 specifies the IPv6 network connected to the local endpoint and destIPv6 specifies the IPv6 network connected to the remote endpoint. The traffic from these IPv6 networks are allowed to traverse through the GRE IPv4 tunnel.

```
1 > add ipTunnel TUNNEL-V6onV4 10.10.6.30 255.255.255.255 10.10.5.30 -  
  protocol GRE  
2 -ipsecProfileName None  
3 Done  
4 > add ns pbr6 PBR6-V6onV4 ALLOW -srcIPv6 = 2001:0db8:1::1-2001:0db8  
  :1::255 -destIPv6 =  
5 1-2001:0db8:4::255 -ipTunnel TUNNEL-V6onV4
```

Send Response Traffic Through an IP-IP Tunnel

You can configure a NetScaler appliance to send response traffic through an IP-IP tunnel instead of routing it back to the source. By default, when the appliance receives a request from another NetScaler or a third-party device through an IP-IP tunnel, it routes the response traffic instead of sending it through the tunnel. You can use policy based routes (PBRs) or enable MAC-Based Forwarding (MBF) to send the response through the tunnel.

In a PBR rule, specify the subnets at both end points whose traffic is to traverse the tunnel. Also set the next hop as the tunnel name. When response traffic matches the PBR rule, the NetScaler appliance sends the traffic through the tunnel.

Alternatively, you can enable MBF to meet this requirement, but the functionality is limited to traffic for which the NetScaler appliance stores session information (for example, traffic related to load balancing or RNAT configurations). The appliance uses the session information to send the response traffic through the tunnel.

CLI procedures

To create a PBR rule and associate the IP-IP tunnel to it by using the CLI:

At the command prompt, type:

- **add ns pbr** <pbr_name> **ALLOW** -**srcIP** = <local_subnet_range> -**destIP** = <remote_subnet_range> -**ipTunnel** <tunnel_name>
- **apply ns pbrs**
- **show ns pbr** <pbr_name>

To enable MAC-based forwarding by using the CLI:

At the command prompt, type:

- **enable ns mode MBF**
- **show ns mode**

GUI procedures

To create a PBR rule and associate the IP-IP tunnel to it by using the GUI:

1. Navigate to **System > Network > PBRs**. On the **PBRs** tab, create a **PBR** rule.
2. While creating the PBR, set the **Next Hop Type** to **IP tunnel** and **IP Tunnel Name** to the configured IP-IP tunnel name.

To enable MAC-based forwarding by using the GUI:

1. Navigate to **System > Settings**, in **Modes and Features**, click **Configure Modes**.
2. On the **Configure Modes** page, select **MAC-based forwarding**.

Sample configuration

Consider an example of an IPIP tunnel, NS1-NS2-IPIP, which is set up between two NetScaler appliances NS1 and NS2.

By default, for any request that NS2 receives through the tunnel, its routes the response traffic to the source instead of sending it (to NS1) through the tunnel.

You can configure policy based routes (PBRs) or enable MAC-Based Forwarding (MBF) on NS2 for enabling it to send the response through the tunnel.

In the following sample configuration on NS2, NS1-NS2-IPIP is an IPIP tunnel and NS1-NS2-IPIP-PBR is a PBR rule. For requests (with inner source IP address in the range 10.102.147.0-10.102.147.255 and inner destination IP address in the range 10.102.147.0-10.102.147.255) received by NS2 through the tunnel, NS2 sends the corresponding response through the tunnel (to NS1) instead of routing it to the source. The functionality is limited to the traffic that matches the PBR rule.

```
1 > add iptunnel NS1-NS2-IPIP 192.0.2.99 255.255.255.255 203.0.113.99 -  
    protocol IPIP  
2  
3 Done  
4 > add pbr NS1-NS2-IPIP-PBR -srcIP 10.102.147.0-10.102.147.255 -destIP  
    10.20.1.0-10.20.1.255 -ipTunnel NS1-NS2-IPIP  
5  
6 Done  
7 > apply pbrs  
8  
9 Done
```

Alternatively, MBF can be enabled on NS2. The functionality is limited to traffic for which NS2 stores session information (for example, traffic related to load balancing or RNAT configurations).

```
1 > enable ns mode MBF  
2  
3 Done
```

Class E IPv4 packets

May 2, 2023

By default, the NetScaler appliance drops any packets if they contain any class E IPv4 address in the

source IP or the destination IP fields. If your setup is using class E IPv4 addresses, you can configure the NetScaler appliance to process class E IPv4 packets.

Before you begin

Before you begin configuring a NetScaler appliance to process class E IPv4 packets, note the following points:

- NetScaler appliances do not support configuring any NetScaler owned IPv4 address (for example, SNIP and VIP) in the class E range. NetScaler appliances only support processing of class E IPv4 packets.
- A NetScaler appliance internally uses class E IPv4 addresses for the IPv6 feature. The NetScaler appliance does not support both features (processing class E IPv4 packets and IPv6 support) working at the same time. The NetScaler appliance imposes a restriction to not enable the IPv6 feature when processing of class E IPv4 packets is enabled, and vice versa.

Configuration steps

Configuring a NetScaler appliance to process class E IPv4 packets consist of the task of enabling the **IPv4 Class E address clients (allowClassEIPv4)** Layer 3 parameter.

CLI procedures

To configure the NetScaler appliance to process Class E IPv4 packets by using the CLI:

At the command prompt, type:

```
set l3param -allowClassEIPv4 (ENABLED DISABLED)
```

- **show l3param**

Sample Configuration:

```
1 > set l3param -allowClassEIPv4 ENABLED
2
3 Done
4
5 > sh l3param
6
7     Network L3 related Configuration Parameters
```

```
8
9     icmpgen_rate_threshold      : 100
10
11     srcnat                      : ENABLED
12
13     override_rnat              : DISABLED
14
15     drop_df_flag               : DISABLED
16
17     .
18
19     .
20
21     .
22
23     IPv6DynamicRouting         : DISABLED
24
25     allowClassEIPv4           : ENABLED
26
27 Done
```

GUI procedures

To configure the NetScaler appliance to process Class E IPv4 packets by using the GUI:

1. Navigate to **System > Network**, and then in the **Settings** section, click **Configure Layer 3 Parameters**.
2. Select **IPv4 Class E address clients** and click **OK**.

Monitor the free ports available on a NetScaler appliance for a new back-end connection

May 2, 2023

For communication with the physical servers or other peer devices, the NetScaler appliance uses a Citrix owned IP address as the source IP address. The NetScaler appliance maintains a pool of its IP addresses, and dynamically selects an IP address while connecting with a server. Depending on the subnet in which the physical server is placed, the appliance decides which IP address to use. This address pool is used for sending traffic and monitor probes.

You can display the total number of free ports available on the NetScaler owned IP addresses for a new back-end connection. This information helps you in deciding the need for more NetScaler owned IP addresses if the free ports available are nearing exhaustion.

You can provide the following information for the NetScaler appliance to calculate the total number of free ports available for a new back-end connection:

- Citrix owned IP address (optional)
- Destination IP address
- Destination port
- TCP or non-TCP protocol

When you specify all the information except specifying a Citrix owned IP address:

- The NetScaler appliance performs a route lookup for finding all the NetScaler owned IP addresses that can connect to the destination IP address. The appliance then finds and displays the total number of free ports available on these NetScaler owned IP addresses for the specified new back-end connection.

Note:

The NetScaler appliance does not perform ECMP lookup, or LLB lookup path, or PBR lookup path for finding the NetScaler owned IP addresses that can connect to the destination IP address.

When you specify all the information including specifying a Citrix owned IP address:

- The NetScaler appliance displays the number of free ports available on the specified IP address for the specified new back-end connection.

Before you begin

Before you display the total number of free ports available for a new back-end connection, make note of the following points:

- The NetScaler appliance does not perform ECMP lookup, or LLB lookup path, or PBR lookup path for finding the NetScaler owned IP addresses that can connect to the destination IP address.
- The NetScaler appliance does not support displaying free ports available on a link local IP address.

Steps for displaying the number of free ports available on a NetScaler appliance for a new back-end connection

To display the total number of free ports available on a NetScaler appliance for a new back-end connection:

At the command prompt type:

```

• show portallocation    ipv6_addr>] -destIP <ip_addr    ipv6_addr> -destPort
  [-srcIP <ip_addr        -**protocol** <1 for TCP, 0 for
                               non-TCP protocol>

```

Example - total number of free ports available on a standalone NetScaler appliance:

```

1 > show portallocation -destip 198.51.100.30 -destport 80 -protocol 1
2
3      Freeports available : 64505
4 Done
5
6
7 > show portallocation -srcip 192.0.2.30 -destip 198.51.100.30 -destport
   80 -protocol 1
8
9      Freeports available for IPAddress 192.0.2.30 : 20505
10 Done

```

Example - total number of free ports available on a Cluster setup:

The following example output displays the total number of free ports available on each node of a two node cluster setup.

```

1 > show portallocation -destip 198.51.100.30 -destport 80 -protocol 1
2
3      Node Id: 1
4      Freeports available : 32321
5
6      Node Id: 0
7      Freeports available : 32184
8
9 Done

```

Monitor the ports usage on a NetScaler appliance for back-end connections using SNMP

You can use the `PORT-ALLOC-EXCEED` SNMP alarm to monitor the ports usage on a NetScaler appliance for back-end connections.

`PORT-ALLOC-EXCEED` SNMP alarm includes the `high-threshold` and `normal-threshold` parameters, which specify the total allocated ports of the NetScaler owned IP addresses as percentages. For example, if the `high-threshold` parameter is set to 90, the NetScaler appliance generates and sends trap messages when the following event happens:

- when the port allocation percentage exceeds 90 percent on any of the NetScaler owned IP address for the back-end connections

The SNMP alerts help you in deciding the need for more NetScaler owned IP addresses if the free ports available are nearing exhaustion.

To Monitor the ports usage on a NetScaler appliance for back-end connections using SNMP

At the command prompt type:

```

• set snmp alarm (DISABLED) -severity -state (DISABLED) -thresholdValue
PORT-ALLOC-EXCEED (ENABLED) [-normalValue] -time
-logging (ENABLED)
    
```

- **sh snmp alarm PORT-ALLOC-EXCEED**

Example:

```

1 > set snmp alarm PORT-ALLOC-EXCEED -logging ENABLED -severity Major -
  state ENABLED -thresholdValue 90 -time 1200
2 Done
3
4 > sh snmp alarm port-alloc-EXCEED
5
6 Alarm          Alarm Threshold      Normal Threshold      Time
   State          Severity          Logging
7 -----
8 1) PORT-ALLOC-EXCEED      80              80              7200
   ENABLED          Major              ENABLED
9 Done
    
```

For more information on configuring SNMP alarms and SNMP trap listeners, see [Configuring the NetScaler to generate SNMP traps](#).

Interfaces

May 2, 2023

Before you begin configuring interfaces, decide whether your configuration can use MAC-based forwarding mode, and either enable or disable this system setting accordingly. The number of interfaces in your configuration is different for the different models of the NetScaler appliance. In addition to configuring individual interfaces, you can logically group interfaces, using VLANs to restrict data flow within a set of interfaces, and you can aggregate links into channels. In a high availability setup, you

can configure a virtual MAC address if necessary. If you use L2 mode, you might want to modify the aging of the bridge table.

When your configuration is complete, decide whether you should enable the system setting for path MTU discovery. NetScaler appliances can be deployed in active-active mode using VRRP. An active-active deployment, in addition to preventing downtime, makes efficient use of all the NetScaler appliances in the deployment. You can use the Network Visualizer tool to view the network configuration of a NetScaler deployment and configure interfaces, channels, VLANs, and bridge groups.

Configuring MAC-Based Forwarding


June 21, 2024

With MAC-based forwarding (MBF) enabled, when a request reaches the NetScaler appliance, the appliance remembers the source MAC address of the frame and uses it as the destination MAC address for the resulting replies. MAC-based forwarding can be used to avoid multiple-route/ARP lookups and to avoid asymmetrical packet flows. MAC-based forwarding may be required when the NetScaler is connected to multiple stateful devices, such as VPNs or firewalls, because it ensures that the return traffic is sent to the same device that the initial traffic came from.

MAC-based forwarding is useful when you use VPN devices, because it guarantees that all traffic flowing through a VPN passes back through the same VPN device.

The following topology diagram illustrates the process of MAC-based forwarding.

Figure 1. MAC-Based Forwarding Mode

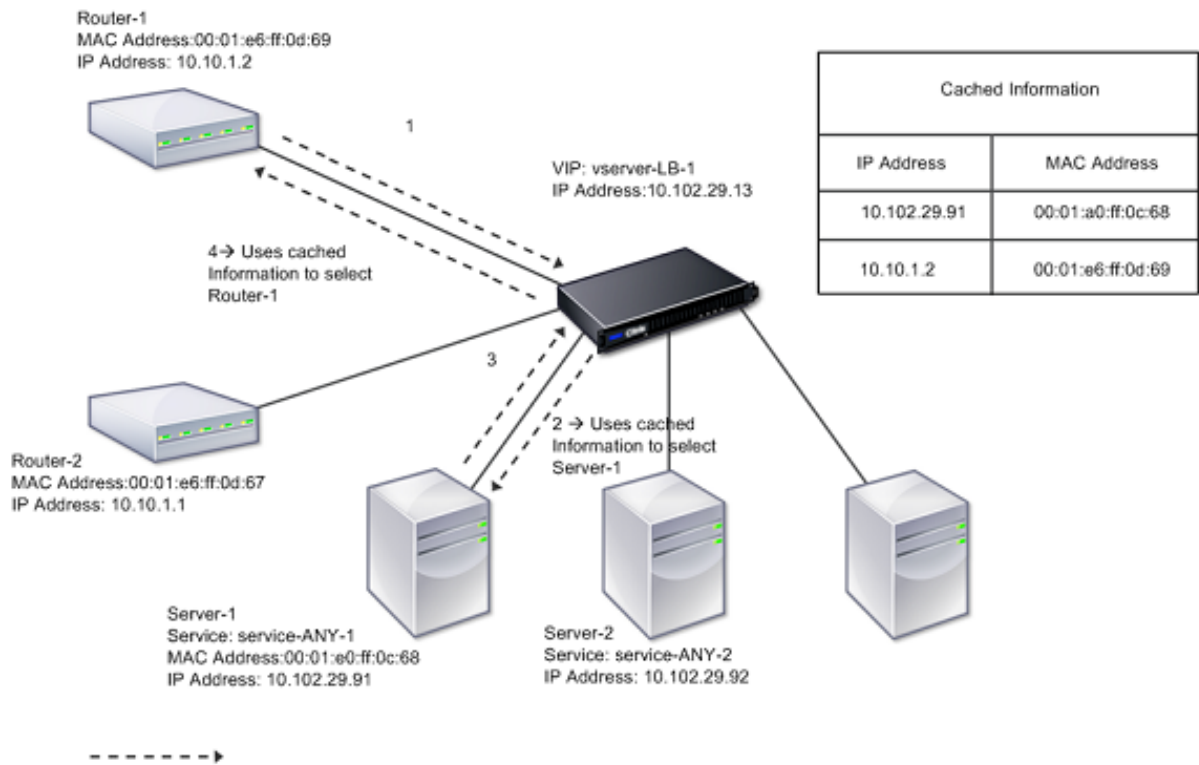

When MAC-based forwarding (MBF) is enabled, the NetScaler caches the MAC address of:

- The source (a transmitting device such as router, firewall, or VPN device) of the inbound connection.
- The server that responds to the requests.

When a server replies through the NetScaler appliance, the appliance sets the destination MAC address of the response packet to the cached address, ensuring that the traffic flows in a symmetric manner, and then forwards the response to the client. The process bypasses the route table lookup and ARP lookup functions. However, when the NetScaler initiates a connection, it uses the route and ARP tables for the lookup function.

For more information about direct server return configurations, see [Load Balancing](#).

Some deployment topologies may require the incoming and outgoing paths to flow through different routers. MAC-based forwarding would break this topology design.

MBF should be disabled in the following situations:

- **When a server uses network interface card (NIC) teaming without using LACP (802.1ad Link Aggregation).** To enable MAC-based forwarding in this situation, you must use a layer 3 device between the NetScaler and server.

Note: MBF can be enabled when the server uses NIC teaming with LACP, because the virtual interface uses one MAC address.

- **When firewall clustering is used.** Firewall clustering assumes that ARP is used to resolve the MAC address for inbound traffic. Sometimes the inbound MAC address can be a non-clustered MAC address and should not be used for inbound packet processing.

When MBF is disabled, the appliance uses L2 or L3 connectivity to forward the responses from servers to the clients. Depending on the route table, the routers used for outgoing connection and incoming connection can be different. In the case of reverse traffic (response from the server):

- If the source and destination are on different IP subnets, the appliance uses the route lookup to locate the destination.
- If the source is on the same subnet as the destination, the NetScaler looks up the ARP table to locate the network interface and forwards the traffic to it. If the ARP table does not exist, the NetScaler requests the ARP entries.

To enable or disable MAC-based forwarding by using the CLI:

At the command prompt, type:

- **enable ns mode MBF**
- **disable ns mode MBF**

To enable or disable MAC-based forwarding by using the GUI:

1. Navigate to **System > Settings**, in the **Modes and Features** group, click **Configure modes**.
2. Select or clear the **MAC-based forwarding** option.

MAC based forwarding for a load balancing setup

Some load balancing setups require that the NetScaler appliance bypasses the global MBF (if enabled) for these setups and instead use the route/ARP lookups for sending packets to the destination.

The MBF parameter of a net profile is used to enable or disable MBF for a specific load balancing configuration. MBF can be set for the client side as well as the server side of a load balancing configuration by binding net profiles (MBF enabled or disabled) to the virtual server and the services.

For example, if a net profile with MBF disabled is bound to the virtual server of a load balancing configuration, the NetScaler appliance bypasses the global MBF (if enabled) and instead use the route/ARP lookups for sending response packets to clients.

Before you begin

Before you begin configuring MBF for a load balancing configuration, note the following points:

- In a load balancing configuration, the client side (virtual server) and the server side (service/service groups) can have different MBF settings.

- A load balancing configuration inherits global MBF setting if MBF is not set explicitly in the net profiles bound to the virtual server and the services.
- In a load balancing configuration, server side (service) inherits client side MBF setting of net profile bound to the virtual server if no net profile is bound to the service.
- In a load balancing configuration with direct server return mode, client side inherits the MBF setting in the net profile bound to the service.
- In a content switching configuration, client side takes the MBF setting in the net profile bound to the content switching virtual server instead of from the target load balancing virtual server.

Limitations

Before you begin configuring MBF for a load balancing configuration, note the following limitations:

- MBF setting for load balancing configurations is not supported in a cluster setup.
- For a load balancing virtual server with MAC mode or L2Conn settings, MBF is enabled irrespective of the MBF setting in the bound net profile to the virtual server.
- The NetScaler appliance does not support setting MBF for load balancing monitors using net profile. In other words, the MBF setting of a net profile is not applied to the monitors to which the net profile is bound. The global MBF setting is applied to monitors irrespective of the MBF setting of the bound net profile.

Configure MBF for load balancing configuration

Configuring MBF for a load balancing configuration consists of the following tasks:

- Enable MBF parameter in a net profile.
- Bind the net profile to a load balancing virtual server or services.

To enable MBF in a net profile by using the CLI:

- To enable MBF while adding a net profile, at the command prompt, type:
 - **add netProfile** <name> -**MBF** (**ENABLED** | **DISABLED**)
 - **show netprofile** <name>
- To enable MBF in an existing net profile, at the command prompt, type:
 - **set netProfile** <name> -**MBF** (**ENABLED** | **DISABLED**)
 - **show netprofile** <name>

To enable MBF in a net profile by using GUI**

1. Navigate to **System > Network > Net Profiles**.

2. Enable the **MBF** parameter while adding or modifying a net profile.

In the following sample configuration, net profile NETPROFILE-MBF-LBVS has MBF enabled and is bound to load balancing virtual server LBVS-1. Also, net profile NETPROFILE-MBF-SVC has MBF enabled and is bound to a load balancing service SVC-1.

```
1 > add netprofile NETPROFILE-MBF-LBVS -MBF ENABLED
2
3 Done
4
5 > add netprofile NETPROFILE-MBF-SVC -MBF ENABLED
6
7 Done
8
9 > set lb vserver LBVS-1 -netprofile NETPROFILE-MBF-LBVS
10
11 Done
12
13 > set service SVC-1 -netprofile NETPROFILE-MBF-SVC
14
15 Done
```

Configure network interfaces

November 7, 2023

Network interfaces in the NetScaler appliance are numbered in `<slot><port>` notation. After configuring your interfaces, display the interfaces and their settings to verify the configuration. You can also display this information to troubleshoot a problem in the configuration.

To manage the network interfaces, you can do the following;

- Enable some interfaces and disable others.
- Reset an interface to renegotiate its settings.
- Clear the accumulated statistics for an interface.

To verify the configuration, you can display the interface settings. You can display the statistics for an interface to evaluate its health.

Set the network interface parameters

The network interface configuration is neither synchronized nor propagated. For an HA pair, you must perform the configuration on each unit independently.

Note:

In an HA setup, if the `tag all` parameter is enabled, then the HA packets are also tagged with the VLAN traffic. However, there might be issues with the high availability communication. Therefore, it is recommended to configure NSVLAN or HA SYNC VLAN for HA traffic.

- For NSVLAN configuration, see [Configuring NSVLAN](#).
- For HA SYNC VLAN configuration, see [Configure HA SYNC VLAN](#).

To set the network interface parameters by using the CLI:

At the command prompt, type:

```
1 - set interface <id> [-speed <speed>] [-duplex <duplex>] [-flowControl
   <flowControl>] [-autoneg ( DISABLED | ENABLED )] [-haMonitor ( ON |
   OFF )] [ ( ON | OFF )] [-tagall ( ON | OFF )] [-lacpMode <lacpMode
   >] [-lacpKey<positive_integer>] [-lacpPriority <positive_integer>]
   [-lacpTimeout (LONG | SHORT )] [-ifAlias <string>] [-throughput <
   positive_integer>][-bandwidthHigh <positive_integer> [-
   bandwidthNormal <positive_integer>]]
2 - show interface [<id>]
```

Example:

```
1 > set interface 1/8 -duplex full
2 Done
```

To set the network interface parameters by using the GUI:

Navigate to **System > Network > Interfaces**, select the network interface that you want to modify (for example, 1/8), click **Edit**, and then set the parameters.

Setting the receive ring size and ring type for an interface

You can increase the receive ring size and ring type for IX, F1X, F2X, or F4X interfaces on NetScaler MPX and SDX platforms.

An increased ring size provides more cushion to handle burst traffic, but might impact the performance. A ring size of up to 8192 is supported for IX interfaces. A ring size of up to 4096 is supported for F1X, F2X, and F4X interfaces. The default ring size remains 2048.

Interface ring types are elastic by default. They increase or decrease in size based on packet arrival rate. You can configure the ring type as “fixed” in which case the ring size does not change based on traffic rate.

Note: This feature is supported from release 13.0 build 41.x, and supported on platforms that have IX, F1X, F2X, or F4X interfaces.

Use the `show hardware` command to identify whether your appliance has IX, F1X, F2X, or F4X interfaces.

Examples:

The following model has 16 F1X (10G) interfaces and 4 F4X (40G) interfaces.

```
1 > sh hardware
2 Platform: NSMPX-25000-40G 20*CPU+16*F1X+4*F4X+2*E1K+2*CVM N3
   250040
3 Manufactured on: 12/16/2016
4 CPU: 2800MHZ
5 Host Id: 234913926
6 Serial no: N43RJCRV3X
7 Encoded serial no: N43RJCRV3X
8 Netscaler UUID: 336a32d6-2cfa-11e8-bf01-00e0ed5dd23c
9 BMC Revision: 4.08
10 Done
```

The following model has 2 1X (10G) interfaces.

```
1 > sh hardware
2 Platform: NSMPX-10500 8*CPU+2*E1K+8*E1K+2*IX+8*CVM 1620 760100
3 Manufactured on: 12/27/2010
4 CPU: 2832MHZ
5 Host Id: 1707114630
6 Serial no: 7VZZV1ZXJ4
7 Encoded serial no: 7VZZV1ZXJ4
8 Netscaler UUID: eb1bfd72-5176-11e7-ba18-00e0ed1b0d12
9 Done
```

To configure ring size and ring type by using the CLI

At the command line, type:

```
1 set interface <id> -ringsize <positive_integer> -ringtype ( Elastic |
   Fixed )
```

Parameters:**ringsize:**

The receive ring size of the interface. A higher number provides more buffers to handle incoming traffic.

Default value: 2048

Minimum value: 512

Maximum value: 16384

ringtype:

The receive ring type of the interface. A fixed ring type preallocates the configured number of buffers irrespective of traffic rate. In contrast, an elastic ring, expands and shrinks based on incoming traffic

rate.

Possible values: Elastic, Fixed

Default value: Elastic

Example:

```
1 > set interface 40/2 -ringsize 4096 -ringtype Fixed
2 Done
3 > show interface 40/2
4
5 1)      Interface 40/2 (40G Ethernet, CR4, 40 Gbit) #21  flags=0xc020 <
        ENABLED, UP, UP, autoneg, HAMON, HEARTBEAT, 802.1q> MTU=1500, native
        vlan=10, MAC=00:e0:ed:75:14:2a, uptime 119h26m32s
6         Requested: media AUTO, speed AUTO, duplex AUTO, fctl OFF,
           throughput 0
7         Actual: media UTP, speed 40000, duplex FULL, fctl OFF,
           throughput 40000
8         LLDP Mode: NONE, LR Priority: 1024
9         RX: Pkts(1443972660032) Bytes(1457207315336105) Errs(0) Drops
           (53319) Stalls(0)
10        TX: Pkts(1452311431262) Bytes(1458534011197761) Errs(0) Drops
           (788) Stalls(0)
11        NIC: InDisc(0) OutDisc(0) Fctls(0) Stalls(0) Hangs(0) Muted(0)
12        Bandwidth thresholds are not set.
13        Rx Ring: Configured size=4096, Actual size=4096, Type: Fixed
14 Done
```

The last line shows the configured and actual ring size, and the ring type.

To configure ring size and ring type by using the GUI:

1. Navigate to **System > Network > Interfaces**.
2. Select your interface and click **Edit**.
3. In **Ring Size**, specify one of the following:
 - **IX interfaces:** 512, 1024, 2048, 4096, or 8192.
 - **F1X, F2X, or F4X interfaces:** 512, 1024, 2048, or 4096.
4. In **Ring Type**, select Elastic or Fixed.
5. Click **OK**.

Enable and disable network interfaces

By default, the network interfaces are enabled. Disable any network interface that is not connected to the network, so that it cannot send or receive packets. Disabling a network interface that is connected to the network in a high availability setup can cause a failover.

For more information about high availability, see [High Availability](#).

To enable or disable a network interface by using the CLI:

At the command prompt, type:

```
1 - enable interface <interface_num>
2 - show interface <interface_num>
3 - disable interface <interface_num>
4 - show interface <interface_num>
```

Example:

```
1 > enable interface 1/8
2 Done
3 > show interface 1/8
4 Interface 1/8 (Gig Ethernet 10/100/1000 Mbits) #2
5 flags=0x4004000 <ENABLED, DOWN, BOUND to LA/1, down, autoneg,
6 802.1q>
7 MTU=1514, MAC=00:d0:68:15:fd:3d, downtime 906h58m40s
8 Requested: media UTP, speed AUTO, duplex FULL, fctl OFF,
9 throughput 0
10 RX: Pkts(0) Bytes(0) Errs(0) Drops(0) Stalls(0)
11 TX: Pkts(0) Bytes(0) Errs(0) Drops(0) Stalls(0)
12 NIC: InDisc(0) OutDisc(0) Fctls(0) Stalls(0) Hangs(0) Muted(0)
13 Bandwidth thresholds are not set.
14 Done
```

To enable or disable a network interface by using the GUI:

1. Navigate to **System > Network > Interfaces**.
2. Select the network interface and, in the **Action** list, select Enable or Disable.

Reset network interfaces

Network interface settings control properties such as duplex and speed. To renegotiate the settings of a network interface, you must reset it.

To reset a network interface by using the CLI:

At the command prompt, type:

```
1 - reset interface <interface_num>
2 - show interface <interface_num>
```

Example:

```
1 > reset interface 1/8
2 Done
```

To reset a network interface by using the GUI:

1. Navigate to **System > Network > Interfaces**.
2. Select the network interface and, in the **Action** list, select **Reset Interface**.

Monitor a network interface

You can display network interface statistics to monitor parameters and use the information to check the health of the network interface. You can monitor parameters, such as packets sent and packets received, throughput, Link Aggregate Control Protocol (LACP) data units, and errors. You can clear the statistics of a network interface to monitor its statistics from the time the statistics are cleared.

To display the statistics of the network interfaces by using the CLI:

At the command prompt, type:

```
1 - stat interface <interface_num>
```

Example:

```
1 > stat interface 1/8
2 Done
```

To clear a network interface's statistics by using the CLI:

At the command prompt, type:

```
1 - clear interface <interface_num>
```

Example:

```
1 > clear interface 1/8
2 Done
```

To display the statistics of an Interface by using the GUI:

Navigate to **System > Network > Interfaces**, select the network interface, and click **Interface Statistics**.

To clear a network interface's statistics by using the GUI:

1. Navigate to **System > Network > Interfaces**.
2. Select the network interface and, in the **Action** list, select **Clear Statistics**.

Configuring Forwarding Session Rules

May 2, 2023

By default, the NetScaler appliance does not create session entries for traffic that it only forwards (L3 mode). For a case in which a client request that the appliance forwards to a server results in a response that has to return by the same path, you can create a forwarding-session rule. A forwarding-session rule creates forwarding-session entries for traffic that originates from or is destined for a particular network and is forwarded by the NetScaler. You can create forwarding session rules for IPv4 traffic as well as IPv6 traffic.

When configuring an IPv4 forwarding-session rule, you can specify either an IPv4 network address or an extended ACL as the condition for identifying IPv4 traffic for which to create a forwarding-session entry:

- **Network address.** When you specify an IPv4 network address, the appliance creates forwarding sessions for IPv4 traffic whose source or destination matches the network address.
- **Extended ACL rule.** When you specify an extended ACL rule, the appliance creates forwarding sessions for IPv4 traffic that matches the conditions specified in the extended ACL rule.

When configuring an IPv6 forwarding-session rule, you can specify either an IPv6 prefix or an ACL6 as the condition for identifying IPv6 traffic for which to create a forwarding-session entry:

- **IPv6 prefix.** When you specify an IPv6 prefix, the appliance creates forwarding sessions for IPv6 traffic whose source or destination matches the IPv6 prefix.
- **ACL6 rule.** When you specify an ACL6 rule, the appliance creates forwarding sessions for IPv6 traffic that matches the conditions specified in the ACL6 rule.

To create an IPv4 forwarding session rule by using the CLI:

At the command prompt, type the following commands to create a forwarding-session rule and verify the configuration:

- `add forwardingSession <name> [<network> <netmask>] [-aclname <string>] -connfailover (ENABLED | DISABLED)`
- `show forwardingSession`

Example:

```
1 A network address as the condition:
2
3 > add forwardingSession fs-nw-1 10.102.105.51 255.255.255.255
4   Done
5
6 An ACL as the condition:
7
8 > add forwardingSession fs-acl-1 acl1
9   Done
```

To configure an IPv4 forwarding session rule by using the GUI:

Navigate to System > Network > Forwarding Sessions, add a new IPv4 forwarding session, or edit an existing forwarding session.

To create an IPv6 forwarding session rule by using the CLI:

- At the command prompt, type the following commands to create a forwarding-session rule and verify the configuration:
 - add forwardingSession <name> [<IPv6 prefix>] | [-acl6name <string>]
 - show forwardingSession

Example:

```
1      An IPv6 prefix as the condition:
2
3      > add forwardingSession fsv6-pfx-1 3ffe::/64
4      Done
5
6      An ACL6 rule as the condition:
7
8      > add forwardingSession fsv6-acl6-1 - acl6name ACL6-FS
9      Done
```

To configure an IPv6 forwarding session rule by using the GUI:

Navigate to System > Network > Forwarding Sessions, add a new IPv6 forwarding session, or edit an existing forwarding session.

Assigning an ACL rule to an Existing Forwarding Session Rule

You can assign an ACL rule to a Network-address/IPv6-prefix based forwarding session rule, in which case it becomes an ACL based forwarding session rule. You can also change an existing ACL rule to another ACL rule in an ACL based forwarding session rule. After the existing related forwarding session entries (if any) have timed out, the rules start using the newly assigned ACL to identify IPv4/IPv6 traffic for which to create a forwarding-session entry.

To assign an extended ACL rule to an existing IPv4 forwarding session rule by using the CLI:

At the command prompt, type

- set forwardingSession <name> [-aclname <string>]
- show forwardingSession <name>

To assign an ACL6 rule to an existing IPv6 forwarding session rule by using the CLI:

At the command prompt, type

- set forwardingSession <name> [-acl6name <string>]

- `show forwardingSession <name>`

Example:

```
1 > add forwardingSession FS-1 -aclname ACL-9
2 Done
3
4 > add forwardingSession FS6-1 -acl6name ACL6-9
5 Done
```

Disabling Steering for Forwarding Sessions on a Cluster Setup

The default behavior of a NetScaler cluster is for the node that receives traffic (flow receiver) to direct the traffic to another node (flow processor), which processes the traffic. Directing the traffic from flow receiver to flow processor occurs over the cluster backplane and is called steering.

Steering can be an overhead for real-time processing or when the setup includes high-latency links.

Steering for forwarding sessions can now be disabled so that the processing becomes local to the flow receiver. That is, the flow receiver becomes the flow processor.

Before you begin

Note the following points before configuring forwarding session rules in a cluster setup:

- You must configure linksets to be used for forwarding sessions.
- You must enable MAC Based Forwarding (MBF) on the cluster setup.

Configuring Forwarding Session Rules in a Cluster Setup

Disabling steering for forwarding session rules in a cluster setup can be done at the following two levels:

- **Specific forwarding session rule level.** Enable the Process Local parameter while adding a new forwarding session rule or editing an existing forwarding session rule.
- **Global level.** Enable the Process Local parameter while adding a new cluster instance or editing an existing cluster instance. The global setting takes precedence over the forwarding session rule setting.

CLI procedures To disable steering for a forwarding session rule on a cluster setup by using the CLI:

At the command prompt, type one of the following sets of commands:

- If adding a new forwarding session rule:
 - ****add forwardingSession**** <name> ((<network> [<netmask>]) | ****acl6name**** <string> | ****aclname**** <string>) ****processLocal ENABLED****
 - **show forwardingSession** <name>
- If reconfiguring an existing forwarding session rule:
 - **set forwardingSession** <name> **-processLocal ENABLED**
 - **show forwardingSession** <name>

To disable steering for all (global level) forwarding session rules on a cluster setup by using the CLI:

At the command prompt, type one of the following sets of commands:

- If adding a new cluster instance:
 - **add cluster instance** <clid> **-processLocal Enabled**
 - **show cluster instance** <clid>
- If reconfiguring an existing cluster instance:
 - **set cluster instance** <clid> **-processLocal Enabled**
 - **show cluster instance** <clid>

Sample configuration:

Following are two examples of disabling steering at the forwarding session rule level, and an example of disabling steering at the global level.

```
1 An IPv4 forwarding session rule:
2
3 > add forwardingSession FWD-SESSN-PROCSS-LOCL-IPV4-1 10.102.105.51
   255.255.255.255 -processLocal Enabled
4 Done
5
6 An IPv6 forwarding session rule:
7
8 > add forwardingSession FWD-SESSN-PROCSS-LOCL-IPV6-1 - acl6name ACL6-
   FWD-SESSN-1 -processLocal Enabled
9 Done
10
11 A cluster setup, with an instance ID 10, has steering disabled at
   global level:
12
13 > set cluster instance 10 -processLocal Enabled
14 Done
```

GUI procedures To disable steering for a forwarding session rule on a cluster setup by using the GUI:

Navigate to **System > Network > Forwarding Sessions**, select **Process Local** while adding a new forwarding session rule or editing an existing forwarding session rule.

To disable steering for all (global level) forwarding session rules on a cluster setup by using the GUI:

Navigate to **System > Cluster**, and select **Process Local** while adding a cluster configuration or modifying an existing cluster configuration.

Understanding VLANs

May 2, 2023

A NetScaler appliance supports Layer 2 port and IEEE 802.1q tagged VLANs. VLAN configurations are useful when you need to restrict traffic to certain groups of stations. You can configure a network interface as a part of multiple VLANs by using IEEE 802.1q tagging.

You can configure VLANs and bind them to IP subnets. The NetScaler then performs IP forwarding between these VLANs (if it is configured as the default router for the hosts on these subnets).

The NetScaler supports the following types of VLANs:

- **Port-Based VLANs.** The membership of a port-based VLAN is defined by a set of network interfaces that share a common, exclusive Layer 2 broadcast domain. You can configure multiple port-based VLANs. By default, all network interfaces on the NetScaler are members of VLAN 1.

If you apply 802.1q tagging to the port, the network interface belongs to a port-based VLAN. Layer 2 traffic is bridged within a port-based VLAN, and Layer 2 broadcasts are sent to all members of the VLAN if Layer 2 mode is enabled. When you add an untagged network interface as a member of a new VLAN, it is removed from its current VLAN.

- **Default VLAN.** By default, the network interfaces on the NetScaler are included in a single, port-based VLAN as untagged network interfaces. This VLAN is the default VLAN. It has a VLAN ID (VID) of 1. This VLAN exists permanently. It cannot be deleted, and its VID cannot be changed.

When you add a network interface to a different VLAN as an untagged member, the network interface is automatically removed from the default VLAN. If you unbind a network interface from its current port-based VLAN, it is added to the default VLAN again.

- **Tagged VLANs.** 802.1q tagging (defined in the IEEE 802.1q standard) allows a networking device (such as the NetScaler) to add information to a frame at Layer 2 to identify the VLAN membership of the frame. Tagging allows network environments to have VLANs that span multiple devices. A device that receives the packet reads the tag and recognizes the VLAN to which the frame

belongs. Some network devices do not support receiving both tagged and untagged packets on the same network interface—in particular, Force10 switches. In such cases, you need to contact customer support for assistance.

The network interface can be a tagged or untagged member of a VLAN. Each network interface is an untagged member of one VLAN only (its native VLAN). This network interface transmits the frames for the native VLAN as untagged frames. A network interface can be a part of more than one VLAN if the other VLANs are tagged.

When you configure tagging, be sure to match the configuration of the VLAN on both ends of the link. The port to which the NetScaler connects must be on the same VLAN as the NetScaler network interface.

Note: This VLAN configuration is neither synchronized nor propagated, therefore you must perform the configuration on each unit in an HA pair independently.

Applying Rules to Classify Frames

VLANs have two types of rules for classifying frames:

- **Ingress rules.** Ingress rules classify each frame as belonging only to a single VLAN. When a frame is received on a network interface, the following rules are applied to classify the frame:
 - If the frame is untagged, or has a tag value equal to 0, the VID of the frame is set to the port VID (PVID) of the receiving interface, which is classified as belonging to the native VLAN. (PVIDs are defined in the IEEE 802.1q standard.)
 - If frame has a tag value equal to FFF, the frame is dropped.
 - If the VID of the frame specifies a VLAN of which the receiving network interface is not a member, the frame is dropped. For example, if a packet is sent from a subnet associated with VLAN ID 12 to a subnet associated with VLAN ID 10, the packet is dropped. If an untagged packet with VID 9 is sent from the subnet associated with VLAN ID 10 to a network interface PVID 9, the packet is dropped.
- **Egress Rules.** The following egress rules are applied:
 - If the VID of the frame specifies a VLAN of which the transmission network interface is not a member, the frame is discarded.
 - During the learning process (defined by the IEEE 802.1q standard), the Src MAC and VID are used to update the bridge lookup table of the NetScaler.
 - A frame is discarded if its VID specifies a VLAN that does not have any members. (You define members by binding network interfaces to a VLAN.)

VLANs and Packet Forwarding on the NetScaler

The forwarding process on the NetScaler appliance is similar to that on any standard switch. However, the NetScaler performs forwarding only when Layer 2 mode is on. The key features of the forwarding process are:

- Topology restrictions are enforced. Enforcement involves selecting each network interface in the VLAN as a transmission port (depending on the state of the network interface), bridging restrictions (do not forward on the receiving network interface), and MTU restrictions.
- Frames are filtered on the basis of information in the bridge table lookup in the forwarding database (FDB) table of the NetScaler. The bridge table lookup is based on the destination MAC and the VID. Packets addressed to the MAC address of the NetScaler are processed at the upper layers.
- All broadcast and multicast frames are forwarded to each network interface that is a member of the VLAN, but forwarding occurs only if L2 mode is enabled. If L2 mode is disabled, the broadcast and multicast packets are dropped. This is also true for MAC addresses that are not currently in the bridging table.
- A VLAN entry has a list of member network interfaces that are part of its untagged member set. When forwarding frames to these network interfaces, a tag is not inserted in the frame.
- If the network interface is a tagged member of this VLAN, the tag is inserted in the frame when the frame is forwarded.

When a user sends any broadcast or multicast packets without the VLAN being identified, that is, during duplicate address detection (DAD) for NSIP or ND6 for the next hop of the route, the packet is sent out on all the network interfaces, with appropriate tagging based on either the Ingress and Egress rules. ND6 usually identifies a VLAN, and a data packet is sent on this VLAN only. Port-based VLANs are common to IPv4 and IPv6. For IPv6, the NetScaler supports prefix-based VLANs.

Configuring a VLAN

May 2, 2023

You can implement VLANs in the following environments:

- Single subnet
- Multiple subnets
- Single LAN
- VLANs (no tagging)
- VLANs (802.1q tagging)

If you configure VLANs that have only untagged network interfaces as their members, the total number of possible VLANs is limited to the number of network interfaces available in the NetScaler. If more IP subnets are required with a VLAN configuration, 802.1q tagging must be used.

When you bind a network interface to a VLAN, the network interface is removed from the default VLAN. If the network interfaces need to be a part of more than one VLAN, you can bind the network interfaces to the VLANs as tagged members.

You can configure the NetScaler to forward traffic between VLANs at Layer 3. In this case, a VLAN is associated with a single IP subnet. The hosts in a VLAN that belong to a single subnet use the same subnet mask and one or more default gateways connected to that subnet. Configuring Layer 3 for a VLAN is optional. Layer 3 is used for IP forwarding (inter-VLAN routing). Each VLAN has a unique IP address and subnet mask that define an IP subnet for the VLAN. In an HA configuration, this IP address is shared with the other NetScaler appliances. The NetScaler forwards packets between configured IP subnets (VLANs).

When you configure the NetScaler, you must not create overlapping IP subnets. Doing so impedes Layer 3 functionality.

Each VLAN is a unique Layer 2 broadcast domain. Two VLANs, each bound to separate IP subnets, cannot be combined into a single broadcast domain. Forwarding traffic between two VLANs requires a Layer 3 forwarding (routing) device, such as the NetScaler appliance.

Configuring VLANs in an HA Setup

VLAN configuration for a high-availability setup requires that the NetScaler appliances have the same hardware configuration, and the VLANs configured on them must be mirror images.

The correct VLAN configuration is implemented automatically when the configuration is synchronized between the NetScaler appliances. The result is identical actions on all the appliances. For example, adding network interface 0/1 to VLAN2 adds this network interface to VLAN 2 on all the appliances participating in the high-availability setup.

Note: If you use network-interface-specific commands in an HA setup, the configurations you create are not propagated to the other NetScaler appliance. You must perform these commands on each appliance in an HA pair to ensure that the configuration of the two appliances in the HA pair remains synchronized.

Creating or Modifying a VLAN

To configure a VLAN, you create a VLAN entity, and then bind network interfaces and IP addresses to the VLAN. If you remove a VLAN, its member interfaces are added to the default VLAN.

CLI procedures

To create a VLAN by using the CLI:

At the command prompt, type:

- `add vlan <id> [-aliasName <string>] [-ipv6DynamicRouting (ENABLED | DISABLED)]`
- `sh vlan <id>`

Example:

```
1 > add vlan 2 -aliasName "Network A" Done
```

To bind an interface to a VLAN by using the CLI:

At the command prompt, type:

- `bind vlan <id> -ifnum <slot/port>`
- `sh vlan <id>`

Example:

```
1 > bind vlan 2 -ifnum 1/8 Done
```

To bind an IP address to a VLAN by using the CLI:

At the command prompt, type:

- `bind vlan <id> -IPAddress <IPAddress> <netMask>`
- `sh vlan <id>`

Example:

```
1 > bind vlan 2 -IPAddress 10.102.29.54 255.255.255.0 Done
```

To remove a VLAN by using the CLI:

At the command prompt, type:

- `rm vlan <id>`

GUI procedures

To configure a VLAN by using the GUI:

1. Navigate to System > Network > VLANs, add a new VLAN, or edit an existing VLAN.

2. To bind an IP address to a VLAN, under IP Bindings, select the Active option corresponding to the IP address that you want to bind to the VLAN (for example, 10.102.29.54). The Type column displays the IP address type (such as mapped IP, virtual IP, or subnet IP) for each IP address in the IP Address column.
3. To bind a network interface to a VLAN, under Interface Bindings, select the Active option corresponding to the interface that you want to bind to the VLAN.

Monitoring VLANs

You can display VLAN statistics such as packets received, bytes received, packets sent, and bytes sent, and use the information to identify anomalies and or debug a VLAN.

To view the statistics of a VLAN by using the CLI:

At the command prompt, type:

- `stat vlan <vlanID>`

Example:

```
1 stat vlan 2
```

To view the statistics of a VLAN by using the GUI:

1. Navigate to System > Network > VLANs.
2. Select the VLAN, and click Statistics.


Configuring VLANs on a Single Subnet

May 2, 2023

Before configuring a VLAN on a single subnet, make sure that Layer 2 Mode is enabled.

The following figure shows a single subnet environment

Figure 1. VLAN on a Single Subnet

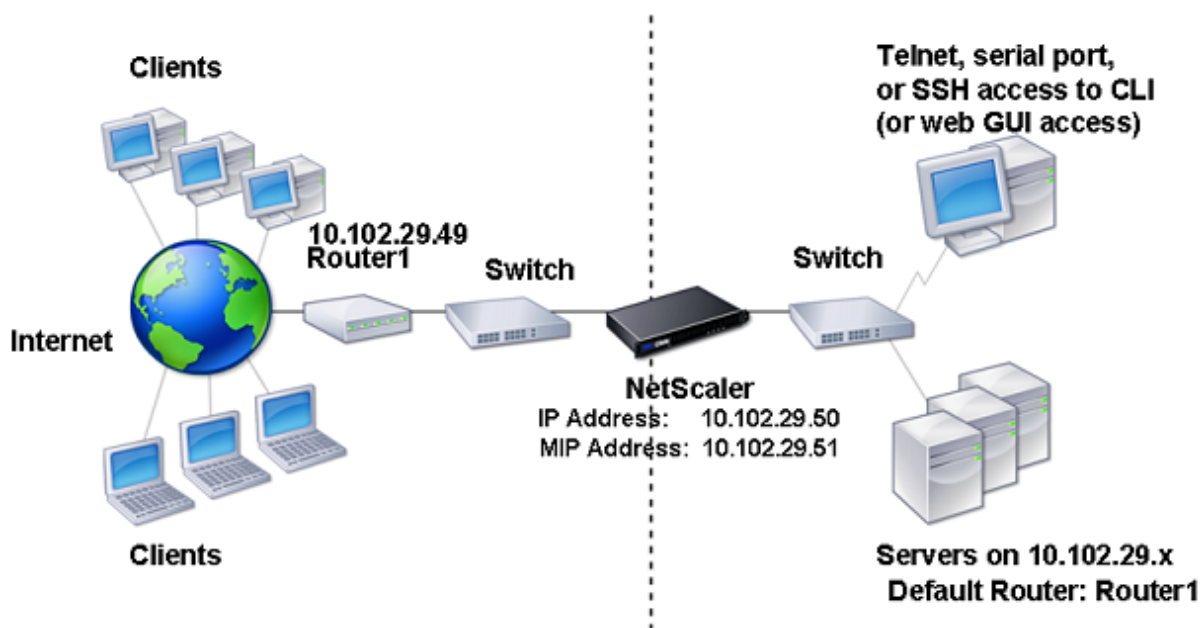

In the above figure:

1. The default router for the NetScaler and the servers is Router 1.
2. Layer 2 mode must be enabled on the NetScaler for the NetScaler to have direct access to the servers.
3. For this subnet, a virtual server can be configured for load balancing on the NetScaler appliance.


To configure a VLAN on a single subnet, follow the procedures described in [Configuring a VLAN](#).

Configuring VLANs on Multiple Subnets

September 21, 2020

To configure a single VLAN across multiple subnets, you must add a VIP for the VLAN and configure the routing appropriately. The following figure shows a single VLAN configured across multiple subnets.

Figure 1. Multiple Subnets in a Single VLAN

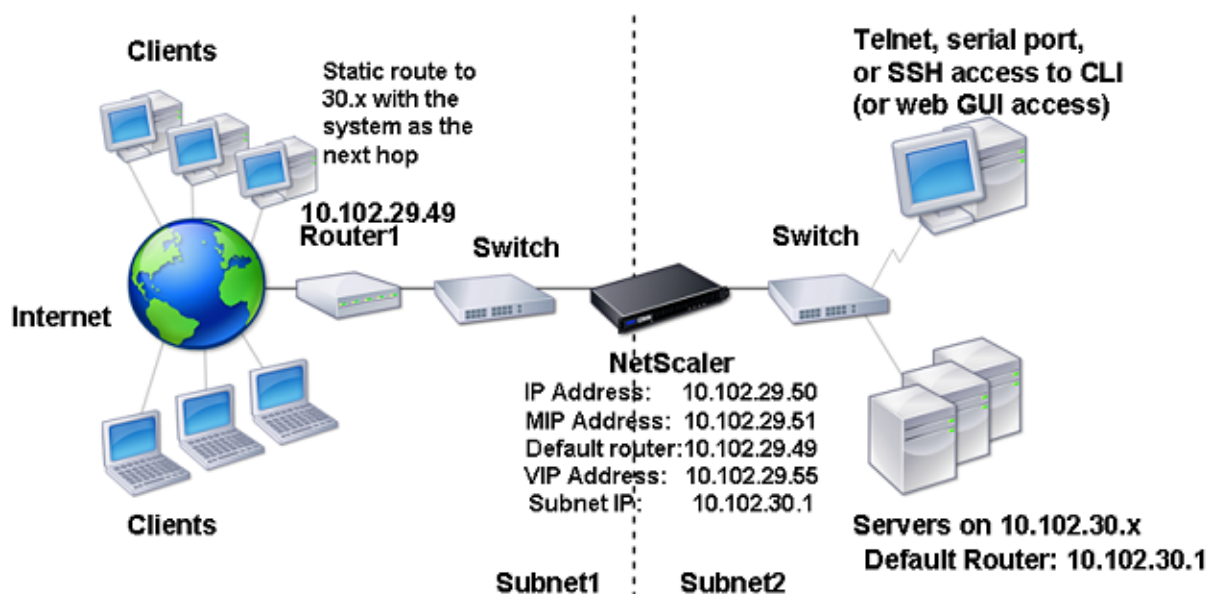

To configure a single VLAN across multiple subnets, perform the following tasks:


1. Disable Layer 2 mode. For the procedure to disable Layer 2 mode, see [Packet forwarding modes](#).
2. Add a VIP address. For the procedure to add a VIP address, see [Configuring and Managing Virtual IP Addresses \(VIPs\)](#).
3. Configure RNAT rule. For the procedure to configure the RNAT ID, see [Configuring RNAT](#).

Configuring Multiple Untagged VLANs across Multiple Subnets

May 2, 2023

In environments with multiple untagged VLANs across multiple subnets, a VLAN is configured for each IP subnet. A network interface is bound to one VLAN only. The following figure shows this configuration.

Figure 1. Multiple Subnets with VLANs - No Tagging

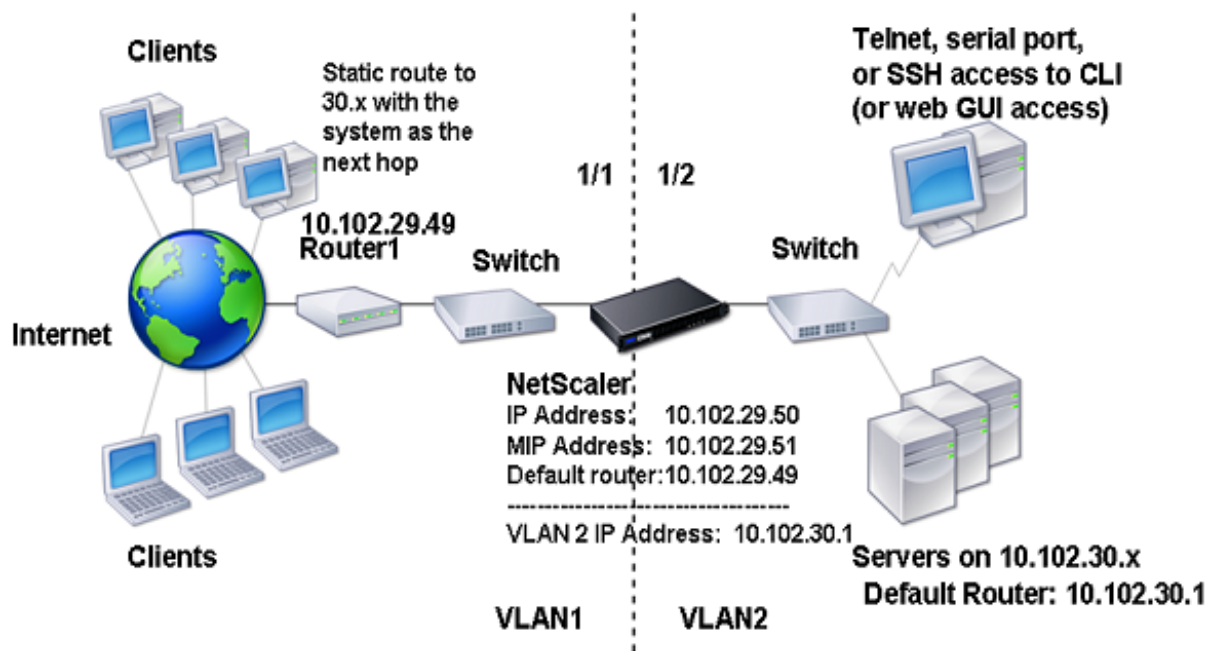

To implement the configuration shown in the above figure, perform the following tasks:

1. Add VLAN 2.
2. Bind the 1/2 network interface of the NetScaler to VLAN 2 as an untagged network interface.
3. Bind the IP address and subnet mask to VLAN 2.


For procedures on these tasks, see [Configuring a VLAN](#).

Configuring Multiple VLANs with 802.1q Tagging

May 2, 2023

For multiple VLANs with 802.1q tagging, each VLAN is configured with a different IP subnet. Each network interface is in one VLAN. One of the VLANs is set up as tagged. The following figure shows this configuration.

Figure 1. Multiple VLANs with IEEE 802.1q Tagging

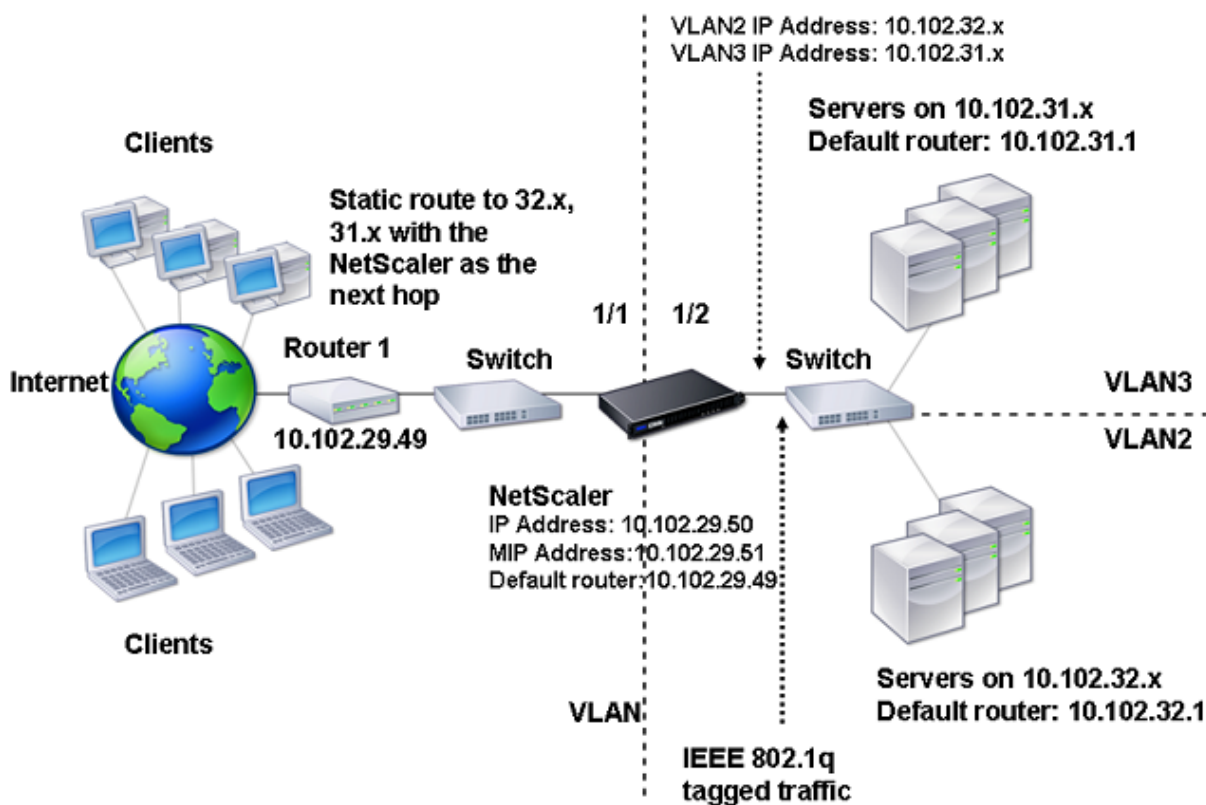

To implement the configuration shown in the above figure, perform the following tasks:

1. Add VLAN 2.
2. Bind the 1/2 network interface of the NetScaler to VLAN 2 as an untagged network interface.
3. Bind the IP address and netmask to VLAN 2.
4. Add VLAN 3.
5. Bind the 1/2 network interface of the NetScaler to VLAN 3 as a tagged network interface.
6. Bind the IP address and netmask to VLAN 3.


For procedures on these tasks, see [Configuring a VLAN](#).

Associate an IP Subnet with a NetScaler Interface by Using VLANs

May 2, 2023

By default, a NetScaler appliance does not provide any differentiation between network interfaces. The appliance functions more like a network hub than a switch. This can lead to Layer 3 network loops where duplicated traffic is transmitted on multiple interfaces.

In such scenarios, depending on network design, it is possible that a request could be transmitted on one interface and the corresponding response is received on a different interface.

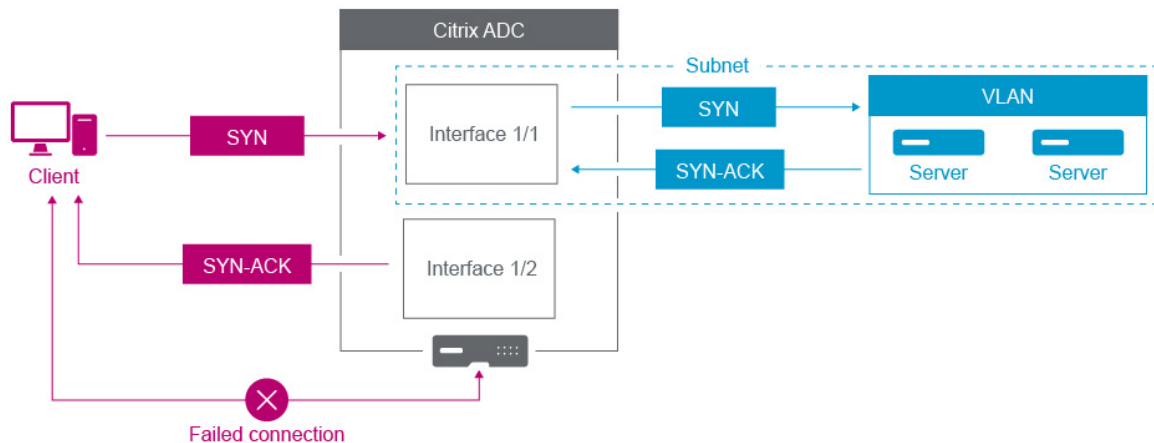

For example, a SYN packet sent on one interface and the SYN-ACK response received on a different interface can result in a failed connection, as the appliance expects to receive the SYN-ACK on the same interface that sent the original SYN packet.

To resolve such issues, the appliance can use internal or external VLANs, to associate specific subnets with interfaces.

Before you begin

Before you begin associating an IP Subnet with a NetScaler interface by using VLANs, note the following points:


- The network connectivity might be accidentally lost when associating a VLAN to the subnet or interface that is currently being used to access the NetScaler GUI or command line interface. Therefore, in such scenarios, it is highly recommended that the change is made by accessing the command line interface through the serial console of a physical NetScaler appliance or through the virtual serial console of a NetScaler VPX.
- NetScaler management interfaces lack certain hardware optimization features which makes them less desirable for use with production data traffic. As such, it is recommended that the NetScaler be configured to only use the management interfaces for management (NSIP) traffic. In the default configuration, there is no logical differentiation between the management interfaces and data interfaces on a hardware NetScaler. In order to accomplish this goal, it is recommended that the NSIP be on a separate VLAN from data traffic, which allows management traffic to be on a separate interface.

Although the concept is the same, to change the VLAN associations of the subnet that contains the NSIP address, you must configure NSVLAN instead of the below instructions. Such changes will also require a reboot of the NetScaler in order to take effect. For more information, see [Configuring NSVLAN](#).

- On NetScaler SDX, it is highly recommended that the NSIP of each instance be on the same subnet and VLAN as the SDX's SVM (Management Service GUI) and XenServer. The SVM communicates with instances via the network. If the SVM, XenServer, and instances are not on the same VLAN and subnet, management traffic must flow outside of the SDX. In this situation, network issues can cause Instance state to show up as yellow or red and can prevent the management and configuration changes of the NetScaler instances.

Configuration Steps

Associate an IP subnet with a NetScaler Interface consists of the following tasks:

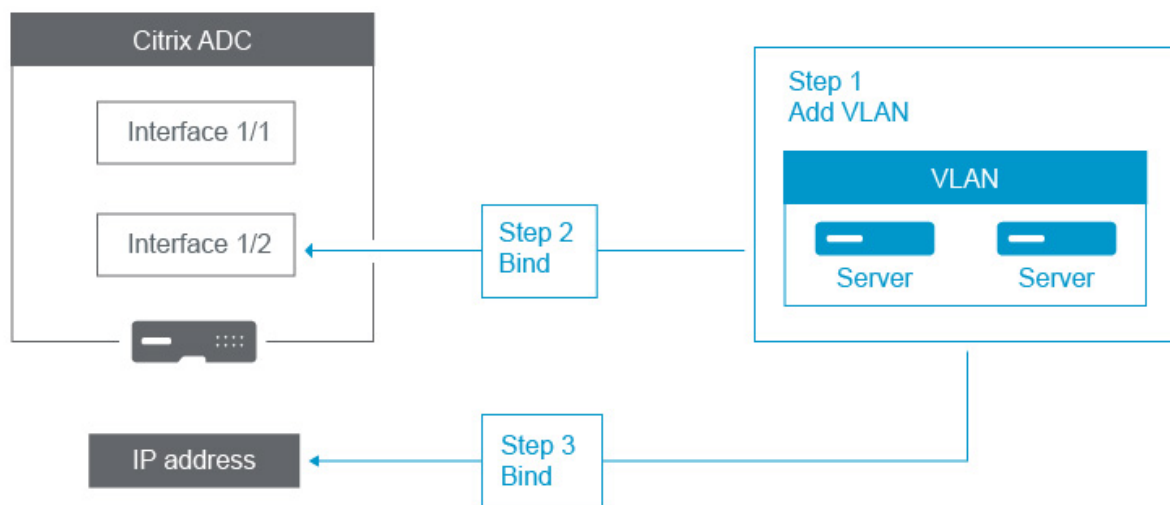

Add a VLAN. While adding a VLAN, if you are tagging the VLAN, then you must select a VLAN number that is defined in the network switch for the associated switch port. If the VLAN is untagged and is internal to the appliance, then it is recommended that you select the VLAN number that is available in the switch configuration for easy reference.

Bind an interface to the VLAN. While binding, if you are using Link Aggregation, associate the VLAN with the LA channel (for example, LA/1) instead of the physical interface. The VLAN must be associated with only one network interface.

If you want to tag the traffic on the interface, use the tagged (Tag) option. Else, the traffic leaves the appliance untagged and is associated with the native VLAN of the switch port.

Bind an IP address to the VLAN. While binding, if you bind more than one IP address from the same subnet, an error occurs. When an IP address is associated with a VLAN, all IP addresses in that subnet are automatically associated with the VLAN.

Note:

In a high availability (HA) setup, these VLAN configurations are added automatically from the

primary node to the secondary node during HA synchronization. For more information about high availability setups, see [High Availability](#).

CLI procedures

To add a VLAN by using the CLI:

At the command prompt, type:

- **add vlan** <id>
- **sh vlan** <id>

To bind an interface to a VLAN by using the CLI:

At the command prompt, type:

- **bind vlan** <id> **-ifnum** <slot/port>
- **sh vlan** <id>

To bind an IP address to a VLAN by using the CLI:

At the command prompt, type:

- **bind vlan** <id> **-IPAddress** <IPAddress> <netMask>
- **sh vlan** <id>

Example:

```
1 > add vlan 100
2
3 > bind vlan 100 -ifnum 1/1
4
5 > bind vlan 100 -ipAddress 10.0.1.0 255.255.255.0
```

GUI procedures

To configure a VLAN by using the GUI:

1. Navigate to **System > Network > VLANs**, add a new VLAN.
2. To bind a network interface to a VLAN, under **Interface Bindings**, select the **Active** option corresponding to the interface that you want to bind to the VLAN.
3. To bind an IP address to a VLAN, under **IP Bindings**, select the **Active** option corresponding to the IP address that you want to bind to the VLAN (for example, 10.102.29.54). The **Type** column displays the IP address type for each IP address in the **IP Address** column.

NetScaler appliance networking and VLAN best practices

May 2, 2023

A NetScaler appliance uses VLANs to determine which interface must be used for which traffic. In addition, NetScaler appliance does not participate in Spanning Tree. Without the proper VLAN configuration, the NetScaler appliance is unable to determine which interface to use, and it can function more like a HUB than a switch or a router. In other words, the NetScaler appliance can use all interfaces for each conversation.

Symptoms of VLAN misconfiguration

VLAN misconfiguration issue can manifest itself in many forms, including performance issues, inability to establish connections, randomly disconnected sessions, and in severe situations, network disruptions seemingly unrelated to the NetScaler appliance itself. The NetScaler appliance may also report MAC moves, muted interfaces, and/or management interface transmit or receive buffer overflows, depending on the exact nature of the interaction with your network.

MAC Moves (counter `nic_tot_bdg_mac_moved`): This issue indicates that the NetScaler appliance is using more than one interface to communicate with the same device (MAC address), because it could not properly determine which interface to use.

Muted interfaces (counter `nic_err_bdg_muted`): This issue indicates that the NetScaler appliance has detected that it is creating a routing loop due to VLAN configuration issues, and as such, it has shut down one or more of the offending interfaces in order to prevent a network outage.

Interface buffer overflows, typically referring to management interfaces (counter `nic_err_tx_overflow`): This issue can be caused if too much traffic is being transmitted over a management interface. Management interfaces on the NetScaler appliance is not designed to handle large volumes of traffic, which may result from network and VLAN misconfigurations triggering the NetScaler appliance to use a management interface for production data traffic. This often occurs because the NetScaler appliance has no way to differentiate traffic on the VLAN / subnet of the NSIP (NSVLAN) from regular production traffic. It is highly recommended that the NSIP be on a separate VLAN and subnet from any production devices such as workstations and servers.

Orphan ACKs (counter `tcp_err_orphan_ack`): This issue indicates that the NetScaler appliance received an ACK packet that it was not expecting, typically on a different interface than the ACK'd traffic originated from. This situation can be caused by VLAN misconfigurations where the NetScaler appliance transmits on a different interface than the target device would typically use to communicate with the NetScaler appliance (often seen in conjunction with MAC moves)

High rates of retransmissions or retransmit give ups (counters: `tcp_err_retransmit_giveups`,

tcp_err_7th_retransmit, various other retransmit counters): The NetScaler appliance attempts to retransmit a TCP packet a total of 7 times before it gives up and terminates the connection. While this situation can be caused by network conditions, it often occurs as a result of VLAN and interface misconfiguration.

High Availability Split Brain: Split Brain is a condition where both high availability nodes believe they are Primary, leading to duplicate IP addresses and loss of NetScaler appliance functionality. This is caused when the two high availability nodes cannot communicate with each-other using high availability Heartbeats on UDP Port 3003 using the NSIP, across any interface. This is typically caused by VLAN misconfigurations where the native VLAN on the NetScaler appliance interfaces does not have connectivity between NetScaler appliances.

Best practices for VLAN and network configurations

1. Each subnet must be associated with a VLAN.
2. More than one subnet can be associated with the same VLAN (depending on your network design).
3. Each VLAN should be associated to only one interface (for purposes of this discussion, a LA channel counts as a single interface).
4. If you require more than one subnet to be associated with an interface, the subnets must be tagged.
5. Contrary to popular belief, the Mac-Based-Forwarding (MBF) feature on the NetScaler appliance is not designed to mitigate this type of issue. MBF is designed primarily for the DSR (Direct Server Return) mode of the NetScaler appliance, which is rarely used in most environments (it is designed to allow traffic to purposely bypass the NetScaler appliance on the return path from the back-end servers). MBF may hide VLAN issues in some instances, but it should not be relied-upon to resolve this type of problem.
6. Every interface on NetScaler appliance requires a native VLAN (unlike Cisco, where native VLANs are optional), although the TagAll setting on an interface can be used so that no untagged traffic leaves the interface in question.
7. The native VLAN can be tagged if necessary for your network design (this is the TagAll option for the interface).
8. The VLAN for the subnet of your NetScaler appliance's NSIP is a special case. This is called the NSVLAN. The concepts are the same but the commands to configure it are different and changes to the NSVLAN require a reboot of the NetScaler appliance to take effect. If you attempt to bind a VLAN to a SNIP that shares the same subnet as the NSIP, you get "Operation not permitted." This is because you have to use the NSVLAN commands instead. Also, on some firmware versions, you

cannot set an NSVLAN if that VLAN number exists using `add VLAN` command. Simply remove the VLAN and then set the NSVLAN again.

9. High availability Heartbeats always use the Native VLAN of the respective interface (optionally tagged if the TagAll option is set on the interface).
10. There must be communication between at least one set of Native VLAN(s) on the two nodes of an high availability pair (this can be direct or via a router). The native VLANs are used for high availability heartbeats. If the NetScaler appliances cannot communicate between native VLANs on any interface, this will lead to high availability failovers and possibly a split-brain situation where both NetScaler appliances think they are primary (leading to duplicate IP addresses, amongst other things).
11. The NetScaler appliance does not participate in spanning tree. As such, it is not possible to use spanning tree to provide for interface redundancy when using a NetScaler appliance. Instead, use a form of Link Aggregation (LACP or manual LAG) for this purpose.

Note: If you want to have link aggregation between multiple physical switches, you must have the switches configured as a virtual switch, using a feature such as Cisco's Switch Stack.

12. The high availability synchronization and command Propagation, by default, use the NSIP/NSVLAN. To separate these out to a different VLAN, you can use the SyncVLAN option of the `set HA node` command.
13. There is nothing built-in to the NetScaler appliance default configuration that denotes that a management interface (0/1 or 0/2) is restricted to management traffic only. This restriction must be enforced by the end user through VLAN configuration. The management interfaces are not designed to handle data traffic, so your network design must take this point into account. Management interfaces, contained on the NetScaler appliance motherboard, lack various off-loading features such as CRC offload, larger packet buffers, and other optimizations, making them much less efficient in handling large amounts of traffic. To separate production data and management traffic, the NSIP must not be on the same subnet/VLAN as your data traffic.
14. If it is desired to use a management interface to carry management traffic, it is best practice that the Default Route be on a subnet other than the subnet of the NSIP (NSVLAN).

In many configurations, the default route is relied-upon for workstation communication (in an internet scenario). If the default route is on the same subnet as the NSIP, then the ADC appliance can use the management interface to send and receive data traffic. This use of data traffic can overload the management interface.

15. Also, an SDX-the SVM, XenServer, and all NetScaler instance NSIPs must be on the same VLAN and subnet. There is no **backplane** in the SDX appliance that allows for communication between SVM/Xen/Instances. If they are not on the same VLAN/subnet/interface, traffic between them must leave the physical hardware, be routed on your network, and return.

This configuration can lead to obvious connectivity issues between the instances and SVM and as such, is not recommended. A common symptom of this is a Yellow Instance State indicator in the SVM for the VPX instance in question, and the inability to use the SVM to reconfigure a VPX instance.

16. If some VLANs are bound to subnets and some are not, during a high availability failover, GARP packets are not be sent for any IP addresses on any of the subnets that are not bound to a VLAN. This configuration can cause dropped connections and connectivity issues during high availability failovers. This issue is caused because the NetScaler appliance cannot notify the network MAC ownership IP addresses change on non-VMAC-configured NetScaler appliances.

Symptoms of this are that during/after a high availability failover, the `ip_tot_floating_ip_err` counter increments on the former primary NetScaler appliance for more than a few seconds, indicating that the network did not receive or process GARP packets and the network is continuing to transmit data to the new secondary NetScaler appliance.

Configuring NSVLAN

May 2, 2023

NSVLAN is a VLAN to which the NetScaler management IP (NSIP) address's subnet is bound. The NSIP subnet is available only on interfaces that are associated with NSVLAN. By default, NSVLAN is VLAN 1, but you can designate a different VLAN as NSVLAN. If you do so, you must reboot the NetScaler appliance for the change to take effect. After the reboot, NSIP subnet traffic is restricted to the new NSVLAN.

The traffic from the NetScaler IP subnet can be tagged (802.1q) with the VLAN ID specified for NSVLAN. You must configure the attached switch interface to tag and allow this same VLAN ID on the connected interface. If you remove your NSVLAN configuration, the NSIP subnet is automatically bound to VLAN 1, restoring the default NSVLAN.

To configure NSVLAN by using the CLI:

At the command prompt, type:

```
set ns config -nsvlan -**ifnum** ...[-**tagged** NO]]  
(YES
```

-
- **show ns config**

Note:

The configuration takes effect after the NetScaler appliance is restarted.

Example:

```
1 > set ns config -nsvlan 300 -ifnum 1/1 1/2 1/3 -tagged YES
2   Done
3
4 > save config
5   Done
```

To restore the default NSVLAN configuration by using the CLI:

At the command prompt, type:

- **unset ns config -nsvlan**
- **show ns config**

Example:

```
1 > unset ns config -nsvlan
2   Done
```

To configure NSVLAN by using the GUI:

Navigate to **System > Settings**, in the **Settings** group, click **Change NSVLAN Settings**.

Setting the MTU on the NSVLAN

By default, the MTU of the NSVLAN is set to 1500 bytes. You can modify this setting to optimize throughput and network performance. For example, you can configure the NSVLAN to process jumbo frames.

To set the MTU of the NSVLAN by using the CLI:

At the command prompt, type:

- **set vlan <id> -mtu <positive_integer>**
- **show vlan <id>**

To set the MTU of the NSVLAN by using the GUI:

Navigate to **System > Network > VLANs**, open the NSVLAN, and set the **Maximum Transmission Unit** parameter.

Sample configuration:

In the following sample configuration, VLAN 100 is the NSVLAN.

```
1 > set ns config -nsvlan 100 -ifnum 1/1 -tagged no
2
3 Warning: The configuration must be saved and the system rebooted for
  these settings to take effect
4
5 > set vlan 100 -mtu 1600
6
7 Done
8
9 > sh vlan
10
11 1) VLAN ID: 1
12
13 Link-local IPv6 addr:
14 fe80::947b:52ff:fead:12d5/64
15
16 Interfaces : 1/2 L0/1
17
18 2) VLAN ID: 100 VLAN Alias Name:
19
20 MTU: 1600
21
22 Interfaces : 1/1
23
24 IPs :
25
26 10.102.53.114 Mask: 255.255.255.0
27
28 Done
29
30 > save config
31
32 Done
```

Configuring Allowed VLAN List

May 2, 2023

NetScaler accepts and sends tagged packets of a VLAN on an interface if the VLAN is explicitly configured on the NetScaler appliance and the interface is bound to the VLAN. Some deployments (for example, Bump in the wire) require the NetScaler appliance to function as a transparent device to accept and forward tagged packets related to a large number of VLANs. For this requirement, configuring and managing a large number of VLANs is not a feasible solution.

Allowed VLAN list on an interface specifies a list of VLANs. The interface transparently accepts and sends tagged packets related to the specified VLANs without the need for explicitly configuring these VLANs on the appliance.

Points to Consider before Configuring Allowed VLAN List

Consider the following points before configuring allowed VLAN list

- In a high availability setup, allowed VLAN list is not propagated or synchronized. Therefore, you have to configure allowed VLAN list on both the nodes.
- The traffic of a native VLAN might leak to the non-member interfaces that specifies the native VLAN in its allowed VLAN list.
- A Maximum of 60 VLAN ranges can be specified as part of allowed VLAN list for an interface.
- The NetScaler appliance does not support allowed VLAN list on interfaces that are part of link aggregation channels or redundant interface sets. For more information on redundant interface set, see [Redundant Interface Set](#).
- Allowed VLAN list is not supported on a NetScaler cluster configuration.
- The NetScaler appliance does not support allowed VLAN list for Bridge groups.
- The NetScaler appliance does not support allowed VLAN list for VXLANs.

Configuring Allowed VLAN List

To configure allowed VLAN list by using the CLI:

At the command prompt, type:

- **set interface** <id> **-trunkmode** (ON|OFF) **-trunkAllowedVlan** <int[-int]> ...
- **show interface** <id>

To configure allowed VLAN list by using the GUI:

Navigate to **System > Network > Interfaces**, select a network interface, click **Edit**, and then set the following parameters:

- Trunk Mode
- Trunk Allowed VLAN

Sample Configuration:

In the following sample configuration, VLANS in the ranges 100-120, 190-200, and 300-330 are specified as part of allowed VLAN list for interface 1/2.

```
1 > set int 1/2 -trunkmode on -trunkallowedVlan 100-120 190-200 300-330
2
3 Done
4
5 > sh int 1/2
6
7 1)      Interface 1/2 (Gig Ethernet 10/100/1000 MBits) #6
8         flags=0xc020
```

```
9
10     <ENABLED, UP, UP, AUTONEG OFF, HEARTBEAT, 802.1q, trunkmode>
11
12     Trunk Allowed Vlans: 100-120 190-200 300-330
13
14 Done
```

Configuring Bridge Groups

May 2, 2023

Typically, when you want to merge two or more VLANs into a single domain, you change the VLAN configuration on all the devices in the separate domains. This can be a tedious task. To more easily merge multiple VLANs into a single broadcast domain, you can use bridge groups.

The bridge groups feature works the same way as a VLAN. Multiple VLANs can be bound to a single bridge group, and all VLANs bound to same bridge group form a single broadcast domain. You can bind only Layer 2 VLANs to a bridge group. For Layer 3 functionality, you must assign an IP address to a bridge group.

In Layer 2 mode, a broadcast packet received on an interface belonging to a particular VLAN is bridged to other VLANs that belong to the same bridge group. In the case of a unicast packet, the NetScaler appliance searches its bridge table for the learned MAC addresses of all the VLANs belonging to same bridge group.

In Layer 3 forwarding mode, an IP subnet is bound to a bridge group. The NetScaler accepts incoming packets belonging to the bound subnet and forwards the packets only on VLANs that are bound to the bridge group.

IPv6 routing can be enabled on a configured bridge group.

Note

Bridge Group feature and Bridge BPDU mode cannot work together.

Configuration steps

Perform the following steps to configure a bridge group:

- Enable Layer 2 mode
- Add a bridgegroup and bind VLANs to the bridgegroup

CLI procedures

To enable Layer 2 mode by using the CLI:

At the command prompt, type:

- **enable ns mode l2**
- **show ns mode**

To add a bridge group and bind VLANs by using the CLI:

At the command prompt, type:

- **add bridgegroup** <id> [-**ipv6DynamicRouting** (**ENABLED** | **DISABLED**)]
- **bind bridgegroup** <id> -**vlan** <positive_integer>
- **show bridgegroup** <id>

Example:

```
1 > add bridgegroup 12
2 Done
```

To remove a bridge group by using the CLI:

At the command prompt, type:

- **rm bridgegroup** <id>

Example:

```
1 rm bridgegroup 12
```

GUI Procedures

To configure a bridge group by using the GUI:

Navigate to **System > Network > Bridge Groups**, add a new bridge group and bind VLANs to the bridgegroup, or edit an existing bridge group.

Configuring virtual MACs

September 21, 2020

The primary and secondary nodes in a high availability (HA) setup share the virtual MAC address floating entity. The primary node owns the floating IP addresses (such as MIP, SNIP, and VIP) and responds

to ARP requests for these IP addresses with its own MAC address. Therefore, the ARP table of an external device, such as an upstream router, is updated with the floating IP address and the MAC address of the primary node.

When a failover occurs, the secondary node takes over as the new primary node. The former secondary node uses Gratuitous ARP (GARP) to advertise the floating IP addresses that it had learned from the old primary node. The MAC address that the new primary node advertises is the MAC address of its own network interface. Some devices (a few routers) do not accept these GARP messages. Therefore, these external devices retain the IP address-to-MAC address mapping that the old primary node had advertised. This can result in a GSLB site going down.

Therefore, you must configure a virtual MAC on both nodes of an HA pair. This means that both nodes have identical MAC addresses. When a failover occurs, the MAC address of the secondary node remains unchanged, and the ARP tables on the external devices do not need to be updated.

For the procedures to configure a virtual MAC, see [Configuring Virtual MAC Addresses](#).

Configuring Link Aggregation

May 2, 2023

Link aggregation combines data coming from multiple ports into a single high-speed link. Configuring link aggregation increases the capacity and availability of the communication channel between the NetScaler appliance and other connected devices. An aggregated link is also referred to as a “channel.” You can configure the channels manually, or you can use Link Aggregation Control Protocol (LACP). You cannot apply LACP to a manually configured channel, nor can you manually configure a channel created by LACP.

When a network interface is bound to a channel, the channel parameters have precedence over the network interface parameters. (That is, the network interface parameters are ignored.) A network interface can be bound only to one channel.

When a network interface is bound to a channel, it drops its VLAN configuration. When network interfaces are bound to a channel, either manually or by LACP, they are removed from the VLANs that they originally belonged to and added to the default VLAN. However, you can bind the channel back to the old VLAN, or to a new one. For example, if you bind the network interfaces 1/2 and 1/3 to a VLAN with ID 2, and then bind them to a channel LA/1, the network interfaces are moved to the default VLAN, but you can bind them back to VLAN 2.

Configuring Link Aggregation Manually

When you create a link aggregation channel, its state is DOWN until you bind an active interface to it. You can modify a channel at any time. You can remove channels, or you can enable/disable them.

CLI procedures

To create a link aggregation channel by using the CLI:

At the command prompt, type:

- `add channel <id> [-ifnum <interfaceName> ...] [-state (ENABLED | DISABLED)] [-speed <speed>] [-flowControl <flowControl>] [-haMonitor (ON | OFF)] [-tagall (ON | OFF)] [-ifAlias <string>] [-throughput <positive_integer>] [-bandwidthHigh <positive_integer> [-bandwidthNormal <positive_integer>]]`
- `show channel`

Example:

```
1 > add channel LA/1 -ifnum 1/8
2 Done
```

To bind an interface to or unbind an interface from an existing link aggregation channel by using the CLI:

At the command prompt, type one of the following commands:

- `bind channel <id> <interfaceName>`
- `unbind channel <id> <interfaceName>`

Example:

```
1 bind channel LA/1 1/8
```

To modify a link aggregation channel by using the CLI:

At the command prompt, type the

`set channel` command, the channel ID, and the parameters to be changed, with their new values.

To remove a link aggregation channel by using the CLI:

Important: When a channel is removed, the network interfaces bound to it induce network loops that decrease network performance. You must disable the network interfaces before you remove the channel.

At the command prompt, type:

- `rm channel <id>`

Example:

```
1 > rm channel LA/1
2 Done
```

GUI procedures

To configure a link aggregation channel by using the GUI:

Navigate to System > Network > Channels, add a new channel, or edit an existing channel.

To remove a link aggregation channel by using the GUI:

Important:

When a channel is removed, the network interfaces bound to it induce network loops that decrease network performance. You must disable the network interfaces before you remove the channel.

Navigate to System > Network > Channels, select the channel that you want to remove and click Delete.

Configuring Link Aggregation by Using the Link Aggregation Control Protocol

The Link Aggregation Control Protocol (LACP) enables network devices to exchange link aggregation information by exchanging LACP Data Units (LACPDUs). Therefore, you cannot enable LACP on network interfaces that are members of a channel that you created manually.

When using LACP to configure link aggregation, you use different commands and parameters for modifying link aggregation channels than you do for creating link aggregation channels. To remove a channel, you must disable LACP on all interfaces that are part of the channel.

Note: In an High Availability configuration, LACP configurations are neither propagated nor synchronized.

Configuring the LACP System Priority

The LACP system priority determines which peer device of an LACP LA channel can have control over the LA channel. This number is globally applied to all LACP channels on the appliance. The lower the value, the higher the priority.

To configure the LACP system priority by using the CLI:

At the command prompt, type the following commands to set the priority for a standalone appliance and verify the configuration:

- set lacp -sysPriority <positive_integer>
- show lacp

Example:

```
1 set lacp -sysPriority 50
```

To set the priority for a specific cluster node, log on to the cluster IP address and at the command prompt, type the following commands:

- set lacp -sysPriority <positive_integer> -ownerNode <positive_integer>
- show lacp

Example:

```
1 set lacp -sysPriority 50 -ownerNode 2
```

To configure the LACP system priority by using the GUI:

1. Navigate to System > Network > Interfaces and, in the Action list, select Set LACP.
2. Specify the system priority and the owner node (applicable only for a cluster setup).

Creating Link Aggregation Channels

For creating a link aggregation channel by using LACP, you need to enable LACP and specify the same LACP key on each interface that you want to be the part of the channel. For example, if you enable LACP and set the LACP Key to 3 on interfaces 1/1 and 1/2, a link aggregation channel LA/3 is created and interfaces 1/1 and 1/2 are automatically bound to it.

Note:

- When enabling LACP on a network interface, you must specify the LACP Key.
- By default, LACP is disabled on all network interfaces.

To create an LACP channel by using the CLI:

At the command prompt, type:

- set interface <id> [-lacpMode <lacpMode>] [-lacpKey<positive_integer>] [-lacpPriority <positive_integer>] [-lacpTimeout (LONG | SHORT)]
- show interface [<id>]

To create an LACP channel by using the GUI:

Navigate to System > Network > Interfaces, open the network interface, and set the parameters.

Modifying Link aggregation Channels

After you have created an LACP channel by specifying interfaces, you can modify properties of the channel.

To modify an LACP channel by using the CLI:

At the command prompt, type:

- `set channel <id> [-ifnum <interfaceName> ...] [-state (ENABLED | DISABLED)] [-speed <speed>] [-flowControl <flowControl>] [-haMonitor (ON | OFF)] [-ifAlias <string>] [-throughput <positive_integer>] [-tagall (ON | OFF)] [-bandwidthHigh <positive_integer>] [-bandwidthNormal <positive_integer>]]`
- `show channel`

Example:

```
1 > set channel LA/3 -state ENABLED -speed 10000
2 Done
```

To modify an LACP channel by using the GUI:

Navigate to System > Network > Channels, and modify an existing LACP channel.

Removing a Link Aggregation Channel

To remove a link aggregation channel that was created by using LACP, you need to disable LACP on all the interfaces that are part of the channel.

To remove an LACP channel by using the CLI:

At the command prompt, type:

- `set interface <id> -lacpMode Disable`
- `show interface [<id>]`

To remove an LACP channel by using the GUI:

Navigate to System > Network > Interfaces, open the network interface, and clear the Enable LACP option.

Link Redundancy using LACP channels

Link Redundancy using LACP channels enables the NetScaler to divide an LACP channel into logical subchannels, with one subchannel active and the others in standby mode. If the active subchannel

fails to meet a minimum threshold of throughput, one of the standby subchannels becomes active and takes over.


A subchannel is created from links that are part of the LACP channel and are connected to a particular device. For example, for an LACP channel with four interfaces on a NetScaler, with two of the interfaces connected to device A and the other two connected to device B, the ADC creates two logical subchannels, one subchannel with two links to device A, and another subchannel with two links to device B.

To configure link redundancy for an LACP channel, set the `lrMinThroughput` parameter, which specifies the minimum throughput threshold (in Mbps) to be met by the active subchannel. Setting this parameter automatically creates the subchannels. When the maximum supported throughput of the active channel falls below the `lrMinThroughput` value, link failover occurs and a standby subchannel becomes active.

If you unset the `lrMinThroughput` parameter of an LACP channel, or set the value to zero, link redundancy for that channel is disabled, which is the default setting.

Example

Consider an example of link redundancy configured between NetScaler NS1 and switches SW1 and SW2.

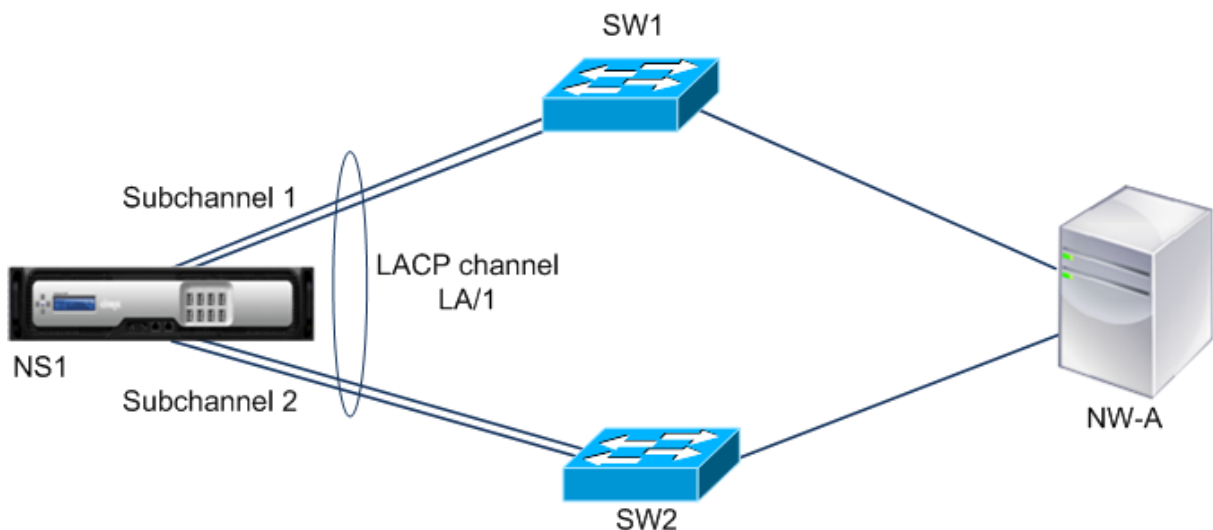

NS1 is connected to network device NW-A through SW1 and SW2.

On NS1, LACP channel LA/1 is created from interfaces 1/1, 1/2, 1/3, and 1/4. Interfaces 1/1 and 1/2 of NS1 are connected to SW1, and interfaces 1/3 and 1/4 are connected to SW2. Each of the four links supports a maximum throughput of 1000Mbps.

When the `lrMinThroughput` parameter is set to some value (say 2000), NS1 creates two logical subchannels from LA/1, one subchannel (say subchannel 1) using interfaces 1/1 and 1/2 (connected to

SW1), and the other subchannel (subchannel 2) using interfaces 1/3 and 1/4 (connected to SW2).

NS1 applies an algorithm to make one subchannel (say subchannel 1) active and put the other on standby. NS1 and network device NW-A are accessible to each other through only the active subchannel.

Say subchannel 1 is active, and its maximum supported throughput falls below the `lrMinThroughput` value (for example, one of its links fails, and the maximum supported throughput falls to 1000 Mbps). Subchannel 2 becomes active and takes over.

Link Redundancy using LACP channels in a High Availability setup

In a high availability (HA) configuration, if you want to configure throughput (throughput parameter) based HA failover and link redundancy (`lrMinThroughput` parameter) on an LACP channel, you must set the throughput parameter to a value less than or equal to that of the `lrMinThroughput` parameter.


The maximum supported throughput of an LACP channel is calculated as the maximum supported throughput of the active subchannel.

If the throughput parameter value is equal to or less than the `lrminthroughput` parameter value, HA failover occurs when both of the following conditions exist at the same time:

- None of the subchannels' maximum supported throughput meet the `lrMinThroughput` parameter value.
- The maximum supported throughput of the LACP channel does not meet the throughput parameter value

Consider an example of an HA setup that has NetScalers NS1 and NS2, with switches SW1 and SW2. NS1 is connected to NS2 through SW1 and SW2.

On NS1, LACP channel LA/1 is created from interfaces 1/1, 1/2, 1/3, and 1/4. Interfaces 1/1 and 1/2 of NS1 are connected to SW1, and interfaces 1/3 and 1/4 are connected to SW2. Each of the four links supports a maximum throughput of 1000 Mbps.

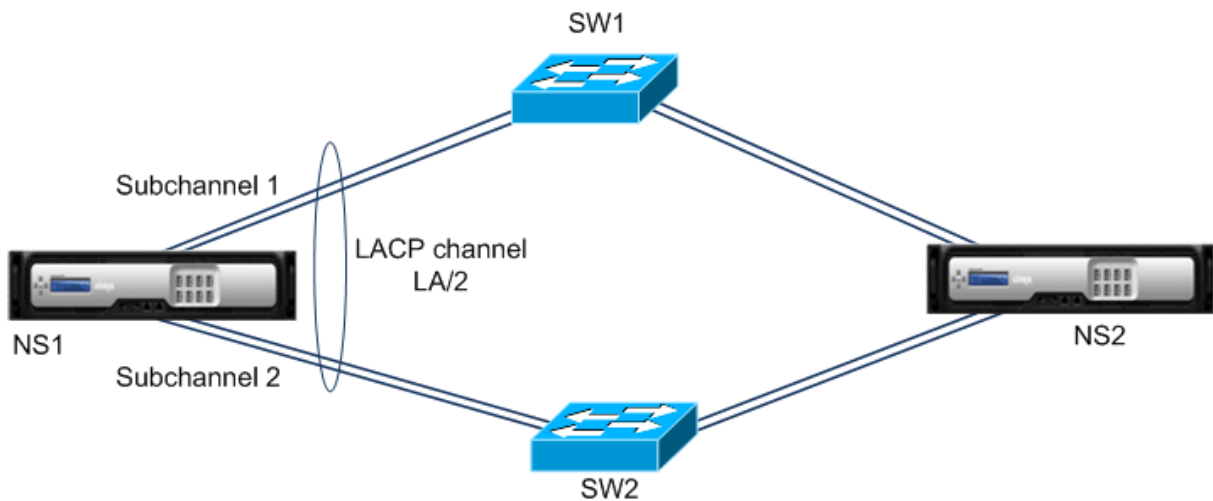

Following are the LACP-parameter settings in this example:

Parameter	Value
Throughput	2000
lrminthroughput	2000

NS1 forms two subchannels from LA/1, one subchannel (say subchannel 1) using interfaces 1/1 and 1/2 (connected to SW1), and the other subchannel (subchannel 2) using interfaces 1/3 and 1/4 (connected to SW2). Each of the two subchannels supports a maximum throughput of 2000 Mbps. Applying an algorithm, NS1 makes one subchannel (say subchannel 1) active and the other standby.

Say subchannel 1 is active, and its maximum supported throughput falls below the lrMinThroughput value (for example, one of its links fails, and maximum supported throughput falls to 1000 Mbps). Subchannel 2 becomes active and takes over. HA failover does not occur, because the maximum supported throughput of the LACP channel is not less than the throughput parameter value:

Maximum supported throughput of the LACP channel = Maximum supported throughput of the active channel = Maximum supported throughput of subchannel 2 = 2000 Mbps

If subchannel 2's maximum supported throughput also falls below the lrminthroughput value (for example, one of its links fails, and the maximum supported throughput falls to 1000 Mbps), HA failover occurs, because the maximum supported throughput of the LACP channel is then less than the throughput parameter value:

Configure Link Redundancy using LACP channels

To configure link redundancy for a LACP channel by using the CLI:

At the command prompt, type the following commands to configure the channel and verify the configuration:

- **set channel** <id> -lrMinThroughput <positive_integer>
- **show channel**

Example:

```
1 > set channel la/1 -lrMinThroughput 2000
2 Done
3 > set channel la/2 -throughput 2000 -lrMinThroughput 2000
4 Done
```

To configure link redundancy for a LACP channel by using GUI

1. Navigate to System > Network > Channels.
2. In the details pane, select an LACP channel for which you want to configure link redundancy, and then click Edit.
3. In the Configure LACP channel dialog box, set the lrMinThroughput parameter.
4. Click Close.

Redundant Interface Set

May 22, 2023

Note

Link redundancy configuration is not supported on a NetScaler VPX instance hosted on a NetScaler SDX appliance.

A redundant interface set is a set of interfaces where one of the interfaces is active and the remaining ones are standby. If the active interface fails, one of the standby interfaces takes over and becomes active.

The following are the main benefits of using redundant interface sets:

- A redundant interface set ensures connection reliability between the NetScaler appliance and a peer device by providing backup links between them.
- Unlike link redundancy using LACP, no configuration is required on the peer device for a redundant interface set. To the peer device, the redundant interface set appear as individual interfaces and not as a set or collection.
- In a high availability configuration (HA), redundant interface sets can minimize the number the HA failovers.

Note

Redundant Interface Set was formerly known as ‘NIC bundling’ when first introduced in 10.5 release.

How a Redundant Interface Set Works

For a redundant interface set, the NetScaler appliance derives a MAC address based on an internal algorithm and assigns it to the redundant interface set. This MAC address is shared by all the member interfaces and is used only by the active interface at a time. The active interface broadcasts GARP messages, which contain the MAC address assigned to the redundant interface set and not the interface’s own physical MAC address. When the current active interface fails and is taken over by another interface, the new active interface sends GARP messages. The peer device updates its forwarding table with the new active interface information. The standby interfaces do not send any GARP messages. The standby interfaces do not send any packets and they drop any packets they receive.

In a redundant interface set, selection of the member interface as active is based on either of the following factors:

- **Redundant interface priority.** This is a parameter of an interface and it defines the priority of the interface in a redundant interface set for the active member selection. This parameter specifies a positive integer. Lower the value higher the priority of active member selection. The member interface with the highest priority (lowest value) is selected as the active interface of the redundant interface set.
- **Binding order of the member interfaces.** If all the member interfaces have the same redundant interface priority, the member interface that was bound first to the redundant interface set is selected as the active interface of the redundant interface set.

In a redundant interface set, active interface selection is triggered in one of the following events:

- When the current active interface fails or you disable it.
- When you set the priority of a standby interface to a value lower than that of the current active interface. The standby interface takes over as the active interface.
- When you bind an interface whose priority is lower than that of the current active interface. The newly bound interface takes over as the active interface.

Points to Consider for Configuring Redundant Interface Sets

Consider the following points before you configure a redundant interface set:

- In a standalone appliance or an appliance in a high availability setup, a link redundant set is specified in LR/X notation, where X can range from 1 to 4. For example, LR/1.

- In a high availability configuration, redundant interface set configurations do not propagate or synchronize to the secondary node.
- You can configure a maximum of four redundant interface sets on a NetScaler appliance.
- You can bind a maximum of 16 interfaces to a redundant interface set.
- Member interfaces of a redundant interface set cannot be bound to another redundant interface set.
- Member interfaces of a redundant interface set cannot be bound to a link aggregate (LA) channel.
- LA channels cannot be bound to a redundant interface set.
- Redundant interface sets cannot be bound to an LA channel.
- In a cluster setup:
 - Redundant interface sets cannot be bound to a cluster link aggregation.
 - A link redundant set is specified in N/LR/X notation (for example, 1/LR/3). Where:
 - N is the ID of the cluster node on which the redundant interface set is to be created.
 - X is a link-redundant set identifier on a cluster node. X can range 1–4.
 - A cluster link aggregation cannot be bound to a redundant interface set.
 - A redundant interface set can include only the interfaces of the node to which the redundant interface set belongs.
 - An Existing elink redundancy set configuration on a standalone appliance automatically changes to cluster notation (N/LR/X) after the appliance is added to a cluster setup.

Configuration Steps

Configuring a redundant interface set on a NetScaler appliance consists of the following tasks:

- **Create a redundant interface set.** Use the channel command operation for creating a redundant interface set.

In a standalone appliance or an appliance in a high availability setup, a link redundant set is specified in LR/X notation, where X can range from 1 to 4. For example, LR/1.

In a cluster setup, a link redundant set is specified in N/LR/X (for example, 1/LR/3), where: N is the ID of the cluster node on which the redundant interface set is to be created; X is the link redundant set identifier on a cluster node. X can range 1–4.

- **Bind interfaces to the redundant interface set.** Associate the desired interfaces with the redundant interface set. An interface cannot be a part of multiple redundant interface sets.
- **(Optional) Set a redundant interface priority on the member interface.** Use the interface command operation for setting the redundant interface priority on a desired member interface of a redundant interface set.

To create a redundant interface set by using the CLI:

At the command prompt:

- add channel <ID>
- show channel <ID>

To bind interfaces to a redundant interface set by using the CLI:

At the command prompt:

- bind channel <ID> <ifnum>
- show channel <ID>

To set a redundant interface priority of an interface by using the CLI:

At the command prompt:

- set interface <ID> -lrsetpriority <positive_integer>
- show interface <ID>

Sample configuration 1:

In the following example, a redundant interface set LR/1 is created, and interfaces 1/1, 1/2, 1/3, and 1/4 are bound to LR/1. The redundant interface priority is set to a default value of 1024 for all these member interfaces. Output of the show channel command displays that the interface 1/1 is the current active interface for the redundant interface set lr/1.

```
1 > add channel lr/1
2 Done
3 > bind channel lr/1 1/1 1/2 1/3 1/4
4 Done
5 > show channel
6 1) Interface LR/1 (Link Redundant) #23
7 flags=0x100c020 <ENABLED, UP, LINKREDUNDANT, UP, HAMON, 802.1q>
8 MTU=1500, native vlan=1, MAC=36:97:a2:b7:6b:a9, uptime 0h00m00s
9 Requested: media NONE, speed AUTO, duplex NONE, fctl OFF,
10 throughput 0
11 Actual: throughput 1000
12 LLDP Mode: NONE,
13 RX: Pkts(1) Bytes(52) Errs(0) Drops(1) Stalls(0)
14 TX: Pkts(2) Bytes(84) Errs(0) Drops(4) Stalls(0)
15 NIC: InDisc(0) OutDisc(0) Fctls(0) Stalls(0) Hangs(0) Muted(0)
16 Bandwidth thresholds are not set.
17 1/1: UTP-1000-FULL-OFF UP 0h14m06s LR
18 Active Member
19 1/2: UTP-1000-FULL-OFF UP 0h14m06s LR
20 Inactive Member
1/3: UTP-1000-FULL-OFF UP 0h14m06s LR
Inactive Member
1/4: UTP-1000-FULL-OFF UP 0h14m06s LR
Inactive Member
```

21 Done

Sample configuration 2:

In the following example, a redundant interface priority of the member interface 1/4 is set to 100, which is lower than the set redundant interface priority of all the other member interfaces of LR/1.

Output of the show channel command displays that the interface 1/4 is the current active interface for the redundant interface set LR/1.

```

1 > set interface 1/4 -lrsetPriority 100
2 Done
3 > show channel
4 1) Interface LR/1 (Link Redundant) #23
5 flags=0x100c020 <ENABLED, UP, LINKREDUNDANT, UP, HAMON, 802.1q>
6 MTU=1500, native vlan=1, MAC=36:97:a2:b7:6b:a9, uptime 0h00m00s
7 Requested: media NONE, speed AUTO, duplex NONE, fctl OFF,
8 throughput 0
9 Actual: throughput 1000
10 LLDP Mode: NONE,
11 RX: Pkts(1) Bytes(52) Errs(0) Drops(1) Stalls(0)
12 TX: Pkts(2) Bytes(84) Errs(0) Drops(4) Stalls(0)
13 NIC: InDisc(0) OutDisc(0) Fctls(0) Stalls(0) Hangs(0) Muted(0)
14 Bandwidth thresholds are not set.
15 1/1: UTP-1000-FULL-OFF UP 0h14m06s LR
16 Inactive Member
17 1/2: UTP-1000-FULL-OFF UP 0h14m06s LR
18 Inactive Member
19 1/3: UTP-1000-FULL-OFF UP 0h14m06s LR
20 Inactive Member
21 1/4: UTP-1000-FULL-OFF UP 0h14m06s LR
22 Active Member
23 Done

```

Sample configuration 3:

Consider a cluster setup of four nodes N1, N2, N3, and N4. In this example, redundant interface set 1/LR/3 is created on node N1, and interfaces 1/1/1, 1/1/2, and 1/1/3 are bound to it. The redundant interface priority is set to a default value of 1024 for all these member interfaces. Output of the show channel command indicates that interface 1/1/1 is the current active interface for redundant interface set 1/LR/3.

```

1 > add channel 1/LR/3
2
3 Done
4 > bind channel 1/LR/3 1/1/1 1/1/2 1/1/3
5
6 Done
7 > show channel
8 1) Interface 1/LR/3 (Link Redundant) #14
9 flags=0x100c020 <ENABLED, UP, LINKREDUNDANT, UP, HAMON,
10 802.1q>

```


```
10      MTU=1500, native vlan=1, MAC=36:97:a2:b7:6b:a9, uptime 0
11          h00m00s
12      Requested: media NONE, speed AUTO, duplex NONE, fctl OFF,
13      throughput 0
14      Actual: throughput 1000
15      LLDP Mode: NONE,
16      RX: Pkts(66) Bytes(4406) Errs(0) Drops(82) Stalls(0)
17      TX: Pkts(55) Bytes(2626) Errs(0) Drops(145) Stalls(0)
18      NIC: InDisc(0) OutDisc(0) Fctls(0) Stalls(0) Hangs(0) Muted
19          (0)
20      Bandwidth thresholds are not set.
21
22      1/1/1: UTP-1000-FULL-OFF UP 0h14m06s LR Active Member
23      1/1/2: UTP-1000-FULL-OFF UP 0h14m06s LR Inactive Member
24      1/1/3: UTP-1000-FULL-OFF UP 0h14m06s LR Inactive Member
25
26      Done
```

Binding an SNIP address to an Interface

May 2, 2023

You can now bind a NetScaler owned SNIP address to an interface without using Layer 3 VLANs. Any packets related to the SNIP address will go only through the bound interface.

This feature can be useful in a scenario where the upstream switch does not support Link Aggregation channels and you want the NetScaler appliance to load balance traffic, originated from a server, across the four links to the upstream switch as shown in the following illustration.

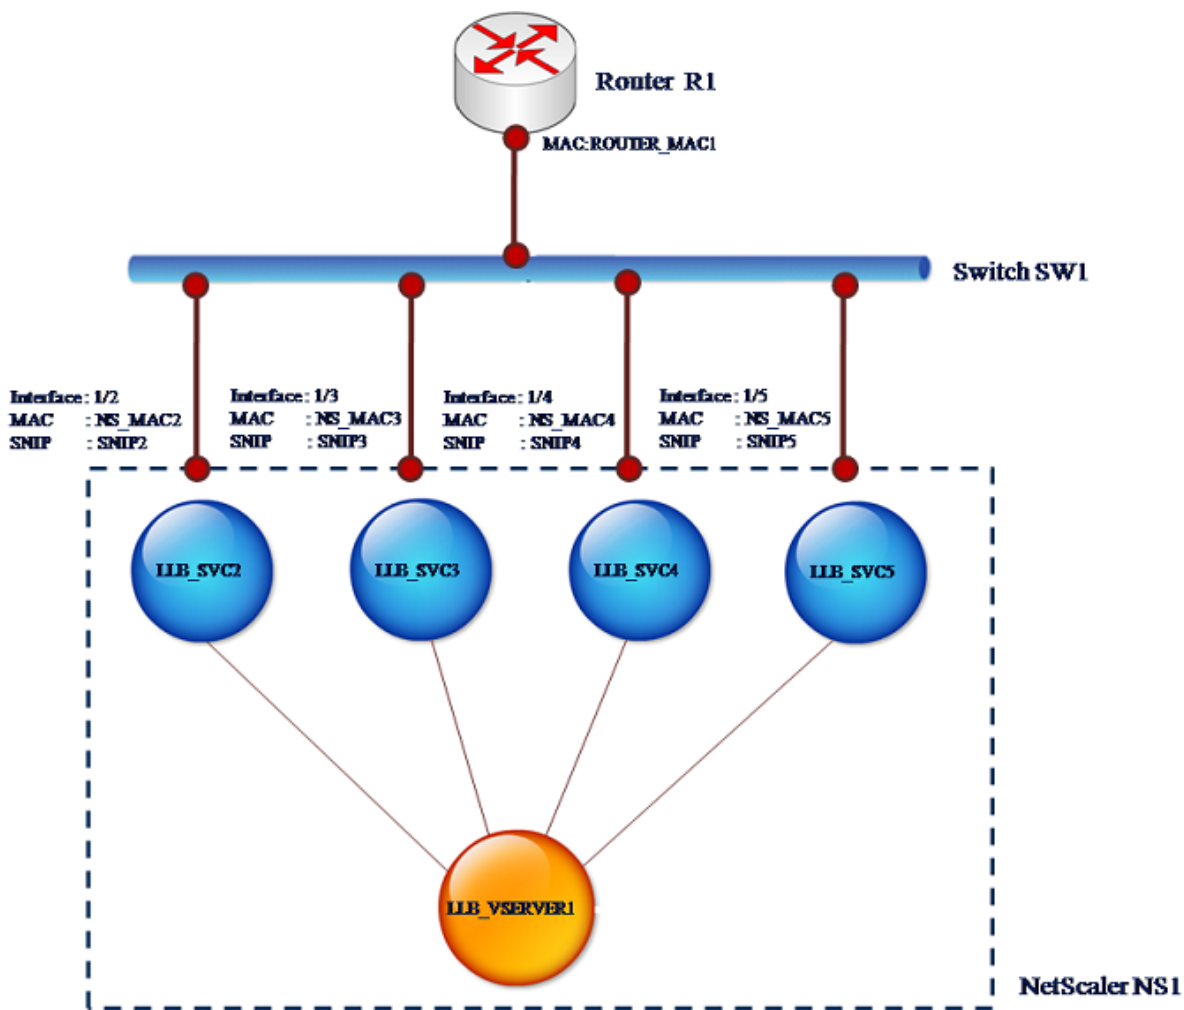

The following tables describe the example settings for the scenario:

Entity	Name	Value
SNIP addresses on NS1	SNIP2 (for reference purpose only)	10.10.10.2
	SNIP3 (for reference purpose only)	
	SNIP4 (for reference purpose only)	
	SNIP5 (for reference purpose only)	
	LLB virtual server on NS1	LLB_VSERVER1
Transparent monitor on NS1	TRANS_MON	-

Entity	Name	Value
LLB services on NS1	LLB_SVC2	10.10.10.240
		LLB_SVC3
		LLB_SVC4
		LLB_SVC5
MAC address of interface 1/2 on NS1	NS_MAC_2 (for reference purpose only)	00:e0:ed:0f:bc:e0
MAC address of interface 1/3 on NS1	NS_MAC_3 (for reference purpose only)	00:e0:ed:0f:bc:df
MAC address of interface 1/4 on NS1	NS_MAC_4 (for reference purpose only)	00:e0:ed:0f:bc:de
MAC address of interface 1/5 on NS1	NS_MAC_5 (for reference purpose only)	00:e0:ed:1c:89:53
IP address of Router R1	Router_IP (for reference purpose only)	10.10.10.1
MAC address of interface of R1	ROUTER_MAC1 (for reference purpose only)	00:21:a1:2d:db:cc

To configure the example settings:

1. Add four different SNIPs in different subnet ranges. This is for ARP to be resolved on four different links. For more information on creating a SNIP address, see [Configuring Subnet IP Addresses \(SNIPs\)](#).

CLI example:

```

1 > add ns ip 10.10.10.2 255.255.255.0 -type SNIP
2 Done
3 > add ns ip 10.10.10.3 255.255.255.128 -type SNIP
4 Done
5 > add ns ip 10.10.10.4 255.255.255.192 -type SNIP
6 Done
7 > add ns ip 10.10.10.5 255.255.255.224 -type SNIP
8 Done

```

2. Add four different dummy services in the added SNIP subnets. This is to ensure that the traffic is sent out with source IP as one of the four configured SNIPs. For more information on creating a service, see [Set up basic load balancing](#).

CLI example:

```

1 > add service LLB_SVC2 10.10.10.240 any *

```

```
2 Done
3 > add service LLB_SVC3 10.10.10.120 any *
4 Done
5 > add service LLB_SVC4 10.10.10.60 any *
6 Done
7 > add service LLB_SVC5 10.10.10.30 any *
8 Done
```

3. Add a transparent ping monitor for monitoring the gateway. Bind the monitor to each of the configured dummy services. This is to make the state of the services as UP. For more information on creating a transparent monitor, see [Configure monitors in a load balancing setup](#).

CLI example:

```
1 > add monitor TRANS_MON ping -destIP 10.10.10.1 -transparent YES
2 Done
3 > bind monitor TRANS_MON LLB_SVC2
4 Done
5 > bind monitor TRANS_MON LLB_SVC3
6 Done
7 > bind monitor TRANS_MON LLB_SVC4
8 Done
9 > bind monitor TRANS_MON LLB_SVC5
10 Done
```

4. Add a link load balancing (LLB) virtual server and bind the dummy services to it. For more information on creating an LLB virtual server, see [Configuring a Basic LLB Setup](#).

CLI example:

```
1 > add lb vserver LLB_VSERVER1 any
2 Done
3 > set lb vserver LLB_VSERVER1 -lbmethod ROUNDROBIN
4 Done
5 > bind lb vserver LLB_VSERVER1 LLB_SVC2
6 Done
7 > bind lb vserver LLB_VSERVER1 LLB_SVC2
8 Done
9 > bind lb vserver LLB_VSERVER1 LLB_SVC2
10 Done
11 > bind lb vserver LLB_VSERVER1 LLB_SVC2
12 Done
```

5. Add the LLB virtual server as the default LLB route. For more information on creating an LLB route see [Configuring a Basic LLB Setup](#).

CLI example:

```
1 > add lb route 0.0.0.0 0.0.0.0 LLB_VSERVER1
2 Done
```

6. Add an ARP entry for each of the dummy services with the MAC address of the gateway. This

way the gateway is reachable through these dummy services. For more information on adding an ARP entry, see [Configuring Static ARP](#).

CLI example:

```
1 > add arp -ipaddress 10.10.10.240 -mac 00:21:a1:2d:db:cc -ifnum
  1/2
2 Done
3 > add arp -ipaddress 10.10.10.120 -mac 00:21:a1:2d:db:cc -ifnum
  1/3
4 Done
5 > add arp -ipaddress 10.10.10.60 -mac 00:21:a1:2d:db:cc -ifnum 1/4
6 Done
7 > add arp -ipaddress 10.10.10.30 -mac 00:21:a1:2d:db:cc -ifnum 1/5
8 Done
```

7. Bind a specific interface to an SNIP by adding an ARP entry for each of these SNIPs. This is to ensure that the response traffic will reach the same interface through which the request went out. For more information on adding an ARP entry, see [Configuring Static ARP](#).

CLI example:

```
1 > add arp -ipAddress 10.10.10.2 -mac 00:e0:ed:0f:bc:e0 -ifnum 1/2
2 Done
3 > add arp -ipAddress 10.10.10.3 -mac 00:e0:ed:0f:bc:df -ifnum 1/3
4 Done
5 > add arp -ipAddress 10.10.10.4 -mac 00:e0:ed:0f:bc:de -ifnum 1/4
6 Done
7 > add arp -ipAddress 10.10.10.5 -mac 00:e0:ed:1c:89:53 -ifnum 1/5
8 Done
```

Monitor the Bridge Table and Changing the Aging time

May 2, 2023

NetScaler appliance bridges frames on the basis of bridge table lookup of the destination MAC address and the VLAN ID. However, the appliance performs forwarding only when Layer 2 mode is enabled.

The bridge table is dynamically generated, but you can display it, modify the aging time for the bridge table, and view bridging statistics. All the MAC entries in the bridge table are updated with the aging time.

To set the aging time of bridge table entries by using the CLI:

At the command prompt, type:

- **set l2param -bridgeagetimeout** <positive_integer>

- **show l2param**

Example:

```
1 > set l2param -bridgeagetimeout 90
2 Done
```

To view the statistics of a bridge table by using the CLI:

At the command prompt, type:

- **stat bridge**

To set the aging time of bridge table entries by using the GUI:

Navigate to **System > Network**. On the **Network** page, in the **Settings** section, click **Configure Layer2 Parameters** and set the **Timeout Value For The Bridge Table Entries (seconds)** parameter.

To view the statistics of a bridge table by using the GUI:

Navigate to **System > Network > Bridge Table**, select the MAC address, and click **Statistics**.

NetScaler Appliances in Active-Active Mode Using VRRP


May 2, 2023

An active-active deployment, in addition to preventing downtime, makes efficient use of all the NetScaler appliances in the deployment. In active-active deployment mode, the same VIPs are configured on all NetScaler appliances in the configuration, but with different priorities, so that a given VIP can be active on only one appliance at a time.

The active VIP is called the master VIP, and the corresponding VIPs on the other NetScaler appliances are called the backup VIPs. If a master VIP fails, the backup VIP with the highest priority takes over and becomes the master VIP. All the NetScaler appliances in an active-active deployment use the Virtual Router Redundancy Protocol (VRRP) protocol to advertise their VIPs and the corresponding priorities at regular intervals.

NetScaler appliances in active-active mode can be configured so that no NetScaler is idle. In this configuration, different sets of VIPs are active on each NetScaler. For example, in the following diagram, VIP1, VIP2, VIP3, and VIP4 are configured on appliances NS1, NS2, and NS3. Because of their priorities, VIP1 and VIP 2 are active on NS1, VIP3 is active on NS2 and VIP 4 is active on NS3. If, for example, NS1 fails, VIP1 on NS3 and VIP2 on NS2 become active.

Figure 1. An Active-Active Configuration

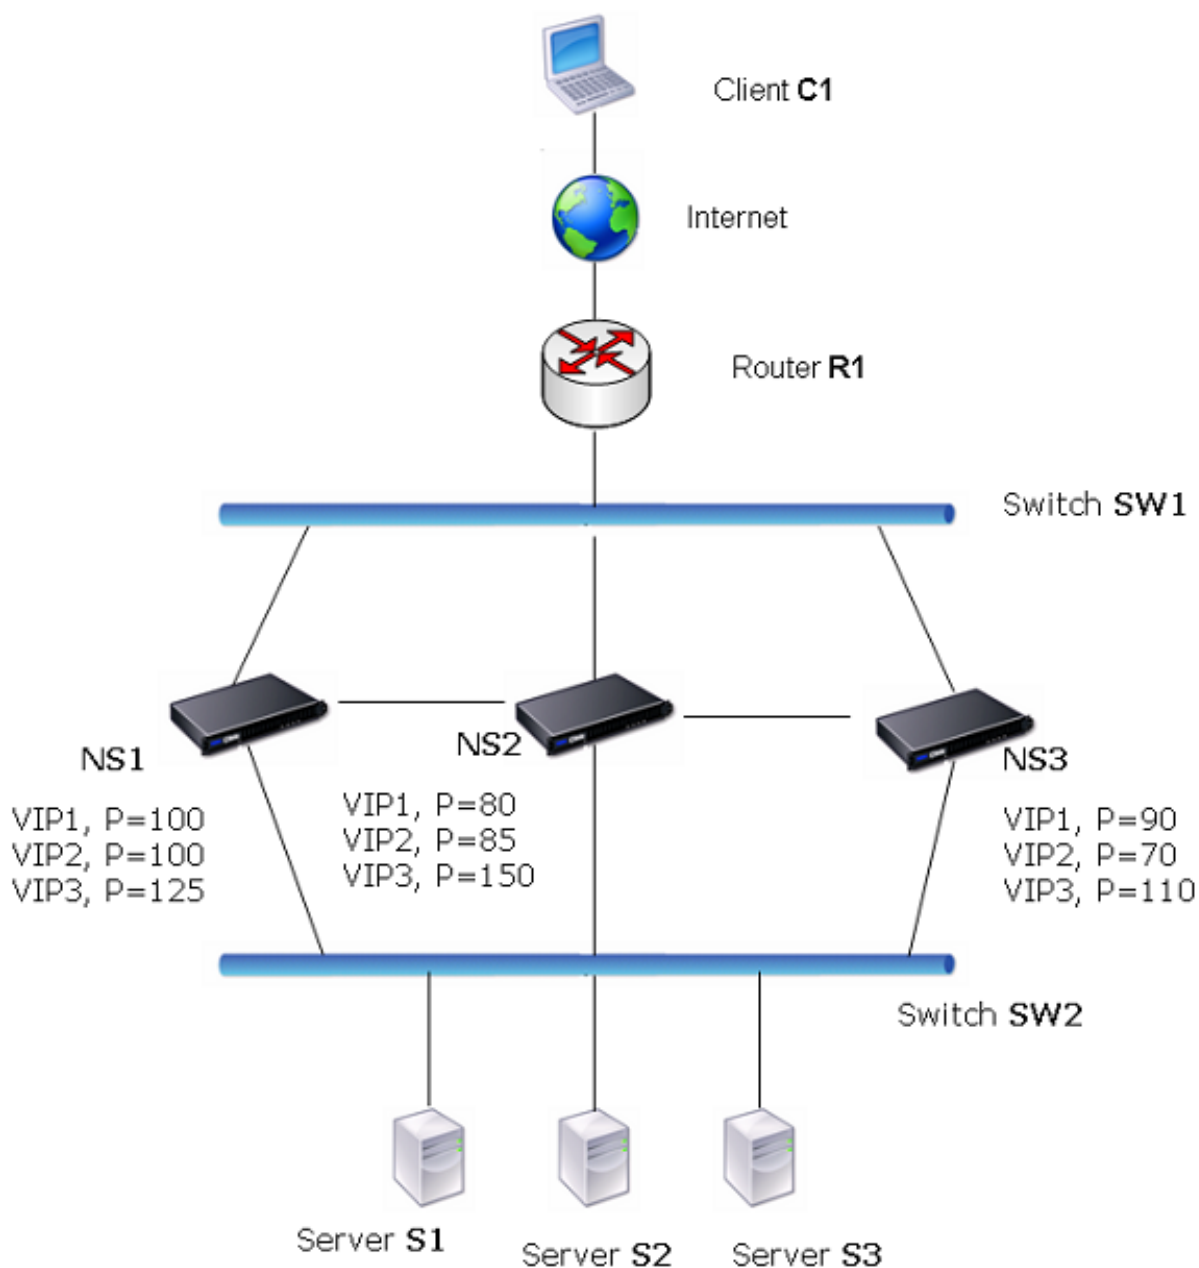

The NetScaler appliances in the above diagram process traffic as follows:

1. Client C1 sends a request to VIP1. The request reaches R1.
2. R1 does not have an ARP entry for VIP1, so it broadcasts an ARP request for VIP1.
3. VIP1 is active in NS1, so NS1 replies with a source MAC address as the virtual MAC (for example virtual MAC1) associated with VIP1, and VIP1 as the source IP address.
4. SW1 learns the port for VIP1 from the ARP reply and updates its bridge table.
5. R1 updates the ARP entry with virtual MAC1 and VIP1.

6. R1 forwards the packet to the VIP1 on NS1.
7. NS1's load balancing algorithm selects server S2, and NS1 opens a connection between one of its SNIP addresses and S2.
8. S2 replies to the SNIP on the NetScaler.
9. NS1 sends S2's reply to the client. In the reply, NS1 inserts MAC address of the physical interface as the source MAC address and VIP1 as the source IP address.
10. Should NS1 fail, the NetScaler appliances use the VRRP protocol to select the VIP1 with the highest priority. In this case, VIP1 on NS3 becomes active, and the following two steps update the active-active configuration.
11. NS3 broadcasts a GARP message for VIP1. In the message, virtual MAC1 is the source MAC address and VIP1 is the source IP address.
12. SW1 learns the new port for virtual MAC1 from the GARP broadcast and updates its bridge table to send subsequent client requests for VIP1 to NS3. R1 updates its ARP table.

The priority of a VIP can be modified by health tracking. If you enable health tracking, you should make sure that preemption is also enabled, so that a VIP whose priority is lowered can be preempted by another VIP.

In some situations, traffic might reach a backup VIP. To avoid dropping such traffic, you can enable sharing, on a per-node basis, as you create an active-active configuration. Or you can enable the global send to master option. On a node on which sharing is enabled, it takes precedence over send to master.

Health Tracking

Base priority (BP-range 1-255) ordinarily determines which VIP is the master VIP, but effective priority (EP) can also affect the determination.

For example, if a VIP on NS1 has a priority of 101 and same VIP on NS2 has a priority of 99, the VIP on NS1 is active. However, if two vservers are using the VIP on NS1 and one of them goes DOWN, health tracking can reduce the EP of VIP on NS1. VRRP then makes the VIP on NS2 the active VIP.

Following are the health tracking options for modifying EP:

- **NONE.** No tracking. EP = BP
- **ALL.** If all virtual servers are UP, then EP = BP. Otherwise, EP = 0.
- **ONE.** If at least one virtual server is UP, then EP = BP. Otherwise, EP = 0.
- **PROGRESSIVE.** If ALL virtual servers are UP, then EP = BP. If ALL virtual servers are DOWN then EP = 0. Otherwise EP = BP (1 - K/N), where N is the total number of virtual servers associated with the VIP and k is the number of virtual servers that are down.

Note: If you specify a value other than NONE, preemption should be enabled, so that the backup VIP with the highest priority becomes active if the priority of the master VIP is downgraded.

Preemption

Preemption of an active VIP by another VIP that attains a higher priority is enabled by default, and normally should be enabled. In some cases, however, you may want to disable it. Preemption is a per-node setting for each VIP.

Preemption can occur in the following situations:

- An active VIP goes down and a VIP with a lower priority takes its place. If the VIP with the higher priority comes back online, it preempts the currently active VIP.
- Health tracking causes the priority of a backup VIP to become higher than that of the active VIP. The backup VIP then preempts the active VIP.

Sharing

In the event that traffic reaches a backup VIP, the traffic is dropped unless the sharing option is enabled on the backup VIP. This behavior is a per node setting for each VIP and is disabled by default.

In the figure **An Active-Active Configuration** VIP1 on NS1 is active and VIP1 VIPs on NS2 and NS3 are backups. Under certain circumstances, traffic may reach VIP1 on NS2. If Sharing is enabled on NS2, this traffic is processed instead of dropped.

Configuring Active-Active Mode

May 2, 2023

On each NetScaler appliance that you want to deploy in active-active mode, you must add a virtual MAC and bind the virtual MAC to a VIP. The virtual MAC for a given VIP must be same on each appliance. For example, if VIP 10.102.29.5, is created on the appliances, a virtual router ID (VRID) must be created on each NetScaler and bound to VIP 10.102.29.5 on each NetScaler. When you bind a virtual MAC to a VIP, the appliance sends VRRP advertisements to each VLAN that is bound to that VIP. The virtual MAC can be shared by different VIPs configured on the same NetScaler.

Configuring IPv4 Active-Active Mode

Perform the following tasks on each of the NetScaler appliances to be included in the active-active configuration:

- **Add a virtual MAC address.** Add a virtual MAC address by adding a VRID. You can also specify a priority and enable or disable preemption and sharing on this VRID address.

- **Add a VIP address and associate the virtual MAC's VRID.** Add a VIP address and set the VRID parameter to the newly created VRID. The attributes of the VRID (for example, priority and pre-emption) are bound to this VIP address.

Note: The same VIP address must be added to all the other NetScaler appliances.

To add a virtual MAC address by using the CLI

At the command prompt, type:

- **add vrid** <id> [-<priority> <positive_integer>] [-<preemption> (**ENABLED**|**DISABLED**)] [-<sharing> (**ENABLED**|**DISABLED**)] [-<tracking> <tracking>]
- **show vrid**

To add a VIP address by using the CLI:

At the command prompt, type:

- **add ns ip** <IPv4Address> -type VIP -vrid <value>
- **show ns ip**

To configure a virtual MAC by using the GUI:

1. Navigate to **System > Network > VMAC**, on the **VMAC** tab, add a new virtual MAC, or edit an existing virtual MAC.
2. Set the following parameters:
 - Virtual Router ID
 - Priority
 - Tracking
 - Preemption
 - Sharing

To configure a VIP address and associate the VRID to it by using the GUI:

1. Navigate to **System > Network > IPs**, on the **IPV4s** tab, add an IP address of type VIP.
2. While adding the IP address, select the virtual router ID from the **Virtual Router Id** drop down box.

Sample Configuration:

The following sample configuration is for deploying NetScaler appliances NS1 and NS2 in IPv4 active-active mode. VIP address 203.0.113.10 is configured on both NS1 and NS2, with a different priority value on each appliance. On each appliance, this VIP address is bound to a virtual MAC address. 203.0.113.10 is master on NS2, because its priority (200) on NS2 is higher than on NS1 (100).

```
1 Settings on NS1
2
```



```

3      > add vrid 10 -Priority 100 -Preemption Enabled -sharing Enabled
4
5      Done
6
7      > add ns ip 203.0.113.10 -type VIP -vrid 10
8
9      Done
10
11     Settings on NS2
12
13     > add vrid 10 -Priority 200 -Preemption Enabled -sharing Enabled
14
15     Done
16
17     > add ns ip 203.0.113.10 -type VIP -vrid 10
18
19     Done

```

Configuring IPv6 Active-Active Mode

Perform the following tasks on each of the NetScaler appliances to be included in the active-active configuration:

- **Add a virtual MAC6 address.** Add a virtual MAC6 address by adding a VRID6. You can also specify a priority and enable or disable preemption and sharing on this VRID6 address.
- **Add a VIP6 address.** Add a VIP6 address. Set the VRID6 parameter to the VRID6 of the newly created virtual MAC6. The attributes of the virtual MAC6 (for example, priority and preemption) are bound to this VIP6 address.

Note: The same VIP6 address must be added to all the other NetScaler appliances.

To add a virtual MAC6 address by using the CLI:

At the command prompt, type:

- **add vrid6** <id> [-**priority** <positive_integer>] [-**preemption** (**ENABLED** | **DISABLED**)] [-**sharing** (**ENABLED** | **DISABLED**)]
- **show vrid6**

To add a VIP6 address by using the CLI:

At the command prompt, type:

- **add ns ip6** <IPv6Address> **-type** VIP **-vrid** <value>
- **show ns ip6**

To configure a virtual MAC6 by using the GUI:

1. Navigate to **System > Network > VMAC**, on the **VMAC6** tab, add a new virtual MAC6, or edit an existing **VMAC6**.
2. Set the following parameters:
 - Virtual Router ID
 - Priority
 - Preemption
 - Sharing

To configure a VIP6 address and associate the VRID to it by using the GUI:

1. Navigate to **System > Network > IPs**, on the **IPV6s** tab, add an IPv6 address of type VIP.
2. While adding the VIP6 address, select the VRID6 from the **Virtual Router Id** drop down box.

Sample Configuration:

The following sample configuration is for deploying NetScaler appliances NS1 and NS2 in IPv6 active-active mode. VIP6 address 2001:db8::5001 is configured on both NS1 and NS2, with a different priority value on each appliance. On each appliance, this VIP6 address is bound to a virtual MAC6 address. 2001:db8::5001 is master on NS2, because it's priority (200) on NS2 is higher than on NS1 (100).

```

1   Settings on NS1
2   > add vrid6 10 -Priority 100 -Preemption Enable -sharing Enable
3
4   Done
5   > add ns ip6 2001:db8::5001 -type VIP -vrid6 10
6
7   Done
8   Settings on NS2
9   > add vrid6 10 -Priority 200 -Preemption Enable -sharing Enable
10
11  Done
12  > add ns ip6 2001:db8::5001 -type VIP -vrid6 10
13
14  Done

```

Configuring Send to Master


May 2, 2023

Usually, the traffic destined to a VIP reaches the NetScaler appliance on which the VIP is active, because an ARP request with the VIP and a virtual MAC on that appliance has reached the upstream router. But in some cases, such as static routes configured on the upstream router for the VIP subnet, or a topology that blocks this route, the traffic can reach a NetScaler appliance on which the VIP is in backup state. If you want this appliance to forward the data packets to the appliance on which the

VIP is active, you need to enable the send to master option. This behavior is a per node setting and is disabled by default.

For example, in the following diagram, VIP1 is configured on NS1, NS2, and NS3 and is active on NS1. Under certain circumstances, traffic for VIP1 (active on NS1) may reach VIP1 on NS3. When the send to master option is enabled on NS3, NS3 forwards the traffic to NS1 through NS2 by using route entries for NS1.

Figure 1. An Active-Active Configuration with Send to Master Option Enabled

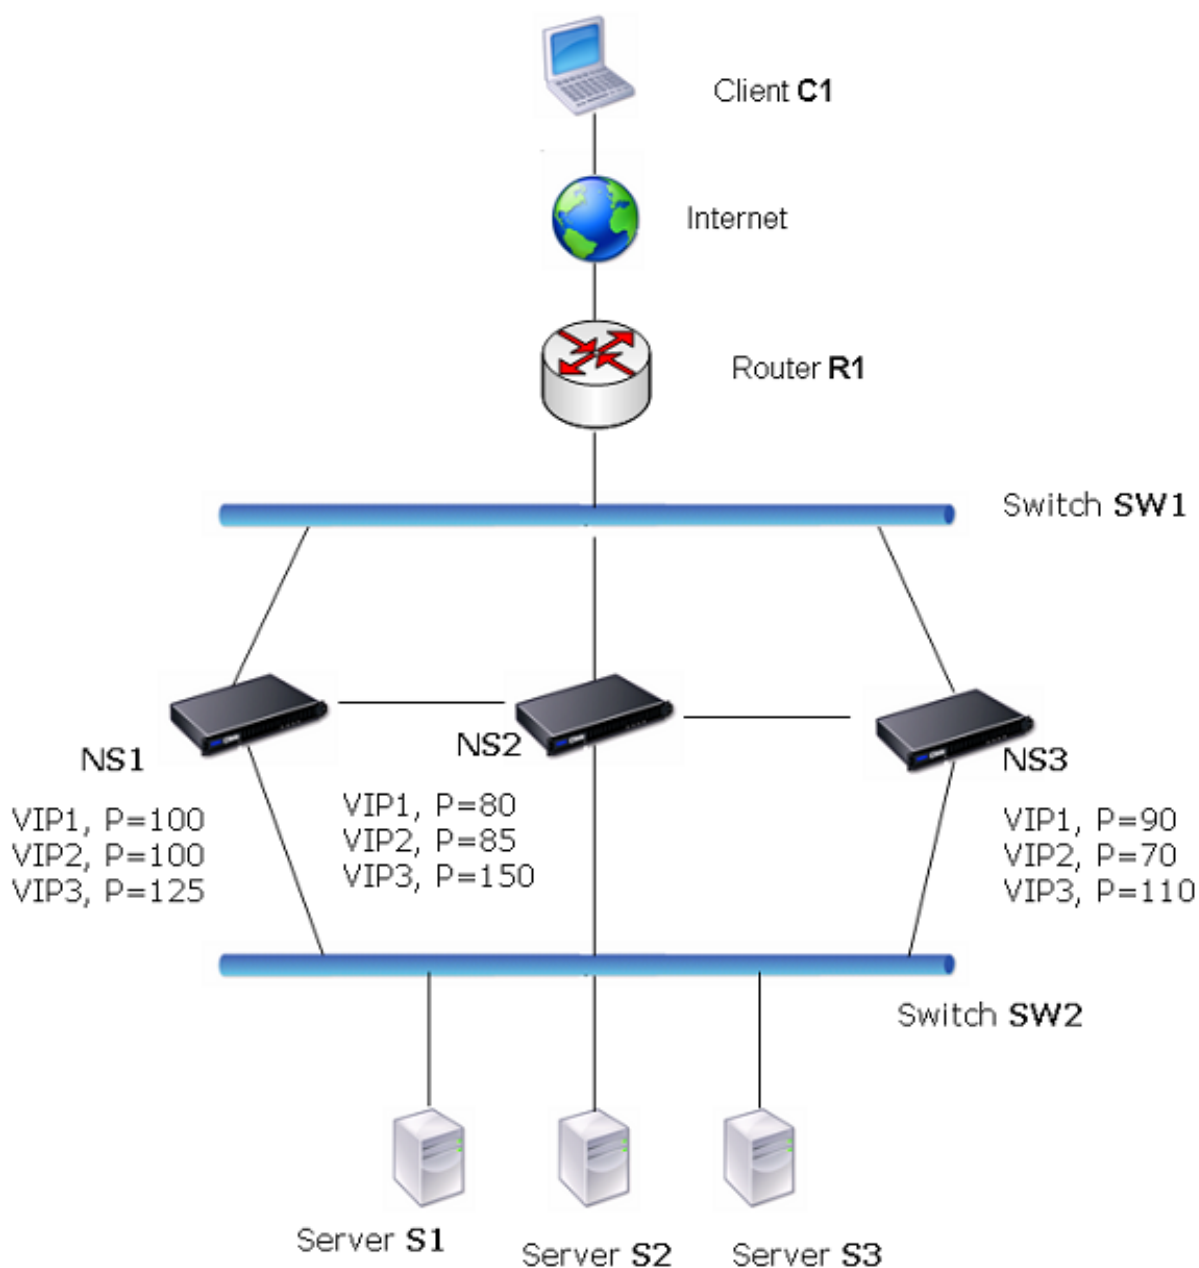

To enable send to master by using the CLI:

At the command prompt, type:

```
set vrIDParam -sendToMaster (ENABLED  DISABLED)
```

Example:

```
1 > set vrIDParam -sendToMaster ENABLED
2 Done
```

To enable send to master by using the GUI:

1. Navigate to **System > Network**, in the **Settings** group, click **Virtual Router Parameters**.
2. Select the **Send to Master** option.

Configuring VRRP Communication Intervals

May 2, 2023

In an active-active deployment, all NetScaler nodes use the Virtual Router Redundancy Protocol (VRRP) to advertise their master VIP addresses and the corresponding priorities in VRRP advertisement packets (hello messages) at regular intervals.

VRRP uses the following communication intervals:

- **Hello Interval.** Interval between the VRRP hello messages that a node of a master VIP address sends to its peer nodes.
- **Dead Interval.** Time after which a node of a backup VIP address considers the state of the master VIP address as DOWN if VRRP hello messages are not received from the node of the master VIP address. After the dead interval, the backup VIP address takes over and becomes the master VIP address.

You can change these intervals to a desired value. Both of these communication intervals are per node setting for all VIP addresses in that node.

To configure VRRP communication intervals by using the CLI:

At the command prompt, type:

- **set vrIDParam [-helloInterval <msecs>] [-deadInterval <secs>]**
- **sh vrIDParam**

Example:

```
1 > set vrIDParam -helloInterval 500 -deadInterval 2
2 Done
```

To configure VRRP communication intervals by using the GUI:

1. Navigate to **System > Network**, in the **Settings** group, click **Virtual Router Parameters**.
2. In **Configure Virtual Router Parameter**, set the **Hello Interval** and **Dead Interval** parameters.
3. Click **OK**.


Example 1: Nodes with the Same VRRP Dead Intervals

Consider an active-active deployment consisting of NetScalers NS1, NS2, and NS3. Virtual IP addresses VIP1, VIP2, VIP3 are configured on each of these ADCs. Because of their priorities, VIP1 is active on NS1, VIP2 is active on NS2, and VIP3 is active on NS3.

As shown in the table below, the dead interval is set to the same value (2 seconds) on all the three nodes. The VRRP communication intervals (hello interval and dead interval) of a node apply to all the VRIDs configured on the node, and in turn, apply to all VIP addresses associated with the VRIDs on the node.

On each node, the VIP addresses that are active (master) on that node use the hello interval, and the dead interval is used by the VIP addresses that are inactive (backup) on that node. Preemption is disabled for the VIP addresses in all the three nodes.

The following table lists the settings used in this example: [VRRP interval example 1 settings](#).

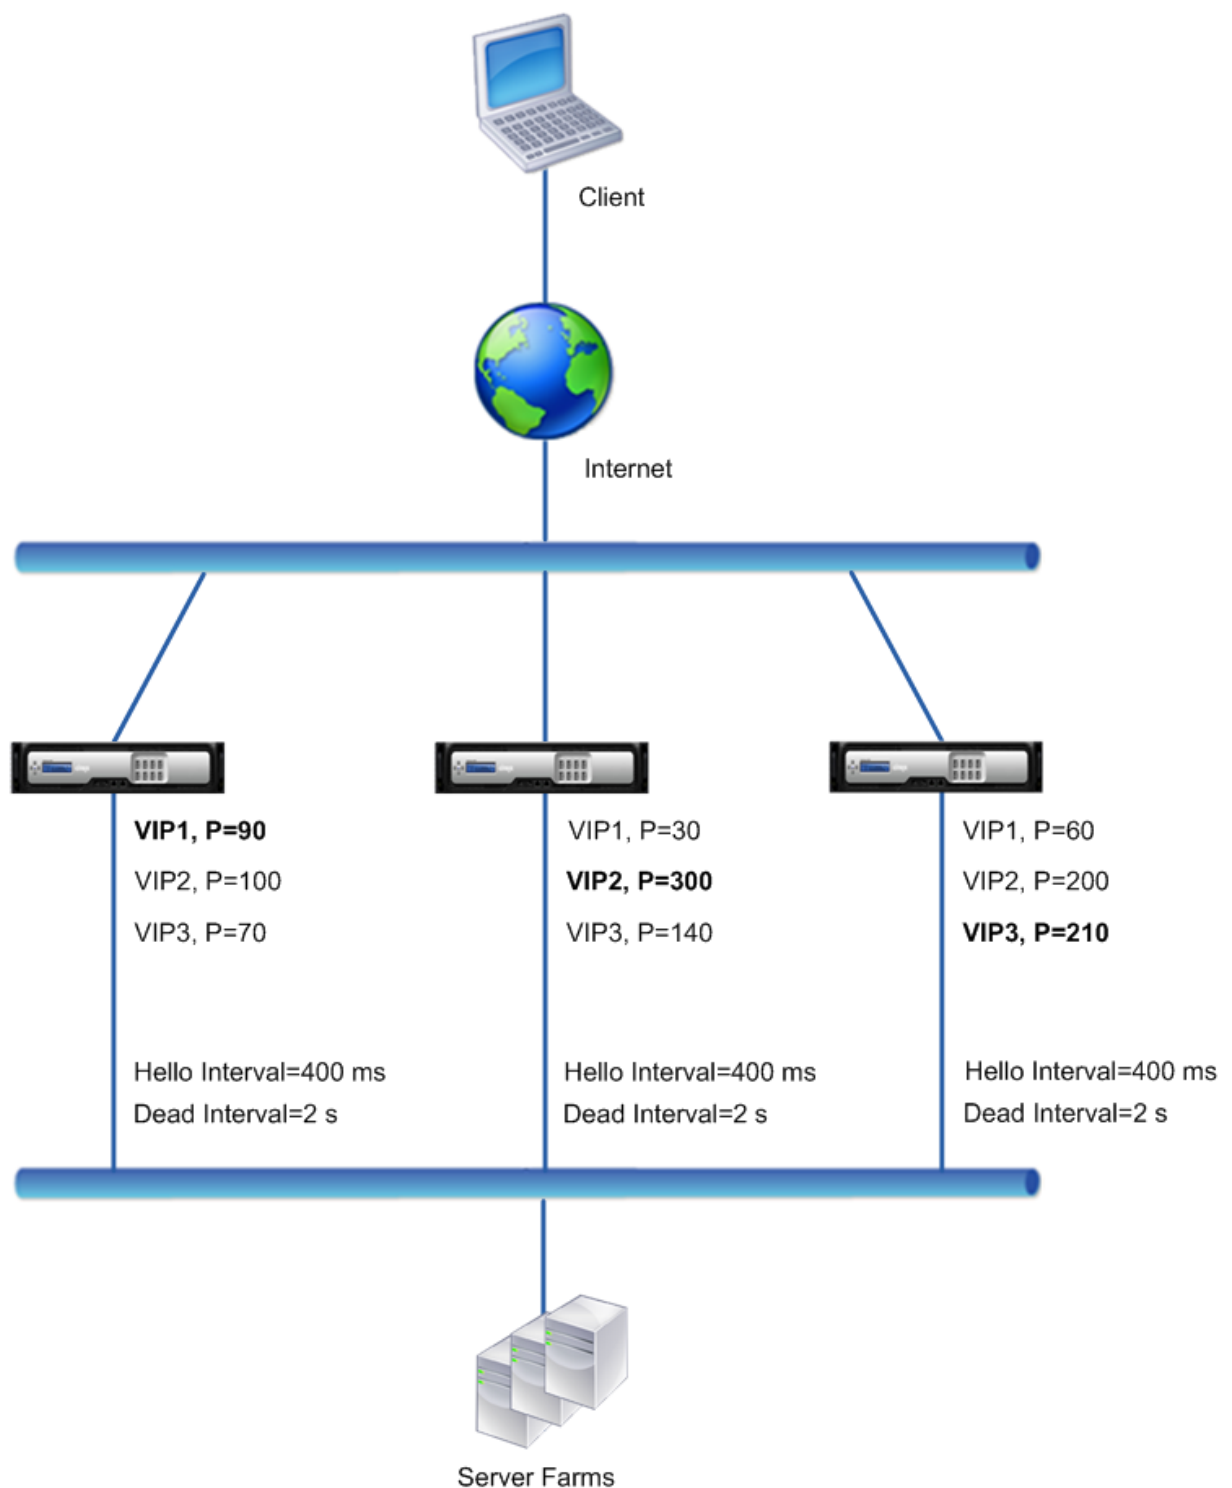

The execution flow is as follows:


1. NS1 sends hello messages at a set hello interval of 400 ms to NS2 and NS3 for the VIP1 address, because VIP1 is active (the master) on NS1. Similarly, NS2 sends hello messages for VIP2, and NS3 sends hello messages for VIP3.

2. On NS1, the set dead interval applies to VIP2 and VIP3, because they are inactive (backups) on NS1. Similarly, on NS2, the set dead interval applies to VIP1 and VIP3, and on NS3, the set dead interval applies to VIP1 and VIP2.
3. If NS1 goes down, NS2 and NS3 consider NS1 to be down if they receive no hello messages from NS1 for 2 seconds (the dead interval). VIP1 on NS3 takes over and becomes active (master) because its VRID priority (60) is higher than that of VIP1 of NS2 (30).

Example 2: Nodes with Different VRRP Dead Intervals

Consider a VRRP deployment similar to the deployment described in Example1 but with a different dead interval on each node (NS1, NS2, and NS3). Preemption is disabled for the VIP addresses in all the three nodes.

The following table lists the settings used in this example: [VRRP interval example 2 settings](#).

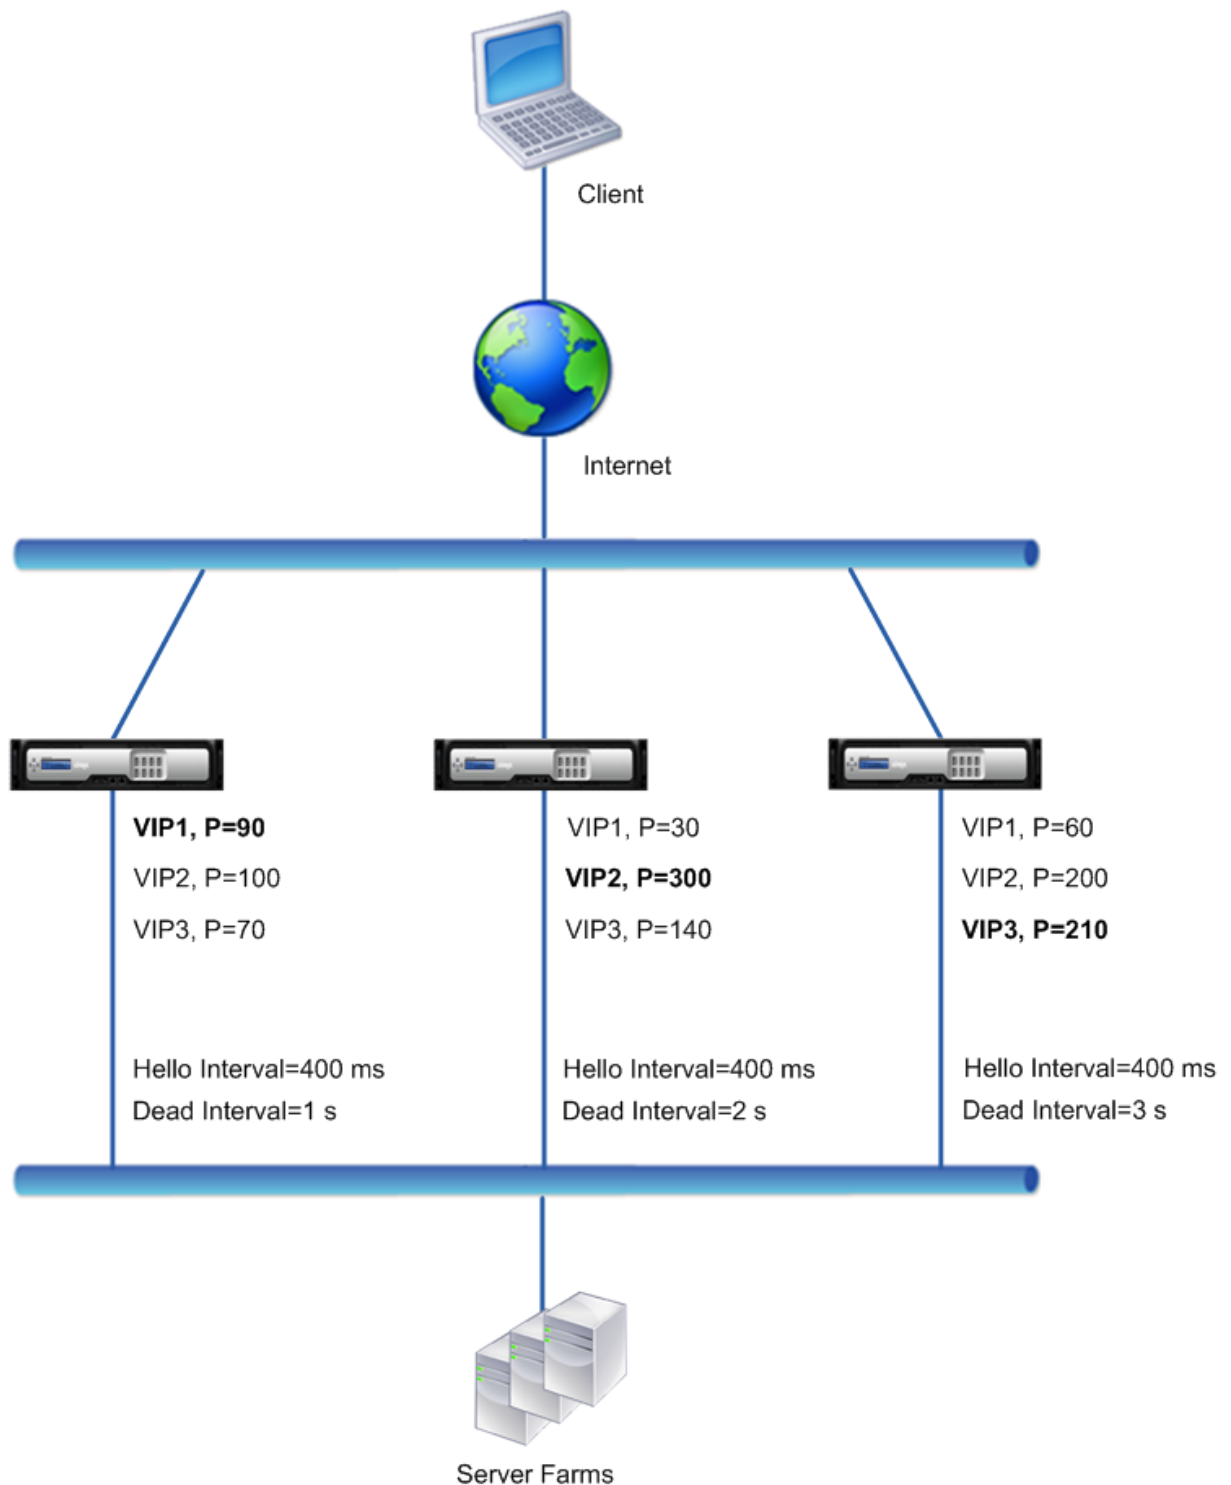

The execution flow is as follows when NS1 goes down:

1. NS2 considers NS1 to be down after not receiving any hello messages from NS1 for 2 seconds (NS2's dead interval).
2. VIP1 on NS2 takes over and becomes active (master). NS2 now starts sending hello messages


for VIP1.

Even though VIP1 on NS3 has a higher VRIP priority (60) than does VIP1 on NS2 (30), NS3's larger dead interval (3 seconds, vs. 2 seconds for NS2), prevents VIP1 on NS3 from taking over before VIP 1 on NS2 has already done so.

Example 3: Nodes with Different Dead Intervals and Preemption Enabled

Consider a VRRP deployment similar to the deployment described in Example1 but with different dead intervals on the three nodes, NS1, NS2, and NS3, and with preemption enabled for the VIP1 address on NS3.

The following table lists the settings used in this example: [VRRP interval example 3 settings](#).

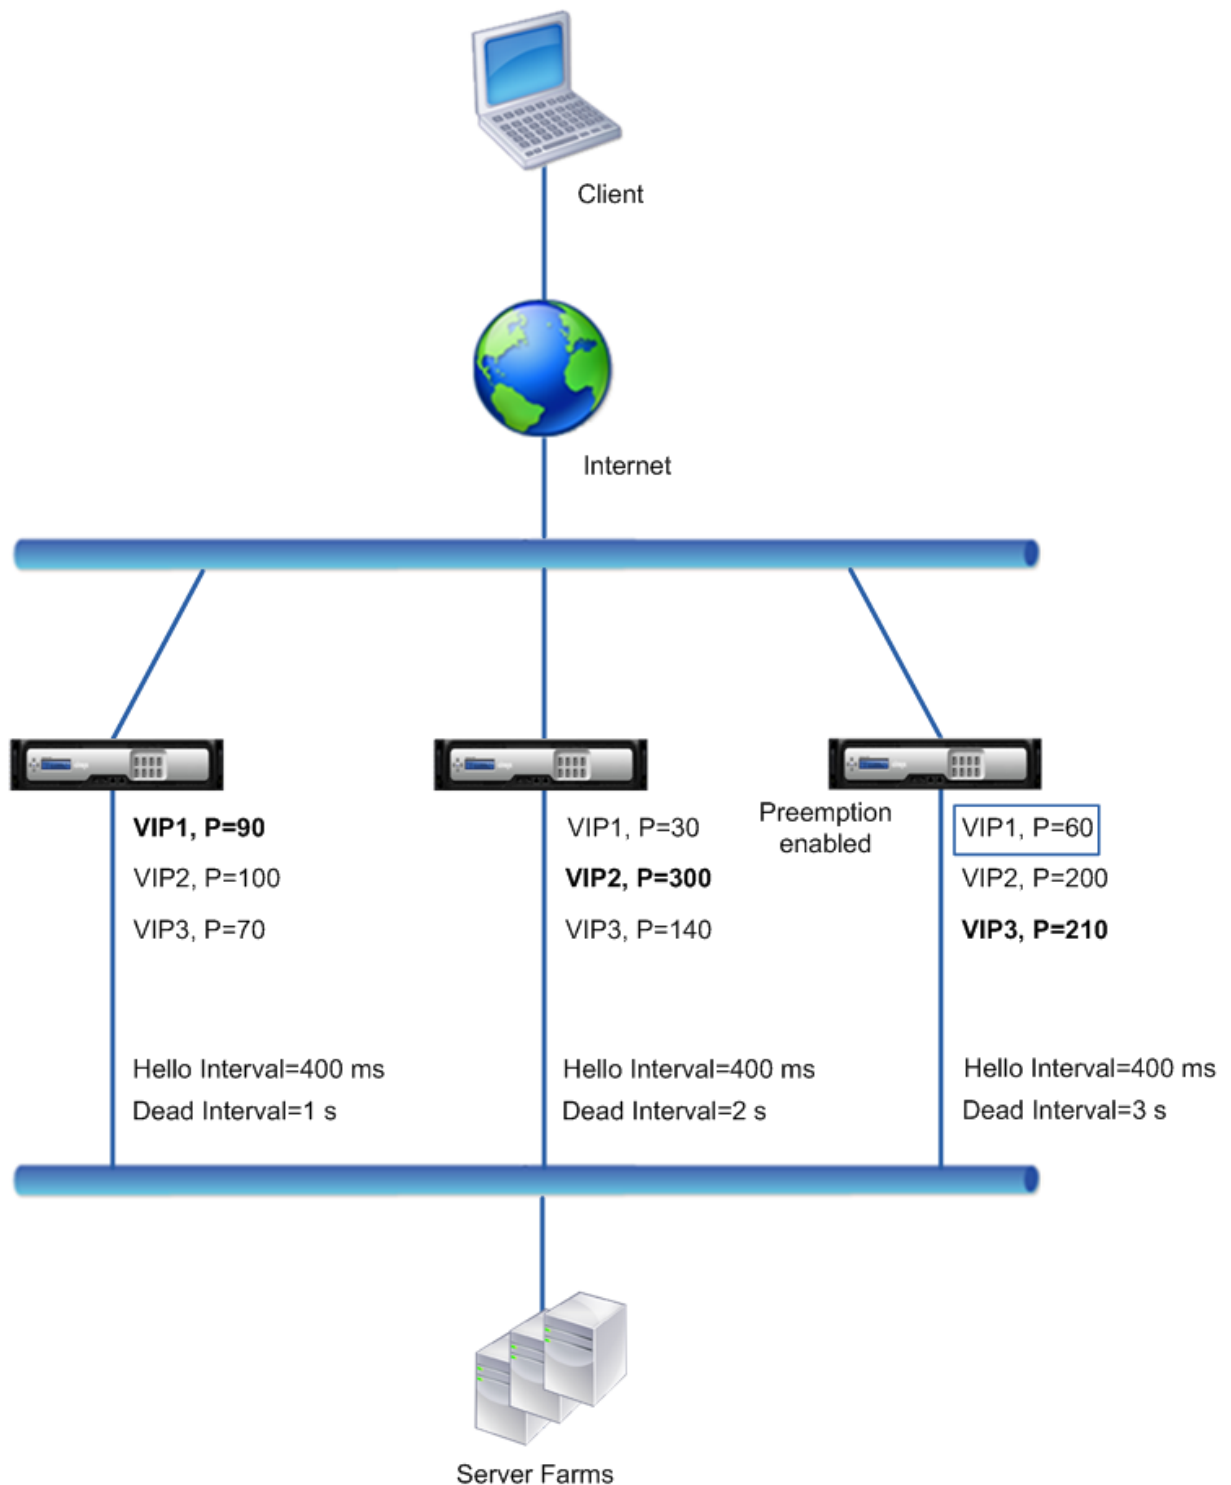

The execution flow is as follows when NS1 goes down:

1. NS2 considers NS1 to be down after not receiving any hello messages from NS1 for 2 seconds (NS2's set dead interval). At this time, NS3, with a dead interval of 3 seconds, does not consider NS1 to be down.

2. VIP1 on NS2 takes over and becomes active (master). NS2 now starts sending hello messages for VIP1.
3. Upon receiving hello messages from NS2 for VIP1, NS3 preempts NS2 for VIP1 because preemption is enabled for VIP1 of NS3 and the VRID priority (60) of VIP1 of NS3 is higher than that (30) of VIP1 of NS2.
4. VIP1 on NS3 takes over and becomes active (master). NS3 now starts sending hello messages for VIP1.

Configuring Health Tracking based on Interface State

May 2, 2023

To ensure that a backup VIP address takes over as the master VIP before the node of the current master VIP address goes down completely, you can configure a node to change the priority of a VIP address when the state of an interface on the node changes. For example, the node reduces the priority of a VIP address when the state of an interface changes to DOWN, and increases the priority when the state of the interface changes to UP. This feature is a per node configuration for each VIP address.


Example

Consider an active-active deployment consisting of NetScalers NS1, NS2, and NS3. Virtual IP addresses VIP1, VIP2, VIP3, and VIP4 are configured on each of these ADCs. Because of their priorities, VIP1 and VIP4 are active on NS1, VIP2 is active on NS2, and VIP3 is active on NS3.

To ensure that the active VIP addresses on NS1 are taken over by either NS2 or NS3 before NS1 goes down completely, interface-based health tracking is configured for the VIP1 and VIP4 addresses on NS1. Configuring interface-based health tracking for a VIP address includes associating the desired interfaces and setting the reduced priority (`trackifNumPriority`) parameter for the associated VRID of the VIP address. For example, on NS1, interfaces 1/2, 1/3, and 1/5 are associated to the VRID of VIP1, and reduced priority is set to 20.

Preemption is enabled for these VIP addresses in all three nodes.

The following table lists the settings used in this example: [Health tracking example settings](#).

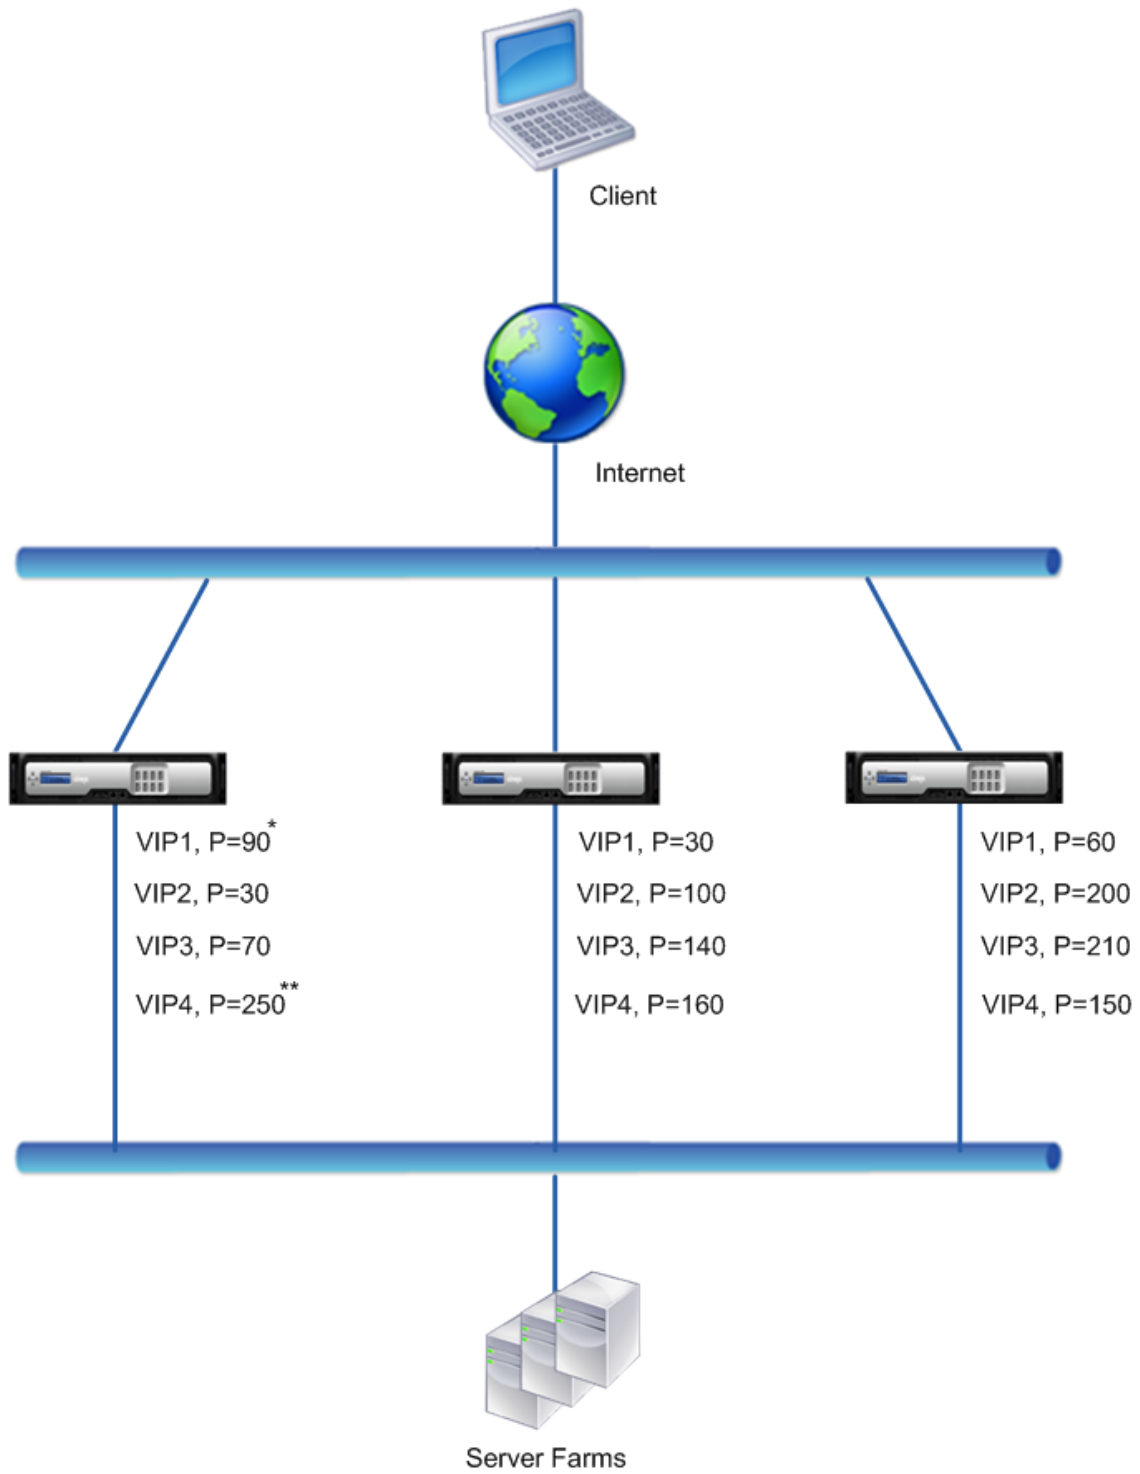

*
Packet Interfaces = 1/2, 1/3, 1/5
Reduced Priority = 20

**
Packet Interfaces = 1/5, 1/7
Reduced Priority = 55

The execution flow is as follows on NS1 when multiple interface on NS1 goes down:

1. If interface 1/3 goes down, the priority of address VIP1 is reduced by 20 (VIP1's reduced priority value), because interface 1/3 is associated with VIP1:
 - Effective priority of VIP1 = (Current priority - reduced priority) = (90-20) = 70
2. Similarly, if interface 1/5 goes down, the priority of address VIP1 is further reduced:
 - Effective priority of VIP1 = (Current priority - reduced priority) = (70-20) = 50
3. At this point, the effective priority of VIP1 on NS1 is less than the priority of VIP1 on NS3. NS3 preempts NS1 for VIP1. VIP1 on NS3 takes over and becomes active (master).
4. Also, because interface 1/5 is also associated with VIP4, the priority of VIP4 is reduced by the VIP4's reduced priority value (55).
 - Effective priority of VIP4 = (250 - 55) = 195
5. If interface 1/7 goes down, the priority of VIP4 is further reduced:
 - Effective priority of VIP4 = (Current priority - reduced priority) = (195-55) = 145
6. At this point, the effective priority of VIP4 on NS1 is less than the priority of VIP4 on NS2. NS2 preempts NS1 for VIP4. VIP4 on NS3 takes over and becomes active (master). This configuration ensures that none of the four VIP addresses are active on NS1 before it completely goes down.

Configuration Steps for IPv4 Active-Active Mode

To configure this feature on a node for a VIP address, you set the Reduced Priority (`trackifNumPriority`) parameter, and then associate the interfaces whose state is to be tracked for changing the priority of the VIP address. When any of the associated interface's state changes to DOWN or UP, the node reduces or increases the priority of the VIP address by the configured Reduced Priority (`trackifNumPriority`) value.

To set reduced priority and bind interfaces to the virtual router ID by using the CLI:

At the command prompt, type:

- **set vrID** <id> [-**trackifNumPriority** <positive_integer>]
- **bind vrID** <id> -**trackifNum** <interface_name>
- **show vrID** <id>

Example:

```
1 > set vrID 125 -trackifNumPriority 10
2 Done
3
4 > bind vrID 125 -trackifNum 1/4 1/5
5 Done
```

To set reduced priority and bind interfaces to the virtual router ID by using the GUI:

1. Navigate to **System > Network > VMAC**.
2. On the **VMACs** tab, select a virtual router ID, and click **Edit**.
3. Under **Configure virtual MAC**, set the **Reduced Priority** parameter.
4. Select the **Interfaces tracked for the VRID** option and, under **Associate Interfaces**, add interfaces to the virtual router ID.

Configuration Steps for IPv6 Active-Active Mode

To configure this feature on a node for a VIP6 address, you set the Reduced Priority (`trackifNumPriority`) parameter, and then associate the interfaces whose state is to be tracked for changing the priority of the VIP6 address. When any of the associated interface's state changes to DOWN or UP, the node reduces or increases the priority of the VIP6 address by the configured Reduced Priority (`trackifNumPriority`) value.

To change the priority of a VIP address automatically by using the CLI:

At the command prompt, type one of the following sets of commands.

- If adding a new virtual MAC6:
 - **add vrID6** <id> [-**trackifNumPriority** <positive_integer>]
 - **bind vrID6** <id> -**trackifNum** <interface_name>
 - **show vrID6** <id>
- If reconfiguring an existing virtual MAC6:
 - **set vrID6** <id> [-**trackifNumPriority** <positive_integer>]
 - **bind vrID6** <id> -**trackifNum** <interface_name>
 - **show vrID6** <id>

Example:

```
1 > set vrID6 130 -trackifNumPriority 10
2 Done
3
4 > bind vrID6 130 -trackifNum 1/4 1/5
5 Done
```

Delaying Preemption

May 2, 2023

By default, a backup VIP address preempts the master VIP address immediately after its priority becomes higher than that of the master VIP. When configuring a backup VIP address, you can specify an amount of time by which to delay the preemption. Preemption delay time is a per-node setting for each backup VIP address.

The preemption delay setting for a backup VIP does not apply in the following conditions:

- The node of the master VIP goes down. In this case, the backup VIP takes over as the master VIP after the dead interval set on the backup VIP’s node.
- The priority of the master VIP is set to zero. The backup VIP takes over as the master VIP after the dead interval set on the backup VIP’s node.

Example: Delaying Preemption

Consider an active-active deployment consisting of NetScaler appliances NS1 and NS2. Virtual IP address VIP1 is configured on each of these appliances. Because of their priorities, VIP1 is master on NS2. Preemption is enabled and preemption delay time is set for VIP1 on these two nodes.

The following table lists the settings used in this example.

Entity and Parameters	Settings on NS1	Settings on NS2
VIP1 (for reference purposes only)	IP address: 192.0.1.10, VRID: 10, Priority: 100, Preemption: Enabled, Preemption delay time: 1000 seconds	IP address: 192.0.1.10, VRID: 10, Priority: 200, Preemption: Enabled, Preemption delay time: 2000 seconds
Dead Interval	1 Seconds	2 Seconds

Following are some examples of possible preemption behavior in this setup:

- If the priority of VIP1 on NS1 is set to a value (for example, 210) higher than that of VIP1 on NS2, VIP1 on NS1 takes over as master after its set preemption delay time (1000 secs).
- If a third node NS3 with the following VRRP settings is added to this deployment, VIP1 on NS3 becomes master after its set preemption delay time (3000 secs).
 - VIP1
 - * VRID: 30
 - * IP address:
 - * Priority = 300
 - * Preemption delay time = 3000 seconds

- If NS2 goes down, VIP1 on NS1 takes over as master after 1 second (set dead interval on NS1). Preemption delay time for VIP1 on NS1 does not apply in this case.
- If NS2 goes down and NS1 restarts, VIP1 on NS1 becomes master 1 second (set dead interval on NS1) after NS1 comes up. Preemption delay time for VIP1 on NS1 does not apply in this case.
- If the priority of VIP1 on NS2 is set to zero, VIP1 goes to standby mode. VIP1 on NS1 takes over as master after 1 second (set dead interval on NS1). Preemption delay time for VIP1 on NS1 does not apply in this case.

Configuring Delay Preemption for IPv4 Active-Active Mode

To configure preemption delay time for a VIP address, you set the preemption delay timer parameter of the associated virtual MAC address. You can set this parameter when you add the address, or you can modify an existing virtual MAC address.

To configure preemption delay time by using the CLI:

- To set the preemption delay time while adding a virtual MAC, at the command prompt, type:
 - **add vrid** <id> **-preemptiondelaytimer** <secs>
 - **show vrid**
- To set the preemption delay time while modifying a virtual MAC, at the command prompt, type:
 - **set vrid** <id> **-preemptiondelaytimer** <secs>
 - **show vrid**

To configure preemption delay time by using the GUI:

1. Navigate to **System > Network > VMAC**.
2. On the **VMAC** tab. While adding a new virtual MAC, or editing an existing virtual MAC, set the **Preemption Delay Timer** parameter.

Sample configuration:

The following configuration uses the settings listed in table in section Example: Delaying Preemption.

```

1      Settings on NS1
2
3      > set vrid param - deadInterval 1
4
5      Done
6
7      > add ns ip 192.0.1.10 255.255.255.255 - type VIP
8
9      Done
10
```



```
11 > add vrid 10 -Priority 100 -Preemption Enable -
    preemptiondelaytimer 1000
12
13 Done
14
15 > bind ns ip 192.0.1.10 255.255.255.255 -vrid 10
16
17 Done
18
19 Settings on NS2
20
21 > set vrid param -deadInterval 2
22
23 Done
24
25 > add ns ip 192.0.1.10 255.255.255.255 -type VIP
26
27 Done
28
29 > add vrid 20 -Priority 200 -Preemption Enable -
    preemptiondelaytimer 2000
30
31 Done
32
33 > set ns ip 192.0.1.10 255.255.255.255 -vrid 10
34
35 Done
```

Configuring Delay Preemption for IPv6 Active-Active Mode

To configure preemption delay time for a VIP6 address, you set the preemption delay timer parameter of the associated virtual MAC6 address. You can set this parameter when you add the virtual MAC6 address, or you can modify an existing virtual MAC6 address.

To configure preemption delay time by using the CLI:

- To set the preemption delay time while adding a virtual MAC6, at the command prompt, type:
 - **add vrID6** <id> **-preemptiondelaytimer** <secs>
 - **show vrID6**
- To set the preemption delay time while modifying a virtual MAC6, at the command prompt, type:
 - **set vrID6** <id> **-preemptiondelaytimer** <secs>
 - **show vrID6**

To configure preemption delay time by using the GUI:

1. Navigate to **System > Network > VMAC**.

2. On the **VMAC6** tab. While adding a virtual MAC6 address, or editing an existing virtual MAC6 address, set the **Preemption Delay Timer** parameter.

Keeping a VIP Address in the Backup State

September 21, 2020

You can force a VIP address to always stay in backup state. This operation is helpful in maintenance or testing of a VRRP deployment.

When a VIP address is forced to stay in backup state, it does not participate in VRRP state transitions. Also, it cannot become master even if all other nodes go down.

To force a VIP address to stay in backup state, you set the priority of the associated virtual MAC address to zero. To ensure that none of the VIP addresses of a node handle traffic during a maintenance process on the node, set all the priorities to zero.

You can set the priority of a virtual MAC address while adding or modifying the address.

To force a VIP address to stay in the backup state by using the CLI:

- To set the priority while adding a virtual MAC, at the command prompt, type:
 - **add vrid <id> -priority 0**
 - **show vrid**
- To set the priority while modifying a virtual MAC, at the command prompt, type:
 - **set vrid <id> -priority 0**
 - **show vrid**

To force a VIP address to stay in backup state by using the GUI:

1. Navigate to **System > Network > VMAC**.
2. On the **VMAC** tab, while adding a new virtual MAC or editing an existing virtual MAC, set the **Priority** parameter to zero.

Network Visualizer

May 2, 2023

The network visualizer shows a graphical view of all the interfaces, channels, VLANs, IP addresses, and bindings to VLANs on a NetScaler appliance. An enabled interface or channel has a black label. A disabled interface or channel has a red label.

This complete picture of the appliance's network connections can be useful for detecting flaws in the network design and for optimizing the network. It can also help a new administrator easily understand the appliance's network configuration.

To open the Network Visualizer:

Navigate to **System > Network**. In **Monitor Connections**, click **Network Visualizer**.

Configuring Link Layer Discovery Protocol

May 2, 2023

The NetScaler supports the industry standard (IEEE 802.1AB) Link Layer Discovery Protocol (LLDP). LLDP is a layer 2 protocol that enables the NetScaler to advertise its identity and capabilities to the directly connected devices, and also learn the identity and capabilities of these neighbour devices.

Note:

Link Layer Discovery Protocol (LLDP) is supported only in NetScaler MPX platforms.

Using LLDP, the NetScaler transmits and receives information in the form of LLDP messages known as LLDP packet data units (LLDPUs). An LLDPDU is a sequence of type, length, value (TLV) information elements. Each TLV holds a specific type of information about the device that transmits the LLDPDU. The NetScaler sends the following TLVs in each LLDPDU:

- Chassis ID
- Port ID
- Time-to-live value
- System name
- System description
- Port description
- System capabilities
- Management address
- Port VLAN ID
- Link aggregation

Note: You cannot specify the TLVs to be sent in LLDP messages.

NetScaler interfaces support the following LLDP modes:

- **NONE.** The interface neither receives from nor transmits LLDP messages to the directly connected device.
- **TRANSMITTER.** The interface transmits LLDP messages to the directly connected device but does not receive LLDP messages from the directly connected device.
- **RECEIVER.** The interface receives LLDP messages from the directly connected device but does not transmit LLDP messages to the directly connected device.
- **TRANSCEIVER.** The interface transmits LLDP messages to and receives LLDP messages from the directly connected device.

The LLDP mode of an interface depends on the LLDP mode configured at the global and the interface levels. The following table shows the modes resulting from the available combinations of global- and interface-level settings: [Interface and global level LLDP modes](#).

Note the following points related to LLDP messages transmitted or received by the NetScaler:

- **Transmitting LLDP messages.** The NetScaler transmits LLDPUs from interfaces that are operating in either TRANSMITTER or TRANSCEIVER LLDP mode.

Following are the global LLDP transmitting parameters on the NetScaler:

- **Timer.** Interval, in seconds, between LLDPUs that the NetScaler sends to a directly connected device.
- **Holdtime Multiplier.** A multiplier for calculating the duration for which the receiving device stores the LLDP information in its database before discarding or removing it. The duration is calculated as the **Holdtime Multiplier** parameter value multiplied by the Timer parameter value.
- **Receiving LLDP Messages.** The NetScaler stores the LLDPDU information in its Management Information base (MIB). The stored LLDP information is classified or grouped under the ID of the interface that received the LLDPDU. The NetScaler retains this LLDP information for the duration specified in the received LLDPDU.

If the ADC receives another LLDPDU on an interface before the stored LLDP information for that interface is discarded, the ADC replaces the stored LLDP information for that interface with information in the new LLDPDU.

Configuration Steps

Configuring LLDP on a NetScaler appliance consists of the following tasks:

1. **Set global level LLDP parameters.** In this task, you set the global LLDP parameters such as LLDP Timer, Hold Time Multiplier, and LLDP mode.
2. **Set the interface level LLDP parameters.** In this task, you set the LLDP mode for an interface.

3. **(Optional) Display neighbor-device information.** You can display the neighbor-device LLDP information collected on all of the NetScaler's interfaces, or just the LLDP information collected on specified interfaces. If you do not specify an interface, the information is shown for all interfaces.

Following are the prerequisites for configuring LLDP on a NetScaler:

1. Make sure that you understand the standard LLDP protocol (IEEE 802.1AB).
2. Verify that you have configured LLDP on the desired directly connected devices.

CLI procedures

To set global level LLDP parameters by using the CLI:

At the command prompt, type:

- `set lldp param [-holdtimeTxMult <positive_integer>][-timer <positive_integer>] [-Mode <Mode>]`
- `show lldp param`

To configure an interface for LLDP by using the CLI:

At the command prompt, type:

- `set interface <id> -lldpmode <lldpmode>`
- `show interface <id>`

To display neighbor device information by using the CLI:

At the command prompt, type one of the following commands:

- `show lldp neighbors`
- `show lldp neighbors <ifnum>`

GUI procedures

To set the global level LLDP parameters by using the GUI:

1. Navigate to System > Network, and click Configure LLDP Parameters.
2. Set the following parameters:
 - Hold Timer Multiplier
 - Timer
 - Mode

To configure an interface for LLDP by using the GUI:

Navigate to System > Network > Interfaces, open the interface, and set the LLDP mode parameter.

To display neighbor device information by using the GUI:

Navigate to System > Network > Interfaces and, in the Action list, select View LLDP Neighbors.

LLDP Support in a Cluster Setup

In a cluster setup, the GUI and CLI display the LLDP neighbour configuration of all or specific cluster nodes when the GUI or CLI is accessed through the Cluster IP address (CLIP). Any change made to the global level LLDP mode is applied to the global level LLDP mode on each of the cluster nodes.

Consider an example of a cluster setup of three nodes, NS1, NS2, and NS3. Each of these nodes are connected to both routers Router-1 and Router-2. The following output is displayed when the **show lldp neighbor -summary** operation is performed on the Cluster CLI that is accessed through the Cluster IP address (CLIP) of the cluster setup. The output shows the LLDP neighbour information of all these nodes.

```

1 > show lldp neighbor -summary
2
3 Node Id: 1
4 -----
5      Interface      ChassisId          PortId      System name
6 -----
7 1      1/1/1          fe:c7:3b:13:bd:11  1/1         Router-1
8
9 2      1/1/2          12:68:7b:9e:4c:11  1/1         Router-2
10
11 Node Id: 2
12 -----
13      Interface      ChassisId          PortId      System name
14 -----
15 1      2/1/1          fe:c7:3b:13:bd:12  1/2         Router-1
16
17 2      2/1/2          12:68:7b:9e:4c:12  1/2         Router-2
18
19 Node Id: 3
20 -----
21      Interface      ChassisId          PortId      System name
22 -----
23
24 1      3/1/1          fe:c7:3b:13:bd:13  1/3         Router-1
25
26 2      3/1/2          12:68:7b:9e:4c:13  1/3         Router-2
27
28 Done

```

Jumbo Frames

May 2, 2023

NetScaler appliances support receiving and transmitting jumbo frames containing up to 9216 bytes of IP data. Jumbo frames can transfer large files more efficiently than it is possible with the standard IP MTU size of 1500 bytes.

A NetScaler appliance can use jumbo frames in the following deployment scenarios:

- Jumbo to Jumbo. The appliance receives data as jumbo frames and sends it as jumbo frames.
- Non-Jumbo to Jumbo. The appliance receives data as regular frames and sends it as jumbo frames.
- Jumbo to Non-Jumbo. The appliance receives data as jumbo frames and sends it as regular frames.

The NetScaler appliance supports jumbo frames in a load balancing configuration for the following protocols:

- TCP
- Any protocol over TCP (for example, HTTP)
- SIP
- RADIUS

Configuring Jumbo Frames Support on a NetScaler Appliance

May 2, 2023

To enable the NetScaler appliance to support jumbo frames, you set the MTU to more than 1500 on interfaces or LA channels, and on VLANs on which you want the NetScaler appliance to support jumbo frames.

Points to consider before setting the MTU of interfaces, LA channels, or VLANs on a NetScaler appliance

1. When you create an LA channel, the channel takes the MTU of the first bound interface if no MTU is specified for the channel.
2. The MTU for a channel is propagated to all the bound interfaces.
3. When an interface is bound to the channel whose MTU is different from the interface's MTU, the interface goes onto the inactive list.

4. When you change the MTU of a member interface, the interface goes onto the inactive list.
5. When an interface is unbound from the channel, the interface retains the MTU value of the channel.
6. You can set the MTU for an interface, channel, or VLAN to a value in the range of 1500-9216.
7. You cannot set the MTU on the default VLAN. The NetScaler appliance uses the MTU of the interface through which it receives or sends data from or to the default VLAN.
8. For TCP based traffic on a load balancing configuration on a NetScaler appliance, MSSs are set accordingly at each end point for supporting jumbo frames:
 - For a connection between a client and a load balancing virtual server on the NetScaler appliance, the MSS on the NetScaler appliance is set in a TCP profile, which is then bound to the load balancing virtual server.
 - For a connection between the NetScaler appliance and a server, the MSS on NS1 is set in a TCP profile, which is then bound to the service representing the server on the NetScaler appliance.
 - By default, a TCP profile `nstcp_default_profile` is bound to all TCP based load balancing servers and services on the NetScaler appliance.
 - For supporting jumbo frames, you can either change the MSS value of the TCP profile `nstcp_default_profile`, or create a custom TCP profile and set its MSS accordingly, and then bind the custom TCP profile to the desired load balancing virtual servers and services.
 - The default MSS value of any TCP profile is 1460.

CLI procedures

To set the MTU of an interface by using the CLI:

At the command prompt, type:

- `set interface <id> -mtu <positive_integer>`
- `show interface <id>`

Example:

```
1 > set interface 10/1 -mtu 9000
2 Done
```

To set the MTU of a channel by using the CLI:

At the command prompt, type:

- `set channel <id> -mtu <positive_integer>`
- `show channel <id>`

Example:

```
1 > set channel LA/1 - mtu 9000
2 Done
```

To set the MTU of a VLAN by using the CLI:

At the command prompt, type:

- add vlan <id> -mtu <positive_integer>
- show vlan <id>

Example:

```
1 > set vlan 20 - mtu 9000
2 Done
```

GUI procedures

To set the MTU of an interface by using the GUI:

Navigate to System > Network > Interfaces, open the interface, and set the Maximum Transmission Unit parameter.

To set the MTU of a channel by using the GUI:

Navigate to System > Network > Channels, open the channel, and set the Maximum Transmission Unit parameter.

To set the MTU of a VLAN by using the GUI:

Navigate to System > Network > VLANs, open the VLAN, and set the Maximum Transmission Unit parameter.

Use Case 1 –Jumbo to Jumbo Setup


May 2, 2023

Consider an example of a jumbo to jumbo setup in which SIP load balancing virtual server LBVS-1, configured on NetScaler appliance NS1, is used to load balance SIP traffic across servers S1 and S2. The connection between client CL1 and NS1, and the connection between NS1 and the servers support jumbo frames.

Interface 10/1 of NS1 receives or sends traffic from or to client CL1. Interface 10/2 of NS1 receives or sends traffic from or to server S1 or S2. Interfaces 10/1 and 10/2 of NS1 are part of VLAN 10 and VLAN 20, respectively.

For supporting jumbo frames, the MTU is set to 9216, on NS1, for interfaces 10/1, 10/2, and VLANs VLAN 10, VLAN 20.

All other network devices, including CL1, S1, S2, in this setup example are also configured for supporting jumbo frames.

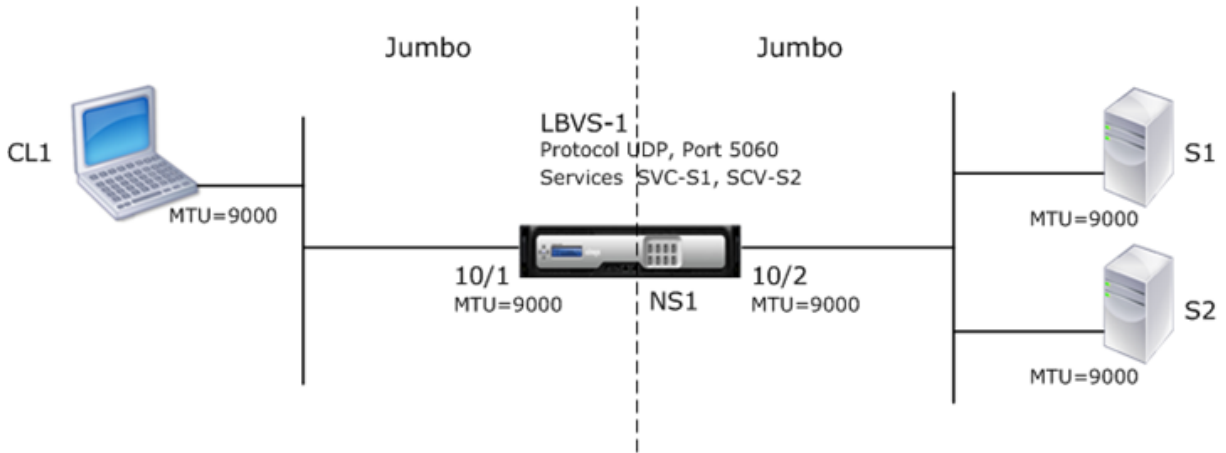

The following table lists the settings used in the example.

Entity	Name	Details
IP address of client CL1	-	192.0.2.10
IP address of servers	S1	198.51.100.19
	S2	
SNIP address on NS1		198.51.100.18
MTU specified for interfaces and VLANs on NS1	10/1	9000
	10/2	
	VLAN 10	
	VLAN 20	
Services on NS1 representing servers	SVC-S1	IP address: 198.51.100.19, Protocol: SIP, Port: 5060
	SVC-S2	
Load balancing virtual server on VLAN 10	LBVS-1	IP address: 203.0.113.15, Protocol: SIP, Port: 5060, Bound services: SVC-S1, SVC-S2

Following is the traffic flow of CL1's request to NS1:

1. CL1 creates a 20000-byte SIP request to send to LBVS-1 of NS1.
2. CL1 sends the request data in IP fragments to LBVS-1. The size of each IP fragment is either equal to or less than the MTU (9000) set on the interface from which CL1 sends these fragments to NS1.
 - Size of the first IP fragment = [IP header + UDP header + SIP data segment] = [20 + 8 + 8972] = 9000
 - Size of the second IP fragment = [IP header + SIP data segment] = [20 + 8980] = 9000
 - Size of the last IP fragment = [IP header + SIP data segment] = [20 + 2048] = 2068
3. NS1 receives the request IP fragments at interface 10/1. NS1 accepts these fragments, because the size of each of these fragments is equal to or less than the MTU (9000) of interface 10/1.
4. NS1 reassembles these IP fragments to form the 20000-byte SIP request. NS1 processes this request.
5. LBVS-1's load balancing algorithm selects server S1.
6. NS1 sends the request data in IP fragments to S1. The size of each IP fragment is either equal or less than the MTU (9000) of the interface 10/2, from which NS1 sends these fragments to S1. The IP packets are sourced with a SNIP address of NS1.
 - Size of the first IP fragment = [IP header + UDP header + SIP data segment] = [20 + 8 + 8972] = 9000
 - Size of the second IP fragment = [IP header + SIP data segment] = [20 + 8980] = 9000
 - Size of the last IP fragment = [IP header + SIP data segment] = [20 + 2048] = 2068

Following is the traffic flow of S1's response to CL1 in this example:

1. Server S1 creates a 30000-byte SIP response to send to the SNIP address of NS1.
2. S1 sends the response data in IP fragments to the SNIP address of NS1. The size of each IP fragment is either equal to or less than the MTU (9000) set on the interface from which S1 sends these fragments to NS1.
 - Size of the first IP fragment = [IP header + UDP header + SIP data segment] = [20 + 8 + 8972] = 9000
 - Size of the second and third IP fragment = [IP header + SIP data segment] = [20 + 8980] = 9000
 - Size of the last IP fragment = [IP header + SIP data segment] = [20 + 3068] = 3088
3. NS1 receives the response IP fragments at interface 10/2. NS1 accepts these fragments, because the size of each fragment is equal to or less than the MTU (9000) of interface 10/2.

4. NS1 reassembles these IP fragments to form the 30000-byte SIP response. NS1 processes this response.
5. NS1 sends the response data in IP fragments to CL1. The size of each IP fragment is either equal or less than the MTU (9000) of the interface 10/1, from which NS1 sends these fragments to CL1. The IP fragments are sourced with LBVS-1's IP address.
 - Size of the first IP fragment = [IP header + UDP header + SIP data segment] = [20 + 8 + 8972] = 9000
 - Size of the second and third IP fragment = [IP header + SIP data segment] = [20 + 8980] = 9000
 - Size of the last IP fragment=[IP header + SIP data segment] = [20 + 3068] = 3088

Configuration Tasks

The following table list the tasks, NetScaler commands, and examples for creating the required configuration on the NetScaler appliance.

Task	NetScaler Command Syntax	Example
Set the MTU of the desired interfaces for supporting jumbo frames	set interface -mtu , show interface	set int 10/1 -mtu 9000 set int 10/2 -mtu 9000
Create VLANs and set the MTU of the desired VLANs for supporting jumbo frames	add vlan -mtu , show vlan	add vlan 10 -mtu 9000 add vlan 20 -mtu 9000
Bind interfaces to VLANs	bind vlan -ifnum , show vlan	bind vlan 10 -ifnum 10/1 bind vlan 20 -ifnum 10/2
Add a SNIP address	add ns ip -type SNIP, show ns ip	add ns ip 198.51.100.18 255.255.255.0 -type SNIP
Create services representing SIP servers	add service SIP_UDP , show service	add service SVC-S1 198.51.100.19 SIP_UDP 5060 add service SVC-S2 198.51.100.20 SIP_UDP 5060
Create SIP load balancing virtual servers and bind the services to it	add lb vserver SIP_UDP bind lb vserver , show lb vserver	add lb vserver LBVS-1 SIP_UDP 203.0.113.15 5060 bind lb vserver LBVS-1 SVC-S1 bind lb vserver LBVS-1 SVC-S2
Save the configuration	save ns config, show ns config	

Use Case 2 –Non-Jumbo to Jumbo Setup

October 3, 2023

Consider an example of a regular to jumbo setup in which load balancing virtual server LBVS-1, configured on a NetScaler appliance NS1, is used to load balance traffic across servers S1 and S2. The connection between client CL1 and NS1 supports regular frames, and the connection between NS1 and the servers supports jumbo frames.


Interface 10/1 of NS1 receives or sends traffic from or to client CL1. Interface 10/2 of NS1 receives or sends traffic from or to server S1 or S2.

Interfaces 10/1 and 10/2 of NS1 are part of VLAN 10 and VLAN 20, respectively. For supporting only regular frames between CL1 and NS1, the MTU is set to the default value of 1500 for both interface 10/1 and VLAN 10

For supporting jumbo frames between NS1 and the servers, the MTU is set to 9000 for interface 10/2 and VLAN 20. Servers and all other network devices between NS1 and the servers are also configured for supporting jumbo frames.

Since HTTP traffic is based on TCP, MSSs are set accordingly at each end point for supporting jumbo frames.

- For supporting jumbo frames for the connection between a SNIP address of NS1 and S1 or S2, the MSS on NS1 is set accordingly in a custom TCP profile, which is bound to the services (SVC-S1 and SVC-S1) representing S1 and S2 on NS1.
- For supporting only regular frames for the connection between CL1 and virtual server LBVS-1 of NS1, default TCP profile nstcp_default_profile is used that is by default bound to LBVS-1 and has the MSS set to the default value of 1460.

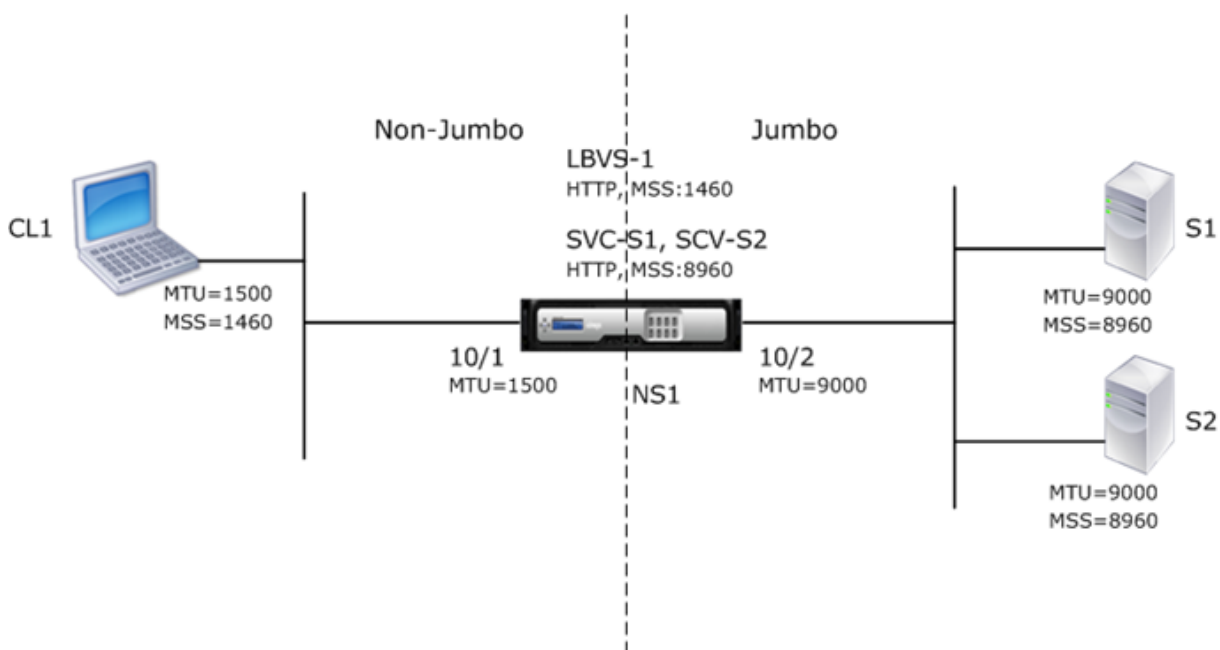

The following table lists the settings used in this example.

Entity	Name	Details
IP address of client CL1		192.0.2.10
IP address of servers	S1	198.51.100.19
	S2	
SNIP address on NS1		198.51.100.18
MTU specified for interfaces and VLANs on NS1	10/1	1500
	10/2	
	VLAN 10	
	VLAN 20	
Default TCP profile	nstcp_default_profile	MSS:1460
Custom TCP profile	NS1-SERVERS-JUMBO	MSS: 8960
Services on NS1 representing servers	SVC-S1	IP address: 198.51.100.19, Protocol: HTTP, Port: 80, TCP profile: NS1-SERVERS-JUMBO (MSS: 8960)
	SVC-S2	

Entity	Name	Details
Load balancing virtual server on VLAN 10	LBVS-1	IP address = 203.0.113.15, Protocol: HTTP, Port:80, Bound services: SVC-S1, SVC-S2, TCP Profile: nstcp_default_profile (MSS:1460)

Following is the traffic flow of CL1's request to S1 in this example:

1. Client CL1 creates a 200-byte HTTP request to send to virtual server LBVS-1 of NS1.
2. CL1 opens a connection to LBVS-1 of NS1. CL1 and NS1 exchange their respective TCP MSS values while establishing the connection.
3. Because NS1's MSS is larger than the HTTP request, CL1 sends the request data in a single IP packet to NS1.

$$\text{Size of the request packet} = [\text{IP Header} + \text{TCP Header} + \text{TCP Request}] = [20 + 20 + 200] = 240$$

4. NS1 receives the request packet at interface 10/1 and then processes the HTTP request data in the packet.
5. LBVS-1's load balancing algorithm selects server S1, and NS1 opens a connection between one of its SNIP addresses and S1. NS1 and CL1 exchange their respective TCP MSS values while establishing the connection.
6. Because S1's MSS is larger than the HTTP request, NS1 sends the request data in a single IP packet to S1.

$$\text{Size of the request packet} = [\text{IP Header} + \text{TCP Header} + [\text{TCP Request}]] = [20 + 20 + 200] = 240$$

Following is the traffic flow of S1's response to CL1 in this example:

1. Server S1 creates an 18000-byte HTTP response to send to the SNIP address of NS1.
2. S1 segments the response data into multiples of NS1's MSS and sends these segments in IP packets to NS1. These IP packets are sourced from S1's IP address and destined to the SNIP address of NS1.

- Size of the first two packet = $[\text{IP Header} + \text{TCP Header} + (\text{TCP segment} = \text{NS1's MSS size})] = [20 + 20 + 8960] = 9000$

- Size of the last packet = $[\text{IP Header} + \text{TCP Header} + (\text{remaining TCP segment})] = [20 + 20 + 80] = 120$

3. NS1 receives the response packets at interface 10/2.

4. From these IP packets, NS1 assembles all the TCP segments to form the HTTP response data of 18000 bytes. NS1 processes this response.
5. NS1 segments the response data into multiples of CL1's MSS and sends these segments in IP packets, from interface 10/1, to CL1. These IP packets are sourced from LBVS-1's IP address and destined to CL1's IP address.
 - Size of all packets except the last one = [IP Header + TCP Header + (TCP payload=CL1's MSS size)] = [20 + 20 + 1460] = 1500
 - Size of the last packet = [IP Header + TCP Header + (remaining TCP segment)] = [20 + 20 + 480] = 520

Configuration Tasks

The following table lists the tasks, NetScaler commands, and examples for creating the required configuration on the NetScaler appliance.

Tasks	CLI Syntax	Examples
Set the MTU of the desired interfaces for supporting jumbo frames	set interface -mtu , show interface	set int 10/1 -mtu 1500 set int 10/2 -mtu 9000
Create VLANs and set the MTU of the desired VLANs for supporting jumbo frames	add vlan -mtu , show vlan	add vlan 10 -mtu 1500 add vlan 20 -mtu 9000
Bind interfaces to VLANs	bind vlan -ifnum , show vlan	bind vlan 10 -ifnum 10/1 bind vlan 20 -ifnum 10/2
Add a SNIP address	add ns ip -type SNIP, show ns ip	add ns ip 198.51.100.18 255.255.255.0 -type SNIP
Create services representing HTTP servers	add service HTTP , show service	add service SVC-S1 198.51.100.19 http 80, add service SVC-S2 198.51.100.20 http 80
Create HTTP load balancing virtual servers and bind the services to it	add lb vserver HTTP , bind lb vserver , show lb vserver	add lb vserver LBVS-1 http 203.0.113.15 80, bind lb vserver LBVS-1 SVC-S1, bind lb vserver LBVS-1 SVC-S2
Create a custom TCP profile and set its MSS for supporting jumbo frames	add tcpProfile -mss , show tcpProfile	add tcpprofile NS1-SERVERS-JUMBO -mss 8960

Tasks	CLI Syntax	Examples
Bind the custom TCP profile to the desired services	set service -tcpProfileName , show service	set service SVC-S1 -tcpProfileName NS1-SERVERS-JUMBO, set service SVC-S2 -tcpProfileName NS1-SERVERS-JUMBO
Save the configuration	save ns config, show ns config	

Use Case 3 –Coexistence of Jumbo and Non-Jumbo flows on the Same Set of Interfaces

May 2, 2023

Consider an example in which load balancing virtual servers LBVS-1 and LBVS-2 are configured on NetScaler appliance NS1. LBVS-1 is used to load balance HTTP traffic across servers S1 and S2, and LBVS-2 is used to load balance traffic across servers S3 and S4.

CL1 is on VLAN 10, S1 and S2 are on VLAN20, CL2 is on VLAN 30, and S3 and S4 are on VLAN 40. VLAN 10 and VLAN 20 support jumbo frames, and VLAN 30 and VLAN 40 support only regular frames.

In other words, the connection between CL1 and NS1, and the connection between NS1 and server S1 or S2 support jumbo frames. The connection between CL2 and NS1, and the connection between NS1 and server S3 or S4 support only regular frames.

Interface 10/1 of NS1 receives or sends traffic from or to clients. Interface 10/2 of NS1 receives or sends traffic from or to the servers.

Interface 10/1 is bound to both VLAN 10 and VLAN 30 as a tagged interface, and interface 10/2 is bound to both VLAN 20 and VLAN 40 as a tagged interface.

For supporting jumbo frames, the MTU is set to 9216 for interfaces 10/1 and 10/2.

On NS1, the MTU is set to 9000 for VLAN 10 and VLAN 20 for supporting jumbo frames, and the MTU is set to the default value of 1500 for VLAN 30 and VLAN 40 for supporting only regular frames.

The effective MTU on a NetScaler interface for VLAN tagged packets is of the MTU of the interface or the MTU of the VLAN, whichever is lower. For example:


- The MTU of interface 10/1 is 9216. The MTU of VLAN 10 is 9000. On interface 10/1, the MTU of VLAN 10 tagged packets is 9000.

- The MTU of interface 10/2 is 9216. The MTU of VLAN 20 is 9000. On interface 10/2, the MTU of VLAN 20 tagged packets is 9000.
- The MTU of interface 10/1 is 9216. The MTU of VLAN 30 is 1500. On interface 10/1, the MTU of VLAN 30 tagged packets is 1500.
- The MTU of interface 10/2 is 9216. The MTU of VLAN 40 is 1500. On interface 10/2, the MTU of VLAN 40 tagged packets is 9000.

CL1, S1, S2, and all network devices between CL1 and S1 or S2 are configured for jumbo frames.

Since HTTP traffic is based on TCP, MSSs are set accordingly at each end point for supporting jumbo frames.

- For the connection between CL1 and virtual server LBVS-1 of NS1, the MSS on NS1 is set in a TCP profile, which is then bound to LBVS-1.
- For the connection between a SNIP address of NS1 and S1, the MSS on NS1 is set in a TCP profile, which is then bound to the service (SVC-S1) representing S1 on NS1.

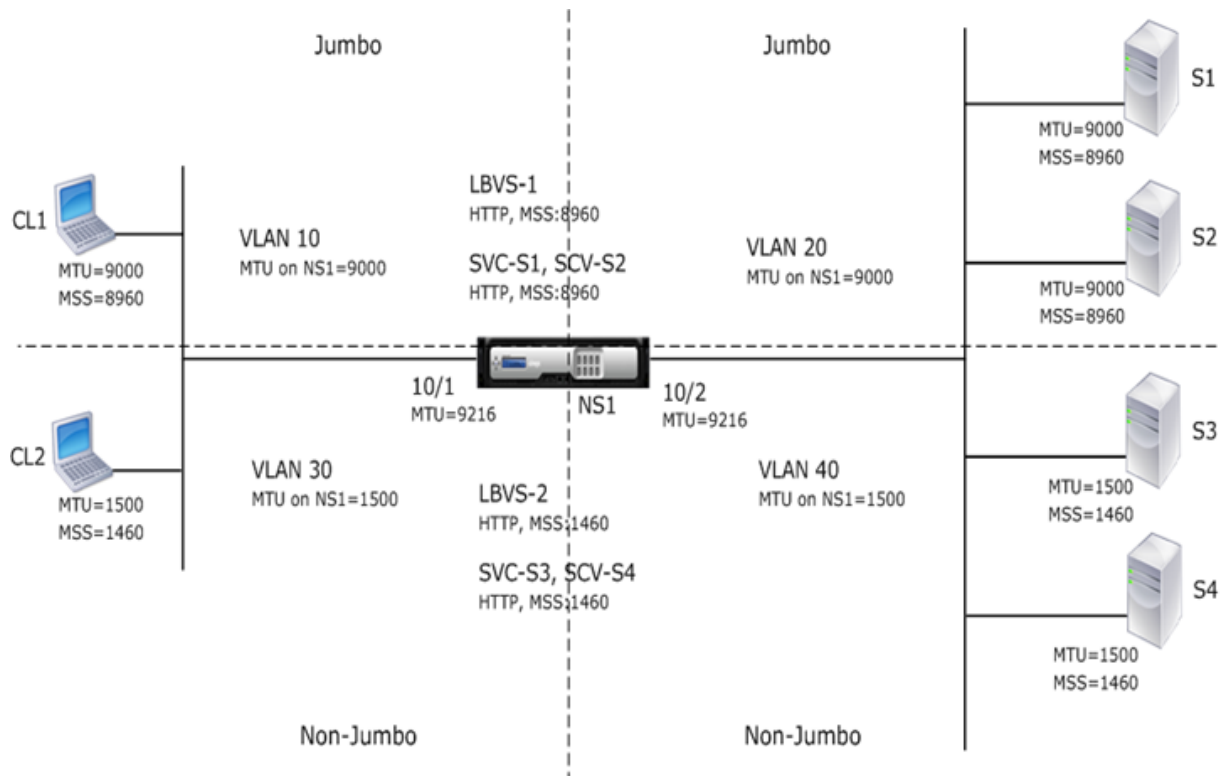

The following table lists the settings used in this example: [Jumbo frames use case 3 example settings](#).

Following is the traffic flow of CL1's request to S1:

1. Client CL1 creates a 20000-byte HTTP request to send to virtual server LBVS-1 of NS1.
2. CL1 opens a connection to LBVS-1 of NS1. CL1 and NS1 exchange their TCP MSS values while establishing the connection.

3. Because NS1's MSS value is smaller than the HTTP request, CL1 segments the request data into multiples of NS1's MSS and sends these segments in IP packets tagged as VLAN 10 to NS1.
 - Size of the first two packets = [IP Header + TCP Header + (TCP segment=NS1 MSS)] = [20 + 20 + 8960] = 9000
 - Size of the last packet = [IP Header + TCP Header + (remaining TCP segment)] = [20 + 20 + 2080] = 2120
4. NS1 receives these packets at interface 10/1. NS1 accepts these packets because the size of these packets is equal to or less than the effective MTU (9000) of interface 10/1 for VLAN 10 tagged packets.
5. From the IP packets, NS1 assembles all the TCP segments to form the 20000-byte HTTP request. NS1 processes this request.
6. LBVS-1's load balancing algorithm selects server S1, and NS1 opens a connection between one of its SNIP addresses and S1. NS1 and CL1 exchange their respective TCP MSS values while establishing the connection.
7. NS1 segments the request data into multiples of S1's MSS and sends these segments in IP packets tagged as VLAN 20 to S1.
 - Size of the first two packets = [IP Header + TCP Header + (TCP payload=S1 MSS)] = [20 + 20 + 8960] = 9000
 - Size of the last packet = [IP Header + TCP Header + (remaining TCP segment)] = [20 + 20 + 2080] = 2120

Following is the traffic flow of S1's response to CL1:

1. Server S1 creates a 30000-byte HTTP response to send to the SNIP address of NS1.
2. S1 segments the response data into multiples of NS1's MSS and sends these segments in IP packets tagged as VLAN 20 to NS1. These IP packets are sourced from S1's IP address and destined to the SNIP address of NS1.
 - Size of first three packet = [IP Header + TCP Header + (TCP segment=NS1's MSS size)] = [20 + 20 + 8960] = 9000
 - Size of the last packet = [IP Header + TCP Header + (remaining TCP segment)] = [20 + 20 + 3120] = 3160
3. NS1 receives the response packets at interface 10/2. NS1 accepts these packets, because their size is equal to or less than the effective MTU value (9000) of interface 10/2 for VLAN 20 tagged packets.
4. From these IP packets, NS1 assembles all the TCP segments to form the 30000-byte HTTP response. NS1 processes this response.
5. NS1 segments the response data into multiples of CL1's MSS and sends these segments in IP packets tagged as VLAN 10, from interface 10/1, to CL1. These IP packets are sourced from LBVS's IP address and destined to CL1's IP address.

- Size of first three packet = [IP Header + TCP Header + [(TCP payload=CL1's MSS size)] = [20 + 20 + 8960] = 9000
- Size of the last packet = [IP Header + TCP Header + (remaining TCP segment)] = [20 + 20 + 3120] = 3160

Configuration Tasks

Following table lists tasks, commands, and examples for creating the required configuration on the NetScaler appliance: [Jumbo frames use case 3 configuration tasks](#).

NetScaler Support for Microsoft Direct Access Deployment

May 2, 2023

Microsoft Direct Access is a technology that enables remote users to seamlessly and securely connect to the enterprise's internal networks, without the need to establish a separate VPN connection. Unlike VPN connections, which require user intervention to open and close connections, a Direct Access-enabled client connects automatically to the enterprise's internal networks whenever the client connects to the Internet.

Manage-Out is a Microsoft Direct Access feature that allows administrators inside the enterprise network to connect to Direct Access clients outside the network and manage them (for example, performing administration tasks, such as scheduling service updates, and providing remote support).

In a Direct Access deployment, NetScaler appliances provide high availability, scalability, high performance, and security. NetScaler load balancing functionality sends client traffic through the most appropriate server. The appliances can also forward Manage-Out traffic through the right path to reach the client.


Architecture

The architecture of a Microsoft Direct Access deployment consists of Direct Access enabled clients, Direct Access servers, application servers, and internal and external NetScaler appliances. Clients connect to an application server through a Direct Access server. An external NetScaler appliance load balance the client traffic to a Direct Access server, and an Internal NetScaler appliance forwards the client traffic from the Direct Access server to the destination application server. Direct Access is used for tunneling the client's IPv6 traffic over the IPv4 network. An IPv4 load balancing virtual server on the external NetScaler appliance load balances the client's tunneled traffic to one of the Direct Access servers. The Direct Access server extracts the IPv6 packets from the received client's IPv4 packets

and sends them to the destination application server through the internal NetScaler appliance. The Internal NetScaler appliance has forwarding session rules with the source route cache option enabled for storing Layer 2 and Layer 3 connection information about the client's traffic from the Direct Access Server. The NetScaler appliance stores the following Layer 2 and Layer 3 information in a table called the source route cache table:

- Source IP address of the received packet
- MAC address of the Direct Access server that sent the packet
- VLAN ID of the NetScaler appliance that received the packet
- Interface ID of the NetScaler appliance that received the packet

The NetScaler appliance uses the information in the source route cache table for forwarding a response to the same Direct Access server because it has the tunneling information to reach the client. Also, the Internal appliance uses the source route cache table to forward application server's Manage-out traffic to the appropriate Direct Access server to reach a particular client.

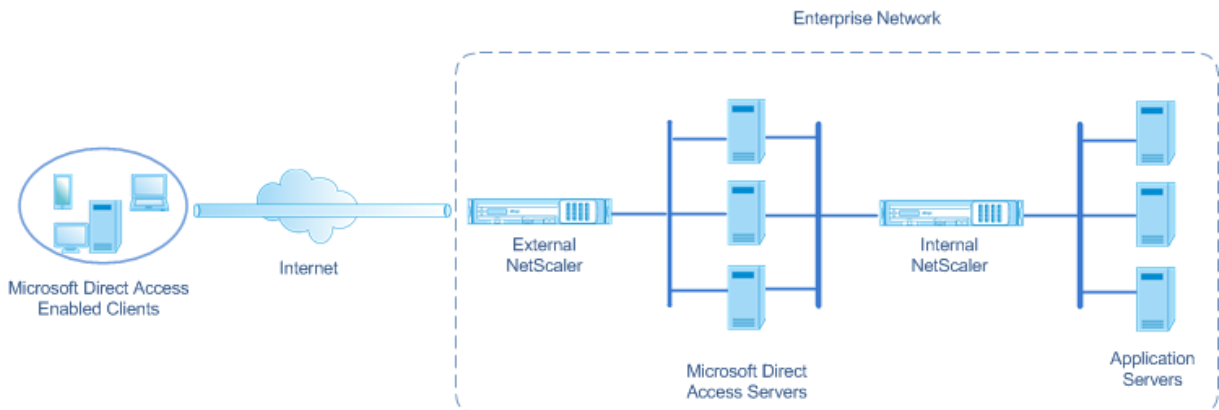

Configuring the Internal NetScaler Appliance in a Microsoft Direct Access Deployment

To configure the Internal NetScaler appliance for forwarding an application server's response and manage-out traffic to the appropriate Direct Access Gateway, configure forwarding session rules. In each rule, set the `sourceroutecache` parameter to `ENABLED`.

To create a forwarding session rule by using the CLI:

At the command prompt, type:

- `add forwardingSession <name> ((<network> [<netmask>]) | -acl6name <string> | -aclname <string>) -sourceroutecache (ENABLED | DISABLED)`
- **show forwardingSession** <name>

Sample configuration:

In the following example, forwarding-session rule MS-DA-FW-1 is created on the internal NetScaler appliance. The forwarding session stores Layer 2 and Layer 3 information for any incoming IPv6 packets from a Direct Access server that matches source IPv6 prefix 2001:DB8::/96.

```
1 > add forwardingSession MS-DA-FW-1 2001:DB8::/96 -sourceroutecache -
    ENABLED
2 Done
```

Displaying the Source Route Cache Table

You can display the source route cache table for monitoring or detecting any unwanted connections between direct access servers and application servers.

To display the source route cache table by using the CLI:

At the command prompt, type:

- **show sourceroutecachetable**

Example:

```
1 > show sourceroutecachetable
2 SOURCEIP          MAC          VLAN    INTERFACE
3 2001:DB8:5001:10   56:53:24:3d:02:eb  30      1/2
4 2001:DB8:5003:30   60:54:35:3e:04:bd  60      1/3
5 Done
```

Clearing the Source Route Cache Table

You can clear all the entries from the source route cache table on a NetScaler appliance.

To clear the source route cache table by using the CLI:

At the command prompt, type:

- **flush ns sourceroutecachetable**

Access Control Lists

May 2, 2023

Access Control Lists (ACLs) filter IP traffic and secure your network from unauthorized access. An ACL is a set of conditions that the NetScaler evaluates to determine whether to allow access. For example, the Finance department probably does not want to allow its resources to be accessed by other

departments, such as HR and Documentation, and those departments want to restrict access to their data.

When the NetScaler receives a data packet, it compares the information in the data packet with the conditions specified in the ACL and allows or denies access. The administrator of the organization can configure ACLs to function in the following processing modes:

- **ALLOW**—Process the packet.
- **BRIDGE**—Bridge the packet to the destination without processing it. The packet is directly sent by Layer 2 and Layer 3 forwarding.
- **DENY**—Drop the packet.

ACL rules are the first level of defense on the NetScaler.

NetScaler supports the following types of ACLs:

- **Simple ACLs** filter packets based on their source IP address and, optionally, their protocol, destination port, or traffic domain. Any packet that has the characteristics specified in the ACL is dropped.
- **Extended ACLs** filter data packets based on various parameters, such as source IP address, source port, action, and protocol. An extended ACL defines the conditions that a packet must satisfy for the NetScaler to process the packet, bridge the packet, or drop the packet.

Nomenclature


In the NetScaler user interfaces, the terms simple ACL and extended ACL refer to ACLs that process IPv4 packets. An ACL that processes IPv6 packets is called a simple ACL6 and or extended ACL6. When discussing both types, this documentation sometimes refers to both of them as simple ACLs or extended ACLs.

ACL Precedence

If both simple and extended ACLs are configured, incoming packets are compared to the simple ACLs first.

The NetScaler first determines whether the incoming packet is an IPv4 or an IPv6 packet, and then compares the packet's characteristics to either simple ACLs or simple ACL6s. If a match is found, the packet is dropped. If no match is found, the packet is compared to extended ACLs or extended ACL6s. If that comparison results in a match, the packet is handled as specified in the ACL. The packet can be bridged, dropped, or allowed. If no match is found, the packet is allowed.

Figure 1. Simple and Extended ACLs Flow Sequence

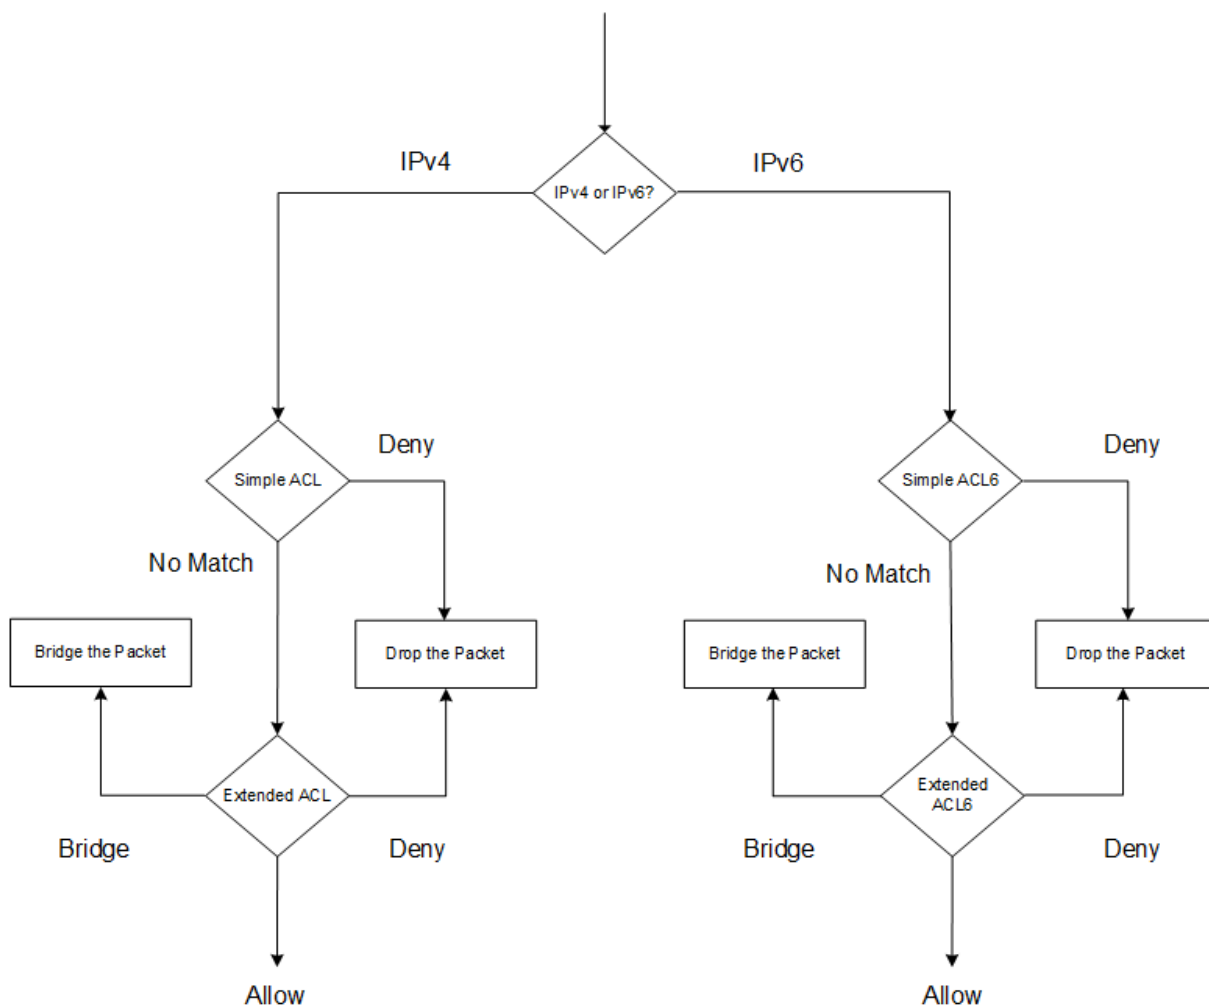

Simple ACLs and Simple ACL6s

May 2, 2023

A simple ACL or simple ACL6 uses few parameters and can be configured only to drop IP packets. Packets can be dropped based on their source IP address and, optionally, their protocol, destination port, or traffic domain.

When creating a simple ACL or simple ACL6, you can specify a time to live (TTL), in seconds, after which the ACL expires. ACLs with TTLs are not saved when you save the configuration. You can display simple ACLs and simple ACL6s to verify their configuration, and you can display their statistics.

Configuring Simple ACLs and Simple ACL6s

Configuring a simple ACL or simple ACL6 on a NetScaler can include the following tasks.

- **Create simple ACLs or simple ACL6s.** Creating simple ACLs or simple ACL6s to drop (deny) packets based on their source IP address and, optionally, their protocol, destination port, or traffic domain.
- **Remove simple ACLs or simple ACL6s.** These ACLs cannot be modified once created. If you must modify a simple ACL or simple ACL6, you must remove it and create a one.

CLI procedures

To create a simple ACL by using the CLI:

At the command prompt, type:

```
1 - ns simpleacl <aclname> DENY -srcIP <ip_addr> [-destPort <port> -  
    protocol ( TCP | UDP )] [-TTL \<positive_integer>]  
2 - show ns simpleacl [\<aclname>]
```

Example:

```
1 > add simpleacl rule1 DENY -srcIP 10.102.29.5 -TTL 600  
2 Done
```

To create a simple ACL6 by using the CLI:

At the command prompt, type:

```
1 - add ns simpleacl6 <aclname> DENY - srcIPv6 <ipv6_addr|null> [-  
    destPort <port> -protocol ( TCP | UDP )] [-TTL <positive_integer>]  
2 - show ns simpleacl6 [<aclname>]
```

Example:

```
1 > add ns simpleacl6 rule1 DENY - srcIPv6 3ffe:192:168:215::82 -  
    destPort 80 -Protocol TCP -TTL 9000  
2 Done
```

To remove a single simple ACL by using the CLI:

At the command prompt, type:

- **rm ns simpleacl** <aclname>
- **show ns simpleacl**

To remove a single simple ACL6 by using the CLI:

At the command prompt, type:

- **rm ns simpleacl6**<aclname>
- **show ns simpleacl6**

To remove all simple ACLs by using the CLI:

At the command prompt, type:

- **clear ns simpleacl**
- **show ns simpleacl**

To remove all simple ACL6s by using the CLI:

At the command prompt, type:

- **clear ns simpleacl6**
- **show ns simpleacl6**

GUI procedures

To create a simple ACL by using the GUI:

Navigate to **System > Network > ACLs** and, on the **Simple ACLs** tab, add a new simple ACL.

To create a simple ACL6 by using the GUI:

Navigate to **System > Network > ACLs** and, on the **Simple ACL6s** tab, add a new simple ACL6.

To remove a single simple ACL by using the GUI:

Navigate to **System > Network > ACLs** and, on the **Simple ACLs** tab, delete the simple ACL.

To remove a single simple ACL6 by using the GUI:

Navigate to **System > Network > ACLs** and, on the **Simple ACL6s** tab, delete the simple ACL6.

To remove all simple ACLs by using the GUI:

1. Navigate to **System > Network > ACLs**.
2. On the **Simple ACLs** tab, in the **Action** list, click **Clear**.

To remove all simple ACL6s by using the GUI:

1. Navigate to **System > Network > ACLs**.
2. On the **Simple ACL6s** tab, in the **Action** list, click **Clear**.

Displaying Simple ACL and Simple ACL6 Statistics

You can display the simple ACL (or simple ACL6) statistics, which include the number of matches, the number of misses, and the number of simple ACLs configured.

The following table describes the statistics you can display for simple ACLs and simple ACL6s.

Statistics	Indicates
ACL match	Packets matching an ACL
ACL misses	Packets not matching any ACL
ACL count	Number of ACLs configured

CLI procedures

To display simple ACL statistics by using the CLI:

At the command prompt, type:

- **stat ns simpleacl**

Example:

```

1 > stat ns simpleacl
2
3 SimpleACL Statistics
4
5                                     Rate (/s)
6 SimpleACL hits                       Total
7 SimpleACL misses                       0
   51872
8 SimpleACLs count                       --
9 Done                                   2

```

To display simple ACL6 statistics by using the CLI:

At the command prompt, type:

- **stat ns simpleacl6**

GUI procedures

To display simple ACL statistics by using the GUI:

Navigate to **System > Network > ACLs** and, on the **Simple ACLs** tab, select the ACL and click **Statistics**.

To display simple ACL6 statistics by using the GUI:

Navigate to **System > Network > ACLs** and, on the **Simple ACL6s** tab, select the simple ACL6 and click **Statistics**.

Terminating Established Connections

For a simple ACL or simple ACL6, the NetScaler blocks any new connections that match the conditions specified in the ACL. Packets related to existing connections that were established before the ACL was created are not blocked. To terminate previously established connections that match an existing ACL, you can run a flush operation from the CLI or the GUI.

Flush can be useful in the following cases:

- You receive a list of blacklisted IP addresses and want to completely block those IP addresses from accessing the NetScaler. In this case, you create simple ACLs or simple ACL6s to block any new connections from these IP addresses, and then flush any existing connections associated with those addresses.
- You want to terminate many connections from a particular network without taking the time to terminate them one by one.

Before you begin

- When you run flush, the NetScaler searches through all of its established connections and terminates the connections that match the conditions specified in any of the simple ACLs configured on the ADC.
- If you plan to create more than one simple ACL and flush existing connections that match any of them, you can minimize the effect on performance by first creating all simple ACLs and then running flush only once.

CLI procedures

To terminate all established IPv4 connections that match any of your configured simple ACLs by using the CLI:

At the command prompt, type:

- **flush simpleacl -estSessions**

To terminate all established IPv6 connections that match any of your configured simple ACL6s by using the CLI:

At the command prompt, type:

- **flush simpleacl6 -estSessions**

GUI procedures

To terminate all established IPv4 connections that match any of your configured simple ACLs by using the GUI:

1. Navigate to **System > Network > ACLs**.
2. On the **Simple ACLs** tab, in the **Action** list, click **Flush**.

To terminate all established IPv6 connections that match any of your configured simple ACL6s by using the GUI:

1. Navigate to **System > Network > ACLs**.
2. On the **Simple ACL6s** tab, in the **Action** list, click **Flush**.

Extended ACLs and Extended ACL6s

August 16, 2024

Extended ACLs and extended ACL6s provide parameters and actions not available with simple ACLs. You can filter data based on parameters such as source IP address, source port, action, and protocol. You can specify tasks to allow a packet, deny a packet, or bridge a packet.

Extended ACLs and ACL6s can be modified after they are created, and you can renumber their priorities to specify the order in which they are evaluated.

Note: If you configure both simple and extended ACLs, simple ACLs take precedence over extended ACLs.

The following actions can be performed on extended ACLs and ACL6s: Modify, Apply, Disable, Enable, Remove, and Renumber (the priority). You can display extended ACLs and ACL6s to verify their configuration, and you can display their statistics.

You can configure the NetScaler to log details for packets that match an extended ACL.

Applying Extended ACLs and Extended ACL6s: Unlike simple ACLs and ACL6s, extended ACLs and ACL6s created on the NetScaler do not work until they are applied. Also, if you make any changes to an extended ACL or ACL6, such as disabling the ACLs, changing a priority, or deleting the ACLs, you must

reapply the extended ACLs or ACL6s. You must reapply them after enabling logging. The procedure to apply extended ACLs or ACL6s reapplies all of them. For example, if you have applied extended ACL rules 1 through 10, and you then create and apply rule 11, the first 10 rules are applied afresh.

If a session has a DENY ACL related to it, that session is terminated when you apply the ACLs.

Extended ACLs and ACL6s are enabled by default. When they are applied, the NetScaler starts comparing incoming packets against them. However, if you disable them, they are not used until you reenable them, even if they are reapplied.

Renumbering the priorities of Extended ACLs and Extended ACL6s: Priority numbers determine the order in which extended ACLs or ACL6s are matched against a packet. An ACL with a lower priority number has a higher priority. It is evaluated before ACLs with higher priority numbers (lower priorities), and the first ACL to match the packet determines the action applied to the packet.

When you create an extended ACL or ACL6, the NetScaler automatically assigns it a priority number that is a multiple of 10, unless you specify otherwise. For example, if two extended ACLs have priorities of 20 and 30, respectively, and you want a third ACL to have a value between those numbers, you might assign it a value of 25. If you later want to retain the order in which the ACLs are evaluated but restore their numbering to multiples of 10, you can use the renumber procedure.

Configuring Extended ACLs and Extended ACL6s

Configuring an extended ACL or ACL6 on a NetScaler consists of the following tasks.

- **Create an extended ACL or ACL6.** Create an extended ACL or ACL6 to either allow, deny, or bridge a packet. You can specify an IP address or range of IP addresses to match against the source or destination IP addresses of the packets. You can specify a protocol to match against the protocol of incoming packets.
- (Optional) **Modify an extended ACL or ACL6.** You can modify extended ACLs or ACL6s that you previously created. Or, if you want to temporarily take one out of use you can disable it, and later reenable it.
- **Apply extended ACLs or ACL6s.** After you create, modify, disable or reenable, or delete an extended ACL or ACL6, you must apply the extended ACLs or ACL6s to activate them.
- (Optional) **Renumber the priorities of extended ACLs or ACL6s.** If you have configured ACLs with priorities that are not multiples of 10 and want to restore the numbering to multiples of 10, use the renumber procedure.

CLI procedures

To create an extended ACL by using the CLI:

At the command prompt, type:

- **add ns acl** <aclname> <aclaction> [-**srcIP** [<operator>] <srcIPVal>] [-**srcPort** [<operator>] <srcPortVal>] [-**destIP** [<operator>] <destIPVal>] [-**destPort** [<operator>] <destPortVal>] [-**TTL** <positive_integer>] [-**srcMac** <mac_addr>] [(**protocol** <protocol> [-established]) | **protocolNumber** <positive_integer>] [-**vlan** <positive_integer>] [-**interface** <interface_name>] [-**icmpType** <positive_integer>] [-**icmpCode** <positive_integer>]] [-**priority** <positive_integer>] [-**state** (ENABLED | DISABLED)] [-**logstate** (ENABLED | DISABLED)] [-**ratelimit** <positive_integer>]]
- **show ns acl** [<aclName>]

To create an extended ACL6 by using the CLI:

At the command prompt, type:

- **add ns acl6** <acl6name> <acl6action> [-**srcIPv6** [<operator>] <srcIPv6Val>] [-**srcPort** [<operator>] <srcPortVal>] [-**destIPv6** [<operator>] <destIPv6Val>] [-**destPort** [<operator>] <destPortVal>] [-**TTL** <positive_integer>] [-**srcMac** <mac_addr>] [(**protocol** <protocol> [-established]) | **protocolNumber** <positive_integer>] [-**vlan** <positive_integer>] [-**interface** <interface_name>] [-**icmpType** <positive_integer>] [-**icmpCode** <positive_integer>]] [-**priority** <positive_integer>] [-**state** (ENABLED | DISABLED)]
- **show ns acl6** [<aclName>]

To modify an extended ACL by using the CLI:

To modify an extended ACL, type the **set ns acl** command, the name of the extended ACL, and the parameters to be changed, with their new values.

To modify an extended ACL6 by using the CLI:

To modify an extended ACL6, type the **set ns acl6** command, the name of the extended ACL6, and the parameters to be changed, with their new values.

To disable or enable an extended ACL by using the CLI:

At the command prompt, type one of the following commands:

- **disable ns acl** <aclname>
- **enable ns acl** <aclname>

To disable or enable an extended ACL6 by using the CLI:

At the command prompt, type one of the following commands:

- **disable ns acl6** <aclname>
- **enable ns acl6** <aclname>

To apply extended ACLs by using the CLI:

At the command prompt, type:

- **apply ns acls**

To apply extended ACL6s by using the CLI:

At the command prompt, type:

- **apply ns acls6**

To renumber the priorities of extended ACLs by using the CLI:

At the command prompt, type:

- **renumber ns acls**

To renumber the priorities of extended ACL6s by using the CLI:

At the command prompt, type:

- **renumber ns acls6**

GUI procedures

To configure an extended ACL by using the GUI:

- Navigate to **System > Network > ACLs** and, on the **Extended ACLs** tab, add a new extended ACL or edit an existing extended ACL. To enable or disable an existing extended ACL, select it, and then select **Enable** or **Disable** from the **Action** list.

To configure an extended ACL6s by using the GUI:

- Navigate to **System > Network > ACLs** and, on the **Extended ACL6s** tab, add a new extended ACL6 or edit an existing extended ACL6. To enable or disable an existing extended ACL6, select it, and then select **Enable** or **Disable** from the **Action** list.

To apply extended ACLs by using the GUI:

- Navigate to **System > Network > ACLs** and, on the **Extended ACLs** tab, in the **Action** list, click **Apply**.

To apply extended ACL6s by using the GUI:

- Navigate to **System > Network > ACLs** and, on the **Extended ACL6s** tab, in the **Action** list, click **Apply**.

To renumber the priorities of extended ACLs by using the GUI:

- Navigate to **System > Network > ACLs** and, on the **Extended ACLs** tab, in the **Action** list, click **Renumber Priority (s)**.

To renumber the priorities of extended ACL6s by using the GUI:

- Navigate to **System > Network > ACLs** and, on the **Extended ACL6s** tab, in the **Action** list, click **Renumber Priority (s)**.

Sample Configurations

The following table shows examples of configuring extended ACL rules through the command line interface: [ACLs sample configurations](#).

Logging extended ACLs

You can configure the NetScaler to log details for packets that match extended ACLs.

In addition to the ACL name, the logged details include packet-specific information such as the source and destination IP addresses. The information is stored either in the syslog file or in the `nslog` file, depending on the type of global logging (`syslog` or `nslog`) enabled.

Logging must be enabled at both the global level and the ACL level. The global setting takes precedence.

To optimize logging, when multiple packets from the same flow match an ACL, only the first packet's details are logged, and the counter is incremented for every packet that belongs to the same flow. A flow is defined as a set of packets that have the same values for the source IP address, destination IP address, source port, destination port, and protocol parameters. To avoid flooding of log messages, the NetScaler performs internal rate limiting so that packets belonging to the same flow are not repeatedly logged. The total number of different flows that can be logged at any given time is limited to 10,000.

Note: You must apply ACLs after you enable logging.

CLI procedures**To configure extended ACL Logging by using the CLI:**

At the command prompt, type the following commands to configure logging and verify the configuration:

- `set ns acl <aclName> [-logState (ENABLED | DISABLED)] [-rateLimit <positive_integer>]`

- **apply acls**
- **show ns acl** [<aclName>]

GUI procedures

To configure extended ACL Logging by using the GUI:

1. Navigate to **System > Network > ACLs** and, on the **Extended ACLs** tab, open the extended ACL.
2. Set the following parameters:
 - **Log State**—Enable or disable logging of events related to the extended ACL rule. The log messages are stored in the configured `syslog` or `auditlog` server.
 - **Log Rate Limit**—Maximum number of log messages to be generated per second per packet flow. If you set this parameter, you must enable the Log State parameter.

Sample configuration

```
1 > set ns acl restrict -logstate ENABLED -ratelimit 120
2 Warning: ACL modified, apply ACLs to activate change
3
4 > apply ns acls
5 Done
```

Logging extended ACL6s

You can configure the NetScaler appliance to log details for packets that match an extended ACL6 rule. In addition to the ACL6 name, the logged details include packet-specific information, such as the source and destination IP addresses. The information is stored either in a `syslog` or `nslog` file, depending on the type of logging (`syslog` or `nslog`) that you have configured in the NetScaler appliance.

To optimize logging, when multiple packets from the same flow match an ACL6, only the first packet's details are logged. The counter is incremented for every other packet that belongs to the same flow. A flow is defined as a set of packets that have the same values for the following parameters:

- Source IP
- Destination IP
- Source port
- Destination port
- Protocol (TCP or UDP)

If an incoming packet is not from the same flow, a new flow is created. The total number of different flows that can be logged at any given time is limited to 10,000.

CLI procedures

To configure logging for an extended ACL6 rule by using the CLI:

- To configure logging while adding the extended ACL6 rule, at the command prompt, type:
 - **add acl6** <acl6Name> <acl6action> [-**logState** (ENABLED | DISABLED)] [-**rateLimit** <positive_integer>]
 - **apply acls6**
 - **show acl6** [<acl6Name>]
- To configure logging for an existing extended ACL6 rule, at the command prompt, type:
 - **set acl6** <acl6Name> [-**logState** (ENABLED | DISABLED)] [-**rateLimit** <positive_integer>]
 - **show acl6** [<acl6Name>]
 - **apply acls6**

GUI procedures

To configure extended ACL6 Logging by using the GUI:

1. Navigate to **System > Network > ACLs** and, then click the **Extended ACL6s** tab.
2. Set the following parameters while adding, or modifying an existing extended ACL6 rule.
 - **Log State**—Enable or disable logging of events related to the extended ACL6s rule. The log messages are stored in the configured syslog or [auditlog](#) server.
 - **Log Rate Limit**—Maximum number of log messages to be generated per second per packet flow. If you set this parameter, you must enable the **Log State** parameter.

Sample configuration

```
1 > set acl6 ACL6-1 -logstate ENABLED -ratelimit 120
2 Done
3
4 > apply acls6
5 Done
```

Displaying extended ACLs and extended ACL6s statistics

You can display statistics of extended ACLs and ACL6s.

The following table lists the statistics associated with extended ACLs and ACL6s, and their descriptions.

Statistic	Specifies
Allow ACL matches	Packets matching ACLs with processing mode set to ALLOW. The NetScaler processes these packets.
NAT ACL matches	Packets matching a NAT ACL, resulting in a NAT session.
Deny ACL matches	Packets dropped because they match ACLs with processing mode set to DENY.
Bridge ACL matches	Packets matching a bridge ACL, which in transparent mode bypasses service processing.
ACL matches	Packets matching an ACL.
ACL misses	Packets not matching any ACL.
ACL Count	Total number of ACL rules configured by users.
Effective ACL Count	Total number of effective ACL configured internally. For an extended ACL with a range of IP addresses, the NetScaler appliance internally creates an extended ACL for each IP address. For example, for an extended ACL with 1000 IPv4 addresses (range or dataset), the NetScaler internally creates 1000 extended ACLs.

CLI procedures

To display the statistics of all extended ACLs by using the CLI:

At the command prompt, type:

- **stat ns acl**

To display the statistics of all extended ACL6s by using the CLI:

At the command prompt, type:

- **stat ns acl6**

GUI procedures

To display the statistics of an extended ACL by using the GUI:

- Navigate to **System > Network > ACLs**, on the **Extended ACLs** tab, select the extended ACL, and click **Statistics**.

To display the statistics of an extended ACL6 by using the GUI:

- Navigate to **System > Network > ACLs**, on the **Extended ACL6s** tab, select the extended ACL, and click **Statistics**.

Stateful ACLs

A stateful ACL rule creates a session when a request matches the rule and allows the resulting responses even if these responses match a deny ACL rule in the NetScaler appliance. A stateful ACL offloads the work of creating more ACL rules/forwarding session rules for allowing these specific responses.

Stateful ACLs can be best used in an edge firewall deployment of a NetScaler appliance having the following requirements:

- The NetScaler appliance must allow requests initiated from internal clients and the related responses from the Internet.
- The appliance must drop the packets from the Internet that are not related to any client connections.

Before you begin

Before you configure stateful ACL rules, note the following points:

- The NetScaler appliance supports stateful ACL rules and stateful ACL6 rules.
- In a high availability setup, the sessions for a stateful ACL rule are not synchronized to the secondary node.
- You cannot configure an ACL rule as stateful if the rule is bound to any NetScaler NAT configuration. Some examples of NetScaler NAT configurations are:
 - RNAT
 - Large Scale NAT (large scale NAT44, DS-Lite, large scale NAT64)
 - NAT64
 - Forwarding session
- You cannot configure an ACL rule as stateful if TTL and Established parameters are set for this ACL rule.
- The sessions created for a stateful ACL rule continue to exist until time out irrespective of the following ACL operations:

- Remove ACL
- Disable ACL
- Clear ACL
- Stateful ACLs are not supported for the following protocols:
 - Active FTP
 - TFTP

Configure stateful IPv4 ACL rules

Configuring a stateful ACL rule consists of enabling the stateful parameter of an ACL rule.

To enable the stateful parameter of an ACL rule by using the CLI:

- To enable the stateful parameter while adding an ACL rule, at the command prompt, type:
 - **add acl** <name> ALLOW **-stateful** (ENABLED | DISABLED)
 - **apply acls**
 - **show acl** <name>
- To enable the stateful parameter of an existing ACL rule, at the command prompt, type:
 - **set acl** <name> **-stateful** (ENABLED | DISABLED)
 - **apply acls**
 - **show acl** <name>

To enable the stateful parameter of an ACL rule by using the GUI:

1. Navigate to **System > Network > ACLs** and, on the **Extended ACLs** tab.
2. Enable the **Stateful** parameter while adding, or modifying an existing ACL rule.

Sample configuration

```
1 > add acl ACL-1 allow -srcIP 1.1.1.1 -stateful Yes
2
3 Done
4
5 > apply acls
6
7 Done
8
9 > show acl
10
11 1)          Name: ACL-1
12
```

```
13     Action: ALLOW                               Hits: 0
14
15     srcIP = 1.1.1.1
16
17     destIP
18
19     srcMac:
20
21     Protocol:
22
23     Vlan:                                       Interface:
24
25     Active Status: ENABLED                       Applied Status: NOTAPPLIED
26
27     Priority: 10                                 NAT: NO
28
29     TTL:
30
31     Log Status: DISABLED
32
33     Forward Session: NO
34
35     Stateful: YES
```

Configure stateful ACL6 rules

Configuring a stateful ACL6 rule consists of enabling the stateful parameter of an ACL6 rule.

To enable the stateful parameter of an ACL6 rule by using the CLI:

- To enable the stateful parameter while adding an ACL6 rule, at the command prompt, type:
 - ****add acl6**** <name> ALLOW -stateful (ENABLED | DISABLD)
 - **apply acls6**
 - **show acl6** <name>
- To enable the stateful parameter of an existing ACL6 rule, at the command prompt, type:
 - ****set acl6**** <name> -stateful (ENABLED | DISABLED)
 - **apply acls6**
 - **show acl6** <name>

To enable the stateful parameter of an ACL6 rule by using the GUI:

1. Navigate to **System > Network > ACLs** and, on the **Extended ACL6s** tab.
2. Enable the **Stateful** parameter while adding, or modifying an existing ACL6 rule.

Sample configuration

```
1 > add acl6 ACL6-1 allow -srcip6 1000::1 -stateful Yes
2
3 Done
4
5 > apply acls6
6
7 Done
8
9 > show acl6
10
11 1)      Name: ACL6-1
12
13      Action: ALLOW                               Hits: 0
14
15      srcIPv6 = 1000::1
16
17      destIPv6
18
19      srcMac:
20
21      Protocol:
22
23      Vlan:                                       Interface:
24
25      Active Status: ENABLED                     Applied Status: NOTAPPLIED
26
27      Priority: 10                               NAT: NO
28
29      TTL:
30
31      Forward Session: NO
32
33      Stateful: YES
```

Dataset based extended ACLs

Many ACLs are required in an enterprise. Configuring and managing many ACLs is difficult and cumbersome when they require frequent changes.

A NetScaler appliance supports datasets in extended ACLs. Dataset is an existing feature of a NetScaler appliance. A dataset is an array of indexed patterns of types: number (integer), IPv4 address, or IPv6 address.

Dataset support in extended ACLs is useful for creating multiple ACL rules, which require common ACL parameters.

While creating an ACL rule, instead of specifying the common parameters, you can specify a dataset, which includes these common parameters.

Any changes made in the dataset are automatically reflected in the ACL rules that are using this dataset. ACLs with datasets are easier to configure and manage. They are also smaller and easier to read than the conventional ACLs.

Currently, the NetScaler appliance supports only the following types of datasets for the extended ACLs:

- IPv4 address (for specifying the source IP address or the destination IP address or both for an ACL rule)
- number (for specifying the source port or the destination port or both for an ACL rule)

Before you begin

Before configuring dataset based extended ACL rules, note the following points:

- Make sure that you are familiar with the dataset feature of a NetScaler appliance. For more information about datasets, see [Pattern sets and data sets](#).
- The NetScaler appliance supports datasets only for IPv4 extended ACLs.
- The NetScaler appliance supports only the following types of datasets for the extended ACLs:
 - IPv4 address
 - number
- The NetScaler appliance supports dataset based extended ACLs for all NetScaler set ups: stand-alone, high availability, and cluster.
- For an extended ACL with datasets containing ranges, the NetScaler appliance internally creates an extended ACL for each combination of the dataset values.
 - **Example 1:** For an IPv4 dataset based extended ACL with 1000 IPv4 addresses bound to the dataset, and the dataset is set to the source IP parameter, the NetScaler appliance internally creates 1000 extended ACLs.
 - **Example 2:** A dataset based extended ACL with following parameters set:
 - * Source IP is set to a dataset containing 5 IP addresses.
 - * Destination IP is set to a dataset containing 5 IP addresses.
 - * Source port is set to a dataset containing 5 ports.
 - * Destination port is set to a dataset containing 5 ports.

The NetScaler appliance internally creates 625 extended ACLs. Each of these internal ACLs contains a unique combination of the above mentioned four parameter values.

- The NetScaler appliance supports a maximum of 10K extended ACLs. For an IPv4 dataset based extended ACL with a range of IP addresses bound to the dataset, the NetScaler appliance stops creating internal ACLs once the total number of extended ACLs reaches the maximum limit.
- The following counters are present as part of the extended ACL statistics:
 - * **ACL count.** Total number of ACL rules configured by users.
 - * **Effective ACL count.** Total number of effective ACL rules that the NetScaler appliance configures internally.

For more information, see [Displaying extended ACL and extended ACL6s Statistics](#).

- The NetScaler appliance does not support `set` and `unset` operations for associating/dissociating datasets with the parameters of an extended ACL. You can set the ACL parameters to a dataset only during the `add` operation.

Configure dataset based extended ACLs

Configuring a dataset based extended ACL rule consists of the following tasks:

- **Add a dataset.** A dataset is an array of indexed patterns of types: number (integer), IPv4 address, or IPv6 address. In this task, you create a type of dataset, for example, a dataset of type IPv4.
- **Bind values to the dataset.** Specify a value or a range of values to the dataset. The specified values must be of the same type as the dataset type. For example, you can specify an IPv4 address, or an IPv4 address range, or an IPv4 address range in CIDR notation to an IPv4 dataset.
- **Add an extended ACL and set ACL parameters to the dataset.** Add an extended ACL and set the required ACL parameters to the dataset. This setting results in the parameters set to the values specified in the dataset.
- **Apply extended ACLs.** Apply the ACLs to activate any new or modified extended ACLs.

To add a policy dataset by using the CLI:

At the command prompt, type:

- **add policy dataset** <name> <type>
- **show policy dataset**

To bind a pattern to the data set by using the CLI:

At the command prompt, type:

- **bind policy dataset** <name> <value> [-endRange <string>]
- **show policy dataset**

To add an extended ACL and set the ACL parameters to the dataset by using the CLI:

At the command prompt, type:

- **add ns acl** <aclname> <aclaction> [-srcIP [<operator>] <srcIPVal>] [-srcPort [<operator>] <srcPortVal>] [-destIP [<operator>] <destIPVal>] [-destPort [<operator>] <destPortVal>] ...
- **show acls**

To apply extended ACLs by using the CLI:

At the command prompt, type:

- **apply acls**

Sample configuration

In the following sample configuration of a dataset based extended ACL, two IPv4 datasets DATASET_IP_ACL_1 and DATASET_IP_ACL_2 are created. Two port datasets DATASET_PORT_ACL_1 and DATASET_PORT_ACL_2 are created.

Two IPv4 addresses: 192.0.2.30 and 192.0.2.60 are bound to DATASET_IP_ACL_1. Two IPv4 address ranges: (198.51.100.15 - 45) and (203.0.113.60-90) are bound to DATASET_IP_ACL_2. DATASET_IP_ACL_1 is then specified to the srcIP parameter, and DATASET_IP_ACL_2 to the destIP parameter of the extended ACL ACL-1.

Two port numbers: 2001 and 2004, are bound to DATASET_PORT_ACL_1. Two port ranges: (5001 - 5040) and (8001 - 8040) are bound to DATASET_PORT_ACL_2. DATASET_IP_ACL_1 is then specified to the srcIP parameter, and DATASET_IP_ACL_2 to the destIP parameter of the extended ACL ACL-1.

```
1 add policy dataset DATASET_IP_ACL_1 IPV4
2 add policy dataset DATASET_IP_ACL_2 IPV4
3
4 add policy dataset DATASET_PORT_ACL_1 NUM
5 add policy dataset DATASET_PORT_ACL_2 NUM
6
7 bind dataset DATASET_IP_ACL_1 192.0.2.30
8 bind dataset DATASET_IP_ACL_1 192.0.2.60
9 bind dataset DATASET_IP_ACL_2 198.51.100.15 -endrange 198.51.100.45
10 bind dataset DATASET_IP_ACL_2 203.0.113.1/24
11
12 bind dataset DATASET_PORT_ACL_1 2001
13 bind dataset DATASET_PORT_ACL_1 2004
14 bind dataset DATASET_PORT_ACL_2 5001 -endrange 5040
15 bind dataset DATASET_PORT_ACL_2 8001 -endrange 8040
16
17 add ns acl ACL-1 ALLOW -srcIP DATASET_IP_ACL_1 -destIP DATASET_IP_ACL_2
18 -srcPort DATASET_PORT_ACL_1 -destPort DATASET_PORT_ACL_2 -protocol TCP
```

MAC Address Wildcard Mask for ACLs

September 21, 2020

A wildcard mask parameter has been introduced for extended ACLs and ACL6s and is used with the source MAC address parameter to define a range of MAC addresses to be match against the source MAC address of incoming packets.

Wild card masks specify which hexadecimal digits of the MAC address are used and which hexadecimal digits are ignored. The wildcard mask parameter specifies a series of ones and zeroes and has a length of 12 digits. Each digit is a mask for the corresponding hexadecimal digit of the MAC address. A zero digit in the wildcard mask indicates that the corresponding hexadecimal digit of the MAC address must be considered and a one digit indicates that the corresponding hexadecimal digit to be ignored.

The wildcard mask must meet the following conditions:

- Has only one series of zeroes
- Has only one series of ones
- Start with a series of zeroes

The following are some of the examples of valid wildcard masks:

- 000000111111
- 00000011111
- 000011111111

The following are some of the examples of invalid wildcard masks:

- 000000111100
- 111110000000
- 010101010101

For an ACL, a wildcard mask of 000000111111 for MAC address 96:fa:95:1d:67:4a defines the MAC address range 96:FA:95:00:00:00 - 96:FA:95:FF:FF:FF. This MAC address range is matched against the source MAC address of the incoming packets.

To specify a range of source MAC addresses in an ACL rule by using the CLI:

At the command prompt, type:

```
1 - add ns acl <name> <action> -srcMac <mac_addr> -srcMacMask <string>
2 - show ns acl <aclname>
```

Example:

```
1 add ns acl ACL-1 ALLOW - protocol TCP - srcport 2000-3000 -srcMac 96:fa
:95:1d:67:4a
```

```
2 - srcMacMask 000000111111
3 Done
```

To specify a range of source MAC addresses in an ACL6 rule by using the CLI:

At the command prompt, type:

```
1 - add ns acl6 <name> <action> -srcMac <mac_addr> -srcMacMask <string>
2 - show ns acl6 <acl6name>
```

Example:

```
1 > add ns acl6 ACL6-1 ALLOW -destIPv6 2001::45 -srcMac 96:fa:90:1d:67:4a
2 - srcMacMask 000000001111
3 Done
```

Blocking Traffic on Internal Ports

May 2, 2023

By default, a NetScaler appliance does not block some type of internal traffic even using ACL rules.

The following table lists the internal traffic types that a NetScaler appliance does not block even using ACL rules:

NetScaler Setup	Protocol	Destination Port	Destination IP address
All	TCP	3008–3011	NSIP or SNIP
All	TCP	179	NSIP or SNIP
All	UDP	520	NSIP or SNIP
High availability	UDP	3003	NSIP
High availability	TCP	22	NSIP
Cluster	UDP	7000	NSIP

This feature of not blocking the earlier mentioned types of traffic is specified by the default setting of the global Layer-3 `Implicit ACL Allow` (`implicitACLAllow`) parameter.

You can disable this parameter if you want to block the earlier mentioned traffic types using the ACL rules. An appliance in a high availability setup makes an exception for its partner (primary or secondary) node. It does not block traffic from that node.

To disable or enable this parameter by using the CLI:

At the command prompt, type:

```
set l3param -implicitACLAllow [ENABLED      DISABLED]
```

-
- **sh l3param**

Note: The parameter implicitACLAllow is enabled by default.

Example:

```
1 > set l3param -implicitACLAllow DISABLED
2 Done
```

IP Routing

May 2, 2023

NetScaler appliances support both dynamic and static routing. Because simple routing is not the primary role of a NetScaler, the main objective of running dynamic routing protocols is to enable route health injection (RHI), so that an upstream router can choose the best among multiple routes to a topographically distributed virtual server.

Most NetScaler implementations use some static routes to reduce routing overhead. You can create backup static routes and monitor routes to enable automatic switchover in the event that a static route goes down. You can also assign weights to facilitate load balancing among static routes, create null routes to prevent routing loops, and configure IPv6 static routes. You can configure policy based routes (PBRs), for which routing decisions are based on criteria that you specify.

Configuring Dynamic Routes

May 2, 2023

When a dynamic routing protocol is enabled, the corresponding routing process monitors route updates and advertises routes. Routing protocols enable an upstream router to use the equal cost multipath (ECMP) technique to load balance traffic to identical virtual servers hosted on two standalone NetScaler appliances. Dynamic routing on a NetScaler appliance uses three routing tables. In a high-availability setup, the routing tables on the secondary appliance mirror those on the primary.

For command reference guides and unsupported commands on dynamic routing protocol, see [Dynamic Routing Protocol Command Reference Guides and Unsupported Commands](#).

The NetScaler supports the following protocols:

- Routing Information Protocol (RIP) version 2
- Open Shortest Path First (OSPF) version 2
- Border Gateway Protocol (BGP)
- Routing Information Protocol next generation (RIPng) for IPv6
- Open Shortest Path First (OSPF) version 3 for IPv6
- ISIS Protocol

You can enable more than one protocol simultaneously.

Routing Tables in NetScaler

In a NetScaler appliance, the NetScaler kernel routing table, the FreeBSD kernel routing table, and the NSM FIB routing table each hold a different set of routes and serve a different purpose. They communicate with each other by using UNIX routing sockets. Route updates are not automatically propagated from one routing table to another. You must configure propagation of route updates for each routing table.

NS Kernel Routing Table

The NS kernel routing table holds subnet routes corresponding to the NSIP and to each SNIP and MIP. Usually, no routes corresponding to VIPs are present in the NS kernel routing table. The exception is a VIP added by using the `add ns ip` command and configured with a subnet mask other than 255.255.255.255. If there are multiple IP addresses belonging to the same subnet, they are abstracted as a single subnet route. In addition, this table holds a route to the loopback network (127.0.0.0) and any static routes added through the CLI (CLI). The entries in this table are used by the NetScaler in packet forwarding. From the CLI, they can be inspected with the `show route` command.

FreeBSD Routing Table

The sole purpose of the FreeBSD routing table is to facilitate initiation and termination of management traffic (telnet, ssh, etc.). In a NetScaler appliance, these applications are tightly coupled to FreeBSD, and it is imperative for FreeBSD to have the necessary information to handle traffic to and from these applications. This routing table contains a route to the NSIP subnet and a default route. In addition, FreeBSD adds routes of type WasCloned(W) when the NetScaler establishes connections to hosts on local networks. Because of the highly specialized utility of the entries in this routing table, all other

route updates from the NS kernel and NSM FIB routing tables bypass the FreeBSD routing table. Do not modify it with the route command. The FreeBSD routing table can be inspected by using the netstat command from any UNIX shell.

Network Services Module (NSM) FIB

The NSM FIB routing table contains the advertisable routes that are distributed by the dynamic routing protocols to their peers in the network. It may contain:

- **Connected routes.** IP subnets that are directly reachable from the NetScaler. Typically, routes corresponding to the NSIP subnet and subnets over which routing protocols are enabled are present in NSM FIB as connected routes.
- **Kernel routes.** All the VIP addresses on which the -hostRoute option is enabled are present in NSM FIB as kernel routes if they satisfy the required RHI Levels. In addition, NSM FIB contains any static routes configured on the CLI that have the - advertise option enabled. Alternatively, if the NetScaler is operating in Static Route Advertisement (SRADV) mode, all static routes configured on the CLI are present in NSM FIB. These static routes are marked as kernel routes in NSM FIB, because they actually belong to the NS kernel routing table.
- **Static routes.** Normally, any static route configured in VTYSH is present in NSM FIB. If administrative distances of protocols are modified, this may not always be the case. An important point to note is that these routes can never get into the NS kernel routing table.
- **Learned routes.** If the NetScaler is configured to learn routes dynamically, the NSM FIB contains routes learned by the various dynamic routing protocols. Routes learned by OSPF, however, need special processing. They are downloaded to FIB only if the fib-install option is enabled for the OSPF process. This can be done from the router-config view in VTYSH.

Dynamic Routing in a High Availability Setup

In a high availability setup, the primary node runs the routing process and propagates routing table updates to the secondary node. The routing table of the secondary node mirrors the routing table on the primary node.

Non-Stop Forwarding

After failover, the secondary node takes some time to start the protocol, learn the routes, and update its routing table. But this does not affect routing, because the routing table on the secondary node is identical to the routing table on the primary node. This mode of operation is known as non-stop forwarding.

Black Hole Avoidance Mechanism

After failover, the new primary node injects all its VIP routes into the upstream router. However, that router retains the old primary node's routes for 180 seconds. Because the router is not aware of the failover, it attempts to load balance traffic between the two nodes. During the 180 seconds before the old routes expire, the router sends half the traffic to the old, inactive primary node, which is, in effect, a black hole.

To prevent this, the new primary node, when injecting a route, assigns it a metric that is slightly lower than the one specified by the old primary node.

Interfaces for Configuring Dynamic Routing

To configure dynamic routing, you can use either the GUI or a command-line interface. The NetScaler supports two independent command-line interfaces: the CLI and the Virtual Teletype Shell (VTYSH). The CLI is the appliance's native shell. VTYSH is exposed by ZebOS. The NetScaler routing suite is based on ZebOS, the commercial version of GNU Zebra.

Note:

Citrix recommends that you use VTYSH for all commands except those that can be configured only on the CLI. Use of the CLI should generally be limited to commands for enabling the routing protocols, configuring host route advertisement, and adding static routes for packet forwarding.

Dynamic Routing Protocol Command Reference Guides and Unsupported Commands

The following table lists command reference guide links, for various dynamic routing protocols, and unsupported commands on the NetScaler appliance: [Dynamic routing protocol reference guides and unsupported commands](#).

Configuring RIP

May 2, 2023

Routing Information Protocol (RIP) is a Distance Vector protocol. The NetScaler supports RIP as defined in RFC 1058 and RFC 2453. RIP can run on any subnet.

After enabling RIP, you need to configure advertisement of RIP routes. For troubleshooting, you can limit RIP propagation. You can display RIP settings to verify the configuration.

Enabling and Disabling RIP

Use either of the following procedures to enable or disable RIP. After you enable RIP, the NetScaler appliance starts the RIP process. After you disable RIP, the appliance stops the RIP process.

To enable or disable RIP routing by using the CLI:

At the command prompt, enter one of the following commands to enable or disable RIP:

- **enable ns feature RIP**
- **disable ns feature RIP**

To enable or disable RIP routing by using the GUI:

1. Navigate to **System > Settings**, in **Modes and Features** group, click **Change advanced features**.
2. Select or clear the **RIP Routing** option.

Advertising Routes

RIP enables an upstream router to load balance traffic between two identical virtual servers hosted on two standalone NetScaler appliances. Route advertisement enables an upstream router to track network entities located behind the NetScaler.

To configure RIP to advertise routes by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enter global configuration mode.
router rip	Start the RIP routing process and enter configuration mode for the routing process.
redistribute static	Redistribute static routes.
redistribute kernel	Redistribute kernel routes.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS(config)# router rip
4 NS(config-router)# redistribute static
5 NS(config-router)# redistribute kernel
```

Limiting RIP Propagations

If you need to troubleshoot your configuration, you can configure listen-only mode on any given interface.

To limit RIP propagation by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enter global configuration mode.
router rip	Start the RIP routing process and enter configuration mode for the routing process.
passive-interface <vlan_name>	Suppress routing updates on interfaces bound to the specified VLAN.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS(config)# router rip
4 NS(config-router)# passive-interface VLAN0
```

Verifying the RIP Configuration

You can display the routing table and other RIP settings.

To view the RIP settings by using the VTYSH command line:

At the command prompt, type the following commands in the following order:

Command	Specifies
VTYSH	Display VTYSH command prompt.
sh rip	Display updated RIP routing table.
sh rip interface	Displays RIP information for the specified VLAN.

Example:

```
1 NS# VTYSH
2 NS# sh rip
3 NS# sh rip interface VLAN0
```

Configuring OSPF

May 2, 2023

The NetScaler supports Open Shortest Path First (OSPF) Version 2 (RFC 2328). The features of OSPF on the NetScaler are:

- If a vserver is active, the host routes to the vserver can be injected into the routing protocols.
- OSPF can run on any subnet.
- Route learning advertised by neighboring OSPF routers can be disabled on the NetScaler.
- The NetScaler can advertise Type-1 or Type-2 external metrics for all routes.
- The NetScaler can advertise user-specified metric settings for VIP routes. For example, you can configure a metric per VIP without special route maps.
- You can specify the OSPF area ID for the NetScaler.
- The NetScaler supports not-so-stubby-areas (NSSAs). An NSSA is similar to an OSPF stub area but allows injection of external routes in a limited fashion into the stub area. To support NSSAs, a new option bit (the N bit) and a new type (Type 7) of Link State Advertisement (LSA) area have been defined. Type 7 LSAs support external route information within an NSSA. An NSSA area border router (ABR) translates a type 7 LSA into a type 5 LSA that is propagated into the OSPF domain. The OSPF specification defines only the following general classes of area configuration:
 - Type 5 LSA: Originated by routers internal to the area are flooded into the domain by AS boarder routers (ASBRs).
 - Stub: Allows no type 5 LSAs to be propagated into/throughout the area and instead depends on default routing to external destinations.

After enabling OSPF, you need to configure advertisement of OSPF routes. For troubleshooting, you can limit OSPF propagation. You can display OSPF settings to verify the configuration.

Enabling and Disabling OSPF

To enable or disable OSPF, you must use either the CLI or the GUI. When OSPF is enabled, the NetScaler starts the OSPF process. When OSPF is disabled, the NetScaler stops the OSPF routing process.

To enable or disable OSPF routing by using the CLI:

At the command prompt, type one of the following commands:

1. **enable ns feature OSPF**
2. **disable ns feature OSPF**

To enable or disable OSPF routing by using the GUI:

1. Navigate to **System > Settings**, in **Modes and Features** group, click **Change advanced features**.
2. Select or clear the **OSPF Routing** option.

Advertising OSPF Routes

OSPF enables an upstream router to load balance traffic between two identical virtual servers hosted on two standalone NetScaler appliances. Route advertising enables an upstream router to track network entities located behind the NetScaler.

To configure OSPF to advertise routes by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enters global configuration mode.
router OSPF	Start OSPF routing process and enter configuration mode for the routing process.
network A.B.C.D/M area <0-4294967295>	Enable routing on an IP network.
redistribute static	Redistribute static routes.
redistribute kernel	Redistribute kernel routes.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS(config)# router OSPF
4 NS(config-router)# network 10.102.29.0/24 area 0
5 NS(config-router)# redistribute static
6 NS(config-router)# redistribute kernel
```

Limiting OSPF Propagations

If you need to troubleshoot your configuration, you can configure listen-only mode on any given VLAN.

To limit OSPF propagation by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enter global configuration mode.
router OSPF	Start OSPF routing process and enters configuration mode for the routing process.
passive-interface <vlan_name>	Suppress routing updates on interfaces bound to the specified VLAN.

Example:

```

1 >VTYSH
2 NS# configure terminal
3 NS(config)# router OSPF
4 NS(config-router)# passive-interface VLAN0
    
```

Verifying the OSPF Configuration

You can display current OSPF neighbors, and OSPF routes.

To view the OSPF settings by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.
sh OSPF neighbor	Displays current neighbors.
sh OSPF route	Displays OSPF routes.

Example:

```

1 >VTYSH
2 NS# sh ip OSPF neighbor
3 NS# sh ip OSPF route
    
```

Configuring Graceful Restart for OSPF

In a non-INC high availability (HA) setup in which a routing protocol is configured, after a failover, routing protocols are converged and routes between the new primary node and the adjacent neighbor routers are learned. Route learning take some time to complete. During this time, forwarding of packets is delayed, network performance might get disrupted, and packets might get dropped.

Graceful restart enables an HA setup during a failover to direct its adjacent routers to not remove the old primary node's learned routes from their routing databases. Using the old primary node's routing information, the new primary node and the adjacent routers immediately start forwarding packets, without disrupting network performance.

Note:

Graceful restart is not supported for high availability setups in INC mode.

To configure graceful restart for OSPF by using the VTYSH command line, at the command prompt, type the following commands, in the order shown:

Command	Example	Command Description
VTYSH	VTYSH	Enters VTYSH command prompt.
configure terminal	NS# configure terminal	Enters global configuration mode.
router-id	NS(config)# router-id 1.1.1.1	Sets a router identifier for the NetScaler appliance. This identifier is set for all the dynamic routing protocols. The same ID must be specified in the other node in a high availability set up for graceful restart to work properly in the HA setup.
ospf restart grace-period <1-1800>	NS(config)# ospf restart grace-period 170	Specifies the grace period, in seconds, for which the routes are to be preserved in the helper devices. Default value: 120 seconds.

Command	Example	Command Description
ospf restart helper max-grace-period <1-1800>	NS(config)# ospf restart helper max-grace-period 180	This is an optional command to limit the maximum grace period for which the NetScaler appliance will be in the helper mode. If the NetScaler appliance receives an opaque LSA with grace-period greater than the set helper max-grace-period, the LSA is discarded and the NetScaler is not placed in helper mode.
router ospf	NS(config)# router ospf	Starts OSPF routing process and enter configuration mode for the routing process.
network A.B.C.D/M area <0-4294967295>	NS(config-router)# network 192.0.2.0/24 area 0	Enables routing on an IP network.
capability restart graceful	NS(config-router)# capability restart graceful	Enables graceful restart on the OSPF routing process.
redistribute kernel	NS(config-router)# redistribute kernel	Redistributes kernel routes.

Configuring BGP

May 2, 2023

The NetScaler appliance supports BGP (RFC 4271). The features of BGP on the NetScaler are:

- The NetScaler advertises routes to BGP peers.
- The NetScaler injects host routes to virtual IP addresses (VIPs), as determined by the health of the underlying virtual servers.
- The NetScaler generates configuration files for running BGP on the secondary node after failover in an HA configuration.
- This protocol supports IPv6 route exchanges.
- As-Override Support in Border Gateway Protocol

After enabling BGP, you need to configure advertisement of BGP routes. For troubleshooting, you can limit BGP propagation. You can display BGP settings to verify the configuration.

Enabling and Disabling BGP

To enable or disable BGP, you must use either the CLI or the GUI. When BGP is enabled, the NetScaler appliance starts the BGP process. When BGP is disabled, the appliance stops the BGP process.

To enable or disable BGP routing by using the CLI:

At the command prompt, type one of the following commands:

- enable ns feature BGP
- disable ns feature BGP

To enable or disable BGP routing by using the GUI:

1. Navigate to System > Settings, in Modes and Features group, click Change advanced features.
2. Select or clear the BGP Routing option.

Advertising IPv4 Routes

You can configure the NetScaler appliance to advertise host routes to VIPs and to advertise routes to downstream networks.

To configure BGP to advertise IPv4 routes by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enter global configuration mode.
router BGP < ASnumber>	BGP autonomous system. < ASnumber> is a required parameter. Possible values: 1 to 4,294,967,295.
Neighbor < IPv4 address> remote-as < as-number>	Update the IPv4 BGP neighbor table with the link local IPv4 address of the neighbor in the specified autonomous system.
Address-family ipv4	Enter address family configuration mode.

Command	Specifies
Neighbor <IPv4 address> activate	Exchange prefixes for the IPv4 router family between the peer and the local node by using the link local address.
redistribute kernel	Redistribute kernel routes.
redistribute static	Redistribute static routes.

Example:

```

1 >VTYSH
2 NS# configure terminal
3 NS(config)# router BGP 5
4 NS(config-router)# Neighbor 10.102.29.170 remote-as 100
5 NS(config-router)# Address-family ipv4
6 NS(config-router-af)# Neighbor 10.102.29.170 activate
7 NS(config-router)# redistribute kernel
8 NS(config-router)# redistribute static

```

Advertising IPv6 BGP Routes

Border Gateway Protocol (BGP) enables an upstream router to load balance traffic between two identical virtual servers hosted on two standalone NetScaler appliances. Route advertising enables an upstream router to track network entities located behind the NetScaler.

Prerequisites for IPv6 BGP

Before you begin configuring IPv6 BGP, do the following:

- Make sure that you understand the IPv6 BGP protocol.
- Enable the IPv6 feature.

Configuration steps

To configure BGP to advertise IPv6 routes by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.

Command	Specifies
configure terminal	Enter global configuration mode.
router BGP <ASnumber>	BGP autonomous system. <ASnumber> is a required parameter. Possible values: 1 to 4,294,967,295.
Neighbor <IPv6 address> remote-as <as-number>	Update the IPv6 BGP neighbor table with the link local IPv6 address of the neighbor in the specified autonomous system.
Address-family ipv6	Enter address family configuration mode.
Neighbor <IPv6 address> activate	Exchange prefixes for the IPv6 router family between the peer and the local node by using the link local address.
redistribute kernel	Redistribute kernel routes.
redistribute static	Redistribute static routes.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS(config)# router BGP 5
4 NS(config-router)# Neighbor a1bc::102 remote-as 100
5 NS(config-router)# Address-family ipv6
6 NS(config-router-af)# Neighbor a1bc::102 activate
7 NS(config-router)# redistribute kernel
8 NS(config-router)# redistribute static
```

Verifying the BGP Configuration

You can use VTYSH to display BGP settings.

To view the BGP settings using the VTYSH command line

At the command prompt, type:

```
1 VTYSH
2 You are now in the VTYSH command prompt. An output similar to the
  following appears:
3 NS170#
4 At the VTYSH command prompt, type:
5 NS170# sh ip BGP
6 NS170# sh BGP
7 NS170# sh ip BGP neighbors
8 NS170# sh ip BGP summary
```

```
9 NS170# sh ip BGP route-map <map-tag>
```

As-Override Support in Border Gateway Protocol

As a part of BGP loop prevention functionality, if a router receives a BGP packet containing the router's Autonomous System Number (ASN) in the Autonomous Systems (AS) path, the router drops the packet. The assumption is that the packet originated from the router and has reached the place from where it originated.

If an enterprise has several sites with a same ASN, BGP loop prevention causes the sites with an identical ASN to not get linked by another ASN. Routing updates (BGP packets) are dropped when another site receives them.

To solve this issue, BGP AS-Override functionality has been added to the ZebOS BGP routing module of the NetScaler.

With AS-Override enabled for a peer device, when the NetScaler appliance receives a BGP packet for forwarding to the peer, and the ASN of the packet matches that of the peer, the appliance replaces the ASN of the BGP packet with its own ASN number before forwarding the packet.

You can enable AS-Override for a specific neighbor or a group of neighbors (peer group) by using the VTYSH command line.

To configure BGP AS-Override for a IPv4 neighbor by using the VTYSH command line:

Command	Specifies
configure terminal	Enter global configuration mode.
router BGP <ASnumber>	BGP autonomous system. <ASnumber> is a required parameter.
Neighbor <IPv4 address> remote-as <as-number>	Update the IPv4 BGP neighbor table with the IPv4 address of the neighbor in the specified autonomous system.
Neighbor as-override	Enable BGP as-override for the specified neighbor.

```
1 > VTYSH NS# configure terminal
2 NS(config)# router BGP 200
3 NS(config-router)# Neighbor 192.0.2.100 remote-as 100
4 NS(config-router)# Neighbor 10.102.29.100 as-override
```

To configure BGP AS-Override for a IPv4 BGP peer group by using the VTYSH command line:

Command	Specifies
configure terminal	Enter global configuration mode.
router BGP <ASnumber>	BGP autonomous system. <ASnumber> is a required parameter.
Neighbor **peer-group**	Create a BGP peer group.
Neighbor **peer-group**	Associate neighbors to the specified peer group.
Neighbor remote-as < as-number>	Update the IPv4 BGP neighbor table with the IPv4 address of the neighbor in the specified autonomous system.
Neighbor as-override	Enable BGP as-override for all the neighbors that are associated with the specified peer group.

```

1 > VTYSH NS# configure terminal
2 NS(config)# router BGP 200
3 NS(config-router)# neighbor external-peers-1 peer-group
4 NS(config-router)# neighbor 192.0.2.101 peer-group external-peers-1
5 NS(config-router)# neighbor 192.0.2.102 peer-group external-peers-1
6 NS(config-router)# neighbor 192.0.2.103 peer-group external-peers-1
7 NS(config-router)# Neighbor external-peers-1 remote-as 100
8 NS(config-router)# Neighbor external-peers-1 as-override

```

To configure BGP AS-Override for an IPv6 neighbor by using the VTYSH command line:

Command	Specifies
configure terminal	Enter global configuration mode.
router BGP <ASnumber>	BGP autonomous system. <ASnumber> is a required parameter.
Neighbor < IPv6 address> remote-as < as-number>	Update the IPv4 BGP neighbor table with the IPv4 address of the neighbor in the specified autonomous system.
Neighbor as-override	Enable BGP as-override for the specified neighbor.
Address-family ipv6	Enter address family configuration mode.
Neighbor < IPv6 address> activate	Exchange prefixes for the IPv6 router family between the specified neighbor and the NetScaler by using the link local address.
Neighbor as-override	Enable BGP as-override for the specified neighbor.

```

1 > VTYSH NS# configure terminal
2 NS(config)# router BGP 200
3 NS(config-router)# Neighbor a1bc::102 remote-as 100
4 NS(config-router)# Neighbor a1bc::102 as-override
5 NS(config-router)# Address-family ipv6
6 NS(config-router-af)# Neighbor a1bc::102 activate
7 NS(config-router)# Neighbor a1bc::102 as-override

```

To configure BGP AS-Override for IPv6 peer group by using the VTYSH command line:

Command	Specifies
configure terminal	Enter global configuration mode.
router BGP <ASnumber>	BGP autonomous system. <ASnumber> is a required parameter.
Neighbor **peer-group**	Create a BGP peer group.
Neighbor **peer-group**	Associate a neighbor with the specified peer group.
Neighbor remote-as <as-number>	Update the IPv4 BGP neighbor table with the IPv4 address of the neighbor in the specified autonomous system.
Neighbor as-override	Enable BGP as-override for all the neighbors that are associated with the specified peer group.
Address-family ipv6	Enter address family configuration mode.
Neighbor activate	Exchange prefixes for the IPv6 router family between the neighbors of the specified peer group and the NetScaler by using the link local address.
Neighbor as-override	Enable BGP as-override for all the neighbors that are associated with the specified peer group.

```

1 > VTYSH NS# configure terminal
2 NS(config)# router BGP 200
3 NS(config-router)# neighbor external-peers-2 peer-group
4 NS(config-router)# neighbor 2001::1 peer-group external-peers-2
5 NS(config-router)# neighbor 2001::2 peer-group external-peers-2
6 NS(config-router)# Neighbor external-peers-2 remote-as 100
7 NS(config-router)# Neighbor external-peers-2 as-override
8 NS(config-router)# Address-family ipv6
9 NS(config-router-af)# Neighbor external-peers-2 activate
10 NS(config-router)# Neighbor external-peers-2 as-override

```

Graceful Restart

In a non-INC high availability (HA) setup in which a routing protocol is configured, after a failover, routing protocols are converged and routes between the new primary node and the adjacent neighbor routers are learned. Route learning take some time to complete. During this time, forwarding of packets is delayed, network performance might get disrupted, and packets might get dropped.

Graceful restart enables an HA setup during a failover to direct its adjacent routers to not remove the old primary node’s learned routes from their routing databases. Using the old primary node’s routing information, the new primary node and the adjacent routers immediately start forwarding packets, without disrupting network performance.

Note:

Graceful restart is not supported for high availability setups in INC mode.

Configuring Graceful Restart for BGP

To configure graceful restart for BGP by using the VTYSH command line, at the command prompt, type the following commands, in the order shown:

Command	Example	Command Description
VTYSH	VTYSH	Enters VTYSH command prompt.
configure terminal	NS# configure terminal	Enters global configuration mode.
router-id	NS(config)# router-id 1.1.1.1	A router identifier for the NetScaler appliance. This identifier is set for all the dynamic routing protocols. The same identifier must be specified on the other node in a high availability setup for graceful restart to work properly.
router bgp	NS(config)# router bgp 5	Enters BGP configuration mode.
bgp graceful-restart	NS(config)# bgp graceful-restart	Enables graceful restart on the BGP routing process.

Command	Example	Command Description
bgp graceful-restart restart-time <1-1800>	NS(config-router)# bgp graceful-restart restart-time 170	Specifies the grace period, in seconds, that the helper routers waits for a TCP connection from the new primary node after a failover. For this amount of time, the helper routers preserve the routes.
bgp graceful-restart stalepath-time <1-1800>	NS(config-router)# bgp graceful-restart stalepath-time 180	Specifies the time, in seconds, that the NetScaler appliance in helper mode retains the stale routes for restarting neighbor routers. The default value is 360 seconds.
neighbor remote-as	NS(config-router)# neighbor 192.0.2.30 remote-as 2	Establishes BGP peering with the specified neighbor router device.
neighbor capability graceful-restart	NS(config-router)# neighbor 192.0.2.30 capability graceful-restart	Enables graceful restart with the specified neighbor.
redistribute kernel	NS(config-router)# redistribute kernel	Redistributes kernel routes.

Configuring Graceful Restart for IPv6 BGP

To configure graceful restart for IPv6 BGP by using the VTYSH command line, at the command prompt, type the following commands, in the order shown:

Command	Example	Command Description
VTYSH	VTYSH	Enters VTYSH command prompt.
configure terminal	NS# configure terminal	Enters global configuration mode.

Command	Example	Command Description
router-id	NS(config)# router-id 1.1.1.1	Sets a router identifier for the NetScaler appliance. This identifier is set for all the dynamic routing protocols. The same ID must be specified in the other node in a high availability setup for graceful restart to work properly.
router bgp	NS(config)# router bgp 5	Enters configuration mode for BGP protocol.
bgp graceful-restart	NS(config)# bgp graceful-restart	Enables graceful restart on the BGP routing process.
bgp graceful-restart restart-time <1-1800>	NS(config-router)# bgp graceful-restart restart-time 170	Specifies the grace period, in seconds, that the helper routers waits for a TCP connection from the new primary node after a failover. For this amount of time, the helper routers preserve the routes. The default value is 360 seconds.
bgp graceful-restart stalepath-time <1-1800>	NS(config-router)# bgp graceful-restart stalepath-time 180	Specifies the time, in seconds, that the NetScaler appliance in helper mode retains the stale routes for restarting neighbor routers. The default value is 360 seconds.
neighbor remote-as	NS(config-router)# neighbor 2001:db8::10 remote-as 2	Establishes BGP peering with the specified neighbor router device.
address-family ipv6	NS(config-router)#address-family ipv6	Enters address family configuration mode.
neighbor activate	NS(config-router-af)#neighbor 2001:db8::10 activate	Enables the exchange of address family routes with the specified neighbor router device.

Command	Example	Command Description
neighbor capability graceful-restart	NS(config-router-af)#neighbor 2001:db8::10 capability graceful-restart	Enables graceful restart with the specified neighbor router device.
redistribute kernel	NS(config-router-af)#redistribute kernel	Redistributes kernel routes.
exit-address-family	NS(config-router-af)#exit-address-family	Exits address family configuration mode.

Configuring MD5 Authentication for IPv4 BGP

The NetScaler appliance supports MD5 authentication for Border Gateway Protocol (BGP). When authentication is enabled, any TCP segment belonging to BGP exchanged between the NetScaler appliance and its peer device is verified and accepted only if authentication is successful. For authentication to be successful, both the peers must be configured with the same MD5 password. If authentication fails, the BGP neighbor relationship is not being established. MD5 authentication support for BGP in the NetScaler appliance is compliant with RFC 2385.

Before you Begin

Before you start configuring BGP MD5 authentication, consider the following points:

- Make sure that you understand the different components of BGP MD5 authentication, described in RFC 2385.
- BGP MD5 authentication is not supported for NetScaler admin partitions.
- BGP MD5 authentication is not supported for IPv6 BGP configurations.
- BGP MD5 authentication is supported for NetScaler cluster configurations as well as for high availability configurations.
- Because of the following issue in FreeBSD, Citrix recommends to set a low keep-live and hold-time values (for example, 5 and 15) and configure graceful restart for a BGP session in a Layer 2 high availability configuration. Otherwise, with MD5 authentication enabled, BGP might take a longer time to re-establish a connection with the neighbour after a failover.
 - Last ACK from FreeBSD does not contain md5 digest:
 - * <https://forums.freebsd.org/threads/11170/>
 - * <http://support.pfsense.narkive.com/povrH5HI/bgp-md5-weird-behavior-when-connection-closes>

Configuration steps

To configure MD5 authentication for IPv4 BGP by using the VTYSH command line, at the command prompt, type the following commands, in the order shown:

Command	Specifies
vtysh	Displays VTYSH command prompt.
configure terminal	Enters global configuration mode.
**router bgp **	Enters configuration mode for BGP protocol. is a BGP autonomous system number and is a required parameter.
neighbor remote-as < AS-number >	Updates the IPv4 BGP table with the IPv4 address of the neighbor in the specified autonomous system.
neighbor < neighbour IPv4 address > password < password in double quotes >	Configures MD5 authentication for the specified neighbour with the specified MD5 password. For MD5 authentication to be successful, you must configure the same MD5 password on the NetScaler appliance and the neighbour appliance.

```

1 > vtysh
2
3 ns# configure terminal
4
5 ns(config)#router bgp 5
6
7 ns(config-router)#neighbor 20.20.20.138 remote-as 1
8
9 ns(config-router)#neighbor 20.20.20.138 password "secret"
10
11 ns(config-router)#redistribute kernel
12
13 ns(config-router)#exit

```

Configure 4-byte BGP ASNs in asplain and asdot formats

The NetScaler appliance supports configuring and displaying 4-byte BGP autonomous system numbers (ASN) in asplain or asdot format as defined in RFC 5396.

- **asplain.** Decimal value notation where both 2-byte and 4-byte ASNs are represented in decimal value. For example, 65527 is a 2-byte ASN and 234567 is a 4-byte ASN.

- **asdot** Autonomous system dot notation where 2-byte ASNs are represented in decimal value (same as in asplain) and 4-byte ASNs are represented in a dot notation. For example, 65527 is a 2-byte ASN and 3.37959 is a 4-byte ASN. (3.37959 is asdot format for the 234567 decimal number).

Examples of BGP ASN configuration in asplain and asdot formats

By default, the NetScaler appliance displays the BGP ASNs in asplain format, but you can configure to display in asdot format. You can configure local and remote BGP ASNs in asplain or asdot format.

The following lists some examples of BGP ASN configuration in asplain and asdot formats:

- Display BGP AS number in asplain format. By default, the NetScaler appliance displays the BGP AS number in asplain format.

```
1 ns#conf t
2 ns(config)# router bgp 196908
3 ns(config-router)# end
4 ns#
5 ns# sh run router bgp
6 !
7 router bgp 196908
8 !
```

- Display BGP AS number in asdot format. Run the `bgp asnotation-dot` command to display the BGP AS number in asdot format.

```
1 ns#conf t
2 ns(config)#router bgp 196908
3 ns(config-router)#bgp asnotation-dot
4 ns(config-router)#end
5 ns#
6 ns#sh run router bgp
7 !
8 router bgp 3.300
9 bgp asnotation-dot
10 !
```

- Configure and display BGP AS number in asdot format. Run the `bgp asnotation-dot` command to display the BGP AS number in asdot format.

```
1 ns# conf t
2 ns(config)# router bgp 3.300
3 ns(config-router)# bgp asnotation-dot
4 ns#
5 ns# sh run router bgp
6 !
7 router bgp 3.300
8 bgp asnotation-dot
```

```
9 !
```

- Display the BGP AS number back to asplain format from asdot format. Run the `bgp no asnotation-dot` command to display the BGP AS number back to asplain format.

```
1 ns#conf t
2 ns(config)#router bgp 3.300
3 ns(config-router)#no bgp asnotation-dot
4 ns(config-router)#end
5 ns#
6
7 ns#sh run router bgp
8 !
9 router bgp 196908
10 !
```

- Configure and display remote as-number in asdot format. Run the `bgp asnotation-dot` command. In the sample configuration, remote as-number 80000 is configured in asdot format 1.14464.

```
1 ns# conf t
2 ns(config)# router bgp 3.300
3 ns(config-router)# bgp asnotation-dot
4 ns(config-router)# neighbor 192.168.1.2 remote-as 1.14464
5 ns(config-router)#end
6 ns#
7 ns#
8 ns#sh run router bgp
9 !
10 router bgp 3.300
11 bgp asnotation-dot
12 neighbor 192.168.1.2 remote-as 1.14464
13 !
14 ns#
```

- Display the BGP local and remote AS numbers back to the asplain format from the asdot format. Run the `bgp no asnotation-dot` command.

```
1 ns#conf t
2 ns(config)#router bgp 3.300
3 ns(config-router)#no bgp asnotation-dot
4 ns(config-router)#end
5 ns#
6
7 ns#sh run router bgp
8 !
9 router bgp 196908
10 neighbor 192.168.1.2 remote-as 80000
11 !
12 ns#
```

Note:

Instead of configuring for individual BGP neighbors, the same asplain or asdot configuration can be used for BGP peer-groups as well.

Configuring IPv6 RIP

May 2, 2023

IPv6 Routing Information Protocol (RIP) or RIPng is a Distance Vector protocol. This protocol is an extension of RIP to support IPv6. After enabling IPv6 RIP, you need to configure advertisement of IPv6 RIP routes. For troubleshooting, you can limit IPv6 RIP propagation. You can display IPv6 RIP settings to verify the configuration.

Prerequisites for IPv6 RIP

Before you begin configuring IPv6 RIP, do the following:

- Make sure that you understand the IPv6 RIP protocol.
- Install the IPv6PT license on the NetScaler appliance.
- Enable the IPv6 feature.

Advertising IPv6 RIP Routes

IPv6 RIP enables an upstream router to load balance traffic between two identical vservers hosted on two standalone NetScaler devices. Route advertisement enables an upstream router to track network entities located behind the NetScaler.

To configure IPv6 RIP to advertise IPv6 routes by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enter global configuration mode.
router ipv6 rip	Start IPv6 RIP routing process and enter configuration mode for the routing process.
redistribute static	Redistribute static routes.

Command	Specifies
redistribute kernel	Redistribute kernel routes.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS(config)# router ipv6 rip
4 NS(config-router)# redistribute static
5 NS(config-router)# redistribute kernel
```

Limiting IPv6 RIP Propagations

If you need to troubleshoot your configuration, you can configure the listen-only mode on any given interface.

To limit IPv6 RIP propagation by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enter global configuration mode.
router ipv6 rip	Start IPv6 RIP routing process and enter configuration mode for the routing process.
passive-interface <vlan_name>	Suppress routing updates on interfaces bound to the specified VLAN.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS(config)# router ipv6 rip
4 NS(config-router)# passive-interface VLAN0
```

Verifying the IPv6 RIP Configuration

You can use VTYSH to display the IPv6 RIP routing table and IPv6 RIP information for a specified VLAN.

To view the IPv6 RIP settings by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Commands	Specifies
VTYSH	Display VTYSH command prompt.
sh ipv6 rip	Display updated IPv6 RIP routing table.
sh ipv6 rip interface	Display IPv6 RIP information for the specified VLAN.

Example:

```
1 NS# VTYSH
2 NS# sh ipv6 rip
3 NS# sh ipv6 rip interface VLAN0
```

Configuring IPv6 OSPF

May 2, 2023

IPv6 OSPF or OSPF version 3 (OSPF v3) is a link state protocol that is used to exchange IPv6 routing information. After enabling IPv6 OSPF, you need to configure advertisement of IPv6 OSPF routes. For troubleshooting, you can limit IPv6 OSPF propagation. You can display IPv6 OSPF settings to verify the configuration.

Prerequisites for IPv6 OSPF

Before you begin configuring IPv6 OSPF, do the following:

- Make sure that you understand the IPv6 OSPF protocol.
- Install the IPv6PT license on the NetScaler appliance.
- Enable the IPv6 feature.

Advertising IPv6 Routes

IPv6 OSPF enables an upstream router to load balance traffic between two identical vservers hosted on two standalone NetScaler devices. Route advertising enables an upstream router to track network entities located behind the NetScaler.

To configure IPv6 OSPF to advertise IPv6 routes by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Commands	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enter global configuration mode.
router ipv6 OSPF	Start IPv6 OSPF routing process and enter configuration mode for the routing process.
redistribute static	Redistribute static routes.
redistribute kernel	Redistribute kernel routes.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS(config)# router ipv6 OSPF
4 NS(config-router)# redistribute static
5 NS(config-router)# redistribute kernel
```

Limiting IPv6 OSPF Propagations

If you need to troubleshoot your configuration, you use VTYSH to configure listen-only mode on any given VLAN.

To limit IPv6 OSPF propagation by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Commands	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enter global configuration mode.
router ipv6 OSPF	Start IPv6 OSPF routing process and enter configuration mode for the routing process.
passive-interface <vlan_name >	Suppress routing updates on interfaces bound to the specified VLAN.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS(config)# router ipv6 OSPF
4 NS(config-router)# passive-interface VLAN0
```

Verifying the IPv6 OSPF Configuration

You use VTYSH to display IPv6 OSPF current neighbors and IPv6 OSPF routes.

To view the IPv6 OSPF settings by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
VTYSH	Display VTYSH command prompt.
sh ipv6 OSPF neighbor	Display current neighbors.
sh ipv6 OSPF route	Display IPv6 OSPF routes.

Example:

```
1 >VTYSH
2 NS# sh ipv6 OSPF neighbor
3 NS# sh ipv6 OSPF route
```

OSPFv3 Authentication

To ensure the integrity, data origin authentication, and data confidentiality of OSPFv3 packets, OSPFv3 authentication must be configured on OSPFv3 peers.

The NetScaler appliance supports OSPFv3 authentication and is partially compliant with RFC 4552. OSPFv3 authentication is based on the two IPsec protocols: Authentication Header (AH) and Encapsulating Security Payload (ESP). The NetScaler appliance supports only the AH protocol for OSPFv3 authentication.

OSPFv3 authentication uses manually defined IPsec Security Associations (SAs) between the OSPFv3 peers and does not rely on IKE protocol for forming dynamic SAs. Manual SAs define the security parameter Index (SPI) values, algorithms, and keys to be used between the peers. Manual SAs require no negotiation between the peers; therefore, the same SA must be defined on both the peers.

You can configure OSPFv3 authentication on a VLAN or for an OSPFv3 area. When you configure for a VLAN, the settings are applied to all the interfaces that are members of the VLAN. When you configure

OSPFv3 authentication for an OSPF area, the settings are applied to all the VLANs in that area. The settings are in turn applied to all the interfaces that are members of these VLANs. These settings do not apply to member VLANs on which you have configured OSPFv3 authentication directly.

Consider the following points and limitations before configuring OSPFv3 authentication on a NetScaler appliance:

- Make sure that you understand the different components of OSPFv3 authentication, described in RFC 4552.
- Only Authentication Header protocol is supported for OSPFv3 authentication. Encapsulating Security Payload (ESP) is not supported.
- You must define an SA with the same setting on the peer interface.
- Rekeying of manual keys is not supported.

To configure OSPFv3 authentication on a VLAN by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown: [OSPFv3 authentication VLAN commands](#).

Example:

```
1 > VTYSH NS# configure terminal
2 NS(config)# interface vlan2
3 NS(config-if)# ipv6 ospf authentication ipsec spi 256 md5 123456789
   ABCDEF0123456789ABCDEF0
```

To configure OSPFv3 authentication on an OSPF area by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown: [OSPFv3 authentication OSPF area commands](#).

Example:

```
1 > VTYSH NS# configure terminal
2 ns(config)#router ipv6 ospf 30
3 ns(config-router)# area 1 authentication ipsec spi 256
   md5123456789ABCDEF0123456789ABCDEF0
```

Configuring Graceful Restart for IPv6 OSPF

In a non-INC high availability (HA) setup in which a routing protocol is configured, after a failover, routing protocols are converged and routes between the new primary node and the adjacent neighbor routers are learned. Route learning takes some time to complete. During this time, forwarding of packets is delayed, network performance might get disrupted, and packets might get dropped.

Graceful restart enables an HA setup during a failover to direct its adjacent routers to not remove the old primary node's learned routes from their routing databases. Using the old primary node's routing

information, the new primary node and the adjacent routers immediately start forwarding packets, without disrupting network performance.

Note:

Graceful restart is not supported for high availability setups in INC mode.

To configure graceful restart for IPv6 OSPF by using the VTYSH command line, at the command prompt, type the following commands, in the order shown:

Command	Example	Command Description
VTYSH	VTYSH	Enters VTYSH command prompt.
configure terminal	NS# configure terminal	Enters global configuration mode.
router-id id>	NS(config)#router-id 1.1.1.1	Sets a router identifier for the NetScaler appliance. This identifier is set for all the dynamic routing protocols. The same ID must be specified in the other node in a high availability set up for graceful restart to work properly in the HA set up.
IPv6ospf restart grace-period <1-1800>	NS(config)# IPv6ospf restart grace-period 170	Specifies the grace period, in seconds, for which the routes are to be preserved in the helper devices. Default value: 120 seconds.
IPv6 ospf restart helper max-grace-period <1-1800>	NS(config)# IPv6 ospf restart helper max-grace-period 180	This is an optional command to limit the maximum grace period for which the NetScaler appliance will be in the helper mode. If the NetScaler appliance receives an opaque LSA with grace-period greater than the set helper max-grace-period, the LSA is discarded and the NetScaler is not placed in helper mode.

Command	Example	Command Description
interface	NS(config)#interface vlan3	Enters VLAN configuration mode.
ipv6 router ospf area tag	NS(config-if)#ipv6 router ospf area 0 tag 1	Starts IPv6 OSPF routing process on a VLAN.
exit	NS(config-if)#exit	Exits VLAN configuration mode.
router ipv6 ospf	NS(config)# router ipv6 ospf 1	Starts IPv6 OSPF routing process and enters configuration mode for the routing process.
capability restart graceful	NS(config-router)#capability restart graceful	Enables graceful restart on the IPv6 OSPF routing process.
redistribute kernel	NS(config-router)# redistribute kernel	Redistributes kernel routes.

Configuring ISIS

May 2, 2023

The NetScaler appliance supports the Intermediate System-to-Intermediate System (IS-IS or ISIS) dynamic routing protocol. This protocol supports IPv4 as well as IPv6 route exchanges. IS-IS is a link state protocol and is therefore less prone to routing loops. With the advantages of faster convergence and the ability to support larger networks, ISIS can be very useful in Internet Service Provider (ISP) networks.

Prerequisites for configuring ISIS

Before you begin configuring ISIS, do the following:

- Make sure that you understand the ISIS protocol.
- For IPV6 routes, enable:
 - IPv6 protocol translation feature.
 - IPv6 Dynamic Routing option on the VLANs on which you want to run ISIS protocol.

Enabling ISIS

Use either of the following procedures to enable the ISIS routing feature on the NetScaler appliance.

To enable ISIS routing by using the CLI:

At the command prompt, type:

```
enable ns feature ISIS
```

To enable ISIS routing by using the GUI:

1. Navigate to System > Settings, in Modes and Features group, click Change advanced features.
2. Select or clear the ISIS Routing option.

Creating an ISIS Routing Process and Starting It on a VLAN

To create an ISIS routing process, you must use the VTYSH command line.

At the command prompt, type the following commands, in the order shown:

Command	Description
VTYSH	Displays VTYSH command prompt.
configure terminal	Enters the global configuration mode.
router ISIS [tag]	Creates an ISIS routing process and configuration mode for the routing process.
net XX...XXXX.YYYY.YYYY.YYYY.00	Specifies a NET value for the routing process, where: XX.. .XXXX is the Area Address (can be 1-13 bytes), YYYY.YYYY.YYYY is the System ID (6 bytes), 00 is the N-selector (1 byte).
is-type (level-1 level-1-2 level-2-only)	Sets the ISIS routing process to the specified level of routing. Default: level-1-2.
ns IPv6-routing	Starts the IPv6 dynamic routing daemon.
interface	Enters the VLAN configuration mode.
ip router ISIS	Enables the ISIS routing process on the VLAN for IPv4 route exchanges.
ipv6 router ISIS	Enables the ISIS routing process on the VLAN for IPv6 route exchanges.

Example:

```

1 > VTYSH
2 NS# configure terminal
3 NS(config)# router isis 11
4 NS(config-router)# net 15.aabb.ccdd.0097.00
5 NS(config-router)# is-type level-1
6 NS(config-router)# exit
7 NS(config)# ns IPv6-routing
8 NS(config)# interface vlan0
9 NS(config-if)# ip router isis 11
10 NS(config-if)# ipv6 router isis 11

```

Advertising Routes

Route advertisement enables an upstream router to track network entities located behind the NetScaler appliance.

To configure ISIS to advertise routes by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Description
VTYSH	Displays the VTYSH command prompt.
configure terminal	Enters the global configuration mode.
router ISIS [tag]	Starts the ISIS routing instance and enter configuration mode for the routing process.
redistribute connected (level-1 or level-1-2 or level-2)	Redistributes connected routes, where: level-1: Redistribute connected routes into Level-1, level-1-2: Redistribute connected routes into Level-1 and Level-2, level-2: Redistribute connected routes into Level-2.
redistribute kernel (level-1 or level-1-2 or level-2)	Redistributes kernel routes, where: level-1: Redistribute kernel routes into Level-1, level-1-2: Redistribute kernel routes into Level-1 and Level-2, level-2: Redistribute kernel routes into Level-2.

Example:

```

1 >VTYSH
2 NS# configure terminal
3 NS(config)# router isis 11
4 NS(config-router)# redistribute connected level-1

```

```
5 NS(config-router)# redistribute kernel level-1
```

Limiting ISIS Propagations

If you need to troubleshoot your configuration, you can configure the listen-only mode on any given VLAN.

To limit ISIS propagation by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Description
VTYSH	Displays the VTYSH command prompt.
configure terminal	Enters the global configuration mode.
router isis [tag]	Enters the configuration mode for the routing process.
passive-interface	Suppresses routing updates on interfaces bound to the specified VLAN.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS(config)# router isis 11
4 NS(config-router)# passive-interface VLAN0
```

Verifying the ISIS Configuration

You can use VTYSH to display the ISIS routing table and ISIS information for a specified VLAN.

To view the ISIS settings by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Commands	Description
VTYSH	Displays the VTYSH command prompt.
show ip isis route	Displays updated IPv4 ISIS routing table.
show ipv6 isis route	Displays updated IPv6 ISIS routing table.

Commands	Description
sh isis interface	Displays IPv6 ISIS information for the specified VLAN.

Example:

```
1 NS# VTYSH
2 NS# show ip isis route
3 NS# show ipv6 isis route
4 NS# sh isis interface VLAN0
```

Install Routes to the NetScaler Routing Table

May 2, 2023

The NetScaler appliance can use routes learned by various routing protocols after you install the routes in the appliance's routing table.

To install various routes to the internal routing table by using the VTYSH command line:

At the CLI, type the following commands as appropriate for the routes that you want to install:

Commands	Specifies
VTYSH	Display VTYSH command prompt.
configure terminal	Enter global configuration mode.
ns route-install Default	Install IPv4 default routes to the internal routing table.
ns route-install RIP	Install IPv4 RIP specific routes to the internal routing table.
ns route-install BGP	Install IPv4 BGP specific routes to the internal routing table.
ns route-install OSPF	Install IPv4 OSPF specific routes to the internal routing table.
ns route-install IPv6 Default	Install IPv6 default routes to the internal routing table.
ns route-install IPv6 RIP	Install IPv6 RIP specific routes to the internal routing table.

Commands	Specifies
ns route-install IPv6 BGP	Install IPv6 BGP specific routes to the internal routing table.
ns route-install IPv6 OSPF	Install IPv6 OSPF specific routes to the internal routing table.

Example:

```
1 >VTYSH
2 NS# configure terminal
3 NS# ns route-install Default
4 NS(config)# ns route-install RIP
5 NS(config)# ns route-install BGP
6 NS(config)# ns route-install OSPF
7 NS# ns route-install IPv6 Default
8 NS(config)# ns route-install IPv6 RIP
9 NS(config)# ns route-install IPv6 BGP
10 NS(config)# ns route-install IPv6 OSPF
```

Maximum number of ECMP routes supported in a NetScaler appliance

In a NetScaler appliance up to 32 ECMP (Equal Cost Multiple Path) routes are supported. The route selection is based on five tuples. For more information, see [Route selection based on five tuples](#).

Advertisement of SNIP and VIP Routes to Selective Areas

September 21, 2020

To advertise some SNIP addresses to selective areas, enabling DRADV mode or redistribute connect ZebOS operations cannot be used. This is because these operations send all the connected routes to ZebOS. Also, adding dummy static routes in ZebOS for the required subnets, or adding ACLs in ZebOS to filter unwanted connected routes, is a cumbersome and tedious task.

The Network Route and the Tag options address this issue. You can enable the Network Route option for only one SNIP address per subnet. The connected route for that SNIP address is sent as a kernel route to ZebOS.

For VIP and SNIP addresses, Tag, can be assigned an integer from 1 to 4294967295. This parameter can be set only when Host Route or Network Route is enabled for VIP or SNIP addresses. The tag value associated with VIP and SNIP addresses are also sent along with their routes to ZebOS. Tags

with different values can be set for VIP and SNIP routes. These tag values can then be matched in route maps in ZebOS and advertised to selective areas.

Advertise SNIP Routes to Selective Areas

To configure the network route and tag parameters of a SNIP address by using the CLI:

At the command prompt, type:

- If adding a new SNIP address:
 - `**add ns ip** <IPAddress>@ <netmask> -**type SNIP** -**networkroute** (**ENABLED** | **DISABLED**) -**tag** <positive_integer>`
 - `show ns ip <IPAddress>`
- If reconfiguring an existing SNIP address:
 - `**set ns ip** <IPAddress>@ <netmask> -**type SNIP** -**networkroute** (**ENABLED** | **DISABLED**) -**tag** <positive_integer>`
 - `show ns ip <IPAddress>`

To configure the network route and tag parameters of a SNIP address by using GUI:

1. Navigate to **System > Network > IPs > IPV4s**.
2. Set the **Network Route** and **Tag** parameters while adding a Subnet IP (SNIP) address or modifying an existing Subnet IP address.

Advertise VIP Routes to Selective Areas

To configure the host route and tag parameters of a VIP address by using the CLI:

At the command prompt, type one of the following sets of commands.

- If adding a new VIP address:
 - `**add ns ip** <IPAddress>@ <netmask> -**type VIP** -**hostRoute** (**ENABLED** | **DISABLED**) -**tag** <positive_integer>`
 - `show ns ip <IPAddress>`
- If reconfiguring an existing VIP address:
 - `**set ns ip** <IPAddress>@ <netmask> -**type VIP** -**hostRoute** (**ENABLED** | **DISABLED**) -**tag** <positive_integer>`
 - `show ns ip <IPAddress>`

To configure the network route and tag parameters of a VIP address by using the GUI:

1. Navigate to **System > Network > IPs > IPV4s**.
2. Set the **Host Route** and **Tag** parameters while adding a VIP address or modifying an existing VIP address.

Configuring Bidirectional Forwarding Detection

May 2, 2023

Bidirectional Forwarding Detection (BFD) protocol is a mechanism for fast detection of failures of forwarding paths. BFD detects path failures in the order of milliseconds. BFD is used with dynamic routing protocols.

In BFD operation, routing peers exchange BFD packets at a negotiated interval. If a packet is not received from a peer within the negotiated interval plus grace interval, the peer is considered to be dead and a notification will be sent to the set of registered routing protocols. In turn, the routing protocols recalculate the best path and reprogram the routing table. BFD supports smaller time interval, when compared to the timers provided by the routing protocols, thus resulting in faster detection of failures.

The NetScaler appliance supports BFD for the following routing protocols: BGP (IPv4 and IPv6), OSPFv2 (IPv4), and OSPFv3 (IPv6). BFD support in the NetScaler appliance is compliant with RFCs 5880, 5881, and 5883.

Points to Consider for Configuring Bidirectional Forwarding Detection

Before you start configuring BFD, consider the following points:

- Make sure that you understand the different components of BFD, described in RFCs 5880, 5881, and 5883.
- BFD on a NetScaler appliance is supported for the following routing protocols:
 - BGP (IPv4 and IPv6)
 - OSPFv2 (IPv4)
 - OSPFv3 (IPv6)
- BFD on a NetScaler appliance is not supported for the following routing protocols:
 - ISIS
 - RIP (IPv4)
 - RIPng (IPv6)
- The following BFD features are not supported on a NetScaler appliance:

- BFD Echo mode
 - BFD Authentication
 - BFD Demand asynchronous mode
- The minimum values for BFD interval and BFD Rx timers are 100 milliseconds.
 - When BFD is used in a topology with shared IP addresses (for example, Layer 2 high availability setup with SNIP addresses or a cluster setup with striped IP addresses), BFD brings down the active sessions during a failover because the BFD failure detection time (order of milliseconds) is lesser than the HA failover detection interval (3–4 seconds). Therefore, Citrix recommends usage of Graceful restart in layer-2 HA topologies as the routes are retained during the failover process.

Configuration Steps

Configuring BFD on a NetScaler appliance consists of the following tasks:

- Configure BFD Parameters
- Configure BFD Support for Dynamic Routing Protocols

Configure BFD Parameters

The NetScaler appliance provides separate BFD session parameters for single hop sessions, IPv4 multiple hop sessions, and IPv6 multiple hop sessions. If you do not configure BFD parameters for a type of session, the default values are applied for that session.

The default value of each BFD parameter is same for single hop sessions, IPv4 multiple hop sessions, and IPv6 multiple hop sessions. The following table displays the default value of each BFD parameter.

BFD Parameter Name	Default Value
Interval	750 milliseconds
Minimum Rx	500 milliseconds
Multiplier	3

IMPORTANT:

Mellanox NICs in a NetScaler ADC appliance take around 1500 ms to initialize. You must set the BFD timers to more than 1500 ms for a NetScaler appliance with Mellanox NICs. Citrix recommends setting the BFD timers to 3000 ms:

- Interval Tx = 600 ms
- Minimum Rx = 600 ms
- Multiplier = 5

Configuring BFD Parameters for a Single Hop Session

To configure BFD parameters for a single hop session by using the **VTYSH** command line, at the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vtysh</code>	Display VTYSH command prompt.
<code>configure terminal</code>	Enter global configuration mode.
<code>interface vlan ID></code>	Enter the interface configuration mode.
<code>bfd singlehop-peer interval <num> minrx <num> multiplier <num></code>	Configure the BFD parameters on the specified interface.

Sample configuration:

```

1 > vtys
2
3 ns# configure terminal
4
5 ns(config)# interface vlan3
6
7 ns(config-if)# bfd singlehop-peer interval 200 minrx 200 multiplier 5
8
9 ns(config-if)# exit

```

Configuring BFD Parameters for IPv4 Multiple Hop Sessions

To configure BFD parameters for IPv4 multiple hop sessions by using the **VTYSH** command line, at the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vtysh</code>	Display VTYSH command prompt.
<code>configure terminal</code>	Enter global configuration mode.

Command	Specifies
<code>bfd multihop-peer <ipv4addr> interval <num> minrx <num> multiplier <num></code>	Configure the BFD parameters for IPv4 multiple hops sessions.

Sample configuration:

```

1    > vtysh
2
3    ns# configure terminal
4
5    ns(config)# bfd multihop-peer 20.20.20.138 interval 300 minrx 300
        multiplier 5
6
7    ns(config)# exit

```

Configuring BFD Parameters for IPv6 Multiple Hop Sessions

To configure BFD parameters for IPv6 multiple hop sessions by using the **VTYSH** command line, at the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vtys</code>	Display VTYSH command prompt.
<code>configure terminal</code>	Enter global configuration mode.
<code>bfd multihop-peer ipv6 <ipv6addr> interval <num> minrx <num> multiplier <num></code>	Configure the BFD parameters for IPv6 multiple hops sessions.

Sample configuration:

```

1    > vtysh
2
3    ns(config)# bfd multihop-peer ipv6 20fe:125::138 interval 500 minrx
        500 multiplier 5
4
5    ns(config)# exit

```

Configure BFD Support for Dynamic Routing Protocols

You can enable BFD for a dynamic routing protocol for a type of session with a peer. For example, single hop and multiple hops. The NetScaler appliance applies the relevant BFD parameter settings to the session.

Configuring BFD for an IPv4 BGP Single Hop Session

To configure BFD for an IPv4 BGP single hop session by using the **VTYSH** command line, at the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vttysh</code>	Display VTYSH command prompt.
<code>configure terminal</code>	Enter global configuration mode.
<code>router bgp <asnumber></code>	BGP autonomous system. <code>asnumber</code> is a required parameter.
<code>neighbor <ipv4addr> remote-as <num></code>	Update the IPv4 BGP table with the IPv4 address of the neighbor in the specified autonomous system.
<code>neighbor <ipv4addr> fall-over bfd</code>	Enable BFD for the specified neighbor.

Sample configuration:

```
1 > vtysh
2
3 ns# configure terminal
4
5 ns(config)#router bgp 1
6
7 ns(config-router)#neighbor 20.20.20.138 remote-as 1
8
9 ns(config-router)#neighbor 20.20.20.138 fall-over bfd
10
11 ns(config-router)#redistribute kernel
12
13 ns(config-router)#exit
```

Configuring BFD for an IPv4 BGP Multiple Hop Session

To configure BFD for an IPv4 BGP multiple hop session by using the **VTYSH** command line, at the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vtys</code>	Display <code>VTYSH</code> command prompt.
<code>configure terminal</code>	Enter global configuration mode.
<code>router bgp <asnumber></code>	BGP autonomous system. <code>asnumber</code> is a required parameter.
<code>neighbor <ipv4addr> remote-as <num></code>	Update the IPv4 BGP table with the IPv4 address of the neighbor in the specified autonomous system.
<code>neighbor <ipv4addr> fall-over bfd multihop</code>	Enable BFD for the specified neighbor.

Sample configuration:

```

1    > vtys
2
3    ns# configure terminal
4
5    ns(config)#router bgp 1
6
7    ns(config-router)#neighbor 20.20.20.138 remote-as 1
8
9    ns(config-router)#neighbor 20.20.20.138 fall-over bfd multihop
10
11   ns(config-router)#redistribute kernel
12
13   ns(config-router)#exit

```

Configuring BFD for an IPv6 BGP Single Hop Session

To configure BFD for an IPv6 BGP single hop session by using the `VTYSH` command line, at the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vtys</code>	Display <code>VTYSH</code> command prompt.
<code>configure terminal</code>	Enter global configuration mode.
<code>router bgp <asnumber></code>	BGP autonomous system. <code>asnumber</code> is a required parameter.

Command	Specifies
<code>neighbor <ipv6addr> remote-as <num></code>	Update the IPv6 BGP table with the link local IPv6 address of the neighbor in the specified autonomous system.
<code>neighbor <ipv6addr> fall-over bfd</code>	Enable BFD for the specified neighbor.
<code>address-family ipv6</code>	Enter address family configuration mode.
<code>neighbor <ipv6addr> activate</code>	Exchange prefixes for the IPv6 router family between the peer and the local node by using the link local address.

Sample configuration:

```

1 > vtysh
2
3 ns# configure terminal ns(config)#router bgp 1
4
5 ns(config-router)#neighbor 30fe:123::124 remote-as 1
6
7 ns(config-router)#neighbor 30fe:123::124 fall-over bfd
8
9 ns(config-router)#address-family ipv6
10
11 ns(config-router-af)#neighbor 30fe:123::124 activate
12
13 ns(config-router-af)#redistribute kernel
14
15 ns(config-router-af)#exit

```

Configuring BFD for an IPv6 BGP Multiple Hop Session

To configure BFD for an IPv6 BGP multiple hop session by using the **VTYSH** command line, at the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vtys</code>	Display VTYSH command prompt.
<code>configure terminal</code>	Enter global configuration mode.
<code>router bgp <asnumber></code>	BGP autonomous system. <code>asnumber</code> is a required parameter.

Command	Specifies
<code>neighbor <ipv6addr> remote-as <num></code>	Update the IPv6 BGP table with the link local IPv6 address of the neighbor in the specified autonomous system.
<code>neighbor <ipv6addr> fall-over bfd multihop</code>	Enable BFD for the specified neighbor.
<code>address-family ipv6</code>	Enter address family configuration mode.
<code>neighbor <ipv6addr> activate</code>	Exchange prefixes for the IPv6 router family between the peer and the local node by using the link-local address.

Sample configuration:

```
1 > vtysh
2
3 ns# configure terminal
4
5 ns(config)# bfd multihop-peer ipv6 20fe:125::138 interval 500 minrx 500
   multiplier 5
6
7 ns(config)#router bgp 1
8
9 ns(config-router)#neighbor 20fe:125::138 remote-as 1
10
11 ns(config-router)#neighbor 20fe:125::138 fall-over bfd multihop
12
13 ns(config-router)#address-family ipv6
14
15 ns(config-router-af)#neighbor 20fe:125::138 activate
16
17 ns(config-router-af)#redistribute kernel
18
19 ns(config-router-af)#end
```

Configuring BFD for OSPFv2 (IPv4) on Interfaces

You can enable BFD on all or on a specific interface that uses the OSPFv2 protocol.

To configure BFD for OSPFv2 on all interfaces by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vttysh</code>	Display VTYSH command prompt.
<code>configure terminal</code>	Enter global configuration mode.
<code>router ospf <process tag></code>	Enter OSPFv2 configuration mode.
<code>bfd all-interfaces</code>	Enable BFD on all interfaces that use OSPFv2.

Sample configuration:

```

1 > vtysh
2
3 ns# configure terminal
4
5 ns(config)#router ospf 1
6
7 ns(config-router)#bfd all-interfaces
8
9 ns(config-router)#redistribute kernel
10
11 ns(config-router)#exit

```

To configure BFD for OSPFv2 on a specific interface by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vttysh</code>	Display VTYSH command prompt.
<code>configure terminal</code>	Enter global configuration mode.
<code>interface <vlan ID></code>	Enter the interface configuration mode.
<code>ip ospf bfd</code>	Enable BFD on the specified interface that uses OSPFv2.

Sample configuration:

```

1 > vtysh
2
3 ns# configure terminal
4
5 ns(config)# interface vlan5
6
7 ns(config-if)# ip ospf bfd
8
9 ns(config-if)# exit

```

Configuring BFD for OSPFv3 (IPv6) on Interfaces

You can enable BFD on all or on a specific interface that uses the OSPFv3 protocol.

To configure BFD for OSPFv3 on all interfaces by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vtysh</code>	Display VTYSH command prompt.
<code>configure terminal</code>	Enter global configuration mode.
<code>router ipv6 ospf <process tag></code>	Enter OSPFv3 configuration mode.
<code>bfd all-interfaces</code>	Enable BFD on all interfaces that use OSPFv3.

Sample configuration:

```

1    > vtysh
2
3    ns# configure terminal
4
5    ns(config)#router ipv6 ospf 10
6
7    ns(config-router)#bfd all-interfaces
8
9    ns(config-router)#redistribute kernel
10
11   ns(config-router)#exit

```

To configure BFD for OSPFv3 on a specific interface by using the VTYSH command line:

At the command prompt, type the following commands, in the order shown:

Command	Specifies
<code>vtysh</code>	Display VTYSH command prompt.
<code>configure terminal</code>	Enter global configuration mode.
interface <vlan ID>	Enter the interface configuration mode.
<code>ipv6 ospf bfd</code>	Enable BFD on the specified interface that uses OSPFv3.

Sample configuration:

```
1 > vtysh
2
3 ns# configure terminal
4
5 ns(config)# interface vlan15
6
7 ns(config-if)# ipv6 ospf bfd
8
9 ns(config-if)# exit
```

Configuring Static Routes

January 6, 2025

You can create static routes manually to:

- improve the performance of your network.
- monitor static routes to avoid service disruptions.

You can assign weights to ECMP routes. You can create null routes to prevent routing loops.


Monitored Static Routes: If a manually created (static) route goes down, a backup route is not automatically activated. You must manually delete the inactive primary static route. However, if you configure the static route as a monitored route, the NetScaler appliance can automatically activate a backup route.

Static route monitoring can also be based on the accessibility of the subnet. A subnet is connected to a single interface, but it can be logically accessed through other interfaces. Subnets bound to a VLAN are accessible only if the VLAN is up. VLANs are logical interfaces through which NetScaler transmits and receives packets. A static route is marked as DOWN if the next hop resides on a subnet that is unreachable.

Note:

In a high availability (HA) setup, the default value for monitored state routes (MSRs) on the secondary node is UP. The value is set to avoid a state transition gap upon failover, which might result in dropping packets on those routes.

Consider the following simple topology, in which a NetScaler is load balancing traffic to a site across multiple servers.

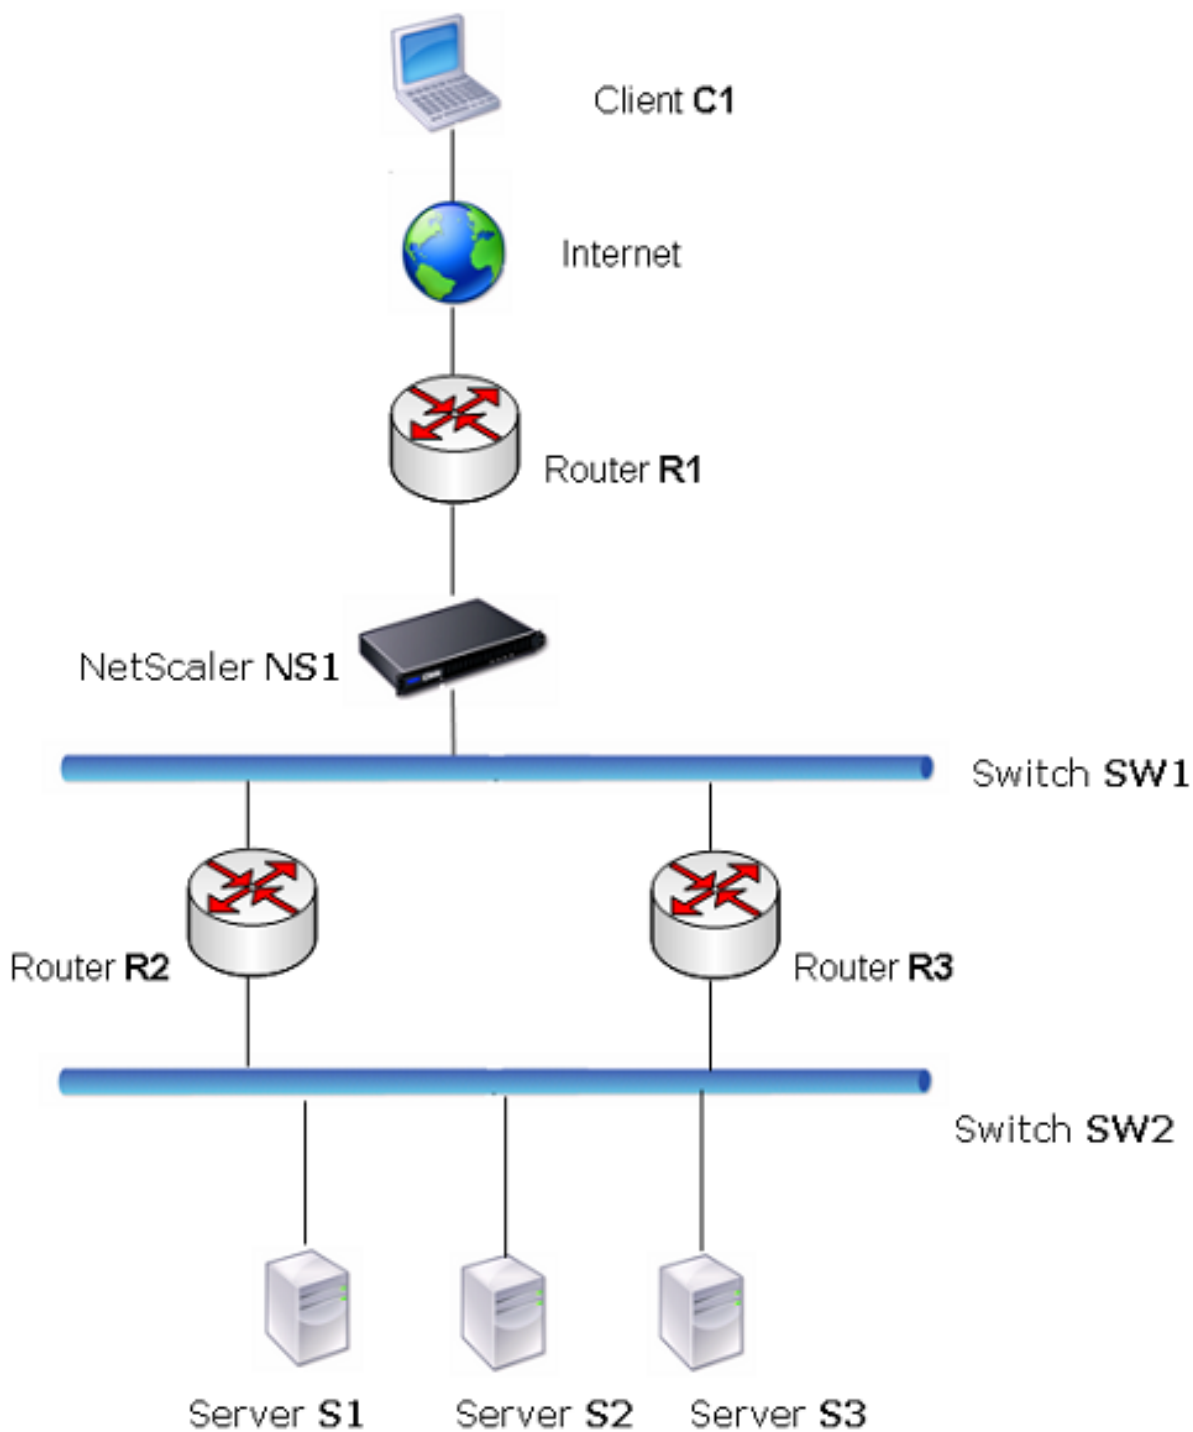

Router R1 moves traffic between the client and NetScaler.
The appliance can reach servers S1 and S2 through routers R2 or R3. It has two static routes through

which to reach the servers' subnet, one with R2 as the gateway and another with R3 as the gateway. Both these routes have monitoring enabled. The administrative distance of the static route with gateway R2 is lower than the administrative distance of the static route with gateway R3.

Therefore, R2 is preferred over R3 to forward traffic to the servers.

Also, the default route on the NetScaler points to R1 so that all Internet traffic exits properly.

If R2 fails while monitoring is enabled on the static route, which uses R2 as the gateway, NetScaler marks it as DOWN. NetScaler now uses the static route with R3 as the gateway and forwards the traffic to the servers through R3.

NetScaler supports monitoring of IPv4 and IPv6 static routes.

You can configure NetScaler to monitor an IPv4 static route by:

- Creating an ARP or PING monitor.
- Using existing ARP or PING monitors.

You can configure NetScaler to monitor an IPv6 static route by:

- Creating a neighbor discovery for IPv6 (ND6) or PING monitor.
- Using the existing ND6 or PING monitors.

Weighted Static Routes: When NetScaler makes routing decisions involving routes with equal distance and cost, that is, Equal Cost Multi-Path (ECMP) routes, it balances the load between them by using a hashing mechanism based on the source and destination IP addresses. For an ECMP route, however, you can configure a weight value. NetScaler then uses both the weight and the hashed value for balancing the load.

Null Routes: If the route chosen in a routing decision is inactive, NetScaler chooses a backup route. If all the backup routes become inaccessible, the appliance might reroute the packet to the sender, which might result in a routing loop leading to network congestion. To prevent this situation, you can create a null route, which adds a null interface as a gateway. The null route is never the preferred route, because it has a higher administrative distance than the other static routes. But it is selected if the other static routes become inaccessible. In that case, the appliance drops the packet and prevents a routing loop.

Configuring IPv4 Static Routes

You can add a simple static route or a null route by setting a few parameters, or you can set more parameters to configure a monitored, or monitored and weighted static route. You can change the parameters of a static route. For example, you might want to assign a weight to an unweighted route, or you might want to disable monitoring on a monitored route.

CLI procedures

To create a static route by using the CLI:

At the command prompt, type:

- `add route <network> <netmask> <gateway>[-cost <positive_integer>] [-advertise (DISABLED | ENABLED)]`
- `show route [<network> <netmask> [<gateway>]] [<routeType>] [-detail]`

Example:

```

1 > add route 5.5.5.0 255.255.255.0 10.102.37.5 -cost 2 -advertise
   ENABLED
2 Done
3
4 > sh route
5      Network      Netmask      Gateway/OwnedIP  VLAN
      State  Traff
      ic Domain  Type
6      -----
      -----
7 1)    0.0.0.0      0.0.0.0      10.102.37.1      0      UP
      0
      STATIC
8 2)    127.0.0.0     255.0.0.0     127.0.0.1        0      UP
      0
      PERMANENT
9 3)    10.102.37.0    255.255.255.0 10.102.37.40     0      UP
      0
      DIRECT
10 4)    5.5.5.0          255.255.255.0 10.102.37.5      0      UP
      0
      STATIC
11 5)    6.6.6.0          255.255.255.0 10.102.37.6      0      UP
      0
      STATIC
12 Done

```

To create a monitored static route by using the CLI:

At the command prompt, type the following commands to create a monitored static route and verify the configuration:

- `add route <network> <netmask> <gateway> [-distance <positive_integer>] [-weight <positive_integer>][-msr (ENABLED | DISABLED)[-monitor <string>]]`
- `show route [<network> <netmask> [<gateway>]] [<routeType>] [-detail]`

Example:

```
1 > add route 10.102.29.0 255.255.255.0 10.102.29.3 -distance 5 -weight 6
   -msr ENBLED -monitor PING
2 Done
```

To create a null route by using the CLI:

At the command prompt type:

- `add route <network> <netmask> null`
- `show route <network> <netmask>`

Example:

```
1 > add route 10.102.29.0 255.255.255.0 null
2 Done
```

To remove a static route by using the CLI:

At the command prompt, type:

```
rm route \<<network> \<<netmask> \<<gateway>
```

Example:

```
1 > rm route 10.102.29.0 255.255.255.0 10.102.29.3
2 Done
```

GUI procedures

To configure a static route by using the GUI:

Navigate to **System > Network > Routes** and, on the **Basic** tab, add a new static route, or edit an existing static route.

To remove a route by using the GUI:

Navigate to **System > Network > Routes** and, on the **Basic** tab, delete the static route.

Configuring IPv6 Static Routes

You can configure a maximum of six default IPv6 static routes. IPv6 routes are selected based on whether the MAC address of the destination device is reachable. This can be determined by using the IPv6 Neighbor Discovery feature. Routes are load balanced and only source/destination-based hash mechanisms are used. Therefore, route selection mechanisms such as round robin are not supported. The next hop address in the default route need not belong to the NSIP subnet.

CLI procedures

To create an IPv6 route by using the CLI:

At the command prompt, type the following commands to create an IPv6 route and verify the configuration:

- `add route6 <network> <gateway> [-vlan <positive_integer>]`
- `show route6 [<network> [<gateway>]`

Example:

```

1 > add route6 3ffa::0/64 9004::b
2 Done
3 > add route6 3ffb::0/64 9004::c
4 Done
5 > sh route6
6
7  Flags: S - Static, L - LB Route, C - Connected, R - RA Route, A -
      Active, O - OSPFV3, n - RIPng, B - BGP, i - ISIS, P - Permanent
8
9  Network                Gateway                Vlan
10  -----                - Traffic Domain -----
11  1) ::1/128              ::1                    1
12                          PA                      0
13  2) 3ffa::/64            9004::b                0
14                          SA                      0
15  3) 3ffb::/64            9004::c                0
16                          SA                      0
17  4) 9004::/96            9004::a                0
18                          CA                      0
19  5) fe80::/64            fe80::3c03:2fff:fe9e:d5e1 1
20                          CA                      0
21 Done

```

To create a monitored IPv6 static route by using the CLI:

At the command prompt, type the following commands to create a monitored IPv6 static route and verify the configuration:

- `add route6 <network> <gateway> [-msr (ENABLED | DISABLED)] [-monitor <string>]`
- `show route6 [<network> [<gateway>]`

Example:

```
1 > add route6 ::/0 2004::1 -msr ENABLED -monitor PING
2 Done
```

To remove an IPv6 route by using the CLI:

At the command prompt, type:

```
rm route6 <network> <gateway>
```

Example:

```
1 > rm route6 ::/0 FE80::67
2 Done
```

GUI procedures

To configure an IPv6 route by using the GUI:

Navigate to **System > Network > Routes**, and on the **IPv6** tab, add a new IPv6 route, or edit an existing IPv6 route.

To remove an IPv6 route by using the GUI:

Navigate to **System > Network > Routes**, and on the **IPv6** tab, delete the IPv6 route.

Route Health Injection Based on Virtual Server Settings

May 2, 2023

The following option and parameter are introduced for controlling the Route Health Injection (RHI) functionality of the NetScaler appliance for advertising the route of a VIP address.

- **VSVR_CNTRLD**. It is an option for the (Vserver RHI Level) parameter of a VIP address. When this option is set to the Vserver RHI Level parameter, the RHI behavior for advertising the route of the

VIP address depends on the RHI STATE parameter setting on all the associated virtual servers of the VIP address along with their states.

- **RHI STATE.** It is a parameter of virtual server. You can set the RHI STATE parameter to either PASSIVE or ACTIVE. By default, the RHI STATE parameter is set to PASSIVE.

For a VIP address, when RHI (Vserver RHI Level) parameter is set to VSVR_CNTRL, the following are different RHI behaviours for the VIP address on the basis of RHI STATE settings on the virtual servers associated with the VIP address:

- If you set RHI STATE to PASSIVE on all virtual servers, the NetScaler always advertises the route for the VIP address.
- If you set RHI STATE to ACTIVE on all virtual servers, the NetScaler advertises the route for the VIP address if at least one of the associated virtual servers is in UP state.
- If you set RHI STATE to ACTIVE on some and PASSIVE on others, the NetScaler advertises the route for the VIP address if at least one of the associated virtual servers, whose RHI STATE set to ACTIVE, is in UP state.

Following table displays the sample RHI behaviour for a VIP address on the basis of RHI STATE settings on the virtual servers associated with the VIP address. The NetScaler appliance has two virtual servers V1 and V2 associated with the VIP address:

Associated virtual servers for a VIP	State 1	State 2	State 3	State 4
RHI State set to PASSIVE on all virtual servers				
V1	UP	UP	DOWN	DOWN
V2	UP	DOWN	UP	DOWN
Advertise the route for this VIP address?	Yes	Yes	Yes	Yes
RHI State set to ACTIVE on all virtual servers				
V1	UP	UP	DOWN	DOWN
V2	UP	DOWN	UP	DOWN
Advertise the route for this VIP address?	Yes	Yes	Yes	No
RHI State set to ACTIVE on one virtual server and PASSIVE on the other				
V1 (RHI State = ACTIVE)	UP	UP	DOWN	DOWN

Associated virtual servers for a VIP	State 1	State 2	State 3	State 4
V2 (RHI State = PASSIVE)	UP	DOWN	UP	DOWN
Advertise the route for this VIP address?	Yes	Yes	No	No

To configure RHI for a VIP address, to be based on the RHI (RHI State) parameter setting of the associated virtual servers, perform the following steps:

- Set the RHI (Vserver RHI Level) parameter to `VSVR_CNTRLD` for the VIP address.
- Set the RHI State parameter for each virtual server associated with the VIP address.

To set the vServer RHI Level for a VIP address by using the CLI:

At the command prompt, type:

- **set ns ip** <IPAddress> [-**vserverRHILevel** <vserverRHILevel>]

To set the RHI State parameter of a virtual server by using the CLI:

At the command prompt, type:

- **set lb vserver** <name> [-**RHIstate** (**PASSIVE** | **ACTIVE**)]

To set the vServer RHI Level for a VIP address by using GUI

1. Navigate to **System > Network > IPs**.
2. Select a VIP address, and then click **Edit**.
3. Set the **Vserver RHI Level** parameter to **VSVR_CNTRLD**, and then click **OK**.

To set the RHI State parameter of a virtual server by using GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select a load balancing virtual server, and then click **Edit**.
3. Set the **RHI State** parameter, and then click **OK**.

Configuring Policy-Based Routes

May 2, 2023

Policy-based routing bases routing decisions on criteria that you specify. A policy-based route (PBR) specifies criteria for selecting packets and, typically, a next hop to which to send the selected packets. For example, you can configure the NetScaler appliance to route outgoing packets from a specific IP address or range to a particular next hop router. Each packet is matched against each configured PBR, in the order determined by the specified priorities, until a match is found. If no match is found, or if the matching PBR specifies a DENY action, the NetScaler applies the routing table for normal destination-based routing.

A PBR bases routing decisions for the data packets on parameters such as source IP address, source port, destination IP address, destination port, protocol, and source MAC address. A PBR defines the conditions that a packet must satisfy for the NetScaler to route the packet. These actions are known as “processing modes.” The processing modes are:

- **ALLOW.** The appliance sends the packet to the designated next-hop router.
- **DENY.** The NetScaler applies the routing table for normal destination-based routing.

You can create PBRs for outgoing IPv4 and IPv6 traffic.

Many users begin by creating PBRs and then modifying them. To activate a new PBR, you must apply it. To deactivate a PBR, you can either remove or disable it. You can change the priority number of a PBR to give it a higher or lower precedence.

Policy-Based Routes (PBR) for IPv4 Traffic

May 2, 2023

Configuring PBRs involves the following tasks:

- Create a PBR.
- Apply PBRs.
- (Optional) Disable or enable a PBR.
- (Optional) Renumber the priority of the PBR.

Creating or Modifying a PBR

You cannot create two PBRs with the same parameters. If you attempt to create a duplicate, an error message appears.

You can configure the priority of a PBR. The priority (an integer value) defines the order in which the NetScaler appliance evaluates PBRs. When you create a PBR without specifying a priority, the NetScaler automatically assigns a priority that is a multiple of 10.

If a packet matches the condition defined by the PBR, the NetScaler performs an action. If the packet does not match the condition defined by the PBR, the NetScaler compares the packet against the PBR with the next highest priority.

Instead of sending the selected packets to a next hop router, you can configure the PBR to send them to a link load balancing virtual server to which you have bound multiple next hops. This configuration can provide a backup if a next hop link fails.

Consider the following example. Two PBRs, p1 and p2, are configured on the NetScaler and automatically assigned priorities 20 and 30. You need to add a third PBR, p3, to be evaluated immediately after the first PBR, p1. The new PBR, p3, must have a priority between 20 and 30. In this case, you can specify the priority as 25.

CLI procedures

To create a PBR by using the CLI:

At the command prompt, type:

- `add ns pbr <name> <action> [-srcIP [<operator>] <srcIPVal>] [-srcPort [<operator>] <srcPortVal>] [-destIP [<operator>] <destIPVal>] [-destPort [<operator>] <destPortVal>] [-nextHop <nextHopVal>] [-srcMac <mac_addr>] [-protocol <protocol> | -protocolNumber <positive_integer>] [-vlan <positive_integer>] [-interface <interface_name>] [-priority <positive_integer>] [-msr (ENABLED | DISABLED)] [-monitor <string>]] [-state (ENABLED | DISABLED)]`
- `show ns pbr`

Example:

```
1 > add ns pbr pbr1 allow -srcip 10.102.37.252 -destip 10.10.10.2 -
    nexthop 10.102.29.77
2 Done
```

To modify the priority of a PBR by using the CLI:

At the command prompt, type the following commands to modify the priority and verify the configuration:

- `set ns pbr <name> [-action (ALLOW | DENY)] [-srcIP [<operator>] <srcIPVal>] [-srcPort [<operator>] <srcPortVal>] [-destIP [<operator>] <destIPVal>] [-destPort [<operator>] <destPortVal>] [-nextHop <nextHopVal>] [-srcMac <mac_addr>] [-protocol <protocol> | -protocolNumber <positive_integer>] [-vlan <positive_integer>] [-interface <interface_name>] [-priority <positive_integer>] [-msr (ENABLED | DISABLED)] [-monitor <string>]] [-state (ENABLED | DISABLED)]`
- `show ns pbr [<name>]`

Example:

```
1 > set ns pbr pbr1 -priority 23
2 Done
```

To remove one or all PBRs by using the CLI:

At the command prompt, type one of the following commands:

- `rm ns pbr <name>`
- `clear ns pbrs`

Example:

```
1 > rm ns pbr pbr1
2 Done
3
4 > clear ns PBRs
5 Done
```

GUI procedures

To create a PBR by using the GUI:

Navigate to System > Network > PBRs, on the PBRs tab, add a new PBR, or edit an existing PBR.

To remove one or all PBRs by using the GUI:

Navigate to System > Network > PBRs, on the PBRs tab, delete the PBR.

Applying a PBR

You must apply a PBR to activate it. The following procedure reapplies all PBRs that you have not disabled. The PBRs constitute a memory tree (lookup table). For example, if you create 10 PBRs (p1 - p10), and then you create another PBR (p11) and apply it, all of the PBRs (p1 - p11) are freshly applied and a new lookup table is created. If a session has a DENY PBR related to it, the session is destroyed.

You must apply this procedure after every modification you make to any PBR. For example, you must follow this procedure after disabling a PBR.

Note: PBRs created on the NetScaler appliance do not work until they are applied.

To apply a PBR by using the CLI:

At the command prompt, type:

```
apply ns PBRs
```

To apply a PBR by using the GUI:

1. Navigate to System > Network > PBRs.
2. On the PBRs tab, select the PBR, in the Action list, select Apply.

Enabling or Disabling PBRs

By default, the PBRs are enabled. This means that when PBRs are applied, the NetScaler appliance automatically compares incoming packets against the configured PBRs. If a PBR is not required in the lookup table, but it needs to be retained in the configuration, it must be disabled before the PBRs are applied. After the PBRs are applied, the NetScaler does not compare incoming packets against disabled PBRs.

To enable or disable a PBR by using the CLI:

At the command prompt, type one of the following commands:

- `enable ns pbr <name>`
- `disable ns pbr <name>`

Example:

```
1 > enable ns PBR pbr1
2 Done
3 > show ns PBR pbr1
4 1) Name: pbr1
5 Action: ALLOW Hits: 0
6 srcIP = 10.102.37.252
7 destIP = 10.10.10.2
8 srcMac: Protocol:
9 Vlan: Interface:
10 Active Status: ENABLED Applied Status: APPLIED
11 Priority: 10
12 NextHop: 10.102.29.77
13
14 Done
15
16 > disable ns PBR pbr1
17 Warning: PBR modified, use 'apply pbrs' to commit this operation
18
19 > apply pbrs
20 Done
21
22 > show ns PBR pbr1
23 1) Name: pbr1
24 Action: ALLOW Hits: 0
25 srcIP = 10.102.37.252
26 destIP = 10.10.10.2
27 srcMac: Protocol:
28 Vlan: Interface:
29 Active Status: DISABLED Applied Status:
NOTAPPLIED
```

```
30          Priority: 10
31          NextHop: 10.102.29.77
32 Done
```

To enable or disable a PBR by using the GUI:

1. Navigate to System > Network > PBRs.
2. On the PBRs tab, select the PBR, in the Action list, select Enable or Disable.

Renumbering PBRs

You can automatically renumber the PBRs to set their priorities to multiples of 10.

To renumber PBRs by using the CLI:

At the command prompt, type:

- `renumber ns pbrs`

To renumber PBRs by using the GUI:

Navigate to System > Network > PBRs, on the PBRs tab, in the Action list, select Renumber Priority (s).

Use Case - PBR with Multiple Hops

Consider a scenario in which two PBRs, PBR1 and PBR2, are configured on NetScaler appliance NS1. PBR1 routes all the outgoing packets, with source IP address as 10.102.29.30, to next hop router R1. PBR2 routes all the outgoing packets, with source IP address as 10.102.29.90, to next hop router R2. R3 is another next hop router connected to NS1.

If router R1 fails, all the outgoing packets that matched against PBR1 are dropped. To avoid this situation, you can specify a link load balancing (LLB) virtual server in the next hop field while creating or modifying a PBR. Multiple next hops are bound to the LLB virtual server as services (for example R1, R2, and R3). Now, if R1 fails, all the packets that matched against PBR1 are routed to R2 or R3 as determined by the LB method configured on the LLB virtual server.

The NetScaler appliance throws an error if you attempt to create a PBR with an LLB virtual server as the next hop in the following cases:

- Adding another PBR with the same LLB virtual server.
- Specifying a nonexistent LLB virtual server.
- Specifying an LLB virtual server for which the bound services are not next hops.
- Specifying an LLB virtual server for which the LB method is not set to one of the following:
 - ROUNDROBIN

- DESTINATIONIPHASH
 - SOURCEIPHASH
 - SRCIPDESTIPHASH
 - LEASTPACKETS
 - LEASTBANDWIDTH
 - LTRM
 - CALLIDHASH
 - CUSTOM LOAD
- Specifying an LLB virtual server for which the LB persistence type is not set to one of the following:
 - DESTIP
 - SOURCEIP
 - SRCDESTIP

The following table lists the names and values of the entities configured on the NetScaler appliance:

Entity Type	Name	IP Address
Link load balancing virtual server	LLB1	NA
Services (next hops)	Router1	1.1.1.254
	Router2	2.2.2.254
	Router3	3.3.3.254
PBRs	PBR1	NA
	PBR2	NA

Table 1. Sample Values for Creating Entities

To implement the configuration described above, you need to:

1. Create services Router1, Router2, and Router3 that represent next hop routers R1, R2, and R3.
2. Create link load balancing virtual server LLB1 and bind services Router1, Router2, and Router3 to it.
3. Create PBRs PBR1 and PBR2, with next hop fields set as LLB1 and 2.2.2.254 (IP address of the router R2), respectively.

To create a service by using the CLI:

At the command prompt, type:

- add service <name> <IP> <serviceType> <port>

- show service <name>

Example:

```
1 > add service Router1 1.1.1.254 ANY *
2   Done
3 > add service Router2 2.2.2.254 ANY *
4   Done
5 > add service Router3 3.3.3.254 ANY *
6   Done
```

To create a service by using the GUI:

Navigate to Traffic Management > Load Balancing > Services, and create a service.

To create a link load balancing virtual server and bind a service by using the CLI:

At the command prompt, type:

- add lb vserver <name> <serviceType>
- bind lb vserver < name> <serviceName>
- show lb vserver < name>

Example:

```
1 > add lb vserver LLB1 ANY
2   Done
3 > bind lb vserver LLB1 Router1 Router2 Router3
4   Done
```

To create a link load balancing virtual server and bind a service by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Virtual Servers, and create a virtual server for link load balancing. Specify **ANY** in the **Protocol** field.

Note: Make sure that

Directly Addressable is unchecked.

2. Under the **Services** tab, in the **Active** column, select the check box for the service that you want to bind to the virtual server.

To create a PBR by using the CLI:

At the command prompt, type:

- add ns pbr <name> <action> [-srcIP [<operator>] <srcIPVal>] [-nextHop <nextHopVal>]
- show ns pbr

Example:

```
1 > add pbr PBR1 ALLOW -srcIP 10.102.29.30 -nextHop LLB1
2   Done
3 > add pbr PBR2 ALLOW -srcIP 10.102.29.90 -nextHop 2.2.2.254
```

To create a PBR by using the GUI:

Navigate to System > Network > PBRs, on the PBRs tab, add a new PBR.

Policy-Based Routes (PBR6) for IPv6 Traffic

May 2, 2023

Configuring PBR6s involves the following tasks:

- Create a PBR6.
- Apply PBR6s.
- (Optional) Disable or enable a PBR6.
- (Optional) Renumber the priority of the PBR6.

Creating or Modifying a PBR6

You cannot create two PBR6s with the same parameters. If you attempt to create a duplicate, an error message appears.

You can configure the priority of a PBR6. The priority (an integer value) defines the order in which the NetScaler appliance evaluates PBR6s. When you create a PBR6 without specifying a priority, the NetScaler automatically assigns a priority that is a multiple of 10.

If a packet matches the condition defined by the PBR6, the NetScaler performs an action. If the packet does not match the condition defined by the PBR6, the NetScaler compares the packet against the PBR6 with the next highest priority.

CLI procedures

To create a PBR6 by using the CLI:

At the command prompt, type:

- ****add ns pbr6**** <name> <action> [-srcIPv6 [<operator>] <srcIPv6Val>] [-srcPort [<operator>] <srcPortVal>] [-destIPv6 [<operator>] <destIPv6Val>] [-destPort [<operator>] <destPortVal>] [-srcMac <mac_addr>] [-protocol <protocol>] [-protocolNumber <positive_integer>] [-vlan <positive_integer>] [-interface <interface_name>] [-priority <positive_integer>] [-state (ENABLED | DISABLED)] [-msr (ENABLED | DISABLED)] [-monitor <string>]] [-nextHop <nextHopVal>] [-nextHopVlan <positive_integer>]

- `show ns pbr`

To modify or remove a PBR6 by using the CLI:

To modify a PBR6, type the **set pbr6** <name> command and the parameters to be changed, with their new values.

To remove one or all PBR6s by using the CLI:

At the command prompt, type one of the following commands:

- **rm ns pbr6** <name>
- **clear ns pbr6**

GUI procedures

To create or modify a PBR6 by using the GUI:

Navigate to System > Network > PBRs and, on the PBR6s tab, add a new PBR6, or edit an existing PBR6.

To remove one or all PBR6s by using the GUI:

Navigate to System > Network > PBRs and, on the PBR6s tab, delete the PBR6.

Applying PBR6s

You must apply a PBR6 to activate it. The following procedure reapplies all PBR6s that you have not disabled. The PBR6s constitute a memory tree (lookup table). For example, if you create 10 PBR6s (p6_1 - p6_10), and then you create another PBR6 (p6_11) and apply it, all of the PBR6s (p6_1 - p6_11) are freshly applied and a new lookup table is created. If a session has a DENY PBR6 related to it, the session is destroyed.

You must apply this procedure after every modification you make to any PBR6. For example, you must follow this procedure after disabling a PBR6.

Note: PBR6s created on the NetScaler appliance do not work until they are applied.

To apply PBR6s by using the CLI:

At the command prompt, type:

- **apply ns PBR6**

To apply PBR6s by using the GUI:

1. Navigate to System > Network > PBRs.
2. On the PBR6s tab, select the PBR6, in the Action list, select Apply.

Enabling or Disabling a PBR6

By default, the PBR6s are enabled. This means that when PBR6s are applied, the NetScaler appliance automatically compares outgoing IPv6 packets against the configured PBR6s. If a PBR6 is not required in the lookup table, but it needs to be retained in the configuration, it must be disabled before the PBR6s are applied. After the PBR6s are applied, the NetScaler does not compare incoming packets against disabled PBR6s.

To enable or disable a PBR6 by using the CLI:

At the command prompt, type one of the following commands:

- **enable ns pbr** <name>
- **disable ns pbr** <name>

To enable or disable a PBR6 by using the GUI:

1. Navigate to System > Network > PBRs.
2. On the PBR6s tab, select the PBR6, in the Action list, select Enable or Disable.

Renumbering PBR6s

You can automatically renumber the PBR6s to set their priorities to multiples of 10.

To renumber PBR6s by using the CLI:

At the command prompt, type:

- **renumber ns pbr6**

To renumber PBR6s by using the GUI:

Navigate to System > Network > PBRs, on the PBR6s tab, in the Action list, select Renumber Priority (s).

MAC Address Wildcard Mask for PBRs

September 21, 2020

A wildcard mask parameter has been introduced for extended PBRs and PBR6s and is used with the source MAC address parameter to define a range of MAC addresses to be match against the source MAC address of outgoing packets.

Wild card masks specify which hexadecimal digits of the MAC address are used and which hexadecimal digits are ignored. The wildcard mask parameter specifies a series of ones and zeroes and has a length

of 12 digits. Each digit is a mask for the corresponding hexadecimal digit of the MAC address. A zero digit in the wildcard mask indicates that the corresponding hexadecimal digit of the MAC address must be considered and a one digit indicates that the corresponding hexadecimal digit to be ignored.

The wildcard mask should meet the following conditions:

- Has only one series of zeroes
- Has only one series of ones
- Start with a series of zeroes

The following are some of the examples of valid wildcard masks:

- 000000111111
- 000000011111
- 000011111111

The following are some of the examples of invalid wildcard masks:

- 000000111100
- 111110000000
- 010101010101

For an PBR rule, a wildcard mask of 000000111111 for MAC address 96:fa:95:1d:67:4a defines the MAC address range 96:FA:95:00:00:00 - 96:FA:95:FF:FF:FF. This MAC address range is matched against the source MAC address of the outgoing packets.

To specify a range of source MAC addresses in a PBR rule by using the CLI:

At the command prompt, type:

- **add ns pbr** <name> <action> **-srcMac** <mac_addr> **-srcMacMask** <string>
- **show ns pbr** <pbrname>

Example:

```
1 > add ns pbr PBR-1 ALLOW -srcip 192.0.2.34 -srcMac 96:fa:95:1d:67:4a
   -srcMacMask 000000111111 -nextHop 198.51.100.1
2
3 Done
```

To specify a range of source MAC addresses in an PBR6 rule by using the CLI:

At the command prompt, type:

- **add ns pbr6** <name> <action> **-srcMac** <mac_addr> **-srcMacMask** <string>
- **show pbr6** <pbr6name>

Example:

```
1 > add ns pbr6 PBR6-1 ALLOW - srcipv6 2001:db8:0::7 -srcMac 96:fa:95:1d
   :67:4a - srcMacMask 000000001111 -nexthop 2001:db8:0::1
2 Done
```

Using NULL Policy Based Routes to Drop Outgoing Packets

May 2, 2023

Some situations might demand that the NetScaler appliance drops specific outgoing packets instead of routing them, for example, in testing cases and during deployment migration.

NULL policy based routes can be used to drop specific outgoing packets. A NULL PBR is a type of PBR that has the nexthop parameter set to NULL. The NetScaler appliance drops outgoing packets that match a NULL PBR.

Configuring NULL PBRs for IPv4 Packets

To create a NULL PBR by using the CLI:

At the command prompt, type:

- **add ns pbr** <name> ALLOW [**-td** <positive_integer>] [**-srcIP** [<operator>] <srcIPVal>] [**-srcPort** [<operator>] <srcPortVal>] [**-destIP** [<operator>] <destIPVal>] [**-destPort** [<operator>] <destPortVal>] (**-nextHop NULL**) [**-srcMac** <mac_addr> [**-srcMacMask** <string>]] [**-protocol** <protocol> | **-protocolNumber** <positive_integer>] [**-vlan** <positive_integer> | **-vxlan** <positive_integer>] [**-interface** <interface_name>] [**-priority** <positive_integer>] [**-msr** (**ENABLED** | **DISABLED**)] [**-monitor** <string>]] [**-state** (**ENABLED** | **DISABLED**)]**-ownerGroup** <string>]
- **apply ns pbrs**
- **show ns pbr**<id>

To configure a NULL PBR by using the GUI:

Navigate to **System > Network > PBRs**, on the **PBRs** tab, add a **new NULL PBR**, or edit an existing NULL PBR.

Sample configuration

In the following sample configuration, NULL PBR6 PBR6-NULL-EXAMPLE-1 is configured for dropping any outgoing IPv6 packets from interface 1/5.

```
1 > add ns pbr PBR6-NULL-EXAMPLE-1 ALLOW - nextHop NULL -interface 1/5
2   Done
3
4 > apply ns pbr6
5   Done
```

Traffic distribution in multiple routes based on five tuples information

May 2, 2023

In a load balancing setup, a NetScaler appliance can have multiple routes to send a packet to its destination. For example: to a server, and to a client.

A NetScaler appliance uses a hashing algorithm to select a route for sending the packet to its destination.

The hashing algorithm uses the following two tuples of a packet to calculate a hash, based on which the NetScaler appliance selects a route for the packet.

- Source IP address
- Destination IP address

The selection of routes based on two tuples information can cause an uneven distribution of traffic on the available routes. This uneven distribution of traffic leads to overloading of traffic in some routes.

To resolve this issue, from build 13.0 71.x, the NetScaler appliance uses the following five tuples information of a packet in the hashing algorithm to select a route for the packet:

- Source IP address (Client IP)
- Source Port (Client Port)
- Destination IP address (Service IP)
- Destination Port (Service Port)
- Protocol number

The selection of routes based on five tuples information ensures even distribution of traffic on the available routes. This even distribution of traffic prevents overloading of traffic in a route.

Consider an example of a load balancing setup where a client sends a request to the VIP address. The NetScaler appliance uses the following five tuples information to select a route to send the request packet to the load balanced server:

- Source IP address (Client IP address)
- Source Port (Client port)
- Destination IP address (Service IP address)

- Destination Port (Service port number)
- Protocol Number

If use source IP (USIP) mode is enabled, then all five tuples are considered as the input of hash to select a route. If use subnet IP (USNIP) mode is enabled, both SNIP and Source Port are not considered as the input because they are selected after route selection. For information on how to configure USIP and USNIP mode, see [Enable Use Source IP Mode](#) and [Configuring Subnet IP Addresses \(SNIPs\)](#).

Note:

From build 13.1 30.x, the NetScaler appliance uses the five tuples hashing algorithm instead of the two tuples hashing algorithm to select a route for load balancing monitor probes.

Precedence regarding other route selection based NetScaler features

This section talks about the precedence of the route selection based on five tuples feature and other route selection related features in a NetScaler appliance.

- **Policy Based Routes (PBR)**. PBR rules always take precedence over route selection based on five tuples.
- **Mac Based Forwarding (MBF)**. In a load balancing configuration, MBF or route selection based on five tuples takes precedence in the following cases:
 - For a client initiated traffic to the VIP address of the load balancing configuration in the NetScaler appliance:
 - * Request traffic destined to a load balanced server. Route selection based on five tuples takes preference over MBF.
 - * Response Traffic destined to the client. MBF takes preference over route selection based on five tuples.
 - For a server initiated traffic to the SNIP address in the NetScaler appliance:
 - * Response Traffic destined to the client. Route selection based on five tuples takes preference over MBF.
 - * Request traffic destined to a load balanced server. MBF takes preference over route selection based on five tuples.

Troubleshooting Routing Issues

May 2, 2023

To make your troubleshooting process as efficient as possible, begin by gathering information about your network. You need to obtain the following information about the NetScaler appliance and other systems in the Network:

- Complete Topology diagram, including interface connectivity and intermediate switch details.
- Running Configuration. You can use the `show running` command to get the running configuration for `ns.conf` and `ZebOS.conf`.
- Output of the `History` command, to determine whether any configuration changes were made when the issue arose.
- Output of the `Top` and `ps -ax` commands, to determine whether any routing daemon is overutilizing the CPU or is misbehaving.
- Any routing related core files in `/var/core` - `nsm`, `bgpd`, `ospfd`, or `ripd`. Check the time stamp to see if they are relevant.
- `dr_error.log` and `dr_info.log` files from `/var/log`.
- Output of the `date` command and time details for all relevant systems. Print dates across all devices one after another, so that the times on the log messages can be correlated with various events.
- Relevant `ns.log`, `newslog` files.
- Configuration files, log files and command history details from upstream and downstream routers.

Generic Routing FAQs

September 21, 2020

Users typically have the following questions about how to troubleshoot generic routing issues:

- How do I save the config files?

The `write` command from VTYSH saves only `ZebOS.conf`. Run the `save ns config` command from CLI to save both `ns.conf` and `ZebOS.conf` files.

- If I have configured both a static default route and a dynamically learned default route, which is the preferred default route?

The dynamically learned route is the preferred default route. This behavior is unique to default routes. However, in case of the Network Services Module (NSM), unless the administrative distances are modified, a statically configured route in the RIB is preferred over a dynamic route. The route that is downloaded to the NSM FIB is the static route.

- How do I block the advertisement of default routes?

The default route is not injected into ZebOS.

- How do I view the debug output of networking daemons?

You can write debugging output from networking daemons to a file by entering the following log file command from the global configuration view in VTYSH:

```
1 ns(config)# log file /var/ZebOS.log
```

You can direct debug output to the console by entering the terminal monitor command from VTYSH user view:

```
1 ns# terminal monitor
```

- How do I collect cores of running daemons?

You can use the gcore utility to collect cores of running daemons for processing by gdb. This might be helpful in debugging misbehaving daemons without bringing the whole routing operation to a standstill.

```
1 gcore [-s] [-c core] [executable] pid
```

The -s option temporarily stops the daemon while gathering the core image. This is a recommended option, because it guarantees that the resulting image shows the core in a consistent state.

```
1 root@ns#gcore -s -c nsm.core /netscaler/nsm 342
```

- How do I run a batch of ZebOS commands?

You can run a batch of ZebOS commands from a file by entering the VTYSH -f <file-name> command. This does not replace the running configuration, but appends to it. However, by including commands to delete the existing configuration in the batch file and then add those for the new, desired configuration, you can use this mechanism to replace a specific configuration:

```
1 !
2 router bgp 234
3 network 1.1.1.1 255.255.255.0
4 !
5 route-map bgp-out2 permit 10
6 set metric 9900
7 set community 8602:300
8 !
```

Troubleshooting OSPF-Specific Issues

May 2, 2023

Before you start debugging any OSPF specific issue, you must collect information from the NetScaler appliance and all systems in the affected LAN, including upstream and downstream routers. To begin, enter the following commands:

1. show interface from both nscli and VTYSH
2. show ip ospf interface
3. show ip ospf neighbor detail
4. show ip route
5. show ip ospf route
6. show ip ospf database summary
 - If there are only few LSAs in the database, then enter show ip ospf database router, show ip ospf database A. network, show ip ospf database external, and other commands to get the full details of LSAs.
 - If there are a large number of LSAs in the database, enter the show ip ospf database self-originated command.
7. show ip ospf
8. show ns ip. This ensures that the details of all VIPs of interest are included.
9. Get the logs from peering devices and run the following command:

```
1 gcore -s -c xyz.core /netscaler/ospfd <pid>
```

Note: The gcore command is non-disruptive.

Collect additional information from the NetScaler as follows:

1. Enable logging of error messages by entering the following command from the global configuration view in VTYSH:

```
1 ns(config)# log file /var/ospf.log
```

2. Enable debugging ospf events and log them by using the following command:

```
1 ns(config) #log file /var/ospf.log
```

Enable debug ospf lsa packet only if the number of LSAs in the database is relatively small (< 500).

Internet Protocol version 6 (IPv6)

May 2, 2023

A NetScaler appliance supports both server-side and client-side IPv6 and can therefore function as an IPv6 node. It can accept connections from IPv6 nodes (both hosts and routers) and from IPv4 nodes, and can perform Protocol Translation (RFC 2765) before sending traffic to the services.

The following table lists some of the IPv6 features that the NetScaler appliance supports.

Table 1. Some Supported IPv6 Features

IPv6 features

IPv6 addresses for SNIPs (NSIP6, VIP6, and SNIP6)

Neighbor Discovery (Address Resolution, Duplicated Address Detection, Neighbor Unreachability Detection, Router Discovery)

Management Applications (ping6, telnet6, ssh6)

Static Routing and Dynamic routing (OSPF, BGP, RIPng, and ISIS)

Port Based VLANs

Access Control Lists for IPv6 addresses (ACL6)

IPv6 Protocols (TCP6, UDP6, ICMP6)

Server Side Support (IPv6 addresses for vservers, services)

USIP (Use source IP) and DSR (Direct Server Return) for IPv6

SNMP and CVPN for IPv6

HA with native IPv6 node address

IPv6 addresses for MIPs

Path-MTU discovery for IPv6

Implementing IPv6 Support

You must enable IPv6 feature on a NetScaler appliance before you can use or configure it. If IPv6 is disabled, the NetScaler does not process IPv6 packets. It displays the following warning when you run an unsupported command:

```
1 "Warning: Feature(s) not enabled [IPv6PT]"
```

Use either of the following procedures to enable or disable IPv6.

CLI procedures

To enable or disable IPv6 by using the CLI:

At the command prompt, type one of the following commands:

- enable ns feature ipv6pt
- disable ns feature ipv6pt

GUI procedures

To enable or disable IPv6 by using the GUI:

1. Navigate to **System > Settings**, in the **Modes and Features** group, click **Configure Advanced Features**.
2. Select or clear the **IPv6 Protocol Translation** option.

VLAN Support


If you need to send broadcast or multicast packets without identifying the VLAN (for example, during DAD for NSIP, or ND6 for the next hop of the route), you can configure the NetScaler appliance to send the packet on all the interfaces with appropriate tagging. The VLAN is identified by ND6, and a data packet is sent only on the VLAN. For more information about ND6 and VLANs, see [Configuring Neighbor Discovery](#).

Port-based VLANs are common for IPv4 and IPv6. Prefix-based VLANs are supported for IPv6.

Simple Deployment Scenario

Following is an example of a simple load balancing set-up consisting of an IPv6 vserver and IPv4 services, as illustrated in the following topology diagram.

Figure 1. IPv6 Sample Topology

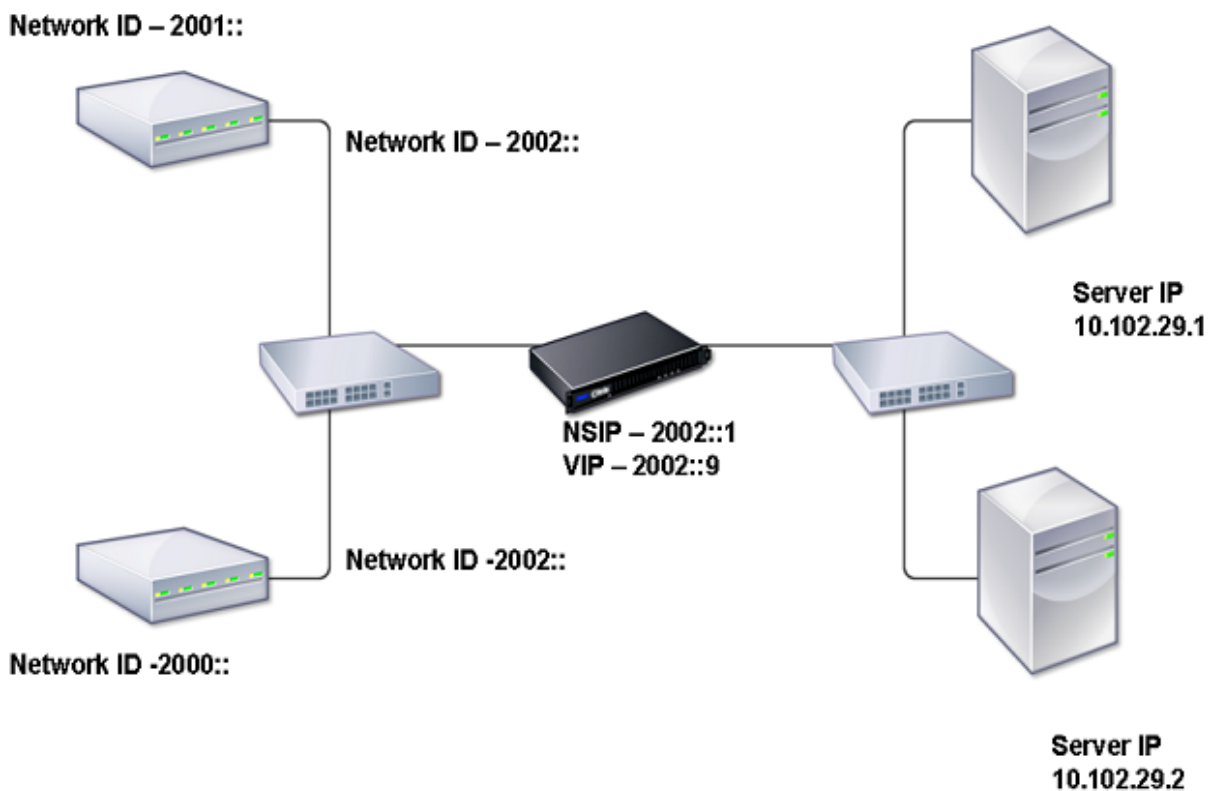


The following table summarizes the names and values of the entities that must be configured on the NetScaler.

Table 2. Sample Values for Creating Entities

Entity type	Name	Value
LB Vserver	VS1_IPv6	2002::9
Services	SVC1	10.102.29.1
	SVC2	10.102.29.2

The following figure shows the entities and values of the parameters to be configured on the NetScaler.

Figure 2. IPv6 Entity Diagram

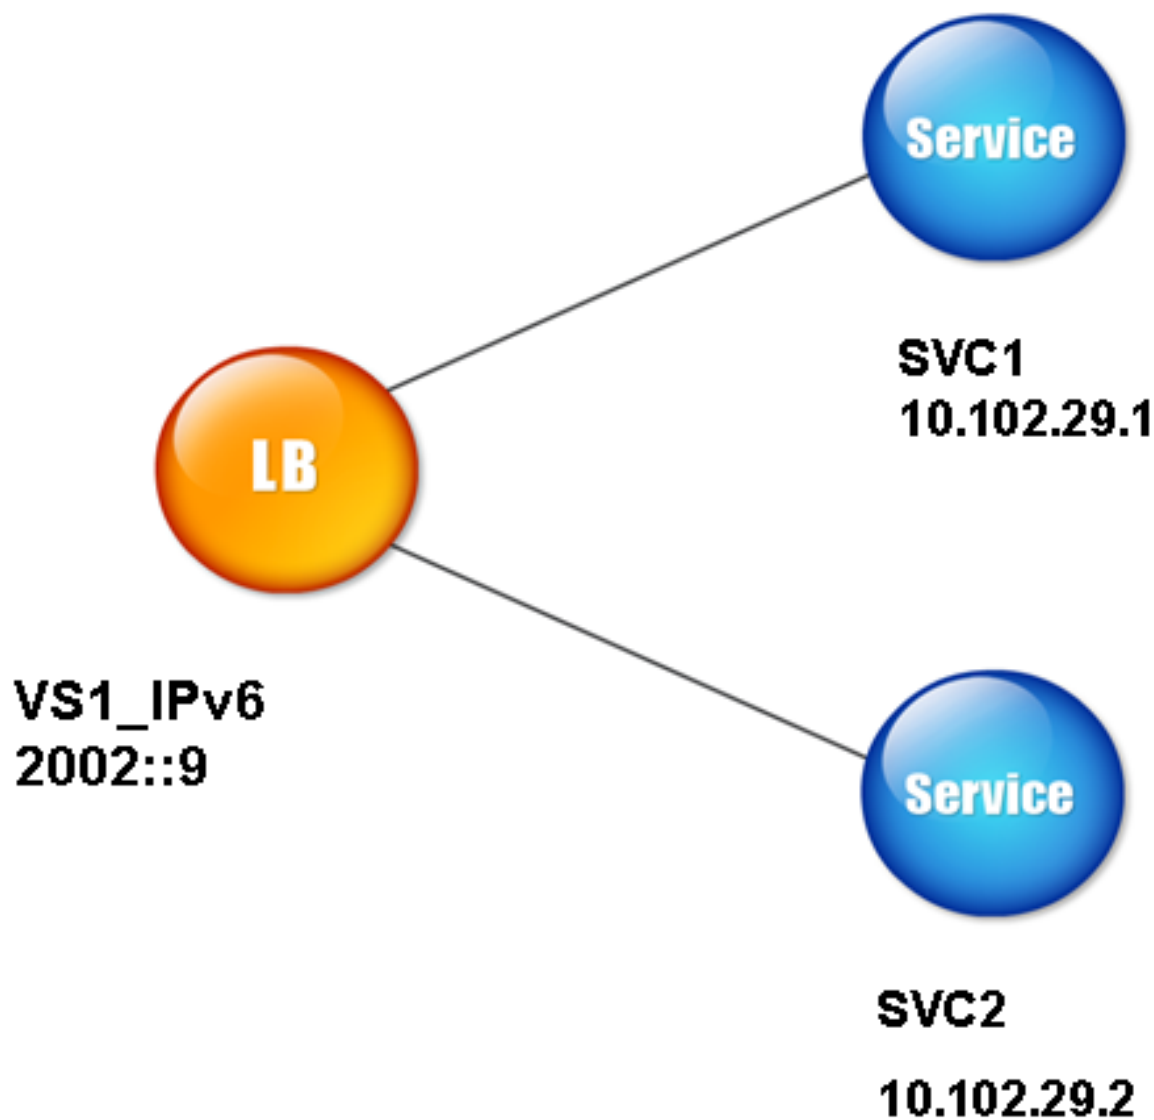

To configure this deployment scenario, you need to do the following:

1. Create an IPv6 service.
2. Create an IPv6 LB vserver.
3. Bind the services to the vserver.

CLI procedures

To create IPv4 services by using the CLI:

At the command prompt, type:

- **add service** <Name> <IPAddress> <Protocol> <Port>
- **sh service** <Name>

Example:

```
1 > add service SVC1 10.102.29.1 HTTP 80
2 Done
3
4 >add service SVC2 10.102.29.2 HTTP 80
5 Done
```

To create IPv6 vserver by using the CLI:

At the command prompt, type:

- **add lb vserver** <Name> <IPAddress> <Protocol> <Port>
- **sh lb vserver** <Name>

Example:

```
1 > add lb vserver VS1_IPv6 2002::9 HTTP 80
2 Done
```

To bind a service to an LB vserver by using the CLI:

At the command prompt, type:

- **bind lb vserver** <name> <service>
- **sh lb vserver** <name>

Example:

```
1 > bind lb vserver VS1_IPv6 SVC1
2 Done
```

GUI procedures

To create IPv4 services by using the GUI:

Navigate to **Traffic Management > Load Balancing > Services**, click **Add**, and then set the following parameters:

- Service Name
- IP Address
- Protocol
- Port

To create IPv6 vserver by using the GUI:

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, click **Add**, and select the **IPv6** check box.
2. Set the following parameters:
 - Name
 - Protocol
 - IP Address Type
 - IP Address
 - Port

To bind a service to an LB vserver by using the GUI:

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. In the **Load Balancing Virtual Servers** page, select the vserver for which you want to bind the service (for example, VS1_IPv6).
3. Click **Open**.
4. In the **Configure Virtual Server (Load Balancing)** dialog box, on the **Services** tab, select the **Active** check box corresponding to the service that you want to bind to the vserver (for example, SVC1).
5. Click **OK**.
6. Repeat steps 1-4 to bind the service (for example, SVC2 to the vserver).

Host Header Modification

When an HTTP request has an IPv6 address in the host header, and the server does not understand the IPv6 address, you must map the IPv6 address to an IPv4 address. The IPv4 address is then used in the host header of the HTTP request sent to the vserver.

CLI procedures

To change the IPv6 address in the host header to an IPv4 address by using the CLI:

At the command prompt, type:

- **set ns ip6** <IPv6Address> **-map** <IPAddress>
- **sh ns ip6** <IPv6Address>

Example:

```
1 > set ns ip6 2002::9 -map 200.200.200.200
2 Done
```

GUI procedures

To change the IPv6 address in the host header to an IPv4 address by using the GUI:

1. Navigate to **System > Network > IPs** and, on the **IPv6s** tab, select the IP address for which you want to configure a mapped IP address, for example, 2002:0:0:0:0:0:9, and click Edit.
2. In the **Mapped IP** text box, type the mapped IP address that you want to configure, for example, 200.200.200.200.

VIP Insertion

If an IPv6 address is sent to an IPv4-based server, the server may not understand the IP address in the HTTP header, and may generate an error. To avoid this, you can map an IPv4 address to the IPv6 VIP. Then, you can enable VIP insertion to enable insertion of the IPv4 VIP address and port number in the HTTP requests sent to the servers.

CLI procedures

To configure a map IPv6 address by using the CLI:

At the command prompt, type:

```
set ns ip6 <IPv6Address> -map <IPAddress>
```

Example:

```
1 > set ns ip6 2002::9 -map 200.200.200.200
2 Done
```

To enable VIP insertion by using the CLI:

At the command prompt, type:

- **set lb vsriver** <name> **-insertVserverIPPort** <Value>
- **sh lb vsriver** <name>

Example:

```
1 > set lb vsriver VS1_IPv6 -insertVserverIPPort ON
2 Done
```

GUI procedures

To configure a map IPv6 address by using the GUI:

1. Navigate to **System > Network > IPs**, on the **IPV6s** tab, select the IP address for which you want to configure a map IP address, for example, 2002:0:0:0:0:0:9, and click **Edit**.
2. In the **Mapped IP** text box, type the map IP address that you want to configure, for example, 200.200.200.200.

To enable VIP insertion by using the GUI:

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, select the virtual server that you want to enable port insertion, and click **Edit**.
2. In the **Advanced** tab, under **Traffic Settings**, in the **Vserver IP Port Insertion** drop-down list box, select **VIPADDR**.
3. In the **Vserver IP Port Insertion** text box, type the vip header.

Traffic Domains

May 2, 2023

Warning

Citrix recommends you to use Admin Partitions instead of using Traffic Domains. For more information, see [Admin Partitioning](#) page.

Traffic domains are a way to segment network traffic for different applications. You can use traffic domains to create multiple isolated environments within a NetScaler appliance. An application belonging to a specific traffic domain communicates with entities and processes traffic within that domain. The traffic belonging to one traffic domain cannot cross the boundary of another traffic domain.

Benefits of using Traffic Domains

The main benefits of using traffic domains on a NetScaler appliance are the following:

- **Use of duplicate IP addresses in a Network.** Traffic domains allow you to use duplicate IP address on the network. You can assign the same IP address or network address to multiple devices on a network, or multiple entities on a NetScaler appliance, as long as each of the duplicate address belongs to a different traffic domain.
- **Use of Duplicate entities on the NetScaler appliance.** Traffic domains also allow you to use duplicate NetScaler feature entities on the appliance. You can create entities with the same settings as long as each entity is assigned to a separate traffic domain.
Note: Duplicate entities with same name are not supported.

- **Multitenancy.** Using traffic domains, you can provide hosting services for multiple customers by isolating each customer's type of application traffic within a defined address space on the network.

A traffic domain is uniquely identified by an identifier, which is an integer value. Each traffic domain needs a VLAN or a set of VLANs. The isolation functionality of the traffic domain depends on the VLANs bound to the traffic domain. More than one VLAN can be bound to a traffic domain, but the same VLAN cannot be a part of multiple traffic domains. Therefore, the maximum number of traffic domains that can be created depends on the number of VLANs configured on the appliance.

Default Traffic Domain

A NetScaler appliance has a preconfigured traffic domain, called the *default traffic domain*, which has an ID of 0. All factory settings and configurations are part of the default traffic domain. You can create other traffic domains and then segment traffic between the default traffic domain and each of the other traffic domains. You cannot remove the default traffic domain from the NetScaler appliance. Any feature entity that you create without setting the traffic domain ID is automatically associated with the default traffic domain.

Note: Some features and configurations are supported only in the default traffic domain. They do not work in nondefault traffic domains. For a list of the features supported in all traffic domains, see Supported NetScaler Features in Traffic Domains.

How Traffic Domains Work

As an illustration of traffic domains, consider an example in which two traffic domains, with IDs 1 and 2, are configured on NetScaler appliance NS1.


In traffic domain 1, load balancing virtual server LBVS-TD1 is configured to load balance traffic across servers S1 and S2. On the NetScaler appliance, servers S1 and S2 are represented by services SVC1-TD1 and SVC2-TD1, respectively. Servers S1 and S2 are connected to NS1 through L2 switch SW2-TD1. Client CL-TD1 is on a private network connected to NS1 through L2 switch SW1-TD1. SW1-TD1 and SW2-TD1 are connected to VLAN 2 of NS1. VLAN 2 is bound to traffic domain 1, which means that client CL-TD1 and servers S1 and S2 are part of traffic domain 1.

Similarly in traffic domain 2, load balancing virtual server LBVS-TD2 is configured to load balance traffic across S3 and S4. On the NetScaler appliance, servers S3 and S4 are represented by services SVC3-TD2 and SVC4-TD2, respectively. Servers S3 and S4 are connected to NS1 through L2 switch SW2-TD2. Client CL-TD2 is on a private network connected to NS1 through L2 switch SW1-TD2. SW1-TD2 and SW2-TD2 are connected to VLAN 3 of NS1. VLAN 3 is bound to traffic domain 2, which means that client CL-TD2 and servers S3 and S4 are part of traffic domain 2.

On the NetScaler appliance, entities LBVS-TD1 and LBVS-TD2 share the same settings, including the IP address. The same is true for SVC1-TD1 and SVC3-TD2, and for SVC2-TD1 and SVC4-TD2. This is possible because these entities are in different traffic domains.

Similarly, servers S1 and S3, S2 and S4 share the same IP address, and clients CL-TD1 and CL-TD2 each have the same IP address.

Figure 1. How traffic domains work

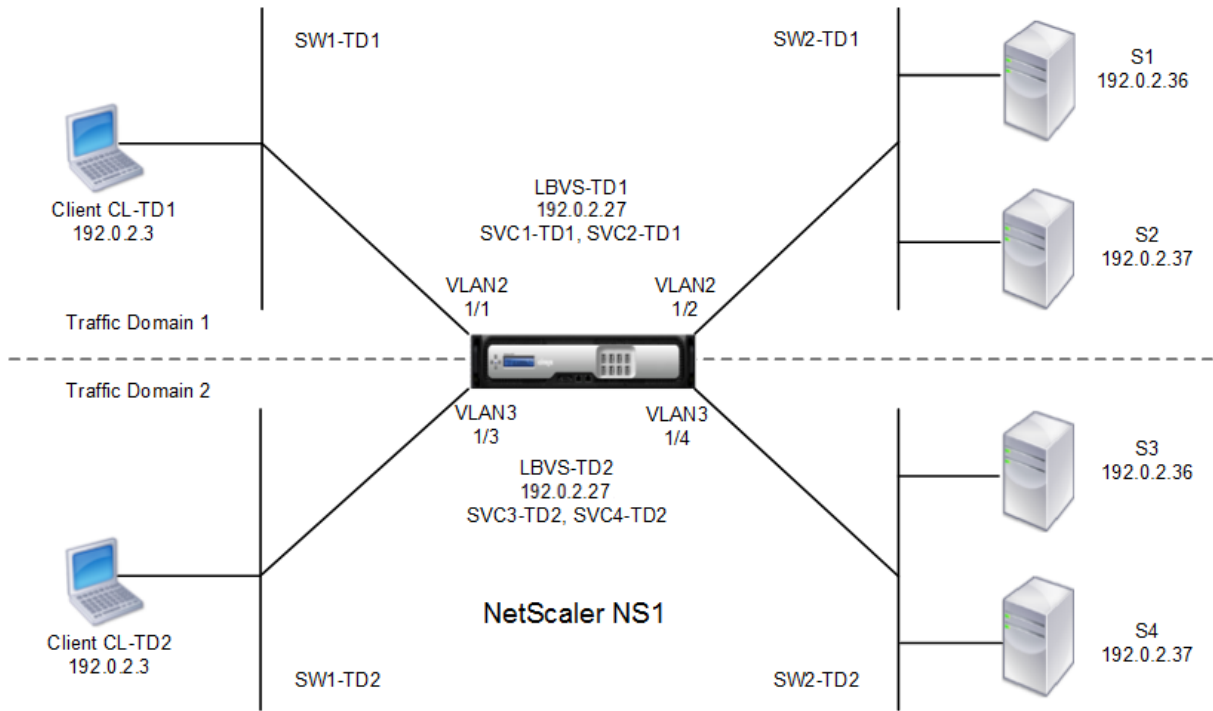

The following table lists the settings used in the example.

Entity	Name	Details
Settings in traffic domain 1		
VLANs bound to traffic domain 1	VLAN 2	VLAN Id: 2 Interfaces bound: 1/1, 1/2
Client connected to TD1	CL-TD1 (for reference purposes only)	IP address: 192.0.2.3
Load balancing virtual server in TD1	LBVS-TD1	IP address: 192.0.2.27
Service bound to virtual server LBVS-TD1	SVC1-TD1	IP address: 192.0.2.36
Service bound to virtual server LBVS-TD1	SVC2-TD1	IP address: 192.0.2.37

Entity	Name	Details
SNIP	SNIP-TD1 (for reference purposes only)	IP address: 192.0.2.27
Settings in traffic domain 2		
VLAN bound to traffic domain 2	VLAN 3	VLAN Id: 3 Interfaces bound: 1/3, 1/4
Client connected to TD2	CL-TD2 (for reference purposes only)	IP address: 192.0.2.3
Load balancing virtual server in TD2	LBVS-TD2	IP address: 192.0.2.27
Service bound to virtual server LBVS-TD2	SVC3-TD2	IP address: 192.0.2.36
Service bound to virtual server LBVS-TD2	SVC4-TD2	IP address: 192.0.2.37
SNIP in TD2	SNIP-TD2 (for reference purposes only)	IP address: 192.0.2.29

Following is the traffic flow in traffic domain 1:

1. Client CL-TD1 broadcasts an ARP request for the IP address of 192.0.2.27 through L2 switch SW1-TD1.
2. The ARP request reaches NS1 on interface 1/1, which is bound to VLAN 2. Because VLAN 2 is bound to traffic domain 1, NS1 updates the ARP table of traffic domain 1 for the IP address of client CL-TD1.
3. Because the ARP request is received on traffic domain 1, NS1 looks for an entity configured on traffic domain 1 that has an IP address of 192.0.2.27. NS1 finds that a load balancing virtual server LBVS-TD1 is configured on traffic domain 1 and has the IP address 192.0.2.27.
4. NS1 sends an ARP response with the MAC address of interface 1/1.
5. The ARP reply reaches CL-TD1. CL-TD1 updates its ARP table for the IP address of LBVS-TD1 with the MAC address of interface 1/1 of NS1.
6. Client CL-TD1 sends a request to 192.0.2.27. The request is received by LBVS-TD1 on port 1/1 of NS1.
7. LBVS-TD1's load balancing algorithm selects server S2, and NS1 opens a connection between a SNIP in traffic domain 1 (192.0.2.27) and S2.
8. S2 replies to SNIP 192.0.2.27 on NS1.
9. NS1 sends S2's reply to client CL-TD1.

Following is the traffic flow in traffic domain 2:

1. Client CL-TD2 broadcasts an ARP request for the IP address of 192.0.2.27 through L2 switch SW1-TD2.
2. The ARP request reaches NS1 on interface 1/3, which is bound to VLAN 3. Because VLAN 3 is bound to traffic domain 2, NS1 updates traffic-domain 2's ARP-table entry for the IP address of client CL-TD2, even though an ARP entry for the same IP address (CL-TD1) is already present in the ARP table of traffic domain 1.
3. Because the ARP request is received in traffic domain 2, NS1 searches traffic domain 2 for an entity that has an IP address of 192.0.2.27. NS1 finds that load balancing virtual server LBVS-TD2 is configured in traffic domain 2 and has the IP address 192.0.2.27. NS1 ignores LBVS-TD1 in traffic domain 1, even though it has the same IP address as LBVS-TD2.
4. NS1 sends an ARP response with the MAC address of interface 1/3.
5. The ARP reply reaches CL-TD2. CL-TD2 updates its ARP table entry for the IP address of LBVS-TD2 with the MAC address of interface 1/3 of NS1.
6. Client CL-TD2 sends a request to 192.0.2.27. The request is received by LBVS-TD2 on interface 1/3 of NS1.
7. LBVS-TD2's load balancing algorithm selects server S3, and NS1 opens a connection between a SNIP in traffic domain 2 (192.0.2.29) and S3.
8. S2 replies to SNIP 192.0.2.29 on NS1.
9. NS1 sends S2's reply to client CL-TD2.

Supported NetScaler Features in Traffic Domains

The NetScaler features in the following list are supported in all traffic domains.

Important

Any NetScaler feature not listed below is supported only in the default traffic domain.

- ARP table
- ND6 table
- Bridge table
- All types of IPv4 and IPv6 addresses
- IPv4 and IPv6 routes
- ACL and ACL6
- PBR & PBR6
- INAT
- RNAT
- RNAT6
- MSR
- MSR6
- Net profiles

- SNMP MIBs
- Fragmentation
- Monitors (Scriptable monitors are not supported)
- Content Switching
- Cache Redirection
- Persistency (Persistency groups are not supported)
- Service (Domain based services are not supported)
- Service group (Domain based service groups are not supported)
- Policies (*)
- PING
- TRACEROUTE
- PMTU
- High Availability (connection mirroring is not supported)
- Cluster (Supported on L2 clusters. Not supported on L3 clusters)
- Cookie Persistency
- MSS
- Logging (Syslog is not supported)
- Surge Protection
- Load balancing (The following types are not supported:)
 - TFTP
 - RTSP
 - Diameter
 - SIP
 - SMPP

- NAT46
- NAT64
- DNS64
- Forwarding Session Rules
- SNMP

Note

- * Policies do not have global binding points for traffic domains. However, policies can be bound to a specific load balancing virtual server of a traffic domain.
- Global Server Loading Balancing (GSLB) and ADNS features in NetScaler are not aware of Traffic Domains. If the GSLB configuration needs to be shared across all traffic domains then GSLB methods Static Proximity and Round Trip Time (RTT) do not work. As a workaround in this scenario you can use GSLB methods other than RTT and Static Proximity. For more information, see <http://support.citrix.com/article/CTX202277>.

Configuring Traffic Domains

Configuring a traffic domain on the NetScaler appliance consists of the following tasks:

- **Add VLANs.** Create VLANs and bind specified interfaces to them.
- **Create a traffic domain entity and bind VLANs to it.** This involves the following two tasks:
 - Create a traffic domain entity uniquely identified by an ID, which is an integer value.
 - Bind the specified VLANs to the traffic domain entity. All the interfaces that are bound to the specified VLANs are associated with the traffic domain. More than one VLAN can be bound to a traffic domain, but a VLAN cannot be a part of multiple traffic domains.
- **Create feature entities on the traffic domain.** Create the required feature entities in the traffic domain. The CLI commands and configuration dialog boxes of all the supported features in a nondefault traffic domain include a parameter called a *traffic domain identifier* (td). When configuring a feature entity, if you want the entity to be associated with a particular traffic domain, you must specify the td. Any feature entity that you create without setting the td is automatically associated with the default traffic domain.

To give you an idea of how feature entities are associated with a traffic domain, this topic covers the procedures for configuring all the entities mentioned in the figure titled How Traffic Domains Work.

The CLI has two commands for these two tasks, but the GUI combines them in a single dialog box.

CLI procedures

To create a VLAN and bind interfaces to it by using the CLI:

At the command prompt, type:

- **add vlan** <id>
- **bind vlan** <id> -ifnum <slot/port>
- **show vlan** <id>

To create a traffic domain entity and bind VLANs to it by using the CLI:

At the command prompt, type:

- **add ns trafficdomain** <td>
- **bind ns trafficdomain** <td> -vlan <id>
- **show ns trafficdomain** <td>

To create a service by using the CLI:

At the command prompt, type:

- **add service** <name> <IP> <serviceType> <port> -td <id>

- **show service** <name>

To create a load balancing virtual server and bind services to it by using the CLI:

At the command prompt, type:

- **add lb vserver** <name> <serviceType> <IPAddress> <port> **-td** <id>
- **bind lb vserver** <name> <serviceName>
- **show lb vserver** <name>

GUI procedures

To create a VLAN by using the GUI:

Navigate to **System > Network > VLANs**, click **Add**, and set the parameters.

To create a traffic domain entity by using the GUI:

Navigate to **System > Network > Traffic Domains**, click **Add**, and in the **Create Traffic Domain** dialog box, set the parameters.

To create a service by using the GUI:

Navigate to **Traffic Management > Load Balancing > Services**, click **Add**, and set the parameters.

To create a load balancing virtual server by using the GUI:

Navigate to **Traffic Management > Load Balancing > Virtual Servers**, click **Add**, and set the parameters.

Inter Traffic Domain Entity Bindings

May 2, 2023

You can bind services in one traffic domain to a virtual server in another traffic domain. All the services to be bound to a virtual server in a different traffic domain must reside in the same traffic domain.

You configure this support by using the existing `bind lb vserver` command or the related GUI procedure.

This capability can facilitate interaction between different traffic domains. In an enterprise, servers can be grouped in different traffic domains. Virtual servers are created in a traffic domain that faces the internet. A virtual server from this traffic domain can be configured to load balance servers in another traffic domain. This virtual server receives connection requests from the Internet to be forwarded to the bound servers.

When a NetScaler is used in a cloud infrastructure, each tenant can be assigned a separate traffic domain, and all the resources (including servers) for a tenant can be grouped together in the tenant's traffic domain. For each tenant, a virtual server is created for load balancing servers in its traffic domain. All of these virtual servers are grouped together in a single traffic domain that faces the Internet.

Consider an example of in which cloud service provider Example-Cloud-A has three traffic domains, with IDs 10, 20, and 30, configured on NetScaler appliance NS1.

Example-Org-A and Example-Org-B are tenants of Example-Cloud-A. Tenant A is assigned traffic domain 20, and tenant B is assigned domain 30. Servers S1 and S2 reside in traffic domain 20 and servers S3 and S4 reside in traffic domain 30.

Traffic domain 10 faces the internet. Virtual servers LBVS-1 and LBVS-2 are created in traffic domain 10. LBVS-1, in traffic domain 10, is configured to load balance servers S1 and S2, which are in traffic domain 20. LBVS-2, in traffic domain 10, is configured to load balance servers S3 and S4, which are in traffic domain 30.

Therefore, these virtual servers accept Internet connection requests for servers that are in a different traffic domain than that of the virtual servers.

virtual MAC Based Traffic Domains

May 2, 2023

You can associate a traffic domain with a virtual MAC address instead of with VLANs. The NetScaler then sends the traffic domain's virtual MAC address in all responses to ARP queries for network entities in that domain. As a result, the ADC can segregate subsequent incoming traffic for different traffic domains on the basis of the destination MAC address, because the destination MAC address is the virtual MAC address of a traffic domain. After creating entities on a traffic domain, you can easily manage and monitor them by performing traffic domain level operations.


Consider an example in which two traffic domains, with IDs 1 and 2, are configured on NetScaler appliance NS1. The NetScaler creates a virtual MAC address virtual MAC1 and associates it with traffic domain 1. Similarly, the NetScaler created another virtual MAC address virtual MAC2 and associates with traffic domain 2.

In traffic domain 1, load balancing virtual server LBVS-TD1 is configured to load balance traffic across servers S1 and S2. On the NetScaler appliance, servers S1 and S2 are represented by services SVC1-TD1 and SVC2-TD1, respectively. A subnet IP address (SNIP) SNIP1 is configured for enabling the NetScaler to communicate with S1 and S2. Because virtual MAC1 is associated with traffic domain

1, the appliance sends virtual MAC1 as the MAC address in all ARP announcements and ARP responses for LBVS-TD1 and SNIP1.

Similarly in traffic domain 2, load balancing virtual server LBVS-TD2 is configured to load balance traffic across S3 and S4. On the NetScaler appliance, servers S3 and S4 are represented by services SVC3-TD2 and SVC4-TD2, respectively. A SNIP address SNIP2 is configured for enabling the NetScaler to communicate with S3 and S4. Because virtual MAC2 is associated with traffic domain 2, the appliance sends virtual MAC2 as the MAC address in all ARP announcements and ARP responses for LBVS-TD2 and SNIP2.

The NetScaler segregate subsequent incoming traffic for traffic domains 1 or 2 on the basis of the destination MAC address, if the destination MAC address is virtual MAC1 or virtual MAC2.

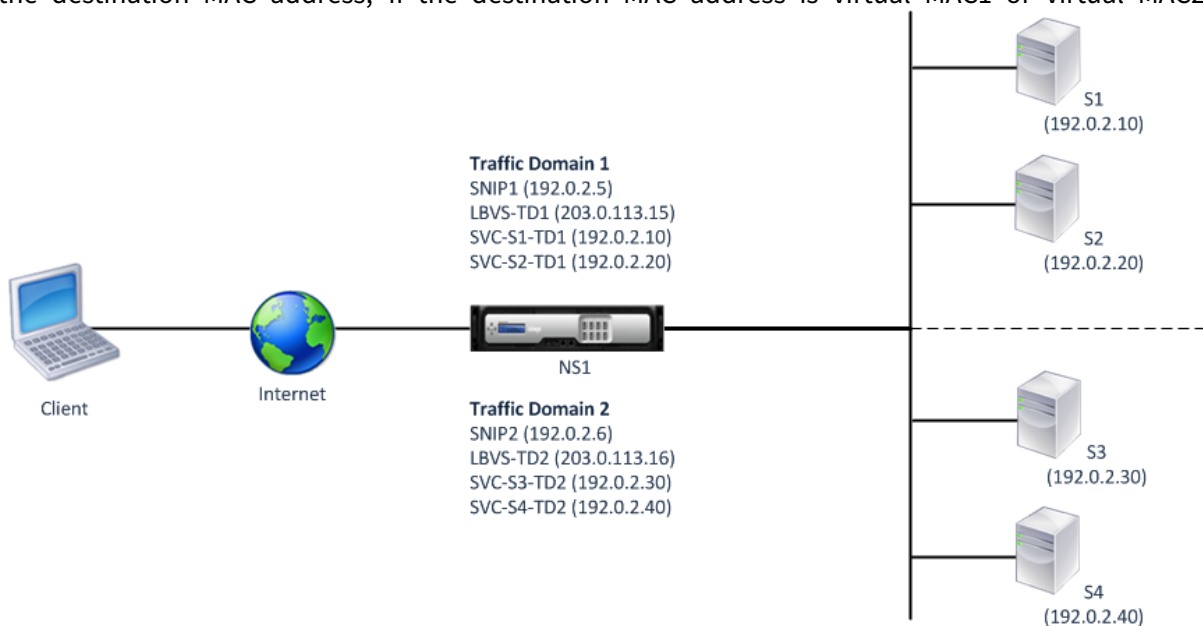

The following table lists the settings used in the example: [Virtual MAC based traffic domain example settings](#).

Before you Begin

Following are points to consider before you configure virtual MAC based traffic domain:

1. virtual MAC based traffic domains are easiest way to achieve network traffic segregation.
2. Because virtual MAC based traffic domains segregate network traffic based on virtual MAC addresses and not VLANs, you cannot create duplicate IP addresses on different virtual MAC based traffic domains on a NetScaler.
3. virtual MAC based traffic domains do not work when the NetScaler is deployed only in L2 Mode.
4. Both VLAN and virtual MAC based traffic domains can coexist on a NetScaler. virtual MAC based traffic domains actually runs on all VLANs that are not bound to any VLAN based traffic domain.

Configuration Steps

Configuring a virtual MAC based traffic domain on a NetScaler appliance consists of the following tasks:

- Create a traffic domain entity and enable the virtual MAC option. Create a traffic domain entity uniquely identified by an ID, which is an integer value, and then enable the virtual MAC option. After creating the traffic domain entity, the NetScaler creates a virtual MAC address and then associates it to the traffic domain entity.
- Create feature entities on the traffic domain. Create the required feature entities in the traffic domain by specifying the traffic domain identifier (td) when configuring these feature entities. NetScaler owned network entities created in a virtual MAC based traffic domain are associated with the virtual MAC address, which is associated with the traffic domain. The NetScaler then sends the traffic domain's virtual MAC address in ARP announcements and ARP responses for these network entities.

CLI procedures

To create a virtual MAC based traffic domain by using the CLI:

At the command prompt, type:

```
add ns trafficDomain <td> [-vmac ( ENABLED      DISABLED )]
```

-
- show ns trafficdomain <td>

To configure a SNIP address by using the CLI:

At the command prompt, type:

- add ns ip <IPAddress> <netmask> -type SNIP -td <id>
- show ns ip <IPAddress> -td <id>

To create a service by using the CLI:

At the command prompt, type:

- add service <name> <IP> <serviceType> <port> -td <id>
- show service <name> -td <id>

To create a load balancing virtual server and bind services to it by using the CLI:

At the command prompt, type:

- add lb vserver <name> <serviceType> <IPAddress> <port> -td <id>
- bind lb vserver <name> <serviceName>
- show lb vserver <name> -td <id>

Example:

```
1 > add ns trafficDomain 1 -vmac ENABLED
2 Done
3 > add ns trafficDomain 2 -vmac ENABLED
4 Done
5
6 > add ns ip 192.0.2.5 255.255.255.0 -type -SNIP -td 1
7 Done
8 > add service SVC-S1-TD1 192.0.2.10 HTTP 80 -td 1
9 Done
10 > add service SVC-S2-TD1 192.0.2.20 HTTP 80 -td 1
11 Done
12 > add lb vserver LBVS-TD1 HTTP 203.0.113.15 80 -td 1
13 Done
14 > bind lb vserver LBVS-TD1 SVC-S1-TD1
15 Done
16 > bind lb vserver LBVS-TD1 SVC-S2-TD1
17 Done
18
19 > add ns ip 192.0.2.6 255.255.255.0 -type -SNIP -td 2
20 Done
21 > add service SVC-S3-TD2 192.0.2.30 HTTP 80 -td 2
22 Done
23 > add service SVC-S4-TD2 192.0.2.40 HTTP 80 -td 2
24 Done
25 > add lb vserver LBVS-TD1 HTTP 203.0.113.16 80 -td 1
26 Done
27 > bind lb vserver LBVS-TD2 SVC-S3-TD2
28 Done
29 > bind lb vserver LBVS-TD2 SVC-S3-TD2
30 Done
```

GUI procedures

To create a virtual MAC based traffic domain by using the GUI:

1. Navigate to System > Network > Interfaces.
2. In the details pane, click Add.
3. On the Create Traffic Domain page, set the following parameters:
 - Traffic Domain ID*
 - Enable Mac
4. Click Create.

To configure a SNIP address by using the GUI:

1. Navigate to System > Network > IPs > IPv4
2. Navigate to Network > IPs > IPv4
3. In the details pane, click Add
4. In the Create IP page, set the following parameters. For a description of a parameter, hover the mouse cursor over the corresponding field.
 - IP Address
 - Netmask
 - IP Type
 - Traffic Domain ID
5. Click Create.

To create a service by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Services.
2. In the details pane, click Add.
3. In the Basic Settings Page, set the following parameters. For a description of a parameter, hover the mouse cursor over the corresponding field.
 - Service Name
 - Server
 - Protocol
 - Port
 - Traffic Domain ID
4. Click Continue, and click Done.
5. Repeat steps 2-4 to create another service.
6. Click Close.

To create a load balancing virtual server and bind services to it by using the GUI:

1. Navigate to Traffic Management > Load Balancing > Virtual Servers.
2. In the Load Balancing Virtual Servers pane, click Add.
3. In the Create Virtual Servers (Load Balancing) dialog box, set the following parameters. For a description of a parameter, hover the mouse cursor over the corresponding field.
 - Name
 - IP Address
 - Protocol
 - Port
 - Traffic Domain ID
4. Click Continue, on the Service Pane, click >.

5. On the Service page, click Insert, and then select the check box for the services that you want to bind to the virtual server.
6. Click Continue, and click Done.
7. Repeat steps 2-5 to create another virtual server

VXLAN

May 2, 2023

NetScaler appliances support Virtual eXtensible Local Area Networks (VXLANs). A VXLAN overlays Layer 2 networks onto a layer 3 infrastructure by encapsulating Layer-2 frames in UDP packets. Each overlay network is known as a VXLAN Segment and is identified by a unique 24-bit identifier called the VXLAN Network Identifier (VNI). Only network devices within the same VXLAN can communicate with each other.


VXLANs provide the same Ethernet Layer 2 network services that VLANs do, but with greater extensibility and flexibility. The two main benefits of using VXLANs are the following:

- **Higher scalability.** Server virtualization and cloud computing architectures have dramatically increased the demand for isolated Layer 2 networks in a datacenter. The VLAN specification uses a 12-bit VLAN ID to identify a Layer 2 network, so you cannot scale beyond 4094 VLANs. That number can be inadequate when the requirement is for thousands of isolated Layer 2 networks. The 24-bit VNI accommodates up to 16 million VXLAN segments in the same administrative domain.
- **Higher flexibility.** Because VXLAN carries Layer 2 data frames over Layer 3 packets, VXLANs extend L2 networks across different parts of a datacenter and across geographically separated datacenters. Applications that are hosted in different parts of a datacenter and in different datacenters but are part of the same VXLAN appear as one contiguous network.


How VXLANs Work

VXLAN Segments are created between VXLAN Tunnel End Points (VTEPs). VTEPs support the VXLAN protocol and perform VXLAN encapsulation and decapsulation. You can think of a VXLAN segment as a tunnel between two VTEPs, where one VTEP encapsulates a Layer2 frame with a UDP header and an IP header and sends it through the tunnel. The other VTEP receives and decapsulates the packet to get the Layer 2 frame. A NetScaler is one example of a VTEP. Other examples are third-party hypervisors, VXLAN aware virtual machines, and VXLAN capable switches.

The following illustration displays virtual machines and physical servers connected through VXLAN tunnels.

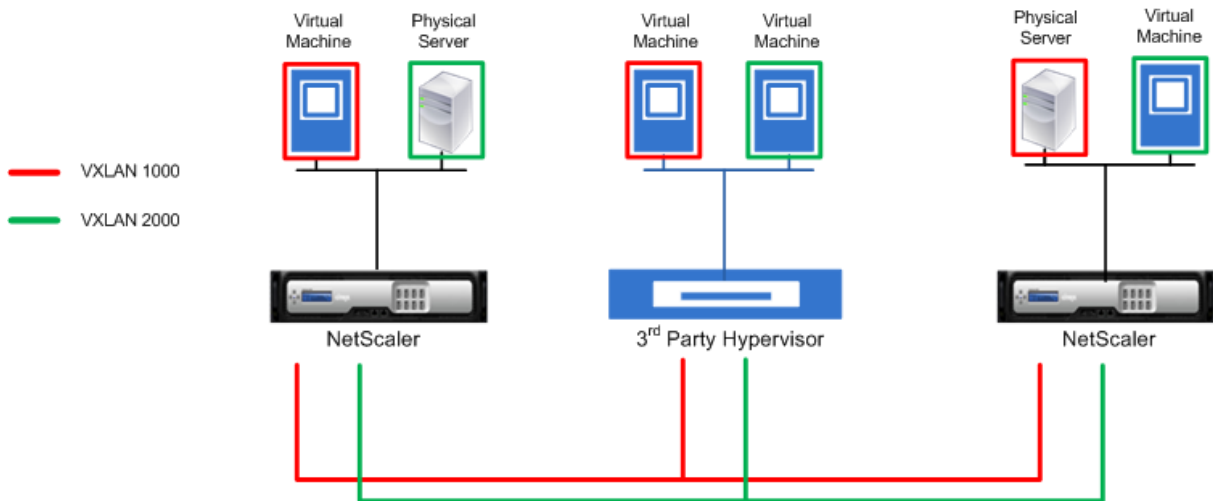

The following illustration displays the format of a VXLAN packet.

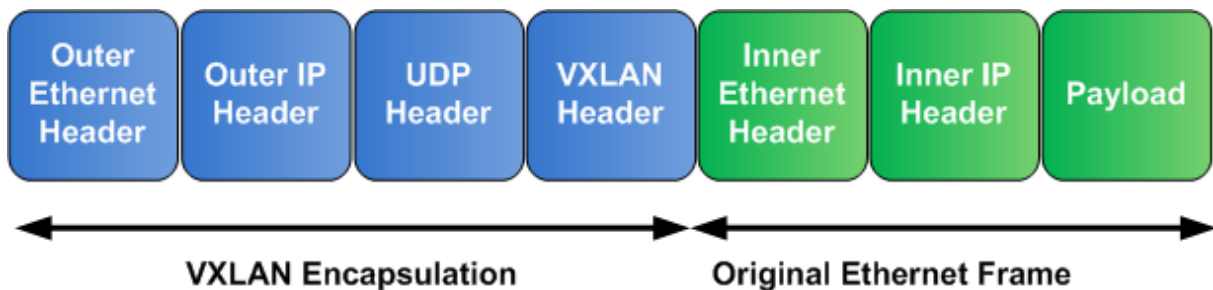

VXLANs on a NetScaler use a Layer 2 mechanism for sending broadcast, multicast, and unknown unicast frames. A VXLAN supports the following modes for sending these L2 frames.

- **Unicast mode:** In this mode, you specify the IP addresses of VTEPs while configuring a VXLAN on a NetScaler. The NetScaler sends broadcast, multicast, and unknown unicast frames over Layer 3 to all VTEPs of this VXLAN.
- **Multicast mode:** In this mode, you specify a multicast group IP address while configuring a VXLAN on a NetScaler. NetScalers do not support Internet Group Management Protocol (IGMP) protocol. NetScalers rely on the upstream router to join a multicast group, which shares a common multicast group IP address. The NetScaler sends broadcast, multicast, and unknown unicast frames over Layer 3 to the multicast group IP address of this VXLAN.

Similar to a Layer 2 bridge table, NetScalers maintain VXLAN mapping tables based on the inner and outer header of the received VXLAN packets. This table maps of remote host MAC addresses to VTEP IP addresses for a particular VXLAN. The NetScaler uses the VXLAN mapping table to look up the destination MAC address of a Layer 2 frame. If an entry for this MAC address is present in the VXLAN table, the NetScaler sends the Layer 2 frame over Layer 3, using the VXLAN protocol, to the mapped VTEP IP address specified in the mapping entry for a VXLAN.

Because VXLANs function similarly to VLANs, most of the NetScaler features that support VLAN as a classification parameter support VXLAN. These features include an optional VXLAN parameter setting,

which specifies the VXLAN VNI.


In a high availability (HA) configuration, the VXLAN configuration is propagated or synchronized to the secondary node.

VXLAN Use Case: Load Balancing across Datacenters

To understand the VXLAN functionality of a NetScaler, consider an example in which Example Corp hosts a site at www.example.com. To ensure application availability, the site is hosted on three servers, S0, S1, and S2. A load balancing virtual server, LBVS, on NetScaler NS-ADC is used to load balance these servers. S0, S1, and S2 reside in datacenters DC0, DC1, and DC2, respectively. In DC0, server S0 is connected to NS-ADC.

S0 is a physical server, and S1 and S2 are virtual machines (VMs). S1 runs on virtualization host device Dev-VTEP-1 in datacenter DC1, and S2 runs on host device Dev-VTEP-2 in DC2. NS-ADC, Dev-VTEP-1, and Dev-VTEP-2 support the VXLAN protocol.

S0, S1, and S2 are part of the same private subnet, 192.0.1.0/24. S0, S1, and S2 be part of a common broadcast domain, VXLAN 9000 is configured on NS-ADC, Dev-VTEP-1, and Dev-VTEP-2. Servers S1 and S2 are made part of VXLAN9000 on Dev-VTEP-1 and Dev-VTEP-2, respectively.

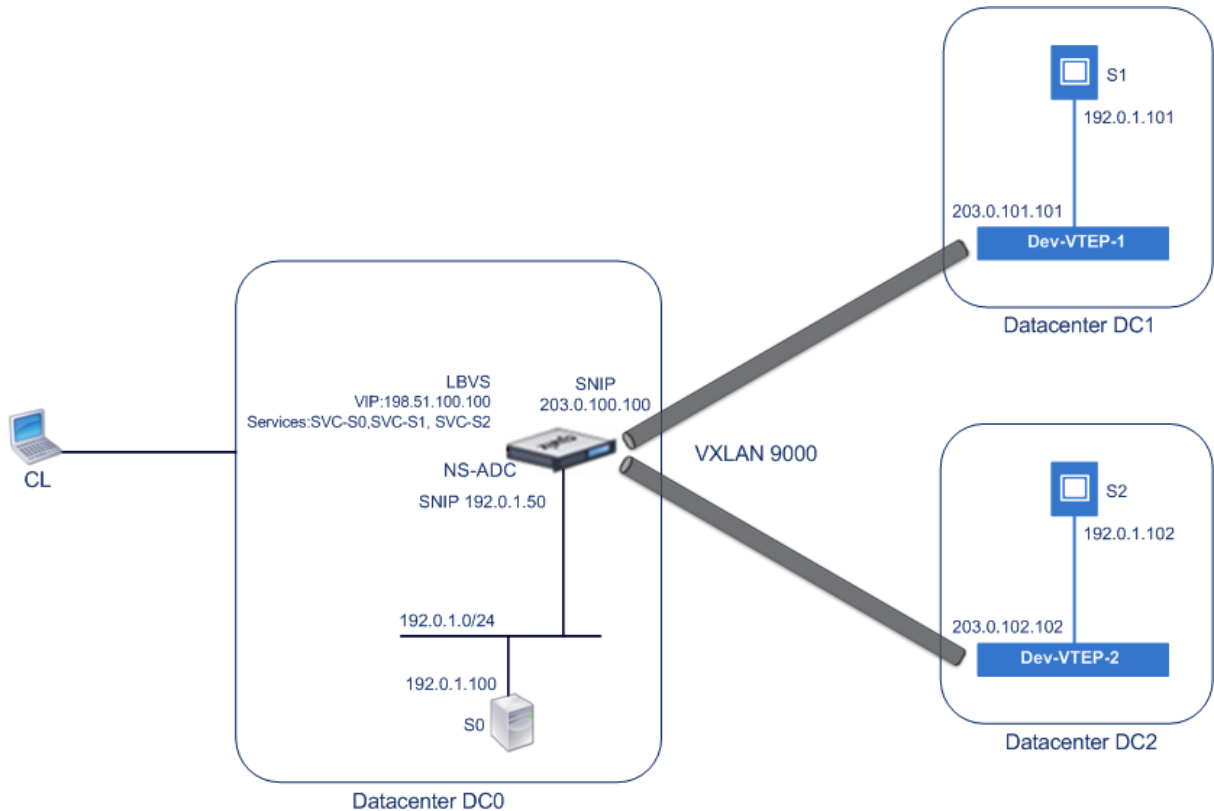

The following table lists the settings used in this example:

[VXLAN settings.](#)

Services SVC-S0, SVC-S1, and SVC-S2 on NS-ADC represent S0, S1, and S2. As soon as these services are configured, NS-ADC broadcasts ARP requests for S0, S1, and S2 to resolve IP-to-MAC mapping. These ARP requests are also sent over VXLAN 9000 to Dev-VTEP-1 and Dev-VTEP-2.

Following is the traffic flow for resolving the ARP request for S2:

1. NS-ADC broadcasts an ARP request for S2 to resolve IP-to-MAC mapping. This packet has:
 - Sourced IP address = Subnet IP address SNIP-for-Servers (192.0.1.50)
 - Source MAC address = MAC address of the NS-ADC's interface from which the packet is sent out = NS-MAC-1
2. NS-ADC prepares the ARP packet to be sent over the VXLAN 9000 by encapsulating the packet with following headers:
 - VXLAN header with an ID (VNI) of 9000
 - Standard UDP header, UDP checksum set to 0x0000, and destination port set to 4789.
3. NS-ADC sends the resulting encapsulated packet to Dev-VTEP-1 and Dev-VTEP-2 on VXLAN-9000. The encapsulated packet has:
 - Source IP address = SNIP-VTEP-0 (203.0.100.100).
4. Dev-VTEP-2 receives the UDP packet and decapsulates the UDP header, from which Dev-VTEP-2 learns that the packet is a VXLAN related packet. Dev-VTEP-2 then decapsulates the VXLAN header and learns the VXLAN ID of the packet. The resulting packet is the ARP request packet for S2, which is same as in step 1.
5. From the inner and outer header of the VXLAN packet, Dev-VTEP-2 makes an entry in its VXLAN mapping table that shows the mapping of MAC address (NS-MAC-1) and SNIP-VTEP-0 (203.0.100.100) for VXLAN9000.
6. Dev-VTEP-2 sends the ARP packet to S2. S2's response packet reaches Dev-VTEP-2. Dev-VTEP-2 performs a lookup in its VXLAN mapping table and gets a match for the destination MAC address NS-MAC-1. The Dev-VTEP-2 now knows that NS-MAC-1 is reachable through SNIP-VTEP-0 (203.0.100.100) over VXLAN 9000.
7. S2 responds with its MAC address (MAC-S2). The ARP response packet has:
 - Destination IP address = Subnet IP address SNIP-for-Servers (192.0.1.50)
 - Destination MAC address = NS-MAC-1
8. S2's response packet reaches Dev-VTEP-2. Dev-VTEP-2 performs a lookup in its VXLAN mapping table and gets a match for the destination MAC address NS-MAC-1. The Dev-VTEP-2 now knows that NS-MAC-1 is reachable through SNIP-VTEP-0 (203.0.100.100) over VXLAN 9000. Dev-VTEP-2 encapsulates the ARP response with VXLAN and UDP headers, and sends the resultant packet to SNIP-VTEP-0 (203.0.100.100) of NS-ADC.

9. NS-ADC on receiving the packet, decapsulates the packet by removing the VXLAN and UDP headers. The resultant packet is S2's ARP response. NS-ADC updates its VXLAN mapping table for S2's MAC address (MAC-S2) with Dev-VTEP-2's IP address (203.0.102.102) for VXLAN 9000. NS-ADC also updates its ARP table for S2's IP address (192.0.1.102) with S2's MAC address (MAC-S2).

Following is the traffic flow for load balancing virtual server LBVS in this example:

1. Client CL sends a request packet to LBVS of NS-ADC. The request packet has:
 - Source IP address = IP address of client CL (198.51.100.90)
 - Destination IP address = IP address (VIP) of LBVS = 198.51.110.100
2. LBVS of NS-ADC receives the request packet, and its load balancing algorithm selects server S2 of datacenter DC2.
3. NS-ADC processes the request packet, changing its destination IP address to the IP address of S2 and its source IP address to one of the Subnet IP (SNIP) addresses configured on NS-ADC. The request packet has:
 - Source IP address = Subnet IP address on NS-ADC= SNIP-for-Servers (192.0.1.50)
 - Destination IP address = IP address of S2 (192.0.1.102)
4. NS-ADC finds a VXLAN mapping entry for S2 in its bridge table. This entry indicates that S2 is reachable through Dev-VTEP-2 over VXLAN 9000.
5. NS-ADC prepares the packet to be sent over the VXLAN 9000 by encapsulating the packet with following headers:
 - VXLAN header with an ID (VNI) of 9000
 - Standard UDP header, UDP checksum set to 0x0000, and destination port set to 4789.
6. NS-ADC sends the resulting encapsulated packet to Dev-VTEP-2. The request packet has:
 - Source IP address = SNIP address = SNIP-VTEP-0 (203.0.100.100)
 - Destination IP address = IP address of Dev-VTEP-2 (203.0.102.102)
7. Dev-VTEP-2 receives the UDP packet and decapsulates the UDP header, from which Dev-VTEP-2 learns that the packet is a VXLAN related packet. Dev-VTEP-2 then decapsulates the VXLAN header and learns the VXLAN ID of the packet. The resulting packet is the same packet as in step 3.
8. Dev-VTEP-2 then forwards the packet to S2.
9. S2 processes the request packet and sends the response to the SNIP address of NS-ADC. The response packet has:
 - Source IP address = IP address of S2 (192.0.1.102)
 - Destination IP address = Subnet IP address on NS-ADC= SNIP-for-Servers (192.0.1.50)

10. Dev-VTEP-2 encapsulates the response packet in the same way that NS-ADC encapsulated the request packet in steps 4 and 5. Dev-VTEP-2 then sends the encapsulated UDP packet to SNIP address SNIP-for-Servers (192.0.1.50) of NS-ADC.
11. NS-ADC, upon receiving the encapsulated UDP packet, decapsulates the packet by removing the UDP and VXLAN headers in the same way that Dev-VTEP-2 decapsulated the packet in step 7. The resultant packet is the same response packet as in step 9.
12. NS-ADC then uses the session table for load balancing virtual server LBVS, and forwards the response packet to client CL. The response packet has:
 - Source IP address = IP address of client CL (198.51.100.90)
 - Destination IP address = IP address (VIP) of LBVS (198.51.110.100)

Points to Consider for Configuring VXLANs

Consider the following points before configuring VXLANs on a NetScaler:

- A maximum of 2048 VXLANs can be configured on a NetScaler.
- VXLANs are not supported in a cluster.
- Link-local IPv6 addresses cannot be configured for each VXLAN.
- NetScalers do not support Internet Group Management Protocol (IGMP) protocol to form a multicast group. NetScalers rely on the IGMP protocol of its upstream router to join a multicast group, which share a common multicast group IP address. You can specify a multicast group IP address while creating VXLAN bridge table entries but the multicast group must be configured on the upstream router. The NetScaler sends broadcast, multicast, and unknown unicast frames over Layer 3 to the multicast group IP address of this VXLAN. The upstream router then forwards the packet to all the VTEPs that are part of the multicast group.
- VXLAN encapsulation adds an overhead of 50 bytes to each packet:

Outer Ethernet Header (14) + UDP header (8) + IP header (20) + VXLAN header (8) = 50 bytes

To avoid fragmentation and performance degradation, you must adjust the MTU settings of all network devices in a VXLAN pathway, including the VXLAN VTEP devices, to handle the 50 bytes of overhead in the VXLAN packets.

Important: Jumbo frames are not supported on the NetScaler VPX virtual appliances, NetScaler SDX appliances, and NetScaler MPX 15000/17000 appliances. These appliances support an MTU size of only 1500 bytes and cannot be adjusted to handle the 50 bytes overhead of VXLAN packets. VXLAN traffic might be fragmented or suffer performance degradation, if one of these appliances is in the VXLAN pathway or acts as a VXLAN VTEP device.

- On NetScaler SDX appliances, VLAN filtering does not work for VXLAN packets.

- You cannot set a MTU value on a VXLAN.
- You cannot bind interfaces to a VXLAN.

Configuration Steps

Configuring a VXLAN on a NetScaler appliance consists of the following tasks.

- **Add a VXLAN entity.** Create a VXLAN entity uniquely identified by a positive integer, which is also called the VXLAN Network Identifier (VNI). In this step, you can also specify the destination UDP port of remote VTEP on which the VXLAN protocol is running. By default, the destination UDP port parameter is set to 4789 for the VXLAN entity. This UDP port setting must match the settings on all remote VTEPs for this VXLAN. You can also bind VLANs to this VXLAN. The traffic (which includes broadcasts, multicasts, unknown unicasts) of all bound VLANs are allowed over this VXLAN. If no VLANs are bound to the VXLAN, the NetScaler allows traffic of all VLANs, on this VXLAN, that are not part of any other VXLANs.
- **Bind the local VTEP IP address and to the VXLAN entity.** Bind one of the configured SNIP address to the VXLAN to source outgoing VXLAN packets.
- **Add a bridgetable entry.** Add a bridgetable entry specifying the VXLAN ID and the remote VTEP IP address for the VXLAN to be created.
- **(Optional) Bind different feature entities to the configured VXLAN.** VXLANs function similarly to VLANs, most of the NetScaler features that support VLAN as a classification parameter also support VXLAN. These features include an optional VXLAN parameter setting, which specifies the VXLAN VNI.
- **(Optional) Display the VXLAN mapping table.** Display the VXLAN mapping table, which includes mapping entries for remote host MAC address to VTEP IP address for a particular VXLAN. In other words, a VXLAN mapping states that a host is reachable through the VTEP on a particular VXLAN. The NetScaler learns VXLAN mappings and updates its mapping table from the VXLAN packets it receives. The NetScaler uses the VXLAN mapping table to lookup for the destination MAC address of a Layer 2 frame. If an entry for this MAC address is present in the VXLAN table, the NetScaler sends the Layer 2 frame over Layer 3, using the VXLAN protocol, to the mapped VTEP IP address specified in the mapping entry for a VXLAN.

CLI procedures

To add a VXLAN entity by using CLI:

At the command prompt, type

- **add vxlan** <id>
- **show vxlan**<id>

To bind the local VTEP IP address to the VXLAN by using CLI:

At the command prompt, type

- **bind vxlan** <id> **-SrcIP** <IPaddress>
- **show vxlan** <id>

To add a bridgetable by using CLI:

At the command prompt, type

- **add bridgetable -mac** <macaddress> **-vxlan** <ID> **-vtep** <IPaddress>
- **show bridgetable**

To display the VXLAN forwarding table by using the command line:

At the command prompt, type:

- **show bridgetable**

GUI procedures

To add a VXLAN entity and bind a local VTEP IP address by using the GUI:

Navigate to **System > Network > VXLANs**, and add a new VXLAN entity or modify an existing VXLAN entity.

To add a bridgetable by using the GUI:

Navigate to **System > Network > Bridge Table**, set the following parameters while adding or modifying a VXLAN bridge table entry:

- MAC
- VTEP
- VXLAN ID

To display the VXLAN forwarding table by using the GUI:

Navigate to **System > Network > Bridge Table**.

```
1 Example
2 > add vxlan 9000
3 Done
4 > bind vxlan 9000 -srcIP 203.0.100.100
5
6 Done
7 > add bridgetable -mac 00:00:00:00:00:00 -vxlan 9000 -vtep
   203.0.101.101
8
9 Done
```

```

10 > add bridgetable -mac 00:00:00:00:00:00 -vxlan 9000 -vtep
      203.0.102.102
11
12 Done

```

Support of IPv6 Dynamic Routing Protocols on VXLANs

The NetScaler appliance supports IPv6 dynamic routing protocols for VXLANs. You can configure various IPv6 Dynamic Routing protocols (for example, OSPFv3, RIPng, BGP) on VXLANs from the VTYSH command line. An option IPv6 Dynamic Routing Protocol has been added to VXLAN command set for enabling or disabling IPv6 dynamic routing protocols on a VXLAN. After enabling IPv6 dynamic routing protocols on a VXLAN, processes related to the IPv6 dynamic routing protocols are required to be started on the VXLAN by using the VTYSH command line.

To enable IPv6 Dynamic routing protocols on a VXLAN by using the CLI:

- **add vxlan** <ID> [-**ipv6DynamicRouting** (**ENABLED** | **DISABLED**)]
- **show vxlan**

```

1 In the following sample configuration, VXLAN-9000 is created and has
  IPv6 dynamic routing protocols enabled on it. Then, using the VTYSH
  command line, process for the IPv6 OSPF protocol is started on the
  VXLAN.
2
3 > add vxlan 9000 -ipv6DynamicRouting ENABLED
4
5 Done
6 > bind vxlan 9000 -srcIP 203.0.100.100
7
8 Done
9 > add bridgetable -mac 00:00:00:00:00:00 -vxlan 9000 -vtep
      203.0.101.101
10
11 Done
12 > VTYSH
13 NS# configure terminal
14 NS(config)# ns IPv6-routing
15 NS(config)# interface VXLAN-9000
16 NS(config-if)# ipv6 router OSPF area 3

```

Extending VLANs from Multiple Enterprises to a Cloud using VXLAN-VLAN Maps

CloudBridge Connector tunnels is used to extend an enterprise's VLAN to a cloud. VLANs extended from multiple enterprises can have overlapping VLAN IDs. You can isolate each enterprise's VLANs, by mapping them to a unique VXLAN in the cloud. On a NetScaler appliance, which is the CloudBridge connector endpoint in the cloud, you can configure a VXLAN-VLAN map that links an enterprise's

VLANs to a unique VXLAN in the cloud. VXLANs support VLAN tagging for extending multiple VLANs of an enterprise from CloudBridge Connector to the same VXLAN.

Perform the following tasks for extending VLANs of multiple enterprises to a cloud:

1. Create a VXLAN-VLAN map.
2. Bind the VXLAN-VLAN map to a network bridge based or PBR based CloudBridge Connector tunnel configuration on the NetScaler appliance on cloud.
3. (Optional) Enable VLAN tagging in a VXLAN configuration.

CLI procedures

To add a VXLAN-VLAN map by using the CLI:

- **add vxlanVlanMap** <name>
- **show vxlanVlanMap** <name>

To bind a VXLAN and VLANS to a VXLAN-VLAN map by using the CLI:

- **bind vxlanVlanMap** <name> [-vxlan <positive_integer> -vlan <int[-int]> ...]
- **show vxlanVlanMap** <name>

To bind a VXLAN-VLAN map to a network bridge based CloudBridge Connector tunnel by using the CLI:

At the command prompt, type one of the following sets of commands.

if adding a new network bridge:

- **add netbridge** <name> [-vxlanVlanMap <string>]
- **show netbridge** <name>

if reconfiguring an existing network bridge:

- **set netbridge** <name> [-vxlanVlanMap <string>]
- **show netbridge** <name>

To bind a VXLAN-VLAN map to a PBR based CloudBridge Connector tunnel by using the CLI:

At the command prompt, type one of the following sets of commands.

if adding a new PBR:

- **add pbr** <name> **ALLOW** (-ipTunnel <ipTunnelName> [-vxlanVlanMap <name>])
- **show pbr** <name>

if reconfiguring an existing PBR:

- **set pbr** <name> **ALLOW** (-ipTunnel <ipTunnelName> [-vxlanVlanMap <name>])
- **show pbr** <name>

To include VLAN tags in packets related to a VXLAN by using the CLI:

At the command prompt, type one of the following sets of commands.

if adding a new VXLAN:

- **add vxlan** <vnid> -vlanTag (**ENABLED** | **DISABLED**)
- **show vxlan** <vnid>

if reconfiguring an existing VXLAN:

- **set vxlan** <vnid> -vlanTag (**ENABLED** | **DISABLED**)
- **show vxlan** <vnid>

GUI procedures

To add a VXLAN-VLAN map by using the GUI:

Navigate to **System > Network > VXLAN VLAN Map**, add a VXLAN VLAN map.

To bind a VXLAN-VLAN map to a netbridge based CloudBridge Connector tunnel by using the GUI:

Navigate to **System > CloudBridge Connector > Network Bridge**, select a VXLAN-VLAN map from the **VXLAN VLAN** drop down list while adding a new network bridge, or reconfiguring an existing network bridge.

To bind a VXLAN-VLAN map to a PBR based CloudBridge Connector tunnel by using the GUI:

Navigate to **System > Network > PBRs**, on the Policy Based Routing (PBRs) tab, select a **VXLAN-VLAN** map from the **VXLAN VLAN** drop down list while adding a new PBR, or reconfiguring an existing PBR.

To include VLAN tags in packets related to a VXLAN by using the GUI:

Navigate to **System > Network > VXLANs**, enable **Inner VLAN Tagging** while adding a new VXLAN, or reconfiguring an existing VXLAN.

```

1 > add vxlanVlanMap VXLANVLAN-DC1
2
3 Done
4
5 > bind vxlanvlanmap VXLANVLAN-DC1 -vxlan 3000 -vlan 3
6
7 Done
8
9 > bind vxlanvlanmap VXLANVLAN-DC1 -vxlan 3500 -vlan 4
10
11 Done

```

```
12
13 >add vxlanVlanMap VXLANVLAN-DC2
14
15 Done
16
17 > bind vxlanvlanmap VXLANVLAN-DC1 -vxlan 8000 -vlan 3 4
18
19 Done
20
21 > set pbr PBR-CBC-DC-1-CLOUD ALLOW -ipTunnel CBC-DC-1-CLOUD -
    vxlanVlanMap VXLANVLAN-DC1
22
23 Done
24
25 > set pbr PBR-CBC-DC-2-CLOUD ALLOW -ipTunnel CBC-DC-2-CLOUD -
    vxlanVlanMap VXLANVLAN-DC2
26
27 Done
```

Geneve tunnels

May 2, 2023

A NetScaler appliance supports the Generic Network Virtualization Encapsulation (Geneve) protocol as defined in RFC 8926.

Server virtualization and cloud computing architecture have increased the demand for isolated Layer-2 networks in a data center.

The VLAN limit of 4094 has proven to be inadequate and encapsulation protocols like VXLAN and NVGRE were introduced to overcome this limitation. These protocols differ mainly in the control plane implementation. Geneve protocol does not define specifications for the control plane. The protocol leaves to the implementation to define the control plane specifications.

Geneve protocol is an encapsulation technology that aims to create Layer-2 overlay networks over Layer-3 infrastructure by encapsulating Layer-2 frames in UDP packets.

A unique 24-bit identifier called the VNID identifies each VLAN. Only within the same segment ID (VNID) can communicate with each other. A NetScaler appliance supports the Geneve encapsulation on UDP port 6081.

There are two types of Geneve tunnel that can be created:

- Tunnels can extend an existing VLAN in L2 or L3 mode. In L2 mode, bridging happens between VLAN and tunnel and the entries are updated in the bridge table.

In L3 mode, proxy ARP comes into effect to learn the MAC address and the tunnel information

of the client/server address. The ARP table includes the corresponding MAC and tunnel information.

- Geneve Tunnel can work with different VLANs in L3 mode by using policy-based routes (PBRs). When a packet must be sent to a host which is reachable on a Geneve Tunnel segment, the NetScaler appliance encapsulates the packet in a Geneve Tunnel header and sends it to the tunnel endpoint.

NetScaler can act as a tunnel endpoint as well. A tunnel endpoint originates and terminates Geneve tunnels. When Layer 2 mode is turned ON, the NetScaler appliance acts as a tunnel endpoint and bridges packets between VLANs and Geneve Tunnels. The NetScaler learns the VNID and tunnel endpoint on which a MAC address is reachable. Then it stores this information in the bridging table.

Geneve tunnel is supported in NetScaler admin partitions, NetScaler high availability setups, and NetScaler cluster setups.

In a high availability setup, a Geneve tunnel configuration is propagated or synchronized to the secondary node. In a cluster setup, the Geneve tunnel configuration (striped) is identical and present on all cluster nodes.

Configuring Geneve tunnels

Configuring a Geneve tunnel on a NetScaler appliance consists of the following tasks:

- Add an IP tunnel with protocol
- Add a net bridge
- bind the geneve tunnel to the net bridge

To add an IP tunnel with Geneve protocol by using the CLI:

At the command prompt, type:

- **add iptunnel** <name> <remote> <remoteSubnetMask> <local> **protocol** <Geneve> **destPort** <port> **tosInherit** (**ENABLED** | **DISABLED**) **vlanTagging** (**ENABLED** | **DISABLED**) **vnid** <positive_integer>
- **show iptunnel**

To add a net bridge by using the CLI:

At the command prompt, type:

- **add netbridge** <name>
- **show netbridge**

To bind the geneve tunnel to the netbridge by using the CLI:

At the command prompt, type:

- **bind netbridge** <name> -vlan <Vlan ID> -tunnel <tunnel name>
- **show netbridge**


Best practices for network configurations

May 2, 2023

The following sections talk about some best practices for configuring networking features on a NetScaler appliance.

Routing and Default Routes

The following are some best practices for configuring Layer 3 features on a NetScaler appliance.

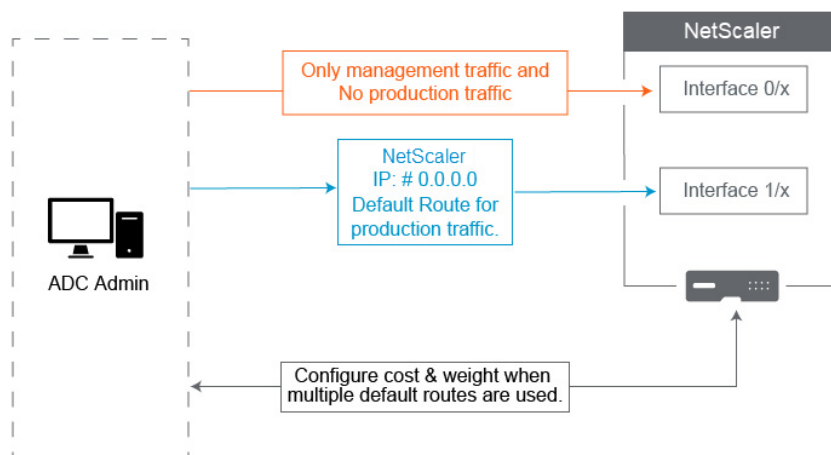

- **Interface 0/x on a NetScaler appliance or NetScaler SDX appliance must not be used for production traffic.** On an MPX or SDX, Interfaces named 0/x are referred to the Management Interfaces. This does not mean you must use these interfaces for Management. What it means is that these interfaces are NOT designed for Production traffic. They do not have the hardware buffers and optimization necessary to achieve sustained 1 Gbps throughput. Therefore, If your Default Route is in the same Subnet as your NSIP, you must either change the default route or use a 1/x interface for your Management network as the 1/x interfaces are fully optimized for production 1 Gbps traffic.

Note:

This does not apply to a NetScaler VPX appliance.

- **Option 1.** Do not connect to Interfaces 0/x –Disconnect the cable from interface 0/1. NetScaler listens for the NSIP on the other interfaces. (NOTE: This is not an option for SDX, as the SVM and XenServer can only speak to 0/x interfaces)
- **Option 2.** change the default route to a different interface as detailed in the next section.
- **Default gateway (route 0.0.0.0) should be on a Production network, and not on any 0/x interface.** When first setting up a NetScaler, it asks you for the NSIP, Subnet Mask, and Gateway address. The problem this creates for Administrators is that they just configured their default route to be on their Management Network using Interface 0/1.

- To check what your routes are, run in CLI `show route` and your default gateway is the IP in the line where the Network and Netmask are 0.0.0.0. Here’s an example where the Gateway is on Line 1:

```

1 > sh route
2           Network           Netmask           Gateway/OwnedIP
3           State   Traffic Domain   Type
4           -----
5 1) 0.0.0.0           0.0.0.0           10.25.213.65     UP
6     0                STATIC
7 2) 127.0.0.0        255.0.0.0         127.0.0.1        UP
8     0                PERMANENT
9 3) 10.25.213.64     255.255.255.192  10.25.213.68     UP
10    0                DIRECT
11 4) 172.16.0.0       255.255.255.0    172.16.0.1       UP
12    0                DIRECT
  
```

- To check the Interface and VLAN used for your Default Gateway, check the ARP table using `sh arp` in CLI. You can also search for the specific IP using `show arp | grep 10.25.213.65`. Here’s an example where you see the Gateway 10.25.213.65 is using Interface 1/1 and VLAN 1:

```

1 > sh arp
2           IP           MAC           Iface VLAN
3           Origin   TTL   Traffic Domain
4           ---
5 1) 127.0.0.1           02:00:18:a4:00:1e  LO/1  1
6     PERMANENT N/A  0
7 2) 10.25.213.70       02:00:0f:46:00:28  1/1   1
8     DYNAMIC  967  0
9 3) 10.25.213.68       02:00:18:a4:00:1e  LO/1  1
10    PERMANENT N/A  0
11 4) 10.25.213.67       02:00:0f:46:00:28  1/1   1
12    DYNAMIC  641  0
13 5) 10.25.213.65       00:08:e3:ff:fd:90  1/1   1
14    DYNAMIC  483  0
  
```

- Change the default route to use a Gateway on your Production Subnet and Interface. Assume your Management network is 10.0.0.0/24 with gateway 10.0.0.1, and Production network is 10.1.1.0/24 with gateway 10.1.1.1. Set up your config like this:


- * SNIP: (Management Access Disabled) 10.1.1.2
- * NSIP: (Management Access Enabled) 10.0.0.2
- * Default Route: 0.0.0.0 0.0.0.0 10.1.1.1 (System > Network > Routes). This uses a router on the SNIP network instead of the NSIP network.

Note:

Changing the default gateway might break management traffic unless you configure static routes, a Policy Based Route, or enable MAC Based Forwarding.

Interfaces, channels, and VLANs

The following are some best practices for configuring Layer 2 features on a NetScaler appliance.

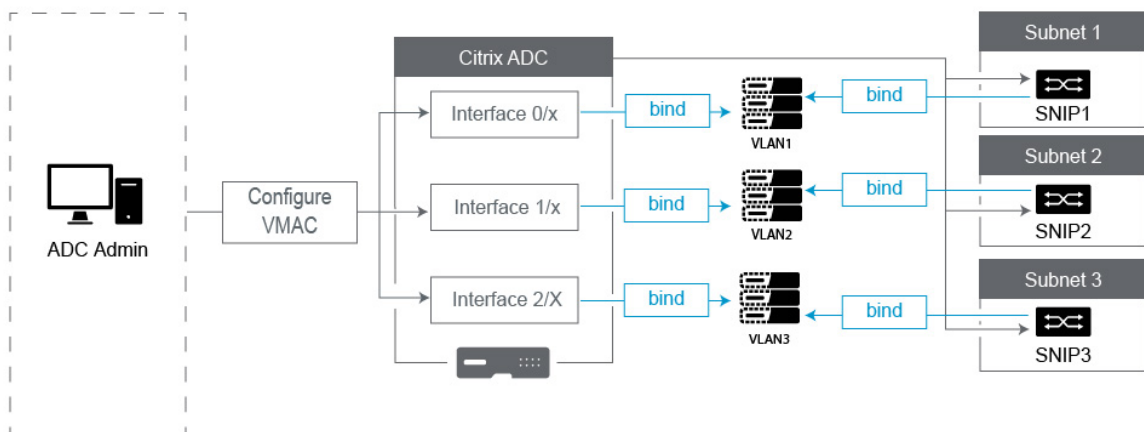

• Do not connect multiple interfaces/channels to the same VLAN, including VLAN 1:

- If you do not properly configure your VLANs, it can cause some unexpected packet routing in your network and Layer 2 looping anytime there are more than one Active interface with the same VLAN (either Native or Tagged).
- By Default, all Interfaces and Channels are on Native VLAN 1. This creates two possible problems:
 - * The NetScaler thinks all traffic received is on the same network, so it uses any interface to send the traffic out on. If you have a different Native VLAN on the interface it sent data out on, then the traffic will not be routed as you expect.

- ★ If the NetScaler receives broadcast packets on one port, it may retransmit on another port. If both switchports are on the same VLAN, you just created a Layer 2 loop.
- To remove an interface/channel from VLAN 1:
 - ★ If you are not using Native VLANs on your switch interface/port channel. Change the Native VLAN on the NetScaler Interface/Channel to an unused VLAN number such as 999. You should not use the same unused VLAN number for multiple Channels or Interfaces, as it creates a layer 2 loop.
 - ★ If you are using Native VLANs on your switch interface/port channel. Change the Native VLAN on the NetScaler Interface/Channel to match. However take care not to have multiple active Interfaces or Channels on the same VLAN as doing so creates Layer 2 loops.
 - ★ You cannot remove the Native VLAN. Instead, you can change it or set TagAll for the interface or channel. If the switch port isn't configured with an untagged native VLAN, then enable tagall on the interface so High Availability heartbeat packets will be tagged.
- To view the Native VLAN on an interface, run `sh interface` in CLI. This will also inform you if the interface is using the TAGALL option.
- **Bind an Interface to your VLAN** - The NetScaler, by default, does not attach a new VLAN to an interface. This means the VLAN is not going to be used until you bind it to an interface. When the new VLAN is not bound to an Interface and that VLAN is Tagged, the NetScaler drops all inbound traffic from that VLAN. Also, do not bind the same VLAN to more than one interface.
 - Bind Subnets to your VLANs. The NetScaler does not work like a typical Router. Most Routers attach IPs to Interfaces. On a NetScaler, the IPs float on any Interface unless configured otherwise. Therefore, any Subnet you want to ensure the NetScaler sends over a specific VLAN, especially when the NetScaler is Initiating that traffic, then you must bind a SNIP within that subnet to the VLAN.
 - A common argument we hear against this is that it used to work fine and now it doesn't without binding the Subnet to the VLAN. This often occurs because the NetScaler learns which VLAN to send traffic out, but this can take time as it builds its ARP tables. After a reboot or firmware upgrade, as it starts building the ARP tables again, it may initially learn and therefore be using a different path than you desire, such as your default route. It's best to instruct it which path to take by Binding the SNIP to the VLAN. Once a SNIP is bound to a VLAN, the entire subnet for that SNIP will be bound to the VLAN.
 - Ensure every SNIP is bound to a VLAN (except in cases where you have more than 1 SNIP in a subnet, then you only must bind one), and that the VLAN, in turn, is bound to only one Interface or channel. It is also often best to have a SNIP in every Subnet, but that is not

required as the most specific Route will be used for any destination Subnet that does not have a SNIP.

- To identify the VLAN and Interface used by a Subnet:
 1. Go to **System>Network > VLANs**.
 2. Edit each VLAN configured, in turn, until you find the correct IP address as explained in the next step.
 3. Click the IP Bindings tab to see which IP, and thus which Subnet is bound and thus is using this VLAN.
 4. Once you identify the VLAN that has an IP bound to it, where that IP is within the subnet of the Default Route, then click the Interface Bindings. Each Interface or Channel bound to this VLAN will be used.

Example

Assume the Default route is 0.0.0.0 0.0.0.0 10.1.1.1.

Assume you have two SNIPs of 10.0.0.5 and 10.1.1.69. Since 10.1.1.69 is in the subnet of the default route, that is the one you want to look for. In the below screenshots, we are reviewing VLAN 1 and we see the IP 10.1.1.69 is bound to this VLAN, so we know we are looking at the correct VLAN.

Now Click Interface Bindings. In the VLAN Interface bindings we see that Interface 1/1 is used for this subnet, and therefore is used for the default route.

← | Configure VLAN

VLAN ID: 1

Alias Name: [Empty]

Maximum Transmission Unit: [Empty]

Dynamic Routing

IPv6 Dynamic Routing

Partitions Sharing

Interface Bindings		IP Bindings
<input type="checkbox"/>		Name
<input checked="" type="checkbox"/>		1/1
<input checked="" type="checkbox"/>		LO/1

NOTE:

If you do not have any IPs bound to your VLANs, then by default it will be sent out VLAN 1, so in that case look at which Interfaces are bound to VLAN 1. This also means the NetScaler will not use your Configured VLANs for traffic it Initiates unless you bind an IP to the new VLAN.

Gratuitous ARP


If GARP does not work, use VMAC - By default, the NetScaler uses GARP to advertise its IP to MAC address bindings to other network devices. This typically works without issue, however, as you create more services in the NetScaler, you may begin to experience issues when failing over on an HA pair. The most common issue is that services remain down in the NetScaler you failed over to due to some network devices not having updated their ARP tables with the new MAC address. You can easily verify this by checking their ARP tables to see if the MAC addresses match those on the now-Primary NetScaler. When this occurs, it is highly likely that some of your network devices are limiting the number of GARP advertisements they honor. In this case it is necessary to configure VMAC on all your active interfaces and/or channels. If you expect to have a large configuration on your NetScaler, it may be best to configure VMAC for all interfaces and channels during the initial deployment.

NOTE:

Do not forget to configure VMAC for the Interface or Channel used by your Default Route.

NetScaler owned IP Addresses

This section talks about the best practices for configuring NetScaler owned IP addresses:

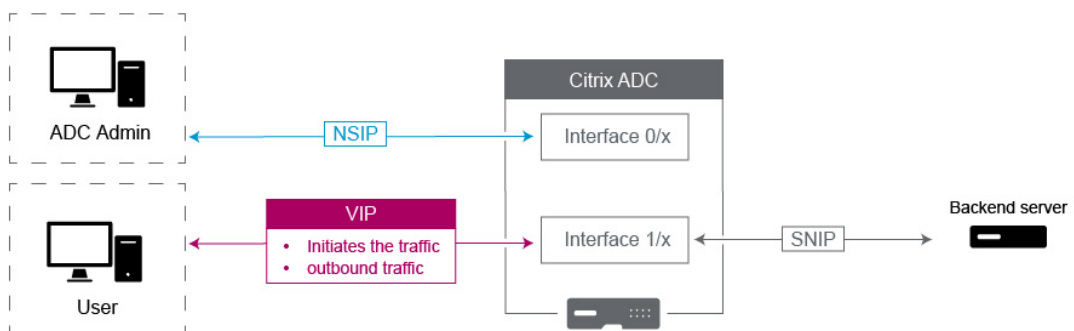

- **NetScaler IP (NSIP):** Generally this IP used for Management because it is the only IP unique to an individual NetScaler in an HA or Cluster environment. Also important to note is that LDAP, RADIUS, and User scripted Monitor traffic (such as the LDAP monitor and StoreFront monitor) will Source from the NSIP and thus route over the VLAN and Interface the NSIP is bound to (Default Native VLAN 1). If you need the LDAP and RADIUS traffic to source from the SNIP, then create an LB virtual server for your back end servers.
- **Subnet IP (SNIP):** This IP address is used to initiate communication to back-end servers and is always going to initiate traffic. That said, it can be the destination for traffic in these cases:
 - It can be used as the Gateway address on other devices when doing Layer 3 routing on the NetScaler.
 - It can, when enabled, accept Management services, such as access to the GUI, SSH, and SNMP.
- **Virtual IP (VIP):** The VIP is unique in that it will never be used to initiate outbound traffic. It is intended to receive Traffic only. Once it receives traffic, it replies and sends traffic outbound back to the client. In other words, the VIP address does not initiate the outbound traffic.

Note this also means it is not used as the source for communicating with back-end servers used in, for example, an LB virtual server.

Configure NetScaler to source FreeBSD data traffic from a SNIP address

December 9, 2024

Some NetScaler data features run on the underlying FreeBSD OS instead of on the NetScaler OS. Because of this reason, these features send traffic sourced from the NetScaler IP (NSIP) address instead of sourced from a SNIP address. Sourcing the data traffic from the NSIP address is not desirable if your setup has configurations to separate all management and data traffic.

Some of the NetScaler data features that run on the underlying FreeBSD OS and send traffic sourced from the NetScaler IP (NSIP) address are:

- Load balancing scriptable monitors
- GSLB autosync

To resolve this issue, you can use the global Layer-2 parameter: `useNetprofileBSDtraffic`. When you enable this parameter, the NetScaler features send traffic sourced from one of the SNIP addresses in a net profile associated with the feature.

Before you begin

Before configuring NetScaler to source NetScaler features related traffic from a SNIP address, note the following points:

- Currently, the global Layer-2 parameter `useNetprofileBSDtraffic` is supported only for load balancing scriptable monitors.

For configuring NetScaler to source GSLB autosync traffic from a SNIP address, you can use extended ACL rules and RNAT rules as a workaround.

- The `useNetprofileBSDtraffic` support for load balancing scriptable monitors is applicable only for net profiles bound to the related services. The `useNetprofileBSDtraffic` support is not applicable for net profiles bound to the related service groups.

In other words, NetScaler does not use any SNIP address from the net profiles bound to the service groups for sourcing load balancing scriptable monitors traffic.

- The `useNetprofileBSDtraffic` support is not applicable for SSL services.

In other words, NetScaler does not use any SNIP address from the net profiles bound to the SSL services for sourcing load balancing scriptable monitors traffic.

Configure NetScaler to source scriptable monitors traffic from a SNIP address

- Enable the global Layer-2 parameter `useNetprofileBSDtraffic`.
- Create a net profile and bind at least one SNIP address to it.
- Bind the net profile to the load balancing services.

To enable the Layer-2 parameter `useNetprofileBSDtraffic` by using the CLI:

At the command prompt, type:

- `set l2param -useNetprofileBSDtraffic (ENABLED / DISABLED)`
- `show l2param`

To Create a net profile and bind SNIP addresses to it by using the CLI:

At the command prompt, type:

- `add netProfile <name> -srcIP <string>`
- `show netProfile`

To bind a net profile to a load balancing service by using the CLI:

At the command prompt, type:

- `set service <name> -netProfile <string>`
- `show service <name>`

Sample configuration

The following sample configuration enables NetScaler to source scriptable monitors traffic from a SNIP address. A net profile NETPROFILE-1 is configured with SNIP address 198.51.100.20 bound to it. A user/scriptable monitor USER-MONITOR-1 is created and is bound to a load balancing service SERVICE-1. NETPROFILE-1 is bound to SERVICE-1. NetScaler sources all scriptable monitors packets of USER-MONITOR-1 from SNIP address 198.51.100.20.

```
1 set l2param -useNetprofileBSDtraffic ENABLED
2
3 add netprofile NETPROFILE-1 -srcip 198.51.100.20
4
5 add lb monitor USER-MONITOR-1 USER -scriptName nsftp.pl -scriptArgs "
   file=Index.png;user=nsroot;password=nsroot" -dispatcherIP 127.0.0.1
   -dispatcherPort 3013 -destIP 203.0.113.90 -destPort 21
6
7 bind service SERVICE-1 -monitorName USER-MONITOR-1
8
9 set service SERVICE-1 -netProfile NETPROFILE-1
```

Configure NetScaler to source GSLB autosync and other FreeBSD originated traffic from a SNIP address

- **Create an extended ACL rule.** An extended ACL rule identifies the GSLB autosync packets. This identification is based on the source IP and destination IP addresses.
- **Apply ACLs.** Applying ACLs activates the newly created ACL rule.
- **Create an ACL based RNAT rule.** An RNAT rule changes the source IP address of these packets from the NSIP address to a SNIP address.

Note:

In a high availability or cluster setup, you must add ACL and RNAT rules for all the NSIP addresses of the setup.

To create an extended ACL by using the CLI:

At the command prompt, type:

- `add acl <aclname> ALLOW -srcIP = <NSIP address> -destIP = < destination IP address of the packets>`
- `show acl <aclName>`

To apply extended ACLs by using the CLI:

At the command prompt, type:

- `apply acls`

To create an ACL based RNAT rule by using the CLI:

At the command prompt, type:

- `add rnat <name> <aclname>`
- `bind rnat <name> -natIP <SNIP address - source IP address for the packets>`
- `show rnat <name>`

Sample configuration

The following sample configuration enables NetScaler to source GSLB autosync traffic from a SNIP address. ACL-2 identifies GSLB autosync packets, which are sourced from NSIP address 192.0.1.20 and destined to GSLB site IP address 203.0.113.20. RNAT-2 changes the source IP address to SNIP address 198.51.100.20 for these identified packets.

```
1 add acl ACL-2 ALLOW -srcIP = 192.0.1.20 -destIP = 203.0.113.20
2
3 apply acls
4
5 add rnat RNAT-2 ACL-2
6
7 bind rnat RNAT-2 -natIP 198.51.100.20
```

In general, any FreeBSD originated traffic can use the earlier mentioned ACL with RNAT illustration to choose a specific SNIP as a source IP address instead of NSIP. It is good to know the destination IP address.

Observability

June 6, 2024

Due to the increasing complexity of modern applications, monitoring and troubleshooting applications is becoming more challenging for IT teams. Also, gaining visibility into the behavior of infrastructure and applications are more critical for software development teams. Observability bridges this gap by providing deeper insights into the entire infrastructure. Observability tools can collect application or system performance telemetry continuously by integrating with various IT infrastructure components and provides holistic visibility into your IT infrastructure.

Some of the benefits of observability can be summarized as:

- **Faster troubleshooting:** Detailed data insights obtained from observability tools help you to diagnose and troubleshoot system issues faster.
- **Enhanced application performance:** Monitoring key metrics and identifying issues helps developers to make data-driven decisions to improve application performance.
- **Improved reliability and better user experience:** Observability data allows developers to proactively resolve system failures that may disrupt user experience.

What is observability

Observability is the ability to understand the internal state of a system by analyzing the data it produces, such as logs, metrics, traces, and events. Observability enables you to understand and answer specific questions about the behavior of your system when failures occur. With a deep understanding of your systems you can be better prepared for the unknowns.

For example, you can track how slow or fast, what is broken, and what should be done to enhance system performance.

Metrics, logs, and traces are the key pillars of observability.

- **Metrics:** Metrics are a numeric representation of data that are measured by NetScaler. Metric data is useful to track the health of a system over time. These numerical measurements include CPU usage, memory usage, and error rates.
- **Logs:** Logs are messages or records that describe events that happened at a particular point in time. Usually, these messages or records are generated by an application or system.
- **Traces:** Traces represent the journey of a request as it moves through the different parts of a distributed system. Traces document how a request is processed and how long it takes to complete. This data can help identify bottlenecks and other latency issues.

Monitoring vs Observability

Monitoring is a set of tools or solutions to inform you when something is wrong. With observability you can identify what is happening and quickly pinpoint the root of the issues to know why it happened. It integrates the facts and data generated by monitoring to offer you a thorough view of your system performance and health. Using observability, you can automatically analyze your data and improve user experiences based on a rapid, accurate input.

Observability with NetScaler

When NetScaler is deployed as a proxy for application deployments, NetScaler inspects each user request or response for global routing and local data center routing. With the thousands of logs and counters provided by NetScaler you can have granular information about HTTP, TCP, SSL, and DNS packets. You can leverage such rich data and insights from NetScaler to troubleshoot and pinpoint issues. You can export the data from NetScaler to your preferred observability endpoints to create visualizations and get real-time, granular application insights.

NetScaler provides integrations with popular observability tools such as Prometheus, Splunk, Elastic-Serach, and Kafka.

Direct integration of NetScaler is available with Prometheus. With direct integration, there is no need to deploy any additional agent or node to export the data and build customized dashboards of your needs. Prometheus focuses on time series data monitoring which collects numeric metrics from all entities.

NetScaler Console has several built-in observability capabilities such as SSL insights, web transaction insights, and API insights.

NetScaler can provide three kinds of insights as part of observability:

- **Application and API insights:** Application health insights help with troubleshooting which application website has high latency or an elevated number of errors or subpar performance. It also includes monitoring errors, traffic, latency, and saturation metrics. Collectively these signals are known as the golden signals for monitoring the state of applications.
- **Application and API security insights:** Application security insights include WAF violations detected or prevented compared to the overall traffic, the top application affected by WAF or BOT violations, and CVEs, BOT classifications like good and bad bots, and provides information on attackers.
- **Network infrastructure insights:** NetScaler infrastructure insights include information about the NetScaler such as the CPU utilization, memory and disk usage, and network interface telemetry. You can also get specific feature level insights like SSL, GSLB, Multipath TCP (MPTCP) and insights for SSL TLS monitoring like certificate expiry details, protocol used, and cipher strength.

For detailed information on directly exporting metrics to Prometheus from NetScaler, see [Monitoring NetScaler, applications, and application security using Prometheus](#).

Metrics

October 16, 2024

Metrics refers to the piece of data that is tracked by NetScaler. Metrics provide meaningful insights and is useful to track the health of NetScaler and the applications handled by NetScaler.

A time series is a sequence of sequential data points that occur over a particular interval of time. NetScaler supports configuring the analytics time series profile to send metrics to a service.

Configure metrics

You can enable metrics on NetScaler to collect and export metrics from NetScaler to various endpoints. You can export metrics in the following formats: Avro, Prometheus, and JSON. The exported metrics can be processed and visualized to get meaningful insights. By default, metrics supports the export of time-series analytics data every 30 seconds. However, you can configure it to a value between 30 to 300 seconds as per your requirement.

Do the following to configure a metrics using the NetScaler CLI.

1. Configure a service with IP address, protocol, and port using the following command:

```
1 add service <metrics_service_name> <ip-address> <protocol> <port>
```

Example:

```
1 add service metrics_service1 192.168.1.1 HTTP 5563
```

2. Configure the analytics time series profile to send metrics to the service. Specify the service, frequency for exporting metrics, and output mode.

```
1 set analytics profile ns_analytics_time_series_profile -collectors
  <metrics_service_name> -type timeseries -metrics ENABLED
  metricsExportFrequency <30-300> -outputMode <avro/prometheus>
```

Example:

```
1 set analytics profile ns_analytics_time_series_profile -collectors
  metrics_service1 -type timeseries -metrics Enabled
  metricsExportFrequency 90 -outputMode prometheus --serveMode
  PUSH
```

Note:

This example uses the default time series profile `ns_analytics_time_series_profile`. If you want to create a time series profile, you can use the `add analytics profile` command.

In this example, metrics export frequency is set as 90 seconds and export mode is specified as Prometheus.

Verify the metrics configuration using the `show analytics profile <analytics-profile-name>` command:

```
1 show analytics profile ns_analytics_time_series_profile
2
3     Name: ns_analytics_time_series_profile
4     Collector: metrics_service1
5     Profile-type: timeseries
6     Output Mode: Prometheus
7     Metrics: ENABLED
8     Schema File: schema.json
9     Metrics Export Frequency: 90
10    Events: DISABLED
11    Auditlog: DISABLED
12    Serve mode: Pull
13    Reference Count: 0
```

Metrics file generation

The `metrics_<format>_log.*` files are generated under the `/var/nslog/` folder location.

Dynamic schema support

Starting from NetScaler release 13.1 build 24.38, dynamic schema counters are supported. With the support of dynamic schema counters, a schema file containing a list of counters can be updated at run time based on the requirement. By default, `/var/metrics_conf/schema.json` file is configured with a list of counters.

Note:

- The metrics default schema file `/var/metrics_conf/schema.json` can be installed on a NetScaler appliance by `installns` procedure. For information on `installns` procedure, see [Upgrade and downgrade a NetScaler appliance](#).
- Default schema file `/var/metrics_conf/schema.json` consists of a few entities and counters that are not part of `reference_schema.json`. These counters are retained in `schema.json` for backward compatibility reasons because they were part of the older version of metrics which supported static schema.
- If the `rate` field in `schema.json` is set to `True`, then a counter called `RATE__<counter_name>` is exported by metricscollector as part of metrics payload.

Configure the metrics to subscribe counters using the CLI

Start the metrics export by configuring a service.

At the command prompt, type:

```
1 set analytics profile ns_analytics_time_series_profile -metrics ENABLED
   -collectors <collector_name> -schemaFile schema.json -outputMode <
   avro | prometheus>
```

Note:

`schema.json` is the default `schemaFile` configuration.

A new schema file with a required set of counters can be configured using the CLI command for the metrics to export. The schema file must be present at the `/var/metrics_conf/` location.

The schema file containing all the list of counters (`reference_schema.json`) supported by stats infra is present in the `/var/metrics_conf/` location. This file can be used as a reference to build a custom list of counters.

Configure a schema file using the CLI

```
1 set analytics profile ns_analytics_time_series_profile -metrics ENABLED
   -collectors <collector name> -schemaFile <schema file_name> -
   outputMode <avro | prometheus>
```

A new schema file with the required counters can be added and configured using the preceding CLI command for metrics to export.

The reference schema file with all the list of counters (`reference_schema.json`) supported by stats infra are present in `/var/metrics_conf/` location. This file can be used as a reference to build a custom list of counters.

Check the CLI configuration output at the command prompt:

```
1 show analytics profile ns_analytics_time_series_profile
2
3   Name: ns_analytics_time_series_profile
4   Collector: <collector_name>
5   Profile-type: timeseries
6   Output Mode: avro
7   Metrics: ENABLED
8   Schema File: schema.json
9   Events: ENABLED
10  Auditlog: DISABLED
11  Serve mode: Push
12  Reference Count: 0
```

Steps to update the list of counters exported

Perform the following steps to update the list of exported counters:

1. Update the custom/new schema file.
2. Disable and enable metrics using the `-metrics` option shown in the CLI configuration for the updated schema file to be used.

Multiple time-series profile support

Starting from NetScaler release 13.1 build 33.47, up to three time-series profile configurations are supported on NetScaler.

You can configure each time series to have the following:

- Collector.
- Schema file containing the required set of counters to be exported.
- The data format in which the metrics are to be exported.
- The option to enable or disable metrics audit logs and events.

With the multiple time-series profile support, the metrics can simultaneously export a different set (based on the schema file configured) of metrics to different collectors in different formats (Avro, Prometheus, Influx).

Note:

Even though metrics can be enabled on all the configured time-series profiles, events and audit logs can be enabled only on one profile.

Add time-series profile using the CLI

At the command prompt, type:

```
1 add analytics profile <profile_name> -type timeseries
```

Configure time-series profile using the CLI

At the command prompt, type:

```
1 set analytics profile <profile_name> -metrics <DISABLED|ENABLED> -  
  auditlogs <DISABLED|ENABLED> -events <DISABLED|ENABLED> -collectors  
  <collector_name> -schemaFile schema.json -outputMode <avro | influx  
  | prometheus>
```


Log file-naming conventions with multiple time-series profile support

- Avro log files are generated as `metrics_avro_<profile_name>_log.*`.
- Prometheus log files are generated as `metrics_prom_<profile_name>.log`.

Configure use-case specific metrics export

You can export only the metrics related to a specific use case by creating a schema file. For example, if you want to view only TCP traffic related metrics, then you can create a `tcptrafficschema.json` file to export only the metrics related to TCP traffic. With the use case specific metrics export, finding the metrics that you want becomes easier.

NetScaler supports exporting metrics for the following use cases:

- Virtual server
- Application security
- SSL traffic
- TCP traffic
- HTTP traffic
- System overview

Virtual server To view only virtual server related metrics perform the following steps:

1. Log in to NetScaler CLI and navigate to `/var/metrics_conf/` folder.
2. Create a schema file. For example, `vserver_metrics.json`.

```
1 set analytics profile ns_analytics_time_series_profile -schemaFile
   vserver_metrics.json
```

3. Add the following content and save the changes:

```
1 {
2
3     "server_svc_cfg":
4     [
5         {
6         "name": "si_tot_RequestBytes", "rate": "True" }
7     ,
8         {
9         "name": "si_tot_ResponseBytes", "rate": "True" }
10    ,
11        {
12        "name": "si_cur_Clients", "rate": "False" }
13    ,
14        {
15        "name": "si_cur_Servers", "rate": "False" }
```

```
16
17     ],
18     "server_serviceGroup":
19     [
20         {
21     "name":"si_tot_RequestBytes","rate":"True" }
22     ,
23         {
24     "name":"si_tot_ResponseBytes","rate":"True" }
25     ,
26         {
27     "name":"si_cur_Clients","rate":"False" }
28     ,
29         {
30     "name":"si_cur_Servers","rate":"False" }
31     ],
32     ],
33     "vserver_authn":
34     [
35         {
36     "name":"si_tot_RequestBytes","rate":"True" }
37     ,
38         {
39     "name":"si_tot_ResponseBytes","rate":"True" }
40     ],
41     ],
42     "vserver_cr":
43     [
44         {
45     "name":"si_tot_RequestBytes","rate":"True" }
46     ,
47         {
48     "name":"si_tot_ResponseBytes","rate":"True" }
49     ],
50     ],
51     "vserver_cs":
52     [
53         {
54     "name":"si_tot_RequestBytes","rate":"True" }
55     ,
56         {
57     "name":"si_tot_ResponseBytes","rate":"True" }
58     ,
59         {
60     "name":"si_cur_Clients","rate":"False" }
61     ,
62         {
63     "name":"si_cur_Servers","rate":"False" }
64     ],
65     ],
66     "gslb_server":
67     [
68         {
```

```
69  "name":"si_tot_RequestBytes","rate":"True" }
70  ,
71  {
72  "name":"si_tot_ResponseBytes","rate":"True" }
73
74  ],
75  "gslb_vserver":
76  [
77  {
78  "name":"si_tot_RequestBytes","rate":"True" }
79  ,
80  {
81  "name":"si_tot_ResponseBytes","rate":"True" }
82
83  ],
84  "server_gslb_serviceGroup":
85  [
86  {
87  "name":"si_tot_RequestBytes","rate":"True" }
88  ,
89  {
90  "name":"si_tot_ResponseBytes","rate":"True" }
91
92  ],
93  "vserver_lb":
94  [
95  {
96  "name":"si_tot_RequestBytes","rate":"True" }
97  ,
98  {
99  "name":"si_tot_ResponseBytes","rate":"True" }
100 ,
101 {
102 "name":"si_cur_Clients","rate":"False" }
103 ,
104 {
105 "name":"si_cur_Servers","rate":"False" }
106
107 ],
108 "vserver_vpn":
109 [
110 {
111 "name":"si_tot_RequestBytes","rate":"True" }
112 ,
113 {
114 "name":"si_tot_ResponseBytes","rate":"True" }
115
116 ],
117 "vserver_user":
118 [
119 {
120 "name":"si_tot_RequestBytes","rate":"True" }
121 ,
```

```
122     {
123       "name": "si_tot_ResponseBytes", "rate": "True" }
124     ,
125     {
126       "name": "si_cur_Clients", "rate": "False" }
127     ,
128     {
129       "name": "si_cur_Servers", "rate": "False" }
130   ]
131 }
132 }
```

Application security To view only application security related metrics, perform the following steps:

1. Log in to NetScaler CLI and navigate to `/var/metrics_conf/` folder.
2. Create a schema file. For example, `appsec_metrics.json`.

```
1 set analytics profile ns_analytics_time_series_profile -schemaFile
   appsec_metrics.json
```

3. Add the following content and save the changes:

```
1 {
2
3   "netscaler":
4   [
5     {
6       "name": "as_viol_starturl", "rate": "True" }
7     ,
8     {
9       "name": "as_viol_denyurl", "rate": "True" }
10    ,
11    {
12      "name": "as_viol_referer_header", "rate": "True" }
13    ,
14    {
15      "name": "as_viol_bufferoverflow", "rate": "True" }
16    ,
17    {
18      "name": "as_viol_grpc", "rate": "True" }
19    ,
20    {
21      "name": "as_viol_postbodylimit", "rate": "True" }
22    ,
23    {
24      "name": "as_viol_cookie", "rate": "True" }
25    ,
26    {
27      "name": "as_viol_cookie_hijack", "rate": "True" }
28    ,
```

```
29     {
30     "name": "as_viol_csrf_tag", "rate": "True" }
31     ,
32     {
33     "name": "as_viol_xss", "rate": "True" }
34     ,
35     {
36     "name": "as_viol_sql", "rate": "True" }
37     ,
38     {
39     "name": "as_viol_fldfmt", "rate": "True" }
40     ,
41     {
42     "name": "as_viol_fldconsistency", "rate": "True" }
43     ,
44     {
45     "name": "as_viol_fileuploadtypes", "rate": "True" }
46     ,
47     {
48     "name": "as_viol_infer_ctype_xml", "rate": "True" }
49     ,
50     {
51     "name": "as_viol_safecommerce", "rate": "True" }
52     ,
53     {
54     "name": "as_viol_safeobject", "rate": "True" }
55     ,
56     {
57     "name": "as_viol_signature", "rate": "True" }
58     ,
59     {
60     "name": "as_viol_content_type", "rate": "True" }
61     ,
62     {
63     "name": "as_viol_cmd", "rate": "True" }
64     ,
65     {
66     "name": "as_viol_json_dos", "rate": "True" }
67     ,
68     {
69     "name": "as_viol_json_sql", "rate": "True" }
70     ,
71     {
72     "name": "as_viol_json_xss", "rate": "True" }
73     ,
74     {
75     "name": "as_viol_json_cmd", "rate": "True" }
76     ,
77     {
78     "name": "as_viol_sql_gram", "rate": "True" }
79     ,
80     {
81     "name": "as_viol_json_sql_gram", "rate": "True" }
```

```
82 ,
83   {
84     "name": "as_viol_sql_comb", "rate": "True" }
85 ,
86   {
87     "name": "as_viol_xxe_comb", "rate": "True" }
88 ,
89   {
90     "name": "as_viol_xss_comb", "rate": "True" }
91 ,
92   {
93     "name": "as_viol_owasp_comb", "rate": "True" }
94 ,
95   {
96     "name": "as_viol_cmd_gram", "rate": "True" }
97 ,
98   {
99     "name": "as_viol_json_cmd_gram", "rate": "True" }
100 ,
101   {
102     "name": "as_viol_block_keyword", "rate": "True" }
103 ,
104   {
105     "name": "as_viol_json_blockkeyword", "rate": "True" }
106 ,
107   {
108     "name": "as_Requests", "rate": "False" }
109 ,
110   {
111     "name": "http_tot_Requests", "rate": "True" }
112 ,
113   {
114     "name": "http_tot_Requests1_0", "rate": "True" }
115 ,
116   {
117     "name": "http_tot_Requests1_1", "rate": "True" }
118 ,
119   {
120     "name": "as_sig_num_vioIs", "rate": "True" }
121
122   ],
123   "appfw__":
124   [
125     {
126     "name": "as_viol_starturl_profile", "rate": "True" }
127   ,
128     {
129     "name": "as_viol_denyurl_profile", "rate": "True" }
130   ,
131     {
132     "name": "as_viol_referer_header_profile", "rate": "True" }
133   ,
134     {
```

```
135 "name":"as_viol_bufferoverflow_profile","rate":"True" }
136 ,
137 {
138 "name":"as_viol_postbodylimit_profile","rate":"True" }
139 ,
140 {
141 "name":"as_viol_cookie_profile","rate":"True" }
142 ,
143 {
144 "name":"as_viol_cookie_hijack_profile","rate":"True" }
145 ,
146 {
147 "name":"as_viol_csrf_tag_profile","rate":"True" }
148 ,
149 {
150 "name":"as_viol_xss_profile","rate":"True" }
151 ,
152 {
153 "name":"as_viol_sql_profile","rate":"True" }
154 ,
155 {
156 "name":"as_viol_fldfmt_profile","rate":"True" }
157 ,
158 {
159 "name":"as_viol_fldconsistency_profile","rate":"True" }
160 ,
161 {
162 "name":"as_viol_safecommerce_profile","rate":"True" }
163 ,
164 {
165 "name":"as_viol_safeobject_profile","rate":"True" }
166 ,
167 {
168 "name":"as_viol_signature_profile","rate":"True" }
169 ,
170 {
171 "name":"as_viol_content_type_profile","rate":"True" }
172 ,
173 {
174 "name":"as_viol_json_dos_profile","rate":"True" }
175 ,
176 {
177 "name":"as_viol_json_sql_profile","rate":"True" }
178 ,
179 {
180 "name":"as_viol_json_xss_profile","rate":"True" }
181 ,
182 {
183 "name":"as_viol_json_cmd_profile","rate":"True" }
184 ,
185 {
186 "name":"as_viol_fileuploadtypes_profile","rate":"True" }
187 ,
```

```
188     {
189     "name": "as_viol_infer_ctype_xml_profile", "rate": "True" }
190     ,
191     {
192     "name": "as_viol_cmd_profile", "rate": "True" }
193     ,
194     {
195     "name": "as_viol_sql_gram_profile", "rate": "True" }
196     ,
197     {
198     "name": "as_viol_json_sql_gram_profile", "rate": "True" }
199     ,
200     {
201     "name": "as_viol_sql_comb_profile", "rate": "True" }
202     ,
203     {
204     "name": "as_viol_xxe_comb_profile", "rate": "True" }
205     ,
206     {
207     "name": "as_viol_xss_comb_profile", "rate": "True" }
208     ,
209     {
210     "name": "as_viol_owasp_comb_profile", "rate": "True" }
211     ,
212     {
213     "name": "as_viol_cmd_gram_profile", "rate": "True" }
214     ,
215     {
216     "name": "as_viol_json_cmd_gram_profile", "rate": "True" }
217     ,
218     {
219     "name": "as_viol_block_keyword_profile", "rate": "True" }
220     ,
221     {
222     "name": "as_viol_json_blockkeyword_profile", "rate": "True" }
223     ,
224     {
225     "name": "as_viol_total_per_profile", "rate": "True" }
226
227     ]
228 }
```

SSL traffic To view only SSL related metrics, perform the following steps:

1. Log in to NetScaler CLI and navigate to `/var/metrics_conf/` folder.
2. Create a schema file. For example, `ssltraffic_metrics.json`.

```
1 set analytics profile ns_analytics_time_series_profile -schemaFile
  ssltraffic_metrics.json
```

3. Add the following content and save the changes:


```
1 {
2
3     "netscaler":
4     [
5         {
6         "name": "ssl_tot_sslInfo_TotalTxCount", "rate": "True" }
7     ,
8         {
9         "name": "ssl_tot_enc_bytes", "rate": "True" }
10    ,
11        {
12        "name": "ssl_tot_dec_bytes", "rate": "True" }
13    ,
14        {
15        "name": "ssl_tot_sslInfo_KeyEx_RSA_512", "rate": "True" }
16    ,
17        {
18        "name": "ssl_tot_sslInfo_KeyEx_RSA_1024", "rate": "True" }
19    ,
20        {
21        "name": "ssl_tot_sslInfo_KeyEx_RSA_2048", "rate": "True" }
22    ,
23        {
24        "name": "ssl_tot_sslInfo_KeyEx_RSA_3072", "rate": "True" }
25    ,
26        {
27        "name": "ssl_tot_sslInfo_KeyEx_RSA_4096", "rate": "True" }
28    ,
29        {
30        "name": "ssl_tot_sslInfo_KeyEx_DH_512", "rate": "True" }
31    ,
32        {
33        "name": "ssl_tot_sslInfo_KeyEx_DH_1024", "rate": "True" }
34    ,
35        {
36        "name": "ssl_tot_sslInfo_KeyEx_DH_2048", "rate": "True" }
37    ,
38        {
39        "name": "ssl_tot_sslInfo_KeyEx_DH_4096", "rate": "True" }
40    ,
41        {
42        "name": "ssl_tot_sslInfo_KeyEx_ECDHE_curve_secp521r1", "rate": "True
43        " }
44    ,
45        {
46        "name": "ssl_tot_sslInfo_KeyEx_ECDHE_curve_secp384r1", "rate": "True
47        " }
48    ,
49        {
50        "name": "ssl_tot_sslInfo_KeyEx_ECDHE_curve_secp256r1", "rate": "True
51        " }
```

```
51  "name":"ssl_tot_sslInfo_KeyEx_ECDHE_curve_secp224r1","rate":"True
    " }
52  ,
53  {
54  "name":"ssl_tot_sslInfo_KeyEx_ECDHE_curve_x25519","rate":"True" }
55  ,
56  {
57  "name":"ssl_tot_sslInfo_Cipher_RC4_40","rate":"True" }
58  ,
59  {
60  "name":"ssl_tot_sslInfo_Cipher_RC4_56","rate":"True" }
61  ,
62  {
63  "name":"ssl_tot_sslInfo_Cipher_RC4_64","rate":"True" }
64  ,
65  {
66  "name":"ssl_tot_sslInfo_Cipher_RC4_128","rate":"True" }
67  ,
68  {
69  "name":"ssl_tot_sslInfo_Cipher_DES_40","rate":"True" }
70  ,
71  {
72  "name":"ssl_tot_sslInfo_Cipher_DES_56","rate":"True" }
73  ,
74  {
75  "name":"ssl_tot_sslInfo_Cipher_3DES_168","rate":"True" }
76  ,
77  {
78  "name":"ssl_tot_sslInfo_Cipher_AES_128","rate":"True" }
79  ,
80  {
81  "name":"ssl_tot_sslInfo_Cipher_AES_256","rate":"True" }
82  ,
83  {
84  "name":"ssl_tot_sslInfo_Cipher_RC2_40","rate":"True" }
85  ,
86  {
87  "name":"ssl_tot_sslInfo_Cipher_RC2_56","rate":"True" }
88  ,
89  {
90  "name":"ssl_tot_sslInfo_Cipher_RC2_128","rate":"True" }
91  ,
92  {
93  "name":"ssl_tot_sslInfo_Cipher_AESGCM_128","rate":"True" }
94  ,
95  {
96  "name":"ssl_tot_sslInfo_Cipher_AESGCM_256","rate":"True" }
97  ,
98  {
99  "name":"ssl_tot_sslInfo_Cipher_NULL","rate":"True" }
100 ,
101 {
102 "name":"ssl_tot_sslInfo_Hash_MD5","rate":"True" }
```

```
103 ,
104     {
105     "name": "ssl_tot_sslInfo_Hash_SHA", "rate": "True" }
106 ,
107     {
108     "name": "ssl_tot_sslInfo_Hash_SHA256", "rate": "True" }
109 ,
110     {
111     "name": "ssl_tot_sslInfo_Hash_SHA384", "rate": "True" }
112 ,
113     {
114     "name": "ssl_tot_sslInfo_SSLv3HandskCount", "rate": "True" }
115 ,
116     {
117     "name": "ssl_tot_sslInfo_TLSv1HandskCount", "rate": "True" }
118 ,
119     {
120     "name": "ssl_tot_sslInfo_TLSv11HandskCount", "rate": "True" }
121 ,
122     {
123     "name": "ssl_tot_sslInfo_TLSv12HandskCount", "rate": "True" }
124 ,
125     {
126     "name": "ssl_tot_sslInfo_Auth_RSA", "rate": "True" }
127 ,
128     {
129     "name": "ssl_tot_sslInfo_Auth_DH", "rate": "True" }
130 ,
131     {
132     "name": "ssl_tot_sslInfo_Auth_DSS", "rate": "True" }
133 ,
134     {
135     "name": "ssl_tot_sslInfo_Auth_ECDSA", "rate": "True" }
136 ,
137     {
138     "name": "ssl_tot_sslInfo_Auth_NULL", "rate": "True" }
139 ,
140     {
141     "name": "ssl_tot_sslInfo_KeyEx_backend_ecdhe_curve_secp521r1", "
142         rate": "True" }
143 ,
144     {
145     "name": "ssl_tot_sslInfo_KeyEx_backend_ecdhe_curve_secp384r1", "
146         rate": "True" }
147 ,
148     {
149     "name": "ssl_tot_sslInfo_KeyEx_backend_ecdhe_curve_secp256r1", "
150         rate": "True" }
151 ,
152     {
153     "name": "ssl_tot_sslInfo_KeyEx_backend_ecdhe_curve_secp224r1", "
154         rate": "True" }
```

```
152     {
153     "name": "ssl_tot_sslInfo_Backend_Cipher_RC4_40", "rate": "True" }
154     ,
155     {
156     "name": "ssl_tot_sslInfo_Backend_Cipher_RC4_56", "rate": "True" }
157     ,
158     {
159     "name": "ssl_tot_sslInfo_Backend_Cipher_RC4_64", "rate": "True" }
160     ,
161     {
162     "name": "ssl_tot_sslInfo_Backend_Cipher_RC4_128", "rate": "True" }
163     ,
164     {
165     "name": "ssl_tot_sslInfo_Backend_Cipher_DES_40", "rate": "True" }
166     ,
167     {
168     "name": "ssl_tot_sslInfo_Backend_Cipher_DES_56", "rate": "True" }
169     ,
170     {
171     "name": "ssl_tot_sslInfo_Backend_Cipher_3DES_168", "rate": "True" }
172     ,
173     {
174     "name": "ssl_tot_sslInfo_Backend_Cipher_AES_128", "rate": "True" }
175     ,
176     {
177     "name": "ssl_tot_sslInfo_Backend_Cipher_AES_256", "rate": "True" }
178     ,
179     {
180     "name": "ssl_tot_sslInfo_Backend_Cipher_RC2_40", "rate": "True" }
181     ,
182     {
183     "name": "ssl_tot_sslInfo_Backend_Cipher_RC2_56", "rate": "True" }
184     ,
185     {
186     "name": "ssl_tot_sslInfo_Backend_Cipher_RC2_128", "rate": "True" }
187     ,
188     {
189     "name": "ssl_tot_sslInfo_Backend_Cipher_AESGCM_128", "rate": "True"
190     }
191     ,
192     {
193     "name": "ssl_tot_sslInfo_Backend_Cipher_AESGCM_256", "rate": "True"
194     }
195     ,
196     {
197     "name": "ssl_tot_sslInfo_Backend_Cipher_NULL", "rate": "True" }
198     ,
199     {
200     "name": "ssl_tot_sslInfo_Backend_Hash_MD5", "rate": "True" }
201     ,
202     {
203     "name": "ssl_tot_sslInfo_Backend_Hash_SHA", "rate": "True" }
204     }
```

```
203     {
204       "name": "ssl_tot_sslInfo_Backend_Hash_SHA256", "rate": "True" }
205     ,
206     {
207       "name": "ssl_tot_sslInfo_Backend_Hash_SHA384", "rate": "True" }
208     ,
209     {
210       "name": "ssl_tot_sslInfo_Backend_Auth_RSA", "rate": "True" }
211     ,
212     {
213       "name": "ssl_tot_sslInfo_Backend_Auth_DH", "rate": "True" }
214     ,
215     {
216       "name": "ssl_tot_sslInfo_Backend_Auth_DSS", "rate": "True" }
217     ,
218     {
219       "name": "ssl_tot_sslInfo_Backend_Auth_ECDSA", "rate": "True" }
220     ,
221     {
222       "name": "ssl_tot_sslInfo_Backend_Auth_NULL", "rate": "True" }
223     ,
224     {
225       "name": "ssl_tot_enc_bytes_FE", "rate": "True" }
226     ,
227     {
228       "name": "ssl_tot_enc_bytes_BE", "rate": "True" }
229     ,
230     {
231       "name": "ssl_tot_dec_bytes_FE", "rate": "True" }
232     ,
233     {
234       "name": "ssl_tot_dec_bytes_BE", "rate": "True" }
235     ,
236     {
237       "name": "ssl_cur_session_inuse", "rate": "True" }
238   ],
239   "vserver_ssl":
240   [
241     {
242       "name": "ssl_ctx_tot_HandshakeFail", "rate": "True" }
243     ]
244   ]
245 ]
246 }
```

TCP traffic To view only TCP related metrics, perform the following steps:

1. Log in to NetScaler CLI and navigate to `/var/metrics_conf/` folder.
2. Create a schema file. For example, `tcptraffic_metrics.json`.

```
1 set analytics profile ns_analytics_time_series_profile -schemaFile
   tcptraffic_metrics.json
```

3. Add the following content and save the changes:

```
1 {
2
3     "server_svc_cfg":
4     [
5         {
6         "name":"si_tot_pkt_rcvd","rate":"True" }
7     ,
8         {
9         "name":"si_tot_pkt_sent","rate":"True" }
10    ],
11    "vserver_cr":
12    [
13        {
14        "name":"si_tot_pkt_rcvd","rate":"True" }
15    ,
16        {
17        "name":"si_tot_pkt_sent","rate":"True" }
18    ],
19    "vserver_cs":
20    [
21        {
22        "name":"si_tot_pkt_rcvd","rate":"True" }
23    ,
24        {
25        "name":"si_tot_pkt_sent","rate":"True" }
26    ],
27    "vserver_lb":
28    [
29        {
30        "name":"si_tot_pkt_rcvd","rate":"True" }
31    ,
32        {
33        "name":"si_tot_pkt_sent","rate":"True" }
34    ],
35    "netscaler":
36    [
37        {
38        "name":"tcp_cur_ClientConn","rate":"False" }
39    ,
40        {
41        "name":"tcp_cur_ClientConnEst","rate":"False" }
42    ,
43        {
44        "name":"tcp_cur_ServerConn","rate":"False" }
45    ]
46 }
```

```
49  ,
50    {
51    "name": "tcp_cur_ServerConnEst", "rate": "False" }
52  ,
53    {
54    "name": "tcp_cur_ClientConnClosing", "rate": "False" }
55  ,
56    {
57    "name": "tcp_cur_ServerConnClosing", "rate": "False" }
58  ,
59    {
60    "name": "tcp_cur_surgequeueLen", "rate": "False" }
61  ,
62    {
63    "name": "tcp_err_rst", "rate": "False" }
64  ,
65    {
66    "name": "tcp_err_noip", "rate": "False" }
67  ,
68    {
69    "name": "tcp_err_retransmit_giveups", "rate": "False" }
70  ,
71    {
72    "name": "tcp_err_retransmit", "rate": "False" }
73  ,
74    {
75    "name": "tcp_err_stray_packets", "rate": "False" }
76  ],
77  "vserver_user":
78  [
79    {
80    "name": "si_tot_pkt_rcvd", "rate": "True" }
81  ,
82    {
83    "name": "si_tot_pkt_sent", "rate": "True" }
84  ]
85  ]
86  }
87  }
```

HTTP traffic To view only HTTP related metrics, perform the following steps:

1. Log in to NetScaler CLI and navigate to `/var/metrics_conf/` folder.
2. Create a schema file. For example, `httptraffic_metrics.json`.

```
1 set analytics profile ns_analytics_time_series_profile -schemaFile
   httptraffic_metrics.json
```

3. Add the following content and save the changes:

```
1 {
```

```
2
3     "server_svc_cfg":
4     [
5         {
6     "name": "si_tot_Requests", "rate": "True" }
7     ,
8         {
9     "name": "si_tot_Responses", "rate": "True" }
10    ,
11        {
12    "name": "si_tot_RequestBytes", "rate": "True" }
13    ,
14        {
15    "name": "si_tot_ResponseBytes", "rate": "True" }
16    ],
17    "server_serviceGroup":
18    [
19        {
20    "name": "si_tot_Requests", "rate": "True" }
21    ,
22        {
23    "name": "si_tot_Responses", "rate": "True" }
24    ,
25        {
26    "name": "si_tot_RequestBytes", "rate": "True" }
27    ,
28        {
29    "name": "si_tot_ResponseBytes", "rate": "True" }
30    ],
31    "netscaler":
32    [
33        {
34    "name": "http_tot_api_req_json", "rate": "False" }
35    ,
36        {
37    "name": "http_tot_api_req_xml", "rate": "False" }
38    ,
39        {
40    "name": "http_tot_api_req_vnd", "rate": "False" }
41    ,
42        {
43    "name": "http_tot_api_res_json", "rate": "False" }
44    ,
45        {
46    "name": "http_tot_api_res_xml", "rate": "False" }
47    ,
48        {
49    "name": "http_tot_api_res_vnd", "rate": "False" }
50    ],
51    "vserver_authn":
```



```
55     [
56         {
57         "name":"si_tot_Requests","rate":"True" }
58     ,
59         {
60         "name":"si_tot_Responses","rate":"True" }
61     ,
62         {
63         "name":"si_tot_RequestBytes","rate":"True" }
64     ,
65         {
66         "name":"si_tot_ResponseBytes","rate":"True" }
67     ],
68     "vserver_cr":
69     [
70         {
71         "name":"vsrv_tot_Hits","rate":"True" }
72     ,
73         {
74         "name":"si_tot_Requests","rate":"True" }
75     ,
76         {
77         "name":"si_tot_Responses","rate":"True" }
78     ,
79         {
80         "name":"si_tot_RequestBytes","rate":"True" }
81     ,
82         {
83         "name":"si_tot_ResponseBytes","rate":"True" }
84     ],
85     "vserver_cs":
86     [
87         {
88         "name":"vsrv_tot_Hits","rate":"True" }
89     ,
90         {
91         "name":"si_tot_Requests","rate":"True" }
92     ,
93         {
94         "name":"si_tot_Responses","rate":"True" }
95     ,
96         {
97         "name":"si_tot_RequestBytes","rate":"True" }
98     ,
99         {
100        "name":"si_tot_ResponseBytes","rate":"True" }
101     ,
102         {
103        "name":"si_tot_clt_ttlb_transactions","rate":"False" }
104     ,
105         {
106         ,
107         {
```

```
108 "name":"si_tot_clt_ttlb","rate":"False" }
109
110 ],
111 "gslb_server":
112 [
113 {
114 "name":"si_tot_RequestBytes","rate":"True" }
115 ,
116 {
117 "name":"si_tot_ResponseBytes","rate":"True" }
118
119 ],
120 "gslb_vserver":
121 [
122 {
123 "name":"vsvr_tot_Hits","rate":"True" }
124 ,
125 {
126 "name":"si_tot_RequestBytes","rate":"True" }
127 ,
128 {
129 "name":"si_tot_ResponseBytes","rate":"True" }
130
131 ],
132 "server_gslb_serviceGroup":
133 [
134 {
135 "name":"si_tot_RequestBytes","rate":"True" }
136 ,
137 {
138 "name":"si_tot_ResponseBytes","rate":"True" }
139
140 ],
141 "vserver_lb":
142 [
143 {
144 "name":"vsvr_tot_Hits","rate":"True" }
145 ,
146 {
147 "name":"si_tot_Requests","rate":"True" }
148 ,
149 {
150 "name":"si_tot_Responses","rate":"True" }
151 ,
152 {
153 "name":"si_tot_RequestBytes","rate":"True" }
154 ,
155 {
156 "name":"si_tot_ResponseBytes","rate":"True" }
157 ,
158 {
159 "name":"si_tot_clt_ttlb_transactions","rate":"False" }
160 ,
```

```
161     {
162     "name":"si_tot_clt_ttlb","rate":"False" }
163     ,
164     {
165     "name":"si_tot_1xx_resp","rate":"False" }
166     ,
167     {
168     "name":"si_tot_2xx_resp","rate":"False" }
169     ,
170     {
171     "name":"si_tot_4xx_resp","rate":"False" }
172     ,
173     {
174     "name":"si_tot_5xx_resp","rate":"False" }
175
176     ],
177     "vserver_vpn":
178     [
179     {
180     "name":"si_tot_Requests","rate":"True" }
181     ,
182     {
183     "name":"si_tot_Responses","rate":"True" }
184     ,
185     {
186     "name":"si_tot_RequestBytes","rate":"True" }
187     ,
188     {
189     "name":"si_tot_ResponseBytes","rate":"True" }
190
191     ],
192     "vserver_user":
193     [
194     {
195     "name":"svr_tot_Hits","rate":"True" }
196     ,
197     {
198     "name":"si_tot_Requests","rate":"True" }
199     ,
200     {
201     "name":"si_tot_Responses","rate":"True" }
202     ,
203     {
204     "name":"si_tot_RequestBytes","rate":"True" }
205     ,
206     {
207     "name":"si_tot_ResponseBytes","rate":"True" }
208
209     ]
210 }
```

System overview To view only system overview related metrics, perform the following steps:

1. Log in to NetScaler CLI and navigate to `/var/metrics_conf/` folder.
2. Create a schema file. For example, `system_metrics.json`.

```
1 set analytics profile ns_analytics_time_series_profile -schemaFile
   system_metrics.json
```

3. Add the following content and save the changes:

```
1 {
2
3   "server_svc_cfg":
4   [
5     {
6     "name":"si_tot_svr_ttlb","rate":"False" }
7   ,
8     {
9     "name":"si_tot_svr_ttlb_transactions","rate":"False" }
10  ,
11   {
12   "name":"si_cur_state","rate":"False" }
13  ,
14   {
15   "name":"si_tot_svr_ttfb_transactions","rate":"False" }
16  ,
17   {
18   "name":"si_tot_svr_ttfb","rate":"False" }
19
20  ],
21  "serviceGroup_NSSVC":
22  [
23    {
24    "name":"si_cur_state","rate":"False" }
25
26  ],
27  "server_serviceGroup":
28  [
29    {
30    "name":"si_cur_state","rate":"False" }
31  ,
32    {
33    "name":"si_tot_svr_ttfb_transactions","rate":"False" }
34  ,
35    {
36    "name":"si_tot_svr_ttfb","rate":"False" }
37
38  ],
39  "vserver_authn":
40  [
41    {
42    "name":"si_cur_state","rate":"False" }
43
44  ],
45  "vserver_cr":
```

```
46     [
47         {
48     "name":"si_cur_state","rate":"False" }
49     ,
50         {
51     "name":"vsvr_tot_Hits","rate":"True" }
52     ],
53     "vserver_cs":
54     [
55         {
56     "name":"si_cur_state","rate":"False" }
57     ,
58         {
59     "name":"vsvr_tot_Hits","rate":"True" }
60     ],
61     "gs1b_server":
62     [
63         {
64     "name":"si_cur_state","rate":"False" }
65     ],
66     "gs1b_vserver":
67     [
68         {
69     "name":"si_cur_state","rate":"False" }
70     ,
71         {
72     "name":"vsvr_tot_Hits","rate":"True" }
73     ],
74     "gs1b_serviceGroup_NSSVC":
75     [
76         {
77     "name":"si_cur_state","rate":"False" }
78     ],
79     "server_gs1b_serviceGroup":
80     [
81         {
82     "name":"si_cur_state","rate":"False" }
83     ],
84     "vserver_lb":
85     [
86         {
87     "name":"si_cur_state","rate":"False" }
88     ,
89         {
90     "name":"si_tot_2xx_resp","rate":"False" }
91     ,
92         {
```

```
99  "name": "si_tot_4xx_resp", "rate": "False" }
100 ,
101   {
102   "name": "vsvr_tot_Hits", "rate": "True" }
103
104   ],
105   "interface":
106   [
107   {
108   "name": "nic_err_dropped_pkts", "rate": "True" }
109
110   ],
111   "netscaler":
112   [
113   {
114   "name": "tcp_cur_ClientConn", "rate": "False" }
115   ,
116   {
117   "name": "tcp_err_noip", "rate": "False" }
118   ,
119   {
120   "name": "tcp_err_rst", "rate": "True" }
121   ,
122   {
123   "name": "mem_cur_usedsize", "rate": "False" }
124   ,
125   {
126   "name": "tcp_tot_rxpkts", "rate": "True" }
127   ,
128   {
129   "name": "http_tot_rxResponseBytes", "rate": "True" }
130   ,
131   {
132   "name": "http_tot_Requests1_1", "rate": "True" }
133   ,
134   {
135   "name": "http_tot_Responses", "rate": "True" }
136   ,
137   {
138   "name": "tcp_err_retransmit_giveups", "rate": "True" }
139   ,
140   {
141   "name": "cur_syshealth_disk0_errors", "rate": "False" }
142   ,
143   {
144   "name": "http_tot_Requests", "rate": "True" }
145   ,
146   {
147   "name": "http_tot_rxRequestBytes", "rate": "True" }
148   ,
149   {
150   "name": "slave_cpu_use", "rate": "False" }
151   ,
```

```
152     {
153     "name": "cur_syshealth_disk0_used", "rate": "False" }
154     ,
155     {
156     "name": "tcp_err_rst_outof_wnd", "rate": "True" }
157     ,
158     {
159     "name": "tcp_err_stray_packets", "rate": "True" }
160     ,
161     {
162     "name": "cur_syshealth_disk1_errors", "rate": "False" }
163     ,
164     {
165     "name": "mgmt_additional_cpu_use", "rate": "False" }
166     ,
167     {
168     "name": "tcp_cur_ServerConnEst", "rate": "False" }
169     ,
170     {
171     "name": "tcp_cur_ClientConnEst", "rate": "False" }
172     ,
173     {
174     "name": "tcp_err_link_giveups", "rate": "False" }
175     ,
176     {
177     "name": "tcp_err_rst_inTimewaits", "rate": "True" }
178     ,
179     {
180     "name": "tcp_err_retransmit", "rate": "True" }
181     ,
182     {
183     "name": "tcp_cur_ServerConnClosing", "rate": "False" }
184     ,
185     {
186     "name": "tcp_err_rst_not_est", "rate": "True" }
187     ,
188     {
189     "name": "http_tot_Responses1_1", "rate": "True" }
190     ,
191     {
192     "name": "tcp_err_rst_not_est", "rate": "True" }
193     ,
194     {
195     "name": "tcp_err_rst_inTimewaits", "rate": "True" }
196     ,
197     {
198     "name": "tcp_err_rst_outof_wnd", "rate": "True" }
199     ,
200     {
201     "name": "tcp_cur_ServerConn", "rate": "False" }
202     ,
203     {
204     "name": "allnic_tot_tx_mbits", "rate": "True" }
```

```
205 ,
206     {
207     "name": "http_tot_Responses1_0", "rate": "True" }
208 ,
209     {
210     "name": "cpu_use", "rate": "False" }
211 ,
212     {
213     "name": "tcp_err_retransmit_giveups", "rate": "True" }
214 ,
215     {
216     "name": "http_tot_Requests1_0", "rate": "True" }
217 ,
218     {
219     "name": "mgmt_cpu_use", "rate": "False" }
220 ,
221     {
222     "name": "cur_syshealth_disk1_size", "rate": "False" }
223 ,
224     {
225     "name": "allnic_tot_rx_mbits", "rate": "True" }
226 ,
227     {
228     "name": "master_cpu_use", "rate": "False" }
229 ,
230     {
231     "name": "cur_syshealth_disk0_size", "rate": "False" }
232
233     ],
234     "mempool":
235     [
236     {
237     "name": "mem_err_alloc_failed", "rate": "False" }
238
239     ],
240     "vserver_ssl":
241     [
242     {
243     "name": "si_cur_state", "rate": "False" }
244
245     ],
246     "cpu":
247     [
248     {
249     "name": "cc_cpu_use", "rate": "False" }
250
251     ],
252     "vserver_vpn":
253     [
254     {
255     "name": "si_cur_state", "rate": "False" }
256
257     ],
```



```
258     "vserver_user":
259     [
260         {
261     "name": "si_cur_state", "rate": "False" }
262     ,
263         {
264     "name": "vsvr_tot_Hits", "rate": "True" }
265     ]
266     ]
267 }
```

Rate counters

A rate counter is an attribute used to monitor the rate of specific traffic types or requests passing through NetScaler. It helps administrators track various aspects of network traffic, such as the number of requests or the rate of connections to a particular service or virtual server.

The default reference schema file `schema.json`, located at `/var/metrics_conf/` includes a list of entity types and associated counters. Not all counters listed in `schema.json` are rate counters. Only the counters with `Rate: True` denotes rate counters. You can create a custom `schema.json` file and add necessary rate counters.

Counters can be exported based on your requirements. To include a counter in the export, set the rate field to `True`. For example, if the rate field is set to `true` for `si_tot_Requests`, the rate for `si_tot_Requests` is exported. During export, a prefix `RATE_<counter_name>` is added in the metrics payload by NetScaler.

View metrics

The following are the different ways to consume or visualize metrics:

- NetScaler command line interface (CLI)
- Citrix proprietary NITRO APIs
- Export metrics to NetScaler Console
- Export metrics to observability tools

NetScaler CLI

You can use the NetScaler CLI to get the metrics. Log in to NetScaler CLI and run the command from the Shell prompt. The following command is an example command:

```
1 stat lb vsriver <vserver-name>
```

Example:

```

1 > shell
2 root@ns# stat lb vserver vsrv-wireless
3 Virtual Server Summary
4
5          vsvrIP  port  Protocol  State  Health
6          actSvcs
7 vsrv...eless  *    0    TCP      UP    100
8          1
9          inactSvcs
10 vsrv...eless  0
11 Virtual Server Statistics
12
13                                     Rate (/s)
14                                     Total
15 Vserver hits                                0
16    10
17 Requests                                0
18 Responses                                0
19 Request bytes                            0
20    1580
21 Response bytes                          0
22    532594360
23 Total Packets rcvd                       0
24    216463
25 Total Packets sent                       0
26    369898
27 Current client connections                --
28    0
29 Current Client Est connections           --
30    0
31 Current server connections               --
32    0
33 Requests in surge queue                  --
34    0
35 Requests in vserver's surgeQ             --
36    0
37 Requests in service's surgeQs           --
38    0
39 Spill Over Threshold                     --
40    0
41 Spill Over Hits                         --
42    0
43 Labeled Connection                       --
44    0
45 Push Labeled Connection                  --
46    0
47 Deferred Request                         0
48    0
49 Invalid Request/Response                 --
50    0
51 Invalid Request/Response Dropped         --
52    0

```

31 Bound Service(s) Summary							
32		IP	port	Type	State	Hits	
			Hits/s				
33	svc-internet	192.168.2.2	0	TCP	UP	10	
	0/s						
34							
35		Req	Req/s	Rsp	Rsp/s	Throughp	ClntConn
		SurgeQ					
36	svc-internet	0	0/s	0	0/s	0	0
	0						
37							
38		SvrConn	ReuseP	MaxConn	ActvTran	SvrTTFB	Load
	svc-internet	0	0	0	0	0	0

Citrix proprietary NITRO APIs

You can run NITRO APIs and fetch the required metrics.

For example, to view the total number of HTTP requests that NetScaler is handling, you can use the NITRO API by running the following curl command in the linux shell:

```

1 curl http://{
2   nsip }
3   /nitro/v1/stat/nsglobalcntr?args=counters:http_tot_Requests -u {
4   nsuser }
5   :{
6   nspassword }
```

In the preceding example,

- **nsip** is the NetScaler IP address
- **nsuser** and **nspassword** are the NetScaler login credentials

The output is as follows:

```

1 root@rohit_lvm:~# curl "http://10.10.10.10/nitro/v1/stat/nsglobalcntr?
2   args=counters:http_tot_Requests" -u nsroot:freebsd
3   {
4     "errorcode": 0, "message": "Done", "severity": "NONE", "nsglobalcntr"
5     : {
6       "http_tot_Requests": "33398" }
7   }
```

For more information Citrix proprietary NITRO APIs, see [Citrix ADC NITRO APIs](#).

Export metrics to NetScaler Console

If you have NetScaler Console in your network to manage your NetScalers, then you can view the metrics through NetScaler Console GUI. For more information, see [NetScaler Console Documentation](#).

Export metrics to observability tools

You can export metrics such as statistics and counters to observability tools such as:

- **Prometheus** - You can export the metrics directly from NetScaler to Prometheus. For information on how to export metrics to Prometheus, see [Export of metrics from NetScaler to Prometheus](#).
- **Splunk** - You can export the metrics directly from NetScaler to Grafana. For information on how to export metrics to Splunk, see [Export of metrics from NetScaler to Splunk](#).

Troubleshoot issues related to export of metrics

Even after you configure the export of metrics, there might be some issues that prevent metrics from getting exported. This section provides tips for troubleshooting issues related to the export of metrics:

1. **Check the status of the metrics collector:** Check if the metrics collector daemon is running using the `ps` or `top` command.
2. **Check metrics configuration in the analytics profile:** In the analytics profile, check the following metrics configuration:
 - a) If `Output Mode` is set to `Prometheus`
 - b) If `Metrics` is `ENABLED`
 - c) If a valid schema file present under `/var/metrics_conf` is configured
 - d) If the `Serve mode` is set to `PULL`

The following is a sample configuration where the metrics configuration in the analytics profile is as it is expected to be:

```
1 Command: show analytics profile <analytics_profile_name>
2 Output:
3 Name: <analytics_profile_name>
4 Collector:
5 Profile-type: timeseries
6 Output Mode: Prometheus
7 Metrics: ENABLED
8 Schema File: <schema_file_name>
9 Metrics Export Frequency: 30
10 Events: DISABLED
11 Auditlog: DISABLED
12 Serve mode: PULL
13 Endpoint Metadata:
14 Authentication Token:
15 Endpoint URL:
16 Endpoint Content-type:
17 Reference Count: 0
```

```
18 Managementlog: NONE
```

3. Inspect logs:

- a) Check the `/var/nslog/metricscollector.log` for any configuration or schema file-related errors.
- b) Check `/var/log/ns.log` to see if metrics export has stopped due to disk space issues or other critical errors. If the disk space is full, the `ns.log` file contains the following:

```
1 Free up disk space on /var/nslog partition. Disabling metrics/  
logging for now
```

If the disk space is full, ensure that there is sufficient disk space available for metrics file generation.

4. **Verify metrics file generation:** Confirm that the metrics file is being generated in the `/var/nslog/` directory. For Prometheus, the format of the output file name is `metrics_prom_<analytics_profile_name>.log`.

5. Check schema configuration:

- Ensure that the configured schema file does not contain unsupported counters, as it can prevent metrics from being generated. If there are any errors, validate if the counters are present in the `reference.schema` file.
- It is recommended to use a custom schema file with only the required counters.
- Do not configure `reference_schema.json` as the input schema file.
- If the custom schema file is updated, disable and re-enable metrics through the CLI to reload the updated schema file.

```
1 set analytics profile ns_analytics_time_series_profile -  
metrics DISABLED  
2 set analytics profile ns_analytics_time_series_profile -  
metrics ENABLED
```

6. Issues related to export of metrics to Prometheus

- a) If there are any permission-related issues, configure read-only Prometheus access for a non-super user. For more information, see [Configure read-only Prometheus access for a non-super user](#).
- b) If metrics is not visible after following the previously mentioned steps, try fetching the metrics using the `cURL` command to rule out configuration issues on Prometheus:

```
1 curl -v -X GET "http://<NetScaler_IP_ADDRESS>/nitro/v1/config/systemfile?args=filename%3Ametrics_prom_<name_of_timeseries_profile>.log%2Cfilelocation%3A%2Fvar%2Fnslog&format=prometheus" -u <ns_user_name>:<ns_user's_password>
```

Example:

```
1 curl -v -X GET "http://<10.106.26.205>/nitro/v1/config/systemfile?args=filename%3Ametrics_prom_prometheus_profile.log%2Cfilelocation%3A%2Fvar%2Fnslog&format=prometheus" -u nsroot:nsroot
```

Sample dashboards

The following dashboards available on Grafana and Splunk provide you metrics associated with a specific use case:

- [Observability Sample Dashboard for NetScaler ADC](#) on Grafana
- [Infra and Network Health Dashboard for NetScaler ADC](#) on Splunk
- [App and API Health Dashboard](#) on Splunk

Logs

October 24, 2024

Logs refer to the software-generated data that contains information about usage patterns, activities and operations within an operating system, application, server, or another device. The files that store these logs are called the log files. Log files are the primary data source for network observability.

This topic covers the following:

- Audit logs
- Management logs

Audit logs

Auditing is a methodical examination or review of a condition or situation. The audit logging feature enables you to log the NetScaler states and status information collected by various modules. The log information can be in the kernel and in the user-level daemons.

You can configure NetScaler to store the log information locally on NetScaler or export it to a remote server or both. For more information on audit logs, see [Audit logging](#).

Configure audit logs

For information on how to configure NetScaler for audit logging, see [Configuring NetScaler appliance for audit logging](#).


Sample audit log

The following is a sample audit log:

```

1 May 31 02:05:23 <local0.info> 10.106.44.21 05/31/2024:06:05:23 GMT HA1
  0-PPE-0 : default API CMD_EXECUTED 7825 0 : User admuser -
2 ADM_User NONE - Remote_ip 10.106.44.21 - Command "show ns license" -
  Status "Success"
  
```

The following image describes the audit log:

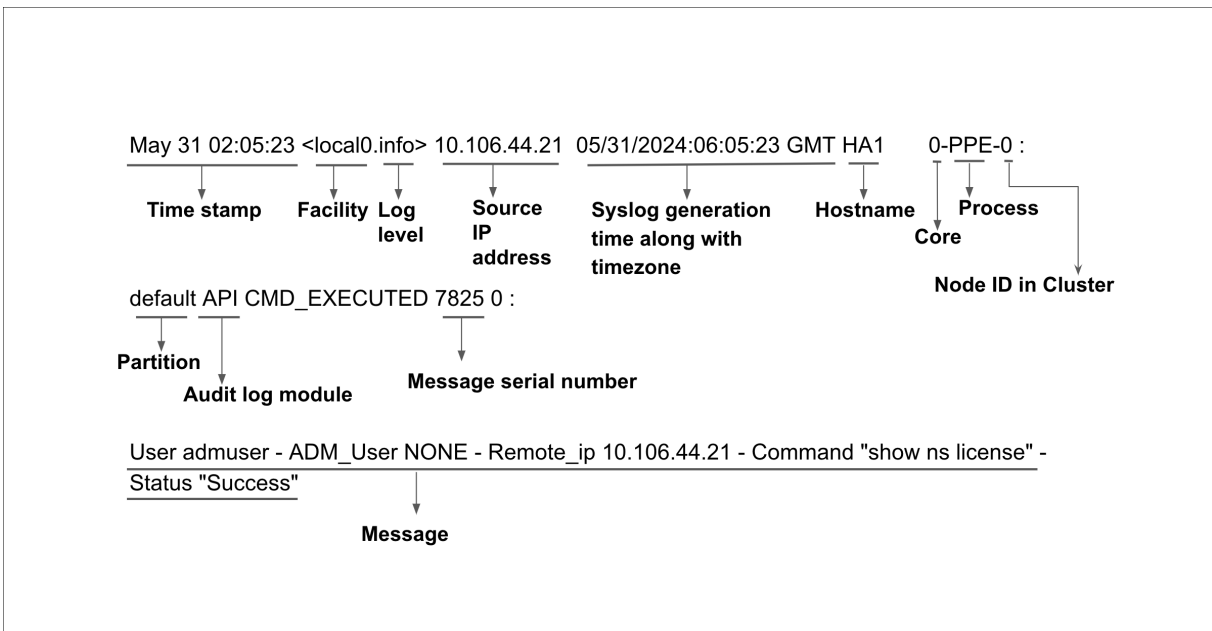

Export audit logs

You can export audit logs and events from NetScaler to industry standard log aggregator platforms such as Splunk and get meaningful insights. For more information, see [Export audit logs and events directly from NetScaler to Splunk](#).

You can export audit logs securely over an SSL connection. For more information, see [Export syslog securely over SSL](#).

Management logs

Management logs are the logs that are generated by the processes that are running on the NetScaler management core. (For example, bash, httpd). The messages that are part of the following log files are exported as part of management logs:

- Shell or platform logs
 - `bash.log`: The log file is created by the `bash` process. It records the commands processed by the `bash` shell.
 - `sh.log`: The log file is created by the `sh` process. It records the commands processed by the `sh` shell.

Access logs

- `auth.log`: The log file records all `SSHd` activity and `Console` activity.
- `nsvpn.log`: The log file records detailed information about Virtual Private Network (VPN) activities and events.
- `httpaccess.log`: The log file records any HTTP activity directed to the management IP address is logged. Typically, this log file includes NetScaler GUI access, NITRO API and VPN access.
- `httperror.log`: The log file records any HTTP activity directed to the management IP address and resulting in an error due to any timeout (example, PHP maximum timeout reached) or any programming error in the backend. Periodic Apache restarts also get logged into this file.
- `httpaccess-vpn.log`: The log file consists of gateway portal endpoints data served by apache that are accessed by users along with the date and time.
- `httperror-vpn.log`: The log file consists of gateway portal endpoints data served by apache that are accessed by users along with the date and time.

NetScaler management logs

- `notice.log`: The log file is a syslog data stream and it records the syslog records that are generated according to the “notice” datastream of `syslogd`.
- `ns.log`: The log file contains the NetScaler system log. The logs generated by several modules of NetScaler (for example, load balancing, SSL, app firewall) are written into this file. During export, only the content of `ns.log` which is written by the management processes are exported. The logs written by the NSPPE processes are not exported.

Management logs are logged to respective log files by the `syslogd` running on NetScaler which are generated by various processes running on management core. Management logs are exported periodically, typically every 60 seconds.

Configure export of management logs

You can configure the export of management logs using one of the following methods:

- Configure export of management logs to a syslog server
- Configure export of management logs to an HTTP server or HEC endpoint such as Splunk

Note:

When configuring syslog action and analytics profiles, it is recommended not to use `NSMGMT` for management log. Using `NSMGMT` might negatively impact the performance of NetScaler.

For example, in `add audit syslogAction test1 <IP address> -serverPort <port> -logLevel ALL -managementlog <ACCESS | ALL | NONE | NSMGMT | SHELL>` and `add analytics profile <profile-name> -type timeseries -managementlog <ACCESS | ALL | NONE | NSMGMT | SHELL>` commands, avoid using `NSMGMT` for `-managementlog`.

Configure export of management logs to Syslog server To configure the export of management logs, you must perform the following steps:

1. Create an audit syslog action on NetScaler with the management log option.
2. Create a syslog audit policy with the syslog action.
3. Bind the syslog audit policy with the system global entity to enable logging of all NetScaler system events.

Note:

- Management logs are not supported in non-default admin partitions.
- If the transport is TCP, then management logs are not exported out of secondary nodes by default. Load balancing configuration can be used to enable secondary export for syslog when the destination is reachable using NSIP address and secondary export is required.
- Starting with NetScaler release 14.1-29.x, the management logs exported by NetScaler comply with RFC 5424.

Configure syslog audit action To configure syslog audit action on NetScaler using CLI, run the following command:

```
1 add audit syslogAction <name> \(<serverIP> \[-serverPort <port>] -
  logLevel <logLevel> ... \[-managementlog <managementlog> ...] ...
  \[-mgmtloglevel <managementloglevel> ...]\[-transport \{ TCP | UDP }
  ])
```

Example:

```
1 add audit syslogAction test 10.106.186.102 -serverPort 514 -logLevel
  ALL -managementlog SHELL NSMGMT -mgmtloglevel ALL -transport TCP
```

In this configuration:

- **name**: Name of the syslog action
- **serverIP**: IP address of the syslog server.
- **serverPort**: Port on which the syslog server accepts connections.
- **logLevel**: Audit log level.
- **managementlog**: Types of management logs that you must export.
- **mgmtloglevel**: Management log levels that you want to set for export.
- **transport**: The transport type used to send audit logs to the syslog server.

To configure syslog audit action on NetScaler using the GUI, perform the following steps:

1. Navigate to the **System > Auditing > Syslog > Server** tab and click **Add**.
2. On the **Create Auditing Server** page, provide the following details:
 - a) Enter a name for the Syslog server.
 - b) Select **Server IP** from the **Server Type** list and enter the syslog server IP address and port.
 - c) Choose the required log levels from the **Log Levels**, **Management Logs** and **Management Log Levels** sections.
3. Click **Create**.

Load balance management logs

In releases prior to NetScaler 14.1-29.x, when management logs are enabled, the syslogAction configuration supports only server IP address and port configuration. Domain Based Service (DBS) and load balancing virtual server name configurations are not supported. For load balancing management logs, use the following sample configuration:

```
1 add service syslog_server <server_ip> UDP <port>
2 add service syslog_server1 1.3.4.4 UDP 514
3 add service syslog_server2 1.3.4.5 UDP 514
4 add lb vserver lb1 UDP <lb_vip> <lb_port>
5 bind lb vserver lb1 syslog_server1
6 bind lb vserver lb1 syslog_server2
```

In syslogAction, configure the following:

```
1 add syslogAction sys1 <server_ip> -serverPort <server_port> -transport
  UDP -loglevel <loglevel>
2 add syslogAction sys1 lb_vip -serverPort lb_port -transport UDP -
  loglevel <loglevel>
```

In releases NetScaler 14.1-29.x and later, when management logs are enabled, the syslogAction configuration supports load balancing virtual server name. For load balancing management logs, use the

following sample configuration:

```
1 add service syslog_server1 10.9.8.7 UDP 514
2 add service syslog_server2 10.9.8.8 UDP 514
3 add lb vserver syslog_lb SYSLOGUDP
4 bind lb vserver syslog_lb syslog_server1
5 bind lb vserver syslog_lb syslog_server2
```

Configure syslog to use the above virtual server, and enable management logs on the action.

```
1 add syslogAction syslog_act -lbVserverName syslog_lb -logLevel NONE -
  managementLog ALL -mgmtlogLevel ALL
2 add syslogPolicy syslog_pol true syslog_act
3 bind syslogGlobal -policyName syslog_pol -priority 1
```

You can also configure domain name on syslog action, instead of IP address. The following is a sample configuration:

```
1 add syslogAction syslog_act my.syslog.server -logLevel NONE -
  managementLog ALL -mgmtlogLevel ALL
```

Configure syslog audit policy To configure a syslog audit policy using the CLI, run the following command:

```
add audit syslogPolicy <name> TRUE <syslogAction>
```

Example:

```
add audit syslogPolicy test-policy TRUE test
```

To configure a syslog audit policy using the GUI, perform the following steps:

1. Navigate to the **System > Auditing > Syslog > Policies** tab and click **Add**.
2. On the **Create Auditing Syslog Policy** page, enter a name, select **Advanced Policy**, and then select the audit syslog server that you created from the **Server** list.

Bind audit log policy To bind the syslog audit log policy to the bind point `SYSTEM_GLOBAL` using CLI, run the following command:

```
bind audit syslogGlobal <polycyname> -globalBindType SYSTEM_GLOBAL
```

Example:

```
bind audit syslogGlobal test-policy -globalBindType SYSTEM_GLOBAL
```

To bind the syslog audit log policy globally using the GUI, run the following command:

1. Navigate to the **System > Auditing > Syslog > Policies** tab and select the syslog audit policy that you created.

2. Right-click on the selected syslog audit policy and click **Advanced Policy Global Bindings**.
3. Select the syslog audit policy that you created from the **Select Policy** list.
4. Enter the priority in the **Priority** field.
5. Select **SYSTEM_GLOBAL** from the **Global Bind Type** field and click **Bind**.
6. On the **Syslog Auditing** page, select the syslog audit policy and click **Done**.

Once the configuration is successful, the management logs are sent as syslog payloads to the external syslog server.

Configure export of management logs to Splunk configured as HTTP server You can configure Splunk as an HTTP server. In the HTTP server configuration, you can use the HTTP event collector to send management logs over HTTP (or HTTPS) directly to the Splunk platform from your NetScaler. For more information, see [Export management logs to Splunk configured as an HTTP server](#).


Sample management log

The following is a sample management log:

```

1 10.222.4.55 10.217.11.103 [04/Oct/2023:18:38:34 +0000] [43533] "GET /
  HTTP/1.1" 200 20783 "Go-http-client/1.1" "Time: 38848 microsecs"
2
3 127.0.0.1 [04/Oct/2023:16:30:00 +0000] [16510] "GET / HTTP/1.1" 200
  20783 "curl/7.87.0" "Time: 42015 microsecs"
4
5 [Wed Oct 04 16:00:00.093670 2023] [authz_core:error] [pid 7487] [client
  127.0.0.1:16161] AH01630: client denied by server configuration: /
  netscaler/ns_gui/var
  
```

The following image describes the management log:

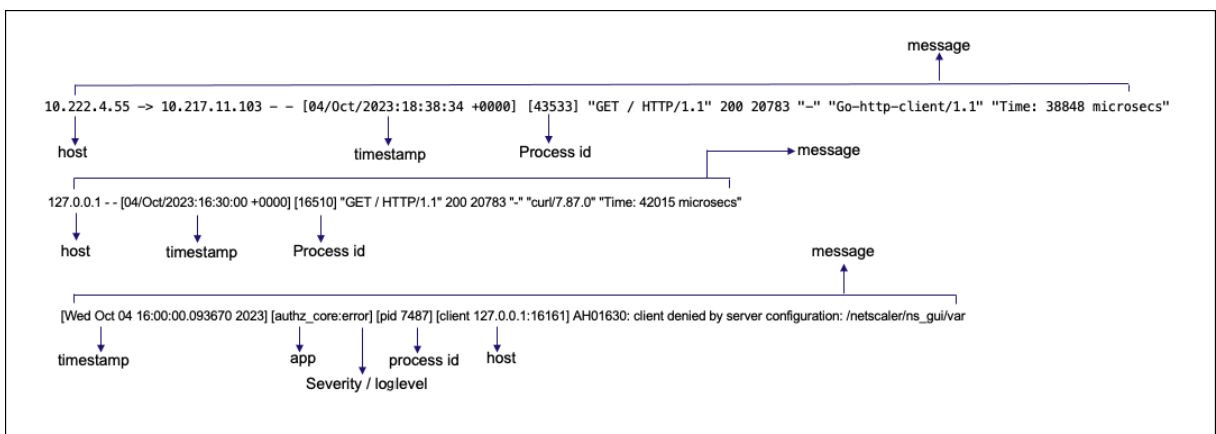

The following is a sample `bash` log:

```

1 Apr 24 11:21:00 <local7.notice> ns bash[3893]: root on /dev/pts/0
  shell_command="PATH=/netscaler:/bin:/sbin:/usr/bin:/usr/sbin:/usr/
  libexec:/usr/local/bin:/usr/local/sbin:."
2 Apr 24 11:21:00 <local7.notice> ns bash[3893]: root on /dev/pts/0
  shell_command="EDITOR=/usr/bin/vi"
3 Apr 24 11:21:00 <local7.notice> ns bash[3893]: root on /dev/pts/0
  shell_command="[ -f /var/python/bin/python ]"
4 Apr 24 11:21:00 <local7.notice> ns bash[3893]: root on /dev/pts/0
  shell_command="export PATH=$PATH:/var/python/bin"
5 Apr 24 11:21:00 <local7.notice> ns bash[3893]: root on /dev/pts/0
  shell_command="[ -f /var/golang/bin/go ]"
6 Apr 24 11:21:00 <local7.notice> ns bash[3893]: root on /dev/pts/0
  return_code="1"
7 Apr 24 11:21:00 <local7.notice> ns bash[3893]: root on /dev/pts/0
  shell_command=""
8 Apr 24 11:21:12 <local7.notice> ns bash[3893]: root on /dev/pts/0
  shell_command="cat /var/log/bash.log"

```

The following is a sample `httpaccess` log:

```

1 10.102.201.155 -> 10.102.201.155 - - [10/Jun/2024:23:07:11 +0530]
  [1571] "GET /nitro/v1/config/route6?format=json&sessionId=[FILTERED]
  HTTP/1.1" 200 1162 "-" "-" "Time: 9797 microseconds"
2
3 10.102.201.155 -> 10.102.201.155 - - [10/Jun/2024:23:07:11 +0530]
  [1571] "GET /nitro/v1/config/nslicense?format=json&sessionId=[
  FILTERED] HTTP/1.1" 200 1118 "-" "-" "Time: 7774 microseconds"
4
5 10.102.201.155 -> 10.102.201.155 - - [10/Jun/2024:23:07:11 +0530]
  [1571] "GET /nitro/v1/config/appflowparam?format=json&sessionId=[
  FILTERED] HTTP/1.1" 200 1643 "-" "-" "Time: 8098 microseconds"
6
7 10.102.201.155 -> 10.102.201.155 - - [10/Jun/2024:23:07:12 +0530]
  [1571] "GET /nitro/v1/config/snmpmib?format=json&sessionId=[FILTERED
  ] HTTP/1.1" 200 347 "-" "-" "Time: 8185 microseconds"
8
9 10.102.201.155 -> 10.102.201.155 - - [10/Jun/2024:23:11:16 +0530]
  [1570] "GET /nitro/v1/config/nslicense?format=json&sessionId=[
  FILTERED] HTTP/1.1" 200 1118 "-" "-" "Time: 23195 microseconds"
10
11 10.102.201.155 -> 10.102.201.155 - - [10/Jun/2024:23:11:17 +0530]
  [1570] "GET /nitro/v1/config/nslicenseserver?format=json&sessionId=[
  FILTERED] HTTP/1.1" 200 57 "-" "-" "Time: 8992 microseconds"

```

The following is a sample `httperror` log:

```

1 [Mon Jun 10 15:00:01.016898 2024] [mpm_prefork:notice] [pid 47106]
  AH00171: Graceful restart requested, doing restart
2
3 [Mon Jun 10 15:00:01.323746 2024] [mpm_prefork:notice] [pid 47106]
  AH00163: Apache/2.4.56 (Unix) mod_perl/2.0.10 Perl/v5.30.2
  configured -- resuming normal operations
4

```

```

5 [Mon Jun 10 15:00:01.323756 2024] [core:notice] [pid 47106] AH00094:
  Command line: '/bin/httpd -f /etc/httpd.conf'
6
7 [Mon Jun 10 15:30:00.211099 2024] [authz_core:error] [pid 80696] [
  client 127.0.0.1:31128] AH01630: client denied by server
  configuration: /netscaler/ns_gui/var
8
9 [Mon Jun 10 15:38:06.205307 2024] [authz_core:error] [pid 80696] [
  client 127.0.0.2:24903] AH01630: client denied by server
  configuration: /netscaler/ns_gui/var

```

The following is a sample auth log:

```

1 Jun 13 12:03:33 <auth.info> ns login: login on pts/1 as root
2 Jun 13 12:03:33 <auth.info> ns sshd[17798]: Received disconnect from
  10.102.201.155 port 33145:11: Normal Shutdown
3 Jun 13 12:03:33 <auth.info> ns sshd[17798]: Disconnected from user
  admuser 10.102.201.155 port 33145
4 Jun 13 12:03:33 <auth.info> ns sshd[17803]: rexec line 19: Deprecated
  option UsePrivilegeSeparation
5 Jun 13 12:03:34 <auth.info> ns sshd[17803]: Accepted keyboard-
  interactive/NS for admuser from 10.102.201.155 port 65127 ssh2

```

The following is a sample nsvpn.log:

```

1 Jun  6 09:18:16 <local1.info> ns [1289]: (0-15) extract_ldap_attribute:
  retrieved mail value mail@citrix.com for Complex1, length is 15
2 Jun  6 09:18:16 <local1.info> ns [1289]: (0-15)
  receive_ldap_user_search_event: extracted attribute, name: mail,
  value: mail@citrix.com
3 Jun  6 09:18:16 <local1.info> ns [1289]: (0-15)
  receive_ldap_user_search_event: built group string for Complex1 of:
  group5 group4 group3 g1
4 Jun  6 09:18:16 <local1.info> ns [1289]: (0-15)
  receive_ldap_user_search_event: User search succeeded, attempting
  user authentication(Bind) for <Complex1>
5 Jun  6 09:18:16 <local1.info> ns [1289]: (0-15)
  receive_ldap_user_bind_event: Got user bind event.
6 Jun  6 09:18:16 <local1.info> ns [1289]: (0-15)
  receive_ldap_user_bind_event: User authentication (Bind event) for
  user Complex1 succeeded
7 Jun  6 09:18:16 <local1.notice> ns [1289]: (0-15) send_accept: sending
  accept to kernel for : Complex1
8 Jun  6 09:18:16 <local1.info> ns [1289]: (0-15)
  aaad_alloc_serialize_keyValue_attrs: 2 custom attribute key_len 4
  value_len 15
9 Jun  8 06:21:48 <local1.info> ns [1289]: (0-62)
  aaad_remove_user_login_failure_info: sqlite3_step is SUCCESS

```

The following is a sample httperror-vpn log:

```

1 [Thu Jun 06 17:43:38.184137 2024] [core:error] [pid 63478] (63)File
  name too long: [client 127.0.0.2:42117] AH00036: access to /logon/L

```



```
LogonPoint/custom/strings.en.js?_=1718869081399 HTTP/1.1" 304 -
    "-" "Mozilla/5.0 (Windows NT 10.0; Win64; x64; rv:120.0)
    Gecko/20100101 Firefox/120.0" "Time: 529 microseconds"
2 127.0.0.2 - - [20/Jun/2024:08:37:47 +0000] [1508] "GET /logon/
    LogonPoint/plugins/ns-gateway/nsg-epa.js HTTP/1.1" 304 - "-" "Mo
    zilla/5.0 (Windows NT 10.0; Win64; x64; rv:120.0) Gecko
    /20100101 Firefox/120.0" "Time: 303 microseconds"
3 127.0.0.2 - - [20/Jun/2024:08:37:47 +0000] [1508] "GET /logon/
    LogonPoint/plugins/ns-gateway/nsg-setclient.js HTTP/1.1" 304 - "
    -" "Mozilla/5.0 (Windows NT 10.0; Win64; x64; rv:120.0)
    Gecko/20100101 Firefox/120.0" "Time: 311 microseconds"
4 127.0.0.2 - - [20/Jun/2024:08:37:47 +0000] [1508] "GET /logon/
    LogonPoint/plugins/ns-gateway/ns-nfactor.js HTTP/1.1" 304 - "-"
    "Mozilla/5.0 (Windows NT 10.0; Win64; x64; rv:120.0) Gecko
    /20100101 Firefox/120.0" "Time: 315 microseconds"
5 127.0.0.2 - - [20/Jun/2024:08:37:47 +0000] [1508] "GET /vpn/media/
    citrixgateway_logo_white.png HTTP/1.1" 304 - "-" "Mozilla/5.
    0 (Windows NT 10.0; Win64; x64; rv:120.0) Gecko/20100101
    Firefox/120.0" "Time: 358 microseconds"
```

Export management logs

You can export management logs from NetScaler to industry standard log aggregator platforms such as Splunk. For more information, see [Export management logs directly from NetScaler to Splunk](#).

Troubleshoot issues related to management logs

Even after you configure export of management logs, there might be some issues that prevent management logs getting exported to the observability endpoints. This section provides tips for troubleshooting issues related to the following scenarios:

- Management logs are not getting exported to the syslog server
- Management Logs not seen on Splunk (HEC)
- Common troubleshooting tips when management logs are not seen on any observability endpoint

Management logs are not getting exported to the syslog server When management logs are not getting exported to the syslog server, do the following:

1. Check if you have enabled some management logs on the syslog action.

Scenario

John, a system administrator, ran the `show syslogaction ns-mgmt-logs-act` command. In the output, he found `managementlog: NONE` and `mgmtloglevel: NONE`, which confirmed that management logs were not enabled.


```
> sh syslogaction ns-mgmt-logs-act
1) Name: ns-mgmt-logs-act
   Server IP: 9.9.9.9
   Port: 514
   Loglevel : NONE
   Managementlog: NONE
   Managementloglevel: NONE
   Date Format: MMDDYYYY
   Time Zone: GMT_TIME
   Facility: LOCAL0
   Tcp Logging: NONE
   ACL Logging: DISABLED
   LSN Logging: DISABLED
   ALG Logging: DISABLED
   Subscriber Logging: DISABLED
   DNS Logging: DISABLED
   ContentInspection Log: DISABLED
   Transport: UDP
   UserDefinedLogging: NO
   AppFlow export: DISABLED
   SSL Interception: DISABLED
   URL Filtering: DISABLED
   StreamAnalytics: DISABLED

Done
```

To fix this issue, he enabled management logs and management log levels by running the following command:

```
1 add syslogaction ns-mgmt-logs-act 9.9.9.9 -loglevel none -
  mgmtlogLevel all -managementlog all
```

After enabling, he ran the `show syslogaction ns-mgmt-logs-act` command and verified that the management logs were enabled as highlighted in the following output.

```
> sh syslogaction ns-mgmt-logs-act
1) Name: ns-mgmt-logs-act
   Server IP: 9.9.9.9
   Port: 514
   Loglevel : NONE
   Managementlog: SHELL ACCESS NSMGMT
   Managementloglevel: EMERGENCY ALERT CRITICAL ERROR WARNING NOTICE INFORMATIONAL DEBUG
   Date Format: MMDDYYYY
   Time Zone: GMT_TIME
   Facility: LOCAL0
   Tcp Logging: NONE
   ACL Logging: DISABLED
   LSN Logging: DISABLED
   ALG Logging: DISABLED
   Subscriber Logging: DISABLED
   DNS Logging: DISABLED
   ContentInspection Log: DISABLED
   Transport: UDP
   UserDefinedLogging: NO
   AppFlow export: DISABLED
   SSL Interception: DISABLED
   URL Filtering: DISABLED
   StreamAnalytics: DISABLED

Done
```

2. Check if the configured logs are generated locally. For example, if you've configured management logs with INFO severity, check if `/var/log/ns.log` contains management logs (lines that do not contain '-PPE-') generated with INFO severity. The following are a couple of scenarios:

Scenario 1

Cassidy, a system administrator, added the following action that had only NSMGMT warning logs enabled and found that the logs were not getting generated.

```
1 add syslogaction ns-mgmt-logs-act 9.9.9.9 -loglevel none -
  mgmtLogLevel warning -managementlog NSMGMT
```

Cassidy looked at the local log files `ns.log` and `notice.log` and found that warning level messages were not generated.

```
1 root@ns# cat /var/log/ns.log | grep -v -e '-PPE-'
2 Jun 26 05:00:00 ns newsyslog[74791]: logfile turned over due to
  size>100K
3 root@ns# cat /var/log/notice.log | grep warn
4 Jun 26 05:08:34 <local7.notice> ns bash[81962]: root on /dev/pts/5
  shell_command="cat /var/log/notice.log | grep warning"
5 Jun 26 05:08:40 <local7.notice> ns bash[81962]: root on /dev/pts/5
  shell_command="cat /var/log/notice.log | grep warn"
6 Jun 26 05:09:15 <local7.notice> ns bash[81962]: root on /dev/pts/5
  shell_command="cat /var/log/notice.log | grep warn"
```

Scenario 2

John, a system administrator, added the following action that had all management logs enabled for all levels.

```
1 add syslogaction ns-mgmt-logs-act 9.9.9.9 -loglevel none -
  mgmtLogLevel all -managementlog all
```

The logs were getting generated locally in the `bash.log` and therefore, the same appeared at their observability endpoint as well.

```
1 root@ns# tail -f /var/log/bash.log
2 Jun 26 05:16:54 <local7.notice> ns bash[4278]: root on (null)
  return_code="1"
3 Jun 26 05:16:54 <local7.notice> ns bash[5909]: root on (null)
  shell_command="true"
4 Jun 26 05:16:54 <local7.notice> ns bash[5909]: root on (null)
  shell_command="curl 10.102.154.54; sleep 0.5"
5 Jun 26 05:16:54 <local7.notice> ns bash[5909]: root on (null)
  shell_command="curl 10.102.154.54"
```

3. Check and confirm the following:

- If you are using the correct transport protocol

- If you are using the correct IP address or domain name
 - If you are using the correct load balancing configuration
 - If the domain name is resolved
 - If the service or the virtual server is UP
4. Check and confirm that the policy is created with ‘true’ rule and bound to system global. If the binding is not present, the logs are not exported.

Scenario

Cassidy, a system administrator, ran the `show syslogglobal` command and noticed that the policy was not bound to system global.

```
1 > show syslogglobal
2 Done
```

Cassidy ran the following command to bind the policy to system global:

```
1 bind syslogGlobal -policyName ns-mgmt-logs-pol -priority 1 Done
```

After binding, the `show syslogglobal` command showed the binding details.

```
1 > sh syslogglobal
2 1) Policy Name: ns-mgmt-logs-pol
3 Priority: 1
4 GlobalType: SYSTEM_GLOBAL
5 Done
```

5. Check management log counters. You can run `shell nsconmsg -g mgmt_push -g mgmtlog -d current`. For example, if you see `mgmtlog_tot_send_syslog_failures_due_to_increment` in the output, it indicates that the logs were not sent because the server was not up.
6. Run `nstrace` to check the UDP or TCP flow for any abnormalities. Check if the endpoint is configured to use TLS or SSL but NetScaler is actually sending unencrypted data or conversely.

Management logs not seen on Splunk (HEC) When management logs are not getting exported to Splunk (HEC), perform the following:

1. Check if you have enabled management logs on a time series profile. To check, run the `show analyticsprofile <profilename>` command and see the output.

Scenario

Cassidy, a system administrator, realized that she actually needed the JSON format and not the syslog format. Therefore, she removed all management syslog configurations and added analytics configurations. However, she saw that the logs were not going out of NetScaler. When

she ran the `show analyticsprofile <name>` command, she saw `Managementlog: NONE` in the output and realized that she had forgotten to enable management logs on the analytics profile.

To fix the issue, she enabled management logs using the `set analytics profile <name> -managementlog ACCESS`. With this fix, she saw that the logs were sent out of the NetScaler and also the `show analyticsprofile <name>` command showed `Managementlog: ACCESS`.

```

> set analytics profile ns-mgmt-log-json-profile -managementlog ACCESS
Done
> sh analyticsprofile ns-mgmt-log-json-profile
1) Name: ns-mgmt-log-json-profile
Collector: ns-mgmt-log-json-collector
Profile-type: timeseries
Output Mode: avro
Metrics: DISABLED
Schema File: schema.json
Metrics Export Frequency: 30
Events: DISABLED
Auditlog: DISABLED
Serve mode: Push
Endpoint Metadata: {"index":"ns-mgmt-log-syslog-index"}
Authentication Token: 17fc5f55c1711a248e6c82b4047ec360a14dadcf6231611353b43cad50d68dca
Endpoint URL: /services/collector/event
Endpoint Content-type: application/json
Reference Count: 0
Managementlog: ACCESS
Done

```

2. Check if the configured logs are actually being generated locally. For example, if you've configured NSMGMT management logs, you can check if `/var/log/ns.log` has management logs (lines that do not contain '-PPE-') generated.
3. Check and confirm the following:
 - If you are using the correct profile. You must use the time series profile.
 - If the service is resolved and is UP.
 - If metadata (`-analyticsEndpointMetadata`) is properly configured and is a valid JSON and also if all the fields contained in it are present in the logs exported to Splunk.
 - If the Splunk Auth Token is correct. Because the auth token is not displayed, you have to ensure it is entered correctly in the format `-analyticsAuthToken 'Splunk <token >'`.
4. Run the `shell nsconmsg -g mgmt_push -g mgmtlog -d current` command and check for management log counters. For example, if you see `mgmtlog_tot_json_non_2xx_http_res_increment`, then it indicates that the logs failed to reach Splunk because it responded with non-2XX response.
5. Run `nstrace` to check the TCP or HTTP flow for any abnormalities. Check if the endpoint is configured to use TLS or SSL but NetScaler is sending unencrypted data or conversely. You can further check if the exported JSON is not malformed.

Common troubleshooting tips when management logs are not seen on any observability endpoint If the tips provided in the Management logs are not getting exported to syslog server and Management Logs not seen on Splunk (HEC) sections do not resolve your issue, perform the following:

1. Look at the following log files related to the process that exports management logs. These log files might give you an idea about the issue:
 - /var/log/export_mgmtlog_status.log
 - /var/log/export_mgmtlog_cron.log

Scenario: Cassidy, a system administrator, saw broken pipe errors in `export_mgmtlog_status.log` and found that their collector was sending resets because of firewall issues, which was rectified at their end.

```

1 Fri May 10 04:02:15 2024 do_logexport.py ERROR Traceback (
  most recent call last):
2   File "/netscaler/do_logexport.py", line 505, in netio_send
3     pe_socket.sendall(data)
4   BrokenPipeError: [Errno 32] Broken pipe

```

2. Check if the configuration file `/nsconfig/mgmtlogcfg.json` is properly generated and also check if it hints to contain Syslog or JSON related configuration.

For example, when both Syslog and JSON are configured, the `/nsconfig/mgmtlogcfg.json` file looks as shown below. The “`syslog`” field confirms that syslog is configured, while the “`json`” field confirms that json is configured.

```

1 root@ns# cat /nsconfig/mgmtlogcfg.json
2 {
3   "syslog":{
4     "typemask":7,"levelmask":127,"ip":"127.0.0.2","port" :5566 }
5   ,"json":[{
6     "name":"ns-mgmt-log-json-profile","typemask":2,"ip":"127.0.0.2","
7     port":5563,"metadata":{"
8     \ "index\":"ns-mgmt-log-syslog-index\ " }
9   ] }

```

3. Ensure that you are looking at the correct index and the correct timestamp.

Scenario

Cassidy, a system administrator, realized that she configured syslog index named `ns-mgmt-log-syslog-index` instead of `ns-mgmt-log-json-index` on Splunk, which was later rectified.

```

|> add analyticsprofile ns-mgmtlog-json-profile -type timeseries -collectors ns-mgmtlog-json-collector -analyti
csauthToken 'Splunk x-x-x-x' -analyticsendpointmetadata '{"index":"ns-mgmt-log-syslog-index"}' -analyticsendpo
intcontentType 'application/json' -analyticsendpointurl /services/collector/event -managementlog all
Done
|> sh analyticsprofile ns-mgmtlog-json-profile
1) Name: ns-mgmtlog-json-profile
Collector: ns-mgmtlog-json-collector
Profile-type: timeseries
Output Mode: avro
Metrics: DISABLED
Schema File: schema.json
Metrics Export Frequency: 30
Events: DISABLED
Auditlog: DISABLED
Serve mode: Push
Endpoint Metadata: {"index":"ns-mgmt-log-syslog-index"}
Authentication Token: 963920799fa34a075e669d3601e3445a574411508f89faead7aed339572c8343
Endpoint URL: /services/collector/event
Endpoint Content-type: application/json
Reference Count: 0
Managementlog: ALL
Done

```

4. On cluster deployments, if the logs are not going out of non-CCO nodes, try running the `force cluster sync` command.
5. **HA deployments:** You might notice that the secondary node is not sending logs by default. If you are exporting JSON, then you can enable the appflow param `TimeseriesOverNSIP` to allow a secondary node to send logs using the NSIP address to the collector, if the latter is reachable using the NSIP address (SNIP addresses cannot export logs out of secondary nodes). If you are exporting Syslog, then you can use a load balancing virtual server instead to export information out of secondary nodes.
6. **Netprofiles:** It is also possible to use netprofiles. For syslog, ensure that you have set the 'netprofile' on the syslog action. If you are load balancing syslogs or you are exporting them in JSON format, then ensure that you have set the netprofile on the service.
7. **Partitions:** Management logs feature is not supported on non-default Partitions.
8. **Timestamps:** Management logs generated by the processes are periodically exported. Hence, the time you receive the management log might not be the same as the time it was generated. Also, the date format might not comply with the date format configured on the syslog action, because management syslog follows RFC-5424 format.

Processed insights

September 3, 2024

NetScaler records the application traffic flow events such as HTTP requests and responses in the form of counters and transactions. When this data is sent to NetScaler Console or other observability tools, the receiving tool processes the data and provides actionable insights. For example, NetScaler Console processes all transactions and generates Web Insight reports. However, this method poses chal-

Challenges as significant data must be transferred from NetScaler to observability tools and logics must be created to obtain insights.

From NetScaler release 14.1-29.x onwards, NetScaler can process the raw data and generate processed insights that can be sent outside NetScaler. The following are the advantages of NetScaler generating processed insights:

- The data transferred from NetScaler to NetScaler Console or any other observability tool is minimum.
- Aggregation and filtering of data can be done according to the use case from the source itself. For example, aggregate data based on a client or a URL.
- The data transferred is easily consumable on observability tools without any processing.
- Dashboards on NetScaler Console or other observability tools can be built efficiently.

Processed insights from NetScaler using stream analytics

The performance of a website or an application depends on how well you optimize the delivery of the content. Stream analytics aggregates the real-time statistics of the website or application traffic based on the expressions provided in an entity called, selector. For example, a selector can be a client IP or a URL. You can configure a stream identifier that specifies the selector to be used, the statistics collection interval, the sample count, and the field on which the records must be sorted. You can sort the data based on the requests and create a list of top records, such as, top URLs, top clients. These top records are known as top N, where N is the number or count of records listed.

NetScaler processes the top N records that are generated by the stream analytics and provides insights. You can also export the stream analytics data to NetScaler Console or any other observability tool.

Based on the data generated by the stream identifier, you can take the required actions, such as optimizing the traffic, limiting bandwidth consumption for user or client. For more information, see [Configure policy for optimizing traffic](#) and [How to limit bandwidth consumption for user or client device](#).

Notes:

- You can bind one stream identifier to multiple virtual servers and collect statistics from multiple virtual servers for the same stream selector expressions.
- You can export a maximum of 1000 Top N records per stream identifier.
- Stream identifier aggregates result data as stream sessions, based on the evaluation of the selector expression. The total length of the stream session is limited to 60 characters and the length is equally shared among the number of selector expressions. For example, if the selector has 5 expressions, each expression output gets 12 characters.

- You can configure export of stream analytics data through syslog and through analytics profile at the same time.

Configure stream analytics using the CLI

To configure stream analytics using the CLI, perform the following steps:

1. Configure stream selector.

```
1 add stream selector <name> <rule> ...
```

Example: To collect statistics aggregated at client IP and URL, run the following command:

```
1 > add stream selector myselector HTTP.REQ.URL CLIENT.IP.SRC
2 Done
3 > show stream selector myselector
4 Name: myselector
5 Expressions:
6     1) HTTP.REQ.URL
7     2) CLIENT.IP.SRC
8 Done
9 >
```

2. Configure an identifier for the selector.

```
1 add stream identifier <identifier name> <selector name> -interval
  <int in mins> -sort <req> -Log SYSLOG -LogInterval <int in mins>
  > -LogLimit <int>
```

Example: To get statistics for each Client IP and URL and export them to SYSLOG, run the following command:

```
1 add stream identifier TopTalkers myselector -interval 5 -log
  SYSLOG -loginterval 10 -loglimit 10
```

3. Create a responder policy to collect stats for the given identifier.

```
1 add responder policy <resp policy name> "analytics.stream(\"<
  identifier name>\").collect_stats" NOOP
```

Example:

```
1 add responder policy TopTalkers "analytics.stream(\"TopTalkers\").
  collect_stats" NOOP
```

4. Bind the responder policy to the target virtual server for which the traffic is to be analyzed by the identifier. To enable the same stream identifier to process traffic from multiple virtual servers, bind the responder policy to all the virtual servers.


```
1 bind lb vserver dnslb -policyName <resp policy name> -priority 1 -  
   gotoPriorityExpression NEXT -type REQUEST
```

Example:

```
1 bind lb vserver dnslb -policyName TopTalkers -priority 1 -  
   gotoPriorityExpression NEXT -type REQUEST
```

Configure stream analytics using the GUI

To configure stream analytics through the GUI, perform the following steps:

1. Navigate to **AppExpert > Action Analytics > Selectors**.
2. In the details pane, click **Add** and set the **Name** and **Expressions** parameter.
3. Click **Insert** and then click **Create**.
4. Navigate to **AppExpert > Action Analytics > Stream Identifiers**.
5. In the details pane, click **Add**. In the **Configure Stream Identifier** page, set the following parameters, and click **Create**.
 - Name
 - Selector
 - Interval
 - Sample Count
 - Sort
6. Navigate to **AppExpert > Responder > Policies**. On the **Responder Policies** page, click **Add**.
7. On the **Create Responder Policy** page, enter a name for the responder policy.
8. In the Expression editor, configure the condition for the responder policy. For example, ‘sys.check_limit(“limit_one_login”)’ and click **Create**.
9. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
10. On the **Load Balancing Virtual Servers** page, select the virtual server to which you want to bind the responder policy, and then click **Open**.
11. In the **Configure Virtual Server** (Load Balancing) dialog box, select the **Policies** tab. Select the checkbox next to the name of the policy that you want to bind to this virtual server and click **OK**.

Export of stream analytics data using syslog through CLI

To export the stream analytics data using syslog, perform the following steps by using the NetScaler CLI:

1. Create a syslog server endpoint. You can create multiple syslog servers for multiple log levels.

```
1 add audit syslogAction <syslog servername> <server ip address> -  
  logLevel ALL -managementlog ALL -mgmtlogLevel ALL -dateFormat  
  YYYYMMDD -userDefinedAuditlog YES -transport TCP -  
  streamAnalytics <ALL/NONE>
```

Example:

```
1 add audit syslogAction topk_syslog_server 10.106.44.6 -logLevel  
  ALL -managementlog ALL -mgmtlogLevel ALL -dateFormat YYYYMMDD -  
  userDefinedAuditlog YES -transport TCP -streamAnalytics <  
  enabled/disabled>
```

2. Create a syslog policy for the syslog server created in step 5.

```
1 add audit syslogPolicy <syslog policy> <syslog servername>
```

Example:

```
1 add audit syslogPolicy topk_syslog true topk_syslog_server
```

3. Bind the syslog policy at the right level.

```
1 bind syslogGlobal -policyName <syslog policy> -priority 1
```

Example:

```
1 bind syslogGlobal -policyName topk_syslog -priority 1
```

Export of stream analytics data using syslog through GUI

To export the stream analytics data using syslog, perform the following steps by using the NetScaler GUI:

1. Navigate to **Configuration > System > Auditing > Syslog**.
2. In the **Policies** tab, click **Add**.
3. Enter a name for the policy, select **Advanced Policy** and click **Add** to create an auditing server.
4. Enter the required details in the **Create Auditing server**, select **Stream Analytics**, and click **Create**.
5. On the **Syslog Auditing** page, select the policy, and click **Advanced Policy Global Bindings**.

6. Select the policy, priority, and **SYSTEM_GLOBAL** from the **Global Bind Type** drop-down list. Click **Bind**.

Export stream analytics data to Observability tools using the CLI

You can export the stream analytics data in JSON format to third-party observability tools, such as Splunk. To export stream analytics data by using the NetScaler CLI, perform the following steps:

1. Create an analytics profile of type `streaminsight` and enable the `topn` parameter.

```
1 add analytics profile <profile-name> -collectors Splunk -type streaminsight -topn ENABLED
```

Example:

```
1 add analytics profile Splunk_Prof -collectors Splunk -type streaminsight -topn ENABLED
```

2. Bind the stream identifier to the analytics profile.

```
1 bind stream identifier <identifier-name> -analyticsprofile <profile-name>
```

Example

```
1 bind stream identifier TopTalkers -analyticsprofile Splunk_Prof
```

3. Add a responder policy.

```
1 add responder policy <policy-name> <expression>
```

Example:

```
1 add responder policy TopTalkers "analytics.stream(\"TopTalkers\").collect_stats" NOOP
```

4. Bind the responder policy to the load balancing virtual server.

```
1 bind lb vserver <vserver-name> -policyName <policy-name> -priority 1 -gotoPriorityExpression NEXT -type REQUEST
```

Example:

```
1 bind lb vserver dnslb -policyName TopTalkers -priority 1 -gotoPriorityExpression NEXT -type REQUEST
```

5. Verify the configuration by running the `show analytics profile <name>` and `show stream identifier globalidentifier` commands.

Example 1: In the following example, the reference count indicates the stream identifiers associated with the analytics profile.

```

1 > sh analytics profile Splunk_Prof
2 1)      Name: Splunk_Prof
3         Collector: Splunk_ssl
4         Profile-type: streaminsight
5         TopN: ENABLED
6         Data Format File: splunk_format.txt
7         Authentication Token :
           ffc4a9d8c60f238e89eafcc9827991fal3302c41b2e1455e4e2e262
8
9         Endpoint URL: /services/collector/event
10        Endpoint Content-type: application/json
11        Reference Count: 2
12        Managementlog: NONE
13 Done

```

Example 2: The following is a sample output of `sh stream identifier globalidentifier` :

```

1 > sh stream identifier globalidentifier
2 Name: globalidentifier
3     Selector: clientipsrc
4     Expressions:
5         1) CLIENT.IP.SRC
6     Sample Count: 1 Interval: 1 min
7     Log : SYSLOG Log Interval : 1 min Log Limit : 500
8     Sort by : BANDWIDTH
9     Appflow logging: DISABLED
10    SNMP trap: DISABLED
11    Track Ack only pkts: DISABLED

```

Export of stream analytics data to Observability tools using the GUI

You can export the stream analytics data in JSON format to third-party observability tools, such as Splunk. To export the stream analytics data by using the NetScaler GUI, perform the following steps:

1. Create an analytics profile of type `streaminsight` and enable the `topN` parameter.
 - a) Navigate to **System > Profiles > Analytics Profiles** and click **Add**.
 - b) On the **Create Analytics Profile** page, provide the following details:
 - i. Enter a name for the profile.
 - ii. From the **Collectors** list, select the service that you created.
 - iii. Select a **STREAM INSIGHT** from the **Type** list.
 - iv. Enter the **Analytics Auth Token** that you received from the Observability endpoint such as Splunk.

- v. Enter the details for **Analytics Endpoint URL**, **Analytics Endpoint Content Type**, and **Analytics Endpoint Metadata**.
 - vi. Select **topN**.
 - vii. Select the **Management Logs** that you want to export and also the **Output Mode** in which you want to export.
 - viii. Click **Create**.
2. Navigate to **Configuration > AppExpert > Action Analytics > Stream Identifiers**.
 3. Select one or more required stream identifiers and click **Show Bindings**.
 4. Click **Bind**. Select the analytics profile of type `streaminsight` and click **Bind**.

The stream analytics data gets exported through the collector configured on the analytics profile of type `streaminsight`.


Sample stream analytics data sent in syslog

```

1 New audit log message module type for Stream Analytics = SA.
2
3 Apr  2 15:30:14 10.106.44.24 04/02/2024:09:58:28 GMT HA1 0-PPE-0 :
  default SA Message 3285 0 : "stream_iden_name: TopKTalkers,
  stream_sess_name: 1.1.1.1, Requests: 5836754, Bandwidth: 1635886,
  RespTime: 51, Connections: 9"
4 Apr  2 15:30:14 10.106.44.24 04/02/2024:09:58:28 GMT HA1 0-PPE-0 :
  default SA Message 3286 0 : "stream_iden_name: TopKTalkers,
  stream_sess_name: 2.2.2.2, Requests: 4939608, Bandwidth: 1384438,
  Resptime: 120, Connections: 7"
5 Apr  2 15:30:14 10.106.44.24 04/02/2024:09:58:28 GMT HA1 0-PPE-0 :
  default SA Message 3287 0 : "stream_iden_name: TopKTalkers,
  stream_sess_name: 3.3.3.3, Requests: 4293067, Bandwidth: 1203231,
  RespTime: 73, Connections: 8"
6 Apr  2 15:30:14 10.106.44.24 04/02/2024:09:58:28 GMT HA1 0-PPE-0 :
  default SA Message 3289 0 : "stream_iden_name: TopKTalkers,
  stream_sess_name: 4.4.4.4, Requests: 3834040, Bandwidth: 1074577,
  ResptTime: 109, Connections: 5"

```

The following image explains the stream analytics data sent in syslog:

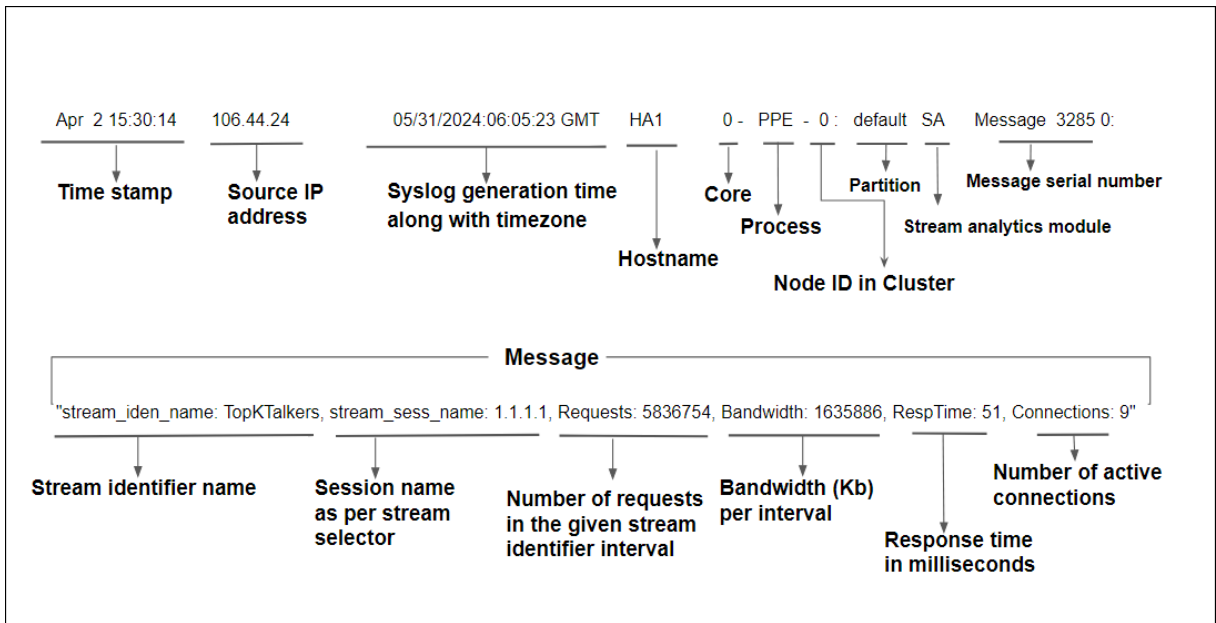

Sample stream analytics data sent in JSON format to observability tools

The following image explains the stream analytics data sent in JSON format to Splunk:

i	Time	Event
>	26/08/2024 09:53:31.000	{ [-] Bandwidth: 963 Connections: 1 Requests: 1 Resptime: 0 Timestamp: 1724665986 nsPartitionId: 0 observationPointId: 174730265 stream_iden_name: identifier_noMitigate stream_sess_name: 2.1.44.2 stream_usecase: TOPN } Show as raw text host = 10.106.44.9:8088 source = http:streaminsights sourcetype = httpevent

Annotations in the image:

- Bandwidth: 963 → Bandwidth in kbps
- Connections: 1 → Number of active connections
- Requests: 1 → Number of requests in the given stream identifier interval
- Resptime: 0 → Response time in milliseconds
- Timestamp: 1724665986 → Time stamp at which the record was generated
- nsPartitionId: 0 → Partition
- observationPointId: 174730265 → NetScaler IP address exported in the decimal format
- stream_iden_name: identifier_noMitigate → Stream identifier name
- stream_sess_name: 2.1.44.2 → Session name as per stream selector
- stream_usecase: TOPN → Type of stream usecase

Integration with Prometheus

April 1, 2024

NetScaler can be integrated with popular observability tools and Prometheus is one of them. NetScaler supports direct integration of NetScaler with Prometheus. With direct integration, there is no need to deploy any additional agent or node to export the data and build customized dashboards of your needs. NetScaler supports exporting metrics to Prometheus.

By integrating with Prometheus, you can perform the following actions:

- [Monitor NetScaler, applications, and application security using Prometheus](#)

Monitor NetScaler, applications, and application security using Prometheus

August 30, 2024

Metrics are a numeric representation of data that are measured over a certain period of time. Metric data is useful to track the health of a system over time. Prometheus is an open-source monitoring tool that collects metrics data and stores that data with a time stamp at which the data was recorded.


By monitoring and analyzing metrics, you can track the health of your applications, detect any anomalies, create alerts, and take necessary corrective actions to ensure robust software delivery.

NetScaler now supports directly exporting metrics to Prometheus. You can use the rich set of metrics provided by NetScaler ADC to monitor NetScaler health as well as application health. For example, you can gather metrics on CPU and memory usage to know the NetScaler health. Similarly, you can use metrics like the number of HTTP requests received per second or the number of active clients to monitor application health.

Export of metrics from NetScaler to Prometheus

NetScaler supports the Prometheus pull mode as well as push mode. In the pull mode, you need to configure a time series profile that Prometheus queries at regular intervals and pulls the metrics data directly without an exporter resource in between. With pull mode, you can enable read-only access for a user without superuser privileges to export metrics to Prometheus. Using Grafana, you can visualize the NetScaler metrics exported to Prometheus for easier interpretation and understanding.

The following diagram shows a Prometheus and Grafana integration with NetScaler.

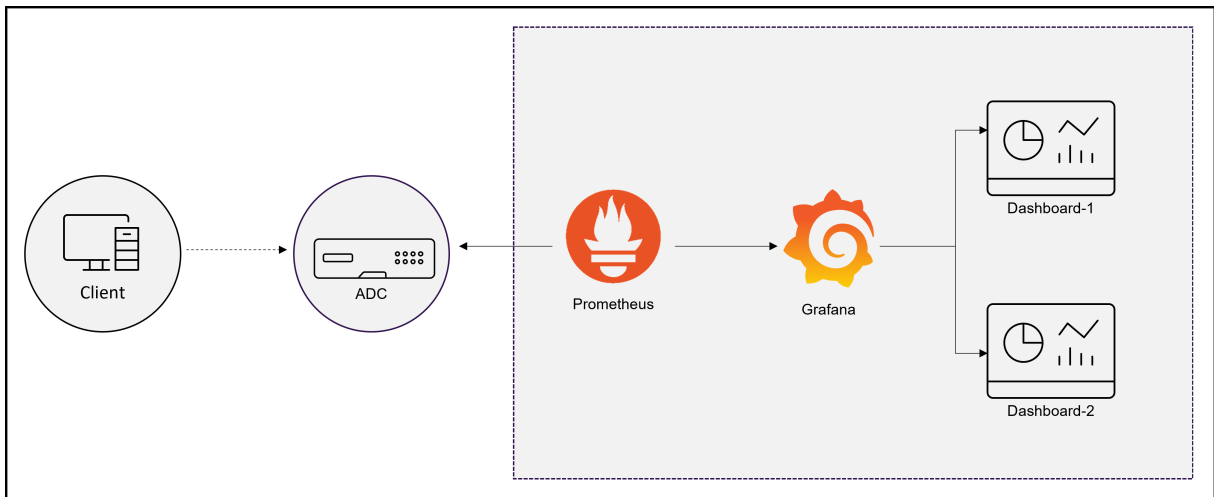

Configure the export of metrics from NetScaler to Prometheus and visualization using Grafana

You must perform the following steps to configure the export of metrics from NetScaler to Prometheus and visualize it using Grafana.

1. Configure NetScaler with a time series analytics profile for exporting metrics to Prometheus.
2. Install prometheus and configure it with the NetScaler specific parameters.
3. Configure read-only Prometheus access for a non-super user.
4. Add Prometheus as a data source in Grafana.
5. Create visualization in Grafana.

Configure a time series analytics profile on NetScaler to support the Prometheus pull mode

Do the following steps for configuring pull mode using the NetScaler CLI:

1. Create an analytics profile with type as time series. Specify the schema file with the required NetScaler metrics.

```

1 add analytics profile <timeseries_profile_name> -type timeseries
  -schemaFile <name_of_schema_file> -outputMode Prometheus -
  serveMode PULL -metrics ENABLED
  
```

In this command:

- `timeseries_profile_name`: Specify the time series profile name.
- `schemaFile`: Specify the name of the schema file with NetScaler counters. By default, a schema file `/var/metrics_conf/schema.json` with a list of counters is configured. A reference schema file `reference_schema.json` with all the supported counters is

also available under the path `/var/metrics_conf/`. This schema file can be used as a reference to build a custom list of counters. When you specify the schema file, the path of the schema file `/var/metrics_conf/` is automatically added and you need to mention only the schema file name. For example, if you have created a schema file `schema1.json` with a custom list of counters at `/var/metrics_conf/`, you need to specify only the file name as `schema1.json`.

Note:

- If the `rate` field in `schema.json` is set to `True`, then a counter called `RATE__<counter_name>` is exported by `metricscollector` as part of `metrics` payload.
- Do not configure the following string counters because they are not supported for Prometheus:
 - * `si_peer_ip_str`
 - * `cl_cur_vleader`
 - * `cl_cur_nodeip`
 - * `gslb_site_ip_str`
 - * `gslb_site_publicip_str`
 - * `vsvr_IPstr`
 - * `nic_cur_if_alias`
 - * `vsvr_DynamicProtocolStr`
 - * `api_endpoint_apiname`

- `outputMode`: Set the output mode as Prometheus.
- `serveMode`: Specify Prometheus pull mode.
- `metrics`: Enable collecting metrics from NetScaler.

Note:

You can configure an analytics profile with all the necessary parameters using the `add` command. If you need to make changes after creating the profile, you can use the `set` command to take the appropriate action such as disabling metrics and changing the server mode. You can configure read-only Prometheus access for a non-super user. For more information, see [configure read-only Prometheus access for a non-superuser](#).

Install and configure Prometheus for metrics export from NetScaler

You can download Prometheus from repositories such as DockerHub or Quay or the official Prometheus repository.

To run Prometheus as a Docker container use the following command:

```
1 docker run -dp 39090:9090 -v /tmp/prometheus.yml:/etc/prometheus/
   prometheus.yml --name native_prom prom/prometheus:latest
```

Note:

Here, `/tmp/prometheus.yml` is used as the path to the `prometheus.yml` file. Instead of that, you can specify the path on your virtual machine.

You must edit the `prometheus.yml` with the NetScaler parameters.

To export metrics from NetScaler, you must specify the following NetScaler specific parameters in the **Prometheus YAML scrape configuration** section. The scrape configuration section specifies a set of targets and configuration parameters describing how to scrape them.

- `metrics_path`: Specify the HTTP resource path in NetScaler to fetch metrics. This parameter is optional and the default path is `/metrics`. If there is no value defined, then Prometheus adds “/metrics” as the path.
- `username`: Specify the NetScaler user name.
- `password`: Specify the NetScaler password.
- `targets`: Specify the IP address of the NetScaler from which you need to export the metrics and the port you want to expose.
- `profilename` : Specify the name of the profile in place of `profilename`. The `profilename` parameter is optional and accepts a user-defined time series profile name. If `profile name` parameter is absent, then `ns_analytics_time_series_profile` is considered as the profile name.
- `follow_redirects`: Configure whether HTTP requests follow HTTP 3xx redirects. This parameter is optional and default value is set to `true` by Prometheus. If you are configuring this parameter, then you must set the value to `true`.

Following is the scrap configuration section of the Prometheus YAML to add the NetScaler IP address as a target on Prometheus to export metrics. Here, HTTP is used as the scheme. You can use either HTTP or HTTPS.

```
1  scrape_configs:
2    - job_name: 'vpx2_metrics_direct'
3      metrics_path: /metrics
4      params:
5        profilename:
6          - 'profile_name'
7      basic_auth:
8        username: 'prom_user'
9        password: 'user_password'
10     scheme: http
11     scrape_interval: 30s
12     follow_redirects: true
13     static_configs:
```

```
14 - targets: ['10.102.34.231:80']
```

Configure read-only Prometheus access for a non-super user

Perform the following steps to configure read-only Prometheus access for a non-super user.

1. Add a new user to the NetScaler appliance.

```
1 add system user <ns_user_name> <ns_user's_password> -externalAuth
  enabled -promptString user-%u-at-%T logging enabled
```

Example :

```
1 add system user nspaul nspaul -externalAuth enabled -promptString
  user-%u-at-%T logging enabled
```

2. Create a command policy for a read-only user. This command policy allows read-only access from any file under the `/var/nslog/` directory.

```
1 add system cmdPolicy read-only-prometheus ALLOW "(^man.*)|(^show\\
  s+(?!system)(?!configstatus)(?!ns ns\\.conf)(?!ns savedconfig)
  (?!ns runningConfig)(?!gslb runningConfig)(?!audit messages)(?!
  techsupport).*)|(^stat.*)|(show system file .* -filelocation
  \"/var/nslog\\")"
```

3. If metrics are only written to a certain file, you may even limit user access such that they can only get that specific file.

```
1 add system cmdPolicy read-only-prometheus ALLOW "(^man.*)|(^show\\
  s+(!system)(!configstatus)(!ns ns\\.conf)(!ns savedconfig) (!ns
  runningConfig)(!gslb runningConfig)(!audit messages)(!
  techsupport).*)|(^stat.*) |(show system file metrics_prom_<
  name_of_timeseries_profile>.log -filelocation \"/var/nslog\\")"
```

Note:

In the `show system file` command, specify the name of the time series profile you have configured in place of `name_of_ timeseries_profile`.

4. Bind a user with the command policy.

```
1 bind system user <userName> ((<policyName> <priority>) | -
  partitionName <string>)
```

For example :

```
1 bind system user user1 read-only-prometheus 0
```

To unbind and remove a user from the command policy use the following commands:

1. Unbind a configured user from the system command policy.

```
1 unbind system user <userName> (<policyName> | -partitionName <string>
```

For example:

```
1 unbind system user user1 read-only-prometheus
```

2. Remove the command policy from NetScaler.

```
1 rm system cmdPolicy read-only-prometheus
```

Add Prometheus as a data source in Grafana

If you need visualization of metrics using Grafana dashboards, you need to add Prometheus as a data source in Grafana. For more information, see [add Prometheus as a data source in Grafana](#).

Create the visualization of metrics in Grafana


You can create a Grafana dashboard and select the key metrics and the appropriate visualization-type.

The following procedure shows adding a metric to the Grafana panel and creating a sample visualization dashboard.

1. Specify the Panel Title.
2. In the Query tab, for the query A, specify the required metric.
3. In the Settings tab, select the Visualization type.

You can modify the data and its representation in Grafana. For more information, see the [Grafana Documentation](#).

Following is a sample Grafana dashboard with a few NetScaler metrics:

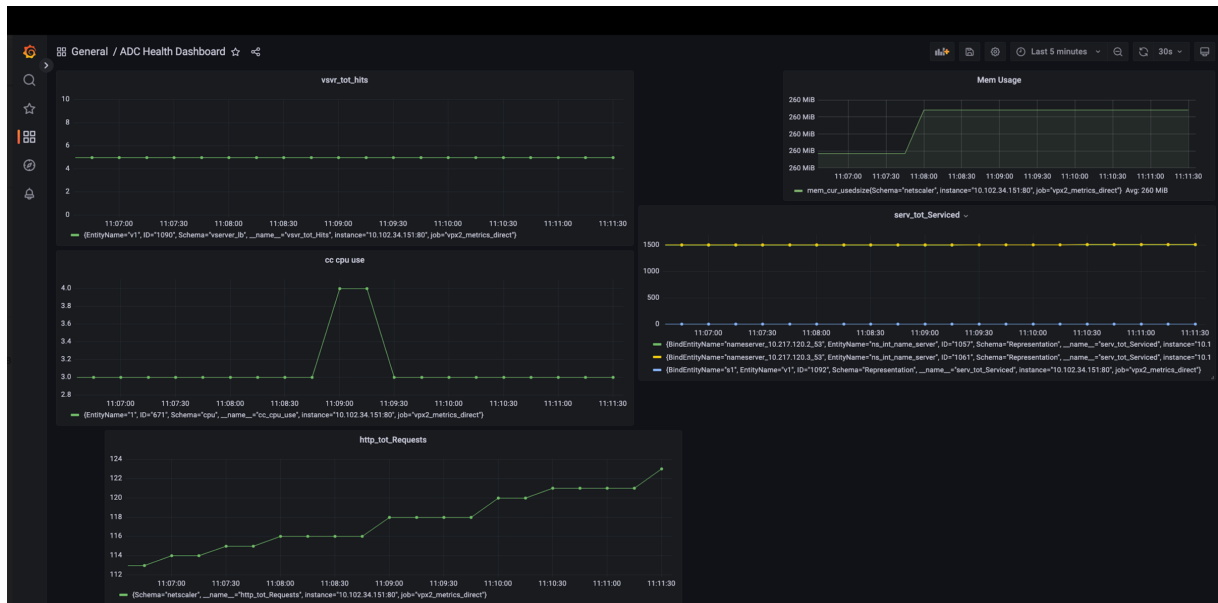

In this dashboard, you can see graphs for different NetScaler metrics such as:

- `vsvr_tot_Hits`: Shows the number of requests received by the virtual server.
- `cc_cpu_use`: Shows the CPU utilization percentage.
- `http_tot_Requests`: Shows HTTP requests received.
- `serv_tot_serviced`: Shows the request being serviced.
- `mem_cur_used_size`: Shows the currently used memory of the NetScaler appliance.


Troubleshoot issues related to export of metrics to Prometheus

For information on troubleshooting issues related to export of metrics, see [Troubleshoot issues related to export of metrics](#).

Sample Prometheus graphs

Using the Prometheus expression browser, you can display the time series metrics collected by the Prometheus server. You can access the expression browser by pointing to `prometheus-server-ip-address/graph` in your browser. You can enter an expression and see the result either as a table or graph over time. Specify which exact metric that you want to display by typing in the metric name into the Expression field. You can specify multiple counters using different panels.

The following diagram shows Prometheus graphs for two NetScaler metrics `cpu_use` and `http_tot_requests`.

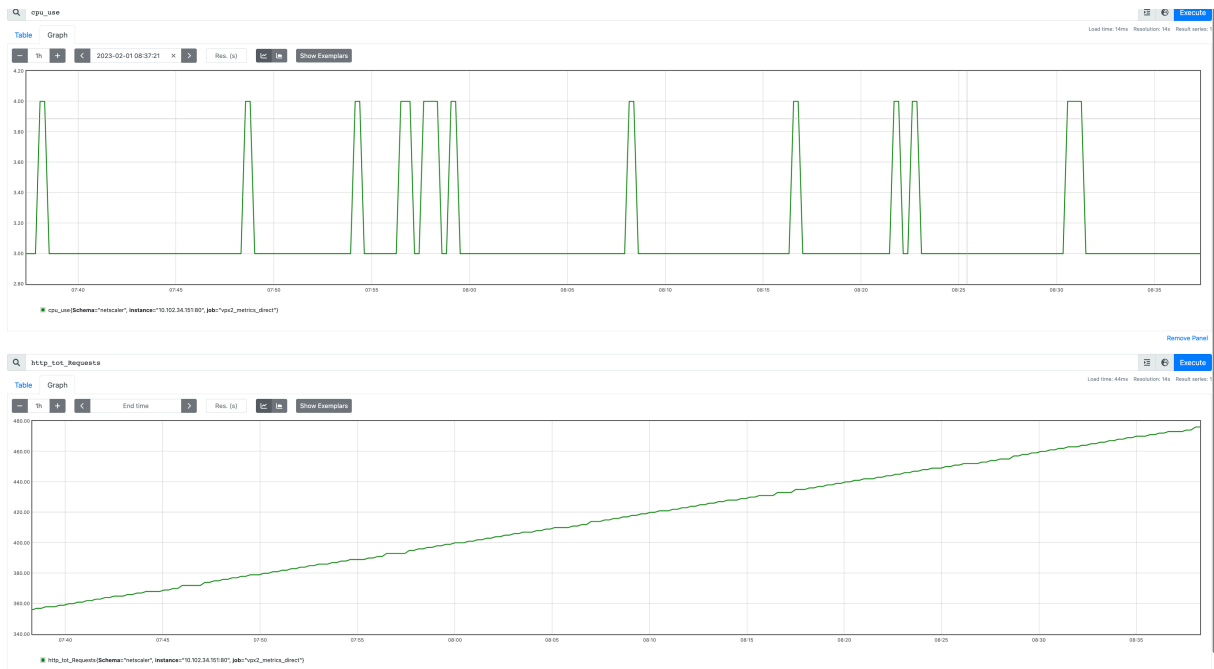

Sample Grafana dashboard

NetScaler supports sample dashboards on Grafana. For complete list of sample dashboards supported on Grafana and their details, see [Sample dashboards for Grafana](#).

You can download the sample dashboards from [NetScaler downloads page](#).

Additional information

Schema with the required NetScaler counters to export

Metrics collector exports counters present in the configured schema file. The `/var/metrics_conf/schema.json` file is the default schema file configured in the analytics profile.

The schema file is a list of entity types and associated counters. In the schema, all global or system level counters are grouped under the entity type `netscaler`. Some of the global counters are CPU usage (`cpu_use`), management CPU usage (`mgmt_cpu_use`), and total number of HTTP requests received (`http_tot_Requests`). The counters specific to service groups, `lbvserver`, `csvserver`, and so on are listed under the respective entity types.

Following is a sample of counters in the `schema.json` file for the authentication virtual server (`vserver_authn`) entity.

```
1 "vserver_authn":  
2   [  
3     {
```

```

4  "name":"si_tot_Requests","rate":"True" }
5  ,
6  {
7  "name":"si_tot_Responses","rate":"True" }
8  ,
9  {
10 "name":"si_tot_RequestBytes","rate":"True" }
11 ,
12 {
13 "name":"si_cur_state","rate":"False" }
14 ,
15 {
16 "name":"si_tot_ResponseBytes","rate":"True" }
17 ,
18 {
19 "name":"si_peer_port","rate":"True" }
20 ,
21 {
22 "name":"vsvr_Protocol","rate":"False" }
23
24 ]

```

The following table explains the counters mentioned in this sample:

Counter name	Description
<code>si_tot_Requests</code>	Total number of requests received on this service or virtual server.
<code>si_tot_Responses</code>	Total number of responses received on this service or virtual server.
<code>si_tot_RequestBytes</code>	Total number of request bytes received on this service or virtual server.
<code>si_cur_state</code>	Current state of the virtual server.
<code>si_tot_ResponseBytes</code>	Total number of response bytes received on this service or virtual server.
<code>si_peer_port</code>	The port on which the service is running.
<code>vsvr_Protocol</code>	Protocol associated with the virtual server.

The `rate` field can be set as `True` if the rate value a counter needs to be exported. For example, the rate of `si_tot_Requests` is exported if the `rate` is set to `True` for `si_tot_Requests`.

Following is a sample of counters from the `netScaler` entity.

```

1  "netScaler":
2  [
3  {
4  "name":"cpu_use","rate":"False" }

```

```
5   ,
6     {
7     "name":"mgmt_cpu_use","rate":"False" }
8   ,
9     {
10    "name":"tcp_tot_rxpkts","rate":"True" }
11  ,
12    {
13    "name":"tcp_tot_rxbytes","rate":"True" }
14  ,
15    {
16    "name":"tcp_tot_txpkts","rate":"True" }
17  ,
18    {
19    "name":"tcp_tot_txbytes","rate":"True" }
20  ,
21    {
22    "name":"tcp_cur_ClientConnEst","rate":"False" }
23  ,
24    {
25    "name":"tcp_cur_ServerConnEst","rate":"False" }
26  ,
27    {
28    "name":"tcp_cur_ClientConn","rate":"False" }
29  ,
30    {
31    "name":"tcp_cur_ClientConnClosing","rate":"False" }
32  ,
33    {
34    "name":"tcp_tot_ClientOpen","rate":"True" }
35  ,
36    {
37    "name":"tcp_cur_ServerConn","rate":"False" }
38  ,
39    {
40    "name":"tcp_cur_ServerConnClosing","rate":"False" }
41  ,
42    {
43    "name":"http_tot_Requests","rate":"True" }
44  ,
45    {
46    "name":"http_tot_Responses","rate":"True" }
47  ,
48    {
49    "name":"http_tot_Gets","rate":"True" }
50  ,
51    {
52    "name":"http_tot_Posts","rate":"True" }
53  ,
54    {
55    "name":"http_tot_Others","rate":"True" }
56  ,
57  ]
```


The following table explains the counters mentioned in this sample:

Counter name	Description
<code>cpu_use</code>	Tracks the CPU utilization percentage (CPU utilization percentage * 10).
<code>tcp_tot_rxpkts</code>	TCP packets received.
<code>tcp_tot_rxbytes</code>	Bytes of TCP data received.
<code>tcp_tot_txpkts</code>	TCP packets transmitted.
<code>tcp_tot_txbytes</code>	Bytes of TCP data transmitted.
<code>tcp_cur_ClientConnEst</code>	Current client connections in the Established state, which indicates that data transfer can occur between the NetScaler appliance and the client.
<code>tcp_cur_ServerConnEst</code>	Current server connections in the Established state, which indicates that data transfer can occur between the NetScaler appliance and the server.
<code>tcp_cur_ClientConn</code>	Client connections, including connections in the Opening, Established, and Closing state. Server connections, including connections in the Opening, Established, and Closing state.
<code>tcp_cur_ClientConnClosing</code>	Client connections in the Closing state, which indicates that the connection termination process has initiated but is not complete.
<code>tcp_cur_ServerConn</code>	Server connections, including connections in the Opening, Established, and Closing state.
<code>tcp_cur_ServerConnClosing</code>	Server connections in the Closing state, which indicates that the connection termination process has initiated but is not complete.
<code>http_tot_Requests</code>	This counter tracks HTTP requests received using the GET method.
<code>http_tot_Responses</code>	This counter tracks HTTP requests received using the POST method.
<code>http_tot_Gets</code>	This counter tracks HTTP requests received using the GET method.
<code>http_tot_Posts</code>	This counter tracks HTTP requests received.

Counter name	Description
<code>http_tot_Others</code>	This counter tracks HTTP requests received using methods other than GET and POST.

Following is a sample of counters from the `vserver_ssl` entity.

```

1  "vserver_ssl":
2    [
3      {
4        "name":"ssl_ctx_tot_session_hits","rate":"True" }
5      ,
6      {
7        "name":"ssl_ctx_tot_session_new","rate":"True" }
8      ,
9      {
10     "name":"ssl_ctx_tot_enc_bytes","rate":"True" }
11     ,
12     {
13     "name":"ssl_ctx_tot_dec_bytes","rate":"True" }
14     ,
15    ]

```

The following table explains the SSL counters mentioned in this sample:

Counter name	Description
<code>ssl_ctx_tot_session_hits</code>	This counter tracks the number of session hits.
<code>ssl_ctx_tot_session_new</code>	This counter tracks the number of new sessions created.
<code>ssl_ctx_tot_enc_bytes</code>	This counter tracks the number of encrypted bytes per SSL virtual server.
<code>ssl_ctx_tot_dec_bytes</code>	This counter tracks the number of bytes decrypted per SSL virtual server.

Subscription of counters for multiple time series profiles

NetScaler supports creating multiple time series profiles and specifies different set of counters for each profile. Also, you can export only the counters based on your requirements.

You must create multiple `schema.json` files containing the necessary counters with unique names and the `.json` extension to configure multiple time series profiles. A reference schema file `reference_schema.json` is available under the path `/var/metrics_conf/` for your reference.

The configuration of the two new time series profiles is as follows:

```
1  add analytics profile ns_analytics_timeseries_profile_1 -type
    timeseries -schemaFile schema1.json
2
3  set analytics profile ns_analytics_timeseries_profile_1 -outputMode
    prometheus -serveMode PULL -metrics ENABLED
4
5  add analytics profile ns_analytics_timeseries_profile_2 -type
    timeseries -schemaFile schema2.json
6
7  set analytics profile ns_analytics_timeseries_profile_2 -outputMode
    prometheus -serveMode PULL -metrics ENABLED
```

In this example, `schema1.json` and `schema2.json` have different sets of counters.

Prometheus configuration

Configuration of a sample `prometheus.yml` file is as follows:

```
1  scrape_configs:
2    - job_name: 'vpx2_metrics_direct'
3      metrics_path: /metrics
4      params:
5        - 'profile_name'
6      basic_auth:
7        username: 'prom_user'
8        password: 'user_password'
9      scheme: https
10     scrape_interval: 30s
11     follow_redirects: true
12     static_configs:
13       - targets: ['ADC1-ip:port', 'ADC2-ip:port']
```

Integration with Splunk

April 22, 2024

NetScaler can be integrated with popular observability tools and Splunk is one of them. NetScaler supports direct integration of NetScaler with Splunk. With direct integration, there is no need to deploy any additional agent or node to export the data and build customized dashboards of your needs. NetScaler supports exporting data metrics, audit logs, management logs, transaction logs to Splunk.

By integrating with Splunk, you can perform the following actions:

- [Export metrics directly from NetScaler to Splunk](#)
- [Export transaction logs directly from NetScaler to Splunk](#)
- [Export management logs directly from NetScaler to Splunk](#)
- [Export audit logs and events directly from NetScaler to Splunk](#)

Export metrics directly from NetScaler to Splunk

October 6, 2024

NetScaler now supports direct export of metrics to Splunk in the JSON format. NetScaler provides rich metrics to monitor your application health and application security health. By exporting the metrics provided by NetScaler to Splunk, you can visualize the metrics and get meaningful insights.

Configure exporting metrics directly from NetScaler to Splunk

To configure the export of metrics you must perform the following steps:

1. Configure an HTTP event collector (HEC) on Splunk.
2. Create a service for Splunk on NetScaler.
3. Create a time series analytics profile for direct export of metrics to Splunk.

Configure an HTTP event collector on Splunk

You can forward metrics to Splunk by configuring an HTTP event collector. Configuring the HTTP event collector involves creating an authentication token and associating a metric index with the token where metrics are sent, and setting the HTTP port number.

See the [Splunk documentation](#) for information on how to configure the HTTP event collector.

Once you have configured the HTTP event collector, copy the authentication token and save it for reference. You need to specify this token while configuring the analytics profile on NetScaler.

Create a collector service for Splunk on NetScaler

You can create a collector service on NetScaler to collect and export metrics from NetScaler to Splunk. Do the following to create a collector service for Splunk.

```
1 add service <collector> <splunk-server-ip-address> <protocol> <port>
```

Example:

```
1 add service splunk_service 10.102.34.155 HTTP 8088
```

In this configuration:

- `ip-address`: Specify the Splunk server IP address.
- `collector-name`: Specify the collector.
- `protocol`: Specify the protocol as HTTP or HTTPS
- `port`: Specify the port number of the Splunk HTTP event collector.

Configure a time series analytics profile on NetScaler

Do the following to create a time series analytic profile on NetScaler. While creating the time series profile, enable the option for metrics collection and specify details such as Splunk authentication token, name of the collector, output mode, and URL. By default, the time series analytics data is exported every 30 seconds but you can configure it in the range of 30–300 seconds using the metrics frequency parameter.

1. Create a time series analytics profile.

```
1 add analytics profile <profile-name> -type timeseries -metrics
  enabled -outputMode json -collectors <collector-name> -
  analyticsAuthToken <"auth-token"> -analyticsEndpointUrl <
  endpoint-url>
```

In this configuration, `auth_token` must be configured as “Splunk <auth token generated in Splunk HTTP event collector>”.

Example:

```
1 add analytics profile splunk_profile -type timeseries -metrics
  enabled -outputMode json -collectors splunk_service -
  analyticsAuthToken "Splunk 1234-5678-12345" -
  analyticsEndpointUrl /services/collector
```

In this configuration:

- `metrics`: Specify the value as enabled to enable metrics collection.
- `collectors`: Specify the collector service created for Splunk.
- `analyticsAuthToken`: Specify the authentication token to be included in the authorization header while sending metrics to Splunk. The format is “Splunk `auth-token`”. Here, `auth-token` is the authentication token created on the Splunk server while configuring the HTTP event collector.
- `analyticsEndpointUrl`: Configure this value as `/services/collector` to send metrics to the default index associated with the configured auth token. To redirect metrics

to a specific index, specify the index name in the URL (`/services/collector?index=`).

Note:

You can modify the time series analytics profile parameters using the `set analytics profile` command.

2. Verify the analytics profile configuration using the `show analytics profile` command.

```
1 # show analytics profile splunk_profile
2
3 1) Name: splunk_profile
4 Collector: splunk_service
5 Profile-type: timeseries
6 Output Mode: json
7 Metrics: ENABLED
8 Schema File: schema.json
9 Metrics Export Frequency: 30
10 Events: DISABLED
11 Auditlog: DISABLED
12 Serve mode: Push
13 Authentication Token: <auth-token>
14 Endpoint URL: /services/collector
15 Endpoint Content-type:
16 Endpoint Metadata:
17 Reference Count: 0
```

Once the configuration is successful, metrics are sent as HTTP payloads to Splunk and you can view it on the Splunk application user interface.

Export transaction logs directly from NetScaler to Splunk

December 17, 2024

You can now export transaction logs from NetScaler to industry-standard log aggregator platforms such as Splunk. The transaction log is the record of application traffic flow events on the NetScaler such as HTTP requests and responses, connection start and end. For more information on transaction logs, see [AppFlow](#).

You can export transaction logs in JSON format for different insights such as Web Insight, security, gateway, HDX insights. To export transaction logs to Splunk, you must configure Splunk as an HTTP server and use the HTTP event collector to send transaction logs over HTTP (or HTTPS) directly to the Splunk platform from your NetScaler. Using the visualization tools at Splunk, you can get meaningful insights about the exported data.

Note:

The IP addresses that are exported as part of the transaction logs appear in the decimal format instead of the standard format. For example, if your NetScaler IP address is 10.102.154.153, the same in the transaction logs on Splunk is displayed as 174496409. You can use the inbuilt expressions available on Splunk to convert the IP address from decimal format to standard format.

Export transaction logs from NetScaler to Splunk configured as an HTTP server

To configure the export of transaction logs you must perform the following steps:

1. Configure an HTTP event collector on Splunk.
2. Create a collector service and an analytics profile on NetScaler.

Configure an HTTP event collector on Splunk

You can forward transaction logs to Splunk by configuring an HTTP event collector. Configuring the HTTP event collector involves creating an authentication token and associating an event index with the token where events are sent, and setting the HTTP port number. For information on how to configure the HTTP event collector, see the [Splunk documentation](#).

Once you have configured the HTTP event collector, copy the authentication token and save it for reference. You need to specify this token while configuring the analytics profile on NetScaler.

Configure analytics profile on NetScaler

Do the following to export NetScaler transaction logs to Splunk.

1. Create a collector service for Splunk.

```
1 add service <collector> <splunk-server-ip-address> <protocol> <port>
```

Example:

```
1 add service splunk_service 10.102.34.155 HTTP 8088
```

In this configuration:

- ip-address: Splunk server IP address.
- collector-name: Name of the collector.
- protocol: Specify the protocol as HTTP or SSL.
- port: Port number.

2. Create an analytics profile.

```
1 add analytics profile `profile-name` -type <insight> -collectors `
  collector-name` -analyticsAuthToken `<auth-scheme> <
  authorization-parameters>` -analyticsEndpointContentType `
  application/json` -analyticsEndpointUrl `endpoint-url` -
  httpCustomHeaders <space-separated-header-names>
```

Example:

```
1 add analytics profile transaction-log-profile -type webinsight -
  collectors splunk_collector -analyticsAuthToken "Splunk
  1234-5678-12345" -analyticsEndpointContentType "application/
  json" -analyticsEndpointUrl "/services/collector/event" -
  httpCustomHeaders " X-Client-IP " " X-forwarded-for " " custom-
  field "
```

Note:

The `-allHttpHeaders` option is supported for Splunk transaction log export in NetScaler 14.1-25.x and later.

```
add analytics profile <profile-name> -type webinsight -allHttpHeaders
```

```
set analytics profile <profile-name> -type webinsight -allHttpHeaders
```

In this configuration:

- **insight:** Types of insights that you can export The following options are available:
 - botinsight
 - CIinsight
 - Gatewayinsight
 - hdxinsight
 - lsninsight
 - securityinsight
 - tcpinsight
 - udpinsight
 - videoinsight
 - webinsight
- **-analyticsAuthToke auth-scheme authorization-parameters:** Specify the authentication token to be included in the authorization header with the auth-scheme “Splunk” while sending logs to Splunk. This token is the authentication token created on the Splunk server while configuring the HTTP event collector.

- `analyticsEndpointContentType`: Specifies the Content-Type header. If no value is configured, then the Content-Type header is sent as `application/json`. If a value is configured, then the configured value is sent.
- `analyticsEndpointUrl`: The path to HEC on Splunk (`/services/collector/event` or `/services/collector`).

NOTE:

You can modify the analytics profile parameters using the `set analytics profile` command.

- `dataFormatFile`: The file that defines the data to be exported in the transaction log and the required format. Each endpoint expects the JSON payload to be encoded in a specific format. For Splunk, this format is specified in the `splunk_format.txt` file located in `/var/analytics_conf` directory. You can refer to this file to create a custom data format file for your use case. If no custom format is specified, the `splunk_format.txt` file is used by default.
- `-httpCustomHeaders`: The `-httpCustomHeaders` parameter allows you to include customer headers with transaction records while exporting transaction logs from NetScaler to Splunk.

NOTE:

- A maximum of 8 custom headers can be configured.
- Headers containing sensitive information can be configured at the discretion of the administrator.

3. Verify the analytics profile configuration using the `show analytics profile` command.

```
1 > sh analytics profile
2
3 ns_analytics_default_http_profile
4 1) Name: ns_analytics_default_http_profile
5 Collector: splunk
6 Profile-type: webinsight
7 Page Tracking: DISABLED
8 Client Side Measurements: DISABLED
9 URL Logging: ENABLED
10 Host Header Logging: ENABLED
11 Method Logging: ENABLED
12 Cookie Header Logging: DISABLED
13 Referer Header Logging: DISABLED
14 User Agent Logging: DISABLED
15 Content Type Logging: DISABLED
16 Authorization Header Logging: DISABLED
17 Via Header Logging: DISABLED
```

```

18      Location Header Logging: DISABLED
19      URL Category Logging: DISABLED
20      Log All HTTP Headers: DISABLED
21      X-Forwarded-For Header Logging: DISABLED
22      Set-Cookie Header Logging: DISABLED
23      Set-Cookie2 Header Logging: DISABLED
24      Domain Name Logging: DISABLED
25      URL-Query Logging: DISABLED
26      Integrated Cache Logging: DISABLED
27      gRPC Status Logging: DISABLED
28      API Spec Info Export Logging: DISABLED
29      Authentication Token:
30      Endpoint URL: /services/collector/event
31      Endpoint Content-type: text/json
32      Reference Count: 1
33      Managementlog: NONE

```

4. Bind the analytics profile to the virtual server.

```

1 bind lb vserver <vserver-name> -analyticsProfile transaction-log-
  profile

```

Example:

```

1 bind lb vserver sample-virtualserver -analyticsProfile transaction
  -log-profile

```

After the configuration is successful, based on traffic, transactions will be logged and exported to HEC on Splunk.

Field-based filtering of data records

By default, NetScaler exports hundreds of fields in the transaction log even when the endpoints do not require all of the exported data. Also, each endpoint expects the JSON payload to be encoded in a specific format such as the start and end of a data record, the delimiter between data records, and buffer start and end.

Splunk expects the JSON payload coming from NetScaler to be encoded in the following format:

- Buffer start and end: No value required for `BUFFER-START` and `BUFFER-END`.
- Data record start and end: The data record must start with `{ "event": {` and end with `} }`. All the fields that get exported must be between `DATA-START` and `DATA-END`.

The data records must start with the following:

```

1 RECORD-START
2 {
3   "event": {
4

```

```
5 DATA_START
```

The data records must end with the following:

```
1 DATA-END
2 }
3 }
4
5 RECORD-END
```

- Delimiter between data records: No delimiter required.

By default, `splunk_format.txt` is available at `var/analytics_conf` folder that contains the JSON payload format that Splunk expects and also contains a few default fields for which the data gets exported.

The following is a sample data format file for Splunk:

```
1 BUFFER-START
2 RECORD-START
3 {
4 "event":{
5
6 DATA-START
7 153 observationPointId
8 547 nsPartitionId
9 154 exportingProcessId
10 159 transactionId
11 801 httpReqUrl
12 685 httpReqMethod
13 683 httpReqHost
14 472 svrDstIpv4Address
15 579 srvSrcPort
16 580 srvDstPort
17 13 backendSvrIpv6Address
18 473 cltIpv4Address
19 474 cltDstIpv4Address
20 577 cltSrcPort
21 578 cltDstPort
22 14 transCltIpv6Address
23 15 transCltDstIpv6Address
24 DATA-END
25 }
26 }
27
28 RECORD-END
29 RECORD-DELIMITER
30
31 RECORD-DELIMITER-END
32 BUFFER-END
```

The `JSON_fields.txt` file under `var/analytics_conf` is a reference master file that contains

the complete list of fields along with their identification numbers. The fields in the master file are categorized based on the insights. For example, if you want to know the fields associated with HDX insight, you can look at the HDX insights category of `JSON_fields.txt` file.

You can create a customized data format file based on your requirement by referring to `splunk_format.txt`. For example, you can create `my_splunk_format.txt`. If your requirement is to export HDX insights, you can look at the HDX insights category in `JSON_fields.txt` file and add the required fields in your `my_splunk_format.txt` file. Similarly, you can delete any fields associated with the data that you do not want to export.

Note:

Do not update the default `splunk_format.txt` file; instead, use it as a reference. If you update the default `splunk_format.txt`, then the contents of the file is overwritten upon upgrade.

After customizing the data format file, run the following command to update the analytics profile:

```
1 update analytics profile <profile-name> -dataFormatFile <data-format-file-name>
```

Example:

```
1 update analytics profile ns_analytics_default_http_profile -
  dataFormatFile my_splunk_format.txt
```

You can also specify the value of the data format file using the GUI. Navigate to **System > AppFlow > Analytics Profiles** and click **Add**. On the **Create Analytics Profile** page, if you select one of the following options for **Type**, then the **Data Format File** field appears where you can specify the file name:

- GLOBAL
- WEB INSIGHT
- TCP INSIGHT
- SECURITY INSIGHT
- VIDEO INSIGHT
- HDX INSIGHT
- GATEWAY INSIGHT
- LSN INSIGHT
- BOT INSIGHT
- TIME SERIES

Sample outputs

This section contains sample outputs for different transaction logs.

HTTP transaction log sample output

The following is a sample output for the HTTP transaction log.

```
1 {
2
3     appName: VS1
4     clientMss: 1460
5     clntFastRetxCount: 0
6     clntTcpJitter: 0
7     cintTcpPacketsRetransmitted: 0
8     clntTcpRtoCount: 0
9     clntTcpZeroWindowCount: 0
10    cltDstIpv4Address: 174496411
11    cltIpv4Address: 174496407
12    connEndTimeStamp: 0
13    connStartTimeStamp: 7329468222993076980
14    exportingProcessId: 0
15    httpReqHost: 10.102.154.155
16    httpReqMethod: GET
17    httpReqUrl: /big.html
18    httpRspLen: 114380
19    httpRspStatus: 200
20    mainPageCoreId: 0
21    mainPageId: 0
22    nsPartitionId: 0
23    observationPointId: 174496409
24    originRspLen: 0
25    srvrIcpPacketsRetransmitted: 0
26    srvrTcpZeroWindowCount: 0
27    svrDstIpv4Address: 174496415
28    svrIpv4Address: 174496408
29    tepSrvrConnRstCode: 0
30    transClntRTT: 0
31    transClntDstPort: 20480
32    transClntFlowEndUsecRx: 7329468222993084980
33    transClntFlowEndUsecTx: 7329468222993084980
34    transClntFlowStartUsecRx: 7329468222993076980
35    transClntFlowStartUsecTx: 7329468222993077984
36    transClntSrcPort: 60315
37    transClntTotRx0ctCnt: 1766
38    transClntTotTx0ctCnt: 117580
39    transSrvDstPort: 36895
40    transSrvSrcPort: 15213
41    transSrvrRTT: 0
42    transSvrFlowEndUsecRx: 7329468222993084980
43    transSvrFlowEndUsecTx: 7329468222993084980
44    transSvrFlowStartUsecRx: 7329468222993077984
45    transSvrFlowStartUsecTx: 0
46    transSvrTotRx0ctCnt: 117580
47    transSvrTotTx0ctCnt: 1766
48    transactionId: 4890
49 }
```

TCP transaction log sample output

The following is a sample output for TCP transaction log.

```
1 {
2
3   appName: vs1
4   clientConnEndTimestamp: 7333165210582386064
5   clientConnStartTimestamp: 7333165210582386054
6   clientMss: 1460
7   clntFastRetxCount: 0
8   clntTcpJitter: 0
9   clntTcpPacketsRetransmitted: 0
10  clntTcpRtoCount: 0
11  clntTcpZeroWindowCount: 0
12  cltDstIpv4Address: 174496411
13  cltDstPort: 20480
14  cltIpv4Address: 174496407
15  cltSrcPort: 42939
16  connectionChainHopCount: 0
17  exportingProcessId: 0
18  nsPartitionId: 0
19  observationPointId: 174496409
20  serverConnEndTimestamp: 7333165201992708470
21  serverConnStartTimestamp: 7333165201992708459
22  srvDstPort: 36895
23  srvSrcPort: 51973
24  srvrTcpPacketsRetransmitted: 0
25  srvrTcpZeroWindowCount: 0
26  svrDstIpv4Address: 174496415
27  svrIpv4Address: 174496408
28  tcpClntConnRstCode: 0
29  tcpSrvrConnRstCode: 0
30  transClntRTT: 0
31  transClntTotRxOctCnt: 208
32  transClntTotTxOctCnt: 331
33  transSrvrRTT: 0
34  transSvrTotRxOctCnt: 331
35  transSvrTotTxOctCnt: 208
36  transactionId: 330
37  vlanNumber: 1
38 }
```

SSL transaction log sample output

The following is a sample output for SSL transaction log.

```
1 {
2
3   appName: sslvs
4   clientConnEndTimestamp: 0
```

```
5 clientConnStartTimestamp: 7333182669624439854
6 clientMss: 1460
7 clntFastRetxCount: 0
8 clntTcpJitter: 0
9 clntTcpPacketsRetransmitted: 0
10 clntTcpRtoCount: 0
11 clntTcpZeroWindowCount: 0
12 cltDstIpv4Address: 174496411
13 cltDstPort: 47873
14 cltIpv4Address: 174496407
15 cltSrcPort: 17499
16 connectionChainHopCount: 0
17 exportingProcessId: 0
18 httpContentType: text/html
19 httpReqHost: 10.102.154.155
20 httpReqMethod: GET
21 httpReqUrl: /index.html
22 httpReqUserAgent: curl/7.69.1
23 httpRspLen: 291
24 httpRspStatus: 200
25 nsPartitionId: 0
26 observationPointId: 174496409
27 originRspLen: 0
28 serverConnEndTimestamp: 0
29 serverConnStartTimestamp: 7333182665330184556
30 srvDstPort: 36895
31 srvSrcPort: 34802
32 srvtcpPacketsRetransmitted: 0
33 srvtcpZeroWindowCount: 0
34 sslCipherValueBE: 0
35 sslCipherValueFE: 50331701
36 sslClientCertSizeBE: 0
37 sslClientCertSizeFE: 0
38 sslClntCertSigHashBE: 0
39 sslClntCertSigHashFE: 0
40 sslFLagsBE: 0
41 sslFLagsFE: 1096
42 sslServerCertSizeBE: 0
43 sslServerCertSizeFE: 4096
44 sslSessionIDBE: 0
45 sslSessionIDFE: 2433458443
46 sslSigHashAlgBE: 0
47 sslSigHashAlgFE: 0
48 sslSrvrCertSigHashBE: 0
49 sslSrvrCertSigHashFE: 668
50 svrDstIpv4Address: 174496415
51 svrIpv4Address: 174496408
52 tcpClntConnRstCode: 0
53 tcpSrvrConnRstCode: 0
54 transClntRTT: 0
55 transClntFlowEndUseCRx: 7333182669624447854
56 transClntFlowEndUseCTx: 7333182669624446854
57 transClntFlowStartUseCRx: 7333182669624439854
```

```
58     transClfFlowStartUsecTx: 7333182669624439854
59     transClfTotRxOctCnt: 1501
60     transClfTotTxOctCnt: 2223
61     transSvrRTT: 0
62     transSvrFlowEndUsecRx: 7333182669624446854
63     transSvrFlowEndUsecTx: 7333182669624446854
64     transSvrFlowStartUsecRx: 7333182669624446854
65     transSvrFlowStartUsecTx: 0
66     transSvrTotRxOctCnt: 331
67     transSvrTotTxOctCnt: 168
68     transactionId: 2640
69     vlanNumber: 1
70 }
```

Web Insight transaction log sample output

The following is a sample output for Web Insight transaction log.

```
1 {
2
3     appName: vs1
4     clientConnEndTimestamp: 0
5     clientConnStartTimestamp: 7333336201820249485
6     clientMss: 1460
7     clntFastRetxCount: 0
8     clntTcpJitter: 0
9     clntTcpPacketsRetransmitted: 0
10    clntTcpRtoCount: 0
11    clntTcpZeroWindowCount: 0
12    cltDstIpv4Address: 174496411
13    cltDstPort: 20480
14    cltIpv4Address: 174758625
15    cltSrcPort: 46824
16    connectionChainHopCount: 0
17    exportingProcessId: 0
18    httpContentType: text/html
19    httpReqHost: 10.102.154.155
20    httpReqMethod: GET
21    httpReqUrl: /
22    httpRspLen: 291
23    httpRspStatus: 200
24    nsPartitionId: 0
25    observationPointId: 174496409
26    originRspLen: 0
27    serverConnEndTimestamp: 0
28    serverConnStartTimestamp: 7333336201820250487
29    srvDstPort: 36895
30    srvSrcPort: 6465
31    svrTcpPacketsRetransmitted: 0
32    svrTcpZeroWindowCount: 0
33    svrDstIpv4Address: 174496415
34    svrIpv4Address: 174496408
```



```
35     tcpClntConnRstCode: 0
36     tcpSrvrConnRstCode: 0
37     transClntRTT: 0
38     transClntFlowEndUseRx: 7333336201820251488
39     transClntFlowEndUseTx: 7333336201820251488
40     transClntFlowStartUseRx: 7333336201820249485
41     transClntFlowStartUseTx: 7333336201820250487
42     transClntTotRxOctCnt: 190
43     transClntTotTxOctCnt: 371
44     transSrvrRTT: 0
45     transSvrFlowEndUseRx: 7333336201820251488
46     transSvrFlowEndUseTx: 7333336201820250487
47     transSvrFlowStartUseRx: 7333336201820250487
48     transSvrFlowStartUseTx: 7333336201820250487
49     transSvrTotRxOctCnt: 371
50     transSvrTotTxOctCnt: 202
51     transactionId: 11218
52     vlanNumber: 1
53 }
```

Sample dashboards for transaction logs

The following dashboards available on Splunk provide the data related to transaction logs:

- NetScaler HTTP Insight Dashboard
- NetScaler SSL Insight Dashboard
- NetScaler TCP Insight Dashboard

For more information, see [Sample dashboards on Splunk](#).

Export management logs directly from NetScaler to Splunk

October 6, 2024

You can now export management logs (non-packet engine logs) on a category basis such as `shell`, `access`, and `nsmgmt` logs from NetScaler to industry standard log aggregator platforms such as Splunk. Using the visualization tools at Splunk, you can get meaningful insights about the exported data.

There are multiple ways to export management logs from NetScaler to Splunk. You can either configure Splunk as an HTTP server or a syslog server. In the HTTP server configuration, you can use the HTTP event collector to send management logs over HTTP (or HTTPS) directly to the Splunk platform from your NetScaler. In the syslog server configuration, management logs are sent as syslog payloads from NetScaler to Splunk.

Export management logs to Splunk configured as an HTTP server

To configure the export of management logs you must perform the following steps:

1. Configure an HTTP event collector on Splunk.
2. Create a collector service and a time series analytics profile on NetScaler.

Note:

- Management logs are not supported for non-time series profiles.
- Management logs are not exported out of secondary nodes by default. Use time series over NSIP (`set appflow param -timeseriesoversnip enabled`) when the destination is reachable using NSIP and secondary export is required.

Configure an HTTP event collector on Splunk

You can forward management logs to Splunk by configuring an HTTP event collector. Configuring the HTTP event collector involves creating an authentication token and associating an event index with the token where events are sent, and setting the HTTP port number.

For information on how to configure the HTTP event collector, see the [Splunk documentation](#).

Once you have configured the HTTP event collector, copy the authentication token and save it for reference. You need to specify this token while configuring the analytics profile on NetScaler.

Configure a time series analytics profile on NetScaler using the CLI

Do the following to export NetScaler management logs to Splunk.

1. Create a collector service for Splunk.

```
1 add service <collector> <splunk-server-ip-address> <protocol> <port>
```

Example:

```
1 add service splunk_service 10.102.34.155 HTTP 8088
```

In this configuration:

- `ip-address`: Splunk server IP address.
 - `collector-name`: Name of the collector.
 - `protocol`: Specify the protocol as HTTP or HTTPS
 - `port`: Port number.
2. Create a time series analytics profile.

```

1 add analytics profile `profile-name` -type timeseries -
  managementlog <management-log-type> -collectors `collector-name`
  -analyticsAuthToken `auth-token` -analyticsEndpointContentType
  `Application/json` -analyticsEndpointMetadata `meta-data-for-
  endpoint` -analyticsEndpointUrl `endpoint-url`

```

Example:

```

1 add analytics profile managementlogs_profile -type timeseries -
  managementlog ACCESS -collectors splunk -analyticsAuthToken "
  Splunk 1234-5678-12345" -analyticsEndpointContentType "
  application/json" -analyticsEndpointMetadata '{
2 "source":"netscaler","sourcetype":"mgmtlog","index":"ns-mgmtlog-
  index" }
3 ' -analyticsEndpointUrl "/services/collector/event"

```

In this configuration:

- **managementlog**: Types of management logs that you must export. The following options are available:
 - **ALL**: Includes all categories of management and host logs.
 - **SHELL**: Includes `bash.log` and `sh.log`.
 - **Access**: Includes logs such as `auth.log`, `nsvpn.log`, `vpndebug.log`, `httpaccess.log`, `httperror.log`, `httpaccess-vpn.log`, and `httperror-vpn.log`.
 - **NSMGMT**: Includes `ns.log` and `notice.log`.
 - **NONE**: None of the logs are exported.
- **analyticsAuthToken**: Specify the authentication token to be included in the authorization header with the prefix “Splunk” while sending logs to Splunk. This token is the authentication token created on the Splunk server while configuring the HTTP event collector.
- **analyticsEndpointContentType**: Format of the logs.
- **analyticsEndpointMetadata**: Meta data that is endpoint specific. Management logs use HEC format as documented at [Format events for HTTP Event Collector](#). The payload format is as follows:

```

1 {
2
3     "host": "<hostname set on the box by default>",
4     "event": {
5
6         "LogLevel": <int>,
7         "Managementlog string": <string>,
8         "Message Name": <string>,
9         "Module Name": <string>

```

```

10         }
11
12     }

```

HEC format defines several meta fields that can be included in the payload other than the actual event including host, index, source, sourcetype, and so on.

By default, NetScaler uses the FreeBSD host name as “host” and does not set any fields such as index, source, sourcetype in the payload. This setting can be changed by explicitly providing the required fields in `-analyticsEndpointMetadata`.

For example, using `'{ "host": "my-netscaler", "index": "my-splunk-index", "sourcetype": "managementlog", "source": "netscaler" } '` as `-analyticsEndpointMetadata` crafts the below payload for every log:

```

1  {
2
3      "host": "my-netscaler",
4      "index": "my-splunk-index",
5      "sourcetype": "managementlog",
6      "source": "netscaler",
7      "event": {
8
9          "LogLevel": <int>,
10         "Managementlog string": <string>,
11         "Message Name": <string>,
12         "Module Name": <string>
13     }
14
15 }

```

Notice how the `host` is overwritten. (This behavior might not be desirable when logs are sent from both primary and secondary nodes because both carry the same host name. In this scenario, it is preferable not to configure the host in `analyticsEndpointMetadata` so that the FreeBSD host names are used by the respective nodes.)

Also, notice that the fields `index`, `sourcetype`, `source` are added to the payload.

Note:

Ensure that `-analyticsEndpointMetadata` is a proper JSON.

- `analyticsEndpointUrl`: Location in the endpoint to export logs.

Note:

You can modify the time series analytics profile parameters using the `set analytics profile` command.

3. Verify the analytics profile configuration using the `show analytics profile` command.

```
1 # show analytics profile splunkexport
2 1) Name: audit_profile
3 Collector: splunk
4 Profile-type: timeseries
5 Output Mode: avro
6 Metrics: DISABLED
7 Schema File: schema.json
8 Metrics Export Frequency: 30
9 Events: DISABLED
10 Auditlog: DISABLED
11 Serve mode: Push
12 Authentication Token: <auth-token>
13 Endpoint URL: /services/collector/event
14 Endpoint Content-type: Application/json
15 Endpoint Metadata: Event:
16 Reference Count: 0
17 Managementlog: ACCESS
```

Once the configuration is successful, the management logs are sent as HTTP payloads to Splunk and you can view it on the Splunk application user interface.

Configure a time series analytics profile on NetScaler using the GUI

Perform the following steps:

1. Create a collector service.
 - a) Navigate to **Traffic Management > Load Balancing > Services** and click **Add**.
 - b) On the **Load Balancing Service** page, enter the details in the required fields, click **OK** and then click **Done**.
2. Create a time series analytics profile.
 - a) Navigate to **System > Profiles > Analytics Profiles** and click **Add**.
 - b) On the **Create Analytics Profile** page, provide the following details:
 - i. Enter a name for the profile.
 - ii. From the **Collectors** list, select the service that you created.
 - iii. Select a **TIME SERIES** from the **Type** list.
 - iv. Enter the **Analytics Auth Token** that you received from Splunk with the prefix “Splunk”.
 - v. Enter the details for **Analytics Endpoint URL**, **Analytics Endpoint Content Type**, and **Analytics Endpoint Metadata**.
 - vi. Select the **Management Logs** that you want to export and also the **Output Mode** in which you want to export.

- vii. Click **Create**.

Export management logs to Splunk configured as a syslog server

To configure the export of management logs, you must perform the following steps:

Step 1: Configure Splunk as an external syslog server

You can forward management logs to Splunk by configuring an external syslog server on Splunk.

For information on how to configure the syslog port, see the [Splunk documentation](#). Once you have configured the syslog port, save it for reference. You need to specify this port while configuring the `audit syslogaction` on NetScaler.

Step 2: Create an audit syslog action

For information on the steps to create an audit syslog action on NetScaler with the management log option, see [Configure syslog audit action](#).

Step 3: Create a syslog audit policy

For information on the steps to create a syslog audit policy with the syslog action, see [Configure syslog audit policy](#).

Step 4: Bind audit log policy

For information on how to bind audit log policy, see [Bind audit log policy](#).

Additional information

This section provides more information on the three types of logs specified in this topic:

- `shell` logs: Includes `bash.log` and `sh.log`.
- `access` logs: Includes `httpaccess.log`, `httperror.log`, `httpaccess-vpn.log`, `httperror-vpn.log`, `vpndebug.log`, `nsvpn.log`, and `auth.log`.
- `nsmgmt` logs: Includes `notice.log`, and `ns.log` (only includes non-packet engine logs).

Troubleshoot issues related to management logs export

For troubleshooting tips related to management logs export, see [Troubleshoot issues related to management logs](#).

Export audit logs and events directly from NetScaler to Splunk

November 7, 2024

Audit logging enables you to log the NetScaler states and status information collected by various modules in NetScaler. By reviewing the logs, you can troubleshoot problems or errors and fix them.

You can now export audit logs and events from NetScaler to industry standard log aggregator platforms such as Splunk and get meaningful insights.

There are multiple ways to export audit logs from NetScaler to Splunk. You can either configure Splunk as a syslog server or as an HTTP server. This topic provides information on configuring Splunk as an HTTP server using the Splunk HTTP event collector. Using the HTTP event collector you can send audit logs over HTTP (or HTTPS) directly to the Splunk platform from your NetScaler.

Configure exporting audit logs from NetScaler to Splunk

To configure the export of audit logs you must perform the following steps:

1. Configure the HTTP event collector on Splunk.
2. Create a collector service and time series analytics profile on NetScaler.

Configure HTTP event collector on Splunk

You can forward audit logs to Splunk by configuring an HTTP event collector. Configuring the HTTP event collector involves creating an authentication token and associating an event index with the token where events are sent, and setting the HTTP port number.

See the [Splunk documentation](#) for information on how to configure the HTTP event collector.

Once you have configured the HTTP event collector, copy the authentication token and save it for reference. You need to specify this token while configuring the analytics profile on NetScaler.

Configure time series analytics profile on NetScaler

Do the following to export NetScaler audit logs to Splunk.

1. Create a collector service for Splunk.

```
1 add service <service-name> <splunk-server-ip-address> <protocol> <port>
```

Example:

```
1 add service splunk_service 10.102.34.155 HTTP 8088
```

In this configuration:

- **ip-address**: Specify the Splunk server IP address.
- **service-name**: Specify a name for the collector service.
- **protocol**: Specify the protocol as HTTP or HTTPS
- **port**: Specify the port number.

2. Create a time series analytics profile.

```
1 add analytics profile <profile-name> -type timeseries -  
  auditlogs enabled -collectors <collector-name> -  
  analyticsAuthToken <"auth-token">  
2 -analyticsEndpointContentType <"application/json"> -  
  analyticsEndpointMetadata <"meta-data-for-endpoint:"> -  
  analyticsEndpointUrl <"endpoint-url">
```

Example:

```
1 add analytics profile audit_profile -type timeseries -  
  auditlogs enabled -collectors splunk_service -  
  analyticsAuthToken "Splunk 1234-5678-12345" -  
  analyticsEndpointContentType "application/json" -  
  analyticsEndpointMetadata "{  
2  \"event\":[" -analyticsEndpointUrl "/services/collector/event"
```

In this configuration:

- **auditlogs**: Specify the value as `enabled` to enable audit logging.
- **collectors**: Specify the collector service created for Splunk. For example, “splunk_service” is the collector service created in step 1.
- **analyticsAuthToken**: Specify the authentication token to be included in the authorization header while sending logs to Splunk. This token is the authentication token created on the Splunk server while configuring the HTTP event collector. The authentication token must be in the format “Splunk <token-copied-from-splunk>”. For example, “Splunk 3e52aa4b-1db7-45b2-9af9-173eedc8e1bc”.
- **analyticsEndpointContentType**: Specify the format of the logs.
- **analyticsEndpointMetadata**: Specify the meta data that Splunk expects at the start of the data, which is `{ \"event\":[`.

- `analyticsEndpointUrl`: Specify the URL to which you have configured Splunk HEC to get requests to. For example, “/services/collector/event”.

Note:

You can modify the time series analytics profile parameters using the `set analytics profile` command.

3. Verify the analytics profile configuration using the `show analytics profile` command.

```

1 # show analytics profile audit_profile
2
3 1)   Name: audit_profile
4      Collector: splunk
5      Profile-type: timeseries
6      Output Mode: avro
7      Metrics: DISABLED
8      Schema File: schema.json
9      Metrics Export Frequency: 30
10     Events: DISABLED
11     Auditlog: ENABLED
12     Serve mode: Push
13     Authentication Token: <auth-token>
14     Endpoint URL: /services/collector/event
15     Endpoint Content-type: application/json
16     Endpoint Metadata: {
17       "event": [
18         Reference Count: 0

```

Once the configuration is successful, the audit logs are sent as HTTP payloads to Splunk and you can view it on the Splunk application user interface.

Configure exporting events from NetScaler to Splunk

To configure the export of events from NetScaler to Splunk, you must perform the following steps:

1. Configure the HTTP event collector on Splunk following the steps in Configure HTTP event collector on Splunk.
2. Create a collector service on NetScaler by using the following command.

```

1 add service <collector> <splunk-server-ip-address> <protocol> <
  port>

```

Example:

```

1 add service splunk_service 10.102.34.155 HTTP 8088

```

In this configuration:

- `ip-address`: Specify the Splunk server IP address.
 - `collector-name`: Specify the collector.
 - `protocol`: Specify the protocol as HTTP or HTTPS.
 - `port`: Specify the port number.
3. Create a time series analytics profile on NetScaler using the `add analytics profile` command. You must specify the `-events enabled` option while creating the analytics profile to enable the export events.

Example:

```
1 add analytics profile event_profile -type timeseries -events
  enabled -collectors splunk -analyticsAuthToken "Splunk
  1234-5678-12345" -analyticsEndpointContentType "application/
  json" -analyticsEndpointMetadata "{
2  \"event\":[\" -analyticsEndpointUrl \"/services/collector/event"
```

4. Verify the analytics profile configuration using the `show analytics profile` command.

```
1 # show analytics profile event_profile
2
3 1) Name: event_profile
4     Collector: splunk
5     Profile-type: timeseries
6     Output Mode: avro
7     Metrics: DISABLED
8     Schema File: schema.json
9     Metrics Export Frequency: 30
10    Events: ENABLED
11    Auditlog: DISABLED
12    Serve mode: Push
13    Authentication Token: <auth-token>
14    Endpoint URL: /services/collector/event
15    Endpoint Content-type: application/json
16    Endpoint Metadata: {
17  "event":[
18    Reference Count: 0
```

Integration with Elasticsearch

April 2, 2024

NetScaler can be integrated with popular observability tools and Elasticsearch is one of them. NetScaler supports direct integration of NetScaler with Elasticsearch. With direct integration, there is no need to deploy any additional agent or node to export the data and build customized dashboards of your needs.

By integrating with Elasticsearch, you can perform the following actions:

- [Export transaction logs directly from NetScaler to Elasticsearch](#)

Export transaction logs directly from NetScaler to Elasticsearch

January 2, 2025

You can now export transaction logs from NetScaler to industry-standard log aggregator platforms such as Elasticsearch. The transaction log is the record of application traffic flow events on the NetScaler such as HTTP requests and responses, connection start and end. For more information on transaction logs, see [AppFlow](#).

You can export transaction logs to ElasticSearch in JSON format for various insights such as Web Insight, security, gateway, HDX Insights over HTTP (or HTTPS) directly from NetScaler. Using the visualization tools at Kibana, you can get meaningful insights about the exported data.

Note:

The IP addresses that are exported as part of the transaction logs appear in the decimal format instead of the standard format. For example, if your NetScaler IP address is 10.102.154.153, the same in the transaction logs on Elasticsearch is displayed as 174496409. You can use the inbuilt expressions available on Elasticsearch to convert the IP address from decimal format to standard format.

Export transaction logs from NetScaler to Elasticsearch configured as an HTTP server

To configure the export of transaction logs you must perform the following steps:

1. Configure Elasticsearch to receive transaction logs.
2. Create a collector service and an analytics profile on NetScaler.

Configure Elasticsearch to receive transaction logs

You can configure Elasticsearch to receive the transaction logs forwarded by NetScaler by following the configuration steps available in the [Elasticsearch documentation](#).

Once you have configured, copy the authentication token and save it for reference. You need to specify this token while configuring the analytics profile on NetScaler.

Configure analytics profile on NetScaler

Do the following to export NetScaler transaction logs to Elasticsearch.

1. Create a collector service for Elasticsearch.

```
1 add service <collector> <elasticsearch-server-ip-address> <
  protocol> <port>
```

Example:

```
1 add service elasticsearch_service 10.102.34.155 HTTP 8088
```

In this configuration:

- ip-address: Elasticsearch server IP address.
- collector-name: Name of the collector.
- protocol: Specify the protocol as HTTP or SSL.
- port: Port number.

2. Create an analytics profile.

```
1 add analytics profile <profile-name> -type <insight> -collectors <
  collector-name> -analyticsAuthToken <auth-scheme> <
  authorization-parameters> -analyticsEndpointContentType "
  application/json" -analyticsEndpointUrl <endpoint-url> -
  dataFormatFile <data-format-file-name> -httpCustomHeaders <
  space-separated-header-names>
```

Example:

```
1 add analytics profile transaction-log-profile -type webinsight -
  collectors elasticsearch_service -analyticsAuthToken "Basic
  ZWxhc3RpYzplbGFzdGljMTIz" -analyticsEndpointContentType "
  application/json" -analyticsEndpointUrl "/_bulk" -
  dataFormatFile "elastic_format.txt" -httpCustomHeaders " X-
  Client-IP " " X-forwarded-for " " custom-field "
```

Note:

The `-allHttpHeaders` option is supported for Elasticsearch transaction log export in NetScaler 14.1-25.x and later.

```
add analytics profile <profile-name> -type webinsight -allHttpHeaders
```

```
set analytics profile <profile-name> -type webinsight -allHttpHeaders
```

In this configuration:

- `insight`: Types of insights that you can export. The following options are available:

- `botinsight`
- `CIinsight`
- `Gatewayinsight`
- `hdxinsight`
- `lsninsight`
- `securityinsight`
- `tcpinsight`
- `udpinsight`
- `videoinsight`
- `webinsight`

- `-analyticsAuthToken <auth-scheme> <authorization-parameters>`:
The value of the HTTP authorization header.

If your Elasticsearch requires basic authentication, then you can configure `-analyticsAuthToken` to `Basic <base64 of username:password>`. For example, if the user name is `elastic` and the password is `elastic123`, then `base64(elastic:elastic123)` is “`ZWxhc3RpYzplbGFzdGljMTIz`”. `<base64 of username:password>` for this example can be found by running `printf elastic:elastic123 | base64` on unix based systems that have `base64` available. You can also find this value by using any other tool that you are familiar with. Therefore, for this example, the value of `-analyticsAuthToken <auth-scheme> <authorization-parameters>` is “`Basic ZWxhc3RpYzplbGFzdGljMTIz`”.

If you want to configure an API Key instead of basic authentication, you can follow similar semantics. In this case you must supply `ApiKey <encoded api key>` as the auth token, where `<encoded api key>` is `base64(<unique id>:<api key>)`. For more information, see <https://www.elastic.co/guide/en/elasticsearch/reference/current/security-api-create-api-key.html>.

- `dataformatfile <filename>`: The file that contains the details of the data in the transaction log that must be exported and its format. The `<filename>` is the name of the data format file, which is present in the `/var/analytics_conf` directory. Each endpoint expects the JSON payload to be encoded in a specific format. For Elasticsearch, the format is defined in the `elastic_format.txt` file which is present under `/var/analytics_conf` directory. You can refer to the `elastic_format.txt` file and create your own customized data format file specific to your use case. For more information on customized data format file, see [Field-based filtering of data records](#). If the format is not specified, then by default `splunk_format.txt` is selected.

Note:

For <filename>, do not configure the absolute path of the file name. Enter only the file name.

- `-analyticsEndpointContentType`: Specifies the Content-Type header. If no value is configured, then the Content-Type header is sent as `application/json`. If a value is configured, then the configured value is sent.
- `-analyticsEndpointUrl`: The path on Elasticsearch to which transactions must be posted. For example, `/_bulk`. NetScaler communicates with Elasticsearch using the Bulk API. For more information on Bulk API, see <https://www.elastic.co/guide/en/elasticsearch/reference/current/docs-bulk.html>.

NOTE:

You can modify the analytics profile parameters using the `set analytics profile` command.

- `-httpCustomHeaders`: The `-httpCustomHeaders` parameter allows you to include customer headers with transaction records while exporting transaction logs from NetScaler to Elasticsearch.

NOTE:

- A maximum of 8 custom headers can be configured.
- Headers containing sensitive information can be configured at the discretion of the administrator.

3. Verify the analytics profile configuration using the `show analytics profile` command.

```
1 > sh analytics profile
```

4. Bind the analytics profile to the virtual server.

```
1 bind lb vserver <vserver-name> -analyticsProfile transaction-log-profile
```

Example

```
1 bind lb vserver sample-log -analyticsProfile transaction-log-profile
```

After the configuration is completed, based on traffic, transactions will be logged and exported to Elasticsearch.

Field-based filtering of data records

By default, NetScaler exports hundreds of fields in the transaction log even when the endpoints do not require all of the exported data. Also, each endpoint expects the JSON payload to be encoded in a specific format such as the start and end of a data record, the delimiter between data records, and buffer start and end.

Elasticsearch expects the JSON payload from coming from NetScaler to be encoded in the following format:

- Buffer start and end: No value required for `BUFFER-START` and `BUFFER-END`. At the end of the buffer, you must add a blank line.
- Data record start and end: The data record must start with `{ "index": { "_index": "transactions" } }` and end with `}`. All the fields that get exported must be captured between `DATA-START` and `DATA-END`.

The data records must start with the following:

```

1  RECORD-START
2  {
3  "index": {
4  "_index": "transactions" }
5  }
6
7  {
8
9  DATA-START

```

The data records must end with the following:

```

1  DATA-START
2  }
3
4  RECORD-END

```

- Delimiter between data records: One blank line between the data records.

By default, `elastic_format.txt` is available at `var/analytcs_conf` folder that contains the JSON payload format that Elasticsearch expects and also contains a few default fields for which the data gets exported.

The following is a sample data format file for Elasticsearch:

```

1  BUFFER-START
2  RECORD-START
3  {
4  "index": {
5  "_index": "transactions" }
6  }

```

```
7
8   {
9
10  DATA-START
11  153 observationPointId
12  547 nsPartitionId
13  154 exportingProcessId
14  159 transactionId
15  801 httpReqUrl
16  685 httpReqMethod
17  683 httpReqHost
18  689 httpReqUserAgent
19  680 httpContentType
20  691 httpReqXForwardedFor
21  682 httpDomainName
22  803 appName
23  851 appNameVserverLs
24  484 httpRspStatus
25  53 httpRspLen
26  684 httpResLocation
27  687 httpResSetCookie
28  DATA-END
29  }
30
31  RECORD-END
32  RECORD-DELIMITER
33
34
35  RECORD-DELIMITER-END
36
37
38  BUFFER-END
```

The `JSON_fields.txt` file under `var/analytics_conf` is a reference master file that contains the complete list of fields along with their identification numbers. The fields in the master file are categorized based on the insights. For example, if you want to know the fields associated with HDX insight, you can look at the HDX insights category of the `JSON_fields.txt` file to know the fields associated with the HDX insights category.

You can create a customized data format file based on your requirement by referring to `elastic_format.txt`. For example, you can create `my_elastic_format.txt`. If your requirement is to export HDX insights, you can look at the HDX insights category in `JSON_fields.txt` file and add the required fields in the `my_elastic_format.txt` file. Similarly, you can delete fields that you do not want to export.

Note:

Do not update the default `elastic_format.txt` file; instead, use it as a reference. If you update the default `elastic_format.txt`, then the contents of the file is overwritten upon

upgrade.

After customizing the `my_elastic_format.txt` file, run the following command to update the analytics profile:

```
1 update analytics profile <profile-name> -dataFormatFile <filename>
```

Example:

```
1 update analytics profile ns_analytics_default_http_profile -
  dataFormatFile elastic_format.txt
```

You can also specify the value of the data format file using the GUI. Navigate to **System > AppFlow > Analytics Profiles** and click **Add**. On the **Create Analytics Profile** page, if you select one of the following options for Type, then the **Data Format File** field appears where you can specify the file name:

- GLOBAL
- WEB INSIGHT
- TCP INSIGHT
- SECURITY INSIGHT
- VIDEO INSIGHT
- HDX INSIGHT
- GATEWAY INSIGHT
- LSN INSIGHT
- BOT INSIGHT
- TIME SERIES

Sample outputs

This section contains sample outputs for different transaction logs.

HTTP transaction log sample output

The following is a sample output for the HTTP transaction log.

```
1 {
2
3   appName: VS1
4   clientMss: 1460
5   clntFastRetxCount: 0
6   clntTcpJitter: 0
7   cintTcpPacketsRetransmitted: 0
8   clntTcpRtoCount: 0
9   clntTcpZeroWindowCount: 0
```

```
10   cltDstIpv4Address: 174496411
11   cltIpv4Address: 174496407
12   connEndTimestamp: 0
13   connStartTimestamp: 7329468222993076980
14   exportingProcessId: 0
15   httpRegHost: 10.102.154.155
16   httpReqMethod: GET
17   httpReqUrl: /big.html
18   httpRspLen: 114380
19   httpRspStatus: 200
20   mainPageCoreId: 0
21   mainPageId: 0
22   nsPartitionId: 0
23   observationPointId: 174496409
24   originRspLen: 0
25   srvrIcpPacketsRetransmitted: 0
26   srvrTcpZeroWindowCount: 0
27   svrDstIpv4Address: 174496415
28   svrIpv4Address: 174496408
29   tepSrvrConnRstCode: 0
30   transClntRTT: 0
31   transClntDstPort: 20480
32   transClntFlowEndUseRx: 7329468222993084980
33   transClntFlowEndUseTx: 7329468222993084980
34   transClntFlowStartUseRx: 7329468222993076980
35   transClntFlowStartUseTx: 7329468222993077984
36   transClntSrcPort: 60315
37   transClntTotRx0ctCnt: 1766
38   transClntTotTx0ctCnt: 117580
39   transSrvDstPort: 36895
40   transSrvSrcPort: 15213
41   transSrvrRTT: 0
42   transSvrFlowEndUseRx: 7329468222993084980
43   transSvrFlowEndUseTx: 7329468222993084980
44   transSvrFlowStartUseRx: 7329468222993077984
45   transSvrFlowStartUseTx: 0
46   transSvrTotRx0ctCnt: 117580
47   transSvrTotTx0ctCnt: 1766
48   transactionId: 4890
49 }
```

TCP transaction log sample output

The following is a sample output for TCP transaction log.

```
1 {
2
3   appName: vs1
4   clientConnEndTimestamp: 7333165210582386064
5   clientConnStartTimestamp: 7333165210582386054
6   clientMss: 1460
7   clntFastRetxCount: 0
```

```
8     clntTcpJitter: 0
9     clntTcpPacketsRetransmitted: 0
10    clntTcpRtoCount: 0
11    clntTcpZeroWindowCount: 0
12    cltDstIpv4Address: 174496411
13    cltDstPort: 20480
14    cltIpv4Address: 174496407
15    cltSrcPort: 42939
16    connectionChainHopCount: 0
17    exportingProcessId: 0
18    nsPartitionId: 0
19    observationPointId: 174496409
20    serverConnEndTimestamp: 7333165201992708470
21    serverConnStartTimestamp: 7333165201992708459
22    srvDstPort: 36895
23    srvSrcPort: 51973
24    srvrTcpPacketsRetransmitted: 0
25    srvrTcpZeroWindowCount: 0
26    svrDstIpv4Address: 174496415
27    svrIpv4Address: 174496408
28    tcpClntConnRstCode: 0
29    tcpSrvrConnRstCode: 0
30    transClntRTT: 0
31    transClntTotRxOctCnt: 208
32    transClntTotTxOctCnt: 331
33    transSrvrRTT: 0
34    transSvrTotRxOctCnt: 331
35    transSvrTotTxOctCnt: 208
36    transactionId: 330
37    vlanNumber: 1
38 }
```

SSL transaction log sample output

The following is a sample output for SSL transaction log.

```
1 {
2
3     appName: sslvs
4     clientConnEndTimestamp: 0
5     clientConnStartTimestamp: 7333182669624439854
6     clientMss: 1460
7     clntFastRetxCount: 0
8     clntTcpJitter: 0
9     clntTcpPacketsRetransmitted: 0
10    clntTcpRtoCount: 0
11    clntTcpZeroWindowCount: 0
12    cltDstIpv4Address: 174496411
13    cltDstPort: 47873
14    cltIpv4Address: 174496407
15    cltSrcPort: 17499
16    connectionChainHopCount: 0
```

```
17     exportingProcessId: 0
18     httpContentType: text/html
19     httpReqHost: 10.102.154.155
20     httpReqMethod: GET
21     httpReqUrl: /index.html
22     httpReqUserAgent: curl/7.69.1
23     httpRspLen: 291
24     httpRspStatus: 200
25     nsPartitionId: 0
26     observationPointId: 174496409
27     originRspLen: 0
28     serverConnEndTimestamp: 0
29     serverConnStartTimestamp: 7333182665330184556
30     srvDstPort: 36895
31     srvSrcPort: 34802
32     srvrTcpPacketsRetransmitted: 0
33     srvrTcpZeroWindowCount: 0
34     sslCipherValueBE: 0
35     sslCipherValueFE: 50331701
36     sslClientCertSizeBE: 0
37     sslClientCertSizeFE: 0
38     sslClntCertSigHashBE: 0
39     sslClntCertSigHashFE: 0
40     sslFLagsBE: 0
41     sslFLagsFE: 1096
42     sslServerCertSizeBE: 0
43     sslServerCertSizeFE: 4096
44     sslSessionIDBE: 0
45     sslSessionIDFE: 2433458443
46     sslSigHashAlgBE: 0
47     sslSigHashAlgFE: 0
48     sslSrvrCertSigHashBE: 0
49     sslSrvrCertSigHashFE: 668
50     svrDstIpv4Address: 174496415
51     svrIpv4Address: 174496408
52     tcpClntConnRstCode: 0
53     tcpSrvrConnRstCode: 0
54     transClntRTT: 0
55     transClntFlowEndUseRx: 7333182669624447854
56     transClntFlowEndUseTx: 7333182669624446854
57     transClntFlowStartUseRx: 7333182669624439854
58     transClntFlowStartUseTx: 7333182669624439854
59     transClntTotRxOctCnt: 1501
60     transClntTotTxOctCnt: 2223
61     transSrvrRTT: 0
62     transSvrFlowEndUseRx: 7333182669624446854
63     transSvrFlowEndUseTx: 7333182669624446854
64     transSvrFlowStartUseRx: 7333182669624446854
65     transSvrFlowStartUseTx: 0
66     transSvrTotRxOctCnt: 331
67     transSvrTotTxOctCnt: 168
68     transactionId: 2640
69     vlanNumber: 1
```

```
70 }
```

Web Insight transaction log sample output

The following is a sample output for Web Insight transaction log.

```
1 {
2
3   appName: vs1
4   clientConnEndTimestamp: 0
5   clientConnStartTimestamp: 7333336201820249485
6   clientMss: 1460
7   clntFastRetxCount: 0
8   clntTcpJitter: 0
9   clntTcpPacketsRetransmitted: 0
10  clntTcpRtoCount: 0
11  clntTcpZeroWindowCount: 0
12  cltDstIpv4Address: 174496411
13  cltDstPort: 20480
14  cltIpv4Address: 174758625
15  cltSrcPort: 46824
16  connectionChainHopCount: 0
17  exportingProcessId: 0
18  httpContentType: text/html
19  httpReqHost: 10.102.154.155
20  httpReqMethod: GET
21  httpReqUrl: /
22  httpRspLen: 291
23  httpRspStatus: 200
24  nsPartitionId: 0
25  observationPointId: 174496409
26  originRspLen: 0
27  serverConnEndTimestamp: 0
28  serverConnStartTimestamp: 7333336201820250487
29  srvDstPort: 36895
30  srvSrcPort: 6465
31  svrTcpPacketsRetransmitted: 0
32  svrTcpZeroWindowCount: 0
33  svrDstIpv4Address: 174496415
34  svrIpv4Address: 174496408
35  tcpClntConnRstCode: 0
36  tcpSvrConnRstCode: 0
37  transClntRTT: 0
38  transClntFlowEndUseRx: 7333336201820251488
39  transClntFlowEndUseTx: 7333336201820251488
40  transClntFlowStartUseRx: 7333336201820249485
41  transClntFlowStartUseTx: 7333336201820250487
42  transClntTotRx0ctCnt: 190
43  transClntTotTx0ctCnt: 371
44  transSvrRTT: 0
45  transSvrFlowEndUseRx: 7333336201820251488
46  transSvrFlowEndUseTx: 7333336201820250487
```

```
47     transSvrFlowStartUsecRx: 7333336201820250487
48     transSvrFlowStartUsecTx: 7333336201820250487
49     transSvrTotRxOctCnt: 371
50     transSvrTotTxOctCnt: 202
51     transactionId: 11218
52     vlanNumber: 1
53 }
```

NetScaler advanced analytics

August 1, 2024

NetScaler advanced analytics examines the data gathered by NetScaler and extracts valuable insights about its performance. By leveraging the power of advanced analytics, the administrators gain insights into the network's performance and can take proactive measures to enhance overall network reliability, performance, and security.

Analytics typically involves examining historical data to gain insights into past events and behavior. Advanced analytics uses more sophisticated techniques to gain insights into past events and also forecast future trends and potential outcomes.

Advantages of NetScaler advanced analytics

NetScaler advanced analytics provide you the following benefits:

- Early identification of abnormal network behavior
- Improved security posture
- Optimized resource allocation
- Deeper understanding of application-level traffic patterns

NetScaler advanced analytics on Splunk

NetScaler advanced analytics collects and analyzes network traffic data using third-party observability tools, such as Splunk. NetScaler advanced analytics aims at developing a robust system capable of continuously monitoring network traffic, analyzing transactions at the application layer, and flagging instances where transaction bytes surpass predefined thresholds (upload and download transaction bytes).

NetScaler adopts anomaly detection techniques that include statistical methods to identify any abnormal behavior. These techniques utilize the past 21 days' data to establish a reliable baseline for what is considered normal behavior. NetScaler keeps a close eye on incoming traffic, in real-time. It

employs advanced algorithms to define thresholds for normal transactions. These thresholds are dynamic, which means they are adjusted continuously based on the historical data and domain knowledge. Whenever a transaction exceeds the predefined threshold, the system immediately flags it for further investigation.

When anomalies are detected, the NetScaler notifies administrators to investigate and take action. This notification ensures that any potentially fraudulent or suspicious activity is identified and dealt with promptly, allowing a safer and more secure environment for all users. You can notify using email or any of the notification options that Splunk supports. To know more about notification options, see [Configure alert actions](#).

Configure NetScaler advanced analytics on Splunk

To configure NetScaler advanced analytics app on Splunk, perform the following steps:

Prerequisites

- Ensure that NetScaler is exporting the metrics and transactions data to Splunk.
 - **Transaction data:** For information on how to configure exporting data from NetScaler to Splunk, see [Export transaction logs directly from NetScaler to Splunk](#). Along with this configuration, you must enable the following arguments to export UserAgent and URL variables in the analytics profile:

```
1 -httpURL ENABLED -httpUserAgent ENABLED
```

Sample command

```
1 set analytics profile <http analytics profile name> -
  collectors <splunk hec endpoint service name> -type
  webinsight -httpURL ENABLED -httpUserAgent ENABLED -
  httpContentType ENABLED -analyticsAuthToken "Splunk <
  HEC_TOKEN HERE>" -analyticsEndpointUrl "/services/
  collector/event" -analyticsEndpointContentType "
  application/json"
```

Enable export of Useragent and URL in existing analytics profile :


```
1 set analytics profile <http analytics profile name> --
  httpClientSideMeasurements ENABLED -httpURL ENABLED -
  httpUserAgent ENABLED
```

- **Metrics:** For information on how to export metrics directly from NetScaler to Splunk, see [Export metrics directly from NetScaler to Splunk](#).

- Ensure that the **Python for Scientific computing** app is installed on Splunk. To install this app, navigate to **Apps > Manage Apps**, click **Browse for more apps**, search for the **Python for Scientific computing** app and click **Install**.
- Download the `.spl` file from <https://www.citrix.com/downloads/citrix-adc/splunk-apps/list-of-apps.html>.
- Ensure that an index that can store 21 days of data exists on Splunk. You can use an existing index or create a new index of type **Events**. For information on how to create an index, see [Splunk documentation](#).

Configuration

1. Log in to Splunk.
2. Navigate to **Apps > Manage Apps** and click **Install from file**.
3. Click **Choose file** and upload the `.spl` file.

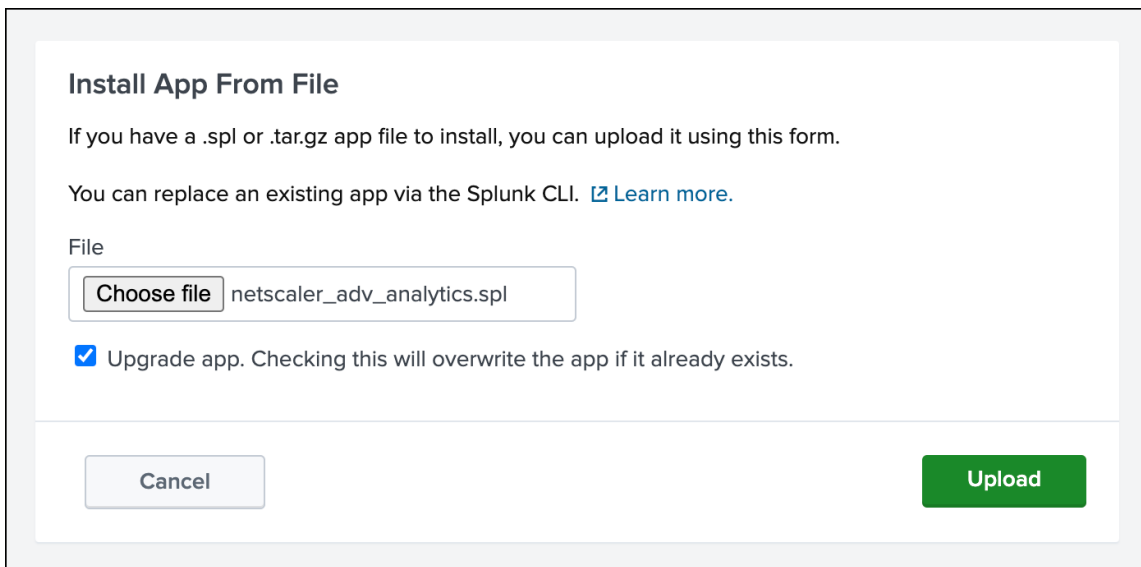

Install App From File

If you have a `.spl` or `.tar.gz` app file to install, you can upload it using this form.


You can replace an existing app via the Splunk CLI. [Learn more](#).

File

netscaler_adv_analytics.spl

Upgrade app. Checking this will overwrite the app if it already exists.

4. Click **Upload** and then click **Continue to App setup page**.
5. On the **NetScaler Advanced Analytics App for Splunk configuration** page, enter data in the following fields:
 - a) **Enter the name of the index into which NetScaler events are ingested:** The index where the data from NetScaler is stored.
 - b) **Enter the name of the index to save results generated from NetScaler Advanced Analytics app:** The index where the data generated from the Splunk app is saved. The index must store a minimum of 21 days of data.

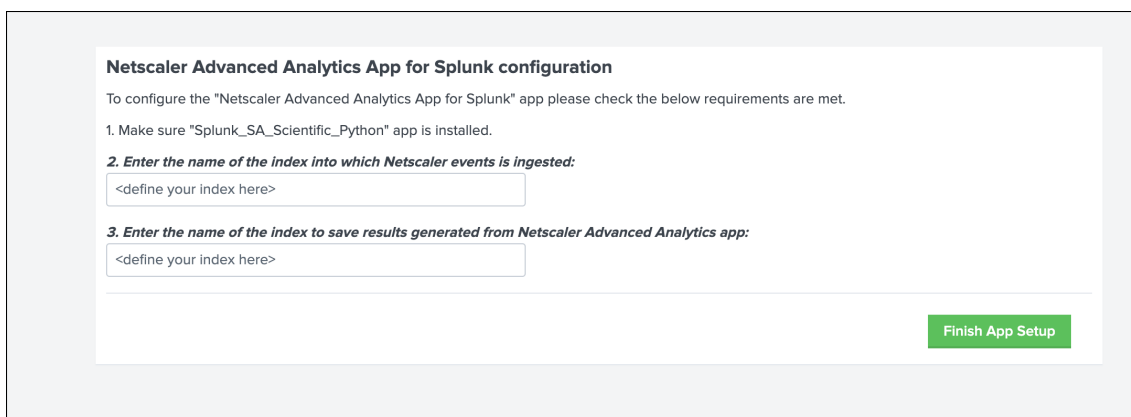

Netscaler Advanced Analytics App for Splunk configuration

To configure the "Netscaler Advanced Analytics App for Splunk" app please check the below requirements are met.

1. Make sure "Splunk_SA_Scientific_Python" app is installed.
2. Enter the name of the index into which Netscaler events is ingested:
3. Enter the name of the index to save results generated from Netscaler Advanced Analytics app:

[Finish App Setup](#)

6. Click **Finish App Setup**.

7. Once the upload is complete, navigate to **Apps** and click **NetScaler advanced analytics**.

Note:

It takes a minimum of 20 days for the apps to start forecasting the anomalies.

NetScaler advanced analytics dashboards on Splunk

NetScaler advanced analytics insights consist of several dashboards that provide data on various use cases.

Unusually large download transactions


You can use the **Unusually large download transactions** dashboard to analyze the transactions that have unusually high data downloaded from the applications.

Example: If an attacker manages to break into an application and attempts to download a large database containing sensitive information, then this scenario is captured as an anomaly in the **Unusually large download transactions** dashboard. Using the dashboard you can get the details of the transaction, such as client IP address, event time, request URL, and user agent.

You can filter the data based on the following categories:

- Time
- NetScaler IP address
- Application name

For a selected time frame, the dashboard displays the top client IP addresses, top UserAgents, and the top URL with anomalies. You can drilldown further on the anomaly by filtering the data based on the NetScaler IP address and application name.

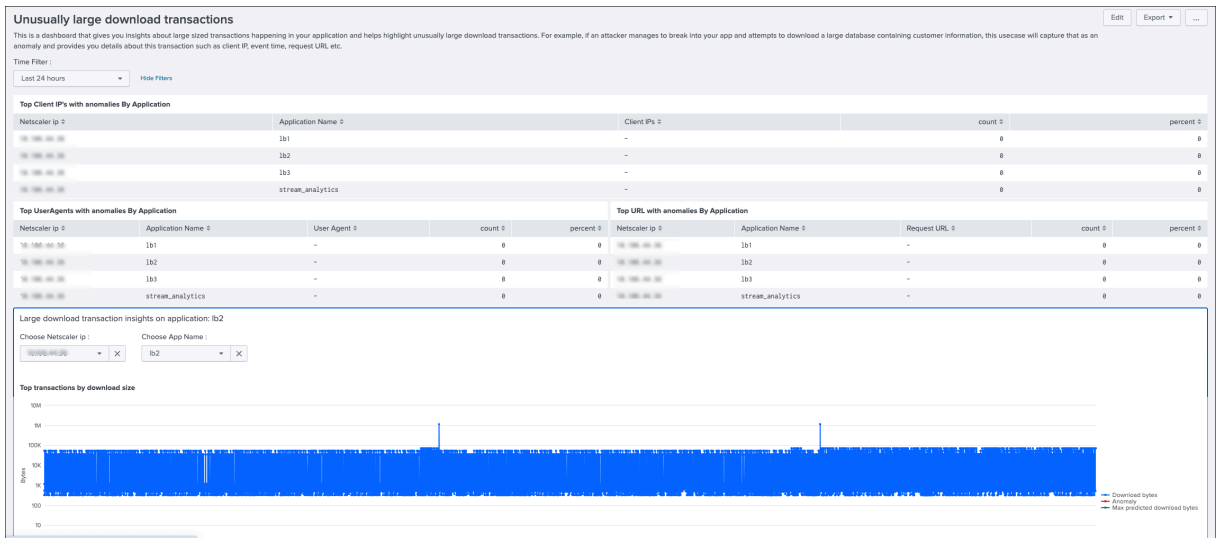

For a selected NetScaler IP address and application name, a graph is displayed that shows all transactions including the ones with high download size. The graph contains the details of downloaded bytes, maximum predicted downloaded bytes, and the anomalies.



You can export the data to PDF, clone the dashboard, and set the dashboard as the home dashboard.

Unusually large upload transactions

You can use the **Unusually large upload transactions** dashboard to analyze the transactions that have unusually high data upload to the application.

Example: If an attacker manages to break into an application and attempts to upload huge files hoping to exhaust storage, then this scenario is reported as an anomaly in the **Unusually large upload**

transactions dashboard. Using this dashboard you can get the details of the anomalous transaction, such as client IP address, event time, request URL, and user agent.

You can filter the data based on the following categories:

- Time
- NetScaler IP address
- Application name

For a selected time frame, the dashboard displays the top client IP addresses, top User agents, and the top URL with anomalies. You can drilldown further on the anomaly by filtering the data based on NetScaler IP address and application name.

For a selected NetScaler IP address and application name, a graph is displayed that shows all transactions including the ones with high upload size. The graph contains the details of uploaded bytes, maximum predicted uploaded bytes, and the anomalies.

You can export the data to PDF, clone the dashboard, and set the dashboard as the home dashboard.

Traffic surge - download volume


You can use the **Traffic surge - download volume** dashboard to analyze abnormal scenarios of data download from the application through bots. The dashboard highlights if there is an unusual increase in the download rate.

Example: If a user or a bot attempts to download a high volume of data quicker than the usual download rate, then this scenario is considered as a traffic surge and reported as an anomaly. Consider that the average download data per day is 500 MB and if a bot tries to download 2 GB data, then this scenario is considered as unusually high download data volume.

You can filter the data based on the following categories:

- Time
- NetScaler IP address
- Application name

For a selected time frame, the dashboard displays the list of NetScaler IP addresses and application names that have reported anomalies. You can drilldown further on the anomaly by filtering the data based on the NetScaler IP address and application name.

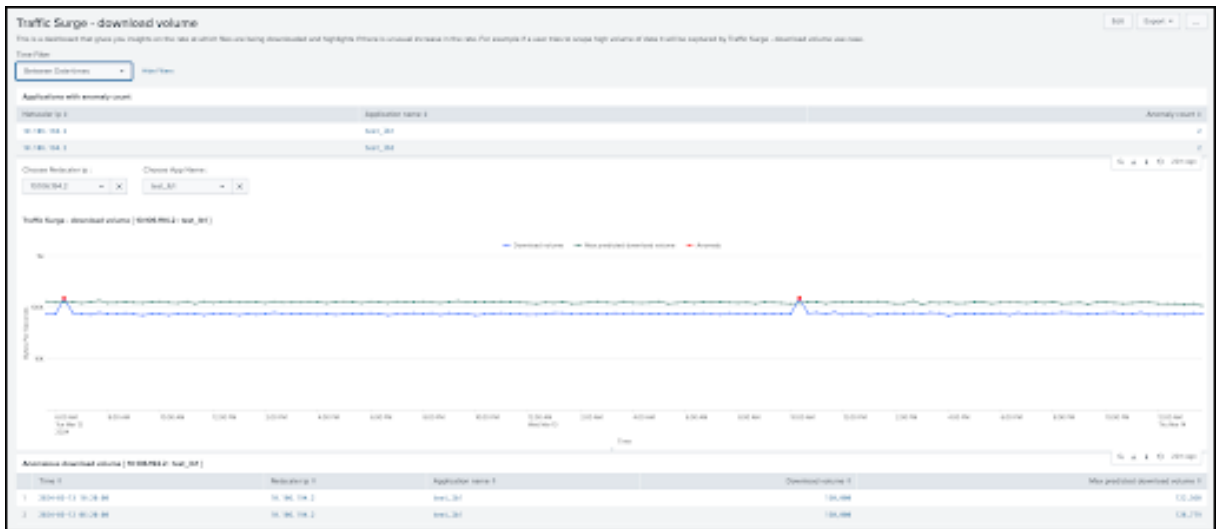

For a selected NetScaler IP address and application name, a graph is displayed that shows the data download, maximum predicted data download, and the anomalies.

You can export the data to PDF, clone the dashboard, and set the dashboard as the home dashboard.

Traffic surge - request rate

You can use the **Traffic surge - request rate** dashboard to analyze the unusual request rates received by an application. You can control the incoming and outgoing traffic from or to an application. A bot attack can perform an unusual high request rate.

Example: If you configure an application to allow 100 requests per minute and if you observe 350 requests per minute, then this scenario is considered as a possible bot attack and reported as an anomaly.


You can filter the data based on the following categories:

- Time
- NetScaler IP address
- Application name

You can drilldown further on the anomaly by filtering the data based on the NetScaler IP address and application name.

For a selected NetScaler IP address and application name, a graph is displayed that shows the request rate, maximum predicted request rate, and the anomalies.

You can export the data to PDF, clone the dashboard, and set the dashboard as the home dashboard.

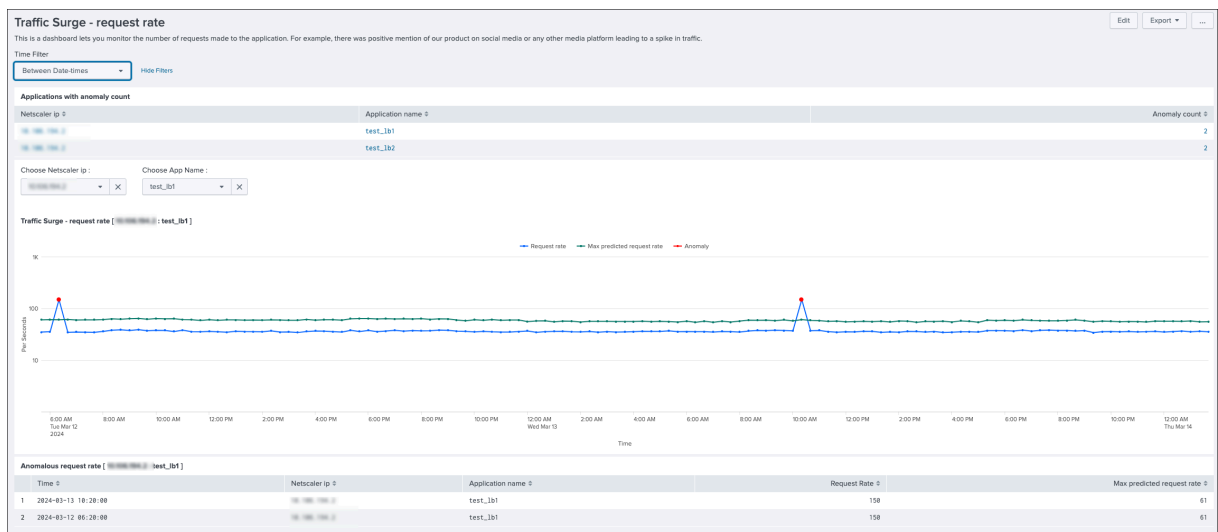

Abnormal server latency

You can use the **Abnormal server latency** dashboard to get real-time visibility into server latency metrics and also to detect unusual deviations in server latency. The dashboard highlights anomalous latency patterns, enables proactive investigation, and helps in troubleshooting issues.

You can filter the data based on the following categories:


- Time
- NetScaler IP address
- Service name

You can drilldown further on the anomaly by filtering the data based on the NetScaler IP address and service name.

For a selected NetScaler IP address and service name, a graph that shows the server delay is displayed.

The graph displays the latency, maximum predicted latency, and the anomalies.

You can export the data to PDF, clone the dashboard, and set the dashboard as the home dashboard.

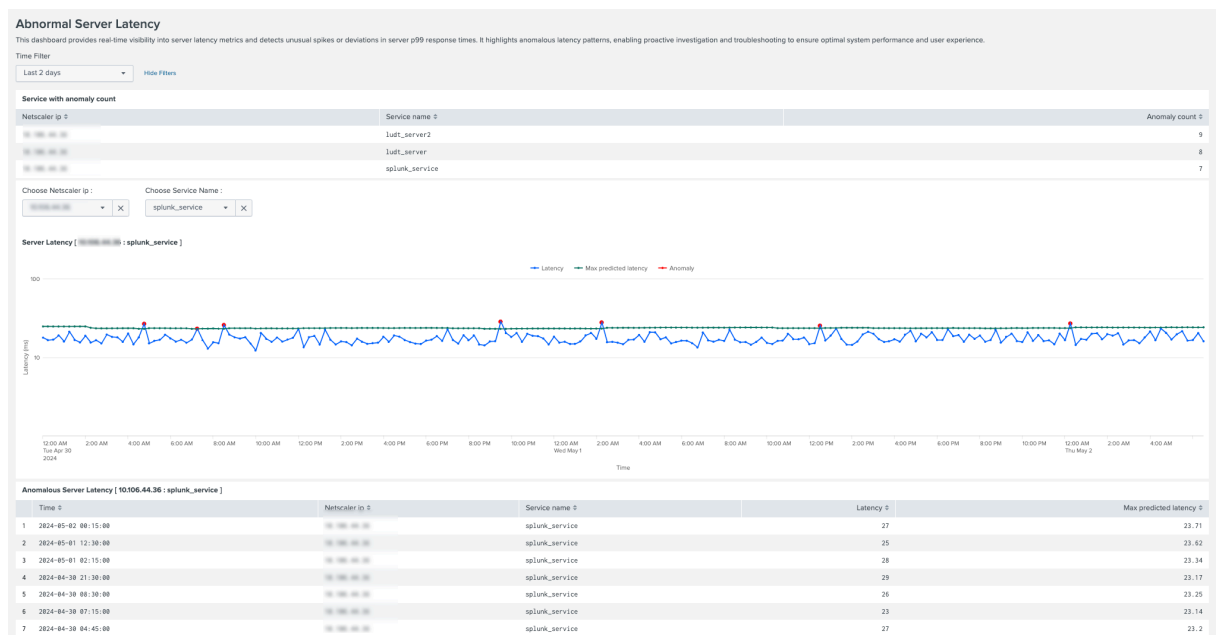

Sample dashboards for endpoints

February 19, 2024

Consider a scenario where you want to view the overall health of NetScaler in your network. To know the overall health, you need to view the data such as the total number of requests received by the virtual server, CPU utilization, currently used memory of NetScaler and so on. The **Observability Sample Dashboard for NetScaler ADC** provides you the visualization of some key metrics that helps you determine the health of NetScaler in less time. The **Observability Sample Dashboard for NetScaler ADC** is one of many dashboards that NetScaler supports.

A sample dashboard is a collection of metrics related to a particular use case/scenario that allows you to visualize the metrics and analyze the scenario in a meaningful way within a short duration. With the sample dashboards, you can avoid looking at multiple metrics in different locations or files to analyze a particular scenario.

NetScaler provides sample dashboards for the following endpoints:

- Grafana
- Splunk

The sample dashboards are available in the JSON format at the following location: <https://www.citrix.com/downloads/citrix-adc/sample-dashboards/endpoints-and-dashboards.html>

List of sample dashboards

The following table lists all the sample dashboards that NetScaler supports:

Sample dashboard name	Details	Endpoint	JSON file name
Observability Sample Dashboard for NetScaler ADC	Provides various metrics of overall infrastructure at one place like NetScaler health, virtual server status, application health (HTTP and TCP apps), and application security (SSL apps). Read more	Grafana	Netscaler_grafana_dashboard.json
Infra and Network Health Dashboard for NetScaler ADC	Provides all system metrics such as golden signals-latency, traffic, error, saturations, HA sync failures for all NetScalers on a central dashboard to ensure business continuity. Read more	Splunk	netscaler_infra_and_network_health.json
App and API Health Dashboard	Provides metrics for the web applications and gain clients' insights to ensure high performing and seamless web experience for end users. Read more	Splunk	netscaler_app_and_api_health.json

Sample dashboard name	Details	Endpoint	JSON file name
NetScaler HTTP Insight Dashboard	Provides visibility into Web Insight. This dashboard is valid for both HTTP and HTTPS traffic, and includes commonly used data such as Response Time, Latency, NetScaler Processing Time at Layer 7, distributions such as Application Load, Response Length, Host, URL, Method, and some common HTTP headers. Read more	Splunk	NetScalerHTTPInsightDashboard.xr
NetScaler SSL Insight Dashboard	Provides SSL insight. This dashboard includes TLS/SSL transactions or sessions related fields that are commonly looked for. For example, Ciphers and their strengths, TLS/SSL versions, certificate types. Read more	Splunk	NetScalerSSLInsightDashboard.xml

Sample dashboard name	Details	Endpoint	JSON file name
NetScaler TCP Insight Dashboard	Provides TCP insight. This dashboard includes data such as, Throughput, Connection Length, Latency, Jitter at L4, and events such as Retransmissions, Resets, Zero Windows. Read more	Splunk	NetScalerTCPInsightDashboard.xml
NetScaler Management Logs Dashboard (HEC)	Provides data on management logs exported to an HTTP Event Collector (HEC) input on Splunk. This dashboard includes data such as Logins, GUI Access, Shell access. Read more	Splunk	NetScalerManagementLogsDashboard.xml
NetScaler Management Logs Dashboard (Syslog)	Provides data on NetScaler management logs exported to a Syslog Input on Splunk this dashboard is a counterpart of NetScaler Management Logs Dashboard (HEC). This dashboard includes data such as Logins, GUI Access, Shell access. Read more	Splunk	NetScalerManagementLogsDashboard.xml

Enable additional metrics

The schema file from where the data is fetched for the dashboards might not have all the metrics enabled. Due to this, you might see that some panels on the dashboard do not have data.

You can manually edit the schema file to include these metrics. The schema file is found on NetScaler at `/var/metrics_conf/schema.json`. After updating the schema file, you must disable and enable the metrics. Only after disabling and enabling the metrics, the panels display the data.

To disable and enable the metrics, run the following commands:

```
1 set analytics profile <splunk_new_profile> metrics DISABLED
2
3 set analytics profile splunk_new_profile metrics ENABLED
```

The following is the list of metrics that are not enabled by default in the schema file:

Infra and Network Health Dashboard for NetScaler ADC:

- cur_syshealth_disk0_size
- cur_syshealth_disk0_used
- cur_syshealth_disk1_size
- cur_syshealth_disk1_used
- cur_syshealth_ps1fail
- ssl_cfg_tot_cards
- ssl_num_cards_up
- nic_err_ifOutDiscards
- cur_syshealth_disk0_errors
- cur_syshealth_disk1_errors
- ha_err_sync_failure
- ha_cur_system_state
- ha_err_pkt_rx_ver
- ha_err_heartbeat
- cl_cur_enable
- clusterd_tot_cu_timedout
- si_tot_pkt_sent
- si_tot_pkt_rcvd
- ssl_tot_enc_bytes
- ssl_tot_dec_bytes

App and API Health Dashboard:

- tcp_err_retransmit_giveups
- tcp_err_retransmit
- tcp_err_stray_packets

- tcp_cur_surgequeueelen

Observability Sample Dashboard for NetScaler ADC:

- as_sig_num_viols

Sample dashboards on Grafana

August 21, 2024

NetScaler provides sample dashboards on Grafana.

View a sample dashboard on Grafana

To view a sample dashboard on Grafana, do the following:

Prerequisites: Ensure that you have completed the required configurations on NetScaler and Prometheus. For more information, see [Configure the export of metrics from NetScaler to Prometheus and visualization using Grafana](#).


1. Launch Grafana and Prometheus.
2. Navigate to **Dashboards** and click **New dashboard**.
3. Click **Import dashboard**.
4. Provide a name for the dashboard.
5. Click **Upload** to select the JSON file corresponding to the required dashboard or copy the JSON file content and paste it into the **Source** page. For the list of dashboards supported and its corresponding JSON file name, see [List of sample dashboards](#).
6. Select the data source as **Prometheus**.
7. Click **Import**.
8. Select the **ADC**, **Vserver** and other details to view the required metrics.

Observability Sample Dashboard for NetScaler ADC

You can use the **Observability Sample Dashboard for NetScaler ADC** to view the overall health of NetScaler in your network. The dashboard provides various metrics of overall infrastructure at one place like NetScaler health, virtual server status, application health (HTTP and TCP apps), and application security (SSL apps).

You can expand the corresponding section in the dashboard to view the detailed visualization of each section such as HTTP Apps, SSL Apps, TCP Apps, virtual server stats (vStats), and NetScaler stats.

The following is a snippet of Observability Sample Dashboard for NetScaler ADC:

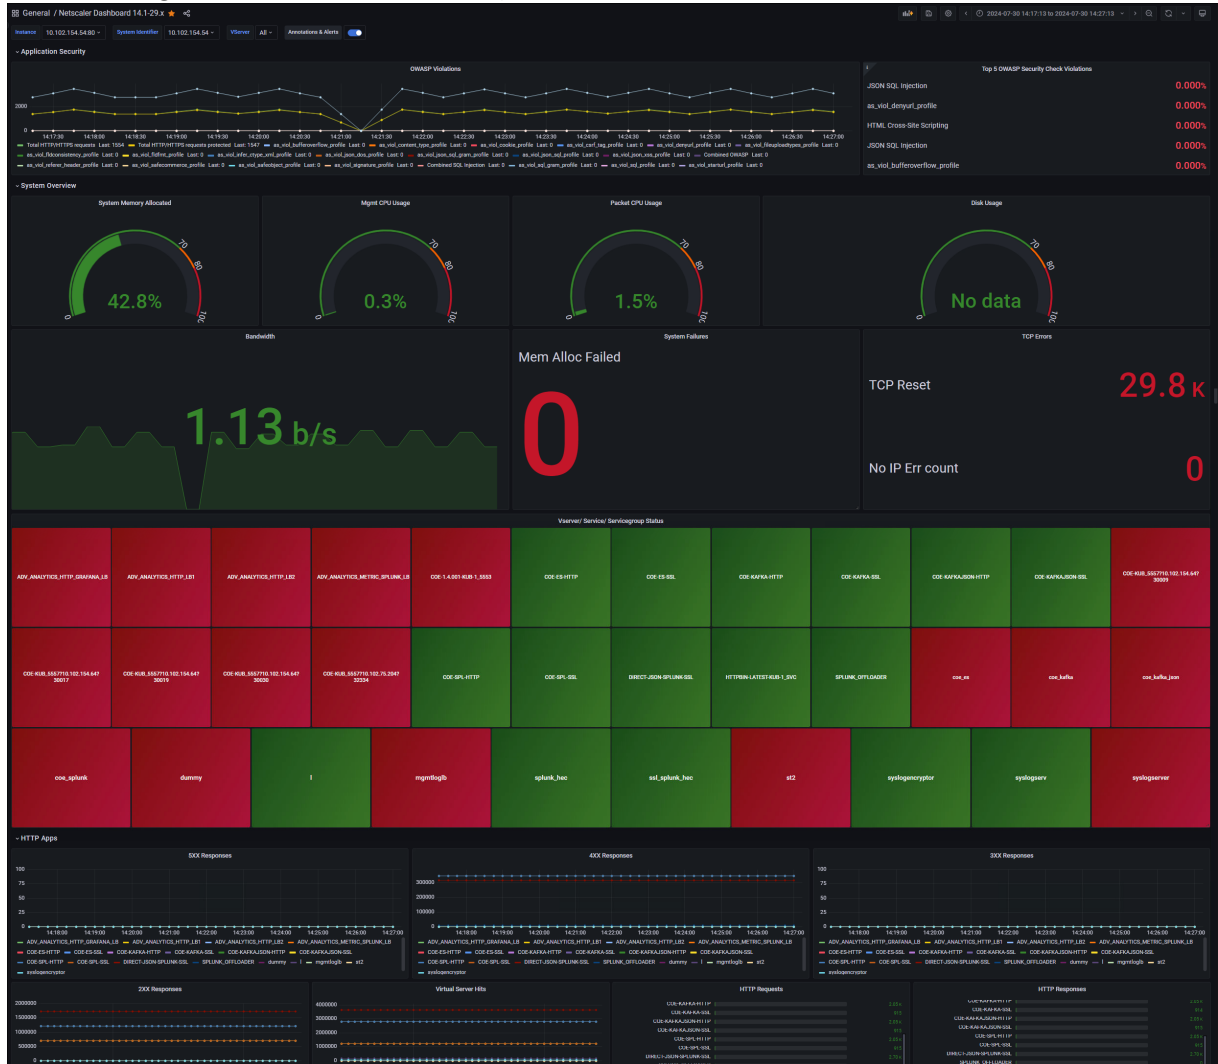

Sample dashboards on Splunk

April 11, 2024

NetScaler provides sample dashboards on Splunk.

View a sample dashboard on Splunk


To view sample dashboards on Splunk, do the following:

Prerequisite: Ensure that you have completed the required configurations for export of metrics from NetScaler to Splunk. For more information, see [Exporting metrics directly from NetScaler to Splunk](#).

1. Launch Splunk and navigate to **Dashboards**.
2. Click **Create New Dashboard**.
3. Enter a name for the dashboard.
4. Select one of the following options and click **Create**:
 - a) **Dashboard Studio**: Select this option if you are importing a JSON file. Select **Absolute** layout.
 - b) **Classic Dashboard**: Select this option if you are importing an XML file.
5. Click the **Source** icon and remove the default entries (if any).
6. Copy the JSON or XML file content corresponding to the required dashboard and paste it on the **Source** page. For the list of dashboards supported and its corresponding JSON or XML file name, see [List of sample dashboards](#).
7. Perform one of the following actions based on your selection:
 - a) If you have pasted JSON file content, then click **Back** and then **Save**.
 - b) If you have pasted XML file content, then click **Save**.
8. Navigate to **Dashboards** and click the newly created dashboard. Select the required filters such as **Index, Time** to view the metrics.


Infra and Network Health Dashboard for NetScaler ADC

You can use the **Infra and Network Health Dashboard for NetScaler ADC dashboard** to monitor all the system metrics such as golden signals - latency, traffic, error, saturations, HA sync failures for all NetScalers on a central dashboard to ensure business continuity. The dashboard also helps you assess the health of NetScaler, identify any issues, correlate issues to find the root cause of an issue and probable remediations.

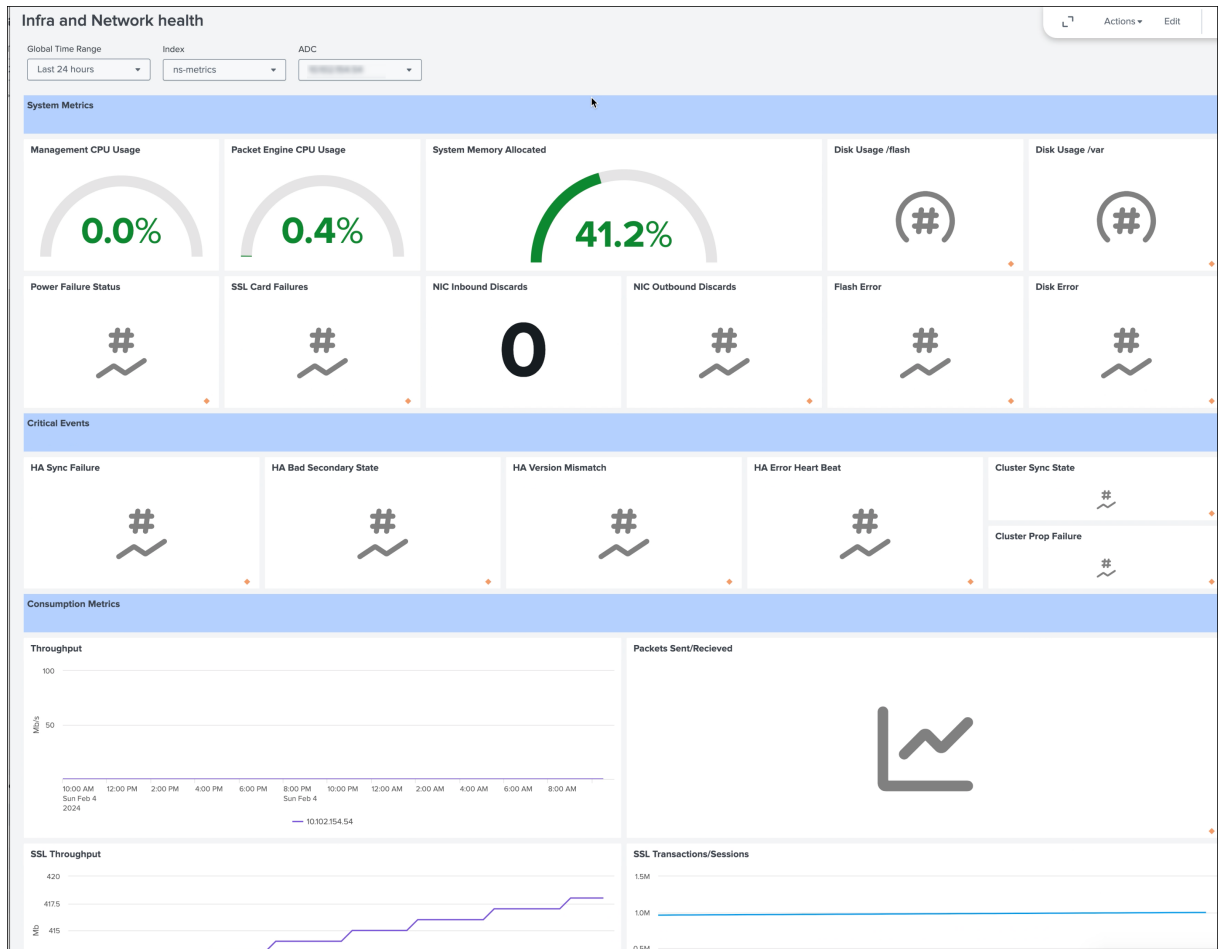


App and API Health Dashboard

You can use the **App and API Health Dashboard** to monitor the metrics for the web applications and gain clients' insights to ensure a high performing and seamless web experience for end users. With this dashboard, you can understand the average latency for specific apps, major contributors of latency, and back end servers contributing to HTTP errors and so on and correlate these with metrics. Based on the insights, you can decide the actions needed for NetScaler or back-end applications.

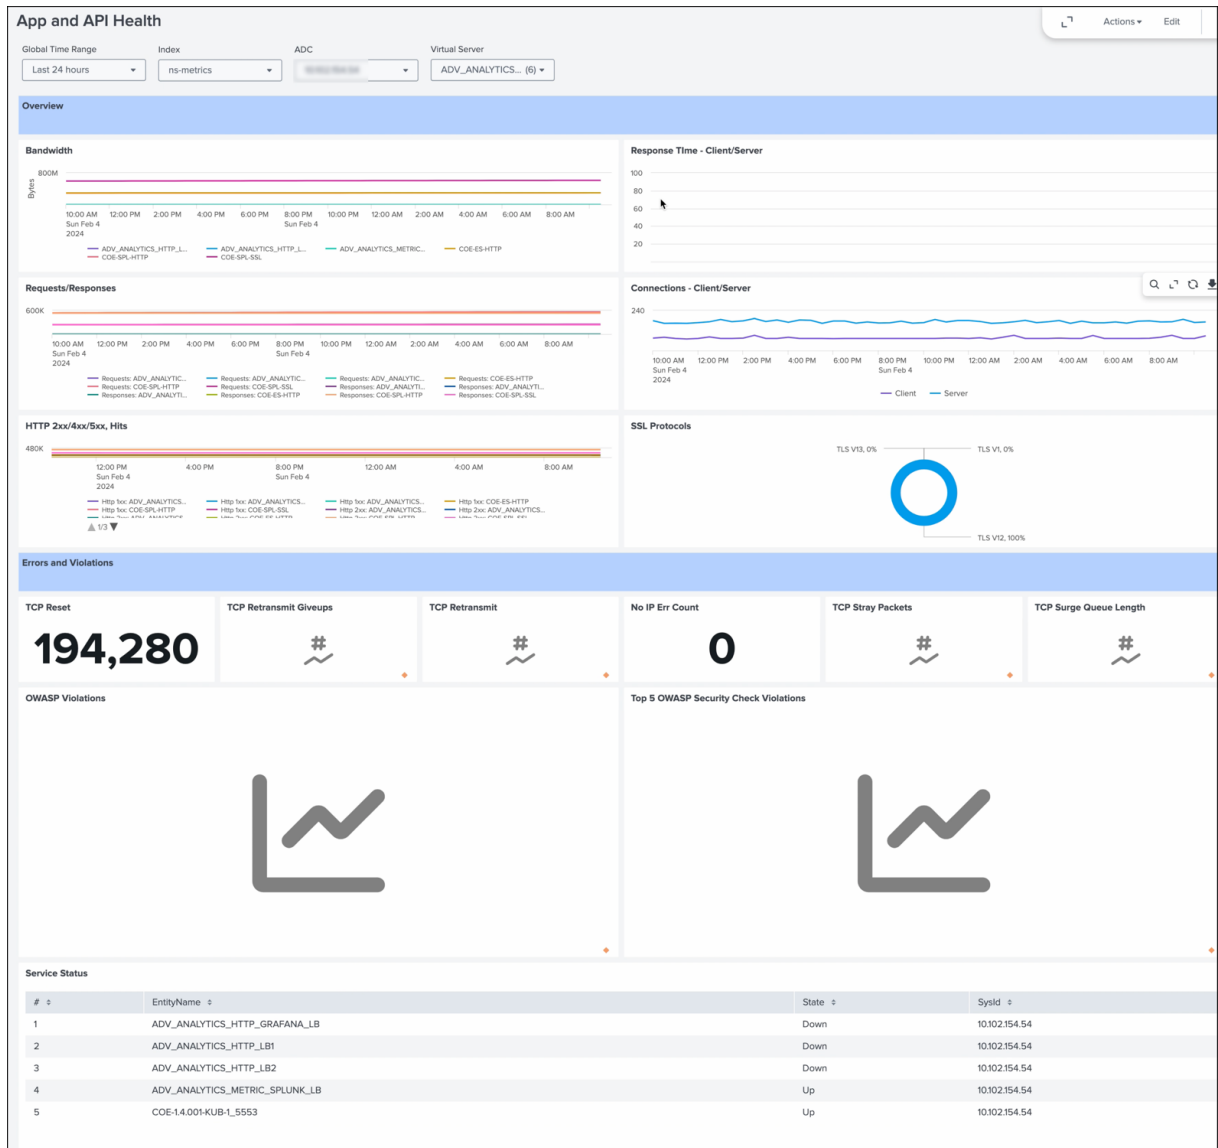


NetScaler HTTP Insight Dashboard

You can use the **NetScaler HTTP Insight Dashboard** to monitor HTTP traffic. This dashboard is valid for both HTTP and HTTPS traffic, and includes data such as Response Time, Latency, NetScaler Processing Time at Layer 7, distributions such as Application Load, Response Length, Host, URL, Method, and some common HTTP headers.

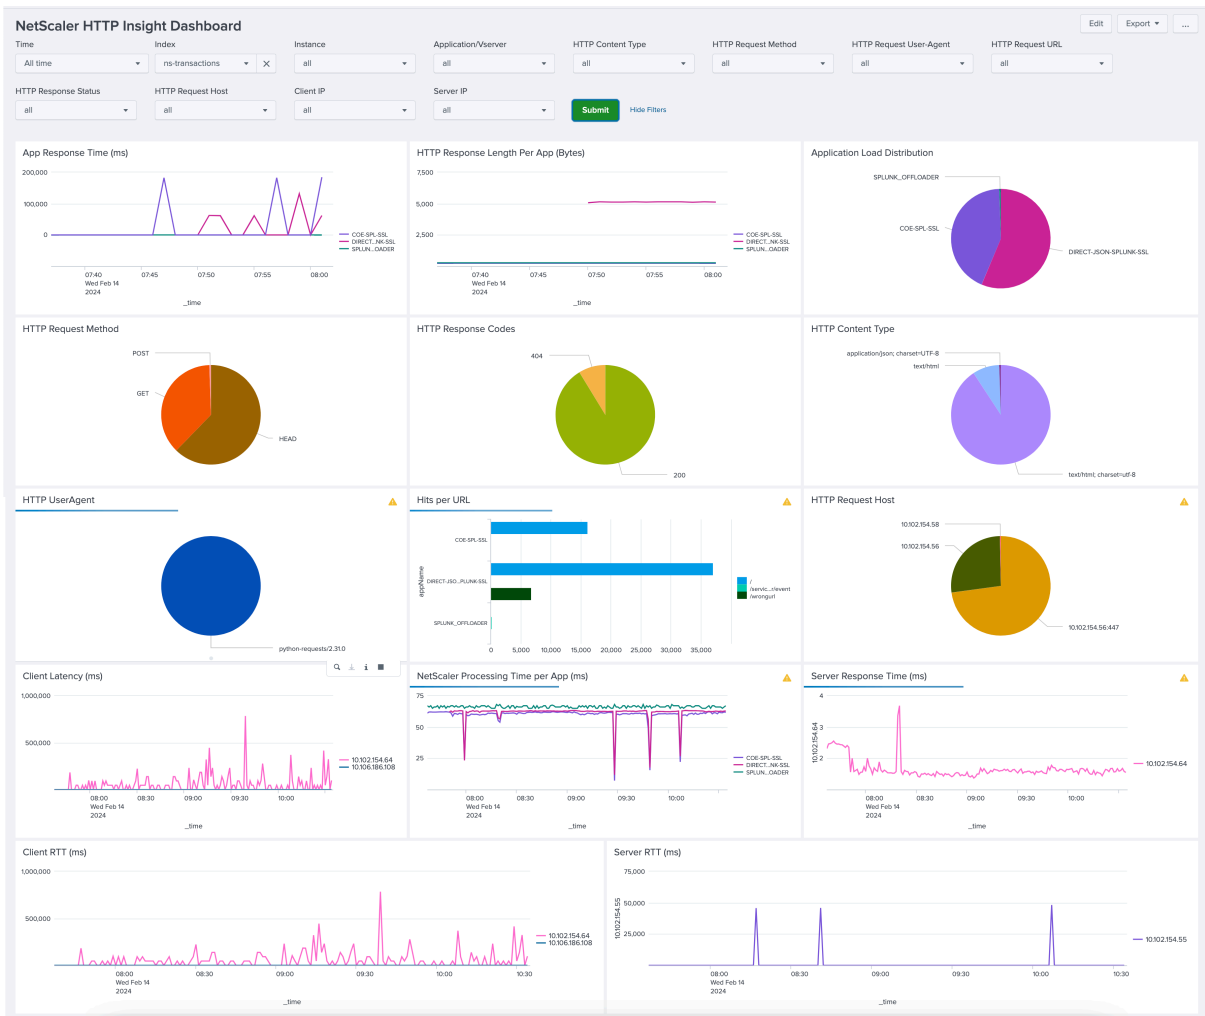


NetScaler SSL Insight Dashboard

You can use the **NetScaler SSL Insight Dashboard** to monitor SSL traffic. This dashboard includes TLS/SSL transactions or sessions related fields that are commonly looked for such as ciphers and their strengths, TLS/SSL versions, certificate types. As HTTPS operates on TLS, you can correlate the data in this dashboard with the **NetScaler HTTP Insight Dashboard** to get holistic insights about the HTTPS traffic.

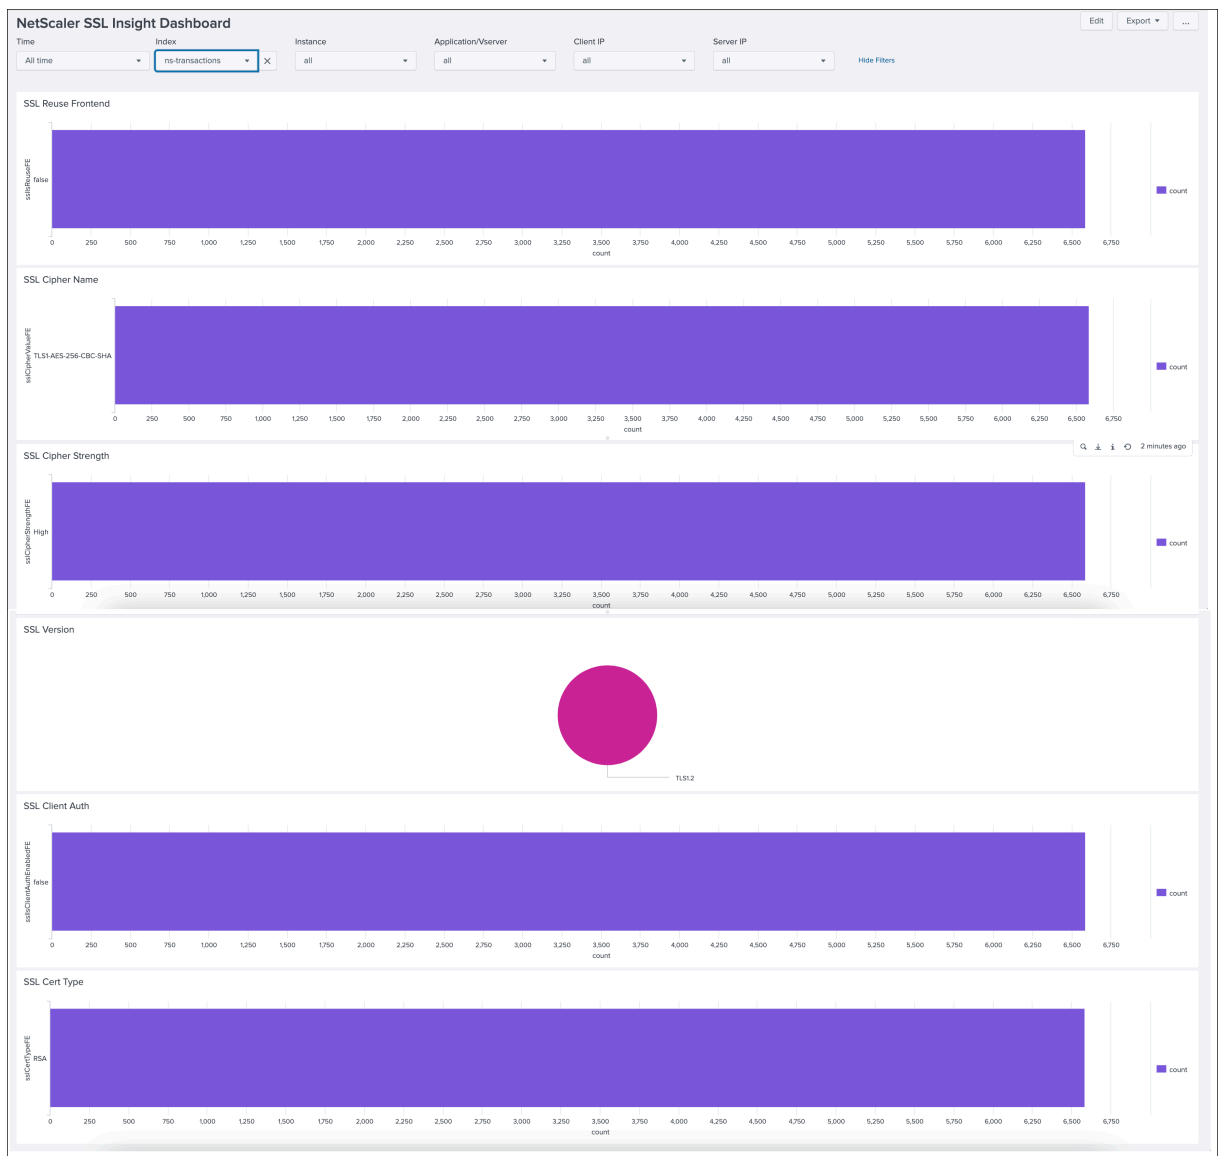


NetScaler TCP Insight Dashboard

You can use the **NetScaler TCP Insight Dashboard** to monitor TCP traffic. This dashboard includes data such as Throughput, Connection Length, Latency, Jitter at Layer 4, and events such as Retransmissions, Resets, Zero Windows. As HTTP, HTTPS, SSL operate on TCP, you can correlate the data with the **NetScaler HTTP Insight Dashboard** and **NetScaler SSL Insight Dashboard** to get holistic insights about the traffic at Layer 4.

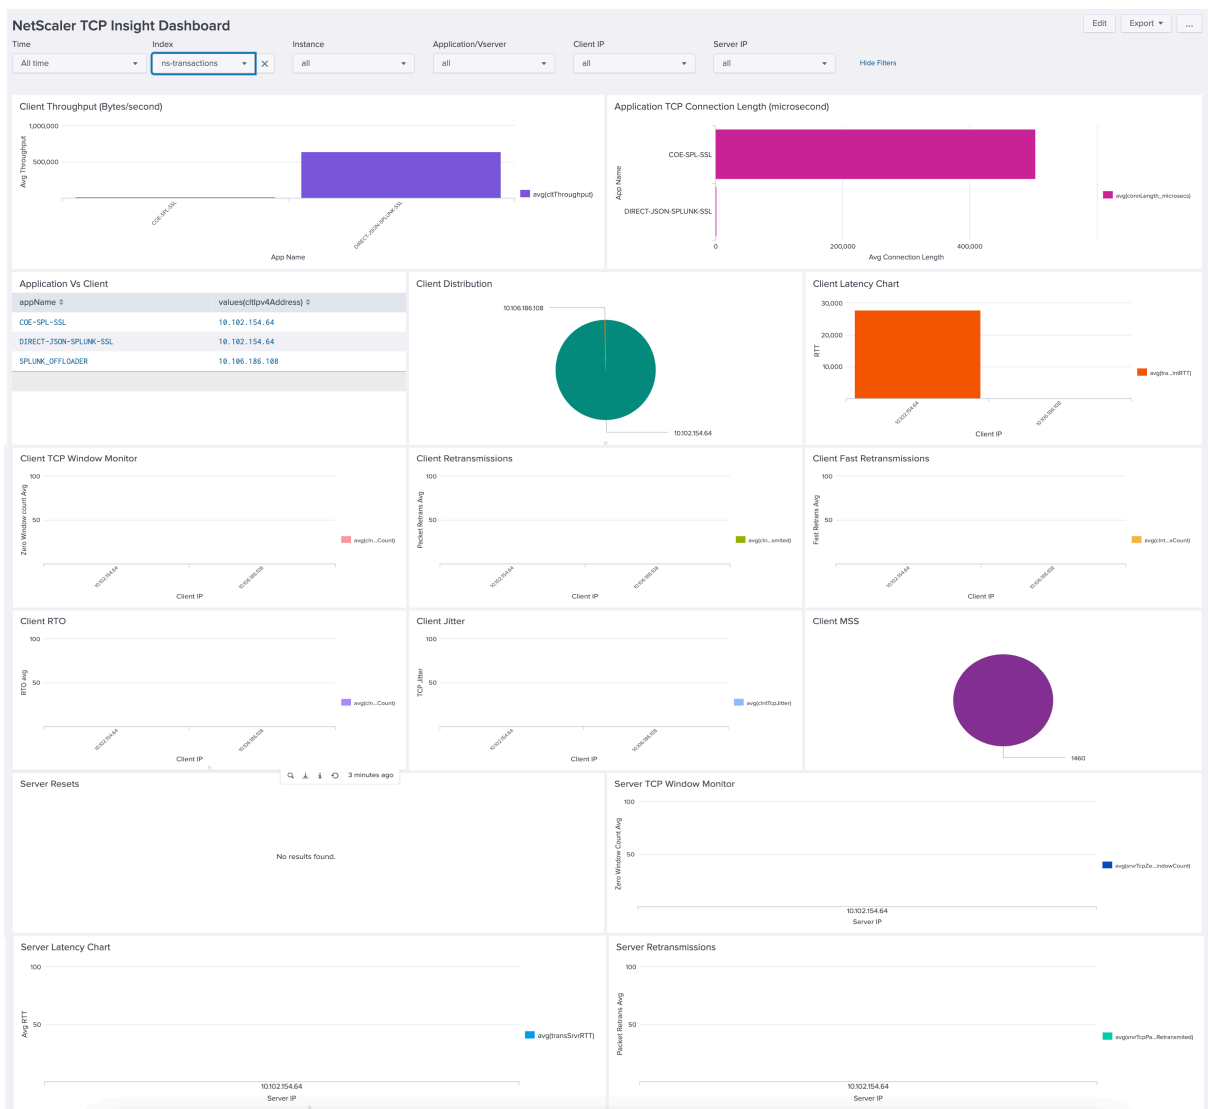


NetScaler Management Logs Dashboard (HEC)

You can use the **NetScaler Management Logs Dashboard (HEC)** to view the management logs exported to an HTTP Event Collector (HEC) input on Splunk. This dashboard includes management events such as Logins, GUI Access, Shell access. You can also drill down to the finer details of these management events.

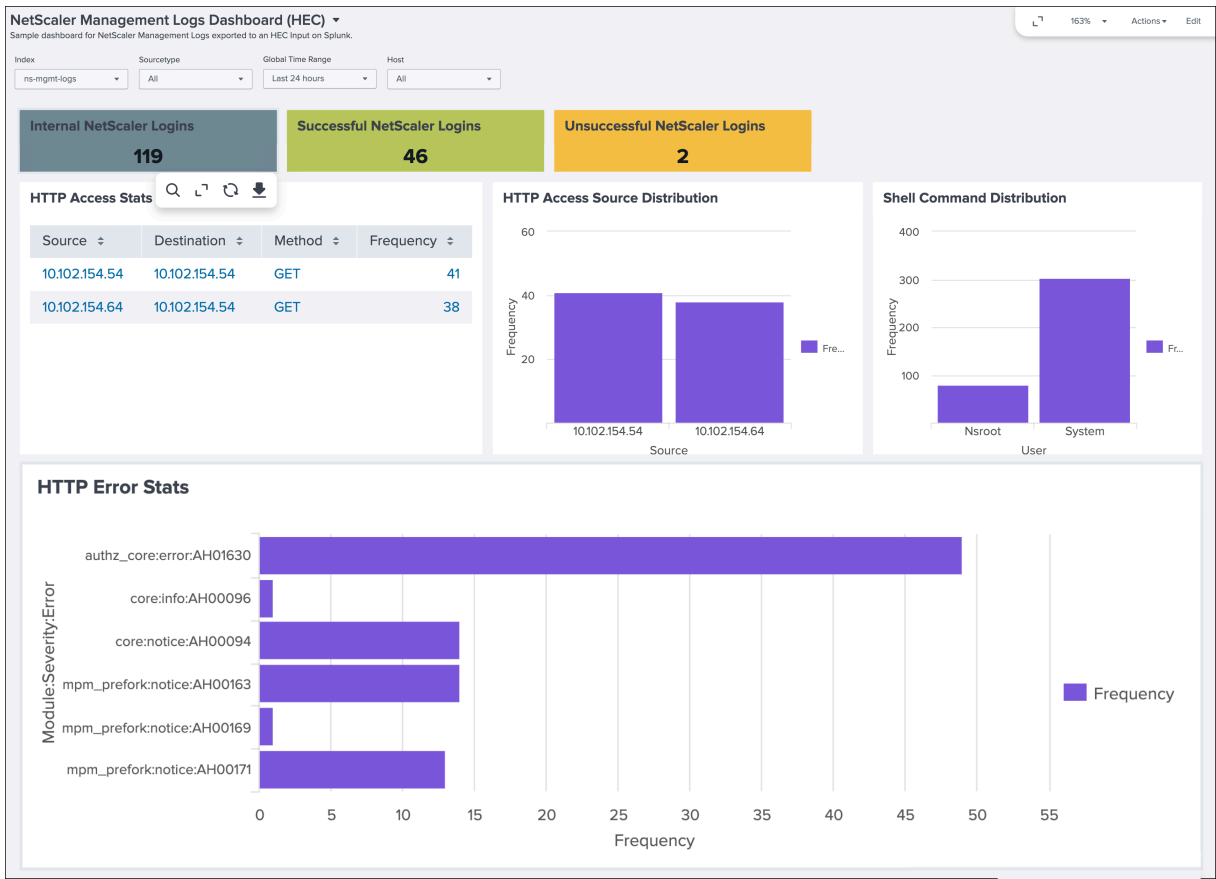

NetScaler Management Logs Dashboard (Syslog)

You can use the **NetScaler Management Logs Dashboard (Syslog)** to view the management logs exported to a Syslog Input on Splunk. This dashboard includes management events such as Logins, GUI Access, Shell access.

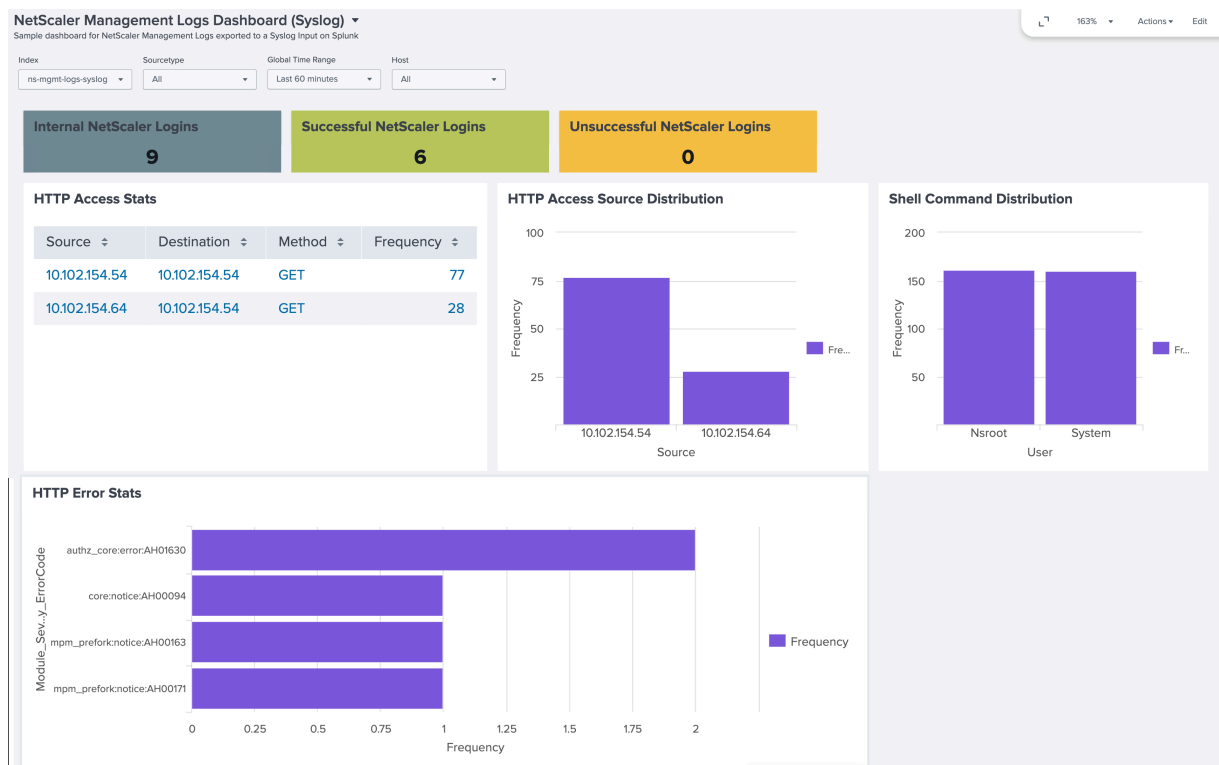

NetScaler metrics reference

July 3, 2024

This section provides information on the different metrics provided by NetScaler. You can classify NetScaler metrics into three categories:

- **Application and API metrics:** Application health metrics help in troubleshooting which application website has high latency or an elevated number of errors or subpar performance. It also includes monitoring errors, traffic, latency, and saturation metrics.
- **Application security and API security metrics:** Application security metrics include the metrics such as WAF and BOT.
- **NetScaler system metrics:** NetScaler system metrics include information about the NetScaler such as the CPU utilization, memory, and disk usage. You can also get specific feature-level insights such as SSL, and GSLB. Also, insights for SSL TLS monitoring like protocol used and cipher strength.

Application and API metrics

This section describes a set of application health metrics available for NetScaler.

HTTP metrics

The following is a set of HTTP metrics and their description.

Metrics	Description
<code>http_tot_Gets</code>	This counter tracks HTTP requests received using the GET method.
<code>http_tot_Posts</code>	This counter tracks HTTP requests received using the POST method.
<code>http_tot_Others</code>	This counter tracks HTTP requests received using methods except GET and POST. Some of the well-defined HTTP methods are HEAD, PUT, DELETE, OPTIONS, and TRACE. User-defined methods are also allowed.
<code>http_tot_rxRequestBytes</code>	This counter tracks the bytes of HTTP data received.
<code>http_tot_rxResponseBytes</code>	This counter tracks the bytes received as response data.
<code>http_tot_txRequestBytes</code>	This counter tracks the bytes of HTTP data transmitted.
<code>http_tot_txResponseBytes</code>	This counter tracks the bytes transmitted as response data.
<code>http_tot_Requests</code>	This counter tracks HTTP requests received, including HTTP/1.0 and HTTP/1.1 requests.
<code>http_tot_Requests1_0</code>	This counter tracks HTTP/1.0 requests received.
<code>http_tot_Requests1_1</code>	This counter tracks HTTP/1.1 requests received.
<code>http_tot_Responses</code>	This counter tracks HTTP responses sent including HTTP/1.0 and HTTP/1.1 responses.
<code>http_tot_Responses1_0</code>	This counter tracks HTTP/1.0 responses sent.
<code>http_tot_Responses1_1</code>	This counter tracks HTTP/1.1 responses sent.
<code>http_tot_CLenResponses</code>	This counter tracks HTTP responses that are sent with the content-length field set to a value. The content field of the HTTP header specifies the length of the content, in bytes, in the associated HTTP body.

Metrics	Description
http_tot_ChunkedResponses	This counter tracks the HTTP responses that are sent with the transfer-encoding field set as chunked. With this setting the server starts sending the HTTP response before knowing its total length. The server breaks the response into chunks and sends them in sequence, inserting the length of each chunk before the actual data. The message ends with a chunk of size zero.
http_tot_noClenChunkResponses	This counter tracks the FIN-terminated responses sent. In FIN-terminated responses, the server finishes sending the data and closes the connection.
http_err_noreuse_multipart	This counter tracks the HTTP multi-part responses sent. In multi-part responses, one or more entities are encapsulated within the body of a single message.
http_err_IncompleteRequests	This counter tracks the HTTP requests received in which the header spans more than one packet.
http_err_IncompleteResponses	This counter tracks the HTTP responses received in which the header spans more than one packet.
http_err_IncompleteHeaders	This counter tracks the HTTP requests and responses received in which the HTTP header spans more than one packet.
http_err_server_busy	This counter tracks the error responses received. Some of the error responses are: 500 Internal Server Error, 501 Not Implemented, 502 Bad Gateway, 503 Service Unavailable, 504 Gateway Timeout, and 505 HTTP Version Not supported
http_tot_ChunkedRequests	This counter tracks the HTTP requests in which the transfer-encoding field of the HTTP header is set as chunked.
http_tot_CLenRequests	This counter tracks the HTTP requests in which the content-length field of the HTTP header is set to a value. Content-length specifies the length of the content, in bytes, in the associated HTTP body.

Metrics	Description
<code>http_err_large_content</code>	This counter tracks the large or invalid requests and responses received.
<code>http_err_large_ctlen</code>	This counter tracks the large or invalid requests received, in which the content-length field of the HTTP header is set to a value. Content-length specifies the length of the content, in bytes, in the associated HTTP body.
<code>http_err_large_chunk</code>	This counter tracks the large or invalid requests received in which the Transfer-Encoding field of the HTTP header is set as chunked.

TCP metrics

The following is a set of TCP metrics and their description.

Counter	Description
<code>tcp_tot_ServerOpen</code>	This counter tracks the server connections initiated by NetScaler after startup. This counter is reset when the appliance restarts.
<code>tcp_tot_ServerClosed</code>	This counter tracks the total number of server connections that are closed.
<code>tcp_tot_ClientOpen</code>	This counter tracks the client connections initiated on NetScaler after startup. This counter is reset when the appliance restarts.
<code>tcp_tot_ClientClosed</code>	This counter tracks the total number of client connections that are closed.
<code>tcp_tot_syn</code>	This counter tracks the <code>SYN</code> packets received.
<code>tcp_tot_syn_probe</code>	This counter tracks the probes from NetScaler to a server. The appliance sends a <code>SYN</code> packet to the server to check its availability and expects a <code>SYN_ACK</code> packet from the server before a specified response timeout.
<code>tcp_tot_fin_srvr</code>	This counter tracks the <code>FIN</code> packets received from the server.
<code>tcp_tot_fin_clnt</code>	This counter tracks the <code>FIN</code> packets received from the clients.

Counter	Description
<code>tcp_tot_timeWaitToSyn</code>	This counter tracks the <code>SYN</code> packets received on connections that are in the <code>TIME_WAIT</code> state. Packets cannot be transferred on a connection in this state.
<code>tcp_tot_timeWaitData</code>	This counter tracks the bytes of data received on connections that are in the <code>TIME_WAIT</code> state. Data cannot be transferred on a connection that is in this state.
<code>tcp_tot_clnt_flushed</code>	This counter tracks the client connections that are flushed because the client is idle for some time.
<code>tcp_tot_srvr_flushed</code>	This counter tracks the server connections that are flushed because there are no client requests in the queue for some time.
<code>tcp_tot_clnt_flushed_ho</code>	This counter tracks the half-opened client connections that are flushed because the three-way handshakes are not complete.
<code>tcp_tot_srvr_flushed_ho</code>	This counter tracks the half-opened server connections that are flushed because the three-way handshakes are not complete.
<code>tcp_tot_clnt_flushed_ahc</code>	This counter tracks the active half-closed client connections that are flushed because the client has closed the connection and there is no activity on the connection.
<code>tcp_tot_srvr_flushed_ahc</code>	This counter tracks the active half-closed server connections that are flushed because the server has closed the connection and there is no activity on the connection.
<code>tcp_tot_clnt_flushed_phc</code>	This counter tracks the passive half-closed client connections that are flushed because NetScaler has closed the connection and there is no activity on the connection.
<code>tcp_tot_srvr_flushed_phc</code>	This counter tracks the passive half-closed server connections that are flushed because NetScaler has closed the connection and there is no activity on the connection.

Counter	Description
<code>tcp_err_badchecksums</code>	This counter tracks the packets received with a TCP checksum error.
<code>tcp_err_syn_n_syn_rcvd</code>	This counter tracks the <code>SYN</code> packets received on a connection that is in the <code>SYN_RCVD</code> state. A connection goes into the <code>SYN_RCVD</code> state after receiving a <code>SYN</code> packet.
<code>tcp_err_syn_n_est</code>	This counter tracks the <code>SYN</code> packets received on a connection that is in the <code>ESTABLISHED</code> state. A <code>SYN</code> packet is not expected on an <code>ESTABLISHED</code> connection.
<code>tcp_err_syn_giveups</code>	This counter attempts to establish a connection on NetScaler that has timed out.
<code>tcp_err_syn_sentbadack</code>	This counter specifies the incorrect <code>ACK</code> packets received on a connection that is in the <code>SYN_SENT</code> state. An incorrect <code>ACK</code> packet is the third packet in the three-way handshake that has an incorrect sequence number.
<code>tcp_err_syn_retransmit</code>	This counter specifies the <code>SYN</code> packets resent to a server.
<code>tcp_err_fin_retransmit</code>	This counter specifies the <code>FIN</code> packets resent to a server or a client.
<code>tcp_err_fin_giveups</code>	This counter specifies the connections that were timed out by NetScaler because of not receiving the <code>ACK</code> packet after retransmitting the <code>FIN</code> packet four times.
<code>tcp_err_fin_dup</code>	This counter specifies the number of duplicate <code>FIN</code> packets received.
<code>tcp_err_rs</code>	This counter specifies the packets received from a client or a server.
<code>tcp_err_rst_not_est</code>	This counter specifies the reset packets received on a connection that is not in the <code>ESTABLISHED</code> state.
<code>tcp_err_rst_outof_wnd</code>	This counter specifies the reset packets received on a connection that is out of the current TCP window.

Counter	Description
<code>tcp_err_rst_inTimewaits</code>	This counter specifies the reset packets received on a connection that is in the <code>TIME_WAIT</code> state. Packets cannot be transferred on a connection that is in the <code>TIME_WAIT</code> state.
<code>tcp_err_srvr_retransmit</code>	This counter tracks the packets retransmitted by a server. Retransmission usually occurs because the acknowledgment from NetScaler has not reached the server.
<code>tcp_err_clnt_retransmit</code>	This counter tracks the packets retransmitted by a client. Retransmission usually occurs because the acknowledgment from NetScaler has not reached the client.
<code>tcp_err_full_retransmit</code>	This counter tracks the full packet retransmissions by the client or the server.
<code>tcp_err_partial_retransmit</code>	This counter tracks the partial packet retransmissions by a client or server because of congestion on the connection. This situation usually occurs because the window advertised by NetScaler is not large enough to hold the full packet.
<code>tcp_err_srvr_out_of_order</code>	This counter tracks the out of order TCP packets received from a server.
<code>tcp_err_clnt_out_of_order</code>	This counter tracks the out of order TCP packets received from a client.
<code>tcp_err_cookie_pkt_seq_reject</code>	This counter tracks the <code>SYN</code> cookie packets rejected because they contain an incorrect sequence number.
<code>tcp_err_cookie_signature_reject</code>	This counter tracks the <code>SYN</code> cookie packets rejected because they contain an incorrect signature.
<code>tcp_err_cookie_pkt_seq_drop</code>	This counter tracks the <code>SYN</code> cookie packets dropped because the sequence number specified in the packets is outside the current Window.
<code>tcp_err_cookie_mss</code>	This counter tracks the <code>SYN</code> cookie packets rejected because the maximum segment size (MSS) specified in the packets is incorrect.

Counter	Description
<code>tcp_err_retransmit</code>	This counter tracks the TCP packets retransmitted. NetScaler attempts to retransmit the packet up to seven times and then resets the other half of the TCP connection.
<code>tcp_err_retransmit_giveups</code>	This counter tracks the number of times NetScaler terminates a connection after retransmitting the packet seven times on that connection.
<code>tcp_max_Clients</code>	This counter tracks the maximum number of connections that can be made from the system to the Web servers attached to it. This value is applied globally to all attached servers.
<code>tcp_max_ReqPerConn</code>	This counter tracks the maximum number of requests that the system can pass to a particular connection between the system and a server attached to it. If the value is zero, then it allows an unlimited number of requests to be passed.
<code>tcp_err_cip_alloc</code>	This counter tracks the number of times TCP level client header insertion fails.
<code>tcp_tot_ClientOpen_Rate</code>	This counter tracks the rate at which connections are opened in the system.
<code>tcp_tot_acl_bridge</code>	This counter tracks the packets matching a bridge access control list (ACL), which in transparent mode bypasses service processing.
<code>tcp_tot_acl_drop</code>	This counter tracks the packets dropped because they match ACLs with processing mode set to <code>DENY</code> .
<code>tcp_tot_acl_allow</code>	This counter tracks the packets matching ACLs with the processing mode set to <code>ALLOW</code> . NetScaler appliance processes these packets.
<code>tcp_tot_acl_nat</code>	This counter tracks packets matching a NAT ACL, resulting in a NAT session.
<code>tcp_tot_acl_hits</code>	This counter tracks the packets matching an ACL.
<code>tcp_tot_acl_miss</code>	This counter tracks the packets not matching any ACL.

Counter	Description
<code>tcp_tot_sacl_bridge</code>	This counter tracks the packets that matched a simple ACL with processing mode set as <code>BRIDGE</code> and got bridged by NetScaler.
<code>tcp_tot_sacl_drop</code>	This counter tracks the packets dropped because they match the <code>Deny</code> action in a simple ACL.
<code>tcp_tot_sacl_allow</code>	This counter tracks the packets that matched a simple ACL with the <code>ALLOW</code> action and got consumed by NetScaler.
<code>tcp_tot_sacl_hits</code>	This counter tracks the packets matching a simple ACL.
<code>tcp_tot_sacl_miss</code>	This counter tracks the packets not matching any simple ACL.
<code>tcp_tot_sacl_count</code>	This counter tracks the number of simple ACLs configured.
<code>tcp_tot_sacl6_bridge</code>	This counter tracks the total packets that matched a simple ACL6 with action <code>BRIDGE</code> and got bridged by NetScaler.
<code>tcp_tot_sacl6_drop</code>	This counter tracks the packets dropped because they match the <code>Deny</code> action in a simple ACL6.
<code>tcp_tot_sacl6_allow</code>	This counter tracks the total packets that matched a simple ACL6 with the action <code>ALLOW</code> and got consumed by NetScaler.
<code>tcp_tot_sacl6_hits</code>	This counter tracks the packets matching a simple ACL6.
<code>tcp_tot_sacl6_miss</code>	This counter tracks the packets not matching any simple ACL6.
<code>tcp_tot_sacl6_count</code>	This counter tracks the number of simple ACL6s configured.
<code>tcp_tot_acl6_bridge</code>	This counter tracks the packets matching a bridge IPv6 ACL, which in transparent mode bypasses service processing.
<code>tcp_tot_acl6_drop</code>	This counter tracks the packets dropped because they match IPv6 ACLs with processing mode set to <code>DENY</code> .
<code>tcp_tot_acl6_allow</code>	This counter tracks the packets matching IPv6 ACLs with processing mode set to <code>ALLOW</code> . NetScaler processes these packets.

Counter	Description
<code>tcp_tot_acl6_nat</code>	This counter tracks the packets matching a NAT ACL6, resulting in a NAT session.
<code>tcp_tot_acl6_hits</code>	This counter tracks the packets matching an IPv6 ACL.
<code>tcp_tot_acl6_miss</code>	This counter tracks the packets not matching any IPv6 ACL.
<code>pbr_tot_allow</code>	This counter tracks the total packets that matched the policy-based routing (PBR) with the action <code>ALLOW</code> .
<code>pbr_tot_deny</code>	This counter tracks the total packets that matched PBR with the action <code>DENY</code> .
<code>pbr_tot_hits</code>	This counter tracks the total packets that matched any PBR.
<code>pbr_tot_miss</code>	This counter tracks the total packets that did not match any PBR.
<code>tcp_tot_rxpkts</code>	This counter tracks the TCP packets received.
<code>tcp_tot_rxbytes</code>	This counter tracks the bytes of TCP data received.
<code>tcp_tot_txpkts</code>	This counter tracks the TCP packets transmitted.
<code>tcp_tot_txbytes</code>	This counter tracks the bytes of TCP data transmitted.
<code>pcb_tot_zombie_called</code>	This counter tracks the number of times the Zombie cleanup function is called. Every time a connection is flushed, it is marked for cleanup. The Zombie cleanup function clears all these connections at predefined intervals.
<code>tcp_tot_synheld</code>	<code>SYN</code> packets held on NetScaler that are waiting for a server connection.
<code>tcp_tot_synheld_flushed</code>	<code>SYN</code> packets flushed on NetScaler because of no response from the server for three or more seconds.
<code>tcp_tot_fintimewaitconnclosedearly</code>	This counter tracks the connections closed on NetScaler because the number of connections in the <code>TIME_WAIT</code> state has exceeded the default value of 7000.

Counter	Description
<code>tcp_err_any_portalloc_failed</code>	This counter tracks the port allocations that have failed on a mapped IP address because the maximum limit of 65536 has exceeded or the mapped IP address is not configured.
<code>tcp_err_ip_portalloc_failed</code>	This counter tracks the port allocations that have failed on a subnet IP address or virtual server IP address because the maximum limit of 65536 has exceeded.
<code>tcp_err_stray_packets</code>	This counter tracks the packets received on a connection whose state is not maintained on NetScaler.
<code>tcp_err_send_rst</code>	This counter tracks the reset packets sent to a client or a server.
<code>tcp_err_bad_state_connections</code>	This counter tracks the connections that are not in a valid TCP state.
<code>tcp_tot_fast_retransmit</code>	This counter tracks the TCP packets on which NetScaler performs a fast retransmission in response to three duplicate acknowledgments or a partial acknowledgment. The appliance assumes that the packet is lost and retransmits the packet before its time-out.
<code>tcp_err_1st_retransmit</code>	This counter tracks the packets retransmitted once by NetScaler.
<code>tcp_err_2nd_retransmit</code>	This counter tracks the packets retransmitted twice by NetScaler.
<code>tcp_err_3rd_retransmit</code>	This counter tracks the packets retransmitted three times by NetScaler.
<code>tcp_err_4th_retransmit</code>	This counter tracks the packets retransmitted four times by NetScaler.
<code>tcp_err_5th_retransmit</code>	This counter tracks the packets retransmitted five times by NetScaler.
<code>tcp_err_6th_retransmit</code>	This counter tracks the packets retransmitted six times by NetScaler.
<code>tcp_err_7th_retransmit</code>	This counter tracks the packets retransmitted seven times by NetScaler. If this retransmission fails, the appliance terminates the connection.

Counter	Description
<code>tcp_err_data_after_fin</code>	This counter tracks the bytes received following a connection termination request. This error is usually caused by reordering packets during transmission.
<code>tcp_err_threshold</code>	This counter tracks the reset packets dropped because the default threshold of 100 resets per 10 milliseconds has exceeded. This is a configurable value using the <code>set ns ratecontrol</code> command.
<code>tcp_err_oowindow</code>	This counter tracks the packets received that are out of the current advertised window.
<code>tcp_err_in_congestion_syndropped</code>	This counter tracks the <code>SYN</code> packets dropped because of network congestion.
<code>tcp_tot_bdg_mac_moved</code>	This counter tracks the number of times bridging registered MAC is moved.
<code>tcp_tot_bdg_collisions</code>	This counter tracks the number of bridging table collisions.
<code>tcp_err_bdg_muted</code>	This counter tracks the number of bridging related interface mutes.
<code>bdg_tot_pkts</code>	This counter tracks the total amount of bridged traffic.
<code>bdg_tot_Mbits</code>	This counter tracks the total number of bridged Mb.
<code>tcp_cur_ServerConn</code>	This counter tracks the server connections, including connections in the <code>Opening</code> , <code>Established</code> , and <code>Closing</code> state.
<code>tcp_cur_ServerConnClosing</code>	This counter tracks the server connections in the <code>Closing</code> state, which indicates that the connection termination process has initiated but it is not complete.
<code>tcp_cur_ServerConnEst</code>	This counter tracks the server connections in the <code>Established</code> state, which indicates that data transfer can occur between NetScaler and the server.
<code>tcp_cur_ServerConnOpening</code>	This counter tracks the server connections in the <code>Opening</code> state, which indicates that the handshakes are not yet complete.

Counter	Description
<code>tcp_cur_ClientConn</code>	This counter tracks the client connections, including connections in the <code>Opening</code> , <code>Established</code> , and <code>Closing</code> state.
<code>tcp_cur_ClientConnClosing</code>	This counter tracks the client connections in the <code>Closing</code> state, which indicates that the connection termination process has initiated but is not complete.
<code>tcp_cur_ClientConnEst</code>	This counter tracks the current client connections in the <code>Established</code> state, which indicates that data transfer can occur between NetScaler and the client.
<code>tcp_cur_ClientConnOpening</code>	This counter tracks the client connections in the <code>Opening</code> state, which indicates that the handshakes are not yet complete.
<code>tcp_cur_surgequeueLen</code>	This counter tracks the connections in the surge queue. When NetScaler cannot open a connection to the server, for example when maximum connections are reached, the appliance queues these requests.
<code>tcp_cur_GlobalReusePool</code>	This counter tracks the spare connections available. The connection on the server is not closed after completing the request from the first client to save time and resources in establishing another connection for a new client. This connection is available for serving future requests.
<code>tcp_cur_active_server_conn</code>	This counter tracks connections to a server currently responding to requests.
<code>tcp_cur_nServers</code>	This counter tracks the number of physical servers that NetScaler has established connections.
<code>tcp_tot_reuse_hit</code>	This counter tracks the total number of client transactions found with the server connection in the reuse-pool.

Application security and API security metrics

This section contains information about a set of counters related to application security.

Bot metrics

The following table lists a set of metrics related to the bot profile.

counter name	Description
<code>bot_Requests_profile</code>	Specifies the number of HTTP or HTTPS requests sent to your protected web servers via the bot profile.
<code>bot_Responses_profile</code>	Specifies the number of HTTP or HTTPS responses sent by your protected web servers via the bot profile.
<code>bot_req_bytes_profile</code>	Specifies the number of bytes transferred for requests.
<code>bot_res_bytes_profile</code>	Specifies the number of bytes transferred for responses.
<code>bot_tot_drop_profile</code>	Specifies the total number of drops by the bot profile.
<code>bot_tot_log_profile</code>	Specifies the total number of logs by the bot profile.
<code>bot_tot_redirect_profile</code>	Specifies the total number of redirects by the bot profile.
<code>bot_tot_reset_profile</code>	Specifies the total number of resets by the bot profile.
<code>bot_viol_black_list_drop_profile</code>	Specifies the number of block list violations dropped by the bot profile.
<code>bot_viol_black_list_log_profile</code>	Specifies the number of block list violations logged by the bot profile.
<code>bot_viol_black_list_profile</code>	Specifies the number of block list violations seen by the bot profile.
<code>bot_viol_black_list_redirect_profile</code>	Specifies the number of block list violations redirected by the bot profile to a different webpage or web server.
<code>bot_viol_black_list_reset_profile</code>	Specifies the number of block list violations reset by the bot profile.

counter name	Description
bot_viol_captcha_drop_profile	Specifies the number of CAPTCHA challenge failures dropped by the bot profile.
bot_viol_captcha_log_profile	Specifies the number of CAPTCHA challenge failures logged by the bot profile.
bot_viol_captcha_profile	Specifies the number of CAPTCHA challenge failures seen by the bot profile.
bot_viol_captcha_redirect_profile	Specifies the number of CAPTCHA challenge failures redirected by the bot profile.
bot_viol_captcha_reset_profile	Specifies the number of CAPTCHA challenge failures reset by the bot profile.
bot_viol_device_fingerprint_captcha_profile	Specifies the number of device fingerprint violation requests for which a CAPTCHA challenge was sent due to the bot profile.
bot_viol_device_fingerprint_drop_profile	Specifies the number of device fingerprint violations dropped by the bot profile.
bot_viol_device_fingerprint_log_profile	Specifies the number of device fingerprint violations logged by the bot profile.
bot_viol_device_fingerprint_profile	Specifies the number of device fingerprint violations seen by the bot profile.
bot_viol_device_fingerprint_redirect_profile	Specifies the number of device fingerprint violations requests redirected by the bot profile to a different webpage or web server.
bot_viol_device_fingerprint_reset_profile	Specifies the number of device fingerprint violations reset by the bot profile.
bot_viol_iprep_captcha_profile	Specifies the number of IP reputation violation requests for which a CAPTCHA challenge was sent.
bot_viol_iprep_drop_profile	Specifies the number of IP reputation violations dropped by the bot profile.
bot_viol_iprep_log_profile	Specifies the number of IP reputation violations logged by the bot Profile.
bot_viol_iprep_profile	Specifies the number of IP reputation violations seen by the bot profile.
bot_viol_iprep_redirect_profile	Specifies the number of IP reputation violations requests redirected by the bot profile to a different webpage or web server.

counter name	Description
<code>bot_viol_iprep_reset_profile</code>	Specifies the number of IP reputation violations reset by the bot profile.
<code>bot_viol_rate_limit_drop_profile</code>	Specifies the number of rate limiting violations dropped by the bot profile.
<code>bot_viol_rate_limit_log_profile</code>	Specifies the number of rate limiting violations logged by the bot profile.
<code>bot_viol_rate_limit_profile</code>	Specifies the number of rate limiting violations seen by the bot profile.
<code>bot_viol_rate_limit_redirect_profile</code>	Specifies the number of rate limiting violations requests redirected by the bot profile to a different webpage or web server.
<code>bot_viol_rate_limit_reset_profile</code>	Specifies the number of rate-limiting violations reset by the bot profile.
<code>bot_viol_static_signature_drop_profile</code>	Specifies the number of static signature violations dropped by the bot profile.
<code>bot_viol_static_signature_log_profile</code>	Specifies the number of static signature violations logged by the bot profile.
<code>bot_viol_static_signature_profile</code>	Specifies the number of static signature violations seen by the bot profile.
<code>bot_viol_static_signature_redirect_profile</code>	Specifies the number of static signature violations redirected by the bot profile to a different webpage or web server.
<code>bot_viol_static_signature_reset_profile</code>	Specifies the number of static signature violations reset by the bot profile to a different webpage or web server.
<code>bot_viol_tps_captcha_profile</code>	Specifies the number of transactions per second (TPS) violation requests for which a CAPTCHA challenge was sent due to the bot profile.
<code>bot_viol_tps_drop_profile</code>	Specifies the number of TPS violations dropped by the bot profile.
<code>bot_viol_tps_log_profile</code>	Specifies the number of TPS violations logged by the bot profile.
<code>bot_viol_tps_profile</code>	Specifies the number of TPS violations observed by the bot profile.

counter name	Description
<code>bot_viol_tps_redirect_profile</code>	Specifies the number of TPS violations requests redirected by the bot profile to a different webpage or web server.
<code>bot_viol_tps_reset_profile</code>	Specifies the number of TPS violations reset by the bot profile.
<code>bot_viol_trap_drop_profile</code>	Specifies the number of bot trap violations dropped by the bot profile.
<code>bot_viol_trap_log_profile</code>	Specifies the number of bot trap violations logged by the bot profile.
<code>bot_viol_trap_profile</code>	Specifies the number of bot trap violations observed by the bot profile.
<code>bot_viol_trap_redirect_profile</code>	Specifies the number of bot trap violations requests redirected by the bot profile to a different webpage or web server.
<code>bot_viol_trap_reset_profile</code>	Specifies the number of bot trap violations reset by the bot profile.
<code>bot_viol_white_list_log_profile</code>	Specifies the number of allow list violations logged by the bot profile.
<code>bot_viol_white_list_profile</code>	Specifies the number of allow list violations observed by the bot profile.

NetScaler system metrics

This section provides information about metrics related to NetScaler infrastructure.

System metrics

System metrics are used for NetScaler system resource monitoring such as CPU, and memory. The following table lists a set of NetScaler system metrics and description.

Metrics name	Description
<code>allnic_tot_rx_mbit</code>	This counter tracks the amount of data (in MB) received by the NetScaler appliance.
<code>allnic_tot_tx_mbits</code>	This counter tracks the amount of data (in MB) transmitted by the NetScaler appliance.

Metrics name	Description
<code>cpu_usage</code>	This counter tracks the CPU utilization percentage.
<code>cpu_use</code>	This counter tracks the CPU utilization: percentage * 10.
<code>cur_moninfo</code>	This counter tracks the number of monitor bindings defined on this NetScaler appliance.
<code>cur_monitor</code>	This counter tracks the number of monitors defined on this NetScaler appliance.
<code>cur_server</code>	This counter tracks the number of servers defined on this NetScaler appliance.
<code>cur_service</code>	This counter tracks the number of services defined on this NetScaler appliance.
<code>cur_servinfo</code>	This counter tracks the number of virtual server bindings on this NetScaler appliance.
<code>cur_svcgroup</code>	This counter tracks the number of service groups defined on this NetScaler appliance.
<code>cur_svcgroup_svcitem</code>	This counter tracks the number of service group members defined on this NetScaler appliance.
<code>cur_svcgroup_vsrvitem</code>	This counter tracks the number of virtual server, service group bindings on this NetScaler appliance.
<code>cur_syshealth_disk0_avail</code>	This counter tracks the available space in the <code>/flash</code> partition of the hard disk.
<code>cur_syshealth_disk0_errors</code>	This counter tracks the disk (<code>/flash</code>) error counter.
<code>cur_syshealth_disk0_usage</code>	This counter tracks the <code>cur_syshealth_disk0_errors</code> .
<code>cur_syshealth_disk0_size</code>	This counter tracks the size of the <code>/flash</code> partition of the hard disk.
<code>cur_syshealth_disk0_used</code>	This counter tracks the used space in the <code>/flash</code> partition of the hard disk.
<code>cur_syshealth_disk1_avail</code>	This counter tracks the available space in the <code>/var</code> partition of the hard disk.
<code>cur_syshealth_disk1_errors</code>	This counter tracks the number of errors on the <code>/var</code> partition of the hard disk.

Metrics name	Description
<code>cur_syshealth_disk1_pusage</code>	This counter tracks the used space in the <code>/var</code> partition of the disk, as a percentage. You can configure the used percentage with the <code>set snmp alarm DISK-USAGE-HIGH</code> command.
<code>cur_syshealth_disk1_size</code>	This counter tracks the size of the <code>/var</code> partition of the hard disk.
<code>cur_syshealth_disk1_used</code>	This counter tracks the used space in the <code>/var</code> partition of the hard disk.
<code>cur_syshealth_fan0</code>	This counter tracks the system fan speed and the acceptable range is 3000–6000 RPM. You can configure the system fan speed by using the <code>set snmp alarm FAN-SPEED-LOW</code> command to set the lower limit.
<code>cur_syshealth_fan1</code>	This counter tracks the speed of system fan 1.
<code>cur_syshealth_fan2</code>	This counter tracks the speed of system fan 2.
<code>cur_syshealth_fan3</code>	This counter tracks the speed of fan 0 if the associated pin is connected to the health monitoring chip.
<code>cur_syshealth_fan4</code>	This counter tracks the speed of fan 1 if the associated pin is connected to the health monitoring chip.
<code>cur_syshealth_fan5</code>	This counter tracks the speed of fan 2 if the associated pin is connected to the health monitoring chip.
<code>cur_syshealth_fan6</code>	This counter tracks the speed of fan 3 if the associated pin is connected to the health monitoring chip.
<code>cur_syshealth_fancpu0</code>	This counter tracks the CPU fan 0 speed. The acceptable range is 3000–6000 RPM. You can configure CPU fan 0 speed by using the <code>set snmp alarm FAN-SPEED-LOW</code> command to set the lower limit.

Metrics name	Description
<code>cur_syshealth_fancpu1</code>	This counter tracks the speed of CPU fan 1. The acceptable range is 3000–6000 RPM. You can configure CPU fan 1 speed by using the <code>set snmp alarm FAN-SPEED-LOW</code> command to set the lower limit.
<code>cur_syshealth_ps1fail</code>	This counter tracks the power supply 1 failure status.
<code>cur_syshealth_ps2fail</code>	This counter tracks the power supply 2 failure status.
<code>cur_syshealth_ps3fail1</code>	This counter tracks the power supply 3 failure status.
<code>cur_syshealth_ps4fail</code>	This counter tracks the power supply 4 failure status.
<code>cur_syshealth_tcpu0</code>	This counter tracks the CPU 0 temperature. You can configure CPU 0 temperature by using the <code>set snmp alarm TEMPERATURE-HIGH</code> command to set the upper limit.
<code>cur_syshealth_tcpu1</code>	This counter tracks the CPU 1 temperature. You can configure CPU 1 temperature by using the <code>set snmp alarm TEMPERATURE-HIGH</code> command to set the upper limit.
<code>cur_syshealth_temp0</code>	This counter tracks the temperature of a device connected to the health monitoring chip through pin 0.
<code>cur_syshealth_temp1</code>	This counter tracks the temperature of a device connected to the health monitoring chip through pin 1.
<code>cur_syshealth_temp2</code>	This counter tracks the temperature of a device connected to the health monitoring chip through pin 2.
<code>cur_syshealth_temp3</code>	This counter tracks the temperature of a device connected to the health monitoring chip through pin 3.
<code>cur_syshealth_tint</code>	This counter tracks the internal temperature of the health monitoring chip. You can configure the internal temperature by using the <code>set snmp alarm TEMPERATURE-HIGH</code> command to set the upper limit.

Metrics name	Description
<code>cur_syshealth_v12n</code>	This counter tracks the power supply -12 V output. The acceptable range is -13.20--10.80 volts.
<code>cur_syshealth_v12p</code>	This counter tracks the power supply +12 V output. The acceptable range is 10.80-13.20 volts.
<code>cur_syshealth_v33main</code>	You can configure the standby 3.3 V supply voltage by using the <code>set snmp alarm VOLTAGE-LOW</code> command to set the lower limit and the <code>set snmp alarm VOLTAGE-HIGH</code> command to set the upper limit.
<code>cur_syshealth_v33stby</code>	This counter tracks the output of standby power supply +3.3 V. The acceptable range is 2.970-3.630 volts.
<code>cur_syshealth_v50n</code>	This counter tracks the output of power supply -5 V. The acceptable range is -5.50--4.50 volts.
<code>cur_syshealth_v50p</code>	This counter tracks the output of power supply +5 V.
<code>cur_syshealth_v5sb</code>	This counter tracks the output of power supply 5 V standby.
<code>cur_syshealth_vbat</code>	This counter tracks the output of onboard battery power supply.
<code>cur_syshealth_vcc0</code>	This counter tracks the CPU core 0 voltage. The acceptable range is 1.080-1.650 volts.
<code>cur_syshealth_vcc1</code>	This counter tracks the CPU core 1 voltage. The acceptable range is 1.080-1.650 volts. If CPU 1 is not connected to the health monitoring chip, then display shows the voltage of CPU 0.
<code>cur_syshealth_volt0</code>	This counter tracks the voltage of a device connected to the health monitoring chip through pin 0.
<code>cur_syshealth_volt1</code>	This counter tracks the voltage of a device connected to the health monitoring chip through pin 1.

Metrics name	Description
<code>cur_syshealth_volt2</code>	This counter tracks the voltage of a device connected to the health monitoring chip through pin 2.
<code>cur_syshealth_volt3</code>	This counter tracks the voltage of a device connected to the health monitoring chip through pin 3.
<code>cur_syshealth_volt4</code>	This counter tracks the voltage of a device connected to the health monitoring chip through pin 4.
<code>cur_syshealth_volt5</code>	This counter tracks the voltage of a device connected to the health monitoring chip through pin 5.
<code>cur_syshealth_volt6</code>	This counter tracks the voltage of a device connected to the health monitoring chip through pin 6.
<code>cur_syshealth_volt7</code>	This counter tracks the voltage of a device connected to a health monitoring chip through pin 7.
<code>cur_syshealth_vsen2</code>	This counter tracks the voltage sensor 2 input.
<code>cur_syshealth_vtt</code>	This counter tracks the Intel CPU VTT power (volts).
<code>master_cpu_usage</code>	This counter tracks the CPU 0 (currently the main CPU) utilization, as a percentage of capacity.
<code>master_cpu_use</code>	This counter tracks the CPU0 utilization: percentage * 10.
<code>mem_cur_feature_allocpercen</code>	This counter tracks the percentage of NetScaler appliance memory used by the feature.
<code>mem_cur_feature_allocsize</code>	This counter tracks the total current NetScaler appliance memory available for use by the feature, in kilobytes.
<code>mem_err_feature_alloc_failed</code>	This counter tracks the memory allocation failure for a particular feature.
<code>mem_tot_allocated</code>	This counter tracks the currently allocated memory, in MB.
<code>mem_tot_allocated_pcmt</code>	This counter tracks the currently allocated memory in percent.

Metrics name	Description
<code>mem_tot_MB</code>	This counter tracks the total main memory available for use by the packet engine (PE), in MB.
<code>mem_tot_use_MB</code>	This counter tracks the total NetScaler memory in use, in MB.
<code>mem_usage_pcnt</code>	This counter tracks the percentage of memory utilization on NetScaler.
<code>mem_usage_percent</code>	This counter tracks the percentage of memory utilization on a NetScaler appliance.
<code>mem_use_MB</code>	This counter tracks the main memory currently in use, in MB.
<code>mgmt_cpu_usage_pcn</code>	This counter tracks the management CPU utilization percentage.
<code>mgmt_cpu_use</code>	This counter tracks the management CPU utilization: percentage * 10.
<code>ns_interval</code>	This counter tracks the interval in seconds between performance monitoring records taken on the NetScaler appliance.
<code>shmem_cur_alloc_pcnt</code>	This counter tracks the shared memory in use in percentage.
<code>shmem_cur_alloctsize</code>	This counter tracks the shared memory (MB) in use.
<code>shmem_max_allowed</code>	This counter tracks the total shared memory (MB) allowed for allocation.
<code>slave_cpu_usage</code>	This counter tracks the CPU 1 (currently the subordinate CPU) utilization, as a percentage of capacity. Not applicable for a single-CPU system.
<code>slave_cpu_use</code>	This counter tracks the CPU 1 utilization, percentage * 10.
<code>sys_cpus</code>	This counter tracks the number of CPUs on the NetScaler appliance.
<code>sys_cpus_1</code>	This counter tracks the number of CPUs on the NetScaler appliance.
<code>sys_cur_duration_sincelstart</code>	This counter tracks the seconds after the NetScaler appliance started.
<code>sys_memorysize_MB</code>	This counter tracks the total amount of system memory, in MB.

Metrics name	Description
<code>sys_starttime</code>	This counter tracks the time when the NetScaler appliance was last started.
<code>sys_tot_config_changes</code>	This counter tracks the number of times a configuration change was made on the NetScaler appliance.
<code>sys_tot_save_configs</code>	This counter tracks the number of times the system configuration was saved on the NetScaler appliance.

SSL metrics

The following table lists some of the SSL counters and description.

Metrics name	Description
<code>ssl_tot_sslInfo_TotalSessionCount</code>	Specifies the number of SSL sessions on the NetScaler appliance.
<code>ssl_tot_sslInfo_TotalTxCount</code>	Specifies the number of SSL transactions on the NetScaler.
<code>ssl_tot_sslInfo_SSLe2TxCount</code>	Specifies the number of SSLe2 transactions on the NetScaler.
<code>ssl_tot_sslInfo_SSLe3TxCount</code>	Specifies the number of SSLe3 transactions on the NetScaler.
<code>ssl_tot_sslInfo_TLSv1TxCount</code>	Specifies the number of TLSv1 transactions on the NetScaler.
<code>ssl_tot_sslInfo_TLSv11TxCount</code>	Specifies the number of TLS1.1 transactions on the NetScaler.
<code>ssl_tot_sslInfo_TLSv12TxCount</code>	Specifies the number of TLSv1.2 transactions on the NetScaler.
<code>ssl_tot_sslInfo_TLSv13TxCount</code>	Specifies the number of TLSv1.3 transactions on the NetScaler.
<code>ssl_tot_sslInfo_DTLSv1TxCount</code>	Specifies the number of DTLSv1 transactions on the NetScaler.
<code>ssl_tot_sslInfo_DTLSv12TxCount</code>	Specifies the number of DTLSv1.2 transactions on the NetScaler.
<code>ssl_tot_sslInfo_SSLe2SessCount</code>	Specifies the number of SSLe2 sessions on the NetScaler.

Metrics name	Description
<code>ssl_tot_sslInfo_SSLe3SessCount</code>	Specifies the number of SSLv3 sessions on the NetScaler.
<code>ssl_tot_sslInfo_TLSv1SessCount</code>	Specifies the number of TLSv1 sessions on the NetScaler.
<code>ssl_tot_sslInfo_TLSv11SessCount</code>	Specifies the number of TLSv1.1 sessions on the NetScaler.
<code>ssl_tot_sslInfo_TLSv12SessCount</code>	Specifies the number of TLSv1.2 sessions on the NetScaler.
<code>ssl_tot_sslInfo_TLSv13SessCount</code>	Specifies the number of TLSv1.3 sessions on the NetScaler.
<code>ssl_tot_sslInfo_DTLSv1SessCount</code>	Specifies the number of DTLSv1 sessions on the NetScaler.
<code>ssl_tot_sslInfo_DTLSv12SessCount</code>	Specifies the number of DTLSv1.2 sessions on the NetScaler.
<code>ssl_tot_sslInfo_SessionNew</code>	Specifies the number of new SSL sessions created on the NetScaler.
<code>ssl_tot_sslInfo_SessionMiss</code>	Specifies the number of SSL session reuse misses on the NetScaler.
<code>ssl_tot_sslInfo_SessionHits</code>	Specifies the number of SSL session reuse hits on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TotalSessionCount</code>	Specifies the number of back-end SSL sessions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_SSLe3SessCount</code>	Specifies the number of back-end SSLv3 sessions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TLSv1SessCount</code>	Specifies the number of back-end TLSv1 sessions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TLSv11SessCount</code>	Specifies the number of back-end TLSv1.1 sessions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TLSv12SessCount</code>	Specifies the number of back-end TLSv1.2 sessions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_DTLSv1SessCount</code>	Specifies the number of back-end DTLSv1 sessions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TotalSessMult</code>	Specifies the number of back-end SSL session multiplex attempts on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TotalSessMultSucc</code>	Specifies the number of back-end SSL session multiplex successes on the NetScaler.

Metrics name	Description
<code>ssl_tot_sslInfo_Backend_TotalSessMuxFailures</code>	Specifies the number of back-end SSL session multiplex failures on the NetScaler.
<code>ssl_tot_enc_bytes</code>	Specifies the number of bytes encrypted on the NetScaler.
<code>ssl_tot_dec_bytes</code>	Specifies the number of bytes decrypted on the NetScaler.
<code>ssl_tot_sslServerInRecords</code>	Specifies the number of SSL servers in record on the NetScaler.
<code>ssl_tot_sslInfo_SessionRenegotiate</code>	Specifies the number of SSL session renegotiations on the NetScaler.
<code>ssl_tot_sslInfo_SSLv3Renego</code>	Specifies the number of session renegotiations done on SSLv3.
<code>ssl_tot_sslInfo_TLSv1Renego</code>	Specifies the number of SSL session renegotiations done on TLSv1.
<code>ssl_tot_sslInfo_TLSv11Renego</code>	Specifies the number of SSL session renegotiations done on TLSv1.1.
<code>ssl_tot_sslInfo_TLSv12Renego</code>	Specifies the number of SSL session renegotiations done on TLSv1.2.
<code>ssl_tot_sslInfo_DTLSv1Renego</code>	Specifies the number of SSL session renegotiations done on DTLSv1.
<code>ssl_tot_sslInfo_DTLSv12Renego</code>	Specifies the number of SSL session renegotiations done on DTLSv1.2.
<code>ssl_tot_sslInfo_KeyEx_RSA_512</code>	Specifies the number of RSA 512-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_RSA_1024</code>	Specifies the number of RSA 1024-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_RSA_2048</code>	Specifies the number of RSA 2048-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_RSA_3072</code>	Specifies the number of RSA 3072-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_RSA_4096</code>	Specifies the number of RSA 4096-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_DH_512</code>	Specifies the number of Diffie-Hellman 512-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_DH_1024</code>	Specifies the number of Diffie-Hellman 1024-bit key exchanges on the NetScaler.

Metrics name	Description
<code>ssl_tot_sslInfo_KeyEx_DH_2048</code>	Specifies the number of Diffie-Hellman 2048-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_DH_4096</code>	Specifies the number of Diffie-Hellman 4096-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_ECDHE_curve_se</code>	Specifies the number of 521 Elliptical Curve Diffie-Hellman key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_ECDHE_curve_se</code>	Specifies the number of 384 Elliptical Curve Diffie-Hellman key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_ECDHE_curve_se</code>	Specifies the number of 256 Elliptical Curve Diffie-Hellman key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_ECDHE_curve_se</code>	Specifies the number of 224 Elliptical Curve Diffie-Hellman key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_ECDHE_Tx</code>	Specifies the total number of Elliptic Curve Diffie-Hellman Ephemeral (ECDHE) transactions on NetScaler.
<code>ssl_tot_sslInfo_Cipher_RC4_40</code>	Specifies the number of RC4 40-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_RC4_56</code>	Specifies the number of RC4 56-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_RC4_64</code>	Specifies the number of RC4 64-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_RC4_128</code>	Specifies the number of RC4 128-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_DES_40</code>	Specifies the number of DES 40-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_DES_56</code>	Specifies the number of DES 56-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_3DES_168</code>	Specifies the number of DES 168-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_AES_128</code>	Specifies the number of AES 128-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_AES_256</code>	Specifies the number of AES 256-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_RC2_40</code>	Specifies the number of RC2 40-bit cipher encryptions on the NetScaler.

Metrics name	Description
<code>ssl_tot_sslInfo_Cipher_RC2_56</code>	Specifies the number of RC2 56-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_RC2_128</code>	Specifies the number of RC2 128-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_AESGCM_128</code>	Specifies the number of AEC-GCM 128-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_AESGCM_256</code>	Specifies the number of AEC-GCM 256-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Cipher_NULL</code>	Specifies the number of Null cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Hash_MD5</code>	Specifies the number of MD5 hashes on the NetScaler.
<code>ssl_tot_sslInfo_Hash_SHA</code>	Specifies the number of SHA hashes on the NetScaler.
<code>ssl_tot_sslInfo_Hash_SHA256</code>	Specifies the number of SHA256 hashes on the NetScaler.
<code>ssl_tot_sslInfo_Hash_SHA384</code>	Specifies the number of SHA384 hashes on the NetScaler.
<code>ssl_tot_sslInfo_SSLv2HandskCount</code>	Specifies the number of handshakes on SSLv2 on the NetScaler.
<code>ssl_tot_sslInfo_SSLv3HandskCount</code>	Specifies the number of handshakes on SSLv3 on the NetScaler.
<code>ssl_tot_sslInfo_TLSv1HandskCount</code>	Specifies the number of SSL handshakes on TLSv1 on the NetScaler.
<code>ssl_tot_sslInfo_TLSv11HandskCount</code>	Specifies the number of SSL handshakes on TLSv1.1 on the NetScaler.
<code>ssl_tot_sslInfo_TLSv12HandskCount</code>	Specifies the number of SSL handshakes on TLSv1.2 on the NetScaler.
<code>ssl_tot_sslInfo_TLSv13HandskCount</code>	Specifies the number of SSL handshakes on TLSv1.3 on the NetScaler.
<code>ssl_tot_sslInfo_DTLSv1HandskCount</code>	Specifies the number of SSL handshakes on DTLSv1 on the NetScaler.
<code>ssl_tot_sslInfo_DTLSv12HandskCount</code>	Specifies the number of SSL handshakes on DTLSv1.2 on the NetScaler.
<code>ssl_tot_sslEvent_SSLv2CA</code>	Specifies the number of client authentications done on SSLv2.
<code>ssl_tot_sslEvent_SSLv3CA</code>	Specifies the number of client authentications done on SSLv3.

Metrics name	Description
<code>ssl_tot_sslEvent_TLSv1CA</code>	Specifies the number of client authentications done on TLSv1.
<code>ssl_tot_sslEvent_TLSv11CA</code>	Specifies the number of client authentications done on TLSv1.1.
<code>ssl_tot_sslEvent_TLSv12CA</code>	Specifies the number of client authentications done on TLSv1.2.
<code>ssl_tot_sslEvent_TLSv13CA</code>	Specifies the number of client authentications done on TLSv1.3.
<code>ssl_tot_sslEvent_DTLSv1CA</code>	Specifies the number of client authentications done on DTLSv1.
<code>ssl_tot_sslEvent_DTLSv12CA</code>	Specifies the number of client authentications done on DTLSv1.2.
<code>ssl_tot_sslInfo_Auth_RSA</code>	Specifies the number of RSA authentications on the NetScaler.
<code>ssl_tot_sslInfo_Auth_DH</code>	Specifies the number of Diffie-Hellman authentications on the NetScaler.
<code>ssl_tot_sslInfo_Auth_DSS</code>	Total Specifies the number of times DSS authorization is used on the NetScaler.
<code>ssl_tot_sslInfo_Auth_ECDSA</code>	Total Specifies the number of times ECDSA authorization is used on the NetScaler.
<code>ssl_tot_sslInfo_Auth_NULL</code>	Specifies the number of Null authentications on the NetScaler.
<code>ssl_tot_sslInfo_Backend_SessionRenego</code>	Specifies the number of back-end SSL session renegotiations on the NetScaler.
<code>ssl_tot_sslInfo_Backend_SSLv3Renego</code>	Specifies the number of back-end SSLv3 session renegotiations on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TLSv1Renego</code>	Specifies the number of back-end TLSv1 session renegotiations on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TLSv11Renego</code>	Specifies the number of back-end TLSv1.1 session renegotiations on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TLSv12Renego</code>	Specifies the number of back-end TLSv1.2 session renegotiations on the NetScaler.
<code>ssl_tot_sslInfo_Backend_DTLSv1Renego</code>	Specifies the number of back-end DTLSv1 session renegotiations on the NetScaler.
<code>ssl_tot_sslInfo_Backend_KeyEx_RSA_512</code>	Specifies the number of back-end RSA 512-bit key exchanges on the NetScaler.

Metrics name	Description
<code>ssl_tot_sslInfo_Backend_KeyEx_RSA_1024</code>	Specifies the number of back-end RSA 1024-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_Backend_KeyEx_RSA_2048</code>	Specifies the number of back-end RSA 2048-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_Backend_KeyEx_RSA_3072</code>	Specifies the number of back-end RSA 3072-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_Backend_KeyEx_RSA_4096</code>	Specifies the number of back-end RSA 4096-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_Backend_KeyEx_DH_512</code>	Specifies the number of back-end DH 512-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_Backend_KeyEx_DH_1024</code>	Specifies the number of back-end DH 1024-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_Backend_KeyEx_DH_2048</code>	Specifies the number of back-end DH 2048-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_Backend_KeyEx_DH_4096</code>	Specifies the number of back-end DH 4096-bit key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_backend_ecdhe_521</code>	Specifies the number of back-end ECDHE 521 curve Key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_backend_ecdhe_384</code>	Specifies the number of back-end ECDHE 384 curve Key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_backend_ecdhe_256</code>	Specifies the number of back-end ECDHE 256 curve Key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_KeyEx_backend_ecdhe_224</code>	Specifies the number of back-end ECDHE 224 curve Key exchanges on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_RC4_40</code>	Specifies the number of back-end RC4 40-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_RC4_56</code>	Specifies the number of back-end RC4 56-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_RC4_64</code>	Specifies the number of back-end RC4 64-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_RC4_128</code>	Specifies the number of back-end RC4 128-bit cipher encryptions on the NetScaler.

Metrics name	Description
<code>ssl_tot_sslInfo_Backend_Cipher_DES_40</code>	Specifies the number of back-end DES 40-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_DES_56</code>	Specifies the number of back-end DES 56-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_3DES_168</code>	Specifies the number of back-end 3DES 168-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_AES_128</code>	Specifies the back-end AES 128-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_AES_256</code>	Specifies the back-end AES 256-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_RC2_40</code>	Specifies the number of back-end RC2 40-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_RC2_56</code>	Specifies the number of back-end RC2 56-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_RC2_128</code>	Specifies the number of back-end RC2 128-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_AESGCM_128</code>	Specifies the number of back-end AES-GCM 128-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_AESGCM_256</code>	Specifies the back-end AES-GCM 256-bit cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Cipher_NULL</code>	Specifies the number of back-end null cipher encryptions on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Hash_MD5</code>	Specifies the number of back-end MD5 hashes on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Hash_SHA</code>	Specifies the number of back-end SHA hashes on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Hash_SHA256</code>	Specifies the number of back-end SHA256 hashes on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Hash_SHA384</code>	Specifies the number of back-end SHA384 hashes on the NetScaler.
<code>ssl_tot_sslInfo_Backend_SSLv3Handshakes</code>	Specifies the number of back-end SSLv3 handshakes on the NetScaler.

Metrics name	Description
<code>ssl_tot_sslInfo_Backend_TLSv1Handshakes</code>	Specifies the number of back-end TLSv1 handshakes on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TLSv11Handshakes</code>	Specifies the number of back-end TLSv1.1 handshakes on the NetScaler.
<code>ssl_tot_sslInfo_Backend_TLSv12Handshakes</code>	Specifies the number of back-end TLSv1.2 handshakes on the NetScaler.
<code>ssl_tot_sslInfo_Backend_DTLSv1Handshakes</code>	Specifies the number of back-end DTLSv1 handshakes on the NetScaler.
<code>ssl_tot_sslEvent_Backend_SSLv3CA</code>	Specifies the number of back-end SSLv3 client authentications on the NetScaler.
<code>ssl_tot_sslEvent_Backend_TLSv1CA</code>	Specifies the number of back-end TLSv1 client authentications on the NetScaler.
<code>ssl_tot_sslEvent_Backend_TLSv11CA</code>	Specifies the number of back-end TLSv1.1 client authentications on the NetScaler.
<code>ssl_tot_sslEvent_Backend_TLSv12CA</code>	Specifies the number of back-end TLSv1.2 client authentications on the NetScaler.
<code>ssl_tot_sslEvent_Backend_DTLSv1CA</code>	Specifies the number of back-end DTLSv1 client authentications on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Auth_RSA</code>	Specifies the number of back-end RSA authentications on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Auth_DH</code>	Specifies the number of back-end DH authentications on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Auth_DSS</code>	Specifies the number of back-end DSS authentications on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Auth_ECDSA</code>	Specifies the number of back-end ECDSA authentications on the NetScaler.
<code>ssl_tot_sslInfo_Backend_Auth_NULL</code>	Specifies the number of back-end null authentications on the NetScaler.
<code>ssl_tot_sslEvent_KeyExOff_RSA</code>	Specifies the number of RSA key exchanges offloaded to the cryptography card.
<code>ssl_tot_sslEvent_SignOff_RSA</code>	Specifies the number of RSA sign operations offloaded to the cryptography card.
<code>ssl_tot_sslEvent_KeyExOff_DH</code>	Specifies the number of DH key exchanges offloaded to the cryptography card.
<code>ssl_tot_sslEvent_BulkOff_RC4</code>	Specifies the number of RC4 encryptions offloaded to the cryptography card.

Metrics name	Description
<code>ssl_tot_sslEvent_BulkOff_DES</code>	Specifies the number of DES encryptions offloaded to the cryptography card.
<code>ssl_tot_sslEvent_BulkOff_AES</code>	Specifies the number of AES encryptions offloaded to the cryptography card.
<code>ssl_tot_sslEvent_BulkOff_AESGCM_128</code>	Specifies the number of AES-GCM 128-bit encryptions offloaded to the cryptography card.
<code>ssl_tot_sslEvent_BulkOff_AESGCM_256</code>	Specifies the number of AES-GCM 256-bit encryptions offloaded to the cryptography card.
<code>ssl_tot_hw_enc_bytes</code>	Specifies the number of bytes encrypted in hardware.
<code>ssl_tot_sw_enc_bytes</code>	Specifies the number of bytes encrypted in software.
<code>ssl_tot_enc_bytes_FE</code>	Specifies the number of bytes encrypted on the front-end.
<code>ssl_tot_hw_enc_bytes_FE</code>	Specifies the number of bytes encrypted in hardware on the front-end.
<code>ssl_tot_sw_enc_bytes_FE</code>	Specifies the number of bytes encrypted in software on the front-end.
<code>ssl_tot_enc_bytes_BE</code>	Specifies the number of bytes encrypted on the back-end.
<code>ssl_tot_hw_enc_bytes_BE</code>	Specifies the number of bytes encrypted in hardware on the back-end.
<code>ssl_tot_sw_enc_bytes_BE</code>	Specifies the number of bytes encrypted in software on the back-end.
<code>ssl_tot_hw_dec_bytes</code>	Specifies the number of bytes decrypted in hardware.
<code>ssl_tot_sw_dec_bytes</code>	Specifies the number of bytes decrypted in software.
<code>ssl_tot_dec_bytes_FE</code>	Specifies the number of bytes decrypted on the front-end.
<code>ssl_tot_hw_dec_bytes_FE</code>	Specifies the number of bytes decrypted in hardware on the front-end.
<code>ssl_tot_sw_dec_bytes_FE</code>	Specifies the number of bytes decrypted in software on the front-end.
<code>ssl_tot_dec_bytes_BE</code>	Specifies the number of bytes decrypted on the back-end.
<code>ssl_tot_hw_dec_bytes_BE</code>	Specifies the number of bytes decrypted in hardware on the back-end.

Metrics name	Description
<code>ssl_tot_sw_dec_bytes_BE</code>	Specifies the number of bytes decrypted in software on the back-end.
<code>ssl_cur_sslInfo_SPCBInUseCount</code>	Specifies the number of SPCB in use.
<code>ssl_cur_session_inuse</code>	Specifies the number of active SSL sessions on the NetScaler.
<code>ssl_cur_q_size</code>	Specifies the current queue size.
<code>ssl_cur_sslInfo_nsCardInQCount</code>	Specifies the number of current SSL card InQ counts.
<code>ssl_cur_sslInfo_cardinBlkQ</code>	Specifies the number of current SSL cards In BulkQ counts.
<code>ssl_cur_sslInfo_cardinKeyQ</code>	Specifies the number of current SSL cards In KeyQ counts.

Priority Load Balancing

May 2, 2023

The priority load balancing feature enables you to assign a priority number for each of the services or service groups that are bound to a priority load balancing virtual server. A service or a service group with the lowest number has the highest priority. The application traffic is distributed only to this service or a service group as long as this service or the service group is UP. The service or the service group that is assigned the next priority number becomes operational only when all the services or members in the service group with the highest priority are DOWN. However, when any of the services or a member in the service group with the highest priority becomes available again, the traffic is redirected to that service or the service group.

For example, consider the service groups SVG1, SVG2, and SVG3 that is bound to a priority load balancing virtual server. The maximum number of priority groups is set to three. You assign the priority for each group as follows:

- SVG1 –priority 1
- SVG2 –priority 2
- SVG3 –priority 3


In this scenario, the application traffic is directed to service group SVG1 because this group is assigned the lowest priority number. If all the members in SVG1 are DOWN, the traffic is distributed to service

group SVG2 as this group is assigned the next lower priority number. If all the members in SVG2 are also DOWN, the traffic is distributed to SVG3. However, when any of the members in SVG1 is UP, the traffic is redirected to SVG1 because SVG1 is assigned the lowest number and has the highest priority.

You can assign a priority to a service or a service group to upgrade the specific service or service group that has the highest priority, whenever required with minimal or no impact to the production traffic.

Also, if the upgrade is not successful, you can safely switch to the service or the service group that is next in the priority, with minimal or no impact to the production traffic.

The following figure illustrates the priority load balancing feature.

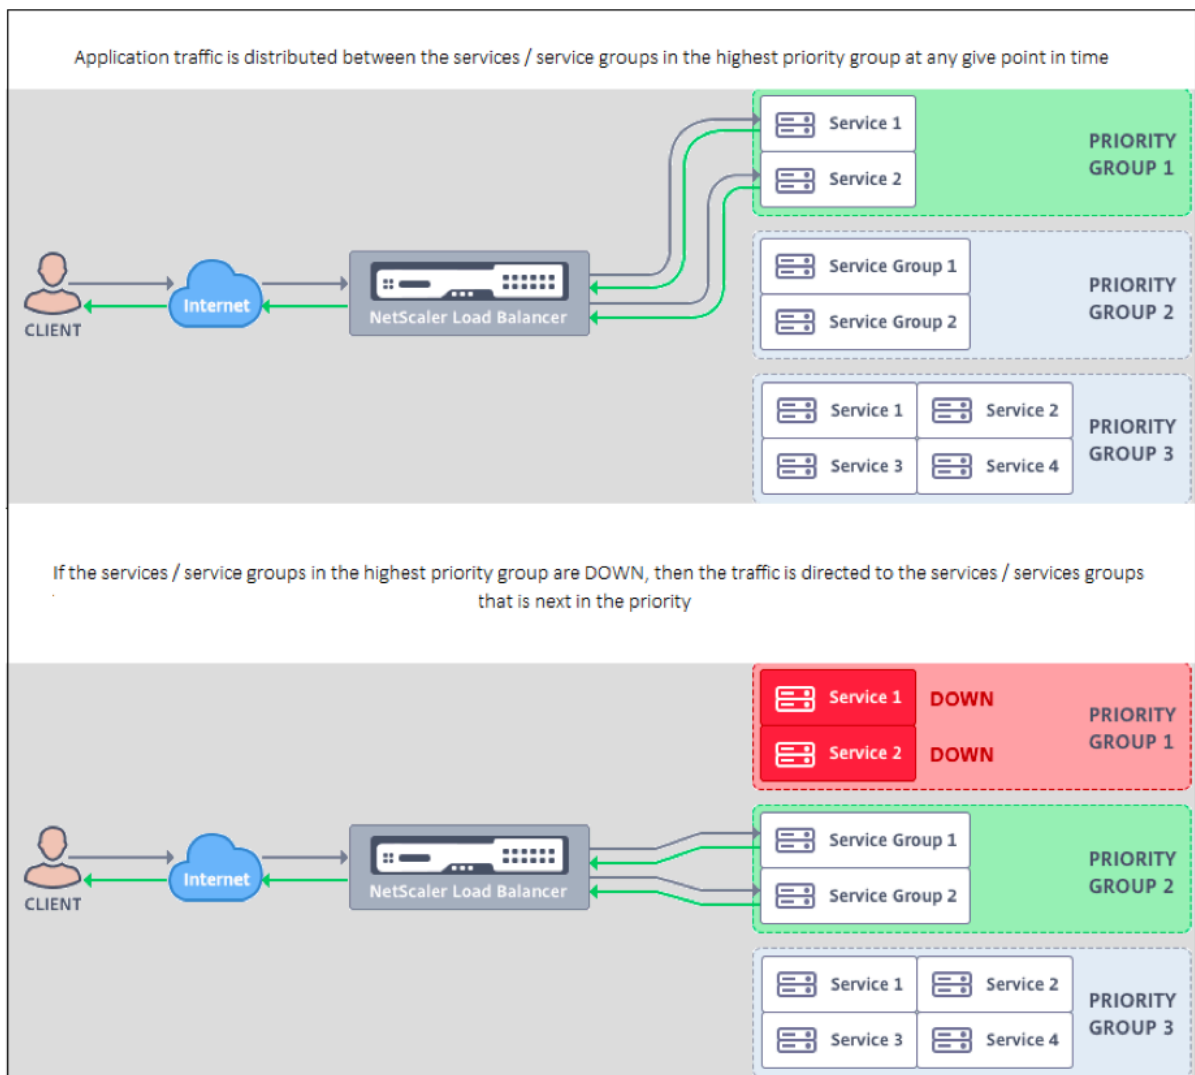

Configure priority load balancing

Note

The NetScaler priority load balancing configuration is supported only through the GUI. You cannot configure priority load balancing by using the CLI.

1. Navigate to **Traffic Management > Priority Load Balancing > Virtual *Servers** and specify the protocol for the virtual server, the IP address, and the port number of the virtual server.
2. In the **Maximum Priority Groups** box, enter the number of priority services or the service groups that can be bound to this virtual server. Default value is 2, and the maximum priority that can be set is 10. This parameter is noneditable after it is configured.

Note:

After you specify the maximum number of priority groups and click **OK**, a content switching virtual server and “n” number of backup load balancing virtual servers are created. The alphabet “n” represents the maximum number of priority groups.

For example, if you have entered the virtual server name as vs1, and have set the maximum priority group as 5, then a content switching virtual server with the name `_Pri.LB#vs1#MaxPri=5` and the following 5 load balancing virtual servers are created.

- `_Pri.LB#vs1#MaxPri=5_LB1`
- `_Pri.LB#vs1#MaxPri=5_LB2`
- `_Pri.LB#vs1#MaxPri=5_LB3`
- `_Pri.LB#vs1#MaxPri=5_LB4`
- `_Pri.LB#vs1#MaxPri=5_LB5`

3. After you specify the maximum number of priority groups and click **OK**, you are prompted to choose the services or service groups that must be bound to this content switching virtual server.
 - To bind services to the virtual server, click **Insert** in the Services section. Next, either select an existing service or create a service and set the priority for this service. Also, set the priority number at which this service must be bound.
 - To bind service groups to the virtual server, click **Insert** in the Service Groups section. Next, either select an existing service group or create a service group and set the priority for this service group. Also, set the priority number at which this service group must be bound.

Repeat step 3, depending on the maximum number of priority groups that you have entered.

Note:

- The service or the service group with the highest priority is bound to the load balancing virtual server that represents the highest priority.

For example, if you have assigned priority 1 and 2 to service groups `SG_App1` and `SG_App2` respectively, then `SG_App1` is bound to `virtual server _Pri.LB#vs1#MaxPri=5_LB1` and `SG_App2` is bound to `virtual server _Pri.LB#vs1#MaxPri=5_LB2` created in step 2.

- To change the priority of the service group or service, click the edit icon in the Priority Load Balancing Virtual Server page and change the priority as required.
 - You cannot set the load balancing methods and persistence for each virtual server explicitly, because the configuration of all load balancing virtual servers is identical.
4. From the Advanced Setting sections, complete the other configuration that meets your requirement.

Important:

The entities created during the priority load balancing configuration must not be modified from other tabs in the GUI and also from the CLI. It is recommended that you modify the priority load balancing entities from the Priority Load Balancing tab only.

NetScaler Extensions

May 2, 2023

NetScaler extensions can be used to customize a NetScaler appliance by writing extension code. Presently, policy extensions and protocol extensions are supported. Policy extensions can be used to extend the policy language. Protocol extensions can be used to add support for custom protocols on a NetScaler appliance.

NetScaler extensions are also supported on NetScaler CPX.

This document includes the following information:

- [NetScaler Extensions - Language Overview](#)
- [NetScaler Extensions - Library Reference](#)
- [NetScaler Extensions API Reference](#)
- [Protocol Extensions](#)
- [Policy Extensions](#)

NetScaler extensions - language overview

May 2, 2023

The extension language is based on the Lua 5.2 programming language. Lua provides a compact execution engine with good performance that is designed for embedding in C programs, like NetScaler software.

The extension language is dynamically typed, which means each object carries its own type information. Any variable can hold any type at any time during execution, so variable types are not declared.

The language is also free form, where white space between tokens is ignored. Statements may be separated by semicolons, but that is not required and usually not done. Blocks of statements are typically terminated by `end`. There are no brackets around blocks like the `{ and }` in C or Java.

Identifiers are sequences of letters (a through z and A through Z), digits (0 through 9), and underscores (`_`), not starting in a digit. Identifiers are case-sensitive, so `var`, `VAR`, and `Var` are all different identifiers.

Comments are started by `--`. Everything after `--` is ignored to the end of the line. Example:

```
-- This is a comment.
```

Simple types

May 2, 2023

The language allows values of the following simple types:

- Numbers
- Strings
- Boolean
- Nil
- Other Types

Numbers

All numbers (even integers) are represented by IEEE 754 floating point values. Integers up to 2^{54} have exact representations. Numeric values can be represented by:

- Signed and unsigned decimal integers (examples: 10, -5)
- Real numbers with decimal points (10.5, 3.14159)
- Real numbers with exponents (1.0e+10)
- Hexadecimals (0xffff0000)

NetScaler policy expressions have three numeric types:

- 32-bit integers (`num_at`)
- 64-bit integers (`unsigned_long_at`)
- 64-bit floating point (`double_at`)

All of these are converted into the number type when passed into an extension function, and numbers are converted to the expected policy numeric type when returned.

Strings

Strings are byte sequences of any length. They correspond to the policy **text_at** type. Strings can contain null (0x00) bytes. Arbitrary binary data can be held in strings, including any character code representation (e.g. UTF-8 and full Unicode). However, string functions **likestring.upper()** assume 8-bit ASCII.

Strings are automatically allocated when used. There is no need (or even way) to explicitly allocate buffers for strings. Strings are also automatically deallocated by garbage collection when no longer in use. There is no need (or even way) to explicitly free strings. This automatic allocation and deallocation avoids some common problems in languages like C, such as memory leaks and dangling pointers.

String literals are character strings enclosed in double or single quotes. There is no difference between the two types of quotes: “a string literal” is the same as ‘a string literal’. The usual backslash escaping is available: `\s` (bell), `\b` (backspace), `\f` (form feed), `\n` (newline/line feed), `\t` (horizontal tab), `\\` (backslash), `\“` (double quote), and `\`` (single quote). Decimal byte values can be entered by a backslash and one to three digits (`\d`, `\dd`, `\ddd`). Hexadecimal byte values can be entered by a backslash, an `x`, and two hex digits (`\xhh`)

A special syntax called the long bracket notation can be used for long, multi-line string literals. This notation encloses the string in double square brackets with zero or more equal signs between the brackets –the idea is to come up with a combination of brackets and equals that is not in the string. No escape sequences are honored in the string. Some examples:

```
[[This is a multi-line string using long bracket notation.]]
```

```
[=[This is a multi-line string using long notation with [[ and ]] and an unescaped in it.]=]
```

Long bracket notation can be used to make a multi-line comment. Example:

```
-[[  
This is a multi-line comment.  
-]]
```

Boolean

The usual true and false boolean values are provided. Note that boolean values are different than number values, in contrast to C where zero is assumed to be false and any non-zero value is true.

Nil

nil is a special value that means “no value”. It is its own type and is not equivalent to any other value, in contrast to C where NULL is defined to be zero.

Other types

There are two other types, userdata and threads. These are advanced topics and are not covered here.

Variables

September 21, 2020

Variables hold values that may change during extension execution. Because of dynamic typing, any variable may hold values of any type. There are no type declarations for variables. Instead, a variable's type is determined at run time. In fact, the type of a variable's value may change during execution, although this is not a recommended practice. A variable initially has the value nil.

Variable names are identifiers, so are strings of letters, digits, and underscores not beginning in a digit. Examples: headers, combined_headers.

Global variables

In Lua, variables that are not otherwise declared are global within the program. However, global variables are not allowed in policy extension functions, because there are multiple Packet Engines in which a function can be executed, and each Packet Engine has its own memory.

If you use a global variable in your extension, you will get a runtime error: attempt to update or create a global reported in **/var/log/ns.log**.

Typos in variable names are a potential problem, because the variable with the typo will be interpreted as another, global variable, and will not cause a syntax error as in language like C or Java. As noted above, you will get a runtime error instead.

Local variables

A variable may be declared to be local to a block of statements, such as a function. This is done by local variable-name. The variable will be scoped to the block, that is, it will only exist within the block. The local declaration may optionally assign a value to the variable.

Examples:

```
local headers = {}
```

```
local combined_headers = {}
```

Expressions

September 21, 2020

Expressions compute values from variable and literal values.

- Arithmetic Operations
- Relational Operations
- Logical Operations
- Concatenation
- Length
- Precedence

Arithmetic operations

Arithmetic operations are performed on number values. If a string value is used in an arithmetic operation, it is converted to a number –if that fails, an error is returned.

$a + b$	add a and b
$a - b$	subtract b from a
$a * b$	multiply a and b
a / b	divide a by b
$a \% b$	modulo = $a - \text{math.floor}(a/b)*b$
$a ^ b$	raise a to the b power; b can be any number
$-a$	negate a

Relational operations

Relational operations compare two values and return true if the relation is satisfied and false if it is not. Relational operations can be performed between values of any type. If the values are not the same type, false is returned. Numbers are compared in the usual way. Strings are compared using the collating sequence for the current locale.

<code>a == b</code>	a is equal to b
<code>a ~= b</code>	a is not equal to b
<code>a < b</code>	a is less than b
<code>a > b</code>	a is greater than b
<code>a <= b</code>	a is less than or equal to b
<code>a >= b</code>	a is greater than or equal to b

Logical operations

Logical operations are traditionally performed on Boolean values, but in this language they can be performed on any two values. nil and false is considered false and any other value is considered true. Logical operations use short-cut evaluation, where if the first value determines the result of the operation, the second value is not evaluated.

<code>a and b</code>	if a is false or nil then return a else return b
<code>a or b</code>	if a is not false and not nil then return a else return b
<code>not a</code>	if a is not false or nil return false else return true

The and and or operations can be used for conditional evaluation within an expression:

<code>a or b</code>	can be used to provide a default value b if a is uninitialized (nil). This is useful for optional parameters in functions.
---------------------	--

a and b or c

can be used to chose non-nil b or c based on the condition a. If a is true, then a and b returns b, and b or c returns b. If a is false, then a and b returns false and false or c returns c. This is equivalent to a ? b : c in the C programming language.

Concatenation

String concatenation is `s1 .. s2`. This creates a new string large enough to hold the contents of `s1` and `s2` and copies the contents to the new string. An error results if `s1` or `s2` are not strings. Note that repeated concatenation may have considerable copying overhead. If you build a string of `n` bytes by concatenating one byte at a time, this will copy $n*(n+1)/2$ bytes. For better performance, you can put pieces of a string to be concatenated into a table (discussed later) and then use the `table.concat()` function. An example of this is shown in the `COMBINE_HEADERS()` example.

Length

The length of a string `s` is returned by `#s`. The `#` operator is also used with array tables, as discussed later.

Precedence

Operator precedence determines the order in which operations are performed in an expression, with higher precedence operations done before those with lower precedence. Precedence order can as usual be overridden by parentheses. For example, in `a + b * c`, `*` has higher precedence than `+`, so the expression is evaluated as `a + (b * c)`.

highest

- not # - (unary)
- • / %
- ..
- = ~= < > <= >=

-	and
lowest	or

Operations with the same precedence are performed left to right (left associative), except ^ and .. that are performed right to left (right associative). So a^b^c is evaluated as $a^(b^c)$.

Assignment

September 21, 2020

The assignment statement evaluates an expression and assigns the resulting value to a variable.

```
variable = expression
```

As noted earlier, values of any type can be assigned to any variable, so the following is allowed:

```
local v1 = "a string literal"  
v1 = 10
```

An assignment statement can actually set multiple variables, using the form

```
variable1, variable2, ... = expression1, expression2, ...
```

If there are more variables than expressions, the extra variables are assigned nil. If there are more expressions than variables, the extra expression values are discarded. The expressions are all evaluated before the assignments, so this can be used to succinctly exchange the values of two variables:

```
v1, v2 = v2, v1
```

is equivalent to

```
tmp = v1
```

```
v2 = v1
```

```
v1 = tmp
```

Tables

September 21, 2020

Tables are collections of entries with keys and values. They are the only aggregate data structure provided. All other data structures (arrays, lists, sets, and so on) are built from tables. Table keys and values can be any type, including other tables. Keys and values within the same table can mix types.

- Table Constructors
- Table Usage
- Tables as Arrays
- Tables as Records

Table constructors

Table constructors allow you to specify a table with keys and associated values. The syntax is:

```
{[key1] = value1, [key2] = value2, ...}
```

where the keys and values are expressions. If the keys are strings that are not reserved words, the brackets and quotes around the keys can be omitted. Example:

```
{key1 = "value1", key2 = "value2", key3 = "value3"}
```

An empty table is specified simply by {}.

A table constructor may be used in an assignment to set a variable to refer to a table. Examples:

```
local t1 = {} –set t1 to an empty table
```

```
local t2 = {key1 = "value1", key2 = "value2", key3 = "value3"}
```

Note that tables themselves are anonymous. More than one variable may refer to the same table. Continuing the above example:

```
local t3 = t2 –both t2 and t3 refer to the same table
```

Table usage

As you would expect, you can use keys to find values in a table. The syntax is `table[key]`, where `table` is a table reference (typically a variable assigned a table), and `key` is an expression providing the key. If this is used in an expression and the key exists in the table, this returns the value associated with the key. If the key is not in the table, this returns `nil`. If this is used as the variable in an assignment, and the key does not exist in the table, it creates a new entry for the key and value. If the key already exists in the table, it replaces the key's value with the new value. Examples:

```
local t = {} –sets t to an empty table
```

```
t["k1"] = "v1" –creates an entry for key "k1" and value "v1"
```

```
v1 = t["k1"] –sets v1 to the value for key "k1" = "v1"
```

```
t["k1"] = "new_v1" –sets the value for key "k1" to "new_v1"
```


Table as arrays

The traditional array can be implemented using a table with integer keys as indices. An array can have any indices, including negative ones, but the convention is to start arrays at index 1 (not 0 as is the case with languages like C and Java). There is a special purpose table constructor for such arrays:

```
{value1, value2, value3, ...}
```

Array references are then `array[index]`.

The length operator `#` returns the number of elements in an array with consecutive indices starting at 1. Example:

```
local a = {"value1", "value2", "value3"}
local length = #a –sets length to the length of array a = 3
```

Arrays can be sparse, where only the defined elements are allocated. But `#` cannot be used on a sparse array with non-consecutive indices. Example:

```
local sparse_array = {} –set up an empty array
sparse_array[1] = "value1" –add an element at index 1
sparse_array[99] = "value99" –add an element at index 99
```

Multidimensional arrays can be set up as tables of tables. For example, a 3x3 matrix could be set up by:

```
local m = {{1, 2, 3}, {4, 5, 6}, {7, 8, 9}}
local v22 = m[2][2] –sets v22 to 5
```

Tables as records

Records with fields can be implemented as tables with field name keys. The reference form `table.field` can be used for `table["field"]`. Examples:

```
local person = {name = "John Smith", phone = "777-777-7777"}
local name = person.name –sets name to "John Smith"
```

An array of tables can be used for a sequence of records. Example:

```
local people = {
{name = "John Smith", phone = "777-777-7777"},
{name = "Jane Doe", phone = "888-888-8888"}
...
}
name = people[2].name –sets name to "Jane Doe"
```

Control structures

May 2, 2023

The extension function language provides the usual statements to control program execution.

- If Then Else
- While Do and Repeat Until
- Numeric For
- Break
- Goto

If Then Else

If statements select blocks of statements to execute based on one or more conditions. There are three forms:

If then Form

```
1 if expression then
2     statements to execute if expression is not false or nil
3 end
```

If then else Form

```
1 if expression then
2     statements to execute if expression is not false or nil
3 else
4     statements to execute if expression is false or nil
5 end
```

If then elseif else Form

```
1 if expression1 then
2     statements to execute if expression1 is not false or nil
3     elseif expression2 then
4         statements to execute if expression2 is not false or nil
5     . . .
6 else
7     statements to execute if all expressions are false or nil
8 end
```

Example:

```
1 if headers[name] then
2
3     local next_value_index = #(headers[name]) + 1
4     headers[name][next_value_index] = value
5
6 else
7
8     headers[name] = {
9     name .. ":" .. value }
10
11
12 end
```

Note:

- The expression is not enclosed in parentheses as is the case in C and Java.
- There is no equivalent to the C/Java switch statement. You have to use a series of if elseif statements to do the equivalent.

While Do and Repeat Until

The **while** and **repeat** statements provide loops controlled by an expression.

```
1 while expression do
2     statements to execute while expression is not false or nil
3 end
4
5 repeat
6
7     statements to execute until expression is not false or nil
8
9 until expression
```

Example for while:

```
1 local a = {
2     1, 2, 3, 4 }
3
4 local sum, i = 0, 1 -- multiple assignment initializing sum and i
5 while i <= #a do -- check if at the end of the array
6     sum = sum + a[i] -- add array element with index i to sum
7     i = i + 1 -- move to the next element
8 end
```

Example for repeat:

```
1 sum, i = 0, 1 -- multiple assignment initializing sum and i
2 repeat
3     sum = sum + a[i] -- add array element with index i to sum
```

```
4     i = i + 1 -- move to the next element
5  until i > #a -- check if past the end of the array
```

Of course it is possible to write a loop that does not terminate, for example, if you omit the `i = i + 1` statement in either of these examples. When such a function is executed, NetScaler will detect that the function did not complete in a reasonable time and will kill it with a runtime error:

```
Cpu limit reached. Terminating extension execution in [[string "
function extension function..."]]: line line-number.
```

will be reported in `/var/log/ns.log`.

Numeric For

There are two types of for loops. The first is the numeric for, which is similar to the usual use of the for statement in C and Java. The numeric for statement initializes a variable, tests if the variable has passed a final value, and if not executes a block of statements, increments the variable, and repeats. The syntax for the numerical for loop is:

```
1  for variable = initial, final, increment do
2
3      statements in the loop body
4
5  end
```

where `initial`, `final`, and `increment` are all expressions that yield (or can be converted to) numbers. `variable` is considered to be local to the for loop statement block; it cannot be used outside of the loop. `increment` can be omitted; the default is 1. The expressions are evaluated once at the beginning of the loop. The terminating condition is `variable > final` if the increment is positive and `variable < final` if the increment is negative. The loop terminates immediately if the increment is 0.

Example (equivalent to the while and repeat loops in the preceding section):

```
1  sum = 0
2  for i = 1, #a do -- increment defaults to 1
3      sum = sum + a[i]
4  end
```

The second type of for loop is the generic for, which can be used for more flexible types of loops. It involves the use of functions, so will be discussed later after functions have been introduced.

Break

The `break` statement is used inside a while, repeat, or for loop. It will terminate the loop and resume execution at the first statement after the loop. Example (also equivalent to the preceding while, repeat, and for loops):

```
1 sum, i = 0, 1
2 while true do
3     if i > #a then
4         break
5     end
6     sum = sum + a[i]
7     i = i + 1
8 end
```

Goto

The goto statement can be used to jump forward or backward to a label. The label is an identifier, and its syntax is `::label::`. The goto statement is `goto label`. Example (once again equivalent to the preceding loops):

```
1 sum, i = 0, 1
2 ::start_loop::
3     if i > #a then
4         goto end_loop -- forward jump
5     end
6     sum = sum + a[i]
7     i = i + 1
8     goto start_loop -- backwards jump
9 ::end_loop::
10 . . .
```

There has been a long running controversy over using gotos in programming. In general, you should try to use the other control structures to make your functions more readable and reliable. But occasional judicious use of gotos may lead to better programs. In particular, gotos may be useful in handling errors.

Functions

May 2, 2023

Functions are a basic building block of programming –they are a convenient and powerful way to group statements that perform a task. They are the interface between the NetScaler appliance and extension code. For policies, you define policy extension functions. For protocols, you implement callback functions for the protocol behaviors. Functions consist of function definitions that specify what values are passed into and out of the function and what statements are run for the function, and function calls, which run functions with specific input data and get results from the function.

Protocol behavior callback functions

The TCP client behavior consists of a callback function (`on_data`) that processes TCP client data stream events. To implement Message Based Load Balancing (MLLB) for a TCP based protocol, you can add code for this callback function to process the TCP data stream from the client and parse the byte stream into protocol messages.

The callback functions in a behavior are called with a context, which is the processing module state. The context is the instance of the processing module. For example, the TCP client behavior callbacks are called with different contexts for different client TCP connections.

In addition to the context, the behavior callbacks can have other arguments. Usually the rest of the arguments are passed as payload, which is the collection of all the arguments. So, the programmable processing module instances can be seen as a combination of instance state plus event callback functions, that is, the context plus behavior. And the traffic flows through the pipeline as event payload.

Prototype of TCP client callback function:

```

1
2         Function           client on_data (ctxt, payload)
3
4                                 //.code
5
6         end

```

Where,

- `ctxt` - TCP client processing context
- `payload` –event payload
 - `payload.data` - TCP data received, available as a stream of bytes

Policy extension functions

Since the NetScaler policy expression language is typed, the definition of an extension function must specify the types of its inputs and its return value. The **Lua function** definition has been extended to include these types:

```

1 function self-type: function-name(parameter1: parameter1-type, and so
   on): return-type
2     statements
3 end

```

Where,

The types are NSTEXT, NSNUM, NSBOOL, or NSDOUBLE.

Self-type is the type of the implicit self-parameter that is passed into the function. When the extension function is used in a NetScaler policy expression, this is the value generated by the expression to the left of the function. Another way to view this is that the function extends that type in the NetScaler policy language.

The parameter-types are the types of each parameter specified in the extension function call in the policy expression. An extension function can have zero or more parameters.

Return-type is the type of the value returned by the extension function call. It is the input to the part of the policy expression, if any, to the right of the function, or else is the value of the expression result.

Example:

```
function NSTEXT:COMBINE_HEADERS(): NSTEXT
```

Use of the extension function in a policy expression:

```
HTTP.REQ.FULL_HEADER.AFTER_STR("HTTP/1.1\r\n").COMBINE_HEADERS()
```

Here the self-parameter is the result of `HTTP.REQ.FULL_HEADER.AFTER_STR("HTTP/1.1\r\n")`, which is a text value. The result of the `COMBINE_HEADERS()` call is text, and since there is nothing to the right of this call, the result of the entire expression is text.

Local function definition

Besides extension functions, no global functions can be defined in an extension file. But local functions can be defined within extension functions using the normal Lua function statement. This declares the name of the function and the names of its parameters (also known as arguments), and like all declarations in Lua, does not specify any types. The syntax for this is:

```
1 local function function-name(parameter1-name, parameter2-name, and so
   on)
2     statements
3 end
```

The function and parameter names are all identifiers. (The function name is actually a variable and the function statement is shorthand for `local function-name = function(parameter1, and so on)`, but you don't have to understand this subtlety to use functions.)

Note that `and so on` is used here for continuation of the pattern of parameter names instead of the usual `...`. This is because `...` itself actually means a variable parameter list, which will not be discussed here.

Function body and return

The block of statements between the function and end statements is the function body. In the function body, the function parameters act like local variables, with values supplied by the function calls, as

described previously.

The return statement supplies values to be returned to the caller of the function. It must appear at the end of a block (in a function, if then, for loop, and so on. It can be in its own block do return ...end). It specifies no, one, or more than one return values:

```
1 return -- returns nil
2 return expression -- one return value
3 return expression1, expression2, ... -- multiple return values
```

Examples:

```
1 local function fsum(a)
2     local sum = 0
3     for i = 1, #a do
4         sum = sum + a[i]
5     end
6     return sum
7 end
8
9 Local function fsum_and_average(a)
10    local sum = 0
11    for i = 1, #a do
12        sum = sum + a[i]
13    end
14    return sum, sum/#a
15 end
```

Function calls

A function call runs the body of a function, supplying values for its parameters, and receiving results. The syntax for a function call is function-name(expression1, expression2, and so on), where the function parameters are set to the corresponding expressions. The number of expressions and parameters need not be the same. If there are fewer expressions than parameters, the remaining parameters are set to nil. So you can make one or more parameters at the end of the call optional, and your function can check if they are specified by checking if they are not nil. A common way to do this is with the OR operation:

```
1 function f(p1, p2) -- p2 is optional
2     p2 = p2 or 0 -- if p2 is nil, set to a default of 0
3     . . .
4 end
```

If there are more expressions than parameters, the remaining expression values are ignored.

As noted previously, functions can return multiple values. These returns can be used in a multiple assignment statement. Example:


```
1 local my_array = {
2   1, 2, 3, 4 }
3
4 local my_sum, my_ave = sum_and_average(my_array)
```

Iterator functions and generic for loops

Now that we have introduced functions, we can talk about generic for loops. The syntax for the generic for loop (with one variable) is:

```
1 for variable in iterator(parameter1, parameter2, and so on) do
2   statements in the for loop body
3 end
```

Where `iterator()` is a function with zero or more parameters that provide a value for a variable on each iteration of the loop body. The iterator function keeps track of where it is in the iteration using a technique called closure, which you don't have to worry about here. It signals the end of the iteration by returning `nil`. Iterator functions can return more than one value, for use in a multiple assignment.

Writing an iterator function is beyond the scope of this paper, but there are few useful built-in iterators that illustrate the concept. One is the `pairs()` iterator, which iterates through the entries in a table and returns two values, the key and the value of the next entry.

Example:

```
1 local t = {
2   k1 = "v1", k2 = "v2", k3 = "v3" }
3
4 local a = {
5   }
6   -- array to accumulate key-value pairs
7 local n = 0 -- number of key-value pairs
8 for key, value in pairs(t) do
9   n = n + 1
10  a[n] = key.. " = ".. Value -- add key-value pair to the array
11 end
12 local s = table.concat(a, ";") -- concatenate all key-value pairs into
   one string
```

Another useful iterator is the `string.gmatch()` function, which is used in the following `COMBINE_HEADERS()` example.

NetScaler extensions - library reference

May 2, 2023

The list of libraries supported in policy extensions.

- Basic library
- String library
- Regular Expression Patterns - Character Classes
- Regular Expression Patterns - Pattern Items
- Table library
- Math library
- Bitwise library
- Operating System library
- NetScaler library

Basic library

<code>assert(v[,message])</code>	Issues an error, with an optional message, when <code>v</code> is false.
<code>error(message)</code>	Terminates a function and reports the error message.
<code>ipairs(a)</code>	Iterator for an array <code>a</code> . Returns an index and value for each iteration.
<code>pairs(t)</code>	Iterator for a table <code>t</code> . Returns a key and value for each iteration.
<code>tonumber(e[,base])</code>	Converts <code>e</code> to a number, with an optional base.
<code>tostring(v)</code>	Converts <code>v</code> to a string
<code>type(v)</code>	Returns the type of <code>v</code> : number, string, boolean, table, etc.
<code>getmetatable (object)</code>	Returns <code>nil</code> if the object does not have a metatable. Otherwise, if the object's metatable has a " <code>__metatable</code> " field, returns the associated value. Otherwise, returns the metatable of the given object.
<code>setmetatable (table, metatable)</code>	Sets the metatable for the given table. (You cannot change the metatable of other types from Lua, only from C.) If <code>metatable</code> is <code>nil</code> , removes the metatable of the given table. If the original metatable has a " <code>__metatable</code> " field, raises an error.

<code>select (index, -)</code>	Returns all arguments after argument number index. If index is string “#”, then it returns the total number of extra arguments it received.
<code>pcall (f [, arg1, -])</code>	Calls function f with the given arguments in protected mode. It returns status code as first result which tells whether call succeeded or not. If call succeeded, then along with status code it also returns all results from the call, otherwise returns error message.
<code>xpcall (f, msgh [, arg1, -])</code>	This function is similar to pcall, except that it also takes an argument for error handling.
<code>_VERSION</code>	Returns the current interpreter version.

String library

<code>string.byte(s[,i[,j]])</code>	Returns the byte values for s[i] to s[j]. Default i = 1 and j = i
<code>string.char(...)</code>	Returns a string constructed of the integer parameters.
<code>string.find(s,pattern[,init[,plain]])</code>	Looks for the first match of a regular expression pattern in s. Return the first and last indices of match or nil. init is index to start, default 1. plain = true means pattern is not a regex.
<code>string.format(form,...)</code>	Returns a formatted version of the parameters.
<code>string.gmatch(s,pattern)</code>	Iterator for searching s with the regex pattern. Returns matching values.
<code>string.gsub(s,pattern,repl[,n])</code>	Returns a copy of s in which all (or n) occurrences of the pattern have been replaced by repl.
<code>string.len(s)</code>	Returns the string length.
<code>string.lower(s)</code>	Returns a copy of the string converted to lowercase.

<code>string.match(s,pattern[,init])</code>	Looks for the first match of the regex pattern in s and returns the captures or the whole pattern. init is the index to start, default 1.
<code>string.rep(s,n[,sep])</code>	Returns a string that is n copies of s, with separator sep, default no separator
<code>string.reverse(s)</code>	Returns a string that is s reversed.
<code>string.sub(s,i[,j])</code>	Returns the substring of s from s[i] to s[j], default j is the end of the string.
<code>string.upper(s)</code>	Returns a copy of the string converted to uppercase.
<code>string.dump (function)</code>	Returns a string containing a binary representation of the given function.

Regular expression patterns - character classes

<code>x</code>	the character x, except for magic characters <code>^\$()%.[\]*+-?</code>
<code>.</code>	any character
<code>%a</code>	any letter
<code>%c</code>	any control character
<code>%d</code>	any digit
<code>%g</code>	any printable character except space
<code>%l</code>	any lowercase letter
<code>%p</code>	any punctuation character
<code>%s</code>	any white space character
<code>%u</code>	any uppercase letter
<code>%w</code>	any alphanumeric letter
<code>%x</code>	an escaped magic character x (for example <code>%%</code>)
<code>[set]</code>	a set of characters: sequence of individual characters, ranges x-y, and % classes

[^set]	characters not in the set.
--------	----------------------------

Regular expression patterns - pattern items

X	a character class
X*	0 or more longest repetitions of characters in X
X+	1 or more repetitions of characters in X
X-	0 or more shortest repetitions of characters in X
X?	0 or 1 character in X
%n	n=1 to 9; matches nth captured string
%bxy	matches substring between two balanced characters x and y. Example %b() matches substring between two balanced parentheses.
%f[set]	matches an empty string at any position such that the next character belongs to set and the previous character does not belong to set.

A pattern is a sequence of pattern items. `^pattern` matches the beginning of a string and `pattern$` matches the end of the string.

Matched substrings can be captured using `(pattern)`. Parentheses with no pattern `()` capture the current string position (a number).

Table library

table.concat(list[,sep[,i[,j]]])	Returns a string <code>list[i] .. sep .. list[i+1] .. sep . . . list[j]</code> . Default sep is the empty string. Default i is 1, j is #list.
table.insert(list,[pos,]value)	Inserts value into list at index pos. Default for pos is #list (end of the list).

<code>table.pack(...)</code>	Returns an array containing the parameters starting at index 1, and a key <code>n</code> with the total number of parameters.
<code>table.remove(list[,pos])</code>	Removes from <code>list</code> the element at position <code>pos</code> , shifting elements to fill the position. Returns the removed element. Default for <code>pos</code> is <code>#list</code> (end of the list.)
<code>table.sort(list[,comp])</code>	Sort the elements of <code>list</code> in place. <code>comp</code> is the comparison function to use. Default for <code>comp</code> is <code><</code> .
<code>table.unpack(list[,i[,j]])</code>	Returns <code>list[i]</code> through <code>list[j]</code> . Default for <code>i</code> is 1 and <code>j</code> is <code>#list</code> .

Math library

Various trigonometric and logarithmic functions not shown.

<code>math.abs(x)</code>	Returns the absolute value of <code>x</code> .
<code>math.ceil(x)</code>	Returns the smallest integer $\geq x$.
<code>math.floor(x)</code>	Returns the largest integer $\leq x$.
<code>math.fmod(x,y)</code>	Returns the remainder of <code>x/y</code> rounding the quotient towards zero.
<code>math.huge</code>	A value \geq any other number.
<code>math.max(x,...)</code>	Returns the maximum argument.
<code>math.min(x,...)</code>	Returns the minimum argument.
<code>math.modf(x)</code>	Returns the integral and fractional parts of <code>x</code> .
<code>math.random()</code>	Returns a pseudo-random number between 0 and 1.
<code>math.random(m)</code>	Returns a pseudo-random integer between 1 and <code>m</code> .
<code>math.random(m, n)</code>	Returns a pseudo-random integer between <code>m</code> and <code>n</code> .

<code>math.randomseed(x)</code>	Sets the pseudo-random number generator set to x.
<code>math.sqrt(x)</code>	Returns the square root of x ($x^{0.5}$)
<code>math.acos(x)</code>	Returns the arc cosine of x (in radians).
<code>math.asin(x)</code>	Returns the arc sine of x (in radians).
<code>math.atan(x)</code>	Returns the arc tangent of x (in radians).
<code>math.atan2(y, x)</code>	Returns the arc tangent of y/x (in radians).
<code>math.cos(x)</code>	Returns the cosine of x.
<code>math.cosh(x)</code>	Returns the hyperbolic cosine of x.
<code>math.sin(x)</code>	Returns the sine of x.
<code>math.sinh(x)</code>	Returns the hyperbolic sine of x.
<code>math.tan(x)</code>	Returns the tangent of x.
<code>math.tanh(x)</code>	Returns the hyperbolic tangent of x.
<code>math.deg(x)</code>	Returns the angle x (given in radians) in degrees.
<code>math.exp(x)</code>	Returns the value e^x .
<code>math.frexp(x)</code>	Returns m and e such that $x = m2^e$, e is an integer and the absolute value of m is in the range [0.5, 1).
<code>math.ldexp(m, e)</code>	Returns $m2^e$ (e should be an integer).
<code>math.log(x [, base])</code>	Returns the logarithm of x in the given base. The default for base is e.
<code>math.pow(x, y)</code>	Returns x^y .
<code>math.rad(x)</code>	Returns the angle x (given in degrees) in radians.
<code>math.pi</code>	The value of π .

Bitwise library

Unless otherwise stated:

- All functions accept numeric arguments in the range $(-2^{51}, 2^{51})$.
- Each argument is normalized to the remainder of its division by 2^{32} and truncated to an integer (in some unspecified way), so that its final value falls in the range $[0, 2^{32} - 1]$.

- All results are in the range $[0, 2^{32} - 1]$.
-

<code>bit32.arshift(x,disp)</code>	Returns x arithmetically shifted disp bits to the right (+disp) or left (-disp).
<code>bit32.band(...)</code>	Returns the bitwise and of the arguments.
<code>bit32.bnot(x)</code>	Returns the bitwise negation of x.
<code>bit32.bor(...)</code>	Returns the bitwise or of the arguments.
<code>bit32.btest(...)</code>	Returns true if the bitwise and of the arguments is not zero.
<code>bit32.bxor(...)</code>	Returns the bitwise exclusive or of the arguments.
<code>bit32.extract(n,field[,width])</code>	Returns the bits in n from field to field + width - 1 (bits number from most to least significant). Default for width is 1.
<code>bit32.replace(n,v,field[,width])</code>	Returns a copy of n with bits from field to field + width - 1 replaced by v. Default width is 1.
<code>bit32.lrotate(x,disp)</code>	Returns x rotated disp bits to the left (+disp) or right (-disp).
<code>bit32.lshift(x,disp)</code>	Returns x shifted disp bits to the left (+disp) or right (-disp).
<code>bit32.rrotate(x,disp)</code>	Returns x rotated disp bits to the right (+disp) or left (-disp).
<code>bit32.rshift(x,disp)</code>	Returns x shifted disp bits to the right (+disp) or left (-disp).

Operating system library

<code>os.clock ()</code>	Returns an approximation of the amount in seconds of CPU time.
<code>os.date ([format [, time]])</code>	Returns a string or a table containing date and time, formatted according to the given string format.

<code>os.time ([table])</code>	Returns the current time when called without arguments, or a time representing the date and time specified by the given table.
<code>os.difftime (t2, t1)</code>	Returns the number of seconds from time t1 to time t2.

NetScaler library

<code>ns.logger:level(message)</code>	To log messages where level is emergency, alert, critical, error, warning, notice, info, or debug. The parameters are the same as the C printf() function: a format string, and a variable number of arguments to supply values for the % specifiers in the format string.
---------------------------------------	--

NetScaler extensions API reference

May 2, 2023

Behaviors are a formalization of common programmable patterns that are available on a NetScaler appliance. For example, a TCP virtual server supports a TCP client behavior and a TCP server behavior. A behavior is a pre-defined set of callback functions. You can implement behaviors by providing callback functions. For example, a TCP client behavior can consist of the `on_data` function, which processes the TCP data stream.

TCP client behavior

on_data - function callback for TCP client data events. The callback takes two arguments:

- **ctxt** - TCP client processing context
- **payload** –event payload
 - **payload.data** - TCP data received, available as a stream of bytes

TCP server behavior

on_data - function callback for TCP server data events, the callback takes two arguments:

- **ctxt** - TCP server processing context
- **payload** –event payload
 - **payload.data** - tcp data received, available as a stream of bytes

TCP client context

The context that is passed to the TCP client event callbacks:

- **ctxt.output** - The next processing context in the pipeline. Extension call back handlers can send ns.tcp.stream type data to ctxt.output using the events DATA, which means partial message or EOM which means end of protocol message. The EOM event may or may not have TCP data with it. An EOM event with TCP data can be sent without a preceding DATA event to send a whole protocol message data and mark the end of message. The load balancing decision is made, downstream by the load balancing virtual server, on the first data received. A new load balancing decision is made after the receipt of the EOM message. So, to stream protocol message data, send multiple DATA events with the last event as EOM. All the contiguous DATA events and the following EOM events are sent to the same server connection selected by the load balancing decision on the first DATA event in the sequence.
- **ctxt.input** - The previous processing context in the pipeline where the TCP stream data is coming from.
- **ctxt:hold(data)** - Function to store the data for future processing. On calling hold with data, the data is stored in the context. Later, when more data is received on the same context, newly received data is appended to the previously stored data and the combined data stream is then passed to the on_data callback function. After calling a hold, the data reference is no longer usable and gives error on any usage.
- **ctxt.vserver** - The virtual server context.
- **ctxt.client** –Client connection processing context. This processing context can be used to send data to the client, and to fetch some connection related information like IP address, source and destination ports.
- **ctxt:close()** –Close the client connection by sending FIN to the client. After calling this API, the client processing context is no longer usable and gives error on any usage.

TCP server context

The context that is passed to the TCP server event callbacks:

- **ctxt.output** –The next processing context in the pipeline. Extension call back handlers can send ns.tcp.stream type data to ctxt.output using the events DATA, which means partial message or EOM which means end of protocol message.
- **ctxt.input** - The previous processing context in the pipeline where the TCP stream data is coming from.
- **ctxt:hold(data)** - Function to store the data for future processing. On calling hold with data, the data is stored in the context. Later, when more data is received on the same context, newly received data is appended to the previously stored data and the combined data stream is then passed to the on_data callback function. After calling a hold, the data reference is no longer usable and gives error on any usage.
- **ctxt.vserver** - The virtual server context.
- **ctxt.server** - Server connection processing context. This processing context can be used to send data to the server, and to fetch some connection related information like IP address, source and destination ports.
- **ctxt:reuse_server_connection ()** - This API is used to allow the server connection to be reused for other client connections in the server context only. This API can be used only if an EOM event is used (in ns.send() API) to send the data in the client context. Otherwise, the ADC appliance throws an error.

To allow a server connection to be reused by other clients, this API must be called at the end of each response message. After calling this API, if more data is received on this server connection, this is treated as an error and the server connection is closed. If this API is not used, then the server connection can be used only for that client for which it was opened. Also, if the same server is selected for another load balancing decision for that client, then the same server connection is used to send the client data. After using this API, server connection stops being tied to the client connection for which it was opened, and can be reused for a new load balancing decision for any other client connection. After calling this API, the server context is no longer usable and throws an error on any usage.

Note: This API is available in NetScaler 12.1 build 49.xx and later.

- **ctxt:close()** –Close the server connection by sending FIN to the server. After calling this API, the client processing context is no longer usable and displays an error on any usage.

Note: This API is available in NetScaler 12.1 build 50.xx and later.

Vserver context

The user virtual server context available through the contexts passed to callbacks:

- **vserver:counter_increment(counter_name)** - Increments the value of a virtual server counter passed as argument. Currently the following built-in counters are supported.
 - **invalid_messages** –Number of invalid requests/responses on this virtual server.
 - **invalid_messages_dropped** –Number of invalid requests/responses dropped by this virtual server.
- **vserver.params** - The configured parameters for the user virtual server. Parameters provide configurability of extensions. The extension code can access parameters that are specified in the CLI to add a user virtual server.

Client connection context

Client connection processing context to get connection related information.

- **client.ssl** –SSL context
- **client.tcp** –TCP context
- **client.is_ssl** –True if client connection is SSL-based

Server connection context

Server connection processing context to get connection related information.

- **server.ssl** –SSL context
- **server.tcp** –TCP context
- **server.is_ssl** –True if server connection is SSL-based

TCP context

TCP context operates on TCP protocol.

- **tcp.srcport** –Source port as a number
- **tcp.dstport** - Destination port as a number

IP context

IP context works on IP or IPv6 protocol data.

- **ip.src** - Source IP address context.
- **ip.dst** - Destination IP address context.

Note: This API is available in NetScaler 12.1 build 51.xx and later.

IP address context

IP address context works on IP or IPv6 address data.

- **<address>.to_s** - The address string in the appropriate ASCII notation.
- **<address>.to_n** - The address' numeric value as a string of bytes in network order (4 bytes for IPv4 and 16 bytes for IPv6).
- **<address>.version** - Returns 4 for IPv4 and 6 for IPv6.
- **<address>.subnet(<prefix value>)** - Returns the subnet address string after applying the prefix number.
 - For IPv4 address, value must be between 0 and 32
 - For IPv6 address, value must be between 0 and 128.
- **<address>.apply_mask(<mask string>)** - Returns the address string after applying mask string. API validates the version of argument and does appropriate error checking.
- **address:eq(<address string>)** - Returns true or false based on whether the argument is equivalent to the address object. API validates the version of the arguments.

Note: This API is available in NetScaler 12.1 build 51.xx and later.

SSL context

The SSL context provides information related to frontend SSL connection.

- **ssl.cert** –SSL certificate context. For the client connection, it provides client certificate context and for the server connection, it provides server certificate context.
- **ssl.version** - A number that represents the SSL protocol version of the current transaction, as follows:
 - - 0: The transaction is not SSL-based
 - - 0x002: The transaction is SSLv2
 - - 0x300: The transaction is SSLv3
 - - 0x301: The transaction is TLSv1
 - - 0x302: The transaction is TLSv1.1
 - - 0x303: The transaction is TLSv1.2
- **ssl.cipher_name** - SSL Cipher name as string if invoked from an SSL connection, otherwise gives NULL string.
- **ssl.cipher_bits** –Number of bits in cryptographic key.

SSL certificate context

- **Cert.version** –Version number of the certificate. If the connection is not SSL based, returns 0.
- **Cert.valid_not_before** –Date in string format before which certificate is not valid.
- **Cert.valid_not_after** –Date in string format after which certificate is no longer valid.
- **Cert.days_to_expire** –Number of days before which certificate is valid. Returns -1 for expired certificate.
- **Cert.to_pem** –Certificate in binary format.
- **cert.issuer** - Distinguished Name (DN) of the Issuer in the certificate as a name-value list. An equals sign (“=”) is the delimiter for the name and the value, and the slash (“/”) is the delimiter that separates the name-value pairs.

Following is an example of the returned DN:

```
/C=US/O=myCompany/OU=www.mycompany.com/CN=www.mycompany.com/emailAddress=myuserid@n
```

- **cert.auth_keyid** –Context of Authority Key Identifier extension of the X.509 V3 certificate.
 - **auth_keyid.exists** - TRUE if the certificate contains an Authority Key Identifier extension.
 - **auth_keyid.issuer_name** - Issuer Distinguished Name in the certificate as a name-value list.
An equals sign (“=”) is the delimiter for the name and the value, and the slash (“/”) is the delimiter that separates the name-value pairs.

Following is an example:

```
/C=US/O=myCompany/OU=www.mycompany.com/CN=www.mycompany.com/emailAddress=myuserid@n
```

- **auth_keyid.keyid** - KeyIdentifier field of the Authority Key Identifier as a blob
- **auth_keyid.cert_serialnumber** - SerialNumber field of the Authority Key Identifier as a blob.
- **cert.pk_algorithm** - Name of the public key algorithm used by the certificate.
- **cert.pk_size** - Size of the public key used in the certificate.
- **cert.serialnumber** - Serial number of the client certificate. If this is a non-SSL transaction or there is an error in the certificate, this gives an empty string.
- **cert.signature_algorithm** - Name of the cryptographic algorithm used by the CA to sign this certificate.
- **cert.subject_keyid** - Subject KeyID of the client certificate. If there is no Subject KeyID, this gives a zero-length text object.

- **cert.subject** - Distinguished Name of the Subject as a name-value. An equals sign (“=”) separates names and values and a slash (“/”) delimits name-value pairs.

Following is an example:

```
/C=US/O=myCompany/OU=www.mycompany.com/CN=www.mycompany.com/emailAddress=myuserid@mycom
```

NetScaler libraries

- **ns.tcp.stream** - String like library for handling TCP data as a stream of bytes. The maximum size of TCP stream data on which these APIs can work is 128 KB. The ns.tcp.stream library functions can also be called in the usual extension object oriented style of calling. For example, data:len() is the same as ns.tcp.stream.len(data)
 - **ns.tcp.stream.len(data)** - Returns length of data in bytes, similar to Lua’s string.len
 - **ns.tcp.stream.find(data, pattern [, init])** - Function similar to Lua’s string.find. In addition, it also does partial matching at the end of data. Upon partial match, the start index is returned and the end index becomes nil.
 - **ns.tcp.stream.split(data, length)** - Splits the data into two chunks, the first chunk is of the specified length. After a successful split the original data is no longer usable as a TCP data stream. Any attempt to use it that way causes an error.
 - **ns.tcp.stream.byte(data[, i [, j]])** - Function similar to Lua’s string.byte. Returns the internal numerical codes of the characters data[i], data[i+1], ..., data[j].
 - **ns.tcp.stream.sub(data, i [, j])** - Function similar to Lua’s string.sub. Returns the substring of s that starts at i and continues until j.
 - **ns.tcp.stream.match(data, pattern, [, init])** - Function similar to Lua’s string.match. Looks for the first *match* of pattern in string s.
- **ns.send(processing_ctxt, event_name, event_data)** - Generic function to send events to a processing context. Event data is a Lua table that can have any content. The contents depend on the event. After the ns.send() API is called, the data reference is no longer usable. Any attempt to use it causes an error.
- **ns.pipe(src_ctxt, dest_ctxt)** - Using a call to pipe() API, extension code can connect source context to a destination context. After a call to pipe, all the events that are sent from source context to the next module in the pipeline go directly to the destination context. This API is typically used by the module that makes the pipe() call, to remove itself from the pipeline.
- **ns.inet** –Library for internet addresses.
 - **ns.inet.apply_mask(address_str, mask_str)** - returns the address string after applying mask string.
 - **ns.inet.aton(address_str)** - Returns address’ numeric value as a string of bytes in network order (4 bytes for IPv4 and 16 for IPv6).

- **ns.inet.ntoa(byte_str)** - Converts numeric byte value as a string of bytes to address string.
- **ns.inet.ntohs(number)** - Convert the given network byte order to host byte order. If the input is greater than $2^{16} - 1$, then throws an error.
- **ns.inet.htons(number)** - Converts the given host byte order to network byte order. If the input is greater than $2^{16} - 1$, then throws an error.
- **ns.inet.ntohl(number)** - Converts the given network byte order to host byte order. If the input is greater than $2^{32} - 1$, then throws an error.
- **ns.inet.htonl(number)** - Converts the given host byte order to network byte order. If the input is greater than $2^{32} - 1$, then throws an error.
- **ns.inet.subnet(address_str, subnet_value)** –Returns the subnet address string after applying given subnet.

Protocol extensions

May 2, 2023

The NetScaler appliances have native support for protocols such as HTTP. In addition to this, you can use protocol extensions to add support for custom protocols. Presently only TCP-based custom protocols are supported, for example, Message Queuing Telemetry Transport (MQTT) protocol. For secure transactions, TCP over SSL is also supported.

The protocol extensions on the NetScaler appliance are part of the high-level scripting infrastructure available on the NetScaler appliance. The scripting language is based on the Lua 5.2 programming language. To add a custom protocol to a NetScaler appliance, the user has to write extension code to implement the applicable behaviors. For example, the `ns.tcp.client` and `ns.tcp.server` behaviors are applicable to TCP based protocols. To implement a behavior, implement only the callbacks that you want to customize. If callback is not implemented, its default takes effect. For more information about the scripting language, see [NetScaler Extensions - Language Overview](#). For details on behaviors, see [NetScaler Extensions API Reference](#).

The NetScaler protocol extensions can be used for the following:

- Add new protocol support on the NetScaler appliance programmatically, using extensions.
- Parse protocol traffic and do protocol-specific message based load balancing (MLB).
- Configure user defined load balancing persistence.

Protocol extensions - architecture

May 2, 2023

To achieve traffic-level extensibility, the traffic processing on a NetScaler appliance is exposed as a pipeline of separate processing modules. Traffic flows through them as it processes it from ingress to egress. These modules in the pipeline follow a shared nothing model. Message passing is used to send the traffic data from one module in the pipeline to the next module.

Certain points in the traffic processing pipeline are made extensible, so that you can add code to customize the NetScaler behavior.

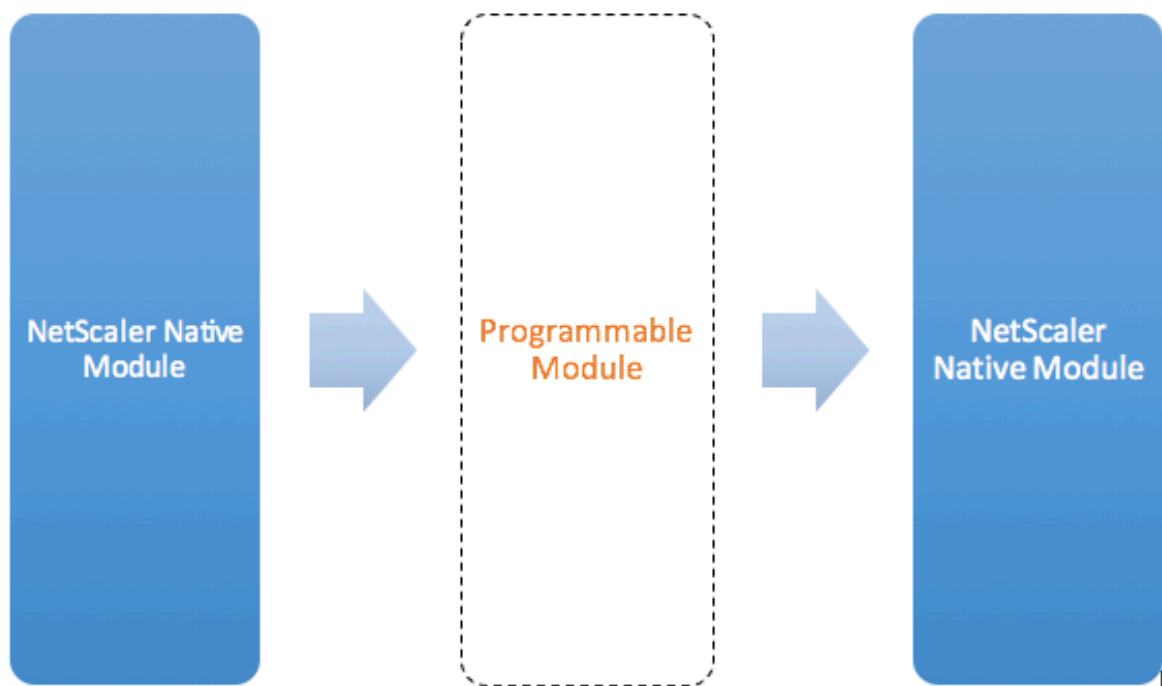


Figure: A Programmable Module In the Traffic Pipeline

By default, the traffic bypasses a programmable module to which you do not add any code.

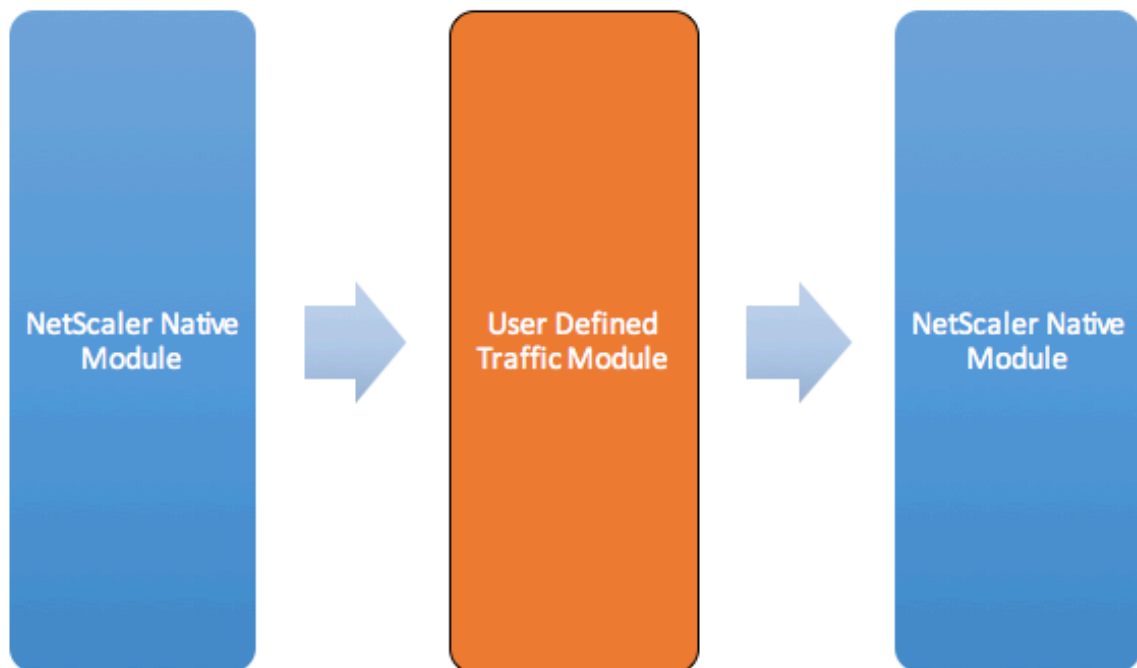


Figure: User Defined Traffic Module

Behaviors

The programmable interfaces for customizing the traffic handling are called behaviors. Behaviors are basically a formalization of common programmable patterns that are available on a NetScaler appliance. The behaviors consist of a pre-defined set of event callback functions. You can implement a behavior by providing callback functions conforming to the behavior.

For example, the TCP client behavior consists of a callback function (`on_data`) that processes TCP client data stream events. To implement Message Based Load Balancing (MBLB) for a TCP based protocol, you can add code for this callback function to process the TCP data stream from the client and parse the byte stream into protocol messages.

Context:

The callback functions in a behavior are called with a context, which is the processing module state. The context is the instance of the processing module. For example, the TCP client behavior callbacks are called with different contexts for different client TCP connections.

Payload:

In addition to the context, the behavior callbacks can have other arguments. Usually the rest of the arguments are passed as payload, which is the collection of all the arguments.

So, the programmable processing module instances can be seen as a combination of instance state plus event callback functions, that is, the context plus behavior. And the traffic flows through the pipeline as event payload.

For NetScaler API extensions, see [NetScaler extension API reference](#).


The following code snippet shows a user defined function to handle TCP client data stream events. The context and payload are passed to the function by NetScaler code. This code simply forwards the TCP data received in every call to the next processing module context in the pipeline. In this case, the next module is the load balancing (LB) context, which is a NetScaler native module.

```
1 function client.on_data(ctxt, payload)
2     ns.send(ctxt.output, "DATA", {
3     data = payload.data }
4     )
5 end
```

Protocol extensions - traffic pipeline for user defined TCP client and server behaviors

May 2, 2023

The following figure illustrates the sample protocol extension - traffic pipeline for user defined TCP client and server behaviors

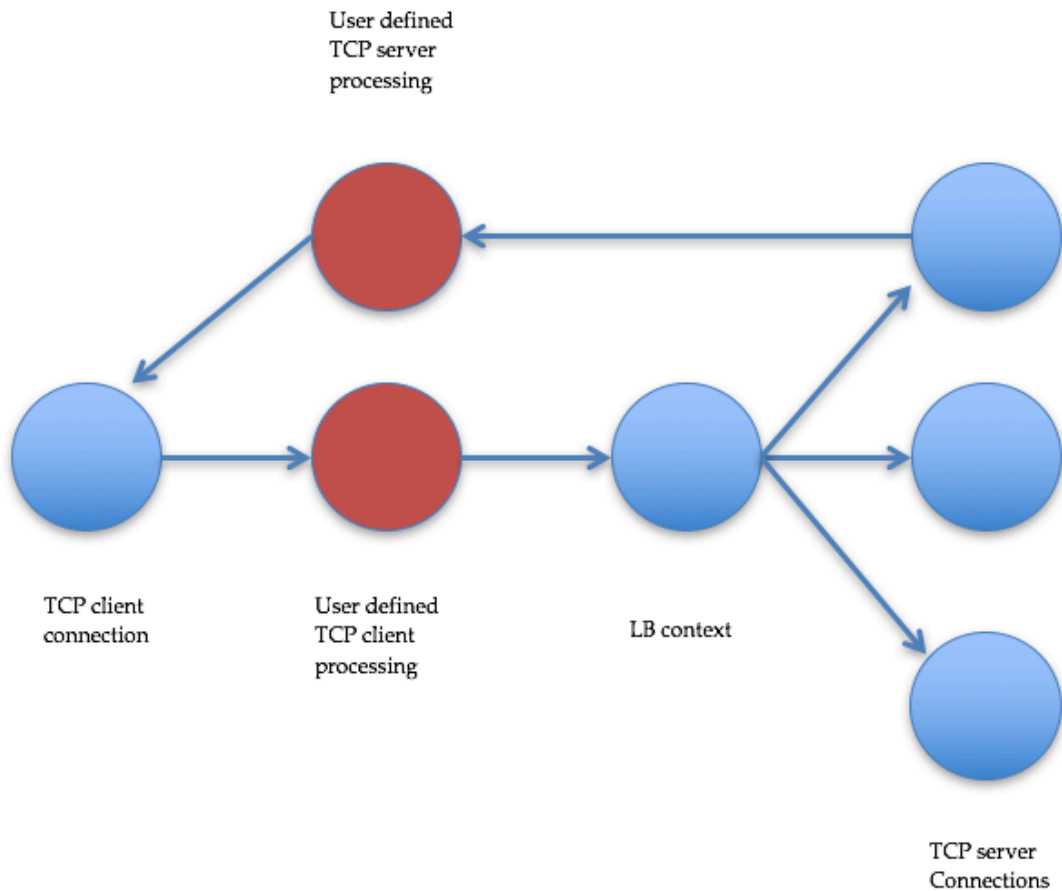

Traffic Pipeline For User Defined TCP Client And Server Behaviors

Add a custom protocol by using protocol extensions

The command line interface (CLI) commands for custom protocol use the keyword “user” to signify the user defined nature of the underlying configuration entities. With the help of extension code, you can add a new user protocol to the system and add user virtual servers for user-defined protocols. The user virtual servers are in turn configurable by setting parameters. Configured values for virtual server parameters are available in the extension code.

The following example illustrates the user flow for adding support for a new protocol. The example adds MQTT protocol support to the system. MQTT is a machine-to-machine “Internet of Things” connectivity protocol. It is a lightweight publish/subscribe messaging transport. Useful for connections with remote locations, this protocol uses client and broker tools to publish messages to subscribers.

1. Import the MQTT protocol extension implementation file to NetScaler system. The code listing for mqtt.lua is given below. The example below imports the MQTT extension file hosted on a

webserver.

```
import extension http://10.217.24.48/extensions/mqtt.lua mqtt_code
```

2. Add a new user TCP based protocol to the system using the extension.

```
add user protocol MQTT -transport TCP -extension mqtt_code
```

3. Add a user load balancing vserver and bind backend services to it.

```
1 add service mqtt_svr1 10.217.24.48 USER_TCP 1501
2 add service mqtt_svr2 10.217.24.48 USER_TCP 1502
3 add lb vserver mqtt_lb USER_TCP -lbmethod USER_TOKEN
4 bind lb vserver mqtt_lb mqtt_svr1
5 bind lb vserver mqtt_lb mqtt_svr2
```

4. Add a user vserver for the newly added protocol. Set the defaultlb to the LB vserver configured above.

```
add user vserver mqtt_vs MQTT 10.217.24.28 8765 -defaultLb
mqtt_lb
```

5. Optionally, enable MQTT session persistence based on ClientID, set the persistence type to USERSESSION.

```
set lb vserver mqtt_lb -persistenceType USERSESSION
```

Protocol extensions - use cases

May 2, 2023

Protocol extensions can be used for the following use cases.

- Message based load balancing (MBLB)
- Streaming
- Token based load balancing
- Load balancing persistence
- TCP connection based load balancing
- Content based load balancing
- SSL
- Modify traffic
- Originate traffic to client or server
- Process data on the connection establishment

Message based load balancing

Protocol extensions support Message Based Load Balancing (MLB), which can parse any protocol on a NetScaler appliance and load balance the protocol messages arriving on one client connection, that is, distribute the messages over multiple server connections. MLB is achieved by user code that parses the client TCP data stream.

The TCP data stream is passed to the `on_data` callbacks for client and server behaviors. The TCP data stream is available to the extension functions through a Lua string like interface. You can use an API similar to the Lua string API to parse the TCP data stream.

Useful APIs include:

`data:len()`

`data:find()`

`data:byte()`

`data:sub()`

`data:split()`

Once the TCP data stream has been parsed into a protocol message, the user code achieves load balancing by just sending the protocol message to the next context available from the context passed to the `on_data` callback for the client.

The `ns.send()` API is used to send messages to other processing modules. In addition to the destination context, the send API takes the event name and optional payload as arguments. There is one-to-one correspondence between the event name and the callback function names for the behaviors. The callbacks for events are called `on_<event_name>`. The callback names use only lowercase.

For example, the TCP client and server `on_data` callbacks are user-defined handlers for events named "DATA." For sending the whole protocol message in one send call, the EOM event is used. EOM, which stands for end of message, signifies the end of protocol message to the LB context down stream, so a new load balancing decision is made for data that follows this message.

The extension code might sometimes not receive the whole protocol message in the `on_data` event. In such a case, the data can be held by using the `ctxt:hold()` API. The hold API is available for both TCP-client and server-callback contexts. When "hold with data" is called, the data is stored in the context. When more data is received in the same context, the newly received data is appended to the previously stored data and the `on_data` callback function is called again with the combined data.

Note: The load balancing method used depends on the configuration of the load balancing virtual server corresponding to the load balancing context.

The following code snippet shows the use of the send API to send the parsed protocol message.

Example:

```
1     function client.on_data(ctxt, payload)
2         --
3         -- code to parse payload.data into protocol message comes here
4         --
5         -- sending the message to lb
6         ns.send(ctxt.output, "EOM", {
7     data = message }
8     )
9     end -- client.on_data
10
11    function server.on_data(ctxt, payload)
12        --
13        -- code to parse payload.data into protocol message comes here
14        --
15        -- sending the message to client
16        ns.send(ctxt.output, "EOM", {
17    data = message }
18    )
19
20    end -- server.on_data
```

Streaming

In some scenarios, holding the TCP data stream until the whole protocol message is collected might not be necessary. In fact, it is not advised unless it is required. Holding the data increases memory usage on NetScaler appliance and can make the appliance susceptible to DDoS attacks by exhausting the memory on NetScaler appliance with incomplete protocol messages on many connections.

Users can achieve streaming of TCP data in the extension callback handlers by using the send API. Instead of holding the data until the whole message is collected, data can be sent in chunks. Sending data to `ctxt.output` by using the DATA event sends a partial protocol message. It can be followed by more DATA events. An EOM event must be sent to mark the end of the protocol message. The load balancing context downstream makes the load balancing decision on the first data received. A new load balancing decision is made after the receipt of the EOM message.

To stream protocol message data, send multiple DATA events followed by an EOM event. The contiguous DATA events and the following EOM event are sent to the same server connection selected by load balancing decision for the first DATA event in the sequence.

For a send to client context, EOM and DATA events are effectively the same, because there is no special handling by the client context downstream for EOM events.

Token based load balancing

For natively supported protocols, a NetScaler appliance supports a token based load balancing method that uses PI expressions to create the token. For extensions, the protocol is not known in advance, so PI expressions cannot be used. For token based load balancing, you have to set the default load balancing virtual server to use the USER_TOKEN load balancing method, and provide the token value from the extension code by calling the send API with a user_token field. If the token value is sent from the send API and the USER_TOKEN load balancing method is configured on the default load balancing virtual server, the load balancing decision is made by calculating a hash based on the token value. The maximum length of token value is 64 bytes.

```
add lb vserver v\_\mqttl lb USER\_\_TCP -lbMethod USER\_\_TOKEN
```

The code snippet in the following example uses a send API to send an LB token value.

Example:

```
1      -- send the message to lb
2
3
4
5
6      -- user_token is set to do LB based on clientID
7
8
9
10
11     ns.send(ctxt.output, "EOM", {
12 data = message,
13
14                                     user_token = token_info }
15 )
```

Load balancing persistence

Load balancing persistence is closely related to token based load balancing. Users have to be able to programmatically calculate the persistence session value and use it for load balancing persistence. The send API is used to send persistence parameters. To use load balancing persistence, you have to set the USERSESSION persistence type on the default load balancing virtual server and provide a persistence parameter from the extension code by calling the send API with a user_session field. The maximum length of the persistence parameter value is 64 bytes.

If you need multiple types of persistence for a custom protocol, you have to define user persistence types and configure them. The names of the parameters used to configure the virtual servers are decided by the protocol implementer. A parameter's configured value is also available to the extension code.

The following CLI and code snippet shows the use of a send API to support load balancing persistence. The code listing in the section [Code Listing for mqtt.lua](#) also illustrates the use of the `user_session` field.

For persistency, you have to specify the `USERSESSION` persistency type on the load balancing virtual server and pass the `user_session` value from the `ns.send` API.

```
add lb vserver v\\_mqttlb USER\\_TCP -persistencetype USERSESSION
```

Send the MQTT message to the load balancer, with the `user_session` field set to `clientID` in the payload.

Example:

```
1 -- send the data so far to lb
2
3 -- user_session is set to clientID as well (it will be used to persist
  session)
4
5 ns.send(ctxt.output, " DATA " , {
6   data = data, user_session = clientID }
7 )
```

TCP connection based load balancing

For some protocols, MBLB might not be needed. Instead, you might need TCP connection based load balancing. For example, the MQTT protocol must parse the initial part of the TCP stream to determine the token for load balancing. And, all the MQTT messages on the same TCP connection must be sent to the same server connection.

TCP connection based load balancing can be achieved by using the send API with only DATA events and not sending any EOM. That way the downstream load balancing context bases the load balancing decision on the data received first, and sends all the subsequent data to the same server connection selected by the load balancing decision.

Also, some use cases might require the ability to bypass extension handling after the load balancing decision has been made. Bypassing the extension calls results in better performance, because the traffic is processed purely by native code. Bypass can be done by using the `ns.pipe()` API. A call to the `pipe()` API extension code can connect input context to an output context. After the call to `pipe()`, all the events coming from input context directly go to the output context. Effectively, the module from which the `pipe()` call is made is removed from the pipeline.

The following code snippet shows streaming and the use of the `pipe()` API to bypass a module. The code listing in the section [Code Listing for mqtt.lua](#) also illustrates how to do streaming and the use of `pipe()` API to bypass the module for rest of the traffic on the connection.

Example:

```
1      -- send the data so far to lb
2      ns.send(ctxt.output, "DATA", {
3  data = data,
4                                     user_token = clientID }
5  )
6      -- pipe the subsequent traffic to the lb - to bypass the client
7      ns.pipe(ctxt.input, ctxt.output)
```

Content based load balancing

For native protocols, content switching like feature for protocol extensions is supported. With this feature, instead of sending the data to the default load balance, you can send the data to the selected load balancer.

Content switching feature for protocol extensions is achieved by using the `ctxt:lb_connect(<lbname >)` API. This API is available to the TCP client context. Using this API, the extension code can obtain a load balancing context corresponding to an already configured load balancing virtual server. You can then use the send API with the load balancing context thus obtained.

The lb context can be NULL sometimes:

- Virtual server does not exist
- Virtual server is not of user protocol type
- Virtual server's state is not UP
- Virtual server is user virtual server, not load balancing virtual server

If you remove the target load balancing virtual server when it is in use, then all connections associated with that load balancing virtual server is reset.

The following code snippet shows the use of `lb_connect()` API. The code maps the client ID to load balancing virtual server names (`lbname`) using the Lua table `lb_map` and then gets the LB context for `lbname` using `lb_connect()`. And finally sends to the LB context using send API.

```
1      local lb_map = {
2
3          ["client1*"] = "lb_1",
4          ["client2*"] = "lb_2",
5          ["client3*"] = "lb_3",
6          ["client4*"] = "lb_4"
7      }
8
9
10     -- map the clientID to the corresponding LB vserver and connect to
11     it
12     for client_pattern, lbname in pairs(lb_map) do
13         local match_idx = string.find(clientID, client_pattern)
```

```
13     if (match_idx == 1) then
14         lb_ctxt = ctxt:lb_connect(lbname)
15         if (lb_ctxt == nil) then
16             error("Failed to connect to LB vserver: " .. lbname)
17         end
18         break
19     end
20 end
21 if (lb_ctxt == nil) then
22     -- If lb context is NULL, the user can raise an error or send data
23     to default LB
24     error("Failed to map LB vserver for client: " .. clientID)
25 end
26 -- send the data so far to lb
27 ns.send(lb_ctxt, "DATA", {
28     data = data })
```

SSL

SSL for protocols using extensions is supported in ways similar to how SSL for native protocols is supported. Using the same parsing code for creating custom protocols, you can create a protocol instance over TCP or over SSL which can then be used to configure the virtual servers. Similarly, you can add user services over TCP or SSL.

For more information, see [Configuring SSL Offloading for MQTT](#) and [Configuring SSL Offloading for MQTT With End-To-End Encryption](#).

Server connection multiplexing

Sometimes, the client sends one request at a time and sends the next request only after the response for the first request is received from the server. In such a case, server connection can be reused for other client connections, and for the next message on the same connection, after the response has been sent to the client. To allow reuse of server connection by other client connections, you must use the `ctxt: reuse_server_connection()` API on the server side context.

Note: This API is available in NetScaler 12.1 build 49.xx and later.

Modify traffic

To modify data in the request or response, you must use the native rewrite feature that uses an advanced policy PI expression. Because you cannot use PI expressions in extensions, you can use the following APIs to modify a TCP stream data.

```
1 data:replace(offset, length, new_string)
2 data:insert(offset, new_string)
```

```
3 data:delete(offset, length)
4 data:gsub(pattern, replace [,n]))
```

The following code snippet shows the use of `replace()` API.

```
1 -- Get the offset of the pattern, we want to replace
2   local old_pattern = " pattern to repalace "
3 local old_pattern_length = old_pattern:len()
4   local pat_off, pat_end = data:find(old_pattern)
5   -- pattern is not present
6   if (not pat_off) then
7     goto send_data
8   end
9   -- If the data we want to modify is not completely present, then
10  -- wait for more data
11  if (not pat_end) then
12    ctxt:hold(data)
13    data = nil
14    goto done
15  end
16 data:replace(pat_off, old_pattern_length, " new pattern ")
17 ::send_data::
18 ns.send(ctxt.output, " EOM " , {
19   data = data }
20 )
21 ::done::
```

The following code snippet shows the use of `insert()` API.

```
1 data:insert(5, " pattern to insert " )
```

The following code snippet shows the use of `insert()` API, when we want to insert after or before some pattern:

```
1 -- Get the offset of the pattern, after or before which we want to
   insert
2   local pattern = " pattern after/before which we need to insert "
3 local pattern_length = pattern:len()
4   local pat_off, pat_end = data:find(pattern)
5   -- pattern is not present
6   if (not pat_off) then
7     goto send_data
8   end
9   -- If the pattern after which we want to insert is not
10  -- completely present, then wait for more data
11  if (not pat_end) then
12    ctxt:hold(data)
13    data = nil
14    goto done
15  end
16 -- Insert after the pattern
17 data:insert(pat_end + 1, " pattern to insert ")
18   -- Insert before the pattern
```

```

19 data:insert(pat_off, " pattern to insert ")
20 ::send_data::
21     ns.send(ctxt.output, " EOM " , {
22     data = data }
23     )
24 ::done::

```

The following code snippet shows the use of delete() API.

```

1  -- Get the offset of the pattern, we want to delete
2     local delete_pattern = " pattern to delete "
3  local delete_pattern_length = delete_pattern:len()
4     local pat_off, pat_end = data:find(old_pattern)
5     -- pattern is not present
6     if (not pat_off) then
7         goto send_data
8     end
9     -- If the data we want to delete is not completely present,
10    -- then wait for more data
11    if (not pat_end) then
12        ctxt:hold(data)
13        data = nil
14        goto done
15    end
16    data:delete(pat_off, delete_pattern_length)
17    ::send_data::
18    ns.send(ctxt.output, " EOM " , {
19    data = data }
20    )
21    ::done::

```

The following code snippet shows the use of gsub() API.

```

1     -- Replace all the instances of the pattern with the new string
2 data:gsub( " old pattern " , " new string " )
3 -- Replace only 2 instances of " old pattern "
4 data:gsub( " old pattern " , " new string " , 2)
5 -- Insert new_string before all instances of " http "
6 data:gsub( " input data " , " (http)" , " new_string%1 " )
7 -- Insert new_string after all instances of " http "
8 data:gsub( " input data " , " (http)" , " %1new_string " )
9 -- Insert new_string before only 2 instances of " http "
10 data:gsub( " input data " , " (http)" , " new_string%1 " , 2)

```

Note: This API is available in NetScaler 12.1 build 50.xx and later.

Originate traffic to client or server

You can use the ns.send() API to send data that originates from the extension code to a client and a back-end server. To send or receive response directly with a client, from client context, you must use ctxt.client as the target. To send or receive response directly with a back-end server from server

context, you must use `ctxt.server` as the target. The data in the payload can be a TCP stream data or a Lua string.

To stop traffic processing on a connection, you can use `ctxt:close()` API from either the client or the server context. This API closes the client-side connection or any server connections linked to it.

When you call the `ctxt:close()` API, extension code sends TCP FIN packet to the client and server connections and if more data is received from the client or server on this connection, then the appliance resets the connection.

The following code snippet shows the use of `ctxt.client` and `ctxt:close()` APIs.

```
1      -- If the input packet is not MQTT CONNECT type, then
2  -- send some error response to the client.
3  function client.on_data(ctxt, payload)
4      local data = payload.data
5      local offset = 1
6      local msg_type = 0
7      local error_response = "Missing MQTT Connect packet."
8      byte = data:byte(offset)
9  msg_type = bit32.rshift(byte, 4)
10  if (msg_type ~= 1) then
11  -- Send the error response
12      ns.send(ctxt.client, "DATA", {
13      data = error_response }
14  )
15  -- Since error response has been sent, so now close the connection
16      ctxt:close()
17  end
```

The following code snippet shows the example when user can inject the data in the normal traffic flow.

```
1  -- After sending request, send some log message to the server.
2  function client.on_data(ctxt, payload)
3  local data = payload.data
4  local log_message = "client id : " .. data:sub(3, 7) .. " user name : "
5      data:sub(9, 15)
6  -- Send the request we get from the client to backend server
7  ns.send(ctxt.output, "DATA", {
8      data = data }
9  )
10  After sending the request, also send the log message
11  ns.send(ctxt.output, "DATA", {
12      data = log_message }
13  )
14  end
```

The following code snippet shows the use of `ctxt.to_server` API.

```
1  -- If the HTTP response status message is "Not Found",
2  -- then send another request to the server.
```

```
3 function server.on_data(ctxt, payload)
4     local data = payload.data
5     local request " GET /default.html HTTP/1.1\r\n\r\n" ss
6     local start, end = data:find( " Not Found " )
7     if (start) then
8         -- Send the another request to server
9         ns.send(ctxt.server, " DATA " , {
10    data = request }
11    )
12 end
```

Note: This API is available in NetScaler 12.1 build 50.xx and later.

Data processing on the connection establishment

There might be a use case where you want to send some data at the connection establishment (when the final ACK is received). For example, in proxy protocol, you might want to send client's source and destination IP addresses and ports to the back-end server at the connection establishment. In this case, you can use `client.init()` callback handler to send the data on connection establishment.

The following code snippet shows the use of `client.init()` callback:

```
1 -- Send a request to the next processing context
2 -- on the connection establishment.
3 function client.init(ctxt)
4     local request " PROXY TCP4 " + ctxt.client.ip.src.to_s + " " +
5         ctxt.client.ip.dst.to_s + " " + ctxt.client.tcp.srcport + " "
6         + ctxt.client.tcp.dstport
7     -- Send the another request to server
8     ns.send(ctxt.output, " DATA " , {
9     data = request }
10    )
11 end
```

Note: This API is available in NetScaler 13.0 build xx.xx and later.

Tutorial –Add MQTT protocol to the NetScaler appliance by using protocol extensions


May 2, 2023

The command line interface (CLI) commands for custom protocol use the keyword “user” to signify the user defined nature of the underlying configuration entities. With the help of extension code, you can add a new user protocol to the system and add user virtual servers for user-defined protocols. The

user virtual servers are in turn configurable by setting parameters. Configured values for virtual server parameters are available in the extension code.

MQTT protocol is used for illustration purposes.

The following diagram illustrates a NetScaler appliance and MQTT client and broker tools.

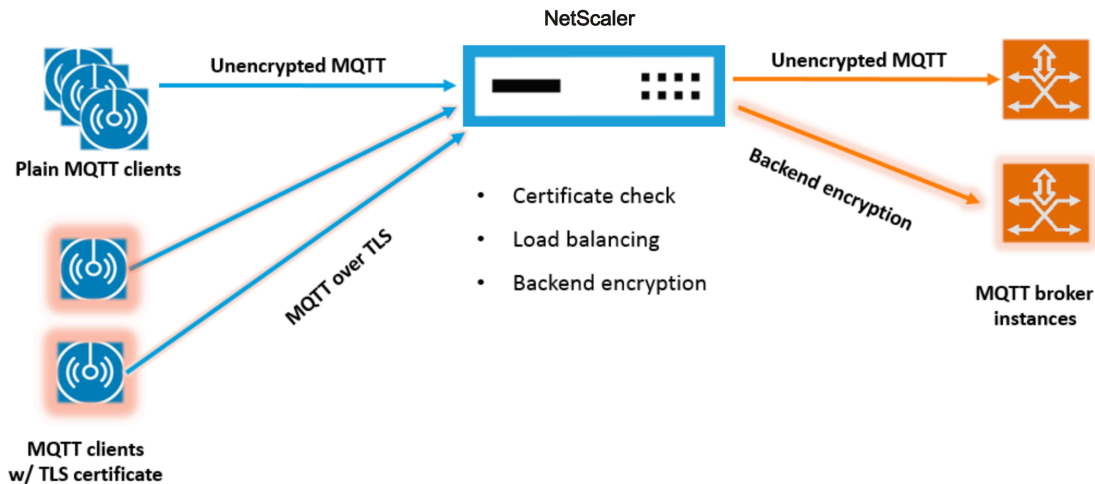

Code listing for mqtt.lua

May 2, 2023

The code listing below, `mqtt.lua`, gives the code to implement the MQTT protocol on NetScaler using protocol extensions. The code only has the TCP client data callback function defined - `client.on_data()`. For server data, it does not add a callback function and the server to client takes the fast native path. For client data, the code parses the CONNECT MQTT protocol message and extracts the ClientID. It then uses the ClientID for `user_token` value, which is used to load balance all the client traffic for the connection based on the ClientID by setting LB method for the LB vserver as `USER_TOKEN`. It uses the ClientID also for `user_session` value, which can be used for LB persistence by setting persistence type for the LB vserver as `USERSESSION`. The code uses the `ns.send()` to do LB and send the initial data. It uses the `ns.pipe()` API to send the rest of the client traffic directly to server connection, bypassing calls to extension callback handler.

```

1  --[[
2
3  MQTT event handler for TCP client data
4
5  ctxt - TCP client side App processing context.
6
7  data - TCP Data stream received.
```



```
8
9   - parse the client ID from the connect message - the first message
    should be connect
10
11  - send the data to LB with ClientID as user token and session
12
13  - pipe the subsequent data to LB directly. This way the subsequent
    MQTT traffic will
14
15    bypass the tcp client on_data handler
16
17  - if a parse error is seen, throw an error so the connection is
    reset
18
19 --]]
20
21 function client.on_data(ctxt, payload)
22
23     local data = payload.data
24
25     local data_len = data:len()
26
27     local offset = 1
28
29     local byte = nil
30
31     local utf8_str_len = 0
32
33     local msg_type = 0
34
35     local multiplier = 1
36
37     local max_multiplier = 128 * 128 * 128
38
39     local rem_length = 0
40
41     local clientID = nil
42
43     -- check if MQTT fixed header is present (fixed header length is
        atleast 2 bytes)
44
45     if (data_len < 2) then
46
47         goto need_more_data
48
49     end
50
51     byte = data:byte(offset)
52
53     offset = offset + 1
54
55     -- check for connect packet - type value 1
56
```

```
57     msg_type = bit32.rshift(byte, 4)
58
59     if (msg_type ~= 1) then
60         error("Missing MQTT Connect packet.")
61     end
62
63     end
64
65     -- parse the remaining length
66
67     repeat
68
69         if (multiplier > max_multiplier) then
70             error("MQTT CONNECT packet parse error - invalid Remaining
71                 Length.")
72
73         end
74
75         if (data_len < offset) then
76             goto need_more_data
77         end
78
79         byte = data:byte(offset)
80
81         offset = offset + 1
82
83         rem_length = rem_length + (bit32.band(byte, 0x7F) * multiplier)
84
85         multiplier = multiplier * 128
86
87     until (bit32.band(byte, 0x80) == 0)
88
89     -- protocol name
90
91     -- check if protocol name length is present
92
93     if (data_len < offset + 1) then
94         goto need_more_data
95     end
96
97     -- protocol name length MSB
98
99     byte = data:byte(offset)
100
101     offset = offset + 1
102
103     utf8_str_len = byte * 256
104
105
106
107
108
```

```
109     -- length LSB
110
111     byte = data:byte(offset)
112
113     offset = offset + 1
114
115     utf8_str_len = utf8_str_len + byte
116
117     -- skip the variable header for connect message
118
119     -- the four required fields (protocol name, protocol level, connect
120         flags, keep alive)
121
122     offset = offset + utf8_str_len + 4
123
124     -- parse the client ID
125
126     --
127
128     -- check if client ID len is present
129
130     if (data_len < offset + 1) then
131         goto need_more_data
132
133     end
134
135     -- client ID length MSB
136
137     byte = data:byte(offset)
138
139     offset = offset + 1
140
141     utf8_str_len = byte * 256
142
143     -- length LSB
144
145     byte = data:byte(offset)
146
147     offset = offset + 1
148
149     utf8_str_len = utf8_str_len + byte
150
151     if (data_len < (offset + utf8_str_len - 1)) then
152
153         goto need_more_data
154
155     end
156
157     clientID = data:sub(offset, offset + utf8_str_len - 1)
158
159     -- send the data so far to lb, user_token is set to do LB based on
160         clientID
```

```
160
161     -- user_session is set to clientID as well (it will be used to
162         persist session)
163     ns.send(ctxt.output, "DATA", {
164 data = data,
165
166         user_token = clientID,
167
168         user_session = clientID }
169 )
170
171     -- pipe the subsequent traffic to the lb - to bypass the
172         extension handler
173     ns.pipe(ctxt.input, ctxt.output)
174
175     goto parse_done
176
177     ::need_more_data::
178
179     ctxt:hold(data)
180
181     ::parse_done::
182
183     return
184
185 end
```

Configure MQTT by using protocol extensions

August 21, 2024

The following steps add a MQTT protocol to the NetScaler appliance.

Import the extension file to the NetScaler appliance, from either a web server (using HTTP) or your local workstation. For details about importing the extension file, see [Import extensions](#).

```
import ns extension local:mqtt_generic_fs.lua mqtt_code
```

Add a new user TCP based protocol to the system by using the extension.

```
add user protocol MQTT -transport TCP -extension mqtt_code
```

Add a service of type USER_TCP to indicate that this is a user-defined protocol.

```
add service s1 10.102.90.112 USER_TCP 80
```

Add a user load balancing vserver and bind backend services to it.

```
add lb vs mysv USER_TCP
```

```
bind lb vs mysv s1
```

Add a user virtual server for the newly added protocol and make the load balancing virtual server configured in the previous step the default load balancer.

```
add user vs v_mqtt MQTT 10.217.24.28 80 -defaultlb mysv
```

Optionally, enable MQTT session persistence based on ClientID, set the persistence type to USERSESSION.

```
set lb vserver mysv -persistenceType USERSESSION
```

Configuring SSL offloading for MQTT

May 2, 2023

You can implement SSL offloading for user protocols by adding an SSL instance for the protocol. The example below shows how to do SSL offloading for a user protocol. The traffic to backend services is unencrypted with this configuration.

Note: This example does not provide details related to adding or updating a certificate-key pair and binding it to a virtual server. For those details, see [SSL certificates](#).

The following commands add the MQTT_SSL protocol by including mqtt.lua with transport value “SSL.”

```
1 import extension http://10.217.24.48/extensions/mqtt.lua mqtt_code
2 add user protocol MQTT_SSL -transport SSL -extension mqtt_code
```

The following commands add a user load balancing virtual server and bind backend services to it.

```
1 add service mqtt_svr1 10.217.24.48 USER_TCP 1501
2 add service mqtt_svr2 10.217.24.48 USER_TCP 1502
3 add lb vserver mqtt_lb USER_TCP -lbMethod ROUNDROBIN
4 bind lb vserver mqtt_lb mqtt_svr1
5 bind lb vserver mqtt_lb mqtt_svr2
```

The following command adds a user virtual server for the newly added protocol MQTT_SSL. Using MQTT_SSL means the NetScaler appliance will do SSL offloading, because MQTT_SSL was configured with SSL transport. The command also sets the defaultlb to the load balancing virtual server configured in the previous step.

```
add user vserver mqtt_vs MQTT_SSL 10.217.24.28 8765 -defaultlb
mqtt_lb
```

For SSL offloading, you also need to enable the SSL feature and bind a certkey to the user virtual server. For more information, see the following topics:

[Add or update a certificate-key pair](#)

[Bind the certificate-key pair to the SSL virtual server](#)

Example:

```
1 enable ns feature SSL
2
3 add SSL certKey mqtt_svr_cert_key -cert server1.cert -key server1.key
4
5 bind ssl vserver mqtt_vs -certkeyName mqtt_svr_cert_key
```

Configuring SSL offloading with end-to-end encryption for MQTT

May 2, 2023

The following example shows how to do SSL offloading for MQTT with end-to-end encryption.

Note: This example does not provide details related to adding or updating a certificate-key pair and binding it to a virtual server. For those details, see [SSL certificates](#).

The following commands import the extension file and add the MQTT_SSL protocol with SSL transport.

```
1 import extension http://10.217.24.48/extensions/mqtt.lua mqtt_code
2 add user protocol MQTT_SSL -transport SSL -extension mqtt_code
```

The following commands add a user load balancing virtual server and bind backend services to it. Both the load balancing virtual server and the services are configured for the service type USER_SSL_TCP.

```
1 add service mqtt_svr1 10.217.24.48 USER_SSL_TCP 1501
2 add service mqtt_svr2 10.217.24.48 USER_SSL_TCP 1502
3 add lb vserver mqtt_lb USER_SSL_TCP -lbmethod RR
4 bind lb vserver mqtt_lb mqtt_svr1
5 bind lb vserver mqtt_lb mqtt_svr2
```

The following command adds a user virtual server for the newly added protocol MQTT_SSL. Using MQTT_SSL means the NetScaler appliance will do SSL offloading, because MQTT_SSL was configured with SSL transport. The command also makes the load balancing virtual server, configured in previous step, the default load balancer.

```
add user vserver mqtt_vs MQTT_SSL 10.217.24.28 8765 -defaultLb
mqtt_lb
```

For end-to-end encryption, you also need to enable the SSL feature and bind a certkey to the user and default load balancing virtual servers. For more information, see the following topics:

[Add or update a certificate-key pair](#)

[Bind the certificate-key pair to the SSL virtual server](#)

```
1 enable ns feature SSL
2
3 add SSL certKey mqtt_svr_cert_key -cert server1.cert -key server1.key
4
5 bind ssl vserver mqtt_lb -certkeyName mqtt_svr_cert_key
6
7 bind ssl vserver mqtt_vs -certkeyName mqtt_svr_cert_key
```

Tutorial - load balancing syslog messages by using protocol extensions

May 2, 2023

Syslog protocol available on the NetScaler appliance works only for the messages generated on the NetScaler appliance. It does not load balance the messages coming from external nodes. To load balance such messages, you need to use the protocol extensions feature and write the syslog message parsing logic by using the Lua 5.2 programming language.

Code for parsing syslog message

The code only has the TCP client data callback function defined - `client.on_data()`. For server data, it does not add a callback function and the server to client takes the fast native path. The code identifies message boundary based on the trailing character. If the TCP packet contains more than one syslog messages, then we split the packet based on the trailing character and load balance each message.

```
1 --[[
2
3   Syslog event handler for TCP client data
4
5   ctxt - TCP client side App processing context.
6
7   data - TCP Data stream received.
8
9 --]]
10
11 function client.on_data(ctxt, payload)
12
13     local message = nil
14
```

```
15         local data_len
16
17         local data = payload.data
18
19         local trailing_character = "\n"
20
21         ::split_message::
22
23             -- Get the offset of trailing
24             character
25
26             local new_line_character_offset =
27                 data:find(trailing_character)
28
29             -- If trailing character is not
30             found, then wait for more data.
31
32             if (not new_line_character_offset)
33                 then
34
35                     goto
36                         need_more_data
37
38                 end
39
40             -- Get the length of the current
41             message
42
43             data_len = data:len()
44
45             -- Check whether we have more than
46             one message
47
48             -- by comparing trailing character
49             offset and
50
51             -- current data length
52
53             if (data_len >
54                 new_line_character_offset) then
55
56                 -- If we have
57                 more than one
58                 message, then
59                 split
60
61                 -- the data into
62                 two parts such
63                 that first
64                 part
65
66                 -- will contain
67                 message upto
```



```
52         trailing
53         character
54         -- offset and
55         second part
56         will contain
57         -- remaining
58         message.
59         message, data =
60         data:split(
61         new_line_character_offset
62         )
63     else
64         message = data
65         data = nil
66     end
67 -- Send the data to the backend server.
68     ns.send(ctxt.output, "EOM", {
69     data = message }
70 )
71
72     goto done
73
74     ::need_more_data::
75         -- Wait for more
76         data
77         ctxt:hold(data)
78         data = nil
79         goto done
80
81     ::done::
82         -- If we have
83         more data to
84         parse,
85         -- then do
86         parsing again.
87         if (data) then
88
89
90
91
92
```

```

93
94
95                                     end
96
97  end

```

goto

split_

Configuring syslog protocol by using protocol extensions

May 2, 2023

The following steps add a user SYSLOG protocol to the NetScaler appliance.

Import the extension file to the NetScaler appliance, from either a web server (using HTTP) or your local workstation. For details about importing the extension file, see [Importing Extensions](#).

```
import ns extension local:syslog_parser.lua syslog_parser_code
```

Add a new user TCP-based protocol to the system by using the extension.

```
add user protocol USER_SYSLOG -transport TCP -extension syslog_parser_code
```

Add a service of type USER_TCP to indicate that this is a user-defined protocol.

```
add service s1 10.102.90.112 USER_TCP 80
```

Add a user load balancing vserver and bind backend services to it.

```

1  add lb vs mysv USER_TCP
2
3  bind lb vs mysv s1

```

Add a user virtual server for the newly added protocol and make the load balancing virtual server configured in the previous step the default load balancer.

```
add user vs v_syslog USER_SYSLOG 10.217.24.28 80 -defaultlb mysv
```

Protocol extensions command reference

May 2, 2023

The following table lists all the new commands added for custom protocols, and the existing commands that have been modified for custom protocols.

```
show lb persistentSessions [<vserv-name>]
```

- **CLI command:**

```
add user protocol <name> -transport ( TCP | SSL )-extension <string> -comment <string>]>
```

- **Description:**

Adds a new user protocol to the NetScaler appliance by using extensions. Currently only user protocols with transport value TCP or SSL are supported.

Example:

```
add user protocol MQTT -transport TCP -extension mqtt_code
```

- **CLI command:**

```
rm user protocol <name>
```

- **Description:**

Removes a user protocol previously added to the NetScaler appliance.

Example:

```
rm user protocol mqtt
```

- **CLI command:**

```
set user protocol <name> -comment <string>
```

- **Description:**

Changes settings for a user protocol previously added to the NetScaler appliance.

Example:

```
set user protocol mqtt -comment "MQTT protocol implementation"
```

- **CLI command:**

```
unset user protocol <name> -comment
```

- **Description:**

Removes settings for a user protocol previously added to the NetScaler appliance.

Example:

```
unset user protocol mqtt -comment "MQTT protocol implementation"
```

- **CLI command:**

```
update ns extension <extension name>
```

- **Description:**

Updates the implementation for a previously added user protocol by using extensions.

You can update the protocol implementation only if the protocol is not being used by any user virtual server.

Example:

```
update ns extension my-extension
```

- **CLI command:**

```
add lb vserver <name> [USER_TCP | USER_SSL_TCP] [-lbmethod  
USER_TOKEN] [-persistencetype USERSESSION] [-timeout <value>]
```

- **Description:**

Adds a load balancing virtual server to the NetScaler appliance. This is an existing CLI command.

For load balancing user virtual servers, the service type to use is USER_TCP or USER_SSL_TCP. The IP address and port are not allowed with user load balancing virtual servers.

For user load balancing virtual servers, only the ROUNDROBIN load balancing method is allowed, and the token value is provided by the extension code. Similarly, only USERSESSION persistence is allowed, and the persistence setting is provided by the extension code.

Example:

```
add lb vserver mysv USER_TCP -lbmethod ROUNDROBIN
```

- **CLI command:**

```
add user vserver <name> <userProtocol> <IPAddress> <port> -  
defaultLB <string> [-params <string>] [-comment <string>]
```

- **Description:**

Adds a virtual server for a user protocol by using extensions. The configured default user load balancing virtual server is available to the TCP client data extension handler as `ctxt.output`. For a virtual server, extension parameters can be set by using the `-params` option with a name and a value pair. The corresponding parameter value is available to the extension handlers as `ctxt.vserver.params.<paramName>`.

Example:

```
add user vs v_mqtt MQTT 10.217.24.28 80 -defaultlb mysv
```

• CLI command:

```
rm user vserver <name>
```

• Description:

Removes a user virtual server previously added to to the NetScaler appliance.

Example:

```
rm user vserver v_mqtt
```

• CLI command:

```
set user vserver <name> [-IPAddress <ip_addr|ipv6_addr|*>] [-defaultLB <string>] [-params <string>] [-comment <string>]
```

• Description:

Changes settings for a user virtual server previously added to to the NetScaler appliance. When an extension parameter is assigned a new value by the -params option, the old value is overwritten.

Example:

```
set user vs v_mqtt MQTT 10.217.24.28 -defaultlb mysv -comment "MQTT protocol implementation"
```

• CLI command:

```
unset user vserver <name> [-params] [-comment]
```

• Description:

Removes the settings for a user virtual server previously added to to the NetScaler appliance. If you use the -params option to unset an extension parameter, the corresponding parameter value available to extension handlers is changed to nil.

Example:

```
unset user vs v_mqtt MQTT 10.217.24.28 -defaultlb mysv -comment "MQTT protocol implementation"
```

• CLI command:

```
show user protocol [<name>]
```

- **Description:**

Displays information about a user protocol, such as extension and callbacks.

Example:

```
show user protocol mqtt
```

- **CLI command:**

```
show user vserver [<name>]
```

- **Description:**

Displays information about a user virtual server.

Example:

```
show user vserver vs_mqtt
```

- **CLI command:**

```
stat user vserver [<name>]
```

- **Description:**

Displays statistics about a user virtual server.

Example:

```
stat user vserver vs_mqtt
```

- **CLI command:**

```
show lb persistentSessions [<vserv-name>]
```

- **Description:**

Displays information about persistent sessions. This is an existing CLI. For user protocols, the persistence type is shown as USERSESSION.

- **CLI command:**

```
rm lb vserver <name>
```

- **Description:**

Removes a user LB vserver previously added to the NetScaler appliance.

Example:

```
rm lb vserver mysv
```

- **CLI command:**

```
add service <name> <IPAddr> (USER_TCP | USER_SSL_TCP) <Port>
```

- **Description:**

Adds a backend service to be used for a user protocol. This is an existing CLI command with new service types USER_TCP and USER_SSL_TCP.

Example:

```
add service mqtt_svr1 10.217.24.48 USER_TCP 1501
```

Note: The existing “set service and unset service” commands can be used to remove or change the settings of a previously added service for a user protocol.

- **CLI command:**

```
bind lb vserver <name> <serviceName>
```

- **Description:**

Binds a service to a user LB vserver. The service type should be USER_TCP/USER_SSL_TCP for binding to an LB vserver with type of USER_TCP/USER_SSL_TCP.

Example:

```
bind lb vserver mysv mqtt_svr1
```

- **CLI command:**

```
unbind lb vserver <name> <serviceName>
```

- **Description:**

Unbinds a previously bound service to a user LB vserver.

Example:

```
unbind lb vserver mysv mqtt_svr1
```

- **CLI command:**

```
rm service <name>
```

- **Description:**

Removes a service that is previously added for a user protocol.

Example:

```
rm service mqtt_svr1
```

Troubleshooting protocol extensions

May 2, 2023

If your extension function is not behaving as expected, you can use extension tracing functionality to verify the behavior of your extension function. You can also add logging to your extension function by using the custom logging functionality, where you can define the log level to be captured on the NetScaler appliance.

Custom logging

You can also add your own logging to your extension function. To do so, use the built-in `ns.logger:level()` function, where `level` is `emergency`, `alert`, `critical`, `error`, `warning`, `notice`, `info`, or `debug`. The parameters are the same as the C `printf()` function: a format string, and a variable number of arguments to supply values for the `%` specified in the format string. For example, you might add the following to the `COMBINE_HEADERS` function to log the result of a call:

```
1 local result\_str = table.concat(combined\_headers, "\\r\\n") .. "\\r\\n\\r\\n"
2
3 ns.logger:info("Result: %s", result\_str)
4
5 return result\_str
```

The above function would log the following message to `/var/log/ns.log` for the sample input shown in the abbreviated log messages examples in the Extension Tracing section above.

```
... : default NSEXTENSION Message 143 0 : "Result: Host: 10.217.24.7:2000^
M H1: abcd, 1234^M User-Agent: curl/7.24.0 (amd64-portbld-freebsd8.4)
libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3^M Accept: */.*^M H2: h2val1
, h2val2, h2val3^M ^M"
```

Policy extensions

May 2, 2023

The policy extension feature enables you to write extension functions for built-in policy types. The extensions can be used in policy expressions, just like built-in functions. They are executed when the corresponding policy expressions are evaluated. This feature is useful for:

- Adding customized functions to existing Policies.

- Implementing logical constructs for complex customer requirements.

The policy extension feature addresses these limitations by enabling users to write extension functions for built-in Policy types. The extensions can then be used in the policy expressions, just like built-in functions. They are executed when the corresponding policy expressions are evaluated.

The following table lists the policy types that can be used when writing an extension, and their associated mappings.

Policy Type	Mapped Policy Type	Output
TEXT_T	NSTEXT	String
BOOL_AT	NSBOOL	Boolean
NUM_AT	NSNUM	Number (double-precision floating point)
DOUBLE_AT	NSDOUBLE	Number (double-precision floating point)

Prerequisites for using policy extensions

The imported functions must conform to the existing policy standards. Therefore:

- The function name must start with a letter and may contain numbers or underscores.
- The function name is treated as case insensitive by NetScaler policies.
- The function must return a single value even if the extension language returns multiple values.
- Functions with a variable number of arguments are not supported.

How do policy extensions work?

The existing policies on a NetScaler appliance use an interpreter to evaluate the functions, which are imported in a policy extension file. When a user imports a new function in a policy extension file:

1. The extension file is validated for syntax and other conditions.
2. If the validation fails, the error is reported to the user.
3. If the validation succeeds, the extension file is imported to the NetScaler appliance and its contents can be used in policy expressions, just like any built-in policy function
 - a) If the policy expression evaluation returns an error during runtime, it is reported as an undef event and the associated error counter is incremented.

Note: If a policy undef event occurs and the policy rule contains one or more policy extension functions, the `show ns extension <name>` command displays the undef hits

when applied to those policy extensions. If the extension function is aborted, the abort counter value is incremented.

- b) If the policy expression evaluation is successful, expression evaluation resumes until the entire expression is evaluated, or until it is aborted because of an error.

If the extension function takes too long to run, it is aborted, and the error counter pertaining to that extension function is incremented. The extension function is sandboxed, which prevents:

- Excessive CPU usage on the NetScaler appliance.
- Excessive memory usage on the NetScaler appliance.
- Usage of harmful built-in libraries or third-party libraries or binaries.
- Long-running scripts that could potentially cause the NetScaler appliance to reboot.

Configuring policy extensions

September 5, 2024

When your policy extension file is ready, import it to the NetScaler appliance. The import process copies the extension file into a directory on the NetScaler appliance and checks for syntax errors.

After the import, you have to make the extension file available for use in the policy expressions.

Note:

- Use the **import** command to download the file content from an external source `\<src\>`, or an internal source, onto the NetScaler file system.
- Use the **add** command to load the file content into one or more packet engines for the first time.
- If the file content is updated, you can download the new content to the NetScaler file system by using the **import** command with the `overwrite` argument.
- Use the **update** command to load the updated content to one or more packet engines.

Configure policy extensions by using the CLI

1. Import the policy extension file to the NetScaler Appliance, from either a web server (using HTTP) or your local workstation.
 - a) HTTP Import

If you have a web server available, you can store the extension file in the webserver directory and import it to the NetScaler appliance.

```
1 import ns extension <src> <name> [-comment<string>] [-  
  overwrite]
```

Example:

```
1 import ns extension http://myhost/path/to/extension  
  myextension -comment "Custom crc calculation"
```

b) Local Import

You can use the SSH client to copy the extension file from your workstation to the `/var/tmp` directory of the NetScaler appliance

```
1 scp extension-file-name <ns-userid@ns-ip-addr>:/var/tmp
```

where,

- `extension-file-name` is the name of the extension file on your client machine.
- `ns-userid` is the NetScaler appliance user with permission to write to `/var/tmp`.
- `ns-ip-addr` is the NetScaler IP address.

After copying the file to the NetScaler appliance, run the `import` command on the NetScaler appliance.

```
1 import ns extension local:<extension-file-name> <extension-  
  name>
```

Note:

The CLI must be used to import a local extension file, by running the `import` command.

2. Add the policy extension to the packet engine for evaluation.

```
1 add ns extension <name> [-comment <string>]
```

Example:

```
1 add ns extension myextension
```

After an extension file is imported, you can update it, if you included the `-overwrite` parameter in the `import` command, or remove it. You can also display the details of an imported extension file.

Update an extension file on the NetScaler appliance from the source

At the command prompt, type:

```
1 update ns extension <name>
```

Note:

You can update the extension file only after importing the specified extension file to the NetScaler appliance with the `-overwrite` parameter.

Example:

```
1 update ns extension myextension
```

Remove an extension file from the NetScaler appliance

At the command prompt type:

```
1 rm ns extension <name>
```

Example:

```
1 rm ns extension myextension
```

Display the details of the specified extension function on the NetScaler appliance

At the command prompt, type:

```
1 show ns extension <name>
```

Example:

```
1 show ns extension myextension
```

Configure policy extensions by using the GUI

1. Import the policy extension file to the NetScaler Appliance, from either a web server (using HTTP) or your local workstation.
 - a) Navigate to **AppExpert > Policy Extensions**, click **Policy Extension**, from the **Import From** drop-down list, select the URL for the location of the extension file that you want to import.
 - b) Navigate to **AppExpert > Policy Extensions**, and on the **Policy Extension** tab, import the extension file by selecting **File** in the **Import From** drop-down list.
2. Add the policy extension to the packet engine for evaluation.

Navigate to **AppExpert > Policy Extensions**, and on the **Policy Extensions** tab, add the extension file.

Update an extension file on the NetScaler appliance from the source

Navigate to **AppExpert > Policy Extensions**, and on the **Policy Extensions** tab, update the extension file.

Remove an extension file from the NetScaler appliance

Navigate to **AppExpert > Policy Extensions**, and on the **Policy Extensions** tab, remove the extension file.

Display the details of the specified extension function on the NetScaler appliance

Navigate to **AppExpert > Policy Extensions**, and on the **Policy Extensions Functions** tab, click the drop-down list arrow of the extension function that you want to see the details.

Policy extensions - use cases

May 2, 2023

Certain customer applications have requirements that cannot be addressed with existing policies and expressions. The policy extension feature enables customers to add customized functions to their applications to meet their requirement.

The following use cases illustrate the addition of new functions using the policy extension feature on the NetScaler appliance.

- Case 1: Custom hash
- Case 2: Collapse double slashes in URLs
- Case 3: Combine headers

Case 1: Custom hash

The CUSTOM_HASH function provides a mechanism to insert any type of hash value in the responses sent to the client. In this use case, the hash function is used to compute the hash of the query string for a rewrite HTTP request and insert an HTTP header named CUSTOM_HASH with the computed value. The CUSTOM_HASH function implements the DJB2 hash algorithm.

Sample Usage of CUSTOM_HASH:

```
1 > add rewrite action test_custom_hash insert_http_header "CUSTOM_HASH"  
    "HTTP.REQ.URL.QUERY.CUSTOM_HASH"
```

Sample Definition of CUSTOM_HASH():

```
1 -- Extension function to compute custom hash on the text  
2  
3 -- Uses the djb2 string hash algorithm  
4 function NSTEXT:CUSTOM_HASH() : NSTEXT  
5  
6     local hash = 5381  
7  
8     local len = string.len(self)  
9  
10    for i = 1, len do  
11  
12        hash = bit32.bxor((hash * 33), string.byte(self, i))  
13  
14    end  
15  
16    return tostring(hash)  
17  
18 end
```

Line-by-line description of the above sample:

```
1 function NSTEXT:CUSTOM_HASH() : NSTEXT  
2  
3 Defines the CUSTOM_HASH() function, with text input and a text return  
  value.  
4  
5 local hash = 5381  
6 local len = string.len(self)  
7  
8 Declares two local variables:  
9  
10 - hash. Accumulates the compute hash value and is seeded with the  
   number 5381  
11  
12 - len. Sets to the length of the self input text string, using the  
   built-in string.len() function.  
13  
14 for i = 1, len do  
15     hash = bit32.bxor((hash * 33), string.byte(self, i))  
16 end  
17  
18 Iterates through each byte of the input string and adds the byte to the  
   hash. It uses the built-in string.byte() function to get the byte  
   and the built-in bit32.bxor() function to compute the XOR of the  
   existing hash value (multiplied by 33) and the byte.  
19  
20 return tostring(hash)  
21
```

```
22 Calls the built-in tostring() function to convert the numeric hash
    value to a string and returns the string as the value of the
    function.
```

Case 2: Collapse double slashes in URLs

Collapsing double slashes in URLs improves the website rendering time, because browsers parse the single slash URLs more efficiently. The single slash URLs also to maintain compatibility with applications that do not accept double slashes. The policy extension feature allows customers to add a function that replaces the double slashes with single slashes in the URLs. The following example illustrates the addition of a policy extension function that that collapses double slashes in URLs.

Sample Definition of COLLAPSE_DOUBLE_SLASHES():

```
1  -- Collapse double slashes in URL to a single slash and return the
    result
2  function NSTEXT:COLLAPSE_DOUBLE_SLASHES() : NSTEXT
3
4      local result = string.gsub(self, "//", "/")
5
6      return result
7
8  end
```

Line-by-line description of the above sample:

```
1  function NSTEXT:COLLAPSE_DOUBLE_SLASHES() : NSTEXT
2
3  Declares the COLLAPSE_DOUBLE_SLASHES() function with text input and
    return.
4
5  local result = string.gsub(self, "//", "/")
6
7  Declares a local variable named result and uses the built-in string.
    gsub() function to replace all double slashes with single slashes in
    the self input text.
8
9  The second parameter of string.gsub() is actually a regular expression
    pattern, although here a simple string is used for the pattern.
10
11 return result
12
13 Returns the resulting string.
```

Case 3: Combine headers

Certain customer applications cannot handle multiple headers in a request. Also, parsing of duplicate headers with same header values, or multiple headers with same name but different values in a

request, consumes time and network resources. The policy extension feature allows customers to add a function to combine these headers into single headers with a value combining the original values. For example, combining the values of the headers H1 and H2.

Original request:

```
1 GET /combine_headers HTTP/1.1
2 User-Agent: amigo unit test
3 Host: myhost
4 H2: h2val1
5 H1: abcd
6 Accept: */*
7 H2: h2val2
8 Content-Length: 0
9 H2: h2val3
10 H1: 1234
```

Modified request:

```
1 GET /combine_headers HTTP/1.1
2 User-Agent: amigo unit test
3 Host: myhost
4 H2: h2val1, h2val2, h2val3
5 H1: abcd, 1234
6 Accept: */*
7 Content-Length: 0
```

In general, this type of request modification is done using the Rewrite feature, using policy expressions to delineate the part of the request to be modified (the target) and the modification to be performed (the string builder expression). However, policy expressions do not have the ability to iterate over an arbitrary number of headers.

The solution to this problem requires an extension to the policy facility. To do this, we will define an extension function, called COMBINE_HEADERS. With this function, we can set up the following rewrite action:

```
> add rewrite action combine_headers_act replace 'HTTP.REQ.FULL_HEADER
.AFTER_STR("HTTP/1.1\rn")' 'HTTP.REQ.FULL_HEADER.AFTER_STR("HTTP/1.1\rn
").COMBINE_HEADERS'
```

Here, the rewrite target is HTTP.REQ.FULL_HEADER.AFTER_STR("HTTP/1.1\rn"). The AFTER_STR("HTTP/1.1\rn") is required because FULL_HEADER includes the first line of the HTTP request (e.g. GET /combine_headers HTTP/1.1).

The string builder expression is HTTP.REQ.FULL_HEADER.AFTER_STR("HTTP/1.1\rn").COMBINE_HEADERS, where the headers (minus the first line) are fed into the COMBINE_HEADERS extension function, which combines and returns the values for headers.

Sample Definition of COMBINE_HEADERS():


```
1      -- Extension function to combine multiple headers of the same name
2          into one header.
3
4
5      function NSTEXT:COMBINE_HEADERS(): NSTEXT
6
7          local headers = {
8      }
9      -- headers
10
11          local combined_headers = {
12      }
13      -- headers with final combined values
14      -- Iterate over each header (format "name:valuer\r\n")
15
16      -- and build a list of values for each unique header name.
17
18      for name, value in string.gmatch(self, "([^:]+):([^\r\n]*)\r\n"
19          ) do
20
21          if headers[name] then
22
23              local next_value_index = #(headers[name]) + 1
24
25              headers[name][next_value_index] = value
26
27          else
28
29              headers[name] = {
30      name .. ":" .. value }
31
32          end
33
34      end
35
36
37
38      -- iterate over the headers and concat the values with
39          separator ","
40
41      for name, values in pairs(headers) do
42
43          local next_header_index = #combined_headers + 1
44
45          combined_headers[next_header_index] = table.concat(values,
46              ",")
47
48      end
49
```

```

50     -- Construct the result headers using table.concat()
51
52     local result_str = table.concat(combined_headers, "\r\n") .. "\r\n\r\n"
53
54     return result_str
55
56 end

```

Line-by-line description of the above sample:

```

1  function NSTEXT:COMBINE_HEADERS(): NSTEXT
2
3  Defines the COMBINE_HEADERS extension function, with the text input
   into the function from the policy expression and a text return type
   to the policy expression.
4
5  local headers = {
6  }
7  -- headers
8  local combined_headers = {
9  }
10 -- headers with final combined values
11
12 Declares local variables headers and combined_headers and initialize
   these variables to empty tables. headers will be a table of arrays
   of strings, where each array holds one or more values for a header.
   combined_headers will be an array of strings, where each array
   element is a header with its combined values.
13
14 for name, value in string.gmatch(self, "([^:]+):([^\r\n]*)\r\n") do
15 . . .
16 end

```

This generic for loop parses each header in the input. The iterator is the built-in string.gmatch() function. This function takes two parameters: a string to search, and a pattern to use to match pieces of the string. The string to search is supplied by the implicit self parameter, which is the text for the headers input into the function.

The pattern is expressed using a regular expression (regex for short). This regex matches the header name and value for each header, which the HTTP standard defines as **name:value\r\n**. The parentheses in the regex specify the matching parts to be extracted, so the regex schematic is **(match-name):(match-value)\r\n**. The **match-name** pattern needs to match all characters except the colon. This is written `[^:]+`. `[^:]` is any character except `:` and `+` is one or more repetitions. Similarly, the **match-value** pattern has to match any characters except the `\r\n`, so it is written `[^\r\n]*`. `[^\r\n]` matches any character except `\r` and `\n` and `*` is zero or more repetitions. This makes the complete regex `([^:]+):([^\r\n]*)\r\n`.

The for statement uses a multiple assignment to set name and value to the two matches returned by the string.gmatch() iterator. These are implicitly declared as local variables within the body of the for

loop.

```

1  if headers[name] then
2      local next_value_index = #(headers[name]) + 1
3      headers[name][next_value_index] = value
4  else
5      headers[name] = {
6      name .. ":" .. value }
7
8  end

```

These statements within the for loop put the header names and values into the headers table. The first time a header name is parsed (say H2: h2val1 in the example input), there is no headers entry for the name and headers[name] is nil.

Since nil is treated as false, the else clause is executed. This sets the headers entry for name to an array with one string value *name:value*.

Note: The array constructor in the else loop is equivalent to {[1] = name .. ":" .. value}, which sets the first element of the array.) For the first H2 header, it sets headers["H2"] = {"H2:h2val1"}.

On subsequent instances of a header, (say, H2: h2val2 in the example input). headers[name] is not nil, so the then clause is executed. This determines the next available index in the array value for headers[name], and puts the header value into that index. For the second H2 header, it sets headers["H2"] = {"H2:h2val1", "h2val2"}.

```

1  for name, values in pairs(headers) do
2      local next_header_index = #combined_headers + 1
3      combined_headers[next_header_index] = table.concat(values, ",")
4  end

```

After the original headers have been parsed and the headers table filled in, this loop builds the combined_headers array. It uses the pairs() function as the for loop iterator.

Each call to pairs() returns the name and value of the next entry in the headers table.

The next line determines the next available index in the combined_headers array, and the next line sets that array element to the combined header. It uses the built-in table.concat() function, which takes as its arguments an array of strings and a string to use as a separator, and returns a string that is the concatenation of the array strings, separated by the separator.

For example, for values = {"H2:h2val1", "h2val2"}, this produces "H2:h2val1, h2val2"

```

1  local result_str = table.concat(combined_headers, "\r\n") .. "\r\n\r\n"

```

After the combined_headers array are built, it concatenates the elements into one string, and adds a double \r\n that terminates the HTTP headers.

```

1  return result_str

```

Returns a string as the result of the COMBINE_HEADERS extension function.

Troubleshooting policy extensions

May 2, 2023

If your extension function is not behaving as expected, you can use extension tracing functionality to verify the behavior of your extension function. You can also add logging to your extension function by using the custom logging functionality, where you can define the log level to be captured on the NetScaler appliance.

This topic provides information on:

- Extension tracing
- Custom logging

Extension tracing

To show what your extension function is doing, extension tracing functionality logs the execution of the function to the NetScaler system log (/var/log/ns.log). The trace logging uses the DEBUG log level, which normally is not enabled. Therefore, you have to enable ALL log levels. Then you can enable tracing by setting the -trace option of the set ns extension command. The available settings are:

- off turn off tracing (equivalent to unset ns extension -trace).
- calls trace function calls with arguments and function returns with the first return value.
- lines trace the above plus line numbers for executed lines.
- all trace the above plus local variables changed by executed lines.

Example:

```
1 set audit syslogParams -loglevel ALL
2
3 set ns extension combine_headers -trace all
```

Each trace message has the format

```
log-header : default NSEXTENSION Message message-number 0 : "TRACE
function-name CALL call-number: event"
```

Where,

- log-header supplies timestamps, the NetScaler IP address, and the Packet Engine ID.

- message-number is a sequential number identifying the log message.
- function-name is the extension function name.
- call-number is a sequential number for each extension function call. It can be used to group all the trace messages for an extension function call.
- event is one of the following:
 - CALL function-name ; parameter-values indicates that the function has been called with the specified parameters.
 - RETURN FROM function-name ; return = value indicates that a function has returned the specified (first) value. (Additional return values are not reported.)
 - LINE line-number ; variable-values indicates that a line has been executed and lists any variables with changed values.

Where,

- value or values is
 - a number, with or without a decimal point,
 - a string, enclosed in double quotes and with escaped characters as described earlier,
 - a boolean true or false,
 - nil,
 - a table constructor, of the format {[key1]=value1,[key2]=value2, ...}.
- parameter-values is parameter1 = value1 ; parameter2 = value2 , ...
- variable-values is variable1 = value1 ; variable2 = value2 , ...

An example of abbreviated log messages:

```
1 >shell tail -f /var/log/ns.log | grep TRACE | more
2
3 ... NSEXTENSION Message 3035 0 : "TRACE combine_headers CALL 30 : CALL
  COMBINE_HEADERS; self = "User-Agent: curl/7.24.0 (amd64-portbld-
  frebsd8.4) libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3\r\nHost:
  10.217.24.7\r\nAccept: */*\r\nH2: h2val1\r\nH1: abcd\r\nH2: h2val2\r
  \nH2: h2val3\r\n\r\n"
4
5 ... NSEXTENSION Message 3036 0 : "TRACE combine_headers CALL 30 : LINE
  4; headers = {
6   }
7   "
8
9 ... NSEXTENSION Message 3037 0 : "TRACE combine_headers CALL 30 : LINE
  5; combined_headers = {
10  }
11  "
12
13 ... NSEXTENSION Message 3038 0 : "TRACE combine_headers CALL 30 : CALL
  gmatch"
14
```

```
15 ... NSEXTENSION Message 3039 0 : "TRACE combine_headers CALL 30 :  
    RETURN FROM gmatch; return = function 0x2bee5a80"  
16  
17 ... NSEXTENSION Message 3040 0 : "TRACE combine_headers CALL 30 : CALL  
    for iterator"  
18  
19 ... NSEXTENSION Message 3041 0 : "TRACE combine_headers CALL 30 :  
    RETURN FROM for iterator; return = " curl/7.24.0 (amd64-portbld-  
    freesbsd8.4) libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3"  
20  
21 ... NSEXTENSION Message 3042 0 : "TRACE combine_headers CALL 30 : LINE  
    9; name = "User-Agent"; value = " curl/7.24.0 (amd64-portbld-  
    freesbsd8.4) libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3"  
22  
23 ... NSEXTENSION Message 3043 0 : "TRACE combine_headers CALL 30 : LINE  
    10"  
24  
25 ... NSEXTENSION Message 3044 0 : "TRACE combine_headers CALL 30 : LINE  
    14; headers = {  
26 ["User-Agent"]={  
27 [1]="User-Agent: curl/7.24.0 (amd64-portbld-freesbsd8.4) libcurl/7.24.0  
    OpenSSL/0.9.8y zlib/1.2.3" }  
28 }  
29 "  
30  
31 . . .  
32  
33 ... NSEXTENSION Message 3117 0 : "TRACE combine_headers CALL 30 : CALL  
    for iterator"  
34  
35 ... NSEXTENSION Message 3118 0 : "TRACE combine_headers CALL 30 :  
    RETURN FROM for iterator; return = nil"  
36  
37 ... NSEXTENSION Message 3119 0 : "TRACE combine_headers CALL 30 : LINE  
    19"  
38  
39 ... NSEXTENSION Message 3120 0 : "TRACE combine_headers CALL 30 : CALL  
    concat"  
40  
41 ... NSEXTENSION Message 3121 0 : "TRACE combine_headers CALL 30 :  
    RETURN FROM concat; return = "User-Agent: curl/7.24.0 (amd64-portbld-  
    freesbsd8.4) libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3\r\nH1: abcd\r\  
nAccept: */*\r\nHost: 10.217.24.7\r\nH2: h2val1, h2val2, h2val3"  
... NSEXTENSION Message 3122 0 : "TRACE combine_headers CALL 30 :  
LINE 25; result_str = "User-Agent: curl/7.24.0 (amd64-portbld-  
freesbsd8.4) libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3\r\nH1: abcd\r\  
nAccept: */*\r\nHost: 10.217.24.7\r\nH2: h2val1, h2val2, h2val3\r\n\  
r\n"  
42  
43 ... NSEXTENSION Message 3123 0 : "TRACE combine_headers CALL 30 :  
    RETURN FROM COMBINE_HEADERS; return = "User-Agent: curl/7.24.0 (  
    amd64-portbld-freesbsd8.4) libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3\r  
nH1: abcd\r\nAccept: */*\r\nHost: 10.217.24.7\r\nH2: h2val1, h2val2
```

```
, h2val3\r\n\r\n"
```

Custom logging

You can also add your own logging to your extension function. To do so, use the built-in `ns.logger:level()` function, where *level* is emergency, alert, critical, error, warning, notice, info, or debug. The parameters are the same as the C `printf()` function: a format string, and a variable number of arguments to supply values for the % specified in the format string. For example, you might add the following to the `COMBINE_HEADERS` function to log the result of a call:

```
1 local result_str = table.concat(combined_headers, "\r\n") .. "\r\n\r\n"
2
3 ns.logger:info("Result: %s", result_str)
4
5 return result_str
```

The above function would log the following message to `/var/log/ns.log` for the sample input shown in the abbreviated log messages examples in the Extension Tracing section above.

```
... : default NSEXTENSION Message 143 0 : "Result: Host: 10.217.24.7:2000^
M H1: abcd, 1234^M User-Agent: curl/7.24.0 (amd64-portbld-freebsd8.4)
libcurl/7.24.0 OpenSSL/0.9.8y zlib/1.2.3^M Accept: */*^M H2: h2val1,
h2val2, h2val3^M ^M"
```

Optimization

May 2, 2023

The NetScaler optimization features reduce transaction times between the clients and the servers, and they reduce bandwidth consumption. They also enhance server performance by offloading some tasks and making others more efficient.

Feature	Description
Client Keep-Alive	Handles multiple requests on a single client connection. The client does not have to negotiate a new connection for each request to the server.

Feature	Description
HTTP Compression	Compresses HTTP responses sent from the servers to compression-aware browsers. The smaller responses reduce download time and save bandwidth.
Integrated Caching	Stores responses to client requests. Subsequent requests for the same content are served from the NetScaler cache instead of being forwarded to the origin server.
Front End Optimization	Reduces the load and render time of web pages by simplifying and optimizing the content served to the client browser. Note: Supported from NetScaler 10.5 onwards.

Client keep-alive

November 2, 2023

The client keep-alive feature enables multiple clients requests to be sent on a single connection. This feature benefits transaction management. When the Client Keep-Alive mode is enabled on an appliance and the server response to the client request contains the Connection: close the HTTP header and performs the following tasks:

- Renames the existing Connection header name by shuffling the characters in the header name.
- Adds a new Connection: header with Keep-Alive as the value for the header.

The Client Keep-Alive mode enables the NetScaler appliance to process multiple requests and responses using the same socket connection. The feature keeps the connection between the client and the appliance (client-side connection) open even after the server closes the connection with the appliance. This allows multiple clients requests using a single connection and saves the round trips associated in opening and closing a connection. Client keep-alive is most beneficial in SSL sessions.

Client keep-alive is useful for the following scenarios:

- If the server does not support the client keep-alive.
- If the server supports but an application on the server does not support the client keep-alive.

Note:

Client keep-alive is applicable for HTTP and SSL traffic. Client-keep alive can be configured globally to handle all traffic. Also, you can activate it on specific services.

In the client keep-alive environment, the configured services intercept the client traffic and the client request is directed to the origin server. The server sends the response and closes the connection between the server and the appliance. If a “Connection: Close” header is present in the server response, the appliance corrupts this header in the client-side response, and the client-side connection is kept open. As a result, the client does not have to open a new connection for the next request. Instead, the connection to the server is reopened.

Note:

If a server sends back two “Connection: Close” headers, only one is edited. This results in significant delays on the client rendering of the object because a client does not assume that the object has been delivered completely until the connection is closed.

Configure client keep-alive

Client keep-alive, by default, is disabled on the NetScaler, both globally and at service level. Therefore, you must enable the feature at the required scope.

Note:

If you enable the client keep-alive globally, it is enabled for all services, regardless of whether you enable it at the service level. Also, you must configure some HTTP parameters to specify the following:

- the maximum number of HTTP connections retained in the connection reuse pool.
- enable connection multiplexing, and enable persistence [ETag](#).

Note:

When Persistent [ETag](#) is enabled, the [ETag](#) header includes information about the server that served the content. This ensures that cache validation conditional requests or browser requests, for that content, always reaches the same server.

Configure client keep-alive by using NetScaler command interface

At the command prompt, do the following:

1. Enable client keep-alive on the NetScaler.
 - At global level - `enable ns mode cka`
 - At service level - `set service <name> -CKA YES`

Note:

Client keep-alive can be enabled only for HTTP and SSL services.

2. Configure HTTP parameters on the HTTP profile that is bound to one or more services.

```
1 set ns httpProfile <name> -maxReusePool <value> -conMultiplex
   ENABLED -persistentETag ENABLED
```

Note:

Configure these parameters on the `nshttp_default _profile` HTTP profile, to make them available globally.

Configure client keep-alive by using NetScaler GUI

1. Enable client keep-alive on the NetScaler.
 - At global level
Navigate to **System > Settings**, click **Configure Modes** and select **Client side Keep Alive**.
 - At service level
Navigate to **Traffic Management > Load Balancing > Services**, and select the required service. In the **Settings** section, select **Client Keep-Alive** check box.
2. Configure the required HTTP parameters on the HTTP profile that is bound to one or more services.
3. Navigate to **System > Profiles**, and on **HTTP Profiles** tab, select the required profile and update the required HTTP parameters.

HTTP compression

December 9, 2024

For websites with compressible content, the HTTP compression feature implements lossless compression to alleviate latency, long download times, and other network-performance problems by compressing the HTTP responses sent from servers to compression-aware browsers. You can improve server performance by offloading the computationally intensive compression task from your servers to the NetScaler appliance.

The following table describes the capabilities of the HTTP compression feature:

Functionality	Description
Compression Ratio	Compression ratio depends on the types of files in the responses, but is always significant, noticeably reducing the amount of data transmitted over the network.
Browser Awareness	NetScaler serves compressed data to compression aware browsers only, reducing the transaction time between the client and the server. Most modern web browsers support HTTP compression.
Compression blocking	You can define content filters to selectively block compression by applying built-in actions.
Compression Caching	With the integrated caching feature enabled, subsequent requests for the same content are served from the local cache, reducing the number of round trips to the server and improving transaction times.
HTTPS Support	Compression is useful on SSL connections, because it reduces the amount of content that has to be encrypted, either on the server or by the NetScaler appliance, and decrypted by the client.
Intelligent Response Filtering	The NetScaler compression engine intelligently filters server responses based on defined compression parameters. For example, the compression engine detects zero-content-length responses and compressed responses and does not compress them. The detection of compressed responses enables origin sites to use server-based compression with the NetScaler compression feature.
Compression Switching	The NetScaler appliance transparently directs requests from compression aware clients to compression capable servers, so that responses to those clients are compressed, and responses to other clients are not delayed by compression processing.

Functionality	Description
Heal the BREACH	NetScaler now supports Heal the BREACH (HTB) technique to mitigate the BREACH attack in its HTTP compression feature.

How HTTP compression works

A NetScaler can compress both static and dynamically generated data. It applies the GZIP or the DEFLATE compression algorithm to remove extraneous and repetitive information from the server responses and represent the original information in a more compact and efficient format. This compressed data is sent to the client's browser and uncompressed as determined by the browser's supported algorithm or algorithms (GZIP or DEFLATE).

NetScaler compression treats static and dynamic content differently.

- Static files are compressed only once, and a compressed copy is stored in local memory. Subsequent client requests for cached files are serviced from that memory.
- Dynamic pages are dynamically created each time a client requests them.

When a client sends a request to the server:

1. The client request arrives at the NetScaler. The ADC examines the headers and stores information about what kind of compression, if any, the browser supports.
2. The ADC forwards the request to the server and receives the response.
3. The NetScaler compression engine examines the server response for compressibility by matching it against policies.
4. If the response matches a policy associated with a compression action, and the client browser supports a compression algorithm specified by the action, the NetScaler applies the algorithm and sends the compressed response to the client browser.
5. The client applies the supported compression algorithm to decompress the response.

Configure HTTP compression

By default, compression is disabled on the NetScaler. You must enable the feature before configuring it. If the feature is enabled, the ADC compresses server requests specified by compression policies.

To configure HTTP compression by using the CLI

Compression can be enabled for HTTP and SSL services only. You can enable it globally, so that it applies to all HTTP and SSL services, or you can enable it just for specific services.

At the command prompt, enter one of the following commands to enable compression globally or for a specific service:

- `enable ns feature cmp`
OR
- `set service \<name\> -CMP YES`

To configure HTTP compression by using the GUI

Do one of the following:

- To enable compression globally, navigate to **System > Settings > Configure Basic Features**, and select **HTTP Compression**.
- To enable compression for a specific service, navigate to **Traffic Management > Load Balancing > Services**, select the service, and click **Edit**.
- In the **Settings** group, click the pencil icon and enable **Compression**.

Configure a compression action

A compression action specifies the action to take when a request or response matches the rule (expression) in the policy with which the action is associated. For example, you can configure a compression policy that identifies requests that will be sent to a particular server, and associate the policy with an action that compresses the server's response.

There are four built-in compression actions:

- **Compress**: Uses the GZIP algorithm to compress data from browsers that support either GZIP or both GZIP and DEFLATE. Uses the DEFLATE algorithm to compress data from browsers that support only the DEFLATE algorithm. If the browser does not support either algorithm, the browser's response is not compressed.
- **NoCompress**: Does not compress data.
- **GZIP**: Uses the GNU Zip (GZIP) algorithm to compress data for browsers that support GZIP compression. If the browser does not support the GZIP algorithm, the browser's response is not compressed.
- **Deflate**: Uses the DEFLATE algorithm to compress data for browsers that support the DEFLATE algorithm. If the browser does not support the DEFLATE algorithm, the browser's response is not compressed. After creating an action, you associate the action with one or more compression policies.

At the command prompt, enter the following command to create a compression action:

```
add cmp action <name> <cmpType> [-addVaryHeader <addVaryHeader> -  
varyHeaderValue<string>]
```

To create a compression action by using the GUI

Navigate to **Optimization > HTTP Compression > Actions** , click **Add** , and create a compression action to specify the type of compression to be performed on the HTTP response.

Configure a compression policy

A compression policy contains a rule, which is a logical expression that enables the NetScaler appliance to identify the traffic that should be compressed.

When the NetScaler receives an HTTP response from a server, it evaluates the built-in compression policies and any custom compression policies to determine whether to compress the response and, if so, the type of compression to apply. Priorities assigned to the policies determine the order in which the policies are matched against the requests.

The following table lists the built-in HTTP compression policies. These policies are activated globally when you enable compression.

Built-in policy	Description
ns_adv_nocmp_mozilla_47	Prevents compression of CSS files when a request is sent from a Mozilla 4.7 browser.
ns_adv_cmp_mscss	Compresses CSS files when the request is sent from a Microsoft Internet Explorer browser.
ns_adv_cmp_msapp	Compresses files that are generated by the following applications: Microsoft Office Word, Microsoft Office Excel, Microsoft Office PowerPoint.
ns_adv_cmp_content_type	Compresses data when the response contains Content-Type header and contains text.
ns_adv_nocmp_xml_ie	Prevents compression when a request is sent, from a Microsoft Internet Explorer browser and the response contains a Content-Type header and contains text or xml.

To create a compression policy by using the GUI

Navigate to **Optimization > HTTP Compression > Policies** , click **Add** , and create a compression policy by specifying the condition and the corresponding action to be run.

To configure a compression policy by using the CLI

A compression policy contains a rule, which is a logical expression that enables the NetScaler appliance to identify the traffic that should be compressed.

When the NetScaler receives an HTTP response from a server, it evaluates the built-in compression policies and any custom compression policies to determine whether to compress the response and, if so, the type of compression to apply. Priorities assigned to the policies determine the order in which the policies are matched against the requests.

At the command prompt, enter the following command to create a compression policy:

```
add cmp policy <name> -rule <expression> -resAction <string>
```

Bind a compression policy

To put a compression policy into effect, you must bind it either globally, so that it applies to all traffic that flows through the NetScaler, or to a specific virtual server, so that the policy applies only to requests whose destination is the VIP address of that virtual server.

When you bind a policy, you assign it a priority. The priority determines the order in which the policies you define are evaluated. You can set the priority to any positive integer.

To bind a compression policy by using the CLI

At the command prompt, enter one of the following commands to bind a compression policy globally or to a specific virtual server:

- `bind cmp global <policyName> [-priority <positive_integer>] [-gotoPriorityExpression <expression>] [-type <type>] [-invoke (<labelType> <labelName>)]`
- `bind lb vserver <vserverName> -policyName <policyName> -type (Request|Response) -priority <positive_integer>)`

Repeat this command for each virtual server to which you want to bind the compression policy.

To bind a compression policy by using the GUI

Do one of the following:

- At global level Navigate to **Optimization > HTTP Compression > Policies**, click **Policy Manager** and bind the required policies by specifying the relevant Bind Point and Connection Type (Request/Response).
- At virtual server level
 - For load balancing virtual server, Navigate to **Traffic Management > Load Balancing > Virtual Servers**, select the required virtual server, click **Policies**, and bind the relevant policy.
 - For content switching virtual server, Navigate to **Traffic Management > Content Switching > Virtual Servers**, select the required virtual server, click **Policies**, and bind the relevant policy.

Set the Global Compression Parameters for Optimal Performance

Many users accept the default values for the global compression parameters, but you might be able to provide more effective compression by customizing these settings.

Note:

After you configure the global compression parameters, you do not have to reboot your appliance. They get applied to the new flows immediately.

The following table describes the compression parameters that you can set on the NetScaler.

Compression Parameters	Description
Quantum size	Size, in KB, of the buffer maintained for accumulating server responses. The responses are compressed when the buffer size exceeds this value. For example, if you set the quantum size to 50 KB, the NetScaler compresses the buffer's contents when its size becomes larger than 50 KB. Minimum value: 1. Maximum value: 63488. Default: 57344.
Compression level	Level of compression to apply to server responses. Possible values: Best Speed, Best Compression, optimal.
Minimum HTTP response size	Minimum size, in bytes, of an HTTP response that is compressed. Responses smaller than the value specified by this parameter are sent without being compressed.
Bypass compression on CPU usage	NetScaler CPU usage, as a percentage, at or above which no compression is done. Default: 100.
Allow Server-side compression	Allow servers to send compressed data to the NetScaler.
Compress push packet	Upon receipt of a packet with a TCP PUSH flag, compress the accumulated packets immediately, without waiting for the quantum buffer to be filled.
External Cache	Issue a private response directive indicating that the response message is intended for a single user and must not be cached by a shared or proxy cache.

Compression Parameters	Description
Random GZIP Filename	Control the addition of a random file name of random length in the GZIP header to apply the HTB mitigation for the BREACH attack. Possible values: Enabled, Disabled. Default value: Disabled.
Minimum length of random GZIP filename	The minimum length of the random file name to be added in the GZIP header to apply the HTB mitigation for the BREACH attack. Minimum value: 8. Default: 8.
Maximum length of random GZIP filename	The maximum length of the random file name to be added in the GZIP header to apply the HTB mitigation for the BREACH attack. Maximum value: 63. Default: 63.

Note:

To use the HTB mitigation techniques for the BREACH attack, enable the Random GZIP Filename and configure the minimum and maximum length of the random GZIP file name.

Evaluate compression configuration

You can view the compression statistics in the dashboard utility or in an SNMP monitor. The dashboard utility displays summary and detailed statistics in a tabular and graphic format.

Optionally, you can also view statistics for a compression policy, including the number of requests that the policy counter increments during the policy based compression.

Notes:

- For more information about the statistics and charts, see the Dashboard help on the NetScaler appliance.
- For more information about SNMP, see [SNMP](#) topic.

To view compression statistics by using the CLI

At the command prompt, enter the following commands to display the compression statistics:

1. To display compression statistics summary.

```
stat cmp
```

Note:

The `stat cmp` policy command displays statistics for Advanced policy compression policies only.

2. To display compression policy hits and details

```
show cmp policy \
```

3. To display detailed compression statistics

```
stat cmp -detail
```

To view compression statistics by using the dashboard:

In the Dashboard utility, you can display the following types of compression statistics:

- Select Compression to display a summary of the compression statistics.
- To display detailed compression statistics by protocol type, click the Details
- To display the rate of requests processed by the compression feature, click the Graphical View tab.

To view compression statistics by using SNMP

You can view the following compression statistics by using the SNMP network management application.

- Number of compression requests (OID: 1.3.6.1.4.1.5951.4.1.1.50.1)
- Number of compressed bytes transmitted (OID: 1.3.6.1.4.1.5951.4.1.1.50.2)
- Number of compressible bytes received (OID: 1.3.6.1.4.1.5951.4.1.1.50.3)
- Number of compressible packets transmitted (OID: 1.3.6.1.4.1.5951.4.1.1.50.4)
- Number of compressible packets received (OID: 1.3.6.1.4.1.5951.4.1.1.50.5)
- Ratio of compressible data received and compressed data transmitted (OID: 1.3.6.1.4.1.5951.4.1.1.50.6)
- Ratio of total data received to total data transmitted (OID: 1.3.6.1.4.1.5951.4.1.1.50.7)

To view more compression statistics by using the GUI

1. To display HTTP compression statistics:

Navigate to **Optimization > HTTP Compression** and click **Statistics**.

1. To display statistics of a compression policy.

Navigate to **Optimization > HTTP Compression > Policies** > select the policy, and click **Statistics**.

1. To display statistics of a compression policy label
2. Navigate to **Optimization > HTTP Compression > Policies** > select a policy label, and click **Statistics**.

Offload HTTP compression

Performing compression on a server can affect the server's performance. A NetScaler placed in front of your web servers and configured for HTTP compression offloads compression of both static and dynamic content, saving server CPU cycles and resources.

You can offload compression from the Web servers in either of two ways:

Disable compression on the web servers, enable the NetScaler Compression feature at a global level, and configure services for compression.

Leave the compression feature enabled on the web servers and configure the NetScaler appliance to remove the "Accept Encoding" header from all HTTP client requests. The servers then send uncompressed responses. The NetScaler compresses the server responses before sending them to the clients.

Note:

The second option does not work if the servers automatically compress all responses. The NetScaler does not attempt to compress a response that is already compressed.

The `Servercmp` parameter enables the NetScaler appliance to handle offload HTTP compression. By default, this parameter is set ON for the server to send compressed data to the NetScaler appliance. To offload HTTP compression, you need to set the `servercmp` parameter to OFF. At the command prompt, enter the following commands:

```
set service <service name> -CMP YES
```

Repeat this command for each service for which you want to enable compression.

```
show service <service name>
```

Repeat this command for each service, to verify that compression is enabled.

Save config

```
set cmp parameter -serverCmp OFF
```

Note:

When the `Servercmp` parameter is turned on and if the appliance receives compressed response from the server, the appliance does not further compress the data. Instead, it forwards the compressed response to the client.

Integrated caching

December 17, 2024

The integrated cache provides in-memory storage on the NetScaler appliance and serves Web content to users without requiring a round trip to an origin server. For static content, the integrated cache requires little initial setup. After you enable the integrated cache feature and perform basic setup (for example, determining the amount of NetScaler appliance memory the cache is permitted to use), the integrated cache uses built-in policies to store and serve specific types of static content, including simple webpages and image files. You can also configure the integrated cache to store and serve dynamic content that is marked as non-cacheable by Web and application servers (for example, database records and stock quotes).

Note:

The term Integrated Cache can be interchangeably used with AppCache; note that from a functionality point of view, both terms mean the same.

When a request or response matches the rule (logical expression) specified in a built-in policy or a policy that you have created, the NetScaler appliance performs the action associated with the policy. By default, all policies cache objects in and retrieve them from the default content group. However, you have the option to create custom content groups for different types of content.

To enable the appliance to find cached objects in a content group, you can configure selectors. The selectors match cached objects against expressions, or you can specify parameters for finding objects in the content group. If you use selectors as recommended by Citrix, configure them first, so that you can specify selectors when you configure content groups. Next, set up any content groups that you want to add, so that they are available when you configure the policies. To complete the initial configuration, create policy banks by binding each policy to a global bind point or a virtual server. Or, you can bind a label that can be called from other policy banks.

Integrated caching can be improved using pre-loading cached object method before they are scheduled to expire. To manage the handling of cached data, you can configure caching-related headers inserted into the responses. The integrated cache can also act as a forward proxy for other cache servers.

Note:

Integrated caching requires some familiarity with HTTP requests and responses. For more information, see [HTTP headers](#).

How integrated cache works

The integrated cache monitors HTTP and SQL requests that flow through the NetScaler appliance and compares the requests with stored policies. Depending on the outcome, the integrated cache feature either searches the cache for the response or forwards the request to the origin server. For HTTP requests, integrated caching serves as partial content from the cache in response to single byte-range and multi-part byte-range requests.

Cached data is compressed if the client accepts compressed content. You can configure expiration times for a content group, and you can selectively expire entries in a content group.

Data that is served from the integrated cache is a hit, and data served from the origin is a cache miss, as described in the following table.

Transaction Type	Specification
Cache Hit	Responses that the NetScaler appliance serves from the cache, including: Static objects, for example, image files and static webpages, 200 OK pages, 203 Non-Authoritative Response pages, 300 Multiple Choices pages, 301 Moved Permanently pages, 302 Found pages, 304 Not Modified pages, These responses are known as positive responses. The NetScaler appliance also caches the following negative responses: 307 Temporary Redirect pages, 403 Forbidden pages, 404 Not Found pages, 410 Gone pages. To further improve performance, you can configure the NetScaler appliance to cache more types of content.
Storable Cache Miss	For a storable cache miss, the NetScaler appliance fetches the response from the origin server, and stores the response in the cache before serving it to the client.
Non-Storable Cache Miss	A non-storable cache miss is inappropriate for caching. By default, any response that contains the following status codes is a non-storable cache miss: 201, 202, 204, 205, 206 status codes, All 4xx codes, except 403, 404 and 410, 5xx status codes

Note:

To integrate dynamic caching with your application infrastructure, use the NITRO API to issue cache commands remotely. For example, you can configure triggers that expire cached responses when a database table is updated.

To ensure the synchronization of cached responses with the data on the origin server, you configure expiration methods. When the NetScaler appliance receives a request that matches an expired response, it refreshes the response from the origin server.

Note:

Citrix recommends that you synchronize the times on the NetScaler appliance and one or more back-end servers.

How dynamic cache works

Dynamic caching evaluates HTTP requests and responses based on parameter-value pairs, strings, string patterns, or other data. For example, suppose that a user searches for Bug 31231 in a bug reporting application. The browser sends the following request on the user's behalf:

```
1 GET /mybugreportingsystem/mybugreport.dll?IssuePage&RecordId=31231&
   Template=view&TableId=1000
2
3 Host: mycompany.net
4
5 User-Agent: Mozilla/5.0 (Windows; U; Windows NT 5.1; en-US; rv:1.9)
   Gecko/2008052906 Firefox/3.0
6
7 Accept: text/html,application/xhtml+xml,application/xml;q=0.9,*/*;q
   =0.8
8
9 Accept-Language: en-us,en;q=0.5
```

In this example, GET requests for this bug reporting application always contain the following parameters:

- IssuePage
- RecordID
- Template
- TableId

GET requests do not update or alter the data, so you can configure these parameters in caching policies and selectors, as follows:

- You configure a caching policy that looks for the string `mybugreportingsystem` and the GET method in HTTP requests. This policy directs matching requests to a content group for bugs.
- In the content group for bugs, you configure a `hit` selector that matches various parameter-value pairs, including `IssuePage`, `RecordID`, and so on.

Note

A browser can send multiple GET requests based on one user action. The following is a series of three separate GET requests that a browser issues when a user searches for a bug based on a bug ID.

```
1 GET /mybugreportingsystem/mybugreport.dll?IssuePage&RecordId=31231&
  Template=view&TableId=1000
2
3 GET /mybugreportingsystem/mybugreport.dll?IssuePage&Template=
  viewbtns&RecordId=31231&TableId=1000
4
5 GET /mybugreportingsystem/mybugreport.dll?IssuePage&Template=
  viewbody&RecordId=31231&tableid=1000
```

To fulfill these requests, multiple responses are sent to the user's browser, and the webpage that the user sees is an assembly of the responses.

If a user updates a bug report, the corresponding responses in the cache must be refreshed with data from the origin server. The bug reporting application issues HTTP POST requests when a user updates a bug report. In this example, you configure the following to ensure that POST requests trigger invalidation in the cache:

- A request-time invalidation policy that looks for the string `mybugreportingsystem` and the POST HTTP request method, and directs matching requests to the content group for bug reports.
- An invalidation selector for the content group for bug reports that expires cached content based on the `RecordID` parameter. This parameter appears in all the responses, so the invalidation selector can expire all relevant items in the cache.

The following excerpt shows a POST request that updates the sample bug report.

```
1 POST /mybugreportingsystem/mybugreport.dll?TransitionForm HTTP/1.1\r\n
2
3 User-Agent: Mozilla/4.0 (compatible; MSIE 6.0; Windows NT 5.0)
  Opera 7.23 [en]\r\n
4
5 Host: mybugreportingsystem\r\n
6
7 Cookie: ttSearch.134=%23options%3Afalse%23active%23owner%3Afalse%23
  unowned%3Afalse%23submitter%3Afalse%23incsub%3Atrue;
8
9 Cookie2: $Version=1\r\n
10
11 . . .
12
13 \r\n
14
15 ProjectId=2&RecordId=31231&TableId=1000&TransitionId=1&Action=
  Update&CopyProjectId=0&ReloadForm=0&State=&RecordLockId=49873+
  issues+in+HTTP&F43. . .
```

When the NetScaler appliance receives this request, it does the following:

- Matches the request with an invalidation policy.

- Finds the content group that is named in the policy.
- Applies the invalidation selector for this content group and expires all responses that match RecordID=31231.

When a user issues a new request for this bug report, the NetScaler appliance goes to the origin server for updated copies of all the responses that are associated with the report instance. It stores the responses in the content group, and serves them to the user's browser, which reassembles the report and displays it.

Configure integrated cache

To use the integrated cache, you must install the license and enable the feature. After you enable the integrated cache, the NetScaler® appliance automatically caches static objects as specified by built-in policies and generates statistics on cache behavior. (Built-in policies have an underscore in the initial position of the policy name.)

Even if the built-in policies are adequate for your situation, you might want to modify the global attributes. For example, you might want to modify the amount of NetScaler appliance memory allocated to the integrated cache.

If you would like to observe cache operation before changing settings, see [“Displaying Cached Objects and Cache Statistics.”](#)

Note:

The NetScaler cache is an in-memory store that is purged when you restart the appliance.

To install integrated cache license

- An integrated cache license is required.
- Obtain a license code from Citrix, go to the command line interface, and log in.

At the command line interface, copy the license file to the `/nsconfig/license` folder.

- Reboot the NetScaler appliance by using the following command:

```
reboot
```

To enable integrated caching:

When you enable integrated caching, the NetScaler appliance begins caching server responses. If you have not configured any policies or content groups, the built-in policies store cached objects in the Default content group.

At the command prompt, type one of the following commands to enable or disable integrated caching:

```
enable ns feature IC
```


Configure global attributes for caching

Global attributes apply to all cached data. You can specify the amount of NetScaler memory allocated to the integrated cache, via header insertion. A criterion for verifying that a cached object must be served. The maximum length of a POST body permitted in the cache, whether to bypass policy evaluation for HTTP GET requests, and an action to take when a policy cannot be evaluated.

The cache memory capacity is limited only by the memory of the hardware appliance. Also, any packet engine (central distribution hub of all incoming TCP requests) in the nCore NetScaler appliance is aware of objects cached by other packet engines in the nCore NetScaler appliance.

Note:

When the default global memory limit is set as 0 and the Integrated Caching (IC) feature is enabled, the appliance does not cache any objects. For caching, you must explicitly configure the global memory limit. However, if you enable “set authentication, authorization, and auditing parameter enableStaticPageCaching” option, there will be some default memory configured in the appliance. This memory is insufficient for caching large Objects and so it is necessary to assign a higher memory limit for IC. You can perform this by configuring the “set cache parameter –memLimit” command. The new setting is applied only after you save the configuration and reboot the appliance.

You can modify the global memory limit configured for caching objects. However, when you update the global memory limit to a value lower than the existing value (for example, from 10 GB to 4 GB), the appliance continues to use the memory limit.

It means that even though the integrated caching limit is configured to some value, the actual limit used can be higher. This excessive memory is however released when the objects are removed from cache.

The output of the show cache parameter command indicates the configured value (memory Usage limit) and the actual value being used (memory usage limit (active value)).

At the command prompt, type:

```
1      set cache parameter [-memLimit <MBytes>] [-via <string>] [-  
      verifyUsing <criterion>] [-maxPostLen <positiveInteger>] [-  
      prefetchMaxPending <positiveInteger>] [-enableBypass(YES|NO)] [-  
      undefAction (NOCACHE|RESET)]
```

Enable integrated caching by NetScaler GUI

Navigate to **System > Settings**, click **Configure Basic Features**, and select **Integrated Caching**.

Configure global settings for caching by using the NetScaler GUI

Navigate to **Optimization > Integrated Caching**, click **Change Cache Settings**, and configure the global settings for caching.

Set up built-in content group, pattern set, and policies for Integrated Cache

The NetScaler appliance includes a built-in integrated caching configuration that you can use for caching content. The configuration consists of a content group called `ctx_cg_poc`, a pattern set called `ctx_file_extensions`, and a set of integrated cache policies. In the content group `ctx_cg_poc`, only objects that are 500 KB or smaller are cached. The content is cached for 86000 seconds, and the memory limit for the content group is 512 MB. The pattern set is an indexed array of common extensions for file-type matching.

The following table lists the built-in integrated caching policies. By default, the policies are not bound to any bind point. You must bind the policies to a bind point if you want the NetScaler appliance to evaluate traffic against the policies. The policies cache objects in the `ctx_cg_poc` content group.

Integrated caching policy name	Policy rule
<code>_cacheVPNStaticObjects</code>	<code>HTTP.REQ.URL.SET_TEXT_MODE(IGNORECASE).CONTAINS_IN("ctx_file_extensions").BETWEEN(101,150)</code>
<code>_cacheTCPVPNStaticObjects</code>	<code>HTTP.REQ.URL.ENDSWITH(".css")</code>
<code>_cacheOCVPNStaticObjects</code>	<code>HTTP.REQ.URL.ENDSWITH(".pdf")</code>
<code>_cacheWFStaticObjects</code>	<code>HTTP.REQ.URL.ENDSWITH(".js")</code>
<code>_mayNoCacheReq</code>	<code>HTTP.RES.HEADER("Content-Type").CONTAINS("application/x-javascript")</code>
<code>_noCacheRest</code>	<code>TRUE</code>

Flush cache configuration

You can flush a cache group, cache groups, or cache object locator. Following are the commands to flush cache objects.

At the command prompt, type:

```
flush cache contentgroup all
```

Example

```

1      0x00000089bae000000004 DEFAULT GET //1.1.1.1:80/html/index.
      html?name=hello
2      0x00000089bae000000005 DEFAULT GET //1.1.1.1:80/html/index.
      html?name=hi
3
4      Flush cache contentGroup all
5      done
6
7 `flush cache contentgroup <content group name>`

```

Example:

```

1      0x00000089bae000000004 DEFAULT GET //1.1.1.1:80/html/index.
      html?name=hello
2      0x00000089bae000000005 DEFAULT GET //1.1.1.1:80/html/index.
      html?name=hi
3
4      Flush cache ob -| 0x00000089bae000000004
5      done
6
7 `flush cache object (-locator <positive_integer> | (-url <URL> (-host <
  string> [-port <port>] [-groupName <string>] [-httpMethod ( GET |
  POST ))]))`

```

Example:

```

1      0x00000089bae000000006 DEFAULT GET //1.1.1.1:80/html/index.html
2
3      flush cache ob -URL /html/index.html -host 1.1.1.1 -groupName
      DEFAULT
4      done

```

Flush cache configuration by using the NetScaler GUI

Complete the steps to configure cache flushing using the NetScaler GUI

1. Navigate to **Optimization > Content Groups**.
2. In the **Content Groups** detailed pane, click **Add**.
3. In the **Create Cache Content Groups** page, set the following parameter under **Others** tab:
 - a) Flush Cache. Select the checkbox to flush the cache object.
4. Click **Create** and **Close**.

Configure integrated caching for various scenarios

The following section describes the configuration of integrated caching on NetScaler appliance for various scenarios.

Starting from NetScaler 9.2 release, the integrated caching has more memory for caching. The integrated caching memory is only limited by the memory available on the hardware appliance. You can allocate up to 50 percent of the available memory to the integrated caching feature.

To set the memory allocation for the cache by using the CLI

At the command prompt, type:

```
set cache parameter -memlimit <value>
```

Note:

The default global memory limit for integrated caching is zero. Therefore, even if you enable the integrated caching feature, the NetScaler appliance does not cache any objects until the global memory limit is explicitly set.

The following section instructs you to configure integrated caching on different scenarios.

Note:

The memory limit of the NetScaler appliance is identified when the appliance starts. Therefore, any changes to the memory limit require you to restart the appliance to make the changes applicable across the packet engines.

Integrated caching is enabled and the cache memory limit is set to non-zero

Consider a scenario, where you start the appliance, the integrated caching feature is enabled and the global memory limit is set to a positive number. The memory you had set earlier is allocated to the integrated caching feature during the boot process. You might want to change the memory limit to another value depending on the available memory on the appliance.

Configuring by using the CLI

1. Display the cache parameter

```
1      > show cache parameter
2          Integrated cache global configuration:
3          Memory usage limit: 500 MBytes
4          Memory usage limit (active value): 500 MBytes
5          Maximum value for Memory usage limit: 843 MBytes
6          Via header: NS-CACHE-9.3: 18
7          Verify cached object using: HOSTNAME_AND_IP
8          Max POST body size to accumulate: 0 bytes
9          Current outstanding prefetches: 0
10         Max outstanding prefetches: 4294967295
11         Treat NOCACHE policies as BYPASS policies: YES
12         Global Undef Action: NOCACHE
```

1. Set a non-zero memory limit

```
set cache parameter -memlimit 600
```

Note:

The preceding command displays the following warning message: **Warning: To use a new Integrated Cache memory limit, save the configuration and restart the NetScaler appliance.**

1. Save the configuration

```
save config
```

1. From the shell prompt, run the following command to verify in the configuration file.

```
root@ns# cat /nsconfig/ns.conf | grep memLimit
```

1. Change the memory limit

```
set cache parameter -memLimit 600 -via NS-CACHE-9.3: 18 -verifyUsing  
HOSTNAME_AND_IP -maxPostLen 0 -enableBypass YES -undefAction NOCACHE
```

1. Reboot the appliance

```
root@ns# reboot
```

1. Verify the new value for the memory limit

```
1      > show cache parameter
2          Integrated cache global configuration:
3          Memory usage limit: 600 MBytes
4          Memory usage limit (active value): 600 MBytes
5          Maximum value for Memory usage limit: 843 MBytes
6          Via header: NS-CACHE-9.3: 18
7          Verify cached object using: HOSTNAME_AND_IP
8          Max POST body size to accumulate: 0 bytes
9          Current outstanding prefetches: 0
10         Max outstanding prefetches: 4294967295
11         Treat NOCACHE policies as BYPASS policies: YES
12         Global Undef Action: NOCACHE
```

After all packet engines start successfully, the integrated caching feature negotiates the memory you had configured. If the appliance cannot use the configured memory, then the memory is allocated accordingly. If the available memory is less than the one you allocated, the appliance recommends a lesser number. The integrated caching feature uses same as the active value.

Integrated caching is disabled and cache memory limit is set to non-zero

In this scenario, when you start the appliance, the integrated caching feature is disabled and the global memory limit is set to a positive number. Therefore, no memory is allocated to the integrated caching during the boot process.

Configuring by using the CLI

1. Display the cache parameter

```
1      > show cache parameter
2          Integrated cache global configuration:
3          Memory usage limit: 600 MBytes
4          Maximum value for Memory usage limit: 843 MBytes
5          Via header: NS-CACHE-9.3: 18
6          Verify cached object using: HOSTNAME_AND_IP
7          Max POST body size to accumulate: 0 bytes
8          Current outstanding prefetches: 0
9          Max outstanding prefetches: 4294967295
10         Treat NOCACHE policies as BYPASS policies: YES
11         Global Undef Action: NOCACHE
```

1. Set a new memory limit

```
set cache parameter -memlimit 500
```

Note:

The preceding command displays the following warning message: **Warning: Feature not enabled [IC]**.

1. Save the configuration

```
save config
```

1. From the shell prompt, run the following command to verify in the configuration file

```
root@ns# cat /nsconfig/ns.conf | grep memLimit
```

1. Change the memory limit

```
set cache parameter -memLimit 500 -via NS-CACHE-9.3: 18 -verifyUsing
HOSTNAME_AND_IP -maxPostLen 0 -enableBypass YES -undefAction NOCACHE
```

1. Verify the new value for the memory limit

```
1      > show cache parameter
2          Integrated cache global configuration:
```

```

3      Memory usage limit: 500 MBytes
4      Maximum value for Memory usage limit: 843 MBytes
5      Via header: NS-CACHE-9.3: 18
6      Verify cached object using: HOSTNAME_AND_IP
7      Max POST body size to accumulate: 0 bytes
8      Current outstanding prefetches: 0
9      Max outstanding prefetches: 4294967295
10     Treat NOCACHE policies as BYPASS policies: YES
11     Global Undef Action: NOCACHE

```

1. Enable the integrated caching feature

```
enable ns feature IC
```

1. Verify the new value for the memory limit

```

1      > show cache parameter
2      Integrated cache global configuration:
3      Memory usage limit: 500 Mbytes
4      Memory usage limit (active value): 500 Mbytes
5      Maximum value for Memory usage limit: 843 MBytes
6      Via header: NS-CACHE-9.3: 18
7      Verify cached object using: HOSTNAME_AND_IP
8      Max POST body size to accumulate: 0 bytes
9      Current outstanding prefetches: 0
10     Max outstanding prefetches: 4294967295
11     Treat NOCACHE policies as BYPASS policies: YES
12     Global Undef Action: NOCACHE

```

Note:

500 MB of memory is allocated to the integrated caching feature.

1. Save the configuration to ensure that the memory is automatically allocated to the feature when the appliance is restarted.

Integrated caching is enabled and cache memory is set to zero

In this scenario, when you start the appliance, the integrated caching feature is enabled and the global memory limit is set to zero. Therefore, no memory is allocated to the integrated caching during the boot process.

Configuring by using the CLI

1. Verify the memory limits set in the ns.conf file from shell prompt

```
root@ns# cat ns.conf | grep memLimit
```

1. Change the memory limit

```
set cache parameter -memLimit 0 -via NS-CACHE-9.3: 18 -verifyUsing
  HOSTNAME_AND_IP -maxPostLen 4096 -enableBypass YES -undefAction
NOCACHE
```

1. Verify the value for the memory limit

```
1      > show cache parameter
2          Integrated cache global configuration:
3          Memory usage limit: 0 Mbytes
4          Maximum value for Memory usage limit: 843 MBytes
5          Via header: NS-CACHE-9.3: 18
6          Verify cached object using: HOSTNAME_AND_IP
7          Max POST body size to accumulate: 0 bytes
8          Current outstanding prefetches: 0
9          Max outstanding prefetches: 4294967295
10         Treat NOCACHE policies as BYPASS policies: YES
11         Global Undef Action: NOCACHE
```

Note:

The memory limit is set to 0 MB and no memory is allocated to the integrated caching feature.

1. Set the memory limits to ensure the integrated caching feature caches objects

```
set cache parameter -memLimit 600
```

Once you run the preceding command, the appliance negotiates memory for the integrated caching feature and the available memory is assigned to the feature. It results in appliance caching objects without restarting the appliance.

1. Verify the value for the memory limit

```
1      > show cache parameter
2          Integrated cache global configuration:
3          Memory usage limit: 600 Mbytes
4          Memory usage limit (active value): 600 Mbytes
5          Maximum value for Memory usage limit: 843 MBytes
6          Via header: NS-CACHE-9.3:
7          Verify cached object using: HOSTNAME_AND_IP
8          Max POST body size to accumulate: 0 bytes
9          Current outstanding prefetches: 0
10         Max outstanding prefetches: 4294967295
11         Treat NOCACHE policies as BYPASS policies: YES
12         Global Undef Action: NOCACHE
```

Note:

600 MB of memory is allocated to the integrated caching feature.

1. Save the configuration. Ensure that the memory is automatically allocated to the feature when the appliance is restarted.

2. Verify the memory limits set in the ns.conf file from shell prompt

```
root@ns# cat /nsconfig/ns.conf | grep memLimit
```

1. Change the memory limit

```
set cache parameter -memLimit 600 -via NS-CACHE-9.3: -verifyUsing  
HOSTNAME_AND_IP -maxPostLen 4096 -enableBypass YES -undefAction  
NOCACHE
```

Integrated caching is disabled and cache memory is set to zero

In this scenario, when you start the appliance, the integrated caching feature is disabled and the global memory limit is set to zero. Therefore, no memory is allocated to the integrated caching during the boot process.

Configuring by using the CLI

1. Verify the memory limits set in the ns.conf file from shell prompt

```
root@ns# cat /nsconfig/ns.conf | grep memLimit
```

1. Change the memory limit

```
set cache parameter -memLimit 0 -via NS-CACHE-9.3: 18 -verifyUsing  
HOSTNAME_AND_IP -maxPostLen 4096 -enableBypass YES -undefAction  
NOCACHE
```

1. Verify the value for the memory limit

```
1      > show cache parameter  
2      Integrated cache global configuration:  
3      Memory usage limit: 0 Mbytes  
4      Maximum value for Memory usage limit: 843 MBytes  
5      Via header: NS-CACHE-9.3: 18  
6      Verify cached object using: HOSTNAME_AND_IP  
7      Max POST body size to accumulate: 0 bytes  
8      Current outstanding prefetches: 0  
9      Max outstanding prefetches: 4294967295  
10     Treat NOCACHE policies as BYPASS policies: YES  
11     Global Undef Action: NOCACHE
```

Note:

The memory limit is set to 0 MB and no memory is allocated to the integrated caching feature.

Also, when you run any cache configuration command, the following warning message is displayed: **Warning: Feature not enabled [IC]**.

1. Enable the integrated caching feature

```
enable ns feature IC
```

Note:

At this stage, when you enable the integrated caching feature, the appliance does not allocate memory to the feature. As a result, no object is cached to the memory. Also, when you run any cache configuration command, the following warning message is displayed: **No memory is configured for IC. Use set cache parameter command to set the memory limit.**

1. Set the memory limits to ensure the integrated caching feature caches objects

```
set cache parameter -memLimit 500
```

Once you run the preceding command, the appliance negotiates memory for the integrated caching feature and the available memory is assigned to the feature. It results in the appliance caching objects without restarting the appliance.

Note:

The order in which you enable the feature and set the memory limits is important. If you set the memory limits before enabling the feature, then the following warning message is displayed: **Warning: Feature not enabled [IC]**.

1. Verify the value for the memory limit

```
1      > show cache parameter
2          Integrated cache global configuration:
3          Memory usage limit: 500 Mbytes
4          Memory usage limit (active value): 500 Mbytes
5          Maximum value for Memory usage limit: 843 MBytes
6          Via header: NS-CACHE-9.3:
7          Verify cached object using: HOSTNAME_AND_IP
8          Max POST body size to accumulate: 0 bytes
9          Current outstanding prefetches: 0
10         Max outstanding prefetches: 4294967295
11         Treat NOCACHE policies as BYPASS policies: YES
12         Global Undef Action: NOCACHE
```

Note:

500 MB of memory is allocated to the integrated caching feature.

1. Save the configuration

```
save config
```

1. Verify the memory limits set in the ns.conf file from shell prompt

```
root@ns# cat /nsconfig/ns.conf | grep memLimit
```

1. Change the memory limit

```
set cache parameter -memLimit 500 -via NS-CACHE-9.3: 18 -verifyUsing  
  HOSTNAME_AND_IP -maxPostLen 4096 -enableBypass YES -undefAction  
NOCACHE
```

Configure selectors and basic content groups

May 2, 2023

You can configure selectors and apply them to content groups. When you add a selector to one or more content groups, you specify whether the selector is to be used for identifying cache requests or identifying cached objects to be invalidated (expired). Selectors are optional. Alternatively, you can configure content groups to use [hit](#) parameters and invalidation parameters. However, Citrix recommends that you configure selectors.

After configuring selectors, or deciding to use parameters instead, you are ready to set up a basic content group. After creating the basic content group, you need to decide how objects should be expired from the cache, and configure cache expiration. You can further modify the cache as described in [Improving Cache Performance](#) and [Configuring Cookies, Headers, and Polling](#), but you might first want to configure caching policies.

Note

Content group parameters and selectors are used only at request time, and you typically associate them with policies that use MAY_CACHE or MAY_NOCACHE actions.

Advantages of selectors

A selector is a filter that locates particular objects in a content group. If you do not configure a selector, the Citrix® ADC appliance looks for an exact match in the content group. This can lead to multiple copies of the same object residing in a content group. For example, a content group that does not have a selector may need to store URLs for host1.domain.com\mypage.htm, host2.domain.com\mypage.htm, and host3.domain.com\mypage.htm. In contrast, a selector can match just the URL (mypage.html, using the expression http.req.url) and the domain (.com, using the expression http.req.hostname.domain), allowing the requests to be satisfied by the same URL.

Selector expressions can perform simple matching of parameters (for example, to find objects that match a few query string parameters and their values). A selector expression can use Boolean logic, arithmetic operations, and combinations of attributes to identify objects (for example, segments of a URL stem, a query string, a string in a POST request body, a string in an HTTP header, a cookie). Selectors can also perform programmatic functions to analyze information in a request. For example, a selector can extract text in a POST body, convert the text into a list, and extract a specific item from the list.

For more information about expressions and what you can specify in an expression, see [Policies and Expressions](#).

Use parameters Instead of selectors

Although Citrix recommends the use of selectors with a content group, you can instead configure `hit` parameters and invalidation parameters. For example, suppose that you configure three `hit` parameters in a content group for bug reports: BugID, Issuer, and Assignee. If a request contains BugID=456, with Issuer=RohitV and Assignee=Robert, the NetScaler appliance can serve responses that match these parameter-value pairs.

Invalidation parameters in a content group expire cached entries. For example, suppose that BugID is an invalidation parameter and a user issues a POST request to update a bug report. An invalidation policy directs the request to this content group, and the invalidation parameter for the content group expires all cached responses that match the BugID value. (The next time a user issues a GET request for this report, a caching policy can enable the NetScaler appliance to refresh the cached entry for the report from the origin server.)

Note that the same parameter can be used as a `hit` parameter or an invalidation parameter.

Content groups extract request parameters in the following order:

- URL query
- POST body
- Cookie header

After the first occurrence of a parameter, regardless of where it occurred in the request, all its subsequent occurrences are ignored. For example, if a parameter exists both in the URL query and in the POST body, only the one in the URL query is considered.

If you decide to use `hit` and invalidation parameters for a content group, configure the parameters when you configure the content group.

Note: Citrix recommends that you use selectors rather than parameterized content groups, because selectors are more flexible and can be adapted to more types of data.

Configure a selector

A content group can use a hit selector to retrieve cache hits or use an invalidation selector to expired cached objects and fetch new ones from the origin server.

A selector contains a name and a logical expression, called an *advanced expression*.

For more information about advanced expressions, see [Policies and Expressions](#).

To configure a selector, you assign it a name and enter one or more expressions. As a best practice, a selector expression should include the URL stem and host, unless there is a strong reason to omit them.

To configure a selector by using the CLI

At the command prompt, type:

```
add cache selector <selectorName> ( <rule> ... )
```

For information about configuring the expression or expressions, see [To configure a selector expression by using the command line interface](#).

```
1 >add cache selector product_selector "http.req.url.query.value(\"
    ProductId\")" "http.req.url.query.value(\"BatchNum\")" "http.req.url
    .query.value(\"depotLocation\")"
2
3 > add cache selector batch_selector "http.req.url.query.value(\"
    ProductId\")" "http.req.url.query.value(\"BatchId\")" "http.req.url.
    query.value(\"depotLocation\")"
4
5 > add cache selector product_id_selector "http.req.url.query.value(\"
    ProductId\")"
6
7 > add cache selector batchnum_selector "http.req.url.query.value(\"
    BatchNum\")" "http.req.url.query.value(\"depotLocation\")"
8
9 > add cache selector batchid_selector "http.req.url.query.value(\"
    depotLocation\")" "http.req.url.query.value(\"BatchId\")"
```

To configure a selector by using the GUI

Navigate to **Optimization > Integrated Caching > Cache Selectors**, and add the cache selector.

Content groups

A content group is a container for cached objects that can be served in a response. When you first enable the integrated cache, cacheable objects are stored in a content group named Default. You can create content groups that have unique properties. For example, you can define separate content groups for image data, bug reports, and stock quotes, and you can configure the stock quote content group to be refreshed more often than the other groups.

You can configure expiration of an entire content group or selected entries in a content group.

The data in a content group can be static or dynamic, as follows:

- **Static content groups.** Finds an exact match between the URL stem and host name on the request and the URL stem and host name of the response.
- **Dynamic content groups.** Looks for objects that contain particular parameter-value pairs, arbitrary strings, or string patterns. Dynamic content groups are useful when caching data that is updated frequently (for example, a bug report or a stock quote).

Serve a request from a content group

1. A user enters search criteria for an item, such as a bug report, and clicks the Find button in an HTML form.
2. The browser issues one or more HTTP GET requests. These requests contain parameters (for example, the bug owner, bug ID, and so on).
3. When the NetScaler appliance receives the requests, it searches for a matching policy, and if it finds a caching policy that matches these requests, it directs the requests to a content group.
4. The content group looks for appropriate objects in the content group, based on criteria that you configure in a selector.

For example, the content group can retrieve responses that match `NameField=username and BugID=ID`.

1. If it finds matching objects, the NetScaler appliance can serve them to the user's browser, where they are assembled into a complete response (for example, a bug report).

Invalidate an object in a content group

1. A user modifies data (for example, the user modifies the bug report and clicks the Submit button).
2. The browser sends this data in the form of one or more HTTP requests. For example, it can send a bug report in the form of several HTTP POST requests that contain information about the bug owner and bug ID.
3. The NetScaler appliance matches the requests against invalidation policies. Typically, these policies are configured to detect the HTTP POST method.
4. If the request matches an invalidation policy, the NetScaler appliance searches the content group that is associated with this policy, and expires responses that match the configured criteria for invalidation.

For example, an invalidation selector can find responses that match `NameField=username and BugID=ID`.

1. The next time the NetScaler appliance receives a GET request for these responses, it fetches

refreshed versions from the origin server, caches the refreshed responses, and serves these responses to the user's browser, where they are assembled into a complete bug report.

Set up a basic content group

By default, all cached data is stored in the default content group. You can configure more content groups and specify these content groups in one or more policies.

You can configure content groups for static content, and you must configure content groups for dynamic content. You can modify the configuration of any content group, including the default group.

To set up a basic content group by using the command line interface

At the command prompt, type:

```
add cache contentgroup <name> (-hitSelector <hitSelectorName> -
invalSelector <invalidationSelectorName> | -hitParams <hitParamName>
-invalParams<invalidationParamName>)-type <type> [-relExpiry <sec> |
-relExpiryMilliSec <msec>] [-heurExpiryParam <positiveInteger>]
add cache contentgroup Products_Details -hitSelector product_selector
-invalSelector id_selector
add cache contentgroup bugrep -hitParams IssuePage RecordID Template
TableId -invalParams RecordID -relExpiry 864000
```

To set up a basic content group by using the GUI

Navigate to **Optimization > Integrated Caching > Content Groups**, and create the content group.

Expire or flush cached objects

If a response does not have an Expires header or a Cache-Control header with an expiration time (Max-Age or Smax-Age), you must expire objects in a content group by using one of the following methods:

- Configure content group expiration settings to determine whether and how long to keep the object.
- Configure an invalidation policy and action for the content group. For more information, see [Configuring Policies for Caching and Invalidation](#).
- Expire the content group or objects within it manually.

After a cached response expires, the NetScaler appliance refreshes it the next time the client issues a request for the response. By default, when the cache is full, the NetScaler appliance replaces the least recently used response first.

The following list describes methods for expiring cached responses using settings for a content group. Typically, these methods are specified as a percent or in seconds:

- **Manual.** Manually invalidate all responses in a content group or all responses in the cache.
- **Response-based.** Specific expiration intervals for positive and negative responses. Response-based expiry is considered only if the Last-Modified header is missing in the response.
- **Heuristic expiry.** For responses that have a Last-Modified header, the heuristic expiry specifies the amount of time taken from when the response was modified (calculated as the current time minus the Last-Modified time, multiplied by the heuristic expiry value). For example, if a Last-Modified header indicates that a response was updated 2 hours ago, and the heuristic expiry setting is 10%, cached objects expire after 0.2 hours. This method assumes that frequently updated responses must be expired more often.
- **Absolute or relative.** Specify an exact (absolute) time when the response expires every day, in HH:MM format, local time, or GMT. Local time may not work in all time zones.

Relative expiration specifies some seconds or milliseconds from the time a cache miss causes a trip to the origin server to the expiration of the response. If you specify relative expiration in milliseconds, enter a multiple of 10. This form of expiration works for all positive responses. Last-Modified, Expires, and Cache-Control headers in the response are ignored.

Absolute and relative expiration overrides any expiration information in the response itself.

- **On download.** The option Expire After Complete Response Received expires a response when it is downloaded. This is useful for frequently updated responses, for example, stock quotes. By default, this option is disabled.

Enabling both Flash Cache and Expire After Complete Response Received accelerates the performance of dynamic applications. When you enable both options, the NetScaler appliance fetches only one response for a block of simultaneous requests.

- **Pinned.** By default, when the cache is full the NetScaler appliance replaces the least recently used response first. The NetScaler appliance does not apply this behavior to content groups that are marked as pinned.

If you do not configure expiration settings for a content group, the following are more options for expiring objects in the group:

- Configure a policy with an INVALID action that applies to the content group.
- Enter the names of content groups when configuring a policy that uses an INVALID action.

How expiration methods are applied

Expiration works differently for positive and negative responses. Positive and negative responses are described in the table, *Expiration of Positive, and Negative Responses* mentioned below.

The following are rules of thumb for understanding the expiration method that is applied to a content group:

- You can control whether the NetScaler appliance evaluates response headers when deciding whether to expire an object.
- Absolute and relative expiration causes the NetScaler appliance to ignore the response headers (they override any expiration information in the response).
- Heuristic expiration settings and “Weak Positive” and “Weak Negative” expiration (labeled as **Default** values in the configuration utility) cause the NetScaler appliance to examine the response headers. These settings work together as follows:
 - The value in an Expires or Cache-Control header overrides these content group settings.
 - For positive responses that lack an Expires or Cache-Control header but have a Last-Modified header, the NetScaler appliance compares heuristic expiration settings with the header value.
 - For positive responses that lack an Expires, Cache-Control, or Last-Modified header, the NetScaler appliance uses the “weak positive” value.
 - For negative responses that lack an Expires or Cache-Control header, the NetScaler appliance uses the “weak negative” value.

The following table describes how these methods are applied.

Response type	Expiration header type	Content Group Setting	Period the Object Remains in the Cache
Positive	Any header	Expire Content After (relExpiry) with no other settings	Use the value of the Expire Content After setting.
Positive	Any header	Expire Content At (absExpiry) with no other settings	Subtract current date from the value of the Expire Content At setting.
Positive	Any header	Expire Content After (relExpiry) and Expire content at (absExpiry)	Use the smaller of the two values for the content group settings. See the previous rows in this table.

Response type	Expiration header type	Content Group Setting	Period the Object Remains in the Cache
Positive	Last-Modified (with any other headers)	Heuristic (heurExpiry Param) with any other setting	Subtract the Last-Modified date from the current date, multiply the result by the value of the heuristic expiry setting, and then divide by 100.
Positive	Last-Modified (with any other headers)	Default (positive) (weakPosRel Expiry) and no other setting	Use the value of the Default (positive) expiry setting.
Positive	Expires or Cache-Control: Max-Age header is present	Last-Modified header is absent, Heuristic (heurExpiry Param), Default (positive) (weakPosRel Expiry), or both	Subtract the current date from the Expires or the <code>Cache-Control:Max-Age</code> date.
Positive	no caching headers	Default (positive) (weakPosRel Expiry) and any other expiration setting	Use the value of the Default (positive) setting.
Positive	no caching headers	Heuristic (heurExpiry Param) is present, Default (positive) (weakPosRel Expiry) setting is absent.	If the Last-Modified header is absent, the response is not cached or it is cached with an Already Expired status. If the Last-Modified header is present, use the heuristic expiry value.
Negative	Expires or <code>Cache-Control:Max-Age</code>	Expire Content After (relExpiry), Expire Content At (absExpiry), or both settings	Subtract the current date from the value of the Expires header, or use the value of the Cache-Control:Max-Age header.

Response type	Expiration header type	Content Group Setting	Period the Object Remains in the Cache
Negative	Expires or Cache-Control headers are absent	Expire Content After (relExpiry), Expire Content At (absExpiry), or both settings	Response is not cached, or is cached with an Already Expired status.
Negative	Expires or Cache-Control:Max-Age	Any setting	Subtract the current date from the Expires or Cache-Control:Max-Age date.
Negative	Expires and Cache-Control:Max-Age headers are absent	Default (negative) (weakNegRel Expiry)	Use the value of the Default (negative) setting.
Negative	Expires and Cache-Control:Max-Age headers are absent	Any setting other than Default (negative) (weakNegRel Expiry)	Object is not cached or is cached with an Already Expired status.

Expire a content group by manual method

You can manually expire all of the entries in a content group.

To manually expire all responses in a content group by using the command line interface

At the command prompt, type:

```
expire cache contentGroup <name>
```

To manually expire all responses in a content group by using the GUI

Navigate to **Optimization > Integrated Caching > Content Groups**, select the content group, and click Invalidate to expire all the responses in a content group.

To manually expire all responses in the cache by using the GUI

Navigate to **Optimization > Integrated Caching > Content Groups**, and click Invalidate All to expire all the responses in cache.

Configure periodic expiration of a content group

You can configure a content group so that it performs selective or full expiration of its entries. The expiration interval can be fixed or relative.

To configure content group expiration by using the command line interface

At the command prompt, type:

```
set cache contentgroup \<name> (-relExpiry|-relExpiryMilliSec|-  
absExpiry|-absExpiryGMT| -heurExpiryParam|-weakPosRelExpiry|-weakNegRelExpiry  
| -expireAtLastBye)\<expirationValue>
```

To configure content group expiration by using the GUI

Navigate to **Optimization > Integrated Caching > Content Groups**, select the content group, and specify expiry method.

Expire individual responses

Expiring a response forces the NetScaler appliance to fetch a refreshed copy from the origin server. Responses that do not have validators, for example, **ETag** or Last-Modified headers, cannot be revalidated. As a result, flushing these responses has the same effect as expiring them.

To expire a cached response in a content group for static data, you can specify a URL that must match the stored URL. If the cached response is part of a parameterized content group, you must specify the group name and the exact URL stem. The host name and the port number must be the same as in the host HTTP request header of the cached response. If the port is not specified, port 80 is assumed.

To expire individual responses in a content group by using the command line interface

At the command prompt, type:

```
expire cache object -url <URL> -host <hostName> [-port <port>] [-  
groupName<contentGroupName>] [-httpMethod GET|POST]
```

To expire individual responses in a content group by using the CLI

At the command prompt, type the following command:

```
expire cache object -locator <positiveInteger>
```

To expire a cached response by using the GUI

Navigate to **Optimization > Integrated Caching > Cached Objects**, select the cached response, and expire.

To expire a response by using the GUI

Navigate to **Optimization > Integrated Caching > Cached Objects**, click **Search** and, set the search criteria to find the required cached response and expire.

Flushing responses in a content group

You can remove, or flush, all responses in a content group, some responses in a group, or all responses in the cache. Flushing a cached response frees up memory for new cached responses.

Note:

To flush responses for more than one object at a time, use the configuration utility method. The command line interface does not offer this option.

To flush responses from a content group by using the command line interface

At the command prompt, type:

```
flush cache contentGroup <name> [-query <queryString> | [-selectorValue  
<selectorExpressionIDList> -host <hostName>]]
```

To flush responses from a content group by using the GUI

1. Navigate to **Optimization > Integrated Caching > Content Groups**.
2. In the details pane, flush the responses as follows:
 - To flush all responses in all content groups, click **Invalidate All**, and flush all the responses.
 - To flush responses in a particular content group, select the content group, click **Invalidate**, and flush all the responses.

Note:

If this content group uses a selector, you can selectively flush responses by entering a string in the Selector value text box, entering a host name in the Host text box. Then click **Flush and OK**. The Selector value can be a query string of up to 2319 characters that is used for parameterized invalidation.

If the content group uses an invalidation parameter, you can selectively flush responses by entering a string in the **Query** field.

If the content group uses an invalidation parameter and Invalidate objects belonging to the target host is configured, enter strings in the **Query and Host** fields.

To flush a cached response by using the command line interface

At the command prompt, type:

```
flush cache object -locator <positiveInteger> | -url <URL> -host <  
hostName> [-port <port>] [-groupName <contentGroupName>] [-httpMethod  
GET|POST]
```

To flush a cached response by using the GUI

Navigate to **Optimization > Integrated Caching > Cached Objects**, select the cached object, and flush.

Deleting a content group

You can remove a content group if it is not used by any policy that stores responses in the cache. If the content group is bound to a policy, you must first remove the policy. Removing the content group removes all responses stored in that group.

You cannot remove the Default, BASEFILE, or Deltas group. The Default group stores cached responses that do not belong in any other content group.

To delete a content group by using the command line interface

At the command prompt, type:

```
rm cache contentgroup <name>
```

To delete a content group by using the GUI

Navigate to **Optimization > Integrated Caching > Content Groups**, select the content group, and delete.

Configure policies for caching and invalidation

May 2, 2023

Policies enable the integrated cache to determine whether to try to serve a response from the cache or the origin. The NetScaler appliance provides built-in policies for integrated caching, and you can configure more policies. When you configure a policy, you associate it with an action. An action either caches the objects to which the policy applies or invalidates (expires) the objects. Typically, you based caching policies on information in GET and POST requests. You typically base invalidation policies on the presence of the POST method in requests, along with other information. You can use any information in a GET or POST request in a caching or an invalidation policy.

You can view some of the built-in policies in the integrated cache's Policies node in the configuration utility. The built-in policy names begin with an underscore (_).

Actions determine what the NetScaler appliance does when traffic matches a policy. The following actions are available:

- **Caching actions.** Policies that you associate with the CACHE action store responses in the cache and serve them from the cache.
- **Invalidation actions.** Policies that you associate with the INVAL action immediately expire cached responses and refresh them from the origin server. For Web-based applications, invalidation policies often evaluate POST requests.

- **“Do not cache” actions.** Policies that you associate with a NOCACHE action never store objects in the cache.
- **Provisionally cache actions.** Policies that you associate with a MAYCACHE or MAYNOCACHE action depend on the outcome of more policy evaluations.

Although the integrated cache does not store objects specified by the LOCK method, you can invalidate cached objects upon receipt of a LOCK request. For invalidation policies only, you can specify LOCK as a method by using the expression `http.req.method.eq(“lock”)`. Unlike policies for GET and POST requests, you must enclose the LOCK method in quotes because the NetScaler appliance recognizes this method name as a string only.

After you create a policy, you bind it to a particular point in the overall processing of requests and responses. Although you create a policy before binding it, you must understand how the bind points affect the order of processing before you create your policies.

The policies bound to a particular bind point constitute a policy bank. You can use goto expressions to modify the order of execution in a policy bank. You can also invoke policies in other policy banks. In addition, you can create labels and bind policies to them. Such a label is not associated with a processing point, but the policies bound to it can be invoked from other policy banks.

Actions to associate with integrated caching policies

The following table describes actions for integrated caching policies.

Action	Specification
CACHE	Serves a response from the cache if the response has not expired. If the response must be fetched from the origin server, the NetScaler appliance caches the response before serving it. Even data that is updated and accessed frequently can be cached. For example, stock quotes are updated frequently, but they can be cached so that they can be served quickly to multiple users. If necessary, cached data can be refreshed immediately after it is downloaded. A CACHE action can be overridden by built-in policies.
NOCACHE	Always fetches the response from the origin server and marks the response as non-storable. You typically configure NOCACHE policies for data that is sensitive or personalized.

Action	Specification
MAY_CACHE	Used in a request-time policy, this setting provisionally enables a response to be stored in a content group, pending evaluation of response-time policies. The following are possible: 1. If a matching response-time policy has a CACHE action but does not specify a content group, the response is stored in the Default group unless built-in policies override this policy. 2. If a matching response-time policy has a CACHE action and specifies the same content group as the one in the request-time policy, the response is stored in the named content group unless built-in policies override this policy. 3. If a matching response-time policy has a CACHE action but specifies a different content group from the one in the request-time policy, a NOCACHE action is applied. 4. If a matching response-time policy has a NOCACHE action, perform a NOCACHE action. 5. If there is no matching response-time policy, a CACHE action is applied, unless a built-in policy overrides this policy.
MAY_NOCACHE	For a request-time policy, this setting provisionally prevents caching the response. At response time, one of the following actions is taken: - If no response-time policy matches the request, the final action is NOCACHE. - If a matching response-time policy contains a CACHE action, the final action is CACHE, unless built-in policies override this policy. - If a matching response-time policy contains a NOCACHE action, the final action is NOCACHE. -If a matching response-time policy has a CACHE action but does not specify a content group, the final action is to CACHE the response in the Default content group, unless built-in policies override this policy.

Action	Specification
INVAL	Expires cached responses. Depending on how the policy and the content group are configured, all responses in one or more content groups are expired, or selected objects in the content group are expired. Note: You can specify INVAL actions in request-time policies only.

Bind points for a policy

You can bind the policy to one of the following bind points:

- **A global policy bank.** These are the request-time default, request-time override, response-time default, and response-time override policy banks, as described in “[Order of Policy Evaluation](#).”
- **A virtual server.** Policies that you bind to a virtual server are processed after the global override policies and before the global default policies, as described in “[Order of Policy Evaluation](#).” When binding a policy to a virtual server, you bind it to either request-time or response-time processing.
- **An ad-hoc policy label.** A policy label is a name assigned to a policy bank. In addition to the global labels, the integrated cache has two built-in custom policy labels:
 - `_reqBuiltinDefaults`. This policy label, by default, is invoked from the request-time default policy bank.
 - `_resBuiltinDefaults`. This policy label, by default, is invoked from the response-time default policy bank.

You can also define new policy labels. Policies bound to a user-defined policy label must be invoked from within a policy bank for one of the built-in bind points.

Important:

You must bind a policy with an INVAL action to a request-time override or a response-time override bind point. To delete a policy, you must first unbind it.

Order of policy evaluation

For an advanced policy to take effect, you must ensure that the policy is invoked at some point during the NetScaler appliance’s processing of traffic. To specify the invocation time, you associate the policy with a bind point. The following are the bind points, listed in order of evaluation:

- **Request-time override.** If a request matches a request-time override policy, by default the request-time policy evaluation ends and the NetScaler appliance stores the action that is associated with the matching policy.
- **Request-time load balancing virtual server.** If policy evaluation cannot be completed after all the request-time override policies are evaluated, the NetScaler appliance processes request-time policies that are bound to load balancing virtual servers. If the request matches one of these policies, evaluation ends and the NetScaler appliance store the action that is associated with the matching policy.
- **Request-time content switching virtual server.** Policies that are bound to this bind point are evaluated after the request-time policies that are bound to load balancing virtual servers.
- **Request-time default.** If policy evaluation cannot be completed after all the request-time, virtual server-specific policies are evaluated, the NetScaler appliance processes the request-time default policies. If the request matches a request-time default policy, by default the request-time policy evaluation ends and the NetScaler appliance stores the action that is associated with the matching policy.
- **Response-time override.** Similar to request-time override policy evaluation.
- **Response-time load balancing virtual server.** Similar to request-time virtual server policy evaluation.
- **Response-time content switching virtual server.** Similar to request-time virtual server policy evaluation.
- **Response-time default.** Similar to request-time default policy evaluation.

You can associate multiple policies with each bind point. To control the order of evaluation of the policies associated with the bind point you configure a priority level. In the absence of any other flow control information, policies are evaluated according to priority level, starting with the lowest numeric priority value.

Note:

Request-time policies for POST data or cookie headers must be invoked during request-time override evaluation, because the built-in request-time policies in the integrated cache return a **NOCACHE** action for POST requests and a **MAY_NOCACHE** action for requests with cookies. You would associate **MAY_CACHE** or **MAY_NOCACHE** actions with a request-time policy that points to a parameterized content group. The response time policy determines whether the transaction is stored in the cache.

Configure a policy for integrated caching

You configure new policies to handle data that the built-in policies cannot process. You configure separate policies for caching, preventing caching from occurring, and for invalidating cached data. Following are the main components of a policy for integrated caching:

- Rule: A logical expression that evaluates an HTTP request or response.
- Action: You associate a policy with an action to determine what to do with a request or response that matches the policy rule.

Content groups: You associate the policy with one or more content groups to identify where the action is to be performed.

To configure a policy for caching by using the command line interface

At the command prompt, type:

```
add cache policy <policyName> -rule <expression> -actionCACHE|MAY_CACHE
|NOCACHE|MAY_NOCACHE [-storeInGroup <contentGroupName>] [-undefAction
NOCACHE|RESET]
> add cache policy image_cache -rule "http.req.url.contains(\"jpg
\")|| http.req.url.contains(\"jpeg\")"-action CACHE -storeingroup
myImages_group -undefaction NOCACHE
> add cache policy bugReportPolicy -rule "http.req.url.query.contains
(\"IssuePage\")"-action CACHE -storeInGroup bugReportGroup
> add cache policy my_form_policy -rule "http.req.header(\"Host
\")contains(\"my.company.com\")&& http.req.method.eq(\"GET\")&&
http.req.url.query.contains(\"v=7\")"-action CACHE -storeInGroup
my_form_event
> add cache policy viewproducts_policy -rule "http.req.url.contains
(\"viewproducts.aspx\")"-action CACHE -storeInGroup Product_Details
```

To configure a policy for invalidation by using the command line interface

At the command prompt, type:

```
1 add cache policy <policyName> -rule <expression> -action INVALID [-
invalObjects "\<contentGroupName1>[,<selectorName1>"]. . .] | [-
invalGroup \<contentGroupName1>[, <contentGroupName2>. . .] [-
undefAction NOCACHE|RESET]
```

```
1 > add cache policy invalidation_events_policy -rule "http.req.header("
Host")contains("my.company.com") && http.req.method.eq("GET") &&
http.req.url.query.contains("v=8") -action INVALID -invalObjects
my_form_event -undefaction NOCACHE
```

```
1 > add cache policy inval_all -rule "http.req.method.eq("POST") && http.
req.url.contains("jpeg")" -action INVALID -invalGroups myImages_group
myApps_group PDF_group
```

```
1 > add cache policy bugReportInvalidationPolicy -rule "http.req.url.
query.contains(\"TransitionForm\")" -action INVALID -invalObjects
bugReport`
```

```
2 `> add cache policy editproducts_policy -rule "http.req.url.contains
    (\"editproducts.aspx\")" -action INVAL -invalObjects "
    Product_Details,batchnum_sel" "Products_In_Depots,batchid_sel"
```

To configure a policy for caching or invalidation by using the GUI

Navigate to **Optimization > Integrated Caching > Policies**, and create the new policy.

Globally binding an integrated caching policy

When you globally bind a policy, it is available to all virtual servers on the NetScaler appliance.

To bind an integrated caching policy globally by using the command line interface:

At the command prompt, type:

```
1 bind cache global <policy> -priority <positiveInteger> [-
    typeREQ_OVERRIDE|REQ_DEFAULT|RES_OVERRIDE|RES_DEFAULT] [-
    gotoPriorityExpression <expression>] [-invoke <labelType> <labelName
    >]
```

```
1 > bind cache global myCachePolicy -priority 100 -type req_default
```

Note:

The type argument is optional for globally bound policies, to maintain backward compatibility with policies that you defined using earlier versions of the NetScaler appliance. If you omit the type, the policy is bound to REQ_DEFAULT or RES_DEFAULT, depending on whether the policy rule is a response-time or a request-time expression. If the rule contains both request time and response time parameters, it is bound to RES_DEFAULT. Following is an example of a binding that omits the type

Following is an example of a binding that omits the type.

```
> bind cache global myCache Policy 200
```

To bind an integrated caching policy globally by using the configuration utility

Navigate to **Optimization > Integrated Caching**, click **Cache Policy Manager** and bind policies by specifying the relevant bind point and connection type (Request/Response).

Bind an integrated caching policy to a virtual server

When you bind a policy to a virtual server, it is available only to requests and responses that match the policy and that flow through the relevant virtual server.

When using the GUI, you can bind the policy using the configuration dialog box for the virtual server. This enables you to view all of the policies from all NetScaler modules that are bound to this virtual

server. You can also use the **Policy Manager configuration** dialog for the integrated cache. This enables you to view only the integrated caching policies that are bound to the virtual server.

To bind an integrated caching policy to a virtual server by using the command line interface:

At the command prompt, type:

```
1 bind lb vserver <name>@ -policyName <policyName> -priority <
  positiveInteger> -type(REQUEST|RESPONSE)
```

```
1 bind cs vserver <name>@ -policyName <policyName> -priority <
  positiveInteger> -type(REQUEST|RESPONSE)
```

To bind an integrated caching policy to a virtual server by using the configuration utility (virtual server method)

- CS Virtual Server - Navigate to **Traffic Management > Content Switching > Virtual Servers**, select the virtual server, and bind relevant cache policies.
- LB Virtual Server - Navigate to **Traffic Management > Load Balancing > Virtual Servers**, select the virtual server, and bind relevant cache policies.

To bind an integrated caching policy to a virtual server by using the GUI (Policy Manager method).

Navigate to **Optimization > Integrated Caching**, click **Cache Policy Manager**, and bind cache policies by specifying the relevant bind point and connection type.

Note:

You can bind cache policies to both load balancing virtual server and content switching virtual server by selecting the appropriate bind point.

How to cache compressed and uncompressed versions of a file

By default, a client that can handle compression can be served uncompressed responses or compressed responses in gzip, deflate, compress, and pack200-gzip format. If the client handles compression, an `Accept-Encoding:compression` format header is sent in the request. The compression type accepted by the client must match the compression type of the cached object. For example, a `cached.gzip` file cannot be served in response to a request with an `Accept-Encoding:deflate` header.

A client that cannot handle compression is served a cache miss if the cached response is compressed.

For dynamic caching, you need to configure two content groups, one for compressed data and one for uncompressed versions of the same data. The following is an example of configuring the selectors, content groups, and policies for serving uncompressed files from the cache to clients that cannot

handle compression, and serving compressed versions of the same files to the client that can handle compression.

```
add cache selector uncompressed_response_selector http.req.url "http.
req.header(\"Host\")"

add cache contentGroup uncompressed_group -hitSelector uncompressed_responst_s
-invalSelector uncomp_resp_sel

add cache policy cache_uncompressed -rule "HTTP.REQ.URL.CONTAINS(\"
xyz\")&& !HTTP.REQ.HEADER(\"Accept-Encoding\").EXISTS"-action CACHE -
storeInGroup uncompressed_group

bind cache global cache_uncompressed -priority 100 -gotoPriorityExpression
END -type REQ_OVERRIDE

add cache selector compressed_response_selector HTTP.REQ.URL "HTTP.
REQ.HEADER(\"Host\")""HTTP.REQ.HEADER(\"Accept-Encoding\")"

add cache contentGroup compressed_group -hitSelector compressed_response_selec

add cache policy cache_compressed -rule "HTTP.REQ.URL.CONTAINS(\"
xyz\")&& HTTP.REQ.HEADER(\"Accept-Encoding\").EXISTS"-action CACHE -
storeInGroup compressed_group

bind cache global cache_compressed -priority 200 -gotoPriorityExpression
END -type REQ_OVERRIDE
```

Configure a policy bank for caching

All of the policies that are associated with a particular bind point are collectively known as a policy bank. In addition to configuring priority levels for policies in a bank, you can modify the order of evaluation in a bank by configuring Goto expressions. You can further modify the evaluation order by invoking an external policy bank from within the current policy bank. You can also configure new policy banks, to which you assign your own labels. Because such policy banks are not bound to any point in the processing cycle, they can be invoked only from within other policy banks. For convenience, policy banks whose labels do not correspond to a built-in bind point are called policy labels.

In addition to controlling the order of policy evaluation by binding the policy and assigning a priority level, as described in “[Binding Policies](#)”, you can establish the flow within a bank of policies by configuring a Goto expression. A Goto expression overrides the flow that is determined by the priority levels. You can also control the evaluation flow by invoking an external policy bank after evaluating an entry in the current bank. Evaluation always returns to the current bank after evaluation has completed.

The following table summarizes the entries to control evaluation in a policy bank.

Attribute	Specifies
Name	The name of a policy, or, to invoke another policy bank without evaluating the policy, the keyword NOPOLICY. You can specify NOPOLICY more than once in a policy bank, but you can specify a named policy only once.
Priority	An integer. The lower the integer, the higher the priority.
Goto Expression	Determines the next policy or policy bank to evaluate. You can provide one of the following values: 1. NEXT: Go to the policy with the next higher priority. 2. END: Stop evaluation. 3. USE_INVOCATION_RESULT: Applicable if this entry invokes another policy bank. If the final Goto in the invoked bank has a value of END, evaluation stops. If the final Goto is anything other than END, the current policy bank performs a NEXT. 4. Positive number: Priority number of the next policy to be evaluated. 5. Numeric expression: Expression that produces the priority number of the next policy to be evaluated. The Goto can only proceed forward in a policy bank. Omitting the Goto expression is the same as specifying END.
Invocation Type	Designates a policy bank type. The value can be one of the following - 1. Request virtual server: Invokes request-time policies that are associated with a virtual server. 2. Response virtual server: Invokes response-time policies that are associated with a virtual server. 3. Policy label: Invokes another policy bank, as identified by the policy label for the bank.
Invocation Name	Name of a virtual server or a policy label, depending on the value that you specified for the Invocation Type.

The integrated cache has two built-in policy labels, and you can configure more policy labels:

[_reqBuiltInDefaults](#): This policy label is invoked from the request-time default bind point.

`_resBUILTInDefaults`: This policy label is invoked from the response-time default bind point.

To invoke a policy label in a caching policy bank by using the command line interface

At the command prompt, type:

```
1 bind cache policylabel <labelName> -policname<policyName> -priority<
  priority> [-gotoPriorityExpression <gotopriorityExpression>] [-
  invoke <labelType> <labelName>]
```

To invoke a policy label in a caching policy bank by using the GUI:

1. Navigate to **Optimization > Integrated Caching**, click **Cache policy manager**, and specify the relevant bind point (Override Global or Default Global) and connection type to view the list of policies bound to this bind point.
2. If you want to invoke a policy label without evaluating a policy, click **NOPOLICY**.

Note:

To invoke an external policy bank, click the field in the Invoke Type column, and select the type of policy bank that you want to invoke at this point in the policy bank. This can be a global label or a virtual server bank. In the Invoke Name field, enter the label or virtual server name.

To invoke a caching policy label in a virtual server policy bank by using the command line interface

At the command prompt, type:

```
1 bind lb vserver <name>@ -policyName <policyName>|<NOPOLICY-CACHE> -
  priority<positiveInteger> -gotoPriorityExpression <expression> -type
  REQUEST|RESPONSE -invoke<labelType> <labelName>
```

```
1 bind cs vserver <name> -policyName <policyName>|<NOPOLICY-CACHE> -
  priority<positiveInteger> -gotoPriorityExpression <expression> -type
  REQUEST|RESPONSE -invoke<labelType> <labelName>
```

To invoke a caching policy label in a virtual server policy bank by using the GUI

1. Navigate to **Traffic Management > Load Balancing/Content Switching > Virtual Servers**, select the virtual server, and click **Policies**.
2. If you are configuring an existing entry in this bank, skip this step. If you are adding a new policy to this policy bank, or you want to use the “dummy”NOPOLICY entry, click **Add** and do one of the following:
 - To configure a new policy, click Cache and configure the new policy as described in Configuring a Policy in the Integrated Cache.
 - To invoke a policy bank without processing a policy a rule, select the **NOPOLICY-CACHE** option.

Note:

To invoke an external policy bank, click the field in the Invoke Type column, and select the type of policy bank that you want to invoke at this point in the policy bank. This can be a global label or a virtual server bank. In the Invoke Name field, enter the label or virtual server name.

Configure a policy label in an integrated cache

In addition to configuring policies in a policy bank for one of the built-in bind points or a virtual server, you can create caching policy labels and configure banks of policies for these new labels.

A policy label for the integrated cache can be invoked only from one of the bind points that you can view in the Policy Manager in the **Integrated Caching** details pane (request override, request default, response override, or response default) or the built-in policy labels `_reqBuiltinDefaults` and `_resBuiltinDefaults`. You can invoke a policy label any number of times unlike a policy, which can only be invoked once.

The NetScaler GUI provides an option to rename a policy label. Renaming a policy label does not affect the process of evaluation of the policies bound to the label.

Note:

You can use the `NOPOLICY` “dummy” policy to invoke any policy label from another policy bank. The `NOPOLICY` entry is a placeholder that does not process a rule.

To configure a policy label for caching by using the command line interface

At the command prompt, type the following command to create a policy label and verify the configuration:

- `add cache policylabel <labelName> -evaluates (REQ|RES)`
- `show cache policylabel <labelName>`

Invoke this policy label from a policy bank.

To configure a policy label for caching by using the GUI:

Navigate to **Optimization > Integrated Caching > Policy Labels**, add a policy label, and bind the cached policies.

Note:

To ensure that the NetScaler processes the policy label at the right time, configure an invocation of this label in one of the policy banks that are associated with the built-in bind points.

To rename a policy label by using the GUI:

Navigate to **Optimization > Integrated Caching > Policy Labels** select the policy label, and rename.

Unbind and delete an integrated caching policy and policy label

You can unbind a policy from a policy bank, and you can delete it. To delete the policy, you must first unbind it. You can also remove a policy label invocation and delete a policy label. To delete the policy label, you must first remove any invocations that you have configured for the label.

You cannot unbind or delete the labels for the built-in bind points (request default, request override, response default, and response override).

To unbind a global caching policy by using the command line interface

At the command prompt, type:

```
unbind cache global <policy>
```

To unbind a virtual server-specific caching policy by using the command line interface

At the command prompt, type:

```
(unbind lb vserver|unbind cs vserver)<vserverName> -policyName <policyName> -type(REQUEST|RESPONSE)
```

To delete a caching policy by using the command line interface

At the command prompt, type:

```
rm cache policy <policyName>
```

To unbind a caching policy by using the GUI:

Navigate to **Optimization > Integrated Caching**, click **Cache Policy Manager**, and unbind policies by specifying the relevant bind point and connection type (Request/Response).

To delete a policy label invocation by using the GUI:

1. Navigate to **Optimization > Integrated Caching**, click **Cache policy manager**, and specify the relevant binding point (load balancing virtual server or content switching virtual server) and connection type to view the list of cache policies bound to this virtual server.
2. In the policy Invoke column, clear the entry.

Cache support for database protocols

May 2, 2023

The integrated cache feature monitors and caches database request as determined by the cache policies. Users must configure the cache policies for MYSQL and MSSQL protocols as the NetScaler appliance does not provide any default policies. When configuring the default protocols, remember the

request-based policies support only CACHE and INVALID actions, while the response-based policies support only “NOCACHE” action. After configuring the policies, you must bind them to virtual servers. MYSQL and MSSQL policies, both request and response, are bound only to virtual servers.

Before creating a cache policy, you must create a cache content group of type MYSQL or MSSQL. When you create a cache content group, associate at least one select selector with it. See [Setting Up a Basic Content Group](#) for setting up a cache content group.

The following example explains how to configure and verify cache support for SQL protocols.

```
1 > enable feature IC
2 > set cache parameter -memlimit 100
3 > add cache selector sel1 mssql.req.query.text
4
5 > add cache contentgroup cg1 -type "MSSQL" -hitselector "sel1" -
  invalselector "inval_sel" -relExpiry "500" -maxResSize
6 "100"
7 > add cache policy cp1 -rule "mssql.req.query.command.contains(\"
  select\")" -action "CACHE" -storeInGroup "cg1"
8 > add cache policy cp2 -invalObjects "cg1" -rule "mssql.req.query.text
  .contains(\"insert\")" -action "INVALID"
9 > add db user user1 -password "Pass1"
10 > add service svc_sql_1 10.102.147.70 mssql 64834 -healthMonitor "NO" -
  downstateflush "ENABLED"
11 > add lb vserver lb_mssql1 mssql 10.102.147.77 1433 -lbmethod "
  roundrobin"
12 > bind lb vserver lb_mssql1 svc_sql_1
13 > bind lb vserver lb_mssql1 -policyName cp1 -type "REQUEST" -priority
  "2"
14 > bind lb vserver lb_mssql1 -policyName cp2 -type "REQUEST" -priority
  "1"
15
16 > show cache selector sel1
17     Name:sel1
18
19     Expressions:
20     1)mssql.req.query.text
21 > show cache policy cp1
22     Name:cp1
23     Rule:mssql.req.query.command.contains("select")
24     CacheAction:CACHE
25     Stored in group: cg1
26     UndefAction:Use Global
27     Hits:2
28     Undef Hits:0
29     Policy is bound to following entities
30     1) Bound to:
31         REQ VSERVER lb_mssql1
32         Priority:2
33         GotoPriorityExpression: END
```

Note:

The methods for reducing flash crowds, as explained in [Reducing Flash Crowds](#), are not supported for MYSQL and MSSQL protocols.

Configure expressions for caching policies and selectors

November 2, 2023

A request-time expression examines data in the request-time transaction, and a response-time expression examines data in a response-time transaction. In a policy for caching, if an expression matches data in a request or response, the NetScaler appliance takes the action associated with the policy. In a selector, request-time expressions are used to find matching responses that are stored in a content group.

Before configuring policies and selectors for the integrated cache, you need to know, at minimum, the host names, paths, and IP addresses that appear in HTTP request and response URLs. And you probably need to know the format of entire HTTP requests and responses. Programs such as Live HTTP Headers (<http://livehttpheaders.mozdev.org/>) or HTTPFox (<https://addons.mozilla.org/en-US/firefox/addon/6647>) can help you investigate the structure of the HTTP data that your organization works with.

Following is an example of an HTTP GET request for a stock quote program:

```
1 GET /quote.dll?page=dynamic&mode=data&mode=stock&symbol=CTXS&page=multi
   &selected=CTXS&random=0.00792039478975548 HTTP/1.1
2
3 Host: quotes.mystockquotes.com
4
5 User-Agent: Mozilla/5.0 (Windows; U; Windows NT 5.1; en-US; rv:1.9)
   Gecko/2008052906 Firefox/3.0
6
7 Accept: text/html,application/xhtml+xml,application/xml;q=0.9,*/*;q=0.8
8
9 Accept-Language: en-us,en;q=0.5
10
11 Accept-Encoding: gzip,deflate,compress,pack200-gzip
12
13 Accept-Charset: ISO-8859-1,utf-8;q=0.7,*;q=0.7
14
15 Keep-Alive: 300
16
17 Connection: keep-alive
18
19 Referer: http://quotes.mystockquotes.com/quote.dll?mode=stock&symbol=
   CTXS&page=multi&selected=CTXS
```

```
20
21 Cookie: __qca=1210021679-72161677-10297606
```

When configuring an expression, note the following limitations:

Expression Type	Restrictions
Request	Do not configure request-time expressions in a policy with a CACHE or NOCACHE action. Use MAY_CACHE or MAY_NOCACHE instead.
Response	Configure response-time expressions in caching policies only. Selectors can use only request-time expressions, Do not configure response-time expressions in a policy with an INVALID action. Note: Do not configure response-time expressions in a policy with a CACHE action and a parameterized content group. Use the MAY_CACHE action.

Note:

For a comprehensive discussion of advanced expressions, see [Policies and Expression](#).

Expression syntax

Following are the basic components of the syntax:

- Separate keywords with periods (.), as follows:

```
http.req.url
```

- Enclose string values in parentheses and quotes, as follows:

```
http.req.url.query.contains("this")
```

- When configuring an expression from the command line, you must escape internal quote marks (the quotes that delimit the values in the expression, as opposed to the quotes that delimit the expression). One method is to use a slash, as followings:

```
\ "abc\"
```

Selector expressions are evaluated in order of appearance, and multiple expressions in a selector definition are joined by a logical AND. Unlike selector expressions, you can specify Boolean operators and modify the precedence in an advanced expression for a policy rule.

Configure an expression in a caching policy or a selector

Note:

The syntax for a policy expression is different from a selector expression. For a comprehensive discussion of advanced expressions, see “Policies and Expressions.”

To configure a policy expression by using the command line interface

1. Start the policy definition as described in “Globally Binding an Integrated Caching Policy.”
2. To configure the policy rule, delimit the entire rule in quotes, and delimit string values within the rule in escaped quotes.

The following is an example:

```
“http.req.url.contains(“jpg”)”
```

To add Boolean values, insert &&,

- 1.

The following are examples:

```
"http.req.url.contains(“jpg”) || http.req.url.contains(“jpeg”)"
```

```
"http.req.url.query.contains(“IssuePage”)"
```

```
"http.req.header(“Host”)contains(“my.company.com”)&& http.req.method.eq(“GET”)&& http.req.url.query.contains(“v=7”)"
```

1. To configure an order of evaluation for the constituent parts of a compound

```
"http.req.url.contains(“jpg”) || (http.req.url.contains(“jpeg”)&& http.req.method.eq(“GET”))"
```

To configure a selector expression by using the command line interface:

1. Start the selector definition as described in “About Content Groups.”
2. To configure the selector expression, delimit the entire rule in quotes, and delimit string values within the rule in escaped quotes.

The following is an example:

```
"http.req.url.contains(“jpg”)"
```

You cannot add Boolean values, insert &&,

- 1.

The following are examples:

```
1 "http.req.url.query.value(\"ProductId\")" "http.req.url.query.value(\"BatchNum\")" "http.req.url.query.value(\"depotLocation\")"
```

To configure a policy or selector expression by using the GUI

1. Start the policy or selector definition as described in “To configure a policy for caching or invalidation by using the configuration utility” or “To configure a selector by using the configuration utility.”
2. In the **Expression** field, you can either manually type the Advanced policy by clicking Switch to Classic Syntax or create new expression using **Expression Editor**.

To insert an operator between two parts of a compound expression, click the Operators button and select the operator type. The following is an example of a configured expression with a Boolean OR (signaled by double vertical bars,

- 3.
4. Click **Frequently Used Expressions** drop-down list to insert the commonly used expressions.
5. To test the expression, click the **Evaluate**. In the **Expression Evaluator** dialog box, select the Flow Type that matches the expression. In the data field, paste the HTTP request or response that you hope to parse using the expression, and click **Evaluate**.

Display cached objects and cache statistics

You can view particular cached objects, and you can view summary statistics on cache requests, misses, and memory usage. The statistics provide insight on the amount of data that is being served from the cache, what items are responsible for the largest performance benefit, and what you can tune to improve cache performance.

This section includes the following details:

- Viewing Cached Objects
- Finding Particular Cached Responses
- Viewing Cache Statistics

View cached objects

After enabling caching, you can view details for cached objects. For example, you can view the following items:

- Response sizes and header sizes
- Status codes
- Content groups
- ETag, Last-Modified, and Cache-Control headers
- Request URLs
- Hit parameters
- Destination IP addresses
- Request and response times

To view a list of cached objects by using the command line interface

At the command prompt, type:

```
show cache object
```

Properties	Description
Response size (bytes)	The size of the response header and body.
Response header size (bytes)	The size of the header portion of the response.
Response status code	The status code sent with the response.
ETag	The ETag header inserted in the response. Typically, this header indicates whether the response has changed recently.
Last-Modified	The Last-Modified header inserted in the response. This header indicates the date that the response was last changed.
Cache-Control	The Cache-Control header inserted in the response.
Date	The Date header that indicates when the response was sent.
Contentgroup	The content group where the response is stored.
Complex match	If this object was cached based on parameterized values, this field value is YES.
Host	The host specified in the URL that requested this response.
Host port	The listen port for the host specified in the URL that requested this response
URL	The URL issued for the stored response.
Destination IP	The IP address of the server from which this response was fetched.

Properties	Description
Destination port	The listen port for the destination server.
Hit parameters	If the content group that stores the response uses hit parameters, they are listed in this field.
Hit selector	If this content group uses a hit selector, it is listed in this field.
Inval selector	If this content group uses an invalidation selector, it is listed in this field.
Selector Expressions	If this content group uses a selector, this field displays the expression that defines the selection rule.
Request time	The time in milliseconds since the request was issued.
Response time	The time in milliseconds since the cache started to receive the response.
Age	Amount of time the object has been in the cache.
Expiry	Amount of time after which the object is marked as expired.
Flushed	Whether the response has been flushed after expiry.
Prefetch	If Prefetch has been configured for this content group, the amount of time before expiry during which the object is fetched from the origin. Prefetch does not apply to negative objects (for example, 404 “object not found” responses).
Current readers	Approximately the current number of requests being served. When a response with a Content-Length header object is being downloaded, the current misses and the current readers values are each typically 1. When a chunked response object is being downloaded, the current misses value is typically 1, but the current readers value is typically 0, because the chunked response that is served to the client does not come from the integrated caching buffers.

Properties	Description
Current misses	The current number of requests that resulted in a cache miss and fetching from the origin server. This value is typically 0 or 1. If Poll Every Time is enabled for a content group, the count can be greater than 1.
Hits	The number of cache hits for this object.
Misses	The number of cache misses for this object
Compression format	The type of compression applied to this object. Compression formats include gzip, deflate, compress, and pack200-gzip.
HTTP version in response	The version of HTTP that was used to send the response.
Weak etag present in response	Strong etag headers change if the bits of an entity change. Strong headers are based on the octet values of an object. Weak etag headers change if the meaning of an entity changes. Weak etag values are based on semantic identity. Weak etags values start with a “W.”
Negative marker cell	A marker object is cacheable, but it does not yet meet all the criteria for being cached. For example, the object may exceed the maximum response size for the content group. A marker cell is created for objects of this type. The next time a user sends a request for this object, a cache miss is served.
Reason marker created	The reason a marker cell was created (for example, “Waiting for minhit,” “Content-length response data is not in group size limit”).
Auto poll every time	If the integrated cache receives an already expired 200 OK response with validators (either the Last-Modified or the ETag response headers) it stores the response and marks it as Auto-PET (automatically poll every time).
NetScaler Etag inserted in response	A variation of the ETag header generated by the NetScaler appliance. A value of YES appears if the NetScaler inserts an Etag in the response.

Properties	Description
Full response present in cache	Indicates whether this is a complete response.
Destination IP verified by DNS	Indicates whether DNS resolution was performed when storing the object.
Object stored through a cache forward proxy	Indicates whether this response was stored due to a forward proxy that is configured in the integrated cache.
Object is a Delta basefile	A response that is delta-compressed.
Waiting for minhits	Indicates whether this content group requires a minimum number of origin servers hit before caching a response.
Minhit count	If this content group requires a minimum number of origin server requests before caching an object, this field displays a count of the number of requests received so far.
HTTP Request Method	The method, GET or POST, used in the request that obtained this object.
Stored by policy	The name of the caching policy that caused this object to be stored. A value of NOT AVAILABLE indicates that the policy has been deactivated or deleted. A value of NONE indicates that the object did not match a visible policy, but was stored according to internal criteria for caching.
Application firewall metadata exists	This parameter is used when the application firewall and the integrated cache are both enabled. The application firewall analyzes the contents of a response page, stores its metadata (for example, URLs and forms contained in page), and exports the metadata with the response to the cache. The cache stores the page and the metadata, and when the cache serves the page, it sends the metadata back to the request's session.

Properties	Description
HTTP callout object, name, type, response	These cells indicate whether this data was stored as a result of an HTTP Callout expression, and provide information about various aspects of the callout and the corresponding response. For more information about HTTP callouts, see “HTTP Callouts”.

To view cached objects by using the GUI

Navigate to **Optimization > Integrated Caching > Cache Objects**. You can view all the cached objects and sort them accordingly as per your requirement.

Find particular cached responses

You can find individual items in the cache based on search criteria. There are different methods for finding cached items, depending on whether the content group that contains the data uses hit and invalidation selectors, as follows:

- If the content group uses selectors, you can only conduct the search using the Locator ID for the cached item.
- If the content group does not use selectors, you conduct the search using criteria such as URL, host, content group name.

When searching for a cached response, you can locate some items by URL and host. If the response is in a content group that uses a selector, you can find it only by using a Locator number (for example, 0x00000000ad7af0000050). To save a Locator number for later use, right-click the entry and select **Copy**. For more information about selectors, see “[Configuring Selectors and Basic Content Groups](#).”

To display cached responses in content groups that do not have a selector by using the command line interface

At the command prompt, type:

```
show cache object [-locator <positiveInteger>] | [(-url <URL> (-
host <hostName> [-port <port>] [-groupName <contentGroupName>]
[-httpMethod GET | POST ])) | [-httpStatus <positive integer>] |
-group <contentGroupName> | -ignoreMarkerObjects (ON | OFF) | -
includeNotReadyObjects (ON | OFF)]
```

To display cached responses in content groups that have a selector by using the command line interface

At the command prompt, type:

```
show cache object -locator <locatorString> MarkerObjects ( ON | OFF )
| -includeNotReadyObjects ( ON | OFF ) | [-httpStatus<positive integer
>]
```

To display cached responses in content groups that do not have a selector by using the configuration utility

Navigate to **Optimization > Integrated Caching > Cache Objects**, click Search, and set the search criteria to view the required cached response.

If you have not yet configured any content groups, all of the objects are in the Default group.

View cache statistics

The following table summarizes the detailed cache statistics that you can view.

Counter	Description
Hits	Responses that are found in and served from the integrated cache. Includes static objects such as image files, pages with status codes 200, 203, 300, 301, 302, 304, 307, 403, 404, 410, and responses that match a user-defined policy with a CACHE action.
Misses	Intercepted HTTP requests where the response was ultimately fetched from origin server.
Requests	Total cache requests plus total cache misses.
Non-304 hits	If the user requests an item more than once, and the item in the cache is unchanged since the last time the NetScaler appliance served it, the NetScaler appliance serves a 304 response instead of the cached object.
This statistic indicates how many items the NetScaler appliance served from the cache, excluding 304 responses.	
304 hits	Number of 304 (object not modified) responses the NetScaler appliance served from the cache.
304 hit ratio (%)	Percentage of 304 responses that the NetScaler appliance served, relative to other responses.

Counter	Description
Hit ratio (%)	Percentage of responses that the NetScaler appliance served from the cache (cache requests) relative to responses that could not be served from the cache.
Origin bandwidth saved (%)	An estimate of the processing capacity that the NetScaler appliance saved on the origin server due to serving responses from the cache.
Bytes served by the NetScaler	Total number of bytes that the NetScaler appliance served from the origin server and the cache.
Bytes served by cache	Total number of bytes that the NetScaler appliance served from the cache.
Byte hit ratio(%)	Percentage of data that the NetScaler appliance served from the cache, relative to all of the data in all served responses.
Compressed bytes from cache	Amount of data, in bytes, that the NetScaler appliance served in compressed form.
Storable misses	If the NetScaler appliance does not find a requested object in the cache, it fetches the object from the origin server. This is known as a cache miss. A storable cache miss can be stored in the cache.
Non-storable misses	A non-storable cache miss cannot be stored in the cache.
Misses	All cache misses.
Revalidations	Max-Age setting in a Cache-Control header determines, in number of seconds, when an intervening cache must revalidate the content with the integrated cache before serving it to the user.
For more information, see “Inserting a Cache-Control Header.”	
Successful revalidations	Number of revalidations that have been performed.
For more information, see “Inserting a Cache-Control Header.”	

Counter	Description
Conversions to conditional req	A user-agent request for a cached PET object is always converted to a conditional request and sent to the origin server.
For more information, see “Polling the Origin Server Every Time a Request Is Received.”	
Storable miss ratio (%)	Storable cache misses as a percentage of non-storable cache misses.
Successful reval ratio (%)	Successful revalidations as a percentage of all revalidation attempts.
For more information, see “Inserting a Cache-Control Header.”	
Expire at last byte	Number of times that the cache expired content immediately after receiving the last body byte. Only applicable to positive responses, as described in the table “Cache Hits and Misses.”
For more information, see “Example of Performance Optimization.”	
Flashcache misses	If you enable Flash Cache, the cache allows only one request to reach the server, eliminating flash crowds. This statistic indicates the number of Flash Cache requests that were cache misses.
For more information, “Queuing Requests to the Cache.”	
Flashcache hits	Number of Flash Cache requests that were cache hits.
For more information, see “Queuing Requests to the Cache.”	
Parameterized inval requests	Requests that match a policy with an invalidation (INVAL) action and a content group that uses an invalidation selector or parameters to selectively expire cached objects in the group.
Full inval requests	Requests that match an invalidation policy where the invalGroups parameter is configured and expires one or more content groups.
Inval requests	Requests that match an invalidation policy and result in expiration of specific cached responses or entire content groups.

Counter	Description
Parameterized requests	Number of cache requests that were processed using a policy with a parameterized content group.
Parameterized non-304 hits	Number of cache requests that were processed using a policy with a parameterized content group, where full cached response was found, and the response was not a 304 (object not updated) response.
Parameterized 304 hits	Number of cache requests that were processed using a policy with a parameterized content group, where the cached object was found, and the object was a 304 (object not updated) response.
Total parameterized hits	Number of cache requests that were processed using a policy with a parameterized content group, where the cached object was found.
Parameterized 304 hit ratio (%)	Percentage of 304 (object not updated) responses that were found using a parameterized policy, relative to all cache hits.
Poll every time requests	If Poll Every Time is enabled, the NetScaler appliance always consults the origin server before serving a stored object.
For more information, see “Polling the Origin Server Every Time a Request Is Received.”	
Poll every time hits	Number of times a cache hit was found using the Poll Every Time method.
For more information, see “Polling the Origin Server Every Time a Request Is Received.”	
Poll every time hit ratio (%)	Percentage of cache hits using the Poll Every Time method, relative to all searches for cached objects using Poll Every Time. For more information, see “Polling the Origin Server Every Time a Request Is Received.”
Maximum memory (KB)	Maximum amount of memory in the NetScaler appliance that is allocated to the cache. For more information, see “Configuring Global Attributes for Caching.”

Counter	Description
Maximum memory active value (KB)	Maximum amount of memory (active value) that will be set after the memory is allocated to the cache. For more information, see “How to Configure the Integrated Caching Feature of a NetScaler Appliance for various Scenarios.”
Utilized memory (KB)	Amount of memory that is actually being used.
Memory allocation failures	Number of failed attempts to utilize memory for the purpose of storing a response in the cache.
Largest response so far	Largest response in bytes found in either the cache or the origin server and sent to the client.
Cached objects	Number of objects in the cache, including responses that have not yet been fully downloaded and responses that have been expired but not yet flushed.
Marker objects	Marker objects are created when a response exceeds the maximum or minimum response size for the content group, or has not yet received the minimum number of hits for the content group.
Hits being served	Number of hits that have been served from the cache.
Misses being handled	Responses that were fetched from the origin server, stored in the cache, and then served. Should approximate the number for storable misses. Does not include non-storable misses.

To view summary cache statistics by using the command line interface:

At the command prompt, type:

```
stat cache
```

To view specific cache statistics by using the command line interface:

At the command prompt, type:

```
stat cache -detail
```

```
1 > stat cache -detail
2
3 Integrated Cache Statistics - Detail
```

4	Integrated Cache Statistics - Summary	
5		Rate (/s)
6		Total
7		
8	Hits	0
9	0	
10	Misses	0
11	0	
12	Requests	0
13	0	
14	Hit ratio(%)	--
15	0	
16	Origin bandwidth saved(%)	--
17	0	
17	Cached objects	--
18	0	
19	Marker objects	--
20	0	
20		Rate (/s)
21		Total
22	Requests	0
23	0	
24		
25	Hit Statistics	
26		
27		Rate (/s)
28		Total
29		
30	Non-304 hits	0
31	0	
32	304 hits	0
33	0	
34		
35	Sql hits	0
36	0	
37		
38	Hits	0
39	0	
40	304 hit ratio(%)	--
	0	

41			
42	Hit ratio(%)		--
		0	
43			
44	Origin bandwidth saved(%)		--
		0	
45	Byte Statistics		
46			Rate (/s)
			Total
47			
48			
49	Bytes served by NetScaler		648
	55379204		
50			
51	Bytes served by cache		0
		0	
52	Byte hit ratio(%)		--
		0	
53	Compressed bytes from cache		0
		0	
54			
55	Miss Statistics		
56			
57			Rate (/s)
			Total
58			
59			
60	Storable misses		0
		0	
61			
62	Non-storable misses		0
		0	
63			
64	Misses		0
		0	
65			
66	Revalidations		0
		0	
67			
68	Successful revalidations		0
		0	
69			
70	Conversions to conditional req		0
		0	
71			
72			
73	Storable miss ratio(%)		--
		0	
74	Successful reval ratio(%)		--
		0	
75			
76	Flashcache Statistics		
77			Rate (/s)

	Total
78	
79	
80 Expire at last byte	0
	0
81	
82 Flashcache misses	0
	0
83 Flashcache hits	0
	0
84	
85 Invalidation Statistics	
86	
87	Rate (/s)
	Total
88	
89 Parameterized inval requests	0
	0
90	
91	
92 Full inval requests	0
	0
93	
94	
95	
96 Inval requests	0
	0
97	
98 Parameterized Caching Statistics	
99	
100	Rate (/s)
	Total
101	
102	
103 Parameterized requests	0
	0
104	
105 Parameterized non-304 hits	0
	0
106	
107 Parameterized 304 hits	0
	0
108	
109	
110 Total parameterized hits	0
	0
111	
112 Parameterized 304 hit ratio(%)	--
	0
113	
114 Poll Every Time (PET) Statistics	
115	
116	Rate (/s)

		Total
117		
118		
119	Poll every time requests	0
		0
120		
121	Poll every time hits	0
		0
122		
123	Poll every time hit ratio(%)	--
		0
124		
125	Memory Usage Statistics	
126		Total
127		
128	Maximum memory(KB)	0
129		
130	Maximum memory active value(KB)	0
131		
132	Utilized memory(KB)	0
133		
134	Memory allocation failures	0
135		
136	Largest response so far(B)	0
137		
138	Cached objects	0
139		
140	Marker objects	0
141		
142	Hits being served	0
143	Misses being handled	0
144	Done	

To view summary cache statistics by using the GUI

1. Click the **Dashboard** tab at the top of the page.
2. Scroll down to the **Integrated Caching** section of the window.
3. To see detailed statistics, click the More...link at the bottom of the table.

To view specific cache statistics by using the GUI

1. Click the **Reporting** tab at the top of the page.
2. Under Built-In Reports, expand **Integrated Cache**, and then click the report with the statistics you want to view.
3. To save the report as a template, click **Save As** and name the report. The saved report appears under **Custom** Reports.

Display cached objects and cache statistics

May 2, 2023

You can view particular cached objects, and you can view summary statistics on cache hits, misses, and memory usage. The statistics provide insight on the amount of data that is being served from the cache, what items are responsible for the largest performance benefit, and what you can tune to improve cache performance.

This section includes the following details:

- Viewing Cached Objects
- Finding Particular Cached Responses
- Viewing Cache Statistics

View cached objects

After enabling caching, you can view details for cached objects. For example, you can view the following items:

- Response sizes and header sizes
- Status codes
- Content groups
- ETag, Last-Modified, and Cache-Control headers
- Request URLs
- Hit parameters
- Destination IP addresses
- Request and response times

To view a list of cached objects by using the command line interface

At the command prompt, type:

```
show cache object
```

Properties	Specification
Response size (bytes)	The size of the response header and body.
Response header size (bytes)	The size of the header portion of the response.
Response status code	The status code sent with the response.

Properties	Specification
ETag	The ETag header inserted in the response. Typically, this header indicates whether the response has changed recently.
Last-Modified	The Last-Modified header inserted in the response. This header indicates the date that the response was last changed.
Cache-Control	The Cache-Control header inserted in the response.
Date	The Date header that indicates when the response was sent.
Contentgroup	The content group where the response is stored.
Complex match	If this object was cached based on parameterized values, this field value is YES.
Host	The host specified in the URL that requested this response.
Host port	The listen port for the host specified in the URL that requested this response
URL	The URL issued for the stored response.
Destination IP	The IP address of the server from which this response was fetched.
Destination port	The listen port for the destination server.
Hit parameters	If the content group that stores the response uses hit parameters, they are listed in this field.
Hit selector	If this content group uses a hit selector, it is listed in this field.
Inval selector	If this content group uses an invalidation selector, it is listed in this field.
Selector Expressions	If this content group uses a selector, this field displays the expression that defines the selection rule.
Request time	The time in milliseconds since the request was issued.
Response time	The time in milliseconds since the cache started to receive the response.
Age	Amount of time the object has been in the cache.

Properties	Specification
Expiry	Amount of time after which the object is marked as expired.
Flushed	Whether the response has been flushed after expiry.
Prefetch	If Prefetch has been configured for this content group, the amount of time before expiry during which the object is fetched from the origin. Prefetch does not apply to negative objects (for example, 404 “object not found” responses).
Current readers	Approximately the current number of hits being served. When a response with a Content-Length header object is being downloaded, the current misses and the current readers values are each typically 1. When a chunked response object is being downloaded, the current misses value is typically 1, but the current readers value is typically 0, because the chunked response that is served to the client does not come from the integrated caching buffers.
Current misses	The current number of requests that resulted in a cache miss and fetching from the origin server. This value is typically 0 or 1. If Poll Every Time is enabled for a content group, the count can be greater than 1.
Hits	The number of cache hits for this object.
Misses	The number of cache misses for this object.
Compression format	The type of compression applied to this object. Compression formats include gzip, deflate, compress, and pack200-gzip.
HTTP version in response	The version of HTTP that was used to send the response.

Properties	Specification
Weak etag present in response	Strong etag headers change if the bits of an entity change. Strong headers are based on the octet values of an object. Weak etag headers change if the meaning of an entity changes. Weak etag values are based on semantic identity. Weak etags values start with a “W.”
Negative marker cell	A marker object is cacheable, but it does not yet meet all the criteria for being cached. For example, the object may exceed the maximum response size for the content group. A marker cell is created for objects of this type. The next time a user sends a request for this object, a cache miss is served.
Reason marker created	The reason a marker cell was created (for example, “Waiting for minhit,” “Content-length response data is not in group size limit”).
Auto poll every time	If the integrated cache receives an already expired 200 OK response with validators (either the Last-Modified or the ETag response headers) it stores the response and marks it as Auto-PET (automatically poll every time).
NetScaler Etag inserted in response	A variation of the ETag header generated by the NetScaler appliance. A value of YES appears if the NetScaler inserts an Etag in the response.
Full response present in cache	Indicates whether this is a complete response.
Destination IP verified by DNS	Indicates whether DNS resolution was performed when storing the object.
Object stored through a cache forward proxy	Indicates whether this response was stored due to a forward proxy that is configured in the integrated cache.
Object is a Delta basefile	A response that is delta-compressed.
Waiting for minhits	Indicates whether this content group requires a minimum number of origin servers hit before caching a response.

Properties	Specification
Minhit count	If this content group requires a minimum number of origin servers hit before caching an object, this field displays a count of the number of hits received so far.
HTTP Request Method	The method, GET or POST, used in the request that obtained this object.
Stored by policy	The name of the caching policy that caused this object to be stored. A value of NOT AVAILABLE indicates that the policy has been deactivated or deleted. A value of NONE indicates that the object did not match a visible policy, but was stored according to internal criteria for caching.
Application firewall metadata exists	This parameter is used when the application firewall and the integrated cache are both enabled. The application firewall analyzes the contents of a response page, stores its metadata (for example, URLs and forms contained in page), and exports the metadata with the response to the cache. The cache stores the page and the metadata, and when the cache serves the page, it sends the metadata back to the request's session.
HTTP callout object, name, type, response	These cells indicate whether this data was stored as a result of an HTTP Callout expression, and provide information about various aspects of the callout and the corresponding response. For more information about HTTP callouts, see "HTTP Callouts".

Find particular cached responses

You can find individual items in the cache based on search criteria. There are different methods for finding cached items, depending on whether the content group that contains the data uses hit and invalidation selectors, as follows:

If the content group uses selectors, you can only conduct the search using the Locator ID for the cached item.

If the content group does not use selectors, you conduct the search using criteria such as URL, host, content group name.

When searching for a cached response, you can locate some items by URL and host. If the response is in a content group that uses a selector, you can find it only by using a Locator number (for example, 0x0000000ad7af0000050). To save a Locator number for later use, right-click the entry and select Copy. For more information about selectors, see “Configuring Selectors and Basic Content Groups.”

To display cached responses in content groups that do not have a selector by using the command line interface

At the command prompt, type:

```
show cache object [-locator <positiveInteger>] | [(-url <URL> (-host <hostName> [-port <port>] [-groupName <contentGroupName>] [-httpMethod GET | POST ])) | [-httpStatus<positive integer>] | -group <contentGroupName> | -ignoreMarkerObjects (ON | OFF) | -includeNotReadyObjects (ON | OFF)]
```

To display cached responses in content groups that have a selector by using the command line interface

At the command prompt, type:

```
show cache object -locator <locatorString> MarkerObjects ( ON | OFF ) | -includeNotReadyObjects ( ON | OFF ) | [-httpStatus<positive integer>]
```

To display cached responses in content groups that do not have a selector by using the GUI

Navigate to **Optimization > Integrated Caching > Cache Objects**, click **Search**, and set the search criteria to view the required cached response.

If you have not yet configured any content groups, all of the objects are in the Default group.

To display cached responses in content groups that have a selector by using the GUI

Navigate to **Optimization > Integrated Caching > Cache Objects**, click **Search**, and set the selector search criteria to view the required cached response.

View cache statistics

The following table summarizes the cache statistics.

Counter

Specification

Viewing cache statistics

Updated: 2013-10-28

The following table summarizes the detailed cache statistics that you can view.

Counter	Specifies
Hits	Responses that are found in and served from the integrated cache. Includes static objects such as image files, pages with status codes 200, 203, 300, 301, 302, 304, 307, 403, 404, 410, and responses that match a user-defined policy with a CACHE action..
Misses	Intercepted HTTP requests where the response was ultimately fetched from origin server.
Requests	Total cache hits plus total cache misses.
Non-304 hits	If the user requests an item more than once, and the item in the cache is unchanged since the last time the NetScaler appliance served it, the NetScaler appliance serves a 304 response instead of the cached object. This statistic indicates how many items the NetScaler appliance served from the cache, excluding 304 responses.
304 hits	Number of 304 (object not modified) responses the NetScaler appliance served from the cache.
304 hit ratio (%)	Percentage of 304 responses that the NetScaler appliance served, relative to other responses.
Hit ratio (%)	Percentage of responses that the NetScaler appliance served from the cache (cache hits) relative to responses that could not be served from the cache.
Origin bandwidth saved (%)	An estimate of the processing capacity that the NetScaler appliance saved on the origin server due to serving responses from the cache.
Bytes served by the NetScaler	Total number of bytes that the NetScaler appliance served from the origin server and the cache.

Counter	Specifies
Bytes served by cache	Total number of bytes that the NetScaler appliance served from the cache.
Byte hit ratio(%)	Percentage of data that the NetScaler appliance served from the cache, relative to all of the data in all served responses.
Compressed bytes from cache	Amount of data, in bytes, that the NetScaler appliance served in compressed form.
Storable misses	If the NetScaler appliance does not find a requested object in the cache, it fetches the object from the origin server. This is known as a cache miss. A storable cache miss can be stored in the cache.
Non-storable misses	A non-storable cache miss cannot be stored in the cache.
Misses	All cache misses.
Revalidations	Max-Age setting in a Cache-Control header determines, in number of seconds, when an intervening cache must revalidate the content with the integrated cache before serving it to the user. For more information, see “Inserting a Cache-Control Header.”
Successful revalidations	Number of revalidations that have been performed. For more information, see “Inserting a Cache-Control Header.”
Conversions to conditional req	A user-agent request for a cached PET object is always converted to a conditional request and sent to the origin server. For more information, see “Polling the Origin Server Every Time a Request Is Received.”
Storable miss ratio (%)	Storable cache misses as a percentage of non-storable cache misses.
Successful reval ratio (%)	Successful revalidations as a percentage of all revalidation attempts. For more information, see “Inserting a Cache-Control Header.”

Counter	Specifies
Expire at last byte	Number of times that the cache expired content immediately after receiving the last body byte. Only applicable to positive responses, as described in the table “Cache Hits and Misses.” For more information, see “Example of Performance Optimization.”
Flash cache misses	If you enable Flash Cache, the cache allows only one request to reach the server, eliminating flash crowds. This statistic indicates the number of Flash Cache requests that were cache misses. For more information, “Queuing Requests to the Cache.”
Flashcache hits	Number of Flash Cache requests that were cache hits. For more information, see “Queuing Requests to the Cache.”
Parameterized inval requests	Requests that match a policy with an invalidation (INVAL) action and a content group that uses an invalidation selector or parameters to selectively expire cached objects in the group.
Full inval requests	Requests that match an invalidation policy where the invalGroups parameter is configured and expires one or more content groups.
Inval requests	Requests that match an invalidation policy and result in expiration of specific cached responses or entire content groups.
Parameterized requests	Number of cache requests that were processed using a policy with a parameterized content group.
Parameterized non-304 hits	Number of cache requests that were processed using a policy with a parameterized content group, where full cached response was found, and the response was not a 304 (object not updated) response.

Counter	Specifies
Parameterized 304 hits	Number of cache requests that were processed using a policy with a parameterized content group, where the cached object was found, and the object was a 304 (object not updated) response.
Total parameterized hits	Number of cache requests that were processed using a policy with a parameterized content group, where the cached object was found.
Parameterized 304 hit ratio (%)	Percentage of 304 (object not updated) responses that were found using a parameterized policy, relative to all cache hits.
Poll every time requests	If Poll Every Time is enabled, the NetScaler appliance always consults the origin server before serving a stored object. For more information, see “Polling the Origin Server Every Time a Request Is Received.”
Poll every time hits	Number of times a cache hit was found using the Poll Every Time method. For more information, see “Polling the Origin Server Every Time a Request Is Received.”
Poll every time hit ratio (%)	Percentage of cache hits using the Poll Every Time method, relative to all searches for cached objects using Poll Every Time. For more information, see “Polling the Origin Server Every Time a Request Is Received.”
Maximum memory (KB)	Maximum amount of memory in the NetScaler appliance that is allocated to the cache. For more information, see “Configuring Global Attributes for Caching.”
Maximum memory active value (KB)	Maximum amount of memory (active value) that will be set after the memory is actually allocated to the cache. For more information, see “How to Configure the Integrated Caching Feature of a NetScaler Appliance for various Scenarios.”
Utilized memory (KB)	Amount of memory that is actually being used.
Memory allocation failures	Number of failed attempts to utilize memory for the purpose of storing a response in the cache.

Counter	Specifies
Largest response so far	Largest response in bytes found in either the cache or the origin server and sent to the client.
Cached objects	Number of objects in the cache, including responses that have not yet been fully downloaded and responses that have been expired but not yet flushed.
Marker objects	Marker objects are created when a response exceeds the maximum or minimum response size for the content group, or has not yet received the minimum number of hits for the content group.
Hits being served	Number of hits that have been served from the cache.
Misses being handled	Responses that were fetched from the origin server, stored in the cache, and then served. Should approximate the number for storable misses. Does not include non-storable misses.

To view summary cache statistics by using the command line interface

At the command prompt, type:

```
stat cache
```

To view specific cache statistics by using the command line interface

At the command prompt, type:

```

1 stat cache -detail
2
3 > stat cache -detail
4 Integrated Cache Statistics - Detail
5 Integrated Cache Statistics - Summary
6
7 Hits                                0          Rate (/s)
8 Misses                              0          Total
9 Requests                            0          0
10 Hit ratio(%)                        0          --
11 Origin bandwidth saved(%)           0          --

```


12	Cached objects		--
		0	
13	Marker objects		--
		0	
14			Rate (/s)
			Total
15	Requests		0
		0	
16	Hit Statistics		
17			Rate (/s)
			Total
18	Non-304 hits		0
		0	
19	304 hits		0
		0	
20	Sql hits		0
		0	
21	Hits		0
		0	
22	304 hit ratio(%)		--
		0	
23	Hit ratio(%)		--
		0	
24	Origin bandwidth saved(%)		--
		0	
25			
26	Byte Statistics		
27			Rate (/s)
			Total
28	Bytes served by NetScaler		648
	55379204		
29	Bytes served by cache		0
		0	
30	Byte hit ratio(%)		--
		0	
31	Compressed bytes from cache		0
		0	
32	Miss Statistics		
33			Rate (/s)
			Total
34	Storable misses		0
		0	
35	Non-storable misses		0
		0	
36	Misses		0
		0	
37	Revalidations		0
		0	
38	Successful revalidations		0
		0	
39	Conversions to conditional req		0
		0	
40	Storable miss ratio(%)		--

41	Successful reval ratio(%)	0	--
		0	
42	Flashcache Statistics		
43			Rate (/s)
			Total
44	Expire at last byte	0	0
		0	
45	Flashcache misses	0	0
		0	
46	Flashcache hits	0	0
		0	
47			
48	Invalidation Statistics		
49			Rate (/s)
			Total
50	Parameterized inval requests	0	0
		0	
51	Full inval requests	0	0
		0	
52	Inval requests	0	0
		0	
53			
54	Parameterized Caching Statistics		
55			Rate (/s)
			Total
56	Parameterized requests	0	0
		0	
57	Parameterized non-304 hits	0	0
		0	
58	Parameterized 304 hits	0	0
		0	
59	Total parameterized hits	0	0
		0	
60	Parameterized 304 hit ratio(%)	0	--
		0	
61			
62	Poll Every Time (PET) Statistics		
63			Rate (/s)
			Total
64	Poll every time requests	0	0
		0	
65	Poll every time hits	0	0
		0	
66	Poll every time hit ratio(%)	0	--
		0	
67	Memory Usage Statistics		
68			Total
69	Maximum memory(KB)	0	0
70	Maximum memory active value(KB)	0	0
71	Utilized memory(KB)	0	0
72	Memory allocation failures	0	0
73	Largest response so far(B)	0	0

74	Cached objects	0
75	Marker objects	0
76	Hits being served	0
77	Misses being handled	0
78	Done	

To view summary cache statistics by using the GUI

1. Click the **Dashboard** tab at the top of the page.
2. Scroll down to the Integrated Caching section of the window.
3. To see detailed statistics, click the More...link at the bottom of the table.

To view specific cache statistics by using the GUI

1. Click the Reporting tab at the top of the page.
2. Under Built-In Reports, expand Integrated Cache, and then click the report with the statistics you want to view.
3. To save the report as a template, click Save As and name the report. The saved report appears under Custom Reports.

Improve cache performance

May 2, 2023

You can improve the performance of the integrated cache, including handling simultaneous requests for the same cached data, avoiding delays that are associated with refreshing cached responses from the origin server, and ensuring that a response is requested often enough to be worth caching.

Reduce flash crowds

Flash crowds occur when many users simultaneously request the same data. The requests in a flash crowd can become cache misses if you configured the cache to serve hits only after the entire object is downloaded.

The following techniques can reduce or eliminate flash crowds:

- **PREFETCH:** Refreshes a positive response before it expires to ensure that it never becomes stale or inactive. For more information, see “Refreshing a Response Prior to Expiration” section.
- **Cache buffering:** Starts serving a response to multiple clients when it receives the response header from the origin server, rather than waiting for the entire response to be downloaded. The only limit on the number of clients that can download a response simultaneously is the available system resources. The NetScaler appliance downloads and serves responses even if

the client that initiated the download halts before the download is complete. If the response exceeds the cache size or if the response is chunked, the cache stops storing the response, but service to the clients is not disrupted.

- **Flash Cache:** Flash Cache queues requests to the cache, and allows only one request to reach the server at a time.

For more information, see “Queuing Requests to the Cache” section.

Refresh a response before expiration

To ensure that a cached response is fresh whenever it is needed, the PREFETCH option refreshes a response before its calculated expiration time. The prefetch interval is calculated after receiving the first client request. From that point onward, the NetScaler appliance refreshes the cached response at a time interval that you configure in the PREFETCH parameter.

This setting is useful for data that is updated frequently between requests. It does not apply to negative responses (for example, 404 messages).

To configure prefetch for a content group by using the command line interface

At the command prompt, type:

```
set cache contentgroup <name> -prefetch YES [-prefetchPeriod <seconds>
> | -prefetchPeriodMilliSec <milliseconds>] [-prefetchMaxPending <
positiveInteger>]
```

*To configure prefetch for a content group by using the GUI

Navigate to **Optimization > Integrated Caching > Content Groups**, and select the **content group**.

On **Others** tab, in the Flash Crowd and Prefetch group, select **Prefetch** option, and specify the values in the Interval and Maximum number of pending prefetches text boxes.

Queue requests to the cache

The Flash Cache option queues requests that arrive simultaneously (a flash crowd), retrieves the response, and distributes it to all the clients whose requests are in the queue. If, during this process, the response becomes non-cacheable, the NetScaler appliance stops serving the response from the cache and instead serves the origin server’s response to the queued clients. If the response is not available, the clients receive an error message.

Flash Cache is disabled by default. You cannot enable Poll Every Time (PET) and Flash Cache on the same content group.

One disadvantage of Flash Cache is if the server replies with an error (for example, a 404 that is quickly remedied), the error is fanned out to the waiting clients.

Note:

If Flash Cache is enabled, in some situations the NetScaler appliance is unable to correctly match the Accept-Encoding header in the client request with the Content-Encoding header in the response. The NetScaler appliance can assume that these headers match and mistakenly serve a hit. As a work-around, you can configure Integrated Caching policies to disallow serving hits to clients that do not have an appropriate Accept-Encoding header.

To enable Flash Cache by using the command line interface

At the command prompt, type:

```
set cache contentgroup <contentGroupName> -flashcache yes
```

To enable Flash Cache by using the GUI

Navigate to **Optimization > Integrated Caching > Content Groups**, and select the content group.

On **Others** tab, in the Flash Crowd and Prefetch group, select **Prefetch** option.

Cache a response after a client halts a download

You can set the Quick Abort parameter to continue caching a response, even if the client halts a request before the response is in the cache.

If the downloaded response size is less than or equal to the Quick Abort size, the NetScaler appliance stops downloading the response. If you set the Quick Abort parameter to 0, all downloads are halted.

To configure quick abort size by using the command line interface

At the command prompt, type:

```
set cache contentgroup <name> -quickAbortSize <integerInKBytes>
```

To configure quick abort size by using the GUI

1. Navigate to **Optimization > Integrated Caching > Content Groups**, and select the content group.
2. On **Memory** tab, set the relevant value in Quick Abort: Continue caching if more than text box.

Requiring a minimum number of server hits before caching

You can configure the minimum number of times that a response must be found on the origin server before it can be cached. You must consider increasing the minimum hits if the cache memory fills up quickly and has a lower-than-expected hit ratio.

The default value for the minimum number of hits is 0. This value caches the response after the first request.

To configure the minimum number of hits that are required before caching by using the command line interface

At the command prompt, type:

```
set cache contentgroup <name> -minhits <positiveInteger>
```

To configure the minimum number of hits that are required before caching by using the GUI

1. Navigate to **Optimization > Integrated Caching > Content Groups**, and select the content group.
2. On **Memory** tab, set the relevant value in Do not cache, if hits are less than the text box.

Example for performance optimization

In this example, a client accesses a stock quote. Stock quotes are highly dynamic. You configure the integrated cache to serve the same stock quote to concurrent clients without sending multiple requests to the origin server. The stock quote expires after it is downloaded to the clients, and the next request is fetched from the origin server. This ensures that the quote is always up to date.

The following task overview describes the steps to configure the cache for the stock quote application.

Configure caching for a stock quote application

Create a content group for stock quotes

For more information, see “About Content Groups.”

Configure the following for this content group:

1. On the **Expiry Method** tab, select the Expire after complete response received check box.
2. On the **Others** tab, select the **Flash Cache** check box, and click **Create**.
3. Add a cache policy to cache the stock quotes.

For more information, see “Configuring a Policy in the Integrated Cache.”

Configure the following for the policy

1. In the **Action and Store in Group lists**, select **CACHE** and select the group that you defined in the previous step.
2. Click **Add**, and in the **Add Expression** dialog box configure an expression that identifies stock quote requests, for example: `http.req.url.contains(“cgi-bin/stock-quote.pl”)`
3. Activate the policy.

For more information, see “Globally Binding an Integrated Caching Policy.” In this example, you bind this policy to request-time override processing and set the priority to a low value.

Configure cookies, headers, and polling

November 2, 2023

This topic explains how to configure cache manages cookies, HTTP headers, and origin server polling. This includes modifying the default behavior that causes the cache to diverge from documented standards, overriding HTTP headers that might cause cacheable content to not be stored in the cache, and configuring cache to always poll the origin for updated content.

Divergence of cache behavior from the standards

By default, the integrated cache adheres to the following RFC standards:

- RFC 2616, “HTTP HTTP/1.1”
- The caching behaviors described in RFC 2617, “HTTP Authentication: Basic and Digest Access Authentication”
- The caching behavior described in RFC 2965, “HTTP State Management Mechanism”

The built-in policies and the Default content group attributes ensure conformance with most of these standards.

The default integrated cache behavior diverges from the specification as follows:

- There is a limited support for the Vary header. By default, any response containing a Vary header is considered to be non-cacheable unless it is compressed. A compressed response contains content-encoding: gzip, content-encoding: deflate, or content-encoding: pack200-gzip and is cacheable even if it contains the Vary: Accept-encoding header.
- The integrated cache ignores the values of the headers cache-control: no-cache and cache-control: private. For example, a response that contains cache-control: no-cache="Set-Cookie" is treated as if the response contained Cache-Control: no-cache. By default, the response is not cached.
- An image (content-type = image/*) is always considered cacheable, even if an image response contains set-cookie or set-cookie2 headers, or if an image request contains a cookie header. The integrated cache removes set-cookie and set-cookie2 headers from a response before caching it. This diverges from RFC 2965. You can configure RFC-compliant behavior as follows:

```
1 add cache policy rfc_compliant_images_policy -rule "http.res.header.set
  -cookie2.exists || http.res.header.set-cookie.exists" -action
  NOCACHE
2
3
4 bind cache global rfc_compliant_images_policy -priority 100 -type REQ\
  _OVERRIDE
```

- The following cache-control headers in a request force an RFC-compliant cache to reload a cached response from the origin server:

Cache-control: max-age=0

Cache-control: no-cache

To guard against denial-of-service attacks, this behavior is not the default.

- By default, the caching module considers a response to be cacheable unless a response header state otherwise. To make this behavior RFC 2616 compliant, set `-weakPosRelExpiry` and `-weakNegResExpiry` to 0 for all content groups.

Remove cookies from a response

Cookies are often personalized for a user, and typically should not be cached. The `Remove Response Cookies` parameter removes `Set-Cookie` and `Set-Cookie2` headers before caching a response. By default, the `Remove Response Cookies` option for a content group prevents caching of responses with `Set-Cookie` or `Set-Cookie2` headers.

Note:

When images are cached, the built-in behavior is to remove the `Set-Cookie` and `Set-Cookie2` headers before caching, no matter how the content group is configured.

Citrix recommends that you accept the default `Remove Response Cookies` for every content group that stores embedded responses, for example, images.

To configure `Remove Response Cookies` for a content group by using the command line interface:

At the command prompt, type:

```
set cache contentgroup <name> -removeCookies YES
```

Configure Remove Response Cookies for a content group by using the NetScaler GUI

1. Navigate to **Optimization > Integrated Caching > Content Groups**, and select the content group.
2. On **Others** tab, in the **Settings** group, select Remove response cookies option.

Inserting HTTP headers at response time

The integrated cache can insert HTTP headers in responses that result from cache requests. The NetScaler appliance does not alter headers in responses that result from cache misses.

The following table describes headers that you can insert in a response.

Header	Specification
Age	Provides the age of the response in seconds, calculated from the time the response was generated at the origin server. By default, the cache inserts an Age header for every response that is served from the cache.
via	Lists protocols and recipients between the start and end points for a request or a response. The NetScaler appliance inserts a Via header in every response that it serves from the cache. The default value of the inserted header is <code>NS-CACHE-10.0</code> : last octet of the NetScaler IP address."For more information, see "Configuring Global Attributes for Caching."

Header**Specification**

Tag

The cache supports response validation using Last-Modified and [Tag](#) headers to determine if a response is stale. The cache inserts an [Tag](#) in a response only if it caches the response and the origin server has not inserted its own [Tag](#) header. The [Tag](#) value is an arbitrary unique number. The [Tag](#) value for a response changes if it is refreshed from the origin server, but it stays the same if the server sends a 304 (object not updated) response. Origin servers typically do not generate validators for dynamic content because dynamic content is considered non-cacheable. You can override this behavior. With [Tag](#) header insertion, the cache is permitted to not serve full responses. Instead, the user agent is required to cache the dynamic response sent by the integrated cache the first time. To force a user agent to cache a response, you configure the integrated cache to insert an [Tag](#) header and replace the origin-provided Cache-Control header.

Cache-Control

The NetScaler appliance typically does not modify cacheability headers in responses that it serves from the origin server. If the origin server sends a response that is labeled as non-cacheable, the client treats the response as non-cacheable even if the NetScaler appliance caches the response. To cache dynamic responses in a user agent, you can replace Cache-Control headers from the origin server. This applies only to user agents and other intervening caches. They do not affect the integrated cache.

Header	Specification
Age	Provides the age of the response in seconds, calculated from the time the response was generated at the origin server. By default, the cache inserts an Age header for every response that is served from the cache.
via	Lists protocols and recipients between the start and end points for a request or a response. The NetScaler appliance inserts a Via header in every response that it serves from the cache. The default value of the inserted header is “NS-CACHE-9.2: last octet of the NetScaler IP address.” For more information, see “Configuring Global Attributes for Caching.”
Tag	The cache supports response validation using the Last-Modified and Tag headers to determine if a response is stale. The cache inserts an Tag in a response only if it caches the response and the origin server has not inserted its own Tag header. The Tag value is an arbitrary unique number. The Tag value for a response changes if it is refreshed from the origin server, but it stays the same if the server sends a 304 (object not updated) response. Origin servers typically do not generate validators for dynamic content because dynamic content is considered non-cacheable. You can override this behavior. With Tag header insertion, the cache is permitted to not serve full responses. Instead, the user agent is required to cache the dynamic response sent by the integrated cache the first time. To force a user agent to cache a response, you configure the integrated cache to insert an Tag header and replace the origin-provided Cache-Control header.

Header	Specification
Cache-Control	The NetScaler appliance typically does not modify cacheability headers in responses that is serves from the origin server. If the origin server sends a response that is labeled as non-cacheable, the client treats the response as non-cacheable even if the NetScaler appliance caches the response. To cache dynamic responses in a user agent, you can replace Cache-Control headers from the origin server. This applies only to user agents and other intervening caches. They do not affect the integrated cache.

Insert an age, via, or Tag header

The following procedures describe how to insert Age, Via, and ETag headers.

Insert an Age, Via, or Etag header by using the NetScaler command interface:

At the command prompt, type:

```
set cache contentgroup <name> -insertVia YES -insertAge YES -insertETag YES
```

Configure the Age, Via, or Etag header by using the NetScaler GUI

1. Navigate to **Optimization > Integrated Caching > Content Groups**, and select the **content group**.
2. On the **Others** tab, in the HTTP Header Insertions group, select the **Via, Age, or ETag** options, as appropriate.
3. The values for the other header types are calculated automatically. You configure the Via value in the main settings for the cache.

Insert a cache-control header

When the integrated cache replaces a Cache-Control header that the origin server inserted, it also replaces the Expires header. The new Expires header contains an expiration time in the past. This ensures that HTTP/1.0 clients and caches (that do not understand the Cache-Control header) do not cache the content.

Insert a cache-control header by using the NetScaler command interface

At the command prompt, type:

```
set cache contentgroup <name> -cacheControl <value>
```

Insert a cache-control header by using the NetScaler GUI

1. Navigate to **Optimization > Integrated Caching > Content Groups**, and
 - a) Click the **Expiry Method** tab, clear the heuristic and default expiry settings and set the relevant value in the Expire content after text box.
 - b) Click **Others** tab and type the header you want to insert in the Cache-Control text box. Alternatively, click Configure to set the Cache-Control directives in cached responses.

Ignore cache-control and pragma headers in requests

By default, the caching module processes Cache-Control and Pragma headers. The following tokens in the Cache-Control headers are processed as described in RFC 2616.

- max-age
- max-stale
- only-if-cached
- no-cache

A Pragma: no-cache header in a request is treated in the same way as a Cache-Control: no-cache header.

If you configure the caching module to ignore the Cache-Control and Pragma headers, a request that contains a Cache-Control: No-Cache header causes the NetScaler appliance to retrieve the response from the origin server, but the cached response is not updated. If the caching module processes the Cache-Control and Pragma headers, the cached response is refreshed.

The following table summarizes the implications of various settings for these headers and the Ignore Browser's Reload Request setting.

Setting for Ignore

Cache-Control and Pragma Headers	Setting for Ignore Browser's Reload Request	Outcome
Yes	Yes or No	Ignore the Cache-Control and Pragma headers from the client, including the Cache-Control: no-cache directive.
No	Yes	The Cache-Control: no-cache header produces a cache miss, but a response that is already in the cache is not refreshed.
No	No	A request that contains a Cache-Control: no-cache header causes a cache miss and the stored response is refreshed.

To ignore Cache-Control and Pragma headers in a request by using the command line interface

At the command prompt, type:

```
set cache contentgroup <name> -ignoreReqCachingHdrs YES
```

To ignore browser reload requests by using the command line interface

At the command prompt, type:

```
set cache contentgroup <name> -ignoreReloadReq NO
```

Note:

By default, the -ignoreReloadReq parameter is set to YES.

Ignore Cache-Control and Pragma headers in a request by using the GUI

1. Navigate to **Optimization > Integrated Caching > Content Groups**, and select the content group.
2. On the **Others** tab, in the **Settings** group, select **Ignore Cache-control and Pragma Headers** in the **Requests** option.

Example of a policy to ignore Cache-Control headers:

In the following example, you configure a request-time override policy to cache responses that contain Content-type: image/* regardless of the Cache-Control header in the response.

To configure a request-time override policy to cache all responses with image/*

Flush the cache using the Invalidate All option.

Configure a new cache policy, and direct the policy to a particular content group. For more information, see “Configuring a Policy in the Integrated Cache.”

Ensure the content group that the policy uses is configured to ignore Cache-Control headers, as described in “Ignoring Cache-Control and Pragma Headers in Requests.”

Bind the policy to the request-time override policy bank.

For more information, see [Globally Binding an Integrated Caching Policy](#) topic.

Poll origin server every time a request is received

You can configure the NetScaler appliance to always consult the origin server before serving a stored response. This is known as Poll Every Time (PET). When the NetScaler appliance consults the origin server and the PET response has not expired, a full response from the origin server does not overwrite cached content. This property is useful when serving client-specific content.

After a PET response expires, the NetScaler appliance refreshes it when the first full response arrives from the origin server.

The Poll Every Time (PET) function works as follows:

For a cached response that has validators in the form of a Tag or a Last-Modified header, if the response expires it is automatically marked PET and cached.

You can configure PET for a content group.

If you configure a content group as PET, every response in the content group is marked PET. The PET content group can store responses that do not have validators. Responses that are automatically marked PET are always expired. Responses that belong to a PET content group can expire after a delay, based on how you configure the content group.

Two types of requests are affected by polling:

- **Conditional Requests:** A client issues a conditional request to ensure that the response that it has is the most recent copy. A user-agent request for a cached PET response is always converted to a conditional request and sent to the origin server. A conditional request has validators in the [If-Modified-Since](#) or [If-None-Match](#) headers. The [If-Modified-Since](#) header contains the time from the [Last-Modified](#) header. An [If-None-Match](#) header contains the response’s Tag header value. If the client’s copy of the response is fresh, the origin server replies with 304 Not Modified. If the copy is stale, a conditional response generates a 200 OK that contains the entire response.

- **Non-Conditional Requests:** A non-conditional request can only generate a 200 OK that contains the entire response.

Origin Server Response	Action
Send the full response	The origin server sends the response as-is to the client. If the cached response has expired, it is refreshed.
304 Not Modified	The following header values in the 304 response are merged with the cached response and the cached response is served to the client: Date, Expires, Age, Cache-Control header Max-Age, and S-Maxage tokens
401 Unauthorized; 400 Bad Request; 405 Method Not Allowed; 406 Not Acceptable; 407 Proxy Authentication Required	The origin's response is served as-is to the client. The cached response is not changed.
Any other error response, for example, 404 Not Found	The origin's response is served as-is to the client. The cached response is removed.

Note:

The Poll Every Time parameter treats the affected responses as non-storable.

To configure poll every time by using the command line interface

At the command prompt, type:

```
add cache contentgroup <contentGroupName> -pollEveryTime YES
```

Poll by using the GUI

1. Navigate to **Optimization > Integrated Caching > Content Groups**, and select the content group.
2. On the **Others** tab, in the Settings group, select **Poll every time (validate cached content with origin for every request)** option.

PET and client-specific content

The PET function can ensure that content is customized for a client. For example, a website that serves content in multiple languages examines the Accept-Language request header to select the language for the content that it is serving. For a multi-language website where English is the predominant language, all English language content can be cached in a PET content group. This ensures that every

request goes to the origin server to determine the language for the response. If the response is English, and the content has not changed, the origin server can serve a 304 Not Modified to the cache.

The following example shows commands to cache English responses in a PET content group, configure a named expression that identifies English responses in the cache, and configure a policy that uses this content group and named expression. Bold is used for emphasis:

```
1 add cache contentgroup EnglishLanguageGroup -pollEveryTime YES
2 add expression containsENExpression -rule "http.res.header(\\\"Content-
  Language\\\")\".contains(\\\"en\\\")"
3 add cache policy englishPolicy -rule containsENExpression -action CACHE
  -storeInGroup englishLanguageGroup
4 bind cache policy englishPolicy -priority 100 -precedeDefRules NO
```

PET and authentication, authorization, and auditing

Outlook Web Access (OWA) is a good example of dynamically generated content that benefits from PET. All mail responses (*.EML objects) have an **ETag** validator that enables them to be stored as PET responses.

Every request for a mail response travels to the origin server, even if the response is cached. The origin server determines whether the requestor is authenticated and authorized. It also verifies that the response exists in the origin server. If all results are positive, the origin server sends a 304 Not Modified response.

Configure integrated cache as a forward proxy

May 2, 2023

The integrated cache can service as a forward proxy device that passes requests to other NetScaler appliances or to other types of cache servers. You configure the integrated cache as a forward proxy by identifying the IP addresses of the cache server or servers. After configuring the forward proxy, the NetScaler appliance sends requests that contain the configured IP address on to the cache server instead of involving the integrated cache.

To configure the NetScaler as a forward cache proxy by using the command line interface

At the command prompt, type:

```
add cache forwardProxy <IPAddress> <port>
```

To configure the NetScaler as a forward cache proxy by using the GUI

1. Navigate to **Optimization > Integrated Caching > Forward Proxy**, and add a forward proxy by specifying the IP address and port number.

Default settings for the integrated cache

May 2, 2023

The NetScaler integrated cache feature provides built-in policies with default settings and initial settings for the Default content group. The information in this section defines the parameters for the built-in policies and Default content group.

Default caching policies

The integrated cache has built-in policies. The NetScaler appliance evaluates the policies in a particular order, as discussed in the following sections.

You can override these built-in policies with a user-defined policy that is bound to a request-time override or response-time override policy bank.

Note

If you configured policies prior to release 9.0 and specified the `-precedeDefRules` parameter when binding the policies, they are automatically assigned to override-time bind points during migration.

View default policies

The built-in policy names start with an underscore (`_`). You can view the built-in policies from the command line and the administrative console using the `show cache policy` command.

Default request policies

You can override the following built-in request time policies by configuring new policies and binding them to the request-time override processing point. In the following policies, note that the `MAY_NOCACHE` action stipulates that the transaction is cached only when there is a user-configured or built-in `CACHE` directive at response time.

The following policies are bound to the `_reqBuiltinDefaults` policy label. They are listed in priority order.

Do not cache a response for a request that uses any method other than GET.

The policy name is `_nonGetReq`. The following is the policy rule:

```
!HTTP.REQ.METHOD.eq(GET)
```

Set a NOCACHE action for a request with header value that contains If-Match or If-Unmodified-Since.

The policy name is `_advancedConditionalReq`. The following is the policy rule:

```
HTTP.REQ.HEADER("If-Match").EXISTS || HTTP.REQ.HEADER("If-Unmodified-Since").EXISTS
```

Set a MAY_NOCACHE action for a request with the following header values: Cookie, Authorization, Proxy-authorization, or a request which contains the NTLM or Negotiate header.

The policy name is `_personalizedReq`. The following is the policy rule:

```
HTTP.REQ.HEADER("Cookie").EXISTS || HTTP.REQ.HEADER("Authorization").EXISTS || HTTP.REQ.HEADER("Proxy-Authorization").EXISTS || HTTP.REQ.IS_NTLM_OR_NEGOTIATE
```

Default response policies

You can override the following default response-time policies by configuring new policies and binding them to the response-time override processing point.

The following policies are bound to the `_resBuiltinDefaults` policy label and are evaluated in the order in which they are listed:

1. Do not cache HTTP responses unless they are of type 200, 304, 307, 203 or if the types are between 400 and 499 or between 300 and 302.

The policy name is `_uncacheableStatusRes`. The following is the policy rule:

```
!((HTTP.RES.STATUS.EQ(200)) || (HTTP.RES.STATUS.EQ(304)) || (HTTP.RES.STATUS.BETWEEN(400,499)) || (HTTP.RES.STATUS.BETWEEN(300, 302)) || (HTTP.RES.STATUS.EQ(307)) || (HTTP.RES.STATUS.EQ(203)))
```

2. Do not cache an HTTP response if it has a Vary header with a value of anything other than Accept-Encoding.

The compression module inserts the Vary: Accept-Encoding header. The name of this expression is `_uncacheableVaryRes`. The following is the policy rule:

```
((HTTP.RES.HEADER("Vary").EXISTS)&& ((HTTP.RES.HEADER("Vary").INSTANCE(1).LENGTH > 0) || (!HTTP.RES.HEADER("Vary").STRIP_END\\_WS.SET_TEXT_MODE(IGNORECASE).eq("Accept-Encoding"))))
```

3. Do not cache a response if its Cache-Control header value is No-Cache, No-Store, or Private, or if the Cache-Control header is not valid.

The policy name is **_uncacheableCacheControlRes**. The following is the policy rule:

```
((HTTP.RES.CACHE\\_CONTROL.IS\\_PRIVATE) || (HTTP.RES.CACHE\\_CONTROL.IS\\_NO\\_CACHE) || (HTTP.RES.CACHE\\_CONTROL.IS\\_NO\\_STORE) || (HTTP.RES.CACHE\\_CONTROL.IS\\_INVALID))
```

4. Cache responses if the Cache-Control header has one of the following values: Public, Must-Revalidate, Proxy-Revalidate, Max-Age, S-Maxage.

The policy name is **_cacheableCacheControlRes**. The following is the policy rule:

```
((HTTP.RES.CACHE_CONTROL.IS_PUBLIC) || (HTTP.RES.CACHE_CONTROL.IS_MAX_AGE) || (HTTP.RES.CACHE_CONTROL.IS_MUST_REVALIDATE) || (HTTP.RES.CACHE_CONTROL.IS_PROXY_REVALIDATE) || (HTTP.RES.CACHE_CONTROL.IS_S_MAXAGE))
```

5. Do not cache responses that contain a Pragma header.

The name of the policy is **_uncacheablePragmaRes**. The following is the policy rule:

```
HTTP.RES.HEADER("Pragma").EXISTS
```

6. Cache responses that contain an Expires header.

The name of the policy is **_cacheableExpiryRes**. The following is the policy rule:

```
HTTP.RES.HEADER("Expires").EXISTS
```

7. If the response contains a Content-Type header with a value of Image, remove any cookies in the header and cache it.

The name of the policy is **_imageRes**. The following is the policy rule:

```
HTTP.RES.HEADER("Content-Type").SET_TEXT_MODE(IGNORECASE).STARTSWITH("image/")
```

You can configure the following content group to work with this policy:

```
add cache contentgroup nocookie -group -removeCookies YES
```

8. Do not cache a response that contains a Set-Cookie header.

The name of the policy is **_personalizedRes**. The following is the policy rule:

```
HTTP.RES.HEADER("Set-Cookie").EXISTS
```

Restrictions on default policies

You cannot override the following built-in request time policies with user-defined policies.

These policies are listed in priority order.

1. Do not cache any responses if the corresponding HTTP request lacks a GET or POST method.
2. Do not cache any responses for a request if the HTTP request URL length plus host name exceeds 1744 bytes.
3. Do not cache a response for a request that contains an If-Match header.
4. Do not cache a request that contains an If-Unmodified-Since header.

Note

This is different from the If-Modified-Since header.

1. Do not cache a response if the server does not set an expiry header.

You cannot override the following built-in response time policies. These policies are evaluated in the order in which they are listed:

1. Do not cache responses that have an HTTP response status code of 201, 202, 204, 205, or 206.
2. Do not cache responses that have an HTTP response status code of 4xx, with the exceptions of status codes 403, 404, and 410.
3. Do not cache responses if the response type is FIN terminated, or the response does not have one of the following attributes: Content-Length, or Transfer-Encoding: Chunked.
4. Do not cache the response if the caching module cannot parse its Cache-Control header.

Initial settings for the default content group

When you first enable integrated caching, the NetScaler appliance provides one predefined content group named the Default content group. For detailed information, see [Default content group settings](#) table.

Troubleshooting

May 2, 2023

If the integrated cache feature does not work as expected after you have configured it, you can use some common tools to access NetScaler resources and diagnose the problem.

Resources for troubleshooting

For more information about the resources available for troubleshooting and sample configurations, see [Resource for troubleshooting](#) PDF file.

Front end optimization

March 20, 2024

Note:

Front end optimization is available if you have an Advanced or Premium NetScaler license and are running NetScaler release 12.1 or later.

The HTTP protocols that underlie web applications were originally developed to support the transmission and rendering of simple webpages. New technologies such as JavaScript and cascading style sheets (CSS), and new media types such as Flash videos and graphics-rich images, place heavy demands on front-end performance, that is, on performance at the browser level.

The NetScaler front end optimization (FEO) feature addresses such issues and reduces the load time and render time of webpages by:

- Reducing the number of requests.
- Required for rendering each page.
- Reducing the number of bytes in page responses.

Simplifying and optimizing the content served to the client browser.

You can customize your FEO configuration to provide the best results for your users. NetScalers support numerous web content optimizations for both desktop and mobile users. The following tables describe the front-end optimizations provided by the FEO feature, and the operations performed on different types of files.

Optimizations performed by the FEO feature

Web Optimization	Problem	What NetScaler FEO feature does	Benefits
Inlining	Client browsers often send multiple requests to servers for loading external CSS, images, and JavaScript associated with the webpage.	CSS inline, JavaScript inline, CSS combine	Loading the external CSS, images, and JavaScript inline with the HTML files improves page-rendering time. This optimization is beneficial for content that is viewed only once, and for mobile devices that have limited cache sizes.
Minification	Data fetched from servers includes inessential characters such as white spaces, comments, and newline characters. The time that browsers spend in processing such data creates website latency.	CSS minification, JavaScript minification, Removal of HTML comments	Minified files consume less bandwidth and avoid the latency caused by special processing.
Image optimization	Mobile browsers often have slow connection speeds and limited cache memory. Downloading the images on mobile clients consumes more bandwidth, processing time, and cache space, resulting in website latency.	JPEG optimization, CSS image inlining, Image shrink-to attributes, GIF to PNG conversion, HTML image inlining, WebP image conversion, JPEG, GIF, PNG to JPEG-XR image conversion	Reduces the image to the size indicated in the image tag by NetScaler, enabling client browsers to load images faster.

Web Optimization	Problem	What NetScaler FEO feature does	Benefits
Repositioning	Inefficient processing of external CSS, images, and JavaScript increases page-load time.	Image lazy loading, CSS move to Head, JavaScript move to end	Repositions HTML elements, to reduce rendering time for webpages and enable client browsers to load the objects faster.
Connection Management	Many browsers set limits on the number of simultaneous connections that can be established to a single domain. This can cause browsers to download webpage resources one at a time, resulting in higher browsers time.	Domain sharding	Overcomes the connection limitation, which improves page-rendering time by enabling client browsers to download more resources in parallel.

Web Optimizations on different file types:

NetScaler can perform web optimizations on CSS, images, Javascript, and HTML. For more information, see [Web Optimizations PDF](#).

Note:

The front end optimization feature supports ASCII characters only. It does not support the Unicode character set.

How front end optimization works

After the NetScaler receives the response from the server:

1. Parses the contents of the page, creates an entry in the cache (wherever applicable), and applies the FEO policy.

For example, a NetScaler can apply the following optimization rules:

- Remove white spaces or comments present within a CSS or JavaScript.
- Combine one or more CSS files to one file.
- Convert GIF image format to PNG format.

2. Rewrites the embedded objects and saves the optimized content in the cache, with a different signature than the one used for the initial cache entry.
3. For subsequent requests, fetches the optimized objects from the cache, not from the server, and forwards the responses to the client.

**

Remove extraneous information such as white spaces and comments.

The period during which the browser can use the cached resource without checking to see if fresh content is available on the server.

Configure front end optimization

Optionally, you can change the values of the front end optimization global settings. Otherwise, begin by creating actions that specify the optimization rules to be applied to the embedded objects.

After configuring actions, create policies, each with a rule specifying a type of request for which to optimize the response, and associate the actions with the policies.

Note:

The NetScaler evaluates front end optimization policies at request time only, not at response time.

To put the policies into effect, bind them to bind points. You can bind a policy globally, so that it applies to all traffic that flows through the NetScaler, or you can bind the policy to a load balancing or content switching virtual server of type HTTP or SSL. When you bind a policy, assign it a priority. A lower priority number indicates a higher value. The NetScaler applies the policies in the order of their priorities.

For more information on how to configure front end optimization with NetScaler, see the following video:

[This is an embedded video. Click the link to watch the video](#)

Prerequisites

Front end optimization requires the NetScaler integrated caching feature to be enabled. Also, you must perform the following integrated caching configurations:

- Allocate cache memory.
- Set the maximum response size and memory limit for a default cache content group.

For more information on configuring integrated caching, see [Integrated Caching](#).

Note:

The term Integrated Cache can be interchangeably used with AppCache; note that from a functionality point of view, both terms mean the same.

Configure front end optimization by using NetScaler command interface

At the command prompt, do the following:

1. Enable the front end optimization feature.

```
enable ns feature FEO
```

1. Create one or more front end optimization actions.

```
add feo action <name> [-imgShrinkToAttrib] [-imgGifToPng] ...
```

Example: To add a front end optimization action for converting images in GIF format to PNG format and extending the cache expiry period:

```
add feo action allact -imgGifToPng -pageExtendCache
```

1. [Optional] Specify non-default values for front end optimization global settings.

```
set feo parameter [-cacheMaxage <integer>] [-JpegQualityPercent <integer>] [-cssInlineThresSize <integer>] [-inlineJsThresSize <integer>] [-inlineImgThresSize <integer>]
```

Example: To specify the cache maximum expiry period:

```
set feo parameter -cacheMaxage 10
```

1. Create one or more front end optimization policies.

```
add feo policy <name> <rule> <action>
```

Example: To add a front end optimization policy and associate it with the above specified allact action:

```
1 >add feo policy pol1 TRUE all act
2 >add feo policy pol1 "(HTTP.REQ.URL.CONTAINS(\"testsite\"))" allact1
```

1. Bind the policy to a load balancing or content switching virtual server, or bind it globally.

```
bind lb vserver <name> -policyName <string> -priority <num>
```

```
bind cs vserver <name> -policyName <string> -priority <num>
```

```
bind feo global <policyName> <priority> -type <type> <gotoPriorityExpression >
```

Example: To apply the front end optimization policy to a virtual server named “abc”:

```
bind lb vserver abc -policyName pol1 -priority 1 -type NONE
```

Example: To apply the front end optimization policy for all the traffic reaching the ADC:

```
bind feo global pol1 100 -type REQ_DEFAULT
```

1. Save the configuration. `save ns config`

Configure front end optimization by using the GUI

1. Navigate to **Optimization > Front End Optimization > Actions**, and click **Add** and create a front end optimization action by specifying the relevant details.
2. [Optional] Specify the front end optimization global settings.
3. Navigate to **Optimization > Front End Optimization**, and on the right-pane, under Settings, click **Change Front End Optimization** settings and specify the front end optimization global settings.
4. Create a front end optimization policy.
5. Navigate to **Optimization > Front End Optimization > Policies**, click **Add** and create a front end optimization policy by specifying the relevant details.
6. Bind the policy to a load balancing or content switching virtual server.
 - a) Navigate to **Optimization > Front End optimization > Policies**.
 - b) Select a front end optimization policy and click **Policy Manager**.
 - c) Under **Front End Optimization Policy Manager**, bind the front end optimization policy to a load balancing or content switching virtual server.

Verify front end optimization configuration

The dashboard utility displays summary and detailed statistics in tabular and graphic formats. You can view the FEO statistics to evaluate your FEO configuration.

Optionally, you can also display statistics for an FEO policy, including the number of select that the policy counter increments during the policy based FEO.

Note:

For more information about statistics and charts, see the Dashboard help on the NetScaler appliance.

View FEO statistics by using the CLI

At the command prompt, type the following commands to display a summary of FEO statistics, FEO policy select and details, and detailed FEO statistics, respectively:

- `stat feo` Note: The `stat feo` policy command displays statistics only for advanced FEO policies.
- `show feo policy name`
- `stat feo -detail`

View FEO statistics on NetScaler dashboard

In the dashboard GUI, you can:

- Select Front End Optimization to display a summary of FEO statistics.
- Click the **Graphical View** tab to display the rate of requests processed by the FEO feature.

Sample optimization:

Refer to the [Sample PDF](#) for some examples of content optimization actions that are applied on HTML content and the embedded objects within the HTML content.

Media classification

May 2, 2023

Understanding the type of traffic in the network helps network administrators to manage bandwidth consumption for optimal network performance. The media classification mode monitors and displays the statistics of media traffic going through the NetScaler appliance.

With this mode enabled, a network administrator can collect stats showing the amount of data accessed, and the types of devices from which the media files have been accessed. The NetScaler appliance also supports byte-range requests in this mode.

Currently the NetScaler appliance can monitor and display statistics for the following media file types:

Media	File type
Microsoft Smooth Streaming	Video
Apple Live Streaming	Video
Audio Data Transport Stream (ADTS)	Audio
Advanced Audio Coding (AAC)	Audio
Flash Video (FLV)	Audio and Video

Media	File type
3GP	Audio and Video

The appliance can display stats for the following devices:

Device Platform	Device Type
iOS	iPad and iPod
Android	Mobiles and tablets
Laptop or Desktop	Windows laptop and desktop computers
Others	Other mobile devices (mobiles and tablets)

The network administrators can check the following stats counters to know the amount of data accessed through the NetScaler appliance for various media traffic types.

Media File Name	Stats Counter
Microsoft Smooth Streaming	<p><code>mcmssmthstrmvid</code>—This counter records the total number of Microsoft Smooth Streaming videos served by the NetScaler appliance; <code>mcmssmthstrvidpl</code>—This counter records the total number of Microsoft Smooth Streaming video playlists served by the NetScaler appliance; <code>mcmssmthstrmvidbytes</code>—This counter records the total number of data bytes served for Microsoft Smooth Streaming media traffic on the NetScaler appliance; <code>mcmssmthstrmplvidbytespl</code>—This counter records the total number of Microsoft Smooth Streaming playlist bytes served by the NetScaler appliance.</p>

Media File Name	Stats Counter
Apple Live Streaming	<p><code>mccapplelivestrmngvid</code>—This counter records the total number of Apple Live Streaming videos served by the NetScaler appliance. <code>Mccapplelivestrmngvidpl</code>—This counter records the total number of Apple Live Streaming video playlists served by the NetScaler appliance. <code>Mcapplelivestreamingvidbytes</code>—This counter records the total number of data bytes served for Apple Live Streaming media traffic on the NetScaler appliance. <code>Mcapplelivestreamingplaylistvidbytespl</code>—This counter records the total number of Apple Live Playlist bytes served by the NetScaler appliance.</p>
Audio Data Transport Stream (ADTS)	<p><code>mcadtsaudio</code>—This counter records the total number of ADTS audio clips served by the NetScaler appliance. <code>Mcadtsaudiobytes</code>—This counter records the total number of data bytes served for ADTS media traffic on the NetScaler appliance.</p>
Advanced Audio Coding (AAC)	<p><code>mcaacaudio</code>—This counter records the total number of AAC audio clips served by the NetScaler appliance. <code>Mcaacaudiobytes</code>—This counter records the total number of data bytes served for AAC media traffic on the NetScaler appliance.</p>
Flash Video (FLV)	<p><code>Mcflvvid</code>—This counter records the total number of flash videos served by the NetScaler appliance. <code>Mcflvvidbytes</code>—This counter records the total number of data bytes served for flash videos on the NetScaler appliance.</p>
3GP	<p><code>mc3gpvidbytes</code>—This counter records the total number of data bytes served for 3GP media traffic on the NetScaler appliance.</p>

The NetScaler appliance detects media file types by their signatures in the *initial body bytes* of the responses. For example, the initial body bytes for an mp4 file have the following signature in the response:

```
**...ftypmp42** ...isommp42...moov...lmvhd.....c.\!.c.\!..
```

The NetScaler appliance detects the client device type by the *user agent string* that the client device includes in the HTTP GET request. For example, a window phone using a UC browser has the following user agent string in the HTTP GET request:

```
User-Agent: **UCWEB**/2.0 (**Windows**; U; wds 8.10; en-US; HTC; 8X  
by HTC)U2/1.0.0
```

Enable media classification

By default, media classification is disabled on the NetScaler appliance. You have to enable the mode before using it.

To enable media classification by using the command line interface

At the command prompt, type:

```
enable ns mode Mediaclassification
```

To enable media classification by using the GUI

Enable media classification on NetScaler appliance

Navigate to **System > Settings > Configure Modes** and select **Media Classification**.

To view media traffic statistics on the NetScaler appliance

Navigate to **Optimization** and click **Media Classification** to view the media traffic statistics.

Verify media classification statistics

You can view the media traffic statistics in the dashboard utility or using the command line interface. The dashboard utility displays summary and detailed statistics in a tabular and graphic format.

Note

For more information about statistics and charts, see the Dashboard help on your NetScaler appliance.

To View media classification statistics by using the command line interface

At the command prompt, type one of the following commands to display a summary of media classification statistics, display detailed statistics, or clear the display:

```
stat Mediaclassification
```

```
stat Mediaclassification -detail
```

```
stat Mediaclassification -clearstats
```

To view Media Classification statistics on the Dashboard

In the **Dashboard** utility, you can display the following types of media classification statistics:

1. Select **Media Classification** to display a summary of the media traffic statistics.
2. To display detailed media traffic statistics, click the **Details**.
3. To clear the media traffic statistics, click **Clear**.

Reputation

May 2, 2023

NetScaler offers reputation based security. Using reputation assessment to determine the risk of processing requests, you can take actions such as blocking or dropping certain requests to improve the performance of your application.

The NetScaler IP reputation feature uses IP reputation checks to prevent Zero day attacks and provide protection against malicious sources associated with web attacks, phishing activity, or web scanning.

For more details, see [IP Reputation](#).

IP Reputation

October 30, 2023

IP reputation is a tool that identifies IP addresses that send unwanted requests. Using the IP reputation list you can reject requests that are coming from an IP address with a bad reputation. Optimize Web Application Firewall performance by filtering requests that you do not want to process. Reset, drop a request, or even configure a responder policy to take a specific responder action.

The following are some attacks that you can prevent by using IP Reputation:

- **Virus Infected personal computers.** (home PCs) are the single biggest source of Spam on the internet. IP Reputation can identify the IP address that is sending unwanted requests. IP reputation can be especially useful for blocking large scale DDoS, DoS, or anomalous SYN flood attacks from known infected sources.

- **Centrally managed and automated botnet.** Attackers have gained popularity for stealing passwords, because it doesn't take long when hundreds of computers work together to crack your password. It is easy to launch botnet attacks to figure out passwords that use commonly used dictionary words.
- **Compromised web-server.** Attacks are not as common because awareness and server security have increased, so hackers and spammers look for easier targets. There are still web servers and online forms that hackers can compromise and use to send spam (such as viruses and porn). Such activity is easier to detect and quickly shut down, or block with a reputation list such as SpamRats.
- **Windows Exploits.** (such as Active IPs offering or distributing malware, shell code, rootkits, worms, or viruses).
- **Known spammers and hackers.**
- **Mass e-mail marketing campaigns.**
- **Phishing Proxies** (IP addresses hosting phishing sites, and other fraud such as ad click fraud or gaming fraud).
- **Anonymous proxies** (IPs providing proxy and anonymization services including The Onion Router aka TOR).

A NetScaler appliance uses **Webroot** as the service provider for a dynamically generated malicious IP database and the metadata for those IP addresses. Metadata might include geolocation details, threat category, threat count, and so on. The Webroot threat Intelligence engine receives real-time data from millions of sensors. It automatically and continuously captures, scans, analyses and scores the data, using advanced machine learning and behavioral analysis. Intelligence about a threat is continually updated.

The NetScaler appliance validates an incoming request for its bad reputation using the Webroot's IP reputation database. The database has a huge collection of IP address classified based IP threat categories. Following are the IP threat categories and its description.

- **Spam Sources.** Spam Sources includes Tunneling Spam messages through proxy, anomalous SMTP activities, Forum Spam activities.
- **Windows Exploits.** The Windows Exploits category includes active IP Address offering or distributing malware, shell code, rootkits, worms, or viruses
- **Web Attacks.** The Web Attacks category includes cross site scripting, iFrame injection, SQL injection, cross domain injection, or domain password brute force attack
- **Botnets.** The Botnet category includes Botnet C&C channels, and infected zombie machine controlled by Bot master
- **Scanners.** The Scanners category includes all reconnaissance such as probes, host scan, domain scan and password brute force attack
- **Denial of Service.** The Denial of Services category includes DOS, DDOS, anomalous sync flood, anomalous traffic detection

- **Reputation.** Deny access from IP addresses currently known to be infected with malware. This category also includes IPs with average low Webroot Reputation Index score. Enabling this category prevents access from sources identified to contact malware distribution points.
- **Phishing.** The Phishing category includes IP addresses hosting phishing sites, other kinds of fraud activities such as Ad Click Fraud or Gaming fraud
- **Proxy.** The Proxy category includes IP addresses providing proxy and def services.
- **Mobile Threats.** The Mobile Threats category includes IP addresses of malicious and unwanted mobile applications. This category leverages data from the Webroot mobile threat research team.
- **Tor Proxy.** The Tor Proxy category includes IP addresses acting as exit nodes for the Tor Network. Exit nodes are the last point along the proxy chain and make a direct connection to the originator's intended destination.

When a threat is detected anywhere in the network, the IP address is flagged as malicious and all appliances connected to the network are immediately protected. The dynamic changes in the IP addresses are processed with high speed and accuracy by using advanced machine learning.

As stated in the data sheet from Webroot, the Webroot's sensor network identifies many key IP threat types, including spam sources, Windows exploits, botnets, scanners, and others. (See the flow diagram on the data sheet.)

The NetScaler appliance uses an `iprep` client process to get the database from Webroot. The `iprep` client uses the HTTP GET method to get the absolute IP list from Webroot for the first time. Later, it checks delta changes once every 5 minutes.

Important:

- Make sure that the NetScaler appliance has Internet access and DNS is configured before you use the IP Reputation feature.
- To access the Webroot database, the NetScaler appliance must be able to connect to **api.bcti.brightcloud.com** on **port 443**. Each node in the HA or cluster deployment gets the database from Webroot and must be able to access this Fully Qualified Domain Name (FQDN).
- Webroot hosts its reputation database in AWS currently. Therefore, NetScaler must be able to resolve AWS domains for downloading the reputation db. Also, the firewall must be open for AWS domains.

Note:

Each packet engine requires at least 4 GB to function properly when the IP Reputation feature is enabled.

Advanced policy Expressions. Configure the IP Reputation feature by using advanced policy expres-

sions (Advanced policy expressions) in the policies bound to supported modules, such as Web Application Firewall and responder. The following are two examples showing expressions that can be used to detect whether the client IP address is malicious.

1. **CLIENT.IP.SRC.IPREP_IS_MALICIOUS**: This expression evaluates to TRUE if the client is included in the malicious IP list.
2. **CLIENT.IP.SRC.IPREP_THREAT_CATEGORY (CATEGORY)**: This expression evaluates to TRUE if the client IP is malicious IP and is in the specified threat category.
3. **CLIENT.IPV6.SRC.IPREP_IS_MALICIOUS and CLIENT.IPV6.SRC.IPREP_THREAT_CATEGORY**: This expression evaluates to TRUE if the client IP is of type IPv6 and it is a malicious IP address in a specified threat category.

Following are the possible values for the threat category:

SPAM_SOURCES, WINDOWS_EXPLOITS, WEB_ATTACKS, BOTNETS, SCANNERS, DOS, REPUTATION, PHISHING, PROXY, NETWORK, CLOUD_PROVIDERS, MOBILE_THREATS, TOR_PROXY.

Note:

The IP reputation feature checks both source and destination IP addresses. It detects malicious IPs in the header. If the PI Expression in a policy can identify the IP address, the IP reputation check determines whether it is malicious.

IPRep log message. The `/var/log/iprep.log` file contains useful messages that capture information about communication with the Webroot database. The information can be about the credentials used during Webroot communication, failure to connect with Webroot, information included in an update (such as the number of IP addresses in the database).

Creating a blocklist or allowlist of IPs using a policy data set. You can maintain an allow list to allow access to specific IP addresses that are blocklisted in the Webroot database. You can also create a customized block list of IP addresses to supplement the Webroot reputation check. These lists can be created by using a policy **data set**. A data set is a specialized form of pattern set that is ideally suited for IPv4 or IPv6 address matching. To use data sets, first create the data set and bind IPv4 or IPv6 addresses to it. When configuring a policy for comparing a string in a packet, use an appropriate operator and pass the name of the pattern set or data set as an argument.

To create an allow list of addresses to treat as exceptions during IP reputation evaluation:

- Configure the policy so that the PI expression evaluates to False even if an address in the allow list is listed as malicious by Webroot (or any service provider).

Enabling or disabling IP reputation. IP reputation is a part of the general reputation feature, which is license based. When you enable or disable the reputation feature, it enables or disables IP Reputation.

General procedure. Deploying IP reputation involves the following tasks

- Verify that the license installed on the NetScaler appliance has IP reputation support. Premium and standalone application firewall licenses support the IP reputation feature.
- Enable the IP reputation and application firewall features.
- Add an application firewall profile.
- Add an application firewall policy using the PI expressions to identify the malicious IP addresses in the IP Reputation database.
- Bind the application firewall policy to an appropriate bind point.
- Verify that any request received from a malicious address gets logged in the `ns.log` file to show that the request was processed as specified in the profile.

Configure the IP reputation feature using the CLI

At the command prompt, type:

- `enable feature reputation`
- `disable feature reputation`

The following examples show how you can add an application firewall policy using the PI expression to identify malicious addresses. You can use the built-in profiles, or add a profile, or configure an existing profile to invoke the desired action when a request matches a policy match.

Examples 3 and 4 show how to create a policy dataset to generate a block list or an allow list of IP addresses.

Example 1:

The following command creates a policy that identifies malicious IP addresses and block the request if a match is triggered:

```
add appfw policy pol1 CLIENT.IP.SRC.IPREP_IS_MALICIOUS APPFW_BLOCK
add appfw policy pol1 CLIENT.IPv6.SRC.IPREP_IS_MALICIOUS APPFW_BLOCK
add appfw policy pol1 "HTTP.REQ.HEADER(\"X-Forwarded-For\").TYPECAST_IPv6_ADDR
.IPREP_IS_MALICIOUS"APPFW_RESET
```

Example 2:

The following command creates a policy that uses the reputation service to check the client IP address in the `X-Forwarded-For` header and reset the connection if a match is triggered.

```
> add appfw policy pol1 "HTTP.REQ.HEADER(\"X-Forwarded-For\").TYPECAST_IP_ADDR
.IPREP_IS_MALICIOUS"APPFW_RESET**
```

Example 3:

The following example shows how to add a list to add exceptions that allow specified IP addresses:

```
> add policy dataset Allow_list1 ipv4
```

```
> bind policy dataset Allow_list1 10.217.25.17 -index 1
> bind policy dataset Allow_list1 10.217.25.18 -index 2
```

The following example shows how to add a list to add exceptions that allow specified IPv6 addresses:

```
1 add policy dataset Allow_list_ipv6 ipv6
2 bind policy dataset Allow_list_ipv6 fe80::98c7:d8ff:fe3a:b562 -index 1
3 bind policy dataset Allow_list_ipv6 fe80::98c7:d8ff:fe3a:b563 -index 2
```

Example 4:

The following example shows how to add the customized list to flag specified IP addresses as malicious:

```
> add policy dataset Block_list1 ipv4
> bind policy dataset Block_list1 10.217.31.48 -index 1
> bind policy dataset Block_list1 10.217.25.19 -index 2
```

The following example shows how to add the customized list to flag specified IPv6 addresses as malicious.

```
1 add policy dataset Block_list_ipv6 ipv6
2 bind policy dataset Block_list_ipv6 fe80::98c7:d8ff:ff3b:b562 -index 1
3 bind policy dataset Block_list_ipv6 fe80::ffc7:d8ff:fe3a:b562 -index 2
```

Example 5:

The following example shows a policy expression to block the client IP in the following conditions:

- It matches an IP address configured in the customized Block_list1 (example 4)
- It matches an IP address listed in the Webroot database unless relaxed by inclusion in the Allow_list1 (example 3).

```
1 > add appfw policy "Ip_Rep_Policy" "((CLIENT.IP.SRC.IPREP_IS_MALICIOUS
  || CLIENT.IP.SRC.TYPECAST_TEXT_T.CONTAINS_ANY(\"Block_list1\")) && !
  (CLIENT.IP.SRC.TYPECAST_TEXT_T.CONTAINS_ANY(\"Allow_list1\")))"
  APPFW_BLOCK
```

The following example shows a policy expression to block the client IPv6 in the following conditions:

1. It matches an IPv6 address configured in the customized Block_list_ipv6 (example 4)
2. It matches an Ipv6 address listed in the Webroot database unless relaxed by inclusion in the Allow_list_ipv6 (example 3).

```
1 add appfw policy "Ip_Rep_v6_Policy" "((CLIENT.IPV6.SRC.  
IPREP_IS_MALICIOUS || CLIENT.IPV6.SRC.TYPECAST_TEXT_T.CONTAINS_ANY  
(\"Block_list_ipv6\")) && ! (CLIENT.IPV6.SRC.TYPECAST_TEXT_T.  
CONTAINS_ANY(\"Allow_list_ipv6\")))" APPFW_BLOCK
```

Using Proxy server:

If the NetScaler appliance does not have direct access to the internet and is connected to a proxy, configure the IP Reputation client to send requests to the proxy.

Configure a proxy user name and password on the proxy server for an additional layer of security for your appliance.

At the command prompt, type:

```
set reputation settings -proxyServer <proxy server ip> -proxyPort <  
proxy server port> -proxyUsername <username> -proxyPassword <password  
>
```

Example:

```
> set reputation settings proxyServer 10.102.30.112 proxyPort 3128 -  
proxyUsername defaultusername -proxyPassword defaultpassword  
> set reputation settings -proxyServer testproxy.citrite.net -proxyPort  
3128 -proxyUsername defaultusername -proxyPassword defaultpassword  
> unset reputation settings -proxyserver -proxyport -proxyUsername -  
proxyPassword  
> sh reputation settings
```

Note:

The Proxy Server IP can be an IP address or a fully qualified domain name (FQDN).

Configure IP reputation by using NetScaler GUI

1. Navigate to the **System > Settings**. In the **Modes and Features** section, click the link to access the **Configure Advanced Features** pane and enable the **Reputation** checkbox.
2. Click **OK**.

To configure a proxy server by using the NetScaler GUI

1. On the **Configuration** tab, navigate to **Security > Reputation**.
2. Under **Settings**, click **Change Reputation Settings** to configure a proxy server.
3. Enable or disable the reputation feature.

4. Enter the following details to configure the proxy server:
 - a) **Proxy Server** - It can be an IP address or a fully qualified domain name (FQDN).
 - b) **Proxy port** - It accepts values between [1–65535].
 - c) **Proxy Username** –Provide a user name for proxy server authentication.
 - d) **Proxy Password** - Provide a password for proxy server authentication.

Note:

The **proxyUsername** and **proxyPassword** fields are enabled if the **proxyServer** and **proxyPort** fields are configured.

Create an allow list and a block list of client IP addresses using the GUI

1. On the **Configuration** tab, navigate to **AppExpert > Data Sets**.
2. Click **Add**.
 - In the **Create Data Set** (or **Configure Data set**) pane, provide a meaningful name for the list of the IP addresses. The name must reflect the purpose of the list.
 - Select **Type** as **IPv4** or **IPv6**.
 - Click **Insert** to add an entry.
 - In the **Configure Policy dataset binding** pane, add an IPv4 or IPv6 format IP address in the Value input box.
 - Provide an index.
 - Add a comment that explains the purpose of the list. This step is optional, but is recommended because a descriptive comment is helpful in managing the list.

Similarly, you can create a block list and add the IP addresses that are to be considered malicious.

Also see, [Pattern sets and data sets](#) for more details regarding using data sets and configuring Advanced policy expressions.

Configure an application firewall policy by using the NetScaler GUI

1. On the **Configuration** tab, navigate to **Security > Application Firewall > Policies > Firewall**. Click **Add** to add a policy using the PI expression to use IP reputation.

You can also use the Expression editor to build your own policy expression. The list shows preconfigured options that are useful for configuring an expression using the threat categories.

Highlights

- Quickly and accurately stop bad traffic at the network's edge from known malicious IP addresses posing different types of threats. You can block the request without parsing the body.
- Dynamically configure IP reputation functionality for multiple applications.
- Secure your network against data breach without a performance penalty, and consolidate protections onto a single service fabric using fast and easy deployments.
- You can do IP Reputation checks on source and destination IPs.
- You can also inspect the headers to detect malicious IPs.
- IP reputation check is supported in both forward proxy and reverse proxy deployments.
- The IP Reputation process connects with Webroot and updates the database every 5 minutes.
- Each node in the High Availability (HA) or Cluster deployment gets the database from Webroot.
- The IP reputation data is shared across all partitions in admin-partition deployments.
- You can use an AppExpert data set to create lists of IP addresses to add exceptions for IPs block-listed in the Webroot database. You can also create your own customized block list to designate specific IPs as malicious.
- The `iprep.db` file is created in the `/var/nslog/iprep` folder. Once created, it is not deleted even if the feature is disabled.
- When the reputation feature is enabled, the NetScaler Webroot database is downloaded. After that, it is updated every 5 minutes.
- The Webroot database major version is version: 1.
- The minor version gets updated every day. The update version is incremented after every 5 minutes and is reset back to 1 when the minor version is incremented.
- PI expressions enable you to use IP reputation with other features, such as responder and rewrite.
- The IP addresses in the database are in decimal notation.

Debugging tips

- If you cannot see the reputation feature in the GUI, verify that you have the right license.
- Monitor the messages in `var/log/iprep.log` for debugging.
- **Webroot connectivity:** If you see the `ns iprep: Not able to connect/resolve WebRoot` message, make sure that the appliance has internet access and DNS is configured.
- **Proxy server:** If you see the `ns iprep: iprep_curl_download: 88 curl_easy_perform failed. Error code: 5 Err msg:couldnt resolve proxy name` message, make sure that the proxy server configuration is accurate.
- **IP Reputation feature not working:** The IP Reputation process takes about five minutes to start after you enable the reputation feature. The IP reputation feature might not work for that duration.

- **Database download:** If the IP DB data download is failing after enabling the IP Reputation feature, the following error is seen in the logs.

```
iprep: iprep_curl_download:86 curl_easy_perform failed. Error code:7  
Err msg:Couldn't connect to server
```

Solution: Allow the out-bound traffic to the following URLs or configure a proxy to resolve the issue.

```
1 localdb-ip-daily.brightcloud.com:443  
2 localdb-ip-rtu.brightcloud.com:443  
3 api.bcti.brightcloud.com:443  
4 localdb-ipv6-daily.brightcloud.com:443  
5 ipce-daily.brightcloud.com:443  
6 ipce-rtu.brightcloud.com:443
```

SSL offload and acceleration

May 2, 2023

A NetScaler appliance configured for SSL acceleration transparently accelerates SSL transactions by offloading SSL processing from the server. To configure SSL offloading, you configure a virtual server to intercept and process SSL transactions, and send the decrypted traffic to the server (unless you configure end-to-end encryption, in which case the traffic is re-encrypted). Upon receiving the response from the server, the appliance completes the secure transaction with the client. From the client's perspective, the transaction seems to be directly with the server. A NetScaler configured for SSL acceleration also performs other configured functions, such as load balancing.

Configuring SSL offloading requires an SSL certificate and key pair, which you must obtain if you do not already have an SSL certificate. Other SSL-related tasks that you might need to perform include managing certificates, managing certificate revocation lists, configuring client authentication, and managing SSL actions and policies.

A non-FIPS NetScaler appliance stores the server's private key on the hard disk. On a FIPS appliance, the key is stored in a cryptographic module known as a hardware security module (HSM).

All NetScaler appliances that do not support a FIPS card (including virtual appliances) support the Thales nShield® Connect and SafeNet external HSMs. (MPX 9700/10500/12500/15500 appliances do not support an external HSM.)

Note: FIPS-related options for some of the SSL configuration procedures described in this document are specific to a FIPS-enabled NetScaler appliance.

SSL offloading configuration

December 28, 2023

To configure SSL offloading, you must enable SSL processing on the NetScaler appliance and configure an SSL based virtual server. The virtual server will intercept SSL traffic, decrypt the traffic, and forward it to a service that is bound to the virtual server. To secure time-sensitive traffic, such as media streaming, you can configure a DTLS virtual server. To enable SSL offloading, you must import a valid certificate and key and bind the pair to the virtual server.

Note

From release 13.1 build 17.x, protocols lower than TLSv1.2 are disabled on the SSL internal services. If the default (enhanced) profile is enabled, then the `ns_default_ssl_profile_internal_frontend` profile is bound to the SSL internal services and SSLv3, TLSv1.0, and TLSv1.1 protocols are disabled in the profile.

Enable SSL

To process SSL traffic, you must enable SSL processing. You can configure SSL based entities, such as virtual servers and services, without enabling SSL processing. However, they do not work until SSL processing is enabled.

Enable SSL processing by using the CLI

At the command prompt, type:

```
1 enable ns feature ssl
2
3 show ns feature
```

Example:

```
1 enable ns feature SSL
2 Done
3 show ns feature
4
5         Feature                Acronym        Status
6         -----                -
7 1)    Web Logging              WL             OFF
8 2)    Surge Protection         SP             ON
9 3)    Load Balancing          LB             ON
10 .
11 .
12 .
```

13	9)	SSL Offloading	SSL	ON
14	.			
15	.			
16	.			
17	24)	NetScaler Push	push	OFF
18	Done			

Enable SSL processing by using the GUI

Navigate to **System > Settings** and, in the **Modes and Features** group, click **Configure Basic Features**, and click **SSL Offloading**.

Configure services

On the NetScaler appliance, a service represents a physical server or an application on a physical server. Once configured, services are in the disabled state until the appliance can reach the physical server on the network and monitor its status.

Add a service by using the CLI

At the command prompt, type the following commands to add a service and verify the configuration:

```
1 add service <name> (<IP> | <serverName>) <serviceType> <port>
2 show service <serviceName>
```

Example:

```
1 add service sslsvc 198.51.100.225 SSL 443
2
3 Done
4
5 sh ssl service sslsvc
6
7         Advanced SSL configuration for Back-end SSL Service sslsvc:
8         DH: DISABLED
9         DH Private-Key Exponent Size Limit: DISABLED      Ephemeral
10        RSA: DISABLED
11        Session Reuse: ENABLED          Timeout: 300 seconds
12        Cipher Redirect: DISABLED
13        SSLv2 Redirect: DISABLED
14        ClearText Port: 0
15        Server Auth: DISABLED
16        SSL Redirect: DISABLED
17        Non FIPS Ciphers: DISABLED
18        SNI: DISABLED
```

```

18      OSCP Stapling: DISABLED
19      SSLv2: DISABLED  SSLv3: ENABLED  TLSv1.0: ENABLED  TLSv1.1:
      ENABLED  TLSv1.2: ENABLED  TLSv1.3: DISABLED
20      Send Close-Notify: YES
21      Strict Sig-Digest Check: DISABLED
22      Zero RTT Early Data: ???
23      DHE Key Exchange With PSK: ???
24      Tickets Per Authentication Context: ???
25
26      ECC Curve: P_256, P_384, P_224, P_521
27
28      1)      Cipher Name: DEFAULT_BACKEND
29            Description: Default cipher list for Backend SSL session
30      Done

```

Modify or remove a service by using the CLI

To modify a service, use the set service command, which is just like using the add service command, except that you enter the name of an existing service.

To remove a service, use the rm service command, which accepts only the <name> argument.

```
1 rm service <servicename>
```

Example:

```
1 rm service sslsvc
```

To modify a service, use the set service command, select any parameter, and change its setting.

```
1 set service <name> (<IP> | <serverName>) <serviceType> <port>
```

Example:

```
1 set service sslsvc 198.51.100.225 SSL 443
```

Configure a service by using the GUI

Navigate to **Traffic Management > Load Balancing > Services**, create a service, and specify the protocol as SSL.

SSL virtual server configuration

Secure sessions require establishing a connection between the client and an SSL-based virtual server on the NetScaler appliance. The SSL virtual server intercepts SSL traffic, decrypts it and processes it before sending it to services that are bound to the virtual server.

Note: The SSL virtual server is marked as down on the NetScaler appliance until a valid certificate / key pair and at least one service are bound to it. An SSL based virtual server is a load balancing virtual server of protocol type SSL or SSL_TCP. The load balancing feature must be enabled on the NetScaler appliance.

Add an SSL-based virtual server by using the CLI

At the command prompt, type the following commands to create an SSL-based virtual server and verify the configuration:

```
1 add lb vserver <name> (serviceType) <IPAddress> <port>
2 show ssl vserver <name>
```

Example:

```
1 add lb vserver sslvs SSL 192.0.2.240 443
2 Done
3
4 sh ssl vserver sslvs
5
6         Advanced SSL configuration for VServer sslvs:
7         DH: DISABLED
8         DH Private-Key Exponent Size Limit: DISABLED      Ephemeral
9         RSA: ENABLED           Refresh Count: 0
10        Session Reuse: ENABLED           Timeout: 120 seconds
11        Cipher Redirect: DISABLED
12        SSLv2 Redirect: DISABLED
13        ClearText Port: 0
14        Client Auth: DISABLED
15        SSL Redirect: DISABLED
16        Non FIPS Ciphers: DISABLED
17        SNI: DISABLED
18        OCSP Stapling: DISABLED
19        HSTS: DISABLED
20        HSTS IncludeSubDomains: NO
21        HSTS Max-Age: 0
22        SSLv2: DISABLED  SSLv3: ENABLED  TLSv1.0: ENABLED  TLSv1.1:
23        ENABLED  TLSv1.2: ENABLED  TLSv1.3: DISABLED
24        Push Encryption Trigger: Always
25        Send Close-Notify: YES
26        Strict Sig-Digest Check: DISABLED
27        Zero RTT Early Data: DISABLED
28        DHE Key Exchange With PSK: NO
29        Tickets Per Authentication Context: 1
30        ECC Curve: P_256, P_384, P_224, P_521
31
32        1) Cipher Name: DEFAULT
33           Description: Default cipher list with encryption strength
34              >= 128bit
35
36        Done
```

Modify or remove an SSL-based virtual server by using the CLI

To modify the load balancing properties of an SSL virtual server, use the `set lb vserver` command. The set command is similar to the `add lb vserver` command, except that you enter the name of an existing virtual server. To modify the **SSL** properties of an SSL-based virtual server, use the `set ssl vserver` command. For more information, see the “SSL virtual server parameters” section later in this page.

To remove an SSL virtual server, use the `rm lb vserver` command, which accepts only the `<name>` argument.

Configure an SSL-based virtual server by using the GUI

Navigate to **Traffic Management > Load Balancing > Virtual Servers**, create a virtual server, and specify the protocol as SSL.

Bind services to the SSL virtual server

The ADC appliance forwards decrypted SSL data to servers in the network. To forward data, services representing these physical servers must be bound to the virtual server that receives the SSL data.

Typically, the link between the ADC appliance and the physical server is secure. Therefore, data transfer between the appliance and the physical server does not have to be encrypted. However, you can provide end-to-end-encryption by encrypting data transfer between the appliance and the server. For details, see [Configure SSL offloading with end-to-end encryption](#).

Note: Enable the load balancing feature on the ADC appliance before you bind services to the SSL based virtual server.

Bind a service to a virtual server by using the CLI

At the command prompt, type the following commands to bind the service to the virtual server and verify the configuration:

```
1 bind lb vserver <name> <serviceName>
2 show lb vserver <name>
```

Example:

```
1 bind lb vserver sslvs sslsvc
2     Done
3
4 sh lb vserver sslvs
5
```

```

6      sslvs (192.0.2.240:443) - SSL      Type: ADDRESS
7      State: DOWN[Certkey not bound]
8      Last state change was at Wed May  2 11:43:04 2018
9      Time since last state change: 0 days, 00:13:21.150
10     Effective State: DOWN
11     Client Idle Timeout: 180 sec
12     Down state flush: ENABLED
13     Disable Primary Vserver On Down : DISABLED
14     Appflow logging: ENABLED
15     No. of Bound Services :  1 (Total)      0 (Active)
16     Configured Method: LEASTCONNECTION      BackupMethod:
      ROUNDROBIN
17     Mode: IP
18     Persistence: NONE
19     Vserver IP and Port insertion: OFF
20     Push: DISABLED  Push VServer:
21     Push Multi Clients: NO
22     Push Label Rule: none
23     L2Conn: OFF
24     Skip Persistency: None
25     Listen Policy: NONE
26     IcmpResponse: PASSIVE
27     RHISTate: PASSIVE
28     New Service Startup Request Rate: 0 PER_SECOND, Increment
      Interval: 0
29     Mac mode Retain Vlan: DISABLED
30     DBS_LB: DISABLED
31     Process Local: DISABLE
32     Traffic Domain: 0
33     TROFS Persistence honored: ENABLED
34     Retain Connections on Cluster: NO
35     1) sslsvc (198.51.100.225: 443) - SSL State: DOWN      Weight: 1
36     Done

```

Unbind a service from a virtual server by using the CLI

At the command prompt, type the following command:

```
1 unbind lb vserver <name> <serviceName>
```

Example:

```
1 unbind lb vserver sslvs sslsvc
2 Done
```

Bind a service to a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.

2. Open a virtual server and click the **Load Balancing Virtual Server Service Bindings** tile under the **Services and Service Groups** section.
3. In the **Load Balancing Virtual Server Service Binding** page, click the **Add Bindings** tab, click **Click to select** under **Select Service**, and select the checkbox next to the service to be bound.
4. Click **Select** and click **Bind**.

Configure a server name indication (SNI) virtual server for secure hosting of multiple sites

Virtual hosting is used by web servers to host more than one domain name with the same IP address. The appliance supports hosting of multiple secure domains by offloading SSL processing from the web servers using transparent SSL services or virtual server-based SSL offloading. However, when multiple websites are hosted on the same virtual server, the SSL handshake is completed before the expected host name is sent to the virtual server. As a result, the appliance cannot determine which certificate to present to the client after a connection is established. This problem is resolved by enabling SNI on the virtual server. SNI is a Transport Layer Security (TLS) extension used by the client to provide the host name during handshake initiation. The ADC appliance compares this host name to the common name and, if it does not match, compares it to the subject alternative name (SAN). If the name matches, the appliance presents the corresponding certificate to the client.

A wildcard SSL certificate helps enable SSL encryption on multiple subdomains if the same organization controls these domains and the second-level domain name is the same. For example, a wildcard certificate issued to a sports network using the common name “*.sports.net” can be used to secure domains, such as “login.sports.net” and “help.sports.net”. It cannot secure the “login.ftp.sports.net” domain.

Note:

On an ADC appliance, only the domain name, URL, and email ID DNS entries in the **SAN** field are compared.

You can bind multiple server certificates to a single SSL virtual server or transparent service using the `-SNI Cert` option. The virtual server or service issues these certificates if SNI is enabled on the virtual server or service. You can enable SNI at any time.

Bind multiple server certificates to a single SSL virtual server by using the CLI

At the command prompt, type the following commands to configure SNI and verify the configuration:

```
1 set ssl vservice <vServerName>@ [-SNIEnable ( ENABLED | DISABLED )]
2
3 bind ssl vservice <vServerName>@ -certkeyName <string> -SNI Cert
```



```
4  
5 show ssl vservice <vServerName>
```

To bind multiple server certificates to a transparent service by using the CLI, replace `vserver` with `service` and `vservername` with service name in the preceding commands.

Note: Create the SSL service with the `-clearTextPort 80` option.

Bind multiple server certificates to a single SSL virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open an SSL virtual server and, in **Certificates**, select **Server Certificate**.
3. Add a certificate or select a certificate from the list, and click **Server Certificate for SNI**.
4. In **Advanced Settings**, select **SSL Parameters**.
5. Click **SNI Enable**.

Support for SNI on the back-end service

Note: SNI is not supported on a DTLS back-end service.

The NetScaler appliance supports Server Name Indication (SNI) at the back end. That is, the common name is sent as the server name in the client hello to the back-end server for successful completion of the handshake. This support helps meet federal system integrator customer security requirements. Also, SNI provides the advantage of using only one port instead of opening hundreds of different IP addresses and ports on a firewall.

Federal system integrator customer security requirements include support for Active Directory Federation Services (ADFS) 3.0 in 2012R2 and WAP servers. To meet this requirement, support for SNI at the back end on a NetScaler appliance is required.

Note:

For SNI to work, the server name in the client hello must match the host name configured on the back-end service that is bound to an SSL virtual server. For example, if the host name of the back-end server is `www.mail.example.com`, the SNI-enabled back-end service must be configured with the server name as <https://www.mail.example.com>. And this host name must match the server name in the client hello.

Support for dynamic SNI on the back-end service

The NetScaler appliance supports dynamic SNI on the back-end TLS connections. That is, the appliance learns the SNI in the client connection and uses it in the server-side connection. You no longer

need to specify a common name in the SSL service, service group, or profile. The common name received in the SNI extension of the Client Hello message is forwarded to the back-end SSL connection.

Earlier, you had to configure static SNI on SSL services, service groups, and SSL profiles. As a result, only the configured static SNI extension was sent to the server. If a client needed to access multiple domains at the same time, the ADC appliance was not able to send the SNI received from the client to the back-end service. Instead, it sent the static common name that was configured. Now, if the back-end server is configured for multiple domains, the server can respond with the correct certificate based on the SNI received in the Client Hello message from the appliance.

Point to Note:

- SNI must be enabled on the front end and the correct SNI certificate bound to the SSL virtual server. If you don't enable SNI on the front end, the SNI information is not passed to the back end.
- When server authentication is enabled, the server certificate is verified by the CA certificate and the common name/SAN entries in the server certificate are matched with the SNI. Therefore, the CA certificate must be bound to the service.
- Reuse of back-end connection and SSL session is based on SNI when dynamic SNI is enabled.

SSL monitors do not send SNI when dynamic SNI is enabled. For SNI-based probing, attach a back-end profile on which static SNI is configured to the SSL monitors. The monitor must be configured with the same custom header as SNI.

Configure SNI on the back-end service by using the CLI

At the command prompt, type:

```
1 add service <name> <IP> <serviceType> <port>
2
3 add lb vserver <name> <IPAddress> <serviceType> <port>
4
5 bind lb vserver <name> <serviceName>
6
7 set ssl service <serviceName> -SNIEnable ENABLED -commonName <string>
8
9 set ssl profile <name> -SNIEnable ENABLED
```


Example:

```
1 add service service_ssl 198.51.100.100 SSL 443
2
3 add lb vserver ssl-vs 203.0.113.200 SSL 443
4
5 bind lb vserver ssl-vs service_ssl
```

```
6
7   set ssl service service_ssl -SNIEnable ENABLED - commonName www.
   example.com
8
9   set ssl profile sslprof -SNIEnable ENABLED
```

Configure SNI on the back-end service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Select an SSL service, and in **Advanced Settings**, click **SSL Parameters**.
3. Click **SNI Enable**.

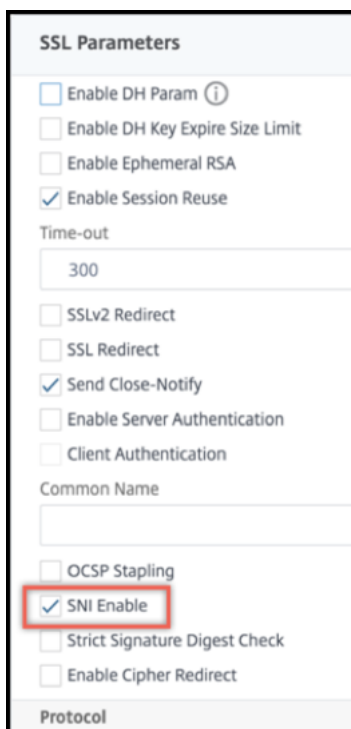

Configure SNI on the SSL profile by using the GUI

1. Navigate to **System > Profiles > SSL Profile**.
2. Click **Add**.
3. In **Basic Settings**, select **SNI Enable**.

Basic Settings			
Name	ns_default_ssl_profile_backend	Session Reuse	ENABLED
SSL Profile Type	BackEnd	Session Timeout	300
PUSH Encryption Trigger	Always	Cipher Redirect	DISABLED
Encryption trigger packet count	45	Server Authentication	DISABLED
Push Flag	Auto (PUSH flag is not set)	Common Name	
PUSH encryption trigger timeout (ms)	1	OCSP Stapling	DISABLED
Encryption trigger timeout (10 ms ticks)	100	SSL Redirect	DISABLED
Deny SSL Renegotiation	ALL	SNI Enable	ENABLED
SSL quantum size (KBytes)	8192	Send Close-Notify	YES
DH Param	DISABLED	Non-FIPS Ciphers	DISABLED
DH Key Expire Size Limit	DISABLED	Strict CA checks	NO
Ephemeral RSA	DISABLED	Enable Client Authentication using bound CA Chain	DISABLED
SSL Log Profile	-	SSLv3	DISABLED
Strict Signature Digest Check	DISABLED	TLSv1	ENABLED
HSTS	DISABLED	TLSv1.1	ENABLED
Max Age	0	TLSv1.2	ENABLED
Include Subdomains	NO	TLSv1.3	DISABLED
Preload	NO	Zero RTT Early Data	ENABLED
SSL Sessions Interception	DISABLED	DHE Key Exchange with PSK	NO
Verify Server Certificate For Reuse On SSL Interception	ENABLED		
SSL Interception Client Renegotiation	ENABLED	Skip Client Certificate Policy Check	DISABLED
SSL Interception OCSP Check	ENABLED		
Maximum SSL Sessions Per Server On SSL Interception	10		
TLS1.3 Session Tickets Per Authcontext	1		

4. Click **OK**.

Bind a secure monitor to an SNI-enabled back-end service

You can bind secure monitors of type HTTP, HTTP-ECV, TCP, or TCP-ECV to the back-end services and service groups that support SNI. However, the monitor probes do not send the SNI extension if dynamic SNI is enabled. To send SNI probes, enable static SNI in the back-end SSL profile and bind the profile to the monitor. Set the custom header in the monitor to the server name that is sent as the SNI extension in the client hello of the monitor probe.

Configure and bind a secure monitor to an SNI-enabled back-end service by using the CLI At the command prompt, type:

```

1 add lb monitor <monitorName> <type> -secure YES
2 add ssl profile <name> -sslProfileType BackEnd
3 set lb monitor <monitorName> <type> -customHeaders <string> -sslprofile
  <backend ssl profile>
4 set ssl profile <name> -sniEnable ENABLED -commonName <string>
5 bind service <name> -monitorName <string>

```

Example:


```

1 add ssl profile sni_backend_profile -sslProfileType BackEnd
2 set ssl profile sni_backend_profile -sniEnable ENABLED -commonName
  example.com
3 add lb monitor http-ecv-mon HTTP-ECV -secure YES
4 set monitor http-ecv-mon HTTP-ECV -customHeaders "Host: example.com\r\n
  " -sslprofile sni_backend_profile
5 bind service ssl_service -monitorName http-ecv-mon


```

Configure and bind a secure monitor to an SNI enabled back-end service by using the GUI

1. Navigate to **System > Profiles > SSL Profiles**.
2. Click **Add**.
3. Specify a name for the profile and in **SSL Profile Type**, select **Backend**.

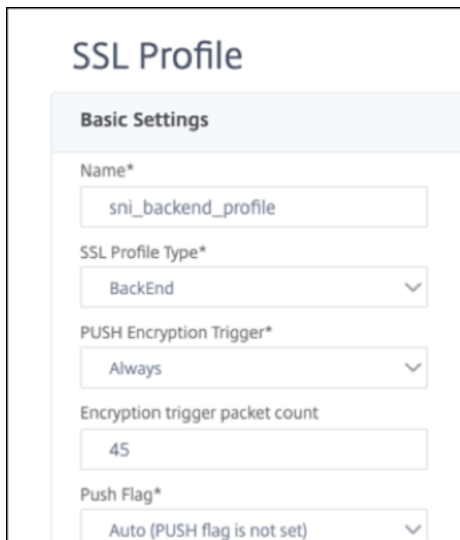

4. Specify the common name (same as the host header) and select **SNI Enable**.

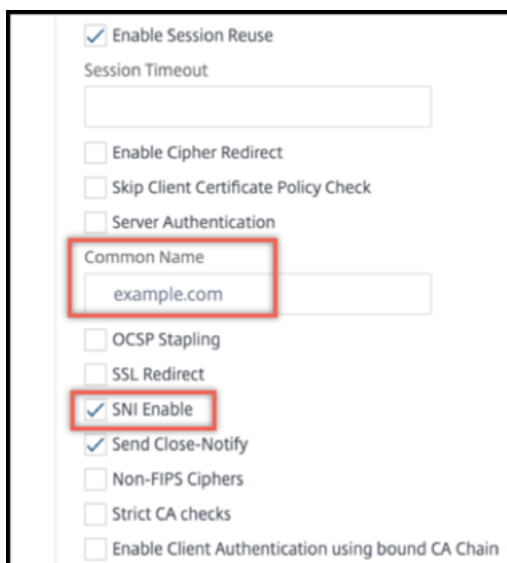

5. Click **OK**.
6. Navigate to **Traffic Management > Load Balancing > Monitor**.
7. Click **Add**.
8. Specify a name for the monitor. In **Type**, select HTTP, HTTP-ECV, TCP, or TCP-ECV.
9. Specify a **Custom Header**.

The screenshot shows the 'Create Monitor' configuration page. The 'Name' field is set to 'http-ecv-mon'. The 'Type' dropdown is set to 'HTTP-ECV'. Under the 'Basic Parameters' section, the 'Interval' is set to 5 and the unit is 'Second'. The 'Response Time-out' is set to 2 and the unit is 'Second'. The 'Custom Header' field contains 'Host: example.com\r\n'. The 'Send String' field is empty.

10. Select **Secure**.
11. In **SSL Profile**, select the back-end SSL profile created in the preceding steps.
12. Click **Create**.
13. Navigate to **Traffic Management > Load Balancing > Services**.
14. Select an SSL service and click **Edit**.
15. In **Monitors**, click **Add Binding**, select the monitor created in the preceding steps, and click **Bind**.

Configure and bind a secure monitor to an SNI-enabled back-end service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitor**.
2. Add a monitor of type **HTTP-ECV** or **TCP-ECV**, and specify a **Custom Header**.
3. Select **Create**.
4. Navigate to **Traffic Management > Load Balancing > Services**.
5. Select an SSL service and click **Edit**.
6. In **Monitors**, click **Add Binding**, select the monitor created in step 3, and click **Bind**.

Allow the handshake to continue for an unknown server name

Note

This feature is available in release 13.1 build 45.x and later.

When SNI is enabled, and the NetScaler appliance receives a client hello with an unknown server name, it terminates the SSL handshake. From release 13.1 build 45.x, the appliance allows the SSL handshake to continue even for an unknown server name, and leaves the decision to the client to drop or complete the handshake. You can configure this setting on a front-end SSL profile when SNI is **ENABLED** using the `allowUnknownSNI` parameter.

Keep this parameter disabled if you need to use a forward action for an SNI-based rule. For example, you have enabled SNI on virtual server v1 and configured a policy to forward all requests for a specific domain (www.example.com) to virtual server v2. Earlier, any requests received on v1 for this domain are automatically forwarded to v2. However, if the `allowunknownSNI` parameter is enabled then the request is processed on v1. The parameter must be disabled for the appliance to process the request on v1.

Configure allow unknown SNI using the CLI

At the command prompt, type:

```
set ssl profile default_profile -SNIEnable Enabled -allowUnknownSNI <
DISABLED/ENABLED>
```

The `allowunknownSNI` parameter is disabled by default. As a result, the appliance aborts the handshake for an unknown server name. To enable this setting, type:

```
set ssl profile default_profile -SNIEnable Enabled -allowUnknownSNI
ENABLED
```

Configure allow unknown SNI using the GUI

1. Navigate to **System > Profiles > SSL Profile**.
2. If you add a profile, select **FrontEnd** in the **SSL Profile Type** list. Otherwise, you can edit an existing front-end profile.
3. Select **Allow Unknown SNI**.
4. Click **OK** and then click **Done**.

Add or update a certificate-key pair

Notes:

If you don't have an existing certificate and key, see [Create a certificate](#).

To create an ECDSA certificate-key pair, click [Create an ECDSA certificate-key pair](#).

Password protected certificate-key pairs are always added successfully. In builds earlier to 13.0 build 79.x, if a strong password option was enabled on a NetScaler appliance, sometimes the password protected certificate-key pairs were not added. However, the certificate-key configuration is lost if you downgrade to an earlier build. Also, in the NITRO API response for certificate-key pairs, the `passplain` variable is sent instead of the `passcrypt` variable.

For any SSL transaction, the server needs a valid certificate and the corresponding private and public key pair. The SSL data is encrypted with the server's public key, which is available through the server's certificate. Decryption requires the corresponding private key. The password of the private key used while adding an SSL certificate-key pair is saved using a unique encryption key for each NetScaler appliance.

The ADC appliance offloads SSL transactions from the server. Therefore, the server's certificate and private key must be present on the appliance, and the certificate must be paired with its corresponding private key. This certificate-key pair must be bound to the virtual server that processes the SSL transactions.

Note: The default certificate on a NetScaler appliance is 2048 bits. In earlier builds, the default certificate was 512 bits or 1024 bits. After upgrading to release 11.0, you must delete all your old certificate-key pairs starting with "ns-", and then restart the appliance to automatically generate a 2048-bit default certificate.

Both the certificate and the key must be in local storage on the NetScaler appliance before they can be added to the appliance. If your certificate or key file is not on the appliance, upload it to the appliance before you create the pair.

Important: Certificates and keys are stored in the `/nsconfig/ssl` directory by default. If your certificates or keys are stored in any other location, you must provide the absolute path to the files on the NetScaler appliance. The NetScaler FIPS appliances do not support external keys (non-FIPS keys). On a FIPS appliance, you cannot load keys from a local storage device such as a hard disk or flash memory. The FIPS keys must be present in the Hardware Security Module (HSM) of the appliance.

Only RSA keys are supported on NetScaler appliances.

Set the notification period and enable the expiry monitor to issue a prompt before the certificate expires.

The NetScaler appliance supports the following input formats of the certificate and the private-key files:

- PEM - Privacy Enhanced Mail
- DER - Distinguished Encoding Rule
- PFX - Personal Information Exchange

The software automatically detects the format. Therefore, you are no longer required to specify the

format in the inform parameter. If you do specify the format (correct or incorrect), the software ignores it. The format of the certificate and the key file must be the same.

Note: A certificate must be signed by using one of the following hash algorithms:

- MD5
- SHA-1
- SHA-224
- SHA-256
- SHA-384
- SHA-512

An MPX appliance supports certificates of 512 or more bits, up to the following sizes:

- 4096-bit server certificate on the virtual server
- 4096-bit client certificate on the service
- 4096-bit CA certificate (includes intermediate and root certificates)
- 4096-bit certificate on the back-end server
- 4096-bit client certificate (if client authentication is enabled on the virtual server)

A VPX virtual appliance supports certificates of 512 or more bits, up to the following sizes:

- 4096-bit server certificate on the virtual server
- 4096-bit client certificate on the service
- 4096-bit CA certificate (includes intermediate and root certificates)
- 4096-bit certificate on the back-end server
- 4096-bit client certificate (if client authentication is enabled on the virtual server)

The following table shows the RSASSA-PSS parameter sets supported by the NetScaler appliance. RSASSA-PSS algorithms are supported in the X.509 certificate path validation.

Public Key OID	Mask Generation Function (MGF)	MGF Digest Function	Signature Digest Function	Salt Length
rsaEncryption	MGF1	SHA-256	SHA-256	32 bytes
rsaEncryption	MGF1	SHA-384	SHA-384	48 bytes
rsaEncryption	MGF1	SHA-512	SHA-512	64 bytes

Note

A NetScaler SDX appliance supports certificates of 512 or more bits. Each NetScaler VPX instance hosted on the appliance supports the preceding certificate sizes for a VPX virtual appliance. However, if an SSL chip is assigned to an instance, that instance supports the certificate sizes sup-

ported by an MPX appliance.

Add a certificate-key pair by using the CLI

At the command prompt, type the following commands to add a certificate-key pair and verify the configuration:

```

1 add ssl certKey <certkeyName> -cert <string>[(-key <string> [-password
  ]) | -fipsKey <string>] [-inform ( DER | PEM )] [<passplain>] [-
  expiryMonitor ( ENABLED | DISABLED ) [-notificationPeriod <
  positive_integer>]]
2
3 show ssl certKey [<certkeyName>]
```

Example:

```

1 add ssl certKey sslckey -cert server_cert.pem -key server_key.pem -
  password ssl -expiryMonitor ENABLED -notificationPeriod 30
2 Done
3 Note: For FIPS appliances, replace -key with -fipskey
4
5 show ssl certKey sslckey
6     Name: sslckey           Status: Valid,   Days to expiration
7         :8418
8     Version: 3
9     Serial Number: 01
10    Signature Algorithm: md5WithRSAEncryption
11    Issuer:   C=US,ST=SJ,L=SJ,O=NS,OU=NSSL,CN=www.root.com
12    Validity
13        Not Before: Jul 15 02:25:01 2005 GMT
14        Not After  : Nov 30 02:25:01 2032 GMT
15    Subject:  C=US,ST=SJ,L=SJ,O=NS,OU=NSSL,CN=www.server.com
16    Public Key Algorithm: rsaEncryption
17    Public Key size: 2048
17 Done
```

Update or remove a certificate-key pair by using the CLI

To modify the expiry monitor or notification period in a certificate-key pair, use the `set ssl certkey` command. To replace the certificate or key in a certificate-key pair, use the `update ssl certkey` command. The `update ssl certkey` command has an extra parameter for overriding the domain check. For both commands, enter the name of an existing certificate-key pair. To remove an SSL certificate-key pair, use the `rm ssl certkey` command, which accepts only the `<certkeyName>` argument.

Example:

```

1 set ssl certKey <certkeyName> [-expiryMonitor ( ENABLED | DISABLED )]
```

```
2     [-notificationPeriod <positive_integer>]]
3
4 update ssl certKey <certkeyName> [-cert <string> [-password]] [-key
5     <string> | -fipsKey <string>] [-inform <inform>] [-noDomainCheck
    ]
```

Add or update a certificate-key pair by using the GUI

1. Navigate to **Traffic Management > SSL > Certificates > Server**.
2. Enter the values for the following parameters and click **Install**.
 - Certificate-Key Pair Name - Name for the certificate and private-key pair.
 - Certificate File Name - Signed certificate received from the certificate authority.
 - Key File Name - Name of and, optionally, the path to the private-key file that is used to form the certificate-key pair.

Log certificate-key pair loading failure during reboot

After a certificate file or a private key file is uploaded into the NetScaler memory, any changes to the source files are not reflected unless the appliance is rebooted. The reboot might fail for reasons, such as the following:

- The certificate file is updated but the key file is not updated.
- The updated file is corrupted.
- The new key file is password protected.
- The password has changed.

These failures are logged in `/var/log/ns.log`. You can view the file using the `tail -f /var/log/ns.log` command.

To log this failure, the following changes are introduced:

1. A digest attribute is created for a certificate-key pair when you add or update a certificate file and a key file to the appliance. If there is no key file (for example in a FIPS or an HSM config), a digest is created only for the certificate file.

Note:

The certificate file name and the private-key file name must include only the following characters:

- ```
1 - a to z (lower case)
2 - A to Z (upper case)
```

```
3 - 0 to 9 (numbers)
4 - / (forward slash)
5 - . (period)
6 - _ (underscore)
7 - : (colon)
8 - - (hyphen)
```

2. When the appliance reboots, the digest in the configuration file is compared with the digest calculated for the certificate and key file (optional) on the appliance. If there is a mismatch, an error message is logged.

## Bind the certificate-key pair to the SSL virtual server

Important: Link any intermediate certificates to this certificate before binding the certificate to an SSL virtual server. For information about linking certificates, see [Create a chain of certificates](#).

The certificate being used for processing SSL transactions must be bound to the virtual server that receives the SSL data. If you have multiple virtual servers receiving SSL data, a valid certificate-key pair must be bound to each of them.

Use a valid, existing SSL certificate that you have uploaded to the NetScaler appliance. As an alternative for testing purposes, create your own SSL certificate on the appliance. Intermediate certificates created by using a FIPS key on the appliance cannot be bound to an SSL virtual server.

During the SSL handshake, in the certificate request message during client authentication, the server lists the distinguished names (DN) of all the certificate authorities (CA) bound to the server. The server accepts a client certificate only from this list. If you do not want the DN name of a specific CA certificate to be sent to the SSL client, set the `skipCA` flag. This setting indicates that the particular CA certificate's distinguished name must not be sent to the SSL client.

For details on how to create your own certificate, see [Managing Certificates](#).

Note: Citrix recommends that you use only valid SSL certificates issued by a trusted certificate authority.

## Bind an SSL certificate-key pair to a virtual server by using the CLI

At the command prompt, type the following commands to bind an SSL certificate-key pair to a virtual server and verify the configuration:

```
1 - bind ssl vserver <vServerName> -certkeyName <certificate-KeyPairName>
 > -CA -skipCAName
2 - show ssl vserver <vServerName>
```

### Example:

```
1 bind ssl vs vs1 -certkeyName cert2 -CA -skipCAName
2 Done
3 sh ssl vs vs1
4
5 Advanced SSL configuration for VServer vs1:
6
7 DH: DISABLED
8
9 Ephemeral RSA: ENABLED Refresh Count: 0
10
11 Session Reuse: ENABLED Timeout: 120 seconds
12
13 Cipher Redirect: DISABLED
14
15 SSLv2 Redirect: DISABLED
16
17 ClearText Port: 0
18
19 Client Auth: DISABLED
20
21 SSL Redirect: DISABLED
22
23 Non FIPS Ciphers: DISABLED
24
25 SNI: DISABLED
26
27 OCSP Stapling: DISABLED
28
29 HSTS: DISABLED
30
31 IncludeSubDomains: NO
32
33 HSTS Max-Age: 0
34
35 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1: DISABLED
36 TLSv1.2: DISABLED
37
38 Push Encryption Trigger: Always
39
40 Send Close-Notify: YES
41
42 Strict Sig-Digest Check: DISABLED
43
44 ECC Curve: P_256, P_384, P_224, P_521
45
46 1) CertKey Name: cert1 CA Certificate OCSPCheck: Optional CA_Name Sent
47 2) CertKey Name: cert2 CA Certificate OCSPCheck: Optional CA_Name
48 Skipped
49 1) Cipher Name: DEFAULT
50
51 Description: Default cipher list with encryption strength >= 128bit
52 Done
```

## Unbind an SSL certificate-key pair from a virtual server by using the CLI

If you try to unbind a certificate-key pair from a virtual server by using the `unbind ssl certKey <certkeyName>` command, an error message appears. The error appears because the syntax of the command has changed. At the command prompt, type the following command:


```
1 unbind ssl vserver <vServerName> -certkeyName <string>
```

### Example:


```
1 unbind ssl vserver vssl -certkeyName sslkey
```

## Bind an SSL certificate-key pair to a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers** and open an SSL virtual server. Click inside the **Certificate** section.

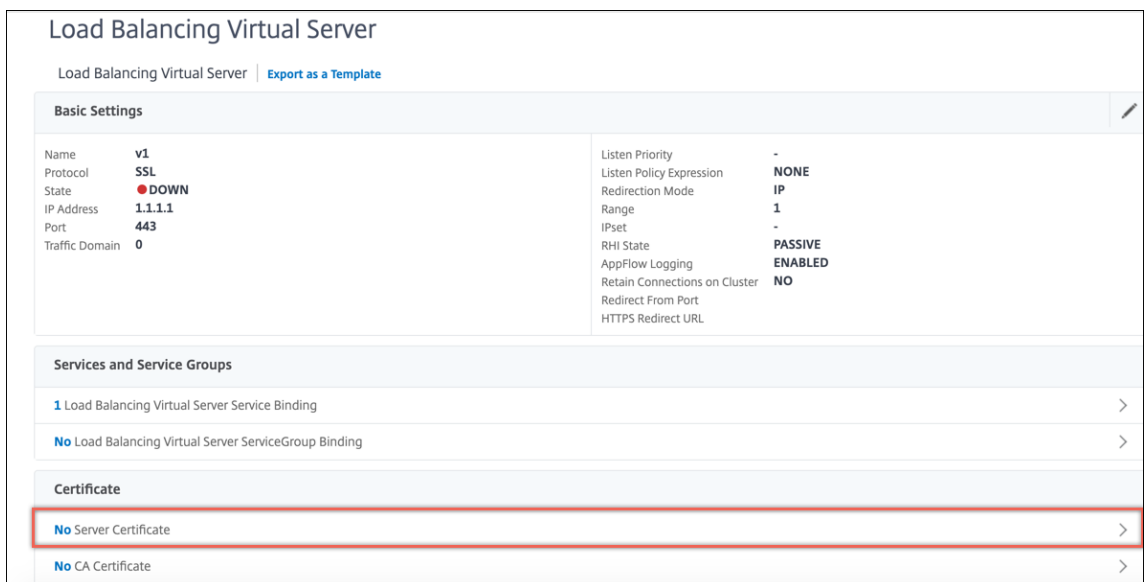

2. Click the arrow to select the certificate-key pair.

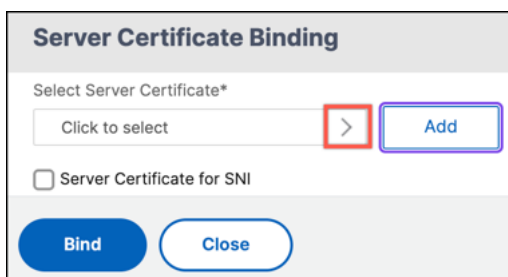

3. Select the certificate-key pair from the list.

4. Bind the certificate-key pair to the virtual server. To add a server certificate as an SNI certificate, select **Server Certificate for SNI**.

## SSL virtual server parameters

Set the advanced SSL configuration for an SSL virtual server. You can also set many of these parameters in an SSL profile. For information about the parameters that can be set in an SSL profile, see [SSL profile parameters](#).

### Set SSL virtual server parameters by using the CLI

At the command prompt, type:

```
1 set ssl vserver <vServerName>@ [-clearTextPort <port>] [-dh (ENABLED |
 DISABLED) -dhFile <string>] [-dhCount <positive_integer>][-
 dhKeyExpSizeLimit (ENABLED | DISABLED)] [-eRSA (ENABLED |
 DISABLED)] [-eRSACount <positive_integer>]] [-sessReuse (ENABLED |
 DISABLED)] [-sessTimeout <positive_integer>]] [-cipherRedirect (
 ENABLED | DISABLED)] [-cipherURL <URL>]] [-sslv2Redirect (ENABLED |
 DISABLED)] [-sslv2URL <URL>]] [-clientAuth (ENABLED | DISABLED)] [-
 clientCert (Mandatory | Optional)]] [-sslRedirect (ENABLED |
 DISABLED)] [-redirectPortRewrite (ENABLED | DISABLED)] [-ssl2 (
 ENABLED | DISABLED)] [-ssl3 (ENABLED | DISABLED)] [-tls1 (
 ENABLED | DISABLED)] [-tls11 (ENABLED | DISABLED)] [-tls12 (
 ENABLED | DISABLED)] [-tls13 (ENABLED | DISABLED)] [-SNIEnable (
 ENABLED | DISABLED)] [-ocspStapling (ENABLED | DISABLED)] [-
 pushEncTrigger <pushEncTrigger>] [-sendCloseNotify (YES | NO)] [-
 dtlsProfileName <string>] [-sslProfile <string>] [-HSTS (ENABLED |
 DISABLED)] [-maxage <positive_integer>] [-IncludeSubdomains (YES |
 NO)] [-strictSigDigestCheck (ENABLED | DISABLED)] [-
 zeroRttEarlyData (ENABLED | DISABLED)] [-
 tls13SessionTicketsPerAuthContext <positive_integer>] [-
 dheKeyExchangeWithPsk (YES | NO)]
```

### Diffie-Hellman (DH) parameters

To use ciphers on the appliance that require a DH key exchange to set up the SSL transaction, enable DH key exchange on the appliance. Configure other settings based on your network.

To list the ciphers for which DH parameters must be set by using the CLI, type: `sh cipher DH`.

To list the ciphers for which DH parameters must be set by using the configuration utility, navigate to **Traffic Management > SSL > Cipher Groups**, and double-click **DH**.

For details on how to enable DH key exchange, see [Generate a Diffie-Hellman \(DH\) key](#).

**Configure DH parameters by using the CLI** At the command prompt, type the following commands to configure DH parameters and verify the configuration:

```
1 - `set ssl vserver <vserverName> -dh <Option> -dhCount <
 RefreshCountValue> -filepath <string>
2 - show ssl vserver <vServerName>`
```

**Example:**

```
1 set ssl vserver vs-server -dh ENABLED -dhFile /nsconfig/ssl/ns-server.
 cert -dhCount 1000
2 Done
3
4 show ssl vserver vs-server
5
6 Advanced SSL configuration for VServer vs-server:
7 DH: ENABLED
8 Ephemeral RSA: ENABLED Refresh Count: 1000
9 Session Reuse: ENABLED Timeout: 120 seconds
10 Cipher Redirect: DISABLED
11 SSLv2 Redirect: DISABLED
12 ClearText Port: 0
13 Client Auth: DISABLED
14 SSL Redirect: DISABLED
15 Non FIPS Ciphers: DISABLED
16 SNI: DISABLED
17 OCSP Stapling: DISABLED
18 HSTS: DISABLED
19 HSTS IncludeSubDomains: NO
20 HSTS Max-Age: 0
21 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.2:
 ENABLED TLSv1.2: ENABLED
22
23 1) Cipher Name: DEFAULT
24 Description: Predefined Cipher Alias
25 Done
```

**Configure DH parameters by using the GUI**

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In the **SSL Parameters** section, select **Enable DH Param**, and specify a refresh count and file path.

**Ephemeral RSA**

Ephemeral RSA allows export clients to communicate with the secure server even if the server certificate does not support export clients (1024-bit certificate). If you want to prevent export clients from accessing the secure web object or resource, you need to disable ephemeral RSA key exchange.



By default, this feature is enabled on the NetScaler appliance, with the refresh count set to zero (infinite use).

**Note:**

The ephemeral RSA key is automatically generated when you bind an export cipher to an SSL or TCP-based SSL virtual server or service. When you remove the export cipher, the eRSA key is not deleted. It is reused later when another export cipher is bound to an SSL or TCP-based SSL virtual server or service. The eRSA key is deleted when the system restarts.

**Configure ephemeral RSA by using the CLI** At the command prompt, type the following commands to configure ephemeral RSA and verify the configuration:

```
1 set ssl vservice <vServerName> -eRSA (enabled | disabled) -eRSACount <
 positive_integer>
2 show ssl vservice <vServerName>
```

**Example:**

```
1 set ssl vservice vs-server -eRSA ENABLED -eRSACount 1000
2 Done
3
4 show ssl vservice vs-server
5
6 Advanced SSL configuration for VServer vs-server:
7 DH: DISABLED
8 Ephemeral RSA: ENABLED Refresh Count: 1000
9 Session Reuse: ENABLED Timeout: 120 seconds
10 Cipher Redirect: DISABLED
11 SSLv2 Redirect: DISABLED
12 ClearText Port: 0
13 Client Auth: DISABLED
14 SSL Redirect: DISABLED
15 Non FIPS Ciphers: DISABLED
16 SNI: DISABLED
17 OCSP Stapling: DISABLED
18 HSTS: DISABLED
19 HSTS IncludeSubDomains: NO
20 HSTS Max-Age: 0
21 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.2:
 ENABLED TLSv1.2: ENABLED
22
23 1) Cipher Name: DEFAULT
24 Description: Predefined Cipher Alias
25 Done
```

**Configure ephemeral RSA by using the GUI**

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.

2. In the **SSL Parameters** section, select **Enable Ephemeral RSA**, and specify a refresh count.

### Session reuse

For SSL transactions, establishing the initial SSL handshake requires CPU-intensive public key encryption operations. Most handshake operations are associated with the exchange of the SSL session key (client key exchange message). When a client session is idle for some time and is then resumed, the SSL handshake is typically conducted all over again. With session reuse enabled, session key exchange is avoided for session resumption requests received from the client.

Session reuse is enabled on the NetScaler appliance by default. Enabling this feature reduces server load, improves response time, and increases the number of SSL transactions per second (TPS) that the server can support.

**Configure session reuse by using the CLI** At the command prompt, type the following commands to configure session reuse and verify the configuration:

```
1 set ssl vserver <vServerName> -sessReuse (ENABLED | DISABLED) -
 sessTimeout <positive_integer>
2 show ssl vserver <vServerName>
```

### Example:

```
1 set ssl vserver vs-ssl -sessreuse enabled -sesstimeout 600
2 Done
3
4 show ssl vserver vs-ssl
5
6 Advanced SSL configuration for VServer vs-ssl:
7 DH: DISABLED
8 Ephemeral RSA: ENABLED Refresh Count: 1000
9 Session Reuse: ENABLED Timeout: 600 seconds
10 Cipher Redirect: DISABLED
11 SSLv2 Redirect: DISABLED
12 ClearText Port: 0
13 Client Auth: DISABLED
14 SSL Redirect: DISABLED
15 Non FIPS Ciphers: DISABLED
16 SNI: DISABLED
17 OCSP Stapling: DISABLED
18 HSTS: DISABLED
19 HSTS IncludeSubDomains: NO
20 HSTS Max-Age: 0
21 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.2:
 ENABLED TLSv1.2: ENABLED
22
23 1) CertKey Name: Auth-Cert-1 Server Certificate
24
```

```
25 1) Cipher Name: DEFAULT
26 Description: Predefined Cipher Alias
27 Done
```

### Configure session reuse by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In the **SSL Parameters** section, select **Enable Session Reuse**, and specify a time for which to keep the session active.

### SSL protocol settings

The NetScaler appliance supports the SSLv3, TLSv1, TLSv1.1, and TLSv1.2 protocols. Each of these protocols can be set on the appliance as required by your deployment and the type of clients that connect to the appliance.

TLS protocol versions 1.0, 1.1, and 1.2 are more secure than older versions of the TLS/SSL protocol. However, to support legacy systems, many TLS implementations maintain backward compatibility with the SSLv3 protocol. In an SSL handshake, the highest protocol version common to the client and the SSL virtual server configured on the NetScaler appliance is used.

In the first handshake attempt, a TLS client offers the highest protocol version that it supports. If the handshake fails, the client offers a lower protocol version. For example, if a handshake with TLS version 1.1 is not successful, the client attempts to renegotiate by offering the TLSv1.0 protocol. If that attempt is unsuccessful, the client reattempts with the SSLv3 protocol. A “man in the middle” (MITM) attacker can break the initial handshake and trigger renegotiation with the SSLv3 protocol, and then exploit a vulnerability in SSLv3. To mitigate such attacks, you can disable SSLv3 or not allow renegotiation using a downgraded protocol. However, this approach might not be practical if your deployment includes legacy systems. An alternative is to recognize a signaling cipher suite value (TLS\_FALLBACK\_SCSV) in the client request.

A TLS\_FALLBACK\_SCSV value in a client hello message indicates to the virtual server that the client has previously attempted to connect with a higher protocol version and that the current request is a fallback. If the virtual server detects this value, and it supports a version higher than the one indicated by the client, it rejects the connection with a fatal alert. The handshake succeeds if one of the following conditions is met:

- TLS\_FALLBACK\_SCSV value is not included in the client hello message.
- The protocol version in the client hello is the highest protocol version supported by the virtual server.

**Configure SSL protocol support by using the CLI** At the command prompt, type the following commands to configure SSL protocol support and verify the configuration:

```

1 set ssl vserver <vServerName> -ssl2 (ENABLED | DISABLED) -ssl3 (
 ENABLED | DISABLED) -tls1 (ENABLED | DISABLED) -tls11 (ENABLED |
 DISABLED) -tls12 (ENABLED | DISABLED)
2
3 show ssl vserver <vServerName>

```

**Example:**

```

1 set ssl vserver vs-ssl -tls11 ENABLED -tls12 ENABLED
2 Done
3
4 sh ssl vs vs-ssl
5
6 Advanced SSL configuration for VServer vs-ssl:
7 DH: DISABLED
8 Ephemeral RSA: ENABLED Refresh
9 Count: 0
10 Session Reuse: ENABLED Timeout
11 : 120 seconds
12 Cipher Redirect: DISABLED
13 SSLv2 Redirect: DISABLED
14 ClearText Port: 0
15 Client Auth: DISABLED
16 SSL Redirect: DISABLED
17 Non FIPS Ciphers: DISABLED
18 SNI: DISABLED
19 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED
20 TLSv1.1: ENABLED TLSv1.2: ENABLED
21 Push Encryption Trigger: Always
22 Send Close-Notify: YES
23 1 bound certificate:
24
25 1) CertKey Name: mycert Server Certificate
26 1 configured cipher:
27
28 1) Cipher Name: DEFAULT
29 Description: Predefined Cipher Alias
30
31 Done

```

**Configure SSL protocol support by using the GUI**

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In the **SSL Parameters** section, select a protocol to enable.

## Close-notify

A close-notify is a secure message that indicates the end of SSL data transmission. A close-notify setting is required at the global level. This setting applies to all virtual servers, services, and service groups. For information about the global setting, see the “Global SSL parameters” section later in this page.

In addition to the global setting, you can set the close-notify parameter at the virtual server, service, or service group level. You therefore have the flexibility of setting the parameter for one entity and unsetting it for another entity. However, make sure that you set this parameter at the global level. Otherwise, the setting at the entity level does not apply.

**Configure close-notify at the entity level by using the CLI** At the command prompt, type any of the following commands to configure the close-notify feature and verify the configuration:

1. To configure at the virtual server level, type:

```
1 set ssl vserver <vServerName> -sendCloseNotify (YES | NO)
2 show ssl vserver <vServerName>
```

1. To configure at the service level, type:

```
1 set ssl service <serviceName> -sendCloseNotify (YES | NO)
2 show ssl service <serviceName>
```

1. To configure at the service group level, type:

```
1 set ssl serviceGroup <serviceGroupName> -sendCloseNotify (YES | NO)
2 show ssl serviceGroup <serviceGroupName>
```

### Example:

```
1 set ssl vserver sslsvr -sendCloseNotify YES
2
3 Done
```

### Configure the close-notify feature at the entity level by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In the **SSL Parameters** section, select **Send Close-Notify**.

## Global SSL parameters

Advanced customization of your SSL configuration addresses specific issues. You can use the `set ssl parameter` command or the configuration utility to specify the following:

- Quantum size to be used for SSL transactions.
- CRL memory size.
- OCSP cache size.
- Deny SSL renegotiation.
- Set the PUSH flag for decrypted, encrypted, or all records.
- Drop requests if the client initiates the handshake for one domain and sends an HTTP request for another domain.
- Set the time after which encryption is triggered.  
Note: The time that you specify applies only if you use the `set ssl vsrver` command or the configuration utility to set timer-based encryption.
- NDCPP compliance certificate check—Applies when the appliance acts as a client (back-end connection). During certificate verification, ignore the common name if SAN is present in the SSL certificate.
- Enable a heterogeneous cluster of Cavium chip-based appliances, such as MPX 14000, and Intel Coletto chip-based appliances, such as MPX 15000 appliances with a different number of packet engines.
- Enable secure renegotiation at the back end.
- Adaptive SSL traffic control.

### Configure global SSL parameters by using the CLI

At the command prompt, type the following commands to configure advanced SSL settings and verify the configuration:

```

1 set ssl parameter [-quantumSize <quantumSize>] [-crlMemorySizeMB <
 positive_integer>] [-strictCAChecks (YES | NO)] [-sslTriggerTimeout
 <positive_integer>] [-sendCloseNotify (YES | NO)] [-
 encryptTriggerPktCount <positive_integer>] [-denySSLReneg <
 denySSLReneg>] [-insertionEncoding (Unicode|UTF-8)] [-ocspCacheSize
 <positive_integer>] [- pushFlag <positive_integer>] [-
 dropReqWithNoHostHeader (YES | NO)] [-pushEncTriggerTimeout <
 positive_integer>] [-ndcppComplianceCertCheck (YES | NO)] [-
 heterogeneousSSLHW (ENABLED | DISABLED)]
2 show ssl parameter

```

### Example:

```

1 set ssl parameter -quantumSize 8 -crlMemorySizeMB 256 -strictCAChecks
 no -ssltriggerTimeout 100 -sendClosenotify no -
 encryptTriggerPktCount 45 -denySSLReneg NONSECURE -insertionEncoding
 unicode -ocspCacheSize 10 -pushFlag 3 -dropReqWithNoHostHeader YES
 -pushEncTriggerTimeout 100 ms -ndcppComplianceCertCheck YES
2 Done
3
4 show ssl parameter

```


```

5 Advanced SSL Parameters
6 -----
7 SSL quantum size : 8 KB
8 Max CRL memory size : 256 MB
9 Strict CA checks : NO
10 Encryption trigger timeout : 100 ms
11 Send Close-Notify : NO
12 Encryption trigger packet count : 45
13 Deny SSL Renegotiation : NONSECURE
14 Subject/Issuer Name Insertion Format : Unicode
15 OCSP cache size : 10 MB
16 Push flag : 0x3 (On
 every decrypted and encrypted record)
17 Strict Host Header check for SNI enabled SSL sessions : YES
18 PUSH encryption trigger timeout : 100 ms
19 Crypto Device Disable Limit : 0
20 Global undef action for control policies : CLIENTAUTH
21 Global undef action for data policies : NOOP
22 Default profile : DISABLED
23 SSL Insert Space in Certificate Header : YES
24 Disable TLS 1.1/1.2 for SSL_BRIDGE secure monitors : NO
25 Disable TLS 1.1/1.2 for dynamic and VPN services : NO
26 Software Crypto acceleration CPU Threshold : 0
27 Hybrid FIPS Mode : DISABLED
28 Signature and Hash Algorithms supported by TLS1.2 : ALL
29 SSL Interception Error Learning and Caching : DISABLED
30 SSL Interception Maximum Error Cache Memory : 0 Bytes
31 NDCPP Compliance Certificate Check : YES
32 Heterogeneous SSL HW (Cavium and Intel Based) : ENABLED
33 Done


```

**Configure NDcPP compliance certificate check by using the GUI**

1. Navigate to **Traffic Management > SSL** and, in the **Settings** group, select **Change advanced SSL settings**.

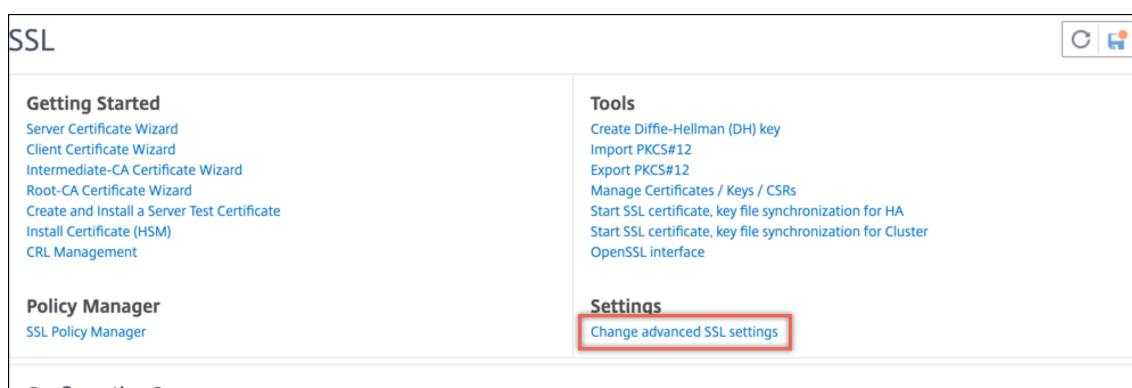

2. Select **NDCPP Compliance Certificate Check**. Click **OK**.

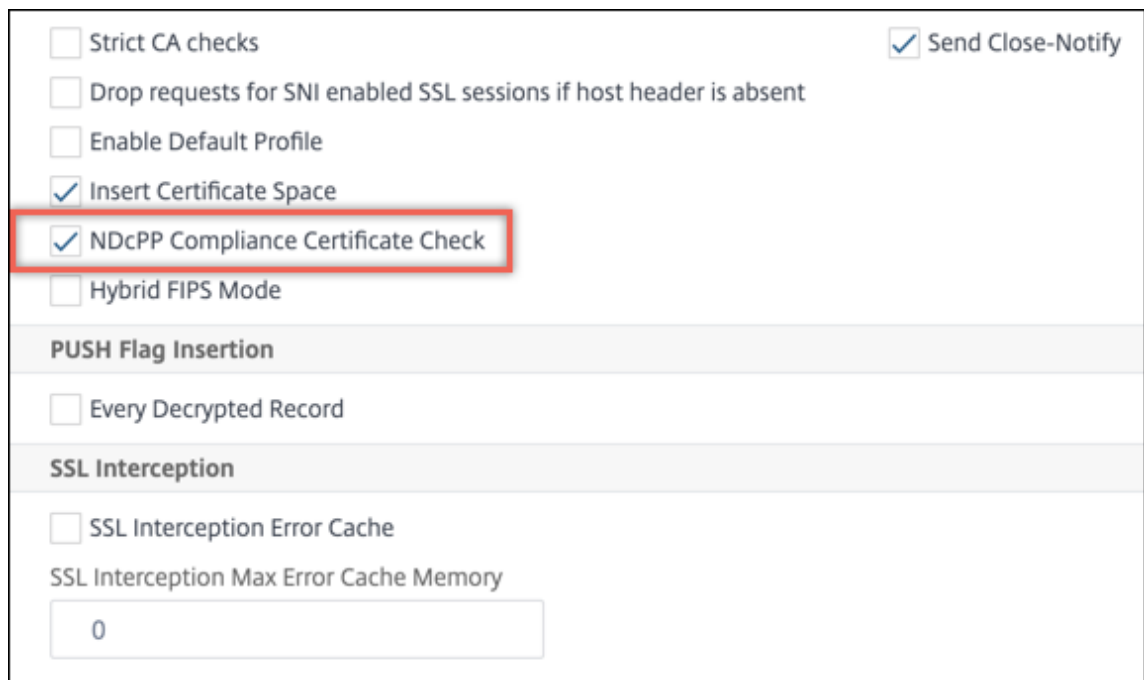

Strict CA checks  Send Close-Notify

Drop requests for SNI enabled SSL sessions if host header is absent

Enable Default Profile

Insert Certificate Space

NDcPP Compliance Certificate Check

Hybrid FIPS Mode

**PUSH Flag Insertion**

Every Decrypted Record

**SSL Interception**

SSL Interception Error Cache

SSL Interception Max Error Cache Memory

### Support for secure renegotiation at the back end of a NetScaler appliance

**Note:** This feature is supported in release 13.0 build 58.x and later. In earlier releases and builds, only non-secure renegotiation was supported on the back end.

The feature is supported on the following platforms:

- VPX
- MPX platforms containing N2 or N3 chips
- Intel Coletto SSL chip-based platforms

The feature is not yet supported on the FIPS platform.

Secure renegotiation is denied by default on the back end of an ADC appliance. That is, the `denySSLReneg` parameter is set to ALL (default).

To allow secure renegotiation on the back end, select from one of the following settings for the `denySSLReneg` parameter:

- NO
- FRONTEND\_CLIENT
- FRONTEND\_CLIENTSERVER
- NONSECURE

**Enable secure renegotiation by using the CLI** At the command prompt, type:

```
set ssl parameter -denySSLReneg <denySSLReneg>
```



**Example:**


```

1 set ssl parameter -denySSLReneg NONSECURE
2 Done
3
4 sh ssl parameter
5 Advanced SSL Parameters
6 -----
7 SSL quantum size : 8 KB
8 Max CRL memory size : 256 MB
9 Strict CA checks : NO
10 Encryption trigger timeout : 100 ms
11 Send Close-Notify : YES
12 Encryption trigger packet count : 45
13 Deny SSL Renegotiation : NONSECURE
14 Subject/Issuer Name Insertion Format : Unicode
15 OCSP cache size : 10 MB
16 Push flag : 0x0 (Auto)
17 Strict Host Header check for SNI enabled SSL sessions : NO
18 Match HTTP Host header with SNI : CERT
19 PUSH encryption trigger timeout : 1 ms
20 Crypto Device Disable Limit : 0
21 Global undef action for control policies : CLIENTAUTH
22 Global undef action for data policies : NOOP
23 Default profile : ENABLED
24 SSL Insert Space in Certificate Header : YES
25 Disable TLS 1.1/1.2 for SSL_BRIDGE secure monitors : NO
26 Disable TLS 1.1/1.2 for dynamic and VPN services : NO
27 Software Crypto acceleration CPU Threshold : 0
28 Hybrid FIPS Mode : DISABLED
29 Signature and Hash Algorithms supported by TLS1.2 : ALL
30 SSL Interception Error Learning and Caching : DISABLED
31 SSL Interception Maximum Error Cache Memory : 0 Bytes
32 NDCPP Compliance Certificate Check : NO
33 Heterogeneous SSL HW (Cavium and Intel Based) : DISABLED
34 Crypto Operation Queue Limit : 150%
35 Done

```

**Enable secure renegotiation by using the GUI**

1. Navigate to **Traffic Management > SSL > Change advanced SSL settings**.
2. Set **Deny SSL Renegotiation** to any value other than ALL.

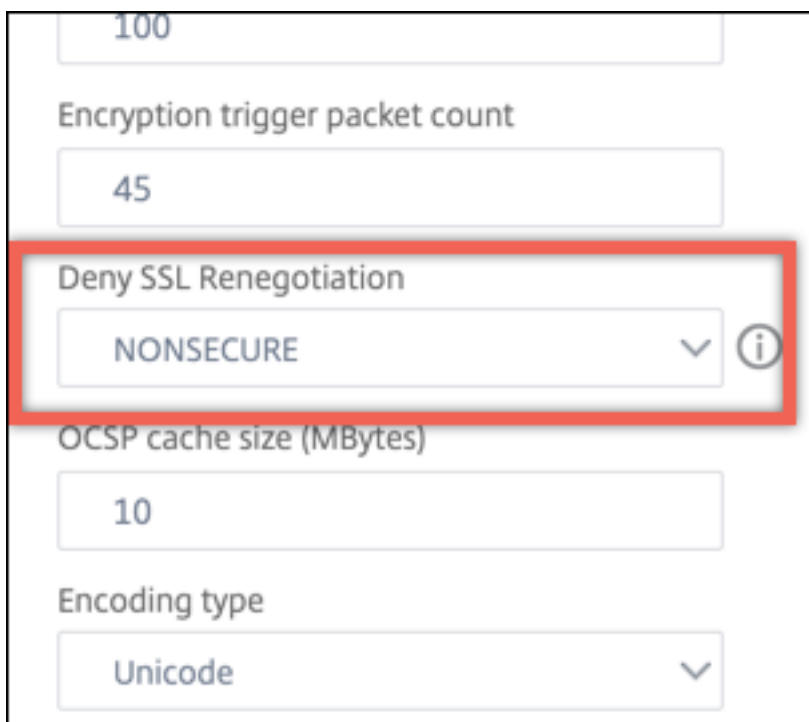

The image shows a configuration window with several fields. The 'Deny SSL Renegotiation' field is highlighted with a red border and contains the value 'NONSECURE'. Other visible fields include 'Encryption trigger packet count' (100), '45', 'OCSP cache size (MBytes)' (10), and 'Encoding type' (Unicode).

### Adaptive SSL traffic control

**Note:** This feature is supported in release 13.0 build 58.x and later.

When high traffic is received on the appliance and the crypto acceleration capacity is full, the appliance starts queuing connections to process later. Currently, the size of this queue is fixed at 64 K and the appliance starts dropping connections if this value is exceeded.

Users can configure a value that is a percentage of the actual capacity. As a result, the appliance drops new connections if the number of elements in the queue is greater than the limit that is adaptively and dynamically calculated. This approach controls incoming SSL connections and prevents excessive resource consumption and other failures, such as load balancing monitoring failure or slow response to secure applications, on the appliance.

If the queue is empty, the appliance can continue to accept connections. If the queue is not empty, the crypto system has reached its capacity and the appliance starts queuing connections.

The limit is calculated based on:

- The actual capacity of the appliance.
- Value configured by the user as a percentage of the actual capacity. The default value is set to 150%.

For example, if the actual capacity of an appliance is 1000 operations/second at a given time and the default percentage is configured, the limit after which the appliance drops connections is 1500 (150%

of 1000).


**To configure the operation queue limit by using the CLI** At the command prompt, type:

```
set ssl parameter -operationQueueLimit <positive_integer>
```

**Operation Queue Limit** - Limit in percentage of capacity of the crypto operations queue beyond which new SSL connections are not accepted until the queue is reduced. Default value: 150. Minimum value: 0. Maximum value: 10000.

**To configure the operation queue limit by using the GUI**

1. Navigate to **Traffic Management > SSL**.
2. In **Settings**, click **Change advanced SSL settings**.
3. Type a value in **Operation Queue Limit**. The default is 150.
4. Click **OK**.

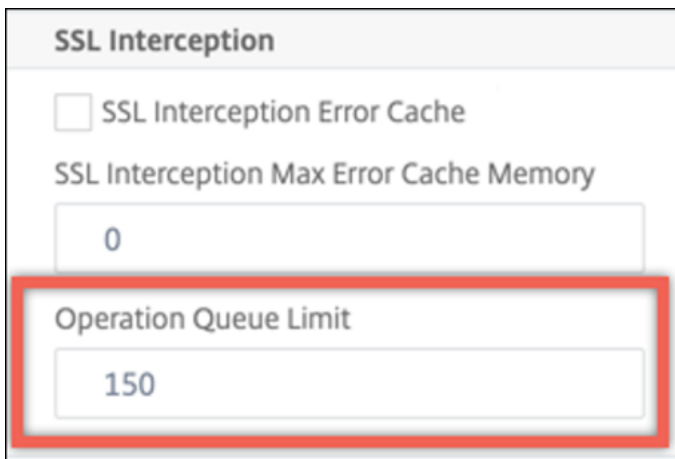

The screenshot shows the 'SSL Interception' settings window. It includes a checkbox for 'SSL Interception Error Cache', a text input for 'SSL Interception Max Error Cache Memory' with the value '0', and a text input for 'Operation Queue Limit' with the value '150'. The 'Operation Queue Limit' field is highlighted with a red border.

## Heterogeneous cluster deployments

You can form a heterogeneous cluster deployment of NetScaler MPX appliances with a different number of packet engines by setting the SSL parameter “Heterogeneous SSL HW” to ENABLED. For example, to form a cluster of Cavium chip-based appliances (MPX 14000 or similar) and Intel Coletto chip-based appliances (MPX 15000 or similar), enable the SSL parameter “Heterogeneous SSL HW.” To form a cluster of platforms using the same chip, keep the default value (DISABLED) for this parameter.

### Notes:

The following features are not supported in a heterogeneous cluster:

- VPX instances hosted on NetScaler SDX appliances.

- SSLv3 protocol on SSL entities, such as virtual server, services, service groups, and internal services.
- Software crypto acceleration CPU threshold (using hardware and software to improve ECDSA and ECDHE cipher performance).


For more information about the platforms supported in a heterogeneous cluster, see <https://docs.citrix.com/en-us/citrix-adc/current-release/clustering/support-for-heterogeneous-cluster.html>.

**Enable a heterogeneous cluster using the CLI** At the command prompt, type:

```
set ssl parameter -heterogeneousSSLHW ENABLED
```

### Enable a heterogeneous cluster using the GUI

1. Navigate to **Traffic Management > SSL** and, in the **Settings** group, select **Change advanced SSL settings**.
2. Select **Heterogeneous SSL HW**. Click **OK**.

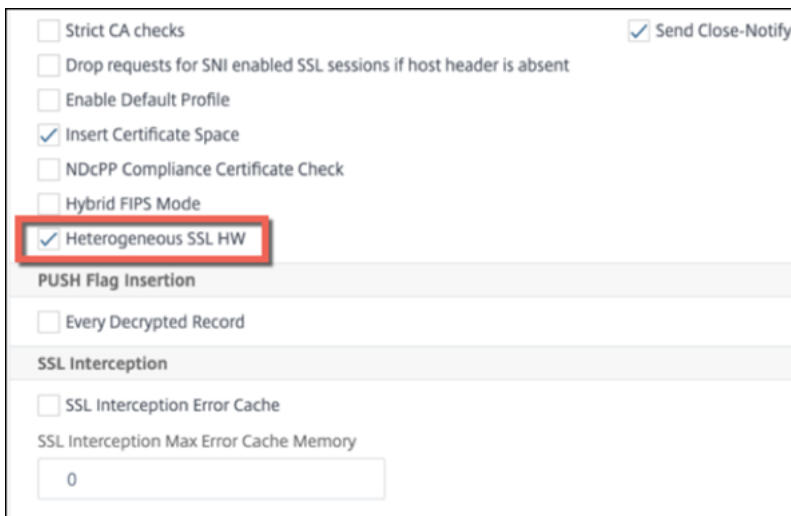

The screenshot shows a configuration window for SSL settings. It contains several checkboxes: 'Strict CA checks', 'Drop requests for SNI enabled SSL sessions if host header is absent', 'Enable Default Profile', 'Insert Certificate Space' (checked), 'NDcPP Compliance Certificate Check', 'Hybrid FIPS Mode', and 'Heterogeneous SSL HW' (checked and highlighted with a red box). There is also a 'Send Close-Notify' checkbox which is checked. Below these are sections for 'PUSH Flag Insertion' (with 'Every Decrypted Record' unchecked) and 'SSL Interception' (with 'SSL Interception Error Cache' unchecked and a text input field for 'SSL Interception Max Error Cache Memory' containing the value '0').

### PUSH flag based encryption trigger mechanism

The encryption trigger mechanism that is based on the PSH TCP flag now enables you to do the following:

- Merge consecutive packets in which the PSH flag is set into a single SSL record, or ignore the PSH flag.
- Perform timer-based encryption, in which the time-out value is set globally by using the `set ssl parameter -pushEncTriggerTimeout <positive_integer>` command.

**Configure PUSH flag-based encryption by using the CLI** At the command prompt, type the following commands to configure PUSH flag-based encryption and verify the configuration:

```
1 set ssl vserver <vServerName> [-pushEncTrigger <pushEncTrigger>]
2
3 show ssl vserver
```

**Example:**

```
1 set ssl vserver vserver1 -pushEncTrigger always
2
3 Done
4
5 sh ssl vserver vserver1
6
7 Advanced SSL configuration for VServer vserver1:
8 DH: DISABLED
9 DH Private-Key Exponent Size Limit: DISABLED Ephemeral
 RSA: ENABLED

 Refresh Count: 0
10 Session Reuse: ENABLED Timeout: 120 seconds
11 Cipher Redirect: DISABLED
12 SSLv2 Redirect: DISABLED
13 ClearText Port: 0
14 Client Auth: DISABLED
15 SSL Redirect: DISABLED
16 Non FIPS Ciphers: DISABLED
17 SNI: DISABLED
18 OCSP Stapling: DISABLED
19 HSTS: DISABLED
20 HSTS IncludeSubDomains: NO
21 HSTS Max-Age: 0
22 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1:
 ENABLED TLSv1.2: ENABLED TLSv1.3: DISABLED
23 Push Encryption Trigger: Always
24 Send Close-Notify: YES
25 Strict Sig-Digest Check: DISABLED
26 Zero RTT Early Data: DISABLED
27 DHE Key Exchange With PSK: NO
28 Tickets Per Authentication Context: 1
29 ECC Curve: P_256, P_384, P_224, P_521
30
31 1) Cipher Name: DEFAULT
32 Description: Default cipher list with encryption strength
 >= 128bit
33 Done
```

**Configure PUSH flag-based encryption by using the GUI**

1. Navigate to **Traffic Management > Load Balancing > Virtual servers** and open an SSL virtual

server.

2. In the **SSL Parameters** section, from the **PUSH Encryption Trigger** list, select a value.

### Support for TLS1.2 signature hash algorithm

The NetScaler appliance is completely TLS1.2 signature hash extension compliant.

In an SSL handshake, a client sends a list of supported signature hash algorithms. The client indicates to the server which signature hash algorithm pairs might be used in the SSL handshake messages (SKE and CCV) by using the “signature\_algorithms” extension. The “extension\_data” field of this extension contains a “supported\_signature\_algorithms” value in the Client Hello message. The SSL handshake proceeds if the server supports one of these signature hash algorithms. If the server does not support any of these algorithms, the connection is dropped.

Similarly, if the server requests a client certificate for client authentication, the Certificate Request message contains a “supported\_signature\_algorithms” value. The client certificate is selected based on this signature hash algorithm.

#### Note:

The NetScaler appliance acts as a server to a client and as a client to the back-end server.

The appliance supports only RSA-SHA1 and RSA-SHA256 on the front end, and RSA-MD5, RSA-SHA1, and RSA-SHA256 on the back end.

The MPX/SDX/VPX appliance supports the following signature hash combinations. On an SDX appliance, if an SSL chip is assigned to a VPX instance, the cipher support of an MPX appliance applies. Otherwise, the normal cipher support of a VPX instance applies.

- On a VPX instance and on an MPX/SDX appliance without N3 chips:
  - RSA-MD5
  - RSA-SHA1
  - RSA-SHA224
  - RSA-SHA256
  - RSA-SHA384
  - RSA-SHA512
- On an MPX/SDX appliance with N3 chips:
  - RSA-MD5
  - RSA-SHA1
  - RSA-SHA224
  - RSA-SHA256
  - RSA-SHA384

- RSA-SHA512
- ECDSA-SHA1
- ECDSA-SHA224
- ECDSA-SHA256
- ECDSA-SHA384
- ECDSA-SHA512

By default, all the signature hash algorithms are enabled. However, you can enable only a few signature hash algorithms by using the following command:

```
1 set ssl parameter -sigDigestType <sigDigestType>
2
3 Parameters
4
5 sigDigestType
6
7 Signature digest algorithms supported by the appliance. The platform
 determines the list of algorithms supported by default.
8
9 On VPX: RSA-MD5 RSA-SHA1 RSA-SHA224 RSA-SHA256 RSA-SHA384
 RSA-
10
11 SHA512
12
13 On MPX with N3 cards: RSA-MD5 RSA-SHA1 RSA-SHA224 RSA-
14
15 SHA256 RSA-SHA384 RSA-SHA512 ECDSA-SHA1 ECDSA-SHA224
 ECDSA-
16
17 SHA256 ECDSA-SHA384 ECDSA-SHA512
18
19 Other MPX Platforms: RSA-MD5 RSA-SHA1 RSA-SHA224 RSA-
 SHA256 RSA-SHA384 RSA-
20
21 SHA512.
22
23 set ssl parameter -sigDigestType RSA-SHA224 RSA-SHA256 RSA-SHA384
 RSA-SHA512
```

**Validate the peer certificate** According to RFC 5246, the peer certificate must be signed using one of the signature hash algorithms included in the Client Hello extension. You can use the `strictSigDigestCheck` parameter. Depending on the signature hash list sent by the client, if you enable `strictSigDigestCheck`, the appliance returns a certificate signed by one of the signature hash algorithms mentioned in the Client Hello extension. If the peer does not have a proper certificate, the connection is dropped. If this parameter is disabled, the signature hash is not checked in the peer certificate.

You can configure a strict signature digest check on an SSL virtual server and service. If you enable

this parameter on an SSL virtual server, the server certificate sent by the server must be signed by one of the signature hash algorithms listed in the Client Hello extension. If client authentication is enabled, then the client certificate received by the server must be signed using one of the signature hash algorithms listed in the certificate request sent by the server.

If you enable this parameter on an SSL service, the server certificate received by the client must be signed by one of the signature hash algorithms listed in the Client Hello extension. The client certificate must be signed using one of the signature hash algorithms listed in the certificate request message.

If the default profile is enabled, you can use it to configure a strict signature digest check on an SSL virtual server, SSL service, and SSL profile.

### Configure a strict signature digest check on an SSL virtual server, service, or profile by using the CLI

At the command prompt, type:

```
1 set ssl vserver <vServerName> -strictSigDigestCheck (ENABLED |
 DISABLED)
2
3 set ssl service <serviceName> -strictSigDigestCheck (ENABLED |
 DISABLED)
4
5 set ssl profile <name>-strictSigDigestCheck (ENABLED | DISABLED)
6
7 Parameters
8
9 strictSigDigestCheck
10
11 Check whether peer entity certificate is signed using one
 of the signature-hash algorithms supported by the
 NetScaler appliance.
12
13 Possible values: ENABLED, DISABLED
14
15 Default: DISABLED
```

### Example:

```
1 set ssl vserver v1 -strictSigDigestCheck Enabled
2 set ssl service s1 -strictSigDigestCheck Enabled
3 set ssl profile p1 -strictSigDigestCheck Enabled
```

#### Important:

If DH, ECDHE, or ECDSA ciphers are configured on the appliance, the SKE message must be signed using one of the signature-hashes common to the client list and the list configured on the appliance. If there is no common signature hash, the connection is dropped.



## Configure SSL for ADC Admin UI access

A certificate-key pair is required for HTTPS access to the configuration utility and for secure remote procedure calls. On a NetScaler MPX appliance or a VPX virtual appliance, a certificate-key pair is automatically bound to the internal services. However, this certificate might not be trusted by browsers. You must upload valid CA certificates in the browser to complete the authentication without any errors.

## Configure secure HTTPS by using the CLI

To configure secure HTTPS by using the CLI, follow these steps:

1. Add a certificate-key pair.

```
1 add certkey server -cert servercert -key serverkey
```

2. Bind this certificate-key pair to the following internal services.

```
1 bind ssl service nshttps-127.0.0.1-443 -certkeyname server
2
3 bind ssl service nshttps-::11-443 -certkeyname server
```

## Configure secure HTTPS by using the GUI

To configure secure HTTPS by using the GUI, follow these steps:

1. Navigate to **Traffic Management > SSL > Certificates**.
2. In the details pane, click **Install**.
3. In the **Install Certificate** dialog box, type the certificate details.
4. Click **Install**, and then click **Close**.
5. Navigate to **Traffic Management > Load Balancing > Services**.
6. In the details pane, on the **Action** tab, click **Internal Services**.
7. Select `nshttps-127.0.0.1-443` from the list, and then click **Open**.
8. On the **SSL Settings** tab, in the **Available** pane, select the certificate created in step 4, click **Bind**, and then click **OK**.
9. Select `nshttps-::11-443` from the list, and then click **Open**.
10. On the **SSL Settings** tab, in the **Available** pane, select the certificate created in step 4, click **Bind**, and then click **OK**.
11. Click **OK**.

## Support for TLS 1.3 protocol

July 11, 2023

The NetScaler VPX and NetScaler MPX appliances now support the TLS 1.3 protocol, specified in RFC 8446.

### Notes:

- TLS 1.3 hardware acceleration is supported on the following platforms:
  - MPX 5900
  - MPX/SDX 8900
  - MPX/SDX 9100
  - MPX/SDX 15000
  - MPX/SDX 15000-50G
  - MPX/SDX 16000
  - MPX/SDX 26000
  - MPX/SDX 26000-50S
  - MPX/SDX 26000-100G
- Software-only support for the TLS 1.3 protocol is available on all other NetScaler MPX and SDX appliances except NetScaler FIPS appliances.
- TLS 1.3 is only supported with the enhanced profile. To enable the enhanced profile, see [Enable the default profile](#). The terms “default” and “enhanced” are used interchangeably for SSL profile.
- To use TLS 1.3, you must use a client that conforms to the RFC 8446 specification.

### Supported NetScaler features

The following SSL features are supported:

| SSL features                                                 | Support on the front end | Support on the back end |
|--------------------------------------------------------------|--------------------------|-------------------------|
| Cipher suite TLS<br>1.3-AES256-GCM-SHA384<br>(0x1302)        | Yes                      | Yes                     |
| Cipher suite TLS<br>1.3_CHACHA20_POLY1305_SHA256<br>(0x1303) | Yes                      | Yes                     |

| SSL features                                                                                                                 | Support on the front end | Support on the back end |
|------------------------------------------------------------------------------------------------------------------------------|--------------------------|-------------------------|
| Cipher suite TLS 1.3-AES128_GCM-SHA256 (0x1301)                                                                              | Yes                      | Yes                     |
| ECC curve P_256 for ephemeral DH key exchange                                                                                | Yes                      | Yes                     |
| ECC curve P_384 for ephemeral DH key exchange                                                                                | Yes                      | Yes                     |
| ECC curve P_521 for ephemeral DH key exchange                                                                                | Yes                      | Yes                     |
| Abbreviated handshakes when ticket-based session resumption is enabled                                                       | Yes                      | No                      |
| 0-RTT early application data                                                                                                 | Yes                      | No                      |
| Replay attack protection for 0-RTT early application data                                                                    | Yes                      | *NA                     |
| Optional or mandatory certificate-based client authentication, with support for OCSP and CRL validation of peer certificates | Yes                      | Yes                     |
| Server name extension: server certificate selection by using SNI                                                             | Yes                      | *NA                     |
| Application protocol negotiation (ALPN) by using the application_level_protocol_negotiation extension                        | Yes                      | Yes                     |
| OCSP stapling                                                                                                                | Yes                      | *NA                     |
| Log messages and AppFlow records are produced for TLS 1.3 handshakes                                                         | Yes                      | Yes                     |
| Optional logging of TLS 1.3 traffic secrets by the <code>nstrace</code> packet capture utility                               | Yes                      | Yes                     |

| SSL features                                                                                                     | Support on the front end | Support on the back end |
|------------------------------------------------------------------------------------------------------------------|--------------------------|-------------------------|
| Interoperability with TLS peers implementing RFC 8446. For example, Mozilla Firefox, Google Chrome, and OpenSSL. | Yes                      | Yes                     |

\*NA - not applicable

## Configuration

TLS 1.3 is disabled by default on an SSL profile. Although you can enable TLS 1.3 on the legacy profile, some features, such as abbreviated handshakes when ticket-based session resumption is enabled and 0-RTT early application data are not supported on the legacy profile.

### Add a front-end SSL profile by using the CLI

At the command prompt, type:

```
1 add ssl profile tls13profile -tls13 ENABLED
```

### Example:

```
1 sh ssl profile tls13profile
2 1) Name: tls13profile (Front-End)
3 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1.1: ENABLED
4 TLSv1.2: ENABLED TLSv1.3: ENABLED
5 Client Auth: DISABLED
6 Use only bound CA certificates: DISABLED
7 Strict CA checks: NO
8 Session Reuse: ENABLED Timeout: 120 seconds
9 DH: DISABLED
10 DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA:
11 ENABLED Refresh Count: 0
12 Deny SSL Renegotiation ALL
13 Non FIPS Ciphers: DISABLED
14 Cipher Redirect: DISABLED
15 SSL Redirect: DISABLED
16 Send Close-Notify: YES
17 Strict Sig-Digest Check: DISABLED
18 Zero RTT Early Data: DISABLED
19 DHE Key Exchange With PSK: NO
20 Tickets Per Authentication Context: 1
21 Push Encryption Trigger: Always
22 PUSH encryption trigger timeout: 1 ms
23 SNI: DISABLED
```


```

22 OCSP Stapling: DISABLED
23 Strict Host Header check for SNI enabled SSL sessions: NO
24 Push flag: 0x0 (Auto)
25 SSL quantum size: 8 kB
26 Encryption trigger timeout 100 mS
27 Encryption trigger packet count: 45
28 Subject/Issuer Name Insertion Format: Unicode
29
30 SSL Interception: DISABLED
31 SSL Interception OCSP Check: ENABLED
32 SSL Interception End to End Renegotiation: ENABLED
33 SSL Interception Maximum Reuse Sessions per Server: 10
34 Session Ticket: DISABLED
35 HSTS: DISABLED
36 HSTS IncludeSubDomains: NO
37 HSTS Max-Age: 0
38
39 ECC Curve: P_256, P_384, P_224, P_521
40
41 1) Cipher Name: DEFAULT Priority :1
42 Description: Predefined Cipher Alias
43 Done

```

### Add a front-end SSL profile by using the GUI

1. Navigate to **System > Profiles**. Select **SSL Profiles**.
2. Click **Add** and specify a name for the profile.
3. In **Protocol**, select **TLSv13**.

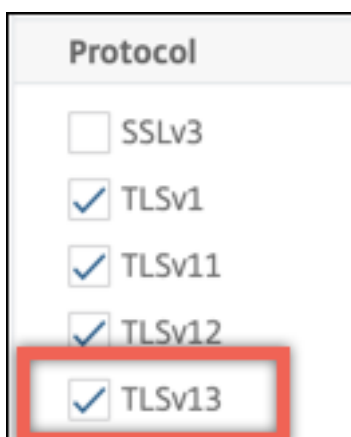

4. Click **OK** and then click **Done**.

### Add a back-end SSL profile by using the CLI

At the command prompt, type:


```
1 add ssl profile profile1 -sslprofileType BackEnd -tls13 ENABLED
```

**Example:**

```
1 add ssl profile tls13profile2 -sslprofileType BackEnd
2
3 sh ssl profile tls13profile2
4
5 1) Name: tls13profile2 (Back-End)
6
7 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2:
 ENABLED TLSv1.3: ENABLED
8 Server Auth: DISABLED
9 Use only bound CA certificates: DISABLED
10 Strict CA checks: NO
11 Session Reuse: ENABLED Timeout: 300 seconds
12 DH: DISABLED
13 Ephemeral RSA: DISABLED
14 Deny SSL Renegotiation ALL
15 Non FIPS Ciphers: DISABLED
16 Cipher Redirect: DISABLED
17 SSL Redirect: DISABLED
18 Send Close-Notify: YES
19 Strict Sig-Digest Check: DISABLED
20 Push Encryption Trigger: Always
21 PUSH encryption trigger timeout: 1 ms
22 SNI: DISABLED
23 OCSP Stapling: DISABLED
24 Strict Host Header check for SNI enabled SSL sessions: NO
25 Push flag: 0x0 (Auto)
26 SSL quantum size: 8 kB
27 Encryption trigger timeout 100 mS
28 Encryption trigger packet count: 45
29 Allow Extended Master Secret: NO
30 ECC Curve: P_256, P_384, P_224, P_521
31
32 1) Cipher Name: DEFAULT_BACKEND Priority :1
33 Description: Predefined Cipher Alias
34
35 Done
```

**Add a back-end SSL profile by using the GUI**

1. Navigate to **System > Profiles**. Select **SSL Profiles**.
2. Click **Add** and specify a name for the profile.
3. In **SSL Profile Type**, select **BackEnd**.

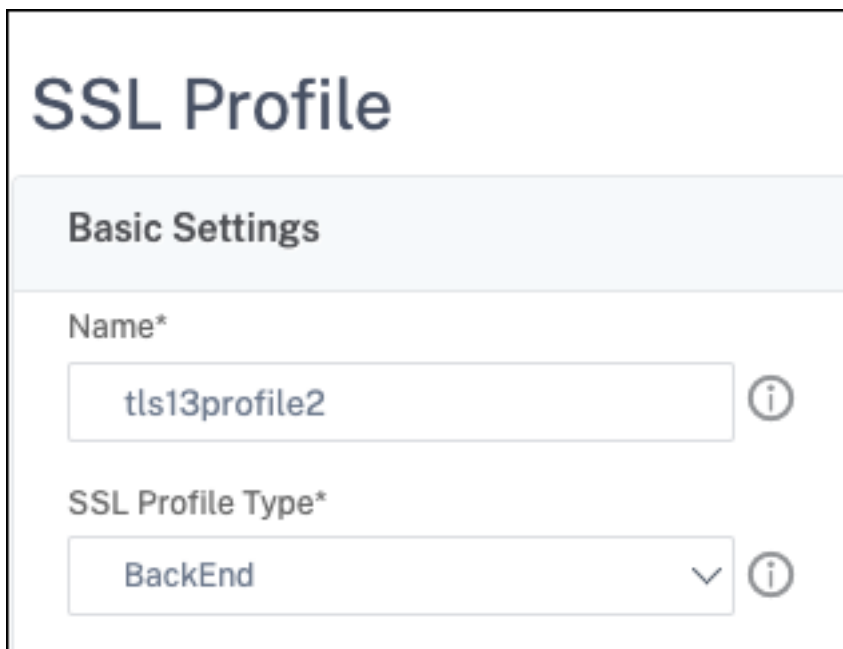

**SSL Profile**

**Basic Settings**

Name\*

tls13profile2 ⓘ

SSL Profile Type\*

BackEnd ▼ ⓘ

4. In **Protocol**, select **TLSv13**.
5. Click **OK** and then click **Done**.

#### Bind an SSL profile to an SSL virtual server by using the CLI

At the command prompt, type:

```
set ssl vservice <vserviceName> -sslProfile <profile-name>
```

#### Example:

```
set ssl vservice ssl-vs -sslProfile tls13profile
```

#### Bind an SSL profile to an SSL virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and select an SSL virtual server.
2. Click **Edit**.
3. In **Advanced Settings**, click **SSL Profile**.
4. Select the TLS 1.3 profile created earlier.
5. Click **OK** and then click **Done**.

#### Bind an SSL profile to an SSL service by using the CLI

At the command prompt, type:

```
set ssl service <serviceName> -sslProfile <profile-name>
```

**Example:**

```
set ssl service ssl-service -sslProfile tls13profile2
```

Note:

A warning appears if you bind a front-end profile to an SSL service.

**Bind an SSL profile to an SSL service by using the GUI**

1. Navigate to **Traffic Management > Load Balancing > Services**, and select an SSL service.
2. Click **Edit**.
3. In **Advanced Settings**, click **SSL Profile**.
4. Select the TLS 1.3 profile created earlier.
5. Click **OK** and then click **Done**.

**SSL profile parameters for TLS 1.3 protocol**

Note:

Only **tls13** applies to a back-end SSL profile.

1. Enable or disable TLS 1.3 parameters in an SSL profile.

**tls13:** State of TLS 1.3 protocol support for the SSL profile.

Possible values: ENABLED, DISABLED

Default value: DISABLED

```
1 set ssl profile tls13profile -tls13 enable
```

```
1 set ssl profile tls13profile -tls13 disable
```

2. Set the number of session tickets issued.

**tls13SessionTicketsPerAuthContext:** Number of tickets the SSL virtual server issues when TLS 1.3 is negotiated, ticket-based resumption is enabled, and either (1) a handshake completes or (2) client authentication completes after the handshake.

This value can be increased to enable peers to open multiple parallel connections using a fresh ticket for each connection.

No tickets are sent if resumption is disabled.

Default value: 1



Minimum value: 1

Maximum value: 10

```
1 set ssl profile tls13profile -tls13sessionTicketsPerAuthContext 1
2
3 set ssl profile tls13profile -tls13sessionTicketsPerAuthContext 10
```

### 3. Set DH key exchange.

**dheKeyExchangeWithPsk**: Specifies whether an SSL virtual server requires a DHE key exchange to occur when a preshared key is accepted during a TLS 1.3 session resumption handshake. A DHE key exchange ensures forward secrecy, even if ticket keys are compromised, at the expense of extra resources required to carry out the **DHE** key exchange.

Available settings work as follows, if session ticket is enabled:

**YES**: DHE key exchange is required when a pre-shared key is accepted, regardless of whether the client supports the key exchange. The handshake is aborted with a fatal alert, if the client does not support DHE key exchange when offering a pre-shared key.

**NO**: DHE key exchange is performed when a pre-shared key is accepted, only if requested by the client.

Possible values: YES, NO

Default value: NO

```
1 set ssl profile tls13profile dheKeyExchangeWithPsk yes
2
3 set ssl profile tls13profile dheKeyExchangeWithPsk no
```

### 4. Enable or disable 0-RTT early data acceptance.

**zeroRttEarlyData**: State of TLS 1.3 early application data. Applicable settings work as follows:

**ENABLED**: Early application data might be processed before the handshake is complete.

**DISABLED**: Early application data is ignored.

Possible values: ENABLED, DISABLED

Default value: DISABLED

```
1 set ssl profile tls13profile -zeroRttEarlyData ENABLED
2
3 set ssl profile tls13profile -zeroRttEarlyData DISABLED
```

## Default cipher group

The default cipher group includes TLS 1.3 ciphers.

```
1 sh cipher DEFAULT
2 1) Cipher Name: TLS1-AES-256-CBC-SHA Priority : 1
3 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(256) Mac=SHA1
4 HexCode=0x0035
5
6 2) Cipher Name: TLS1-AES-128-CBC-SHA Priority : 2
7 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(128) Mac=SHA1
8 HexCode=0x002f
9
10 ...
11 ...
12 27) Cipher Name: TLS 1.3-AES256-GCM-SHA384 Priority : 27
13 Description: TLS 1.3 Kx=any Au=any Enc=AES-GCM(256) Mac=AEAD
14 HexCode=0x1302
15
16 28) Cipher Name: TLS 1.3-CHACHA20-POLY1305-SHA256 Priority : 28
17 Description: TLS 1.3 Kx=any Au=any Enc=CHACHA20/POLY1305(256)
18 Mac=AEAD HexCode=0x1303
19
20 29) Cipher Name: TLS 1.3-AES128-GCM-SHA256 Priority : 29
21 Description: TLS 1.3 Kx=any Au=any Enc=AES-GCM(128) Mac=AEAD
22 HexCode=0x1301
23
24 Done
```

```
1 sh cipher DEFAULT_BACKEND
2 1) Cipher Name: TLS1-AES-256-CBC-SHA Priority : 1
3 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(256) Mac=SHA1
4 HexCode=0x0035
5
6 2) Cipher Name: TLS1-AES-128-CBC-SHA Priority : 2
7 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(128) Mac=SHA1
8 HexCode=0x002f
9
10 ...
11 ...
12 27) Cipher Name: TLS 1.3-AES256-GCM-SHA384 Priority : 27
13 Description: TLS 1.3 Kx=any Au=any Enc=AES-GCM(256) Mac=AEAD
14 HexCode=0x1302
15
16 28) Cipher Name: TLS 1.3-CHACHA20-POLY1305-SHA256 Priority : 28
17 Description: TLS 1.3 Kx=any Au=any Enc=CHACHA20/POLY1305(256)
18 Mac=AEAD HexCode=0x1303
19
20 29) Cipher Name: TLS 1.3-AES128-GCM-SHA256 Priority : 29
21 Description: TLS 1.3 Kx=any Au=any Enc=AES-GCM(128) Mac=AEAD
22 HexCode=0x1301
23
24 Done
```

## Limitations

- TLS 1.3 is not supported on a NetScaler FIPS appliance.
- Only RSA certificates with 1024-bit and larger keys are supported in a TLS 1.3 handshake.

## Security restrictions

TLS 1.3 server operators must keep in mind the following security restrictions for backward compatibility outlined in RFC 8446. The default configuration on a NetScaler appliance is compliant with these restrictions. However, a NetScaler appliance does not enforce these rules.

- The security of RC4 cipher suites is considered insufficient as described in RFC7465. Implementations must not offer or negotiate RC4 cipher suites for any version of TLS.
- Old versions of TLS allowed the use of low strength ciphers. Ciphers with a strength less than 112 bits must not be offered or negotiated for any version of TLS.
- The security of SSL 3.0 [SSLv3] is considered insufficient as described in RFC7568, and must not be negotiated. Disable SSLv3 when TLS 1.3 is enabled (SSLv3 is disabled by default).

### Note:

For information about troubleshooting protocols that run over TLS 1.3, see [Decrypting TLS 1.3 traffic from packet trace](#).

## How-to articles

May 2, 2023

How-to articles are simple and easy to use articles with configuration steps for common deployments. Click a link to view the article.

[Create a certificate signing request and use SSL certificates on a NetScaler appliance](#)

[Configure SSL action to forward client traffic](#)

[Configure SSL action to forward client traffic if a cipher is not supported on the ADC](#)

[Configure per directory client authentication](#)

[Configure support for Outlook web access](#)

[Configure SSL based header insertion](#)

[Configure SSL offloading with end-to-end encryption](#)

[Configure transparent SSL acceleration](#)

[Configure SSL acceleration with HTTP on the front end and SSL on the back end](#)

[Configure SSL offloading with other TCP protocols](#)

[Configure SSL bridging](#)

[Configure SSL monitoring when client authentication is enabled on the back-end service](#)

[Configure a secure content switching server](#)

[Configure an HTTPS virtual server to accept HTTP traffic](#)

[Configure graceful cleanup of SSL sessions](#)

[Configure support for HTTP strict transport security \(HSTS\)](#)

[Configure SSLv2 redirection](#)

[Configure synchronization of files in a high availability setup](#)

[Disable TLS 1.0 and TLS 1.1 on NSIP](#)

[Export certificates used on the NetScaler appliance as PFX file](#)

## SSL certificates

May 2, 2023

An SSL certificate, which is a part of any SSL transaction, is a digital data form (X509) that identifies a company (domain) or an individual. The certificate has a public key component that is visible to any client that wants to initiate a secure transaction with the server. The corresponding private key, which resides securely on the NetScaler appliance, is used to complete asymmetric key (or public key) encryption and decryption.

You can obtain an SSL certificate and key in either of the following ways:

- From an authorized certificate authority (CA), such as Verisign
- By generating a new SSL certificate and key on the NetScaler appliance

Alternately, you can use an existing SSL certificate on the appliance.

Certificates are categorized into four types by the NetScaler appliance:

- **Server certificates:** A server certificate authenticates the server's identity to the client. On the front-end, the ADC appliance acts as a server. You bind a server certificate and a private key to an SSL virtual server on the ADC appliance.
- **Client certificates:** A client certificate authenticates the client's identity to the server. On the back-end, the ADC appliance acts as a client. You bind a client certificate and private key to the SSL service or service group on the ADC appliance.
- **CA certificates:** CA certificates issue the end-user certificates (client and server certificates). A CA certificate can be a trusted root CA (self-signed by the certificate authority) or an intermediate CA (signed by a trusted root CA). Typically, CA certificates do not need private keys.

- **Unknown certificates:** All other certificates fall in this category.

**Important:** Citrix recommends that you use certificates obtained from authorized CAs, such as Verisign, for all your SSL transactions. Use certificates generated on the NetScaler appliance for testing purposes only, not in any live deployment.

- If while adding a certificate-key pair, you add a certificate file with the same name as an existing certificate file, the original certificate file is overwritten with no warning. This action might cause issues after the appliance is restarted because the original certificate file is no longer available in the `/nsconfig/ssl` directory.
- Removing any certificate or key files in a cluster environment restricts further configuration on the ADC appliance. Add the files back at the same location to make any configuration changes.

**Note:** You can use the ADM SSL dashboard for ease of SSL certificate management and set notifications for certificates that are unused or soon to expire. For more information, see [SSL certificate management](#).

## Create a certificate

December 28, 2023

A certificate authority (CA) is an entity that issues digital certificates for use in public key cryptography. Applications, such as web browsers, that conduct SSL transactions trust certificates issued or signed by a Certificate Authority. These applications maintain a list of the CAs that they trust. If any of the trusted CAs sign the certificate being used for the secure transaction, the application proceeds with the transaction.


**Caution:** Citrix recommends that you use certificates obtained from authorized CAs, such as Verisign, for all your SSL transactions. Use certificates generated on the NetScaler appliance for testing purposes only, not in any live deployment.

To import an existing certificate and key, see [Import a Certificate](#).

Perform the following steps to create a certificate and bind it to an SSL virtual server. The only special characters allowed in the file names are underscore and dot. Special characters are not allowed as the first character in the file name.

- Create a private key.
- Create a certificate signing request (CSR).
- Submit the CSR to a certificate authority.
- Create a certificate-key pair.
- Bind the certificate-key pair to an SSL virtual server

The following diagram illustrates the workflow.

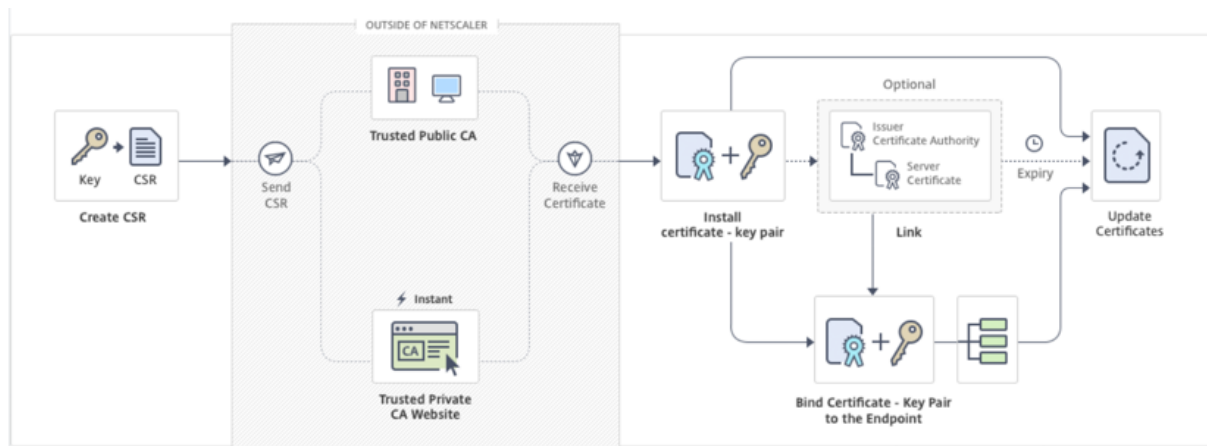

## How to create and install a new certificate

This is an embedded video. [Click the link to watch the video](#)

### Create a private key

#### Notes:

- From release 12.1 build 49.x, you can use the AES256 algorithm with PEM key format to encrypt a private key on the appliance. AES with 256-bit key is more mathematically efficient and secure compared to the 56-bit key of the Data Encryption Standard (DES).
- From release 12.1 build 50.x, you can create an RSA key in PKCS#8 format.

The private key is the most important part of a digital certificate. By definition, this key is not to be shared with anyone and must be kept securely on the NetScaler appliance. Any data encrypted with the public key can be decrypted only by using the private key.

The certificate that you receive from the CA is valid only with the private key that was used to create the CSR. The key is required for adding the certificate to the NetScaler appliance.

The appliance supports only the RSA encryption algorithms for creating private keys. You can submit either type of private key to the certificate authority (CA). The certificate that you receive from the CA is valid only with the private key that was used to create the CSR. The key is required for adding the certificate to the NetScaler appliance.

#### Important:

- Be sure to limit access to your private key. Anyone who has access to your private key can decrypt your SSL data.
- The length of the SSL key name allowed includes the length of the absolute path name if the path is included in the key name.

All SSL certificates and keys are stored in the `/nsconfig/ssl` folder on the appliance. For added security, you can use the DES or triple DES (3DES) algorithm to encrypt the private key stored on the appliance.

### Create an RSA private key by using the CLI

At the command prompt, type:

```
1 create ssl rsakey <keyFile> <bits> [-exponent (3 | F4)] [-keyform (
 DER | PEM)] [-des | -des3 | -aes256] {
2 -password }
3 [-pkcs8]
```

#### Example:

```
1 create rsakey testkey 2048 -aes256 -password 123456 -pkcs8
```

### Create an RSA private key by using the GUI

1. Navigate to **Traffic Management > SSL > SSL Files**.
2. In the **Keys** tab, select **Create RSA Key**.
3. Enter values for the following parameters and click **Create**.
  - **Key Filename** - Name for and, optionally, path to the RSA key file. `/nsconfig/ssl/` is the default path.
  - **Key Size** - Size, in bits, of the RSA key. Can range from 512 bits to 4096 bits.
  - **Public Exponent Value** - Public exponent for the RSA key. The exponent is part of the cipher algorithm and is required for creating the RSA key.
  - **Key Format** - The format in which the RSA key file is stored on the appliance.
  - **PEM Encoding Algorithm** - Encrypt the generated RSA key by using the AES 256, DES, or Triple-DES (DES3) algorithm. By default, private keys are unencrypted.
  - **PEM Passphrase** - If the private key is encrypted, enter a pass phrase for the key.

## Create RSA Key

Key Filename\*

Choose File  ?

Key Size(bits)\*

?

Public Exponent Value\*

?

Key Format\*

?

PEM Encoding Algorithm

?

PEM Passphrase

?

Confirm PEM Passphrase

?

PKCS8 ?

**Select an AES256 encoding algorithm in an RSA key by using the GUI**

1. Navigate to **Traffic Management > SSL > SSL Files > Create RSA Key**.
2. In **Key Format**, select **PEM**.
3. In **PEM Encoding Algorithm**, select **AES256**.
4. Select **PKCS8**.



## Create a certificate signing request by using the CLI

At the command prompt, type:

```
1 create ssl certreq <reqFile> -keyFile <input_filename> | -fipsKeyName <
 string>) [-keyForm (DER | PEM) {
2 -PEMPassPhrase }
3] -countryName <string> -stateName <string> -organizationName <string>
 -organizationUnitName <string> -localityName <string> -commonName
 <string> -emailAddress <string> {
4 -challengePassword }
5 -companyName <string> -digestMethod (SHA1 | SHA256)
```

### Example:

```
1 create ssl certreq priv_csr_sha256 -keyfile priv_2048_2 -keyform PEM -
 countryName IN -stateName Karnataka -localityName Bangalore -
 organizationName Citrix -organizationUnitName NS -digestMethod
 SHA256
```

## Create a certificate signing request by using the GUI

1. Navigate to **Traffic Management > SSL**.
2. In **SSL Certificate**, click **Create Certificate Signing Request (CSR)**.
3. In **Digest Method**, select **SHA256**.

See [Create a CSR](#) for more information.

## Support for subject alternative name in a certificate signing request

The subject alternative name (SAN) field in a certificate allows you to associate multiple values, such as domain names and IP addresses, with a single certificate. In other words, you can secure multiple domains, such as `www.example.com`, `www.example1.com`, `www.example2.com`, with a single certificate.

Some browsers, such as Google Chrome, no longer support a common name in a certificate signing request (CSR). They enforce SAN in all publicly trusted certificates.

The NetScaler appliance supports adding SAN values when creating a CSR. You can send a CSR with a SAN entry to a certificate authority to obtain a signed certificate with that SAN entry. When the appliance receives a request, it checks for a matching domain name in the SAN entries in the server certificate. If a match is found, it sends the certificate to the client and completes the SSL handshake. You can use the CLI or the GUI to create a CSR with SAN values.

**Note:** The NetScaler appliance processes only DNS based SAN values.

### Create a CSR with the subject alternative name by using the CLI

```
1 create ssl certReq <reqFile> (-keyFile <input_filename> | -fipsKeyName
 <string>) [-subjectAltName <string>] [-keyform (DER | PEM) {
2 -PEMPassPhrase }
3] -countryName <string> -stateName <string> -organizationName <string>
 [-organizationUnitName <string>] [-localityName <string>] [-
 commonName <string>] [-emailAddress <string>] {
4 -challengePassword }
5 [-companyName <string>] [-digestMethod (SHA1 | SHA256)]
```

#### Parameters:

**subjectAltName:** The subject alternative name (SAN) is an extension to X.509 that allows various values to be associated with a security certificate using a subjectAltName field. These values are called “Subject Alternative Names”(SAN). Names include:

1. IP addresses (Prefix with “IP:”Example: IP:198.51.10.5 IP:192.0.2.100)
2. DNS names (Prefix with “DNS:”Example: DNS:www.example.com DNS:www.example.org DNS:www.example.net)

On the command line, enter values within quotation marks. Separate two values with a space. Quotation marks are not required in the GUI.

Maximum Length: 127

#### Example:

```
1 create certReq test1.csr -keyFile test1.ky -countryName IN -stateName
 Kar -organizationName citrix -commonName ctx.com -subjectAltName "
 DNS:*.example.com DNS:www.example.org DNS:www.example.net"
```

#### Note:

On a FIPS appliance, you must replace the key file name with the FIPS key name if you create the FIPS key directly on the appliance.

```
1 create certReq <csrname> -fipsKeyName fipskey.ky -countryName IN -
 stateName Kar -organizationName citrix -commonName ctx.com -
 subjectAltName "DNS:www.example.com DNS:www.example.org DNS:www.
 example.net"
```

### Create a CSR by using the GUI

1. Navigate to **Traffic Management > SSL > SSL Files**.

2. In the **CSR** tab, click **Create Certificate Signing Request (CSR)**.
3. Enter the values and click **Create**.

## Limitations

To use SAN when creating an SSL certificate, you must explicitly specify the SAN values. The values are not read automatically from the CSR file.

## Submit the CSR to the Certificate Authority

Most certificate authorities (CA) accept certificate submissions by email. The CA returns a valid certificate to the email address from which you submit the CSR.

The CSR is stored in the `/nsconfig/ssl` folder.

## Generate a test certificate

### Note:

To generate a server test certificate, see [Generating a Server Test Certificate](#).

The NetScaler appliance has a built-in CA tools suite that you can use to create self-signed certificates for testing purposes.

**Caution:** Because the NetScaler appliance signs these certificates, and not an actual CA, you must not use them in a production environment. If you attempt to use a self-signed certificate in a production environment, users receive a “certificate invalid” warning each time the virtual server is accessed.

The appliance supports creation of the following types of certificates

- Root-CA certificates
- Intermediate-CA certificates
- End-user certificates
  - server certificates
  - client certificates

Before generating a certificate, create a private key and use that to create a certificate signing request (CSR) on the appliance. Then, instead of sending the CSR out to a CA, use the NetScaler CA Tools to generate a certificate.

## Create a certificate by using a wizard

1. Navigate to **Traffic Management > SSL**.
2. In the details pane, under **Getting Started**, select the wizard for the type of certificate that you want to create.
3. Follow the instructions on the screen.

## Create a root-CA certificate by using the CLI

At the command prompt, type the following command:

```
1 create ssl cert <certFile> <reqFile> <certType> [-keyFile <
 input_filename>] [-keyform (DER | PEM)] [-days <positive_integer>]
```

In the following example, csreq1 is the CSR and rsa1 is the private key that was created earlier.

### Example:

```
1 create ssl cert cert1 csreq1 ROOT_CERT -keyFile rsa1 -keyForm PEM -days
 365
2
3 Done
```

## Create an intermediate-CA certificate by using the CLI

```
1 create ssl cert <certFile> <reqFile> <certType> [-keyFile <
 input_filename>] [-keyform (DER | PEM)] [-days <positive_integer>]
 [-certForm (DER | PEM)] [-CACert <input_filename>] [-CACertForm (
 DER | PEM)] [-CAkey <input_filename>] [-CAkeyForm (DER | PEM)]
 [-CAserial <output_filename>]
```

In the following example, csr1 is the CSR created earlier. Cert1 and rsakey1 are the certificate and corresponding key of the self-signed (root-CA) certificate, and pvtkey1 is the private key of the intermediate-CA certificate.

### Example:

```
1 create ssl cert certsy csr1 INTM_CERT -CACert cert1 -CAkey rsakey1 -
 CAserial 23
2 Done
3
4 create ssl rsakey pvtkey1 2048 -exponent F4 -keyform PEM
5 Done
```

### Create a root-CA certificate by using the GUI

Navigate to **Traffic Management > SSL** and, in the Getting Started group, select **Root-CA Certificate Wizard**, and configure a root CA certificate.

### Create an intermediate-CA certificate by using the GUI

Navigate to **Traffic Management > SSL** and, in the Getting Started group, select **Intermediate-CA Certificate Wizard**, and configure an intermediate CA certificate.

### Create an end-user certificate

An end-user certificate can be a client certificate or a server certificate. To create a test end-user certificate, specify the Intermediate CA certificate or the self-signed root-CA certificate.

**Note:** To create an end-user certificate for production use, specify a trusted CA certificate and send the CSR to a certificate authority (CA).

### Create a test end-user certificate by using the command line interface

```
1 create ssl cert <certFile> <reqFile> <certType> [-keyFile <
 input_filename>] [-keyform (DER | PEM)] [-days<positive_integer>]
 [-certForm (DER | PEM)] [-CAcert <input_filename>] [-CACertForm (
 DER | PEM)] [-CAkey<input_filename>] [-CAkeyForm (DER | PEM)] [-
 CAserial <output_filename>]
```

If there is no intermediate certificate, use the certificate (cert1) and private key (rsakey1) values of the root-CA certificate in `CAcert` and `CAkey`.

#### Example:

```
1 create ssl cert cert12 csr1 SRVR_CERT -CAcert cert1 -CAkey rsakey1 -
 CAserial 23
2
3 Done
```

If there is an intermediate certificate, use the certificate (`certsy`) and private key (`pvtkey1`) values of the intermediate certificate in `CAcert` and `CAkey`.

#### Example:

```
1 create ssl cert cert12 csr1 SRVR_CERT -CAcert certsy -CAkey pvtkey1 -
 CAserial 23
2
3 Done
```

## Create a self-signed SAN Certificate using OpenSSL

To create a self-signed SAN certificate with multiple subject alternate names, perform the following steps:

1. Create an OpenSSL configuration file on your local computer by editing the fields related as per the company requirements.

**Note: In the following example, the configuration file is “req.conf”.**

```
1 [req]
2 distinguished_name = req_distinguished_name
3 x509_extensions = v3_req
4 prompt = no
5 [req_distinguished_name]
6 C = US
7 ST = VA
8 L = SomeCity
9 O = MyCompany
10 OU = MyDivision
11 CN = www.company.com
12 [v3_req]
13 keyUsage = keyEncipherment, dataEncipherment
14 extendedKeyUsage = serverAuth
15 subjectAltName = @alt_names
16 [alt_names]
17 DNS.1 = www.company.net
18 DNS.2 = company.com
19 DNS.3 = company.net
```

2. Upload the file to the /nsconfig/ssl directory on the NetScaler appliance.
3. Log on to NetScaler CLI as `nsroot` user and switch to the shell prompt.
4. Run the following command to create the certificate:

```
1 cd /nsconfig/ssl
2 openssl req -x509 -nodes -days 730 -newkey rsa:2048 -keyout cert.
 pem -out cert.pem -config req.conf -extensions 'v3_req'
```

5. Run the following command to verify the certificate:

```
1 openssl x509 -in cert.pem -noout -text
2 Certificate:
3 Data:
4 Version: 3 (0x2)
5 Serial Number:
6 ed:90:c5:f0:61:78:25:ab
7 Signature Algorithm: md5WithRSAEncryption
8 Issuer: C=US, ST=VA, L=SomeCity, O=MyCompany, OU=MyDivision, CN=
 www.company.com
9 Validity
10 Not Before: Nov 6 22:21:38 2012 GMT
```

```

11 Not After : Nov 6 22:21:38 2014 GMT
12 Subject: C=US, ST=VA, L=SomeCity, O=MyCompany, OU=MyDivision, CN=
 www.company.com
13 Subject Public Key Info:
14 Public Key Algorithm: rsaEncryption
15 RSA Public Key: (2048 bit)
16 Modulus (2048 bit):
17 ...
18 Exponent: 65537 (0x10001)
19 X509v3 extensions:
20 X509v3 Key Usage:
21 Key Encipherment, Data Encipherment
22 X509v3 Extended Key Usage:
23 TLS Web Server Authentication
24 X509v3 Subject Alternative Name:
25 DNS:www.company.net, DNS:company.com, DNS:company.net
26 Signature Algorithm: md5WithRSAEncryption ...

```

## Install, link, and update certificates

August 21, 2024

To install a certificate, see [Add or update a certificate-key pair](#).

**Note:**


NetScaler supports PEM, DER, and PFX (PKCS12) certificate formats.

- PEM can have .crt, .pem, or .cer extension.
- DER has .der extension.
- PFX can have .p12 or .pfx extension.


Typically, the file name extension does not matter. The contents of the file are encoded differently, which decides the format, and the certificate is parsed accordingly.

### Link certificates

Many server certificates are signed by multiple hierarchical Certificate Authorities (CA), which means that the certificates form a chain like the following:

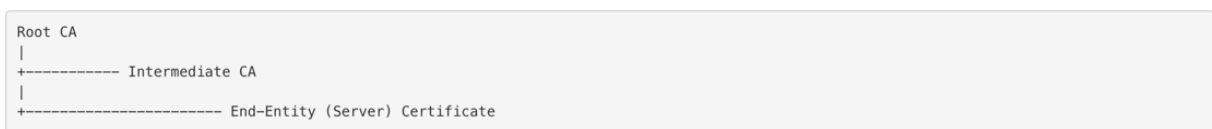


Sometimes, the Intermediate CA is split into a primary and secondary intermediate CA certificate. Then the certificates form a chain like the following:

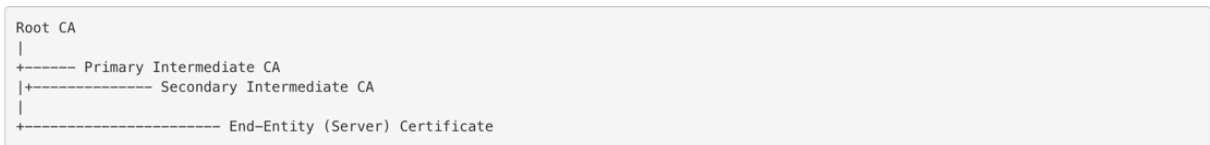

Client machines usually contain the root CA certificate in their local certificate store, but not one or more intermediate CA certificates. The ADC appliance must send one or more intermediate CA certificates to the clients.

**Note:** The appliance must not send the root CA certificate to the client. The Public Key Infrastructure (PKI) trust relationship model requires root CA certificates to be installed on clients through an out-of-band method. For example, the certificates are included with the operating system or web browser. The client ignores a root CA certificate sent by the appliance.

Sometimes, an intermediate CA that standard web browsers do not recognize as a trusted CA, issues the server certificate. In this case, one or more CA certificates must be sent to the client with the server's own certificate. Otherwise, the browser terminates the SSL session because it fails to authenticate the server certificate.

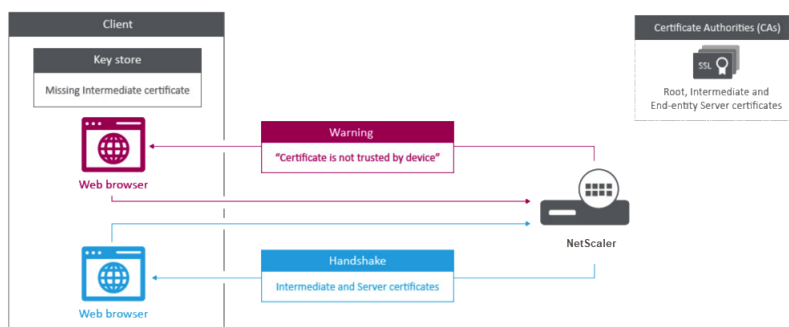

Refer to the following sections to add the server and intermediate certificates:

- Manual certificate linking
- Automated certificate linking
- Create a chain of certificates

## How to link an intermediate authority certificate

This is an embedded video. [Click the link to watch the video](#)

### Manual certificate linking

**Note:** This feature is not supported on the NetScaler FIPS platform and in a cluster setup.

Instead of adding and linking individual certificates, you can now group a server certificate and up to nine intermediate certificates in a single file. You can specify the file's name when adding a certificate-key pair. Before you do so, make sure that the following prerequisites are met.



- The certificates in the file are in the following order:
  - Server certificate (must be the first certificate in the file)
  - Optionally, a server key
  - Intermediate certificate 1 (ic1)
  - Intermediate certificate 2 (ic2)
  - Intermediate certificate 3 (ic3), and so on

Note: Intermediate certificate files are created for each intermediate certificate with the name “<certificatebundlename>.pem\_ic<n>” where n is between 1 and 9. For example, bundle.pem\_ic1, where **bundle** is the name of the certificate set and ic1 is the first intermediate certificate in the set.
- Bundle option is selected.
- No more than nine intermediate certificates are present in the file.

The file is parsed and the server certificate, intermediate certificates, and server key (if present) are identified. First, the server certificate and key are added. Then, the intermediate certificates are added, in the order in which they were added to the file, and linked accordingly.

An error is reported if any of the following conditions exist:

- A certificate file for one of the intermediate certificates exists on the appliance.
- The key is placed before the server certificate in the file.
- An intermediate certificate is placed before the server certificate.
- Intermediate certificates are not placed in the file in the same order as they are created.
- No certificates are present in the file.
- A certificate is not in the proper PEM format.
- The number of intermediate certificates in the file exceeds nine.

### Add a certificate set by using the CLI

At the command prompt, type the following commands to create a certificate set and verify the configuration:

```
1 add ssl certKey <certkeyName> -cert <string> -key <string> -bundle (YES
 | NO)
2
3 show ssl
4
5 show ssl certlink
```

#### Note:

Starting from NetScaler release 14.1 build 21.x, the length of the path is increased from 63 to 255 characters for the certificate and key parameters.

In the following example, the certificate set (bundle.pem) contains the following files:

Server certificate (bundle) linked to bundle\_ic1

First intermediate certificate (bundle\_ic1) linked to bundle\_ic2

Second intermediate certificate (bundle\_ic2) linked to bundle\_ic3

Third intermediate certificate (bundle\_ic3)

```
1 add ssl certKey bundletest -cert bundle9.pem -key bundle9.pem -bundle
 yes
2
3 sh ssl certkey
4
5 1) Name: ns-server-certificate
6 Cert Path: ns-server.cert
7 Key Path: ns-server.key
8 Format: PEM
9 Status: Valid, Days to expiration:5733
10 Certificate Expiry Monitor: ENABLED
11 Expiry Notification period: 30 days
12 Certificate Type: Server Certificate
13 Version: 3
14 Serial Number: 01
15 Signature Algorithm: sha256WithRSAEncryption
16 Issuer: C=US,ST=California,L=San Jose,O=Citrix ANG,OU=NS
 Internal,CN=default OULLFT
17 Validity
18 Not Before: Apr 21 15:56:16 2016 GMT
19 Not After : Mar 3 06:30:56 2032 GMT
20 Subject: C=US,ST=California,L=San Jose,O=Citrix ANG,OU=NS
 Internal,CN=default OULLFT
21 Public Key Algorithm: rsaEncryption
22 Public Key size: 2048
23
24 2) Name: servercert
25 Cert Path: complete/server/server_rsa_1024.pem
26 Key Path: complete/server/server_rsa_1024.ky
27 Format: PEM
28 Status: Valid, Days to expiration:7150
29 Certificate Expiry Monitor: ENABLED
30 Expiry Notification period: 30 days
31 Certificate Type: Server Certificate
32 Version: 3
33 Serial Number: 1F
34 Signature Algorithm: sha1WithRSAEncryption
35 Issuer: C=IN,ST=KAR,O=Citrix R&D Pvt Ltd,CN=Citrix
36 Validity
37 Not Before: Sep 2 09:54:07 2008 GMT
38 Not After : Jan 19 09:54:07 2036 GMT
```

```
39 Subject: C=IN,ST=KAR,O=Citrix Pvt Ltd,CN=Citrix
40 Public Key Algorithm: rsaEncryption
41 Public Key size: 1024
42
43 3) Name: bundletest
44 Cert Path: bundle9.pem
45 Key Path: bundle9.pem
46 Format: PEM
47 Status: Valid, Days to expiration:3078
48 Certificate Expiry Monitor: ENABLED
49 Expiry Notification period: 30 days
50 Certificate Type: Server Certificate
51 Version: 3
52 Serial Number: 01
53 Signature Algorithm: sha256WithRSAEncryption
54 Issuer: C=IN,ST=ka,O=sslteam,CN=ICA9
55 Validity
56 Not Before: Nov 28 06:43:11 2014 GMT
57 Not After : Nov 25 06:43:11 2024 GMT
58 Subject: C=IN,ST=ka,O=sslteam,CN=Server9
59 Public Key Algorithm: rsaEncryption
60 Public Key size: 2048
61
62 4) Name: bundletest_ic1
63 Cert Path: bundle9.pem_ic1
64 Format: PEM
65 Status: Valid, Days to expiration:3078
66 Certificate Expiry Monitor: ENABLED
67 Expiry Notification period: 30 days
68 Certificate Type: Intermediate CA
69 Version: 3
70 Serial Number: 01
71 Signature Algorithm: sha256WithRSAEncryption
72 Issuer: C=IN,ST=ka,O=sslteam,CN=ICA8
73 Validity
74 Not Before: Nov 28 06:42:56 2014 GMT
75 Not After : Nov 25 06:42:56 2024 GMT
76 Subject: C=IN,ST=ka,O=sslteam,CN=ICA9
77 Public Key Algorithm: rsaEncryption
78 Public Key size: 2048
79
80 5) Name: bundletest_ic2
81 Cert Path: bundle9.pem_ic2
82 Format: PEM
83 Status: Valid, Days to expiration:3078
84 Certificate Expiry Monitor: ENABLED
85 Expiry Notification period: 30 days
86 Certificate Type: Intermediate CA
87 Version: 3
88 Serial Number: 01
89 Signature Algorithm: sha256WithRSAEncryption
90 Issuer: C=IN,ST=ka,O=sslteam,CN=ICA7
91 Validity
```

```
92 Not Before: Nov 28 06:42:55 2014 GMT
93 Not After : Nov 25 06:42:55 2024 GMT
94 Subject: C=IN,ST=ka,O=sslteam,CN=ICA8
95 Public Key Algorithm: rsaEncryption
96 Public Key size: 2048
97
98 6) Name: bundletest_ic3
99 Cert Path: bundle9.pem_ic3
100 Format: PEM
101 Status: Valid, Days to expiration:3078
102 Certificate Expiry Monitor: ENABLED
103 Expiry Notification period: 30 days
104 Certificate Type: Intermediate CA
105 Version: 3
106 Serial Number: 01
107 Signature Algorithm: sha256WithRSAEncryption
108 Issuer: C=IN,ST=ka,O=sslteam,CN=ICA6
109 Validity
110 Not Before: Nov 28 06:42:53 2014 GMT
111 Not After : Nov 25 06:42:53 2024 GMT
112 Subject: C=IN,ST=ka,O=sslteam,CN=ICA7
113 Public Key Algorithm: rsaEncryption
114 Public Key size: 2048
115
116 7) Name: bundletest_ic4
117 Cert Path: bundle9.pem_ic4
118 Format: PEM
119 Status: Valid, Days to expiration:3078
120 Certificate Expiry Monitor: ENABLED
121 Expiry Notification period: 30 days
122 Certificate Type: Intermediate CA
123 Version: 3
124 Serial Number: 01
125 Signature Algorithm: sha256WithRSAEncryption
126 Issuer: C=IN,ST=ka,O=sslteam,CN=ICA5
127 Validity
128 Not Before: Nov 28 06:42:51 2014 GMT
129 Not After : Nov 25 06:42:51 2024 GMT
130 Subject: C=IN,ST=ka,O=sslteam,CN=ICA6
131 Public Key Algorithm: rsaEncryption
132 Public Key size: 2048
133
134 8) Name: bundletest_ic5
135 Cert Path: bundle9.pem_ic5
136 Format: PEM
137 Status: Valid, Days to expiration:3078
138 Certificate Expiry Monitor: ENABLED
139 Expiry Notification period: 30 days
140 Certificate Type: Intermediate CA
141 Version: 3
142 Serial Number: 01
143 Signature Algorithm: sha256WithRSAEncryption
144 Issuer: C=IN,ST=ka,O=sslteam,CN=ICA4
```

```
145 Validity
146 Not Before: Nov 28 06:42:50 2014 GMT
147 Not After : Nov 25 06:42:50 2024 GMT
148 Subject: C=IN,ST=ka,O=sslteam,CN=ICA5
149 Public Key Algorithm: rsaEncryption
150 Public Key size: 2048
151
152 9) Name: bundletest_ic6
153 Cert Path: bundle9.pem_ic6
154 Format: PEM
155 Status: Valid, Days to expiration:3078
156 Certificate Expiry Monitor: ENABLED
157 Expiry Notification period: 30 days
158 Certificate Type: Intermediate CA
159 Version: 3
160 Serial Number: 01
161 Signature Algorithm: sha256WithRSAEncryption
162 Issuer: C=IN,ST=ka,O=sslteam,CN=ICA3
163 Validity
164 Not Before: Nov 28 06:42:48 2014 GMT
165 Not After : Nov 25 06:42:48 2024 GMT
166 Subject: C=IN,ST=ka,O=sslteam,CN=ICA4
167 Public Key Algorithm: rsaEncryption
168 Public Key size: 2048
169
170 10) Name: bundletest_ic7
171 Cert Path: bundle9.pem_ic7
172 Format: PEM
173 Status: Valid, Days to expiration:3078
174 Certificate Expiry Monitor: ENABLED
175 Expiry Notification period: 30 days
176 Certificate Type: Intermediate CA
177 Version: 3
178 Serial Number: 01
179 Signature Algorithm: sha256WithRSAEncryption
180 Issuer: C=IN,ST=ka,O=sslteam,CN=ICA2
181 Validity
182 Not Before: Nov 28 06:42:46 2014 GMT
183 Not After : Nov 25 06:42:46 2024 GMT
184 Subject: C=IN,ST=ka,O=sslteam,CN=ICA3
185 Public Key Algorithm: rsaEncryption
186 Public Key size: 2048
187
188 11) Name: bundletest_ic8
189 Cert Path: bundle9.pem_ic8
190 Format: PEM
191 Status: Valid, Days to expiration:3078
192 Certificate Expiry Monitor: ENABLED
193 Expiry Notification period: 30 days
194 Certificate Type: Intermediate CA
195 Version: 3
196 Serial Number: 01
197 Signature Algorithm: sha256WithRSAEncryption
```

```

198 Issuer: C=IN,ST=ka,O=sslteam,CN=ICA1
199 Validity
200 Not Before: Nov 28 06:42:45 2014 GMT
201 Not After : Nov 25 06:42:45 2024 GMT
202 Subject: C=IN,ST=ka,O=sslteam,CN=ICA2
203 Public Key Algorithm: rsaEncryption
204 Public Key size: 2048
205
206 12) Name: bundletest_ic9
207 Cert Path: bundle9.pem_ic9
208 Format: PEM
209 Status: Valid, Days to expiration:3078
210 Certificate Expiry Monitor: ENABLED
211 Expiry Notification period: 30 days
212 Certificate Type: Intermediate CA
213 Version: 3
214 Serial Number: 01
215 Signature Algorithm: sha256WithRSAEncryption
216 Issuer: C=IN,ST=ka,O=sslteam,CN=RootCA4096
217 Validity
218 Not Before: Nov 28 06:42:43 2014 GMT
219 Not After : Nov 25 06:42:43 2024 GMT
220 Subject: C=IN,ST=ka,O=sslteam,CN=ICA1
221 Public Key Algorithm: rsaEncryption
222 Public Key size: 2048
223 Done
224
225 sh ssl certlink
226
227 1) Cert Name: bundletest CA Cert Name: bundletest_ic1
228 2) Cert Name: bundletest_ic1 CA Cert Name: bundletest_ic2
229 3) Cert Name: bundletest_ic2 CA Cert Name: bundletest_ic3
230 4) Cert Name: bundletest_ic3 CA Cert Name: bundletest_ic4
231 5) Cert Name: bundletest_ic4 CA Cert Name: bundletest_ic5
232 6) Cert Name: bundletest_ic5 CA Cert Name: bundletest_ic6
233 7) Cert Name: bundletest_ic6 CA Cert Name: bundletest_ic7
234 8) Cert Name: bundletest_ic7 CA Cert Name: bundletest_ic8
235 9) Cert Name: bundletest_ic8 CA Cert Name: bundletest_ic9
236 Done

```


### Add a certificate set by using the GUI

1. Navigate to **Traffic Management > SSL > Certificates > CA Certificates**.
2. In the details pane, click **Install**.
3. In the **Install Certificate** dialog box, type the details, such as the certificate and key file name, and then select **Certificate Bundle**.
4. Click **Install**, and then click **Close**.

## Automated certificate linking

**Note:** This feature is available from release 13.0 build 47.x.

You no longer have to manually link a certificate to its issuer all the way to the root certificate. If the intermediate CA certificates and the root certificate are present on the appliance, you can click the **Link** button in the end user certificate.

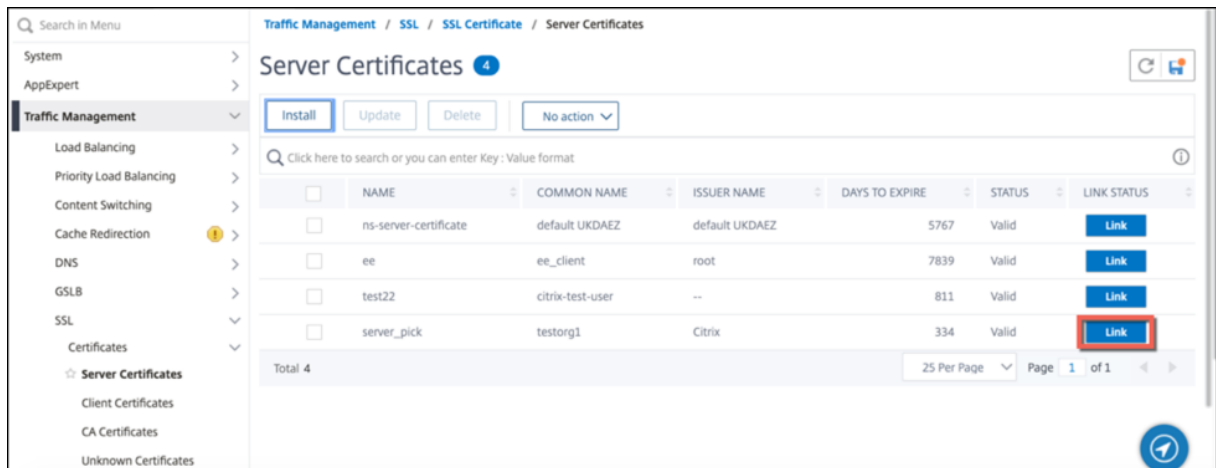

The potential chain appears.

Click **Link Certificate** to link all the certificates.

## Create a chain of certificates

Instead of using a set of certificates (a single file), you can create a chain of certificates. The chain links the server certificate to its issuer (the intermediate CA). This approach requires that the intermediate CA certificate file is installed on the ADC appliance, and the client application must trust one of the certificates in the chain. For example, link Cert-Intermediate-A to Cert-Intermediate-B, where Cert-Intermediate-B is linked to Cert-Intermediate-C, which is a certificate trusted by the client application.

**Note:** The appliance supports sending a maximum of 10 certificates in the chain of certificates sent to the client (one server certificate and nine CA certificates).

## Create a certificate chain by using the CLI

At the command prompt, type the following commands to create a certificate chain and verify the configuration. (Repeat the first command for each new link in the chain.)

```
1 link ssl certkey <certKeyName> <linkCertKeyName>
2 show ssl certlink
```

**Example:**

```
1 link ssl certkey siteAcertkey CAcertkey
2 Done
3
4 show ssl certlink
5
6 linked certificate:
7 1) Cert Name: siteAcertkey CA Cert Name: CAcertkey
8 Done
```

**Create a certificate chain by using the GUI**

1. Navigate to **Traffic Management > SSL > Certificates**.
2. Select a server certificate, and in the **Action** list, select **Link**, and specify a CA certificate name.

**Support for SSL certificate bundle**

The current design for a certificate bundle has the following drawbacks:

- Adding a certificate bundle adds multiple commands in the configuration. Therefore, you cannot add another certificate bundle if the two bundles share a common intermediate certificate.
- Removing a certificate bundle is a manual process. You must manually remove the files in a specific order.
- Updating a certificate bundle is not supported.
- Cluster is not supported.

The new design for a certificate bundle resolves all these issues. The new entity works on a certificate bundle file. Therefore, there is no need to create files for each intermediate certificate. Removal is also simple with this new entity.

Two certificate bundles can share part of the intermediate certificate chain. You can also add a certificate-key pair using the same server certificate and key that is also part of a certificate bundle.

**Note:**

Starting from NetScaler release 14.1 build 21.x, the length of the path is increased from 63 to 255 characters for the certificate and key parameters in the following commands:

- add ssl certKeyBundle
- update ssl certKeyBundle

In the following example:

1. Certificate bundle bundle1.pem contains server certificate (S1) and intermediate certificates (IC1 and IC2).



2. Server certificate is server\_cert.pem (S1).
3. Intermediate certificates are ic1.pem (IC1) and ic2.pem (IC2).

You can add a certificate bundle that contains S1, IC1, and IC2.

```
add ssl certkeybundle b1 -bundlefile bundle1.pem
```

You can also add a certificate-key pair using S1 and IC1.

```
add ssl certkey server-cert -cert server_cert.pem
```

```
add ssl certkey ic1 -cert ic1.pem
```

### Important!

- Bundle creation fails if the following order is not met:
  - Server certificate (SC) must be placed at the top of the bundle file.
  - IC[1-9] are intermediate certificates. IC[i] is issued by IC[i+1]. The certificates must be placed in a sequence, and all the intermediate certificates must be present in the bundle.
- Certificates must be of PEM format only.
- Server certificate key (SCK) can be placed anywhere in the bundle.
- A maximum of 9 intermediate certificates are supported.

### To add a certificate bundle using the CLI

At the command prompt, type:

```
add ssl certKeyBundle <bundle_name> -bundlefile <bundle_file_name> -
passplain <>
```

#### Example:

```
add ssl certkeyBundle cert_bundle -bundlefile bundle_4096.pem
```

### To add a certificate bundle using the GUI

1. Navigate to **Traffic Management > SSL > Certificate Key Bundle**.
2. Click **Install**.
3. Specify a name for the bundle, browse to the location of the bundle on the appliance or your local computer, and select a file.
4. Click **Create**.

### To update a certificate bundle using the CLI

**Note:**

The update command is available in release 14.1 build 12.x and later.

At the command prompt, type:

```
update ssl certKeyBundle [-bundlefile <input_filename>]
```

**Example:**

```
update ssl certKeyBundle cert_bundle -bundlefile bundle_4096_updated.pem
```

### To update a certificate bundle using the GUI

1. Navigate to **Traffic Management > SSL > Certificate Key Bundle**.
2. Select a bundle and click **Update**.
3. Browse to the location of the bundle on the appliance or your local computer, and select a file.
4. Click **OK**.

### To remove a certificate bundle using the CLI

At the command prompt, type:

```
rm ssl certKeyBundle <bundle_name>
```

**Example:**

```
rm ssl certkeybundle cert_bundle
```

### To remove a certificate bundle using the GUI

1. Navigate to **Traffic Management > SSL > Certificate Key Bundle**.
2. Select a bundle and click **Delete**.
3. In the confirmation dialog box, click **Yes**.

### To bind a certificate bundle to an SSL virtual server using the CLI

At the command prompt, type:

```
bind ssl vserver <vip-name> -certkeybundleName <certkeybundle_name> [-SNICertkeybundle]
```

**Example:**

```
1 bind ssl vserver v_server -certkeyBundleName cert_bundle
2
3 show ssl certkeyBundle cert_bundle
4
5 1) Name: cert_bundle
6 Bundle path: bundle_4096.pem
7 Certificate:
8 Status: Valid, Days to expiration:278
9 Serial Number: 83
10 Subject: C=IN,ST=KAR,O=CITRIX,CN=4096.com
11 Issuer: C=IN,ST=KAR,O=CITRIX,CN=ia24096.com
12 Signature Algorithm: sha256WithRSAEncryption
13 Validity
14 Not Before: Jul 13 10:17:57 2021 GMT
15 Not After : Jul 13 10:17:57 2022 GMT
16 Public Key Algorithm: rsaEncryption
17 Public Key size: 4096
18 SAN ENTRIES: None
19
20
21 CA Certificate:
22 Status: Valid, Days to expiration:278
23 Serial Number: 82
24 Subject: C=IN,ST=KAR,O=CITRIX,CN=ia24096.com
25 Issuer: C=IN,ST=KAR,O=CITRIX,CN=ia14098.com
26 Signature Algorithm: sha256WithRSAEncryption
27 Validity
28 Not Before: Jul 13 10:15:37 2021 GMT
29 Not After : Jul 13 10:15:37 2022 GMT
30 Public Key Algorithm: rsaEncryption
31 Public Key size: 4096
32 SAN ENTRIES: None
33
34 CA Certificate:
35 Status: Valid, Days to expiration:278
36 Serial Number: 81
37 Subject: C=IN,ST=KAR,O=CITRIX,CN=ia14098.com
38 Issuer: C=IN,ST=KAR,O=CITRIX,CN=root4098.com
39 Signature Algorithm: sha256WithRSAEncryption
40 Validity
41 Not Before: Jul 13 10:13:20 2021 GMT
42 Not After : Jul 13 10:13:20 2022 GMT
43 Public Key Algorithm: rsaEncryption
44 Public Key size: 4096
45 SAN ENTRIES: None
46
47 CA Certificate:
48 Status: Valid, Days to expiration:278
49 Serial Number: 00
50 Subject: C=IN,ST=KAR,O=CITRIX,CN=root4098.com
51 Issuer: C=IN,ST=KAR,O=CITRIX,CN=root4098.com
52 Signature Algorithm: sha256WithRSAEncryption
53 Validity
```

```

54 Not Before: Jul 13 10:10:23 2021 GMT
55 Not After : Jul 13 10:10:23 2022 GMT
56 Public Key Algorithm: rsaEncryption
57 Public Key size: 2048
58 SAN ENTRIES: None
59
60 1) Vserver Name: v_server

```

### To bind a certificate bundle to an SSL virtual server using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select an SSL virtual server and click **Edit**.
3. In the **Certificate** section of the **Load Balancing Virtual Server** page, click **Bundle Certificate**.
4. In the **Certificate Key Bundle Binding** page, do one of the following:
  - a) Select a bundle: Click the right-arrow (>) and select a bundle. Click **Select**.
  - b) Add a bundle: Click **Add**. Browse to the location of the bundle on the appliance or your local computer and click **Create**.
5. Click **Bind**.

### To bind a certificate bundle to an SSL virtual server as an SNI certificate bundle using the CLI

At the command prompt, type:

```
bind ssl vserver <vip-name> -certkeybundleName b2 -SNICertkeybundle
```

#### Example:

```

1 bind ssl vserver v_server -certkeyBundleName cert_bundle -
 sniCertkeybundle
2
3 sh ssl certkeybundle cert_bundle
4
5 1) Name: cert_bundle
6 Bundle path: bundle_4096.pem
7 Certificate:
8 Status: Valid, Days to expiration:278
9 Serial Number: 83
10 Subject: C=IN,ST=KAR,O=CITRIX,CN=4096.com
11 Issuer: C=IN,ST=KAR,O=CITRIX,CN=ia24096.com
12 Signature Algorithm: sha256WithRSAEncryption
13 Validity
14 Not Before: Jul 13 10:17:57 2021 GMT
15 Not After : Jul 13 10:17:57 2022 GMT
16 Public Key Algorithm: rsaEncryption
17 Public Key size: 4096

```

```
18 SAN ENTRIES: None
19
20
21 CA Certificate:
22 Status: Valid, Days to expiration:278
23 Serial Number: 82
24 Subject: C=IN,ST=KAR,O=CITRIX,CN=ia24096.com
25 Issuer: C=IN,ST=KAR,O=CITRIX,CN=ia14098.com
26 Signature Algorithm: sha256WithRSAEncryption
27 Validity
28 Not Before: Jul 13 10:15:37 2021 GMT
29 Not After : Jul 13 10:15:37 2022 GMT
30 Public Key Algorithm: rsaEncryption
31 Public Key size: 4096
32 SAN ENTRIES: None
33
34 CA Certificate:
35 Status: Valid, Days to expiration:278
36 Serial Number: 81
37 Subject: C=IN,ST=KAR,O=CITRIX,CN=ia14098.com
38 Issuer: C=IN,ST=KAR,O=CITRIX,CN=root4098.com
39 Signature Algorithm: sha256WithRSAEncryption
40 Validity
41 Not Before: Jul 13 10:13:20 2021 GMT
42 Not After : Jul 13 10:13:20 2022 GMT
43 Public Key Algorithm: rsaEncryption
44 Public Key size: 4096
45 SAN ENTRIES: None
46
47 CA Certificate:
48 Status: Valid, Days to expiration:278
49 Serial Number: 00
50 Subject: C=IN,ST=KAR,O=CITRIX,CN=root4098.com
51 Issuer: C=IN,ST=KAR,O=CITRIX,CN=root4098.com
52 Signature Algorithm: sha256WithRSAEncryption
53 Validity
54 Not Before: Jul 13 10:10:23 2021 GMT
55 Not After : Jul 13 10:10:23 2022 GMT
56 Public Key Algorithm: rsaEncryption
57 Public Key size: 2048
58 SAN ENTRIES: None
59
60 1) Vserver Name: v_server
61 2) Vserver Name: v_server
```

### To bind a certificate bundle to an SSL virtual server as an SNI certificate bundle using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select an SSL virtual server and click **Edit**.
3. In the **Certificate** section, click **Bundle Certificate**.

4. In the **Certificate Key Bundle Binding** page, do one of the following:
  - a) Select a bundle: Click the right-arrow (“>”) and choose a bundle from the list. Click **Select**.
  - b) Add a bundle: Click **Add**. Browse to the location of the bundle on the appliance or your local computer and click **Create**.
5. Select **SNICertKey Bundle**.
6. Click **Bind**.

### To unbind a certificate bundle from an SSL virtual server using the CLI

At the command prompt, type:

```
unbind ssl vserver <vip-name> -certkeybundleName <certkeybundle_name>
[-SNICertkeybundle]
```

#### Example:

```
unbind ssl vserver v_server -certkeybundleName cert_bundle
```

### To unbind a certificate bundle from an SSL virtual server using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select an SSL virtual server and click **Edit**.
3. In the **Certificate** section, click **Bundle Certificate**.
4. In the **SSL Virtual Server Certkey Bundle Binding** page, select a bundle, and click **Unbind**.
5. In the confirmation dialog box, click **Yes**.
6. Click **Close**.
7. Click **Done**.

## User scenarios for certificate bundle binding

The following scenarios explain how the ADC appliance processes a request related to certificate bundles.

### Scenario 1: A certificate-key pair and a certificate bundle containing the same server certificate is bound to the same SSL virtual server

While binding a certificate-key pair and a certificate bundle containing the same server certificate to the same SSL virtual server, the order of commands determines the final binding.

For example,

- Certificate bundle bundle1.pem contains server certificate S1 and intermediate certificates IC1 and IC2.
- Certificate file server\_cert.pem contains S1.

Both bundle1.pem and server\_cert.pem have the same server certificate S1.

If the following commands are run in the specified order, the server certificate binding to the SSL virtual server replaces the certificate bundle binding to that virtual server.

1. `add ssl certkeybundle b1 -bundlefile bundle1.pem`
2. `add ssl certkey server_cert -cert server_cert.pem`
3. `bind ssl vserver v1 -certkeybundle b1`
4. `bind ssl vserver v1 -cert server_cert`

### **Scenario 2: Two certificate bundles contain the same intermediate certificate chain**

You can add two certificate bundles with the same intermediate certificate chain. The two bundles act as independent entities.

In the following example, certificate bundle bundle-1 contains server certificate S1 and intermediate certificates IC1 and IC2 in that order. Certificate bundle bundle-2 contains server certificate S2 and intermediate certificates IC1 and IC2 in that order.

- Certificate bundle bundle1.pem (S1, IC1, IC2)
- Certificate bundle bundle2.pem (S2, IC1, IC2)

When S1 in bundle-1 is selected in the SSL handshake process, the intermediate certificate chain of bundle-1 is sent to the client.

```
add ssl certkeybundle bundle-1 -bundlefile bundle1.pem
add ssl certkeybundle bundle-2 -bundlefile bundle2.pem
```

### **Scenario 2: Two certificate bundles contain some common intermediate certificates in the chain**

You can add two certificate bundles with some common intermediate certificates in the chain.

In the following example, bundle-1 contains server certificate S1 and intermediate certificates IC1 and IC2. Certificate bundle bundle-2 contains server certificate S2 and intermediate certificates IC1, IC2, and IC3.

Certificate bundle bundle1.pem (S1, IC1, IC2)

Certificate bundle bundle2.pem (S2, IC1, IC2, IC3)

```
add ssl certkeybundle bundle-1 -bundlefile bundle1.pem
add ssl certkeybundle bundle-2 -bundlefile bundle2.pem
```

When S1 in bundle-1 is selected in the SSL handshake process, the intermediate certificate chain of bundle-1 is sent to the client. That is, (S1→IC1→IC2) is sent to the client. IC3 is not added.

When S2 in bundle-2 is selected in the SSL handshake process, the intermediate certificate chain of bundle-2 only sent to the client. That is, (S1→IC1→IC2→IC3) is sent to the client.

### Limitations of certificate bundle

- Monitoring the status of a certificate in the certificate bundle is not supported.
- Certificate bundles can be bound only to SSL virtual servers.
- OCSP stapling is not supported.

#### Note

Update operations are supported on certificate bundles from release 14.1 build 12.x. You can now directly update a certificate bundle. Previously, you had to first unbind and delete a bundle, and then add and bind a certificate bundle.

### Update an existing server certificate

To change an existing server certificate manually, you must perform the following steps:

1. Unbind the old certificate from the virtual server.
2. Remove the certificate from the appliance.
3. Add the new certificate to the appliance.
4. Bind the new certificate to the virtual server.


To reduce downtime when replacing a certificate-key pair, you can update an existing certificate. If you want to replace a certificate with a certificate that was issued to a different domain, you must disable domain checks before updating the certificate.

To receive notifications about certificates due to expire, you can enable the expiry monitor.

When you remove or unbind a certificate from a configured SSL virtual server or service, the virtual server or service becomes inactive. They are active after a new valid certificate is bound to them. To reduce downtime, you can use the update feature to replace a certificate-key pair that is bound to an SSL virtual server or an SSL service.

Overview diagram of how to update an SSL certificate on the NetScaler appliance.



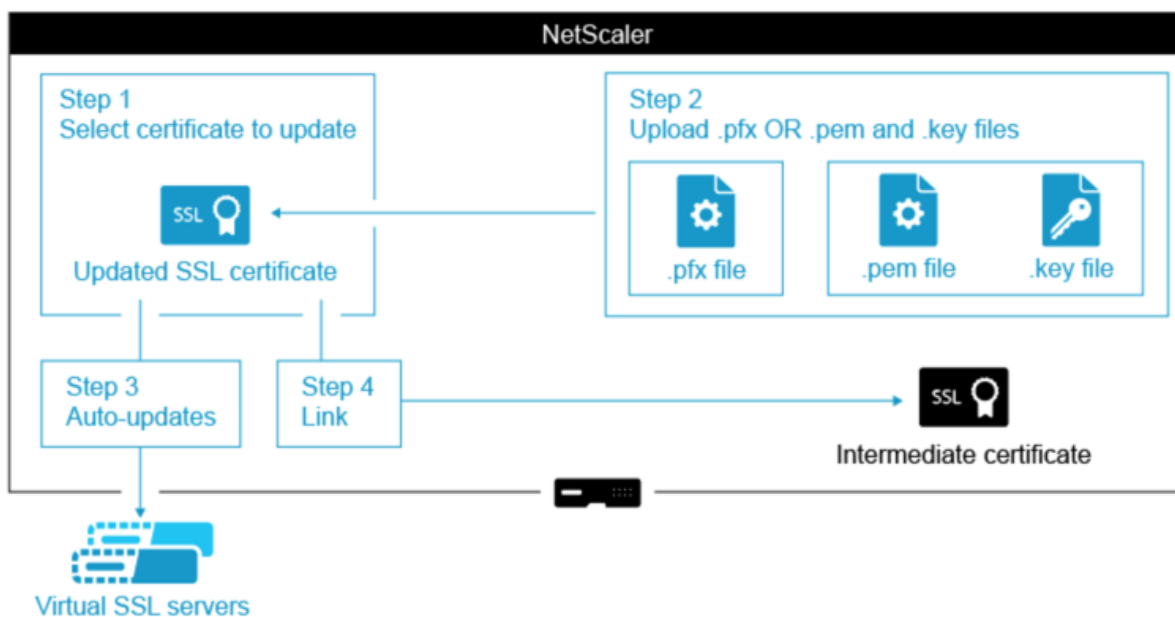

**Note:**

Starting from NetScaler release 14.1 build 21.x, the length of the path is increased from 63 to 255 characters for the certificate and key parameters.

### How to update an existing certificate

This is an embedded video. [Click the link to watch the video](#)

### Update an existing certificate-key pair by using the CLI

At the command prompt, type the following commands to update an existing certificate-key pair and verify the configuration:

```

1 update ssl certkey <certkeyName> -cert <string> -key <string>
2
3 show ssl certKey <certkeyName>

```

**Example:**

```


1 update ssl certkey siteAcertkey -cert /nsconfig/ssl/cert.pem -key /
 nsconfig/ssl/pkey.pem
2
3 Done
4
5 show ssl certkey siteAcertkey
6
7 Name: siteAcertkey Status: Valid
8 Version: 3

```

```
9 Serial Number: 02
10 Signature Algorithm: md5WithRSAEncryption
11 Issuer: /C=US/ST=CA/L=Santa Clara/O=siteA/OU=Tech
12 Validity
13 Not Before: Nov 11 14:58:18 2001 GMT
14 Not After: Aug 7 14:58:18 2004 GMT
15 Subject: /C=US/ST=CA/L=San Jose/O=CA/OU=Security
16 Public Key Algorithm: rsaEncryption
17 Public Key size: 2048
18 Done
```

**Update an existing certificate-key pair by using the GUI**

1. Navigate to **Traffic Management > SSL > Certificates > Server Certificates**.
2. Select the certificate that you want to update, and click **Update**.

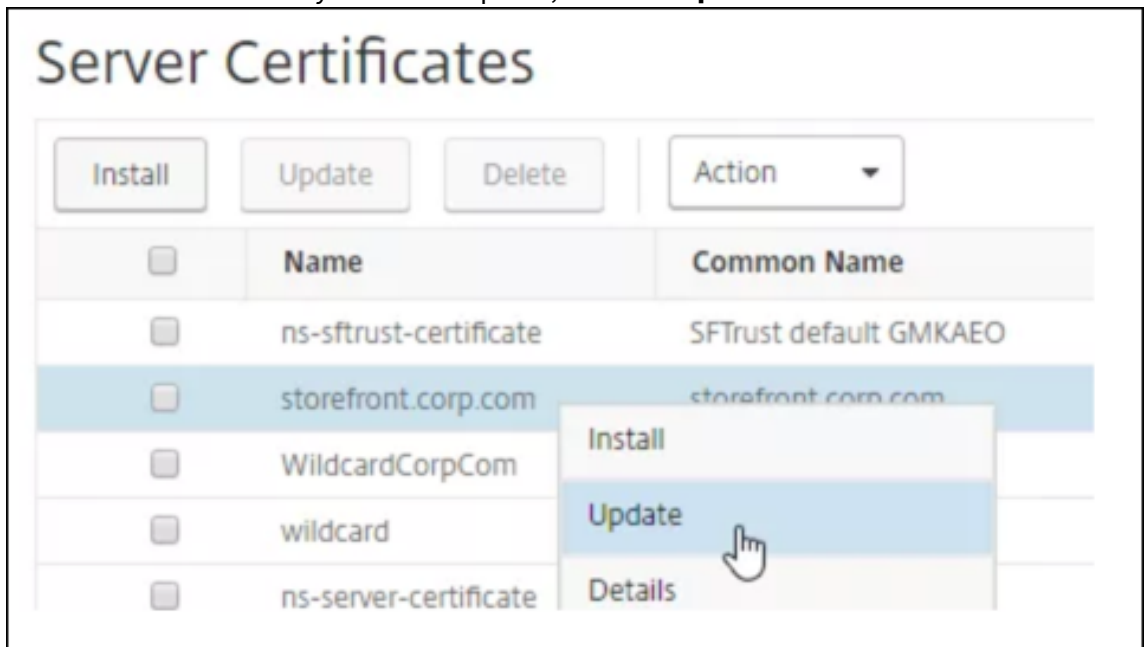

3. Select **Update the certificate and key**.

**Update Certificate**

Certificate-Key Pair Name  
storefront.corp.com

Update the certificate and key

Certificate File Name  
storefront.corp.com.pfx

Key Filename  
storefront.corp.com.pfx

Certificate Format  
PFX

4. In **Certificate File Name**, click **Choose File > Local**, and browse to the updated .pfx file or certificate PEM file.

Certificate-Key Pair Name  
storefront.corp.com

Update the certificate and key

Certificate File Name\*

Choose File ▼ storefront.corp.com.pfx + ?

Local

Appliance ✓

storefront.corp.com.pfx +

- If you upload a .pfx file, you are prompted to specify the .pfx file password.
- If you upload a certificate pem file, you must also upload a certificate key file. If the key is encrypted, you must specify the encryption password.

5. If the common name of the new certificate does not match the old certificate, then select **No Domain Check**.
6. Click **OK**. All the SSL virtual servers to which this certificate is bound are automatically updated.

**Update Certificate**

Certificate-Key Pair Name  
storefront.corp.com

Update the certificate and key

Certificate File Name\*  
Choose File ▼ storefront.corp.com.pfx + ?

Password\*  
..... [toggle icon] ?


No Domain Check

Notify When Expires

No SNMP Trap destination found. Notification will not be sent until a trap d

Notification Period  
30

7. After replacing the certificate, you might have to update the certificate link to a new intermediate certificate. For more information about updating an intermediate certificate without breaking the links, see [Update an intermediate certificate without breaking the links](#).
  - Right-click the updated certificate, and click **Cert Links**, to see if it is linked to an intermediate certificate.
  - If the certificate is not linked, then right-click the updated certificate, and click **Link** to link it to an intermediate certificate. If you don't see an option to link, then you must first have to install a new intermediate certificate on the appliance under the **CA Certificates** node.

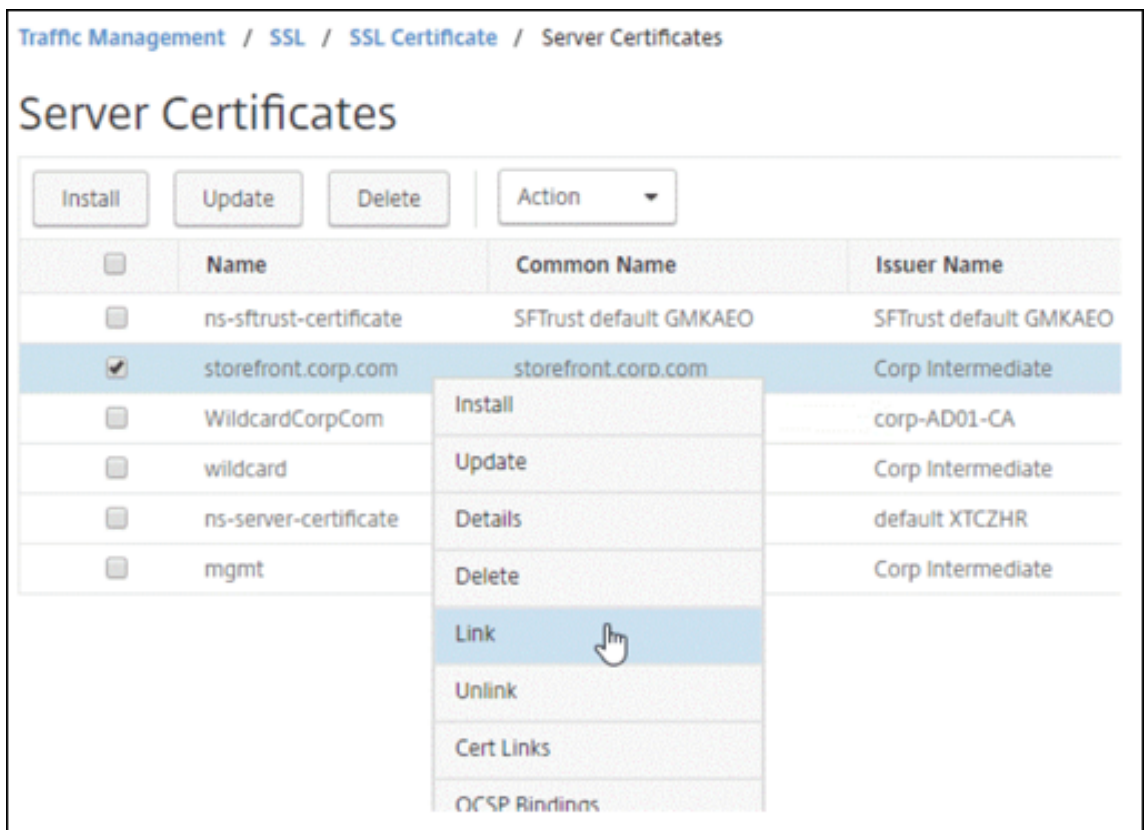

### Update an existing CA certificate

The steps to update an existing CA certificate are the same as updating an existing server certificate. The only difference is that you do not need a key in the case of CA certificates.

**Update Certificate**

Certificate-Key Pair Name  
SSL-certificate-test

Update the certificate and key

Certificate File Name\*  
Choose File ▾ test\_cert.pem Add

No Domain Check

Notify When Expires

### Disable domain checks

When an SSL certificate is replaced on the appliance, the domain name mentioned on the new certificate must match the domain name of the certificate being replaced. For example, if you have a certificate issued to abc.com, and you are updating it with a certificate issued to def.com, the certificate update fails.

However, if you want the server that has been hosting a particular domain to host a new domain, disable the domain check before updating its certificate.

### Disable the domain check for a certificate by using the CLI

At the command prompt, type the following commands to disable the domain check and verify the configuration:

```
1 update ssl certKey <certkeyName> -noDomainCheck
2
3 show ssl certKey <certkeyName>
```

### Example:

```
1 update ssl certKey sv -noDomainCheck
2
3 Done
4
```

```
5 show ssl certkey sv
6
7 Name: sv
8 Cert Path: /nsconfig/ssl/complete/server/server_rsa_512.pem
9 Key Path: /nsconfig/ssl/complete/server/server_rsa_512.ky
10 Format: PEM
11 Status: Valid, Days to expiration:9349
12 Certificate Expiry Monitor: DISABLED
13 Done
```

### Disable the domain check for a certificate by using the GUI

1. Navigate to **Traffic Management > SSL > Certificates**, select a certificate, and click **Update**.
2. Select **No Domain Check**.

### Replace the default certificate of an ADC appliance with a trusted CA certificate that matches the host name of the appliance

The following procedure assumes that the default certificate (`ns-server-certificate`) is bound to the internal services.

1. Navigate to **Traffic Management > SSL > SSL Certificates > Create Certificate Request**.
2. In common name, type `test.citrixadc.com`.
3. Submit the CSR to a trusted certificate authority.
4. After receiving the certificate from the trusted CA, copy the file to the `/nsconfig/ssl` directory.
5. Navigate to **Traffic Management > SSL > Certificates > Server Certificates**.
6. Select the default server certificate (`ns-server-certificate`) and click **Update**.
7. In the **Update Certificate** dialog box, in **Certificate File Name**, browse to the certificate received from the CA after signing.
8. In the **Key File Name** field, specify the default private key file name (`ns-server.key`).
9. Select **No Domain Check**.
10. Click **OK**.

### Enable the expiry monitor

An SSL certificate is valid for a specific period. A typical deployment includes multiple virtual servers that process SSL transactions, and the certificates bound to them can expire at different times. An expiry monitor configured on the appliance creates entries in the appliance's syslog and ns audit logs when a certificate configured is due to expire.

If you want to create SNMP alerts for certificate expiration, you must configure them separately.

### Enable an expiry monitor for a certificate by using the CLI

At the command prompt, type the following commands to enable an expiry monitor for a certificate and verify the configuration:

```
1 set ssl certKey <certkeyName> [-expiryMonitor (ENABLED | DISABLED) [-
 notificationPeriod <positive_integer>]]
2
3 show ssl certKey <certkeyName>
```

#### Example:

```
1 set ssl certKey sv -expiryMonitor ENABLED - notificationPeriod 60
2 Done
```

### Enable an expiry monitor for a certificate by using the GUI

1. Navigate to **Traffic Management > SSL > Certificates**, select a certificate, and click **Update**.
2. Select **Notify When Expires**, and optionally specify a notification period.

### Update an intermediate certificate without breaking the links

You can update an intermediate certificate without breaking any existing links. The ‘AuthorityKeyIdentifier’ extension, in the linked certificate issued by the certificate to be replaced, must not contain an authority certificate serial number (‘authorityCertSerialNumber’) field. If the ‘AuthorityKeyIdentifier’ extension contains a serial number field, then the certificate serial numbers of the old and new certificate must be the same. You can update any number of certificates in the link, one at a time, if the preceding condition is met. Previously, the links broke if an intermediate certificate was updated.

For example, there are four certificates: *CertA*, *CertB*, *CertC*, and *CertD*. Certificate *CertA* is the issuer for *CertB*, *CertB* is the issuer for *CertC*, and so on. If you want to replace an intermediate certificate *CertB* with *CertB\_new*, without breaking the link, the following condition must be met:

The certificate serial number of *CertB* must match the certificate serial number of *CertB\_new* if both of the following conditions are met:

- The *AuthorityKeyIdentifier* extension is present in *CertC*.
- This extension contains a serial number field.

If the common name in a certificate changes, while updating the certificate specify *nodomaincheck*.

In the preceding example, to change “www.example.com” in *CertD* to “\*.example.com,” select the ‘No Domain Check’ parameter.



## Update the certificate by using the CLI

At the command prompt, type:

```
1 update ssl certKey <certkeyName> -cert <string> [-password] -key <string> [-noDomainCheck]
```

### Example:

```
1 update ssl certkey siteAcertkey -cert /nsconfig/ssl/cert.pem -key /nsconfig/ssl/pkey.pem -noDomainCheck
```

## Display a certificate chain

A certificate contains the name of the issuing authority and the subject to whom the certificate is issued. To validate a certificate, you must look at the issuer of that certificate and confirm if you trust the issuer. If you do not trust the issuer, you must see who issued the issuer certificate. Go up the chain until you reach the root CA certificate or an issuer that you trust.

As part of the SSL handshake, when a client requests a certificate, the appliance presents a certificate and the chain of issuer certificates present on the appliance. An administrator can view the certificate chain for the certificates present on the appliance and install any missing certificates.

## View the certificate chain for the certificates present on the appliance by using the CLI

At the command prompt, type:

```
1 show ssl certchain <cert_name>
```

### Examples

There are 3 certificates: c1, c2, and c3. Certificate c3 is the root CA certificate and signs c2, and c2 signs c1. The following examples illustrate the output of the `show ssl certchain c1` command in different scenarios.

#### Scenario 1:

Certificate c2 is linked to c1, and c3 is linked to c2.

Certificate c3 is a root CA certificate.

If you run the following command, the certificate links up to the root CA certificate are displayed.

```
1 show ssl certchain c1
2
```

```
3 Certificate chain details of certificate name c1 are:
4 1) Certificate name: c2 linked; not a root
 certificate
5 2) Certificate name: c3 linked; root certificate
6 Done
```

**Scenario 2:**

Certificate c2 is linked to c1.

Certificate c2 is not a root CA certificate.

If you run the following command, the information that certificate c3 is a root CA certificate but is not linked to c2 is displayed.

```
1 show ssl certchain c1
2
3 Certificate chain details of certificate name c1 are:
4 1) Certificate Name: c2 linked; not a root
 certificate
5 2) Certificate Name: c3 not linked; root certificate
6 Done
```

**Scenario 3:**

Certificate c1, c2, and c3 are not linked but are present on the appliance.

If you run the following command, information about all the certificates starting with the issuer of certificate c1 is displayed. It is also specified that the certificates are not linked.

```
1 show ssl certchain c1
2
3 Certificate chain details of certificate name c1 are:
4 1) Certificate Name: c2 not linked; not a root
 certificate
5 2) Certificate Name: c3 not linked; root certificate
6 Done
```

**Scenario 4:**

Certificate c2 is linked to c1.

Certificate c3 is not present on the appliance.

If you run the following command, information about the certificate linked to c1 is displayed. You are prompted to add a certificate with the subject name specified in c2. In this case, the user is asked to add the root CA certificate c3.

```
1 show ssl certchain c1
2
3 Certificate chain details of certificate name c1 are:
4 1) Certificate Name: c2 linked; not a root
 certificate
```

```
5 2) Certificate Name: /C=IN/ST=ka/O=netscaler/CN=test
6 Action: Add a certificate with this subject name.
7 Done
```

### Scenario 5:

A certificate is not linked to certificate c1 and the issuer certificate of c1 is not present on the appliance.

If you run the following command, you are prompted to add a certificate with the subject name in certificate c1.

```
1 sh ssl certchain c1
2
3 Certificate chain details of certificate name c1 are:
4 1) Certificate Name: /ST=KA/C=IN
5 Action: Add a certificate with this subject name.
```

### Support for CA certificate bundle

Starting from release 14.1 build 29.x, you can effortlessly add and bind a CA certificate bundle to an SSL virtual server, service, and service group without creating separate files for each CA certificate using the `cacertbundle` parameter, you can easily add, bind, unbind, and delete a CA certificate bundle file containing a list of CA certificates.

#### Important:

- Bundle creation fails if the following order is not met:

```
1 - `IC[1-9]` are intermediate certificates. `IC[i]` is issued by `
 IC[i+1]`. The certificates must be placed in a sequence, all
 the intermediate certificates must be present in the bundle,
 and the root certificate should be the last one.
2 In the following example, the certificate set (bundle.pem)
 contains the following files:
3 - First intermediate certificate (bundle_ic1)
4 - Second intermediate certificate (bundle_ic2)
5 - Root certificate
6 - A maximum of 9 intermediate certificates are supported.
7 - Certificate must be in PEM format.
```

- If a CA certificate key pair is bound to a virtual server, service or service group then you cannot bind the CA certificate bundle and vice versa.
- Encrypted private keys are not supported.
- DTLS bind and Cluster are not supported.
- OCSP and CRL is not supported.

## Add CA certificate bundle using CLI

At the command prompt, type:

```
1 add ssl cacertbundle <cacertbundle_name> -bundlefile <
 cabundle_file_name>
2 sh ssl cacertbundle
```

### Example:

```
1 add ssl cacertbundle cb1 -bundlefile cabundle_1.pem
2 sh ssl cacertbundle cb1
3
4 Name: cb1
5 CA certbundle path: cabundle_1.pem
6
7
8 CA Certificate:
9 Status: Valid, Days to expiration:6501
10 Serial Number: F5CFF9EF1E246198
11 Subject: C=in,O=citrix,CN=ca_6
12 Issuer: C=in,O=citrix,CN=root
13 Signature Algorithm: sha1WithRSAEncryption
14 Validity
15 Not Before: Jul 7 09:44:12 2011 GMT
16 Not After : Jun 29 09:44:12 2041 GMT
17 Public Key Algorithm: rsaEncryption
18 Public Key size: 2048
19 SAN ENTRIES:
20 None
21
22 CA Certificate:
23 Status: Valid, Days to expiration:6501
24 Serial Number: 8D653DEA29C98668
25 Subject: C=in,O=citrix,CN=root
26 Issuer: C=in,O=citrix,CN=root
27 Signature Algorithm: sha1WithRSAEncryption
28 Validity
29 Not Before: Jul 7 09:44:08 2011 GMT
30 Not After : Jun 29 09:44:08 2041 GMT
31 Public Key Algorithm: rsaEncryption
32 Public Key size: 2048
33 SAN ENTRIES:
34 None
35 Done
```

## Add CA certificate bundle using GUI

1. Navigate to **Traffic Management > SSL > CA Certificate Bundle**.
2. Click **Install**.

3. In the **Install CA Certificate Bundle** page, enter the name and select the CA certificate bundle file.
4. Click **Create**.

### Delete CA certificate bundle using CLI

At the command prompt, type:

```
rm ssl cacertbundle <cacertbundle_name>
```

#### Example:

```
rm ssl cacertbundle cacertbundlesample
```

### Delete CA certificate bundle using GUI

1. Navigate to **Traffic Management > SSL > CA Certificate Bundle**.
2. Select an existing CA certificate bundle and click **Delete**.

### Bind CA certificate bundle to an SSL virtual server using CLI

At the command prompt, type:

```
1 bind ssl vserver <vip-name> -cacertbundle <cacertbundle_name> [-skipCACertBundle]
```

#### Example:

```
1 bind ssl vserver v1 -cacertbundle cb1
2 Done
3 > sh ssl vs v1
4 Advanced SSL configuration for VServer v1:
5 DH: DISABLED
6 DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA:
7 ENABLED Refresh Count: 0
8 Session Reuse: ENABLED Timeout: 120 seconds
9 Cipher Redirect: DISABLED
10 ClearText Port: 0
11 Client Auth: DISABLED
12 SSL Redirect: DISABLED
13 Non FIPS Ciphers: DISABLED
14 SNI: DISABLED
15 OCSP Stapling: DISABLED
16 HSTS: DISABLED
17 HSTS IncludeSubDomains: NO
18 HSTS Max-Age: 0
19 HSTS Preload: NO
```

```

19 SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2:
 ENABLED TLSv1.3: DISABLED
20 Push Encryption Trigger: Always
21 Send Close-Notify: YES
22 Strict Sig-Digest Check: DISABLED
23 Zero RTT Early Data: DISABLED
24 DHE Key Exchange With PSK: NO
25 Tickets Per Authentication Context: 1
26
27 ECC Curve: X_25519, P_256, P_384, P_224, P_521
28
29 1) CA certbundle Name: cb1 CA_Name Sent
30
31 1) Cipher Name: DEFAULT
32 Description: Default cipher list with encryption strength >=
 128bit
33 Done

```

### Bind CA certificate bundle using GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select the SSL virtual server and click **Edit**.
3. Under the Certificate section, click **CA Certificate Bundle**.
4. In the **CA Certificate Bundle Binding** page, select the CA certificate bundle and click **Bind**.

### Unbind CA certificate bundle using CLI

At the command prompt, type:

```
unbind ssl vserver <vip-name> -cacertbundle <cacertbundle_name>
```

#### Example:

```
unbind ssl vserver Vserver1 -cacertbundle cb1
```

### Unbind CA certificate bundle using GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select an SSL virtual server and click **Edit**.
3. Under the **Certificate** section, click **CA Certificate Bundle**.
4. In the **SSL Virtual Server CA Certificate Bundle Binding** page, select the CA Bundle file and click **Unbind**.

## Generate a server test certificate

May 2, 2023


The NetScaler appliance allows you to create a test certificate for server authentication by using a GUI wizard in the configuration utility. A server certificate is used to authenticate and identify a server in an SSL handshake. Typically, a trusted CA issues a server certificate. The server sends the certificate to a client who uses it to authenticate the server.

For issuing a server test certificate, the appliance operates as a certificate authority. This certificate can be bound to an SSL virtual server for authentication in an SSL handshake with a client. This certificate is for testing purposes only. Do not use in a production environment.


You can install the server test certificate on any virtual server that uses the SSL or the SSL\_TCP protocol.

### Generate a server test certificate by using the GUI

1. Navigate to **Traffic Management > SSL** and, in the **SSL Certificates group**, select **Create and Install a Server Test Certificate**.

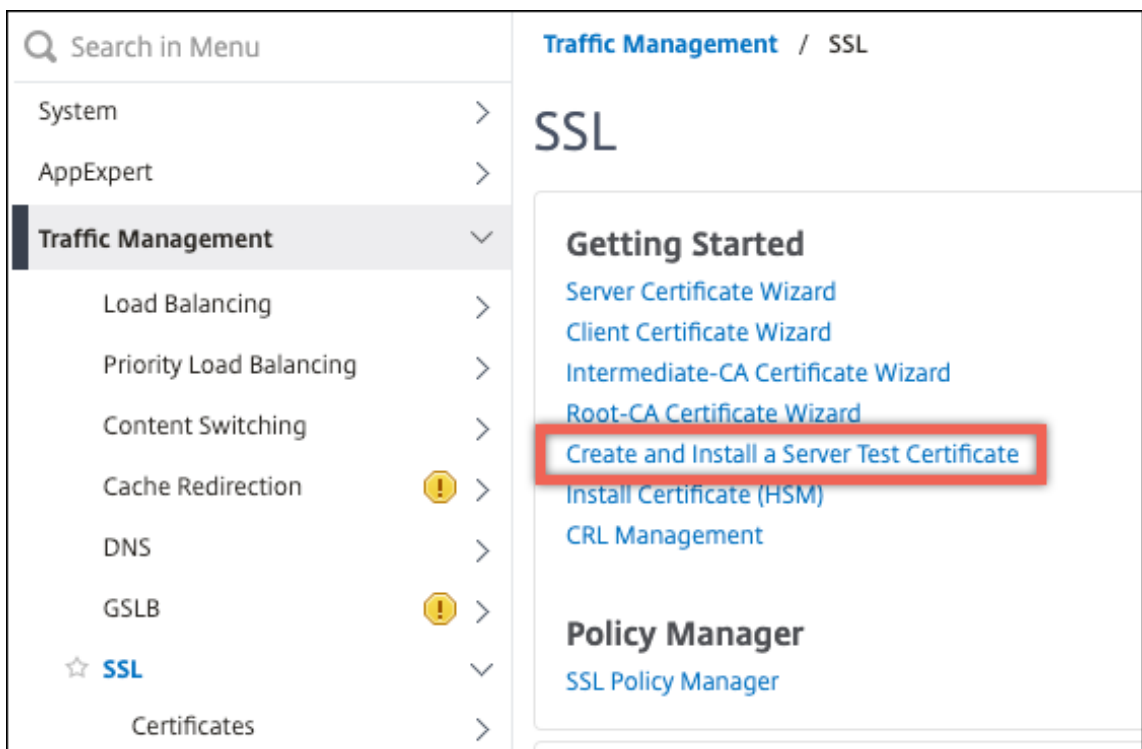

2. Enter details for the parameters and click **Create**.

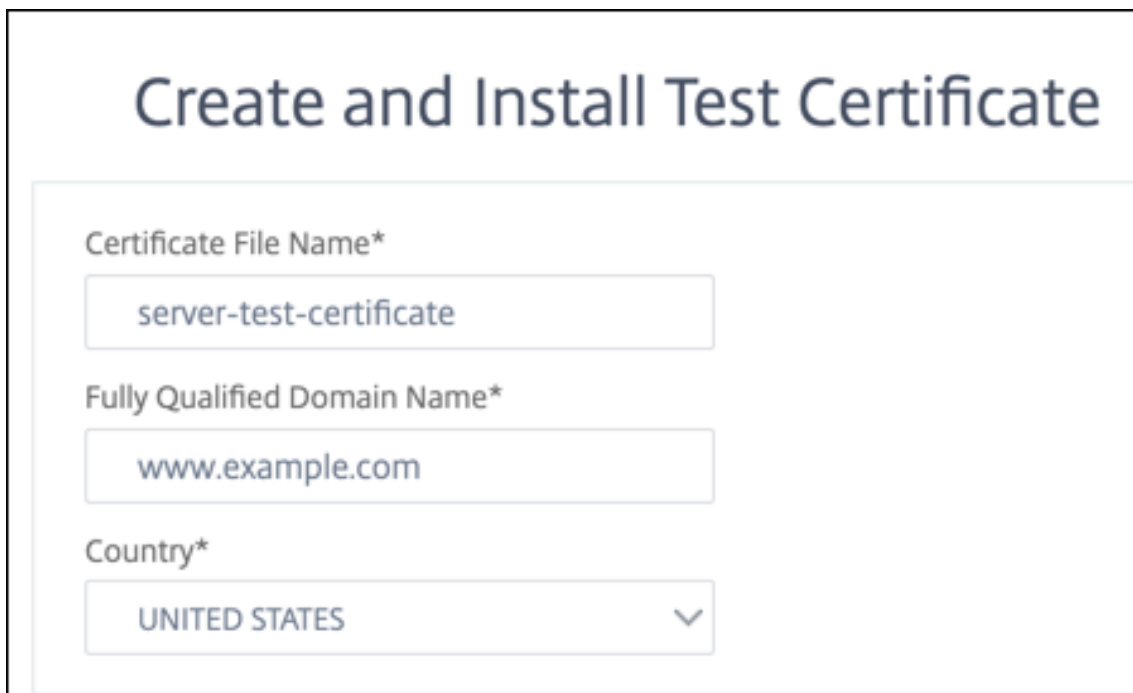

## Create and Install Test Certificate

Certificate File Name\*

Fully Qualified Domain Name\*

Country\*

## Import and convert SSL files

April 12, 2024

You can now import SSL resources, such as certificates, private keys, CRLs, and DH keys, from remote hosts even if FTP access to these hosts is not available. This feature is especially helpful in environments where shell access to the remote host is restricted. Default folders are created in `/nsconfig/ssl` as follows:

- For certificate files: `/nsconfig/ssl/certfile`
- For private keys: the `/nsconfig/ssl/keyfile`
- For CRLs: `/var/netscaler/ssl/crlfile`
- For DH keys: `/nsconfig/ssl/dhfile`

Imports from both HTTP and HTTPS servers are supported. However, the import fails if the file is on an HTTPS server that requires client certificate authentication for access.

### Notes:

- The import command is not stored in the configuration (`ns.conf`) file, because reimporting the file after a restart might cause an error.
- The import command fails if the object to be imported is on an HTTPS server that requires



client certificate authentication for access, and the issuer certificate of the HTTPS server is not present in the `/etc/ssl` directory on NetScaler to authenticate the HTTPS server.

## Import a certificate file

You can use the CLI and GUI to import a file (resource) from a remote host.

### Import a certificate file from a remote host by using the CLI

At the command prompt, type:

```
1 import ssl certFile [<name>] [<src>]
```

#### Example:

```
1 import ssl certfile my-certfile http://www.example.com/file_1
```

```
1 show ssl certfile
2 Name : my-certfile
3 URL : http://www.example.com/file_1
```

To remove a certificate file, use the `rm ssl certFile` command, which accepts only the 'name' argument.

### Import a key file from a remote host by using the CLI

At the command prompt, type:

```
1 import ssl keyFile [<name>] [<src>]
```

#### Example:

```
1 import ssl keyfile my-keyfile http://www.example.com/key_file
```

```
1 show ssl keyfile
2 Name : my-keyfile
3 URL : http://www.example.com/key_file
```

To remove a key file, use the `rm ssl keyFile` command, which accepts only the 'name' argument.

### Import a CRL file from a remote host by using the CLI

At the command prompt, type:

```
1 import ssl crlFile [<name>] [<src>]
```

To remove a CRL file, use the `rm ssl crlFile` command, which accepts only the <name> argument.

**Example:**

```
1 import ssl crlfile my-crlfile http://www.example.com/crl_file
2
3 show ssl crlfile
4
5 Name : my-crlfile
6 URL : http://www.example.com/crl_file
```

**Import a DH file from a remote host by using the CLI**

At the command prompt, type:

```
1 import ssl dhFile [<name>] [<src>]
```

**Example:**

```
1 import ssl dhfile my-dhfile http://www.example.com/dh_file
2 show ssl dhfile
3 Name : my-dhfile
4 URL : http://www.example.com/dh_file
```

To remove a DH file, use the `rm ssl dhFile` command, which accepts only the <name> argument.

**Import an SSL resource by using the GUI**

Navigate to **Traffic Management > SSL > Imports**, and then select the appropriate tab.

**Import PKCS#8 and PKCS#12 certificates**

If you want to use certificates and keys that you already have on other secure servers or applications in your network, you can export them, and then import them to the NetScaler appliance. You might have to convert exported certificates and keys before you can import them to the NetScaler appliance.

For the details of how to export certificates from secure servers or applications in your network, see the documentation of the server or application from which you want to export.

**Note:**

For installation on the NetScaler appliance, key and certificate names cannot contain spaces or special characters other than those characters supported by the UNIX file system. Follow the appropriate naming convention when you save the exported key and certificate.

A certificate and private key pair is commonly sent in the PKCS#12 format. The appliance supports PEM and DER formats for certificates and keys. To convert PKCS#12 to PEM or DER, or PEM or DER to PKCS#12, see the “Convert SSL certificates for import or export” section later in this page.

The NetScaler appliance does not support PEM keys in PKCS#8 format. However, you can convert these keys to a supported format by using the OpenSSL interface, which you can access from the CLI or the configuration utility. Before you convert the key, you need to verify that the private key is in PKCS#8 format. Keys in PKCS#8 format typically start with the following text:

```
1 -----BEGIN ENCRYPTED PRIVATE KEY-----
2
3
4
5  euSSZQZKgrgUQ==
6
7
8
9 -----END ENCRYPTED PRIVATE KEY-----
```

**Open the OpenSSL interface from the CLI**

1. Open an SSH connection to the appliance by using an SSH client, such as PuTTY.
2. Log on to the appliance by using the administrator credentials.
3. At the command prompt, type shell.
4. At the shell prompt type `openssl`.

**Open the OpenSSL interface from the GUI**

Navigate to **Traffic Management > SSL** and, in the Tools group, select **OpenSSL interface**.

**Convert a non-supported PKCS#8 key format to an encrypted supported key format by using the OpenSSL interface**

At the OpenSSL prompt, type one of the following commands, depending on whether the non-supported key format is of type RSA or ECDSA:

```
1 OpenSSL>rsa- in <PKCS#8 Key Filename> -des3 -out <encrypted Key
 Filename>
2
3 OpenSSL>ec -in <PKCS#8 Key Filename> -des3 -out <encrypted Key Filename
 >
```

### Parameters for converting an unsupported key format to a supported key format

- **PKCS#8 Key Filename:** The input file name of the incompatible PKCS#8 private key.
- **encrypted Key Filename:** The output file name of the compatible encrypted private key in PEM format.
- **unencrypted Key Filename:** The output file name of the compatible unencrypted private key in PEM format.

### Convert SSL certificates for import or export

A NetScaler appliance supports the PEM and DER formats for SSL certificates. Other applications, such as client browsers and some external secure servers, require various public key cryptography standard (PKCS) formats. The appliance can convert the PKCS#12 format to PEM or DER format for importing a certificate to the appliance, and can convert PEM or DER to PKCS#12 for exporting a certificate. For more security, conversion of a file for import can include encryption of the private key with the DES or DES3 algorithm.

#### Notes:

- If you use the GUI to import a PKCS#12 certificate, and the password contains a dollar sign (\$), back quote (`), or escape (\) character, the import might fail. If it does, the ERROR: Invalid password message appears. If you must use a special character in the password, be sure to prefix it with an escape character (\) unless all imports are performed by using the CLI.
- Starting from NetScaler release 14.1 build 21.x, the length of the path is increased from 63 to 255 characters for the certificate and key parameters in the following commands:
  - convert ssl pkcs12
  - convert ssl pkcs8

### Convert the format of a certificate by using the CLI

At the command prompt, type the following command:

```
1 convert ssl pkcs12 <outfile> [-import [-pkcs12File <inputFilename>] [-
 des | -des3] [-export [-certFile <inputFilename>] [-keyFile <
 inputFilename>]]
```


During the operation, you are prompted to enter an import password or an export password. For an encrypted file, you are also prompted to enter a passphrase.

**Example:**

```
1 convert ssl pkcs12 Cert-Import-1.pem -import -pkcs12File Cert-Import-1.pfx -des
2
3 convert ssl pkcs12 Cert-Client-1.pfx -export -certFile Cert-Client-1 -keyFile Key-Client-1
```

**Convert the format of a certificate by using the GUI**

1. Navigate to **Traffic Management > SSL** and, in the **Tools** group, select **Import PKCS#12**.

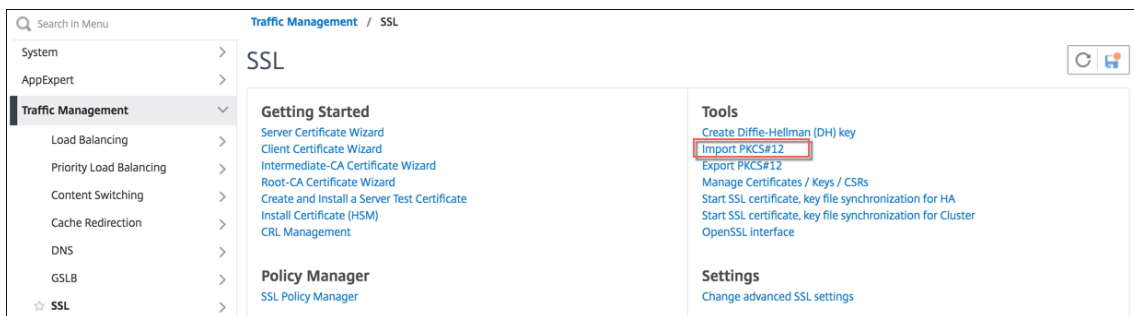

2. Specify the PEM certificate name in the **Output File Name** field.
3. Browse to the location of the PFX certificate on your local computer or the appliance.

## Import PKCS12 File

Output File Name\*

ⓘ

PKCS12 File\*

▾  ⓘ


Import Password\*

ⓘ

Encoding Format

▾

4. Click **OK**.
5. Click **Manage Certificates / Keys / CSRs** to view the converted PEM file.

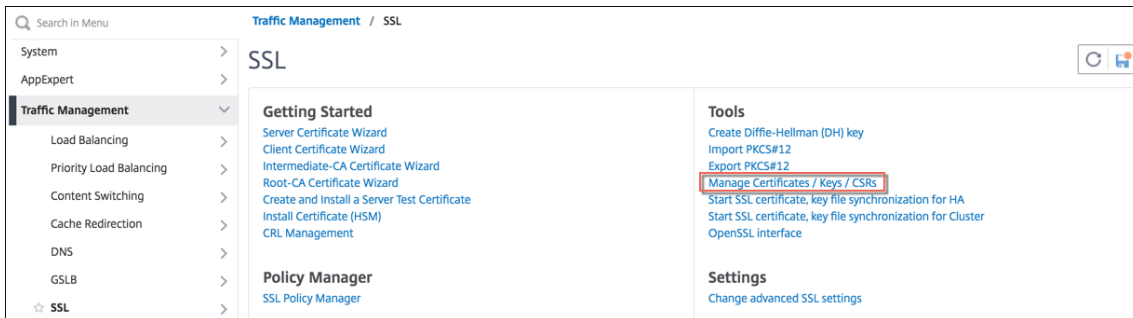

6. You can view the uploaded PFX file and the converted PEM file.

|                          |            |      |                          |                          |
|--------------------------|------------|------|--------------------------|--------------------------|
| <input type="checkbox"/> | letrsa.pem | File | Mon Mar 30 12:44:01 2020 | Mon Mar 30 12:44:11 2020 |
| <input type="checkbox"/> | mycert.pem | File | Mon Mar 30 15:14:28 2020 | Mon Mar 30 15:14:28 2020 |

7. Navigate to **SSL > Certificates > Server Certificates** and click **Install**.
8. Specify a **Certificate-Key Pair Name**.
9. Browse to the location of the PEM file.
10. Specify the password when prompted.

11. Click **Install**.

**Install Server Certificate**

Certificate-Key Pair Name\*  
testcert ?

Certificate File Name\*  
Choose File ▾ cert.pem ?

Key File Name  
Choose File ▾ key\_1.pem ?

Password\*  
..... ?

Notify When Expires

2 SNMP Trap destination found.

Notification Period  
30

12. Bind the certificate-key pair to an SSL virtual server.

## Bind an SSL certificate to a virtual server on the NetScaler appliance

December 28, 2023

An SSL certificate is an essential part of SSL encryption and decryption processes. The certificate is used during an SSL handshake to establish the identity of the SSL server, which is the NetScaler appliance as it acts as the SSL termination point for the clients.

The certificate used for processing the SSL transactions must be bound to the virtual server (SSL) that

receives the SSL data.

## To bind an SSL certificate to an SSL virtual server using the command line interface

At the command prompt, type:


```
1 bind ssl vs <vServerName> -certkeyName <certificate-KeyPairName>
2 show ssl vs <vServerName>
```

### Example:

```
> bind ssl vs sslserver -certkeyName ssltestcert
Done
> show ssl vs sslserver
Advanced SSL configuration for VServer sslserver:
DH: DISABLED
DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA: ENABLED Refresh Count: 0
Session Reuse: ENABLED Timeout: 120 seconds
Cipher Redirect: DISABLED
SSLv2 Redirect: DISABLED
ClearText Port: 0
Client Auth: DISABLED
SSL Redirect: DISABLED
Non FIPS Ciphers: DISABLED
SNI: DISABLED
SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2: ENABLED
Full Encryption Trigger: Always
Send CloseNotify: YES
ECC Curve: P_256, F_384, P_224, F_521
1) CertKey Name: ssltestcert Server Certificate
1) Cipher Name: DEFAULT
Description: Predefined Cipher Alias
Done
```

## To bind an SSL certificate to an SSL virtual server using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select a virtual server of type SSL and click **Edit**.
3. In the **Load Balancing Virtual Server** page, under the **Certificates** section, click **No Server Certificate**.

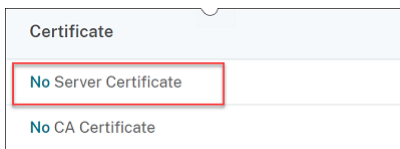

4. In the **Server Certificate Binding** page, click **Click to select**.
5. Select the SSL certificate and click **Select**.
6. Click **Bind** to bind the SSL certificate to the virtual server.
7. Click **Done**.

You have completed binding the SSL certificate to the virtual server.

### Note

When you try to bind a certificate-key pair to a virtual server that already has a certificate-key pair bound to it, NetScaler unbinds the old certkey and binds the new one. The following message appears:



**Warning:** Current certificate replaces the previous binding

Existing connections where the handshake is complete are not affected. The other connections are terminated.

## Zero-touch certificate management

October 28, 2024

Zero-touch certificate management automates the installation and management of SSL certificates, eliminating the need for manual configuration. By uploading certificates to NetScaler Console, administrators can centralize certificate management. NetScaler then periodically polls both NetScaler Console and packet engine, intelligently identifies the changes to the zero-touch certificate store. This ensures that the packet engine remains synchronized with the zero-touch certificate store on NetScaler Console. Through this process, the packet engine automatically handles the otherwise tedious tasks of adding, binding, and linking certificates, streamlining the certificate management process.

### Benefits of zero-touch certificate management

By enabling the zero-touch certificate management feature, you can ensure that the underlying processes are done without any manual intervention:

- Adding, binding, and linking the certificates
- Providing certificates and keys in a specific order or together
- Installing and using the best suitable certificate during TLS handshake.
- Deleting the expired certificates from the packet engine.
- Pushing certificates with a future issue date to the packet engine from NetScaler Console once the date is valid.


With the zero-touch certificate management feature, you can prevent the following errors commonly associated with manual processes:

- Overwriting certificates or keys. If you upload another certificate or key with the same name that exists on NetScaler, it overwrites the existing one. This might cause applications to go down after a reboot.
- Accidental certificate deletion can lead to application downtime after a reboot.

To enable the zero-touch certificate management feature, see [Zero-touch certificate management](#).

## How it works

The following picture shows the workflow of zero-touch certificate management:

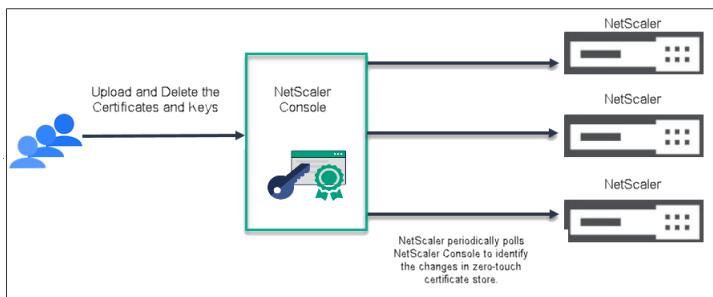

The following are the high-level steps involved in zero-touch certificate management.

- An admin uploads all certificates and keys, in any format, to NetScaler Console. For more information on uploading certificates and keys, see [Zero-touch certificate management](#).
- NetScaler Console validates and stores the certificates and keys in the database.
- The zero-touch certificate store validates and discards the files that are in an incorrect format. The supported file formats are:
  - Certificate (PEM or DER)
  - Private Keys
  - Password-protected private keys
  - CA certificates (Root or Intermediate certificates)
  - PFX files
  - Certificate bundle
- NetScaler pulls the certificates and keys from NetScaler Console and pushes them to the packet engine.
- The packet engine then handles tasks such as installing, deleting, adding, binding, and linking the certificates and keys.
- During each polling, NetScaler performs a comparison to identify any certificates and keys that are present in the packet engine but not in NetScaler Console. In such cases, it deletes these certificates and keys from the packet engine, ensuring the system remains synchronized with NetScaler Console.

### Note:

Ensure that the instance is managed by NetScaler Console. Enable the zero-touch certificate management feature in NetScaler Console. For more information, see [Zero-touch certificate management](#).

## Certificates states in NetScaler

Certificates in NetScaler can be active or inactive.

- **Active Certificates:** Certificates that are available for immediate use. NetScaler selects server certificates for TLS transactions based on the received SNI or the default SNI configured on a virtual server.
- **Inactive Certificates:** The certificates in NetScaler might become inactive due to any of the following reasons.
  - The private key for the server certificate is not present on the remote server.
  - The server certificate contains SAN entries that conflict with multiple other active certificates.
  - The server certificate contains SAN entries that conflict with one of the active certificates but do not cover all the SAN entries of the active certificate.
  - The server certificate contains SAN entries conflicting with an active certificate and has an earlier expiry date than the active certificate.
  - The server certificate contains a SAN that exceeds the maximum allowed entries.
  - The server certificate does not have a common name.
  - The SSL certificate has a common name or SAN name that exceeds the maximum allowed length.
  - The server certificate is inactive due to a lack of memory in the packet engine.
  - The CA certificate is inactive because its property increases the request message length beyond 14 KB.
  - The CA certificate is inactive because its distinguished name cannot be encoded for the certificate request message.

## CA certificate management

CA certificates uploaded to NetScaler Console are used to authenticate both the client and server once installed on the packet engine. The maximum length of the certificate request message is 14 KB. CAs included in the certificate request message remain in an active state and participate in the TLS authentication process, while others are in an inactive state. If any active CA certificate is deleted, NetScaler reassesses the list of active certificates.

CA certificates fetched from NetScaler Console are used for the TLS handshake if the zero-touch certificate management feature is enabled and no server certificate is bound to a virtual server.

### Note:

- Uploaded certificates are classified as CA certificates if the basic constraints extension has the CA field set to true. Otherwise, they are considered as server certificates.

- Certificates and keys are available in the packet engine and not physically stored in NetScaler.

## TLS handshake process

During the TLS handshake, the server certificate is selected based on the Server Name Indication (SNI) received from the client. To support clients that do not include the SNI extension in their request, NetScaler provides an option to configure a default SNI. To configure the default SNI, use the following command:

```
set ssl vservers -defaultSNI <sni_name>
```

### Notes:

- The administrator must ensure that the certificate corresponding to the default SNI is uploaded to NetScaler Console.
- The server certificates fetched from NetScaler Console are used for the TLS handshake if the zero-touch certificate management feature is enabled and no server certificate is bound to a virtual server.

## View the certificate and key list

NetScaler displays the source of the certificates and keys as remote if they are fetched from NetScaler Console.

Also, you can verify whether the zero touch certificate management feature is enabled using the show command.

### To view the status of zero-touch Certificate management using the CLI

At the command prompt, type:

```
show ssl zerotouchparam
```

### Example:

```
1 show ssl zerotouchparam
2
3 SSL Zerotouch Config Params: ENABLED
4 Remoteserver IP : 10.146.111.81
5 Keyfile Name : sslparam.key
6
7 Zerotouch Certfetcher Polled Status:
8 Request Status : SUCCESS
9 Request Type : GET-LIST
10 HTTP Status Code : 200
```

```
11 Time-Stamp : 2024-10-08T09:15:56Z
12 Next Polling At : 2024-10-08T09:25:56Z
13 Done
```

### To view the certificate source using CLI

At the command prompt, type:

```
show ssl certkey
```

#### Example(Certificate which is in active state):

```
1 show ssl certkey
2
3 Name: 023a2b9d-de07-b53a-70b8-b925fc09efe8
4 Certificate Source: REMOTE Certkey Status: ACTIVE
5 Cert Path: entity654_ec.crt
6 Key Path: entity654_ec.key
7 Format: PEM
8 Status: Valid, Days to expiration:3635
9 Certificate Expiry Monitor: DISABLED
10 Certificate Type: "Client Certificate" "Server
 Certificate"
11 Version: 3
12 Serial Number: 12494655570E02CA2B5CCCB1DC317C41271B8BD1
13 Signature Algorithm: sha256WithRSAEncryption
14 Issuer: CN=Intermediate5.Root4
15 Validity
16 Not Before: Oct 1 10:15:53 2024 GMT
17 Not After : Sep 29 10:15:53 2034 GMT
18 Subject: CN=Entity6.Intermediate5.Root4
19 Public Key Algorithm: id-ecPublicKey
20 Digest:
21 Public Key size: 256
22 Ocspp Response Status: NONE
23 deleteCertKeyFilesOnRemoval:
24 Done
```

#### Example(Certificate which is in inactive state):

```
1 show ssl certkey
2 Name: ed9d7c90-6f28-5407-8073-346440044e34
3 Certificate Source: REMOTE Certkey Status: INACTIVE(No
 Private Key)
4 Cert Path: server_rsa_4096_9.crt
5 Format: PEM
6 Status: Valid, Days to expiration:280
7 Certificate Expiry Monitor: DISABLED
8 Certificate Type: "Server Certificate"
9 Version: 3
10 Serial Number: 04B5502077AFC2EF9581F49BDF104C9360CA6D2
11 Signature Algorithm: sha256WithRSAEncryption
```


```

12 Issuer: C=US,ST=InterState2,L=InterCity2,O=InterOrganization2,
 OU=InterUnit2,CN=IntermediateCA2_9/emailAddress=
 intermediate29@example.com
13 Validity
14 Not Before: Jul 23 09:47:54 2024 GMT
15 Not After : Jul 23 09:47:54 2025 GMT
16 Subject: C=US,ST=ServerState,L=ServerCity,O=ServerOrganization
 ,OU=ServerUnit,CN=Server9/emailAddress=server9@example.com
17 Public Key Algorithm: rsaEncryption
18 Digest:
19 Public Key size: 4096
20 Ocspr Response Status: NONE
21 Done

```

**To view the certificate source using the GUI**

1. Navigate to **Traffic Management > SSL > Certificates**
2. On the **Certificates** page, the list of certificates and keys is displayed along with the source.

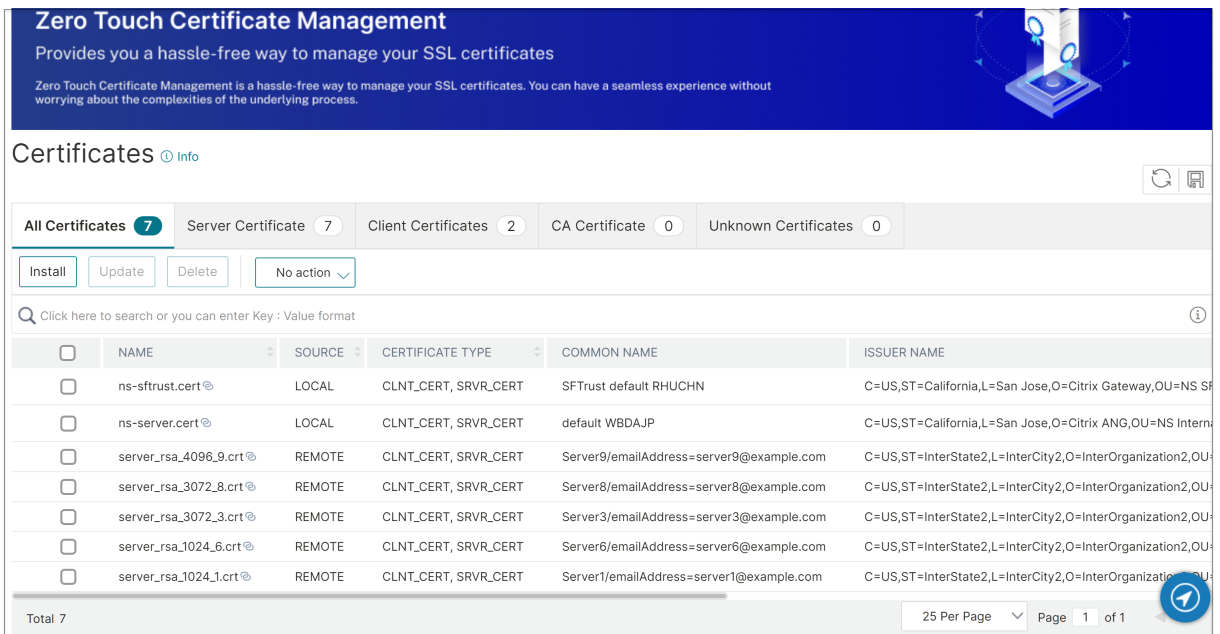

**Restrict virtual servers with limited domain**

The virtual servers configured on NetScaler can access all the domains using the server certificates uploaded in NetScaler Console. You have the option to restrict access by configuring the virtual server with a limited domain.

## Restrict the virtual servers with a limited domain using CLI

At the command prompt, type:

```
1 add policy patset <name> [-patsetFile <string>]
2 bind policy patset <name> <string> [-index <positive_integer>]
3 add ssl policy <name> -rule <expression>
4 bind ssl vserver <vServerName> (-policyName <string> [-priority <
 positive_integer>] [-type <type>])
```

### Example:

```
1 add policy patset pat_sni_list
2 bind policy patset pat_sni_list Server8 -index 1
3 bind policy patset pat_sni_list Server1 -index 2
4 bind policy patset pat_sni_list Server3 -index 3
5 add ssl policy pol_ssl_sni_allowed -rule "client.ssl.client_hello.sni.
 equals_any(\"pat_sni_list\").not" -action RESET
6 bind ssl vserver v1 -policyName pol_ssl_sni_allowed -priority 1 -type
 CLIENTHELLO_REQ
```

## Restrict the virtual servers with a limited domain using the GUI

1. Create the patterns and bind them to the pattern set.

For information on creating and binding, see [Configure a pattern set](#).

2. Configure an SSL policy.

For information on configuring an SSL policy, see [Configure an SSL policy by using the GUI](#).

3. Bind an SSL policy to a virtual server.

For more information, see [Bind an SSL policy to a virtual server by using the GUI](#).

## Limitations

- VPN and authentication virtual servers are not part of the zero-touch certificate management feature. You have to manually bind the certificates to the virtual servers.
  - VPN and authentication virtual server might not come up automatically when you run the `add vpn/auth v-server` command.
  - After the virtual server is operational, if server certificates are manually bound to it and later unbound, its state might not be marked as down.
- The following features are not supported in the release 14.1 build 34. x:
  - OCSP

- CRL
  - TLS1.3
  - Admin partition
- Multiple NetScaler devices managed by a single NetScaler Console have access to the entire zero-touch certificate store.
  - The zero-touch certificate management feature cannot be enabled in MPX 14 K and SDX 14 K.

## SSL profiles

May 2, 2023

You can use an SSL profile to specify how a NetScaler appliance processes SSL traffic. A profile is a collection of SSL parameter settings for SSL entities, such as virtual servers, services, and service groups, and offers ease of configuration and flexibility. You are not limited to configuring only one set of global parameters.

You can create multiple sets (profiles) of global parameters and assign different sets to different SSL entities. SSL profiles are classified into two categories:

- **Front-end profiles:** Contain parameters applicable to the front-end entity (entity that receives requests from a client).
- **Back-end profiles:** Contain parameters applicable to the back-end entity (entity that sends client requests to a server).

Unlike a TCP or HTTP profile, an SSL profile is optional. Once SSL profiles are enabled, all the SSL endpoints inherit the default profiles. The same profile can be reused across multiples entities. If an entity does not have a profile attached, the values set at the global level apply. For dynamically learned services, current global values apply.

Compared to the alternate way that requires configuration of SSL parameters, ciphers, and ECC curves on individual SSL endpoints, SSL profiles on the NetScaler appliance simplify configuration management by acting as a single point of SSL configuration for all related endpoints. Using SSL profiles, you can resolve configuration issues related to cipher reordering and downtime when ciphers are re-ordered.

SSL profiles help in setting required SSL parameters and cipher bindings on those SSL endpoints on which traditionally one cannot set these parameters and bindings. SSL profiles can also be set on secure monitors.

The SSL profile infrastructure has been enhanced to use the latest ciphers and protocols. Differences between the legacy profile (old profile) and the enhanced SSL profile (new profile) are highlighted.



## Differences between the old and the new SSL profile infrastructure

| Differences                                                          | Old Profile                                                                  | New Profile                                                                                                                                                                                                                                         |
|----------------------------------------------------------------------|------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Ciphers and ECC Curves included in the profile                       | No                                                                           | Yes                                                                                                                                                                                                                                                 |
| Inserting a cipher or cipher group in the middle of an existing list | Unbind all the ciphers and bind again in the order of the required priority. | Add a cipher and assign it a priority. If a priority is not specified, the cipher is assigned the lowest priority in the list.                                                                                                                      |
| Unbinding all the ciphers                                            | <code>unbind ssl vserver &lt;name&gt; ciphername -ALL</code>                 | <code>unbind ssl profile - cipherName FlushAllCiphers</code> (Release 12.1 and later include the <code>FlushAllCiphers</code> parameter for unbinding all the ciphers or cipher groups from a profile, because ALL is treated like a cipher group.) |
| State of SSLv3                                                       | n/a                                                                          | Disabled on the default front-end profile ( <code>ns_default_ssl_profile_frontend</code> ).<br>Note: Before you enable this profile, SSLv3 is enabled globally. After you enable the profile, SSLv3 is disabled on the front-end default profile.   |

## SSL profile infrastructure

December 29, 2023

Vulnerabilities in SSLv3 and RC4 implementation have emphasized the need to use the latest ciphers and protocols to negotiate the security settings for a network connection. Implementing any changes to the configuration, such as disabling SSLv3 across thousands of SSL end points, is a cumbersome process. Therefore, settings that were part of the SSL end points configuration have been moved to

the SSL profiles, along with the default ciphers. To implement changes in the configuration, including cipher support, you need only modify the profile that is bound to the entities.

The default front-end and default back-end SSL profiles contain all the default ciphers and ECC curves, in addition to the settings that were part of the old profiles. Sample outputs for the default profiles are provided in the appendix. The Enable Default Profile operation automatically binds the default front-end profile to all front-end entities, and the default back-end profile to all back-end entities. You can modify a default profile to suit your deployment. You can also create custom profiles and bind them to SSL entities.

The front-end profile contains parameters applicable to a front-end entity (the entity that receives requests from a client). Typically, this entity is an SSL virtual server, transparent SSL service, or internal services on the NetScaler appliance. The back-end profile contains parameters applicable to a back-end entity (entity on the ADC appliance that sends client requests to a back-end server). Typically, this entity is an SSL service or service group on the NetScaler appliance. If you try to configure an unsupported parameter, the error `ERROR: Specified parameters are not applicable for this type of SSL profile` appears. Some SSL parameters, such as CRL memory size, OCSP cache size, UndefAction Control, and UndefAction Data, are not part of any profile, because these parameters are independent of entities. These parameters are present in **Traffic Management > SSL > Advanced SSL Settings**. For information about SSL parameters supported on a secure monitor, see [Set SSL parameters on a secure monitor](#).

An SSL profile supports the following operations:

- **Add:** Creates an SSL profile on the NetScaler appliance. Specify whether the profile is front end or back end. Default is front end.
- **Set:** —Modifies the settings of an existing profile.
- **Unset:** Sets the specified parameters to their default values. If you do not specify any parameters, an error message appears. If you unset a profile on an entity, the profile is unbound from the entity.
- **Remove:** Deletes a profile. A profile that is being used by any entity cannot be deleted. Clearing the configuration deletes all the entities. As a result, the profiles are also deleted.
- **Bind:** Binds a profile to an SSL entity.
- **Unbind:** Unbinds a profile from an SSL entity.
- **Show:** Displays all the profiles that are available on the NetScaler appliance. If a profile name is specified, the details of that profile are displayed. If an entity is specified, the profiles associated with that entity are displayed.

**Important:**

- An SSL profile takes precedence over SSL parameters. That is, if you configure SSL parameters using the `set ssl parameter` command, and later bind a profile to an SSL entity,

the settings in the profile take precedence.

- After the upgrade, if you enable the default profiles, you cannot undo the changes. That is, the profiles cannot be disabled. Save the configuration and create a copy of the configuration file (ns.conf) before enabling the profiles. However, if you do not want to use the features in the default profile, you can continue to use the old SSL profiles. For more information about these profiles, see [Legacy SSL profile](#).
- In the GUI and CLI, a confirmation prompt is added when you enable the default profile to prevent enabling it by mistake.

Protocols lower than TLSv1.2 are disabled on the SSL internal services. If the default (enhanced) profile is enabled, then the `ns_default_ssl_profile_internal_frontend_service` profile is bound to the SSL internal services and SSLv3, TLSv1.0, and TLSv1.1 protocols are disabled in the profile.

**Command:**

```
1 set ssl parameter -defaultProfile ENABLED
2 Save your configuration before enabling the Default profile. You
 cannot undo the changes. Are you sure you want to enable the
 Default profile? [Y/N]Y
3 Done
```

By default, some SSL parameters, called *global parameters*, apply to all the SSL end points. However, if a profile is bound to an SSL end point, the global parameters do not apply. The settings specified in the profile apply instead.

**Points to note**

1. A profile can be bound to multiple virtual servers, but a virtual server can have only one profile bound to it.
2. To delete a profile that is bound to a virtual server, first unbind the profile.
3. A cipher or cipher group can be bound to multiple profiles at different priorities.
4. A profile can have multiple ciphers and cipher groups bound at different priorities.
5. Changes to a cipher group are immediately reflected in all the profiles and in all the virtual servers that one of the profiles is bound to.
6. If a cipher suite is part of a cipher group, edit the cipher group to remove that cipher suite before removing the cipher suite from the profile.
7. If you do not assign a priority to a cipher suite or cipher group attached to a profile, it is assigned the lowest priority within the profile.
8. You can create a custom cipher group (also called a user-defined cipher group) from existing cipher groups and cipher suites. If you create cipher group A and add existing cipher groups X

and Y to it, in that order, Y is assigned at a lower priority than X. That is, the group that is added first has a higher priority.

9. If a cipher suite is part of two cipher groups attached to the same profile, the cipher suite is not added as part of the second cipher group. The cipher suite at the higher priority is in effect when traffic is processed.
10. Cipher groups are not expanded in the profile. As a result, the number of lines in the configuration file (ns.conf) is greatly reduced. For example, if two cipher groups containing 15 ciphers each are bound to a thousand SSL virtual servers, expansion adds 30\*1000 cipher-related entries in the configuration file. With the new profile, it would have only two entries: one for each cipher group that is bound to a profile.
11. Creating a user-defined cipher group from existing ciphers and cipher groups is a copy-paste operation. Any changes in the original group are not reflected in the new group.
12. A user-defined cipher group lists all the profiles that it is a part of.
13. A profile lists all the SSL virtual server, services, and service groups that it is bound to.
14. If the default SSL profile feature is enabled, use the profile to set or change any of the attributes of an SSL entity. For example, virtual server, service, service group, or an internal service.

## Save the configuration by using the CLI

At the command prompt, type:

```
1 save config
2
3 shell
4
5 root@ns# cd /nsconfig
6
7 root@ns# cp ns.conf ns.conf.NS<currentreleasenum><currentbuildnumber>
```

### Example:

```
1 save config
2 shell
3 root@ns# cd /nsconfig
4 root@ns# cp ns.conf ns.conf.NS.11.0.jun.16
```

## Enable the default profile

### Important:

- Save your configuration before you upgrade the software and enable the default profiles.
- From release 11.1 build 51.x, in the GUI and CLI, a confirmation prompt appears when you

enable the default profile to avoid enabling it by mistake.

**Command:** The following command enables the default profile and binds this profile to the SSL entities to which a profile is already bound. That is, if a profile (for example P1) is already bound to an SSL entity, the default front-end profile or the default back-end profile replaces P1. The older profile (P1) is not deleted. It is now an enhanced SSL profile and contains the earlier settings, and the ciphers and ECC curves. If you do not want the default profile, you can explicitly bind P1 to the SSL entity.

```
1 set ssl parameter -defaultProfile ENABLED
2 Save your configuration before enabling the Default profile. You
 cannot undo the changes. Are you sure you want to enable the
 Default profile? [Y/N]Y
3 Done
```

Upgrade the software to a build that supports the enhanced profile infrastructure, and then enable the default profiles.

**Notes:**

- If a legacy profile (P1) is already bound to an SSL entity, and you enable the default profile, the default profile overrides the earlier binding. That is, the default profile is bound to the SSL entities. If you do not want the default profile to be bound, you must bind P1 to the SSL entity again.
- A single operation (Enable Default Profile or `set ssl parameter -defaultProfile ENABLED`) enables (binds) both the default front-end profile and the default back-end profile.

**Parameters that are part of the default profiles**

Run the following commands to list the parameters that are part of the default front-end and back-end profiles.

```
1 sh ssl profile ns_default_ssl_profile_frontend
2 sh ssl profile ns_default_ssl_profile_backend
```

**Example:**

```
1 > sh ssl profile ns_default_ssl_profile_frontend
2 1) Name: ns_default_ssl_profile_frontend (Front-End)
3 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2:
 ENABLED TLSv1.3: DISABLED
4 Client Auth: DISABLED
5 Use only bound CA certificates: DISABLED
6 Strict CA checks: NO
7 Session Reuse: ENABLED Timeout: 120 seconds
8 DH: DISABLED
```


```
9 DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA:
 ENABLED Refresh Count: 0
10 Deny SSL Renegotiation ALL
11 Non FIPS Ciphers: DISABLED
12 Cipher Redirect: DISABLED
13 SSL Redirect: DISABLED
14 Send Close-Notify: YES
15 Strict Sig-Digest Check: DISABLED
16 Zero RTT Early Data: DISABLED
17 DHE Key Exchange With PSK: NO
18 Tickets Per Authentication Context: 1
19 Push Encryption Trigger: Always
20 PUSH encryption trigger timeout: 1 ms
21 SNI: DISABLED
22 OCSP Stapling: DISABLED
23 Strict Host Header check for SNI enabled SSL sessions: NO
24 Match HTTP Host header with SNI: CERT
25 Push flag: 0x0 (Auto)
26 SSL quantum size: 8 kB
27 Encryption trigger timeout 100 mS
28 Encryption trigger packet count: 45
29 Subject/Issuer Name Insertion Format: Unicode
30
31 SSL Interception: DISABLED
32 SSL Interception OCSP Check: ENABLED
33 SSL Interception End to End Renegotiation: ENABLED
34 SSL Interception Maximum Reuse Sessions per Server: 10
35 Session Ticket: DISABLED
36 HSTS: DISABLED
37 HSTS IncludeSubDomains: NO
38 HSTS Max-Age: 0
39 HSTS Preload: NO
40 Allow Extended Master Secret: NO
41 Send ALPN Protocol: NONE
42
43
44 ECC Curve: P_256, P_384, P_224, P_521
45
46 1) Cipher Name: DEFAULT Priority :1
47 Description: Predefined Cipher Alias
48
49
50 > sh ssl profile ns_default_ssl_profile_backend
51 1) Name: ns_default_ssl_profile_backend (Back-End)
52 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2:
 ENABLED TLSv1.3: DISABLED
53 Server Auth: DISABLED
54 Use only bound CA certificates: DISABLED
55 Strict CA checks: NO
56 Session Reuse: ENABLED Timeout: 300 seconds
57 DH: DISABLED
58 Ephemeral RSA: DISABLED
59 Deny SSL Renegotiation ALL
```

```
60 Non FIPS Ciphers: DISABLED
61 Cipher Redirect: DISABLED
62 SSL Redirect: DISABLED
63 Send Close-Notify: YES
64 Strict Sig-Digest Check: DISABLED
65 Push Encryption Trigger: Always
66 PUSH encryption trigger timeout: 1 ms
67 SNI: DISABLED
68 OCSP Stapling: DISABLED
69 Strict Host Header check for SNI enabled SSL sessions: NO
70 Push flag: 0x0 (Auto)
71 SSL quantum size: 8 kB
72 Encryption trigger timeout 100 mS
73 Encryption trigger packet count: 45
74
75 Allow Extended Master Secret: NO
76
77 ECC Curve: P_256, P_384, P_224, P_521
78
79 1) Cipher Name: DEFAULT_BACKEND Priority :1
80 Description: Predefined Cipher Alias
81 Done
```

## Use case

After you enable the default profiles, they are bound to all the SSL end points. The default profiles are editable. If your deployment uses most of the default settings and changes only a few parameters, you can edit the default profiles. The changes are immediately reflected across all the end points. You can also create custom SSL profiles with some custom and some default parameters and bind it to the SSL entities.

The following flowchart explains the steps that you must perform:

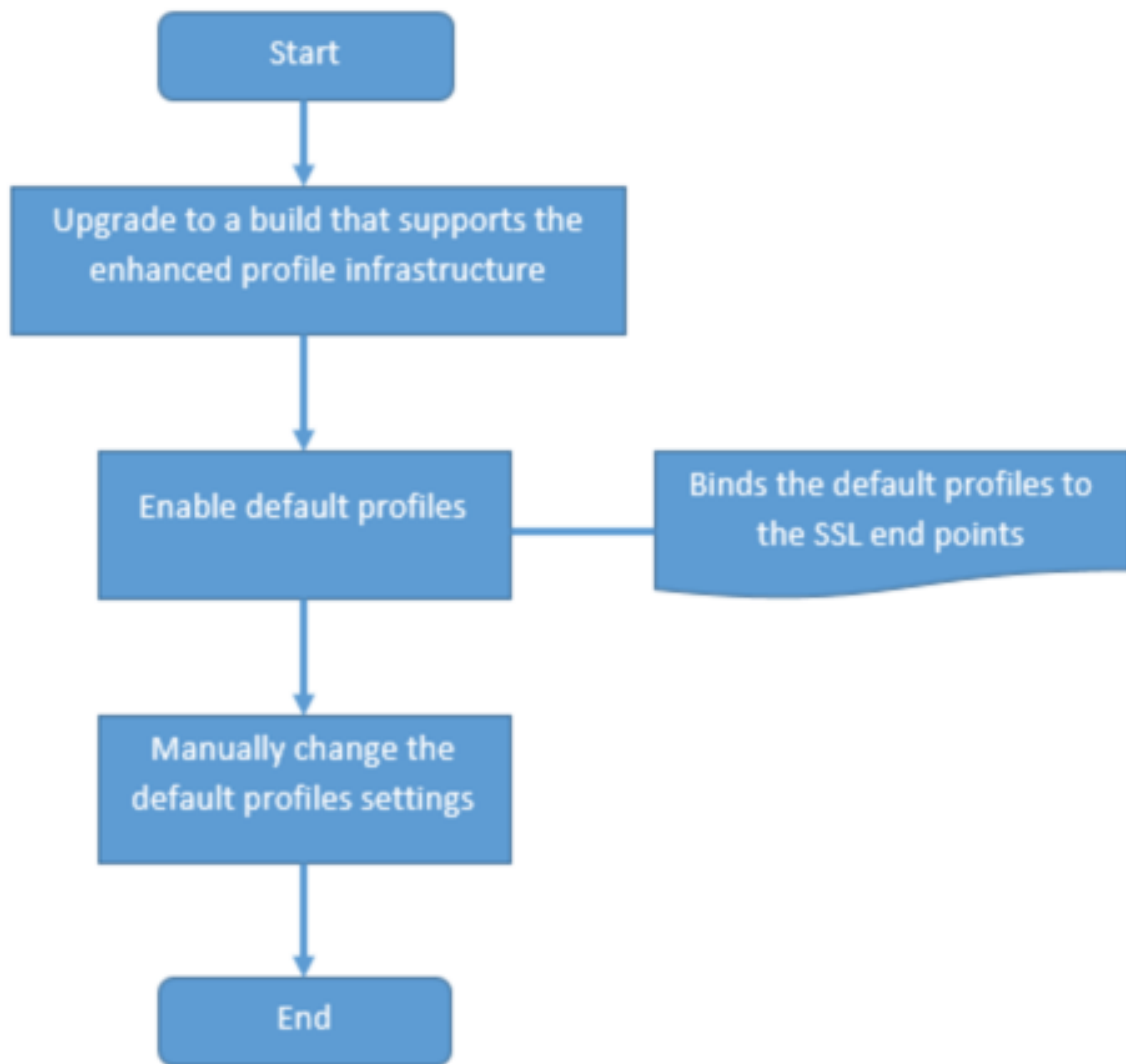

1. For information about upgrading the software, see [Upgrading the System Software](#).
2. Enable the default profiles by using the CLI or GUI.
  - At the command line, type: `set ssl parameter -defaultProfile ENABLED`
  - If you prefer to use the GUI, navigate to **Traffic Management > SSL > Change advanced SSL settings**, scroll down, and select **Enable Default Profile**.

If a profile was not bound to an end point before the upgrade, a default profile is bound to the SSL end point. If a profile was bound to an end point before the upgrade, the same profile is bound after the upgrade, and default ciphers are added to the profile.

1. (Optional) Manually change any settings in the default profile.
  - At the command line, type: `set ssl profile <name>` followed by the parameters



to modify.

- If you prefer to use the GUI, navigate to **System > Profiles**. In **SSL Profiles**, select a profile and click **Edit**.

## SSL profile parameters

You can set the following SSL parameters in an SSL profile. You can set some of these parameters in an SSL virtual server. For more information about SSL virtual server parameters, see [SSL virtual server parameters](#).

## Support for secure renegotiation at the back end of a NetScaler appliance

This feature is supported on the following platforms:

- VPX
- MPX platforms containing N2 or N3 chips
- Intel Coletto SSL chip based platforms

This feature is not yet supported on the FIPS platform.

Secure renegotiation is denied by default on the back end of an ADC appliance. That is, the `denySSLReneg` parameter is set to ALL (default).

To allow secure renegotiation on the back end, select from one of the following settings for the `denySSLReneg` parameter:

- NO
- FRONTEND\_CLIENT
- FRONTEND\_CLIENTSERVER
- NONSECURE

## Enable secure renegotiation by using the CLI

At the command prompt, type:

```
set ssl profile <name> -denySSLReneg <denySSLReneg>
```


### Example:

```
1 set ssl profile ns_default_ssl_profile_backend -denySSLReneg NONSECURE
2 Done
3
4 sh ssl profile ns_default_ssl_profile_backend
5 1) Name: ns_default_ssl_profile_backend (Back-End)
```

```
6 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2:
 ENABLED TLSv1.3: DISABLED
7 Server Auth: DISABLED
8 Use only bound CA certificates: DISABLED
9 Strict CA checks: NO
10 Session Reuse: ENABLED Timeout: 300 seconds
11 DH: DISABLED
12 Ephemeral RSA: DISABLED
13 Deny SSL Renegotiation NONSECURE
14 Non FIPS Ciphers: DISABLED
15 Cipher Redirect: DISABLED
16 SSL Redirect: DISABLED
17 Send Close-Notify: YES
18 Strict Sig-Digest Check: DISABLED
19 Push Encryption Trigger: Always
20 PUSH encryption trigger timeout: 1 ms
21 SNI: DISABLED
22 OCSP Stapling: DISABLED
23 Strict Host Header check for SNI enabled SSL sessions: NO
24 Push flag: 0x0 (Auto)
25 SSL quantum size: 8 kB
26 Encryption trigger timeout 100 mS
27 Encryption trigger packet count: 45
28
29 ECC Curve: P_256, P_384, P_224, P_521
30
31 1) Cipher Name: DEFAULT_BACKEND Priority :2
32 Description: Predefined Cipher Alias
33
34 1) Service Name: s187
35 Done
```

### Enable secure renegotiation by using the GUI

1. Navigate to **System > Profiles > SSL Profile**.
2. Add or edit a profile.
3. Set **Deny SSL Renegotiation** to any value other than ALL.

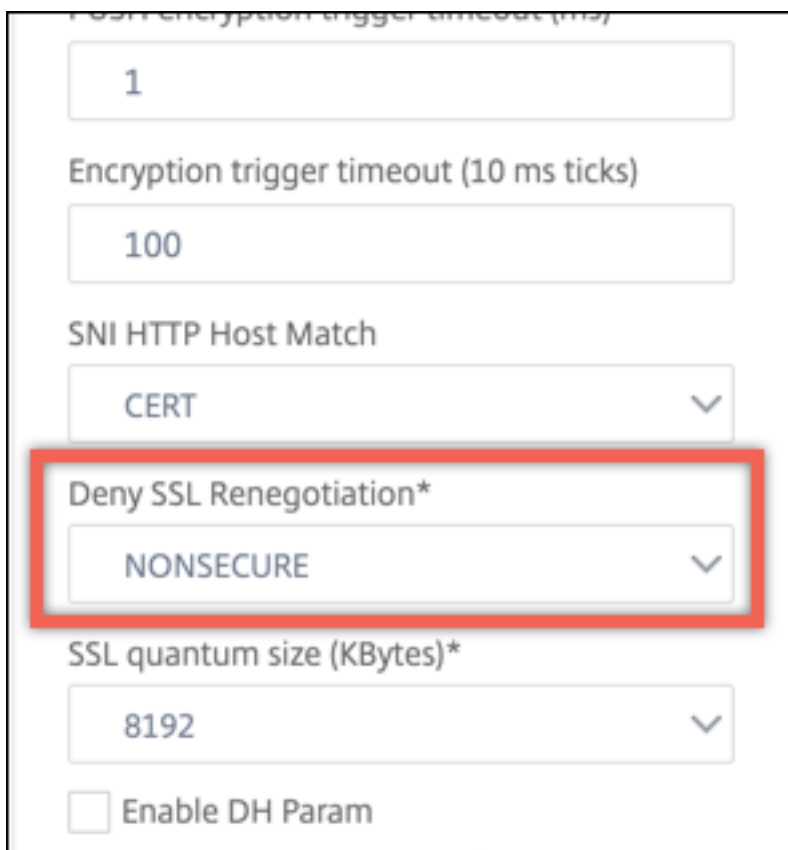

1

Encryption trigger timeout (10 ms ticks)

100

SNI HTTP Host Match

CERT

**Deny SSL Renegotiation\***

NONSECURE

SSL quantum size (KBytes)\*

8192

Enable DH Param

## Host header validation

**Note:** This parameter is introduced in release 13.0 build 52.x.

With HTTP/1.1, clients had to use multiple connections to process multiple requests. With HTTP/2, clients can reuse connections across domains that are covered by the same certificate. For an SNI enabled session, the ADC appliance must be able to control how the HTTP host header is validated to accommodate this change. In earlier builds, the request was dropped if the parameter was enabled (set to “Yes”) and the request did not contain the host header for an SNI enabled session. If the parameter was disabled (set to “No”), the appliance did not perform the validation. A new parameter [SNIHTTPHostMatch](#) is added to an SSL profile and SSL global parameters to have better control on this validation. This parameter can take three values; CERT, STRICT, and NONE. These values work as follows for SNI enabled sessions only. SNI must be enabled on the SSL virtual server or the profile bound to the virtual server, and the HTTP request must contain the host header.

- CERT - Connection is forwarded if the host header value in the request is covered by the certificate used to establish this SSL session.
- STRICT - Connection is forwarded only if the host header value in the request matches the server name value passed in the Client Hello message of the SSL connection.
- NO - The host header value is not validated.

Possible values: NO, CERT, STRICT

Default value: CERT

With the introduction of the new parameter `SNIHTTPHostMatch` there is a change in the behavior of the `dropReqWithNoHostHeader` parameter. The setting of the `dropReqWithNoHostHeader` parameter no longer affects how the host header is validated against the SNI certificate.

## Set SSL profile parameters by using the CLI

At the command prompt, type:

```


1 set ssl profile <name> [-ssllogProfile <string>] [-dh (ENABLED |
 DISABLED) -dhFile <string>] [-dhCount <positive_integer>][
 dhKeyExpSizeLimit (ENABLED | DISABLED)] [-eRSA (ENABLED |
 DISABLED) [-eRSACount <positive_integer>]] [-sessReuse (ENABLED |
 DISABLED)
2 [-sessTimeout <positive_integer>]] [-cipherRedirect (ENABLED |
 DISABLED) [-cipherURL <URL>]] [-clientAuth (ENABLED | DISABLED)[-
 clientCert (Mandatory | Optional)]] [-sslRedirect (ENABLED |
3 DISABLED)] [-redirectPortRewrite (ENABLED | DISABLED)] [-ssl3 (
 ENABLED | DISABLED)] [-tls1 (ENABLED | DISABLED)] [-tls11 (
 ENABLED| DISABLED)] [-tls12 (ENABLED | DISABLED)] [-tls13 (
 ENABLED |DISABLED)] [-SNIEnable (ENABLED | DISABLED)] [-
 ocpStapling (ENABLED | DISABLED)] [-serverAuth (ENABLED |
 DISABLED)] [-commonName <string>] [-pushEncTrigger <pushEncTrigger
4 NO)] [-sendCloseNotify (YES |
 NO)] [-clearTextPort <port|*>] [-insertionEncoding (Unicode | UTF-8)]
 [-denySSLReneg <denySSLReneg>] [-quantumSize <quantumSize>]
5 [-strictCAChecks (YES | NO)] [-encryptTriggerPktCount <
 positive_integer>] [-pushFlag <positive_integer>][-
 dropReqWithNoHostHeader (YES | NO)] [-SNIHTTPHostMatch <
 SNIHTTPHostMatch>] [-pushEncTriggerTimeout <positive_integer>]
6 [-sslTriggerTimeout <positive_integer>] [-clientAuthUseBoundCACChain (
 ENABLED | DISABLED)] [-sslInterception (ENABLED | DISABLED)][-
 ssliReneg (ENABLED | DISABLED)] [-ssliOCSPCheck (ENABLED |
 DISABLED)] [-ssliMaxSessPerServer <positive_integer>] [-HSTS (
 ENABLED| DISABLED)] [-maxage <positive_integer>] [-
 IncludeSubdomains (YES | NO)] [-preload (YES | NO)] [-
 sessionTicket (ENABLED | DISABLED)][-sessionTicketLifeTime <
 positive_integer>] [-sessionTicketKeyRefresh (ENABLED | DISABLED)]
 {
7 -sessionTicketKeyData }
8 [-sessionKeyLifeTime <positive_integer>] [-prevSessionKeyLifeTime <
 positive_integer>]
9 [-cipherName <string> -cipherPriority <positive_integer>][-
 strictSigDigestCheck (ENABLED | DISABLED)]
10 [-skipClientCertPolicyCheck (ENABLED | DISABLED)] [-zeroRttEarlyData
 (ENABLED | DISABLED)] [-tls13SessionTicketsPerAuthContext
11 <positive_integer>] [-dheKeyExchangeWithPsk (YES | NO)]

```


## Set SSL profile parameters by using the GUI

To add a profile:


1. Navigate to **System > Profiles**.

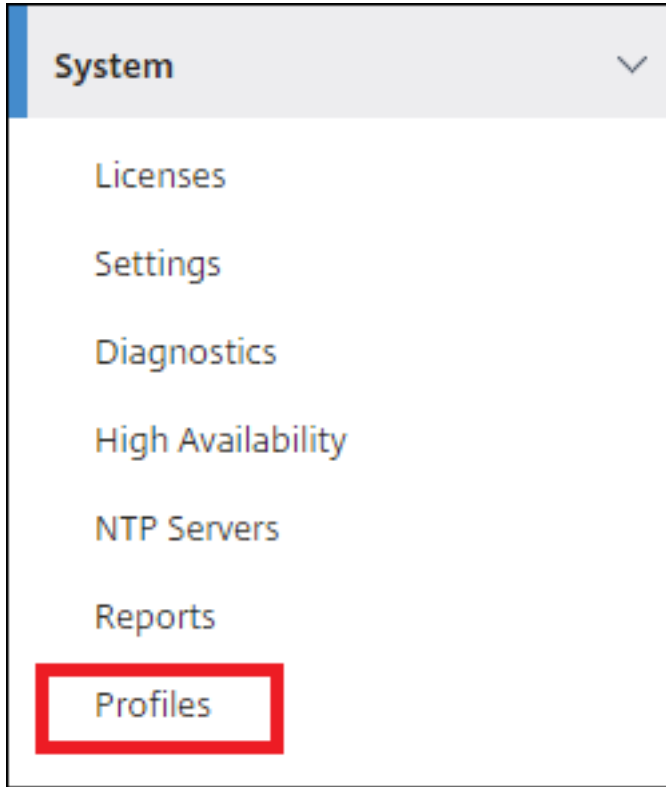

2. Select **SSL Profiles**. Click **Add**.

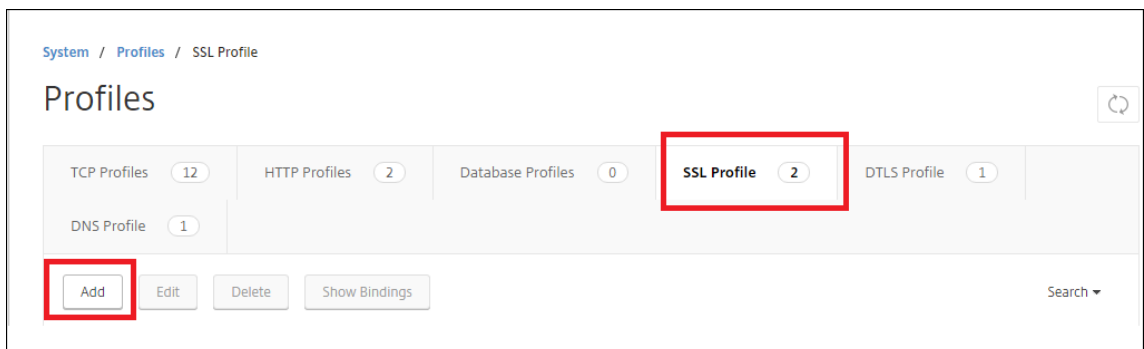

3. Specify values for the different parameters.

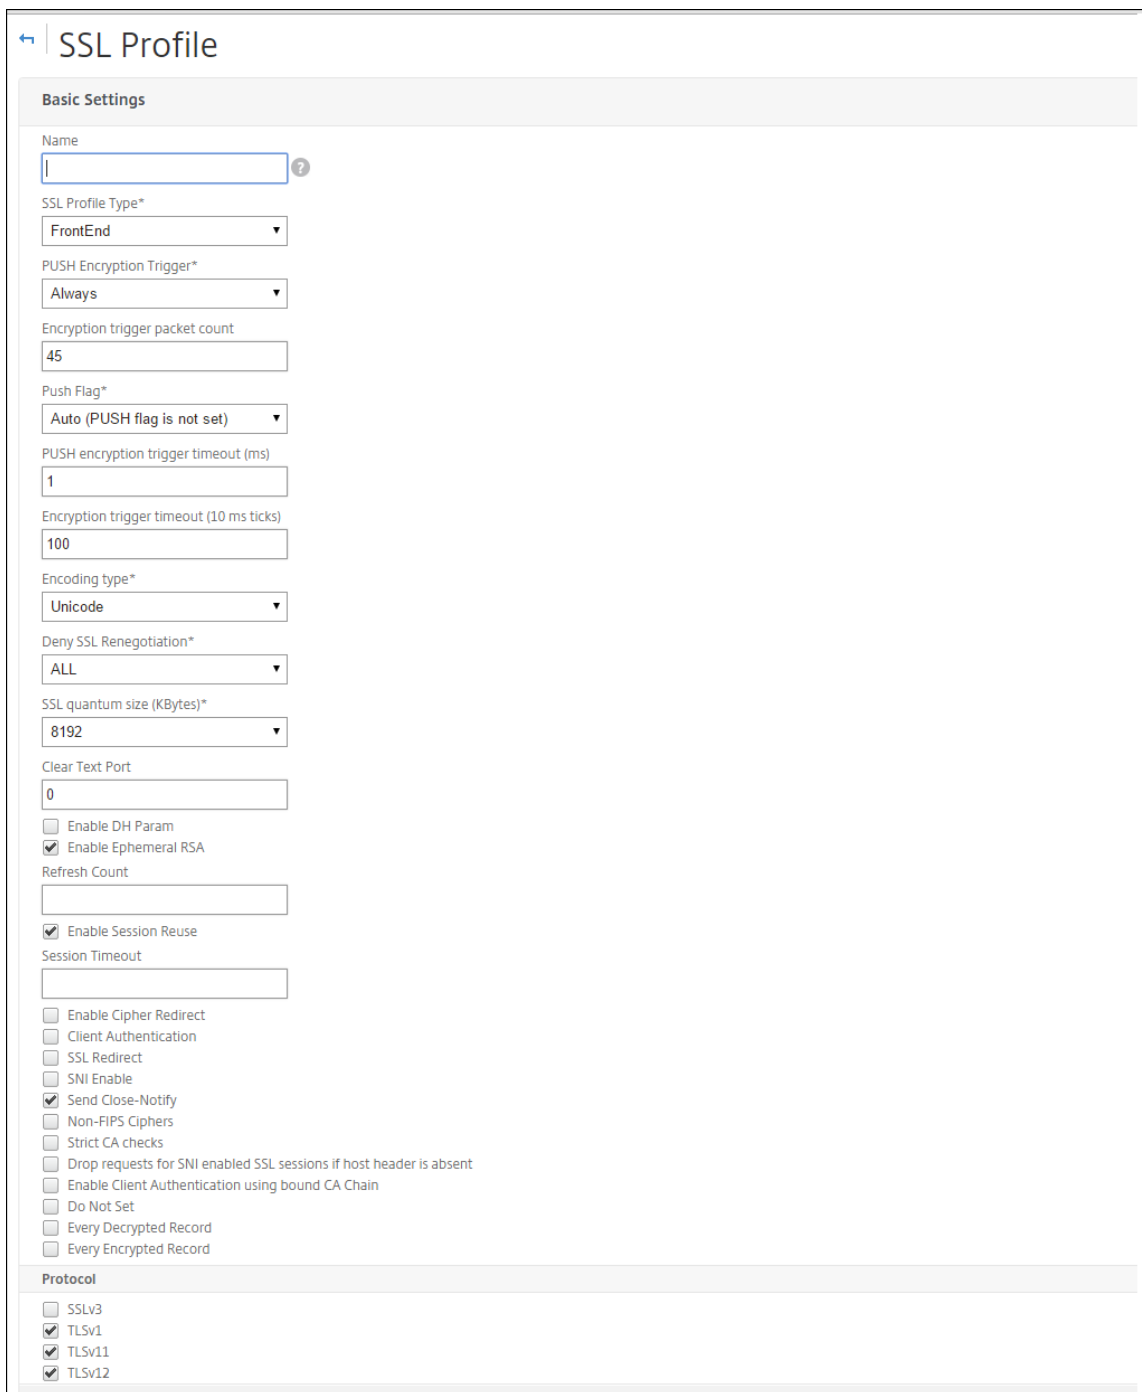

**SSL Profile**

**Basic Settings**

Name

SSL Profile Type\*

PUSH Encryption Trigger\*

Encryption trigger packet count

Push Flag\*

PUSH encryption trigger timeout (ms)

Encryption trigger timeout (10 ms ticks)

Encoding type\*

Deny SSL Renegotiation\*

SSL quantum size (KBytes)\*

Clear Text Port

Enable DH Param

Enable Ephemeral RSA

Refresh Count

Enable Session Reuse

Session Timeout

Enable Cipher Redirect

Client Authentication

SSL Redirect

SNI Enable

Send Close-Notify

Non-FIPS Ciphers

Strict CA checks

Drop requests for SNI enabled SSL sessions if host header is absent

Enable Client Authentication using bound CA Chain

Do Not Set

Every Decrypted Record

Every Encrypted Record

**Protocol**

SSLv3

TLSv1

TLSv11

TLSv12

4. Click **OK**.

5. Click **Done**.

To reuse an existing SSL profile:

1. Navigate to **System > Profiles**.
2. Select an existing profile and click **Add**.
3. Specify a different name, change any parameters, and click **OK**.

4. Click **Done**.

## TLS session ticket extension

An SSL handshake is a CPU-intensive operation. If session reuse is enabled, the server/client key exchange operation is skipped for existing clients. They are allowed to resume their sessions. This action improves the response time and increases the number of SSL transactions per second that a server can support. However, the server must store details of each session state, which consumes memory and is difficult to share among multiple servers if requests are load balanced across servers.

NetScaler appliances support the SessionTicket TLS extension. Use of this extension indicates that the session details are stored on the client instead of on the server. The client must indicate that it supports this mechanism by including the session ticket TLS extension in the client Hello message. For new clients, this extension is empty. The server sends a new session ticket in the NewSessionTicket handshake message. The session ticket is encrypted by using a key-pair known only to the server. If a server cannot issue a new ticket now, it completes a regular handshake.

This feature is available only in front-end SSL profiles, and only at the front end of communication in which the appliance acts as a server and generates session tickets.

## Limitations

- This feature is not supported on a FIPS platform.
- This feature is supported only with TLS versions 1.1 and 1.2.
- SSL session ID persistency is not supported with session tickets.

## Enable TLS session ticket extension by using the CLI

At the command prompt, type:

```
1 set ssl profile <name> -sessionTicket (ENABLED | DISABLED) [-
 sessionTicketLifeTime <positive_integer>
```

### Arguments:

**sessionTicket:** State of TLS session ticket extension. Use of this extension indicates that the session details are stored on the client instead of on the server, as defined in RFC 5077.

Possible values: ENABLED, DISABLED

Default value: DISABLED

**sessionTicketLifeTime:** Specify a time, in seconds, after which the session ticket expires and a new SSL handshake must be initiated.

Default value: 300

Minimum value: 0

Maximum value: 172800

**Example:**

```
1 add ssl profile profile1 -sessionTicket ENABLED -sessionTicketlifeTime
 300
2 Done
```

### Enable TLS session ticket extension by using the GUI

1. Navigate to **System > Profiles**. Select **SSL Profiles**.
2. Click **Add** and specify a name for the profile.
3. Select **Session ticket**.
4. Optionally, specify **Session Ticket Lifetime (secs)**.

### Secure implementation of session tickets

By using TLS session tickets, clients can use abbreviated handshakes for faster reconnection to servers. However, if session tickets aren't encrypted or changed for long periods of time, they can pose a security risk. You can secure session tickets by encrypting them with a symmetric key. To achieve forward secrecy, you can specify a time interval at which the session-ticket key is refreshed.

The appliance generates the session ticket keys by default. However, if multiple appliances in a deployment need to decrypt each other's session tickets, they must all use the same session-ticket key. Therefore, you must set (add or load) the same session-ticket key data manually on all the appliances. Session-ticket key data includes the following information:

- Session ticket name.
- Session AES key used to encrypt or decrypt the ticket.
- Session HMAC key used to compute the digest of the ticket.

You can now configure session ticket key data of length 64 bytes to support 256-bit HMAC keys as recommended in RFC 5077. Key lengths of 48 bytes are also supported for backward compatibility.

**Note:**

While typing the session-ticket key data manually, ensure that the configuration across all the NetScaler appliances in an HA setup or in a cluster setup is the same.

The `sessionTicketKeyLifeTime` parameter specifies how often a session-ticket key is refreshed. You can set the `prevSessionTicketKeyLifeTime` parameter to specify how long the



previous session-ticket key will be maintained for decrypting tickets using that key, after a new key is generated. The `prevSessionTicketKeyLifeTime` setting extends the time for which a client can use an abbreviated handshake to reconnect. For example, if `sessionTicketKeyLifeTime` is set to 10 minutes and `prevSessionTicketKeyLifeTime` to 5 minutes, a new key is generated after 10 minutes and used for all new sessions. However, previously connected clients have another 5 minutes for which previously issued tickets are honored for an abbreviated handshake.

### Configure SSL session-ticket data by using the CLI

At the command prompt, type:

```
1 set ssl profile <name> -sessionTicket ENABLED -sessionTicketLifeTime <
 positive_integer> -sessionTicketKeyRefresh (ENABLED | DISABLED)] -
 sessionTicketKeyLifeTime <positive_integer> [-
 prevSessionTicketKeyLifeTime <positive_integer>]
```

#### Arguments:

**sessionTicket:** Use session tickets as described by RFC 5077. Establishing the initial handshake requires CPU-intensive public key encryption operations. With the **ENABLED** setting, a server issues a session ticket to a client, which the client can use to perform an abbreviated handshake.

Possible values: ENABLED, DISABLED. Default: DISABLED

**sessionTicketLifeTime:** Lifetime, in seconds, of the session ticket. After this time expires, clients cannot use this ticket to resume their sessions.

Maximum value: 172800. Minimum value: 0. Default: 300.

**sessionTicketKeyRefresh:** When the time specified by the session-ticket key lifetime parameter expires, regenerate the session-ticket key used to encrypt or decrypt the session tickets. Automatically enabled if `sessionTicket` is enabled. Disabled if an administrator enters the session-ticket data.

Possible values: ENABLED, DISABLED. Default: ENABLED

**sessionKeyLifeTime:** Lifetime, in seconds, of a symmetric key used to encrypt the session tickets issued by a NetScaler appliance.

Maximum value: 86400. Minimum value: 600. Default: 3000

**prevSessionKeyLifeTime:** Time, in seconds, for which the previous symmetric key used to encrypt session tickets remains valid for existing clients after the session-ticket key lifetime expires. Within this time, existing clients can resume their sessions by using the previous session ticket key. Session tickets for new clients are encrypted by using the new key.

Maximum value: 172800. Minimum value: 0. Default: 0

#### Example:

```
1 set ssl profile ns_default_ssl_profile_frontend -sessionTicket ENABLED
 -sessionTicketlifeTime 120 -sessionTicketKeyRefresh ENABLED -
 sessionTicketKeyLifeTime 100 -prevSessionTicketKeyLifeTime 60
2
3 Done
4
5 show ssl profile ns_default_ssl_profile_frontend
6
7 Session Ticket: ENABLED
8 Session Ticket Lifetime: 120 (secs)
9 Session Key Auto Refresh: ENABLED
10 Session Key Lifetime: 100 (secs)
11 Previous Session Key Lifetime: 60 (secs)
```

### Configure SSL session-ticket data by using the GUI

1. Navigate to **System > Profiles**, and select **SSL Profile**.
2. Select **ns\_default\_ssl\_profile\_frontend** and click **Edit**.
3. In the **Basic Settings** section, click the pencil icon and set the following parameters:
  - Session Ticket
  - Session Ticket Lifetime (secs)
  - Session Ticket Key Auto Refresh
  - Session Ticket Key Lifetime (secs)
  - Previous Session Ticket Key Lifetime (secs)
4. Click **OK**.

### Type SSL session ticket data manually by using the CLI

At the command prompt, type:

```
1 set ssl profile <name> -sessionTicket ENABLED
2
3 set ssl profile <name> -sessionTicketKeyData
4
5 show ssl profile ns_default_ssl_profile_frontend
```

#### Arguments:

**sessionTicket:** Use of session tickets as described by RFC 5077. Establishing the initial handshake requires CPU-intensive public key encryption operations. With the **ENABLED** setting, a server issues a session ticket to a client, which the client can use to perform an abbreviated handshake.

Possible values: ENABLED, DISABLED. Default: DISABLED

**sessionTicketKeyData:** Contains the session ticket name (0–15 bytes), the session AES key used to encrypt or decrypt the session ticket (16–31 bytes), and the session HMAC key used to compute the digest of the ticket (32–63 bytes). Externally generated by an administrator and added to a NetScaler appliance.

Maximum length: 64 bytes

**Example:**

```
1 set ssl profile ns_default_ssl_profile_frontend -sessionTicket ENABLED
2
3 Done
4
5 set ssl profile ns_default_ssl_profile_frontend -sessionTicketKeyData
 11
6
7 Done
8
9 show ssl profile ns_default_ssl_profile_frontend
10
11 1) Name: ns_default_ssl_profile_frontend (Front-End)
12 SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2: ENABLED
13 Client Auth: DISABLED
14 Use only bound CA certificates: DISABLED
15 Strict CA checks: NO
16 Session Reuse: ENABLED Timeout: 120 seconds
17 DH: DISABLED
18 DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA: ENABLED
 Refresh Count: 0
19 Deny SSL Renegotiation ALL
20 Non FIPS Ciphers: DISABLED
21 Cipher Redirect: DISABLED
22 SSL Redirect: DISABLED
23 Send Close-Notify: YES
24 Push Encryption Trigger: Always
25 PUSH encryption trigger timeout: 1 ms
26 SNI: DISABLED
27 OCSP Stapling: DISABLED
28 Strict Host Header check for SNI enabled SSL sessions: NO
29 Push flag: 0x0 (Auto)
30 SSL quantum size: 8 kB
31 Encryption trigger timeout 100 mS
32 Encryption trigger packet count: 45
33 Subject/Issuer Name Insertion Format: Unicode
34 Session Ticket: ENABLED
35 Session Ticket Lifetime: 300 (secs)
36 Session Key Auto Refresh: DISABLED
37 Session Key Lifetime: 3000 (secs)
38 Previous Session Key Lifetime: 0 (secs)
39 Session Key Data: 84
 dad1afc6d56b0deeb0a7fd7f299a207e8d8c15cdd087a5684a11a329fd732e87a0535d9088
```

```
40 47
 e8c181ba266f5c8838ae472cb3ab9255b683bf922fad32cee816c329989ef7cdeb278e93a
41
42 ECC Curve: P_256, P_384, P_224, P_521
43
44 1) Cipher Name: DEFAULT Priority :4
45 Description: Predefined Cipher Alias
46
47 1) Internal Service Name (Front-End): nsrnatsip-127.0.0.1-5061
48 2) Internal Service Name (Front-End): nskrpcs-127.0.0.1-3009
49 3) Internal Service Name (Front-End): nshttps-::1l-443
50 4) Internal Service Name (Front-End): nsrpcs-::1l-3008
51 5) Internal Service Name (Front-End): nshttps-127.0.0.1-443
52 6) Internal Service Name (Front-End): nsrpcs-127.0.0.1-3008
53 7) Vserver Name: v1
54
55 Done
```

### Type SSL session ticket data manually by using the GUI

1. Navigate to **System > Profiles**, and select **SSL Profile**.
2. Select **ns\_default\_ssl\_profile\_frontend** and click **Edit**.
3. In the **Basic Settings** section, click the pencil icon and set the following parameters:
  - Session Ticket
  - Session Ticket Key Data
  - Confirm Session Ticket Key Data
4. Click **OK**.

### Support for Extended Master Secret in SSL handshake on NetScaler non-FIPS platforms

Extended Master Secret (EMS) is an optional extension to the Transport Layer Security (TLS) protocol. A new parameter is added that applies to both front-end and back-end SSL profiles to support EMS on the NetScaler appliance. If the parameter is enabled and the peer supports EMS, the ADC appliance uses the EMS calculation. If the peer does not support EMS, then the EMS calculation is not used for the connection even though the parameter is enabled on the appliance. For more information about EMS, see RFC 7627.

**Note:** EMS is only applicable for handshakes that use TLS protocol version 1.0, 1.1, or 1.2.

## Platform support for EMS

- MPX and SDX platforms containing either Cavium N3 chips or Intel Coletto Creek crypto cards. The following platforms ship with Intel Coletto chips:
  - MPX 5900
  - MPX/SDX 8900
  - MPX/SDX 26000
  - MPX/SDX 26000-50S
  - MPS/SDX 26000-100G
  - MPX/SDX 15000-50G

You can also use the `show hardware` command to identify whether your appliance has Coletto (COL) or N3 chips.

- MPX and SDX platforms without crypto cards (software-only).
- Software-only platforms: VPX, CPX, and BLX.

EMS cannot be enabled on the following platforms:

- MPX 9700 FIPS and MPX 14000 FIPS platforms.
- MPX and SDX platforms containing Cavium N2 crypto chips.

If the parameter is enabled, the ADC appliance attempts to use EMS in TLS 1.2, TLS 1.1, and TLS 1.0 connections. The setting does not affect TLS 1.3 or SSLv3 connections.

To allow EMS to be negotiated with the peer, enable the setting on the SSL profile bound to the virtual server (front end) or service (back end).

## Enable EMS using the CLI

At the command prompt, type:

```
set ssl profile <profile name> [-allowExtendedMasterSecret (YES | NO)]
```

Examples

```
1 set ssl profile ns_default_ssl_profile_frontend -
 allowExtendedMasterSecret YES
2
3 set ssl profile ns_default_ssl_profile_backend -
 allowExtendedMasterSecret YES
```

The following table shows the default value of the `allowExtendedMasterSecret` parameter on different default and user-defined profiles.


---

| Profile                          | Default setting |
|----------------------------------|-----------------|
| Default front-end profile        | NO              |
| Default front-end secure profile | YES             |
| Default back-end profile         | NO              |
| User-defined profile             | NO              |

---

### Enable EMS using the GUI

1. Navigate to **System > Profiles > SSL Profile**.
2. Add a profile or edit a profile.
3. Set **Allow Extended Master Secret** to YES.

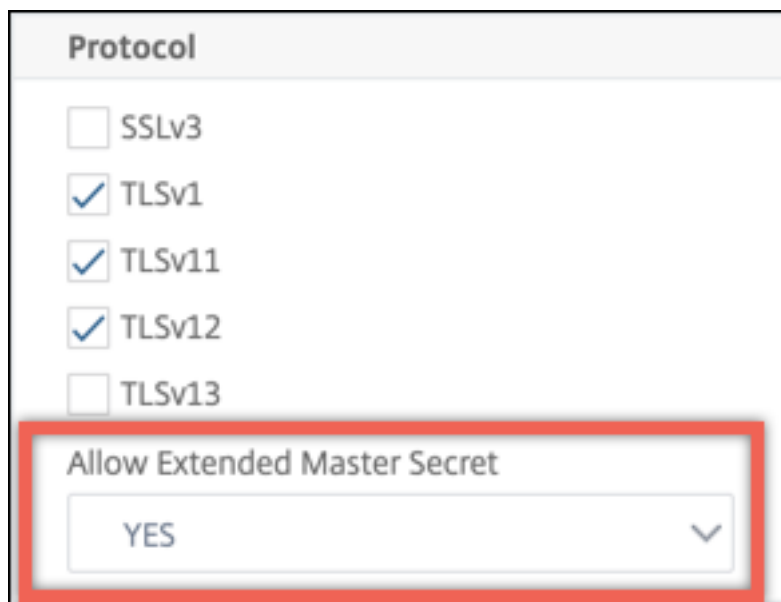

The screenshot shows a configuration window titled "Protocol" with a list of protocols and their selection status:

- SSLv3
- TLSv1
- TLSv11
- TLSv12
- TLSv13

Below the list is a dropdown menu labeled "Allow Extended Master Secret" with the value "YES" selected. A red rectangular box highlights the dropdown menu.

### Support for processing of ALPN extension in the client hello message

A parameter `alpnProtocol` is added to the front-end SSL profiles to negotiate the application protocol in the ALPN extension for the connections handled by the `SSL_TCP` virtual server. Only the protocol specified in the SSL profile is negotiated, if the same protocol is received in the ALPN extension of the client hello message.

**Note:** The `alpnProtocol` parameter is supported only on front end SSL profiles and is applicable to the SSL connections handled by `SSL_TCP` type virtual servers.

## Set the protocol in the front-end SSL profile using the CLI

At the command prompt, type:

```
set ssl profile ns_default_ssl_profile_frontend -alpnProtocol <
protocol_name>
```

The `alpnProtocol` parameter can take three values. Maximum length: 4096 bytes.

- **NONE:** Application protocol negotiation does not take place. This setting is the default.
- **HTTP1:** HTTP1 can be negotiated as the application protocol.
- **HTTP2:** HTTP2 can be negotiated as the application protocol.


### Example:

```
1 set ssl profile ns_default_ssl_profile_frontend -ALPNProtocol HTTP2
2 > sh ssl profile ns_default_ssl_profile_frontend
3 1) Name: ns_default_ssl_profile_frontend (Front-End)
4 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2:
5 ENABLED TLSv1.3: DISABLED
6 Client Auth: DISABLED
7 Use only bound CA certificates: DISABLED
8 Strict CA checks: NO
9 Session Reuse: ENABLED Timeout: 120 seconds
10 DH: DISABLED
11 DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA:
12 ENABLED Refresh Count: 0
13 Deny SSL Renegotiation ALL
14 Non FIPS Ciphers: DISABLED
15 Cipher Redirect: DISABLED
16 SSL Redirect: DISABLED
17 Send Close-Notify: YES
18 Strict Sig-Digest Check: DISABLED
19 Zero RTT Early Data: DISABLED
20 DHE Key Exchange With PSK: NO
21 Tickets Per Authentication Context: 1
22 Push Encryption Trigger: Always
23 PUSH encryption trigger timeout: 1 ms
24 SNI: DISABLED
25 OCSP Stapling: DISABLED
26 Strict Host Header check for SNI enabled SSL sessions: NO
27 Match HTTP Host header with SNI: CERT
28 Push flag: 0x0 (Auto)
29 SSL quantum size: 8 kB
30 Encryption trigger timeout 100 mS
31 Encryption trigger packet count: 45
32 Subject/Issuer Name Insertion Format: Unicode
33
34 SSL Interception: DISABLED
35 SSL Interception OCSP Check: ENABLED
36 SSL Interception End to End Renegotiation: ENABLED
37 SSL Interception Maximum Reuse Sessions per Server: 10
```

```
36 Session Ticket: DISABLED
37 HSTS: DISABLED
38 HSTS IncludeSubDomains: NO
39 HSTS Max-Age: 0
40 HSTS Preload: NO
41 Allow Extended Master Secret: NO
42 Send ALPN Protocol: HTTP2
43
44 Done
```

### Set the protocol in the front-end SSL profile using the GUI

1. Navigate to **System > Profiles**, and select **SSL Profile**.
2. Select **ns\_default\_ssl\_profile\_frontend** and click **Edit**.
3. In the **ALPN Protocol** list, select **HTTP2**.

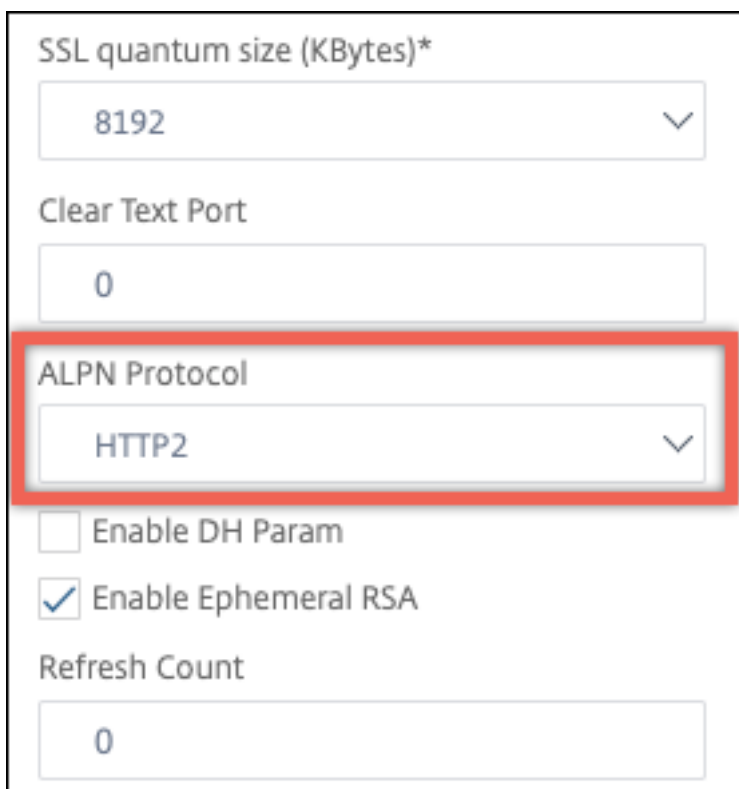

The screenshot shows a configuration window for an SSL profile. The 'ALPN Protocol' dropdown menu is highlighted with a red border and is set to 'HTTP2'. Other visible settings include 'SSL quantum size (KBytes)\*' set to 8192, 'Clear Text Port' set to 0, 'Enable DH Param' unchecked, 'Enable Ephemeral RSA' checked, and 'Refresh Count' set to 0.

### Load an old configuration

Enabling the default profiles is not reversible. However, if you decide that your deployment does not require the default profiles, you can load an older configuration that you saved before you enabled the default profiles. The changes are effective after you restart the appliance.



### Load an old configuration by using the CLI

At the command prompt, type:

```
1 shell
2
3 root@ns# clear config
4
5 root@ns# cd /nsconfig
6
7 root@ns# cp ns.conf.NS.11.0.jun.16 ns.conf
8
9 root@ns# reboot
```

### Rate limiting SSL renegotiations

When SSL renegotiation is enabled, there is no limit to the number of renegotiation requests. As a result, the NetScaler is susceptible to DoS attacks that can ultimately cause the NetScaler to stop processing SSL traffic completely. The parameter `maxRenegRate` is introduced in the SSL profile to mitigate this issue by limiting the number of renegotiation requests received in one second on an SSL entity.

This parameter is configurable only when `denySSLReneg` is not set to ALL. When `maxRenegRate` is set to zero, rate limiting is disabled (default setting). When it is set to an integer value between 1 and 65535, rate limiting is enabled and the maximum number of renegotiation requests per second to each entity bound to the SSL profile are limited to this integer value. For example, if you set the `maxRenegRate` parameter to 100 in the SSL profile `ssl-profile-1`, and this profile is bound to two virtual servers v1 and v2, then v1 has a limit of 100 and v2 has a limit of 100 renegotiation requests.

Note:

This feature is not supported with the DTLS protocol.

### To add the limit while creating an SSL profile using the CLI

At the command prompt, type:

```
add ssl profile pf1 -denySSLReneg (NO | FRONTEND_CLIENT | FRONTEND_CLIENTSERVE
| NONSECURE) -maxRenegRate 100
```

### To set the limit on an existing SSL profile using the CLI

At the command prompt, type:

```
set ssl profile pf1 denySSLReneg (NO | FRONTEND_CLIENT | FRONTEND_CLIENTSERVER
| NONSECURE)-maxRenegRate 100
```

**Example**

In the following commands “maxRenegRate” is set to 100. As a result, a maximum of 100 requests per second are allowed to all the entities to which the profile is bound.

```
set ssl profile pf1 denySSLReneg (NO | FRONTEND_CLIENT | FRONTEND_CLIENTSERVER
| NONSECURE)-maxRenegRate 100
```

```
add ssl profile pf1 -denySSLReneg (NO | FRONTEND_CLIENT | FRONTEND_CLIENTSERVE
| NONSECURE)-maxRenegRate 100
```

**To specify the limit using the GUI**

1. Navigate to **System > Profiles > SSL Profile**.
2. Click **Add** to create a profile, or select an existing profile.
3. For a new profile, specify a name.
4. Set **Deny SSL Renegotiation** to any value other than **All**.
5. Specify the **Maximum Renegotiation Rate**.
6. Click **OK**.
7. Click **Done**.

**Secure front-end profile**

February 1, 2021

In addition to a default front-end and a default back-end profile, a new default secure front-end profile is available from release 12.1. The settings required for an A+ rating (as of May 2018) from Qualys SSL Labs are preloaded into this profile. Earlier, you had to explicitly set each of the parameters required for an A+ rating on an SSL front-end profile or an SSL virtual server. Now you can bind the ns\_default\_ssl\_profile\_secure\_frontend profile to your SSL virtual server and the required parameters are automatically set on your SSL virtual server.

**Note:**

The secure front-end profile is not editable.

When you enable the default profile, the default front-end profile is automatically bound to all the SSL virtual servers. To get an A+ rating, you must explicitly bind the ns\_default\_ssl\_profile\_secure\_frontend profile and also bind an SHA2/SHA256 server certificate to your SSL virtual server.

## Secure front-end profile parameters

The parameters with their default settings are listed here:

```

1 SSLv3: DISABLED TLSv1.0: DISABLED TLSv1.1: DISABLED TLSv1.2: ENABLED
 TLSv1.3: DISABLED
2
3 Deny SSL Renegotiation: NONSECURE
4
5 HSTS: ENABLED
6
7 HSTS IncludeSubDomains: YES
8
9 HSTS Max-Age: 15552000
10
11 Cipher Name: SECURE Priority :1

```

## Secure cipher alias

A new secure cipher alias is added and bound to the secure front-end profile. To list the ciphers that are part of this alias, at the command prompt type: show cipher SECURE

```

1 show cipher SECURE
2
3 1) Cipher Name: TLS1.2-ECDHE-RSA-AES256-GCM-SHA384 Priority : 1
4 Description: TLSv1.2 Kx=ECC-DHE Au=RSA Enc=AES-GCM(256)
 Mac=AEAD HexCode=0xc030
5 2) Cipher Name: TLS1.2-ECDHE-RSA-AES128-GCM-SHA256 Priority : 2
6 Description: TLSv1.2 Kx=ECC-DHE Au=RSA Enc=AES-GCM(128)
 Mac=AEAD HexCode=0xc02f
7 3) Cipher Name: TLS1.2-ECDHE-ECDSA-AES256-GCM-SHA384
 Priority : 3
8 Description: TLSv1.2 Kx=ECC-DHE Au=ECDSA Enc=AES-GCM(256)
 Mac=AEAD HexCode=0xc02c
9 4) Cipher Name: TLS1.2-ECDHE-ECDSA-AES128-GCM-SHA256
 Priority : 4
10 Description: TLSv1.2 Kx=ECC-DHE Au=ECDSA Enc=AES-GCM(128)
 Mac=AEAD HexCode=0xc02b
11 Done

```

## Configuration

Perform the following steps:

1. Add a load balancing virtual server of type SSL.
2. Bind a SHA2/SHA256 certificate.
3. Enable the default profile.
4. Bind the secure front-end profile to the SSL virtual server.

**Get an A+ rating for an SSL virtual server by using the CLI**

At the command prompt, type:

```

1 add lb vserver <name> <serviceType> <IPAddress> <port>
2 bind ssl vserver <vServerName> -certkeyName <string>
3 set ssl parameter -defaultProfile ENABLED
4 set ssl vserver <vServerName> -sslProfile
 ns_default_ssl_profile_secure_frontend
5 show ssl vserver [<vServerName>]
```

**Example:**

```

1 add lb vserver ssl-vsvr SSL 192.0.2.240 443
2
3 bind ssl vserver ssl-vsvr -certkeyName letrsa
4
5 set ssl parameter -defaultProfile ENABLED
6
7 Save your configuration before enabling the Default profile. You cannot
 undo the changes. Are you sure you want to enable the Default
 profile? [Y/N]y
8
9 set ssl vserver ssl-vsvr -sslProfile
 ns_default_ssl_profile_secure_frontend
```

```

1 sh ssl vserver ssl-vsvr
2
3 Advanced SSL configuration for VServer ssl-vsvr:
4 Profile Name :ns_default_ssl_profile_secure_frontend
5 1) CertKey Name: letrsa Server Certificate
6 Done
```

```

1 sh ssl profile ns_default_ssl_profile_secure_frontend
2
3 1) Name: ns_default_ssl_profile_secure_frontend (Front-End)
4 SSLv3: DISABLED TLSv1.0: DISABLED TLSv1.1: DISABLED TLSv1.2:
 ENABLED TLSv1.3: DISABLED
5 Client Auth: DISABLED
6 Use only bound CA certificates: DISABLED
7 Strict CA checks: NO
8 Session Reuse: ENABLED Timeout: 120 seconds
9 DH: DISABLED
10 DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA:
 ENABLED Refresh Count: 0
11 Deny SSL Renegotiation NONSECURE
12 Non FIPS Ciphers: DISABLED
13 Cipher Redirect: DISABLED
14 SSL Redirect: DISABLED
15 Send Close-Notify: YES
16 Strict Sig-Digest Check: DISABLED
17 Zero RTT Early Data: DISABLED
18 DHE Key Exchange With PSK: NO
```

```
19 Tickets Per Authentication Context: 1
20 Push Encryption Trigger: Always
21 PUSH encryption trigger timeout: 1 ms
22 SNI: DISABLED
23 OCSP Stapling: DISABLED
24 Strict Host Header check for SNI enabled SSL sessions:
 NO
25 Push flag: 0x0 (Auto)
26 SSL quantum size: 8 kB
27 Encryption trigger timeout 100 mS
28 Encryption trigger packet count: 45
29 Subject/Issuer Name Insertion Format: Unicode
30 SSL Interception: DISABLED
31 SSL Interception OCSP Check: ENABLED
32 SSL Interception End to End Renegotiation: ENABLED
33 SSL Interception Maximum Reuse Sessions per Server: 10
34 Session Ticket: DISABLED
35 HSTS: ENABLED
36 HSTS IncludeSubDomains: YES
37 HSTS Max-Age: 15552000
38 ECC Curve: P_256, P_384, P_224, P_521
39 1) Cipher Name: SECURE Priority :1
40 Description: Predefined Cipher Alias
41 1) Vserver Name: v2
42 Done
```

### Get an A+ rating for an SSL virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and select an SSL virtual server.
2. In Advanced Settings, click SSL Profile.
3. Select ns\_default\_ssl\_profile\_secure\_frontend.
4. Click OK.
5. Click Done.

## Appendix A: Sample migration of the SSL configuration after upgrade

September 21, 2020

**Note:** This content has been removed because the SSL migration script for the new default profile is no longer supported.

## Appendix B: Default front-end and back-end SSL profile settings

September 21, 2020

A default front-end profile has the following settings:

```

1 sh ssl profile ns_default_ssl_profile_frontend
2
3 1)Name: ns_default_ssl_profile_frontend
4
5 Configuration for Front-End SSL profile
6 DH: DISABLED
7 Ephemeral RSA: ENABLED Refresh Count: 0
8 Session Reuse: ENABLED Timeout: 120 seconds
9 Non FIPS Ciphers: DISABLED
10 Cipher Redirect: ENABLED Redirect URL: http://10.102.28.212/
11 redirect.html
12 Client Auth: DISABLED
13 SSL Redirect: DISABLED
14 SNI: DISABLED
15 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2:
16 ENABLED
17 Push Encryption Trigger: Always
18 PUSH encryption trigger timeout: 1 ms
19 Send Close-Notify: YES
20 Push flag: 0x0 (Auto)
21 Deny SSL Renegotiation NO
22 SSL quantum size: 8 kB
23 Strict CA checks: NO
24 Encryption trigger timeout 100 mS
25 Encryption trigger packet count: 45
26 Use only bound CA certificates: DISABLED
27 Subject/Issuer Name Insertion Format: Unicode
28 Strict Host Header check for SNI enabled SSL sessions: NO
29
30 ECC Curve: P_256, P_384, P_521
31
32 1) Cipher Name: AES Priority :2
33 Description: Predefined Cipher Alias
34
35 1) Vserver Name: v1
36 2) Vserver Name: nshttps-::1l-443
37 3) Vserver Name: nsrpcs-::1l-3008
38 4) Vserver Name: nskrpcs-127.0.0.1-3009
39 5) Vserver Name: nshttps-127.0.0.1-443
40 6) Vserver Name: nsrpcs-127.0.0.1-3008
41 Done

```

A default back-end profile has the following settings:

```

1 sh ssl profile ns_default_ssl_profile_backend
2

```

```
3 1)Name: ns_default_ssl_profile_backend
4
5 Configuration for Back-End SSL profile
6 Session Reuse: ENABLED Timeout: 300 seconds
7 Non FIPS Ciphers: DISABLED
8 Server Auth: DISABLED
9 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1.1: DISABLED TLSv1.2:
10 DISABLED
11 Push Encryption Trigger: Always
12 PUSH encryption trigger timeout: 1 ms
13 Send Close-Notify: YES
14 Push flag: 0x0 (Auto)
15 Deny SSL Renegotiation ALL
16 SSL quantum size: 8 kB
17 Strict CA checks: NO
18 Encryption trigger timeout 100 mS
19 Encryption trigger packet count: 45
20 Use only bound CA certificates: DISABLED
21
22 ECC Curve: P_256, P_224, P_521
23 1) Cipher Name: AES Priority :1
24 Description: Predefined Cipher Alias
25
26 2) Cipher Name: RC4 Priority :2
27 Description: Predefined Cipher Alias
28
29 1) Service Name: s2
30 2) Service Name: s1
31 Done
```

## Legacy SSL profile

May 2, 2023

### Note:

Citrix recommends using the enhanced profiles instead of legacy profiles. For information about the enhanced profile infrastructure, see [SSL profile infrastructure](#).

### Important:

Bind an SSL profile to an SSL virtual server. Do not bind a DTLS profile to an SSL virtual server. For information about DTLS profiles, see [DTLS Profiles](#).

You can use an SSL profile to specify how a NetScaler processes SSL traffic. The profile is a collection of SSL parameter settings for SSL entities, such as virtual servers, services, and service groups, and

offers ease of configuration and flexibility. You are not limited to configuring only one set of global parameters. You can create multiple sets (profiles) of global parameters and assign different sets to different SSL entities. SSL profiles are classified into two categories:

- Front end profiles, containing parameters applicable to the front-end entity. That is, they apply to the entity that receives requests from a client.
- Back-end profiles, containing parameters applicable to the back-end entity. That is, they apply to the entity that sends client requests to a server.

Unlike a TCP or HTTP profile, an SSL profile is optional. Therefore, there is no default SSL profile. The same profile can be reused across multiples entities. If an entity does not have a profile attached, the values set at the global level apply. For dynamically learned services, current global values apply.

The following table lists the parameters that are part of each profile.

| Front end profile         | Back-end profile          |
|---------------------------|---------------------------|
| cipherRedirect, cipherURL | denySSLReneg              |
| clearTextPort*            | encryptTriggerPktCount    |
| clientAuth, clientCert    | nonFipsCiphers            |
| denySSLReneg              | pushEncTrigger            |
| dh, dhFile, dhCount       | pushEncTriggerTimeout     |
| dropReqWithNoHostHeader   | pushFlag                  |
| encryptTriggerPktCount    | quantumSize               |
| eRSA, eRSACount           | serverAuth                |
| insertionEncoding         | commonName                |
| nonFipsCiphers            | sessReuse, sessTimeout    |
| pushEncTrigger            | <a href="#">SNIEnable</a> |
| pushEncTriggerTimeout     | ssl3                      |
| pushFlag                  | sslTriggerTimeout         |
| quantumSize               | strictCAGhecks            |
| redirectPortRewrite       | tls1                      |
| sendCloseNotify           | -                         |
| sessReuse, sessTimeout    | -                         |
| <a href="#">SNIEnable</a> | -                         |
| ssl3                      | -                         |



| Front end profile  | Back-end profile |
|--------------------|------------------|
| sslRedirect        | -                |
| sslTriggerTimeout  | -                |
| strictCAChecks     | -                |
| tls1, tls11, tls12 | -                |

---

\* The clearTextPort parameter applies only to an SSL virtual server.

An error message appears if you try to set a parameter that is not part of the profile. For example, if you try to set the clientAuth parameter in a back-end profile.

Some SSL parameters, such as CRL memory size, OCSP cache size, Undefined Action Control, and Undefined Action Data, are not part of any of the preceding profiles, because these parameters are independent of entities.

An SSL profile supports the following operations:

- **Add**—Creates an SSL profile on the NetScaler. Specify whether the profile is front end or back end. Front end is the default.
- **Set**—Modifies the settings of an existing profile.
- **Unset**—Sets the specified parameters to their default values. If you do not specify any parameters, an error message appears. If you unset a profile on an entity, the profile is unbound from the entity.
- **Remove**—Deletes a profile. A profile that is being used by any entity cannot be deleted. Clearing the configuration deletes all the entities. As a result, the profiles are also deleted.
- **Show**—Displays all the profiles that are available on the NetScaler. If a profile name is specified, the details of that profile are displayed. If an entity is specified, the profiles associated with that entity are displayed.

### Create an SSL profile by using the CLI

- To add an SSL profile, type:

```
1 add ssl profile <name> [-sslProfileType (BackEnd | FrontEnd)]
```

- To modify an existing profile, type:

```
1 set ssl profile <name>
```

- To unset an existing profile, type:

```
1 unset ssl profile <name> [-dh] [-dhFile] [-dhCount] [-eRSA]...
```

- To unset an existing profile from an entity, type:

```
1 unset ssl vserver <vServerName> - sslProfile
```

- To remove an existing profile, type:

```
1 rm ssl profile <name>
```

- To display an existing profile, type:

```
1 sh ssl profile <name>
```

### Create an SSL profile by using the GUI

Navigate to **System > Profiles**, select the SSL Profiles tab, and create an SSL profile.

### Enable stricter control on client certificate validation

The NetScaler appliance accepts valid Intermediate-CA certificates if a single Root-CA has issued them. That is, if only the Root-CA certificate is bound to the virtual server, and that Root-CA validates any of the intermediate certificates sent with the client certificate, the appliance trusts the certificate chain and the handshake is successful.

However, if a client sends a chain of certificates in the handshake, the intermediate certificates can be validated by using a CRL or OCSP responder only if that certificate is bound to the SSL virtual server. Therefore, even if one of the intermediate certificates is revoked, the handshake is successful. As part of the handshake, the SSL virtual server sends the list of CA certificates that are bound to it. For stricter control, you can configure the SSL virtual server to accept only a certificate that one of the CA certificates bound to that virtual server has signed. To do so, you must enable the `ClientAuthUseBoundCACChain` setting in the SSL profile bound to the virtual server. The handshake fails if one of the CA certificates bound to the virtual server has not signed the client certificate.

For example, say two client certificates, `clientcert1` and `clientcert2`, are signed by the intermediate certificates `Int-CA-A` and `Int-CA-B`, respectively. The intermediate certificates are signed by the root certificate `Root-CA`. `Int-CA-A` and `Root-CA` are bound to the SSL virtual server. In the default case (`ClientAuthUseBoundCACChain` disabled), both `clientcert1` and `clientcert2` are accepted. However, if `ClientAuthUseBoundCACChain` is enabled, the NetScaler appliance only accepts `clientcert1`.

## Enable stricter control on client certificate validation by using the CLI

At the command prompt, type: `set ssl profile <name> -ClientAuthUseBoundCAChain Enabled`

## Enable stricter control on client certificate validation by using the GUI

1. Navigate to **System > Profiles**, select the **SSL Profiles** tab, and create an SSL profile, or select an existing profile.
2. Select **Enable Client Authentication using bound CA Chain**.

## Migrate the SSL configuration to the enhanced SSL profile

April 15, 2024

### Note:

The terms “default” and “enhanced” are used interchangeably for the enhanced SSL profile.

A typical deployment has hundreds of virtual servers, services, and other SSL entities configured. Each entity might have its own SSL settings. Adding or changing a setting on all the entities can be a cumbersome process. To address this need and simplify the configuration process, you can use SSL profiles and attach them to different entities.

An SSL profile is a collection of SSL parameter settings for SSL entities, such as virtual servers, services (including internal services), and service groups. It offers ease of configuration and flexibility because you are not limited to configuring only one set of global parameters. There are two types of profiles:

- Front-end profile: Applies to the entities that receive requests from a client.
- Back-end profile: Applies to entities that send client requests to the back-end server.

## Problem statement

When you enable the default profile, the inbuilt default SSL profiles are automatically bound to all the front-end and back-end SSL entities. The profile comes with some default settings and when you enable the default profile, your custom settings are lost. Manually fixing a large configuration can be tedious, time-consuming, and error prone. Therefore, customers are hesitant to migrate to the default profile.

## Solution

From release 14.1 build 21.x, you can run a script from the NetScaler GUI that parses your configuration and creates custom profiles based on your existing settings. The script checks the configuration of your SSL entities and creates profiles for the same settings. Then, it sets the applicable profile for each SSL entity.

Perform the following steps to migrate the SSL configuration:

1. Save the configuration.
2. Run the script.
3. Review the output file.
4. Enable the default profile.
5. Batch the file.

### Important

Save the configuration before running the script. At the NetScaler CLI, type: `save config`. Also, ensure that the default profile is enabled before you batch the file. For a large configuration, running the script can take up to 30 minutes.

## To migrate the SSL configuration by using the NetScaler GUI

1. Navigate to **System > Diagnostics**. Under **Maintenance**, click **Save configuration**.
2. Navigate to **Traffic Management > SSL > Tools > SSL Profile Converter**.
3. Click **Run SSL Profile Conversion**.
4. Click **View File** to review the output file. Click **Download File** to download the output file and review offline.
5. Go back to the SSL page. Under **Settings**, click **Change advanced SSL settings**.
6. In the **Change Advanced SSL settings** page, select **Enable Default Profile**.
7. Navigate to **System > Diagnostics**. Under **Utilities**, click **Batch configuration**.
8. Provide the **File Path** and click **Run**.

## Result

When you run this script, it scans the existing NetScaler configuration file.

Output file location when using admin partitions and running the script from CLI: `/nsconfig/partitions/<partition_name>/sslprofile_cmds.txt`.

Output file location when using the default partition and running the script from CLI or GUI: `/nsconfig/sslprofile_cmds.txt`.

This file contains all the enhanced SSL profile commands corresponding to the existing configuration. You need to review the file and then batch it.

The custom profiles are created with the required settings based on your configuration. The applicable profile is bound to the various front-end and back-end SSL entities.

Your SSL entities now have the same settings as before the default profile was enabled. The difference is that these settings are now part of the SSL default profile. To change the settings on multiple SSL entities, you only have to modify the associated profile. The settings are applied to all the SSL entities that the profile is attached to.

### **To migrate the SSL configuration by using the NetScaler CLI**

You can also run the script from the CLI. At the command prompt, type:

```
1 save config
2 convert SSL defaultprofile
```

The output folders are specified in the Results section. You must review the file, enable the default profile, and then batch the file.

## **Certificate revocation lists**

November 21, 2023

A certificate issued by a CA typically remains valid until its expiration date. However, in some circumstances, the CA might revoke the issued certificate before the expiration date. For example, when an owner's private key is compromised, a company's or individual's name changes, or the association between the subject and the CA changes.

A Certificate Revocation List (CRL) identifies invalid certificates by serial number and issuer.

Certificate authorities issue CRLs regularly. You can configure the NetScaler appliance to use a CRL to block client requests that present invalid certificates.

If you already have a CRL file from a CA, add that to the NetScaler appliance. You can configure refresh options. You can also configure the NetScaler to sync the CRL file automatically at a specified interval, from either a web location or an LDAP location. The appliance supports CRLs in either the PEM or the DER file format. Be sure to specify the file format of the CRL file being added to the NetScaler appliance.

If you have used the ADC as a CA to create certificates that are used in SSL deployments, you can also create a CRL to revoke a particular certificate. This feature can be used, for example, to ensure that self-

signed certificates that are created on the NetScaler are not used either in a production environment or beyond a particular date.

**Note:**

By default, CRLs are stored in the `/var/netscaler/ssl` directory on the NetScaler appliance.

### Create a CRL on the ADC appliance

Since you can use the ADC appliance to act as a CA and create self-signed certificates, you can also revoke the following certificates:

- Certificates that you have created.
- Certificates whose CA certificate you own.

The appliance must revoke invalid certificates before creating a CRL for those certificates. The appliance stores the serial numbers of revoked certificates in an index file and updates the file each time it revokes a certificate. The index file is automatically created the first time a certificate is revoked.

### Revoke a certificate or create a CRL by using the CLI

At the command prompt, type the following command:

```
1 create ssl crl <CAcertFile> <CAkeyFile> <indexFile> (-revoke <
 input_filename> | -genCRL <output_filename>)
```

**Example:**

```
1 create ssl crl Cert-CA-1 Key-CA-1 File-Index-1 -revoke Invalid-1
2
3 create ssl crl Cert-CA-1 Key-CA-1 File-Index-1 -genCRL CRL-1
```

### Revoke a certificate or create a CRL by using the GUI

1. Navigate to **Traffic Management > SSL** and, in the Getting Started group, select CRL Management.
2. Enter the certificate details and, in the **Choose Operation** list, select **Revoke Certificate**, or **Generate CRL**.

### Add an existing CRL to the ADC

Before you configure the CRL on the NetScaler appliance, make sure that the CRL file is stored locally on the NetScaler appliance. In an HA setup, the CRL file must be present on both ADC appliances, and the directory path to the file must be the same on both appliances.

### Add a CRL on the NetScaler by using the CLI

At the command prompt, type the following commands to add a CRL on the NetScaler and verify the configuration:

```
1 add ssl crl <crlName> <crlPath> [-inform (DER | PEM)]
2
3 show ssl crl [<crlName>]
```

#### Example:

```
1 > add ssl crl crl-one /var/netscaler/ssl/CRL-one -inform PEM
2
3 Done
4
5 > show ssl crl crl-one
6
7 Name: crl-one Status: Valid, Days to expiration: 29
8 CRL Path: /var/netscaler/ssl/CRL-one
9 Format: PEM CAcert: samplecertkey
10 Refresh: DISABLED
11 Version: 1
12 Signature Algorithm: sha1WithRSAEncryption
13 Issuer: C=US,ST=California,L=Santa Clara,O=NetScaler Inc.,
14 OU=SSL Acceleration,CN=www.ns.com/emailAddress=
15 support@NetScaler appliance.com
16 Last_update:Jun 15 10:53:53 2010 GMT
17 Next_update:Jul 15 10:53:53 2010 GMT
18
19 1) Serial Number: 00
20 Revocation Date:Jun 15 10:51:16 2010 GMT
21
22 Done
```

### Add a CRL on the NetScaler by using the GUI

Navigate to **Traffic Management > SSL > CRL**, and add a CRL.

#### Configure CRL refresh parameters

A CRL is generated and published by a Certificate Authority periodically or, sometimes, immediately after a particular certificate is revoked. Citrix recommends that you update CRLs on the NetScaler appliance regularly, for protection against clients trying to connect with certificates that are not valid.

The NetScaler appliance can refresh CRLs from a web location or an LDAP directory. When you specify refresh parameters and a web location or an LDAP server, the CRL does not have to be present on the local hard disk drive at the time you run the command. The first refresh stores a copy on the local

hard disk drive, in the path specified by the CRL File parameter. The default path for storing the CRL is /var/netscaler/ssl.

Note: In release 10.0 and later, the method for refreshing a CRL is not included by default. Specify an HTTP or LDAP method. If you are upgrading from an earlier release to release 10.0 or later, you must add a method and run the command again.

### Configure CRL autorefresh by using the CLI

At the command prompt, type the following commands to configure CRL auto refresh and verify the configuration:

```

1 set ssl crl <crlName> [-refresh (ENABLED | DISABLED)] [-CAcert <
 string>] [-server <ip_addr|ipv6_addr|*> | -url <URL>] [-method (
 HTTP | LDAP)] [-port <port>] [-baseDN <string>] [-scope (Base |
 One)] [-interval <interval>] [-day <positive_integer>] [-time <HH:
 MM>][-bindDN <string>] {
2 -password }
3 [-binary (YES | NO)]
4
5 show ssl crl [<crlName>]
```

### Example:

```

1 set CRL crl1 -refresh enabled -method ldap -inform DER -CAcert ca1
 -server 10.102.192.192 -port 389 -scope base -baseDN "cn=
 clnt_rsa4_multicert_der,ou=eng,o=ns,c=in" -time 00:01
2
3 set ssl crl crl1 -refresh enabled -method http -cacert ca1 -port 80
 -time 00:10 -url http://10.102.192.192/crl/ca1.crl
4
5
6 > sh crl
7
8 1) Name: crl1 Status: Valid, Days to expiration:
 355
9 CRL Path: /var/netscaler/ssl/crl1
10 Format: PEM CAcert: ca1
11 Refresh: ENABLED Method: HTTP
12 URL: http://10.102.192.192/crl/ca1.crl
 Port:80
13 Refresh Time: 00:10
14 Last Update: Successful, Date:Tue Jul 6 14:38:13 2010
15 Done
```

### Configure CRL autorefresh using LDAP or HTTP by using the GUI

1. Navigate to **Traffic Management > SSL > CRL**.



2. Open a CRL, and select **Enable CRL Auto Refresh**.

**Note**

If the new CRL has been refreshed in the external repository before its actual update time as specified by the **Last Update time** field of the CRL, you must do the following:

Immediately refresh the CRL on the NetScaler appliance.

To view the last update time, select the CRL, and click **Details**.

## Synchronize CRLs

The NetScaler appliance uses the most recently distributed CRL to prevent clients with revoked certificates from accessing secure resources.

If CRLs are updated often, the NetScaler appliance needs an automated mechanism to fetch the latest CRLs from the repository. You can configure the appliance to update CRLs automatically at a specified refresh interval.

The appliance maintains an internal list of CRLs that need to be updated at regular intervals. At these specified intervals, the appliance scans the list for CRLs that need to be updated. It then connects to the remote LDAP server or HTTP server, retrieves the latest CRLs, and then updates the local CRL list with the new CRLs.

**Note:**

If the CRL check is set to mandatory when the CA certificate is bound to the virtual server, and the initial CRL refresh fails, the following action is taken for connections:

All client-authentication connections with the same issuer as the CRL are rejected as REVOKED until the CRL is successfully refreshed.

You can specify the interval at which the CRL refresh must be carried out. You can also specify the exact time.

## Synchronize CRL autorefresh by using the CLI

At the command prompt, type the following command:

```
1 set ssl crl <crlName> [-interval <interval>] [-day <integer>] [-time <HH:MM>]
```

**Example:**

```
1 set ssl crl CRL-1 -refresh ENABLE -interval MONTHLY -days 10 -time 12:00
```

### Synchronize CRL refresh by using the GUI

1. Navigate to **Traffic Management > SSL > CRL**.
2. Open a CRL, select **enable CRL Auto Refresh**, and specify the interval.

### Perform client authentication by using a certificate revocation list

If a certificate revocation list (CRL) is present on a NetScaler appliance, a CRL check is performed regardless of whether performing the CRL check is set to mandatory or optional.

The success or failure of a handshake depends on a combination of the following factors:

- Rule for CRL check
- Rule for client certificate check
- State of the CRL configured for the CA certificate

### To configure CRL check by using the CLI

At the command prompt, type the following command:

```
1 bind ssl vserver <vServerName> -certkeyName <string> [(-CA -crlCheck (
 Mandatory | Optional))]
2 sh ssl vserver
```

### Example:

```
1 bind ssl vs v1 -certkeyName ca -CA -crlCheck mandatory
2 > sh ssl vs v1
3
4 Advanced SSL configuration for VServer v1:
5
6 DH: DISABLED
7 DH Private-Key Exponent Size Limit: DISABLED
8 Ephemeral RSA: ENABLED Refresh Count: 0
9 Session Reuse: ENABLED Timeout: 120 seconds
10 Cipher Redirect: DISABLED
11 SSLv2 Redirect: DISABLED
12 ClearText Port: 0
13 Client Auth: ENABLED Client Cert Required: Mandatory
14 SSL Redirect: DISABLED
15 Non FIPS Ciphers: DISABLED
16 SNI: DISABLED
17 OCSP Stapling: DISABLED
18 HSTS: DISABLED
19 HSTS IncludeSubDomains: NO
20 HSTS Max-Age: 0
21 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1
 .2: ENABLED
```

```

22 Push Encryption Trigger: Always
23 Send Close-Notify: YES
24
25 ECC Curve: P_256, P_384, P_224, P_521
26
27 1) CertKey Name: ca CA Certificate CRLCheck: Mandatory CA_Name Sent
28
29 1) Cipher Name: DEFAULT
30 Description: Predefined Cipher Alias
31 Done

```

### Configure CRL check by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open an SSL virtual server.
2. Click in the **Certificates** section.
3. Select a certificate and, in the **OCSP and CRL Check** list, select **CRL Mandatory**.

### Result of a handshake with a revoked or valid certificate

| Rule for CRL check | Rule for client certificate check | State of the CRL configured for the CA certificate | Result of a handshake with a revoked certificate | Result of a handshake with a valid certificate |
|--------------------|-----------------------------------|----------------------------------------------------|--------------------------------------------------|------------------------------------------------|
| Mandatory          | Mandatory                         | Present                                            | Failure                                          | Success                                        |
| Mandatory          | Mandatory                         | Expired                                            | Failure                                          | Failure                                        |
| Mandatory          | Mandatory                         | Missing                                            | Failure                                          | Failure                                        |
| Mandatory          | Mandatory                         | Undefined                                          | Failure                                          | Failure                                        |
| Optional           | Mandatory                         | Present                                            | Failure                                          | Success                                        |
| Optional           | Mandatory                         | Expired                                            | Success                                          | Success                                        |
| Optional           | Mandatory                         | Missing                                            | Success                                          | Success                                        |
| Optional           | Mandatory                         | Undefined                                          | Success                                          | Success                                        |
| Mandatory          | Optional                          | Present                                            | Success                                          | Success                                        |
| Mandatory          | Optional                          | Expired                                            | Success                                          | Success                                        |
| Mandatory          | Optional                          | Missing                                            | Success                                          | Success                                        |
| Mandatory          | Optional                          | Undefined                                          | Success                                          | Success                                        |

| Rule for CRL check | Rule for client certificate check | State of the CRL configured for the CA certificate | Result of a handshake with a revoked certificate | Result of a handshake with a valid certificate |
|--------------------|-----------------------------------|----------------------------------------------------|--------------------------------------------------|------------------------------------------------|
| Optional           | Optional                          | Present                                            | Success                                          | Success                                        |
| Optional           | Optional                          | Expired                                            | Success                                          | Success                                        |
| Optional           | Optional                          | Missing                                            | Success                                          | Success                                        |
| Optional           | Optional                          | Undefined                                          | Success                                          | Success                                        |

**Note:**

- The CRL check is optional by default. To change from optional to mandatory or conversely, you must first unbind the certificate from the SSL virtual server, and then bind it again after changing the option.
- In the output of the `sh ssl vserver` command, OCSP check: optional implies that a CRL check is also optional. The CRL check settings are displayed in the output of the `sh ssl vserver` command only if the CRL check is set to mandatory. If the CRL check is set to optional, the CRL check details do not appear.

**Monitor certificate status with OCSP**

August 4, 2023

Online Certificate Status Protocol (OCSP) is an Internet protocol that is used to determine the status of a client SSL certificate. NetScaler appliances support OCSP as defined in RFC 2560. OCSP offers significant advantages over certificate revocation lists (CRLs) in terms of timely information. Up-to-date revocation status of a client certificate is especially useful in transactions involving large sums of money and high-value stock trades. It also uses fewer system and network resources. NetScaler implementation of OCSP includes request batching and response caching.

**OCSP implementation**

OCSP validation on a NetScaler appliance begins when the appliance receives a client certificate during an SSL handshake. To validate the certificate, the appliance creates an OCSP request and forwards it to the OCSP responder. To do so, the appliance uses a locally configured URL. The transaction is in a

suspended state until the appliance evaluates the response from the server and determines whether to allow the transaction or reject it. If the response from the server is delayed beyond the configured time and no other responders are configured, the appliance allows the transaction or display an error, depending on whether the OCSP check was set to optional or mandatory, respectively.

The appliance supports batching of OCSP requests and caching of OCSP responses to reduce the load on the OCSP responder and provide faster responses.

### **OCSP request batching**

Each time the appliance receives a client certificate, it sends a request to the OCSP responder. To help avoid overloading the OCSP responder, the appliance can query the status of more than one client certificate in the same request. For this feature to work efficiently, a timeout needs to be defined so that processing of a single certificate is not inordinately delayed while waiting to form a batch.

### **OCSP response caching**

Caching of responses received from the OCSP responder enables faster responses to the clients and reduces the load on the OCSP responder. Upon receiving the revocation status of a client certificate from the OCSP responder, the appliance caches the response locally for a predefined length of time. When a client certificate is received during an SSL handshake, the appliance first checks its local cache for an entry for this certificate. If an entry is found that is still valid (within the cache timeout limit), it is evaluated and the client certificate is accepted or rejected. If a certificate is not found, the appliance sends a request to the OCSP responder and stores the response in its local cache for a configured length of time.

**Note:** Cache timeout limit can be set to a maximum of 43200 minutes (30 days). In release 12.1 build 49.x and earlier, the limit was 1440 minutes (one day). The increased limit helps reduce the lookups on the OCSP server and avoid any SSL/TLS connection failures in case the OCSP server is not reachable due to network or other problems.

### **OCSP responder configuration**

Configuring OCSP involves adding an OCSP responder, binding the OCSP responder to a certification authority (CA) certificate, and binding the certificate to an SSL virtual server. If you need to bind a different certificate to an OCSP responder that has already been configured, you need to first unbind the responder and then bind the responder to a different certificate.

**Add an OCSP responder by using the CLI**

At the command prompt, type the following commands to configure OCSP and verify the configuration:

```
1 add ssl ocsponder <name> -url <URL> [-cache (ENABLED | DISABLED)
 [-cacheTimeout <positive_integer>]] [-batchingDepth <
 positive_integer>][-batchingDelay <positive_integer>] [-resptimeout
 <positive_integer>] [-responderCert <string> | -trustResponder] [-
 producedAtTimeSkew <positive_integer>][-signingCert <string>][-
 useNonce (YES | NO)][-insertClientCert(YES | NO)]
```

```
1 bind ssl certKey [<certkeyName>] [-ocspResponder <string>] [-priority <
 positive_integer>]
```

```
1 bind ssl vsServer <vServerName>@ (-certkeyName <string> (CA [-ocspCheck
 (Mandatory | Optional)]))
```

```
1 show ssl ocsponder [<name>]
```

**Example:**

```
1 add ssl ocsponder ocsponder1 -url "http:// www.myCA.org:80/
 ocspon/" -cache ENABLED -cacheTimeout 30 -batchingDepth 8 -
 batchingDelay 100 -resptimeout 100 -responderCert responder_cert -
 producedAtTimeSkew 300 -signingCert sign_cert -insertClientCert YES
```

```
1 bind ssl certKey ca_cert -ocspResponder ocsponder1 -priority 1
```

```
1 bind ssl vsServer vs1 -certkeyName ca_cert -CA -ocspCheck Mandatory
```

```
1 sh ocsponder ocsponder1
2
3 1)Name: ocsponder1
4 URL: http://www.myCA.org:80/ocspon/, IP: 192.128.22.22
5 Caching: Enabled Timeout: 30 minutes
6 Batching: 8 Timeout: 100 mS
7 HTTP Request Timeout: 100mS
8 Request Signing Certificate: sign_cert
9 Response Verification: Full, Certificate: responder_cert
10 ProducedAt Time Skew: 300 s
11 Nonce Extension: Enabled
12 Client Cert Insertion: Enabled
13 Done
```

```
1 show certkey ca_cert
2
3 Name: ca_cert Status: Valid, Days to expiration:8907
4 Version: 3
5 ...
6
```

```

7 1) VServer name: vs1 CA Certificate
8 1) OCSP Responder name: ocsponder1 Priority: 1
9 Done

```

```

1 sh ssl vs vs1
2
3 Advanced SSL configuration for VServer vs1:
4 DH: DISABLED
5 ...
6
7 1) CertKey Name: ca_cert CA Certificate OCSPCheck: Mandatory
8 1) Cipher Name: DEFAULT
9 Description: Predefined Cipher Alias
10 Done

```

### Modify an OCSP responder by using the CLI

You cannot modify the responder name. All other parameters can be changed using the `set ssl ocsponder` command.

At the command prompt, type the following commands to set the parameters and verify the configuration:

```

1 set ssl ocsponder <name> [-url <URL>] [-cache (ENABLED | DISABLED)
] [-cacheTimeout <positive_integer>] [-batchingDepth <
 positive_integer>] [-batchingDelay <positive_integer>] [-resptimeout
 <positive_integer>] [-responderCert <string> | -trustResponder][-
 producedAtTimeSkew <positive_integer>][-signingCert <string>] [-
 useNonce (YES | NO)]
2
3 unbind ssl certKey [<certkeyName>] [-ocsponder <string>]
4
5 bind ssl certKey [<certkeyName>] [-ocsponder <string>] [-priority <
 positive_integer>]
6
7 show ssl ocsponder [<name>]

```

### Configure an OCSP responder by using the GUI

1. Navigate to **Traffic Management > SSL > OCSP Responder**, and configure an OCSP responder.
2. Navigate to **Traffic Management > SSL > Certificates**, select a certificate, and in the **Action** list, select **OCSP Bindings**. Bind an OCSP responder.
3. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, open a virtual server, and click in the Certificates section to bind a CA certificate.
4. Optionally, select **select OCSP Mandatory**.

## OCSP stapling

December 10, 2024

NetScaler implementation of CRL and OCSP reports the revocation status of client certificates only. To check the revocation status of a server certificate received during an SSL handshake, a client must send a request to a certificate authority.

For websites with heavy traffic, many clients receive the same server certificate. If each client sent a query for the revocation status of the server certificate, the certificate authority would be inundated with OCSP requests to check the validity of the certificate.

### OCSP stapling solution

To avoid unnecessary congestion, NetScaler supports OCSP stapling. That is, at the time of the SSL handshake, the appliance can now send the status of a server certificate to a client after validating the response from an OCSP responder. The status of a server certificate is “stapled” to the certificate that the appliance sends to the client as part of the SSL handshake. To use the OCSP stapling feature, you must enable it on an SSL virtual server and add an OCSP responder on the appliance.

#### Notes:

- All the intermediate certificates include the OCSP response extension when the following conditions are met:
  - TLS 1.3 protocol is used
  - Client sends a status request

Earlier, only the server certificate included this extension in the response to the status request from the client.

- With the other protocols (including TLS 1.2), the server sends the OCSP response for only the server certificate. That is, RFC 6961 is not supported with the TLS 1.2 protocol.
- NetScaler appliances support OCSP stapling as defined in RFC 6066.
- OCSP stapling is supported only on the front-end of NetScaler.
- NetScaler behaves as follows when TLS 1.3 protocol is used: If the cached OCSP response is invalid (empty or expired), a request is sent to the OCSP responder but the SSL handshake is completed without waiting for the response. When the response is received, it is cached and is available for future status requests from clients.

#### Notes:



Starting from release 14.1 build 38.x, front-end virtual servers send the requested OCSP status during TLS handshakes when OCSP stapling is enabled. This happens regardless of whether the status is cached or the cache is disabled.

- NetScaler support for OCSP stapling is limited to handshakes using TLS protocol version 1.0 or higher.

## OCSP response caching of server certificates

### Note

When the TLS 1.3 protocol is used, the OCSP response is cached for the server certificate and all the intermediate certificates.

During the SSL handshake, when a client requests the revocation status of the server certificate, the appliance first checks its local cache for an entry for this certificate. If a valid entry is found, it is evaluated and the server certificate and its status are presented to the client. If a revocation status entry is not found, the appliance sends a request for the revocation status of the server certificate to the OCSP responder. If it receives a response, it sends the certificate and the revocation status to the client. If the next update field is present in the OCSP response, the response is cached for the configured length of time (value specified in the timeout field.)

**Note:** You can clear the cached response, of the server certificate, from the OCSP responder even before the timeout expires. In release 12.1 build 49.x and earlier, it was not possible to discard the cached status in the certificate-key pair until the configured timeout was over.

To clear the cached status by using the CLI, at the command prompt, type:

```
1 clear ssl certKey <certkey name> -ocspstaplingCache
```

### Example:

```
1 clear ssl certKey s1 -ocspstaplingCache
```

To clear the cached status by using the GUI

1. In the GUI, navigate to **Traffic Management > SSL > Certificates > CA Certificates**.
2. In the details pane, select a certificate.
3. In the **Select Action** list, select **Clear**. When prompted to confirm, click **Yes**.

## OCSP stapling configuration

Configuring OCSP stapling involves enabling the feature and configuring OCSP. To configure OCSP, you must add an OCSP responder, bind the OCSP responder to a CA certificate, and bind the certificate to an SSL virtual server.

**Note:**

OCSP responders with only HTTP based URL are supported.

**Enable OCSP stapling by using the CLI**

At the command prompt, type:

```
1 set ssl vserver <name> -ocspstapling [ENABLED | DISABLED]
```

**Example:**

```
1 set ssl vserver vip1 -ocspStapling ENABLED
2 Done
3
4 sh ssl vserver vip1
5
6 Advanced SSL configuration for VServer vip1:
7 DH: DISABLED
8 DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA:
9 ENABLED Refresh Count: 0
10 Session Reuse: ENABLED Timeout: 120 seconds
11 Cipher Redirect: DISABLED
12 SSLv2 Redirect: DISABLED
13 ClearText Port: 0
14 Client Auth: DISABLED
15 SSL Redirect: DISABLED
16 Non FIPS Ciphers: DISABLED
17 SNI: ENABLED
18 OCSP Stapling: ENABLED
19 SSLv2: DISABLED SSLv3: DISABLED TLSv1.0: ENABLED TLSv1.1: ENABLED
20 TLSv1.2: ENABLED
21 Push Encryption Trigger: Always
22 Send Close-Notify: YES
23
24 ECC Curve: P_256, P_384, P_224, P_521
25
26 1) CertKey Name: server_certificate1 Server Certificate
27
28 1) Cipher Name: DEFAULT
29 Description: Default cipher list with encryption strength >= 128
30 bit
31 Done
```

**Note:** If the default (enhanced) profile is enabled, use the `set ssl profile <profile name> > -ocspStapling [ENABLED | DISABLED]` command to enable or disable OCSP.

**Enable OCSP stapling by using the GUI**

1. Navigate to **Traffic Management > SSL > Virtual Server**.

2. Open a virtual server and, in **SSL Parameters**, select **OCSP Stapling**.

### OCSP configuration

An OCSP responder is added dynamically or manually to send OCSP stapling requests. An internal responder is dynamically added when you add a server certificate and its issuer certificate based on the OCSP URL in the server certificate. A manual OCSP responder is added from the CLI or GUI. To send an OCSP request for a server certificate, the NetScaler appliance selects an OCSP responder based on the priority assigned to it when binding it to an issuer certificate. If a responder fails to send an OCSP stapling request, the responder with the next highest priority is selected for sending the request. For example, if only one responder is manually configured and it fails and a dynamically bound responder exists, it is selected for sending the OCSP request.

If the OCSP URL is other than HTTP, an internal OCSP responder is not created.

#### Note

A manually added OCSP responder takes precedence over a dynamically added responder.

### Difference between a manually created OCSP responder and an internally created OCSP responder

---

#### Manually created OCSP responder

Created manually and explicitly bound to the issuer certificate with a priority.

Priority between 1 and 127 is reserved for a configured responder.

URL and batching depth can be changed.

Deleted directly.

Can be bound to any CA certificate.

Saved in the configuration (ns.conf).

#### Internally (dynamically) created OCSP responder

Created and bound by default, while adding a server certificate and its issuer certificate (CA certificate). Name starts with "ns\_internal\_".

Priority is automatically assigned from 128 onwards.

URL and batching depth cannot be changed.

Deleted only when you delete the server certificate or the CA certificate.

Bound by default to one CA certificate. Cannot be bound to any other CA certificate.

Add commands are not saved in the configuration. Only set commands are saved.

If you bind three OCSP responders to the same issuer certificate with priorities 1, 2, and 3 respectively, and later unbind priority 2, the other priorities are not affected.

Three OCSP responders are automatically bound to an issuer certificate with priorities 128, 129, and 130 respectively. If you remove the server certificate that was used to create a responder bound with priority 129, then that responder is deleted. Also, the priority for the next responder (priority 130) is automatically changed to 129.

---

#### Example of request handling:

1. Add a virtual server (VIP1).
2. Add issuer certificate (CA1) and bind it to VIP1.
3. Add three certificates S1, S2, and S3. Internal responders resp1, resp2, and resp3 respectively are created by default.
4. Bind S3 to VIP1.
5. A request comes to VIP1. Responder resp3 is selected.

To create an internal OCSP responder dynamically, the appliance needs the following:

- Certificate of the issuer of the server certificate (usually the CA certificate).
- Certificate-key pair of the server certificate. This certificate must contain the OCSP URL provided by the certificate authority. The URL is used as the name of the dynamically added internal responder.

An internal OCSP responder has the same default values as a manually configured responder.

#### Note:

Caching is disabled by default on an internal responder. Use the `set ssl ocsponder` command to enable caching.

### Configure OCSP by using the CLI

At the command prompt, type the following commands to configure OCSP and verify the configuration:

```
1 add ssl certKey <certkeyName> (-cert <string> [-password]) [-key <string> | -fipsKey <string> | -hsmKey <string>] [-inform <inform>] [-expiryMonitor (ENABLED | DISABLED) [-notificationPeriod <positive_integer>]] [-bundle (YES | NO)]
2
```

```

3 add ssl ocsponder <name> -url <URL> [-cache (ENABLED | DISABLED)
 [-cacheTimeout <positive_integer>]] [-resptimeout <positive_integer
 >] [-responderCert <string> | -trustResponder] [-producedAtTimeSkew
 <positive_integer>][-signingCert <string>][-useNonce (YES | NO)][
 -insertClientCert (YES | NO)]
4
5 bind ssl certKey [<certkeyName>] [-ocspResponder <string>] [-priority <
 positive_integer>]
6
7 show ssl ocsponder [<name>]

```

**Parameters:****httpMethod:**

HTTP method used to send OCSP requests. For requests, less than 255 bytes long, you can configure the HTTP GET method for queries to an OCSP server. If you specify the GET method but the length is greater than 255 bytes, the appliance uses the default method (POST).

Possible values: GET, POST

Default value: POST

**ocspUrlResolveTimeout:**

Time, in milliseconds, to wait for an OCSP URL resolution. After this time elapses, the responder with the next higher priority is selected. If all the responders fail, an error message appears or the connection is dropped, depending on the settings on the virtual server.

Minimum value: 100

Maximum value: 2000

**Example:**

```

1 add ssl certkey root_ca1 -cert root_cacert.pem
2 add ssl ocsponder ocsponder1 -url "http:// www.myCA.org:80/
 ocspon/" -cache ENABLED -cacheTimeout 30 -resptimeout 100 -
 responderCert responder_cert -producedAtTimeSkew 300 -signingCert
 sign_cert -insertClientCert YES
3 bind ssl certKey root_ca1 -ocspResponder ocsponder1 -priority 1
4 sh ocsponder ocsponder1
5 1)Name: ocsponder1
6 URL: http://www.myCA.org:80/ocspon/, IP: 192.128.22.22
7 Caching: Enabled Timeout: 30 minutes
8 Batching: 8 Timeout: 100 mS
9 HTTP Request Timeout: 100mS
10 Request Signing Certificate: sign_cert
11 Response Verification: Full, Certificate: responder_cert
12 ProducedAt Time Skew: 300 s
13 Nonce Extension: Enabled
14 Client Cert Insertion: Enabled
15 Done

```

```

16
17 show certkey root_ca1
18 Name: root_ca1 Status: Valid, Days to expiration:8907
19 Version: 3
20 ...
21 1) OCSP Responder name: ocsponder1 Priority: 1
22 Done

```

### Modify OCSP by using the CLI

You cannot modify the name of an OCSP responder, but you can use the `set ssl ocsponder` command to change any of the other parameters.

At the command prompt, type the following commands to set the parameters and verify the configuration:

```

1 set ssl ocsponder <name> [-url <URL>] [-cache (ENABLED | DISABLED)
] [-cacheTimeout <positive_integer>] [-resptimeout <
 positive_integer>] [-responderCert <string> | -trustResponder][-
 producedAtTimeSkew <positive_integer>][-signingCert <string>] [-
 useNonce (YES | NO)]
2
3 unbind ssl certKey [<certkeyName>] [-ocsponder <string>]
4
5 bind ssl certKey [<certkeyName>] [-ocsponder <string>] [-priority <
 positive_integer>]
6
7 show ssl ocsponder [<name>]

```

### Configure OCSP by using the GUI

1. Navigate to **Traffic Management > SSL > OCSP Responder**, and configure an OCSP responder.
2. Navigate to **Traffic Management > SSL > Certificates**, select a certificate, and in the **Action** list, select **OCSP Bindings. Bind an OCSP responder**.
3. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, open a virtual server, and click in the Certificates section to bind a CA certificate.
4. Optionally, select **OCSP Mandatory**.

#### Note:

The insert client certificate parameter in the `add ssl ocsponder` and the `set ssl ocsponder` commands is no longer valid. That is, the parameter is ignored during configuration.

## Ciphers available on the NetScaler appliances

May 23, 2024

Your NetScaler appliance ships with a predefined set of cipher groups. To use ciphers that are not part of the DEFAULT cipher group, you have to explicitly bind them to an SSL virtual server. You can also create a user-defined cipher group to bind to the SSL virtual server. For more information about creating a user-defined cipher group, see [Configure user-defined cipher groups on the ADC appliance](#).

### Notes

- From release 13.0 build 71.x and later, TLS1.3 hardware acceleration is supported on the following platforms:
  - MPX 5900
  - MPX/SDX 8900
  - MPX/SDX 9100
  - MPX/SDX 15000
  - MPX/SDX 15000-50G
  - MPX/SDX 16000
  - MPX/SDX 26000
  - MPX/SDX 26000-50S
  - MPX/SDX 26000-100G
  - Software-only support for the TLSv1.3 protocol is available on all other NetScaler MPX and SDX appliances except NetScaler FIPS appliances.
- TLSv1.3 is only supported with the enhanced profile. To enable the enhanced profile, see [Enable the enhanced profile](#).
- To use TLS1.3, you must use a client that conforms to the RFC 8446 specification.
- RC4 cipher is not included in the default cipher group on the NetScaler appliance. However, it is supported in the software on the N3-based appliances. RC4 encryption, including the handshake, is done in software.
- Citrix recommends that you do not use this cipher because it is considered insecure and deprecated by RFC 7465.
- Use the 'show hardware' command to identify whether your appliance has N3 chips.

```

1 sh hardware
2
3 Platform: NSMPX-22000 16*CPU+24*IX+12*E1K+2*E1K+4*CVM N3 2200100
4
5 Manufactured on: 8/19/2013
6
7 CPU: 2900MHZ
8
9 Host Id: 1006665862
10
11 Serial no: ENUK6298FT
12
13 Encoded serial no: ENUK6298FT

```

- To display information about the cipher suites bound by default at the front end (to a virtual server), type: `sh cipher DEFAULT`
- To display information about the cipher suites bound by default at the back end (to a service), type: `sh cipher DEFAULT_BACKEND`
- To display information about all the cipher groups (aliases) defined on the appliance, type: `sh cipher`
- To display information about all the cipher suites that are part of a specific cipher group, type: `sh cipher <alias name>`. For example, `sh cipher ECDHE`.

The following links list the cipher suites supported on different NetScaler platforms and on external hardware security modules (HSMs):

- **NetScaler MPX/SDX Intel Lewisburg appliance:** [Cipher support on a NetScaler MPX/SDX Intel Lewisburg SSL chip based appliance](#)
- **NetScaler MPX/SDX (N3) appliance:** [Cipher support on a NetScaler MPX/SDX \(N3\) appliance](#)
- **NetScaler MPX/SDX Intel Coletto appliance:** [Cipher support on a NetScaler MPX/SDX Intel Coletto SSL chip-based appliance](#)
- **NetScaler VPX appliance:** [Cipher support on a NetScaler VPX appliance](#)
- **NetScaler MPX/SDX 14000 FIPS appliance:** [Cipher support on a NetScaler MPX/SDX 14000 FIPS appliance](#)
- **External HSM (Thales/Safenet):** [Cipher supported on an External HSM \(Thales/Safenet\)](#)
- **NetScaler VPX FIPS and MPX FIPS appliances:** [Cipher support on NetScaler VPX FIPS and MPX FIPS appliances](#)

**Note:**

For DTLS cipher support, see [DTLS cipher support on NetScaler VPX, MPX, and SDX appliances](#).

**Table1 - Support on virtual server/frontend service/internal service:**



| Protocol/Platform                                           | MPX/SDX (N2) | MPX/SDX (N3)    | VPX                                                                  | MPX/SDX<br>14000** FIPS                                              | MPX<br>5900/8900<br>MPX<br>15000-50G<br>MPX<br>26000-100G |
|-------------------------------------------------------------|--------------|-----------------|----------------------------------------------------------------------|----------------------------------------------------------------------|-----------------------------------------------------------|
| TLS 1.3                                                     | NA           | 14.1 all builds | 14.1 all builds                                                      | Not supported                                                        | 14.1 all builds                                           |
|                                                             |              | 13.1 all builds | 13.1 all builds                                                      | Not supported                                                        | 13.1 all builds                                           |
|                                                             |              |                 | 13.0 all builds                                                      | 13.0 all builds                                                      | Not supported                                             |
|                                                             |              |                 | 12.1–50.x<br>(except<br>TLS1.3-<br>CHACHA20-<br>POLY1305-<br>SHA256) | 12.1–50.x<br>(except<br>TLS1.3-<br>CHACHA20-<br>POLY1305-<br>SHA256) | 12.1–50.x                                                 |
| TLS 1.1/1.2                                                 |              | 14.1 all builds | 14.1 all builds                                                      | 14.1 all builds                                                      | 14.1 all builds                                           |
|                                                             |              | 13.1 all builds | 13.1 all builds                                                      | 13.1 all builds                                                      | 13.1 all builds                                           |
|                                                             |              |                 | 13.0 all builds                                                      | 13.0 all builds                                                      | 13.0 all builds                                           |
|                                                             |              |                 | 12.1 all builds                                                      | 12.1 all builds                                                      | 12.1 all builds                                           |
| ECDHE/DHE<br>(Example<br>TLS1-ECDHE-<br>RSA-AES128-<br>SHA) |              | 14.1 all builds | 14.1 all builds                                                      | 14.1 all builds                                                      | 14.1 all builds                                           |
|                                                             |              |                 | 13.1 all builds                                                      | 13.1 all builds                                                      | 13.1 all builds                                           |
|                                                             |              |                 | 13.0 all builds                                                      | 13.0 all builds                                                      | 13.0 all builds                                           |
|                                                             |              |                 | 12.1 all builds                                                      | 12.1 all builds                                                      | 12.1 all builds                                           |
| AES-GCM<br>(Example<br>TLS1.2-<br>AES128-GCM-<br>SHA256)    |              | 14.1 all builds | 14.1 all builds                                                      | 14.1 all builds                                                      | 14.1 all builds                                           |
|                                                             |              | 13.1 all builds | 13.1 all builds                                                      | 13.1 all builds                                                      | 13.1 all builds                                           |

| Protocol/Platform                                         | MPX/SDX (N2)    | MPX/SDX (N3)    | VPX             | MPX/SDX<br>14000** FIPS | MPX<br>5900/8900<br>MPX<br>15000-50G<br>MPX<br>26000-100G |
|-----------------------------------------------------------|-----------------|-----------------|-----------------|-------------------------|-----------------------------------------------------------|
|                                                           |                 | 13.0 all builds | 13.0 all builds | 13.0 all builds         | 13.0 all builds                                           |
|                                                           |                 | 12.1 all builds | 12.1 all builds | 12.1 all builds         | 12.1 all builds                                           |
| SHA-2 Ciphers<br>(Example<br>TLS1.2-AES-<br>128-SHA256)   | 14.1 all builds | 14.1 all builds | 14.1 all builds | 14.1 all builds         | 14.1 all builds                                           |
|                                                           |                 | 13.1 all builds | 13.1 all builds | 13.1 all builds         | 13.1 all builds                                           |
|                                                           |                 | 13.0 all builds | 13.0 all builds | 13.0 all builds         | 13.0 all builds                                           |
|                                                           |                 | 12.1 all builds | 12.1 all builds | 12.1 all builds         | 12.1 all builds                                           |
| ECDSA<br>(Example<br>TLS1-ECDHE-<br>ECDSA-<br>AES256-SHA) | Not supported   | 14.1 all builds | 14.1 all builds | 14.1 all builds         | 14.1 all builds                                           |
|                                                           | Not supported   | 13.1 all builds | 13.1 all builds | 13.1 all builds         | 13.1 all builds                                           |
|                                                           |                 | Not supported   | 13.0 all builds | 13.0 all builds         | 13.0 all builds                                           |
|                                                           |                 | Not supported   | 12.1 all builds | 12.1 all builds         | 12.1 all builds                                           |
| CHACHA20                                                  | Not supported   | 14.1 all builds | 14.1 all builds | Not supported           | 14.1 all builds                                           |
|                                                           | Not supported   | 13.1 all builds | 13.1 all builds | Not supported           | 13.1 all builds                                           |
|                                                           |                 | Not supported   | 13.0 all builds | 13.0 all builds         | Not supported                                             |
|                                                           |                 | Not supported   | Not supported   | 12.1 all builds         | Not supported                                             |

**Table 2 - Support on backend services:**

| Protocol/Platform                                           | MPX/SDX (N2)    | MPX/SDX (N3)    | VPX             | MPX/SDX<br>14000** FIPS | MPX<br>5900/8900<br>MPX<br>15000-50G<br>MPX<br>26000-100G |
|-------------------------------------------------------------|-----------------|-----------------|-----------------|-------------------------|-----------------------------------------------------------|
| TLS 1.3                                                     | NA              | 14.1 all builds | 14.1 all builds | 14.1 all builds         | 14.1 all builds                                           |
| TLS 1.1/1.2                                                 | 14.1 all builds | 14.1 all builds | 14.1 all builds | 14.1 all builds         | 14.1 all builds                                           |
|                                                             | 13.1 all builds | 13.1 all builds | 13.1 all builds | 13.1 all builds         | 13.1 all builds                                           |
|                                                             |                 | 13.0 all builds | 13.0 all builds | 13.0 all builds         | 13.0 all builds                                           |
|                                                             |                 | 12.1 all builds | 12.1 all builds | 12.1 all builds         | 12.1 all builds                                           |
| ECDHE/DHE<br>(Example<br>TLS1-ECDHE-<br>RSA-AES128-<br>SHA) | 14.1 all builds | 14.1 all builds | 14.1 all builds | 14.1 all builds         | 14.1 all builds                                           |
|                                                             |                 | 13.1 all builds | 13.1 all builds | 13.1 all builds         | 13.1 all builds                                           |
|                                                             |                 | 13.0 all builds | 13.0 all builds | 13.0 all builds         | 13.0 all builds                                           |
|                                                             |                 | 12.1 all builds | 12.1 all builds | 12.1 all builds         | 12.1 all builds                                           |
| AES-GCM<br>(Example<br>TLS1.2-<br>AES128-GCM-<br>SHA256)    | 14.1 all builds | 14.1 all builds | 14.1 all builds | 14.1 all builds         | 14.1 all builds                                           |
|                                                             |                 | 13.1 all builds | 13.1 all builds | 13.1 all builds         | 13.1 all builds                                           |
|                                                             |                 | 13.0 all builds | 13.0 all builds | 13.0 all builds         | 13.0 all builds                                           |
|                                                             |                 | 12.1 all builds | 12.1 all builds | 12.1 all builds         | 12.1 all builds                                           |
| SHA-2 Ciphers<br>(Example<br>TLS1.2-AES-<br>128-SHA256)     | 13.1 all builds | 13.1 all builds | 13.1 all builds | 13.1 all builds         | 13.1 all builds                                           |
|                                                             |                 | 13.0 all builds | 13.0 all builds | 13.0 all builds         | 13.0 all builds                                           |
|                                                             |                 | 12.1 all builds | 12.1 all builds | 12.1 all builds         | 12.1 all builds                                           |

| Protocol/Platform                                         | MPX/SDX (N2)  | MPX/SDX (N3)    | VPX             | MPX/SDX<br>14000** FIPS | MPX<br>5900/8900<br>MPX<br>15000-50G<br>MPX<br>26000-100G |
|-----------------------------------------------------------|---------------|-----------------|-----------------|-------------------------|-----------------------------------------------------------|
| ECDSA<br>(Example<br>TLS1-ECDHE-<br>ECDSA-<br>AES256-SHA) | Not supported | 14.1 all builds | 14.1 all builds | 14.1 all builds         | 14.1 all builds                                           |
|                                                           |               | Not supported   | 13.1 all builds | 13.1 all builds         | 13.1 all builds                                           |
|                                                           |               | Not supported   | 13.0 all builds | 13.0 all builds         | 13.0 all builds                                           |
|                                                           |               | Not supported   | 12.1 all builds | 12.1 all builds         | 12.1 all builds                                           |
| CHACHA20                                                  | Not supported | 14.1 all builds | 14.1 all builds | Not supported           | 14.1 all builds                                           |
|                                                           | Not supported | 13.1 all builds | 13.1 all builds | Not supported           | 13.1 all builds                                           |
|                                                           |               | Not supported   | 13.0 all builds | 13.0 all builds         | Not supported                                             |
|                                                           |               | Not supported   | Not supported   | 12.1 all builds         | Not supported                                             |

For the detailed list of ECDSA ciphers supported, see [ECDSA Cipher Suites support](#).

**Notes**

- TLS-Fallback\_SCSV cipher suite is supported on all appliances from release 10.5 build 57.x
- HTTP Strict Transport Security (HSTS) support is policy-based.
- All SHA-2 signed-certificates (SHA256, SHA384, SHA512) are supported on the front end of all appliances. In release 11.1 build 54.x and later, these certificates are also supported on the back-end of all appliances. In release 11.0 and earlier, only SHA256 signed-certificates are supported on the back end of all appliances.
- In release 11.1 build 52.x and earlier, the following ciphers are supported only on the front end of the MPX 9700 and MPX/SDX 14000 FIPS appliances:


- TLS1.2-ECDHE-RSA-AES-256-SHA384
- TLS1.2-ECDHE-RSA-AES256-GCM-SHA384 From release 11.1 build 53.x, and in release 12.0, these ciphers are also supported on the back end.
- All ChaCha20-Poly1035 ciphers use a TLS pseudo random function (PSF) with the SHA-256 hash function.

## Perfect Forward Secrecy (PFS)

Perfect Forward Secrecy ensures protection of current SSL communications even if the session key of a web server is compromised at a later point in time.

### Why do you need Perfect Forward Secrecy (PFS)?

An SSL connection is used to secure the data being passed between a client and a server. This connection begins with the SSL handshake that takes place between a client's browser and the contacted web server. It is during this handshake that the browser and the server exchange certain information to arrive upon a session key which serves as a means to encrypt the data throughout the rest of the communication.

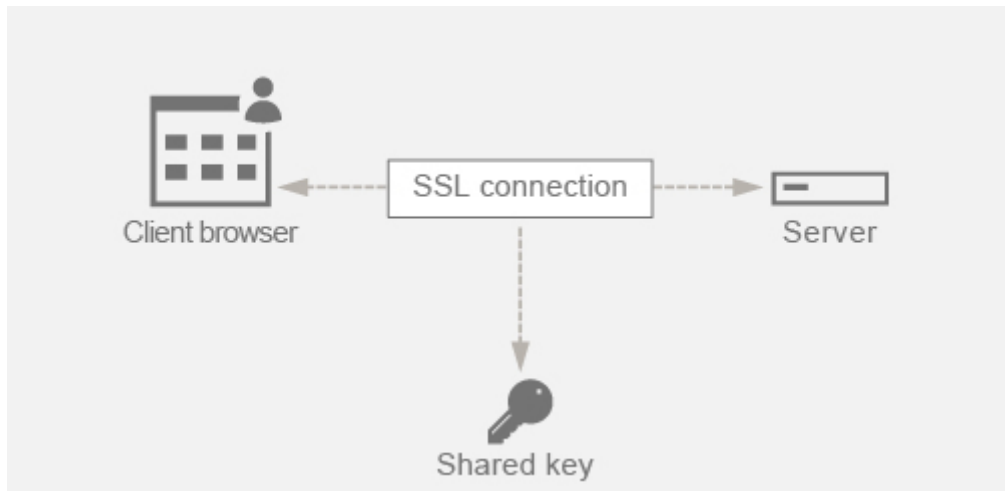


RSA is the most commonly used algorithm for key exchange. The browser uses the server's public key to encrypt and send across the pre-master secret to a server. This pre-master secret is used to arrive at the session key. The problem in the RSA key exchange approach is that if an attacker manages to get hold of the server's private key at any point in time in the future, then the attacker gets hold of the pre-master secret using which the session key can be obtained. This session key can now be used by the attacker to decrypt all the SSL conversations. As a result, your historical SSL communication that was secure earlier is no longer secure because the server's stolen private key can be used to arrive at the session key and thus decrypt any saved historical conversation as well.

The need is to be able to protect the past SSL communication even if the server's private key has been compromised. Configuring Perfect Forward Secrecy (PFS) helps address this issue.

### How does PFS help?

PFS protects the past SSL communication by having the client and server agree upon a new key for each session and keeping the computation of this session key a secret. It works on the basis that compromise of a server key must not result in compromise of the session key. Session key is derived separately at both ends and is never transferred over the wire. The session keys are also destroyed once the communication is complete. These facts ensure that even if someone gets access to the server's private key, they would not be able to arrive at the session key. Therefore, they would not be able to decrypt the past data.

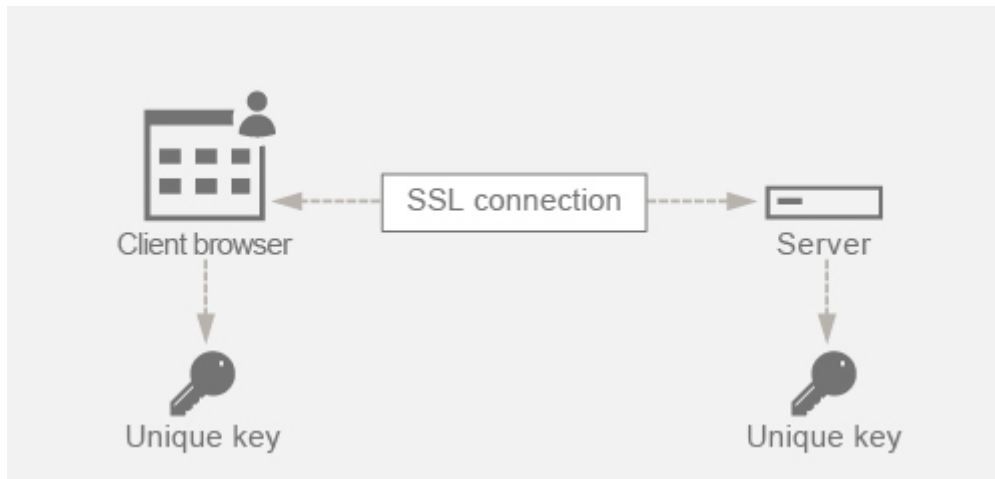

### Explanation with example

Assume that we are using DHE for attaining PFS. The DH algorithm ensures that even though a hacker gets hold of the server's private key, the hacker cannot arrive at the session key. The reason is that the session key and the random numbers (used to arrive at the session key) are kept secret at both ends and never exchanged over the wire.

PFS can be achieved by using the Ephemeral Diffie-Hellman key exchange which creates new temporary keys for each SSL session.

The flip side of creating a key for each session is that it requires extra computation. However, this issue can be overcome by using the Elliptic Curve which has smaller key sizes.

## Configure PFS on NetScaler appliance

PFS can be configured on a NetScaler by configuring DHE or ECDHE ciphers. These ciphers ensure that the secret session key created is not shared on the wire (DH algorithm) and that the session key remains alive only for a short time (Ephemeral). Both the configurations are explained in the following sections.

**Note:** Using ECDHE ciphers instead of DHE makes the communication more secure with smaller key sizes.

### Configure DHE by using the GUI

1. Generate a DH key.
  - a. Navigate to **Traffic Management > SSL > Tools**.
  - b. Click **Create Diffie Helman (DH) Key**.

**Note:** Generating a 2048-bit DH key can take up to 30 minutes.
2. Enable DH Param for the SSL virtual server and attach the DH key to the SSL virtual server.
  - a. Navigate to **Configuration > Traffic Management > Virtual Servers**.
  - b. Select the virtual server on which you want to enable DH.
  - c. Click **Edit**, click **SSL Parameters**, and click **Enable DH Param**.
3. Bind the DHE ciphers to the virtual server.
  - a. Navigate to **Configuration > Traffic Management > Virtual Servers**.
  - b. Select the virtual server on which you want to enable DH and click the pencil icon to edit.
  - c. Under **Advanced Settings**, click the plus icon next to **SSL Ciphers** and select the DHE cipher groups and click **OK** to bind.

**Note:** Ensure that the DHE ciphers are at the top of the cipher list bound to the virtual server.

### Configure ECDHE by using the GUI

1. Bind the ECC curves to the SSL virtual server.
  - a. Navigate to **Configuration > Traffic Management > Load Balancing > Virtual Servers**.
  - b. Select the SSL virtual server which you want to edit, click **ECC Curve** and click **Add Binding**.
  - c. Bind the required ECC curve to the virtual server.

2. Bind the ECDHE ciphers to the virtual server.
  - a. Navigate to **Configuration > Traffic Management > Virtual Servers** and select the virtual server on which you want to enable DH.
  - b. Click **Edit > SSL Ciphers** and select the ECDHE cipher groups and click **Bind**.

**Note:** Ensure that the ECDHE ciphers are at the top of the cipher list bound to the virtual server.

**Note:** For each case verify that the NetScaler appliance supports the ciphers you would like to use for the communication.

### Configure PFS using an SSL profile

**Note:** Option to configure PFS (cipher or ECC) using an SSL profile is introduced from 11.0 64.x release onwards. Ignore the following section if on older versions.

To enable PFS using an SSL profile, a similar configuration (as explained in earlier configuration sections) needs to be done but on the SSL profile instead of directly configuring on a virtual server.

### Configure PFS using an SSL profile by using the GUI

1. Bind the ECC curves and the ECDHE ciphers on the SSL profile.

**Note:** ECC curves are already bound by default to all the SSL profiles.

  - a. Navigate to **System > Profiles > SSL Profiles** and choose the profile you want to enable PFS on.
  - b. Bind the ECDHE ciphers.
2. Bind the SSL profile to the virtual server.
  - a. Go to **Configuration > Traffic Management > Virtual Servers** and select the virtual server.
  - b. Click the pencil icon to edit the SSL profile.
  - c. Click **OK** and click **Done**.

**Configure PFS using SSL using the CLI** At the command prompt, type:

1. Bind ECC curves to the SSL profile.

```
1 bind sslprofile <SSLProfileName> -eccCurveName <Name_of_curve>
```

2. Bind the ECDHE cipher group.

```
1 bind sslprofile <SSLProfileName> cipherName <ciphergroupName>
```



3. Set the priority of the ECDHE cipher as 1.

```
1 set sslprofile <SSLProfileName> cipherName <ciphergroupName>
 cipherPriority <positive_integer>
```

4. Bind the SSL profile to the virtual server.

```
1 set SSL vservers <vserversname> sslProfile <SSLProfileName>
```

## ECDHE ciphers

June 10, 2024

All NetScaler appliances support the ECDHE cipher group on the front end and the back end. On an SDX appliance, if an SSL chip is assigned to a VPX instance, the cipher support of an MPX appliance applies. Otherwise, the normal cipher support of a VPX instance applies.

For more information about the builds and platforms that support these ciphers, see [Ciphers available on the NetScaler appliances](#).

ECDHE cipher suites use elliptical curve cryptography (ECC). Because of its smaller key size, ECC is especially useful in a mobile (wireless) environment or an interactive voice response environment, where every millisecond is important. Smaller key sizes save power, memory, bandwidth, and computational cost.

A NetScaler appliance supports the following ECC curves:

- P\_256
- P\_384
- P\_224
- P\_521
- X\_25519 (Supported only on TLS 1.3 on the front end in release 14.1-12.x and later. Supported on TLS 1.2 and 1.3 on the backend in release 14.1-25.x and later).

You can bind all five curves to the SSL front-end entities. By default, the curves are bound in the following order: X\_25519, P\_256, P\_384, P\_224, P\_521. When you upgrade to release 14.1-12.x, the curve bindings in any existing SSL virtual servers and SSL profiles aren't modified. To use X25519, you must modify the configuration and bind X25519 manually. Alternately, to add X25519 at the front of the list, use the 'ALL'ec\_curve option in the `bind ssl vservers` or `bind ssl profile` commands. This command internally unbinds and binds all the curves in the default order.

You can bind the first four ECC curves to the SSL back-end entities. By default, all four curves are bound in the following order: P\_256, P\_384, P\_224, P\_521.

To change the order, you must first unbind all the curves, and then bind them in the desired order.

### Bind ECC curves to an SSL virtual server by using the CLI

ECC curves supported: P\_256, P\_384, P\_224, P\_521, and X\_25519.

At the command prompt, type:

```
bind ssl vserver <vServerName > -eccCurveName <eccCurveName >
```


#### Example:

```
1 bind ssl vserver v1 -eccCurveName P_224
2
3 sh ssl vserver v1
4
5 Advanced SSL configuration for VServer v1:
6 DH: DISABLED
7 Ephemeral RSA: ENABLED Refresh Count: 0
8 Session Reuse: ENABLED Timeout: 120 seconds
9 Cipher Redirect: DISABLED
10 SSLv2 Redirect: DISABLED
11 ClearText Port: 0
12 Client Auth: DISABLED
13 SSL Redirect: DISABLED
14 Non FIPS Ciphers: DISABLED
15 SNI: DISABLED
16 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1: DISABLED
 TLSv1.2: DISABLED
17 Push Encryption Trigger: Always
18 Send Close-Notify: YES
19 ECC Curve: P_224
20
21 1) Cipher Name: DEFAULT
22 Description: Predefined Cipher Alias
23 Done
```


### Bind ECC curves to an SSL virtual server by using the GUI

ECC curves supported: P\_256, P\_384, P\_224, P\_521, and X\_25519.

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select an SSL virtual server and click **Edit**.
3. In **Advanced Settings**, click **ECC Curve**.

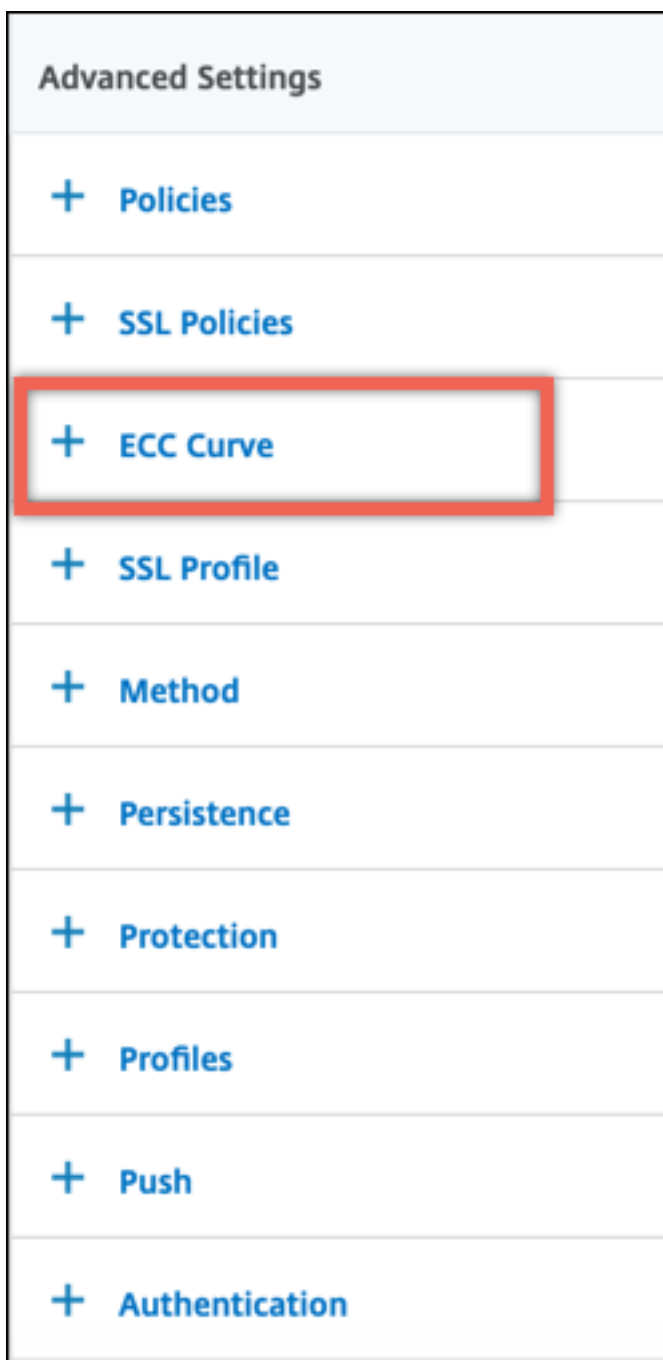


4. Click inside the ECC curve section.
5. In the **SSL Virtual Server ECC Curve Binding** page, click **Add Binding**.

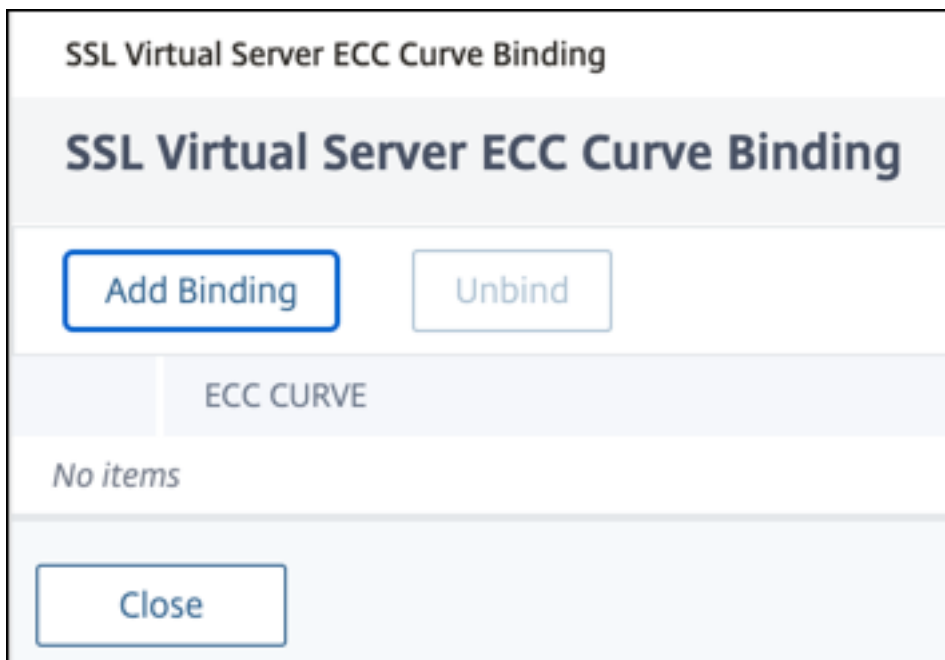

6. In **ECC Curve Binding**, click **Select ECC Curve**.

7. Select a value, and then click **Select**.

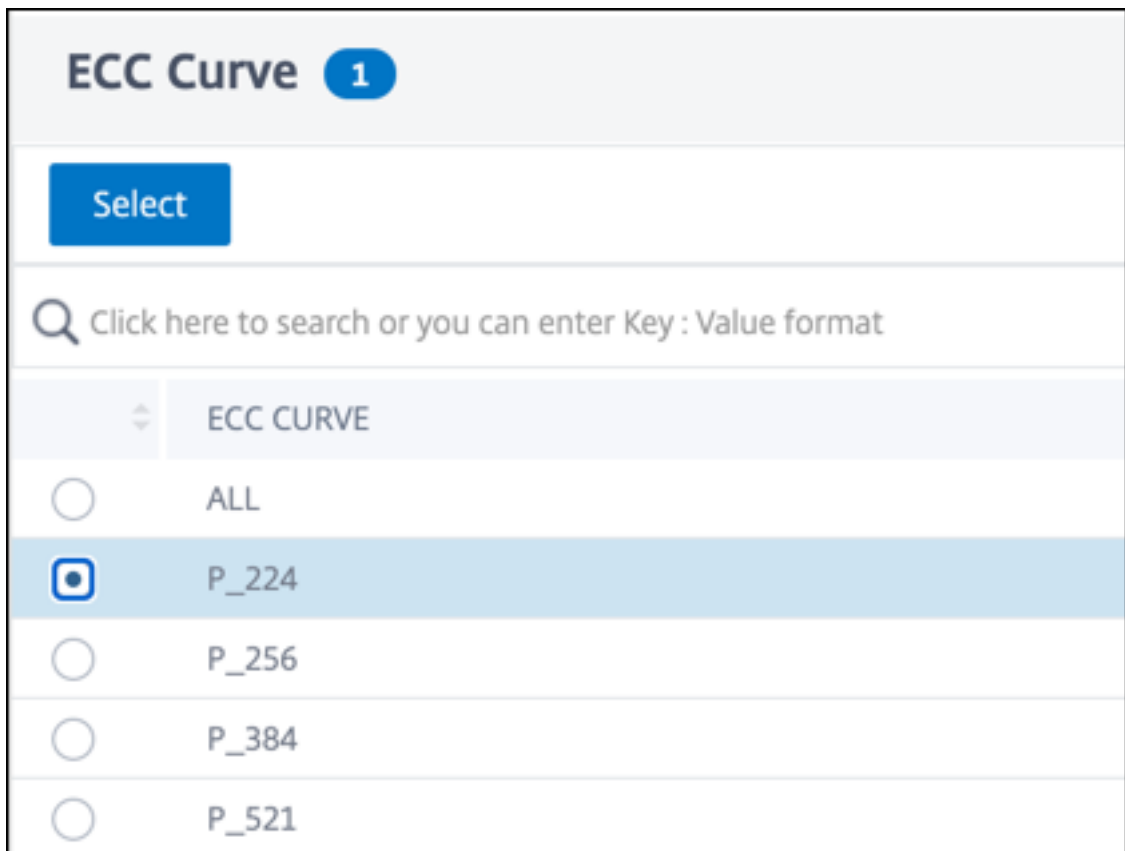

8. Click **Bind**.

9. Click **Close**.
10. Click **Done**.

### Bind ECC curves to an SSL service by using the CLI

ECC curves supported: P\_256, P\_384, P\_224, P\_521 and X\_25519.

At the command prompt, type:

```
bind ssl service <ServiceName > -eccCurveName <eccCurveName >
```

#### Example:

```
1 > bind ssl service sslsvc -eccCurveName P_224
2
3 > sh ssl service sslsvc
4
5 Advanced SSL configuration for Back-end SSL Service sslsvc:
6 DH: DISABLED
7 DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA:
8 DISABLED
9 Session Reuse: ENABLED Timeout: 300 seconds
10 Cipher Redirect: DISABLED
11 ClearText Port: 0
12 Server Auth: DISABLED
13 SSL Redirect: DISABLED
14 Non FIPS Ciphers: DISABLED
15 SNI: DISABLED
16 OCSP Stapling: DISABLED
17 SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2:
18 ENABLED TLSv1.3: DISABLED
19 Send Close-Notify: YES
20 Strict Sig-Digest Check: DISABLED
21 Zero RTT Early Data: ???
22 DHE Key Exchange With PSK: ???
23 Tickets Per Authentication Context: ???
24
25 ECC Curve: P_224
26 1) Cipher Name: DEFAULT_BACKEND
27 Description: Default cipher list for Backend SSL session
28 Done
```

### Bind ECC curves to an SSL service group by using the CLI

ECC curves supported: P\_256, P\_384, P\_224, P\_521 and X\_25519.

At the command prompt, type:


```
bind ssl servicegroup <ServicegroupName > -eccCurveName <eccCurveName >
```

**Example:**


```
1 > bind ssl service sslsg -eccCurveName X_25519
2
3 > sh ssl service sslsvc
4
5 Advanced SSL configuration for Back-end SSL Service Group sslsg:
6 Session Reuse: ENABLED Timeout: 300 seconds
7 Server Auth: DISABLED
8 Non FIPS Ciphers: DISABLED
9 SNI: DISABLED
10 OCSP Stapling: DISABLED
11 SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1: ENABLED TLSv1.2:
12 ENABLED TLSv1.3: DISABLED
13 Send Close-Notify: YES
14 Strict Sig-Digest Check: DISABLED
15
16 ECC Curve: X_25519
17
18 1) Cipher Name: DEFAULT_BACKEND
19 Description: Default cipher list for Backend SSL session
20 Done
```

**Bind ECC curves to an SSL service by using the GUI**

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Select an SSL service and click **Edit**.
3. In **Advanced Settings**, click **ECC Curve**.

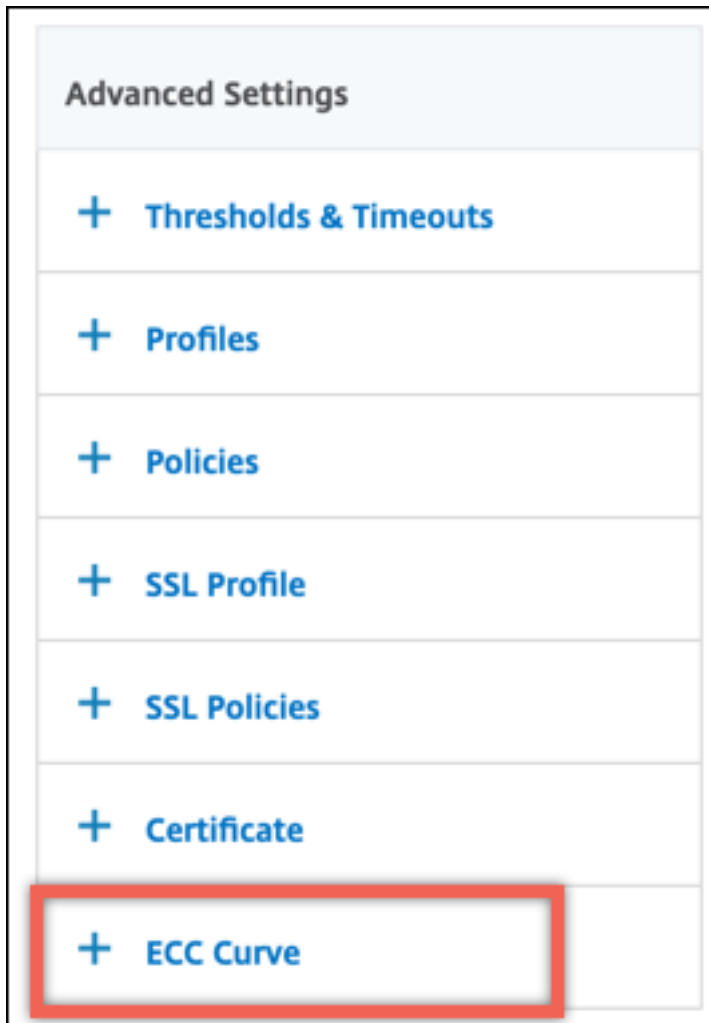


4. Click inside the ECC curve section.
5. In the **SSL Service ECC Curve Binding** page, click **Add Binding**.

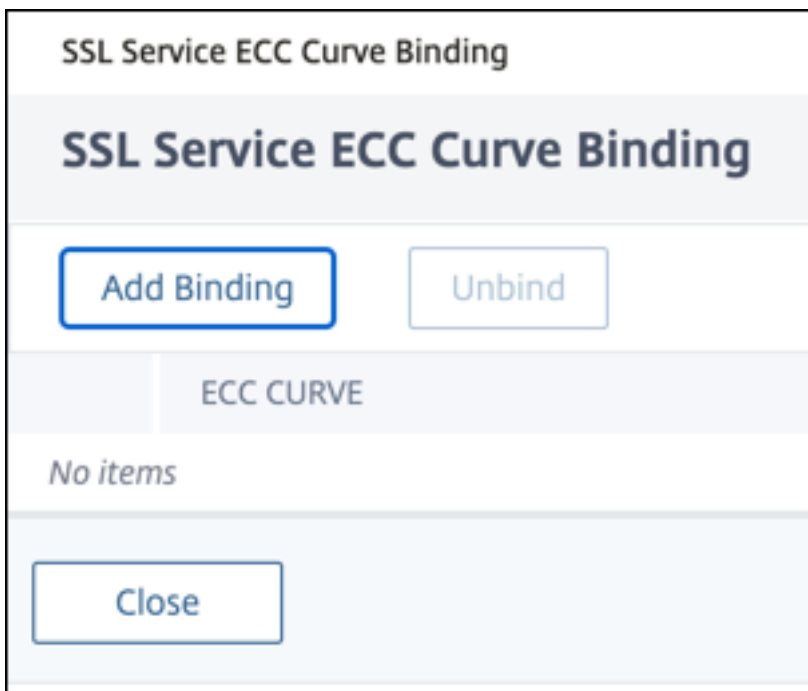

6. In **ECC Curve Binding**, click **Select ECC Curve**.

7. Select a value, and then click **Select**.

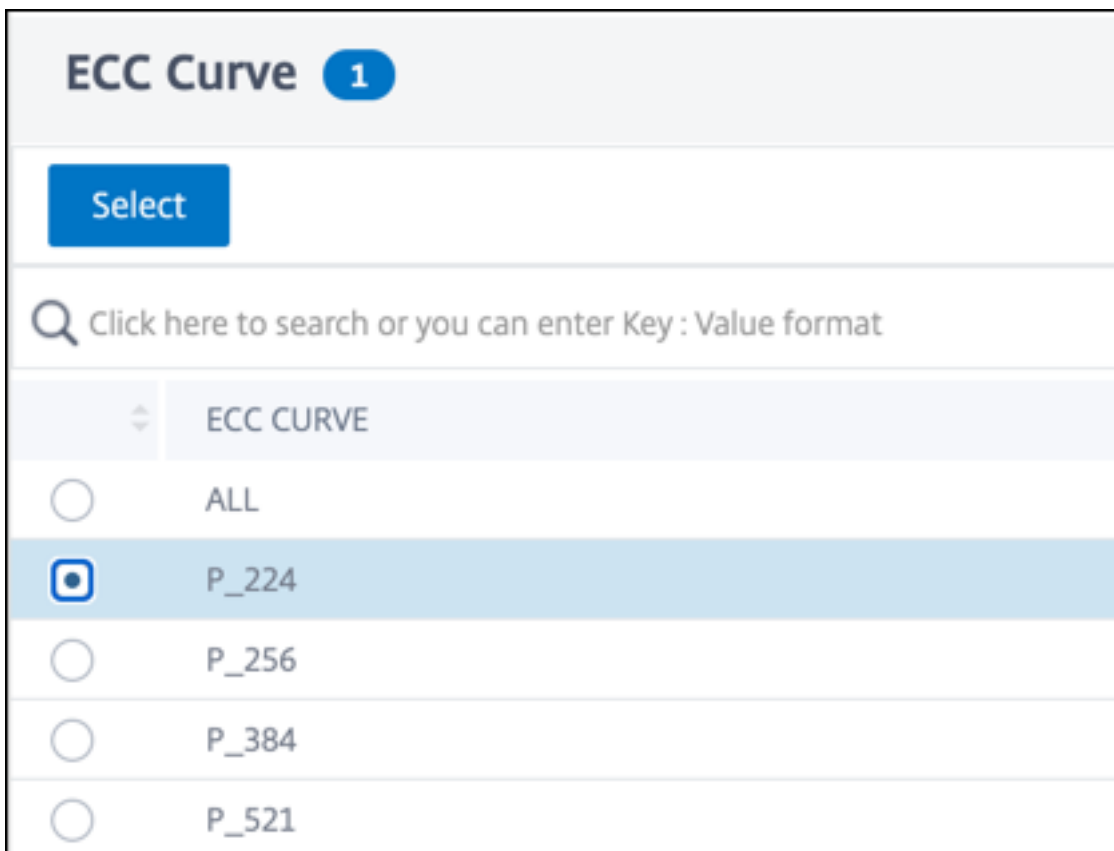



8. Click **Bind**.
9. Click **Close**.
10. Click **Done**.

### **Bind ECC curves to an SSL service groups by using the GUI**

1. Navigate to **Traffic Management > Load Balancing > Service Groups**.
2. Select an SSL service group and click **Edit**.
3. In **Advanced Settings**, click **ECC Curve**.
4. Click inside the ECC curve section.
5. In the **SSL Service Group ECC Curve Binding** page, click **Add Binding**.
6. In **ECC Curve Binding**, click **Select ECC Curve**.
7. Select a value, and then click **Select**.
8. Click **Bind**.
9. Click **Close**.
10. Click **Done**.

### **Diffie-Hellman parameters generation and achieving PFS with DHE**

June 11, 2024

The Diffie-Hellman (DH) key exchange is a way for two parties involved in an SSL transaction to agree upon a shared secret over an insecure channel. These parties have no prior knowledge about each other. This secret can be converted into cryptographic keying material for symmetric key cipher algorithms that require such a key exchange.

This feature is disabled by default. Configured the feature to support ciphers that use DH as the key exchange algorithm.

**Note:**

Generating 2048-bit DH parameters might take a long time (up to 30 minutes).

### **Generate DH parameters by using the CLI**

At the command prompt, type the following command:

```
1 create ssl dhparam <dhFile> [<bits>] [-gen (2 | 5)]
```

**Example:**

```
1 create ssl dhparam Key-DH-1 512 -gen 2
```

## Generate DH key of more than 2048 bits using the CLI

Starting from release 14.1-25.x, you can create DH keys up to 4096 bits on the following Intel Coletto and Intel Lewisburg-based platforms, and on the platforms where SSL processing is performed only in the software. Earlier the size was restricted to 2048 bits.

- MPX 5900
- MPX/SDX 8900
- MPX/SDX 15000
- MPX/SDX 15000-50G
- MPX/SDX 26000
- MPX/SDX 26000-50S
- MPX/SDX 26000-100G
- MPX/SDX 9100
- MPX/SDX 16000

To create a DH key of more than 2048 bits, use the [OpenSSL](#) command from the NetScaler shell prompt.

**Note:**

For Cavium platforms, the maximum limit is 2048 bits.

## Generate DH parameters by using the GUI

Navigate to **Traffic Management > SSL** and, in the **Tools** group, select **Create Diffie-Hellman (DH) key**, and **Configure SSL DH Param**.

**Note:**

For information about DH parameters, see [Diffie-Hellman parameters](#).

## Achieve perfect forward secrecy with DHE

Generating DH parameters is a CPU-intensive operation. In earlier releases, parameter generation, on a VPX appliance, took a long time because it was done in the software. Parameter generation is optimized by setting the `dhKeyExpSizeLimit` parameter. You can set this parameter for an SSL virtual server or an SSL profile and then bind the profile to a virtual server.

You can maintain perfect forward secrecy (PFS) on NetScaler MPX appliances by setting the DH count equal to zero. As a result, DH parameters are generated for each transaction (minimum `DHcount` is 0) on NetScaler MPX appliances. These parameters are generated without a significant drop in performance, because the operation is optimized. Earlier, the minimum DH count allowed was 500. That is, you cannot regenerate the key for up to 500 transactions.

**Limitation:**

On a NetScaler VPX appliance, if you set the DH count to zero, the DH parameters are not regenerated. Therefore, you must set the DH count to 500 to maintain PFS. The DH parameters are regenerated after 500 transactions.

### Optimize DH parameters generation by using the CLI

At the command prompt, type commands 1 and 2, or type command 3:

```
1 1. add ssl profile <name> [-sslProfileType (BackEnd | FrontEnd)] [-dhCount <positive_integer>] [-dh (ENABLED | DISABLED) -dhFile <string>] [-dhKeyExpSizeLimit (ENABLED | DISABLED)]
2 2. set ssl vserver <vServerName> [-sslProfile <string>]
```

```
1 3. set ssl vserver <vServerName> [-dh (ENABLED | DISABLED) -dhFile <string>] [-dhCount <positive_integer>] [-dhKeyExpSizeLimit (ENABLED | DISABLED)]
```

### Optimize DH parameters generation by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In the **SSL Parameters** section, select **Enable DH Key Expire Size Limit**.

## Cipher redirection

December 23, 2020

During the SSL handshake, the SSL client (usually a web browser) announces the suite of ciphers that it supports, in the configured order of cipher preference. From that list, the SSL server then selects a cipher that matches its own list of configured ciphers.

If the ciphers announced by the client does not match the ciphers configured on the SSL server, the SSL handshake fails. The failure is announced by a cryptic error message displayed in the browser. These messages rarely mention the exact cause of the error.

With cipher redirection, you can configure an SSL virtual server to deliver accurate, meaningful error messages when an SSL handshake fails. When an SSL handshake fails, the ADC appliance redirects the user to a previously configured URL or, if no URL is configured, displays an internally generated error page.

## Configure cipher redirection by using the CLI

At the command prompt, type the following commands to configure cipher redirection and verify the configuration:

```
1 - set ssl vserver <vServerName> -cipherRedirect < ENABLED | DISABLED>
 -cipherURL < URL>
2 - show ssl vserver <vServerName>
```

### Example:

```
1 set ssl vserver vs-ssl -cipherRedirect ENABLED -cipherURL http://
 redirectURL
2
3 Done
4
5 show ssl vserver vs-ssl
6
7 Advanced SSL configuration for VServer vs-ssl:
8 DH: DISABLED
9 Ephemeral RSA: ENABLED Refresh Count: 1000
10 Session Reuse: ENABLED Timeout: 600 seconds
11 Cipher Redirect: ENABLED Redirect URL: http://redirectURL
12 SSLv2 Redirect: DISABLED
13 ClearText Port: 0
14 Client Auth: DISABLED
15 SSL Redirect: DISABLED
16 Non FIPS Ciphers: DISABLED
17 SNI: DISABLED
18 OCSP Stapling: DISABLED
19 HSTS: DISABLED
20 HSTS IncludeSubDomains: NO
21 HSTS Max-Age: 0
22 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.2: ENABLED
 TLSv1.2: ENABLED
23 1) CertKey Name: Auth-Cert-1 Server Certificate
24 1) Cipher Name: DEFAULT
25 Description: Predefined Cipher Alias
26 Done
```

## Configure cipher redirection by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.

2. In the **SSL Parameters** section, select **Enable Cipher Redirect**, and specify a redirect URL.

## Use hardware and software to improve ECDHE and ECDSA cipher performance

May 2, 2023

### Note:

This enhancement is applicable only to the following platforms:

- MPX/SDX 11000
- MPX/SDX 14000
- MPX 22000, MPX 24000, and MPX 25000
- MPX/SDX 14000 FIPS

Previously, ECDHE and ECDSA computation on a NetScaler appliance was performed only on the hardware (Cavium chips), which limited the number of SSL sessions at any given time. With this enhancement, some operations are also performed in the software. That is, processing is done both on the Cavium chips and on the CPU cores to improve ECDHE and ECDSA cipher performance.

The processing is first performed in software, up to the configured software crypto threshold. After this threshold is reached, the operations are offloaded to the hardware. Therefore, this hybrid model uses both hardware and software to improve SSL performance. You can enable the hybrid model by setting the “softwareCryptoThreshold” parameter to suit your requirement. To disable the hybrid model, set this parameter to 0.

Benefits are greatest if the current CPU utilization is not too high, because the CPU threshold is not exclusive to ECDHE and ECDSA computation. For example, if the current workload on the appliance consumes 50% of the CPU cycles, and the threshold is set to 80%, ECDHE and ECDSA computation can only use 30%. After the configured software crypto threshold of 80% is reached, further ECDHE and ECDSA computation is offloaded to the hardware. In that case, actual CPU utilization might exceed 80%, because performing ECDHE and ECDSA computations in hardware consumes some CPU cycles.

### Enable the hybrid model by using the CLI

At the command prompt, type:

```
1 set ssl parameter -softwareCryptoThreshold <positive_integer>
2
```

```
3 Synopsis:
4
5 softwareCryptoThreshold:
6
7 NetScaler CPU utilization threshold (as a percentage) beyond which
 crypto operations are not done in software. A value of zero implies
 that CPU is not utilized for doing crypto in software.
8
9 Default = 0
10
11 Min = 0
12
13 Max = 100
```

**Example:**

```
1 set ssl parameter - softwareCryptoThreshold 80
2 Done
3
4 show ssl parameter
5 Advanced SSL Parameters
6
7 SSL quantum size : 8 KB
8 Max CRL memory size : 256 MB
9 Strict CA checks : NO
10 Encryption trigger timeout : 100 ms
11 Send Close-Notify : YES
12 Encryption trigger packet c : 45
13 Deny SSL Renegotiation : ALL
14 Subject/Issuer Name Insertion Format : Unicode
15 OCSP cache size : 10 MB
16 Push flag : 0x0 (Auto)
17 Strict Host Header check for SNI enabled SSL sessions : NO
18 PUSH encryption trigger timeout : 1 ms
19 Crypto Device Disable Limit : 0
20 Global undef action for control policies : CLIENTAUTH
21 Global undef action for data policies : NOOP
22 Default profile : DISABLED
23 Disable TLS 1.1/1.2 for SSL_BRIDGE secure monitors : NO
24 Disable TLS 1.1/1.2 for dynamic and VPN services : NO
25 Software Crypto acceleration CPU Threshold : 80
26 Signature and Hash Algorithms supported by TLS1.2 : ALL
```

**Enable the hybrid model by using the GUI**

1. Navigate to **Traffic Management > SSL > Change advanced SSL settings**.
2. Enter a value for **Software Crypto Threshold (%)**.

## Set an SNMP alarm for ECDHE exchange rate

ECDHE-based key exchange can cause the transactions per second on the appliance to drop. From release 13.0 build 52.x, you can configure an SNMP alarm for ECDHE-based transactions. In this alarm, you can set the threshold and normal limits for the ECDHE exchange rate. A new counter `nssl_tot_sslInfo_ECDHE_Tx` is added. This counter is the sum of all the ECDHE-based transaction counters on the front-end and back-end of the appliance. When the ECDHE-based key exchange crosses the configured limits an SNMP trap is sent. Another trap is sent when the value is back to the configured normal value.

## Set an SNMP alarm for ECDHE exchange rate using the CLI

At the command prompt, type:

```
1 set snmp alarm ECDHE-EXCHANGE-RATE -logging (ENABLED | DISABLED) -
 severity <severity>
2 -state (ENABLED | DISABLED) -thresholdValue <positive_integer> [-
 normalValue <positive_integer>] -time <secs>
```

### Example:

```
1 set snmp alarm ECDHE-EXCHANGE-RATE -logging eENABLED -severity critical
 -state eENABLED -thresholdValue 100 -normalValue 50
```

## ECDSA cipher suites support

May 2, 2023

ECDSA cipher suites use elliptical curve cryptography (ECC). Because of its smaller size, it is helpful in environments where processing power, storage space, bandwidth, and power consumption are constrained.

When the ECDHE\_ECDSA cipher group is used, the server's certificate must contain an ECDSA-capable public key.

The following table lists the ECDSA ciphers that are supported on the NetScaler MPX and SDX appliances with N3 chips, NetScaler VPX appliances, MPX 5900/26000, and MPX/SDX 8900/15000 appliances.

| Cipher Name                          | Priority | Description | Key Exchange Algorithm | Authentication Algorithm | Encryption Algorithm (Key Size) | Message Authentication Code (MAC) Algorithm | HexCode |
|--------------------------------------|----------|-------------|------------------------|--------------------------|---------------------------------|---------------------------------------------|---------|
| TLS1-ECDHE-ECDSA-AES128-SHA          | 1        | SSLv3       | ECC-DHE                | ECDSA                    | AES(128)                        | SHA1                                        | 0xc009  |
| TLS1-ECDHE-ECDSA-AES256-SHA          | 2        | SSLv3       | ECC-DHE                | ECDSA                    | AES(256)                        | SHA1                                        | 0xc00a  |
| TLS1.2-ECDHE-ECDSA-AES128-SHA256     | 3        | TLSv1.2     | ECC-DHE                | ECDSA                    | AES(128)                        | SHA-256                                     | 0xc023  |
| TLS1.2-ECDHE-ECDSA-AES256-SHA384     | 4        | TLSv1.2     | ECC-DHE                | ECDSA                    | AES(256)                        | SHA-384                                     | 0xc024  |
| TLS1.2-ECDHE-ECDSA-AES128-GCM-SHA256 | 5        | TLSv1.2     | ECC-DHE                | ECDSA                    | AES-GCM(128)                    | SHA-256                                     | 0xc02b  |
| TLS1.2-ECDHE-ECDSA-AES256-GCM-SHA384 | 6        | TLSv1.2     | ECC-DHE                | ECDSA                    | AES-GCM(256)                    | SHA-384                                     | 0xc02c  |



| Cipher Name                          | Priority | Description | Key Exchange Algorithm | Authentication Algorithm | Encryption Algorithm (Key Size) | Message Authentication Code (MAC) Algorithm | HexCode |
|--------------------------------------|----------|-------------|------------------------|--------------------------|---------------------------------|---------------------------------------------|---------|
| TLS1-ECDHE-ECDSA-RC4-SHA             | 7        | SSLv3       | ECC-DHE                | ECDSA                    | RC4(128)                        | SHA1                                        | 0xc007  |
| TLS1-ECDHE-ECDSA-DES-CBC3-SHA        | 8        | SSLv3       | ECC-DHE                | ECDSA                    | 3DES(168)                       | SHA1                                        | 0xc008  |
| TLS1.2-ECDHE-ECDSA-CHACHA20-POLY1305 | 9        | TLSv1.2     | ECC-DHE                | ECDSA                    | CHACHA20/POLY1305(256)          | SHA384                                      | 0xc013  |

### ECDSA/RSA cipher and certificate selection

You can bind both ECDSA and RSA server certificates at the same time to an SSL virtual server. When both ECDSA and RSA certificates are bound to the virtual server, it automatically selects the appropriate server certificate to present to the client. If the client cipher list includes RSA ciphers, but does not include ECDSA ciphers, the virtual server presents the RSA server certificate. If both ciphers are present in the client's list, then the server certificate presented depends on the cipher priority set on the virtual server. That is, if RSA has a higher priority, the RSA certificate is presented. If ECDSA has a higher priority, the ECDSA certificate is presented to the client.

### Client authentication by using an ECDSA or an RSA certificate

For client authentication, the CA certificate bound to the virtual server can be ECDSA or RSA signed. The appliance supports a mixed certificate chain. For example, the following certificate chain is supported.

Client certificate (ECDSA) <-> CA certificate (RSA) <-> Intermediate certificate (RSA) <-> Root certificate (RSA)

The following table shows the elliptical curves supported on the different NetScaler appliances with ECDSA cipher groups and ECDSA certificates:

| Elliptical curves | Platforms supported                                       |
|-------------------|-----------------------------------------------------------|
| prime256v1        | All platforms, including FIPS.                            |
| secp384r1         | All platforms, including FIPS.                            |
| secp521r1         | MPX 5900, MPX/SDX 8900, MPX/SDX 15000, MPX/SDX 26000, VPX |
| secp224r1         | MPX 5900, MPX/SDX 8900. MPX/SDX 15000, MPX/SDX 26000, VPX |

### Create an ECDSA certificate-key pair

You can create an ECDSA certificate-key pair directly on a NetScaler appliance by using the CLI or the GUI. Earlier, you were able to install and bind an ECC certificate-key pair on the appliance, but you had to use OpenSSL to create a certificate-key pair.

Only P\_256 and P\_384 curves are supported.

#### Note

This support is available on all platforms except MPX 9700/1050/12500/15500.

#### To create an ECDSA certificate-key pair by using the CLI:

At the command prompt, type:

```
1 create ssl ecdsaKey <keyFile> -curve (P_256 | P_384) [-keyform (DER
 | PEM)] [-des | -des3] {
2 -password }
3 [-pkcs8]
```

#### Example:

```
1 create ecdsaKey ec_p256.ky -curve P_256 -pkcs8
2 Done
3 create ecdsaKey ec_p384.ky -curve P_384
4 Done
```

#### To create an ECDSA certificate-key pair by using the GUI:

1. Navigate to **Traffic Management > SSL > SSL Files > Keys** and click **Create ECDSA Key**.
2. To create a key in PKCS#8 format, select **PKCS8**.

## Configure user-defined cipher groups on the ADC appliance

May 2, 2023

A cipher group is a set of cipher suites that you bind to an SSL virtual server, service, or service group on the NetScaler appliance. A cipher suite comprises a protocol, a key exchange (Kx) algorithm, an authentication (Au) algorithm, an encryption (Enc) algorithm, and a message authentication code (Mac) algorithm. Your appliance ships with a predefined set of cipher groups. When you create an SSL service or SSL service group, the ALL cipher group is automatically bound to it. However, when you create an SSL virtual server or a transparent SSL service, the DEFAULT cipher group is automatically bound to it. In addition, you can create a user-defined cipher group and bind it to an SSL virtual server, service, or service group.

**Note:** If your MPX appliance does not have any licenses, then only the EXPORT cipher is bound to your SSL virtual server, service, or service group.

To create a user-defined cipher group, first you create a cipher group and then you bind ciphers or cipher groups to this group. If you specify a cipher alias or a cipher group, all the ciphers in the cipher alias or group are added to the user-defined cipher group. You can also add individual ciphers (cipher suites) to a user-defined group. However, you cannot modify a predefined cipher group. Before removing a cipher group, unbind all the cipher suites in the group.

Binding a cipher group to an SSL virtual server, service, or service group, appends the ciphers to the existing ciphers that are bound to the entity. To bind a specific cipher group to the entity, you must first unbind the ciphers or cipher group that is bound to the entity. Then bind the specific cipher group to the entity. For example, to bind only the AES cipher group to an SSL service, you perform the following steps:

1. Unbind the default cipher group ALL that is bound by default to the service when the service is created.

```
1 unbind ssl service <service name> -cipherName ALL
```

2. Bind the AES cipher group to the service

```
1 bind ssl service <Service name> -cipherName AE
```

If you want to bind the cipher group DES in addition to AES, at the command prompt, type:

```
1 bind ssl service <service name> -cipherName DES
```

**Note:** The free NetScaler virtual appliance supports only the DH cipher group.

## Configure a user-defined cipher group by using the CLI

At the command prompt, type the following commands to add a cipher group, or to add ciphers to a previously created group, and verify the settings:

```
1 add ssl cipher <cipherGroupName>
2 bind ssl cipher <cipherGroupName> -cipherName <cipherGroup/cipherName>
3 show ssl cipher <cipherGroupName>
```

### Example:

```
1 add ssl cipher test
2
3 Done
4
5 bind ssl cipher test -cipherName ECDHE
6
7 Done
8
9 sh ssl cipher test
10
11 1) Cipher Name: TLS1-ECDHE-RSA-AES256-SHA Priority : 1
12 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=AES(256) Mac=SHA1 HexCode
 =0xc014
13 2) Cipher Name: TLS1-ECDHE-RSA-AES128-SHA Priority : 2
14 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=AES(128) Mac=SHA1 HexCode
 =0xc013
15 3) Cipher Name: TLS1.2-ECDHE-RSA-AES-256-SHA384 Priority : 3
16 Description: TLSv1.2 Kx=ECC-DHE Au=RSA Enc=AES(256) Mac=SHA-384
 HexCode=0xc028
17 4) Cipher Name: TLS1.2-ECDHE-RSA-AES-128-SHA256 Priority : 4
18 Description: TLSv1.2 Kx=ECC-DHE Au=RSA Enc=AES(128) Mac=SHA-256
 HexCode=0xc027
19 5) Cipher Name: TLS1.2-ECDHE-RSA-AES256-GCM-SHA384 Priority : 5
20 Description: TLSv1.2 Kx=ECC-DHE Au=RSA Enc=AES-GCM(256) Mac=AEAD
 HexCode=0xc030
21 6) Cipher Name: TLS1.2-ECDHE-RSA-AES128-GCM-SHA256 Priority : 6
22 Description: TLSv1.2 Kx=ECC-DHE Au=RSA Enc=AES-GCM(128) Mac=AEAD
 HexCode=0xc02f
23 7) Cipher Name: TLS1-ECDHE-ECDSA-AES256-SHA Priority : 7
24 Description: SSLv3 Kx=ECC-DHE Au=ECDSA Enc=AES(256) Mac=SHA1
 HexCode=0xc00a
25 8) Cipher Name: TLS1-ECDHE-ECDSA-AES128-SHA Priority : 8
26 Description: SSLv3 Kx=ECC-DHE Au=ECDSA Enc=AES(128) Mac=SHA1
 HexCode=0xc009
27 9) Cipher Name: TLS1.2-ECDHE-ECDSA-AES256-SHA384 Priority : 9
28 Description: TLSv1.2 Kx=ECC-DHE Au=ECDSA Enc=AES(256) Mac=SHA-384
 HexCode=0xc024
29 10) Cipher Name: TLS1.2-ECDHE-ECDSA-AES128-SHA256 Priority : 10
30 Description: TLSv1.2 Kx=ECC-DHE Au=ECDSA Enc=AES(128) Mac=SHA-256
 HexCode=0xc023
31 11) Cipher Name: TLS1.2-ECDHE-ECDSA-AES256-GCM-SHA384
 Priority : 11
```

```

32 Description: TLSv1.2 Kx=ECC-DHE Au=ECDSA Enc=AES-GCM(256) Mac=AEAD
 HexCode=0xc02c
33 12) Cipher Name: TLS1.2-ECDHE-ECDSA-AES128-GCM-SHA256
 Priority : 12
34 Description: TLSv1.2 Kx=ECC-DHE Au=ECDSA Enc=AES-GCM(128) Mac=AEAD
 HexCode=0xc02b
35 13) Cipher Name: TLS1-ECDHE-RSA-DES-CBC3-SHA Priority : 13
36 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=3DES(168) Mac=SHA1 HexCode
 =0xc012
37 14) Cipher Name: TLS1-ECDHE-ECDSA-DES-CBC3-SHA Priority : 14
38 Description: SSLv3 Kx=ECC-DHE Au=ECDSA Enc=3DES(168) Mac=SHA1
 HexCode=0xc008
39 15) Cipher Name: TLS1-ECDHE-RSA-RC4-SHA Priority : 15
40 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=RC4(128) Mac=SHA1 HexCode
 =0xc011
41 16) Cipher Name: TLS1-ECDHE-ECDSA-RC4-SHA Priority : 16
42 Description: SSLv3 Kx=ECC-DHE Au=ECDSA Enc=RC4(128) Mac=SHA1
 HexCode=0xc007
43 17) Cipher Name: TLS1.2-ECDHE-RSA-CHACHA20-POLY1305 Priority : 17
44 Description: TLSv1.2 Kx=ECC-DHE Au=RSA Enc=CHACHA20/POLY1305(256) Mac
 =AEAD HexCode=0xcca8
45 18) Cipher Name: TLS1.2-ECDHE-ECDSA-CHACHA20-POLY1305
 Priority : 18
46 Description: TLSv1.2 Kx=ECC-DHE Au=ECDSA Enc=CHACHA20/POLY1305(256)
 Mac=AEAD HexCode=0xcca9
47 Done
48
49 bind ssl cipher test -cipherName TLS1-ECDHE-RSA-DES-CBC3-SHA

```

## Unbind ciphers from a cipher group by using the CLI

At the command prompt, type the following commands to unbind ciphers from a user-defined cipher group, and verify the settings:

```

1 show ssl cipher <cipherGroupName>
2
3 unbind ssl cipher <cipherGroupName> -cipherName <string>
4
5 show ssl cipher <cipherGroupName>

```

## Remove a cipher group by using the CLI

**Note:** You cannot remove a built-in cipher group. Before removing a user-defined cipher group, make sure that the cipher group is empty.

At the command prompt, type the following commands to remove a user-defined cipher group, and verify the configuration:

```
1 rm ssl cipher <userDefCipherGroupName> [<cipherName> ...]
2 show ssl cipher <cipherGroupName>
```

**Example:**

```
1 rm ssl cipher test Done
2
3 sh ssl cipher test ERROR: No such resource [cipherGroupName, test]
```

**Configure a user-defined cipher group by using the GUI**

1. Navigate to **Traffic Management > SSL > Cipher Groups**.
2. Click **Add**.
3. Specify a name for the cipher group.
4. Click **Add** to view the available ciphers and cipher groups.
5. Select a cipher or cipher group, and click the arrow button to add them.
6. Click **Create**.
7. Click **Close**.

**To bind a cipher group to an SSL virtual server, service, or service group by using the CLI:**

At the command prompt, type one of the following:

```
1 bind ssl vserver <vServerName> -cipherName <string>
2
3 bind ssl service <serviceName> -cipherName <string>
4
5 bind ssl serviceGroup <serviceGroupName> -cipherName <string>
```

**Example:**

```
1 bind ssl vserver ssl_vserver_test -cipherName test
2 Done
3
4 bind ssl service nshttps -cipherName test
5 Done
6
7 bind ssl servicegroup ssl_svc -cipherName test
8 Done
```

**To bind a cipher group to an SSL virtual server, service, or service group by using the GUI:**

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.

For service, replace virtual servers with services. For service groups, replace virtual servers with service groups.

Open the virtual server, service, or service group.

2. In **Advanced Settings**, select **SSL Ciphers**.
3. Bind a cipher group to the virtual server, service, or service group.

### Binding individual ciphers to an SSL virtual server or service

You can also bind individual ciphers, instead of a cipher group, to a virtual server or service.

#### To bind a cipher by using the CLI:

At the command prompt, type:

```
1 bind ssl vserver <vServerName> -cipherName <string>
2 bind ssl service <serviceName> -cipherName <string>
```

#### Example:

```
1 bind ssl vserver v1 -cipherName TLS1.2-ECDHE-RSA-AES256-GCM-SHA384
2 Done
3
4 bind ssl service sslsvc -cipherName TLS1.2-ECDHE-RSA-AES256-GCM-SHA384
5 Done
```

#### To bind a cipher to an SSL virtual server by using the GUI:

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Select an SSL virtual server and click **Edit**.
3. In **Advanced Settings**, select **SSL Ciphers**.
4. In **Cipher Suites**, select **Add**.
5. Search for the cipher in the available list and click the arrow to add it to the configured list.
6. Click **OK**.
7. Click **Done**.

To bind a cipher to an SSL service, repeat the preceding steps after replacing virtual server with service.

## Server certificate support matrix on the ADC appliance

August 4, 2023

NetScaler supports server certificate messages that are fragmented into more than one record if the total size is within 32 KB. Earlier, the maximum supported size was 16 KB and fragmentation was not supported.

The NetScaler appliance supports the following server certificates.

Table 1: Support on front-end (FE) and back-end (BE) service

| Server certificate/- Platform | MPX/SDX (N2 CHIPS) FE           | MPX/SDX (N2 CHIPS) BE           | MPX/SDX (N3 CHIPS) FE           | MPX/SDX (N3 CHIPS) BE           | VPX FE                          | VPX BE                          |
|-------------------------------|---------------------------------|---------------------------------|---------------------------------|---------------------------------|---------------------------------|---------------------------------|
| MD5                           | Y                               | Y                               | Y                               | Y                               | Y                               | Y                               |
| SHA1                          | Y                               | Y                               | Y                               | Y                               | Y                               | Y                               |
| SHA224                        | Y                               | Y                               | Y                               | Y                               | Y                               | Y                               |
| SHA256                        | Y                               | Y                               | Y                               | Y                               | Y                               | Y                               |
| SHA384                        | Y                               | Y                               | Y                               | Y                               | Y                               | Y                               |
| SHA512                        | Y                               | Y                               | Y                               | Y                               | Y                               | Y                               |
| RSA Key                       | 1024, 2048, 3072, and 4096 bits | 1024, 2048, 3072, and 4096 bits | 1024, 2048, 3072, and 4096 bits | 1024, 2048, 3072, and 4096 bits | 1024, 2048, 3072, and 4096 bits | 1024, 2048, 3072, and 4096 bits |
| DH Key                        | 1024 bits and 2048 bits         | 1024 bits and 2048 bits         | 1024 bits and 2048 bits         | 1024 bits and 2048 bits         | 1024, 2048, 3072, and 4096 bits | 1024, 2048, 3072, and 4096 bits |

| Server certificate/Platform | MPX/SDX 14030/14060/14080 FIPS FE | MPX/SDX 14030/14060/14080 FIPS BE |
|-----------------------------|-----------------------------------|-----------------------------------|
| MD5                         | Y                                 | Y                                 |
| SHA1                        | Y                                 | Y                                 |
| SHA224                      | Y                                 | Y                                 |
| SHA256                      | Y                                 | Y                                 |
| SHA384                      | Y                                 | Y                                 |
| SHA512                      | Y                                 | Y                                 |
| RSA Key                     | 2048 bits and 3072 bits           | 2048 bits and 3072 bits           |
| DH Key                      | N                                 | N                                 |



|                             | MPX 5900, MPX/SDX 8900,<br>MPX/SDX 9100, MPX/SDX 15000,<br>MPX/SDX 15000-50G, MPX/SDX<br>16000, MPX/SDX 26000,<br>MPX/SDX 26000-50G, MPX/SDX<br>26000-100G (front end) | MPX 5900, MPX/SDX 8900,<br>MPX/SDX 9100 MPX/SDX 15000,<br>MPX/SDX 15000-50G, MPX/SDX<br>16000, MPX/SDX 26000,<br>MPX/SDX 26000-50G, MPX/SDX<br>26000-100G (back end) |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Server certificate/Platform |                                                                                                                                                                        |                                                                                                                                                                      |
| MD5                         | Y                                                                                                                                                                      | Y                                                                                                                                                                    |
| SHA1                        | Y                                                                                                                                                                      | Y                                                                                                                                                                    |
| SHA224                      | Y                                                                                                                                                                      | Y                                                                                                                                                                    |
| SHA256                      | Y                                                                                                                                                                      | Y                                                                                                                                                                    |
| SHA384                      | Y                                                                                                                                                                      | Y                                                                                                                                                                    |
| SHA512                      | Y                                                                                                                                                                      | Y                                                                                                                                                                    |
| RSA Key                     | 1024, 2048, 3072, and 4096 bits                                                                                                                                        | 1024, 2048, 3072, and 4096 bits                                                                                                                                      |
| DH Key                      | 1024 bits and 2048 bits                                                                                                                                                | 1024 bits and 2048 bits                                                                                                                                              |

#### Notes

- 4k certificates require higher CPU cycles and might affect the performance of low-end appliances.
- In release 11.1 and earlier, a NetScaler appliance supports the following “signature algorithms” extensions in the back end client hello message: RSA-MD5, RSA-SHA1, and RSA-SHA256.  
The NetScaler appliance does not support SHA 384 and SHA 512 signature algorithms extensions. Therefore some servers, such as Windows IIS servers, reset the connection.
- Starting release 12.0, a NetScaler appliance supports all the signature\_algorithms extensions.

## Client authentication or Mutual TLS (mTLS)

August 4, 2023

In a typical SSL transaction, the client that is connecting to a server over a secure connection checks the validity of the server. To do so, it checks the server’s certificate before initiating the SSL transaction. Sometimes, however, you might want to configure the server to authenticate the client that is connecting to it.

With client authentication enabled on an SSL virtual server, the NetScaler appliance asks for the client certificate during the SSL handshake. The appliance checks the certificate presented by the client for normal constraints, such as the issuer signature and expiration date.

From release 13.1 build 42.x, the NetScaler appliance supports cross-signed certificate validation. That is, if a certificate is signed by multiple issuers, the validation passes if there is at least one valid path to the root certificate. Earlier, if one of the certificates in the certificate chain was cross-signed and had multiple paths to the root certificate, the ADC appliance only checked for one path. And if that path was not valid, the validation failed.

**Note**

For the appliance to verify issuer signatures, the certificate of the CA that issued the client certificate must be:

- Installed on the appliance.
- Bound to the virtual server that the client is transacting with.

If the certificate is valid, the appliance allows the client to access all secure resources. But if the certificate is invalid, the appliance drops the client request during the SSL handshake.

The appliance verifies the client certificate by first forming a chain of certificates, starting with the client certificate, and ending with the root CA certificate for the client (for example, Verisign). The root CA certificate might contain one or more intermediate CA certificates (if the root CA does not directly issue the client certificate).

Before you enable client authentication on the NetScaler appliance, make sure that a valid client certificate is installed on the client. Then, enable client authentication for the virtual server that handles the transactions. Finally, bind the certificate of the CA that issued the client certificate to the virtual server on the appliance.

**Note:** A NetScaler MPX appliance supports a certificate-key pair size from 512 bits to 4096 bits. The certificate must be signed by using one of the following hash algorithms:

- MD5
- SHA-1
- SHA-224
- SHA-256
- SHA-384
- SHA-512

On an SDX appliance, if an SSL chip is assigned to a VPX instance, the certificate-key pair size support of an MPX appliance applies. Otherwise, the normal certificate-key pair size support of a VPX instance applies.

A NetScaler virtual appliance (VPX instance) supports certificates of at least 512 bits, up to the following sizes:

- 4096-bit server certificate on the virtual server
- 4096-bit client certificate on the service
- 4096-bit CA certificate
- 4096-bit certificate on the physical server

The following table shows the RSASSA-PSS parameter sets supported by NetScaler. RSASSA-PSS algorithms are supported in the X.509 certificate path validation.

| Public Key OID | Mask Generation Function (MGF) | MGF Digest Function | Signature Digest Function | Salt Length |
|----------------|--------------------------------|---------------------|---------------------------|-------------|
| rsaEncryption  | MGF1                           | SHA-256             | SHA-256                   | 32 bytes    |
| rsaEncryption  | MGF1                           | SHA-384             | SHA-384                   | 48 bytes    |
| rsaEncryption  | MGF1                           | SHA-512             | SHA-512                   | 64 bytes    |

**Notes:**

- For MPX FIPS limitations, see [MPX FIPS limitations](#).
- For SDX FIPS limitations, see [SDX FIPS limitations](#).

**Provide the client certificate**

Before you configure client authentication, a valid client certificate must be installed on the client. A client certificate includes details about the specific client system that creates secure sessions with the NetScaler appliance. Each client certificate is unique and must be used by only one client system.

Whether you obtain the client certificate from a CA, use an existing client certificate, or generate a client certificate on the NetScaler appliance, you must convert the certificate to the correct format. On the NetScaler appliance, certificates are stored in either the PEM or DER format and must be converted to PKCS#12 format before they are installed on the client system. After converting the certificate and transferring it to the client system, ensure that it is installed on that system and configured for the client application. The application, such as a web browser, must be part of the SSL transactions.

For instructions on how to convert a certificate from PEM or DER format to PKCS#12 format, see [Import and convert SSL files](#).

For instructions on how to generate a client certificate, see [Create a certificate](#).

## Enable client-certificate based authentication

By default, client authentication is disabled on the NetScaler appliance, and all SSL transactions proceed without authenticating the client. You can configure client authentication to be either optional or mandatory as part of the SSL handshake.

If client authentication is optional, the appliance requests the client certificate but proceeds with the SSL transaction even if the client presents an invalid certificate. If client authentication is mandatory, the appliance terminates the SSL handshake if the SSL client does not provide a valid certificate.

**Caution:** Citrix recommends that you define proper access control policies before changing the client-certificate-based authentication check to optional.

**Note:** Client authentication is configured for individual SSL virtual servers, not globally.

## Enable client-certificate based authentication by using the CLI

At the command prompt, type the following commands to enable the client-certificate-based authentication and verify the configuration:

```
1 set ssl vserver <vServerName> [-clientAuth (ENABLED | DISABLED)] [-
 clientCert (MANDATORY | OPTIONAL)]
2 show ssl vserver <vServerName>
```

### Example:

```
1 set ssl vserver vssl -clientAuth ENABLED -clientCert Mandatory
2 Done
3 show ssl vserver vssl
4
5 Advanced SSL configuration for VServer vssl:
6 DH: DISABLED
7 Ephemeral RSA: ENABLED Refresh Count: 0
8 Session Reuse: ENABLED Timeout: 120 seconds
9 Cipher Redirect: DISABLED
10 SSLv2 Redirect: DISABLED
11 ClearText Port: 0
12 Client Auth: ENABLED Client Cert Required: Mandatory
13 SSL Redirect: DISABLED
14 Non FIPS Ciphers: DISABLED
15 SNI: DISABLED
16 OCSP Stapling: DISABLED
17 HSTS: DISABLED
18 HSTS IncludeSubDomains: NO
19 HSTS Max-Age: 0
20 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.2: ENABLED TLSv1
 .2: ENABLED
21
22 1) CertKey Name: sslkey Server Certificate
23
```

```
24 1) Policy Name: client_cert_policy Priority: 0
25
26 1) Cipher Name: DEFAULT
27 Description: Predefined Cipher Alias
28 Done
```

### Enable client-certificate based authentication by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open a virtual server.
2. In the **SSL Parameters** section, select **Client Authentication**, and in the **Client Certificate** list, select **Mandatory**.

#### Note:

If client authentication is set to mandatory and if the client certificate contains policy extensions, certificate validation fails. Set a parameter in the front-end SSL profile to skip this check. The parameter is disabled by default. That is, the check is performed by default.

### Skip the policy extension check during client authentication by using the CLI


At the command prompt, type:

```
1 set ssl profile ns_default_ssl_profile_frontend -clientauth ENABLED -
 skipClientCertPolicyCheck ENABLED
2
3 Parameter
4
5 skipClientCertPolicyCheck
6
7 Control policy extension check, if present inside the
 X509 certificate chain. Applicable only if client
 authentication is enabled and client certificate is
 set to mandatory. Possible values functions as follows
 :
8
9 - ENABLED: Skip the policy check during client authentication.
10
11 - DISABLED: Perform policy check during client authentication.
12
13 Possible values: ENABLED, DISABLED
14
15 Default: DISABLED
```

### Skip the policy extension check during client authentication by using the GUI

1. Navigate to **System > Profiles > SSL Profiles**.

2. Create a new front-end profile or edit an existing front-end profile.
3. Verify that client authentication is enabled and client certificate is set to mandatory.
4. Select **Skip Client Certificate Policy Check**.

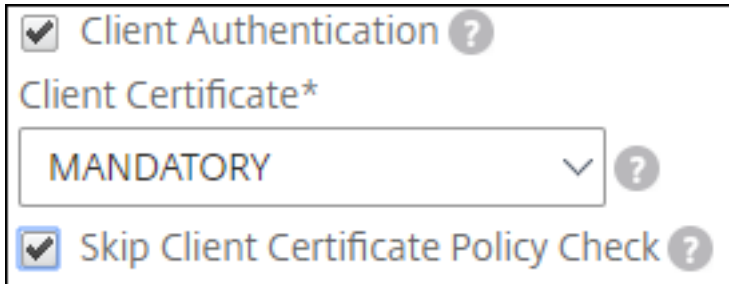

The screenshot shows a configuration window with the following elements:

- Client Authentication ?
- Client Certificate\*
- MANDATORY (dropdown menu) ?
- Skip Client Certificate Policy Check ?

### Bind CA certificates to the virtual server

A CA whose certificate is present on the NetScaler appliance must issue the client certificate used for client authentication. Bind this certificate to the NetScaler virtual server that carries out client authentication.

Bind the CA certificate to the SSL virtual server in such a way that the appliance can form a complete certificate chain when it verifies the client certificate. Otherwise, certificate chain formation fails and the client is denied access even if its certificate is valid.

You can bind CA certificates to the SSL virtual server in any order. The appliance forms the proper order during client certificate verification.

For example, if the client presents a certificate issued by **CA\_A**, where **CA\_A** is an intermediate CA whose certificate is issued by **CA\_B**, whose certificate is in turn issued by a trusted root CA, **Root\_CA**, a chain of certificates that contain all three of these certificates must be bound to the virtual server on the NetScaler appliance.

For instructions on binding one or more certificates to the virtual server, see [Bind the certificate-key pair to the SSL virtual server](#).

For instructions on creating a chain of certificates, see [Create a chain of certificates](#).

### Stricter control on client certificate validation

The NetScaler appliance accepts valid Intermediate-CA certificates if issued by a single Root-CA. That is, if only the Root-CA certificate is bound to the virtual server, and that Root-CA validates any intermediate certificate sent with the client certificate, the appliance trusts the certificate chain and the handshake is successful.

However, if a client sends a chain of certificates in the handshake, none of the intermediate certificates can be validated by using a CRL or OCSP responder unless that certificate is bound to the SSL

virtual server. Therefore, even if one of the intermediate certificates is revoked, the handshake is successful. As part of the handshake, the SSL virtual server sends the list of CA certificates that are bound to it. For stricter control, you can configure the SSL virtual server to accept only a certificate that is signed by one of the CA certificates bound to that virtual server. To do so, you must enable the **ClientAuthUseBoundCAChain** setting in the SSL profile bound to the virtual server. The handshake fails if one of the CA certificates bound to the virtual server has not signed the client certificate.

For example, say two client certificates, clientcert1 and clientcert2, are signed by the intermediate certificates Int-CA-A and Int-CA-B, respectively. The intermediate certificates are signed by the root certificate Root-CA. Int-CA-A and Root-CA are bound to the SSL virtual server. In the default case (ClientAuthUseBoundCAChain disabled), both clientcert1 and clientcert2 are accepted. However, if ClientAuthUseBoundCAChain is enabled, the NetScaler appliance only accepts clientcert1.

### Enable stricter control on client certificate validation by using the CLI

At the command prompt, type:

```
1 set ssl profile <name> -ClientAuthUseBoundCAChain Enabled
```

### Enable stricter control on client certificate validation by using the GUI

1. Navigate to **System > Profiles**, select the **SSL Profiles** tab, and create an SSL profile, or select an existing profile.
2. Select **Enable Client Authentication using bound CA Chain**.

## Server authentication

August 4, 2023

Since the NetScaler appliance performs SSL offload and acceleration on behalf of a web server, the appliance does not usually authenticate the Web server's certificate. However, you can authenticate the server in deployments that require end-to-end SSL encryption.

In such a situation, the appliance becomes the SSL client and carries out a secure transaction with the SSL server. It verifies that a CA whose certificate is bound to the SSL service has signed the server certificate, and checks the validity of the server certificate.

To authenticate the server, enable server authentication and bind the certificate of the CA that signed the server's certificate to the SSL service on the ADC appliance. When binding the certificate, you must specify the bind as a CA option.

NetScaler supports cross-signed certificate validation. That is, if a certificate is signed by multiple issuers, the validation passes if there is at least one valid path to the root certificate. In release 13.1 build 42.x and earlier, if one of the certificates in the certificate chain was cross-signed and had multiple paths to the root certificate, the appliance only checked for one path. And if that path was not valid, the validation failed.

## Enable (or disable) server certificate authentication

You can use the CLI and the GUI to enable and disable server certificate authentication.

### Enable (or disable) server certificate authentication using the CLI

At the command prompt, type the following commands to enable server certificate authentication and verify the configuration:

```
1 set ssl service <serviceName> -serverAuth (ENABLED | DISABLED)
2 show ssl service <serviceName>
```

#### Example:

```
1 set ssl service ssl-service-1 -serverAuth ENABLED
2
3 show ssl service ssl-service-1
4
5 Advanced SSL configuration for Back-end SSL Service ssl-
 service-1:`
6 DH: DISABLED
7 Ephemeral RSA: DISABLED
8 Session Reuse: ENABLED Timeout: 300 seconds
9 Cipher Redirect: DISABLED
10 SSLv2 Redirect: DISABLED
11 Server Auth: ENABLED
12 SSL Redirect: DISABLED
13 Non FIPS Ciphers: DISABLED
14 SSLv2: DISABLED SSLv3: ENABLED TLSv1: ENABLED
15 1) Cipher Name: ALL
16 Description: Predefined Cipher Alias
17 Done
```

### Enable (or disable) server certificate authentication by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**, and open an SSL service.
2. In the SSL Parameters section, select Enable Server Authentication, and specify a Common Name.
3. In Advanced Settings, select Certificates, and bind a CA certificate to the service.



## Bind the CA certificate to the service by using the CLI

At the command prompt, type the following commands to bind the CA certificate to the service and verify the configuration:

```
1 bind ssl service <serviceName> -certkeyName <string> -CA
2
3 show ssl service <serviceName>
```

### Example:

```
1 bind ssl service ssl-service-1 -certkeyName samplecertkey -CA
2
3 show ssl service ssl-service-1
4
5 Advanced SSL configuration for Back-end SSL Service ssl-
6 service-1:
7 DH: DISABLED
8 Ephemeral RSA: DISABLED
9 Session Reuse: ENABLED Timeout: 300 seconds
10 Cipher Redirect: DISABLED
11 SSLv2 Redirect: DISABLED
12 Server Auth: ENABLED
13 SSL Redirect: DISABLED
14 Non FIPS Ciphers: DISABLED
15 SSLv2: DISABLED SSLv3: ENABLED TLSv1: ENABLED
16 1) CertKey Name: samplecertkey CA Certificate
17 CRLCheck: Optional
18 1) Cipher Name: ALL
19 Description: Predefined Cipher Alias
20 Done
```

## Configure a common name for server certificate authentication

In end-to-end encryption with server authentication enabled, you can include a common name in the configuration of an SSL service or service group. The name that you specify is compared to the common name in the server certificate during an SSL handshake. If the two names match, the handshake is successful.

If the common names do not match, the common name specified for the service or service group is compared to the values in the subject alternative name (SAN) field in the certificate. If it matches one of those values, the handshake is successful. This configuration is especially useful if there are, for example, two servers behind a firewall and one of the servers spoofs the identity of the other. If the common name is not checked, a certificate presented by either server is accepted if the IP address matches.

**Note:** Only domain name, URL, and email ID DNS entries in the SAN field are compared.

## Configure common-name verification for an SSL service or service group by using the CLI

At the command prompt, type the following commands to specify server authentication with common-name verification and verify the configuration:

1. To configure a common name in a service, type:

```
1 set ssl service <serviceName> -commonName <string> -serverAuth
 ENABLED
2 show ssl service <serviceName>
```

2. To configure a common name in a service group, type:

```
1 set ssl serviceGroup <serviceName> -commonName <string> -
 serverAuth ENABLED
2 show ssl serviceGroup <serviceName>
```

### Example:

```
1 set ssl service svc1 -commonName xyz.com -serverAuth ENABLED
2
3 show ssl service svc
4
5 Advanced SSL configuration for Back-end SSL Service svc1:
6 DH: DISABLED
7 Ephemeral RSA: DISABLED
8 Session Reuse: ENABLED Timeout: 300 seconds
9 Cipher Redirect: DISABLED
10 SSLv2 Redirect: DISABLED
11 Server Auth: ENABLED Common Name: www.xyz.com
12 SSL Redirect: DISABLED
13 Non FIPS Ciphers: DISABLED
14 SNI: DISABLED
15 SSLv2: DISABLED SSLv3: ENABLED TLSv1: ENABLED
16 1) CertKey Name: cacert CA Certificate OCSPCheck: Optional
17 1) Cipher Name: ALL
18 Description: Predefined Cipher Alias
19 Done
```

## Configure common-name verification for an SSL service or service group by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services** or Navigate to **Traffic Management > Load Balancing > Service Groups**, and open a service or service group.
2. In the **SSL Parameters** section, select **Enable Server Authentication**, and specify a common name.

## SSL actions and policies

May 2, 2023

An SSL policy evaluates incoming traffic and applies a predefined action to requests that match a rule (expression). Configure the actions before creating the policies, so that you can specify an action when you create a policy. To put a policy into effect, do one of the following:

- Bind the policy to a virtual server on the appliance, so that it applies only to traffic flowing through that virtual server.
- Bind the policy globally, so that it applies to all traffic flowing through the appliance.

SSL actions define SSL settings that you can apply to the selected requests. You associate an action with one or more policies. Data in client connection requests or responses is compared to a rule specified in the policy, and the action is applied to connections that match the rule (expression).

You can configure classic policies with classic expressions and Advanced policy policies with Advanced policy expressions for SSL.

**Note:** Users who are not experienced in configuring policies at the CLI usually find using the configuration utility to be considerably easier.

You can associate a user-defined action or a built-in action to a Advanced policy. Classic policies allow only user-defined actions. In Advanced policy, you can also group policies under a policy label, in which case they are applied only when invoked from another policy.

Common uses of SSL actions and policies include per-directory client authentication, support for Outlook web access, and SSL-based header insertions. SSL-based header insertions contain SSL settings required by a server whose SSL processing has been offloaded to the NetScaler appliance.

## SSL policies

May 2, 2023

Policies on the NetScaler appliance help identify specific connections that you want to process. The processing is based on the actions that are configured for that particular policy. Once you create the policy and configure an action for it, you must do one of the following:

- Bind the policy to a virtual server on the appliance, so that it applies only to traffic flowing through that virtual server.
- Bind the policy globally, so that it applies to all traffic flowing through any virtual server configured on the NetScaler appliance.

The NetScaler appliance SSL feature supports Advanced policy (advanced) policies. For a complete description of Advanced policy expressions, how they work, and how to configure them manually, see [Policies and Expressions](#). For more information about SSL expressions, see [Advanced policy expressions: parsing SSL](#).

**Note:**

Users who are not experienced in configuring policies at the CLI usually find using the configuration utility considerably easier.

SSL policies require that you create an action before creating a policy, so that you can specify the actions when you create the policies.

In SSL Advanced policies, you can also use the built-in actions. For more information about built-in actions, see [SSL built-in actions and user-defined actions](#).

## SSL Advanced policies

An SSL Advanced policy, also known as an advanced policy, defines a control or a data action to be performed on requests. SSL policies can therefore be categorized as control policies and data policies:

- **Control policy.** A control policy uses a control action, such as forcing client authentication.  
Note: In release 10.5 or later, deny SSL renegotiation (`denySSLReneg`) is set, by default, to ALL. However, control policies, such as CLIENTAUTH, trigger a renegotiation handshake. If you use such policies, you must set `denySSLReneg` to NO.
- **Data policy.** A data policy uses a data action, such as inserting some data into the request.

The essential components of a policy are an expression and an action. The expression identifies the requests on which the action is to be performed.

You can configure an Advanced policy with a built-in action or a user-defined action. You can configure a policy with a built-in action without creating a separate action. However, to configure a policy with a user-defined action, first configure the action and then configure the policy.

You can specify an extra action, called an UNDEF action, to be performed when applying the expression to a request has an undefined result.

## SSL policy configuration

You can configure an SSL Advanced policy by using the CLI and the GUI.

## Configure an SSL policy by using the CLI

At the command prompt, type:

```
1 add ssl policy <name> -rule <expression> -Action <string> [-undefAction
 <string>] [-comment <string>]
```

## Configure an SSL policy by using the GUI

Navigate to **Traffic Management > SSL > Policies** and, on the **Polices** tab, click *Add*.

## Support for SSL policies with TLS1.3 protocol

From release 13.0 build 71.x and later, support is added for SSL policies with the TLS1.3 protocol. When the TLSv1.3 protocol is negotiated for a connection, policy rules that inspect TLS data received from the client now trigger the configured action.

For example, if the following policy rule returns true, the traffic is forwarded to the virtual server defined in the action.

```
1 add ssl action action1 -forward vserver2
2 add ssl policy pol1 -rule client.ssl.client_hello.sni.contains(" xyz ")
 -action action1
```

## Limitations

- Control policies are not supported.
- The following actions are not supported:
  - DOCLIENTAUTH
  - NOCLIENTAUTH
  - caCertGrpName
  - clientCertVerification
  - ssllogProfile

## SSL built-in actions and user-defined actions

May 2, 2023

Unless you need only the built-in actions in your policies, you have to create the actions before creating the policies. Then, you can specify the actions when you create the policies. The built-in actions are of two types, control actions and data actions. You use control actions in control policies, and data actions in data policies.

The built-in control actions are:

- DOCLIENTAUTH—Perform client certificate authentication. (Not supported for TLS1.3)
- NOCLIENTAUTH—Do not perform client certificate authentication. (Not supported for TLS1.3)

The built-in data actions are:

- RESET—Close the connection by sending an RST packet to the client.
- DROP—Drop all packets from the client. The connection remains open until the client closes it.
- NOOP—Forward the packet without performing any operation on it.

**Note:** Any dependent actions to client authentication, such as clientCertVerification and ssllogProfile, are not supported with the TLS 1.3 protocol.

You can create user-defined data actions. If you enable client authentication, you can create an SSL action to insert client-certificate data into the request header before forwarding the request to the web server.

If a policy evaluation results in an undefined state, an UNDEF action is performed. For either a data policy or a control policy, you can specify RESET, DROP, or NOOP as the UNDEF action. For a control policy, you also have the option of specifying DOCLIENTAUTH or NOCLIENTAUTH.

### Examples of built-in actions in a policy

In the following example, if the client sends a cipher other than an EXPORT category cipher, the NetScaler appliance requests client authentication. The client has to provide a valid certificate for a successful transaction.

```
1 add ssl policy pol1 -rule CLIENT.SSL.CIPHER_EXPORTABLE.NOT -reqAction DOCLIENTAUTH
```

The following examples assume that client authentication is enabled.

If the version in the certificate provided by the user matches the version in the policy, no action is taken and the packet is forwarded:

```
1 add ssl policy pol1 -rule CLIENT.SSL.CLIENT_CERT.VERSION.EQ(2) -reqAction NOOP
```

If the version in the certificate provided by the user matches the version in the policy, the connection is dropped:

```
1 add ssl policy pol1 -rule CLIENT.SSL.CLIENT_CERT.VERSION.EQ(2) -
 reqAction DROP
```

If the version in the certificate provided by the user matches the version in the policy, the connection is reset:

```
1 add ssl policy pol1 -rule CLIENT.SSL.CLIENT_CERT.VERSION.EQ(2) -
 reqAction RESET
```

## Client certificate verification with policy based client authentication

You can set client certificate verification to mandatory or option when you have configured policy based client authentication. Default is mandatory.

### Set client certificate verification to optional using the CLI

At the command prompt, type:

```
1 add ssl action <name> ((-clientAuth (DOCLIENTAUTH | NOCLIENTAUTH) [-
 clientCertVerification (Mandatory | Optional)])
```

#### Example:

```
1 add ssl action sslact -clientauth DOCLIENTAUTH -clientcertverification
 OPTIONAL
```

### Set client certificate verification to optional using the GUI

1. Navigate to **Traffic Management > SSL > Policies**.
2. On the **SSL Actions** tab, click **Add**.
3. Specify a name and in the **Client Certificate Verification** list, select **Optional**.

## User-defined SSL actions

In addition to built-in actions, you can also configure other SSL actions depending on your deployment. These actions are called user-defined actions.

### Configure a user-defined SSL action by using the CLI

At the command prompt, type the following commands to configure an action and verify the configuration:

```

1 add SSL action <name> -clientAuth(DOCLIENTAUTH | NOCLIENTAUTH) -
 clientCert (ENABLED | DISABLED) certHeader <string> -clientHeader <
 string> -clientCertSerialNumber (ENABLED | DISABLED) -
 certSerialHeader <string> -clientCertSubject (ENABLED | DISABLED) -
 certSubjectHeader <string> -clientCertHash (ENABLED | DISABLED) -
 certHashHeader <string> -clientCertIssuer (ENABLED | DISABLED) -
 certIssuerHeader <string> -sessionID (ENABLED | DISABLED) -
 sessionIDheader <string> -cipher (ENABLED | DISABLED) -cipherHeader
 <string> -clientCertNotBefore (ENABLED | DISABLED) -
 certNotBeforeHeader <string> -clientCertNotAfter (ENABLED | DISABLED
) -certNotAfterHeader <string> -OWASupport (ENABLED | DISABLED)

```

```

1 show ssl action [<name>]

```

**Example:**

```

1 add ssl action Action-SSL-ClientCert -clientCert ENABLED -certHeader "X
 -Client-Cert"

```

```

1 show ssl action Action-SSL-ClientCert
2
3 1) Name: Action-SSL-ClientCert
4 Data Insertion Action:
5 Cert Header: ENABLED Cert Tag: X-Client-Cert
6 Done

```

**Configure a user-defined SSL action by using the GUI**

Navigate to **Traffic Management > SSL > Policies** and, on the **Actions** tab, click **Add**.

**Configure an SSL action to forward client traffic to another virtual server**

Admins can configure an SSL action to forward the client traffic received on an SSL virtual server to another virtual server to avoid SSL offloading. Or for terminating the connection on the ADC appliance. This virtual server can be of the type: SSL, TCP, or SSL\_BRIDGE. For example, admins can choose to forward the request to another virtual server for further action instead of terminating the connection if any of the following cases:

- The appliance does not have a certificate.
- The appliance does not support a specific cipher.

To achieve the above, a new bind point 'CLIENTHELLO\_REQ' is added to evaluate client traffic when a client hello is received. If the policy bound to the virtual server receiving client traffic evaluates to true after parsing the client hello, the traffic is forwarded to another virtual server. If this virtual server is of



type SSL, it performs the handshake. If this virtual server is of type TCP or SSL\_BRIDGE, the back-end server performs the handshake.

In release 12.1-49.x, only the forward and reset actions are supported for the CLIENTHELLO\_REQ bind point. The following expression prefixes are available:

- CLIENT.SSL.CLIENT\_HELLO.CIPHERS.HAS\_HEXCODE
- CLIENT.SSL.CLIENT\_HELLO.CLIENT\_VERSION
- CLIENT.SSL.CLIENT\_HELLO.IS\_RENEGOTIATE
- CLIENT.SSL.CLIENT\_HELLO.IS\_REUSE
- CLIENT.SSL.CLIENT\_HELLO.IS\_SCSV
- CLIENT.SSL.CLIENT\_HELLO.IS\_SESSION\_TICKET
- CLIENT.SSL.CLIENT\_HELLO.LENGTH
- CLIENT.SSL.CLIENT\_HELLO.SNI
- CLIENT.SSL.CLIENT\_HELLO.ALPN.HAS\_NEXTPROTOCOL (from release 13.0 build 61.x)

For a description of these prefixes, see [Advanced policy expressions: parsing SSL](#).

A parameter `forward` is added to the `add SSL action` command and a new bind point `CLIENTHELLO_REQ` is added to the `bind ssl vserver` command.

### Configuration using the CLI

At the command prompt, type:

```
1 add ssl action <name> -forward <virtual server name>
2
3 add ssl policy <name> -rule <expression> -action <string>
4
5 bind ssl vserver <vServerName> -policyName <string> -priority <
 positive_integer> -type <type>
```

#### EXAMPLE:

```
1 add ssl action act1 -forward v2
2
3 add ssl policy pol1 -rule client.ssl.client_hello.ciphers.has_hexcode(0
 x002f) -action act1
4
5 bind ssl vserver v1 -policyName pol1 -priority 1 -type CLIENTHELLO_REQ
```

### Configuration using the GUI

Navigate to **Traffic Management > SSL > Policies**.

**Create SSL action:**

1. In **SSL Actions**, click **Add**.
2. In **Create SSL Action**, specify a name for the action.
3. In **Forward Action Virtual Server**, select an existing virtual server or add a new virtual server to forward the traffic to.
4. Optionally, set other parameters.
5. Click **Create**.

#### **Create SSL policy:**

1. In **SSL Policies**, click **Add**.
2. In **Create SSL Policy**, specify a name for the policy.
3. In **Action**, select the action that you created earlier.
4. In **Expression Editor**, enter the rule to evaluate.
5. Click **Create**.

#### **Create or add a virtual server and bind policy:**

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Add or select a virtual server.
3. In **Advanced Settings**, click **SSL Policies**.
4. Click in the SSL Policy section.
5. In **Select Policy**, select the policy that you created earlier.
6. In **Policy Binding**, specify a priority for the policy.
7. In **Type**, select **CLIENTHELLO\_REQ**.
8. Click **Bind**.
9. Click **Done**.

For the end-to-end configuration for the most popular use cases, see the following topics:

- [Configure SSL action to forward client traffic if the appliance does not have a domain specific \(SNI\) certificate.](#)
- [Configure an SSL action to forward client traffic based on the protocol in the ALPN extension of the client hello message.](#)
- [Configure SSL action to forward client traffic if a cipher is not supported on the ADC.](#)

#### **SSL action to selectively pick CAs based on SNI for client authentication**

You can send only the list of CAs based on SNI (domain) in the client certificate request rather than the list of all the CAs bound to an SSL virtual server. For example, when a client hello is received, only the CA certificates based on the SSL policy expression (for example, SNI) are sent. To send a specific set of certificates, you must create a CA certificates group. Then, bind this group to an SSL action, and bind

the action to an SSL policy. If the policy bound to the virtual server receiving client traffic evaluates to true after parsing the client hello, only a specific CA certificates group is sent in the client request certificate.

Earlier, you had to bind CA certificates to an SSL virtual server. With this enhancement, you can simply add CA certificate groups and associate them to an SSL action.

**Note:** Enable client authentication and SNI on the SSL virtual server. Bind the correct SNI certificates to the virtual server.

Perform the following steps:

1. Add a CA certificate group.
2. Add certificate-key pairs.
3. Bind the certificate-key pairs to this group.
4. Add an SSL action.
5. Add an SSL policy. Specify the action in the policy.
6. Bind the policy to an SSL virtual server. Specify the bind point as CLIENTHELLO\_REQ.

### Configuration using the CLI

At the command prompt, type the following commands in a sequence:

```
1 add ssl caCertGroup <caCertGroupName>
2 add ssl certkey <certkey_name> -cert <cert> -key <key>
3 bind ssl caCertGroup <caCertGroupName> <certkey_name>
4 add ssl action <name> -caCertGrpName <string>
5 add ssl policy <name> -rule <expression> -action <string>
6 bind ssl vserver <vServerName> -policyName <string> -priority <
 positive_integer> -type CLIENTHELLO_REQ
```

### Example:

```
1 add ssl cacertGroup ca_cert_group
2
3 add ssl certkey ca_certkey1 -cert cacert1 -key cakey1
4 add ssl certkey ca_certkey2 -cert cacert2 -key cakey2
5 add ssl certkey snicert -cert snicert -key snikey
6
7 bind ssl cacertGroup ca_cert_group ca_certkey1
8 bind ssl caCertGroup ca_cert_group ca_certkey2
```

```
1 sh ssl caCertGroup ca_cert_group
2
3 CA GROUP NAME: ca_cert_group
4 ACTIONS REFERRING: 1
```

```

5
6 1) CertKey Name: ca_certkey1 CA Certificate CRLCheck: Optional
 CA_Name Sent
7 2) CertKey Name: ca_certkey2 CA Certificate CRLCheck: Optional
 CA_Name Sent

```

```

1 add ssl action pick_ca_group -cacertGrpName ca_cert_group

```

```

1 sh ssl action pick_ca_group
2 1) Name: pick_ca_group
3 Type: Data Insertion
4 PickCaCertGroup: ca_cert_group
5 Hits: 0
6 Undef Hits: 0
7 Action Reference Count: 1

```

```

1 add ssl policy snipolicy -rule client.ssl.client_hello.sni.contains("
 abc") -action pick_ca_group
2 bind ssl vserver v_SSL -policyName snipolicy -type CLIENTHELLO_REQ -
 priority 10

```

```

1 sh ssl policy snipolicy
2 Name: snipolicy
3 Rule: client.ssl.client_hello.sni.contains("abc")
4 Action: pick_ca_group
5 UndefAction: Use Global
6 Hits: 0
7 Undef Hits: 0
8
9
10 Policy is bound to following entities
11 1) Bound to: CLIENTHELLO_REQ VSERVER v_SSL
12 Priority: 10

```

```

1 set ssl vserver v_SSL -clientauth ENABLED -SNIEnable ENABLED
2 bind ssl vserver v_SSL -certkeyName snicert -sniCert

```

```

1 sh ssl vserver v_SSL
2
3 Advanced SSL configuration for VServer v_SSL:
4 DH: DISABLED
5 DH Private-Key Exponent Size Limit: DISABLED Ephemeral RSA:
 ENABLED Refresh Count: 0
6 Session Reuse: ENABLED Timeout: 120 seconds
7 Cipher Redirect: DISABLED
8 SSLv2 Redirect: DISABLED
9 ClearText Port: 0
10 Client Auth: ENABLED Client Cert Required: Mandatory
11 SSL Redirect: DISABLED
12 Non FIPS Ciphers: DISABLED
13 SNI: ENABLED
14 OCSP Stapling: DISABLED

```

```
15 HSTS: DISABLED
16 HSTS IncludeSubDomains: NO
17 HSTS Max-Age: 0
18 SSLv2: DISABLED SSLv3: ENABLED TLSv1.0: ENABLED TLSv1.1: ENABLED
19 TLSv1.2: ENABLED TLSv1.3: DISABLED
20 Push Encryption Trigger: Always
21 Send Close-Notify: YES
22 Strict Sig-Digest Check: DISABLED
23 Zero RTT Early Data: DISABLED
24 DHE Key Exchange With PSK: NO
25 Tickets Per Authentication Context: 1
26 ECC Curve: P_256, P_384, P_224, P_521
27
28 1) CertKey Name: snicert Server Certificate for SNI
29
30
31 Data policy
32 1) Policy Name: snipolicy Priority: 10
33
34
35
36 1) Cipher Name: DEFAULT
37 Description: Default cipher list with encryption strength >= 128bit
```

## Configuration using the GUI

### Create CA certificates group and bind certificates to the group:

1. Navigate to **Traffic Management > SSL > CA Certificates Group**.
2. Click **Add** and specify a name for the group.
3. Click **Create**.
4. Select the **CA certificate group** and then click **Show Bindings**.
5. Click **Bind**.
6. In the **CA Certificate Binding** page, select an existing certificate or click Add to add a new certificate.
7. Click **Select** and then click **Bind**.
8. To bind another certificate, repeat steps 5 through 7.
9. Click **Close**.

Navigate to **Traffic Management > SSL > Policies**.

### Create SSL action:

1. In **SSL Actions**, click **Add**.
2. In **Create SSL Action**, specify a name for the action.
3. In **Forward Action Virtual Server**, select an existing virtual server or add a virtual server to forward the traffic to.

4. Optionally, set other parameters.
5. Click **Create**.

#### **Create SSL policy:**

1. In **SSL Policies**, click **Add**.
2. In **Create SSL Policy**, specify a name for the policy.
3. In **Action**, select the action created earlier.
4. In **Expression Editor**, enter the rule to evaluate.
5. Click **Create**.

#### **Create or add a virtual server and bind policy:**

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Add or select a virtual server.
3. In **Advanced Settings**, click **SSL Policies**.
4. Click in the SSL Policy section.
5. In **Select Policy**, select the policy that you created earlier.
6. In **Policy Binding**, specify a priority for the policy.
7. In **Type**, select **CLIENTHELLO\_REQ**.
8. Click **Bind**.
9. Click **Done**.

#### **Unbind a CA certificate group by using the GUI**

1. Navigate to **Traffic Management > SSL > CA Certificates Group**.
2. Select a certificate group and click **Show Bindings**.
3. Select the certificate to remove from the group and click **Unbind**.
4. If prompted for confirmation, click **\*\*Yes\*\***.
5. Click **Close**.

#### **Remove a CA certificate group by using the GUI**

1. Navigate to **Traffic Management > SSL > CA Certificates Group**.
2. Select a certificate group and click **Delete**.
3. If prompted for confirmation, click **Yes**.

## **SSL policy binding**

August 27, 2024

You can bind SSL policies globally or to an SSL type virtual server only. Globally bound policies are evaluated after all policies bound to services, virtual servers, or other NetScaler bind points are evaluated. If the incoming data matches any of the rules configured in the SSL policy, the policy is triggered, and the action associated with it is carried out.

When binding an SSL policy to a virtual server, you must select from one of the following bind points:

- REQUEST (Default bind point. Policy evaluation is done in the HTTP layer after the SSL handshake is completed.)
- INTERCEPT\_REQ (This option applies to a Citrix Secure Web Gateway setup. For more information, see [SSL policy infrastructure for SSL interception](#)).
- CLIENTHELLO\_REQ

Similarly, when unbinding a policy from a virtual server, you must specify the bind point.

If you specify CLIENTHELLO\_REQ as the bind point, the policy is evaluated when a client hello message is received. The allowed actions are RESET, FORWARD, and `caCertGrpName`. The reset action terminates the connection. The forward action forwards the request to a load balancing virtual server for processing. The `caCertGrpName` action selectively picks CAs based on SNI for client authentication. For more information about SSL actions, see [SSL built-in actions and user-defined actions](#).

**Notes:**

- The action `caCertGrpName` is not supported with the TLS 1.3 protocol.
- The SSL offloading process stores the information needed to evaluate SSL related expressions or rules during the SSL handshake, based on the configured settings.

For example, if the deployment contains both a content switching virtual server and a SSL load balancing virtual server, then the information (client versions, ciphers, client certificate, and so on) is stored based on the SSL settings during SSL offloading. This SSL setting is applicable for future rule or expression assessment. This example is applicable if SSL offloading happens at the content switching virtual server.

## Bind an SSL policy globally by using the CLI

At the command prompt, type the following command to bind a global SSL policy and verify the configuration:

```
1 bind ssl global - policyName <string> [- priority <positive_integer>]
2 show ssl global
```

**Example:**

```
1 bind ssl global -policyName Policy-SSL-2 -priority 90
```

```
2 Done
3
4 sh ssl global
5
6 1) Name: Policy-SSL-2 Priority: 90
7 2) Name: Policy-SSL-1 Priority: 100
8 Done
```

## Bind an SSL policy globally by using the GUI

1. Navigate to **Traffic Management > SSL > Policies**.
2. In the details pane, click **Global Bindings**.
3. In the **Bind/Unbind SSL Policies to Global** dialog box, click **Insert Policy**.
4. In the **Policy Name** list, select a policy.
5. Optionally, drag the entry to a new position in the policy bank to automatically update the priority level.
6. Click **OK**. A message appears in the status bar, stating that the policy has been bound successfully.

## Bind or unbind an SSL policy to a virtual server by using the CLI

At the command prompt, type the following command to bind an SSL policy to a virtual server and verify the configuration:

```
1 bind ssl vsrver <vServerName> -policyName <string> -priority <
 positive_integer> -type <type>
2
3 unbind ssl vsrver <vServerName> -policyName <string> -priority <
 positive_integer> -type <type>
```

### Example:

```
1 bind ssl vsrver v1 -policyName pol1 -priority 1 -type CLIENTHELLO_REQ
```

```
1 unbind ssl vsrver v1 -policyName pol1 -priority 1 -type
 CLIENTHELLO_REQ
```

```
1 show ssl vsrver vs-server
2
3 Advanced SSL configuration for VServer vs-server:
4
5 DH: DISABLED
6
7 Ephemeral RSA: ENABLED Refresh Count: 1000
8
9 Session Reuse: ENABLED Timeout: 120 seconds
```



```
10
11 Cipher Redirect: DISABLED
12
13 SSLv2 Redirect: DISABLED
14
15 ClearText Port: 80
16
17 Client Auth: DISABLED
18
19 SSL Redirect: ENABLED
20
21 SSL-REDIRECT Port Rewrite: ENABLED
22
23 Non FIPS Ciphers: DISABLED
24
25 SSLv2: DISABLED SSLv3: ENABLED TLSv1: ENABLED
26
27 1) Policy Name: ssl-policy-1 Priority: 10
28
29 1) Cipher Name: DEFAULT
30
31 Description: Predefined Cipher Alias
32
33 Done
```

## Bind an SSL policy to a virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open an SSL virtual server.
2. In **Advanced Settings**, select **SSL Policy**. Click in the **SSL policy** section to bind a policy to the virtual server.
3. In the **Policy Binding** page, select an existing policy or add a new policy.
4. Specify priority and type (bind point) for the policy.
5. Select **Bind**.
6. Select **Done**.

## SSL policy labels

May 24, 2023

Policy labels are holders for policies. A policy label helps in managing a group of policies, called a policy bank, which can be invoked from another policy. SSL policy labels can be control labels or data labels, depending on the type of policies that are included in the policy label. You can add only data policies in a data policy label and only control policies in a control policy label. To create the policy

bank, bind policies to the label and specify the order of evaluation of each policy relative to others in the bank of policies for the policy label. At the CLI, you enter two commands to create a policy label and bind policies to the policy label. In the configuration utility, you select options from a dialog box.

**Note:** Policy labels of type control are not supported with the TLS 1.3 protocol.

## Create an SSL policy label and bind policies to the label by using the CLI

At the command prompt, type:

```
1 add ssl policylabel <labelName> -type (CONTROL | DATA)
2
3 bind ssl policylabel <labelName> <policyName> <priority> [<
 gotoPriorityExpression>] [-invoke (<labelType> <labelName>)]
```

### Example:

```
1 add ssl policylabel cpl1 -type CONTROL
2 add ssl policylabel dpl1 -type DATA
3
4 add ssl action act1 -clientauth DOCLIENTAUTH
5 add ssl policy ctrlpol -rule HTTP.REQ.METHOD.EQ("GET") -action act1
6
7 add ssl action act2 -clientCert ENABLED -certHeader "X-Client-Cert"
8 add ssl policy datapol -rule CLIENT.SSL.CLIENT_CERT.EXISTS -action act2
9
10 bind ssl policylabel cpl1 ctrlpol 1
11 bind ssl policylabel dpl1 datapol 1
12
13 > sh ssl policylabel
14 Control policylabels
15 1) Label Name: cpl1
16 Type: CONTROL
17 Number of bound policies: 1
18 Number of times invoked: 0
19
20 Data policylabels
21 1) Label Name: dpl1
22 Type: DATA
23 Number of bound policies: 1
24 Number of times invoked: 0
25 Done
26 >
```

## Configure an SSL policy label and bind policies to the label by using the GUI

Navigate to **Traffic Management > SSL > Policy Labels**, and configure an SSL policy label.

## Selective SSL logging

January 9, 2025

In a large deployment comprising thousands of virtual servers, all SSL-related information is logged. Earlier, filtering the client authentication and SSL handshake successes and failures for a few critical virtual servers was not easy. Perusing through the entire log to get this information was a time-consuming and tedious task because the infrastructure did not offer the control to filter the logs. Now, you can log SSL-related information for a specific virtual server or for a group of virtual servers in the `ns.log`. This information is especially helpful in debugging failures.

**Note:**

To log SSL-related information, enable the `enable_ssl_hs_loginfo` option in the `nsapimgr` configuration without setting the `syslog` level to `DEBUG`.

With the `DEBUG` setting, all SSL related information is logged in `ns.log`. However, when you configure an SSL log profile, only information related to client authentication and SSL handshake is logged. To log this information, perform the following steps:

1. Set `DEBUG` on `syslog` parameters.
2. Configure an SSL log profile. Enable logging of client authentication and SSL handshake failure/success and failures only. All four are logged when you attach the SSL log profile with the SSL profile. Only client authentication failure/success and failures only are logged when you attach the SSL log profile with the SSL action.
3. Attach the SSL log profile to an SSL profile or to an SSL action.

See sample `ns.log` output for successful client authentication at the end of this page.

### Set `DEBUG` level

Set the `syslog` log level to `DEBUG`. At the command prompt, type:

```
set audit syslogParams -logLevel DEBUG
```

When `debug` is set, SSL logs for both front end (virtual servers) and back end (services and service groups) are included. However, selective SSL logging offers control only over the front end.

### SSL log profile

An SSL log profile provides control over logging the following events for a virtual server or a group of virtual servers:

- Client authentication success and failures, or failures only.
- SSL handshake success and failures, or failures only.

By default, all the parameters are disabled.

An SSL log profile can be set on an SSL profile, or on an SSL action. If set to an SSL profile, you can log both client authentication and SSL handshake success and failure information. If set to an SSL action, you can only log client authentication success and failure information because the handshake is complete before the policy is evaluated.

Client authentication and SSL handshake success and failures are logged even if you do not configure an SSL log profile. However, selective logging is possible only if an SSL log profile is used.

**Note:**

SSL log profile is supported in high availability and cluster setups.

### Add an SSL log profile by using the CLI

At the command prompt, type:

```
1 add ssl logprofile <name> [-sslLogClAuth (ENABLED | DISABLED)] [-
 ssllogClAuthFailures (ENABLED | DISABLED)] [-sslLogHS (ENABLED |
 DISABLED)] [-sslLogHSfailures (ENABLED | DISABLED)]
```

**Parameters:****Name:**

Name for the SSL log profile. Must begin with an ASCII alphanumeric or underscore (\_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the profile is created.

Name is a mandatory argument. Maximum Length: 127

**sslLogClAuth:**

Log all client authentication events. Includes both success and failure events.

Possible values: ENABLED, DISABLED

Default value: DISABLED

**ssllogClAuthFailures:**

Log all client authentication failure events.

Possible values: ENABLED, DISABLED

Default value: DISABLED

**sslLogHS:**

Log all SSL handshake related events. Includes both success and failure events.

Possible values: ENABLED, DISABLED

Default value: DISABLED

**sslLogHSfailures:**

Log all SSL handshake related failure events.

Possible values: ENABLED, DISABLED

Default value: DISABLED

**Example:**

```
1 > add ssl logprofile ssllog10 -sslLogClAuth ENABLED -sslLogHS ENABLED
2
3 Done
4
5 sh ssllogprofile ssllog10
6
7 1) Name: ssllog10
8
9 SSL log ClientAuth [Success/Failures] : ENABLED
10
11 SSL log ClientAuth [Failures] : DISABLED
12
13 SSL log Handshake [Success/Failures] : ENABLED
14
15 SSL log Handshake [Failures] : DISABLED
16
17 Done
```

**Add an SSL log profile by using the GUI**

Navigate to **System > Profiles > SSL Log Profile** and add a profile.

**Modify an SSL log profile by using the CLI**

At the command prompt type:

```
1 set ssl logprofile <name> [-sslLogClAuth (ENABLED | DISABLED)][-
 ssllogClAuthFailures (ENABLED | DISABLED)] [-sslLogHS (ENABLED |
 DISABLED)] [-sslLogHSfailures (ENABLED | DISABLED)]
```

**Example:**

```
1 set ssllogprofile ssllog10 -ssllogClAuth en -ssllogClAuthFailures en -
 ssllogHS en -ssllogHSfailures en
2
3 Done
4
5 sh ssllogprofile ssllog10
6
7 1) Name: ssllog10
8
9 SSL log ClientAuth [Success/Failures] : ENABLED
10 SSL log ClientAuth [Failures] : ENABLED
11 SSL log Handshake [Success/Failures] : ENABLED
12 SSL log Handshake [Failures] : ENABLED
13 Done
```

### Modify an SSL log profile by using the GUI

1. Navigate to **System > Profiles > SSL Log Profile**, select a profile, and click **Edit**.
2. Make changes and click **OK**.

### View all the SSL log profiles by using the CLI

At the command prompt, type:

```
1 sh ssl logprofile
```

#### Example:

```
1 sh ssl logprofile
2
3 1) Name: ssllogp1
4 SSL log ClientAuth [Success/Failures] : ENABLED
5 SSL log ClientAuth [Failures] : ENABLED
6 SSL log Handshake [Success/Failures] : DISABLED
7 SSL log Handshake [Failures] : ENABLED
8
9 2) Name: ssllogp2
10 SSL log ClientAuth [Success/Failures] : DISABLED
11 SSL log ClientAuth [Failures] : DISABLED
12 SSL log Handshake [Success/Failures] : DISABLED
13 SSL log Handshake [Failures] : DISABLED
14
15 3) Name: ssllogp3
16 SSL log ClientAuth [Success/Failures] : DISABLED
17 SSL log ClientAuth [Failures] : DISABLED
18 SSL log Handshake [Success/Failures] : DISABLED
19 SSL log Handshake [Failures] : DISABLED
20
21 4) Name: ssllog10
```

```
22 SSL log ClientAuth [Success/Failures] : ENABLED
23 SSL log ClientAuth [Failures] : ENABLED
24 SSL log Handshake [Success/Failures] : ENABLED
25 SSL log Handshake [Failures] : ENABLED
26 Done
```

### View all the SSL log profiles by using the GUI

Navigate to **System > Profiles > SSL Log Profile**. All the profiles are listed.

### Attach an SSL log profile to an SSL profile

You can attach (set) an SSL log profile on an SSL profile when you are creating an SSL profile, or later by editing the SSL profile. You can log both client authentication and handshake successes and failures.

#### Important:

The default SSL profile must be enabled before you can attach an SSL log profile. For more information about enabling the default SSL profile, see [Enable the default profile](#).

### Attach an SSL log profile on an SSL profile by using the CLI

At the command prompt, type:

```
1 set ssl profile <name> [-ssllogProfile <string>]
```

#### Example:

```
1 set ssl profile fron_1 -ssllogProfile ssllog10
```

### Attach an SSL log profile to an SSL profile by using the GUI

1. Navigate to **System > Profiles > SSL Profile**.
2. Click **Edit** and in **SSL Log Profile**, specify a profile.

### Attach an SSL log profile to an SSL action

You can set an SSL log profile only while creating an SSL action. You cannot modify an SSL action to set the log profile. Associate the action to a policy. You can only log client authentication successes and failures.

## Attach an SSL log profile to an SSL action by using the CLI

At the command prompt, type:

```
1 add ssl action <name> -clientAuth (DOCLIENTAUTH | NOCLIENTAUTH) -
 ssllogProfile <string>
```

### Example:

```
1 > add ssl action act1 -clientAuth DoCLIENTAUTH -ssllogProfile ssllog10
2
3 Done
4
5 > sh ssl action act1
6
7 1) Name: act1
8 Type: Client Authentication (DOCLIENTAUTH)
9 Hits: 0
10 Undef Hits: 0
11 Action Reference Count: 0
12 SSLlogProfile: ssllog10
13 Done
```

## Attach an SSL log profile to an SSL action by using the GUI

1. Navigate to **Traffic Management > SSL > Policies** and click **SSL Actions**.
2. Click **Add**.
3. In Client Authentication, select **ENABLED**.
4. In SSL Log Profile, select a profile from the list, or click "+" to create a profile.
5. Click **Create**.

## Sample output from the log file

The following is a sample log output from `ns.log` for successful client authentication.

```
1 Jan 24 16:24:25 <local0.debug> 10.102.57.80 01/24/2019:10:54:25 GMT 0-
 PPE-0 : default SSLLOG SSL_HANDSHAKE_SUCCESS 158 0 : SPCBId 671 -
 ClientIP 10.102.1.98 - ClientPort 49451 - VserverServiceIP
 10.102.57.82 - VserverServicePort 443 - ClientVersion TLSv1.2 -
 CipherSuite "AES-256-CBC-SHA TLSv1.2 Non-Export 256-bit" - Session
 New - CLIENT_AUTHENTICATED -SerialNumber "2A" - SignatureAlgorithm "
 sha1WithRSAEncryption" - ValidFrom "Sep 22 09:15:20 2008 GMT" -
 ValidTo "Feb 8 09:15:20 2036 GMT" - HandshakeTime 10 ms
2 Jan 24 16:24:25 <local0.debug> 10.102.57.80 01/24/2019:10:54:25 GMT 0-
 PPE-0 : default SSLLOG SSL_HANDSHAKE_ISSUERNAME 159 0 : SPCBId 671
 - IssuerName " C=IN,ST=KAR,O=Citrix R&D Pvt Ltd,CN=Citrix"
```



```

3 Jan 24 16:24:25 <local0.debug> 10.102.57.80 01/24/2019:10:54:25 GMT 0-
PPE-0 : default SSLLOG SSL_HANDSHAKE_SUBJECTNAME 160 0 : SPCBId 671
- SubjectName " C=IN,ST=KAR,O=Citrix Pvt Ltd,OU=A,CN=B"
4 Jan 24 16:24:25 <local0.debug> 10.102.57.80 01/24/2019:10:54:25 GMT 0-
PPE-0 : default SSLLOG SSL_HANDSHAKE_SUCCESS 161 0 : Backend SPCBId
674 - ServerIP 10.102.57.85 - ServerPort 443 - ProtocolVersion
TLSv1.2 - CipherSuite "AES-256-CBC-SHA TLSv1.2 Non-Export 256-bit" -
Session Reuse - SERVER_AUTHENTICATED -SerialNumber "3E" -
SignatureAlgorithm "sha1WithRSAEncryption" - ValidFrom "Sep 24
06:40:37 2008 GMT" - ValidTo "Feb 10 06:40:37 2036 GMT" -
HandshakeTime 1 ms
5 Jan 24 16:24:25 <local0.debug> 10.102.57.80 01/24/2019:10:54:25 GMT 0-
PPE-0 : default SSLLOG SSL_HANDSHAKE_ISSUERNAME 162 0 : SPCBId 674
- IssuerName " C=IN,ST=KAR,O=Citrix Pvt Ltd"
6 Jan 24 16:24:25 <local0.debug> 10.102.57.80 01/24/2019:10:54:25 GMT 0-
PPE-0 : default SSLLOG SSL_HANDSHAKE_SUBJECTNAME 163 0 : SPCBId 674
- SubjectName " C=IN,ST=P,L=Q,O=R"

```

## Support for DTLS protocol

November 29, 2024

### Notes

- DTLS 1.2 protocol is supported on the following appliances:
  - NetScaler MPX/SDX (N2 and N3 based) and VPX appliances. It is not supported on external HSMs.
  - NetScaler appliances containing Intel Coletto and Intel Lewisburg SSL chips.
  - Front-end of NetScaler VPX appliances.
  - Front-end of NetScaler appliances containing Intel Coletto SSL chips. For more information about the platforms containing Intel Coletto SSL chips, see [Support for Intel Coletto SSL chip-based platforms](#).
  - Front-end of NetScaler MPX (N3 based) appliances except the MPX 14000 FIPS appliances.
- Service groups of type DTLS are not supported.
- For information about Enlightened Data Transport (EDT) support for NetScaler Gateway, see [HDX enlightened data transport support](#).
- For information about the platforms and builds supported, see [NetScaler MPX hardware-software compatibility matrix](#)

The SSL and TLS protocols have traditionally been used to secure streaming traffic. Both of these protocols are based on TCP, which is slow. Also, TLS cannot handle lost or reordered packets.

UDP is the preferred protocol for audio and video applications, such as Lync, Skype, iTunes, YouTube, training videos, and flash. However, UDP is not secure or reliable. The DTLS protocol is designed to secure data over UDP and is used for applications such as media streaming, VOIP, and online gaming for communication. In DTLS, each handshake message is assigned a specific sequence number within that handshake. When a peer receives a handshake message, it can quickly determine whether that message is the next one expected. If it is, the peer processes the message. If not, the message is queued for handling after all the previous messages have been received.

Create a DTLS virtual server and a service of type UDP. By default, a DTLS profile (nsdtls\_default\_profile) is bound to the virtual server. Optionally, you can create and bind a user-defined DTLS profile to the virtual server.

**Note:**

RC4 ciphers are not supported on a DTLS virtual server.

### DTLS monitor support for DTLS service

Starting from NetScaler release 14.1 build 29.x, you can bind a DTLS-type monitor to DTLS services. This enhancement addresses the limitation of the ping-default monitor, which only checks the reachability of the server using PING and does not check the DTLS service provided by the server. With the DTLS-type monitor, NetScaler marks the service UP only if the DTLS handshake is successful.

For more information on how to configure the monitor, see [Configuring Monitors in a Load Balancing Setup](#).

### DTLS configuration

You can use the command line (CLI) or the configuration utility (GUI) to configure DTLS on your ADC appliance.

**Note:**

- The DTLS 1.2 protocol is supported on the front end of a NetScaler VPX appliance. While configuring a DTLS 1.2 virtual server, specify DTLS12. The default value is DTLS1.
- The monitor of type DTLS is supported from NetScaler release 14.1 build 29.x.

At the command prompt, type:

```
set ssl vservice DTLS [-dtls1 (ENABLED | DISABLED)] [-dtls12 (
ENABLED | DISABLED)]
```

### Create a DTLS configuration by using the CLI

At the command prompt, type:

```
1 add lb vserver <vserver_name> DTLS <IPAddress> <port>
2 add service <service_name> <IPAddress> DTLS 443
3 add lb monitor <monitorName> DTLS
4 bind service <servicename> -monitorName <monitor-name>
5 bind lb vserver <vserver_name> <dtls_service_name>
```

The following steps are optional:

```
1 add dtlsProfile dtls-profile -maxretryTime <positive_integer>
2 set ssl vserver <vserver_name> -dtlsProfileName <dtls_profile_name>
```

### Create a DTLS configuration by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Create a virtual server of type DTLS, and bind a DTLS service to the virtual server.
3. A default DTLS profile is bound to the DTLS virtual server. To bind a different profile, in SSL Parameters, select a different DTLS profile. To create a profile, click the plus (+) next to DTLS Profile.
4. Perform the following to create a monitor and bind to a DTLS service
  - a) Navigate to **Traffic Management > Load Balancing > Monitors**.
  - b) Click **Add** and create a monitor of type DTLS.
  - c) Navigate to **Configuration > Traffic Management > Load Balancing > Services** and click **Add**.
  - d) Create a service of type DTLS and then click OK.
  - e) Open the service, and add a monitor.

### Support for SNI on a DTLS virtual server

For information about SNI, see [Configure an SNI virtual server for secure hosting of multiple sites](#).

### Configure SNI on a DTLS virtual server by using the CLI

At the command prompt, type:

```
1 set ssl vserver <vServerName> -SNIEnable ENABLED
2 bind ssl vserver <vServerName> -certkeyName <string> -SNI Cert
3 show ssl vserver <vServerName>
```

#### Example:

```
1 set ssl vserver v1 -sniEnable ENABLED
2 bind ssl vserver v1 -certkeyName san2 -sni Cert
```

```
3 bind ssl vserver v1 -certkeyName san13 -sniCert
4 bind ssl vserver v1 -certkeyName san17 -sniCert
```

```
1 sh ssl vserver v1
2
3 Advanced SSL configuration for VServer v1:
4 DH: DISABLED
5 DH Private-Key Exponent Size Limit: DISABLED
6 Ephemeral RSA: ENABLED
7 Refresh Count: 0
8 Session Reuse: ENABLED
9 Timeout: 1800 seconds
10 Cipher Redirect: DISABLED
11
12 ClearText Port: 0
13 Client Auth: DISABLED
14 SSL Redirect: DISABLED
15 Non FIPS Ciphers: DISABLED
16 SNI: ENABLED
17 OCSP Stapling: DISABLED
18 HSTS: DISABLED
19 HSTS IncludeSubDomains: NO
20 HSTS Max-Age: 0
21 DTLSv1: ENABLED
22 Send Close-Notify: YES
23 Strict Sig-Digest Check: DISABLED
24 Zero RTT Early Data: DISABLED
25 DHE Key Exchange With PSK: NO
26 Tickets Per Authentication Context: 1
27
28 DTLS profile name: nsdtls_default_profile
29
30 ECC Curve: P_256, P_384, P_224, P_521
31
32 1) CertKey Name: ca
33 CA Certificate OCSPCheck: OptionalCA_Name Sent
34 2) CertKey Name: san2 Server Certificate for SNI
35 3) CertKey Name: san17 Server Certificate for SNI
36 4) CertKey Name: san13 Server Certificate for SNI
37
38
39 1) Cipher Name: DEFAULT
40 Description: Default cipher list with encryption strength >= 128bit
41 Done
```

### Configure SNI on a DTLS virtual server by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Open a DTLS virtual server and, in Certificates, click **Server Certificate**.
3. Add a certificate or select a certificate from the list and select **Server Certificate for SNI**.

4. In **Advanced Settings**, click **SSL Parameters**.
5. Select **SNI Enable**.

### Features not supported by a DTLS virtual server

The following options cannot be enabled on a DTLS virtual server:

- SSLv2
- SSLv3
- TLS 1.0
- TLS 1.1
- TLS 1.2
- Push encrypt trigger
- SSLv2Redirect
- SSLv2URL

### Parameters not used by a DTLS virtual server

A DTLS virtual server ignores the following SSL parameters, even if set:

- Encryption trigger packet count
- PUSH encryption trigger timeout
- SSL quantum size
- Encryption trigger timeout
- Subject/Issuer Name Insertion Format

### Configure renegotiation on a DTLS service

Non-secure renegotiation is supported on a DTLS service. You can use the CLI or the GUI to configure this setting.

#### Configure renegotiation on a DTLS service by using the CLI

At the command prompt, type:

```
1 set ssl parameter -denysslreneg NONSECURE
```

#### Example:

```
1 set ssl parameter -denysslreneg NONSECURE
2
```

```

3
4 sh ssl parameter
5 Advanced SSL Parameters
6 -----
7 SSL quantum size : 8 KB
8 Max CRL memory size : 256 MB
9 Strict CA checks : NO
10 Encryption trigger timeout : 100 ms
11 Send Close-Notify : YES
12 Encryption trigger packet count : 45
13 Deny SSL Renegotiation : NONSECURE
14 Subject/Issuer Name Insertion Format : Unicode
15 OCSP cache size : 10 MB
16 Push flag : 0x0 (Auto)
17 Strict Host Header check for SNI enabled SSL sessions : NO
18 PUSH encryption trigger timeout : 1 ms
19 Crypto Device Disable Limit : 0
20 Global undef action for control policies : CLIENTAUTH
21 Global undef action for data policies : NOOP
22 Default profile : DISABLED
23 SSL Insert Space in Certificate Header : YES
24 Disable TLS 1.1/1.2 for SSL_BRIDGE secure monitors : NO
25 Disable TLS 1.1/1.2 for dynamic and VPN services : NO
26 Software Crypto acceleration CPU Threshold : 0
27 Hybrid FIPS Mode : DISABLED
28 Signature and Hash Algorithms supported by TLS1.2 : ALL
29 SSL Interception Error Learning and Caching : DISABLED
30 SSL Interception Maximum Error Cache Memory : 0 Bytes
31 Done

```

### Configure renegotiation on a DTLS service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Select a DTLS service and click **Edit**.
3. Navigate to **SSL > Advanced Settings**.
4. Select **Deny SSL Renegotiation**.

### Features not supported by a DTLS service

The following options cannot be enabled on a DTLS service:

- SSLv2
- SSLv3
- TLS 1.0
- TLS 1.1
- TLS 1.2
- Push encrypt trigger

- SSLv2Redirect
- SSLv2URL
- SNI
- Secure renegotiation

### Parameters not used by a DTLS service

A DTLS service ignores the following SSL parameters, even if set:

- Encryption trigger packet count
- PUSH encryption trigger timeout
- SSL quantum size
- Encryption trigger timeout
- Subject/Issuer Name Insertion Format

#### Note:

The NetScaler VPX platform supports SSL session reuse handshake. For DTLS service, SSL session reuse handshake is not supported on the DTLS hardware platform, causing the SSL session reuse handshake to fail.

**Workaround:** Manually disable session reuse on a DTLS service. At the CLI, type:

```
set ssl service <dtls-service-name> -sessReuse DISABLED
```

### DTLS profile

A DTLS profile with the default settings is automatically bound to a DTLS virtual server. However, you can create a DTLS profile with specific settings to suit your requirement.

Use a DTLS profile with a DTLS virtual server or a VPN DTLS virtual server. You cannot use an SSL profile with a DTLS virtual server.

#### Note:

Change the maximum record size setting in the DTLS profile based on the changes in the MTU and packet size. For example, the default max record size of 1459 bytes is calculated based on an IPv4 address header size. With IPv6 records, the header size is larger and therefore the maximum record size must be reduced to meet the following criteria.

```
max record size + UDP header(8bytes)+ IP header size < MTU
```

#### Example:

```

1 Default DTLS profile
2 1) Name: nsdtls_default_profile
3 PMTU Discovery: DISABLED
4 Max Record Size: 1459 bytes
5 Max Retry Time: 3 sec
6 Hello Verify Request: ENABLED
7 Terminate Session: DISABLED
8 Max Packet Count: 120 bytes
9
10 Custom DTLS profile
11 1) Name: ns_dtls_profile_ipv6_1
12 PMTU Discovery: DISABLED
13 Max Record Size: 1450 bytes
14 Max Retry Time: 3 sec
15 Hello Verify Request: ENABLED
16 Terminate Session: DISABLED
17 Max Packet Count: 120 bytes

```

### Create a DTLS profile by using the CLI

#### Notes:

- The `helloverifyrequest` parameter is enabled by default. Enabling this parameter helps mitigate the risk of an attacker or bots overwhelming the network throughput, potentially leading to outbound bandwidth exhaustion. That is, it helps mitigate the DTLS DDoS amplification attack.
- The `maxHoldQlen` parameter is added. This parameter defines the number of datagrams that can be queued at the DTLS layer for processing. A high value of the `maxHoldQlen` parameter can cause memory buildup at the DTLS layer if UDP multiplexing is transmitting high UDP traffic. Therefore, configuring a lower value is recommended. The minimum value is 32, maximum value is 65535, and the default value is 32.

A new parameter `maxBadmacIgnorecount` is introduced in the DTLS profile to ignore bad MAC records received in a DTLS session. Using this parameter, bad records up to the value set in the parameter are ignored. The appliance terminates the session only after the limit is reached and sends an alert.

This parameter setting is effective only when the `terminateSession` parameter is enabled.

```

1 add ssl dtlsProfile <name> -maxRetryTime <positive_integer> -
 helloVerifyRequest (ENABLED | DISABLED) -terminateSession (ENABLED
 | DISABLED) -maxHoldQlen <positive_integer> -maxBadmacIgnorecount
 <positive_integer>
2
3 helloVerifyRequest
4 Send a Hello Verify request to validate the client.
5 Possible values: ENABLED, DISABLED

```



```
6 Default value: ENABLED
7
8 terminateSession
9 Terminate the session if the message authentication code
 (MAC)
10 of the client and server do not match.
11 Possible values: ENABLED, DISABLED
12 Default value: DISABLED
13
14 maxHoldQLen
15 Maximum number of datagrams that can be queued at DTLS
 layer for
16 processing
17 Default value: 32
18 Minimum value: 32
19 Maximum value: 65535
20
21 maxBadmacIgnorecount
22 Maximum number of bad MAC errors to ignore for a
 connection prior disconnect. Disabling parameter
 terminateSession
23 terminates session immediately when bad MAC is detected in the
 connection.
24 Default value: 100
25 Minimum value: 1
26 Maximum value: 65535
```

**Example:**

```
1 > add ssl dtlsprofile dtls_profile -maxRetryTime 4 -helloVerifyRequest
 ENABLED -terminateSession ENABLED -maxHoldQLen 40 -
 maxBadmacIgnorecount 150
2 Done
3 > sh dtlsprofile dtls_profile
4 1) Name: dtls_profile
5 PMTU Discovery: DISABLED
6 Max Record Size: 1459 bytes
7 Max Retry Time: 4 sec
8 Hello Verify Request: ENABLED
9 Terminate Session: ENABLED
10 Max Packet Count: 120 bytes
11 Max HoldQ Size: 40 datagrams
12 Max bad-MAC Ignore Count: 150
13
14 Done
```

**Configure DTLS time-out to retransmit the last packet from NetScaler****Note:**

This feature is available in build 17.x and later.

In a DTLS deployment, you can configure the initial time-out value to retransmit the last packet from

NetScaler. You can select between one second to three seconds with the default value set to three seconds. The initial timeout value cannot be greater than the max retry value.

Earlier, three seconds were hardcoded while the RFC recommended one second.

```
1 set ssl dtlsProfile <name> -initialRetryTimeout <positive_integer> -
 maxRetryTime <positive_integer>
```

**Examples:**

```
1 > set dtlsProfile nsdtls_default_profile -initialRetryTimeout 2 -
 maxretryTime 3
2 Done
3 > set dtlsProfile nsdtls_default_profile -initialRetryTimeout 1 -
 maxretryTime 3
4 Done
5 > set dtlsProfile nsdtls_default_profile -initialRetryTimeout 2 -
 maxretryTime 1
6 ERROR: Invalid value [The initial timeout value for retransmission
 cannot be greater than max retry value]
7 >
```

**Create a DTLS profile by using the GUI**

1. Navigate to **System > Profiles > DTLS Profiles** and click **Add**.
2. In the **Create DTLS Profile** page, type the values for the different parameters.

← Create DTLS Profile

DTLS Name\*  
dtls\_profile

Max Record Size  
1459

Max Packet Size  
120

Max HoldQ Size  
32

Initial Retry Timeout  
3

Max Retry Time  
3

Max Bad Mac Ignore Count  
100

PMTU Discovery  Hello Verify Request  
 Terminate Session

Create Close

3. Click **Create**.

### Example for an end-to-end DTLS configuration

```
1 enable ns feature SSL LB
2
3 add server s1 198.51.100.2
4
5 en ns mode usnip
6
7 add service svc_dtls s1 DTLS 443
8
9 add lb vserver v1 DTLS 10.102.59.244 443
10
11 bind ssl vserver v1 -ciphername ALL
12
13 add ssl certkey servercert -cert servercert_aia_valid.pem -key
 serverkey_aia.pem
14
15 bind ssl vserver v1 -certkeyname servercert
16
17 bind lb vserver lb1 svc_dtls
18
19 sh lb vserver v1
20
```

```
21 v1 (10.102.59.244:4433) - DTLS Type: ADDRESS
22 State: UP
23 Last state change was at Fri Apr 27 07:00:27 2018
24 Time since last state change: 0 days, 00:00:04.810
25 Effective State: UP
26 Client Idle Timeout: 120 sec
27 Down state flush: ENABLED
28 Disable Primary Vserver On Down : DISABLED
29 Appflow logging: ENABLED
30 No. of Bound Services : 1 (Total) 0 (Active)
31 Configured Method: LEASTCONNECTION
32 Current Method: Round Robin, Reason: A new service
 is bound BackupMethod: ROUNDROBIN
33 Mode: IP
34 Persistence: NONE
35 L2Conn: OFF
36 Skip Persistency: None
37 Listen Policy: NONE
38 IcmpResponse: PASSIVE
39 RHISTate: PASSIVE
40 New Service Startup Request Rate: 0 PER_SECOND,
 Increment Interval: 0
41 Mac mode Retain Vlan: DISABLED
42 DBS_LB: DISABLED
43 Process Local: DISABLED
44 Traffic Domain: 0
45 TROFS Persistence honored: ENABLED
46 Retain Connections on Cluster: NO
47
48 1) svc_dtls (10.102.59.190: 4433) - DTLS State: UP Weight: 1
49 Done
50
51
52 sh ssl vsriver v1
53
54 Advanced SSL configuration for VServer v1:
55 DH: DISABLED
56 DH Private-Key Exponent Size Limit: DISABLED
 Ephemeral RSA: ENABLED
57
 Session Reuse: ENABLED Refresh Count: 0
 Timeout:
 1800 seconds
58 Cipher Redirect: DISABLED
59 ClearText Port: 0
60 Client Auth: DISABLED
61 SSL Redirect: DISABLED
62 Non FIPS Ciphers: DISABLED
63 SNI: DISABLED
64 OCSP Stapling: DISABLED
65 HSTS: DISABLED
66 HSTS IncludeSubDomains: NO
67 HSTS Max-Age: 0
68 DTLSv1: ENABLED
```

```

69 Send Close-Notify: YES
70 Strict Sig-Digest Check: DISABLED
71 Zero RTT Early Data: DISABLED
72 DHE Key Exchange With PSK: NO
73 Tickets Per Authentication Context: 1
74 DTLS profile name: nsdtls_default_profile
75
76 ECC Curve: P_256, P_384, P_224, P_521
77
78 1) CertKey Name: servercert Server
 Certificate
79
80 1) Cipher Name: DEFAULT
81 Description: Default cipher list with encryption
 strength >= 128bit
82
83 2) Cipher Name: ALL
84 Description: All ciphers supported by NetScaler,
 excluding NULL ciphers
85 Done
86
87 sh service svc_dtls
88
89 svc_dtls (10.102.59.190:4433) - DTLS
90 State: UP
91 Last state change was at Fri Apr 27 07:00:26 2018
92 Time since last state change: 0 days, 00:00:22.790
93 Server Name: s1
94 Server ID : None Monitor Threshold
 : 0
95 Max Conn: 0 Max Req: 0 Max
 Bandwidth: 0 kbits
96 Use Source IP: NO
97 Client Keepalive(CKA): NO
98 Access Down Service: NO
99 TCP Buffering(TCPB): NO
100 HTTP Compression(CMP): NO
101 Idle timeout: Client: 120 sec Server: 120
 sec
102 Client IP: DISABLED
103 Cacheable: NO
104 SC: OFF
105 SP: OFF
106 Down state flush: ENABLED
107 Monitor Connection Close : NONE
108 Appflow logging: ENABLED
109 Process Local: DISABLED
110 Traffic Domain: 0
111
112 1) Monitor Name: ping-default
113 State: UP Weight: 1
 Passive: 0
114 Probes: 5 Failed [Total

```

```

: 0 Current: 0]
115 Last response: Success - ICMP echo
 reply received.
116 Response Time: 2.77 millisec
117 Done
118
119 sh ssl service svc_dtls
120
121 Advanced SSL configuration for Back-end SSL Service
 svc_dtls:
122 DH: DISABLED
123 DH Private-Key Exponent Size Limit: DISABLED
 Ephemeral RSA: DISABLED
124 Session Reuse: ENABLED Timeout:
 1800 seconds
125 Cipher Redirect: DISABLED
126 ClearText Port: 0
127 Server Auth: DISABLED
128 SSL Redirect: DISABLED
129 Non FIPS Ciphers: DISABLED
130 SNI: DISABLED
131 OCSP Stapling: DISABLED
132 DTLSv1: ENABLED
133 Send Close-Notify: YES
134 Strict Sig-Digest Check: DISABLED
135 Zero RTT Early Data: ???
136 DHE Key Exchange With PSK: ???
137 Tickets Per Authentication Context: ???
138 DTLS profile name: nsdtls_default_profile
139 ECC Curve: P_256, P_384, P_224, P_521
140 1) Cipher Name: DEFAULT_BACKEND
141 Description: Default cipher list for Backend SSL
 session
142 Done
143
144
145 > sh dtlsProfile nsdtls_default_profile
146 1) Name: nsdtls_default_profile
147 PMTU Discovery: DISABLED
148 Max Record Size: 1459 bytes
149 Max Retry Time: 3 sec
150 Hello Verify Request: DISABLED
151 Terminate Session: ENABLED
152 Max Packet Count: 120 bytes
153 Max HoldQ Size: 32 datagrams
154 Max bad-MAC Ignore Count: 10
155
156 Done
```

## DTLS support for IPv6 address

DTLS is supported with IPv6 addresses also. However, to use DTLS with IPv6 addresses the maximum record size must be adjusted in the DTLS profile.

If the default value is used for the maximum record size, the initial DTLS connection might fail. Adjust the maximum record size using a DTLS profile.

## DTLS cipher support

By default, a DTLS cipher group is bound when you create a DTLS virtual server or service. `DEFAULT_DTLS` contains the ciphers that a front-end DTLS entity supports. This group is bound by default when you create a DTLS virtual server. `DEFAULT_DTLS_BACKEND` contains the ciphers that are supported to a back-end DTLS entity. This group is bound by default to a DTLS back-end service. `DTLS_FIPS` contains the ciphers that are supported on the NetScaler FIPS platform. This group is bound by default to a DTLS virtual server or service created on a FIPS platform.

## DTLS cipher support on NetScaler VPX, MPX/SDX (N2 and N3 based) appliances

### How to read the tables:

Unless a build number is specified, a cipher suite is supported for all builds in a release.

### Example:

- **11.1, 12.1, 13.0, 13.1, 14.1:** All builds of 11.1, 12.1, 13.0, 13.1, 14.1 releases.
- **-NA-:** not applicable.

## DTLS cipher support on NetScaler VPX, MPX/SDX (N2, N3 and Coletto based) appliances

| Cipher Suite Name    | Hex Code | Wireshark Cipher Suite Name     | Builds Supported (front end) | Builds Supported (back end) |
|----------------------|----------|---------------------------------|------------------------------|-----------------------------|
| TLS1-AES-256-CBC-SHA | 0x0035   | TLS_RSA_WITH_AES_256_GCM_SHA384 | 12.1, 13.0, 13.1, 13.1, 14.1 | 12.1, 13.0, 13.1, 14.1      |
| TLS1-AES-128-CBC-SHA | 0x002f   | TLS_RSA_WITH_AES_128_GCM_SHA256 | 12.1, 13.0, 13.1, 13.1, 14.1 | 12.1, 13.0, 13.1, 14.1      |
| SSL3-DES-CBC-SHA     | 0x0009   | TLS_RSA_WITH_DES_CBC_SHA        | 13.0, 13.1, 14.1             | -NA-                        |
| SSL3-DES-CBC3-SHA    | 0x000a   | TLS_RSA_WITH_3DES_EDE_CBC_SHA   | 13.1, 14.1                   | 12.1, 13.0, 13.1, 14.1      |

| Cipher Suite Name             | Hex Code | Wireshark Cipher Suite Name                           | Builds Supported (front end) | Builds Supported (back end) |
|-------------------------------|----------|-------------------------------------------------------|------------------------------|-----------------------------|
| SSL3-EDH-RSA-DES-CBC3-SHA     | 0x0016   | TLS_DHE_RSA_WITH_1024_128_192_256_3DES_CBC_SHA        | 13.1, 14.1                   | -NA-                        |
| SSL3-EDH-RSA-DES-CBC-SHA      | 0x0015   | TLS_DHE_RSA_WITH_1024_128_192_256_3DES_CBC_SHA        | 13.1, 14.1                   | -NA-                        |
| TLS1-ECDHE-RSA-AES256-SHA     | 0xc014   | TLS_ECDHE_RSA_WITH_1024_128_192_256_AES_256_CBC_SHA   | 14.1                         | 13.0, 13.1, 14.1            |
| TLS1-ECDHE-RSA-AES128-SHA     | 0xc013   | TLS_ECDHE_RSA_WITH_1024_128_192_256_AES_128_CBC_SHA   | 14.1                         | 13.0, 13.1, 14.1            |
| TLS1-ECDHE-RSA-DES-CBC3-SHA   | 0xc012   | TLS_ECDHE_RSA_WITH_1024_128_192_256_3DES_CBC_SHA      | 14.1                         | -NA-                        |
| TLS1-DHE-RSA-AES-128-CBC-SHA  | 0x0033   | TLS_DHE_RSA_WITH_1024_128_192_256_AES_128_CBC_SHA     | 14.1                         | 12.1, 13.0, 13.1, 14.1      |
| TLS1-DHE-RSA-AES-256-CBC-SHA  | 0x0039   | TLS_DHE_RSA_WITH_1024_128_192_256_AES_256_CBC_SHA     | 14.1                         | 12.1, 13.0, 13.1, 14.1      |
| TLS1-ECDHE-ECDSA-AES128-SHA   | 0xc009   | TLS_ECDHE_ECDSA_WITH_1024_128_192_256_AES_128_CBC_SHA | 21.x, 14.1                   | -NA-                        |
| TLS1-ECDHE-ECDSA-AES256-SHA   | 0xc00a   | TLS_ECDHE_ECDSA_WITH_1024_128_192_256_AES_256_CBC_SHA | 21.x, 14.1                   | -NA-                        |
| TLS1-ECDHE-ECDSA-DES-CBC3-SHA | 0xc008   | TLS_ECDHE_ECDSA_WITH_1024_128_192_256_3DES_CBC_SHA    | 21.x, 14.1                   | -NA-                        |

To view the list of default ciphers supported on the front end, at the command prompt, type:

```

1 show ssl cipher DEFAULT_DTLS
2 1) Cipher Name: TLS1-AES-256-CBC-SHA Priority : 1
3 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(256) Mac=SHA1
HexCode=0x0035
4 2) Cipher Name: TLS1-AES-128-CBC-SHA Priority : 2
5 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(128) Mac=SHA1
HexCode=0x002f
6 3) Cipher Name: TLS1-ECDHE-RSA-AES256-SHA Priority : 3
7 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=AES(256) Mac=SHA1
HexCode=0xc014
8 4) Cipher Name: TLS1-ECDHE-RSA-AES128-SHA Priority : 4
9 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=AES(128) Mac=SHA1
HexCode=0xc013

```



```

10 5) Cipher Name: TLS1-DHE-RSA-AES-256-CBC-SHA Priority : 5
11 Description: SSLv3 Kx=DH Au=RSA Enc=AES(256) Mac=SHA1
HexCode=0x0039
12 6) Cipher Name: TLS1-DHE-RSA-AES-128-CBC-SHA Priority : 6
13 Description: SSLv3 Kx=DH Au=RSA Enc=AES(128) Mac=SHA1
HexCode=0x0033
14 7) Cipher Name: TLS1-ECDHE-RSA-DES-CBC3-SHA Priority : 7
15 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=3DES(168) Mac=SHA1
HexCode=0xc012
16 8) Cipher Name: SSL3-DES-CBC3-SHA Priority : 8
17 Description: SSLv3 Kx=RSA Au=RSA Enc=3DES(168) Mac=SHA1
HexCode=0x000a

```

To view the list of default ciphers supported on the back end, at the command prompt, type:

```

1 show ssl cipher DEFAULT_DTLS_BACKEND
2 1) Cipher Name: TLS1-AES-256-CBC-SHA Priority : 1
3 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(256) Mac=SHA1
HexCode=0x0035
4 2) Cipher Name: TLS1-AES-128-CBC-SHA Priority : 2
5 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(128) Mac=SHA1
HexCode=0x002f
6 3) Cipher Name: TLS1-ECDHE-RSA-AES256-SHA Priority : 3
7 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=AES(256) Mac=SHA1
HexCode=0xc014
8 4) Cipher Name: TLS1-ECDHE-RSA-AES128-SHA Priority : 4
9 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=AES(128) Mac=SHA1
HexCode=0xc013
10 5) Cipher Name: TLS1-DHE-RSA-AES-256-CBC-SHA Priority : 5
11 Description: SSLv3 Kx=DH Au=RSA Enc=AES(256) Mac=SHA1
HexCode=0x0039
12 6) Cipher Name: TLS1-DHE-RSA-AES-128-CBC-SHA Priority : 6
13 Description: SSLv3 Kx=DH Au=RSA Enc=AES(128) Mac=SHA1
HexCode=0x0033
14 7) Cipher Name: TLS1-ECDHE-RSA-DES-CBC3-SHA Priority : 7
15 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=3DES(168) Mac=SHA1
HexCode=0xc012
16 8) Cipher Name: SSL3-DES-CBC3-SHA Priority : 8
17 Description: SSLv3 Kx=RSA Au=RSA Enc=3DES(168) Mac=SHA1
HexCode=0x000a

```

### DTLS cipher support on the NetScaler MPX 14000 FIPS platform

**Note:** Enlightened Data Support (EDT) is supported on the FIPS platform if the following conditions are met:

- The UDT MSS value set on StoreFront is 900.
- Windows client version is 4.12 or later.
- DTLS enabled VDA version is 7.17 or later.
- Non-DTLS VDA version is 7.15 LTSR CU3 or later.

**How to read the tables:**

Unless a build number is specified, a cipher suite is supported for all builds in a release.

**Example:**

- **11.1, 12.1, 13.0, 13.1, 14.1:** All builds of 11.1, 12.1, 13.0, 13.1, 14.1 releases.
- **-NA-:** not applicable.

| Cipher suite Name            | Hex Code | Wireshark Cipher suite Name          | Builds Supported (front end) | Builds Supported (back end) |
|------------------------------|----------|--------------------------------------|------------------------------|-----------------------------|
| TLS1-AES-256-CBC-SHA         | 0x0035   | TLS_RSA_WITH_AES_256_CBC_SHA         | 12.1–14.1                    | 12.1–49.x, 13.0, 13.1, 14.1 |
| TLS1-AES-128-CBC-SHA         | 0x002f   | TLS_RSA_WITH_AES_128_CBC_SHA         | 12.1–14.1                    | 12.1–49.x, 13.0, 13.1, 14.1 |
| SSL3-DES-CBC-SHA             | 0x0009   | TLS_RSA_WITH_DES_CBC_SHA             | 12.1–14.1                    | -NA-                        |
| SSL3-DES-CBC3-SHA            | 0x000a   | TLS_RSA_WITH_3DES_EDE_CBC_SHA        | 12.1–14.1                    | 12.1–49.x, 13.0, 13.1, 14.1 |
| SSL3-EDH-RSA-DES-CBC3-SHA    | 0x0016   | TLS_DHE_RSA_WITH_DES_EDE_CBC_SHA     | 12.1–14.1                    | -NA-                        |
| SSL3-EDH-RSA-DES-CBC-SHA     | 0x0015   | TLS_DHE_RSA_WITH_DES_CBC_SHA         | 12.1–14.1                    | -NA-                        |
| TLS1-ECDHE-RSA-AES256-SHA    | 0xc014   | TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA   | 12.1–14.1                    | 12.1–49.x, 13.0, 13.1, 14.1 |
| TLS1-ECDHE-RSA-AES128-SHA    | 0xc013   | TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA   | 12.1–14.1                    | 12.1–49.x, 13.0, 13.1, 14.1 |
| TLS1-ECDHE-RSA-DES-CBC3-SHA  | 0xc012   | TLS_ECDHE_RSA_WITH_3DES_EDE_CBC_SHA  | 12.1–14.1                    | -NA-                        |
| TLS1-DHE-RSA-AES-128-CBC-SHA | 0x0033   | TLS_DHE_RSA_WITH_AES_128_CBC_SHA     | 12.1–14.1                    | 12.1–49.x, 13.0, 13.1, 14.1 |
| TLS1-DHE-RSA-AES-256-CBC-SHA | 0x0039   | TLS_DHE_RSA_WITH_AES_256_CBC_SHA     | 12.1–14.1                    | 12.1–49.x, 13.0, 13.1, 14.1 |
| TLS1-ECDHE-ECDSA-AES128-SHA  | 0xc009   | TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA | 12.1–14.1                    | 12.1.x, 14.1                |
| TLS1-ECDHE-ECDSA-AES256-SHA  | 0xc00a   | TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA | 12.1–14.1                    | 12.1.x, 14.1                |

| Cipher suite Name             | Hex Code | Wireshark Cipher suite Name       | Builds Supported (front end) | Builds Supported (back end) |
|-------------------------------|----------|-----------------------------------|------------------------------|-----------------------------|
| TLS1-ECDHE-ECDSA-DES-CBC3-SHA | 0xc008   | TLS_ECDHE_ECDSA_WITH_3DES_CBC_SHA | 13.1–21.x, 14.1              |                             |

To view the list of default ciphers supported on a NetScaler FIPS appliance, at the command prompt, type:

```

1 show ssl cipher DTLS_FIPS
2 1) Cipher Name: TLS1-AES-256-CBC-SHA Priority : 1
3 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(256) Mac=SHA1
HexCode=0x0035
4 2) Cipher Name: TLS1-AES-128-CBC-SHA Priority : 2
5 Description: SSLv3 Kx=RSA Au=RSA Enc=AES(128) Mac=SHA1
HexCode=0x002f
6 3) Cipher Name: TLS1-ECDHE-RSA-AES256-SHA Priority : 3
7 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=AES(256) Mac=SHA1
HexCode=0xc014
8 4) Cipher Name: TLS1-ECDHE-RSA-AES128-SHA Priority : 4
9 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=AES(128) Mac=SHA1
HexCode=0xc013
10 5) Cipher Name: TLS1-ECDHE-RSA-DES-CBC3-SHA Priority : 5
11 Description: SSLv3 Kx=ECC-DHE Au=RSA Enc=3DES(168) Mac=SHA1
HexCode=0xc012
12 6) Cipher Name: SSL3-DES-CBC3-SHA Priority : 6
13 Description: SSLv3 Kx=RSA Au=RSA Enc=3DES(168) Mac=SHA1
HexCode=0x000a

```

**DTLS 1.2 cipher support on the front-end VPX appliances, MPX/SDX (Coletto and N3 based) appliances**

The following table lists the additional ciphers supported for the DTLS 1.2 protocol.

| Cipher suite Name        | Hex Code | Wireshark Cipher suite Name     | Builds                    |                                  |                             |
|--------------------------|----------|---------------------------------|---------------------------|----------------------------------|-----------------------------|
|                          |          |                                 | Supported (VPX front end) | Builds Supported (Coletto based) | Builds Supported (N3 based) |
| TLS1.2-AES256-GCM-SHA384 | 0x009d   | TLS_RSA_WITH_AES_256_GCM_SHA384 | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |

| Cipher suite Name                  | Hex Code | Wireshark Cipher suite Name           | Builds                    |                                  |                             |
|------------------------------------|----------|---------------------------------------|---------------------------|----------------------------------|-----------------------------|
|                                    |          |                                       | Supported (VPX front end) | Builds Supported (Coletto based) | Builds Supported (N3 based) |
| TLS1.2-AES128-GCM-SHA256           | 0x009c   | TLS_RSA_WITH_AES_128_GCM_SHA256       | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-ECDHE-RSA-AES256-GCM-SHA384 | 0xc030   | TLS_ECDHE_RSA_WITH_AES_256_GCM_SHA384 | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-ECDHE-RSA-AES128-GCM-SHA256 | 0xc02f   | TLS_ECDHE_RSA_WITH_AES_128_GCM_SHA256 | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-DHE-RSA-AES256-GCM-SHA384   | 0x009f   | TLS_DHE_RSA_WITH_AES_256_GCM_SHA384   | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-DHE-RSA-AES128-GCM-SHA256   | 0x009e   | TLS_DHE_RSA_WITH_AES_128_GCM_SHA256   | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-AES-256-SHA256              | 0x003d   | TLS_RSA_WITH_AES_256_CBC_SHA256       | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-AES-128-SHA256              | 0x003c   | TLS_RSA_WITH_AES_128_CBC_SHA256       | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-ECDHE-RSA-AES-256-SHA384    | 0xc028   | TLS_ECDHE_RSA_WITH_AES_256_CBC_SHA384 | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-ECDHE-RSA-AES-128-SHA256    | 0xc027   | TLS_ECDHE_RSA_WITH_AES_128_CBC_SHA256 | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-DHE-RSA-AES-256-SHA256      | 0x006b   | TLS_DHE_RSA_WITH_AES_256_CBC_SHA256   | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |
| TLS1.2-DHE-RSA-AES-128-SHA256      | 0x0067   | TLS_DHE_RSA_WITH_AES_128_CBC_SHA256   | 13.1, 14.1                | 13.1, 14.1                       | 13.0–58.x, 13.1, 14.1       |

| Cipher suite Name                    | Hex Code | Wireshark Cipher suite Name             | Builds                    |                                  |                             |
|--------------------------------------|----------|-----------------------------------------|---------------------------|----------------------------------|-----------------------------|
|                                      |          |                                         | Supported (VPX front end) | Builds Supported (Coletto based) | Builds Supported (N3 based) |
| TLS1-ECDHE-ECDSA-AES128-SHA          | 0xc009   | TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA    | 14.1                      | 13.1-21.x, 14.1                  | 13.1-21.x, 14.1             |
| TLS1-ECDHE-ECDSA-AES256-SHA          | 0xc00a   | TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA    | 14.1                      | 13.1-21.x, 14.1                  | 13.1-21.x, 14.1             |
| TLS1-ECDHE-ECDSA-DES-CBC3-SHA        | 0xc008   | TLS_ECDHE_ECDSA_WITH_3DES_CBC_SHA       | 14.1                      | 13.1-21.x, 14.1                  | 13.1-21.x, 14.1             |
| TLS1.2-ECDHE-ECDSA-AES128-GCM-SHA256 | 0xc02b   | TLS_ECDHE_ECDSA_WITH_AES_128_GCM_SHA256 | 14.1                      | 13.1-21.x, 14.1                  | 13.1-21.x, 14.1             |
| TLS1.2-ECDHE-ECDSA-AES256-GCM-SHA384 | 0xc02c   | TLS_ECDHE_ECDSA_WITH_AES_256_GCM_SHA384 | 14.1                      | 13.1-21.x, 14.1                  | 13.1-21.x, 14.1             |
| TLS1.2-ECDHE-ECDSA-AES128-SHA256     | 0xc023   | TLS_ECDHE_ECDSA_WITH_AES_128_CBC_SHA256 | 14.1                      | 13.1-21.x, 14.1                  | 13.1-21.x, 14.1             |
| TLS1.2-ECDHE-ECDSA-AES256-SHA384     | 0xc024   | TLS_ECDHE_ECDSA_WITH_AES_256_CBC_SHA384 | 14.1                      | 13.1-21.x, 14.1                  | 13.1-21.x, 14.1             |

## Support for Intel Coletto and Intel Lewisburg SSL chip-based platforms

January 29, 2024

The following appliances ship with Intel Coletto chips:

- MPX 5900
- MPX/SDX 8900
- MPX/SDX 15000
- MPX/SDX 15000-50G
- MPX/SDX 26000
- MPX/SDX 26000-50S
- MPX/SDX 26000-100G

The following appliances ships with Intel Lewisburg chips:

- MPX/SDX 9100
- MPX/SDX 16000

Use the ‘show hardware’ command to identify whether your appliance has Coletto (COL) or Lewisburg (LBG) chips.

```
1 > sh hardware
2
3 Platform: NSMPX-8900 8*CPU+4*F1X+6*E1K+1*E1K+1*COL 8955 30010
4 Manufactured on: 10/18/2016
5 CPU: 2100MHZ
6 Host Id: 0
7 Serial no: CRAC5CR8UA
8 Encoded serial no: CRAC5CR8UA
9 Done
```

```
1 > sh hardware
2 Platform: NSMPX-9100 10*CPU+64GB+8*F2X+E1K+1*LBG C627 35000
3 Manufactured on: 10/1/2021
4 CPU: 2300MHZ
5 Host Id: 161644678
6 Serial no: N2Z3ZD9S21
7 Encoded serial no: N2Z3ZD9S21
8 Netscaler UUID: 41a26261-227e-11ec-b4db-3cecef56f86b
9 BMC Revision: 1.00
10 Done
```

## Limitations

The following ciphers, protocols, and features are not supported:

- DH 512 cipher
- SSLv3 protocol
- Azure Key Vault
- GnuTLS

- ECDSA certificates with ECC curves P\_224 and P521
- DNSSEC offload

Note

Support for the Thales Luna Network hardware security module (HSM) is available in release 13.1 build 33.x and later.

### View the software-based SSL chip utilization on NetScaler MPX and SDX platforms

You can view more details about the software-based SSL chip utilization on the following platforms:

- MPX and SDX platforms that ship with Intel Coletto chips.
- MPX platforms that ship with Intel Lewisburg chips.

Note

This feature is not supported on the following platforms:

- SDX 9100
- MPX/SDX 16000

At the command prompt, type:

```
1 > stat ssl
2
3 SSL Summary
4
5 1. SSL cards present 4
6 2. SSL cards UP 4
7 SSL engine status 1
8 SSL sessions (Rate) 19849
9 SSL Crypto Utilization Asym (%) 88
10 SSL Crypto Utilization Symm (%) 1
11
12 Crypto Utilization(%)
13 Asymmetric Crypto Utilization 86.30
14 Symmetric Crypto Utilization 0.97
15
16 System
17 Transactions Rate (/s) Total
18 SSL transactions 19849 45900312
19 SSLv2 transactions 0 0
20 SSLv3 transactions 0 0
21 TLSv1 transactions 0 0
22 TLSv1.1 transactions 0 0
23 TLSv1.2 transactions 19849 45900312
24 TLSv1.3 transactions 0 0
25 DTLSv1 transactions 0 0
26 DTLSv1.2 transactions 0 0
```

```

27
28 Front End
29 Sessions Rate (/s) Total
30 SSL sessions 19849 45937019
31 SSLv2 sessions 0 0
32 SSLv3 sessions 0 0
33 TLSv1 sessions 0 0
34 TLSv1.1 sessions 0 0
35 TLSv1.2 sessions 19849 45937019
36 TLSv1.3 sessions 0 0
37 DTLSv1 sessions 0 0
38 DTLSv1.2 sessions 0 0
39 New SSL sessions 19881 50722628
40 SSL session misses 0 0
41 SSL session hits 0 0
42
43 Back End
44 Sessions Rate (/s) Total
45 SSL sessions 0 137
46 SSLv3 sessions 0 0
47 TLSv1 sessions 0 0
48 TLSv1.1 sessions 0 0
49 TLSv1.2 sessions 0 137
50 DTLSv1 sessions 0 0
51 Session multiplex attempts 0 0
52 Session multiplex successes 0 0
53 Session multiplex failures 0 0
54
55 Encryption/Decryption statistics
56 Crypto Operation Rate (bytes/s) Total Bytes
57 Bytes encrypted 24338213 27705995030
58 Bytes decrypted 24664169 27942280990
59 Done

```

Values for the following counters are achieved by polling the hardware:

```

1 - SSL Crypto Utilization Asym (%) 88
2 - SSL Crypto Utilization Symm (%) 1

```

Values for the following counters are achieved using the software. The values might vary slightly from the hardware-pollled values.

- Crypto Utilization(%)
- Asymmetric Crypto Utilization 85.92
- RSA Crypto Utilization 11.43
  - RSA\_4K 0.00
  - RSA\_2K 11.43
  - RSA\_1K 0.00
  - RSA\_Others 0.00
- DH Crypto Utilization 74.50



- ECDH Crypto Utilization 0.00
  - ECDH\_P224 0.00
  - ECDH\_P256 0.00
  - ECDH\_P384 0.00
  - ECDH\_P521 0.00
- ECDSA Crypto Utilization 0.00
  - ECDSA\_P224 0.00
  - ECDSA\_P256 0.00
  - ECDSA\_P384 0.00
  - ECDSA\_P521 0.00
- Symmetric Crypto Utilization 0.72

For granular utilization per cipher, run the following command.

```
1 > stat ssl -detail
2
3 SSL Offloading
4
5 1. SSL cards present 4
6 2. SSL cards UP 4
7 SSL engine status 1
8 SSL sessions (Rate) 19862
9 SSL Crypto Utilization Asym (%) 88
10 SSL Crypto Utilization Symm (%) 1
11
12 Crypto Utilization(%)
13
14 Asymmetric Crypto Utilization 85.92
15
16 RSA Crypto Utilization 11.43
17 RSA_4K 0.00
18 RSA_2K 11.43
19 RSA_1K 0.00
20 RSA_Others 0.00
21
22 DH Crypto Utilization 74.50
23
24 ECDH Crypto Utilization 0.00
25 ECDH_P224 0.00
26 ECDH_P256 0.00
27 ECDH_P384 0.00
28 ECDH_P521 0.00
29
30 ECDSA Crypto Utilization 0.00
31 ECDSA_P224 0.00
32 ECDSA_P256 0.00
33 ECDSA_P384 0.00
34 ECDSA_P521 0.00
35
36 Symmetric Crypto Utilization 0.72
```

```
37 System
38 Transactions Rate (/s) Total
39 SSL transactions 19861 46039342
40 SSLv2 transactions 0 0
41 SSLv3 transactions 0 0
42 TLSv1 transactions 0 0
43 TLSv1.1 transactions 0 0
44 TLSv1.2 transactions 19861 46039342
45 TLSv1.3 transactions 0 0
46 DTLSv1 transactions 0 0
47 DTLSv1.2 transactions 0 0
48 Server in record 117437 277622634
49 Front End
50 Sessions Rate (/s) Total
51 SSL sessions 19862 46076050
52 SSLv2 sessions 0 0
53 SSLv3 sessions 0 0
54 TLSv1 sessions 0 0
55 TLSv1.1 sessions 0 0
56 TLSv1.2 sessions 19862 46076050
57 TLSv1.3 sessions 0 0
58 DTLSv1 sessions 0 0
59 DTLSv1.2 sessions 0 0
60 New SSL sessions 19801 50861234
61 SSL session misses 0 0
62 SSL session hits 0 0
63 Session Renegotiation
64 SSL session renegotiations 0 0
65 SSLv3 session renegotiations 0 0
66 TLSv1 session renegotiations 0 0
67 TLSv1.1 session renegotiations 0 0
68 TLSv1.2 session renegotiations 0 0
69 DTLSv1 session renegotiations 0 0
70 DTLSv1.2 session renegotiations 0 0
71 Key Exchanges
72 RSA 512-bit key exchanges 0 0
73 RSA 1024-bit key exchanges 0 2032658
74 RSA 2048-bit key exchanges 0 143
75 RSA 3072-bit key exchanges 0 7757028
76 RSA 4096-bit key exchanges 0 2238698
77 DH 512-bit key exchanges 0 0
78 DH 1024-bit key exchanges 0 0
79 DH 2048-bit key exchanges 19862 5477702
80 DH 4096-bit key exchanges 0 0
81 ECDHE 521 curve key exchanges 0 0
82 ECDHE 384 curve key exchanges 0 0
83 ECDHE 256 curve key exchanges 0 28569821
84 ECDHE 224 curve key exchanges 0 0
85 Total ECDHE key exchanges 0 28569821
86 Ciphers Negotiated
87 RC4 40-bit encryptions 0 0
88 RC4 56-bit encryptions 0 0
89 RC4 64-bit encryptions 0 0
```

```
90 RC4 128-bit encryptions 0 0
91 DES 40-bit encryptions 0 0
92 DES 56-bit encryptions 0 0
93 3DES 168-bit encryptions 0 0
94 AES 128-bit encryptions 0 0
95 AES 256-bit encryptions 19862 17506229
96 RC2 40-bit encryptions 0 0
97 RC2 56-bit encryptions 0 0
98 RC2 128-bit encryptions 0 0
99 AES-GCM 128-bit encryptions 0 0
100 AES-GCM 256-bit encryptions 0 28569821
101 Null cipher encryptions 0 0
102 Hashes
103 MD5 hashes 0 0
104 SHA hashes 0 12028527
105 SHA256 hashes 19862 5477702
106 SHA384 hashes 0 0
107 Handshakes
108 SSLv2 SSL handshakes 0 0
109 SSLv3 SSL handshakes 0 0
110 TLSv1 SSL handshakes 0 0
111 TLSv1.1 SSL handshakes 0 0
112 TLSv1.2 SSL handshakes 19862 46076050
113 TLSv1.3 SSL handshakes 0 0
114 DTLSv1 SSL handshakes 0 0
115 DTLSv1.2 SSL handshakes 0 0
116 Client Authentications
117 SSLv2 client authentications 0 0
118 SSLv3 client authentications 0 0
119 TLSv1 client authentications 0 0
120 TLSv1.1 client authentications 0 0
121 TLSv1.2 client authentications 0 0
122 TLSv1.3 client authentications 0 0
123 DTLSv1 client authentications 0 0
124 DTLSv1.2 client authentications 0 0
125 Authentications
126 RSA authentications 19862 17506229
127 DH authentications 0 0
128 DSS (DSA) authentications 0 0
129 ECDSA authentications 0 28569821
130 Null authentications 0 0
131 Back End
132 Sessions Rate (/s) Total
133 SSL sessions 0 137
134 SSLv3 sessions 0 0
135 TLSv1 sessions 0 0
136 TLSv1.1 sessions 0 0
137 TLSv1.2 sessions 0 137
138 DTLSv1 sessions 0 0
139 Session multiplex attempts 0 0
140 Session multiplex successes 0 0
141 Session multiplex failures 0 0
142 Session Renegotiation
```

```
143 SSL session renegotiations 0 0
144 SSLv3 session renegotiations 0 0
145 TLSv1 session renegotiations 0 0
146 TLSv1.1 back-end session renegot 0 0
147 TLSv1.2 back-end session renegot 0 0
148 DTLSv1 session renegotiations 0 0
149 Key Exchanges
150 RSA 512-bit key exchanges 0 0
151 RSA 1024-bit key exchanges 0 0
152 RSA 2048-bit key exchanges 0 137
153 RSA 3072-bit key exchanges 0 0
154 RSA 4096-bit key exchanges 0 0
155 DH 512-bit key exchanges 0 0
156 DH 1024-bit key exchanges 0 0
157 DH 2048-bit key exchanges 0 0
158 DH 4096-bit key exchanges 0 0
159 ECDHE 521 curve key exchanges 0 0
160 ECDHE 384 curve key exchanges 0 0
161 ECDHE 256 curve key exchanges 0 0
162 ECDHE 224 curve key exchanges 0 0
163 Ciphers Negotiated
164 RC4 40-bit encryptions 0 0
165 RC4 56-bit encryptions 0 0
166 RC4 64-bit encryptions 0 0
167 RC4 128-bit encryptions 0 0
168 DES 40-bit encryptions 0 0
169 DES 56-bit encryptions 0 0
170 3DES 168-bit encryptions 0 0
171 AES 128-bit encryptions 0 0
172 AES 256-bit encryptions 0 137
173 RC2 40-bit encryptions 0 0
174 RC2 56-bit encryptions 0 0
175 RC2 128-bit encryptions 0 0
176 AES-GCM 128-bit encryptions 0 0
177 AES-GCM 256-bit encryptions 0 0
178 Null encryptions 0 0
179 Hashes
180 MD5 hashes 0 0
181 SHA hashes 0 137
182 SHA256 hashes 0 0
183 SHA384 hashes 0 0
184 Handshakes
185 SSLv3 handshakes 0 0
186 TLSv1 handshakes 0 0
187 TLSv1.1 handshakes 0 0
188 TLSv1.2 handshakes 0 137
189 DTLSv1 handshakes 0 0
190 Client Authentications
191 SSLv3 client authentications 0 0
192 TLSv1 client authentications 0 0
193 TLSv1.1 client authentications 0 0
194 TLSv1.2 client authentications 0 0
195 DTLSv1 client authentications 0 0
```

```
196 Authentications
197 RSA authentications 0 137
198 DH authentications 0 0
199 DSS authentications 0 0
200 ECDSA authentications 0 0
201 Null authentications 0 0
202 System Total
203 RSA key exchanges offloaded 0 0
204 RSA sign operations offloaded 0 0
205 DH key exchanges offloaded 19841 5481037
206 RC4 encryptions offloaded 0 0
207 DES encryptions offloaded 0 0
208 AES encryptions offloaded 0 0
209 AES-GCM 128-bit encryptions offl 0 0
210 AES-GCM 256-bit encryptions offl 0 0
211 Encryption/Decryption statistics
212 Crypto Operation Rate (bytes/s) Total Bytes
213 Bytes encrypted 12129801 27790903638
214 Bytes encrypted in hardware 12129801 27790903638
215 Bytes encrypted in software 0 0
216 Bytes encrypted on the front-end 5450907 13430410630
217 Bytes encrypted in hardware on t 5450907 13430410630
218 Bytes encrypted in software on t 0 0
219 Bytes encrypted on the back-end 6678894 14360493008
220 Bytes encrypted in hardware on t 6678894 14360493008
221 Bytes encrypted in software on t 0 0
222 Bytes decrypted 12449504 28029427518
223 Bytes decrypted in hardware 12449504 28029427518
224 Bytes decrypted in software 0 0
225 Bytes decrypted on the front-end 8190208 19876552670
226 Bytes decrypted in hardware on t 8190208 19876552670
227 Bytes decrypted in software on t 0 0
228 Bytes decrypted on the back-end 4259296 8152874848
229 Bytes decrypted in hardware on t 4259296 8152874848
230 Bytes decrypted in software on t 0 0
231 SSL
232 Rate (/s) Total
233 Total SPCB in use -87 84656
234 Active SSL sessions -30309 5615559
235 Current queue size -1 4153
236 CardQ
237 Rate (/s) Total
238 In Q count for current card -1 4153
239 In BulkQ count for current card 0 0
240 In KeyQ count for current card -1 4153
241 Done
```

#### Notes

- Admin partition is supported, but the utilization for all partitions is shown in the default partition. On non-default partitions, these values display as 0.

- In a cluster setup, the CLIP address displays the average utilization for all the nodes in the cluster. For node-specific utilization, run the command on the CLI of each node. This data might be incorrect for an SDX platform if the nodes of the cluster are hosted on the same hardware.
- For VPX instances on the SDX platform, the utilization of each VPX instance is displayed.

## SNMP OID and trap for SSL symmetric and asymmetric crypto utilization

### Note:

This feature is available in NetScaler release 14.1 build 17.x and later.

SNMP OIDs are used for monitoring and SNMP alarms are sent when the crypto utilization reaches the configured limit and when it returns to normal. From release 14.1 build 17.x, NetScaler can send traps for software-based symmetric and asymmetric crypto utilization when the configured thresholds are crossed. It also provides an SNMP OID to read these crypto utilization absolute values. Earlier, NetScaler only had CLIs to read these crypto utilization values.

## Configure SNMP alarms for crypto utilization using the CLI

At the command line, type:

```
1 > set snmp alarm SSL-ASYM-CRYPTO-UTILIZATION
2 -logging (ENABLED | DISABLED)
3 -severity <severity>
4 -state (ENABLED | DISABLED)
5 -thresholdValue <positive_integer> [-normalValue <
6 positive_integer>]
6 -time <secs>
7
8 > set snmp alarm SSL-SYM-CRYPTO-UTILIZATION
9 -logging (ENABLED | DISABLED)
10 -severity <severity>
11 -state (ENABLED | DISABLED)
12 -thresholdValue <positive_integer> [-normalValue <
13 positive_integer>]
13 -time <secs>
```

Example:

```
1 set snmp alarm SSL-ASYM-CRYPTO-UTILIZATION -thresholdValue 37 -
 normalValue 17
2
3 set snmp alarm SSL-SYM-CRYPTO-UTILIZATION -thresholdValue 25 -
 normalValue 15
```

### Configure SNMP alarms for crypto utilization using the GUI

1. Navigate to **System > SNMP > Alarms**.
2. Do one of the following:
  - To configure an asymmetric crypto utilization, search for SSL-ASYM-CRYPTO-UTILIZATION and click it.
  - To configure a symmetric crypto utilization, search for SSL-SYM-CRYPTO-UTILIZATION and click it.
3. In the **Configure SNMP Alarm** page, enter the values for the different parameters and click **OK**.

### Crypto utilization on NetScaler SDX

SNMP OID and trap implementation are based on software-based crypto utilization. The maximum crypto is fixed for MPX, and the software uses that to derive the values.

For SDX, each VPX can have a predefined number of crypto units allocated. The allocated crypto units are the minimum guaranteed resources for the VPX, but it can also use the free crypto units available at the SDX level. The software-based crypto utilization provided for VPX on SDX is at the SDX level.

Therefore, when thresholds are configured for symmetric or asymmetric SNMP alarms on SDX, admins must take into account the percentage of crypto units allocated for each VPX and derive a threshold to be configured for these alarms.

For example, if the total crypto units on SDX are 100 K and three VPX instances are provisioned on SDX. The crypto units allocated to VPX1, VPX2, and VPX3 are 50 K, 25 K, and 25 K respectively. The threshold is set at 80%.

|            | Actual utilization on VPX1 | Actual utilization on VPX2 | Actual utilization on VPX3 | Comments                                                                                                                                                                |
|------------|----------------------------|----------------------------|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Scenario 1 | 80%                        | 0%                         | 0%                         | When utilization hits 80% on VPX1, it generates a trap. Since there is no traffic to the other VPX, the trap from VPX1 indicates the actual utilization at SDX as well. |

|            | Actual utilization on VPX1 | Actual utilization on VPX2 | Actual utilization on VPX3 | Comments                                                             |
|------------|----------------------------|----------------------------|----------------------------|----------------------------------------------------------------------|
| Scenario 2 | 40%                        | 25%                        | 15%                        | None of the VPX generate a trap although overall utilization is 80%. |

**Problem:**

In scenario 2, the trap is not sent even though the overall utilization at the SDX level has crossed the threshold.

**Solution:**

Admins must manually intervene and derive the equivalent percentage based on the allocation. In scenario 2, calculate the corresponding percentage for each VPX by multiplying the % of crypto units allocated and the threshold % set.

|                                                                                      | VPX1 | VPX2 | VPX3 | Comments                                                                                                                                                                                                                                            |
|--------------------------------------------------------------------------------------|------|------|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Crypto units = 100k                                                                  | 50K  | 25K  | 25K  |                                                                                                                                                                                                                                                     |
| Derived threshold = % crypto units allocated * % threshold (Overall threshold = 80%) | 40%  | 20%  | 20%  | For example, VPX 1 has 50% of crypto units allocated. Therefore the derived threshold is 50% of the overall threshold. VPX2 and VPX3 each have 25% of the crypto units allocated. Therefore, the derived threshold is 25% of the overall threshold. |

An SNMP alarm will now be sent out when the threshold for VPX1 crosses 40% instead of when it crosses 80%. Even if the threshold for SDX might not have crossed the configured percentage, the alarm is an indication to the admin to monitor.



## Troubleshooting

September 12, 2023

If the SSL feature does not work as expected after configuration, you can use some common tools to access NetScaler resources and diagnose the problem.

### Resources for troubleshooting

For best results, use the following resources to troubleshoot an SSL issue on a NetScaler appliance:

- The relevant ns.log file
- The latest ns.conf file
- The message file
- The relevant [news log](#) file
- Trace files
- A copy of the certificate files, if possible
- A copy of the key file, if possible
- The error message, if any

In addition to these resources, you can use the Wireshark application customized for the NetScaler trace files to speed up troubleshooting.

### Troubleshooting SSL issues

To troubleshoot an SSL issue, continue as follows:

- Verify that the NetScaler appliance is licensed for SSL Offloading and load balancing.
- Verify that SSL Offloading and load balancing features are enabled on the appliance.
- Verify that the status of the SSL virtual server is not displayed as DOWN.
- Verify that the status of the service bound to the virtual server is not displayed as DOWN.
- Verify that a valid certificate is bound to the virtual server.
- Verify that the service is using an appropriate port, preferably port 443.

### Decrypting TLS1.3 traffic from packet trace

To troubleshoot protocols that run over TLS1.3, you must first decrypt the TLS1.3 traffic. To decrypt TLS 1.3 in Wireshark, the secrets must be exported in the [NSS key log](#) format. For more information about the key log format, see [NSS Key Log Format](#).

For information about how to capture a packet trace, see [Capturing SSL Session Keys During a Trace](#).

**Note:** NetScaler automatically logs each connection's secrets in the appropriate format for the TLS/SSL protocol version in use.

### **CRL refresh does not happen on the secondary node in an HA setup**

The refresh does not happen because the CRL server is accessible only to the primary node through a private network.

**Workaround:** Add a service on the primary node with the IP address of the CRL server. This service acts as a proxy for the CRL server. When the configuration is synchronized between the nodes, CRL refresh works for both primary and secondary nodes through the service configured on the primary node.

## **SSL FAQs**

June 11, 2024

### **Basic questions**

#### **HTTPS access to the GUI fails on a VPX instance. How do I gain access?**

A certificate-key pair is required for HTTPS access to the GUI. On a NetScaler appliance, a certificate-key pair is automatically bound to the internal services. On an MPX or SDX appliance, the default key size is 1024 bytes, and on a VPX instance, the default key size is 512 bytes. However, most browsers today do not accept a key that is less than 1024 bytes. As a result, HTTPS access to the VPX configuration utility is blocked.

Citrix recommends that you install a certificate-key pair of at least 1024 bytes and bind it to the internal service for HTTPS access to the configuration utility. Alternately, update the `ns-server-certificate` to 1024 bytes. You can use HTTP access to the configuration utility or the CLI to install the certificate.

#### **If I add a license to an MPX appliance, the certificate-key pair binding is lost. How do I resolve this problem?**

If a license is not present on an MPX appliance when it starts, and you add a license later and restart the appliance, you might lose the certificate binding. Reinstall the certificate and bind it to the internal service

Citrix recommends that you install an appropriate license before starting the appliance.

### **What are the various steps involved in setting up a secure channel for an SSL transaction?**

Setting up a secure channel for an SSL transaction involves the following steps:

1. The client sends an HTTPS request for a secure channel to the server.
2. After selecting the protocol and cipher, the server sends its certificate to the client.
3. The client checks the authenticity of the server certificate.
4. If any of the checks fail, the client displays the corresponding feedback.
5. If the checks pass or the client decides to continue even if a check fails, the client creates a temporary, disposable key. This key is called the *pre-master secret* and the client encrypts this key by using the public key of the server certificate.
6. The server, upon receiving the pre-master secret, decrypts it by using the server's private key and generates the session keys. The client also generates the session keys from the pre-master secret. Thus both client and server now have a common session key, which is used for encryption and decryption of application data.

### **I understand that SSL is a CPU-intensive process. What is the CPU cost associated with the SSL process?**

The following two stages are associated with the SSL process:

- The initial handshake and secure channel setup by using the public and private key technology.
- Bulk data encryption by using the symmetric key technology.

Both of the preceding stages can affect server performance, and they require intensive CPU processing for of the following reasons:

1. The initial handshake involves public-private key cryptography, which is very CPU intensive because of large key sizes (1024 bit, 2048 bit, 4096 bit).
2. Encryption/decryption of data is also computationally expensive, depending on the amount of data that must be encrypted or decrypted.

### **What are the various entities of an SSL configuration?**

An SSL configuration has the following entities:

- Server certificate

- Certificate Authority (CA) certificate
- Cipher suite that specifies the protocols for the following tasks:
  - Initial key exchange
  - Server and client authentication
  - Bulk encryption algorithm
  - Message authentication
- Client authentication
- CRL
- SSL Certificate Key Generation Tool that enables you to create the following files:
  - Certificate request
  - Self-signed certificate
  - RSA keys
  - DH parameters

**I want to use the SSL offloading feature of the NetScaler appliance. What are the various options for receiving an SSL certificate?**

You must receive an SSL certificate before you can configure the SSL setup on the NetScaler appliance. You can use any of the following methods to receive an SSL certificate:

- Request a certificate from an authorized certificate authority (CA).
- Use the existing server certificate.
- Create a certificate-key pair on the NetScaler appliance.

**Note:** This certificate is a test certificate signed by the test Root-CA generated by the NetScaler appliance. Test certificates signed by the test Root-CA are not accepted by browsers. The browser throws a warning message stating that the server’s certificate cannot be authenticated.

- For anything other than test purposes, you must provide a valid CA certificate and CA key to sign the server certificate.

**What are the minimum requirements for an SSL setup?**

The minimum requirements for configuring an SSL setup are as follows:

- Obtain the certificates and keys.
- Create a load balancing SSL virtual server.
- Bind HTTP or SSL services to the SSL virtual server.
- Bind a certificate-key pair to the SSL virtual server.

## What are the limits for the various components of SSL?

SSL components have the following limits:

- Bit size of SSL certificates: 4096.
- Number of SSL certificates: Depends on the available memory on the appliance.
- Maximum linked intermediate CA SSL certificates: 9 per chain.
- CRL revocations: Depends on the available memory on the appliance.

## What are the various steps involved in the end-to-end data encryption on a NetScaler appliance?

The steps involved in the server-side encryption process on a NetScaler appliance are as follows:

1. The client connects to the SSL VIP configured on the NetScaler appliance at the secure site.
2. After receiving the secure request, the appliance decrypts the request and applies layer 4–7 content switching techniques and load balancing policies. Then, it selects the best available back-end web server for the request.
3. The NetScaler appliance creates an SSL session with the selected server.
4. After establishing the SSL session, the appliance encrypts the client request and sends it to the Web server by using the secure SSL session.
5. When the appliance receives the encrypted response from the server, it decrypts and re-encrypts the data. Then, it sends the data to the client by using the client side SSL session.

The multiplexing technique of the NetScaler appliance enables the appliance to reuse SSL sessions that have been established with the Web servers. Therefore, the appliance avoids the CPU intensive key exchange, known as *full handshake*. This process reduces the overall number of SSL sessions on the server and maintains end-to-end security.

## Certificates and Keys

### Can I place the certificate and key files at any location? Is there any recommended location to store these files?

You can store the certificate and key files on the NetScaler appliance or a local computer. However, Citrix recommends that you store the certificate and key files in the `/nsconfig/ssl` directory of the NetScaler appliance. The `/etc` directory exists in the flash memory of the NetScaler appliance. This action provides portability and facilitates backup and restoration of the certificate files on the appliance.

**Note:** Make sure that the certificate and the key files are stored in the same directory.

### **What is the maximum size of the certificate key supported on the NetScaler appliance?**

A NetScaler appliance running a software release earlier than release 9.0 supports a maximum certificate key size of 2048 bits. Release 9.0 and later support a maximum certificate key size of 4096 bits. This limit is applicable to RSA certificates.

An MPX appliance supports certificates from 512 bits up to the following sizes:

- 4096-bit server certificate on the virtual server
- 4096-bit client certificate on the service
- 4096-bit CA certificate (includes intermediate and root certificates)
- 4096-bit certificate on the back end server
- 4096-bit client certificate (if client authentication is enabled on the virtual server)

A virtual appliance supports certificates from 512 bits up to the following sizes:

- 4096-bit server certificate on the virtual server
- 4096-bit client certificate on the service
- 4096-bit CA certificate (includes intermediate and root certificates)
- 4096-bit certificate on the back end server
- 2048-bit client certificate (if client authentication is enabled on the virtual server)

### **What is the maximum size of the DH parameter supported on the NetScaler appliance?**

The NetScaler appliance supports a DH parameter of maximum 2048. Starting from release 14.1-25.x, maximum limit is increased to 4096 bits.

**Note:**

For Cavium platforms, the maximum limit is 2048 bits.

### **What is the maximum certificate-chain length, that is, the maximum number of certificates in a chain, supported on a NetScaler appliance?**

A NetScaler appliance can send a maximum of 10 certificates in a chain when sending a server certificate message. A chain of the maximum length includes the server certificate and nine intermediate CA certificates.

### **What are the various certificate and key formats supported on the NetScaler appliance?**

The NetScaler appliance supports the following certificate and key formats:

- Privacy Enhanced Mail (PEM)
- Distinguished Encoding Rule (DER)

### **Is there a limit for the number of certificates and keys that I can install on the NetScaler appliance?**

No. The number of certificates and keys that can be installed is limited only by the available memory on the NetScaler appliance.

### **I have saved the certificate and key files on the local computer. I want to transfer these files to the NetScaler appliance by using the FTP protocol. Is there any preferred mode for transferring these files to the NetScaler appliance?**

Yes. If using the FTP protocol, you must use binary mode to transfer the certificate and key files to the NetScaler appliance.

**Note:** By default, FTP is disabled. Citrix recommends using the SCP protocol for transferring certificate and key files. The configuration utility implicitly uses SCP to connect to the appliance.

### **What is the default directory path for the certificate and key?**

The default directory path for the certificate and key is `/nsconfig/ssl`.

### **When adding a certificate and key pair, what happens if I do not specify an absolute path to the certificate and key files?**

When adding a certificate-key pair, specify an absolute path to the certificate and key files. If you do not specify, the ADC appliance searches the default directory for these files and attempts to load them to the kernel. The default directory is `/nsconfig/ssl`. For example, if the `cert1024.pem` and `rsa1024.pem` files are available in the `/nsconfig/ssl` directory of the appliance, both of the following commands are successful:

```
1 add ssl certKey cert1 -cert cert1204.pem -key rsa1024.pem
```

```
1 add ssl certKey cert1 -cert /nsconfig/ssl/cert1204.pem -key /nsconfig/ssl/rsa1024.pem
```

**I have configured a high availability setup. I want to implement the SSL feature on the setup. How must I handle the certificate and key files in a high availability setup?**

In a high availability setup, you must store the certificate and key files on both the primary and the secondary NetScaler appliance. The directory path for the certificate and key files must be the same on both appliances before you add an SSL certificate-key pair on the primary appliance.

**nCipher nShield® HSM****When integrating with nCipher nShield® HSM, do we have to keep in mind any specific configuration when adding the NetScaler appliance to HA?**

Configure the same nCipher devices on both the nodes in HA. nCipher configuration commands don't synchronize in HA. For information about the prerequisites for nCipher nShield® HSM, see [Prerequisites](#).

**Do we have to individually integrate both the appliances with nCipher nShield® HSM and RFS? Do we need to complete this action before or after the HA setup?**

You can complete the integration before or after the HA setup. If the integration is done after the HA setup, the keys imported on the primary node before configuring the secondary node are not synced to the secondary node. Therefore, Citrix recommends nCipher integration before the HA setup.

**Do we need to import the key into both the primary and secondary NetScaler appliances, or are the keys synchronized from the primary node to the secondary node?**

If nCipher is integrated on both devices before forming the HA, the keys are automatically synchronized from RFS in the process of integration.

**Given that the HSM is not on the NetScaler appliance, but on nCipher, what happens to the keys and certificates when a node fails and is replaced?**

If a node fails, you can synchronize the keys and certificates to the new node, by integrating nCipher on the new node. Then, run the following commands:

```
1 sync ha files ssl
2 force ha sync
```

The certificates are synchronized and added if the keys are synchronized in the process of integrating nCipher.



## Ciphers

### What is a NULL-Cipher?

Ciphers with no encryption are known as NULL-Ciphers. For example, NULL-MD5 is a NULL-Cipher.

### Are the NULL-Ciphers enabled by default for an SSL VIP or an SSL service?

No. NULL-Ciphers are not enabled by default for an SSL VIP or an SSL service.

### What is the procedure to remove NULL-Ciphers?

To remove the NULL-Ciphers from an SSL VIP, run the following command:

```
1 bind ssl cipher <SSL_VIP> REM NULL
```

To remove the NULL-Ciphers from an SSL Service, run the following command:

```
1 bind ssl cipher <SSL_Service> REM NULL -service
```

### What are the various cipher aliases supported on the NetScaler appliance?

To list the cipher aliases supported on the appliance, at the command prompt, type:

```
1 sh cipher
```

### What is the command to display all the predefined ciphers of the NetScaler appliance?

To display all the predefined ciphers of the NetScaler appliance, at the CLI, type:

```
1 show ssl cipher
```

### What is the command to display the details of an individual cipher of the NetScaler appliance?

To display the details of an individual cipher of the NetScaler appliance, at the CLI, type:

```
1 show ssl cipher <Cipher_Name/Cipher_Alias_Name/Cipher_Group_Name>
```

### Example:

```
1 show cipher SSL3-RC4-SHA
2 1) Cipher Name: SSL3-RC4-SHA
3 Description: SSLv3 Kx=RSA Au=RSA Enc=RC4(128)
4 Mac=SHA1
5 Done
```

### **What is the significance of adding the predefined ciphers of the NetScaler appliance?**

Adding the predefined ciphers of the NetScaler appliance causes the NULL-Ciphers to get added to an SSL VIP or an SSL service.

### **Is it possible to change the cipher's order without unbinding them from a cipher group on a NetScaler appliance?**

Yes. It is possible to change the cipher's order without unbinding the ciphers from a custom cipher group. However, you cannot change the priority in inbuilt cipher groups. To change the priority of a cipher bound to an SSL entity, first unbind the cipher from the virtual server, service, or service group.

**Note:** If the cipher group bound to an SSL entity is empty, the SSL handshake fails because there is no negotiated cipher. The cipher group must contain at least one cipher.

### **Is ECDSA supported on the NetScaler appliance?**

ECDSA is supported on the following NetScaler platforms. For details of supported builds, see Table 1 and Table 2 in [Ciphers available on the NetScaler appliances](#).

- NetScaler MPX and SDX appliances with N3 chips
- NetScaler MPX 5900/8900/15000/26000
- NetScaler SDX 8900/15000
- NetScaler VPX appliances

### **Does the NetScaler VPX appliance support AES-GCM/SHA2 ciphers on the front-end?**

Yes, AES-GCM/SHA2 ciphers are supported on the NetScaler VPX appliance. For details about the supported builds, see [Ciphers available on the NetScaler appliances](#).

## Certificates

### Is the distinguished name in a client certificate available for the length of the user session?

Yes. You can access the distinguished name of the client certificate in subsequent requests during the length of the user session. That is, even after the SSL handshake is complete and the certificate is not sent again by the browser. Use a variable and an assignment as detailed in the following sample configuration:

#### Example:

```
1 add ns variable v2 -type "text(100)"
2
3 add ns assignment a1 -variable "$v2" -set "CLIENT.SSL.CLIENT_CERT
 .SUBJECT.TYPECAST_NVLIST_T('=', '/').VALUE("CN")"
4
5 add rewrite action act1 insert_http_header subject "$v2" // example:
 to insert the distinguished name in the header
6
7 add rewrite policy pol1 true a1
8
9 add rewrite policy pol2 true act1
10
11 bind rewrite global pol1 1 next -type RES_DEFAULT
12
13 bind rewrite global pol2 2 next -type RES_DEFAULT
14
15 set rewrite param -undefAction RESET
```

### Why do I need to bind the server certificate?

Binding the server certificates is the basic requirement for enabling the SSL configuration to process SSL transactions.

To bind the server certificate to an SSL VIP, at the CLI, type:

```
1 bind ssl vservice <vServerName> -certkeyName <cert_name>
```

To bind the server certificate to an SSL service, at the CLI, type:

```
1 bind ssl service <serviceName> -certkeyName <cert_name>
```

### How many certificates can I bind to an SSL VIP or an SSL service?

On a NetScaler VPX, MPX/SDX (N3), and MPX/SDX 14000 FIPS appliance, you can bind two certificates to an SSL virtual server or an SSL service if SNI is disabled. The certificates must be one each of type RSA and ECDSA. If SNI is enabled, you can bind multiple server certificates of type RSA or ECDSA. On

a NetScaler MPX (N2) or MPX 9700 FIPS appliance, if SNI is disabled, you can bind only one certificate of type RSA. If SNI is enabled, you can bind multiple server certificates of type RSA only.

### **What happens if I unbind or overwrite a server certificate?**

When you unbind or overwrite a server certificate, all the connections and SSL sessions created by using the existing certificate are terminated. When you overwrite an existing certificate, the following message appears:

```
1 ERROR:
2
3 Warning: Current certificate replaces the previous binding.
```

### **How do I install an intermediate certificate on a NetScaler appliance and link to a server certificate?**

See the article at <http://support.citrix.com/article/ctx114146> for information about installing an intermediate certificate.

### **Why am I getting a “resource already exists” error when I try to install a certificate on the NetScaler?**

See the article at <http://support.citrix.com/article/CTX117284> for instructions for resolving the “resource already exists” error.

### **I want to create a server certificate on a NetScaler appliance to test and evaluate the product. What is the procedure to create a server certificate?**

Perform the following procedure to create a test certificate.

**Note:** A certificate created with this procedure cannot be used to authenticate all the users and browsers. After using the certificate for testing, you must obtain a server certificate signed by an authorized Root certificate authority.

To create a self-signed server certificate:

1. To create a Root CA certificate, at the CLI, type:

```
1 create ssl rsakey /nsconfig/ssl/test-ca.key 1024
2
3 create ssl certreq /nsconfig/ssl/test-ca.csr -keyfile /nsconfig/
 ssl/test-ca.key
4
```

```
5 Enter the required information when prompted, and then type the
 following command:
6
7 create ssl cert /nsconfig/ssl/test-ca.cer /nsconfig/ssl/test-ca.
 csr ROOT_CERT -keyfile /nsconfig/ssl/test-ca.key
```

2. Perform the following procedure to create a server certificate and sign it with the root CA certificate that you just created

- a) To create the request and the key, at the CLI, type:

```
1 create ssl rsakey /nsconfig/ssl/test-server.key 1024
2
3 create ssl certreq /nsconfig/ssl/test-server.csr -keyfile
 /nsconfig/ssl/test-server.key
```

- b) Enter the required information when prompted.

- c) To create a serial-number file, at the CLI, type:

```
1 shell
2 # echo '01' >
3 /nsconfig/ssl/serial.txt
4 # exit
```

- d) To create a server certificate signed by the root CA certificate created in step 1, at the CLI, type:

```
1 create ssl cert /nsconfig/ssl/test-server.cer /nsconfig/ssl/
 test-server.csr SRVR_CERT -CAcert /nsconfig/ssl/test-ca.cer
 -CAkey /nsconfig/ssl/test-ca.key -CAserial /nsconfig/ssl/
 serial.txt
```

- e) To create a NetScaler cert-key pair, which is the in-memory object that holds the server certificate information for SSL handshakes and bulk encryption, at the CLI, type:

```
1 add ssl certkey test-certkey -cert /nsconfig/ssl/test-server.
 cer -key /nsconfig/ssl/test-server.key
```

- f) To bind the cert-key pair to the SSL virtual server, at the CLI, type:

```
1 bind ssl vserver <vServerName> -certkeyName <cert_name>
```

**I have received a NetScaler appliance on which NetScaler software release 9.0 is installed. I have noticed an extra license file on the appliance. Is there any change in the licensing policy starting with NetScaler software release 9.0?**

Yes. Starting with NetScaler software release 9.0, the appliance might not have a single license file. The number of license files depends on the NetScaler software release edition. For example, if you

have installed the Advanced edition, you might need extra license files for the full functionality of the various features. However, if you have installed the Premium edition, the appliance has only one license file.

### **How do I export the certificate from the Internet Information Service (IIS)?**

There are many ways, but by using the following method the appropriate certificate and private key for the website are exported. This procedure must be performed on the actual IIS server.

1. Open the Internet Information Services (IIS) Manager administration tool.
2. Expand the websites node and locate the SSL-enabled website that you want to serve through the NetScaler appliance.
3. Right-click this website and click Properties.
4. Click the Directory Security tab and, in the Secure Communications section of the window, select the View Certificate box.
5. Click the Details tab, and then click Copy to File.
6. On the Welcome to the Certificate Export Wizard page, click Next.
7. Select Yes, export the private key, and click Next.

**Note:** The private key MUST be exported for SSL Offload to work on the NetScaler.

8. Make sure that the Personal Information Exchange -PKCS #12 radio button is selected, and select *only* the Include all certificates in the certification path if possible check box. Click Next.
9. Enter a password and click Next.
10. Enter a file name and location, and then click Next. Give the file an extension of .PFX.
11. Click Finish.

### **How do I convert the PKCS#12 certificate and install it on the NetScaler?**

1. Move the exported .PFX certificate file to a location from where it can be copied to the NetScaler appliance. That is, to a machine that permits SSH access to the management interface of a NetScaler appliance. Copy the certificate to the appliance by using a secure copy utility such as SCP.
2. Access the BSD shell and convert the certificate (for example, cert.PFX) to .PEM format:

```
1 root@ns# openssl pkcs12 -in cert.PFX -out cert.PEM
```

3. To make sure that the converted certificate is in the correct x509 format, verify that the following command produces no error:

```
1 root@ns# openssl x509 -in cert.PEM -text
```

4. Verify that the certificate file contains a private key. Begin by issuing the following command:

```
1 root@ns# cat cert.PEM
2
3 Verify that the output file includes an RSA PRIVATE KEY section.
4
5 -----BEGIN RSA PRIVATE KEY-----
6 Mkm^s9KMs9023pz/s...
7 -----END RSA PRIVATE KEY-----
```

The following is another example of an RSA PRIVATE KEY section:

```
1 Bag Attributes
2 1.3.6.1.4.1.311.17.2: <No Values>
3 localKeyID: 01 00 00 00
4 Microsoft CSP Name: Microsoft RSA SChannel Cryptographic
5 Provider
6 friendlyName:
7 4b9cef4cc8c9b849ff5c662fd3e0ef7e_76267e3e-6183-4d45-886e-6
 e067297b38f
8
9 Key Attributes
10 X509v3 Key Usage: 10
11 -----BEGIN RSA PRIVATE KEY-----
12 Proc-Type: 4, ENCRYPTED
13 DEK-Info: DES-EDE3-CBC,43E7ACA5F4423968
14 pZJ2SfsSVqMbRRf6ug37Clua5gY0Wld4frPIxFXyJquUhr31dilW5ta3hbIaQ+
 Rg
15
16 ... (more random characters)
17 v8dMugeRplkaH2Uwt/mWBk4t71Yv7GeHmcmjafK8H8iW80ooP03D/ENV8X4U/
 tLh
18
19 5eU6ky3WYZ1BTy6thxxLlwAullynVXZEFlnLxq1oX+ZYl6djgjE3qg==
20 -----END RSA PRIVATE KEY-----
```

The following is a SERVER CERTIFICATE section:

```
1 Bag Attributes
2 localKeyID: 01 00 00 00
3 friendlyName: AG Certificate
4 subject=/C=AU/ST=NSW/L=Wanniassa/O=Dave Mother
5 Asiapacific/OU=Support/CN=davemother.food.lan
6 issuer=/DC=lan/DC=food/CN=hotdog
7 -----BEGIN CERTIFICATE-----
8 MIIFiTCCBHGgAwIBAgIKCGryDgAAAAAAHzANBgkqhkiG9w0BAQUFADA8MRMwEQYK
9
10 ... (more random characters) 5
 pLDWYVHhLkA1pSxvFjNJHRSIydWHc5ltGyKqIUcBezVaXyel94pNSUYx07NpPV
 /
```

```

11
12 MY2ovQyQZM8gGe3+lGFum0VHbv/y/gB9HhFesog=
13 -----END CERTIFICATE-----

```

The following is an INTERMEDIATE CA CERTIFICATE section:

```

1 Bag Attributes: <Empty Attributes>
2 subject=/DC=lan/DC=food/CN=hotdog
3 issuer=/DC=lan/DC=food/CN=hotdog
4 -----BEGIN CERTIFICATE-----
5 MIIESDCCAzCgAwIBAgIQah20fCRITY9LRXYMIRaKGjANBgkqhkiG9w0BAQUFADA8
6
7 ... (more random characters)
8 Nt0nksawDnbKo86rQcNnY5xUs7c7pj2zxj/I0sgNHUp5W6dDI9pQoqFFaDk
9 =
10 -----END CERTIFICATE-----

```

Further Intermediate CA certificates might follow, depending on the certification path of the exported certificate.

5. Open the .PEM file in a text editor
6. Locate the first line of the .PEM file and the first instance of the following line, and copy those two lines and all the lines between them:

```

1 -----END CERTIFICATE-----
2
3 Note: Make sure that last copied line is the first
4 -----END CERTIFICATE----- line in the .PEM file.

```

7. Paste the copied lines into a new file. Call the new file something intuitive, such as cert-key.pem. This certificate-key pair is for the server hosting the HTTPS service. This file must contain both the section labeled RSA PRIVATE KEY and the section labeled SERVER CERTIFICATE in the preceding example.

**Note:** The certificate-key pair file contains the private key and must be kept secure.

8. Locate any subsequent sections beginning with —BEGIN CERTIFICATE— and ending with —END CERTIFICATE—, and copy each such section to a separate new file.

These sections correspond to certificates of trusted CAs that have been included in the certification path. These sections must be copied and pasted into new individual files for these certificates. For example, the INTERMEDIATE CA CERTIFICATE section of the preceding example must be copied and pasted into a new file).

For multiple intermediate CA certificates in the original file, create files for each intermediate CA certificate in the order in which they appear in the file. Keep track (using appropriate file names)



of the order in which the certificates appear, as they must be linked together in the correct order in a later step.

9. Copy the certificate-key file (cert-key.pem) and any additional CA certificate files into the /nsconfig/ssl directory on the NetScaler appliance.
10. Exit the BSD shell and access the NetScaler prompt.
11. Follow the steps in “Install the certificate-key files on the appliance” to install the key/certificate once uploaded on the device.

### **How do I convert the PKCS#7 certificate and install it on the NetScaler appliance?**

You can use OpenSSL to convert a PKCS #7 Certificate to a format recognizable by the NetScaler appliance. The procedure is identical to the procedure for PKCS #12 certificates, except that you invoke OpenSSL with different parameters. The steps for converting PKCS #7 certificates are as follows:

1. Copy the certificate to the appliance by using a secure copy utility, such as SCP.
2. Convert the certificate (for example, cert.P7B) to PEM format:

```
1 openssl pkcs7 -inform DER -in cert.p7b -print_certs -text -out cert.pem
```

3. Follow steps 3 through 7 as described in the answer for PKCS #12 certificates.  
Note: Before loading the converted PKCS #7 certificate to the appliance, verify that it contains a private key, exactly as described in step 3 for the PKCS #12 procedure. PKCS #7 certificates, particularly the certificates exported from IIS, do not typically contain a private key.

### **When I bind a cipher to a virtual server or service by using the bind cipher command, I see the error message “Command deprecated.”?**

The command for binding a cipher to a virtual server or service has changed.

Use the `bind ssl vserver <vservername> -ciphername <ciphername>` command to bind an SSL cipher to an SSL virtual server.

Use the `bind ssl service <serviceName> -ciphername <ciphername>` command to bind an SSL cipher to an SSL service.

**Note:** New ciphers and cipher groups are added to the existing list and not replaced.

### **Why can't I create a cipher group and bind ciphers to it by using the add cipher command?**

The add cipher command functionality has changed in release 10. The command only creates a cipher group. To add ciphers to the group, use the bind cipher command.

## OpenSSL

### How do I use OpenSSL to convert certificates between PEM and DER?

To use OpenSSL, you must have a working installation of the OpenSSL software and be able to run OpenSSL from the command line.

x509 certificates and RSA keys can be stored in several different formats.

Two common formats are:

- DER (a binary format used primarily by Java and Macintosh platforms)
- PEM (a base64 representation of DER with header and footer information, which is used primarily by UNIX and Linux platforms).

A key and the corresponding certificate, in addition to the root and any intermediate certificates, can also be stored in a single PKCS#12 (.P12, .PFX) file.

#### Procedure

Use the **OpenSSL** command to convert between formats as follows:

1. To convert a certificate from PEM to DER:

```
1 x509 -in input.crt -inform PEM -out output.crt -outform DER
```

2. To convert a certificate from DER to PEM:

```
1 x509 -in input.crt -inform DER -out output.crt -outform PEM
```

3. To convert a key from PEM to DER:

```
1 rsa -in input.key -inform PEM -out output.key -outform DER
```

4. To convert a key from DER to PEM:

```
1 rsa -in input.key -inform DER -out output.key -outform PEM
```

**Note:** If the key you are importing is encrypted with a supported symmetric cipher, you are prompted to enter the pass phrase.

**Note:** To convert a key to or from the obsolete NET (Netscape server) format, substitute NET for PEM or DER as appropriate. The stored key is encrypted in a weak unsalted RC4 symmetric cipher, so a pass phrase is requested. A blank pass phrase is acceptable.

## System Limits

### What are the important numbers to remember?

1. Create Certificate Request:

- Request File Name: Maximum 63 characters
- Key File Name: Maximum 63 characters
- PEM Passphrase (For Encrypted Key): Maximum 31 characters
- Common Name: Maximum 63 characters
- City: Maximum 127 characters
- Organization Name: Maximum 63 characters
- State/Province Name: Maximum 63 characters
- Email Address: Maximum 255 Characters
- Organization Unit: Maximum 63 characters
- Challenge Password: Maximum 20 characters
- Company Name: Maximum 127 characters

2. Create Certificate:

- Certificate File Name: Maximum 63 characters
- Certificate Request File Name: Maximum 63 characters
- Key File Name: Maximum 63 characters
- PEM Passphrase: Maximum 31 characters
- Validity Period: Maximum 3650 days
- CA Certificate File Name: Maximum 63 characters
- CA Key File Name: Maximum 63 characters
- PEM Passphrase: Maximum 31 characters
- CA Serial Number File: Maximum 63 characters

3. Create and Install a Server Test Certificate:

- Certificate File Name: Maximum 31 characters
- Fully Qualified Domain Name: Maximum 63 characters

4. Create Diffie-Hellman (DH) key:

- DH File Name (with path): Maximum 63 characters
- DH Parameter Size: Maximum 2048 bits (starting from release 14.1-25.x, maximum limit is increased to 4096)

**Note:**

For Cavium platforms, the maximum limit is 2048 bits.

Starting from release 14.1-25.x, you can create DH keys up to 4096 bits on the some of the Intel Coletto and Intel Lewisburg-based platforms, and on the platforms where SSL processing is performed only in the software. Earlier the size was restricted to 2048 bits.

To create a DH key of more than 2048 bits, use the [OpenSSL](#) command from the NetScaler shell prompt.

For more information on Intel Coletto and Intel Lewisburg-based platforms, see [Diffie-Hellman parameters generation and achieving PFS with DHE](#).

5. Import PKCS12 key:

- Output File Name: Maximum 63 characters
- PKCS12 File Name: Maximum 63 characters
- Import Password: Maximum 31 characters
- PEM Passphrase: Maximum 31 characters
- Verify PEM Passphrase: Maximum 31 characters

6. Export PKCS12

- PKCS12 File Name: Maximum 63 characters
- Certificate File Name: Maximum 63 characters
- Key File Name: Maximum 63 characters
- Export Password: Maximum 31 characters
- PEM Passphrase: Maximum 31 characters

7. CRL Management:

- CA Certificate File Name: Maximum 63 characters
- CA Key File Name: Maximum 63 characters
- CA Key File Password: Maximum 31 characters
- Index File Name: Maximum 63 characters
- Certificate File Name: Maximum 63 characters

8. Create RSA Key:

- Key File Name: Maximum 63 characters
- Key Size: Maximum 4096 bits
- PEM Passphrase: Maximum 31 characters
- Verify Passphrase: Maximum 31 characters

9. Change advanced SSL settings:

- Maximum CRL memory size: Maximum 1024 Mbytes

- Encryption trigger timeout (10 mS ticks): Maximum 200
- Encryption trigger packet count: Maximum 50
- OCSP cache size: Maximum 512 Mbytes

10. Install Certificate:

- Certificate-Key pair Name: Maximum 31 characters
- Certificate File Name: Maximum 63 characters
- Private Key File Name: Maximum 63 characters
- Password: Maximum 31 characters
- Notification Period: Maximum 100

11. Create Cipher Group:

- Cipher Group Name: Maximum 39 characters

12. Create CRL:

- CRL Name: Maximum 31 characters
- CRL File: Maximum 63 characters
- URL: Maximum 127 characters
- Base DN: Maximum 127 characters
- Bind DN: Maximum 127 characters
- Password: Maximum 31 characters
- Days: Maximum 31

13. Create SSL Policy:

- Name: Maximum 127 characters

14. Create SSL Action:

- Name: Maximum 127 characters

15. Create OCSP Responder:

- Name: Maximum 32 characters
- URL: Maximum 128 characters
- Batching Depth: Maximum 8
- Batching Delay: Maximum 10000
- Produced At Time Skew: Maximum 86400
- Request Time-out: Maximum 120000

16. Create Virtual Server:

- Name: Maximum 127 characters

- Redirect URL: Maximum 127 characters
- Client Time-out: Maximum 31536000 secs

17. Create Service:

- Name: Maximum 127 characters
- Idle Time-out (secs):  
Client: Maximum 31536000  
Server: Maximum 31536000

18. Create Service Group:

- Service Group Name: Maximum 127 characters
- Server ID: Maximum 4294967295
- Idle Time-out (secs):  
Client: Maximum value 31536000  
Server: Maximum 31536000

19. Create Monitor:

- Name: Maximum 31 characters

20. Create Server:

- Server Name: Maximum 127 characters
- Domain Name: Maximum 255 characters
- Resolve Retry: Maximum 20939 secs

## Content inspection

October 30, 2024

In recent times, there is an expansion of device types to display various multimedia content. The device types can be of mobile handsets to tablets, and to desktops. Intermediate infrastructure providers need to transform the original content from a web server to a format suitable for the device that asks for the content. The external devices inspect the content that transcodes and send it back to the client. Commonly used protocol to achieve this is ICAP. ICAP enables the NetScaler appliance to be put in various deployments. ICAP uses the content inspection technique that inspects data for malware and security issues.

#### Note

HTTP/2 is not compatible with content inspection. The applications using the HTTP/2 might not function properly if the traffic is sent through the content inspection.

### NetScaler SSL Orchestrator

NetScaler SSL Orchestrator supports SSL visibility, allowing inbound and outbound web data, including HTTP/s traffic, to be decrypted. This capability enables the implementation of policy-based service chaining, which facilitates the sequential routing of data through multiple types of inspection. Also, NetScaler SSL Orchestrator currently supports the following functionalities:

- Inline inspection is supported in Layer 2 (L2) mode, while mirror or tap inspection is available in both L2 and Layer 3 (L3) modes, along with ICAP integration. Inline inspection functionality enables the system to analyze data in real-time as it flows through, redirecting network traffic to inspection devices for a more thorough analysis. This ensures comprehensive security coverage.
- An Intrusion Prevention System (IPS) is a proactive security measure that examines data to identify and prevent malware and security threats from affecting the system.
- Intrusion Detection System (IDS) is a passive method that monitors and detects malware or malicious data within the system.

### ICAP for remote content inspection

May 2, 2023

The Internet Content Adaptation Protocol (ICAP) is a simple lightweight protocol for running the value-added transformation service on HTTP messages. In a typical scenario, an ICAP client forwards HTTP requests and responses to one or more ICAP servers for processing. The ICAP servers perform content transformation on the requests and send back responses with appropriate action to take on the request or response.

#### ICAP on a NetScaler appliance

In a NetScaler setup, the appliance acts as an ICAP client interoperating with third-party ICAP servers (such as antimalware and Data Loss Protection (DLP)). When the appliance receives an incoming web traffic, the appliance intercepts the traffic and uses a Content Inspection policy to evaluate if the HTTP request needs an ICAP processing. If yes, the appliance decrypts and sends the message as a plain text

to the ICAP servers. The ICAP servers run the content transformation service on the request message and send back a response to the appliance. The adapted messages can either be an HTTP request or an HTTP response. If the appliance interoperates with multiple ICAP servers, the appliance performs load balancing of ICAP servers. This scenario happens when one ICAP server is not sufficient to handle all the traffic load. Once the ICAP servers return a modified message, the appliance forwards the modified message to the back-end origin server.

The NetScaler appliance also provides a secured ICAP service if the incoming traffic is an HTTPS type. The appliance uses an SSL based TCP service to establish a secured connection between the appliance and ICAP servers.

### **How ICAP request modification (REQMOD) works**

In the request modification (REQMOD) mode, the NetScaler appliance forwards the HTTP request received from the client to the ICAP server. The ICAP server then performs one of the following:

1. Sends back a modified version of the request and the appliance in turn sends the modified request to the back-end origin server or it pipelines the modified request to another ICAP server.
2. Responds with a message indicating no adaptation is required.
3. Returns an error and the appliance in turn sends the error message back to the user.

### **How ICAP response modification (RESPMOD) works**

In the response modification (RESPMOD) mode, the NetScaler appliance sends an HTTP response to the ICAP server (the response sent by the appliance is typically the response sent by the origin server). The ICAP server then performs one of the following:

1. Sends a modified version of the response and the appliance in turn sends the response to the user or pipelines the response to another ICAP server.
2. Responds with a message indicating no adaptation is required.
3. Returns an error and the appliance in turn sends the error message to the user.

### **ICAP license**

The ICAP feature works on a NetScaler standalone or high availability setup with NetScaler Premium or Advanced license edition.

### **Configure ICAP for content transformation service**

To use ICAP for content transformation service, you must begin by enabling the Content inspection and load balancing features. Once you enable the features, you can complete the following tasks



## To enable content inspection

If you want the NetScaler appliance to act as an ICAP client, you must first enable the Content Inspection and load balancing features.

At the command prompt, type:

```
1 enable ns feature contentInspection LoadBalancing
```

## Add ICAP profile

ICAP configurations for a NetScaler appliance are specified in an entity called the ICAP profile. The profile has a collection of the ICAP settings. The settings include parameters to dynamically generate an ICAP request, receive the ICAP response, and log content inspection data.

To dynamically generate an ICAP request to the ICAP server, a new parameter, “insertHTTPRequest” is added to the ICAP profile. If this parameter is configured, the appliance takes the configured value as a policy expression and evaluates the expression and includes the result as an encapsulated HTTP request or response and then sent it to the ICAP server. Also, a new parameter “insertICAPHeaders” is configurable to dynamically evaluate and include the ICAP headers.

When the appliance sends an ICAP request and does not receive a response the ICAP server, the connection becomes unresponsive. It occurs until the ICAP server sends a response or a session gets freed. The behavior can be handled by configuring the ICAP response time-out option. You can set a request time-out parameter for action if there is delayed ICAP response. If the NetScaler appliance does not receive a response within the configured request time-out, the request timeout action is performed.

ReqTimeoutAction: Possible values are BYPASS, RESET, DROP.

BYPASS: This ignores the remote ICAP server’s response and sends the request/response to Client/Server.

RESET (default): Reset the client connection by closing it.

DROP: Drop the request without sending a response to the user

To evaluate an ICAP response, a new policy expression `ICAP.RES` is used in the content inspection callout return expression. This expression evaluates the ICAP response similar to the `HTTP.RES` expression in a `HTTP_CALLOUT`.

For example, when a NetScaler appliance receives an HTTP request for a service hosted behind the NetScaler virtual IP address, the appliance might have to check the client’s authentication with an external server and take an action.

At the command prompt, type:

```
add ns icapProfile <name> [-preview (ENABLED | DISABLED)][-previewLength
<positive_integer>] -uri <string> [-hostHeader <string>] [-userAgent
<string>] -Mode (REQMOD | RESPMOD)[-queryParams <string>] [-
connectionKeepAlive (ENABLED | DISABLED)][-allow204 (ENABLED
| DISABLED)] [-insertICAPHeaders <string>][-insertHTTPRequest
<string>] [-reqTimeout <positive_integer>][-reqTimeoutAction <
reqTimeoutAction>] [-logAction <string>]
```

**Example:**

```
add icaprofile reqmod-profile -mode RESPMOD -uri "/req_scan" -hostHeader
"Webroot.req sca" -useragent "NS_SWG-Proxy"

add ns icapProfile icap_prof1 -uri "/example"-Mode REQMOD -reqtimeout
4 -reqtimeoutaction BYPASS

> add icapProfile reqmode-profile -uri '/example'-mode REQMOD -
insertHTTPRequest q{ HTTP.REQ.METHOD + ""+ HTTP.REQ.URL + "HTTP/1.1\r
\n"+ "Host: "+ HTTP.REQ.HOSTNAME + "\r\n\r\n"}
```

**Log ICAP content inspection action** To dynamically generate content inspection log stream records or SYSLOG logs, you can use the ICAP.RES based policy expression on the ICAP response. This parameter is configurable in the ICAP profile to configure the policy expression to generate the dynamic log records.

At the command prompt, type:

```
add audit messageaction icap_log_expr INFORMATIONAL icap.res.full_header

set icapProfile reqmode-profile -logAction messageaction
```

**Add ICAP service as a TCP or SSL\_TCP service**

After you enable the Content Inspection feature, you must add an ICAP service for the ICAP servers that will be part of the load balancing setup. The service that you add provides the ICAP connection between the NetScaler appliance and load balancing virtual servers.

**Note:** As an administrator, you can add an ICAP service and directly configure the ICAP server IP address in the Content Inspection action.

At the command prompt, type the following:

```
1 add service <name> <IP> <serviceType> <port>
```

**Example:**

```
add service icapsv1 10.10.10.10 SSL_TCP 1345
```

```
add service icapsv2 10.10.10.11 SSL_TCP 1345
```

**Add a TCP or SSL\_TCP based load balancing virtual server**

After creating an ICAP service, you must create a virtual server to accept ICAP traffic and load balance the ICAP servers.

**Note:**

You can also use an SSL based TCP service over a secured channel. You use a SSL\_TCP service and bind to the Content Inspection action.

At the command prompt, type the following:

```
1 add lb vserver <name> <serviceType> <port>
```

**Example:**

```
1 add lb vserver vicap TCP 0.0.0.0.0 -persistenceType NONE -cltTimeout
 9000
2
3 add lb vserver vicap SSL_TCP 0.0.0.0 0 -persistenceType NONE -
 cltTimeout 9000
```

**Bind ICAP service to the load balancing virtual server**

After you create an ICAP service and virtual server, you must bind the ICAP service to the virtual server.

At the command prompt, type the following:

```
1 bind lb vserver <name> <serviceName>
```

**Example:**

```
1 bind lb vserver vicap icapsv1
```

**Add content inspection action**

After you enable the Content Inspection feature, you must add an ICAP action for handling the ICAP request information. The ICAP profile and services, or load balancing virtual server that are created

are bound to the ICAP action. If the ICAP server is down, you can configure the `ifserverdown` parameter for the appliance to perform any one of the following actions.

CONTINUE: If the User wants to bypass the content inspection when the remote server is down, you can choose the “CONTINUE” action, as default.

RESET (default): This action responds to the client by closing the connection with RST.

DROP: This action silently drops the packets without sending a response to the user.

At the command prompt, type the following:

```
1 add contentInspection action <name> -type ICAP -serverName <string> -
 icapProfileName <string>
2
3 add ContentInspection action <name> -type ICAP -serverip <ip> -
 serverport <port> -icapProfileName <string>
```

**Note:**

If you can configure the ICAP service instead of a load balancing virtual server, you can mention the service name in the `\<-serverip>` option. When adding the Content Inspection action, the TCP service is automatically created for the given IP address with port 1344 and it is used for ICAP communication.

**Example:**

```
1 add ContentInspection action ci_act_lb -type ICAP -serverName vicap -
 icapProfileName icap_reqmod
2
3 add ContentInspection action ci_act_svc -type ICAP -serverName icapsv1
 -icapProfileName icap_reqmod
4
5 add ContentInspection action ci_act_svc -type ICAP -serverip 1.1.1.1 -
 serverport 1344 -icapProfileName icap_reqmod
```

**Add content inspection policies**

After you create a Content Inspection action, you must create content inspection policies to evaluate requests for ICAP processing and audit logging. The policy is based on a rule which consists of one or more expressions. The rule is associated to the content inspection action that is associated if a request matches the rule.

At the command prompt, type the following:

```
1 add contentInspection policy <name> -rule <expression> -action <string>
```

**Example:**

---

```
1 add ContentInspection policy ci_pol_basic -rule true -action
 ci_act_svc
2
3 add ContentInspection policy ci_pol_HTTP -rule HTTP.REQ.URL.CONTAINS(
 "html") -action ci_act_svc
```

### **Bind content inspection policies to the content switching or load balancing virtual server**

To put an ICAP policy into effect, you must bind it globally or bind it to a Content Switching or load balancing virtual server, which front end the application. When you bind the policy, you must assign a priority to it. The priority determines the order in which the policies you define are evaluated.

**Note:**

The application virtual server must be of type - HTTP/SSL/CS-PROXY.

For information about configuring a load balancing setup for forwarding the traffic to the back-end origin server after content transformation, see [Load Balancing](#).

### **Configure secured ICAP service**

To establish a secured connection between the NetScaler appliance and the ICAP web servers, the appliance uses an SSL-based TCP service or load balancing virtual server bound to an ICAP action.

To establish a secured ICAP connection, complete the following tasks:

1. Add SSL-based TCP service.
2. Bind SSL-based TCP service to load balancing virtual server of type TCP or SSL\_TCP.
3. Bind SSL-based TCP service or load balancing virtual server to Content Inspection action.

### **Add SSL-based TCP service to load balancing virtual server**

To establish a secured connection between the NetScaler appliance and the ICAP web servers, the appliance uses an SSL-based TCP service or load balancing virtual server bound to an ICAP action.

To establish a secured ICAP connection, complete the following tasks:

1. Add SSL-based TCP service.
2. Bind SSL-based TCP service to load balancing virtual server of type TCP or SSL\_TCP.

Bind SSL-based TCP service or load balancing virtual server to Content Inspection action

### Add SSL-based TCP service to load balancing virtual server

After you enable the Content Inspection feature, you must add a secured ICAP service that will be part of the load balancing setup. The service that you add provides a secured ICAP connection between the NetScaler appliance and load balancing virtual servers.

At the command prompt, type the following:

```
1 add service <name> <IP> <serviceType> <port>
```

#### Example:

```
1 add service icapsv2 10.102.29.200 SSL_TCP 1344 -gslb NONE -maxclient
 0 -maxReq 0 -cip DISABLED -usip NO -useproxport YES -sp ON -
 cltTimeout 9000 -svrTimeout 9000 -CKA NO -TCPB NO -CMP NO
```

### Bind SSL-based TCP service to SSL\_TCP or TCP load balancing virtual server

After you create a secured ICAP service, you must bind the service to the load balancing virtual server. It is required if you are using a load balancing virtual server to load balance the ICAP servers.

At the command prompt, type the following:

```
1 bind lb vserver <name> <serviceName>
```

#### Example:

```
1 bind lb vserver vicap icapsv2
```

### Bind SSL-based TCP service or load balancing virtual server to the Content Inspection action

You add an ICAP action for handling the ICAP request information and also bind the SSL-based TCP service to the action.

At the command prompt, type the following:

```
1 add contentInspection action <name> -type ICAP -serverName <string> -
 icapProfileName <string>
```

#### Example:

```
1 add ContentInspection action ci_act_svc -type ICAP -serverName icapsv2
 -icapProfileName icap_reqmod
2
3 add ContentInspection action ci_act_svc -type ICAP -serverName vicap -
 icapProfileName icap_reqmod
```

### Configure ICAP protocol by using the GUI

1. Navigate to **Load Balancing > Services** and click **Add**.
2. In the **Services** page, enter the service details.
3. Navigate to **Load Balancing > Virtual Servers**. Add a load balancing virtual server of type HTTP/SSL. Or, you can select a virtual server and click **Edit**.
4. After entering the server basic details, click **Continue**.
5. In the **Advanced Settings** section, click **Policies**.
6. Go the **Policies** section and click the **Pencil** icon to configure the Content Inspection policy.
7. On the **Choose Policy** page, select **Content Inspection**. Click **Continue**.
8. In the **Policy Binding** section, click **+** to add a Content Inspection policy.
9. In the **Create ICAP Policy** page, enter a name for the policy.
10. In the **Action** field, click the “+” sign to add an ICAP action.
11. In the **Create ICAP Action** page, enter a name for the action.
12. Enter a name for the action.
13. In the **Server Name** field, enter the name of the TCP service already created.
14. In **ICAP Profile** field, click the “+” sign to add an ICAP profile.
15. In the **Create ICAP Profile** page, enter a profile name, URI, and MODE.
16. Click **Create**.
17. In the **Create ICAP Action** page, click **Create**.
18. In the **Create ICAP Policy** page, enter “true” in the **Expression Editor** and then click **Create**.
19. Click **Bind**.
20. When prompted to enable the Content Inspection feature, click **Yes**.
21. Click **Done**.

For information about the NetScaler GUI configuration for load balancing and forwarding the traffic to the back-end origin server after content transformation, see [Load Balancing](#).

### Configure secured ICAP protocol by using the GUI

1. Navigate to **Load Balancing > Services** and click **Add**.
2. In the **Services** page, enter the service details.
3. Navigate to **Load Balancing > Virtual Servers**. Add a virtual server of type HTTP/SSL. Or, you can select a virtual server and click **Edit**.
4. After entering the server basic details, click **Continue**.
5. In the **Advanced Settings** section, click **Policies**.
6. Go the **Policies** section and click the **Pencil** icon to configure the Content Inspection policy.
7. On the **Choose Policy** page, select **Content Inspection**. Click **Continue**.
8. In the **Policy Binding** section, click **+** to add a Content Inspection policy.
9. In the **Create ICAP Policy** page, enter a name for the policy.

10. In the **Action** field, click the “+” sign to add an ICAP action.
11. In the **Create ICAP Action** page, enter a name for the action.
12. Enter a name for the action.
13. In the **Server Name** field, enter the name of the TCP\_SSL service already created.
14. In **ICAP Profile** field, click the “+” sign to add an ICAP profile.
15. In the **Create ICAP Profile** page, enter a profile name, URI, and MODE.
16. Click **Create**.
17. In the **Create ICAP Action** page, click **Create**.
18. In the **Create ICAP Policy** page, enter “true” in the **Expression Editor** and then click **Create**.
19. Click **Bind**.
20. When prompted to enable the Content Inspection feature, click **Yes**.
21. Click **Done**.

## Audit log support for remote content inspection

If an incoming request or outgoing response is content inspected, the NetScaler appliance logs the ICAP details. The appliance stores the details as a log message in the ns.log file.

Each log message typically contains the following details:

```
1 <Source IP> <Destination IP> <Domain> <ICAP server IP><ICAP Mode> <
 Service URI> <ICAP response> <Policy action>
```

**Limitation:** Streaming mode of App Firewall is not supported with the content inspection feature.

### Example for content inspected request log message:

```
1 Apr 18 14:45:41 <local0.info> 10.106.97.104 04/18/2018:14:45:41 GMT 0-
PPE-0 : default CI ICAP_LOG 788 0 : Source 10.102.1.98:39048 -
Destination 10.106.97.89:8011 - Domain 10.106.97.89 - Content-Type
application/x-www-form-urlencoded - ICAP Server 10.106.97.99:1344 -
Mode REQMOD - Service /example - Response 204 - Action FORWARD
```

### Example for content inspected response log message:

```
1 Apr 18 12:34:08 <local0.info> 10.106.97.104 04/18/2018:12:34:08 GMT 0-
PPE-0 : default CI ICAP_LOG 71 0 : Source 10.106.97.105:18552 -
Destination 10.106.97.99:80 - Domain NA - Content-Type NA - ICAP
Server 10.106.97.99:1344 - Mode RESPMOD - Service /example -
Response 400 - Action Internal Error
```

## Inline device integration with NetScaler

October 16, 2023



Security devices such as Intrusion Prevention System (IPS) and Next Generation Firewall (NGFW) protect servers from network attacks. These devices are deployed in layer 2 inline mode and their primary function is to protect servers from network attacks and report security threats on the network.


To prevent vulnerable threats and provide advanced security protection, a NetScaler appliance is integrated with one or more inline devices. The inline devices can be any security device such as IPS, NGFW.

Following are some of the use cases that benefit in using the inline device integration with the NetScaler appliance:

- **Inspecting encrypted traffic.** Most IPS and NGFW appliances bypass encrypted traffic, thereby leaving servers vulnerable to attacks. A NetScaler appliance can decrypt traffic and send it to inline devices for inspection. It enhances the customer's network security.
- **Offloading inline devices from TLS/SSL processing.** TLS/SSL processing is expensive and the issue can result in high system CPU in IPS or NGFW appliances if they decrypt the traffic. As encrypted traffic is growing at a fast pace, these systems fail to decrypt and inspect encrypted traffic. NetScaler helps in offloading inline devices from TLS/SSL processing. It results in the inline device supporting a high volume of traffic inspection.
- **Loading balancing inline devices.** The NetScaler appliance load balances multiple inline devices when there is a high volume of traffic.
- **Smart selection of traffic.** Every packet flowing into the appliance might be content inspected, for example download of text files. User can configure the NetScaler appliance to select specific traffic (for example .exe files) for inspection and send the traffic to inline devices for processing the data

## How the NetScaler is integrated with inline devices

The following diagram shows how a NetScaler is integrated with inline security devices.

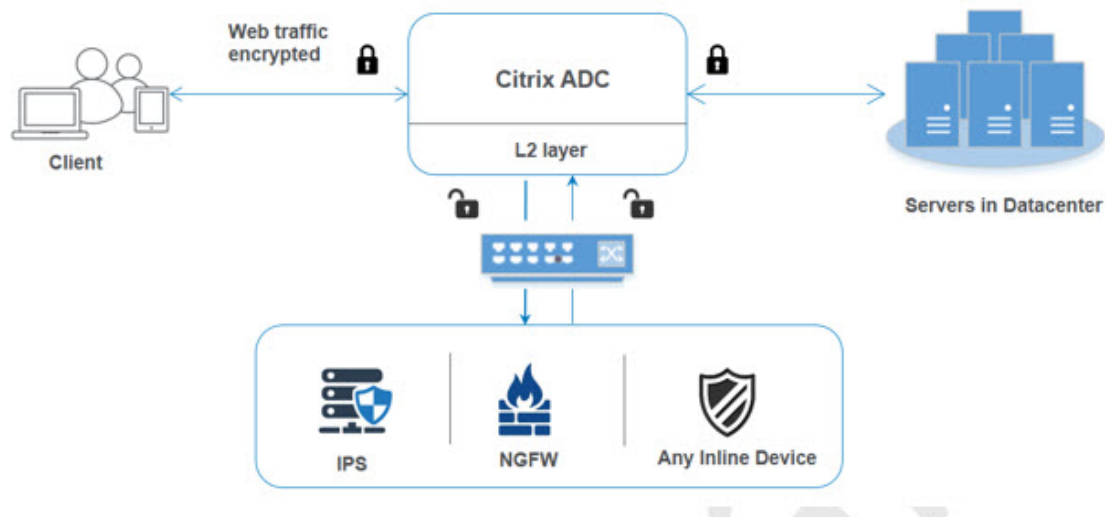

When you integrate inline devices with the NetScaler appliance, the component interacts as per the following:

1. A client sends a request to NetScaler appliance.
2. The appliance receives the request and sends it to an inline device based on policy evaluation.  
**Note:** If there are two or more inline devices, the appliance load balances the devices and sends the traffic.  
If the incoming traffic is an encrypted one, the appliance decrypts the data and sends it as a plain text to the inline device for content inspection.
3. The inline device inspects the data for threats and decides whether to drop, reset, or send the data back to the appliance.
4. If there are security threats, the device modifies the data and sends it to the appliance.
5. The NetScaler in turn re-encrypts the data and forwards the request to the back-end server.
6. The back-end server sends the response to the NetScaler appliance.
7. The appliance again decrypts the data and sends it to the inline device for inspection.
8. Appliance re-encrypts the data and sends the response to the client

## Software licensing

To deploy the inline device integration, your NetScaler appliance must be provisioned with one of the following licenses:

1. ADC Premium
2. ADC Advanced


3. Telco Advanced
4. Telco Premium
5. SWG license

## Configuring inline device integration

You can configure a NetScaler appliance with an inline device in three different ways. The configuration scenarios are as follows.

### Scenario 1 for using a single inline device

If you want to integrate a security device (IPS or NGFW) in inline mode, you must begin by first enabling the Content Inspection feature and enabling the NetScaler in MBF (MAC-based forwarding) in global mode. Once you have enabled the features, you must add the Content Inspection profile, add the Content Inspection action for inline devices to reset, block, or drop the traffic based on inspection. Then, add the Content Inspection policy for the appliance to decide what subset of traffic to send to the inline devices. Then, configure the load balancing virtual server with layer 2 connection enabled on the server. Finally, bind the content inspection policy to the load balancing virtual server.

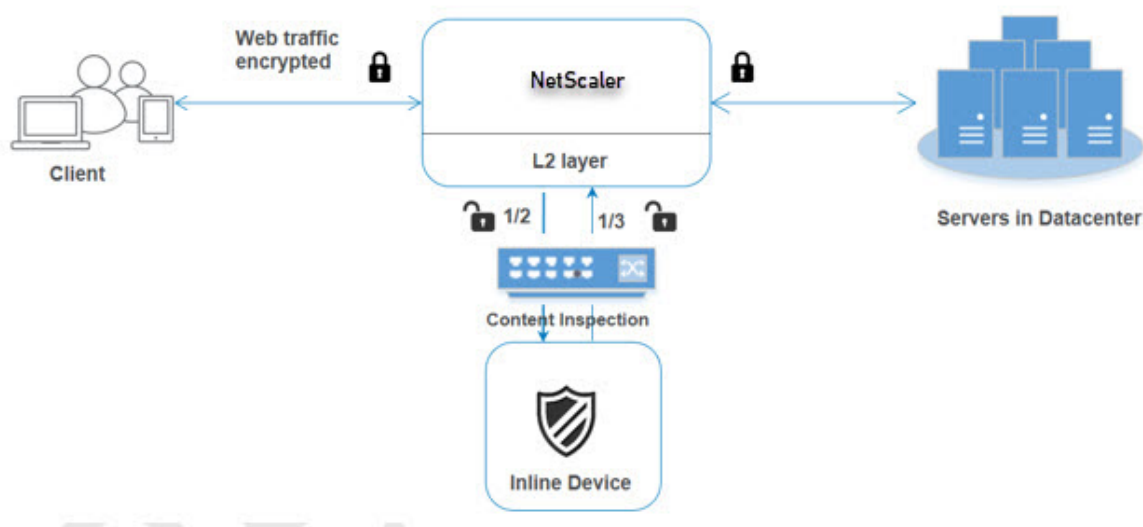

**Enable MBF (MAC-based forwarding) mode** If you want the NetScaler appliance to be integrated to inline devices such as IPS, or firewalls, you must enable this mode. For more information about MBF, see [Configure MAC-based Forwarding](#) topic.

At the command prompt, type:

```
enable ns mode mbf
```

**Enable Content Inspection** If you want the NetScaler appliance to decrypt and then send the content for inspection to the inline devices, you must enable the Content Inspection and load balancing features.

```
enable ns feature contentInspection LoadBalancing
```

**Add Layer 2 connection method** To handle response generated by inline devices, the appliance uses the VLAN channel as a layer 2 method (L2ConnMethod) of communication with inline devices.

At the command prompt, type:

```
set l4param -l2ConnMethod <l2ConnMethod>
```

**Example**

```
set l4param -l2ConnMethod VlanChannel
```

**Add Content Inspection profile for service** Inline device configuration for a NetScaler appliance can be specified in an entity called the Content Inspection profile. The profile has a collection of settings that explains how to integrate with an inline device.

At the command prompt, type:

```
add contentInspection profile <name> -type InlineInspection -egressInterface <interface_name> -ingressInterface <interface_name>[-egressVlan <positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile Inline_profile1 -type InlineInspection -ingressinterface "1/2" -egressInterface "1/3"
```

**Add IPS-TCP monitor** If you want to configure monitors, you add a user defined monitor.

**Note:** If you want to configure monitors, you must use a custom monitor. When adding a monitor, you must enable the transparent parameter.

At the command prompt, type:

```
add lb monitor <monitorName> <type> [-destIP <ip_addr|ipv6_addr>] [-destPort <port>] [-transparent (YES | NO)]
```

**Example:**

```
add lb monitor ips_tcp TCP -destIP 192.168.10.2 -destPort 80 -transparent YES
```

**Add a service** Add a service. Specify a dummy IP address that is not owned by any of the devices, including the inline devices. Set `use source IP address` (USIP) to YES. Set `useproxyport` to NO. By default, health monitoring is ON, bind the service to a health monitor, and also set the TRANSPARENT option in the monitor ON. At the command prompt, type:

```
add service <Service_name> <IP> TCP * - contentinspectionProfileName
<Name> -healthMonitor YES -usip ON -useproxyport OFF
```

**Example:**

```
add service ips_service 192.168.10.2 TCP * -healthMonitor YES -usip
YES -useproxyport NO -contentInspectionProfileName ipsprof
```

**Add a health monitor** By default the health monitor is turned on and you also have the option to disable it, if necessary. At the command prompt, type:

```
add lb monitor <name> TCP -destIP <ip address> -destPort 80 -transparent
<YES, NO>
```

**Example:**

```
add lb monitor ips_tcp TCP -destIP 192.168.10.2 -destPort 80 -transparent
YES
```

**Bind the service to the health monitor** After configuring the health monitor, you must bind the service to the health monitor. At the command prompt, type:

```
bind service <name> -monitorName <name>
```

**Example:**

```
bind service ips_svc -monitorName ips_tcp
```

**Add content inspection action for service** After you enable the Content Inspection feature and then after you add the inline profile and service, you must add the Content Inspection action for handling the request. Based on the content inspection action, the inline device can drop, reset, or block action after it has inspected the data.

If the Inline server or service is down, you can configure the `ifserverdown` parameter in the appliance to perform any one of the following actions.

CONTINUE: If the User wants to bypass the content inspection when the remote server is down, you can choose the “CONTINUE” action, as default.

RESET (default): This action responds to the client by closing the connection with RST.

DROP: This action silently drops the packets without sending a response to the user.

At the command prompt, type:

```
add contentInspection action <name> -type <type> (-serverName <string>
> [-ifserverdown <ifserverdown>] [-reqTimeout <positive_integer>] [-
reqTimeoutAction <reqTimeoutAction>]
```

```
add ContentInspection action <action_name> -type InlineINSPECTION -
serverName Service_name/Vserver_name>
```

**Example:**

```
add ContentInspection action <Inline_action> -type InlineSPECTION -
serverName Inline_service1
```

**Add content inspection policy for inspection** After you create a Content Inspection action, you must add Content Inspection policies to evaluate requests for inspection. The policy is based on a rule which consists of one or more expressions. The policy evaluates and selects the traffic for inspection based on the rule.

At the command prompt, type the following:

```
add contentInspection policy <policy_name> -rule <Rule> -action <
action_name>
```

**Example**

```
add contentInspection policy Inline_pol1 -rule true -action Inline_action
```

**Add content switching or load balancing virtual server of type HTTP/SSL** To receive the web traffic, you must add a load balancing virtual server. Also you must enable the layer2 connection on the virtual server.

At the command prompt, type:

```
add lb vserver <name> <vserver name> -l2Conn ON
```

**Example:**

```
add lb vserver HTTP_vserver HTTP 10.102.29.200 8080 -l2Conn ON
```

**Bind Content Inspection policy to content switching virtual server or load balancing virtual server of type HTTP/SSL** You bind the load balancing virtual server or content switching virtual server of type HTTP/SSL to the Content Inspection policy.

At the command prompt, type the following:

```
bind lb vserver <vserver name> -policyName < policy_name > -priority
< priority > -type <REQUEST>
```


**Example:**

```
bind lb vserver HTTP_vserver -policyName Inline_pol1 -priority 100 -
type REQUEST
```

**Scenario 2: Load balancing multiple inline devices using dedicated interfaces**

If you are using two or more inline devices, you must load balance the devices using different content inspection services in a dedicated VLAN setup. In this case, the NetScaler appliance load balances the devices on top of sending a subset of traffic to each device through a dedicated interface.

For basic configuration steps, refer to scenario 1.

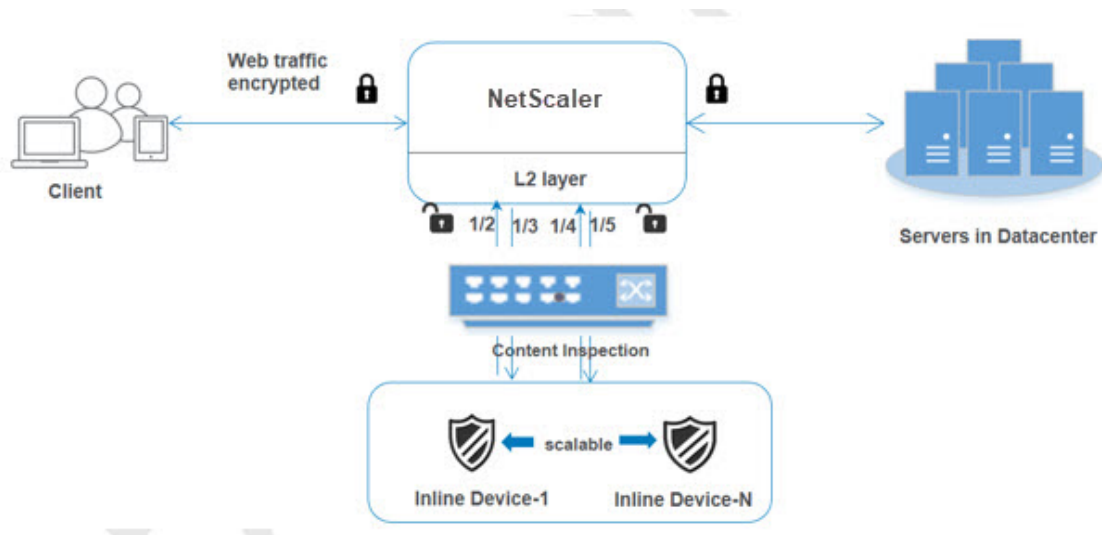

**Add content inspection profile1 for service1** Inline configurations for a NetScaler appliance can be specified in an entity called the Content Inspection profile. The profile has a collection of device settings. The Content Inspection profile1 is created for inline service 1 and the communication is through 1/2 and 1/3 dedicated interfaces.

At the command prompt, type:

```
add contentInspection profile <name> -type InlineInspection -egressInterface
<interface_name> -ingressInterface <interface_name>[-egressVlan <
positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile Inline_profile1 -type InlineInspection
-ingressinterface "1/2" -egressInterface "1/3"
```

**Add content inspection profile2 for service2** The Content Inspection profile2 is added for service2 and the inline device communicates with the appliance through 1/4 and 1/5 dedicated interfaces.

At the command prompt, type:

```
add contentInspection profile <name> -type InlineInspection -egressInterface <interface_name> -ingressInterface <interface_name>[-egressVlan <positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile Inline_profile2 -type InlineInspection -ingressinterface "1/4" -egressInterface "1/5"
```

**Add service 1 for inline device 1** After you enable the Content Inspection feature and add the inline profile, you must add an inline service 1 for inline device 1 to be part of the load balancing setup. The service that you add, provides all the inline configuration details.

At the command prompt, type:

```
add service <Service_name_1> <Pvt_IP1> TCP * -contentInspectionProfileName <Inline_Profile_1> -healthmonitor OFF -usip ON -useproxyport OFF
```

**Example:**

```
add service Inline_service1 10.102.29.200 TCP 80 -contentInspectionProfileName Inline_profile1 -healthmonitor OFF -usip ON -useproxyport OFF
```

**Add service 2 for inline device 2** After you enable the Content Inspection feature and add the inline profile, you must add an inline service 2 for inline device 2. The service that you add, provides all the inline configuration details.

At the command prompt, type:

```
add service <Service_name_1> <Pvt_IP1> TCP * -contentInspectionProfileName <Inline_Profile_2> -healthmonitor OFF -usip ON -useproxyport OFF
```

**Example:**

```
add service Inline_service1 10.29.20.205 TCP 80 -contentInspectionProfileName Inline_profile2 -healthmonitor OFF -usip ON -useproxyport OFF
```

**Add load balancing virtual server** After you have added the inline profile and the services, you must add a load balancing virtual server for load balancing the services.

At the command prompt, type:

```
add lb vserver <vserver_name> TCP <Pvt_IP3> <port>
```



**Example:**

```
add lb vserver lb-Inline_vserver TCP *
```

**Bind service 1 to the load balancing virtual server** After you add the load balancing virtual server, now bind the load balancing virtual server to the first service.

At the command prompt, type:

```
bind lb vserver <Vserver_name> <Service_name_1>
```

**Example:**

```
bind lb vserver lb-Inline_vserver Inline_service1
```

**Bind service 2 to the load balancing virtual server** After you add the load balancing virtual server, now bind the server to the second service.

At the command prompt, type:

```
bind lb vserver <Vserver_name> <Service_name_1>
```

**Example:**

```
bind lb vserver lb-Inline_vserver Inline_service2
```

**Add content inspection action for the service** After you enable the Content Inspection feature, you must add the Content Inspection action for handling the inline request information. Based on the action selected, the inline device drops, resets, or blocks after it has examined the given subset of traffic.

At the command prompt, type:

```
add contentInspection action <name> -type <type> (-serverName <string> [-ifserverdown <ifserverdown>] [-reqTimeout <positive_integer>] [-reqTimeoutAction <reqTimeoutAction>])
```

```
add ContentInspection action < action_name > -type InlineINSPECTION -serverName Service_name/Vserver_name>
```

**Example:**

```
add ContentInspection action Inline_action -type InlineINSPECTION -serverName lb-Inline_vserver
```

**Add content inspection policy for inspection** After you create a Content Inspection action, you must add the Content Inspection policy to evaluate requests for service. The policy is based on a rule which consists of one or more expressions. The rule is associated to the Content Inspection action that is associated if a request matches the rule.

At the command prompt, type the following:

```
add contentInspection policy <policy_name> -rule <Rule> -action <
action_name>
```

**Example:**

```
add contentInspection policy Inline_pol1 -rule true -action Inline_action
```

**Add content switching or load balancing virtual server of type HTTP/SSL** Add a content switching or load balancing virtual server to accept web traffic. Also you must enable the layer2 connection on the virtual server.

For more information about load balancing, see [How load balancing works](#) topic.

At the command prompt, type:

```
add lb vserver <name> <vserver name> -l2Conn ON
```

**Example:**

```
add lb vserver http_vserver HTTP 10.102.29.200 8080 -l2Conn ON
```

**Bind Content Inspection policy to load balancing virtual server of type HTTP/SSL** You must bind the content switching or load balancing virtual server of type HTTP/SSL to the Content Inspection policy.

At the command prompt, type the following:


```
bind lb vserver <vserver name> -policyName < policy_name > -priority
<> -type <L7InlineREQUEST | L4Inline-REQUEST>
```

**Example:**

```
bind lb vserver http_vserver -policyName Inline_pol1 -priority 100 -
type REQUEST
```

### **Scenario 3: Load balancing multiple inline devices using shared interfaces**

You can refer to this configuration, if you are using multiple inline devices and if you want to load balance the devices using different services in a shared VLAN interface. This configuration using shared VLAN interfaces is similar to use case 2. For basic configuration, refer to scenario 2.

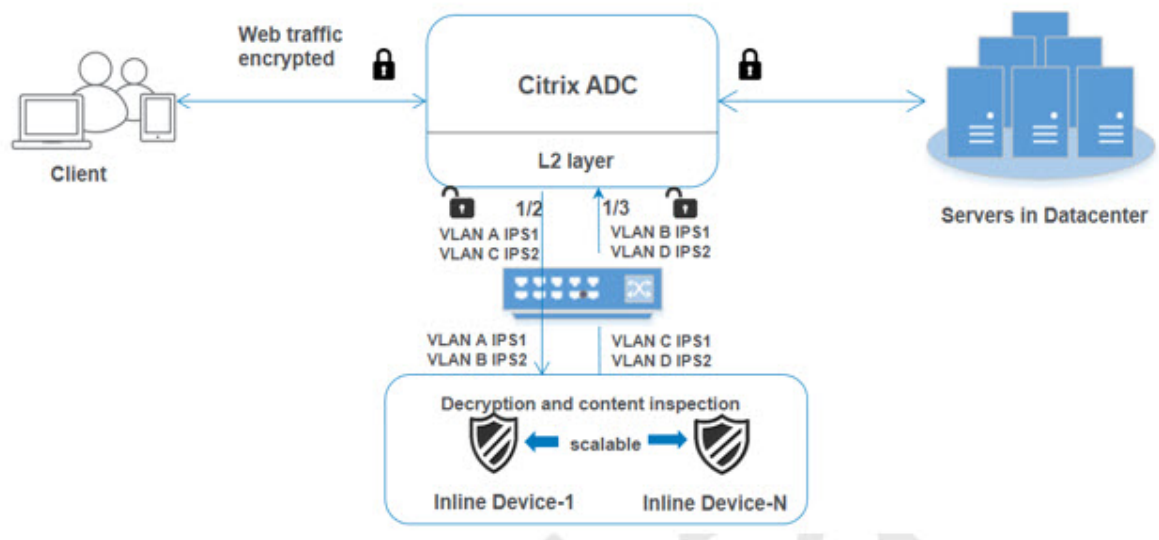

**Bind VLAN A with sharing option enabled** At the command prompt, type the following:

```
bind vlan <id> -ifnum <interface> -tagged
```

**Example:**

```
bind vlan 100 -ifnum 1/2 tagged
```

**Bind VLAN B with sharing option enabled** At the command prompt, type the following:

```
bind vlan <id> -ifnum <interface> -tagged
```

**Example:**

```
bind vlan 200 -ifnum 1/3 tagged
```

**Bind VLAN C with sharing option enabled** At the command prompt, type the following:

```
bind vlan <id> -ifnum <interface> -tagged
```

**Example:**

```
bind vlan 300 -ifnum 1/2 tagged
```

**Bind VLAN D with sharing option enabled** At the command prompt, type the following:

```
bind vlan <id> -ifnum <interface> -tagged
```

**Example:**

```
bind vlan 400 -ifnum 1/3 tagged
```

**Add content inspection profile1 for service1** Inline configurations for a NetScaler appliance can be specified in an entity called the Content Inspection profile. The profile has a collection of device settings. The Content Inspection profile is created for inline service 1 and the communication is through 1/2 and 1/3 dedicated interfaces.

At the command prompt, type:

```
add contentInspection profile <name> -type InlineInspection -egressInterface <interface_name> -ingressInterface <interface_name>[-egressVlan <positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile Inline_profile1 -type InlineInspection -ingressinterface "1/2" -egressInterface "1/3" -egressVlan 100 -ingressVlan 300
```

**Add content inspection profile2 for service2** The Content Inspection profile2 is added for service2 and the inline device communicates with the appliance through 1/2 and 1/3 dedicated interfaces.

At the command prompt, type:

```
add contentInspection profile <name> -type InlineInspection -egressInterface <interface_name> -ingressInterface <interface_name>[-egressVlan <positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile Inline_profile2 -type InlineInspection -ingressinterface "1/2" -egressInterface "1/3" -egressVlan 200 -ingressVlan 400
```

### **Configure inline service integration using the NetScaler GUI**

1. Log on to the NetScaler appliance and navigate to **Configuration** tab page.
2. Navigate to **System > Settings > Configure Modes**.
3. In the **Configure Modes** page, select **Mac Based Forwarding**.
4. Click **OK** and **Close**.
5. Navigate to **System > Settings > Configure Advanced Features**.
6. In the **Configure Advanced Feature** page, select **Content Inspection**.
7. Click **OK** and **Close**.
8. Navigate to **Security > Content Inspection > ContentInspection Profiles**.

9. In the **ContentInspection Profiles** page, click **Add**.
10. In the **Create ContentInspection Profiles** page, set the following parameters.
  - a) Profile Name. Name of the content inspection profile.
  - b) Type. Select the profile type as inlineInspection.
  - c) Egress Interface. Interface through which the appliance sends traffic from the NetScaler to the Inline device.
  - d) Ingress Interface. Interface through which the appliance receives traffic from the Inline device to the NetScaler.
  - e) Egress VLAN. Interface VLAN ID through which the traffic is sent to the Inline device.
  - f) Ingress VLAN. Interface VLAN ID through which the appliance receives traffic from Inline to NetScaler (if it is configured).
11. Click **Create** and **Close**.
12. Navigate to **Traffic Management > Load Balancing > Services** and click **Add**.
13. In the **Services** page, set the following parameters:
  - a) Service name. Name of the load balancing service.
  - b) IP address. Use a dummy IP address. Note: No device must own the IP address.
  - c) Protocol. Select protocol type as TCP.
  - d) Port. Enter \*
  - e) Health Monitoring. Clear this option and enable it only if you want to bind the service to the TCP type monitor. If you want to bind a monitor to service then the **TRANSPARENT** option in the monitor must be ON. See step 14 on how to add monitor and how to bind it to service.
  - f) Click **OK**.
14. In the **Settings** section, edit the following and click **OK**.
  - a) Use Proxy Port: Turn it OFF
  - b) Use Source IP Address: Turn it ON
15. In the **Advanced Settings** section, click **Profiles**.
16. Go to **Profiles** section, and add the inline content inspection profile and click **OK**.
17. Go to **Monitors** section, **Add Bindings > Select Monitor > Add**.
  - a) Name: Name of monitor
  - b) Type: Select TCP type
  - c) Destination IP, PORT: Destination IP address and Port.
  - d) Transparent: Turn ON

**Note:** Monitor packets must flow through the inline device to monitor inline device status.

18. Click **Create**.
19. Click **Done**.
20. Navigate to **Traffic Management > Load Balancing > Virtual Servers**. Add a virtual server of type HTTP or SSL.
21. After entering the server details, click **OK** and again **OK**.
22. In the **Traffic Settings** section of Load Balancing Virtual Server, turn Layer 2 Parameters ON.
23. In the **Advanced Settings** section, click **Policies**.
24. Go the **Policies** section and click the “+” icon to configure the content inspection policy.
25. On the **Choose Policy** page, select Content Inspection. Click **Continue**.
26. In the **Policy Binding** section, click **Add** to add a Content Inspection policy.
27. In the **Create ContentInspection Policy** page, enter a name for the Inline content inspection policy.
28. In the **Action** field, click **Add** to create an Inline content inspection action.
29. In the **Create CI Action** page, set the following parameters:
  - a) Name. Name of the content inspection Inline policy.
  - b) Type. Select the type as inlinelnspection.
  - c) Server. Select the server/service as Inline devices.
  - d) If Server Down. Select an operation if the server goes down.
  - e) Request Time-out. Select a time-out value. You can use default values.
  - f) Request Time-out Action. Select a time-out action. You can use default values.
30. Click **Create**.
31. In the **Create CI Policy** page, enter other details:
32. Click **OK** and **Close**.

## Integration with IPS or NGFW as inline devices using SSL forward proxy

August 27, 2024

Security devices such as Intrusion Prevention System (IPS) and Next Generation Firewall (NGFW) protect servers from network attacks. These devices can inspect live traffic and are typically deployed in layer 2 inline mode. The SSL forward proxy appliance provides security of users and the enterprise network when accessing resources on the internet.


An SSL forward proxy appliance can be integrated with one or more inline devices to prevent threats and provide advanced security protection. The inline devices can be any security device, such as IPS and NGFW.

Some use cases where you can benefit by using the SSL forward proxy appliance and inline device integration are:

- **Inspecting encrypted traffic:** Most IPS and NGFW appliances bypass encrypted traffic, which can leave servers vulnerable to attacks. An SSL forward proxy appliance can decrypt traffic and send it to the inline devices for inspection. This integration enhances the customer’s network security.
- **Offloading inline devices from TLS/SSL processing:** TLS/SSL processing is expensive, which can result in high CPU utilization in IPS or NGFW appliances if they also decrypt the traffic. An SSL forward proxy appliance helps in offloading TLS/SSL processing from inline devices. As a result, inline devices can inspect a higher volume of traffic.
- **Loading balancing inline devices:** If you have configured multiple inline devices to manage heavy traffic, an SSL forward proxy appliance can load balance and distribute traffic evenly to these devices.
- **Smart selection of traffic:** Instead of sending all the traffic to the inline device for inspection, the appliance does a smart selection of traffic. For example, it skips sending text files for inspection to the inline devices.

### SSL forward proxy integration with inline devices

The following diagram shows how an SSL forward proxy is integrated with inline security devices.

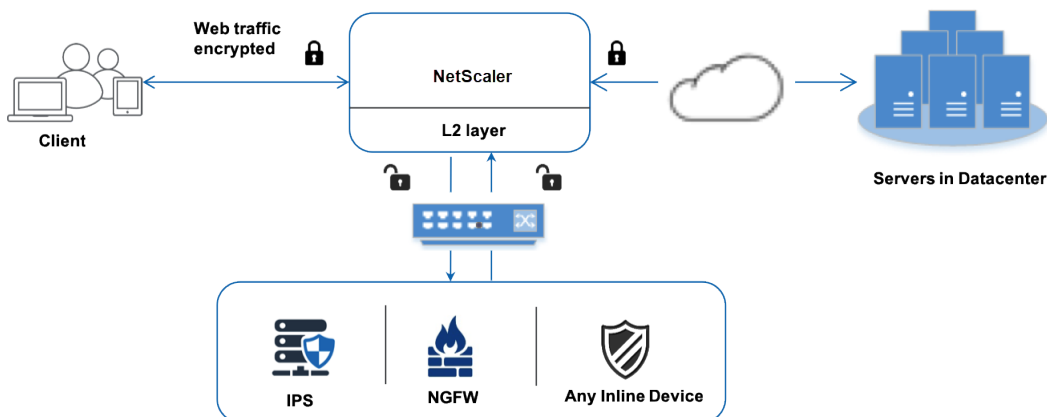

When you integrate inline devices with the SSL forward proxy appliance, the components interact as follows:

1. A client sends a request to an SSL forward proxy appliance.

2. The appliance sends the data to the inline device for content inspection based on the policy evaluation. For HTTPS traffic, the appliance decrypts the data and sends it in plain text to the inline device for content inspection.

**Note**

If there are two or more inline devices, the appliance load balances the devices and sends the traffic.

3. Add a content switching or an HTTP/HTTPS load balancing virtual server.
4. The inline device inspects the data for threats and decides whether to drop, reset, or send the data back to the appliance.
5. If there are security threats, the device modifies the data and sends it to the appliance.
6. For HTTPS traffic, the appliance re-encrypts the data and forwards the request to the back-end server.
7. The back-end server sends the response to the appliance.
8. The appliance again decrypts the data and sends it to the inline device for inspection.
9. The inline device inspects the data. If there are security threats, the device modifies the data and sends it to the appliance.
10. The appliance re-encrypts the data and sends the response to the client.


## **Configuring inline device integration**

You can configure an SSL forward proxy appliance with an inline device in three different ways as follows:

### **Scenario 1: Using a single inline device**

To integrate a security device (IPS or NGFW) in inline mode, you must enable content inspection and MAC-based forwarding (MBF) in global mode on the SSL forward proxy appliance. Then, add a content inspection profile, a TCP service, a content inspection action for inline devices to reset, block, or drop the traffic based on inspection. Also add a content inspection policy that the appliance uses to decide the subset of traffic to send to the inline devices. Finally, configure the proxy virtual server with layer 2 connection enabled on the server and bind the content inspection policy to this proxy virtual server.



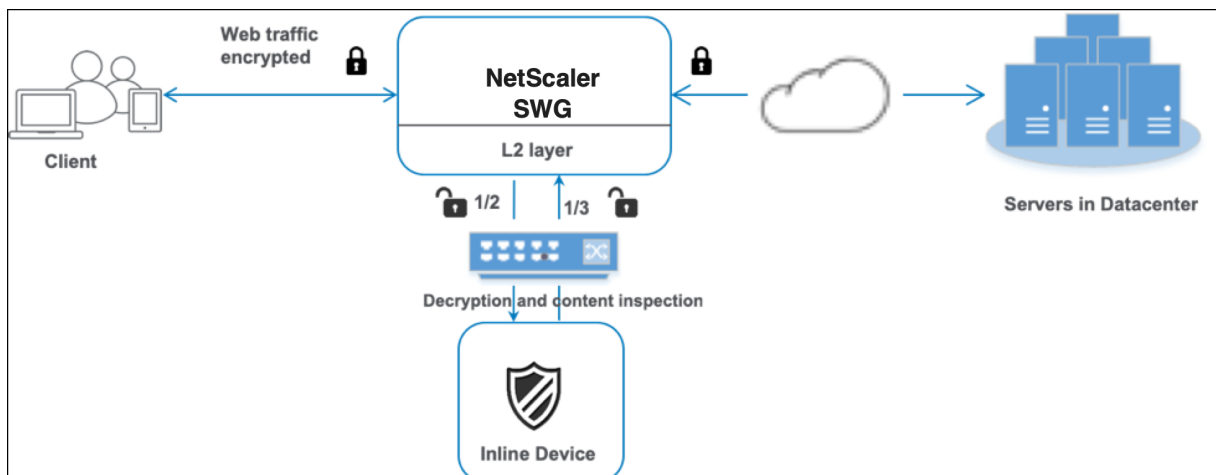

Perform the following steps:

1. Enable MAC-based forwarding (MPF) mode.
2. Enable the content inspection feature.
3. Add a content inspection profile for the service. The content inspection profile contains the inline device settings that integrate the SSL forward proxy appliance with an inline device.
4. (Optional) Add a TCP monitor.

**Note:**

Transparent devices do not have an IP address. Therefore, to perform health checks, you must explicitly bind a monitor.

5. Add a service. A service represents an inline device.
6. (Optional) Bind the service to the TCP monitor.
7. Add a content inspection action for the service.
8. Add a content inspection policy and specify the action.
9. Add an HTTP or HTTPS proxy (content switching) virtual server.
10. Bind the content inspection policy to the virtual server.

**Configure using the CLI** Type the following commands at the command prompt. Examples are given after most commands.

1. Enable MBF.

```
enable ns mode mbf
```

1. Enable the feature.

```
enable ns feature contentInspection
```

1. Add a content inspection profile.

```
add contentInspection profile <name> -type InlineInspection -egressInterface
<interface_name> -ingressInterface <interface_name>[-egressVlan <
positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile ipsprof -type InlineInspection -ingressinterface
"1/2" -egressInterface "1/3"
```

1. Add a service. Specify a dummy IP address that is not owned by any of the devices, including the inline devices. Set `use source IP address (USIP)` to YES. Set `useproxyport` to NO. By default, health monitoring is ON, bind the service to a health monitor, and also set the TRANS-PARENT option in the monitor ON.

```
add service <service_name> <IP> TCP * - contentinspectionProfileName
<Name> -healthMonitor YES -usip YES -useproxyport NO
```

**Example:**

```
add service ips_service 198.51.100.2 TCP * -healthMonitor YES -usip
YES -useproxyport NO -contentInspectionProfileName ipsprof
```

1. Add a health monitor. By default the health monitor is turned on and you also have the option to disable it, if necessary. At the command prompt, type:

```
add lb monitor <name> TCP -destIP <ip address> -destPort 80 -
transparent <YES, NO>
```

**Example:**

```
add lb monitor ips_tcp TCP -destIP 192.168.10.2 -destPort 80 -transparent
YES
```

1. Bind the service to the health monitor

After configuring the health monitor, you must bind the service to the health monitor. At the command prompt, type:

```
bind service <name> -monitorName <name>
```

**Example:**

```
bind service ips_svc -monitorName ips_tcp
```

1. Add a content inspection action.

```
add contentInspection action <name> -type INLINEINSPECTION -serverName <string>
```

**Example:**

```
add contentInspection action ips_action -type INLINEINSPECTION -serverName ips_service
```

1. Add a content inspection policy.

```
add contentInspection policy <name> -rule <expression> -action <string>
```

**Example:**

```
add contentInspection policy ips_pol -rule "HTTP.REQ.METHOD.NE(\\"CONNECT\\")"-action ips_action
```

1. Add a proxy virtual server.

```
add cs vserver <name> PROXY <IPAddress> <port> -cltTimeout <secs> -l2Conn ON
```

**Note:**

Load balancing virtual servers of type HTTP/SSL are also supported.

**Example:**

```
add cs vserver transparentcs PROXY * * -cltTimeout 180 -l2Conn ON
```

1. Bind the policy to the virtual server.

```
bind cs vserver <name> -policyName <string> -priority <positive_integer> -gotoPriorityExpression <expression> -type REQUEST
```

**Example:**

```
bind cs vserver explicitcs -policyName ips_pol -priority 1 -gotoPriorityExpression END -type REQUEST
```


**Configure using the GUI**

1. Navigate to **System > Settings**. In **Modes and Features**, click **Configure Modes**.
2. In the **Configure Modes** page, select the **MAC based forwarding** option.
3. Navigate to **System > Settings**. In **Modes and Features**, click **Configure Advanced Features**.
4. In the **Configure Advanced Features** page, select the **Content Inspection** option.

5. Navigate to **Security > Content Inspection > Content Inspection Profiles**. Click **Add**.
6. Navigate to **Load Balancing > Services > Add** and add a service.
  - a) In **Advanced Settings**, click **Profiles**. In the **CI Profile Name** list, select the content inspection profile created earlier.
  - b) In **Service Settings**, set **Use Source IP Address** to YES and **Use Proxy Port** to No. In **Basic Settings**, set **Health Monitoring** to NO.
  - c) Turn on health monitoring only if you bind this service to a TCP monitor. If you bind a monitor to a service, then set the TRANSPARENT option in the monitor to ON.
7. Navigate to **Security > Proxy Virtual Servers > Add**. Specify a name, IP address, and port. In **Advanced Settings**, select **Policies**. Click the “+” sign.
8. In **Choose Policy** select **Content Inspection**. Click **Continue**.
9. Click **Add**. Specify a name. In **Action**, click **Add**.
10. Specify a name. In **Type**, select **INLINEINSPECTION**. In **Server Name**, select the TCP service created earlier.
11. Click **Create**. Specify the rule and click **Create**.
12. Click **Bind**.
13. Click **Done**.

## **Scenario 2: Load balance multiple inline devices with dedicated interfaces**

If you are using two or more inline devices, you can load balance the devices using different content inspection services with dedicated interfaces. In this case, the SSL forward proxy appliance load balances the subset of traffic sent to each device through a dedicated interface. The subset is decided based on the policies configured. For example, TXT or image files might not be sent for inspection to the inline devices.

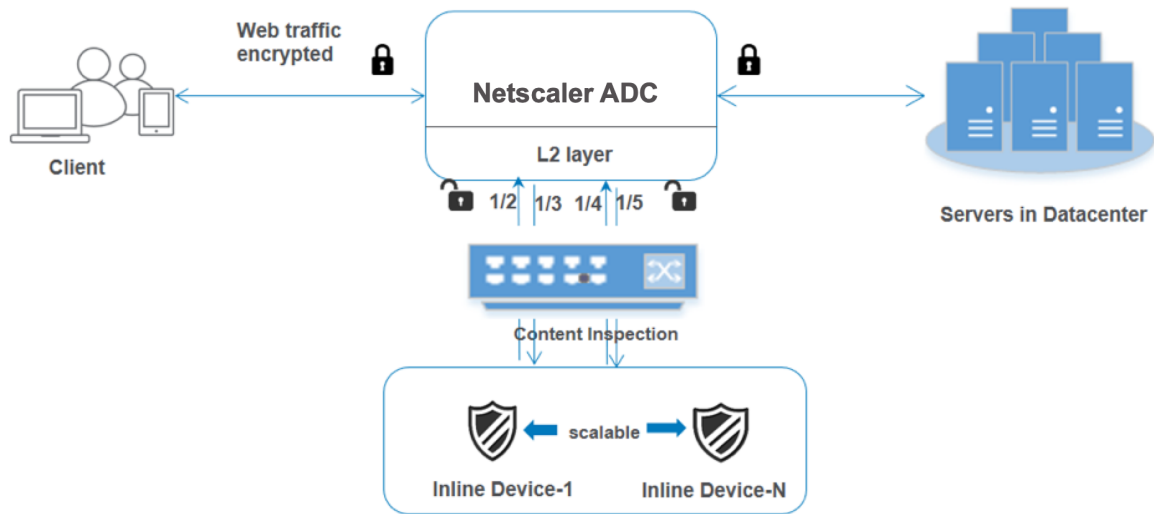

The basic configuration remains the same as in scenario 1. However, you must create a content inspection profile for each inline device and specify the ingress and egress interface in each profile. Add a service for each inline device. Add a load balancing virtual server and specify it in the content inspection action. Perform the following extra steps:

1. Add content inspection profiles for each service.
2. Add a service for each device.
3. Add a load balancing virtual server.
4. Specify the load balancing virtual server in the content inspection action.

**Configure using the CLI** Type the following commands at the command prompt. Examples are given after each command.

1. Enable MBF.

```
enable ns mode mbf
```

1. Enable the feature.

```
enable ns feature contentInspection
```

1. Add profile 1 for service 1.

```
add contentInspection profile <name> -type InlineInspection -egressInterface <interface_name> -ingressInterface <interface_name>[-egressVlan <positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile ipsprof1 -type InlineInspection -ingressInterface "1/2"-egressInterface "1/3"
```

1. Add profile 2 for service 2.

```
add contentInspection profile <name> -type InlineInspection -egressInterface
<interface_name> -ingressInterface <interface_name>[-egressVlan <
positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile ipsprof2 -type InlineInspection -
ingressInterface "1/4"-egressInterface "1/5"
```

1. Add service 1. Specify a dummy IP address that is not owned by any of the devices, including the inline devices. Set `use source IP address (USIP)` to YES. Set `useproxyport` to NO. Turn on health monitoring with TCP monitor with TRANSPARENT option set ON.

```
add service <service_name> <IP> TCP * - contentinspectionProfileName
<Name> -healthMonitor NO -usip YES -useproxyport NO
```

**Example:**

```
add service ips_service1 192.168.10.2 TCP * -healthMonitor NO -usip
YES -useproxyport NO -contentInspectionProfileName ipsprof1
```

1. Add service 2. Specify a dummy IP address that is not owned by any of the devices, including the inline devices. Set `use source IP address (USIP)` to YES. Set `useproxyport` to NO. Turn on health monitoring with TRANSPARENT option set ON.

```
add service <service_name> <IP> TCP * - contentinspectionProfileName
<Name> -healthMonitor NO -usip YES -useproxyport NO
```

**Example:**

```
add service ips_service2 192.168.10.3 TCP * -healthMonitor NO -usip
YES -useproxyport NO -contentInspectionProfileName ipsprof2
```

1. Add a load balancing virtual server.

```
add lb vserver <LB_VSERVER_NAME> TCP <IP> <port>
```

**Example:**

```
add lb vserver lb_inline_vserver TCP 192.0.2.100 *
```

1. Bind the services to the load balancing virtual server.

```
bind lb vserver <LB_VSERVER_NAME> <service_name>
bind lb vserver <LB_VSERVER_NAME> <service_name>
```

**Example:**

```
bind lb vserver lb_inline_vserver ips_service1
bind lb vserver lb_inline_vserver ips_service2
```

1. Specify the load balancing virtual server in the content inspection action.

```
add contentInspection action <name> -type INLINEINSPECTION -serverName
<string>
```

**Example:**

```
add contentInspection action ips_action -type INLINEINSPECTION -
serverName lb_inline_vserver
```

1. Add a content inspection policy. Specify the content inspection action in the policy.

```
add contentInspection policy <name> -rule <expression> -action <
string>
```

**Example:**

```
add contentInspection policy ips_pol -rule "HTTP.REQ.METHOD.NE(\
CONNECT\)"-action ips_action
```

1. Add a proxy virtual server.

```
add cs vserver <name> PROXY <IPAddress> <port> -l2Conn ON
```

**Example:**

```
add cs vserver transparentcs PROXY * * -l2Conn ON
```

1. Bind the content inspection policy to the virtual server.

```
bind cs vserver <name> -policyName <string> -priority <positive_integer
> -gotoPriorityExpression <expression> -type REQUEST
```

**Example:**

```
bind cs vserver explicitcs -policyName ips_pol -priority 1 -gotoPriorityExpres
END -type REQUEST
```

**Configuration using the GUI**

1. Navigate to **System > Settings**. In **Modes and Features**, click **Configure Modes**.
2. In the **Configure Modes** page, select the **MAC based forwarding** option.
3. Navigate to **System > Settings**. In **Modes and Features**, click **Configure Advanced Features**.
4. In the **Configure Advanced Features** page, select the **Content Inspection** option.

5. Navigate to **Security > Content Inspection > Content Inspection Profiles**. Click **Add**.
6. Specify the ingress and egress interfaces.
7. Create two profiles. Specify a different ingress and egress interface in the second profile.
8. Navigate to **Load Balancing > Services > Add** and add a service.
  - a) In **Advanced Settings**, click **Profiles**. In the **CI Profile Name** list, select the content inspection profile created earlier.
  - b) In **Service Settings**, set **Use Source IP Address** to YES and **Use Proxy Port** to No. In **Basic Settings**, set **Health Monitoring** to NO.
  - c) Turn on health monitoring only if you bind this service to a TCP monitor. If you bind a monitor to a service, then set the TRANSPARENT option in the monitor to ON.


Create two services. Specify dummy IP addresses that are not owned by any of the devices, including the inline devices.

9. Navigate to **Load Balancing > Virtual Servers > Add**. Create a TCP load balancing virtual server and Click **OK**.
10. Click the **Load Balancing Virtual Server Service Binding** section. In **Service Binding**, click the arrow in **Select Service**. Select the two services created earlier, and click **Select**. Click **Bind**.
11. Navigate to **Security > Proxy Virtual Servers > Add**. Specify a name, IP address, and port. In **Advanced Settings**, select **Policies**. Click the “+” sign.
12. In **Choose Policy** select **Content Inspection**. Click **Continue**.
13. Click **Add**. Specify a name. In **Action**, click **Add**.
14. Specify a name. In **Type**, select **INLINEINSPECTION**. In **Server Name**, select the load balancing virtual server created earlier.
15. Click **Create**. Specify the rule and click **Create**.
16. Click **Bind**.
17. Click **Done**.

### Scenario 3: Load balance multiple inline devices with shared interfaces

If you are using two or more inline devices, you can load balance the devices using different content inspection services with shared interfaces. In this case, the SSL forward proxy appliance load balances the subset of traffic sent to each device through a shared interface. The subset is decided based on the policies configured. For example, TXT or image files might not be sent for inspection to the inline devices.



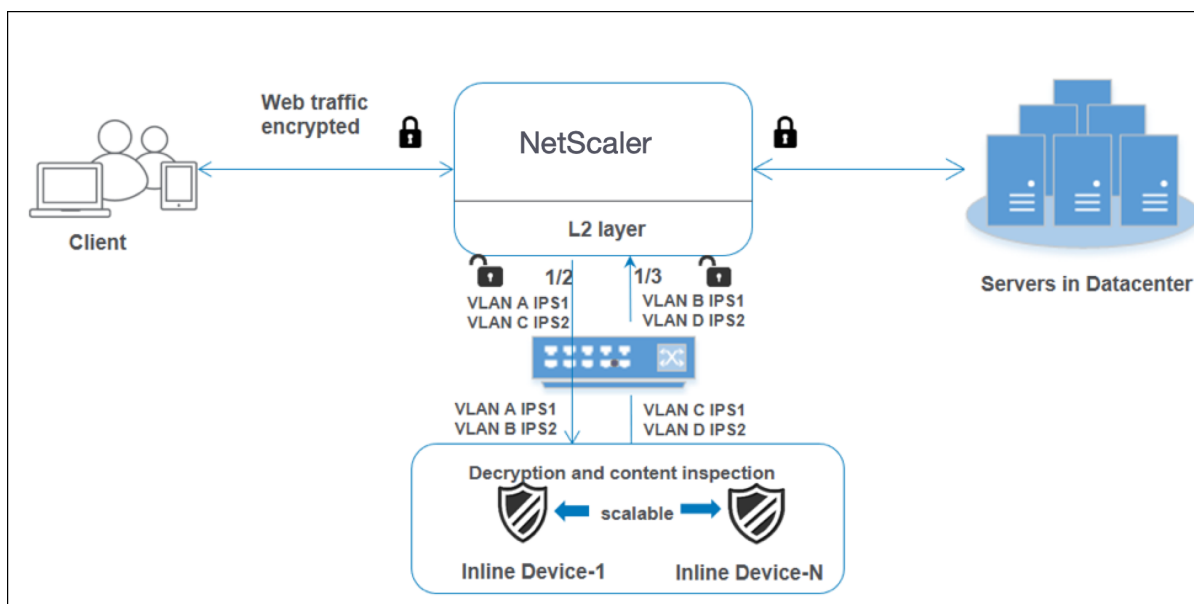

The basic configuration remains the same as in scenario 2. For this scenario, bind the interfaces to different VLANs to segregate the traffic for each inline device. Specify the VLANs in the content inspection profiles. Perform the following extra steps:

1. Bind the shared interfaces to different VLANs.
2. Specify the ingress and egress VLANs in the content inspection profiles.

**Configuration using the CLI** Type the following commands at the command prompt. Examples are given after each command.

1. Enable MBF.

```
enable ns mode mbf
```

1. Enable the feature.

```
enable ns feature contentInspection
```

1. Bind the shared interfaces to different VLANs.

```
bind vlan <id> -ifnum <interface> -tagged
```

**Example:**

```
1 bind vlan 100 -ifnum 1/2 tagged
2 bind vlan 200 -ifnum 1/3 tagged
3 bind vlan 300 -ifnum 1/2 tagged
4 bind vlan 400 -ifnum 1/3 tagged
```

1. Add profile 1 for service 1. Specify the ingress and egress VLANs in the profile.

```
add contentInspection profile <name> -type InlineInspection -egressInterface
<interface_name> -ingressInterface <interface_name>[-egressVlan <
positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile ipsprof1 -type InlineInspection -
egressInterface "1/3" -ingressinterface "1/2" -egressVlan 100 -ingressVlan
300
```

1. Add profile 2 for service 2. Specify the ingress and egress VLANs in the profile.

```
add contentInspection profile <name> -type InlineInspection -egressInterface
<interface_name> -ingressInterface <interface_name>[-egressVlan <
positive_integer>] [-ingressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile ipsprof2 -type InlineInspection -
egressInterface "1/3" -ingressinterface "1/2" -egressVlan 200 -ingressVlan
400
```

1. Add service 1.

```
add service <service_name> <IP> TCP * - contentinspectionProfileName
<Name> -healthMonitor NO -usip YES -useproxyport NO
```

**Example:**

```
add service ips_service1 192.168.10.2 TCP * -healthMonitor NO -usip
YES -useproxyport NO -contentInspectionProfileName ipsprof1
```

1. Add service 2.

```
add service <service_name> <IP> TCP * - contentinspectionProfileName
<Name> -healthMonitor NO -usip YES -useproxyport NO
```

**Example:**

```
add service ips_service2 192.168.10.3 TCP * -healthMonitor NO -usip
YES -useproxyport NO -contentInspectionProfileName ipsprof2
```

1. Add a load balancing virtual server.

```
add lb vserver <LB_VSERVER_NAME> TCP <IP> <port>
```

**Example:**

```
add lb vserver lb_inline_vserver TCP 192.0.2.100 *
```

1. Bind the services to the load balancing virtual server.

```
bind lb vserver <LB_VSERVER_NAME> <service_name>
bind lb vserver <LB_VSERVER_NAME> <service_name>
```

**Example:**

```
bind lb vserver lb_inline_vserver ips_service1
bind lb vserver lb_inline_vserver ips_service2
```

1. Specify the load balancing virtual server in the content inspection action.

```
add contentInspection action <name> -type INLINEINSPECTION -serverName
<string>
```

**Example:**

```
add contentInspection action ips_action -type INLINEINSPECTION -
serverName lb_inline_vserver
```

1. Add a content inspection policy. Specify the content inspection action in the policy.

```
add contentInspection policy <name> -rule <expression> -action <
string>
```

**Example:**

```
add contentInspection policy ips_pol -rule "HTTP.REQ.METHOD.NE(\\"
CONNECT\\")"-action ips_action
```

1. Add a proxy virtual server.

```
add cs vserver <name> PROXY <IPAddress> <port> -l2Conn ON
```

**Example:**

```
add cs vserver transparentcs PROXY * * -l2Conn ON
```

1. Bind the content inspection policy to the virtual server.

```
bind cs vserver <name> -policyName <string> -priority <positive_integer>
> -gotoPriorityExpression <expression> -type REQUEST
```

**Example:**

```
bind cs vserver explicitcs -policyName ips_pol -priority 1 -gotoPriorityExpres
END -type REQUEST
```

**Configuration using the GUI**

1. Navigate to **System > Settings**. In **Modes and Features**, click **Configure Modes**.
2. In the **Configure Modes** page, select the **MAC based forwarding** option.
3. Navigate to **System > Settings**. In **Modes and Features**, click **Configure Advanced Features**.
4. In the **Configure Advanced Features** page, select the **Content Inspection** option.
5. Navigate to **System > Network > VLANs > Add**. Add four VLANs and tag them to the interfaces.
6. Navigate to **Security > Content Inspection > Content Inspection Profiles**. Click **Add**.
7. Specify the ingress and egress VLANs.
8. Create another profiles. Specify a different ingress and egress VLAN in the second profile.
9. Navigate to **Load Balancing > Services > Add** and add a service.
  - a) In **Advanced Settings**, click **Profiles**. In the **CI Profile Name** list, select the content inspection profile created earlier.
  - b) In **Service Settings**, set **Use Source IP Address** to YES and **Use Proxy Port** to No. In **Basic Settings**, set **Health Monitoring** to NO.
  - c) Turn on health monitoring only if you bind this service to a TCP monitor. If you bind a monitor to a service, then set the TRANSPARENT option in the monitor to ON.

Create two services. Specify dummy IP addresses that are not owned by any of the devices, including the inline devices. Specify profile 1 in service 1, and profile 2 in service 2.

10. Navigate to **Load Balancing > Virtual Servers > Add**. Create a TCP load balancing virtual server and Click **OK**.
11. Click the **Load Balancing Virtual Server Service Binding** section. In **Service Binding**, click the arrow in **Select Service**. Select the two services created earlier, and click **Select**. Click **Bind**.
12. Navigate to **Security > Proxy Virtual Servers > Add**. Specify a name, IP address, and port. In **Advanced Settings**, select **Policies**. Click the “+” sign.
13. In **Choose Policy** select **Content Inspection**. Click **Continue**.
14. Click **Add**. Specify a name. In **Action**, click **Add**.
15. Specify a name. In **Type**, select **INLINEINSPECTION**. In **Server Name**, select the load balancing virtual server created earlier.
16. Click **Create**. Specify the rule and click **Create**.
17. Click **Bind**.
18. Click **Done**.

## Integrating NetScaler with passive security devices (Intrusion Detection System)

October 25, 2023


A NetScaler appliance is now integrated with passive security devices such as the Intrusion Detection System (IDS). These passive devices store logs and trigger alerts when it detects a bad or non-compliant traffic. It also generates reports for the compliance purpose. If the NetScaler appliance is integrated with two or more IDS devices and when there is a high volume of traffic, the appliance can load balance the devices by cloning traffic at the virtual server level.

For advanced security protection, a NetScaler appliance is integrated with passive security devices such as IDS deployed in detection-only mode. These devices store log and trigger alerts when it sees a bad or non-compliant traffic. It also generates reports for the compliance purpose. Following are some of the benefits of integrating the NetScaler with an IDS device.

- **Inspecting encrypted traffic.** Most security devices bypass encrypted traffic, thereby leaving servers vulnerable to attacks. A NetScaler appliance can decrypt traffic and send it to IDS devices for enhancing the customer's network security.
- **Offloading inline devices from TLS/SSL processing.** TLS/SSL processing is expensive and it results in high system CPU in intrusion detection devices if they decrypt the traffic. As encrypted traffic is growing at a fast pace, these systems fail to decrypt and inspect encrypted traffic. NetScaler helps in offloading traffic to IDS devices from TLS/SSL processing. This way of offloading data results in an IDS device supporting a high volume of traffic inspection.
- **Loading balancing IDS devices.** The NetScaler appliance load balances multiple IDS devices when there is a high volume of traffic by cloning traffic at the virtual server level.
- **Replicating traffic to passive devices.** The traffic flowing into the appliance can be replicated to other passive devices for generating compliance reports. For example, few government agencies mandate every transaction to be logged in some passive devices.
- **Fanning traffic to multiple passive devices.** Some customers prefer to fan out or replicate incoming traffic into multiple passive devices.
- **Smart selection of traffic.** Every packet flowing into the appliance might not be must be content inspected, for example download of text files. User can configure the NetScaler appliance to select specific traffic (for example .exe files) for inspection and send the traffic to IDS devices for processing data.

### How NetScaler is integrated with IDS device with L2 connectivity

The following diagram shows how IDS is integrated with a NetScaler appliance.

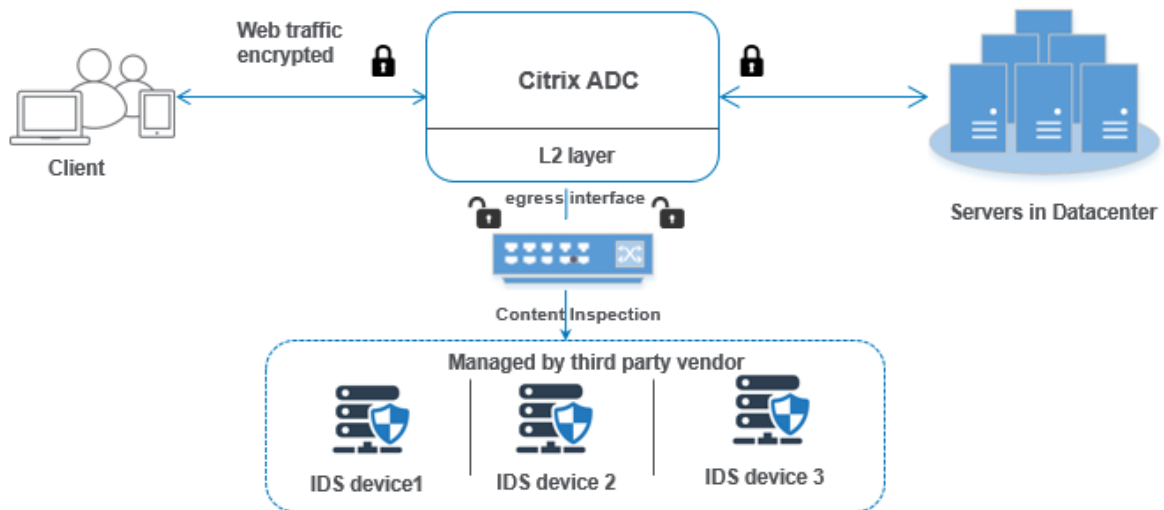

The component interaction is given as follows:

1. A client sends an HTTP/HTTPS request to the NetScaler appliance.
2. The appliance intercepts the traffic and replicates it to an IDS device based on content inspection policy evaluation.
3. If the traffic is an encrypted one, the appliance decrypts the data and sends it as a plain text.
4. Based on policy evaluation, the appliance applies a “MIRROR” type content inspection action.
5. The action has the IDS service or load balancing service (for multiple IDS device integrations) configured in it.
6. The IDS device is configured as content inspection service type “Any” on the appliance. The content inspection service is then associated to the content inspection profile of type “MIRROR” which specifies the egress interface through which the data has to be forwarded to the IDS device. Optionally, you can also configure a VLAN tag in the content inspection profile.

**Note:**

- The IP-address used for the IDS service or server is a dummy address.
- NetScaler appliance does not support LA-Channel for the egress interface.

7. The appliance then, replicates the data through the egress interface to one or more IDS devices.
8. Similarly, when the back-end server sends a response to the NetScaler, the appliance replicates the data and forwards it to the IDS device.
9. If your appliance is integrated to one or more IDS devices and if you prefer to load balance the devices, then you can use the load balancing virtual server.

## Software licensing

To deploy the inline device integration, your NetScaler appliance must be provisioned with one of the following licenses:

1. ADC Premium
2. ADC Advanced
3. Telco Advanced
4. Telco Premium

## Configuring intrusion detection system integration

You can integrate the IDS device with the NetScaler in two different ways.

### Scenario 1: Integration with a single IDS device

Following are the steps you must configure using the command line interface.

1. Enable content inspection
2. Add content inspection profile of type MIRROR for service representing IDS device.
3. Add IDS service of type “ANY”
4. Add content inspection action of type “MIRROR”
5. Add content inspection policy for IDS inspection
6. Bind content inspection policy to content switching or load balancing virtual service of type HTTP/SSL

**Enable Content Inspection** If you want the NetScaler appliance to send the content for inspection to the IDS devices, you must enable the Content Inspection and load balancing features irrespective of performing decryption.

At the command prompt, type:

```
enable ns feature contentInspection LoadBalancing
```

**Add Content Inspection profile of type “MIRROR** The Content Inspection profile of type “MIRROR” explains how you can connect to the IDS device.

At the command prompt, type.

```
add contentInspection profile <name> -type MIRROR -egressInterface <interface_name> [-egressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile IDS_profile1 -type MIRROR -egressInterface
1/1 -egressVLAN 10
```

**Add IDS service** You must configure a service of type “ANY” for each IDS device that is integrated with the appliance. The service has the IDS device configuration details. The service represents the IDS device.

At the command prompt, type:

```
add service <Service_name> <IP> ANY <Port> - contentinspectionProfileName
<Name> -healthMonitor OFF -usip ON -useproxyport OFF
```

**Example:**

```
add service IDS_service 1.1.1.1 ANY 8080 -contentInspectionProfileName
IDS_profile1 -healthMonitor OFF
```

**Add content inspection action of type MIRROR for IDS service** After you enable the Content Inspection feature and then add the IDS profile and service, you must add the Content Inspection action for handling the request. Based on the content inspection action, the appliance can drop, reset, block, or send data to the IDS device.

At the command prompt, type:

```
add ContentInspection action < action_name > -type MIRROR -serverName
Service_name/Vserver_name>
```

**Example:**

```
add ContentInspection action IDS_action -type MIRROR -serverName
IDS_service
```

**Add content inspection policy for IDS inspection** After you create a Content Inspection action, you must add Content Inspection policies to evaluate requests for inspection. The policy is based on a rule which consists of one or more expressions. The policy evaluates and selects the traffic for inspection based on the rule.

At the command prompt, type the following:

```
add contentInspection policy < policy_name > -rule <Rule> -action <
action_name>
```

**Example:**

```
add contentInspection policy IDS_pol1 -rule true -action IDS_action
```



**Bind content inspection policy to content switching or load balancing virtual service of type HTTP/SSL** To receive the web traffic, you must add a load balancing virtual server.

At the command prompt, type:

```
add lb vserver <name> <vserver name>
```

**Example:**

```
add lb vserver HTTP_vserver HTTP 1.1.1.3 8080
```

**Bind Content Inspection policy to content switching virtual server or load balancing virtual server of type HTTP/SSL** You must bind the load balancing virtual server or content switching virtual server of type HTTP/SSL to the Content Inspection policy.

At the command prompt, type the following:

```
bind lb vserver <vserver name> -policyName < policy_name > -priority < priority > -type <REQUEST>
```


**Example:**

```
bind lb vserver HTTP_vserver -policyName IDS_pol1 -priority 100 -type REQUEST
```

## Scenario 2: Load balancing multiple IDS devices

If you are using two or more IDS devices, you must load balance the devices using different content inspection services. In this case, the NetScaler appliance load balances the devices on top of sending a subset of traffic to each device.

For basic configuration steps, refer to scenario 1.

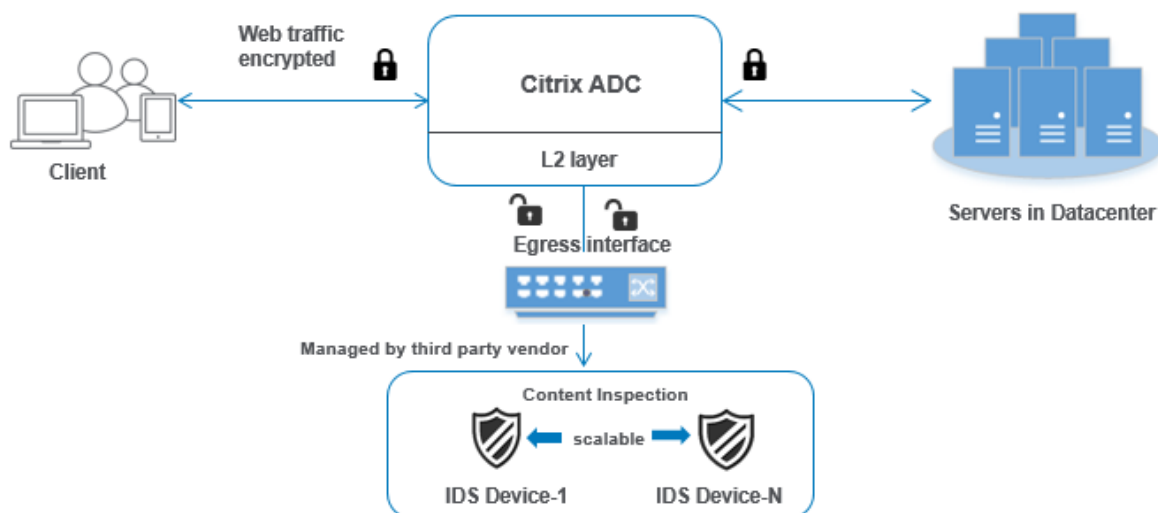

Following are the steps you must configure using the command line interface.

1. Add content inspection profile 1 of type MIRROR for IDS service 1
2. Add content inspection profile 2 of type MIRROR for IDS service 2
3. Add IDS service 1 of type ANY for IDS device 1
4. Add IDS service 2 of type ANY for IDS device 2
5. Add load balancing virtual server of type ANY
6. Bind IDS service 1 to load balancing virtual server
7. Bind IDS service 2 to load balancing virtual server
8. Add content inspection action for the load balancing of IDS devices.
9. Add content inspection policy for inspection
10. Add content switching or load balancing virtual server of type HTTP/SSL
11. Bind content inspection policy to load balancing virtual server of type HTTP/SSL

**Add content inspection profile1 of type MIRROR for IDS service 1** IDS configuration can be specified in an entity called the Content Inspection profile. The profile has a collection of device settings. The Content Inspection profile1 is created for IDS service 1.

At the command prompt, type:

```
add contentInspection profile <name> -type ANY -egressInterface <
interface_name> [-egressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile IDS_profile1 -type MIRROR -egressInterface
1/1 -egressVLAN 1
```

**Add content inspection profile 2 for type MIRROR for IDS service 2** The Content Inspection profile 2 is added for service 2 and the inline device communicates with the appliance through the egress 1/1 interface.

At the command prompt, type:

```
add contentInspection profile <name> -type MIRROR -egressInterface -
egressVlan <positive_integer>]
```

**Example:**

```
add contentInspection profile IDS_profile1 -type MIRROR -egressInterface
1/1 -egressVLAN 1
```

**Add IDS service 1 of type ANY for IDS device 1** After you enable the Content Inspection feature and add the inline profile, you must add an inline service 1 for inline device 1 to be part of the load balancing setup. The service that you add, provides all the inline configuration details.

At the command prompt, type:

```
add service <Service_name_1> <Pvt_IP1> ANY <Port> -contentInspectionProfileName
<IDS_Profile_1> -usip ON -useproxyport OFF
```

**Example:**

```
add service IDS_service1 1.1.1.1 ANY 80 -contentInspectionProfileName
IDS_profile1 -usip ON -useproxyport OFF
```

**Note**

The IP address mentioned in the example is a dummy one.

**Add IDS service 2 of type ANY for IDS device 2** After you enable the Content Inspection feature and add the inline profile, you must add an inline service 2 for inline device 2. The service that you add, provides all the inline configuration details.

At the command prompt, type:

```
add service <Service_name_1> <Pvt_IP1> ANY -contentInspectionProfileName
<Inline_Profile_2> -healthmonitor OFF -usip ON -useproxyport OFF
```

**Example:**

```
add service IDS_service 1 1.1.2 ANY 80 -contentInspectionProfileName
IDS_profile2
```

**Note**

The IP address mentioned in the example is a dummy one.

**Add load balancing virtual server** After you have added the inline profile and the services, you must add a load balancing virtual server for load balancing the services.

At the command prompt, type:

```
add lb vserver <vserver_name> ANY <Pvt_IP3> <port>
```

**Example:**

```
add lb vserver lb-IDS_vserver ANY 1.1.1.2
```

**Bind IDS service 1 to load balancing virtual server** After you add the load balancing virtual server, now bind the load balancing virtual server to the first service.

At the command prompt, type:

```
bind lb vserver <Vserver_name> <Service_name_1>
```

**Example:**

```
bind lb vserver lb-IDS_vserver IDS_service1
```

**Bind IDS service 2 to load balancing virtual server** After you add the load balancing virtual server, now bind the server to the second service.

At the command prompt, type:

```
bind lb vserver <Vserver_name> <Service_name_1>
```

**Example:**

```
bind lb vserver lb-IDS_vserver IDS_service2
```

**Add content inspection action for the IDS service** After you enable the Content Inspection feature, you must add the Content Inspection action for handling the inline request information. Based on the action selected, the appliance drops, resets, blocks, or sends traffic to the IDS device.

At the command prompt, type:

```
add contentInspection action <name> -type <type> (-serverName <string> [-ifserverdown <ifserverdown>])
```

**Example:**

```
add ContentInspection action IDS_action -type MIRROR -serverName lb-IDS_vserver
```

**Add content inspection policy for inspection** After you create a Content Inspection action, you must add a Content Inspection policy to evaluate requests for service.

At the command prompt, type the following:

```
add contentInspection policy <policy_name> -rule <Rule> -action <action_name>
```

**Example:**

```
add contentInspection policy IDS_pol1 -rule true -action IDS_action
```

**Add content switching or load balancing virtual server of type HTTP/SSL** Add a content switching or load balancing virtual server to accept web traffic. Also you must enable the layer2 connection on the virtual server.

For more information about load balancing, refer to **How load balancing works** topic.

At the command prompt, type:

```
add lb vserver <name> <vserver name>
```

**Example:**

```
add lb vserver http_vserver HTTP 1.1.1.1 8080
```

**Bind Content Inspection policy to load balancing virtual server of type HTTP/SSL** You must bind the content switching or load balancing virtual server of type HTTP/SSL to the Content Inspection policy.

At the command prompt, type the following:

```
bind lb vserver <vserver name> -policyName < policy_name > -priority
<> -type <REQUEST>
```

**Example:**

```
bind lb vserver http_vserver -policyName IDS_pol1 -priority 100 -type
REQUEST
```

### Configure inline service integration using the NetScaler GUI

1. Navigate to **Security > Content Inspection > Content Inspection Profiles**.
2. In the **Content Inspection Profile** page, click **Add**.
3. In the **Create Content Inspection Profile** page, set the following parameters.
  - a) Profile Name. Name of the content inspection profile for IDS.
  - b) Type. Select the profile types as MIRROR.
  - c) Egress Interface. The interface through which the traffic is sent from the NetScaler to the IDS device.
  - d) Egress VLAN (optional). The interface VLAN ID through which the traffic is sent to the IDS device.
4. Click **Create**.
5. Navigate to **Traffic Management > Load Balancing > Services** and click **Add**.
6. In the **Load Balancing Service** page, enter the content inspection service details.
7. In the **Advanced Settings** section, click **Profiles**.
8. Go to the **Profiles** section and click the **Pencil** icon to add the content inspection profile.
9. Click **OK**.
10. Navigate to **Load Balancing > Servers**. Add a virtual server of type HTTP or SSL.
11. After entering the server details, click **OK** and again **OK**.

12. In the **Advanced Settings** section, click **Policies**.
13. Go the **Policies** section and click the **Pencil** icon to configure the content inspection policy.
14. On the **Choose Policy** page, select **Content Inspection**. Click **Continue**.
15. In the **Policy Binding** section, click “+” to add a Content Inspection policy.
16. In the **Create CI Policy** page, enter a name for the Inline content inspection policy.
17. In the **Action** field, click the “+” sign to create an IDS content inspection action of type MIRROR.
18. In the **Create CI Action** page, set the following parameters.
  - a) Name. Name of the content inspection Inline policy.
  - b) Type. Select the type as MIRROR.
  - c) Server Name. Select the server/service name as Inline devices.
  - d) If Server Down. Select an operation if the server goes down.
  - e) Request Time-out. Select a time-out value. Default values can be used.
  - f) Request Time-out Action. Select a time-out action. Default values can be used.
19. Click **Create**.
20. In the **Create CI Policy** page, enter other details.
21. Click **OK** and **Close**.

For information about the NetScaler GUI configuration for load balancing and replicating the traffic to IDS devices, see Load Balancing.

For information about the NetScaler GUI configuration for load balancing and forwarding the traffic to the back-end origin server after content transformation, see [Load Balancing](#) topic.

## **Integrating NetScaler layer 3 with passive security devices (Intrusion Detection System)**

October 25, 2023


A NetScaler appliance is now integrated with passive security devices such as the Intrusion Detection System (IDS). In this setup, the appliance sends a copy of the original traffic securely to remote IDS devices. These passive devices store logs and trigger alerts when it detects a bad or non-compliant traffic. It also generates reports for the compliance purpose. If a NetScaler appliance is integrated with two or more IDS devices and when there is a high volume of traffic, the appliance can load balance the devices by cloning traffic at the virtual server level.

For advanced security protection, a NetScaler appliance is integrated with passive security devices such as IDS deployed in detection-only mode. These devices store log and trigger alerts when it sees a bad or non-compliant traffic. It also generates reports for the compliance purpose. Following are some of the benefits of integrating the NetScaler with an IDS device.

- **Inspecting encrypted traffic.** Most security devices bypass encrypted traffic, thereby leaving servers vulnerable to attacks. A NetScaler appliance can decrypt traffic and send it to IDS devices for enhancing the customer's network security.
- **Offloading inline devices from TLS/SSL processing.** TLS/SSL processing is expensive and it results in high system CPU in intrusion detection devices if they decrypt the traffic. As encrypted traffic is growing at a fast pace, these systems fail to decrypt and inspect encrypted traffic. NetScaler helps in offloading traffic to IDS devices from TLS/SSL processing. This way of offloading data results in an IDS device supporting a high volume of traffic inspection.
- **Loading balancing IDS devices.** The NetScaler appliance load balances multiple IDS devices when there is a high volume of traffic by cloning traffic at the virtual server level.
- **Replicating traffic to passive devices.** The traffic flowing into the appliance can be replicated to other passive devices for generating compliance reports. For example, few government agencies mandate every transaction to be logged in some passive devices.
- **Fanning traffic to multiple passive devices.** Some customers prefer to fan out or replicate incoming traffic into multiple passive devices.
- **Smart selection of traffic.** Every packet flowing into the appliance might not be must be content inspected, for example download of text files. User can configure the NetScaler appliance to select specific traffic (for example .exe files) for inspection and send the traffic to IDS devices for processing data.

### **How NetScaler is integrated with IDS device with L3 connectivity**

The following diagram shows how the IDS is integrated with a NetScaler appliance.

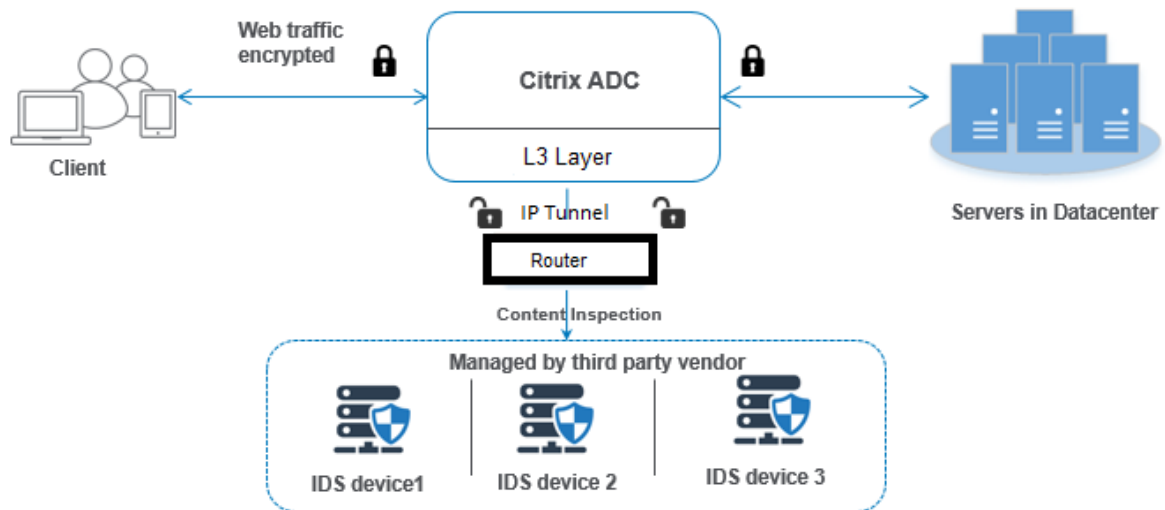

The component interaction is given as follows:

1. A client sends an HTTP/HTTPS request to the NetScaler appliance.
2. The appliance intercepts the traffic and sends the data to remote IDS devices across different data centers or even in a cloud. This integration is done through IP tunneled layer 3. For more information about IP tunneling in a NetScaler appliance, see IP tunnels topic.
3. If the traffic is an encrypted one, the appliance decrypts the data and sends it as a plain text.
4. Based on policy evaluation, the appliance applies a “MIRROR” type content inspection action.
5. The action has an IDS service or load balancing service (for multiple IDS device integrations) configured in it.
6. The IDS device is configured as content inspection service type “Any” on the appliance. The content inspection service is then associated to the content inspection profile of type “MIRROR” and the tunnel parameter which specifies the IP tunneled layer 3 interface through which the data is forwarded to the IDS device.

**Note:**

Optionally, you can also configure a VLAN tag in the content inspection profile.

7. Similarly, when the back-end server sends a response to the NetScaler, the appliance replicates the data and forwards it to the IDS device.
8. If your appliance is integrated to one or more IDS devices and if you prefer to load balance the devices, then you can use the load balancing virtual server.



## Software licensing

To deploy the IDS integration, your NetScaler appliance must be provisioned with one of the following licenses:

1. ADC Premium
2. ADC Advanced

## Configuring intrusion detection system integration

You can integrate IDS device with a NetScaler in two different ways.

### Scenario 1: Integration with a single IDS device

Following are the steps you must configure using the command line interface.

1. Enable content inspection
2. Add content inspection profile of type MIRROR for service representing IDS device.
3. Add IDS service of type “ANY”
4. Add content inspection action of type “MIRROR”
5. Add content inspection policy for IDS inspection
6. Bind content inspection policy to content switching or load balancing virtual service of type HTTP/SSL

**Enable Content Inspection** If you want the NetScaler appliance to send the content for inspection to the IDS devices, you must enable the Content Inspection and load balancing features irrespective of performing decryption.

At the command prompt, type:

```
enable ns feature contentInspection LoadBalancing
```

**Add Content Inspection profile of type “MIRROR”** The Content Inspection profile of type “MIRROR” explains how you can connect to the IDS device.

At the command prompt, type.

#### Note:

The IP tunnel parameter must be used only for layer 3 IDS topology. Otherwise, you must use the egress interface with the egress VLAN option. GRE/IPIP tunnel types are supported with the layer 3 IDS topology.

```
add contentInspection profile <name> -type MIRROR -ipTunnel <iptunnel_name>
>
```

**Example:**

```
add contentInspection profile IDS_profile1 -type MIRROR -ipTunnel
ipsect-tunnel1
```

**Add IDS service** You must configure a service of type “ANY” for each IDS device that is integrated with the appliance. The service has the IDS device configuration details. The service represents the IDS device.

At the command prompt, type:

```
add service <Service_name> <IP> ANY <Port> - contentinspectionProfileName
<Name> -healthMonitor OFF -usip ON -useproxyport OFF
```

**Example:**

```
add service IDS_service 1.1.1.1 ANY 8080 -contentInspectionProfileName
IDS_profile1 -healthMonitor OFF
```

**Add content inspection action of type MIRROR for IDS service** After you enable the Content Inspection feature and then add the IDS profile and service, you must add the Content Inspection action for handling the request. Based on the content inspection action, the appliance can drop, reset, block, or send data to the IDS device.

At the command prompt, type:

```
add ContentInspection action < action_name > -type MIRROR -serverName
Service_name/Vserver_name>
```

**Example:**

```
add ContentInspection action IDS_action -type MIRROR -serverName
IDS_service
```

**Add content inspection policy for IDS inspection** After you create a Content Inspection action, you must add Content Inspection policies to evaluate requests for inspection. The policy is based on a rule which consists of one or more expressions. The policy evaluates and selects the traffic for inspection based on the rule.

At the command prompt, type the following:

```
add contentInspection policy < policy_name > -rule <Rule> -action <
action_name>
```

**Example:**

```
add contentInspection policy IDS_pol1 -rule true -action IDS_action
```

**Bind content inspection policy to content switching or load balancing virtual service of type HTTP/SSL** To receive the web traffic, you must add a load balancing virtual server.

At the command prompt, type:

```
add lb vserver <name> <vserver name>
```

**Example:**

```
add lb vserver HTTP_vserver HTTP 1.1.1.3 8080
```

**Bind Content Inspection policy to content switching virtual server or load balancing virtual server of type HTTP/SSL** You must bind the load balancing virtual server or content switching virtual server of type HTTP/SSL to the Content Inspection policy.

At the command prompt, type the following:

```
bind lb vserver <vserver name> -policyName < policy_name > -priority
< priority > -type <REQUEST>
```


**Example:**

```
bind lb vserver HTTP_vserver -policyName IDS_pol1 -priority 100 -type
REQUEST
```

**Scenario 2: Load balancing multiple IDS devices**

If you are using two or more IDS devices, you must load balance the IDS devices using different content inspection services. In this case, the NetScaler appliance load balances the devices on top of sending a subset of traffic to each device.

For basic configuration steps, refer to scenario 1.

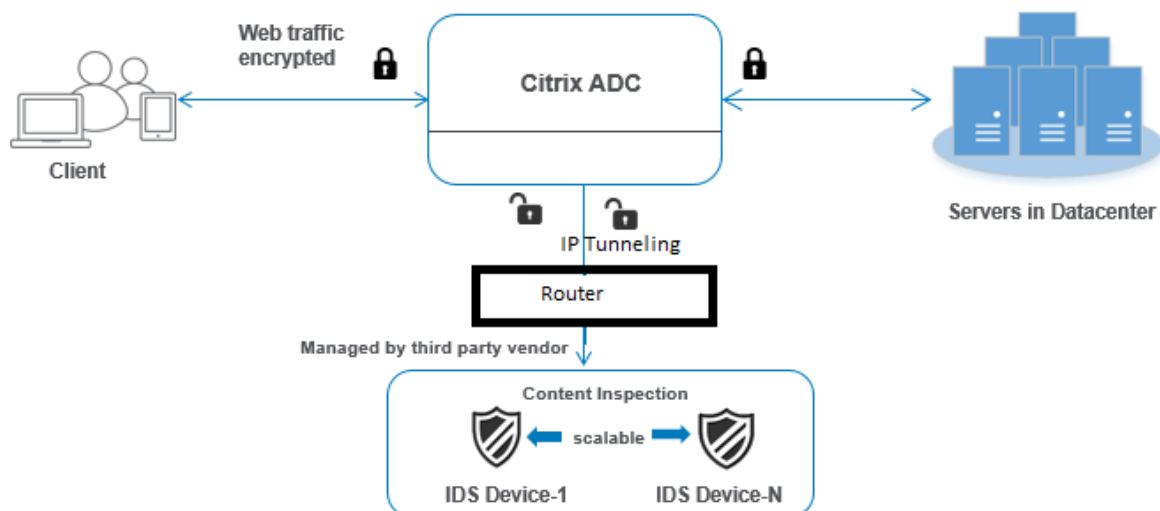

Following are the steps you must configure using the command line interface.

1. Add content inspection profile 1 of type MIRROR for IDS service 1
2. Add content inspection profile 2 of type MIRROR for IDS service 2
3. Add IDS service 1 of type ANY for IDS device 1
4. Add IDS service 2 of type ANY for IDS device 2
5. Add load balancing virtual server of type ANY
6. Bind IDS service 1 to load balancing virtual server
7. Bind IDS service 2 to load balancing virtual server
8. Add content inspection action for the load balancing of IDS devices.
9. Add content inspection policy for inspection
10. Add content switching or load balancing virtual server of type HTTP/SSL
11. Bind content inspection policy to load balancing virtual server of type HTTP/SSL

**Add content inspection profile1 of type MIRROR for IDS service 1** IDS configuration can be specified in an entity called the Content Inspection profile. The profile has a collection of device settings. The Content Inspection profile1 is created for IDS service 1.

**Note:**

IP tunnel parameter must be used only for layer 3 IDS topology. Otherwise, you must use the egress interface with the egress VLAN option. GRE/IPIP tunnel types are supported with the layer 3 IDS topology.

At the command prompt, type:

```
add contentInspection profile <name> -type ANY - ipTunnel <iptunnel_name>
>
```

**Example:**

```
add contentInspection profile IDS_profile1 -type MIRROR - ipTunnel
ipsect_tunnel1
```

**Add content inspection profile 2 for type MIRROR for IDS service 2** The Content Inspection profile 2 is added for service 2 and the inline device communicates with the appliance through the egress 1/1 interface.

At the command prompt, type:

```
add contentInspection profile <name> -type ANY - ipTunnel <iptunnel_name>
>
```

**Example:**

```
add contentInspection profile IDS_profile2 -type ANY - ipTunnel
ipsect_tunnel2
```

**Add IDS service 1 of type ANY for IDS device 1** After you enable the Content Inspection feature and add the inline profile, you must add an inline service 1 for the inline device 1 to be part of the load balancing setup. The service that you add, provides all the inline configuration details.

At the command prompt, type:

```
add service <Service_name_1> <Pvt_IP1> ANY <Port> -contentInspectionProfileName
<IDS_Profile_1> -usip ON -useproxyport OFF
```

**Example:**

```
add service IDS_service1 1.1.1.1 ANY 80 -contentInspectionProfileName
IDS_profile1 -usip ON -useproxyport OFF
```

**Note:**

The IP address mentioned in the example is a dummy one.

**Add IDS service 2 of type ANY for IDS device 2** After you enable the Content Inspection feature and add the inline profile, you must add an inline service 2 for inline device 2. The service that you add, provides all the inline configuration details.

At the command prompt, type:

```
add service <Service_name_1> <Pvt_IP1> ANY -contentInspectionProfileName
<Inline_Profile_2> -healthmonitor OFF -usip ON -useproxyport OFF
```

**Example:**

```
add service IDS_service 1 1.1.2 ANY 80 -contentInspectionProfileName
IDS_profile2
```

**Note:**

The IP address mentioned in the example is a dummy one.

**Add load balancing virtual server** After you have added the inline profile and the services, you must add a load balancing virtual server for load balancing the services.

At the command prompt, type:

```
add lb vserver <vserver_name> ANY <Pvt_IP3> <port>
```

**Example:**

```
add lb vserver lb-IDS_vserver ANY 1.1.1.2
```

**Bind IDS service 1 to load balancing virtual server** After you add the load balancing virtual server, now bind the load balancing virtual server to the first service.

At the command prompt, type:

```
bind lb vserver <Vserver_name> <Service_name_1>
```

**Example:**

```
bind lb vserver lb-IDS_vserver IDS_service1
```

**Bind IDS service 2 to load balancing virtual server** After you add the load balancing virtual server, now bind the server to the second service.

At the command prompt, type:

```
bind lb vserver <Vserver_name> <Service_name_1>
```

**Example:**

```
bind lb vserver lb-IDS_vserver IDS_service2
```

**Add content inspection action for the IDS service** After you enable the Content Inspection feature, you must add the Content Inspection action for handling the inline request information. Based on the action selected, the appliance drops, resets, blocks, or sends traffic to the IDS device.

At the command prompt, type:

```
add contentInspection action <name> -type <type> (-serverName <string
> [-ifserverdown <ifserverdown>])
```

**Example:**

```
add ContentInspection action IDS_action -type MIRROR -serverName lb-IDS_vserver
```

**Add content inspection policy for inspection** After you create a Content Inspection action, you must add the Content Inspection policy to evaluate requests for service.

At the command prompt, type the following:

```
add contentInspection policy <policy_name> -rule <Rule> -action <action_name>
```

**Example:**

```
add contentInspection policy IDS_pol1 -rule true -action IDS_action
```

**Add content switching or load balancing virtual server of type HTTP/SSL** Add a content switching or load balancing virtual server to accept web traffic. Also you must enable the layer2 connection on the virtual server.

For more information about load balancing, refer to [How load balancing works](#) topic.

At the command prompt, type:

```
add lb vserver <name> <vserver name>
```

**Example:**

```
add lb vserver http_vserver HTTP 1.1.1.1 8080
```

**Bind Content Inspection policy to load balancing virtual server of type HTTP/SSL** You must bind the content switching or load balancing virtual server of type HTTP/SSL to the Content Inspection policy.

At the command prompt, type the following:

```
bind lb vserver <vserver name> -policyName < policy_name > -priority <> -type <REQUEST>
```

**Example:**

```
bind lb vserver http_vserver -policyName IDS_pol1 -priority 100 -type REQUEST
```

**Configure inline service integration using the NetScaler GUI**

1. Navigate to **Security > Content Inspection > ContentInspection Profiles**.
2. In the **ContentInspection Profile** page, click **Add**.
3. In the **Create ContentInspectionProfile** page, set the following parameters.
  - a) Profile Name. Name of the content inspection profile for IDS.
  - b) Type. Select the profile types as MIRROR.
  - c) Connectivity. Layer 2 or Layer 3 interface.
  - d) IP Tunnel. Select the network communication channel between the two networks.
4. Click **Create**.
5. Navigate to **Traffic Management > Load Balancing > Services** and click **Add**.
6. In the **Load Balancing Service** page, enter the content inspection service details.
7. In the **Advanced Settings** section, click **Profiles**.
8. Go to the **Profiles** section and click the **Pencil** icon to add the content inspection profile.
9. Click **OK**.
10. Navigate to **Load Balancing > Servers**. Add a virtual server of type HTTP or SSL.
11. After entering the server details, click **OK** and again **OK**.
12. In the **Advanced Settings** section, click **Policies**.
13. Go the **Policies** section and click the **Pencil** icon to configure the content inspection policy.
14. On the **Choose Policy** page, select **Content Inspection**. Click **Continue**.
15. In the **Policy Binding** section, click "+" to add a Content Inspection policy.
16. In the **Create CI Policy** page, enter a name for the Inline content inspection policy.
17. In the **Action** field, click the "+" sign to create an IDS content inspection action of type MIRROR.
18. In the **Create CI Action** page, set the following parameters.
  - a) Name. Name of the content inspection Inline policy.
  - b) Type. Select the type as MIRROR.
  - c) Server Name. Select the server/service name as Inline devices.
  - d) If Server Down. Select an operation if the server goes down.
  - e) Request Time-out. Select a time-out value. Default values can be used.
  - f) Request Time-out Action. Select a time-out action. Default values can be used.
19. Click **Create**.
20. In the **Create CI Policy** page, enter other details.
21. Click **OK** and **Close**.

For information about the NetScaler GUI configuration for load balancing and replicating the traffic to IDS devices, see [Load Balancing](#).

For information about the NetScaler GUI configuration for load balancing and forwarding the traffic to the back-end origin server after content transformation, see [Load Balancing](#).



## Content inspection statistics for ICAP, IPS, and IDS

January 7, 2021

The content inspection statistics for ICAP, inline device integration (IDS), and Intrusion Prevention System (IPS) devices is a detailed output (summary) of request, response, and server action details.

The content inspection statistics is a collection of statistical data that includes the HTTP/HTTPS request sent for content inspection. HTTP/HTTPS response received from IPS, IDS, and ICAP devices and back-end server action.

To display Content inspection statistics by using the CLI:

At the command prompt, type:

```
> stat contentInspection
```

```
1 ContentInspection Stats
2
3 Inline Statistics
4
5 Requests Total
6 Responses 10
7 Request Bytes Sent 6
8 Request Bytes Received 3235
9 Response Bytes Sent 2977
10 Response Bytes Received 17302
11 Serverdown Reset Action taken 1
12 Serverdown Drop Action taken 0
13 Serverdown BYPASS Action taken 0
14 Inline device Generated Response 3
15
16 Mirror Statistics
17
18 Requests Total
19 Responses 4
20 Requests Bytes Sent 4
21 Responses Bytes Sent 2763
22 Serverdown Reset Action taken 16732
23 Serverdown Drop Action taken 0
24 Serverdown BYPASS Action taken 1
25
26 ICAP Statistics
27
28 REQMOD requests Sent Total
29 RESPMOD requests Sent 6
30 Preview requests 4
31 204 Responses Received 1
32 100 Continue Responses Received 6
33 204 NO content Received 1
34 Adaptive Requests 5
0
```

|    |                                |   |
|----|--------------------------------|---|
| 35 | Adaptive Responses             | 4 |
| 36 | Callout requests Initiated     | 1 |
| 37 | Callout requests completed     | 1 |
| 38 | ICAP Req/Resp Errors handled   | 1 |
| 39 | Serverdown Reset Action taken  | 1 |
| 40 | Serverdown Drop Action taken   | 0 |
| 41 | Serverdown BYPASS Action taken | 1 |
| 42 |                                |   |
| 43 | Done                           |   |

## SSL forward proxy

May 2, 2023


**Note:** SSL forward proxy feature is available with the ADC Premium license.

Web traffic has increased exponentially in recent years, and corporations are increasingly relying on the internet for their day to day operations. That, combined with the emergence of more diverse endpoints, mobility, and BYOD, along with a growing attacker base, is making users easy targets of modern malware. They are increasingly vulnerable to identity theft and having their data compromised. Traditionally, enterprises have inspected HTTP traffic for malware and viruses. They bypassed HTTP-S/TLS traffic, because it was not as prominent. It was used sparingly for content that was sensitive and trusted. But that has changed rapidly as most public internet websites now prefer to use HTTPS to protect user privacy. As a result, the inability to inspect encrypted packets allows malware or intrusions into the enterprise network. The SSL forward proxy solution offers tools that enterprises can use to protect against internet threats.

A proxy is a server that controls all the traffic between users and the Internet or SaaS applications. Since all the traffic passes through this proxy, it performs security-related functions, such as user authentication and URL categorization.

The following figure is an overview of the SSL forward proxy implementation. Traffic flows through the enterprise network from the head office, branch offices, data center, and remote employees. A NetScaler appliance at the edge of the network acts a proxy. The appliance can operate in transparent proxy mode or explicit proxy mode and offers controls to intercept internet traffic, including HTTPS. Policies configured on the appliance determine whether it intercepts, bypasses, or blocks a particular request. Access to restricted sites can be blocked by using URL filtering. A user is authenticated before logging on to the enterprise network. All requests and responses are tagged to identify the user, and internet-site access is categorized. User activity is logged and used to generate reports. If a breach occurs, administrators can isolate the infected system, determine whether the devices of any other users who visited that website are compromised, and take appropriate action. When you integrate NetScaler Application Delivery Management (ADM) with SSL forward proxy, the logged user activity

and the subsequent records in the appliance are exported to NetScaler Console by using [logstream](#). NetScaler Console collates and presents information about the activities of users, from websites visited to the time spent online. It also provides information about bandwidth use and detected threats, such as malware and phishing sites. You can use these key metrics to monitor your network, and use the SSL forward proxy feature to take corrective actions.

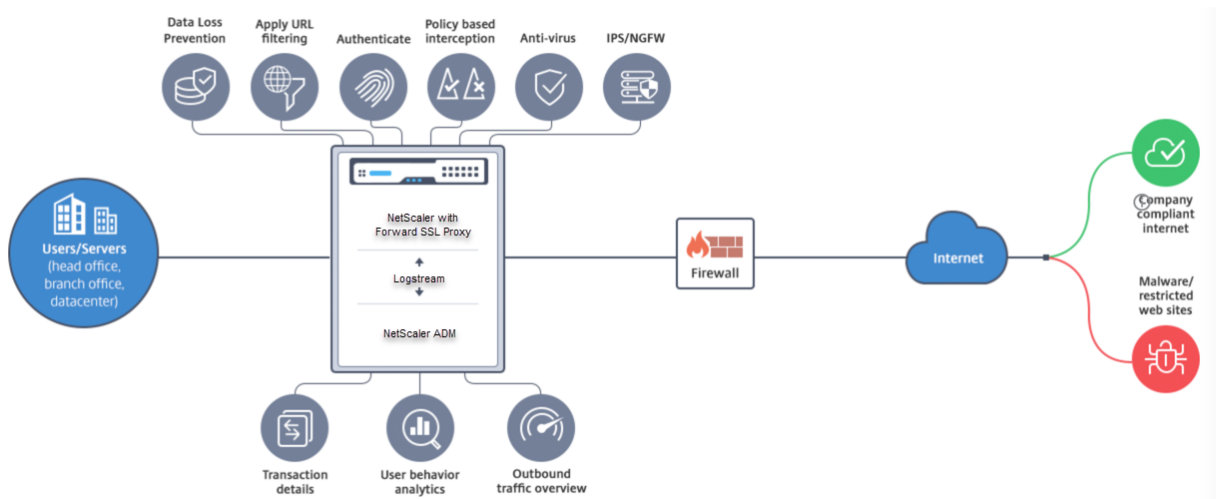

SSL forward proxy enables IT directors to do the following:

- Gain visibility into the otherwise bypassed secure traffic.
- Block access to malicious or unknown sites and avoid infecting users within the enterprise.
- Control access to some websites, such as personal mail, social networking, and job search websites, from the enterprise network.
- Apply intelligent content control policies to ensure maximum user productivity.

## Getting started with the SSL forward proxy feature

May 2, 2023

### Important:

- OCSP check requires an internet connection to check the validity of certificates. If your appliance is not accessible from the internet by using the NSIP address, add access control lists (ACLs) to perform NAT from the NSIP address to the subnet IP (SNIP) address. The SNIP must be able to access the internet. For example,

```

1 add ns acl a1 ALLOW -srcIP = <NSIP> -destIP " != "
 10.0.0.0-10.255.255.255
2
3 add rnat RNAT-1 a1

```

```
4
5 bind rnat RNAT-1 <SNIP>
6
7 apply acls
```

- Specify a DNS name server to resolve domain names.
- Make sure that the date on the appliance is synchronized with the NTP servers. If the date is not synchronized, the appliance cannot effectively verify whether an origin server certificate is an expired one.

To use the SSL forward proxy feature, you must perform the following tasks:

- Add a proxy server in explicit or transparent mode.
- Enable SSL interception.
  - Configure an SSL profile.
  - Add and bind SSL policies to the proxy server.
  - Add and bind a CA certificate-key pair for SSL interception.

**Note:**

An ADC appliance configured in transparent proxy mode can intercept only HTTP and HTTPS protocols. To bypass any other protocol, such as telnet, you must add the following listen policy on the proxy virtual server.

The virtual server now accepts only HTTP and HTTPS incoming traffic.

```
1 set cs vserver transparent-pxy1 PROXY * * -cltTimeout 180 -Listenpolicy
 "CLIENT.TCP.DSTPORT.EQ(80) || CLIENT.TCP.DSTPORT.EQ(443)"`
```

You might need to configure the following features, depending on your deployment:


- Authentication Service (recommended) –to authenticate users. Without the Authentication Service, user activity is based on client IP address.
- URL Filtering –to filter URLs by categories, reputation score, and URL lists.
- Analytics –to view user activity, user risk indicators, bandwidth consumption, and transactions break down in NetScaler Application Delivery Management (ADM).

**Note:** SSL Forward Proxy implements most typical HTTP and HTTPS standards followed by similar products. This implementation is done with no specific browser in mind and is compatible with most common browsers. SSL Forward Proxy has been tested with common browsers and recent versions of Google Chrome, Internet Explorer, and Mozilla Firefox.

## SSL forward proxy wizard

The SSL forward proxy wizard provides administrators with a tool for managing the entire SSL forward proxy deployment by using a web browser. It helps guide the customers to bring up an SSL forward proxy service quickly and helps simplify the configuration by following a sequence of well-defined steps.

1. Navigate to **Security > SSL Forward Proxy**. In **Getting Started**, click **SSL Forward Proxy Wizard**.

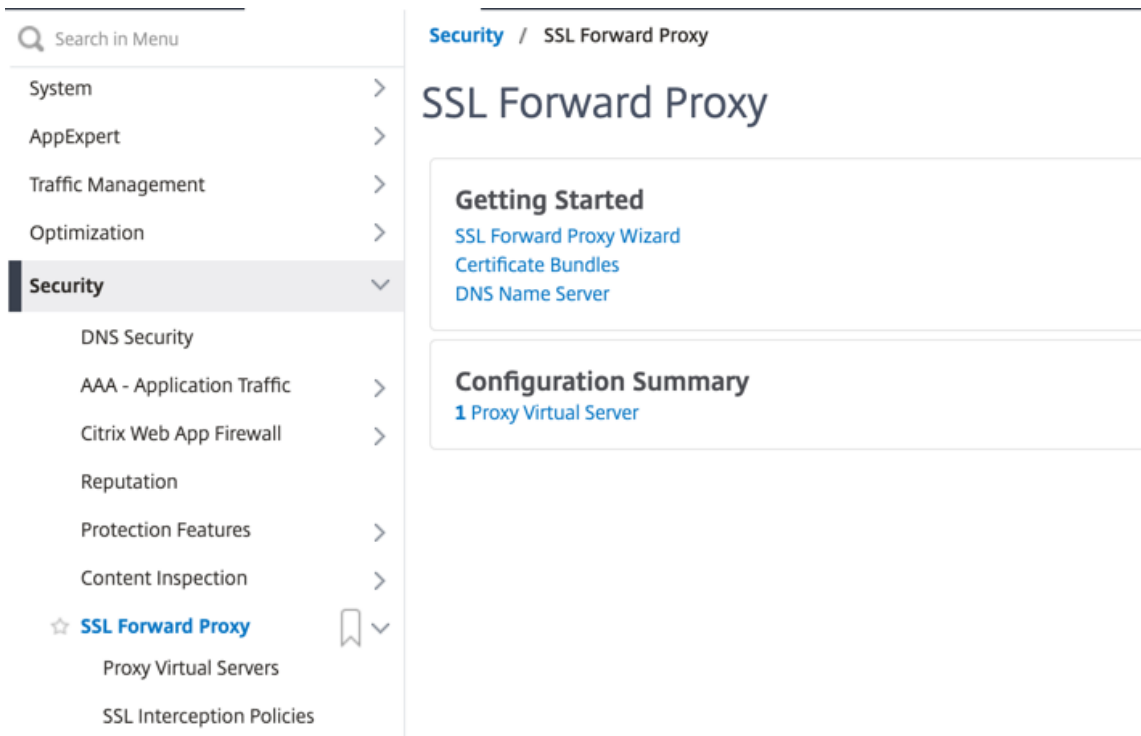

2. Follow the steps in the wizard to configure your deployment.

## Add a listen policy to the transparent proxy server

1. Navigate to **Security > SSL Forward Proxy > Proxy Virtual Servers**. Select the transparent proxy server and click **Edit**.
2. Edit **Basic Settings**, and click **More**.
3. In **Listen priority**, enter 1.
4. In **Listen Policy Expression**, enter the following expression:

```
1 (CLIENT.TCP.DSTPORT.EQ(80) || CLIENT.TCP.DSTPORT.EQ(443))
```

This expression assumes standard ports for HTTP and HTTPS traffic. If you have configured different ports, for example 8080 for HTTP or 8443 for HTTPS, modify the expression to reflect those ports.

## Limitations

SSL forward proxy is not supported in a cluster setup, in admin partitions, and on a NetScaler FIPS appliance.

## Proxy modes

December 16, 2024

NetScaler acts as a client's proxy to connect to the internet and SaaS applications. As a proxy, it accepts all the traffic and determines the traffic's protocol. Unless the traffic is HTTP or SSL, it is forwarded to the destination as is. When the appliance receives a request from a client, it intercepts the request and performs some actions, such as user authentication, site categorization, and redirection. It uses policies to determine which traffic to allow and which traffic to block.

The appliance maintains two different sessions, one between the client and the proxy and the other between the proxy and the origin server. The proxy relies on customer-defined policies to allow or block HTTP and HTTPS traffic. Therefore, it is important that you define policies to bypass sensitive data, such as financial information. The appliance offers a rich set of Layer 4 to Layer 7 traffic attributes and user-identity attributes to create traffic management policies.

For SSL traffic, the proxy verifies the origin server's certificate and establishes a legitimate connection with the server. It then emulates the server certificate, signs it using a CA certificate installed on NetScaler, and presents the created server certificate to the client. You must add the CA certificate as a trusted certificate to the client's browser for the SSL session to be successfully established.

The appliance supports the following transparent and explicit proxy modes:

- **explicit:** In explicit proxy mode, the client must specify an IP address in their browser, unless the organization pushes the setting onto the client's device. This address is the IP address of a proxy server that is configured on NetScaler. All client requests are sent to this IP address.

For explicit proxy, you must configure a content switching virtual server of type PROXY and specify an IP address and a valid port number. Also, when the `markconnReqInval` parameter is set to ON globally on the default HTTP profile, then you must bind another HTTP profile with `markconnReqInval` set to OFF to the content switching virtual server.

**Example to bind a custom HTTP profile to the proxy content switching virtual server:**

```
1 add ns httpprofile custom_http_profile1 -markconnReqInval
 DISABLED
2 set cs vserver swgVS -httpprofileName custom_http_profile1
```

Starting from 14.1-38.x release, NetScaler supports IPv6 DNS queries in the forward proxy for the domain that is hosted with only IPv6 address.

Use the following command on the CLI to set the resolution order to first attempt an IPv4 (A) query, followed by an IPv6 (AAAA) query if the IPv4 query fails:

```
set dns parameter -resolutionOrder AThenAAAAQuery
```

In explicit mode, the NetScaler forward Proxy supports secure, encrypted communication between the client and the Forward Proxy entity. When configuring the Secure forward proxy on NetScaler, you must specify an IP address and port while choosing the SSL\_PROXY type. This setup ensures that the client establishes an encrypted connection to the forward proxy entity. The client must manually specify the IP address and port in their browser unless the organization automates this configuration by pushing the settings to the client's device. This process enables secure, encrypted communication between the client and the forward proxy.

For more information, see [Configure an SSL forward proxy in Secure mode by using the CLI](#) and [Configure an SSL forward proxy in Secure mode by using the GUI](#)

- **transparent:** A transparent proxy, as the name implies, is transparent to the client. That is, the clients might not be aware that a proxy server is mediating their requests. NetScaler is configured in an inline deployment, and transparently accepts all HTTP and HTTPS traffic. For transparent proxy, you must configure a content switching virtual server of type PROXY, with asterisks (\* \*) as the IP address and port. When using the **SSL Forward Proxy Wizard** in the GUI, you do not have to specify an IP address and port.

#### Note

To intercept protocols other than HTTP and HTTPS in transparent proxy mode, you must add a listen policy and bind it to the proxy server.

## Configure an SSL forward proxy by using the CLI

At the command prompt, type:

```
1 add cs vserver <name> PROXY <ipaddress> <port>
```

**Arguments:**

**Name:**

Name for the proxy server. Must begin with an ASCII alphanumeric or underscore (\_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the CS virtual server is created.

The following requirement applies only to the CLI:

If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "my server" or 'my server').

This argument is mandatory. Maximum Length: 127

**IPAddress:**

IP address of the proxy server.

**Port:**

Port number for the proxy server. Minimum value: 1

**Example for explicit proxy:**

```
1 add cs vserver swgVS PROXY 192.0.2.100 80
```

**Example for transparent proxy:**

```
1 add cs vserver swgVS PROXY * *
```

**Add a listen policy to the transparent proxy server by using the GUI**

1. Navigate to **Security > SSL Forward Proxy > Proxy Virtual Servers**. Select the transparent proxy server and click **Edit**.
2. Edit **Basic Settings**, and click **More**.
3. In **Listen priority**, enter 1.
4. In **Listen Policy Expression**, enter the following expression:

```
1 (CLIENT.TCP.DSTPORT.EQ(80) || CLIENT.TCP.DSTPORT.EQ(443))
```

**Note:**

This expression assumes standard ports for HTTP and HTTPS traffic. If you have configured different ports, for example 8080 for HTTP or 8443 for HTTPS, modify the preceding expression to specify those ports.

**Configure an SSL forward proxy in Secure mode by using the CLI**

At the command prompt, type:



```
1 add cs vserver <name> SSL_PROXY <ipaddress> <port>
2
3 Bind ssl vserver <name> -certkeyName server_certkey
```

**Arguments:****Name:**

Name for the proxy server. Must begin with an ASCII alphanumeric or underscore (\_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the CS virtual server is created.

The following requirement applies only to the CLI:

If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "my server" or 'my server').

This argument is mandatory. Maximum Length: 127

**IPAddress:**

IP address of the proxy server.

**Port:**

Port number for the proxy server. Minimum value: 1

**serviceType:**

The protocol type used by the virtual server. Choose **SSL\_PROXY**.

**Configure an SSL forward proxy in Secure mode by using the GUI**

When using the SSL Forward Proxy Wizard in the GUI,

1. Navigate to **Configuration > Security > SSL Forward Proxy**.
2. In the **Getting Started** section, click the **SSL Forward Proxy Wizard** link.
3. In the **SSL Forward Proxy** wizard, click **Get Started** and click **Continue**.
4. In **Protocol**, choose **SSL\_PROXY** and in **Capture Mode**, choose **Explicit**.
5. Fill in other details and click **Continue**.
6. Choose to add or edit the SSL profile and SSL certificate key pair, and click **Continue**.

**Note:**

SSL Interception is not supported with this SSL\_PROXY in explicit mode.

## Block privileged upstream ports

To block privileged upstream ports (<1024) access except ports 80 and 443 using forward proxy, bind the following responder policy to the forward proxy content switching virtual server in explicit mode.

### Using the CLI

At the command prompt, type:

```
1 add responder policy web_only "(HTTP.REQ.METHOD.EQ(CONNECT) && (HTTP.
 REQ.HOSTNAME.PORT.LT(1024) && HTTP.REQ.HOSTNAME.PORT.NE(\":80\") &&
 HTTP.REQ.HOSTNAME.PORT.NE(\":443\") && HTTP.REQ.HOSTNAME.PORT.LENGTH
 .NE(0)) || (HTTP.REQ.URL.AFTER_STR(\":\") .TYPECAST_NUM_AT.NE(80) &&
2 HTTP.REQ.URL.AFTER_STR(\":\") .TYPECAST_NUM_AT.NE(443) && HTTP.REQ.URL.
 AFTER_STR(\":\") .TYPECAST_NUM_AT.LE(1024)))" RESET
3 bind cs vserver <proxy_vs_name> -policyName web_only -priority 9 -
 gotoPriorityExpression END -type REQUEST
```

### Using the GUI

1. Navigate to **Security > SSL Forward Proxy > Proxy Virtual Servers**.
2. Add a proxy virtual server or select a virtual server and click **Edit**.
3. In **Advanced Settings**, click **Policies**.
4. In **Choose Policy**, select **Responder**. Click **Continue**.
5. Click **Add Binding**.
6. In **Policy Binding**, click **Click to select**.
7. Click **Add** to add a new policy.
8. Give the policy name, select the action as RESET, and update the expression accordingly for the GUI.
9. Click **Create**.
10. Click **Select**.
11. Under **Policy Binding**, assign a priority and click **Bind**.
12. Click **Close**.
13. Click **Done**.

## SSL interception

May 2, 2023

A NetScaler appliance configured for SSL interception acts as a proxy. It can intercept and decrypt SSL/TLS traffic, inspect the unencrypted request, and enable an admin to enforce compliance rules and security checks. SSL interception uses a policy that specifies which traffic to intercept, block, or allow. For example, traffic to and from financial websites, such as banks, must not be intercepted, but other traffic can be intercepted, and blacklisted sites can be identified and blocked. Citrix recommends that you configure one generic policy to intercept traffic and more specific policies to bypass some traffic.

The client and the proxy establish an HTTPS/TLS handshake. The proxy establishes another HTTP-S/TLS handshake with the server and receives the server certificate. The proxy verifies the server certificate on behalf of the client, and also checks the validity of the server certificate by using the Online Certificate Status Protocol (OCSP). It regenerates the server certificate, signs it by using the key of the CA certificate installed on the appliance, and presents it to the client. Therefore, one certificate is used between the client and the NetScaler appliance, and another certificate between the appliance and the back-end server.

### **Important**

The CA certificate that is used to sign the server certificate must be preinstalled on all the client devices, so that the regenerated server certificate is trusted by the client.

For intercepted HTTPS traffic, the proxy server decrypts the outbound traffic, accesses the clear text HTTP request, and can use any Layer 7 application to process the traffic, such as by looking into the plain text URL and allowing or blocking access based on the corporate policy and URL reputation. If the policy decision is to allow access to the origin server, the proxy server forwards the re-encrypted request to the destination service (on the origin server). The proxy decrypts the response from the origin server, accesses the clear text HTTP response, and optionally applies any policies to the response. The proxy then reencrypts the response and forwards it to the client. If the policy decision is to block the request to the origin server, the proxy can send an error response, such as HTTP 403, to the client.

To perform SSL interception, in addition to the proxy server configured earlier, you must configure the following on the ADC appliance:

- SSL profile
- SSL policy
- CA certificate store
- SSL-error autolearning and caching

### **Note:**

HTTP/2 traffic is not intercepted by the SSL Interception feature.

## SSL interception certificate store

An SSL certificate, which is a part of any SSL transaction, is a digital data form (X509) that identifies a company (domain) or an individual. An SSL certificate is issued by a certificate authority (CA). A CA can be private or public. Certificates issued by public CAs, such as Verisign, are trusted by applications that conduct SSL transactions. These applications maintain a list of CAs that they trust.

As a forward proxy, the ADC appliance performs encryption and decryption of traffic between a client and a server. It acts as a server to the client (user) and as a client to the server. Before an appliance can process HTTPS traffic, it must validate the identity of a server to prevent any fraudulent transactions. Therefore, as a client to the origin server, the appliance must verify the origin server certificate before accepting it. To verify a server certificate, all the certificates (for example, root and intermediate certificates) that are used to sign and issue the server certificate must be present on the appliance. A default set of CA certificates is preinstalled on an appliance. The appliance can use these certificates to verify almost all the common origin-server certificates. This default set cannot be modified. However, if your deployment requires more CA certificates, you can create a bundle of such certificates and import the bundle to the appliance. A bundle can also contain a single certificate.

When you import a certificate bundle to the appliance, the appliance downloads the bundle from the remote location and, after verifying that the bundle contains only certificates, installs it on the appliance. You must apply a certificate bundle before you can use it to validate a server certificate. You can also export a certificate bundle for editing or to store it in an offline location as a backup.

### Import and apply a CA certificate bundle on the appliance by using the CLI

At the command prompt, type:

```
1 import ssl certBundle <name> <src>
2 apply ssl certBundle <name>
```

```
1 show ssl certBundle
```

#### ARGUMENTS:

##### Name:

Name to assign to the imported certificate bundle. Must begin with an ASCII alphanumeric or underscore (\_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. The following requirement applies only to the CLI:

If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "my file" or 'my file').

Maximum Length: 31

**src:**

URL specifying the protocol, host, and path, including file name, to the certificate bundle to be imported or exported. For example, `http://www.example.com/cert_bundle_file`.

**NOTE:** The import fails if the object to be imported is on an HTTPS server that requires client certificate authentication for access.

Maximum Length: 2047

**Example:**

```
1 import ssl certbundle swg-certbundle http://www.example.com/cert_bundle
2 apply ssl certBundle swg-certbundle
```

```
1 show ssl certbundle
2
3 Name : swg-certbundle(Inuse)
4
5 URL : http://www.example.com/cert_bundle
6
7 Done
```

**Import and apply a CA certificate bundle on the appliance by using the GUI**

1. Navigate to **Security > SSL Forward Proxy > Getting Started > Certificate Bundles**.
2. Do one of the following:
  - Select a certificate bundle from the list.
  - To add a certificate bundle, click “+” and specify a name and source URL. Click **OK**.
3. Click **OK**.

**Remove a CA certificate bundle from the appliance by using the CLI**

At the command prompt, type:

```
1 remove certBundle <cert bundle name>
```

**Example:**

```
1 remove certBundle mytest-cacert
```

**Export a CA certificate bundle from the appliance by using the CLI**

At the command prompt, type:

```
1 export certBundle <cert bundle name> <Path to export>
```

**ARGUMENTS:****Name:**

Name to assign to the imported certificate bundle. Must begin with an ASCII alphanumeric or underscore (\_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. The following requirement applies only to the CLI:

If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "my file" or 'my file').

Maximum Length: 31

**src:**

URL specifying the protocol, host, and path, including file name, to the certificate bundle to be imported or exported. For example, [http://www.example.com/cert\\_bundle\\_file](http://www.example.com/cert_bundle_file).

**NOTE:** The import fails if the object to be imported is on an HTTPS server that requires client certificate authentication for access.

Maximum Length: 2047

**Example:**

```
1 export certBundle mytest-cacert http://192.0.2.20/
```

**Import, apply, and verify a CA certificate bundle from the Mozilla CA certificate store**

At the command prompt, type:

```
1 > import certbundle mozilla_public_ca https://curl.haxx.se/ca/cacert.
 pem
2 Done
```

To apply the bundle, type:

```
1 > apply certbundle mozilla_public_ca
2 Done
```

To verify the certificate bundle in use, type:

```
1 > sh certbundle | grep mozilla
2 Name : mozilla_public_ca (Inuse)
```

## Limitations

- Certificate bundles are not supported in a cluster setup, or on a partitioned appliance.
- TLSv1.3 protocol is not supported with SSL Forward Proxy.

## SSL policy infrastructure for SSL interception

A policy acts like a filter on incoming traffic. Policies on the ADC appliance help define how to manage proxied connections and requests. The processing is based on the actions that are configured for that policy. That is, data in connection requests is compared to a rule specified in the policy, and the action is applied to connections that match the rule (expression). After defining an action to assign to the policy and create the policy, you must bind it to a proxy server, so that it applies to traffic flowing through that proxy server.

An SSL policy for SSL interception evaluates incoming traffic and applies a predefined action to requests that match a rule (expression). A decision to intercept, bypass, or reset a connection is made based on the defined SSL policy. You can configure one of three actions for a policy—INTERCEPT, BYPASS, or RESET. You must specify an action when you create a policy. To put a policy into effect, you must bind it to a proxy server on the appliance. To specify that a policy is intended for SSL interception, you must specify the type (bind point) as INTERCEPT\_REQ when you bind the policy to a proxy server. When unbinding a policy, you must specify the type as INTERCEPT\_REQ.

### Note:

The proxy server cannot make a decision to intercept unless you specify a policy.

Traffic interception can be based on any SSL handshake attribute. The most commonly used is the SSL domain. The SSL domain is usually indicated by the attributes of the SSL handshake. It can be the Server Name Indicator value extracted from the SSL Client Hello message, if present, or the Server Alternate Name (SAN) value extracted from the origin server certificate. The SSL interception policy presents a special attribute, DETECTED\_DOMAIN. This attribute makes it easier for the customers to author interception policies based on the SSL domain from the origin server certificate. The customer can match the domain name against a string, URL list (URL set or [patset](#)), or a URL category derived from the domain.

## Create an SSL policy by using the CLI

At the command prompt, type:

```
1 add ssl policy <name> -rule <expression> -action <string>
```

### Examples:

The following examples are for policies with expressions that use the `detected_domain` attribute to check for a domain name.

Do not intercept traffic to a financial institution, such as XYZBANK

```
1 add ssl policy pol1 -rule client.ssl.detected_domain.contains("XYZBANK") -action BYPASS
```

Do not allow a user to connect to YouTube from the corporate network

```
1 add ssl policy pol2 -rule client.ssl.client.ssl.detected_domain.url_categorize(0,0).category.eq("YouTube") -action RESET
```

Intercept all user traffic

```
1 add ssl policy pol3 -rule true -action INTERCEPT
```

If the customer doesn't want to use the `detected_domain`, they can use any of the SSL handshake attributes to extract and infer the domain.

For example, a domain name is not found in the SNI extension of the client hello message. The domain name must be taken from the origin server certificate. The following examples are for policies with expressions that check for a domain name in the subject name of the origin server certificate.

Intercept all user traffic to any Yahoo domain

```
1 add ssl policy pol4 -rule client.ssl.origin_server_cert.subject.contains("yahoo") -action INTERCEPT
```

Intercept all user traffic for the category "Shopping/Retail"

```
1 add ssl policy pol_url_category -rule client.ssl.origin_server_cert.subject.URL_CATEGORIZE(0,0).CATEGORY.eq("Shopping/Retail") -action INTERCEPT
```

Intercept all user traffic to an uncategorized URL

```
1 add ssl policy pol_url_category -rule client.ssl.origin_server_cert.subject.url_categorize(0,0).category.eq("Uncategorized") -action INTERCEPT
```

The following examples are for policies that match the domain against an entry in a URL set.

Intercept all user traffic if the domain name in SNI matches an entry in the URL set "top100"

```
1 add ssl policy pol_url_set -rule client.ssl.client_hello.SNI.URLSET_MATCHES_ANY("top100") -action INTERCEPT
```

Intercept all user traffic of the domain name if the origin server certificate matches an entry in the URL set "top100"

---



```
1 add ssl policy pol_url_set -rule client.ssl.origin_server_cert.subject
 .URLSET_MATCHES_ANY("top100") -action INTERCEPT
```

### Create an SSL policy to a proxy server by using the GUI

1. Navigate to **Traffic Management > SSL > Policies**.
2. On the **SSL Policies** tab, click **Add** and specify the following parameters:
  - Policy name
  - Policy action –Select from intercept, bypass, or reset.
  - Expression
3. Click **Create**.

### Bind an SSL policy to a proxy server by using the CLI

At the command prompt, type:

```
1 bind ssl vserver <vServerName> -policyName <string> -priority <
 positive_integer> -type INTERCEPT_REQ
```

#### Example:

```
1 bind ssl vserver <name> -policyName pol1 -priority 10 -type
 INTERCEPT_REQ
```

### Bind an SSL policy to a proxy server by using the GUI

1. Navigate to **Security > SSL Forward Proxy > Proxy Virtual Servers**.
2. Select a virtual server and click **Edit**.
3. In **Advanced Settings**, click **SSL Policies**.
4. Click inside the **SSL Policy** box.
5. In **Select Policy**, select a policy to bind.
6. In **Type**, select **INTERCEPT\_REQ**.
7. Click **Bind** and then click **OK**.

### Unbind an SSL policy to a proxy server by using the CLI

At the command prompt, type:

```
1 unbind ssl vserver <vServerName> -policyName <string> -type
 INTERCEPT_REQ
```

## SSL expressions used in SSL policies

| Expression                                   | Description                                                                                                                                                                                                                                    |
|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>CLIENT.SSL.CLIENT_HELLO.SNI.*</code>   | Returns the SNI extension in a string format. Evaluate the string to see if it contains the specified text. Example:<br><pre>client.ssl.client_hello.sni.contains( "xyz.com" )</pre>                                                           |
| <code>CLIENT.SSL.ORIGIN_SERVER_CERT.*</code> | Returns a certificate, received from a back-end server, in a string format. Evaluate the string to see if it contains the specified text. Example:<br><pre>client.ssl.origin_server_cert.subject.contains( "xyz.com"</pre>                     |
| <code>CLIENT.SSL.DETECTED_DOMAIN.*</code>    | Returns a domain, either from the SNI extension or from the origin server certificate, in a string format. Evaluate the string to see if it contains the specified text. Example:<br><pre>client.ssl.detected_domain.contains( "xyz.com"</pre> |

## SSL error autolearning


The appliance adds a domain to the SSL bypass list if learning mode is on. The learning mode is based on the SSL alert message received from either a client or an origin server. That is, learning depends the client or server sending an alert message. There is no learning if an alert message is not sent. The appliance learns if any of the following conditions are met:

1. A request for a client certificate is received from the server.
2. Any one of the following alerts is received as part of the handshake:
  - BAD\_CERTIFICATE
  - UNSUPPORTED\_CERTIFICATE
  - CERTIFICATE\_REVOKED
  - CERTIFICATE\_EXPIRED
  - CERTIFICATE\_UNKNOWN
  - UNKNOWN\_CA (If a client uses pinning, it sends this alert message if it receives a server certificate.)
  - HANDSHAKE\_FAILURE

To enable learning, you must enable the error cache and specify the memory reserved for learning.

### Enable learning by using the GUI

1. Navigate to **Traffic Management > SSL**.
2. In **Settings**, click **Change advanced SSL settings**.
3. In **SSL Interception**, select **SSL Interception Error Cache**.
4. In **SSL Interception Max Error Cache Memory**, specify the memory (in bytes) to reserve.

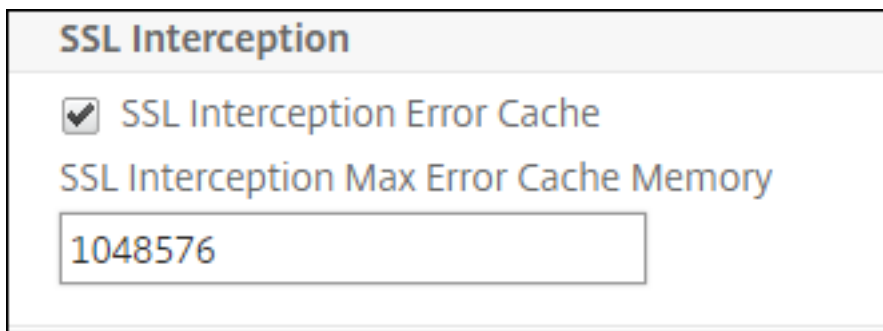

5. Click **OK**.

### Enable learning by using the CLI

At the command prompt type:

```
1 set ssl parameter -ssliErrorCache (ENABLED | DISABLED) -
 ssliMaxErrorCacheMem <positive_integer>
```

#### Arguments:

##### ssliErrorCache:

Enable or disable dynamic learning, and cache the learned information to make subsequent decisions to intercept or bypass requests. When enabled, the appliance performs a cache lookup to decide whether to bypass the request.

Possible values: ENABLED, DISABLED

Default value: DISABLED

##### ssliMaxErrorCacheMem:

Specify the maximum memory, in bytes, that can be used to cache the learned data. This memory is used as an LRU cache so that the old entries are replaced with new entries after the set memory limit is exhausted. A value of 0 decides the limit automatically.

Default value: 0

Minimum value: 0

Maximum value: 4294967294

## SSL profile

An SSL profile is a collection of SSL settings, such as ciphers and protocols. A profile is helpful if you have common settings for different servers. Instead of specifying the same settings for each server, you can create a profile, specify the settings in the profile, and then bind the profile to different servers. If a custom front-end SSL profile is not created, the default front-end profile is bound to client-side entities. This profile enables you to configure settings for managing the client-side connections.

For SSL interception, you must create an SSL profile and enable SSL interception in the profile. A default cipher group is bound to this profile, but you can configure more ciphers to suit your deployment. Bind an SSL interception CA certificate to this profile and then bind the profile to a proxy server. For SSL interception, the essential parameters in a profile are the ones used for the following actions:

- Check the OCSP status of the origin server certificate.
- Trigger client renegotiation if the origin server requests renegotiation.
- Verify the origin server certificate before reusing the front-end SSL session.

Use the default back-end profile when communicating with the origin servers. Set any server-side parameters, such as cipher suites, in the default back-end profile. A custom back-end profile is not supported.

For examples of the most commonly used SSL settings, see “Sample Profile” at the end of this section.

Cipher/protocol support differs on the internal and external network. In the following tables, the connection between the users and an ADC appliance is the internal network. The external network is between the appliance and the internet.

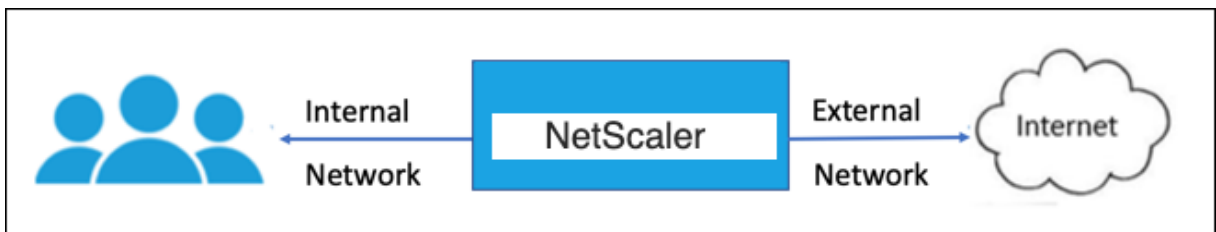


Table 1: Cipher/protocol support matrix for the internal network

See Table 1-Support on virtual server/frontend service/internal service in [Ciphers available on the NetScaler appliances](#).

Table 2: Cipher/protocol support matrix for the external network

See Table 2-Support on back-end services in [Ciphers available on the NetScaler appliances](#).

### **Add an SSL profile and enable SSL interception by using the CLI**

At the command prompt, type:

```
add ssl profile <name> -sslinterception ENABLED -ssliReneg (ENABLED
| DISABLED)-ssliOCSPCheck (ENABLED | DISABLED)-ssliMaxSessPerServer
<positive_integer>
```

#### **Arguments:**

##### **sslInterception:**

Enable or disable interception of SSL sessions.

Possible values: ENABLED, DISABLED

Default value: DISABLED

##### **ssliReneg:**

Enable or disable triggering client renegotiation when a renegotiation request is received from the origin server.

Possible values: ENABLED, DISABLED

Default value: ENABLED

##### **ssliOCSPCheck:**

Enable or disable OCSP check for an origin-server certificate.

Possible values: ENABLED, DISABLED

Default value: ENABLED

##### **ssliMaxSessPerServer:**

Maximum number of SSL sessions to be cached per dynamic origin server. A unique SSL session is created for each SNI extension received from the client in a client hello message. The matching session is used for server-session reuse.

Default value: 10

Minimum value: 1

Maximum value: 1000

#### **Example:**

```
1 add ssl profile swg_ssl_profile -sslinterception ENABLED
2
3 Done
4
5 sh ssl profile swg_ssl_profile
6
7 1) Name: swg_ssl_profile (Front-End)
8
9 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1
 .1: ENABLED TLSv1.2: ENABLED
10
11 Client Auth: DISABLED
12
13 Use only bound CA certificates: DISABLED
14
15 Strict CA checks: NO
16
17 Session Reuse: ENABLED
 Timeout: 120 seconds
18
19 DH: DISABLED
20
21 DH Private-Key Exponent Size Limit: DISABLED
 Ephemeral RSA: ENABLED
 Refresh Count: 0
22
23 Deny SSL Renegotiation
 ALL
24
25 Non FIPS Ciphers: DISABLED
26
27 Cipher Redirect: DISABLED
28
29 SSL Redirect: DISABLED
30
31 Send Close-Notify: YES
32
33 Strict Sig-Digest Check: DISABLED
34
35 Push Encryption Trigger: Always
36
37 PUSH encryption trigger timeout: 1 ms
38
39 SNI: DISABLED
40
41 OCSP Stapling: DISABLED
42
43 Strict Host Header check for SNI enabled SSL sessions:
 NO
44
45 Push flag: 0x0 (Auto)
46
47 SSL quantum size: 8 kB
```

```
48
49 Encryption trigger timeout 100 mS
50
51 Encryption trigger packet count: 45
52
53 Subject/Issuer Name Insertion Format: Unicode
54
55 SSL Interception: ENABLED
56
57 SSL Interception OCSP Check: ENABLED
58
59 SSL Interception End to End Renegotiation: ENABLED
60
61 SSL Interception Server Cert Verification for Client
 Reuse: ENABLED
62
63 SSL Interception Maximum Reuse Sessions per Server: 10
64
65 Session Ticket: DISABLED Session Ticket
 Lifetime: 300 (secs)
66
67 HSTS: DISABLED
68
69 HSTS IncludeSubDomains: NO
70
71 HSTS Max-Age: 0
72
73 ECC Curve: P_256, P_384, P_224, P_521
74
75 1) Cipher Name: DEFAULT Priority :1
76
77 Description: Predefined Cipher Alias
78
79 Done
```

### Bind an SSL interception CA certificate to an SSL profile by using the CLI

At the command prompt, type:

```
bind ssl profile <name> -ssliCACertkey <ssli-ca-cert>
```

#### Example:

```
1 bind ssl profile swg_ssl_profile -ssliCACertkey swg_ca_cert
2
3 Done
4
5 sh ssl profile swg_ssl_profile
6
7 1) Name: swg_ssl_profile (Front-End)
8
```

```

9 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1
 .1: ENABLED TLSv1.2: ENABLED
10
11 Client Auth: DISABLED
12
13 Use only bound CA certificates: DISABLED
14
15 Strict CA checks: NO
16
17 Session Reuse: ENABLED
 Timeout: 120 seconds
18
19 DH: DISABLED
20
21 DH Private-Key Exponent Size Limit: DISABLED
 Ephemeral RSA: ENABLED
 Refresh Count: 0
22
23 Deny SSL Renegotiation
 ALL
24
25 Non FIPS Ciphers: DISABLED
26
27 Cipher Redirect: DISABLED
28
29 SSL Redirect: DISABLED
30
31 Send Close-Notify: YES
32
33 Strict Sig-Digest Check: DISABLED
34
35 Push Encryption Trigger: Always
36
37 PUSH encryption trigger timeout: 1 ms
38
39 SNI: DISABLED
40
41 OCSP Stapling: DISABLED
42
43 Strict Host Header check for SNI enabled SSL sessions:
 NO
44
45 Push flag: 0x0 (Auto)
46
47 SSL quantum size: 8 kB
48
49 Encryption trigger timeout 100 mS
50
51 Encryption trigger packet count: 45
52
53 Subject/Issuer Name Insertion Format: Unicode
54
55 SSL Interception: ENABLED

```



```
56
57 SSL Interception OCSP Check: ENABLED
58
59 SSL Interception End to End Renegotiation: ENABLED
60
61 SSL Interception Server Cert Verification for Client
 Reuse: ENABLED
62
63 SSL Interception Maximum Reuse Sessions per Server: 10
64
65 Session Ticket: DISABLED Session Ticket
 Lifetime: 300 (secs)
66
67 HSTS: DISABLED
68
69 HSTS IncludeSubDomains: NO
70
71 HSTS Max-Age: 0
72
73 ECC Curve: P_256, P_384, P_224, P_521
74
75 1) Cipher Name: DEFAULT Priority :1
76
77 Description: Predefined Cipher Alias
78
79 1) SSL Interception CA CertKey Name: swg_ca_cert
80
81 Done
```

### Bind an SSL interception CA certificate to an SSL profile by using the GUI

1. Navigate to **System > Profiles > SSL Profile**.
2. Click **Add**.
3. Specify a name for the profile.
4. Enable **SSL Sessions Interception**.
5. Click **OK**.
6. In **Advanced Settings**, click **Certificate Key**.
7. Specify an SSL interception CA certificate key to bind to the profile.
8. Click **Select** and then click **Bind**.
9. Optionally, configure ciphers to suit your deployment.
  - Click the edit icon, and then click **Add**.
  - Select one or more cipher groups, and click the right arrow.
  - Click **OK**.

10. Click **Done**.

### Bind an SSL profile to a proxy server by using the GUI

1. Navigate to **Security > SSL Forward Proxy > Proxy Virtual Servers**, and add a server or select a server to modify.
2. In **SSL Profile**, click the edit icon.
3. In the **SSL Profile** list, select the SSL profile that you created earlier.
4. Click **OK**.
5. Click **Done**.

### Sample Profile:

```
1 Name: swg_ssl_profile (Front-End)
2
3 SSLv3: DISABLED TLSv1.0: ENABLED TLSv1
4 .1: ENABLED TLSv1.2: ENABLED
5
6 Client Auth: DISABLED
7
8 Use only bound CA certificates: DISABLED
9
10 Strict CA checks: NO
11
12 Session Reuse: ENABLED
13 Timeout: 120 seconds
14
15 DH: DISABLED
16
17 DH Private-Key Exponent Size Limit: DISABLED
18 Ephemeral RSA: ENABLED
19 Refresh Count: 0
20
21 Deny SSL Renegotiation
22 ALL
23
24 Non FIPS Ciphers: DISABLED
25
26 Cipher Redirect: DISABLED
27
28 SSL Redirect: DISABLED
29
30 Send Close-Notify: YES
31
32 Strict Sig-Digest Check: DISABLED
33
34 Push Encryption Trigger: Always
35
36 PUSH encryption trigger timeout: 1 ms
```

```

33 SNI: DISABLED
34
35 OCSP Stapling: DISABLED
36
37 Strict Host Header check for SNI enabled SSL sessions:
38 NO
39
39 Push flag: 0x0 (Auto)
40
41 SSL quantum size: 8 kB
42
43 Encryption trigger timeout 100 mS
44
45 Encryption trigger packet count: 45
46
47 Subject/Issuer Name Insertion Format: Unicode
48
49 SSL Interception: ENABLED
50
51 SSL Interception OCSP Check: ENABLED
52
53 SSL Interception End to End Renegotiation: ENABLED
54
55 SSL Interception Maximum Reuse Sessions per Server: 10
56
57 Session Ticket: DISABLED Session Ticket
58 Lifetime: 300 (secs)
59
59 HSTS: DISABLED
60
61 HSTS IncludeSubDomains: NO
62
63 HSTS Max-Age: 0
64
65 ECC Curve: P_256, P_384, P_224, P_521
66
67 1) Cipher Name: DEFAULT Priority :1
68
69 Description: Predefined Cipher Alias
70
71 1) SSL Interception CA CertKey Name: swg_ca_cert

```

## User identity management

May 2, 2023

An increasing number of security breaches and the growing popularity of mobile devices has emphasized the need to ensure that use of the external internet is compliant with the corporate policies. Only authorized users must be allowed access to external resources provisioned by the corporate person-

nel. Identity Management makes it possible by verifying the identity of a person or a device. It does not determine what tasks the individual can take or what files the individual can see.

An SSL forward proxy deployment identifies the user before allowing access to the internet. All requests and responses from the user are inspected. User activity is logged, and records are exported to the NetScaler Application Delivery Management (ADM) for reporting. In NetScaler Console, you can view the statistics about the user activities, transactions, and bandwidth consumption.

By default, only the user's IP address is saved, but you can configure the feature to record more details about the user. You can use this identity information to create richer internet usage policies for specific users.

The NetScaler appliance supports the following authentication modes for an explicit-proxy configuration.

- **Lightweight Directory Access Protocol (LDAP).** Authenticates the user through an external LDAP authentication server. For more information, see [LDAP authentication Policies](#).
- **RADIUS.** Authenticates the user through an external RADIUS server. For more information, see [RADIUS Authentication](#).
- **TACACS+.** Authenticates the user through an external Terminal Access Controller Access-Control System (TACACS) authentication server. For more information, see [TACACS authentication Policies](#).
- **Negotiate.** Authenticates the user through a Kerberos authentication server. If there is an error in Kerberos authentication, the appliance uses NTLM authentication. For more information, see [Negotiate authentication Policies](#).

For transparent proxy, only IP-based LDAP authentication is supported. When a client request is received, the proxy authenticates the user by checking an entry for the client IP address in the active directory. It then creates a session based on the user IP address. However, if you configure the `ssoNameAttribute` in an LDAP action, a session is created by using the user name instead of the IP address. Classic policies are not supported for authentication in a transparent proxy setup.

#### Note

For explicit proxy, you must set the LDAP login name to **sAMAccountName**. For transparent proxy, you must set the LDAP login name to **networkAddress** and `attribute1` to **sAMAccountName**.

#### Example for explicit proxy:

```
1 add authentication ldapAction swg-auth-action-explicit -serverIP
 10.105.157.116 -ldapBase "CN=Users,DC=CTXNSSFB,DC=COM" -ldapBindDn "
 CN=Administrator,CN=Users,DC=CTXNSSFB,DC=COM" -ldapBindDnPassword
 freebds123$ -ldapLoginName sAMAccountName
```

#### Example for transparent proxy:

```
1 add authentication ldapAction swg-auth-action-explicit -serverIP
 10.105.157.116 -ldapBase "CN=Users,DC=CTXNSSFB,DC=COM" -ldapBindDn "
 CN=Administrator,CN=Users,DC=CTXNSSFB,DC=COM" -ldapBindDnPassword
 freebsd123$ -ldapLoginName networkAddress -authentication disable -
 Attribute1 sAMAccountName
```

## Set up user authentication by using the CLI

At the command prompt type:

```
1 add authentication vsServer <vsServer name> SSL
2
3 bind ssl vsServer <vsServer name> -certKeyName <certkey name>
4
5 add authentication ldapAction <action name> -serverIP <ip_addr> -
 ldapBase <string> -ldapBindDn <string> -ldapBindDnPassword -
 ldapLoginName <string>
6
7 add authentication Policy <policy name> -rule <expression> -action <
 string>
8
9 bind authentication vsServer <vsServer name> -policy <string> -priority <
 positive_integer>
10
11 set cs vsServer <name> -authn401 ON -authnVsName <string>
```

### Arguments:

#### VsServer name:

Name of the authentication virtual server to which to bind the policy.

Maximum Length: 127

#### serviceType:

Protocol type of the authentication virtual server. Always SSL.

Possible values: SSL

Default value: SSL

#### Action name:

Name for the new LDAP action. Must begin with a letter, number, or the underscore character (\_), and must contain only letters, numbers, and the hyphen (-), period (.) pound (#), space ( ), at (@), equals (=), colon (:), and underscore characters. Cannot be changed after the LDAP action is added. The following requirement applies only to the CLI:

If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, "my authentication action" or 'my authentication action').

Maximum Length: 127

**serverIP:**

IP address assigned to the LDAP server.

**ldapBase:**

Base (node) from which to start LDAP searches. If the LDAP server is running locally, the default value of base is `dc=netScaler,dc=com`. Maximum Length: 127

**ldapBindDn:**

Full distinguished name (DN) that is used to bind to the LDAP server.

Default: `cn=Manager,dc=netScaler,dc=com`

Maximum Length: 127

**ldapBindDnPassword:**

Password used to bind to the LDAP server.

Maximum Length: 127

**ldapLoginName:**

LDAP login name attribute. The NetScaler appliance uses the LDAP login name to query external LDAP servers or Active Directories. Maximum Length: 127

**Policy name:**

Name for the advance AUTHENTICATION policy. Must begin with a letter, number, or the underscore character (`_`), and must contain only letters, numbers, and the hyphen (`-`), period (`.`) pound (`#`), space (), at (`@`), equals (`=`), colon (`:`), and underscore characters. Cannot be changed after an AUTHENTICATION policy is created. The following requirement applies only to the CLI:

If the name includes one or more spaces, enclose the name in double or single quotation marks (for example, `"my authentication policy"` or `'my authentication policy'`).

Maximum Length: 127

**rule:**

Name of the rule, or a Advanced policy expression, that the policy uses to determine whether to attempt to authenticate the user with the AUTHENTICATION server.

Maximum Length: 1499

**action:**

Name of the authentication action to be performed if the policy matches.

Maximum Length: 127

**priority:**

Positive integer specifying the priority of the policy. A lower number specifies a higher priority. Policies are evaluated in the order of their priorities, and the first policy that matches the request is applied. Must be unique within the list of policies bound to the authentication virtual server.

Minimum value: 0

Maximum Value: 4294967295

**Example:**

```
1 add authentication vserver swg-auth-vs SSL
2
3 Done
4
5 bind ssl vserver explicit-auth-vs -certkeyName ns-swg-ca-certkey
6
7 Done
8
9 add authentication ldapAction swg-auth-action-explicit -serverIP
 192.0.2.116 -ldapBase "CN=Users,DC=CTXNSSFB,DC=COM" -ldapBindDn "CN=
 Administrator,CN=Users,DC=CTXNSSFB,DC=COM" -ldapBindDnPassword zzzzz
 -ldapLoginName sAMAccountName
10
11 Done
12
13 add authenticationpolicy swg-auth-policy -rule true -action swg-auth-
 action-explicit
14 Done
15
16 bind authentication vserver swg-auth-vs -policy swg-auth-policy -
 priority 1
17
18 Done
19
20 set cs vserver testswg -authn401 ON -authnVsName swg-auth-vs
21
22 Done
```

**Enable user name logging by using the CLI**

At the command prompt, type:

```
1 set appflow param -AAAUserName ENABLED
```

**Arguments:**

AAAUserName

Enable AppFlow authentication, authorization, and auditing user name logging.

Possible values: ENABLED, DISABLED

Default value: DISABLED

**Example:**

```
1 set appflow param -AAAUserName ENABLED
```

## URL filtering


July 27, 2023

**Note:**  
URL categorisation in the URL filtering feature is deprecated in this release.

URL Filtering provides policy based control of websites by using the information contained in URLs. This feature helps network administrators monitor and control user access to malicious websites on the network.

### Get started

If you are a new user and want to configure URL filtering, you must complete the initial SSL forward proxy setup. To get started with URL Filtering, you must first log on to the SSL forward proxy wizard. The wizard takes you through a series of configuration steps before you apply the URL Filtering policies.

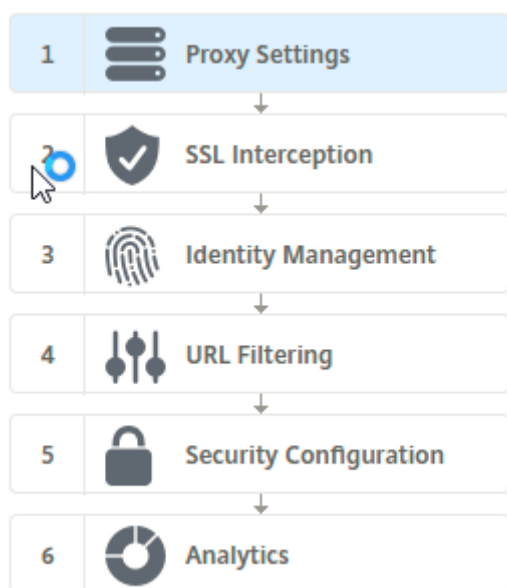



**Note**

Before you begin, be sure you have a valid URL Threat Intelligence feature license installed on your appliance. If you are using a trial version, be sure to purchase a valid license to continue using this feature on the ADC appliance.

**Log on to SSL forward proxy wizard**

The SSL forward proxy wizard guides you through a series of simplified configuration tasks and the right pane displays the corresponding flow sequence. You can use this wizard to apply URL Filtering policies to a URL list or a predefined list of categories.

**Step 1: Configure proxy settings**

First configure a proxy server through which the client accesses the gateway. This server is of type SSL, and it operates in explicit or transparent mode. For more information about proxy server configuration, see [Proxy Modes](#).

**Step 2: Configure SSL interception**

After configuring the proxy server, you must configure the SSL interception proxy to intercept encrypted traffic at the NetScaler appliance. In the case of URL filtering, the SSL proxy intercepts the traffic and does not allow blocked URLs while all other traffic can be bypassed. For more information about configuring SSL interception, see [SSL Interception](#).

**Step 3: Configure identity management**

A user is authenticated before being allowed to log on to the enterprise network. Authentication provides the flexibility to define specific policies for a user or a group of users, based on their roles. For more information about user authentication, see [User Identify Management](#).

**Step 4: Configure URL filtering**

The administrator can apply a URL filtering policy either by using the URL Categorization feature or by using the URL List feature.

[URL Categorization](#). Controls access to websites and webpages by filtering traffic based on a predefined list of categories.

[URL List](#). Controls access to blacklisted websites and webpages by denying access to URLs that are in a URL set imported into the appliance.

**Step 5: Configure security configuration**

This step enables you to configure a reputation score and allow users to control access to the websites by denying access if the score is too low. Your reputation score can range from one to four, and you can configure the threshold at which the score becomes unacceptable. For scores that exceed the threshold, you can select a policy action to allow, block, or redirect traffic. For more information, see [URL Reputation Score](#).

**Step 6: Configure SSL forward proxy analytics**

This step enables you to activate SSL forward proxy analytics for categorizing web traffic, logging URL category in the user transaction logs and viewing traffic analytics. For more information about SSL forward proxy analytics, see [Analytics](#).

**Step 7: Click “Done” to complete the initial configuration and continue managing the URL filtering configuration****URL list**

November 2, 2023

The URL List feature enables enterprise customers to control access to specific websites and website categories. The feature filters websites by applying a responder policy bound to a URL matching algorithm. The algorithm matches the incoming URL against a URL set consisting of up to one million (1,000,000) entries. If the incoming URL request matches an entry in the set, the appliance uses the responder policy to evaluate the request (HTTP/HTTPS) and control access to it.

**URL set types**

Each entry in a URL set can include a URL and, optionally, its metadata (URL category, category groups, or any other related data). For URLs with metadata, the appliance uses a policy expression that evaluates the metadata. For more information, see [URL Set](#).

SSL forward proxy supports custom URL sets. You can also use pattern sets to filter URLs.

**Custom URL set.** You can create a customized URL set with up to 1,000,000 URL entries and import it as a text file into your appliance.

**Pattern set.** An ADC appliance can use pattern sets to filter URLs before granting access to websites. A pattern set is a string-matching algorithm that looks for an exact string match between an incoming URL and up to 5000 entries. For more information, see [Pattern Set](#).

Each URL in an imported URL set can have a custom category in the form of URL metadata. Your organization can host the set and configure the ADC appliance to periodically update the set without requiring manual intervention.

After the set is updated, the NetScaler appliance automatically detects the metadata. The category is now available as a policy expression for evaluating the URL and applying an action such as allow, block, redirect, or notify the user.

### Advanced policy expressions used with URL sets

The following table describes the basic expressions you can use to evaluate incoming traffic.

1. `.URLSET_MATCHES_ANY` - Evaluates to TRUE if the URL exactly matches any entry in the URL set.
2. `.GET_URLSET_METADATA()` - The `GET_URLSET_METADATA()` expression returns the associated metadata if the URL exactly matches any pattern within the URL set. An empty string is returned if there is no match.
3. `.GET_URLSET_METADATA().EQ(<METADATA>)` - `.GET_URLSET_METADATA().EQ(<METADATA>)`
4. `.GET_URLSET_METADATA().TYPECAST_LIST_T(';').GET(0).EQ()` - Evaluates to TRUE if the matched metadata is at the beginning of the category. This pattern can be used to encode separate fields within metadata but match only the first field.
5. `HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL)` - Joins the host and URL parameters, which can then be used for matching.

### Responder action types

**Note:** In the table, `HTTP.REQ.URL` is generalized as `<URL expression>`.

The following table describes the actions that can be applied to incoming internet traffic.

| Responder Action | Description                                              |
|------------------|----------------------------------------------------------|
| Allow            | Allow the request to access the target URL.              |
| Redirect         | Redirect the request to the URL specified as the target. |
| Block            | Deny the request.                                        |

## Prerequisites

Configure a DNS server if you import a URL Set from a host name URL. This configuration is not required if you use an IP address.

At the command prompt, type:

```
add dns nameServer ((<IP> [-local]) | <dnsVserverName>)[-state (
ENABLED | DISABLED)] [-type <type>] [-dnsProfileName <string>]
```

### Example:

```
add dns nameServer 10.140.50.5
```

## Configure a URL list

To configure a URL list, you can use the Citrix SSL forward proxy wizard or the NetScaler command-line interface (CLI). On the NetScaler appliance, you must first configure the responder policy and then bind the policy to a URL set.

Citrix recommends that you use the Citrix SSL forward proxy wizard as the preferred option to configure a URL list. Use the wizard to bind a responder policy to a URL set. Alternatively, you can bind the policy to a pattern set.

### Configure a URL list by using the SSL forward proxy wizard

To configure URL List for HTTPS traffic by using the GUI:

1. Navigate to **Security > SSL Forward Proxy** page.
2. In the details pane, do one of the following:
  - a) Click **SSL Forward Proxy Wizard**.
  - b) Select an existing configuration and click **Edit**.
3. In the **URL Filtering** section, click **Edit**.
4. Select the **URL List** check box to enable the feature.
5. Select a **URL List** policy and Click **Bind**.
6. Click **Continue** and then **Done**.

For more information, see [How to Create a URL List Policy](#).

### Configure a URL list by using the CLI

To configure a URL list, do the following.

1. Configure a proxy virtual server for HTTP and HTTPS traffic.
2. Configure SSL interception for intercepting HTTPS traffic.
3. Configure a URL list containing a URL set for HTTP traffic.
4. Configure URL list containing URL set for HTTPS traffic.
5. Configure a private URL set.

**Note**

If you have already configured an ADC appliance, you can skip steps 1 and 2, and configure with step 3.

**Configuring a proxy virtual server for Internet traffic** The NetScaler appliance supports transparent and explicit proxy virtual servers. To configure a proxy virtual server for internet traffic in explicit mode, do the following:

1. Add a proxy SSL virtual server.
2. Bind a responder policy to the proxy virtual server.

To add a proxy virtual server by using the CLI:

At the command prompt, type:

```
1 add cs vserver <name> <serviceType> <IPAddress> <port>
```

**Example:**

```
1 add cs vserver starcs PROXY 10.102.107.121 80 -cltTimeout 180
```

To bind a responder policy to a proxy virtual server by using the CLI:

```
1 bind ssl vserver <vServerName> -policyName <string> [-priority <positive_integer>]
```

**Note**

If you have already configured the SSL interceptor as part of the NetScaler configuration, you can skip the following procedure.

**Configure SSL interception for HTTPS traffic** To configure SSL interception for HTTPS traffic, do the following:

1. Bind a CA certificate-key pair to the proxy virtual server.
2. Enable the default SSL profile.
3. Create a front-end SSL profile, and bind it to the proxy virtual server and enable SSL interception in the front-end SSL profile.

To bind a CA certificate-key pair to the proxy virtual server by using the CLI:

At the command prompt, type:

```
1 bind ssl vservice <vServerName> -certkeyName <certificate-KeyPairName>
```

To configure a front-end SSL profile by using the CLI:

At the command prompt, type:

```
1 set ssl parameter -defaultProfile ENABLED
2
3 add ssl profile <name> -sslInterception ENABLED -ssliMaxSessPerServer <
 positive_integer>
```

To bind a front-end SSL profile to a proxy virtual server by using the CLI

At the command prompt, type:

```
1 set ssl vservice <vServer name> -sslProfile <name>
```

**Configure a URL list by importing a URL set for HTTP traffic** For information about how to configure a URL Set for HTTP traffic, see [URL Set](#).

**Perform explicit subdomain match** You can now perform an explicit subdomain match for an imported URL set. A new parameter, “subdomainExactMatch” is added to the **import policy URLset** command.

When you enable the parameter, the URL Filtering algorithm performs an explicit subdomain match. For example, if the incoming URL is `news.example.com` and if the entry in the URL set is `example.com`, the algorithm does not match the URLs.

At the command prompt, type:

```
import policy urlset <name> [-overwrite] [-delimiter <character>] [-
rowSeparator <character>] -url [-interval <secs>] [-privateSet] [-
subdomainExactMatch] [-canaryUrl <URL>]
```

#### Example

```
import policy urlset test -url http://10.78.79.80/top-1k.csv -privateSet
-subdomainExactMatch -interval 900
```

**Configure a URL set for HTTPS traffic** To configure a URL Set for HTTPS traffic by using the CLI

At the command prompt type:

```
1 add ssl policy <name> -rule <expression> -action <string> [-undefAction
 <string>] [-comment <string>]
```

**Example:**

```
1 add ssl policy pol1 -rule client.ssl.client_hello.SNI.
 URLSET_MATCHES_ANY("top1m") -action INTERCEPT
```

**To configure a URL set for HTTPS traffic by using the SSL forward proxy wizard** Citrix recommends that you use the SSL forward proxy wizard as the preferred option to configure a URL list. Use the wizard to import a custom URL set and bind to a responder policy.

1. Navigate to **Security > SSL Forward proxy > URL Filtering > URL Lists**.
2. In the details pane, click **Add**.
3. On the **URL List Policy** page, specify the policy name.
4. Select an option to import a URL set.
5. On the **URL List Policy** tab page, select the **Import URL Set** check box and specify the following URL Set parameters.
  - a) URL Set Name—Name of the custom URL set.
  - b) URL—Web address of the location at which to access the URL Set.
  - c) Overwrite—Overwrite a previously imported URL set.
  - d) Delimiter—Character sequence that delimits a CSV file record.
  - e) Row Separator—Row separator used in the CSV file.
  - f) Interval—Interval in seconds, rounded off to the nearest number of seconds equal to 15 minutes, at which the URL set is updated.
  - g) Private Set—Option to prevent exporting the URL set.
  - h) Canary URL—Internal URL for testing whether the content of the URL set is to be kept confidential. The maximum length of the URL is 2047 characters.
6. Select a responder action from the drop-down list.
7. Click **Create** and **Close**.

**Configure a private URL set** If you configure a private URL set and keep its contents confidential, the network administrator might not know the blacklisted URLs in the set. For such cases, you can configure a Canary URL and add it to the URL set. Using the Canary URL, the administrator can request the private URL Set to be used for every lookup request. You can refer to the wizard section for descriptions of each parameter.

To import a URL set by using the CLI:

At the command prompt, type:

```
1 import policy urlset <name> [-overwrite] [-delimiter <character>] [-
 rowSeparator <character>] -url <URL> [-interval <secs>] [-privateSet
] [-canaryUrl <URL>]
```

**Example:**

```
1 import policy urlset test1 -url http://10.78.79.80/alytra/top-1k.csv -
private -canaryUrl http://www.in.gr
```

**Display imported URL set**

You can now display imported URL sets in addition to added URL sets. A new parameter “imported” is added to the `show urlset` command. If you enable this option, the appliance displays all imported URL sets and distinguishes the imported URL sets from the added URL sets.

At the command prompt, type:

```
show policy urlset [<name>] [-imported]
```

**Example**

```
show policy urlset -imported
```

**Configure audit log messaging**

Audit logging enables you to review a condition or a situation in any phase of a URL List process. When a NetScaler appliance receives an incoming URL, if the responder policy has a URL Set advanced policy expression, the audit log feature collects URL Set information in the URL. It stores the details as a log message for any target allowed by audit logging.

The log message contains the following information:

1. Timestamp.
2. Log message type.
3. The predefined log levels (Critical, Error, Notice, Warning, Informational, Debug, Alert, and Emergency).
4. Log message information, such as URL set name, policy action, URL.

To configure audit logging for the URL List feature, you must complete the following tasks:

1. Enable Audit Log.
2. Create Audit Log message action.
3. Set URL List responder policy with Audit Log message action.

For more information, see [Audit Logging](#) topic.



## URL pattern semantics

July 21, 2023

The following table shows the URL patterns used for specifying the list of pages you want to filter. For example, the pattern, `www.example.com/bar` matches only one page at `www.example.com/bar`. To match all the pages whose URL starts with `www.example.com/bar`, you add an asterisk (\*) at the end of the URL.

### Semantics for URL pattern to match metadata mapping

The pattern matching semantics is available in a table format. For more information, see [Pattern Semantics PDF page](#).

## Mapping URL categories

July 27, 2023

**Note:**

URL categorisation in the URL filtering feature is deprecated in this release.

A list of third party categories and category groups. For more information, see [URL Category Mapping page](#).

## Use case: URL filtering by using custom URL set

July 21, 2023

If you are an enterprise customer looking to control access to specific websites and website categories, use a custom URL set bound to a responder policy. Your organization's network infrastructure can use a URL filter to block access to malicious or dangerous websites. For example, websites featuring adult, violence, gaming, drugs, politics, or job portals. In addition to filtering the URLs, you can create a customized list of URLs and import it to the ADC appliance. For example, your organization's policies might call for blocking access to certain websites such as social networking, shopping portals, and job portals.

Each URL in the list can have a custom category in the form of metadata. The organization can host the list of URLs as a URL set on the NetScaler appliance. Configure the appliance to periodically update the set without requiring manual intervention.

After the set is updated, the NetScaler appliance automatically detects the metadata. The responder policy uses the URL metadata (category details) to evaluate the incoming URL and apply an action such as allow, block, redirect, or notify the user.

To do so, configure in your network, you can perform the following tasks:

1. Import a custom URL set
2. Add a custom URL set
3. Configure a custom URL list in the SSL Forward Proxy wizard.

### Import a custom URL set by using the CLI

At the command prompt, type:

```
1 import policy urlset <name> [-overwrite] [-delimiter <character>] [-rowSeparator <character>] -url <URL> [-interval <secs>] [-privateSet] [-canaryUrl <URL>]
2
3 import policy urlset test1 -url http://10.78.79.80/alytra/top-1k.csv
```

### Add a custom URL set by using the CLI

At the command prompt, type:

```
add urlset <urlset_name>
```

**Example:**

```
add urlset test1
```

### Configure a URL list by using the SSL Forward Proxy wizard

Citrix recommends that you use the SSL Forward Proxy wizard as the preferred option to configure a URL list. Use the wizard to import a custom URL set and bind it to a responder policy.

1. Navigate to **Security > SSL Forward Proxy > URL Filtering > URL Lists**.
2. In the details pane, click **Add**.
3. On the **URL List Policy** page, specify the policy name.
4. Select an option to either import a URL set.

5. In the **URL List Policy** tab page, select the **Import URL Set** check box and specify the following URL Set parameters.
  - a) URL Set Name—Name of the custom URL set.
  - b) URL—Web address of the location at which to access the URL Set.
  - c) Overwrite—Overwrite a previously imported URL set.
  - d) Delimiter—Character sequence that delimits a CSV file record.
  - e) Row Separator—Row separator used in the CSV file.
  - f) Interval—Interval in seconds, rounded off to the nearest 15 minutes, at which the URL set is updated.
  - g) Private Set—Option to prevent exporting the URL set.
  - h) Canary URL—Internal URL for testing if the content of the URL set is to be kept confidential. The maximum length of the URL is 2047 characters.
6. Select a responder action from the drop-down list.
7. Click **Create** and **Close**.

The screenshot displays the 'URL List Policy' configuration interface. At the top, there are navigation tabs for 'URL List Policies' and 'URL List Policy'. The main form area includes the following elements:

- URL\***: A text input field containing the URL 'http://10.78.79.80/alytra/top-1k.csv'.
- Overwrite**: A checkbox that is currently unchecked.
- Delimiter**: A text input field containing the value '4'.
- Row Separator**: A text input field containing the value '10'.
- Interval**: A text input field containing the value '15'.
- Private Set**: A checkbox that is currently unchecked.
- Canary URL**: An empty text input field.

Below the main form, there is an **Action\*** dropdown menu with 'Allow' selected. At the bottom of the page, there are two buttons: a blue 'Create' button and a white 'Close' button.

### Metadata semantics for custom URL sets

To import a custom URL set, add the URLs to a text file and bind it to a responder policy to block Social networking URLs.

Following are examples of URLs that you might add to the text file:

cnn.com, News

bbc.com, News

google.com, Search Engine

yahoo.com, Search Engine

facebook.com, Social Media

twitter.com, Social Media

### Configure a responder policy to block social media URLs by using the CLI

```
1 add responder action act_url_unauthorized respondwith '"HTTP/1.1 451
 Unavailable For Legal Reasons\r\n\r\nURL is NOT authorized\n"'
2
3 add responder policy pol_url_meta_match 'HTTP.REQ.HOSTNAME.APPEND(HTTP.
 REQ.URL).GET_URLSET_METADATA("u1").EQ("Social Media")'
 act_url_unauthorized
```

## URL categorization

July 27, 2023

**Note:**

URL categorisation in the URL filtering feature is deprecated in this release.


URL Categorization restricts user access to specific websites and website categories. As a subscribed service in collaboration with [NetSTAR](#), the feature enables enterprise customers to filter web traffic using a commercial categorization database. The [NetSTAR](#) database has a vast number (billions) of URLs classified into different categories, such as social networking, gambling, adult content, new media, and shopping. In addition to categorization, each URL has a reputation score kept up to date based on the site's historical risk profile. We can use [NetSTAR](#) data to filter the traffic by configuring advanced policies based on categories, category groups (such as Terrorism, Illegal drugs), or site-reputation scores.

For example, you might block access to dangerous sites, such as sites known to be infected with malware. You might also selectively restrict access to content such as adult content or entertainment streaming media for enterprise users. You can also capture the user's transactional details and outbound traffic details for monitoring web traffic analytics on the NetScaler Console server.

NetScaler uploads or downloads data from the pre-configured NetSTAR device `nsv10.netstar-inc.com` and `incompasshybridpc.netstar-inc.com` is used as a cloud host by default for cloud-categorization requests. These URLs must be accessible through the firewall for URL filtering to work properly. The appliance uses its NSIP address as a source IP address and 443 as the destination port for communication.

## How URL categorization works

The following figure shows how a NetScaler URL categorization service is integrated with a commercial URL Categorization database and cloud services for frequent updates.

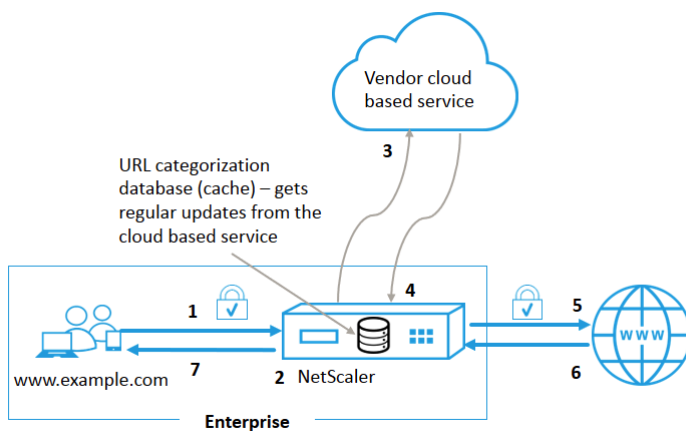

The components interact as follows:

1. A client sends an internet bound URL request.
2. The SSL forward proxy applies a policy enforcement to the request based on the category details, such as, category, category group, and site-reputation score. The category details are retrieved from the URL categorization database. If the database returns the category details, the process jumps to step 5.
3. If the database misses the categorization details, the request is sent to a cloud-based lookup service maintained by a URL categorization vendor. However, the appliance does not wait for a response, instead, the URL is marked as uncategorized and a policy enforcement is performed (jump to step 5). The appliance continues to monitor the cloud query feedback and updates the cache so that future requests can benefit from the cloud lookup.
4. The ADC appliance receives the URL category details (category, category group, and reputation score) from the cloud-based service and stores it in the categorization database.
5. The policy allows the URL and the request is sent to the origin server. Otherwise, the appliance drops, redirects, or responds with a custom HTML page.
6. The origin server responds with the requested data to the ADC appliance.

7. The appliance sends the response to the client.

### **Use Case: Internet usage under corporate compliance for enterprises**

You can use the URL Filtering feature to detect and implement compliance policies to block sites that violate corporate compliance. For example, sites such as adult, streaming media, social networking which can be deemed nonproductive or consume excess internet bandwidth in an enterprise network. Blocking access to these websites can improve employee productivity, reduce operating costs for bandwidth usage, and reduce the overhead of network consumption.

### **Prerequisites**

The URL Categorization feature works on a NetScaler platform only if it has an optional subscription service with URL filtering capabilities and threat intelligence for SSL forward proxy. The subscription allows customers to download the latest threat categorizations for websites and then enforce those categories to the SSL forward proxy. Before enabling and configuring the feature, you must install the following licenses:

- `CNS_WEBF_SSERVER_Retail.lic`
- `CNS_XXXX_SERVER_PLT_Retail.lic`

Where, XXXXX is the platform type, for example: V25000

### **Responder policy expressions**

The following table lists the different policy expressions that you can use to verify if an incoming URL must be allowed, redirected, or blocked.

1. `<text>. URL_CATEGORIZE (<min_reputation>, <max_reputation>)` - Returns a `URL_CATEGORY` object. If `<min_reputation>` is greater than 0, the returned object does not contain a category with a reputation lower than `<min_reputation>`. If `<max_reputation>` is greater than 0, the returned object does not contain a category with a reputation higher than `<max_reputation>`. If the category fails to resolve in a timely manner, the `undef` value is returned.
2. `<url_category>. CATEGORY ()` - Returns the category string for this object. If the URL does not have a category, or if the URL is malformed, the returned value is "Unknown."
3. `<url_category>. CATEGORY_GROUP ()` - Returns a string identifying the object's category group. This grouping is a higher level grouping of categories, which is useful in operations that require less detailed information about the URL category. If the URL does not have a category, or if the URL is malformed, the returned value is "Unknown."

4. `<url_category>. REPUTATION()` - Returns the reputation score as a number from 0 to 5, where 5 indicates the riskiest reputation. If there is the category “Unknown”, the reputation value is 1.

**Policy types:**

1. Policy to select requests for URLs that are in the Search Engine category - `add responder policy p1 'HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORIZE(0,0).CATEGORY().EQ("Search Engine")'`
2. Policy to select requests for URLs that are in the Adult category group - `add responder policy p1 'HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORIZE(0,0).CATEGORY_GROUP().EQ("Adult")'`
3. Policy to select requests for Search Engine URLs with a reputation score lower than 4 - `add responder policy p2 'HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORIZE(4,0).HAS_CATEGORY("Search Engine")'`
4. Policy to select requests for Search Engine and Shopping URLs - `add responder policy p3 'HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORIZE(0,0).CATEGORY().EQ("good_categories")'`
5. Policy to select requests for Search Engine URLs with a reputation score equal to or greater than 4 - `add responder policy p5 'CLIENT.SSL.DETECTED_DOMAIN.URL_CATEGORIZE(4,0).CATEGORY().EQ("Search Engines")'`
6. Policy to select requests for URLs that are in the Search Engine category and compare them with a URL Set - `'HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URL_CATEGORIZE(0,0).CATEGORY().EQ("Search Engine")&& HTTP.REQ.HOSTNAME.APPEND(HTTP.REQ.URL).URLSET_MATCHES_ANY("u1")'`

**Responder policy types**

There are two types of policies used in a URL Categorization feature and each of these policy types is explained the following table:

| Policy Type          | Description                                                                                                                                             |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| URL Category         | Categorize web traffic and based on evaluation result blocks, allows, or redirects traffic.                                                             |
| URL Reputation Score | Determines the reputation score of the website and allows you to control access based on the reputation score threshold level set by the administrator. |

## Configure URL categorization

To configure URL categorization on a NetScaler appliance, do the following:

1. Enable URL filtering.
2. Configure a proxy server for Web traffic.
3. Configure SSL interception for Web traffic in explicit mode.
4. Configure shared memory to limit cache memory.
5. Configure URL categorization parameters.
6. Configure URL categorization by using the Citrix SSL forward proxy wizard.
7. Configure URL categorization parameters by using the SSL forward proxy wizard.
8. Configure seed database path and cloud server name

### Step 1: Enabling URL Filtering

To enable URL categorization, enable the URL filtering feature and enable modes for URL categorization.

To enable URL Categorization by using the CLI

At the command prompt, type:

```
enable ns feature URLFiltering
disable ns feature URLFiltering
```

### Step 2: Configure a proxy server for web traffic in explicit mode

The NetScaler appliance supports transparent and explicit proxy virtual servers. To configure a proxy virtual server for SSL traffic in explicit mode, do the following:

1. Add a proxy server.
2. Bind an SSL policy to the proxy server.

To add a proxy server by using the CLI

At the command prompt, type:

```
add cs vsrver <name> [-td <positive_integer>] <serviceType> [-
cltTimeout <secs>]
```

#### Example:

```
add cs vsrver starcs PROXY 10.102.107.121 80 -cltTimeout 180
```



### **Bind an SSL policy to a proxy virtual server by using the CLI**

```
bind ssl vserver <vServerName> -policyName <string> [-priority <
positive_integer>]
```

### **Step 3: Configure SSL interception for HTTPS traffic**

To configure SSL interception for HTTPS traffic, do the following:

1. Bind a CA certificate-key pair to the proxy virtual server.
2. Configure the default SSL profile with SSL parameters.
3. Bind a front-end SSL profile to the proxy virtual server and enable SSL interception in the front-end SSL profile.

To bind a CA certificate-key pair to the proxy virtual server by using the CLI

At the command prompt, type:

```
bind ssl vserver <vServerName> -certkeyName <certificate-KeyPairName>
-CA -skipCAName
```

To configure the default SSL profile by using the CLI

At the command prompt, type:

```
set ssl profile <name> -denySSLReneg <denySSLReneg> -sslInterception
(ENABLED | DISABLED)-ssliMaxSessPerServer positive_integer>
```

### **Bind a front-end SSL profile to a proxy virtual server by using the CLI**

At the command prompt, type:

```
set ssl vserver <vServer name> -sslProfile ssl_profile_interception
```

### **Step 4: Configure shared memory to limit cache memory**

To configure shared memory to limit cache memory by using the CLI

At the command prompt, type:

```
set cache parameter [-memLimit <megaBytes>]
```

Where, the memory limit configured for caching is set as 10 MB.

**Step 5: Configure URL categorization parameters**

To configure the URL categorization parameters by using the CLI

At the command prompt, type:

```
set urlfiltering parameter [-HoursBetweenDBUpdates <positive_integer>] [-TimeOfDayToUpdateDB <HH:MM>]
```

**Example:**

```
set urlfiltering parameter -urlfilt_hours_betweenDB_updates 20
```

**Step 6: Configure URL Categorization by using the Citrix SSL forward proxy wizard**

1. Log on to the NetScaler appliance and navigate to **Security > SSL Forward Proxy** page.
2. In the details pane, do one of the following:
  - a) Click **SSL Forward Proxy Wizard** to create a new configuration.
  - b) Select an existing configuration and click **Edit**.
3. In the **URL Filtering** section, click **Edit**.
4. Select the **URL Categorization** check box to enable the feature.
5. Select a **URL Categorization** policy and Click **Bind**.
6. Click **Continue** and then **Done**.

For more information about URL Categorization policy, see [How to Create a URL Categorization Policy](#).

**Step 7: Configuring URL Categorization parameters by using an SSL forward proxy Wizard**

1. Log on to **NetScaler** appliance and navigate to **Security > URL Filtering**.
2. In the **URL Filtering** page, click **Change URL filtering settings** link.
3. In the **Configuring URL Filtering Params** page, specify the following parameters.
  - a) Hours Between DB Updates. URL Filtering hours between database updates. Minimum value: 0 and Maximum value: 720.
  - b) Time of Day to Update DB. URL Filtering time of day to update database.
  - c) Cloud Host. The URL path of the cloud server.
  - d) Seed DB Path. The URL path of the seed database lookup server.
4. Click **OK** and **Close**.

**Sample Configuration:**

```
1 enable ns feature LB CS SSL IC RESPONDER AppFlow URLFiltering
2
3 enable ns mode FR L3 Edge USNIP PMTUD
4
5 set ssl profile ns_default_ssl_profile_frontend -denySSLReneg NONSECURE
 -sslInterception ENABLED -ssliMaxSessPerServer 100
6
7 add ssl certKey swg_ca_cert -cert ns_swg_ca.crt -key ns_swg_ca.key
8
9 set cache parameter -memLimit 100
10
11 add cs vserver starcs PROXY 10.102.107.121 80 -cltTimeout 180
12
13 add responder action act1 respondwith "\"HTTP/1.1 200 OK\r\n\r\n\" +
 http.req.url.url_categorize(0,0).reputation + \"\n\""
14
15 add responder policy p1 "HTTP.REQ.URL.URL_CATEGORIZE(0,0).CATEGORY.eq
 (\"Shopping/Retail\") || HTTP.REQ.URL.URL_CATEGORIZE(0,0).CATEGORY.
 eq(\"Search Engines & Portals
16
17 \")" act1
18
19 bind cs vserver starcs_PROXY -policyName p1 -priority 10 -
 gotoPriorityExpression END -type REQUEST
20
21 add dns nameServer 10.140.50.5
22
23 set ssl parameter -denySSLReneg NONSECURE -defaultProfile ENABLED -
 sigDigestType RSA-MD5 RSA-SHA1 RSA-SHA224 RSA-SHA256 RSA-SHA384 RSA-
 SHA512 -ssliErrorCache ENABLED
24
25 -ssliMaxErrorCacheMem 100000000
26
27 add ssl policy pol1 -rule "client.ssl.origin_server_cert.subject.
 URL_CATEGORIZE(0,0).CATEGORY.eq(\"Search Engines & Portals\")" -
 action INTERCEPT
28
29 add ssl policy pol3 -rule "client.ssl.origin_server_cert.subject.ne(\"
 citrix\")" -action INTERCEPT
30
31 add ssl policy swg_pol -rule "client.ssl.client_hello.SNI.
 URL_CATEGORIZE(0,0).CATEGORY.ne(\"Uncategorized\")" -action
 INTERCEPT
32
33 set urlfiltering parameter -HoursBetweenDBUpdates 3 -
 TimeOfDayToUpdateDB 03:00
```

## Configure seed database path and cloud server name

You can now configure the seed database path and cloud lookup server name for manual setting of the cloud lookup server name and the seed database path. To do this, two new parameters, “CloudHost” and “SeedDBPath”, are added to the URL filtering parameter.

At the command prompt, type:

```
set urlfiltering parameter [-HoursBetweenDBUpdates <positive_integer
>] [-TimeOfDayToUpdateDB <HH:MM>] [-LocalDatabaseThreads <positive_integer
>] [-CloudHost <string>] [-SeedDBPath <string>]
```

### Example:

```
set urlfiltering parameter -HoursBetweenDBUpdates 3 -TimeOfDayToUpdateDB
03:00 -CloudHost localhost -SeedDBPath /mypath
```

The Communication between a NetScaler appliance and NetSTAR might require a domain name server. You can test using a simple console or telnet connection from the appliance.

### Example:

```
1 root@ns# telnet nsv10.netstar-inc.com 443
2 Trying 1.1.1.1...
3 Connected to nsv10.netstar-inc.com.
4 Escape character is '^]'.
5
6 root@ns# telnet incompasshybridpc.netstar-inc.com 443
7 Trying 10.10.10.10...
8 Connected to incompasshybridpc.netstar-inc.com.
9 Escape character is '^]'.
10
```

## Configure audit log messaging

Audit logging enables you to review a condition or a situation in any phase of the URL Categorization process. When a NetScaler appliance receives an incoming URL, if the responder policy has a URL Filtering expression, the audit log feature collects URL Set information in the URL. It stores the information as log messages for any target allowed by audit logging.

- Source IP address (the IP address of the client that made the request).
- Destination IP address (the IP address of the requested server).
- Requested URL containing the schema, the host, and the domain name (<http://www.example.com>).
- URL category that the URL filtering framework returns.
- URL category group that the URL filtering framework returned.
- URL reputation number that the URL filtering framework returned.

- Audit log action taken by the policy.

To configure audit logging for a URL List feature, you must complete the following tasks:

1. Enable Audit Log.
2. Create Audit Log message action.
3. Set URL List responder policy with Audit Log message action.

For more information, see [Audit Logging](#) topic.

### Storing failure errors using SYSLOG messaging

At any stage of the URL Filtering process, if there is a system-level failure, the ADC appliance uses the audit log mechanism to store logs in the ns.log file. The errors are stored as text messages in SYSLOG format so that, an administrator can view it later in a chronological order of event occurrence. These logs are also sent to an external SYSLOG server for archival. For more information, see [article CTX229399](#).

For example, if a failure occurs when you initialize the URL Filtering SDK, the error message is stored in the following messaging format.

```
Oct 3 15:43:40 <local0.err> ns URLFiltering[1349]: Error initializing
NetStar SDK (SDK error=-1). (status=1).
```

The NetScaler appliance stores the error messages under four different failure categories:

- **Download failure.** If an error occurs when you try to download the categorization database.
- **Integration failure.** If an error occurs when you integrate an update into the existing categorization database.
- **Initialization failure.** If an error occurs when you initialize the URL Categorization feature, set categorization parameters, or end a categorization service.
- **Retrieval failure.** If an error occurs when the appliance retrieves the categorization details of the request.

### Configure SNMP traps for NetSTAR events

The URL Filtering feature generates SNMP traps, if the following conditions occur:

- NetSTAR database update fails or succeeds.
- NetSTAR SDK initialization fails or succeeds.

The appliance has a set of conditional entities called SNMP alarms. When a condition in the SNMP alarm is met, the appliance generates traps and sends it to a specified trap destination. For example, if the NetSTAR SDK initialization fails, an SNMP OID 1.3.6.1.4.1.5951.1.1.0.183 is generated and sent to the trap destination.

For the appliance to generate traps, you must first enable and configure SNMP alarms. Then, you specify the trap destination to which the appliance sends the generated trap messages

### Enable an SNMP alarm

The NetScaler appliance generates traps only for SNMP alarms that are enabled. Some alarms are enabled by default, but you can disable them.

When you enable an SNMP alarm, the URL filtering feature generates trap messages when a success or failure event occurs. Some alarms are enabled by default.

To enable an SNMP alarm by using the command line interface:

At the command prompt, type the following commands to set the parameters and verify the configuration:

```
enable snmp alarm <trapName>
show snmp alarm <trapName>
```

To enable an SNMP alarm by using the NetScaler GUI

1. Navigate to **System > SNMP > Alarms**, and select the alarm.
2. Click **Actions** and select **Enable**.

Configure SNMP alarm by using the CLI

At the command prompt, type the following commands to set the parameters and verify the configuration:

```
set snmp alarm <trapName> [-thresholdValue <positive_integer> [-normalValue <positive_integer>]] [-time <secs>] [-state (ENABLED | DISABLED)] [-severity <severity>] [-logging (ENABLED | DISABLED)]
```

#### Example:

```
set snmp alarm URL-FIL-DB-UPDATE-STATUS -state ENABLED
set snmp alarm URL-FIL-INIT-SDK -state ENABLED
```

Configure SNMP alarms by using the GUI

Navigate to **System > SNMP > Alarms**, select an alarm, and configure the alarm parameters.

For more information about SNMP traps, see [SNMP](#) topic

## URL reputation score

July 27, 2023

**Note:**

URL categorisation in the URL filtering feature is deprecated in this release.

The URL Categorization feature provides policy-based control to restrict blacklisted URLs. You can control access to websites based on URL category, reputation score, or URL category and reputation score. If network administrators monitor a user accessing highly risky websites, they can use a responder policy bound to the URL reputation score to block such risky websites.

Upon receiving an incoming URL request, the appliance retrieves the category and reputation score from the URL categorization database. Based on the reputation score returned by the database, the appliance assigns a reputation rating for websites. The value can range from 1 to 4, where 4 is the riskiest type of websites, as shown in the following table.

| URL Reputation Rating | Reputation Comment                                      |
|-----------------------|---------------------------------------------------------|
| 1                     | Clean site                                              |
| 2                     | Unknown site                                            |
| 3                     | Potentially dangerous or affiliated to a dangerous site |
| 4                     | Malicious site                                          |

### Use Case: Filtering by URL reputation score

Consider an enterprise organization with a network administrator monitoring user transactions and network bandwidth consumption. If malware can enter the network, the administrator must enhance the data security and control access to malicious and dangerous websites accessing the network. To protect the network against such threats, the administrator can configure the URL filtering feature to allow or deny access by URL reputation score.

For more information about monitoring outbound traffic and user activities on the network, see [Analytics](#).

If an employee of the organization tries to access a social networking website, the ADC appliance receives a URL request. It queries the URL Categorization database to retrieve the URL category as social networking and a reputation score 3, which indicates a potentially dangerous website. The appliance

then checks the security policy configured by the administrator, such as block access to sites with a reputation rating of 3 or more. It then applies the policy action to control access to the website.

To implement this feature, you must configure the URL reputation score and security threshold levels by using the SSL Forward Proxy wizard.

### **Configure reputation score by using the GUI**

Citrix recommends that you use the SSL forward proxy wizard to configure the reputation score and security levels. Based on the configured threshold, you can select a policy action to allow, block, or redirect traffic.

1. Navigate to **Security > SSL Forward Proxy**.
2. In the details pane, click **SSL Forward Proxy Wizard**.
3. In the details page, specify the proxy server settings.
4. Click **Continue** to specify other settings such as SSL interception and identify management.
5. Click **Continue** to access the **Security Configuration** section.
6. In the **Security Configuration** section, select the **Reputation Score** check box to control access based on URL reputation score.
7. Select the security level and specify the reputation score threshold value:
  - a) Greater than or equals to—Allow or block a website if the threshold value is greater than or equal to N, where N ranges from one to four.
  - b) Less than or equals to—Allow or block a website if the threshold value is less than or equal to N, where N ranges from one to four.
  - c) In between—Allow or block a website if the threshold value is between N1 and N2 and the range is from one to four.
8. Select a responder action from the drop-down list.
9. Click **Continue** and **Close**.

The following image shows the **Security Configuration** section on the SSL Forward Proxy wizard. Enable the URL Reputation Score option to configure the policy settings.



### Security Configuration

Configure URL reputation policy to control Website access based on the URL Reputation score.

Reputation Score

If the score is\*

Greater than or equals to  Less than or equals to  Between

Action\*

## Analytics

May 2, 2023

In the NetScaler appliance, all the user records and subsequent records are logged. When you integrate NetScaler Application Delivery Management (ADM) with the NetScaler appliance, the logged user activity and the subsequent records in the appliance are exported to NetScaler Console using the [logstream](#) feature.

NetScaler Console collates and presents information on the activities of users, such as, websites visited and the bandwidth spent. It also reports bandwidth use and detected threats, such as malware and phishing sites. You can use these key metrics to monitor your network and take corrective actions with the Citrix SWG appliance. For more information, see [Citrix SSL Forward Proxy Analytics](#).

To integrate NetScaler appliance with NetScaler Console:

1. In the NetScaler appliance, while configuring the SSL forward proxy feature, enable Analytics and provide the details of the NetScaler Console instance that you want to use for analytics.
2. In NetScaler Console, add the NetScaler appliance as an instance to NetScaler Console. For more information see [Add Instances to NetScaler Console](#).

## Use case: Making an enterprise network secure by using ICAP for remote malware inspection

October 13, 2023

The NetScaler appliance acts as a proxy and intercepts all the client traffic. The appliance uses policies to evaluate the traffic and forwards client requests to the origin server on which the resource resides. The appliance decrypts the response from the origin server and forwards the plain text content to the ICAP server for an antimalware check. The ICAP server responds with a message indicating “No adaptation required,” or error, or modified request. Depending on the response from the ICAP server, the content requested is either forwarded to the client, or an appropriate message is sent.

For this use case, you must perform some general configuration, proxy and SSL interception related configuration, and ICAP configuration on the NetScaler appliance.

### General configuration

Configure the following entities:

- NSIP address
- Subnet IP (SNIP) address
- DNS name server
- CA certificate-key pair to sign the server certificate for SSL interception

### Proxy server and SSL interception configuration

Configure the following entities:

- Proxy server in explicit mode to intercept all outbound HTTP and HTTPS traffic.
- SSL profile to define SSL settings, such as ciphers and parameters, for connections.
- SSL policy to define rules for intercepting traffic. Set to true to intercept all client requests.

For more details, see the following topics:

- [Proxy modes](#)
- [SSL interception](#)

In the following sample configuration, the antimalware detection service resides at [www.example.com](http://www.example.com).

### Sample general configuration:

```
1 add dns nameServer 203.0.113.2
2
3 add ssl certKey ns-swg-ca-certkey -cert ns_swg_ca.crt -key ns_swg_ca.
 key
```

**Sample proxy server and SSL interception configuration:**


```
1 add cs vserver explicitSWG PROXY 192.0.2.100 80 - Authn401 ENABLED -
 authnVsName explicit-auth-vs
2
3 set ssl parameter -defaultProfile ENABLED
4
5 add ssl profile swg_profile -sslInterception ENABLED
6
7 bind ssl profile swg_profile -ssliCACertkey ns-swg-ca-certkey
8
9 set ssl vserver explicitSWG -sslProfile swg_profile
10
11 add ssl policy ssli-pol_ssli -rule true -action INTERCEPT
12
13 bind ssl vserver explicitSWG -policyName ssli-pol_ssli -priority 100 -
 type INTERCEPT_REQ
```

**Sample ICAP Configuration:**

```
1 add service icap_svc 203.0.113.225 TCP 1344
2
3 enable ns feature contentinspection
4
5 add icaprofile icaprofile1 -uri /example.com -Mode RESMOD
6
7 add contentInspection action CiRemoteAction -type ICAP -serverName
 icap_svc -icapProfileName icaprofile1
8
9 add contentInspection policy CiPolicy -rule "HTTP.REQ.METHOD.NE("
 CONNECT")" -action CiRemoteAction
10
11 bind cs vserver explicitSWG -policyName CiPolicy -priority 200 -type
 response
```

**Configure the proxy settings**


1. Navigate to **Security > SSL Forward Proxy > SSL Forward Proxy Wizard**.
2. Click **Get Started** and then click **Continue**.
3. In the **Proxy Settings** dialog box, enter a name for the explicit proxy server.
4. For **Capture Mode**, select **Explicit**.
5. Enter an IP address and port number.

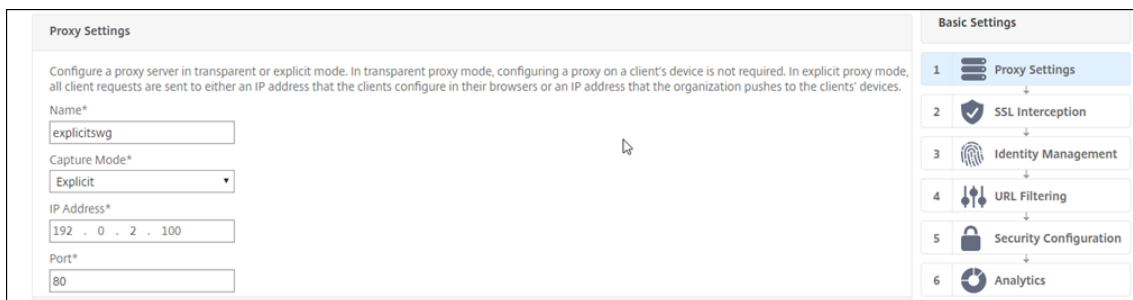


6. Click **Continue**.

### Configure the SSL interception settings

1. Select **Enable SSL Interception**.

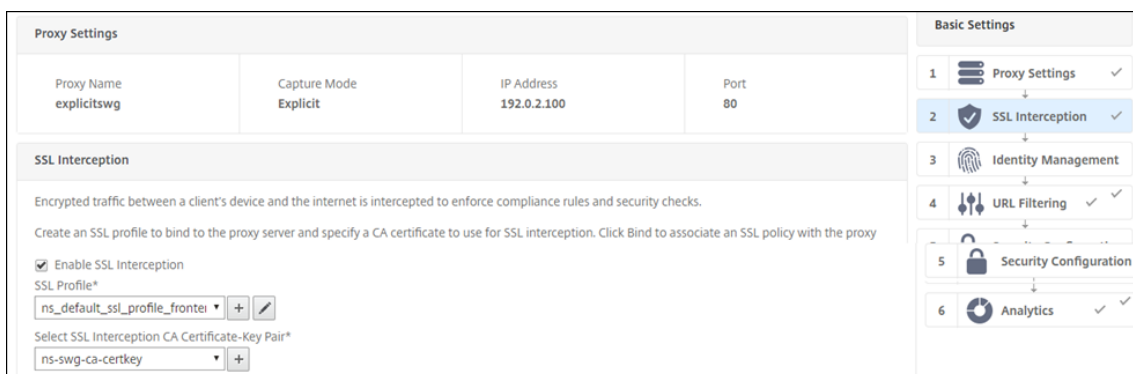

2. In **SSL Profile**, select an existing profile or click “+” to add a new front-end SSL profile. Enable **SSL Sessions Interception** in this profile. If you select an existing profile, skip the next step.

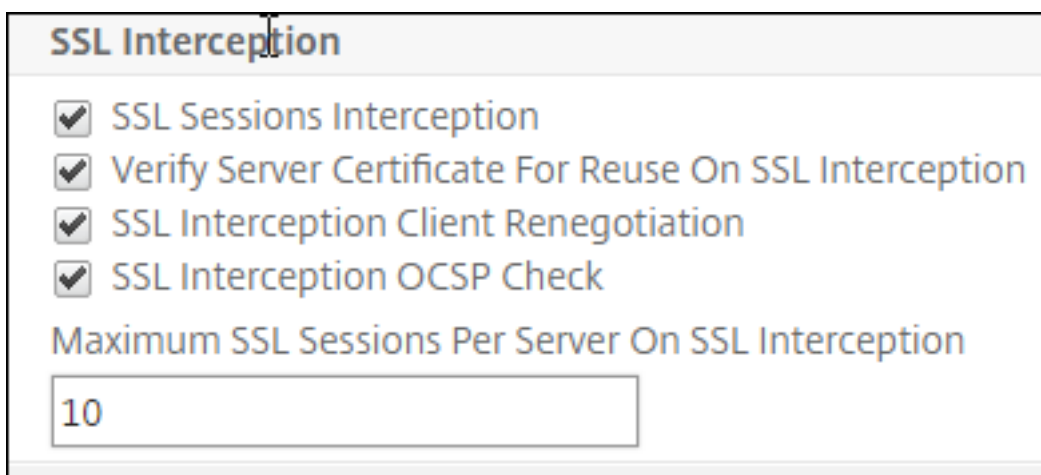

3. Click **OK** and then click **Done**.

4. In **Select SSL interception CA Certificate-Key Pair**, select an existing certificate or click “+” to install a CA certificate-key pair for SSL interception. If you select an existing certificate, skip the next step.

**Install SSL Interception CA Certificate**

Certificate-Key Pair Name\*  
ns-swg-ca-certkey

Certificate File Name\*  
Choose File ns\_swg\_ca.crt ?

Key File Name\*  
Choose File ns\_swg\_ca.key ?

Notify When Expires

**No** SNMP Trap destination found. Notification will not be sent until a trap destination is configured.

Notification Period  
30

5. Click **Install** and then click **Close**.
6. Add a policy to intercept all the traffic. Click **Bind**. Click **Add** to add a new policy or select an existing policy. If you select an existing policy, click **Insert**, and skip the next three steps.

**SSL Interception Policies** [X]

Add Edit Delete


| Policy Name | Pattern Set Name | Action |
|-------------|------------------|--------|
| No items    |                  |        |

7. Enter a name for the policy and select **Advanced**. In the Expression editor, enter true.
8. For **Action**, select **INTERCEPT**.


9. Click **Create**.
10. Click **Continue** four times, and then click **Done**.

### Configure the ICAP settings

1. Navigate to **Load Balancing > Services** and click **Add**.
2. Type a name and IP address. In **Protocol**, select **TCP**. In **Port**, type **1344**. Click **OK**.
3. Navigate to **SSL Forward Proxy > Proxy Virtual Servers**. Add a proxy virtual server or select a virtual server and click **Edit**. After entering details, click **OK**.  
Click **OK** again.
4. In **Advanced Settings**, click **Policies**.
5. In **Choose Policy**, select **Content Inspection**. Click **Continue**.
6. In **Select Policy**, click the “+” sign to add a policy.

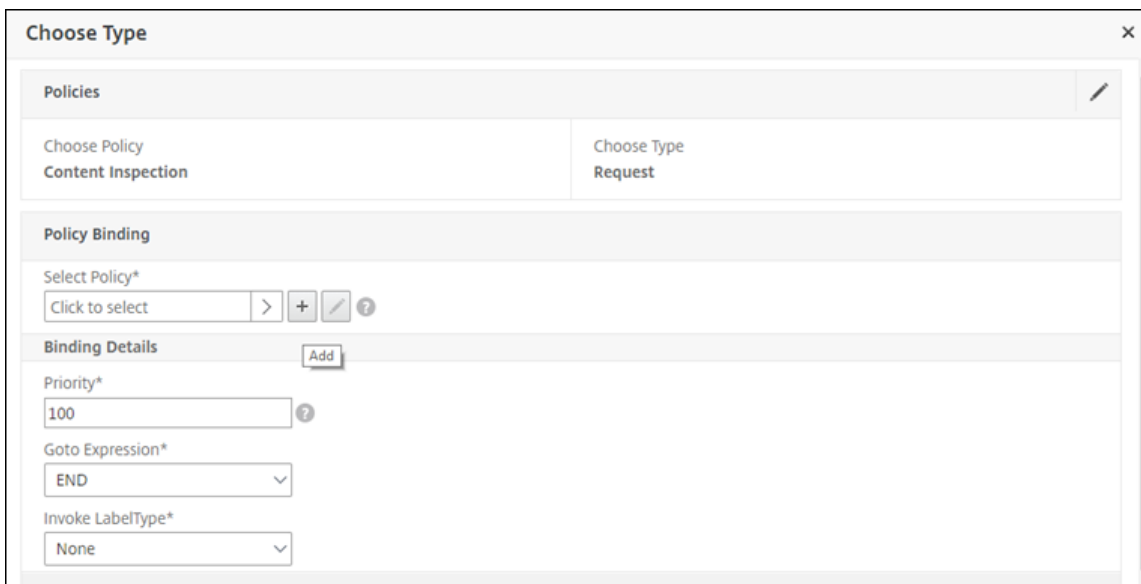

7. Enter a name for the policy. In **Action**, click the “+” sign to add an action.

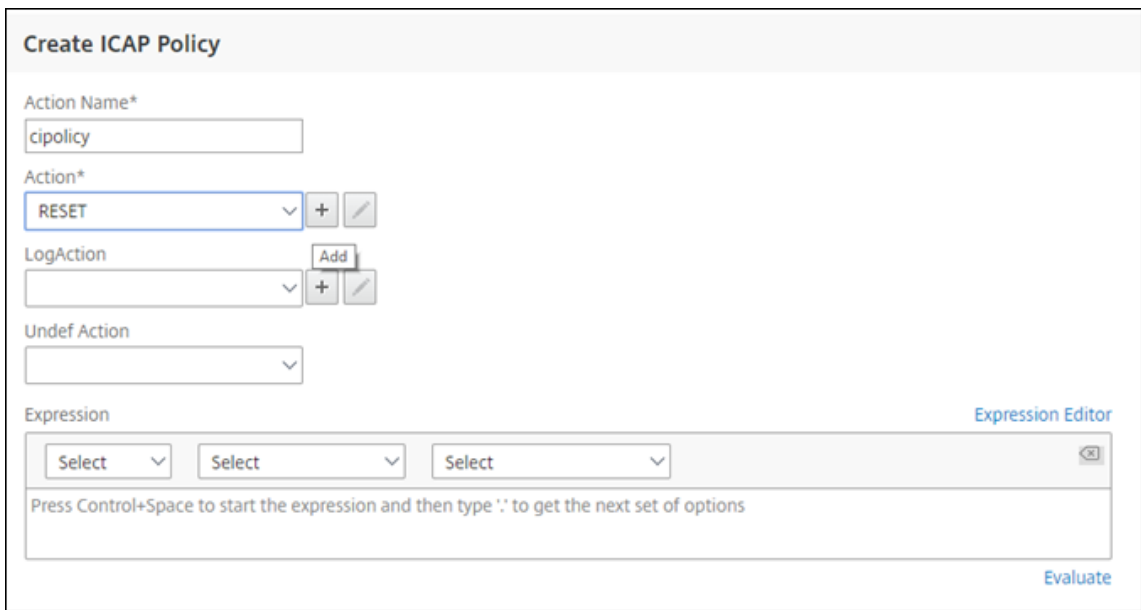

8. Type a name for the action. In **Server Name**, type the name of the TCP service created earlier. In **ICAP Profile**, click the “+” sign to add an ICAP profile.

9. Type a profile name, URI. In **Mode**, select **REQMOD**.

### Create ICAP Profile

ICAP Profile Name\*  
 ?

Preview

URI\*

Host Header

User Agent


Mode\*  
 ▾

Query Param


Insert ICAP Headers

10. Click **Create**.
11. In the **Create ICAP Action** page, click **Create**.
12. In the **Create ICAP Policy** page, enter true in the **Expression Editor**. Then, click **Create**.



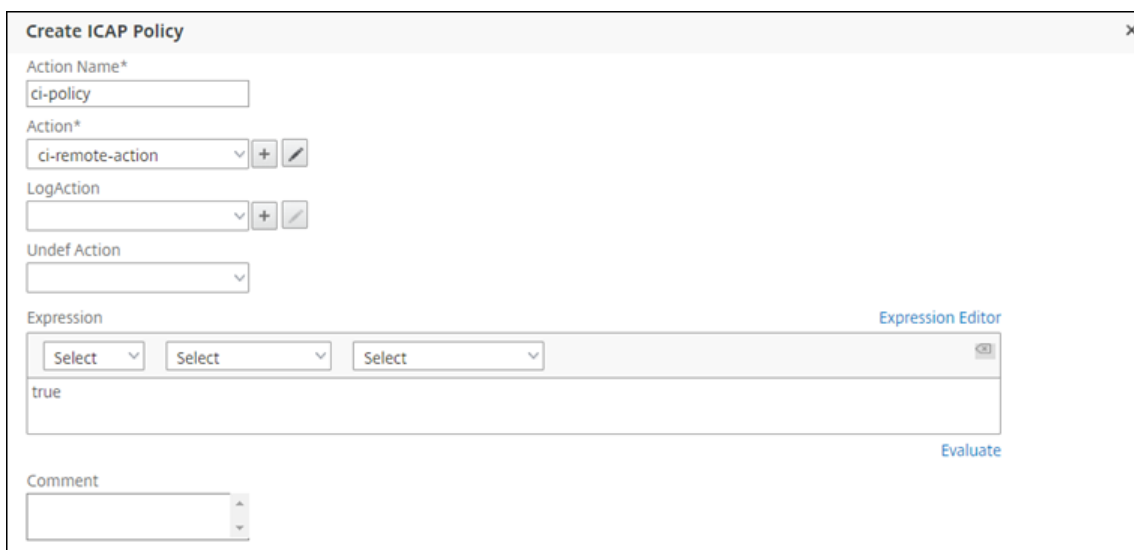

13. Click **Bind**.
14. When prompted to enable the content inspection feature, select **Yes**.
15. Click **Done**.

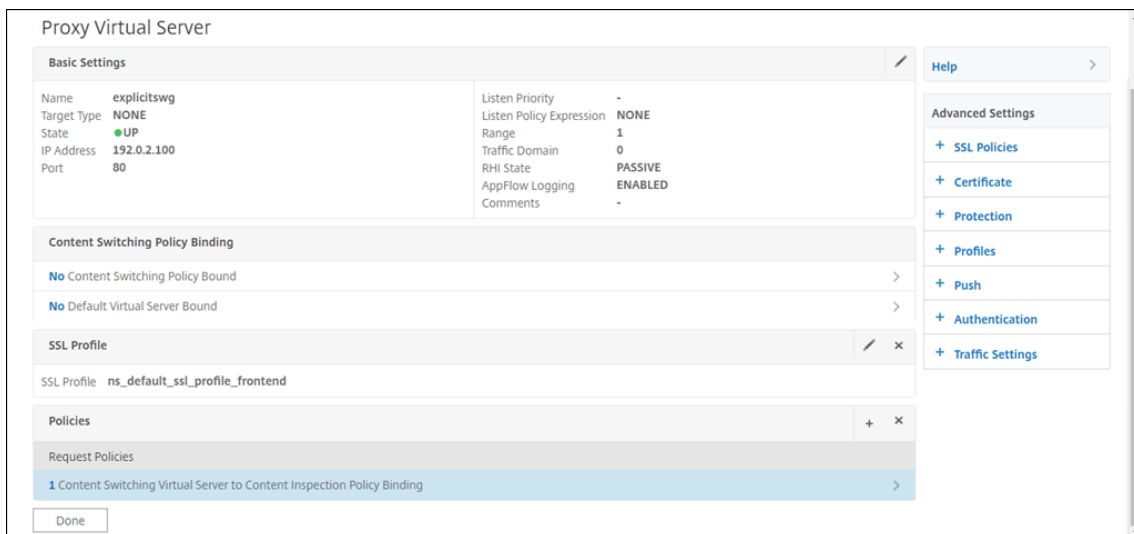

## Sample ICAP transactions between the NetScaler appliance and the ICAP server in RESPMOD

### Request from the NetScaler appliance to the ICAP server:

```

1 RESPMOD icap://10.106.137.15:1344/resp ICAP/1.0
2
3 Host: 10.106.137.15
4
5 Connection: Keep-Alive
6

```

```
7 Encapsulated: res-hdr=0, res-body=282
8
9 HTTP/1.1 200 OK
10
11 Date: Fri, 01 Dec 2017 11:55:18 GMT
12
13 Server: Apache/2.2.21 (Fedora)
14
15 Last-Modified: Fri, 01 Dec 2017 11:16:16 GMT
16
17 ETag: "20169-45-55f457f42aee4"
18
19 Accept-Ranges: bytes
20
21 Content-Length: 69
22
23 Keep-Alive: timeout=15, max=100
24
25 Content-Type: text/plain; charset=UTF-8
26
27 X50!P%@AP[4PZX54(P^)7CC)7 }
28 $EICAR-STANDARD-ANTIVIRUS-TEST-FILE!$H+H*
```

**Response from the ICAP server to the NetScaler appliance:**

```
1 ICAP/1.0 200 OK
2
3 Connection: keep-alive
4
5 Date: Fri, 01 Dec, 2017 11:40:42 GMT
6
7 Encapsulated: res-hdr=0, res-body=224
8
9 Server: IWSVA 6.5-SP1_Build_Linux_1080 $Date: 04/09/2015 01:19:26 AM$
10
11 IStag: "9.8-13.815.00-3.100.1027-1.0"
12
13 X-Virus-ID: Eicar_test_file
14
15 X-Infection-Found: Type=0; Resolution=2; Threat=Eicar_test_file;
16
17 HTTP/1.1 403 Forbidden
18
19 Date: Fri, 01 Dec, 2017 11:40:42 GMT
20
21 Cache-Control: no-cache
22
23 Content-Type: text/html; charset=UTF-8
24
25 Server: IWSVA 6.5-SP1_Build_Linux_1080 $Date: 04/09/2015 01:19:26 AM$
26
27 Content-Length: 5688
28
```

```
29 <html><head><META HTTP-EQUIV="Content-Type" CONTENT="text/html; charset
 =UTF-8"/>
30
31 ...
32
33 ...
34
35 </body></html>
```

## How-to articles

May 31, 2024

**Note:**

URL categorisation in the URL filtering feature is deprecated in this release.

Following are some configuration instructions or functional use cases available as “How to” articles to help you manage your SSL forward proxy deployment.

### URL filtering

[How to create a URL categorization policy](#)

[How to create a URL list policy](#)

[How to allow an exceptional URL](#)

[How to block adult category websites](#)

[How to configure a pattern set](#)

## Security

May 2, 2023

The following topics cover configuration and installation information for NetScaler security features. Most of these features are policy based.

|                      |                                                                                                                                                           |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Content Filtering    | Blocks inappropriate HTML requests, preventing the requests from reaching the Web servers.                                                                |
| Surge Protection     | Detects any rapid rise in connection attempts and adjusts the rate at which connections are allowed to proceed to the server, preventing server overload. |
| DNS Security Options | Simplified UI wizard to create policies to protect against DNS attacks.                                                                                   |

---

## Surge protection

May 2, 2023


When a surge in client requests overloads a server, server response becomes slow, and the server is unable to respond to new requests. The Surge Protection feature ensures that connections to the server occur at a rate that the server can handle. The response rate depends on how surge protection is configured. The NetScaler appliance also tracks the number of connections to the server, and uses that information to adjust the rate at which it opens new server connections.

Surge protection is enabled by default. If you do not want to use surge protection, as is the case with some special configurations, you must disable it.

The default surge protection settings are sufficient for most uses, but you can configure surge protection to tune it for your needs. First, you can set the throttle value to tell it how aggressively to manage connection attempts. Second you can set the base threshold value to control the maximum number of concurrent connections that the NetScaler appliance allows before triggering surge protection. (The default base threshold value is set by the throttle value, but after setting the throttle value you can change it to any number you want.)

The following figure illustrates how surge protection is configured to handle traffic to a website.

Figure 1. A Functional Illustration of NetScaler Surge Protection

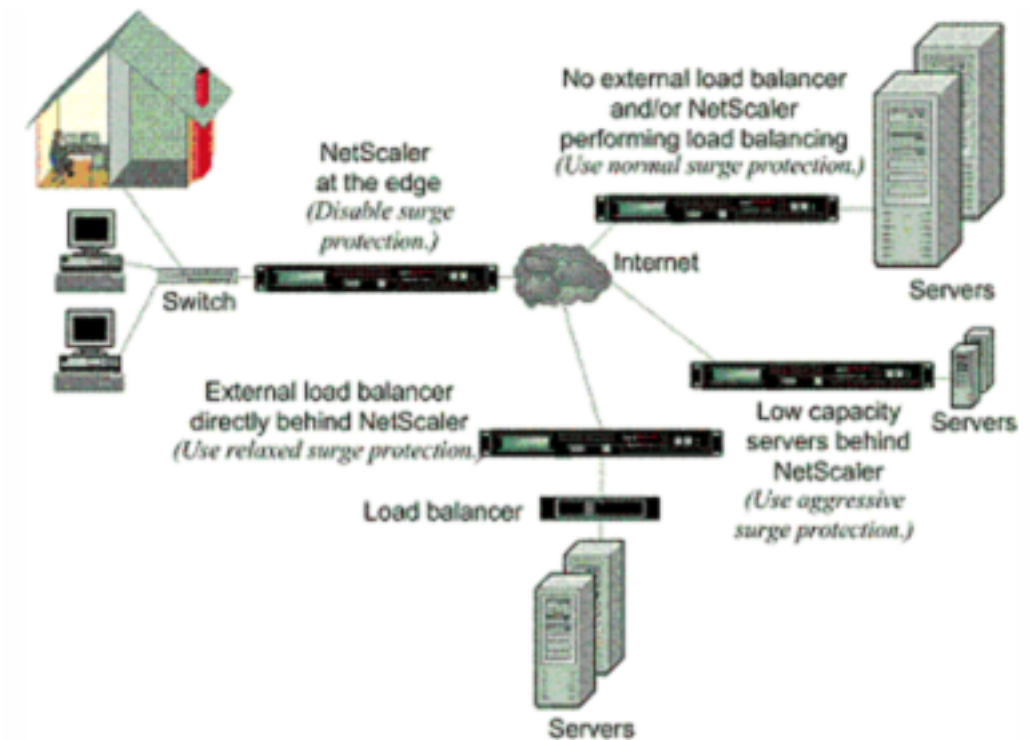

**Note**

If the NetScaler appliance is installed at the edge of the network, where it interacts with network devices on the client side of the Internet, the surge protection feature must be disabled. Surge protection must also be disabled if you enable USIP (Using Source IP) mode on your appliance.

When surge protection is disabled and a surge in requests occurs, the server accepts as many requests as it can process concurrently, and then begins to drop requests. As the server becomes more overloaded, it goes down and the response rate is reduced to zero. When the server recovers from the crash, several minutes later, it sends resets for all pending requests, which is abnormal behavior, and also responds to new requests with resets. The process repeats for each surge in requests. Therefore, a server that is under DDoS attack and receives multiple surges of requests can become unavailable to legitimate users.

When surge protection is enabled and a surge in requests occurs, surge protection manages the rate of requests to the server, sending requests to the server only as fast as the server can handle those requests. This enables the server to respond to each request correctly in the order it was received. When the surge is over, the backlogged requests are cleared as fast as the server can handle them, until the request rate matches the response rate.

## Disable and reenable surge protection

May 2, 2023

The surge protection feature is enabled by default. When surge protection is enabled, it is active for any service that you add.

### Disable or reenable surge protection by using the CLI

At the command prompt, type one of the following sets of commands to disable or reenable surge protection and verify the configuration:

```
1 - disable ns feature SurgeProtection
2 - show ns feature
3 - enable ns feature SurgeProtection
4 - show ns feature
```

#### Example:

```
1 disable ns feature SurgeProtection
2 Done show ns feature
3
4 Feature Acronym Status
5 ----- -
6 1) Web Logging WL ON
7 2) Surge Protection SP OFF
8 .
9 .
10 .
11 24) NetScaler Push push OFF
12 Done
```

```
1 enable ns feature SurgeProtection
2 Done
3 > show ns feature
4
5 Feature Acronym Status
6 ----- -
7 1) Web Logging WL ON
8 2) Surge Protection SP ON
9 .
10 .
11 .
12
13 24) NetScaler Push push OFF
14 Done
15 >
```

## Disable or reenable surge protection by using the GUI

1. In the navigation pane, expand **System**, and then select **Settings**.
2. In the details pane, click **Change Advanced Features**.
3. In the **Configure Advanced Features** dialog box, clear the selection from the **Surge Protection** check box to disable the surge protection feature, or select the check box to enable the feature.
4. Click **OK**.
5. In the Enable/Disable Features dialog box, click Yes. A message appears in the status bar, stating that the feature has been enabled or disabled.

## Disable or reenable surge protection for a particular service by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services**. The list of configured services is displayed in the details pane.
2. In the details pane, select the service for which you want to disable or reenable the surge protection feature, and then click **Open**.
3. In the **Configure Service** dialog box, click the **Advanced tab**, and scroll down.
4. In the Others frame, clear the selection from the **Surge Protection** check box to disable the surge protection feature, or select the check box to enable the feature.
5. Click **OK**. A message appears in the status bar, stating that the feature has been enabled or disabled.

**Note:** Surge protection works only when both the feature and the service setting are enabled.

## Set thresholds for surge protection

May 2, 2023


To set the rate at which the NetScaler appliance opens connections to the server, you must configure the threshold and throttle values for surge protection.

### Note

Threshold values are configured globally but they are enforced per individual load balanced server or per service.

The following figure shows the surge protection curves that result from setting the throttle rate to relaxed, normal, or aggressive. Depending on the configuration of the server capacity, you can set base threshold values to generate appropriate surge protection curves.

Figure 1. Surge Protection Curves

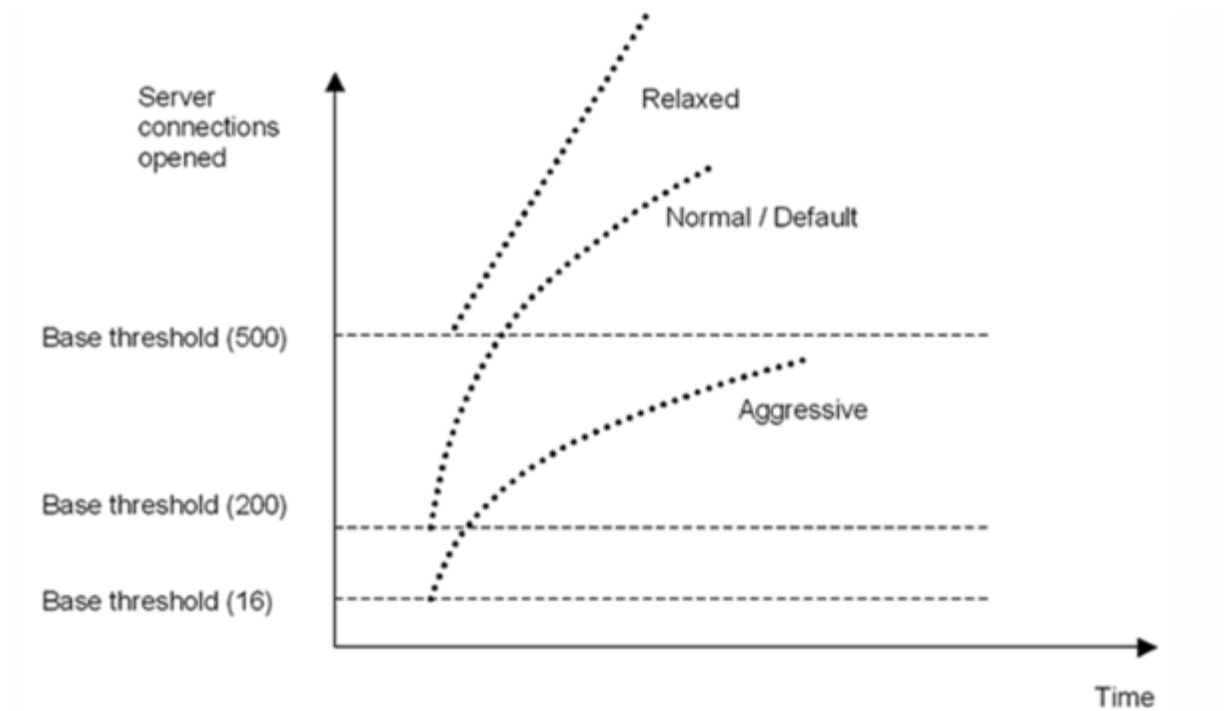


Your configuration settings affect the behavior of surge protection in the following manner:

- If you do not specify a throttle rate, it is set to normal (the default value), and the base threshold is set to 200, as shown in the preceding figure.
- If you specify a throttle rate (aggressive, normal, or relaxed) without specifying a base threshold, the curve reflects the default values of the base threshold for that throttle rate. For example, if you set the throttle rate to relaxed, the resulting curve will have the base threshold value of 500.
- If you specify only the base threshold, the entire surge protection curve shifts up or down, depending on the value you specify, as shown in the figure that follows.
- If you specify both a base threshold and a throttle rate, the resulting surge protection curve is based on the set throttle rate and adjusted according to the value set for the base threshold.

In the following figure, the lower curve (Aggressive 1) results when the throttle rate is set to aggressive but the base threshold is not set. The upper curve (Aggressive 2) results when the base threshold is set to 500, but the throttle rate is not set. The second upper curve (Aggressive 2) also results when the base threshold is set to 500, and the throttle rate is set to aggressive.

Figure 2. Aggressive Rate with the Default or a Set Base Threshold



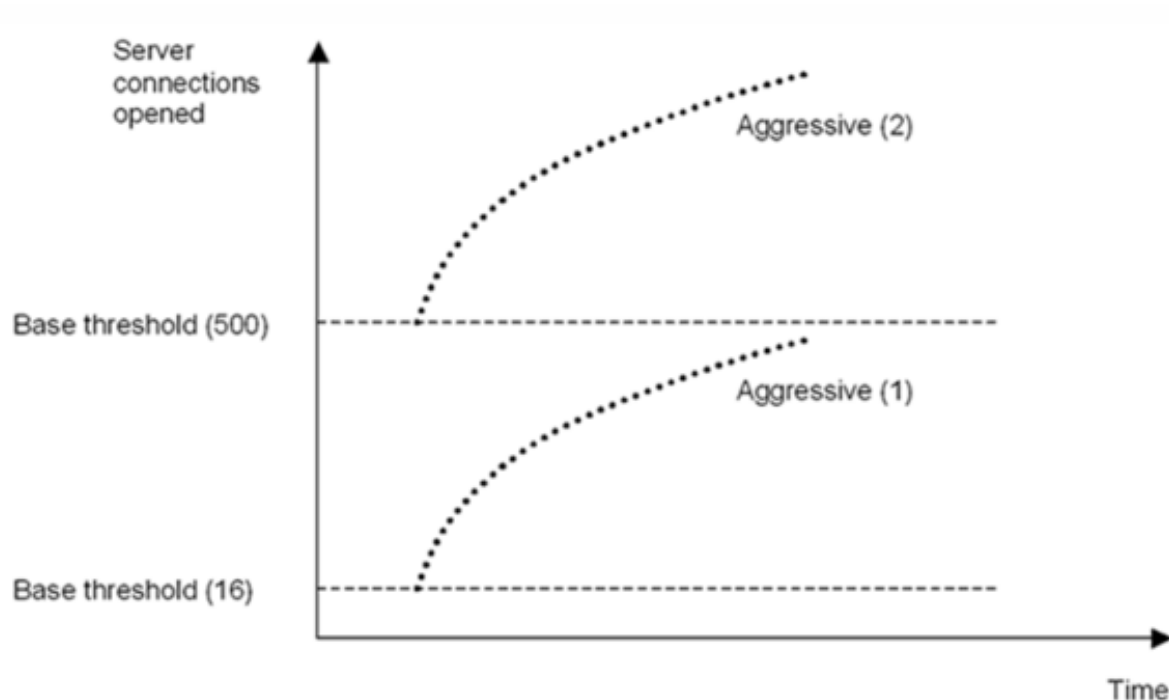

### Set the threshold for surge protection by using the GUI

1. In the navigation pane, expand System, and then select Settings.
2. In the details pane, click Global System Settings.
3. If you want to set a base threshold different from the default for the throttle rate, in the Configure Global Settings dialog box, Base Threshold text box, enter the maximum number of concurrent server connections allowed before surge protection is triggered. The base threshold is the maximum number of server connections that can be open before surge protection is activated. The maximum value for this setting is 32,767 server connections. The default setting for this value is controlled by the throttle rate you choose in the next step.

**Note:** If you do not set an explicit value here, the default value will be used.

4. In the Throttle drop-down list, select a throttle rate. The throttle is the rate at which the NetScaler appliance allows connections to the server to be opened. The throttle can be set to the following values:
  - **Aggressive:** Choose this option when the connection-handling and surge-handling capacity of the server is low and the connection needs to be managed carefully. When you set the throttle to aggressive, the base threshold is set to a default value of 16, which means that surge protection is triggered whenever there are 17 or more concurrent connections to the server.

- **Normal:** Choose this option when there is no external load balancer behind the NetScaler appliance or downstream. The base threshold is set to a value of 200, which means that surge protection is triggered whenever there are 201 or more concurrent connections to the server. Normal is the default throttle option.
- **Relaxed:** Choose this option when the NetScaler appliance is performing load balancing between a large number of Web servers, and can therefore handle a high number of concurrent connections. The base threshold is set to a value of 500, which means that surge protection is triggered only when there are 501 or more concurrent connections to the server.

5. Click OK. A message appears in the status bar, stating that the global settings are configured.

## Flush the surge queue

May 2, 2023

When a physical server receives a surge of requests, it becomes slow to respond to the clients that are currently connected to it, which leaves users dissatisfied and disgruntled. Often, the overload also causes clients to receive error pages. To avoid such overloads, the NetScaler appliance provides features such as surge protection, which controls the rate at which new connections to a service can be established.

The appliance does connection multiplexing between clients and physical servers. When it receives a client request to access a service on a server, the appliance looks for an already established connection to the server that is free. If it finds a free connection, it uses that connection to establish a virtual link between the client and the server. If it does not find an existing free connection, the appliance establishes a new connection with the server, and establishes a virtual link between a client and the server. However, if the appliance cannot establish a new connection with the server, it sends the client request to a surge queue. If all the physical servers bound to the load balancing or content switching virtual server reach the upper limit on client connections (max client value, surge protection threshold or maximum capacity of the service), the appliance cannot establish a connection with any server. The surge protection feature uses the surge queue to regulate the speed at which connections are opened with the physical servers. The appliance maintains a different surge queue for each service bound to the virtual server.

The length of a surge queue increases whenever a request comes for which the appliance cannot establish a connection, and the length decreases whenever a request in the queue gets sent to the server or a request gets timed out and is removed from the queue.

If the surge queue for a service or service group becomes too long, you may want to flush it. You can flush the surge queue of a specific service or service group, or of all the services and service groups

bound to a load balancing virtual server. Flushing a surge queue does not affect the existing connections. Only the requests present in the surge queue get deleted. For those requests, the client has to make a fresh request.

You can also flush the surge queue of a content switching virtual server. If a content switching virtual server forwards some requests to a particular load balancing virtual server, and the load balancing virtual server also receives some other requests, when you flush the surge queue of the content switching virtual server, only the requests received from this content switching virtual server are flushed. The other requests in the surge queue of the load balancing virtual server are not flushed.

**Note:**

- You cannot flush the surge queues of cache redirection, authentication, VPN, or GSLB virtual servers or GSLB services.
- Do not use the Surge Protection feature if Use Source IP (USIP) is enabled.

**Flush a surge queue by using the CLI**

The flush ns surgeQ command works in the following manner:

- You can specify the name of a service, service group, or virtual server whose surge queue has to be flushed.
- If you specify a name while running the command, the surge queue of the specified entity is flushed. If more than one entity has the same name, the appliance flushes surge queues of all those entities.
- If you specify the name of a service group, and a server name and port while running the command, the appliance flushes the surge queue of only the specified service group member.
- You cannot directly specify a service group member `<serverName>` and `<port>` without specifying the name of the service group `<name>` and you cannot specify `<port>` without a `<serverName>`. Specify the `<serverName>` and `<port>` if you want to flush the surge queue for a specific service group member.
- If you run the command without specifying any names, the appliance flushes the surge queues of all the entities present on the appliance.
- If a service group member is identified with a server name, you must specify the server name in this command; you cannot specify its IP address.

At the command prompt, type:

```
flush ns surgeQ [-name <name>] [-serverName <serverName> <port>]
```

**Examples**

1. `flush ns surgeQ -name SVC1ANZGB -serverName 10.10.10.1 80`

The preceding command flushes the surge queue of the service or virtual server that is named SVC1ANZGB and has IP address as 10.10.10

## 2. `flush ns surgeQ`

The preceding command flushes all the surge queues on the appliance.

### **Flush a surge queue by using the GUI**

Navigate to Traffic Management > Content Switching > Virtual Servers, select a virtual server and, in the Action list, select Flush Surge Queue.

### **DNS security options**

May 2, 2023

You can now configure the DNS security options from the Add DNS Security Profile page in the NetScaler GUI. To configure the DNS security options from the NetScaler CLI or the NITRO API, use the AppExpert components. For instructions, see the NITRO API documentation and the NetScaler Command Reference Guide.

One option, cache poisoning protection, is enabled by default and cannot be disabled. You can apply the other options to all DNS endpoints or to specific DNS virtual servers in your deployment, as shown in the following table:

| Security option                                 | Can be applied to all DNS endpoints? | Can be applied to specific DNS virtual servers? |
|-------------------------------------------------|--------------------------------------|-------------------------------------------------|
| DNS DDoS protection                             | Yes                                  | Yes                                             |
| Manage exceptions – whitelist/blacklist servers | Yes                                  | Yes                                             |
| Prevent random subdomain attacks                | Yes                                  | Yes                                             |
| Bypass the cache                                | Yes                                  | No                                              |
| Enforce DNS transactions over TCP               | Yes                                  | Yes                                             |
| Provide root details in the DNS response        | Yes                                  | No                                              |

## Cache poisoning protection

A cache poisoning attack redirects users from legitimate sites to malicious websites.

For example, the attacker replaces a genuine IP address in the DNS cache with a fake IP address that they control. When the server responds to requests from these IP addresses, the cache is poisoned. Subsequent requests for the addresses of the domain are redirected to the attacker's site.

The Cache Poisoning Protection option prevents insertion of corrupt data into the database that caches DNS server requests and responses. This feature is inbuilt in the NetScaler appliances and is always enabled.

## DNS DDoS protection

You can configure the DNS DDoS Protection option for each type of request that you suspect might be used in a DDoS attack. For each type, the appliance drops any requests received after a threshold value for the number of requests received in a specified time period (time slice) is exceeded. You can also configure this option to log a warning to the SYSLOG server. For example:

- **DROP:** - Select this option to DROP requests without logging. Assume that you have enabled A record protection with threshold value 15, time slice as 1 second, and chosen DROP. When the incoming requests exceed 15 queries in 1 second, then the packets start getting dropped.
- **WARN:** - Select this option to LOG and DROP requests. Assume that you have enabled A record protection with threshold value 15, time slice as 1 second, and chosen WARN. When the incoming requests exceed 15 queries in 1 second, a warning message is logged indicating a threat and then the packets are dropped. Citrix recommends you to set threshold values for WARN smaller than the threshold value of DROP for a record type. Such a setting helps administrators identify an attack by logging a warning message before the actual attack happens and NetScaler starts dropping incoming requests.

### Set a threshold for incoming traffic by using the GUI

1. Navigate to **Configuration > Security > DNS Security**.
2. On the **DNS Security Profile** page, click **Add**.
3. On the **Add DNS Security Profile** page, do the following:
4. Expand **DNS DDoS Protection**.
  - a) Select the record type and enter the threshold limit and the time slice value.
  - b) Select **DROP** or **WARN**.
  - c) Repeat steps a and b for each of the other record types that you want to protect against.
5. Click **Submit**.

## Manage exceptions –allowlist/blocklist servers

Manage exceptions enables you to add exceptions either to block list or allow list domain name and IP addresses. For example:

- When a particular IP address is identified posting an attack, such IP address can be added to the block list.
- When administrators find that there is an unexpectedly high number of requests for a particular domain name, then that domain name can be added to the block list.
- **NXDomains** and some of the existent domains which can consume the server resources can be blacklisted.
- When administrators allow list domain names or IP addresses, queries or requests only from these domains or IP addresses are answered and all others are dropped.

### Create an allow list or a block list by using the GUI

1. Navigate to **Configuration > Security > DNS Security**.
2. On the **DNS Security Profiles** page, click **Add**.
3. On the **Add DNS Security Profile** page, do the following:
  - a) Expand **Manage exceptions –Whitelist/Blacklist Servers**.
  - b) Select **Block** to block queries from blacklisted domains/addresses, or select **Allow** only to allow queries from whitelisted domains/addresses.
  - c) In the **Domain name / IP Address** box, enter the domain names, IP addresses, or IP address ranges. Use commas to separate the entries.

**Note:** If you select **Advanced Option**, you can use the “start with,” “contains,” and “ends with” options to set the criteria.  
For example, you can set criteria to block a DNS query that starts with “image” or ends with “.co.ru” or contains “mobile sites.”
4. Click **Submit**.

### Prevent random subdomain attacks

In random subdomain attacks, queries are sent to random, nonexistent subdomains of legitimate domains. This action increases the load on the DNS resolvers and servers. As a result, they can become overloaded and slow down.

The Prevent Random Subdomain Attacks option directs the DNS responder to drop DNS queries that exceed a specified length.

Assume that example.com is a domain name owned by you and hence the resolution request comes to your DNS server. The attacker can append a random subdomain to example.com and send a request. Based on the specified query length and the FQDN, the random queries are dropped.

For example, if the query is www.image987trending.example.com, it is dropped if the query length is set to 20.

### **Specify a DNS query length by using the GUI**

1. Navigate to **Configuration > Security > DNS Security**.
2. On the **DNS Security Profiles** page, click **Add**.
3. On the **Add DNS Security Profile** page, do the following:
  - a) Expand **Prevent Random Subdomain Attacks**.
  - b) Enter the numerical value for the query length.
4. Click **Submit**.

### **Bypassing the cache**

During an attack, the data that is already cached must be protected. To protect the cache, new requests for certain domains or record types or response codes can be sent to the origin servers instead of cached.

The Bypassing the cache option directs the NetScaler appliance to bypass the cache for specified domains, record types, or response codes when an attack is detected.

### **Bypass the cache for specified domains or record types or response types by using the GUI**

1. Navigate to **Configuration > Security > DNS Security**.
2. On the **DNS Security Profiles** page, click **Add**.
3. On the **Add DNS Security Profile** page, expand **Bypassing the cache** and enter the domain names. Optionally, choose the record types or the response types for which the cache has to be bypassed.
  - Click **Domains** and enter the domain names. Use commas to separate the entries.
  - Click **Record Types** and choose the record types.
  - Click **Response Types** and choose the response type.
4. Click **Submit**.

## Enforce DNS transactions over TCP

Some DNS attacks can be prevented if the transactions are forced to use TCP instead of UDP. For example, during a bot attack, the client sends a flood of queries but cannot handle responses. If the use of TCP is enforced for these transactions, then the bots cannot understand the responses and therefore cannot send requests over TCP.

### Force domains or record types to operate at the TCP level by using the GUI

1. Navigate to **Configuration > Security > DNS Security**.
2. On the **DNS Security Profiles** page, click **Add**.
3. On the **Add DNS Security Profile** page, expand **Enforce DNS Transactions over TCP** and enter the domain names and / or choose the record types for which the DNS transactions must be enforced over TCP.
  - Click **Domains** and enter the domain names. Use commas to separate the entries.
  - Click **Record Types** and choose the record types.
4. Click **Submit**.

### Provide root details in the DNS response

In some attacks, the attacker sends a flood of queries for unrelated domains that are not configured or cached on the NetScaler appliance. If the `dnsRootReferral` parameter is ENABLED, it exposes all the root servers.

The Provide Root Details in the DNS Response option directs the NetScaler appliance to restrict access to root referrals for a query that is not configured or cached. The appliance sends a blank response.

The Provide Root Details in the DNS Response option can also mitigate or block amplification attacks. When the `dnsRootReferral` parameter is DISABLED, there are no root referrals in the NetScaler responses and hence they do not get amplified.

### Enable or disable access to the root server by using the GUI

1. Navigate to **Configuration > Security > DNS Security**.
2. On the **DNS Security Profiles** page, click **Add**.
3. On the **Add DNS Security Profile** page, do the following:
  - a) Expand **Provide Root Details in the DNS Response**.
  - b) Click **ON** or **OFF** to allow or restrict access to the root server.
4. Click **Submit**.



## Binary signing and verification for enhanced system security

December 12, 2024

Binary signing and verification (BSV) is a security enhancement for NetScaler that improves monitoring of system security. This feature cryptographically signs binaries and libraries during the build process, embedding a unique signature within each file. The signing of binary executables ensures that the files have not been tampered with or modified, either intentionally or maliciously. During the system boot, these signatures are verified to ensure that only authorized executables are run. Verified executables are enrolled with the operating system. The system continuously monitors for and logs any attempts to run unauthorized or modified binaries. BSV logs provide detailed information about any unauthorized execution attempts, aiding in forensic investigations.

### Note:

BSV is enabled by default. It can be disabled using the CLI command `disable system signedExeReport` and re-enabled with `enable system signedExeReport` command. These changes require a system reboot to take effect.

### Logging and reporting

BSV events are logged to `/var/log/messages`. These logs include details such as the file path, file ID, and process ID of the unauthorized executable.

Logs contain the following details for each event:

- **Timestamp:** The exact date and time when the event occurred.
- **Log Level:** The severity of the event, for example, error or warning.
- **Event Details:** A description of the event, including the file or executable that triggered the log.
- **Additional Parameters:** Specific file and process identifiers that can be used to trace the event.

The following types of security events are related to file integrity checks:

- **No fingerprint event:** This event occurs when a file does not have a valid cryptographic fingerprint or is created after the system has booted. This event can also be triggered when newly created scripts are run. The absence of a fingerprint suggests that the file has not been registered with a known cryptographic signature, which is essential for verifying its integrity. An example of this event is shown in the log entry:

### Example:

```
1 Jul 17 11:42:20 <kern.err> ns kernel: MAC/verifexec: no
 fingerprint (file=/var/example fsid=96 fileid=3538 gen=89 uid
 =0 pid=6253 ppid=6250 gppid=1)
```

- **Fingerprint mismatch event:** This event is logged when the fingerprint of a file or executable does not match the previously registered fingerprint. This discrepancy indicates that the file is modified after the system is booted, which might be a sign of unauthorized changes or tampering. An example of this event is shown in the log entry:

**Example:**

```
1 Jul 17 11:44:25 <kern.err> ns kernel: MAC/verifexec: fingerprint
 does not match loaded value (file=/bin/example fsid=20 fileid
 =2567 gen=81 uid=0 pid=6515 ppid=6003 gppid=6002)
```

The following parameters in the log entries provide detailed information about the events that occur within a file system:

- **file:** The path of the file that triggered the event.
- **fsid:** The file system identifier, which helps to uniquely identify the file system in use.
- **fileid:** A unique identifier for the file within the file system.
- **gen:** The generation number of the file, which helps track changes to the file over time.
- **uid:** The user ID of the process running the executable.
- **pid:** The process ID of the running process.
- **ppid:** The parent process ID.
- **gppid:** The grandparent process ID provides further context on the process hierarchy.

## Limitations

- BSV logs events for newly created scripts, even though these scripts are not individually signed. Any new script created after the system has booted generates a log entry, regardless of whether it has a cryptographic signature or not. This behavior can result in numerous log entries for scripts that are not necessarily a security threat, potentially making it more challenging to identify genuine security issues.
- The initial verification process during boot might introduce a slight delay.

When the system boots, BSV performs a verification process to ensure the integrity of files and executables. This process involves checking cryptographic fingerprints and can take some time to complete.

## System

May 2, 2023

This section provides system-level information of the NetScaler. This includes a detailed explanation of system-level features, the scenarios in which the features can be used, the configuration steps, and examples to help you better understand the features.

- [Basic Operations](#)
- [Authentication and Authorization](#)
- [TCP Configurations](#)
- [HTTP Configurations](#)
- [SNMP](#)
- [Audit Logging](#)
- [Web Server Logging](#)
- [Call Home](#)
- [Reporting Tool](#)
- [CloudBridge Connector](#)
- [High Availability](#)
- [TCP Optimization](#)

## System base operations

August 13, 2024

The following configurations enable you to perform system base operations on a NetScaler appliance.

### How to view, save, and clear NetScaler configuration

NetScaler configurations are stored in the `/nsconfig/ns.conf` directory. For configurations to be available across sessions, you must save the configuration after every configuration change.

#### View running configuration by using the CLI

At the command prompt, type:

```
1 show ns runningConfig
```

#### View running configuration by using the GUI

1. Navigate to **System > Diagnostics** and, in the **View Configuration group**, click **Running Configuration**.

### View the difference between the two configuration files by using the CLI

At the command prompt, type:

```
1 diff ns config <configfile> <configfile2>
```

### View the difference between the two configuration files by using the GUI

1. Navigate to **System > Diagnostics** and, in the **View Configuration** group, click **Configuration difference**.

### Save NetScaler configurations by using the CLI

At the command prompt, type:

```
1 save ns config
```

### Save NetScaler configurations by using the GUI

1. On the **Configuration** tab, in the top-right corner, click the **Save** icon.

### View saved configurations by using the CLI

At the command prompt, type:

```
1 show ns ns.conf
```

### View saved configurations by using the GUI

Navigate to **System > Diagnostics** and, in the **View Configuration** group, click **Saved Configuration**.

### Clear NetScaler configuration by using the CLI

You have the following three options for clearing the NetScaler configuration.

**Basic level.** Clearing your configuration at the basic level clears all settings except the following:

- **Nsroot** password
- Time Zone

- NTP server
- ADM server connect
- License file information
- NSIP, MIP(s), and SNIP(s)
- Network settings (Default Gateway, VLAN, RHI, NTP, and DNS settings)
- HA node definitions
- Feature and mode settings
- Default administrator password (`nsroot`)

**Extended level.** Clearing your configuration at the extended level clears all settings except the following:

- NSIP and SNIP(s)
- Network settings (Default Gateway, VLAN, RHI, NTP, and DNS settings)
- HA node definitions

Feature and mode settings revert to their default values.

**Full level.** Clearing your configuration at the full level returns all settings to their factory default values. However, the NSIP and default gateway are not changed, because changing them can cause the appliance to lose network connectivity.

At the command prompt, type:

```
1 clear ns config -force
```

**Example:** To forcefully clear the basic configurations on an appliance.

```
1 clear ns config -force basic
```

## Clear NetScaler configuration by using the GUI

Navigate to **System > Diagnostics** and, in the Maintenance group, click **Clear Configuration** and select the configuration level to be cleared from the appliance.

## How to restart or shut down appliance for unsaved NetScaler configurations

The NetScaler appliance can be remotely restarted or shut down from the available user interfaces. When you restart or shut down a standalone NetScaler appliance, the unsaved configurations (configurations performed since the last `save ns config` command was issued) are lost.

In a high availability setup, when the primary appliance is rebooted or shut down, the secondary appliance takes over and becomes the primary. The unsaved configurations from the old primary are available on the new primary appliance.

You can also restart the appliance by only rebooting the NetScaler software and not rebooting the underlying operating system. This is called a warm reboot. For example, when you add a new license or change the IP address, you can warm reboot the NetScaler appliance for these changes to take place.

**Note:**

You can perform warm reboot only on a standalone NetScaler appliance.

### Restart the appliance by using the CLI

At the command prompt, type:

```
1 reboot [-warm]
```

### Restart a NetScaler appliance by using the GUI

1. In the configuration page, click **Reboot**.
2. When prompted to reboot, select **Save configuration** to make sure that you do not lose any configurations.

**Note:**

You can perform a warm reboot by selecting Warm reboot.

### Shut down an appliance by using the CLI

At the shell prompt, type:

- `shutdown -p now`: Shuts down the software and switches off the NetScaler. To restart NetScaler MPX, press the AC power switch. To Restart NetScaler VPX, restart the VPX instance.
- `shutdown -h now`: Shuts down the software and leaves the NetScaler switched on. Press any key to restart the NetScaler. This command does not switch off the NetScaler. Therefore, do not switch off the AC power or remove the AC power cables.

**Note:**

You cannot shut down an appliance through the NetScaler GUI.

## How to synchronize system clock with servers on the network

You can configure your NetScaler appliance to synchronize its local clock with a Network Time Protocol (NTP) server. This ensures that its clock has the same date and time settings as the other servers on your network.

You can configure clock synchronization on your appliance by adding NTP server entries to the `ntp.conf` file from either the GUI or the command line interface, or by manually modifying the `ntp.conf` file and then starting the NTP daemon (NTPD). The clock synchronization configuration does not change if the appliance is restarted, upgraded, or downgraded. However, the configuration does not get propagated to the secondary NetScaler in a high availability setup.

NetScaler GUI allows you to configure the time zone and the NTP server IP address required for clock synchronization on the first-time-user (FTU) screen.

### Note:

If you do not have a local NTP server, you can find a list of public, open access, NTP servers at the official NTP site, <<http://www.ntp.org>>, under Public Time Servers List. Before configuring your NetScaler to use a public NTP server, be sure to read the Rules of Engagement page (link included on all Public Time Servers pages).

In NetScaler release 11, the NTP version has been updated from 4.2.6p3 to 4.2.8p2.

### Pre-requisite

To configure clock synchronization, you must configure the following entities:

1. NTP servers
2. NTP synchronization.

### Add an NTP server by using the CLI

At the command prompt, type the following commands to add an NTP server and verify the configuration:

- `add ntp server (<serverIP> | <serverName>)[-minpoll <positive_integer>] [-maxpoll <positive_integer>]`
- `show ntp server`

### Example:

```
1 add ntp server 10.102.29.30 -minpoll 6 -maxpoll 11
```

## Add an NTP server by using the GUI

Navigate to **System > NTP Servers**, and create the NTP server.

## Enable NTP synchronization by using the CLI

When you enable NTP synchronization, the NetScaler starts the NTP daemon and uses the NTP server entries in the `ntp.conf` file to synchronize its local time setting. If you do not want to synchronize the appliance time with the other servers in the network, you can disable NTP synchronization, which stops the NTP daemon (NTPD).

At the command prompt, type one of the following commands:

```
1 enable ntp sync
```

## Enable NTP synchronization by using the GUI

Navigate to **System > NTP Servers**, click **Action** and select **NTP Synchronization**.

## Configure clock synchronization to edit a `ntp.conf` file by using the GUI

1. Log on to the command line interface.
2. Switch to the shell prompt.
3. Copy the `/etc/ntp.conf` file to `/nsconfig/ntp.conf`, unless the `/nsconfig` directory already contains an `ntp.conf` file.
4. For each NTP server you want to add, you must add the following two lines to the `/nsconfig/ntp.conf` file:

```
1 server <IP address for NTP server> iburst
2
3 restrict <IP address for NTP server> mask <netmask> nomodify
 notrap nopeer noquery
```

### Note:

For security reasons, there should be a corresponding restrict entry for each server entry.

### Example

In the following example, an administrator has inserted # characters to “comment out” an existing NTP entry, and then added an entry:



```

1 #server 1.2.3.4 iburst
2
3 #restrict 1.2.3.4 mask 55.255.255.255 nomodify notrap nopeer
 noquery
4
5 server 10.102.29.160 iburst
6
7 restrict 10.102.29.160 mask 255.255.255.255 nomodify notrap nopeer
 noquery

```

- If the `/nsconfig` directory does not contain a file named `rc.netscaler`, create the file.
- Add the following entry to `/nsconfig/rc.netscaler`: `/bin/sh /etc/ntpctl full_start`

This entry starts the `ntpd` service, checks the `ntp.conf` file, and logs messages in the `/var/log` directory.

This process runs every time the NetScaler is restarted.

- Restart the NetScaler appliance to enable clock synchronization. Or, to start the time synchronization process without restarting the appliance, enter the following commands at the shell prompt:

```

1 rm /etc/ntp.conf
2 ln -s /nsconfig/ntp.conf /etc/ntp.conf
3 /bin/sh /etc/ntpctl full_start

```

## How to configure session timeout for idle client connections

A session timeout interval is provided to restrict the time duration for which a session (GUI, CLI, or API) remains active when not in use. For the NetScaler, the system session timeout can be configured at the following levels:

- User level timeout.** Applicable to the specific user.

| Interface type | Time out configuration                                                                                               |
|----------------|----------------------------------------------------------------------------------------------------------------------|
| GUI            | Navigate to <b>System &gt; User Administration &gt; Users</b> , select a user, and edit the user's timeout setting.  |
| CLI            | At the command prompt, enter the following command: <code>set system user &lt;name&gt; - timeout &lt;secs&gt;</code> |

- **User group level timeout.** Applicable to all users in the group.

| Interface type | Time out configuration                                                                                                       |
|----------------|------------------------------------------------------------------------------------------------------------------------------|
| GUI            | Navigate to <b>System &gt; User Administration &gt; Groups</b> , select a group, and edit the group's timeout setting.       |
| CLI            | At the command prompt, enter the following command:<br><code>set system group &lt;groupName&gt; -timeout &lt;secs&gt;</code> |

- **Global system timeout.** Applicable to all users and users from groups who do not have a timeout configured.

| Interface type | Time out configuration                                                                                                          |
|----------------|---------------------------------------------------------------------------------------------------------------------------------|
| GUI            | Navigate to <b>System &gt; Settings</b> , click <b>Change global system</b> settings, and update the timeout value as required. |
| CLI            | At the command prompt, enter the following command:<br><code>set system parameter -timeout &lt;secs&gt;</code>                  |

The timeout value specified for a user has the highest priority. If timeout is not configured for the user, the timeout configured for a member group is considered. If timeout is not specified for a group (or the user does not belong to a group), the globally configured timeout value is considered. If timeout is not configured at any level, the default value of 900 seconds is set as the system session timeout.

Additionally, you can specify timeout durations for each of the interfaces you are accessing. However, the timeout value specified for a specific interface is restricted to the timeout value configured for the user that is accessing the interface. For example, let us consider an user “publicadmin” who has a timeout value of 20 minutes. Now, when accessing an interface, the user must specify a timeout value that is within 20 minutes.

**Note:**

You can choose to keep a check on the minimum and maximum timeout values by specifying the timeout as restricted (in CLI by specifying the *restrictedTimeout* parameter). This

parameter is provided to account for previous NetScaler versions where the timeout value was not restricted.

- When enabled, the minimum configurable timeout value is 5 minutes (300 secs) and the maximum value is 1 day (86400 secs). If the timeout value is already configured to a value larger than 1 day, when this parameter is enabled, you are prompted to change it. If you do not change the value, the timeout value will automatically be reconfigured to the default timeout duration of 15 minutes (900 secs) on the next reboot. The same will happen is the configured timeout value is less than 5 minutes.
- When disabled, the configured timeout durations are considered.
- **Timeout duration at each interface:**

| Interface type | Time out configuration                                                                                                             |
|----------------|------------------------------------------------------------------------------------------------------------------------------------|
| CLI            | Specify the timeout value on the command prompt by using the following command:<br><code>set cli mode -timeout &lt;secs&gt;</code> |
| API            | Specify the timeout value in the login payload.                                                                                    |

## How to set system date and time to synchronize the clock with a time server

To change the system date and time, you must use the shell interface to the underlying FreeBSD OS. However, to view the system date and time, you can use the command line interface or the GUI.

### View system date and time by using the CLI

At the command prompt, type:

```
1 show ns config
```

### View system date and time by using the GUI

Navigate to **System** and select the **System Information** tab to view the system date.

## How to configure HTTP and HTTPS management ports for internal services

In a single-IP mode deployment of a NetScaler appliance, a single IP address is used as NSIP, SNIP, and VIP addresses. This single IP address uses different port numbers to function as NSIP, SNIP, and VIP addresses.

Port numbers 80 and 443 are well-known ports for HTTP and HTTPS services. Earlier, port 80 and 443 of the NetScaler IP address (NSIP) were dedicated ports for internal HTTP and HTTPS management services. Because these ports were reserved for internal services, you cannot use these well-known ports for providing HTTP and HTTPS data services from a VIP address, which has the same address as the NSIP address in a single-IP mode deployment.

To address this requirement, you can now configure ports for internal HTTP and HTTPS management services (of the NSIP address) other than port 80 and 443.

The following lists the default port numbers for internal HTTP and HTTPS management services in NetScaler MPX, VPX, and CPX (NITRO web service only) appliances:

- NetScaler MPX and VPX appliances: 80 (HTTP) and 443 (HTTPS)
- NetScaler CPX appliances (For NITRO APIs): 9080 (HTTP) and 9443 (HTTPS)

### **Configure HTTP and HTTPS management ports by using the CLI**

You can configure an HTTP and an HTTPS port to any value on the NetScaler appliance to support the HTTP and HTTPS management service. However, by default, the NetScaler appliance uses 80 and 443 ports for HTTP and HTTPS connection.

To configure an HTTP port by using the CLI

At the command prompt, type:

```
1 set ns param -mgmtHttpPort<port>
```

#### **Example:**

```
1 set ns param -mgmtHttpPort 2000
```

To configure an HTTPS port by using the CLI

At the command prompt, type:

```
1 set ns param -mgmtHttpsPort<port>
```

#### **Example:**

```
1 set ns param -mgmtHttpsPort 3000
```

Starting from NetScaler 14.1-29.x release, the commands to configure HTTP and HTTPS ports are changed.

The `set ns param` command is changed to `set mgmtparam`.

To configure an HTTP port by using the CLI

At the command prompt, type:

```
1 set mgmtparam -mgmtHttpPort<port>
```

**Example:**

```
1 set mgmtparam -mgmtHttpPort 2000
```

To configure an HTTPS port by using the CLI

At the command prompt, type:

```
1 set mgmtparam -mgmtHttpsPort<port>
```

**Example:**

```
1 set mgmtparam -mgmtHttpsPort 3000
```

### Configure HTTP and HTTPS management ports by using the GUI

Follow the steps given below to configure HTTP and HTTPS port values:

1. Navigate to **System > Settings > Change Management Parameters**.
2. On the **Configure Management Parameters** page, set the following parameters.
  - a) **Management HTTP Port** - Set the port value to 2000. Default = 80, Min = 1, Max = 65534.
  - b) **Management HTTPS Port** - Set the port value to 3000. Default = 443, Min = 1, Max = 65534.

### Configure the internal HTTP GUI service by using NetScaler GUI, or NetScaler CLI, or NetScaler NITRO APIs

On a NetScaler appliance, the `/etc/httpd.conf` is the configuration file for the internal HTTP GUI service that manages connections to the NetScaler GUI.

Instead of using the `httpd.conf` file for configuring the internal HTTP GUI service, you can now use NetScaler GUI, or NetScaler CLI, or NetScaler NITRO APIs. For example, you can use the NetScaler CLI to modify the maximum number of clients that can connect to the internal HTTP GUI service at a time.

The internal HTTP GUI service has the following name format: **nshttpd-gui-<loop back IP address>-80**

Use the NetScaler service command operations to configure the internal HTTP GUI service.

#### To modify the internal HTTP GUI service by using the CLI:

- Use the `set service` command. For more information, see [set service](#).

- Use the `show service` command to verify the configuration. For more information, see [show service](#).

**Sample configuration:**

In the following sample configuration, the `maxClient` parameter is set to 300 for the internal HTTP GUI service.

```
1 > sh service nshttpd-gui-127.0.0.1-80
2 nshttpd-gui-127.0.0.1-80 (127.0.0.1:80) - HTTP
3 State: UP
4 Last state change was at Wed Mar 16 20:16:16 2022
5 Time since last state change: 0 days, 22:31:00.970
6 Server Name: #ns-internal-127.0.0.1#
7 Server ID : None Monitor Threshold : 0
8 Max Conn: 0 Max Req: 0 Max Bandwidth: 0
9 kbits
10 Use Source IP: NO
11 Client Keepalive(CKA): NO
12 Monitoring Owner: 0
13 Access Down Service: NO
14 TCP Buffering(TCPB): NO
15 HTTP Compression(CMP): NO
16 Idle timeout: Client: 180 sec Server: 360 sec
17 Client IP: ENABLED cip-header
18 Cacheable: NO
19 SC: ???
20 SP: OFF
21 Down state flush: DISABLED
22 Monitor Connection Close : NONE
23 Appflow logging: DISABLED
24 TCP profile name: nstcp_internal_apps
25 HTTP profile name: nshttp_default_internal_apps
26 Process Local: DISABLED
27 Traffic Domain: 0
28 Done
29
30 > set service nshttpd-gui-127.0.0.1-80 -maxclient 300
31 Done
32
33 > sh service nshttpd-gui-127.0.0.1-80
34 nshttpd-gui-127.0.0.1-80 (127.0.0.1:80) - HTTP
35 State: UP
36
37 ...
38
39 Max Conn: 300 Max Req: 0 Max Bandwidth: 0
40 kbits
41
42 ...
43 Done
```

## Trigger memory recovery by using the CLI

You can trigger memory recovery from the CLI.

At the command prompt, type the following command:

```
start ns memrecovery [-percentage <positive_integer>]
```

### Example:

```
start nsmemrecovery -percentage 30
```

To check the actual amount of memory recovered, use the following command at the command prompt:

```
stat system memory
```

## How to allocate extra management CPU for data processing and monitoring

If you need better performance for configuration and monitoring of a NetScaler MPX appliance, you can allocate an extra management CPU from the appliance's packet engine pool. This feature is supported on certain NetScaler MPX models and all VPX models except the VPX instances that run on NetScaler SDX appliances. It affects the output of the `stat system CPU` and `stat system` commands.

Supported NetScaler MPX models:

- 25xxx
- 22xxx
- 14xxx
- 115xx
- 15xxx
- 26xxx

### Note:

For NetScaler MPX 26xxx models with more than 20 cores, the mandatory extra management CPU feature is enabled by default. For NetScaler VPX models, a license that supports at least 12 vCPUs is required to enable this feature.

## Allocate an extra management CPU by using the CLI

At the command prompt, type one of the following commands:

- `enable extramgmtcpu`
- `disable extramgmtcpu`

**Note:**

After you enable and disable this feature, the NetScaler appliance displays a warning to restart the appliance, for the changes to take effect.

To show the configured and effective state of an extra management CPU.

At the command prompt, type:

```
1 show extramgmtcpu
```

**Example:**

```
1 > show extramgmtcpu
2 ConfiguredState: ENABLED EffectiveState: ENABLED
```

**Note:**

In this example, the show command is entered before restarting the appliance.

**Allocate an extra management CPU by using the GUI**

To allocate an extra management CPU by using the GUI, navigate to **System > Settings** and click **Configure Extra Management CPU**. From the **Configured State** drop-down menu, select **Enabled** and then select **OK**.

To check CPU usage, go to **System > Settings > Dashboard**.

**Configure an extra management CPU by using the NITRO API**

Use the following NITRO methods and formats to enable, disable, and show an extra management CPU.

**To enable an extra management CPU:**

```
1 HTTP Method: POST
2
3 URL: http://<NSIP>/nitro/v1/config/systemextramgmtcpu?action=enable
4
5 Payload: {
6 "systemextramgmtcpu":{
7 }
8 }
9
10
11 curl -v -X POST -H "Content-Type: application/json" -u nsroot:nsroot
 http://10.102.201.92/nitro/v1/config/systemextramgmtcpu?action=
 enable -d '{
```



```

12 "systemextramgmtcpu":{
13 }
14 }
15 '

```

To disable an extra management CPU

```

1 HTTP Method: POST
2 URL: http://<NSIP>/nitro/v1/config/systemextramgmtcpu?action=disable
3 Payload: {
4 "systemextramgmtcpu":{
5 }
6 }
7
8 curl -v -X POST -H "Content-Type: application/json" -u nsroot:nsroot
 http://10.102.201.92/nitro/v1/config/systemextramgmtcpu?action=
 disable -d '{
9 "systemextramgmtcpu":{
10 }
11 }
12 '

```

To show an extra management CPU

```

1 HTTP Method: GET
2 URL: http://<NSIP>/nitro/v1/config/systemextramgmtcpu

```

#### Example:

```

1 curl -v -X GET -H "Content-Type: application/json" -u nsroot:nsroot
 http://10.102.201.92/nitro/v1/config/systemextramgmtcpu

```

### Statistics and monitoring before and after adding extra management CPU

The following examples show the differences in the output of the stat system CPU and stat system commands before and after adding an extra management CPU.

```

1 stat system cpu

```

This command displays statistics of CPUs.

Here is a sample output before adding an extra management CPU on one of the supported models.

#### Example

```

1 > stat system cpu
2
3 CPU statistics
4
5 ID Usage
6

```

|    |    |   |
|----|----|---|
| 7  | 8  | 1 |
| 8  |    |   |
| 9  | 7  | 1 |
| 10 |    |   |
| 11 | 11 | 2 |
| 12 |    |   |
| 13 | 1  | 1 |
| 14 |    |   |
| 15 | 6  | 1 |
| 16 |    |   |
| 17 | 9  | 1 |
| 18 |    |   |
| 19 | 3  | 1 |
| 20 |    |   |
| 21 | 5  | 1 |
| 22 |    |   |
| 23 | 4  | 1 |
| 24 |    |   |
| 25 | 10 | 1 |
| 26 |    |   |
| 27 | 2  | 1 |

Here is the output after adding an extra management CPU on the same MPX appliance.

```
1 > stat system cpu
2
3 CPU statistics
4
5 ID Usage
6
7 9 1
8
9 7 1
10
11 5 1
12
13 8 1
14
15 11 2
16
17 10 1
18
19 6 1
20
21 4 1
22
23 3 1
24
25 2 1
```

```
1 stat system
```

This command displays CPU use. In the following example, the output before adding an extra man-

agement CPU on one of the supported models is:

Mgmt Additional-CPU usage (%) 0.00

Example

```
1 > stat system
2
3 NetScaler Executive View
4
5 System Information:
6
7 Up since Wed Oct 11 11:17:54 2017
8
9 /flash Used (%) 0
10
11 Packet CPU usage (%) 1.30
12
13 Management CPU usage (%) 4.00
14
15 Mgmt CPU0 usage (%) 4.00
16
17 Mgmt Additional-CPU usage (%) 0.00
18
19 Memory usage (MB) 2167
20
21 InUse Memory (%) 5.76
22
23 /var Used (%) 0
```

In the following example, the output after adding an extra management CPU on the same MPX appliance is:

Mgmt Additional-CPU usage (%) 0.80

```
1 > stat system
2
3
4 NetScaler Executive View
5
6 System Information:
7
8 Up since Wed Oct 11 11:55:56 2017
9
10 /flash Used (%) 0
11
12 Packet CPU usage (%) 1.20
13
14 Management CPU usage (%) 5.70
15
16 Mgmt CPU0 usage (%) 10.60
17
18 Mgmt Additional-CPU usage (%) 0.80
19
```

|    |                   |      |
|----|-------------------|------|
| 20 | Memory usage (MB) | 1970 |
| 21 |                   |      |
| 22 | InUse Memory (%)  | 5.75 |
| 23 |                   |      |
| 24 | /var Used (%)     | 0    |

## How to backup and restore your appliance to recover lost configuration

When your appliance gets corrupted or needs an upgrade, you can back up your system configuration. The backup procedure is done either through the CLI or GUI interface. The appliance also enables you to import the backup file from an external source. However, you can do this only through the GUI interface and there is no support through the CLI interface.

### Points to remember

You must remember the following points when your backup and restore your appliance.

- There must be a support for network configuration on a new platform.
- The new platform build must be same as the backup file or a later version.

### Back up a NetScaler appliance

Depending on data and backup requirement, you can create a “basic” backup or a “full” backup.

- **Basic backup.** You can perform this type of backup if you want to back up files that constantly change. The files that you can back up are in the following table.

For information about the basic backup details, see the [Table](#) topic.

- **Full backup.** In addition to the files that are backed up by a basic backup, a full backup has less frequently updated files. The files that are backed up when you use the “Full” backup option are:

| Directory | Sub-Directory or Files                                                                            |
|-----------|---------------------------------------------------------------------------------------------------|
| nsconfig  | ssl, license, fips*                                                                               |
| /var/     | netScaler/ssl/,<br>wi/java_home/jre/lib/security/cacerts/,<br>wi/java_home/lib/security/cacerts/* |

The backed-up data is stored as a compressed TAR file in the `/var/ns_sys_backup/` directory. To avoid issues due to non-availability of disk space, you can store up to 50 backup files in this directory. You can use the `rm system backup` command to delete existing backup files and create more backups.

**Note:**

When the backup operation is in progress, do not run commands that affect the configuration.

If a file that is required to be backed up is not available, the operation skips that file.

**Back up a NetScaler appliance using CLI**

Follow the procedure given below to back up a NetScaler appliance by using the NetScaler command interface.

At the command prompt, do the following:

1. Save the NetScaler configurations.

```
1 save ns config
```

1. Create the backup file.

```
1 create system backup [<fileName>] -level <basic | full> -comment <string>
```

**Note:**

If the file name is not specified, the appliance creates a TAR file with the following naming convention: `backup_<level>_<nsip_address>_<date-timestamp>.tgz`.

**Example:** To back up the full appliance using the default naming convention for the backup file.

```
1 > create system backup -level full
```

1. Verify that the backup file was created.

```
1 show system backup
```

You can view the properties of a specific backup file by using the `fileName` parameter.

**Restore a NetScaler appliance by using the CLI**

**Important:**

You cannot successfully restore your appliance, if you rename or modify your backup file.

When you restore your appliance, the restore operation untars the backup file from the `/var/ns_sys_backup/` directory. Once the files are untarred, the files are copied to the respective directories.

**Restore the NetScaler from a local backup file by using the CLI****Note:**

Citrix recommends you to back up the current configuration before restoring a previous configuration. However, if you do not want the restore command to automatically create a backup of the current configuration, use the `-skipBackup` parameter.

At the command prompt, do the following:

1. Obtain a list of the backup files available on the appliance.

```
1 show system backup
```

2. Restore the appliance by specifying one of the backup files.

```
restore system backup <filename> [-skipBackup]
```

**Example:** To restore by using a full backup of an appliance

```
> restore system backup backup_full_<nsip_address>_<date-timestamp>.
>.tgz
```

3. Reboot the appliance.

```
reboot
```

**Backup and restore a NetScaler appliance by using the GUI**

1. Navigate to **System > Backup and Restore**.
2. Click **Backup/Import** to start the process.
3. In the **Backup/Import** page, select **Create** and set the following parameters.
  - a) File Name. Name of the appliance backup file.
  - b) Level. Select a backup level as basic or full.
  - c) Comment. Provide a brief description for the backup.
4. Click **Backup**.

5. If you want to import a backup, you must select **Import**.
6. Once backup is complete, you can select the file and click **Download**.
7. To restore, select the backup file and click **Restore**.
8. In the **Restore** page, verify backup file details and click **Restore**.
9. After you restore, you must reboot the appliance.

For more information on how to backup and restore NetScaler instances, see [Backup and Restore using NetScaler Console](#) topic.

For more information on how to backup and restore an SDX appliance, see [Backup and restore SDX appliance](#)

For information about operations performed on system backup, see [System Backup](#) topic.

## How to generate technical support bundle for resolving appliance issues

For help with analyzing and resolving any issues with a NetScaler appliance, you can generate a technical support bundle on the appliance and send the bundle to Citrix technical support. The NetScaler technical support bundle is a zipped tar archive of system configuration data and statistics. It collects the following data from the NetScaler on which you generate the bundle:

- **Configuration files.** All files in the `/flash/nsconfig` directory.
- **Newslog files.** The currently running newslog and some previous files. To minimize the archive file size, `newslog` collection is restricted to 500 MB, 6 files, or 7 days, whichever occurs first. If older data is needed, it might require manual collection.
- **Log files.** Files in `/var/log/messages`, `/var/log/ns.log`, and other files under `/var/log` and `/var/nslog`.
- **Application core files.** Files created in the `/var/core` directory within the last week, if any.
- **Output of a few CLI show commands.**
- **Output of a few CLI stat commands.**
- **Output of BSD shell commands.**

The technical support bundle is saved on the NetScaler appliance in an archive at the following location:

```
1 /var/tmp/support/support.tgz
```

The path is a symlink to the most recent collector for easy access. The full file name varies, depending on the deployment topology, but generally follows a format similar to:

```
1 collector_<P/S>_<NS IP>_<DateTime>.tgz.
```

You can use a single command to generate the technical support bundle and securely upload it to the Citrix technical support server. Starting from NetScaler 14.1-8.x release, you must generate an authentication token before you upload the technical support bundle. Previously, you used Citrix username and password to upload the technical support bundle.

To generate the authentication token:

1. Launch a browser and enter the following URL - [https://cis.citrix.com/auth/api/create\\_identity\\_v2/?expiration=3600](https://cis.citrix.com/auth/api/create_identity_v2/?expiration=3600)
2. Log in using multifactor authentication.

**Note:**

For information on how to enroll for multifactor authentication, see <https://support.citrix.com/article/CTX461297/how-to-enroll-into-multi-factor-authentication-mfa>.

3. Click **Copy** to copy the authentication token displayed on the screen. The token is valid for 3600 seconds (1 hour). The maximum allowed length for the token is 1023 characters.

After copying the authentication token, use the CLI or GUI to upload the file.

To upload the technical support bundle using the CLI, run the following command:

```
1 showtechsupport -upload -file <string> -description <string> -authtoken <string>
```

Example:

```
1 showtechsupport -upload -file /var/tmp/support/callhome/collector_callhome_P_10.102.168.52_14Mar2022_12_50.tar.gz -description "test upload" -authtoken eyJhbGciOiJSUzI1NiIsInR5cCI6IkpXVCJ9.eyJzdWIiOiJDSVMiLCJpc3MiOiJidHMuY2lzLmNpdHJpeC5jb20iLCJqdGkiOiJkNDI4Nj*****
```

To upload the technical support bundle using the GUI:

1. Navigate to **Configuration > System > Diagnostics**.
2. In the Technical Support Tools section, click **Generate support file**.
3. Use the **Scope** option to specify if you want to gather data on the present node, all cluster nodes, or for the specified partitions.
4. Select **Upload the Collector Archive**.
5. In the **My Citrix Account** section, enter the authentication token in the **Citrix Authentication Token** field.

If your NetScaler appliance does not have direct internet connectivity, you can use a proxy server to directly upload the technical support bundle to the Citrix technical support server. The basic format of the proxy string is:



```
1 proxy_IP:<proxy_port>
```

If the proxy server requires authentication, the format is:

```
1 username:password@proxsy_IP:<proxy_port>
```

**Note:**

For NetScaler appliances in a high availability pair, you must generate the technical support bundle on each of the two nodes.

For NetScaler appliances in a cluster setup, you can generate the technical support bundle on each node individually, or you can generate smaller abbreviated archives for all nodes by using the cluster IP address.

For NetScaler admin partitions, you must generate the technical support bundle from the default admin partition. To get the technical support bundle for a specific partition, you must specify the name of the partition for which you want to generate the technical support bundle. If you do not specify the name of the partition, data is collected from all admin partitions.

**Generate the NetScaler technical support bundle by using the CLI**

At the command prompt, type:

```
1 show techsupport [-scope <scope> <partitionName>] [-upload [-proxy <string>] [-casenumber <string>] [-file <string>] [-description <string>] [-authtoken <string>]]
```

**Note:**

Starting with NetScaler 14.1 release build 8.x, the username and password parameters used to upload the technical support bundle are removed. You must use the authtoken parameter to upload the technical support bundle.

| Sr. No | Task                                                                                                           | Command                                                                                                    |
|--------|----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
| 1      | Generate and upload the technical support bundle to the Citrix technical support server.                       | show techsupport -upload -authtoken eyJhbGciOiJ-SUZl1NiIsInR5cCI6IkpXVCJ9.eyJzdWIiOiJDSV                   |
| 2      | Generate and upload the technical support bundle to the Citrix technical support server through a proxy server | show techsupport -upload -proxy 1.1.1.1:80 -authtoken eyJhbGciOiJ-SUZl1NiIsInR5cCI6IkpXVCJ9.eyJzdWIiOiJDSV |

| Sr. No | Task                                                                                                                 | Command                                                                                                                               |
|--------|----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| 3      | Upload an existing technical support bundle to the Citrix technical support server.                                  | show techsupport –upload -file,/var/tmp/support/collector_P_10.102.29 -authtoken eyJhbGciOiJ-SUZl1NiIsInR5cCI6IkpXVCJ9.eyJzdWIiOiJDSV |
| 4      | Generate small, abbreviated archives for all nodes in a Cluster setup. Use cluster IP address to run this command.   | show techsupport –scope CLUSTER                                                                                                       |
| 5      | Generate a technical support bundle specific to an admin partition. Run this command on the default admin partition. | show techsupport –scope PARTITION partition1                                                                                          |

## How to collect the technical support bundle from SDX and VPX appliances for insight analysis

A NetScaler appliance has a built-in mechanism to collect log files. The log files are in turn sent to Citrix Insight Services for analysis.

### Note:

All procedures are applicable for software release 9.2 or later.

## Download technical support bundle from NetScaler MPX and VPX appliances

To run a collector file by using the NetScaler GUI, you must complete the following procedure:

### Note:

The procedure is applicable for software release 9.2 or later.

1. Navigate to **System > Diagnostic**.
2. In the **Technical Support Tools** section, click **Generate Support File** link.
3. In the **Tech Support** page, set the following parameters:
  - a) Scope. To collect data from one or more nodes.
  - b) Partition. Name of the partition.
  - c) Citrix technical support load Options. Set all options such as proxy server, service case number, collector archive file name and a brief description of the archive file for uploading the technical support bundle.

- d) Citrix Account. Enter your Citrix credentials.
4. Click **Run**.
5. The Technical Support bundle is generated.
6. Click **Yes** to download the Technical support bundle to your local desktop.

### Obtain technical support bundle by using the CLI


1. Download the file from the appliance using a Secure FTP (SFTP) or Secure Copy (SCP) utility, such as [WinSCP](#), and upload it to Citrix Insight Services for analysis.

#### Note:

In the NetScaler software release earlier than 9.0, the collector script must be downloaded separately and run.

```
1 > show techsupport -scope CLUSTER
```

1. The `show techsupport -scope CLUSTER` command collects show technical support information from all nodes in the cluster and compresses the files into a single archive.
2. After the appliance generates the collector archive the location of the file is displayed as shown in the following screenshot.

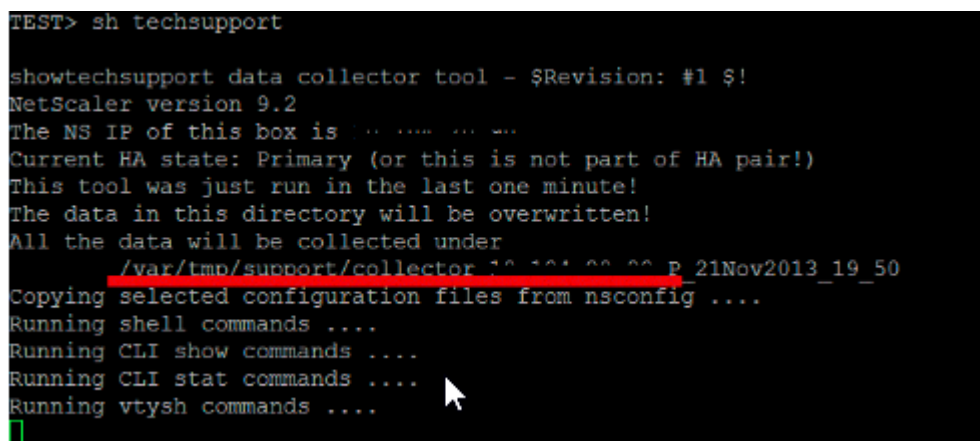

```
TEST> sh techsupport

showtechsupport data collector tool - $Revision: #1 $!
NetScaler version 9.2
The NS IP of this box is ...
Current HA state: Primary (or this is not part of HA pair!)
This tool was just run in the last one minute!
The data in this directory will be overwritten!
All the data will be collected under
/var/tmp/support/collector_10_104_00_00_P_21Nov2013_19_50
Copying selected configuration files from nsconfig
Running shell commands
Running CLI show commands
Running CLI stat commands
Running vtysh commands
```

The file is stored in `/var/tmp/support` and you can verify it by logging into a NetScaler appliance and running the following command from a shell prompt.

```
1 root@NS# cd /var/tmp/support/
2 root@NS# ls -l
```

## Obtain diagnostic bundle from NetScaler SDX using the GUI

1. Open the NetScaler SDX GUI.
2. Expand the **Diagnostics** node.
3. Select the **Technical Support** node.
4. Click Generate Technical Support File.
5. Select **Appliance** (Including Instances) from the drop-down menu.
6. Click **Add**.
7. Select one or more instances to add in.
8. Click **OK**. Wait for the process to complete.
9. Select the bundle name that was generated and then click **Download**
10. Upload the bundle file to [Citrix Insight Services](#).

## More Resources

[Watch a Video](#)

[Read another topic](#)

[Command Reference Doc](#)

## Unified configuration file for the NetScaler appliance

August 16, 2023

The NetScaler appliance supports a unified configuration file (`unified.conf`) that contains the NetScaler configurations (`ns.conf`), dynamic routing configurations (`zebos.conf`), and the Hardware Security Module (HSM) configurations (`chrystoki.conf`).

The unified configuration file provides a single view of different types of configurations. This unified configuration file is only for viewing purpose and it cannot be used to apply the configurations in another NetScaler appliance.

The complete path of the unified configuration file in the NetScaler appliance is: `/nsconfig/unified.conf`. You can access the unified configuration file by using the shell command prompt. The unified configuration file is supported only for standalone NetScaler appliances and high availability setups.

Saving a NetScaler configuration or a dynamic routing configuration also automatically saves the configuration in the unified configuration file along with saving in the NetScaler configuration file (`ns.conf`) or the dynamic routing configuration file (`zebos.conf`).

Saving a Hardware Security Module (HSM) configuration does not automatically save the configuration in the unified configuration file. You need to perform the `saveconfig` operation, which syncs the HSM configuration file (`chrystoki.conf`) to the unified configuration file.

## Sample output

In the following excerpt of sample unified configuration file (`unified.conf`), the NetScaler configurations are listed first, followed by the dynamic configurations in heading `>>> VTYSH START CONFIG >>>`, followed by the Hardware Security Module (HSM) configurations listed in heading `>>> START OF HSM CONFIG >>>`.

```
1 #NS14.1 Build 4.42
2
3 enable ns feature WL LB OSPF BGP IPv6PT RESPONDER
4 enable ns mode FR L3 Edge USNIP PMTUD
5 ...
6 ...
7 ...
8
9
10 >>> VTYSH START CONFIG >>>
11
12 !
13 log syslog
14 log record-priority
15 !
16 interface lo0
17
18 ...
19 ...
20 ...
21
22 !
23 router bgp 100
24 neighbor 4000::1 remote-as 100
25 no neighbor 4000::1 activate
26 !
27 address-family ipv6
28 redistribute kernel
29 neighbor 4000::1 activate
30 exit-address-family
31 !
32 end
33 >>> VTYSH END CONFIG >>>
34
35 >>> START OF HSM CONFIG >>>
36
37 Chrystoki2 = {
38
39 LibUNIX64 = /var/safenet/safenet/lunaclient/lib/libCryptoki2_64.so;
```

```
40 }
41
42
43 ...
44 ...
45 ...
46
47 CardReader = {
48
49 RemoteCommand = 1;
50 }
51
52 Misc = {
53
54 PE1746Enabled = 0;
55 ToolsDir = /var/safenet/safenet/lunaclient/bin;
56 }
57
58 ...
59 ...
60 ...
```

## System user authentication and authorization

May 2, 2023

To configure NetScaler user authentication and authorization, you must first define the users who have access to the NetScaler appliance, and then you can organize these users into groups. After configuring users and groups, you need to configure command policies to define types of access, and assign the policies to users and/or groups.

You must log on as an administrator to configure users, groups, and command policies. The default NetScaler administrator user name is *nsroot*. After logging on as the default administrator, you should change the password for the *nsroot* account. Once you have changed the password, no user can access the NetScaler appliance until you create an account for that user. If you forget the administrator password after changing it from the default, you can reset it to *nsroot*.

### Note:

- Local users can authenticate to the NetScaler even if external authentication servers are configured. You can restrict this by disabling the `localAuth` parameter of the `set system parameter` command.
- For enhanced security, Citrix recommends that you change the *nsroot* password. Frequently changing the password is advisable. For information about how to change the

nsroot password, see [Resetting the default administrator \(nsroot\) password](#) topic.

## User, user groups, and command policies

December 19, 2024

You must first define a user with an account and then organize all users into groups. You can create command policies, or use built-in command policies to regulate user access to commands.

**Note:**

If you prefer to know more about configuring user and user groups as part of NetScaler authentication and authorization setup for traffic management, see [Configure users and groups](#) topic.

You can also customize the command-line prompt for a user. Prompts can be defined in a user's configuration, in a user-group configuration, and in the global system configuration settings. The prompt displayed for a user is in the following order of precedence:

1. Display the prompt as defined in the user's configuration.
2. Display the prompt as defined in the group configuration for the user's group.
3. Display the prompt as defined in the system global configuration settings.

You can now specify a timeout value for inactive CLI sessions for a system user. If a user's CLI session is idle for a time that exceeds the timeout value, the NetScaler appliance terminates the connection. The timeout can be defined in a user configuration, in a user-group configuration, or in the global system configuration settings. The timeout for inactive CLI sessions for a user is determined in the following order of precedence:

1. User configuration.
2. Group configuration for the user's group.
3. Global system configuration settings.

A NetScaler root administrator can configure the maximum concurrent session limit for system users. By restricting the limit, you can reduce the number of open connections and improve server performance. As long as the CLI count is within the configured limit, concurrent users can log on the GUI any number of times. However, if the number of CLI sessions reaches the configured limit, users can no longer log on to the GUI. For example, if the number of concurrent sessions is configured to 20, concurrent users can log on to 19 CLI sessions. But if the user is logged on to the 20<sup>th</sup> CLI session, any attempt to log on to the GUI, CLI, or NITRO results in an error message ((ERROR: Connection limit to CFE exceeded).

**Note:**

The default the number of concurrent sessions is configured to 20 and the maximum number of concurrent sessions is configured to 40.

**Configure user accounts**

To configure user accounts, you simply specify user names and passwords. You can change passwords and remove user accounts at any time.

**Note:**

All characters in a password are not accepted. However, it works if you type the characters within quotes.

Also, the string must not exceed a maximum length of 127 characters.

To create a user account by using the command line interface

At the command prompt, type the following commands to create a user account and verify the configuration:

- `add system user <username> [-externalAuth ( ENABLED | DISABLED )] [-promptString <string>] [-timeout <secs>] [-logging ( ENABLED | DISABLED )] [-maxsession <positive_integer>]`
- `show system user <userName>`

External users can configure the “logging” parameter to collect external logs using web logging or audit logging mechanism. If the parameter is enabled, the auditing client authenticates itself with NetScaler appliance to collect logs.

**Example:**

```
> add system user johnd -promptString user-%u-at-%T
```

```
1 Enter password:
2 Confirm password:
3 > show system user johnd
4 user name: john
5 Timeout:900 Timeout Inherited From: Global
6 External Authentication: ENABLED
7 Logging: DISABLED
8 Maximum Client Sessions: 20
```

For parameter description, see [Authentication and authorization user command reference](#) topic.



### **Configure a user account by using the NetScaler GUI**

1. Navigate to **System > User Administration > Users**, and create the user.
2. In the details pane, click **Add** to create a system user.
3. In the **Create System Group** page, set the following parameters:
  - a) User Name. Name of the user group.
  - b) CLI Prompt. The prompt that you prefer to set for the CLI interface access.
  - c) Idle Session Timeout (secs). Set the time a user can be inactive before the session times out and closes.
  - d) Maximum sessions. Set the maximum number of sessions that a user can try. For a nsroot user, the max session parameter cannot be modified.
  - e) Enable Logging Privilege. Enable logging privilege for the user. The **Enable Logging Privilege** parameter collects external logs information using web logging or audit logging mechanism. If the parameter is enabled, the auditing client authenticates itself with NetScaler to collect logs.
  - f) Enable external Authentication. Select the option if you want to use an external authentication server for authenticating the user.
  - g) Allowed Management Interface. Select the NetScaler interfaces for which the user group is granted permission to access.
  - h) Command Policies. Bind command policies to the user group.
  - i) Partitions. Bind partitions to the user group.
4. Click **Create** and **Close**.

## ← System User

### Add System User

User Name\*

 ⓘ

Password\*

 ⓘ

Confirm Password\*

 ⓘ

CLI Prompt

Idle Session Timeout (secs)

Maximum Sessions

Enable Logging Privilege

Enable External Authentication

Allowed Management Interface

 ⓘ

**Continue** **Cancel**

## Configure user groups

After configuring a user group, you can easily grant the same access rights to everyone in the group. To configure a group, you create the group and bind users to the group. You can bind each user account to more than one group. Binding user accounts to multiple groups might allow more flexibility when applying command policies.

### To create a user group by using the command line interface

At the command prompt, type the following commands to create a user group and verify the configuration:

- `add system group <groupName> [-promptString <string>] [-timeout <secs>]`
- `show system group <groupName>`

#### Example:

```
> add system group Managers -promptString Group-Managers-at-%h
```

### Bind a user account to a group by using the CLI

At the command prompt, type the following commands to bind a user account to a group and verify the configuration:

- `bind system group <groupName> -userName <userName>`
- `show system group <groupName>`

#### Example:

```
> bind system group Managers -userName user1
```

### Configure a user group by using the NetScaler GUI

1. Navigate to **System > User Administration > Groups**, and create the user group.
2. In the details pane, click **Add** to create a system user group.
3. In the **Create System Group** page, set the following parameters:
  - a) Group Name. Name of the user group.
  - b) CLI Prompt. The prompt that you prefer to set for the CLI interface access.
  - c) Idle Session Timeout (secs). Set the time a user can be inactive before the session times out and closes.

- d) Allowed Management Interface. Select the NetScaler interfaces for which the user group is granted permission to access.
  - e) Members. Add user accounts to the group.
  - f) Command Policies. Bind command policies to the user group.
  - g) Partitions. Bind partitions to the user group.
4. Click **Create** and **Close**.

## ← Create System Group

Group Name\*  
 ⓘ

CLI Prompt  
 ⓘ

Idle Session Timeout (secs)

Allowed Management Interface  
 ⓘ

Members

**Available (1)** [Select All](#)

|        |   |
|--------|---|
| user-1 | + |
|--------|---|

[New](#) | [Edit](#)

**Configured (0)** [Unbind All](#)

|          |  |
|----------|--|
| No items |  |
|----------|--|

 ⓘ

▶

◀

**Command Policies**

[Bind](#) [Unbind](#)

|                          |             |
|--------------------------|-------------|
| <input type="checkbox"/> | POLICY NAME |
| <input type="checkbox"/> | operator    |

**Partitions**

[Bind](#) [Unbind](#)

|  |                |
|--|----------------|
|  | PARTITION NAME |
|--|----------------|

No items

[Create](#) [Close](#)

**Note:**

To add members to the group, in the Members section, click **Add**. Select users from the Available list and add them to the Configured list.

## Configure command policies

Command policies regulate which commands, command groups, virtual servers, and other entities that users and user groups are permitted to use.

The appliance provides a set of built-in command policies, and you can configure custom policies. To apply the policies, you bind them either to users or to groups.

Here are the key points to keep in mind when defining and applying command policies.

- You cannot create global command policies. Command policies must be bound directly to the users and groups on the appliance.
- Users or groups with no associated command policies are subject to the default (DENY-ALL) command policy, and are therefore unable to run any configuration commands until the proper command policies are bound to their accounts.
- All users inherit the policies of the groups to which they belong.
- You must assign a priority to a command policy when you bind it to a user account or group account. This enables the appliance to determine which policy has priority when two or more conflicting policies apply to the same user or group.
- If you bind two different command policies of the same priority to a user account or group account, the policy that you bind first takes the highest priority.
- The following commands are available by default to any user and are unaffected by any command you specify:
- help, show CLI attribute, set CLI prompt, clear CLI prompt, show CLI prompt, alias, unalias, history, quit, exit, whoami, config, set CLI mode, unset CLI mode, and show CLI mode.

The following table describes the built-in policies.

---

| <b>Policy name</b> | <b>Allows</b>                                                                                                                               |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| read-only          | Read-only access to all show commands except show ns runningConfig, show ns ns.conf, and the show commands for the NetScaler command group. |
| operator           | Read-only access and access to commands to enable and disable services and servers.                                                         |
| network            | Full access, except to the set and unset SSL commands, show ns ns.conf, show ns runningConfig, and show gslb runningConfig commands.        |

| Policy name | Allows                                                                                                                                                                                                                                                                                                                                                                                              |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| sysadmin    | [Included in NetScaler 12.0 and later] A sysadmin is lower than a superuser in terms of access allowed on the appliance. A sysadmin user can perform all NetScaler operations with the following exceptions: no access to the NetScaler shell, cannot perform user configurations, cannot perform partition configurations, and some other configurations as stated in the sysadmin command policy. |
| superuser   | Full access. Same privileges as the nsroot user.                                                                                                                                                                                                                                                                                                                                                    |

### Create custom command policies

Regular expression support is offered for users with the resources to maintain more customized expressions, and for those deployments that require the flexibility that regular expressions offer. For most users, the built-in command policies are sufficient. Users who need more levels of control but are unfamiliar with regular expressions might want to use only simple expressions, such as those in the examples provided in this section, to maintain policy readability.

When you use a regular expression to create a command policy, keep the following in mind.

- When you use regular expressions to define commands that are affected by a command policy, you must enclose the commands in double quotation marks. For example, to create a command policy that includes all commands that begin with **show**, type the following:
  - “`^show.*$`”
- To create a command policy that includes all commands that begin with **rm**, type the following:
  - “`^rm.*$`”
- Regular expressions used in command policies are not case sensitive.

The following table lists examples of regular expressions for Command Policies:

| Command specification       | Matches these commands                                                                                                                                                                     |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| “ <code>^rm\s+.*\$</code> ” | All remove actions, because all remove actions begin with the <code>rm</code> string, followed by a space and more parameters such as command groups, command object types, and arguments. |

| Command specification                         | Matches these commands                                                                                                                                                                        |
|-----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| “ <code>^show\s+.*\$</code> ”                 | All show commands, because all show actions begin with the show string, followed by a space and more parameters such as command groups, command object types, and arguments.                  |
| “ <code>^shell\$</code> ”                     | The shell command alone, but not combined with any additional parameters such as command groups, command object types, and arguments.                                                         |
| “ <code>^add\s+vserver\s+.*\$</code> ”        | All create virtual server actions, which consist of add virtual server command followed by a space and more parameters such as command groups, command object types, and arguments.           |
| “ <code>^add\s+(lb\s+vserver)\s+.*\$</code> ” | All create lb virtual server actions, which consist of the add lb virtual server command followed by a space and more parameters such as command groups, command object types, and arguments. |

For information about built-in command policies, see table [Built-in command policy](#) table.

To create a command policy by using the command line interface

At the command prompt, type the following commands to create a command policy and verify the configuration:

- `add system cmdPolicy <policyname> <action> <cmdsSpec>`
- `show system cmdPolicy <policyName>`

#### Example:

```
add system cmdPolicy USER-POLICY ALLOW (\ server\)|(\ service(Group)
*\)|(\ vserver\)|(\ policy\)|(\ policylabel\)|(\ limitIdentifier\
)|(^show\ (?!(system|ns\ (ns.conf|runningConfig))))|(save)|(stat\ .*
serv)
```

#### Configure a command policy by using the NetScaler GUI

1. Navigate to **System > User Administration > Command Policies**.
2. In the details pane, click **Add** to create a command policy.
3. In the **Configure Command Policy** page, set the following parameters:



- a) Policy name
- b) Action
- c) Command Spec.

4. Click **OK**.

## ← Create Command Policy

Policy Name

 ⓘ

Action\*

ALLOW ▾

Command Spec\*

`(^man.*) | (^show\s+(?!system)(?!configstatus)(?!ns ns\.conf)(?!ns savedconfig)(?!ns runningConfig)(?!gsib running Config)(?!audit messages)(?!techsupport). ") | (*stat.*` ⓘ

[RegEx Editor](#) [Command Spec Editor](#)

Create

Close

### Bind command policies to user accounts and user groups

Once you have defined your command policies, you must bind them to the appropriate user accounts and groups. When you bind a policy, you must assign it a priority so that the appliance can determine which command policy to follow when two or more applicable command policies are in conflict.

Command policies are evaluated in the following order:

- Command policies bound directly to users and the corresponding groups are evaluated according to a priority number. A command policy with a lower priority number is evaluated before one with a higher priority number. Therefore, any privileges the lower-numbered command policy explicitly grants or denies are not overridden by a higher-numbered command policy.
- When two command policies, one bound to a user account and other to a group, have the same priority number, the command policy bound directly to the user account is evaluated first.

To bind command policies to a user by using the command line interface

At the command prompt, type the following commands to bind a command policy to a user and verify the configuration:

- `bind system user <userName> -policyName <policyName> <priority>`
- `show system user <userName>`

**Example:**

```
> bind system user user1 -policyName read_all 1
```

**Bind command policies to a user account by using the NetScaler GUI**

Navigate to **System > User Administration > Users**, select the user and bind command policies.

User Command Policy Binding

### User Command Policy Binding

Select Policy\*

 >   ⓘ

### Binding Details

Priority\*

 ⓘ

Optionally, you can modify the default priority to ensure that the policy is evaluated in the proper order.

To bind command policies to a group by using the command line interface

At the command prompt, type the following commands to bind a command policy to a user group and verify the configuration:

- `bind system group <groupName> -policyName <policyName> <priority>`
- `show system group <groupName>`

**Example:**

```
> bind system group Managers -policyName read_all 1
```

**Bind command policies to a user group by using the NetScaler GUI**

Navigate to **System > User Administration > Groups**, select the group and bind command policies.

**Command Policies** 10

Add
Edit
Delete

|                                     |  | NAME                |
|-------------------------------------|--|---------------------|
| <input type="checkbox"/>            |  | operator            |
| <input checked="" type="checkbox"/> |  | read-only           |
| <input type="checkbox"/>            |  | network             |
| <input type="checkbox"/>            |  | superuser           |
| <input type="checkbox"/>            |  | sysadmin            |
| <input type="checkbox"/>            |  | partition-operator  |
| <input type="checkbox"/>            |  | partition-read-only |
| <input type="checkbox"/>            |  | partition-network   |
| <input type="checkbox"/>            |  | partition-admin     |
| <input type="checkbox"/>            |  | policy-1            |

Total 10

Insert
Close

Optionally, you can modify the default priority to ensure that the policy is evaluated in the proper order.

### Example use case: Manage user accounts, user groups, and command policies in a manufacturing organization

The following example shows how to create a complete set of user accounts, groups, and command policies and bind each policy to the appropriate groups and users. The company, Example Manufacturing, Inc., has three users who can access the NetScaler appliance:

- **John Doe.** The IT manager. John must be able to see all parts of the NetScaler configuration but does not need to modify anything.
- **Maria Ramiez.** The lead IT administrator. Maria must be able to see and modify all parts of the NetScaler configuration except for NetScaler commands (which local policy dictates must be performed while logged on as nsroot).

- **Michael Baldrock.** The IT administrator in charge of load balancing. Michael must be able to see all parts of the NetScaler configuration, but must modify only the load balancing functions.

The following table shows the breakdown of network information, user account names, group names, and command policies for the sample company.

---

| Field               | Value                               | Note                                                                                                      |
|---------------------|-------------------------------------|-----------------------------------------------------------------------------------------------------------|
| NetScaler host name | ns01.example.net                    | N/A                                                                                                       |
| User accounts       | johnd, mariar, and michaelb         | John Doe, IT manager, Maria Ramirez, IT administrator and Michael Baldrock, IT administrator.             |
| Groups              | Managers and SysOps                 | All managers and all IT administrators.                                                                   |
| Command Policies    | read_all, modify_lb, and modify_all | Allow complete read-only access, Allow modify access to load balancing, and Allow complete modify access. |

---

The following description walks you through the process of creating a complete set of user accounts, groups, and command policies on the NetScaler appliance named ns01.example.net.

The description includes procedures for binding the appropriate user accounts and groups to one another, and binding appropriate command policies to the user accounts and groups.

This example illustrates how you can use prioritization to grant precise access and privileges to each user in the IT department.

The example assumes that initial installation and configuration have already been performed on the NetScaler.

### **Configure user accounts, groups, and command policies for a sample organization**

1. Use the procedure described in Configuring User Accounts section to create user accounts **johnd**, **mariar**, and **michaelb**.
2. Use the procedure described in Configuring User Groups to create user groups **Managers** and **SysOps**, and then bind the users **mariar** and **michaelb** to the **SysOps** group and the user **johnd** to the **Managers** group.
3. Use the procedure described in Creating Custom Command Policies to create the following command policies:

- **read\_all** with action **Allow** and command spec `"(^show\s+(?!system)(?!ns ns .conf)(?!ns runningConfig).*)|(^stat.*)"`
  - **modify\_lb** with action as **Allow** and the command spec `"^set\s+lb\s+.*$"`
  - **modify\_all** with action as **Allow** and the command spec `"^\S+\s+(?!system).*"`
4. Use the procedure described in “Binding Command Policies to Users and Groups” to bind the **read\_all** command policy to the **SysOps** group, with priority value **1**.
  5. Use the procedure described in “Binding Command Policies to Users and Groups” to bind the **modify\_lb** command policy to user **michaelb**, with priority value **5**.

The configuration you just created results in the following:

- John Doe, the IT manager, has read-only access to the entire NetScaler configuration, but he cannot make modifications.
- Maria Ramirez, the IT lead, has near-complete access to all areas of the NetScaler configuration, having to log on only to perform NetScaler-level commands.
- Michael Baldrock, the IT administrator responsible for load balancing, has read-only access to the NetScaler configuration, and can modify the configuration options for load balancing.

The set of command policies that applies to a specific user is a combination of command policies applied directly to the user’s account and command policies applied to one or more groups of which the user is a member.

Each time a user enters a command, the operating system searches the command policies for that user until it finds a policy with an ALLOW or DENY action that matches the command. When it finds a match, the operating system stops its command policy search and allows or denies access to the command.

If the operating system finds no matching command policy, it denies the user access to the command, in accordance with the NetScaler appliance’s default deny policy.

**Note:**

When placing a user into multiple groups, take care not to cause unintended user command restrictions or privileges. To avoid these conflicts, when organizing your users in groups, bear in mind the NetScaler command policy search procedure and policy ordering rules.

## User account and password management

January 10, 2024

NetScaler enables you to manage user accounts and password configuration. Following are some of the activities that you can perform using a system user account or `nsroot` administrative user account.

- System user account lockout
- Lock system user account for management access
- Unlock a locked system user account for management access
- Disable management access for system user account
- Notify users for `nsroot` password change
- Force password change for `nsroot` administrative users
- Remove sensitive files in a system user account
- Strong password configuration for system users

### System user account lockout

To prevent brute force security attacks, you can configure the user lockout configuration. The configuration enables a network administrator to prevent a system user to log on to NetScaler. Also, unlock the user account before the lock period expires.

To get the details of the unsuccessful user login attempts across reboots, the `persistentLoginAttempts` parameter can be enabled.

At the command prompt, type:

```
set aaa parameter -maxloginAttempts <value> -failedLoginTimeout <value> -persistentLoginAttempts (ENABLED | DISABLED)
```

#### Example:

```
set aaa parameter -maxloginAttempts 3 -failedLoginTimeout 10 -persistentLoginAttempts ENABLED
```

#### Note:

For the `aaa.user.login_attempts` expression to take effect, you must disable the “Persistent Login Attempts” parameter.

Run the `unset aaa parameter -persistentLoginAttempts` command to disable (if enabled) the persistent login attempts.

For details about the login attempt functionality, see [Support to retrieve current login attempts for a user](#).

The following show command output displays the configuration status of the authentication, authorization, and auditing parameters:

```
1 show aaparameter
2
3 Configured AAA parameters
4
5 EnableStaticPageCaching: YES
6
7 EnableEnhancedAuthFeedback: NO
8
9 DefaultAuthType: LOCAL MaxAAAUsers: Unlimited
10
11 AAAD nat ip: None
12
13 EnableSessionStickiness : NO
14
15 aaaSessionLogLevel: INFORMATIONAL
16
17 AAAD Log Level: INFORMATIONAL
18
19 ...
20
21 Persistent Login Attempts: DISABLED
```

### Configure system user account lockout by using the GUI

1. Navigate to **Configuration > Security > AAA-Application Traffic > Authentication Settings > Change authentication AAA Settings**.
2. In the **Configure AAA Parameter** page, set the following parameters:
  - a) Max Login Attempts. The maximum number of logon attempts allowed for the user to try.
  - b) Failed Login Timeout. The maximum number of invalid logon attempts by the user.
  - c) Persistent Login Attempts. Persistent storage of unsuccessful user login attempts across reboots.
3. Click **OK**.

## ← Configure AAA Parameter

Maximum Number of Users  
 ⓘ

Max Login Attempts  
 ⓘ

NAT IP Address

Failed Login Timeout  
 ⓘ

Default Authentication Type\*  
 ▼

AAA Session Log Levels  
 ▼

AAAD Log Level  
 ▼

Enable Static Caching  
 Enable Enhanced Authentication Feedback  
 Enable Session Stickiness

Maximum Deflate Size

Persistent Login Attempts\*  
 ▼ ⓘ

Password Expiry Notification(days)

Maximum KB Questions

Login Encryption\*  
 ▼

SameSite  
 ▼

Default CSP Header\*  
 ▼

HttpOnly Cookie\*  
 ▼



When you set the parameters, the user account gets locked for 10 minutes for three or more invalid login attempts. Also, the user cannot log on even with valid credentials for 10 minutes.

**Note**

If a locked user tries to log on to NetScaler, an error message, `RBA Authentication Failure: maxlogin attempt reached for test.` appears.

**Lock system user account for management access**

NetScaler enables you to lock a system user for 24 hours and deny access to the user.

NetScaler supports the configuration for both system user and external users.

**Note**

The feature is supported only if you disable the `persistentLoginAttempts` option in the `aaa` parameter.

At the command prompt type:


```
set aaa parameter -persistentLoginAttempts DISABLED
```

Now, to lock a user account, at the command prompt, type:

```
lock aaa user test
```

**Lock a system user account by using the GUI**

1. Navigate to **Configuration > Security > AAA-Application Traffic > Authentication Settings > Change authentication AAA Settings.**
2. In **Configure AAA Parameter**, in the **Persistent Login Attempts** list, select **DISABLED.**
3. Navigate to **System > User Administration > Users.**
4. Select a user.
5. In the Select Action list, select **Lock.**

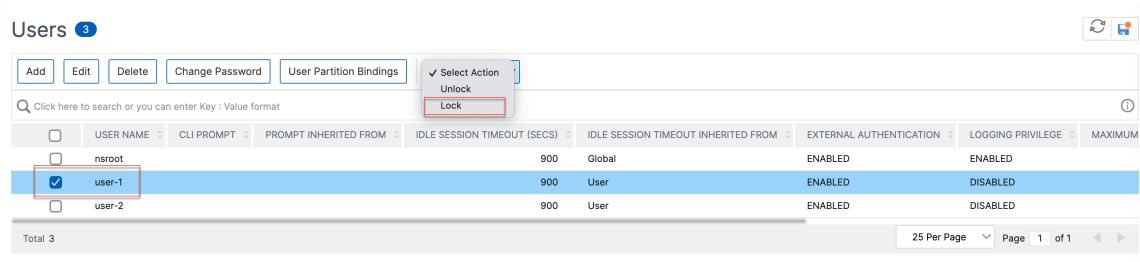

**Note**

The NetScaler GUI does not have an option to lock external users. To lock an external user, the ADC administrator must use the CLI.

When a locked system user (locked with lock authentication, authorization, and auditing user command) attempts to log in to NetScaler, an error message, “RBA Authentication Failure: User test is locked down for 24 hours.” appears.

When a user is locked to log on to management access, console access is exempted. The locked user is able to log on to the console.

**Unlock a locked system user account for management access**

System users and external users can be locked for 24 hours using the lock authentication, authorization, and auditing user command.

**Note**


NetScaler allows admins to unlock the locked user and the feature does not require any settings in “persistentloginAttempts” command.

At the command prompt, type:

```
unlock aaa user test
```

**Configure system user unlock by using the GUI**

1. Navigate to **System > User Administration > Users**.
2. Select a user.
3. Click **Unlock**.

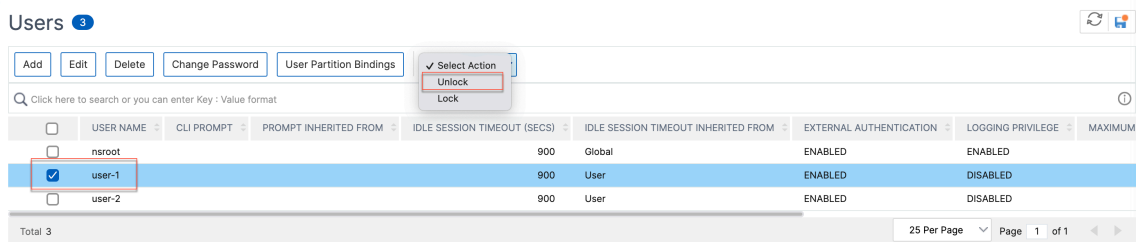

The NetScaler GUI only lists system users created in the ADC, so there is no option in the GUI to unlock external users. To unlock an external user, the nsroot administrator must use the CLI.

## Disable management access for system user account

When external authentication is configured on NetScaler and as an admin, if you prefer to deny access to system users to log on to management access, you must disable the `localAuth` option in the system parameter.

At the command prompt, type the following:

```
set system parameter localAuth <ENABLED|DISABLED>
```

### Example:

```
set system parameter localAuth DISABLED
```

## Disable management access to system user by using the GUI

1. Navigate to **Configuration > System > Settings > Change Global System Settings**.
2. In **Command Line Interface (CLI)** section, unselect the **Local Authentication** checkbox.

By disabling the option, local system users cannot log on to ADC management access.

### Note

External authentication server must be configured and reachable to disallow local system user authentication in the system parameter. If external server configured in ADC for management access is unreachable, local system users can log on to NetScaler. The behavior is set up for recovery purpose.

## Notify users for nsroot password change

For enhanced security, we recommend you to change the `nsroot` password frequently. You are notified for a password change before it expires.

You can set notification for your `nsroot` password change either from the CLI or GUI.

At the command prompt, type:

```
1 set system parameter -daystoexpire 30 -warnpriorndays 30
```

You can configure the following parameters:

- **daystoexpire** - The number of days remaining for the password expiration
- **warnpriorndays** - The number of days before password expiration to issue a warning

**Note:**

You must set the `daystoexpire` parameter if you want to set the `warnpriorndays` parameter.

The following is a sample warning message on a NetScaler CLI console:

```
Warning: [
One or more RPC nodes are configured with default passwords.For enhanced security, you must change the default RPC node password.
IMPORTANT : nsroot user password is about to expire in 30 day(s). Please change the password.
]
Done
> █
```

**Notify users for nsroot password change by using the GUI**

1. Navigate to **Configuration > System > Settings > Change Global System Settings**.
2. In the **Other Settings** section, set the following parameters:
  - Days to Expire
  - Warn Prior N Days

## ← Configure Global System Settings Parameters

**Other Settings**

Idle Session Timeout (secs)

Secure ICA port(s)

ICA port(s)

Management HTTP Port

Management HTTPS Port

Use Proxy Port  
 Proxy Protocol  
 Enable RNAT TCP Proxy  
 Advanced Analytics Stats  
 Enable RNAT Source IP Persistence  
 Use in-built system user to communicate with other appliances  
 Client TCP/IP header insertion in TCP payload  
 Enable FIPS User Mode  
 Allow Default Partition  
 Reauthentication On Authentication Parameter Change  
 Remove Sensitive Files

IP Time to Live

Days to Expire

Warn Prior N Days

3. Click **OK**.

### Force password change for administrative users

For `nsroot` secured authentication, NetScaler prompts the user to change the default password to a new one if the `forcePasswordChange` option is enabled in the system parameter. You can change

your `nsroot` password either from CLI or GUI, on your first login with the default credentials.

At the command prompt, type:

```
set system parameter -forcePasswordChange (ENABLED | DISABLED)
```

#### SSH session example for NSIP:

```
1 ssh nsroot@1.1.1.1
2 Connecting to 1.1.1.1:22...
3 Connection established.
4 To escape to local shell, press Ctrl+Alt+].
5 #####
6 WARNING: Access to this system is for authorized users only #
7 Disconnect IMMEDIATELY if you are not an authorized user! #
8
9 #####
10 Please change the default NSROOT password.
11 Enter new password:
12 Please re-enter your password:
13 Done
```

#### Remove sensitive files in a system user account

To manage sensitive data such as authorized keys and public keys for a system user account, you must enable the `removeSensitiveFiles` option. The commands that remove sensitive files when the system parameter is enabled are:

- `rm cluster instance`
- `rm cluster node`
- `rm high availability node`
- `clear config full`
- `join cluster`
- `add cluster instance`

At the command prompt, type:

```
set system parameter removeSensitiveFiles (ENABLED | DISABLED)
```

#### Example:

```
set system parameter -removeSensitiveFiles ENABLED
```

#### Strong password configuration for system users

For secured authentication, NetScaler prompts system users and administrators to set strong passwords to log on to the console. The password must be long and must be a combination of:

- One lower case character
- One upper case character
- One numeric character
- One special character

At the command prompt, type:

```
set system parameter -strongpassword <value> -minpasswordlen <value>
```

Where,

**Strongpassword.** After enabling strong password (`enable all` / `enablelocal`) all the passwords or sensitive information must have the following:

- At least 1 lower case character
- At least 1 upper case character
- At least 1 numeric character
- At least 1 special character

Exclude the list in `enablelocal` is - `NS_FIPS`, `NS_CRL`, `NS_RSAKEY`, `NS_PKCS12`, `NS_PKCS8`, `NS_LDAP`, `NS_TACACS`, `NS_TACACS ACTION`, `NS_RADIUS`, `NS_RADIUS ACTION`, `NS_ENCRYPTION_PARAMS`. So no Strong Password checks are performed on these ObjectType commands for the system user.

Possible values: `enableall`, `enablelocal`, `disabled`

Default value: `disabled`

**minpasswordlen.** Minimum length of the system user password. When the strong password is enabled by default, the minimum length is 4. User entered value can be greater than or equal to 4. The default minimum value is 1 when the strong password is disabled. The maximum value is 127 in both cases.

Minimum value: 1

Maximum value: 127

**Example:**

```
set system parameter -strongpassword enablelocal -minpasswordlen 6
```

## Default user account

The `nsrecover` user account is used by the administrator to recover the NetScaler appliance. You can log on to NetScaler using `nsrecover` if the default system users (`nsroot`) are unable to log in due to any unforeseen issues. The `nsrecover` login is independent of user configurations and lets you access the shell prompt directly. You are always allowed to log in through the `nsrecover` irrespective of whether the maximum configuration limit is reached.

## How to reset root administrator (nsroot) password

June 3, 2024

The NetScaler root administrator (`nsroot`) account provides complete access to all ADC features. So, to preserve security, the administrative account must be used only if necessary.

As an admin, the recommendation is to change your password. If you forget your password, you must first reset to the default one and then change it to a new password.

As a `nsroot` administrator, to reset your password, you must log on to your appliance and change the password. However, if you do not remember the password, you can reboot the appliance in single user mode. Mount the file system in read/write mode, and then remove the **NetScaler** entry from the `ns.conf` file. As a final step, reboot and log on to your appliance with the default one and then set a new password.

Complete the following steps to reset your root administrator password:

1. Connect a computer to the console port of the NetScaler and log on.

**Note:**

You cannot log on by using SSH to do this procedure; you must connect directly to the appliance.

2. Reboot the NetScaler.
3. Press CTRL+C when the following message appears:

```
Press [Ctrl-C] for command prompt, or any other key to boot
immediately.
Booting [kernel] in # seconds.
```

4. Run the following command to start the NetScaler in a single user mode:

```
boot -s
```

After the appliance boots, it displays the following message:

Enter full path name of shell or RETURN for `/bin/sh`:

5. Press ENTER to display the `#` prompt, and type the following commands to mount the file systems:
  - a) Run the following command to check the disk consistency:

```
fsck_ufs /dev/ada0s1a
```



**Note:**

Your flash drive has a specific device name depending on your NetScaler. Run the following command at the ADC CLI and copy the name ending with “1a.”

```
gpart show -p
```

For example,

```
nsu0# gpart show -p
=> 63 41942977 ada0 MBR (20G)
 63 41942943 ada0s1 freebsd [active] (20G)
 41943006 34 - free - (17K)

=> 0 41942943 ada0s1 BSD (20G)
 0 3354624 ada0s1a freebsd-ufs (1.6G)
 3354624 8597504 ada0s1b freebsd-swap (4.1G)
 11952128 4096 ada0s1d freebsd-ufs (2.0M)
 11956224 29986719 ada0s1e freebsd-ufs (14G)
```

For more information, see [CTX124609 article](#).

- b) Access the dev directory and enter ‘ls’ to check the drive details.

```
1 cd /dev/ada0s1a
2
3 ls
```

- c) Run the following command to display the mounted partitions:

```
df
```

**Note:**

If the flash partition is not listed, you must mount it manually.

- d) Run the following command to mount the flash drive:

```
mount /dev/ada0s1a /flash
```

6. Run the following command to change to the `nsconfig` directory:

```
cd /flash/nsconfig
```

7. Run the following commands to rewrite the `ns.conf` file and remove the set of system commands defaulting to the admin:

- a) Run the following command to create a configuration file that does not have commands defaulting to the administrator:

```
grep -v "set system user nsroot" ns.conf > new.conf
```

b) Run the following command to make a backup of the existing configuration file:

```
mv ns.conf old.ns.conf
```

c) Run the following command to rename the new.conf file to ns.conf:

```
mv new.conf ns.conf
```

8. Run the following command to reboot the NetScaler:

```
reboot
```

9. Log on using the default administrator credentials. NetScaler prompts you to replace the default `nsroot` password with a new password.

**Note:**

To use the “?” character in a password string, precede this character with the `\` character.

For example, `yourexamplepasswd?` is set for the administrator account after you perform the following operation:

```
> set system user nsroot yourexamplepasswd\?
```

10. Once the new password is set, save the configuration using the `save ns config` command.

**Note:**

For resetting a forgotten (`nsroot`) password in a high availability setup, it is recommended to shut down the peer node. If the peer node is active, the password is overwritten, as the config sync is triggered when the node comes up after reboot.

Also, read article, [CTX224027](#) to know how secure SSH access to NetScaler appliance works.

## External user authentication

May 2, 2024

Authentication service in a NetScaler appliance can be local or external. In external user authentication, the appliance uses an external server such as LDAP, RADIUS, or TACACS+ to authenticate the user. To authenticate an external user and grant the user access into the appliance, you must apply an authentication policy. The NetScaler system authentication uses Advanced authentication policies with advanced policy expressions. The Advanced authentication policies are also used for the system user management in a partitioned NetScaler appliance.

**Note**

If your appliance is still using Classic policies and its expressions, you must stop using it and migrate your Classic policy usage to the Advanced policy infrastructure.

Once you create an authentication policy, you must bind it to the system global entity. You can configure an external authentication server (for example, TACACS) by binding a single authentication policy to the system global entity. Or, you can configure a cascade of authentication servers by binding multiple policies to the system global entity.

**Note**

When an external user logs into the appliance, the system generates an error message, “User does not exist” in the `ns.log` file. The occurrence is because the system runs the `systemuser_systemcmdpolicy_binding` command to initialize the GUI for the user.

**LDAP authentication (using external LDAP servers)**

You can configure the NetScaler appliance to authenticate user access with one or more LDAP servers. LDAP authorization requires identical group names in the Active directory, on the LDAP server, and on the appliance. The characters and case must also be the same.

For more information about LDAP authentication policies, see [LDAP authentication policies](#) topic.

By default, LDAP authentication is secured by using the SSL/TLS protocol. There are two types of secure LDAP connections. In the first type, the LDAP server accepts the SSL/TLS connection on a port separate from the port used to accept clear LDAP connections. After users establish the SSL/TLS connection, LDAP traffic can be sent over the connection. The second type allows both unsecure and secure LDAP connections and the single port handles it on the server. In this scenario, to create a secure connection, the client first establishes a clear LDAP connection. Then the **LDAP** command `StartTLS` is sent to the server over the connection. If the LDAP server supports StartTLS, the connection is converted to a secure LDAP connection by using TLS.

The port numbers for LDAP connections are:

- 389 for unsecured LDAP connections
- 636 for secure LDAP connections
- 3268 for Microsoft unsecure LDAP connections
- 3269 for Microsoft secure LDAP connections

LDAP connections that use the StartTLS command use port number 389. If port numbers 389 or 3268 are configured on the appliance, it tries to use StartTLS to make the connection. If any other port number is used, connection attempts use SSL/TLS. If StartTLS or SSL/TLS cannot be used, the connection fails.

When configuring the LDAP server, the case of the alphabetic characters must match that on the server and on the appliance. If the root directory of the LDAP server is specified, all subdirectories are also searched to find the user attribute. In large directories, it can affect performance. For this reason, Citrix recommends that you use a specific organizational unit (OU).

The following table lists examples of the base distinguished name (DN).

---

| <b>LDAP server</b>                   | <b>Base DN</b>               |
|--------------------------------------|------------------------------|
| Microsoft Active Directory           | DC=Citrix, DC=local          |
| Novell eDirectory                    | dc=Citrix, dc=net            |
| IBM Directory Server                 | cn=users                     |
| Lotus Domino                         | OU=City, O=Citrix, C=US      |
| Sun ONE directory (formerly iPlanet) | ou=People, dc=Citrix, dc=com |

---

The following table lists examples of the bind distinguished name (DN).

---

| <b>LDAP server</b>                   | <b>Bind DN</b>                                                      |
|--------------------------------------|---------------------------------------------------------------------|
| Microsoft Active Directory           | CN=Administrator, CN=Users, DC=Citrix, DC=local                     |
| Novell eDirectory                    | cn=admin, dc=Citrix, dc=net                                         |
| IBM Directory Server                 | LDAP_dn                                                             |
| Lotus Domino                         | CN=Notes Administrator, O=Citrix, C=US                              |
| Sun ONE directory (formerly iPlanet) | uid=admin, ou=Administrators, ou=TopologyManagement, o=NetscapeRoot |

---

### **Configure LDAP user authentication by using the CLI**

Complete the following steps to configure LDAP authentication for external users

#### **Configure LDAP policy**

At the command prompt, do the following:

Step 1: Create an LDAP action.

```
add authentication ldapAction <name> { -serverIP <ip_addr|ipv6_addr
|*> | { -serverName <string> } } >] [-authTimeout <positive_integer>]
[-ldapBase <string>] [-ldapBindDn <string>] { -ldapBindDnPassword }
[-ldapLoginName <string>] [-groupAttrName <string>] [-subAttributeName
<string>]
```

**Example:**

```
add authentication ldapAction ldap_act -serverIP <IP> -authTimeout 30
-ldapBase "CN=xxxxx,DC=xxxx,DC=xxx"-ldapBindDn "CN=xxxxx,CN=xxxxx,DC
=xxxx,DC=xxx"-ldapBindDnPassword abcd -ldapLoginName sAMAccountName -
groupattrName memberOf -subAttributeName CN
```

For parameter description, see [Authentication and authorization command reference](#) topic.

Step 2: Create a classic LDAP policy.

```
add authentication ldapPolicy <name> <rule> [<reqAction>]
```

**Example:**

```
add authentication ldappolicy ldap_pol_classic ns_true ldap_act
```

**Note**

You can configure using a classic or an advanced LDAP policy but Citrix recommends you to use an advanced authentication policy because classic policies are deprecated from the NetScaler 13.0 release onwards.

Step 3: Create an advanced LDAP policy

```
add authentication Policy <name> <rule> [<reqAction>]
```

**Example:**

```
add authentication policy ldap_pol_advance -rule true -action ldap_act
```

Step 4: Bind the LDAP policy to system global

At the command line prompt, do the following:

```
bind system global <policyName> [-priority <positive_integer>]
```

**Example:**

```
bind system global ldap_pol_advanced -priority 10
```

**Configure LDAP user authentication by using the NetScaler GUI**

1. Navigate to **System > Authentication > Advanced Policies > Policy**.

2. Click **Add** to create an authentication policy of type LDAP.
3. Click **Create** and **Close**.

← Create Authentication Policy

Name\*  
 ⓘ

Action Type\*

Action\*

Expression \* [Expression Editor](#)  
   ⓘ  
 [Evaluate](#)

▶ More

### Bind an authentication policy to the system global for LDAP authentication using the NetScaler GUI

1. Navigate to **System > Authentication > Advanced Policies > Authentication PoliciesPolicy**.
2. In the details pane, click **Global Bindings** to create system global authentication policy binding.
3. Click **Global Bindings**.
4. Select an authentication profile.
5. Select the LDAP policy.
6. In the **System Global Authentication Policy Binding** page, set the following parameters:
  - a) Select Policy.
  - b) Binding Details

## ← System Global Authentication Policy Binding

**Policy Binding**

Select Policy\*

>
Add
Edit

▶ **More**

**Binding Details**

Priority\*

Goto Expression

▼
i

Next Factor

>
Add
Edit

Bind
Close

7. Click **Bind** and **Done**.

8. Click **Global Bindings** to confirm that the policy bounded to the system global.

### Determining attributes in the LDAP directory

If you need help with determining your LDAP directory attributes, you can easily look them up with the free LDAP browser from Softerra.

You can download the LDAP browser from the Softerra LDAP Administrator website at <http://www.ldapbrowser.com>. After the browser is installed, set the following attributes:

- The host name or IP address of your LDAP server.
- The port of your LDAP server. The default is 389.
- The base DN field can be left blank.
- The information provided by the LDAP browser can help you determine the base DN needed for the Authentication tab.
- The Anonymous Bind check determines whether the LDAP server requires user credentials for the browser to connect to it. If the LDAP server requires credentials, leave the check box cleared.

After completing the settings, the LDAP browser displays the profile name in the left pane and connects to the LDAP server.

For more information, see [LDAP](#) topic.

## Key-based authentication support for LDAP users

With key-based authentication, you can now fetch the list of public keys that are stored on the user object in the LDAP server through SSH. The NetScaler appliance during the role-based authentication (RBA) process must extract public SSH keys from the LDAP server. The retrieved public key, which is compatible with SSH, must allow you to log in through the RBA method.

A new attribute “sshPublicKey” is introduced in the “add authentication ldapAction” and “set authentication ldapAction” commands. By using this attribute, you can obtain the following benefits:

- Can store the retrieved public key, and the LDAP action uses this attribute to retrieve SSH key information from the LDAP server.
- Can extract attribute names of up to 24 KB.

### Note

The external authentication server, such as LDAP is used only to retrieve SSH key information. It is not used for the authentication purpose.

Following is an example of the flow of events through SSH:

- SSH daemon sends an AAA\_AUTHENTICATE request with password field empty to authentication, authorization, and auditing daemon port.
- If LDAP is configured to store the SSH public key, authentication, authorization, and auditing responds with the `sshPublicKey` attribute along with other attributes.
- SSH daemon verifies these keys with the client keys.
- SSH daemon passes user name in the request payload, and authentication, authorization, and auditing returns the keys specific to this user along with generic keys.

**To configure the `sshPublicKey` attribute, at the command prompt type the following commands:**

- With add operation, you can add “sshPublicKey” attribute while configuring the `ldapAction` command.

```
add authentication ldapAction <name> { -serverIP <ip_addr|ipv6_addr
|*> | { -serverName <string> } } [-serverPort <port>] ... [-Attribute1
<string>] ... [-Attribute16 <string>][-sshPublicKey <string>][-
authentication off]
```



- With set operation, you can configure “sshPublicKey” attribute to an already added ldapAction command.

```
set authentication ldapAction <name> [-sshPublicKey <string>] [-
authentication off]
```

## **RADIUS authentication (using external RADIUS servers)**

You can configure the NetScaler appliance to authenticate user access with one or more RADIUS servers. If you are using RSA SecurID, SafeWord, or Gemalto Protiva products, use a RADIUS server.

For more information about RADIUS authentication policies, see [RADIUS authentication](#).

Your configuration might require using a network access server IP address (NAS IP) or a network access server identifier (NAS ID). When configuring the appliance to use a RADIUS authentication server, use the following guidelines:

- If you enable use of the NAS IP, the appliance sends its configured IP address to the RADIUS server, rather than the source IP address used in establishing the RADIUS connection.
- If you configure the NAS ID, the appliance sends the identifier to the RADIUS server. If you do not configure the NAS ID, the appliance sends its host name to the RADIUS server.
- When the NAS IP address is enabled, the appliance ignores any NAS ID that it used for communicating with the RADIUS server.

## **Configure RADIUS user authentication by using the CLI**

At the command prompt, do the following:

Step 1: Create an RADIUS action

```
add authentication radiusaction <name> -serverip <ip> -radkey <key> -
radVendorID <id> -radattributetype <value>
```

Where,

`radVendorID` RADIUS vendor ID attribute, used for RADIUS group extraction.

`radAttributeType` RADIUS attribute type, used for RADIUS group extraction.

### **Example:**

```
add authentication radiusaction RADserver531 rad_action -serverip
1.1.1.1 -radkey key123 -radVendorID 66 -radattributetype 6
```

Step 2: Create a classic RADIUS policy.

```
add authentication radiusPolicy <name> <rule> [<reqAction>]
```

### **Example:**

```
add authentication radiuspolicy radius_pol_classic ns_true radius_act
```

**Note**

You can configure using a classic or an advanced RADIUS policy. Citrix recommends you to use the advanced authentication policy because classic policies are deprecated from the NetScaler 13.0 release onwards.

Step 3: Create an advanced RADIUS policy

```
add authentication policy <policyname> -rule true -action <radius
action name>
```

**Example:**

```
add authentication policy rad_pol_advanced -rule true -action radserver531rad_
```

Step 4: Bind the RADIUS policy to the system global.

```
bind system global <policyName> -priority <positive_integer>
```

**Example:**

```
bind system global radius_pol_advanced -priority 10
```

**Configure RADIUS user authentication by using the GUI**

1. Navigate to **System > Authentication > Advanced Policies > Policy**.
2. Click **Add** to create an authentication policy of type RADIUS.
3. Click **Create** and **Close**.

← Create Authentication Policy

Name\*  ⓘ

Action Type\*  ⓘ

Action\*

Expression \* [Expression Editor](#)


ⓘ

true [Evaluate](#)

▶ More

**Bind the authentication policy to the system global for RADIUS authentication by using the GUI**

1. Navigate to **System > Authentication > Advanced Policies > Policy**.
2. In the details pane, click **Global Bindings** to create system global authentication policy binding.
3. Click **Global Bindings**.

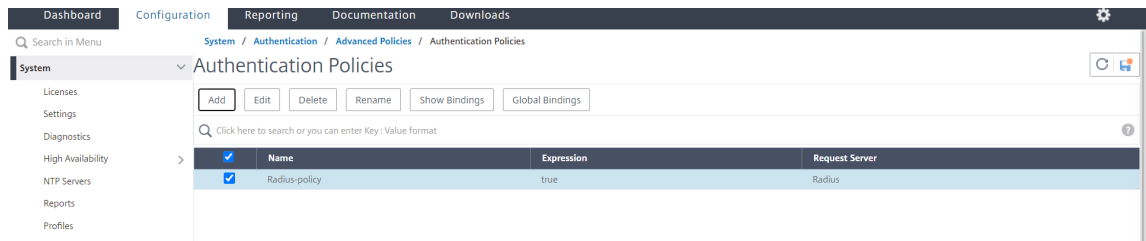

4. Select RADIUS.
5. In the **System Global Authentication Policy Binding** page, set the following parameters:
  - a) Select a policy.
  - b) Binding Details.

## ← System Global Authentication Policy Binding

**Policy Binding**

Select Policy\*

>
Add
Edit

▶ More

**Binding Details**

Priority\*

Goto Expression

▼
i


Next Factor

>
Add
Edit

Bind
Close

6. Click **Bind** and **Close**.

7. Click **Global Bindings** to confirm that the policy is bound to the system global.

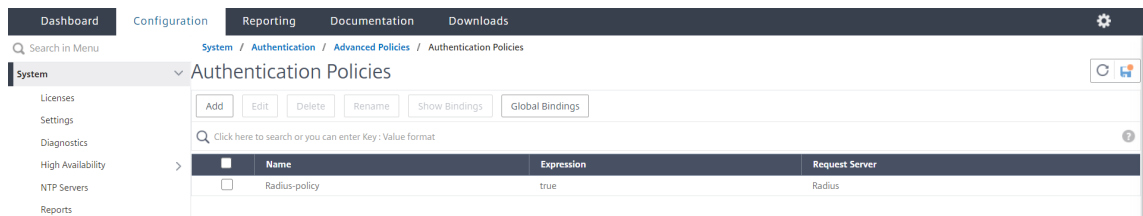

### Choose RADIUS user authentication protocols

The NetScaler appliance supports implementations of RADIUS that are configured to use any of several protocols for user authentication, including:

- Password Authentication Protocol
- Challenge-Handshake Authentication Protocol (CHAP)
- Microsoft Challenge-Handshake Authentication Protocol (MS-CHAP Version 1 and Version 2)

If your deployment is configured to use RADIUS authentication and your RADIUS server is configured with a Password Authentication Protocol. You can strengthen user authentication by assign-

ing a strong shared secret to the RADIUS server. Strong RADIUS shared secrets consist of random sequences of uppercase and lowercase letters, numbers, and punctuation, and are minimum 22 characters in length. If possible, use a random character generation program to determine RADIUS shared secrets.

To further protect RADIUS traffic, assign a different shared secret to each appliance or virtual server. When you define clients on the RADIUS server, you can also assign a separate shared secret to each client. Also, you must configure separately each policy that uses RADIUS authentication.

### **Configure IP address extraction**

You can configure the appliance to extract the IP address from a RADIUS server. When a user authenticates with the RADIUS server, the server returns a framed IP address that is assigned to the user. The following are attributes for IP address extraction:

- Allows a remote RADIUS server to supply an IP address from the internal network for a user logged on to the appliance.
- Allows configuration for any RADIUS attribute using the type ip-address, including that are vendor encoded.

When configuring the RADIUS server for IP address extraction, you configure the vendor identifier and the attribute type.

The vendor identifier enables the RADIUS server to assign an IP address to the client from a pool of IP addresses that are configured on the RADIUS server. The vendor ID and attributes are used to make the association between the RADIUS client and the RADIUS server. The vendor ID is the attribute in the RADIUS response that provides the IP address of the internal network. A value of zero indicates that the attribute is not vendor encoded. The attribute type is the remote IP address attribute in a RADIUS response. The minimum value is one and the maximum value is 255.

A common configuration is to extract the **RADIUS** attribute *framed IP address*. The vendor ID is set to zero or is not specified. The attribute type is set to eight.

### **Group extraction for RADIUS by using the GUI**

1. Navigate to **System > Authentication > Advanced Policies > Radius**, and select a policy.
2. Select or create RADIUS policy.
3. In the **Configure Authentication RADIUS Server** page, set the following parameters.
  - a) **Group Vendor Identifier**
  - b) **Group Attribute Type**
4. Click **OK** and **Close**.

## TACACS+ authentication (using external TACACS+ servers)

### Important

- Citrix recommends you do not modify any TACACS related configurations when you run a “clear ns config” command.
- TACACS related configuration related to advanced policies is cleared and reapplied when the `RBAconfig` parameter is set to NO in “clear ns config” command for advanced policy.
- When the `RBAconfig` parameter is set to NO as part of the “clear config” operation, NetScaler retains the management access sessions, in addition to retaining the RBA configurations and TACACS policies.

You can configure a TACACS+ server for authentication. Similar to RADIUS authentication, TACACS+ uses a secret key, an IP address, and the port number. The default port number is 49. To configure the appliance to use a TACACS+ server, provide the server IP address and the TACACS+ secret. You must specify port only when the server port number in use is something other than the default port number of 49.

For more information, see [TACACS authentication](#).

### Configure TACACS+ authentication by using the GUI

1. Navigate to **System > Authentication > Advanced Policies > Policy**.
2. Click **Add** to create an authentication policy of type TACACS.
3. Click **Create** and **Close**.

The screenshot shows the 'Create Authentication Policy' form in the NetScaler GUI. The form is titled 'Create Authentication Policy' and has a navigation bar at the top with 'Configuration' selected. The form fields are:

- Name\***: TACACS\_Policy
- Action Type\***: TACACS
- Action\***: TACACS (with 'Add' and 'Edit' buttons)
- Expression\***: TRUE (with 'Expression Editor' label and 'Evaluate' button)

At the bottom of the form, there are 'Create' and 'Close' buttons.

After the TACACS+ server settings are configured on the appliance, bind the policy to the system global entity.

## Bind authentication policies to the system global entity by using the CLI

When the authentication policies are configured, bind the policies to the system global entity.

At the command line prompt, do the following:

```
bind system global <policyName> [-priority <positive_integer>]
```

### Example:

```
bind system global pol_classic -priority 10
```

Also, read the Citrix article, [CTX113820](#) to know about external authentication using TACACS.

## Bind authentication policies to the system global entity by using the GUI

1. Navigate to **System > Authentication > Advanced Policies > Authentication Policies > Policy**.
2. In the details pane, click **Global Bindings** to create system global authentication policy binding.
3. Click **Global Bindings**.

### ← System Global Authentication Policy Binding

**Policy Binding**

Select Policy\*

tacacs

► More

**Binding Details**

Priority\*

100

Goto Expression

Next Factor

Click to select

4. Select the TACACS policy.
5. In the System Global Authentication Policy Binding page, set the following parameters:
  - a) Select Policy.
  - b) Binding Details

## ← System Global Authentication Policy Binding

**Policy Binding**

Select Policy\*

>
Add
Edit

---

▶ More

**Binding Details**

Priority\*

Goto Expression

Next Factor

>
Add
Edit

Bind
Close

6. Click **Bind** and **Close**.

7. Click **Global Bindings** to confirm the policy bounded to the system global.

## ← System Global Authentication Policy Binding

Add Binding
Unbind
Regenerate Priorities
No action ▾

| ☐ | PRIORITY | POLICYNAME | EXPRESSION | GOTO EXPRESSION |
|---|----------|------------|------------|-----------------|
| ☐ | 100      | tacacs     | true       | NEXT            |

Done

For more information about TACACS group extraction, read Citrix article [CTX220024](#).

### Display number of unsuccessful logon attempts for external users

The NetScaler appliance displays the number of invalid login attempts to the external user when you attempt at least one unsuccessful login before successfully logging on to the NetScaler management console.

**Note**

Currently, NetScaler supports only keyboard interactive authentication for external users with the “persistentLoginAttempts” parameter enabled in the system parameter.

At the command prompt, type:

```
set aaa parameter -maxloginAttempts <value> -failedLoginTimeout <value> -persistentLoginAttempts (ENABLED | DISABLED)]
```



**Example:**

```
set aaa parameter -maxloginAttempts 5 -failedLoginTimeout 4 -persistentLoginAttempts
ENABLED
```

```

1 Following msg will be seen to external user when he tries 1 invalid
 login attempt before successfully login to the ADC management access
 .
2
3 Connection established.
4 To escape to local shell, press 'Ctrl+Alt+]'.
5 #####
6 #
7 # # WARNING: Access to this system is for authorized users only
8 # # Disconnect IMMEDIATELY if you are not an authorized user!
9 # #
10 #####
11
12
13 WARNING! The remote SSH server rejected X11 forwarding request.
14 Last login: Mon Aug 24 17:09:00 2020 from 10.10.10.10
15
16 The number of unsuccessful login attempts since the last successful
 login : 1
17 Done
18 >
19 The number of unsuccessful login attempts since the last successful
 login : 1
20 Done
21 >

```

## SSH key-based authentication for local system users

May 2, 2023

To have a secured user access for the NetScaler appliance you can have the public key authentication of the SSH server. The SSH key-based authentication is preferred over traditional user name or password based authentication for the following reasons:

- Provides better cryptographic strength than user passwords.

- Eliminates the need of remembering complicated passwords and prevents shoulder-surfing attacks which are possible if passwords are used.
- Provides a password-less login for making automation scenarios more secured.

NetScaler supports SSH key-based authentication by applying the public and private key concept. The SSH key-based authentication in NetScaler can be enabled either for a specific user or for all local users.

**Note**

The feature is supported only for NetScaler local users and not supported for external users.

### SSH key-based authentication for local system users

In a NetScaler appliance, an administrator can set up SSH key-based authentication for a secured system access. When a user logs into the NetScaler using a private key, the system authenticates the user using the public key configured on the appliance.

#### Configure SSH key-based authentication for the NetScaler local system users by using CLI

Following configuration helps you to configure key-based authentication for NetScaler local system users.

1. Log on to a NetScaler appliance using administrator credentials.
2. By default your `sshd_config` file accesses this path: **AuthorizedKeysFile /nsconfig/ssh/authorized\_keys**.
3. Append the public key to the `authorized_keys` file: **/nsconfig/ssh/authorized\_keys**. The file path for `sshd_config` is `/etc/sshd_config`.
4. Copy the `sshd_config` file into `/nsconfig` to ensure that the changes persist even after restarting the appliance.
5. You can use the following command to restart your `sshd` process.

```
1 kill -HUP `cat /var/run/sshd.pid`
```

**Note**

If the `authorized_keys` file is not available, you must first create one and then append the public key. **Make sure the file has the following permission for the `authorized_keys`.**

```
root@NetScaler# chmod 0644 authorized_keys
```

```
1 > shell
2 Copyright (c) 1992-2013 The FreeBSD Project.
```

```
3 Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993,
 1994
4 The Regents of the University of California. All rights reserved.
5 root@ns# cd /nsconfig/ssh
6 root@ns# vi authorized_keys
7 ### Add public keys in authorized_keys file
```

## User-specific SSH key-based authentication for local system users

In a NetScaler appliance, an administrator can now set up a user specific SSH key-based authentication for a secured system access. The administrator must first configure the `Authorizedkeysfile` option in the `sshd_config` file and then add the public key in the `authorized_keys` file for a system user.

### Note

If the `authorized_keys` file is not available for a user, the administrator must first create one and then add the public key to it.

## Configure user-specific SSH key-based authentication by using the CLI

Following procedure helps you to configure user-specific SSH key-based authentication for NetScaler local system users.

1. Log on to a NetScaler appliance using administrator credentials.
2. At the shell prompt, access the `sshd_config` file and add the following configuration line:

```
AuthorizedKeysFile ~/.ssh/authorized_keys
```

### Note

The `~` is the home directory and differs for different users. It expands to the different home directory.

3. Change the directory to the system user folder and add the public keys in the `authorized_keys` file.

```
/var/pubkey/<username>/.ssh/authorized_keys
```

Once you have completed the earlier steps, restart the `sshd` process on your appliance by the following command:

```
1 kill -HUP `cat /var/run/sshd.pid`
```

**Note**

If the `authorized_keys` file is not available, you must first create one and then add the public key.

```
1 > shell
2 Copyright (c) 1992-2013 The FreeBSD Project.
3 Copyright (c) 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993,
 1994
4 The Regents of the University of California. All rights reserved.
5 root@ns# cd /var/pubkey/<username>/
6 root@ns# ls
7 .ssh
8 root@ns# cd .ssh
9 root@ns# vi authorized_keys
10 ### Add public keys in authorized_keys file
```

Also, read Citrix article, [CTX109011](#) to know how secure SSH access to NetScaler appliance works.

## Two factor authentication for system users and external users

December 29, 2023


Two factor authentication is a security mechanism where a NetScaler appliance authenticates a system user at two authenticator levels. The appliance grants access to the user only after successful validation of passwords by both levels of authentication. If a user is authenticated locally, the user profile must be created in the NetScaler database. If the user is authenticated externally then, the user name and password must match the user identity registered in the external authentication server.

**Note**

Two factor authentication feature works only from NetScaler 12.1 build 51.16 onwards.

### How two factor authentication works

Consider a user trying to log on to a NetScaler appliance. The requested application server sends the user name and password to the first external authentication server (RADIUS, TACACS, LDAP, or AD). Once the user name and password are validated, the user is prompted for a second level of authentication. The user can now provide the second password. Only if both passwords are correct, the user is allowed to access the NetScaler appliance. The following diagram is an illustration of how two-factor authentication works for a NetScaler appliance.

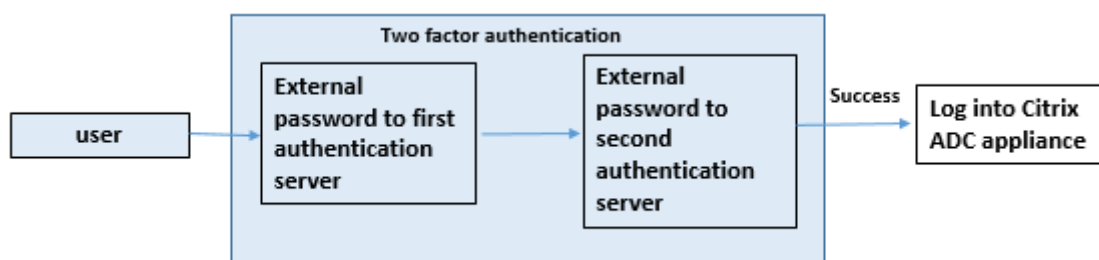

Following are the different use cases for configuring two factor authentication for external and system users.

You can configure two-factor authentication on a NetScaler appliance in different ways. The following are the different configuration scenarios for two factor authentication on a NetScaler appliance.

1. Two factor authentication (2FA) across NetScaler, GUI, CLI, API and SSH.
2. External authentication enabled and local authentication disabled for system users.
3. External authentication enabled with policy based local authentication for system users.
4. External authentication disabled for system users with local authentication enabled.
5. External authentication enabled and local authentication enabled for system users.
6. External authentication enabled for selected LDAP users

### **Use case 1: Two factor authentication (2FA) across NetScaler, GUI, CLI, API and SSH interfaces**

Two-factor authentication is enabled and available across all NetScaler management access for GUI, API, and SSH.


### **Use case 2: Two factor authentication supported on external authentication servers such as LDAP, RADIUS, Active Directory and TACACS**

You can configure two-factor authentication on the following external authentication servers for first-level and second-level user authentication.

- RADIUS
- LDAP
- Active Directory
- TACACS

### Use case 3: External authentication enabled and local authentication disabled for system users

You begin the authentication process by enabling the external authentication option and disabling local authentication for system users.

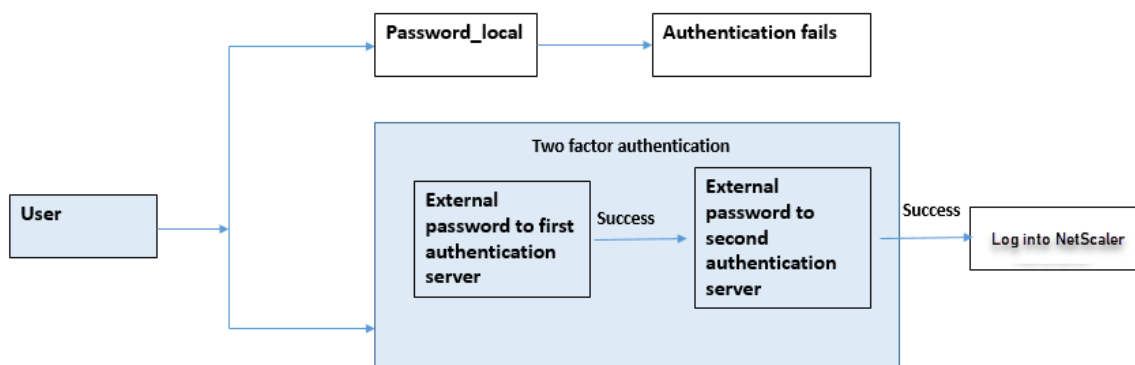

Complete the following steps by using the command line interface:

1. Add authentication action for LDAP policy
2. Add authentication policy for LDAP policy
3. Add authentication action for RADIUS policy
4. Add authentication policy for RADIUS policy
5. Add authentication login schema
6. Add and bind authentication policy label to RADIUS server
7. Bind system global authentication for LDAP policy
8. Disable local authentication in system parameter

#### Add authentication action for LDAP server (first level authentication)

At the command prompt, type:

```
add authentication ldapaction <ldap action name> -serverip <IP> -
ldapbase <> -ldapbinddn <binddn name> -ldapbinddnpassword <password
>-ldaploginname <loginname> -groupattrname <grp attribute name> -
subAttributeName <string>-ssoNameAttribute <string>
```

#### Example:

```
add authentication ldapaction ldapact1 -serverip 1.1.1.1 -ldapbase
base -ldapbindDn name -ldapbindDNpassword password -ldapLoginName
name -groupAttrName name -subAttributeName name -ssoNameAttribute
name
```

### **Add authentication policy for LDAP server (first level authentication)**

At the command prompt, type:

```
add authentication policy <ldap policy name> -rule true -action <ldap
action name>
```

#### **Example:**

```
add authentication policy pol1 -rule true -action ldapact1
```

### **Add authentication action for RADIUS server (second level authentication)**

At the command prompt, type:

```
add authentication radiusaction <rad action name> -serverip <rad
server ip> -radkey <key> -radVendorID <ID >-radattributetype <rad
attribute type>
```

#### **Example:**

```
add authentication radiusaction radact1 -serverip 1.1.1.1 -radkey 123
-radVendorID 1234 -radAttributeType 2
```

### **Add authentication policy for RADIUS server (second level authentication)**

At the command prompt, type:

```
add authentication policy <radius policy name> -rule true -action <
rad action name>
```

#### **Example:**

```
add authentication policy radpol11 -rule true -action radact1
```

### **Add authentication login schema**

You can use the “SingleAuth.xml” login schema for system users to provide the second password for the NetScaler appliance. At the command prompt, type:

```
add authentication loginSchema <login schema name> -authenticationSchema
LoginSchema/SingleAuth.xml
```

#### **Example:**

```
add authentication loginSchema radschema -authenticationSchema
LoginSchema/SingleAuth.xml
```

**Add and bind authentication policy label to RADIUS server**

At the command prompt, type:

```
add authentication policylabel <labelName> [-type (AAATM_REQ |
RBA_REQ)] [-comment <string>][-loginSchema <string>]
bind authentication policylabel <labelName> -policyName <string> -
priority <positive_integer> [-gotoPriorityExpression <expression>][-
nextFactor <string>]
```

**Example:**

```
add authentication policylabel label1 -type RBA_REQ -loginSchema
radschema
bind authentication policylabel label1 -policyName radpol11 -priority
1
```

**Bind authentication system global for LDAP policy**

At the command prompt, type:

```
bind system global ldappolicy -priority <priority> -nextFactor <
policy label name>
```

**Example:**

```
bind system global pol11 -priority 1 -nextFactor label1
```

**Disable local authentication in system parameter**


At the command prompt, type:

```
set system parameter -localauth disabled
```

**Use case 4: External authentication enabled for system user with local authentication policy attached**

In this scenario, the user is allowed to log on to the appliance using two-factor authentication with local authentication policy evaluation at the second level of user identification.



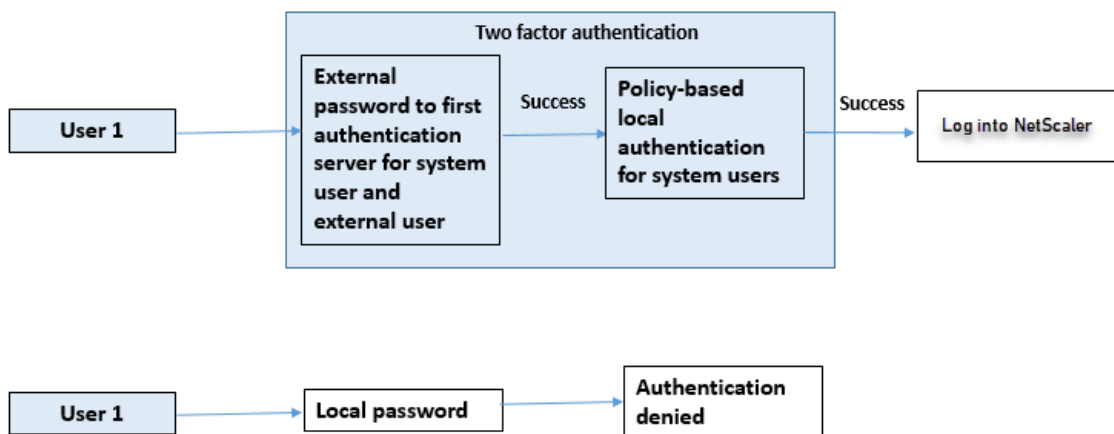

Complete the following steps by using the command line interface.

1. Add authentication action for LDAP server
2. Add authentication policy for LDAP policy
3. Add local authentication policy
4. Add authentication policy label
5. Bind LDAP policy as system global
6. Disable local authentication in system parameter

### Add authentication action for LDAP server (first level authentication)

At the command prompt, type:

```
add authentication ldapaction <ldap action name> -serverip <IP> -
ldapbase <> -ldapbinddn <binddn name> -ldapbinddnpassword <password
>-ldaploginname <loginname> -groupattrname <grp attribute name> -
subAttributeName <string>-ssoNameAttribute <string>
```

#### Example:

```
add authentication ldapaction ldapact1 -serverip 1.1.1.1 -ldapbase
base -ldapbindDn name -ldapbindDNpassword password -ldapLoginName
name -groupAttrName name -subAttributeName name -ssoNameAttribute
name -ssoNameAttribute name
```

### Add authentication policy for LDAP server (first level authentication)

At the command prompt, type:

```
add authentication policy <ldap policy name> -rule true -action <ldap
action name>
```

**Example:**

```
add authentication ldapaction ldapact1 -serverip 1.1.1.1 -ldapbase
base -ldapbindDn name -ldapbindDNpassword password -ldapLoginName
name -groupAttrName name -subAttributeName name -ssoNameAttribute
name
```

**Add local authentication policy for system users (second level authentication)**

At the command prompt, type:

```
add authentication policy <policy> -rule <rule> -action <action name>
```

**Example:**

```
add authentication policy local_policy -rule true -action LOCAL
```

**Add and bind authentication policy label**

At the command prompt, type:

```
add authentication policylabel <labelName> [-type (AAATM_REQ |
RBA_REQ)] [-comment <string>][-loginSchema <string>]
bind authentication policylabel <labelName> -policyName <string> -
priority <positive_integer> [-gotoPriorityExpression <expression>][-
nextFactor <string>]
```

**Note**

For management access, the policy type must be RBA\_REQ.

**Example:**

```
add authentication policylabel label1 -type RBA_REQ -loginSchema
radschema
bind authentication policylabel label1 -policyName radpol11 -priority
1 -gotoPriorityExpression NEXT
```


**Disable local authentication in system parameter**

At the command prompt, type:

```
set system parameter -localauth disabled
```

### Use case 5: External authentication disabled and local authentication enabled for system user

If the user has “externalAuth” disabled, it indicates that the user does not exist on the authentication server. User is not authenticated with the external authentication server even if a user with the same user name exists on the external authenticated server. User is authenticated locally.

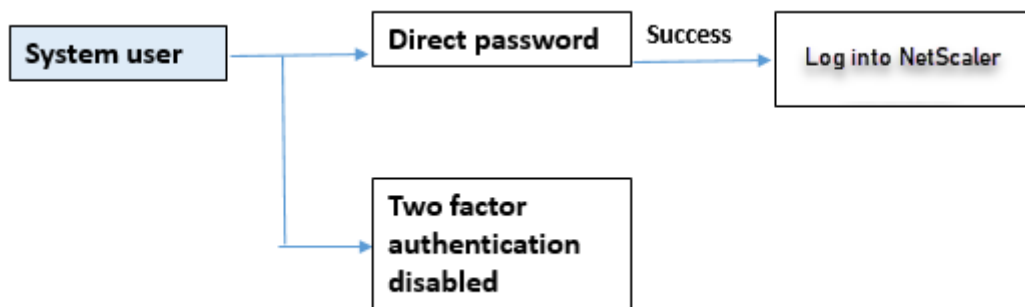

#### To enable system user password and disable external authentication

At the command prompt, type the following:


```
add system user <name> <password> -externalAuth DISABLED
```

#### Example:

```
add system user user1 password1 -externalAuth DISABLED
```

### Use case 6: External authentication enabled and local authentication enabled for system users

To configure the appliance to authenticate system users by using a local password. If this authentication fails, the user is then authenticated by using an external authentication password on the external authentication servers at two levels.

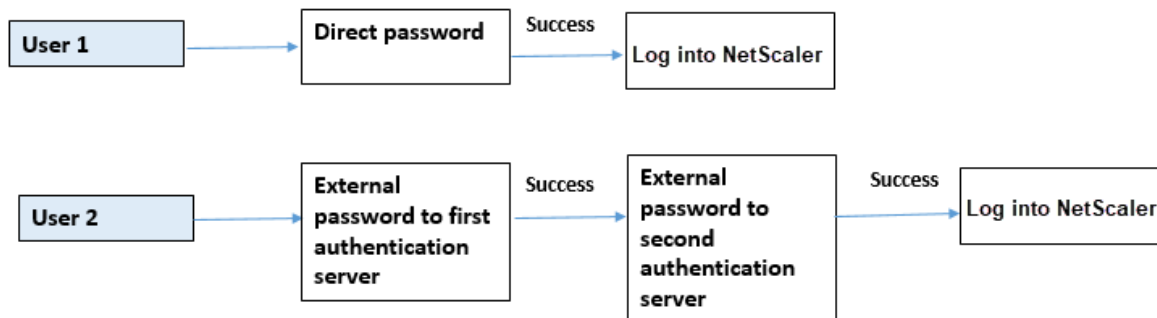

Configure the following steps by using the CLI.

1. Add authentication action for LDAP server
2. Add authentication policy for LDAP policy
3. Add authentication action for RADIUS policy
4. Add authentication policy for RADIUS policy
5. Add authentication login schema
6. Add authentication policy label
7. Bind authentication policy label for login schema
8. Bind authentication system global for RADIUS policy
9. Bind authentication system global for LDAP policy

### **Add authentication action for LDAP server**

At the command prompt, type:

```
add authentication ldapaction <ldap action name> -serverip <IP> -
ldapbase <> -ldapbinddn <binddn name> -ldapbinddnpassword <password
>-ldaploginname <loginname> -groupattrname <grp attribute name> -
subAttributeName <>-ssoNameAttribute <>
```

#### **Example:**

```
add authentication ldapaction ldapact1 -serverip 1.1.1.1 -ldapbase
base -ldapbindDn name -ldapbindDNpassword password -ldapLoginName
name -groupAttrName name -subAttributeName name -ssoNameAttribute
name
```

### **Add authentication policy for LDAP policy**

At the command prompt, type:

```
add authentication policy <policy name> --rule true -action <ldap
action name>
```

#### **Example:**

```
add authentication policy pol1 -rule true -action ldapact1
```

### **Add authentication action for RADIUS server**

At the command prompt, type:

```
add authentication radiusaction <rad action name> -serverip <rad
server ip> -radkey <key> -radVendorID <ID >-radattributetype <rad
attribute type>
```

**Example:**

```
add authentication radiusaction radact1 -serverip 1.1.1.1 -radkey 123
-radVendorID 1234 -radAttributeType 2
```

**Add advanced authentication policy for RADIUS server**

At the command prompt, type:

```
add authentication policy <policy name> -rule true -action <rad
action name>
```

**Example:**

```
add authentication policy radpol11 -rule true -action radact1
```

**Add authentication login schema**

You can use the SingleAuth.xml login schema to display the login page and authenticate the system user at the second level authentication.

At the command prompt, type:

```
add authentication loginSchema <name> -authenticationSchema <string>
```

**Example:**

```
add authentication loginSchema radschema -authenticationSchema
LoginSchema/SingleAuth.xml
```

**Add and bind authentication policy label to RADIUS authentication policy for user login**

At the command prompt, type:

```
add authentication policylabel <labelName> [-type (AAATM_REQ |
RBA_REQ)] [-comment <string>][-loginSchema <string>]
```

**Example:**

```
add authentication policylabel label1 -type RBA_REQ -loginSchema
radschema
```

```
bind authentication policylabel <labelName> -policyName <string> -
priority <positive_integer> [-gotoPriorityExpression <expression>][-
nextFactor <string>]
```

**Example:**

```
bind authentication policylabel label1 -policyName rad pol11 -priority
1
```

**Bind authentication policy global**

At the command prompt, type:

```
bind system global [<policyName> [-priority <positive_integer>] [-
nextFactor <string>] [-gotoPriorityExpression <expression>]]
```

**Example:**

```
bind system global radpol11 -priority 1 -nextFactor label11
```

**Use case 7: External authentication enabled for selected external users only**

To configure selective external users with two-factor authentication as per the search filter configured in the LDAP action while other system users are authenticated using single factor authentication.

Configure the following steps by using the CLI.

1. Add authentication action for LDAP server
2. Add authentication policy for LDAP policy
3. Add authentication action for RADIUS policy
4. Add authentication policy for RADIUS policy
5. Add authentication login schema
6. Add authentication policy label
7. Bind authentication policy label for login schema
8. Bind authentication system global for RADIUS policy

**Add authentication action for LDAP server**

At the command prompt, type:

```
add authentication ldapaction <ldap action name> -serverip <IP> -
ldapbase <> -ldapbinddn <binddn name> -ldapbinddnpassword <password
>-ldaploginname <loginname> -groupattrname <grp attribute name> -
subAttributename <>-ssoNameAttribute <>
```

**Example:**

```
add authentication ldapaction ldapact1 -serverip 1.1.1.1 -ldapbase
base -ldapbindDn name -ldapbindDNpassword password -ldapLoginName
name -groupAttrName name -subAttributeName name -ssoNameAttribute
name
```

**Add authentication policy for LDAP policy**

At the command prompt, type:

```
add authentication policy <policy name> --rule true -action <ldap
action name>
```

**Example:**

```
add authentication policy pol1 -rule true -action ldapact1
```

**Add authentication action for RADIUS server**

At the command prompt, type:

```
add authentication radiusaction <rad action name> -serverip <rad
server ip> -radkey <key> -radVendorID <ID >-radattributetype <rad
attribute type>
```

**Example:**

```
add authentication radiusaction radact1 -serverip 1.1.1.1 -radkey 123
-radVendorID 1234 -radAttributeType 2
```

**Add advanced authentication policy for RADIUS server**

At the command prompt, type:

```
add authentication policy <policy name> -rule true -action <rad
action name>
```

**Example:**

```
add authentication policy radpol11 -rule true -action radact1
```

**Add authentication login schema**

You can use the SingleAuth.xml login schema to provide the login page for the appliance to authenticate a system user at a second level of authentication.

At the command prompt, type:

```
add authentication loginSchema <name> -authenticationSchema <string>
```

**Example:**

```
add authentication loginSchema radschema -authenticationSchema
LoginSchema/SingleAuth.xml
```

**Add and bind authentication policy label to RADIUS authentication policy for user login**

At the command prompt, type:

```
add authentication policylabel <labelName> [-type (AAATM_REQ |
RBA_REQ)] [-comment <string>][-loginSchema <string>]
```

**Example:**

```
add authentication policylabel label1 -type RBA_REQ -loginSchema
radschema
bind authentication policylabel <labelName> -policyName <string> -
priority <positive_integer> [-gotoPriorityExpression <expression>][-
nextFactor <string>]
```

**Example:**

```
bind authentication policylabel label1 -policyName radpol11 -priority
```

**Bind authentication policy global**

At the command prompt, type:

```
bind system global [<policyName> [-priority <positive_integer>] [-
nextFactor <string>] [-gotoPriorityExpression <expression>]]
```

**Example:**

```
bind system global radpol11 -priority 1 -nextFactor label11
```

To configure without two-factor authentication for group users using the search filter:



1. Add authentication action for LDAP server
2. Add authentication policy for LDAP server
3. Bind authentication system global for LDAP server

### **Add authentication action for LDAP server**

At the command prompt, type:

```
add authentication ldapaction <ldap action name> -serverip <IP> -
ldapbase <> -ldapbinddn <binddn name> -ldapbinddnpassword <password
>-ldaploginname <loginname> -groupattrname <grp attribute name> -
subAttributeName <>-searchFilter<>
```

#### **Example:**

```
add authentication ldapaction ldapact1 -serverip 1.1.1.1 -ldapbase
base -ldapbindDn name -ldapbindDNpassword password -ldapLoginName
name -groupAttrName name -subAttributeName name - searchFilter "
memberOf=CN=grp4,CN=Users,DC=aaatm-test,DC=com"
```

### **Add authentication policy for LDAP server**

At the command prompt, type:

```
add authentication policy <policy name> --rule true -action <ldap
action name>
```

#### **Example:**

```
add authentication policy pol1 -rule true -action ldapact1
```

### **Bind authentication system global for LDAP policy**

At the command prompt, type:

```
bind system global ldappolicy -priority <priority> -nextFactor <
policy label name>
```

#### **Example:**

```
bind system global pol11 -priority 1 -nextFactor label11
```

## Display customized prompt message for two factor authentication

When you configure two factor password field with SingleAuth.xml file at `/flash/nsconfig/loginschema/LoginSchema`

Following is the snippet of a SingleAuth.xml file where 'SecondPassword:' is the second password field name which is prompted to the user to enter a second password.

```

1 <?xml version="1.0" encoding="UTF-8"?>
2 <AuthenticateResponse xmlns="http://citrix.com/authentication/response
 /1">
3 <Status>success</Status>
4 <Result>more-info</Result>
5 <StateContext/>
6 <AuthenticationRequirements>
7 <PostBack>/nf/auth/doAuthentication.do</PostBack>
8 <CancelPostBack>/nf/auth/doLogoff.do</CancelPostBack>
9 <CancelButtonText>Cancel</CancelButtonText>
10 <Requirements>
11 <Requirement><Credential><ID>login</ID><SaveID>ExplicitForms-Username</
 SaveID><Type>username</Type></Credential><Label><Text>
 singleauth_user_name</Text><Type>nsg-login-label</Type></Label><
 Input><AssistiveText>singleauth_please_supply_either_domain\
 username_or_user@fully.qualified.domain</AssistiveText><Text><Secret
 >false</Secret><ReadOnly>false</ReadOnly><InitialValue/><Constraint
 >.+</Constraint></Text></Input></Requirement>
12 <Requirement><Credential><ID>passwd</ID><SaveID>ExplicitForms-Password
 </SaveID><Type>password</Type></Credential><Label><Text>
 SecondPassword:</Text><Type>nsg-login-label</Type></Label><Input><
 Text><Secret>true</Secret><ReadOnly>false</ReadOnly><InitialValue/><
 Constraint>.+</Constraint></Text></Input></Requirement>
13 <Requirement><Credential><Type>none</Type></Credential><Label><Text>
 singleauth_first_factor</Text><Type>nsg_confirmation</Type></Label><
 Input/></Requirement>
14 <Requirement><Credential><ID>saveCredentials</ID><Type>savecredentials
 </Type></Credential><Label><Text>singleauth_remember_my_password</
 Text><Type>nsg-login-label</Type></Label><Input><CheckBox><
 InitialValue>false</InitialValue></CheckBox></Input></Requirement>
15 <Requirement><Credential><ID>loginBtn</ID><Type>none</Type></Credential
 ><Label><Type>none</Type></Label><Input><Button>singleauth_log_on</
 Button></Input></Requirement>
16 </Requirements>
17 </AuthenticationRequirements>
18 </AuthenticateResponse>

```

## Configuring two-factor authentication by using the NetScaler GUI

1. Log on to NetScaler appliance.
2. Go to **System > Authentication > Advanced Policies > Policy**.

3. Click **Add** to create the first level authentication policy.
4. In **Create Authentication Policy** page, set the following parameters.
  - a) Name. Name of the policy
  - b) Action Type. Select action type as LDAP, Active Directory, RADIUS, TACACS, and so on
  - c) Action. The authentication action (profile) to associate with the policy. You can choose an existing authentication action, or click the plus and create an action of the proper type.
  - d) Expression. Provide an advanced policy expression.
5. Click **Create**.
6. Click **Add** to create the second level authentication policy.
7. In the **Create Authentication Policy** page, set the following parameters:
  - a) Name. Name of the policy
  - b) Action Type. Select action type as LDAP, Active Directory, RADIUS, TACACS, and so on
  - c) Action. The authentication action (profile) to associate with the policy. You can choose an existing authentication action, or click the + icon to create an action of the proper type.
  - d) Expression. Provide an advanced policy expression
8. Click **Create**.
9. In the **Authentication Policies** page, click **Global Binding**.
10. In the **Create Global Authentication Policy Binding** page, select the first level authentication policy, and click **Add Binding**.
11. In the **Policy Binding** page, select the authentication policy and set the following policy binding parameter.
  - a) Next Factor. Select the second level authentication policy label.
12. Click **Bind** and **Close**.

## ← System Global Authentication Policy Binding

**Policy Binding**

Select Policy\*

LDAP-policy > Add Edit

► **More**

**Binding Details**

Priority\*

100

Goto Expression

NEXT v ⓘ

Next Factor

factor-2 x > Add Edit ⓘ

Bind Close

13. Click **Done**.

14. Log on to the NetScaler appliance for the second level authentication. The user can now provide the second password. Only if both passwords are correct, the user is allowed to access the NetScaler appliance.

### Note

The TACACS configured for a second factor authentication does not support authorization and accounting even if you enable it on the “tacacsAction” command. The second factor is used for the authentication purpose only.

Also, see [Two factor authentication in NetScaler nFactor authentication](#) topic.

## Restricted system user authentication to NetScaler management interfaces

May 2, 2023

You can restrict system user access to specific NetScaler management interfaces such as CLI or API. The `allowedManagementInterface` parameter defines the list of permitted management inter-

faces. For example, if the management interface for a user or a group is set to API, all users in the group can access NetScaler through API and not through CLI. However, the NetScaler GUI is part of the API interface and users with API permission can also access the GUI interface.

**Note:**

By default, users and groups have access to all interfaces (CLI, API, and the GUI).

You can configure the parameter either at the user level or at the user group level. When you configure at the group level, the configuration is applied across all user accounts in the group. If a user is bound to multiple groups, the appliance allows access to an aggregated set of management interfaces. You can specify settings for a user in a group by configuring the parameter at user level. In this case –user level setting is configured for a group.

In certain scenarios, when the customer is using an external authentication server for managing user accounts, the server details are configured on the appliance. In this case, the administrator can create a user group in the NetScaler appliance and add all users (grouped in the external server) to the group. For example, all users managed in the external server are added to the API\_users group and the admin can configure the group locally on the appliance.

**Note:**

The NetScaler appliance allows only `nsroot` administrator (superuser) to configure the parameter and does not allow any system user to change the parameter setting.

## Configure user access to NetScaler management interfaces by using the CLI

To allow user access to a specific management interface, you must set the allowed management interface parameter. At the command prompt, type:

```
set system group <groupName> [-allowedManagementInterface (CLI | API)]
```

**Example:**

```
set system group network_usergroup -allowedManagementInterface CLI
```

For parameter description, see [Authentication and authorization command reference](#) topic.

To know about GUI and CLI interfaces, see [Access NetScaler](#) topic.

## TCP Configurations

September 30, 2024

TCP configurations for a NetScaler appliance can be specified in an entity called a TCP profile, which is a collection of TCP settings. The TCP profile can then be associated with services or virtual servers that want to use these TCP configurations.

A default TCP profile can be configured to set the TCP configurations that will be applied by default, globally to all services and virtual servers.

**Note:**

When a TCP parameter has different values for service, virtual server, and globally, the value of the most-specific entity (the service) is given the highest precedence. The NetScaler appliance also provides other approaches for configuring TCP.

## **Supported TCP configuration**

The NetScaler appliance supports the following TCP capabilities:

### **Defending TCP against spoofing attacks as per RFC 5961**

NetScaler supports RST window attenuation and SYN spoof protection methods to defend TCP against spoofing attacks and is compliant with RFC 4953.

Starting from NetScaler 14.1-4.x release, NetScaler is compliant with RFC 5961 which provides improved protection against TCP spoofing attacks. With RFC 5961 compliance, NetScaler provides the following capabilities in addition to RST window attenuation and SYN spoof protection:

- Reduces the probability of invalid data injection.
- Allows imposing a limit on the number of challenge ACK responses per second sent by the NetScaler.

By default, RFC 5961 compliance is disabled. You can enable it by using the CLI or the GUI. For more information, see [Defending TCP against spoofing attacks](#).

### **Explicit Congestion Notification (ECN)**

The appliance sends notification of the network congestion status to the sender of the data and takes corrective measures for data congestion or data corruption. The NetScaler implementation of ECN is RFC 3168 compliant.

### **Round trip time measurement (RTTM) using the timestamp option**

For the TimeStamp option to work, at least one side of the connection (client or server) must support it. The NetScaler implementation of the [TimeStamp](#) option is RFC 1323 compliant.

## Detection of spurious retransmissions

This detection can be done using TCP duplicate selective acknowledgment (D-SACK) and forward RTO-Recovery (F-RTO). If there are spurious retransmissions, the congestion control configurations are reverted to their original state. The NetScaler implementation of D-SACK is RFC 2883 compliant, and F-RTO is RFC 5682 compliant.

## Congestion control

This functionality use New-Reno, BIC, CUBIC, Nile, TCP Westwood, and BBR algorithms.

- **BBR:** Operates by monitoring the round-trip time (RTT) and bandwidth rather than reacting to packet loss. This approach allows BBR to regulate traffic effectively that results in improved throughput and latency.
- **BIC:** Optimized for high speed networks with high latency (long fat networks). For these networks, BIC has a significant advantage over other congestion control algorithms in correcting severely under-utilized bandwidth.
- **CUBIC:** Achieves high bandwidth connections over networks more quickly and reliably during high latency. It helps to optimize long fat networks.
- **Default/New Reno** - Prevents too many packet losses due to congestion, and maintains fairness with other flows.
- **Nile:** NetScaler has developed this TCP optimization algorithm for high-speed networks such as LTE, LTE advanced, and 3G. Nile addresses unique challenges caused by fading, random or congestive losses, link layer retransmissions, and carrier aggregation. For more information, see NILE algorithm. For more information, see [NILE algorithm](#).
- **Westwood:** TCP Westwood (TCPW) algorithm is a sender-side modification of the TCP congestion window algorithm that improves the performance in both wired and wireless networks.

### Configure BBR algorithm:

Starting from NetScaler release 14.1-21.x, NetScaler supports the Bottleneck Bandwidth and Round-trip propagation time (BBR) algorithm for TCP. While using this algorithm, NetScaler provides an enhanced network performance and a more efficient traffic management system.

To configure BBR support using the CLI, run the following command:

```
1 set ns tcpprofile <tcpprofile> -SACK [enable|disable] -flavor [BBR |
 BIC | CUBIC | Default | Nile | Westwood]
```

#### Note:

For optimal functionality of the BBR congestion control algorithm, the Selective Acknowledgment (SACK) feature must be enabled on the TCP profile.

**Example:**

```
1 set ns tcpprofile <tcpprofilename> -SACK enable -flavor BBR
```

To configure BBR support using the GUI:

1. Navigate to **System > Profiles > TCP profiles** and click **Add**.
2. In the **Create TCP Profile** page, for the **TCP Flavor** field, select **BBR**.

### Window scaling

This increases the **TCP receive** window size beyond its maximum value of 65,535 bytes.

Points to consider before you configure window scaling

- You do not set a high value for the scale factor, because this might have adverse effects on the appliance and the network.
- You do not configure window scaling unless you clearly know why you want to change the window size.
- Both hosts in the TCP connection send a window scale option during connection establishment. If only one side of a connection sets this option, window scaling is not used for the connection.
- Each connection for the same session is an independent window scaling session. For example, when a client's request and the server's response flow through the appliance, it is possible to have window scaling between the client and the appliance without window scaling between the appliance and the server.

### TCP maximum congestion window

The window size is a user configurable one. The default value is 8190 bytes.

### Selective acknowledgment (SACK)

This uses the data receiver (either a NetScaler appliance or a client) notifies the sender about all the segments that have been received successfully.

### Forward acknowledgment (FACK)

This functionality avoids TCP congestion by explicitly measuring the total number of data bytes outstanding in the network, and helping the sender (either a NetScaler or a client) control the amount of data injected into the network during retransmission timeouts.



### **TCP connection multiplexing**

This functionality enables reuse of existing TCP connections. The NetScaler appliance stores established TCP connections to the reuse pool. Whenever a client request is received, the appliance checks for an available connection in the reuse pool and serves the new client if the connection is available. If it is unavailable, the appliance creates a connection for the client request and stores the connection to the reuse pool. The NetScaler supports connection multiplexing for HTTP, SSL, and DataStream connection types.

### **Dynamic receive buffering**

This allows the receive buffer to be adjusted dynamically based on memory and network conditions.

### **MPTCP Connection**

MPTCP connections between the client and the NetScaler. MPTCP connections are not supported between the NetScaler and the back-end server. The NetScaler implementation of MPTCP is RFC 6824 compliant.

You can view MPTCP statistics such as active MPTCP connections and active subflow connections by using the command line interface.

At the command prompt, type one of the following commands to display a summary or detailed summary of MPTCP statistics, or to clear the statistics display:

1. `Stat MPTCP`
2. `Stat mptcp -detail`
3. `Clearstats basic`

**Note:**

To establish an MPTCP connection, both the client and the NetScaler appliance must support the same MPTCP version. If you use the NetScaler appliance as an MPTCP gateway for your servers, the servers do not have to support MPTCP. When the client starts a new MPTCP connection, the appliance identifies the client's MPTCP version from the MP\_CAPABALE option in the SYN packet. If the client's version is higher than the one supported on the appliance, the appliance indicates its highest version in the MP\_CAPABALE option of the SYN-ACK packet. The client then falls back to a lower version and sends the version number in the MP\_CAPABALE option of the ACK packet. If that version is supportable, the appliance continues the MPTCP connection. Otherwise, the ap-

pliance falls back to a regular TCP. The NetScaler appliance does not initiate subflows (MP\_JOIN's). The appliance expects the client to initiate subflows.

### Support for additional address advertisement (ADD\_ADDR) in MPTCP

In an MPTCP deployment, if you have a virtual server bound with an IP set that has additional virtual server IP addresses, then the additional address advertisement (ADD\_ADDR) functionality advertises the IP address of the virtual servers bound to the IP set. Clients can initiate additional MP\_JOIN subflows to the advertised IP addresses.

#### Points to remember about MPTCP ADD\_ADDR functionality

- You can send a maximum of 10 IP addresses as part of the ADD\_ADDR option. If there are more than 10 IP addresses with the `mptcpAdvertise` parameter enabled, after advertising the 10 IP address, the appliance ignore the rest of the IP addresses.
- If the MP-CAPABLE subflow is made to one of the IP addresses in the IP set instead of the primary virtual server IP address, then the virtual server IP address is advertised if the `mptcpAdvertise` parameter is enabled for the virtual server IP address

#### Configure more address advertisement (ADD\_ADDR) feature to advertise additional VIP address by using the CLI

You can configure the MPTCP ADD\_ADDR functionality for both IPv4 and IPv6 address types. In general, multiple IPv4 and IPv6 IPs can be attached to a single IP set and the parameter can be enabled on any subset of IP addresses. In the ADD\_ADDR feature, only the IP addresses that have the “mptcpAdvertise” option enabled is advertised and the remaining IP addresses from the IP set is ignored. Complete the following steps to configure the ADD\_ADDR feature:

1. Add an IP set.
2. Add an IP address of type virtual server IP (VIP) with MPTCP advertise enabled.
3. Bind the IP address with the IP set.
4. Configure the IP set with the load balancing virtual server.

**Add an IP set** At the command prompt, type:

```
1 add ipset <name> [-td <positive_integer>]
```

#### Example:

```
1 add ipset ipset_1
```

**Add an IP address of type virtual server IP (VIP) with MPTCP advertise enabled** At the command prompt, type:

```
1 add ns ip <IPAddress>@ <netmask> [-mptcpAdvertise (YES | NO)] -type <type>
```

**Example:**

```
add ns ip 10.10.10.10 255.255.255.255 -mptcpAdvertise YES -type VIP
```

**Bind IP addresses to the IP set** At the command prompt, type:

```
1 bind ipset <name> <IPAddress>
```

**Example:**

```
bind ipset ipset_1 10.10.10.10
```

**Configure IP set to load balancing virtual server** At the command prompt, type:

```
1 set lb vserver <name> [-ipset <string>]
```

**Example:**

```
1 set lb vserver lb1 -ipset ipset_1
```

**Sample Configuration:**

```
1 Add ipset ipset_1
2 add ns ip 10.10.10.10 255.255.255.255 -mptcpAdvertise YES -type VIP
3 bind ipset ipset_1 10.10.10.10
4 set lb vserver lb1 -ipset ipset_1
```

### Configure advertising external IP address using ADD\_ADDR functionality

If the advertised IP address is owned by the external entity and the NetScaler appliance needs to advertise the IP address, the “MPTCPAdvertise” parameter must be enabled with state and ARP parameters disabled.

Complete the following steps to configure [ADD\\_ADDR](#) for advertising the external IP address.

1. Add an IP address of type virtual server IP (VIP) with MPTCP advertise enabled.
2. Bind the IP address with the IP set.
3. Bind IP set with the load balancing virtual server

**Add an external IP address of type virtual server IP (VIP) with MPTCP advertise enabled** At the command prompt, type:

```
1 add ns ip <IPAddress>@ <External-IP-mask -type VIP> [-mptcpAdvertise (
 YES | NO)] -type <type> -state DISABLED -arp DISABLED
```

**Example:**

```
add ns ip 10.10.10.10 255.255.255.255 -mptcpAdvertise YES -type VIP -
state DISABLED -arp DISABLED
```

**Bind IP addresses to the IP set** At the command prompt, type:

```
1 bind ipset <name> <IPAddress>
```

**Example:**

```
bind ipset ipset_1 10.10.10.10
```

**Configure IP set to load balancing virtual server** At the command prompt, type:

```
1 set lb vserver <name> [-ipset <string>]
```

**Example:**

```
set lb vserver lb1 -ipset ipset_1
```

**Sample Configuration:**

```
1 add ns ip 10.10.10.10 255.255.255.255 -mptcpAdvertise YES -type VIP
 state DISABLED -arp DISABLED
2 bind ipset ipset_1 10.10.10.10
3 set lb vserver lb1 -ipset ipset_1
```

## Advertise an IP address to MPTCP enabled clients by using the NetScaler GUI

Complete the following step to advertise the IP address to the MPTCP enabled clients:

1. Navigate to **System > Network > IPs**.
2. In the details pane, click **Add**.
3. In the **Create IP Address** page, select the **MPTCP Advertise** check box to set the parameter. By default, it is disabled.

### **Extracting the TCP/IP path overlay option and inserting the client-IP HTTP header**

Extracting TCP/IP path overlay and inserting client-IP HTTP header. Data transport through overlay networks often uses connection termination or Network Address Translation (NAT), in which the IP address of the source client is lost. To avoid this, the NetScaler appliance extracts the TCP/IP path overlay option and inserts the source client's IP address into the HTTP header. With the IP address in the header, the web server can identify the source client that made the connection. The extracted data is valid for a lifetime of the TCP connection and therefore, this prevents the next hop host from having to interpret the option again. This option is applicable only for web services that have the client-IP insertion option enabled.

### **TCP segmentation offload**

Offloads TCP segmentation to the NIC. If you set the option as "AUTOMATIC", TCP segmentation is offloaded to the NIC, if NIC is supported.

### **Synchronizing cookie for TCP handshake with clients**

This is used for resisting SYN flood attacks. You can enable or disable the [SYNCOOKIE](#) mechanism for TCP handshake with clients. Disabling [SYNCOOKIE](#) prevents [SYN](#) attack protection on the NetScaler appliance.

### **Learning MSS to enable MSS learning for all the virtual servers configured on the appliance**

#### **Supported TCP Parameters**

The following table provides a list of TCP parameters and their default values:

---

| Parameter                                            | Default Value  | Description                                                                                                                                |
|------------------------------------------------------|----------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| Window Management                                    |                |                                                                                                                                            |
| TCP Delayed-ACK Timer                                | 100 millisec   | Timeout for TCP delayed ACK, in milliseconds.                                                                                              |
| TCP minimum Retransmission Timeout(RTO) in milli sec | 1000 milli sec | Minimum retransmission timeout, in milliseconds, specified in 10-millisecond increments (value must yield a whole number if divided by 10) |

| Parameter                                              | Default Value | Description                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------------------------------------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connection idle time before starting keep-alive probes | 900 seconds   | Silently drop TCP established connections on idle timeouts established connections on idle timeout                                                                                                                                                                                                                                                                                                      |
| TCP Timestamp Option                                   | DISABLED      | The timestamp option allows for accurate RTT measurement. Enable or Disable TCP Timestamp option.                                                                                                                                                                                                                                                                                                       |
| Multipath TCP session timeout                          | 0 seconds     | MPTCP session timeout in seconds. If this value is not set, idle. MPTCP sessions are flushed after the virtual server's client idle timeout.                                                                                                                                                                                                                                                            |
| Silently Drop HalfClosed connections on idle timeout   | 0 seconds     | Silently drop TCP half closed connections on idle timeout.                                                                                                                                                                                                                                                                                                                                              |
| Silently Drop Established connections on idle timeout  | DISABLED      | Silently drop TCP established connections on idle timeout                                                                                                                                                                                                                                                                                                                                               |
| Memory Management                                      |               |                                                                                                                                                                                                                                                                                                                                                                                                         |
| TCP Buffer Size                                        | 131072 bytes  | TCP buffer size is the receive buffer size on the NetScaler. This buffer size is advertised to clients and servers from NetScaler and it controls their ability to send data to NetScaler. The default buffer size is 131072 and usually it is safe to increase this when talking to internal server. <b>Note:</b> The buffer size is also impacted by the actual application adjustments to NetScaler. |
| TCP Send Buffer Size                                   | 131072 bytes  | TCP Send Buffer Size                                                                                                                                                                                                                                                                                                                                                                                    |
| TCP Dynamic Receive Buffering                          | DISABLED      | NetScaler and it controls their ability to send data to NetScaler. The default buffer size is 131072 and usually it is safe to increase this when talking to internal server. <b>Note:</b> The buffer size is also impacted by the actual application adjustments to NetScaler.                                                                                                                         |
| TCP Max congestion window(CWND)                        | 524288 bytes  | For SSL endpoint cases, the buffer size is set to 40 K and for Compression, it is set to 96 K.                                                                                                                                                                                                                                                                                                          |
| Window Scaling status                                  | ENABLED       | Enable or disable window Scaling. <b>Note:</b> The buffer size argument must be set for dynamic adjustments to take place.                                                                                                                                                                                                                                                                              |

| Parameter                                                          | Default Value | Description                                                                                                                                                                                                                                                                                                                           |
|--------------------------------------------------------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Window Scaling factor                                              | 8             | Factor used to calculate the new window size. This argument is needed only when window scaling is enabled.                                                                                                                                                                                                                            |
| Connection Setup                                                   |               |                                                                                                                                                                                                                                                                                                                                       |
| Keep-alive probes                                                  | DISABLED      | Send periodic TCP keep-alive (KA) probes to check if peer is still up.                                                                                                                                                                                                                                                                |
| Connection idle time before starting keep-alive probes             | 900 seconds   | Duration, in seconds, for the connection to be idle, before sending a keep-alive (KA) probe.                                                                                                                                                                                                                                          |
| Keep-alive probe interval                                          | 75 seconds    | Time interval, in seconds, before the next keep-alive (KA) probe, if the peer does not respond.                                                                                                                                                                                                                                       |
| Maximum keep-alive probes to be missed before dropping connection. | 3             | Number of keep-alive (KA) probes to be sent when not acknowledged, before assuming the peer to be down.                                                                                                                                                                                                                               |
| RFC 5961 compliance                                                | DISABLED      | Enable RFC 5961 compliance to protect against spoofing. When enabled, provides both RST window attenuation and SYN spoof protection and also allows you to control the number of challenge ACK sent by the NetScaler. For RFC 5961 compliance feature to work, you must disable both RST window attenuation and SYN spoof protection. |

---

| Parameter                                                           | Default Value | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------------------------------------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RST window attenuation (spoof protection).                          | DISABLED      | Enable or disable RST window attenuation to protect against spoofing. When enabled, the reply is with corrective ACK when a sequence number is invalid.                                                                                                                                                                                                                                                                                                     |
| Accept RST with last acknowledged sequence number.<br>Data transfer | ENABLED       |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| Immediate ACK on PUSH packet                                        | ENABLED       | Send immediate positive acknowledgment (ACK) on receipt of TCP packets with PUSH flag.                                                                                                                                                                                                                                                                                                                                                                      |
| Maximum packets per MSS                                             | 0             | Maximum number of octets to allow in a TCP data segment                                                                                                                                                                                                                                                                                                                                                                                                     |
| Nagle's Algorithm                                                   | DISABLED      | Nagle's Algorithm fights with the problem of small packets in TCP transmission. Applications like Telnet and other real time engines which require every key stroke to be passed to the other side often create small packets. With Nagle's algorithm NetScaler can buffer such small packets and sends them together to increase on the connection efficiency. This algorithm needs to work along with other TCP optimization techniques in the NetScaler. |
| Maximum TCP segments allowed in a burst                             | 10 MSS        | Maximum number of TCP segments allowed in a burst                                                                                                                                                                                                                                                                                                                                                                                                           |
| Maximum out-of-order packets to queue                               | 300           | Maximum size of out-of-order packets queue. A value of 0 means no limit                                                                                                                                                                                                                                                                                                                                                                                     |
| Congestion Control                                                  |               |                                                                                                                                                                                                                                                                                                                                                                                                                                                             |



---

| Parameter                                            | Default Value | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------------------------|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCP Flavor                                           | CUBIC         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Initial congestion window(cwnd) setting              | 4 MSS         | Initial maximum upper limit on the number of TCP packets that can be outstanding on the TCP link to the server                                                                                                                                                                                                                                                                                                                                                                 |
| TCP Explicit Congestion Notification(ECN)            | DISABLED      | Explicit Congestion Notification (ECN) provides end to end notification of network congestion without dropping packets.                                                                                                                                                                                                                                                                                                                                                        |
| TCP Max congestion window(CWND)                      | 524288 bytes  | TCP maintains a congestion window (CWND), limiting the total number of unacknowledged packets that may be in transit end-to-end. In TCP, the congestion window is one of the factors that determines the number of bytes that can be outstanding at any time. The congestion window is a means of stopping a link between the sender and the receiver from becoming overloaded with too much traffic. It is calculated by estimating how much congestion there is on the link. |
| TCP Hybrid Start (HyStart)                           | 8 bytes       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| TCP minimum Retransmission Timeout(RTO) in milli sec | 1000          | Minimum retransmission timeout, in milliseconds, specified in 10-millisecond increments (value must yield a whole number if divided by 10).                                                                                                                                                                                                                                                                                                                                    |
| TCP dupack threshold                                 | DISABLED      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

| Parameter                                          | Default Value | Description                                                                                                                                                                                                       |
|----------------------------------------------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Burst Rate Control                                 | 3             | TCP Burst Rate Control<br>DISABLED/FIXED/DYNAMIC.<br>FIXED requires a TCP rate to be set                                                                                                                          |
| TCP Rate                                           | DISABLED      | TCP connection payload send rate in Kb/s                                                                                                                                                                          |
| TCP Rate Maximum Queue                             | 0             | Maximum connection queue size in bytes, when BurstRateControl is used.                                                                                                                                            |
| MPTCP                                              |               |                                                                                                                                                                                                                   |
| Multipath TCP                                      | DISABLED      | Multipath TCP (MPTCP) is a set of extensions to regular TCP to provide a Multipath TCP service, which enables a transport connection to operate across multiple paths simultaneously.                             |
| Multipath TCP drop data on pre-established subflow | DISABLED      | Enable or disable silently dropping the data on Pre-Established subflow. When enabled, DSS data packets are dropped silently instead of dropping the connection when data is received on pre established subflow. |
| Multipath TCP fastopen                             | DISABLED      | Enable or disable Multipath TCP fastopen. When enabled, DSS data packets are accepted before receiving the third ack of SYN handshake.                                                                            |
| Multipath TCP session timeout                      | 0 seconds     | MPTCP session timeout in seconds. If this value is not set, idle MPTCP sessions are flushed after the virtual server's client idle timeout.                                                                       |
| Security                                           |               |                                                                                                                                                                                                                   |

---

| Parameter                                  | Default Value | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|--------------------------------------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SYN spoof protection                       | DISABLED      | Enable or disable the drop of invalid SYN packets to protect against spoofing. When disabled, established connections are reset when a SYN packet is received.                                                                                                                                                                                                                                                                                                                            |
| TCP Syncookie                              | DISABLED      | This is used for resisting SYN flood attacks. Enable or disable the SYNCOOKIE mechanism for TCP handshake with clients. Disabling SYNCOOKIE prevents SYN attack protection on the NetScaler appliance.                                                                                                                                                                                                                                                                                    |
| Loss Detection and Recovery                |               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Duplicate Selective Acknowledgment (DSACK) | ENABLED       | A NetScaler appliance uses Duplicate Selective Acknowledgment (DSACK) to determine if a retransmission was sent in error.                                                                                                                                                                                                                                                                                                                                                                 |
| Forward RTO recovery (FRTO)                | ENABLED       | Detects spurious TCP retransmission timeouts. After retransmitting the first unacknowledged segment triggered by a timeout, the algorithm of the TCP sender monitors the incoming acknowledgments to determine whether the timeout was spurious. It then decides whether to send new segments or retransmit unacknowledged segments. The algorithm effectively helps to avoid another unnecessary retransmissions and thereby improves TCP performance in the case of a spurious timeout. |

---

| Parameter                              | Default Value | Description                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TCP Forward Acknowledgment (FACK)      | ENABLED       | Enable or disable FACK (Forward ACK).                                                                                                                                                                                                                                                                                                                                                              |
| Selective Acknowledgement(SACK) status | ENABLED       | TCP SACK addresses the problem of multiple packet losses which reduces the overall throughput capacity. With selective acknowledgment the receiver can inform the sender about all the segments which are received successfully, enabling the sender to only retransmit the segments which were lost. This technique helps NetScaler improve overall throughput and reduce the connection latency. |
| Maximum packets per retransmission     | 1             | Allows NetScaler to control how many packets to be retransmitted in one attempt. When NetScaler receives a partial ACK and it has to do retransmission then this setting is considered. This does not impact the RTO-based retransmissions.                                                                                                                                                        |
| TCP Delayed-ACK Timer                  | 100 millisec  | Timeout for TCP delayed ACK, in milliseconds                                                                                                                                                                                                                                                                                                                                                       |
| TCO Optimization                       |               |                                                                                                                                                                                                                                                                                                                                                                                                    |
| TCP Optimization mode                  | TRANSPARENT   | TCP Optimization modes<br>TRANSPARENT/ENDPOINT                                                                                                                                                                                                                                                                                                                                                     |
| Apply adaptive TCP optimizations       | DISABLED      | Apply Adaptive TCP optimizations                                                                                                                                                                                                                                                                                                                                                                   |

| Parameter                       | Default Value | Description                                                                                                                 |
|---------------------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------|
| TCP Segmentation Offload        | AUTOMATIC     | Offload TCP segmentation to the NIC. If set to AUTOMATIC, TCP segmentation is offloaded to the NIC, if the NIC supports it. |
| ACK Aggregation                 | DISABLED      | Enable or disable ACK Aggregation                                                                                           |
| TCP Time-wait(or Time_wait)     | 40 secs       | Time to elapse before releasing a closed TCP connection                                                                     |
| Delink client and server on RST | DISABLED      | Delink client and server connection, when there is outstanding data to be sent to the other side.                           |

---

**Note:**

When HTTP/2 is enabled, Citrix recommends you to disable TCP Dynamic Receive Buffering parameter in the TCP profile.

## Setting Global TCP Parameters

The NetScaler appliance allows you to specify values for TCP parameters that are applicable to all NetScaler services and virtual servers. This can be done using:

- Default TCP profile
- Global TCP command
- TCP buffering feature

**Notes:**

- The `recvBuffSize` parameter of the `set ns tcpParam` command is deprecated from release 9.2 onwards. In later releases, set the buffer size by using the `bufferSize` parameter of the `set ns tcpProfile` command. If you upgrade to a release where the `recvBuffSize` parameter is deprecated, the `bufferSize` parameter is set to its default value.
- While configuring TCP profile, ensure that the TCP `bufferSize` parameter is lesser or equal to the `httppipelinebuffersize` parameter.  
If the `bufferSize` parameter in TCP profile is greater than the `httppipelinebuffersize`

parameter in HTTP profile, the TCP payload might get accumulated and exceed the HTTP pipeline buffer size. This results in NetScaler appliance resetting the TCP connection.

### Default TCP profile

A TCP profile, named as `nstcp_default_profile`, is used to specify TCP configurations that are used if no TCP configurations are provided at the service or virtual server level.

#### Notes:

- Not all TCP parameters can be configured through the default TCP profile. Some settings have to be performed by using the global TCP command (see section below).
- The default profile does not have to be explicitly bound to a service or virtual server.

To configure the default TCP profile

- Using the command line interface, at the command prompt enter:

```
1 set ns tcpProfile nstcp_default_profile...
```

- On the GUI, navigate to **System > Profiles**, click **TCP Profiles** and update `nstcp_default_profile`.

### Global TCP command

Another approach you can use to configure global TCP parameters is the global TCP command. In addition to some unique parameters, this command duplicates some parameters that can be set by using a TCP profile. Any update made to these duplicate parameters is reflected in the corresponding parameter in the default TCP profile.

For example, if the SACK parameter is updated using this approach, the value is reflected in the SACK parameter of the default TCP profile (`nstcp_default_profile`).

#### Note:

Citrix recommends that you use this approach only for TCP parameters that are not available in the default TCP profile.

To configure the global TCP command

- Using the command line interface, at the command prompt enter:

```
1 set ns tcpParam ...
```

- On the GUI, navigate to **System > Settings**, click **Change TCP parameters** and, update the required TCP parameters.

## TCP buffering feature

NetScaler provides a feature called TCP buffering that you can use to specify the TCP buffer size. The feature can be enabled globally or at service level.

**Note:**

The buffer size can also be configured in the default TCP profile. If the buffer size has different values in the TCP buffering feature and the default TCP profile, the greater value is applied.

### Configure the TCP buffering feature globally

- At the command prompt enter:

```
enable ns mode TCPB
```

```
set ns tcpbufParam -size <positiveInteger> -memLimit <positiveInteger>
>
```

- On the GUI, navigate to **System > Settings**, click **Configure Modes** and, select **TCP Buffering**.  
And, navigate to **System > Settings**, click **Change TCP parameters**, specify values for **Buffer size** and **Memory usage limit**.

### Setting Service or Virtual Server Specific TCP Parameters

Using TCP profiles, you can specify TCP parameters for services and virtual servers. You must define a TCP profile (or use a built-in TCP profile) and associate the profile with the appropriate service and virtual server.

**Note:**

You can also modify the TCP parameters of default profiles as per your requirements.

You can specify the TCP buffer size at service level using the parameters specified by the TCP buffering feature.

To specify service or virtual server level TCP configurations by using the command line interface

At the command prompt, perform the following:

1. Configure the TCP profile.

```
1 set ns tcpProfile <profile-name>...
```

2. Bind the TCP profile to the service or virtual server.

```
1 set service <name>
```

**Example:**

```
> set service service1 -tcpProfileName profile1
```

To bind the TCP profile to the virtual server:

```
1 set lb vserver <name>
```

**Example:**

```
1 > set lb vserver lbvserver1 -tcpProfileName profile1
```

To specify service or virtual server level TCP configurations by using the GUI

At the GUI, perform the following:

1. Configure the TCP profile.

Navigate to **System > Profiles > TCP Profiles**, and create the TCP profile.

2. Bind the TCP profile to the service or virtual server.

Navigate to **Traffic Management > Load Balancing > Services/Virtual Servers**, and create the TCP profile, which should be bound to the service or virtual server.

**Built-in TCP Profiles**

For convenience of configuration, the NetScaler provides some built-in TCP profiles. Review the built-in profiles listed for the following and select a profile and use it as is or modify it to meet your requirements. You can bind these profiles to your required services or virtual servers.

---

| Built-in profile                     | Description                                                                                                                       |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| nstcp_default_profile                | Represents the default global TCP settings on the appliance.                                                                      |
| nstcp_default_tcp_lan                | Useful for back-end server connections, where these servers reside on the same LAN as the appliance.                              |
| nstcp_default_WAN                    | useful for WAN deployments.                                                                                                       |
| nstcp_default_tcp_lan_thin_stream    | Similar to the nstcp_default_tcp_lan profile. However, the settings are tuned to small size packet flows.                         |
| nstcp_default_tcp_interactive_stream | Similar to the nstcp_default_tcp_lan profile. However, it has a reduced delayed ACK timer and ACK on <b>PUSH packet</b> settings. |



---

| Built-in profile                  | Description                                                                                                                                                                                                                                              |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| nstcp_default_tcp_lfp             | Useful for long fat pipe networks (WAN) on the client side. Long fat pipe networks have long delay, high bandwidth lines with minimal packet drops.                                                                                                      |
| nstcp_default_tcp_lfp_thin_stream | Similar to the nstcp_default_tcp_lfp profile. However, the settings are tuned for small size packet flows.                                                                                                                                               |
| nstcp_default_tcp_lnp             | Useful for long narrow pipe networks (WAN) on the client side. Long narrow pipe networks have considerable packet loss occasionally.                                                                                                                     |
| nstcp_default_tcp_lnp_thin_stream | Similar to the nstcp_default_tcp_lnp profile. However, the settings are tuned for small size packet flows.                                                                                                                                               |
| nstcp_internal_apps               | Useful for internal applications on the appliance (for example, GSLB site syncing). This contains tuned window scaling and SACK options for the desired applications. This profile should not be bound to applications other than internal applications. |
| nstcp_default_Mobile_profile      | Useful for mobile devices.                                                                                                                                                                                                                               |
| nstcp_default_XA_XD_profile       | Useful for the Citrix Virtual Apps and Desktops deployment.                                                                                                                                                                                              |

---

## Sample TCP Configurations

Sample command line interface examples for configuring the following:

### Defending TCP against spoofing attacks

**Prior to RFC 5961 compliance support** To enable RST window attenuation and SYN spoof protection by using the CLI:

```
1 > set ns tcpProfile profile1 -rstWindowAttenuate ENABLED -spoofSynDrop
 ENABLED
2 Done
3 > set lb vserver lbserver1 -tcpProfileName profile1
4 Done
```

To enable RST window attenuation and SYN spoof protection by using the GUI:

1. Navigate to **System > Profiles > TCP Profiles**, and click **Add** to create a TCP profile.
2. Select the **RST Window Attenuation** and **SYN Spoof Protection**.
3. Click **Create**.

**From NetScaler release 14.1-4.x onwards with RFC 5961 compliance support** To enable RFC 5961 compliance by using the CLI:

```
1 > set ns tcpProfile profile1 -rstWindowAttenuate DISABLED -spoofSynDrop
 DISABLED -rfc5961Compliance ENABLED
2 Done
3 > set lb vserver lbvserver1 -tcpProfileName profile1
4 Done
```

To impose the limit on the number of challenge ACKs allowed per second, enable the `rfc5961ChallengeAckLimit` parameter:

```
1 > set ns tcpParam -rfc5961ChlgAckLimit 100
2 Done
```

To enable RFC 5961 compliance by using the GUI:

1. Navigate to **System > Profiles > TCP Profiles**, and click **Add** to create a TCP profile.
2. Clear **RST Window Attenuation** and **SYN Spoof Protection**.
3. Select **RFC5961 Compliance** and click **Create**.
4. Navigate to the **System > Settings > Change TCP Parameters**.
5. Enter a value in **RFC5961 Chlg Ack Limit** and click **OK**.

### Explicit Congestion Notification (ECN)

Enable ECN on the required TCP profile.

```
1 > set ns tcpProfile profile1 -ECN ENABLED
2 Done
3 > set lb vserver lbvserver1 -tcpProfileName profile1
4 Done
```

### Selective Acknowledgment (SACK)

Enable SACK on the required TCP profile.

```
1 > set ns tcpProfile profile1 -SACK ENABLED
2 Done
3 > set lb vserver lbvserver1 -tcpProfileName profile1
4 Done
```

### Forward Acknowledgment (FACK)

Enable FACK on the required TCP profile.

```
1 > set ns tcpProfile profile1 -FACK ENABLED
2 > set lb vserver lbvserver1 -tcpProfileName profile1
```

### Window Scaling (WS)

Enable window scaling and set the window scaling factor on the required TCP profile.

```
1 set ns tcpProfile profile1 -WS ENABLED -WSVal 9
2 Done
3 set lb vserver lbvserver1 -tcpProfileName profile1
4 Done
```

### Maximum Segment Size (MSS)

Update the MSS related configurations.

```
1 > set ns tcpProfile profile1 -mss 1460 - maxPktPerMss 512
2 Done
3 > set lb vserver lbvserver1 -tcpProfileName profile1
4 Done
```

### NetScaler to learn the MSS of a virtual server

Enable the NetScaler to learn the VSS and update other related configurations.

```
1 > set ns tcpParam -learnVsvrMSS ENABLED -mssLearnInterval 180 -
 mssLearnDelay 3600
2 Done
```

### TCP keep-alive

Enable TCP keep-alive and update other related configurations.

```
> set ns tcpProfile profile1 -KA ENABLED -KaprobeUpdateLastactivity
ENABLED -KAconnIdleTime 900 -KAmaxProbes 3 -KaprobeInterval 75
Done
> set lb vserver lbvserver1 -tcpProfileName profile1
Done
```

**Buffer size - using TCP profile**

Specify the buffer size.

```
> set ns tcpProfile profile1 -bufferSize 8190
Done
> set lb vserver lbvserver1 -tcpProfileName profile1
Done
```

**Buffer size - using TCP buffering feature**

Enable the TCP buffering feature (globally or for a service) and then specify the buffer size and the memory limit.

```
> enable ns feature TCPB
Done
> set ns tcpbufParam -size 64 -memLimit 64
Done
```

**MPTCP**

Enable MPTCP and then set the optional MPTCP configurations.

```
> set ns tcpProfile profile1 -mptcp ENABLED
Done
> set ns tcpProfile profile1 -mptcpDropDataOnPreEstSF ENABLED -
mptcpFastOpen ENABLED -mptcpSessionTimeout 7200
Done
> set ns tcpparam -mptcpConCloseOnPassiveSF ENABLED -mptcpChecksum
ENABLED -mptcpSFtimeout 0 -mptcpSFReplaceTimeout 10
-mptcpMaxSF 4 -mptcpMaxPendingSF 4 -mptcpPendingJoinThreshold 0 -
mptcpRTOsToSwitchSF 2 -mptcpUseBackupOnDSS ENABLED
Done
```

**Congestion control**

Set the required TCP congestion control algorithm.

```
set ns tcpProfile profile1 -flavor Westwood
Done
> set lb vserver lbvserver1 -tcpProfileName profile1
Done
```

## Dynamic receive buffering

Enable dynamic receive buffering on the required TCP profile.

```
> set ns tcpProfile profile1 -dynamicReceiveBuffering ENABLED
Done
> set lb vserver lbvserver1 -tcpProfileName profile1
Done
```

## Support for TCP Fast Open (TFO) in Multipath TCP (MPTCP)

A NetScaler appliance now supports the TCP Fast Open (TFO) mechanism for establishing Multipath TCP (MPTCP) connections and speed up data transfers. The mechanism allows subflow data to be carried during the initial MPTCP connection handshake in SYN and SYN-ACK packets and also enables data to be consumed by the receiving node during the MPTCP connection establishment.

For more information, see [TCP Fast Open](#) topic.

## Support for Variable TFO Cookie Size for MPTCP

A NetScaler appliance now enables you to configure a variable length TCP Fast Open (TFO) cookie of a minimum size of 4 bytes and a maximum size of 16 bytes in a TCP profile. By doing this, the appliance can respond with the configured TFO cookie size in the SYN-ACK packet to the client.

To configure the TCP Fast Open (TFO) cookie in a TCP profile by using the command line interface

At the command prompt, type:

```
set tcpProfile nstcp_default_profile -tcpFastOpenCookieSize <positive_integer>
>
```

Example

```
set tcpProfile nstcp_default_profile -tcpFastOpenCookieSize 8
```

To configure the TCP Fast Open (TFO) cookie in a TCP profile by using the GUI

1. Navigate to **Configuration > System > Profiles**.
2. In the details pane, go to **TCP Profiles** tab and select a TCP profile.
3. In the **Configure TCP Profile** page, set the **TCP Fast Open** cookie size.
4. Click **OK** and **Done**.

### SYN-Cookie timeout interval

The `TCPsyncookie` parameter is enabled by default in TCP profiles to provide robust (RFC 4987) based protection against SYN Attacks. If you need to accommodate custom TCP clients that are not compatible with this protection but still want to ensure a fallback if there is attack, the `synAttackDetection` handles this for you by automatically activating the `SYNCookie` behavior internally for time determined by the `autosyncookietimeout` parameter.

To configure the maximum SYN ACK retransmission threshold by using the command line interface:

At the command prompt, type:

```
1 set ns tcpparam [-maxSynAckRetx <positive_integer>]
2
3 Set ns tcpparam [-maxSynAckRetx 150]
```

To configure auto SYN cookie timeout interval by using the command line interface

At the command prompt, type:

```
set ns tcpparam [-autosyncookietimeout <positive_integer>]
Set ns tcpparam [-autosyncookietimeout 90]
```

### Enhanced ISN generation

When enabled, the parameter increases the variance of the initial sequence numbers (ISN) generated by NetScaler while establishing a TCP connection. This scenario is applicable only for TCP connections where NetScaler acts as the server. By default, the parameter is disabled.

To enable enhanced ISN generation using the CLI, run the following command:

```
1 set ns tcpparam -enhancedISNgeneration [ENABLED | DISABLED]
```

#### Example:

```
1 set ns tcpparam -enhancedISNgeneration ENABLED
```

To enable enhanced ISN generation using the GUI:

1. Navigate to **Configuration -> System -> Settings -> Change TCP Parameters**.
2. In the **Configure TCP Parameters** page, select **Enhanced ISN Generation**.
3. Click **OK**.

## Delink client and server connection

When enabled, the parameter delinks client and server connection when there is outstanding data to be sent to the other side. By default, the parameter is disabled.

```
1 set ns tcpparam -delinkClientServerOnRST ENABLED
2 Done
```

**Configure the slow start threshold parameter** You can use the slow start threshold `slowStartThreshold` parameter to configure the `tcp-slowstartthreshold` value for the `Nile` variant of the congestion control algorithm. The acceptable values for the parameter are `min` = 8190 and `max` = 524288. The default value is 524288. The TCP variant `Nile`, under the TCP profile is no more dependent on the `maxcwnd` parameter. You have to configure the `slowStartThreshold` parameter for the `Nile` variant.

At the command prompt type:

```
1 set tcpprofile nstcp_default_profile -slowstartthreshold 8190
2 Done
```

## HTTP configurations

August 19, 2024

### Important:

Starting from NetScaler release 13.0 build 71.x, a NetScaler appliance can handle large header size HTTP requests to accommodate the L7 application requests. The header size can be configurable up to 120 KB.

HTTP configurations for a NetScaler appliance can be specified in an entity called an HTTP profile, which is a collection of HTTP settings. The HTTP profile can then be associated with services or virtual servers that want to use these HTTP configurations.

A default HTTP profile can be configured to set the HTTP configurations that are applied by default, globally to all services and virtual servers.

### Note:

When an HTTP parameter has different values for service, virtual server, and globally, the value of the most-specific entity (the service) is given the highest precedence.

The NetScaler appliance also provides other approaches for configuring HTTP. Read on for more information.

The NetScaler supports a WebSocket protocol which allows browsers and other clients to create a bi-directional, full duplex TCP connection to the servers. The NetScaler implementation of WebSocket is RFC 6455 compliant.

**Note:**

A NetScaler appliance supports the User Source IP (USIP) address configuration for both HTTP/1.1 and HTTP/2 protocols.

## Setting global HTTP parameters

The NetScaler appliance allows you to specify values for HTTP parameters that are applicable to all NetScaler services and virtual servers. This can be done using:

- Default HTTP profile
- Global HTTP command

### Default HTTP profile

An HTTP profile, named as nshttp\_default\_profile, is used to specify HTTP configurations that are used if no HTTP configurations are provided at the service or virtual server level.

**Notes:**

- Not all HTTP parameters can be configured through the default HTTP profile. Some settings are performed by using the global HTTP command (see the following section).
- The default profile does not have to be explicitly bound to a service or virtual server.

To configure the default HTTP profile

- Using the command line interface, at the command prompt enter:  

```
set ns httpProfile nshttp_default_profile ...
```
- On the GUI, navigate to **System > Profiles**, click **HTTP Profiles** and update nshttp\_default\_profile.

### Global HTTP command

Another approach you can use to configure global HTTP parameters is the global HTTP command. In addition to some unique parameters, this command duplicates some parameters that can be set by



using an HTTP profile. Any update made to these duplicate parameters is reflected in the corresponding parameter in the default HTTP profile.

For example, if the `maxReusePool` parameter is updated using this approach, the value is reflected in the `maxReusePool` parameter of the default HTTP profile (`nshttp_default_profile`).

**Note:**

We recommend you to use this approach only for HTTP parameters that are not available in the default HTTP profile.

To configure the global HTTP command

- Using the command line interface, at the command prompt enter:

```
set ns httpParam ...
```

- On the GUI, navigate to **System > Settings**, click **Change HTTP parameters** and update the required HTTP parameters.

To configure an ignore Coding scheme for connect request

To enable HTTP/2 and set HTTP/2 parameters to ignore the Coding scheme in the connect request, at the command prompt, type:

```
set ns httpParam [-ignoreConnectCodingScheme (ENABLED | DISABLED)]
```

**Example:**

```
set ns httpParam -ignoreConnectCodingScheme ENABLED
```

To bind the HTTP profile to a virtual server by using the NetScaler command line

**Configure HTTP profile to drop TRACE or TRACK invalid requests**

You can enable the `markTraceReqInval` parameter to mark TRACE and TRACK requests as invalid. When you enable this option along with the `dropInvalidReqs` option on the virtual IP address, you can reset a client sending TRACE or TRACK requests to a NetScaler appliance.

To configure the HTTP profile using the CLI

At the command prompt, type:

```
set ns httpProfile <profile name> [-markTraceReqInval ENABLED |
DISABLED]
```

**Example:**

```
set ns httpProfile profile1 -markTraceReqInval ENABLED
```

## Configure HTTP profile for a service group

At the command prompt, type:

```
1 add serviceGroup <serviceName>@ <serviceType> [-cacheType <
 cacheType>] [-td <positive_integer>] [-maxClient <positive_integer>]
 [-maxReq <positive_integer>] [-cacheable (YES | NO)] [-cip (
 ENABLED | DISABLED) [<cipHeader>]] [-usip (YES | NO)] [-
 pathMonitor (YES | NO)] [-pathMonitorIndv (YES | NO)] [-
 useproxyport (YES | NO)] [-healthMonitor (YES | NO)] [-sp (ON |
 OFF)] [-rtspSessionidRemap (ON | OFF)] [-cltTimeout <secs>] [-
 svrTimeout <secs>] [-CKA (YES | NO)] [-TCPB (YES | NO)] [-CMP (
 YES | NO)] [-maxBandwidth
2 <positive_integer>] [-monThreshold <positive_integer>] [-state ENABLED
 DISABLED)] [-downStateFlush (ENABLED | DISABLED)] [-tcpProfileName
 <string>] [-httpProfileName <string>] [-comment <string>] [-
 appflowLog (ENABLED | DISABLED)] [-netProfile <string>] [-
 autoScale <autoScale> -memberPort <port> [-autoDisablegraceful (YES
 | NO)] [-autoDisabledelay <secs>]] [-monConnectionClose (RESET |
 FIN)]
```

### Example:

```
add serviceGroup Service-Group-1 HTTP -maxClient 0 -maxReq 0 -cip
ENABLED -usip NO -useproxyport YES -cltTimeout 200 -svrTimeout 300 -
CKA NO -TCPB NO -CMP NO -httpProfileName profile1
```

## Configure the HTTP profile using the NetScaler GUI

To mark TRACE or TRACK invalid requests, complete the following procedure.

1. Sign into NetScaler appliance and navigate to **Configuration > System > Profiles**.
2. In the **HTTP Profiles** tab page, click **Add**.
3. In the **Create HTTP Profile** page, select **Mark TRACE Requests as Invalid** option.
4. Click **Create**.

## Setting service or virtual server specific HTTP parameters

Using HTTP profiles, you can specify HTTP parameters for services and virtual servers. You have to define an HTTP profile (or use a built-in HTTP profile) and associate the profile with the appropriate service and virtual server.

### Note:

You can also modify the HTTP parameters of default profiles as per your requirements.

## To specify service or virtual server level HTTP configurations by using the command line interface

At the command prompt, perform the following:

1. Configure the HTTP profile.

```
set ns httpProfile <profile-name>...
```

2. Bind the HTTP profile to the service or virtual server.

To bind the HTTP profile to the service:

```
set service <name>
```

### Example:

```
1 > set service service1 -httpProfileName profile1
```

To bind the HTTP profile to the virtual server:

```
set lb vserver <name>
```

### Example:

```
1 > set lb vserver lbvserver1 -httpProfileName profile1
```

## To specify service or virtual server level HTTP configurations by using the GUI

At the GUI, perform the following:

1. Configure the HTTP profile.

Navigate to **System > Profiles > HTTP Profiles**, and create the HTTP profile.

2. Bind the HTTP profile to the service or virtual server.

Navigate to **Traffic Management > Load Balancing > Services/Virtual Servers**, and create the HTTP profile, which must be bound to the service/virtual server.

## Built-in HTTP profiles

For convenience of configuration, the NetScaler provides some built-in HTTP profiles. Review the profiles listed and use it as it is or modify it to meet your requirements. You can bind these profiles to the required services or virtual servers.

**Built-in profile****Description**

nshttp\_default\_profile

Represents the default global HTTP settings on the appliance.

nshttp\_default\_strict\_validation

Settings for deployments that require strict validation of HTTP requests and responses.

---

**Sample HTTP configurations**

Sample command line interface examples to configure the following:

- HTTP band statistics
- WebSocket connections

**HTTP band statistics**

Specify the band size for HTTP requests and responses.

```
1 > set protocol httpBand reqBandSize 300 respBandSize 2048
2 Done
3 > show protocol httpband -type REQUEST
```

**WebSocket connections**

Enable WebSocket on the required HTTP profile.

```
1 > set ns httpProfile http_profile1 -webSocket ENABLED
2 Done
3 > set lb vserver lbvserver1 -httpProfileName profile1
4 Done
```

**Configure the NetScaler appliance to delete or pass the upgrade header to the back-end server**

The passProtocolUpgrade parameter in the HTTP profile prevents attack on the back-end servers. Depending on the state of this parameter, the upgrade header is passed in the request sent to the back-end server or deleted before sending the request.

- If the passProtocolUpgrade parameter is enabled, then the upgrade header is passed to the back-end server. The server accepts the upgrade request and notifies it in its response.

- If the parameter is disabled, then the upgrade header is deleted and the remaining request is sent to the back-end server.

The `passProtocolUpgrade` parameter is added to the following profiles:

- `nshttp_default_profile` - enabled by default
- `nshttp_default_strict_validation` - disabled by default
- `nshttp_default_internal_apps` - disabled by default
- `nshttp_default_http_quic_profile` - enabled by default

We recommend you to set the `passProtocolUpgrade` parameter to disabled by default.

### Set the `passProtocolUpgrade` parameter by using the CLI

At the command prompt, type the following:

```
set ns httpProfile <name> [-passProtocolUpgrade (ENABLED | DISABLED)]
```

#### Example:

```
set ns httpProfile profile1 -passProtocolUpgrade ENABLED
```

### Set the `passProtocolUpgrade` parameter by using the GUI

1. Navigate to **System > Profiles > HTTP Profiles**.
2. Create or edit an HTTP profile.
3. Select **Pass Protocol Upgrade**.

### Configure HTTP profile to validate host headers

From NetScaler release 14.1-21.x, NetScaler supports validating the host headers in the incoming HTTP requests to prevent host header injections or attacks.

When the host header validation is enabled, the following checks are performed:

- The length of the host header that is the IP address or the DNS name portion of the host header is not more than 255 characters.
- The port number, if specified, is not more than 5 characters because the maximum port number is 65535.

If the host header does not adhere to the defined conditions, such HTTP requests are dropped.

By default, the host header validation is disabled in default profiles and enabled in secure or strict HTTP profiles.

## Validate HTTP host headers using the NetScaler CLI

At the command prompt, type the following:

```
1 set ns httpprofile <name> -hostHeaderValidation (ENABLED | DISABLED)
```

### Example:

```
1 set ns httpProfile http_profile1 -hostHeaderValidation ENABLED
```

## Validate HTTP host headers using the NetScaler GUI

1. Navigate to **System > Profiles > HTTP Profiles**.
2. Create or edit an HTTP profile.
3. In the **Configure HTTP Profile** page, select **Host header validation**.

## Configure HTTP profile to validate duplicate HTTP headers

Starting from NetScaler release 14.1-29.x, you can configure HTTP profiles to validate and manage duplicate HTTP headers, ensuring more robust and secure traffic handling. You can set a maximum of 15 duplicate headers in HTTP profiles. If the number of duplicate headers for known header fields exceeds this limit, the connection is terminated.

By default, the HTTP default profile is set to 0, maintaining the legacy behavior where duplicate header validation is not enforced. For all other profiles, the default limit is set to 15. Use the `maxDuplicateHeaderFields` parameter in the HTTP profile to set the maximum limit for duplicate headers. This value can be configured using the NetScaler CLI or GUI.

## Validate duplicate HTTP headers using the NetScaler CLI

At the command prompt, type the following:

```
1 set ns httpprofile <name> -maxDuplicateHeaderFields <value>
```

### Example:

```
set ns httpprofile http_profile1 -maxDuplicateHeaderFields 5
```

## Validate duplicate HTTP headers using the NetScaler GUI

1. Navigate to **System > Profiles > HTTP Profiles**.
2. Create or edit an HTTP profile.
3. In the **Configure HTTP Profile** page, enter a value in the **Max Duplicate Header Fields**.

## HTTP/2 configuration

December 2, 2024

**Note:**

- The HTTP/2 functionality is supported on NetScaler MPX, VPX, and SDX.
- The HTTP/2 functionality is not supported on NetScaler Gateway.

The problem with web application performance is directly related to the trend toward increasing the page size and the number of objects on the webpages. HTTP/1.1 was developed to support smaller webpages, slower Internet connections, and more limited server hardware than are common today. It is not suitable for new technologies such as JavaScript and cascading style sheets (CSS) or new media types such as Flash videos and graphics-rich images. This is because it can request only one resource per connection to the server. The limitation significantly increases the number of round trips, causing longer page-rendering and reduced network performance.

The HTTP/2 protocol addresses these limitations by allowing communication to occur with less data transmitted over the network, and providing the ability to send multiple requests and responses across a single connection. At its core, HTTP/2 addresses the key limitations of HTTP/1.1 by using the underlying network connections more efficiently. It changes the way requests and responses travel over the network.

HTTP/2 is a binary protocol. It is more efficient to parse, more compact on the wire, and most importantly, it is less error-prone, compared to textual protocols like HTTP/1.1. The HTTP/2 protocol uses a binary framing layer that defines the frame type and how HTTP messages are encapsulated and transferred between the client and server. The HTTP/2 functionality supports the use of the CONNECT method to establish a tunnel connection through a single HTTP/2 stream to a remote host.

The HTTP/2 protocol includes many performance-enhancing changes that significantly improve performance, particularly for clients connecting over a mobile network.

The following table lists the major improvements in HTTP/2 over HTTP/1.1:

| <b>HTTP/2 features</b>   | <b>Description</b>                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Header Compression       | HTTP headers have much repetitive information and therefore consume unnecessary bandwidth during data transmission. HTTP/2 reduces bandwidth requirements by compressing the header and minimizing the requirement to transport HTTP headers with every request and response.                                                                                                                                                |
| Connection Multiplexing  | Latency can have a huge impact on page load times and the end user experience. Connection multiplexing overcomes this problem by sending multiple requests and responses across a single connection.                                                                                                                                                                                                                         |
| Server Push              | Server push enables the server to proactively push content to the client browser, avoiding round-trip delay. This feature caches the responses that it thinks the client needs, reduces the number round trips, and improves the page rendering time. Important: The NetScaler appliance does not support the server push functionality.                                                                                     |
| No Head-of-line Blocking | Under HTTP 1.1, browsers can download one resource at a time per connection. When a browser has to download a large resource, it blocks all other resources from downloading until the first download is complete. HTTP/2 overcomes this problem with a multiplexing approach. It allows the client browser to download other web components in parallel over the same connection and display them as they become available. |



---

| <b>HTTP/2 features</b> | <b>Description</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Request Prioritization | Not all resources have equal priority when the browser renders a webpage. To accelerate the load time, all modern browsers prioritize requests by type of asset, their location on the page, and even by learned priority from previous visits. With HTTP/1.1, the browser has limited ability to use the priority data, because this protocol does not support multiplexing, and there is no way to communicate request prioritization by the server. The result is unnecessary network latency. HTTP/2 overcomes this problem by allowing the browser to dispatch all requests. The browser can communicate its stream prioritization preference via stream dependencies and weights, enabling the servers to optimize response delivery. Important: The NetScaler appliance does not support the request prioritization functionality. |

---

### **How HTTP/2 works**

A NetScaler appliance supports HTTP/2 on the client side as well on the server side. On the client side, the NetScaler appliance acts as a server that hosts an HTTP/HTTPS virtual server for HTTP/2. On the back-end side, the NetScaler acts as a client to the servers that are bound to the virtual server.

Therefore, the NetScaler appliance maintains separate connections on the client side as well on the server side. The NetScaler appliance has separate HTTP/2 configurations for the client side and the server side.

### **HTTP/2 for HTTPS (SSL) load balancing configuration**

For an HTTPS load balancing configuration, the NetScaler appliance uses the TLS ALPN extension (RFC 7301) to determine whether the client/server supports HTTP/2. If it does, the appliance chooses HTTP/2 as the application-layer protocol to transmit data (as described in RFC 7540 - Section 3.3) on the client/server side.

The appliance uses the following order of preference when choosing the application-layer protocol through the TLS ALPN extension:

- HTTP/2 (if enabled in the HTTP profile)
- HTTP/1.1

## HTTP/2 for HTTP load balancing configuration

For an HTTP load balancing configuration, the NetScaler appliance uses one of the following methods to start communicating with the client/server using HTTP/2.

### Note

In the following method descriptions, client and server are general terms for an HTTP/2 connection. For example, for a load balancing setup of a NetScaler appliance using HTTP/2, the NetScaler appliance acts as a server on the client side and acts as a client to the server side.

- **HTTP/2 Upgrade.** A client sends an HTTP/1.1 request to a server. The request includes an upgrade header, which asks the server to upgrade the connection to HTTP/2. If the server supports HTTP/2, the server accepts the upgrade request and notifies it in its response. The client and the server start communicating using HTTP/2 after the client receives the upgrade confirmation response.
- **Direct HTTP/2.** A client directly starts communicating to a server in HTTP/2 instead of using the HTTP/2 upgrade method. If the server does not support HTTP/2 or is not configured to directly accept HTTP/2 requests, it drops the HTTP/2 packets from the client. This method is helpful if the admin of the client device already knows that the server supports HTTP/2.
- **Direct HTTP/2 using Alternative Service (ALT-SVC).** A server advertises that it supports HTTP/2 to a client by including an Alternative Service (ALT-SVC) field in its HTTP/1.1 response. If the client is configured to understand the ALT-SVC field, the client and the server start directly communicating using HTTP/2 after the client receives the response.

The NetScaler appliance provides configurable options in an HTTP profile for the HTTP/2 methods. These HTTP/2 options can be applied to the client side as well to the server side of an HTTPS or HTTP load balancing setup. For more information for HTTP/2 methods and options, refer to the [HTTP/2 options](#) PDF.

## Before you Begin

Before you begin configuring HTTP/2 on a NetScaler appliance, note the following points:

- The NetScaler appliance supports HTTP/2 on the client side as well on the server side.

- The NetScaler appliance does not support the HTTP/2 server push functionality.
- The NetScaler appliance does not support the HTTP/2 request prioritization functionality.
- The NetScaler appliance does not support HTTP/2 SSL renegotiation for HTTPS load balancing setups.
- The NetScaler appliance does not support HTTP/2 NTLM authentication.
- With HTTP/2 enabled, connection multiplexing disabled (like USIP enabled) and one to one mapping of client and server TCP connections, close events such as FIN, reset (RST) are forwarded from the client or server connection to the linked peer connection.

## Configuring HTTP/2

Configuring HTTP/2 for a load balancing setup (HTTPS or HTTP) consists of the following tasks:

- **Enable HTTP/2 and set optional HTTP/2 parameters in an HTTP Profile.** Enable HTTP/2 in an HTTP profile. When you only enable HTTP/2 in an HTTP profile, the NetScaler appliance uses only the upgrade method (for HTTP) or TLS ALPN method (for HTTPS) for communicating in HTTP/2.

For the NetScaler appliance to use the direct HTTP/2 method, the **Direct HTTP/2** option must be enabled in the HTTP profile. For the NetScaler appliance to use the direct HTTP/2 using the alternative service method, the **Alternative Service (altsvc)** option must be enabled in the HTTP profile.

- **Bind the HTTP profile to a virtual server or a service.** Bind the HTTP profile to a virtual server to configure HTTP/2 for the client side of the load balancing setup. Bind the HTTP profile to a service to configure HTTP2 for the server side of the load balancing setup.

### Note

Citrix recommends binding separate HTTP profiles for the client side and the server side.

- **Enable the global parameter for HTTP/2 server side support.** Enable the **HTTP/2 Service Side (HTTP2Serverside)** global HTTP parameter for enabling the HTTP/2 support on the server side of all the load balancing setups that has HTTP/2 configured.

HTTP/2 does not work on the server side of any load balancing setups if **HTTP/2 Service Side** is disabled even if the **HTTP/2** is enabled on the HTTP profile bound to the related load balancing services.

### NetScaler Command Line procedures:

To enable HTTP/2 and set HTTP/2 parameters by using the NetScaler command line

- To enable HTTP/2 and set HTTP/2 parameters while adding an HTTP profile, at the command prompt, type:

```
add ns httpProfile <name> - http2 (ENABLED | DISABLED)[-http2Direct
 (ENABLED | DISABLED)] [-altsvc (ENABLED | DISABLED)]
show ns httpProfile <name>
```

- To enable HTTP/2 and set HTTP/2 parameters while modifying an HTTP profile, at the command prompt, type:

```
set ns httpProfile <name> -http2 (ENABLED | DISABLED)[-http2Direct
 (ENABLED | DISABLED)] [-altsvc (ENABLED | DISABLED)]
show ns httpProfile <name>
```

To bind the HTTP profile to a virtual server by using the NetScaler command line

At the command prompt, type:

```
set lb vserver <name> - httpProfileName <string>
show lb vserver <name>
```

To bind the HTTP profile to a load balancing service by using the NetScaler command line

At the command prompt, type:

```
set service <name> -httpProfileName <string>
show service <name>
```

To enable HTTP/2 support globally on the server side by using the NetScaler command line

At the command prompt, type:

```
set ns httpParam -HTTP2Serverside(ENABLED | DISABLED)
show ns httpParam
```

To enable HTTP/2 and set HTTP/2 parameters by using the NetScaler GUI

1. Navigate to **System > Profiles**, and click the **HTTP Profiles** tab.
2. Enable **HTTP/2** while adding an HTTP profile or modifying an existing HTTP profile.

To bind the HTTP profile to a virtual server by using the NetScaler GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, and open the virtual server.
2. In **Advanced Settings**, click **+ HTTP Profile** to bind the created HTTP profile to the virtual server.

To bind the HTTP profile to a load balancing service by using the NetScaler GUI

1. Navigate to **Traffic Management > Load Balancing > Service**, and open the service.
2. In **Advanced Settings**, click **+ HTTP Profile** to bind the created HTTP profile to the service.

To enable HTTP/2 support globally on the server side by using the GUI

Navigate to **System > Settings**, click **Change HTTP parameters**, and enable **HTTP/2 Server Side**.

## Sample configurations

In the following sample configuration, HTTP/2 and direct HTTP/2 are enabled on HTTP profile HTTP-PROFILE-HTTP2-CLIENT-SIDE. The profile is bound to virtual server LB-VS-1.

```
1 set ns httpProfile HTTP-PROFILE-HTTP2-CLIENT-SIDE -http2 enabled -
 http2Direct enabled
2 Done
3
4 set lb vsServer LB-VS-1 -httpProfileName HTTP-PROFILE-HTTP2-CLIENT-SIDE
5
6 Done
```

In the following sample configuration, HTTP/2 and alternative service (ALT-SVC) is enabled on HTTP profile HTTP-PROFILE-HTTP2-SERVER-SIDE. The profile is bound to service LB-SERVICE-1.

```
1 set ns httpParam -HTTP2Serverside ENABLED
2 Done
3
4 set ns httpProfile HTTP-PROFILE-HTTP2-SERVER-SIDE -http2 ENABLED -
 altsvc ENABLED
5 Done
6
7 set service LB-SERVICE-1 -httpProfileName HTTP-PROFILE-HTTP2-SERVER-
 SIDE
8 Done
```

## Configure HTTP/2 initial connection window size

As per RFC 7540, the flow-control window for HTTP2 stream and connection must be set to 64 K (65535) octets, and any change made to this value must be communicated to the peer. The ADC appliance communicates the change in flow-control window size as follows:

- Using the [SETTINGS](#) frame for the stream.
- Using the [WINDOW\\_UPDATE](#) frame for the connection.

In an HTTP profile, you must configure the [http2InitialWindowSize](#) parameter to set the initial window size at the stream level. Because of an internal system error, the ADC appliance initializes the flow-control window for the connection also. When there is a change in the configured flow-control window for the stream, the ADC appliance communicates to the peer using the [SETTINGS](#) frame. But the ADC appliance fails to communicate the change in flow-control window for the connection using the [WINDOW\\_UPDATE](#) frame. This leads to a connection freeze.

To overcome the issue, the [http2InitialConnWindowSize](#) parameter (in bytes) is now added to control the flow-control window for connection. By using separate configurable parameters, you can now enable the appliance to send updates for changed window size at both stream and connection levels.

## Configure the HTTP/2 initial connection window size parameter by using the CLI

At the command prompt, type:

```
1 set http profile p1 -http2InitialConnWindowSize 8290
2 Initial window size for stream level flow control, in bytes.
3 Default value: 65535
4 Minimum value: 8192
5 Maximum value: 20971520
```

### Note:

When HTTP/2 is enabled, Citrix recommends you to disable TCP Dynamic Receive Buffering parameter in the TCP profile.

## WebSocket over HTTP/2 configuration

The NetScaler appliance supports WebSocket connections over HTTP/2. You can enable the WebSocket connections using a CLI or GUI interface. The WebSocket HTTP/2 connection can be multiplexed.

## Configure the WebSocket connections over HTTP/2 by using the CLI

By default, the **WebSocket Connections** parameter is disabled. You can enable the WebSocket connections using the CLI interface.

### Enable Frontend HTTP/2 WebSocket connections:

At the command prompt, type:

#### For SSL configuration:

```
1 add httpprofile <http_profile_name> -http2 enabled -websocket enabled
```

#### For Plain text configuration:

```
1 add httpprofile <http_profile_name> -http2 enabled -http2direct enabled
 -websocket enabled
```

### Enable Backend HTTP/2 WebSocket connections:

At the command prompt, type:

#### For SSL configuration:

```
1 add httpprofile <http_profile_name> -http2 enabled
2 set httpparam -http2serverside ON
```

#### For Plain text configuration:

```
1 add httpprofile <http_profile_name> -http2 enabled -http2direct enabled
2 set httpparam -http2serverside ON
```

**Configure the WebSocket connections over HTTP/2 by using the GUI**

You can use the following procedure to enable the WebSocket connections using the GUI interface.

**Edit the existing Profiles:**

1. Navigate to **System>Profiles>HTTP Profiles**.
2. Select the required profile from the **Profiles** and click **Edit**.
3. In the **Configure HTTP Profile**, enable **HTTP2** or **DirectHTTP2** checkboxes.
4. Enable the WebSocket connections by selecting the **Enable WebSocket connections** checkbox.

**Add new Profiles:**

1. Navigate to **System>Profiles>HTTP Profiles**.
2. You can add a new HTTP2 profile by clicking **Add**.
3. In the **Create HTTP Profile**, enable **HTTP2** or **DirectHTTP2** checkboxes.
4. Select the **Enable WebSocket Connections** checkbox.

The following table describes the WebSocket connection behavior when the back end multiplexing is disabled:

| HTTP packet version | WebSocket in HTTP profile | Request action | Back-end                                                                              |                                                                          |
|---------------------|---------------------------|----------------|---------------------------------------------------------------------------------------|--------------------------------------------------------------------------|
|                     |                           |                | HTTP/1.1                                                                              | Back-end HTTP/2                                                          |
| HTTP/1.1            | Disabled                  | dropped        | NA                                                                                    | NA                                                                       |
| HTTP/1.1            | Enabled                   | HTTP/1.1       | Each HTTP/1.1 connection is mapped to a dedicated HTTP/1.1 connection on the back end | Dedicated HTTP/2 connection on the back end for each HTTP/1.1 connection |

| HTTP packet version | WebSocket in HTTP profile | Request action | Back-end HTTP/1.1                                                         | Back-end HTTP/2                                                                                                             |
|---------------------|---------------------------|----------------|---------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| HTTP/2              | Enabled                   | HTTP/2         | Each stream on the front end is mapped to a dedicated HTTP/1.1 connection | All front end streams can be mapped to a single HTTP/2 connection or a maximum of three HTTP/2 connections on the back end. |
| HTTP/2              | Disabled                  | dropped        | NA                                                                        | NA                                                                                                                          |

The following table describes the WebSocket connection behavior when the back end multiplexing is enabled:

| HTTP packet version | WebSocket in HTTP profile | Request action | Back-end HTTP/1.1                                                                     | Back-end HTTP/2                                                                                                  |
|---------------------|---------------------------|----------------|---------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| HTTP/1.1            | Disabled                  | dropped        | NA                                                                                    | NA                                                                                                               |
| HTTP/1.1            | Enabled                   | HTTP/1.1       | Each HTTP/1.1 connection is mapped to a dedicated HTTP/1.1 connection on the back end | Multiple Http/1.1 clients can be multiplexed to a single HTTP/2 connection or multiple HTTP/2 connections        |
| HTTP/2              | Enabled                   | HTTP/2         | Each stream on the front end is mapped to a dedicated HTTP/1.1 connection             | All front end streams can be mapped to a single HTTP/2 connection or multiple HTTP/2 connections on the back end |
| HTTP/2              | Disabled                  | dropped        | NA                                                                                    | NA                                                                                                               |



## HTTP/2 DoS mitigation

November 11, 2023

The Http/2 Denial-of-Service (DoS) attacks no longer have any impact on a NetScaler appliance. If the appliance receives frames more than the maximum limit, the appliance silently closes the connection.

To mitigate attacks, HTTP profile enables you to change the default configuration of frames received in a HTTP/2 connection.

The [HTTP/2 DoS mitigation](#) table shows the list of HTTP/2 DoS attacks and its mitigation.

### Configure the maximum limit for HTTP/2 frames to mitigate DoS attacks by using the command line interface

At the command prompt, type the following:

```
set ns httpprofile <profile_name> - http2MaxEmptyFramesPerMin <
positive_integer> -http2MaxPingFramesPerMin <positive_integer> -
http2MaxSettingsFramesPerMin <positive_integer> -http2MaxResetFramesPerMin
<positive_integer> -http2MaxRxResetFramesPerMin <value>
```

#### Example:

```
set ns httpprofile profile1 -http2MaxEmptyFramesPerMin 20 -http2MaxPingFramesP
20 -http2MaxSettingsFramesPerMin 20 -http2MaxResetFramesPerMin 20 -
http2MaxRxResetFramesPerMin 100
```

### Configure the maximum limit for frames received in a HTTP/2 connection by using the NetScaler GUI

Follow the steps given below to configure the maximum limit for frames received in a HTTP/2 connection:

1. On the navigation pane, expand **System** and then click **Profiles**.
2. On the **Profile** page, select the **HTTP Profiles** tab.
3. In the **HTTP Profiles** tab page, click **Add**.
4. In the **Configure HTTP Profile** page, set the following parameter.

- a) `http2MaxPingFramesPerMin`. Set the maximum PING frames received per connection in a minute. If the number of PING frames exceed the configured limit, NetScaler silently drops packets on the connection.
  - b) `http2MaxSettingsFramesPerMin`. Set the maximum SETTINGS frames received per connection in a minute. If the number of SETTINGS frames exceed the configured limit, NetScaler silently drops packets on the connection.
  - c) `http2MaxResetFramesPerMin`. Set the maximum RESET frames sent per connection in a minute. If the number of RESET frames exceed the configured limit, NetScaler silently drops packets on the connection.
  - d) `http2MaxEmptyFramesPerMin`. Set the maximum empty frames sent per connection in a minute. If the number of empty frames exceed the configured limit, NetScaler silently drops packets on the connection.
  - e) `http2MaxRxResetFramesPerMin`. Set the maximum RESET frames received per connection in a minute. If the number of RESET frames exceed the configured limit, NetScaler drops packets on the connection.
5. Click **OK** and **Close**.

HTTP/2 Initial Window Size  
65535

HTTP/2 Maximum Concurrent Streams  
100

HTTP/2 Maximum Frame Size  
16384

HTTP/2 Minimum Server Connections  
20

HTTP/2 Maximum Header List Size  
24576

HTTP/2 Maximum Ping Frames Per Minute  
20 ⓘ

HTTP/2 Maximum Reset Frames Sent Per Minute  
25

HTTP/2 Maximum Empty Frames Per Minute  
10 ⓘ

HTTP/2 Maximum Settings Frames Per Minute  
40 ⓘ

HTTP/2 Maximum Reset Frames Received Per Minute  
100 ⓘ

---

**HTTP/3**

HTTP/3

HTTP/3 Maximum Header Field Section Size  
24576

HTTP/3 Maximum Header Table Size  
4096

HTTP/3 Maximum Header Blocked Streams  
100

---

HTTP/3 WebTransport

Alternative Service

Alternative Service Value

|                                                                             |                                                                           |                                                                            |
|-----------------------------------------------------------------------------|---------------------------------------------------------------------------|----------------------------------------------------------------------------|
| <input checked="" type="checkbox"/> Connection Multiplexing                 | <input type="checkbox"/> Drop invalid HTTP requests                       | <input type="checkbox"/> Mark HTTP/0.9 requests as invalid                 |
| <input type="checkbox"/> Mark CONNECT Requests as Invalid                   | <input type="checkbox"/> Mark TRACE Requests as Invalid                   | <input type="checkbox"/> Mark RFC7230 Non-Compliant Transaction as Invalid |
| <input type="checkbox"/> Mark HTTP Header with Extra White Space as Invalid | <input type="checkbox"/> Compression on PUSH packet                       | <input checked="" type="checkbox"/> Drop extra CRLF                        |
| <input type="checkbox"/> Enable WebSocket connections                       | <input type="checkbox"/> Enable RTSP Tunnel                               | <input type="checkbox"/> Drop extra data from server                       |
| <input checked="" type="checkbox"/> HTTP Weblogging                         | <input type="checkbox"/> Persistent ETag                                  | <input type="checkbox"/> Adaptive Timeout                                  |
| <input checked="" type="checkbox"/> gRPC Length Delimitation                | <input checked="" type="checkbox"/> Allow only word characters and hyphen | <input type="checkbox"/> Pass Protocol Upgrade                             |

## HTTP3 over QUIC protocol

May 2, 2023

HTTP/2 over TCP is the preferred standard for sending multiple streams of HTTP requests over a single connection. But, in TCP transport mechanism there are certain limitations and latency issues in accessing websites and web applications. When you multiplex several requests over the same connection they are subjected to reliability of the same connection. If packet for one request is lost, all other multiplexed requests are delayed until the lost packet is detected and retransmitted. This causes head-of-line-blocking delays and latency issues.

For connection and transport delays, HTTP/3 uses QUIC instead of TCP protocol. The QUIC is an emerging protocol that uses UDP instead of TCP as its base transport. In HTTP-over-QUIC, you can multiplex several independent requests without depending on a single TCP connection. QUIC implements a reliable connection upon which, you can stream multiple HTTP requests. QUIC also incorporates TLS as an integrated component and not as an additional layer as in HTTP/1.1 or HTTP/2.


### Advantage of using HTTP/3 protocol

Some of the important benefits of using QUIC protocol for HTTP/3 data transport is given below:

- Stream multiplexing
- Stream and connection-level flow control
- Low-latency connection establishment
- Connection migration and resilience to NAT rebinding
- Authenticated and encrypted header and payload

### Transport stack in HTTP protocols

The below illustration shows transport stack in HTTP/1.1, HTTP/2 and HTTP/3 protocols.

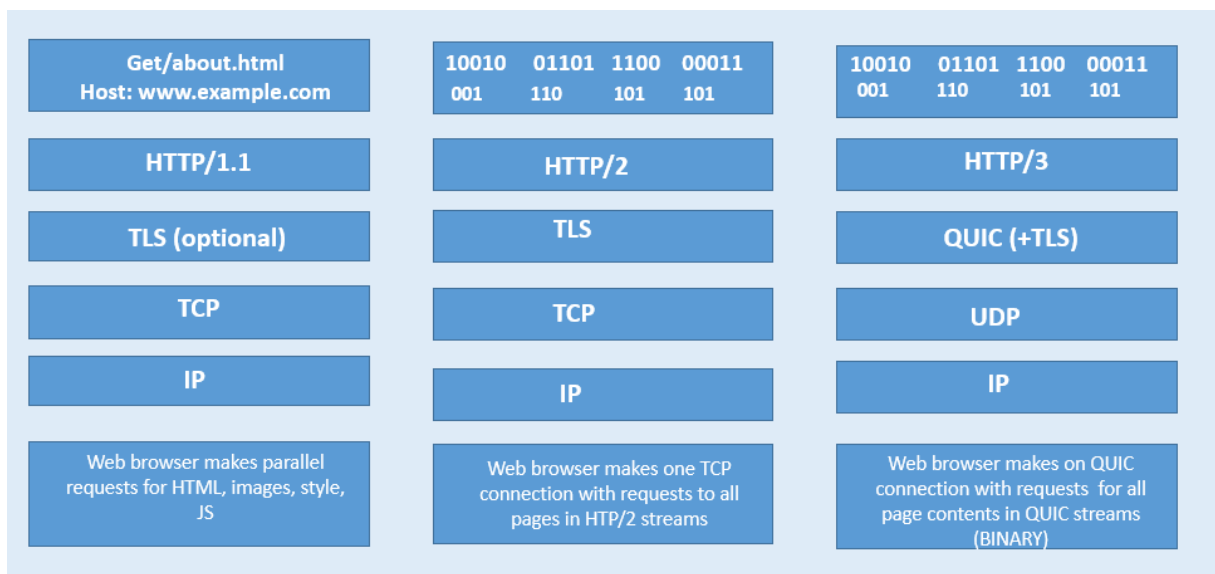

## How QUIC and HTTP/3 connection management works in NetScaler

The following illustration shows how QUIC and HTTP/3 connection management in a NetScaler appliance and how the components interact with each other.



Step 1: Client-side HTTP/3 request over QUIC protocol to NetScaler appliance.

Step 2: Request forwarded by NetScaler as HTTP/1.1 or HTTP/2 depending on back-end server support.


Step 3: Response through HTTP/2 or HTTP/1.1 from back-end server to NetScaler.

Step 4: ADC forwards the response as HTTP/3 response to client.

## How HTTP/3 protocol works

In HTTP/3, when a client knows that an HTTP/3 server exists at a certain endpoint, it opens a QUIC connection. The QUIC protocol provides multiplexing and flow control. Within each stream, the basic unit of HTTP/3 communication is a frame. Each frame type serves a different purpose. For example, HEADERS and DATA frames form the basis of HTTP requests and responses.

Multiplexing of requests is performed using the QUIC stream abstraction. Each request-response pair consumes a single QUIC stream. Streams are independent of each other, so one stream that is blocked or suffers packet loss does not prevent progress on other streams. Server push is an interaction mode introduced in HTTP/2 which permits a server to push a request-response exchange to a client in anticipation of the client making the indicated request. This trades off network usage against a potential latency gain. Several HTTP/3 frames are used to manage server push, such as PUSH\_PROMISE, MAX\_PUSH\_ID, and CANCEL\_PUSH. As in HTTP/2, request and response fields are compressed for transmission. Because HPACK relies on in-order transmission of compressed field sections (a guarantee not provided by QUIC), HTTP/3 replaces HPACK with QPACK. QPACK uses separate unidirectional streams to modify and track field table state, while encoded field sections refer to the state of the table without modifying it.

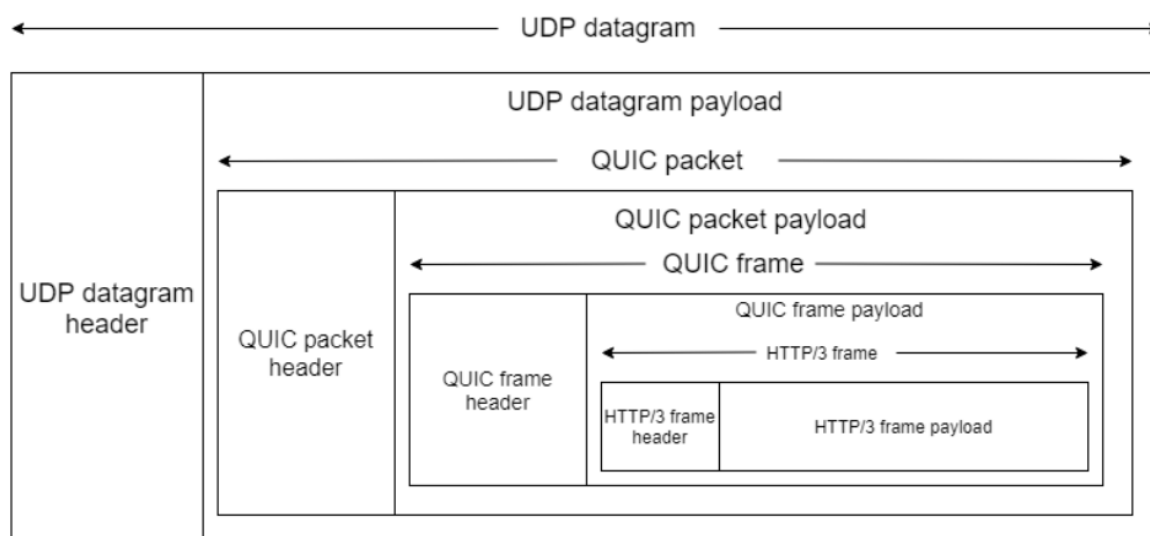

## HTTP/3 configuration and Stat summary

October 21, 2024

To configure a HTTP/3 protocol for sending multiple streams of HTTP/3 data using Quick UDP Internet Connections (QUIC), follow these steps:

### Frontend configuration:

1. Enable SSL and load balancing features.
2. Add load balancing and content switching (optional) virtual servers of type HTTP\_QUIC.
3. Associate QUIC profile with the HTTP\_QUIC virtual servers.
4. Enable HTTP/3 on the HTTP\_QUIC virtual server.
5. Bind the SSL certificate-key pair with the HTTP\_QUIC virtual servers.
6. Associate the SSL/TLS profile with the HTTP\_QUIC virtual servers.

### Backend configuration:

1. Enable SSL and load balancing features.
2. Add services or service groups of type HTTP\_QUIC.
3. Associate QUIC profile with the HTTP\_QUIC services or service groups.
4. Associate the SSL/TLS profile with the HTTP\_QUIC services or service groups.
5. Add a custom monitor of type QUIC.
6. Associate a QUIC monitor to the HTTP\_QUIC services or service groups.

## Enable SSL and load balancing

Before you begin, make sure that the SSL and Load Balancing features are enabled on the appliance. Enabling SSL and load balancing provides a robust solution that enhances both the security and performance of your network. SSL ensures that data is protected, while load balancing ensures that services remain responsive and available even under high traffic conditions.

At the command prompt type:

```
1 enable ns feature ssl lb
```

## Add load balancing and content switching (optional) virtual servers of type HTTP\_QUIC for HTTP/3 service

You add a load balancing virtual server to accept HTTP/3 traffic over QUIC.

**Note:**

The load balancing virtual server of type HTTP\_QUIC has built-in QUIC, SSL, and HTTP3 profiles. If you prefer to create user-defined profiles, you can add new profiles and bind it with the load balancing virtual server.

```
1 add lb vserver <vserver-name> HTTP_QUIC <IP-address> <UDP-listening-
port>
2 add cs vserver <vserver-name> HTTP_QUIC <IP-address> <UDP-listening-
port>
```

**Example:**

```
1 add lb vserver lb-http3 HTTP_QUIC 1.1.1.1 443
2 add cs vserver cs-http3 HTTP_QUIC 10.10.10.10 443
```

## Associate QUIC profile with HTTP\_QUIC virtual server

You can create a QUIC profile and specify QUIC parameters for the QUIC service and associate it to the load balancing virtual server. You must either create a user-defined profile or use the in-built QUIC profile and bind the profile to the load balancing virtual server.

**Step 1:** Configure a user-defined QUIC profile.

At the command prompt, type:

```
1 set quic profile <profile_name> -transport_param <value>
```

**Example:**

```
set quic profile quic_http3 -ackDelayExponent 10 -activeConnectionIDlimit 4
```

The different QUIC transport parameters are as follows:

- **-ackDelayExponent** An integer value advertised by NetScaler to the remote QUIC endpoint, indicating an exponent that the remote QUIC endpoint must use to decode the ACK Delay field in QUIC ACK frames sent by NetScaler.
- **-activeConnectionIDlimit** An integer value advertised by NetScaler to the remote QUIC endpoint. It specifies the maximum number of QUIC connection IDs from the remote QUIC endpoint, that NetScaler is willing to store.
- **-activeConnectionMigration** Specify whether NetScaler must allow the remote QUIC endpoint to perform active QUIC connection migration.
- **-congestionCtrlAlgorithm** Specify the congestion control algorithm to be used for QUIC connections.
- **-initialMaxData** An integer value advertised by NetScaler to the remote QUIC endpoint, specifying the initial limit (in bytes) for the amount of data that can be sent on a QUIC connection.
- **-initialMaxStreamDataBidiLocal** An integer value advertised by NetScaler to the remote QUIC endpoint, specifying the initial flow control limit (in bytes) for bi-directional QUIC streams initiated by NetScaler.
- **-initialMaxStreamDataBidiRemote** An integer value advertised by NetScaler to the remote QUIC endpoint, specifying the initial flow control limit (in bytes) for bi-directional QUIC streams started by the remote QUIC endpoint.
- **-initialMaxStreamDataUni** An integer value advertised by NetScaler to the remote QUIC endpoint, specifying the initial flow control limit (in bytes) for uni-directional streams started by the remote QUIC endpoint.
- **-initialMaxStreamsBidi** An integer value advertised by NetScaler to the remote QUIC endpoint, specifying the initial maximum number of bi-directional streams the remote QUIC endpoint must initiate.
- **-initialMaxStreamsUni** An integer value advertised by NetScaler to the remote QUIC endpoint, specifying the initial maximum number of uni-directional streams the remote QUIC endpoint must initiate.
- **-maxAckDelay** An integer value advertised by NetScaler to the remote QUIC endpoint, specifying the maximum amount of time (in milliseconds) by which NetScaler delays sending acknowledgments.
- **-maxIdleTimeout** An integer value advertised by NetScaler to the remote QUIC endpoint, specifying the maximum idle timeout (in seconds) for a QUIC connection. A QUIC connection is



silently discarded by NetScaler if it remains idle for too long. The idle timeout is determined by the minimum of the timeout values advertised by NetScaler and the remote QUIC endpoint. Also, the connection is discarded if it remains idle for three times the current Probe Timeout (PTO).

- **-maxUDPPayloadSize** An integer value advertised by NetScaler to the remote QUIC endpoint, specifying the size of the largest UDP datagram payload, in bytes, that NetScaler is willing to receive on a QUIC connection.
- **-newTokenValidityPeriod** An integer value, specifying the validity period, in seconds, of address validation tokens issued through QUIC NEW\_TOKEN frames sent by NetScaler.
- **-retryTokenValidityPeriod** An integer value, specifying the validity period, in seconds, of address validation tokens issued through QUIC Retry packets sent by NetScaler.
- **-statelessAddressValidation** Specify whether NetScaler must perform stateless address validation for QUIC clients, by sending tokens in QUIC Retry packets during QUIC connection establishment, and by sending tokens in QUIC NEW\_TOKEN frames after QUIC connection establishment.

**Step 2:** Associate the user-defined QUIC profile to a load balancing virtual server of type HTTP\_QUIC

At the command prompt, type:

```
1 set lb vserver <name>@ [[-IPAddress <ip_addr|ipv6_addr|*>@] <
 serviceName>@] [-persistenceType <persistenceType>] [-
 quicProfileName <string>]
```

**Example:**

```
set lb vserver lb-http3 -quicProfileName quic_http3
```

### Enable and bind HTTP/3 on a HTTP\_QUIC virtual server

To enable HTTP/3 on an HTTP\_QUIC virtual server, a set of configuration parameters is added to the HTTP profile configuration. To facilitate ease of configuration, when you add an HTTP\_QUIC virtual server, a new default or built-in HTTP profile is available on the appliance. The profile has the HTTP/3 support set to ENABLED and is bound to the HTTP\_QUIC virtual servers unless a user-added HTTP profile is associated. The HTTP/3 parameters in the HTTP profile determine whether to select and advertise the HTTP/3 protocol during the TLS Application Layer Protocol Negotiation (ALPN) extension in the QUIC handshake.

You can create a HTTP/3 profile and specify HTTP parameters for the HTTP/3 service and load balancing virtual server. You must either create a user-defined profile or use the in-built HTTP/3 profile and bind the profile to the load balancing virtual server.

**Step 1:** Configure a user-defined HTTP/3 profile.

At the command prompt, type:

```
1 Add ns httpProfile <profile_name> -http3 ENABLED
```

**Example:**

```
add ns httpProfile http3_quic -http3 ENABLED
```

**Step 2:** Bind the user-defined HTTP/3 profile to a load balancing virtual server of type http\_quic

At the command prompt, type:

```
1 set lb vserver <name>@ [-IPAddress <ip_addr|ipv6_addr|*>@] <
 serviceName>@ [-persistenceType <persistenceType>] [-
 httpProfileName <string>]
```

**Example:**

```
set lb vserver lb-http3 -httpProfileName http3_quic
```

## Bind SSL certificate-key pair with HTTP\_QUIC virtual server

For processing encrypted traffic, you must add an SSL certificate-key pair and bind it to the HTTP\_QUIC virtual server.

At the command prompt, type:

```
1 bind ssl vserver <vServerName> -certkeyName <certificate-KeyPairName>
```

**Example:**

```
bind ssl vserver lb-http3 -certkeyName rsa_certkeypair
```

For more information, see [Bind SSL certificate](#) topic.

## Bind SSL/TLS profile with a HTTP\_QUIC virtual server

Virtual servers of the type HTTP\_QUIC have in-built TLS 1.3 server functionality because the QUIC protocol uses TLS 1.3 as a mandatory security component. To configure a HTTP\_QUIC virtual server, a new default or built-in SSL profile of type `-QUIC-FrontEnd` is added. The SSL profile has TLS 1.3 version enabled with TLS 1.3 cipher suites (and elliptic curves) configured. The SSL profile must then be bound to the newly added HTTP\_QUIC virtual servers.

You can create an SSL profile and specify SSL encryption parameters for the Transport Layer Protocol (TLP) version 1.1 service and load balancing virtual server. You must either create a user-defined profile or use the in-built SSL profile and bind the profile to the load balancing virtual server.

**Step 1:** Configure a user-defined SSL profile.

At the command prompt, type:

```
1 add ssl profile <name> -sslprofileType QUIC-FrontEnd
```

**Example:**

```
add ssl profile ssl_profile1 -sslprofileType QUIC-FrontEnd -tls13
ENABLED -tls12 DISABLED -tls11 DISABLED -tls1 DISABLED
```

**Step 2:** Bind the user-defined SSL profile to a load balancing virtual server of type HTTP\_QUIC.

At the command prompt, type:

```
1 set ssl vsrv <name>@ [-sslProfile <string>]
```

**Example:**

```
set ssl vsrv lb-http3 -sslprofile ssl_profile1
```

## Add services or service groups of type HTTP\_QUIC

Adding services of type HTTP\_QUIC allows you to configure individual network services to use the QUIC protocol for their communication. This setup ensures that each service can take full advantage of the performance and security benefits provided by QUIC.

At the command prompt, type:

```
1 add service <serviceName> <IPAddress> <serviceType> <port>
2 add serviceGroup <serviceGroupName> <serviceGroupType>
```

**Example:**

```
1 add service http_quic_service1 192.0.2.5 HTTP_QUIC 443
2 add serviceGroup http_quic_serviceGroup1 HTTP_QUIC
```

## Associate QUIC profile with HTTP\_QUIC services or service groups

By associating QUIC profile with HTTP\_QUIC services or service groups, you ensure that these services can use the benefits of QUIC. This includes improved performance, faster connection establishment, and enhanced security features.

At the command prompt, type:

```
1 set service <serviceName> -quicProfile <quicProfileName>
2 set serviceGroup <serviceGroupName> -quicProfile <quicProfileName>
```

**Example:**

```
1 set service http_quic_service1 -quicProfile quic_profile1
2 set serviceGroup http_quic_serviceGroup1 -quicProfile quic_profile1
```

## Associate the SSL/TLS profile with HTTP\_QUIC services or service groups

By associating the SSL/TLS profile with HTTP\_QUIC services or service groups, you ensure that the data transmitted over these services is encrypted and secure. This association helps in maintaining the confidentiality and integrity of the data, protecting it from potential eavesdropping and tampering.

To configure an HTTP\_QUIC service or service group with the new default SSL profile of type QUIC-BackEnd, follow these steps:

**Step 1:** Create an SSL profile of type QUIC-BackEnd.

You can either create a user-defined profile or use the built-in SSL profile. The `QUIC-BackEnd` SSL profile is pre-configured with TLS 1.3 (along with appropriate TLS 1.3 cipher suites) and elliptic curves.

```
1 add ssl profile <name> -sslprofileType <Type>
```

### Example:

```
1 add ssl profile ssl_profile1 -sslprofileType QUIC-BackEnd -tls13
 ENABLED -tls12
2 DISABLED -tls11 DISABLED -tls1 DISABLED
```

**Step 2:** Bind the SSL profile to HTTP\_QUIC service or service group.

At the command prompt, type:

```
1 set ssl service <serviceName> -sslProfile <sslProfileName>
2 set ssl serviceGroup <serviceGroupName> -sslProfile <sslProfileName>
```

### Example:

```
1 set ssl service http_quic_service1 -sslProfile ssl_profile1
2 set ssl serviceGroup http_quic_serviceGroup1 -sslProfile ssl_profile1
```

## Add a custom monitor of type QUIC

Adding a custom monitor of type QUIC allows you to actively monitor the health and performance of services that use the QUIC protocol. This type of monitor can check various metrics such as connection latency, packet loss, and throughput, ensuring that your QUIC-enabled services are functioning optimally.

At the command prompt, type:

```
1 add lb monitor <monitor name> <monitor type>
```

**Example:**

```
1 add lb monitor quic_monitor QUIC
```

**Associate a QUIC monitor to the HTTP\_QUIC services or service groups**

At the command prompt, type:

```
1 bind service <serviceName> -monitorName <monitorName>
2 bind serviceGroup <serviceGroupName> -monitorName <monitorName>
```

**Example:**

```
1 bind service http_quic_service1 -monitorName quic_monitor1
2 bind serviceGroup http_quic_servicegroup1 -monitorName quic_monitor1
```

**Enable SSL and load balancing features by using the GUI**

Complete the following steps to enable SSL and load balancing features:

1. Navigate to **System > Settings**.
2. On the **Configure Basic Features** page, select the **SSL** and **Load Balancing**.
3. Click **OK** to enable the features.

## ← Configure Basic Features

|                                                                     |                                             |
|---------------------------------------------------------------------|---------------------------------------------|
| <input checked="" type="checkbox"/> SSL Offloading                  | <input type="checkbox"/> HTTP Compression   |
| <input checked="" type="checkbox"/> Load Balancing                  | <input type="checkbox"/> Content Switching  |
| <input type="checkbox"/> Content Filter                             | <input type="checkbox"/> Integrated Caching |
| <input type="checkbox"/> Rewrite                                    | <input type="checkbox"/> Citrix Gateway     |
| <input type="checkbox"/> Authentication, Authorization and Auditing |                                             |

## Add load balancing and content switching (optional) virtual servers of type HTTP\_QUIC by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Click **Add** to create a load balancing virtual server of type HTTP\_QUIC.
3. On the **Load Balancing Virtual Server** page, click **Profiles**.
4. In the **Profiles** section, select the profile type as QUIC. Note: QUIC, HTTP/3 and SSL profiles are built-in ones.
5. Click **OK** and then **Done**.

### ← Load Balancing Virtual Server

**Basic Settings**

Create a virtual server by specifying a name, an IP address, a port, and a protocol type. If an application is accessible from the Internet, the virtual server IP (VIP) address is a public IP address. If the application is accessible only from the local area network (LAN) or wide area network (WAN), the VIP is usually a private (ICANN non-routable) IP address. You can configure multiple virtual servers to receive client requests, thereby increasing the availability of resources to process client requests.

Name\*  
sample-server ⓘ

Protocol\*  
HTTP\_QUIC ⓘ

IP Address Type\*  
IP Address ⓘ

IP Address\*  
. . . . ⓘ

Port\*  
443 ⓘ

More

OK Cancel

## Associate QUIC profile with the HTTP\_QUIC virtual server by using the GUI

### Step 1: Add QUIC profile.

1. Navigate to **System > Profiles > QUIC Profile**.
2. Click **Add**.
3. On the **QUIC Profile** page, set the following parameters. Each parameter helps to fine-tune the behavior and performance of QUIC connections. For a detailed description of each parameter, see the **Associate QUIC protocol CLI** section.

```

1 1. `Ack Delay` Exponent
2 1. Active Connection ID Limit
3 1. Active Connection Migration
4 1. Congestion Control Algorithm
5 1. Initial Maximum Data
6 1. Initial Maximum Stream Data Bidi Local
7 1. Initial Maximum Stream Data Bidi Remote
8 1. Initial Maximum Stream Data Unit
9 1. Initial Maximum Stream bidi

```

```
10 1. Initial Maximum Stream Uni
11 1. Maximum Acknowledgment Delay
12 1. Maximum Idle Timeout
13 1. Maximum UDP Data GramsperBurst
14 1. New Token Validity Period
15 1. Retry Token Validity Period
16 1. Stateless Address Validation
```

## ← QUIC Profile

Name\*

Ack Delay Exponent

Active Connection ID Limit

Active Connection Migration

Congestion Control Algorithm

Initial Maximum Data

Initial Maximum Stream Data Bidi Local

Initial Maximum Stream Data Bidi Remote

Initial Maximum Stream Data Unit

Initial Maximum Stream bidi

Initial Maximum Stream Uni

Maximum Acknowledgement Delay

Maximum Idle Timeout

Maximum UDP Data GramsperBurst

New Token Validity Period

Retry Token Validity Period

Stateless Address Validation



**Step 2:** Associate QUIC profile with load balancing virtual server of type HTTP\_QUIC.

1. In the **Traffic Management > Virtual Server**, select the virtual server of type HTTP\_QUIC.
2. In the **Profiles** section, select the QUIC profile.

**Note:**

QUIC, HTTP/3 and SSL profiles are built-in ones.

3. Click **OK** and then **Done**.

### **Associate SSL/TLS profile with the virtual server of type SSL by using the GUI**

**Step 1:** Add SSL profile.

1. Navigate to **System > Profiles > SSL Profile**.
2. Click **Add**.
3. On the **QUIC Profile** page, set the SSL parameters. For a detailed description, see the SSL Profile configuration topic.
4. Click **OK** and **Close**.

## ← SSL Profile

### Basic Settings

Name\*  
 ⓘ

SSL Profile Type\*

PUSH Encryption Trigger\*

Encryption trigger packet count

Push Flag\*

PUSH encryption trigger timeout (ms)

Encryption trigger timeout (10 ms ticks)

SNI HTTP Host Match

Encoding type\*

Deny SSL Renegotiation\*


SSL quantum size (KBytes)\*

Clear Text Port

ALPN Protocol

**Step 2:** Associate SSL profile with a load balancing virtual server of type SSL.

1. In the **Traffic Management > Virtual Server**, select a virtual server.
2. In the **SSL profile** section, select the SSL profile.
3. Click **OK** and then **Done**.

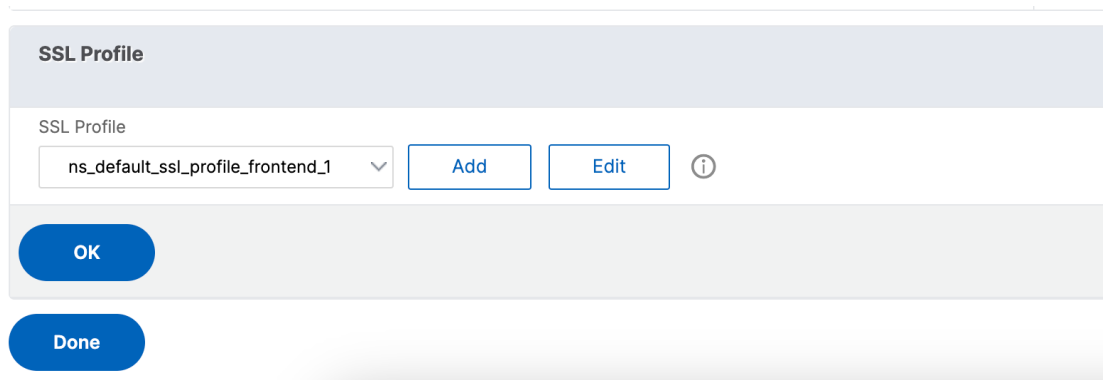

### Add services or service groups of the type HTTP\_QUIC by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Services or Service Groups**.
2. Click **Add** to create a service or service group.
3. Enter a name for the service or service group.
4. Select **HTTP\_QUIC** from the Protocol drop-down menu.
5. Configure the other settings as required.
6. Click **Create** to add the service or service group.

### Associate QUIC profile with the HTTP\_QUIC services or service groups by using the GUI

**Step 1:** Edit the service or service group.

1. Navigate to **Traffic Management > Load Balancing > Services/service groups**.
2. Select the HTTP\_QUIC service or service group that you want to configure.
3. Click **Edit**.

**Step 2:** Associate QUIC profile.

1. On the **Load Balancing Service** or **Load Balancing Service Group** page, go to the **Profiles** tab and click **Edit**.
2. Create a QUIC profile or select the previously created QUIC profile from the drop-down menu.
3. Click **OK** to save the changes.

### Associate the SSL/TLS profile with the HTTP\_QUIC services or service groups by using the GUI

**Step 1:** Edit the service or service group.

1. Navigate to **Traffic Management > Load Balancing > Services/service groups**.

2. Select the HTTP\_QUIC service or service group that you want to configure.
3. Click **Edit**.

**Step 2:** Associate SSL profile.

1. On the **Load Balancing Service** or **Load Balancing Service Group** page, go to the **SSL Profile** tab and click **Edit**.
2. In the **SSL profile** window, set the **SSL Profile Type** to **QUIC-BackEnd** and configure other settings as needed.
3. Click **OK** to save the changes.

## Associate a QUIC monitor to the HTTP\_QUIC services or service groups by using the GUI

**Step 1:** Create a QUIC monitor.

1. Go to **Traffic Management > Load Balancing > Monitors**.
2. Click **Add** to create a monitor.
3. On the **Create Monitor** page, set the Type to **QUIC** and configure other settings as needed.
4. Click **Create** to save the monitor.

**Step 2.** Bind the QUIC monitor to a HTTP\_QUIC service or service group.

1. Navigate to **Traffic Management > Load Balancing > Services or Service Groups**.
2. Select the HTTP\_QUIC service or service group that you previously created and click **Edit**.
3. Go to the **Monitors** tab.
4. On the **Service Load Balancing Monitor Binding** page, click **Add Binding**.
5. In the **Load Balancing Monitor Binding** window, select the QUIC monitor you created.
6. Click **Bind** to associate the monitor with the service or service group.
7. Click **Close** to complete the binding.

## View QUIC and HTTP/3 statistics

The following commands display a detailed summary of QUIC and HTTP3 statistics. At the command prompt, type the following:

```
1 > stat quic
2 > stat quic -detail
```

To clear the statistics display, type one of the following:

```
1 > stat quic -clearstats basic
2 > stat quic -clearstats full
```

To display a detailed summary of HTTP/3 statistics:

```
1 > stat http3
2 > stat http3 - detail
```

To clear the statistics display, type one of the following:

```
1 > stat http3 -clearstats basic
2 > stat http3 -clearstats full
```

## Policy configuration for HTTP/3 traffic

May 2, 2023

HTTP/3 uses QUIC transport which is based on UDP. If you had policy expression defined for the HTTP or SSL virtual server that includes TCP policy expressions, it can no longer be used with a HTTP\_QUIC virtual server. All other policies that do not have TCP or classic expressions can be bound with a HTTP\_QUIC virtual server. For the policies to take effect, you must ensure that the feature policies are bound to the newly added global bind points as per the following.

- HTTPQUIC\_REQ\_DEFAULT
- HTTPQUIC\_REQ\_OVERRIDE
- HTTPQUIC\_RES\_DEFAULT
- HTTPQUIC\_RES\_OVERRIDE

Or, the policies can be bound to specific virtual server bind points:

- REQUEST
- RESPONSE

For more information, see [Bind policy using advanced policy infrastructure](#) topic.

Following are the policies supported for HTTP over QUIC configuration:

- Responder
- Rewrite
- HTTP Compression
- Integrated Caching
- Web Application Firewall
- URL transformation
- SSL
- Front end optimization (FEO)
- AppQoE

## Responder policy configuration for HTTP/3 traffic

HTTP over QUIC type virtual servers have responder policy support. However, as QUIC uses UDP as its transport mechanism, TCP based expressions are excluded and UDP based expressions are included.

New or existing policy configurations with TCP expressions cannot be bound to HTTP/3 QUIC virtual servers or HTTP over QUIC global bind points. Instead of TCP expressions, UDP expressions can be included in the policy configurations that are bound to HTTP/3 QUIC virtual servers or HTTP over QUIC bind points.

### Add responder action for redirecting URLs

To add a responder action, at the command prompt, type:

```
1 add responder action <name> <type> (<target> | <htmlpage>) [-comment <string>] [-responseStatusCode <positive_integer>] [-reasonPhrase <expression>] [-headers <name(value)> ...]
```

#### Example:

```
add responder action redirectURL redirect "\"https://www.citrix.com /\""
```

### Add responder policy

To add a responder policy, at the command prompt, type:

```
1 add responder policy <name> <rule> <action> [<undefAction>] [-comment <string>] [-logAction <string>] [-appflowAction <string>]
```

#### Example:

```
add responder policy res-pol "CLIENT.IP.SRC.IN_SUBNET(10.10.10.10/32) "redirectURL"
```

### Add responder policy based UDP expression

To add a responder policy based UDP expression, at the command prompt, type:

```
1 add responder policy <name> <rule> <action> [<undefAction>] [-comment <string>] [-logAction <string>] [-appflowAction <string>]
```

#### Example:

```
add responder policy redirectCitrixUdp "CLIENT.UDP.DSTPORT.EQ(443)"
redirectURL
```

### Bind responder policy based UDP expression with HTTP/3 QUIC based load balancing virtual server

To bind a responder policy based UDP expression to a load balancing virtual server, at the command prompt, type:

```
1 bind lb vserver <name>@ ((<serviceName>@ [-weight <positive_integer>]
) | <serviceName>@ | (-policyName <string>@ [-
priority <positive_integer>] [-gotoPriorityExpression <expression>]
[-type <type>] [-invoke (<labelType> <labelName>)]) | -
analyticsProfile <string>@)
```

#### Example:

```
bind lb vserver lb-http3 -policyName redirectCitrixUdp -priority 9 -
gotoPriorityExpression END -type REQUEST
```

### Bind responder policy with HTTP/3 QUIC based load balancing virtual server

To bind a responder policy to a load balancing virtual server, at the command prompt, type:

```
1 bind lb vserver <name>@ ((<serviceName>@ [-weight <positive_integer>]
) | <serviceName>@ | (-policyName <string>@ [-
priority <positive_integer>] [-gotoPriorityExpression <expression>]
[-type <type>] [-invoke (<labelType> <labelName>)]) | -
analyticsProfile <string>@)
```

#### Example:

```
bind lb vserver lb-http3 -policyName redirectCitrixUdp -priority 10 -
gotoPriorityExpression END -type REQUEST
```

### Bind responder policy to HTTP/3 global bind point

To bind a responder policy with the HTTP/3 global bind point, at the command prompt, type:

```
1 bind responder global <policyName> <priority> [<gotoPriorityExpression
>] [-type <type>] [-invoke (<labelType> <labelName>)] bind
responder global redirectCitrixUdp 3 -type HTTPQUIC_REQ_DEFAULT
```

#### Example:

```
bind responder global redirectCitrixUdp 3 -type HTTPQUIC_REQ_DEFAULT
```

**Note:**

For more information, see [Responder policy documentation](#).

**Rewrite policy configuration for HTTP/3 traffic**

HTTP over QUIC type virtual servers have rewrite policy support. However, as QUIC uses UDP as its transport mechanism, TCP based expressions are excluded and UDP based expressions are included.

New or existing policy configurations with TCP expressions cannot be bound to HTTP/3 virtual servers or to the newly added HTTP/3 global bind points. Instead of TCP expressions, UDP expressions can be included in the policy configurations that are bound to HTTP/3 QUIC virtual servers or HTTP over QUIC bind points.

Following are the configuration steps to configure the rewrite policy for HTTP3 over QUIC.

**Add rewrite action for HTTP over QUIC**

To add rewrite action, at the command prompt, type:

```
1 add rewrite action <name> <type> <target> [<stringBuilderExpr>] [-
 search <expression>] [-refineSearch <expression>] [-comment <string
 >]
```

**Example:**

```
add rewrite action http3-altsvc-action insert_http_header Alt-Svc q/"
h3-29=":443\"; ma=3600; persist=1"/
```

**Add rewrite policy for HTTP over QUIC**

To add a write action, at the command prompt, type:

```
1 add rewrite policy <name> <rule> <action> [<undefAction>] [-comment <
 string>] [-logAction <string>]
```

**Example:**

```
add rewrite policy http3-altsvc-policy true http3-altsvc-action
```

**Bind rewrite policy to load balancing virtual server of type HTTP/3\_QUIC**

To bind rewrite policy to the load balancing virtual server, at the command prompt, type:



```
1 bind lb vserver <name>@ ((<serviceName>@ [-weight <positive_integer>])
 | <serviceGroupName>@ | (-policyName <string>@ [-priority <
 positive_integer>] [-gotoPriorityExpression <expression>] [-type <
 type>] [-invoke (<labelType> <labelName>)]) | -analyticsProfile <
 string>@)
```

**Example:**

```
bind lb vserver lb-http3 -policyName http3-altsvc-policy -priority 10
-type RESPONSE
```

**Bind rewrite policy to HTTP/3 global bind point**

```
1 To bind a responder policy with HTTP/3 global bind point, at the
 command prompt, type:
2 bind rewrite global <policyName> <priority> [<gotoPriorityExpression>]
 [-type <type>] [-invoke (<labelType> <labelName>)]
```

**Example:**

```
bind rewrite global http3-altsvc-policy 3 -type HTTPQUIC_RES_DEFAULT
```

**Note:**

For more information, see [Rewrite policy documentation](#).

**Compression policy configuration for HTTP/3 traffic**

When the NetScaler receives an HTTP response from a server, it evaluates the built-in compression policies and any custom compression policies to determine whether to compress the response and, if so, the type of compression to apply. Priorities assigned to the policies determine the order in which the policies are matched against the requests.

HTTP over QUIC type virtual servers have compression policy support. However, as QUIC uses UDP as its transport mechanism, TCP based expressions are excluded and UDP based expressions are included.

New or existing policy configurations with TCP expressions cannot be bound to HTTP/3 virtual servers or to the newly added HTTP/3 global bind points. Instead of TCP expressions, UDP expressions can be included in the policy configurations that are bound to HTTP/3 QUIC virtual servers or HTTP over QUIC bind points.

**Add compression policy**

To add compression policy, at the command prompt, type:

```
1 add cmp policy <name> -rule <expression> -resAction <string>
```

**Example:**

```
add cmp policy udp_port_cmp_policy -rule "CLIENT.UDP.DSTPORT.EQ(443)"
-resAction COMPRESS
```

**Bind compression policy with load balancing virtual server of type HTTP/3\_QUIC**

To bind URL transformation policy with load balancing virtual server of type HTTP/3\_QUIC, at the command prompt, type:

```
1 bind lb vserver <name>@ ((<serviceName>@ [-weight <positive_integer>]
) | <serviceGroupName>@ | (-policyName <string>@ [-priority <
positive_integer>] [-gotoPriorityExpression <expression>] [-type (
REQUEST | RESPONSE)) [-invoke (<labelType> <labelName>)]) |
-analytcsProfile <string>@)
```

**Example:**

```
bind lb vserver lb-http3 -policyName udp_port_cmp_policy -priority 10
-type RESPONSE
```

**Bind compression global to HTTP/3 global bind point**

To bind a compression policy with the HTTP/3 global bind point, at the command prompt, type:

```
1 bind compression global <policyName> <priority> [<
gotoPriorityExpression>] [-type <type>] [-invoke (<labelType> <
labelName>)] bind responder global redirectCitrixUdp 3 -type
HTTPQUIC_REQ_DEFAULT
```

**Example:**

```
bind cmp global udp_port_cmp_policy -priority 100 -type HTTPQUIC_RES_DEFAULT
Global built-in compression policies
```

After you upgrade your appliance to NetScaler release 13.0 build 82.x, the following compression policies will be automatically bound to the HTTP/3 default bind point.

```
1 > sho cmp global -type HTTPQUIC_RES_DEFAULT
2 Policy Name: ns_adv_nocmp_xml_ie
3 Priority: 8700
4 GotoPriorityExpression: END
5 Type: HTTPQUIC_RES_DEFAULT
6
7 Policy Name: ns_adv_nocmp_mozilla_47
8 Priority: 8800
```

```
9 GotoPriorityExpression: END
10 Type: HTTPQUIC_RES_DEFAULT
11
12 Policy Name: ns_adv_cmp_mscss
13 Priority: 8900
14 GotoPriorityExpression: END
15 Type: HTTPQUIC_RES_DEFAULT
16
17 Policy Name: ns_adv_cmp_msapp
18 Priority: 9000
19 GotoPriorityExpression: END
20 Type: HTTPQUIC_RES_DEFAULT
21
22 Policy Name: ns_adv_cmp_content_type
23 Priority: 10000
24 GotoPriorityExpression: END
25 Type: HTTPQUIC_RES_DEFAULT
```

If not bound, the following commands can be configured through the command prompt and you can configuration on your appliance.

```
bind cmp global ns_adv_nocmp_xml_ie -priority 8700 -gotoPriorityExpression
 END -type HTTPQUIC_RES_DEFAULT
```

```
bind cmp global ns_adv_nocmp_mozilla_47 -priority 8800 -gotoPriorityExpression
 END -type HTTPQUIC_RES_DEFAULT
```

```
bind cmp global ns_adv_cmp_mscss -priority 8900 -gotoPriorityExpression
 END -type HTTPQUIC_RES_DEFAULT
```

```
bind cmp global ns_adv_cmp_msapp -priority 9000 -gotoPriorityExpression
 END -type HTTPQUIC_RES_DEFAULT
```

```
bind cmp global ns_adv_cmp_content_type -priority 10000 -gotoPriorityExpressio
 END -type HTTPQUIC_RES_DEFAULT
```

For more information, see [Compression policy configuration](#).

### **Caching policy configuration for HTTP/3 traffic**

The integrated cache provides in-memory storage on the NetScaler appliance and serves Web content to users without requiring a round trip to an origin server. For static content, the integrated cache requires little initial setup. After you enable the integrated cache feature and perform basic setup (for example, determining the amount of NetScaler appliance memory the cache is permitted to use), the integrated cache uses built-in policies to store and serve specific types of static content, including simple webpages and image files. You can also configure the integrated cache to store and serve dynamic content that is marked as non-cacheable by Web and application servers (for example, database records and stock quotes).

HTTP over QUIC type virtual servers have cache policy support. However, as QUIC uses UDP as its transport mechanism, TCP based expressions are excluded and UDP based expressions are included.

New or existing policy configurations with TCP expressions cannot be bound to HTTP/3 virtual servers or to the newly added HTTP/3 global bind points. Instead of TCP expressions, UDP expressions can be included in the policy configurations that are bound to HTTP/3 QUIC virtual servers or HTTP over QUIC bind points.

### Add cache content group

To add the cache content group, at the command prompt, type:

```
1 add cache contentGroup <name> [-weakPosRelExpiry <secs> | -relExpiry <secs> | -relExpiryMilliSec <msecs> | -absExpiry <HH:MM> ... | -absExpiryGMT <HH:MM> ...] [-heurExpiryParam <positive_integer>] [-weakNegRelExpiry <secs>] [-maxResSize <KBytes>] [-memLimit <MBytes>] ...
```

#### Example::

```
add cache contentGroup DEFAULT -maxResSize 500
```

### Add cache policy

To add cache policy, at the command prompt, type:

```
1 add cache policy <policyName> -rule <expression> -action <action> [-storeInGroup <string>] [-invalGroups <string> ...] [-invalObjects <string> ...] [-undefAction (NOCACHE | RESET)] add cache policy <name> <rule> <profileName> [-comment <string>] [-logAction <string>]
```

#### Example:

```
add cache policy ctx_doc_pdf -rule "HTTP.REQ.URL.ENDSWITH(\".pdf\")"-action CACHE -storeInGroup DEFAULT
```

### Bind cache policy with load balancing virtual server of type HTTP/3\_QUIC

To bind cache policy with load balancing virtual server of type HTTP/3\_QUIC, at the command prompt, type:

```

1 bind lb vserver <name>@ ((<serviceName>@ [-weight <positive_integer>]
) | <serviceGroupName>@ | (-policyName <string>@ [-priority <
 positive_integer>] [-gotoPriorityExpression <expression>] [-type (
 REQUEST | RESPONSE)] [-invoke (<labelType> <labelName>)]) |
 -analyticsProfile <string>@)

```

**Example:**

```
bind lb vserver lb-http3 -policyName ctx_doc_pdf -priority 100 -type
REQUEST
```

**Bind cache policy global to HTTP/3 global bind point**

To bind a cache policy HTTP/3 global bind point:

```

1 bind cache global <policy> -priority <positive_integer> [-
 gotoPriorityExpression <expression>] [-type <type>] [-invoke (<
 labelType> <labelName>)]

```

**Example:**

```
bind cache global ctx_doc_pdf -priority 3 -type HTTPQUIC_REQ_DEFAULT
```

For more information, see [Integrated cache policy configuration](#).

**Global built-in cache policies**

After you upgrade your appliance to NetScaler release 13.0 build 82.x, the following cache policies will be automatically bound to the HTTP/3 default bind point.

On upgrade to the 13.0 82.x release, the following cache policies are automatically bound to the HTTP/3 default bind point.

```

1 > sho cache global -type HTTPQUIC_REQ_DEFAULT
2 1) Policy Name: NOPOLICY
3 Priority: 185883
4 GotoPriorityExpression: USE_INVOCATION_RESULT
5 Invoke type: policylabel Invoke name:
 _httpquicReqBuiltinDefaults
6 Global bindpoint: HTTPQUIC_REQ_DEFAULT
7
8 Done
9 > sho cache global -type HTTPQUIC_RES_DEFAULT
10 1) Policy Name: NOPOLICY
11 Priority: 185883
12 GotoPriorityExpression: USE_INVOCATION_RESULT
13 Invoke type: policylabel Invoke name:
 _httpquicResBuiltinDefaults

```

## 14 Global bindpoint: HTTPQUIC\_RES\_DEFAULT

After an upgrade, if the policies are not bound, you can use the following commands to manually bind and save the configuration.

```
1 add cache policylabel _httpquicReqBuiltinDefaults -evaluates
 HTTPQUIC_REQ
2
3 add cache policylabel _httpquicResBuiltinDefaults -evaluates
 HTTPQUIC_RES
4
5 bind cache policylabel _httpquicReqBuiltinDefaults -policyName
 _nonGetReq -priority 100
6
7 bind cache policylabel _httpquicReqBuiltinDefaults -policyName
 _advancedConditionalReq -priority 200
8
9 bind cache policylabel _httpquicReqBuiltinDefaults -policyName
 _personalizedReq -priority 300
10
11 bind cache policylabel _httpquicResBuiltinDefaults -policyName
 _uncacheableStatusRes -priority 100
12
13 bind cache policylabel _httpquicResBuiltinDefaults -policyName
 _uncacheableVaryRes -priority 200
14
15 bind cache policylabel _httpquicResBuiltinDefaults -policyName
 _uncacheableCacheControlRes -priority 300
16
17 bind cache policylabel _httpquicResBuiltinDefaults -policyName
 _cacheableCacheControlRes -priority 400
18
19 bind cache policylabel _httpquicResBuiltinDefaults -policyName
 _uncacheablePragmaRes -priority 500
20
21 bind cache policylabel _httpquicResBuiltinDefaults -policyName
 _cacheableExpiryRes -priority 600
22
23 bind cache policylabel _httpquicResBuiltinDefaults -policyName
 _imageRes -priority 700
24
25 bind cache policylabel _httpquicResBuiltinDefaults -policyName
 _personalizedRes -priority 800
26
27 bind cache global NOPOLICY -priority 185883 -gotoPriorityExpression
 USE_INVOCATION_RESULT -type HTTPQUIC_REQ_DEFAULT -invoke policylabel
 _httpquicReqBuiltinDefaults
28
29 bind cache global NOPOLICY -priority 185883 -gotoPriorityExpression
 USE_INVOCATION_RESULT -type HTTPQUIC_RES_DEFAULT -invoke policylabel
 _httpquicResBuiltinDefaults
```

**Note:**

The first two commands in the list of commands, and the last two commands in the same list, are included for the sake of completeness. You might encounter an error when running the four commands, since the commands are already run at the time of appliance restart. But you can ignore these errors.

**URL Transformation policy configuration for HTTP/3 traffic**

The URL transformation modifies all URLs in designated requests from an external version seen by outside users to an internal URL seen only by your Web servers and administrators. You can redirect user requests seamlessly, without exposing your network structure to users. You can also modify complex internal URLs that users might find difficult to remember into simpler, more easily remembered external URLs.

HTTP over QUIC type virtual servers have cache policy support. However, as QUIC uses UDP as its transport mechanism, TCP based expressions are excluded and UDP based expressions are included. New or existing policy configurations with TCP expressions cannot be bound to HTTP/3 virtual servers or to the newly added HTTP/3 global bind points. Instead of TCP expressions, UDP expressions can be included in the policy configurations that are bound to HTTP/3 QUIC virtual servers or HTTP over QUIC bind points.

**Add URL Transform profile**

To add a URL transformation profile, at the command prompt, type:

```
1 add transform profile <name> [-type URL]
```

**Example:**

```
add transform profile msapps
```

**Add URL Transform action**

To add URL transformation action, at the command prompt, type:

```
1 add transform action <name> <profileName> <priority> [-state (ENABLED
| DISABLED)]
```

**Example:**

```
add transform action docx2doc msapps 2
```

### Add URL Transform action

To add URL transform action to replace URL, at the command prompt, type:

```
1 add transform action <name> <profileName> <priority> [-state (ENABLED
 | DISABLED)]
```

#### Example:

```
add transform action docx2doc msapps 1
```

### Add URL Transform policy

To add a URL transformation policy, at the command prompt, type:

```
1 add transform policy <name> <rule> <profileName> [-comment <string>]
 [-logAction <string>]
```

#### Example:

```
add transform policy urltrans_udp "CLIENT.UDP.DSTPORT.EQ(443)"msapps
```

### Bind URL Transform policy with load balancing virtual server of type HTTP/3\_QUIC

To bind URL transformation policy with load balancing virtual server of type HTTP/3\_QUIC, at the command prompt, type:

```
1 bind lb vserver <name>@ ((<serviceName>@ [-weight <positive_integer>]
) | <serviceGroupName>@ | (-policyName <string>@ [-priority <
 positive_integer>] [-gotoPriorityExpression <expression>] [-type (
 REQUEST | RESPONSE)] [-invoke (<labelType> <labelName>)]) |
 -analyticsProfile <string>@)
```

#### Example:

```
bind lb vs lb-http3 -policyName urltrans_udp -type REQUEST -priority
8
```

### Bind URL transform policy global with HTTP/3 QUIC based load balancing virtual server

To bind a URL transform policy HTTP/3 global bind point, at the command prompt, type:

```
1 bind transform global <policyName> <priority> [<gotoPriorityExpression
 >] [-type <type>] [-invoke (<labelType> <labelName>)]
```



**Example:**

```
bind transform global urltrans_udp 100 -type HTTPQUIC_REQ_DEFAULT
```

For more information, see [URL transformation policy configuration](#).

**Front end optimization (FEO) policy configuration for HTTP/3 traffic**

The HTTP protocols that underlie web applications were originally developed to support the transmission and rendering of simple webpages. New technologies such as JavaScript and cascading style sheets (CSS), and new media types such as Flash videos and graphics-rich images, place heavy demands on front-end performance, that is, on performance at the browser level. The NetScaler front end optimization (FEO) feature addresses such issues and reduces the load time and render time of webpages.

**Note:**

HTTP\_QUIC \_Override/Default\_Request Type is not supported for FEO policy global binding.

**Add Front end optimization (FEO) action**

To add a FEO action, at the command prompt, type:

```
1 add feo action <name> [-pageExtendCache] [<cacheMaxage>][-
imgShrinkToAttrib] [-imgGifToPng] [-imgToWebp] [-imgToJpegXR] [-
imgInline] [-cssImgInline] [-jpgOptimize] [-imgLazyLoad] [-cssMinify
] [-cssInline] [-cssCombine] [-convertImportToLink] [-jsMinify] [-
jsInline] [-htmlMinify] [-cssMoveToHead] [-jsMoveToEND][-
domainSharding <string> <dnsShards> ...] [-clientSideMeasurements]
```

**Example:**

```
add feo action feoact -imgGifToPng -pageExtendCache
```

**Add Front end optimization (FEO) policy**

To add a FEO policy, at the command prompt, type:

```
add feo policy <name> <rule> <action>
```

**Example:**

```
add feo policy udp_feo_img "CLIENT.UDP.DSTPORT.EQ(443)"IMG_OPTIMIZE
```

## Bind FEO policy with load balancing virtual server of type HTTP/3\_QUIC

To bind FEO policy with load balancing virtual server of type HTTP/3\_QUIC, at the command prompt, type:

```
1 bind lb vserver <name>@ ((<serviceName>@ [-weight <positive_integer>]
) | <serviceGroupName>@ | (-policyName <string>@ [-
 priority <positive_integer>] [-gotoPriorityExpression <expression>]
 [-type <type>] [-invoke (<labelType> <labelName>)]) | -
 analyticsProfile <string>@)
```

### Example:

```
bind lb vserver lb-http3 -policyName udp_feo_img -priority 4 -gotoPriorityExpr
END -type REQUEST
```

## Bind FEO policy to HTTP/3 global bind point

To bind a cache policy to the HTTP/3 global bind point, at the command prompt, type:

```
1 bind cache global <policy> -priority <positive_integer> [-
 gotoPriorityExpression <expression>] [-type <type>] [-invoke (<
 labelType> <labelName>)]]
```

### Example:

```
bind cache global ctx_doc_pdf -priority 3 -type HTTPQUIC_REQ_DEFAULT
```

For more information, see [Front end optimization policy configuration](#).

## SSL Policy configuration for HTTP/3 traffic

HTTP over QUIC type virtual servers have SSL policy support. However, as QUIC uses UDP as its transport mechanism, TCP based expressions are excluded and UDP based expressions are included.

New or existing policy configurations with TCP expressions cannot be bound to HTTP/3 virtual servers or to the newly added HTTP/3 global bind points. Instead of TCP expressions, UDP expressions can be included in the policy configurations that are bound to HTTP/3 QUIC virtual servers or HTTP over QUIC bind points.

SSL policies with actions that are supported for TLSv1.3 are only applicable for HTTP/3 bind points or virtual servers.

### Add SSL Policy

To add a FEO policy, at the command prompt, type:

```
1 add ssl policy <name> -rule <expression> [-action <string>] [-
 undefAction <string>] [-comment <string>]
```

**Example:**

```
add ssl policy ssl-pol -rule CLIENT.SSL.IS_SSL -action NOOP
```

**Bind SSL Policy to HTTP/3 virtual server**

To bind an SSL policy to the HTTP/3 virtual server, at the command prompt:

```
1 bind ssl policylabel <labelName> <policyName> <priority> [<
 gotoPriorityExpression>] [-invoke (<labelType> <labelName>)]
```

**Example:**

```
bind ssl vserver lb-http3 -policyName ssl-pol -priority 4 -type
REQUEST
```

**Add SSL policy with UDP expression for SSL Policy**

To add an SSL policy with UDP expression, at the command prompt:

```
1 add ssl policy <name> -rule <expression> [-action <string>] [-
 undefAction <string>] [-comment <string>]
```

**Example:**

```
add ssl policy ssl_udp_clnt -rule "CLIENT.UDP.DSTPORT.EQ(443)"-action
NOOP
```

**Bind SSL Policy with UDP expression to HTTP/3 virtual server**

To bind an SSL policy with UDP expression to the HTTP/3 virtual server, at the command prompt,  
type

```
1 bind ssl policylabel <labelName> <policyName> <priority> [<
 gotoPriorityExpression>] [-invoke (<labelType> <labelName>)]
```

**Example:**

```
bind ssl vs lb-http3 -policyName ssl_udp_clnt -priority 8 -type
REQUEST
```

### Add SSL policy for CLIENTHELLO bind point for HTTP/3 traffic

To bind SSL policy for CLIENTHELLO bind point for HTTP/3 traffic, at the command prompt, type:

```
1 bind ssl polycylabel <labelName> <policyName> <priority> [<gotoPriorityExpression>] [-invoke (<labelType> <labelName>)]
```

#### Example:

```
add ssl policy ssl-pol-ch -rule "CLIENT.SSL.CLIENT_HELLO.CIPHERS.HAS_HEXCODE(0x1301)"-action RESET
```

### Bind SSL policy to CLIENTHELLO bind point

To bind an SSL policy to the CLIENTHELLO bind point, at the command prompt, type:

```
1 bind ssl polycylabel <labelName> <policyName> <priority> [<gotoPriorityExpression>] [-invoke (<labelType> <labelName>)]
```

#### Example:

```
bind ssl vs lb-http3 -policyName ssl-pol-ch -type CLIENTHELLO_REQ -priority 100
```

### Bind SSL policy to HTTP/3 global bind point

To bind an SSL policy to the HTTP/3 global bind point, at the command prompt, type:

```
bind cache global <policy> -priority <positive_integer> [-gotoPriorityExpression <expression>] [-type <type>] [-invoke (<labelType> <labelName>)]
```

#### Example:

Following is an example of a DATA policy being bound to a HTTP/3 global bind point:

```
Bind ssl global -policyName ssl-pol-ch -priority 7 -type HTTPQUIC_DATA_DEFAULT
```

#### Note:

Forward action that can be set for CLIENTHELLO bind point for SSL virtual servers is currently not supported for HTTP\_QUIC type virtual servers.

### Application Firewall Policy configuration for HTTP/3 traffic

HTTP over QUIC type virtual servers have web application firewall policy support. However, as QUIC uses UDP as its transport mechanism, TCP based expressions are excluded and UDP based expres-

sions are included.

New or existing policy configurations with TCP expressions cannot be bound to HTTP/3 virtual servers or to the newly added HTTP/3 global bind points. Instead of TCP expressions, UDP expressions can be included in the policy configurations that are bound to HTTP/3 QUIC virtual servers or HTTP over QUIC bind points.

### Add Web Application Firewall policy with UDP expression

To add Web Application Firewall policy with UDP expression, at the command prompt:

```
1 add appfw policy <name> <rule> <profileName> [-comment <string>] [-logAction <string>]
```

#### Example:

```
add appfw policy appfw_udp "CLIENT.UDP.DSTPORT.EQ(443)"APPFW_BYPASS
```

### Bind log expressions with UDP based expression for Web Application Firewall profile

To bind log expressions with UDP for Web Application Firewall profile, at the command prompt:

#### Example:

```
bind appfw profile APPFW_BLOCK -logExpression logexp-1 "CLIENT.UDP.DSTPORT.EQ(443)"
```

### Bind Application Firewall policy with HTTP/3 virtual server

To bind Web Application Firewall policy with HTTP/3 virtual server, at the command prompt:

```
1 bind appfw polycylabel <labelName> <policyName> <priority> [<gotoPriorityExpression>] [-invoke (<labelType> <labelName>)]
```

#### Example:

```
bind lb vs lb-http3 -policyName appfw_udp -priority 3 -type REQUEST
```

### Bind Web Application Firewall policy to HTTP/3 global bind point

To bind a Web Application Firewall policy to the HTTP/3 global bind point, at the command prompt, type:

```
1 bind appfw global <policy> -priority <positive_integer> [-gotoPriorityExpression <expression>] [-type <type>] [-invoke (<labelType> <labelName>)]
```

**Example:**

```
bind appfw global appfw_udp 100 -type HTTPQUIC_REQ_DEFAULT
```

**AppQoE Policy configuration for HTTP/3 traffic**

HTTP over QUIC type virtual servers have AppQoE policy support. However, as QUIC uses UDP as its transport mechanism, TCP based expressions are excluded and UDP based expressions are included. New or existing policy configurations with TCP expressions cannot be bound to HTTP/3 virtual servers or to the newly added HTTP/3 global bind points. Instead of TCP expressions, UDP expressions can be included in the policy configurations that are bound to HTTP/3 QUIC virtual servers or HTTP over QUIC bind points.

**Add AppQoE policy with UDP based expression**

To add AppQoE policy with UDP expression, at the command prompt:

```
1 add AppQoE policy <name> <rule> <profileName> [-comment <string>] [-logAction <string>]
```

**Example:**

```
add appqoe policy appqoe-pol-udp -rule "CLIENT.UDP.DSTPORT.EQ(443)"-action appqoe-act-basic-prhigh
```

**Bind AppQoE policy with HTTP/3 virtual server**

To bind the AppQoE policy with the HTTP/3 virtual server, at the command prompt, type:

```
1 bind appqoe policylabel <labelName> <policyName> <priority> [<gotoPriorityExpression>] [-invoke (<labelType> <labelName>)]
```

**Example:**

```
bind lb vs lb-http3 -policyName appqoe-pol-udp -type REQUEST -priority 3
```

**Bind AppQoE policy to HTTP\_QUIC virtual server**

To bind AppQoE policy to HTTP\_QUIC virtual server, at the command prompt, type:

```
1 bind appqoe <policy> -priority <positive_integer> [-gotoPriorityExpression <expression>] [-type <type>] [-invoke (<labelType> <labelName>)]
```

**Example:**

```
bind lb vs lb-http3 -policyName appqoe-pol-primd -priority 8 -type
REQUEST
```

## HTTP/3 service discovery

May 2, 2023

HTTP protocol relies on using HTTP Alternative Services for origin server to advertise the availability of an equivalent service. HTTP/3 service discovery also uses the same principle. An alternative HTTP/3 endpoint can be advertised using any one of the following methods:

- HTTP Alt-Svc response header
- HTTP/2 Alt-Svc Frame in the response
- Application Layer Protocol Negotiation (ALPN)

The alternative service advertises the usage of an HTTP Alt-Svc response header and the HTTP/2 Alt-Svc frame as HTTP/3 endpoint. Servers may serve HTTP/3 on any UDP port. An alternative service advertisement includes an explicit port, and URLs contain either an explicit port or a default port associated with the scheme.

Clients receiving alternate service headers or frames are not bound to use them. The client, if made aware of an alternate service and if it supports the alternate service mechanism should use the appropriate alternate service advertised. In other words, a HTTP/1.1 service or a HTTP/2 service may advertise an equivalent endpoint that supports HTTP/3 protocol. The client on receiving this alternate service information can choose to establish a QUIC connection with the specified alternate service and once available, this connection can be used for any subsequent requests. If the establishment of the connection with the selected alternate service fails, the client can fall back to the original endpoint. When the client starts using the alternate service advertised, will indicate this by including a Alt-Used header.

NetScaler supports advertising equivalent HTTP/3 endpoints on HTTP and SSL type virtual servers.

### Configure HTTP/3 service discovery

Complete the following steps to configure HTTP/3 service discovery:

1. Configure HTTP/3 alternative service endpoint by using an HTTP Alt-Svc Header
  2. Configure HTTP/3 alternative service endpoint by using an HTTP/2 Alt-Svc frame
- Configure HTTP/3 alternative service endpoint by using an HTTP Alt-Svc Header  
To advertise an HTTP/3 endpoint by using a HTTP Alt-Svc Header, type the following command:

Note: The main purpose of advertising alternative service is to let user know that HTTP/3 capability can be accessed on HTTP/1.1 or HTTP/2 service on a.b.c.d:443 also.

```
1 add ns httpProfile <name> -custom -altsvc [ENABLED | DISABLED]
```

**Example:**

```
1 add ns httpProfile http-profile -altsvc ENABLED -altSvcValue "h3-29=\":443\"; ma=3600; persist=1"
```

or

```
1 set ns httpProfile http-custom -altsvc ENABLED -altSvcValue "h3-29=\":443\"; ma=3600; persist=1"
```

**Configure HTTP/3 alternative service endpoint by using an HTTP/2 Alt-Svc frame**

To advertise an HTTP/3 endpoint by using a HTTP/2 Alt-svc frame, type the following command:

```
1 add ns httpProfile <name> -custom -altsvc [ENABLED | DISABLED] -http2AltSvcFrame [ENABLED | DISABLED]
```

**Example:**

```
add ns httpProfile http-custom -http2 ENABLED -http2Direct ENABLED -http2AltSvcFrame ENABLED -altsvc ENABLED -altSvcValue "h3-29=\":443\"; ma=3600; persist=1"
```

or

```
set ns httpProfile http-custom -http2 ENABLED -http2Direct ENABLED -http2AltSvcFrame ENABLED -altsvc ENABLED -altSvcValue "h3-29=\":443\"; ma=3600; persist=1"
```

**Configure HTTP/3 alternative service with HTTP Alt-Svc header value by using GUI**

1. Navigate to **System > Profiles > HTTP Profiles**.
2. Click **Add**.
3. In **Create HTTP Profile** page, go to HTTP/3 section and select **Alternative Service** checkbox.
4. The system displays the **Alternative Service Value** text box in the http2 section.
5. Enter the alternative service value as “h3-29=:443”; ma=3600; persist=1”
6. Click **OK** and **Close**.



**HTTP/2**

HTTP/2

Direct HTTP/2

Alternative Service

Alternative Service Value

h3-29=":443"; ma=3600; persist=1

## gRPC

May 2, 2023

gRPC in a NetScaler appliance is a lightweight, high performance, and open-source universal Remote Procedure Call (RPC) framework. The framework is optimal to work across multiple languages running on any operation system. Also when compared to other protocols, gRPC offers better performance and security.

gRPC for NetScaler is preferred for the following reasons:

- Build distributed applications for data-center and public/private cloud infrastructure.
- Provide client-server communication for mobile, web, or cloud.
- Access cloud services and applications
- Microservice deployments

### Why gRPC in NetScaler

gRPC in NetScaler is implemented over HTTP/2 to support highly performance and scalable APIs. The use of binary than text keeps the payload compact and efficient. In NetScaler, the HTTP/2 requests are multiplexed over a single TCP connection, allowing multiple concurrent messages to be in flight without compromising the network resource usage. It also uses header compression to reduce the size of requests and responses.

gRPC supports the following types of service methods for a client to remotely invoke parameters and return types.

1. **Unary RPC.** Client sends a single request to the gRPC server and gets a single response back.

**Example:**

```
rpc SayHello(HelloRequest) returns (HelloResponse);
```

2. **Server streaming RPC.** Client sends a single request to the gRPC server and gets a stream response.

**Example:**

```
rpc StreamingResponse(HelloRequest) returns (HelloResponse);
```

3. **Client streaming RPC.** Client sends a sequence of messages and waits for the server to read and return its response.

**Example:**

```
rpc IntroduceYourself(stream HelloRequest) returns (HelloResponse)
```

4. **Bidirectional streaming RPC.** Both client and server from both sides send a stream of messages using the read-write stream. The two streams operate independently.

**Example:**

```
rpc ChatSession (stream HelloRequest) returns (stream HelloResponse)
```

NetScaler supports the following capabilities for its services with gRPC endpoints:

- Load balancing
- Content switching
- Secure end-point services like Web Application Firewall, authentication .
- Policy configuration
- Stats and logging
- Content rewriting, content filtering
- Layer 4 and Layer 7 optimizations, TLS offering
- Gateway solutions for protocol translations

## gRPC end-to-end configuration

December 29, 2023

The gRPC end-to-end configuration works by sending a gRPC request from a client over HTTP/2 protocol and again forwarding gRPC messages responded by the gRPC server.

### How end-to-end gRPC configuration works

The following diagram shows a gRPC configuration works in a NetScaler appliance.



1. To deploy the gRPC configuration, you must first enable HTTP/2 in the HTTP profile and also enable HTTP/2 support globally on server side.
2. When a client sends a gRPC request, the load balancing virtual server evaluates the gRPC traffic using policies.
3. Based on policy evaluation, the load balancing virtual server (with gRPC service bound to it) terminates the request and forwards it as a gRPC request to the back-end gRPC server.
4. Similarly, when the gRPC server responds to the client, the appliance terminates the response and forwards it as a gRPC response to the client.

### Example for gRPC request sent to gRPC server

The request header is sent as HTTP/2 headers in HEADERS+CONTINUATION Frames.

```

1 ``
2 HEADERS (flags = END_HEADERS)
3 : method = POST
4 : scheme = http
5 : path = /helloworld.citrix-adc/SayHello
6 : authority = 10.10.10.10.:80
7 grpc-timeout = 15
8 content-type = application/grpc+proto
9 grpc-encoding = gzip
10 DATA (flags = END_STREAM)
11 <Length-Prefixed Message>
12 ``

```

### Example for gRPC response header from gRPC server to NetScaler appliance

Response-Headers & Trailers-Only are delivered in a single HTTP/2 HEADERS frame block. Most responses are expected to have both headers and trailers but Trailers-Only is permitted for calls that produce an immediate error. Status must be sent in Trailers even if the HTTP status code is OK.

```

1 ``

```

```
2 HEADERS (flags = END_HEADERS)
3 : status = 200
4 Grpc-encoding= gzip
5 Content-type = application/grpc+proto
6 DATA
7 <Length-Prefixed Message>
8 HEADERS (flags = END_STREAM, END_HEADERS)
9 grpc-status = 0 # OK
10
11 ` ` `
```

## Configure gRPC by using the CLI

To configure an end-to-end gRPC deployment, you must complete the following:

- Add HTTP profile with HTTP/2 and HTTP/2 direct enabled.
- Enable global back end HTTP/2 support in HTTP parameter
- Add load balancing virtual server of type SSL/HTTP and set HTTP profile
- Add Service for gRPC endpoint and set HTTP profile
- Bind gRPC end point service to load balancing virtual server

### Add HTTP profile with HTTP/2 and HTTP/2 direct enabled

You must enable HTTP/2 and HTTP/2 direct parameters in the HTTP profile. Also, you must enable the HTTP/2 direct parameter if gRPC over HTTP/2 cleartext is required.

At the command prompt, type:

```
add ns httpProfile <name> - http2 (ENABLED | DISABLED)[-http2Direct
(ENABLED | DISABLED)]
```

#### Example:

```
add ns httpProfile http2gRPC -http2Direct ENABLED -http2 ENABLED
```

### Enable global back-end HTTP/2 support through HTTP parameter

To enable HTTP/2 support globally on the server side by using the NetScaler command line.

At the command prompt, type:

```
set ns httpParam -http2ServerSide(ON | OFF)
```

#### Example:

```
set ns httpParam -http2ServerSide ON
```

### Add load balancing virtual server of type SSL/HTTP and set HTTP profile

To add a load balancing virtual server by using the **NetScaler** command interface:

At the command prompt, type:

```
add lb vserver <name> <service type> [(<IP address>@ <port>)] [-
httpProfileName <string>]
```

#### Example:

```
add lb vserver lb-grpc HTTP 10.10.10.11 80 -httpProfileName http2gRPC
```

#### Note:

If you are using a load balancing virtual server of type SSL, then you must bind the server certificate. See Bind server certificate topic for more information.

### Add Service for gRPC endpoint and set HTTP profile

To add a gRPC service with HTTP profile by using the **NetScaler** command interface:

At the command prompt, type:

```
add service <name> (<IP> | <serverName>)<serviceType> <port> [-
httpProfileName <string>]
```

#### Example:

```
add service svc-grpc 10.10.10.10 HTTP 80 -httpProfileName http2gRPC
```

### Bind gRPC end point service to load balancing virtual server

To bind a gRPC service to load balancing virtual server by using the **NetScaler** command interface:

At the command interface, type:

```
bind lb vserver <name> <serviceName>
```

#### Example:

```
bind lb vserver lb-grpc svc-grpc
```

### Configure end-to-end gRPC deployment by using the GUI

Complete the following steps to configure gRPC by using the GUI.

### **Add HTTP profile with HTTP/2 and HTTP/2 direct enabled**

1. Navigate to **System > Profiles** and click **HTTP Profiles**.
2. Select the **HTTP/2** checkbox in a new HTTP profile or existing HTTP profile.

### **Enable global back end HTTP/2 support in HTTP parameter**

1. Navigate to **System > Settings > HTTP Parameters**.
2. In the **Configure HTTP Parameter** page, select the **HTTP/2 on Server Side** checkbox.
3. Click **OK**.

### **Add load balancing virtual server of type SSL/HTTP and set HTTP profile**

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Click Add to create a load balancing virtual server for gRPC traffic.
3. In Load Balancing Virtual Server page, click Profiles.
4. In the Profiles section, select the profile type as HTTP.
5. Click OK and then Done.

### **Add Service for gRPC endpoint and set HTTP profile**

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Click Add to create an application server for gRPC traffic.
3. In Load Balancing Service page, go to Profile section.
4. Under Profiles, add HTTP profile for gRPC endpoint.
5. Click OK and then Done.

For detailed GUI procedures related to loading balancing, see [Load Balancing](#) topic.

## **gRPC bridging**

December 29, 2023

When a client sends a request over HTTP/1.1 protocol, the NetScaler appliance supports bridging of the gRPC requests over HTTP/1.1 protocol which is in compliance with the gRPC server over HTTP/2 protocol. Similarly, in reverse bridging, the appliance receives the client gRPC request over the HTTP/2 protocol and performs reverse bridging for the gRPC requests in compliance with the gRPC server of the HTTP/1.1 protocol.

## How gRPC bridging works

In this scenario, the NetScaler appliance seamlessly bridges gRPC content received on an HTTP/1.1 connection and forwards it to the back-end gRPC server over HTTP/2.



The following diagram shows how components interact with each other in a gRPC bridging configuration.

1. When a gRPC request is sent, the NetScaler appliance checks if the connection is HTTP/1.1 and the content type is application/grpc. The HTTP/1.1 requests translate to the following pseudo headers.
2. On receiving a gRPC request on HTTP/1.1. connection as indicated by the Content-Type header, the ADC appliance transforms the request into gRPC over HTTP/2 as given below:

```

1 :method: Method-name in HTTP/1.1 request
2 :path: Path in HTTP/1.1 request
3 content-type: application/grpc

```

1. Based on policy evaluation, the load balancing virtual server (with the gRPC service bound to it) terminates the request or forwards it over HTTP/2 frames to the back-end gRPC server.
2. On receiving the response on a HTTP/2 connection from the gRPC server, the appliance buffers until it receives the HTTP/2 trailer and then checks for the gRPC-status code. If it is non-zero gRPC error status, the appliance looks for the mapping HTTP Status code and send a suitable HTTP/1.1 error response.

## Configure gRPC bridging by using the CLI

To configure gRPC bridging, you must complete the following steps:

1. Add HTTP profile with HTTP/2 and HTTP/2 direct enabled
2. Enable global back-end HTTP/2 support in the HTTP parameter
3. Add load balancing virtual server of type SSL/HTTP and set the HTTP profile
4. Add Service for gRPC endpoint and set the HTTP profile
5. Bind gRPC end point service to load balancing virtual server

6. Map gRPC status code to the HTTP response for non-zero gRPC status
7. Configure gRPC buffering by time and/or size

### **Add HTTP profile with the HTTP/2 and HTTP/2 direct enabled**

To begin the configuration, you must enable the HTTP/2 feature in the HTTP profile. If the client sends the HTTP 1.1 requests, the appliance bridges the request and forward it to the back-end server.

At the command prompt, type:

```
add ns httpProfile <name> - http2 (ENABLED | DISABLED)[-http2Direct
(ENABLED | DISABLED)]
```

#### **Example:**

```
add ns httpProfile http2gRPC -http2Direct ENABLED -http2 ENABLED
```

### **Enable global back end HTTP/2 support in the HTTP parameter**

To enable the HTTP/2 support globally on the server side by using the NetScaler command line.

At the command prompt, type:

```
set ns httpParam -http2ServerSide(ON | OFF)
```

#### **Example:**

```
set ns httpParam -http2ServerSide ON
```

### **Add load balancing virtual server of type SSL/HTTP and set the HTTP profile**

To add a load balancing virtual server by using the **NetScaler** command interface

At the command prompt, type:

```
add lb vsrver <name> <service type> [(<IP address>@ <port>)] [-
httpProfileName <string>]
```

#### **Example:**

```
add lb vsrver lb-grpc HTTP 10.10.10.10 80 -httpProfileName http2gRPC
```

#### **Note:**

If you are using a load balancing virtual server of type SSL, then you must bind the server certificate. See [Bind server certificate](#) topic for more information.



### Add Service for gRPC endpoint and set the HTTP profile

To add a gRPC service with the HTTP profile by using the **NetScaler** command interface.

At the command prompt, type:

```
add service <name> (<IP> | <serverName>)<serviceType> <port> [-
httpProfileName <string>]
```

#### Example:

```
add service svc-grpc 10.10.10.10 HTTP 80 -httpProfileName http2gRPC
```

### Bind gRPC end point service to load balancing virtual server

To bind a gRPC end point service to the load balancing virtual server by using the CLI.

At the command interface, type:

```
bind lb vserver <name> <serviceName>
```

#### Example:

```
bind lb vserver lb-grpc svc-grpc
```

### Map gRPC status code to HTTP status-code in the HTTP/1.1 response

In gRPC bridging scenario, the gRPC service responds to the request with a gRPC status-code. The appliance maps the gRPC status code to a corresponding HTTP response code and reason phrase. The mapping is done based on the table provided below. The NetScaler appliance when sending the HTTP/1.1 response to the client sends the HTTP status code and the reason phrase.

---

| <b>gRPC status-code</b> | <b>HTTP response status-code</b> | <b>HTTP response reason-phrase</b> |
|-------------------------|----------------------------------|------------------------------------|
| OK = 0                  | 200                              | OK                                 |
| CANCELLED = 1           | 499                              | *                                  |
| UNKNOWN = 2             | 500                              | Internal Server Error              |
| INVALID_ARGUMENT = 3    | 400                              | Bad Request                        |
| DEADLINE_EXCEEDED = 4   | 504                              | Gateway Timeout                    |
| NOT_FOUND = 5           | 404                              | *                                  |
| ALREADY_EXISTS = 6      | 409                              | Conflict                           |
| PERMISSION_DENIED = 7   | 403                              | Forbidden                          |

| <b>gRPC status-code</b> | <b>HTTP response status-code</b> | <b>HTTP response reason-phrase</b> |
|-------------------------|----------------------------------|------------------------------------|
| UNAUTHENTICATED = 16    | 401                              | Unauthorized                       |
| RESOURCE_EXHAUSTED = 8  | 429                              | *                                  |
| FAILED_PRECONDITION = 9 | 400                              | Bad Request                        |
| ABORTED = 10            | 409                              | Conflict                           |
| OUT_OF_RANGE = 11       | 400                              | Bad Request                        |
| UNIMPLEMENTED = 12      | 501                              | Not Implemented                    |
| INTERNAL = 13           | 500                              | Internal Server Error              |
| UNAVAILABLE = 14        | 503                              | Service Unavailable                |
| DATA_LOSS = 15          | 500                              | Internal Server Error              |

### Configure gRPC buffering by time and/or size

The NetScaler appliance buffers the gRPC response from the back-end server until the response trailer is received. This breaks bi-directional gRPC calls. Also, if the gRPC response is huge, it consumes a significant amount of memory to buffer the response completely. To resolve the issue, the gRPC bridging configuration is enhanced to limit buffering by time and/or size. If the buffer size or time limit exceeds threshold, the appliance stops buffering and forwards the response to the client even when any one of the limitations triggers (either the trailer is not received within the configured buffer size or if the configured timeout occurs). As a result, the configured policies and its expressions (based on gRPC-status code) do not work as expected.

To limit gRPC buffering by time and/or size by the CLI, you can configure when you add a new HTTP profile or configure when you modify an existing profile.

At the command prompt, type:

```
add ns httpProfile http2gRPC [-grpcHoldLimit <positive_integer>] [-
grpcHoldTimeout <positive_integer>]
```

Or

```
set ns httpProfile http2gRPC [-grpcHoldLimit <positive_integer>] [-
grpcHoldTimeout <positive_integer>]
```

Where,

**grpcHoldLimit**. Maximum size in bytes allowed to buffer gRPC packets until trailer is received. You can configure both the parameters and any one.

Default value: 131072

Minimum value: 0

Maximum value: 33554432

`grpchoholdtimeout`. Maximum time in milliseconds allowed to buffer gRPC packets until trailer is received. The value should be in multiples of 100.

Default value: 1000

Minimum value: 0

Maximum value: 180000

**Example:**

```
add httpprofile http2gRPC -grpchoholdlimit 1048576 -grpchoholdtimeout
5000
set httpprofile http2gRPC -grpchoholdlimit 1048576 -grpchoholdtimeout
5000
```

## Configure gRPC bridging by using the GUI

Complete the following steps to configure gRPC bridging by using the NetScaler GUI.

### Add HTTP profile with HTTP/2 and HTTP/2 direct enabled

1. Navigate to **System > Profiles** and click **HTTP Profiles**.
2. Select **HTTP/2** in the HTTP profile.

### Enable global back-end HTTP/2 support in the HTTP parameter

1. Navigate to **System > Settings > HTTP Parameters**.
2. In the **Configure HTTP Parameter** page, select **HTTP/2 on Server Side** option.
3. Click **OK**.

### Add load balancing virtual server of type SSL/HTTP and set HTTP profile

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Click **Add** to create a load balancing virtual server for gRPC traffic.
3. In **Load Balancing Virtual Server** page, click **Profiles**.
4. In the **Profiles** section, select the profile type as HTTP.
5. Click **OK** and then **Done**.

### **Add Service for gRPC endpoint and set HTTP profile**


1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Click **Add** to create an application server for gRPC traffic.
3. In **Load Balancing Service** page, go to **Profile** section.
4. Under **Profiles**, add **HTTP profile** for gRPC endpoint.
5. Click **OK** and then **Done**.

### **Bind Service for gRPC endpoint to load balancing virtual server**

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Click **Add** to create a load balancing virtual server for gRPC traffic.
3. In **Load Balancing Virtual Server** page, click **Service and Service Groups** section.
4. In the **Load Balancing Virtual Server Service Binding** page, select the gRPC service to bind.
5. Click **Close** and then **Done**.

### **Configure gRPC buffering by time and size by using the GUI**

1. Navigate to **System > Profiles** and click **HTTP Profiles**.
2. Select **HTTP/2** in the HTTP profile.
3. In the **Configure HTTP Profile** page, set the following parameters:
  - a) `grpcHoldTimeout`. Enter the time in milliseconds to buffer gRPC packets until the trailer is received.
  - b) `grpcHoldLimit`. Enter the maximum size in bytes to buffer gRPC packets until the trailer is received.
4. Click **OK** and **Close**.

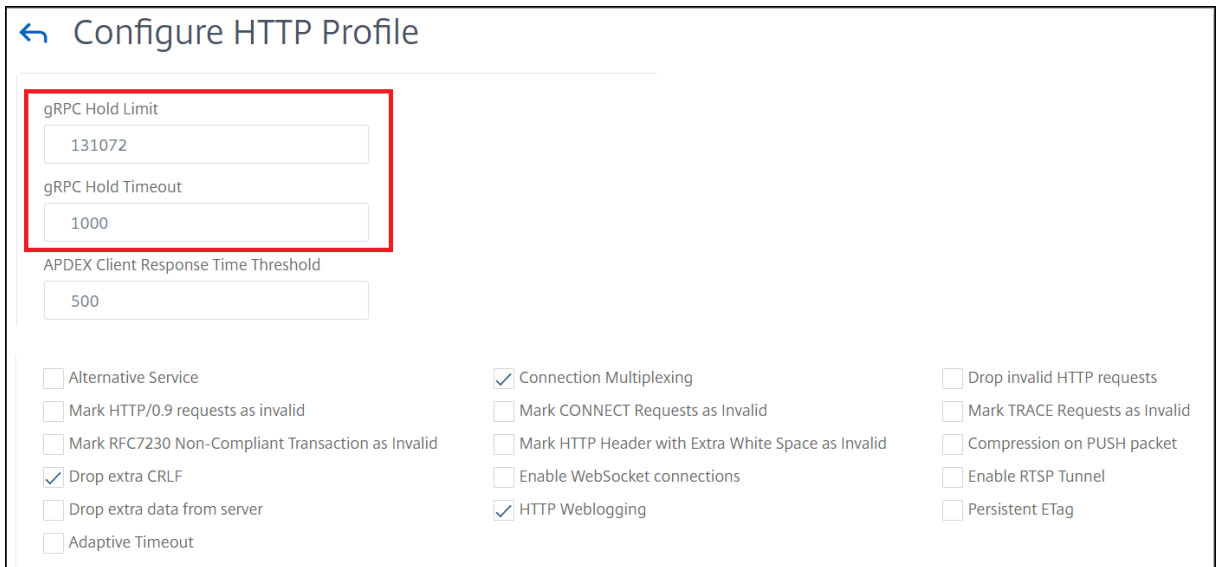

For detail GUI procedures for binding service and load balancing virtual servers, see [Load Balancing](#) topic.

## gRPC reverse bridging

December 29, 2023

In this scenario, the NetScaler appliance seamlessly bridges gRPC content received on an HTTP/2 connection and forwards it to the back-end gRPC server over HTTP/1.1.

### How reverse bridging works

The following diagram shows how components interact with each other in a gRPC bridging configuration.



1. Client sends a gRPC request on HTTP/2 connection with gRPC headers in HTTP/2 frames and proto-buf payload.

2. Based on policy evaluation, the load balancing virtual server (with gRPC service bound to it) translates and forwards the request over HTTP/1.1 connection to backend server.
3. On receiving the HTTP/1.1 response, if there is no grpc-status code in the response, ADC derives a grpc status-case from the HTTP response code.
4. The appliance then inserts the gRPC headers into HTTP/2 trailer before forwarding the response to the client.

## Configure gRPC reverse bridging by using the CLI

To configure gRPC reverse bridging, you must complete the following steps:

- Add HTTP profile 1 with HTTP/2 and HTTP/2 direct enabled for load balancing virtual server
- Add HTTP profile 2 with HTTP/2 disabled for back-end server
- Add load balancing virtual server of type SSL/HTTP and set to HTTP profile 1
- Add service for gRPC endpoint and set to HTTP profile 2
- Bind Service for gRPC endpoint to load balancing virtual server
- Map HTTP-status code to gRPC status code if the response does not have a grpc status code

### Add HTTP profile 1 with HTTP/2 and HTTP/2 direct enabled for load balancing virtual server

To begin the reverse bridging configuration, you must add two HTTP profiles. One profile for enabling HTTP/2 for gRPC client requests and another profile for disabling HTTP/2 for non-gRPC server response.

At the command prompt, type:

```
add ns httpProfile <name> - http2 (ENABLED | DISABLED)[-http2Direct
(ENABLED | DISABLED)]
```

#### Example:

```
add ns httpProfile profile1 -http2 ENABLED -http2Direct ENABLED
```

### Add HTTP profile 2 with HTTP/2 disabled for back-end server

To disable HTTP/2 support on the HTTP profile for back-end server response by using the NetScaler command line.

At the command prompt, type:

```
add ns httpProfile <name> - http2 (ENABLED | DISABLED)[-http2Direct
(ENABLED | DISABLED)]
```

#### Example:

```
add ns httpProfile profile2 -http2 DISABLED http2Direct DISABLED
```

### Add load balancing virtual server of type SSL/HTTP and set to HTTP profile 1

To add a load balancing virtual server by using the NetScaler command interface.

At the command prompt, type:

```
add lb vserver <name> <service type> [(<IP address>@ <port>)] [-
httpProfileName <string>]
```

#### Example:

```
add lb vserver lb-grpc HTTP 10.10.10.10 80 -httpProfileName profile1
```

#### Note:

If you are using a load balancing virtual server of type SSL, then you must bind the server certificate. See Bind server certificate topic for more information.

### Add service for gRPC endpoint and set to HTTP profile 2

To add a service with gRPC endpoint and set HTTP profile 2 by using the NetScaler command interface.

At the command prompt, type:

```
add service <name> (<IP> | <serverName>)<serviceType> <port> [-
httpProfileName <string>]
```

#### Example:

```
add service svc-grpc 10.10.10.11 HTTP 80 -httpProfileName profile2
```

### Bind service for gRPC endpoint to load balancing virtual server

To bind a gRPC service to load balancing virtual server by using the NetScaler command interface.

At the command interface, type:

```
bind lb vserver <name> <serviceName>
```

#### Example:

```
bind lb vserver lb-grpc svc-grpc
```

### Map HTTP response code to gRPC status code

If the server does not generate a gRPC status code, the NetScaler appliance generates a suitable gRPC status code based on the HTTP response received. The status codes are listed in the below mapping table.

---

| HTTP Response status-code | gRPC status code      |
|---------------------------|-----------------------|
| 200                       | OK                    |
| 400                       | INTERNAL = 13         |
| 403                       | PERMISSION_DENIED = 7 |
| 401                       | UNAUTHENTICATED = 16  |
| 429, 502, 503, 504        | UNAVAILABLE = 14      |
| 404                       | UNIMPLEMENTED = 12    |

---

## Configure gRPC reverse bridging by using the GUI

### Add HTTP profile 1 with HTTP/2 and HTTP/2 direct enabled for load balancing virtual server

1. Navigate to System > Profiles and click HTTP Profiles.
2. Enable HTTP/2 option in a HTTP profile 1.

### Add HTTP profile 2 with HTTP/2 disabled for back-end server

1. Navigate to **System > Profiles** and click **HTTP Profiles**.
2. Enable **HTTP/2** option in a HTTP profile 2.
3. Click **OK**.

### Add load balancing virtual server of type SSL/HTTP and set to HTTP profile 1

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Click **Add** to create a load balancing virtual server for gRPC traffic.
3. In **Load Balancing Virtual Server** page, click **Profiles**.
4. In the **Profiles** section, select the profile type as HTTP.
5. Click **OK** and then **Done**.

### Add service with gRPC endpoint and set to HTTP profile 2

1. Navigate to **Traffic Management > Load Balancing > Services**.
2. Click **Add** to create an application server for gRPC traffic.
3. In **Load Balancing Service** page, go to **Profile** section.
4. Under **Profiles**, add **HTTP profile** for gRPC endpoint.
5. Click **OK** and then **Done**.



## Bind Service for gRPC endpoint to load balancing virtual server

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
2. Click **Add** to create a load balancing virtual server for gRPC traffic.
3. In **Load Balancing Virtual Server** page, click **Service** and **Service Groups** section.
4. In the **Load Balancing Virtual Server Service Binding** page, select the gRPC service to bind.
5. Click **Close** and then **Done**.

For detail GUI procedures, see [Load Balancing](#) topic.

## gRPC call termination

May 2, 2023

When a NetScaler appliance has policies such as rate limiting, Web App Firewall security configured and if a policy evaluates to true, the appliance can terminate the call and respond with a computable gRPC error message to the client.

## gRPC with rewrite policy

May 2, 2023

The gRPC with rewrite policy use case explains how NetScaler appliance works in rewriting some information in the gRPC requests or responses. The following diagram shows the components interact.

The following diagram shows how components interact with each other in a gRPC with rewrite policy configuration.



1. Enable rewrite feature on the appliance.
2. Configure rewrite action to modify, add, or delete gRPC headers.

3. Configure rewrite policy for determining the gRPC requests (traffic) on which an action has to be taken.
4. Bind the rewrite policy to the load balancing virtual server to examine if the traffic matches the policy expression.
5. By using a rewrite policy, you can perform the following based on gRPC status code.
  - a) Modify responses from gRPC web server.
  - b) Modify, add, or delete gRPC headers.
  - c) Modify the URL of the request to the gRPC server.

### Configure gRPC call termination with rewrite policy

To configure gRPC call termination with rewrite policy, you must complete the following steps:

1. Enable rewrite feature
2. Add rewrite policy
3. Bind rewrite policy to load balancing virtual server

#### Enable rewrite feature

To use the rewrite feature, you must first enable it.

At the command prompt, type:

```
enable ns rewrite
```

#### Add rewrite policy

After you configure a rewrite action, you must next configure a rewrite policy to select the gRPC requests to which the NetScaler appliance must rewrite.

At the command prompt, type:

```
add rewrite policy <name> <expression> <action> [<undefaction>]-
appFlowaction <actionName>
```

#### Example:

```
add rewrite policy grpc-rewr_pol1 "http.res.header(\"grpc-status\").
NE(\"0\")"RESET
```

## Bind rewrite policy to load balancing virtual server

To put a policy into effect, you must bind it to the load balancing virtual server with the gRPC service.

At the command prompt, type:

```
bind rewrite global <policyName> <priority> [<gotoPriorityExpression>
 [-type <type>] [-invoke (<labelType> <labelName>)]
```

### Example:

```
bind lb vserver lb-grpc -policyName grpc-rewr_pol1 -priority 100
```

## gRPC with the responder policy

May 2, 2023

The gRPC with responder policy configuration explains how a NetScaler appliance provides different responses to gRPC requests over the HTTP/2 protocol. When users request a website home page, you might want to provide a different home page depending on where each user is located or the browser the user is using.

The following diagram shows the components that interact.



1. Enable the responder feature on the appliance.
2. Configure the responder action to generate a custom response, redirect a request to a different webpage, or reset a connection.
3. Configure the responder policy for determining the gRPC requests (traffic) on which an action has to be taken.
4. Bind the responder policy to the load balancing virtual server to examine if the traffic matches the policy expression.
5. By using a responder policy, you can perform the following based on the gRPC status code.

## Configure gRPC call termination with the responder policy by using the CLI

To configure gRPC call termination with the responder policy, you must complete the following steps:

1. Enable the responder feature
2. Add a responder action
3. Add a responder policy and associate responder action
4. Bind the responder policy to load balancing virtual server

### Enable the responder feature

To use the responder feature, you must first enable it.

At the command prompt, type:

```
enable ns responder
```

### Add the responder action

After enabling the feature, you must configure the responder action for handling the gRPC response based on the status code returned by the back-end server.

At the command prompt, type:

```
add responder action <name> <type>
```

#### Example:

```
add responder action grpc-act respondwith "HTTP/1.1 200 OK\r\nServer: NS-Responder\r\nContent-Type:application/grpc\r\ngrpc-status: 12\r\ngrpc-message: Not Implemented\r\n\r\n"+ "Method: "+ HTTP.REQ.URL+ " is not implemented."
```

### Adding responder policy

After you configure a responder action, you must next configure a responder policy to select the gRPC request to which the NetScaler appliance must respond.

At the command prompt, type:

```
add responder policy <name> <expression> <action> [<undefaction>]-appFlowaction <actionName>
```

#### Example:

```
add responder policy grpc-resp-pol1 HTTP.REQ.URL.NE("/helloworld.
Greeter/SayHello")grpc-act
```

### Bind responder policy to load balancing virtual server

To put a policy into effect, you must bind it to the load balancing virtual server with the gRPC service.

At the command prompt, type:

```
bind responder global <policyName> <priority> [<gotoPriorityExpression
> [-type <type>] [-invoke (<labelType> <labelName>)]
```

#### Example:

```
bind lb vserver lb-grpc svc-grpc -policyName grpc-resp-pol1 -priority
100
```

For more information about the responder policy, see [Responder Policy](#) topic.

### Policy expressions for matching gRPC protocol buffer fields

The NetScaler appliance supports the following policy expressions in the gRPC configuration:

- **gRPC protocol buffer field access.** The arbitrary gRPC API call matches the message field number with the new policy expressions. In a PI configuration, the matches are done using only the ‘field numbers’ and ‘API path’.
- **gRPC header filtering.** The “HttpProfile” parameters for gRPC is used to adjust the default behavior of gRPC parsing (including gRPC policy expressions). The following parameters are applicable to gRPC policy expressions:
  - **gRPCLengthDelimitation.** It is enabled by default and expects the protocol buffers to be presented with a length delimited message.
  - **gRPCHoldLimit.** The default value is 131072. It is the maximum protocol buffer message size in bytes. It is also the maximum string length and the maximum ‘byte’ field length as well.

### Configure gRPC advance policy expressions by using the CLI

At the command prompt, type:

```
1 set ns httpProfile <name> -http2 \(ENABLED | DISABLED) -
 gRPCLengthDelimitation \(ENABLED | DISABLED) -gRPCHoldLimit <int>
```

#### Example:

```
1 set ns httpProfile http2gRPC -http2 ENABLED -gRPCLengthDelimitation
 ENABLED -gRPCHoldLimit 131072
```

### Configure gRPC header filtering parameters by using the GUI

1. Navigate to **System > Profiles** and click **HTTP Profiles**.
2. On the **Create HTTP Profile** page, scroll down to **HTTP/3** section, select **gRPC Length Delimitation**.

The following policy expression example shows a value in message 5, submessage 4, and field 3. It is a 32-bit int equal to 2.

```
1 http.req.body(1000).grpc.message(5).message(4).int32(3).eq(2)
```

The following policy expressions are added for matching gRPC protocol buffer message fields by number:

- message
- double
- float
- int32
- int64
- uint32
- uint64
- sint64
- sint32
- fixed32
- fixed64
- sfixed32
- sfixed64
- bool
- string
- enum
- bytes

### API path matching

The API path matching is used to match the correct gRPC API call when more than one API is used. Match the API path, which can be found in the ‘: path’ pseudo header in the HTTP request.

#### Example:

```
1 http.req.header(":path").eq("acme.inventory.v1/ListBooks")
```

## gRPC health check monitor

December 22, 2023

The gRPC health monitor probes the gRPC servers for its health status. The gRPC health monitor checks the overall health of the gRPC service or the health of a particular service. Currently, the NetScaler appliance support only the check method.

In the NetScaler appliance, The health check monitor is configured by setting the gRPC parameters such as gRPCHealthCheck, gRPCStatusCode, gRPCServiceName, and httprequest in the HTTP2 monitor configuration. A client implementing the protocol queries the server for its status (healthy, not healthy, unknown, or service not implemented) and expects the status response from the service.

The following table gives details about the new gRPC parameters and its description:

| gRPC parameters | Value                                                         | Description                                                                                                                                                                                                       |
|-----------------|---------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| gRPCHealthCheck | Yes/No                                                        | Enable or disable the gRPC health check probe.                                                                                                                                                                    |
| gRPCStatusCode  | Unsigned int (0-65535), Default: 12                           | Configure up to 16 gRPC status code. The appliance looks for the status code 0 in the status response. If it fails to receive 0, the service can set to up if any of the 16 code matches with the service status. |
| gRPCServiceName | Service name within double quotes, Default = ""(empty string) | Check the health of the particular service.                                                                                                                                                                       |

### Configure the gRPC health monitor in HTTP/2 by using the command interface

To perform a gRPC health check probe, you must enable the health check service, configure the gRPC status code, and provide the gRPC service name for which the gRPC health check must be performed. At the command prompt, type:

```
add lb monitor <monitor_name> HTTP2 -httpRequest <string> -grpcHealthCheck
(YES | NO)- grpcStatusCode <positive_integer> - grpcServiceName
string>]
```

**Example:**

```
add lb monitor http2 HTTP2 -httprequest "POST /grpc.health.v1.Health/
Check"- gRPCHealthCheck Yes -gRPCStatusCode 0 -grpcServiceName "ECHO"
```

### Configure the gRPC health monitor in HTTP/2 by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Monitors**.
2. Click **Add**.
3. In the **Create Monitor** page, set the following parameters:
  - a) Name. Name of the gRPC health monitor.
  - b) Type. Select the service type as HTTP/2.
  - c) gRPC HealthCheck. Enable gRPC health check probe.
  - d) gRPC StatusCode. The gRPC service status is “UP” only if the gRPC status code is zero or the configured value. The status goes “down” if the status code is a value other than zero or the configured value.
  - e) gRPC Service name. Service for which the health check is performed.
4. Create **Create**.

## QUIC

May 2, 2023

Quick UDP Internet Protocol (QUIC) is a combination of (TCP+TLS+HTTP/2) protocols implemented on UDP. The QUIC transport protocol multiplexes the connections between two endpoints using UDP. Also when compared to other protocols, QUIC provides a high performance in terms of security, fast delivery of traffic, and lower latency.

A QUIC bridge is configured in a NetScaler appliance for load balancing QUIC traffic between a QUIC client and QUIC back-end server. The QUIC bridge enables you to have persistent QUIC connections between client and server if there is a NAT rebinding or a connection migration. This configuration however does not process data. It is used only for load balancing of QUIC traffic through the NetScaler appliance.



QUIC packets contain connection ID to allow endpoints to associate the packets with different address or 4-tuple to the same connection. The connection ID contains the details of the server ID that are shared to the NetScaler appliance and to the back end servers. The NetScaler appliance extracts the connection ID details of the server ID and sends the traffic back to the back end server. The connection IDs are in protected packets that makes the connections robust in the event of connection migration.

#### **Important**

The back end servers must have support to encode server ID in QUIC connection ID.

### **Benefits of QUIC bridge**

QUIC bridge for the NetScaler appliance is preferred for the following reasons:

- No expensive crypto operations.
- Stateless routing is possible (no 4-tuple based load balancing).

### **Crypto offload support for QUIC**

If a NetScaler appliance is equipped with the SSL hardware chips, it does the crypto acceleration transparently and accelerates QUIC transactions. This acceleration is done by offloading crypto processing from software to hardware. No explicit configuration is needed for this support. The acceleration of QUIC transactions is supported in the NetScaler appliances with [Intel Coletto](#) hardware.

## **QUIC bridge configuration**

December 29, 2023

To configure QUIC bridge, you must complete the following:

- Add QUIC bridge profile
- Add QUIC back-end servers
- Add QUIC service on the appliance
- Add load balancing virtual server of type QUIC bridge
- Bind QUIC bridge to load balancing virtual server of type QUIC bridge

#### **Important**

Before you configure the QUIC bridge, ensure you first enable the load balancing feature on the appliance. For more information, see [Set up basic load balancing](#).

## Configure QUIC bridge by using the CLI

The following sections must be configured by using the CLI.

### Add a QUIC bridge profile

Add a QUIC bridge profile.

At the command prompt, type:

```
1 add quicBridge profile <name> -routingAlgorithm <PLAINTEXT> -
 serveridlen <value>
```

#### Example:

```
1 add quicBridge profile q1 -routingAlgorithm PLAINTEXT -serveridlen 6
```

#### Note

The `serveridlen` parameter configured in the example is the length of a custom server ID, which is the hex string of IP and PORT.

### Add QUIC back-end application server

Add QUIC back-end application servers.

At the command prompt, type:

```
1 - add server <name> (<IPAddress>)
2 - add server <name> (<IPAddress>)
```

#### Example:

```
1 - add server s1 192.0.2.20
2 - add server s2 192.0.2.30
```

### Add QUIC bridge service

You must add QUIC bridge service to the application servers.

At the command prompt, type:

```

1 - add service <name> \(<IP> | <serverName>) <serviceType> <port> \[-
 CustomServerID <string>]
2
3 - add service <name> \(<IP> | <serverName>) <serviceType> <port> \[-
 CustomServerID <string>]

```

**Example:**

```

1 - add service src1 s1 QUIC_BRIDGE 443 -CUSTOMSERVERID C0A8026401BB
2
3 - add service src2 s2 QUIC_BRIDGE 443 -CUSTOMSERVERID C0A802C801BB

```

**Note**

The `CustomServerID` parameters configured in the preceding example are the hex string of a corresponding IP and the PORT of the server (s1 and s2). For the QUIC bridge feature, Citrix recommends you to configure the `CustomServerID` parameter in the hex string format only.

**Add a load balancing virtual server of type QUIC bridge**

You must add a load balancing virtual server of type QUIC bridge.

At the command prompt, type:

```

1 add lb vserver <name> [<IPAddress>@ <port>] [-persistenceType <
 persistenceType >] [-lbMethod < lbMethod >] [-rule <rule>] [-
 cltTimeout <secs>] [-quickBridgeProfileName <name>]

```

**Example:**

```

1 add lb vserver quic_bridge_vip QUIC_BRIDGE 192.0.2.10 443 -
 persistenceType CUSTOMSERVERID -lbMethod TOKEN -rule QUIC.
 CONNECTIONID -cltTimeout 120 -quickBridgeProfileName q1

```

**Note**

While configuring the QUIC bridge virtual server, you must configure a `persistenceType` parameter as `CUSTOMSERVERID`, `rule` parameter as `QUIC.CONNECTIONID`, and a `LbMethod` parameter as `TOKEN`.

**Bind QUIC bridge service to the load balancing virtual server of type QUIC bridge**

You must bind the QUIC bridge service to the load balancing virtual server of type QUIC bridge.

At the command prompt, type:

```

1 - bind lb vserver <name> (<serviceName>)
2

```

```
3 - bind lb vserver <name> (<serviceName>)
```

**Example:**

```
1 - bind lb vserver quic_bridge_vip src1
2
3 - bind lb vserver quic_bridge_vip src2
```

## Configure QUIC bridge for service groups

You can also configure QUIC bridge capabilities to service groups. The following steps guide you to configure QUIC bridge for service groups.

To configure QUIC bridge for service groups, you must complete the following:

### Add QUIC bridge profile

At the command prompt, type:

```
1 add quicBridge profile <name> -routingAlgorithm <PLAINTEXT> -
 serveridlen <value>
```

**Example:**

```
1 add quicBridge profile q1 -routingAlgorithm PLAINTEXT -serveridlen 6
```

### Add server of type QUIC

At the command prompt, type:

```
1 - add server <name> (<IPAddress>)
2 - add server <name> (<IPAddress>)
```

**Example:**

```
1 - add server s1 192.0.2.20
2 - add server s2 192.0.2.30
```

### Add QUIC bridge service group

At the command prompt, type:

```
1 add serviceGroup <serviceGroupName> \(<IP> | <serverName>) <serviceType>
>
```

**Example:**

```
1 add serviceGroup svg1 QUIC_BRIDGE
```

**Bind the QUIC servers to the service group**

At the command prompt, type:

```
1 - bind serviceGroup <serviceName> \(<IP>@ | \(<serverName>) \[-
 CustomServerID <string>]
2 - bind serviceGroup <serviceName> \(<IP>@ | \(<serverName>) \[-
 CustomServerID <string>]
```

**Example:**

```
1 - bind serviceGroup svg1 s1 443 -customServerID C0A8026401BB
2 - bind serviceGroup svg1 s2 443 -customServerID C0A802C801BB
```

**Add load balancing virtual server of type QUIC bridge**

At the command prompt, type:

```
1 add lb vserver <name> [<IPAddress>@ <port> [-persistenceType <
 persistenceType >] [-lbMethod < lbMethod > [-cltTimeout <secs>] [-
 quickBridgeProfileName <name>]
```

**Example:**

```
1 add lb vserver quic_bridge_vip QUIC_BRIDGE 192.0.2.10 443 -
 persistenceType CUSTOMSERVERID -lbMethod TOKEN -cltTimeout 120 -
 quickBridgeProfileName q1
```

**Bind the load balancing virtual server of type QUIC bridge to the service group**

At the command prompt, type:

```
1 bind lb vserver <name>@ (<serviceName>@ <serviceName>)
```

**Example:**

```
1 bind lb vserver quic_bridge_vip svg1
```

**Configure QUIC bridge using the GUI**

Complete the following steps to configure QUIC bridge by using the GUI.

1. Navigate to **Traffic Management > Load balancing > Virtual Servers**.
2. On the **Virtual Servers** page, click **Add**.
3. On the **Load Balancing Virtual Server** page, select the Protocol as QUIC\_BRIDGE and enter the details.
4. Click **Continue** and **Done**.

### Configure load balancing for the services by using the GUI

Complete the following steps to configure load balancing for the services by using the GUI.

1. Navigate to **Traffic Management > Load Balancing > Services**. On the **Services** page, click **Add**.
2. On the **Load Balancing Service** page, enter the details and click **OK**.

#### ← Load Balancing Service

Basic Settings

Service Name\*

New Server   
  Existing Server

IP Address\*

Protocol\*

QUIC\_BRIDGE
▼
(i)

Port\*

Server ID\*

 (i)

▶ More

OK

Cancel

3. On the **Virtual Servers** page, select the created virtual server to bind the service.
4. Scroll down on the **Load Balancing Virtual Server** page and select the **Services and Service Groups**.
5. On the **Service Binding** screen, click **Select Service** field.

6. On the **Service** screen, select the service to bind to the load balancing virtual server, and click **Select**.
7. On the **Service Binding** screen, select the service that you created and click **Bind**.
8. On the **Load Balancing Virtual Server** page, click **Done**.

## View statistics for QUIC bridge

QUIC bridge supports statistics command to view a detailed summary of QUIC bridge statistics.

The following commands display a detailed summary of QUIC bridge statistics. At the command prompt, type the following:

- `stat quicbridge`
- `stat quicbridge -detail`

To clear the statistics display, type one of the following:

- `stat quicbridge -clearstats basic`
- `stat quicbridge -clearstats full`

## View QUIC bridge statistics by using the GUI

Complete the following steps to view QUIC bridge statistics.

1. On the **Dashboard** tab, hover the mouse to **System Overview** section.
2. Click **System Overview** and select QUIC BRIDGE from the drop-down list.

## Proxy protocol

December 29, 2023

Proxy protocol safely transports client details from client to server across NetScaler appliances. The appliance adds a proxy protocol header with client details and forwards it to the back-end server. Following are some of the usage scenarios for proxy protocol in a NetScaler appliance.

- Learning original client IP address
- Selecting a language for a website
- Block listing selected IP addresses
- Logging and collecting statistics.

Following are the three modes of operation:

- **Insert.** NetScaler inserts the client details and sends it to the back-end server.
- **Forward.** NetScaler forwards the client details to the back-end server. Starting from NetScaler 14.1-12.x release, along with the client details, NetScaler forwards the TLV (Type Length Value) information sent in proxy protocol V2 to back-end servers if the Proxy Protocol feature is enabled on the virtual server and service.
- **Stripped.** NetScaler stores the client details for log purpose. Also, if the proxy protocol is not supported on the back-end server, sends the client details to the server by using the rewrite policy configuration

The following table provides you information on the status of LB virtual server and service in different proxy protocol modes:

| Proxy Protocol Mode | LB virtual server | Service  |
|---------------------|-------------------|----------|
| Insert              | Disabled          | Enabled  |
| Forward             | Enabled           | Enabled  |
| Stripped            | Enabled           | Disabled |

### Limitations


The proxy protocol is not supported for the TCP Fast Open (TFO) and MultiPath TCP features. The feature is supported only for services for which the NetScaler appliance does TCP connection termination. It is not support for other services, for example, “ANY”.

### How proxy protocol works in a NetScaler appliance

The following flow diagrams show how you can configure the proxy protocol across NetScaler appliances for Insert, Forwards, and Stripped operation:




### Insert operation

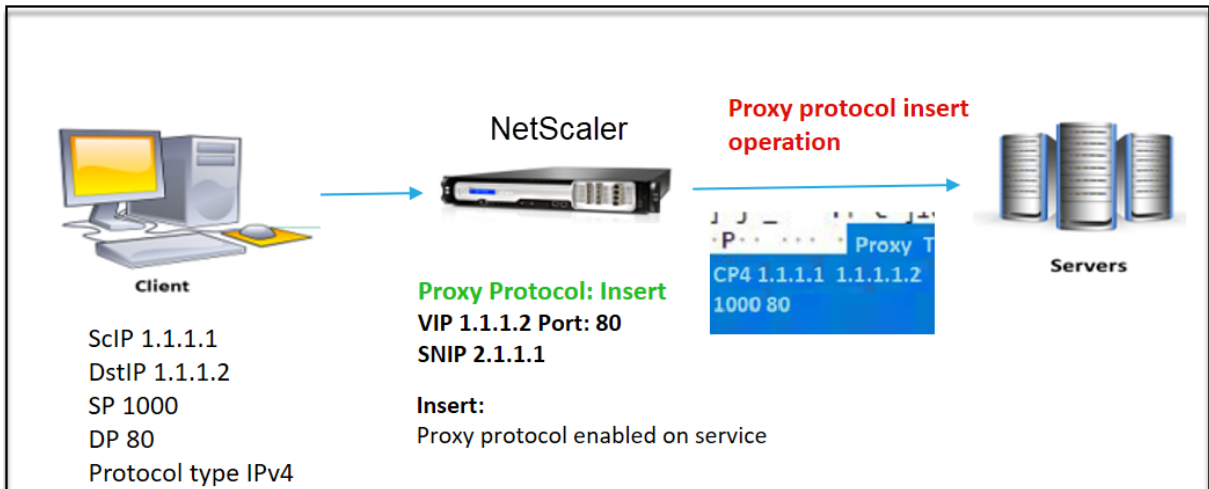

The component interact is as follows:

- At the NetScaler instance, you must enable proxy protocol in the net profile and bind it to the service.
- In the Insert operation, NetScaler adds a proxy header with client connection details and forwards it to the back-end server.
- On the sending side, the appliance decides the proxy protocol version based on CLI configuration.


### Forward operation

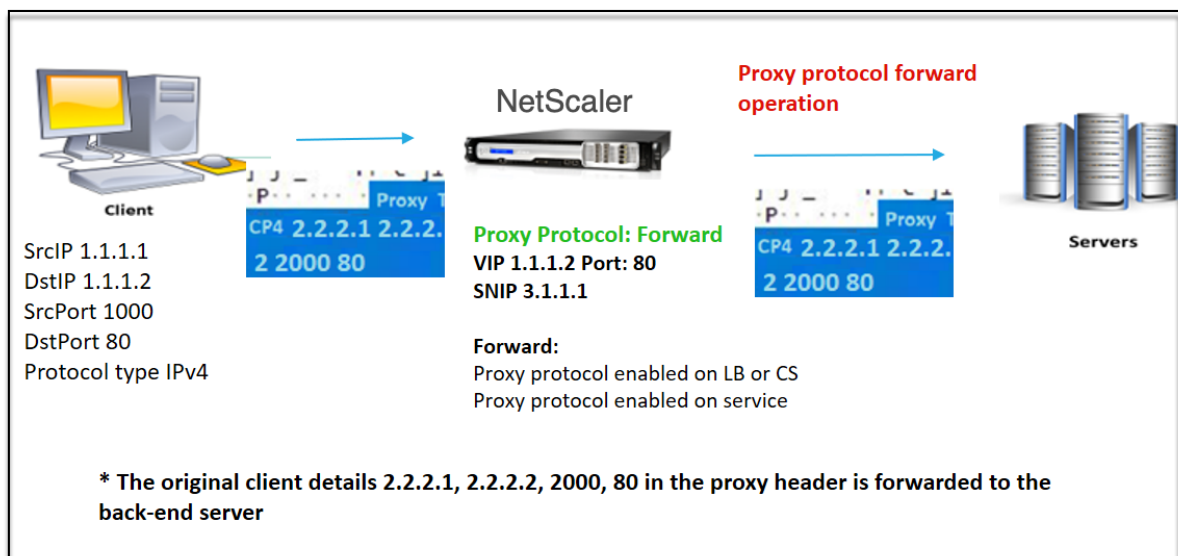

The component interact is as follows:

- A client sends a request along with the proxy header to the NetScaler. The appliance dynamically identifies the version.
- In NetScaler, it is a Forward operation. The proxy protocol is enabled on the load balancing virtual server or content switching virtual server and enabled on the service. The appliance receives the proxy header along with the TLV in Proxy Protocol V2 and forwards the header and TLV to the back-end server.
- If the proxy header details are in invalid format, the appliance resets the connection.
- On the sending side, the appliance decides the proxy protocol version based on CLI configuration.

### Stripped operation

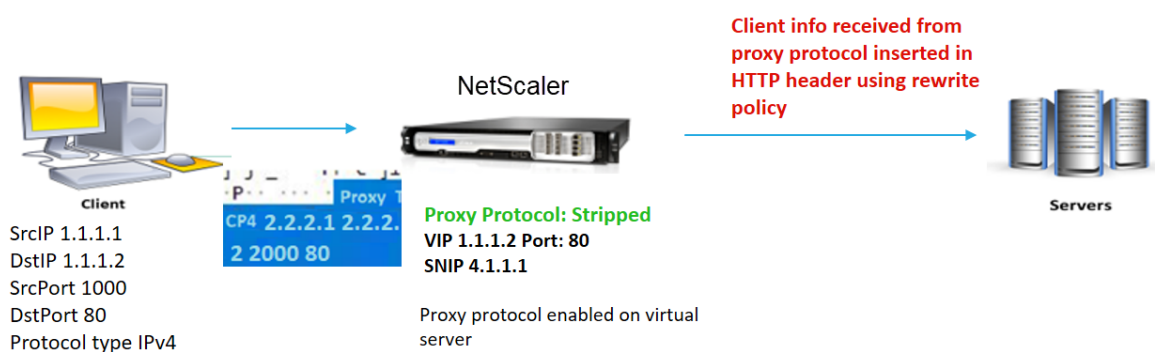

The component interact is as follows:

- A client sends a request along with a proxy header to the NetScaler appliance.
- In the NetScaler appliance, if it is a Stripped operation, the appliance forwards the client information obtained from the proxy protocol and inserts it into the HTTP header using rewrite policy expressions.
- The client details such as source IP address, destination IP address, source port, and destination port are added in an HTTP header using rewrite policy expressions. The rewrite policy evaluates the expression and if “true,” the corresponding rewrite policy action is triggered. And the client details are forwarded to the back-end server in an HTTP header.
- If the proxy header details are in invalid format, the appliance resets the connection.

### Proxy protocol version formats

The Proxy protocol version is available as two formats. The appliance decides to use a format based on the incoming data length. For detailed information, see [Proxy Protocol RFP](#).

1. Proxy protocol version-1 format

PROXY TCP4/TCP6/UNKNOWN <SRC IP> <DST IP> <SRC PORT> <DST PORT>

- PROXY -> Unique string format for Proxy header version -1.
- Support protocols TCP over IPv4 and TCP over IPv6. For the remaining protocols, this is UNKNOWN.
- SRC IP –Source IP (Original Client IP) address of a packet.
- DST IP –Destination IP address of a packet.
- SRC port –Source port of a packet.
- DST port –Destination port of a packet.

## 2. Proxy protocol version-2 format

0D 0A 0D 0A 00 0D 0A 51 55 49 54 0A <13th byte> <14th byte>  
<15–16th byte> <17th byte onwards>

- D 0A 0D 0A 00 0D 0A 51 55 49 54 0A -> Unique binary string for Proxy header version -2.
- Support protocols TCP over IPv4 and TCP over IPv6. For the remaining protocols, this is UNKNOWN.
- Thirteenth byte –protocol version and command.
- Fourteenth byte –address and protocol family.
- 15-16th byte –Address length in network order.
- Seventeenth byte onwards –Addresses info present in network order- src IP, dst IP, src port, dst port.

## Responder policy infrastructure expression support

The proxy protocol supports the following responder policy infrastructure expressions for virtual servers of type TCP and HTTP:

1. CLIENT.PROXY.SRCIP\_STR
2. CLIENT.PROXY.DSTIP\_STR
3. CLIENT.PROXY.SRCPORT
4. CLIENT.PROXY.DSTPORT
5. CLIENT.PROXY.ETHERTYPE

### Note

NetScaler supports responder policy infrastructure expression for the proxy protocol on a virtual server of type TCP from NetScaler release 13.1-48.x onwards.

## Configure Proxy protocol in NetScaler appliance

Complete the following steps to configure the Proxy protocol in your NetScaler appliance.

1. Enable proxy protocol as global.
2. Configure proxy protocol for Insert operation.
3. Configure proxy protocol for Forward operation.
4. Configure proxy protocol for Strip operation.

### Enable the proxy protocol as global

At the command prompt, type the following:

```
set ns param -proxyProtocol ENABLED
```

### Configure proxy protocol for Insert operation

To configure the proxy protocol for Insert operation, you must disable the protocol on the load balancing virtual server and enable the protocol on the service.

**Add net profile with Proxy protocol disabled for load balancing virtual server** At the command prompt, type the following:

```
add netprofile <name> -proxyProtocol ENABLED/DISABLED> -proxyprotocoltxversion <V1/V2>
```

#### Example:

```
Add netprofile proxyprofile-1 -proxyProtocol DISABLED -proxyprotocoltxversion V1
```

#### Note:

If you disable proxy protocol on your appliance, you need not set the protocol version parameter.

**Add net profile with a proxy protocol enabled for service** At the command prompt, type the following:

```
add netprofile <name> -proxyProtocol ENABLED/DISABLED> -proxyprotocoltxversion <V1/V2>
```

#### Example:

```
add netprofile proxyprofile-2 -proxyProtocol ENABLED -proxyprotocoltxversion V1
```

**Add load balancing virtual server for NetScaler appliance in the proxy layer** At the command prompt, type the following:

```
add lb vserver <name>@ <serviceType> [(<IPAddress>@ <port>)]
```

**Example:**

```
add lb vserver lbvserver-1 http 1.1.1.1 80
```

**Add HTTP service for NetScaler appliance in the proxy layer** At the command prompt, type the following:

```
add service <name>@ (<IP>@ | <serverName>@)<serviceType> <port>
```

**Example:**

```
Add service http-service-1 2.2.2.1 http 80
```

**Set net profile with load balancing virtual server in NetScaler appliance** At the command prompt, type the following:

```
set lb vserver <vserver name> -netprofile <name>
```

**Example:**

```
set lb vserver lbvserver-1 -netprofile proxyProfile-1
```

**Set net profile with HTTP service in NetScaler appliance** At the command prompt, type the following:

```
set service <service name> -netprofile <name>
```

**Example:**

```
set service http-service-1 -netprofile proxyProfile-2
```

**Bind the load balancing virtual server to service** At the command prompt, type the following:

```
bind lb vserver <vserver name> <service name>
```

**Example:**

```
bind lb vserver lbvserver-1 http-service-1
```

### Configure proxy protocol for forward operation

To configure the proxy protocol for Forward operation for the next NetScaler instance in the proxy layer, you must enable the protocol and bind to the virtual server or service.

**Note:**

The net profile created for load balancing virtual server can also be used for service .

**Add net profile with proxy protocol enabled for load balancing virtual server** At the command prompt, type the following:

```
add netprofile <name> -proxyProtocol ENABLED/DISABLED> -proxyprotocoltxversion
<V1/V2>
```

**Example:**

```
add netprofile proxyprofile-3 -proxyProtocol ENABLED -proxyprotocoltxversion
V1
```

**Add net profile with proxy protocol enabled for service** At the command prompt, type the following:

```
add netprofile <name> -proxyProtocol ENABLED/DISABLED> -proxyprotocoltxversion
<V1/V2>
```

**Example:**

```
add netprofile proxyprofile-4 -proxyProtocol ENABLED -proxyprotocoltxversion
V1
```

**Add load balancing virtual server for NetScaler appliance in the proxy layer** At the command prompt, type the following:

```
add lb vserver <name>@ <serviceType> [((<IPAddress>@ <port>)]
```

**Example:**

```
add lb vserver lbvserver-2 http 2.2.2.2 80
```

**Add HTTP service for NetScaler appliance in the proxy layer** At the command prompt, type the following:

```
add service <name>@ (<IP>@ | <serverName>@)<serviceType> <port>
```

**Example:**

```
Add service http-service-2 3.3.3.1 http 80
```

**Set net profile with load balancing virtual server in NetScaler appliance** At the command prompt, type the following:

```
set lb vserver <vserver name> -netprofile <name>
```

**Example:**

```
set lb vserver lbvserver-2 -netprofile proxyProfile-3
```

**Set net profile with HTTP service in NetScaler appliance** At the command prompt, type the following:

```
set service <service name> -netprofile <name>
```

**Example:**

```
set service http-service-2 -netprofile proxyProfile-4
```

**Bind the load balancing virtual server to service** At the command prompt, type the following:

```
bind lb vserver <vserver name> <service name>
```

**Example:**

```
bind lb vserver lbvserver-2 http-service-2
```

### **Configure proxy protocol for strip operation**

To configure the proxy protocol for strip operation, you must enable the proxy protocol on the load balancing virtual server and disable the proxy protocol on the service.

**Add net profile with proxy protocol enabled for virtual server** At the command prompt, type the following:

```
add netprofile <name> -proxyProtocol ENABLED> -proxyprotocoltxversion
<V1/V2>
```

**Example:**

```
add netprofile proxyprofile-5 -proxyProtocol ENABLED -proxyprotocoltxversion
V1
```

**Add load balancing or content switching virtual server for NetScaler appliance in the proxy layer**

At the command prompt, type the following:

```
add lb vserver <name>@ <serviceType> [(<IPAddress>@ <port>)]
```

**Example:**

```
add lb vserver lbvserver-3 http 2.2.2.2 80
```

**Add HTTP service for NetScaler appliance in the proxy layer** At the command prompt, type the following:

```
add service <name>@ (<IP>@ | <serverName>@)<serviceType> <port>
```

**Example:**

```
Add service http-service-3 3.3.3.1 http 80
```

**Set net profile with load balancing or content switching virtual server in NetScaler appliance**

At the command prompt, type the following:

```
set lb vserver <vserver name> -netprofile <name>
```

**Example:**

```
set lb vserver lbvserver-3 -netprofile proxyProfile-5
```

**Bind the load balancing virtual server to service** At the command prompt, type the following:

```
bind lb vserver <vserver name> <service name>
```

**Example:**

```
bind lb vserver lbvserver-3 http-service-3
```

**Configure responder policy infrastructure expression for proxy protocol by using the CLI**

To configure a responder policy, at the command prompt, type:

```
add responder policy <name> <expression> <action>
```

Example:

```
1 > add responder policy resppol_proxy_srcip "CLIENT.PROXY.SRCIP_STR.EQ
 ("10.106.26.83*)" RESET
2 Done
```



To bind the responder policy with the load balancing virtual server, at the command prompt, type:

```
bind lb vserver <name> -policyname <string> -priority <positive_integer>
> -gotoPriorityExpression <expression> -type <type>
```

Example:

```
1 > bind lb vserver lb_tcp1 -policyName resppol_proxy_srcip -priority 10
 -gotoPriorityExpression END -type REQUEST
2 Done
```

### Sample end-to-end configuration

```
1 > add ns tcpProfile tcp-proxy-profile -tcpmode ENDPOINT
2
3 > add netprofile net_proxyv1 -MBF DISABLED -proxyProtocol
4 ENABLED
5
6 > enable ns mode l2
7
8 > enable ns mode l3 usnip
9
10 > add ns ip 10.106.26.146 255.255.255.0 -type SNIP
11 Done
12 > add ns ip 10.106.26.144 255.255.255.0 -type SNIP
13 Done
14
15 > add lb vserver lb_tcp1 TCP 10.106.26.141 80
16 > add service s1 10.106.26.82 TCP 8080
17
18 > bind lb vserver lb_tcp1 s1
19
20 > set lb vserver lb_tcp1 -tcpProfileName tcp_proxy -netProfile
 net_proxyv1
21
22 > set ns param -proxyProtocol ENABLED
23
24 > add responder policy resppol_proxy_srcip "CLIENT.PROXY.SRCIP_STR.EQ
 (\\"10.106.26.83\\")" RESET
25
26 > bind lb vserver lb_tcp1 -policyName resppol_proxy_srcip -priority 10
 -gotoPriorityExpression END -type REQUEST
27 Done
```

### Configure Proxy protocol by using NetScaler GUI

1. Navigate to **System > Settings > Change Global System Settings**.
2. In the **Configure Global System Settings Parameters** page, select **Proxy Protocol** check box.
3. Click **OK** and **Close**.

4. Navigate to **System > Network > Net Profiles**.
5. In the details pane, click **Add** to create a net profile for the load balancing virtual server.
6. In the **Net Profile** page, set the following parameters:
  - a) **Name** : Name of the net profile.
  - b) **Proxy Protocol**: Enable or disable proxy protocol for the load balancing virtual server.
  - c) **Proxy Protocol TX Version**: Set proxy protocol version as V1 or V2 based on incoming data format.
7. Click **OK**.
8. Navigate to **Traffic Management > Load Balancing > Virtual Servers**.
9. In the details pane, click **Add**.
10. In the **Load Balancing Virtual Server** page, set the basic parameters.
11. In the **Advanced Settings** section, select **Profiles**.
12. In the **Profiles** section, click the pencil icon.
13. Select a net profile and click **OK**.
14. Click **Done**.
15. Navigate to **Traffic Management > Load Balancing > Services**.
16. In the details pane, click **Add**.
17. In the **Load Balancing Service** page, set the basic parameters.
18. In the **Advanced Settings** section, select **Profiles**.
19. In the **Profiles** section, click the pencil icon.
20. Select a net profile and click **OK**.
21. Click **Done**.

**Note:**

If you have more than one NetScaler appliance as part of the proxy layer, you must set the proxy protocol configuration on each appliance for the Forward operation.

## Client IP address in TCP option

May 2, 2023

The NetScaler appliance uses many ways to send the client information to the back-end server. One such method is by sending the client IP address in the TCP option. The appliance uses the TCP option number in the TCP profile, if the back-end server is using the TCP option to read the client IP address.

The NetScaler appliance sends the client IP address, in the TCP option header, only in the following packets:

- final ACK packet of the three-way handshake
- first data packet.

Following are some of the usage scenarios for the TCP option configuration in a NetScaler appliance.

- Learning original client IP address
- Selecting a language for a website
- Block listing the selected IP addresses

Following are the two modes of operation for sending the client IP address in the TCP option:

- **Insert.** In insert mode, the appliance adds the client details in the TCP option 28 (configurable but the preferable value is 28) field and sends it to the back-end server.
- **Forward.** In forward mode, the virtual server receives the client IP details in the TCP option from a proxy device. For the virtual server, you must configure the same TCP option, which the proxy device has used to send the client IP details.

The appliance then sends the client details in the TCP option field to the back-end server. For the service representing the back-end server, you can set any TCP option but the preferable value is 28.

The NetScaler appliance also supports sending the client port in the TCP option for insert mode configuration.

**Notes:**

- Multiplexing is not supported for the received traffic on a virtual server if the Client IP TCP option is enabled on the bound TCP profile.
- For a TCP or HTTP virtual server, the TCP option number is forwarded with or without this feature enabled in transparent mode.


## Limitations

The TCP option configuration feature is not supported in TFO, MultiPath TCP, and HTTP2 features.

## How TCP option configuration in a NetScaler appliance

The following flow diagrams show how you can configure the TCP option in the NetScaler appliances for Insert and forward operations.

### Insert operation:

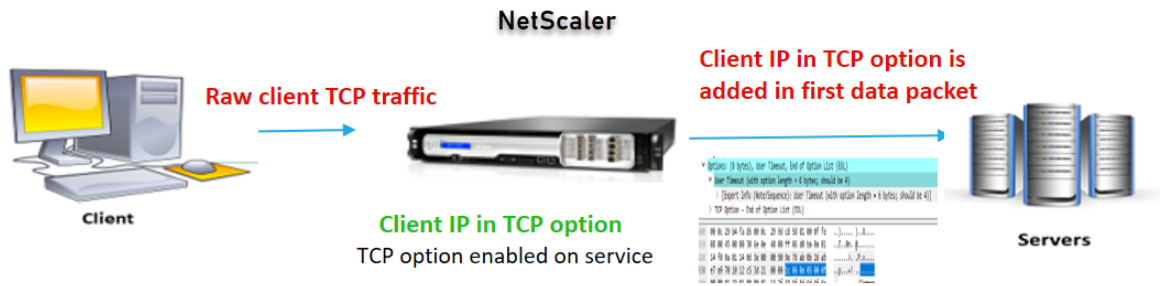


The component interact is as follows:

- A client sends a request to NetScaler.
- In the Insert operation, the NetScaler appliance inserts the client IP address and port in the configured TCP option of the following packets to the back-end server.
  - final ACK packet of the three-way handshake
  - first data packet

**Note:**

If the incoming traffic is HTTPS, the client IP address and the client port in the TCP option is sent in the SSL client hello message, which is the first data packet at the TCP level.

**Forward operation:**

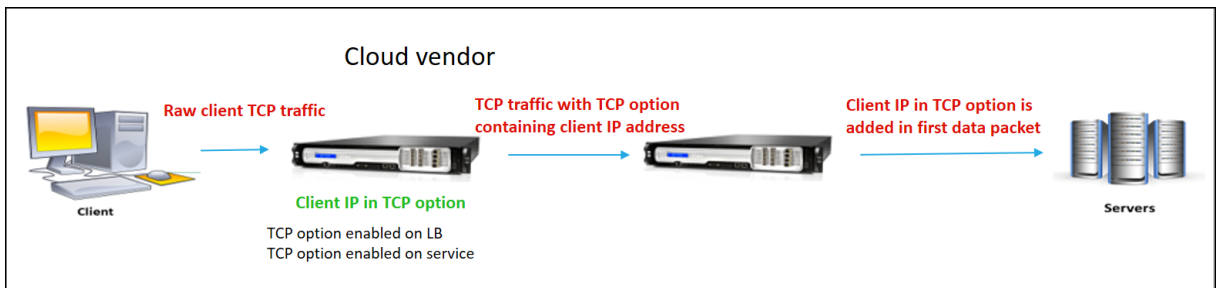

The component interact is as follows:

- A client sends a HTTP/HTTPS request to the NetScaler appliance.
- For the Forward operation, the TCP option is enabled on a load balancing virtual server or a content switching virtual server and also enabled on the service. The appliance receives the client details in the TCP option number specified in the virtual server.
- The NetScaler appliance then inserts the client IP address and port in the configured TCP option (for the service) of the following packets to the back-end server.
  - final ACK packet of the three-way handshake
  - first data packet

## Configure TCP option for Insert operation

Configuring the TCP option for Insert operation consists of the following steps:

1. Configure a TCP profile. Enable the Client IP TCP option (`clientIpTcpOption`), and specify the TCP option number (`clientIpTcpOptionNumber`). Optionally, enable the `sendClientPortInTcpOption` to send the client port in the TCP option header.

**Note:**

Citrix recommends configuring TCP option number as 28 in the TCP profile.

2. Bind the TCP profile to a service

### To configure a TCP profile by using CLI:

At the command prompt, type:

- `add tcpprofile <name> -clientIpTcpOption (ENABLED | DISABLED)-clientIpTcpOptionNumber <positive_integer> -sendClientPortInTcpOption (ENABLED | DISABLED)`
- `show tcpprofile <name>`

### To bind the TCP profile to the service by using CLI:

At the command prompt, type:

- `set service <name> -tcpprofileName <name>`
- `show service <name>`

### Sample configuration

```
1 add tcpprofile TCP-PROFILE-1 -clientIpTcpOption ENABLED -
 clientIpTcpOptionNumber 28 -sendClientPortInTcpOption ENABLED
2 set service SERVICE-1 - tcpprofileName TCP-PROFILE-1
```

## Configure the TCP option for Forward operation

Configuring the TCP option for forward operation consists of the following steps:

1. Configure a TCP profile. Enable the Client IP TCP option (`clientIpTcpOption`), and specify the TCP option number (`clientIpTcpOptionNumber`).
2. Bind the TCP profile to a load balancing or content switching virtual server
3. Bind the TCP profile to the services.

**To configure a TCP profile by using CLI:**

At the command prompt, type:

- `add tcpprofile <name> -clientIpTcpOption (ENABLED | DISABLED)-clientIpTcpOptionNumber <positive_integer>`
- `show tcpprofile <name>`

**To Bind the TCP profile to a load balancing or content switching virtual server by using CLI:**

At the command prompt, type:

- `set lb vserver <name> -tcpprofileName <name>`
- `show lb vserver <name>`

**To bind TCP profile to service by using CLI:**

At the command prompt, type:

- `set service <name> -tcpprofileName p1`
- `show service <name>`

**Sample configuration**

```
1 add tcpprofile TCP-PROFILE-2 -clientIpTcpOption ENABLED -
 clientIpTcpOptionNumber 29
2 set lb vserver LBVS-2 -tcpprofileName TCP-PROFILE-2
3 set service SERVICE-2 -tcpprofileName TCP-PROFILE-2
```

**Configure TCP option by using NetScaler GUI**

1. Navigate to **System > Profiles**.
2. In the **TCP Profile** tab page, click **Add**.
3. In the **Configure TCP profile** page, configure the following parameters:
  - **clientiptcption**. Enables the TCP option to send or receive client IP address.
  - **clientiptcptionnumber**. Sets TCP option number.
  - **sendClientPortInTcpOption** Sends client port in the TCP option for insert mode configuration.
4. Click **OK** and **Close**.

## SNMP


May 2, 2023

You can use Simple Network Management Protocol (SNMP) to configure the SNMP agent on the NetScaler appliance to generate asynchronous events, which are called *traps*. The traps are generated whenever there are abnormal conditions on the NetScaler. The traps are then sent to a remote device called a *trap listener*, which signals the abnormal condition on the NetScaler appliance. Or, you can query the SNMP agent for System-specific information from a remote device called an *SNMP manager*. The agent then searches the management information base (MIB) for the data requested and sends the data to the SNMP manager.

The SNMP agent on the NetScaler can generate traps compliant with SNMPv1, SNMPv2, and SNMPv3. For querying, the SNMP agent supports SNMP version 1 (SNMPv1), SNMP version 2 (SNMPv2), and SNMP version 3 (SNMPv3).

For information about SNMP parameters, traps, and its descriptions, see [NetScaler SNMP OID Reference](#).

The following figure illustrates a network with a NetScaler that has SNMP enabled and configured. In the figure, each SNMP network management application uses SNMP to communicate with the SNMP agent on the NetScaler. The SNMP agent searches its management information base (MIB) to collect the data requested by the SNMP Manager and provides the information to the application.

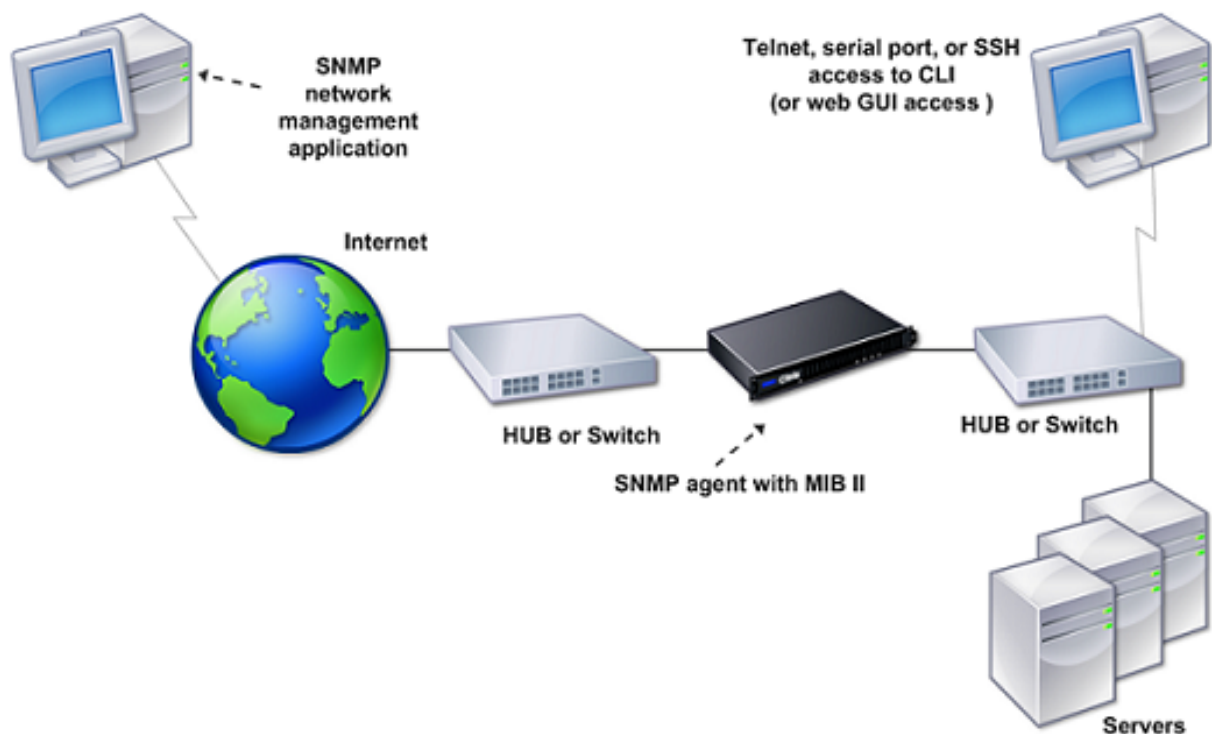

**Important**

The SNMP module in a NetScaler appliance supports a maximum length of 128 bytes (as compliant with RFC 3416) for an SNMP OID. A long index variable name for an object can result in an SNMP OID exceeding 128 bytes in length.

To resolve this issue, the NetScaler SNMP module supports a maximum length of 31 characters for an index variable name. If an index variable name exceeds 31 characters in length, the SNMP module using a hash algorithm converts the name to a 31 characters hash value. This hashed value is used in the SNMP OID for that variable.

The original index variable name is stored in another variable, which has the following name format: `<variable type>FullName`. For example, When the name of a load balancing virtual server has more the 31 characters, `vserverName` SNMP OID contains the hashed value and `vsvrFullName` SNMP OID contains the full (original) name of the virtual server.

Similarly, for SNMP traps, the index variable displays a hashed valued. `<variable type>FullName`, which stores the full name of the original index variable name, is also part of the trap messages.

**Importing MIB Files to the SNMP Manager and Trap Listener**

To monitor a NetScaler appliance, you must download the MIB object definition files. The NetScaler appliance supports the following enterprise-specific MIBs:

- **A subset of standard MIB-2 groups.** Provides MIB-2 groups SYSTEM, IF, ICMP, UDP, and SNMP.
- **A system enterprise MIB.** Provides system-specific configuration and statistics.

You can obtain the MIB object definition files from the `/netscaler/snmp` directory or from the Downloads tab of the GUI.

**Configuring the NetScaler to generate SNMP traps**

May 2, 2023

You can configure the NetScaler appliance to generate asynchronous events, which are called *traps*. The traps are generated whenever there are abnormal conditions on the appliance. The traps are sent to a remote device called a *trap listener*. It helps administrators monitor the appliance and respond promptly to any issues.

The NetScaler appliance provides a set of condition entities called *SNMP alarms*. When the condition in any SNMP alarm is met, the appliance generates SNMP trap messages that are sent to the configured



trap listeners. For example, when the LOGIN-FAILURE alarm is enabled, a trap message is generated and sent to the trap listener whenever there is a login failure on the appliance.

To configure the NetScaler appliance to generate traps, you need to enable and configure alarms. Then, you specify the trap listeners to which the appliance sends the generated trap messages.

## Enabling an SNMP alarm

The NetScaler appliance generates traps only for SNMP alarms that are enabled. Some alarms are enabled by default, but you can disable them.

When you enable an SNMP alarm, the appliance generates corresponding trap messages when some events occur. Some alarms are enabled by default.

### To enable an SNMP alarm by using the CLI

At the command prompt, type the following commands to set the parameters and verify the configuration:

- `enable snmp alarm <trapName>`
- `show snmp alarm <trapName>`

### To enable an SNMP alarm by using the GUI

1. Navigate to **System > SNMP > Alarms**, and select the alarm.
2. Click **Actions** and select **Enable**.

## Configuring alarms

The NetScaler appliance provides a set of condition entities called *SNMP alarms*. When the condition set for an SNMP alarm is met, the appliance generates SNMP traps messages that are sent to the configured trap listeners. For example, when the LOGIN-FAILURE alarm is enabled, a trap message is generated and sent to the trap listener whenever there is a login failure on the appliance.

You can assign an SNMP alarm with a severity level. When you do this, the corresponding trap messages are assigned that severity level.

The following are the severity levels, defined on the appliance, in decreasing order of severity.

- Critical
- Major
- Minor

- Warning
- Informational

For example, if you set a warning severity level for the SNMP alarm named LOGIN-FAILURE, the trap messages generated when there is a login failure is assigned with the warning severity level.

**Note**

NetScaler supports various SNMP alarms. For more information, see [SNMP alarms](#).

You can also configure an SNMP alarm to log the corresponding trap messages generated whenever the condition on that alarm is met.

**To configure an SNMP alarm by using the CLI**

At the command prompt, type the following commands to configure an SNMP alarm and verify the configuration:

- `set snmp alarm <trapName> [-thresholdValue <positive_integer> [-normalValue <positive_integer>]] [-time <secs>] [-state ( ENABLED | DISABLED )] [-severity <severity>] [-logging ( ENABLED | DISABLED )]`
- `show snmp alarm <trapName>`

Where,

**ThresholdValue:** Value for the high threshold. The NetScaler appliance generates an SNMP trap message when the value of the attribute associated with the alarm is greater than or equal to the specified high threshold value.

**NormalValue:** Value for the normal threshold. A trap message is generated if the value of the respective attribute falls to or below this value after exceeding the high threshold.

**To configure SNMP alarms by using the GUI**

Navigate to **System > SNMP > Alarms**, select an alarm, and configure the alarm parameters.

**Configuring SNMPv1 or SNMPv2 traps**

After configuring the alarms, you need to specify the trap listener to which the appliance sends the trap messages. Apart from specifying parameters such as IP or IPv6 address and the destination port of the trap listener, you can specify the type of trap (either generic or specific) and the SNMP version.

You can configure a maximum of 20 trap listeners for receiving either generic or specific traps.

You can also configure the appliance to send SNMP trap messages with a source IP address other than the NetScaler IP (NSIP or NSIP6) address to a particular trap listener. For a trap listener that has an IPv4 address, you can set the source IP to either a mapped IP (MIP) address or a subnet IP (SNIP) address configured on the appliance. For a trap listener that has an IPv6 address, you can set the source IP to a subnet IPv6 (SNIP6) address configured on the appliance.

You can also configure the appliance to send trap messages to a trap listener based on a severity level. For example, if you set the severity level as Minor for a trap listener, all trap messages of the severity level equal to or greater than Minor (Minor, Major, and Critical) are sent to the trap listener.

If you have defined a community string for the trap listener, you must also specify a community string for each trap that is to be sent to the listener. A trap listener for which a community string has been defined accepts only trap messages that include a community string matching the community string defined in the trap listener. Other trap messages are dropped.

### To add an SNMP trap by using the CLI

At the command prompt, type the following commands to set the parameters and verify the configuration:

- `add snmp trap <trapClass> <trapDestination> -version ( V1 | V2 )-destPort <port> -communityName <string> -srcIP <ip_addr> -severity <severity>`
- `show snmp trap`

#### Example:

```
1 > `add snmp trap specific 192.0.2.10 -version V2 -destPort 162 -communityName com1 -severity Major`
```

### To configure SNMP traps by using the GUI

Navigate to **System > SNMP > Traps**, and create the SNMP trap.

#### Configuring SNMPv3 traps

SNMPv3 provides security capabilities such as authentication and encryption by using the credentials of SNMP users. An SNMP manager can receive SNMPv3 trap messages only if its configuration includes the password assigned to the SNMP user.

The trap destination can now receive SNMPv1, SNMPv2, and SNMPv3 trap messages.

## To configure an SNMPv3 trap by using the CLI

At the command prompt, do the following:

1. Add an SNMPv3 trap.

```
add snmp trap <trapClass> <trapDestination> -version (V1 | V2 | V3) -destPort <port> -communityName <string> -srcIP <ip_addr> -severity <severity>
```

### Note

Once set, the SNMP trap version cannot be modified.

### Example

```
1 > add snmp trap specific 192.0.2.10 -version V3 -destPort 162 -communityName com1 -severity Major
```

2. Add an SNMP user.

```
add snmp user <name> -group <string> [-authType (MD5 | SHA) { -authPasswd } [-privType (DES | AES) { -privPasswd }]]
```

### Example

```
1 > add snmp user edocs_user -group edocs_group
```

3. Bind the SNMPv3 trap to the SNMP user.

```
bind snmp trap <trapClass> <trapDestination> [-version <version>] (-userName <string> [-securityLevel <securityLevel>])
```

Example

```
1 > bind snmp trap specific 192.0.2.10 -version V3 -userName edocs_user -securityLevel authPriv
```

## To configure an SNMPv3 trap by using the GUI

1. Add an SNMPv3 trap.

Navigate to **System > SNMP > Traps**, and create the SNMP trap by selecting V3 as the SNMP version.

2. Add an SNMP user.

Navigate to **System > SNMP > Users** and create the SNMP user.

3. Bind the SNMPv3 trap to the SNMP user.

- Navigate to **System > SNMP > Traps**, and select the SNMP version 3 trap.
- Select the user to which the trap should be bound and define the appropriate Security Level.

## SNMP trap logging

A NetScaler appliance can log SNMP trap messages (for SNMP alarms in which logging capability is enabled) when you enable the SNMP trap logging option and at least one trap listener is configured on the appliance. Now, you can specify the audit log level of trap messages sent to an external log server. The default log level is Informational. Possible values are Emergency, Alert, Critical, Error, Warning, Debug, and Notice.

For example, you can set the audit log level to Critical for an SNMP trap message generated by a logon failure. That information is then available on the NSLOG or SYSLOG server for troubleshooting.

### To enable SNMP trap logging and configure trap log level by using the CLI

At the command prompt, type the following commands to configure SNMP trap logging and verify the configuration:

- `set snmp option [-snmpTrapLogging (ENABLED | DISABLED)][-snmpTrapLoggingLevel <snmpTrapLoggingLevel>]`
- `show snmp option`

### To enable SNMP trap logging and configure SNMP trap log level by using the GUI

Navigate to **System > SNMP**, click Change SNMP Options, and set the following parameters:

1. SNMP Trap Logging—Select this check box to enable SNMP trap logging when at least one trap listener is configured on the appliance.
2. SNMP Trap Logging Level—Select an audit log level for the SNMP trap. By default, the audit level for an SNMP trap is set to “Informational.”

## Custom SNMP traps

December 16, 2024

Starting from NetScaler version 14.1-34.x, you can create custom traps based on counters.

The SNMP daemon monitors the counters and generates a trap whenever a trap criterion is met.

## User input file

Create a YAML file `snmpd_user_input.yaml` in the `/nsconfig/` folder and keep the custom SNMP trap details in the format specified in the following example.

Here, the Trap1 based on the `pcb_cur_inuse` counter is triggered if the counter falls below the threshold value of 400.

```

1 Trap1:
2 Counter: pcb_cur_inuse
3 OID: 1.3.6.1.4.1.5951.2.1.0.100
4 threshold: 400
5 normal: 500
6 ishighthresholdtrap: False
7 entityname: ''
8 entitytype: ''
9 partitionid: 0

```

If there are any errors present in the `snmpd_user_input.yaml` file, you can see those in the `/var/log/csnmpd.log` file.

For the default partition, add the YAML file to the `/nsconfig/` folder. If partitions are configured, add the file in the partition specific folder.

The file is automatically synchronized for an HA or a cluster setup.

Similarly, you can add entries for the maximum 100 custom traps combining all YAML files for various partitions. For example, if partition 1 has 50 entries, partition 2 can have 20 entries, and partition 3 can have 30 entries. If there are no partitions, you can add entries for maximum 100 custom traps in the single `snmpd_user_input.yaml` file.

```

1 Trap1:
2 Counter: tcp_tot_rxbytes
3 OID: 1.3.6.1.4.1.5951.2.1.0.191
4 threshold: 47777777
5 normal: 0
6 ishighthresholdtrap: True
7 entityname: ''
8 entitytype: ''
9 partitionid: 0
10 Trap2:
11 Counter: nic_tot_tx_mbits
12 OID: 1.3.6.1.4.1.5951.2.1.0.192
13 threshold: 47
14 normal: 0
15 ishighthresholdtrap: True
16 entityname: 'Lo/1'
17 entitytype: 'interface'
18 partitionid: 0

```

Each trap in the `snmpd_user_input.yaml` file has the following fields:

| Field               | Description                                                                                                                                                                                                                       | Permissible value                                                                |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| Counter             | Unique name of the NetScaler counter. For a list of common NetScaler counters, see the <a href="#">NetScaler 'Counters' Grab-Bag!</a> blog                                                                                        |                                                                                  |
| OID                 | Unique object identifier.                                                                                                                                                                                                         | Must be from the range 1.3.6.1.4.1.5951.2.1.0.100 to 1.3.6.1.4.1.5951.2.1.0.200. |
| threshold           | Maximum or minimum value beyond which the trap is triggered.                                                                                                                                                                      | Any integer value.                                                               |
| normal              | Any permissible value either higher or lower than the specified threshold value based on <a href="#">ishighthresholdtrap</a> value.                                                                                               | Any integer value.                                                               |
| ishighthresholdtrap | The criteria when a trap is triggered. If the value is set to true, the trap is triggered if a value exceeds the threshold value. If the value is set to false, the trap is triggered if a value falls below the threshold value. | True or False.                                                                   |
| entityname          | Name of the NetScaler entity associated with the counter.                                                                                                                                                                         | ”if there is an empty value.                                                     |
| entitytype          | Type of the NetScaler entity associated with the counter.                                                                                                                                                                         | ”if there is an empty value.                                                     |
| partitionid         | ID of the partition. 0 in the default partition.                                                                                                                                                                                  | Any valid partition ID. Generally between 0 to 255.                              |

## Admin partitions

Traps are sent with partition ID details to the destination.

## Custom traps behavior in a high availability setup

The `snmpd_user_input.yaml` file is synchronized to the secondary node.

For an HA and admin partition setup, the `snmpd_user_input.yaml` is synchronized to the partition folders on the secondary node.

Custom traps are sent on both the primary and secondary nodes when the trap condition is met.

## Custom traps behavior in a cluster setup

The `snmpd_user_input.yaml` file is synchronized to other nodes when placed in the cluster configuration coordinator (CCO) node.

In a cluster setup, if the trap condition is met on:

- Individual node - the individual node sends the trap to the trap destination.
- CCO node - the trap condition is checked against the aggregated status value and the CCO node sends the trap to the trap destination.

After setting up the YAML file, you can configure SNMP v1, SNMP v2, or SNMP v3 traps. For more information, see [Configuring the NetScaler to generate SNMP traps](#).

## Custom SNMP OIDs

December 16, 2024

Starting from NetScaler version 14.1-38.x, you can dynamically expose a counter to SNMP and use it for monitoring and managing network devices on your own.

### Create a YAML file `custom_get.yaml`

The subagent running on the device under test (DUT) picks the YAML file `custom_get.yaml` and registers the Object ID (OID) corresponding to each counter to the main agent. When the registration is done, the SNMP framework is ready to respond to the query for the newly registered OIDs.

OIDs from 1.3.6.1.4.1.5951.1.1.1.1 to 1.3.6.1.4.1.5951.1.1.1.100 are reserved as the custom SNMP OIDs of the SNMP query.

The `custom_get.yaml` file has the following format:

```
1 CNTR_1:
2 Counter: nic_tot_tx_bytes
3 Description: platformRateLimitPktDrop
```



```

4 OID: 1.3.6.1.4.1.5951.1.1.1.1
5 Type: int
6 partitionid: 0
7 entityname: '1/1'
8 entitytype: 'interface'
9 CNTR_2:
10 Counter: nic_tot_tx_bytes
11 Description: tcpSWChecksumDone
12 OID: 1.3.6.1.4.1.5951.1.1.1.2
13 Type: int
14 partitionid: 3
15 entityname: 'LO/1'
16 entitytype: 'interface'

```

Each counter in the `custom_get.yaml` file has the following fields:

| Field       | Description                                                                                                                                                          | Permissible value                                                             |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| Counter     | Unique name of the NetScaler counter. For a list of common NetScaler counters, see the <a href="#">NetScaler ‘Counters’ Grab-Bag!</a> blog. This field is mandatory. |                                                                               |
| Description | Description of the counter without any whitespaces. This field is mandatory.                                                                                         |                                                                               |
| OID         | Unique object identifier.                                                                                                                                            | Must be from the range 1.3.6.1.4.1.5951.1.1.1.1 to 1.3.6.1.4.1.5951.1.1.1.100 |
| Type        | The value must be int.                                                                                                                                               | int                                                                           |
| partitionid | Routing partition for those counters which are partition specific.                                                                                                   |                                                                               |
| entityname  | Name of the NetScaler entity associated with the counter.                                                                                                            | ”if there is an empty value.                                                  |
| entitytype  | Type of the NetScaler entity associated with the counter.                                                                                                            | ”if there is an empty value.                                                  |

### Configure NetScaler for custom SNMP OIDs

1. Place `custom_get.yaml` in the `/nsconfig` folder.

2. Start the subagent by running the following command on the NetScaler shell prompt:

```
python3 /netscaler/custom_snmpd.py SUBAGENT-START
```

3. Verify that a subagent is running on NetScaler using the following command on the NetScaler shell prompt:

```
ps -aux | grep sub root 1931 18.3 1.3 56596 46412 - S 05:08
0:01.39 /var/python/bin/python3 /var/python/bin/snmpdsubagent
START (python3.9)
```

4. From SNMP manager, run the `snmpwalk` command on the newly registered OIDs to retrieve the relevant data.
5. If you edit the YAML file, then restart the subagent by using the following command:

```
python3 /netscaler/custom_snmpd.py SUBAGENT-RESTART
```

6. To stop the subagent from responding to custom OIDs, run the following command:

```
python3 /netscaler/custom_snmpd.py SUBAGENT-STOP
```

## Configuring NetScaler for SNMP v1 and v2 queries

December 11, 2024

You can query the NetScaler SNMP agent for system-specific information from a remote device called *SNMP managers*. The agent then searches the management information base (MIB) for the data requested and sends the data to the SNMP manager.

The following types of SNMP v1 and v2 queries are supported by the SNMP agent:

- GET
- GET NEXT
- ALL
- GET BULK

You can create strings called community strings and associate each of these to query types. You can associate one or more community strings to each query type. Community strings are passwords and used to authenticate SNMP queries from SNMP managers.

For example, if you associate two community strings, such as **abc** and **bcd**, to the query type GET NEXT, the SNMP agent on the NetScaler appliance considers only those GET NEXT SNMP query packets that contain **abc** or **bcd** as the community string.

## Specifying an SNMP manager

You must configure the NetScaler appliance to allow the appropriate SNMP managers to query it. You must also provide the SNMP manager with the required NetScaler-specific information. You can add up to a maximum of 100 SNMP managers or networks.

For an IPv4 SNMP manager you can specify a host name instead of the manager's IP address. If you do so, you must add a DNS name server that resolves the host name of the SNMP manager to its IP address. You can add up to a maximum of five host-name based SNMP managers.

**Note:**

The appliance does not support use of host names for SNMP managers that have IPv6 addresses. You must specify the IPv6 address.

If you do not configure at least one SNMP manager, the appliance accepts and responds to SNMP queries from all IP addresses on the network. If you configure one or more SNMP managers, the appliance accepts and responds only to SNMP queries from those specific IP addresses.

If you remove an SNMP manager from the configuration, that manager can no longer query the appliance.

### To add SNMP managers by specifying IP addresses by using the command line interface

At the command prompt, type the following commands to set the parameters and verify the configuration:

- `add snmp manager <IPAddress> ... [-netmask <netmask>]`
- `show snmp manager`

**Example** > `add snmp manager 10.102.29.10 10.102.29.15 10.102.29.30`

### To add an SNMP manager by specifying its host name by using the command line interface

Important: If you specify the SNMP manager's host name instead of its IP address, you must configure a DNS name server to resolve the host name to the SNMP manager's IP address. For more information, see "[Adding a Name Server.](#)"

At the command prompt, type the following commands to set the parameters and verify the configuration:

- `add snmp manager <IPAddress> [-domainResolveRetry ****<integer>]`
- `show snmp manager`

### Example

```
add nameserver 10.103.128.15
add snmp manager engwiki.eng.example.net -domainResolveRetry 10
```

### To add an SNMP manager by using the GUI

1. Navigate to **System > SNMP > Managers**, and create the SNMP manager.

#### Important:

If you specify the SNMP manager's host name instead of its IPv4 address, you must configure a DNS name server to resolve the host name to the SNMP manager's IP address.

#### Note:

The appliance does not support host names for SNMP managers that have IPv6 addresses.

### Specifying an SNMP community

You can create strings called community strings and associate them with the following SNMP query types on the appliance:

- GET
- GET NEXT
- ALL
- GET BULK

You can associate one or more community strings to each query types. For example, when you associate two community strings, such as **abc** and **bcd**, to the query type GET NEXT, the SNMP agent on the appliance considers only those GET NEXT SNMP query packets that contain **abc** or **bcd** as the community string.

If you do not associate any community string to a query type then the SNMP agent responds to all SNMP queries of that type.

### To specify an SNMP community by using the command line interface

At the command prompt, type the following commands to set the parameters and verify the configuration:

- `add snmp community <communityName> <permissions>`
- `show snmp community`

**Example** > `add snmp community com all`

### To configure an SNMP community string by using the GUI

Navigate to **System > SNMP > Community**, and create the SNMP community.

## Configuring NetScaler for SNMPv3 queries

October 17, 2024

Simple Network Management Protocol Version 3 (SNMPv3) is based on the basic structure and architecture of SNMPv1 and SNMPv2. However, SNMPv3 enhances the basic architecture to incorporate administration and security capabilities, such as authentication, access control, data integrity check, data origin verification, message timeliness check, and data confidentiality.

To implement message level security and access control, SNMPv3 introduces the user-based security model (USM) and the view-based access control model (VACM).

- **User-Based Security Model.** The user-based security model (USM) provides message-level security. It enables you to configure users and security parameters for the SNMP agent and the SNMP manager. USM offers the following features:
  - **Data integrity:** To protect messages from being modified during transmission through the network.
  - **Data origin verification:** To authenticate the user who sent the message request.
  - **Message timeliness:** To protect against message delays or replays.
  - **Data confidentiality:** To protect the content of messages from being disclosed to unauthorized entities or individuals.
- **View-Based Access Control Model.** The view-based access control model (VACM) enables you to configure access rights to a specific subtree of the MIB based on various parameters, such as security level, security model, user name, and view type. It enables you to configure agents to provide different levels of access to the MIB to different managers.

NetScaler supports the following entities that enable you to implement the security features of SNMPv3:

- SNMP Engines
- SNMP Views
- SNMP Groups
- SNMP Users

These entities function together to implement the SNMPv3 security features. Views are created to allow access to subtrees of the MIB. Then, groups are created with the required security level and access to the defined views. Finally, users are created and assigned to the groups.

**Note:**

The view, group, and user configuration are synchronized and propagated to the secondary node in a high availability (HA) pair.

However, the engine ID is neither propagated nor synchronized as it is unique to each NetScaler.

To implement message authentication and access control, you need to do the following:

### Setting the engine ID

SNMP engines are service providers that reside in the SNMP agent. They provide services such as sending, receiving, and authenticating messages. SNMP engines are uniquely identified using engine IDs.

NetScaler has a unique engineID based on the MAC address of one of its interfaces. It is not necessary to override the engineID.

However, if you want to change the engine ID, you can reset it.

### Set the engine ID by using the CLI

At the command prompt, type the following commands to set the parameters and verify the configuration:

- `set snmp engineId <engineID>`
- `show snmp engineId`

**Example** > `set snmp engineId 8000173f0300c095f80c68`

### Set the engine ID by using the GUI

1. Navigate to **System > SNMP > Users**.
2. Click **Configure Engine ID** and type an engine ID.

### Configure a view

SNMP views restrict user access to specific portions of the MIB. SNMP views are used to implement access control.

### Add an SNMP view by using the CLI

At the command prompt, type the following commands to set the parameters and verify the configuration:

- `add snmp view <name> <subtree> -type ( included | excluded )`
- `show snmp view <name>`
- `rm snmp view <name> <subtree>`

Where,

**Name.** Name for the SNMPv3 view. It can consist of 1–31 characters that include uppercase and lowercase letters, numbers, and the hyphen (-), period (.), pound (#), space ( ), at sign (@), equals (=), colon (:), and underscore (\_) characters. Choose a name that helps identify the SNMPv3 view.

**Subtree.** A particular branch (subtree) of the MIB tree that you want to associate with this SNMPv3 view. You must specify the subtree as an SNMP OID. This is an argument of maximum Length: 99.

**type.** Include or exclude the subtree, specified by the subtree parameter, in or from this view. This setting can be useful when you have included a subtree, such as A, in an SNMPv3 view and you want to exclude a specific subtree of A, such as B, from the SNMPv3 view. This is a mandatory argument. Possible values: included, excluded.

**Examples** `add snmp view SNMPv3test 1.1.1.1 -type included`  
`sh snmp view SNMPv3test`  
`rm snmp view SNMPv3test 1.1.1.1`

### Configure an SNMP view by using the GUI

Navigate to **System > SNMP > Views**, and create the SNMP view.

### Configure a group

SNMP groups are logical aggregations of SNMP users. They are used to implement access control and to define the security levels. You can configure an SNMP group to set access rights for users assigned to that group, in that way restricting the users to specific views.

You need to configure an SNMP group to set access rights for users assigned to that group.

### Add an SNMP group by using the CLI

At the command prompt, type the following commands to set the parameters and verify the configuration:

- `add snmp group <name> <securityLevel> -readViewName <string>`
- `show snmp group <name> <securityLevel>`

Where,

**Name** - Name for the SNMPv3 group. Can consist of 1–31 characters that include uppercase and lowercase letters, numbers, and the hyphen (-), period (.), pound (#), space ( ), at sign (@), equals (=), colon (:), and underscore (\_) characters. Choose a name that helps identify the SNMPv3 group.

**securityLevel** - Security level required for communication between the NetScaler appliance and the SNMPv3 users who belong to the group.

Specify one of the following options:

- **noAuthNoPriv** - Require neither authentication nor encryption.
- **authNoPriv** - Require authentication but no encryption.
- **authPriv**. Require authentication and encryption.

**Note:**

If you specify authentication, you must specify an encryption algorithm when you assign an SNMPv3 user to the group.

If you also specify encryption, you must assign both an authentication and an encryption algorithm for each group member.

This is a mandatory argument. Possible values: noAuthNoPriv, authNoPriv, authPriv.

**readViewName** - Name of the configured SNMPv3 view that you want to bind to this SNMPv3 group. An SNMPv3 user bound to this group can access the subtrees that are bound to this SNMPv3 view as type INCLUDED, but cannot access the ones that are type EXCLUDED. If the NetScaler appliance has multiple SNMPv3 view entries with the same name, all such entries are associated with the SNMPv3 group. This is a mandatory argument. Maximum Length: 31

### Configure an SNMP group by using the GUI

Navigate to **System > SNMP > Groups**, and create the SNMP group.

### Configure a user

SNMP users are the SNMP managers that the agents allow to access the MIBs. Each SNMP user is assigned to an SNMP group.

You need to configure users at the agent and assign each user to a group.



## Configure a user by using the CLI

At the command prompt, type the following commands to set the parameters and verify the configuration:

- `add snmp user <name> -group <string> [-authType ( MD5 | SHA ){ -authPasswd } [-privType ( DES | AES ){ -privPasswd } ]]`
- `show snmp user <name>`

Where,

The `authType` is the authentication option available when configuring a user. The following options are supported:

- MD5
- SHA
- SHA256
- SHA512

The `privType` is the encryption option available when configuring a user. The following options are supported:

- DES192
- AES
- AES192
- AES256

### Example

```
1 > add snmp user edocs_user -group edocs_group
```

## Configure an SNMP user by using the GUI

Navigate to **System > SNMP > Users**, and create the SNMP user.

## Configuring SNMP Alarms for rate limiting

November 11, 2024

NetScaler appliances are rate limited. For information about the different models available for each platform, see the data sheet. The data sheet is available on [www.citrix.com](http://www.citrix.com). Click **Products**. Under **App Delivery and Security**, click **NetScaler**. Click **Platforms > Physical appliances** and then click **NetScaler MPX/SDX data sheet**.

The maximum throughput (in percentage) and packets per second (PPS) are determined by the license purchased for the appliance. For rate-limited platforms, you can configure SNMP traps to send notifications when throughput and PPS approach their limits and when they return to normal.

Throughput and PPS are monitored every seven seconds. You can configure traps with high-threshold and normal-threshold values, which are expressed as a percentage of the licensed limits. The appliance then generates a trap when throughput or PPS exceeds the high threshold, and a second trap when the monitored parameter falls to the normal threshold. In addition to sending the traps to the configured destination device, the NetScaler appliance logs the events associated with the traps in the `/var/log/ns.log` file as `EVENT ALERTSTARTED` and `EVENT ALERTENDED`.

Exceeding the throughput limit can result in packet loss. You can configure SNMP alarms to report packet loss.

For more information about SNMP alarms and traps, see “[Configuring the NetScaler to generate SNMP v1 and v2 Traps.](#)”

This document includes the following details:

- Configuring an SNMP alarm for throughput or PPS
- Configuring an SNMP alarm for dropped packets

## Configuring an SNMP alarm for throughput or PPS

To monitor both throughput and PPS, you must configure separate alarms and set the threshold and PPS value.

### To configure an SNMP alarm for the throughput rate by using the CLI

At the command prompt, type the following commands to configure the SNMP alarm, set threshold value (in percentage) and verify the configuration:

- `set snmp alarm PF-RL-RATE-THRESHOLD [-thresholdValue <positive_integer> [-normalValue <positive_integer>]] [-state ( ENABLED | DISABLED )] [-severity <severity>] [-logging ( ENABLED | DISABLED )]`
- `show snmp alarm PF-RL-RATE-THRESHOLD`

#### Example

```
1 > set snmp alarm PF-RL-RATE-THRESHOLD -thresholdValue 70 -normalValue 50
```

### To configure an SNMP alarm for PPS by using the CLI

At the command prompt, type the following commands to configure the SNMP alarm for PPS and verify the configuration:

- `set snmp alarm PF-RL-PPS-THRESHOLD [-thresholdValue <positive_integer> [-normalValue <positive_integer>]] [-state ( ENABLED | DISABLED )] [-severity <severity>] [-logging ( ENABLED | DISABLED )]`
- `show snmp alarm PF-RL-PPS-THRESHOLD`

#### Example

```
1 > set snmp alarm PF-RL-PPS-THRESHOLD -thresholdValue 70 -normalValue 50
```

### To configure an SNMP alarm for throughput or PPS by using the GUI

1. Navigate to **System > SNMP > Alarms**, and select **PF-RL-RATE-THRESHOLD** (for throughput rate) or **PF-RL-PPS-THRESHOLD** (for packets per second).
2. Set the alarm parameters and enable the selected SNMP alarm.

### Configuring SNMP alarm for dropped packets

You can configure an alarm for packets dropped as a result of exceeding the throughput limit and an alarm for packets dropped as a result of exceeding the PPS limit.

### To configure an SNMP alarm for packets dropped because of excessive throughput by using the CLI

At the command prompt, type:

```
set snmp alarm PF-RL-RATE-PKTS-DROPPED [-state (ENABLED | DISABLED)]
[-severity <severity>] [-logging (ENABLED | DISABLED)]
```

### To configure an SNMP alarm for packets dropped because of excessive PPS by using the CLI

At the command prompt, type:

```
set snmp alarm PF-RL-PPS-PKTS-DROPPED [-state (ENABLED | DISABLED)]
[-severity <severity>] [-logging (ENABLED | DISABLED)]
```

## To configure an SNMP alarm for dropped packets by using the GUI

1. Navigate to **System > SNMP > Alarms**, and select **PF-RL-RATE-PKTS-DROPPED** (for packets dropped because of excessive throughput) or **PF-RL-PPS-PKTS-DROPPED** (for packets dropped because of excessive PPS).
2. Set the alarm parameters and enable the selected SNMP alarm.

## Configuring SNMP in FIPS mode

May 2, 2023

FIPS mode requires Simple Network Management Protocol version 3 (SNMPv3) with the authentication and privacy (authPriv) option. SNMP version 1 and version 2 use a community string mechanism to provide secured access to management data. The community string is sent as clear text between an SNMP manager and an SNMP agent. This type of communication is unsecure, allowing intruders to access SNMP information on the network.

The SNMPv3 protocol uses the User-based Security Model (USM) and View-based Access Control Model (VACM) to authenticate and control management access to SNMP messaging data. SNMPv3 has three security levels: no authentication no privacy (noAuthNoPriv), authentication and no privacy (authNoPriv), and authentication and privacy (authPriv).

Enabling FIPS mode and restarting the NetScaler appliance removes the following SNMP configurations from the appliance:

1. Community configuration for SNMPv1 and SNMPv2 protocols.
2. SNMPv3 groups configured with the noAuthNoPriv or authNoPriv security-level option.
3. Traps configured for SNMPv1 or SNMPv2, or SNMPv3 with the noAuthNoPriv security-level option.

After restarting the appliance, configure SNMPv3 with the authPriv option. For more information about configuring authPriv option in SMNP v3, see [SNMPV3 topic](#)

### Note:

Enabling FIPS mode and restarting your appliance blocks execution of the following SNMP trap and group commands:

```
1 1. add snmp community <communityName> <permissions>
2
3 2. add snmp trap <trapClass> <trapDestination> ... [-version: v1/
 v2] [-td <positive_integer>] [-destPort <port>] [-
 communityName <string>] [-srcIP <ip_addr|ipv6_addr>] [-severity
 <severity>] [-allPartitions (ENABLED | DISABLED)]
```

```
4
5 3. add snmp group <name> <securityLevel : noAuthNoPriv/ authNoPriv
6 > -readViewName <string>
7 4. bind snmp trap specific <TrapIp>-userName <v3 user name> -
 securityLevel <noAuthNoPriv/ authNoPriv>
```

## Audit logging

May 23, 2024

### Important

We recommend you to update a SYSLOG or NSLOG configuration only during maintenance or downtime. If you update a configuration after creating a session, the changes are not applied to the existing session logs.

Auditing is a methodical examination or review of a condition or situation. The audit logging feature enables you to log NetScaler states and status information collected by various modules. The log information can be in the kernel and in the user-level daemons.

You can configure NetScaler to store the log information locally on NetScaler or export it to a remote server or both.

### Local logging

Local logging refers to the process of storing the event data generated by NetScaler such as, errors, warnings, and system events, locally within NetScaler. This data can be used for monitoring and troubleshooting, auditing, and security analysis.

By default, NetScaler saves its logs locally in NetScaler persistent storage using the UDP protocol. The logs are stored in the `ns.log` file under the `/var/log/` folder. Since local logging is enabled by default, you don't need to perform any additional configurations to store the logs.

Local logging provides the following advantages:

- **Accessibility:** You can access the logs even if there are network issues. The logs can be accessed quickly because they are not dependent on network connections.
- **Security:** The sensitive or confidential data remains within NetScaler and therefore reduces the risk of unauthorised access.
- **Compliance:** Many regulatory requirements mandate the retention of log data for a certain period. So, by storing logs locally NetScaler ensures that it is compliant.

By default, all log levels are enabled except DEBUG. However, you can adjust the levels of logs stored in the ns.log file.

**Warning**

If you configure local logging for many features or set log level to store less severe logs, then the stability and performance of NetScaler might be impacted. We strongly recommend to avoid using local logging extensively. Instead, use remote logging if verbose logging is required.

To modify the default log setting, use the following command:

```
1 set syslogparams -acl (ENABLED | DISABLED)
2 -alg (ENABLED | DISABLED)
3 -appflowExport (ENABLED | DISABLED)
4 -ContentInspectionLog (ENABLED | DISABLED)
5 -dateFormat <dateFormat>
6 -dns (ENABLED | DISABLED)
7 -logFacility <logFacility>
8 -logLevel <logLevel> ...
9 -lsn (ENABLED | DISABLED)
10 -serverIP <ip_addr|ipv6_addr|*>
11 -serverPort <port>
12 -sslInterception (ENABLED | DISABLED)
13 -subscriberLog (ENABLED | DISABLED)
14 -tcp (NONE | ALL)
15 -timeZone (GMT_TIME | LOCAL_TIME)
16 -urlFiltering (ENABLED | DISABLED)
17 -userDefinedAuditlog (YES | NO)
```

Local logging has the following disadvantages:

- **Performance impact** - Logging activities can consume system resources that can potentially impact the performance and stability of NetScaler.
- **Storage:** NetScaler can store only a limited amount of log data since the local storage capacity is low compared to centralized storage.
- **Scalability** - Not suitable for large-scale deployments. In large-scale deployments, centralized logging solutions are preferred for easier management and scalability.
  - **Compliance challenges in large scale deployments** - Many industries have regulations and compliance requirements regarding log management and retention. Managing compliance becomes more complex when logs are stored locally, as it requires ensuring that each device adheres to the necessary standards.
- **Accessibility in large scale network** - Accessing logs stored locally on NetScaler might require direct access to the device. This becomes inconvenient in large networks because accessing logs from multiple devices that are distributed across a network is cumbersome.
- **Single point of failure** - If there is a hardware malfunction, any logs stored locally becomes inaccessible. This creates a single point of failure for logging data, potentially leading to loss of

valuable information.

## Remote logging

NetScaler allows you to store the log information on an external server. You can configure NetScaler to export the logs to the external server using UDP or TCP. Depending on your requirements, you can either store the log information locally or export it to an external server, or both. For detailed information on remote logging and how to configure remote logging, see [Configuring NetScaler for audit logging](#).

## SYSLOG and NSLOG

For audit logging, you can use the SYSLOG protocol, the native NSLOG protocol, or both.

SYSLOG is a standard protocol for logging. It has two components:

- **SYSLOG auditing module:** Runs on NetScaler.
- **SYSLOG server:** Runs on the underlying FreeBSD operating system (OS) of NetScaler or on a remote system.

SYSLOG uses a user data protocol (UDP) for data transfer.

Similarly, the native NSLOG protocol has two components:

- **NSLOG auditing module:** Runs on NetScaler.
- **NSLOG server:** Runs on the underlying FreeBSD OS of NetScaler or on a remote system.

NSLOG uses TCP for data transfer.

When you run a SYSLOG or NSLOG server, it connects to NetScaler. NetScaler then starts sending all the log information to the SYSLOG or NSLOG server. And the server filters the log entries before storing them in a log file. An NSLOG or SYSLOG server receives log information from more than one NetScaler. NetScaler sends log information to more than one SYSLOG server or NSLOG server.

If multiple SYSLOG servers are configured, NetScaler sends its SYSLOG events and messages to all the configured external log servers. It results in storing redundant messages and makes monitoring difficult for system administrators. To address this issue, NetScaler offers load balancing algorithms. NetScaler can load balance the SYSLOG messages among the external log servers for better maintenance and performance. The supported load balancing algorithms include RoundRobin, LeastBandwidth, CustomLoad, LeastPackets, and AuditlogHash.

### Note

NetScaler can send audit log messages up to 16 KB to an external SYSLOG server.

The log information that a SYSLOG or NSLOG server collects from a NetScaler is stored in a log file in the form of messages. These messages typically contain the following information:

- The IP address of NetScaler that generated the log message.
- A time stamp
- The message type
- The predefined log levels (Critical, Error, Notice, Warning, Informational, Debug, Alert, and Emergency)
- The message information

To configure audit logging, you first configure the audit modules on NetScaler. NetScaler involves creating audit policies and specifying the NSLOG server or SYSLOG server information. You then install and configure the SYSLOG or the NSLOG server on the underlying FreeBSD OS of NetScaler or on a remote system.

**Note**

SYSLOG is an industry standard for logging program messages, and various vendors provide support. The documentation does not include SYSLOG server configuration information.

The NSLOG server has its own configuration file (auditlog.conf). You can customize logging on the NSLOG server system by making extra modifications to the configuration file (auditlog.conf).

**Note**

ICMP access to SYSLOG server is mandatory if SYSLOG server is used as FQDN under SYSLOG Action in the network. If ICMP access is blocked in the environment, configure it as load balanced SYSLOG server and set the value of the `healthMonitor` parameter in the `set service` command to `NO`.

For configuring ICMP, see [Load balancing SYSLOG servers](#)

## Configuring NetScaler appliance for audit logging

November 27, 2024

**Warning:**

Classic policy expressions and its usage are deprecated (discouraged from use but still supported) from NetScaler 12.0 build 56.20 onwards and as an alternative, Citrix recommends you to use advanced policies. For more information, see [Advanced Policies](#).



Audit logging displays status information from different modules so that an administrator can see event history in the chronological order. The main components of an Audit framework are ‘audit action’ and ‘audit policy’. ‘Audit action’ describes Audit Server configuration information whereas ‘audit policy’ links a bind entity to an ‘audit action’. The audit policies use the ‘Classic Policy Engine’ (CPE) framework or Progress Integration (PI) framework to link ‘audit action’ to ‘system global bind entities’.

However, the policy frameworks differ from each other in binding audit log policies to global entities. Previously, the audit module supported only classic and advanced policy expressions. Currently, using the advanced expression you can bind audit log policies only to System global entities.

**Note**

When you bind a policy to global entities, you must bind it to a system global entity of the same expression. For example, you can’t bind a classic policy to an advanced global entity or bind an advanced policy to a classic global entity.

Also, you can’t bind both classic audit log policy and advanced audit log policy to a load balancing virtual server.

## Configuring audit log policies in a classic policy expression

Configuring audit logging in classic policy consists of the following steps:

1. **Configuring an audit log action.** You can configure an audit action for different servers and for different log levels. ‘Audit action’ describes Audit Server configuration information whereas ‘audit policy’ links a bind entity to an ‘audit action’. By default, the SYSLOG uses a user data protocol (UDP) for data transfer and NSLOG uses only TCP to transfer log information to the log servers. TCP is more reliable than UDP for transferring complete data. When using TCP for SYSLOG, you can set the buffer limit on the NetScaler appliance to store the logs. After the buffer limit is reached, the logs are sent to the SYSLOG server.
2. **Configuring audit log policy.** You can configure either SYSLOG policies to log messages to a SYSLOG server or NSLOG policy to log messages to an NSLOG server. Each policy includes a rule that is set to **true** or **ns\_true** for the messages to be logged, and a SYSLOG or NSLOG action.
3. **Binding audit log policies to global entities.** You must globally bind the audit log policies to global entities such as SYSTEM, VPN, NetScaler AAA and so on. You can do it to enable logging of all NetScaler system events. By defining the priority level, you can set the evaluation order of the audit server logging. Priority 0 is the highest and is evaluated first. The higher the priority number, the lower is the priority of evaluation.

Each of these steps is explained in the following sections.

## Configuring audit log action

To configure SYSLOG action in advanced policy infrastructure by using the CLI.

### Note

The NetScaler appliance allows you to configure only one SYSLOG action to SYSLOG server IP address and port. The appliance does not allow you to configure multiple SYSLOG actions to the same server IP address and port.

A syslog action contains a reference to a syslog server. It specifies which information to log and mentions how to log that information.

At the command prompt, type the following commands to set the parameters and verify the configuration:

```
1 - add audit syslogAction <name> <serverIP> [-serverPort <port>] -
 logLevel <logLevel> [-dateFormat (MMDDYYYY | DDMMYYYY)] [-
 transport (TCP | UDP)] [-syslogcompliance <RFC5424>]
2 - show audit syslogAction [<name>]
```

You can enable RFC compliance on a syslog action by configuring `-syslogcompliance` to `RFC5424`. Configuring RFC 5424 compliance ensures that all the audit logs generated for that syslog action comply with RFC 5424. When `syslogcompliance` is enabled, the fields `Date Format` and `Time Zone` are not applicable. You can disable the RFC 5424 compliance by running the `unset syslogaction <action> -syslogcompliance` command.

To configure NSLOG action in advanced policy infrastructure by using the CLI.

An ns log action contains a reference to a nslog server. It specifies which information to log and mentions how to log that information.

At the command prompt, type the following commands to set the parameters and verify the configuration:

```
1 - add audit nslogAction <name> <serverIP> [-serverPort <port>] -
 logLevel <logLevel> [-dateFormat (MMDDYYYY | DDMMYYYY)]
2 - show audit nslogAction [<name>]
```

## Configuring audit log policies

Configure audit log Policies in classic Policy infrastructure by using the CLI.

At the command prompt, type:

```
1 - add audit syslogpolicy <name> <-rule> <action>
2 - add audit nslogpolicy <name> <-rule> <action>
```

## Binding audit syslog policies to audit syslog global

Bind audit log policy in advanced policy framework by using the CLI.

At the command prompt, type:

```
bind syslogGlobal -policyName <policyName> -priority <priority>
unbind syslogGlobal -policyName <policyName> -priority <priority>
```

Bind audit log policy in classic policy framework by using the CLI.

At the command prompt, type:

```
bind systemglobal <policy Name> <Priority>
unbind systemglobal <policy Name> <Priority>
```

## Configuring audit log policies using advanced policy expression

Configuring audit logging in advanced policy consists of the following steps:

1. **Configuring an audit log action.** You can configure an audit action for different servers and for different log levels. ‘Audit action’ describes Audit Server configuration information whereas ‘audit policy’ links a bind entity to an ‘audit action’. By default, SYSLOG uses a user data protocol (UDP) for data transfer and NSLOG uses only TCP to transfer log information to the log servers. TCP is more reliable than UDP for transferring complete data. When using TCP for SYSLOG, you can set the buffer limit on the NetScaler appliance to store the logs. After the buffer limit is reached, the logs are sent to the SYSLOG server.
2. **Configuring audit log policy.** You can configure either SYSLOG policies to log messages to a SYSLOG server or NSLOG policy to log messages to an NSLOG server. Each policy includes a rule that is set to **true** or **ns\_true** for the messages to be logged, and a SYSLOG or NSLOG action.
3. **Binding audit log policies to global entities.** You must globally bind the audit log policies to SYSTEM global entity to enable logging of all NetScaler system events. By defining the priority level, you can set the evaluation order of the audit server logging. Priority 0 is the highest and is evaluated first. The higher the priority number, the lower is the priority of evaluation.

### Note

The NetScaler appliance evaluates all the policies that are bind to true.

## Configuring audit log action

To configure syslog action in advanced policy infrastructure by using the CLI.

At the command prompt, type the following commands to set the parameters and verify the configuration:

```
1 - add audit syslogAction <name> <serverIP> [-serverPort <port>] -
 logLevel <logLevel> [-dateFormat (MMDDYYYY | DDMMYYYY)] [-
 transport (TCP | UDP)]
2 - show audit syslogAction [<name>]
```

Configure the NSLOG action in advanced policy infrastructure by using the CLI:

At the command prompt, type the following commands to set the parameters and verify the configuration:

```
1 - add audit nslogAction <name> <serverIP> [-serverPort <port>] -
 logLevel <logLevel> [-dateFormat (MMDDYYYY | DDMMYYYY)]
2 - show audit nslogAction [<name>]
```

## Configuring audit log policies

To add a syslog audit action by using the CLI.

At the command prompt, type:

```
1 add audit syslogAction <name> (<serverIP> | ((<serverDomainName>[-
2 domainResolveRetry <integer>]))
3 | -lbVserverName <string>)[-serverPort <port>] -logLevel <logLevel>
4 > [-managementlog <managementlog> ...] ... [-mgmtloglevel <
5 managementloglevel> ...][-dateFormat <dateFormat>]
6 [-logFacility <logFacility>][-tcp (NONE | ALL)] [-acl (ENABLED
7 | DISABLED)]
8 [-timeZone (GMT_TIME | LOCAL_TIME)][-userDefinedAuditlog (YES |
9 NO)]
10 [-appflowExport (ENABLED | DISABLED)] [-lsn (ENABLED | DISABLED
11)][-alg (ENABLED | DISABLED)]
12 [-subscriberLog (ENABLED | DISABLED)][-transport (TCP | UDP)]
13 [-tcpProfileName <string>][-maxLogDataSizeToHold]
```

### Example

```
1 > add audit syslogaction audit-action1 10.102.1.1 -loglevel
2 INFORMATIONAL -dateFormat MMDDYYYY
3 > add audit nslogAction nslog-action1 10.102.1.3 -serverport 520 -
4 loglevel INFORMATIONAL -dateFormat MMDDYYYY
5 > add audit syslogpolicy syslog-pol1 TRUE audit-action1
6 > add audit nslogPolicy nslog-pol1 TRUE nslog-action1
7 > bind system global nslog-pol1 -priority 20
```

Add a nslog audit action by using the CLI.

At the command prompt, type:

```
1 add audit nslogAction <name> (<serverIP> | (<serverDomainName>[-
domainResolveRetry <integer>])) [-serverPort <port>] -
logLevel <logLevel> ... [-dateFormat <dateFormat>][-logFacility
<logFacility>] [-tcp (NONE | ALL)][-acl (ENABLED | DISABLED)
] [-timeZone (GMT_TIME | LOCAL_TIME)][-userDefinedAuditlog (YES | NO)][-appflowExport (ENABLED | DISABLED)] [-lsn (ENABLED | DISABLED)][-alg (ENABLED | DISABLED)] [-subscriberLog (ENABLED | DISABLED)]
```

### Binding audit log policies to global entities

Bind the syslog audit log policy in advanced policy framework by using the CLI.

At the command prompt, type:

```
bind audit syslogGlobal <policyName> [-globalBindType <globalBindType
```

```
unbind audit syslogGlobal <policyName>[-globalBindType <globalBindType
>]
```

### Configuring audit log policy by using the GUI

1. Navigate to **Configuration > System > Auditing > Syslog**.
2. Select **Servers** tab.
3. Click **Add**.
4. In the **Create Auditing Server** page, populate the relevant fields, and click **Create**.
5. To add the policy, select the **Policies** tab, and click **Add**.
6. In the **Create Auditing Syslog Policy** page, populate the relevant fields, and click **Create**.
7. To bind the policy globally, select **Advanced Policy Global Bindings** from the drop-down list. Select the **best\_syslog\_policy\_ever** policy. Click **Select**.
8. From the drop-down list, select the bind point as **SYSTEM\_GLOBAL** and click **Bind**, and then click **Done**.

### Configuring policy-based logging

You can configure policy-based logging for rewrite and responder policies. Audit messages are then logged in a defined format when the rule in a policy evaluates to TRUE. To configure policy-based logging, you configure an audit-message action that uses advanced policy expressions to specify the format of the audit messages. And associate the action with a policy. The policy can be bound either globally or to a load balancing or content switching virtual server. You can use audit-message actions

to log messages at various log levels, either in syslog format only or in both syslog and new nslog formats

### Prerequisites

- User Configurable Log Messages (userDefinedAuditlog) option is enabled for when configuring the audit action server to which you want to send the logs in a defined format.
- The related audit policy is bound to system global.

### Configuring an audit message action

You can configure audit message actions to log messages at various log levels, either in syslog format only or in both syslog and new ns log formats. Audit-message actions use expressions to specify the format of the audit messages.

**Create an audit message action by using the CLI** At the command prompt, type:

```
1 add audit messageaction <name> <logLevel> <stringBuilderExpr> [-logtoNewslog (YES|NO)]
```

```
1 add audit messageaction log-act1 CRITICAL '"Client:"+CLIENT.IP.SRC+"accessed "+HTTP.REQ.URL'
```

**Configure an audit message action by using the GUI** Navigate to **System > Auditing > Message Actions**, and create the audit message action.

### Binding audit message action to a policy

After you've created an audit message action, you must bind it to a rewrite or responder policy. For more information about binding log message actions to a rewrite or responder policy, see [Rewrite](#) or [Responder](#).

## Installing and configuring the NSLOG server

May 2, 2023

During installation, the NSLOG server executable file (auditserver) is installed along with other files. The auditserver executable file includes options for performing several actions on the NSLOG server,

including running and stopping the NSLOG server. In addition, you use the `auditserver` executable to configure the NSLOG server with the IP addresses of the NetScaler appliances from which the NSLOG server will start collecting logs. Configuration settings are applied in the NSLOG server configuration file (`auditlog.conf`).

Then, you start the NSLOG server by executing the `auditserver` executable. The NSLOG server configuration is based on the settings in the configuration file. You can further customize logging on the NSLOG server system by making additional modifications to the NSLOG server configuration file (`auditlog.conf`).

**Attention:**

The version of the NSLOG server package must be the same as that of the NetScaler. For example, if the version of the NetScaler is 10.1 Build 125.9, the NSLOG server must also be of the same version.

The following table lists the operating systems on which the NSLOG server is supported.

| Operating system | Software requirements                                                                                      | Remarks                                             |
|------------------|------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|
| Windows          | Windows XP Professional, Windows Server 2003, Windows 2000/NT, Windows Server 2008, Windows Server 2008 R2 |                                                     |
| Linux            | RedHat Linux 4 or later, SUSE Linux Enterprise 9.3 or later                                                |                                                     |
| FreeBSD          | FreeBSD 6.3 or later                                                                                       | For NetScaler 10.5, use only FreeBSD 8.4.           |
| Mac OS           | Mac OS 8.6 or later                                                                                        | Not supported on NetScaler 10.1 and later releases. |

The minimum hardware specifications for the platform running the NSLOG server are as follows:

- Processor- Intel x86 ~501 megahertz (MHz)
- RAM - 512 megabytes (MB)
- Controller - SCSI

### Installing NSLOG server on the Linux operating system

Log on to the Linux system as an administrator. Use the following procedure to install the NSLOG server executable files on the system.

**To install the NSLOG server package on a Linux operating system**

1. At a Linux command prompt, type the following command to copy the NSauditserver.rpm file to a temporary directory:

```
cp <path_to_cd>/Utilities/auditserver/Linux/NSauditserver.rpm /tmp
```

2. Type the following command to install the NSauditserver.rpm file.

```
rpm -i NSauditserver.rpm
```

This command extracts the files and installs them in the following directories:

- /usr/local/netscaler/etc
- /usr/local/netscaler/bin
- /usr/local/netscaler/samples

**To uninstall the NSLOG server package on a Linux operating system**

1. At a command prompt, type the following command to uninstall the audit server logging feature:

```
rpm -e NSauditserver
```

2. For more information about the NSauditserver RPM file, use the following command:

```
rpm -qpi *.rpm
```

3. To view the installed audit server files use the following command:

```
rpm -qpl *.rpm
```

\*.rpm: Specifies the file name.

**Installing NSLOG server on the FreeBSD operating system**

Before you can install the NSLOG server, you have to copy the NSLOG package from the NetScaler product CD or download it from [www.citrix.com](http://www.citrix.com). The NSLOG package has the following name format:

```
AuditServer_<release number>-<build number>.zip
```

For example: `AuditServer_10.5-58.11.zip`

This package contains files for all supported platforms: Linux, Windows, and FreeBSD. On a FreeBSD operating system, install the NSLOG package that has the following name format:

```
audserver_bsd-<release number>-<build number>.tgz
```



For example: `audserver_bsd-10.5-58.11.tgz`

To download NSLOG package from [www.citrix.com](http://www.citrix.com):

1. In a web browser, go to [www.citrix.com](http://www.citrix.com).
2. In the menu bar, click **Log In**.
3. Enter your login credentials, and then click **Log In**.
4. In the menu bar, click **Downloads**.
5. From the **Select a product** list, select **NetScaler**.
6. On the **NetScaler** page, select the release for which you want to download the NSLOG package (for example, Release 10.5), and then select **Firmware**.
7. Under **Firmware**, select the NetScaler firmware for the build number for which you want to download the NSLOG package.
8. On the page that appears, scroll down, select **Audit Servers**, and click **Download File** next to the package that you want to download.

To install the NSLOG server package on a FreeBSD operating system

1. On the system to which you have downloaded the NSLOG package `AuditServer_<release number>-<build number>.zip` (for example, `AuditServer_9.3-51.5.zip`), extract the FreeBSD NSLOG server **package** `audserver_bsd-<release number>-<build number>.tgz` (for example, `audserver_bsd-9.3-51.5.tgz`) from the package.
2. Copy the FreeBSD NSLOG server package `audserver_bsd-<release number>-<build number>.tgz` (for example, `audserver_bsd-9.3-51.5.tgz`) to a directory on a system running FreeBSD OS.
3. At a command prompt for the directory into which the FreeBSD NSLOG server package was copied, run the following command to install the package:

```
pkg_add audserver_bsd-<release number>-<build number>.tgz
```

**Example:**

```
1 pkg_add audserver_bsd-9.3-51.5.tgz
```

The following directories are extracted:

- `<root directory extracted from the FreeBSD NSLOG server package tgz file>NetScalerbin` (for example, `/var/auditserver/netscaler/bin`)
- `<root directory extracted from the FreeBSD NSLOG server package tgz file>netscaler/etc` (for example, `/var/auditserver/netscaler/etc`)

- <root directory extracted from the FreeBSD NSLOG server package tgz file>\netscaler\samples (for example, /var/auditserver/samples)

4. At a command prompt, type the following command to verify that the package is installed:

```
pkg_info | grep NSaudserver
```

### To uninstall the NSLOG server package on a FreeBSD operating system

At a command prompt, type:

```
pkg_delete NSaudserver
```

### Installing NSLOG Server Files on the Windows Operating System

Before you can install the NSLOG server, you have to copy the NSLOG package from the NetScaler product CD or download it from [www.citrix.com](http://www.citrix.com). The NSLOG package has the following name format `AuditServer_<release number>-<build number>.zip` (for example, `AuditServer_9.3-51.5.zip`). This package contains NSLOG installation packages for all supported platforms.

### To download NSLOG package from [www.Citrix.com](http://www.Citrix.com)

1. In a web browser, go to [www.citrix.com](http://www.citrix.com).
2. In the menu bar, click Log In.
3. Enter your login credentials, and then click Log In.
4. In the menu bar, click Downloads.
5. Search to find the page that provides the appropriate release number and build.
6. On that page, under Audit Servers, click Download to download the NSLOG package, having the format `AuditServer_<release number>-<build number>.zip`, to your local system (for example, `AuditServer_9.3-51.5.zip`).

### To install NSLOG server on a Windows operating system

1. On the system, where you have downloaded the NSLOG package `AuditServer_<release number>-<build number>.zip` (for example, `AuditServer_9.3-51.5.zip`), extract `audserver_win-<release number>-<build number>.zip` (for example, `audserver_win-9.3-51.5.zip`) from the package.

2. Copy the extracted file `audserver_<release number>-<build number>.zip` (for example, `audserver_win-9.3-51.5.zip`) to a Windows system on which you want to install the NSLOG server.
3. Unzip the `audserver_<release number>-<build number>.zip` file (for example, `audserver_win-9.3-51.5.zip`).
4. The following directories are extracted:
  - a) `<root directory extracted from the Windows NSLOG server package zip file>\bin` (for example, `C:\audserver_win-9.3-51.5\bin`)
  - b) `<root directory extracted from the Windows NSLOG server package zip file>\etc` (for example, `C:\audserver_win-9.3-51.5\etc`)
  - c) `<root directory extracted from the Windows NSLOG server package zip file>\samples` (for example, `C:\audserver_win-9.3-51.5\samples`)
5. At a command prompt, run the following command from the `<root directory extracted from the Windows NSLOG server package zip file>\bin` path  

```
audserver -install -f <directorypath>\auditlog.conf
```

`<directorypath>`: Specifies the path to the configuration file (`auditlog.conf`). By default, `log.conf` is under `\<root directory extracted from Windows NSLOG server package zip file>\samples` directory. But you can copy `auditlog.conf` to your desired directory.

### To uninstall the NSLOG server on a Windows operating system

At a command prompt, run the following from the `<root directory extracted from Windows NSLOG server package zip file>\bin` path:

```
audserver -remove
```

### NSLOG Server Command Options

For information about NSLOG server commands, see [Audit Server Options](#).

Run the `audserver` command from the directory in which the audit server executable is present:

- On Windows: `\ns\bin`
- On Solaris and Linux: `\usr\local\netscaler\bin`

The audit server configuration files are present in the following directories:

- On Windows: `\ns\etc`
- On Linux: `\usr\local\netscaler\etc`

The audit server executable is started as `./auditserver` in Linux and FreeBSD.

## Adding the NetScaler Appliance IP Addresses on the NSLOG Server

In the configuration file (`auditlog.conf`), add the IP addresses of the NetScaler appliances whose events must be logged.

### To add the IP addresses of the NetScaler appliance

At a command prompt, type the following command:

```
audserver -addns -f <directorypath>\auditlog.conf
```

`<directorypath>`: Specifies the path to the configuration file (`auditlog.conf`).

You are prompted to enter the information for the following parameters:

NSIP: Specifies the IP address of the NetScaler appliance, for example, 10.102.29.1.

Userid: Specifies the user name, for example, nsroot.

Password: Specifies the password, for example, nsroot.

If you add multiple NetScaler IP addresses (NSIP), and later you do not want to log all of the NetScaler appliance event details, you can delete the NSIPs manually by removing the NSIP statement at the end of the `auditlog.conf` file. For a high availability (HA) setup, you must add both primary and secondary NetScaler IP addresses to `auditlog.conf` by using the `audserver` command. Before adding the IP address, make sure the user name and password exist on the system.

### Verifying the NSLOG Server Configuration File

Check the configuration file (`audit log.conf`) for syntax correctness to enable logging to start and function correctly.

To verify configuration, at a command prompt, type the following command:

```
audserver -verify -f <directorypath>\auditlog.conf
```

`<directorypath>`: Specifies the path to the configuration file (`audit log.conf`).

## Running the NSLOG server

September 21, 2020

### To start audit server logging

Type the following command at a command prompt:

```
audserver -start -f <directorypath>\auditlog.conf
```

<directorypath>: Specifies the path to the configuration file (audit log.conf).

### To stop audit server logging that starts as a background process in FreeBSD or Linux

Type the following command:

```
audserver -stop
```

### To stop audit server logging that starts as a service in Windows

Type the following command:

```
audserver -stopservice
```

## Customizing logging on the NSLOG server

May 2, 2023

You can customize logging on the NSLOG server by making additional modifications to the NSLOG server configuration file (log.conf). Use a text editor to modify the log.conf configuration file on the server system.

To customize logging, use the configuration file to define filters and log properties.

- **Log filters.** Filter log information from a NetScaler appliance or a set of NetScaler appliances.
- **Log properties.** Each filter has an associated set of log properties. Log properties define how to store the filtered log information.

This document includes the following details:

- Creating Filters
- Specifying Log Properties

## Creating filters

You can use the default filter definition located in the configuration file (audit log.conf ), or you can modify the filter or create a new filter. You can create more than one log filter.

**Note:**

For consolidated logging, if a log transaction occurs for which there is no filter definition, the default filter is used (if it is enabled.) The only way you can configure consolidated logging of all the NetScaler appliances is by defining the default filter.

### To create a filter

At the command prompt, type the following command in the configuration file ( auditlog.conf):

```
1 filter <filterName> [IP <ip>] [NETMASK <mask>] ON | OFF]
```

filterName: Specify the name of the filter (maximum of 64 alphanumeric characters).

ip: Specify the IP addresses.

mask: Specify the subnet mask to be used on a subnet.

Specify ON to enable the filter to log transactions, or specify OFF to disable the filter. If no argument is specified, the filter is ON.

### Examples:

```
1 filter F1 IP 192.168.100.151 ON
```

To apply the filter F2 to IP addresses 192.250.100.1 to 192.250.100.254:

```
1 filter F2 IP 192.250.100.0 NETMASK 255.255.255.0 ON
```

filterName is a required parameter if you are defining a filter with other optional parameters, such as IP address, or the combination of IP address and Netmask.

## Specifying log properties

Log properties associated with the filter are applied to all the log entries present in the filter. The log property definition starts with the key word BEGIN and ends with END as illustrated in the following example:

```
1 BEGIN <filename>
2 logFilenameFormat ...
3 logDirectory ...
4 logInterval ...
5 logFileSizeLimit
```

Entries in the definition can include the following:

- **LogFileNameFormat** specifies the file name format of the log file. The name of the file can be of the following types:
  - Static: A constant string that specifies the absolute path and the file name.
  - Dynamic: An expression that includes the following format specifiers:
    - \* Date (%{format}t)
    - \* creates file name with NSIP

**Example:**

```
1 LogFileNameFormat Ex%` {
2 `m%d%y }
3 t.log
```

This creates the first file name as Exmddyy.log. New files are named: Exmddyy.log.0, Exmddyy.log.1, and so on. In the following example, the new files are created when the file size reaches 100MB.

**Example:**

```
1 LogInterval size
2 LogFileSize 100
3 LogFileNameFormat Ex%` {
4 `m%d%y }
5 t
```

**Caution**

The date format %t specified in the LogFileNameFormat parameter overrides the log interval property for that filter. To prevent a new file being created every day instead of when the specified log file size is reached, do not use %t in the LogFileNameFormat parameter.

- **logDirectory** specifies the directory name format of the log file. The name of the file can be either of the following:
  - Static: Is a constant string that specifies the absolute path and file name.
  - Dynamic: Is an expression containing the following format specifiers:
    - \* Date (%{format}t)
    - \* creates directory with NSIP

The directory separator depends on the operating system. In Windows, use the directory separator.

**Example:**

```
1 LogDirectory dir1\dir2\dir3
```

In the other operating systems (Linux, FreeBSD, and so forth.), use the directory separator.

- **LogInterval** specifies the interval at which new log files are created. Use one of the following values:
  - Hourly: A file is created every hour. Default value.
  - Daily: A file is created every day at midnight.
  - Weekly: A file is created every Sunday at midnight.
  - Monthly : A file is created on the first day of the month at midnight.
  - None: A file is created only once, when audit server logging starts.
  - Size: A file is created only when the log file size limit is reached.

**Example:**

```
1 LogInterval Hourly
```

- **LogFileSizeLimit** specifies the maximum size (in MB) of the log file. A new file is created when the limit is reached.

**Note**

You can override the loginterval property by assigning size as its value.

The default LogFileSizeLimit is 10 MB.

**Example:**

```
1 LogFileSizeLimit 35
```

## SYSLOG Over TCP

May 2, 2023

Syslog is a standard for sending event notification messages. These messages can be stored locally or on an external log server. Syslog enables network administrators to consolidate log messages and derive insights from the collected data.

Syslog is originally designed to work over UDP, which can transmit a huge amount of data within the same network with minimal packet loss. However, telco operators prefer to transmit syslog data over TCP, because they need reliable, ordered data transmission between networks. For example, telco tracks user activities, and TCP provides retransmission in the event of network failure.



## How Syslog over TCP works

To understand how syslog over TCP works, consider two hypothetical cases:

Sam, a network administrator, wants to log significant events on an external syslog server.

XYZ Telecom, an ISP, has to transmit and store a significant amount of data on syslog servers to comply with government regulations.

In both cases, the log messages must be transmitted over a reliable channel and stored safely on an external syslog server. Unlike UDP, TCP establishes a connection, transmits messages securely, and retransmits (from sender to receiver) any data that is corrupted or lost because of network failure.

The NetScaler appliance sends log messages over UDP to the local syslog daemon, and sends log messages over TCP or UDP to external syslog servers.

## SNIP support for Syslog

When the audit-log module generates syslog messages, it uses a NetScaler IP (NSIP) address as the source address for sending the messages to an external syslog server. To configure a SNIP as the source address, you must make it part of the netProfile option and bind the netProfile to the syslog action.

### Note

TCP uses SNIP for sending monitoring probes to check the connectivity and then sends the logs over NSIP. Hence the syslog server must be reachable via SNIP. Net profiles can be used to redirect all the TCP syslog traffic through SNIP entirely.

**Use of a SNIP address is not supported in internal logging.**

## Fully qualified domain name Support for audit Log

Previously, the audit-log module was configured with the destination IP address of the external syslog server to which the log messages are sent. Now, the audit-log server uses a fully qualified domain name (FQDN) instead of the destination IP address. The FQDN configuration resolves the configured domain name of the syslog server to the corresponding destination IP address for sending the log messages from the audit-log module. The name server must be properly configured to resolve the domain name and avoid domain based service issues.

### Note

When configuring an FQDN, server domain name configuration of the same NetScaler appliance in syslog action or nslog action is not supported.

## Configuring Syslog over TCP by using the Command Line Interface

To configure a NetScaler appliance to send syslog messages over TCP by using the command line interface

At the command prompt, type:

```
1 add audit syslogAction <name> (<serverIP> | ((<serverDomainName>[-domainResolveRetry <integer>]) | -lbVserverName<string>))[-serverPort <port>] -logLevel <logLevel>[-dateFormat <dateFormat>] [-logFacility <logFacility>] [-tcp (NONE | ALL)] [-acl (ENABLED | DISABLED)] [-timeZone (GMT_TIME | LOCAL_TIME)] [-userDefinedAuditlog (YES | NO)] [-appflowExport (ENABLED | DISABLED)] [-lsn (ENABLED | DISABLED)] [-alg (ENABLED | DISABLED)] [-subscriberLog (ENABLED | DISABLED)] [-transport (TCP | UDP)] [-tcpProfileName <string>] [-maxLogDataSizeToHold <positive_integer>] [-dns (ENABLED | DISABLED)] [-netProfile <string>]
```

```
1 add audit syslogaction audit-action1 10.102.1.1 -loglevel INFORMATIONAL -dateformat MMDDYYYY -transport TCP
```

## Adding SNIP IP address to net profile option by using the command line interface

To add a SNIP IP address to the net profile by using the command line interface

At the command prompt, type:

```
1 add netProfile <name> [-td <positive_integer>] [-srcIP <string>] [-srcippersistency (ENABLED | DISABLED)] [-overrideLsn (ENABLED | DISABLED)] add syslogaction <name> <serverIP> -loglevel all -netprofile net1
```

```
1 add netprofile net1 -srcip 10.102.147.204`
```

Where, srcIP is the SNIP.

## Adding net profile in a syslog action by using the command line interface

To add a netProfile option in a syslog action by using the command line interface

At the command prompt, type:

```
1 add audit syslogaction <name> (<serverIP> | -lbVserverName <string>) -logLevel <logLevel>
2 -netProfile <string> ...
```

```
1 add syslogaction sys_act1 10.102.147.36 -loglevel all -netprofile net1
```

Where, `-netprofile` specifies the name of the configured net profile. The SNIP address is configured as part of the netProfile and this netProfile option is bound to the syslog action.

**Note**

You must always bind the netProfile to the SYSLOGUDP or SYSLOGTCP services that are bound to the SYSLOGUDP or SYSLOGTCP load balancing virtual server.

### Configuring FQDN support by using the command line interface

To add a server domain name to a Syslog action by using the command line interface

At the command prompt, type:

```
1 add audit syslogAction <name> (<serverIP> | ((<serverDomainName>[-
 domainResolveRetry <integer>])) | -lbVserverName <string>)) -logLevel
 <logLevel> ...
2 set audit syslogAction <name> [-serverIP <ip_addr|ipv6_addr|*>]-
 serverDomainName <string>] [-lbVserverName <string>]-
 domainResolveRetry <integer>] [-domainResolveNow]
```

To add a server domain name to a Nslog action by using the command line interface.

At the command prompt, type:

```
1 add audit nslogAction <name> (<serverIP> | (<serverDomainName>[-
 domainResolveRetry <integer>])) -logLevel <logLevel> ...
2 set audit nslogAction <name> [-serverIP <ip_addr|ipv6_addr|*>]-
 serverDomainName <string>] [-domainResolveRetry <integer>]-
 domainResolveNow]
```

Where `serverDomainName`. Domain name of the log server. Is mutually exclusive with `serverIP/ lbVserverName`.

`DomainResolveRetry` integer. Time (in seconds) that the NetScaler appliance waits, after a DNS resolution fails, before sending the next DNS query to resolve the domain name.

`DomainResolveNow`. Included if the DNS query has to be sent immediately to resolve the server's domain name.

### Configuring Syslog over TCP by using the GUI

To configure the NetScaler appliance to send Syslog messages over TCP by using the GUI

1. Navigate to **System > Auditing > Syslog** and select the **Servers** tab.
2. Click **Add** and select Transport Type as **TCP**.

**Configuring a net profile for SNIP support by using the GUI** To configure net profile for SNIP support by using the GUI

1. Navigate to **System > Auditing > Syslog** and select the **Servers** tab.
2. Click **Add** and select a net profile from the list.

**Configuring FQDN by using the GUI** To configure FQDN by using the GUI

1. Navigate to **System > Auditing > Syslog** and select the **Servers** tab.
2. Click **Add** and select a Server Type and Server Domain Name from the list.

## Export syslog securely over SSL

July 29, 2024

You can securely export syslog over SSL (Secure Sockets Layer) ensuring that sensitive log data traverses the network in an encrypted and authenticated manner. By leveraging SSL, you can safeguard syslog transmissions against eavesdropping, tampering, and unauthorized access.

### Export audit logs securely over an SSL connection by authenticating the syslog server

The following are the configuration steps to send audit logs securely over an SSL connection by authenticating the syslog server:

1. Copy the CA certificate. CA certificate is the certificate issued to the syslog server by the Certificate Authority. The certificate is available in the `/nsconfig/ssl` folder.

- a) Run the following command on the certificate:

```
1 openssl x509 -noout -hash -in <ca_certificate>
```

The result is a hash (for example 6d2962a8), a series of alphanumeric characters based on the Distinguished Name of the certificate.

- b) Run the following command to create a symbolic link to the certificate that uses the hash returned by the previous command and the `.0` suffix.

```
1 ln -s <ca_certificate> 6d2962a8.0
```

2. Enable load balancing and SSL features.

```
1 enable ns feature LoadBalancing
2 enable ns feature SSL
```

3. Add an SSL cert key by giving the CA certificate path.

```
1 add ssl certkey server_cacert -cert <path_to_ca_cert>
```

4. Add a service of type `SSL_TCP` with the IP address of the syslog server and the port on which the syslog server listens for SSL packets.

```
1 add service syslog_service <syslog_server_ip> SSL_TCP <
 syslog_server_port>
```

5. Bind the cert key to the service by giving the option `-CA`.

```
1 bind ssl service syslog_service -certkeyName server_cacert -CA
```

6. Enable the server authentication in the service.

```
1 set ssl service syslog_service -serverAuth ENABLED
```

7. Add a load balancing virtual server of type `TCP` with an IP address and port 514. Add SNIP address in the load balancing virtual server IP's subnet.

```
1 add lb vserver lb_vserver TCP <lb_vserver_ip> 514
2 add ns ip <IP> <subnet> -type SNIP
```

8. Bind the service to the load balancing virtual server.

```
1 bind lb vserver lb_vserver syslog_service
```

9. Add syslog action with the IP address as load balancing virtual IP address, port number as 514 and transport as `TCP`.

```
1 add syslogaction sys_act <lb_vserver_ip> -loglevel all -transport
 TCP -serverPort 514
```

10. Add `syslogpolicy` and bind the policy to system global.

```
1 add syslogpolicy sys_pol true sys_act
2 bind syslogglobal -policyname sys_pol -priority 1
```

## Export audit logs securely over SSL connection through mutual authentication

The following are the configuration steps to send audit logs securely over SSL connection through mutual authentication:

1. Copy the CA certificate. CA certificate is the certificate issued to the syslog server by the Certificate Authority. The certificate is available in the `/nsconfig/ssl` folder.
  - a) Run the following command on the certificate:

```
1 openssl x509 -noout -hash -in <ca_certificate>
```

The result is a hash (for example 6d2962a8), a series of alphanumeric characters based on the Distinguished Name of the certificate.

- b) Run the following command to create a symbolic link to the certificate that uses the hash returned by the previous command and the .0 suffix.

```
1 ln -s <ca_certificate> 6d2962a8.0
```

2. Add the SSL cert key by giving the CA certificate path.

```
1 add ssl cert key server_cacert -cert <path_to_ca_cert>
```

3. Add the SSL cert key by giving the client certificate (NetScaler's certificate) with the key.

```
1 add ssl certkey client_cacert -cert <path_to_client_cert> -key <
 path_to_client_key>
```

4. Add service of type `SSL_TCP` with the IP address of syslog server and the port on which the syslog server listens for SSL packets.

```
1 add service syslog_service <syslog_server_ip> SSL_TCP <
 syslog_server_port>
```

5. Bind the cert key (server) to the service by giving the option `-CA`.

```
1 bind ssl service syslog_service -certkeyName server_cacert -CA
```

6. Bind the cert key (client) to the service.

```
1 bind ssl service syslog_service -certkeyName client_cacert
```

7. Enable the server authentication in the service.

```
1 set ssl service syslog_service -serverAuth ENABLED
```

8. Add load balancing virtual server of type `TCP` with an IP address and port 514. Add SNIP address in the load balancing virtual server IP's subnet.

```
1 add lb vserver lb_vserver TCP <lb_vserver_ip> 514
```

9. Bind the service to a load balancing virtual server.

```
1 bind lb vserver lb_vserver syslog_service
```

10. Add syslog action with the IP address as load balancing virtual IP address, port as 514 and transport as `TCP`.
-

```
1 add syslogaction sys_act <lb_vserver_ip> -loglevel all -transport
 TCP -serverPort 514
```

11. Add syslog policy and bind this policy to system global.

```
1 add syslogpolicy sys_pol true sys_act
2 bind syslogglobal -policyname sys_pol -priority 1
```

With this configuration, SYSLOGTCP connection gets established from NetScaler's IP address (NSIP) to load balancing virtual server's IP address (LB VIP) and SSL\_TCP connection gets established from Subnet IP(SNIP) of NetScaler to the back end syslog server. The audit log messages are then sent to syslog server over the SSL\_TCP connection.

## Load balancing SYSLOG servers

March 28, 2024

The NetScaler appliance sends its SYSLOG events and messages to all the configured external log servers. This results in storing redundant messages and makes monitoring difficult for system administrators. To address this issue, the NetScaler appliance offers load balancing algorithms that can load balance the SYSLOG messages among the external log servers for better maintenance and performance. The supported load balancing algorithms include RoundRobin, LeastBandwidth, CustomLoad, LeastConnection, LeastPackets, and AuditlogHash.

Load balancing of SYSLOG servers using the command line interface

At the command prompt, type:

1. Add a service and specify the service type as SYSLOGTCP or SYSLOGUDP.

```
add service <name>(<IP> | <serverName>)<serviceType (SYSLOGTCP |
SYSLOGUDP)> <port>
```

2. Add a load balancing virtual server, specify the service type as SYSLOGTCP or SYSLOGUDP, and load balancing method as AUDITLOGHASH.

```
add lb vserver <name> <serviceType (SYSLOGTCP | SYSLOGUDP)> [-
lbMethod <AUDITLOGHASH>]
```

3. Bind the service to the load balancing virtual server.

```
Bind lb vserver <name> <serviceName>
```

4. Add a SYSLOG action and specify the load balancing server name that has SYSLOGTCP or SYSLOGUDP as service type.

```
add syslogaction <name> <serverIP> [-lbVserverName <string>] [-logLevel <logLevel>]
```

5. Add a SYSLOG policy by specifying the rule and action.

```
add syslogpolicy <name> <rule> <action>
```

6. Bind the SYSLOG policy to the system global for the policy to take effect.

```
bind system global <policyName>
```

#### Load balancing of SYSLOG servers using the GUI

1. Add a service and specify the service type as SYSLOGTCP or SYSLOGUDP.

Navigate to **Traffic Management > Services**, click **Add** and select **SYSLOGTCP** or **SYSLOGUDP** as protocol.

2. Add a load balancing virtual server, specify the service type as SYSLOGTCP or SYSLOGTCP, and load balancing method as AUDITLOGHASH.

Navigate to **Traffic Management > Virtual Servers**, click **Add** and select **SYSLOGTCP** or **SYSLOGUDP** as protocol.

3. Bind the service to the load balancing virtual server.

- a) Navigate to **Traffic Management > Load Balancing > Virtual Servers**, select the load balancing virtual server, and click **Edit**.
- b) In the **Services and Service Groups** section, click **Load Balancing Virtual Server Service Binding** and click **Add Binding**.
- c) On the **Service Binding** page, click **Select Service**, select the service with service type as SYSLOGTCP or SYSLOGUDP, and click **Select**.
- d) On the **Service Binding** page, click **Bind**.
- e) Click **Close** and then **Done** to navigate back to the **Virtual Servers** page.

4. Add a SYSLOG action and specify the load balancing server name that has SYSLOGTCP or SYSLOGUDP as service type.

Navigate to **System > Auditing**, click **Servers** and add a server by selecting **LB Vserver** option in **Servers**.

5. Add a SYSLOG policy by specifying the rule and action.

Navigate to **System > Syslog**, click **Policies** and add a SYSLOG policy.

6. Bind the SYSLOG policy to the system global for the policy to take effect.

Navigate to **System > Syslog**, select a SYSLOG policy and click **Action**, and then click **Global Bindings** and bind the policy to system global.



**Example:**

The following configuration specifies load balance of SYSLOG messages among the external log servers using the AUDITLOGHASH as load balancing method. AUDITLOGHASH method load balances the traffic based on input hash value from the audit agents. The agents are the modules which generate auditlog in a NetScaler appliance. For example, if an agent LSN wants to load balance auditlogs based on client IP address, LSN module generates the hash value based on clientIP and passes the hash value to auditlog module. The auditlog module sends the auditlog messages which have same hash value to the external syslog server.

The NetScaler appliance generates SYSLOG events and messages that are load balanced amongst the services, service1, service2, and service 3.

```
1 add service service1 192.0.2.10 SYSLOGUDP 514
2 add service service2 192.0.2.11 SYSLOGUDP 514
3 add service service3 192.0.2.11 SYSLOGUDP 514
4 add lb vserver lbvserver1 SYSLOGUDP -lbMethod AUDITLOGHASH
5 bind lb vserver lbvserver1 service1
6 bind lb vserver lbvserver1 service2
7 bind lb vserver lbvserver1 service3
8 add syslogaction sysaction1 -lbVserverName lbvserver1 -logLevel All
9 add syslogpolicy syspol1 ns_true sysaction1
10 bind system global syspol1
```

Use the following command to configure SYSLOG using LB server with FQDN when ICMP packet is blocked:

```
set service service1 -healthMonitor NO
```

**Limitations:**

- The NetScaler appliance does not support an external load balancing virtual server load balancing the SYSLOG messages among the log servers.

## Default settings for the log properties

September 21, 2020

The following is an example of the default filter with default settings for the log properties:

```
1 begin default
2 logInterval Hourly
3 logFileSizeLimit 10
4 logFilenameFormat auditlog%`{
5 ` %y%m%d }
6 t.log
7 end default
```

Following are two examples of defining the default filters:

**Example 1:**

```
1 Filter f1 IP 192.168.10.1
```

This creates a log file for NSIP 192.168.10.1 with the default values of the log in effect.

**Example 2:**

```
1 Filter f1 IP 192.168.10.1
2 begin f1
3 logFilenameFormat logfiles.log
4 end f1
```

This creates a log file for NSIP 192.168.10.1. Since the log file name format is specified, the default values of the other log properties are in effect.

## Sample configuration file (audit.conf)

May 2, 2023

Following is a sample configuration file:

```
1 #####
2 # This is the Auditserver configuration file
3 # Only the default filter is active
4 # Remove leading # to activate other filters
5 #####
6 MYIP <NSAuditserverIP>
7 MYPORT 3023
8 # Filter filter_nsip IP <Specify the NetScaler IP address to filter
9 on > ON
10 # begin filter_nsip
11 # logInterval Hourly
12 # logFileSizeLimit 10
13 # logDirectory logdir\%A\
14 # logFilenameFormat nsip%\{\
15 \ \%d%m%Y }
16 t.log
17 # end filter_nsip
18 Filter default
19 begin default
20 logInterval Hourly
21 logFileSizeLimit 10
22 logFilenameFormat auditlog%\{\
23 \ \%y%m%d }
24 t.log
25 end default
```

## Web server logging

May 2, 2023

You can use the Web server logging feature to send logs of HTTP and HTTPS requests to a client system for storage and retrieval. This feature has two components:

- The Web log server, which runs on the NetScaler.
- The NetScaler Web Logging (NSWL) client, which runs on the client system.

When you run the NetScaler Web Logging (NSWL) client:

1. It connects to the NetScaler.
2. The NetScaler buffers the HTTP and HTTPS request log entries before sending them to the client.
3. The client can filter the entries before storing them.

To configure Web server logging, you first enable the Web logging feature on the NetScaler and configure the size of the buffer for temporarily storing the log entries. Then, you install NSWL on the client system. You then add the NetScaler IP address (NSIP) to the NSWL configuration file. You are now ready to start the NSWL client to begin logging. You can customize Web server logging by making additional modifications to the NSWL configuration file (log.conf).

## Configuring the NetScaler for web server logging

March 20, 2024

To configure the NetScaler for web server logging you are required to only enable the Web Server Logging feature. Optionally, you can perform the following configurations:

- Modify the size of the buffer (default size is 16 MB) that stores the logged information before it is sent to the NetScaler Web Logging (NSWL) client.
- Specify the custom HTTP headers that you want to export to the NSWL client. You can configure a maximum of two HTTP request and two HTTP response header names.

For more information on how to configure NetScaler web server logging (NSWL), see the following video:

[This is an embedded video. Click the link to watch the video](#)

### To configure web server logging by using the command line interface

At the command prompt, perform the following operations:

- Enable the web server logging feature.

```
enable ns feature WL
```

- [Optional] Modify the buffer size for storing the logged information.

```
set ns weblogparam -bufferSizeMB <size>
```

**Note:**

To activate your modification, you must disable and then re-enable the Web server logging feature.

- [Optional] Specify the custom HTTP header names that you want to export.

```
set ns weblogparam [-customReqHdrs <string> ...] [-customRspHdrs <string> ...]
```

```
1 > enable ns feature WL
2 Done
3 > set ns weblogparam -bufferSizeMB 60
4 Done
5 > show ns weblogparam
6 Web Logging parameters:
7 Log buffer size: 60MB
8 Custom HTTP request headers: (none)
9 Custom HTTP response headers: (none)
10 Done
11 > set ns weblogparam -customReqHdrs req1 req2 -customRspHdrs res1
12 res2
13 Done
14 > show ns weblogparam
15 Web Logging parameters:
16 Log buffer size: 60MB
17 Custom HTTP request headers: req1, req2
18 Custom HTTP response headers: res1, res2
19 Done
```

## To configure web server logging by using the GUI

1. Navigate to **System > Settings** and perform the following operations:
  - a) To enable the web server logging feature, click **Change Advanced Features** and select **Web Logging**.
  - b) To modify the buffer size, click **Change Global System Settings** and under **Web Logging**, enter the buffer size.
  - c) To specify the custom HTTP headers to be exported, click **Change Global System Settings** and under **Web Logging**, specify the header values.

## Installing the NetScaler web logging (NSWL) client

May 2, 2023

When you install NSWL, the client executable file (NSWL) is installed along with other files. The NSWL executable file provides a list of options that you can use. For details, see [Configuring the NSWL Client](#).

### Attention

The version of the NSWL client must be the same as NetScaler. For example, if the version of the NetScaler is 10.1 Build 125.9, the NSWL client must also be of the same version. Also, the web logging (NSWL) client works on both 32 bit and on 64 bit server machines. The download page has only a 32 bit weblog client. The 64 bit weblog client is available on request, and recommends you to contact NetScaler support for more information.

The following table lists the operating systems on which the NSWL client can be installed.

| Operating system | Version                                                                        | Hardware requirements                                                     | Remarks                                             |
|------------------|--------------------------------------------------------------------------------|---------------------------------------------------------------------------|-----------------------------------------------------|
| Windows          | Windows Server 2016 or later                                                   | Processor - x86/amd64<br>CPU (1 GHz or higher),<br>RAM - 4 GB (or higher) |                                                     |
| macOS            | macOS 8.6 or later                                                             | Not supported on NetScaler 10.1 and later releases.                       |                                                     |
| Linux            | Ubuntu, SUSE Linux, CentOS, Red Hat Enterprise Linux released in 2016 or later | Processor - x86/amd64<br>CPU (1 GHz or higher),<br>RAM - 4 GB (or higher) |                                                     |
| Solaris          | Solaris Sun OS 5.6 or later                                                    | Processor - UltraSPARC-III 400 MHz, RAM - 512 MB,<br>Controller - SCSI    | Not supported on NetScaler 10.5 and later releases. |
| FreeBSD          | FreeBSD 6.3 or later                                                           | Processor - x86/amd64<br>CPU (1 GHz or higher),<br>RAM - 4 GB (or higher) | For NetScaler 10.5, use only FreeBSD 8.4.           |

| <b>Operating system</b> | <b>Version</b> | <b>Hardware requirements</b> | <b>Remarks</b>                                      |
|-------------------------|----------------|------------------------------|-----------------------------------------------------|
| AIX                     | AIX 6.1        | -                            | Not supported on NetScaler 10.5 and later releases. |

If the NSWL client system cannot process the log transaction because of a CPU limitation, the Web log buffer overruns and the logging process reinitiates.

**Caution**

Reinitiation of logging can result in loss of log transactions.

To temporarily solve an NSWL client system bottleneck caused by a CPU limitation, you can tune the Web server logging buffer size on the NetScaler appliance. To solve the problem, you need a client system that can handle the site's throughput.

**Download NSWL client**

You can obtain the NSWL client package from either the NetScaler product CD or the NetScaler downloads site. Within the package there are separate installation packages for each supported platform.

**To download the NSWL client from the Citrix website**

1. Log on to Citrix by accessing the URL <https://www.citrix.com/downloads/citrix-adc/>.
2. Navigate to a particular NetScaler release version and look for its Firmware.
3. Click **Firmware** (for example, NetScaler Release (Feature Phase) 13.0 Build 52.24).

## Citrix ADC (NetScaler ADC)

[Subscribe to RSS notifications of new downloads](#)

Permanent fixes for CVE-2019-19781 ADC versions 13.0, 12.1, 12.0 and 11.1 are available now in this page:

These fixes also apply to Citrix ADC/Gateway Virtual Appliances (VPX) hosted on any of ESX, Hyper-V, KVM, XenServer, Azure, AWS, GCP or on a Citrix ADC Service Delivery Appliance (SDX).

It is necessary to upgrade all Citrix ADC/Gateway for instances running 13.0 (MPX or VPX) to build 13.0.47.24, for instances running 12.1 (MPX or VPX) to build 12.1.55.18, for instances running 12.0 (MPX or VPX) to build 12.0.63.13, for instances running 11.1 (MPX or VPX) to build 11.1.63.15 and for instances running 10.5 (MPX or VPX) to build 10.5.70.12 to install the security vulnerability fixes.

### ↳ Citrix ADC Release 13.0

#### ↳ Virtual Appliances

[Citrix ADC VPX Release 13.0](#)

Mar 24, 2020

#### ↳ Firmware

[Citrix ADC Release \(Feature Phase\) 13.0 Build 52.24](#)

Mar 24, 2020

4. In the **NetScaler Release (Feature Phase) Build** page, go to **Weblog Clients** section.
5. The section allows you to download Weblog clients for Windows, Linux, and BSD.

## Weblog Clients

### Weblog Clients for Windows

Mar 24, 2020

312 K - (.zip)

 [Download File](#)

#### Checksums

SHA-256 - : 49d918fcfb9928b58ebd1597e4cc9eAAF2aa9edb9dbcc96e3d9813366145a824

### Weblog Clients for Linux

Mar 24, 2020

68 K - (.rpm)

 [Download File](#)

#### Checksums

SHA-256 - 9ead5b79451adf86b39868b5c2ccffe0efed1ead40acd8a06867142fc97e6181

### Weblog Clients for BSD

Mar 24, 2020

76 K - (.tgz)

 [Download File](#)

## Install NSWL client on Solaris

To install the NSWL client, perform the following operations on the system where you downloaded the package.

1. Extract the `nswl_solaris-<release number>-<build number>.tar` file from the package.
2. Copy the extracted file to a Solaris system on which you want to install the NSWL client.
3. Extract the files from the tar file with the following command:



```
tar xvf nswl_solaris-9.3-51.5.tar
```

A directory Weblog is created in the temporary directory, and the files are extracted to the Weblog directory.

- Install the package with the following command:

```
pkgadd -d
```

- The list of available packages appears. In the following example, one Weblog package is shown:

```
1 NSweblog NetScaler Weblogging (SunOS,sparc)7.0
```

You are prompted to select the packages. Select the package number of the Weblog to be installed.

After you select the package number and press **Enter**, the files are extracted and installed in the following directories:

- /usr/local/netscaler/etc
- /usr/local/netscaler/bin
- /usr/local/netscaler/samples

1. To check whether the NSWL package is installed, run the following command:

```
pkginfo | grep NSweblog
```

2. To uninstall the NSWL package, run the following command:

```
pkgrm NSweblog
```

## Install NSWL client on Linux

### Important

The installation of an NSWL client on Linux replaces the configuration file. You must take a backup before installing it.

To install the NSWL client, perform the following operations on the system where you downloaded the package.

1. Extract the `nswl_linux-<release number>-<build number>.rpm` file from the package.
2. Copy the extracted file to a system, running Linux OS, on which you want to install the NSWL client.
3. To install the NSWL package, run the following command:

```
rpm -i nswl_linux-9.3-51.5.rpm
```

This command extracts the files and installs them in the following directories.

- `/usr/local/netscaler/etc`
- `/usr/local/netscaler/bin`
- `/usr/local/netscaler/samples`

1. To uninstall the NSWL package, run the following command:

```
rpm -e NSweblog
```

2. To get more information about the Weblog RPM file, run the following command:

```
rpm -qpi *.rpm
```

3. To view the installed Web server logging files, run the following command:

```
rpm -qpl *.rpm
```

### Install NSWL client on FreeBSD

To install the NSWL client, perform the following operations on the system where you downloaded the package.

1. Extract the `nswl_bsd-<release number>-<build number>.tgz` file from the package.
2. Copy the extracted file to a system, running FreeBSD OS, on which you want to install the NSWL client.
3. To install the NSWL package, run the following command:

```
pkg_add nswl_bsd-9.3-51.5.tgz
```

This command extracts the files and installs them in the following directories.

```
1 - /usr/local/netscaler/etc
2 - /usr/local/netscaler/bin
3 - /usr/local/netscaler/samples
```

1. To uninstall the NSWL package, run the following command:

```
pkg_delete NSweblog
```

2. To verify that the package is installed, run the following command:

```
pkg_info | grep NSweblog
```

## Install the NSWL client on Mac

To install the NSWL client, perform the following operations on the system where you downloaded the package.

1. Extract the `nswl_macos-<release number>-<build number>.tgz` file from the package.
2. Copy the extracted file to a system, running macOS, on which you want to install the NSWL client.
3. To install the NSWL package, run the following command:

```
pkg_add nswl_macos-9.3-51.5.tgz
```

This command extracts the files and installs them in the following directories:

- /usr/local/netscaler/etc
- /usr/local/netscaler/bin
- /usr/local/netscaler/samples

1. To uninstall the NSWL package, run the following command:

```
pkg_delete NSweblog
```

2. To verify that the package is installed, run the following command:

```
pkg_info | grep NSweblog
```

## Install NSWL client on Windows

To install the NSWL client, perform the following operations on the system where you downloaded the package.

1. Extract the `nswl_win-<release number>-<build number>.zip` file from the package.
2. Copy the extracted file to a Windows system on which you want to install the NSWL client.
3. On the Windows system, unzip the file in a directory (referred as `<NSWL-HOME>`). The following directories are extracted: `/bin`, and `/etc` and `/samples`.
4. At the command prompt, run the following command from the `<NSWL-HOME>\bin` directory:

```
nswl -install -f <directorypath>\log.conf
```

Where,

Directory path refers to the path of the configuration file (log.conf). By default, the file is in the <NSWL-HOME> and /etc directory. You can copy the configuration file to any other directory.

**Note**

To uninstall the NSWL client, at the command prompt, run the following command from the <NSWL-HOME>\bin directory:

```
1 > nswl -remove
```

## Install NSWL client on AIX system

To install the NSWL client, perform the following operations on the system where you downloaded the package.

1. Extract the `nswl_aix-<release number>-<build number>.rpm` file from the package.
2. Copy the extracted file to a system, running AIX OS, on which you want to install the NSWL client.
3. To install the NSWL package, run the following command:

```
rpm -i nswl_aix-9.3-51.5.rpm
```

This command extracts the files and installs them in the following directories.

- /usr/local/netscaler/etc
- /usr/local/netscaler/
- usr/local/netscaler/samples

1. To uninstall the NSWL package, run the following command:

```
rpm -e NSweblog
```

2. To get more information about the Weblog RPM file, run the following command:

```
rpm -qpi *.rpm
```

3. To view the installed Web server logging files, run the following command:

```
rpm -qpl *.rpm
```

## Configure NSWL client

May 2, 2023

After you install the NSWL client, you can configure the NSWL client using the `nswl` executable. These configurations are stored in the NSWL client configuration file (`log.conf`).

**Note:**

You can further customize logging on the NSWL client by making more modifications to the NSWL configuration file (`log.conf`). For details, see [Customizing Logging on the NSWL Client System](#).

The following table describes the commands that you can use to configure the NSWL client.

| NSWL command                                                                    | Specifies                                                                                                                                                                                                                                                                               |
|---------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>nswl -help</code>                                                         | The available NSWL help options.                                                                                                                                                                                                                                                        |
| <code>nswl -addns -f</code><br><path-to-configuration-file>                     | The system that gathers the log transaction data. You are prompted to enter the IP address of the NetScaler appliance. Enter a valid user name and password.                                                                                                                            |
| <code>nswl -verify -f</code><br><path-to-configuration-file>                    | Check for syntax or semantic errors in the configuration file.                                                                                                                                                                                                                          |
| <code>nswl -start -f</code><br><path-to-configuration-file>                     | Start the NSWL client based on the settings in the configuration file. Note: For Solaris and Linux: To start Web server logging as a background process, type the ampersand sign (&) at the end of the command.                                                                         |
| <code>nswl -stop</code> (Solaris and Linux only)                                | Stop the NSWL client if it was started as a background process; otherwise, use CTRL+C to stop Web server logging.                                                                                                                                                                       |
| <code>nswl -install -f</code><br><path-to-configuration-file><br>(Windows only) | Install the NSWL client as a service in Windows.                                                                                                                                                                                                                                        |
| <code>nswl -startservice</code> (Windows only)                                  | Start the NSWL client by using the settings in the configuration file specified in the <code>nswl install</code> option. You can also start NSWL client from <b>Start &gt; Control Panel &gt; Services</b> . Note: The NSWL log files are created in <code>C:\Windows\SysWOW64</code> . |
| <code>nswl -stopservice</code> (Windows only)                                   | Stops the NSWL client.                                                                                                                                                                                                                                                                  |
| <code>nswl -remove</code>                                                       | Remove the NSWL client service from the registry.                                                                                                                                                                                                                                       |

Run the following commands from the directory in which the NSWL executable is located:

- **Windows:** `\ns\bin`
- **Solaris and Linux:** `\usr\local\netscaler\bin`

The Web server logging configuration files are located in the following directory path:

- **Windows:** `\ns\etc`
- **Solaris and Linux:** `\usr\local\netscaler\etc`

The NSWL executable is started as `.\nswl` in Linux and Solaris.

## Add the IP addresses of the NetScaler appliance

In the NSWL client configuration file (`log.conf`), add the NetScaler IP address (NSIP) from which the NSWL client starts collecting logs.

To add the NSIP address of the NetScaler appliance

1. At the client system command prompt, type:

```
nswl -addns -f < directorypath > \log.conf
< directorypath >: Specifies the path to the configuration file (
log.conf).
```

2. At the next prompt, enter the following information:

- **NSIP:** Specify the IP address of the NetScaler appliance.
- **User name and Password:** Specify the nsroot user credentials of the NetScaler appliance.

**Note:**

Any system user with logging privilege enabled supports this functionality.

**Note:**

If you add multiple NetScaler IP addresses (NSIP), and later you do not want to log all of NetScaler System Log details, you can delete the NSIPs manually by removing the NSIP statement at the end of the `log.conf` file. During a failover setup, you must add both primary and secondary NetScaler IP addresses to the `log.conf` by using the command. Before adding the IP address, make sure that the user name and password exist on the NetScaler appliances.

## Verify the NSWL configuration file

To make sure that logging works correctly, check the NSWL configuration file (`log.conf`) on the client system for syntax errors.

To verify the configuration in the NSWL configuration file

At the client system command prompt, type:

```
nswl -verify -f <directorypath>\log.conf
```

< directorypath>: Specifies the path to the configuration file (log.conf).

## Run NSWL Client

Start Web server logging

At the client system command prompt, type:

```
nswl -start -f <directorypath>\log.conf
```

<directorypath>: Specifies the path to the configuration file (log.conf).

Stop Web server logging started as a background process on the Solaris or Linux operating systems

At the command prompt, type:

```
nswl -stop
```

To stop Web server logging started as a service on the Windows operating system

At the command prompt, type:

```
nswl -stopservice
```

## Customize logging on the NSWL client system

October 17, 2024

You can customize logging on the NetScaler Web Logging (NSWL) client system by making more modifications to the NSWL client configuration file (log.conf). Use a text editor to modify the log.conf configuration file on the client system.

To customize logging, use the configuration file to define filters and log properties.

- **Log filters.** Filter log information based on the host IP address, domain name, and host name of the Web servers.
- **Log properties.** Each filter has an associated set of log properties. Log properties define how to store the filtered log information.

## Sample configuration file

Following is a sample configuration file:

```
1 #####
2 # This is the NSWL configuration file
3 # Only the default filter is active
4 # Remove leading # to activate other filters
5 #####
6 #####
7 # Default filter (default on)
8 # W3C Format logging, new file is created every hour or on reaching 10
9 MB file size,
10 # and the file name is Exyymmdd.log
11 #####
12 Filter default
13 begin default
14 logFormat W3C
15 logInterval Hourly
16 logFileSizeLimit 10
17 logFilenameFormat Ex%`{
18 `%y%m%d }
19 t.log
20 end default
21 #####
22 # NetScaler caches example
23 # CACHE_F filter covers all the transaction with HOST name www.
24 netscaler.com and the listed server ip's
25 #####
26 #Filter CACHE_F HOST www.netscaler.com IP 192.168.100.89 192.168.100.95
27 192.168.100.52 192.168.100.53 ON
28 #####
29 # netscaler origin server example
30 # Not interested in Origin server to Cache traffic transaction logging
31 #####
32 #Filter ORIGIN_SERVERS IP 192.168.100.64 192.168.100.65 192.168.100.66
33 192.168.100.67 192.168.100.225 192.168.100.226 192.168.
34 100.227 192.168.100.228 OFF
35 #####
36 # netscaler image server example
37 # all the image server logging.
38 #####
39 #Filter IMAGE_SERVER HOST www.netscaler.images.com IP 192.168.100.71
40 192.168.100.72 192.168.100.169 192.168.100.170 192.168.10
41 0.171 ON
42 #####
43 # NCSA Format logging, new file is created every day midnight or on
44 reaching 20MB file size,
45 # and the file name is /datadisk5/netscaler/log/NS<hostname>/Nsmmddy.
46 log.
47 # Exclude objects that ends with .png .jpg .jar.
48 #####
49 #begin ORIGIN_SERVERS
```



```
43 # logFormat NCSA
44 # logInterval Daily
45 # logFileSizeLimit 40
46 # logFilenameFormat /datadisk5/ORGIN/log/%v/NS%`{
47 `m%d%y }
48 t.log
49 # logExclude .png .jpg .jar
50 #end ORIGIN_SERVERS
51
52 #####
53 # NCSA Format logging, new file is created every day midnight or on
54 # reaching 20MB file size,
55 # and the file name is /datadisk5/netscaler/log/NS<hostname>/Nsmdddy.
56 # log with log record timestamp as GMT.
57 #####
58 #begin CACHE_F
59 # logFormat NCSA
60 # logInterval Daily
61 # logFileSizeLimit 20
62 # logFilenameFormat /datadisk5/netscaler/log/%v/NS%`{
63 `m%d%y }
64 t.log
65 # logtime GMT
66 #end CACHE_F
67
68 #####
69 # W3C Format logging, new file on reaching 20MB and the log file path
70 # name is
71 # atadisk6/netscaler/log/server's ip/Exmmydd.log with log record
72 # timestamp as LOCAL.
73 #####
74 #begin IMAGE_SERVER
75 # logFormat W3C
76 # logInterval Size
77 # logFileSizeLimit 20
78 # logFilenameFormat /datadisk6/netscaler/log/%AEx%`{
79 `m%d%y }
80 t
81 # logtime LOCAL
82 #end IMAGE_SERVER
83
84 #####
85 # Virtual Host by Name firm, can filter out the logging based on the
86 # host name by,
87 #####
88 #Filter VHOST_F IP 10.101.2.151 NETMASK 255.255.255.0
89 #begin VHOST_F
90 # logFormat W3C
91 # logInterval Daily
92 # logFileSizeLimit 10
93 logFilenameFormat /ns/prod/vhost/%v/Ex%`{
94 `m%d%y }
```

```

91 t
92 #end VHOST_F
93
94 ##### END FILTER CONFIGURATION #####

```

### Create filters

You can use the default filter definition in the configuration file (log.conf), or you can modify the filter or create a filter. You can create more than one log filter.

**Note:**  
 Consolidated logging, which logs transactions for which no filter is defined, uses the default filter if it is enabled. Consolidated logging of all servers can be done by defining only the default filter.

If the server hosts multiple websites and each website has its own domain name, and each domain is associated with a virtual server, you can configure Web server logging to create a separate log directory for each website. The following table displays the parameters for creating a filter.

Table 1. Parameters for creating a filter

| Parameter          | Specifies                                                                                                                                                                               |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| filterName         | Name of the filter. The filter name can include alphanumeric characters and cannot be longer than 59 characters. Filter names longer than 59 characters are truncated to 59 characters. |
| Host name          | Host name of the server for which the transactions are being logged.                                                                                                                    |
| IP ip              | IP address of the server for which transactions are to be logged (for example, if the server has multiple domains that have one IP address).                                            |
| IP ip 2...ip n     | Multiple IP addresses (for example, if the server domain has multiple IP addresses).                                                                                                    |
| ip6 IP             | IPv6 address of the server for which transactions are to be logged.                                                                                                                     |
| IP ip NETMASK mask | IP addresses and netmask combination to be used on a subnet.                                                                                                                            |
| ON   OFF           | Enable or disable the filter to log transactions. If no argument is selected, the filter is enabled (ON).                                                                               |

To create a filter, enter the following command in the log.conf file:

- `filter <filterName> <HOST name> | [IP<ip> ] | [IP<ip 2...ip n> ] | <IP ip NETMASK mask> [ON | OFF]`
- `filter <filterName> <HOST name> | [IP6 ip/<prefix length>] [ON | OFF]`

### Create a filter for a virtual server

To create a filter for a virtual server, enter the following command in the log.conf file:

```
filter <filterName> <VirtualServer IP address>
```

Example

In the following example, you specify an IP address of 192.168.100.0 and netmask of 255.255.255.0. The filter applies to IP addresses 192.168.100.1 through 192.168.100.254.

```
1 Filter F1 HOST www.netscaler.com ON
2 Filter F2 HOST www.netscaler.com IP 192.168.100.151 ON
3 Filter F3 HOST www.netscaler.com IP 192.168.100.151 192.165.100.152 ON
4 Filter F4 IP 192.168.100.151
5 Filter F5 IP 192.168.100.151 HOST www.netscaler.com OFF
6 Filter F6 HOST www.netscaler.com HOST www.xyz.com HOST www.abcxyz.com
 IP 192.168.100.200 ON
7 Filter F7 IP 192.250.100.0 NETMASK 255.255.255.0
8 Filter F8 HOST www.xyz.com IP 192.250.100.0 NETMASK 255.255.255.0 OFF
9 For creating filters for servers having IPv6 addresses.
10 Filter F9 2002::8/112 ON
11 Filter F10 HOST www.abcd.com IP6 2002::8 ON
```

### Specify log properties

Log properties are applied to all log entries associated with the filter. The log property definition begins with the keyword `BEGIN` and ends with `END` as illustrated in the following example:

```
1 BEGIN <filtername>
2 logFormat ...
3 logFilenameFormat ...
4 logInterval ...
5 logFileSize
6 logExclude
7 logTime ...
8 END
```

Entries in the definition can include the following:

- **LogFormat** specifies the Web server logging feature that supports NCSA, W3C Extended, and custom log file formats.

By default, the `logformat` property is `w3c`. To override, enter `custom` or `NCSA` in the configuration file, for example:

```
1 LogFormat NCSA
```

**Note:**

For the NCSA and custom log formats, local time is used to time stamp transactions and for file rotation.

- **LogInterval** specifies the intervals at which new log files are created. Use one of the following values:
  - Hourly: A file is created every hour.
  - Daily: A file is created every day at midnight. Default value.
  - Weekly: A file is created every Sunday at midnight.
  - Monthly: A file is created on the first day of the month at midnight.
  - None: A file is created only once, when Web server logging starts.</span>

**Example:**

```
1 LogInterval Daily
```

**LogFileSizeLimit** specifies the maximum size of the log file in MB. It can be used with any log interval (weekly, monthly, and so on.) A file is created when the maximum file size limit is reached or when the defined log interval time elapses.

To override this behavior, specify the size as the `loginterval` property so that a file is created only when the log file size limit is reached.

The default `LogFileSizeLimit` is 10 MB.

**Example:**

```
1 LogFileSizeLimit 35
```

- **LogFilenameFormat** specifies the file name format of the log file. The name of the file can be of the following types:
  - Static: Specifies a constant string that contains the absolute path and file name.
  - Dynamic: Specifies an expression containing the following format:
    - \* Server IP address
    - \* Date (`%{format}t`)
    - \* URL suffix (`%x`)

- Host name (%v)

**Example:**

```
1 LogFileNameFormat Ex%` {
2 `%m%d%y }
3 t.log
```

This command creates the first file name as Exmdddy.log, then every hour creates a file with a file name: Exmdddy.log.0, Exmdddy.log.1,..., Exmdddy.log.n.

**Example:**

```
1 LogInterval size
2 LogFileSize 100
3 LogFileNameFormat Ex%` {
4 `%m%d%y }
5 t
```

**Caution:**

The date format %t specified in the LogFilenameFormat command overrides the log interval property for that filter. To prevent a new file being created every day instead of when the specified log file size is reached, do not use %t in the LogFilenameFormat.

- **LogExclude** prevents logging of transactions with the specified file name extensions.

**Example:**

```
1 LogExclude.html
```

This command creates a log file that excludes log transactions for \*.html files.

**LogTime** specifies log time as either GMT or LOCAL.

The defaults are:

- NCSA log file format: LOCAL
- W3C log file format: GMT.

**Understand NCSA and W3C log formats**

The NetScaler supports the following standard log file formats:

- NCSA Common Log Format
- W3C Extended Log Format

## NCSA Common log format

If the log file format is NCSA, the log file displays log information in the following format:

```
1 Client_IP_address -User_Name [Date:Time -TimeZone] "Method Object
 HTTP_version" HTTP_StatusCode BytesSent
```

To use the NCSA Common log format, enter **NCSA** in the LogFormat argument in the `log.conf` file.

The following table describes the NCSA Common log format.

| Argument          | Specifies                                          |
|-------------------|----------------------------------------------------|
| Client_IP_address | The IP address of the client computer.             |
| User Name         | The user name.                                     |
| Date              | The date of the transaction.                       |
| Time              | The time when the transaction was completed.       |
| Time Zone         | The time zone (Greenwich Mean Time or local time). |
| Method            | The request method (for example; GET, POST).       |
| Object            | The URL.                                           |
| HTTP_version      | The version of HTTP used by the client.            |
| HTTP_StatusCode   | The status code in the response.                   |
| Bytes Sent        | The number of bytes sent from the server.          |

## W3C extended log format

An extended log file contains a sequence of lines containing ASCII characters terminated by either a Line Feed (LF) or the sequence Carriage Return Line Feed (CRLF.) Log file generators must follow the line termination convention for the platform on which they are run.

Log analyzers must accept either LF or CRLF form. Each line might contain either a directive or an entry. If you want to use the W3C Extended log format, enter W3C as the Log-Format argument in the `log.conf` file.

By default, the standard W3C log format is defined internally as the custom log format, shown as follows:

```
1 %` {
2 `%Y-%m-%d%H:%M:%S }
3 t %a %u %S %A %p %m %U %q %s %j %J %T %H %+{
```

```
4 user-agent }
5 i %+{
6 cookie }
7 i %+{
8 referer }
9 i
```

You can also change the order or remove some fields in this W3C log format. For example:

```
1 logFormat W3C %`{
2 ` %Y-%m-%d%H:%M:%S }
3 t %m %U
```

W3C log entries are created with the following format:

```
1 #Version: 1.0
2 #Fields: date time cs-method cs-uri
3 #Date: 12-Jun-2001 12:34
4 2001-06-12 12:34:23 GET /sports/football.html 2001-06-12 12:34:30
5 GET /sports/football.html
```

### Entries

Entries consist of a sequence of fields relating to a single HTTP transaction. Fields are separated by white space. Citrix recommends the use of tab characters. If a field in a particular entry is not used, a dash (-) marks the omitted field.

### Directives

See the [Directives](#) table for the information about the logging process. Lines beginning with the pound sign (#) contain directives.

### Example:

The following sample log file shows the log entries in W3C Extended log format:

```
1 #Version: 1.0
2 #Fields: time cs-method cs-uri
3 #Date: 12-Jan-1996 00:00:00
4 00:34:23 GET /sports/football.html
5 12:21:16 GET /sports/football.html
6 12:45:52 GET /sports/football.html
7 12:57:34 GET /sports/football.html
```

## Fields

The Fields directive lists a sequence of field identifiers that specify the information recorded in each entry. Field identifiers might have one of the following forms:

- **identifier:** Relates to the transaction as a whole.
- **prefix-identifier:** Relates to information transfer between parties defined by the value prefix.
- **prefix (header):** Specifies the value of the HTTP header field header for transfer between parties defined by the value prefix. Fields specified in this manner always have the type.

The following table describes defined prefixes.

| Prefix | Specifies                                        |
|--------|--------------------------------------------------|
| c      | Client                                           |
| s      | Server                                           |
| r      | Remote                                           |
| cs     | Client to server                                 |
| sc     | Server to client                                 |
| sr     | Server to remote server (prefix used by proxies) |
| rs     | Remote server to server (prefix used by proxies) |
| x      | Application-specific identifier                  |

### Examples:

The following examples are defined identifiers that use prefixes:

**cs-method:** The method in the request sent by the client to the server.

**sc(Referer):** The [Referer](#) field in the reply.

**c-ip:** The IP address of the client.

### Identifiers

The following table describes the W3C Extended log format identifiers that do not require a prefix.

| Identifier | Description                                 |
|------------|---------------------------------------------|
| date       | The date on which the transaction was done. |



| Identifier | Description                                                                |
|------------|----------------------------------------------------------------------------|
| time       | The time when the transaction is done.                                     |
| time-taken | The time taken (in seconds) for the transaction to complete.               |
| bytes      | The number of bytes transferred.                                           |
| cached     | Records whether a cache hit has occurred. A zero indicates a cache misses. |

The following table describes the W3C Extended log format identifiers that require a prefix.

| Identifier | Description                              |
|------------|------------------------------------------|
| IP         | The IP address and the port number.      |
| DNS        | The DNS name.                            |
| status     | The status code.                         |
| comment    | The comment returned with a status code. |
| method     | The method.                              |
| url        | The URL.                                 |
| url-stem   | The stem portion of the URL.             |
| url-query  | The query portion of the URL.            |

The W3C Extended Log file format allows you to choose log fields. These fields are shown in the following table.

| Field        | Description                                |
|--------------|--------------------------------------------|
| Date         | The date on which the transaction is done. |
| Time         | The time when the transaction is done.     |
| Client IP    | The IP address of the client.              |
| User Name    | The user name.                             |
| Service Name | The service name, which is always HTTP.    |
| Server IP    | The server IP address.                     |
| Server Port  | The server port number                     |

---

| Field            | Description                                                                           |
|------------------|---------------------------------------------------------------------------------------|
| Method           | The request method (for example; GET, POST).                                          |
| Url Stem         | The URL stem.                                                                         |
| Url Query        | The query portion of the URL.                                                         |
| HTTP Status      | The status code in the response.                                                      |
| Bytes Sent       | The number of bytes sent to the server (request size, including HTTP headers).        |
| Bytes Received   | The number of bytes received from the server (response size, including HTTP headers). |
| Time Taken       | The time taken for a transaction to complete, in seconds.                             |
| Protocol Version | The version number of HTTP being used by the client.                                  |
| User Agent       | The <b>User-Agent</b> field in the HTTP protocol.                                     |
| Cookie           | The <b>Cookie</b> field of the HTTP protocol.                                         |
| Referer          | The <b>Referer</b> field of the HTTP protocol.                                        |

---

## Create a custom log format

You can customize the display format of the log file data manually or by using the NSWL library. By using the custom log format, you can derive most of the log formats that Apache currently supports.

### Create a custom log format by using the NSWL library

Use one of the following NSWL libraries depending on whether the NSWL executable has been installed on a Windows or Solaris host computer:

- **Windows:** The `nswl.lib` library in the `\ns\bin` directory on the system manager host computer.
- **Solaris:** The `libnswl.a` library in `usr/local/netscaler/bin`.

1. Add the following two C functions defined by the system in a C source file:

`ns_userDefFieldName()`: This function returns the string that must be added as a custom field name in the log record.

`ns_userDefFieldVal()`: This function implements the custom field value, then returns it as a string that must be added at the end of the log record.

2. Compile the file into an object file.
3. Link the object file with the NSWL library (and optionally, with third party libraries) to form a new NSWL executable.
4. Add a %d string at the end of the logFormat string in the configuration file (log.conf).

**Example:**

```

1 #####
2 # A new file is created every midnight or on reaching 20MB file size,
3 # and the file name is
4 /datadisk5/netscaler/log/NS<hostname>/Nsmdddy.log and create
5 digital
6 #signature field for each record.
7 BEGIN CACHE_F
8 logFormat custom "%a - "%{
9 user-agent }
10 i" [%d/%B/%Y %T -%g] "%x"
11 %s %b%{
12 referrer }
13 i "%{
14 user-agent }
15 i" "%{
16 cookie }
17 i" %d "
18 logInterval Daily
19 logFileSizeLimit 20
20 logFilenameFormat
21 /datadisk5/netscaler/log/%v/NS%` {
22 `%m%d%y }
23 t.log
24 END CACHE_F

```

**Create a Custom log format manually**

To customize the format in which log file data must appear, specify a character string as the argument of the **LogFormat log** property definition. The following is an example where character strings are used to create a log format:

```

1 LogFormat Custom ""%a - "%{
2 user-agent }
3 i" "[%d/%m/%Y]t %U %s %b %T"

```

- The string can contain the “c” type control characters \n and \t to represent new lines and tabs.
- Use the Esc key with literal quotes and backslashes.

The characteristics of the request are logged by placing % directives in the format string, which are replaced in the log file by the values.

If the %v (Host name) or %x (URL suffix) format specifier is present in a log file name format string, the following characters in the file name are replaced by an underscore symbol in the log configuration file name:

" \* . / : < > ? \ |

Characters whose ASCII values lie in the range of 0-31 are replaced by the following:

%<ASCII value of character in hexadecimal>.

For example, the character with ASCII value 22 is replaced by %16.

**Caution:**

If the %v format specifier is present in a log file name format string, a separate file is opened for each virtual host. To ensure continuous logging, the maximum number of files that a process can have open must be sufficiently large. See your operating system documentation for a procedure to change the number of files that can be opened.

## Create Apache log formats

You can derive from the custom logs most of the log formats that Apache currently supports. The custom log formats that match Apache log formats are:

NCSA/combined: LogFormat custom %h %l %u [%t] "%r"%s %B "%{referer}i" "%{user-agent}i"

NCSA/Common: LogFormat custom %h %l %u [%t] "%r"%s %B

Referer Log: LogFormat custom "%{referer}i" -> %U

User agent: LogFormat custom %{user-agent}i

Similarly, you can derive the other server log formats from the custom formats.

## Arguments for defining a custom log format

The following table describes the custom log format.

---

| Argument | Specifies            |
|----------|----------------------|
| %a       | Remote IPv4 address. |
| %A       | Local IPv4 address.  |
| %a6      | Remote IPv6 address. |
| %A6      | Local IPv6 address.  |

| Argument    | Specifies                                                                                                                                                                                                                                 |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| %B          | Bytes sent, excluding the HTTP headers (response size).                                                                                                                                                                                   |
| %b          | Bytes received, excluding the HTTP headers (request size).                                                                                                                                                                                |
| %d          | User-defined field.                                                                                                                                                                                                                       |
| %K          | Client port information.                                                                                                                                                                                                                  |
| %e1         | Value of the first custom HTTP request header.                                                                                                                                                                                            |
| %e2         | Value of the second custom HTTP request header.                                                                                                                                                                                           |
| %E1         | Value of the first custom HTTP response header.                                                                                                                                                                                           |
| %E2         | Value of the second custom HTTP response header. Note: For instructions on how to export customHTTP headers, see <a href="#">Configuring the NetScaler for Web Server Logging</a>                                                         |
| %g          | Greenwich Mean Time offset (for example, -0800 for Pacific Standard Time).                                                                                                                                                                |
| %h          | IPv4 address of a remote host.                                                                                                                                                                                                            |
| %h6         | IPv6 address of a remote host.                                                                                                                                                                                                            |
| H           | Request protocol.                                                                                                                                                                                                                         |
| % {Foobar}i | Contents of the Foobar: header line(s) in the request sent to the server. The system supports the User -Agent, Referer, and cookie headers. The + after the % in this format informs the logging client to use the + as a word separator. |
| %j          | Bytes received, including headers(request size).                                                                                                                                                                                          |
| %J          | Bytes sent, including headers (response size).                                                                                                                                                                                            |
| %l          | Remote log name (from identd, if supplied).                                                                                                                                                                                               |
| %m          | Request method.                                                                                                                                                                                                                           |
| %M          | Time taken to serve the request (in microseconds).                                                                                                                                                                                        |
| % {Foobar}o | Contents of Foobar: header line(s) in the reply. USER -AGENT, Referrer, and cookie headers (including set cookie headers) are supported.                                                                                                  |
| %p          | Canonical port of the server serving the request.                                                                                                                                                                                         |

---

| Argument    | Specifies                                                                                                                  |
|-------------|----------------------------------------------------------------------------------------------------------------------------|
| %P          | The admin partition.                                                                                                       |
| %q          | Query string (prefixed with a question mark (?) if a query string exists).                                                 |
| %r          | First line of the request.                                                                                                 |
| %s          | Requests that were redirected internally, this is the status of the original request.                                      |
| %t          | Time, in common log format (Standard English time format).                                                                 |
| % {format}t | Time, in the form given by format, must be in the strftime(3) format. For format descriptions, see Time Format Definition. |
| %T          | Time taken to serve the request, in seconds.                                                                               |
| %u          | Remote user (from auth; may be bogus if return status (%s) is 401).                                                        |
| %U          | URL path requested.                                                                                                        |
| %v          | Canonical name of the server serving the request.                                                                          |
| %V6         | Virtual server IPv6 address in the system, if load balancing, content switching, and/or cache redirection is used.         |
| %D          | Prints the HTTP transaction ID.                                                                                            |
| %L          | Transaction time in milliseconds.                                                                                          |
| %R          | HTTP Reason string mapped to status code.                                                                                  |
| %f          | Source port logging.                                                                                                       |
| %V          | Virtual Server IPv4 address.                                                                                               |

---

**Notes:**

- The virtual IP address of HTTP transaction is displayed as “-“in the following scenarios:
  - Transparent mode is enabled
  - Integrated Caching is enabled, where NetScaler responds to client from Cache
  - An error response is generated
- For instructions on how to export custom HTTP headers, see [Configuring the NetScaler for](#)

## Web Server Logging.

For example, if you define the log format as `%+{ user-agent } i`, and if the user agent value is NetScaler system Web Client, then the information is logged as NetScaler system+Web+Client. An alternative is to use double quotation marks. For example, `"%{user-agent}i"` logs it as "NetScaler system Web Client." Do not use the `\<Esc\>` key on strings from `%.r`, `%.i` and, `%.o`. It complies with the requirements of the Common Log Format. Clients can insert control characters into the log. Therefore, you must take care when working with raw log files.

### Time format definition

The following table describes the time format definition to know about the format part of the `%{ format } t` string described in the Custom Log Format table. Values within brackets ( [ ] ) show the range of values that appear. For example, [1,31] in the %d description in the following table shows %d ranges from 1 to 31.

| Argument | Specifies                                                                                                                                |
|----------|------------------------------------------------------------------------------------------------------------------------------------------|
| %%       | The same as %.                                                                                                                           |
| %a       | The abbreviated name of the weekday for the locale.                                                                                      |
| %A       | The full name of the weekday for the locale                                                                                              |
| %b       | The abbreviated name of the month for the locale.                                                                                        |
| %B       | The full name of the month for the locale.                                                                                               |
| %C       | The century number (the year divided by 100 and truncated to an integer as a decimal number [1, 99]); single digits are preceded by a 0. |
| %d       | User-defined field.                                                                                                                      |
| %K       | The century number (the year divided by 100 and truncated to an integer as a decimal number [1, 99]); single digits are preceded by a 0. |
| %e       | The day of month [1, 31]; single digits are preceded by a blank.                                                                         |
| %h       | The abbreviated name of the month for the locale.                                                                                        |
| %H       | The hour (24-hour clock) [0, 23]; single digits are preceded by a 0.                                                                     |

---

| Argument | Specifies                                                                                                                                          |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| %I       | The hour (12-hour clock) [1, 12]; single digits are preceded by a 0.                                                                               |
| %j       | The number of the day in the year [1, 366]; single digits are preceded by 0.                                                                       |
| %k       | The hour (24-hour clock) [0, 23]; single digits are preceded by a blank.                                                                           |
| %l       | The hour (12-hour clock) [1, 12]; single digits are preceded by a blank.                                                                           |
| %m       | The number of the month in the year [1, 12]; single digits are preceded by a 0.                                                                    |
| %M       | The minute [00, 59]; leading 0 is permitted but not required.                                                                                      |
| %n       | Inserts a new line.                                                                                                                                |
| %p       | The equivalent of either a.m. or p.m. for the locale.                                                                                              |
| %r       | The appropriate time representation in 12-hour clock format with %p                                                                                |
| %S       | The seconds [00, 61]; the range of values is [00, 61] rather than [00, 59] to allow for the occasional leap second and for the double leap second. |
| %3       | The milliseconds [000, 999]; the range of values is [000, 999].                                                                                    |
| %6       | The microseconds [000000, 999999]; the range of values is [000000, 999999].                                                                        |
| %9       | The nanoseconds [000000000, 999999999]; the range of values is [000000000, 999999999].                                                             |
| %t       | Inserts a tab.                                                                                                                                     |
| %u       | The day of the week as a decimal number [1, 7]. 1 represents Sunday, 2 represents Tuesday and so on.                                               |
| %U       | The number of the week in the year as a decimal number [00, 53], with Sunday as the first day of week 1.                                           |

---



**Note:**

If you specify a conversion that does not correspond to any of the ones described in the preceding table, or to any of the modified conversion specifications listed in the next paragraph, the behavior is undefined and returns 0.

The difference between %U and %W (and also between modified conversions %OU and %OW) is the day considered to be the first day of the week. Week number 1 is the first week in January (starting with a Sunday for %U, or a Monday for %W). Week number 0 contains the days before the first Sunday or Monday in January for %U and %W.

## Display server logs

You can configure an NSWL feature to display server logs on the console or redirect server logs to a directory on the NetScaler appliance.

There are two ways to display logs on the console (standard output):

Option 1: Display all logs on the console.

Option 2: Display only selected logs on the console with filters with `logfileformat` as `STDOUT`.

## Call Home

April 8, 2024

Appliances might sometimes fail to perform well because of software or hardware issues. In such cases, NetScaler needs to collect data and perform issue resolution before a potential impact can occur at the customer site. By enabling Call Home on your NetScaler appliance, you can automate the error notification process. Not only you avoid calling NetScaler support, raising a service request, and uploading system data before the support team can troubleshoot the issue, but support can identify and address an issue before it occurs. Call Home periodically monitors the appliance and automatically uploads data to the Citrix technical support server. In addition, the incoming Call Home data provide insights about NetScaler usage. Multiple teams within Citrix can use this data to better design, support, and implement NetScaler.

By default, Call Home is enabled on all platforms and all flavors of NetScaler (MPX, VPX, SDX). By having this feature enabled, you allow Citrix to collect NetScaler deployment and telemetry data for better implementation, and support service.

### Note

You can also see the [Call Home FAQ](#) page for information pertaining to Call Home.

## Benefits

Call Home provides the following benefits.

- Monitor hardware and software error conditions. For more information, see Monitor critical error conditions section.
- Notify critical events that impact your network.
- Send performance data and system usage details to Citrix to:
  - Analyze and improve product quality.
  - Provide real-time troubleshooting information for proactive issue identification, and faster issue resolution.

## Platform support

Call Home feature is supported on all NetScaler platforms and all appliance models (MPX, VPX, and SDX).

- NetScaler MPX: All MPX models.
- NetScaler VPX: All VPX models, including VPX appliances that obtain their license from external or central licensing pools.
- NetScaler SDX: Monitors the disk drive and assigned SSL chips for any errors or failures. The VPX instances, however, do not have access to the Power Supply Unit (PSU) and therefore their status is not monitored. In an SDX platform, you can configure Call Home either directly on an individual instance or through the SVM.

## Prerequisites

To use Call Home, the NetScaler appliance must have the following:

- **Internet connection.** Call Home requires an internet connection for the NetScaler to connect to the NetScaler support server for uploading a data archive. NetScaler uses the NSIP for communicating with [callhome.citrix.com](https://callhome.citrix.com).
- **URL.** Call Home works by exchanging traffic with [callhome.citrix.com](https://callhome.citrix.com) over SSL/TLS protocol using port 443 for bi-directional traffic.


## How Call Home works

The following figure shows a basic workflow of Call Home in a NetScaler appliance deployed at a customer site.

### Step 1: Appliance Registration



### Step 2: Trigger Based Upload

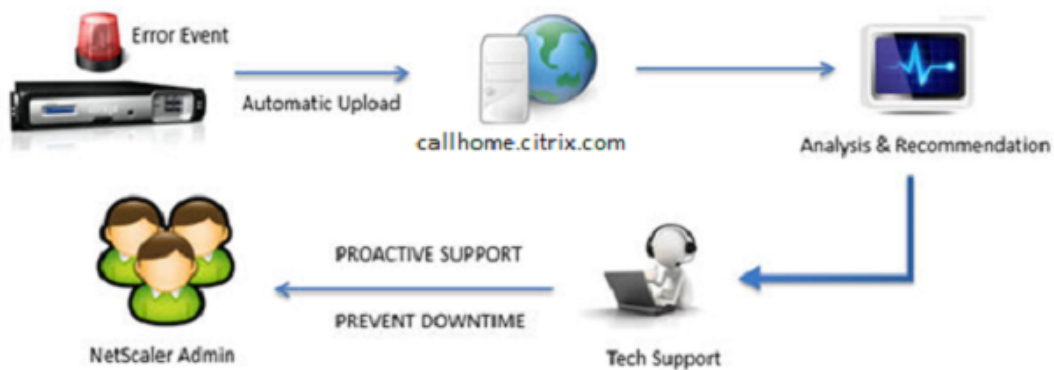

The following are the workflow of a Call Home:

- 1. Set up Internet Connectivity.** For Call Home to upload system data, your appliance must have an internet connectivity. If it does not, you can configure a proxy server configuration to provide internet connectivity. For more information, see [Configuring Call Home](#) section.
- 2. Enable Call Home.** When upgrading your appliance to the latest software through either NetScaler command interface or GUI, Call Home is enabled by default and the system delays the registration process by 24 hours. During this period, you can choose to manually disable the feature, but Citrix recommends you to have it enabled.

#### Note

If you are upgrading your appliance from an older version that explicitly has Call Home disabled, the system still enables the feature by default and displays a notification message on your first login.

In addition, if you are doing any configuration changes for an internet connectivity, you must disable and enable Call Home. It enables Call Home to register with the Citrix Insight Services (CIS) server without any failure errors.

**3. Register the NetScaler appliance on the NetScaler support Server.** When Call Home registers the appliance with the NetScaler support server, the server checks the database for the validity of the appliance serial number. If the serial number is valid, the server registers the appliance for Call Home service and sends a successful registration response. Otherwise, the server sends back a registration failure message. The basic system information is sent as a separate message. The data includes memory and CPU usage details along with the throughput numbers. The data is sent periodically as part of the heartbeat message every 7 days, by default. However, a value of less than 5 days is not recommended, because frequent uploads are not useful.

**4. Monitor critical error conditions.** Once registered, Call Home starts monitoring the appliance. The following table lists the conditions Call Home can monitor on the appliance.

| Critical Error Condition   | Description                                                                                  | Call Home Monitoring Interval                   | Corresponding SNMP Alarm Name |
|----------------------------|----------------------------------------------------------------------------------------------|-------------------------------------------------|-------------------------------|
| Compact flash drive errors | The compact flash drive on the appliance encountered read or write failures.                 | 24 hours                                        | COMPACT-FLASH-ERRORS          |
| Hard disk drive errors     | The hard drives on the appliance encountered read or write failures.                         | 24 hours                                        | HARD-DISK-DRIVE-ERRORS        |
| Power supply unit failure  | One of the power supply units on the NetScaler appliance has failed.                         | 7 seconds                                       | POWER-SUPPLY-FAILURE          |
| SSL card failure           | One of the SSL cards on the NetScaler appliance has failed.                                  | 7 seconds                                       | SSL-CARD-FAILED               |
| Warm restart               | The appliance has warm restarted due to a failure of a system process.                       | After every restart of the NetScaler appliance. | WARM-RESTART-EVENT            |
| Memory anomaly error       | Memory utilization progressively increases above its normal limit and exceeds the threshold. | 1 day                                           | No SNMP alarm                 |

| Critical Error Condition | Description                                                          | Call Home Monitoring Interval | Corresponding SNMP Alarm Name                      |
|--------------------------|----------------------------------------------------------------------|-------------------------------|----------------------------------------------------|
| Rate limit packet drop   | The throughput limits or packets-per-second (pps) limits is reached. | 7 seconds                     | PF-RL-PPS-PKTS-DROPPED,<br>PF-RL-RATE-PKTS-DROPPED |

**5. Upload Call Home data.** If any one of the previous critical conditions is identified on the appliance, the Call Home feature automatically notifies the NetScaler support. The support archives are uploaded to the NetScaler support server. Also, you can configure the CALLHOME-UPLOAD-EVENT SNMP alarm to generate an SNMP alert whenever Call Home upload happens. The SNMP alert notifies the local administrator about the critical event.

#### Note

Call Home creates the Call Home tar file and uploads it to the Citrix tech support server for only the first occurrence of a particular error condition since the last reboot. If you want the appliance to send alerts each time a particular error condition occurs, configure the corresponding SNMP alarm for the error condition.

**6. Create Service Request.** Call Home automatically creates a service request for all the critical hardware related events. The events are classified as; power supply failure, SSL card failure, hard disk drive errors, and compact flash errors. For other errors, after you review the System Logs, you can contact the NetScaler support team to raise a service request for investigation.

## Configuring Call Home

To configure Call Home, verify the internet connectivity on the appliance and ensure that a DNS name-server is configured. If there is no internet connection, configure a proxy server or service. Then, enable Call Home on the appliance and verify the registration status of the appliance with the NetScaler support server. Once registered, Call Home can monitor and upload data. In addition, you can configure SNMP alarms to notify the administrator at the customer site.

To configure Call Home, you can use either the NetScaler command interface or the GUI to do the following tasks:

- Enable Call Home.
- Configure Call Home for optional proxy server parameters.
- Verify Call Home Registration Status.
- View errors and timestamp details.
- Configure SNMP Alarms.

## To configure Call Home by using the NetScaler command interface

The NetScaler command interface enables you to do the following:

### Enabling Call Home

At the command prompt, type:

```
enable ns feature callhome
```

Configuring Call Home for optional proxy server parameters

Call Home enables you to configure the optional proxy server for internet connectivity. You can either configure a proxy server with IP address and port or configure a proxy authentication service with one-way or two-way authentication.

To configure optional proxy server with IP address and port

At the command prompt, type:

```
set callhome -proxyMode (YES | NO)[-IPAddress <ip_addr|ipv6_addr
|*>] [-port <port |*>]
```

```
1 set callhome - proxyMode YES - IPAddress 10.102.167.33 - port 80
```

#### Note

Call Home uses the proxy server only when you set the proxy-mode parameter to YES. If you set it to NO, the proxy functionality does not work, even if the IP address and port are configured. The port number must be for an HTTP service, not for an HTTPS service.

To configure optional proxy authentication service

This mode provides two types of security authentication: one-way and two-way. To set up either type, you must configure an SSL service. For more information, see [Configuring an SSL Service](#) topic.

In one-way authentication, only the NetScaler appliance authenticates the proxy server. In two-way authentication, the NetScaler appliance authenticates the proxy server and the proxy server, in turn, authenticates the appliance.

To configure proxy authentication service

At the command prompt, type:

```
set callhome -proxyMode (YES | NO)[-proxyAuthService <string>]
```

```
1 set callhome - proxyMode YES - proxyAuthService callhome_proxy
```

To configure one-way proxy server authentication

Do the following tasks to configure one-way proxy server authentication.

1. Create an SSL service.
2. Bind a CA certificate to the service.
3. Bind an HTTPS Monitor to the service.
4. Configure Call Home to use the SSL service.

To configure two-way proxy server authentication

Do the following tasks to configure two-way proxy server authentication.

1. Create an SSL service
2. Bind a CA certificate to the service.
3. Bind a Client Certificate.
4. Bind an HTTPS Monitor to the service.
5. Configure Call Home to use the SSL service.

Verifying Call Home Registration status

At the command prompt, type:

```

1 show callhome
2
3 show callhome
4
5 Registration with Citrix upload server SUCCESSFUL
6
7 Mode: Default
8
9 Contact email address: exampleadmin@example.com
10
11 Heartbeat Custom Interval (days): 7
12
13 Proxy Mode: Yes
14
15 Proxy IP Address:10.102.29.200
16
17 Proxy Authentication Service:
18
19 Proxy Port: 80
20
21 Trigger event State First occurrence
22 Latest occurrence
23 -----
24
25 1) Warm boot Enabled N/A
26 ..
27 2) Compact flash errors Enabled ..
28 ..

```

|    |                              |            |     |
|----|------------------------------|------------|-----|
| 29 | 3) Hard disk drive errors    | Enabled .. |     |
|    |                              | ..         |     |
| 30 |                              |            |     |
| 31 | 4) SSL card failure          | N/A        | N/A |
|    |                              | N/A        |     |
| 32 |                              |            |     |
| 33 | 5) Power supply unit failure | N/A        | N/A |
|    |                              | N/A        |     |
| 34 |                              |            |     |
| 35 | 6) Rate limit packet drops   | Enabled .. |     |
|    |                              | ..         |     |
| 36 |                              |            |     |
| 37 | 7) Memory anomaly            | Enabled .. |     |
|    |                              | ..         |     |
| 38 |                              |            |     |
| 39 | Done                         |            |     |

**Note**

If the Call Home fails to register with CIS, the appliance displays an error message.

**Enabling SNMP Alarms**

The NetScaler appliance provides a set of error condition entities called *SNMP alarms*. When an error condition in an SNMP alarm is met, the appliance generates SNMP trap messages that are sent to the configured trap listeners. For example, when the SSL-CARD-FAILED alarm is enabled, a trap message is generated and sent to the trap listener. The trap message is sent whenever there is an SSL card failure on the appliance. For more information, see [SNMP](#).

At the command prompt, type:

```
enable snmp alarm <trapName>
```

```
show snmp alarm <trapName>
```

**To configure Call Home by using GUI**

To verify if the Call Home feature is enabled by default in the GUI

1. Navigate to **Configuration > System > Settings**.
2. In the **details** pane, click **Configure Advanced features** link.
3. In the **Configure Advanced Features** page, **Call Home** option must display as enabled.

To enable Call Home by using GUI

1. Navigate to **Configuration > System > Settings**.
2. In the **details** pane, click **Configure Advanced features** link and select **Callhome** option.

To configure Call Home for optional proxy mode authentication by using GUI



1. You can use any of the two ways to access the Call Home page:
  - a) Navigate to **System > System Information**.
  - b) Navigate to **System > Diagnostics**.
    - i. In the details pane, under **Technical Support Tools**, select **Call Home**.
2. On the **Configure Call Home** page, set the following parameters.
  - a) **Mode**. Call Home mode of operation. Possible types: Default, Citrix Service Provider (CSP) deployment.

**Note**

This option is not user configurable. The mode is automatically determined and set based on the type of NetScaler deployment.
  - b) **Email address**. Email address of the contact administrator at the customer site.
  - c) **CallHome Heartbeats Interval (days)**. Monitoring interval (in days) between Call Home heartbeats. Minimum value=1 and Maximum value=30.
  - d) **Enable Call Home**. Enable or disable the Call Home feature to view the status of appliance registration on the NetScaler support server.
  - e) **Proxy Mode**. If you do not have an internet connectivity, enable proxy mode and set the optional proxy parameters.
  - f) **Proxy Server**. If you set the proxy mode by using a proxy server, specify the server IP address.
    - i. **Proxy Service**. If you set the proxy mode by using a proxy service, specify the service name.
    - ii. **IP Address**. IP address of the proxy server.
    - iii. **Port**. Port number of the proxy server.
    - iv. **Proxy Authentication SSL Service**. The name of the proxy service that provides proxy-mode authentication.
3. Click **OK** and **Done**.

To configure SSL service for proxy server authentication by using GUI

For information about configuring the SSL service by using the GUI, see [Configuring an SSL Service](#) topic.

To verify Call Home registration status by using the GUI

1. You can use any of the two ways to access the **Call Home** page:
  - a) Navigate to **System > System Information**.
  - b) Navigate to **System > Diagnostics**.

- i. In the details pane, under **Technical Support Tools**, select **Call Home**.
2. In the **Configure Call Home** page, the **Registration with Citrix upload server** field shows the registration status.

To configure an SNMP alarm

1. Navigate to **System > SNMP > Alarms**.
2. In the details pane, select an alarm and configure its parameters.
3. Click **OK** and **Close**.

## Citrix Service Provider (CSP) deployment support

In a Citrix Service Provider (CSP) environment where NetScaler services are deployed on VPX instances, Call Home can monitor and track the license-specific information and securely send the information to Citrix Insight Services (CIS). CIS in turn sends the information to the License Usage Insights (LUI) portal for accounting purposes and for CSP customers to review their license usage. Currently, CSP environments support NetScaler services on VPX instances only, not on MPX or SDX appliances. The VPX instances can be deployed in either standalone or high availability mode.

## Reporting tool

September 25, 2024

Use the Citrix® NetScaler® Reporting tool to view NetScaler performance statistics data as reports. Statistics data are collected by the `nscollect` utility and are stored in a database. When you want to view certain performance data over a period, the Reporting tool pulls out specified data from the database and displays them in charts.

Reports are a collection of charts. The Reporting tool provides built-in reports and the option to create custom reports. In a report, you can modify the charts and add new charts. You can also modify the operation of the data collection utility, `nscollect`, and stop or start its operation.

### Using the reporting tool

The Reporting tool is a web-based interface accessed from the Citrix® NetScaler® appliance. Use the Reporting tool to display the performance statistics data as reports containing graphs. In addition to using the built-in reports, you can create custom reports, which you can modify at any time. Reports can have between one and four charts. You can create up to 256 custom reports. You can create a custom report for any number of entities.

## Invoke the reporting tool

1. Use the Web browser of your choice to connect to the IP address of the NetScaler (for example, <http://10.102.29.170/>). The Web Logon screen appears.
2. In the **User Name** text box, type the user name assigned to the NetScaler.
3. In the **Password** text box, type the password.
4. In the Start in drop-down list box, select **Reporting** and click **Login**.

The following screenshots show the report toolbar and the chart toolbar, which are frequently referenced in this documentation.

Figure 1. Report Toolbar


 


Figure 2. Chart Toolbar

 

## Working with reports

You can plot and monitor statistics for the various functional groups configured on the NetScaler over a specified time interval. Reports enable you to troubleshoot or analyze the behavior of your appliance. There are two types of reports: built-in reports and custom reports. Report content for built-in or custom reports can be viewed in a graphical format or a tabular format. The graphical view consists of line, area, and bar charts that can display up to 32 sets of data (counters). The tabular view displays the data in columns and rows. This view is useful for debugging error counters.

The default report that is displayed in the Reporting tool is CPU versus Memory Usage and HTTP Requests Rate. You can change the default report view by displaying the report you want as your default view, and then clicking **Default Report**.

Reports can be generated for the last hour, last day, last week, last month, last year, or you can customize the duration.

You can do the following with reports:

- Toggle between a tabular view of data and a graphical view of data.
- Change the graphical display type, such as bar chart or line chart.
- Customize charts in a report.
- Export the chart as an Excel comma-separated value (CSV) file.
- View the charts in detail by zooming in, zooming out, or using a drag operation (scrolling).
- Set a report as the default report for viewing whenever you log on.

- Add or remove counters.
- Print reports.
- Refresh reports to view the latest performance data.

### Using built-in reports

The Reporting tool provides built-in reports for frequently viewed data. Built-in reports are available for the following functional groups: System, Network, SSL, Compression, Integrated Cache, NetScaler Gateway, and NetScaler Application Firewall. By default, the built-in reports are displayed for the last day. However, you can view the reports for the last hour, last week, last month, or last year.

#### Note:

You cannot save changes to built-in reports, but you can save a modified built-in report as a custom report.

### Display a built-in report

1. In the left pane of the Reporting tool, under Built-in Reports, expand a group (for example, SSL).
2. Click a report (for example, **SSL > All Backend Ciphers**).

### Creating and deleting reports

You can create your own custom reports and save them with user-defined names for reuse. You can plot different counters for different groups based on your requirements. You can create up to 256 custom reports.

You can either create a report or save a built-in report as a custom report. By default, a newly created custom report contains one chart named System Overview, which displays the CPU Usage counter plotted for the last day. You can customize the interval and set the data source and time zone from the report toolbar.

### Create a custom report

1. In the **Reporting** tool, on the report toolbar, click **Create**, or if you want to create a custom report based on an existing report, open the existing report, and then click **Save As**.
2. In **Report Name** box, type a name for the custom report.
3. Do one of the following:
  - To add the report to an existing folder, in Create in or Save in, click the down arrow to choose an existing folder, and then click **OK**.

- To create a new folder to store the report, click **Add folder**. Type the name of the folder, and specify where you want the new folder to reside in the hierarchy, and then click **OK**.

**Note:**

You can create up to 128 folders.

### Delete a custom report

1. In the left pane of the Reporting tool, next to Custom Reports, click the Click to manage the custom reports icon.
2. Select the checkbox that corresponds with the report you want to delete, and then click Delete.

**Note:**

When you delete a folder, all the contents of that folder are deleted.

### Modifying the time interval

By default, built-in reports display data for the last day. However, if you want to change the time interval for a built-in report, you can save the report as a custom report. The new interval applies to all charts in the report. The following table describes the time-interval options.

#### Modify the time interval

1. In the left pane of the Reporting tool, click a report.
2. On the report toolbar, click **Duration**, and then click a time interval.

#### Setting the data Source and time zone

You can retrieve data from different data sources to display them in the reports. You can also define the time zone for the reports and apply the currently displayed report's time selection to all the reports, including the built-in reports.

#### Set the data source and time zone

1. In the **Reporting tool**, on the report toolbar, click **Settings**.
2. In the **Settings** dialog box, in Data Source, select the data source from which you want to retrieve the counter information.
3. Do one or both of the following:
  - If you want the tool to remember the time period for which a chart is plotted, select the **Remember time selection for charts** checkbox.

- If you want the reports to use the time settings of your NetScaler appliance, select the **Use Appliance's time zone** checkbox.

## Exporting and importing custom reports

You can share reports with other NetScaler administrators by exporting reports. You can also import reports.

### Export or import custom reports

1. In the left pane of the Reporting tool, next to Custom Reports, click the **Click to manage custom reports** icon.
2. Select the checkbox that corresponds with the report you want to export or import, and then click **Export** or **Import**.

**Note:**

When you export the file, it is exported in a .gz file format.

## Working with charts

Use charts to plot and monitor counters or groups of counters. You can include up to four charts in one report. In each chart, you can plot up to 32 counters. The charts can use different graphical formats (for example, area and bar). You can move the charts up or down within the report, customize the colors and visual display for each counter in a chart, and delete a chart when you do not want to monitor it.

In all report charts, the horizontal axis represents time and the vertical axis represents the value of the counter.

### Adding a chart

When you add a chart to a report, the System Overview chart appears with the CPU Usage counter plotted for the last one day.

**Note:**

If you add charts to a built-in report, and you want to retain the report, you must save the report as a custom report.

Use the following procedure to add a chart to a report.

### **Add a chart to a report**

1. In the left pane of the Reporting tool, click a report.
2. Under the chart where you want to add the new chart, click the Add icon.

### **Modifying a chart**

You can modify a chart by changing the functional group for which the statistics are displayed and by selecting different counters.

### **Modify a chart**

1. In the left pane of the Reporting tool click a report.
2. Under the chart that you want to modify click Counters.
3. In the dialog box that appears, in the Title box, type a name for the chart.
4. Next to the Plot chart for, do one of the following:
  - To plot counters for global counters, such as Integrated Cache and Compression, click System global statistics.
  - To plot entity counters for entity types, such as Load Balancing and GSLB, click System entities statistics.
5. In the Select group, click the desired entity.
6. Under Counters, in Available, click one or more counter names that you want to plot, and then click the > button.
7. If you selected System entities statistics in step 4, on the Entities tab, under Available, click one or more entity instance names you want to plot, and then click the > button.
8. Click OK.

### **Viewing a chart**

You can specify the graphical formats of the plotted counters in a chart. Charts can be viewed as line charts, spline charts, step-line charts, scatter charts, area charts, bar charts, stacked area charts, and stacked bar charts. You can also zoom in, zoom out, or scroll inside the plot area of a chart. You can zoom in or out for all data sources for 1 hour, 1 day, 1 week, 1 month, 1 year, and 3 years.

Other options for customizing the view of a chart include customizing the axes of the charts, changing the background and edge color of the plot area, customizing the color and size of the grids, and customizing the display of each data set (counter) in a chart.

Data set numbers, such as Data Set 1, correspond to the order in which the counters in your graph are displayed at the bottom of the chart. For example, if CPU usage and Memory usage are displayed in

first and second order at the bottom of the chart, CPU usage is equal to Data Set 1 and Memory usage is equal to Data Set 2.

Whenever you modify a built-in report, you need to save the report as a custom report to retain your changes.

### Change the graph type of a chart

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, under the chart you want to view, on the chart toolbar, click **Customize**.
3. On the **Chart** tab, under **Category**, click **Plot type**, and then click the graph type you want to display for the chart. If you want to display the graph is 3D, select the Use 3D checkbox.

### Refocus a chart with detailed data

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, on the report toolbar, click **Zoom In**, and do one or both of the following:
  - To refocus the chart to display data for a specific time window, drag the cursor from the start time to the end time. For example, you can view data for a one-hour period on a certain day.
  - To refocus the chart to display data for a data point, simply click once on the chart where you want to zoom in and get more detailed information.
3. Once you have the desired range of time for which you want to view detailed data, on the report toolbar, click Tabular View. Tabular view displays the data in numeric form in rows and columns.

### View numeric data for a graph

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, on the report toolbar, click Tabular View. To return to the graphical view, click **Graphical View**.

**Note:** You can also view the numeric data in the graphical view by hovering your cursor over the notches in the gridlines.

### Scroll through time in a chart

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, on the report toolbar, click **Scroll**, and then click inside the chart and drag the cursor in the direction for which you want to see data for a new time period. For example, if you want to view data in the past, drag to the left.



### Change the background color and text color of a chart

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, under the chart for which you want to customize the axes, click **Customize**.
3. On the **Chart** tab, under **Category**, click one or more of the following:
  - To change the background color, click **Background Color**, and then select the options for color, transparency, and effects.
  - To change the text color, click Text **Color**, and then select the options for color, transparency, and effects.

### Customize the axes of a chart

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, under the chart for which you want to customize the axes, click **Customize**.
3. On the **Chart** tab, under Category, click one or more of the following:
  - To change the scale of the left y-axis, click **Left Y-Axis**, and then select the scale you want.
  - To change the scale of the right y-axis, click Right Y-Axis, in the data set to plot, select the date set, and then select the scale you want.

Note:

The data set numbers, such as Data Set 1, correspond to the order in which the counters in your graph are displayed at the bottom of the chart. For example, if CPU usage and Memory usage are displayed in first and second order at the bottom of the chart, CPU usage is equal to Data Set 1 and Memory usage is equal to Data Set 2.

- To plot each data set in its own hidden y-axis, click Multiple Axes, and then click Enable.

### Change the background color, edge color, and gridlines for a plot area of a chart

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, under the chart for which you want to customize the plot area, click **Customize**.
3. On the **Plot Area** tab, under Category, click one or more of the following:
  - To change the background color and edge color of the chart, click **Background Color and Edge Color**, and then select the options for color, transparency, and effects.
  - To change the horizontal or vertical grids of the chart, click **Horizontal Grids** or **Vertical Grids**, and then select the options for displaying the grids, grid width, grid color, transparency, and effects.

### Change the color and graph type of a data set

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, under the chart for which you want to customize the display of the data set (counters), click **Customize**.
3. On the **Data Set** tab, in Select Data Set, select the data set (counter) for which you want to customize the graphical display.

Note: The data set numbers, such as Data Set 1, correspond to the order in which the counters in your graph are displayed at the bottom of the chart. For example, if

CPU usage and

Memory usage are displayed in first and second order at the bottom of the chart,

CPU usage is equal to

Data Set 1 and

Memory usage is equal to

Data Set 2.

4. Under Category, do one of more of the following:
  - To change the background color, click **Color**, and then select the options for color, transparency, and effects.
  - To change the graph type, click **Plot type**, and then select the graph type you want to display for the data set. If you want to display the graph as 3D, select the **Use 3D** checkbox.

**Exporting chart data to excel** For further data analysis, you can export charts to Excel in a comma-separated value (CSV) format.

To export chart data to excel

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, under the chart with the data you want to export to Excel, click **Export**.

### Deleting a chart

If you do not want to use a chart, you can remove it from the report. You can permanently remove charts from custom reports only. If you delete a chart from a built-in report and want to retain the changes, you need to save the report as a custom report.

### Delete a chart

1. In the left pane of the Reporting tool, select a report.
2. In the right pane, under the chart that you want to delete, click the **Delete** icon.

## Examples

### Display the trend report for CPU usage and memory usage for the last week

1. In the left pane of the Reporting tool, under Built-in Reports, expand System.
2. Click the report CPU versus Memory Usage and HTTP Requests Rate.
3. In the right pane, on the report toolbar, click **Duration**, and then click **Last Week**.

### Compare the bytes received rate and the bytes transmitted rate between the two interfaces for the last week

1. In the right pane, on the report toolbar, click Create.
2. In the **Report Name** box, type a name for the custom report (for example, Custom\_Interfaces), and then click **OK**. The report is created with the default System Overview chart, which displays the CPU Usage counter plotted for the last hour.
3. Under System Overview, on the chart toolbar, click Counters.
4. In the counter selection pane, in Title, type a name for the chart (for example, Interfaces bytes data).
5. In Plot chart for, click System entities statistics, and then in Select Group, select Interface.
6. On the **Entities** tab, click one or more interface names you want to plot (for example, 1/1 and 1/2), and then click the > button.
7. On the Counters tab, click Bytes received (Rate) and Bytes transmitted (Rate) and then click the > button.
8. Click **OK**.
9. On the report toolbar, click **Duration**, and then click **Last Week**.

### Stopping and starting the data collection utility

The data collection utility, `nscollect`, runs automatically when you start the NetScaler. This utility retrieves the application performance data and stores it in the form of data sources on the ADC. You can create up to 32 data sources. The default data source is `/var/log/db/default`.

The data collection utility creates databases for global counters and entity-specific counters, and uses this data to generate reports. Global-counter databases are created at `/var/log/db/<DataSourceName>`. The entity-specific databases are created based on the entities configured on the NetScaler, and a separate folder is created for each entity type in `/var/log/db/<DataSourceName/EntityNameDB>`.

The `nscollect` retrieves data once every 5 minutes. It keeps data in 5-minute granularity for one day, hourly for the last 30 days, and daily for three years.

You might have to stop and restart the data collection utility if data is not updated accurately or the reports display corrupted data.

### **Stop nscollect**

At the command prompt, type:

```
/netScaler/nscollect stop
```

### **Start nscollect on the current SSH session to the NetScaler:**

At the command prompt, type:

```
/netScaler/nscollect start
```

### **Start nscollect on the local system:**

At the command prompt, type:

```
/netScaler/nscollect start &
```

## **Monitor the NetScaler entities**

The reporting tool is enhanced to monitor the entities. This functionality provides you the flexibility to monitor the selected entities in the reporting tool. You can add or remove the entities in the database.

### **How monitoring works**

The reporting tool configuration allows you to specify which entities to monitor. When an entity type is selected for monitoring, data for other entities of the same type that were previously monitored stops being recorded. However, entities of different types continue to be monitored.

For instance, the reporting process supports up to 50 content switching virtual servers, 1000 load balancing virtual servers, and 2500 services. If 5000 load balancing virtual servers are configured on NetScaler, data for only the first 1000 load balancing virtual servers is stored in the database, while the rest is ignored. The reporting tool configuration allows you to choose which entities' data to store and which to ignore. However, the overall threshold limit remains constant.

### **Configure monitoring of an entity by using the CLI**

At the command prompt, type:

```
add reportingconfig <entity> <name>
```

**Example:**

```
add reportingconfig lbvserver -name lbv1
```

The preceding command monitors the lbv1 entity. The load balancing virtual servers that were monitored earlier are stopped.

**Disable monitoring of an entity by using the CLI**

At the command prompt, type:

```
rm reportingconfig <entity> <name>
```

**Example:**

```
rm reportingconfig lbvserver -name lbv1
```

The preceding command removes the lbv1 entity from getting monitored. If this entity is the last entity that is removed from flexible monitoring, then the monitoring continues in the conventional way.

**View the list of entities that are being monitored by using the CLI**

At the command prompt, type:

```
show reportingconfig <entity> <name>
```

**Example:**

```
show reportingconfig lbvserver
```

The preceding command lists all the load balancing servers that are actively monitored.

**Configure monitoring of an entity by using the GUI**

Follow these steps to add or remove the required entities using the GUI interface.

1. Navigate to **System > Reporting Configs**.
2. Click **Add** to add the required entities.

**Notes:**

- Select the required entity and click **Delete** to remove the selected entity.
- The reporting process is refreshed every five minutes.

**System-level reporting**

The reporting tool configuration allows you to set the threshold limit at the system level rather than at the individual entity level. This feature enables you to add any required entities for monitoring, up to the system-wide threshold limit.

When using system-level reporting, the following conditions must be considered:

- Entities must be configured using the `add reportingconfig` command.
- Entities that were previously configured using conventional methods stops being monitored. You must use the `add reportingconfig` command to re-enable monitoring for these entities.
- The threshold limits for entities are monitored at the system level, rather than at the individual entity level.
- Users can monitor up to 3000 load balancing virtual servers assuming that no other entities are configured. This capacity allows for extensive monitoring and reporting on system performance and health.

### **Enable the system-level reporting by using the CLI**

At the command prompt, type:

```
enable systemLevelReporting
```

The preceding command enables system-level reporting. As a result, monitoring using conventional methods is stopped for previously monitored entities. However, entities that were added through flexible monitoring are continued to be monitored.

### **Disable the system-level reporting by using the CLI**

At the command prompt, type:

```
disable systemLevelReporting
```

### **Show the system-level reporting**

At the command prompt, type:

```
show systemLevelReporting
```

The preceding command lists the details of the system-level reporting.

### **Enable or disable the system-level reporting by using the GUI**

1. Navigate to **System > Reporting Configs**.
2. Click **Select Action**
3. Select **SystemLevelReporting** from the list.

You can enable or disable the system-level reporting by choosing the required option.

## CloudBridge Connector

May 2, 2023

**Note:** The current NetScaler 1000V release does not support this feature.

The CloudBridge Connector feature of the NetScaler appliance connects enterprise datacenters to external clouds and hosting environments, making the cloud a secure extension of your enterprise network. Cloud-hosted applications appear as though they are running on one contiguous enterprise network. With Citrix CloudBridge Connector, you can augment your datacenters with the capacity and efficiency available from cloud providers.

The CloudBridge Connector enables you to move your applications to the cloud to reduce costs and increase reliability.

In addition to using CloudBridge Connector between a datacenter and a cloud, you can use it to connect two datacenters for a high-capacity secure and accelerated link.


### Understanding CloudBridge Connector

To implement the Citrix CloudBridge Connector solution, you connect a datacenter to another datacenter or an external cloud by setting up a tunnel called the CloudBridge Connector tunnel.

To connect a datacenter to another datacenter, you set up a CloudBridge Connector tunnel between two NetScaler appliances, one in each datacenter.

To connect a datacenter to an external cloud (for example, Amazon AWS cloud), you set up a CloudBridge Connector tunnel between a NetScaler appliance in the datacenter and a virtual appliance (VPX) that resides in the Cloud. The remote end point can be a CloudBridge Connector or a NetScaler VPX with Premium license.

The following illustration shows a CloudBridge Connector tunnel set up between a datacenter and an

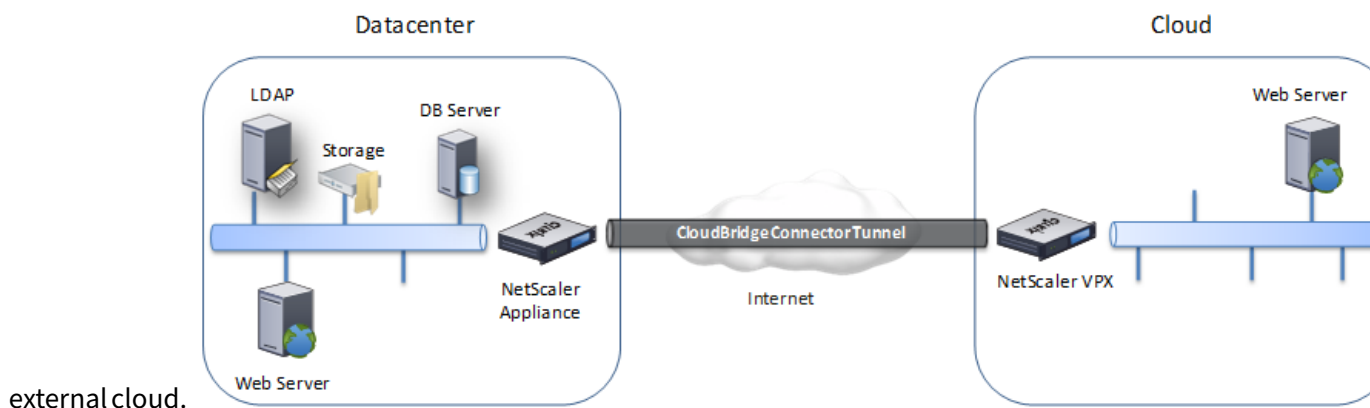

external cloud.

The appliances between which a CloudBridge Connector tunnel is set up are called the *end points* or *peers* of the CloudBridge Connector tunnel.

A CloudBridge Connector tunnel uses the following protocols:

- Generic Routing Encapsulation (GRE) protocol
- Open-standard IPsec Protocol suite, in transport mode

The GRE protocol provides a mechanism for encapsulating packets, from a wide variety of network protocols, to be forwarded over another protocol. GRE is used to:

- Connect networks running non-IP and non-routable protocols.
- Bridge across a wide area network (WAN).
- Create a transport tunnel for any type of traffic that needs to be sent unchanged across a different network.

The GRE protocol encapsulates packets by adding a GRE header and a GRE IP header to the packets.

The Internet Protocol security (IPsec) protocol suite secures communication between peers in the CloudBridge Connector tunnel.

In a CloudBridge Connector tunnel, IPsec ensures:

- Data integrity
- Data origin authentication
- Data confidentiality (encryption)
- Protection against replay attacks

IPsec uses the transport mode in which the GRE encapsulated packet is encrypted. The encryption is done by the Encapsulating Security Payload (ESP) protocol. The ESP protocol ensures the integrity of the packet by using a HMAC hash function, and ensures confidentiality by using an encryption algorithm. After the packet is encrypted and the HMAC is calculated, an ESP header is generated. The ESP header is inserted after the GRE IP header and, an ESP trailer is inserted at the end of the encrypted payload.

Peers in the CloudBridge Connector tunnel use the Internet Key Exchange version (IKE) protocol (part of the IPsec protocol suite) to negotiate secure communication, as follows:

- The two peers mutually authenticate with each other, using one of the following authentication methods:
  - **Pre-shared key authentication.** A text string called a pre-shared key is manually configured on each peer. The pre-shared keys of the peers are matched against each other for authentication. Therefore, for the authentication to be successful, you must configure the same pre-shared key on each of the peers.



- **Digital certificates authentication.** The initiator (sender) peer signs message interchange data by using its private key, and the other receiver peer uses the sender’s public key to verify the signature. Typically, the public key is exchanged in messages containing an X.509v3 certificate. This certificate provides a level of assurance that a peer’s identity as represented in the certificate is associated with a particular public key.
- The peers then negotiate to reach agreement on:
  - An encryption algorithm.
  - Cryptographic keys for encrypting data in one peer and decrypting the data in the other.

This agreement upon the security protocol, encryption algorithm and cryptographic keys is called a Security Association (SA). SAs are one-way (simplex). For example, when two peers, CB1 and CB2, are communicating through a Connector tunnel, CB1 has two Security Associations. One SA is used for processing out-bound packets, and the other SA is used for processing inbound packets.

SAs expire after a specified length of time, which is called the *lifetime*. The two peers use the Internet Key Exchange (IKE) protocol (part of the IPSec protocol suite) to negotiate new cryptographic keys and establish new SAs. The purpose of the limited lifetime is to prevent attackers from cracking a key.

The following table lists some IPSec properties supported by a NetScaler appliance:

| IPSec Properties           | Types Supported                                                                                     |
|----------------------------|-----------------------------------------------------------------------------------------------------|
| IKE Versions               | V1, V2                                                                                              |
| IKE DH group               | A NetScaler appliance supports only DH group 2 (1024 bits MODP algorithm) for both IKEv1 and IKEv2. |
| IKE Authentication Methods | Pre-shared key authentication, Digital certificates authentication                                  |
| Encryption Algorithm       | AES (128 bits), AES 256 (256 bits), 3DES                                                            |
| Hash Algorithm             | HMAC SHA1, HMAC SHA256, HMAC SHA384, HMAC SHA512, HMAC MD5                                          |

## Monitoring CloudBridge Connector tunnels

May 2, 2023

You can display the statistics for monitoring the performance of a CloudBridge Connector tunnel. To display CloudBridge Connector tunnel statistics on a NetScaler appliance, use the GUI or the NetScaler command line.

The following table lists the statistical counters available for monitoring CloudBridge Connector tunnels on a NetScaler appliance.

---

| <b>Statistical counter</b> | <b>Specifies</b>                                                                                                                                           |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bytes Received             | Total number of bytes received by the NetScaler appliance through all the configured CloudBridge Connector tunnels since the appliance was last started.   |
| Bytes Sent                 | Total number of bytes sent by the NetScaler appliance through all the configured CloudBridge Connector tunnels since the appliance was last started.       |
| Packets Received           | Total number of packets received by the NetScaler appliance through all the configured CloudBridge Connector tunnels since the appliance was last started. |
| Packets Sent               | Total number of packets sent by the NetScaler appliance through all the configured CloudBridge Connector tunnels since the appliance was last started.     |
| Bytes Received Rate        | Number of bytes per second received by the NetScaler appliance through all the configured CloudBridge Connector tunnels.                                   |
| Bytes Sent Rate            | Number of bytes per second sent by the NetScaler appliance through all the configured CloudBridge Connector tunnels                                        |
| Packets Received Rate      | Number of bytes per second received by the NetScaler appliance through all the configured CloudBridge Connector tunnels                                    |
| Packets Sent Rate          | Number of bytes per second received by the NetScaler appliance through all the configured CloudBridge Connector tunnels                                    |

---

All these counters are reset to 0 when the NetScaler appliance is restarted. They do not increment during the following phases:

- Internet Key Exchange (IKE) authentication (pre-shared key) phase on any configured CloudBridge Connector tunnel.
- IKE Security Association (SA) establishment phase on any configured CloudBridge Connector tunnel.

To display CloudBridge Connector tunnel statistics by using the NetScaler command line

At the command prompt, type:

- **stat ipsec counters**

To display CloudBridge Connector tunnel statistics by using the GUI

1. Access the GUI by using a web browser to connect to the IP address of the NetScaler appliance.
2. On the **Configuration** tab, navigate to **System > CloudBridge Connector**.
3. On the CloudBridge Connector page, click **Create/Monitor CloudBridge Connector**. The **IPSec Bytes** and **IPSec Packets** charts display the bytes received rate, bytes sent rate, packets received rate, and packets sent rate of all the CloudBridge Connector tunnels configured on the NetScaler appliance.

```
1 > stat ipsec counters
2 Secure tunnel(s) summary
3 Rate (/s) Total
4 Bytes Received 0 2811248
5 Bytes Sent 0 157460630
6 Packets Received 0 56787
7 Packets Sent 0 200910
8 Done
9 >
```


## Configuring a CloudBridge Connector tunnel between two datacenters

May 2, 2023

You can configure a CloudBridge Connector tunnel between two different datacenters to extend your network without reconfiguring it, and leverage the capabilities of the two datacenters. A CloudBridge Connector tunnel between the two geographically separated datacenters enables you to implement redundancy and safeguard your setup from failure. The CloudBridge Connector tunnel helps achieve optimal utilization of infrastructure and resources across datacenters. The applications available across the two datacenters appear as local to the user.

To connect a datacenter to another datacenter, you set up a CloudBridge Connector tunnel between a NetScaler appliance in one datacenter and a NetScaler appliance in the other datacenter.

As an illustration of CloudBridge Connector tunnel between datacenters, consider an example in which a CloudBridge Connector tunnel is set up between NetScaler appliance NS\_Appliance-1 in datacenter DC1 and NetScaler appliance NS\_Appliance-2 in datacenter DC2.

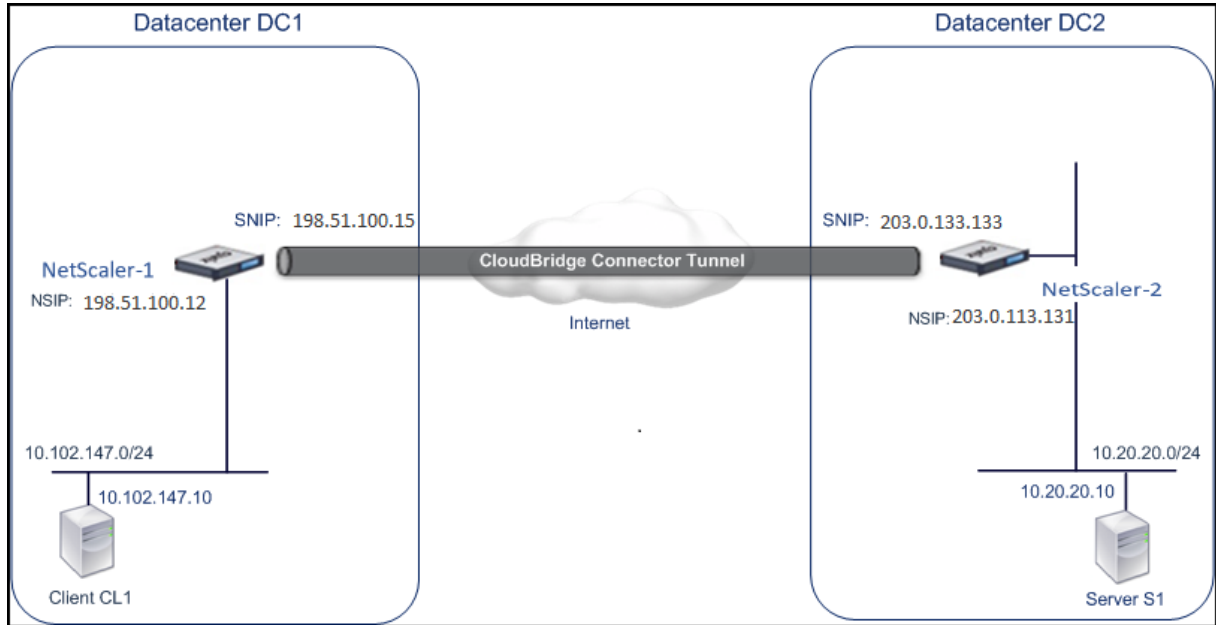

Both NS\_Appliance-1 and NS\_Appliance-2 function in L2 and L3 mode. They enable communication between private networks in datacenters DC1 and DC2. In L3 mode, NS\_Appliance-1 and NS\_Appliance-2 enable communication between client CL1 in datacenter DC1 and server S1 in the datacenter DC2 through the CloudBridge Connector tunnel. Client CL1 and server S1 are on different private networks.

Because client CL1 and server S1 are on different private networks, L3 mode is enabled on NS\_Appliance-1 and NS\_Appliance-2, and routes are updated as follows:

- CL1 has a route to NS\_Appliance-1 for reaching S1.
- NS\_Appliance-1 has a route to NS\_Appliance-2 for reaching S1.
- S1 has a route to NS\_Appliance-2 for reaching CL1.
- NS\_Appliance-2 has a route to NS\_Appliance-1 for reaching CL1.

The following table lists the settings on NetScaler appliance NS\_Appliance-1 in datacenter DC1.

The following table lists the settings on NetScaler appliance NS\_Appliance-2 in datacenter DC2.

| Entity           | Name | Details       |
|------------------|------|---------------|
| The NSIP address |      | 198.51.100.12 |
| SNIP address     |      | 198.51.100.15 |

---

| Entity                       | Name                    | Details                                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CloudBridge Connector tunnel | Cloud_Connector_DC1-DC2 | <ol style="list-style-type: none"><li>1. Local endpoint IP address of the CloudBridge Connector tunnel: 198.51.100.15, 2. Remote endpoint IP address of the CloudBridge Connector tunnel: 203.0.113.133. GRE Tunnel Details Name = Cloud_Connector_DC1-DC2, IPSec Profile Details Name = Cloud_Connector_DC1-DC2, Encryption algorithm = AES, Hash algorithm = HMAC SHA1</li></ol> |

---

### **Points to consider for configuring CloudBridge Connector tunnel**

Before setting up a CloudBridge Connector tunnel, verify that the following tasks have been completed:

1. Deploy and set up a NetScaler appliance in each of the two datacenters.
2. Make sure that the CloudBridge Connector tunnel end-point IP addresses are accessible to each other.

### **Configuration procedure**

To set up a CloudBridge Connector tunnel between a NetScaler appliance that resides in one datacenter and another NetScaler appliance that resides in the other datacenter, use the GUI or the command line interface of one of the NetScaler appliances.

When you use the GUI, the CloudBridge Connector tunnel configuration created on the first NetScaler appliance is automatically pushed to the other endpoint (the other NetScaler appliance) of the CloudBridge Connector tunnel. Therefore, you do not have to access the GUI of the other NetScaler appliance to create the corresponding CloudBridge Connector tunnel configuration on it.

The CloudBridge Connector tunnel configuration on each of the NetScaler appliances consists of the following entities:

- **IPSec profile**—An IPSec profile entity specifies the IPSec protocol parameters, such as IKE version, encryption algorithm, hash algorithm, and PSK, to be used by the IPSec protocol in the CloudBridge Connector tunnel.
- **GRE tunnel**—An IP tunnel specifies the local IP address (a public SNIP address configured on the local NetScaler appliance), remote IP address (a public SNIP address configured on the remote NetScaler appliance), protocol (GRE) used to set up the CloudBridge Connector tunnel, and an IPSec profile entity.
- **Create a PBR rule and associate the IP tunnel with it**—A PBR entity specifies a set of conditions and an IP tunnel entity. The source IP address range and the destination IP range are the conditions for the PBR entity. You must set the source IP address range and the destination IP address range to specify the subnet whose traffic is to traverse the CloudBridge Connector tunnel. For example, consider a request packet that originates from a client on the subnet in the first datacenter and is destined to a server on the subnet in the second datacenter. If this packet matches the source and destination IP address range of the PBR entity on the NetScaler appliance in the first datacenter, it is sent across the CloudBridge Connector tunnel associated with the PBR entity.

To create an IPSEC profile by using the command line interface

At the command prompt, type:

- `add ipsec profile <name> [-ikeVersion ( V1 | V2 )] [-encAlgo ( AES | 3DES )...] [-hashAlgo <hashAlgo\> ...] [-lifetime <positive_integer>] (-psk | (-publickey<string> -privatekey <string>-peerPublicKey <string>)) [-livenessCheckInterval <positive_intege>] [-replayWindowSize \<positive_integer>] [-ikeRetryInterval <positive_integer>] [-retransmissiontime <positive_integer>]`
- `show ipsec profile <name>`

To create an IP tunnel and bind the IPSEC profile to it by using the command line interface

At the command prompt, type:

- `add ipTunnel <name> <remote><remoteSubnetMask> <local> [-protocol <protocol>] [-ipsecProfileName <string>]`
- `show ipTunnel <name>`

To create a PBR rule and bind the IPSEC tunnel to it by using the command line interface

At the command prompt, type:

- `add ns pbr <pbr_name> ALLOW -srcIP = <local_subnet_range> -destIP = <remote_subnet_range> -ipTunnel <tunnel_name>`
- `apply ns pbrs`
- `show ns pbr <pbr_name>`

#### Example


```
1 add ipsec profile Cloud_Connector_DC1-DC2 -encAlgo AES -hashAlgo
 HMAC_SHA1
2 Done
3 > add ipTunnel Cloud_Connector_DC1-DC2 203.0.113.133
 255.255.255.255 198.51.100.15 -protocol GRE -ipsecProfileName
 Cloud_Connector_DC1-DC2
4
5 Done
6 > add ns pbr PBR-DC1-DC2 ALLOW -srcIP 198.51.100.15 -destIP
 203.0.113.133 ipTunnel Cloud_Connector_DC1-DC2
7
8 Done
9 > apply ns pbrs
10
11 Done
```

To configure a CloudBridge Connector tunnel in a NetScaler appliance by using the GUI

1. Type the NSIP address of a NetScaler appliance in the address line of a web browser.
2. Log on to the GUI of the NetScaler appliance by using your account credentials for the appliance.
3. Navigate to **System > CloudBridge Connector**.
4. In the right pane, under **Getting Started**, click **Create/Monitor CloudBridge**.

The first time you configure a CloudBridge Connector tunnel on the appliance, a **Welcome** screen appears.


5. On the **Welcome** screen click **Get Started**.

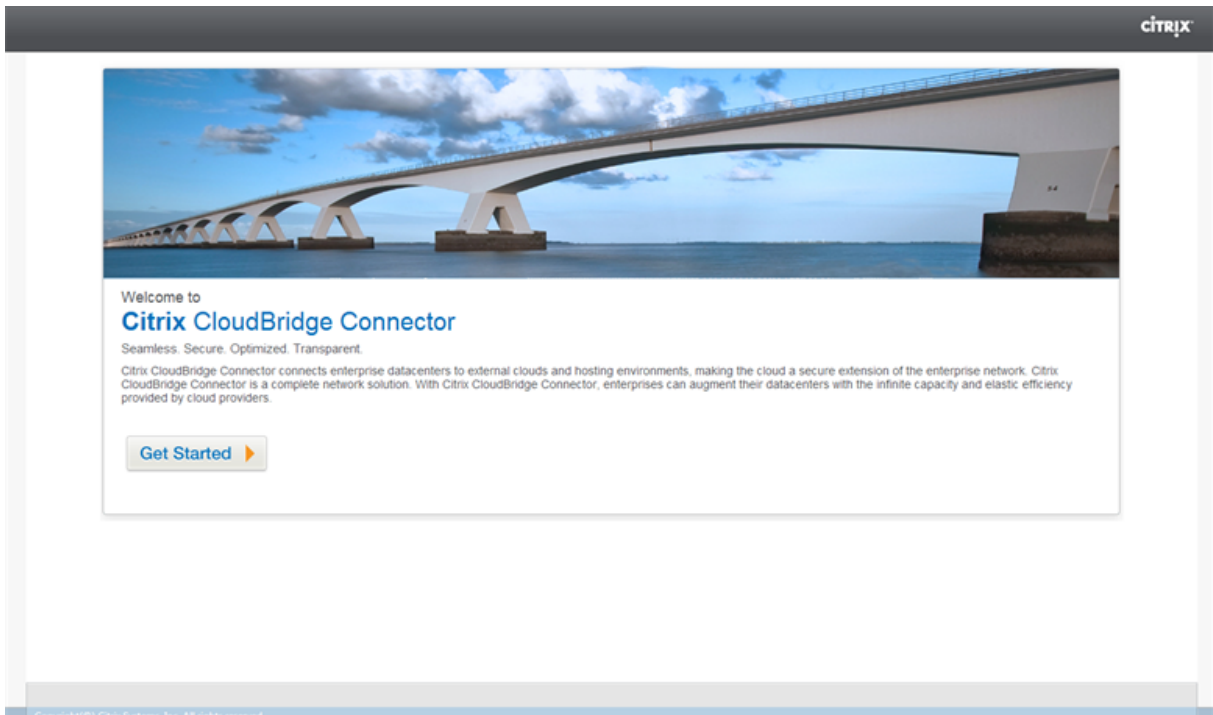

**Note:**

If you already have a CloudBridge Connector tunnel configured on the NetScaler appliance, the Welcome screen does not appear, so you do not click Get Started.

1. In the **CloudBridge Connector Setup** pane, click **NetScaler**.

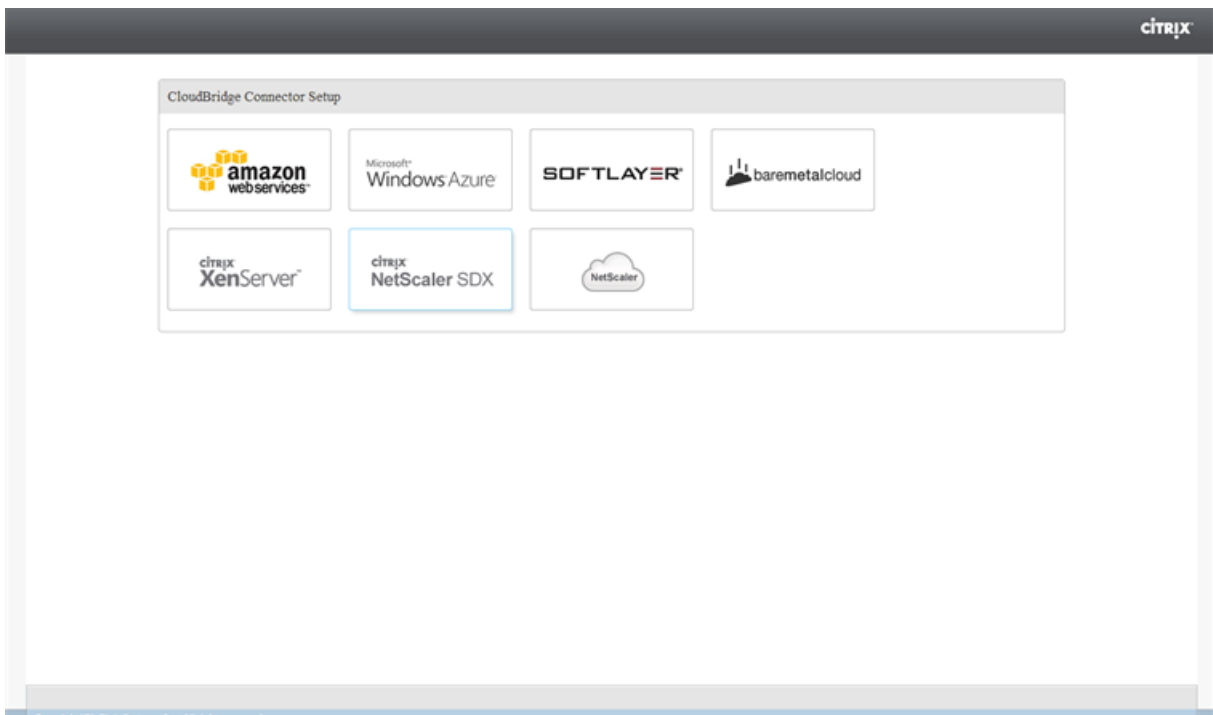



1. In the NetScaler pane, provide your account credentials for the remote NetScaler appliance. Click **Continue**.
2. In the **CloudBridge Connector Setting** pane, set the following parameter:
  - **CloudBridge Connector Name**—Name for the CloudBridge Connector configuration on the local appliance. Must begin with an ASCII alphabetic or underscore (\_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the CloudBridge Connector configuration is created.
3. Under **Local Setting**, set the following parameter:
  - **Subnet IP**—IP address of the local endpoint of the CloudBridge Connector tunnel.
4. Under **Remote Setting**, set the following parameter:
  - **Subnet IP**—IP address of the peer endpoint of the CloudBridge Connector tunnel.
5. Under **PBR Setting**, set the following parameters:
  - **Operation**—Either the equals (=) or does not equal (!=) logical operator.
  - **Source IP Low**—Lowest source IP address to match against the source IP address of an outgoing IPv4 packet.
  - **Source IP High**—Highest source IP address to match against the source IP address of an outgoing IPv4 packet.
  - **Operation**—Either the equals (=) or does not equal (!=) logical operator.
  - **Destination IP Low\***—Lowest destination IP address to match against the destination IP address of an outgoing IPv4 packet.
  - **Destination IP High**—Highest destination IP address to match against the destination IP address of an outgoing IPv4 packet.
6. (Optional) Under **Security Settings**, set the following IPSec protocol parameters for the CloudBridge Connector tunnel:
  - **Encryption Algorithm**—Encryption algorithm to be used by the IPSec protocol in the CloudBridge tunnel.
  - **Hash Algorithm**—Hash algorithm to be used by the IPSec protocol in the CloudBridge tunnel.
  - **Key**—Select one of the following IPSec authentication methods to be used by the two peers to mutually authenticate.
    - **Auto Generate Key**—Authentication based on a text string, called a pre-shared key (PSK), generated automatically by the local appliance. The PSKs keys of the peers are matched against each other for authentication.

- **Specific Key**—Authentication based on a manually entered PSK. The PSKs of the peers are matched against each other for authentication.
  - \* **Pre Shared Security Key**—The text string entered for pre-shared key based authentication.
- **Upload Certificates**—Authentication based on digital certificates.
  - \* **Public Key**—A local digital certificate to be used to authenticate the local NetScaler appliance to the peer before establishing IPSec security associations. The same certificate should be present and set for the Peer Public Key parameter in the peer.
  - \* **Private Key**—Private key of the local digital certificate.
  - \* **Peer Public Key**—Digital certificate of the peer. Used to authenticate the peer to the local end point before establishing IPSec security associations. The same certificate should be present and set for the Public key parameter in the peer.

7. Click **Done**.

The new CloudBridge Connector tunnel configuration on both the NetScaler appliances appears on the Home tab of the respective GUI. The current status of the CloudBridge connector tunnel is indicated in the Configured CloudBridge Connectors pane. A green dot indicates that the tunnel is up. A red dot indicates that the tunnel is down.

## Monitoring the CloudBridge Connector Tunnel

You can monitor the performance of CloudBridge Connector tunnels on a NetScaler appliance by using CloudBridge Connector tunnel statistical counters. For more information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).


## Configuring CloudBridge Connector between datacenter and AWS cloud

May 2, 2023

You can configure a CloudBridge Connector tunnel between a datacenter and AWS cloud to leverage the infrastructure and computing capabilities of the data center and the AWS cloud. With AWS, you can extend your network without initial capital investment or the cost of maintaining the extended network infrastructure. You can scale your infrastructure up or down, as required. For example, you can lease more server capabilities when the demand increases.

To connect a datacenter to AWS cloud, you set up a CloudBridge Connector tunnel between a NetScaler appliance that resides in the datacenter and a NetScaler virtual appliance (VPX) that resides in AWS cloud.

As an illustration of a CloudBridge Connector tunnel between a datacenter and Amazon AWS cloud, consider an example in which a CloudBridge Connector tunnel is set up between NetScaler appliance NS\_Appliance-DC, in datacenter DC, and NetScaler virtual appliance (VPX) NS\_VPX\_Appliance-AWS.

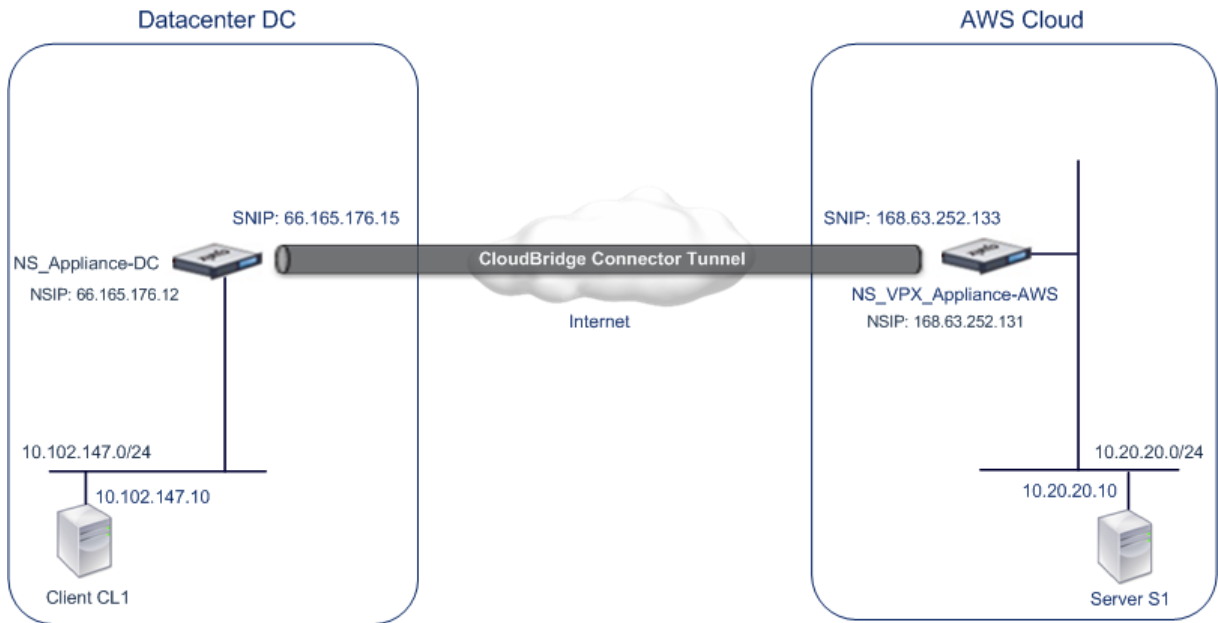

Both NS\_Appliance-DC and NS\_VPX\_Appliance-AWS function in L3 mode. They enable communication between private networks in datacenter DC and the AWS cloud. NS\_Appliance-DC and NS\_VPX\_Appliance-AWS enable communication between client CL1 in datacenter DC and server S1 in the AWS cloud through the CloudBridge Connector tunnel. Client CL1 and server S1 are on different private networks.

**Note:**

AWS does not support L2 mode, hence it is necessary to have only L3 mode enabled on both the endpoints.

For proper communication between CL1 and S1, L3 mode is enabled on NS\_Appliance-DC and NS\_VPX\_Appliance-AWS and routes are updated as such:

- CL1 have a route to NS\_Appliance-DC for reaching S1.
- NS\_Appliance-DC have a route to NS\_VPX\_Appliance-AWS for reaching S1.
- S1 should have a route to NS\_VPX\_Appliance-AWS for reaching CL1.
- NS\_VPX\_Appliance-AWS have a route to NS\_Appliance-DC for reaching CL1.

The following table lists the settings on NetScaler appliance NS\_Appliance-DC in datacenter DC.

---

| Entity                       | Name             | Details                                                                                                                                                                                                   |
|------------------------------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The NSIP address             |                  | 66.165.176.12                                                                                                                                                                                             |
| SNIP address                 |                  | 66.165.176.15                                                                                                                                                                                             |
| CloudBridge Connector tunnel | CC_Tunnel_DC-AWS | Local endpoint IP address of the CloudBridge Connector tunnel: 66.165.176.15, Remote endpoint IP address of the CloudBridge Connector tunnel: 168.63.252.133, GRE Tunnel Details - Name= CC_Tunnel_DC-AWS |

---

The following table lists the settings on NetScaler VPX NS\_VPX\_Appliance-AWS on AWS cloud.

---

| Entity                                        | Name             | Details                                                                                                                                                                                                                                                                                                            |
|-----------------------------------------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NSIP address                                  |                  | 10.102.25.30                                                                                                                                                                                                                                                                                                       |
| Public EIP address mapped to the NSIP address |                  | 168.63.252.131                                                                                                                                                                                                                                                                                                     |
| SNIP address                                  |                  | 10.102.29.30                                                                                                                                                                                                                                                                                                       |
| Public EIP address mapped to the SNIP address |                  | 168.63.252.133                                                                                                                                                                                                                                                                                                     |
| CloudBridge Connector tunnel                  | CC_Tunnel_DC-AWS | Local endpoint IP address of the CloudBridge Connector tunnel:168.63.252.133, Remote endpoint IP address of the CloudBridge Connector tunnel: 66.165.176.15; <b>GRE Tunnel Details</b> Name= CC_Tunnel_DC-AWS, IPSec Profile Details, Name= CC_Tunnel_DC-AWS, Encryption algorithm= AES, Hash algorithm= HMAC SHA1 |

---

## Prerequisites

Before setting up a CloudBridge Connector tunnel, verify that the following tasks have been completed:

1. Install, configure, and launch an instance of NetScaler Virtual appliance (VPX) on AWS cloud. For instructions on installing NetScaler VPX on AWS, see [Deploy a NetScaler VPX instance on AWS](#).
2. Deploy and configure a NetScaler physical appliance, or provisioning and configuring a NetScaler virtual appliance (VPX) on a virtualization platform in the datacenter.
3. Make sure that the CloudBridge Connector tunnel end-point IP addresses are accessible to each other.

## NetScaler VPX license

After the initial instance launch, NetScaler VPX for AWS requires a license. If you are bringing your own license (BYOL), see the VPX Licensing Guide at: <http://support.citrix.com/article/CTX122426>.

You have to:

1. Use the licensing portal within Citrix website to generate a valid license.
2. Upload the license to the instance.

If this is a **paid** marketplace instance, then you do not need to install a license. The correct feature set and performance will activate automatically.

## Configuration steps

To set up a CloudBridge Connector tunnel between a NetScaler appliance that resides in a datacenter and a NetScaler virtual appliance (VPX) that resides on the AWS cloud, use the GUI of the NetScaler appliance.

When you use the GUI, the CloudBridge Connector tunnel configuration created on the NetScaler appliance, is automatically pushed to the other endpoint or peer (the NetScaler VPX on AWS) of the CloudBridge Connector tunnel. Therefore, you do not have to access the GUI (GUI) of the NetScaler VPX on AWS to create the corresponding CloudBridge Connector tunnel configuration on it.

The CloudBridge Connector tunnel configuration on both peers (the NetScaler appliance that resides in the datacenter and the NetScaler virtual appliance (VPX) that resides on the AWS cloud) consists of the following entities:

- **IPSec profile**—An IPSec profile entity specifies the IPSec protocol parameters, such as IKE version, encryption algorithm, hash algorithm, and PSK, to be used by the IPSec protocol in both the peers of the CloudBridge Connector tunnel.

- **GRE tunnel**—An IP tunnel specifies a local IP address (a public SNIP address configured on the local peer), remote IP address (a public SNIP address configured on the remote peer), protocol (GRE) used to set up the CloudBridge Connector tunnel, and an IPsec profile entity.
- **Create a PBR rule and associate the IP tunnel with it**—A PBR entity specifies a set of conditions and an IP tunnel entity. The source IP address range and the destination IP range are the conditions for the PBR entity. You must set the source IP address range and the destination IP address range to specify the subnet whose traffic is to traverse the CloudBridge Connector tunnel. For example, consider a request packet that originates from a client on the subnet in the datacenter and is destined to a server on the subnet in the AWS cloud. If this packet matches the source and destination IP address range of the PBR entity on the NetScaler appliance in the datacenter, it is sent across the CloudBridge Connector tunnel associated with the PBR entity.

To create an IPSEC profile by using the command line interface

At the command prompt, type:

- `add ipsec profile <name> [-**ikeVersion** ( V1 | V2 )] [-**encAlgo** ( AES | 3DES )...] [-**hashAlgo** <hashAlgo> ...] [-**lifetime** <positive_integer>] (-**psk** | (-**publickey** <string> -**privatekey** <string> -**peerPublicKey** <string>)) [-**livenessCheckInterval** <positive_integer>] [-**replayWindowSize** <positive_integer>] [-**ikeRetryInterval** <positive_integer>] [-**retransmissiontime** <positive_integer>]`
- `**show ipsec profile** <name>`

To create an IP tunnel and bind the IPSEC profile to it by using the command line interface

At the command prompt, type:

- `add ipTunnel <name> <remote><remoteSubnetMask> <local> [-protocol <protocol>] [-ipsecProfileName <string>]`
- `show ipTunnel <name>`

To create a PBR rule and bind the IPSEC tunnel to it by using the command line interface

At the command prompt, type:

- `add ns pbr <pbr_name> ALLOW -srcIP = <local_subnet_range> -destIP = <remote_subnet_range> -ipTunnel <tunnel_name>`
- `apply ns pbrs`
- `show ns pbr <pbr_name>`


Example

```
1 > add ipsec profile CC_Tunnel_DC-AWS -encAlgo AES -hashAlgo
 HMAC_SHA1
```

```
2
3 Done
4 > add ipTunnel CC_Tunnel_DC-AWS 168.63.252.133 255.255.255.0
 66.165.176.15 -protocol GRE -ipsecProfileName CC_Tunnel_DC-AWS
5
6 Done
7 > add ns pbr PBR-DC-AWS ALLOW -srcIP 66.165.176.15 -destIP
 168.63.252.133 ipTunnel CC_Tunnel_DC-AWS
8
9 Done
10 > apply ns pbrs
11
12 Done
```

To configure a CloudBridge Connector tunnel in a NetScaler appliance by using the GUI


1. Type the NSIP address of a NetScaler appliance in the address line of a web browser.
2. Log on to the GUI of the NetScaler appliance by using your account credentials for the appliance.
3. Navigate to **System > CloudBridge Connector**.
4. In the right pane, under **Getting Started**, click **Create/Monitor CloudBridge**.
5. The first time you configure a CloudBridge Connector tunnel on the appliance, a **Welcome** screen appears.
6. On the **Welcome** screen click **Get Started**.

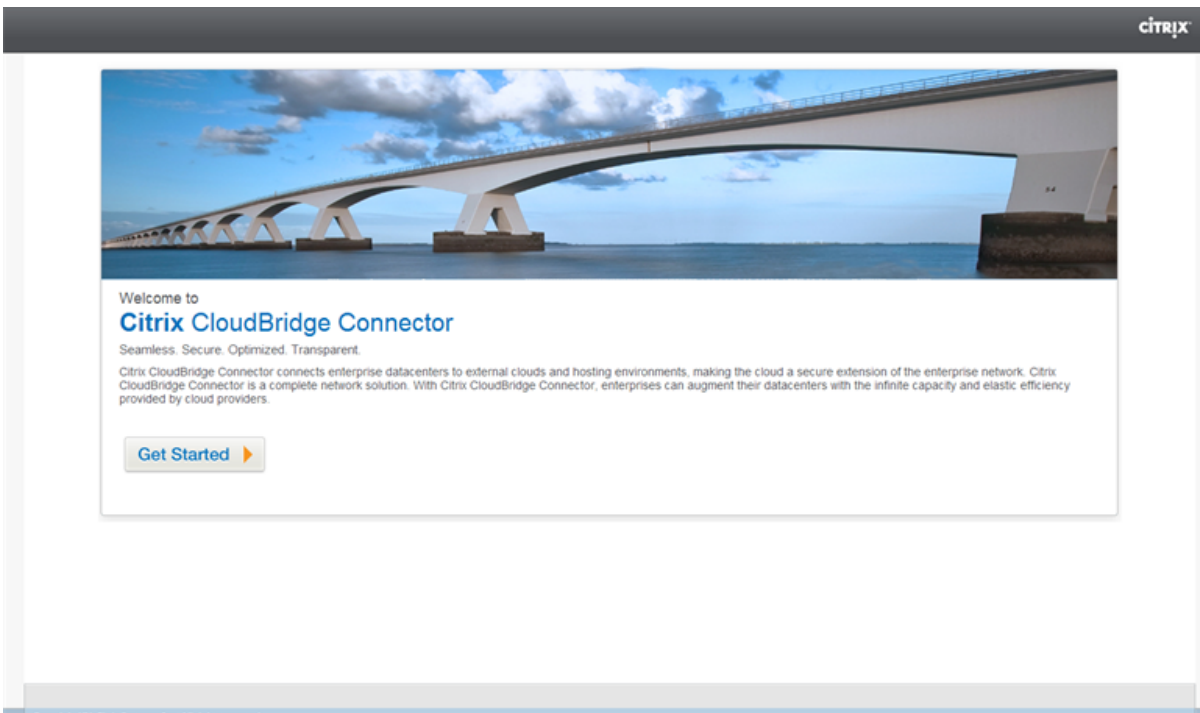

**Note:**

If you already have a CloudBridge Connector tunnel configured on the NetScaler appliance, the Welcome screen does not appear, so you do not click Get Started.

1. In the **CloudBridge Connector Setup** pane, click **amazon web services**

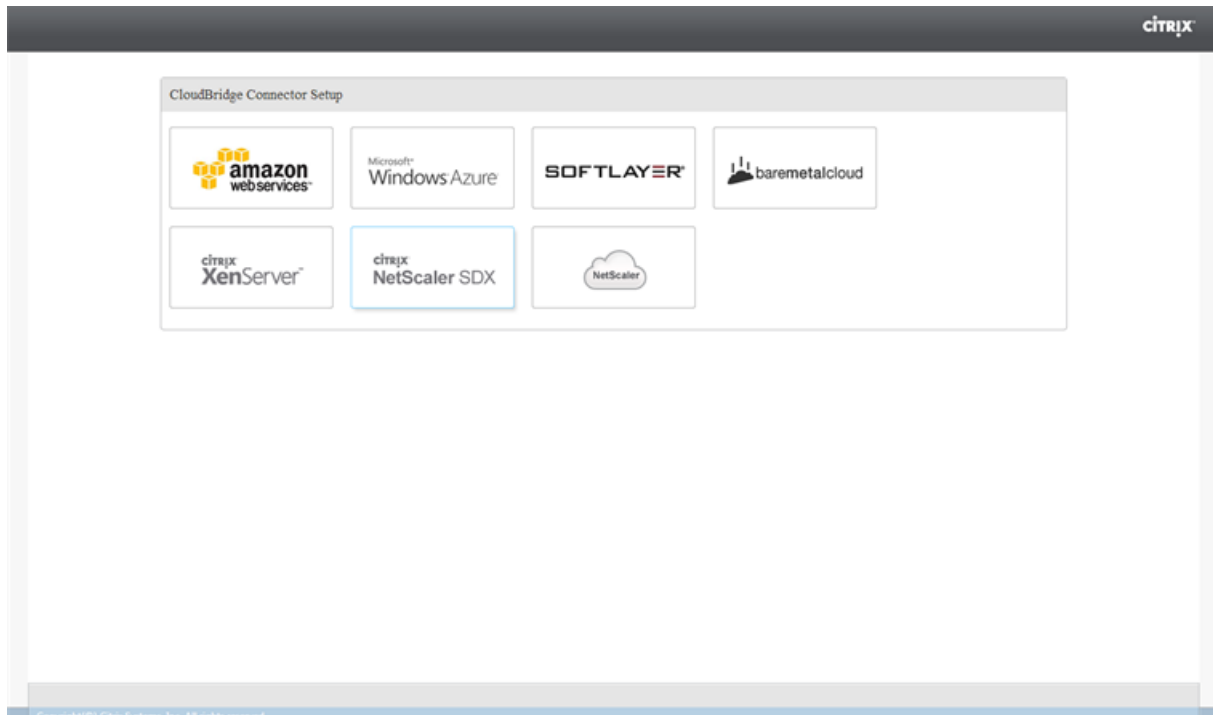

1. In the **Amazon** pane, provide your AWS account credentials: AWS Access Key ID and AWS Secret Access Key. You can obtain these access keys from the AWS GUI console. Click **Continue**.

**Note**

Earlier, the Setup wizard always connects to the same AWS region even when another region is selected. As a result, configuring CloudBridge Connector tunnel to a NetScaler VPX running on the selected AWS region used to fail. This issue has been fixed now.

1. In the **NetScaler** pane, select the NSIP address of the NetScaler virtual appliance running on AWS. Then, provide your account credentials for the NetScaler virtual appliance. Click **Continue**.
2. In the **CloudBridge Connector Setting** pane, set the following parameter:
  - **CloudBridge Connector Name**—Name for the CloudBridge Connector configuration on the local appliance. Must begin with an ASCII alphabetic or underscore (\_) character, and must contain only ASCII alphanumeric, underscore, hash (#), period (.), space, colon (:), at (@), equals (=), and hyphen (-) characters. Cannot be changed after the CloudBridge Connector configuration is created.



3. Under **Local Setting**, set the following parameter:
  - **Subnet IP**—IP address of the local endpoint of the CloudBridge Connector tunnel. Must be a public IP address of type SNIP.
4. Under **Remote Setting**, set the following parameter:
  - **Subnet IP**—IP address of the CloudBridge Connector tunnel end point on the AWS side. Must be an IP address of type SNIP on the NetScaler VPX instance on AWS.
  - **NAT**—Public IP address (EIP) in AWS that is mapped to the SNIP configured on the NetScaler VPX instance on AWS.
5. Under **PBR Setting**, set the following parameters:
  - **Operation**—Either the equals (=) or does not equal (!=) logical operator.
  - **Source IP Low**—Lowest source IP address to match against the source IP address of an outgoing IPv4 packet.
  - **Source IP High**—Highest source IP address to match against the source IP address of an outgoing IPv4 packet.
  - **Operation**—Either the equals (=) or does not equal (!=) logical operator.
  - **Destination IP Low**—Lowest destination IP address to match against the destination IP address of an outgoing IPv4 packet.
  - **Destination IP High**—Highest destination IP address to match against the destination IP address of an outgoing IPv4 packet.
6. (Optional) Under **Security Settings**, set the following IPSec protocol parameters for the CloudBridge Connector tunnel:
  - **Encryption Algorithm**—Encryption algorithm to be used by the IPSec protocol in the CloudBridge tunnel.
  - **Hash Algorithm**—Hash algorithm to be used by the IPSec protocol in the CloudBridge tunnel.
  - **Key**—Select one of the following IPSec authentication methods to be used by the two peers to mutually authenticate.
    - **Auto Generate Key**—Authentication based on a text string, called a pre-shared key (PSK), generated automatically by the local appliance. The PSKs keys of the peers are matched against each other for authentication.
    - **Specific Key**—Authentication based on a manually entered PSK. The PSKs of the peers are matched against each other for authentication.
      - \* **Pre Shared Security Key**—The text string entered for pre-shared key based authentication.
    - **Upload Certificates**—Authentication based on digital certificates.

- \* **Public Key**—A local digital certificate to be used to authenticate the local peer to the remote peer before establishing IPsec security associations. The same certificate should be present and set for the Peer Public Key parameter in the peer.
- \* **Private Key**—Private key of the local digital certificate.
- \* **Peer Public Key**—Digital certificate of the peer. Used to authenticate the peer to the local end point before establishing IPsec security associations. The same certificate should be present and set for the Public key parameter in the peer.

7. Click **Done**.

The new CloudBridge Connector tunnel configuration on the NetScaler appliance in the datacenter appears on the Home tab of the GUI. The corresponding new CloudBridge Connector tunnel configuration on the NetScaler VPX appliance in the AWS cloud appears on the GUI. The current status of the CloudBridge connector tunnel is indicated in the Configured CloudBridge pane. A green dot indicates that the tunnel is up. A red dot indicates that the tunnel is down.

## Monitoring the CloudBridge Connector tunnel

You can monitor the performance of CloudBridge Connector tunnels on a NetScaler appliance by using CloudBridge Connector tunnel statistical counters. For more information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).

## Configuring a CloudBridge Connector tunnel between a NetScaler appliance and virtual private gateway on AWS

May 2, 2023

To connect a datacenter to Amazon Web Services (AWS), you can configure a CloudBridge Connector tunnel between a NetScaler appliance in the datacenter and a virtual private gateway on AWS. The NetScaler appliance and the virtual private gateway form the endpoints of the CloudBridge Connector tunnel and are called peers.

### Note:


You can also set up a CloudBridge Connector tunnel between a NetScaler appliance in a datacenter and a NetScaler VPX instance (instead of a virtual private gateway) on AWS. For more information, see [Configuring CloudBridge Connector between Datacenter and AWS Cloud](#).

Virtual private gateways on AWS support the following IPSec settings for a CloudBridge Connector tunnel. Therefore, you must specify the same IPSec settings when you configure the NetScaler appliance for the CloudBridge Connector tunnel.

| IPSec Properties          | Setting        |
|---------------------------|----------------|
| IPSec mode                | Tunnel mode    |
| IKE version               | Version 1      |
| IKE Authentication method | Pre-Shared Key |
| Encryption algorithm      | AES            |
| Hash algorithm            | HMAC SHA1      |

### Example of CloudBridge Connector tunnel configuration and data flow

As an illustration of the traffic flow in a CloudBridge Connector tunnel, consider an example in which a CloudBridge Connector tunnel is set up between NetScaler appliance NS\_Appliance-1 in a datacenter and virtual private gateway gateway AWS-Virtual-Private-Gateway-1 on AWS cloud.

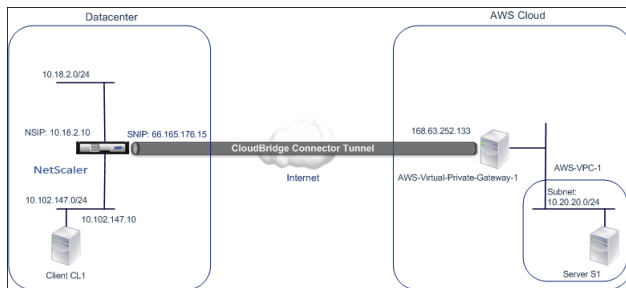

NS\_Appliance-1 also functions as an L3 router, which enables a private network in the datacenter to reach a private network in the AWS cloud through the CloudBridge Connector tunnel. As a router, NS\_Appliance-1 enables communication between client CL1 in the datacenter and server S1 in the AWS cloud through the CloudBridge Connector tunnel. Client CL1 and server S1 are on different private networks.

On NS\_Appliance-1, the CloudBridge Connector tunnel configuration includes an IPSec profile entity named NS\_AWS\_IPSec\_Profile, a CloudBridge Connector tunnel entity named NS\_AWS\_Tunnel, and a policy based routing (PBR) entity named NS\_AWS\_Pbr.

The IPSec profile entity NS\_AWS\_IPSec\_Profile specifies the IPSec protocol parameters, such as IKE version, encryption algorithm, and hash algorithm, to be used by the IPSec protocol in the CloudBridge Connector tunnel. NS\_AWS\_IPSec\_Profile is bound to IP tunnel entity NS\_AWS\_Tunnel.

CloudBridge Connector tunnel entity NS\_AWS\_Tunnel specifies the local IP address (a public IP—SNIP—address configured on the NetScaler appliance), the remote IP address (the IP address of the

AWS-Virtual-Private-Gateway-1), and the protocol (IPSec) used to set up the CloudBridge Connector tunnel. NS\_AWS\_Tunnel is bound to policy based routing (PBR) entity NS\_AWS\_Pbr.

The PBR entity NS\_AWS\_Pbr specifies a set of conditions and a CloudBridge Connector tunnel entity (NS\_AWS\_Tunnel). The source IP address range and the destination IP address range are the conditions for NS\_AWS\_Pbr. The source IP address range and the destination IP address range are specified as a subnet in the datacenter and a subnet in the AWS cloud, respectively. Any request packet originating from a client in the subnet in the datacenter and destined to a server in the subnet on the AWS cloud matches the conditions in NS\_AWS\_Pbr. This packet is then considered for CloudBridge Connector processing and is sent across the CloudBridge Connector tunnel (NS\_AWS\_Tunnel) bound to the PBR entity.

The following table lists the settings used in this example.

|                                                                                                     |                 |
|-----------------------------------------------------------------------------------------------------|-----------------|
| IP address of the CloudBridge Connector tunnel end point (NS_Appliance-1) in the datacenter side    | 66.165.176.15   |
| IP address of the CloudBridge Connector tunnel end point (AWS-Virtual-Private-Gateway-1) in the AWS | 168.63.252.133  |
| Datacenter Subnet, the traffic of which is to traverse the CloudBridge Connector tunnel             | 10.102.147.0/24 |
| AWS Subnet, the traffic of which is to traverse the CloudBridge Connector tunnel                    | 10.20.20.0/24   |

#### Settings on Amazon AWS

|                         |                               |                                                                                                                                         |
|-------------------------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Customer Gateway        | AWS-Customer-Gateway-1        | Routing = Static, IP Address = Internet-routable CloudBridge Connector tunnel endpoint IP address on the NetScaler side = 66.165.176.15 |
| Virtual Private Gateway | AWS-Virtual-Private-Gateway-1 | Associated VPC = AWS-VPC-1                                                                                                              |

|                  |                        |                                                                                                                                                                                                     |
|------------------|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Customer Gateway | AWS-Customer-Gateway-1 | Routing = Static, IP Address = Internet-routable CloudBridge Connector tunnel endpoint IP address on the NetScaler side = 66.165.176.15                                                             |
| VPN Connection   | AWS-VPN-Connection-1   | Customer Gateway = AWS-Customer-Gateway-1, Virtual Private Gateway= Virtual-Private-Gateway-1, Routing Options: Type = Static, Static IP Prefixes = Subnets on the NetScaler side = 10.102.147.0/24 |

**Settings on NetScaler appliance NS\_Appliance-1 in Datacenter-1:**

| Appliance                          | Settings             |                                                                                                                                                                  |
|------------------------------------|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SNIP1(for reference purposes only) | 66.165.176.15        |                                                                                                                                                                  |
| IPSec profile                      | NS_AWS_IPSec_Profile | IKE version = v1, Encryption algorithm = AES, Hash algorithm = HMAC SHA1                                                                                         |
| CloudBridge Connector tunnel       | NS_AWS_Tunnel        | Remote IP = 168.63.252.133, Local IP= 66.165.176.15, Tunnel protocol = IPSec, IPSec profile= NS_AWS_IPSec_Profile                                                |
| Policy based route                 | NS_AWS_Pbr           | Source IP range = Subnet in the datacenter =10.102.147.0-10.102.147.255, Destination IP range =Subnet in AWS =10.20.20.0-10.20.20.255, IP Tunnel = NS_AWS_Tunnel |

**Points to consider for a CloudBridge Connector tunnel configuration**

Before configuring a CloudBridge Connector tunnel between a NetScaler appliance and AWS gateway, consider the following points:

1. AWS supports the following IPSec settings for a CloudBridge Connector tunnel. Therefore, you must specify the same IPSec settings when you configure the NetScaler appliance for the CloudBridge Connector tunnel.
  - IKE version = v1
  - Encryption algorithm = AES
  - Hash algorithm = HMAC SHA1
2. You must configure the firewall at the NetScaler end to allow the following.
  - Any UDP packets for port 500
  - Any UDP packets for port 4500
  - Any ESP (IP protocol number 50) packets
3. You must configure Amazon AWS before specifying the tunnel configuration on the NetScaler, because the public IP address of the AWS end (gateway) of the tunnel and the PSK are automatically generated when you set up the tunnel configuration in AWS. You need this information for specifying the tunnel configuration on the NetScaler appliance.
4. AWS gateway supports static routes and the BGP protocol for route updates. The NetScaler appliance does not support the BGP protocol in a CloudBridge Connector tunnel to AWS gateway. Therefore, appropriate static routes must be used on both sides of the CloudBridge Connector tunnel for proper routing of traffic through the tunnel.

## Configuring Amazon AWS for the CloudBridge Connector tunnel

To create a CloudBridge Connector tunnel configuration on Amazon AWS, use the Amazon AWS Management Console, which is a web based graphical interface for creating and managing resources on Amazon AWS.

Before you begin the CloudBridge Connector tunnel configuration on AWS cloud, make sure that:

- You have a user account for Amazon AWS cloud.
- You have a virtual private cloud whose networks you want to connect to the networks at the NetScaler side through the CloudBridge Connector tunnel.
- You are familiar with the Amazon AWS Management Console.

### Note:

The procedures for configuring Amazon AWS for a CloudBridge Connector tunnel might change over time, depending on the Amazon AWS release cycle. Citrix recommends you refer [Amazon AWS documentation](#) for the latest procedures.

To configure a CloudBridge connector tunnel between a NetScaler and AWS gateway perform the following tasks on the AWS Management Console:


- **Create a Customer Gateway.** A customer gateway is an AWS entity that represents a CloudBridge Connector tunnel endpoint. For a CloudBridge Connector tunnel between a NetScaler appliance and AWS gateway, the customer gateway represents the NetScaler appliance on AWS. The customer gateway specifies a name, the type of routing (static or BGP) used in the tunnel, and the CloudBridge Connector tunnel endpoint IP address on the NetScaler side. The IP address can be an Internet-routable NetScaler owned subnet IP (SNIP) address or, if the NetScaler appliance is behind a NAT device, an Internet-routable NAT IP address that represents the SNIP address.
- **Create a Virtual Private Gateway and attach it to a VPC.** A virtual private gateway is a CloudBridge Connector tunnel endpoint at the AWS side. When you create a virtual private gateway, you assigned it a name or allow AWS to assign the name. You then associate the virtual private gateway with a VPC. This association enables the subnets of the VPC to connect to the subnets at the NetScaler side through the CloudBridge Connector tunnel.
- **Create a VPN Connection.** A VPN connection specifies a customer gateway and a virtual private gateway between which a CloudBridge Connector tunnel is to be created. It also specifies an IP prefix for the networks at the NetScaler side. Only IP prefixes that are known to the virtual private gateway (through static route entry) can receive traffic from the VPC through the tunnel. Also, the virtual private gateway does not route any traffic not destined to the specified IP prefixes through the tunnel. After configuring a VPN connection, you might have to wait few minutes for it to be created.
- **Configure Routing Options.** For the VPC's network to reach the networks at the NetScaler side through the CloudBridge Connector tunnel, you must configure the VPC's routing table to include routes for the networks at the NetScaler side and point those routes to the virtual private gateway. You can include routes in a VPC's routing table in one of the following ways:
  - **Enable Route Propagation.** You can enable route propagation for your routing table, so that routes are automatically propagated to the table. The static IP prefixes that you specify for VPN configuration are propagated to the routing table after you've created the VPN connection.
  - **Enter Static Routes Manually.** If you do not enable route propagation, you must manually enter the static routes for the networks at the NetScaler side.
- **Download Configuration.** After the CloudBridge Connector tunnel (VPN connection) configuration is created on AWS, download the configuration file of the VPN connection to your local system. You might need the information in the configuration file for configuring the CloudBridge Connector tunnel on the NetScaler appliance.

To create a customer gateway

1. Open the Amazon VPC console at <https://console.aws.amazon.com/vpc/>.
2. Navigate to **VPN Connections > Customer Gateways** and click on **Create Customer Gateway**.

3. In the **Create Customer Gateway** dialog box, set the following parameters and then click **Yes, Create**:


- **Name tag.** A name for the customer gateway.
- **Routing list.** Type of routing between NetScaler appliance and AWS virtual private gateway for advertising routes to each other through the CloudBridge Connector tunnel. Select **Static Routing** from the **Routing** list. **Note:** The NetScaler appliance does not support the BGP protocol in a CloudBridge Connector tunnel to AWS gateway. Therefore, appropriate static routes must be used on both sides of the CloudBridge Connector tunnel for proper routing of traffic through the tunnel.
- **IP Address.** Internet-routable CloudBridge Connector tunnel endpoint IP address on the NetScaler side. The IP address can be an Internet-routable NetScaler owned subnet IP (SNIP) address or, if the NetScaler appliance is behind a NAT device, an Internet-routable NAT IP address that represents the SNIP address.

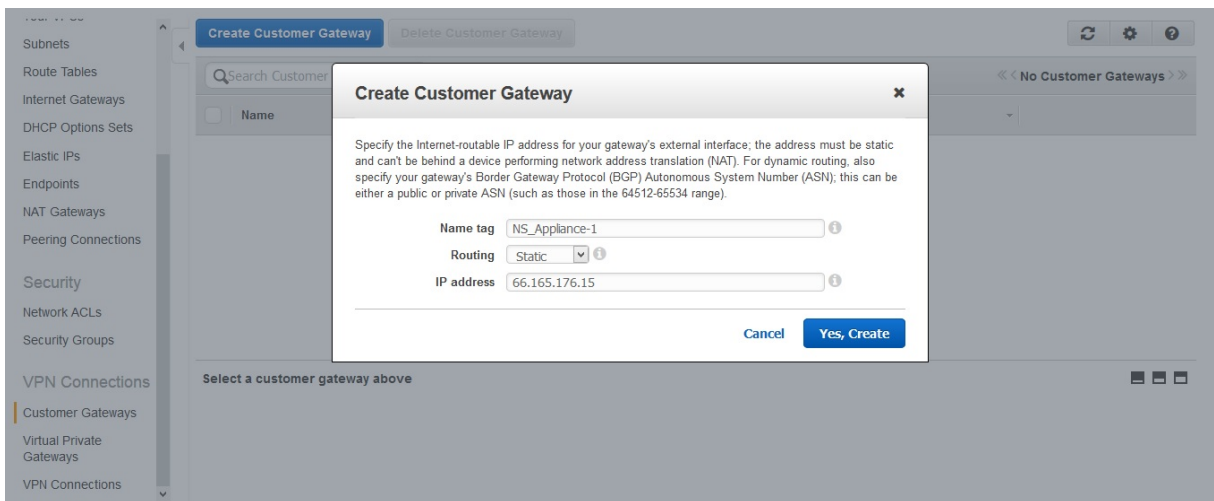


To create a virtual private gateway and attach it to a VPC

1. Navigate to **VPN Connections > Virtual Private Gateways**, and then click **Create Virtual Private Gateway**.
2. Enter a name for the virtual private gateway, and then click **Yes, Create**.



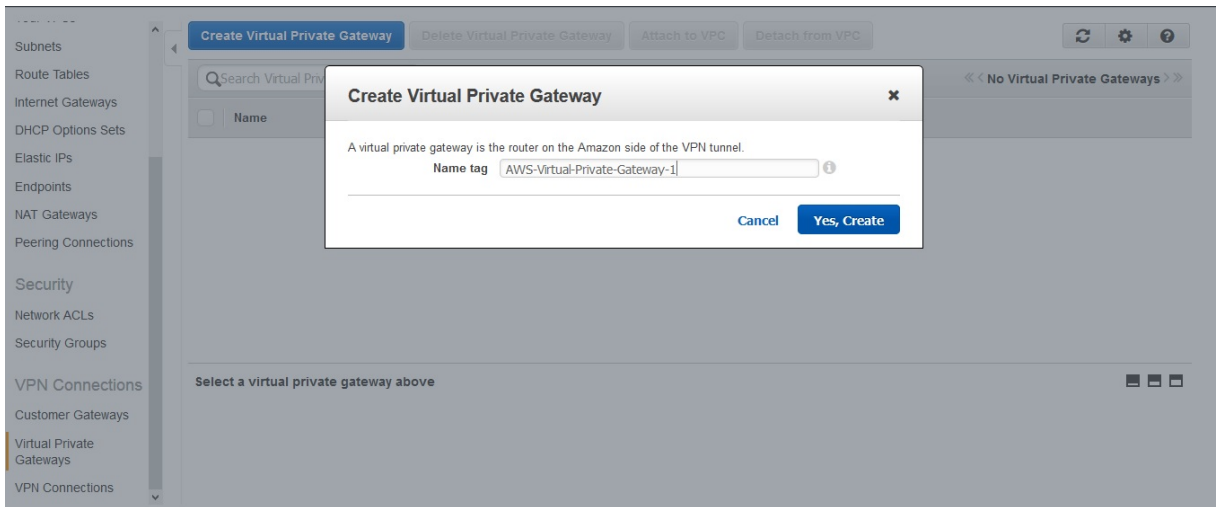


1. Select the virtual private gateway that you created, and then click Attach to VPC.
2. In the Attach to VPC dialog box, select your VPC from the list, and then choose Yes, Attach.

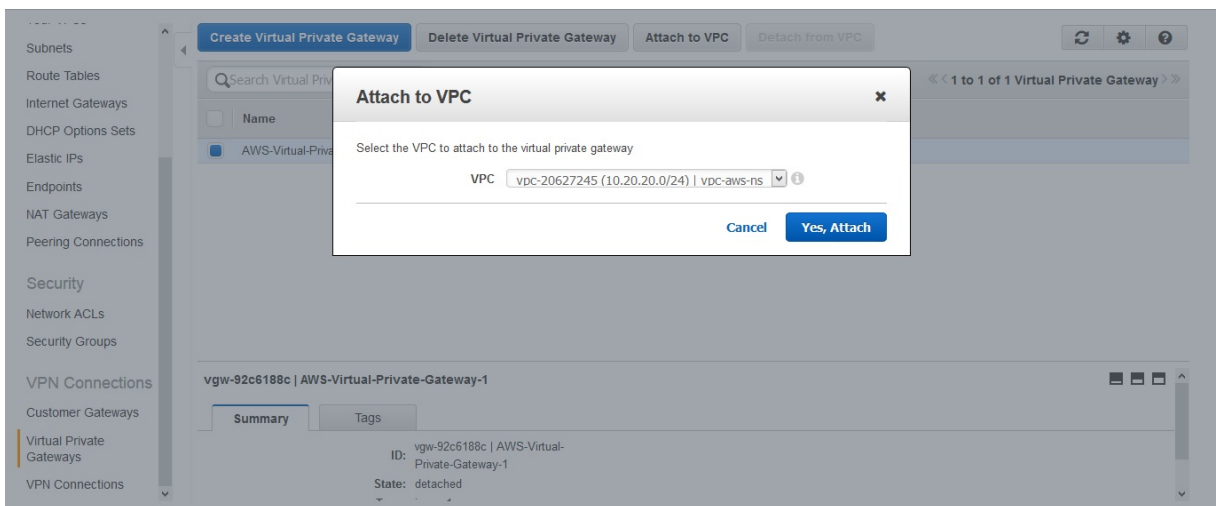

**To create a VPN connection:**

1. Navigate to VPN Connections > VPN Connections and then click Create VPN Connection.
2. In the Create VPN Connection dialog box set the following parameters and then choose Yes, Create:
  - **Name tag.** A name for the VPN connection.
  - **Virtual Private Gateway.** Select the virtual private gateway that you created earlier.
  - **Customer Gateway.** Select Existing. Then, from the drop down list, select the customer gateway that you created earlier.
  - **Routing Options.** Type of routing between the virtual private gateway and customer gateway (NetScaler appliance). Select Static. In the Static IP Prefixes field, specify the IP prefixes for the subnet on the NetScaler side, separated by commas.

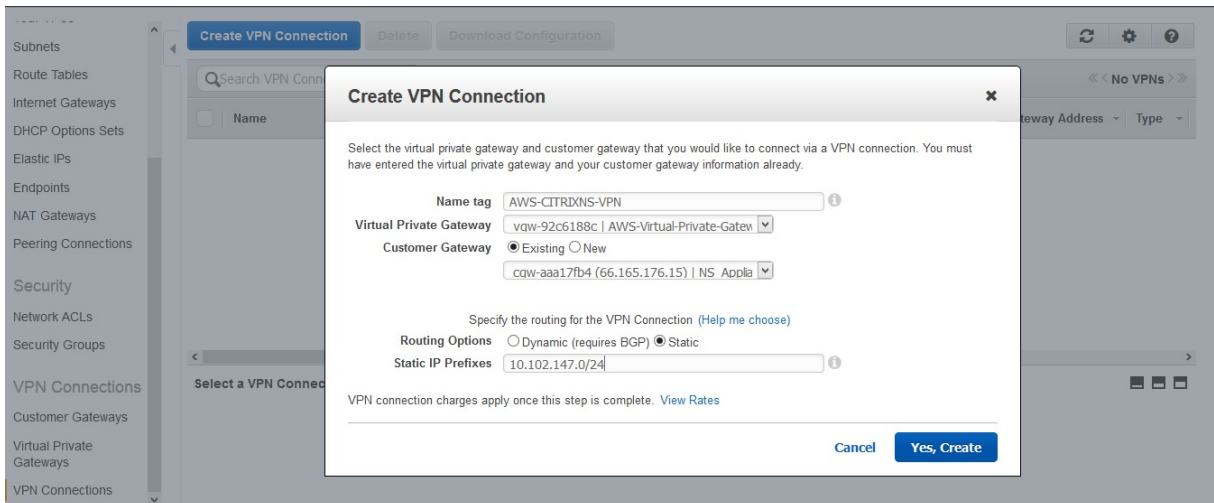

### To enable route propagation:

1. Navigate to **Route Tables** and select the routing table that's associated with the subnet whose traffic is to traverse the CloudBridge Connector tunnel.

#### Note

By default, this is the main routing table for the VPC.

1. On the **Route Propagation** tab in the details pane, choose **Edit**, select the virtual private gateway, and then choose **Save**.

### To manually enter static routes:

1. Navigate to **Route Tables** and select your routing table.
2. On the **Routes** tab, click **Edit**.
3. In the **Destination** field, enter the static route used by your CloudBridge Connector tunnel (VPN connection).
4. Select the virtual private gateway ID from the **Target** list, and then click **Save**.

### To download the configuration file:

1. Navigate to **VPN Connection**, select a VPN connection, and then click **Download Configuration**.
2. In the **Download Configuration** dialog box, set the following parameters, and then click **Yes, Download**.
  - **Vendor.** Select **Generic**.
  - **Platform.** Select **Generic**.
  - **Software.** Select **Vendor Agnostic**.

## Configuring the NetScaler appliance for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel between a NetScaler appliance and a virtual private gateway on AWS cloud, perform the following tasks on the NetScaler appliance.

You can use either the NetScaler command line or the GUI.

- **Create an IPsec profile.** An IPsec profile entity specifies the IPsec protocol parameters, such as IKE version, encryption algorithm, hash algorithm and PSK to be used by the IPsec protocol in the CloudBridge Connector tunnel.
- **Create an IP tunnel that uses IPsec protocol and associate the IPsec profile with it.** An IP tunnel specifies the local IP address (a SNIP address configured on the NetScaler appliance), remote IP address (the public IP address of the virtual private gateway in AWS), protocol (IPsec) used to set up the CloudBridge Connector tunnel, and an IPsec profile entity. The created IP tunnel entity is also called the CloudBridge Connector tunnel entity.
- **Create a PBR rule and associate it with the IP tunnel.** A PBR entity specifies a set of rules and an IP tunnel (CloudBridge Connector tunnel) entity. The source IP address range and the destination IP address range are the conditions for the PBR entity. Set the source IP address range to specify the NetScaler-side subnet whose traffic is to traverse the tunnel, and set the destination IP address range to specify the AWS VPC subnet whose traffic is to traverse the CloudBridge Connector tunnel. Any request packet that originates from a client in the subnet on the NetScaler side and is destined to a server in the AWS cloud subnet, and matches the source and destination IP range of the PBR entity, is sent across the CloudBridge Connector tunnel associated with the PBR entity.

To create an IPSEC profile by using the NetScaler command line

At the Command prompt, type:

- `add ipsec profile <name> -psk <string> -**ikeVersion** v1`
- `show ipsec profile** <name>`

To create an IPSEC tunnel and bind the IPSEC profile to it by using the NetScaler command line

At the Command prompt, type:

- `add ipTunnel <name> <remote> <remoteSubnetMask> <local> -protocol IPSEC -ipsecProfileName <string>`
- `show ipTunnel <name>`

To create a PBR rule and bind the IPSEC tunnel to it by using the NetScaler command line

At the Command prompt, type:

- `add pbr <pbrName> ALLOW -srcIP <subnet-range> -destIP** <subnet-range> -*ipTunnel <tunnelName>`

- `apply pbrs`
- `show pbr <pbrName>`

The following commands create all settings of NetScaler appliance NS\_Appliance-1 used in “Example of CloudBridge Connector Configuration and Data Flow.”

```
1 > add ipsec profile NS_AWS_IPSec_Profile -psk
 DkiMgMdcBqvYREEuIvXsbKkKw0Foyabcd -ikeVersion v1 -lifetime
 31536000
2 Done
3 > add iptunnel NS_AWS_Tunnel 168.63.252.133 255.255.255.255
 66.165.176.15 -protocol IPSEC -ipsecProfileName
 NS_AWS_IPSec_Profile
4
5 Done
6 > add pbr NS_AWS_Pbr -srcIP 10.102.147.0-10.102.147.255 -destIP
 10.20.0.0-10.20.255.255 -ipTunnel NS_AWS_Tunnel
7 Done
8
9 > apply pbrs
10
11 Done
```

To create an IPSEC profile by using the GUI

1. Navigate to **System > CloudBridge Connector > IPsec Profile**.
2. In the details pane, click **Add**.
3. In the **Add IPsec Profile** dialog box, set the following parameters:
  - Name
  - Encryption Algorithm
  - Hash Algorithm
  - IKE Protocol Version (select V1)
4. Select the **Pre-shared Key Authentication** method and set the **Pre-Shared Key Exists** parameter.
5. Click **Create**, and then click **Close**.

To create an IP tunnel and bind the IPSEC profile to it by using the GUI

1. Navigate to **System > CloudBridge Connector > IP Tunnels**.
2. On the **IPv4 Tunnels** tab, click **Add**.
3. In the **Add IP Tunnel** dialog box, set the following parameters:
  - Name
  - Remote IP

- Remote Mask
- Local IP Type (In the Local IP Type drop down list, select Subnet IP).
- Local IP (All the configured IPs of the selected IP type are in the Local IP drop down list. Select the desired IP from the list.)
- Protocol
- IPSec Profile

4. Click **Create**, and then click **Close**.

To create a PBR rule and bind the IPSEC tunnel to it by using the GUI

1. Navigate to **System > Network > PBR**.
2. On the **PBR** tab, click **Add**.
3. In the **Create PBR** dialog box, set the following parameters:
  - Name
  - Action
  - Next Hop Type (Select IP Tunnel)
  - IP Tunnel Name
  - Source IP Low
  - Source IP High
  - Destination IP Low
  - Destination IP High
4. Click **Create**, and then click **Close**.

The corresponding new CloudBridge Connector tunnel configuration on the NetScaler appliance appears in the GUI.

The current status of the CloudBridge connector tunnel is shown in the Configured CloudBridge Connector pane. A green dot indicates that the tunnel is up. A red dot indicates that the tunnel is down.

## Monitoring the CloudBridge Connector tunnel

You can monitor the performance of CloudBridge Connector tunnels on a NetScaler appliance by using CloudBridge Connector tunnel statistical counters.

For more information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).


## Configuring a CloudBridge Connector tunnel between a datacenter and Azure cloud

May 2, 2023

The NetScaler appliance provides connectivity between your enterprise datacenters and the Microsoft cloud hosting provider, Azure, making Azure a seamless extension of the enterprise network. NetScaler encrypts the connection between the enterprise datacenter and Azure cloud so that all data transferred between the two is secure.

### How CloudBridge Connector tunnel works

To connect a datacenter to Azure cloud, you set up a CloudBridge Connector tunnel between a NetScaler appliance that resides in the datacenter and a gateway that resides in the Azure cloud. The NetScaler appliance in the datacenter and the gateway in Azure cloud are the end points of the CloudBridge Connector tunnel and are called peers of the CloudBridge Connector tunnel.

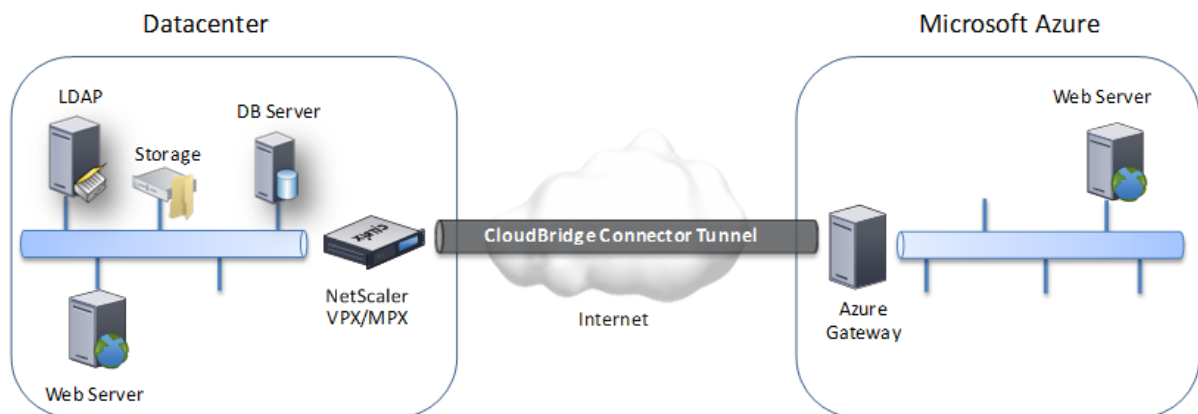

A CloudBridge Connector tunnel between a datacenter and Azure cloud uses the open-standard Internet Protocol security (IPSec) protocol suite, in tunnel mode, to secure communications between peers in the CloudBridge Connector tunnel. In a CloudBridge Connector tunnel, IPSec ensures:

- Data integrity
- Data origin authentication
- Data confidentiality (encryption)
- Protection against replay attacks

IPSec uses the tunnel mode in which the complete IP packet is encrypted and then encapsulated. The encryption uses the Encapsulating Security Payload (ESP) protocol, which ensures the integrity of the packet by using a HMAC hash function and ensures confidentiality by using an encryption algorithm. The ESP protocol, after encrypting the payload and calculating the HMAC, generates an ESP header

and inserts it before the encrypted IP packet. The ESP protocol also generates an ESP trailer and inserts it at the end of the packet.

The IPSec protocol then encapsulates the resulting packet by adding an IP header before the ESP header. In the IP header, the destination IP address is set to the IP address of the CloudBridge Connector peer.

Peers in the CloudBridge Connector tunnel use the Internet Key Exchange version 1 (IKEv1) protocol (part of the IPSec protocol suite) to negotiate secure communication, as follows:

1. The two peers mutually authenticate with each other, using pre-shared key authentication, in which the peers exchange a text string called a pre-shared key (PSK). The pre-shared keys are matched against each other for authentication. Therefore, for the authentication to be successful, you must configure the same pre-shared key on each of the peers.
2. The peers then negotiate to reach agreement on:
  - An encryption algorithm
  - Cryptographic keys for encrypting data on one peer and decrypting it on the other.

This agreement upon the security protocol, encryption algorithm and cryptographic keys is called a Security Association (SA). SAs are one-way (simplex). For example, when a CloudBridge Connector tunnel is set up between a NetScaler appliance in a datacenter and a gateway in an Azure cloud, both the datacenter appliance and the Azure gateway have two SAs. One SA is used for processing out-bound packets, and the other SA is used for processing inbound packets. SAs expire after a specified interval of time, which is called the lifetime.

### **Example of CloudBridge Connector tunnel configuration and data flow**

As an illustration of CloudBridge Connector Tunnel, consider an example in which a CloudBridge Connector tunnel is set up between NetScaler appliance CB\_Appliance-1 in a datacenter and gateway Azure\_Gateway-1 in Azure cloud.

CB\_Appliance-1 also functions as an L3 router, which enables a private network in the datacenter to reach a private network in the Azure cloud through the CloudBridge Connector tunnel. As a router, CB\_Appliance-1 enables communication between client CL1 in the datacenter and server S1 in the Azure cloud through the CloudBridge Connector tunnel. Client CL1 and server S1 are on different private networks.

On CB\_Appliance-1, the CloudBridge Connector tunnel configuration includes an IPSec profile entity named CB\_Azure\_IPSec\_Profile, a CloudBridge Connector tunnel entity named CB\_Azure\_Tunnel, and a policy based routing (PBR) entity named CB\_Azure\_Pbr.

The IPSec profile entity CB\_Azure\_IPSec\_Profile specifies the IPSec protocol parameters, such as IKE

version, encryption algorithm, and hash algorithm, to be used by the IPSec protocol in the CloudBridge Connector tunnel. `CB_Azure_IPSec_Profile` is bound to IP tunnel entity `CB_Azure_Tunnel`.

CloudBridge Connector tunnel entity `CB_Azure_Tunnel` specifies the local IP address (a public IP (SNIP) address configured on the NetScaler appliance), the remote IP address (the IP address of the `Azure_Gateway-1`), and the protocol (IPSec) used to set up the CloudBridge Connector tunnel. `CB_Azure_Tunnel` is bound to the PBR entity `CB_Azure_Pbr`.


The PBR entity `CB_Azure_Pbr` specifies a set of conditions and a CloudBridge Connector tunnel entity (`CB_Azure_Tunnel`). The source IP address range and the destination IP address range are the conditions for `CB_Azure_Pbr`. The source IP address range and the destination IP address range are specified as a subnet in the datacenter and a subnet in the Azure cloud, respectively. Any request packet originating from a client in the subnet in the datacenter and destined to a server in the subnet on the Azure cloud matches the conditions in `CB_Azure_Pbr`. This packet is then considered for CloudBridge processing and is sent across the CloudBridge Connector tunnel (`CB_Azure_Tunnel`) bound to the PBR entity.

On Microsoft Azure, the CloudBridge Connector tunnel configuration includes a local network entity named `My-Datacenter-Network`, a virtual network entity named `Azure-Network-for-CloudBridge-Tunnel`, and a gateway named `Azure_Gateway-1`.

The local (local to Azure) network entity `My-Datacenter-Network` specifies the IP address of the NetScaler appliance on the datacenter side, and the datacenter subnet whose traffic is to traverse the CloudBridge Connector tunnel. The virtual network entity `Azure-Network-for-CloudBridge-Tunnel` defines a private subnet named `Azure-Subnet-1` in Azure. The traffic of the subnet traverses the CloudBridge Connector tunnel. The server `S1` is provisioned in this subnet.

The local network entity `My-Datacenter-Network` is associated with the virtual network entity `Azure-Network-for-CloudBridge-Tunnel`. This association defines the remote and local network details of the CloudBridge Connector tunnel configuration in Azure. Gateway `Azure_Gateway-1` was created for this association to become the CloudBridge end point at the Azure end of the CloudBridge Connector tunnel.



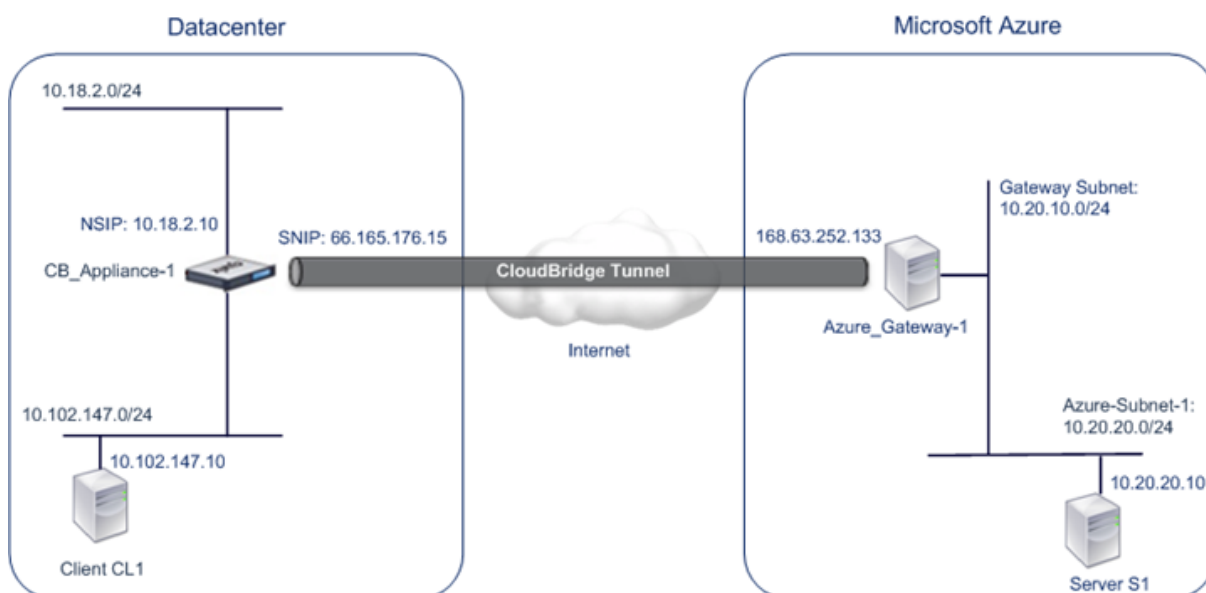

For more information about the settings, refer to the [CloudBridge Connector Tunnel Settings](#) pdf.

### Points to consider for a CloudBridge Connector tunnel configuration

Before configuring a CloudBridge Connector tunnel between a NetScaler appliance in datacenter and Microsoft Azure, consider the following points:

1. The NetScaler appliance must have a public facing IPv4 address (type SNIP) to use as a tunnel end-point address for the CloudBridge Connector tunnel. Also, the NetScaler appliance should not be behind a NAT device.
2. Azure supports the following IPsec settings for a CloudBridge Connector tunnel. Therefore, you must specify the same IPsec settings while configuring the NetScaler for the CloudBridge Connector tunnel.
  - IKE version = v1
  - Encryption algorithm = AES
  - Hash algorithm = HMAC SHA1
3. You must configure the firewall in the datacenter edge to allow the following.
  - Any UDP packets for port 500
  - Any UDP packets for port 4500
  - Any ESP (IP protocol number 50) packets
4. IKE re-keying, which is renegotiation of new cryptographic keys between the CloudBridge Connector tunnel end points to establish new SAs, is not supported. When the Security Associations (SAs) expire, the tunnel goes into the DOWN state. Therefore, you must set a very large value for the lifetimes of SAs.

5. You must configure Microsoft Azure before specifying the tunnel configuration on the NetScaler, because the public IP address of the Azure end (gateway) of the tunnel, and the PSK, are automatically generated when you set up the tunnel configuration in Azure. You need this information for specifying the tunnel configuration on the NetScaler.

## Configuring the CloudBridge Connector tunnel

For setting up a CloudBridge Connector tunnel between your datacenter and Azure, you must install CloudBridge VPX/MPX in your datacenter, configure Microsoft Azure for the CloudBridge Connector tunnel, and then configure the NetScaler appliance in the data center for the CloudBridge Connector tunnel.

Configuring a CloudBridge Connector tunnel between a NetScaler appliance in datacenter and Microsoft Azure consists of the following tasks:

1. **Setting up the NetScaler appliance in the datacenter.** This task involves deploying and configuring a NetScaler physical appliance (MPX), or provisioning and configuring a NetScaler virtual appliance (VPX) on a virtualization platform in the datacenter.
2. **Configuring Microsoft Azure for the CloudBridge Connector tunnel.** This task involves creating local network, virtual network, and gateway entities in Azure. The local network entity specifies the IP address of the CloudBridge Connector tunnel end point (the NetScaler appliance) on the datacenter side, and the datacenter subnet whose traffic is to traverse the CloudBridge Connector tunnel. The virtual network defines a network on Azure. Creating the virtual network includes defining a subnet whose traffic is to traverse the CloudBridge Connector tunnel to be formed. You then associate the local network with the virtual network. Finally, you create a gateway that becomes the end point at the Azure end of the CloudBridge Connector tunnel.
3. **Configuring the NetScaler appliance in the datacenter for the CloudBridge Connector tunnel.** This task involves creating an IPSec profile, an IP tunnel entity, and a PBR entity in the NetScaler appliance in datacenter. The IPSec profile entity specifies the IPSec protocol parameters, such as IKE version, encryption algorithm, hash algorithm, and PSK, to be used in the CloudBridge Connector tunnel. The IP tunnel specifies the IP address of both the CloudBridge Connector tunnel end points (the NetScaler appliance in datacenter and the gateway in Azure) and the protocol to be used in the CloudBridge Connector tunnel. You then associate the IPSec profile entity with the IP tunnel entity. The PBR entity specifies the two subnets, in the datacenter and in the Azure cloud, that are to communicate with each other through the CloudBridge Connector tunnel. You then associate the IP tunnel entity with the PBR entity.

## Configuring Microsoft Azure for the CloudBridge Connector tunnel

To create a CloudBridge Connector tunnel configuration on Microsoft Azure, use the Microsoft Windows Azure Management Portal, which is a web based graphical interface for creating and managing resources on Microsoft Azure.

Before you begin the CloudBridge Connector tunnel configuration on Azure cloud, make sure that:

- You have a user account for Microsoft Azure.
- You have a conceptual understanding of Microsoft Azure.
- You are familiar with the Microsoft Windows Azure Management Portal.

To configure a CloudBridge Connector tunnel between a datacenter and an Azure cloud, perform the following tasks on Microsoft Azure by using the Microsoft Windows Azure Management Portal:

- **Create a local network entity.** Create a local network entity in Windows Azure for specifying the network details of the datacenter. A local network entity specifies the IP address of the CloudBridge Connector tunnel end point (the NetScaler) on the datacenter side and the datacenter subnet whose traffic is to traverse the CloudBridge Connector tunnel.
- **Create a Virtual Network.** Create virtual network entity that defines a network on Azure. This task includes defining a private address space, where you provide a range of private addresses and subnets belonging to the range specified in the address space. The traffic of the subnets will traverse the CloudBridge Connector tunnel. You then associate a local network entity with the virtual network entity. This association lets Azure create a configuration for a CloudBridge Connector tunnel between the virtual network and the data center network. A gateway (to be created) in Azure for this virtual network will be the CloudBridge end point at the Azure end of the CloudBridge Connector tunnel. You then define a private subnet for the gateway to be created. This subnet belongs to the range specified in the address space in the virtual network entity.
- **Create a gateway in Windows Azure.** Create a gateway that becomes the end point at the Azure end of the CloudBridge Connector tunnel. Azure, from its pool of public IP addresses, assigns an IP address to the gateway created.
- **Gather the public IP address of the gateway and the pre-shared key.** For a CloudBridge Connector tunnel configuration on Azure, the public IP address of the gateway and the pre-shared Key (PSK) are automatically generated by Azure. Make a note of this information. You will need it for configuring the CloudBridge Connector tunnel on the NetScaler in datacenter.

### Note:

The procedures for configuring Microsoft Azure for a CloudBridge Connector tunnel might change over time, depending on the Microsoft Azure release cycle. For the latest procedures, see the [Microsoft Azure documentation](#).

## Configuring the NetScaler Appliance in the datacenter for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel between a datacenter and an Azure cloud, perform the following tasks on the NetScaler in the datacenter. You can use either the NetScaler command line or the GUI:

- **Create an IPsec profile.** An IPsec profile entity specifies the IPsec protocol parameters, such as IKE version, encryption algorithm, hash algorithm, and PSK, to be used by the IPsec protocol in the CloudBridge Connector tunnel.
- **Create an IP tunnel with IPsec protocol and associate the IPsec profile to it.** An IP tunnel specifies the local IP address (a public SNIP address configured on the NetScaler appliance), remote IP address (the public IP address of the gateway in Azure), protocol (IPsec) used to set up the CloudBridge Connector tunnel, and an IPsec profile entity. The created IP tunnel entity is also called the CloudBridge Connector tunnel entity.
- **Create a PBR rule and associate the IP tunnel to it.** A PBR entity specifies a set of conditions and an IP tunnel (CloudBridge Connector tunnel) entity. The source IP address range and the destination IP range are the conditions for the PBR entity. You must set the source IP address range to specify the datacenter subnet whose traffic is to traverse the tunnel, and the destination IP address range to specify the Azure subnet whose traffic is to traverse the CloudBridge Connector tunnel. Any request packet originated from a client in the subnet on the datacenter and destined to a server in the subnet on the Azure cloud matches the source and destination IP range of the PBR entity. This packet is then considered for CloudBridge Connector tunnel processing and is sent across the CloudBridge Connector tunnel associated with the PBR entity.

The GUI combines all these tasks in a single wizard called the CloudBridge Connector wizard.

To create an IPSEC profile by using the NetScaler command line:

At the Command prompt, type:

```
add ipsec profile <name> -psk <string> -ikeVersion v1
```

To create an IPSEC tunnel and bind the IPSEC profile to it by using the NetScaler command line:

At the Command prompt, type:

```
add ipTunnel <name> <remote> <remoteSubnetMask> <local> -protocol
IPSEC -ipsecProfileName <string>
```

To create a PBR rule and bind the IPSEC tunnel to it by using the NetScaler command line

```
add pbr <pbrName> ALLOW -srcIP <subnet-range> -destIP <subnet-range>
ipTunnel <tunnelName> apply pbrs
```

Sample Configuration

The following commands create all settings of NetScaler appliance CB\_Appliance-1 used in “Example of CloudBridge Connector Configuration and Data Flow”.


```

1 > add ipsec profile CB_Azure_IPSec_Profile -psk
 DkiMgMdcBqvYREEuIvXsbKkKw0F0yDiLM -ikeVersion v1 -lifetime 31536000
2 Done
3
4 > add iptunnel CB_Azure_Tunnel 168.63.252.133 255.255.255.255
 66.165.176.15 -protocol IPSEC -ipsecProfileName
 CB_Azure_IPSec_Profile
5 Done
6
7 > add pbr CB_Azure_Pbr -srcIP 10.102.147.0-10.102.147.255 -destIP
 10.20.0.0-10.20.255.255 -ipTunnelCB_Azure_Tunnel
8 Done
9
10 > apply pbrs
11 Done

```


To configure a CloudBridge Connector tunnel in a NetScaler appliance by using the GUI

1. Access the GUI by using a web browser to connect to the IP address of the NetScaler appliance in the datacenter.
2. Navigate to **System > CloudBridge Connector**.
3. In the right pane, under **Getting Started**, click **Create/Monitor CloudBridge**.
4. Click **Get Started**.

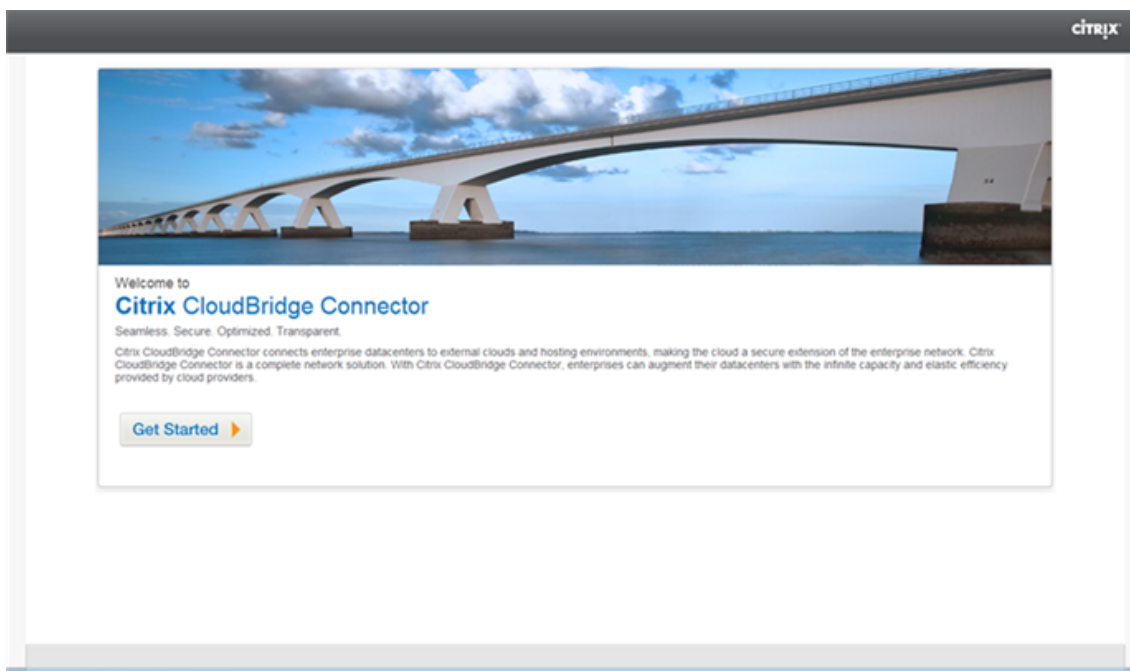


**Note:** If you already have any CloudBridge Connector tunnel configured on the NetScaler appliance, this screen does not appear, and you are taken to the CloudBridge Connector Setup pane.


5. In the CloudBridge Setup pane, click **Microsoft Windows Azure**.

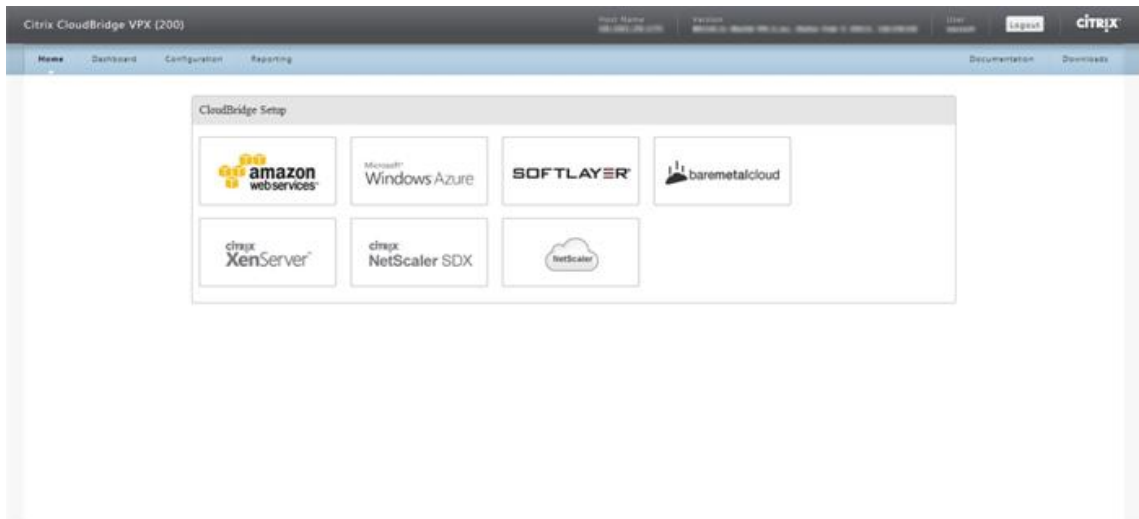


6. In the Azure Settings pane, in the **Gateway IP Address** field, type the IP address of the Azure gateway. The CloudBridge Connector tunnel is then set up between the NetScaler appliance and the gateway. In the **Subnet (IP Range)** text boxes, specify a subnet range (in Azure cloud), the traffic of which is to traverse the CloudBridge Connector tunnel. Click **Continue**.

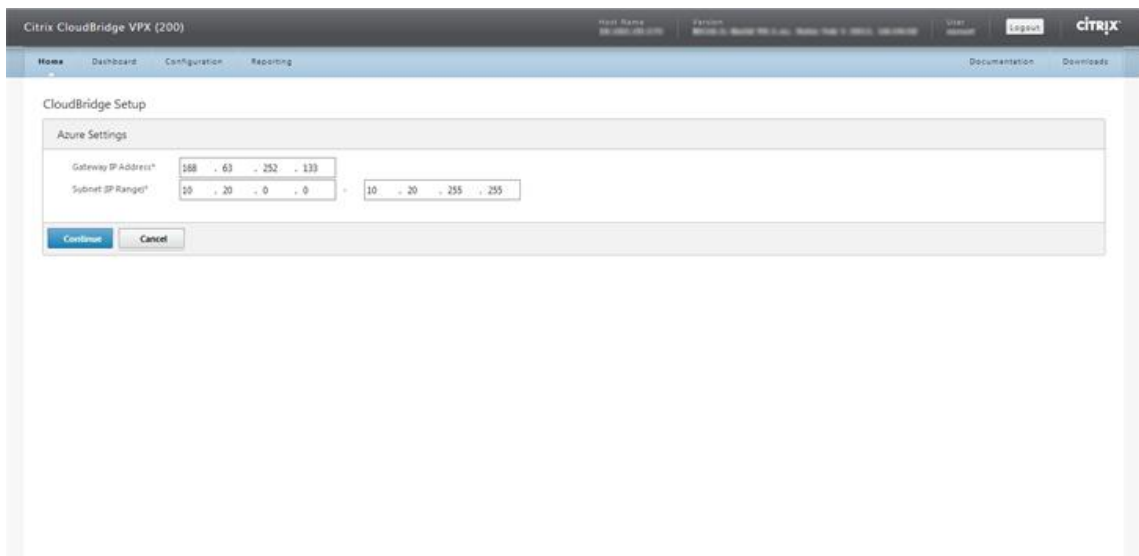

7. In the NetScaler Settings pane, from the **Local Subnet IP** drop-down list, select a publicly accessible SNIP address configured on the NetScaler appliance. In **Subnet (IP Range)** text boxes, specify a local subnet range, the traffic of which is to traverse the CloudBridge Connector tunnel. Click **Continue**.

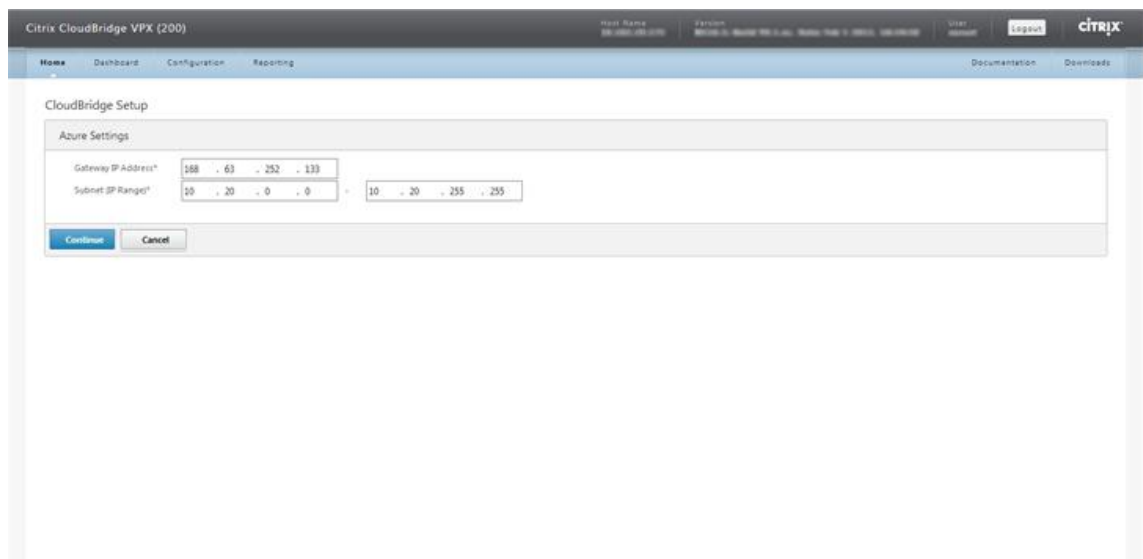

8. In the **CloudBridge Setting** pane, in the CloudBridge Name text box, type a name for the CloudBridge that you want to create.

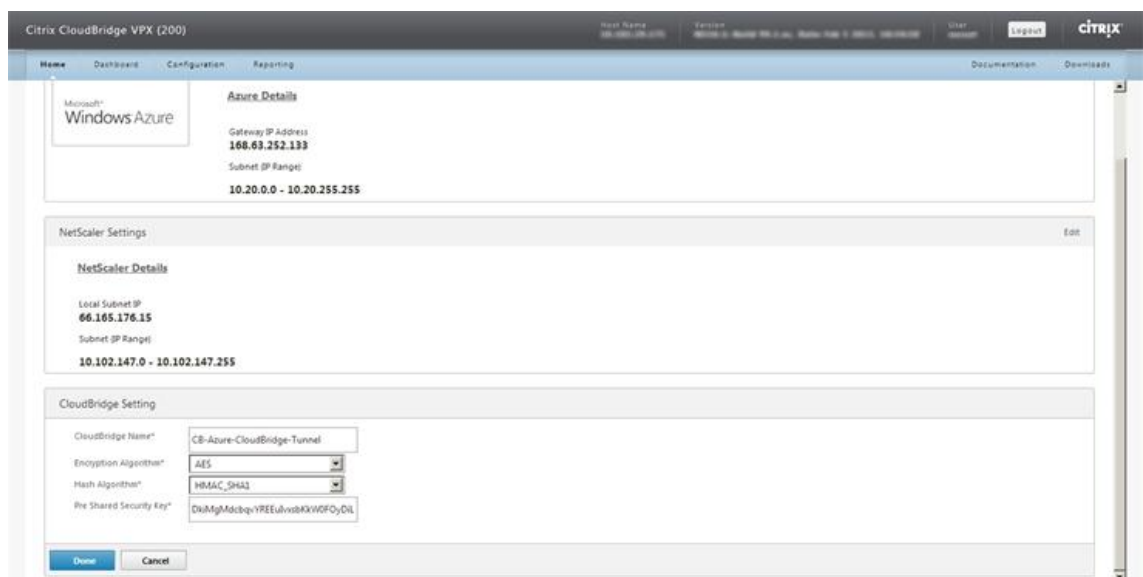

9. From the Encryption Algorithm and Hash Algorithm drop-down lists, select the AES and HMAC\_SHA1 algorithms, respectively. In the Pre Shared Security Key text box, type the security key.
10. Click **Done**.

## Monitoring the CloudBridge Connector tunnel

You can view statistics for monitoring the performance of a CloudBridge Connector tunnel between the NetScaler appliance in the datacenter and Microsoft Azure. To view CloudBridge Connector tunnel

statistics on the NetScaler appliance, use GUI or NetScaler command line. To view CloudBridge Connector tunnel statistics in Microsoft Azure, use the Microsoft Windows Azure Management Portal.

### Displaying CloudBridge Connector tunnel Statistics in the NetScaler appliance

For information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).

### Displaying CloudBridge Connector tunnel Statistics in Microsoft Azure


The following table lists the statistical counters available for monitoring CloudBridge Connector tunnels in Microsoft Azure.

| Statistical counter | Specifies                                                                                                                       |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------|
| DATA IN             | Total number of kilobytes received by the Azure gateway through the CloudBridge Connector tunnel since the gateway was created. |
| DATA OUT            | Total number of kilobytes sent by the Azure gateway through the CloudBridge Connector tunnel since the gateway was created.     |


To display CloudBridge Connector tunnel statistics by using the Microsoft Windows Azure Management Portal

1. Log on to the [Windows Azure Management Portal](#) by using your Microsoft Azure account credentials.
2. In the left pane, click **NETWORKS**.
3. On the **Virtual Network** tab, in the Name column, select the virtual network entity associated with a CloudBridge Connector tunnel whose statistics you want to display.



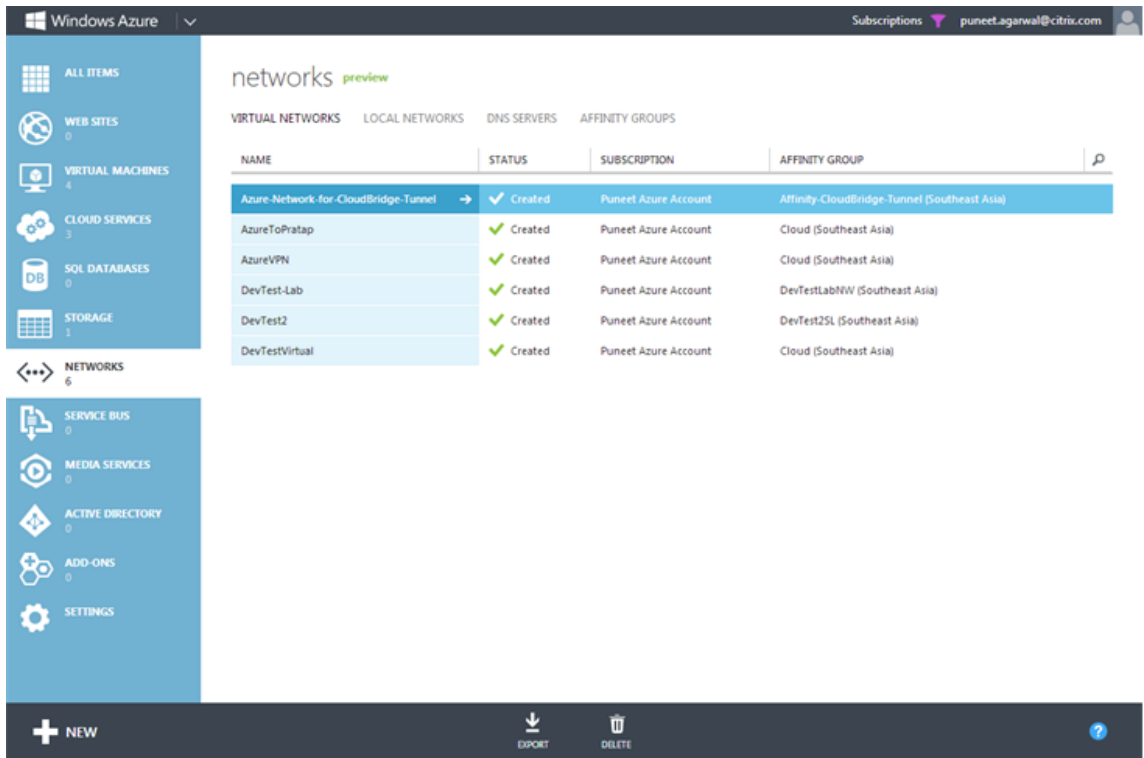

4. On the **DASHBOARD** page of the virtual network, view the DATA IN and DATA OUT counters for the CloudBridge Connector tunnel.

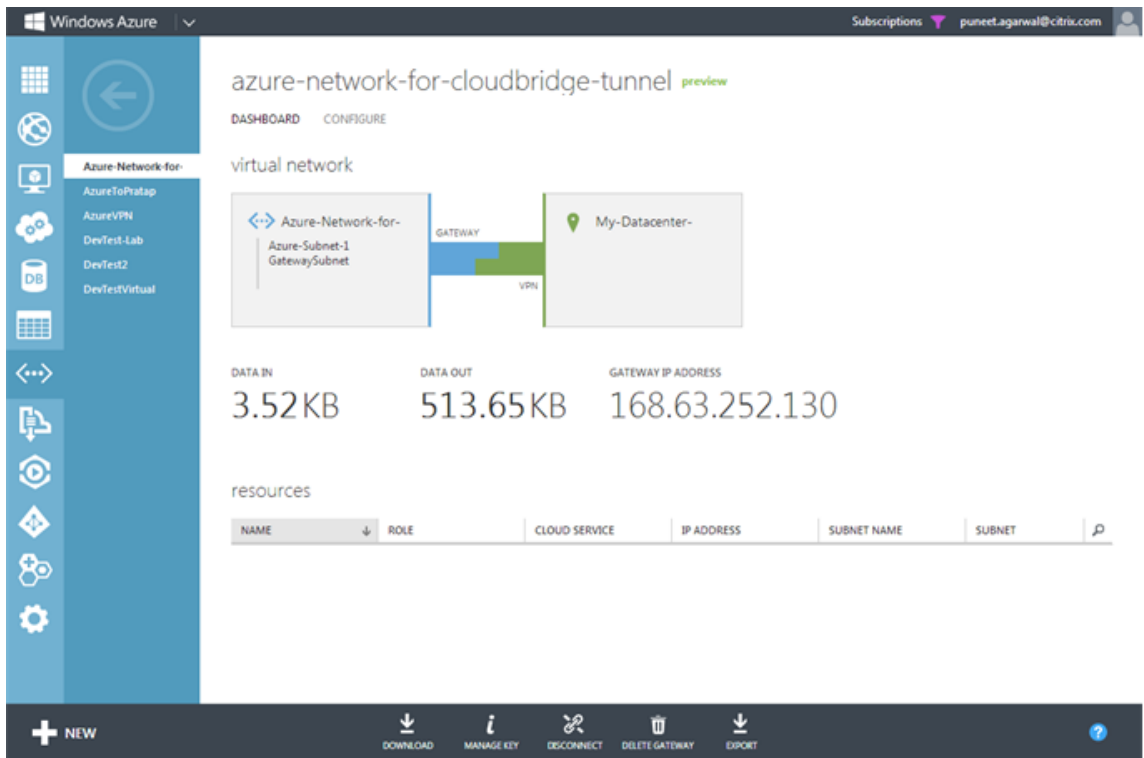

## Configuring CloudBridge Connector tunnel between datacenter and softlayer enterprise cloud

May 2, 2023

The GUI includes a wizard that helps you to easily configure a CloudBridge Connector tunnel between a NetScaler appliance in a datacenter and NetScaler VPX instances on the SoftLayer enterprise cloud.

When you use the wizard of the NetScaler appliance in the datacenter, the CloudBridge Connector tunnel configuration created on the NetScaler appliance, is automatically pushed to the other endpoint or peer (the NetScaler VPX on SoftLayer) of the CloudBridge Connector tunnel.

Using the wizard of the NetScaler appliance in the datacenter, you perform the following steps to configure a CloudBridge Connector tunnel.

1. Connect to the Softlayer enterprise cloud by providing the user log on credentials.
2. Select the Citrix XenServer that is running the NetScaler VPX appliance.
3. Select the NetScaler VPX appliance.
4. Provide CloudBridge Connector tunnel parameters to:
  - Configure a GRE Tunnel.
  - Configure IPsec on the GRE tunnel.
  - Create a netbridge, which is a logical representation of the CloudBridge connector, by specifying a name.
  - Bind the GRE Tunnel to the netbridge.

### To configure a CloudBridge Connector tunnel by using the GUI

1. Log on to the GUI of the NetScaler appliance in the datacenter by using your account credentials for the appliance.
2. Navigate to **System > CloudBridge Connector**.
3. In the right pane, under **Getting Started**, click **Create/Monitor CloudBridge Connector**.
4. Click **Get Started**.

#### Note:

If you already have any CloudBridge Connector tunnel configured on the NetScaler appliance, this screen does not appear, and you are taken to the CloudBridge Connector Setup pane.

1. In the CloudBridge Connector Setup pane, click Softlayer, and then follow the instructions in the wizard.

## Monitoring the CloudBridge Connector tunnel

You can monitor the performance of CloudBridge Connector tunnels on a NetScaler appliance by using CloudBridge Connector tunnel statistical counters. For more information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).

## Configuring a CloudBridge Connector tunnel between a NetScaler appliance and Cisco IOS device

May 2, 2023

You can configure a CloudBridge Connector tunnel between a NetScaler appliance and a Cisco device to connect two datacenters or extend your network to a Cloud provider. The NetScaler appliance and the Cisco IOS device form the end points of the CloudBridge Connector tunnel and are called peers.


### Example of CloudBridge Connector tunnel configuration and data flow

As an illustration of the traffic flow in a CloudBridge Connector tunnel, consider an example in which a CloudBridge Connector tunnel is set up between the following devices:

- NetScaler appliance NS\_Appliance-1 in a datacenter designated as Datacenter-1
- Cisco IOS device Cisco-IOS-Device-1 in a datacenter designated as Datacenter-2

NS\_Appliance-1 and Cisco-IOS-Device-1 enable communication between private networks in Datacenter-1 and Datacenter-2 through the CloudBridge Connector tunnel. In the example, NS\_Appliance-1 and Cisco-IOS-Device-1 enable communication between client CL1 in Datacenter-1 and server S1 in Datacenter-2 through the CloudBridge Connector tunnel. Client CL1 and server S1 are on different private networks.

On NS\_Appliance-1, the CloudBridge Connector tunnel configuration includes IPsec profile entity NS\_Cisco\_IPSec\_Profile, CloudBridge Connector tunnel entity NS\_Cisco\_Tunnel, and policy based routing (PBR) entity NS\_Cisco\_Pbr.

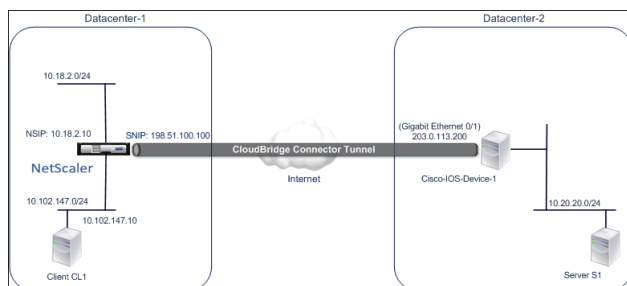

For more information, refer to the [CloudBridge Connector tunnel between a NetScaler appliance and Cisco IOS device settings](#) pdf.

## Points to Consider for a CloudBridge Connector tunnel configuration

Before configuring a CloudBridge Connector tunnel between a NetScaler appliance and a Cisco IOS device, consider the following points:

- The following IPsec settings are supported for a CloudBridge Connector tunnel between a NetScaler appliance and a Cisco IOS device.

| IPsec Properties          | Setting                                                    |
|---------------------------|------------------------------------------------------------|
| IPsec mode                | Tunnel mode                                                |
| IKE version               | Version 1                                                  |
| IKE DH group              | DH group 2 (1024 bits MODP algorithm)                      |
| IKE authentication method | Pre-Shared Key                                             |
| IKE encryption algorithm  | AES, 3DES                                                  |
| IKE hash algorithm        | HMAC SHA1, HMAC SHA256, HMAC SHA384, HMAC SHA512, HMAC MD5 |
| ESP encryption algorithm  | AES, 3DES                                                  |
| ESP hash algorithm        | HMAC SHA1, HMAC SHA256, HMAC SHA256, HMAC SHA256, HMAC MD5 |

- You must specify the same IPsec settings on the NetScaler appliance and the Cisco IOS device at the two ends of the CloudBridge Connector.
- NetScaler provides a common parameter (in IPsec profiles) for specifying an IKE hash algorithm and an ESP hash algorithm. It also provides another, and a common parameter for specifying an IKE encryption algorithm and an ESP encryption algorithm. Therefore on the Cisco device, you must specify the same hash algorithm and same encryption algorithm for IKE (while creating IKE policy) and ESP (while creating IPsec transform set).
- You must configure the firewall at the NetScaler end and Cisco device end to allow the following.
  - Any UDP packets for port 500
  - Any UDP packets for port 4500
  - Any ESP (IP protocol number 50) packets

## Configuring the Cisco IOS device for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel on a Cisco IOS device, use the Cisco IOS command line interface, which is the primary user interface for configuring, monitoring, and maintaining Cisco devices.

Before you begin the CloudBridge Connector tunnel configuration on a Cisco IOS device, make sure that:

- You have a user account with administrator credentials on the Cisco IOS device.
- You are familiar with the Cisco IOS command line interface.
- The Cisco IOS device is UP and running, is connected to the Internet, and is also connected to the private subnets whose traffic is to be protected over the CloudBridge Connector tunnel.

### Note:

The procedures for configuring CloudBridge Connector tunnel on a Cisco IOS device might change over time, depending on the Cisco release cycle. Citrix recommends that you follow the official Cisco product documentation for more information, see [Configuring IPSec VPN tunnels](#) topic.

**To configure a CloudBridge connector tunnel between a NetScaler appliance and a Cisco IOS device, perform the following tasks on the Cisco device's IOS command line:**

- Create an IKE Policy.
- Configure a Pre-shared key for IKE authentication.
- Define a transform set and configure IPSec in tunnel mode.
- Create a crypto access List
- Create a crypto map
- Apply the crypto Map to an interface

The examples in the following procedures create settings in [Cisco IOS device Cisco-IOS-Device-1](#) mentioned in section “Example of CloudBridge Connector Configuration and Data Flow.”

**To create an IKE policy**, refer to the [IKE policy](#) pdf.

**To configure a pre-shared key by using the Cisco IOS command line:**

At the Cisco IOS device's command prompt, type the following commands, starting in global configuration mode, in the order shown:

---

| Command                                                          | Example                                                                                                            | Command Description                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <code>crypto isakmp identity address</code>                      | <code>Cisco-ios-device-1(config)#<br/>crypto isakmp identity address</code>                                        | Specify the ISAKMP identity (address) for the Cisco IOS device to use when communicating with the peer (NetScaler appliance) during IKE negotiations. This example specifies the address keyword, which uses IP address 203.0.113.200 (Gigabit Ethernet interface 0/1 of Cisco-IOS-Device-1) as the identity for the device.                                 |
| <code>crypto isakmp key<br/>keystringaddress peer-address</code> | <code>Cisco-ios-device-1 (config)#<br/>crypto isakmp key<br/>examplepresharedkey address<br/>198.51.100.100</code> | Specify a pre-shared key for the IKE authentication. This example configures shared key examplepresharedkey to be used with the NetScaler appliance NS_Appliance-1 (198.51.100.100). The same pre-shared key must be configured on the NetScaler appliance for IKE authentication to be successful between the Cisco IOS device and the NetScaler appliance. |

---

**To create a crypto access list by using the Cisco IOS command line:**

At the Cisco IOS device's command prompt, type the following command in global configuration mode, in the order shown:

| Command                                                                                                        | Example                                                                                                    | Command Description                                                                                                                                                                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| access-list<br>access-list-number<br>permit IPsource<br>source-wildcard<br>destination<br>destination-wildcard | Cisco-ios-device-1(config)#<br>access-list 111 permit ip<br>10.20.20.0 0.0.0.255<br>10.102.147.0 0.0.0.255 | Specify conditions to determine the subnets whose IP traffic is to be protected over the CloudBridge Connector tunnel. This example configures access list 111 to protect traffic from subnets 10.20.20.0/24 (at the Cisco-IOS-Device-1 side) and 10.102.147.0/24 (at the NS_Appliance-1 side). |

#### To define a transform and configure IPSec tunnel mode by using the Cisco IOS command line:

At the Cisco IOS device's command prompt, type the following commands, starting in global configuration mode, in the order shown:

```
|Command|Example|Command Description|
```

```
|---|
```

```
|crypto ipsec transform-setname ESP_Authentication_Transform ESP_Encryption_Transform Note:
ESP_Authentication_Transform can take the following values: esp-sha-hmac, esp-sha256-hmac,
esp-sha384-hmac, esp-sha512-hmac, esp-md5-hmac. ESP_Encryption_Transform can take the
following values: esp-aes or esp-3des|Cisco-ios-device-1(config)# crypto ipsec transform-set NS-
CISCO-TS esp-sha256-hmac esp-3des|Define a transform set and specify the ESP hash algorithm (for
authentication) and the ESP encryption algorithm to be used during exchange of data between the
CloudBridge Connector tunnel peers. This example defines transform set NS-CISCO-TS and specifies
ESP authentication algorithm as esp-sha256-hmac, and ESP encryption algorithm as esp-3des.|
```

```
|mode tunnel|Cisco-ios-device-1 (config-crypto-trans)# mode tunnel|Set IPSec in tunnel mode.|
```

```
|exit|Cisco-ios-device-1 (config-crypto-trans)# exit, Cisco-ios-device-1 (config)#|Exit back to global
configuration mode.|
```

#### To create a crypto map by using the Cisco IOS command line:

At the Cisco IOS device's command prompt, type the following commands starting in global configuration mode, in the order shown:

| Command                                    | Example                                                                                           | Command Description                                                                                                                                                                                                                                |
|--------------------------------------------|---------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| crypto mapmap-name<br>seq-num ipsec-isakmp | Cisco-ios-device-1 (config)#<br>crypto map NS-CISCO-CM 2<br>ipsec-isakmp                          | Enter crypto map configuration mode, specify a sequence number for the crypto map, and configure the crypto map to use IKE to establish security associations (SAs). This example configures sequence number 2 and IKE for crypto map NS-CISCO-CM. |
| set peer ip-address                        | Cisco-ios-device-1<br>(config-crypto-map)# set peer<br>172.23.2.7                                 | Specify the peer (NetScaler appliance) by its IP address. This example specifies 198.51.100.100, which is the CloudBridge Connector endpoint IP address on the NetScaler appliance.                                                                |
| match addressaccess-list-id                | Cisco-ios-device-1<br>(config-crypto-map)# match<br>address 111                                   | Specify an extended access list. This access list specifies conditions to determine the subnets whose IP traffic is to be protected over the CloudBridge Connector tunnel. This example specifies access list 111.                                 |
| set transform-set<br>transform-set-name    | Cisco-ios-device-1<br>(config-crypto-map)# set<br>transform-set NS-CISCO-TS                       | Specify which transform sets are allowed for this crypto map entry. This example specifies transform set NS-CISCO-TS.                                                                                                                              |
| exit<br><br>Cisco-ios-device-1 (config)#   | Cisco-ios-device-1<br>(config-crypto-map)# exit<br><br>Exit back to global<br>configuration mode. |                                                                                                                                                                                                                                                    |

### To apply a crypto map to an interface by using the Cisco IOS command line:

At the Cisco IOS device's command prompt, type the following commands starting in global configuration mode, in the order shown:



| Command                | Example                                                                  | Command Description                                                                                                                                                                                                                                               |
|------------------------|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| interface interface-ID | Cisco-ios-device-1(config)#<br>interface GigabitEthernet 0/1             | Specify a physical interface to which to apply the crypto map and enter interface configuration mode. This example specifies Gigabit Ethernet interface 0/1 of the Cisco device<br>Cisco-IOS-Device-1. IP address 203.0.113.200 is already set to this interface. |
| crypto map map-name    | Cisco-ios-device-1 (config-if)#<br>crypto map NS-CISCO-CM                | Apply the crypto map to the physical interface. This example applies crypto map NS-CISCO-CM.                                                                                                                                                                      |
| exit                   | Cisco-ios-device-1 (config-if)#<br>exit, Cisco-ios-device-1<br>(config)# | Exit back to global configuration mode.                                                                                                                                                                                                                           |

## Configuring the NetScaler appliance for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel between a NetScaler appliance and a Cisco IOS device, perform the following tasks on the NetScaler appliance. You can use either the NetScaler command line or the NetScaler graphical user interface (GUI):

- Create an IPsec profile.
- Create an IP tunnel that uses IPsec protocol, and associate the IPsec profile with it.
- Create a PBR rule and associate it with the IP tunnel.

### To create an IPSEC profile by using the NetScaler command line:

At the Command prompt, type:

- `add ipsec profile <name> -psk <string> -ikeVersion v1`
- `show ipsec profile <name>`

### To create an IPSEC tunnel and bind the IPSEC profile to it by using the NetScaler command line:

At the Command prompt, type:

- `add ipTunnel <name> <remote> <remoteSubnetMask> <local> -protocol IPSEC -ipsecProfileName <string>`
- `add ipTunnel <name>`

**To create a PBR rule and bind the IPSEC tunnel to it by using the NetScaler command line:**

At the Command prompt, type:

- `add pbr <pbrName> ALLOW -srcIP <subnet-range> -destIP <subnet-range> -ipTunnel <tunnelName>`
- `apply pbrs`
- `show pbrs <pbrName>`

The following commands create settings in NetScaler appliance `NS_Appliance-1` mentioned in section **Example of CloudBridge Connector Configuration and Data Flow**.

```
1 > add ipsec profile NS_Cisco_IPSec_Profile -psk
 examplepresharedkey -ikeVersion v1 -lifetime 315360 -encAlgo 3
 DES
2 Done
3 > add iptunnel NS_Cisco_Tunnel 203.0.113.200 255.255.255.255
 198.51.100.100 -protocol IPSEC -ipsecProfileName
 NS_Cisco_IPSec_Profile
4
5 Done
6 > add pbr NS_Cisco_Pbr -srcIP 10.102.147.0-10.102.147.255 -destIP
 10.20.0.0-10.20.255.255 -ipTunnel NS_Cisco_Tunnel
7
8 Done
9 > apply pbrs
10
11 Done
```

**To create an IPSEC profile by using the GUI:**

1. Navigate to **System > CloudBridge Connector > IPsec Profile**.
2. In the details pane, click **Add**.
3. In the **Add IPsec Profile** dialog box, set the following parameters:
  - Name
  - Encryption Algorithm
  - Hash Algorithm
  - IKE Protocol Version
4. Configure the **IPsec authentication** method to be used by the two CloudBridge Connector tunnel peers to mutually authenticate: Select the **Pre-shared key authentication** method and set the **Pre-Shared Key Exists** parameter.
5. Click **Create**, and then click **Close**.

**To create an IP tunnel and bind the IPSEC profile to it by using the GUI:**

1. Navigate to **System > CloudBridge Connector > IP Tunnels**.
2. On the **IPv4 Tunnels** tab, click **Add**.
3. In the **Add IP Tunnel** dialog box, set the following parameters:
  - Name
  - Remote IP
  - Remote Mask
  - Local IP Type (In the Local IP Type drop down list, select Subnet IP).
  - Local IP (All the configured IPs of the selected IP type are in the Local IP drop down list. Select the desired IP from the list.)
  - Protocol
  - IPsec Profile
4. Click **Create**, and then click **Close**.

To create a PBR rule and bind the IPSEC tunnel to it by using the GUI

1. Navigate to **System > Network > PBR**.
2. On the **PBR** tab, click **Add**.
3. In the **Create PBR** dialog box, set the following parameters:
  - Name
  - Action
  - Next Hop Type (Select IP Tunnel)
  - IP Tunnel Name
  - Source IP Low
  - Source IP High
  - Destination IP Low
  - Destination IP High
4. Click **Create**, and then click **Close**.

**To apply a PBR by using the GUI:**

1. Navigate to **System > Network > PBRs**.
2. On the **PBRs** tab, select the **PBR**, in the **Action list**, select **Apply**.

The corresponding new CloudBridge Connector tunnel configuration on the NetScaler appliance appears in the GUI. The current status of the CloudBridge connector tunnel is shown in the Configured CloudBridge Connector pane. A green dot indicates that the tunnel is up. A red dot indicates that the tunnel is down.

## Monitoring the CloudBridge Connector Tunnel

You can monitor the performance of CloudBridge Connector tunnels on a NetScaler appliance by using CloudBridge Connector tunnel statistical counters. For more information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).

## Configuring a CloudBridge Connector tunnel between a NetScaler appliance and fortinet fortIGate appliance

May 2, 2023

You can configure a CloudBridge Connector tunnel between a NetScaler appliance and a Fortinet FortiGate appliance to connect two datacenters or extend your network to a cloud provider. The NetScaler appliance and the FortiGate appliance form the end points of the CloudBridge Connector tunnel and are called peers.


### Example of a CloudBridge Connector Tunnel Configuration

As an illustration of the traffic flow in a CloudBridge Connector tunnel, consider an example in which a CloudBridge Connector tunnel is set up between the following devices:

- NetScaler appliance NS\_Appliance-1 in a datacenter designated as Datacenter-1
- FortiGate appliance FortiGate-Appliance-1 in a datacenter designated as Datacenter-2

NS\_Appliance-1 and FortiGate-Appliance-1 enable communication between private networks in Datacenter-1 and Datacenter-2 through the CloudBridge Connector tunnel. In the example, NS\_Appliance-1 and FortiGate-Appliance-1 enable communication between client CL1 in Datacenter-1 and server S1 in Datacenter-2 through the CloudBridge Connector tunnel. Client CL1 and server S1 are on different private networks.

On NS\_Appliance-1, the CloudBridge Connector tunnel configuration includes IPsec profile entity NS\_Fortinet\_IPSec\_Profile, CloudBridge Connector tunnel entity NS\_Fortinet\_Tunnel, and policy based routing (PBR) entity NS\_Fortinet\_Pbr.

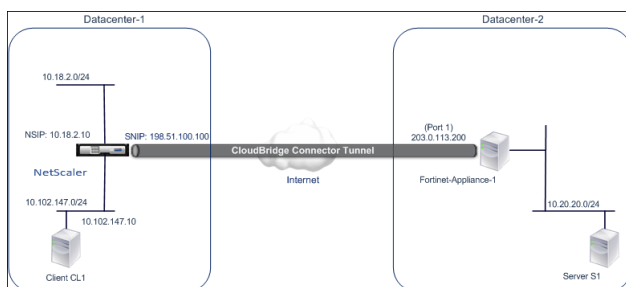

For more information, see [CloudBridge Connector tunnel configuration table pdf](#).

For information about Settings on Fortinet FortiGate-Appliance-1 in Datacenter-2, see [table](#).

### Points to consider for a CloudBridge Connector tunnel configuration

Before configuring a CloudBridge Connector tunnel between a NetScaler appliance and a FortiGate appliance, consider the following points:

- The following IPSec settings are supported for a CloudBridge Connector tunnel between a NetScaler appliance and a FortiGate appliance.

| IPSec Properties          | Settings                              |
|---------------------------|---------------------------------------|
| IPSec mode                | Tunnel mode                           |
| IKE version               | Version 1                             |
| IKE DH group              | DH group 2 (1024 bits MODP algorithm) |
| IKE authentication method | Pre-Shared Key                        |
| IKE encryption algorithm  | AES                                   |
| IKE hash algorithm        | HMAC SHA1                             |
| ESP encryption algorithm  | AES                                   |
| ESP hash algorithm        | HMAC SHA1                             |

- You must specify the same IPSec settings on the NetScaler appliance and the FortiGate appliance at the two ends of the CloudBridge Connector.
- NetScaler provides a common parameter (in IPSec profiles) for specifying an IKE hash algorithm and an ESP hash algorithm. It also provides another common parameter for specifying an IKE encryption algorithm and an ESP encryption algorithm. Therefore in the FortiGate appliance, you must specify the same hash algorithm and same encryption algorithm in IKE (phase 1 configuration) and ESP (phase 2 configuration).

- You must configure the firewall at the NetScaler end and FortiGate end to allow the following.
  - Any UDP packets for port 500
  - Any UDP packets for port 4500
  - Any ESP (IP protocol number 50) packets
- FortiGate appliance supports two types of VPN tunnels: Policy-based and Route-based. Only policy-based VPN tunnel is supported between a FortiGate appliance and a NetScaler appliance.

## Configuring FortiGate appliance for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel on a FortiGate appliance, use the Fortinet Web-based Manager, which is the primary user interface for configuring, monitoring, and maintaining FortiGate appliances.

Before you begin the CloudBridge Connector tunnel configuration on a FortiGate appliance, make sure that:

- You have a user account with administrator credentials on the FortiGate appliance.
- You are familiar with the Fortinet Web-based Manager.
- The FortiGate appliance is UP and running, is connected to the Internet, and is also connected to the private subnets whose traffic is to be protected over the CloudBridge Connector tunnel.

### Note

The procedures for configuring CloudBridge Connector tunnel on a FortiGate appliance might change over time, depending on the Fortinet release cycle. Citrix recommends that you follow the official Fortinet product documentation for [Configuring IPSec VPN tunnels](#).

To configure a CloudBridge connector tunnel between a NetScaler appliance and a FortiGate appliance, perform the following tasks on the FortiGate appliance by using the Fortinet Web-based manager:

- **Enable Policy-based IPSec VPN feature.** Enable this feature for creating policy-based VPN tunnels on the FortiGate appliance. Only policy-based type of VPN tunnel is supported between a FortiGate appliance and a NetScaler appliance. A policy-based VPN tunnel configuration on a FortiGate appliance includes phase 1 settings, phase 2 settings, and an IPSec security policy.
- **Define phase 1 parameters.** Phase 1 parameters are used by the FortiGate appliance for IKE Authentication before forming a secure tunnel to the NetScaler appliance.
- **Define phase 2 parameters.** Phase 2 parameters are used by the FortiGate appliance for forming a secure tunnel to the NetScaler appliance by establishing IKE security associations (SA).
- **Specify private subnets.** Define the FortiGate-side and the NetScaler-side private subnets whose IP traffic is to be transported through the tunnel.

- **Define an IPSec security policy for the tunnel.** A security policy allow IP traffic to pass between interfaces on a FortiGate appliance. An IPSec security policy specifies the interface to the private subnet and the interface connecting the NetScaler appliance through the tunnel.

To enable Policy-based IPSec VPN feature by using the Fortinet Web-based Manager

1. Navigate to **System > Config > Features**.
2. On the **Feature Settings** page, select **Show More** and turn on **Policy-based IPSec VPN**.

To define phase 1 parameters by using the Fortinet Web-based Manager

1. Navigate to **VPN > IPSec > Auto Key (IKE)** and click **Create Phase1**.
2. On the **New Phase 1** page, set the following parameters:
  - Name: Enter a name for this phase 1 configuration.
  - Remote Gateway: Select *Static IP Address*.
  - Mode: Select *Main (ID Protection)*.
  - Authentication Method: Select *Preshared Key*.
  - Pre-Shared Key: Enter a pre-shared key. The same pre-shared key must be configured on the NetScaler appliance.
  - Peer Options: Set the following IKE parameters for authenticating a NetScaler appliance.
    - IKE Version: Select *1*.
    - Mode Config: Clear this option if it is selected.
    - Local Gateway IP: Select *Main Interface IP*.
    - P1 Proposal: Select the encryption and authentication algorithms for IKE Authentication before forming a secure tunnel to the NetScaler appliance.
      - \* 1 - Encryption: Select *AES128*.
      - \* Authentication: Select *SHA1*.
      - \* Keylife: Enter an amount of time (in seconds) for the phase 1 key life.
      - \* DH Group: Select *2*.
    - X-Auth: Select *Disable*.
    - Deed Peer Detection: Select this option.
3. Click **OK**.

To specify private subnets by using the Fortinet Web-based Manager

1. Navigate to **Firewall Objects > Address > Addresses** and select **Create New**.
2. On the **New Address** page, set the following parameters:
  - Name: Enter a name for FortiGate-side subnet.
  - Type: Select *Subnet*.
  - Subnet / IP Range: Enter the address of the FortiGate-side subnet.
  - Interface: Select the local interface to this subnet.

3. Click **OK**.
4. Repeat steps 1-3 to specify the NetScaler-side subnet.

To define phase 2 parameters by using the Fortinet Web-based Manager

1. Navigate to **VPN > IPsec > Auto Key (IKE)** and click **Create Phase 2**.
2. On the **New Phase 2** page, set the following parameters:
  - Name: Enter a name for this phase 2 configuration.
  - Phase 1: Select the Phase 1 configuration from the drop-down list.
3. Click **Advanced** and set the following parameters:
  - P2 Proposal: Select the encryption and authentication algorithms for forming a secure tunnel to the NetScaler appliance.
    - 1 - Encryption: Select *AES128*.
    - Authentication: Select *SHA1*.
    - Enable replay detection: Select this option.
    - Enable perfect forward secrecy (PFS): Select this option.
    - DH Group: Select 2.
  - Keylife: Enter an amount of time (in seconds) for the phase 2 key life.
  - Autokey Keep Alive: Select this option.
  - Auto-negotiate: Select this option.
  - Quick Mode Selector: Specify the FortiGate-side and the NetScaler-side private subnets whose traffic is to be traversed through the tunnel.
    - Source Address: Select the FortiGate-side subnet from the drop-down list.
    - Source Port: Enter 0.
    - Destination Address: Select the NetScaler-side subnet from the drop-down list.
    - Destination Port: Enter 0.
    - Protocol: Enter 0.
4. Click **OK**.

To define an IPSec security policy by using the Fortinet Web-based Manager

1. Navigate to **Policy > Policy > Policy** and click **Create New**.
2. On the **Edit Policy** page, set the following parameters:
  - Policy Type: Select *VPN*.
  - Policy Subtype: Select *IPSec*.
  - Local Interface: Select the local interface to the internal (private) network.
  - Local Protected Subnet: Select the FortiGate-side subnet from the drop-down list whose traffic is to be traversed through the tunnel.
  - Outgoing VPN Interface: Select the local interface to the external (public) network.



- Remote Protected Subnet: Select the NetScaler-side subnet from the drop-down list whose traffic is to be traversed through the tunnel.
- Schedule: Keep the default setting (*always*) unless changes are needed to meet specific requirements.
- Service: Keep the default setting (*ANY*) unless changes are needed to meet your specific requirements.
- VPN Tunnel: Select *Use Existing* and select the tunnel from the drop-down list.
- Allow traffic to be initiated from the remote site: Select if traffic from the remote network will be allowed to initiate the tunnel.

3. Click **OK**.

### Configuring the NetScaler appliance for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel between a NetScaler appliance and a FortiGate appliance, perform the following tasks on the NetScaler appliance. You can use either the NetScaler command line or the NetScaler graphical user interface (GUI):

- **Create an IPsec profile.** An IPsec profile entity specifies the IPsec protocol parameters, such as IKE version, encryption algorithm, hash algorithm, and authentication method to be used by the IPsec protocol in the CloudBridge Connector tunnel.
- **Create an IP tunnel that uses IPsec protocol, and associate the IPsec profile with it.** An IP tunnel specifies the local IP address (CloudBridge Connector tunnel end point IP address (of type SNIP) configured on the NetScaler appliance), remote IP address (CloudBridge Connector tunnel endpoint IP address configured on the FortiGate appliance), protocol (IPsec) used to set up the CloudBridge Connector tunnel, and an IPsec profile entity. The created IP tunnel entity is also called the CloudBridge Connector tunnel entity.
- **Create a PBR rule and associate it with the IP tunnel.** A PBR entity specifies a set of rules and an IP tunnel (CloudBridge Connector tunnel) entity. The source IP address range and the destination IP address range are the conditions for the PBR entity. Set the source IP address range to specify the NetScaler-side subnet whose traffic is to be protected over the tunnel, and set the destination IP address range to specify the FortiGate appliance side subnet whose traffic is to be protected over the tunnel.

To create an IPSEC profile by using the NetScaler command line

At the command prompt, type:

- `add ipsec profile <name> -psk <string> -ikeVersion v1 -encAlgo AES -hashAlgo HMAC_SHA1 -perfectForwardSecrecy ENABLE`
- `show ipsec profile <name>`

To create an IPSEC tunnel and bind the IPSEC profile to it by using the NetScaler command line

At the command prompt, type:

- `add ipTunnel <name> <remote> <remoteSubnetMask> <local> -protocol IPSEC -ipsecProfileName** <string>`
- `show ipTunnel <name>`

To create a PBR rule and bind the IPSEC tunnel to it by using the NetScaler command line

At the command prompt, type:

- `add pbr <pbrName> ALLOW -srcIP <subnet-range> -destIP <subnet-range> -ipTunnel <tunnelName>`
- `apply pbrs`
- `show pbr <pbrName>`

To create an IPSEC profile by using the GUI

1. Navigate to **System > CloudBridge Connector > IPsec Profile**.
2. In the details pane, click **Add**.
3. In the **Add IPsec Profile** page, set the following parameters:
  - Name
  - Encryption Algorithm
  - Hash Algorithm
  - IKE Protocol Version
  - Perfect Forward Secrecy (Enable this parameter)
4. Configure the IPsec authentication method to be used by the two CloudBridge Connector tunnel peers to mutually authenticate: Select the Pre-shared key authentication method and set the Pre-Shared Key Exists parameter.
5. Click **Create**, and then click **Close**.

To create an IP tunnel and bind the IPSEC profile to it by using the GUI

1. Navigate to **System > CloudBridge Connector > IP Tunnels**.
2. On the **IPv4 Tunnels** tab, click **Add**.
3. In the **Add IP Tunnel** page, set the following parameters:
  - Name
  - Remote IP
  - Remote Mask
  - Local IP Type (In the Local IP Type drop-down list, select *Subnet IP*).
  - Local IP (All the configured IP addresses of the selected IP type are in the Local IP drop down list. Select the desired IP from the list.)

- Protocol
- IPSec Profile

4. Click **Create**, and then click **Close**.

To create a PBR rule and bind the IPSEC tunnel to it by using the GUI

1. Navigate to **System > Network > PBR**.
2. On the **PBR** tab, click **Add**.
3. In the **Create PBR** page, set the following parameters:
  - Name
  - Action
  - Next Hop Type (Select *IP Tunnel*)
  - IP Tunnel Name
  - Source IP Low
  - Source IP High
  - Destination IP Low
  - Destination IP High
4. Click **Create**, and then click **Close**.

The corresponding new CloudBridge Connector tunnel configuration on the NetScaler appliance appears in the GUI.

The current status of the CloudBridge connector tunnel is shown in the Configured CloudBridge Connector pane. A green dot indicates that the tunnel is up. A red dot indicates that the tunnel is down.

The following commands create settings of NetScaler appliance NS\_Appliance-1 in “Example of a CloudBridge Connector Configuration.”

```
1 > add ipsec profile NS_Fortinet_IPSec_Profile -psk
 examplepresharedkey -ikeVersion v1 -encAlgo AES -hashalgo
 HMAC_SHA1 -lifetime 315360 -perfectForwardSecrecy ENABLE
2
3 Done
4 > add iptunnel NS_Fortinet_Tunnel 203.0.113.200 255.255.255.255
 198.51.100.100 -protocol IPSEC -ipsecProfileName
 NS_Fortinet_IPSec_Profile
5
6 Done
7 > add pbr NS_Fortinet_Pbr -srcIP 10.102.147.0-10.102.147.255 -
 destIP 10.20.0.0-10.20.255.255 -ipTunnel NS_Fortinet_Tunnel
8
9 Done
10 > apply pbrs
11
12 Done
```

## Monitoring the CloudBridge Connector tunnel

You can monitor the performance of CloudBridge Connector tunnels on a NetScaler appliance by using CloudBridge Connector tunnel statistical counters. For more information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).

## CloudBridge Connector tunnel diagnostics and troubleshooting

May 2, 2023

If you have problems with a CloudBridge Connector tunnel configuration, make sure that all prerequisites were observed before the tunnel was set up. If they were, the problem might be with the tunnel end-point IP addresses, a NAT configuration, the way the tunnel was set up, or with the data traffic.

### Troubleshooting a CloudBridge Connector tunnel

If your CloudBridge Connector tunnel does not function properly, the issue could be with tunnel establishment or with the data traffic. If you are unsure which type of problem you have, look for an error message in the log file and see if the error message is in the list of tunnel-establishment issues. If you do not find your error message, check the list of possible issues related to data traffic.

#### Issues Related to tunnel establishment

After the requirements for configuring the IPSec tunnel are met and the CloudBridge Connector tunnel is configured, if the status of the tunnel is not UP, look for debugging information in the `iked.log` file on one or both NetScaler appliances configured as the tunnel end points.

On either appliance, type the following command at the NetScaler shell prompt:

```
cat /tmp/iked.debug | tee /var/iked.log
```

The [Troubleshooting](#) pdf lists some common errors and their solutions.

#### Issues related to data traffic

If the data in the CloudBridge Connector tunnel are not exchanged properly between the tunnel end points, do the following.

- For a CloudBridge Connector tunnel that uses GRE and IPSec protocols:

- Make sure that L2 mode is enabled on both of the CloudBridge Connector tunnel end points. To enable L2 mode, type the following command at the NetScaler command line interface:

```
enable mode L2
```

- \* If one of the CloudBridge Connector tunnel end points is a CloudBridge virtual appliance (VPX) and is provisioned on a VMware ESXi hypervisor, make sure that Promiscuous mode is set to Accept for the vSwitch associated with the CloudBridge VPX appliance.
- If a VLAN is extended through a CloudBridge Connector tunnel, verify one-to-one mapping on the extended VLAN entity on each of the tunnel end points
- Make sure that the IP tunnel entity is bound to the correct netbridge entity in each of the tunnel end points.
- Verify that the ARP entry for the peer CloudBridge Connector tunnel end point exists on the local tunnel end point, by typing the following command at the NetScaler command line interface:

```
show arp
```

- If the output shows an incomplete ARP entry, bidirectional traffic is not flowing through the tunnel. If bidirectional traffic is flowing, the ARP entry shows the name of tunnel interface for the devices on the other side of the tunnel.
- Remove the IP tunnel entities from both tunnel end points and add them again with the same parameters, but with the IPsec profile set to NONE, so that the tunnel uses only the GRE protocol.

After verifying the following in the IP tunnel (that uses GRE protocol), configure the tunnel with IPsec parameters by specifying a valid IPsec profile to the respective IP tunnel entities on each of the tunnel end points.

Proper PING or TCP flow through the tunnel.

Proper flow of data traffic through the tunnel.

After the configured tunnel (that uses GRE and IPsec protocols) is in UP state, if the data traffic does not flow properly through the tunnel, and if a NAT device was deployed in front of any or both of the tunnel end points, analyze the ingress and egress packets on the NAT devices.

- If a NetScaler appliance is used as Router or Gateway.
  - Make sure that L3 mode is enabled on the NetScaler appliance. To enable L3 mode, run the following command in the CloudBridge command line.
  - enable mode L3
  - If subnets are bound to a netbridge entity, make sure that correct IP tunnel entity is also bound to the netbridge.

- Run the following command in the NetScaler command line to see where the packets (Input and Output) are getting dropped:

```
stat ipsec counters
```

- Make sure that the correct routes are configured on both the tunnel end points.
- If no NAT device is deployed in front of the NetScaler appliance, make sure that the firewalls are configured to allow any ESP (IP protocol number 50) packets and any UDP packets for port 4500.

If none of the above measures result in successful exchange of traffic between the tunnel end points, contact Citrix technical support.

### Checklist before contacting Citrix technical support

For a speedy resolution, make sure that you have the following items ready before contacting Citrix technical support.

- Details of the deployment and network topology.
- Log file collected by typing the following command at the NetScaler shell prompt.
- Tech support bundle captured by typing the following command at the NetScaler command line.

```
show techsupport
```

- Packet traces captured on both CloudBridge Connector tunnel end points. To start a packet trace, type the following command at the NetScaler command line.

```
start nstrace -size 0
```

To stop packet trace, type the following command at the NetScaler command line.

```
stop nstrace
```

- Output of the following command typed at the NetScaler command prompt.

```
show arp
```

## CloudBridge Connector interoperability –StrongSwan

May 2, 2023

StrongSwan is an opensource IPsec implementation for Linux platforms. You can configure a CloudBridge Connector tunnel between a NetScaler appliance and a StrongSwan appliance to connect two

datacenters or extend your network to a cloud provider. The NetScaler appliance and the StrongSwan appliance form the end points of the CloudBridge Connector tunnel and are called peers.


### Example of a CloudBridge Connector tunnel configuration

As an illustration of the traffic flow in a CloudBridge Connector tunnel, consider an example in which a CloudBridge Connector tunnel is set up between the following devices:

- NetScaler appliance NS\_Appliance-1 in a datacenter designated as Datacenter-1
- StrongSwan appliance StrongSwan-Appliance-1 in a datacenter designated as Datacenter-2

NS\_Appliance-1 and StrongSwan-Appliance-1 enable communication between private networks in Datacenter-1 and Datacenter-2 through the CloudBridge Connector tunnel. In the example, NS\_Appliance-1 and StrongSwan-Appliance-1 enable communication between client CL1 in Datacenter-1 and server S1 in Datacenter-2 through the CloudBridge Connector tunnel. Client CL1 and server S1 are on different private networks.

On NS\_Appliance-1, the CloudBridge Connector tunnel configuration includes IPsec profile entity NS\_StrongSwan\_IPSec\_Profile, CloudBridge Connector tunnel entity NS\_StrongSwan\_Tunnel, and policy based routing (PBR) entity NS\_StrongSwan\_Pbr.

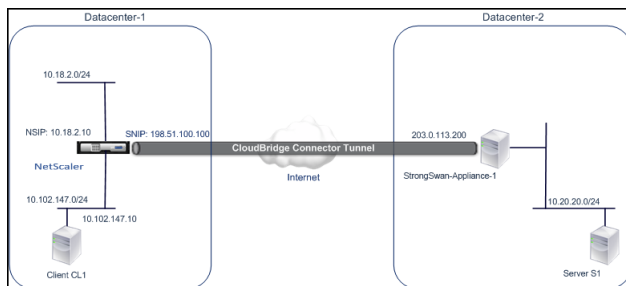

The following table lists the settings used in this example.

#### Main settings of the CloudBridge Connector tunnel setup

| Entity                                                                                            | Details         |
|---------------------------------------------------------------------------------------------------|-----------------|
| IP address of the CloudBridge Connector tunnel end point (NS_Appliance-1) in Datacenter-1         | 198.51.100.100  |
| IP address of the CloudBridge Connector tunnel end point (StrongSwan-Appliance-1) in Datacenter-2 | 203.0.113.200   |
| Datacenter-1's subnet whose traffic is to be protected over the CloudBridge Connector tunnel      | 10.102.147.0/24 |

| Entity                                                                                       | Details       |
|----------------------------------------------------------------------------------------------|---------------|
| Datacenter-2's subnet whose traffic is to be protected over the CloudBridge Connector tunnel | 10.20.20.0/24 |

Settings on NetScaler appliance NS\_Appliance-1 in Datacenter-1

|                                                                                                                                                                                                              |                             |                                                                                                                                                                                  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SNIP1(for reference purposes only)                                                                                                                                                                           | 198.51.100.100              |                                                                                                                                                                                  |
| IPSec profile                                                                                                                                                                                                | NS_StrongSwan_IPSec_Profile | IKE version: v1, Encryption algorithm: AES, Hash algorithm: HMAC_SHA1                                                                                                            |
| <p>psk = examplepresharedkey<br/>           (Note: This is an example of a pre-share key, for illustration. NetScaler does not recommend to use this string in your CloudBridge Connector configuration)</p> |                             |                                                                                                                                                                                  |
| CloudBridge Connector tunnel                                                                                                                                                                                 | NS_StrongSwan_Tunnel        | Remote IP = 203.0.113.200, Local IP= 198.51.100.100, Tunnel protocol = IPSEC, IPSec profile= NS_StrongSwan_IPSec_Profile                                                         |
| Policy based route                                                                                                                                                                                           | NS_StrongSwan_Pbr           | Source IP range = Subnet in the Datacenter-1=10.102.147.0-10.102.147.255, Destination IP range =Subnet in Datacenter-2=10.20.20.0-10.20.20.255, IP Tunnel = NS_StrongSwan_Tunnel |

**Points to consider for a CloudBridge Connector tunnel configuration**

Before you begin configuring CloudBridge connector tunnel, make sure that:

- You have a basic knowledge about linux configurations.
- You have a basic Knowledge about IPSec protocol suite.



- The StrongSwan appliance is UP and running, is connected to the Internet, and is also connected to the private subnets whose traffic is to be protected over the CloudBridge Connector tunnel.
- The NetScaler appliance is UP and running, is connected to the Internet, and is also connected to the private subnets whose traffic is to be protected over the CloudBridge Connector tunnel.
- The following IPsec settings are supported for a CloudBridge Connector tunnel between a NetScaler appliance and a StrongSwan appliance.
  - IPsec mode: Tunnel mode
  - IKE version: Version 1
  - IKE authentication method: Pre-Shared Key
  - IKE encryption algorithm: AES
  - IKE hash algorithm: HMAC SHA1
  - ESP encryption algorithm: AES
  - ESP hash algorithm: HMAC SHA1
- You must specify the same IPsec settings on the NetScaler appliance and the StrongSwan appliance at the two ends of the CloudBridge Connector tunnel.
- NetScaler provides a common parameter (in IPsec profiles) for specifying an IKE hash algorithm and an ESP hash algorithm. It also provides another common parameter for specifying an IKE encryption algorithm and an ESP encryption algorithm. Therefore, in the StrongSwan appliance, you must specify the same hash algorithm and same encryption algorithm in IKE and ESP parameters in the IPsec.conf file.
- You must configure the firewall at the NetScaler end and StrongSwan end to allow the following.
  - Any UDP packets for port 500
  - Any UDP packets for port 4500
  - Any ESP (IP protocol number 50) packets

## Configure StrongSwan for the CloudBridge Connector tunnel

To configure a CloudBridge connector tunnel between a NetScaler appliance and a StrongSwan appliance, perform the following tasks on the StrongSwan appliance:

- **Specify IPsec connection information in ipsec.conf file.** ipsec.conf file defines all control and configuration information for IPsec connections in the strongSwan appliance.
- **Specify pre-shared key in ipsec.secrets file.** ipsec.secrets file defines secrets for IKE/IPsec authentication for IPsec connections in the strongSwan appliance.

The procedures for configuring IPsec VPN (CloudBridge Connector tunnel) on a StrongSwan appliance might change over time, depending on the StrongSwan release cycle. Citrix recommends that you follow the official StrongSwan documentation for [Configuring IPsec VPN tunnels](#).

Following sample excerpt of ipsec.conf file specifies IPsec information for setting up the IPsec VPN tunnel, described in Example of a CloudBridge Connector Configuration topic. For more information, see [CloudBridge Connector Configuration](#) pdf.

Following sample excerpt of ipsec.secrets file specifies the IKE authentication pre-shared key for setting up the IPsec VPN tunnel, described in Example of a CloudBridge Connector Configuration topic.

```
/etc/ipsec.secrets PSK 'examplepresharedkey'#pre-shared key for IPsec IKE authentication
```

## Configuring the NetScaler appliance for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel between a NetScaler appliance and a StrongSwan appliance, perform the following tasks on the NetScaler appliance. You can use either the NetScaler command line or the NetScaler graphical user interface (GUI):

- **Create an IPsec profile.** An IPsec profile entity specifies the IPsec protocol parameters, such as IKE version, encryption algorithm, hash algorithm, and authentication method to be used by the IPsec protocol in the CloudBridge Connector tunnel.
- **Create an IP tunnel that uses IPsec protocol, and associate the IPsec profile with it.** An IP tunnel specifies the local IP address (CloudBridge Connector tunnel endpoint IP address (of type SNIP) configured on the NetScaler appliance), remote IP address (CloudBridge Connector tunnel endpoint IP address configured on the StrongSwan appliance), protocol (IPsec) used to set up the CloudBridge Connector tunnel, and an IPsec profile entity. The created IP tunnel entity is also called the CloudBridge Connector tunnel entity.
- **Create a PBR rule and associate it with the IP tunnel.** A PBR entity specifies a set of rules and an IP tunnel (CloudBridge Connector tunnel) entity. The source IP address range and the destination IP address range are the conditions for the PBR entity. Set the source IP address range to specify the NetScaler-side subnet whose traffic is to be protected over the tunnel, and set the destination IP address range to specify the StrongSwan side subnet whose traffic is to be protected over the tunnel.

To create an IPSEC profile by using the NetScaler command line

At the command prompt, type:

- `add ipsec profile <name> -psk <string> -ikeVersion v1 -encAlgo AES -hashAlgo HMAC_SHA1`
- `show ipsec profile <name>`

To create an IPSEC tunnel and bind the IPSEC profile to it by using the NetScaler command line

At the command prompt, type:

- `add ipTunnel <name> <remote> <remoteSubnetMask> <local> -protocol IPSEC -ipsecProfileName <string>`

- `show ipTunnel <name>`

To create a PBR rule and bind the IPSEC tunnel to it by using the NetScaler command line

At the command prompt, type:

- `add pbr <pbrName> ALLOW -srcIP <subnet-range> -destIP <subnet-range> -ipTunnel <tunnelName>`
- `apply pbrs`
- `show pbr <pbrName>`

To create an IPSEC profile by using the GUI

1. Navigate to **System > CloudBridge Connector > IPsec Profile**.
2. In the details pane, click **Add**.
3. In the **Add IPsec Profile** page, set the following parameters:
  - Name
  - Encryption Algorithm
  - Hash Algorithm
  - IKE Protocol Version
4. Configure the IPsec authentication method to be used by the two CloudBridge Connector tunnel peers to mutually authenticate: Select the **Pre-shared key authentication method** and set the **Pre-Shared Key Exists** parameter.
5. Click **Create**, and then click **Close**.

To create an IP tunnel and bind the IPSEC profile to it by using the GUI

1. Navigate to **System > CloudBridge Connector > IP Tunnels**.
2. On the **IPv4 Tunnels** tab, click **Add**.
3. In the Add IP Tunnel page, set the following parameters:
  - Name
  - Remote IP
  - Remote Mask
  - Local IP Type (In the Local IP Type drop-down list, select *Subnet IP*).
  - Local IP (All the configured IP addresses of the selected IP type are in the Local IP drop-down list. Select the desired IP from the list.)
  - Protocol
  - IPsec Profile
4. Click **Create**, and then click **Close**.

To create a PBR rule and bind the IPSEC tunnel to it by using the GUI

1. Navigate to **System > Network > PBR**.
2. On the **PBR** tab, click **Add**.
3. In the **Create PBR** page, set the following parameters:
  - Name
  - Action
  - Next Hop Type (Select *IP Tunnel*)
  - IP Tunnel Name
  - Source IP Low
  - Source IP High
  - Destination IP Low
  - Destination IP High
4. Click **Create**, and then click **Close**.

The corresponding new CloudBridge Connector tunnel configuration on the NetScaler appliance appears in the GUI. The current status of the CloudBridge connector tunnel is shown in the Configured CloudBridge Connector pane. A green dot indicates that the tunnel is up. A red dot indicates that the tunnel is down.

The following commands create settings of NetScaler appliance NS\_Appliance-1 in “Example of a CloudBridge Connector Configuration:

```
1 > add ipsec profile NS_StrongSwan_IPSec_Profile -psk
 examplepresharedkey -ikeVersion v1 -encAlgo AES -hashalgo
 HMAC_SHA1
2
3
4 Done
5
6 > add iptunnel NS_StrongSwan_Tunnel 203.0.113.200 255.255.255.255
 198.51.100.100 -protocol IPSEC -ipsecProfileName
 NS_StrongSwan_IPSec_Profile
7
8
9 Done
10
11 > add pbr NS_StrongSwan_Pbr -srcIP 10.102.147.0-10.102.147.255 -
 destIP 10.20.0.0-10.20.255.255 - ipTunnel NS_StrongSwan_Tunnel
12
13
14 Done
15
16 > apply pbrs
17
18
19 Done
```

## Monitoring the CloudBridge Connector tunnel

You can monitor the performance of CloudBridge Connector tunnels on a NetScaler appliance by using CloudBridge Connector tunnel statistical counters. For more information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).

## CloudBridge Connector interoperability –F5 BIG-IP

May 2, 2023

You can configure a CloudBridge Connector tunnel between a NetScaler appliance and a F5 BIG-IP appliance to connect two datacenters or extend your network to a cloud provider. The NetScaler appliance and the F5 BIG-IP appliance form the end points of the CloudBridge Connector tunnel and are called peers.


### Example of a CloudBridge Connector tunnel configuration

As an illustration of the traffic flow in a CloudBridge Connector tunnel, consider an example in which a CloudBridge Connector tunnel is set up between the following devices:

- NetScaler appliance NS\_Appliance-1 in a datacenter designated as Datacenter-1
- F5 BIG-IP appliance F5-BIG-IP-Appliance-1 in a datacenter designated as Datacenter-2

NS\_Appliance-1 and F5-BIG-IP-Appliance-1 enable communication between private networks in Datacenter-1 and Datacenter-2 through the CloudBridge Connector tunnel. In the example, NS\_Appliance-1 and F5-BIG-IP-Appliance-1 enable communication between client CL1 in Datacenter-1 and server S1 in Datacenter-2 through the CloudBridge Connector tunnel. Client CL1 and server S1 are on different private networks.

On NS\_Appliance-1, the CloudBridge Connector tunnel configuration includes IPsec profile entity NS\_F5-BIG-IP\_IPSec\_Profile, CloudBridge Connector tunnel entity NS\_F5-BIG-IP\_Tunnel, and policy based routing (PBR) entity NS\_F5-BIG-IP\_Pbr.

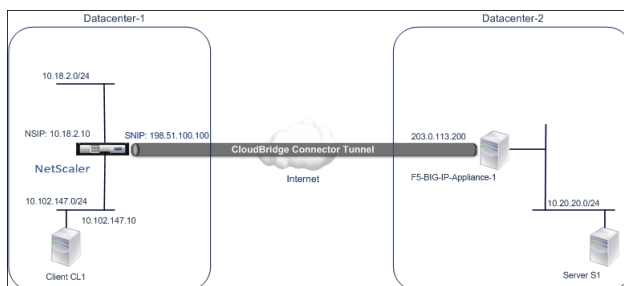

For more information, refer to [F5 big IP](#) pdf.

### Points to consider for a CloudBridge Connector tunnel configuration

- The NetScaler appliance is UP and running, is connected to the Internet, and is also connected to the private subnets whose traffic is to be protected over the CloudBridge Connector tunnel.
- The F5 BIG-IP appliance is UP and running, is connected to the Internet, and is also connected to the private subnets whose traffic is to be protected over the CloudBridge Connector tunnel.
- The following IPSec settings are supported for a CloudBridge Connector tunnel between a NetScaler appliance and an F5 BIG-IP appliance.
  - IPSec mode: Tunnel mode
  - IKE version: Version 1
  - IKE authentication method: Pre-Shared Key
  - IKE encryption algorithm: AES
  - IKE hash algorithm: HMAC SHA1
  - ESP encryption algorithm: AES
  - ESP hash algorithm: HMAC SHA1
- You must specify the same IPSec settings on the NetScaler appliance and the F5 BIG-IP appliance at the two ends of the CloudBridge Connector tunnel.
- NetScaler provides a common parameter (in IPSec profiles) for specifying an IKE hash algorithm and an ESP hash algorithm. It also provides another common parameter for specifying an IKE encryption algorithm and an ESP encryption algorithm. Therefore, in the F5 BIG-IP appliance, you must specify the same hash algorithm and same encryption algorithm in IKE (phase 1 configuration) and ESP (phase 2 configuration).
- You must configure the firewall at the NetScaler end and F5 BIG-IP end to allow the following.
  - Any UDP packets for port 500
  - Any UDP packets for port 4500
  - Any ESP (IP protocol number 50) packets

### Configuring F5 BIG-IP for the CloudBridge Connector tunnel

To configure a CloudBridge connector tunnel between a NetScaler appliance and an F5 BIG-IP appliance, perform the following tasks on the F5 BIG-IP appliance:

- **Create a forwarding virtual server for IPsec.** A forwarding virtual server intercepts IP traffic for the IPsec tunnel.
- **Create an IKE peer.** An IKE peer specifies the local and remote IPsec tunnel endpoints. It also specifies algorithms and credentials to be used for IPsec IKE phase 1.

- **Create a custom IPsec policy.** A policy specifies the IPsec protocol (ESP) and the mode (tunnel) to be used for forming the IPsec tunnel. It also specifies the algorithms and security parameters to be used for IKE IPsec phase 2.
- **Create a bidirectional IPsec traffic selector.** A traffic selector specifies the F5 BIG-IP side and NetScaler side subnets whose IP traffic is to be traversed through the IPsec tunnel.

The procedures for configuring IPsec VPN (CloudBridge Connector tunnel) on an F5 BIG-IP appliance might change over time, depending on the F5 release cycle. Citrix recommends that you follow the official F5 BIG-IP documentation for configuring IPsec VPN tunnels, at:

<https://f5.com>

To create a forwarding virtual server for IPsec by using the F5 BIG-IP GUI

1. On the **Main** tab, click **Local Traffic > Virtual Servers**, and then click **Create**.
2. On **New Virtual Server List** screen, set the following parameters:
  - **Name.** Type a unique name for the virtual server.
  - **Type.** Select **Forwarding (IP)**.
  - **Destination Address.** Type a wildcard network address in CIDR format, for example, 0.0.0.0/0 for IPv4 to accept any traffic.
  - **Service Port.** Select **All Ports** from the list.
  - **Protocol list.** Select **All Protocols** from the list.
  - **VLAN and Tunnel Traffic.** Retain the default selection, **All VLANs and Tunnels**.
3. Click **Finished**.

To create a custom IPsec policy by using the F5 BIG-IP GUI

1. On the **Main** tab, click **Network > IPsec > IPsec Policies**, and then click **Create**.
2. On the **New Policy** screen, set the following parameters:
  - **Name.** Type a unique name for the policy.
  - **IPsec Protocol.** Retain the default selection, ESP.
  - **Mode.** Select Tunnel. The screen refreshes to show additional related settings.
  - **Tunnel Local Address.** Type the local IPsec tunnel endpoint IP address (Configured on the F5 BIG-IP appliance).
  - **Tunnel Remote Address.** Type the remote IPsec tunnel endpoint IP address (Configured on the NetScaler appliance).
3. For the IKE Phase 2 parameters, retain the default values, or select the options that are appropriate for your deployment.
4. Click **Finished**.

To create a bidirectional IPsec traffic selector by using the F5 BIG-IP GUI

1. On the **Main** tab, click **Network > IPsec > Traffic Selectors**, and then click **Create**.
2. On the **New Traffic Selector** screen, set the following parameters:
  - **Name**. Type a unique name for the traffic selector.
  - **Order**. Retain the default value (**First**). This setting specifies the order in which the traffic selector appears on the Traffic Selector List screen.
3. From the **Configuration** list, select **Advanced**, and set the following parameters:
  - **Source IP Address**. Click **Host** or **Network**, and in **Address** field, type the address of the F5 BIG-IP side subnet whose traffic is to be protected over the IPsec tunnel.
  - **Source Port**. Select **\* All Ports**.
  - **Destination IP Address**. Click **Host**, and in the **Address** field, type the address of the NetScaler side subnet whose traffic is to be protected over the IPsec tunnel.
  - **Destination Port**. Select **\* All Ports**.
  - **Protocol**. Select **\* All Protocols**.
  - **Direction**. Select **Both**.
  - **Action**. Select **Protect**. The **IPsec Policy Name** setting appears.
  - **IPsec Policy Name**. Select the name of the custom IPsec policy that you created.
4. Click **Finished**.

## Configuring the NetScaler appliance for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel between a NetScaler appliance and a F5 BIG-IP appliance, perform the following tasks on the NetScaler appliance. You can use either the NetScaler command line or the NetScaler graphical user interface (GUI):

- **Create an IPsec profile**. An IPsec profile entity specifies the IPsec protocol parameters, such as IKE version, encryption algorithm, hash algorithm, and authentication method to be used by the IPsec protocol in the CloudBridge Connector tunnel.
- **Create an IP tunnel that uses IPsec protocol, and associate the IPsec profile with it**. An IP tunnel specifies the local IP address (CloudBridge Connector tunnel end point IP address (of type SNIP) configured on the NetScaler appliance), remote IP address (CloudBridge Connector tunnel endpoint IP address configured on the F5 BIG-IP appliance), protocol (IPsec) used to set up the CloudBridge Connector tunnel, and an IPsec profile entity. The created IP tunnel entity is also called the CloudBridge Connector tunnel entity.
- **Create a PBR rule and associate it with the IP tunnel**. A PBR entity specifies a set of rules and an IP tunnel (CloudBridge Connector tunnel) entity. The source IP address range and the destination IP address range are the conditions for the PBR entity. Set the source IP address range to specify the NetScaler-side subnet whose traffic is to be protected over the tunnel, and set the destination IP address range to specify the F5 BIG-IP side subnet whose traffic is to be protected over the tunnel.



To create an IPSEC profile by using the NetScaler command line

At the command prompt, type:

- `add ipsec profile <name> -psk <string> -ikeVersion v1 -encAlgo AES -hashAlgo HMAC_SHA1 -perfectForwardSecrecyENABLE`
- `show ipsec profile** <name>`

To create an IPSEC tunnel and bind the IPSEC profile to it by using the NetScaler command line

At the command prompt, type:

- `add ipTunnel <name> <remote> <remoteSubnetMask> <local> -protocol IPSEC -ipsecProfileName <string>`
- `show ipTunnel <name>`

To create a PBR rule and bind the IPSEC tunnel to it by using the NetScaler command line

At the command prompt, type:

- `add pbr <pbrName> ALLOW -srcIP <subnet-range> -destIP <subnet-range> -ipTunnel <tunnelName>`
- `apply pbrs`
- `show pbr <pbrName>`

To create an IPSEC profile by using the GUI

1. Navigate to **System > CloudBridge Connector > IPsecProfile**.
2. In the details pane, click **Add**.
3. In the **Add IPsec Profile** page, set the following parameters:
  - Name
  - Encryption Algorithm
  - Hash Algorithm
  - IKE Protocol Version
4. Configure the IPsec authentication method to be used by the two CloudBridge Connector tunnel peers to mutually authenticate: Select the **Pre-shared key authentication method** and set the **Pre-Shared Key Exists** parameter.
5. Click **Create**, and then click **Close**.

To create an IP tunnel and bind the IPSEC profile to it by using the GUI

1. Navigate to **System > CloudBridge Connector > IP Tunnels**.
2. On the **IPv4 Tunnels** tab, click **Add**.
3. In the **Add IP Tunnel** page, set the following parameters:
  - Name

- Remote IP
- Remote Mask
- Local IP Type (In the Local IP Type drop-down list, select *Subnet IP*).
- Local IP (All the configured IP addresses of the selected IP type are in the Local IP drop down list. Select the desired IP from the list.)
- Protocol
- IPSec Profile

4. Click **Create**, and then click **Close**.

To create a PBR rule and bind the IPSEC tunnel to it by using the GUI

1. Navigate to **System > Network > PBR**.
2. On the **PBR** tab, click **Add**.
3. In the **Create PBR** page, set the following parameters:
  - Name
  - Action
  - Next Hop Type (Select *IP Tunnel*)
  - IP Tunnel Name
  - Source IP Low
  - Source IP High
  - Destination IP Low
  - Destination IP High
4. Click **Create**, and then click **Close**.

The corresponding new CloudBridge Connector tunnel configuration on the NetScaler appliance appears in the GUI. The current status of the CloudBridge connector tunnel is shown in the Configured CloudBridge Connector pane. A green dot indicates that the tunnel is up. A red dot indicates that the tunnel is down.

The following commands create settings of NetScaler appliance NS\_Appliance-1 in “Example of a CloudBridge Connector Configuration.:

```
1 > add ipsec profile NS_F5-BIG-IP_IPSec_Profile -psk
 examplepresharedkey -ikeVersion v1 -encAlgo AES -hashalgo
 HMAC_SHA1 -lifetime 315360 -perfectForwardSecrecy ENABLE
2
3
4 Done
5
6 > add iptunnel NS_F5-BIG-IP_Tunnel 203.0.113.200 255.255.255.255
 198.51.100.100 -protocol IPSEC -ipsecProfileName NS_F5-BIG-
 IP_IPSec_Profile
7
8
```

```
9 Done
10
11 > add pbr NS_F5-BIG-IP_Pbr -srcIP 10.102.147.0-10.102.147.255 -
 destIP 10.20.0.0-10.20.255.255 - ipTunnel NS_F5-BIG-IP_Tunnel
12
13
14 Done
15
16 > apply pbrs
17
18
19 Done
```

## Monitoring the CloudBridge Connector tunnel

You can monitor the performance of CloudBridge Connector tunnels on a NetScaler appliance by using CloudBridge Connector tunnel statistical counters. For more information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).

## CloudBridge Connector interoperability –Cisco ASA

May 2, 2023

You can configure a CloudBridge Connector tunnel between a NetScaler appliance and a Cisco ASA appliance to connect two datacenters or extend your network to a cloud provider. The NetScaler appliance and the Cisco ASA appliance form the end points of the CloudBridge Connector tunnel and are called peers.


### Example of a CloudBridge Connector tunnel configuration

As an illustration of the traffic flow in a CloudBridge Connector tunnel, consider an example in which a CloudBridge Connector tunnel is set up between the following appliances:

- NetScaler appliance NS\_Appliance-1 in a datacenter designated as Datacenter-1
- Cisco ASA appliance Cisco-ASA-Appliance-1 in a datacenter designated as Datacenter-2

NS\_Appliance-1 and Cisco-ASA-Appliance-1 enable communication between private networks in Datacenter-1 and Datacenter-2 through the CloudBridge Connector tunnel. In the example, NS\_Appliance-1 and Cisco-ASA-Appliance-1 enable communication between client CL1 in Datacenter-1 and server S1 in Datacenter-2 through the CloudBridge Connector tunnel. Client CL1 and server S1 are on different private networks.

On NS\_Appliance-1, the CloudBridge Connector tunnel configuration includes IPsec profile entity NS\_Cisco-ASA\_IPSec\_Profile, CloudBridge Connector tunnel entity NS\_Cisco-ASA\_Tunnel, and policy based routing (PBR) entity NS\_Cisco-ASA\_Pbr.

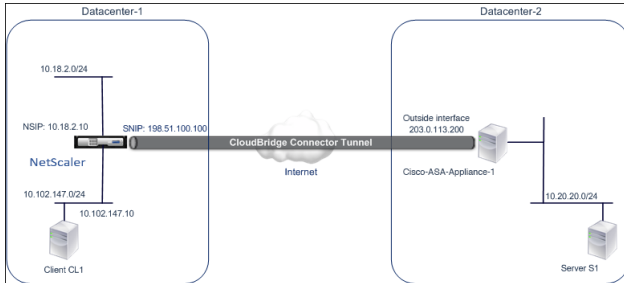

### Points to consider for a CloudBridge Connector tunnel configuration

Before you begin configuring CloudBridge connector tunnel, make sure that:

- The following IPsec settings are supported for a CloudBridge Connector tunnel between a NetScaler appliance and a Cisco ASA appliance.

| IPsec Properties          | Settings            |
|---------------------------|---------------------|
| IPsec mode                | Tunnel mode         |
| IKE version               | Version 1           |
| IKE authentication method | Pre-Shared Key      |
| IKE encryption algorithm  | AES, 3DES           |
| IKE hash algorithm        | HMAC SHA1, HMAC MD5 |
| ESP encryption algorithm  | AES, 3DES           |
| ESP hash algorithm        | HMAC SHA1, HMAC MD5 |

- You must specify the same IPsec settings on the NetScaler appliance and the Cisco ASA appliance at the two ends of the CloudBridge Connector tunnel.
- NetScaler provides a common parameter (in IPsec profiles) for specifying an IKE hash algorithm and an ESP hash algorithm. It also provides another common parameter for specifying an IKE encryption algorithm and an ESP encryption algorithm. Therefore, in the Cisco ASA appliance, you must specify the same hash algorithm and same encryption algorithm in IKE (phase 1 configuration) and ESP (phase 2 configuration).
- You must configure the firewall at the NetScaler end and Cisco ASA end to allow the following.
  - Any UDP packets for port 500

- Any UDP packets for port 4500
- Any ESP (IP protocol number 50) packets

## Configuring Cisco ASA for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel on a Cisco ASA appliance, use the Cisco ASA command line interface, which is the primary user interface for configuring, monitoring, and maintaining Cisco ASA appliances.

Before you begin the CloudBridge Connector tunnel configuration on a Cisco ASA appliance, make sure that:

- You have a user account with administrator credentials on the Cisco ASA appliance.
- You are familiar with the Cisco ASA command line interface.
- The Cisco ASA appliance is UP and running, is connected to the Internet, and is also connected to the private subnets whose traffic is to be protected over the CloudBridge Connector tunnel.

### Note

The procedures for configuring CloudBridge Connector tunnel on a Cisco ASA appliance might change over time, depending on the Cisco release cycle. Citrix recommends that you follow the official Cisco ASA product documentation for Configuring IPsec VPN tunnels, at:

- <http://www.cisco.com>

To configure a CloudBridge connector tunnel between a NetScaler appliance and a Cisco ASA appliance, perform the following tasks on the Cisco ASA appliance's command line:

- **Create an IKE Policy.** An IKE policy defines a combination of security parameters to be used during the IKE negotiation (phase 1). For example, parameters such as hash algorithm, encryption algorithm, and authentication method to be used in the IKE negotiation are set in this task.
- **Enable IKE on the outside interface.** Enable IKE on the outside interface through which the tunnel traffic will flow to the tunnel peer.
- **Create a tunnel group.** A tunnel group specifies the type of tunnel and the pre-shared key. The tunnel type must be set to ipsec-l2l, which stands for IPsec LAN to LAN. A pre-shared key is a text string, which the peers of a CloudBridge Connector tunnel use to mutually authenticate with each other. The pre-shared keys are matched against each other for IKE authentication. Therefore, for the authentication to be successful, you must configure the same pre-shared key on the Cisco ASA appliance and the NetScaler appliance.
- **Define a transform set.** A transform set defines a combination of security parameters (phase 2) to be used in the exchange of data over the CloudBridge Connector tunnel after the IKE negotiation is successful.

- **Create an access List.** Crypto access lists are used to define the subnets whose IP traffic will be protected over the CloudBridge tunnel. The source and destination parameters in the access list specify the Cisco appliance side and NetScaler side subnets that are to be protected over the CloudBridge Connector Tunnel. The access list must be set to permit. Any request packet that originates from an appliance in the Cisco appliance side subnet and is destined to an appliance in the NetScaler side subnet, and that matches the source and destination parameters of the access list, is sent across the CloudBridge Connector tunnel.
- **Create a crypto map.** Crypto maps define the IPSec parameters for security associations (SAs). They include the following: Crypto access list to identify the subnets whose traffic is to be protected over the CloudBridge tunnel, peer (NetScaler) identification by IP address, and transform set to match the peer security settings.
- **Apply the crypto Map to the outside interface.** In this task, you apply the crypto map to the outside interface through which the tunnel traffic will flow to the tunnel peer. Applying the crypto map to an interface instructs the Cisco ASA appliance to evaluate all interface traffic against the crypto map set and to use the specified policy during connection or security association negotiations.

The examples in the following procedures create settings of Cisco ASA appliance Cisco-ASA-Appliance-1 used in Example of CloudBridge Connector Configuration and Data Flow.

To create an IKE policy by using the Cisco ASA command line

At the Cisco ASA appliance’s command prompt, type the following commands, starting in global configuration mode, in the order shown:

| Command                      | Example                                                               | Command Description                                                                                                                                                              |
|------------------------------|-----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| crypto ikev1 policy priority | Cisco-ASA-appliance-1(config)#<br>crypto ikev1 policy 1               | Enter IKE policy configuration mode and identify the policy to create. (Each policy is uniquely identified by the priority number you assign.) This example configures policy 1. |
| encryption (3des   aes)      | Cisco-ASA-appliance-1<br>(config-ikev1-policy)#<br>encryption 3des    | Specify the encryption algorithm. This example configures the 3DES algorithm.                                                                                                    |
| hash (sha   md5)             | Cisco-ASA-appliance-1 (config-ikev1-policy)# hash sha                 | Specify the hash algorithm. This example configures SHA.                                                                                                                         |
| authenticationpre-share      | Cisco-ASA-appliance-1 (config-ikev1-policy)# authentication pre-share | Specify the pre-share authentication method.                                                                                                                                     |

| Command          | Example                                                     | Command Description                                                                                                                                             |
|------------------|-------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| group 2          | Cisco-ASA-appliance-1 (config-ikev1-policy)# group 2        | Specify 1024-bit Diffie-Hellman group identifier (2).                                                                                                           |
| lifetime seconds | Cisco-ASA-appliance-1 (config-ikev1-policy)# lifetime 28800 | Specify the security association's lifetime in seconds. This example configures 28800 seconds, which is the default value of lifetime in a NetScaler appliance. |

To enable IKE on the outside interface by using the Cisco ASA command line

At the Cisco ASA appliance's command prompt, type the following commands, starting in global configuration mode, in the order shown:

| Command                     | Example                                                       | Command Description                                                                                                                                 |
|-----------------------------|---------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| crypto ikev1 enable outside | Cisco-ASA-appliance-1(config)#<br>crypto ikev1 enable outside | Enable IKEv1 on the interface through which the tunnel traffic flows to the tunnel peer. This example enables IKEv1 on the interface named outside. |

To create a tunnel group by using the Cisco ASA command line

At the Cisco ASA appliance's command prompt, type the following commands, starting in global configuration mode, as show in the attached pdf [Tunnel Group using Cisco ASA command line](#):

To create a crypto access list by using the Cisco ASA command line

At the Cisco ASA appliance's command prompt, type the following command in global configuration mode, in the order shown:

| Command                                                                                                   | Example                                                                                                       | Command Description                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| access-list access-list-number<br>permit IP source<br>source-wildcard destination<br>destination-wildcard | Cisco-ASA-appliance-1(config)#<br>access-list 111 permit ip<br>10.20.20.0 0.0.0.255<br>10.102.147.0 0.0.0.255 | Specify conditions to determine the subnets whose IP traffic is to be protected over the CloudBridge Connector tunnel. This example configures access list 111 to protect traffic from subnets 10.20.20.0/24 (at the Cisco-ASA-Appliance-1 side) and 10.102.147.0/24 (at the NS_Appliance-1 side). |

To define a transform set by using the Cisco ASA command line

At the Cisco ASA appliance's command prompt, type the following commands, starting in global configuration mode. See [Transform set using ASA command line](#) table pdf.

To create a crypto map by using the Cisco ASA command line

At the Cisco ASA appliance's command prompt, type the following commands starting in global configuration mode, in the order shown:

| Command                                                          | Example                                                                                   | Command Description                                                                                                                                                     |
|------------------------------------------------------------------|-------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| crypto map map-name<br>seq-num match address<br>access-list-name | Cisco-ASA-appliance-1<br>(config)# crypto map<br>NS-CISCO-CM 1 match address<br>111       | Create a crypto map and specify an access list to it. This example configures crypto map NS-CISCO-CM with sequence number 1 and assigns access list 111 to NS-CISCO-CM. |
| crypto map map-name<br>seq-num set peer ip-address               | Cisco-ASA-appliance-1<br>(config)# crypto map<br>NS-CISCO-CM 1 set peer<br>198.51.100.100 | Specify the peer (NetScaler appliance) by its IP address. This example specifies 198.51.100.100, which is the tunnel endpoint IP address on the NetScaler appliance.    |



| Command                                                                         | Example                                                                                               | Command Description                                                                                                 |
|---------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| crypto map map-name<br>seq-num set ikev1<br>transform-set<br>transform-set-name | Cisco-ASA-appliance-1<br>(config)# crypto map<br>NS-CISCO-CM 1 set ikev1<br>transform-set NS-CISCO-TS | Specify which transform set is allowed for this crypto map entry. This example specifies transform set NS-CISCO-TS. |

To apply a crypto map to an interface by using the Cisco ASA command line

At the Cisco ASA appliance's command prompt, type the following commands starting in global configuration mode, in the order shown:

| Command                                           | Example                                                                       | Command Description                                                                                                                                                   |
|---------------------------------------------------|-------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| crypto map<br>map-nameinterface<br>interface-name | Cisco-ASA-appliance-1(config)#<br>crypto map NS-CISCO-CM<br>interface outside | Apply the crypto map to the interface through which CloudBridge Connector tunnel traffic will flow. This example applies crypto map NS-CISCO-CM to interface outside. |

### Configuring the NetScaler appliance for the CloudBridge Connector tunnel

To configure a CloudBridge Connector tunnel between a NetScaler appliance and a Cisco ASA appliance, perform the following tasks on the NetScaler appliance. You can use either the NetScaler command line or the NetScaler graphical user interface (GUI):

- Create an IPsec profile.
- Create an IP tunnel that uses IPsec protocol, and associate the IPsec profile with it.
- Create a PBR rule and associate it with the IP tunnel.

#### To create an IPSEC profile by using the NetScaler command line:

At the command prompt, type:

- `add ipsec profile <name> -psk <string> -ikeVersion v1 -encAlgo AES -hashAlgo HMAC_SHA1 -perfectForwardSecrecy ENABLE`
- `show ipsec profile <name>`

#### To create an IPSEC tunnel and bind the IPSEC profile to it by using the NetScaler command line:

At the command prompt, type:

- `add ipTunnel <name> <remote> <remoteSubnetMask> <local> -protocol IPSEC -ipsecProfileName <string>`
- `show ipTunnel <name>`

**To create a PBR rule and bind the IPSEC tunnel to it by using the NetScaler command line:**

At the command prompt, type:

- `**add pbr** <pbrName> **ALLOW** -**srcIP** <subnet-range> -**destIP** <subnet-range>`
- `**ipTunnel** <tunnelName>`
- `**apply pbrs**`
- `**show pbr** <pbrName>`

**To create an IPSEC profile by using the GUI:**

1. Navigate to **System > CloudBridge Connector > IPsec Profile**.
2. In the details pane, click **Add**.
3. In the **Add IPsec Profile** page, set the following parameters:
  - Name
  - Encryption Algorithm
  - Hash Algorithm
  - IKE Protocol Version
  - Perfect Forward Secrecy (Enable this parameter)
4. Configure the IPsec authentication method to be used by the two CloudBridge Connector tunnel peers to mutually authenticate: Select the **Pre-shared key authentication** method and set the **Pre-Shared Key Exists** parameter.
5. Click **Create**, and then click **Close**.

**To create an IP tunnel and bind the IPSEC profile to it by using the GUI:**

1. Navigate to **System > CloudBridge Connector > IP Tunnels**.
2. On the **IPv4 Tunnels** tab, click **Add**.
3. In the **Add IP Tunnel** page, set the following parameters:
  - Name
  - Remote IP
  - Remote Mask
  - Local IP Type (In the Local IP Type drop-down list, select Subnet IP).
  - Local IP (All the configured IP addresses of the selected IP type are in the Local IP drop down list. Select the desired IP from the list.)
  - Protocol
  - IPsec Profile

4. Click **Create**, and then click **Close**.

**To create a PBR rule and bind the IPSEC tunnel to it by using the GUI:**

1. Navigate to **System > Network > PBR**.
2. On the **PBR** tab, click **Add**.
3. In the **Create PBR** page, set the following parameters:
  - Name
  - Action
  - Next Hop Type (Select IP Tunnel)
  - IP Tunnel Name
  - Source IP Low
  - Source IP High
  - Destination IP Low
  - Destination IP High
4. Click **Create**, and then click **Close**.

The corresponding new CloudBridge Connector tunnel configuration on the NetScaler appliance appears in the GUI. The current status of the CloudBridge connector tunnel is shown in the Configured CloudBridge Connector pane. A green dot indicates that the tunnel is up. A red dot indicates that the tunnel is down.

The following commands create settings of NetScaler appliance NS\_Appliance-1 in “Example of a CloudBridge Connector Configuration.”:

```
1 > add ipsec profile NS_Cisco-ASA_IPSec_Profile -psk
 examplepresharedkey -ikeVersion v1 -encAlgo AES -hashalgo
 HMAC_SHA1 -lifetime 315360 -perfectForwardSecrecy ENABLE
2
3 Done
4
5 > add iptunnel NS_Cisco-ASA_Tunnel 203.0.113.200 255.255.255.255
 198.51.100.100 -protocol IPSEC -ipsecProfileName NS_Cisco-
 ASA_IPSec_Profile
6
7
8 Done
9
10 > add pbr NS_Cisco-ASA_Pbr -srcIP 10.102.147.0-10.102.147.255 -destIP
 10.20.0.0-10.20.255.255 -ipTunnel NS_Cisco-ASA_Tunnel
11
12
13 Done
14
15 > apply pbrs
16
17 Done
```

## Monitoring the CloudBridge Connector Tunnel

You can monitor the performance of CloudBridge Connector tunnels on a NetScaler appliance by using CloudBridge Connector tunnel statistical counters. For more information about displaying CloudBridge Connector tunnel statistics on a NetScaler appliance, see [Monitoring CloudBridge Connector Tunnels](#).

## High Availability

May 2, 2023

A high availability (HA) deployment of two NetScaler appliances can provide uninterrupted operation in any transaction. With one appliance configured as the primary node and the other as the secondary node, the primary node accepts connections and manages servers while the secondary node monitors the primary. If, for any reason, the primary node is unable to accept connections, the secondary node takes over.

The secondary node monitors the primary by sending periodic messages (often called heartbeat messages or health checks) to determine whether the primary node is accepting connections. If a health check fails, the secondary node retries the connection for a specified period, after which it determines that the primary node is not functioning normally. The secondary node then takes over for the primary (a process called failover).

After a failover, all clients must reestablish their connections to the managed servers, but the session persistence rules are maintained as they were before the failover.


With Web server logging persistence enabled, no log data is lost due to the failover. For logging persistence to be enabled, the log server configuration must carry entries for both systems in the log.conf file.

**Note:**

In some cases, the primary node is used as a proxy to the secondary node.

The following figure shows a network configuration with an HA pair.

Figure 1. NetScaler Appliances in a High Availability Configuration

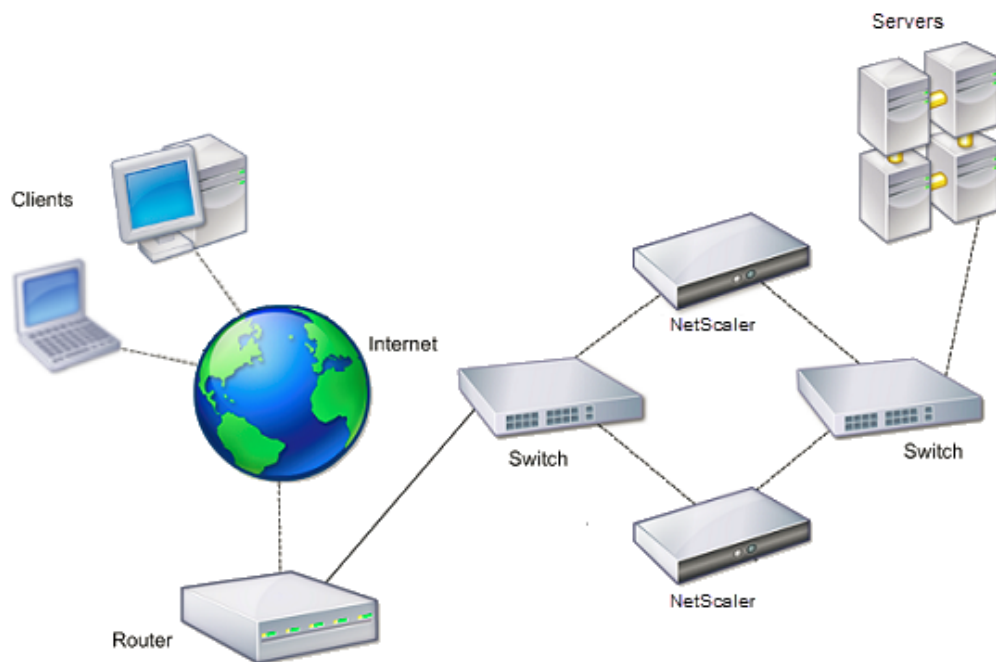

To configure HA, you might want to begin by creating a basic setup, with both nodes in the same subnet. You can then customize the intervals at which the nodes communicate health-check information, the process by which nodes maintain synchronization, and the propagation of commands from the primary to the secondary. You can configure fail-safe mode to prevent a situation in which neither node is primary. If your environment includes devices that do not accept NetScaler gratuitous ARP messages, you should configure virtual MAC addresses. When you are ready for a more complex configuration, you can configure HA nodes in different subnets.

To improve the reliability of your HA setup, you can configure route monitors and create redundant links. In some situations, such as when troubleshooting or performing maintenance tasks, you might want to force a node to fail over (assign primary status to the other node), or you might want to force the secondary node to stay secondary or the primary node to stay primary.

## Points to consider for a high availability setup

June 1, 2023

### Note

The following requirements for configuring systems in an HA setup:

- In an HA configuration, the primary and secondary NetScaler appliances must be of the same

model. Different NetScaler models are not supported in an HA pair. Also, NetScaler VPXs deployed on different models are not supported in an HA pair. Only, NetScaler VPXs deployed on the same model can form an HA pair.

- In an HA setup, both nodes must run the same version of NetScaler.
- Entries in the configuration file (ns.conf) on both the primary and the secondary system must match, with the following exceptions:
  - The primary and the secondary systems must each be configured with their own unique IP addresses (NSIPs.)
  - In an HA pair, the node ID and associated IP address of one node must point to the other node. For example, if you have nodes NS1 and NS2, you must configure NS1 with a unique node ID and the IP address of NS2, and you must configure NS2 with a unique node ID and the IP address of NS1.
- If you create a configuration file on either node by using a method that does not go directly through the GUI or the CLI (for example, importing SSL certificates, or changing to startup scripts), you must copy the configuration file to the other node or create an identical file on that node.
- Initially, all NetScaler appliances are configured with the same RPC node password. RPC nodes are internal system entities used for system-to-system communication of configuration and session information. For security, you should change the default RPC node passwords.

One RPC node exists on each NetScaler. This node stores the password, which is checked against the password provided by the contacting system. To communicate with other systems, each NetScaler requires knowledge of those systems, including how to authenticate on those systems. RPC nodes maintain this information, which includes the IP addresses of the other systems, and the passwords they require for authentication.

RPC nodes are implicitly created when adding a node or adding a Global Server Load Balancing (GSLB) site. You cannot create or delete RPC nodes manually.

**Note:**

If the NetScaler appliances in a high availability setup are configured in one-arm mode, you must disable all system interfaces except the one connected to the switch or hub.

For an IPv6 HA configuration, the following considerations apply:

- You must install the IPv6PT license on both NetScaler appliances.
- After installing the IPv6PT license, enable the IPv6 feature by using the GUI or the command line interface.
- Both NetScaler appliances require a global NSIP IPv6 address. In addition, network entities (for example, switches and routers) between the two nodes must support IPv6.


## Configuring high availability

May 2, 2023

To set up a high availability configuration, you create two nodes, each of which defines the other's NetScaler IP (NSIP) address as a remote node. Begin by logging on to one of the two NetScaler appliances that you want to configure for high availability, and add a node. Specify the other appliance's NetScaler IP (NSIP) address as the address of the new node. Then, log on to the other appliance and add a node that has the NSIP address of the first appliance. An algorithm determines which node becomes primary and which becomes secondary.

The following figure shows a simple HA setup, in which both nodes are in the same subnet.

Figure 1. Two NetScaler Appliances Connected in a High Availability Configuration

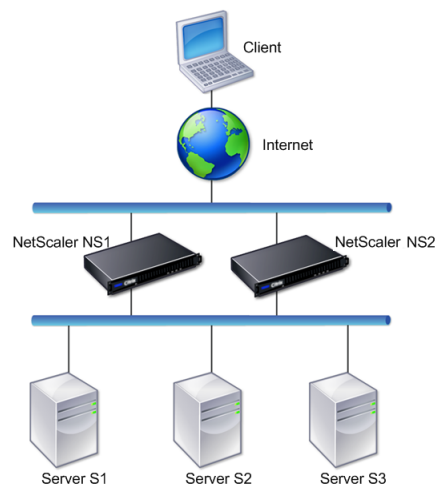

### Steps to configure high availability

Setting up a high availability pair of two NetScaler appliances consists of the following tasks on both the appliances:

- **Add a node.** On an appliance, say N1, add the other appliance, say N2, by specifying a unique node ID and the appliance's (N2) NSIP address. You can specify any integer in the range of 1-64 for the peer node ID.

The peer node ID specified on the self-node is applicable only to the self-node and it does not have any relevance on the peer node. For example, you have added N2 as peer node on N1 and

specified the node ID as 33 for N2. The N2's node ID setting as 33 is applicable only on N1 and has no effect on N2's configuration.

The peer node ID, specified on both the nodes, need not be of the same value and can be modified. On both the nodes, the self-node ID is hardcoded to zero and cannot be modified.

- **Disable HA monitor for unused interfaces.** On the self-node, you must disable the HA monitor for each interface that is not connected or not being used for traffic. Disabling HA monitor for unused interfaces prevents any HA failovers caused when the state of any of these unused interfaces becomes DOWN.

**Note:**

To ensure that each node in the high availability configuration has the same settings, you must synchronize your SSL certificates, startup scripts, and other configuration files with those on the primary node.

## CLI procedures

To set up a high availability pair of two NetScaler appliances by using the CLI, perform the following tasks on each of the two appliances:

### To add a node by using the CLI:

At the command prompt, type:

- `add ha node <id> <IPAddress>`
- `show ha node`

### To disable the HA monitor for an unused interface by using the CLI:

At the command prompt, type:

- `set interface <ifNum> [-haMonitor ( ON | OFF )]`
- `show interface <ifNum>`

### Example:

```
1 > add ha node 33 203.0.113.33
2
3 > set interface 1/3 -haMonitor OFF
4 Done
```

## GUI procedure

The NetScaler GUI provides a screen that combines the tasks of adding a peer node as well as disabling the HA monitor on unused interfaces on the self-node. The screen also provides an option to



automatically configure the peer node for the HA setup avoiding the need to manually configure the peer node.

### **To set up a high availability pair of two NetScaler appliances by using the GUI:**

1. Log on to the GUI of one of the appliances.
2. Navigate to **System > High Availability > Nodes**, provide the peer node's NSIP address in the **Remote Node IP Address** field.
3. Select **Turn Off HA Monitor interface/channels that are down**.
4. Select **Configure remote system to participate High Availability setup** and provide the peer node's login credentials.
5. Click **Create**.

### **Disabling or Enabling a Node**

You can disable or enable only a secondary node. When you disable a secondary node, it stops sending heartbeat messages to the primary node, and therefore the primary node can no longer check the status of the secondary. When you enable a node, the node takes part in the high availability configuration.

### **To disable or enable a node by using the command line interface**

At the command prompt, type one of the following commands:

- `set ha node -hastatus DISABLED`
- `set ha node -hastatus ENABLED`

### **To disable or enable a node by using the GUI**

1. Navigate to **System > High Availability** and, on the **Nodes** tab, open the node.
2. In the **High Availability Status** list, select **ENABLED (Actively Participate in HA)** or **DISABLED (Do not participate in HA)**.

## **Configuring the communication intervals**

March 1, 2023

The hello interval is the interval at which the heartbeat messages are sent to the peer node. The dead interval is the time interval after which the peer node is marked DOWN if heartbeat packets are not

received. The heartbeat messages are UDP packets sent to port 3003 of the other node in an HA pair. The dead interval must be set as a multiple of the hello interval. By default, the hello interval is set to 200 milliseconds and the dead interval is set to 3 seconds.

### To set the hello and dead intervals by using the command line interface

At the command prompt, type:

- `set HA node [-helloInterval <msecs>] [-deadInterval <secs>]`
- `show HA node <id>`

### To set the hello and dead intervals by using the GUI

1. Navigate to **System > High Availability** and, on the **Nodes** tab, open the node.
2. Set the following parameters:
  - Hello Interval (msecs)
  - Dead Interval (secs)

## Configuring synchronization

November 8, 2023

Synchronization is a process of duplicating the configuration of the primary node on the secondary node. The purpose of synchronization is to ensure that there's no loss of configuration information between the primary and the secondary nodes, regardless of the number of failovers that occur. Synchronization uses TCP port 3008 or 3010.

Synchronization is triggered when one of the following conditions is met:

- The secondary node in an HA setup comes up after a restart.
- The primary node becomes secondary after a failover.

Automatic synchronization is enabled by default. You can also force synchronization.

#### Note:

- Command propagation is disabled during HA synchronization to prevent any conflicting command settings, which can lead to command propagation failure.
- During an HA synchronization, the secondary node runs the `clear ns config` command to clear the existing configuration and load the new configuration pulled from the

primary node. However, the clear configuration does not remove the default static route configured in the secondary node. If this default static route points to an incorrect gateway, it might result in downtime of the services.

## Disabling or enabling synchronization

Automatic HA synchronization is enabled by default on each node in an HA pair. You can enable or disable it on either node.

### To disable or enable automatic synchronization by using the command line interface

At the command prompt, type:

- `set HA node -haSync DISABLED`
- `set HA node -haSync ENABLED`

### To disable or enable synchronization by using the GUI

1. Navigate to **System > High Availability**.
2. Under HA Synchronization, clear or select the Secondary node will fetch the configuration from the Primary option.

## Forcing the secondary node to synchronize with the primary node

In addition to automatic synchronization, the NetScaler supports forced synchronization. You can force the synchronization from either the primary or the secondary node. When you force synchronization from the secondary node, it starts synchronizing its configuration with the primary node.

However, if synchronization is already in progress, forced synchronization fails and the system displays a warning. Forced synchronization also fails in any of the following circumstances:

- You force synchronization on a standalone system.
- The secondary node is disabled.
- HA synchronization is disabled on the secondary node.

### To force synchronization by using the command line interface

At the command prompt, type:

```
force HA sync
```

### To force synchronization by using the GUI

1. Navigate to **System > High Availability**.
2. On the **Nodes** tab, in the Action list, click **Force Synchronization**.

## Synchronizing configuration files in a high availability setup

June 29, 2021

In a high availability setup, all configuration files are synchronized automatically from the primary node to the secondary node at an interval of one minute. Synchronizing configuration files can be performed manually by using the command line interface or the GUI at either the primary or the secondary node.

Files located on the secondary that are specific to the secondary (not present on the primary) are not deleted during the synchronization.

### To synchronize files in a high availability setup by using the command line interface

At the command prompt, type:

```
sync HA files <mode>
```

Example

```
1 > sync HA files all
2 Done
```

```
1 > sync HA files ssl
2 Done
```

### Parameter descriptions (of the command listed in the CLI procedure)

```
sync ha files <mode>
```

mode

Specify one of the following modes of synchronization.

- **all** - Synchronize files related to system configuration, Access Gateway bookmarks, SSL certificates, SSL CRL lists, and Application Firewall XML objects.
- **bookmarks** - Synchronize all Access Gateway bookmarks.
- **ssl** - Synchronize all certificates, keys, and CRLs for the SSL feature.

- **imports** - Synchronize all XML objects (for example, WSDLs, schemas, error pages) configured for the application firewall.
- **misc** - Synchronize all license files and the rc.conf file.
- **all\_plus\_misc** - Synchronize files related to system configuration, Access Gateway bookmarks, SSL certificates, SSL CRL lists, application firewall XML objects, licenses, and the rc.conf file.

## To synchronize files in a high availability setup by using the GUI

Navigate to **System > Diagnostics** and, in the **Utilities** group, click **Start HA files synchronization**.

## Configuring command propagation

November 8, 2023

In an HA setup, any command issued on the primary node propagates to the secondary node. The propagated command is run on the secondary node before it's run on the primary node. If command propagation or execution fails on the secondary, the primary node runs the command and logs an error. Command propagation uses TCP port 3008 or 3010.

In an HA pair configuration, command propagation is enabled by default on both the primary and secondary nodes. You can enable or disable command propagation on either node in an HA pair. If you disable command propagation on the primary node, commands aren't propagated to the secondary node. If you disable command propagation on the secondary node, commands propagated from the primary node aren't run on the secondary node.

### Note

After re-enabling propagation, remember to force synchronization.

If synchronization occurs while you're disabling propagation, any configuration-related changes that you make before the disabling of propagation takes effect are synchronized with the secondary node. This is also true for cases where propagation is disabled while synchronization is in progress.

## To disable or enable command propagation by using the command line interface

At the command prompt, type:

- set HA node -haProp DISABLED
- set HA node -haProp ENABLED

## To disable or enable command propagation by using the GUI

1. Navigate to **System > High Availability** and, on the **Nodes** tab, open the node.
2. Clear or select the Primary node will propagate the configuration to the Secondary option.

**Note:**

Command propagation is disabled during HA synchronization to prevent any conflicting command settings, which can lead to command propagation failure.

## Restricting high availability synchronization traffic to a VLAN

October 10, 2024

In a high availability (HA) deployment, traffic related to maintaining the HA configuration flows between the two HA nodes. The traffic is of the following types:

- Config synchronization
- Config propagation
- Connection mirroring
- Load balancing persistency config synchronization
- Persistent session synchronization
- Session state synchronization

Proper flow of this HA-related traffic between the two nodes is critical for the functioning of the HA deployment. Typically, the HA-related traffic is small in volume but can become high during a failover. It becomes high if a stateful connection failover is enabled and the node that was primary before the failover was handling many connections.

By default, the HA-related traffic flows through the VLANs to which the NSIP address is bound. To accommodate a potential surge in this traffic, you can separate the HA-related traffic from the management traffic and restrict its flow to a separate VLAN. This VLAN is called the HA SYNC VLAN.

**Note:**

In an HA setup, if the `tag all` parameter is enabled, then the HA packets are also tagged with the VLAN traffic. However, there might be issues with the high availability communication. Therefore, we recommend to configure NSVLAN or HA SYNC VLAN for HA traffic.

- For NSVLAN configuration, see [Configuring NSVLAN](#).
- For HA SYNC VLAN configuration, see [Configure HA SYNC VLAN](#).

## Points to consider before configuring an HA SYNC VLAN

- The configuration of an HA SYNC VLAN is neither propagated nor synchronized. In other words, the HA SYNC VLAN is node specific and is configured independently on each node.
- HA SYNC VLAN configuration is removed when you clear the configuration in only FULL mode.
- In typical environments where both dedicated management and data traffic interfaces exist, we recommend setting HA MON to OFF for the management interfaces that are part of the HA SYNC VLAN. This setting ensures that the node is not marked as DOWN only because the management interface is down.
- Management interfaces (for example, 0/1 and 0/2) must not be part of the HA SYNC VLAN, so that HA related traffic does not flow through management interfaces.
- High availability heartbeat messages can also be enabled on data interfaces after:
  - Disabling messages on management interfaces
  - Enabling messages on HA SYNC VLAN interfaces

For more information on disabling high availability heartbeat messages on interfaces, see [Managing high availability heartbeat messages on a NetScaler appliance](#).

## Configure HA SYNC VLAN

To configure an HA SYNC VLAN on a NetScaler node, specify a configured VLAN with the HA SYNC VLAN parameter of the local node entity.

### Configure an HA SYNC VLAN on a local node by using the CLI

At the command prompt, type:

- `set ha node -syncvlan <VLANID>`
- `show node`

#### Parameter Description:

**syncvlan (Sync VLAN)** - VLAN on which HA related traffic is sent. It includes traffic for synchronization, propagation, connection mirroring, load balancing persistency, configuration synchronization, persistent session synchronization, and session state synchronization. However, HA heartbeats can use any interface.

## Configure an HA SYNC VLAN on a node by using the GUI

1. Navigate to **System > High Availability**.
2. Set the **Sync VLAN** parameter while modifying the local node.

## Configuring fail-safe mode

October 13, 2023

In an HA configuration, fail-safe mode ensures that one node is always primary when both nodes fail the health check. This is to ensure that when a node is only partially available, backup methods are enabled to handle traffic as best as possible. The HA fail-safe mode is configured independently on the primary and secondary nodes.

The following table shows some of the fail-safe cases. The NOT\_UP state means that the node failed the health check yet it is partially available. The UP state means that the node passed the health check.

| Node A (Primary) Health State | Node B (Secondary) Health State | Default HA Behavior          | Fail-Safe Enabled HA Behavior | Description                                                                                  |
|-------------------------------|---------------------------------|------------------------------|-------------------------------|----------------------------------------------------------------------------------------------|
| NOT_UP(failed last)           | NOT_UP (failed first)           | A (Secondary), B (Secondary) | A (Primary), B (Secondary)    | If both nodes fail, one after the other, the node that was the last primary remains primary. |
| NOT_UP (failed first)         | NOT_UP(failed last)             | A (Secondary), B (Secondary) | A(Secondary), B(Primary)      | If both nodes fail, one after the other, the node that was the last primary remains primary. |
| UP                            | UP                              | A (Primary), B (Secondary)   | A (Primary), B (Secondary)    | If both nodes pass the health check, no change in behavior with fail-safe enabled.           |



| Node A (Primary) Health State | Node B (Secondary) Health State | Default HA Behavior          | Fail-Safe Enabled HA Behavior | Description                                                                                    |
|-------------------------------|---------------------------------|------------------------------|-------------------------------|------------------------------------------------------------------------------------------------|
| UP                            | NOT_UP                          | A(Primary), B(Secondary)     | A (Primary), B (Secondary)    | If only the secondary node fails, no change in behavior with fail-safe enabled.                |
| NOT_UP                        | UP                              | A(Secondary), B(Primary)     | A(Secondary), B(Primary)      | If only the primary fails, no change in behavior with fail-safe enabled.                       |
| NOT_UP                        | UP (STAYSECONDARY)              | A (Secondary), B (Secondary) | A (Primary), B (Secondary)    | If the secondary is configured as STAYSECONDARY, the primary remains primary even if it fails. |

### To enable fail-safe mode by using the command line interface

At the command prompt, type:

```
set HA node [-failSafe (**ON** | **OFF**)]
```

Example

```
1 set ha node -failsafe ON
```

### To enable fail-safe mode by using the GUI

1. Navigate to **System > High Availability** and, on the **Nodes** tab, open the node.
2. Under **Fail-Safe Mode**, select the **Maintain one Primary** node even when both nodes are unhealthy option.

## Configuring Virtual MAC Addresses

May 2, 2023

A virtual MAC address is a floating entity shared by the primary and the secondary nodes in an HA setup.

In an HA setup, the primary node owns all of the floating IP addresses, such as the MIPs, SNIPs, and VIPs. The primary node responds to Address Resolution Protocol (ARP) requests for these IP addresses with its own MAC address. As a result, the ARP table of an external device (for example, an upstream router) is updated with the floating IP address and the primary node's MAC address.

When a failover occurs, the secondary node takes over as the new primary node. It then uses Gratuitous ARP (GARP) to advertise the floating IP addresses that it acquired from the primary. However, the MAC address that the new primary advertises is the MAC address of its own interface.

Some devices (notably a few routers) do not accept the GARP messages generated by the NetScaler appliance. As a result, some external devices retain the old IP to MAC mapping advertised by the old primary node. This can result in a site going down.

You can overcome this problem by configuring a virtual MAC on both nodes of an HA pair. Both nodes then possess identical MAC addresses. Therefore, when failover occurs, the MAC address of the secondary node remains unchanged, and the ARP tables on the external devices do not need to be updated.

To create a virtual MAC, you need to first create a Virtual Router ID (VRID) and bind it to an interface. (In an HA setup, you need to bind the VRID to the interfaces on both nodes.) Once the VRID is bound to an interface, the system generates a virtual MAC with the VRID as the last octet.

This section includes the following details:

- [Configuring IPv4 virtual MACs](#)
- [Configuring IPv6 virtual MAC6s](#)

### Configuring IPv4 virtual MACs

When you create a IPv4 virtual MAC address and bind it to a interface, any IPv4 packet sent from the interface uses the virtual MAC address that is bound to the interface. If there is no IPv4 virtual MAC bound to an interface, the interface's physical MAC address is used.

The generic virtual MAC is of the form `00:00:5e:00:01:<VRID>`. For example, if you create a VRID with a value of 60 and bind it to an interface, the resulting virtual MAC is `00:00:5e:00:01:3c`, where `3c` is the hex representation of the VRID. You can create 255 VRIDs with values from 1 to 255.

## Creating or modifying an IPv4 virtual MAC

You create an IPv4 virtual MAC by assigning it a virtual router ID. You can then you bind the virtual MAC to an interface. You cannot bind multiple VRIDs to the same interface. To verify the virtual MAC configuration, you should display and examine the virtual MACs and the interfaces bound to the virtual MACs.

**To add a virtual MAC by using the command line interface** At the command prompt, type:

- `add vrID`
- `bind vrid <id> -ifnum <interface_name>`
- `show vrID`

Example

```
1 > add vrID 100
2 Done
3 > bind vrid 100 -ifnum 1/1 1/2 1/3
4 Done
```

**To unbind interfaces from a virtual MAC by using the command line interface** At the command prompt, type:

- `unbind vrid <id> -ifnum <interface_name>`
- `show vrID`

**To configure a virtual MAC by using the GUI** Navigate to **System > Network > VMAC** and, on the **VMAC** tab, add a new virtual MAC, or edit an existing virtual MAC.

## Removing an IPv4 virtual MAC

To remove an IPv4 virtual MAC, you delete its virtual router ID.

**To remove an IPv4 virtual MAC by using the command line interface** At the command prompt, type:

```
rm vrid <id>
```

Example

```
1 rm vrid 100s
```

**To remove an IPv4 virtual MAC by using the GUI** Navigate to **System > Network > VMAC** and, on the **VMAC** tab, delete the IPv4 virtual MAC.

## Configuring IPv6 virtual MAC6s

The NetScaler supports virtual MAC6 for IPv6 packets. You can bind any interface to a virtual MAC6, even if an IPv4 virtual MAC is bound to the interface. Any IPv6 packet sent from the interface uses the virtual MAC6 bound to that interface. If there is no virtual MAC6 bound to an interface, an IPv6 packet uses the physical MAC.

### Creating or Modifying a virtual MAC6

You create an IPv6 virtual MAC by assigning it an IPv6 virtual router ID. You can then you bind the virtual MAC to an interface. You cannot bind multiple IPv6 VRIDs to an interface. To verify the virtual MAC6 configuration, you should display and examine the virtual MAC6s and the interfaces bound to the virtual MAC6s.

**To add a virtual MAC6 by using the command line interface** At the command prompt, type:

- `add vrID6 <id>`
- `bind vrID6 <id> -ifnum <interface_name>`
- `show vrID6`

Example

```
1 > add vrID6 100
2 Done
3 > bind vrID6 100 -ifnum 1/1 1/2 1/3
4 Done
```

**To unbind interfaces from a virtual MAC6 by using the command line interface** At the command prompt, type:

- `unbind vrID6 <id> -ifnum <interface_name>`
- `show vrID6`

**To configure a virtual MAC6 by using the GUI** Navigate to **System > Network > VMAC** and, on the **VMAC6** tab, add a new virtual MAC6, or edit an existing virtual MAC6.

## Removing a virtual MAC6

To remove an IPv4 virtual MAC, you delete its virtual router ID.

**To remove a virtual MAC6 by using the command line interface** At the command prompt, type:

```
rm vrid6 <id>
```

Example

```
1 rm vrid6 100s
```


**To remove a virtual MAC6 by using the GUI** Navigate to **System > Network > VMAC** and, on the **VMAC6** tab, delete the virtual router ID.

## Configuring high availability nodes in different subnets

October 1, 2024

The following figure shows an HA deployment with the two systems in different subnets:

Figure 1. High Availability over a Routed Network

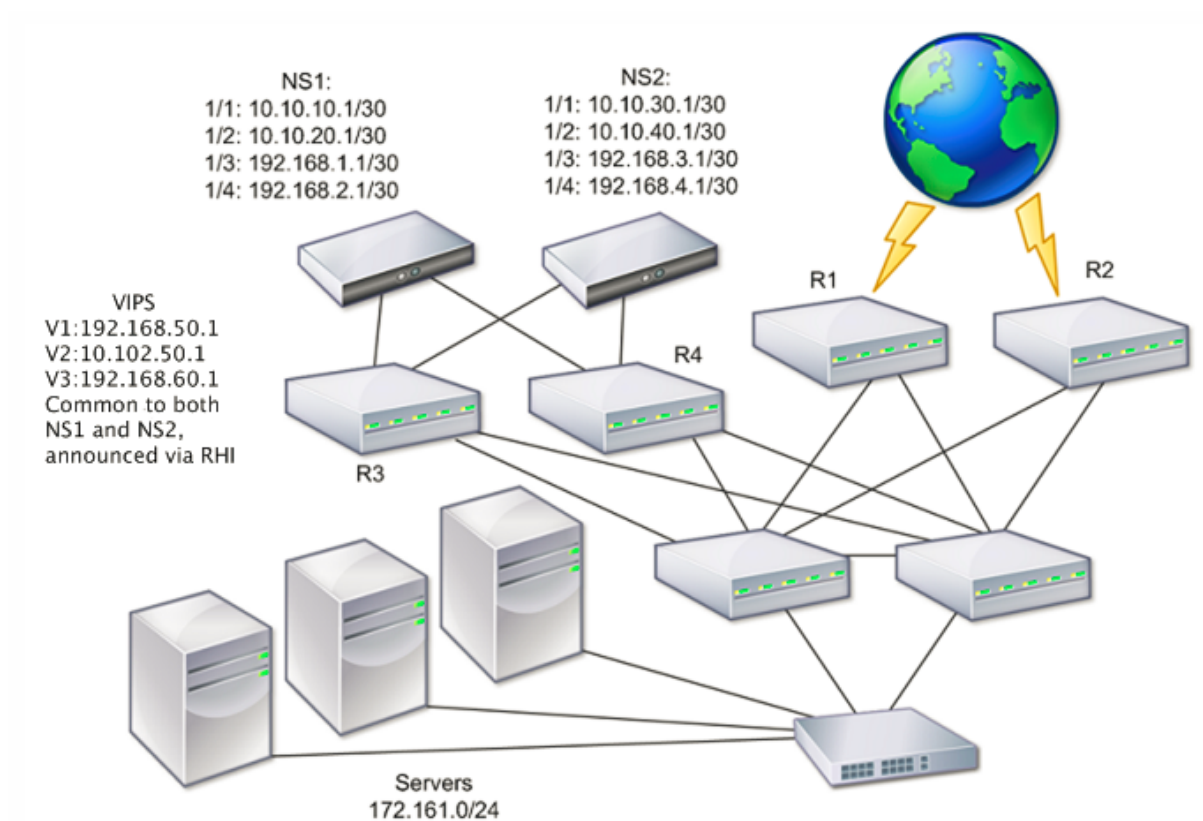

In the figure, the systems NS1 and NS2 are connected to two separate routers, R3 and R4, on two different subnets. The NetScaler appliances exchange heartbeat packets through the routers. This configuration can be expanded to accommodate deployments involving any number of interfaces.

**Note:**

- If you use static routing on your network, add static routes between all the systems to ensure that heartbeat packets are sent and received successfully.
- If you use dynamic routing on your systems, static routes are unnecessary.

If the nodes in an HA pair are on two separate networks, the primary and secondary node must have independent network configurations. That is, nodes on different networks cannot share entities such as SNIP address, VLANs, and routes.

The configuration, where the nodes in an HA pair have different configurable parameters, is known as Independent Network Configuration (INC) or Symmetric Network Configuration (SNC).

The following table summarizes the configurable entities and options for an INC, and shows how they must be set on each node.

---

| NetScaler entities         | Options                                                                                                                           |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| IPs (NSIP/SNIPs)           | Node-specific. Active only on that node.                                                                                          |
| VIPs                       | Floating.                                                                                                                         |
| VLANs                      | Node-specific. Active only on that node.                                                                                          |
| Routes                     | Node-specific. Active only on that node. Link load balancing routes are floating.                                                 |
| ACLs                       | Floating (Common). Active on both nodes.                                                                                          |
| Dynamic routing            | Node-specific. Active only on that node. The secondary node must run the routing protocols and peer with upstream routers.        |
| L2 mode                    | Floating (Common). Active on both nodes.                                                                                          |
| L3 mode                    | Floating (Common). Active on both nodes.                                                                                          |
| Reverse NAT (RNAT)         | RNAT configuration with the NAT IP address set to a virtual server IP address (VIP) because the VIP address is floating (common). |
| Policy Based Routing (PBR) | In an HA -INC mode, it is node-specific. In an HA non-INC mode, it is propagated to the secondary node.                           |

---

As in configuring HA nodes in the same subnet, to configure HA nodes in different subnets, you log on to each of the two NetScaler appliances and add a remote node representing the other appliance.

### **Adding a Remote Node**

When two nodes of an HA pair reside on different subnets, each node must have a different network configuration. Therefore, to configure two independent systems to function as an HA pair, you must specify INC mode during the configuration process.

When you add an HA node, you must disable the HA monitor for each interface that is not connected or not being used for traffic.

For more information, see [To disable an HA monitor by using the CLI](#).

### **To add a node by using the CLI**

At the command prompt, type:

- `add ha node <id> <IPAddress> -inc ENABLED`

- `show ha node`

#### Example

```
1 > add ha node 3 10.102.29.170 -inc ENABLED
2 Done
3 > add ha node 3 1000:0000:0000:0000:0005:0600:700a:888b
4 Done
```

### To disable an HA monitor by using the CLI

At the command prompt, type:

- `set interface <ifNum> [-haMonitor ( **ON** | **OFF** )]`
- `show interface <ifNum>`

#### Example

```
1 > set interface 1/3 -haMonitor OFF
2 Done
```

### To add a remote node by using the GUI

1. Navigate to **System > High Availability** and, on the **Nodes** tab, add a new remote node.
2. Make sure to select the Turn off HA monitor on interfaces/channels that are down and Turn on INC (Independent Network Configuration) mode on self mode options.

### Removing a Node

If you remove a node, the nodes are no longer in high availability configuration.

### To remove a node by using the CLI

At the command prompt, type:

```
rm ha node <id>
```

#### Example

```
1 > rm ha node 2
2 Done
```



## To remove a node by using the GUI

Navigate to **System > High Availability** and on the **Nodes** tab, delete the node.

**Note:**

You can use the Network Visualizer to view the NetScaler appliances that are configured as a high availability (HA) pair and do high availability configuration tasks.

## Configuring route monitors

September 12, 2023

You can use route monitors to make the HA state dependent on the internal routing table, whether the table contains any dynamically learned or static routes. In an HA configuration, a route monitor on each node watches the internal routing table to make sure that a route entry for reaching a particular network is always present. If the route entry is not present, the state of the route monitor changes to DOWN.

When a NetScaler appliance has only static routes for reaching a network, and you want to create a route monitor for the network, you must enable monitored static routes (MSR) for the static routes. MSR removes unreachable static routes from the internal routing table. If MSR is disabled on static routes, an unreachable static route can remain in the internal routing table, defeating the purpose of having the route monitor.

Route Monitors are supported both in non-INC and INC mode.

---

### Route Monitors in HA in non-INC mode

Route monitors are propagated by nodes and exchanged during synchronization.

Route monitors are active only in the current primary node.

The NetScaler appliance always displays the state of a route monitor as UP irrespective of whether the route entry is present or not in the internal routing table.

---

### Route Monitors in HA in INC mode

Route monitors are neither propagated by nodes nor exchanged during synchronization.

Route monitors are active on both the primary and the secondary node.

The NetScaler appliance displays the state of the route monitor as DOWN if the corresponding route entry is not present in the internal routing table.

Route Monitors in HA in non-INC mode

Route Monitors in HA in INC mode

---

A route monitor starts monitoring its route after 180 seconds in the following cases [This is done to allow dynamic routes to get learned, which might take 180 secs]: reboot, failover, set route6 command for v6 routes, set route msr enable/disable command for v4 routes, adding a new route monitor.


---

Route monitors are useful in a non-INC mode HA configuration where you want the non-reachability of a gateway from a primary node to be one of the conditions for HA failover.

Consider an example of a non-INC mode HA setup in a two-arm topology that has NetScaler appliances NS1 and NS2 in the same subnet, with router R1 and switches SW1, SW2, and SW3.

Because R1 is the only router in this setup, you want the HA setup to failover whenever R1 is not reachable from the current primary node. You can configure a route monitor (say, RM1 and RM2, respectively) on each of the nodes to monitor the reachability of R1 from that node.

Figure 1.

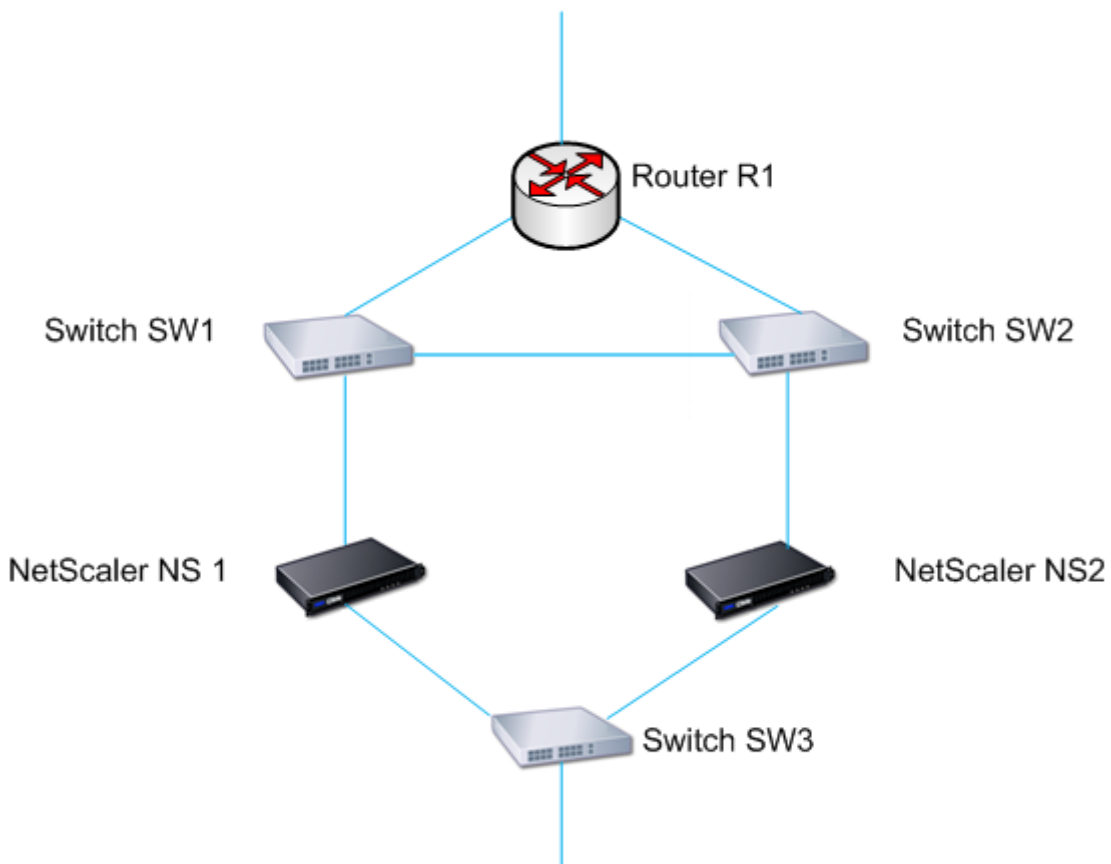

With NS1 as the current primary node, the execution flow is as follows:

1. Route monitor RM1 on NS1 monitors NS1's internal routing table for the presence of a route entry for router R1. NS1 and NS2 exchange heartbeat messages through switch SW1 or SW3 at regular intervals.
2. If switch SW1 goes down, the routing protocol on NS1 detects that R1 is not reachable and therefore removes the route entry for R1 from the internal routing table. NS1 and NS2 exchanges heartbeat messages through switch SW3 at regular intervals.
3. Detecting that the route entry for R1 is not present in the internal routing table, RM1 initiates a failover. If the route to R1 is down from both NS1 and NS2, failover happens every 180 seconds until one of the appliances is able to reach R1 and restore the connectivity.

### **Adding a route monitor to a high availability node**

A single procedure creates a route monitor and binds it to an HA node.

Note:

If you have configured admin partitions, make sure that you add route monitors from the default partition.

#### **To add a route monitor by using the command line interface**

At the command prompt, type:

- `bind HA node <id> (-routeMonitor <ip_addr|ipv6_addr> [<netmask>])`
- `show HA node`

Example

```
1 > bind HA node 0 -routeMonitor 10.102.71.0 255.255.255.0
2 Done
3 > bind HA node 0 -routeMonitor 1000:0000:0000:0000:0005:0600:700a:888b
4 Done
```

#### **To add a route monitor by using the GUI**

Navigate to **System > High Availability** and, on the **Route Monitors** tab, click **Configure**.

## Removing route monitors

### To remove a route monitor by using the command line interface

At the command prompt, type:

- `unbind HA node <id> (-routeMonitor <ip_addr|ipv6_addr> [<netmask>])`
- `show ha node`

Example

```
1 unbind HA node 3 -routeMonitor 10.102.71.0 255.255.255.0
2 unbind HA node 3 -routeMonitor 1000:0000:0000:0000:0005:0600:700a:888b
```

### To remove a route monitor by using the GUI

Navigate to **System > High Availability** and, on the **Route Monitors** tab, delete the route monitor.

## Limiting failovers caused by route monitors in non-INC mode

May 2, 2023

In an HA configuration in non-INC mode, if route monitors fail on both nodes, failover happens every 180 seconds until one of the nodes is able to reach all of the routes monitored by the respective route monitors.

However, for a node, you can limit the number of failovers for a given interval by setting the Maximum Number of Flips and Maximum Flip Time parameters on the nodes. When either limit is reached, no more failovers occur, and the node is assigned as primary (but node state as NOT UP) even if any route monitor fails on that node. This combination of HA state as Primary and Node state as NOT UP is called Stick Primary state.

If the node is then able to reach all of the monitored routes, the next monitor failure triggers resetting of the Maximum Number of Flips and Maximum Flip Time parameters on the node and starting the time specified in the Maximum Flip Time parameter.

These parameters are set independently on each node and therefore are neither propagated nor synchronized.

Parameters for limiting the number of failovers

- **Maximum Number of Flips (maxFlips)**

Maximum number of failovers allowed, within the Maximum Flip Time interval, for the node in HA in non INC mode, if the failovers are caused by route-monitor failure.

- **Maximum Flip Time ( maxFlipTime )**

Amount of time, in seconds, during which failovers resulting from route-monitor failure are allowed for the node in HA in non INC mode.

To limit the number of failovers by using the command line interface

At the command prompt, type:

- `set HA node [-maxFlips < positive_integer>] [-maxFlipTime < positive_integer>]`
- `show HA node [< id>]`

To limit the number of failovers by using the GUI

1. Navigate to **System > High Availability** and, on the **Nodes** tab, open the local node.
2. Set the following parameters:

- Maximum Number of Flips
- Maximum Flip Time

```
1 > set ha node -maxFlips 30 -maxFlipTime 60
2 Done
3 > sh ha node
4 1) Node ID: 0
5 IP: 10.102.169.82 (NS)
6 Node State: UP
7 Master State: Primary
8 Fail-Safe Mode: OFF
9 INC State: DISABLED
10 Sync State: ENABLED
11 Propagation: ENABLED
12 Enabled Interfaces : 1/1
13 Disabled Interfaces : None
14 HA MON ON Interfaces : 1/1
15 Interfaces on which heartbeats are not seen :None
16 Interfaces causing Partial Failure:None
17 SSL Card Status: NOT PRESENT
18 Hello Interval: 200 msec
19 Dead Interval: 3 secs
20 Node in this Master State for: 0:4:24:1 (days:hrs:min:sec)
21
22 2) Node ID: 1
23 IP: 10.102.169.81
24 Node State: UP
25 Master State: Secondary
26 Fail-Safe Mode: OFF
```

```

27 INC State: DISABLED
28 Sync State: SUCCESS
29 Propagation: ENABLED
30 Enabled Interfaces : 1/1
31 Disabled Interfaces : None
32 HA MON ON Interfaces : 1/1
33 Interfaces on which heartbeats are not seen : None
34 Interfaces causing Partial Failure: None
35 SSL Card Status: NOT PRESENT
36
37 Local node information:
38 Configured/Completed Flips: 30/0
39 Configured Flip Time: 60
40 Critical Interfaces: 1/1
41
42 Done

```

## SNMP Alarm for Sticky Primary State

Enable HA-STICKY-PRIMARY SNMP alarm in a node of a high availability set up if you want to be alerted of the node becoming sticky primary. When the node becomes sticky primary, it alerts by generating a trap message (stickyPrimary (1.3.6.1.4.1.5951.1.1.0.138)) and sends it to all the configured SNMP trap destinations. For more information about configuring SNMP alarms and trap destinations, see [onfiguring the NetScaler to Generate SNMPv1 and SNMPv2 Traps](#).

## Frequently Asked Questions

Consider an example of a high availability setup of two NetScaler appliances NS-1 and NS-2 in non-INC mode. Maximum numbers of flips and maximum flip time in both the nodes have been set with the same values.

The following table lists the settings used in this example:

| Entity                  | Detail         |
|-------------------------|----------------|
| IP address of NS-1      | 10.102.173.211 |
| IP address of NS-2      | 10.102.173.212 |
| Maximum number of flips | 2              |
| Maximum flip time       | 200            |

For information about the [maximum number of flips and maximum flip time settings](#), refer to the pdf.

## Configuring failover interface set

May 2, 2023

A Failover Interface Set (FIS) is a logical group of interfaces. In an HA configuration, using a FIS is a way to prevent failover by grouping interfaces so that, when one interface fails, other functioning interfaces are still available. A FIS can also be configured for the nodes of a NetScaler cluster.

HA MON interfaces that are not bound to an FIS are known as critical interfaces (CI) because if any of them fails, failover is triggered.

**Note:**

An FIS does not create an active and standby configuration. It also does not prevent bridging loops when connecting to links to the same VLAN.

### Creating or Modifying an FIS

#### To add an FIS and bind interfaces to it by using the command line interface

At the command prompt, type:

- `add fis <name>`
- `bind fis \<name\> \<ifnum\> ...`
- `show fis \<name\>`

Example

```
1 > add fis fis1
2 Done
3 > bind fis fis1 1/3 1/5
4 Done
```

An unbound interface becomes a critical interface (CI) if it is enabled and HA MON is on.

#### To unbind an interface from an FIS by using the command line interface

At the command prompt, type:

- `unbind fis \<name\> \<ifnum\> ...`
- `show fis \<name\>`

Example

```
1 > unbind fis fis1 1/3
2 Done
```

### To configure an FIS by using the GUI

Navigate to System > High Availability and, on the Failover Interface Set tab, add a new FIS, or edit an existing FIS.

### Removing an FIS

When the FIS is removed, its interfaces are marked as critical interfaces.

### To remove an FIS by using the command line interface

At the command prompt, type:

```
rm fis <name>
```

Example

```
1 > rm fis fis1
2 Done
```

### To remove an FIS by using the GUI

Navigate to **System > High Availability** and, on the **Failover Interface Set** tab, delete the FIS.

## Understanding the causes of failover

August 18, 2021

The following events can cause failover in an high availability configuration:

1. If the secondary node does not receive a heartbeat packet from the primary for a period of time that exceeds the dead interval set on the secondary. (See Note 1.)
2. The primary node experiences a hardware failure of its SSL card.
3. The primary node does not receive any heartbeat packets on its network interfaces for three seconds.



4. On the primary node, a network interface that is not part of a Failover Interface Set (FIS) or a Link Aggregation (LA) channel and has the HA Monitor (HAMON) enabled, fails. (See Note 2.)
5. On the primary node, all interfaces in an FIS fail. (See Note 2.)
6. On the primary node, an LA channel with HAMON enabled fails. (See Note 2.)
7. On the primary node, all interfaces fail (see Note 2). In this case, failover occurs regardless of the HAMON configuration.
8. On the primary node, all interfaces are manually disabled. In this case, failover occurs regardless of the HAMON configuration.
9. You force a failover by issuing the force failover command on either node.
10. A route monitor that is bound to the primary node goes DOWN.

**Note 1:**

For more information about setting the dead interval, see [Configuring the Communication Intervals](#). Possible causes for a node not receiving heartbeat packets from a peer node include:

- A network configuration problem prevents heartbeats from traversing the network between the HA nodes.
- The peer node experiences a hardware or software failure that causes it to freeze (hang), reboot, or otherwise stop processing and forwarding heartbeat packets.

**Note 2:**

In this case, fail means that the interface was enabled but goes to the DOWN state, as can be seen from the show interface command or from the GUI. Possible causes for an enabled interface to be in the DOWN state are LINK DOWN and TXSTALL.

## Forcing a node to fail over

May 2, 2023

You might want to force a failover if, for example, you need to replace or upgrade the primary node. You can force failover from either the primary or the secondary node. A forced failover is not propagated or synchronized. To view the synchronization status after a forced failover, you can view the status of the node.

A forced failover fails in any of the following circumstances:

- You force failover on a standalone system.
- The secondary node is disabled.
- The secondary node is configured to remain secondary.

The NetScaler appliance displays a warning message if it detects a potential issue when you run the force failover command. The message includes the information that triggered the warning, and requests confirmation before proceeding.

You can force a failover on a primary node, secondary node, and when nodes are in listen mode.

- **Forcing Failover on the Primary Node.**

If you force failover on the primary node, the primary becomes the secondary and the secondary becomes the primary. Forced failover is possible only when the primary node can determine that the secondary node is UP.

If the secondary node is DOWN, the force failover command returns the following error message: “Operation not possible due to invalid peer state. Rectify and retry.”

If the secondary system is in the claiming state or inactive, it returns the following error message:

```
Operation not possible now. Please wait for the system to stabilize before retrying.
```

- **Forcing Failover on the Secondary Node.**

If you run the force failover command from the secondary node, the secondary node becomes primary and the primary node becomes secondary. A force failover can occur only if the secondary node’s health is good and it is not configured to stay secondary.

If the secondary node cannot become the primary node, or if the secondary node was configured to stay secondary (using the STAYSECONDARY option), the node displays the following error message:

```
Operation not possible as my state is invalid. View the node for more information.
```

- **Forcing Failover When Nodes Are in Listen Mode.**

When the two nodes of an HA pair are running different versions of the system software, the node running the higher version switches to the listen mode. In this mode, neither command propagation nor synchronization works.

Before upgrading the system software on both nodes, test the new version on one of the nodes. To do this, you must force a failover on the system that has already been upgraded. The upgraded system then takes over as the primary node, but neither command propagation or synchronization occurs. Also, all connections must be re-established.

**Important!**

If you force a failover when an HA synchronization operation is in progress, some active data sessions on the HA setup might be lost. So, wait for the HA synchronization operation to be com-

pleted before performing the force failover operation.

### **To force failover on a node by using the command line interface:**

At the command prompt, type:

```
force HA failover
```

### **To force failover on a node by using the GUI:**

Navigate to **System > High Availability** and, on the **Nodes** tab, select the node, in the Action list, select **Force Failover**.

## **Forcing the secondary node to stay secondary**

October 14, 2020

In an HA setup, the secondary node can be forced to stay secondary regardless of the state of the primary node.

For example, suppose the primary node needs to be upgraded and the process will take a few seconds. During the upgrade, the primary node may go down for a few seconds, but you do not want the secondary node to take over; you want it to remain the secondary node even if it detects a failure in the primary node.

When you force the secondary node to stay secondary, it will remain secondary even if the primary node goes down. Also, when you force the status of a node in an HA pair to stay secondary, it does not participate in HA state machine transitions. The status of the node is displayed as STAYSECONDARY.

Forcing the node to stay secondary works on both standalone and secondary nodes. On a standalone node, you must use this option before you can add a node to create an HA pair. When you add the new node, the existing node stops processing traffic and becomes the secondary node. The new node becomes the primary node.

#### **Note:**

When you force a system to remain secondary, the forcing process is not propagated or synchronized. It affects only the node on which you run the command.

### **To force the secondary node to stay secondary by using the command line interface**

At the command prompt, type:

```
set ha node -hastatus STAYSECONDARY
```

## To force the secondary node to stay secondary by using the GUI

Navigate to **System > High Availability**, on the **Nodes** tab, open the local node, and select **STAY SECONDARY**.

## Forcing the primary node to stay primary

May 18, 2021

In an HA setup, you can force a healthy primary node to remain primary even after a failover. You can enable this option either on a primary node in an HA pair. This option allows the primary node to be in primary state as long as it is healthy.

On a standalone node, you must use this option before you can add a node to create an HA pair. When you add the new node, the existing node continues to function as the primary node, and the new node becomes the secondary node.

## To force the primary node to stay primary by using the command line interface

At the command prompt, type:

```
set ha node -hastatus STAYPRIMARY
```

## To force the primary node to stay primary by using the GUI

Navigate to **System > High Availability**, on the **Nodes** tab, open the local node, and select **STAY PRIMARY**.

## High Availability FAQs

November 8, 2023

1. What are the various ports used to exchange the HA-related information between the nodes in an HA configuration?

In an HA configuration, both nodes use the following ports to exchange HA-related information:

- UDP Port 3003, to exchange heartbeat packets.
- TCP Port 3008 or 3010, for synchronization and command propagation.

2. What are the conditions that trigger synchronization?

Synchronization is triggered by any of the following conditions:

- The incarnation number of the primary node, received by the secondary, does not match that of the secondary node.

Note: Both nodes in an HA configuration maintain a counter called *incarnation number*, which counts the number of configurations in the node's configuration file. Each node sends its incarnation number to each other node in the heartbeat messages. The incarnation number isn't incremented for the following commands:

- a) All HA configuration related commands. For example, add ha node, set ha node, and bind ha node.
- b) All Interface related commands. For example, set interface and unset interface.
- c) All channel-related commands. For example, add channel, set channel, and bind channel.

- The secondary node comes up after a restart.
- The primary node becomes secondary after a failover.

3. What configurations aren't synced or propagated in an HA configuration in INC or non-INC mode?

The following commands are neither propagated nor synced to the secondary node:

- All node specific HA configuration commands. For example, add ha node, set ha node, and bind ha node.
- All Interface related configuration commands. For example, set interface and unset interface.
- All channel related configuration commands. For example, add channel, set channel, and bind channel.

**Note:**

The following configurations are neither synced nor propagated only in HA in INC mode. Each node has its own:

- SNIPs
- VLANs
- Routes (except LLB routes)
- Route monitors
- RNAT rules (except any RNAT rule with VIP as the NAT IP)
- Dynamic routing configurations
- Net profiles

4. Does a configuration added to the secondary node get synchronized on the primary?

No, a configuration added to the secondary node isn't synchronized to the primary.

5. What can be the reason for both nodes claiming to be the primary in an HA configuration?

The most likely reason is that the primary and secondary nodes are both healthy but the secondary does not receive the heartbeat packets from the primary. The problem can be with the network between the nodes.

6. Does an HA configuration run into any issues if you deploy the two nodes with different system clock settings?

Different system-clock settings on the two nodes can cause the following issues:

- The time stamps in the log file entries do not match. This situation makes it difficult to analyze the log entries for any issues.
- After a failover, you might have problems with any type of cookie-based persistence for load balancing. A significant difference between the times can cause a cookie to expire sooner than expected, resulting in termination of the persistence session.
- Similar considerations apply to any time-related decisions on the nodes.

7. What are the conditions for failure of the *force HA sync* command?

Forced synchronization fails in any of the following circumstances:

- You force synchronization when synchronization is already in progress.
- You force synchronization on a standalone NetScaler appliance.
- The secondary node is disabled.
- HA synchronization is disabled on the current secondary node.
- HA propagation is disabled on the current primary node and you force synchronization from the primary.

8. What are the conditions for failure of the *sync HA files* command?

Synchronizing configuration files fail in either of the following circumstances:

- On a standalone system.
- With the secondary node disabled.

9. In an HA configuration, if the secondary node takes over as the primary, does it switch back to secondary status if the original primary comes back online?

No. After the secondary node takes over as the primary, it remains as primary even if the original primary node comes back online again. To interchange the primary and secondary status of the nodes, run the *force failover* command.

10. What are the conditions for failure of the *force failover* command?

A forced failover fails in any of the following circumstances:

- You force failover on a standalone system.
- The secondary node is disabled.
- The secondary node is configured to remain secondary.
- The primary node is configured to remain primary.
- The state of the peer node is unknown.

## Troubleshooting high availability issues

May 2, 2023

The most common high availability issues involve the high availability feature not working at all, or working only intermittently. Following are common high availability issues, and probable causes and resolutions.

- **Issue**

The inability of the NetScaler appliances to pair the NetScaler appliances in a high availability setup.

- **Cause**

- Network connectivity

- Resolution**

- Verify that both the appliances are connected to the switch and the interfaces are enabled.

- **Cause**

- Mismatch in the Password for the default Administrator account

- Resolution**

- Verify that the password on both the appliances is the same.

- **Cause**

- IP conflict

- Resolution**

- Verify that both the appliances have unique NetScaler IP (NSIP) address. The appliances should not have the same NSIP address.

- **Cause**

- Node ID mismatch

- Resolution**

- Verify that the Node ID Configuration on both the appliances is unique. The appliances should not have the same Node ID configuration. Additionally, you must assign value for a Node ID between 1 and 64.

- **Cause**

Mismatch in the password of the RPC node

- Resolution**

- Verify that both the nodes have the same RPC node password.

- **Cause**

An administrator has disabled the remote node

- Resolution**

- Enable the remote node.

- **Cause**

The Firewall application has blocked the heartbeat packets

- Resolution**

Verify that the UDP port 3003 is allowed.

- **Issue**

Both the appliances claim to be the primary appliance.

- **Cause**

- Missing heartbeat packets between the appliances

- Resolution**

- Verify that the UDP port 3003 is not blocked for communication between the appliances.

- **Issue**

The NetScaler appliance is not able to synchronize the configuration.

- **Cause**

- A Firewall application is blocking the required port.

- Resolution**

- Verify that the UDP port 3010 (or UDP port 3008 with secure synchronization) is not blocked for communication between the appliances.

- **Cause**

- An administrator has disabled synchronization.

- Resolution**

- Enable synchronization on the appliance that has the issue.

- **Cause**

- Different NetScaler releases or builds are installed on appliances.

- Resolution**

- Upgrade the appliances to the same NetScaler release or build.



- **Issue**

Command propagation fails between the appliances.

- **Cause**

- A Firewall application is blocking the port.

- Resolution**

- Verify that the UDP port 3011 (or UDP port 3009 with secure propagation) is not blocked for communication between the appliances.

- **Cause**

- An administrator has disabled command propagation.

- Resolution**

- Enable command propagation on the appliance that has the issue.

- **Cause**

- Different NetScaler releases or builds are installed on appliances.

- Resolution**

- Upgrade the appliances to the same NetScaler release or build.

- **Issue**

The NetScaler appliances in the high availability pair are unable to run the force failover process.

- **Cause**

- The Secondary node is disabled.

- Resolution**

- Enable the secondary node.

- **Cause**

- The Secondary node is configured to stay secondary.

- Resolution**

- Set the secondary high availability status of the secondary node to Enable from Stay Secondary.

- **Issue**

The secondary appliance does not receive any traffic after the failover process.

- **Cause**

- The upstream router does not understand GARP messages of NetScaler appliance.

- Resolution**

- Configure virtual MAC address on the secondary appliance.

## Managing high availability heartbeat messages on a NetScaler appliance

May 2, 2023

The two nodes in a high availability configuration send and receive heartbeat messages to and from each other on all interfaces that are enabled. The heartbeat messages flow regardless of the HA MON setting on these interfaces. If NSVLAN or both (NSVLAN and SYNC) are configured on an appliance, the heartbeat messages flow only through the enabled interfaces that are part of the NSVLAN and SYNCVLAN.

If a node does not receive the heartbeat messages on an enabled interface, it sends critical alerts to the specified SNMP managers. These critical alerts give false alarms and draw unnecessary attention from the administrators for interfaces that are not configured as part of the connections to the peer node.

To resolve this issue, the HAHeartBeat option for interfaces and channels is used for enabling or disabling HA heartbeat-message flow on them.

To manage the high availability heartbeat messages on an interface by using the command line interface

At the command prompt, type:

- `set interface <ID> [-HAHeartBeat ( ON | OFF )]`
- `show interface <ID>`

To manage the high availability heartbeat messages on a channel by using the command line interface

At the command prompt, type:

- `set channel <ID> [-HAHeartBeat ( ON | OFF )]`
- `show channel <ID>`

To manage the high availability heartbeat messages for an interface by using the GUI

1. Navigate to **System > Network > Interfaces**.
2. Enable or disable the **HA Heart Beat** parameter.

To manage the high availability heartbeat messages on a channel by using the GUI

1. Navigate to **System > Network > Channels**.
2. Enable or disable the **HA Heart Beat** parameter.

## Remove and Replace a NetScaler in a High Availability Setup

May 2, 2023

This topic helps you to address RMA replacements. Also, this topic has instructions on how to backup configurations, upgrade or downgrade shipped software version, and setup of RPC password on ADC.

### Points to Consider

The following configurations are not synchronized or propagated in a high availability configuration in INC (Independent Network Configuration) or non-INC mode:

- All node specific HA configuration commands. For example, add ha node, set ha node, and bind ha node.
- All Interface related configuration commands. For example, set interface and unset interface.
- All channel related configuration commands. For example, add channel, set channel, and bind channel.
- All Interface HA Monitoring configuration commands.

The following configurations are not synced nor propagated in an HA configuration in INC mode (Independent Network Configuration):

- SNIPs
- VLANs
- Routes (except LLB routes)
- Route monitors
- RNAT rules (except any RNAT rule with VIP as the NAT IP)
- Dynamic routing configurations

### Instructions

Complete the following steps to replace a NetScaler in high availability setup:

- Remove an Active NetScaler secondary node
- Configure Replacement secondary node
- Verify and Update the Software Build on Replacement ADC
- Set Password on New secondary to Match primary
- Add Licenses to Replacement ADC
- Creating HA Pair between primary and New secondary node

## Remove an Active Secondary Node

1. Log on to both ADCs and run the following command to confirm which node is primary and which node is secondary:

```
1 show ha node
```

2. Log on to the primary ADC, backup the configurations on the primary node, and copy the files off of the ADC prior to the changes. These files are located under “/var/ns\_sys\_backup/” directory.

The steps are as follows:

- a) Save the ADC running configurations to memory:

```
1 save ns config
```

- b) Create the full backup file package:

```
1 create system backup -level full
```

- c) Create the basic backup file package:

```
1 create system backup -level basic
```

3. After all backup files have been generated, be sure to copy them off of the device before proceeding.

From a windows terminal, open a Command Prompt and copy the backup files off of the ADC and onto your local hard drive. This can be done using the following command:

```
1 pscp <username>@<NSIP>:<Target file source> <Target file destination>
```

Example:

```
1 pscp nsroot@10.125.245.78:/var/ns_sys_backup/backup_basic_10
.125.245.78_2016_09_14_15_08.tgz c:\nsbackup\backup_basic_10
.125.245.78_2016_09_14_15_08.tgz
```

When prompted, enter the password for the specified administrator account, then hit Enter. Repeat these steps until all backup bundles are copied to the local PC before proceeding.

4. SSH into the secondary ADC, and set the unit to the “STAYSECONDARY” status. This will force the unit to not attempt to assume the primary role in the event of a detected failure during the swap. Confirm that you are connected to the secondary ADC before executing this step

```
1 set ha node - haStatus <state>
2 set ha node - haStatus STAYSECONDARY
```

5. Once the secondary ADC's **Node State** successfully displays STAYSECONDARY, switch to the primary ADC and delete the secondary node and run the following command:

```
1 save ns config
```

While logged into the primary ADC, run the following commands

- a) Run the following command to identify which numerical value represents the secondary HA node:

```
1 show ha node
```

- b) Run the following command to remove the secondary ADC from the primary HA pair;

```
1 rm ha node <node ID>
```

- c) Run the following command to save the configuration:

```
1 save ns config
```

- d) With the secondary ADC now removed, shutdown, disconnect, and remove the secondary ADC from the network.

**Note.** Be sure to label all connections before disconnecting.

### Configure Replacement Secondary Node

1. With the replacement ADC in place, power up the new device. DO NOT CONNECT the network connections at this point.
2. With boot-up complete, use the console port to connect to the ADC and configure the NSIP that you will use to connect to the unit.
3. When prompted, select **4**.

**Note.** In this example, we are using a different NSIP for the replacement ADC. If you wish to use the original secondary unit's IP, You may change it on the replacement before binding the new ADC to the primary HA unit.

4. The ADC should now be booted. Now connect the network interface that will be used for Management traffic, and confirm that the IP address is reachable from your network.

### Verify and Update the Software Build on Replacement ADC

Before syncing the new unit to the primary ADC, we need to ensure that both ADCs are running the same build.

1. To verify the version on ADC run the following command:

```
1 show version
```

2. While on the new secondary ADC, create a subfolder in **/var** to be used for the upgrade.
3. Go to [NetScaler downloads](#) and download the appropriate package that matches the build version running on the primary ADC.
4. Download and extract the .tgz file:

```
1 tar -xvzf "file.tgz"
```

5. Copy the extracted files to the secondary ADC. On your windows terminal, open a “Command Prompt” and navigate to the directory containing the extracted .tgz build package and run the following pscp command:

```
1 pscp <Target file source> <username>@<NSIP>:<Target file destination>
```

Example:

```
1 C:\inetpub>pscp c:\inetpub\build-12.1-47.14_nc.tgz nsroot@10.20.245.80:/var/NS_upg_12.1_47.14/build-12.1-47.14_nc.tgz
```

6. After the file has been transferred, return to the secondary ADC and upgrade. For detailed instructions, see [Upgrading a Citrix ADX Standalone Appliance](#).
7. Once the new secondary has rebooted, SSH back into the unit and confirm that the upgrade is successful and the build matches that of the primary.

## Set Password on Replacement Secondary Node to Match Primary

**Note:** If at this point you want to change the management IP (NSIP) address of the new secondary ADC, you may do so before moving forward.

Change the password on the new secondary ADC to match the password that is currently on the primary ADC.

1. Make that the default administrator (nsroot) account password is the same as the primary ADC. This is accomplished using the following command while logged in through SSH into the new secondary unit:

```
1 set system user <user> <password>
```

This command set/resets the password for the specified user.

2. SSH into the primary and new secondary ADC and confirm that passwords match.

## Add Licenses to Replacement Secondary Node

With the new ADC updated and ready for pairing, download and install the appropriate licensing for the replacement node.

1. Navigate to <https://www.citrix.com> to request and download licenses for the new replacement unit.
2. Once you have all appropriate licenses downloaded, SSH into the new secondary ADC and type the following command to see the current state of licensing:

```
1 show license
```

3. From the Windows terminal command prompt you must now upload the license files to the new secondary ADC using the following command:

**Note.** If you have multiple licenses, repeat this step until all licenses are uploaded.

```
1 pscp <Target file source> <username>@<NSIP>:<Target file destination>
```

Example:

```
1 C:\inetpub>pscp c:\inetpub\NS-VPX-3K-LIC-020030ad0024.lic
 nsroot@10.125.245.80:/nsconfig/license/NS-VPX-3K-LIC-020030
 ad0024.lic
```

4. SSH into the new secondary ADC and perform a warm reboot using the following command:

```
1 reboot -w
```

After the unit is restarted, SSH into the unit and run show license command once again. At this point, the licenses should be applied.

## Set up High Availability between primary and New Secondary Node

At this point, we are now ready to join the NetScaler units into a high availability pair. For more information, see [Configuring high availability](#).

## Request retry

May 2, 2023

When a NetScaler appliance receives an HTTP request but has a connection failure with a back-end server, the appliance uses a retry directive. The request retry addresses connection failure scenarios

and enables the appliance to choose the next available service and forward the request. By doing a request retry, the client can save round trip time (RTT).

Request retry feature is applicable for the following connection failure scenarios:

- If a back-end server resets a TCP connection when an HTTP request is received. For more details, see [Request retry](#).
- If a back-end server resets a TCP connection during connection establishment. For more details, see [Request retry](#).
- If a response from a back-end server times out (based on the configured time-out value) when an appliance sends an HTTP request. For more details, see [Request retry](#).


## Request retry if back-end server resets TCP connection

December 29, 2023

When a back-end server resets a TCP connection, the request retry feature forwards the request to the next available server, instead of sending the reset to the client. By doing reload balancing, the client saves RTT when the appliance initiates the same request to next available service.

### How request retry works when back-end server resets a TCP connection

The following diagram shows how components interact with each other.

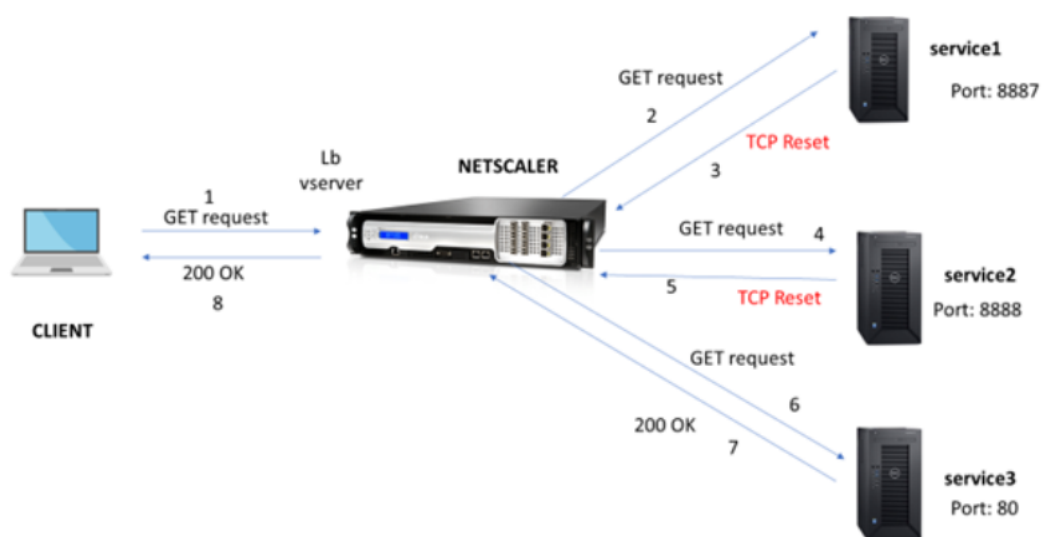



1. The process starts by enabling appqoe feature on your appliance.
2. When the client sends an HTTP or HTTPS request, the load balancing virtual server sends the request to the back-end server.
3. If the requested service is unavailable, the back-end server resets the TCP connection.
4. If the appqoe configuration has “retry” enabled with the desired number of retry attempts specified, the load balancing virtual server uses the configured load balancing algorithm to forward the request to the next available application server.
5. After the load balancing virtual server receives the response, the appliance forwards the response to the client.
6. If the available back-end servers is equal or lesser than the retry count and if all the servers send reset, the appliance would respond a 500 internal server error. Consider a scenario with five available servers and the retry count set as six. If all the five servers resets the connection, then the appliance returns a 500 internal server error to the client.
7. Similarly, if the number of back-end servers is more than the retry count and if the back-end servers resets the connection, the appliance forwards the reset to the client. Consider a scenario with three back-end servers and the retry count set as two. If the three servers resets the connection, then the appliance sends a reset response to the client.

### Configure request retry for GET method

For configuring retry feature for GET method, you must complete the following steps.

1. Enable AppQoE
2. Add AppQoE action
3. Add AppQoE policy
4. Bind AppQoE policy to load balancing virtual server

**Enable AppQoE** At the command prompt, type:

```
enable ns feature appqoe
```

**Add AppQoE action** You must configure an AppQoE action to specify if you want the appliance to retry after a TCP reset and the number of retry attempts.

```
add appqoe action reset_action -retryOnReset (YES | NO)-numretries
<positive_integer>]
```

**Example:**

```
add appqoe action reset_action -retryOnReset YES -numretries 5
```

Where,

retryOnReset. Enable retry if the back-end server resets a TCP connection.

numretries. Retry count.

**Add AppQoE policy** To implement AppQoE you must configure AppQoE policy to prioritize incoming HTTP or SSL request in a specific queue.

At the command prompt, type:

```
add appqoe policy <name> -rule <expression> -action <string>
```

**Example:**

```
add appqoe policy reset_policy -rule http.req.method.eq(get)-action
reset_action
```

**Bind appqoe policy to load balancing virtual server** When a back-end server resets a TCP packet request and if you want the load balancing virtual server to forward the request to the next available service, you must bind the load balancing virtual server to the AppQoE policy.

At the command prompt, type:

```
bind lb vserver <name> ((<serviceName> (-policyName <string> [-
priority <positive_integer>] [-gotoPriorityExpression <expression
>] [-type (REQUEST | RESPONSE)])
```

**Example:**

```
bind lb vserver v1 -policyName reset_policy -type REQUEST -priority 1
```

### Configure request retry for POST requests

You must always exercise caution when you reload balance requests that write data into the back-end server. For such requests, ensure the content length is short. If the content length is long, then it might result in resource consumption. Follow the steps given below to configure reload balancing for POST requests.

1. Enable AppQoE
2. Add AppQoE action
3. Add AppQoE policy
4. Bind appQoE policy to load balancing virtual server

**Enable AppQoE** At the command prompt, type:

```
enable ns feature appqoe
```

**Add Appqoe action** You must add an AppQoE action to retry after a TCP reset and number of retry attempts.

```
add appqoe action reset_action -retryOnReset (YES | NO)-numretries
<positive_integer>]
```

**Example:**

```
add appqoe action reset_action -retryOnReset YES -numretries 5
```

**Add Appqoe policy** To implement AppQoE you must configure AppQoE policy to define how to queue the connections in a specific queue.

At the command prompt, type:

```
add appqoe policy <name> -rule <expression> -action <string>
```

**Example:**

```
add appqoe policy reset_policy -rule HTTP.REQ.CONTENT_LENGTH.le(2000)
-action reset_action
```

**Note:**

You can use this configuration if you prefer to restrict the request retry feature for content length less than 2000.

**Bind load balancing virtual server to AppQoE policy** When a back-end server resets a TCP packet request and if you want the load balancing virtual server to forward the request to the next available service through a specific queue, you must bind the load balancing virtual server to the AppQoE policy.

At the command prompt, type:

```
bind lb vserver <name> ((<serviceName> (-policyName <string> [-
priority <positive_integer>] [-gotoPriorityExpression <expression
>] [-type (REQUEST | RESPONSE)])
```

**Example:**

```
bind lb vserver v1 -policyName reset_policy -type REQUEST -priority 1
```

### Configure AppQoE policy for request retry by using the NetScaler GUI

1. Navigate to **AppExpert > AppQoE > Policies**.
2. In the **AppQoE Policies** page, click **Add**.
3. In the **Create an AppQoE Policy** page, set the following parameters:
  - a. Name. AppQoE policy name
  - b. Action. Add or edit an action. To create an action, see section.
  - c. Expression. Select or enter `HTTP.REQ.CONTENT_LENGTH.le (2000)` policy expression.
4. Click **Create** and **Close**.

### Configure AppQoE action for request retry balancing by using the NetScaler GUI

1. Navigate to **AppExpert > AppQoE > Action**.
2. In the **AppQoE Actions** page, click **Add**.
3. In the **Create AppQoE Action** page, set the following parameters for retry on TCP reset:
  - a. Retry on TCP Reset. Select the check box to enable retry action for TCP reset.
  - b. Retry Count. Enter the retry count.
4. Click **Create** and **Close**.

### Configure request retry for GET method when back-end server resets on TCP SYN establishment

The CLI and GUI configuration is similar to steps followed for GET method. For more information, see [Configure request retry for GET method](#) section. when back-end server resets a connection section.


## Request retry if back-end server resets TCP connection during connection establishment

December 1, 2020

When a back-end server resets a TCP connection during connection establishment, the request retry feature forwards the request to the next available server, instead of sending the reset to the client. By doing reload balancing, the client saves RTT when the appliance initiates the same request to next available service.

## How request retry works when back-end server resets a TCP connection on SYN establishment

The following diagram show the components interact with each other:

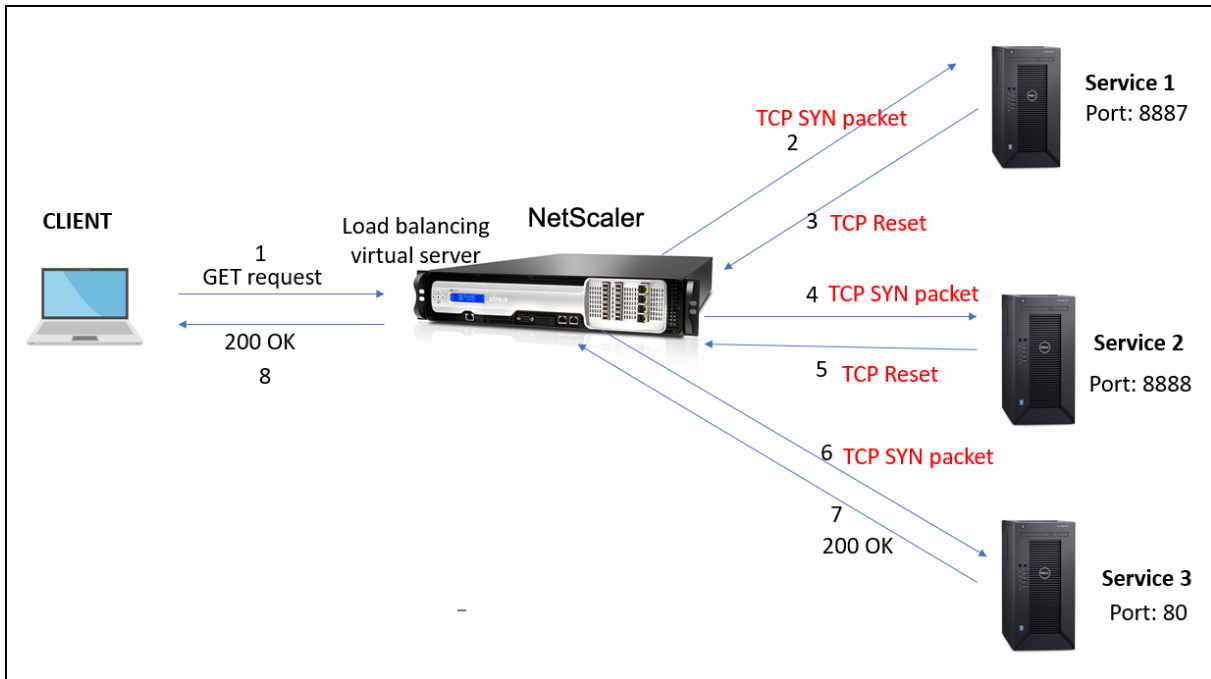

1. The process starts by enabling appqoe feature on your appliance.
2. When the client sends an HTTP or HTTPS request, the load balancing virtual server initiates connection to backend server.
3. If the requested service is unavailable on TCP SYN establishment, the back-end server resets the TCP connection.
4. If the appqoe configuration has “retry” enabled with the desired number of retry attempts specified, the load balancing virtual server uses the configured load balancing algorithm to forward the request to the next available application server.
5. After the load balancing virtual server receives the response, the appliance forwards the response to the client.
6. If the available back-end servers is equal or lesser than the retry count and if all the servers send reset, the appliance would respond a 500 internal server error. Consider a scenario with five available servers and the retry count set as six. If all the five servers resets the connection, then the appliance returns a 500 internal server error to the client.
7. Similarly, if the number of back-end servers is more than the retry count and if the back-end servers resets the connection on TCP SYN establishment, the appliance forwards the reset to the client. Consider a scenario with three back-end servers and the retry count set as two. If the three servers resets the connection, then the appliance sends a reset packet to the client.

## Configure request retry (GET and POST method) when back-end server resets on TCP SYN establishment

The CLI and GUI configuration is similar to steps followed for GET and POST method. For more information, see [Configure request retry for GET method](#) topic, [Configure request retry for POST method when back-end server resets a connection](#) section.


## Request retry if back-end server response times out

December 29, 2023

Request retry is available for one more scenario where, if a back-end server takes more time to respond to requests, the appliance performs re-load balancing upon timeout and forwards the request to the next available server.

### How request retry works when back-end server response times out

The following diagram show the components interact with each other:

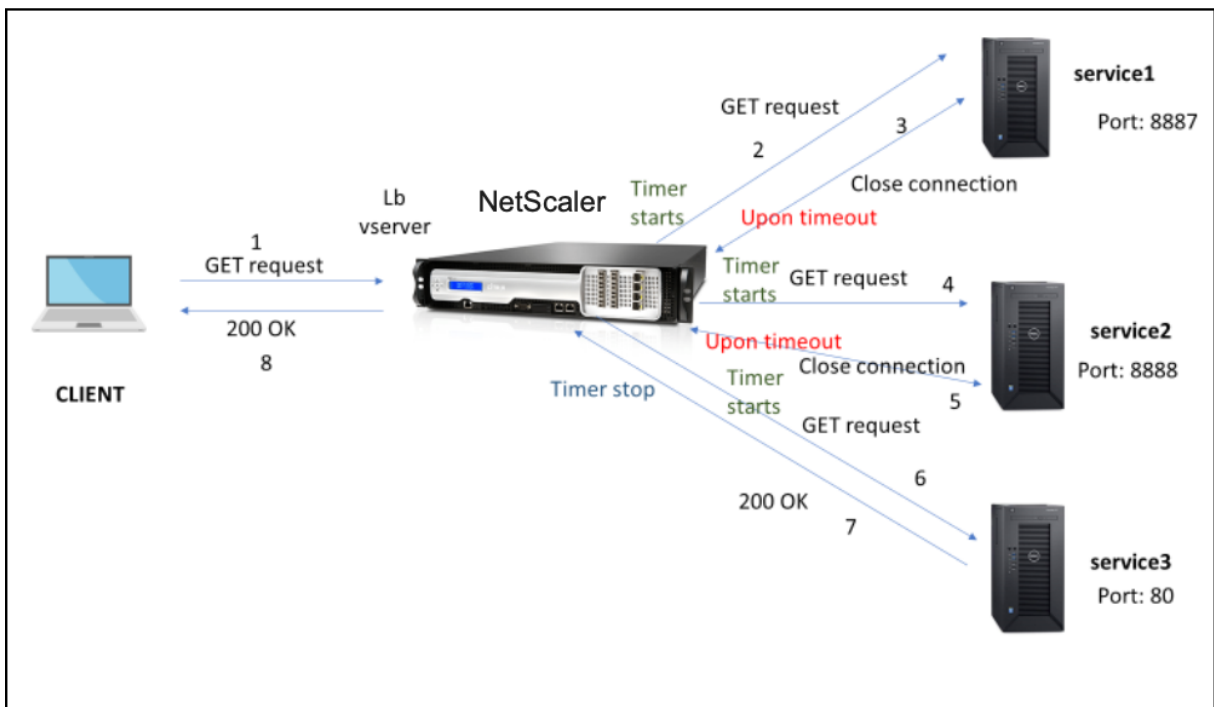

1. The process starts by enabling appqoe feature on your appliance.
2. The appqoe configuration has “retryOnTimeout” parameter in milliseconds.

3. When the appliance sends a request and if the server takes more time to respond, the appliance performs re-load balancing based on the configured timeout value. The appliance resets the connection, chooses another service and forwards the request instead of waiting for the server response.
4. After the load balancing virtual server receives the response, the appliance forwards the response to the client. The usage of a time out parameter prevents the appliance to keep waiting for server response leading to an increased RTT.
5. If the available back-end servers is equal or lesser than the retry count and if all the servers times out for the request , the appliance would respond a 500 internal server error. Consider a scenario with five available servers and the retry count set as six. If all the five servers times out for the request, then the appliance returns a 500 internal server error to the client.
6. Similarly if the number of backend servers is more than the retry count and if the back-end server times out upon a request, the appliance keeps waiting upon the last service until the server sends out a response or client idle connection times out. Consider a scenario with three back-end servers and the retry count set as two. If all the three servers times out upon the request, the appliance keeps waiting upon the third service until the server sends out a response or client idle connection times out.

### **Configure request retry (GET and POST method) when back-end server response times out**

For configuring request retry for GET method on timeout, you must complete the following steps.

1. Enable appqoe
2. Configure appqoe action
3. Add appqoe policy
4. Bind appqoe policy to load balancing virtual server

#### **Note:**

The request retry upon timeout scenario is also applicable for POST method.

### **Enable appqoe**

At the command prompt, type:

```
enable ns feature appqoe
```

### **Add appqoe action for timeout**

You must configure the appqoe action to retry on timeout and define the number of retry attempts.

At the command prompt, type:

```
add appqoe action <name> -retryOnTimeout <msecs> -numRetries <positive_integer>
>
```

**Example:**

```
add appqoe action appact1 -retryOnTimeout 35 -numRetries 5
```

### Add appqoe policy

To implement appqoe you must configure appqoe policy to define how to queue the connections.

At the command prompt, type:

```
add appqoe policy <name> -rule <rule> -action <name>
```

**Example:**

```
add appqoe policy timeout_policy -rule http.req.method.eq(get)-action
appact1
```

### Bind appqoe policy to load balancing virtual server

When a back-end server takes a long time to respond and if you want the load balancing virtual server to forward the request to the next available service, you must bind the appqoe policy to balancing virtual server.

At the command prompt, type:

```
bind lb vserver <name> ((<serviceName> (-policyName <string> [-
priority <positive_integer>] [-gotoPriorityExpression <expression
>] [-type (REQUEST | RESPONSE)])
```

**Example:**

```
bind lb vserver v1 -policyName timeout_policy -type REQUEST -priority
1
```

### Configure AppQoE policy for re-loadbalancing on timeout by using the NetScaler GUI

1. Navigate to **AppExpert > AppQoE > Policies**.
2. In the **AppQoE Policies** page, click **Add**.



3. In the **Create an AppQoE Policy** page, set the following parameters:
  - a. Name. AppQoE policy name
  - b. Action. Add or edit an action. To create a new action, see Create AppQoE Action section.
  - c. Expression. Select or enter “http.req.method.eq(get)” policy expression.
4. Click **Create** and **Close**.

### **Configure AppQoE action for request retry by using the NetScaler GUI**

1. Navigate to **AppExpert > AppQoE > Action**.
2. In the **AppQoE Actions** page, click **Add**.
3. In the **Create AppQoE Action** page, set the following parameter for retry on back-end server response time out:
  - a. Retry on Timeout. Retry on request timeout (in millisec) upon sending request to backend servers.
4. Click **Create** and **Close**.

## **TCP optimization**

July 12, 2023

TCP uses the following optimization techniques and congestion control strategies (or algorithms) to avoid network congestion in data transmission.

### **Congestion Control Strategies**

The TCP has long been used to establish and manage Internet connections, handle transmission errors, and smoothly connect web applications with client devices. But network traffic has become more difficult to control, because packet loss does not depend only on the congestion in the network, and congestion does not necessarily cause packet loss. Therefore, to measure congestion, a TCP algorithm should focus on both packet loss and bandwidth.

### **Proportional Rate Recovery (PRR) algorithm**

TCP Fast Recovery mechanisms reduce web latency caused by packet losses. The new Proportional Rate Recovery (PRR) algorithm is a fast recovery algorithm that evaluates TCP data during a loss recovery. It is patterned after Rate-Halving, by using the fraction that is appropriate for the target window

chosen by the congestion control algorithm. It minimizes window adjustment, and the actual window size at the end of recovery is close to the Slow-Start threshold (ssthresh).

## **TCP Fast Open (TFO)**

TCP Fast Open (TFO) is a TCP mechanism that enables speedy and safe data exchange between a client and a server during TCP's initial handshake. This feature is available as a TCP option in the TCP profile bound to a virtual server of a NetScaler appliance. TFO uses a TCP Fast Open Cookie (a security cookie) that the NetScaler appliance generates to validate and authenticate the client initiating a TFO connection to the virtual server. By using this TFO mechanism, you can reduce an application's network latency by the time required for one full round trip, which significantly reduces the delay experienced in short TCP transfers.

### **How TFO works**

When a client tries to establish a TFO connection, it includes a TCP Fast Open Cookie with the initial SYN segment to authenticate itself. If authentication is successful, the virtual server on the NetScaler appliance can include data in the SYN-ACK segment even though it has not received the final ACK segment of the three-way handshake. This saves up to one full round-trip compared to a normal TCP connection, which requires a three-way handshake before any data can be exchanged.

A client and a back-end server perform the following steps to establish a TFO connection and exchange data securely during the initial TCP handshake.

1. If the client does not have a TCP Fast Open Cookie to authenticate itself, it sends a Fast Open Cookie request in the SYN packet to the virtual server on the NetScaler appliance.
2. If the TFO option is enabled in the TCP profile bound to the virtual server, the appliance generates a cookie (by encrypting the client's IP address under a secret key) and responds to the client with an SYN-ACK that includes the generated Fast Open Cookie in a TCP option field.
3. The client caches the cookie for future TFO connections to the same virtual server on the appliance.
4. When the client tries to establish a TFO connection to the same virtual server, it sends SYN that includes the cached Fast Open Cookie (as a TCP option) along with HTTP data.
5. The NetScaler appliance validates the cookie, and if the authentication is successful, the server accepts the data in the SYN packet and acknowledges the event with an SYN-ACK, TFO Cookie, and HTTP Response.

#### **Note:**

If the client authentication fails, the server drops the data and acknowledges the event only with a SYN indicating a session timeout.

1. On the server side, if the TFO option is enabled in a TCP profile bound to a service, the NetScaler appliance determines whether the TCP Fast Open Cookie is present in the service to which it is trying to connect.
2. If the TCP Fast Open Cookie is not present, the appliance sends a cookie request in the SYN packet.
3. When the back-end server sends the Cookie, the appliance stores the cookie in the server information cache.
4. If the appliance already has a cookie for the given destination IP pair, it replaces the old cookie with the new one.
5. If the cookie is available in the server information cache when the virtual server tries to reconnect to the same back-end server by using the same SNIP address, the appliance combines the data in SYN packet with the cookie and sends it to the back-end server.
6. The back-end server acknowledges the event with both data and a SYN.

**Note:** If the server acknowledges the event with only a SYN segment, the NetScaler appliance immediately resends the data packet after removing the SYN segment and the TCP options from the original packet.

### Configuring TCP fast open

To use the TCP Fast Open (TFO) feature, enable the TCP Fast Open option in the relevant TCP profile and set the TFO Cookie Timeout parameter to a value that suits the security requirement for that profile.

**Enable or disable TFO by using the CLI** At the command prompt, type one of the following commands to enable or disable TFO in a new or existing profile.

**Note:** The default value is DISABLED.

```
1 add tcpprofile <TCP Profile Name> - tcpFastOpen ENABLED | DISABLED
2 set tcpprofile <TCP Profile Name> - tcpFastOpen ENABLED | DISABLED
3 unset tcpprofile <TCP Profile Name> - tcpFastOpen
4 Examples
5 add tcpprofile Profile1 - tcpFastOpen
6 Set tcpprofile Profile1 - tcpFastOpen Enabled
7 unset tcpprofile Profile1 - tcpFastOpen
```

### To set TCP Fast Open cookie timeout value by using the command line interface

At the command prompt, type:

```
1 set tcpparam -tcpfastOpenCookieTimeout <Timeout Value>
2 Example
3 set tcpprofile -tcpfastOpenCookieTimeout 30secs
```

### To configure the TCP Fast Open by using the GUI

1. Navigate to **Configuration > System > Profiles >** and then click **Edit** to modify a TCP profile.
2. On the **Configure TCP Profile** page, select the **TCP Fast Open** check box.
3. Click **OK** and then **Done**.

### To Configure the TCP Fast Cookie timeout value by using the GUI

Navigate to **Configuration > System > Settings > Change TCP Parameters** and then **Configure TCP Parameters** page to set the TCP Fast Open Cookie timeout value.

### TCP HyStart

A new TCP profile parameter, HyStart, enables the HyStart algorithm, which is a slow-start algorithm that dynamically determines a safe point at which to terminate (ssthresh). It enables a transition to congestion avoidance without heavy packet losses. This new parameter is disabled by default.

If congestion is detected, HyStart enters a congestion avoidance phase. Enabling it gives you better throughput in high-speed networks with high packet loss. This algorithm helps maintain close to maximum bandwidth while processing transactions. It can therefore improve throughput.

### Configuring TCP HyStart

To use the HyStart feature, enable the Cubic HyStart option in the relevant TCP profile.

### To configure HyStart by using the command line interface (CLI)

At the command prompt, type one of the following commands to enable or disable HyStart in a new or existing TCP profile.

```
1 add tcpprofile <profileName> -hystart ENABLED
2 set tcpprofile <profileName> -hystart ENABLED
3 unset tcpprofile <profileName> -hystart
```

### Examples:

```
1 add tcpprofile profile1 -hystart ENABLED
2 set tcpprofile profile1 -hystart ENABLED
3 unset tcpprofile profile1 -hystart
```

To configure HyStart support by using the GUI

1. Navigate to **Configuration > System > Profiles >** and click **Edit** to modify a TCP profile.
2. On the **Configure TCP Profile** page, select the **Cubic Hystart** check box.
3. Click **OK** and then **Done**.

## TCP burst rate control

It is observed that TCP control mechanisms can lead to a bursty traffic flow on high speed mobile networks with a negative impact on the overall network efficiency. Due to mobile network conditions such as congestion or Layer-2 retransmission of data, TCP acknowledgments arrive clumped at the sender triggering a burst of transmission. These groups of consecutive packets sent with a short inter-packet gap it is called TCP packet burst. To overcome traffic burst, the NetScaler appliance uses a TCP Burst Rate Control technique. This technique evenly spaces data into the network for an entire round-trip-time so that the data is not sent into a burst. By using this burst rate control technique, you can achieve better throughput and lower packet drop rates.

### How TCP burst rate control works

In a NetScaler appliance, this technique evenly spreads the transmission of a packet across the entire duration of the round-trip-time (RTT). This is achieved by using a TCP stack and network packet scheduler that identifies the various network conditions to output packets for ongoing TCP sessions to reduce the bursts.

At the sender, instead of transmitting packets immediately upon receipt of an acknowledgment, the sender can delay transmitting packets to spread them out at the rate defined by scheduler (Dynamic configuration) or by the TCP profile (Fixed configuration).

### Configuring TCP burst rate control

To use the TCP Burst Rate Control option in the relevant TCP profile and set the burst rate control parameters.

### To set TCP burst rate control by using the command line

At the command prompt, set one of the following TCP Burst Rate Control commands are configured in a new or existing profile.

**Note:** The default value is DISABLED.

```

1 add tcpprofile <TCP Profile Name> -burstRateControl Disabled | Dynamic
 | Fixed
2
3 set tcpprofile <TCP Profile Name> -burstRateControl Disabled | Dynamic
 | Fixed
4
5 unset tcpprofile <TCP Profile Name> -burstRateControl Disabled |
 Dynamic | Fixed

```

Where,

**Disabled** –If the Burst rate control is disabled, then a NetScaler appliance does not perform burst management other than the maxBurst setting.

**Fixed** –If the TCP burst rate control is Fixed, the appliance uses the TCP Connection Payload Send Rate value mentioned in the TCP Profile.

**Dynamic** –If the Burst Rate Control is “Dynamic”the connection is being regulated based on various network conditions to reduce TCP bursts. This mode works only when the TCP connection is in END-POINT mode. When Dynamic Burst Rate control is enabled the maxBurst parameter of the TCP profile is not in effect.

```

1 add tcpProfile profile1 -burstRateControl Disabled
2
3 set tcpProfile profile1 -burstRateControl Dynamic
4
5 unset tcpProfile profile1 -burstRateControl Fixed

```

**To set TCP Burst Rate Control parameters by using the command line interface** At the command prompt, type:

```

1 set ns tcpprofile nstcp_default_profile - burstRateControl <type of
 burst rate control> - tcprate <TCP rate> -rateqmax <maximum
 bytes in queue>
2
3 T1300-10-2> show ns tcpprofile nstcp_default_profile
4 Name: nstcp_default_profile
5 Window Scaling status: ENABLED
6 Window Scaling factor: 8
7 SACK status: ENABLED
8 MSS: 1460
9 MaxBurst setting: 30 MSS
10 Initial cwnd setting: 16 MSS
11 TCP Delayed-ACK Timer: 100 millisec
12 Nagle's Algorithm: DISABLED
13 Maximum out-of-order packets to queue: 15000
14 Immediate ACK on PUSH packet: ENABLED
15 Maximum packets per MSS: 0

```

```
16 Maximum packets per retransmission: 1
17 TCP minimum RTO in millisec: 1000
18 TCP Slow start increment: 1
19 TCP Buffer Size: 8000000 bytes
20 TCP Send Buffer Size: 8000000 bytes
21 TCP Syncookie: ENABLED
22 Update Last activity on KA Probes: ENABLED
23 TCP flavor: BIC
24 TCP Dynamic Receive Buffering: DISABLED
25 Keep-alive probes: ENABLED
26 Connection idle time before starting keep-alive probes: 900
 seconds
27 Keep-alive probe interval: 75 seconds
28 Maximum keep-alive probes to be missed before dropping
 connection: 3
29 Establishing Client Connection: AUTOMATIC
30 TCP Segmentation Offload: AUTOMATIC
31 TCP Timestamp Option: DISABLED
32 RST window attenuation (spoof protection): ENABLED
33 Accept RST with last acknowledged sequence number: ENABLED
34 SYN spoof protection: ENABLED
35 TCP Explicit Congestion Notification: DISABLED
36 Multipath TCP: DISABLED
37 Multipath TCP drop data on pre-established subflow:
 DISABLED
38 Multipath TCP fastopen: DISABLED
39 Multipath TCP session timeout: 0 seconds
40 DSACK: ENABLED
41 ACK Aggregation: DISABLED
42 FRT0: ENABLED
43 TCP Max CWND : 4000000 bytes
44 FACK: ENABLED
45 TCP Optimization mode: ENDPOINT
46 TCP Fastopen: DISABLED
47 HYSTART: DISABLED
48 TCP dupack threshold: 3
49 Burst Rate Control: Dynamic
50 TCP Rate: 0
51 TCP Rate Maximum Queue: 0
```

### To configure the TCP Burst Rate Control by using the GUI

1. Navigate to **Configuration > System > Profiles >** and then click **Edit** to modify a TCP profile.
2. On the **Configure TCP Profile** page, select **TCP Burst Control** option from the drop-down list:
  - a) BurstRateCntrl
  - b) CreditBytePrms
  - c) RateBytePerms
  - d) RateSchedulerQ
3. Click **OK** and then **Done**.

## Protection against wrapped sequence (PAWS) algorithm

If you enable the TCP timestamp option in the default TCP profile, the NetScaler appliance uses the Protection Against Wrapped Sequence (PAWS) algorithm to identify and reject old packets whose sequence numbers are within the current TCP connection's receive window because the sequence has "wrapped" (reached its maximum value and restarted from 0).

If network congestion delays a non-SYN data packet and you open a new connection before the packet arrives, sequence-number wrapping might cause the new connection to accept the packet as valid, leading to data corruption. But if the TCP timestamp option is enabled, the packet is discarded.

By default, the TCP timestamp option is disabled. If you enable it, the appliance compares the TCP timestamp (SEG.TSval) in a packet's header with the recent timestamp (Ts.recent) value. If SEG.TSval is equal to or greater than Ts.recent, the packet is processed. Otherwise, the appliance drops the packet and sends a corrective acknowledgment.

### How PAWS works

The PAWS algorithm processes all the incoming TCP packets of a synchronized connection as follows:

1. If `SEG.TSval < Ts.recent`: The incoming packet is not acceptable. PAWS sends an acknowledgment (as specified in RFC-793) and drops the packet. Note: Sending an ACK segment is necessary to retain TCP's mechanisms for detecting and recovering from half-open connections.
2. If packet is outside the window: PAWS rejects the packet, as in normal TCP processing.
3. If `SEG.TSval > Ts.recent`: PAWS accepts the packet and processes it.
4. If `SEG.TSval <= Last.ACK.sent` (arriving segment satisfies): PAWS copies the `SEG.TSval` value to `Ts.recent`.
5. If the packet is in sequence: PAWS accepts the packet.
6. If packet is not in sequence: The packet is treated as a normal in-window, out-of-sequence TCP segment. For example, it might be queued for later delivery.
7. If the `Ts.recent` value is idle for more than 24 days: The validity of `Ts.recent` is checked if the PAWS timestamp check fails. If the `Ts.recent` value is found to be invalid, the segment is accepted and the `PAWS rule` updates the `Ts.recent` with the `TSval` value from the new segment.

### To enable or disable TCP timestamp by using the command line interface

At the command prompt, type:

```
1 `set nstcpprofile nstcp_default_profile -TimeStamp (ENABLED | DISABLED)
```



To enable or disable TCP timestamp by using the GUI

Navigate to **System > Profile > TCP Profile**, select the default TCP profile, click **Edit**, and select or clear the **TCP timestamp** check box.

## Optimization Techniques

TCP uses the following optimization techniques and methods for optimized flow controls.

### Policy based TCP Profile Selection

Network traffic today is more diverse and bandwidth-intensive than ever before. With the increased traffic, the effect that Quality of Service (QoS) has on TCP performance is significant. To enhance QoS, you can now configure AppQoE policies with different TCP profiles for different classes of network traffic. The AppQoE policy classifies a virtual server's traffic to associate a TCP profile optimized for a particular type of traffic, such as 3G, 4G, LAN, or WAN.

To use this feature, create a policy action for each TCP profile, associate an action with AppQoE policies, and bind the policies to the load balancing virtual servers.

For information about using subscriber attributes to perform TCP optimization, see [Policy-based TCP Profile](#).

### Configuring policy based TCP profile selection

Configuring policy based TCP profile selection consists of the following tasks:

- Enabling AppQoE. Before configuring the TCP profile feature, you must enable the AppQoE feature.
- Adding AppQoE Action. After enabling the AppQoE feature, configure an AppQoE action with a TCP profile.
- Configuring AppQoE based TCP Profile Selection. To implement TCP profile selection for different classes of traffic, you must configure AppQoE policies with which your NetScaler can distinguish the connections and bind the correct AppQoE action to each policy.
- Binding AppQoE Policy to Virtual Server. Once you have configured the AppQoE policies, you must bind them to one or more load balancing, content switching, or cache redirection virtual servers.

## Configuring using the command line interface

### To enable AppQoE by using the command line interface

At the command prompt, type the following commands to enable the feature and verify that it is enabled:

- `enable ns feature appqoe`
- `show ns feature`

### To bind a TCP profile while creating an AppQoE action using the command line interface

At the command prompt, type the following AppQoE action command with the `tcpprofiletobind` option.

```
add appqoe action <name> [-priority <priority>] [-respondWith (ACS |
NS)][<CustomFile>] [-altContentSvcName <string>] [-altContentPath <
string>] [-maxConn <positive_integer>] [-delay <usecs>]] [-polqDepth
<positive_integer>] [-priqDepth <positive_integer>] [-dosTrigExpression
<expression>] [-dosAction (SimpleResponse |HICResponse)] [-tcpprofiletobind
<string>]
show appqoe action
```

### To configure an AppQoE policy by using the command line interface

At the command prompt, type:

```
add appqoe policy <name> -rule <expression> -action <string>
```

### To bind an AppQoE policy to load balancing, cache redirection or content switching virtual servers by using the command line interface

At the command prompt, type:

```
bind cs vserver cs1 -policyName <appqoe_policy_name> -priority <
priority>
bind lb vserver <name> - policyName <appqoe_policy_name> -priority <
priority>
bind cr vserver <name> -policyName <appqoe_policy_name> -priority <
priority>
```

**Example**

```
1 add ns tcpProfile tcp1 -WS ENABLED -SACK ENABLED -WSVal 8 -nagle
 ENABLED -maxBurst 30 -initialCwnd 16 -oooQSize 15000 -minRTO 500
 -slowStartIncr 1 -bufferSize 4194304 -flavor BIC -KA ENABLED -
 sendBuffsize 4194304 -rstWindowAttenuate ENABLED -spoofSynDrop
 ENABLED -dsack enabled -frto ENABLED -maxcwnd 4000000 -fack
 ENABLED -tcpmode ENDPOINT
2 add appqoe action appact1 -priority HIGH -tcpprofile tcp1
3 add appqoe policy apppol1 -rule "client.ip.src.eq(10.102.71.31)" -
 action appact1
4 bind lb vserver lb2 -policyName apppol1 -priority 1 -
 gotoPriorityExpression END -type REQUEST
5 bind cs vserver cs1 -policyName apppol1 -priority 1 -
 gotoPriorityExpression END -type REQUEST
```

**Configuring policy based TCP profiling using the GUI**

To enable AppQoE by using the GUI

1. Navigate to **System > Settings**.
2. In the details pane, click **Configure Advanced Features**.
3. In the **Configure Advanced Features** dialog box, select the **AppQoE** check box.
4. Click **OK**.

**To configure AppQoE policy by using the GUI**

1. Navigate to **App-Expert > AppQoE > Actions**.
2. In the details pane, do one of the following:
3. To create an action, click **Add**.
4. To modify an existing action, select the action, and then click **Edit**.
5. In the **Create AppQoE Action** or the **Configure AppQoE Action** screen, type or select values for the parameters. The contents of the dialog box correspond to the parameters described in “Parameters for configuring the AppQoE Action” as follows (asterisk indicates a required parameter):
  - a) Name—name
  - b) Action type—respondWith
  - c) Priority—priority
  - d) Policy Queue Depth—polqDepth
  - e) Queue Depth—priqDepth
  - f) DOS Action—dosAction
6. Click **Create**.

### To bind AppQoE policy by using the GUI

1. Navigate to **Traffic Management > Load Balancing > Virtual Servers**, select a server and then click **Edit**.
2. In the **Policies** section and click (+) to bind an AppQoE policy.
3. In the **Policies** slider, do the following:
  - a) Select a policy type as AppQoE from the drop-down list.
  - b) Select a traffic type from the drop-down list.
4. In the **Policy Binding** section, do the following:
  - a) Click **New** to create an AppQoE policy.
  - b) Click **Existing Policy** to select an AppQoE policy from the drop-down list.
5. Set the binding priority and click **Bind** to the policy to the virtual server.
6. Click **Done**.

### SACK block generation

TCP performance slows down when multiple packets are lost in one window of data. In such a scenario, a Selective Acknowledgment (SACK) mechanism combined with a selective repeat retransmission policy overcomes this limitation. For every incoming out-of-order packet, you must generate a SACK block.

If the out-of-order packet fits in the reassembly queue block, insert packet info in the block, and set the complete block info as SACK-0. If an out-of-order packet does not fit into the reassembly block, send the packet as SACK-0 and repeat the earlier SACK blocks. If an out-of-order packet is a duplicate and packet info is set as SACK-0 then D-SACK the block.

**Note:** A packet is considered as D-SACK if it is an acknowledged packet, or an out of order packet which is already received.

### Client renegeing

A NetScaler appliance can handle client renegeing during SACK based recovery.

### Memory checks for marking end\_point on PCB are not considering total available memory

In a NetScaler appliance, if the memory usage threshold is set to 75 percent instead of using the total available memory, it causes new TCP connections to bypass TCP optimization.

## Unnecessary retransmissions due to missing SACK blocks

In a non-endpoint mode, when you send DUPACKS, if SACK blocks are missing for few out of order packets, triggers more retransmissions from the server.

## SNMP for connections bypassed optimization because of overload

The following SNMP ids have been added to a NetScaler appliance to track number of connections bypassed TCP optimizations due to overload.

1. 1.3.6.1.4.1.5951.4.1.1.46.131 (tcpOptimizationEnabled). To track the total number of connections enabled with TCP optimization.
2. 1.3.6.1.4.1.5951.4.1.1.46.132 (tcpOptimizationBypassed). To track the total number of connections bypassed TCP Optimization.

## Dynamic receive buffer

To maximize TCP performance, a NetScaler appliance can now dynamically adjust the TCP receive buffer size.

## Tail Loss Probe algorithm

A retransmission timeout (RTO) is a loss of segments at the tail end of a transaction. An RTO occurs if there are application latency issues, especially in short web transactions. To recover loss of segments at the end of a transaction, TCP uses the Tail Loss Probe (TLP) algorithm.

TLP is a sender only algorithm. If a TCP connection is not receiving any acknowledgment for a certain period, TLP transmits the last unacknowledged packet (loss probe). In the event of a tail loss in original transmission, acknowledge from loss probe triggers a SACK or FACK recovery.

## Configuring the Tail Loss Probe

To use the Tail Loss Probe (TLP) algorithm, you must enable the TLP option in the TCP profile and set the parameter to a value that suits the security requirement for that profile.

**Enable TLP by using the command line** At the command prompt, type one of the following commands to enable or disable TLP in a new or existing profile.

**Note:**

The default value is DISABLED.

```
add tcpprofile <TCP Profile Name> - taillossprobe ENABLED | DISABLED
```

```
set tcpprofile <TCP Profile Name> - taillossprobe ENABLED | DISABLED
```

```
unset tcpprofile <TCP Profile Name> - taillossprobe
```

**Examples:**

```
add tcpprofile nstcp_default_profile - taillossprobe
```

```
set tcpprofile nstcp_default_profile -taillossprobe Enabled
```

```
unset tcpprofile nstcp_default_profile -taillossprobe
```

**Configure the Tail Loss Probe algorithm by using the NetScaler GUI**

1. Navigate to **Configuration > System > Profiles >** and then click **Edit** to modify a TCP profile.
2. On the **Configure TCP Profile** page, select the **Tail Loss Probe** check box.
3. Click **OK** and then **Done**.

## Troubleshooting solutions for NetScaler

May 2, 2023

This topic gives you some basic troubleshooting solutions needed to resolve issues that occur in your appliance. It gives you an understanding of NetScaler appliance, how it integrates with the network, and what issues you can expect in basic system features.

## How to record a packet trace on NetScaler

December 3, 2024

You can record a packet trace using the NetScaler GUI. The trace is stored in `nstrace.cap`.

1. Navigate to **System > Diagnostics**.
2. Click **Start new trace** under **Technical Support Tools**.

3. In the **Start Trace page** update the following fields:
- a) **Packet Size** - Enter the size of the packet to capture during the trace. Enter 0 for full packet trace.
    - Default value: 164
    - Minimum value: 0
    - Maximum value: 1514
  - b) **Capture trace in .pcap format** - You have the option to capture a packet trace in nstrace (.cap) or TCP dump (.pcap) format. By default, the packet trace is captured in nstrace format (.cap) and it is the recommended format. To capture trace in TCP dump format, select **Capture trace in .pcap format**.
  - c) **Capture SSL Master keys** - To analyze the traces better, enable the **Capture SSL Master keys** option. This setting captures SSL keys for the current session, which are necessary to decrypt encrypted data. The SSL keys are stored in a file named `nstrace.sslkeys`.
    - When you click **Start** to initiate the trace with the **Capture SSL Master keys** option enabled, a security warning message is displayed. **Acknowledge** this warning to proceed.
    - The SSL session keys generated are an alternative to the private key and can be used when the private key is either unavailable or cannot be shared. You can use these keys to decrypt only the NS trace. This method can decrypt RSA and Diffie-Hellman-based key exchanges (such as DHE or ECDHE).
  - d) **Number of trace files** - Enter the number of trace files to be generated during the trace.
    - Default value: 24
    - Minimum value: 1
    - Maximum value: 100
  - e) **Trace File name** - Enter the name for the trace file.
  - f) **Trace File ID** - Enter the file ID for the trace file.
  - g) **Duration of data per file (seconds)** - Enter the time (in seconds) to capture the data for each trace file.
    - Default value: 3600
    - Minimum value: 1
  - h) **File size** - Enter the file size (in MB) for each trace file.
    - Default value: 1024
    - Minimum value: 0
    - Maximum value: 10240

When the trace reaches the specified file size, a new trace starts. If the free disk space is less than 2 GB, the trace stops.

- i) **Trace Buffers** - Enter the number of trace buffers (temporary storage) to store the packet capture. Each buffer is about 16 KB.

- Default value: 5000
- Minimum value: 1000

4. Enter the **Filter Expression**.

Adding filter expressions for IP address, port, VLAN, or interface ensures capturing only the relevant traffic and reduces the load on NetScaler during the packet trace.

5. Select the **Merge** option from the list.

- **ONSTOP** - The temporary trace files are merged into a single trace file.
- **NOMERGE** - The trace files are not merged.
- **ONTHEFLY** - The trace files are merged without creating any temporary file.

Default value: ONSTOP

6. Select the relevant option from the additional packet capture options available.

Default value: Do Runtime cleanup

7. Select the required options in **Capturing Mode**.

By default, **Packets buffered for Transmission (TXB)** and **Receive packets after NIC pipelining (NEW\_RX)** are selected. To decrypt the trace without a private key, select **Decrypted SSL packets (SSLPLAIN)**.

8. Click **Start** to start recording the network packet trace.



9. In the **Stop Trace** page, click **Stop and Download** to stop recording the network packet trace after the test is complete.
10. In the **Delete/Download Trace files** page, select the file, click **Download**, and then click **Close**.  
Open the trace file with the Wireshark utility to display the content of the file.

We recommend you to use the recent Wireshark version from the automated build section available in the following webpage: <http://www.wireshark.org/download/automated>.

### Use case to capture a packet trace with virtual server IP filter (both front-end and back end)

Using a filter of the virtual server IP address and enabling the option “–link” in CLI or selecting the option **Trace filtered connection’s peer traffic** in the GUI, you can capture both the front-end and

back-end traffic for the IP address.

```
1 start nstrace -size 0 -filter "CONNECTION.IP.EQ(1.1.1.1)" -link ENABLED
2
3 show nstrace
4 State: RUNNING Scope: LOCAL TraceLocation
 : "/var/nstrace/24Mar2017_16_00_19/..." Nf: 24
 Time: 3600 Size: 0
 Mode: TXB NEW_RX
5 Traceformat: NSCAP PerNIC: DISABLED FileName: 24
 Mar2017_16_00_19 Filter: "CONNECTION.IP.EQ(1.1.1.1)" Link:
 ENABLED Merge: ONSTOP Doruntimecleanup
 : ENABLED
6 TraceBuffers: 5000 SkipRPC: DISABLED Capsslkeys:
 DISABLED InMemoryTrace: DISABLED
```

## Capturing cyclic traces

It is always challenging to troubleshoot an intermittent issue. Cyclic tracing is best suited for issues which are intermittent. The traces can be run over a span of few hours or days before the issue occurs. Also, you can use a specific filter and evaluate the size of the trace files that are generated before you run it for a longer time.

Run the following command from the CLI:

```
1 start nstrace -nf 60 -time 30 -size 0
2 This particular trace will create 60 files each of them for 30 sec.
 This means the files will start getting overwritten after 60 trace
 files or 30 mins
3
4 show nstrace - To check the status of the nstrace
5 stop nstrace - To stop the nstrace.
```

## Best Practices

On a unit handling GB of traffic per second, capturing traffic is a very resource intensive process. The impact to resources is mainly in terms of the CPU and the disk space. Disk space impact can be reduced by using filtering expressions. However, the impact on the CPU remains and sometimes causes a slight increase as the appliance now needs to process packets according to the filter before capturing them.

The best practice about tracing is:

1. The duration for which the trace is run must be as limited as possible when you still ensure that the relevant packets are captured.

2. Schedule the tracing activity to happen at a time when the number of users (and hence the traffic) is greatly reduced, such as during off hours.

## How to free space on the /var directory

December 10, 2024

The following article explains how an administrator can free the space from the `/var` directory of NetScaler. You can follow the steps when the GUI is not accessible.

When the amount of disk space is low in the `/var` directory of NetScaler, you might not be able to sign in to the GUI. In this scenario, you can remove the old log files to create free space in the `/var` directory.

### Important

Make sure to back up the files before deleting them from NetScaler.

## Free up disk space in the /var directory on NetScaler

To free space in the `/var` directory of NetScaler, complete the following procedure:

1. Log on to the CLI of NetScaler by using SSH. For more information to complete this task, see the NetScaler Documentation.
2. After you log on to the NetScaler CLI, switch to the shell prompt using the `shell` command.
3. Check the space available on NetScaler by running the `df -h` command.
4. If the memory capacity of the `/var` directory reaches 90%, you must delete some files to free up space.

### Note:

Before performing an upgrade, make sure that there is enough available space in the `/var` directory. The `/var` directory requires 7 GB of free space: 1 GB for the upgrade bundle, 2 GB for extraction, and 4 GB for the upgrade process.

5. View the contents of the `/var` directory by running the `ls -l /var` command.

The directories that are usually of interest are as follows:

- `/var/nstrace` - This directory contains trace files. This is the most common reason for HDD being filled on NetScaler. This is due to a nstrace being left running for an indefinite amount of time. Delete all traces that are not required. To stop an nstrace, run `stop nstrace` command from the CLI.

- /var/log - This directory contains system specific log files.
  - /var/nslog - This directory contains NetScaler log files.
  - /var/tmp/support - This directory contains technical support files, also known as, support bundles. All files not of interest should be deleted.
  - /var/core - Core dumps are stored in this directory. There will be directories within this directory and they will be labeled with numbers starting with 1. These files can be quite large in size. Clear all files unless the core dumps are recent and investigation is required.
  - /var/crash - Crash files, such as process crashes are stored in this directory. Clear all files unless the crashes are recent and investigation is required.
  - /var/nsinstall - Firmware is placed in this directory when upgrading. Clear all files, except the firmware that is currently being used.
6. Check the memory usage of different files and directories within the /var directory by running the `du -hs /var/*` command.

```
1 du -hs *
2
3 44k cache
4 2.0k clusterd
5 2.0k configdb
6 6.0k core
7 989M crash
8 4.0k cron
9 2.0k dev
10 6.0k download
11 2.0k gui
12 2.0k install
13 2.0k krb
14 2.0k learnt_data
15 122M log
16 366M NetScaler
17 14k ns_gui
18 86k ns_sys_backup
19 631M nsinstall
20 883M nslog
21 32k nsproflog
22 2.0k nssynclog
23 16k nstemplates
24 36k nstmp
25 4.5G nstrace
26 8.1M opt
27 6.0k pubkey
28 52k run
29 28M safenet
30 72M tmp
31 2.0k vmtools
32 14k vpn
```

7. Delete or compress any unnecessary files or those using excessive memory.

- In the preceding example, `nstrace` directory is taking up more space. If it is not required, delete the files in this directory by running the following command: `rm -r nstrace/*`.

For more help on deleting files, see the FreeBSD documentation.

- If the `log` or `nslog` directory is using more space.
  - View the contents of the `log` or `nslog` directories by running the following commands:

```
1 cd /var/log
2 ls -l
3 cd /var/nslog
4 ls -l
```

- Compress all the files. The `.tar.gz` file name extension indicates that the file is both archived and compressed.

If the file is not already compressed, you must compress them.

To compress the file to `.gz` format:

```
1 cd /var/log
2 gzip <filename>
```

The compressed file is placed at the `/var/log` directory.

To compress the file to `.tar.gz` format:

```
1 cd /var/nslog
2 tar -cz <filename>.tar.gz <filename>
```

The compressed file is placed at the `/var/nslog` directory.

- If you are using NetScaler Console, verify the `/var/ns_system_backup` directory. Ensure that NetScaler Console clears the backup files it creates.

## More resources

For information on any of the commands mentioned in the preceding procedure, see [Linux commands](#).

## How to download core or crashed files from NetScaler appliance


May 2, 2023

This troubleshooting article explains how an administrator can download core or crash files from the NetScaler appliance.

## Download core or crash files from NetScaler appliance using SFTP client

To download the core or crash files from a NetScaler appliance, complete the following procedure:

1. Open WinSCP and log on to the NetScaler Management IP address.
2. Navigate to the `/var/core/1` to download the files.

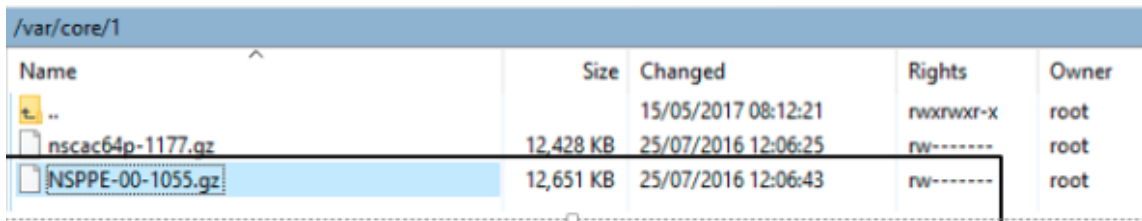

| Name             | Size      | Changed             | Rights    | Owner |
|------------------|-----------|---------------------|-----------|-------|
| ..               |           | 15/05/2017 08:12:21 | rwxrwxr-x | root  |
| nscac64p-1177.gz | 12,428 KB | 25/07/2016 12:06:25 | rw-----   | root  |
| NSPPE-00-1055.gz | 12,651 KB | 25/07/2016 12:06:43 | rw-----   | root  |

### Note:

To download the latest crash or core file, you can also use the WinSCP tool through command interface. The files can be located either in the core or crash directory.

## How to collect performance statistics and event logs

December 29, 2023

You can collect performance statistics of virtual servers and associated services from an archived `newslog` file present in the `/var/nslog` directory. The `newslog` files are interpreted by running `/netscaler/nsconmsg`.

### Collect performance statistics and event logs using the CLI

You can run the `nsconmsg` command from the NetScaler shell prompt to report events.

At the command prompt, type:

```
/netscaler/nsconmsg -K /var/nslog/newslog -d event
```

```
1 Displaying event information
2 NetScaler V20 Performance Data
3 NetScaler NS10.5: Build 57.7.nc, Date: May 14 2015, 07:35:21
4 rtime: Relative time between two records in milliseconds
5 seqno rtime event-message event-time
6 11648 16310 PPE-0 MonServiceBinding_10.104.20.110:443_(tcp-default)
```

## View the time span covered by a given “newslog”file

At the command prompt, type:

```
/netscaler/nsconmsg -K /var/nslog/newslog -d setime
```

The current data is appended to the `/var/nslog/newslog` file. NetScaler archives the `newslog` file automatically every two days by default. To read the archived data, you must extract the archive as shown in the following example:

`cd /var/nslog`: command to go to a particular directory from NetScaler Shell Prompt.

`tar xvfz newslog.100.tar.gz`: command to extract the tar file.

`/netscaler/nsconmsg -K newslog.100 -d setime`: Command to check the time span covered by the particular file, in this example `newslog.100`.

`ls -l`: Command checks all the logs file and time stamp associated with those files.

```
root@NETSCALER# cd /var/nslog
```

```
root@NETSCALER# ls -l
```

```

1 wheel 461544 Aug 7 2014 newslog.1.tar.gz
2 -rw-r--r-- 1 root wheel 191067 Aug 7 2014 newslog.10.tar.
 gz
3 -rw-r--r-- 1 root wheel 11144873 Apr 26 22:04 newslog.100.tar
 .gz
4 -rw-r--r-- 1 root wheel 11095053 Apr 28 22:04 newslog.101.tar
 .gz
5 -rw-r--r-- 1 root wheel 11114284 Apr 30 22:04 newslog.102.tar
 .gz
6 -rw-r--r-- 1 root wheel 11146418 May 2 22:04 newslog.103.tar
 .gz
7 -rw-r--r-- 1 root wheel 11104227 May 4 22:04 newslog.104.tar
 .gz
8 -rw-r--r-- 1 root wheel 11297419 May 6 22:04 newslog.105.tar
 .gz
9 -rw-r--r-- 1 root wheel 11081212 May 8 22:04 newslog.106.tar
 .gz
10 -rw-r--r-- 1 root wheel 11048542 May 10 22:04 newslog.107.tar
 .gz
11 -rw-r--r-- 1 root wheel 11101869 May 12 22:04 newslog.108.tar
 .gz
12 -rw-r--r-- 1 root wheel 11378787 May 14 22:04 newslog.109.tar
 .gz
13 -rw-r--r-- 1 root wheel 44989298 Apr 11 2014 newslog.11.gz

```

## Display the time span within a file

Use the `nsconmsg` command to only display a span of time within the given file, as shown in the following example:

```
/netscaler/nsconmsg -K /var/nslog/newslog -s time=22Mar2007:20:00 -T
7 -s ConLb=2 -d oldconmsg
```

Where,

s : time=22Mar2007:20:00:00 is start at March 22, 2007 at exactly 20:00.

T 7 : Displays seven seconds of data

s : Displays detail level of load balancing statistics.

d : Displays statistical information.

**Note:**

From ADC release 12.1 you need add at the “time”seconds as well, that is: 22Mar2007:20:00:00

The statistical information provided by the `-d oldconmsg` parameter is recorded every seven seconds. The following is a sample output.

```
1 VIP(10.128.58.149:80:UP:WEIGHTEDRR): Hits(38200495, 18/sec) Mbps(1.02)
 Pers(OFF) Err(0)
2 Pkt(186/sec, 610 bytes) actSvc(4) DefPol(NONE) override(0)
3 Conn: Clt(253, 1/sec, OE[252]) Svr(3)
4 S(10.128.49.40:80:UP) Hits(9443063, 4/sec, P[2602342, 0/sec]) ATr(5)
 Mbps(0.23) BWlmt(0 kbits) RspTime(112.58 ms)
5 Other: Pkt(36/sec, 712 bytes) Wt(10000) RHits(31555)
6 Conn: CSvr(42, 0/sec) MCSvr(20) OE(16) RP(11) SQ(0)
7 S(10.128.49.39:80:UP) Hits(9731048, 4/sec, P[2929279, 0/sec]) ATr(9)
 Mbps(0.27) BWlmt(0 kbits) RspTime(161.69 ms)
8 Other: Pkt(41/sec, 756 bytes) Wt(10000) RHits(31555)
9 Conn: CSvr(32, 0/sec) MCSvr(19) OE(13) RP(4) SQ(0)
10 S(10.128.49.38:80:UP) Hits(9341366, 5/sec, P[2700778, 0/sec]) ATr(4)
 Mbps(0.27) BWlmt(0 kbits) RspTime(120.50 ms)
11 Other: Pkt(42/sec, 720 bytes) Wt(10000) RHits(31556)
12 Conn: CSvr(37, 0/sec) MCSvr(19) OE(13) RP(9) SQ(0)
13 S(10.128.49.37:80:UP) Hits(9685018, 4/sec, P[2844418, 0/sec]) ATr(3)
 Mbps(0.23) BWlmt(0 kbits) RspTime(125.38 ms)
14 Other: Pkt(38/sec, 670 bytes) Wt(10000) RHits(31556)
15 Conn: CSvr(32, 0/sec) MCSvr(20) OE(10) RP(7) SQ(0)
```

**Note:**

The client connection counts of the individual services do not add up to the client connection count of the virtual server. The reason is because of session reuse between the NetScaler appliance and the back-end service.

## Virtual Server Output



```

1 VIP(10.128.58.149:80:UP:WEIGHTEDRR): Hits(38200495, 18/sec) PHits(5)
 Mbps(1.02) Pers(OFF) Err(0) LConn_Best [Idx:SubIdx] 0:0
 PrimVserverDownBackupHits(0)
2 Pkt(186/sec, 610 bytes) actSvc(4) DefPol(NONE) override(0) newlyUP(0)
3 Conn: Clt(253, 1/sec, OE[252]) Svr(3) SQ(Total: 0 OnVserver: 0
 OnServices: 0)
4 slimit_S0: (Sothreshhold: 0 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0
 TotActiveConn: 0] Available: 0)

```

The following list describes the virtual server statistics:

1. **IP (IP address:port:state:Load balancing method)**: The IP address and port of the Virtual IP address as configured. The virtual server state or virtual IP address is UP, DOWN, or OUT OF SERVICE; Load balancing method configured for the Virtual IP address.
2. **Hits (#)**: Number of requests that reached the virtual server.
3. **Mbps (#)**: Total traffic volume on the virtual server (Rx + Tx) converted into Mbits/s.
4. **Pers**: Type of persistence is configured.
5. **Err (#)**: Number of times an error page was generated by the virtual server.
6. **Pkt (#/sec, # bytes)**: Volume of network traffic (as packets) passing through the virtual server and average packet size flowing through the virtual server.
7. **actSvc (#)**: Number of active services that are bound to the virtual server.
8. **DefPol (RR)**: Indicates whether the default load balancing method is active. Default load balancing method is used for some number of initial requests to smooth the behavior of the other methods.
9. **Clt (#, #/sec)**: Number of current client connections to the virtual server rate.
10. **OE [#]**: Number of server connections from the virtual server in open established state.
11. **Svr (#)**: Number of current server connections from the virtual server.
12. **PHits (#)**: Number of persistence hits.
13. **S0**: Number of times spillover happened.
14. **LConn\_Best [Idx:SubIdx] (port: #)**. The index sub-slot of the best server when the least connection method is used.
15. **PrimVserverDownBackupHits (#)**: Number of hits to backup the virtual server when the primary server was down.
16. **Override (#)**: Number of times next best servers was selected based on L2Conn for maxClt.
17. **newlyUP (#)**: Number of current services which are newly UP.
18. **SQ(Total:OnVserver:OnServices:)**: Current surge queue length.
19. **slimit\_S0: (Sothreshhold:Exclusive:Consumed: [Exclusive:Borrowed :TotActiveConn:] Available: (#))**: Exclusive and shared info of shared limit for spillover.

In the preceding output, **Svr(3)** indicates that the command collects the statistical sample. There are three active connections for the virtual server to the back-end server, even though there are four services in total. When a client establishes a connection with the virtual server, it is not necessary

that the client sends or receives any traffic when the command collects the information. Therefore, it is common to see the `Svr` counter lower than the `OE[]` number. The `Svr` counter represents the number of active connections that are actively sending or receiving data. The Subnet IP address (SNIP) is connected to the associated back-end server. And, the NetScaler tracks the virtual server connected to the back-end server and calculates the counter.

### Virtual service output

```

1 S(10.128.49.40:80:UP) Hits(9443063, 4/sec, P[2602342, 0/sec]) ATr(5)
 Mbps(0.23) BWlmt(0 kbits) RspTime(112.58 ms) Load(0) LConn_Best [Idx
 :SubIdx] (C:0; V:0,I:1, B:0, X:0, SI:0)
2 Other: Pkt(36/sec, 712 bytes) Wt(10000) Wt(Reverse Polarity)(10000)
 RHits(31555) Conn: CSvr(42, 0/sec) MCSvr(20) OE(16) E(5) RP(11) SQ
 (0)
3 slimit_maxClient: (MaxClnt: 2 [Ex: 0] Consumed: [Ex: 0 Borrowed: 0
 TotActiveConn: 0] Available: 2)
4 newlyUP_mode: NO, Pending: 0, update: 0x0, incr_time: 0x0, incr_count:
 0

```

The following list describes the service statistics:

1. `S (IP address:port:state)`: IP address, port, and state of the service such as, DOWN, UP, or OUT OF SERVICE.
2. `Hits (#, P[#])`: Number of requests directed to the service, Number of requests directed to the service due to configured server persistence.
3. `ATr (#)`: Number of active connections to the service.

**Note:**

Active connections have the outstanding request to the service or currently have traffic activity.

4. `Mbps (#.##)`: Total traffic volume on the Service (Rx + Tx) converted into Mbits/s.
5. `BWlmt (# kbits)`: Defined bandwidth limit.
6. `RspTime (# ms)`: Average response time of the service in milliseconds.
7. `Pkt(#/sec, #bytes)`: Traffic volume in terms of packets per second going to the service; Average size of the packets.
8. `Wt (#)`: Weight index, used in load balancing algorithm.

**Note:**

If you divide this value by 10,000, then you get the actual configured weight of the service.

9. `RHits` (#): Running requests counter used in Round Robin load balancing algorithm.
10. `CSvr` (#, #/sec): Number of connections to the service rate.
11. `MCSvr` (#): Maximum number of connections to the service.
12. `OE` (#): Number of connections to the service in the open and established state.
13. `E` (#): Number of connections to the service in the established state.
14. `RP` (#): Number of connections to the service, residing in the reuse pool.
15. `SQ` (#): Number of connections to the service, waiting in the surge queue.
16. `Load` (#): Load on the service.
17. `LConn_Idx`: (`Current index`(#); `current virtual index`(#), `I`(#), `base virtual slot index`(#), `transaction` (#), `Sub slot index`(#)): Index of the server when the least connection method is used.
18. `Wt`(`Reverse Polarity`): Reverse Weight index used in the load balancing algorithm.
19. `slimit_maxClient`: (`MaxClient` [`Exclusinve`] `Consumed`: [`Exclusive` :`Borrowed`:`TotActiveConnection`:] `Available`: (#)): Exclusive and shared information of shared limit for max client.
20. `newlyUP_mode`: (`No`, `pending` (#), `update` (#\*#), `incr_time` (#\*#), `incr_count` (#)): Indicates whether the service has newly come up and its stats corresponding to the number of hits allowed on the new service. Also the time when the weights are updated for this service.

## Collect performance statistics and event logs using the NetScaler GUI

1. Navigate to **System > Diagnostics > Maintenance > Delete/Download log files**.
2. Select a file and click **Download** to download the file.

## How to configure log file rotation

May 2, 2023

The NetScaler appliance generates logs in multiple directories and in various formats. Some of these logs are not rotated by default and can grow in size consuming too much disk space. By using the included utilities for log rotation ([newsyslog](#)), you can manage these logs consistently, by keeping only relevant information for easier management and administration.

The `newsyslog` utility included in the NetScaler firmware archives log files and rotates the system logs so the current log is empty during rotation. The system crontab runs this utility every hour and it reads the configuration file which specifies the files to rotate and the conditions. The archived files might be compressed if necessary.

The existing configuration is located in `/etc/newsyslog.conf`. However, because this file resides in the memory filesystem, the administrator must save the modifications to `/nsconfig/newsyslog.conf` so the configuration survives restarting the NetScaler.

The entries contained in this file have the following format:

```
logfilename [owner:group] mode count size when flags [pid_file] [sig_num]
```

**Note:**

Fields within squared brackets are optional and can be omitted.

Each line on the file represents a log file and the conditions under which rotation must occur.

In the example, the `size` field indicates that the size of `ns.log` as 100 Kilobytes. The `count` field indicates that the number of archived `ns.log` files as 25. A size of 100 K and count of 25 are the default size and count values.

**Note:**

When the field is configured with an asterisk ( \* ), meaning that the `ns.log` file is not rotated based on time. Every hour, a crontab job runs the `newsyslog` utility which checks if the size of `ns.log` is greater than or equal to the size configured in this file. In this example, if it is greater than or equal to 100 K, it rotates that file.

```
1 root@ns# cat /etc/newsyslog.conf
2 # Netscaler newsyslog.conf
3
4 # This file is present in the memory filesystem by default, and any
 changes
5 # to this file will be lost following a reboot. If changes to this file
6 # require persistence between reboots, copy this file to the /nsconfig
7 # directory and make the required changes to that file.
8 #
9 # logfilename [owner:group] mode count size when flags [pid_file] [
 sig_num]
10 /var/log/cron 600 3 100 * Z
11 /var/log/amd.log 644 7 100 * Z
12 /var/log/auth.log 600 7 100 * Z
13 /var/log/ns.log 600 25 100 * Z
```

The `size` field can be changed to modify the minimum size of the `ns.log` file or the field can be changed to rotate the `ns.log` file based on a certain time.

The daily, weekly, and/or monthly specification is given as: `[Dhh]`, and `[Dhh [Mdd]]`, respectively. The time-of-day fields, which are optional, default to midnight. The ranges and meanings for these specifications are:

- 1 Hh hours, range 0 ... 23
- 2 w day of week, range 0 ... 6, 0 = Sunday
- 3 dd day of month, range 1 ... 31, or the letter L or l to specify the last day of the month.

**Examples:**

Here are some examples with explanations for the logs that are rotated by default:

```
/var/log/auth.log 600 7 100 * Z
```

The authentication log is rotated when the file reaches 100 K, the last 7 copies of the `auth.log` are archived and compressed with `gzip` (Z flag), and the resulting archives are assigned the following permissions `-rw-----`.

```
/var/log/all.log 600 7 * @T00 Z
```

The catch-all log is rotated 7 times at midnight every night (`@T00`) and compressed with `gzip`. The resulting archives are assigned the following permissions `-rw-r---`.

```
/var/log/weekly.log 640 5 * $W6D0 Z
```

The weekly log is rotated 5 times at midnight every Monday. The resulting archives are assigned with permissions.

**Common Rotation Patterns:**

- `D0`. rotate every night at midnight
- `D23`. rotate every day at 23:00
- `W0D23`. rotate every week on Sunday at 23:00
- `W5`. rotate every week on Friday at midnight
- `MLD6`. rotate at the last day of every month at 6:00
- `M5`. rotate on every fifth day of the month at midnight

If an interval and a time specification are both given, then both conditions must be met. That is, the file must be as old as or older than the specified interval and the current time must match the time specification.

You can control the minimum file size but there is no limit on the file size before the `newsyslog` utility gets its turn in the next hour slot.

**Debug newsyslog:**

To debug the behavior of the `newsyslog` utility, add the verbose flag.

```
1 root@dj_ns# newsyslog -v
```

```
2 /var/log/cron <3Z>: size (Kb): 31 [100] --> skipping
3 /var/log/amd.log <7Z>: does not exist, skipped.
4 /var/log/auth.log <7Z>: size (Kb): 2 [100] --> skipping
5 /var/log/kerberos.log <7Z>: does not exist, skipped.
6 /var/log/lpd-errs <7Z>: size (Kb): 0 [100] --> skipping
7 /var/log/maillog <7Z>: --> will trim at Tue Mar 24 00:00:00 2009
8 /var/log/sendmail.st <10>: age (hr): 0 [168] --> skipping
9 /var/log/messages <5Z>: size (Kb): 7 [100] --> skipping
10 /var/log/all.log <7Z>: --> will trim at Tue Mar 24 00:00:00 2009
11 /var/log/slip.log <3Z>: size (Kb): 0 [100] --> skipping
12 /var/log/ppp.log <3Z>: does not exist, skipped.
13 /var/log/security <10Z>: size (Kb): 0 [100] --> skipping
14 /var/log/wtmp <3>: --> will trim at Wed Apr 1 04:00:00 2009
15 /var/log/daily.log <7Z>: does not exist, skipped.
16 /var/log/weekly.log <5Z>: does not exist, skipped.
17 /var/log/monthly.log <12Z>: does not exist, skipped.
18 /var/log/console.log <5Z>: does not exist, skipped.
19 /var/log/ns.log <5Z>: size (Kb): 18 [100] --> skipping
20 /var/log/nsvpn.log <5Z>: size (Kb): 0 [100] --> skipping
21 /var/log/httperror.log <5Z>: size (Kb): 1 [100] --> skipping
22 /var/log/httpaccess.log <5Z>: size (Kb): 1 [100] --> skipping
23 root@dj_ns#
```

## How to free space on a /flash directory in a NetScaler appliance

May 2, 2023

This troubleshooting article explains how an administrator can free space from the /flash directory of a NetScaler appliance.

### Procedure to free space in the /flash directory of a NetScaler appliance

1. Log on to the CLI of NetScaler by using SSH.
2. After you log on to the NetScaler CLI, switch to the shell prompt using the following command: `shell`.
3. Run the `df -h` command to see the availability of space on the NetScaler appliance.
4. If the capacity of the /flash directory is more than 90 percent or low, you must delete few files from this directory.
5. Run the following commands to view the contents of the /flash directory:

```
1 cd /flash
2 ls -l
```

6. You might find multiple files of various versions of the NetScaler software release. Ensure that the files present in this location are the ones applicable to the current version of the NetScaler software on your appliance. Run the following command to remove any other files from the appliance.

```
1 rm <filename>
```

#### Note

Remove only the older versions of the kernel. The /flash directory must contain the files that the current version or build of the NetScaler software release is using and the kernel.gz file. Citrix recommends not to remove these files from the /flash directory.

## Reference Material

May 2, 2023

Use this reference information to get an in-depth understanding of the following NetScaler components:

**NetScaler SNMP OIDs** - Details of the SNMP OIDs that can be used to obtain information from a NetScaler appliance.

**NetScaler Syslog Messages** - Details of the Syslog messages given by the NetScaler appliance.

**NetScaler CLI Commands** - Details of the commands that can be used to configure the NetScaler appliance through the CLI. You can also view the details of each command in the CLI, by entering the “man <ns-command-name>” command.

**API Reference** - Details of all operations that can be performed on the NetScaler appliance by using the REST API.

**NetScaler Advanced Policy Expressions** - Details of the expressions that can be used to define advanced policies.

