

Step 1


Turn your Heat Pump on using the ON/OFF button



Step 2


Select the desired mode by pressing the

MODE button repeatedly

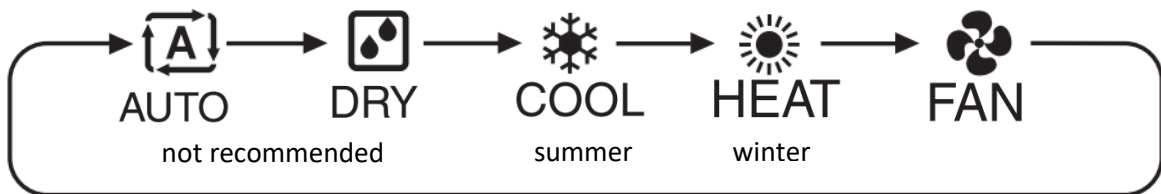


Step 3


Set your desired temperature by using the up and down arrows of the TEMP button

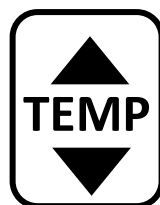


For all your servicing needs call 03 366 1823.

Fan Speed

Press  .

- Each pressing of  changes the airflow rate setting in sequence.

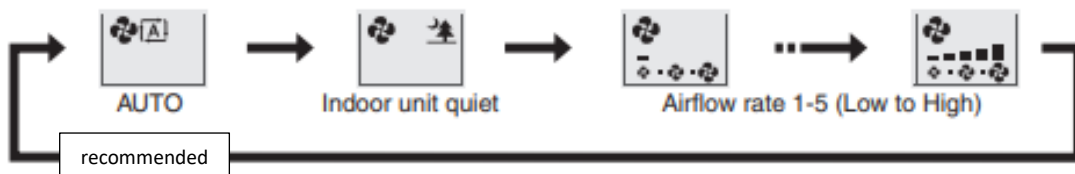

Trouble Shooting

Remote Control Not Working: If your remote-control screen goes blank or the heat pump does not seem to respond, change the batteries (slide the front panel down and off to reveal the battery compartment)

Green Blinking Light: This usually indicates a fault, call 03 366 1823 for further guidance/diagnosis appointment. Do check that your filters are cleaned and there are no obstructions to air flow at the indoor or outdoor unit

Unit Not Turning On: Check that the outdoor isolator switch close to the outdoor unit has not been switched off, if not, check the circuit breakers on the switchboard

Indoor Unit Stops Working on a Cold

Morning/Systems Makes a Gasping Air Noise: The system is likely to be in defrost mode. The outdoor unit will be working whilst defrost mode and the indoor should start within 15 minutes