# SWAY BRACE - SEISMIC

## PIPE BRACE CLAMPS







Fig. 770 Q Brace Clamp Size Range: 1" thru 6" Service Pipe Page 3-4





Fig. 776 Brace Clamp Size Range: 21/2" thru 8" Service Pipe Page 5-6

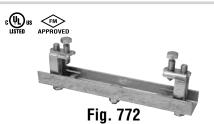


Fig. 775 Lateral/Longitudinal Brace Clamp Size Range: 21/2" thru 8" Service Pipe Page 7-8

## STRUCTURAL ATTACHMENTS



Fig. 778 Bar Joist and Beam Attachment (WF) Size Range: Flange Thickness 1/8" thru 3/4" Page 9-10



Adjustable Steel Beam Attachment Size Range: Flange Widths 4" thru 15" Page 11-13



### **RESTRAINTS**





Fig. 773 Surge Restrainer Size Range: 3/4" thru 2" Swivel Ring Hanger Page 15





Fig. 777 Swivel Joint Connector - Rod Tap Size Range: 3/8" Rod Diameter Page 16

### SWAY BRACE ATTACHMENT

Page 14



#### Notes:

- 1. For fire protection installations sway braces are intended to be installed in accordance with NFPA-13 and Anvil's installations instructions and local codes.
- 2. The required type, number and size of fasteners used for the structural attachment fitting shall be in accordance with NFPA-13.
- 3. To assure proper performance, installer is responsible for:
  - a. Structural integrity of attachment member to safely handle load requirements.
  - b. Securely tightening the component on the brace pipe.
- 4. Anvil International® brand bracing components are designed to be compatible ONLY with other Anvil International® brand bracing components, resulting in a Listed seismic bracing assembly.

### **SWAY BRACE CONNECTOR**



Disclaimer: Anvil International ("Anvil") does not provide any warranties and specifically disclaims any liability whatsoever with respect to Anvil bracing products and components that are used in combination with products, parts or systems not manufactured or sold by Anvil. In no event shall Anvil be liable for any incidental, direct, consequential, special or indirect damages or lost profits where non-Anvil bracing components have been, or are used.