



COX Mini Box Instructions

[Home](#) » [Cox](#) » COX Mini Box Instructions



**Getting started is easy.
Instructions
Mini Box**

Contents [[hide](#)]

- [1 Here's what's in your kit:](#)
- [2 And here's what you'll need:](#)
- [3 Here's what to do:](#)
- [4 We're here to help.](#)
 - [4.1 Tips](#)
 - [4.2 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Here's what's in your kit:



Power cord



Coax cable



HDMI cable



Coax Remote



Mini Box

And here's what you'll need:




Your original TV remote



TV

Here's what to do:

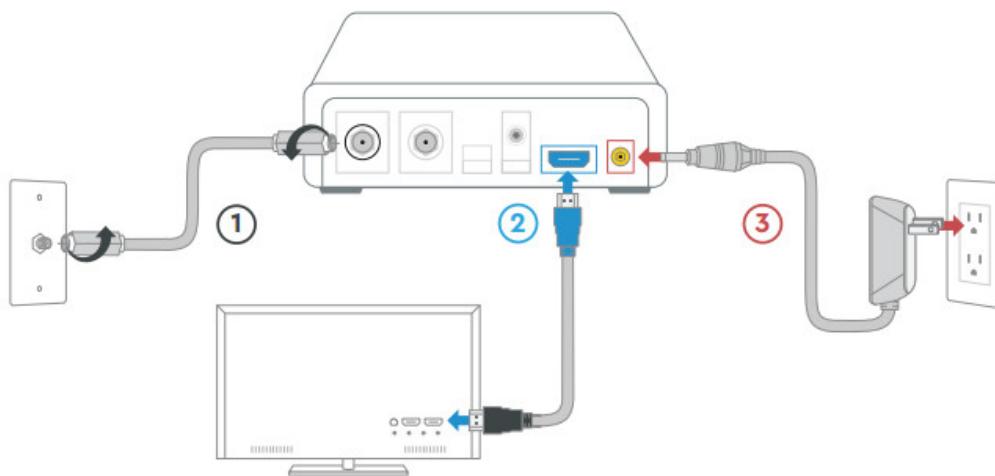

1. Plugin the Mini Box

First, connect the **coax cable 1** to an active cable outlet and to the “Cable from Wall” port on the Mini Box. Then connect the **HDMI cord 2** to your TV and the Mini Box.

If your TV doesn't have an HDMI port, then you can use another coax cable instead. Tune your TV to channel 3

or 4 and ensure the toggle switch on the Mini

The box matches the TV channel. (This method only supports standard definition.)

Lastly, connect the **power cord 3** to an electrical outlet and the Mini Box.

TIP: Plug the coax cable into a centrally located cable outlet or use the same outlet where the old device was connected.

2. Activate the Mini Box

Turn on your TV. Then using your **original TV** remote, press the **source or input** button and select the correct **HDMI connection**. Then wait a few minutes for the activation to finish.

3. Set up your new Cox remote

Follow the **steps listed on the back** of the Cox remote to pair it with your TV.

We're here to help.



Tips

Channel Lineup: go to Cox.com → Products → TV Channel Lineup.

On-Demand SM: watch movies and your favorite shows on your schedule.

Splitter: installing two devices from the same cable outlet requires a splitter.



FAQs

Why isn't my Mini Box working?

Try rebooting it— just unplug the power cord from the wall outlet, wait about 10 seconds, then plug the power cord back in. It may take a few minutes to fully reset. Also, make sure all of the connections are tight and completely plugged in.

How do I fix a “No Input” message on my TV?

The input/source might not be set correctly. To fix this, press the “input” or “source” button on your TV remote until you select the HDMI connection that matches the port your HDMI cable is plugged into on your TV.

How do I make the text on the Guide larger?

Press the “settings” button on the Cox remote and follow these steps:

Guide Options → Other Settings → Guide Text Size → picks the size you want → Press the “select” button on the remote. Visit [Cox.com/remot-help](https://www.cox.com/remot-help) for more support and troubleshooting.



APP: Cox app has 24/7 support & helpful videos



WEB: [Cox.com/installhelp](https://www.cox.com/installhelp) & [Cox.com/learn](https://www.cox.com/learn)



CHAT: live chat on [Cox.com/chat](https://www.cox.com/chat) or text an agent at 54512



CALL: 1-888-556-1193



ACCESSIBILITY: [Cox.com/accessibility](https://www.cox.com/accessibility)



Help us send zero waste to landfills by recycling the kit once you're finished. It's made with 100% recyclable materials.

520-1932



Documents / Resources



[COX Mini Box](#) [pdf] Instructions
Mini Box

References

- [Cox Residential Services | Official Site](#)
- [Accessibility Features | Cox](#)
- [Conoce cómo usar tus servicios de Cox | Cox](#)
- [Remote Control User Guides](#)