




KODAK Digital Camera User Guide

[Home](#) » [Kodak](#) » KODAK Digital Camera User Guide

KODAK Digital Camera User Guide



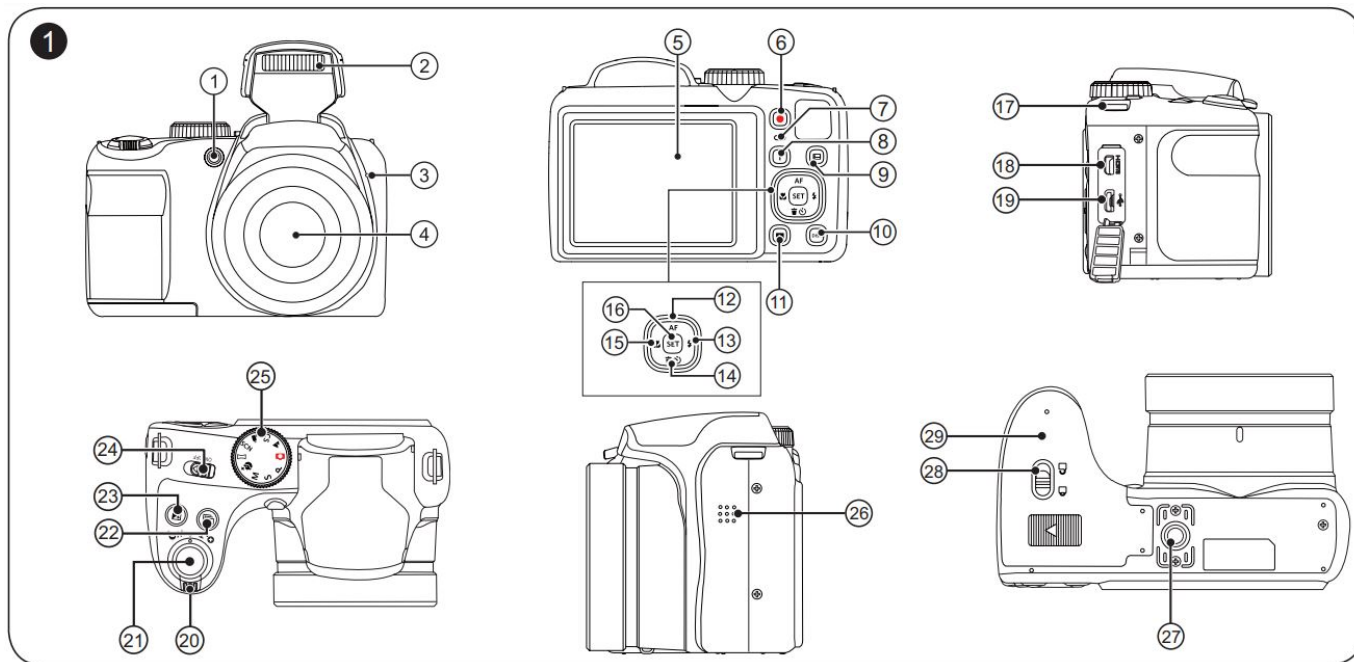


1. AF assist beam/Self-timer lamp
2. Flash lamp
3. Microphone
4. Lens
5. LCD
6. Fast video recording button
7. Indicator lamp
8. i button
9. Menu button
10. Display button
11. Playback button
12. AF button/Arrow button (Up)
13. Flash button/Arrow button (Right)
14. Delete button/Self-timer button/ Arrow button (Down)
15. Macro button/Arrow button (Left)
16. SET button
17. Strap eyelet
18. Micro HDMI port
19. Micro USB port
20. Zoom lever
21. Shutter button
22. Continuous shot button
23. Exposure compensation button
24. Power switch
25. Mode dial
26. Speaker
27. Tripod socket

28. Battery cover buckle

29. Battery cover

(2) Insert the Batteries and the Memory Card

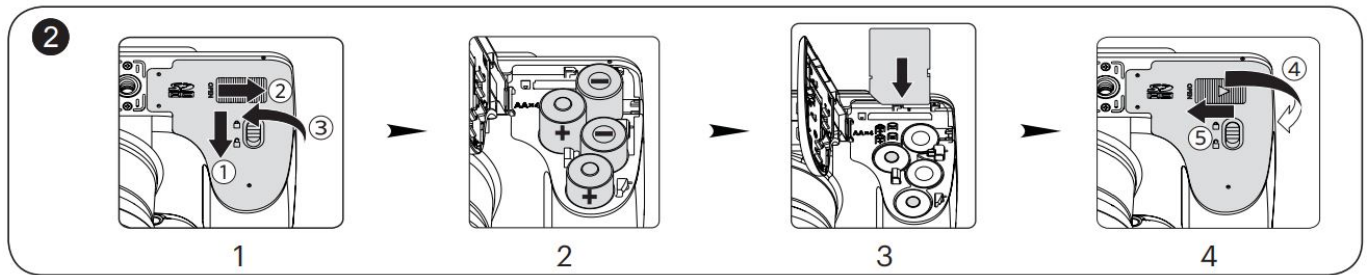


1. Open the battery cover.
2. Insert the batteries into the battery compartment.
3. Insert the memory card into the slot.
4. Close the battery cover.

(3) Setting the Language/Date/Time



1. Push power switch to turn the camera on and the language menu will appear. Use the up/down/left/right buttons to select a language, then press the (**SET**) button to confirm the language.
2. Use the up/down/left/right buttons again to set the date and time, and press the (**SET**) button to confirm.


(4) Taking a Picture

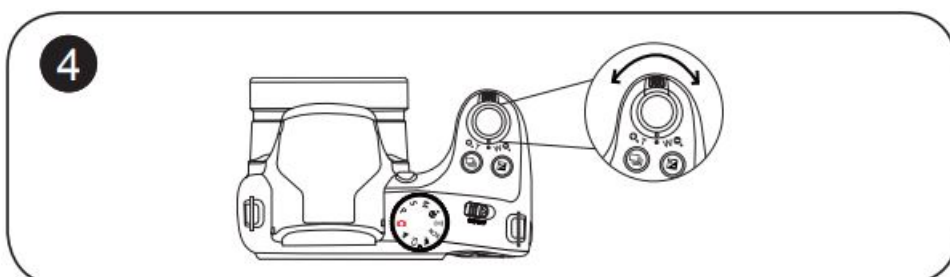






1. Hold the camera securely.
2. Use the zoom lever to select Tele or Wide positions to zoom in or out on your subject.
3. Press the shutter button half way to focus on the subject. When the focus box turns green, press the shutter

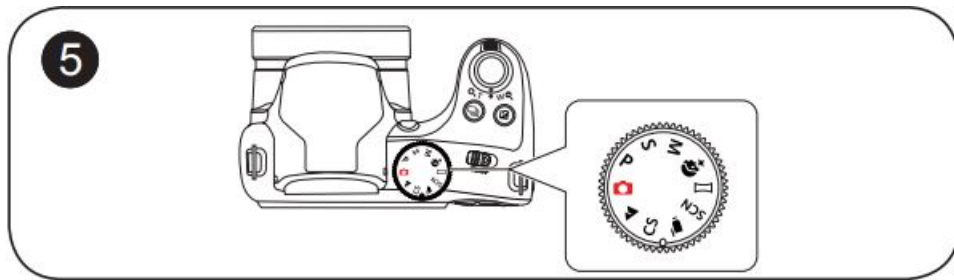button completely down to take the picture.


(5) Using the Mode Dial





This camera provides a convenient mode dial that allows you to manually switch among different camera settings with ease. Available modes are listed below:


	Auto Mode		Panorama Mode
P	Program AE	SCN	Scene Mode
S	Shutter priority		Movie Mode
M	Manual Mode	CS	Custom Settings
	Face Beautifier		Landscape Mode

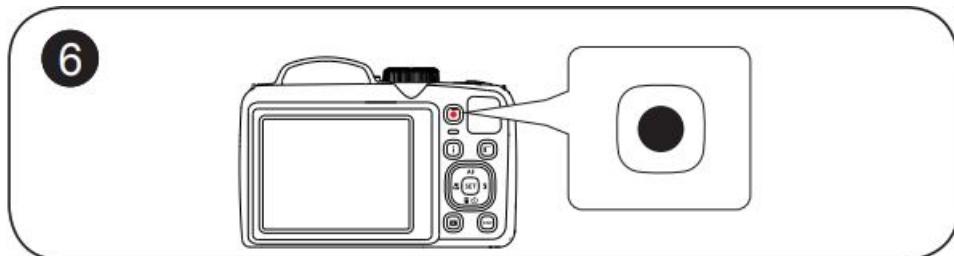

(6) Using the Fast Video Recording Button





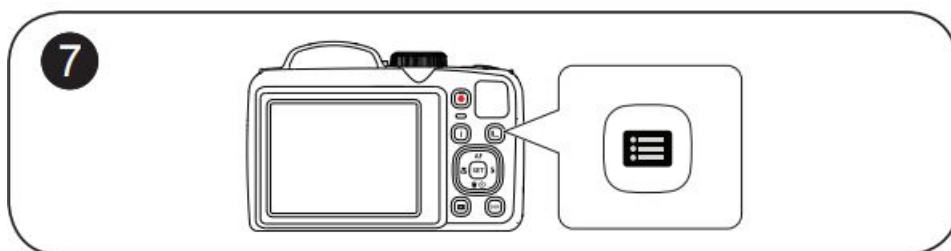





In shooting mode, press the  button to begin recording a video. After recording, press the  button again to stop recording. The camera will store the video and return to the shooting screen.

(7) Using the Menu Button



In each mode, press the  button to access the “Easy Menu”. Press the up/ down buttons to move among options, then press the **(SET)** button to make a selection. Choosing the  within this list will provide access to the “Full

Shooting Mode		Playback Mode	
	Shoot Settings		Playback Settings
	General Settings		General Settings
	Connection Settings		Connection Settings
	File Settings		File Settings

(8) Flash Mode

Pop up the flash manually as needed.

The Camera User Manual is available at the website location below:

Americas



<http://kodakpixpro.com/Americas/support/downloads.php>

Europe



<http://www.kodakpixpro.com/Europe/support/multi-lang-downloads.php>

The Kodak trademark, logo and trade dress are used under license from Kodak.
 © 2015 JK Imaging Ltd. All Rights Reserved. JK Imaging Ltd.,
 17239 So. Main Street, Gardena, CA 90248 USA JK Imaging Europe,
 71 Clarendon Road, Watford, WD17 1DS, UK kodakpixpro.com

Contents [[hide](#)]

[1 Documents / Resources](#)

[1.1 References](#)

[2 Related Posts](#)

Documents / Resources



[KODAK Digital Camera](#) [pdf] User Guide
 Digital Camera, PIXPRO AZ252

References

- [Kodak PIXPRO Digital Cameras](#)

