



ORBIC JOURNEY V FLIP PHONE

User Guide



About this Item

The Orbic Journey V is a basic flip phone that offers essential features for communication and convenience. It has a compact and durable design, making it a suitable choice for individuals who prioritize simplicity and reliability in a mobile device.

The phone features a 2.8-inch internal display and a smaller external display that shows incoming calls and messages. It has a 2-megapixel camera, which allows you to capture photos and videos. The device has a 1,500mAh battery, which provides up to 16 hours of talk time and up to 16 days of standby time.

The Orbic Journey V supports 4G LTE connectivity and has Bluetooth and Wi-Fi capabilities. It also comes with 8GB of internal storage, which can be expanded up to 32GB using a microSD card.

The phone includes useful features like a calendar, alarm clock, calculator, and FM radio. It also has a built-in hearing aid compatibility rating of M4/T4, which can be helpful for individuals with hearing impairments.

Overall, the Orbic Journey V is a reliable and affordable option for those looking for a basic flip phone with essential features for communication and convenience.

Features

The Orbic Journey V flip phone has several features that make it a suitable choice for individuals who prioritize simplicity and reliability in a mobile device. Here are some of its key features:

Design: The phone has a compact and durable design that fits easily in your pocket or purse. The flip design helps protect the screen and keyboard when not in use.

Displays: The device has a 2.8-inch internal display and a smaller external display that shows incoming calls and messages.

Camera: The phone features a 2-megapixel camera that allows you to capture photos and videos.

Connectivity: The Orbic Journey V supports 4G LTE connectivity, providing fast data speeds. It also has Bluetooth and Wi-Fi capabilities, allowing you to connect to other devices and networks.

Storage: The device has 8GB of internal storage, which can be expanded up to 32GB using a microSD card. This allows you to store photos, videos, and other media files on the phone.

Battery life: The phone has a 1,500mAh battery, which provides up to 16 hours of talk time and up to 16 days of standby time. This means you can use the device for extended periods without needing to charge it frequently.

Parts Description



Parts Description



Inserting SIM Card and MicroSD Card

With the phone facing down, insert your fingernail into the cutout located on the bottom of the back cover and gently lift the cover.



Locate the slot for the SIM card and gently slide the SIM card tray down to unlock the tray.

Place the SIM card with the gold contacts facing down. Gently slide the SIM card tray up to lock tray.

MicroSD card is sold separately.

If you have a SD card, remove the back cover (as demonstrated in the previous instructions).

Position the microSD card with the label side facing up and the gold contacts toward the slot (at the upper-right side of the phone), carefully slide the SD tray to the right to unlock it, then place the SD card in place and lock the tray by sliding left.



Charge the Battery

Before turning on the phone, charge it fully. Insert the battery, making sure the gold contacts line up.

Push in and press down gently to secure. Place the back cover over the back of the phone and then press down along the edges to secure. Insert the small end of the USB cable into the phone. Insert the larger end into the charger and plug the charger into an outlet.

USB Cable



Charger Adapter



FAQ



[Manuals.plus](https://www.manuals.plus)

- **How do I use my Verizon Orbic flip phone?**

From the main screen on your Orbic® Journey™ L, choose. ...

From the 'Full Readout' screen, highlight the preferred option (on / off) then select 'Set' to continue.

From the 'Set up Wi-Fi' screen, select an option: ...

From the 'Phone activation' screen press the. ...

From the 'Ready to go

- **How do I delete text messages on my Orbic flip phone?**

From the main screen, press the. right soft key. to choose Message.

Highlight then select the desired conversation. Utilize the 5-way navigation pad to highlight and the center button to select.

Highlight then select the desired message within the conversation.

Select. Delete. then select. OK.

FAQ



[Manuals.plus](https://www.manuals.plus)

- **How do you adjust bass and treble?**

The feature is hidden I found it by accident. It was a while ago but I think you hold down the BT button for seconds and hit down on volume then you can adjust the bass from 1 through 5. There is smart sound on/ night mode as well. Except you hold the mute button 5 seconds hit volume down for night mode or volume up to shut off smart sound.

- **Can the simulated 5.1 rear surround effect be turned off?**

If you are referring to the Smart mode, which is enabled by default, you can enjoy TV programs with rich sound effects. You can reduce sound effects by disabling the smart mode and switching to the standard mode. Using the remote control, press and hold the mute button for more than three seconds, and then press +.