



# JUNIOR ELECTRONIC DRUM KIT

JDD200

USER MANUAL



---

**¡ADVERTENCIA!**

ES

 
 
 
 
 
 






No abra la tapa. No intente reparar el aparato usted mismo. Llévelo a reparar por personal calificado.  
No coloque el aparato cerca de fuentes de calor excesivo o donde esté expuesto a luz solar directa, golpes, vibraciones o polvo.  
Evite lugares expuestos a humedad. No ponga objetos llenos de líquidos en la superficie de este aparato.  
No se deben colocar fuentes de llama desnuda, como velas encendidas, en la superficie de este aparato.  
Mantenga suficiente espacio alrededor del aparato para permitir una ventilación adecuada. No obstruya o tape las aberturas con objetos como periódicos, manteles, cortinas, etc.  
Para evitar lesiones, este aparato debe fijarse con seguridad al piso o pared de acuerdo con las instrucciones de instalación.  
El enchufe se utiliza para desconectar el producto de la corriente. Si nota algún defecto, desconéctelo de la toma de corriente.

**VARNING!**

SE

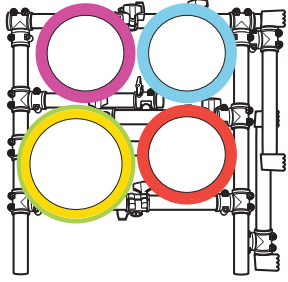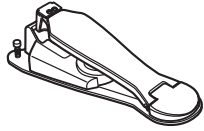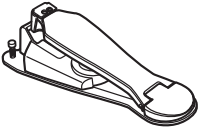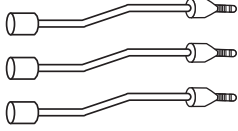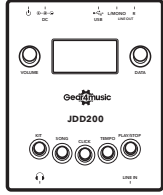
Öppna ej locket. Inga användarvänliga delar inuti. För reparationer vänd er till kvalificerad servicepersonal  
Ställ ej produkten vid en värmekälla t.ex element, i direkt solljus, damm, elektronisk vibration eller shock.  
Produkten bör ej bli utsatt för droppande eller stänk och inga objekt fyllda med vätskor som t.ex vaser skall ställas på produkten.  
Ingen källa till öppna flammor som t.ex tända ljus bör placeras på produkten.  
Tillåt tillräcklig luftcirkulation och blockera ej eventuella ventiler för att undvika intern överhettning.  
Ventilen bör ej täckas av föremål såsom tidningar, dukar, gardiner etc.  
För att undvika skada måste denna produkt vara fastsatt på golvet eller i väggen enligt instruktionerna.  
Nätkontakten används för att koppla bort apparaten från eluttaget. Se till att eluttaget är lättåtkomligt och avlägsna kontakten från eluttaget om du upptäcker något abnormalt med produkten.

# CONTENTS

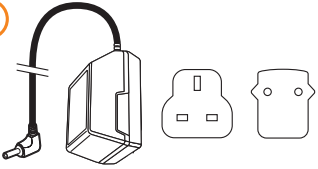 
<p>1</p> 	<p>2</p>  <p>X3</p>	<p>3</p> 
<p>4</p> 	<p>5</p>  <p>X3</p>	<p>6</p> 
<p>A</p>  <p>X3</p>	<p>B</p>  <p>X3</p>	<p>C</p> 
<p>D</p> 	<p>E</p> 	<p>F</p> 

# ATTACH THE PARTS

 
1.

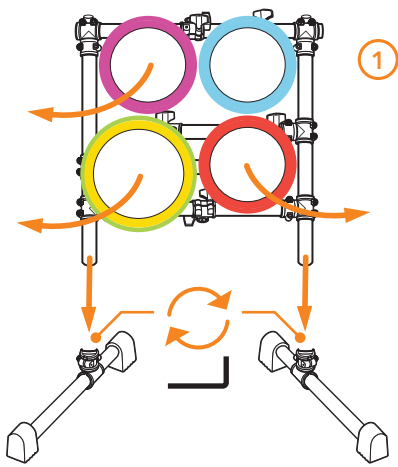

 
2.

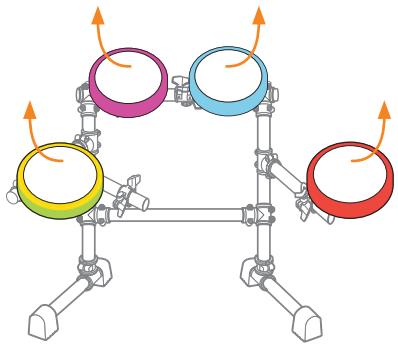

 
3.

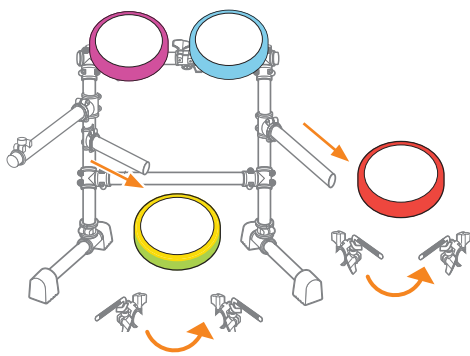

 
4.

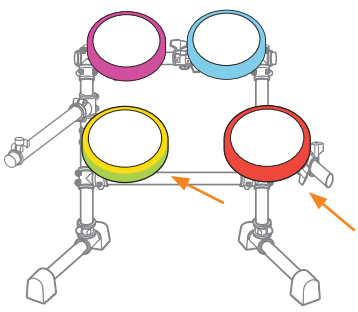

 5.

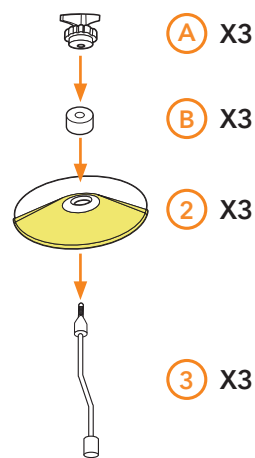


 6.

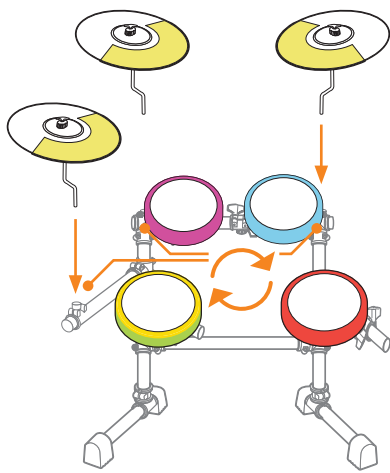


# ATTACH THE PARTS

 
7.

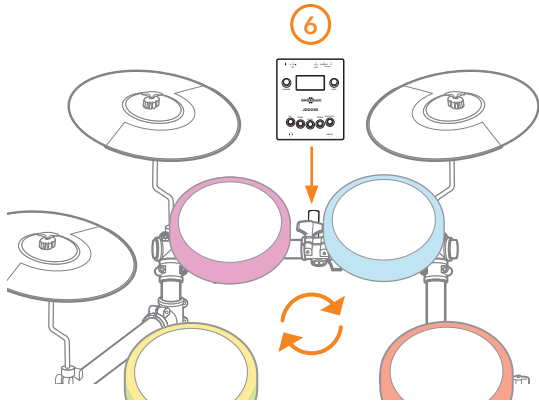

 8.

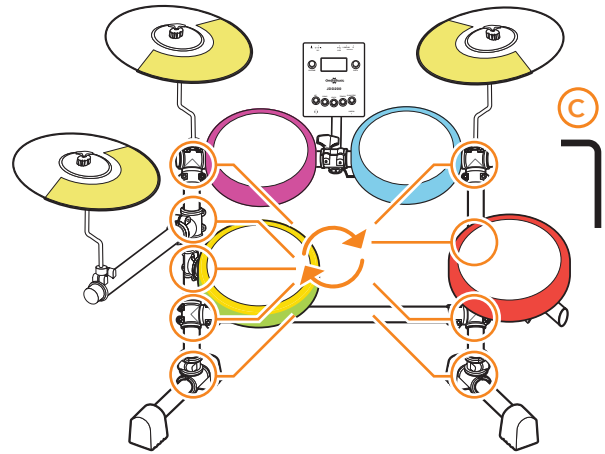


 9.

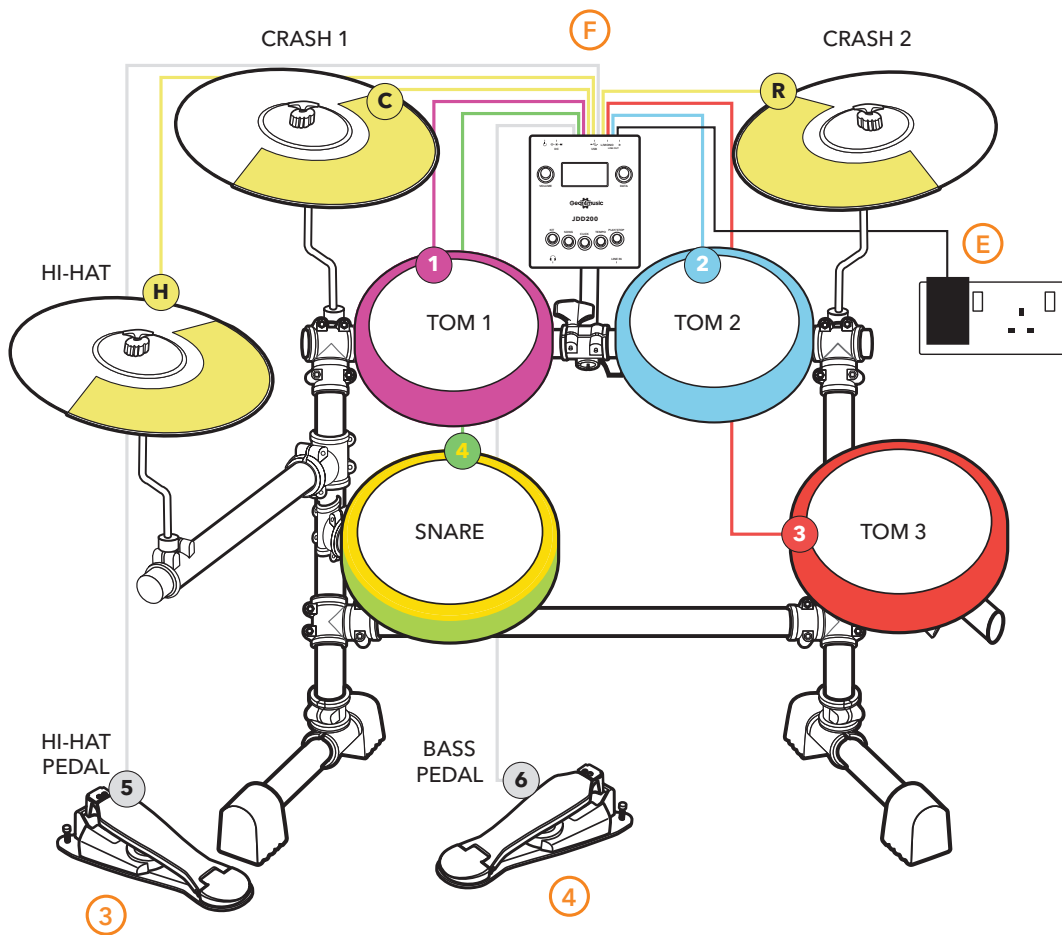

---

# FUNCTIONS

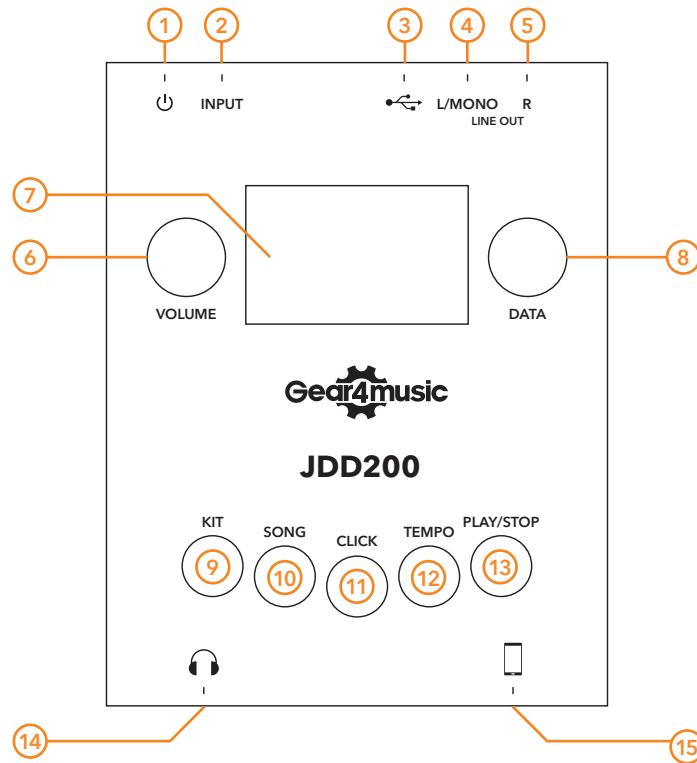 

## 1. POWER

Used to switch the JDD200 off or on. A power supply needs to be connected to enable the module to work. Use the switch to select OFF or ON.

## 2. DC

Used to connect the included 9v power supply for providing power to the module.

NOTE - only use the included power supply.

## 3. USB

Used for connecting to a computer for USB MIDI connectivity.

## 4. L/MONO

Line out jack output, use a jack cable to connect to an amplifier, drum monitor, interface or PA system. Not suitable for headphones. Using one jack cable only in this output creates a mono output.

## 5. R

Line out jack output, when using two jack cables for stereo output, this will carry the right sided signal. Connect to a stereo amplifier, drum monitor, interface or PA system.

## 6. VOLUME

Control for adjusting the volume on the drum kit.

## 7. SCREEN

Used to display information from the module.

## 8. DATA

Used to adjust settings within the drum kit after being selected by the individual buttons below.

## 9. KITS

Used to scroll through and choose which of the 38 drum kit sounds you want to use. Press the KITS button and rotate the DATA wheel to select, the SCREEN will display which number kit is currently active. The SCREEN will show D.01 - D.38 to display this information.

## 10. SONG

Used to select one of the accompaniment songs that are built in to the drum kit. Press the SONG button to activate this mode, then use the DATA wheel to scroll through the 44 choices. The SCREEN will show S.01 - S.44 to display this information. Use the PLAY/STOP button to start the song playing, pressing again to stop the song. An index of songs is available later in the manual.

---

## 11. CLICK

Press this button to activate the metronome. You have the choice of several different rhythms; the screen will show C.01 - C.12 depending on the desired rhythm.

### NOTE

The CLICK button can mute the drum accompaniment during SONG mode, so that you can play along to the rhythm track yourself.

## 12. TEMPO

Used to adjust the tempo that the metronome counts at, as well as changing the speed of a song. Pressing the tempo button will display a number on the SCREEN. Use the DATA wheel to increase or decrease this value from 40 - 250.

## 13. PLAY/STOP

Used to start and stop song accompaniment.

## 14. HEADPHONES

For connecting your stereo headphones via 3.5mm minijack. Make sure the drum kit volume is low before using the headphones, and then turn up to your desired volume.

## 15. LINE IN

Used to connect external audio devices such as a laptop or mp3 player to the drum kit. This is useful for playing along to your own music. The volume can only be controlled via the external audio device. Ensure the output volume on the external audio device is low before connecting, and then turn up to the desired volume.



---

## KIT LIST

D.01 - Pop1  
D.02 - Pop 2  
D.03 - Studio 1  
D.04 - Studio 2  
D.05 - Studio 3  
D.06 - Garage  
D.07 - Jazz  
D.08 - Indie  
D.09 - Hard Rock  
D.10 - Old Rock  
D.11 - Funky Jazz  
D.12 - Funky Jazz 2  
D.13 - Fusion  
D.14 - Dance  
D.15 - Electric  
D.16 - Modern  
D.17 - Latin  
D.18 - Alternative  
D.19 - Bubinga  
D.20 - Samba  
D.21 - Custom 1  
D.22 - Custom 2  
D.23 - Pop Live  
D.24 - Club Dance  
D.25 - Progress  
D.26 - GM Standard  
D.27 - GM Room Set  
D.28 - GM Power Set  
D.29 - GM Electric Set  
D.30 - Percussion 1  
D.31 - Percussion 2

## SONG LIST

S.01 - Acid Jazz  
S.02 - Ballad Beat  
S.03 - Big Band  
S.04 - Breakbeat  
S.05 - Cha Cha  
S.06 - Cool Soul  
S.07 - Dancey Pop  
S.08 - Dixie  
S.09 - Easy Beat  
S.10 - Easy Rock  
S.11 - Easy Soul  
S.12 - Fast Funk  
S.13 - Folk  
S.14 - Folk Shuffle  
S.15 - Funk  
S.16 - Hard Rock  
S.17 - Hard Rock 2  
S.18 - Hip Hop  
S.19 - Jazz Dance  
S.20 - Mambo  
S.21 - Polka

S.22 - Pop Rock  
S.23 - Pop Swing  
S.24 - Pop  
S.25 - Pop Disco  
S.26 - Pop Ballad  
S.27 - Pop Waltz  
S.28 - R&B Ballad  
S.29 - Real Soul  
S.30 - Reggae  
S.31 - Rock Beat  
S.32 - Folk Rock  
S.33 - Salsa  
S.34 - Samba  
S.35 - Shuffle  
S.36 - Slow Beat  
S.37 - Slow Pop  
S.38 - Soft Beat  
S.39 - Soul  
S.40 - Standard Pop  
S.41 - Swing  
S.42 - Techno  
S.43 - Techno Pop  
S.44 - Waltz

## RHYTHM LIST

C.01 - 1/4 Notes  
C.02 - 1/8 Notes  
C.03 - Offbeat 1/8 Notes  
C.04 - 1/8 Note Triplets  
C.05 - 1/8 Triplet Pattern  
C.06 - 1/16 Notes  
C.07 - Offbeat 1/16 Notes  
C.08 - 1/16 Note Pattern  
C.09 - 1/16 Gallop Pattern  
C.10 - 1/16 Note Pattern with Rest  
C.11 - 1/16 Note Swing  
C.12 - 1/16 Note Triplets

MIDI CHART					
FUNCTION		TRANSMITTED	RECOGNISED	NOTES	
BASIC CHANNEL	DEFAULT CHANGED	10 x	1-8 & 10-16 x		
MODE	DEFAULT MESSAGE ALTERED	x x *****	Mode 3 x *****		
NOTE NUMBER	TRUE VOICE	0 - 127 *****	0 - 127 0 - 127		
VELOCITY	NOTE ON NOTE OFF	0 - 127 x	0 - 127 0 - 127		
AFTER TOUCH	KEYS CHANNELS	x x	x x		
PITCH BEND					
CONTROL CHANGE		0 1 4 5 6 7 10 11 64 65 66 67 71 72 73 74 80 81 90 91 120 121 123	x x	o o	Bank Select Modulation Foot Control Portamento Time Data Entry Volume Pan Expression Sustain Pedal Portamento ON/OFF Sostenuto Pedal Soft Pedal Resonance Release Time Attack Time Cut Off Reverb Program Chorus Program Reverb Level Chorus Level All Sound OFF Reset All Controller *1 All Notes OFF *1
PROGRAM CHANGE		x	o		
SYSTEM EXCLUSIVE		x	o		
SYSTEM COMMON	SONG POSITION SONG SELECT TUNE	x x x	x x x		
SYSTEM REAL TIME	CLOCK COMMANDS	x x	x x		
AUX MESSAGES	LOCAL ON/OFF ALL NOTES OFF ACTIVE SENSE RESET	x x x x	x x x x		

---

## SPECIFICATIONS

### PADS

Snare Pad . . . . .	.8" single trigger mesh pad
Tom Pads . . . . .	.6", single trigger mesh pad
Cymbal Pads . . . . .	Crash, ride and hi hat single trigger rubber pads
Kick Drum . . . . .	Pedal control

### MODULE

Preset kits . . . . .	38
Training patterns . . . . .	44
Controls . . . . .	Volume, kit select, song select, click, tempo adjust, start/stop, data scroll/select

### DIMENSIONS AND WEIGHTS

Set up dimensions . . . . .	.880 - 1120mm (H) x 600 - 800mm (W) x 540mm (D)
Fold down dimensions . . . . .	.750mm (H) x 540mm (W) x 350mm (D) (approx)
Playing footprint . . . . .	.900mm x 900mm
Weight . . . . .	.7.25kg

KETTLESTRING LANE | YORK | YO30 4XF | UNITED KINGDOM  
METALLVÄGEN 45A | 195 72 ROSERSBERG | STOCKHOLM | SVERIGE  
LAHNSTRASSE 27 | 45478 MÜLHEIM AN DER RUHR | DEUTSCHLAND

If you have any more questions about this product, please do not hesitate to contact the Gear4music Customer Service Team on: **+44 (0) 330 365 4444** or **[info@gear4music.com](mailto:info@gear4music.com)**