



**WARNING:** Before attempting to install or maintain this red dot sight, assure that your weapon is unloaded and the weapon safety is in the "safe" position.

### INSTALLING THE BATTERY

- Remove battery cap with included screwdriver.
- Insert a battery with positive (+) end up (Battery type CR1632).
- Tighten battery cap using screwdriver. Do not overtighten.

### MOUNTING THE SIGHT

- Loosen the rail screw, using the included torx wrench.
- Install the sight to the weapon rail by tightening the rail bolt. Be sure the bolt is positioned in a rail slot for proper fit.
- To avoid overtightening, tighten the screw until you meet light resistance, and then tighten another  $\frac{1}{2}$  to  $\frac{3}{4}$  turn (20 inch-lbs of torque).
- The sight can be removed from its low mount to be mounted directly on a Fastfire/Venom mount or handgun slide. Remove the two mount screws and reinstall as needed.
- If you plan to leave the sight mounted permanently, we recommend using Blue Loctite on the rail screw and mounting screws.

### OPERATION & ZEROING

**Operation:** Tap the power button to turn the red dot on, and cycle through brightness settings. When not in use, hold the power button for 2.5 seconds to shut down.

**Windage adjustment:** Turn side turret counter-clockwise to move point of impact right, clockwise to move point of impact left.

**Elevation adjustment:** Turn top turret counter-clockwise to move point of impact up, clockwise to move point of impact down.

**Zeroing:** When mounted correctly, the ARO typically only requires slight adjustment to zero.

1. Turn on the sight, set up a target at 25 yards, and fire 3 shots on center.
2. Find the center of your points of impact and adjust the windage and elevation accordingly using the included hex wrench. At 25 yards, each "click" of adjustment will move the point of impact by roughly  $\frac{1}{4}$ ". So if your point of impact is 1" low, you would adjust elevation "up" by 4 clicks.
3. Continue steps 1 and 2 until your sight is zeroed. Do not continue to adjust windage and elevation mechanisms if you encounter resistance – this can damage the sight.
4. Hold the power button for 2.5 seconds to shut down, and verify that your sight is mounted securely to your weapon

### WARRANTY

AT3 Tactical red dots sights come with a lifetime warranty. For full warranty details, visit [at3tactical.com/warranty](http://at3tactical.com/warranty)  
If you have any issues or need a replacement, please contact us via email: [support@at3tactical.com](mailto:support@at3tactical.com)

