

# 3M Gazebo Hub

## ASSEMBLY INSTRUCTIONS

Always ensure the tent is clean and dry before packing. There may be occasions when you have to pack the tent wet or dirty. This is ok for traveling as long as the tent is not left packed in this condition for any longer than 24 hours. Any moisture or dirt left in the tent will cause mildew to develop very quickly causing permanent damage to your tent.

NOTE: ALWAYS SELECT A CLEAR AND LEVEL CAMP SITE TO SET UP YOUR TENT, ENSURE IT IS CLEAR FROM TREES, STICKS AND SHARP ROCKS.

