

# USERS GUIDE

## 10PBS45x SERIES PUSHPLATE

### SINGLE POLE SWITCH PUSHPLATE


This pushplate is designed to fit neatly into standard single- or double-gang electrical boxes. The faceplates are made of 1/16" thick stainless steel for durable use. The pushplate may be hard wired to the door operator or connected to one of B.E.A.'s line of radio-controlled transmitters.

### RELATED OPTIONAL ACCESSORY

RADIO CONTROLLED TRANSMITTER AND RECEIVERS: Wide range of analog and digital transmitters and receivers

### INSTALLATION INSTRUCTIONS

1. Remove the two Phillips head screws from the faceplate of the pushplate.
2. Wire the switches of the pushplates to the door controllers or radio-controlled transmitters using the NO contact and common.
3. Fasten the disassembled pushplate to the single- or double-gang electrical box (by others) using the enclosed #6 screws.
4. Reattach the faceplate to the mounted backplate assembly.
5. Test the pushplate for proper activation.

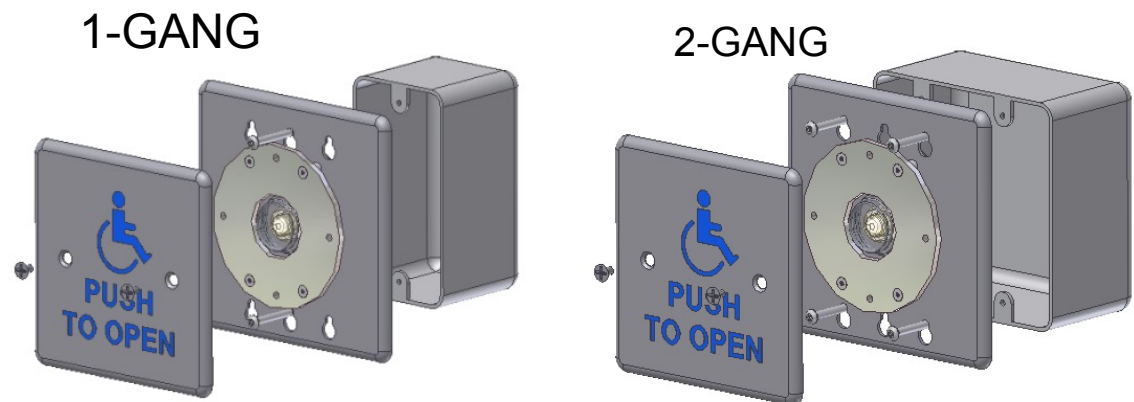

### PUSHPLATE CLEANING

The pushplates are constructed with durable stainless steel and painted with scuff-resistant coatings. To clean the plates, use only a damp, non-abrasive cloth. Repeated cleaning with harsh solvents or abrasive materials may cause deterioration of the coating. Please make the end-user aware of this procedure.

### TECHNICAL SUPPORT

If after troubleshooting a problem, a satisfactory solution cannot be achieved, please call B.E.A., Inc. for further assistance during Eastern Standard Time at 1-800-523-2462 from 7am - 5pm or 1-800-407-4545 from 5pm - midnight & weekends.

**DO NOT** leave any problem unresolved. If you must wait for the following workday to call B.E.A., leave the door inoperable until satisfactory repairs can be made. **NEVER** sacrifice the safe operation of the automatic door or gate for an incomplete solution.