

ELINCHROM STUDIO APP / SOFTWARE

Speed up your workflow with the Elinchrom App / Software and take control of your light wherever you are.


- Control up to 20 units
- Save and reload presets
- Edit a friendly name
- Change group by drag & drop

Available on macOS, Windows, Android and iOS



www.elinchrom.com/range/app-software/

FIVE CONNECTION

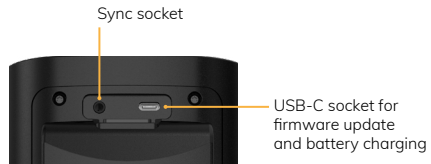

ERROR MANAGEMENT

Description	Solution
Capacitor overvoltage	Switch the unit off, wait 2 minutes and switch the unit on again. If the error shows up again the unit requires a check-up at an authorized Elinchrom Service Centre.
Charge timeout	
Voltage unstable (Charge hold error)	
Discharge circuit error	
Overtemperature	



www.elinchrom.ch/support



www.elinchrom.com



Elinchrom is a registered trademark of ELINCHROM LTD, RENENS, SWITZERLAND

QSG FIVE - 73334 - 05.2022

Av. de Longemalle 11, CH-1020 Renens, Switzerland
Tel. : + 41 21 637 26 77 / e-mail: support@elinchrom.ch

 **elinchrom®**

FIVE

Battery
Monolight




Quick Start Guide

SETUP MENU


Radio	Mode	Off	Normal
	Group	1-4	
	Frequency	1-20	
	Bluetooth	Off / On	
	Wireless update	>>>	
Flash mode	Flash mode	Standard	Action
	Recycling time	Eco	Fast
	Flash before ready	No	Yes
	Scale	EL-scale / 1-10 / Ws	
Photocell	Mode	Off	On
Extras	Auto stand-by	Off	1-60 min.
	Auto-off	Off	1-60 min.
	Auto-on	No	Yes
	Favorite function	Flash mode, Recycling time, Flash before ready, Skyport Group, Photocell mode, Background	
	Logo mode	Low, High, Off, Low on ready, High on ready	
	Logo color	Group color	White
	Ready tone	1-12	
	Ready volume	Off, Min, Low, Default, High, Max	
	Error volume	Off, Min, Low, Default, High, Max	
	Keyboard click	Off, Min, Low, Default, High, Max	
Info	Background	Black	White
	Friendly name	"FIVE" by default (set by computer)	
	Firmware rev.	*****	
	Skyport ID	*****	
	Life time	In hours (hhh:mm)	
	Power-on count	How many times the units has been turned on	
Flash count	Total flash number		

1. Menu selected
2. Selected menu options
3. Menu option settings navigation
4. Exit menu navigation
5. Back

Knob Button :
Scroll function to change setting /
press function to enter the menu option.

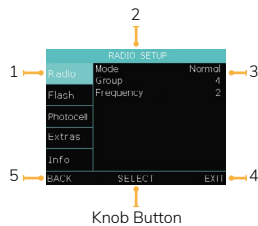


CONTROL PANEL

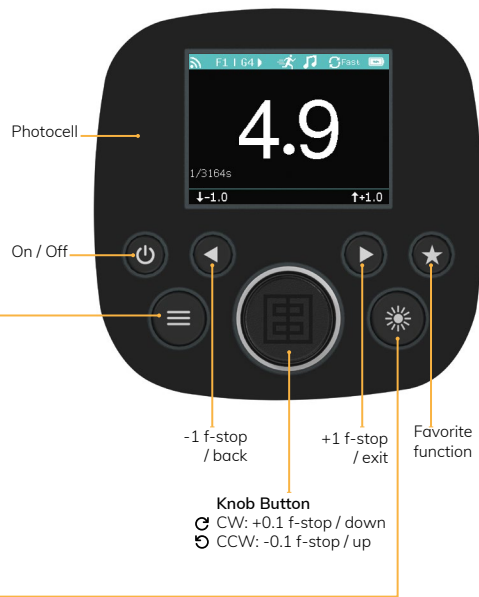


MODELLING LAMP BUTTON

Long press to enter the menu.
Press menu for Mode, VFC, Timer,
Scale and CCT.

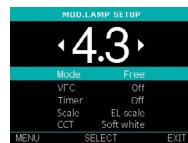

DISPLAY PANEL – DASHBOARD

The colours of the upper bar correspond to the group number :
blue for the group 1, orange for the group 2, red for the group 3
and green for the group 4.

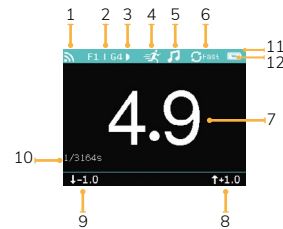

1. EL-Skyport synchronisation
2. EL-Skyport frequency channel and group number
3. Photocell status
4. Flash mode Action
5. Volume
6. Recycling time
7. Power setting in f-stop equivalents
8. Increase by 1 f-stop
9. Decrease by 1 f-stop
10. Flash duration value
11. The colour in the upper bar indicates the group
12. Battery status