

## REMOTE PAIRING PROCEDURE

The key fob comes paired with the controller from the manufacturer. If you need to replace the key fob or if you want to use a second key fob follow the below procedure.



### WARNING:



USE EXTREME CAUTION AFTER CONTROLLER COVER HAS BEEN REMOVED TO AVOID POTENTIAL CURCUIT BOARD DAMAGE AND CONTACT WITH POWER SOURCE

**NEVER REACH INTO CONTROLLER WITH METAL OBJECTS**

1. Controller must be connected to power to complete pairing procedure
2. Remove guard & control from Hose Reel (Image1)
3. Remove 4 screws that hold cover onto the enclosure
4. On the small receiver board you will find a small blue button (Image2)

### ⚠ CAUTION - CONTROL BOARD IS FRAGILE

5. Carefully push the small blue button – Red light will appear & stay a solid color (Image3)
6. Push the **UP** button on key fob – Red light should flash & go out (Image4)
7. Release the **UP** button
8. Test Connection - Push the **UP** button on the key fob again & the motor should start running. If connection test fails repeat steps 6 through 9.
9. Optional Step - If you are programming a second remote repeat steps 6 through 9.
10. Reassemble cover using the 4 screws removed in step 4, Install Controller to Guard, Install Controller & Guard assembly to the hose reel.

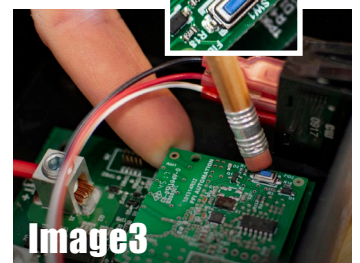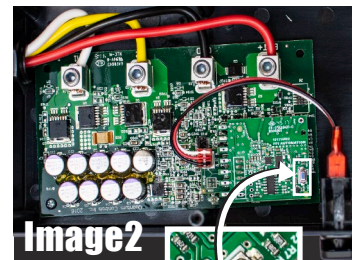

### TECHNICAL ASSISTANCE:

For technical assistance please call 701-281-1729 or 1-800-333-2314 and one of our technical support representatives will be happy to help you.