

Wheel Spacers

Item	Model #	Description	Qty
5,6,7	9454	504520 Wheel Spacer Kit (7/16" Studs & Nuts)	4
5,6,7	1280	504520 Wheel Spacer Ring (7/16" Studs & Nuts)	1
5,6,7	9455	606015 Wheel Spacer Kit (9/16" Studs & Nuts)	4
5,6,7	1281	606015 Wheel Spacer Ring (9/16" Studs & Nuts)	1
5,6,7,8,9,10	9457	616015 Wheel Spacer Kit (9/16" Bolts & Nuts)	4
5,6,7,8,9,10	9466	616015 Wheel Spacer Ring (9/16" Bolts & Nuts)	1
5,6,7	9458	636015 Wheel Spacer Kit (9/16" Studs & Nuts) (no pilot)	4
5,6,7	1286	636015 Wheel Spacer Ring (9/16" Studs & Nuts) (no pilot)	1
2,3,4	9460	808015 Wheel Spacer Kit (9/16" Studs & Nuts)	4
2,3,4	1282	808015 Wheel Spacer Ring (9/16" Studs & Nuts)	1
2,3,4	9461	808020 Wheel Spacer Kit (9/16" Studs & Nuts)	4
2,3,4	1284	808020 Wheel Spacer Ring (9/16" Studs & Nuts)	1
2,3,4	9463	828020 Wheel Spacer Kit (5/8" Studs & Nuts)	4
2,3,4	1287	828020 Wheel Spacer Ring (5/8" Studs & Nuts)	1
1,2,4	9464	838020 Wheel Spacer Kit (5/8" Studs and Flange Nuts)	4
1,2,4	1290	838020 Wheel Spacer Ring (5/8" Studs and Flange Nuts)	1
1,2,4	848020	848020 Wheel Spacer Kit (5/8" Studs and Flange Nuts)	4
1,2,4	3478	848020 Wheel Spacer Ring (5/8" Studs and Flange Nuts)	1
2,3,10	888025	888025 Wheel Spacer Kit (16mm Bolts & Nuts)	4
2,3,10	13255	888025 Wheel Spacer Ring (16mm x 1.5mm Studs & Nuts)	1
2,1,4	838025	838025 Wheel Spacer Kit (5/8" Studs & Flange Nuts)	4
2,1,4	3873	838025 Wheel Spacer Ring (5/8" Studs & Flange Nuts)	1
11,12	9451	108520 Wheel Spacer Kit (9/16" Studs & Nuts)	4
11,12	1283	108520 Wheel Spacer Ring (9/16" Studs & Nuts)	1
11,12	9452	108715 Wheel Spacer Kit (Includes Reach Nuts)	4
11,12	1288	108715 Wheel Spacer Ring (Reach Nuts Sold Separately)	1
7,10	9456	606720 JCB 165 - 6 Bolt Wheel Spacer Kit (w/ Bolts)	4
7	7987	606720 JCB 165 - 6-Bolt Wheel Spacer Ring (Bolts Sold Separately)	1
7,10	9459	806720 JCB 185 & 1105 - 8-Bolt Wheel Spacer Kit (w/ Bolts)	4
7	7988	806720 JCB 185 & 1105 - 8-Bolt Wheel Spacer Ring (Bolts Sold Separately)	1
2,3,4	9467	888015 Wheel Spacer Kit (16mm x 1.5mm Studs & Nuts)	4
2,3,4	14043	888015 Wheel Spacer Ring (16mm x 1.5mm Studs & Nuts)	1
2,3,4	9469	888020 Wheel Spacer Kit (16mm x 1.5mm Studs & Nuts)	4
2,3,4	13943	888020 Wheel Spacer Ring (16mm x 1.5mm Studs & Nuts)	1
2,3,4	9470	8810720 Wheel Spacer Kit (16mm x 1.5mm Studs & Nuts)	4
2,3,4	13997	8810720 Wheel Spacer Ring (16mm x 1.5mm Studs & Nuts)	1
2,3,4	9471	8010720 Wheel Spacer Kit (9/16" Studs & Nuts)	4
2,3,4	13945	8010720 Wheel Spacer Ring (9/16" Studs & Nuts)	1
2,3,4	9472	898015 Wheel Spacer Kit (16mm x 2.0mm Studs & Nuts)	4
2,3,4	15151	898015 Wheel Spacer Ring (16mm x 2.0mm Studs & Nuts)	1
2,3,4	9473	898020 Wheel Spacer Kit (16mm x 2.0mm Studs & Nuts)	4
2,3,4	15153	898020 Wheel Spacer Ring (16mm x 2.0mm Studs & Nuts)	1
2,3,4	828025	828025 Wheel Spacer Kit (5/8" Studs & Nuts)	4