



Trivac NT 5/10 Spare Parts List

Pos.	Quantity	Description	Bestell-Nr. Ref. No.
A	1	Spare part kit for the exchange of the radial shaft seal (includes all material needed)	EK110002814
B	1	Vacuum generator Minor maintenance kit (includes all seal, no oil)	EK110002815
C	1	Major maintenance kit (includes all wear and sealing parts needed for a major maintenance, no oil)	EK110002816
C	1	Major maintenance kit (includes all wear and sealing parts needed for a major maintenance, no oil)	EK110002817