



MUBEA

B0 40 P 200

User Manual



Transfer or reproduction of this document, use and account of its contents is not permitted, unless express permission is granted. Violators are obliged to pay for damages.

All rights reserved for granting of a patent or registration of an industrial design.

Subject to technical changes.

Manufacturer: **Muhr und Bender**
 Maschinenbau GmbH
 Postfach 340
 D-57427 Attendorn



Preface

These operating instructions contain all information required for the setup, commissioning, operation and servicing of your B0 40 P 200 Reinforcing Steel Bending Machine.

Please read this User Manual thoroughly, particularly chapter 2 "Safety", before working with the B0 40 P 200.

Keep this User Manual for future reference.

Safety regulations and important information that must be observed by all means are indicated by the following symbols:



This symbol is used to indicate safety regulations that must be observed to prevent persons from getting seriously injured. Also, if these safety regulations are not observed, the machine and its functions may be seriously damaged.



This symbol warns against dangerous electric voltage.



This symbol provides you with information intended to facilitate your work and support your understanding of the procedure previously described.

To give a better view of system components, some figures are shown without the prescribed safety covers installed.



When working with the B0 40 P 200 these safety covers must be installed by all means!

Technical Support

Germany: (Country code FRG) (02722) 62-244

USA: 1-800-255-5698

Spare parts and accessories

Germany: (Country code FRG) (02722) 62-368 or
(Country code FRG) (02722) 62-369

USA: 1-800-255-5698



Contents

Chapter		Page
1	General Information	
1.1	Technical Data.....	1 – 1
1.1.1	Mechanical	1 – 1
1.1.2	Electrical	1 – 1
1.1.3	Performance Specifications.....	1 – 1
1.2	General Description.....	1 – 2
1.3	Operating Controls	1 – 4
1.4	Extensions	1 – 14
2	Safety	
2.1	Proper Use	2 – 1
2.2	Misuse	2 – 1
2.3	General Information.....	2 – 2
2.4	Obligations of the Person Responsible for the Machine.....	2 – 3
2.5	Safety Instructions	2 – 4
3	Commissioning/Decommissioning	
3.1	Transport	3 – 1
3.1.1	Transport by Crane.....	3 – 1
3.1.2	Transport by Fork Lift	3 – 1
3.2	Setup	3 – 2
3.3	Connection to the Power Supply	3 – 2
3.4	Final Checks Prior to Commissioning.....	3 – 3
3.5	Decommissioning	3 – 3
4	Operation	
4.1	Preparations	4 – 1
4.2	Switching on the Machine.....	4 – 2
4.3	Automatic Mode.....	4 – 3
4.3.1	Program Selection	4 – 3
4.3.2	Working in Automatic Mode.....	4 – 19
4.4	Single Mode	4 – 20
4.5	Step Mode	4 – 21
4.6	Program Input.....	4 – 22
4.7	Data Transfer.....	4 – 23



Contents

Chapter		Page
4.8	Notes on Training	4 – 25
4.8.1	Accurate Bending	4 – 25
4.8.2	Example of a Bend	4 – 25
4.8.3	Working with the Countersupport	4 – 26
5	Adjustment Procedures	
5.1	Adjusting the Brake.....	5 – 1
5.2	Loading Programs and Machine Parameters	5 – 3
5.2.1	Loading Programs	5 – 3
5.2.2	Adjusting Machine Parameters.....	5 – 4
6	Maintenance	
6.1	Cleaning the Machine.....	6 – 1
6.2	Oil Change.....	6 – 1
6.3	Battery Change	6 – 3
6.4	Exchanging the Controller	6 – 4
7	Special Accessories	
7.1	Length Stop for Stirrup Bends	7 – 1
7.2	Fixture for Bending Coils, Rings and Large Radii.....	7 – 2
7.3	Fixture for Bending Crossover Stirrups and Loops.....	7 – 3
7.4	Fixture for Double Bends	7 – 3
7.5	Wheeled Underframe.....	7 – 4
8	Malfunctions and Their Remedy	
8.1	Error Messages	8 – 1
8.2	General Errors	8 – 2
9	Circuit Diagrams and Drawings	
10	Spare Parts Lists	

1 General Information

2 Safety

3 Commissioning/Decommissioning

4 Operation

5 Adjustment Procedures

6 Maintenance and Servicing

7 Special Equipment

8 Malfunctions and Their Remedy

9 Circuit Diagrams and Drawings

10 Spare Parts Lists