

MODEL 4900 PLANTERS

SERVICE MANUAL

M0253

2/14

This page left blank intentionally.


ALARMS


Low Population Single Row3
Low Population All Rows4
High Population Single Row5
High Population All Rows.6
Low Singulation Single Row7
Low Singulation All Rows8
Seed Sensor Communication Alarm9
Seed Meter MDM Communication Alarm . . .10
Insecticide MDM Communication Alarm . . .11
Insecticide No Flow Single Row12
Row Module Communication Alarm13
Bulk Fill Communication Alarm14
Low Tank Weight Alarm15
Low Down Force16
Increase Down Force Solenoid
 Not Detected Alarm19
Decrease Down Force Solenoid
 Not Detected Alarm20
Down Force Pressure Sensor
 Not Detected Alarm21
Low Fertilizer Rate Alarm Multiple Rows . . .22
High Fertilizer Rate Alarm Multiple Rows . . .24
Fertilizer Row No Flow Alarm25
Low Fertilizer Tank Level Alarm26
Low Vacuum Pressure Alarm28
High Vacuum Pressure Alarm30
Low Bulk Fill Pressure Alarm.31
High Bulk Fill Pressure Alarm32
Planter will not turn on
 with Master Switch33
Screens do not load on
 VT (Virtual Terminal)34
Planter will not load into Task Controller35
Update will not load36


Reference Material


Operators Manual = *Italic underlined text*


Virtual Terminal (VT) = *(Italic underlined text in parenthesis)*

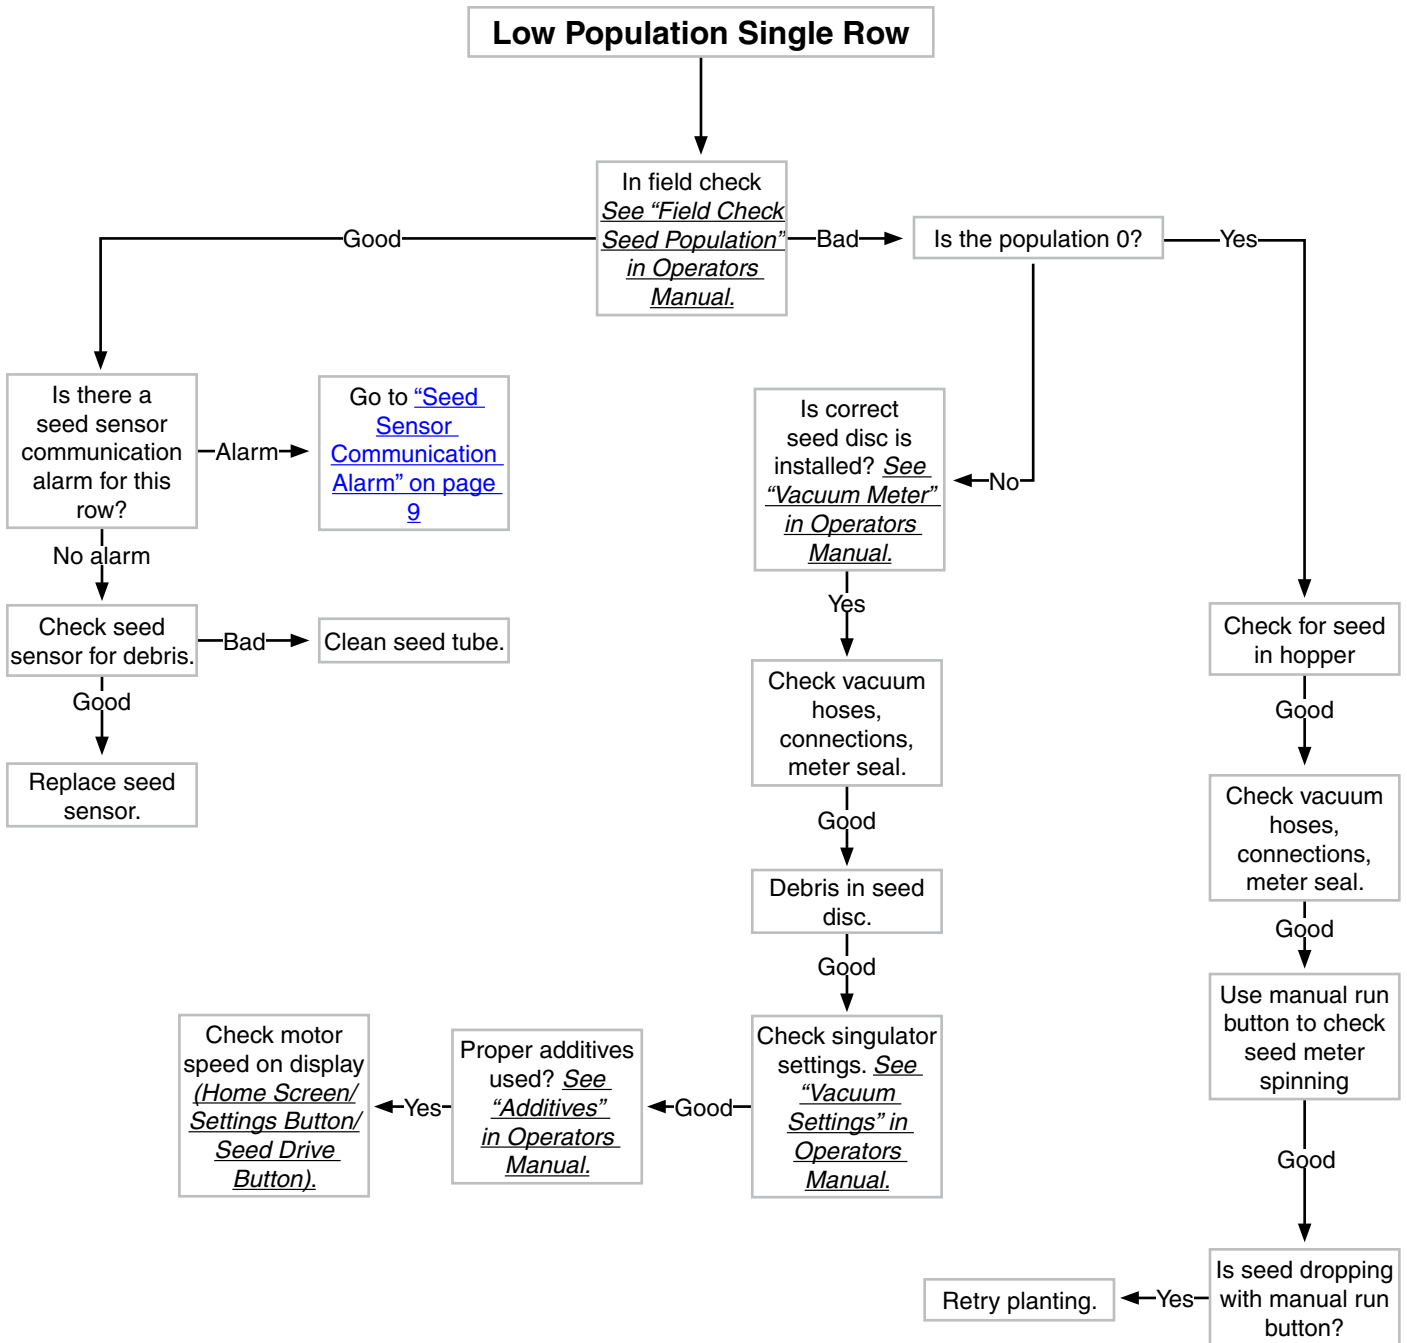


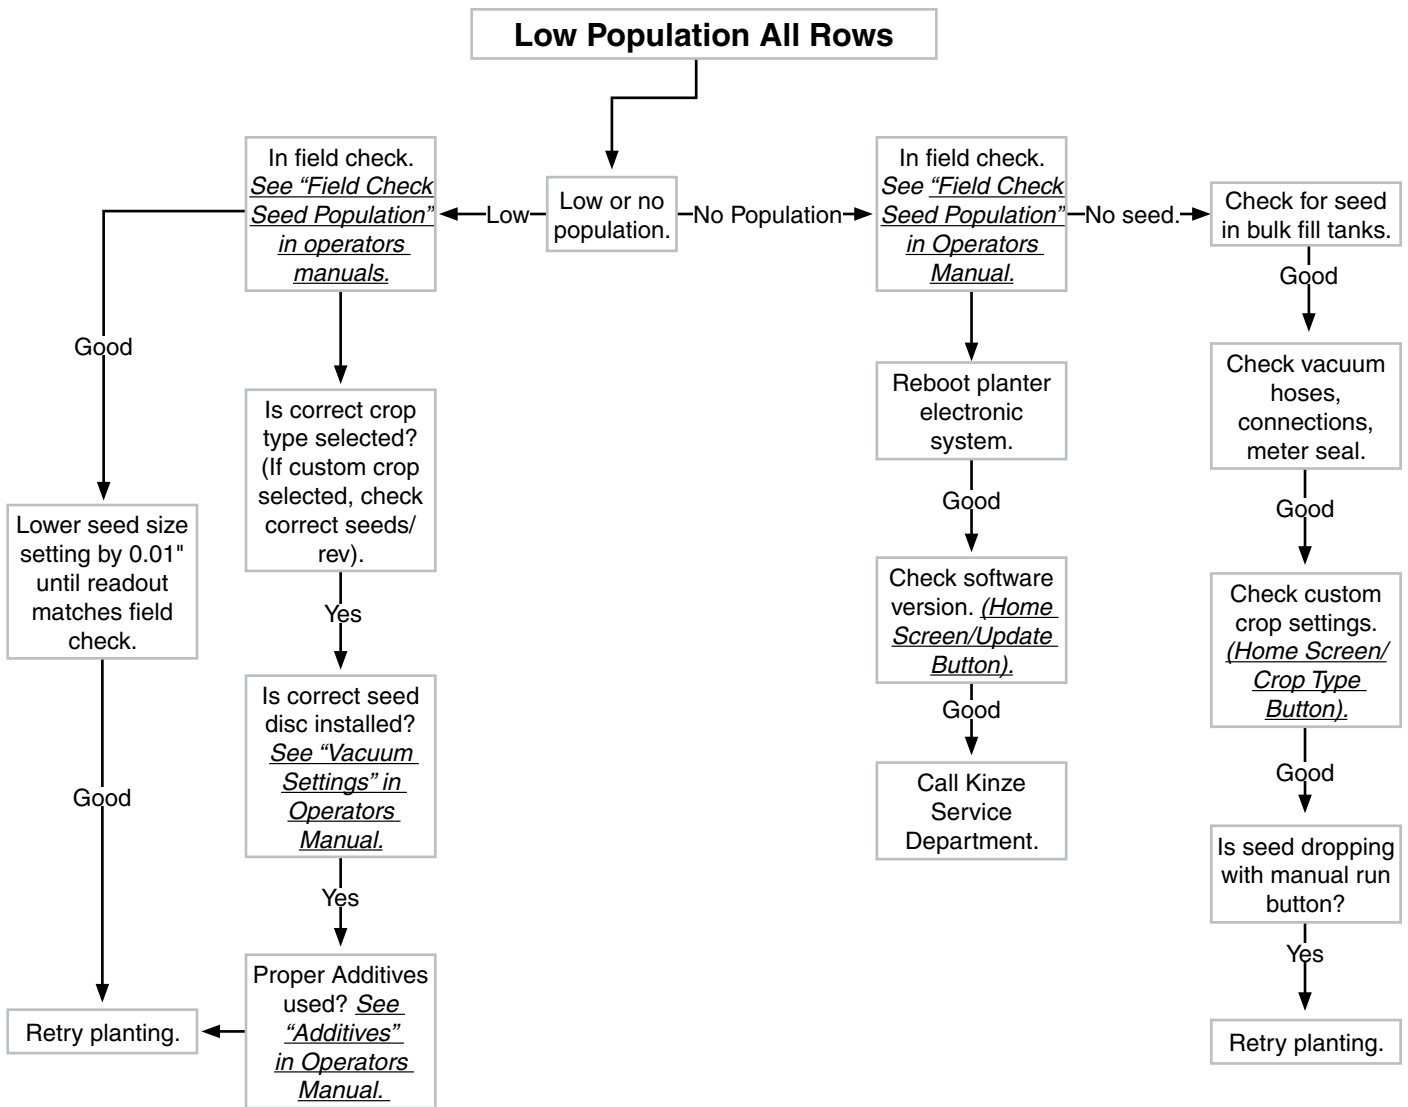


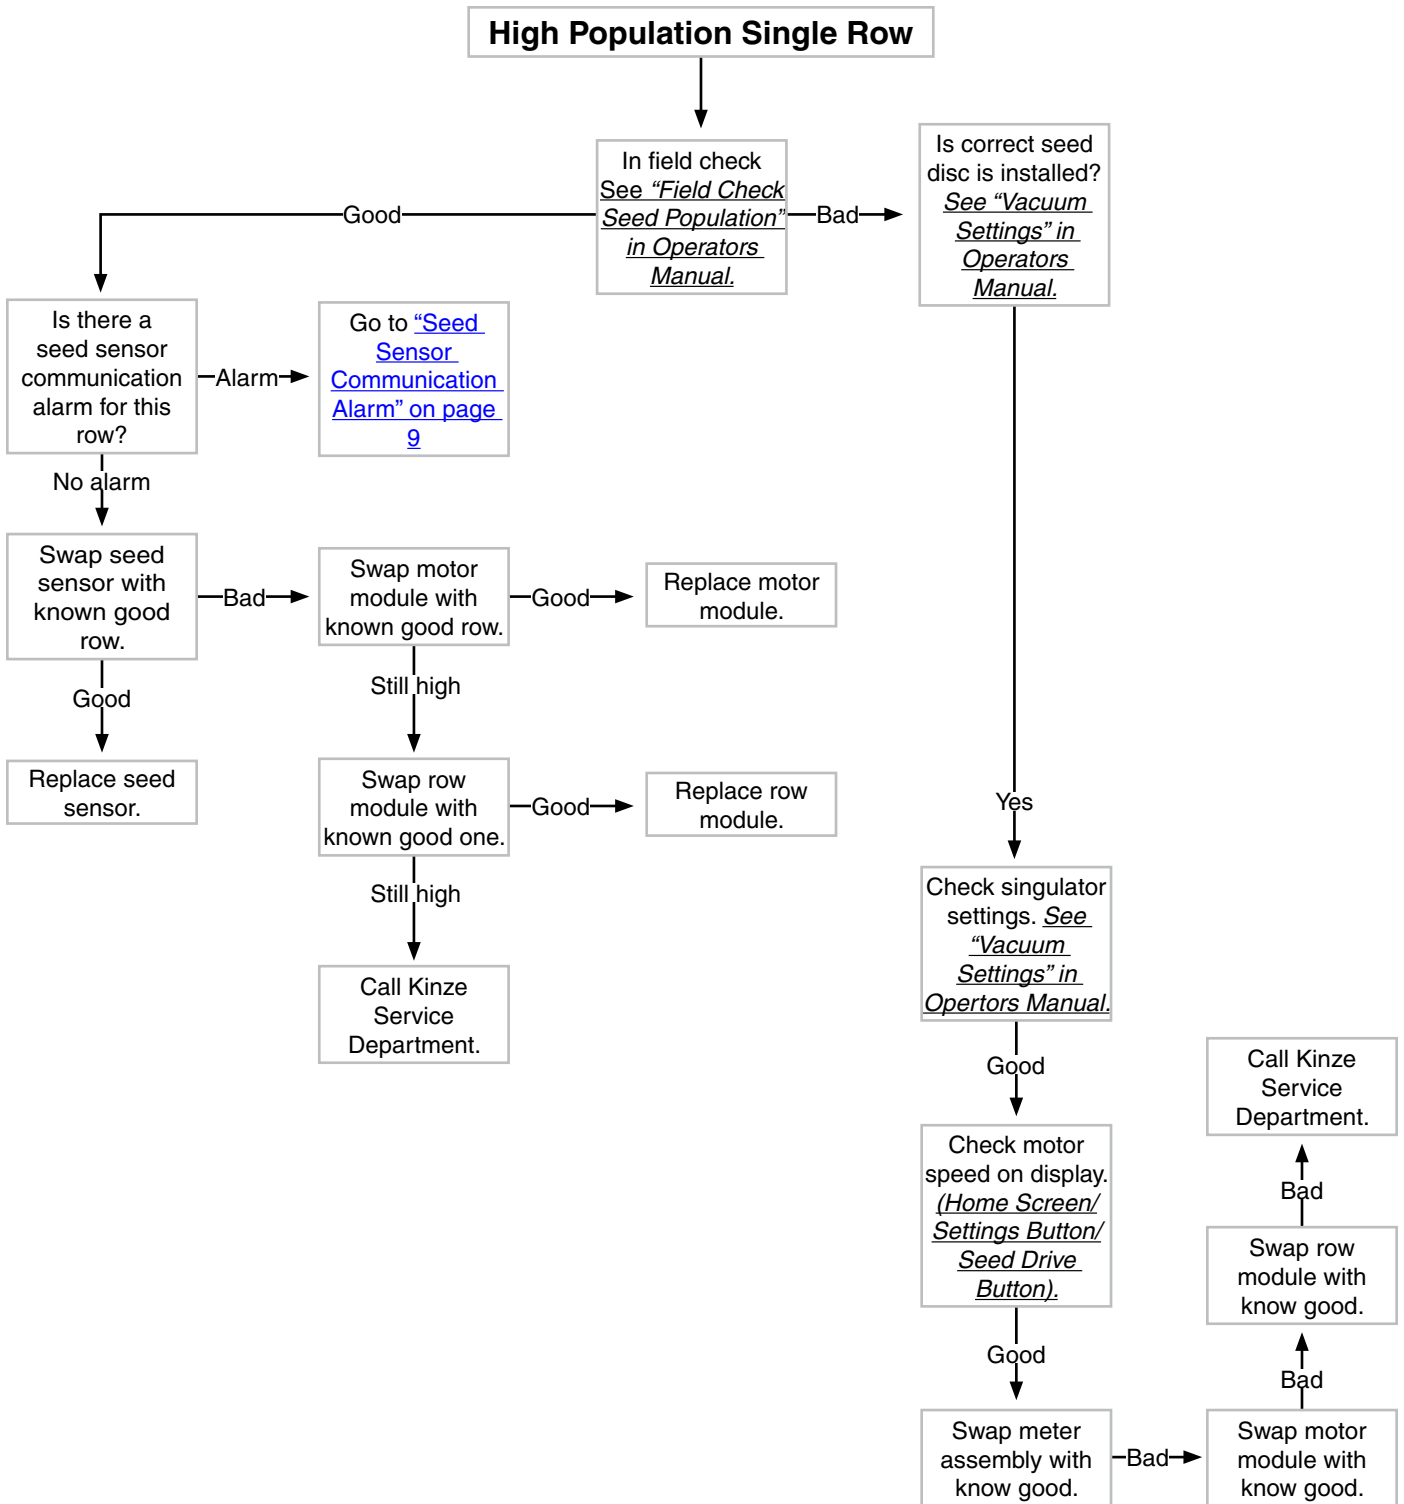


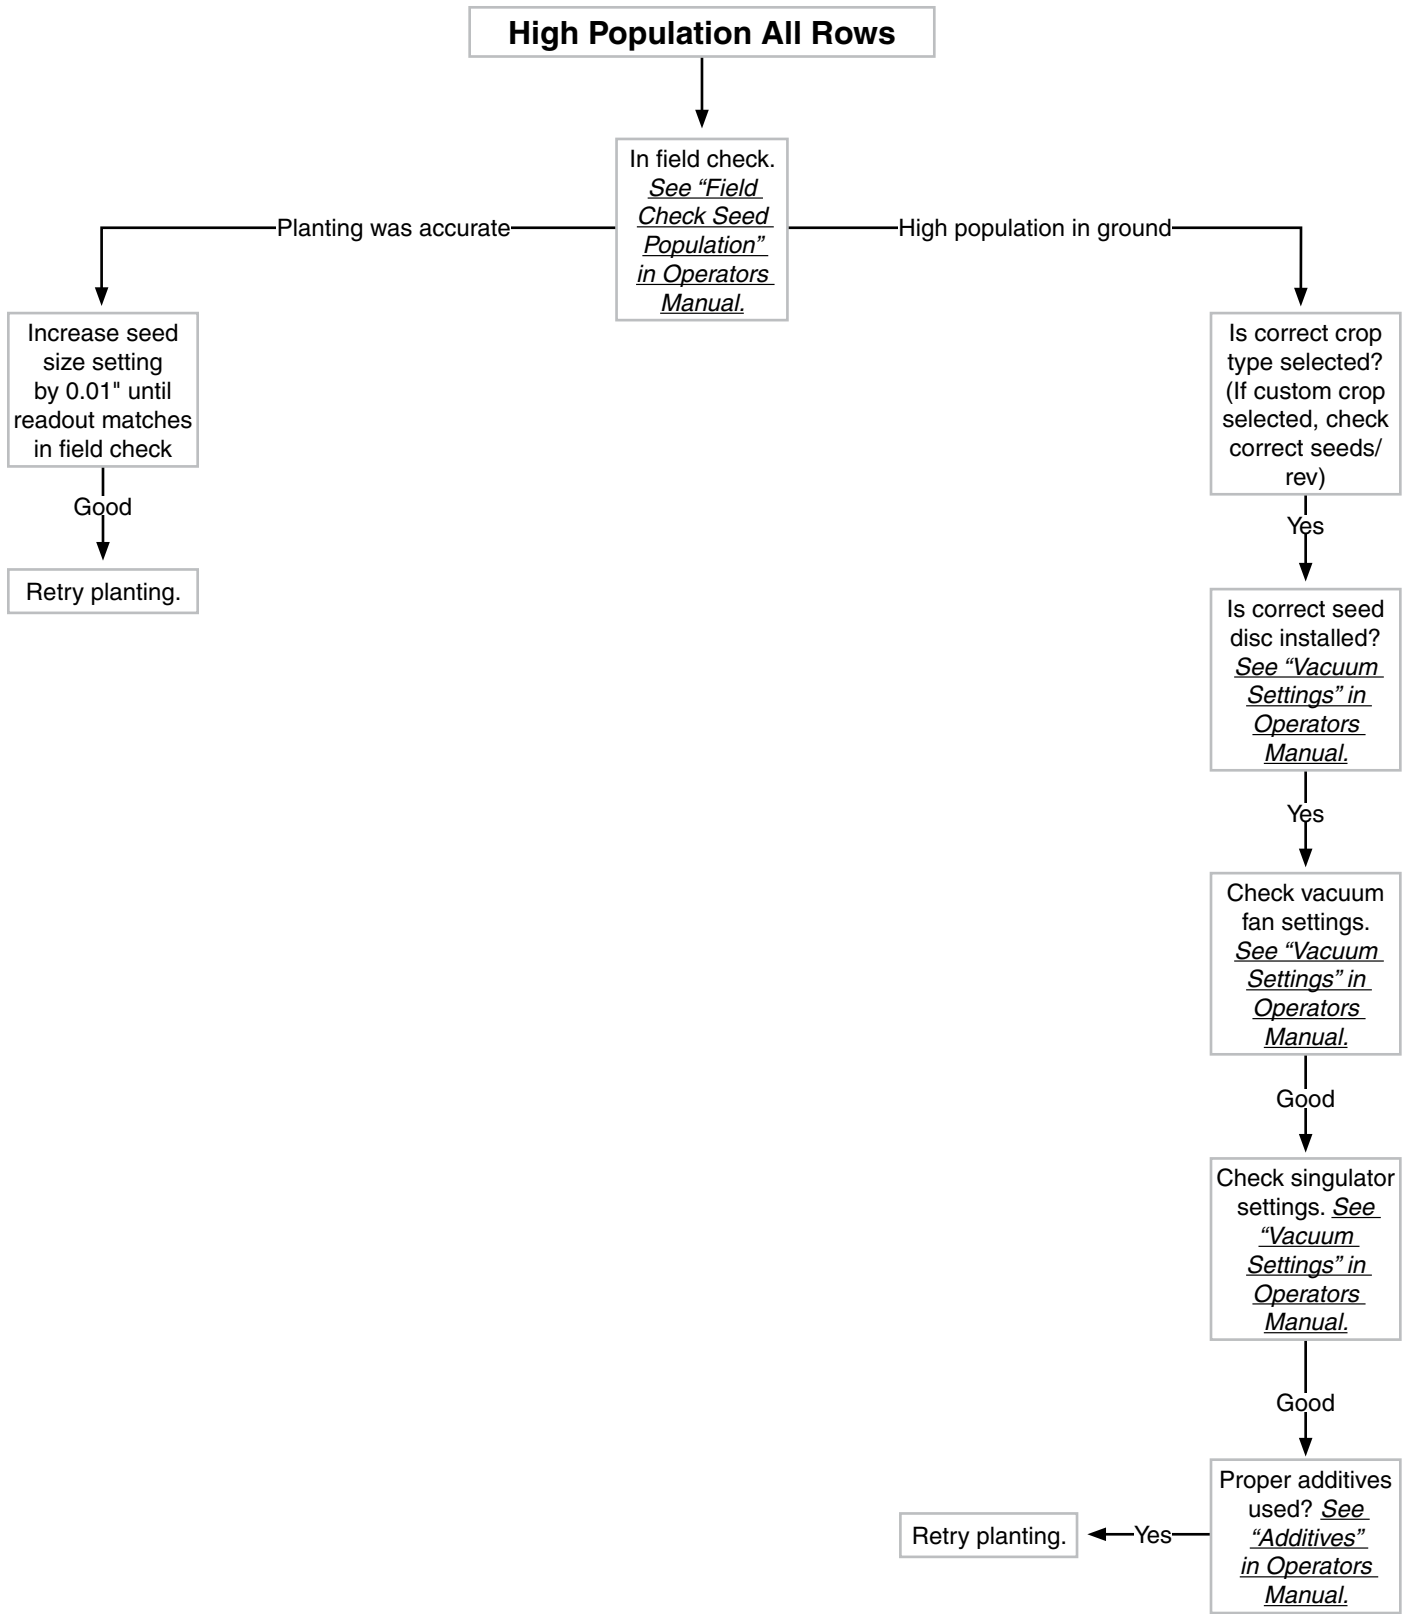


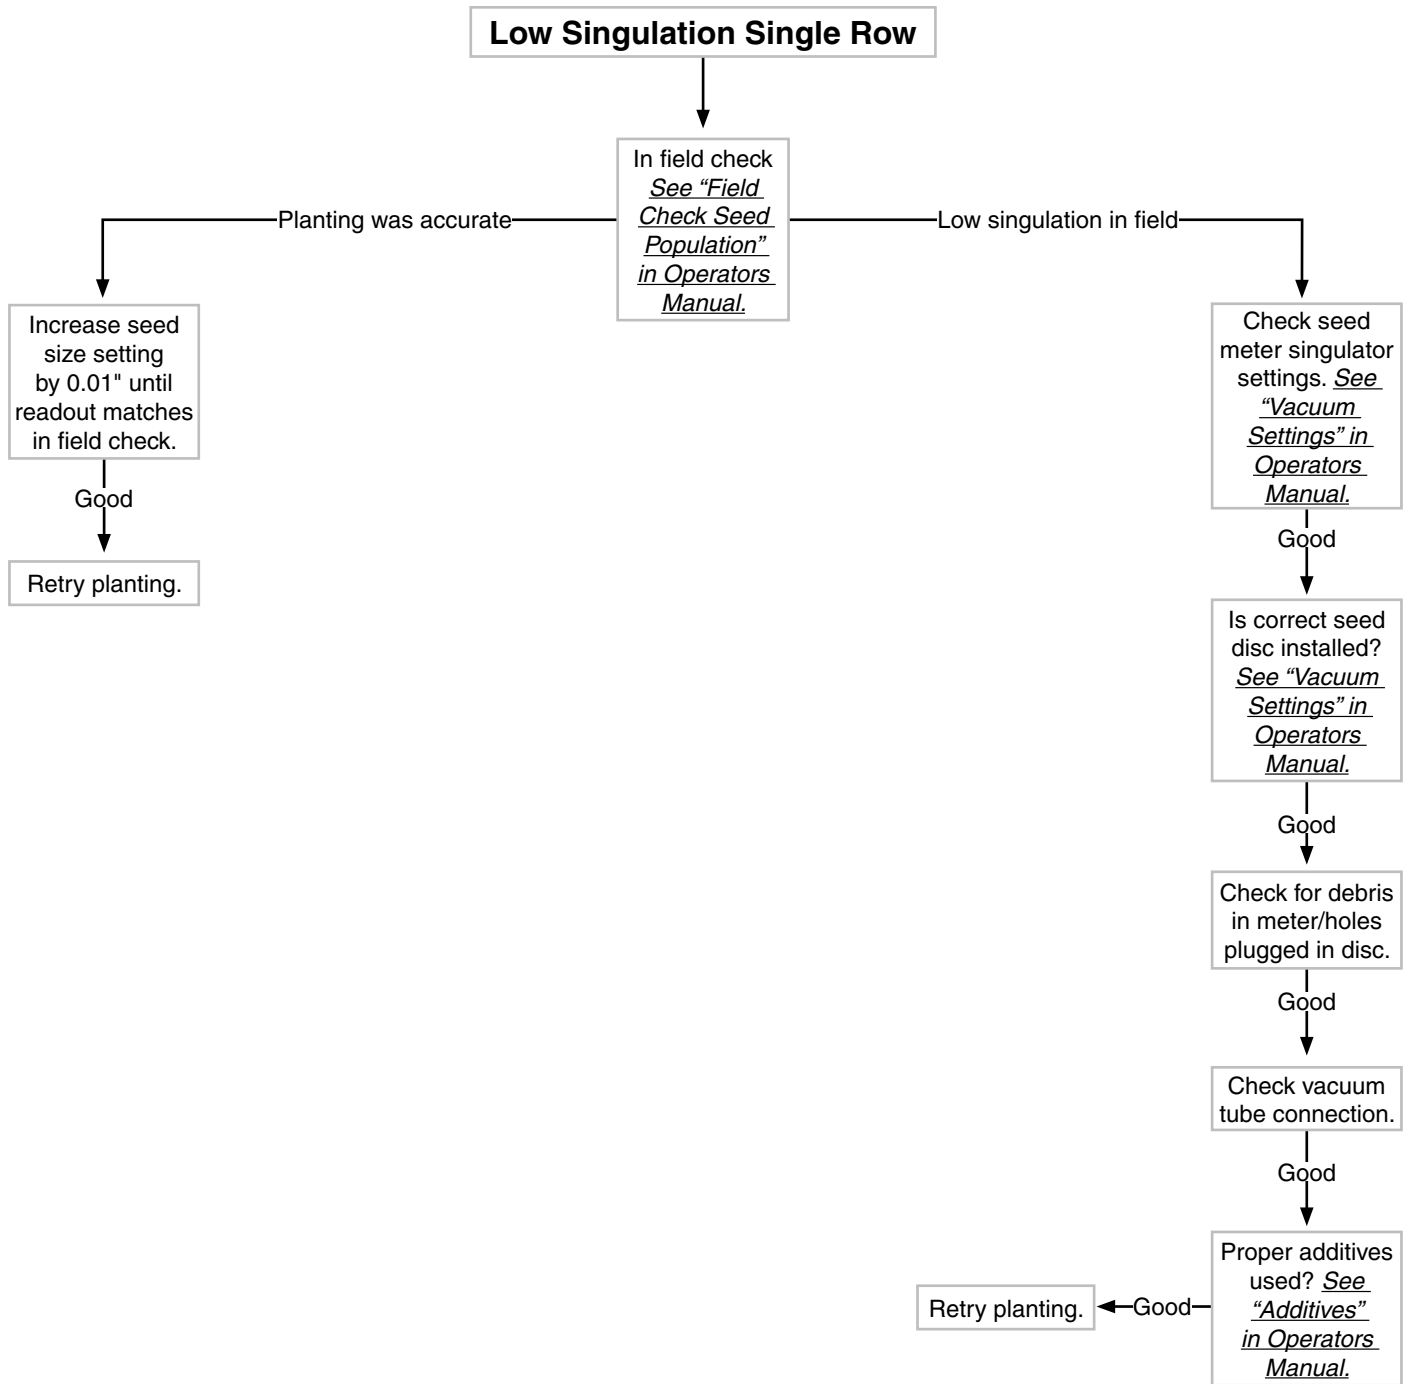


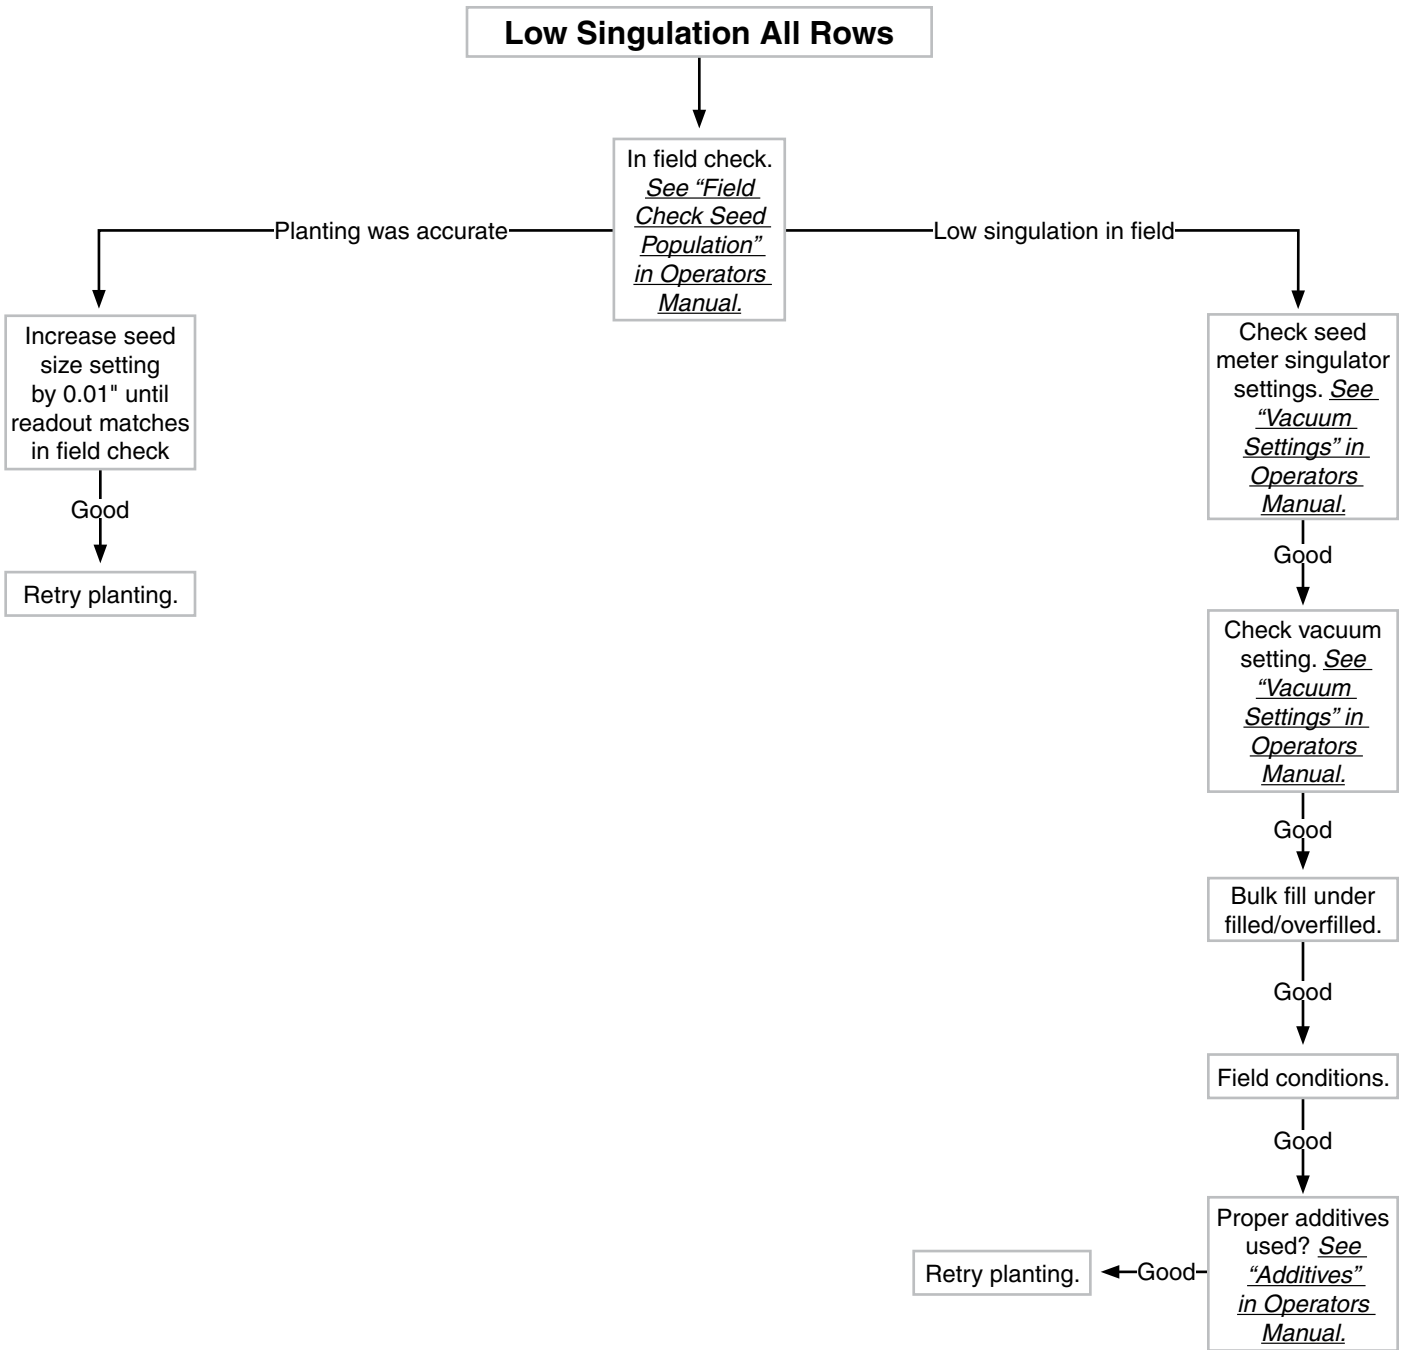

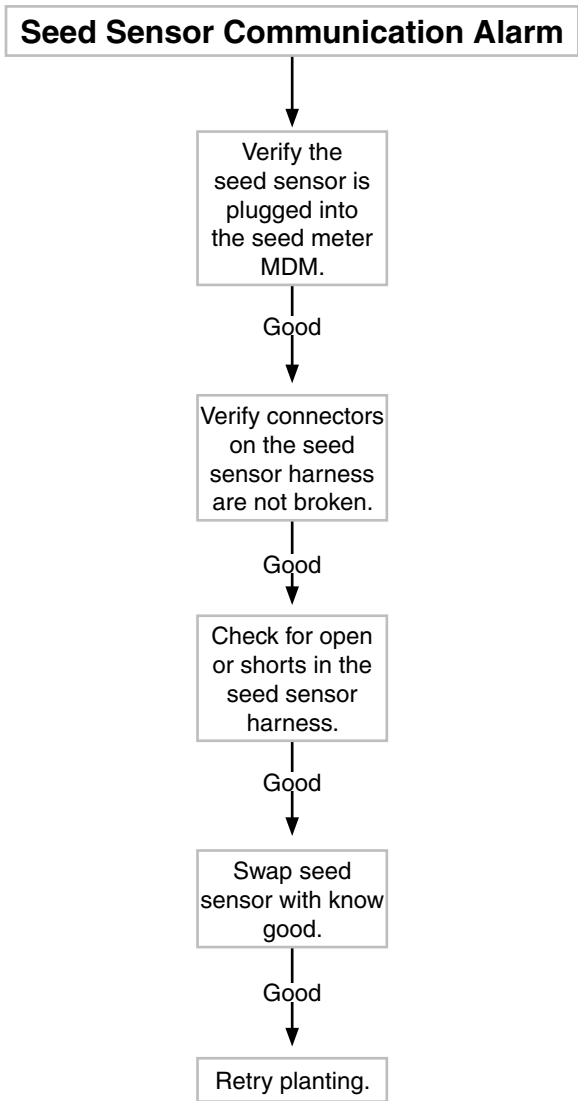


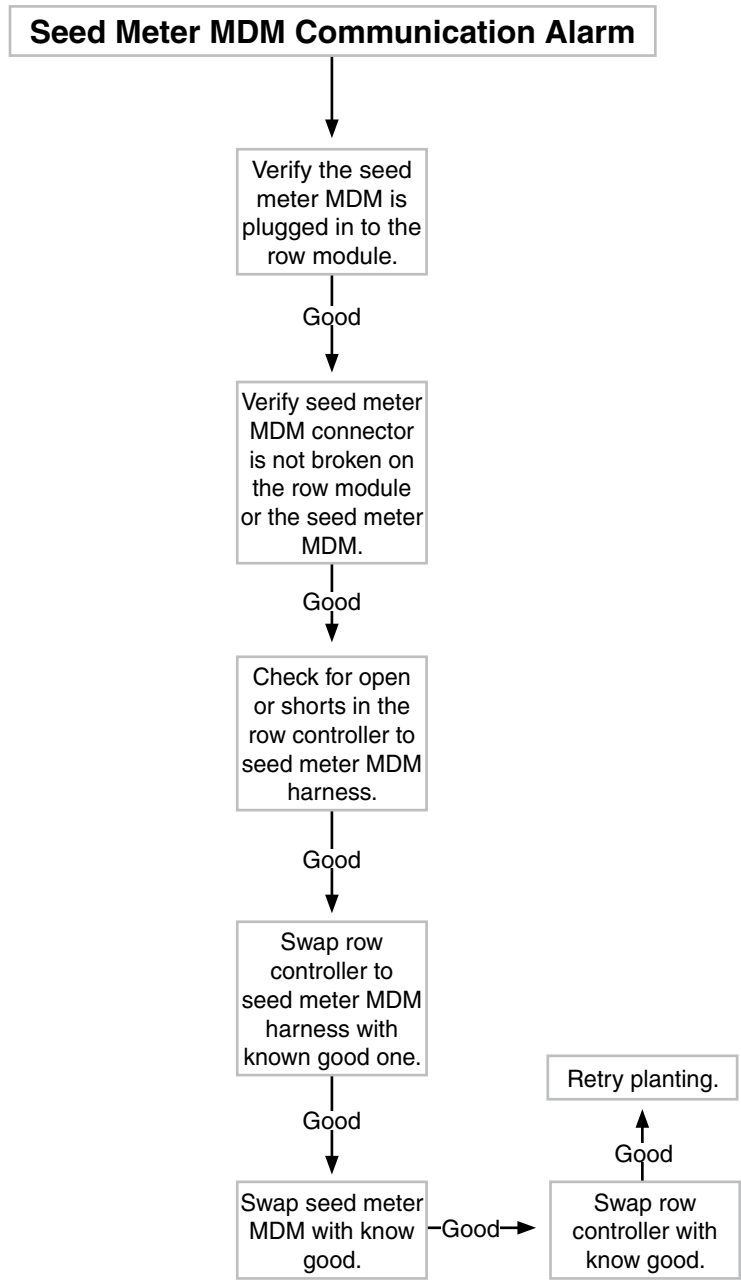


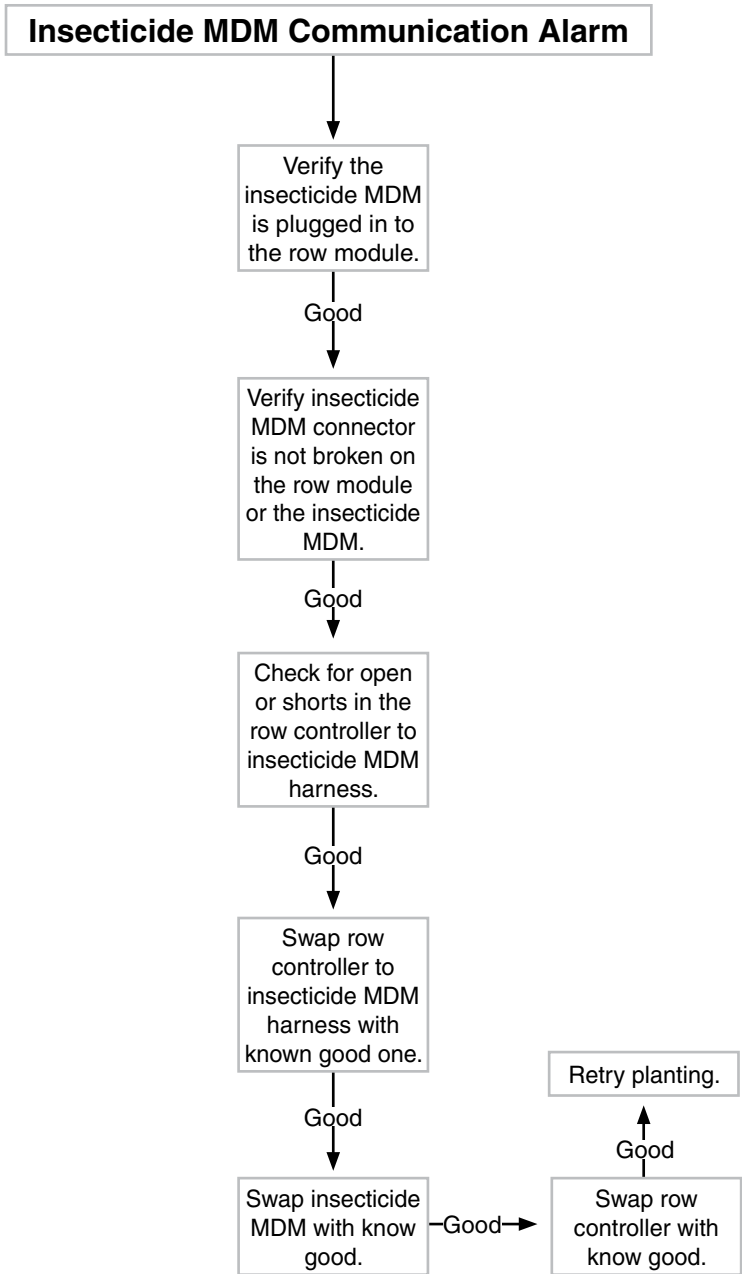


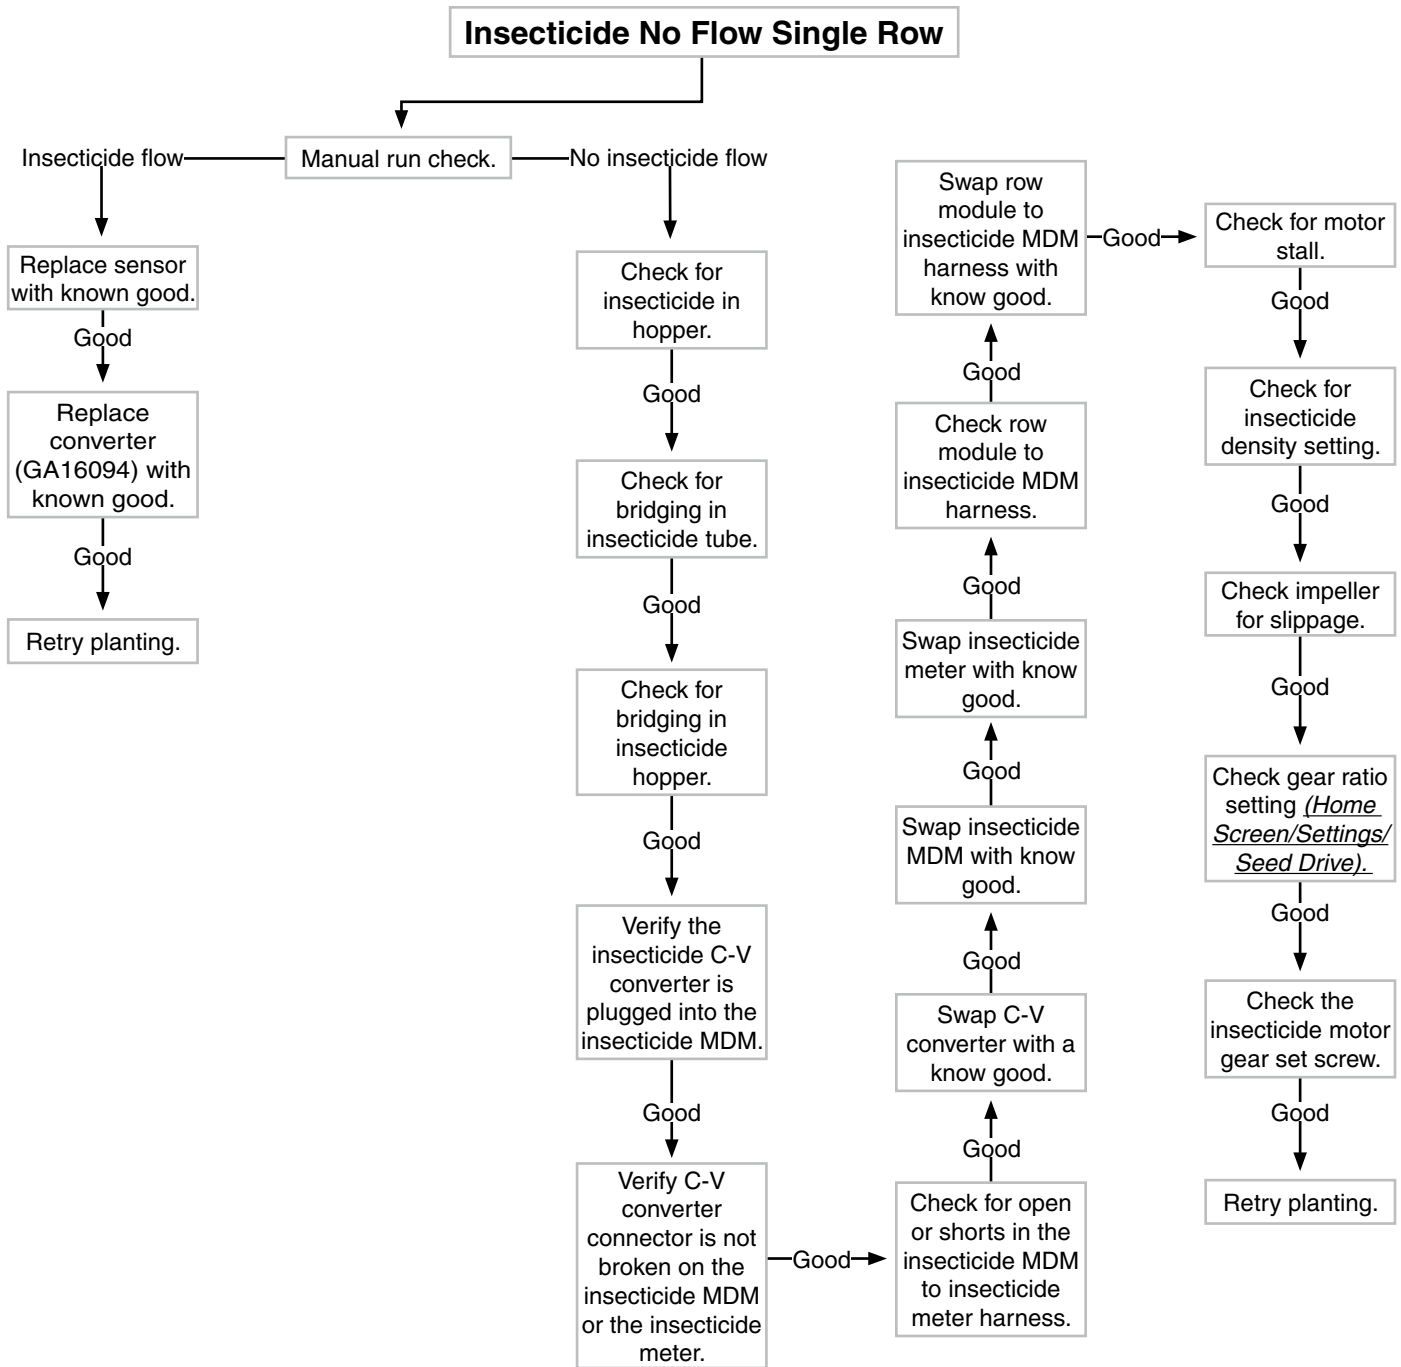



Row Module Communication Alarm

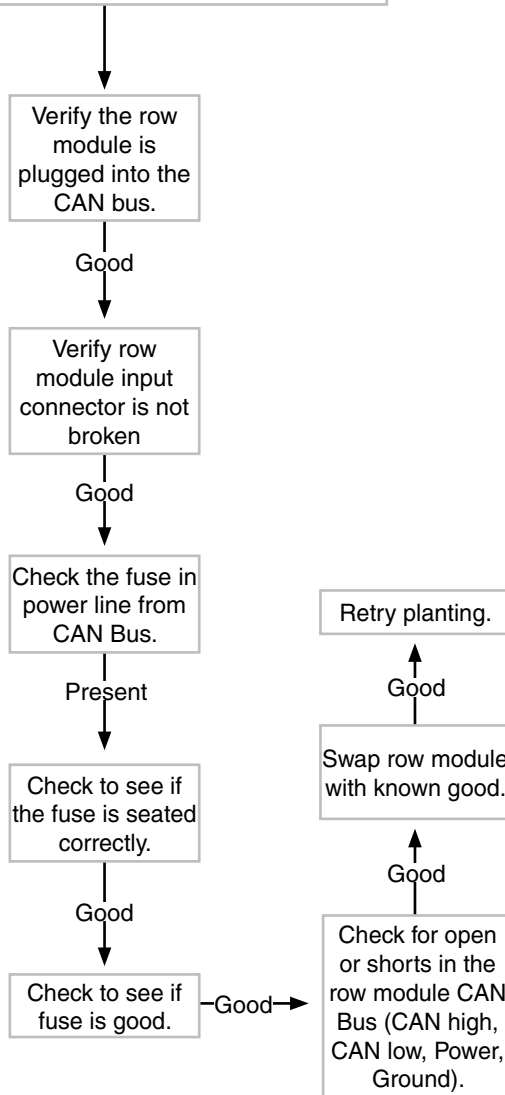

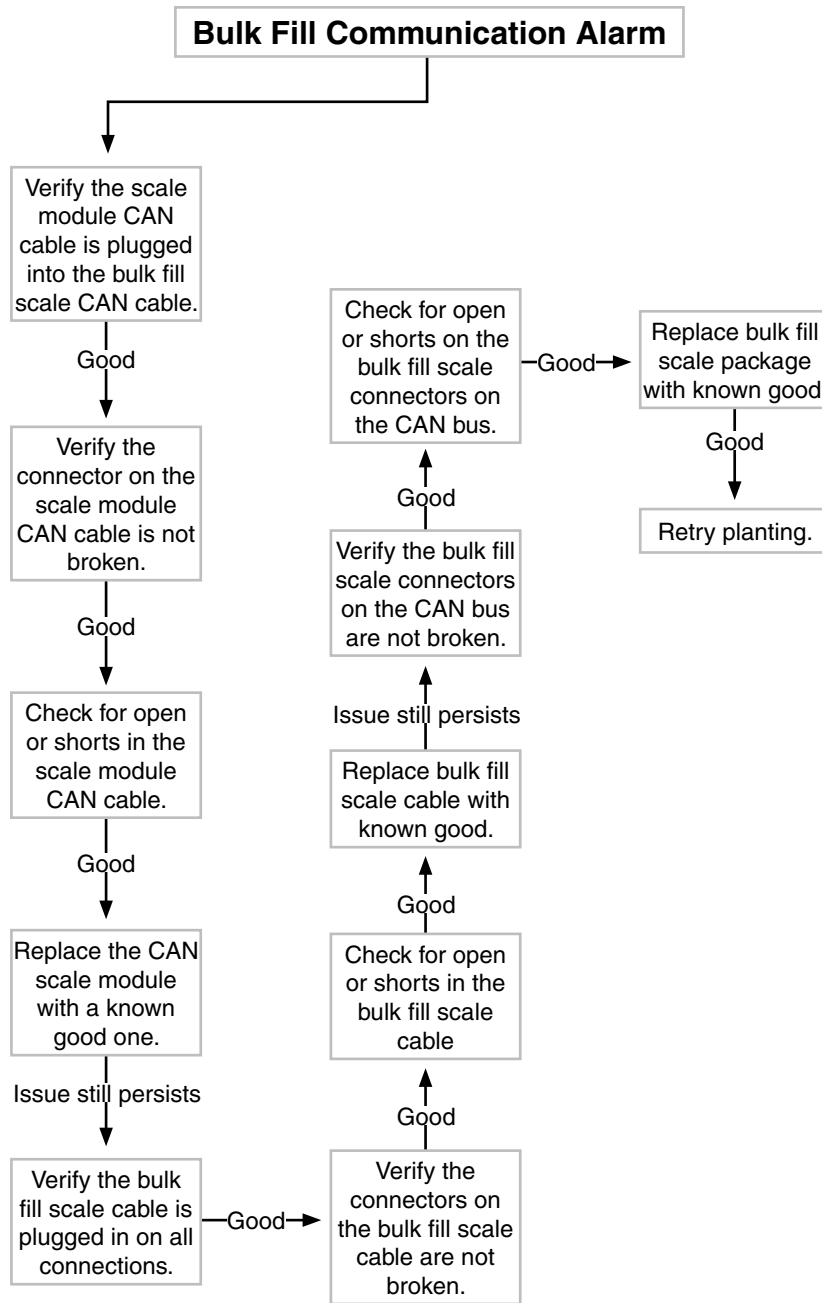


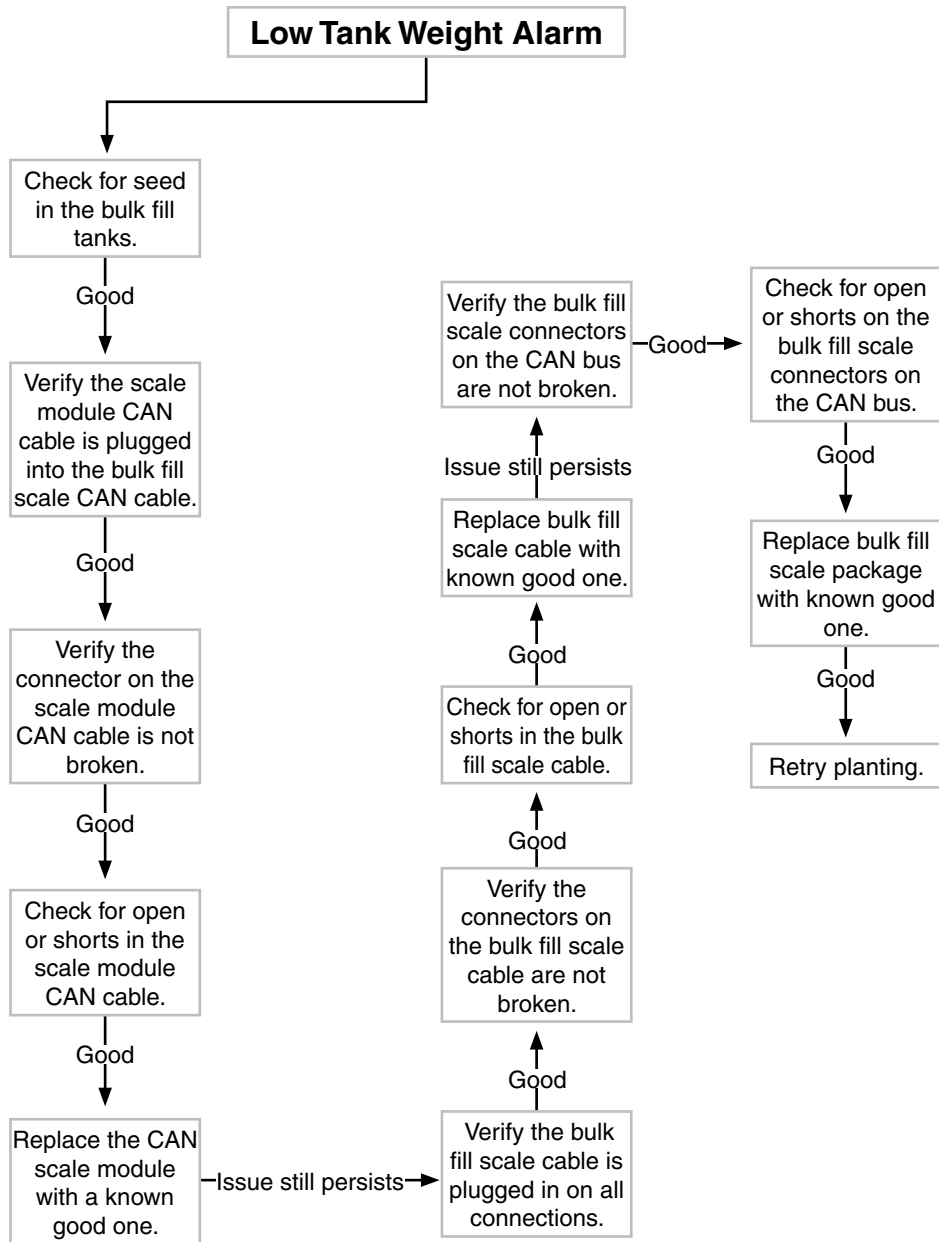


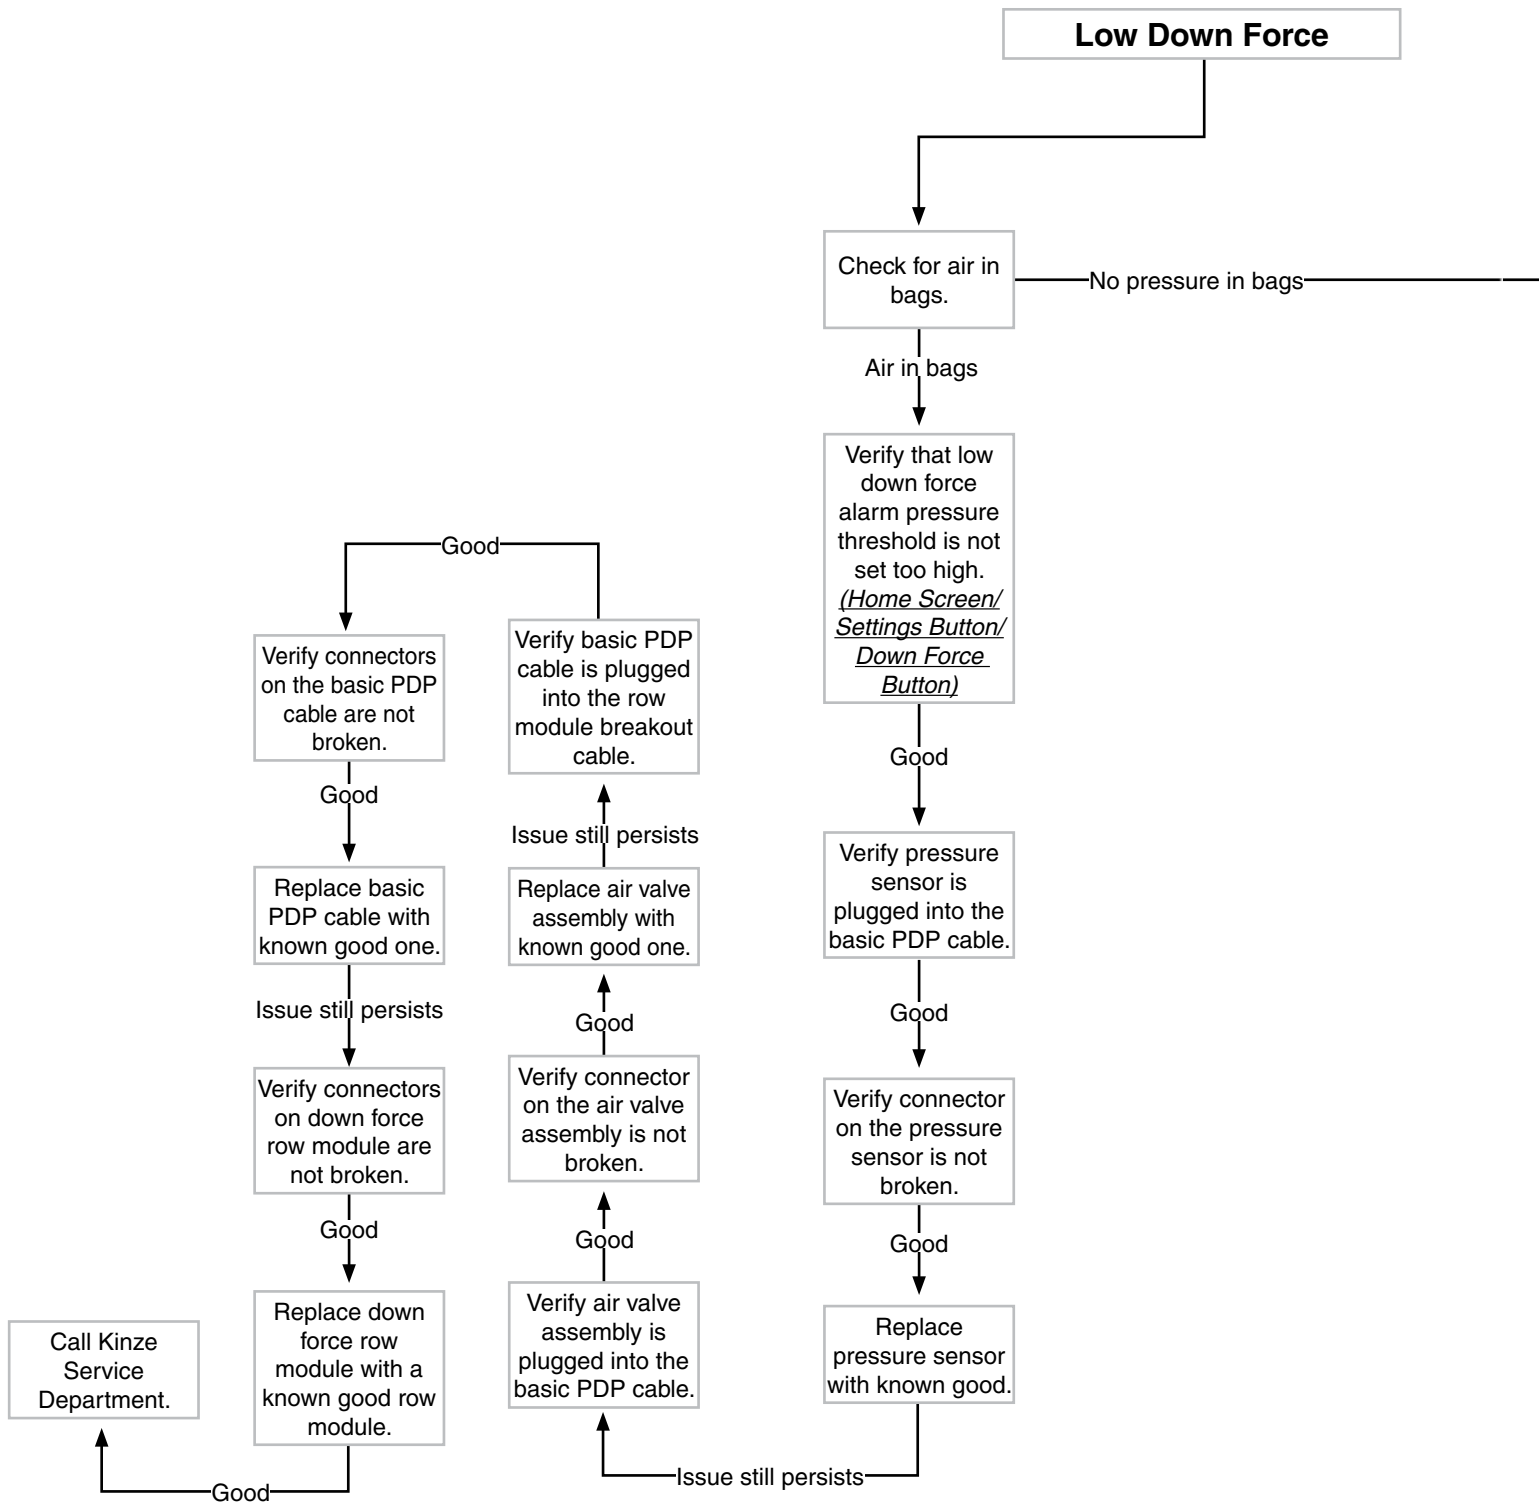


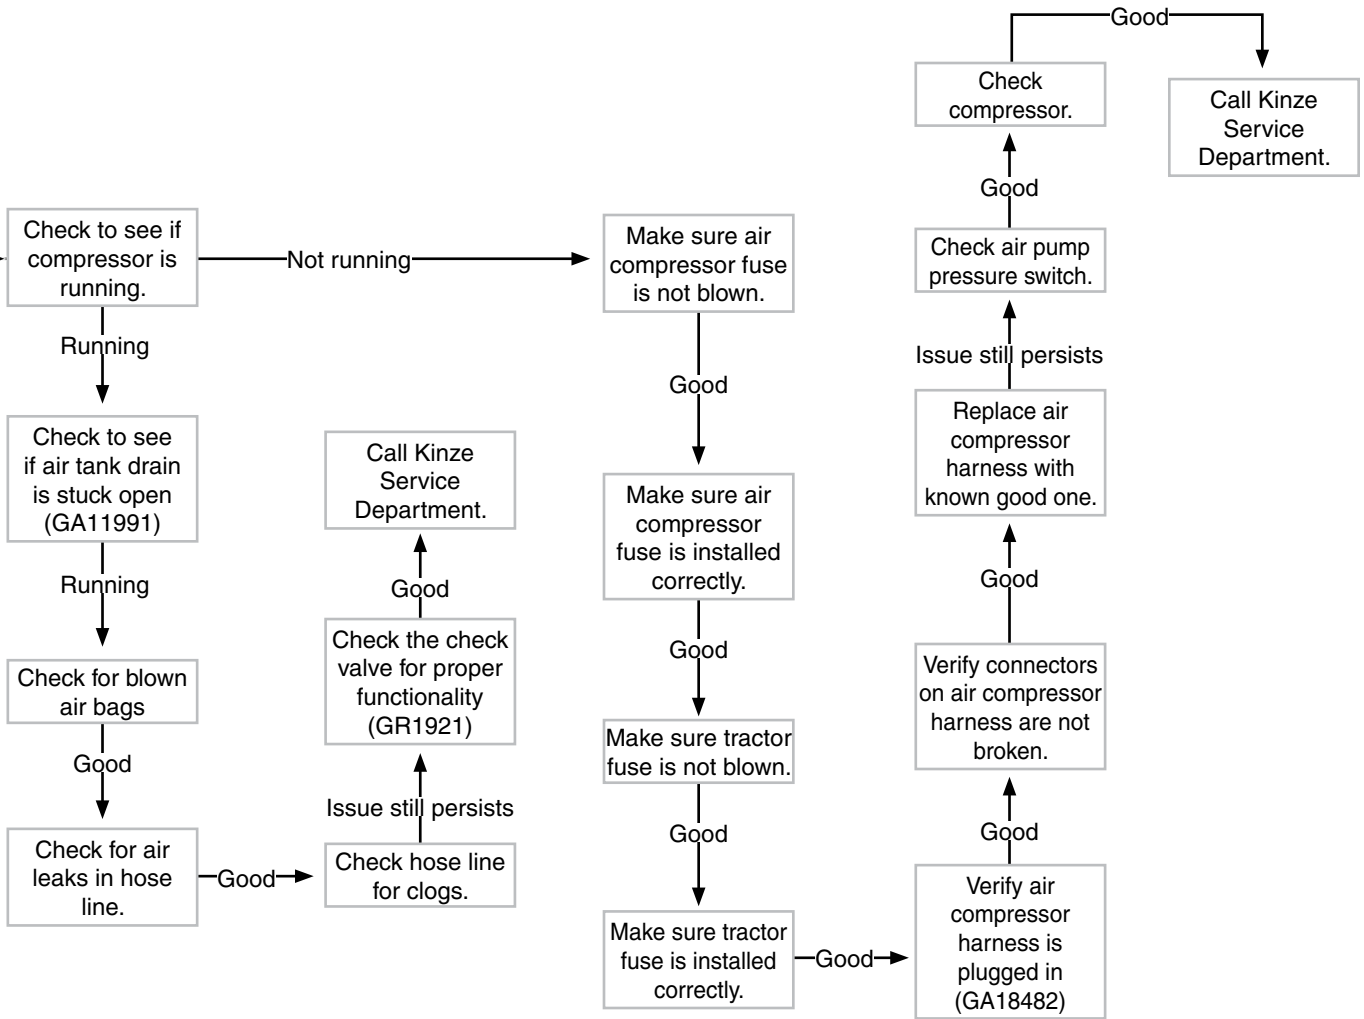


This page left blank intentionally.

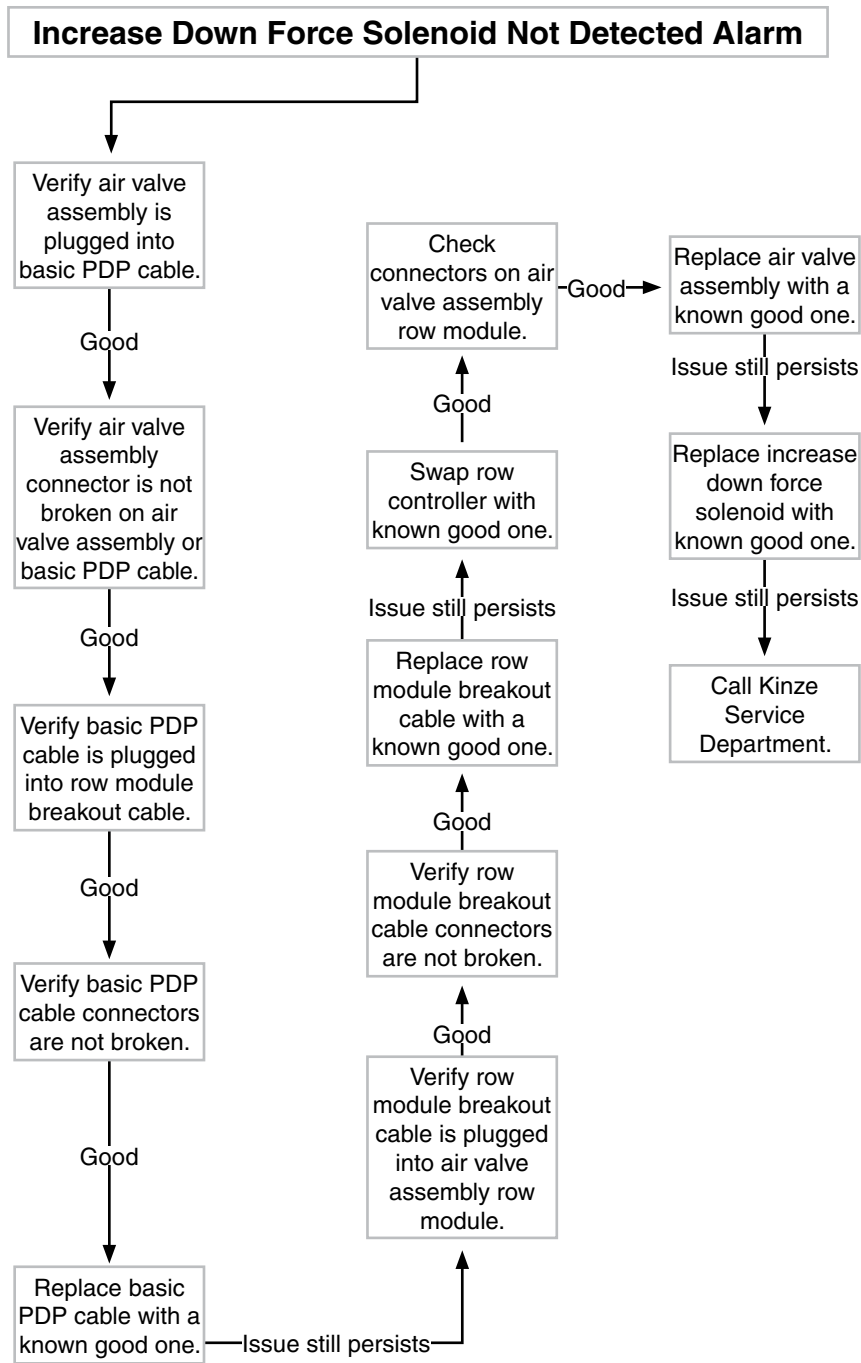


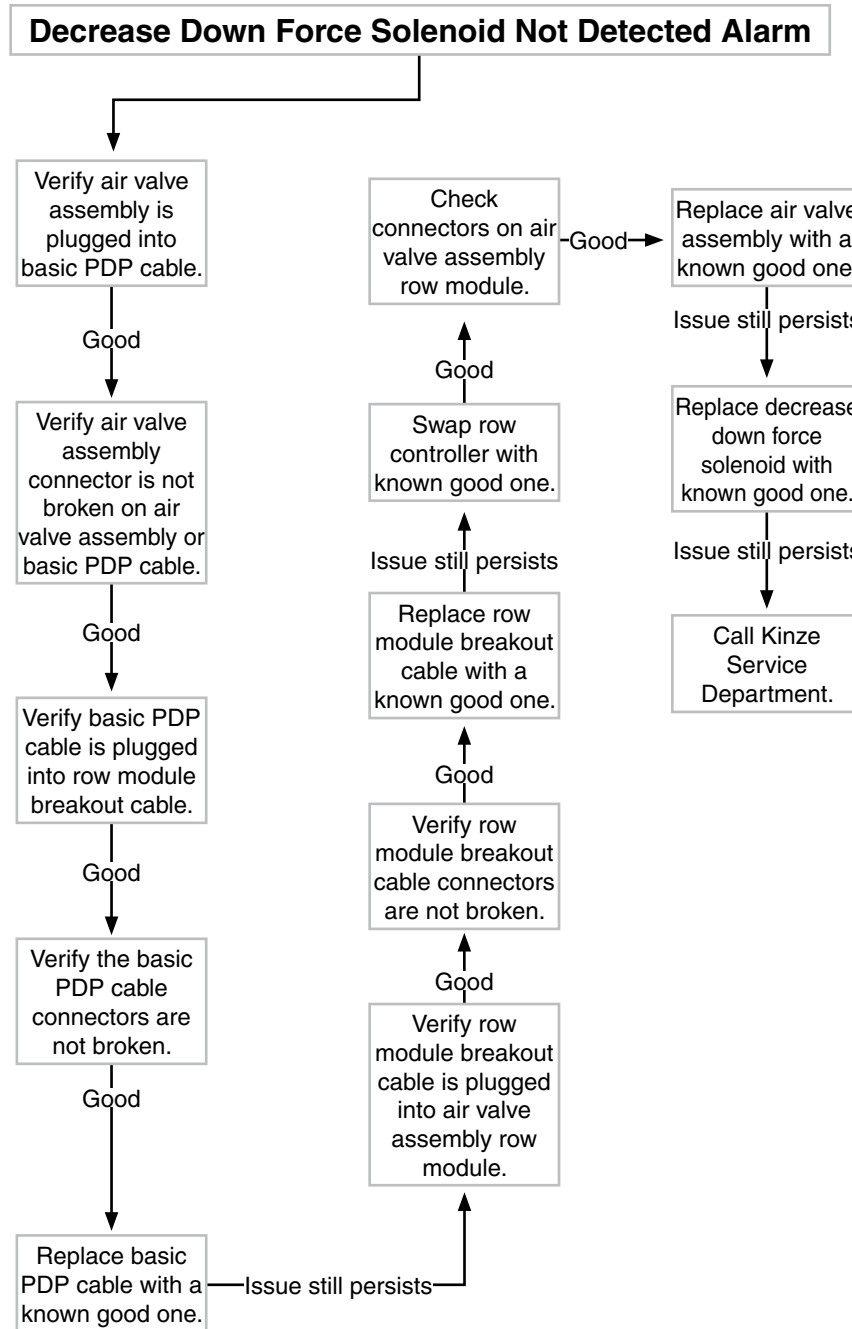


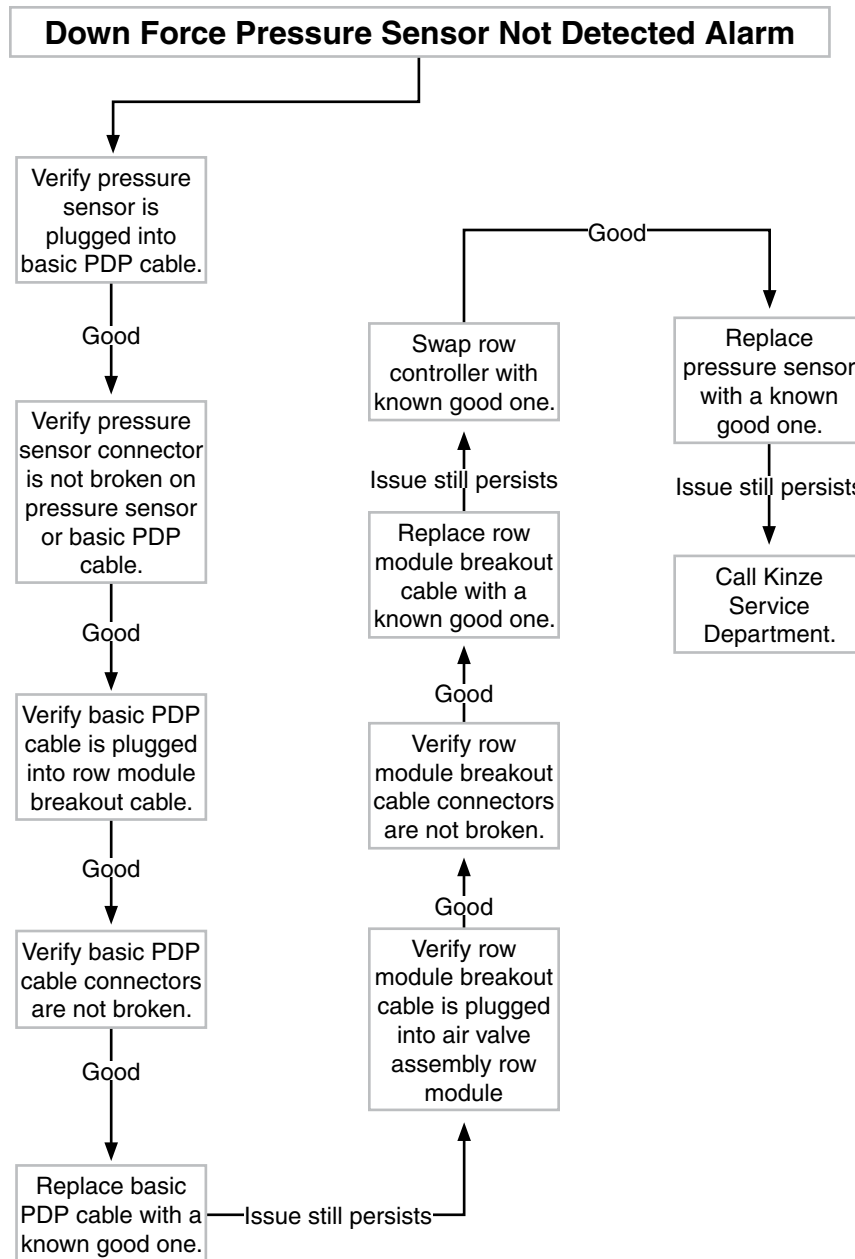



Low Fertilizer Rate Alarm Multiple Rows

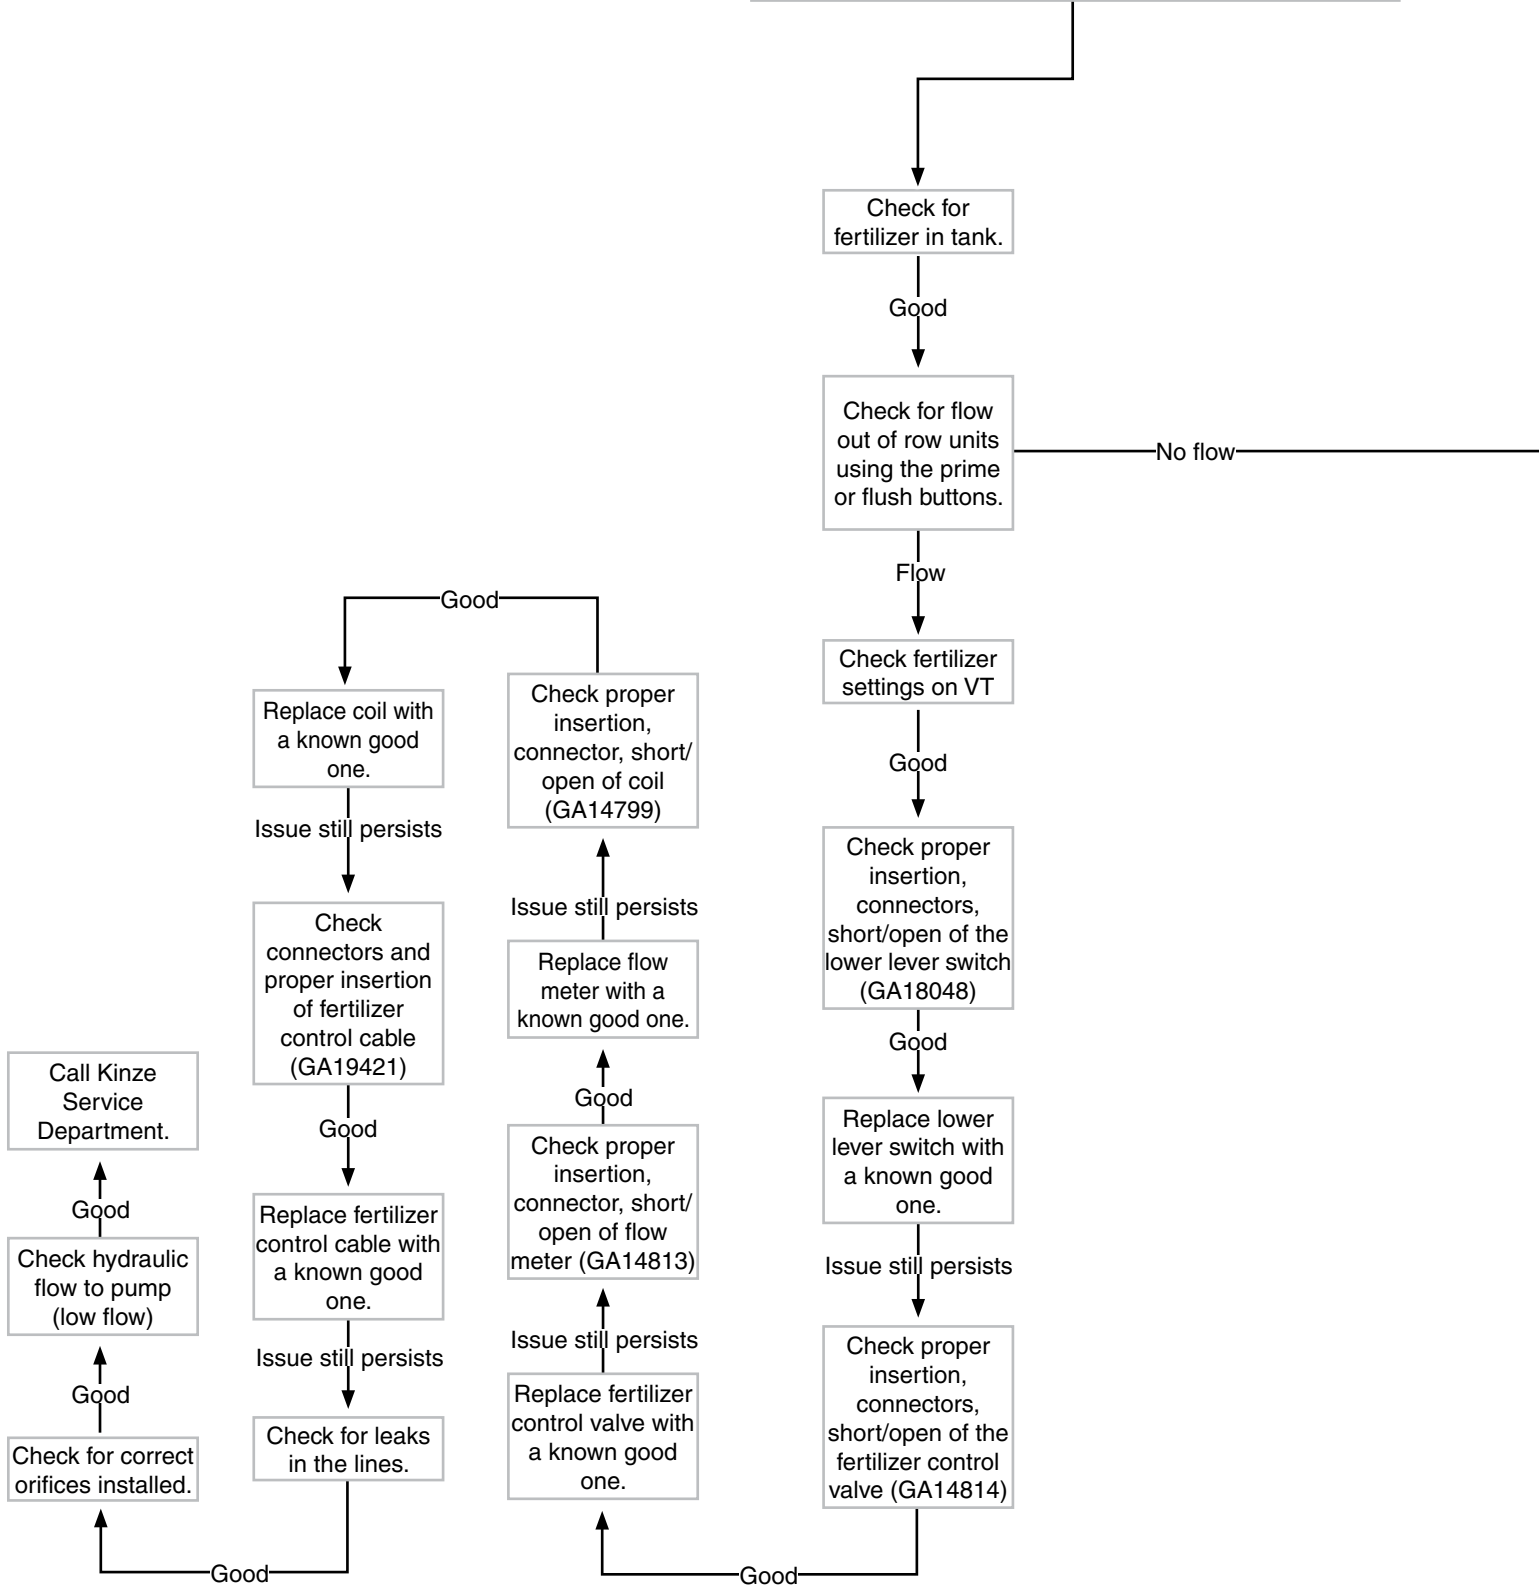

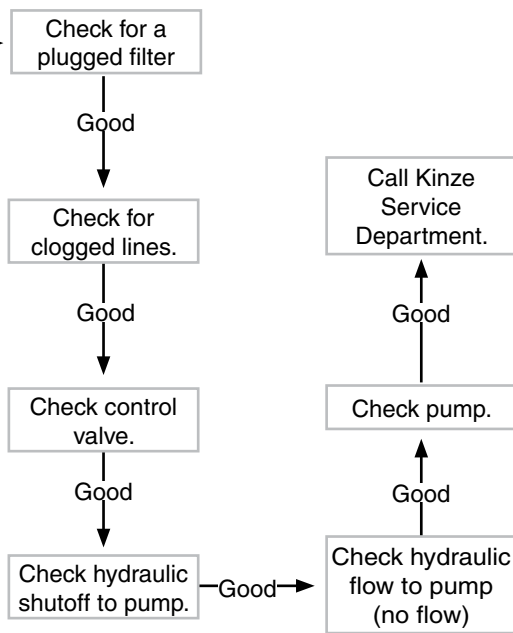

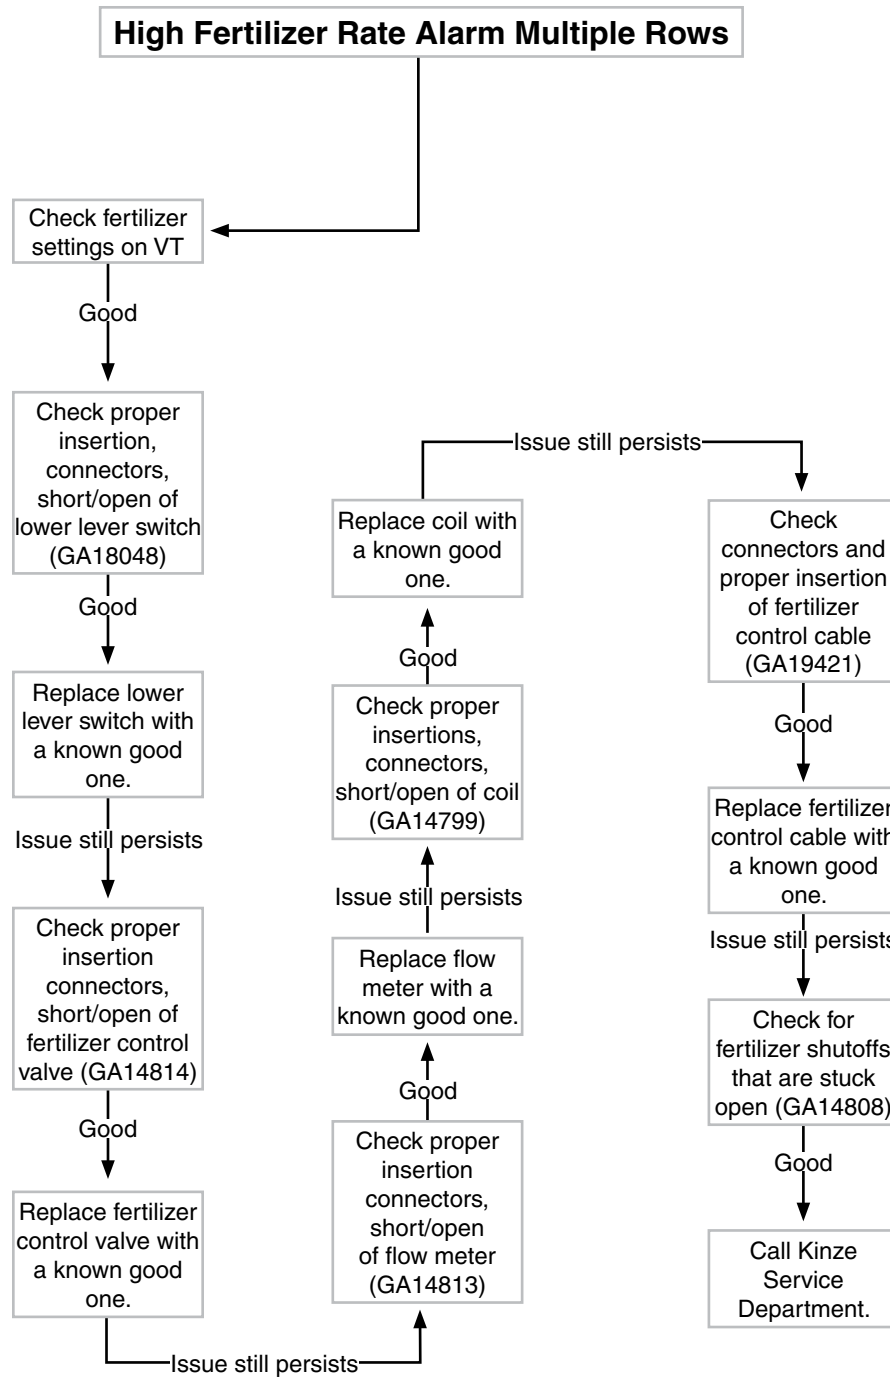

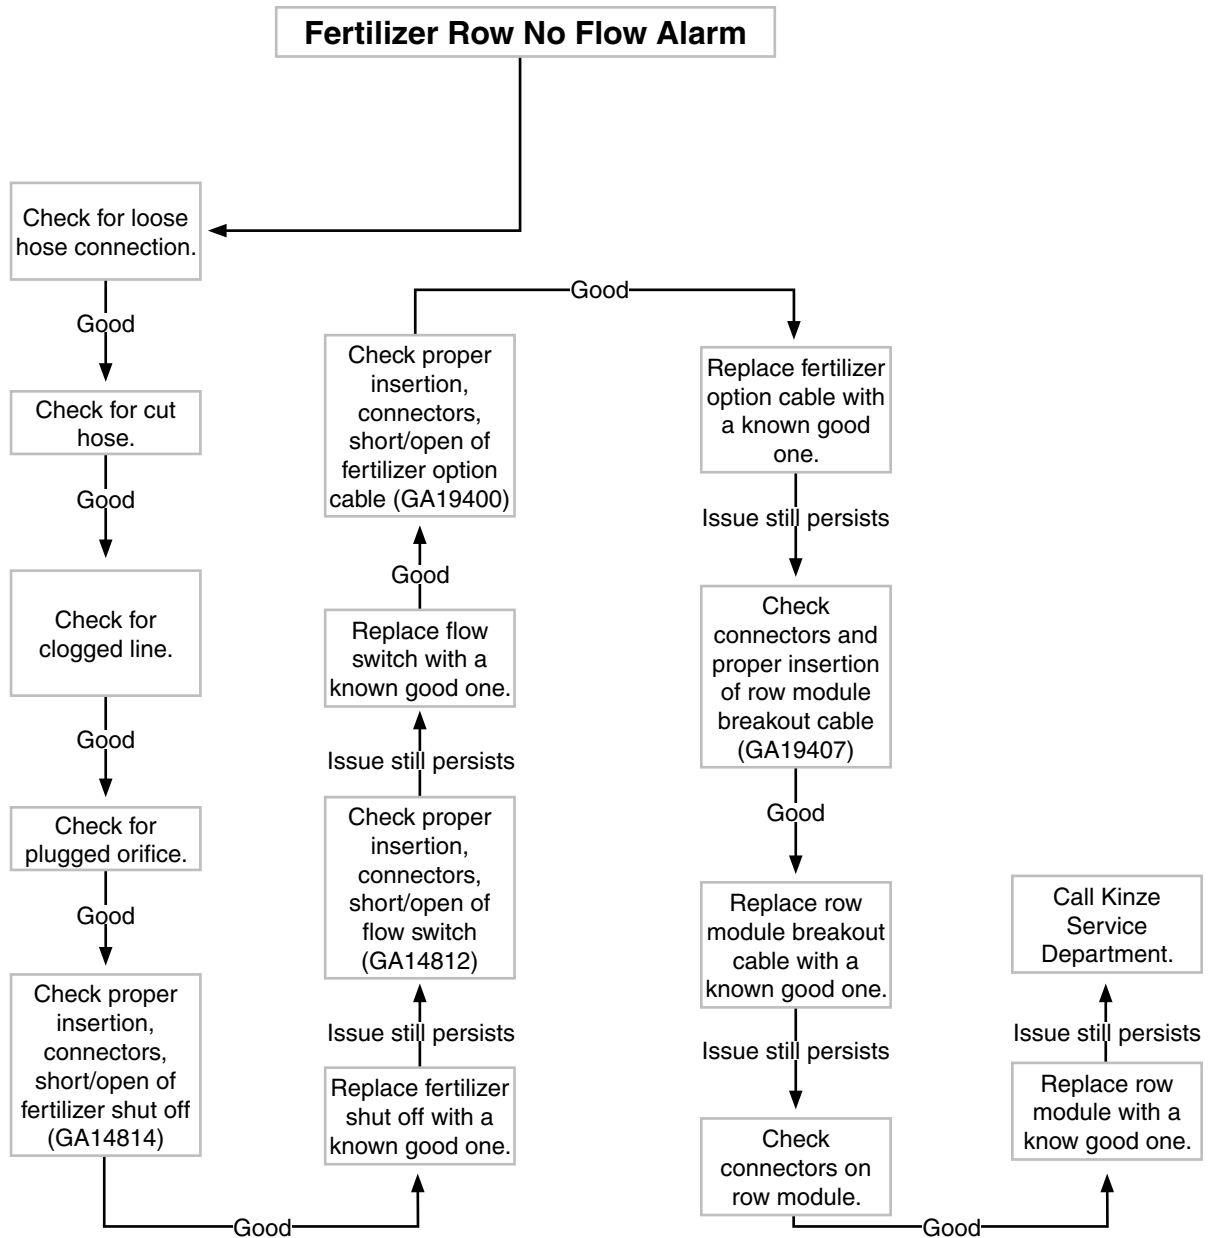

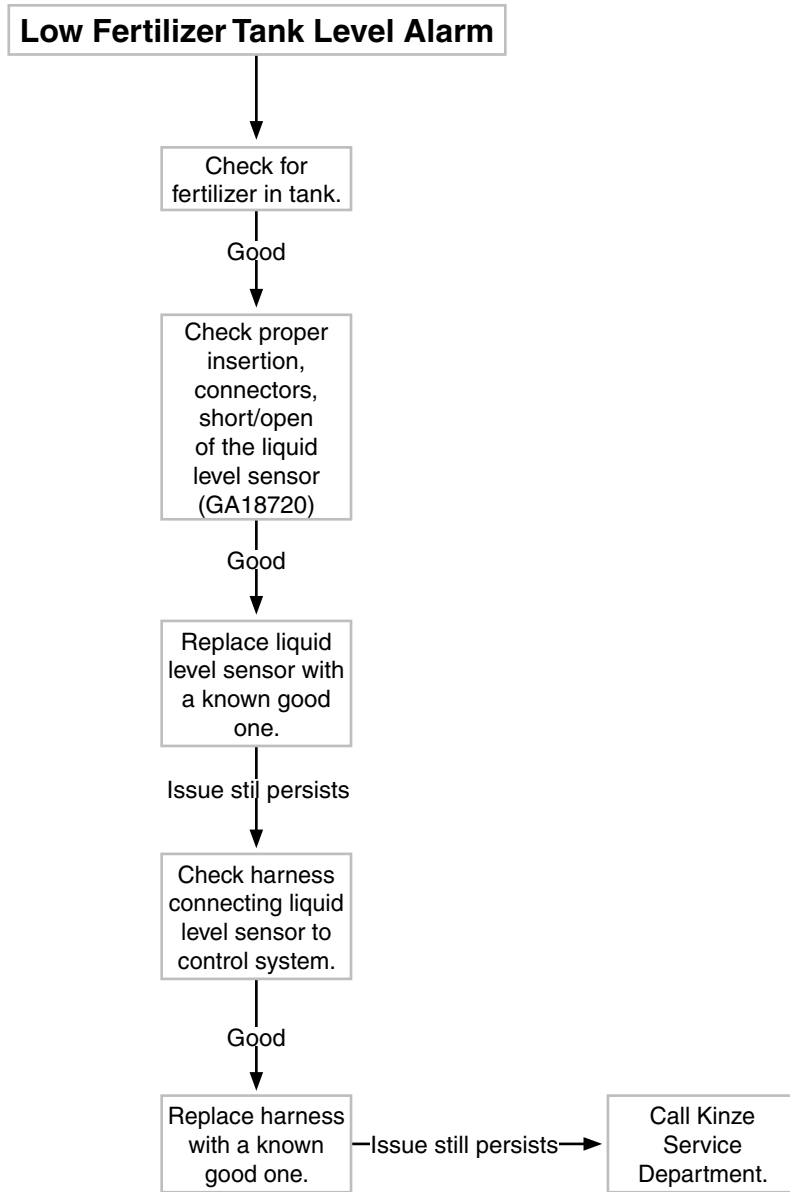

This page left blank intentionally.

