

Programming Menu for **SOMMER Wireless Keypad** (922 MHz)

STEP 1: KEYPAD ACTIVATION (FIRST USE ONLY)

1. Press the # button until the red and green LEDs light up (5-6 sec.)

STEP 2: PROGRAMMING ACCESS CODE

1. Press * button on the Keypad
2. Press 0000 (code from factory)
3. Press * button
4. Press desired access code (max. eight digits)
5. Press * button (red and green LEDs light up)

STEP 3: PROGRAMMING KEYPAD TO CONTROL HOUSING

1. Press Learn button on control housing once (solid LED)
2. Enter access code immediately on the Keypad
3. Press * button
4. Enter code again (door will activate)

CHANGING THE ACCESS CODE

1. Press * button on the Keypad
2. Enter existing access code
3. Press * button
4. Enter new access code (max. eight digits)
5. Press * button (red and green LEDs light up)

Note: 0000 (factory setting) will activate door. To change the access code see "Changing the access code" (above).

ERASE ACCESS FROM KEYPAD

(This is helpful when you don't remember the access code)

1. Press * button on the Keypad
2. Press # button
3. Enter 9 digit reset code
4. Press * button
5. Press # button (red and green LEDs light up)



(item no. S10358)

WE STRONGLY SUGGEST ATTACHING THE RESET STICKER TO THE CONTROL HOUSING!



sommer-usa.com
1-877-766-6607

SOMMER USA, Inc. | 3308-C Oak Lake Blvd. | Charlotte, NC 28208