The Bear Factory RC-20 User Guide
20 Second Recordable 2018 Model

Last Updated December 2017

Product Details:
500 Plays Average Lifespan
Dimensions: 1.5"Diameter x 1" Depth
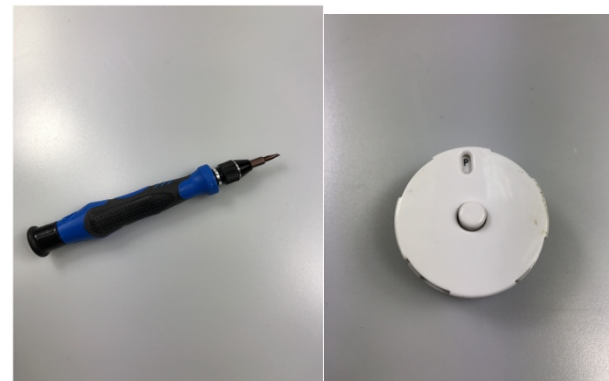Product of China

User Instructions:
1. **To Record** up to 20 seconds, place the setting to "R" and hold down the center button. A red light will signal on left side of unit indicating recording in process
2. Release the center button when recording is complete.
3. **To Play**, set unit to "P" and click the middle button to hear your recording.
4. If your recording is correct, **Lock** the unit by holding down the middle button while the setting is in "P" position for 12 seconds.
5. You will hear a single beep indicating the unit is locked.
6. **To Unlock** the unit, hold down the middle button while the setting is in "P" position for 12 seconds.
7. You will hear two beeps indicating the unit is now locked.
8. To Turn Off your unit, set the setting to "0". This will disable playing of the recording.

Battery Replacement:
Although replacing the battery of your 2018 RC-20 will not erase your recording. We do not recommend replacing the battery if it is not needed. By opening the unit, you assume the risk of damaging the unit. The Bear Factory is not liable for lost content when tampering with the unit.

What you will need: 3 qty LR44 Batteries & Slotted Drive with Fiat Blade
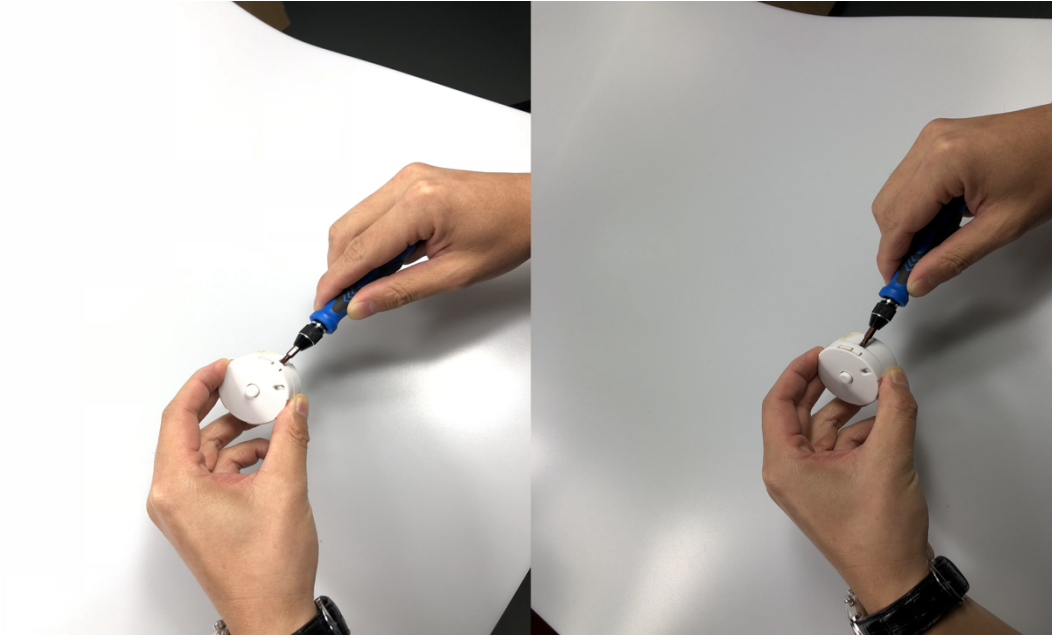
1. Prepare a slotted drive with a fiat blade.
2. Put the recorder on a flat surface.
3. Be sure the unit is in the "P" position before opening.
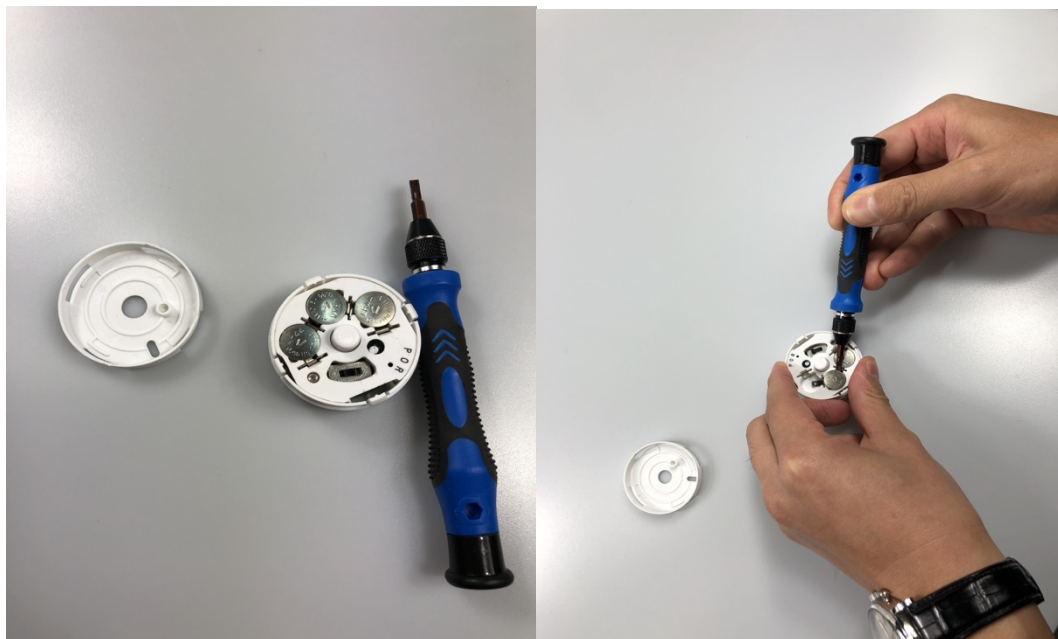4. The "P" position is required to smoothly open the unit.

5. Take the cover off by user the driver. (See Below)

6. Take the cover away and remove the dead batteries. (3 qty LR44 Batteries in Total)

7. Replace the three LR44 batteries and return the cover back on the unit. Be sure the cover is in the "P" position when placing the cover back on.

    You are now good to go!