


INSTALLATION PROCEDURE

1. CLEAN THE WEEP HOLE.




2. BY SQUEEZE THE CLIPS OF "WEEP HOLE COVER" SLIDE IT INTO WEEP CAVITY.

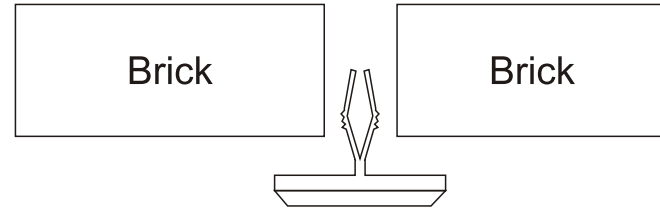

1
2
3
4

3. FOR QUICK INSTALLATION, PLEASE MAKE SURE ITS CLIP RIDGES ARE INSIDE THE WEEP HOLE.

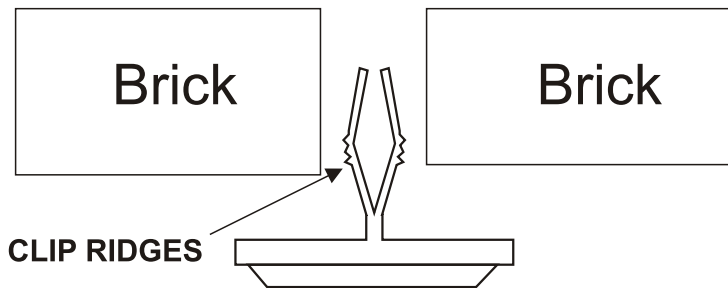

4. PUSH AGAINST THE WALL.

While pushing please
put pressure on clips



THANKS FOR PURCHASING OUR PRODUCT.

OTHER PRECAUTIONS:

1. PLEASE LOOK AROUND WINDOWS FRAME, IF THERE IS ANY GAP PLEASE USE GAP FILLER TO FILL IT.
2. ALL DOORS WHICH HAVE A ACCESS OF YOUR HOUSE MAKE SURE INSTALL WEATHER STRIP (DO NOT USE BRUSH TYPE WEATHER STRIP).
3. CHECK BEHIND HOT WATER UNIT, AIR-CON UNIT INSTALL OUTSIDE OF THE HOUSE, MOSTLY THERE IS A WEEP HOLE CAVITY BEHIND IT, IF YOU CAN'T INSTALL "WEEP HOLE COVER" THEN MAKE SURE TO BLOCK THE ACCESS WITH SOME SUITABLE STUFF.
4. SOMETIME THERE IS A CAVITY NEAR OUTDOOR PLUMBING WORK AROUND HOT WATER UNIT, AIR-CON UNIT, OUTDOOR TAPS. IF IT HAPPEN, PROPER ACTION MUST BE TAKEN TO SECURE YOUR HOME
5. CUT THE BRANCHES OF TREE WHICH ARE HANGING NEAR/ON THE ROOF TO AVOID DIRECT ROOF CONTACT OF RODENTS..
6. ONCE YOU INSTALL "WEEP HOLE COVER" AND FIX TOP MENTION ISSUES, THERE IS NO OTHER EASY ACCESS FOR RODENTS.

PLEASE NOTE: AFTER TAKING ALL ABOVE MENTION STEPS, THERE IS NOT EASY ACCESS OF ENTERING AND EXITING OF RODENTS SO IF YOU HAVE ALREADY RODENTS INSIDE THE HOME SO PLEASE USE TRAP TO CATCH THEM.

IF YOU HAVE ANY OTHER QUESTION, ADVICE AND INQUIRY PLEASE FEEL FREE TO CONTACT US OR
EMAIL US TO "info@bpgroup.com.au"
PLEASE LIKE OUR FACEBOOK PAGE "RODENT FREE HOMES" AND COMMENT IT.