
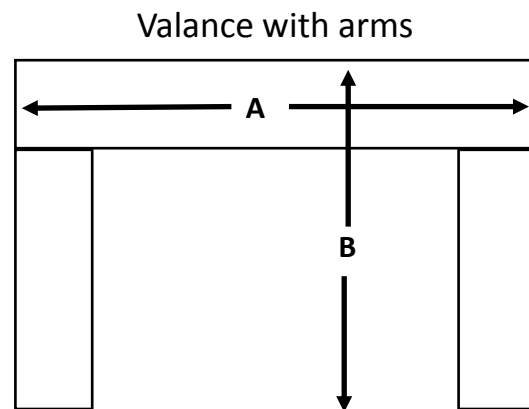


## 1. Clearance Width:

Shade assembly will be built to the measurements you provide. For optimum results, do NOT simply measure existing shades or window frame.

- ~ For shade mounted inside a valance: Measure from inside to inside, at the top, where the shade will be mounted.
- ~ For a shade that is NOT mounted inside a valance: Provide exact width of the shade assembly you would like built.
- \* We will deduct 3/4" to allow for installation. If more or less is needed please specify when ordering.\*

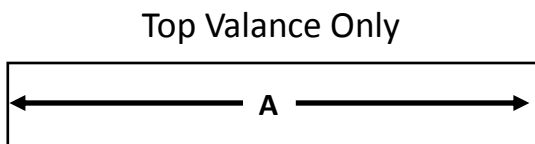

## 2. Drop Length

Measure from the inside top of the valance, or where shade mounts, to the bottom of the window frame.

## 3. See AutoMotion pricing sheet for exact pricing

Select the **power options:**

- ~ Add power to one or both shades
- ~ Add a remote controller(s) (2 channel, 16 channel, or 8 channel)

## 4. To place your order:

Email a pdf file to [Alicia@classiccoachworks.com](mailto:Alicia@classiccoachworks.com)

## 5. A Classic Coach Works representative will contact you to finalize the details of your order.

*Thank you for your order. If you have any additional questions, please call 386-944-9715*

Please note that all AMS shades are custom-made and are non-returnable.