

CARSTICKERS.COM APPLICATION INSTRUCTIONS



STEP 1

Clean the area thoroughly with rubbing alcohol or soap and water. Do not use Windex or similar products because it will leave a residue behind that will prevent the sticker from adhering well.



STEP 2

Prepare the sticker for application by firmly rubbing a squeegee or credit card across the clear transfer tape. This removes any air bubbles that may have formed and makes the sticker cling to the transfer tape.



STEP 3

Peel the white paper backing off the sticker. If the sticker clings to the backing, slowly replace the paper backing and repeat Step 2.



STEP 4

Slowly lower the sticker onto the surface and rub it in place firmly with a squeegee or credit card. For best results, wait 24 hours before moving to the next step.



STEP 5

Slowly peel the clear transfer tape off at an angle. Be careful not to pull the sticker off the surface. If sticker pulls away from the surface repeat Step 4.

The recommended temperature range for applying stickers is 60-80°F.

If applying a large, extra large, or windshield decal please follow the large sticker instructions at www.carstickers.com/instructions.php

WATCH THE INSTALLATION VIDEO
www.carstickers.com/sticker-application-instructions/

CARSTICKERS.COM APPLICATION INSTRUCTIONS



STEP 1

Clean the area thoroughly with rubbing alcohol or soap and water. Do not use Windex or similar products because it will leave a residue behind that will prevent the sticker from adhering well.



STEP 2

Prepare the sticker for application by firmly rubbing a squeegee or credit card across the clear transfer tape. This removes any air bubbles that may have formed and makes the sticker cling to the transfer tape.



STEP 3

Peel the white paper backing off the sticker. If the sticker clings to the backing, slowly replace the paper backing and repeat Step 2.



STEP 4

Slowly lower the sticker onto the surface and rub it in place firmly with a squeegee or credit card. For best results, wait 24 hours before moving to the next step.



STEP 5

Slowly peel the clear transfer tape off at an angle. Be careful not to pull the sticker off the surface. If sticker pulls away from the surface repeat Step 4.

The recommended temperature range for applying stickers is 60-80°F.

If applying a large, extra large, or windshield decal please follow the large sticker instructions at www.carstickers.com/instructions.php


WATCH THE INSTALLATION VIDEO
www.carstickers.com/sticker-application-instructions/

CARSTICKERS.COM APPLICATION INSTRUCTIONS



STEP 1

Clean the area thoroughly with rubbing alcohol or soap and water. Do not use Windex or similar products because it will leave a residue behind that will prevent the sticker from adhering well.

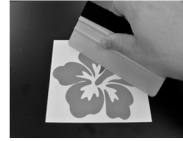

STEP 2

Prepare the sticker for application by firmly rubbing a squeegee or credit card across the clear transfer tape. This removes any air bubbles that may have formed and makes the sticker cling to the transfer tape.



STEP 3

Peel the white paper backing off the sticker. If the sticker clings to the backing, slowly replace the paper backing and repeat Step 2.



STEP 4

Slowly lower the sticker onto the surface and rub it in place firmly with a squeegee or credit card. For best results, wait 24 hours before moving to the next step.



STEP 5

Slowly peel the clear transfer tape off at an angle. Be careful not to pull the sticker off the surface. If sticker pulls away from the surface repeat Step 4.

The recommended temperature range for applying stickers is 60-80°F.

If applying a large, extra large, or windshield decal please follow the large sticker instructions at www.carstickers.com/instructions.php


WATCH THE INSTALLATION VIDEO
www.carstickers.com/sticker-application-instructions/

CARSTICKERS.COM APPLICATION INSTRUCTIONS



STEP 1

Clean the area thoroughly with rubbing alcohol or soap and water. Do not use Windex or similar products because it will leave a residue behind that will prevent the sticker from adhering well.

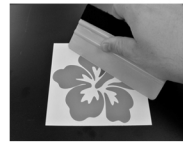

STEP 2

Prepare the sticker for application by firmly rubbing a squeegee or credit card across the clear transfer tape. This removes any air bubbles that may have formed and makes the sticker cling to the transfer tape.



STEP 3

Peel the white paper backing off the sticker. If the sticker clings to the backing, slowly replace the paper backing and repeat Step 2.



STEP 4

Slowly lower the sticker onto the surface and rub it in place firmly with a squeegee or credit card. For best results, wait 24 hours before moving to the next step.



STEP 5

Slowly peel the clear transfer tape off at an angle. Be careful not to pull the sticker off the surface. If sticker pulls away from the surface repeat Step 4.

The recommended temperature range for applying stickers is 60-80°F.

If applying a large, extra large, or windshield decal please follow the large sticker instructions at www.carstickers.com/instructions.php

WATCH THE INSTALLATION VIDEO
www.carstickers.com/sticker-application-instructions/