


POLY FOAM

Caulk Saver

Installation:

1. For best results, the caulk saver should be slightly larger in diameter than the width of the joint.
2. Cut the product to the length required and press it into the opening with your finger or a blunt tool.
3. Leave at least 1/4" clearance below the surface for the caulk.
4. Apply caulk, following manufacturer's directions.

Caution: Do not expose to open flame or use with hot-melt adhesives and sealants with temperatures over 200° F (93° C).

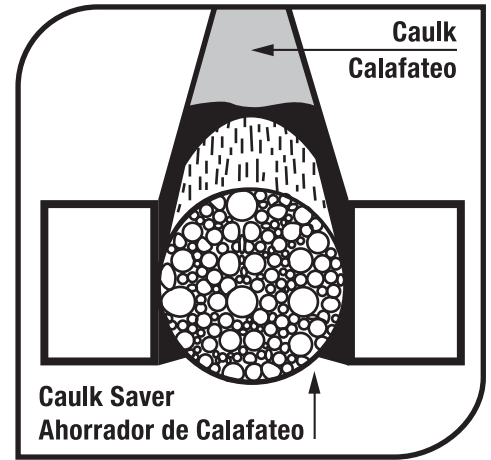



Ahorrador de calafateo de

ESPUMA DE POLIURETANO

Instalación:

1. Para mejor resultado, el ahorrador de calafateo debe tener un diámetro ligeramente mayor que el ancho de la abertura.
2. Corte el producto del largo necesario y presiónelo dentro de la abertura con su dedo o una herramienta sin punta.
3. Deje un espacio para el calafateo de por lo menos 6 mm bajo la superficie.
4. Aplique el calafateo, siguiendo las instrucciones del fabricante.

Precaución: No lo exponga a llamas abiertas o use con adhesivos o selladores calientes y fundidos con temperaturas mayores de 200° F (93° C).

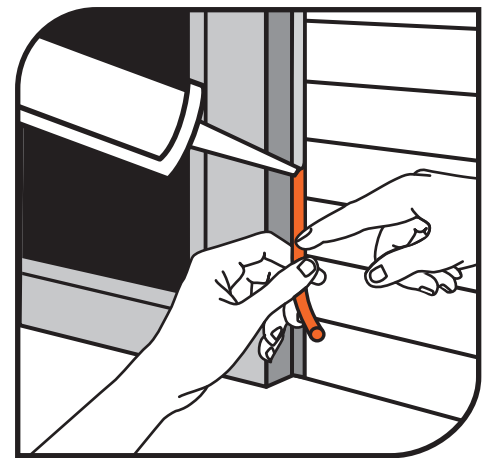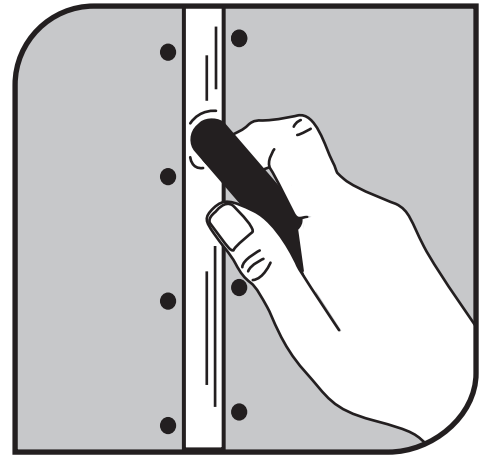

TOOLS NEEDED:
HERRAMIENTAS NECESARIAS:



Follow Us @FrostKing
or www.frostking.com



Thermwell Products Co., Inc.
Mahwah NJ 07430 | Sparks NV 89431

Need help or information
about any Frost King product?
Call **1-877-FROST 20**
3 7 6 7 8

For videos, instructions, hints and tips
visit www.frostking.com/instructions