
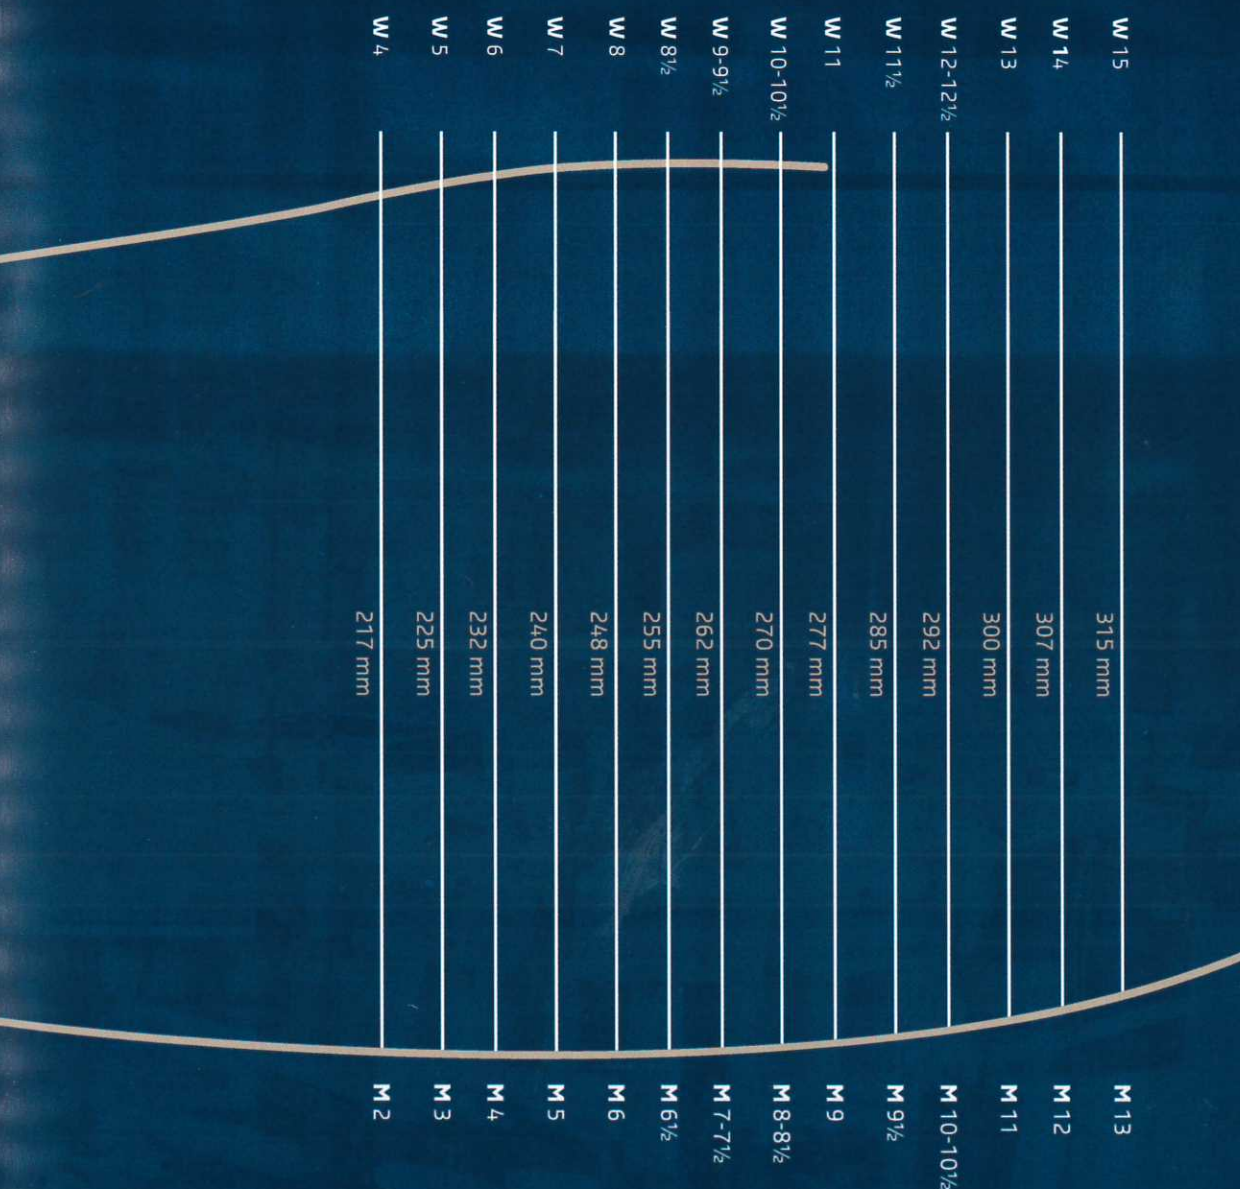


BATA INDUSTRIALS FITTING GUIDE

The foundation for a good fitting work shoe is the perfect shoe shape or 'last'. Yet, our research shows us that feet are getting wider with each generation. With that in mind Bata Industrials uses a 'last' design with extra space around the front and instep for greater stability and comfort. We also provide an extensive range of length sizes.

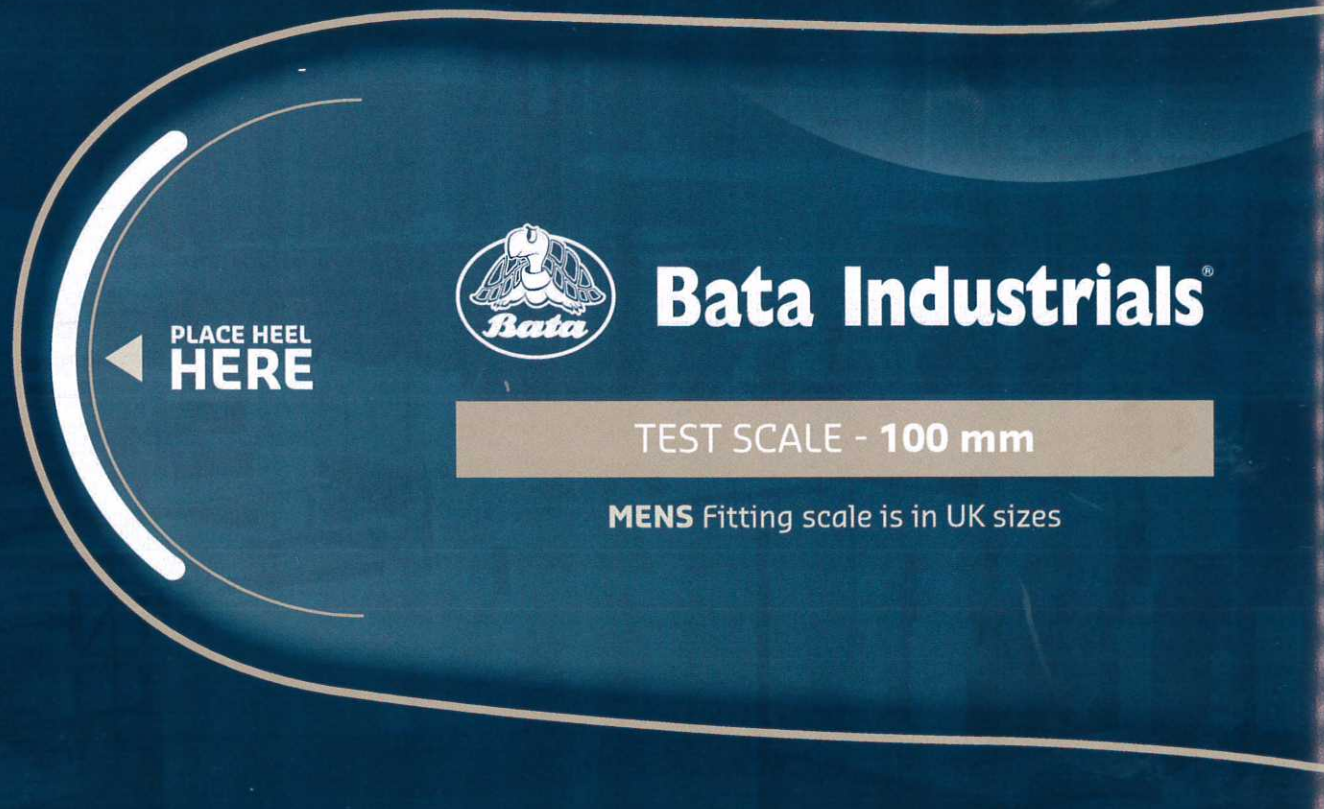

INSTRUCTIONS FOR USE:

To determine your correct size,

Place your heel on the chart where indicated and measure to the end of the longest toe. If the toe is between numbers, choose the larger size.

For sizes 7/7½, 8/8½ & 10/10½.

Select 7½, 8½ & 10½, for a wider fitting or sizes 7,8 or 10 for a standard fitting.

This Men's fitting chart is to be used as a guide, the printed scale may distort due to the fold in the catalogue. Please check the length of your foot in mm and use the scale to determine your UK / Australian size.

Mondo Point	217	225	232	240	247	255	262	270	277	285	292	300	307	317	322
European Sizes	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49
UK/Australian Male	2-2½	3-3½	4-4½	5-5½	6	6½	7-7½	8-8½	9	9½	10-10½	11-11½	12	13	14
UK/Australian Female	4-4½	5-5½	6-6½	7-7½	8	8½	9-9½	10-10½	11	11½	12-12½	13-13½	14	15	16
US Female	4-4½	5-5½	6-6½	7-7½	8	8½	9-9½	10-10½	11	11½	12-12½	13-13½	14	15	16
US Male	2	3	4	5	6	7	7½	8	9	10	11	12	13	14	15