

# LOAD RITE

## SALES BULLETIN

### NEW DROP JACK OPTIONS



6081.17 2000 lb Capacity  
*Domestic*



6081.18 2500 lb Capacity  
*Import*



#### **Overview:**

Load Rite has made available upgraded tongue jacks for optional installation at trailer assembly, or available separately for purchase as spare parts.

#### **Advantages:**

Greater capacities, quick setup, no need to swivel.

#### **Availability:**

Immediately.

#### **Details and pricing:**


See next page.

# LOADRITE


## SALES BULLETIN



6081.17 2000 lb Capacity

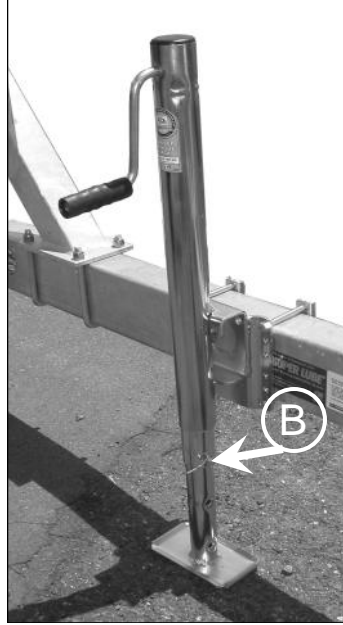

6081.18 2500 lb Capacity

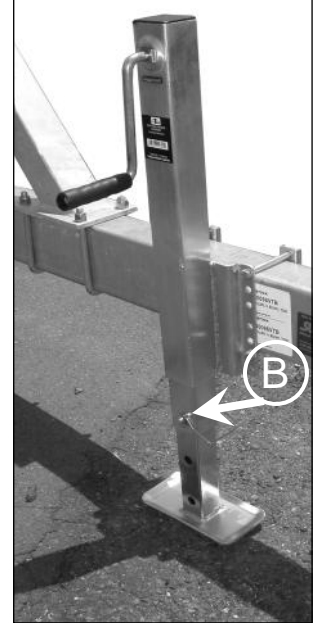

### How to Use:

1. With trailer on tow-ball, remove lock pin (A) and allow foot to fall to the ground.
2. Manually raise foot and reinstall pin (B) into first hole that lines up.
3. Crank handle until foot contacts ground.
4. Disconnect electrical connection and safety cables / chains.
5. Unlatch actuator / coupler from tow ball.
6. Crank jack handle to raise actuator / coupler off of tow ball.
7. To reinstall on tow ball reverse above steps.