


WORKSHOP DRAWING

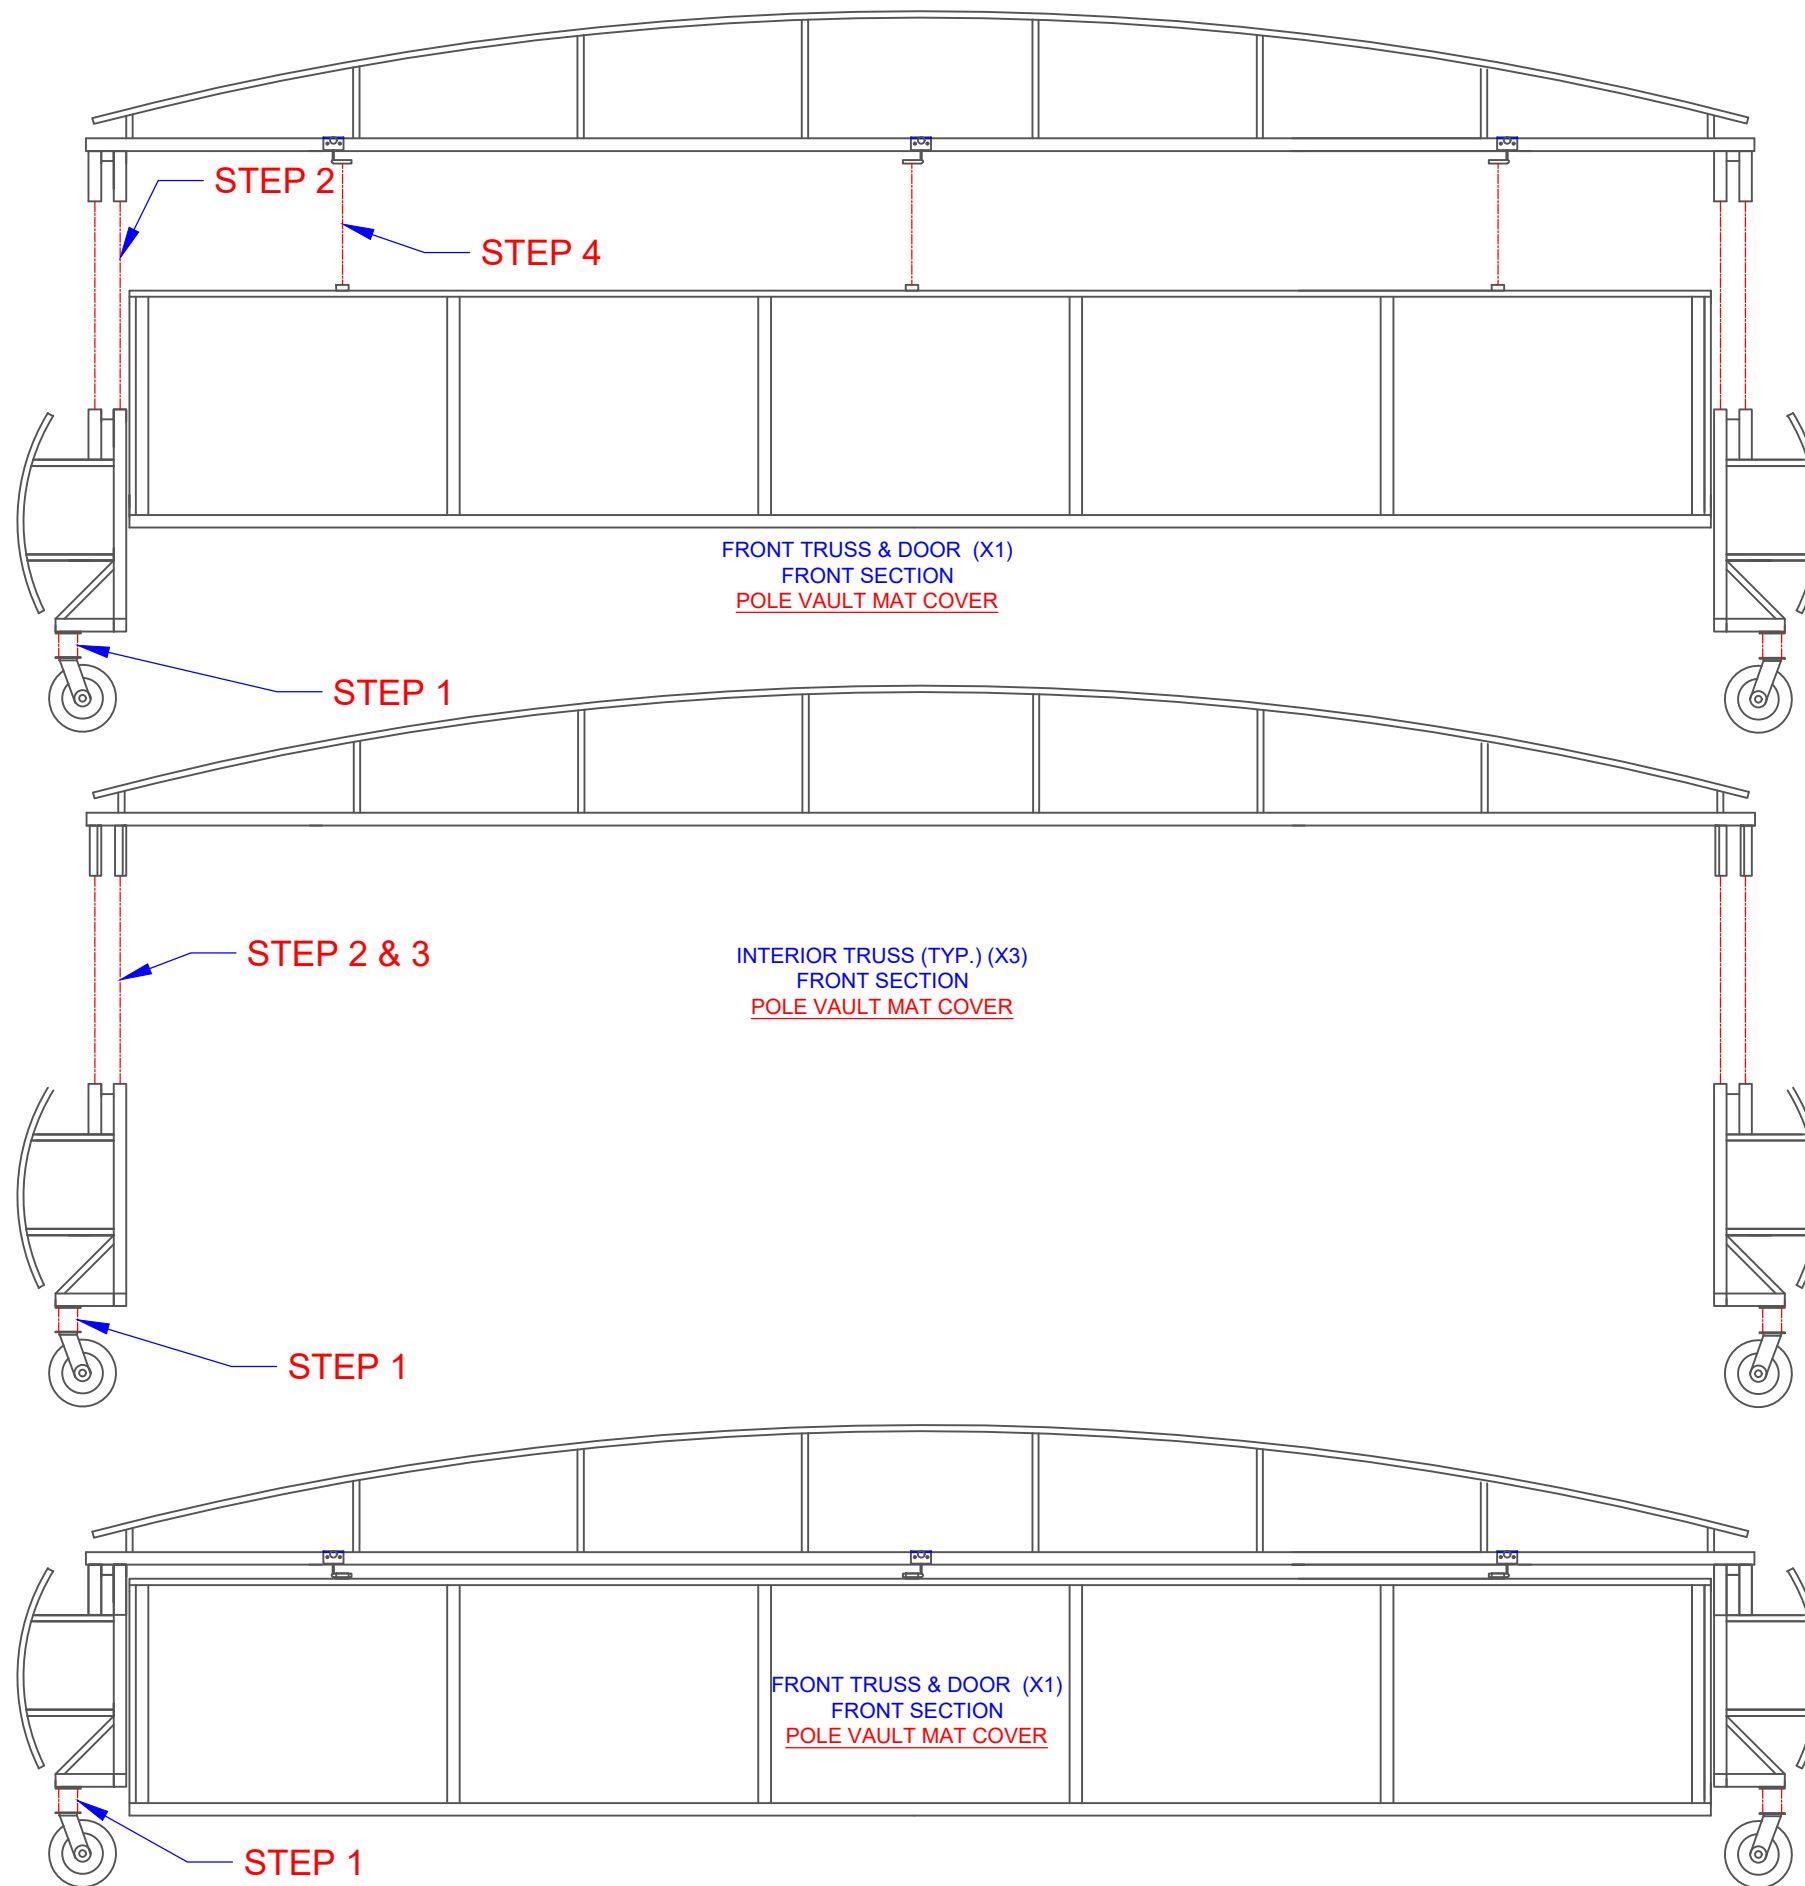

**ASSEMBLY INSTRUCTIONS**

**STEP 1:** Install castors (two fixed at rear and 2 swivel at front section) using 4 x M10 x 30 mm gal hex bolt and nyloc nut (each).

**STEP 2:** Insert front & rear trusses into Left & Right side rails

**STEP 3:** Insert inside frames into side rails (x 2 ea.)

**STEP 4:** Insert door rails between the front and first truss and hang door

**STEP 5:** Attach sheeting to the frames.

Refer sheeting info sheet for detailed information.

Please note that front, rear and door sheets are already attached to the frame. You are required to install roofing sheets only.

**NOTE:** All hardware supplied

**NOTE:**

TPV30 HAS TWO SEPARATE FRAMES. IDENTIFY ALL THE PARTS AS LISTED IN THE PACKING LIST BEFORE ASSEMBLING THEM TOGETHER.

TITLE: TPV30 - POLE VAULT MAT COVER  
ASSEMBLY INSTRUCTIONS 01

DATE: 13/03/2023

A3



Oz Ring Pty Ltd  
Trading as:  
Play Hard Sports Equipment  
ABN 79 066 094 559  
24 Ern Harley Drive  
Burleigh Heads Qld 4220  
Phone: (07) 5593 4494  
Fax: (07) 5593 4338  
Website: [www.playhardsports.com.au](http://www.playhardsports.com.au)  
Email: [email@playhardsports.com.au](mailto:email@playhardsports.com.au)