



Instructions




Cleaning the CD Cell Within Your Ozotech Product



Periodic cleaning of the CD cell within your Ozotech product is important and will keep your generator operating effectively and efficiently. Cleaning the cell can be done quickly ...in four easy steps.



1.

Disconnect the cell from the unit and pull the Tygon tubing from the cell itself.

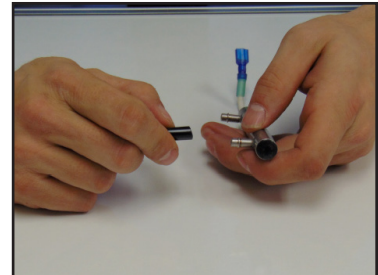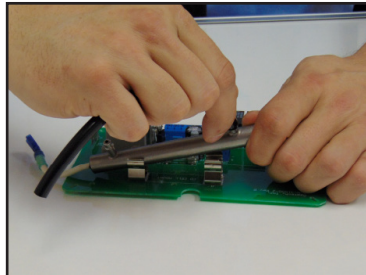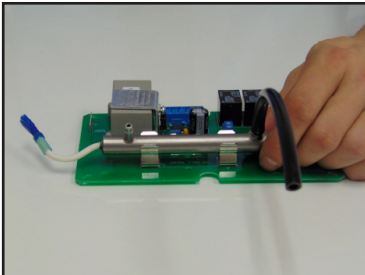


2.

Insert a piece of clear tubing at one end of the cell and place the open end in a cup of warm water. At the other end of the cell, insert a piece of eight-inch clear tubing fitted with the plastic syringe. Now we're ready to flush the cell.

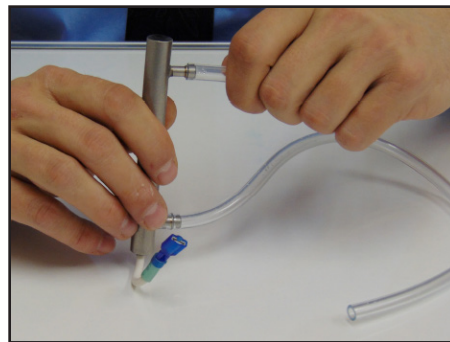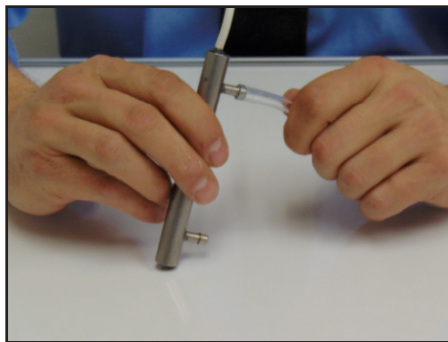


3.

Pull back the syringe to draw water into the cell and push in to flush water back out. You'll need to continue this process until the water in the cup is completely clear.

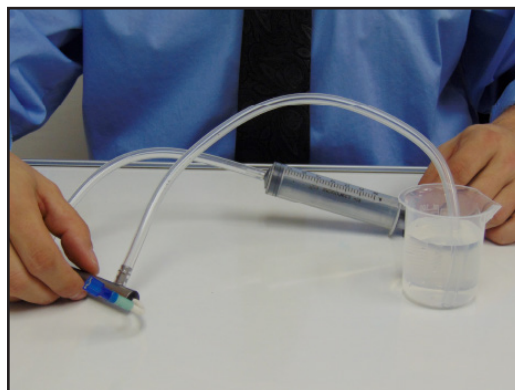


4.

Once the cell has been completely flushed and the water is clear, it's time to dry the cell. Use a compressed gas duster (or computer dust spray) by placing the nozzle into one of the barbs on the cell and depressing the trigger until the moisture is gone from the cell.

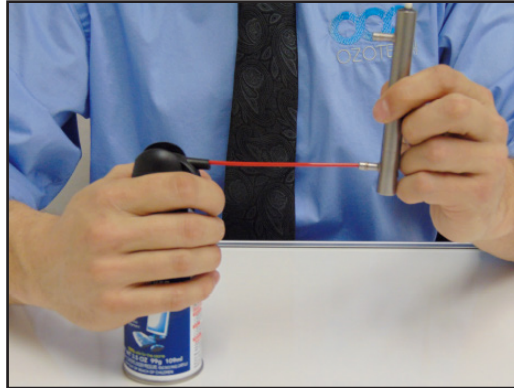

Now that the CD cell is clean, it can be reinstalled into your unit. Cleaning your CD cell can be completed in just four quick steps and will keep your unit at peak performance for years to come.

For questions or additional information, please visit ozotech.com or call 530.842.4189.

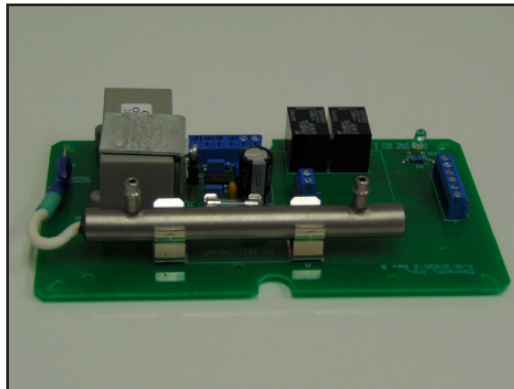



Maintenance Log

Date:	Cell Cleaned By/Comments:

Kit CD Cell Maintenance Reorder: #47044-1

