


User Manual 4" LED Retrofit Baffle Downlight


SKU: DL_BFDR4-11W




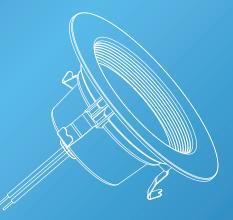

support@sunco.com (844) 334-9938

Retrofit Downlight

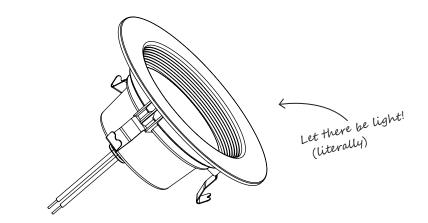

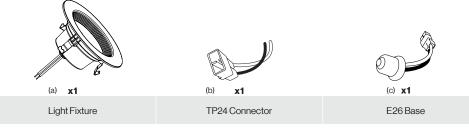

Safety Information

To reduce the risk of fire, electric shock, or physical injury:

- · Turn off circuit breaker before installing this fixture.
- This product should be installed by a person familiar with the construction and operation of the product the hazards involved. Safety eyeglasses and gloves are recommended.
- Abide by related regional and local laws or regulations.
- · Proper grounding is required to ensure safety.
- Do not alter, relocate, or remove wiring during installation.
- Do not make or alter any open holes in wiring enclosure or electrical components during installation.
- Check for shipping damage before installing. If the product is damaged, do not use it.
- · Keep fixture away from corrosive substances.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1.) This device may not cause harmful interference.

- Suitable for damp locations at temperature ranging from -4°F to 104°F. Not for use where directly exposed to water.
- Clean the fixture regularly to ensure proper operation. Do not clean with harsh solvents.
- Use safety precautions and abide by regional and local laws or regulations.
- · This product is not compatible with 3rd party sensors.
- · This product is not compatible with photo controls.
- · This product is not compatible with occupancy sensors.
- · This product is not compatible with timing devices.

WARNING:


Cancer & Reproductive Harm- www.P65Warnings.ca.gov

2.) This device must accept any interference that may cause undesired operation. Please review all instructions carefully prior to installation.


Quickstart Guide



Step 1 Turn off the power then locate the housing.

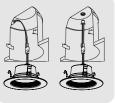

Step 2 Determine the type of connector available

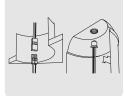


Step 3

Connect the adapter with

lamp base connector.

Step 4 Push downlight into can until secure.

Installation Guide

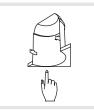


STEP 1

a. Turn off circuit breaker before installation.

b. Locate the housing.

c. Remove previous fixture. Fixture may be hot so allow time

to cool after turning off power.

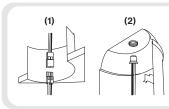


STEP 2

Determine the type of connector available.

(1) TP24 Connector

(2) E26 Base

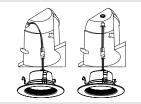

STEP 3

a. Connect the appropriate adapter with lamp base connector in the housing.

b. Tuck all wires into the can.

Note: The wires may come loose from the connectors. Ensure that they are attached securely.



STEP 4

a. Line trim ring with opening.

b. Push downlight into can until secure. Compression clips will hold retrofit in place.

c. Turn on circuit breaker to test light.

Recommended Dimmers

Scan for the full compatible dimmer list!

Brand	Model	
LUTRON	MACL-153M-WH	
LUTRON	DVCL-153P-WH	J
LUTRON	PD-6WCL-WH-P	
	AYCL-153P-WH	
LUTRON		T
LUTRON	P-PKG1WB-WH	
LUTRON	SCL-153P-WH	
Cloudy Bay	CBLD001WH	

Specifications

Voltage	120V	Average Lifetime	50000 Hours
Wattage	11W	Lumens	660 lm
Frequency	60Hz	Moisture Rating	Damp Rated
Beam Angle	90°	CRI	90+
Weight	0.29 lbs	Usage	Indoor
Housing Material	PC	IC Rated	NO
Dimmable	Yes	Warranty	7 Years


Common Troubleshooting

Feeling in the dark about an issue with your product? No worries! Our troubleshooting section is here to shed some light and provide you with easy-to-follow solutions for any problem.

If you still need some assistance, please feel free to contact us with any questions. Our team of lighting experts are happy to help brighten your day.

Installation				
Light isn't turning on.	Double check if fixture is properly connected and circuit breaker hasn't been tripped.			
Light unexpectedly fails.	For further assistance, reach out to customer support.			
Dimming Light not dimming to lowest setting.	Ensure minimum dimmer load requirement is met.			
Light not dimming smoothly.	Verify dimmer compatibility with fixture.			
Light not compatible with dimmer switch.	Check light-dimmer compatibility. Consider purchasing compatible switch if necessary.			
Light is flickering when turning on.	Check that fixture wiring connections are secure.			
Light flickering with other lights on the same circuit.	Check that the lights on the same circuit are not overloading the circuit.			
Light flickering when turned on.	Verify fixture compatibility and that it is grounded.			
Light flickering when dimmed.	Verify dimmer switch compatibility.			
Fixture buzzing with power outages.	Verify light is connected to surge protector securely.			
Fixture buzzing with appliances or electronic devices.	Look for nearby interferences that can cause buzzing. Such as televisions, radios, computers, etc.			
Fixture buzzing when dimmed.	Verify dimmer switch compatibility.			

Light Distribution Angle

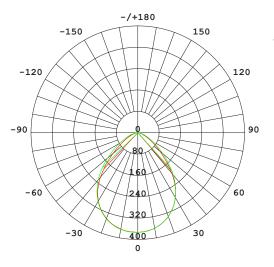

AVERAGE BEAM ANGLE (50%): 86°DEG

 C0/180	84.3°
 C90/270	87.6°

UNIT:cd Luminous Intensity Distribution 1

Lighting distribution angle refers to the spread of light emitted from a light source. It is an important factor to consider when selecting a fixture or bulb, as it affects the way it will illuminate an area. There are two main types of lighting distribution angles:

A symmetric lighting distribution emits light evenly in all directions, creating a cone-shaped pattern that provides a pool of light. This type of lighting is ideal for general lighting and illuminating large areas. Common applications for symmetric lighting include general area illumination, security lighting, and perimeter lighting. Symmetric lighting is also used to a certain degree in up-lighting. An asymmetric lighting distribution angle, also known as beam angle, creates a pattern that focuses light in a specific direction. This type of lighting is ideal for task lighting as it reduces glare and light spill in other areas. Common applications include task lighting in spaces such as landscape settings, retail stores, museums, and much more.

It is important to note that the lighting distribution angle can also be affected by other factors such as the reflector design of the light source, the type of lens used, and the distance between the light source and the surface being illuminated.



support@sunco.com (844) 334-9938

REV1.0